


Rear defogger relay circuit

WIRING DIAGRAM

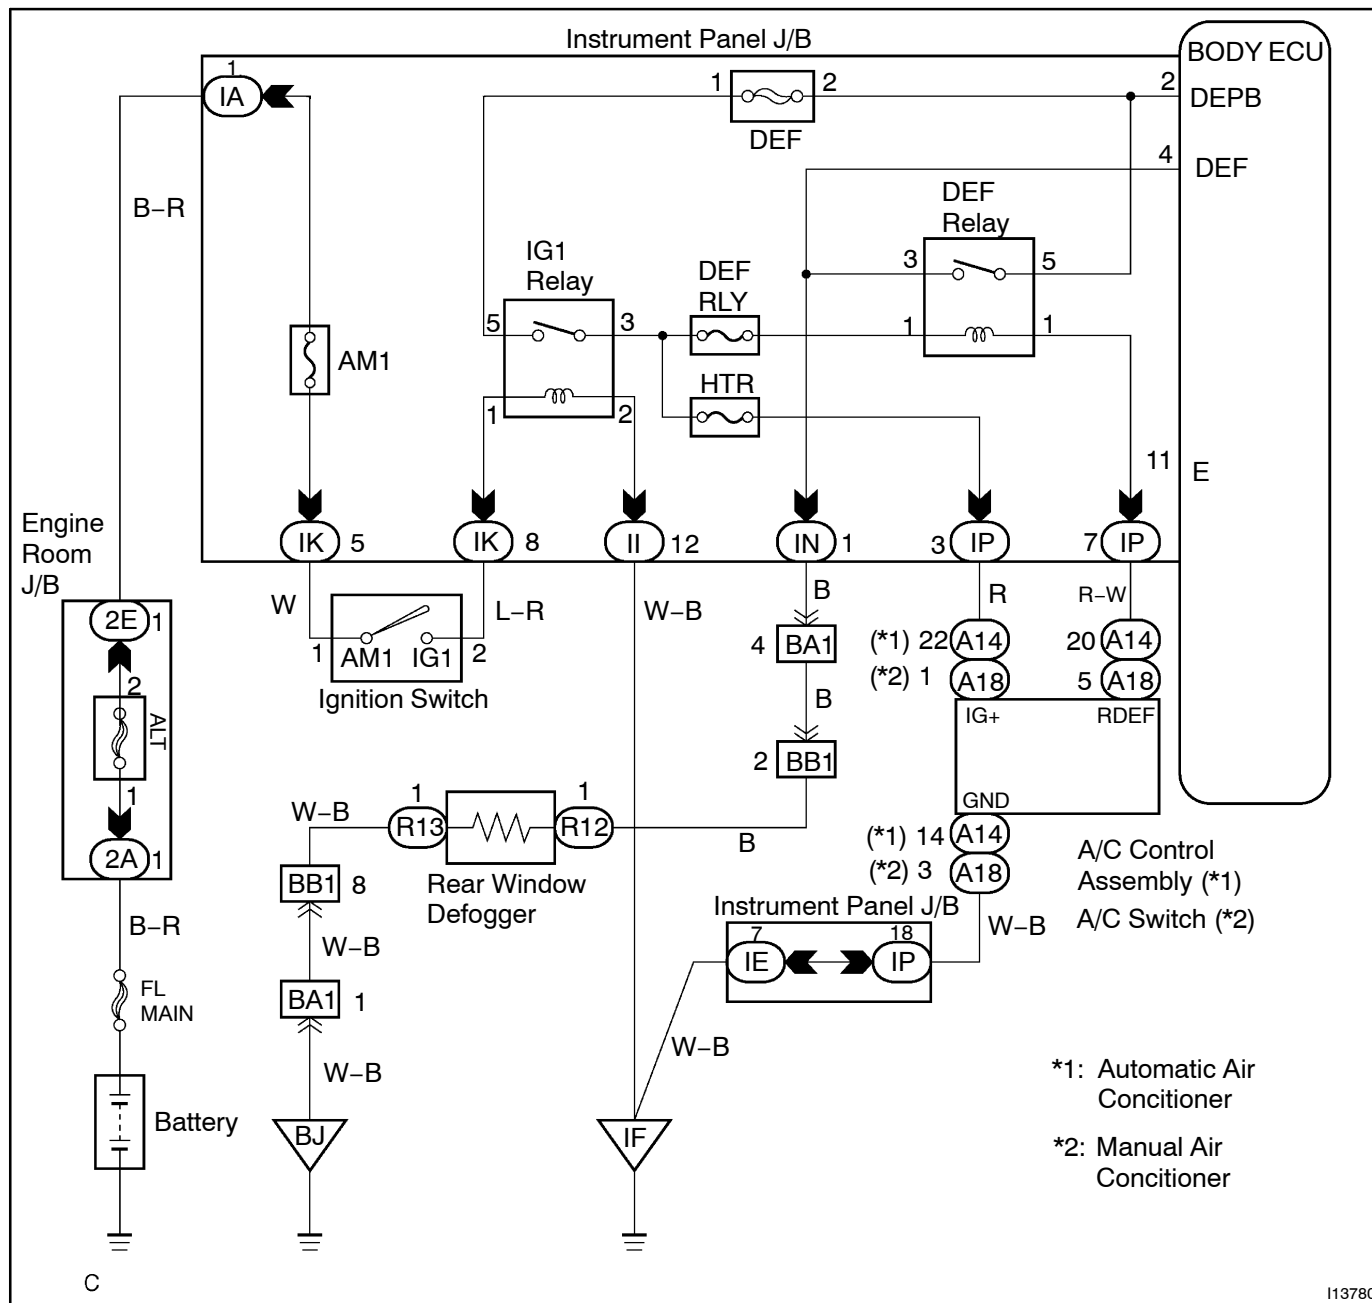

I13780

INSPECTION PROCEDURE

- | | |
|---|---|
| 1 | Check rear defogger relay (See page BE-59). |
|---|---|

NG

Replace the rear defogger relay.

OK

- | | |
|---|---|
| 2 | Check wireharness and connector between rear defogger relay and body ECU, front defogger relay and body ECU. (See page IN-30) |
|---|---|

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-355).
