


Fuel Sender gauge circuit

CIRCUIT DESCRIPTION

This circuit detects sensor signals from the fuel sender gauge.

WIRING DIAGRAM

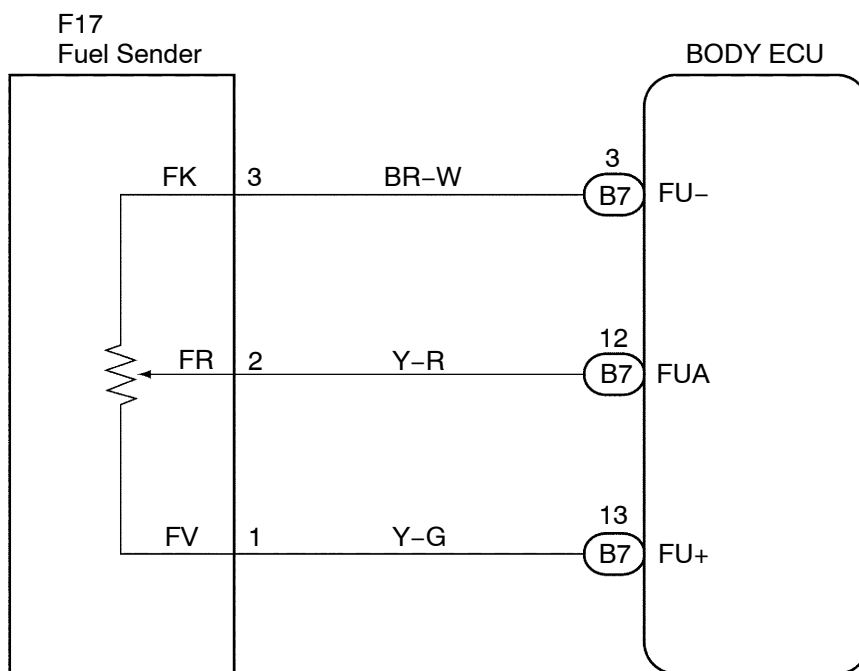

C

I13774

INSPECTION PROCEDURE

1 Check fuel sender gauge ([See page BE-52](#)).

NG

Replace the fuel sender gauge.

OK

2 Check wireharness and connector between fuel sender gauge and Body ECU.
([See page IN-30](#))

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on
problem symptoms table
([See page DI-355](#)).