


Parking brake switch circuit

CIRCUIT DESCRIPTION

This circuit detects the state of the parking brake switch.

WIRING DIAGRAM

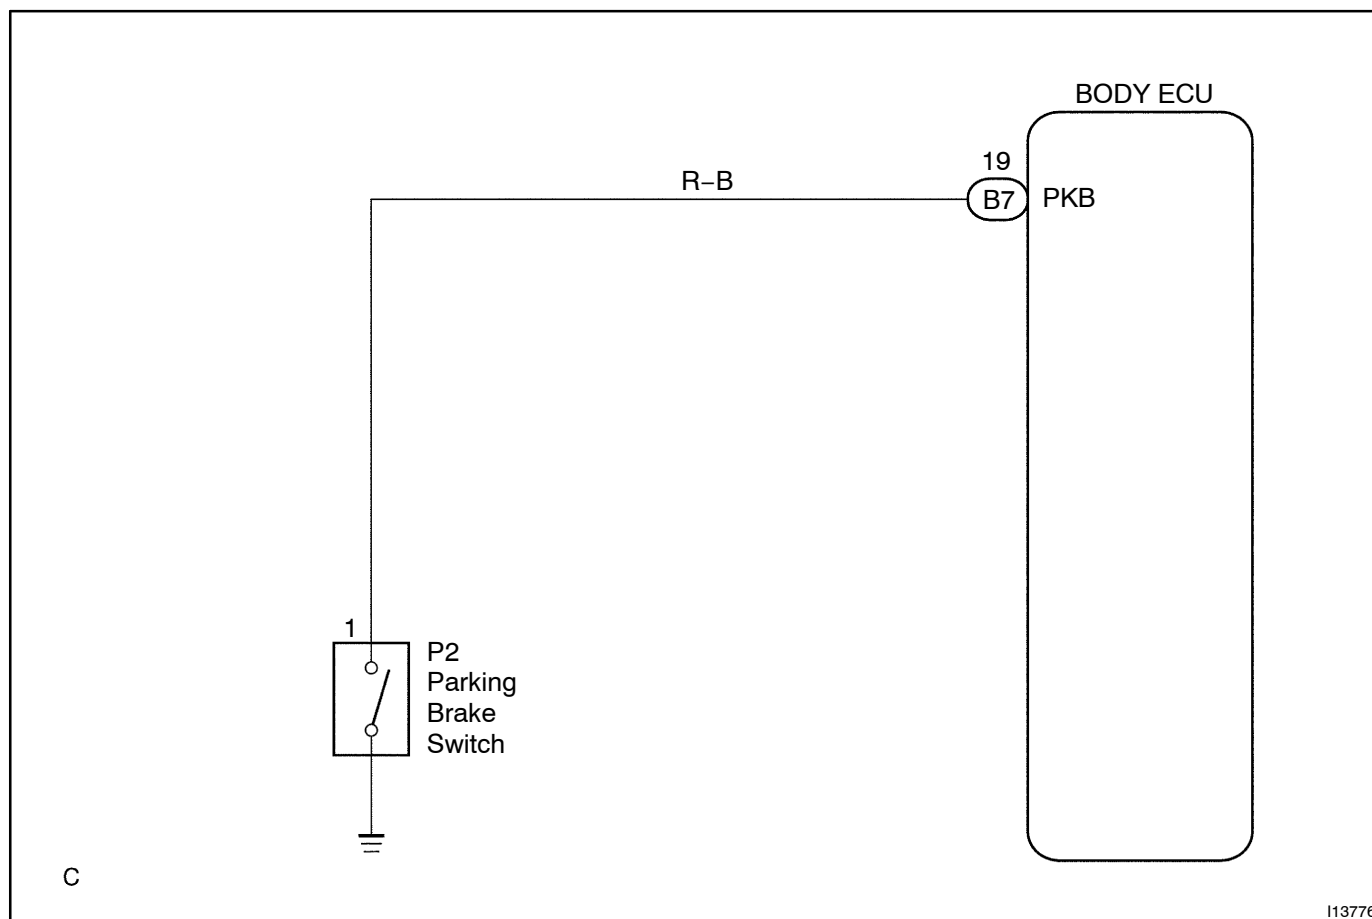

INSPECTION PROCEDURE

1 Check parking brake switch ([See page BE-52](#)).

NG

Replace the parking brake switch.

OK

2 Check wireharness and connector between parking brake switch and Body ECU ([See page IN-30](#)).

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-355](#)).