


O/D main switch circuit

CIRCUIT DESCRIPTION

Body ECU detect the state O/D main switch.

WIRING DIAGRAM

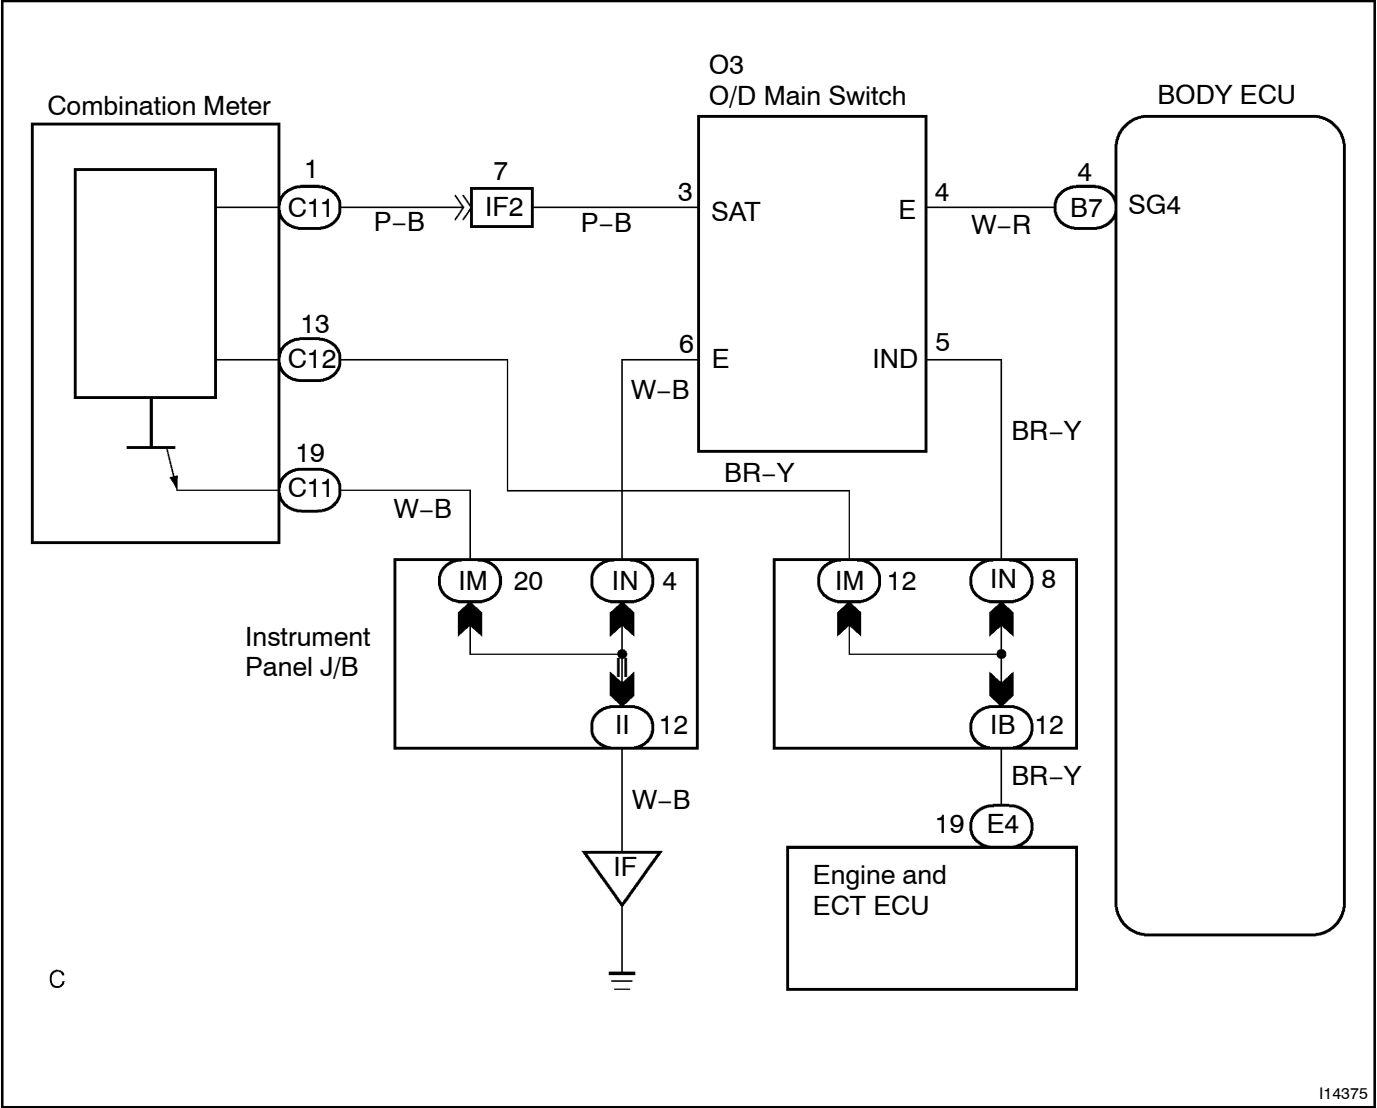

INSPECTION PROCEDURE

- | | |
|---|---|
| 1 | Check O/D main switch (See page DI-52). |
|---|---|

NG

Replace the O/D main switch.

OK

- | | |
|---|--|
| 2 | Check wireharness and connector between O/D main switch and body ECU (See page IN-30). |
|---|--|

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-355](#)).