


Multiplex communication circuit

CIRCUIT DESCRIPTION

Signals are transmitted between the ECM and combination meter through the communication circuit.

WIRING DIAGRAM

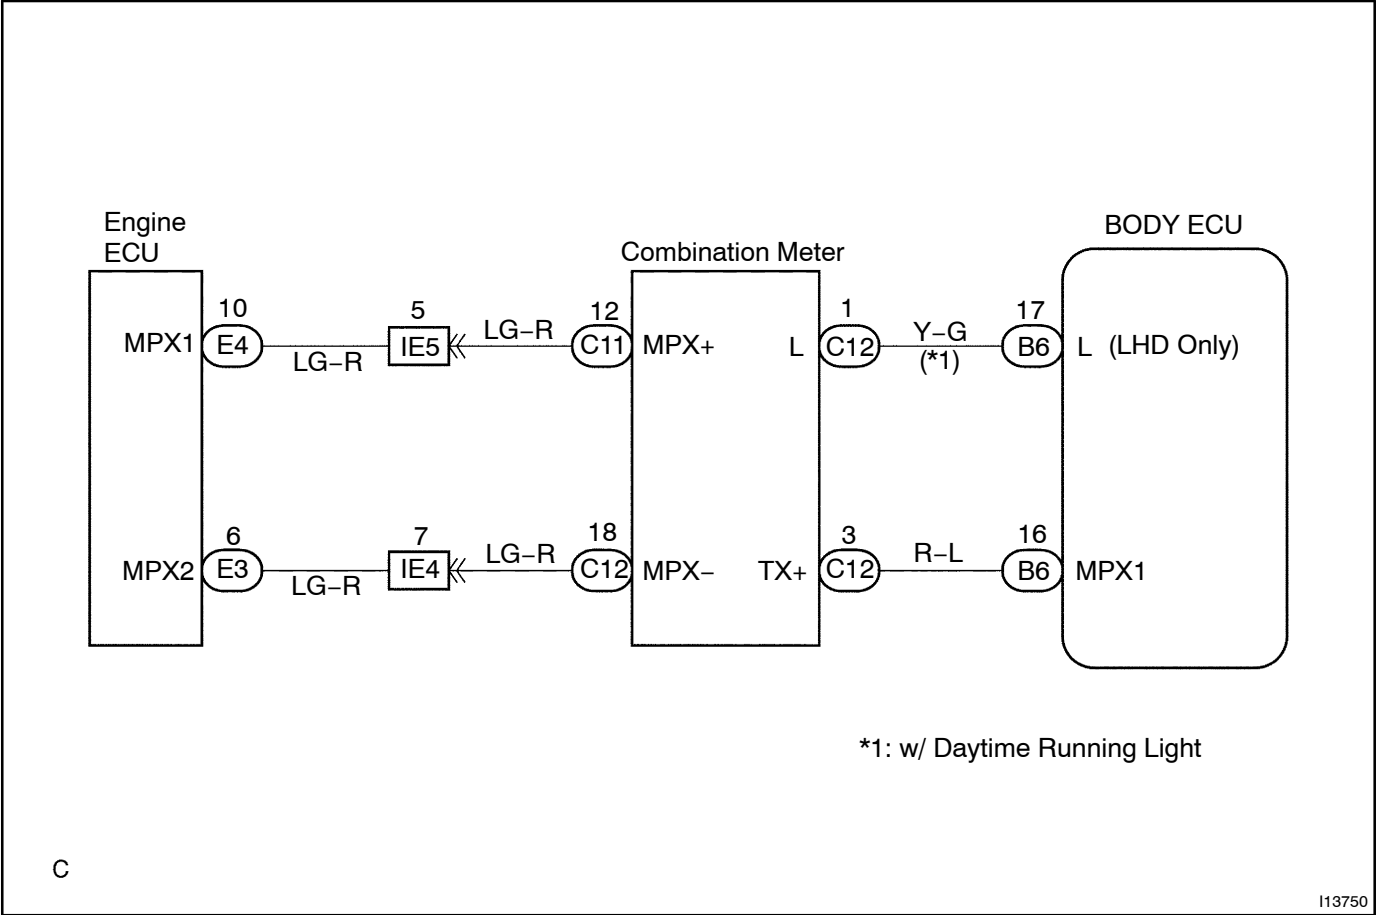

INSPECTION PROCEDURE

1 Check engine and ECT ECU.

NG

Replace the engine and ECT ECU.

OK

2 Check combination meter ([See page BE-52](#)).

NG

Replace the combination meter.

OK

3 Check wireharness and connector between combination meter and body ECU, engine and ECT ECU and combination meter ([See page IN-30](#)).

NG

Repair or replace wireharness or connector.

OK

Replace the body ECU.