


Blower Motor Circuit

CIRCUIT DESCRIPTION

This is the power source for the blower motor.


WIRING DIAGRAM

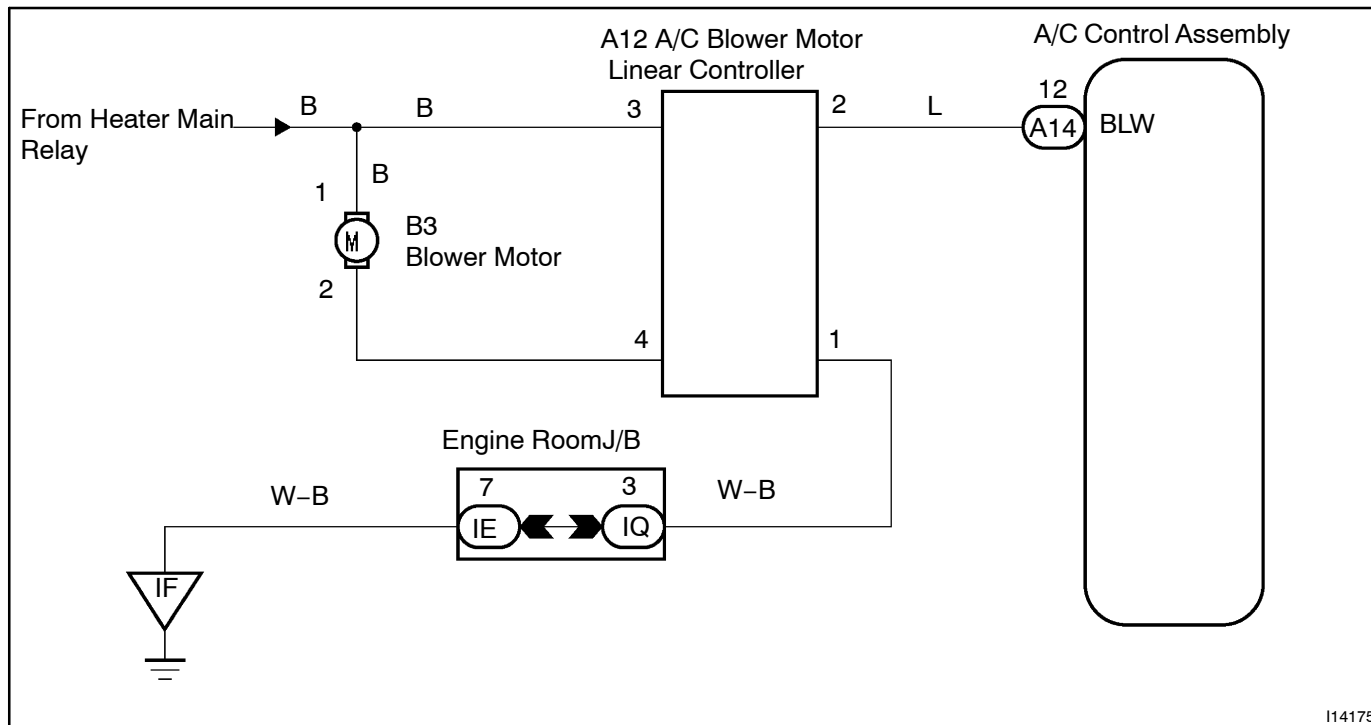

I14175

INSPECTION PROCEDURE

1 Check blower motor.

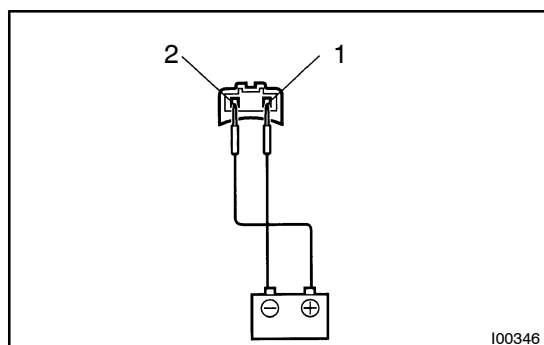

I00346

PREPARATION:

Remove blower motor ([See page AC-51](#)).

CHECK:

Connect positive (+) lead connected to terminal 2 of blower motor connector, negative (-) lead to terminal 1.

OK:

Blower motor operates smoothly.

NG

Replace blower motor.

OK

CELICA (RM734E)

- | | |
|---|--|
| 2 | Check harness and connector between battery and blower motor (See page IN-30). |
|---|--|

NG

Repair or replace harness or connector.

OK

- | | |
|---|---|
| 3 | Check harness and connector between blower motor and blower motor linear controller, blower motor linear controller and body ground (See page IN-30). |
|---|---|

NG

Repair or replace harness or connector.

OK

- | | |
|---|---|
| 4 | Check harness and connector between blower motor linear controller and A/C control assembly (See page IN-30). |
|---|---|

NG

Repair or replace harness or connector.

OK

Check and replace A/C control assembly or blower motor linear controller ([See page IN-30](#)).