



VEHICLE LIFT AND SUPPORT LOCATIONS

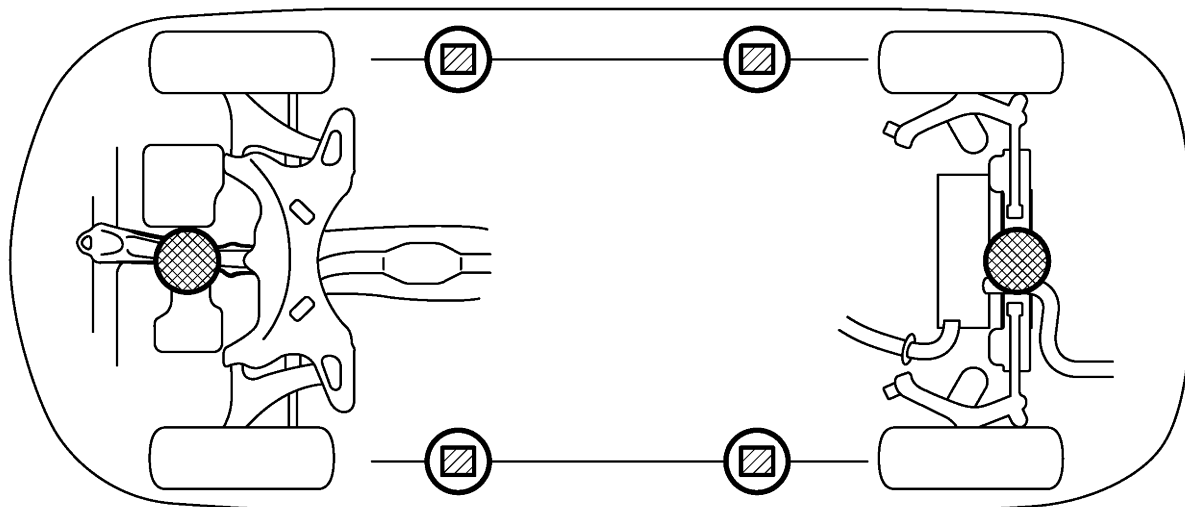

← Front

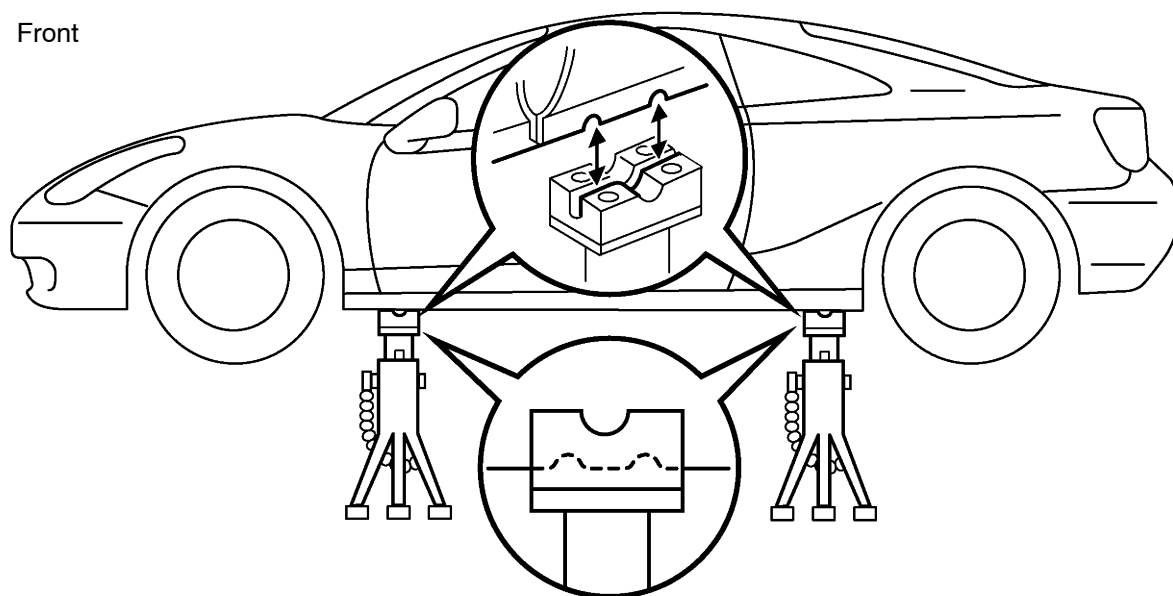

JACK POSITION

Front Front crossmember

Rear..... Rear axle beam


CAUTION : When jacking-up the rear and front, make sure the vehicle is not carrying any extra weight.

PANTOGRAPH JACK POSITION

SUPPORT POSITION

Safety stand and swing arm type lift

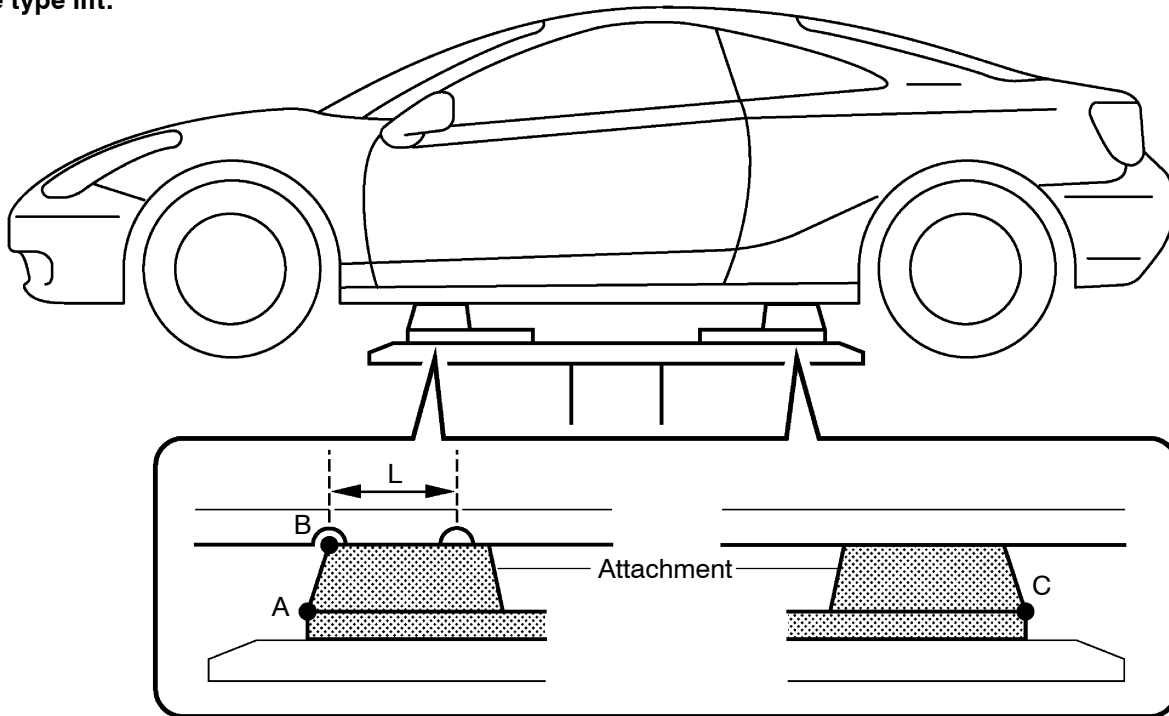

Plate type lift:**HINT :**


Left and right set position

Front and rear set position

Place the vehicle over the center of the lift.

- Align the cushion gum ends of the plate with the attachment lower ends (A, C).
- Align the attachment upper end (B) with the front jack supporting point (L).

Attachment dimensions

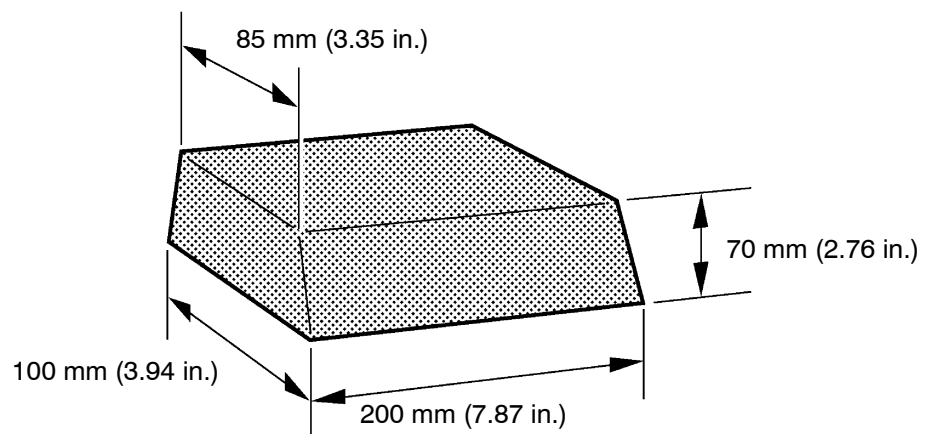

N

B02926