

INSTALLATION

Installation is in the reverse order of removal ([See page MX-4](#)).

HINT:

After installation, check and inspect items as follows.

- Bleed power steering system ([See page SR-4](#)).
- Front wheel alignment ([See page SA-4](#)).
- Do the road test.