

INSPECTION

1. INSPECT REVERSE SHIFT WARNING BUZZER SYSTEM ([See page BE-52](#))
2. INSPECT BACK-UP LIGHT SWITCH CONTINUITY ([See page BE-33](#))