 
 
 
 
 
 
 
 
 
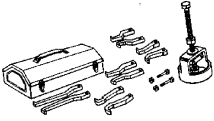 
 
 
 
 
 
 
 


MANUAL TRANSAXLE (C60)

 
 
 
 
 
 
 
 
 
 
PP2E2-01

 
 
 
SST (Special Service Tools)

	09223-50010	Crankshaft Front oil Seal Replacer	Output shaft front bearing inner race
	09226-10010	Crankshaft Front & Rear Bearing Replacer	Transmission case oil seal
	09308-00010	Oil Seal Puller	Output shaft front bearing
	09316-60011	Transmission & Transfer Bearing Replacer	Differential tapered roller bearing
	(09316-00011)	Replacer Pipe	
	09325-12010	Transmission Oil Plug	Input shaft rear radial ball bearing 6th driven gear
	09350-32014	TOYOTA Automatic Transmission Tool Set	Differential case tapered roller bearing
	(09351-32120)	Overdrive Bearing Replacer	
	(09351-32140)	Oil Seal Replacer	
	09517-12010	Rear Axle Shaft Oil Seal Replacer	Output shaft rear radial ball bearing Input shaft rear radial ball bearing
	09564-32011	Differential Preload Adaptor	
	09608-00071	Drive Pinion Rear Bearing Cone Replacer	Input shaft center radial ball bearing 4th driven gear and center radial ball bearing

	09612-22011	Tilt Handle Bearing Replacer	No. 3 clutch hub assembly 5th driven gear
	09612-65014	Steering Worm Bearing Puller	Input shaft front bearing Differential tapered roller bearing outer race
	09710-28021	Front Suspension Bushing Tool Set	Transaxle case oil seal
	(09710-08041)	Bushing Replacer	
	09950-00020	Bearing Remover	
	09950-00030	Bearing Remover Attachment	
	09950-30011	Puller A Set	
	(09951-03010)	Upper Plate	
	(09953-03010)	Center Bolt	
	(09954-03010)	Arm	
	(09955-03021)	Claw No.2	
	09950-40011	Puller B Set	
	(09951-04010)	Hanger 150	

PREPARATION - MANUAL TRANSAXLE

	(09952-04010) Slide Arm	
	(09953-04020) Center Bolt 150	
	(09953-04030) Center Bolt 200	
	(09954-04010) Arm 25	
	(09955-04021) Claw No.2	
	(09955-04061) Claw No.6	
	(09957-04010) Attachment	
	(09958-04011) Holder	
	09950-50012 Puller C Set	No. 3 clutch hub assembly
	(09954-05030) Claw No.3	
	09950-60010 Replacer Set	
	(09951-00180) Replacer 18	Transmission case bushing
	(09951-00350) Replacer 35	Differential tapered roller bearing

	(09951-00360) Replacer 36	Input shaft front oil seal
	(09951-00400) Replacer 40	Input shaft front bearing
	(09951-00560) Replacer 56	Output shaft front bearing
	09950-60020 Replacer Set No.2	
	(09951-00680) Replacer 68	Differential tapered roller bearing outer race (Transaxle case side)
	(09951-00710) Replacer 71	Differential tapered roller bearing outer race (transmission case side)
	09950-70010 Handle Set	
	(09951-07100) Handle 100	
	(09951-07150) Handle 150	