


REMOVAL

NOTICE:

- If the wiring connector of the SRS is disconnected and the ignition switch is in ON position, DTCs will be recorded.
- Never use the airbag parts from another vehicle. When replacing parts, replace them with new parts.

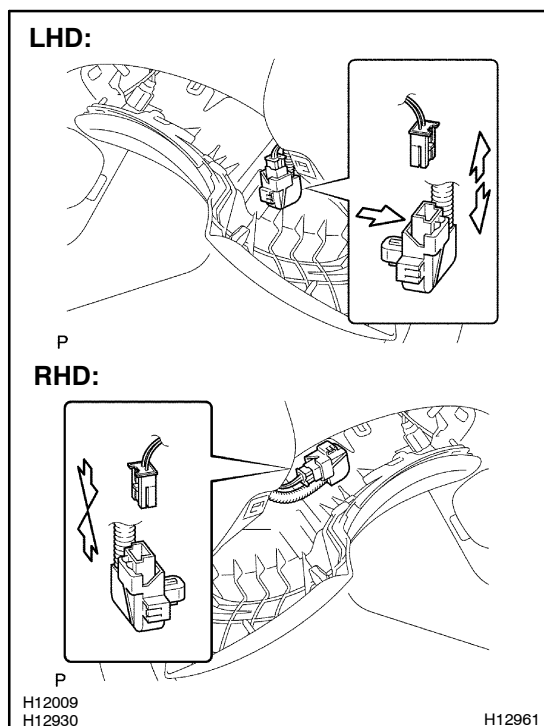


1. DISCONNECT AIRBAG CONNECTOR

- Remove the 3 screws, 2 bolts and lower finish panel.
- Remove the connector cover from the lower finish panel.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

- Disconnect the airbag connector.

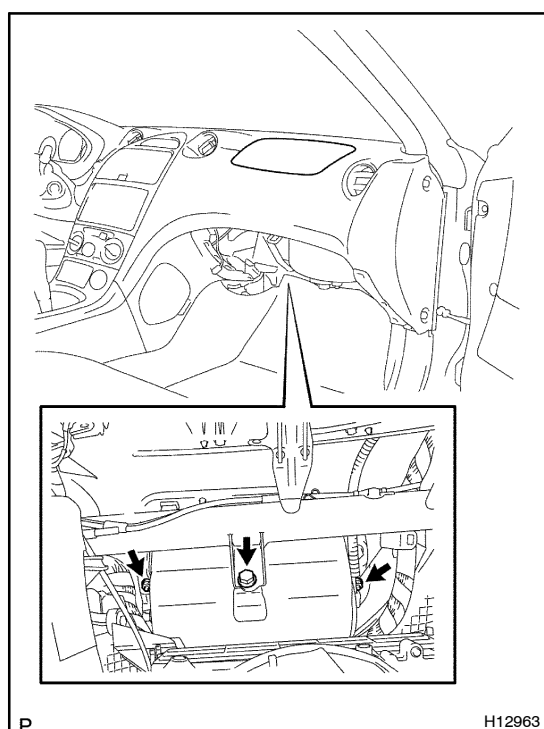

2. REMOVE FRONT PASSENGER AIRBAG ASSEMBLY

Remove the bolt and 2 nuts.

CAUTION:

- Do not store the front passenger airbag assembly with the airbag deployment side facing downward.
- Never disassemble the front passenger airbag assembly.

NOTICE:

When removing the front passenger airbag assembly, take care not to damage the wire harness.