


INSTALLATION

NOTICE:

Never use airbag parts from another vehicle. When replacing parts, replace them with new parts.

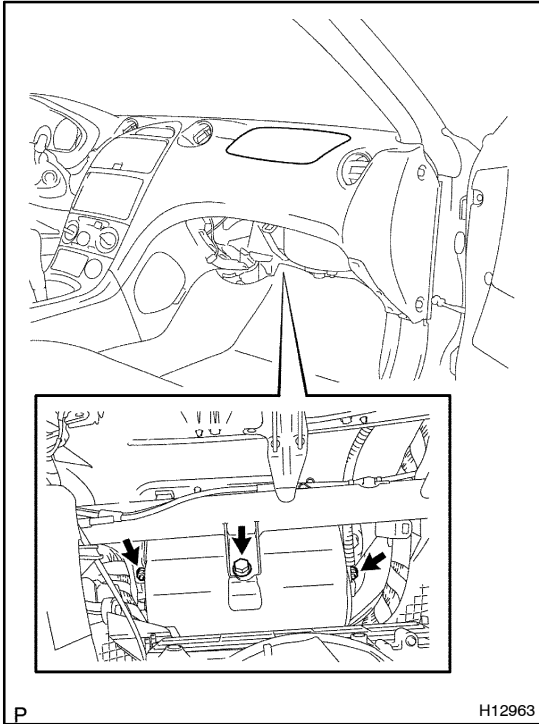

1. INSTALL FRONT PASSENGER AIRBAG ASSEMBLY

- Install the front passenger airbag assembly with the 2 nuts.
- Install the bolt.
Torque: 20 N·m (205 kgf·cm, 15 ft·lbf)


CAUTION:

- When installing the front passenger airbag assembly, take care that the wiring does not interfere with other parts and is not pinched between other parts.
- Make sure that no foreign objects are trapped between the airbag bag and within the module.

NOTICE:

If the front passenger airbag assembly has been dropped, or there are cracks, dents or other defects in the case or connector, replace the front passenger airbag assembly with a new one.

- Install the airbag wire harness clamp.

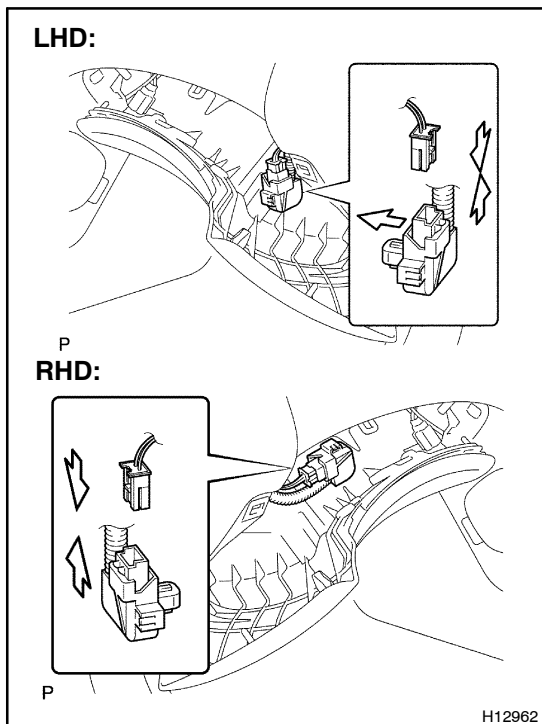

2. CONNECT AIRBAG CONNECTOR

- Connect the airbag connector.
- Install the connector cover to the lower finish panel.
- Install the lower finish panel with the 3 screws and 2 bolts.