


REMOVAL

NOTICE:

- If the wiring connector of the SRS is disconnected and the ignition switch is at ON position, DTCs will be recorded.
- Never use the airbag parts from another vehicle. When replacing parts, replace them with new parts.

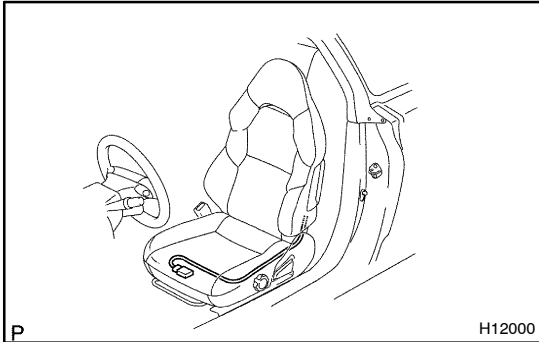


1. REMOVE FRONT SEAT

- (a) Remove the 2 seat track covers and 4 bolts.
- (b) Disconnect the side airbag connector.


NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

- (c) Remove the front seat.
- ### 2. REMOVE RECLINING ADJUSTER RELEASE HANDLE
- ### 3. REMOVE RECLINING ADJUSTER KNOB

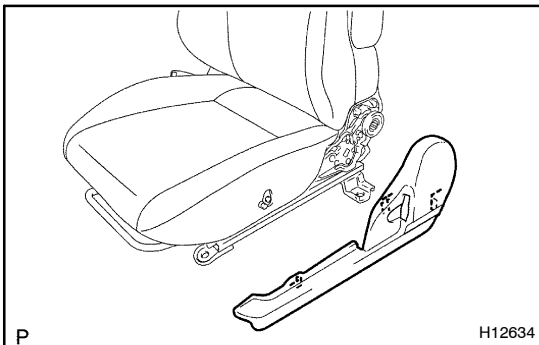

4. REMOVE FRONT SEAT CUSHION SHIELD

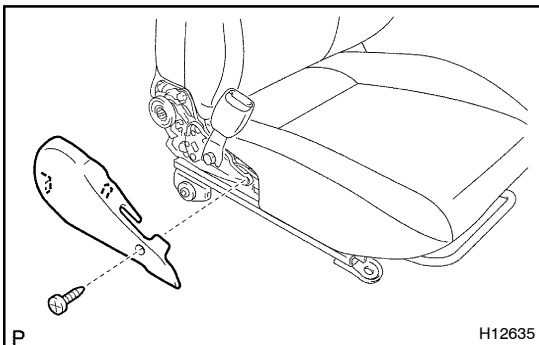

5. REMOVE INNER FRONT SEAT CUSHION SHIELD


Remove the screw and inner front seat cushion shield

6. REMOVE SEAT CUSHION ASSEMBLY


- (a) Remove the wire harness from the seat cushion assembly.

NOTICE:


When handling the airbag wire harness, take care not to damage the airbag wire harness.

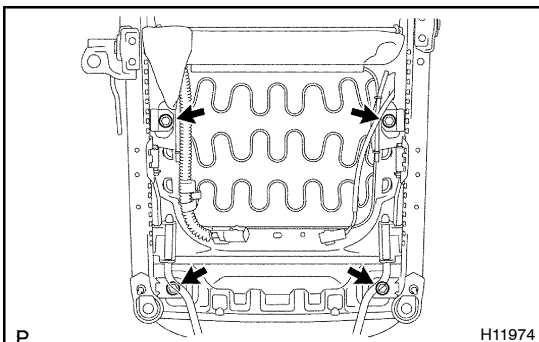

- (b) Remove the 4 bolts and seat cushion assembly.

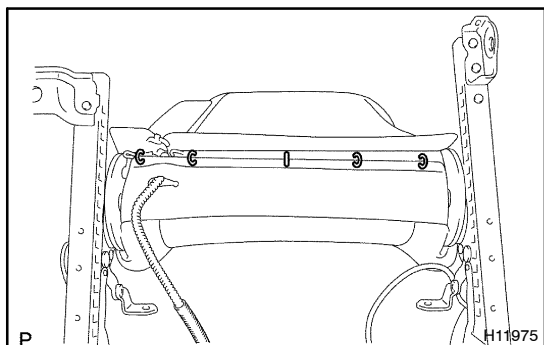**7. REMOVE SEATBACK ASSEMBLY**

- (a) Remove the hog rings of the seatback frame, as shown in the illustration.

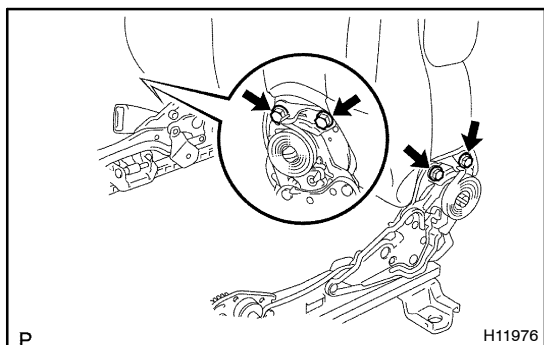

- (b) Remove the 4 bolts and seatback assembly.

CAUTION:

Do not store the seatback assembly with the airbag deployment side facing downward.