


## INSTALLATION

### NOTICE:


Never use airbag parts from another vehicle. When replacing parts, replace them with new parts.

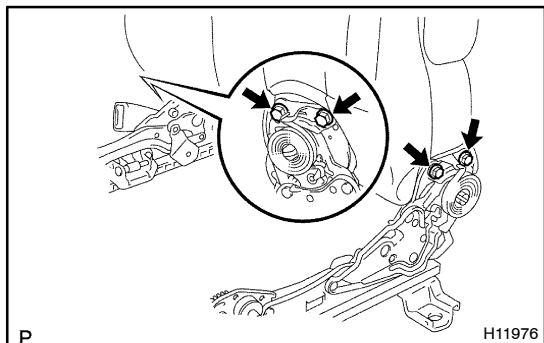

### 1. INSTALL SEATBACK ASSEMBLY

- (a) Install the seatback assembly to the seat adjuster with the 4 bolts.


**Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)**

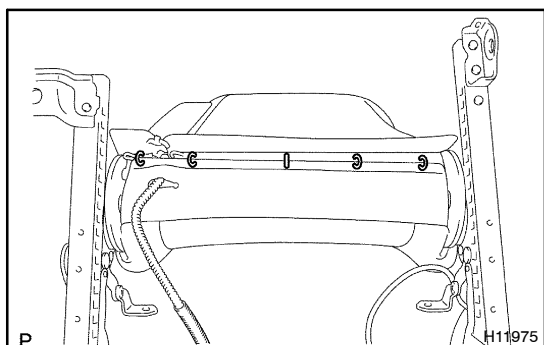

- (b) Install 5 new hog rings.

### HINT:


When installing the hog rings, take care to prevent wrinkles as little as possible.

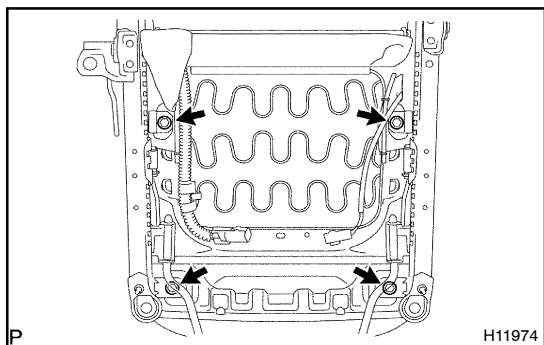


### 2. INSTALL SEAT CUSHION ASSEMBLY

- (a) Install the seat cushion assembly with the 4 bolts.

**Torque: 21 N·m (210 kgf·cm, 15 ft·lbf)**

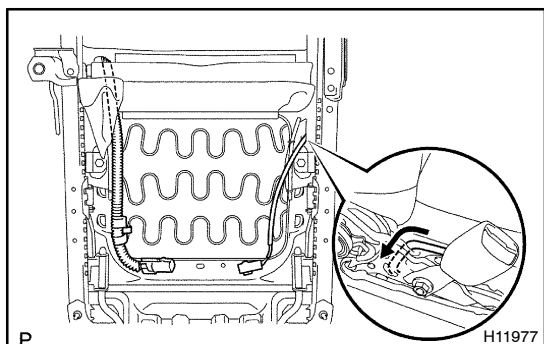


- (b) Install the wire harness to the seat cushion assembly.

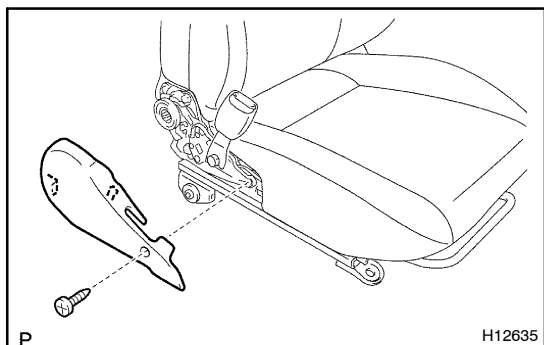

### 3. INSTALL INNER FRONT SEAT CUSHION SHIELD

Install the inner front seat cushion shield with the screw.

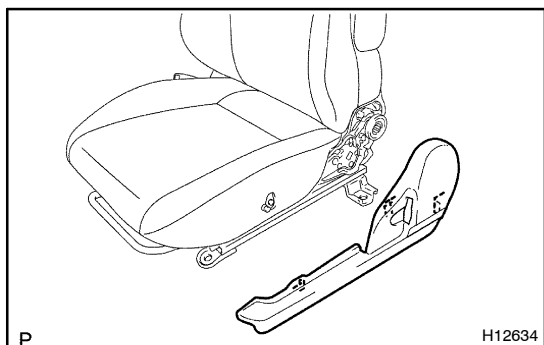

### 4. INSTALL FRONT SEAT CUSHION SHIELD

### 5. INSTALL RECLINING ADJUSTER KNOB

### 6. INSTALL RECLINING ADJUSTER RELEASE HANDLE

### 7. INSTALL FRONT SEAT

#### NOTICE:

**When mounting the seat to the vehicle, take care not to damage the airbag wire harness.**

- (a) Connect the side airbag connector.
- (b) Slide the front seat to the most front position.

#### NOTICE:

**Make sure that seat adjuster locks.**

- (c) Without holding the seat track handle, mount the seat to the vehicle.

#### HINT:

If holding the seat track handle, the adjusted rearmost position slip off.

- (d) Tighten the bolts on the front side temporarily, from the bolt on the inner side tighten them completely.

**Torque: 37 N·m (375 kgf·cm, 27 ft·lbf)**

- (e) Slide the seat to the most front position to install the bolts on the rear side.

**Torque: 37 N·m (375 kgf·cm, 27 ft·lbf)**

- (f) Install the 2 seat track covers.