


INSTALLATION

NOTICE:

- Never use SRS parts from another vehicle. When replacing parts, replace them with new parts.
- Never reuse the airbag sensor assembly involved in a collision when the airbag has deployed.
- Never repair a sensor in order to reuse it.

HINT:

For step 2 to 9, refer to [page BO-86](#).

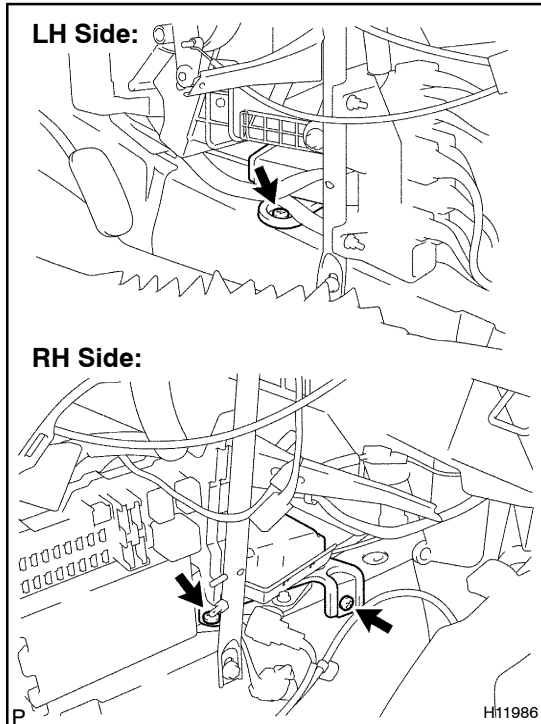

1. INSTALL AIRBAG SENSOR ASSEMBLY

- (a) Using a torx wrench, install the airbag sensor assembly with the 3 screws.

Torx wrench: T40 (Part No.09042-00020 or locally manufactured tool)

Torque: 20 N·m (205 kgf·cm, 15 ft·lbf)

- (b) Connect the airbag sensor connectors.

NOTICE:

- Connection of the connector is done after the sensor assembly has been installed.
- Make sure the sensor assembly is installed with the specified torque.
- If the sensor assembly has been dropped, or there are cracks, dents or other defects in the case, bracket or connector, replace the sensor assembly with a new one.
- When installing the sensor assembly, take care that the SRS wiring does not interfere with other parts and is not pinched between other parts.
- After installing, shake the sensor assembly to check that there is no looseness.

2. INSTALL END FINISH PANEL RH

3. INSTALL END FINISH PANEL LH

4. INSTALL CONSOLE BOX

5. INSTALL CONSOLE BOX HOLE COVER

6. INSTALL UPPER CONSOLE COVER

7. INSTALL LOWER NO. 1 PANEL

8. INSTALL LOWER FINISH PANEL