


REMOVAL

NOTICE:

- If the wiring connector of the SRS is disconnected with the ignition switch at ON position, DTCs will be recorded.
- Never use SRS parts from another vehicle. When replacing parts, replace them with new parts.
- Never reuse the sensor involved in a collision when the SRS has deployed.
- Never repair a sensor in order to reuse it.

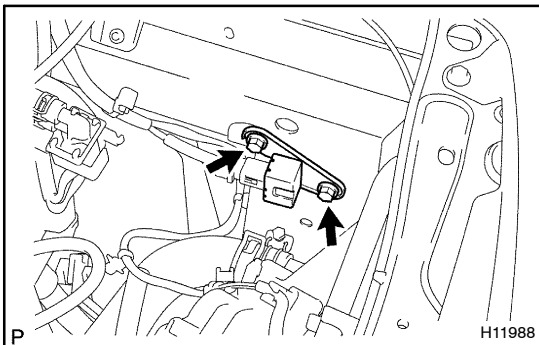

1. LH: REMOVE FRONT AIRBAG SENSOR

- Remove the air cleaner hose.
- Remove the air cleaner cap.
- Remove the air filter.
- Remove the 2 bolts and air cleaner case.
- Disconnect the connector.

NOTICE:

Disconnect the connector with sensor assembly installed.

- Remove the 2 bolts and front airbag sensor LH.

2. RH: REMOVE FRONT AIRBAG SENSOR

- Remove the 5 clips and upper front fender apron seal.
- Disconnect the connector.

NOTICE:

Disconnect the connector with sensor assembly installed.

- Remove the 2 bolts and front airbag sensor RH.

