



LH:

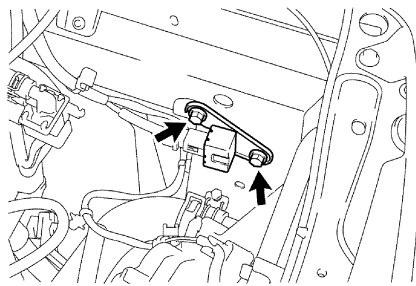

P

RH:

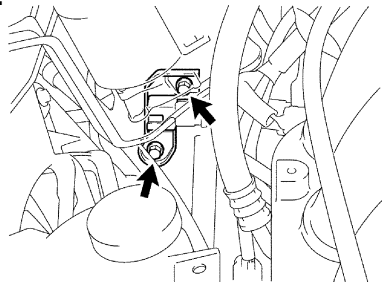

P

H11988  
H11989

H12013

## INSTALLATION

### 1. INSTALL FRONT AIRBAG SENSOR LH AND RH

(a) Install the front airbag sensors with the 4 bolts.


**Torque: 20 N·m (205 kgf·cm, 15 ft·lbf)**

(b) Connect the front airbag sensor connector.


#### NOTICE:

- Connection of the connector is done after the sensor assembly has been installed.
- Make sure the sensor is installed with the specified torque.
- If the sensor has been dropped, or there are cracks, dents or other defects in the case, brackets or connector, replace the removed sensor with a new one.
- The front sensor is equipped with an electrical connection check mechanism. Be sure to lock this mechanism securely when connecting the connector. If the connector is not securely locked, a malfunction code will be detected by the diagnostic system.

LH:

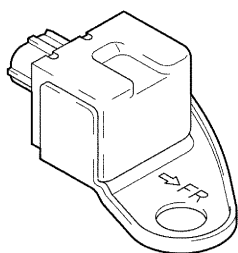

RH:

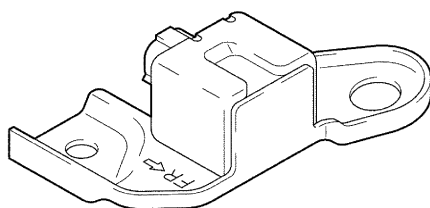

P

H11990

#### HINT:

Install the front airbag sensor with the arrow on the sensor facing toward the front of the vehicle.

### 2. INSTALL HEAD LIGHT

Install head lights with the 4 bolts and 2 screws ([See page BE-20](#)).

### 3. INSTALL AIR CLEANER CASE

Install the air cleaner case with the 2 bolts.

### 4. INSTALL AIR FILTER

### 5. INSTALL AIR CLEANER CAP

### 6. INSTALL AIR CLEANER HOSE

### 7. INSTALL UPPER FRONT FENDER APRON SEAL

Install the upper front fender apron seal with the 5 clips.