

REMOVAL


NOTICE:

- If the wiring connector of the SRS is disconnected with the ignition switch at ON position, DTCs will be recorded.
- Do not open the cover or the case of the ECU and various electrical devices unless absolutely necessary. (If the IC terminals are touched, the IC may be destroyed by static electricity.)

HINT:

For step 1 to 9, refer to [page BO-89](#).

1. REMOVE PACKAGE TRAY TRIM PANEL
2. REMOVE REAR SEATBACK ASSEMBLY LH AND RH
3. REMOVE REAR SEAT CUSHION ASSEMBLY
4. REMOVE DECK TRIM REAR COVER
5. REMOVE DECK TRIM SIDE COVER
6. REMOVE DECK TRIM SIDE PANEL
7. REMOVE LUGGAGE COMPARTMENT TRAY
8. REMOVE REAR SEATBACK HINGE
9. REMOVE QUARTER TRIM PANEL

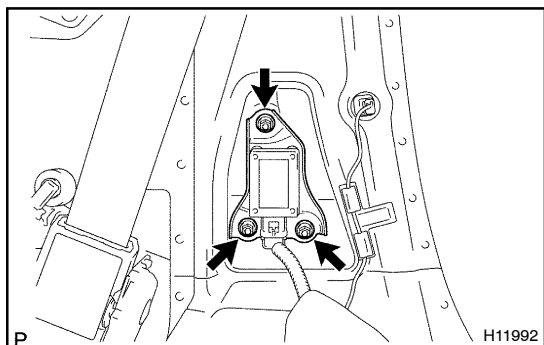

10. REMOVE SIDE AIRBAG SENSOR ASSEMBLY

- (a) Remove the cover.
- (b) Disconnect the connector.

NOTICE:

Remove the connector with the sensor assembly installed.

- (c) Remove the 3 nuts and side airbag sensor assembly.