


INSTALLATION

NOTICE:

- Never use SRS parts from another vehicle. When replacing parts, replace them with new ones.
- Never reuse the side airbag sensor assembly involved in a collision when the airbag has deployed.
- Never repair a sensor in order to reuse it.

HINT:

For step 2 to 10, refer to [page BO-92](#).

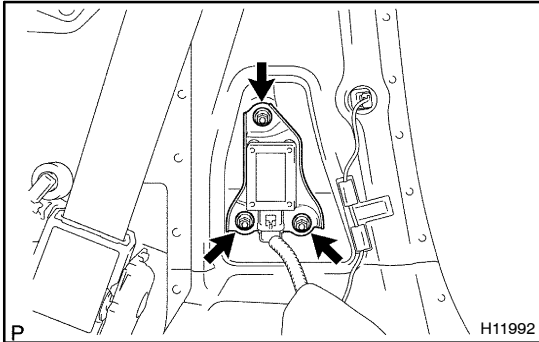

1. INSTALL SIDE AIRBAG SENSOR

- (a) Install the side airbag assembly with 3 screws.

Torque: 20 N·m (205 kgf·cm, 15 ft·lbf)

- (b) Connect the connector.

NOTICE:

- Connection of the connector is done after the sensor assembly has been installed.
- Make sure the sensor assembly is installed with the specified torque.
- If the sensor assembly has been dropped, or there are cracks, dents or other defects in the case, bracket or connector, replace the sensor assembly with a new one.
- When installing the sensor assembly, take care that the SRS wiring does not interfere with other parts and is not pinched between other parts.
- After installation, shake the sensor assembly to check that there is no looseness.

- (c) Install the cover.

2. INSTALL QUATER TRIM PANEL

3. INSTALL REAR SEAT BACK HINGE

Torque: 7.8 N·m (80 kgf·cm, 69 in·lbf)

4. INSTALL LUGGAGE COMPARTMENT TRAY

5. INSTALL DECK TRIM SIDE PANEL

6. INSTALL DECK TRIM SIDE COVER

7. INSTALL DECK TRIM REAR COVER

8. INSTALL REAR SEAT CUSHION ASSEMBLY

9. INSTALL REAR SEATBACK ASSEMBLY LH AND RH

Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

10. INSTALL PACKAGE TRAY TRIM PANEL