

REMOVAL


NOTICE:

- If the wiring connector of the SRS is disconnected with the ignition switch at ON position, DTCs will be recorded.
- Never use SRS parts from another vehicle. When replacing parts, replace them with new parts.
- Never reuse the sensor involved in a collision when the SRS has deployed.
- Never repair a sensor in order to reuse it.

HINT:

For step 1 to 4, refer to [page BO-11](#).

1. REMOVE NO. 2 DOOR INSIDE HANDLE BEZEL
2. REMOVE OUTER MIRROR SWITCH ASSEMBLY
3. REMOVE FRONT DOOR LOWER FRAME BRACKET GARNISH
4. REMOVE DOOR TRIM

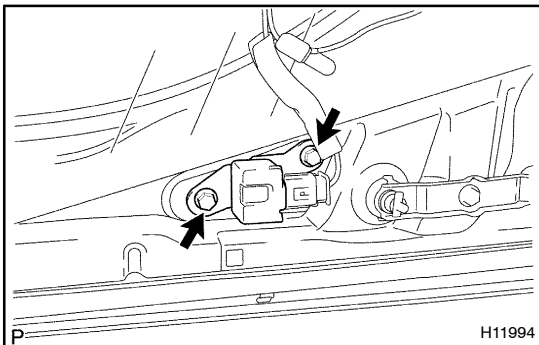

5. REMOVE DOOR SIDE AIRBAG SENSOR

- (a) Disconnect the door side airbag sensor connector.

NOTICE:

Disconnect the connector with sensor assembly installed.

- (b) Remove the 2 bolts and door side airbag sensor.