

REPLACEMENT

REPLACEMENT REQUIREMENTS

In the following cases, replace the front airbag sensor.

- If the side airbag assembly has been deployed in a collision.
- If the door side airbag sensor has been found to be faulty in troubleshooting.
- If the door side airbag sensor has been found to be faulty during checking items ([See page RS-59](#)).
- If the door side airbag sensor has been dropped.

CAUTION:

For removal and installation of the door side airbag sensor, [see page RS-68](#) and [RS-71](#). Be sure to follow the correct procedure.