



DISASSEMBLY

1. REMOVE LOWER BALL JOINT

- (a) Remove the cotter pin and nut.

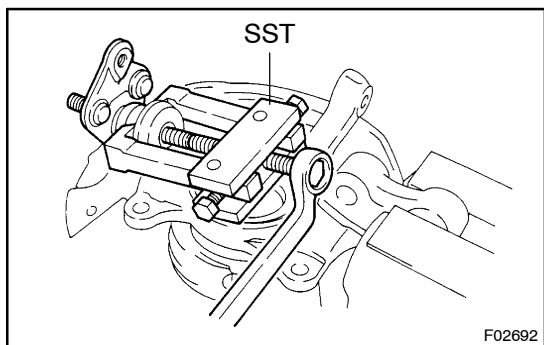


- (b) Using SST, remove the lower ball joint.
SST 09628-62011

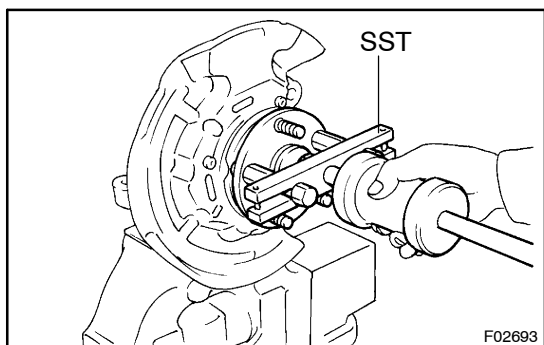

2. REMOVE AXLE HUB

- (a) Using SST, remove the axle hub.
SST 09520-00031 (09520-00040, 09521-00010, 09521-00020)

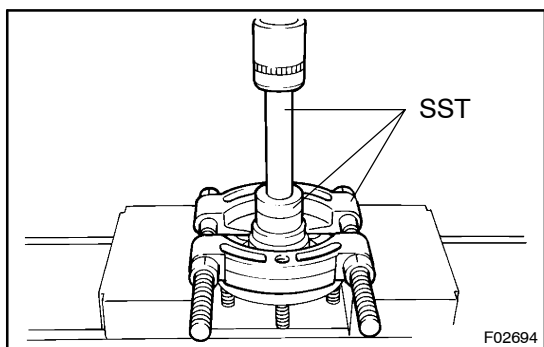


- (b) Using SST and a press, remove the inner race (outside) from the axle hub.
SST 09555-55010, 09950-60010 (09951-00380), 09950-70010 (09951-07150)

3. REMOVE DUST COVER

Using a torx socket (T30), remove the 3 bolts and dust cover.

4. REMOVE BEARING FROM STEERING KNUCKLE

- (a) Using snap ring pliers, remove the snap ring.
(b) Place the inner race on the outside of the bearing.

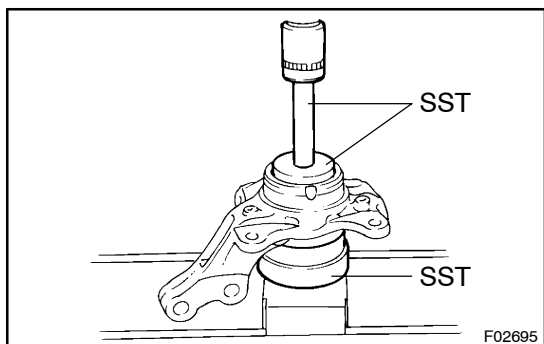

- (c) Using SST and a press, remove the bearing.
SST 09527-17011, 09950-60010 (09951-00650), 09950-70010 (09951-07150)