


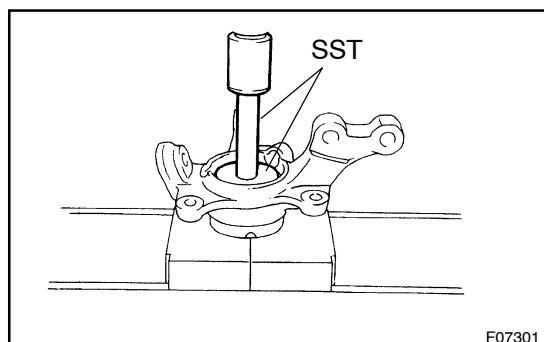

F07301

REASSEMBLY

1. INSTALL BEARING

- (a) Using SST and a press, install a new bearing to the steering knuckle.


SST 09950-60020 (09951-00730),
09950-70010 (09951-07150)

- (b) Using snap ring pliers, install a new snap ring.

2. INSTALL DUST COVER

Place the dust cover and using a torx socket (T30), install the 3 bolts.

Torque: 8.3 N·m (85 kgf·cm, 74 in·lbf)

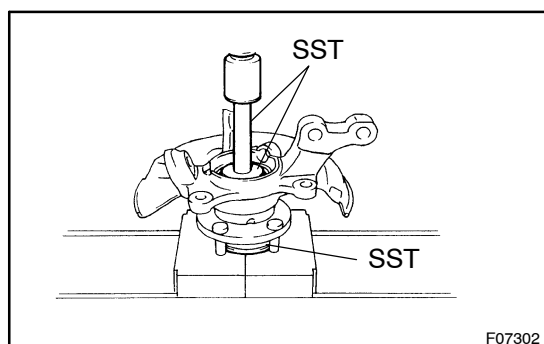

F07302

3. INSTALL FRONT AXLE HUB

Using SST and a press, install the axle hub.

SST 09608-32010, 09950-60010 (09951-00550)
09950-70010 (09951-07150)

4. INSTALL LOWER BALL JOINT

- (a) Install the lower ball joint and tighten the nut.

Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)

- (b) Install a new cotter pin.

If the holes for the cotter pin are not aligned, tighten the nut further up to 60°.