

INSTALLATION

Installation is in the reverse order of removal ([See page SA-12](#)).

HINT:

After installation, check the ABS speed sensor signal ([See page DI-68](#)) and front wheel alignment ([See page SA-4](#)).