


FRONT WHEEL HUB BOLT REPLACEMENT


SA1CN-03

1. REMOVE FRONT WHEEL

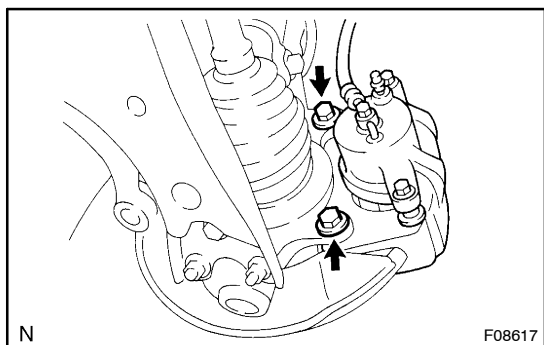

2. REMOVE BRAKE CALIPER AND DISC


- Remove the 2 bolts, brake caliper and disc.
- Support the brake caliper securely.

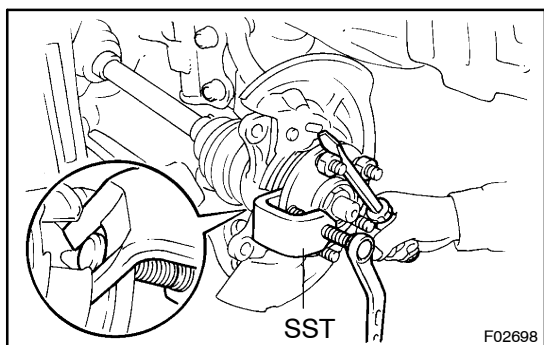

3. REMOVE HUB BOLT

Using SST, 2 nuts and a screwdriver or an equivalent, remove the hub bolt.

SST 09628-10011

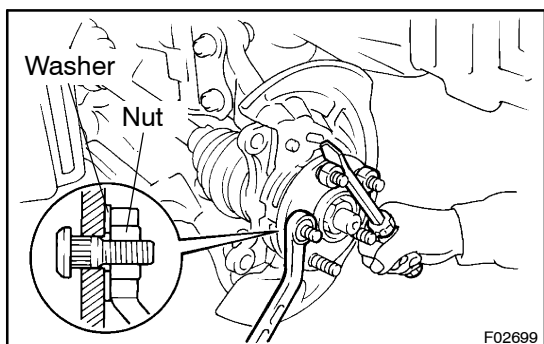

4. INSTALL HUB BOLT

- Install a washer and nut to a new hub bolt as shown in the illustration.
- Using a screwdriver or an equivalent to hold, install the hub bolt by torquing the nut.
- Remove the 3 nuts and washer.

5. INSTALL DISC AND BRAKE CALIPER

Install the disc, brake caliper and 2 bolts.

Torque: 107 N·m (1,090 kgf·cm, 79 ft·lbf)

6. INSTALL FRONT WHEEL

Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)