


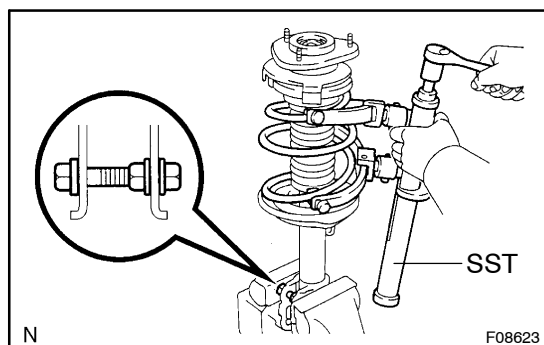

DISASSEMBLY


REMOVE COIL SPRING

- (a) Install 2 nuts and a bolt to the bracket at the lower side of the shock absorber and secure it in a vise.
- (b) Using SST, compress the coil spring.
SST 09727-30021 (09727-00010, 09727-00021, 09727-00031)

NOTICE:

Do not use an impact wrench. It will damage the SST.

- (c) Remove the cap from the suspension support.

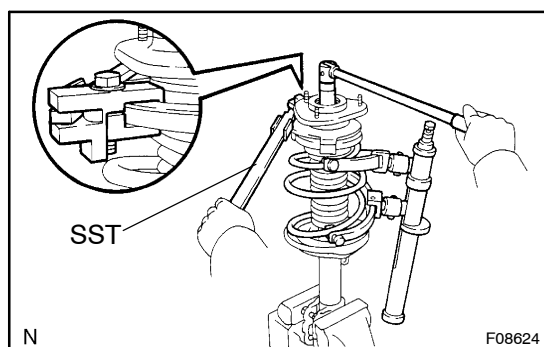

- (d) Using SST to hold the spring seat, remove the nut.
SST 09729-22031
- (e) Remove the suspension support, dust seal, spring seat, upper insulator, coil spring, spring bumper and lower insulator.