


REASSEMBLY

1. INSTALL LOWER INSULATOR ONTO SHOCK ABSORBER
2. INSTALL SPRING BUMPER TO PISTON ROD

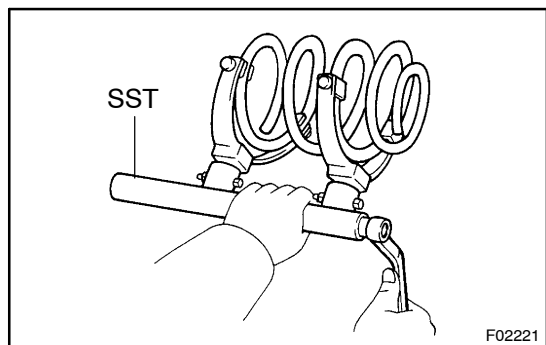

3. INSTALL COIL SPRING

- (a) Using SST, compress the coil spring.
SST 09727-30021 (09727-00010, 09727-00021, 09727-00031)

NOTICE:



Do not use an impact wrench. It will damage the SST.

- (b) Install the coil spring to the shock absorber.


HINT:

Fit the lower end of the coil spring into the gap of the spring lower seat.


- (c) Install the upper insulator as shown in the illustration.

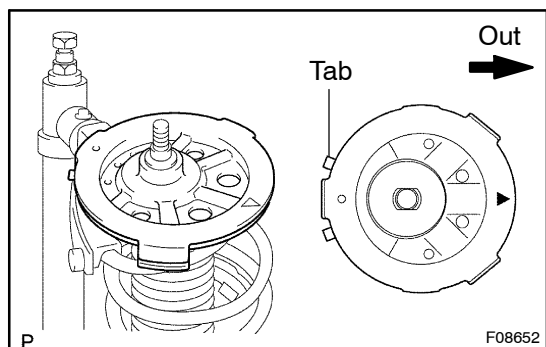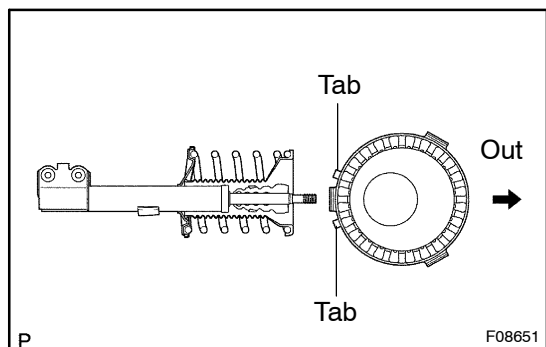

- (d) Install the spring seat to the shock absorber with the "▲" mark facing to the outside of the vehicle.
- (e) Install the dust seal and suspension support.

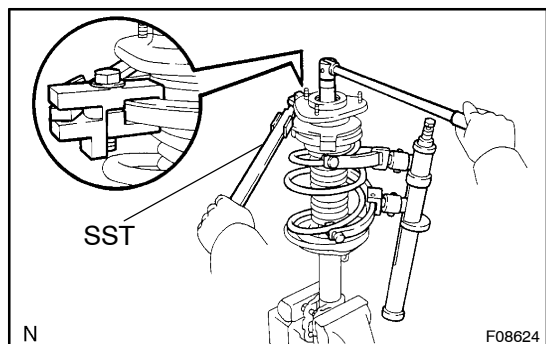

- (f) Using SST to hold the suspension support, install a new nut.
SST 09729-22031
Torque: 47 N·m (475 kgf·cm, 34 ft·lbf)
- (g) Remove the SST.
SST 09727-30021 (09727-00010, 09727-00021, 09727-00031)

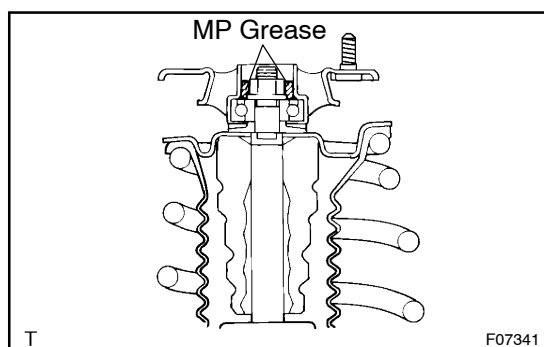

- (h) Apply MP grease into the suspension support.
- (i) Install the cap.