

INSTALLATION

Installation is in the reverse order of removal ([See page SA-38](#)).

HINT:

After installation, check the front wheel alignment ([See page SA-4](#)).