


REMOVAL

1. **REMOVE STEERING KNUCKLE WITH AXLE HUB**
(See page SA-12)
2. **REMOVE LOWER BALL JOINT**
 - (a) Remove the cotter pin and nut.

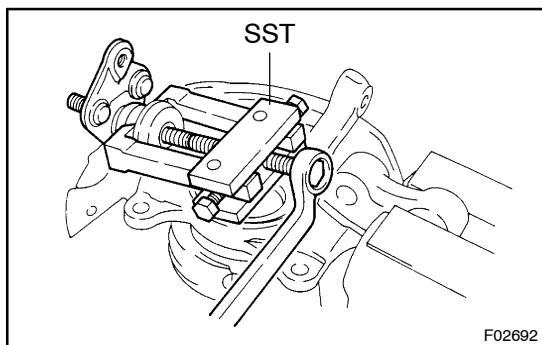

-
- (b) Using SST, remove the lower ball joint.
SST 09628-62011