


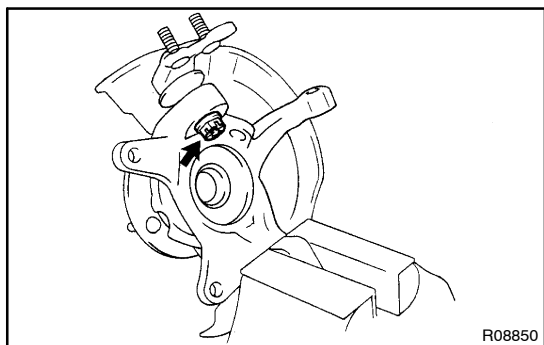

INSTALLATION

1. INSTALL LOWER BALL JOINT

- (a) Install the lower ball joint and tighten the nut.

Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)

- (b) Install a new cotter pin.

If the holes for the cotter pin are not aligned, tighten the nut further up to 60 °.

2. INSTALL STEERING KNUCKLE WITH AXLE HUB

(See page SA-15)

3. CHECK ABS SPEED SENSOR SIGNAL

(See page DI-68)

4. CHECK FRONT WHEEL ALIGNMENT

(See page SA-4)