

INSTALLATION

Installation is in the reverse order of removal ([See page SA-51](#)).

HINT:

After installation, check the ABS speed sensor signal ([See page DI-68](#)) and rear wheel alignment ([See page SA-8](#)).