



REAR WHEEL HUB BOLT REPLACEMENT

1. REMOVE REAR WHEEL

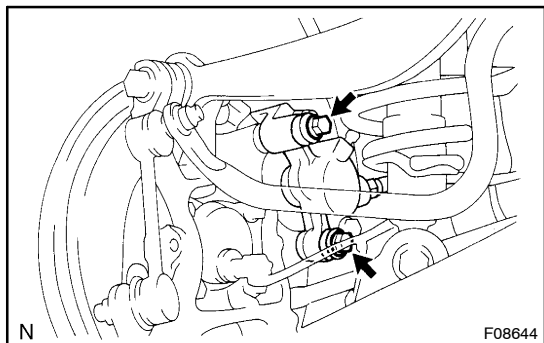


2. REMOVE BRAKE CALIPER AND DISC

- (a) Remove the 2 bolts, brake caliper and disc.
- (b) Support the brake caliper securely.

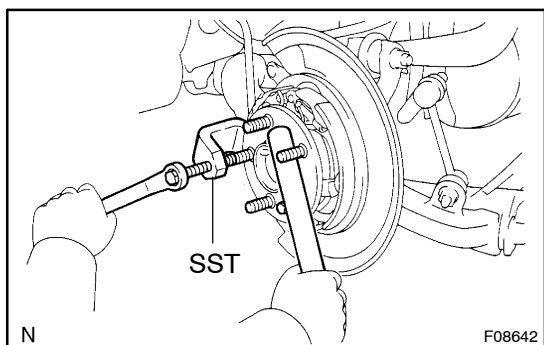

3. REMOVE HUB BOLT

Using SST and a brass bar, remove the hub bolt.
SST 09628-10011

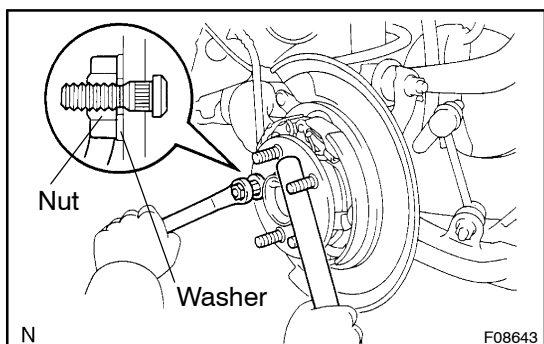

4. INSTALL HUB BOLT

- (a) Install a washer and nut to a new hub bolt as shown in the illustration.
- (b) Using a brass bar to hold, install the hub bolt by torquing the nut.

5. INSTALL DISC AND BRAKE CALIPER

Install the disc and brake caliper and 2 bolts.

Torque: 47 N·m (475 kgf·cm, 34 ft·lbf)

6. INSTALL REAR WHEEL

Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)