


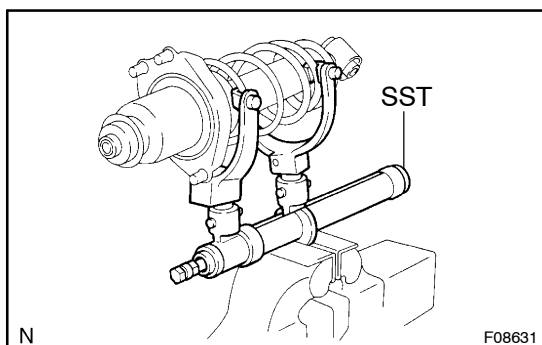

DISASSEMBLY


REMOVE COIL SPRING

- (a) Using SST, compress the coil spring.

SST 09727-30021 (09727-00010, 09727-00021, 09727-00031)

NOTICE:

Do not use an impact wrench. It will damage the SST.

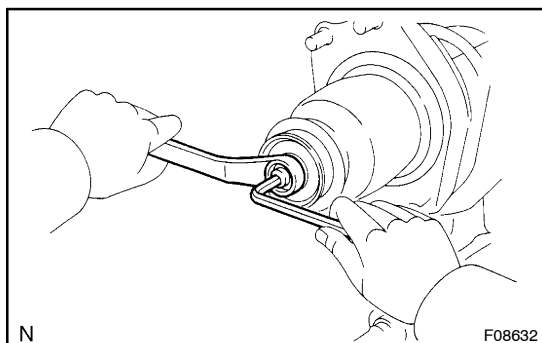

- (b) Using a 6 mm hexagon wrench to hold the piston rod, remove the nut.
- (c) Remove the washer, cushion, spring bracket, upper insulator, suspension support, spring bumper and coil spring.