


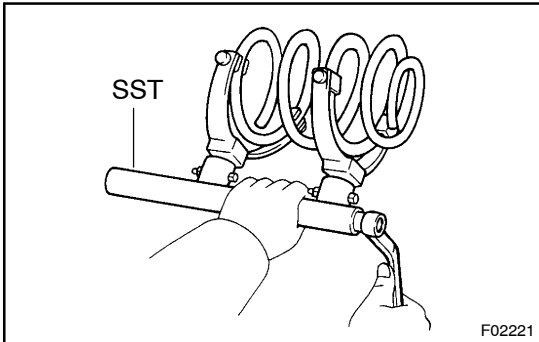

REASSEMBLY

1. INSTALL COIL SPRING

- (a) Using SST, compress the coil spring.

SST 09727-30021 (09727-00010, 09727-00021, 09727-00031)

NOTICE:

Do not use an impact wrench. It will damage the SST.

- (b) Insert the coil spring to the shock absorber.


HINT:

Fit the lower end of the coil spring into the gap of the spring lower seat.

2. INSTALL SPRING BUMPER AND SUSPENSION SUPPORT

3. INSTALL SPRING BRACKET

- (a) Set the upper insulator to the spring bracket.

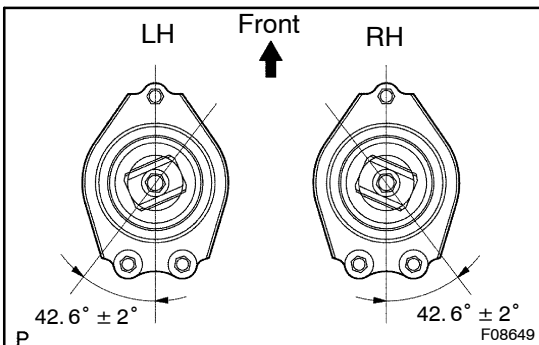

- (b) Position the spring bracket with upper insulator as shown in the illustration.


- (c) Install the cushion and washer.

- (d) Temporarily tighten the center nut.

- (e) Remove the SST.

SST 09727-30021 (09727-00010, 09727-00021, 09727-00031)

- (f) Recheck the direction of the spring bracket.

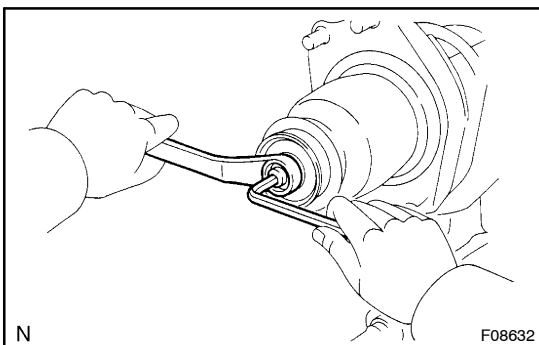

- (g) Using a 6 mm hexagon wrench to hold the piston rod, tighten the nut.

Torque: 56 N·m (571 kgf·cm, 41 ft·lbf)