

INSTALLATION

Installation is in the reverse order of removal ([See page SA-68](#)).

HINT:

After installation, check the rear wheel alignment ([See page SA-8](#)).