

TORQUE SPECIFICATION

Part tightened		N·m	kgf·cm	ft·lbf
Vehicle speed sensor x Transaxle		5.5	56	49 in.·lbf
Input turbine speed sensor x Transaxle		11	115	8
Counter gear speed sensor x Transaxle		11	115	8
ATF temperature sensor x Transaxle		6.6	67	58 in.·lbf
Oil pan x Transaxle		7.8	80	69 in.·lbf
Control cable x Control shaft		12	120	9
Control shaft x Park/neutral position switch		13	130	9
Neutral start switch x Transaxle	Bolt	5.4	55	48 in.·lbf
	Nut	6.9	70	61 in.·lbf
Shift solenoid valve x Valve body	12 mm (0.47 in.)	6.6	67	58 in.·lbf
	45 mm (1.77 in.)	11	110	8
Valve body x Transaxle		11	110	8
Oil strainer x Valve body		11	110	8
Drain plug x Oil pan		49	500	36
Steering wheel set nut		34	350	25
Front passenger airbag assembly x Instrument panel reinforcement		20	204	15
Floor shift assembly x Body		12	120	9
Hood set bolt		13	130	9
No. 2 cylinder head cover		7.0	71	62 in.·lbf
Engine and ECT ECU case set bolt		6.9	70	61 in.·lbf
Engine and ECT ECU set bolt		6.9	70	61 in.·lbf
Engine and ECT ECU bracket set bolt		18	185	13
Engine and ECT ECU bracket set nut		12	120	9
Radiator reservoir set bolt		4.9	50	43 in.·lbf
Ground cable x Transaxle		18	185	13
Starter x Transaxle		37	378	28
Drain plug x Differential		54	550	40
Stabilizer bar link x Shock absorber		44	450	32
Lower suspension arm x Lower ball joint		142	1,450	105
Drive shaft lock nut		216	2,200	159
Steering knuckle x Tie rod end		49	500	33
Drive shaft bearing lock bolt		64	650	47
Power steering gear assembly set bolt		45	459	33
Center member x Body		39	398	29
Center member x Engine front mounting		52	530	38
Suspension member x Body		157	1,601	116
Engine rear mounting insulator x Engine rear mounting bracket		87	890	64
Engine rear mounting insulator x Suspension member		52	530	38
Engine hanger set bolt		38	387	28
Engine left mounting x Engine left mounting bracket		80	816	59
Torque converter x Drive plate		41	418	30
Transaxle housing x Engine block		See page AX-30		
Drive plate x Crankshaft		88	897	65