



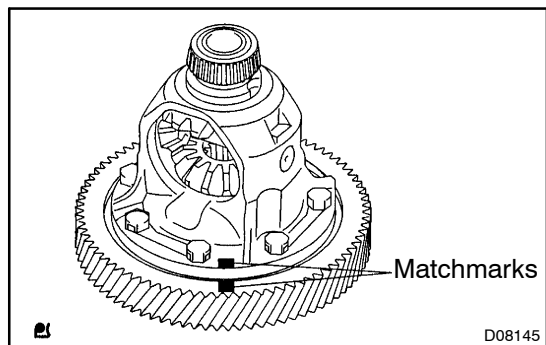

DISASSEMBLY


1. REMOVE DIFFERENTIAL RING GEAR

- (a) Place the matchmarks on the ring gear and the differential case.

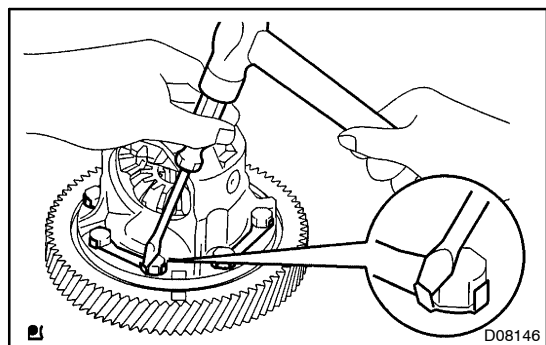


- (b) Using a screwdriver and hammer, unstake the lock plate.

- (c) Remove the 4 lock plate and 8 bolts.

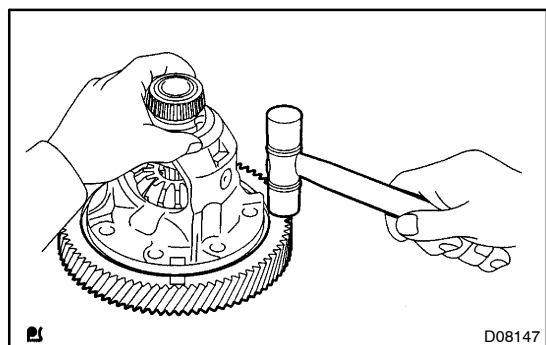


- (d) Using a plastic hammer, tap on the ring gear to remove it from the case.

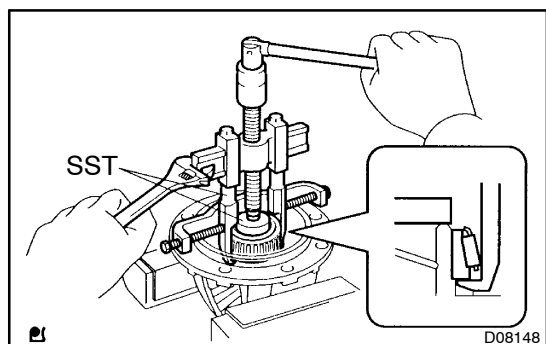

2. REMOVE FRONT DIFFERENTIAL CASE REAR TA-PERED ROLLER BEARING

Using SST, remove the rear tapered roller bearing.


SST 09950-40011 (09951-04010, 09952-04010, 09953-04030, 09954-04010, 09955-04061, 09957-04010, 09958-04011), 09950-60010 (09951-00440)

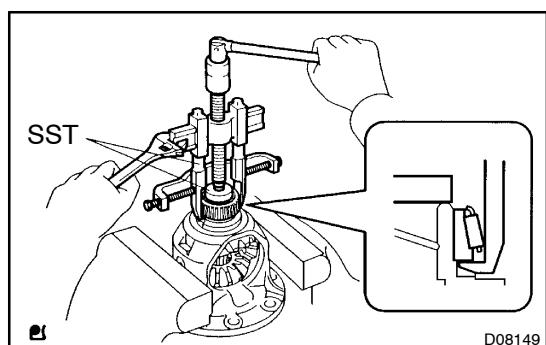

3. REMOVE FRONT DIFFERENTIAL CASE FRONT TA-PERED ROLLER BEARING


Using SST, remove the front tapered roller bearing.

SST 09950-40011 (09951-04010, 09952-04010, 09953-04030, 09954-04010, 09955-04061, 09957-04010, 09958-04011), 09950-60010 (09951-00440)

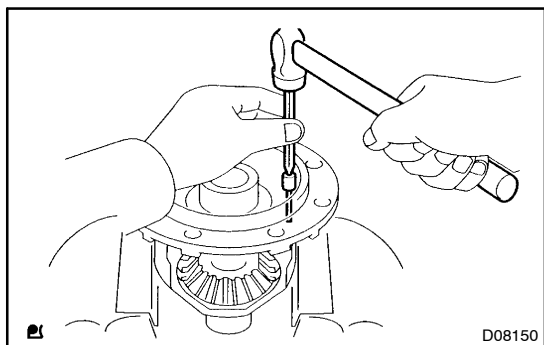


4. REMOVE FRONT DIFFERENTIAL CASE

- (a) Using a pin punch and hammer, drive out the straight pin.

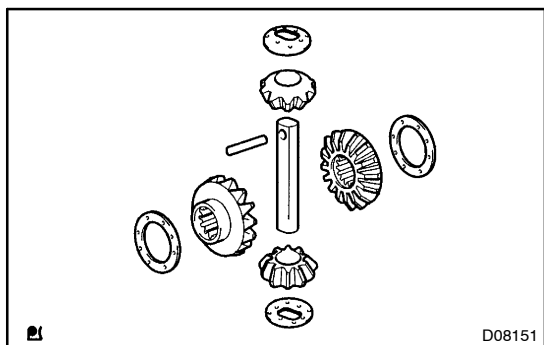


- (b) Remove the pinion shaft, 2 pinions, 2 pinion thrust washers, 2 side gears and 2 side gear thrust washers from the front differential case.

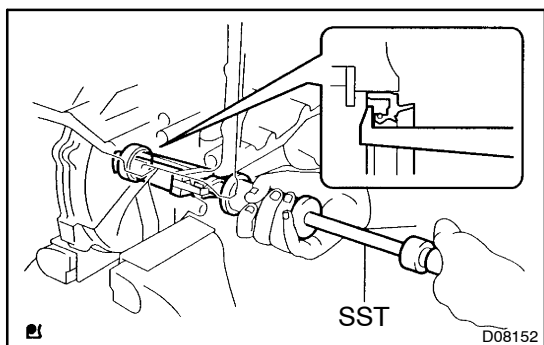

5. REMOVE OIL SEAL NO. 1

Using SST, remove the oil seal.


SST 09308-00010

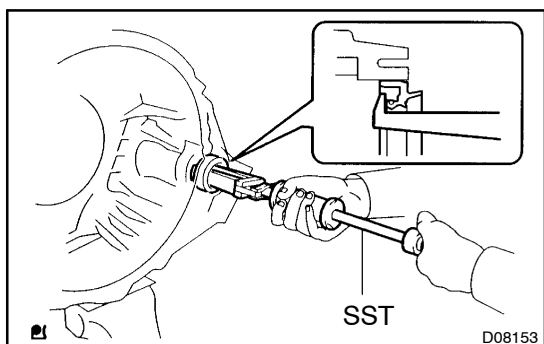

6. REMOVE TRANSAXLE HOUSING OIL SEAL


Using SST, remove the oil seal.

SST 09308-00010

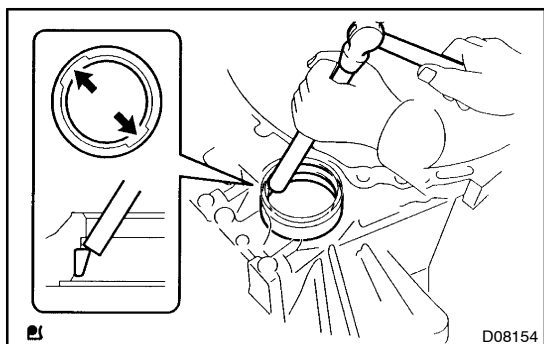

7. REMOVE FRONT AND REAR BEARING RACE

- (a) Using a brass bar and hammer, remove the rear bearing race and plate washer.

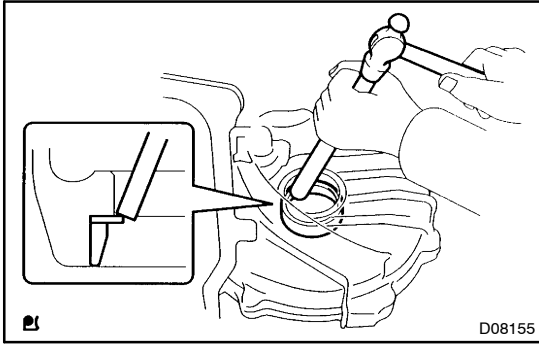

- (b) Using a brass bar and hammer, remove the front bearing race.