



POWER SOURCE LOCATION

BE1CX-04

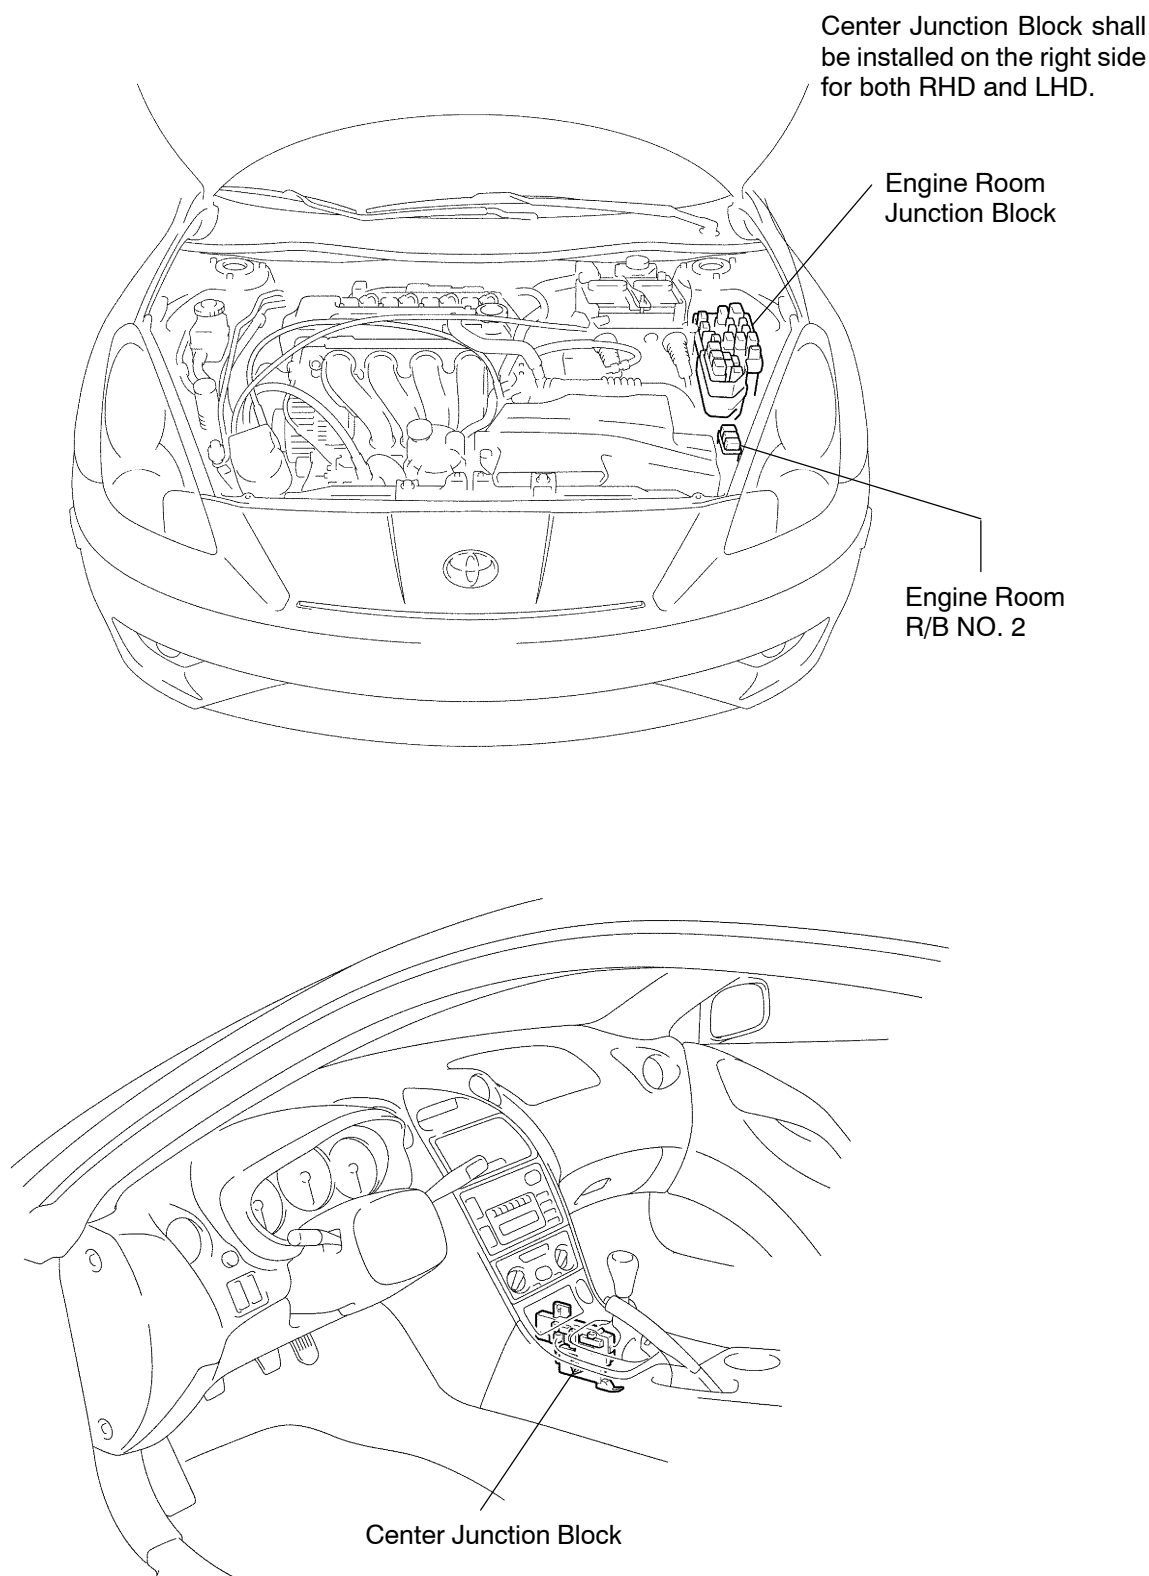

ENGINE ROOM JUNCTION BLOCK

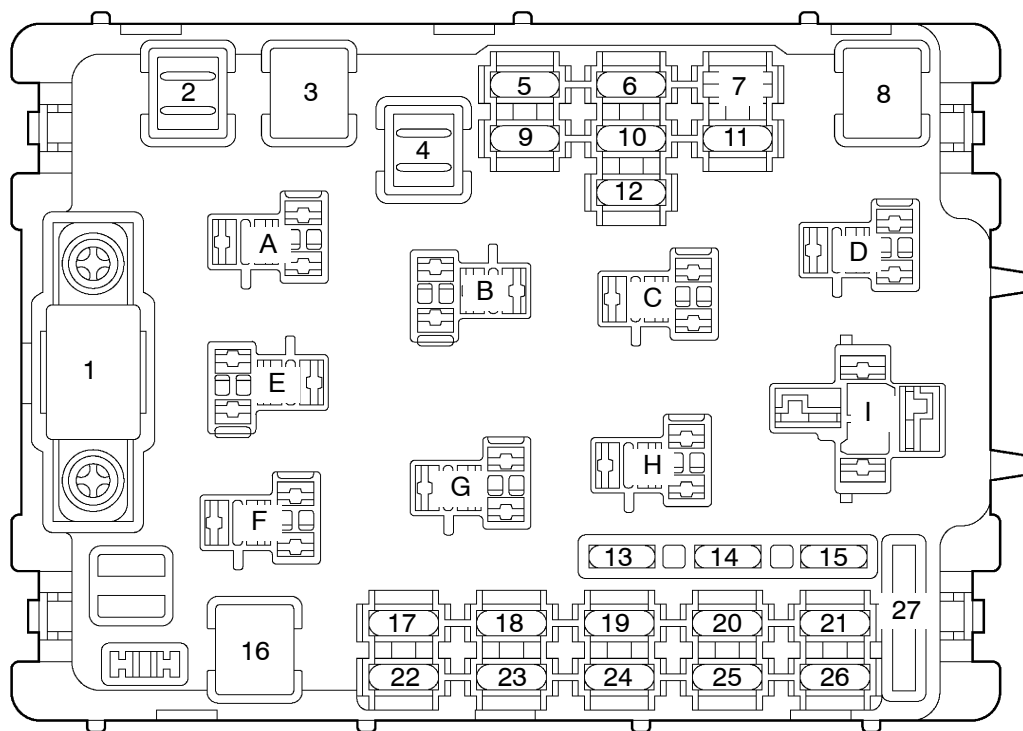


FUSES

1. FL ALT	120 A
2. CDS	30 A
3. ABS NO. 1	50 A
4. RDI	30 A
5. HEAD LH LWR	10 A
6. HEAD RH UPR	20 A (Australia)
HEAD LH UPR DRL NO. 2	20 A (Europe)
7. AUTO ANTENNA	15 A (Europe)
S-HTR	15 A (Australia)
8. HTR	50 A
9. ABS NO. 2	25 A
10. HEAD LVL DRL NO. 1	7.5 A (Australia)
HEAD LVL	7.5 A (Europe)
11. HEAD LH UPR	10 A
12. HEAD RH LWR	10 A
13. SPARE	10 A
14. SPARE	15 A
15. SPARE	30 A
16. MAIN	40 A
17. IG2	15 A
18. ST	7.5 A
19. EFI NO. 2	10 A
20. EFI NO. 1	10 A
21. HORN	10 A
22. HAZ	10 A
23. AM2	7.5 A
24. EFI	20 A
25. DCC	25 A
26. ALT-S	7.5 A
27. SPARE	7.5 A

RELAYS

A. FAN NO. 2 Relay
B. FAN NO. 1 Relay
C. Circuit Opening Relay
D. Horn Relay
E. FAN NO. 3 Relay
F. Magnetic Clutch Relay
G. IG2 Relay
H. EFI Relay
I. Headlight Control Relay

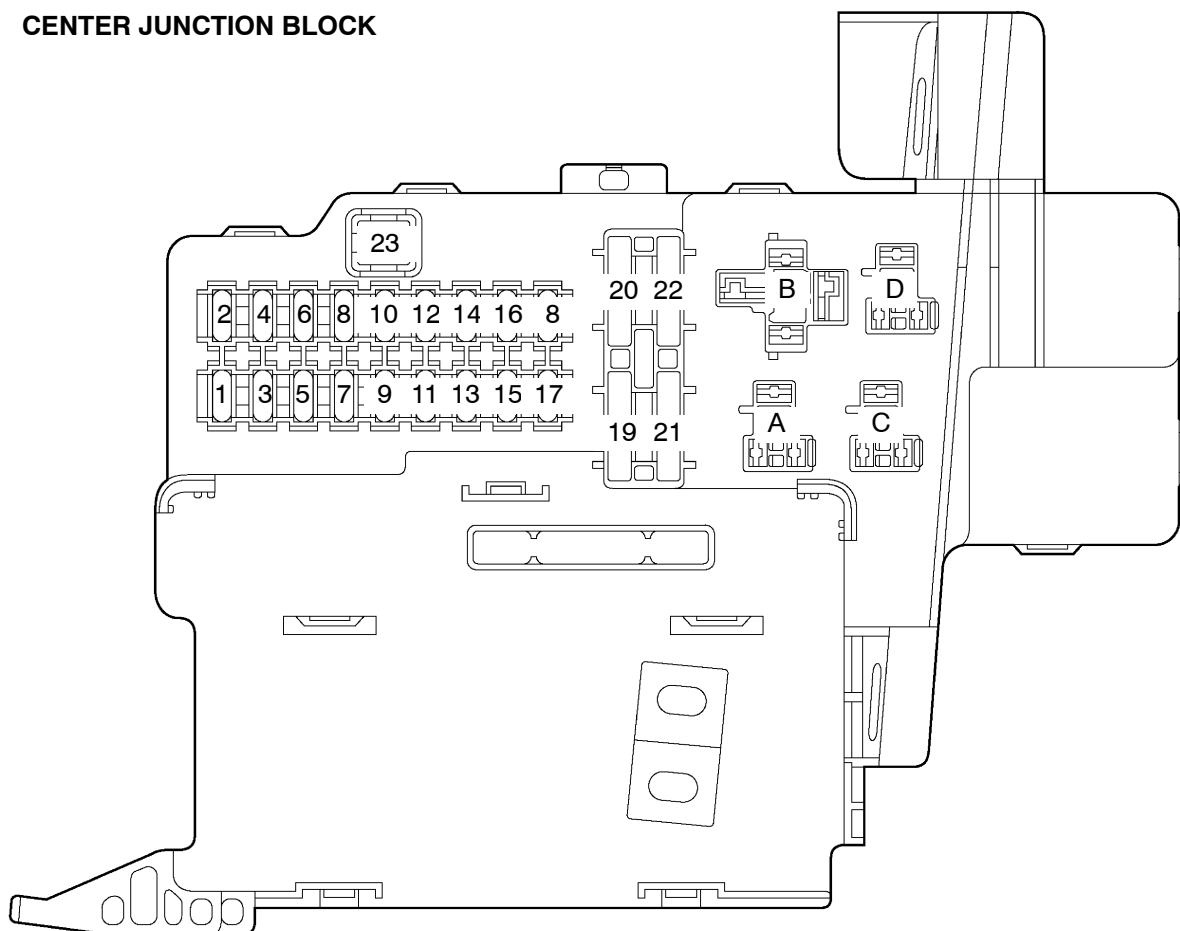
CENTER JUNCTION BLOCK**FUSES**

1. CIG	15 A
2. S/ROOF	15 A
3. AM1	25 A
4. FL P/W	20 A
5. DOOR	20 A
6. STOP	10 A
7. FR FOG	15 A
8. SRS-IG	7.5 A
9. OBD	7.5 A
10. WASHER	15 A
11. WIPER	20 A
12. RADID	15 A
13. MIR-HTR	10 A
14. TURN	7.5 A
15. RR WIPER	15 A
16. HTR	10 A
17. FR R/W	20 A
18. TAIL	10 A
19. MULTI-FUSE	5 A (ABS-IG, WARNING, FAN RLY, ECU-IG)
20. MULTI-FUSE	7.5 A (DOME, MPX-B, ECU-B, RR FOG)
21. MULTI-FUSE	5 A (BODY ECU-IG, BK/UP LP, TENS RDC, DEF RLY)
22. MULTI-FUSE	7.5 A (ECU-ACC, PANEL2, PANEL1)
23. DEF	30 A

RELAYS

- A. Mirror Heater Relay (Europe)
- B. IG1 Relay
- C. Defogger Relay
- D. Taillight Control Relay

ENGINE ROOM R/B NO. 2

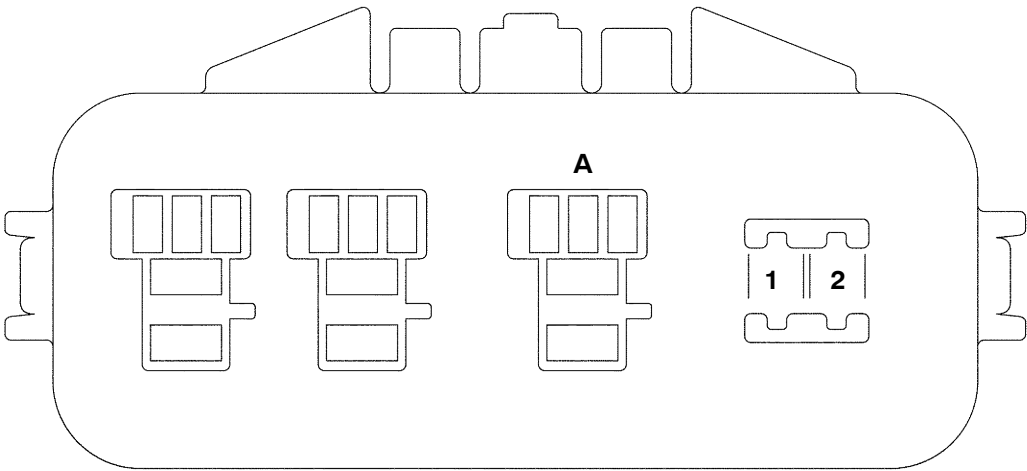

FUSES

- 1. HEAD LH UPR 10A
- 2. HEAD RH UPR 10A

RELAYS

- A. DRL No. 2 Dimmer Relay