


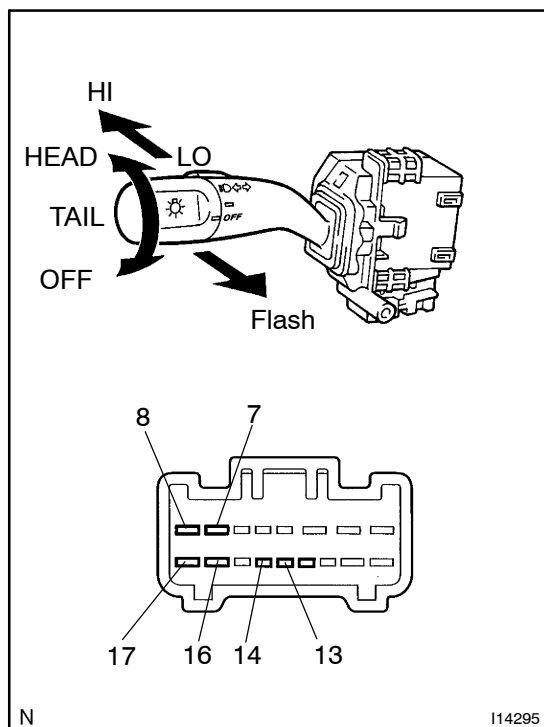

INSPECTION

1. Except Australia models:

INSPECT LIGHT CONTROL SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF	–	No continuity
TAIL	14 – 16	Continuity
HEAD	13 – 14 – 16	Continuity


If continuity is not as specified, replace the switch.

2. Except Australia models:

INSPECT HEADLIGHT DIMMER SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
Low beam	16 – 17	Continuity
High beam	7 – 16	Continuity
Flash	7 – 8 – 16	Continuity

If continuity is not as specified, replace the switch.

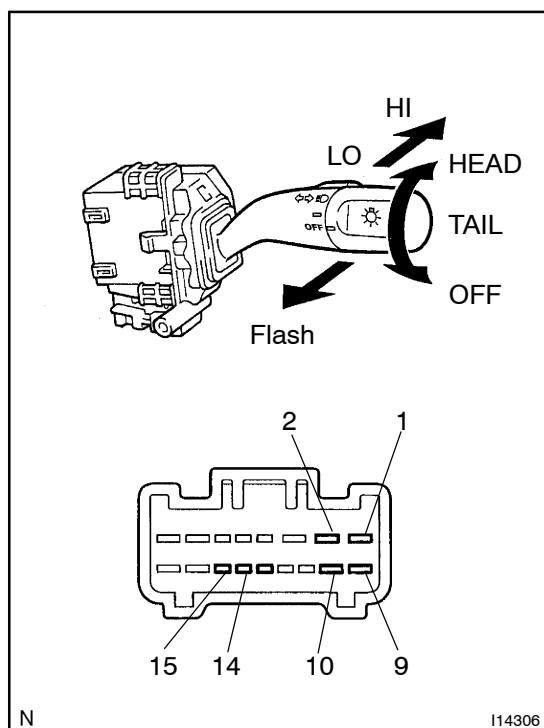

3. Australia models:

INSPECT LIGHT CONTROL SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF	–	No continuity
TAIL	9 – 15	Continuity
HEAD	9 – 14 – 15	Continuity


If continuity is not as specified, replace the switch.

4. Australia models:

INSPECT HEADLIGHT DIMMER SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
Low beam	9 – 10	Continuity
High beam	2 – 9	Continuity
Flash	1 – 2 – 9	Continuity


If continuity is not as specified, replace the switch.

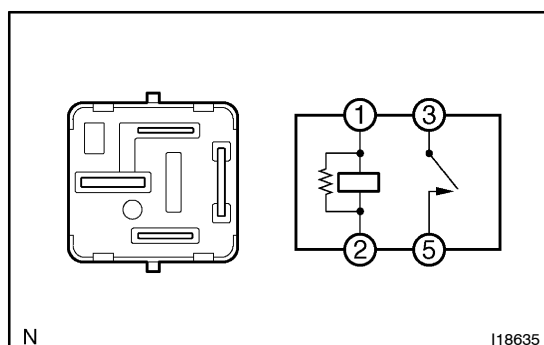

5. INSPECT HEADLIGHT CONTROL RELAY CONTINUITY

Condition	Tester connection	Specified condition
Always	1 – 2	Continuity
Apply B+ between terminals 1 and 2.	3 – 5	Continuity


If continuity is not as specified, replace the relay.

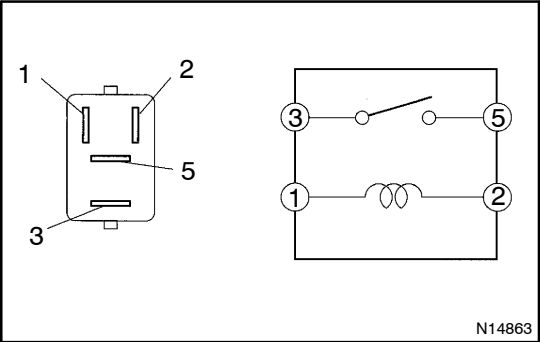

6. INSPECT TAILLIGHT CONTROL RELAY CONTINUITY

Condition	Tester connection	Specified condition
Always	1 – 2	Continuity
Apply B+ between terminals 1 and 2.	3 – 5	Continuity

If continuity is not as specified, replace the relay.

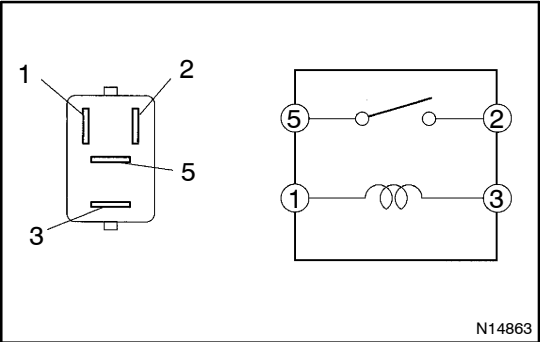

7. Europe:
INSPECT DRL NO. 2 DIMMER RELAY

Condition	Tester connection	Specified condition
Always	1 – 3	Continuity
Apply B+ between terminals 1 and 3.	2 – 5	Continuity

If continuity is not as specified, replace the relay.