

REMOVAL


1. REMOVE UPPER FRONT FENDER APRON SEAL
2. REMOVE UPPER RADIATOR SUPPORT SEAL
3. REMOVE FRONT BUMPER COVER

(See page BO-3)



4. REMOVE HEADLIGHT

- (a) Remove the 3 bolts.
- (b) Disconnect the connectors, then remove the headlight as shown in the illustration.
- (c) The procedure for the other side is same as above.

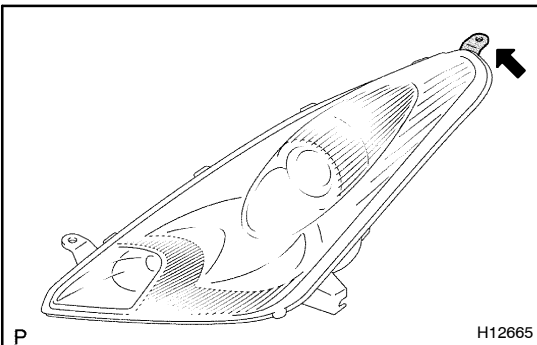

HINT:

At the time of installation, if the bracket in the illustration is damaged, replace it to a new one to install the headlight to the body. If the shown part of the headlight is damaged, the headlight can be reinstalled to the body by installing a bracket to it.