

DISASSEMBLY

1. w/ Vertical adjuster:


REMOVE VERTICAL ADJUSTER KNOB

Using a screwdriver, remove the clip and vertical adjuster knob.

HINT:


Tape the screwdriver tip before use.

2. REMOVE RECLINING ADJUSTER RELEASE HANDLE

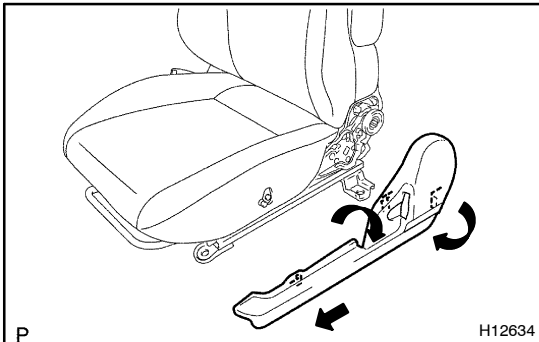

3. REMOVE FRONT SEAT CUSHION SHIELD

Remove the front seat cushion shield as shown in the illustration.

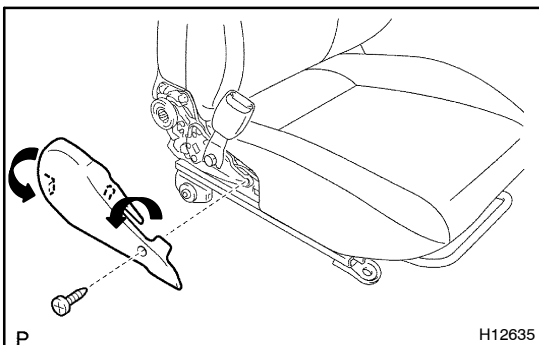


4. REMOVE FRONT SEAT CUSHION INNER SHIELD


Remove the screw and front seat cushion inner shield as shown in the illustration.

5. REMOVE SEATBACK ASSEMBLY

- (a) Remove the hog rings.
- (b) Zip the seatback cover open.

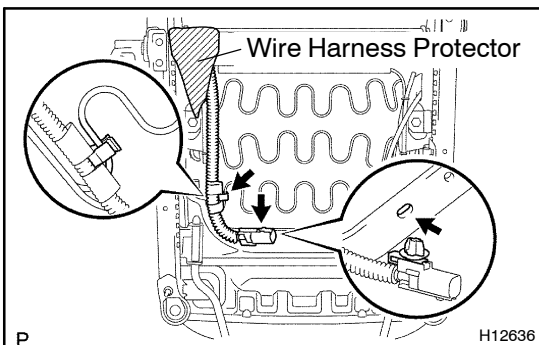


- (c) w/ Side airbag assembly:
Turn over the wire harness protector as shown in the illustration.
- (d) w/ Side airbag assembly:
Disengage the side airbag wire harness from the seat cushion frame.
- (e) w/ Side airbag assembly:
Pull out the side airbag wire harness from the slit of seatback cover.
- (f) Remove the 4 bolts and seatback assembly.
- (g) w/ Side heater:
Remove the 4 bolts and seatback assembly, disconnect the connectrs.

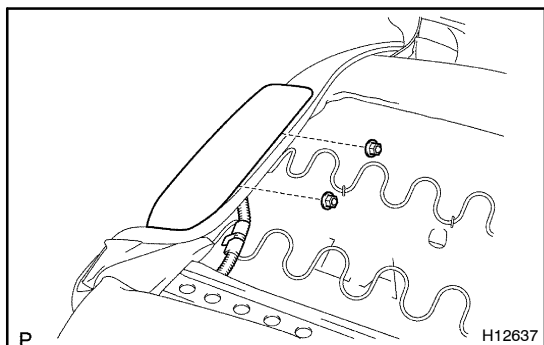

6. REMOVE SEATBACK COVER


- (a) w/ Side airbag assembly:
Disengage the clamp of side airbag wire harness, then remove the 2 nuts.

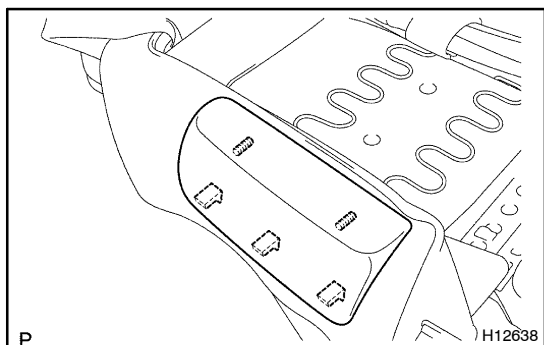

- (b) w/ Side airbag assembly:
Remove the side airbag assembly as shown in the illustration.

CAUTION:

- Do not store the side airbag assembly with the airbag deployment side facing down.
- Never disassemble the side airbag assembly.

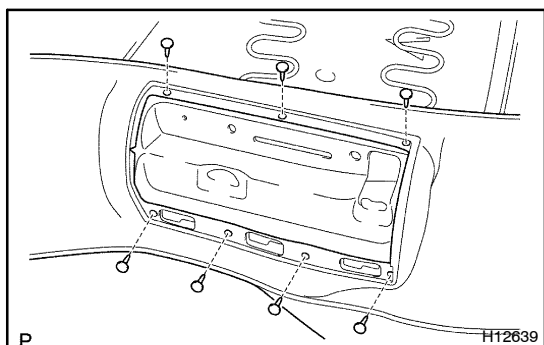

- (c) w/ Side airbag assembly:
Using a clip remover, remove the 7 clips.
- (d) Remove the seatback frame.
- (e) Remove the seatback cover from the seatback cushion.

7. REMOVE FRONT SEAT INNER BELT

8. REMOVE SEAT CUSHION ASSEMBLY

- (a) Remove the 4 bolts and seat cushion assembly.
- (b) Remove the hog rings.
- (c) Disengage the seat cushion cover hooks and remove the seat cushion frame.
- (d) Remove the seat cushion cover from the seat cushion pad.

9. REMOVE SEAT TRACK HANDLE

Using a screwdriver, remove the seat track handle.

HINT:

Tape the screwdriver tip before use.

10. REMOVE RECLINING CONNECTING PIPE

11. DISASSEMBLE OUTER AND INNER TRACK

- (a) Using a screwdriver, remove the E-ring.
- (b) Disassemble the outer track and inner track.