

PROBLEM SYMPTOMS TABLE

If a normal code is displayed during the DTC check but the problem still occurs, check the circuits for each problem symptom in the order given in the table below and proceed to the relevant troubleshooting page.

NOTICE:

When replacing Skid Control ECU, sensor or etc., turn the IG switch OFF.

Symptom	Suspect Area	See page
ABS does not operate	Only when 1. to 4. are all normal and the problem is still occurring, replace the Skid Control ECU. 1. Check the DTC reconfirming that the normal code is output. 2. IG power source circuit 3. Speed sensor circuit 4. Check the ABS actuator with a hand-held tester. If abnormal, check the hydraulic circuit for leakage (See page DI-49).	DI-3 DI-30 DI-15 BR-18
ABS does not operate efficiently	Only when 1. to 4. are all normal and the problem is still occurring, replace the Skid Control ECU. 1. Check the DTC reconfirming that the normal code is output. 2. Speed sensor circuit 3. Stop light switch circuit 4. Check the ABS actuator with a hand-held tester. If abnormal, check the hydraulic circuit for leakage (See page DI-49).	DI-3 DI-15 DI-33 BR-18
ABS warning light abnormal	1. ABS warning light circuit 2. Skid Control ECU	DI-39
BRAKE warning light abnormal	1. BRAKE warning light circuit 2. Skid Control ECU	DI-42
DTC check cannot be done	Only when 1. and 2. are all normal and the problem is still occurring, replace the Skid Control ECU. 1. ABS warning light circuit 2. Tc terminal circuit	DI-39 DI-44
Speed sensor signal check cannot be done	1. Ts terminal circuit 2. Skid Control ECU	DI-46