


BRAKE Warning Light Circuit

CIRCUIT DESCRIPTION

The BRAKE warning light comes on when the brake fluid is insufficient, the parking brake is applied or the EBD is defective.

WIRING DIAGRAM

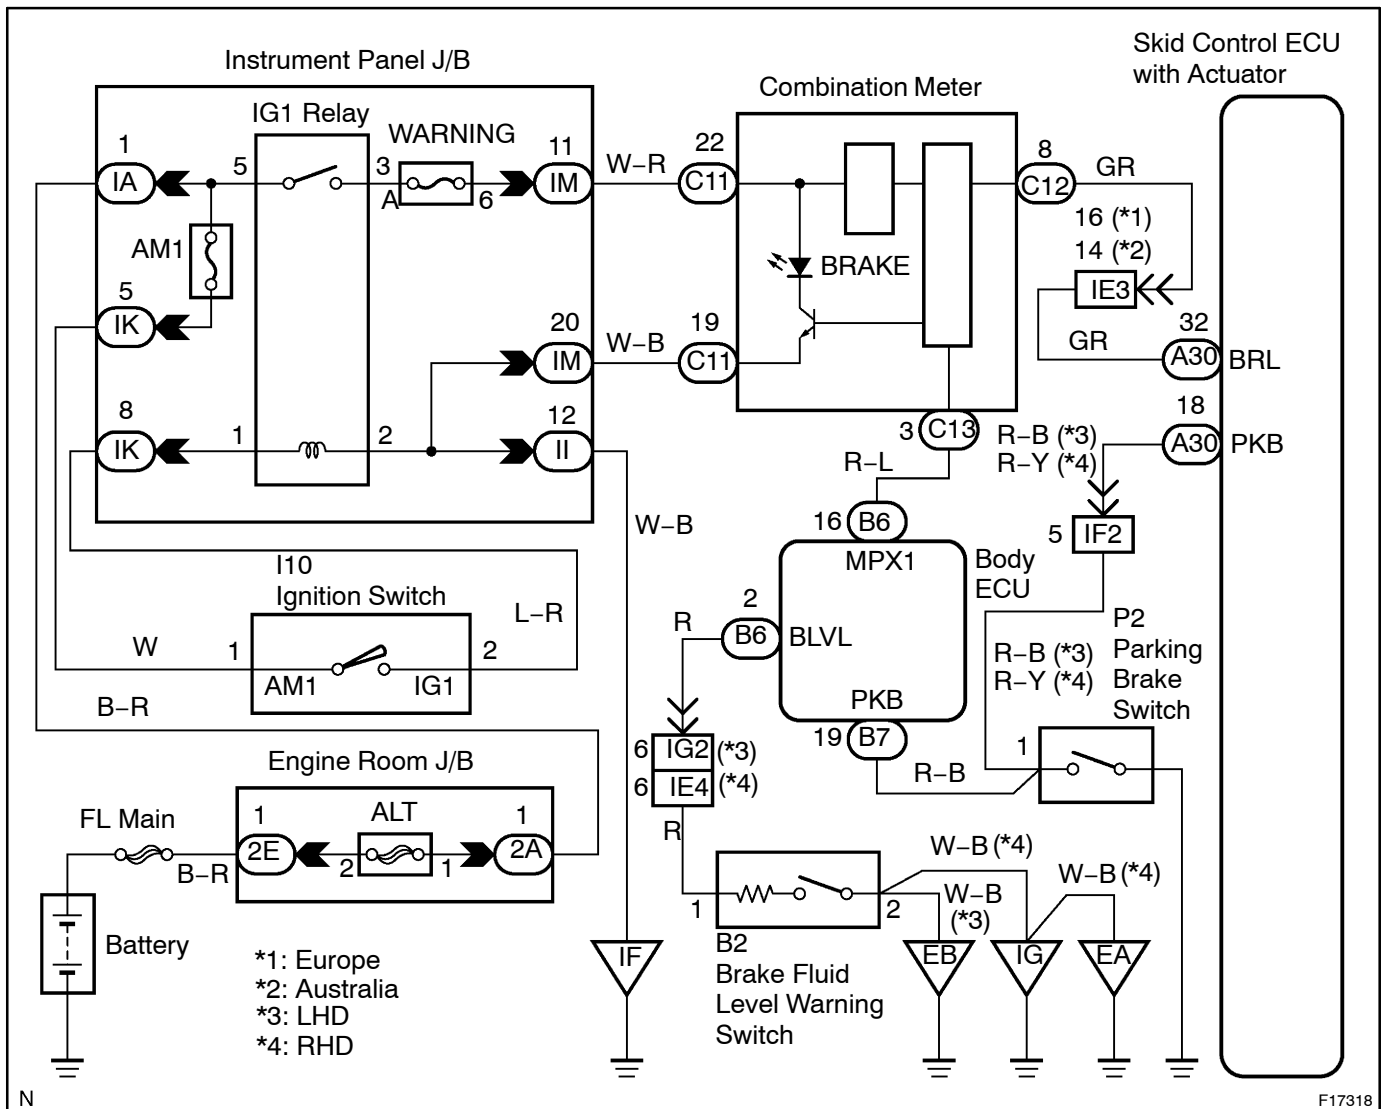

INSPECTION PROCEDURE

1 Check parking brake switch circuit ([See page BE-2](#)).

NG

Repair or replace parking brake switch circuit.

OK

2 Check brake fluid level warning switch circuit ([See page BE-2](#)).

NG

Repair or replace brake fluid level warning switch circuit.

OK

3 Is DTC output for ABS?

Check DTC on [page DI-3](#).

Yes

Repair circuit indicated by the output code.

No

4 Check BRAKE warning light.

See combination meter troubleshooting on [page BE-2](#).

NG

Repair or replace combination meter.

OK

Check and replace Skid Control ECU (ABS Actuator Assembly). ([See page IN-30](#))