


Tc Terminal Circuit

CIRCUIT DESCRIPTION


Connecting between terminal Tc and CG of the DLC3 causes the ECU to display DTC by flashing the ABS warning light.

WIRING DIAGRAM

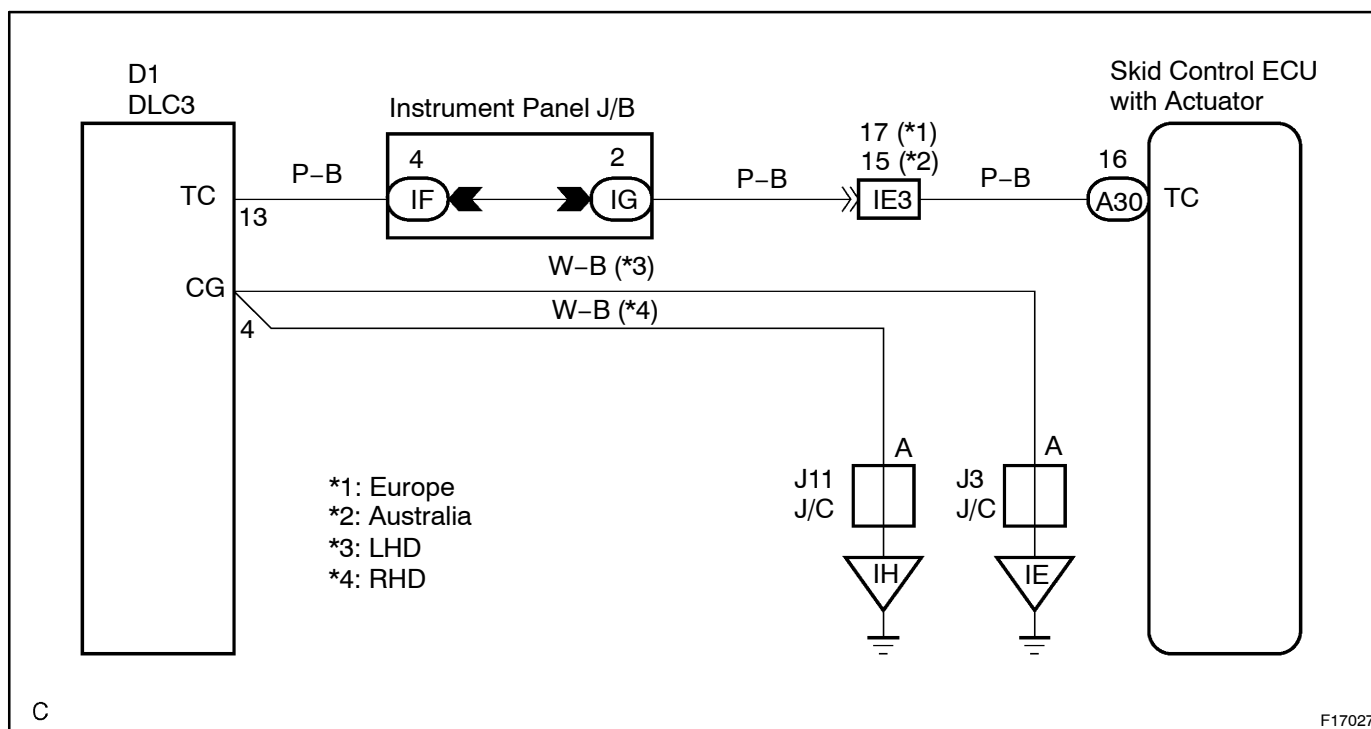

INSPECTION PROCEDURE

- 1 Check voltage between terminals Tc and CG of DLC3.

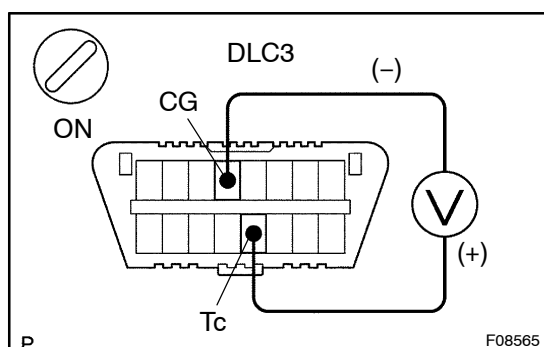

CHECK:

- Turn the ignition switch to ON.
- Measure the voltage between terminal Tc and CG of DLC3.

OK:

Voltage: 10 - 14 V

NG

Go to step 3.

OK

- 2** Check for open and short circuit in harness and connector between Skid Control ECU and DLC3, DLC3 and body ground ([See page IN-30](#)).


NG

Repair or replace harness or connector.

OK

Check and replace Skid Control ECU (ABS Actuator Assembly). ([See page IN-30](#))

- 3** Check ABS warning light.

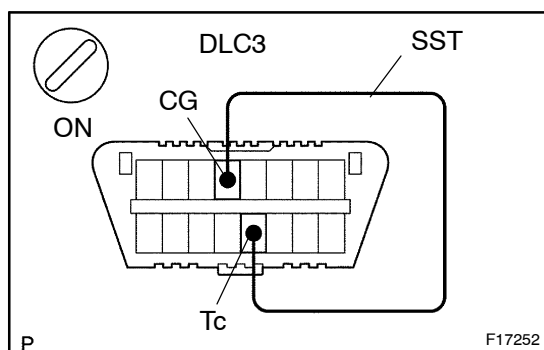

- Using SST, connect the terminal Tc and CG of the DLC3. SST 09843-18040
- Turn the ignition switch to ON.
- Check the ABS warning light.

OK:

ABS warning light blinks

OK

END

NG

Check and replace Skid Control ECU (ABS Actuator Assembly). ([See page IN-30](#))