

DTC	C1201 / 51	Engine Control System Malfunction
------------	-------------------	--

CIRCUIT DESCRIPTION

If any trouble occurs in the engine control system, the ECU prohibits TRC and VSC control.

DTC No.	DTC Detecting Condition	Trouble Area
C1201 / 51	At the engine speed of 500 rpm, a trouble signal in the engine control system continues for 5 sec. or more.	• Engine control system

INSPECTION PROCEDURE

1	Check the DTC for the engine (See Pub. No. RM733E, page DI-18).
----------	--

***1**

Repair engine control system according to the code output.

***2**

Check for engine ECU connected to malfunction indicator light.

*1: Output NG code

*2: Malfunction indicator light remains ON