


DTC	C1249 / 49	Stop Light Switch Circuit
-----	------------	---------------------------

CIRCUIT DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
C1249 / 49	ECU terminal IG1 voltage is 9.5 to 17.2 V and ABS is in non-operation, the open circuit of stop light switch circuit continues for 0.3 sec. or more.	- Stop light switch - Stop light switch circuit - Skid Control ECU

WIRING DIAGRAM

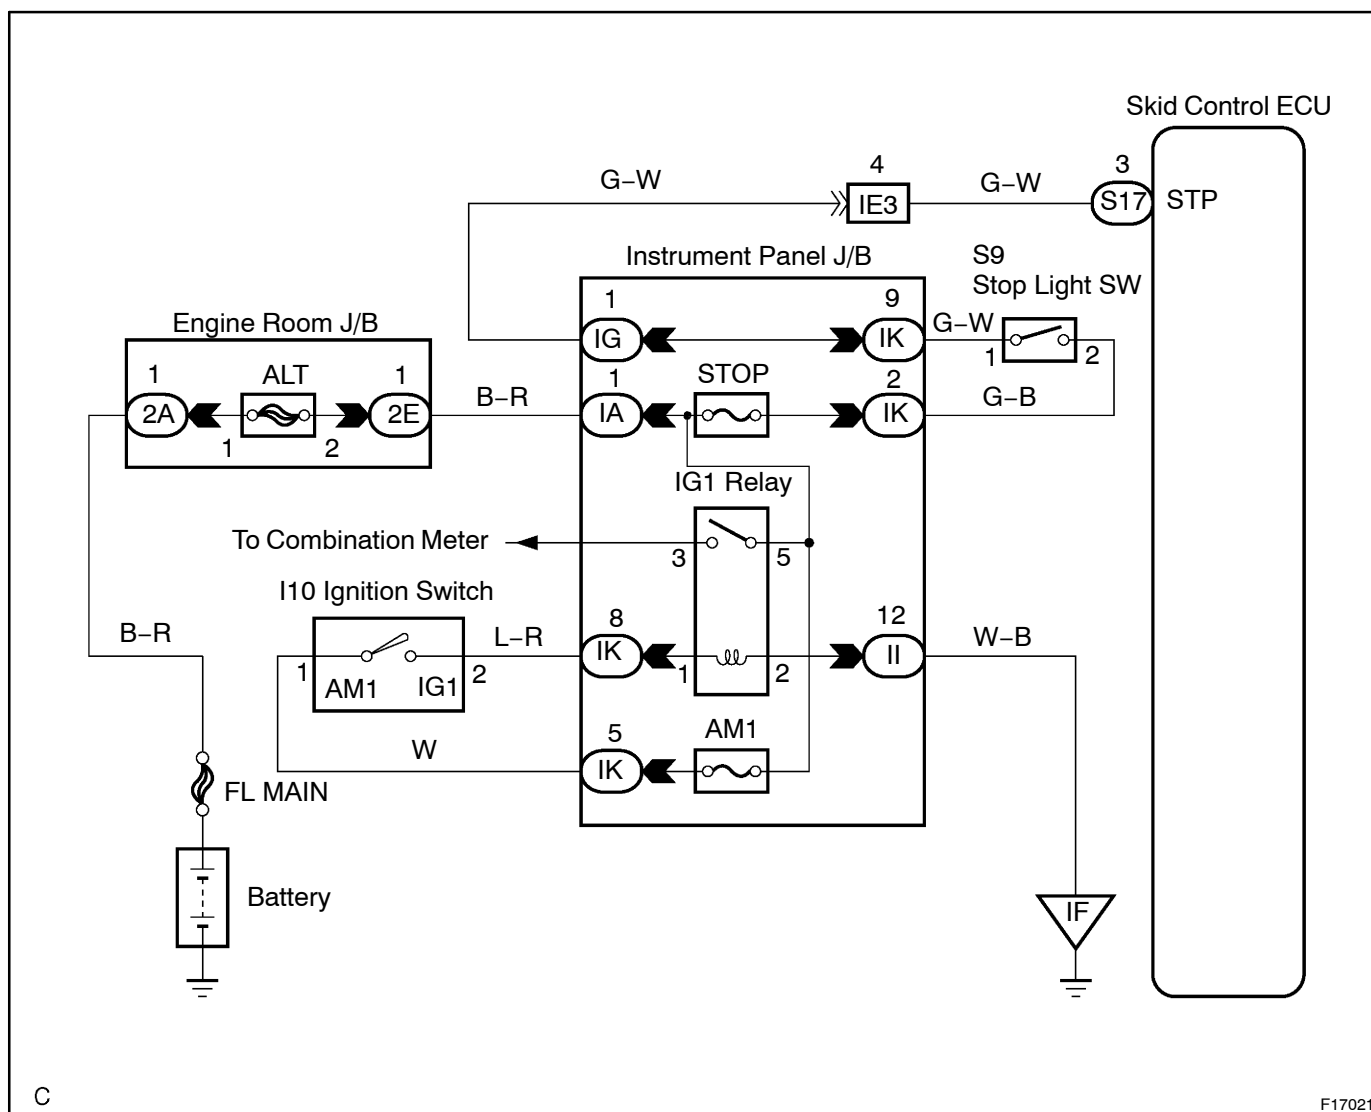

INSPECTION PROCEDURE

1 Check operation of the stop light switch.

CHECK:

Check that the stop light lights up when brake pedal is depressed and turns off when the brake pedal is released.

OK

Go to step 3.

NG


2 Check stop light circuit.

NG

Repair or replace stop light circuit.

OK

3 Check voltage between terminal STP of skid control ECU and body ground.

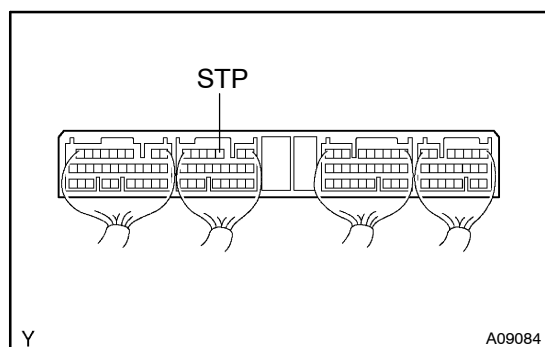

PREPARATION:

Remove skid control ECU with connectors still connected.

CHECK:

Measure voltage between terminal STP of skid control ECU and body ground when brake pedal is depressed.

OK:

Voltage: 8 – 14 V

OK

Check and replace skid control ECU.

NG

4**Check for open circuit in harness and connector between skid control ECU and stop light switch ([See page IN-30](#)).****NG****Repair or replace harness or connector.****OK****Proceed to next circuit inspection shown on problem symptoms table ([See page DI-73](#)).**