


BRAKE Warning Light Circuit

CIRCUIT DESCRIPTION

The brake warning light lights up when the brake fluid is insufficient, the parking brake is applied or the EBD is defective.

WIRING DIAGRAM

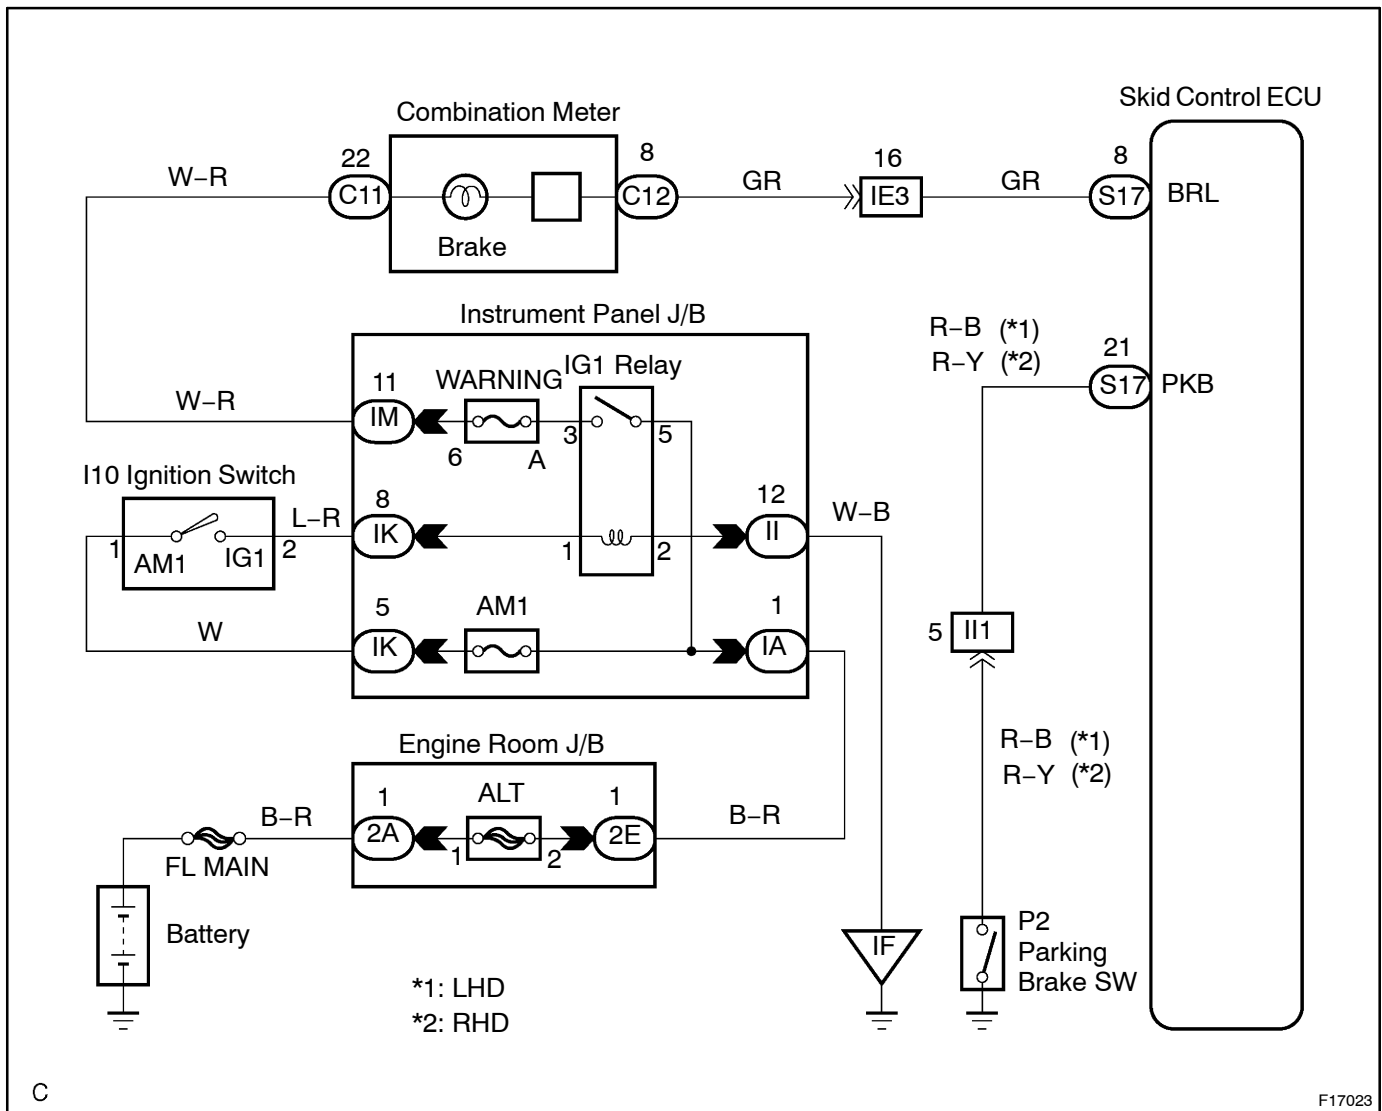

INSPECTION PROCEDURE

1 Check parking brake switch circuit.

NG

Repair or replace parking brake switch circuit.

OK

2 Is DTC output for ABS?

Check DTC on [page DI-53](#).

YES

Repair circuit indicated by the output code.

NO

3 Check the brake warning light.

See combination meter troubleshooting.

NG

Repair or replace combination meter.

OK

Check and replace skid control ECU.