

TOYOTA

1FZ-F ENGINE

REPAIR MANUAL

Jan., 1992

FOREWORD

This repair manual has been prepared to provide information covering general service repairs for the 1FZ-F engine equipped in the TOYOTA LAND CRUISER.

Applicable models: FZJ70, 73, 75, 80 series

Please note that the publications below have also been prepared as relevant service manuals for the components and system in this engine.

Manual Name	Pub. No.
• 1FZ-F Engine Emission Control Repair Manual	ERM086E

All information in this manual is based on the latest product information at the time of publication. However, specifications and procedures are subject to change without notice.

TOYOTA MOTOR CORPORATION

INTRODUCTION	IN
ENGINE	EG
IGNITION SYSTEM	IG
STARTING SYSTEM	ST
CHARGING SYSTEM	CH

INTRODUCTION

HOW TO USE THIS MANUAL	IN- 2
IDENTIFICATION INFORMATION	IN- 5
GENERAL REPAIR INSTRUCTIONS	IN- 5
ABBREVIATIONS USED IN THIS MANUAL	IN- 8
STANDARD BOLT TORQUE SPECIFICATIONS	IN- 9

IN

HOW TO USE THIS MANUAL INDEX

IN002-05

An INDEX is provided on the first page of each section to guide you to the item to be repaired. To assist you in finding your way through the manual, the Section Title and major heading are given at the top of every page.

GENERAL DESCRIPTION

At the beginning of each section, a General Description (Precautions) is given that pertains to all repair operations contained in that section.

Read these precautions before starting any repair task.

TROUBLESHOOTING

TROUBLESHOOTING tables are included for each system to help you diagnose the problem and find the cause.


PREPARATION

Preparation lists the SST (Special Service Tools), recommended tools, equipment, lubricant and SSM (Special Service Materials) which should be prepared before beginning the operation and explains the purpose of each one.

REPAIR PROCEDURES

Most repair operations begin with an overview illustration. It identifies the components and shows how the parts fit together.

Example:

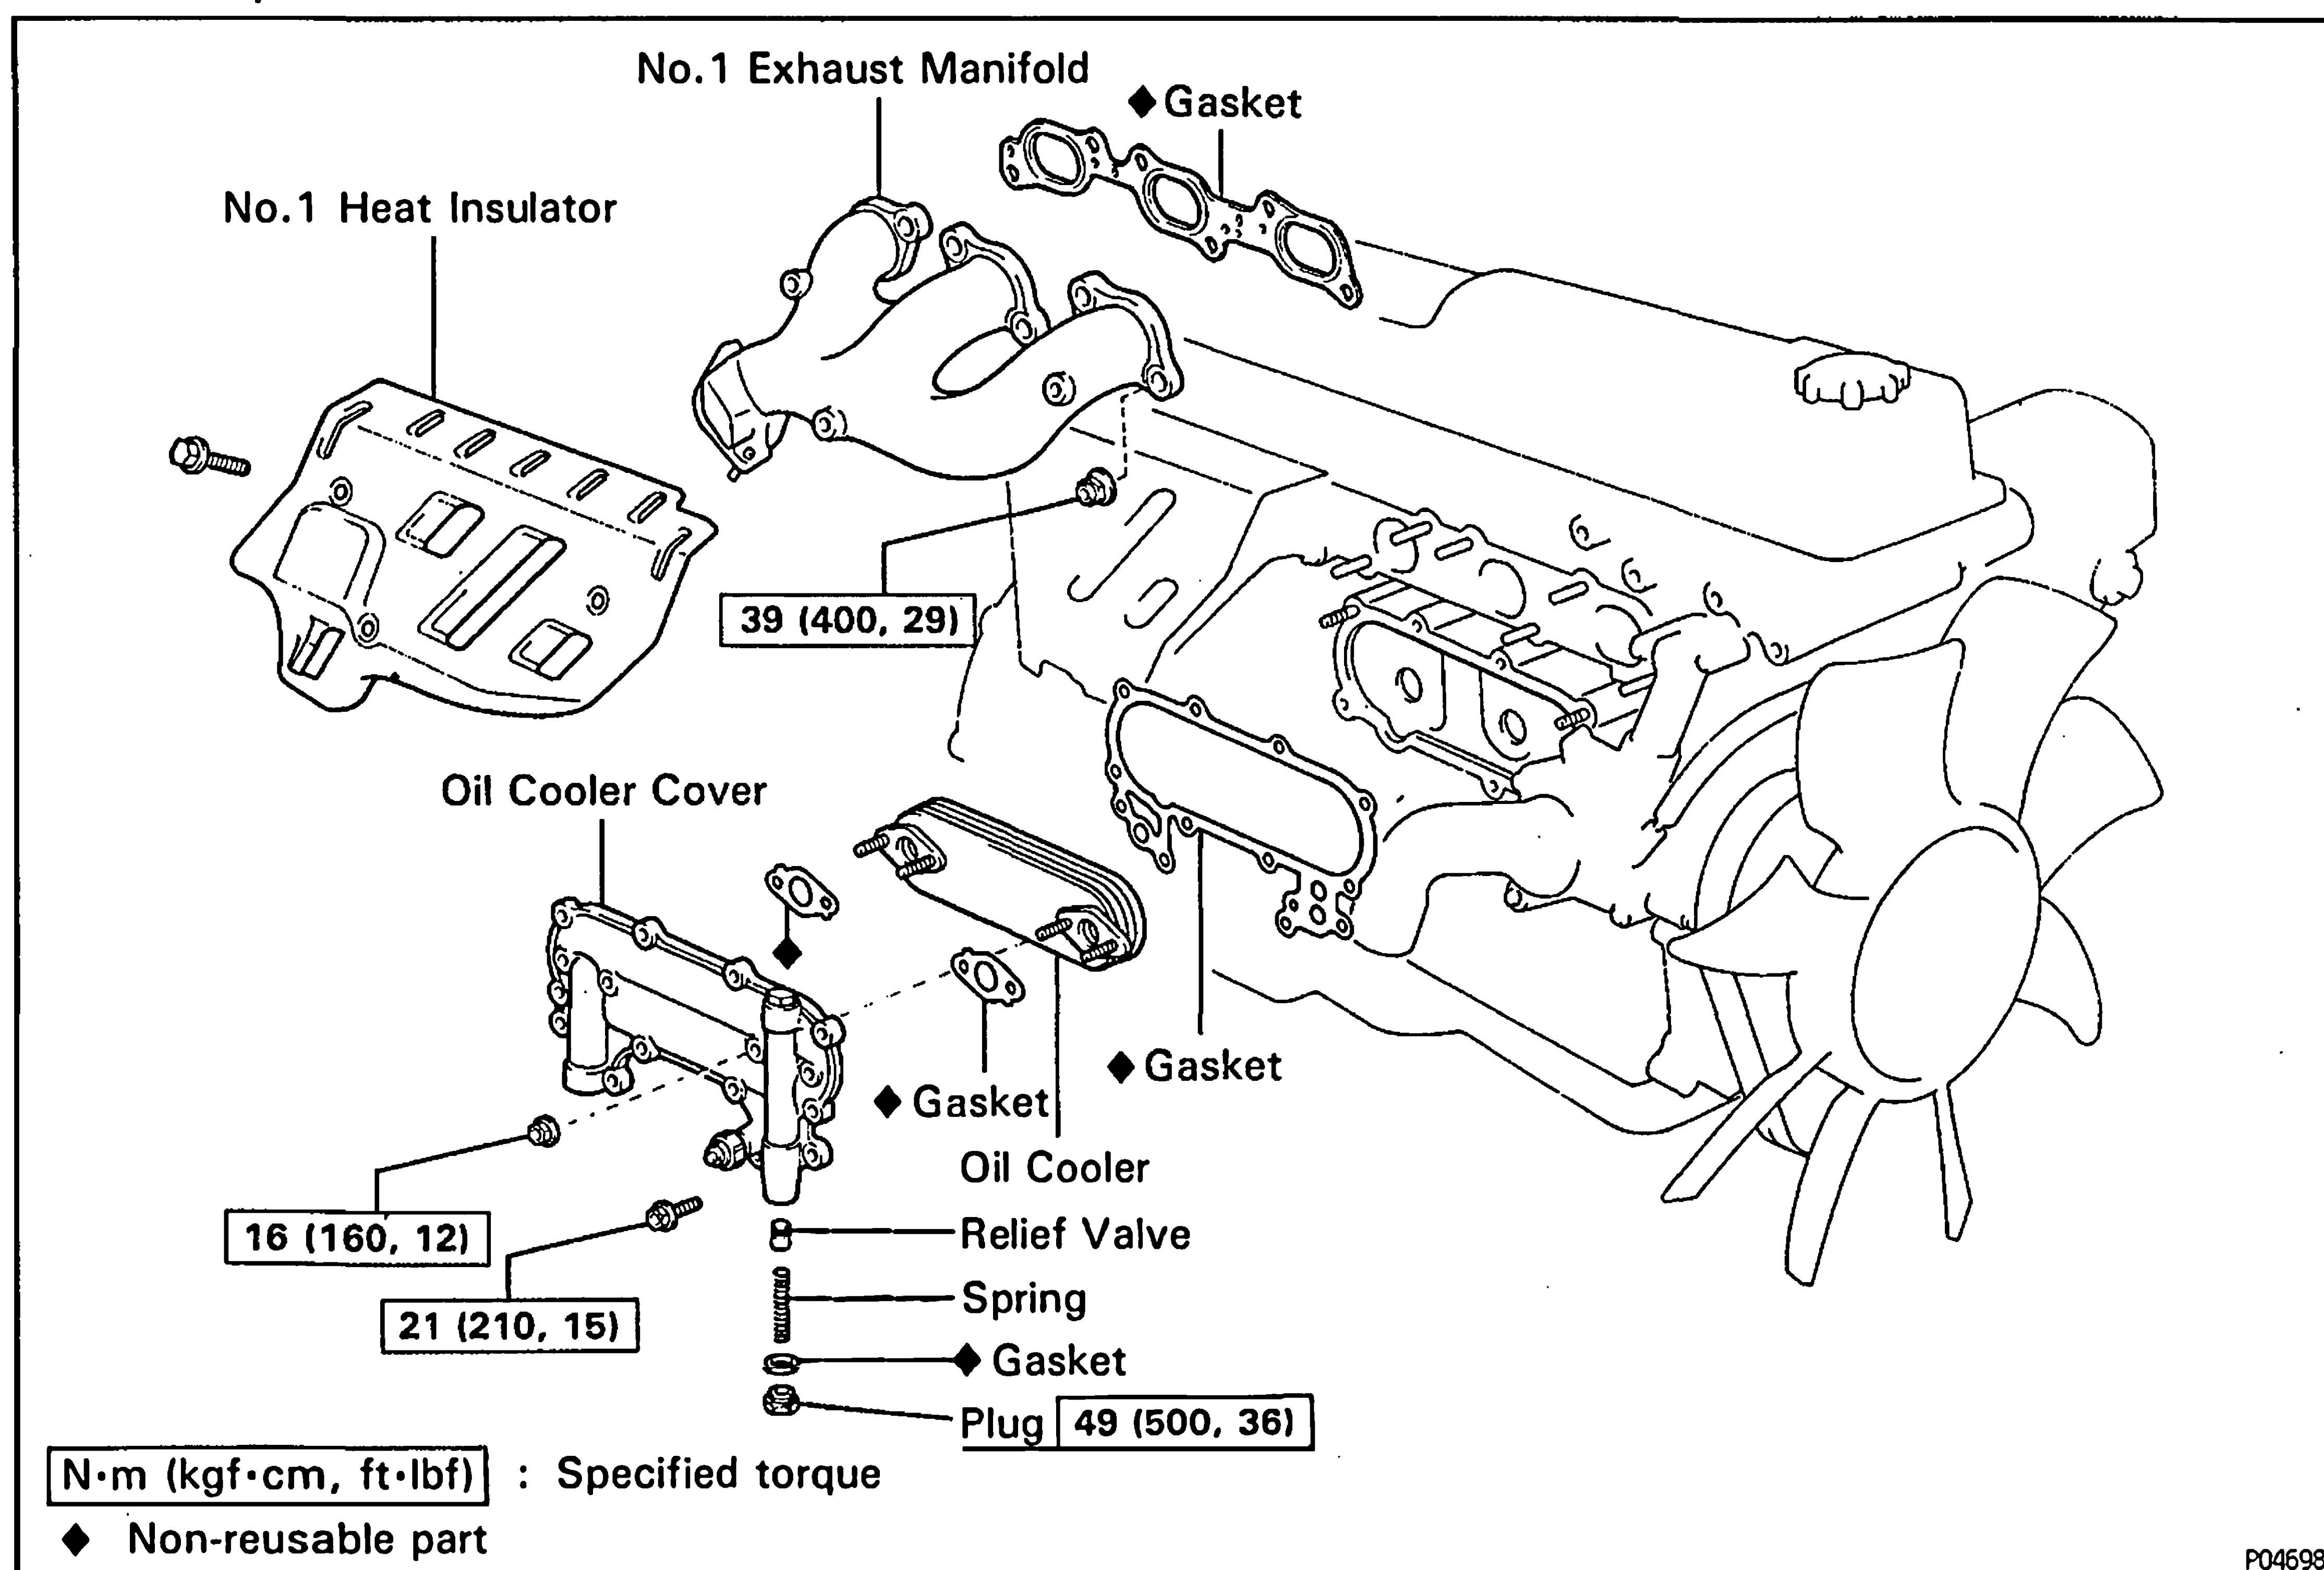

The procedures are presented in a step—by—step format:

- The illustration shows what to do and Where to do it.
- The task heading tells what to do.
- The detailed text tells how to perform the task and gives other information such as specifications and warnings.

Example:

IN

Task heading: what to do

6. INSTALL CRANKSHAFT PULLEY

(a) Using SST, install the bolt.
 SST 09213-54015 (90119-08126)

Set part No. Component part No.

Detailed text: how to do task

(b) Install the bolt.
Torque: 30 N·m (310 kgf·cm, 22 ft·lbf)

Specification

Illustration: what to do and where

V00801

This format provides the experienced technician with a FAST TRACK to the information needed. The upper case task heading can be read at a glance when necessary, and the text below it provides detailed information. Important specifications and warnings always stand out in bold type.

REFERENCES

References have been kept to a minimum. However, when they are required you are given the page to refer to.

SPECIFICATIONS

Specifications are presented in bold type throughout the text where needed. You never have to leave the procedure to look up your specifications. They are also found at the end of each section, for quick reference.

CAUTIONS, NOTICES, HINTS:


- **CAUTIONS** are presented in bold type, and indicate there is a possibility of injury to you or other people.
- **NOTICES** are also presented in bold type, and indicate the possibility of damage to the components being repaired.
- **HINTS** are separated from the text but do not appear in bold. They provide additional information to help you efficiently perform the repair.

SI UNIT

The UNIT given in this manual are primarily expressed with the SI UNIT (International System of Unit), and alternately expressed in the metric system and in the yard/pound system.

Example:

Torque: 30 N·m (310 kgf·cm, 22 ft·lbf)

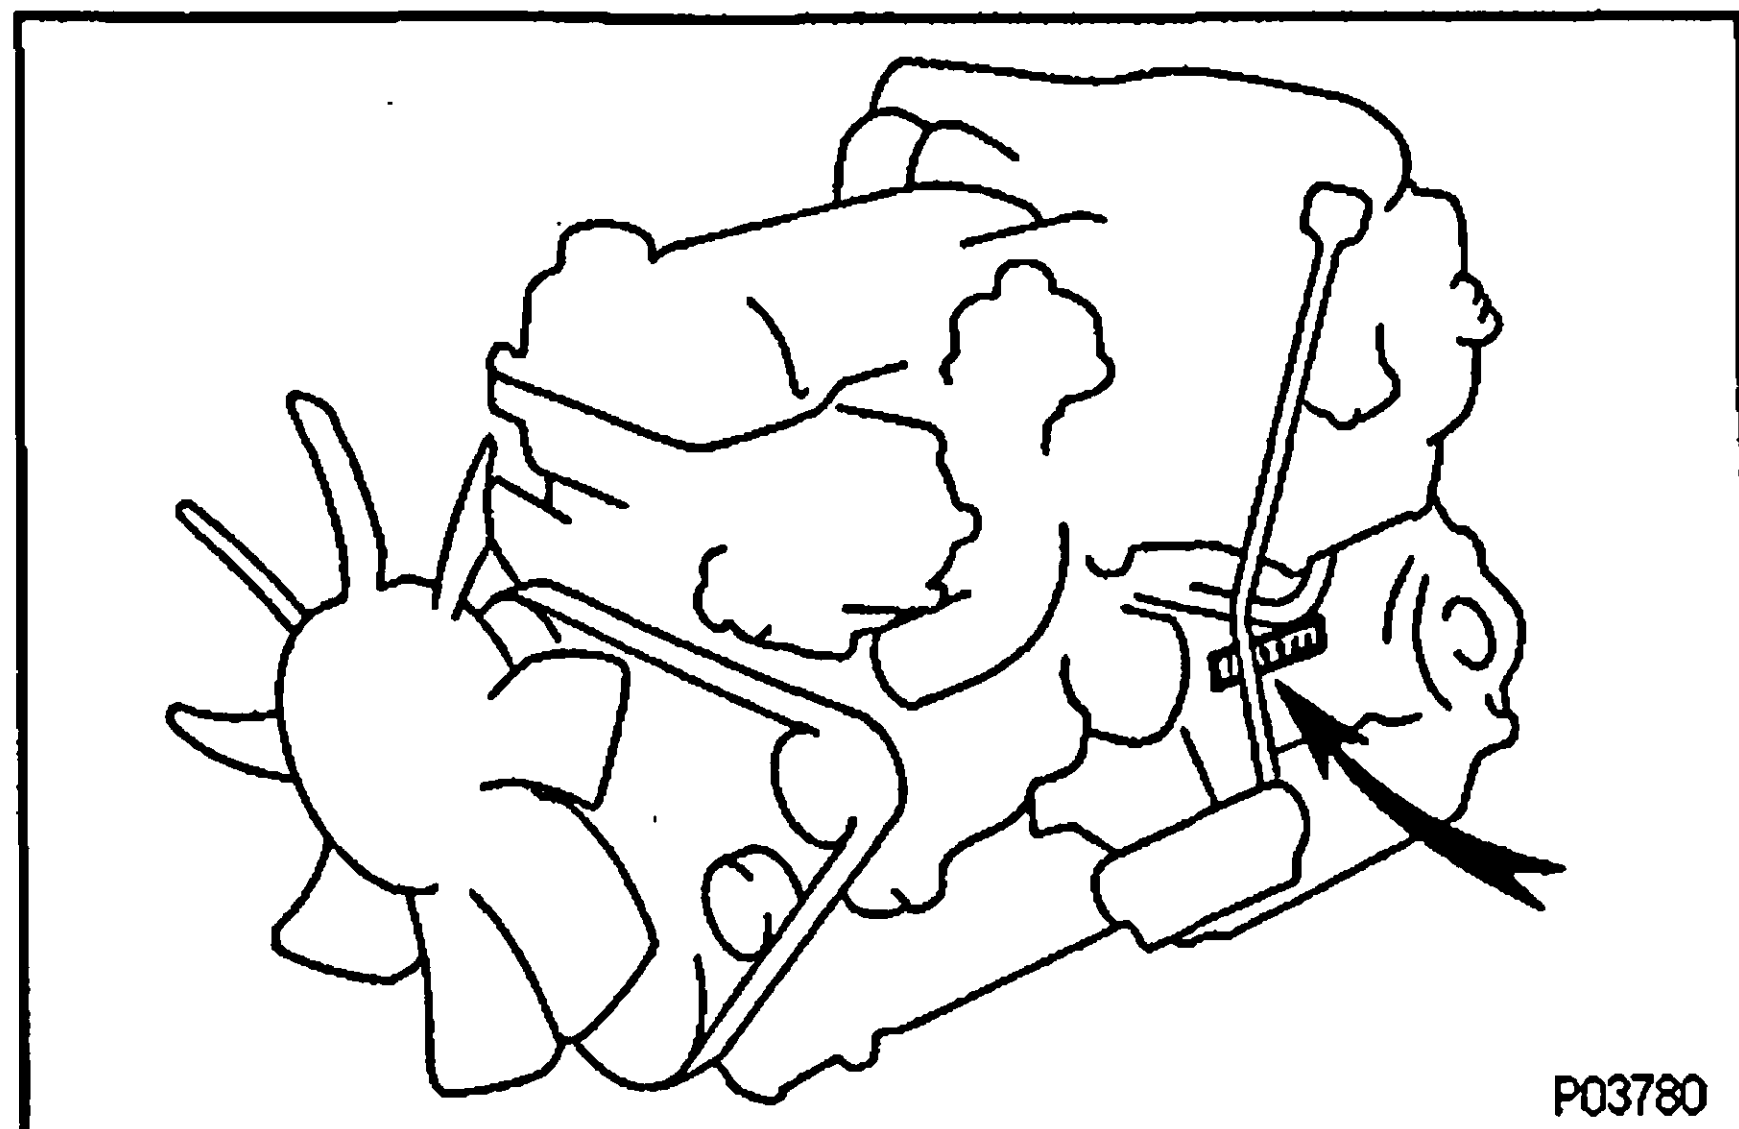


IDENTIFICATION INFORMATION

ENGINE SERIAL NUMBER

IN004-02

The engine serial number is stamped on the engine block as shown.


IN

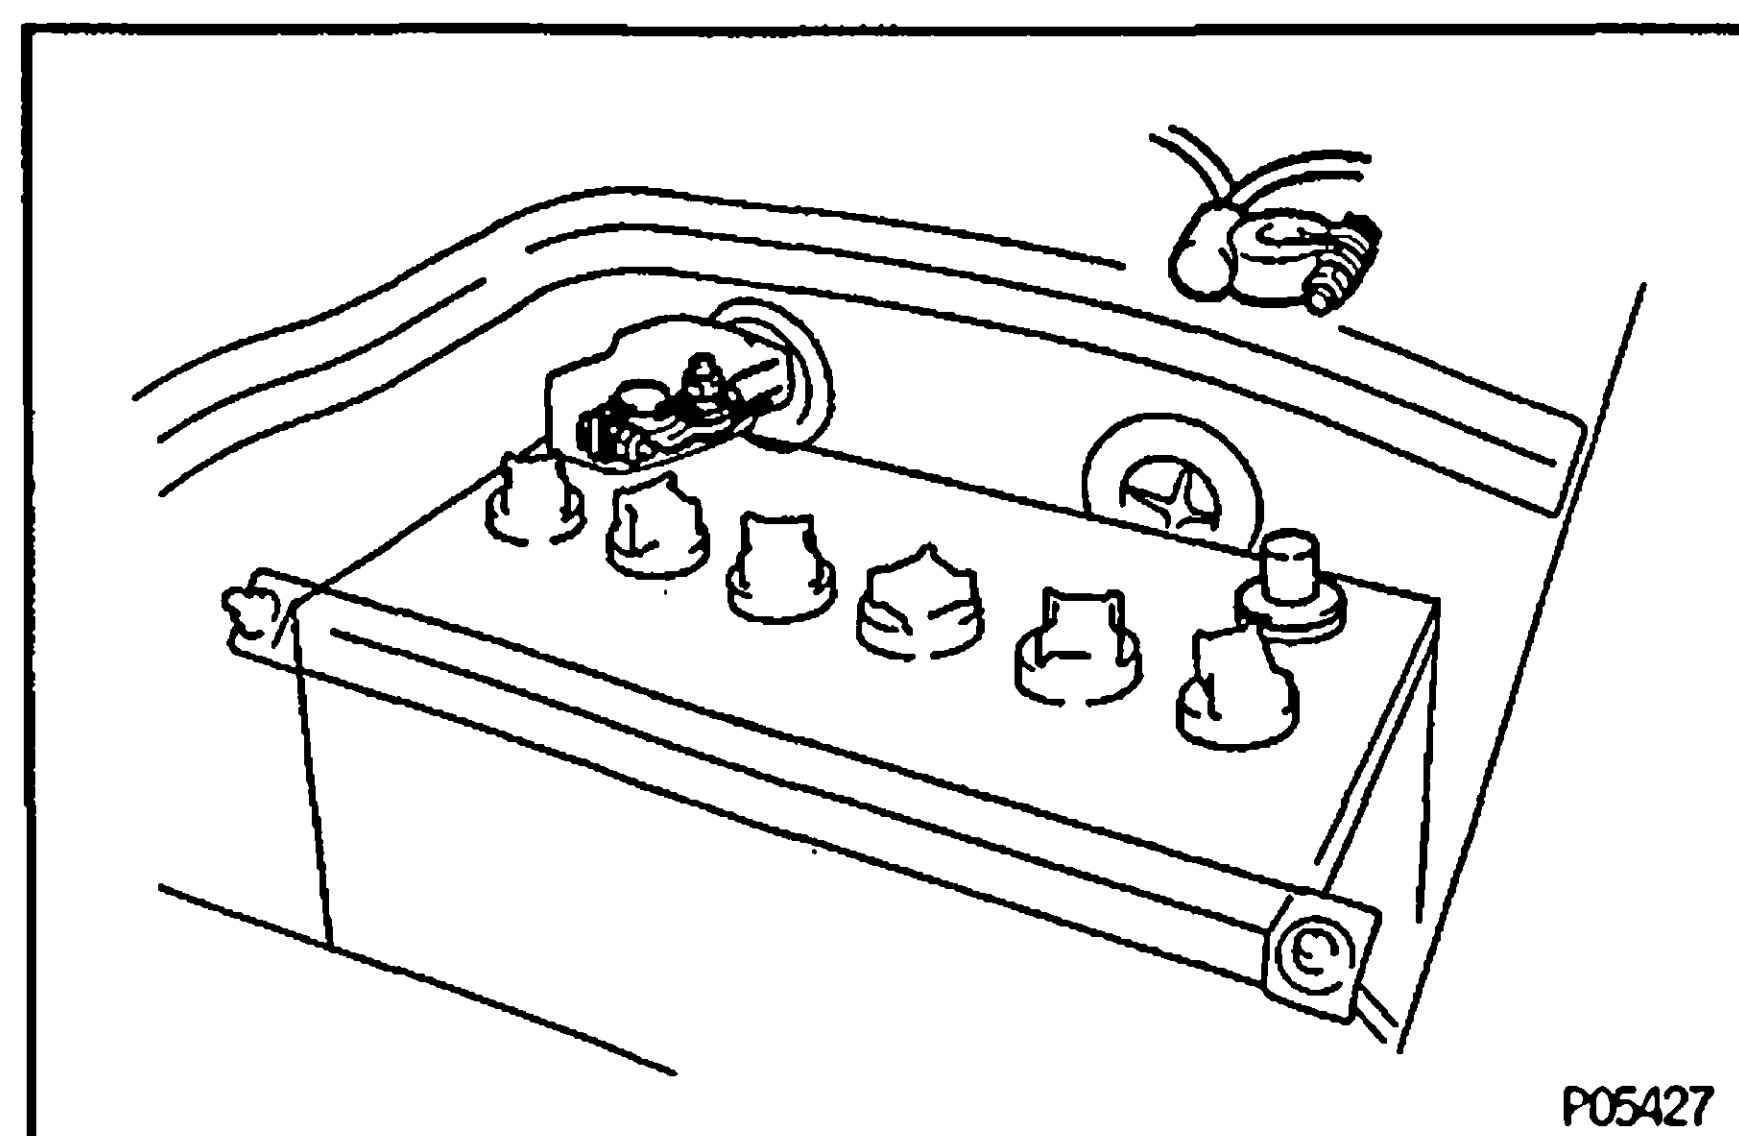

GENERAL REPAIR INSTRUCTIONS

IN00W-04

1. Use fender, seat and floor covers to keep the vehicle clean and prevent damage.
2. During disassembly, keep parts in the appropriate order to facilitate reassembly.
3. Observe the following:
 - (a) Before performing electrical work, disconnect the negative cable from the battery terminal.
 - (b) If it is necessary to disconnect the battery for inspection or repair, always disconnect the cable from the negative (—) terminal which is grounded to the vehicle body.
 - (c) To prevent damage to the battery terminal post, loosen the terminal nut and raise the cable straight up without twisting or prying it.
 - (d) Clean the battery terminal posts and cable terminals with a shop rag. Do not scrape them with a file or other abrasive objects.
 - (e) Install the cable terminal to the battery post with the nut loose, and tighten the nut after installation. Do not use a hammer to tap the terminal onto the post.
 - (f) Be sure the cover for the positive (+) terminal is properly in place.
4. Check hose and wiring connectors to make sure that they are secure and correct.
5. Non—reusable parts
 - (a) Always replace cotter pins, gaskets, O—rings and oil seals etc. with new ones.
 - (b) Non—reusable parts are indicated in the component illustrations by the "◆" symbol.

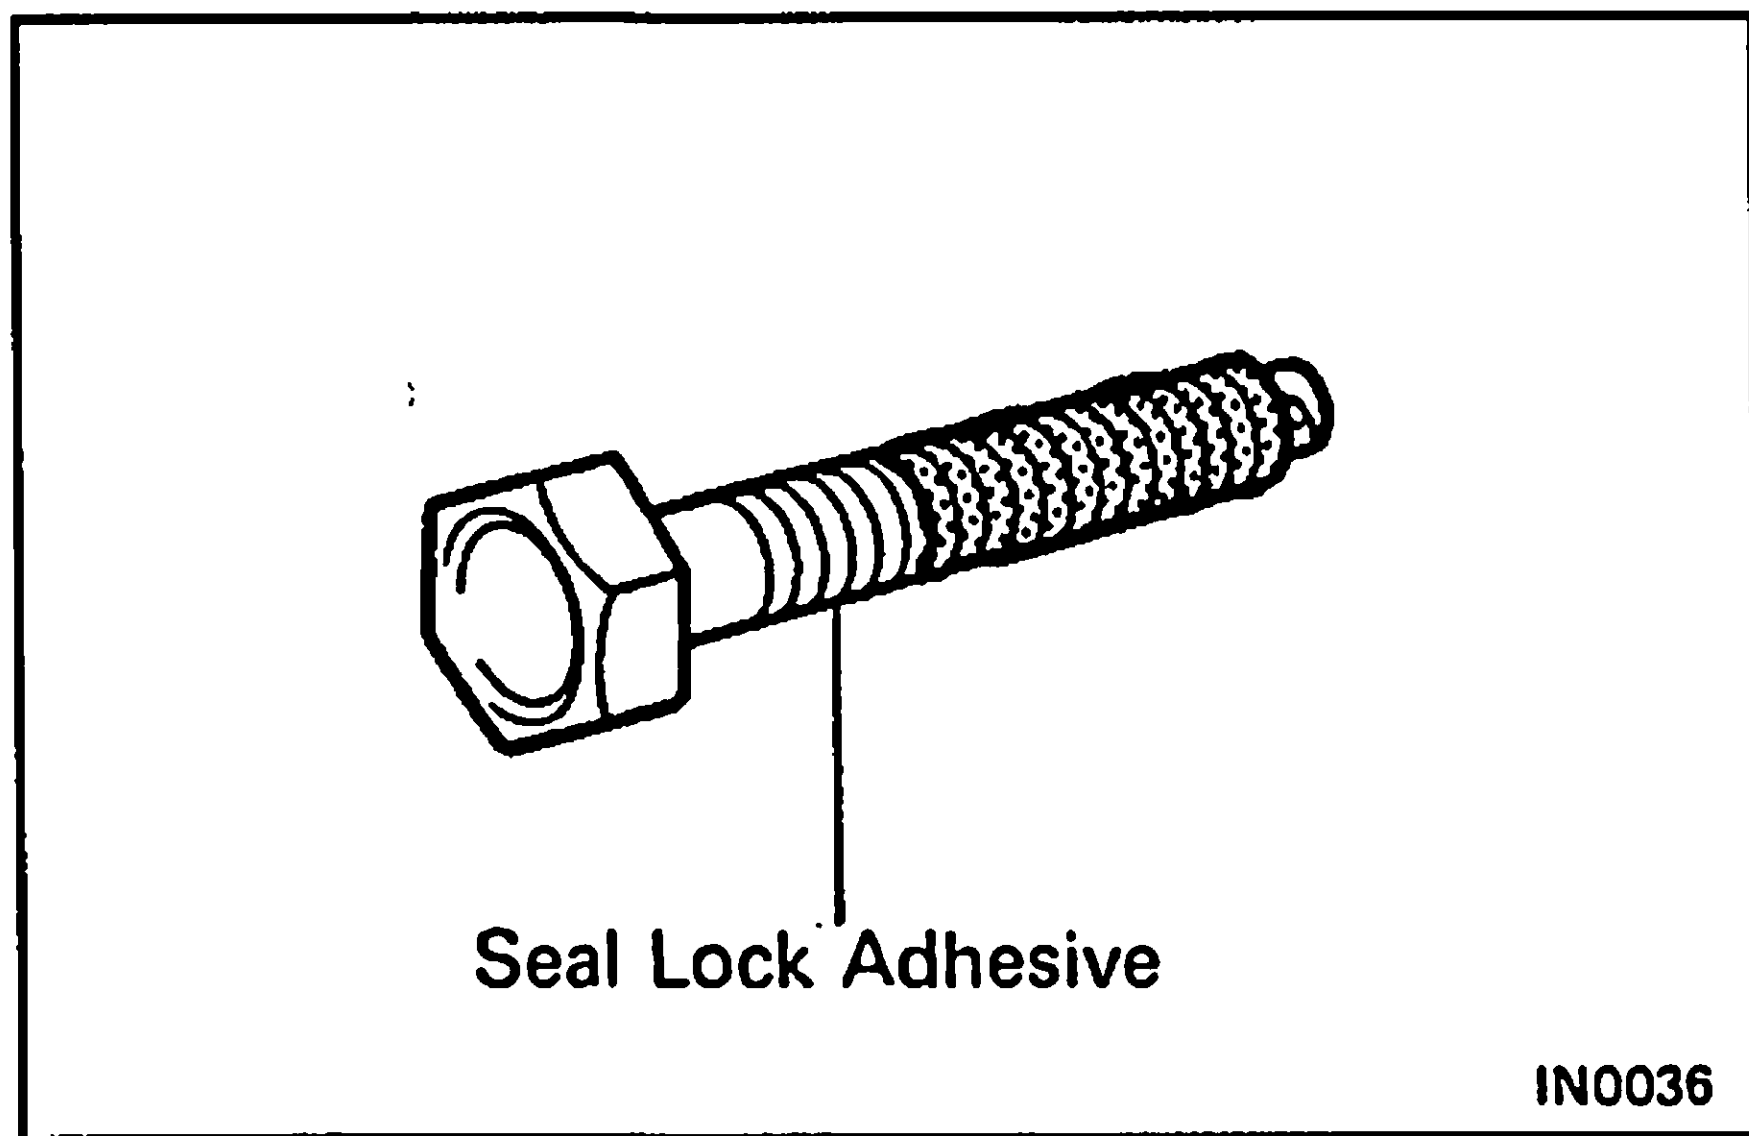

6. Precoated parts


Precoated parts are bolts and nuts, etc. that are coated with a seal lock adhesive at the factory.

- (a) If a precoated part is retightened, loosened or caused to move in any way, it must be recoated with the specified adhesive.
- (b) When reusing precoated parts, clean off the old adhesive and dry with compressed air. Then apply the specified seal lock adhesive to the bolt, nut or threads.
- (c) Precoated parts are indicated in the component illustrations by the "★" symbol.

7. When necessary, use a sealer on gaskets to prevent leaks.

8. Carefully observe all specifications for bolt tightening torques. Always use a torque wrench.

9. Use of special service tools (SST) and special service materials (SSM) may be required, depending on the nature of the repair. Be sure to use SST and SSM where specified and follow the proper work procedure. A list of SST and SSM can be found at the back of this manual.

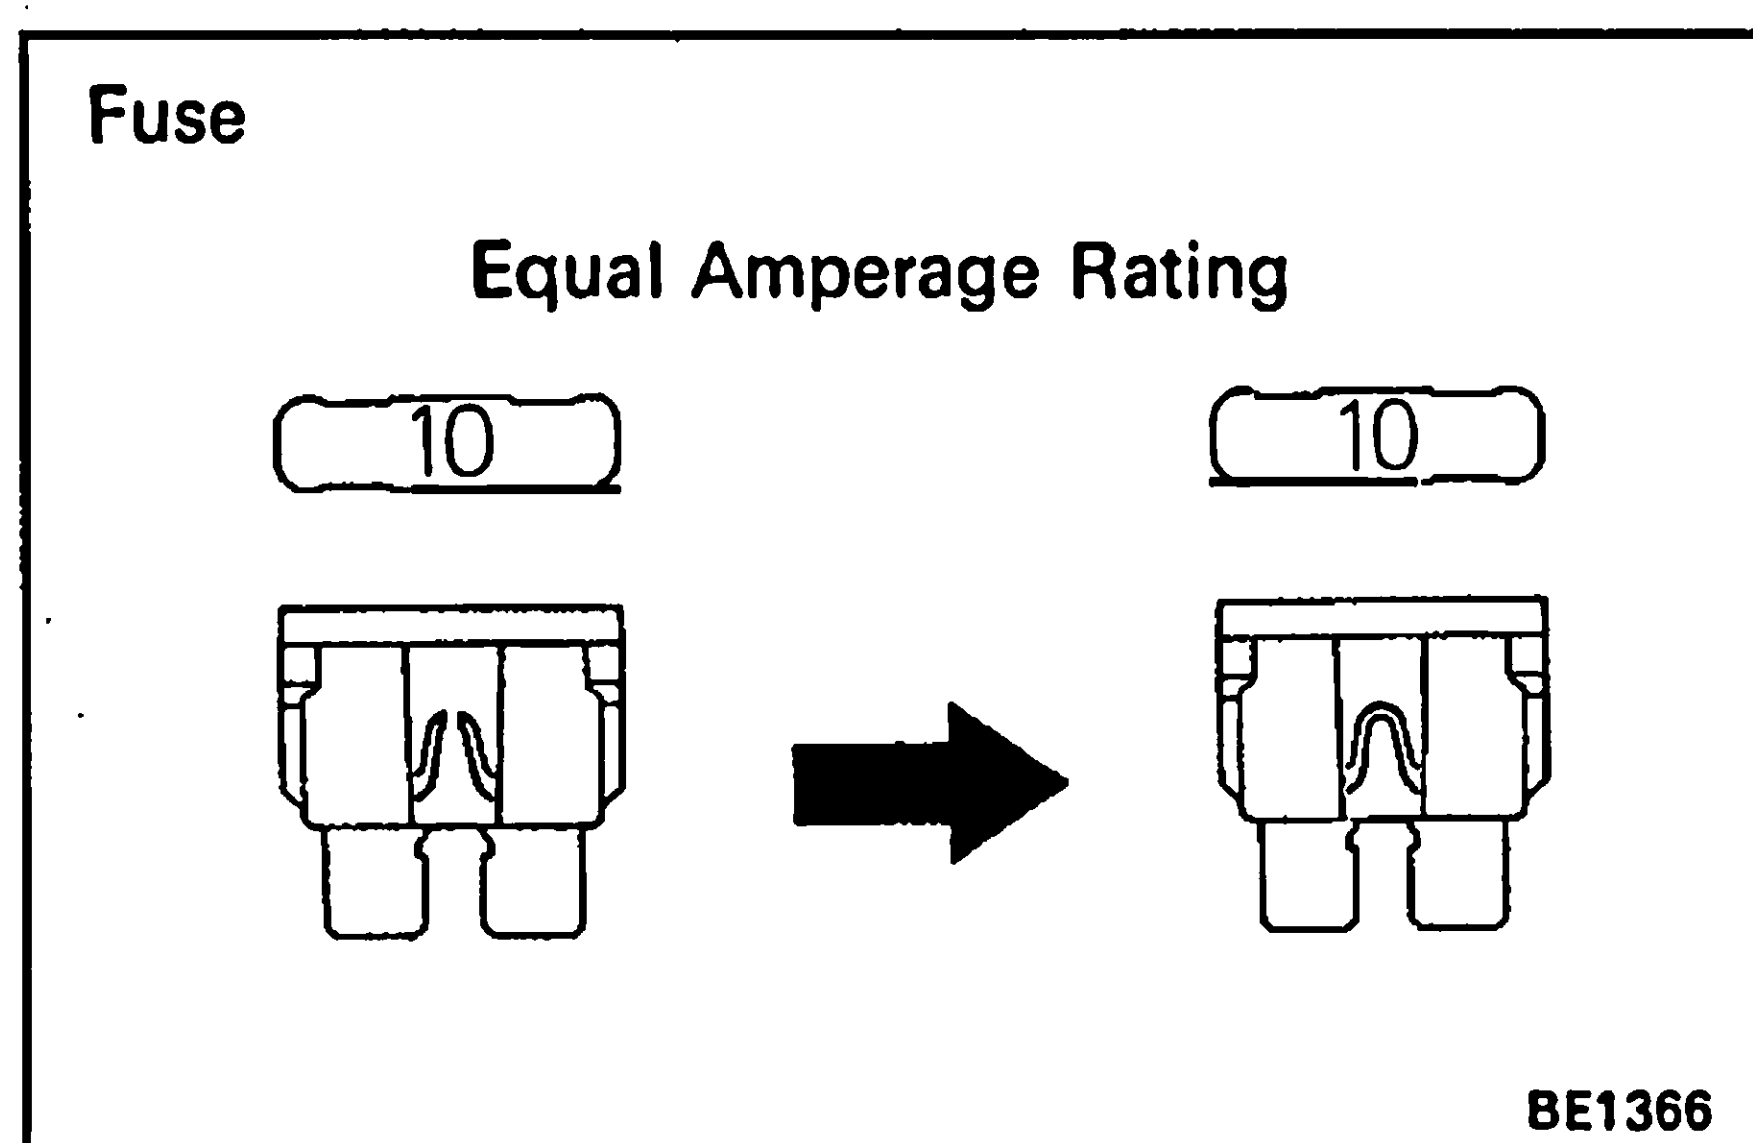




10. When replacing fuses, be sure the new fuse has the correct amperage rating. DO NOT exceed the rating or use one with a lower rating.

11. Care must be taken when jacking up and supporting the vehicle. Be sure to lift and support the vehicle at the proper locations.

- (a) If the vehicle is to be jacked up only at the front or rear end, be sure to block the wheels at the opposite end in order to ensure safety.
- (b) After the vehicle is jacked up, be sure to support it on stands. It is extremely dangerous to do any work on a vehicle raised on a jack alone, even for a small job that can be finished quickly.

12. Observe the following precautions to avoid damage to the parts:

- (a) Do not open the cover or case of the ECU unless absolutely necessary. (If the IC terminals are touched, the IC may be destroyed by static electricity.)

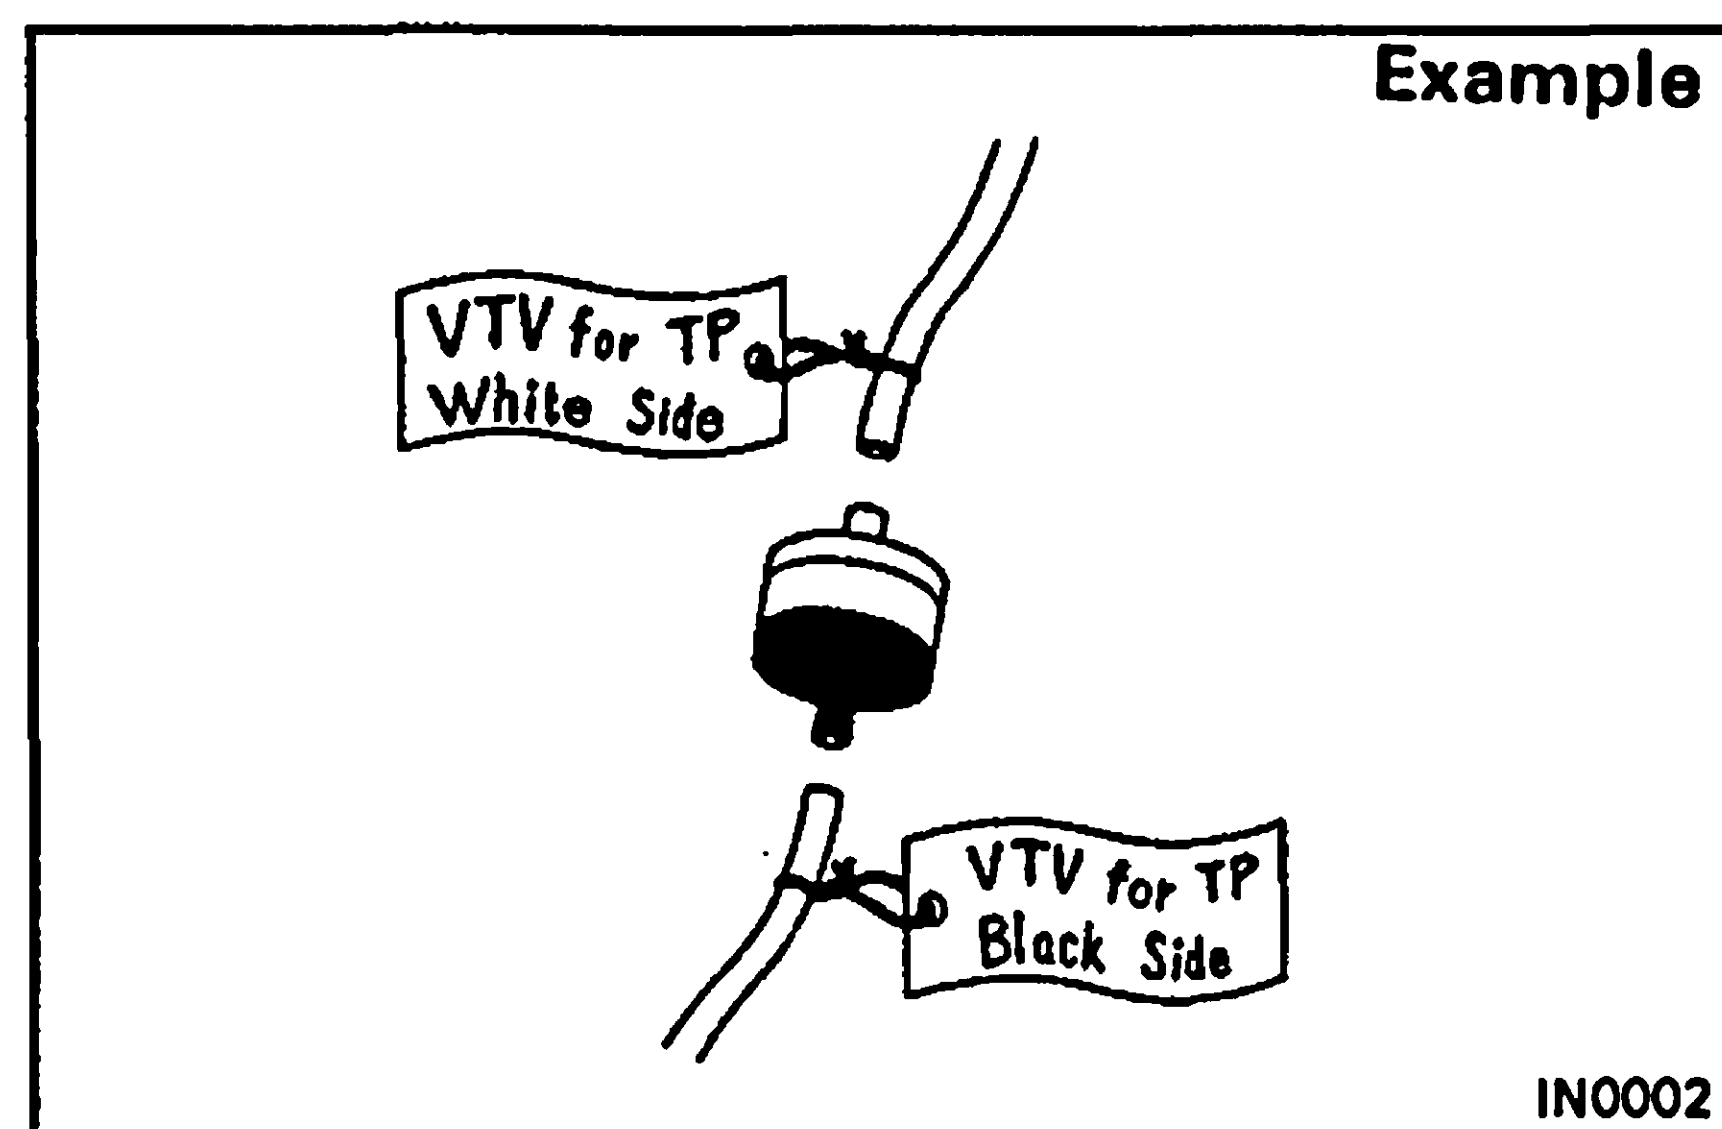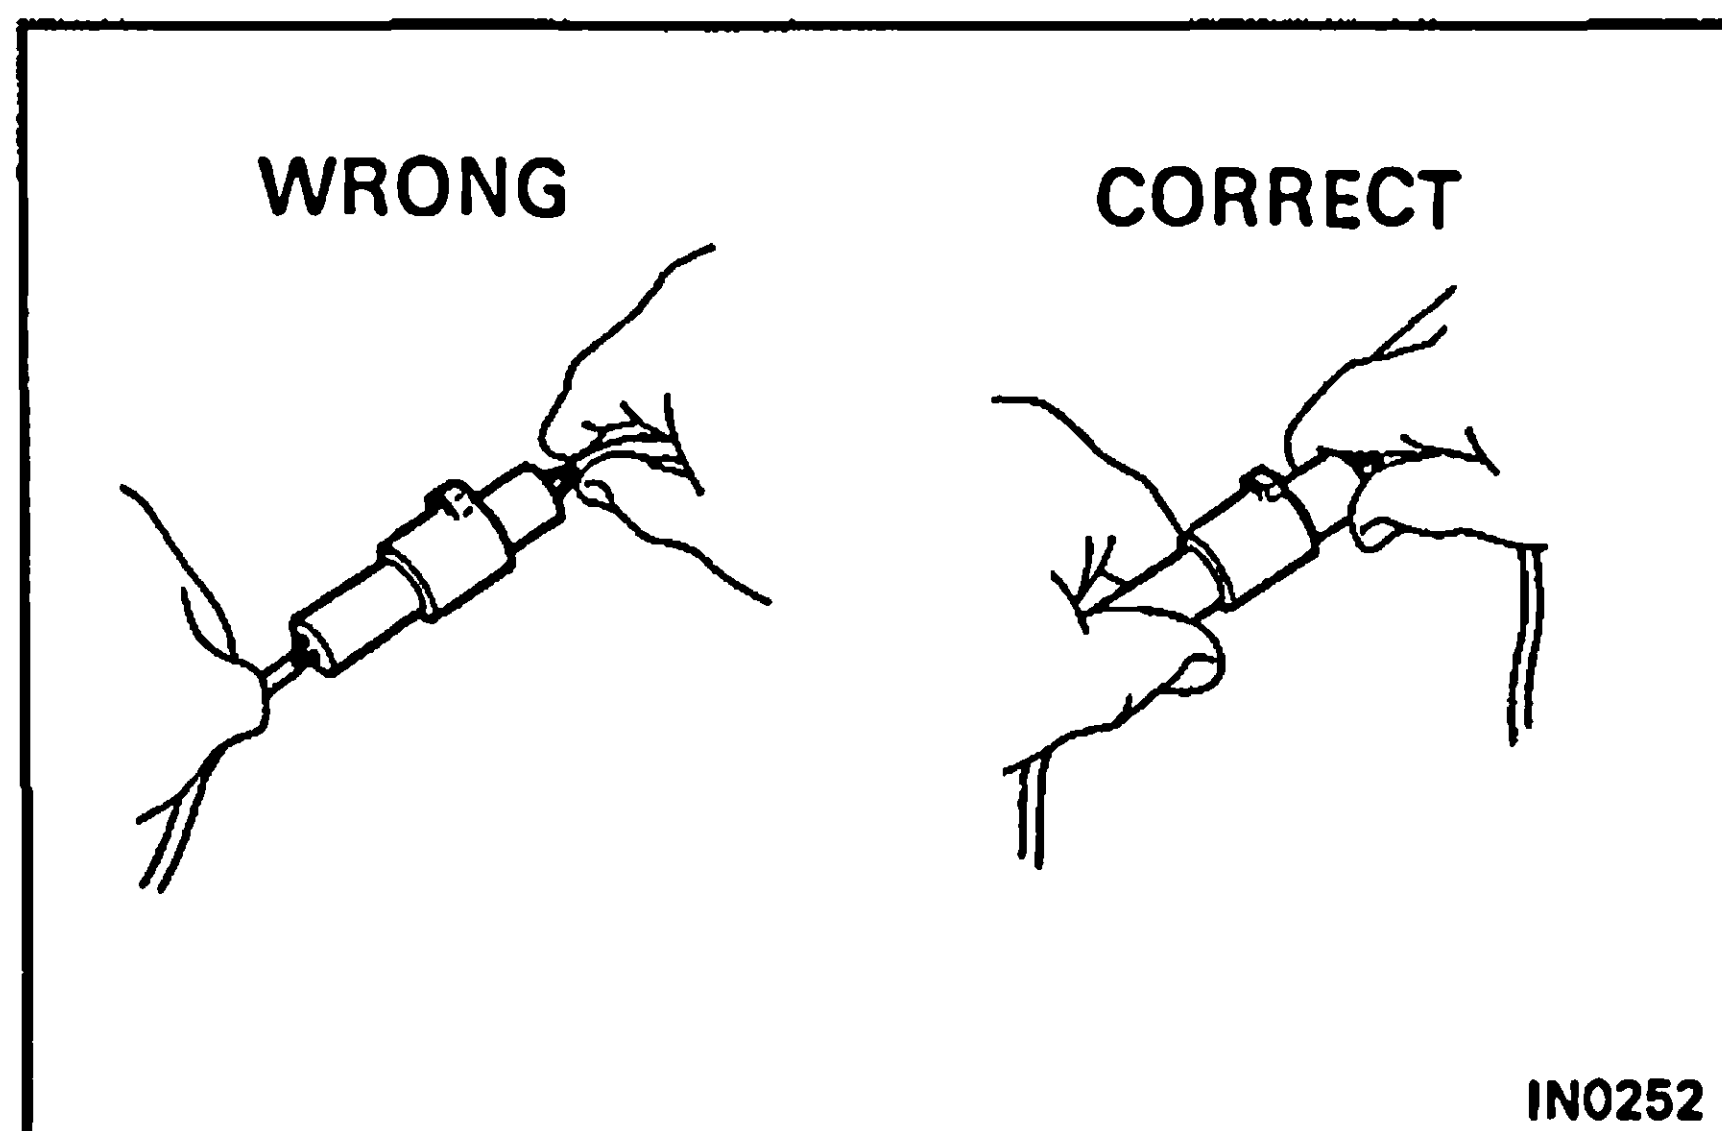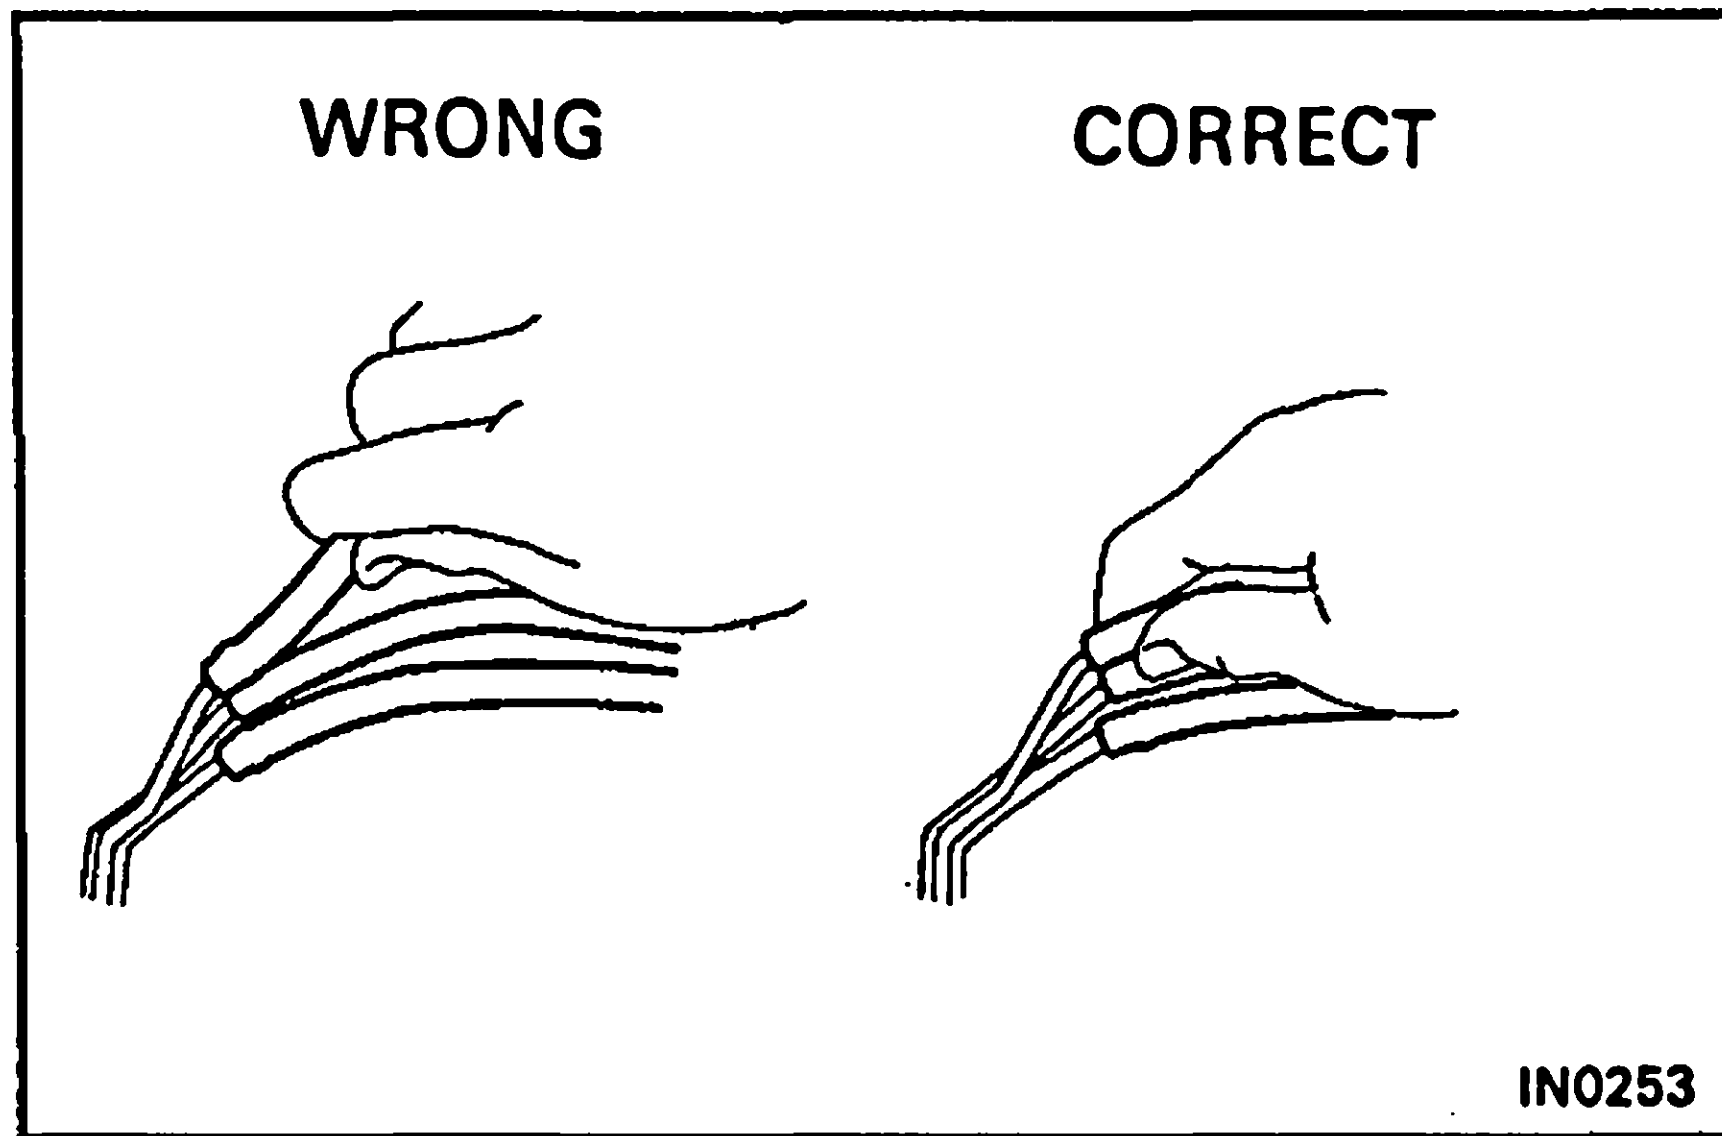

- (b) To disconnect vacuum hoses, pull on the end, not the middle of the hose.
- (c) To pull apart electrical connectors, pull on the connector itself, not the wires.
- (d) Be careful not to drop electrical components, such as sensors or relays. If they are dropped on a hard floor, they should be replaced and not reused.
- (e) When steam cleaning an engine, protect the distributor, air filter, and VCV from water.
- (f) Never use an impact wrench to remove or install temperature switches or temperature sensors.
- (g) When checking continuity at the wire connector, insert the tester probe carefully to prevent terminals from bending.
- (h) When using a vacuum gauge, never force the hose onto a connector that is too large. Use a step-down adapter instead. Once the hose has been stretched, it may leak.

13. Tag hoses before disconnecting them:

- (a) When disconnecting vacuum hoses, use tags to identify how they should be reconnected.
- (b) After completing a job, double check that the vacuum hoses are properly connected. A label under the hood shows the proper layout.

ABBREVIATIONS USED IN THIS MANUAL

IN009-02








AAP	Auxiliary Acceleration Pump	Max.	Maximum
BTDC	Before Top Dead Center	MP	Multipurpose
BVSV	Bimetal Vacuum Switching Valve	O/S	Oversized
CB	Chock Breaker	OVCV	Outer Vent Control Valve
DOHC	Double Over Head Cam	PCV	Positive Crankcase Ventilation
DP	Dash Pot	RH	Right-Hand
EX	Exhaust	SSM	Special Service Materials
FICB	Fast Idle Cam Breaker	SST	Special Service Tools
FIPG	Formed in Place Gasket	STD	Standard
FL	Fusible Link	TDC	Top Dead Center
IC	Integrated Circuit	TP	Throttle Positioner
IN	Intake	U/S	Undersize
LH	Left-Hand	VSV	Vacuum Switching Valve

V00800

STANDARD BOLT TORQUE SPECIFICATIONS

IN00V-01

HOW TO DETERMINE BOLT STRENGTH

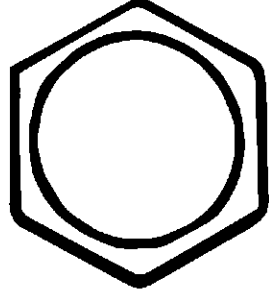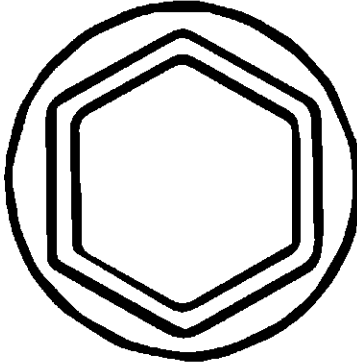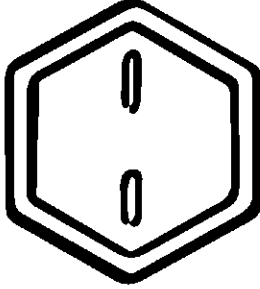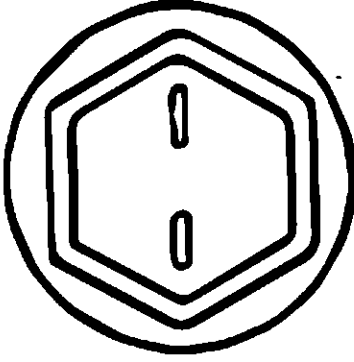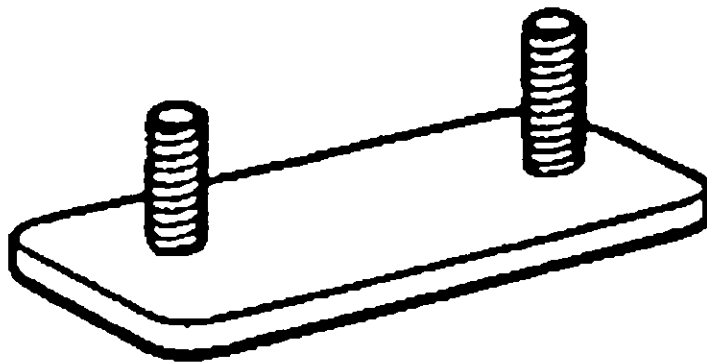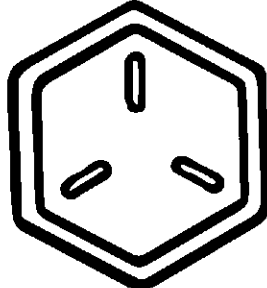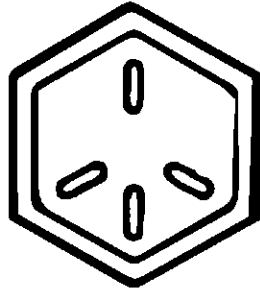	Mark	Class		Mark	Class
Hexagon head bolt	4— 5— 6— 4 Bolt head No. 7— 8— 9— 10— 11— 4T 5T 6T 7T 8T 9T 10T 11T		Stud bolt	No mark 	4T
	No mark 	4T			
Hexagon flange bolt w/ washer hexagon bolt	No mark 	4T	Welded bolt	Grooved 	6T
Hexagon head bolt	Two protruding lines 	5T			
Hexagon flange bolt w/ washer hexagon bolt	Two protruding lines 	6T	Welded bolt		4T
Hexagon head bolt	Three protruding lines 	7T			
Hexagon head bolt	Four protruding lines 	8T			

IN

SPECIFIED TORQUE FOR STANDARD BOLTS

Class	Diameter mm	Pitch mm	Specified torque					
			Hexagon head bolt			Hexagon flange bolt		
			N·m	kgf·cm	ft·lbf	N·m	kgf·cm	ft·lbf
4T	6	1	5	55	48 in.·lbf	6	60	52 in.·lbf
	8	1.25	12.5	130	9	14	145	10
	10	1.25	26	260	19	29	290	21
	12	1.25	47	480	35	53	540	39
	14	1.5	74	760	55	84	850	61
	16	1.5	115	1,150	83	—	—	—
5T	6	1	6.5	65	56 in.·lbf	7.5	75	65 in.·lbf
	8	1.25	15.5	160	12	17.5	175	13
	10	1.25	32	330	24	36	360	26
	12	1.25	59	600	43	65	670	48
	14	1.5	91	930	67	100	1,050	76
	16	1.5	140	1,400	101	—	—	—
6T	6	1	8	80	69 in.·lbf	9	90	78 in.·lbf
	8	1.25	19	195	14	21	210	15
	10	1.25	39	400	29	44	440	32
	12	1.25	71	730	53	80	810	59
	14	1.5	110	1,100	80	125	1,250	90
	16	1.5	170	1,750	127	—	—	—
7T	6	1	10.5	110	8	12	120	9
	8	1.25	25	260	19	28	290	21
	10	1.25	52	530	38	58	590	43
	12	1.25	95	970	70	105	1,050	76
	14	1.5	145	1,500	108	165	1,700	123
	16	1.5	230	2,300	166	—	—	—
8T	8	1.25	29	300	22	33	330	24
	10	1.25	61	620	45	68	690	50
	12	1.25	110	1,100	80	120	1,250	90
9T	8	1.25	34	340	25	37	380	27
	10	1.25	70	710	51	78	790	57
	12	1.25	125	1,300	94	140	1,450	105
10T	8	1.25	38	390	28	42	430	31
	10	1.25	78	800	58	88	890	64
	12	1.25	140	1,450	105	155	1,600	116
11T	8	1.25	42	430	31	47	480	35
	10	1.25	87	890	64	97	990	72
	12	1.25	155	1,600	116	175	1,800	130

IN

ENGINE



ENGINE MECHANICAL	EG- 2	COOLING SYSTEM	EG-174
DESCRIPTION	EG- 2	DESCRIPTION	EG-174
PREPARATION	EG- 4	PREPARATION	EG-176
TROUBLESHOOTING	EG- 8	COOLANT CHECK AND	
TUNE-UP	EG- 11	REPLACEMENT	EG-177
COMPRESSION CHECK	EG- 29	WATER PUMP	EG-178
CYLINDER HEAD	EG- 31	THERMOSTAT	EG-180
TIMING CHAIN	EG- 74	RADIATOR	EG-182
CYLINDER BLOCK	EG- 89	SERVICE SPECIFICATIONS	EG-183
SERVICE SPECIFICATIONS	EG-124	LUBRICATION SYSTEM	EG-184
FUEL SYSTEM	EG-129	DESCRIPTION	EG-184
DESCRIPTION	EG-129	PREPARATION	EG-186
PRECAUTIONS	EG-132	OIL PRESSURE CHECK	EG-188
PREPARATION	EG-133	OIL AND FILTER REPLACEMENT	EG-189
ON-VEHICLE INSPECTION	EG-134	OIL PUMP	EG-191
CARBURETOR	EG-138	OIL COOLER	EG-204
FUEL PUMP	EG-170	OIL NOZZLE	EG-207
SERVICE SPECIFICATIONS	EG-173	SERVICE SPECIFICATIONS	EG-209

ENGINE MECHANICAL

DESCRIPTION

The 1FZ—F engine is an in—line, 6—cylinder, 4.5 liter DOHC 24 valve engine.

EG0UZ-01

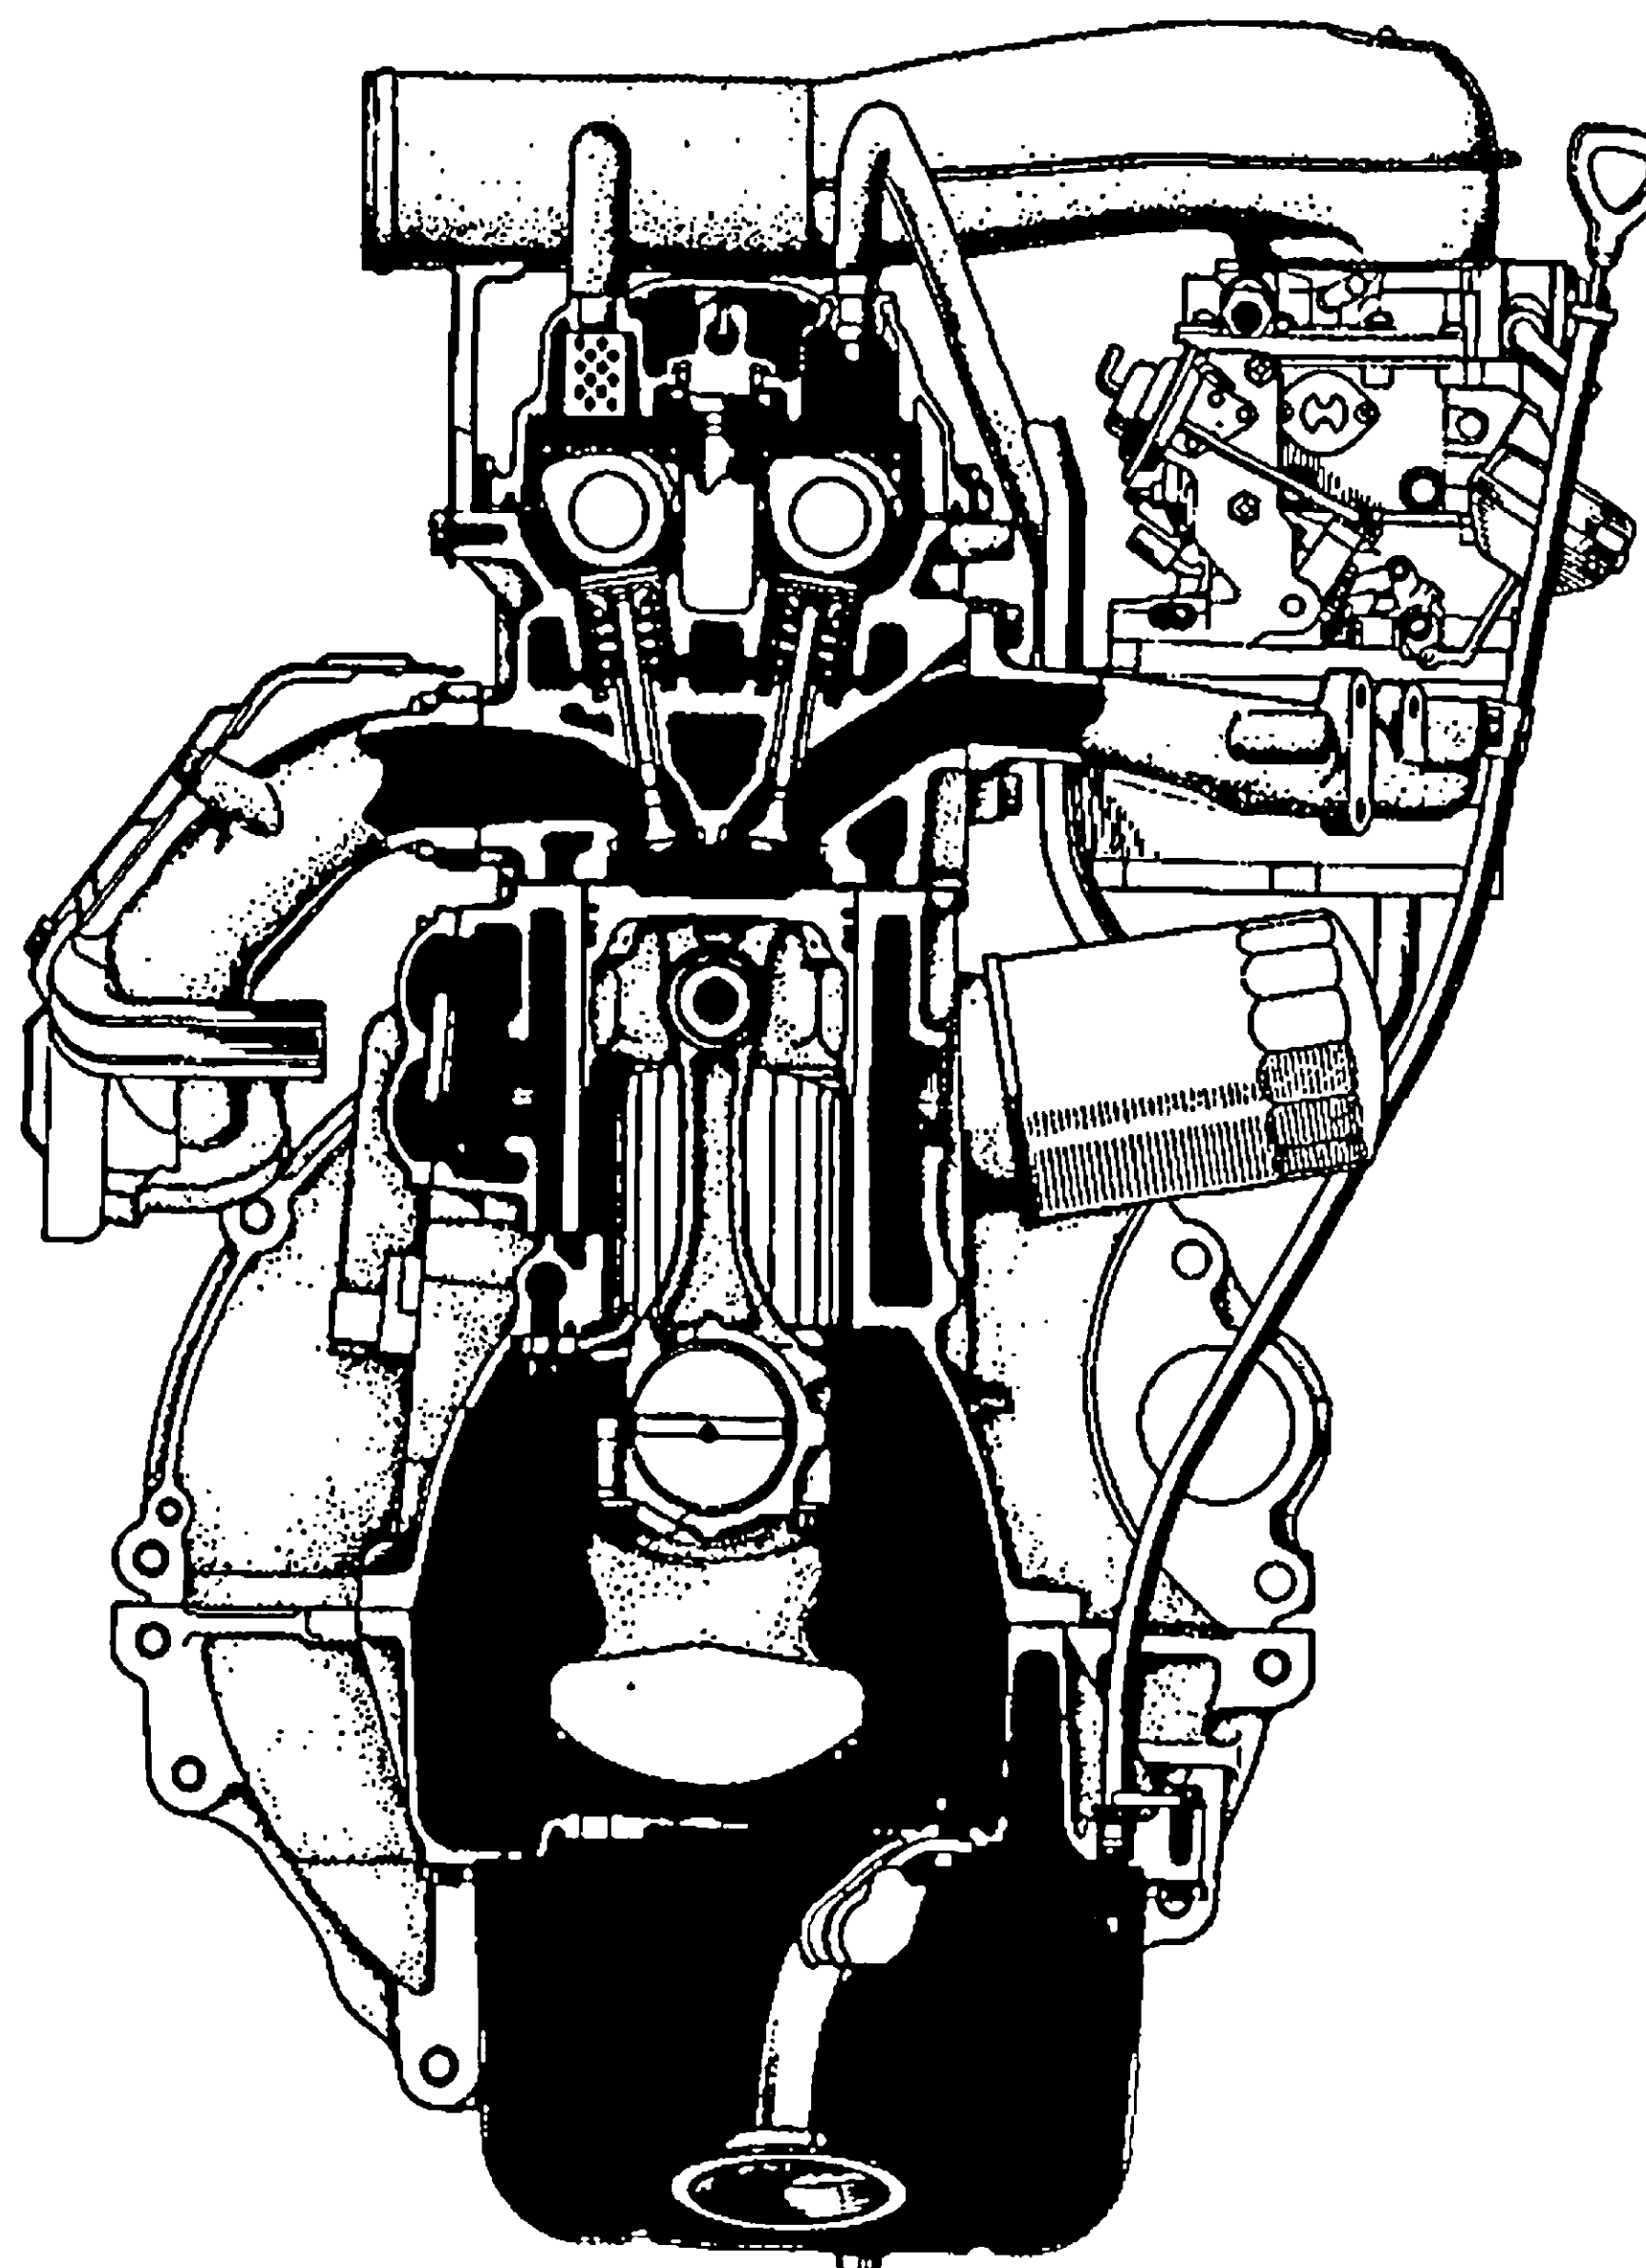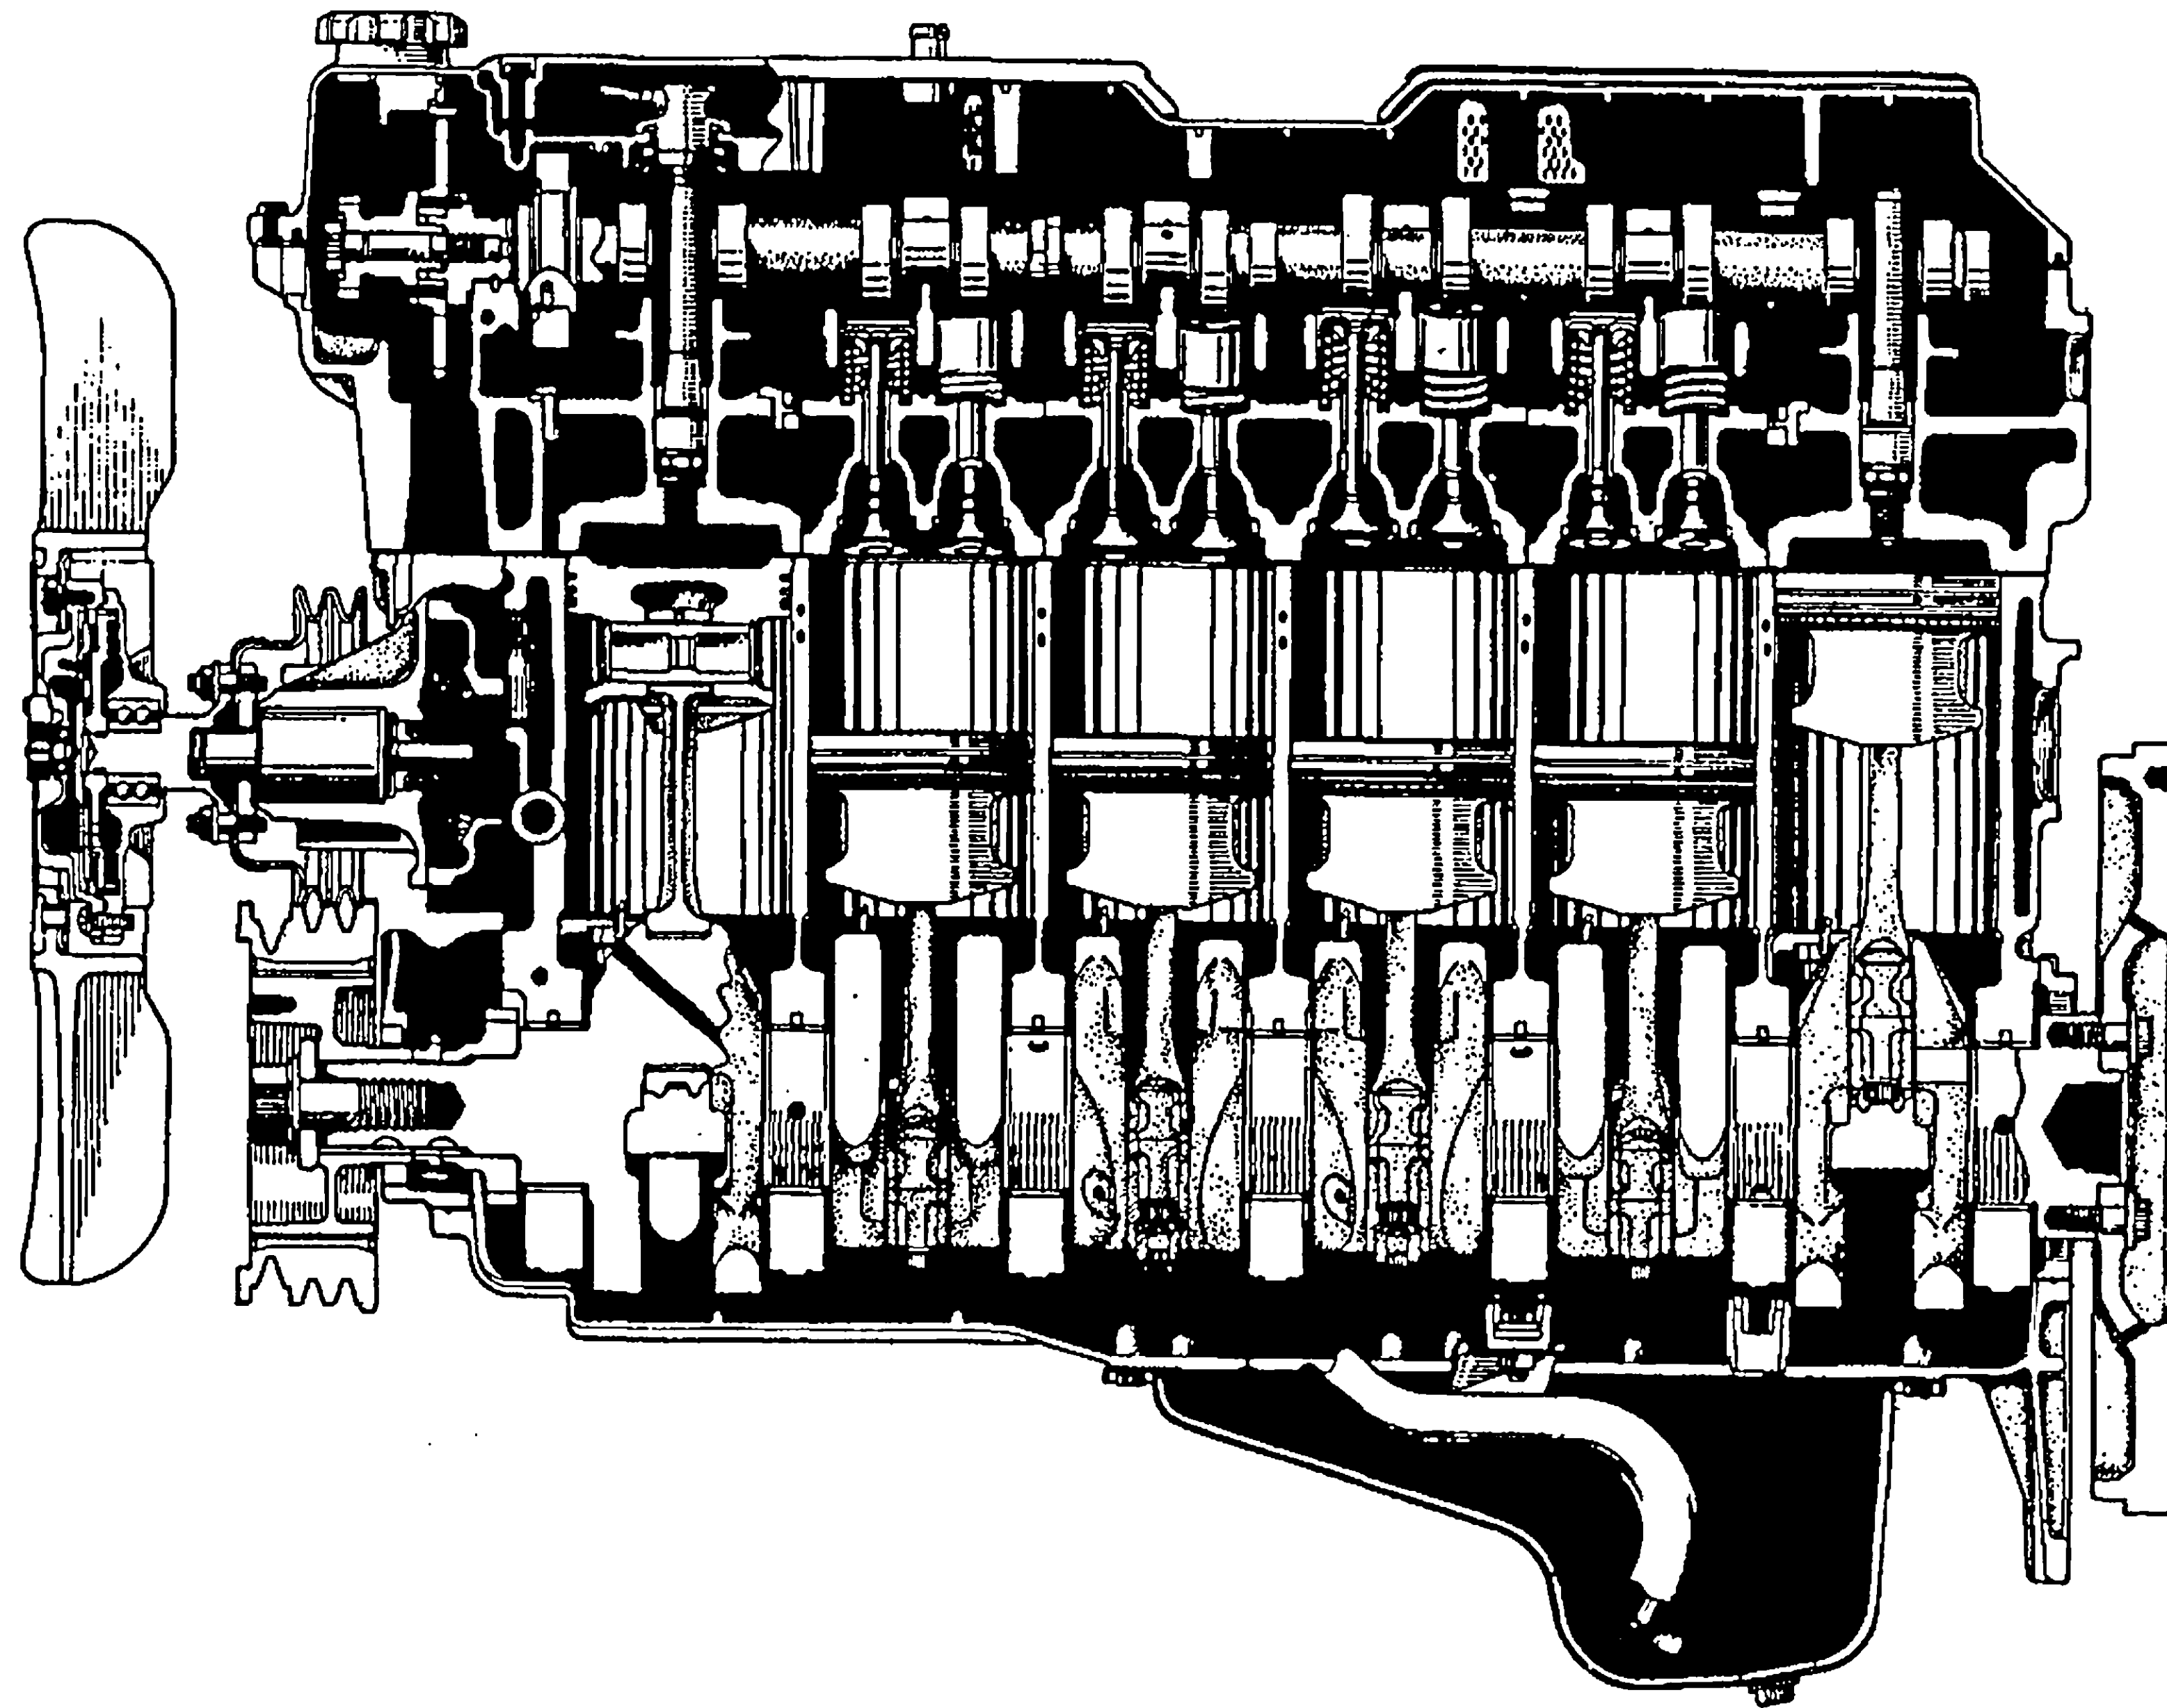

The 1FZ—F engine is an in—line, 6—cylinder engine with the cylinder snumbered 1—2—3—4—5—6 from front. The crankshaft is supported by 7 bearings inside the crankcase. These bearings are made of aluminum alloy.

The crankshaft is integrated with 12 weights for balance. Oil holes are provided in the crankshaft to supply oil to the connecting rods, bearing, pistons and other components.

The firing order is 1—5—3—6—2—4. The cylinder head is made of aluminum alloy, with a cross flow type intake and exhaust layout and with pent—roof type combustion chambers. The spark plugs are located in the center of the combustion chambers.

A tournament port type intake manifold is use. Coolant is introduced into the manifold, improving drivability during engine warm—up. Exhaust and intake valves are equipped with irregular pitch springs made of special valve spring carbon steel which are capable of following for the full range of engine speeds.

The intake camshaft is driven by a timing chain, and a gear on the intake camshaft engages with a gear on the exhaust camshaft to drive it. The cam journal is supported at 7 places between the valve lifters of each cylinder and on the front end of the cylinder head. Lubrication of the cam journals and gears is accomplished by oil being supplied through the oiler port in the center of the camshaft.

Adjustment of the valve clearance is done by means of an outer shim type system, in which valve adjusting shims are located above the valve lifters. This permits replacement of the shims without removal of the camshafts. Pistons are made of high temperature—resistant aluminum alloy, and a depression is built into the piston head to prevent interference with the valves. Piston pins are the full—floating type, with the pins fastened to neither the piston boss nor the connecting rods. Instead, snap rings are fitted on both ends of the pins, preventing the pins from falling out.













The No.1 compression ring is made of stianless steel and the No.2 compression ring is made of cast iron. The oil ring is made of a stainless steel. The outer diameter of each piston ring is slightly larger than the diameter of the piston and the flexibility of the rings allows them to hug the cylinder walls when they are mounted on the piston. No.1 and No.2 compression rings work to prevent gas leakage from the cylinder and the oil ring works to scrape oil off the cylinder walls to prevent it from entering the combustion chambers.

The cylinder block is made of cast iron. Is has 6 cylinder which are approximately twice the length of the piston stroke. The top of each cylinder is closed off by the cylinder head and the lower end of the cylinders becomes the crankcase, in which the crankshaft is installed. In addition, the cylinder block contains a water jacket, through which coolant is pumped to cool the the cylinders. The oil pan is bolted onto the bottom of the cylinder block. The No.1 oil pan is an oil reservoir made of combination of aluminum alloy. The No.2 oil pan is an oil reservoir made of combination of pressed steel sheet. A dividing plate is included inside the oil pan to keep sufficient oil in the bottom of the pan even when the vehicle is tilted. This dividing plate also prevents the oil from making waves when the vehicle is stopped suddenly and the oil shifts away from the oil pump suction pipe.













PREPARATION
SST (SPECIAL SERVICE TOOLS)

EG0AY-02

EG

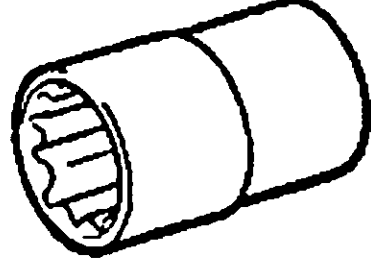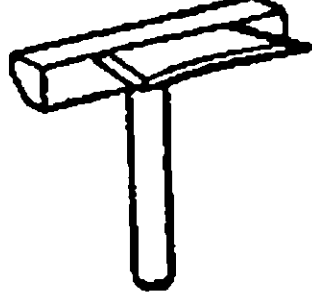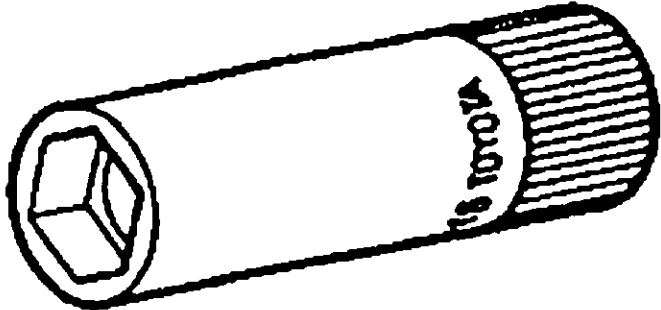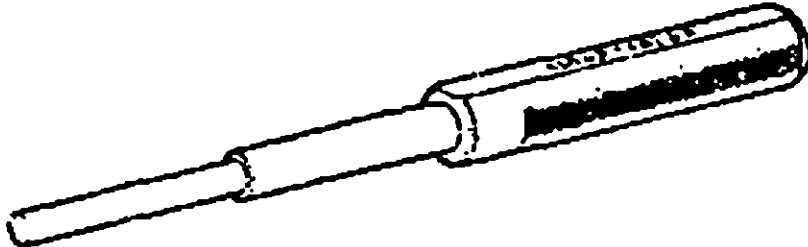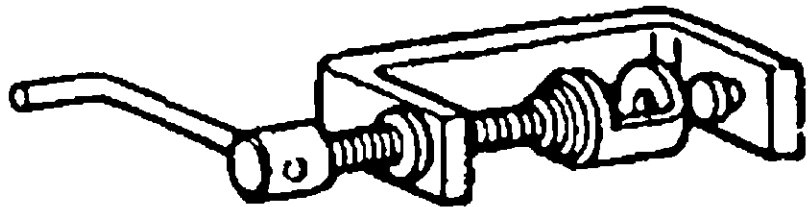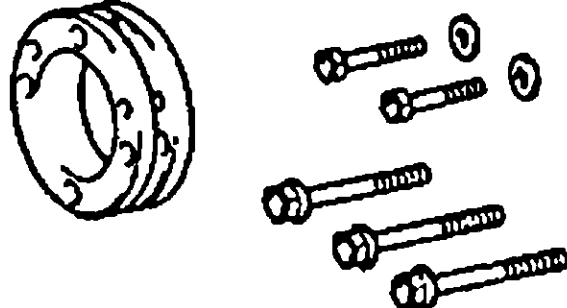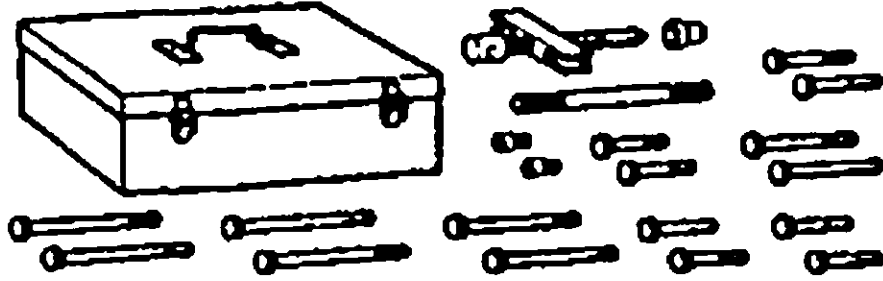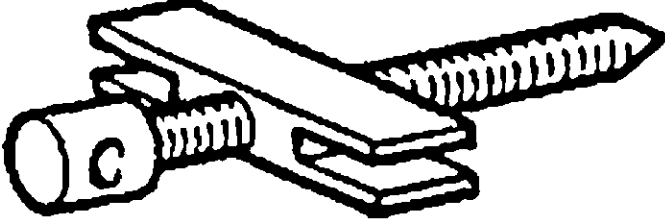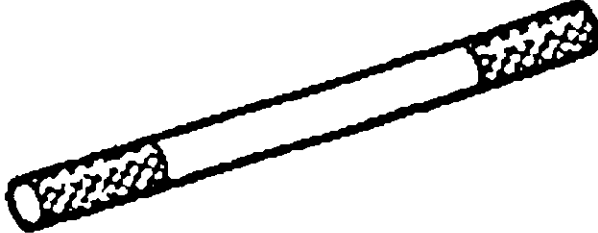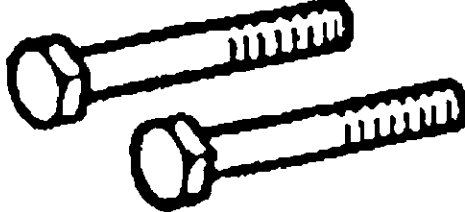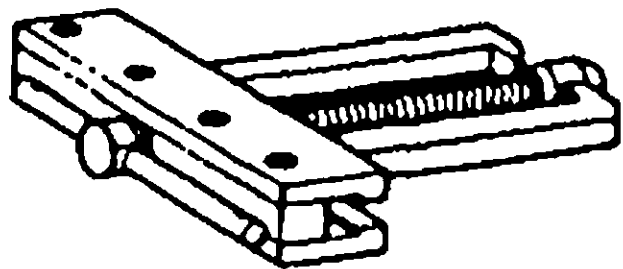
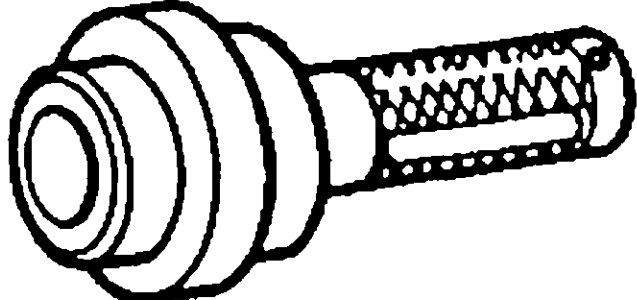
	09011-38121 12 mm Socket Wrench for 12 Pointed Head	Cylinder head bolt
	09032-00100 Oil Pan Seal Cutter	
	09155-16100 Spark Plug Wrench	
	09201-15010 Valve Stem Guide Remover & Replacer	
	09202-70010 Valve Spring Compressor	
	09213-58012 Crankshaft Pulley Hoolding Tool	
	09213-60017 Crankshaft Pulley & Gear Puller Set	
	(09213-00020) Body With Bolt	
	(09213-00030) Handle	
	(09213-00060) Bolt Set	
	09213-36020 Timing Gear Remover	
	09223-15030 Oil Seal and Bearing Replacer	Crankshaft rear oil seal
	09223-46011 Crankshaft Front Oil Seal Replacer	

 ENGINE — ENGINE MECHANICAL

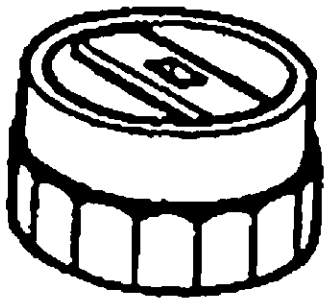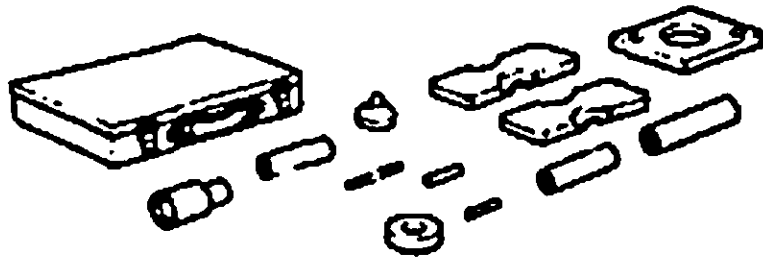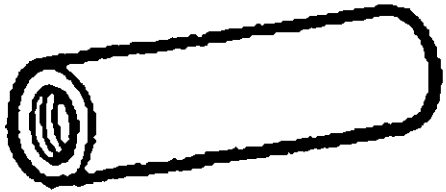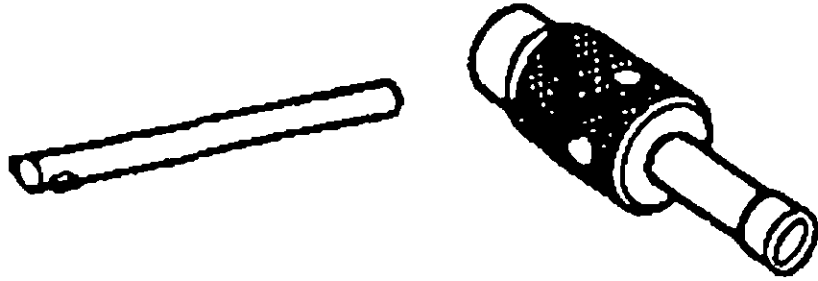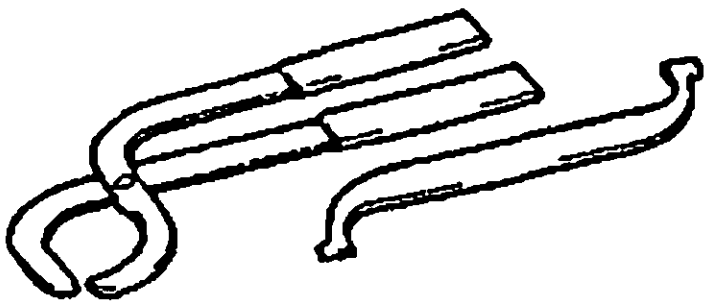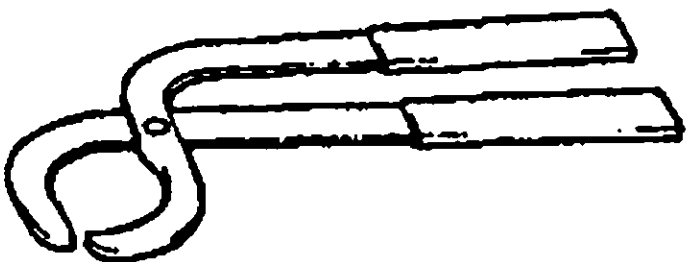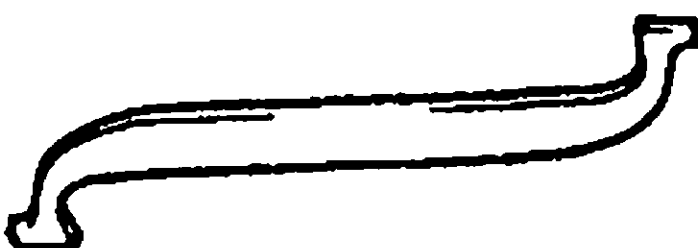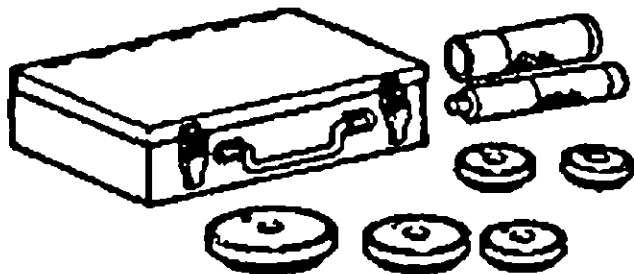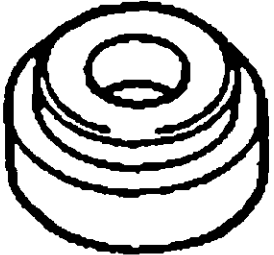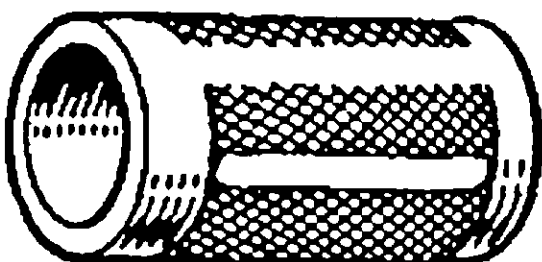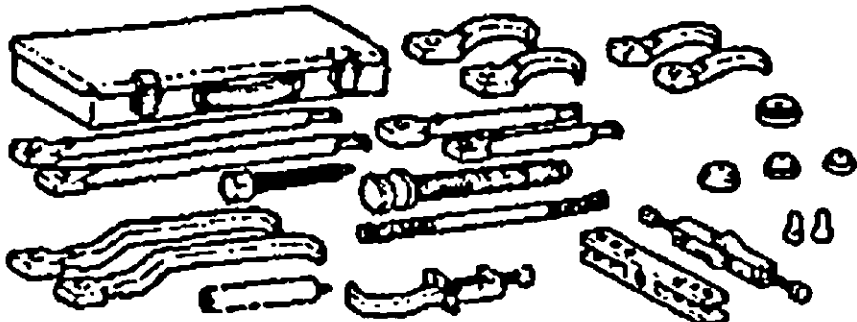	09228-44011 Oil Filter Wrench	
	09236-00101 Water Pump Overhaul Tool Set	
	(09236-15010) Bearing Stay	Valve stem oil seal
	09243-00020 Idle Adjusting Screw Wrench	
	09248-66010 Valve Clearance Adjust Tool Set	
	(09248-06010) Valve Lifter Press	
	(09248-06020) Valve Lifter Stopper	
	09330-00021 Companion Flange Holding Tool	Crankshaft pulley
	09608-30012 Front Hub & Drive Pinion Bearing Tool Set	
	(09608-04020) Handle	
	(09608-04060) Front Hub Outer Bearing Cup Replacer	Spark plug tube gasket
	09631-20031 Oil Seal "B" Remover	Conecting rod bushing
	09636-20010 Upper Ball Joint Dust Cover Replacer	Crankshaft timing gear
	09950-20017 Universal Puller	

EG

RECOMMENDED TOOLS

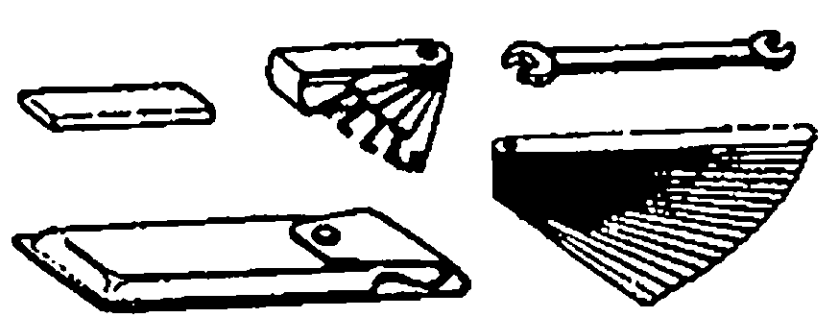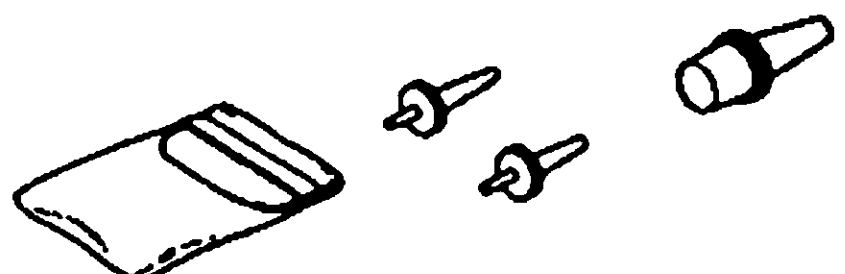	09200-00010 Engine Adjust Kit	
	09258-00030 Hose Plug Set	Plug for the vacuum hose, fuel hose etc.

EG

EQUIPMENT

EG0B0-01


Battery specific gravity gauge	
Caliper gauge	
CO/HC meter	
Compression gauge	
Connecting rod aligner	
Cylinder gauge	
Dial indicator	
Dye penetrant	
Engine Tune-up tester	
Heater	
Magnetic finger	
Micrometer	
Piston ring compressor	
Piston ring expander	
Plastigage	
Precision straight edge	
Soft brush	
Spring tester	Valve spring
Steel square	Valve spring
Thermometer	

Torque wrench	
Valve seat cutter	
Vernier calipers	

SSM (SPECIAL SERVICE MATERIALS)

EG081-02

08826-00080 Seal packing or equivalent	Over the space between the cylinder block and timing chain Timing chain cover Semi-circular plug Warter by-pass flange for intake manifold Oil pan. Rear oil sear retainer
08833-00070 Adhesive 1324, THREE BOND 1324 or equivalent	Plug tube
08833-00080 Adhesive 1344, THREE BOND 1344, LOCTITE 242 or equivalent	BVSV

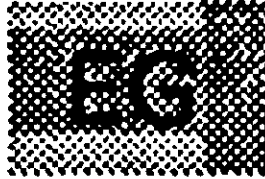

TROUBLESHOOTING

EGOV0-01

You will find the troubles easier using the table well shown below. In this table, each number shows the priority of causes in troubles. Check each part in order. If necessary, replace these parts.

EG


See page		CH-6	ST-5, 17	IG-13	IG-12	IG-14	IG-10	EG-21	EG-171	—	EG-140	EG-140	EG-140	IG-4
Suspect area		Battery	Starter	Distributor	Ignition Coil	Igniter	Spark Plug	Ignition Timing	Fuel Pump	Fuel Lines	Automatic Chock	Needle Valve	Fuel Cut Solenoid Valve	Ignition Circuit
Symptom														
Does not start	Engine does not crank	1	3											2
	Starter runs — engine does not crank		1											
	No initial combustion			3	2	4		10	5		6	7	8	1
	No complete combustion													
Difficult to start	Engine cranks slowly	1	2											
	Difficult to start ordinaly			8	7	9	2	10	5	6	4	3		
	Difficult to start in cold								3	4	1			
	Difficult to start in hot								3	4	1			
Pour idling	Incorrect first idle													
	High engine idle speed							4			3			
	Low engine idle speed							2						
	Rough idling			6	5	7	4		8	9				
	Misfire			4	3	5	2							
Poor drivability	Hesitation Poor acceleration			9	8	10	7		12	13	5			
	Backfire							1	4	5	2			
	Muffler explosion (after fire)							3			1			
	Surging			3	2	4	1							
	Knocking						3	2						
Engine stall	Engine stall soon after starting								2	3				
	After acceleration pedal depressed									1				
	After acceleration pedal released													
	During A/C operation										4			
Others	Poor fuel economy			9	8	10	7				3			11
	Engine overheat						7							
	Engine overcool													
	Excessive oil consumption													
	Low oil pressure													
	High oil pressure													
	Starter keeps running		2											1
	Battery often discharge													

HINT: When inspecting a wire harness or circuit, the electrical wiring diagrams at the repair manual should be referred to and the circuits of related systems also should be checked.

—	EG-134	EG-140	EG-140	EG-22	EG-26	—	—	—	—	EG-29	EG-14	EG-66	EG-74	EG-178	EG-191	EG-48	EG-90	EG-90
A/C Idle-Up	Float Level	Slow Jet	Power Valve	Idle Speed and Idle Mixture	Fast Idle Speed	Fuel Quality	Fuel Leakage	Coolant Leakage	Oil Leakage	Compression	Valve Clearance	Valve Timing	Timing Chain	Water Pump	Oil Pump	Valve Stem Guide Bushing	Connecting Rod Bearing	Crankshaft Bearing
						9				11		12	13					
										1		3	4				3	4
						1												
						2				11		13						
					2													
					2													
				1														
		1		2		3				10	11	12	13					
						1				6								
	4		6			3				11		14	15					
												3						
	2																	
						1								6				
						1												
	2		3															
				1														
1																		
						2	1			12		13						
								1				6		5	8			
									1							2		
									1						2		3	4
															1			

EG

See page		EG-46	EG-102	EG-100	EG-182	EG-181	CH-6	—	—	CH-10	—	—	—	—
Suspect area		Cylinder Head	Piston Ring	Cylinder Block	Radiator and Radiator Cap	Thermostat	Drive Belt	Water Temp. Sender Gauge	Oil Pressure Switch	Alternator	Flywheel	Accelerator Pedal Link	Brakes drag even when released	Clutch
Symptom														
Does not start	Engine does not crank													
	Starter runs — engine does not crank										2			
	No initial combustion													
	No complete combustion		2											
Difficult to start	Engine cranks slowly													
	Difficult to start ordinary		12											
	Difficult to start in cold													
	Difficult to start in hot													
Poor idling	Incorrect first idle											1		
	High engine idle speed											1		
	Low engine idle speed													
	Rough idling	14	11											
	Misfire													
Poor drivability	Hesitation Poor acceleration												2	1
	Backfire													
	Muffler explosion (after fire)													
	Surging													
	Knocking				4	5								
Engine stall	Engine stall soon after starting													
	After acceleration pedal depressed													
	After acceleration pedal released													
	During A/C operation													
Others	Poor fuel economy											4	6	5
	Engine overheat	10	9	11	2	3	4	12						
	Engine overcool					1		2						
	Excessive oil consumption	4	3	5										
	Low oil pressure								5					
	High oil pressure								2					
	Starter keeps running													
	Battery often discharge						1			2				

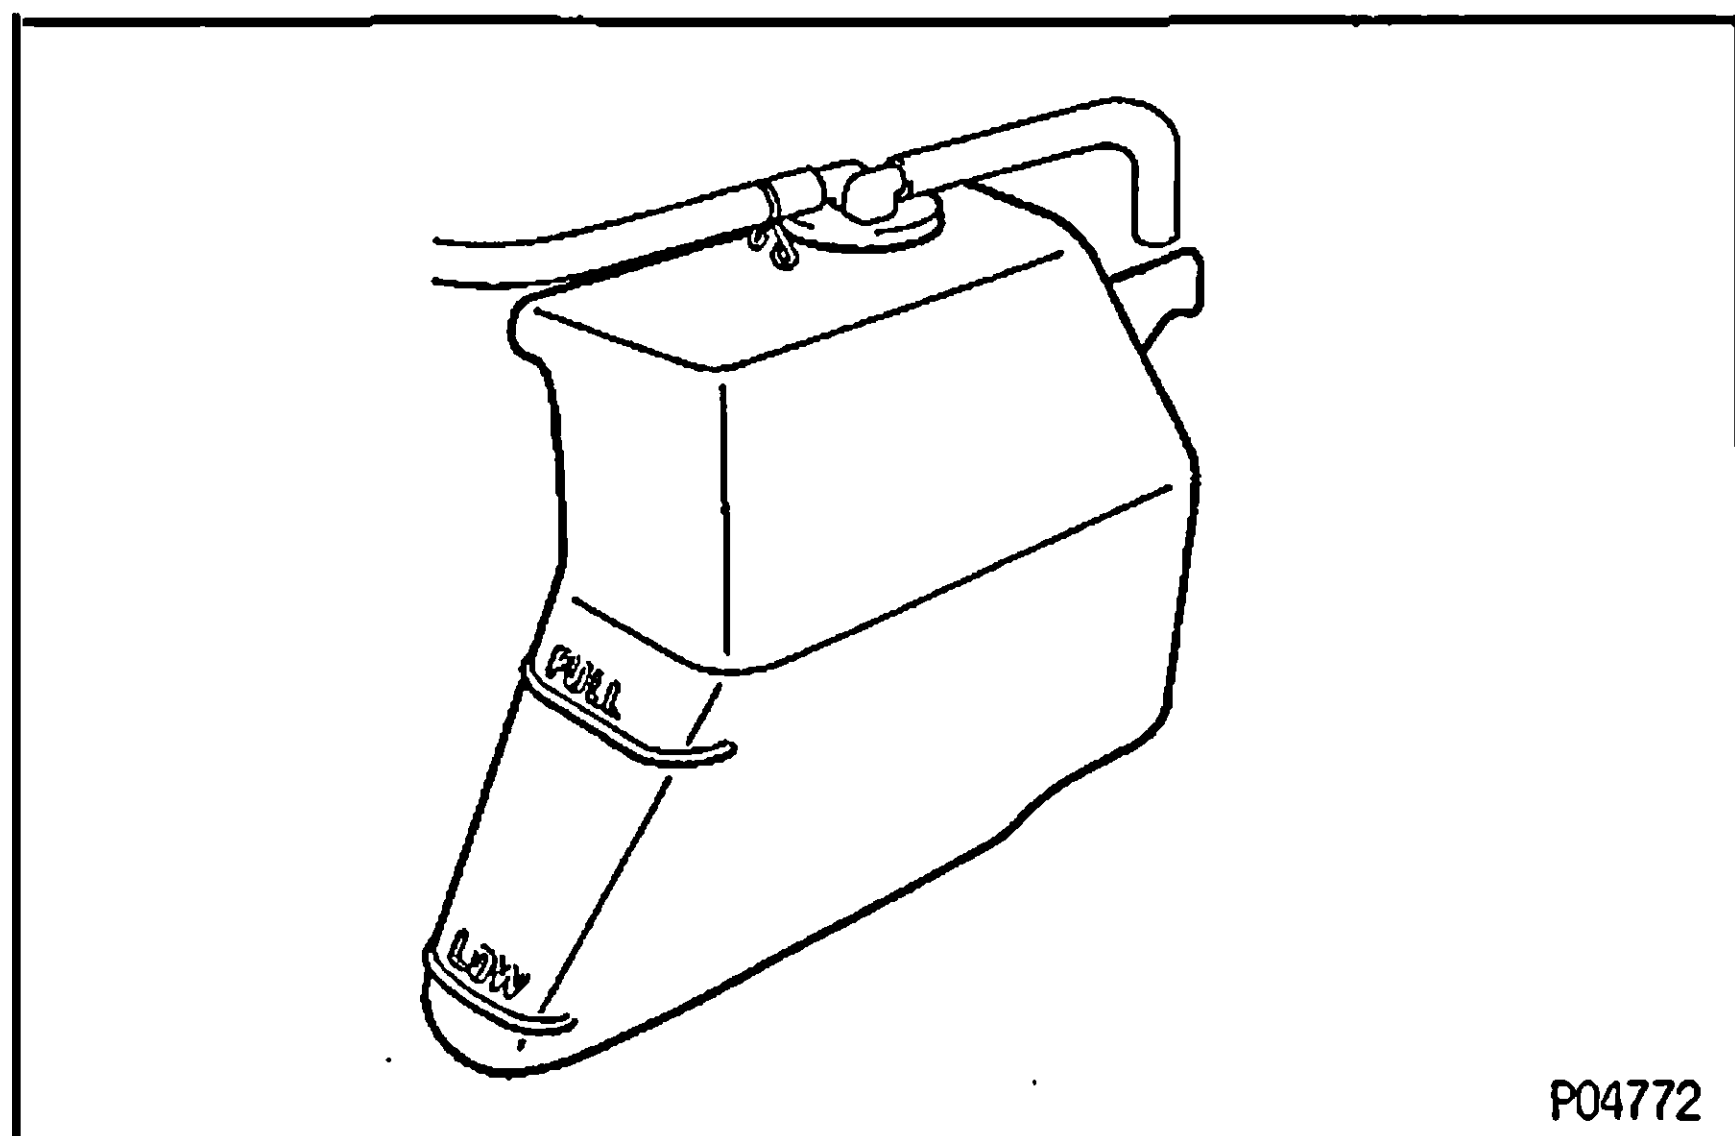

P04772

TUNE—UP ENGINE COOLANT INSPECTION


EG0B3-02

1. CHECK ENGINE COOLANT LEVEL AT RESERVOIR TANK

The coolant level should be between the "LOW" and "FULL" lines at low temperature.

If low, check for leaks and add coolant up to the "FULL" line.

EG

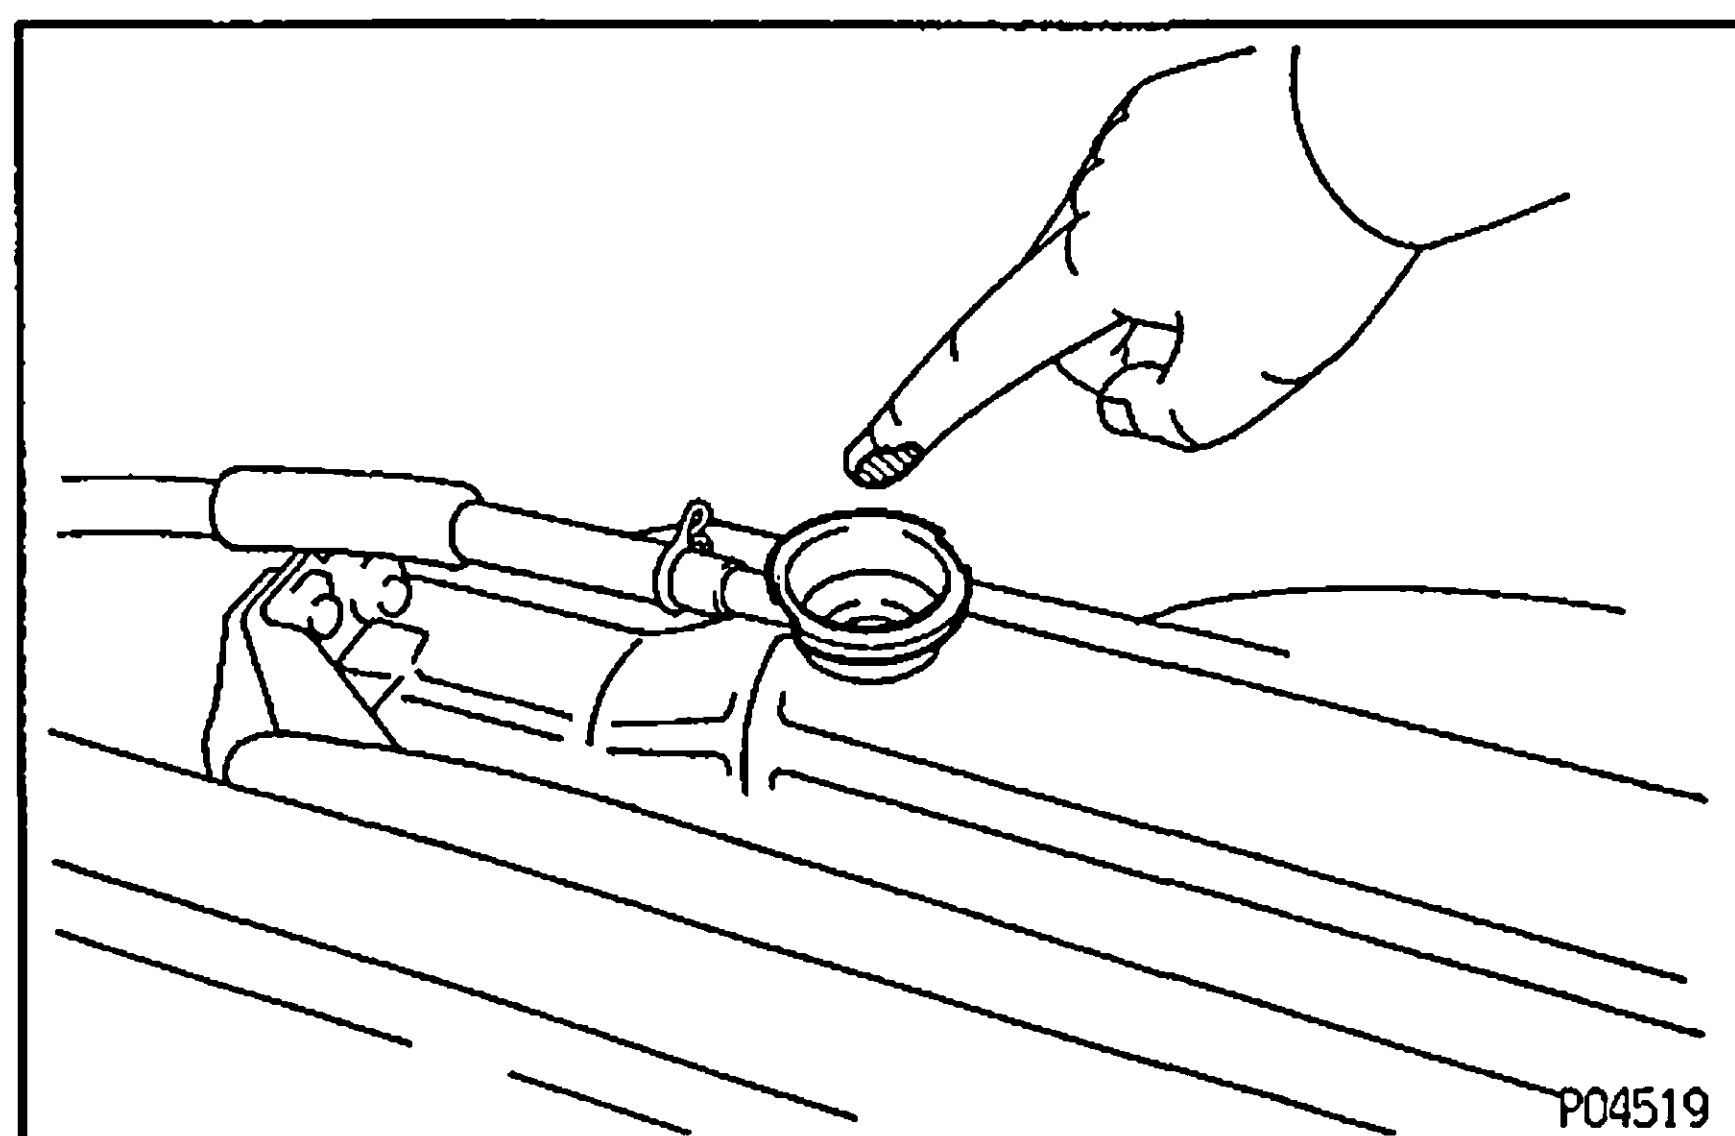


P04519

2. CHECK ENGINE COOLANT QUALITY

There should be no excessive deposits of rust or scales around the radiator cap or radiator filler hole, and the coolant should be free from oil.

If excessively dirty, replace the coolant.

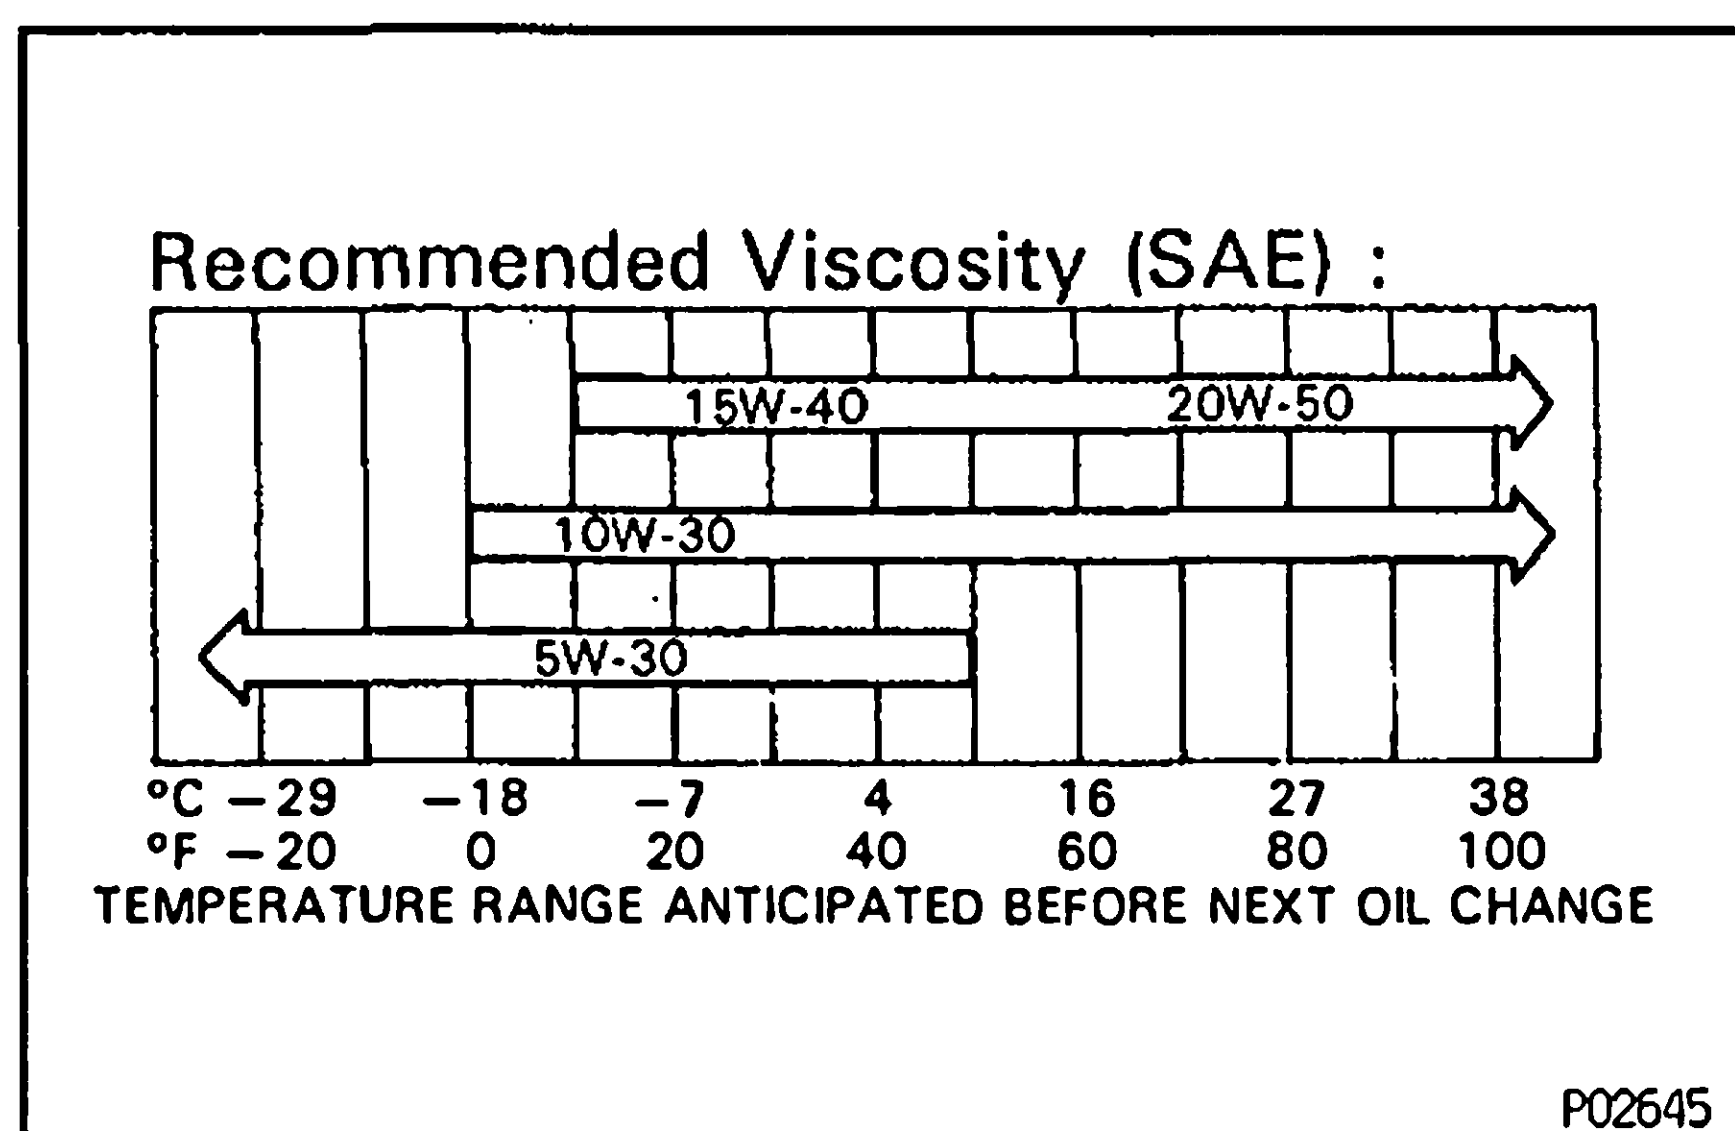

P02645

ENGINE OIL INSPECTION

EG0B4-02

1. CHECK OIL QUALITY

Check the oil for deterioration, entry of water, discoloring or thinning.

If oil quality is poor, replace it.


Oil grade:

API grade SG or better

If it is impossible to get SG or better you may use SF grade

Recommended viscosity:

Refer to illustration

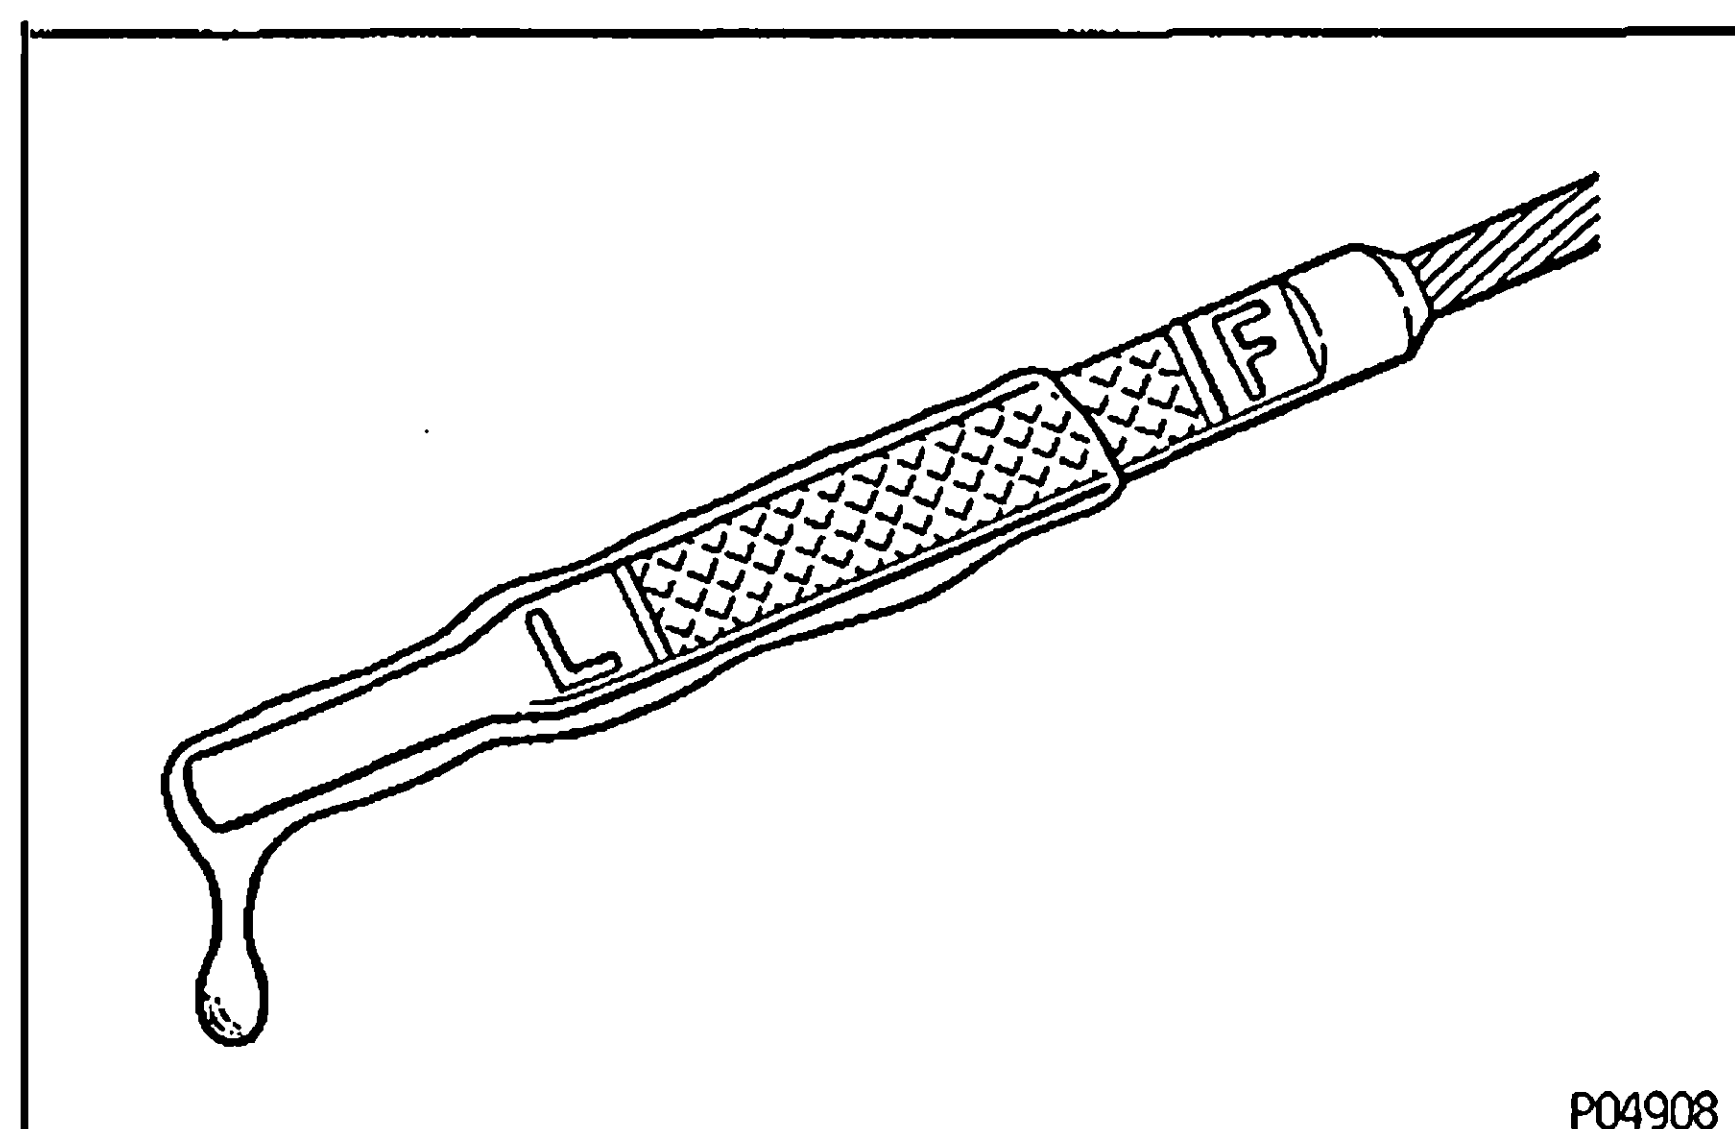


P04908

2. CHECK ENGINE OIL LEVEL

The oil level should be between the "L" and "F" marks on the dipstick.

If low, check for leakage and add oil up to the "F" mark.

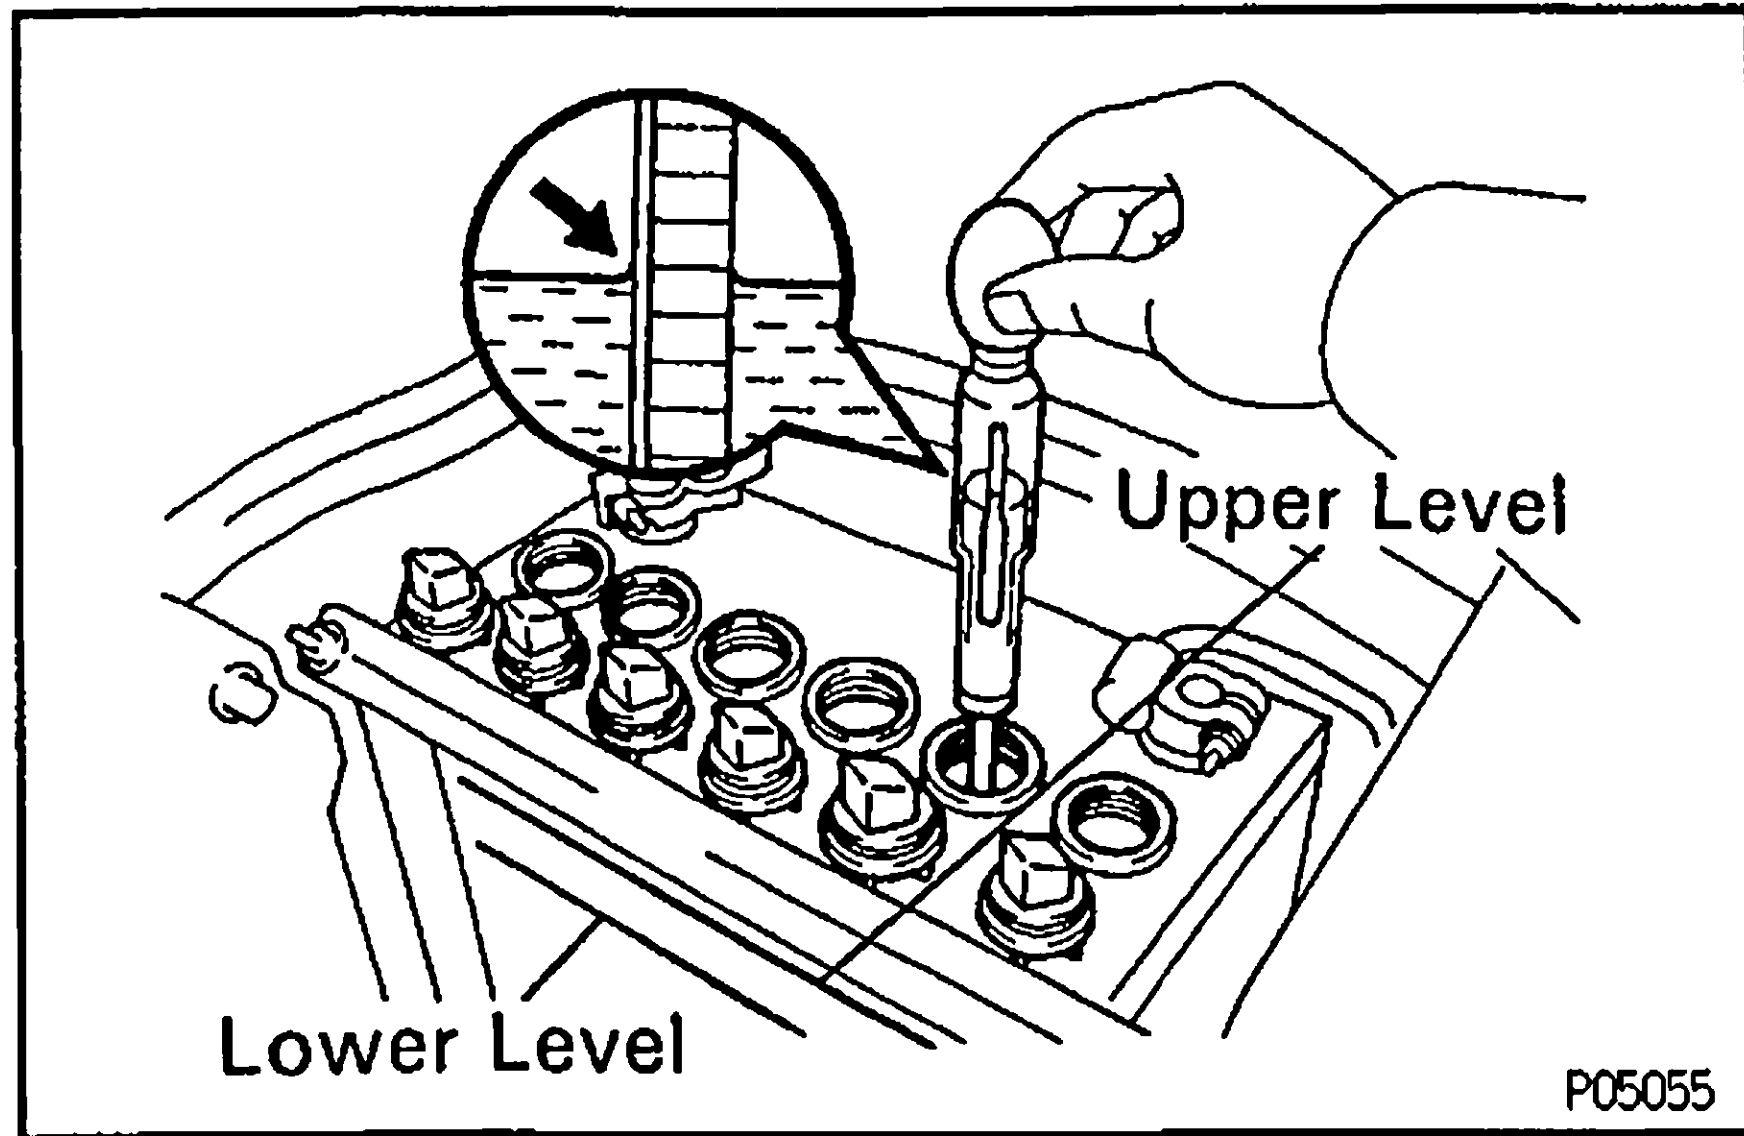

BATTERY INSPECTION

1. CHECK BATTERY SPECIFIC GRAVITY AND ELECTROLYTE LEVEL


- (a) Check the electrolyte quantity of each cell.
If insufficient, refill with distilled (or purified) water.
- (b) Check the specific gravity of each cell.
Standard specific gravity:

1.25 – 1.27 when fully charged at 20°C (68°F)

If not within specifications, charge the battery.

2. CHECK BATTERY TERMINALS, FUSIBLE LINKS AND FUSES


- (a) Check that the battery terminals are not loose or corroded.
- (b) Check the fusible links and fuses for continuity.

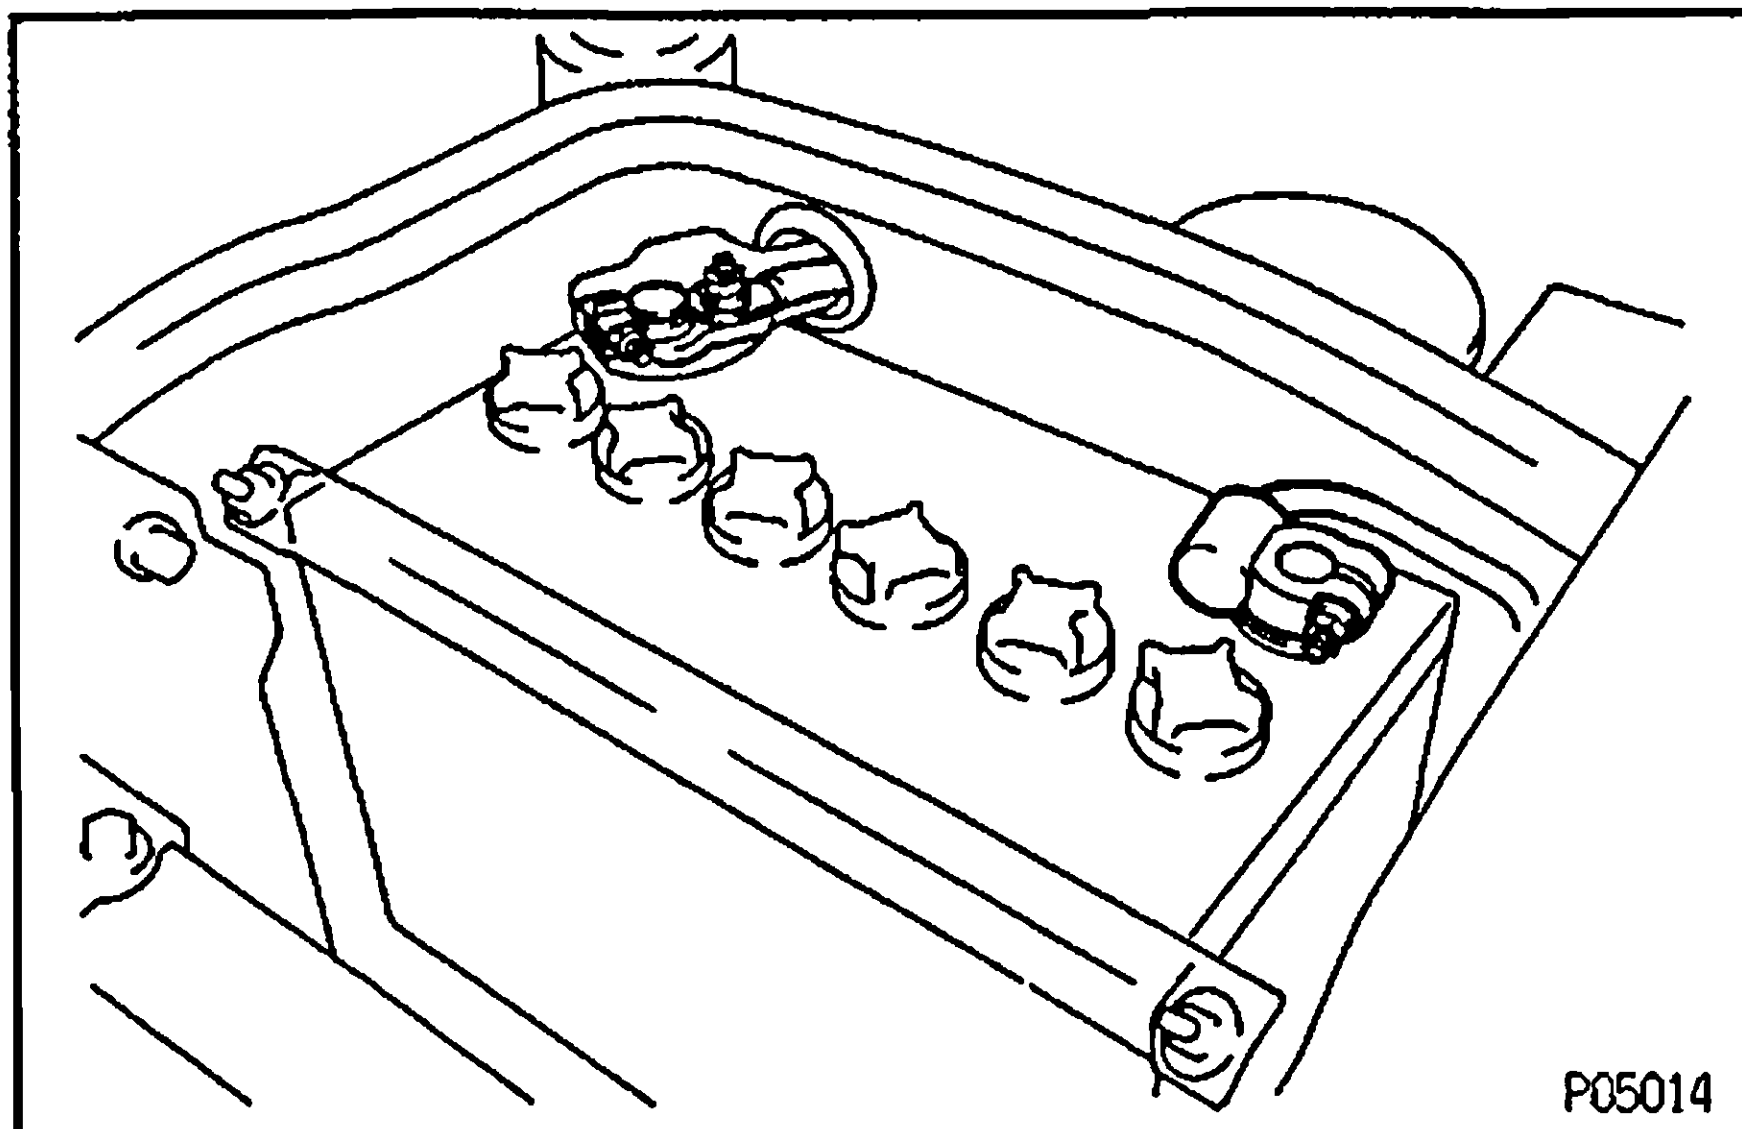

AIR FILTER INSPECTION


1. INSPECT AIR FILTER


Visually check that the element is not excessively dirty, damaged or oily.

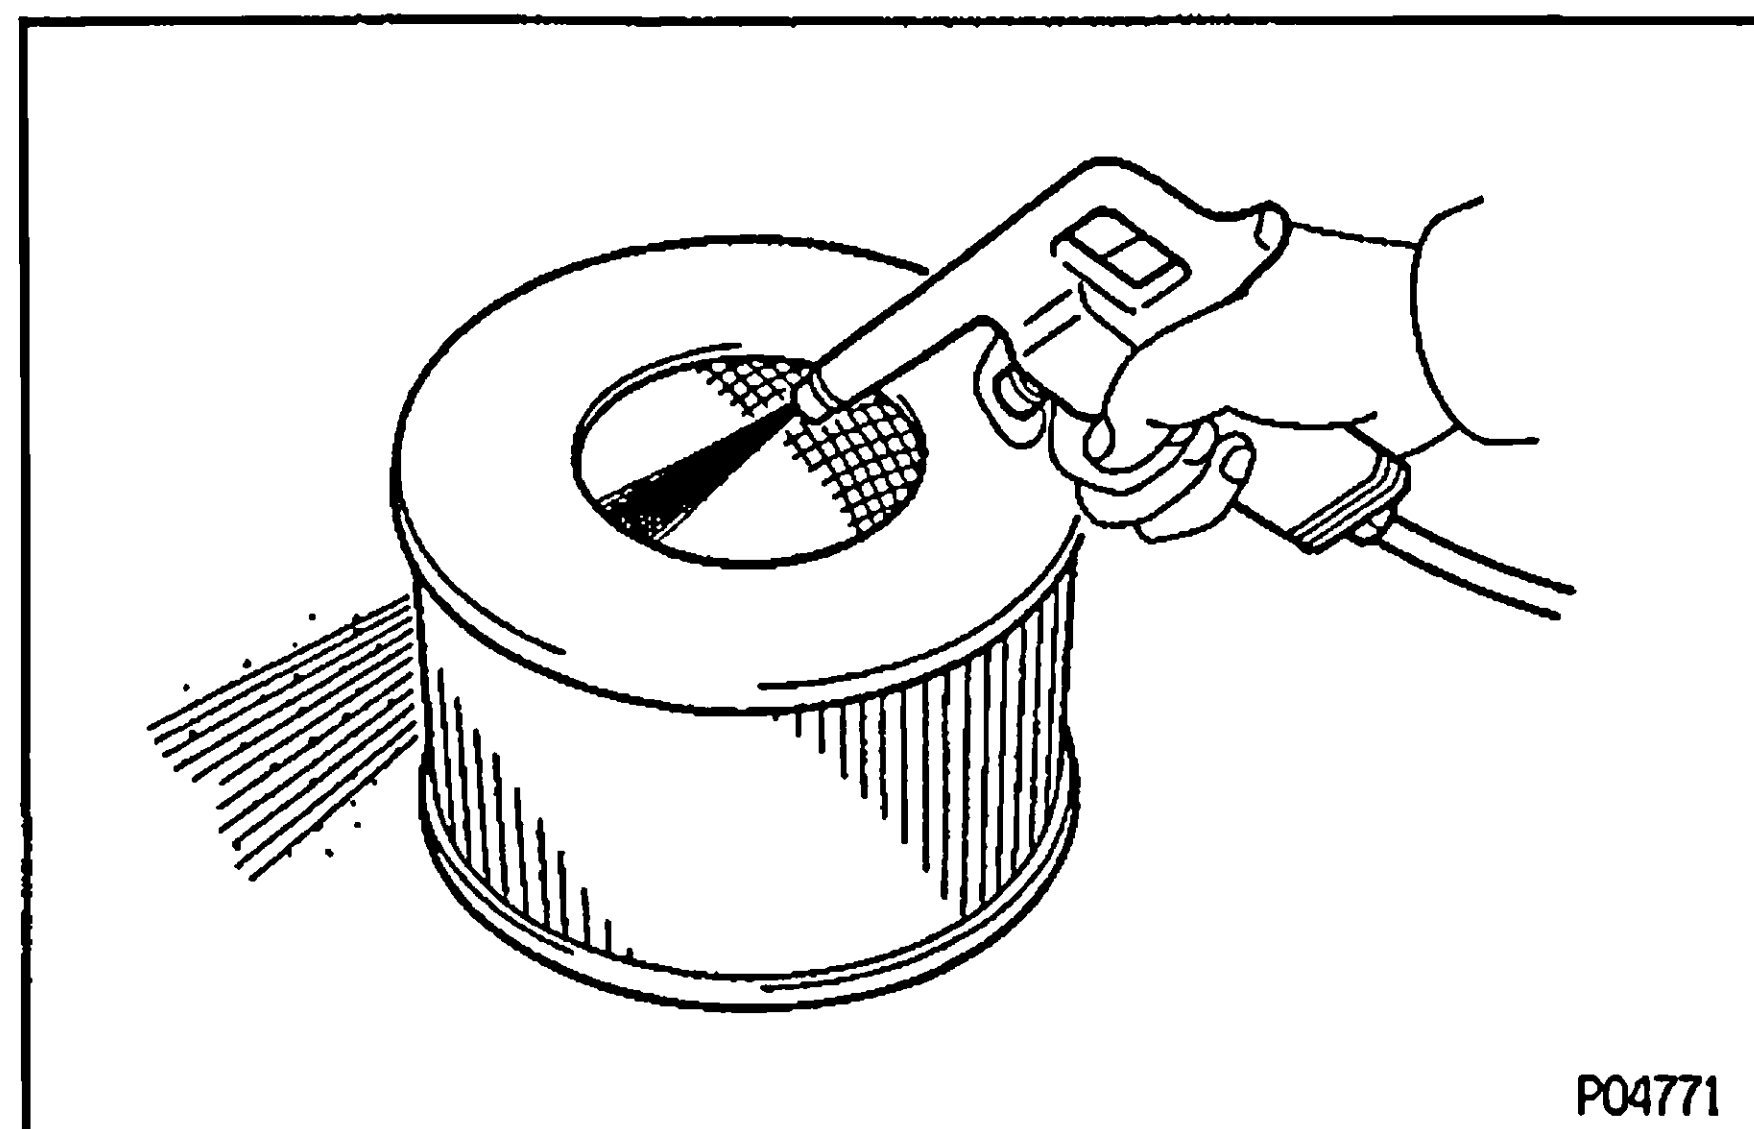

2. CLEAN AIR FILTER


- (a) Blow dirt off in the element with compressed air from the inside.
- (b) Submerge the element in the water and agitate it up and down ten or more times.
- (c) Repeat rinsing in clean water until rise water is clear.

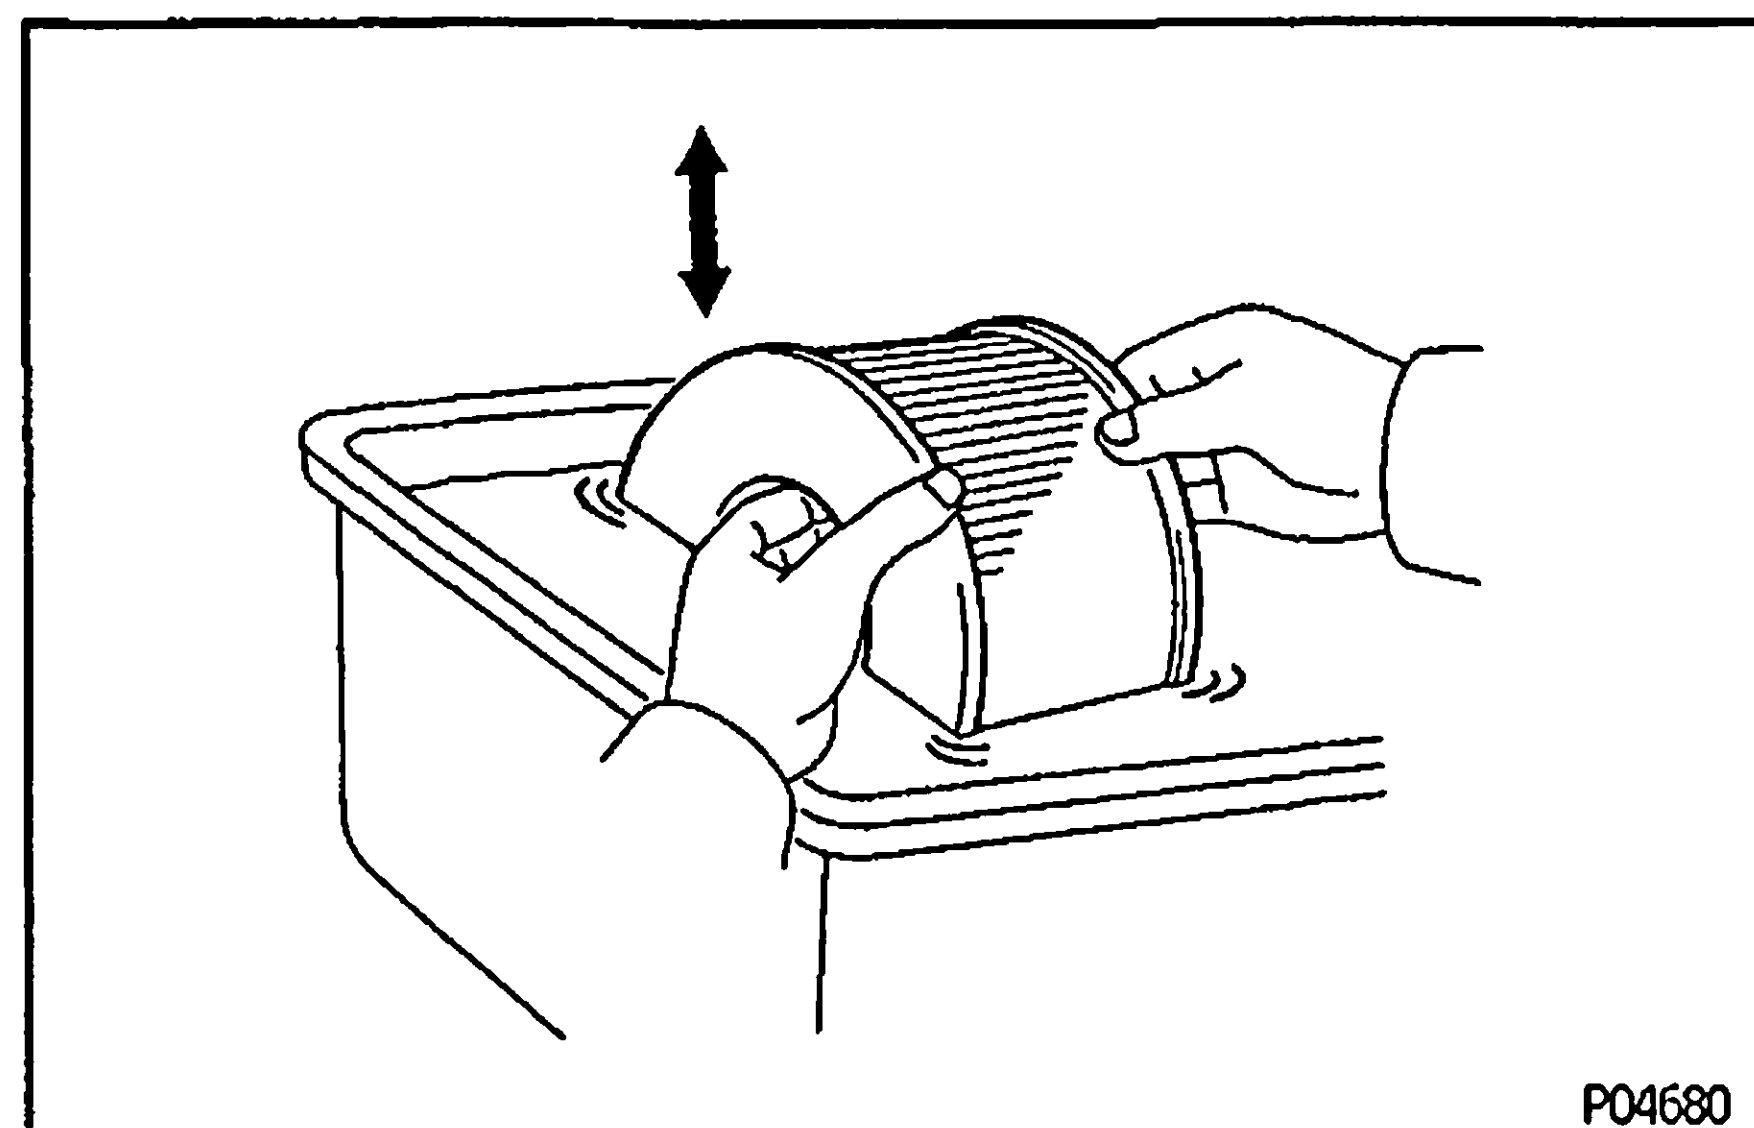

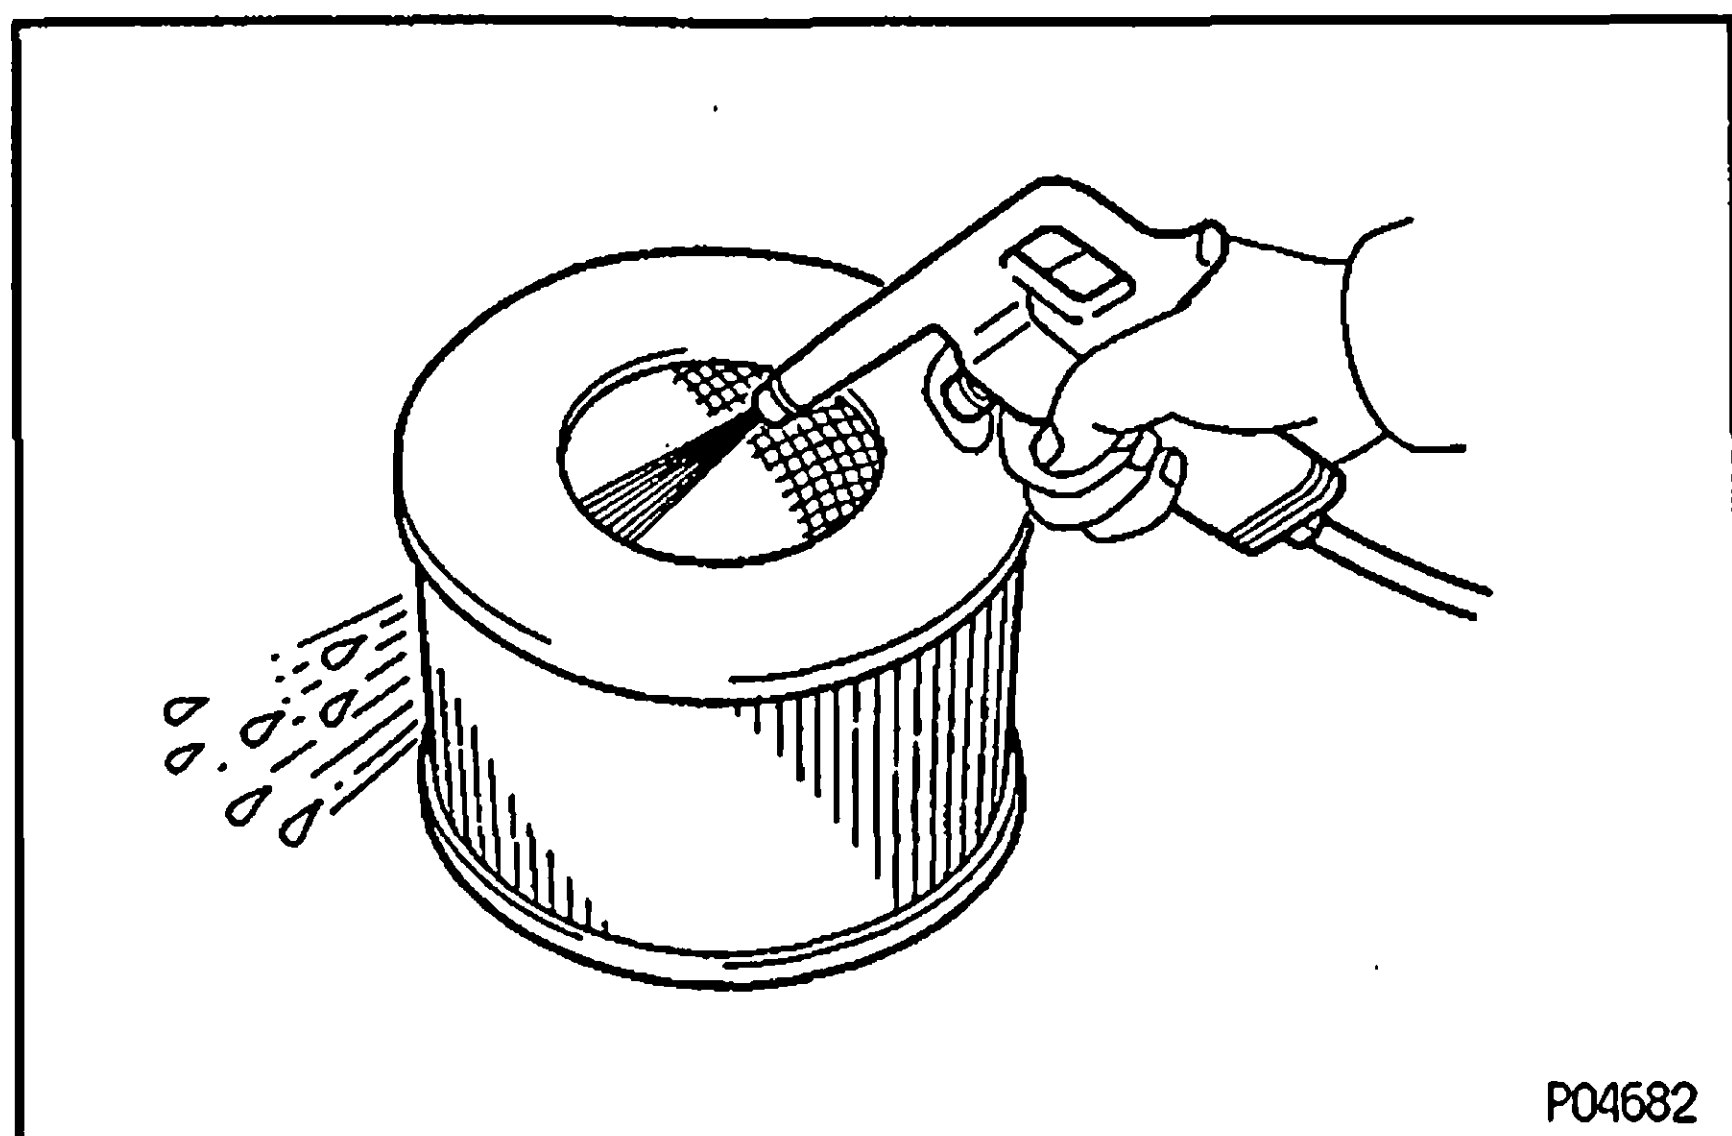

- (d) Remove excess water by shaking the element or blowing with compressed air.
NOTICE: Do not beat or drop filter element.
- (e) Wipe off dust on the air cleaner case interior.

EG

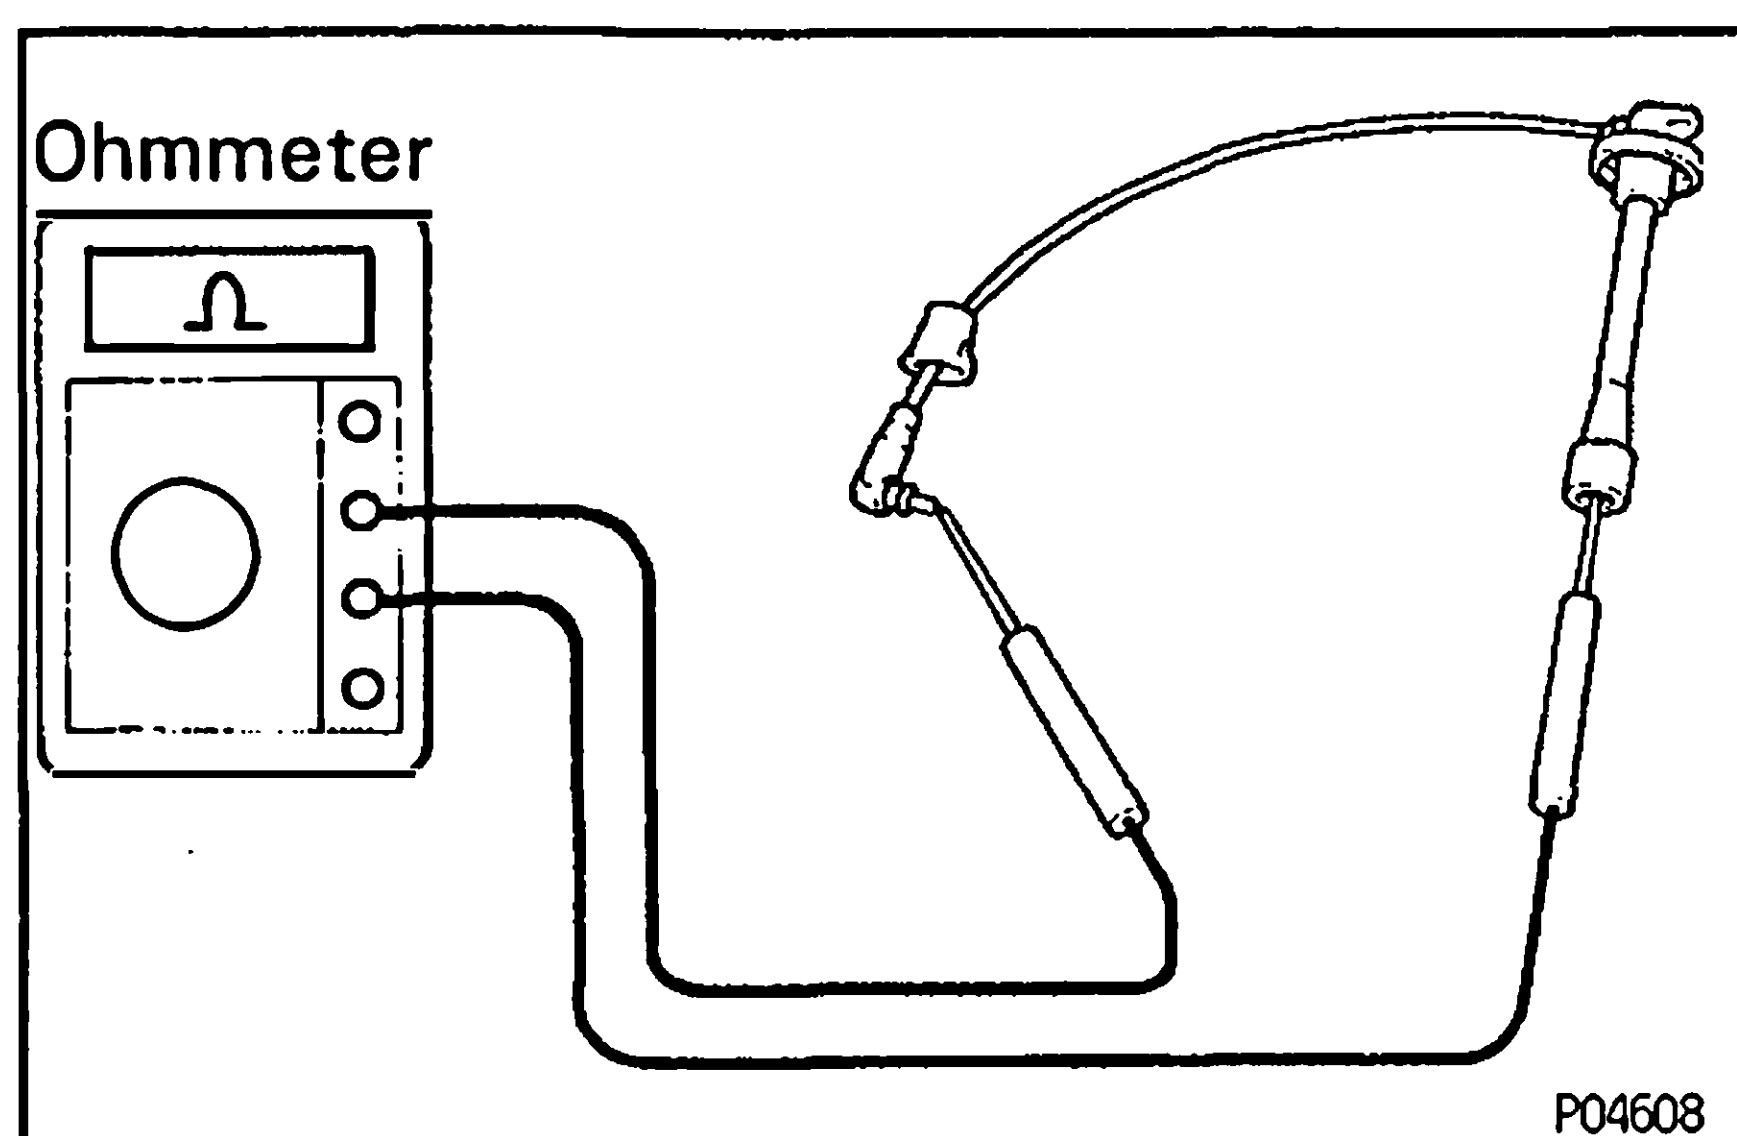

HIGH—TENSION CORDS INSPECTION

EG087-02

(See IG section)

Maximum resistance:
25 k Ω per cord

SPARK PLUGS INSPECTION

EG09E-01


(See IG section)

Recommended spark plug:

ND	K16R-U
NGK	BKR5EYA

Correct electrode gap:

0.8 mm (0.031 in.)

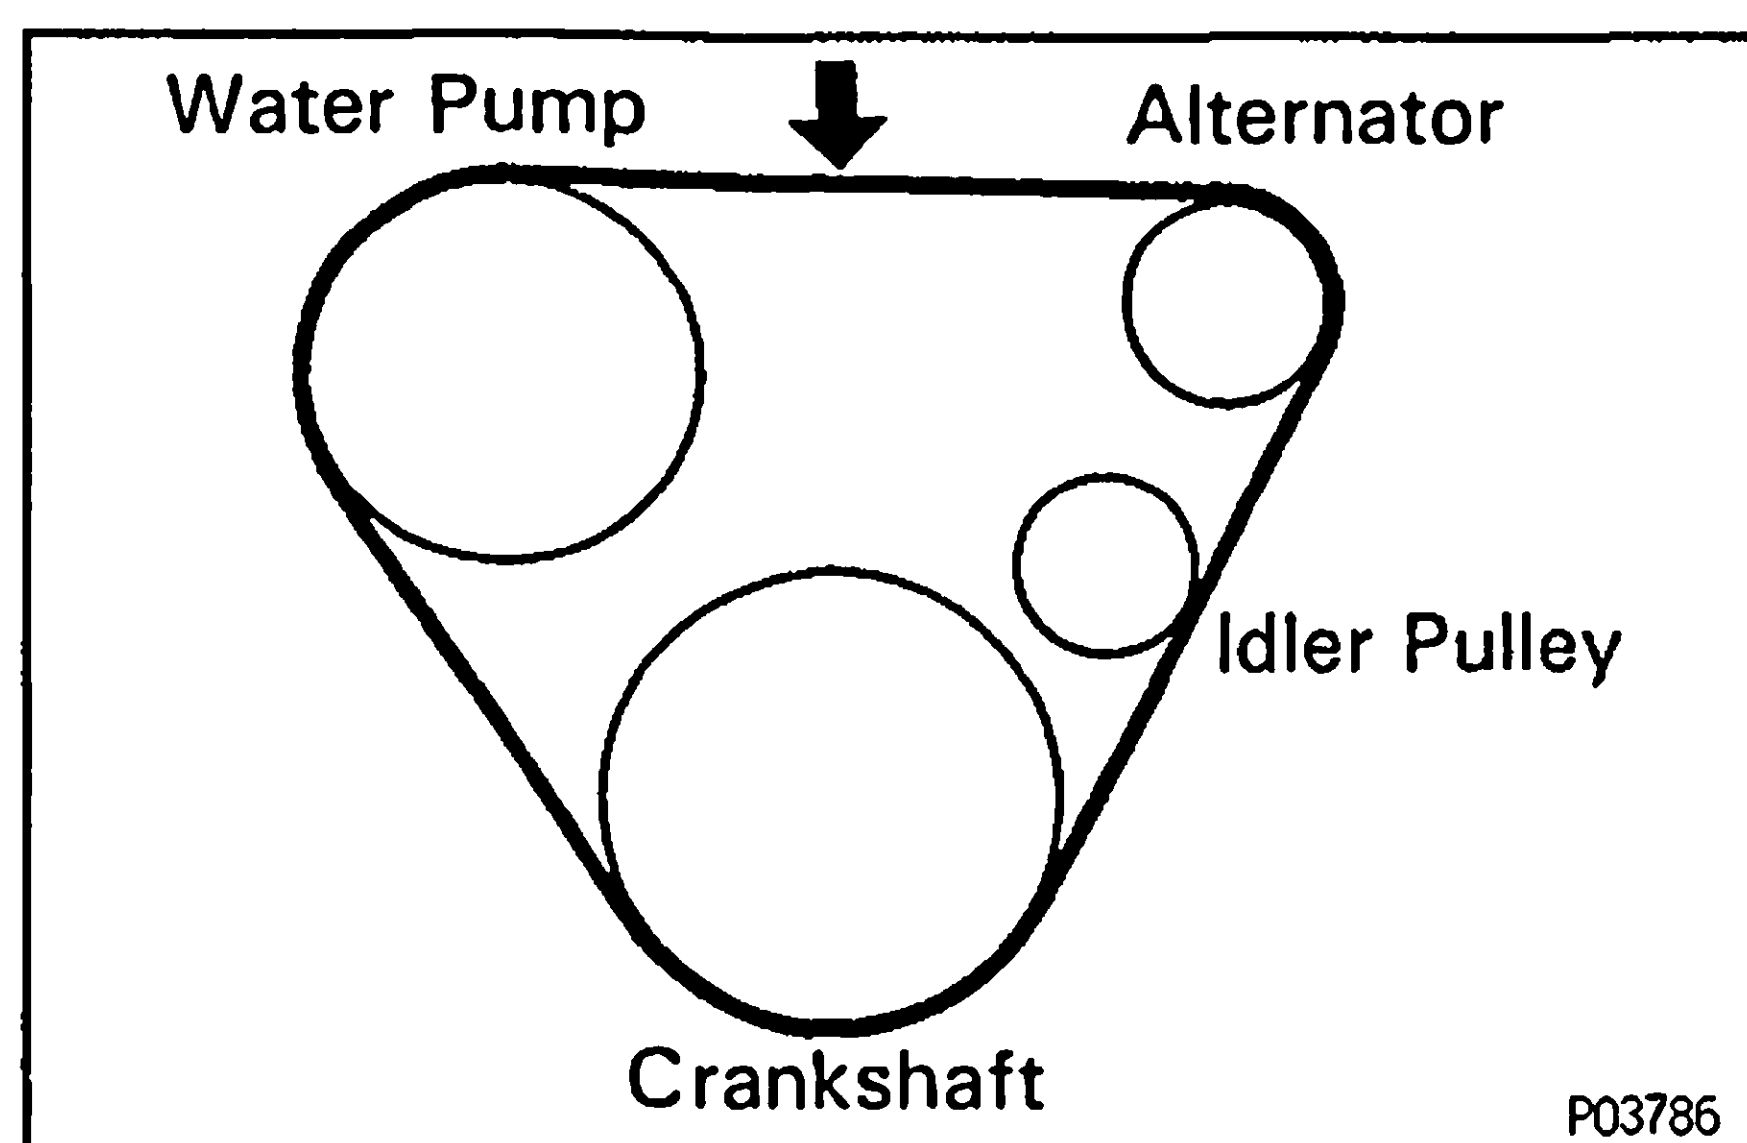

ALTERNATOR DRIVE BELT INSPECTION

EG0LL-02

(See CH section)


Drive belt deflection [w/ 98 N (10kgf, 22 lbf)]:

New belt

11 — 15 mm (0.43 — 0.59 in.)

Used belt

15 — 20 mm (0.59 — 0.79 in.)

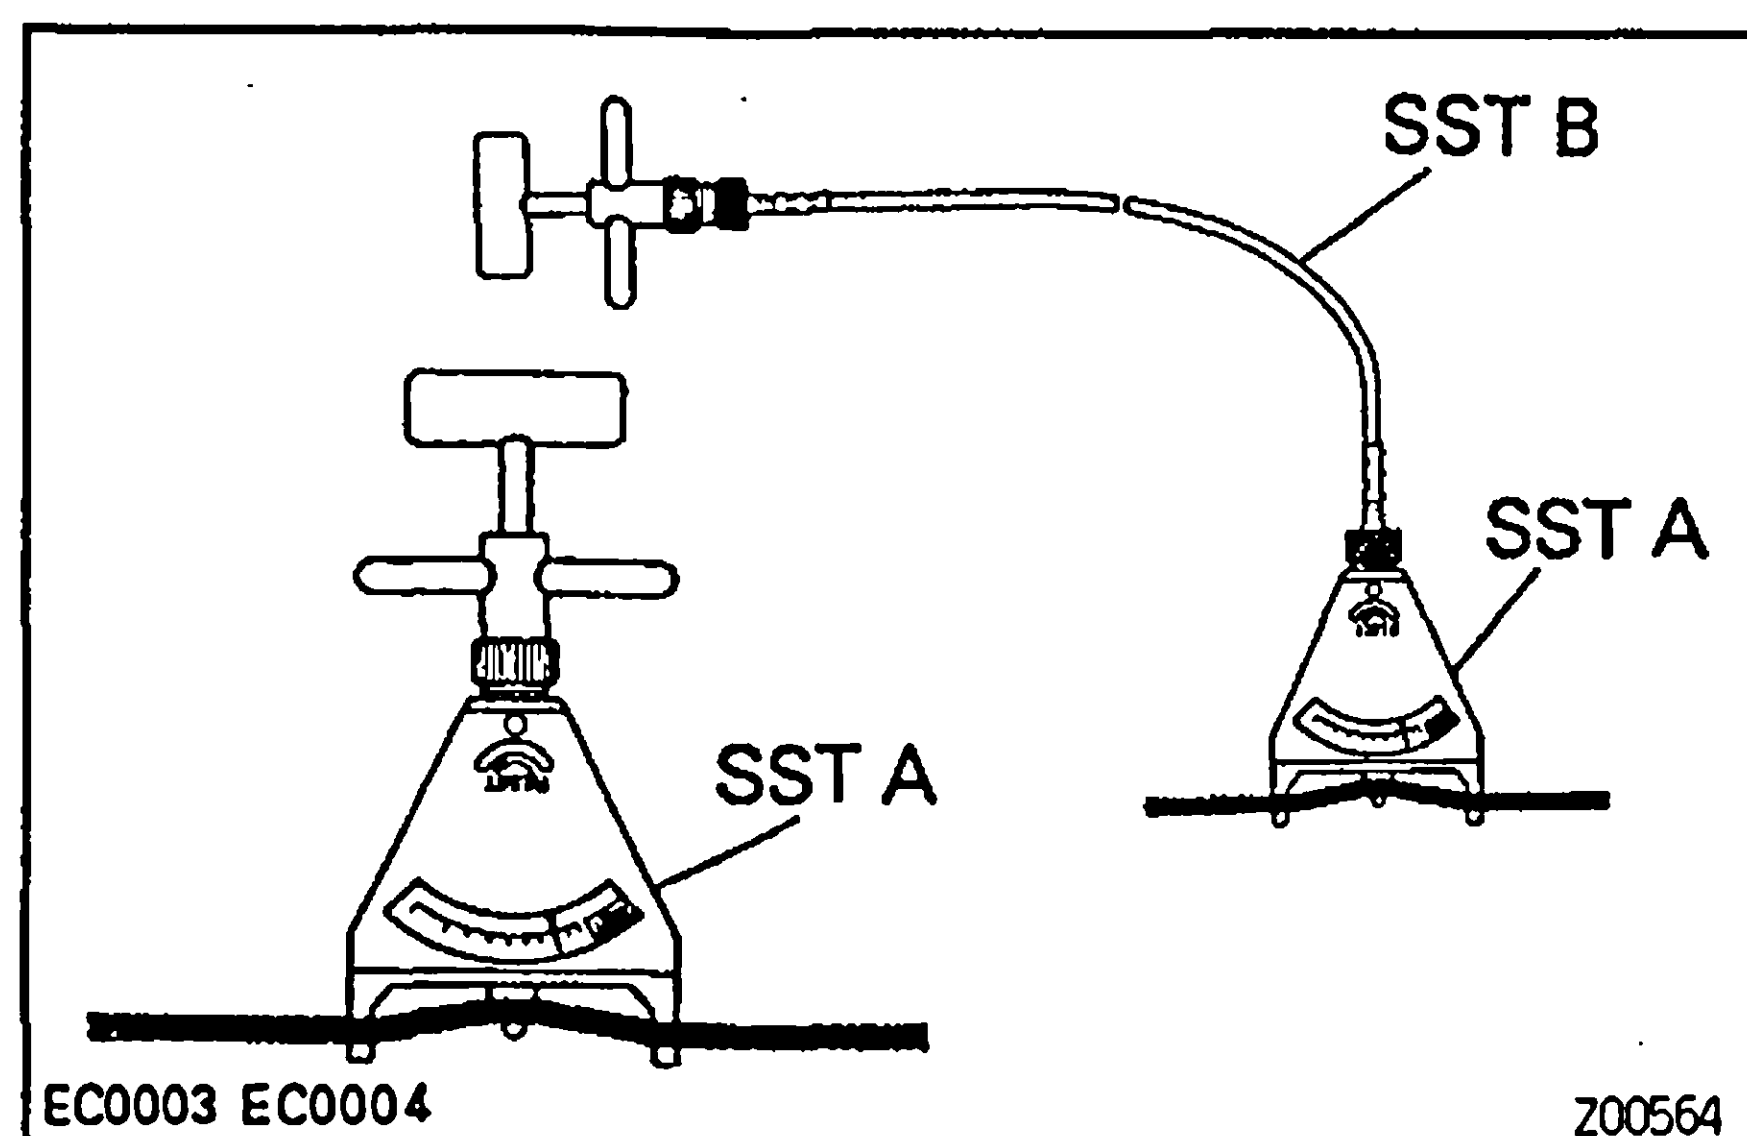

Drive belt tension [w/ SST]:

New belt

33 — 57 kgf

Used belt


15 — 35 kgf

VALVE CLEARANCE INSPECTION AND ADJUSTMENT

HINT: Inspect and adjust the valve clearance when the engine is cold.


1. DISCONNECT ACCELERATOR CABLE

EG

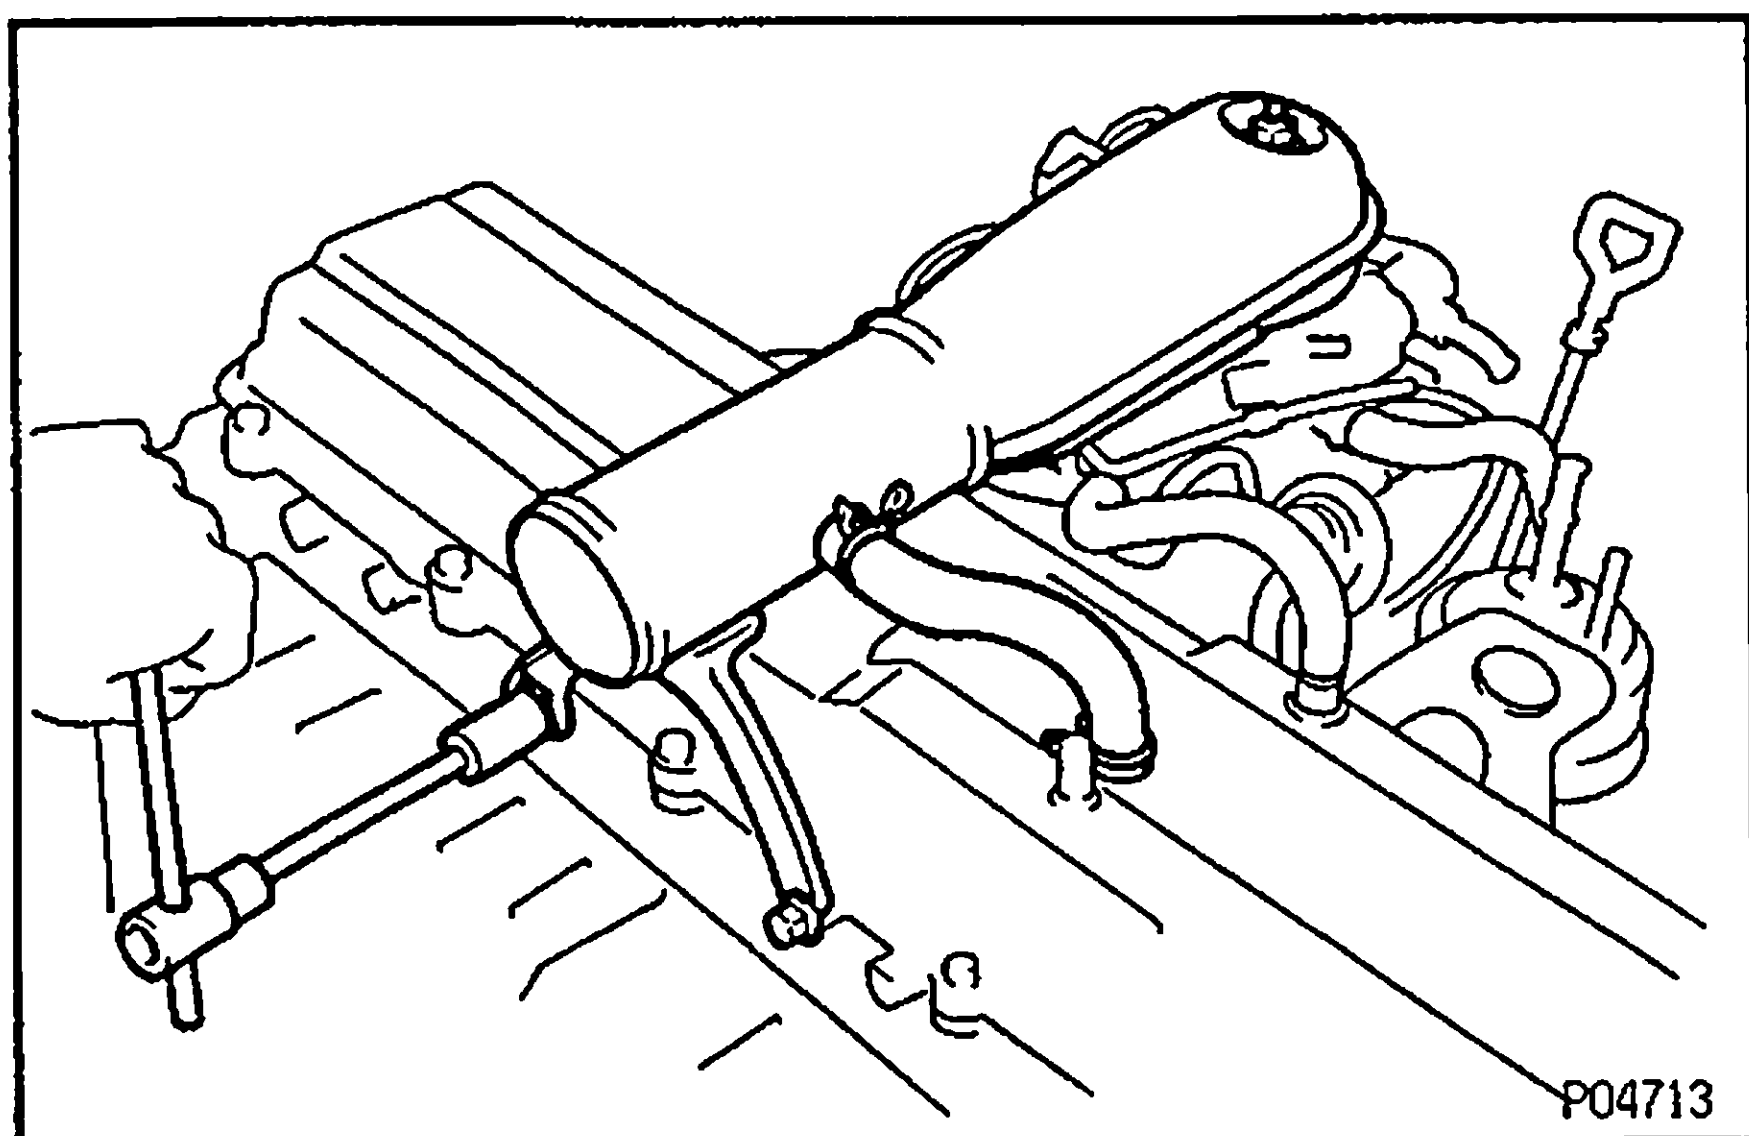


2. REMOVE INTAKE AIR CONNECTOR

- (a) Disconnect the PCV hose.
- (b) Remove the two bolts, nut and air intake connector.

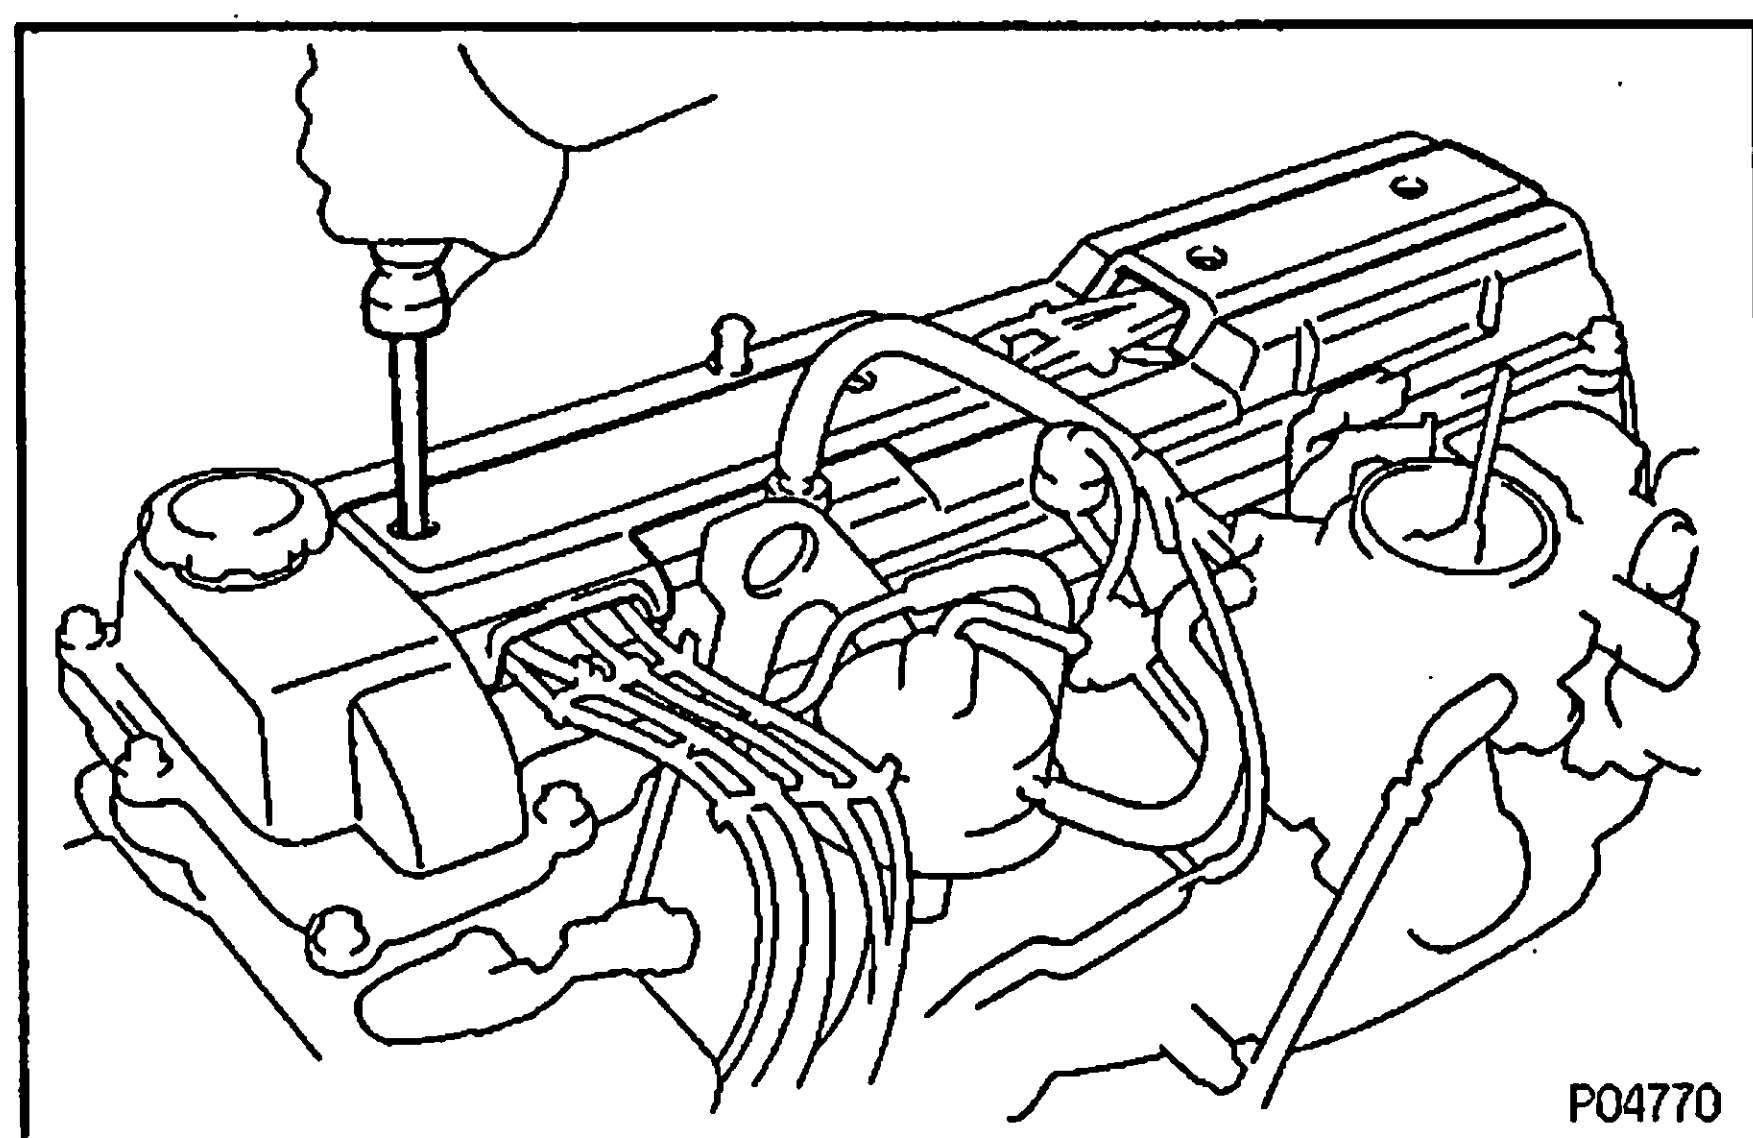


3. REMOVE NO.2 AND NO.3 CYLINDER HEAD COVERS


Remove the four bolts and head covers.

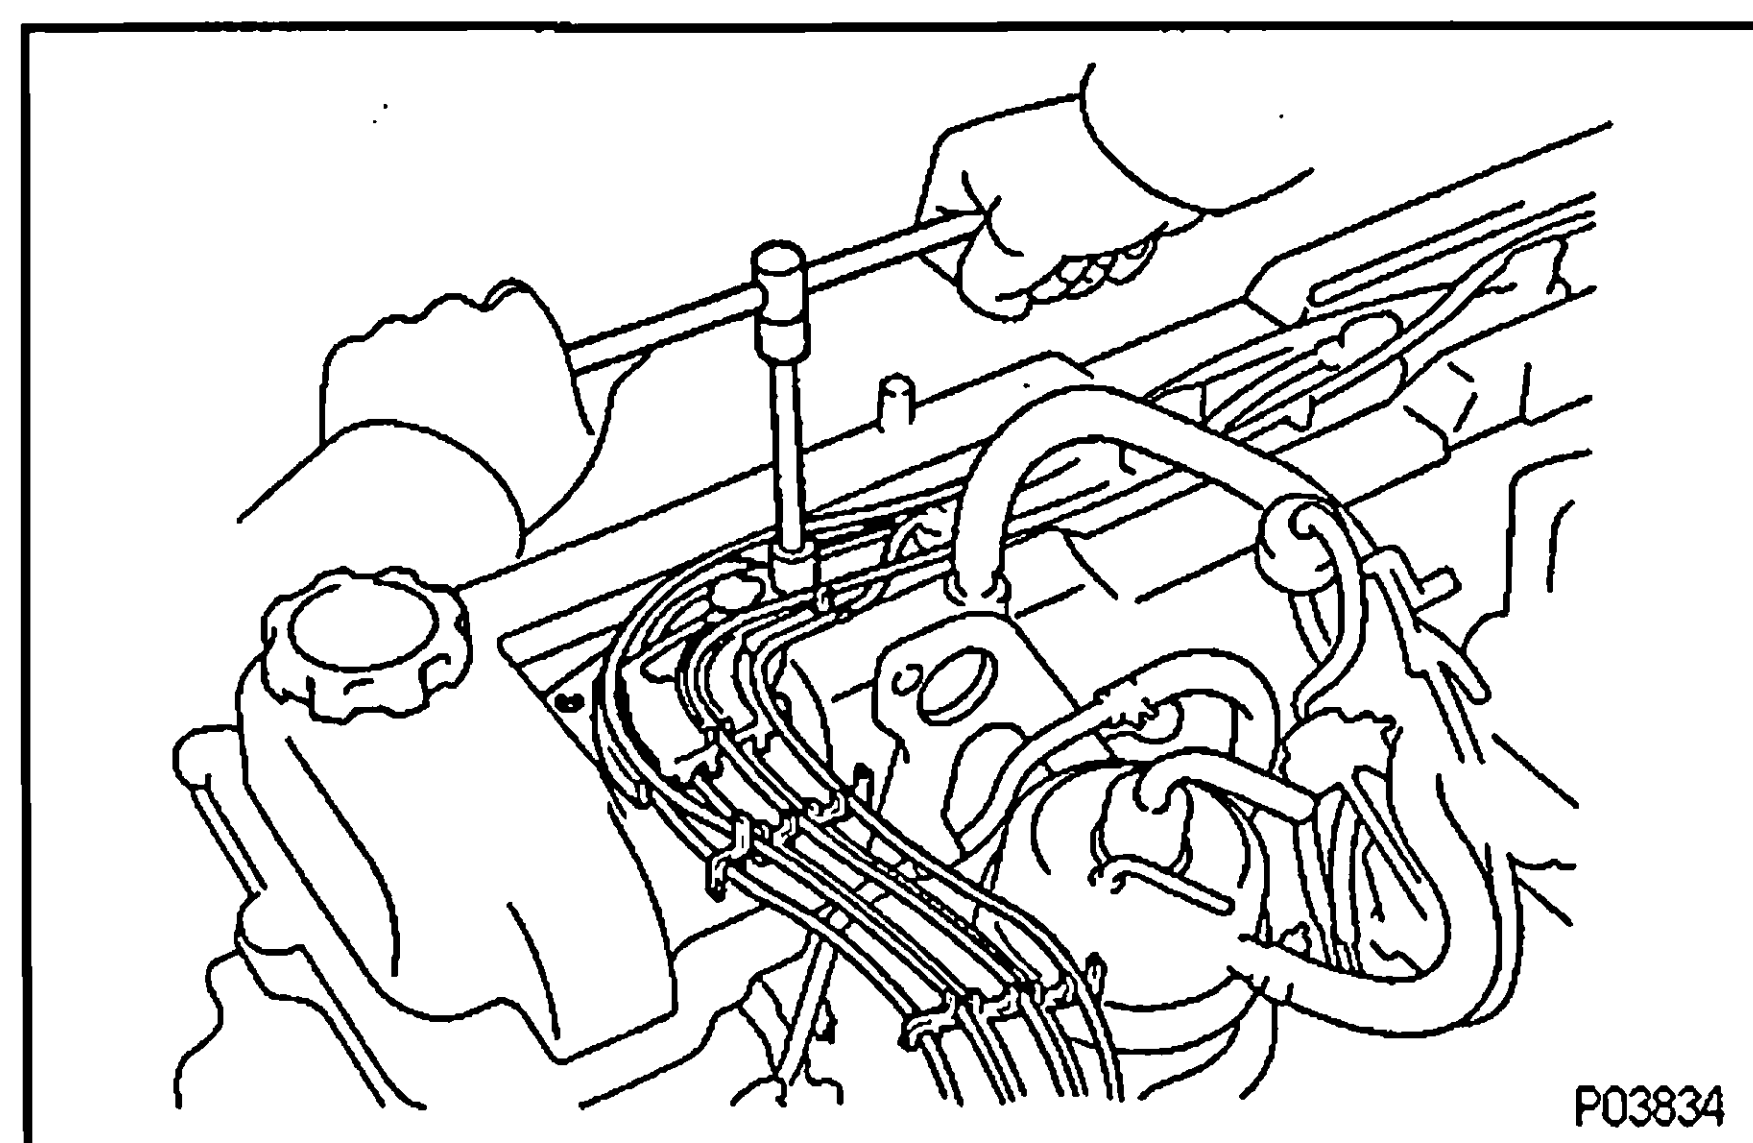

4. DISCONNECT HIGH — TENSION CORDS FROM SPARK PLUGS

- (a) Remove the No.1 cord clamp mounting bolt.
- (b) Disconnect the high — tension cords at the rubber boot.
Do Not pull on the cords.
NOTICE: Pulling on or bending the cords may damage the conductor inside.

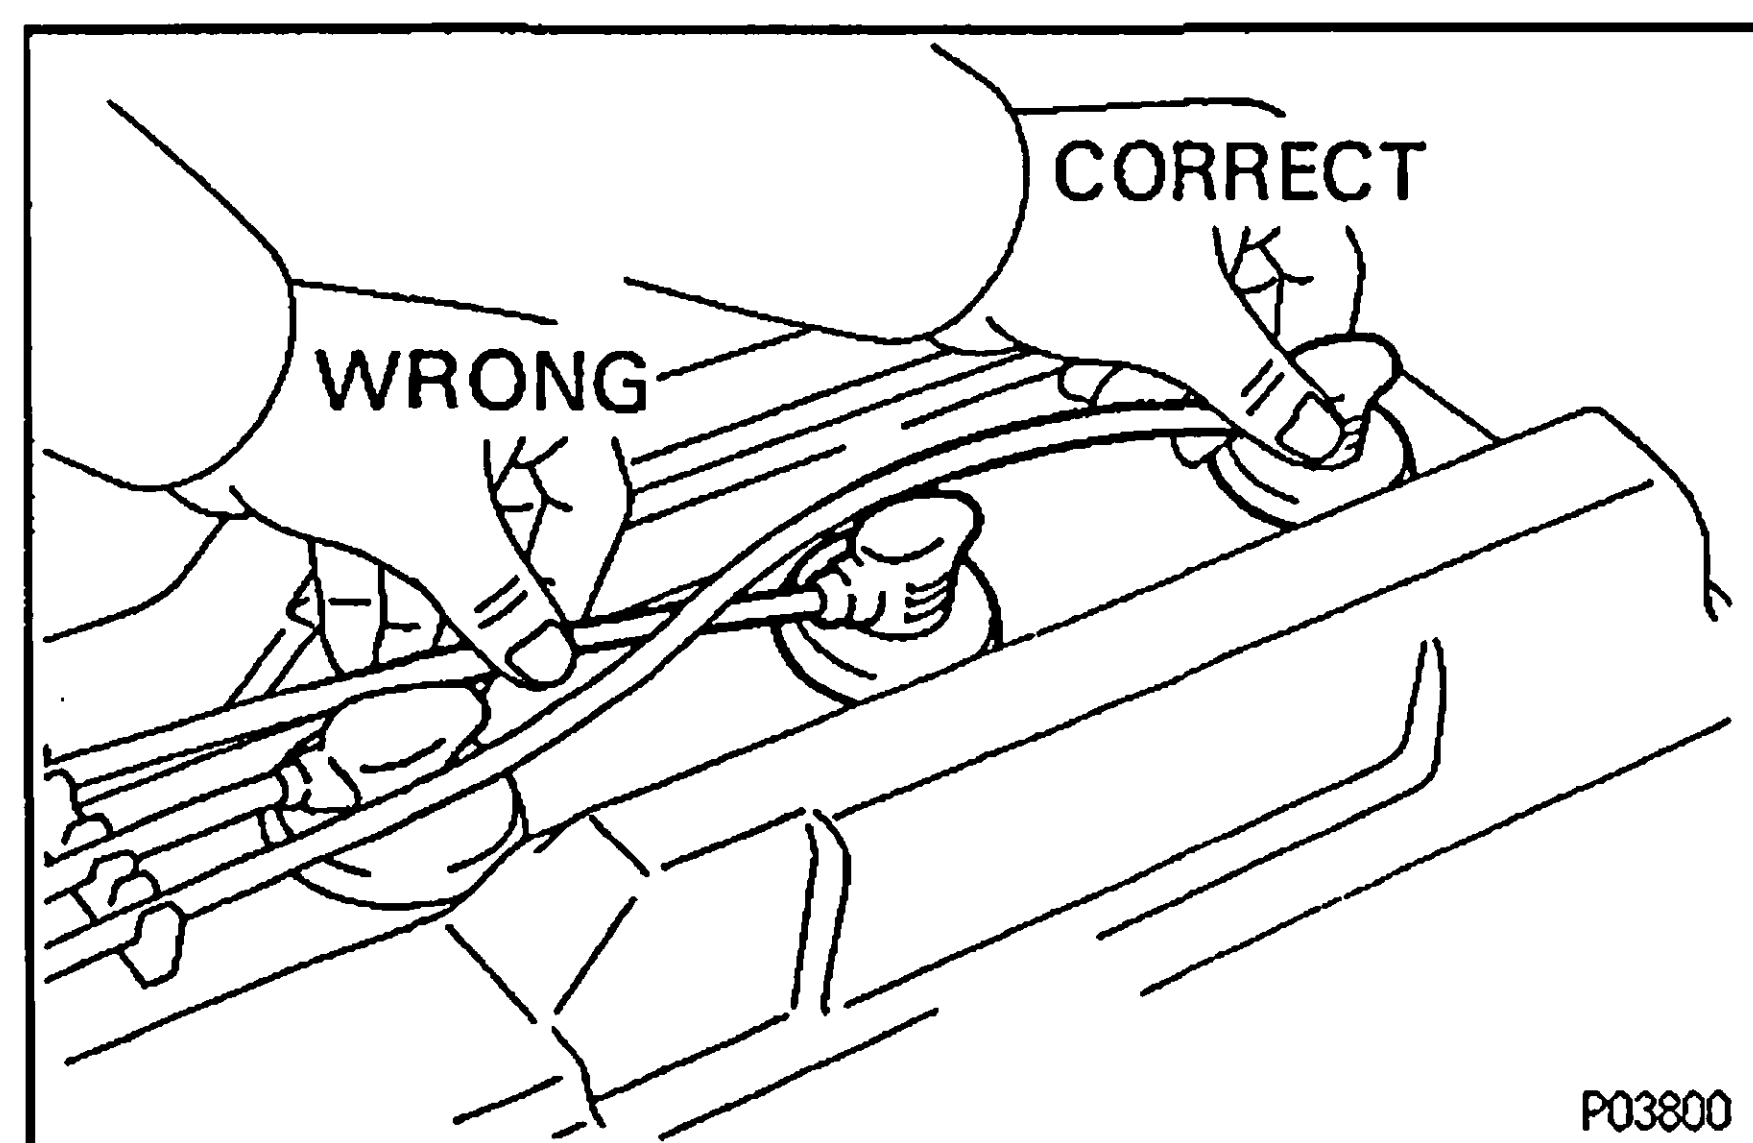


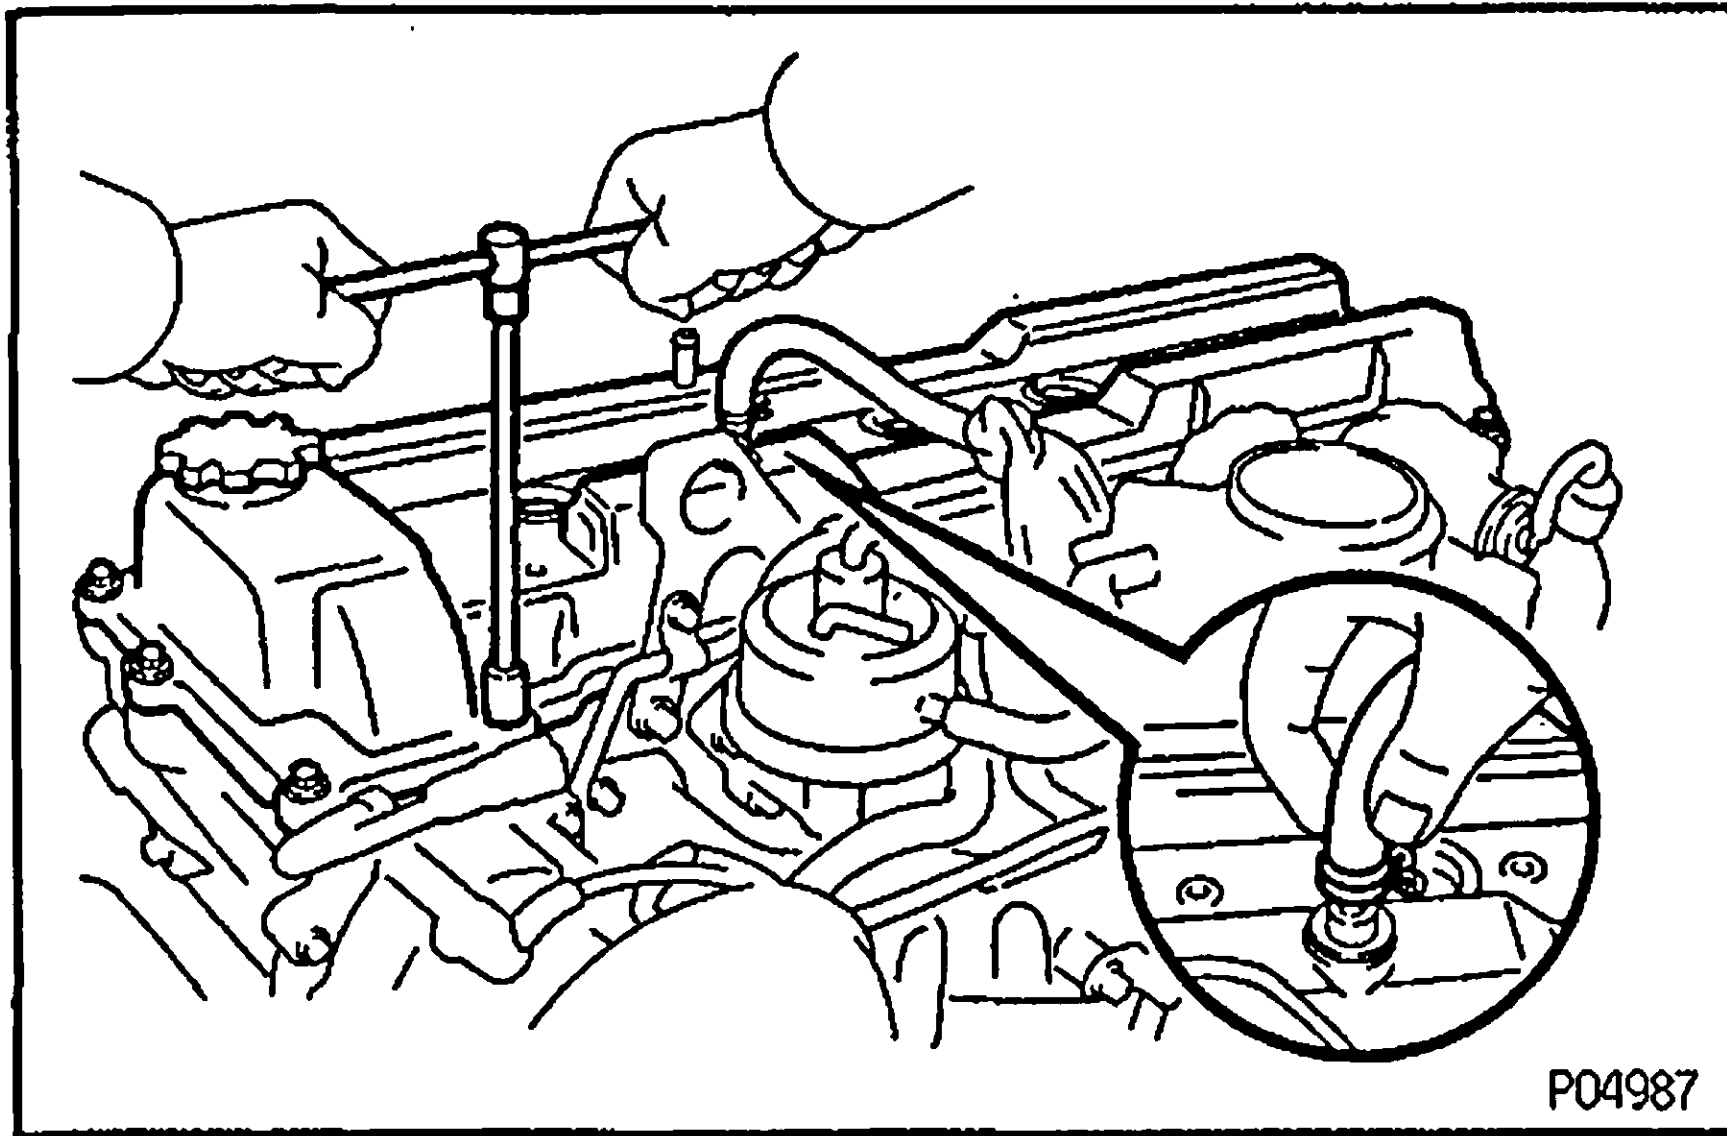

5. REMOVE CYLINDER HEAD COVER


- (a) Disconnect the PCV hose.
- (b) Remove the 13 bolts, cylinder head cover and gasket.

EG

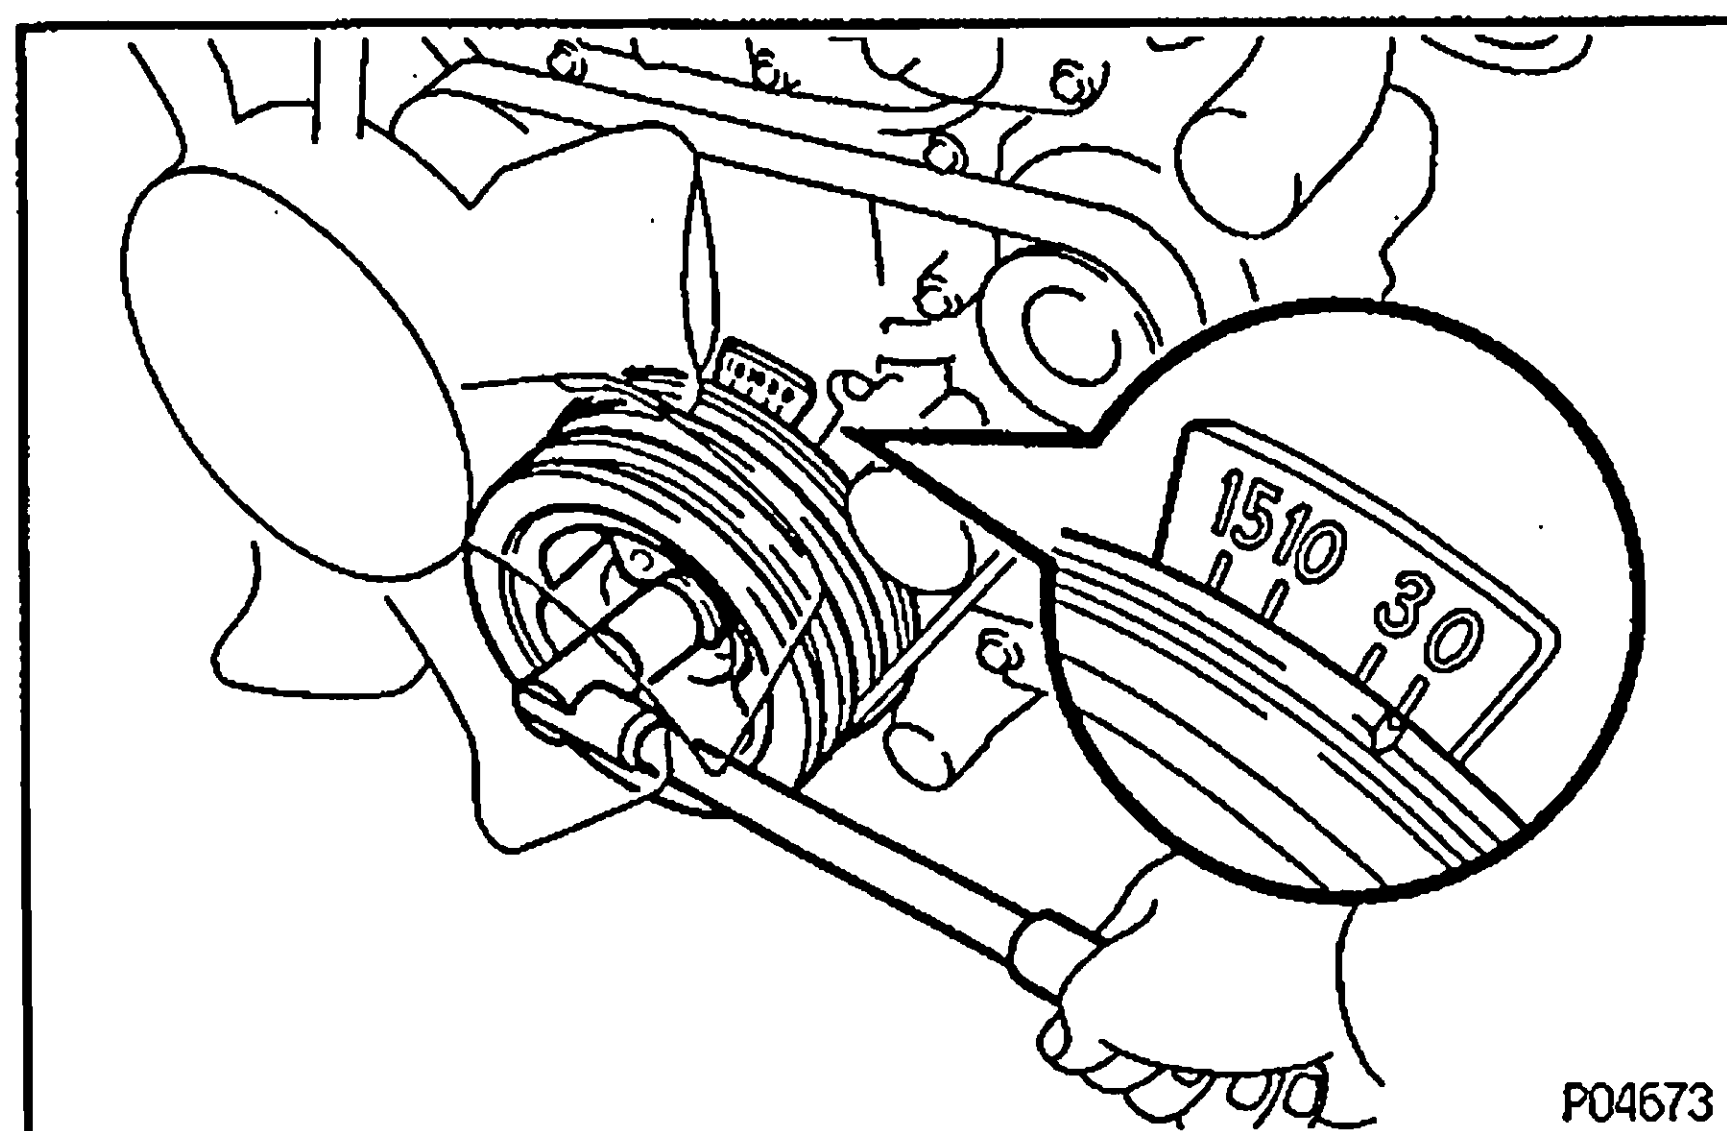


6. SET NO.1 CYLINDER TO TDC/COMPRESSION

- (a) Turn the crankshaft pulley, and align its groove with the timing mark "0" of the timing chain cover.

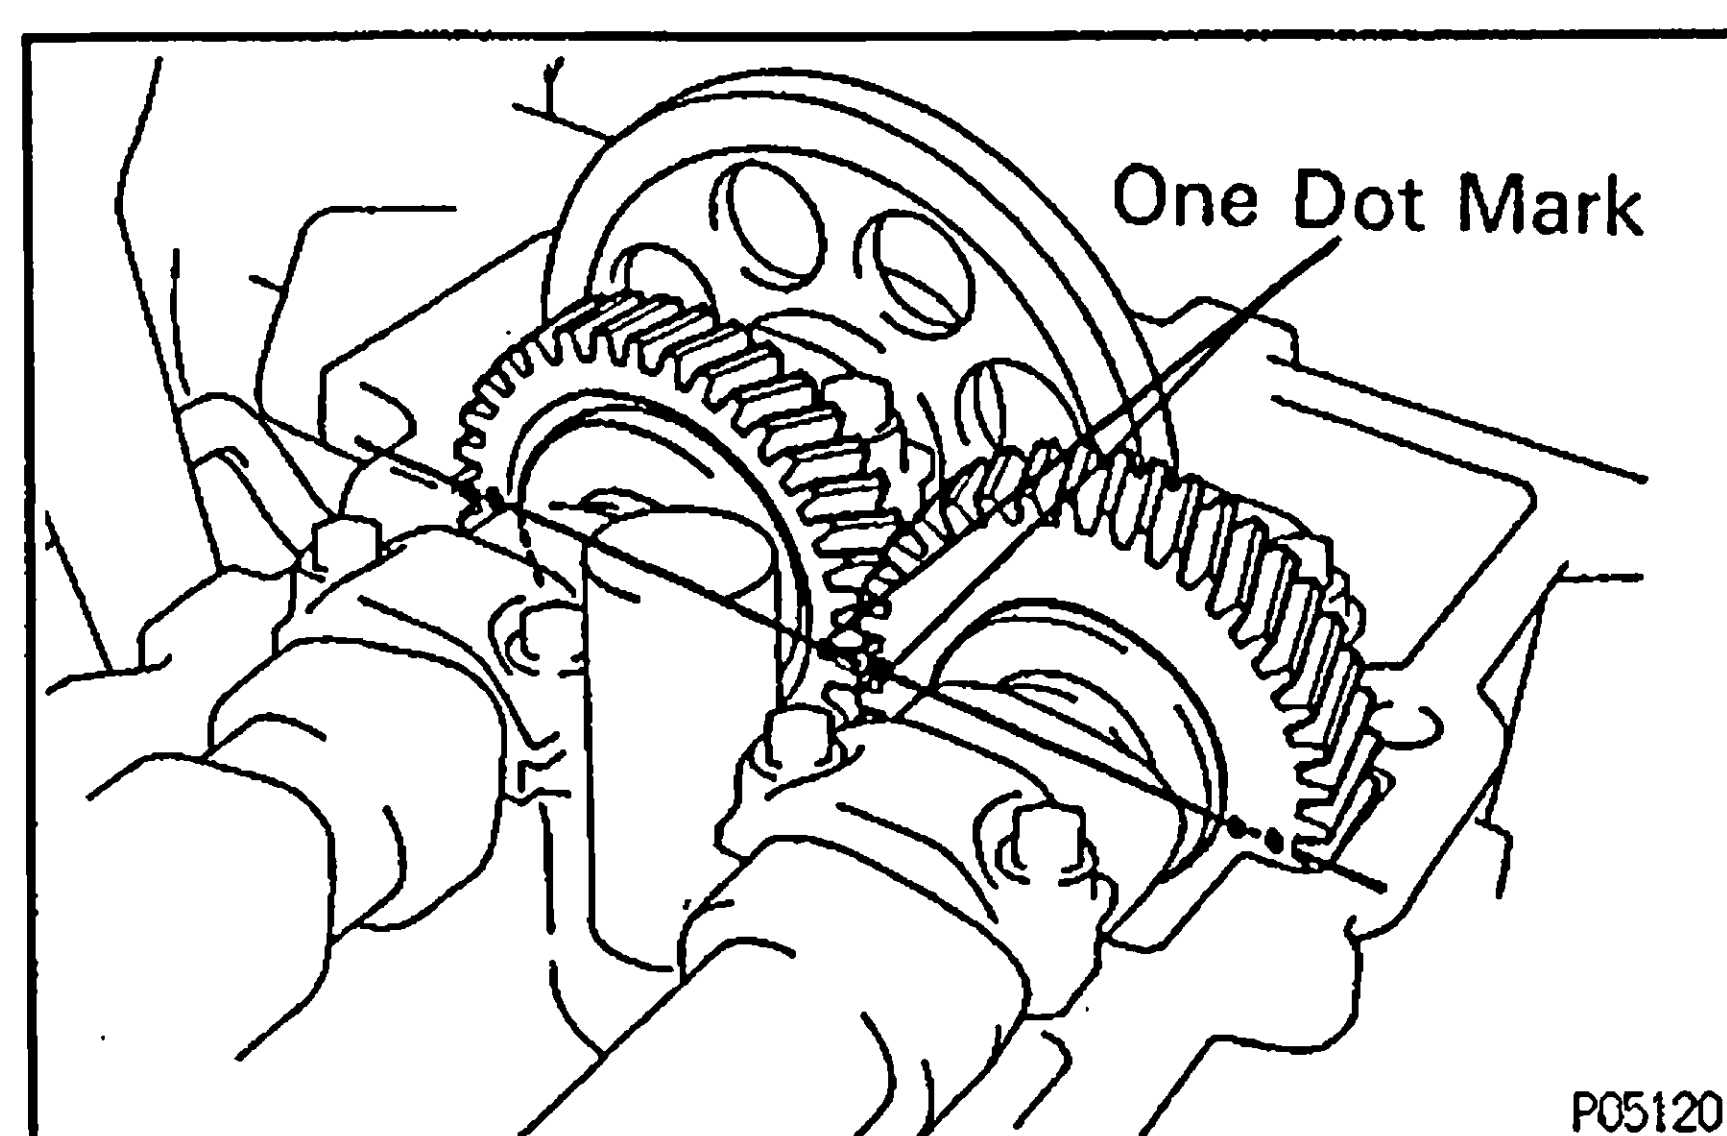

- (b) Check that the timing marks (one and two dots) of the camshaft drive and driven gears are in straight line on the cylinder head surface as shown in the illustration. If not, turn the crankshaft one revolution (360°) and align the marks as above.

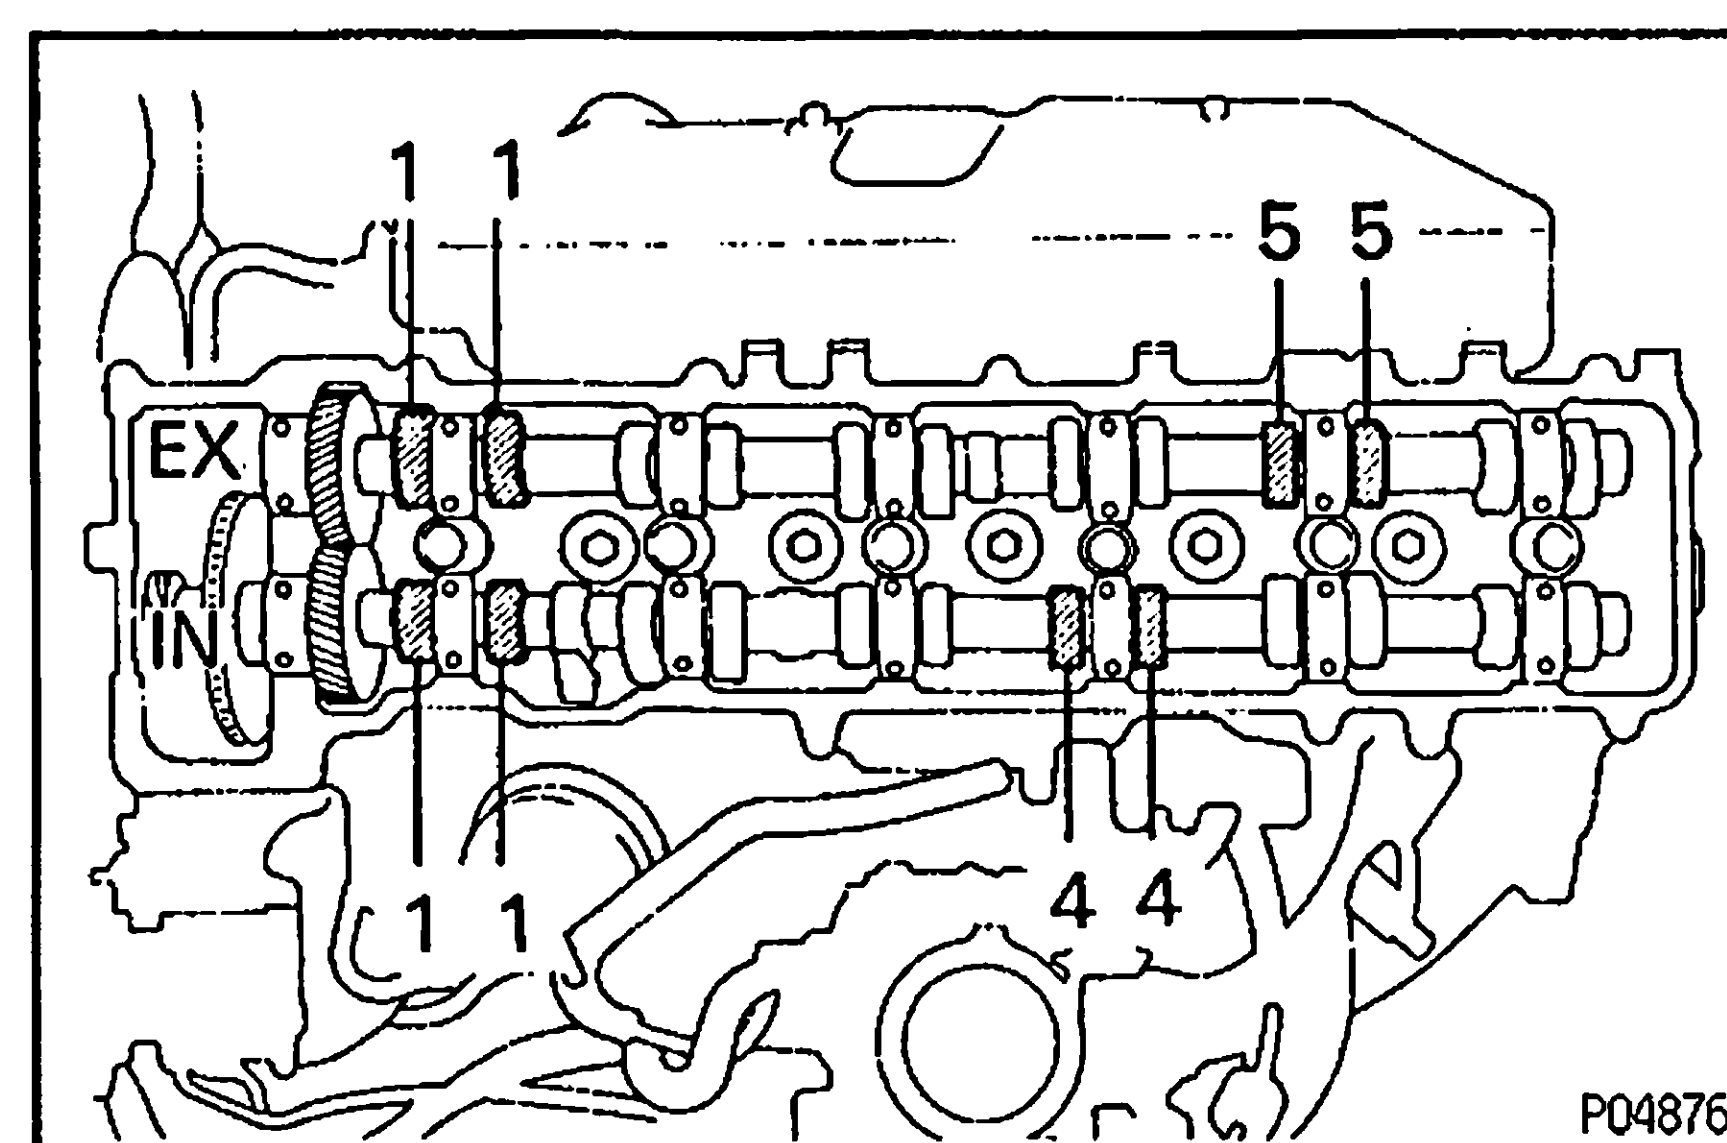

7. INSPECT VALVE CLEARANCE

- (a) Check only the valves indicated.
 - Using a thickness gauge, measure the clearance between the valve lifter and camshaft.
 - Record the out — of — specification valve clearance measurements. They will be used later to determine the required replacement adjusting shim.

Valve clearance (Cold):


Intake

0.15 — 0.25 mm (0.006 — 0.010 in.)


Exhaust

0.25 — 0.35 mm (0.010 — 0.014 in.)


EG

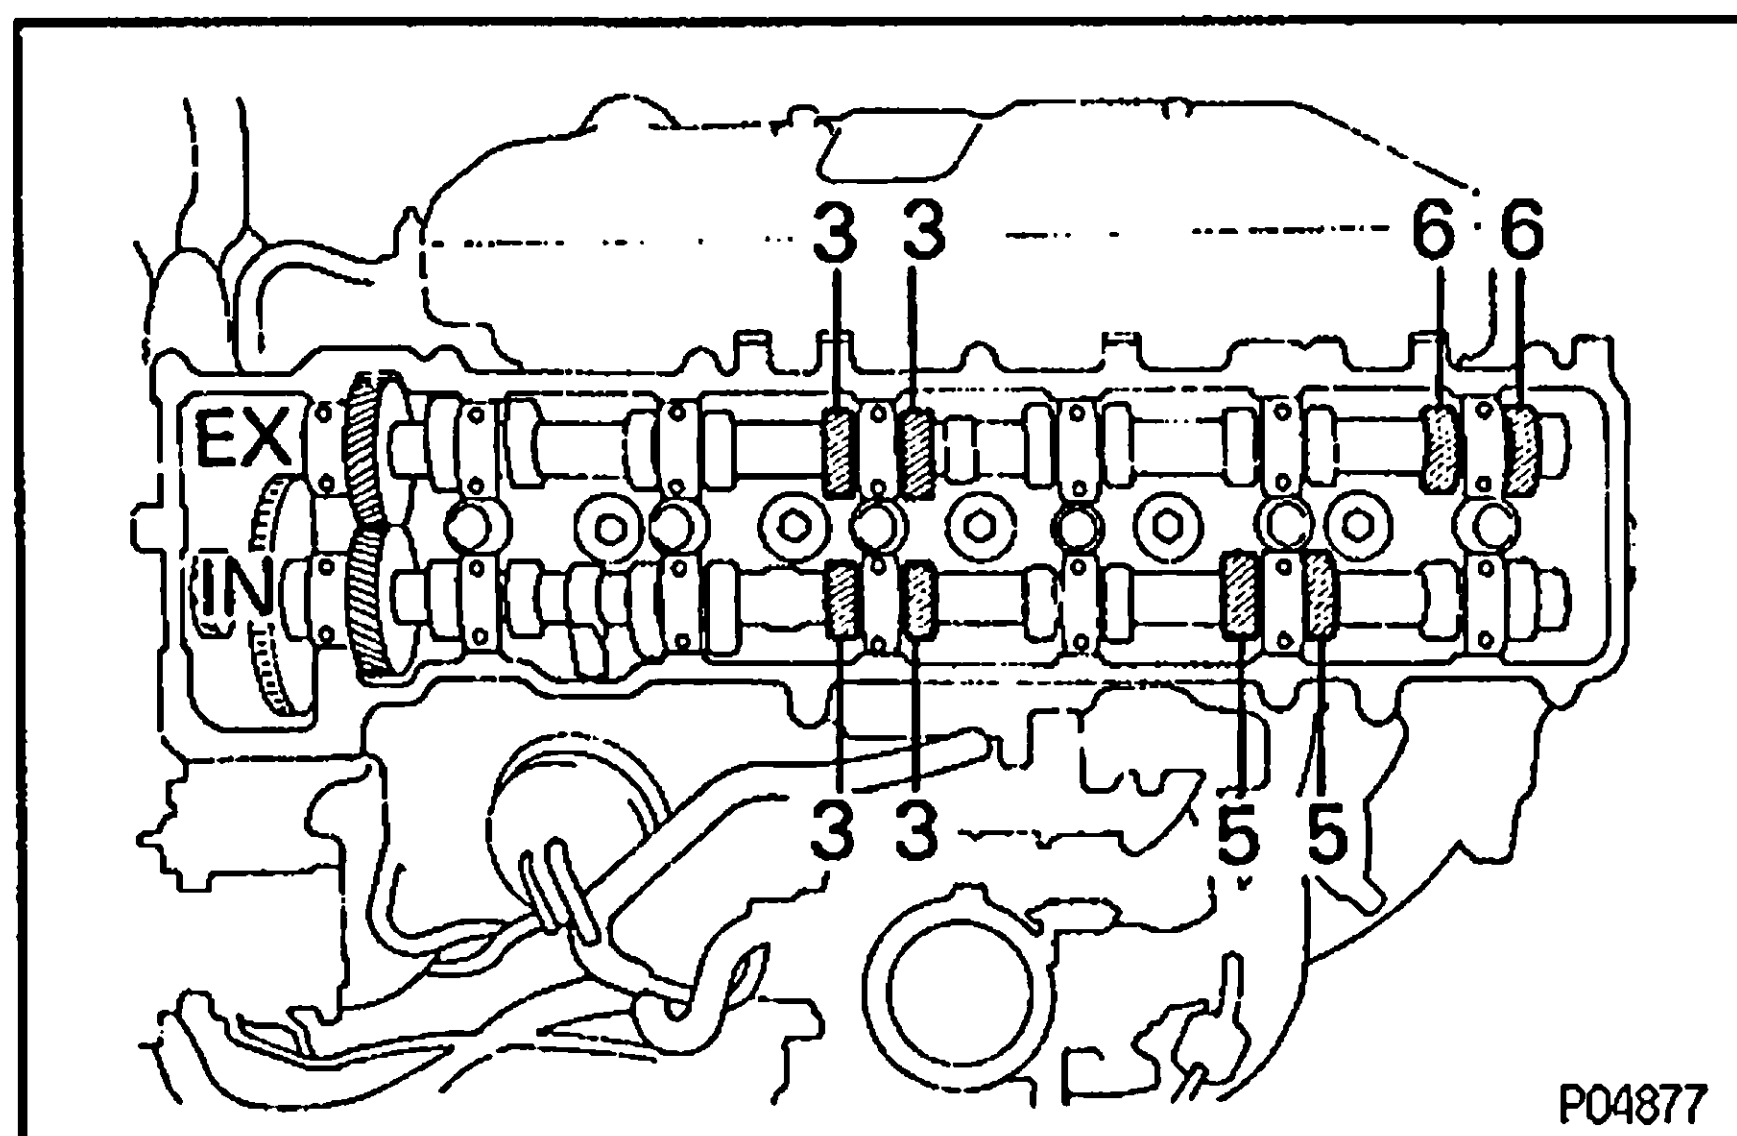

- (b) Turn the crankshaft $2/3$ of a revolution (240°), check only the valves indicated in the illustration. Measure the valve clearance.
[See procedure in step (a)]

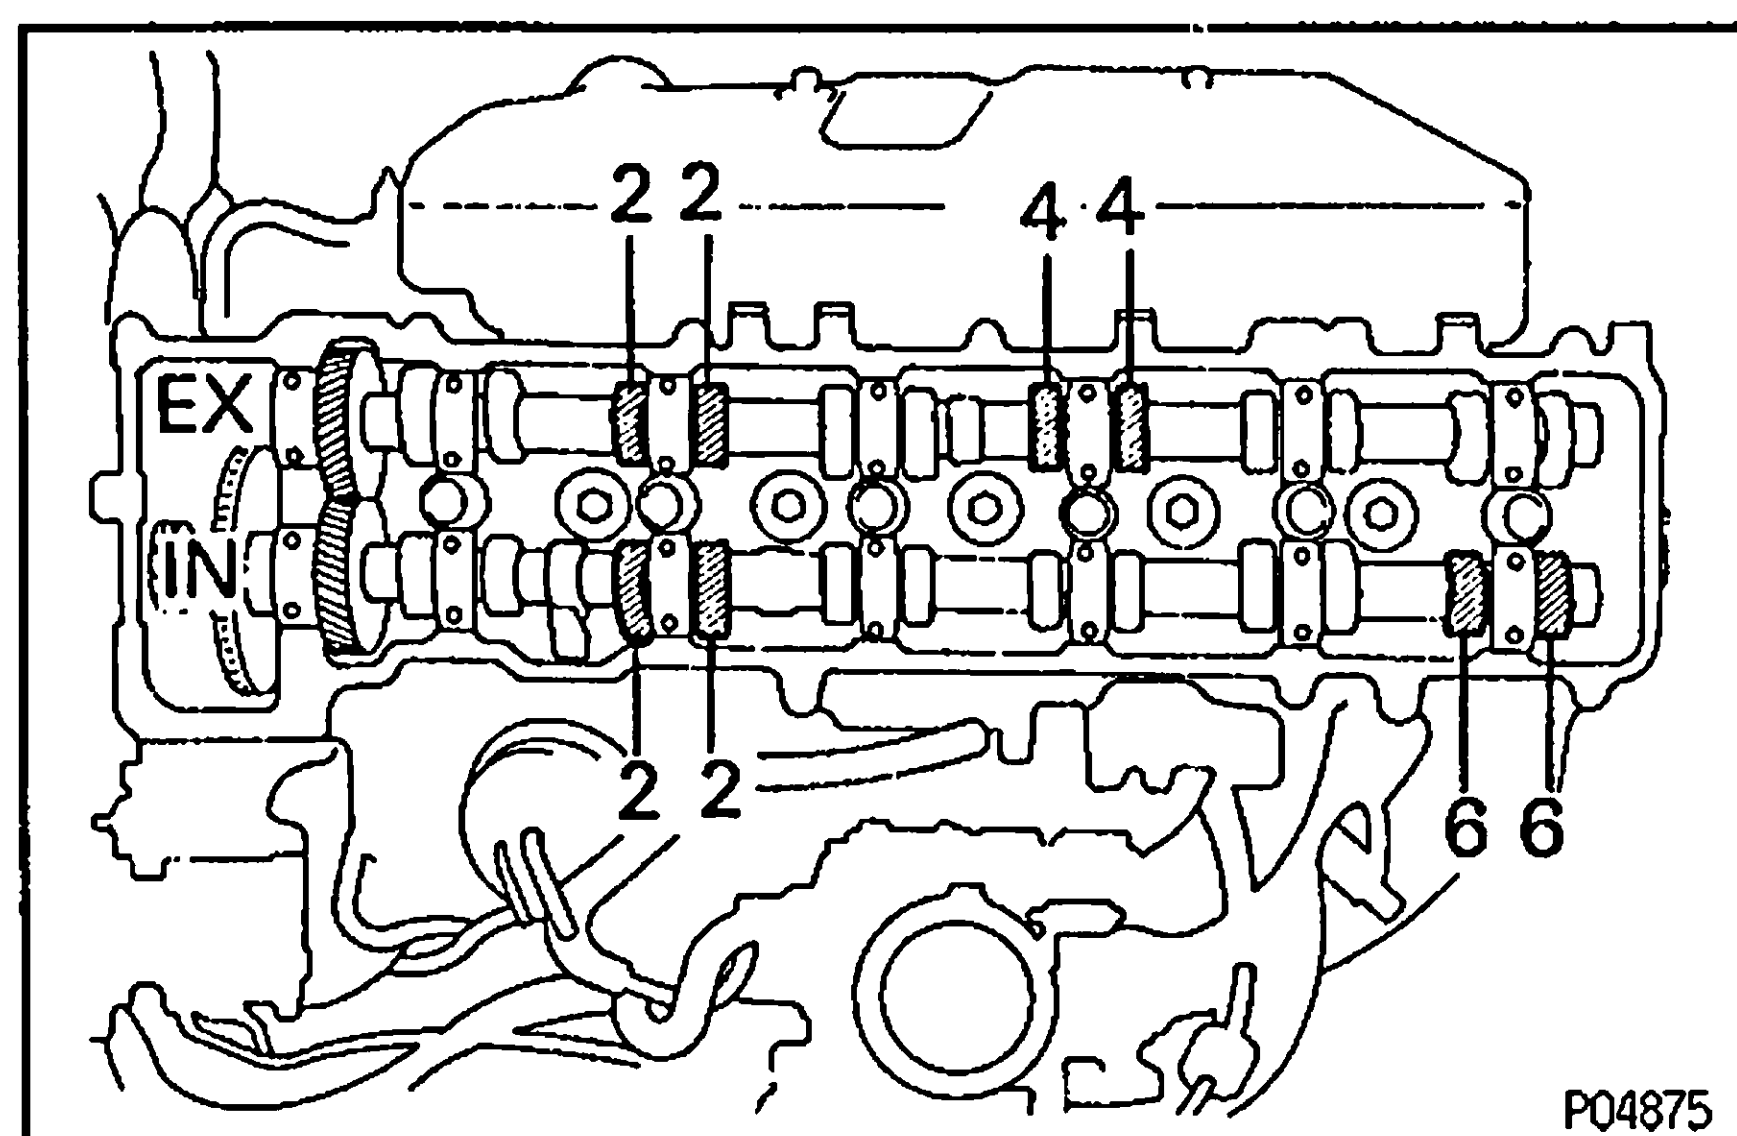


- (c) Turn the crankshaft a further $2/3$ of a revolution (240°), check only the valves indicated in the illustration. Measure the valve clearance.
[See procedure in step (a)]

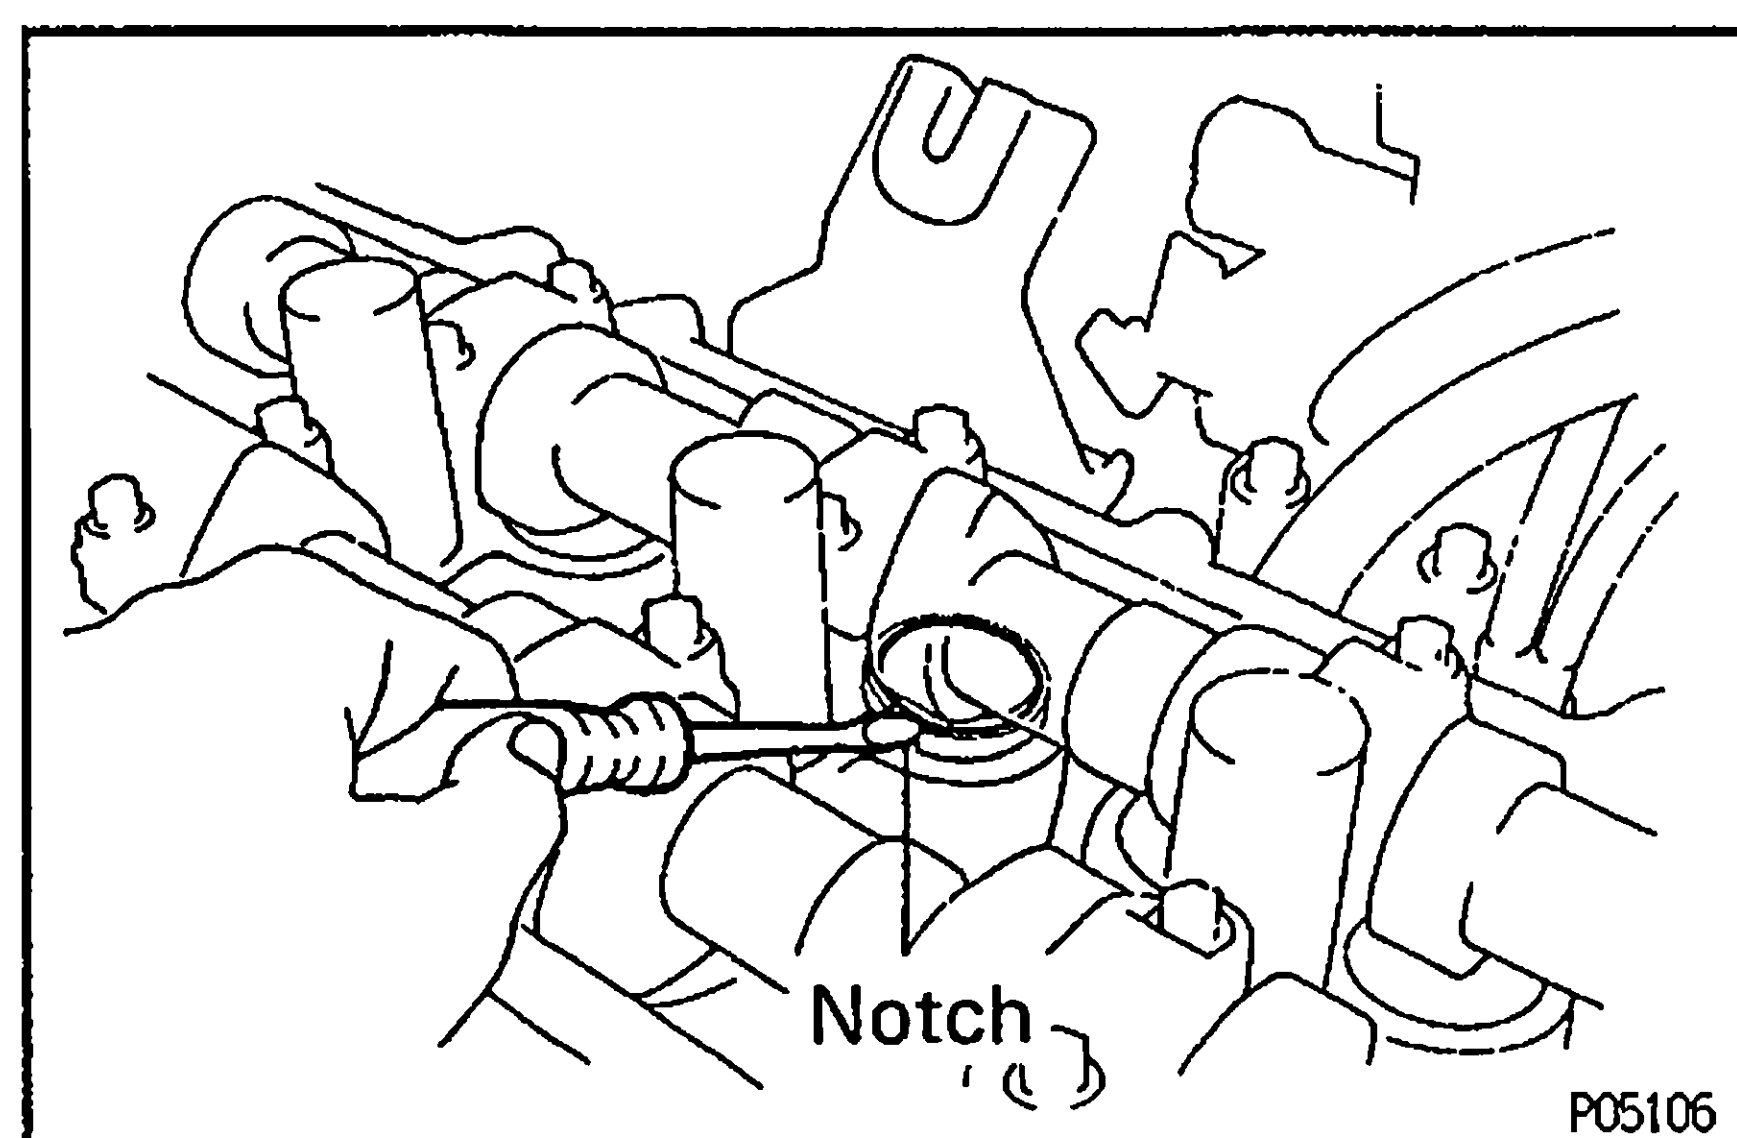

8. ADJUST VALVE CLEARANCE


- (a) Remove the adjusting shim.

- Turn the crankshaft so that the cam lobe for the valve to be adjusted faces up.
- Position the notch of the valve lifter toward the spark plug side.


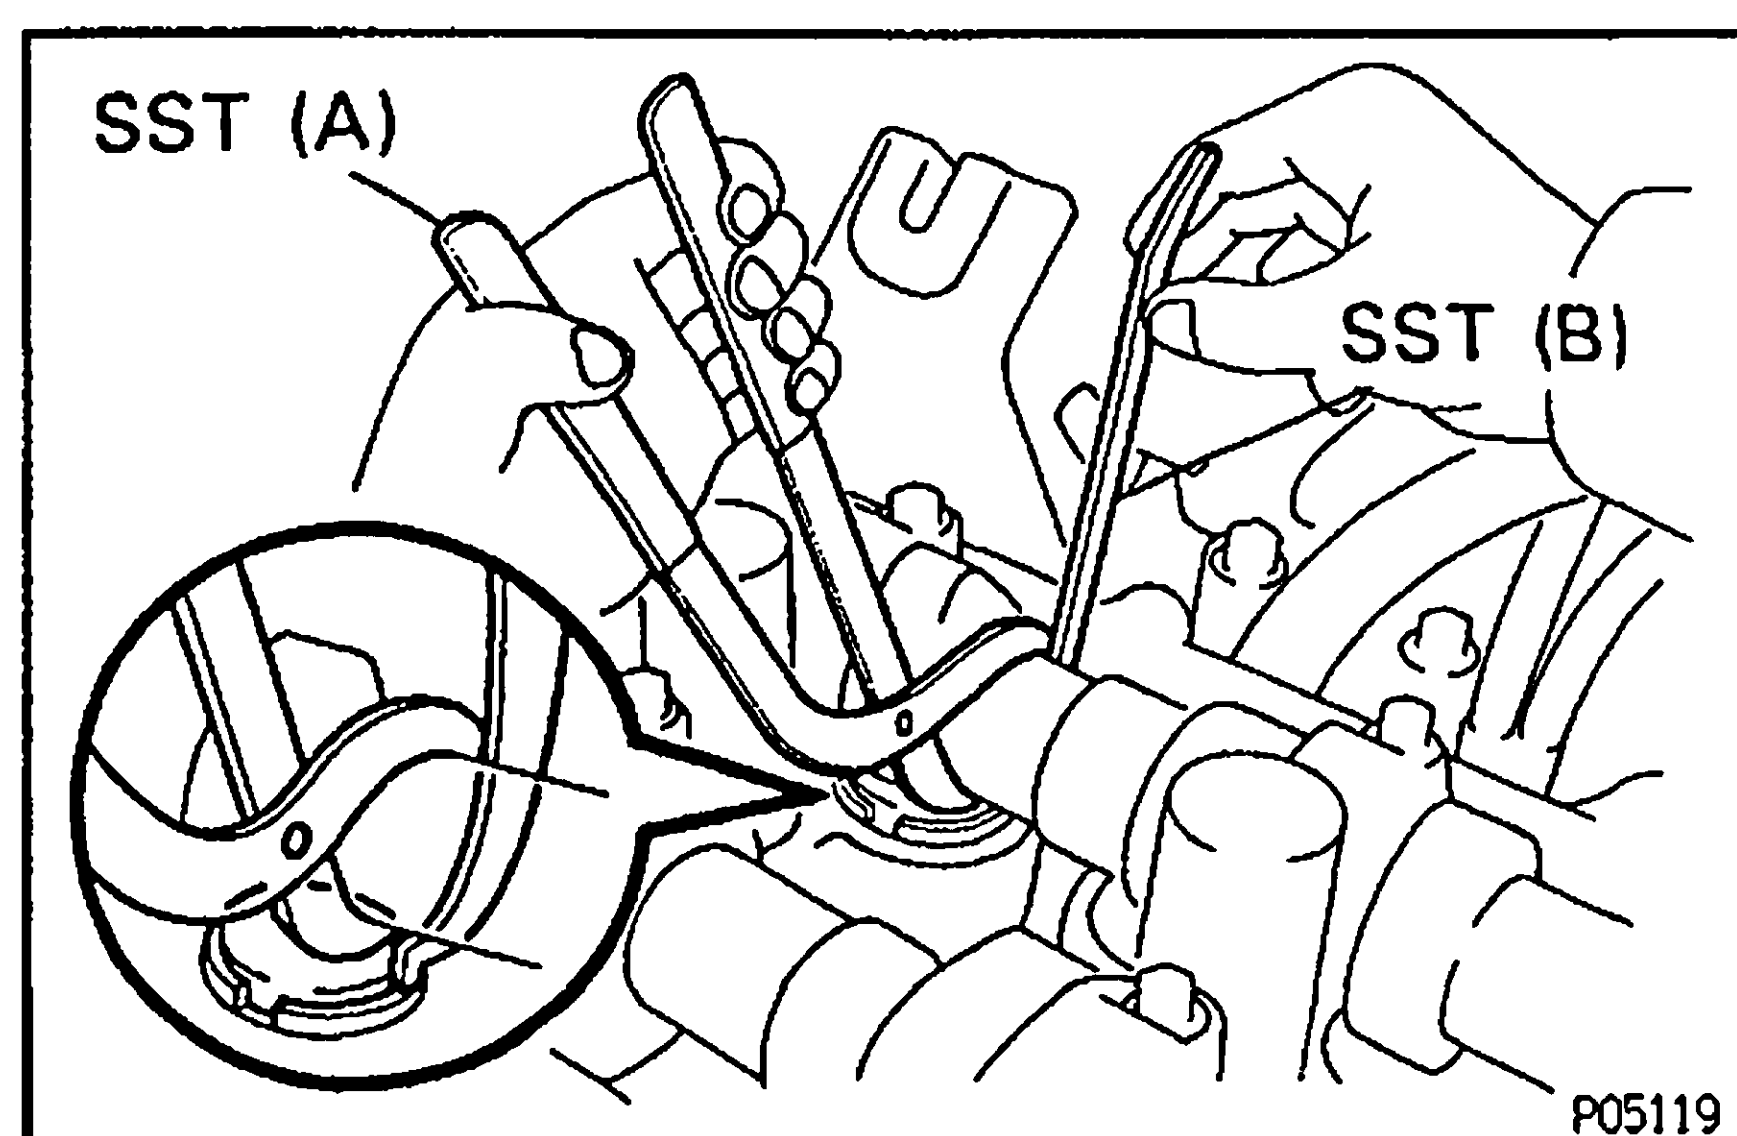


- Press down the valve lifter with SST (A), and place SST (B) between the camshaft and valve lifter flange. Remove SST (A).

SST 09248-66010 (09248-06010, 09248-06020)

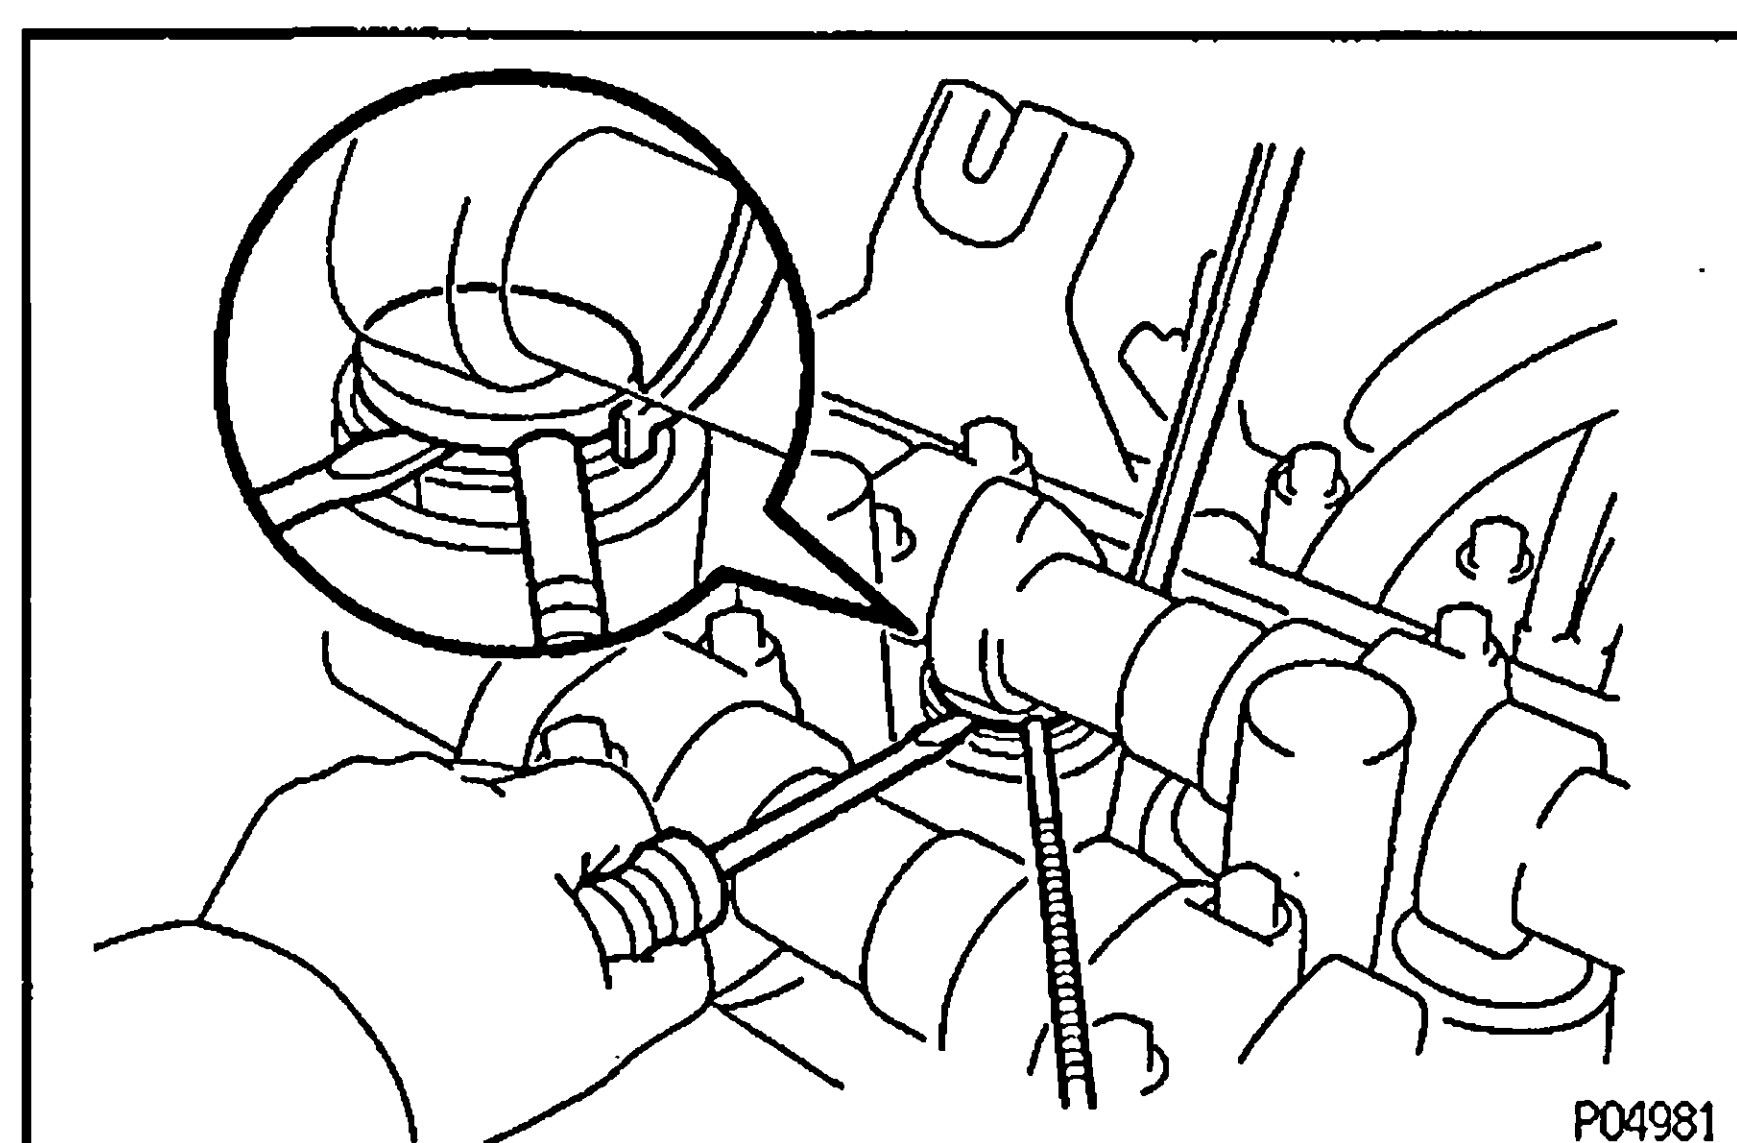

- Remove the adjusting shim with a small screwdriver and magnetic finger.

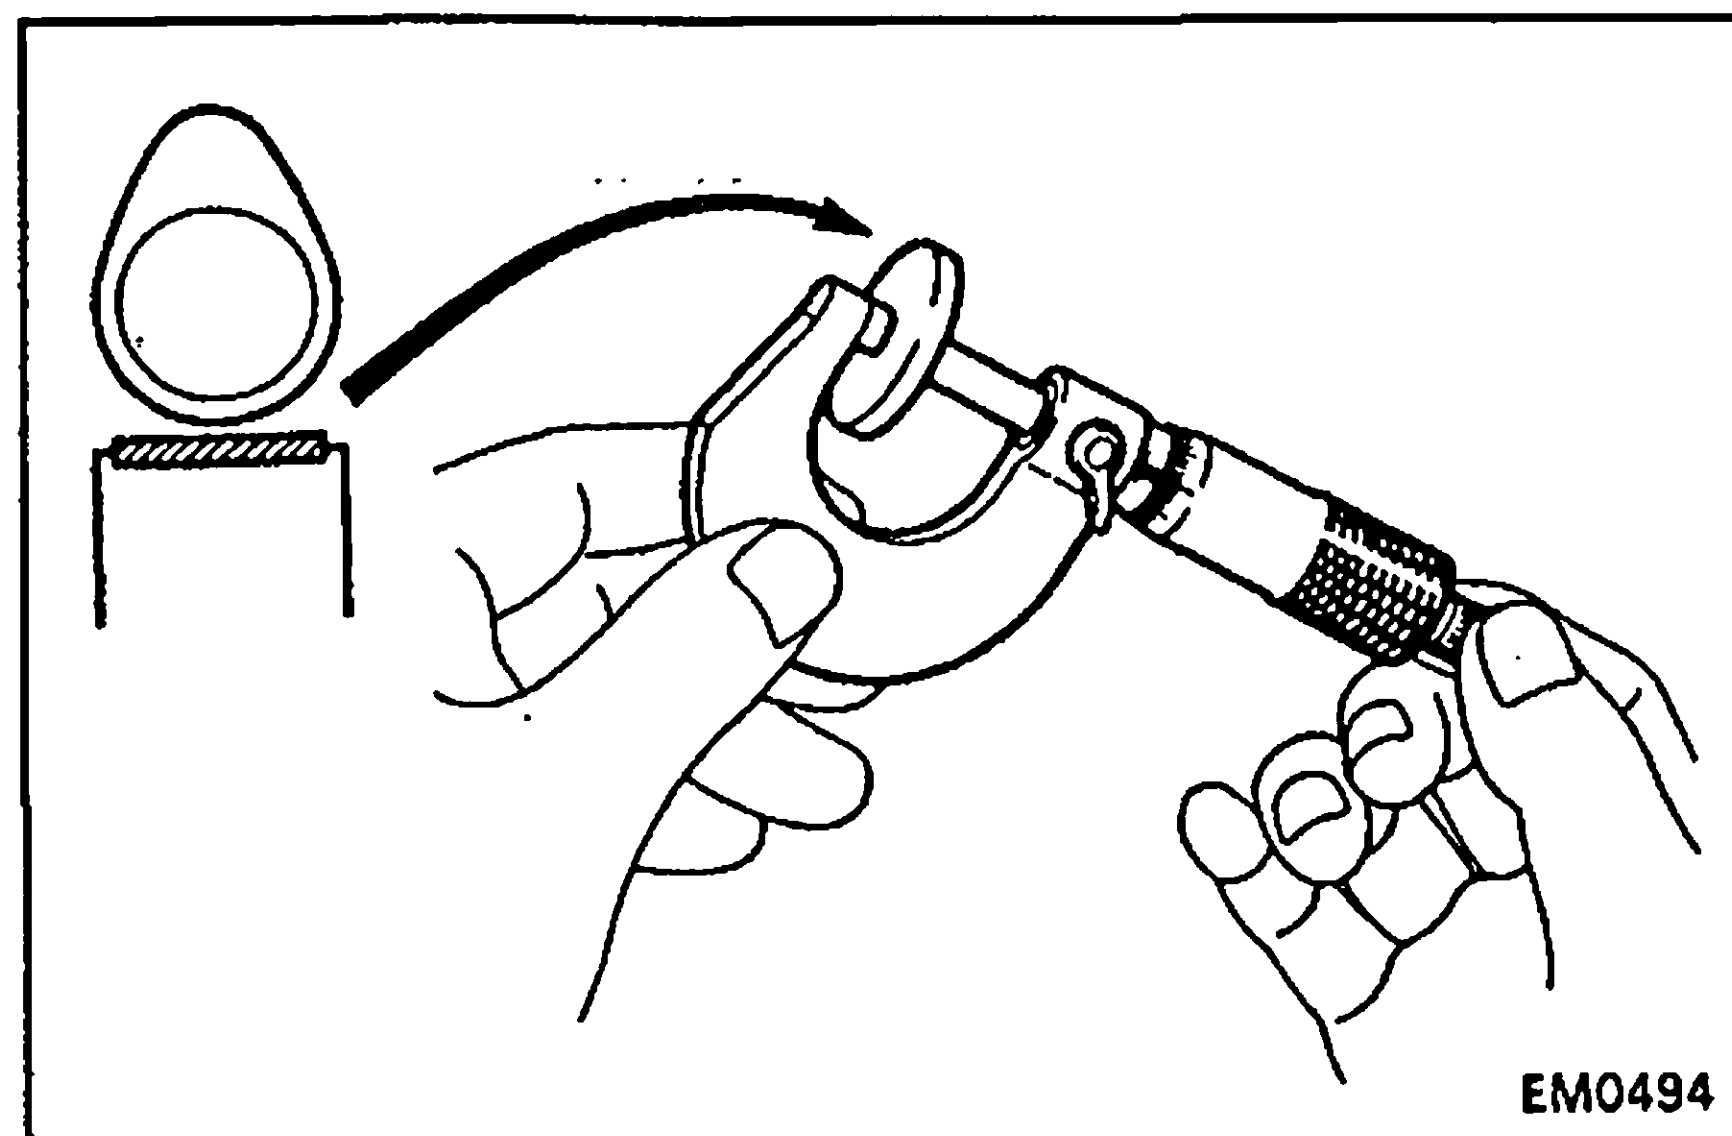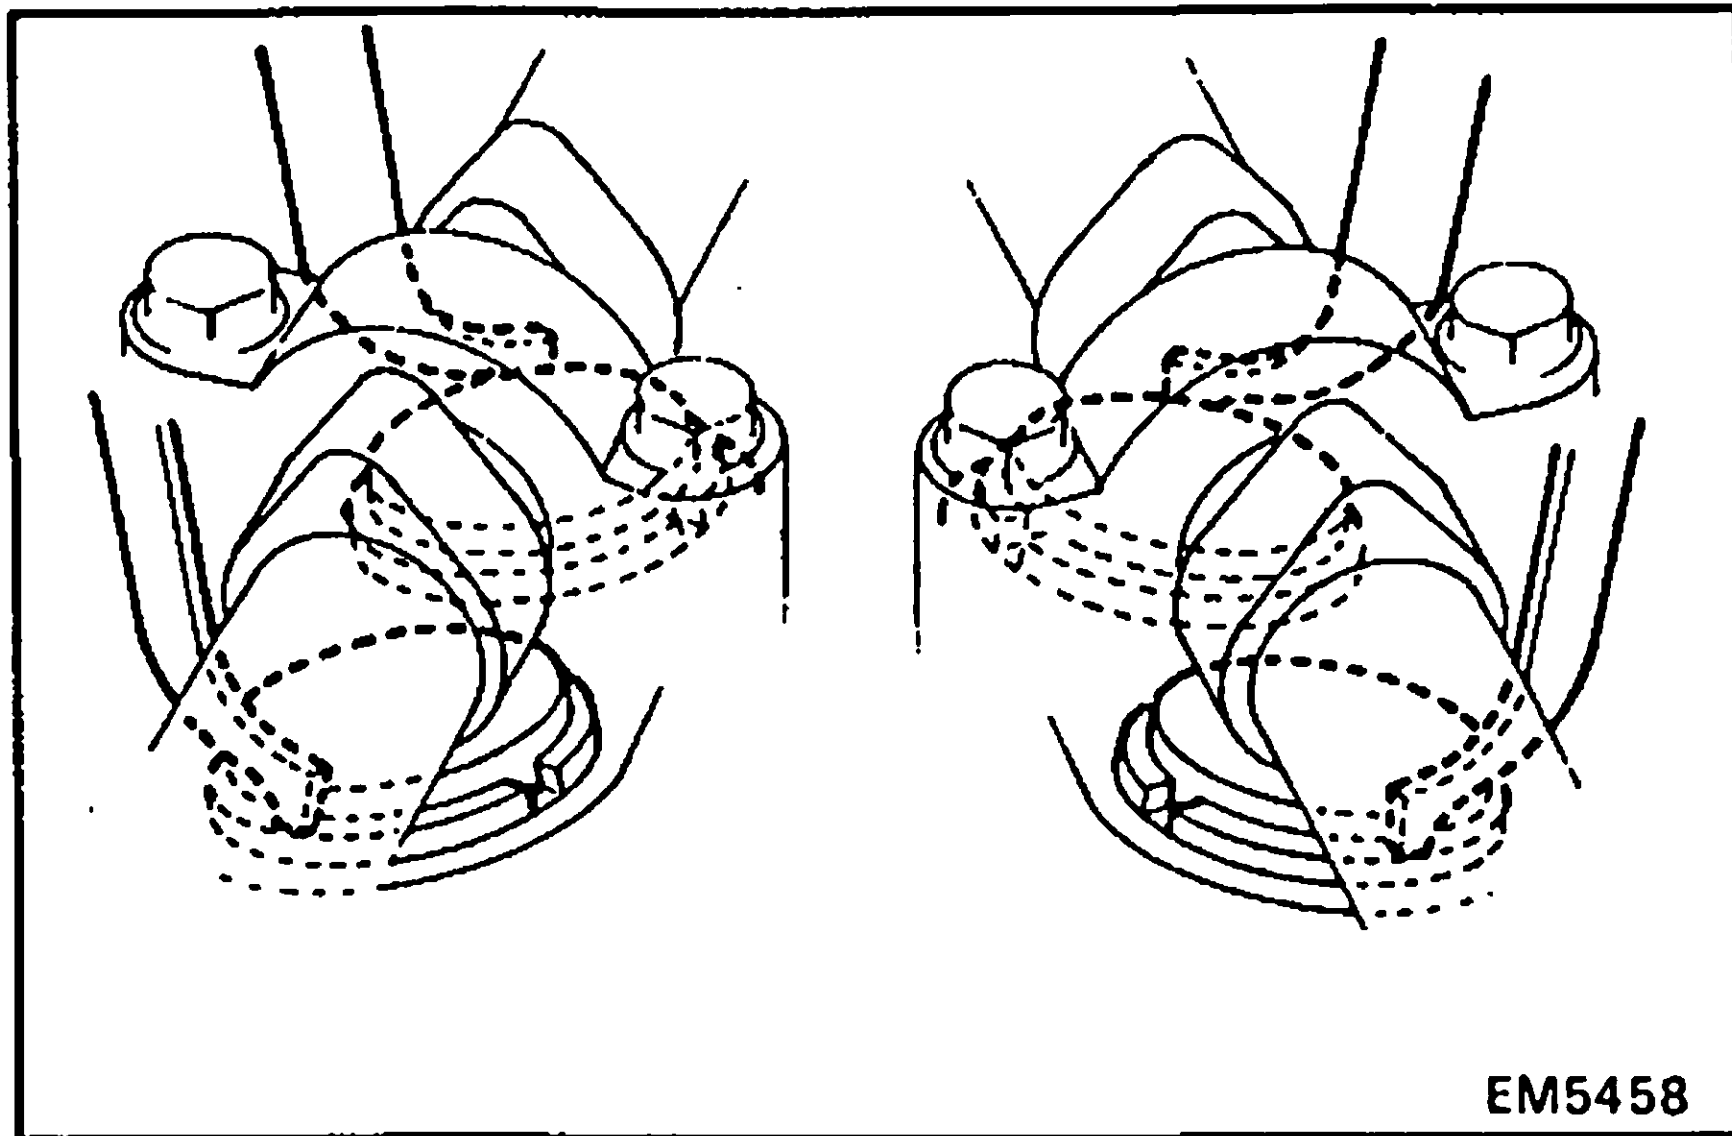

HINT: For easy removed of the shim, when positioning SST (B), set it on the lifter so there is space enough to be able to remove the shim.

EG

- (b) Determine the replacement adjusting shim size by following the Formula or Charts:

- Using a micrometer, measure the thickness of the removed shim.
- Calculate the thickness of a new shim so that the valve clearance comes within specified value.

T Thickness of removed shim

A Measured valve clearance

N Thickness of new shim

Intake:

$$N = T + [A - 0.20 \text{ mm (0.008 in.)}]$$

Exhaust:

$$N = T + [A - 0.30 \text{ mm (0.012 in.)}]$$

- Select a new shim with a thickness as close as possible to the calculated value.


HINT: Shims are available in 17 sized in increments of 0.05 mm (0.0020 in.), from 2.50 mm (0.0984 in.) to 3.30 mm (0.1299 in.).

- (c) Install a new adjusting shim.

- Place a new adjusting shim on the valve lifter.
- Press down the valve lifter with SST (A), and remove SST (B).

SST 09248-66010 (09248-06010, 09248-06020)

- (d) Recheck the valve clearance.

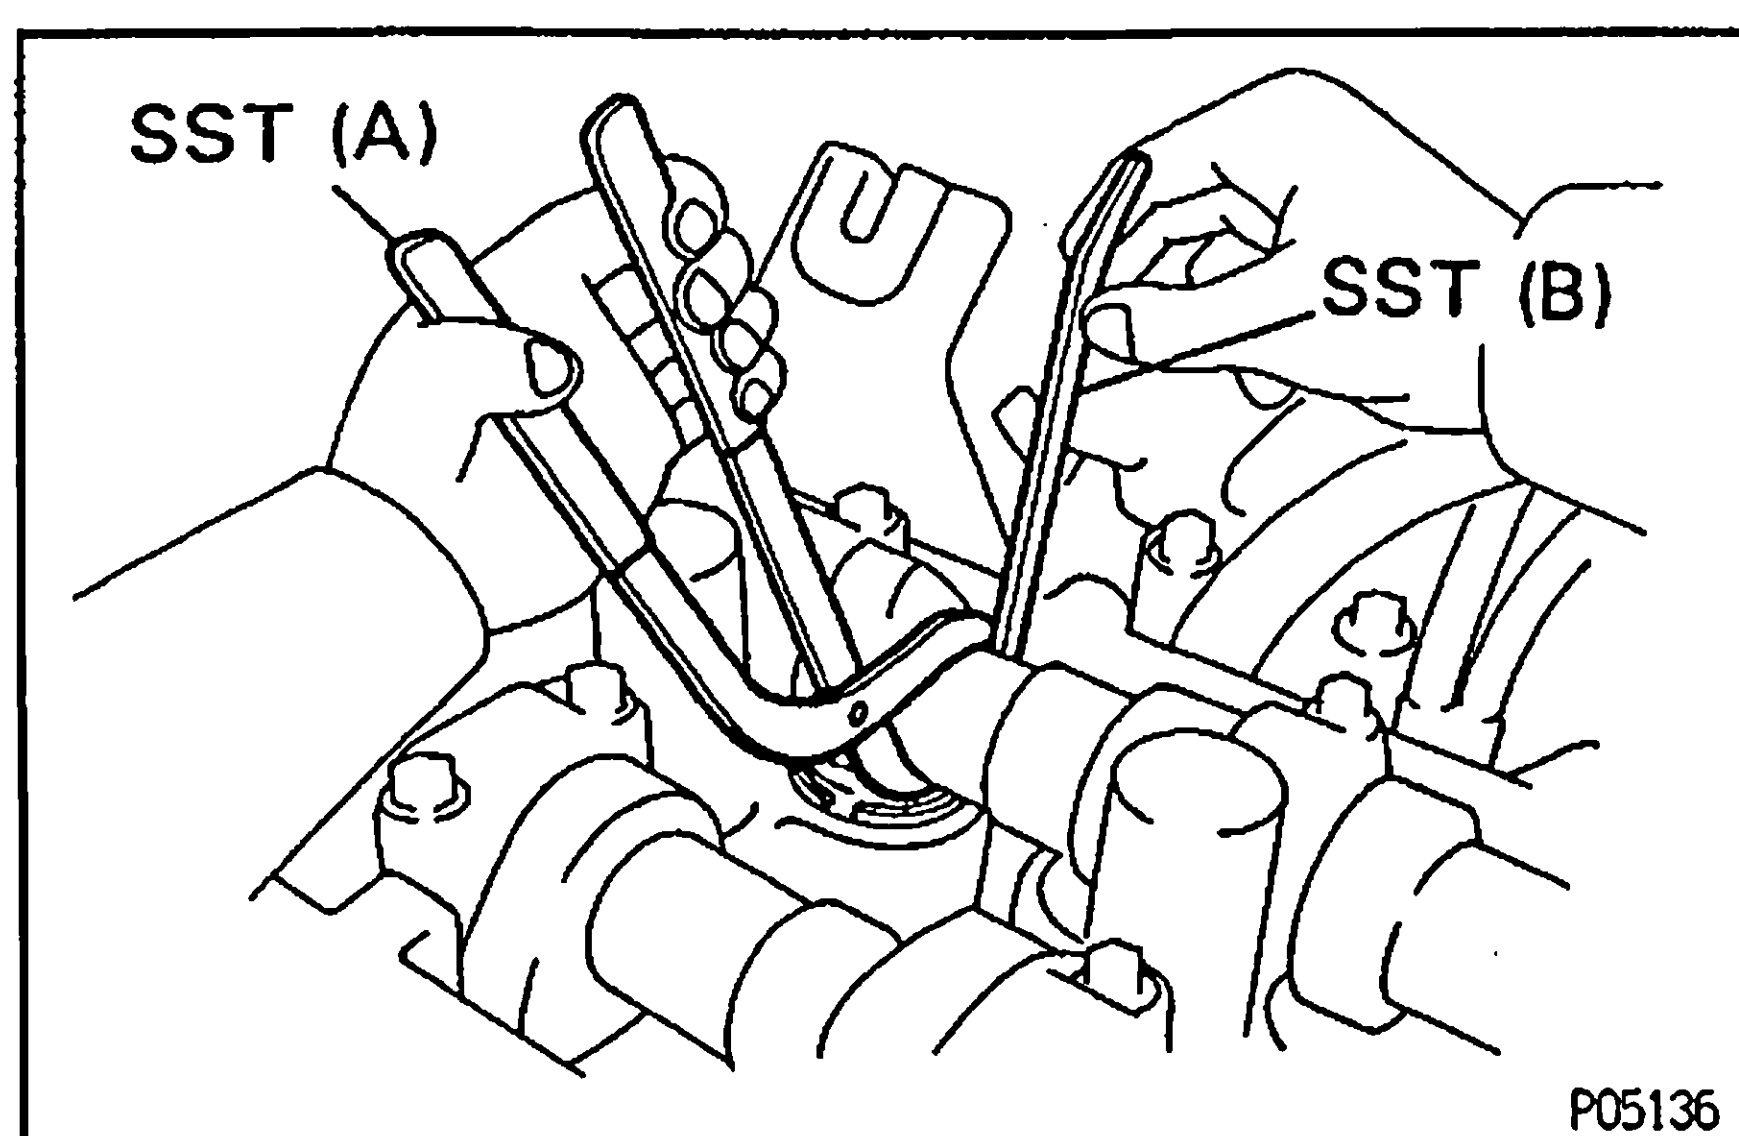

Adjusting Shim Selection Chart (Intake)

Installed shim thickness mm (in.)		Measured clearance mm (in.)		New shim thickness mm (in.)	
0.000 - 0.030 (0.0000 - 0.0012)		1	1	1	1
0.031 - 0.050 (0.0012 - 0.0020)		1	1	1	1
0.051 - 0.070 (0.0020 - 0.0028)		1	1	1	1
0.071 - 0.090 (0.0028 - 0.0035)		1	1	1	1
0.091 - 0.110 (0.0036 - 0.0043)		1	1	1	1
0.111 - 0.130 (0.0044 - 0.0051)		1	1	1	1
0.131 - 0.149 (0.0052 - 0.0059)		1	1	1	1
0.150 - 0.250 (0.0059 - 0.0098)					
0.251 - 0.270 (0.0099 - 0.0106)	2	3	3	3	3
0.271 - 0.290 (0.0107 - 0.0114)	3	3	4	4	4
0.291 - 0.310 (0.0115 - 0.0122)	3	4	4	4	4
0.311 - 0.330 (0.0122 - 0.0130)	3	4	4	4	4
0.331 - 0.350 (0.0130 - 0.0138)	4	5	5	5	5
0.351 - 0.370 (0.0138 - 0.0146)	4	5	5	5	5
0.371 - 0.390 (0.0146 - 0.0154)	5	5	6	6	6
0.391 - 0.410 (0.0154 - 0.0161)	5	6	6	6	6
0.411 - 0.430 (0.0162 - 0.0169)	5	6	6	6	6
0.431 - 0.450 (0.0170 - 0.0177)	6	7	7	7	7
0.451 - 0.470 (0.0178 - 0.0185)	6	7	7	7	7
0.471 - 0.490 (0.0185 - 0.0193)	7	7	8	8	8
0.491 - 0.510 (0.0193 - 0.0201)	7	8	8	8	8
0.511 - 0.530 (0.0201 - 0.0209)	8	8	9	9	9
0.531 - 0.550 (0.0209 - 0.0217)	8	9	9	9	9
0.551 - 0.570 (0.0217 - 0.0224)	8	9	9	9	9
0.571 - 0.590 (0.0225 - 0.0232)	9	9	10	10	10
0.591 - 0.610 (0.0233 - 0.0240)	9	10	10	10	10
0.611 - 0.630 (0.0241 - 0.0248)	10	10	10	10	10
0.631 - 0.650 (0.0248 - 0.0256)	10	11	11	11	11
0.651 - 0.670 (0.0256 - 0.0264)	10	11	11	11	11
0.671 - 0.690 (0.0264 - 0.0272)	11	11	11	11	11
0.691 - 0.710 (0.0272 - 0.0280)	11	12	12	12	12
0.711 - 0.730 (0.0280 - 0.0287)	12	12	12	12	12
0.731 - 0.750 (0.0288 - 0.0295)	12	13	13	13	13
0.751 - 0.770 (0.0296 - 0.0303)	12	13	13	13	13
0.771 - 0.790 (0.0304 - 0.0311)	13	13	13	13	13
0.791 - 0.810 (0.0311 - 0.0319)	13	14	14	14	14
0.811 - 0.830 (0.0319 - 0.0327)	14	14	14	14	14
0.831 - 0.850 (0.0327 - 0.0335)	14	15	15	15	15
0.851 - 0.870 (0.0335 - 0.0343)	14	15	15	15	15
0.871 - 0.890 (0.0343 - 0.0350)	15	15	15	15	15
0.891 - 0.910 (0.0351 - 0.0358)	15	16	16	16	16
0.911 - 0.930 (0.0359 - 0.0366)	16	16	16	16	16
0.931 - 0.950 (0.0367 - 0.0374)	16	17	17	17	17
0.951 - 0.970 (0.0374 - 0.0382)	16	17	17	17	17
0.971 - 0.990 (0.0382 - 0.0390)	17	17	17	17	17
0.991 - 1.010 (0.0390 - 0.0398)	17	17	17	17	17
1.011 - 1.030 (0.0398 - 0.0406)	17	17	17	17	17
1.031 - 1.050 (0.0406 - 0.0413)	17	17	17	17	17

Intake valve clearance (Cold):
0.15 - 0.25 mm (0.006 - 0.010 in.)

EXAMPLE: The 2.800 mm (0.1102 in.) shim is installed, and the measured clearance is 0.440 mm (0.0173 in.). Replace the 2.800 mm (0.1102 in.) shim with a No. 12 shim.

Shim No.	Thickness	Shim No.	Thickness
1	2.500 (0.0984)	10	2.950 (0.1161)
2	2.550 (0.1004)	11	3.000 (0.1181)
3	2.600 (0.1024)	12	3.050 (0.1201)
4	2.650 (0.1043)	13	3.100 (0.1220)
5	2.700 (0.1063)	14	3.150 (0.1240)
6	2.750 (0.1083)	15	3.200 (0.1260)
7	2.800 (0.1102)	16	3.250 (0.1280)
8	2.850 (0.1122)	17	3.300 (0.1299)
9	2.900 (0.1142)		

HINT: New shims have the thickness in millimeters imprinted on the face.

Intake valve clearance (Cold):

0.15 – 0.25 mm (0.006 – 0.010 in.)


EXAMPLE: The 2.800 mm (0.1102 in.) shim is installed, and the measured clearance is 0.440 mm (0.0173 in.). Replace the 2.800 mm (0.1102 in.) shim with a No. 12 shim.

HINT: New shims have the thickness in millimeters imprinted on the face.


Adjusting Shim Selection Chart (Exhaust)

Installed shim thickness mm (in.)		Measured clearance mm (in.)		New shim thickness mm (in.)		Shim No.		Thickness		Shim No.		Thickness	
0.000 — 0.030 (0.0000 — 0.0012)		0.031 — 0.050 (0.0012 — 0.0020)		0.051 — 0.070 (0.0020 — 0.0028)		0.071 — 0.090 (0.0028 — 0.0035)		0.091 — 0.110 (0.0035 — 0.0043)		0.111 — 0.130 (0.0043 — 0.0051)		0.131 — 0.150 (0.0051 — 0.0059)	
0.031 — 0.050 (0.0012 — 0.0020)		0.051 — 0.070 (0.0020 — 0.0028)		0.071 — 0.090 (0.0028 — 0.0035)		0.091 — 0.110 (0.0035 — 0.0043)		0.111 — 0.130 (0.0043 — 0.0051)		0.131 — 0.150 (0.0051 — 0.0059)		0.151 — 0.170 (0.0059 — 0.0067)	
0.051 — 0.070 (0.0020 — 0.0028)		0.071 — 0.090 (0.0028 — 0.0035)		0.091 — 0.110 (0.0035 — 0.0043)		0.111 — 0.130 (0.0043 — 0.0051)		0.131 — 0.150 (0.0051 — 0.0059)		0.151 — 0.170 (0.0059 — 0.0067)		0.171 — 0.190 (0.0067 — 0.0075)	
0.071 — 0.090 (0.0028 — 0.0035)		0.091 — 0.110 (0.0035 — 0.0043)		0.111 — 0.130 (0.0043 — 0.0051)		0.131 — 0.150 (0.0051 — 0.0059)		0.151 — 0.170 (0.0059 — 0.0067)		0.171 — 0.190 (0.0067 — 0.0075)		0.191 — 0.210 (0.0075 — 0.0083)	
0.091 — 0.110 (0.0035 — 0.0043)		0.111 — 0.130 (0.0043 — 0.0051)		0.131 — 0.150 (0.0051 — 0.0059)		0.151 — 0.170 (0.0059 — 0.0067)		0.171 — 0.190 (0.0067 — 0.0075)		0.191 — 0.210 (0.0075 — 0.0083)		0.211 — 0.230 (0.0083 — 0.0091)	
0.111 — 0.130 (0.0043 — 0.0051)		0.131 — 0.150 (0.0051 — 0.0059)		0.151 — 0.170 (0.0059 — 0.0067)		0.171 — 0.190 (0.0067 — 0.0075)		0.191 — 0.210 (0.0075 — 0.0083)		0.211 — 0.230 (0.0083 — 0.0091)		0.231 — 0.249 (0.0091 — 0.0098)	
0.131 — 0.150 (0.0051 — 0.0059)		0.151 — 0.170 (0.0059 — 0.0067)		0.171 — 0.190 (0.0067 — 0.0075)		0.191 — 0.210 (0.0075 — 0.0083)		0.211 — 0.230 (0.0083 — 0.0091)		0.231 — 0.249 (0.0091 — 0.0098)		0.250 — 0.350 (0.0098 — 0.0138)	
0.151 — 0.170 (0.0059 — 0.0067)		0.171 — 0.190 (0.0067 — 0.0075)		0.191 — 0.210 (0.0075 — 0.0083)		0.211 — 0.230 (0.0083 — 0.0091)		0.231 — 0.249 (0.0091 — 0.0098)		0.250 — 0.350 (0.0098 — 0.0138)		0.351 — 0.370 (0.0138 — 0.0146)	
0.171 — 0.190 (0.0067 — 0.0075)		0.191 — 0.210 (0.0075 — 0.0083)		0.211 — 0.230 (0.0083 — 0.0091)		0.231 — 0.249 (0.0091 — 0.0098)		0.250 — 0.350 (0.0098 — 0.0138)		0.351 — 0.370 (0.0138 — 0.0146)		0.371 — 0.390 (0.0146 — 0.0154)	
0.191 — 0.210 (0.0075 — 0.0083)		0.211 — 0.230 (0.0083 — 0.0091)		0.231 — 0.249 (0.0091 — 0.0098)		0.250 — 0.350 (0.0098 — 0.0138)		0.351 — 0.370 (0.0138 — 0.0146)		0.371 — 0.390 (0.0146 — 0.0154)		0.391 — 0.410 (0.0154 — 0.0161)	
0.211 — 0.230 (0.0083 — 0.0091)		0.231 — 0.249 (0.0091 — 0.0098)		0.250 — 0.350 (0.0098 — 0.0138)		0.351 — 0.370 (0.0138 — 0.0146)		0.371 — 0.390 (0.0146 — 0.0154)		0.391 — 0.410 (0.0154 — 0.0161)		0.411 — 0.430 (0.0161 — 0.0169)	
0.231 — 0.249 (0.0091 — 0.0098)		0.250 — 0.350 (0.0098 — 0.0138)		0.351 — 0.370 (0.0138 — 0.0146)		0.371 — 0.390 (0.0146 — 0.0154)		0.391 — 0.410 (0.0154 — 0.0161)		0.411 — 0.430 (0.0161 — 0.0169)		0.431 — 0.450 (0.0169 — 0.0177)	
0.250 — 0.350 (0.0098 — 0.0138)		0.351 — 0.370 (0.0138 — 0.0146)		0.371 — 0.390 (0.0146 — 0.0154)		0.391 — 0.410 (0.0154 — 0.0161)		0.411 — 0.430 (0.0161 — 0.0169)		0.431 — 0.450 (0.0169 — 0.0177)		0.451 — 0.470 (0.0177 — 0.0185)	
0.351 — 0.370 (0.0138 — 0.0146)		0.371 — 0.390 (0.0146 — 0.0154)		0.391 — 0.410 (0.0154 — 0.0161)		0.411 — 0.430 (0.0161 — 0.0169)		0.431 — 0.450 (0.0169 — 0.0177)		0.451 — 0.470 (0.0177 — 0.0185)		0.471 — 0.490 (0.0185 — 0.0193)	
0.371 — 0.390 (0.0146 — 0.0154)		0.391 — 0.410 (0.0154 — 0.0161)		0.411 — 0.430 (0.0161 — 0.0169)		0.431 — 0.450 (0.0169 — 0.0177)		0.451 — 0.470 (0.0177 — 0.0185)		0.471 — 0.490 (0.0185 — 0.0193)		0.491 — 0.510 (0.0193 — 0.0201)	
0.391 — 0.410 (0.0154 — 0.0161)		0.411 — 0.430 (0.0161 — 0.0169)		0.431 — 0.450 (0.0169 — 0.0177)		0.451 — 0.470 (0.0177 — 0.0185)		0.471 — 0.490 (0.0185 — 0.0193)		0.491 — 0.510 (0.0193 — 0.0201)		0.511 — 0.530 (0.0201 — 0.0209)	
0.411 — 0.430 (0.0161 — 0.0169)		0.431 — 0.450 (0.0169 — 0.0177)		0.451 — 0.470 (0.0177 — 0.0185)		0.471 — 0.490 (0.0185 — 0.0193)		0.491 — 0.510 (0.0193 — 0.0201)		0.511 — 0.530 (0.0201 — 0.0209)		0.531 — 0.550 (0.0209 — 0.0217)	
0.431 — 0.450 (0.0169 — 0.0177)		0.451 — 0.470 (0.0177 — 0.0185)		0.471 — 0.490 (0.0185 — 0.0193)		0.491 — 0.510 (0.0193 — 0.0201)		0.511 — 0.530 (0.0201 — 0.0209)		0.531 — 0.550 (0.0209 — 0.0217)		0.551 — 0.570 (0.0217 — 0.0224)	
0.451 — 0.470 (0.0177 — 0.0185)		0.471 — 0.490 (0.0185 — 0.0193)		0.491 — 0.510 (0.0193 — 0.0201)		0.511 — 0.530 (0.0201 — 0.0209)		0.531 — 0.550 (0.0209 — 0.0217)		0.551 — 0.570 (0.0217 — 0.0224)		0.571 — 0.590 (0.0224 — 0.0232)	
0.471 — 0.490 (0.0185 — 0.0193)		0.491 — 0.510 (0.0193 — 0.0201)		0.511 — 0.530 (0.0201 — 0.0209)		0.531 — 0.550 (0.0209 — 0.0217)		0.551 — 0.570 (0.0217 — 0.0224)		0.571 — 0.590 (0.0224 — 0.0232)		0.591 — 0.610 (0.0232 — 0.0240)	
0.491 — 0.510 (0.0193 — 0.0201)		0.511 — 0.530 (0.0201 — 0.0209)		0.531 — 0.550 (0.0209 — 0.0217)		0.551 — 0.570 (0.0217 — 0.0224)		0.571 — 0.590 (0.0224 — 0.0232)		0.591 — 0.610 (0.0232 — 0.0240)		0.611 — 0.630 (0.0240 — 0.0248)	
0.511 — 0.530 (0.0201 — 0.0209)		0.531 — 0.550 (0.0209 — 0.0217)		0.551 — 0.570 (0.0217 — 0.0224)		0.571 — 0.590 (0.0224 — 0.0232)		0.591 — 0.610 (0.0232 — 0.0240)		0.611 — 0.630 (0.0240 — 0.0248)		0.631 — 0.650 (0.0248 — 0.0256)	
0.531 — 0.550 (0.0209 — 0.0217)		0.551 — 0.570 (0.0217 — 0.0224)		0.571 — 0.590 (0.0224 — 0.0232)		0.591 — 0.610 (0.0232 — 0.0240)		0.611 — 0.630 (0.0240 — 0.0248)		0.631 — 0.650 (0.0248 — 0.0256)		0.651 — 0.670 (0.0256 — 0.0264)	
0.551 — 0.570 (0.0217 — 0.0224)		0.571 — 0.590 (0.0224 — 0.0232)		0.591 — 0.610 (0.0232 — 0.0240)		0.611 — 0.630 (0.0240 — 0.0248)		0.631 — 0.650 (0.0248 — 0.0256)		0.651 — 0.670 (0.0256 — 0.0264)		0.671 — 0.690 (0.0264 — 0.0272)	
0.571 — 0.590 (0.0224 — 0.0232)		0.591 — 0.610 (0.0232 — 0.0240)		0.611 — 0.630 (0.0240 — 0.0248)		0.631 — 0.650 (0.0248 — 0.0256)		0.651 — 0.670 (0.0256 — 0.0264)		0.671 — 0.690 (0.0264 — 0.0272)		0.691 — 0.710 (0.0272 — 0.0280)	
0.591 — 0.610 (0.0232 — 0.0240)		0.611 — 0.630 (0.0240 — 0.0248)		0.631 — 0.650 (0.0248 — 0.0256)		0.651 — 0.670 (0.0256 — 0.0264)		0.671 — 0.690 (0.0264 — 0.0272)		0.691 — 0.710 (0.0272 — 0.0280)		0.711 — 0.730 (0.0280 — 0.0287)	
0.611 — 0.630 (0.0240 — 0.0248)		0.631 — 0.650 (0.0248 — 0.0256)		0.651 — 0.670 (0.0256 — 0.0264)		0.671 — 0.690 (0.0264 — 0.0272)		0.691 — 0.710 (0.0272 — 0.0280)		0.711 — 0.730 (0.0280 — 0.0287)		0.731 — 0.750 (0.0287 — 0.0295)	
0.631 — 0.650 (0.0248 — 0.0256)		0.651 — 0.670 (0.0256 — 0.0264)		0.671 — 0.690 (0.0264 — 0.0272)		0.691 — 0.710 (0.0272 — 0.0280)		0.711 — 0.730 (0.0280 — 0.0287)		0.731 — 0.750 (0.0287 — 0.0295)		0.751 — 0.770 (0.0295 — 0.0303)	
0.651 — 0.670 (0.0256 — 0.0264)		0.671 — 0.690 (0.0264 — 0.0272)		0.691 — 0.710 (0.0272 — 0.0280)		0.711 — 0.730 (0.0280 — 0.0287)		0.731 — 0.750 (0.0287 — 0.0295)		0.751 — 0.770 (0.0295 — 0.0303)		0.771 — 0.790 (0.0303 — 0.0311)	
0.671 — 0.690 (0.0264 — 0.0272)		0.691 — 0.710 (0.0272 — 0.0280)		0.711 — 0.730 (0.0280 — 0.0287)		0.731 — 0.750 (0.0287 — 0.0295)		0.751 — 0.770 (0.0295 — 0.0303)		0.771 — 0.790 (0.0303 — 0.0311)		0.791 — 0.810 (0.0311 — 0.0319)	
0.691 — 0.710 (0.0272 — 0.0280)		0.711 — 0.730 (0.0280 — 0.0287)		0.731 — 0.750 (0.0287 — 0.0295)		0.751 — 0.770 (0.0295 — 0.0303)		0.771 — 0.790 (0.0303 — 0.0311)		0.791 — 0.810 (0.0311 — 0.0319)		0.811 — 0.830 (0.0319 — 0.0327)	
0.711 — 0.730 (0.0280 — 0.0287)		0.731 — 0.750 (0.0287 — 0.0295)		0.751 — 0.770 (0.0295 — 0.0303)		0.771 — 0.790 (0.0303 — 0.0311)		0.791 — 0.810 (0.0311 — 0.0319)		0.811 — 0.830 (0.0319 — 0.0327)		0.831 — 0.850 (0.0327 — 0.0335)	
0.731 — 0.750 (0.0287 — 0.0295)		0.751 — 0.770 (0.0295 — 0.0303)		0.771 — 0.790 (0.0303 — 0.0311)		0.791 — 0.810 (0.0311 — 0.0319)		0.811 — 0.830 (0.0319 — 0.0327)		0.831 — 0.850 (0.0327 — 0.0335)		0.851 — 0.870 (0.0335 — 0.0343)	
0.751 — 0.770 (0.0295 — 0.0303)		0.771 — 0.790 (0.0303 — 0.0311)		0.791 — 0.810 (0.0311 — 0.0319)		0.811 — 0.830 (0.0319 — 0.0327)		0.831 — 0.850 (0.0327 — 0.0335)		0.851 — 0.870 (0.0335 — 0.0343)		0.871 — 0.890 (0.0343 — 0.0350)	
0.771 — 0.790 (0.0303 — 0.0311)		0.791 — 0.810 (0.0311 — 0.0319)		0.811 — 0.830 (0.0319 — 0.0327)		0.831 — 0.850 (0.0327 — 0.0335)		0.851 — 0.870 (0.0335 — 0.0343)		0.871 — 0.890 (0.0343 — 0.0350)		0.891 — 0.910 (0.0350 — 0.0358)	
0.791 — 0.810 (0.0311 — 0.0319)		0.811 — 0.830 (0.0319 — 0.0327)		0.831 — 0.850 (0.0327 — 0.0335)		0.851 — 0.870 (0.0335 — 0.0343)		0.871 — 0.890 (0.0343 — 0.0350)		0.891 — 0.910 (0.0350 — 0.0358)		0.911 — 0.930 (0.0358 — 0.0366)	
0.811 — 0.830 (0.0319 — 0.0327)		0.831 — 0.850 (0.0327 — 0.0335)		0.851 — 0.870 (0.0335 — 0.0343)		0.871 — 0.890 (0.0343 — 0.0350)		0.891 — 0.910 (0.0350 — 0.0358)		0.911 — 0.930 (0.0358 — 0.0366)		0.931 — 0.950 (0.0366 — 0.0374)	
0.831 — 0.850 (0.0327 — 0.0335)		0.851 — 0.870 (0.0335 — 0.0343)		0.871 — 0.890 (0.0343 — 0.0350)		0.891 — 0.910 (0.0350 — 0.0358)		0.911 — 0.930 (0.0358 — 0.0366)		0.931 — 0.950 (0.0366 — 0.0374)		0.951 — 0.970 (0.0374 — 0.0382)	
0.851 — 0.870 (0.0335 — 0.0343)		0.871 — 0.890 (0.0343 — 0.0350)		0.891 — 0.910 (0.0350 — 0.0358)		0.911 — 0.930 (0.0358 — 0.0366)		0.931 — 0.950 (0.0366 — 0.0374)		0.951 — 0.970 (0.0374 — 0.0382)		0.971 — 0.990 (0.0382 — 0.0390)	
0.871 — 0.890 (0.0343 — 0.0350)		0.891 — 0.910 (0.0350 — 0.0358)		0.911 — 0.930 (0.0358 — 0.0366)		0.931 — 0.950 (0.0366 — 0.0374)		0.951 — 0.970 (0.0374 — 0.0382)		0.971 — 0.990 (0.0382 — 0.0390)		0.991 — 1.010 (0.0390 — 0.0398)	
0.891 — 0.910 (0.0350 — 0.0358)		0.911 — 0.930 (0.0358 — 0.0366)		0.931 — 0.950 (0.0366 — 0.0374)		0.951 — 0.970 (0.0374 — 0.0382)		0.971 — 0.990 (0.0382 — 0.0390)		0.991 — 1.010 (0.0390 — 0.0398)		1.011 — 1.030 (0.0398 — 0.0406)	
0.911 — 0.930 (0.0358 — 0.0366)		0.931 — 0.950 (0.0366 — 0.0374)		0.951 — 0.970 (0.0374 — 0.0382)		0.971 — 0.990 (0.0382 — 0.0390)		0.991 — 1.010 (0.0390 — 0.0398)		1.011 — 1.030 (0.0398 — 0.0406)		1.031 — 1.050 (0.0406 — 0.0413)	
0.931 — 0.950 (0.0366 — 0.0374)		0.951 — 0.970 (0.0374 — 0.0382)		0.971 — 0.990 (0.0382 — 0.0390)		0.991 — 1.010 (0.0390 — 0.0398)		1.011 — 1.030 (0.0398 — 0.0406)		1.031 — 1.050 (0.0406 — 0.0413)		1.051 — 1.070 (0.0413 — 0.0421)	
0.951 — 0.970 (0.0374 — 0.0382)		0.971 — 0.990 (0.0382 — 0.0390)		0.991 — 1.010 (0.0390 — 0.0398)		1.011 — 1.030 (0.0398 — 0.0406)		1.031 — 1.050 (0.0406 — 0.0413)		1.051 — 1.070 (0.0413 — 0.0421)		1.071 — 1.090 (0.0421 — 0.0429)	
0.971 — 0.990 (0.0382 — 0.0390)		0.991 — 1.010 (0.0390 — 0.0398)		1.011 — 1.030 (0.0398 — 0.0406)		1.031 — 1.050 (0.0406 — 0.0413)		1.051 — 1.070 (0.0413 — 0.0421)		1.071 — 1.090 (0.0421 — 0.0429)		1.091 — 1.110 (0.0429 — 0.0437)	
0.991 — 1.010 (0.0390 — 0.0398)		1.011 — 1.030 (0.0398 — 0.0406)		1.031 — 1.050 (0.0406 — 0.0413)		1.051 — 1.070 (0.0413 — 0.0421)		1.071 — 1.090 (0.0421 — 0.0429)		1.091 — 1.110 (0.0429 — 0.0437)		1.111 — 1.130 (0.0437 — 0.0445)	
1.011 — 1.030 (0.0398 — 0.0406)		1.031 — 1.050 (0.0406 — 0.0413)		1.051 — 1.070 (0.0413 — 0.0421)		1.071 — 1.090 (0.0421 — 0.0429)		1.091 — 1.110 (0.0429 — 0.0437)		1.111 — 1.130 (0.0437 — 0.0445)		1.131 — 1.150 (0.0445 — 0.0453)	
1.031 — 1.050 (0.0406 — 0.0413)		1.051 — 1.070 (0.0413 — 0.0421)		1.071 — 1.090 (0.0421 — 0.0429)		1.091 — 1.110 (0.0429 — 0.0437)		1.111 — 1.130 (0.0437 — 0.0445)		1.131 — 1.150 (0.0445 — 0.0453)		1.151 — 1.170 (0.0453 — 0.0461)	
1.051 — 1.070 (0.0413 — 0.0421)		1.071 — 1.090 (0.0421 — 0.0429)		1.091 — 1.110 (0.0429 — 0.0437)		1.111 — 1.130 (0.0437 — 0.0445)		1.131 — 1.150 (0.0445 — 0.0453)		1.151 — 1.170 (0.0453 — 0.0461)		1.171 — 1.190 (0.0461 — 0.0469)	
1.071 — 1.090 (0.0421 — 0.0429)		1.091 — 1.110 (0.0429 — 0.0437)		1.111 —									


EG

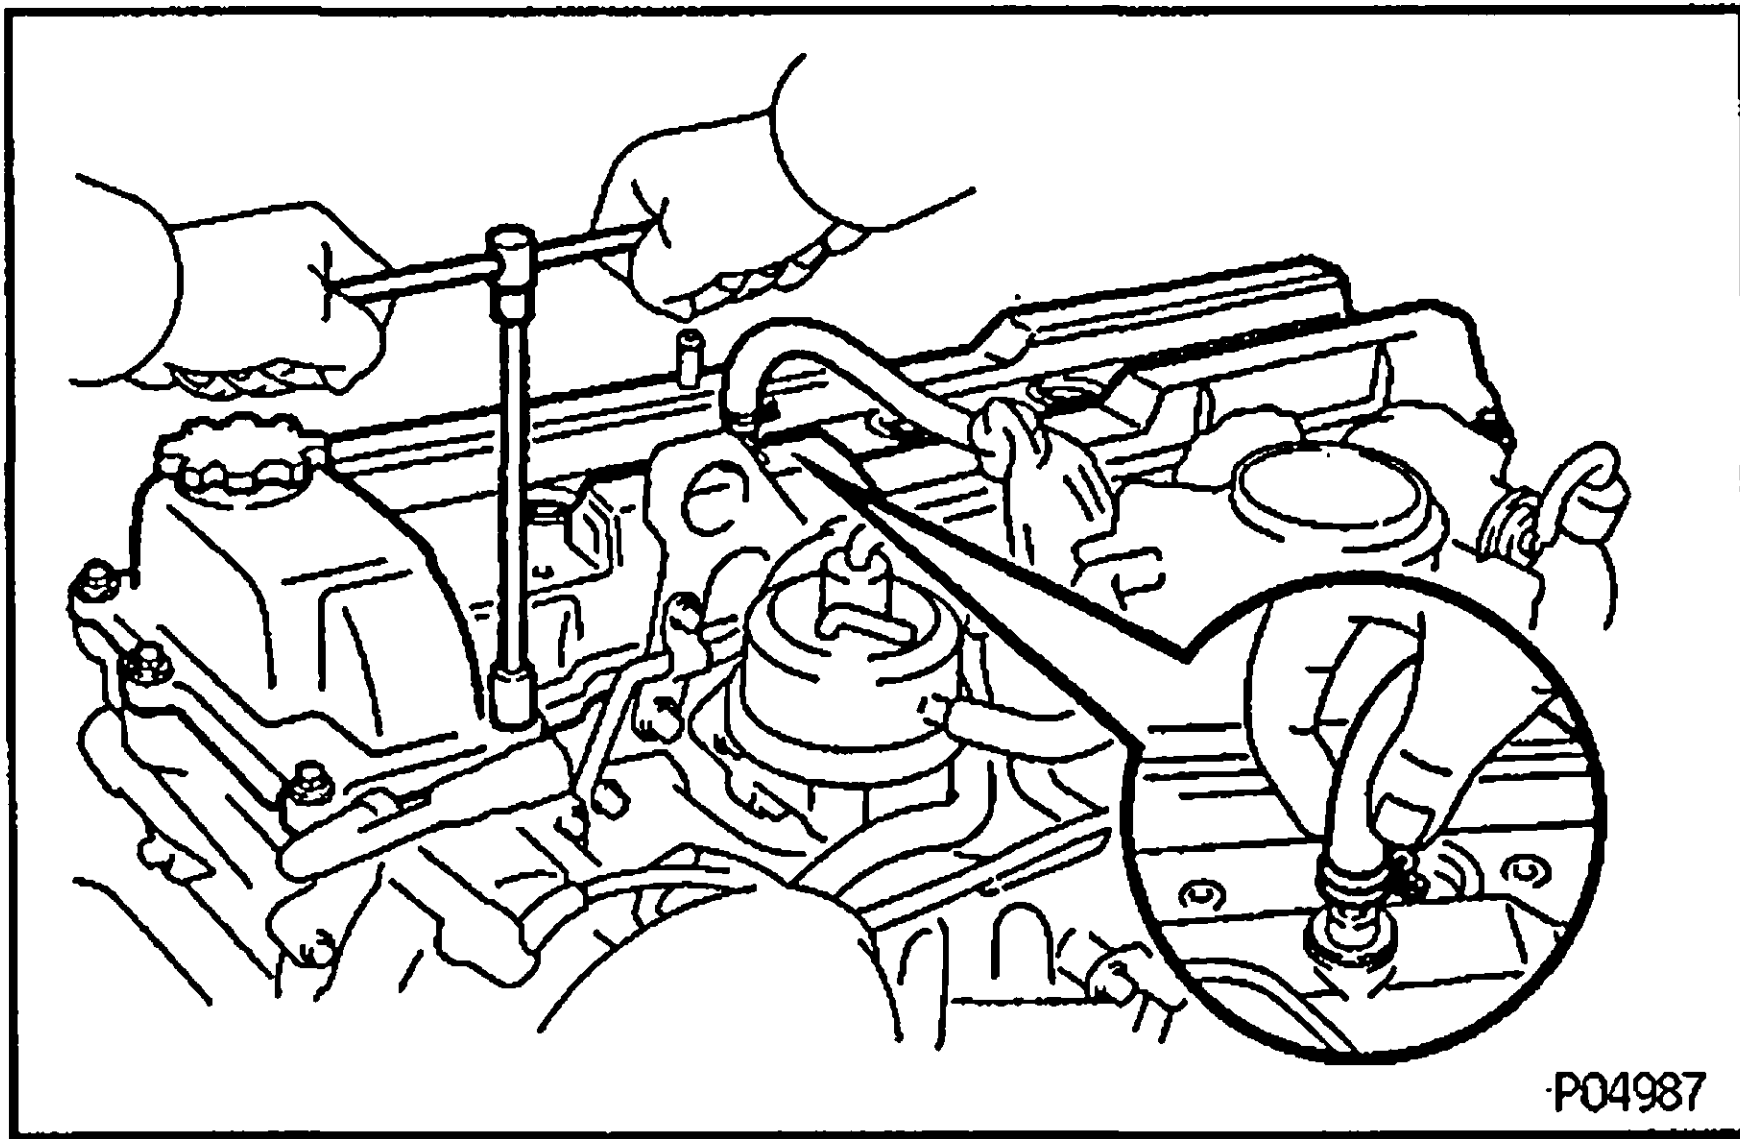**8. REINSTALL CYLINDER HEAD COVER**


- (a) Install the gasket to the cylinder head cover.
- (b) Install the cylinder head cover with the 13 bolts.
- (c) Connect the PCV hose.

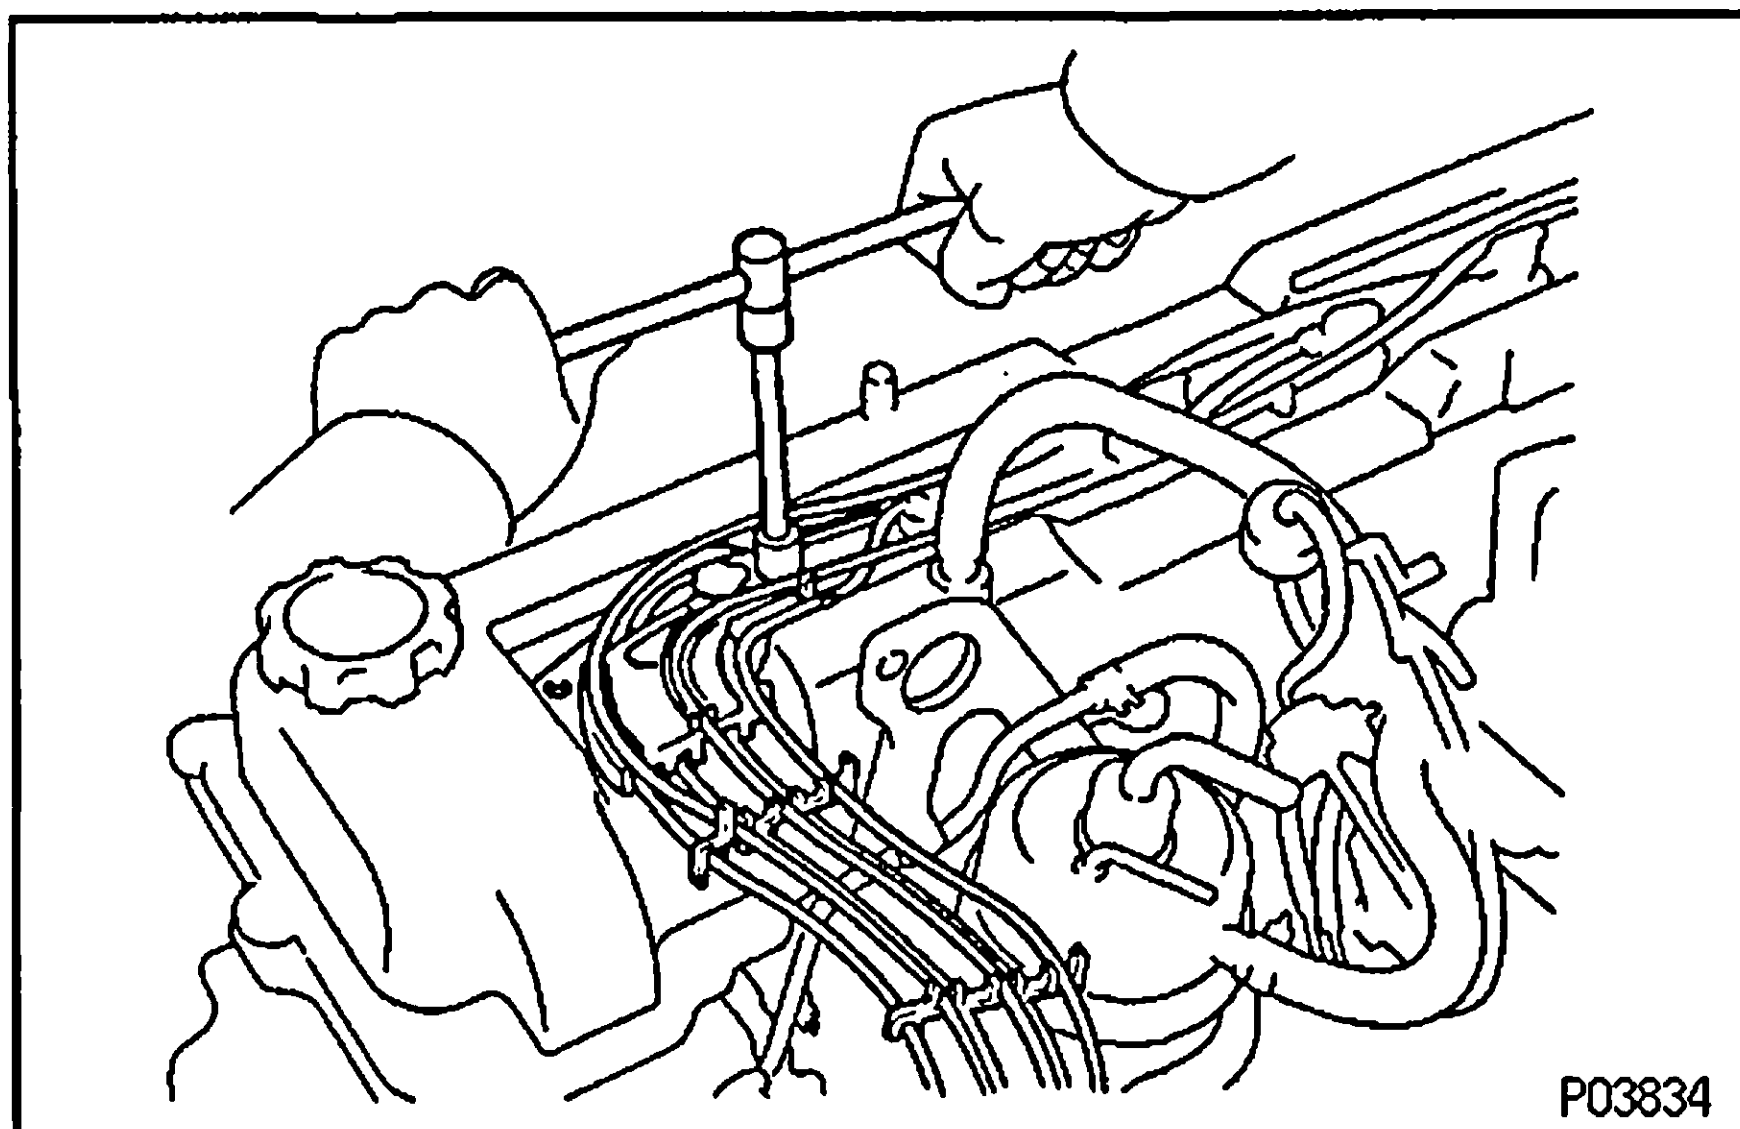**9. RECONNECT HIGH—TENSION CORDS TO SPARK PLUGS**

- (a) Connect the high—tension cords.
- (b) Install the No.1 cord clamp mounting bolt.

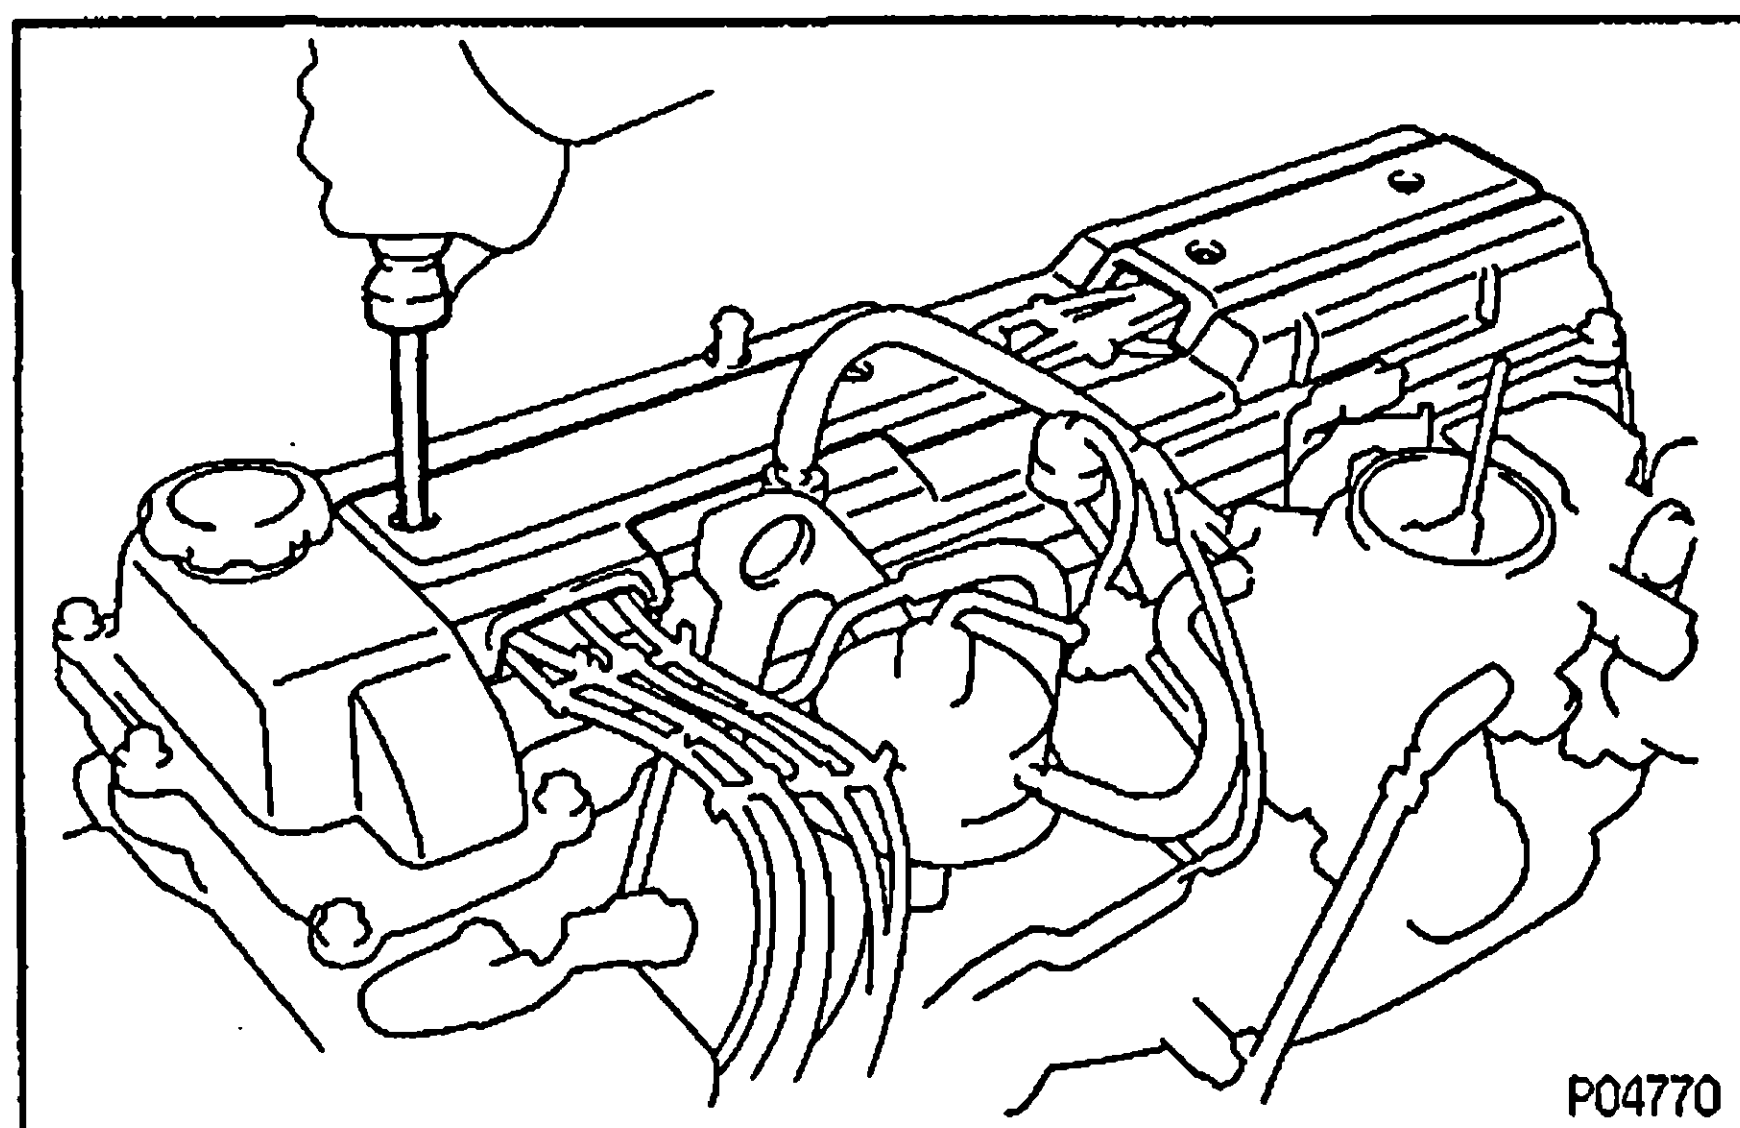**10. REINSTALL NO. 2 AND NO. 3 CYLINDER HEAD COVERS**

Install the head covers with the four bolts.

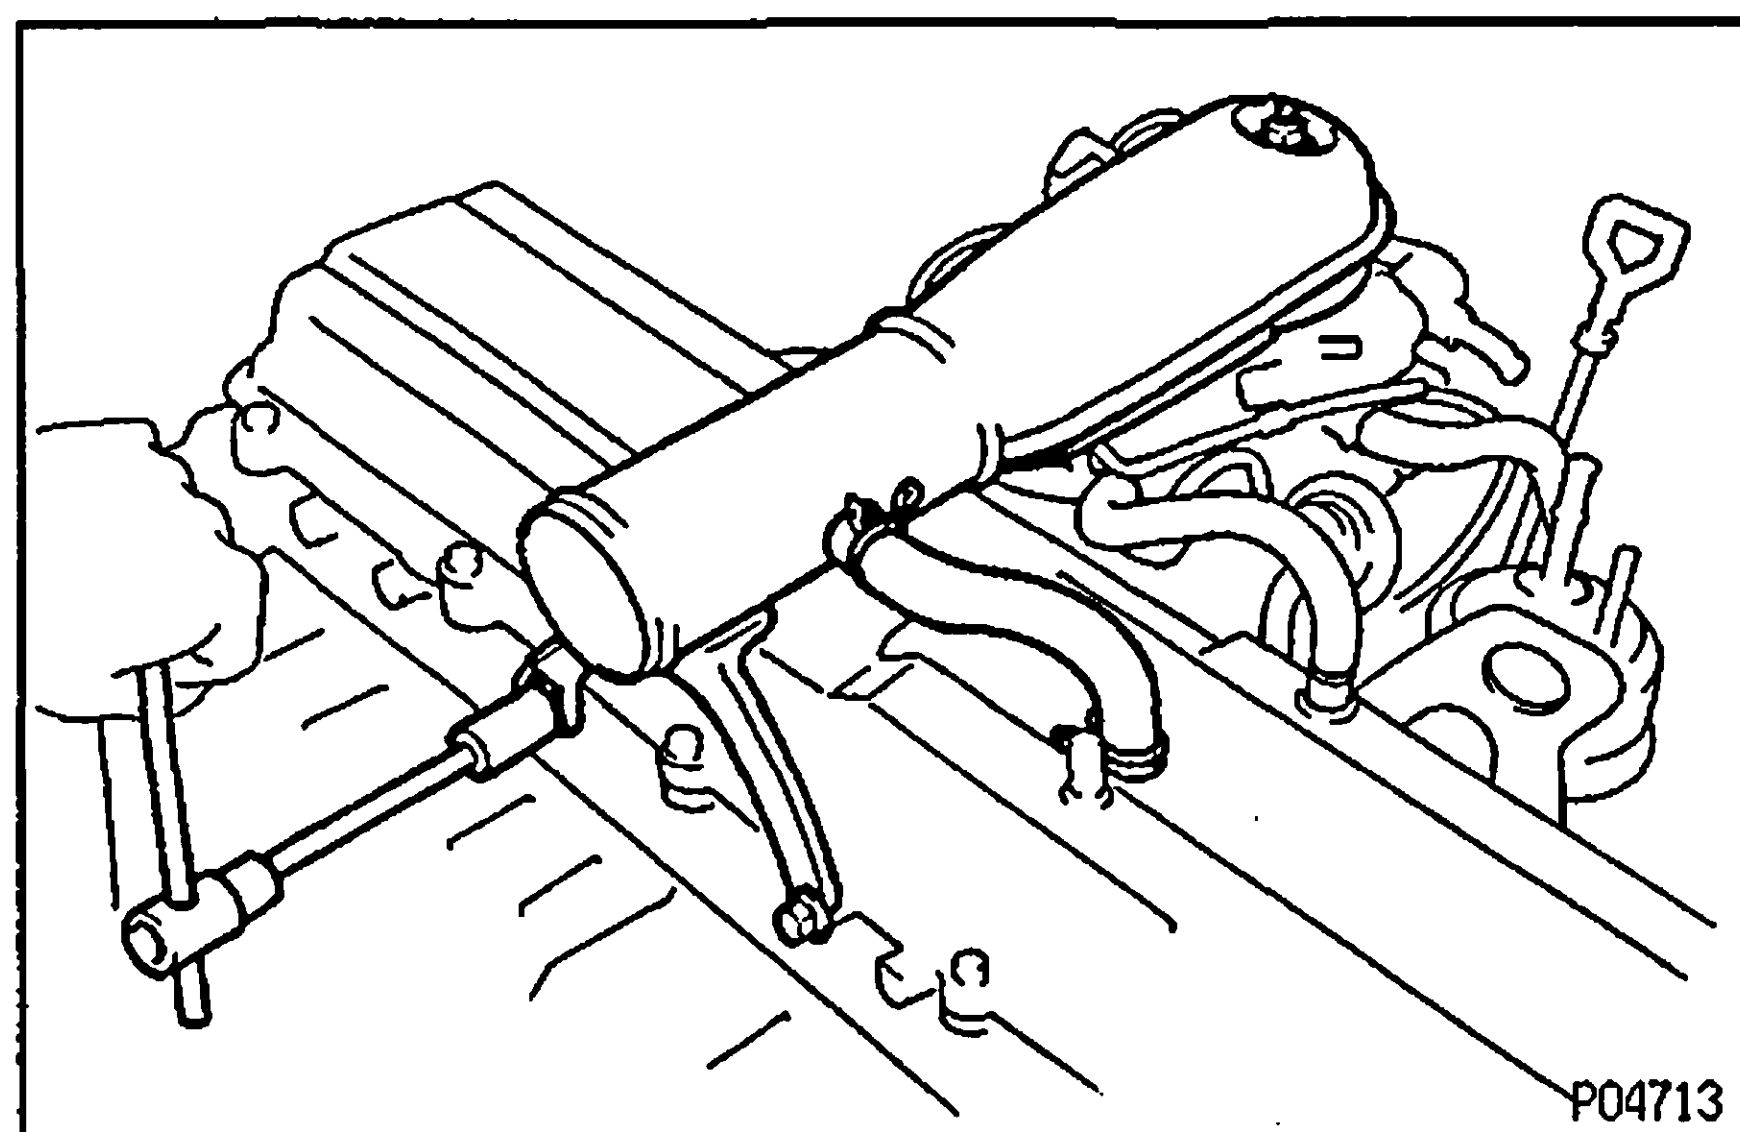**11. REINSTALL INTAKE AIR CONNECTOR**

- (a) Install the air intake connector with the two bolts and nut.

Bolt

Torque: 20 N·m (200 kgf·cm, 14 ft·lbf)

Nut

Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)

- (b) Connect the PCV hose.


12. RECONNECT ACCELERATOR CABLE

IGNITION TIMING INSPECTION AND ADJUSTMENT

1. WARM UP ENGINE

Allow the engine to warm up to normal operating temperature.

EG

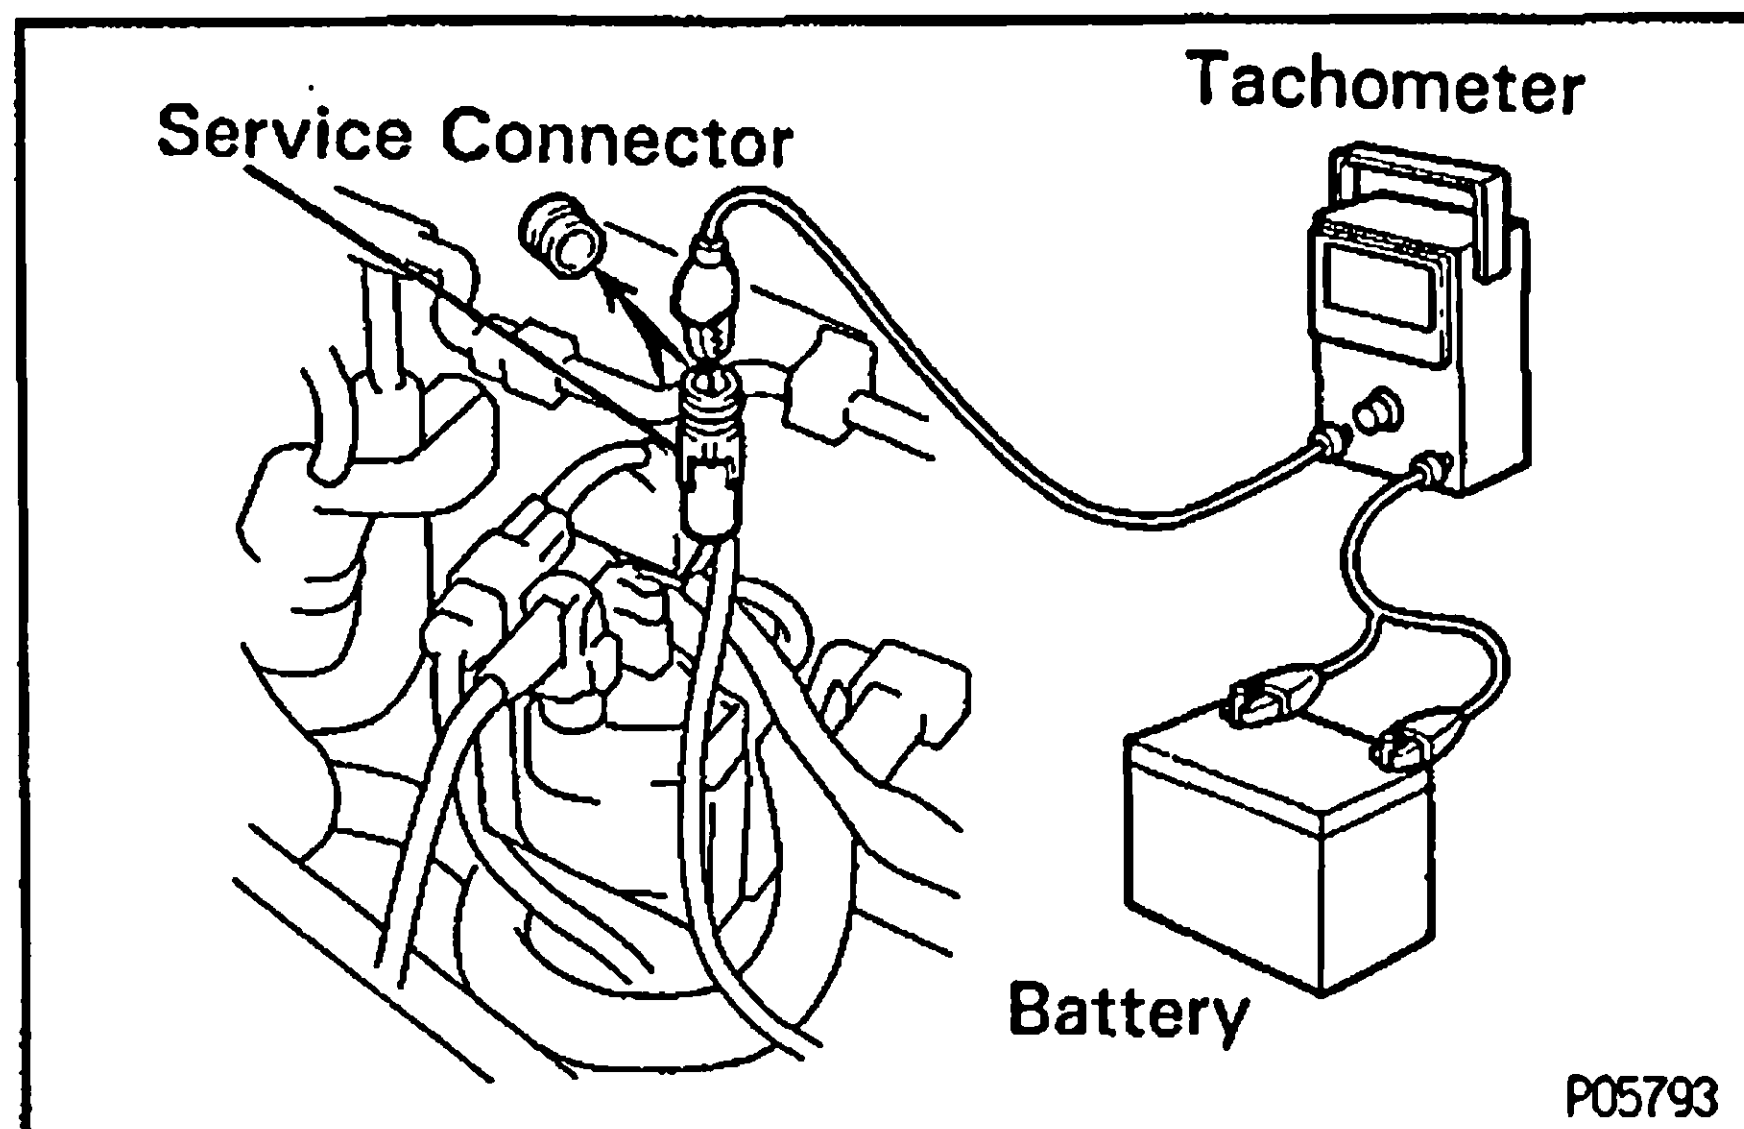

2. CONNECT TACHOMETER AND TIMING LIGHT

Remove the cap and connect the test probe of a tester to the service connector from the igniter.

NOTICE:



- NEVER allow the tachometer terminal to touch ground as it could result in damage to the igniter and/or ignition coil.
- As some tachometers are not compatible with this ignition system, we recommend that you confirm the compatibility of your unit before use.

3. INSPECT AND ADJUST IGNITION TIMING

With the engine idling as specified, use a timing light to check the timing.

Ignition timing:

3° BTDC @ Max. 725 rpm

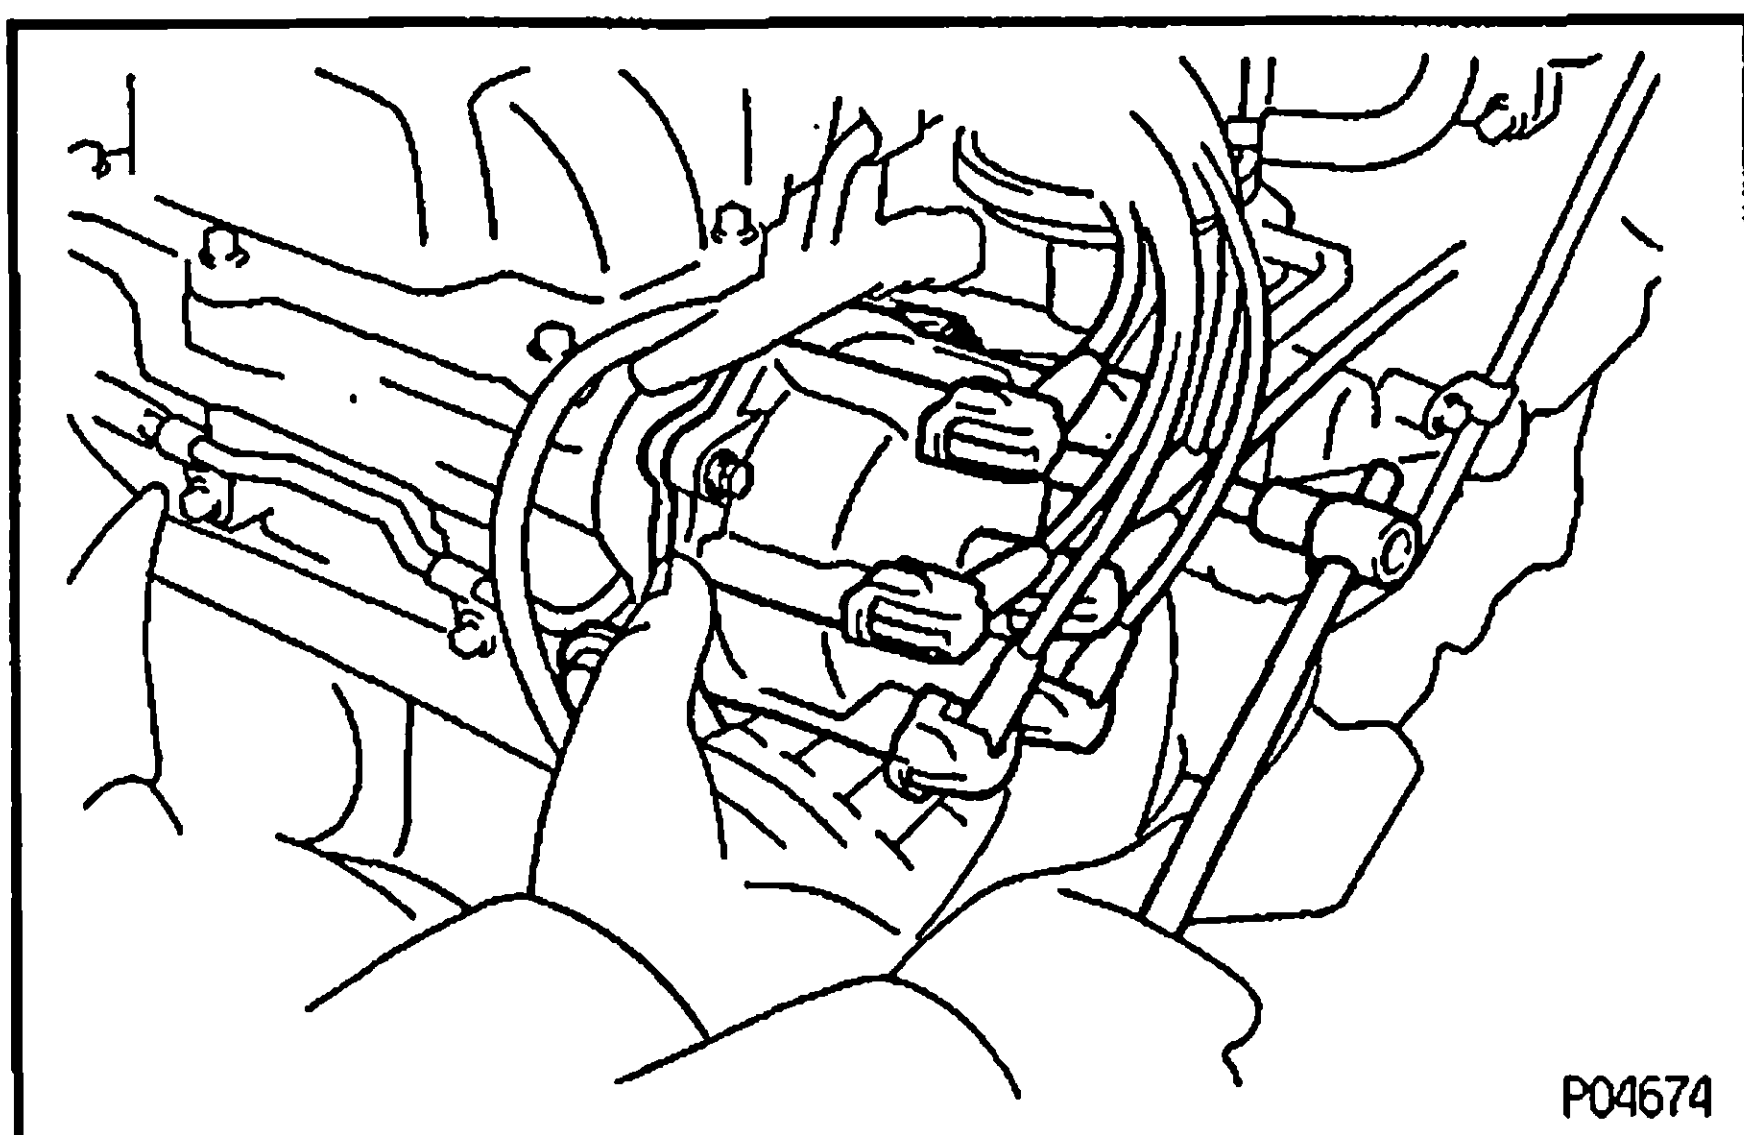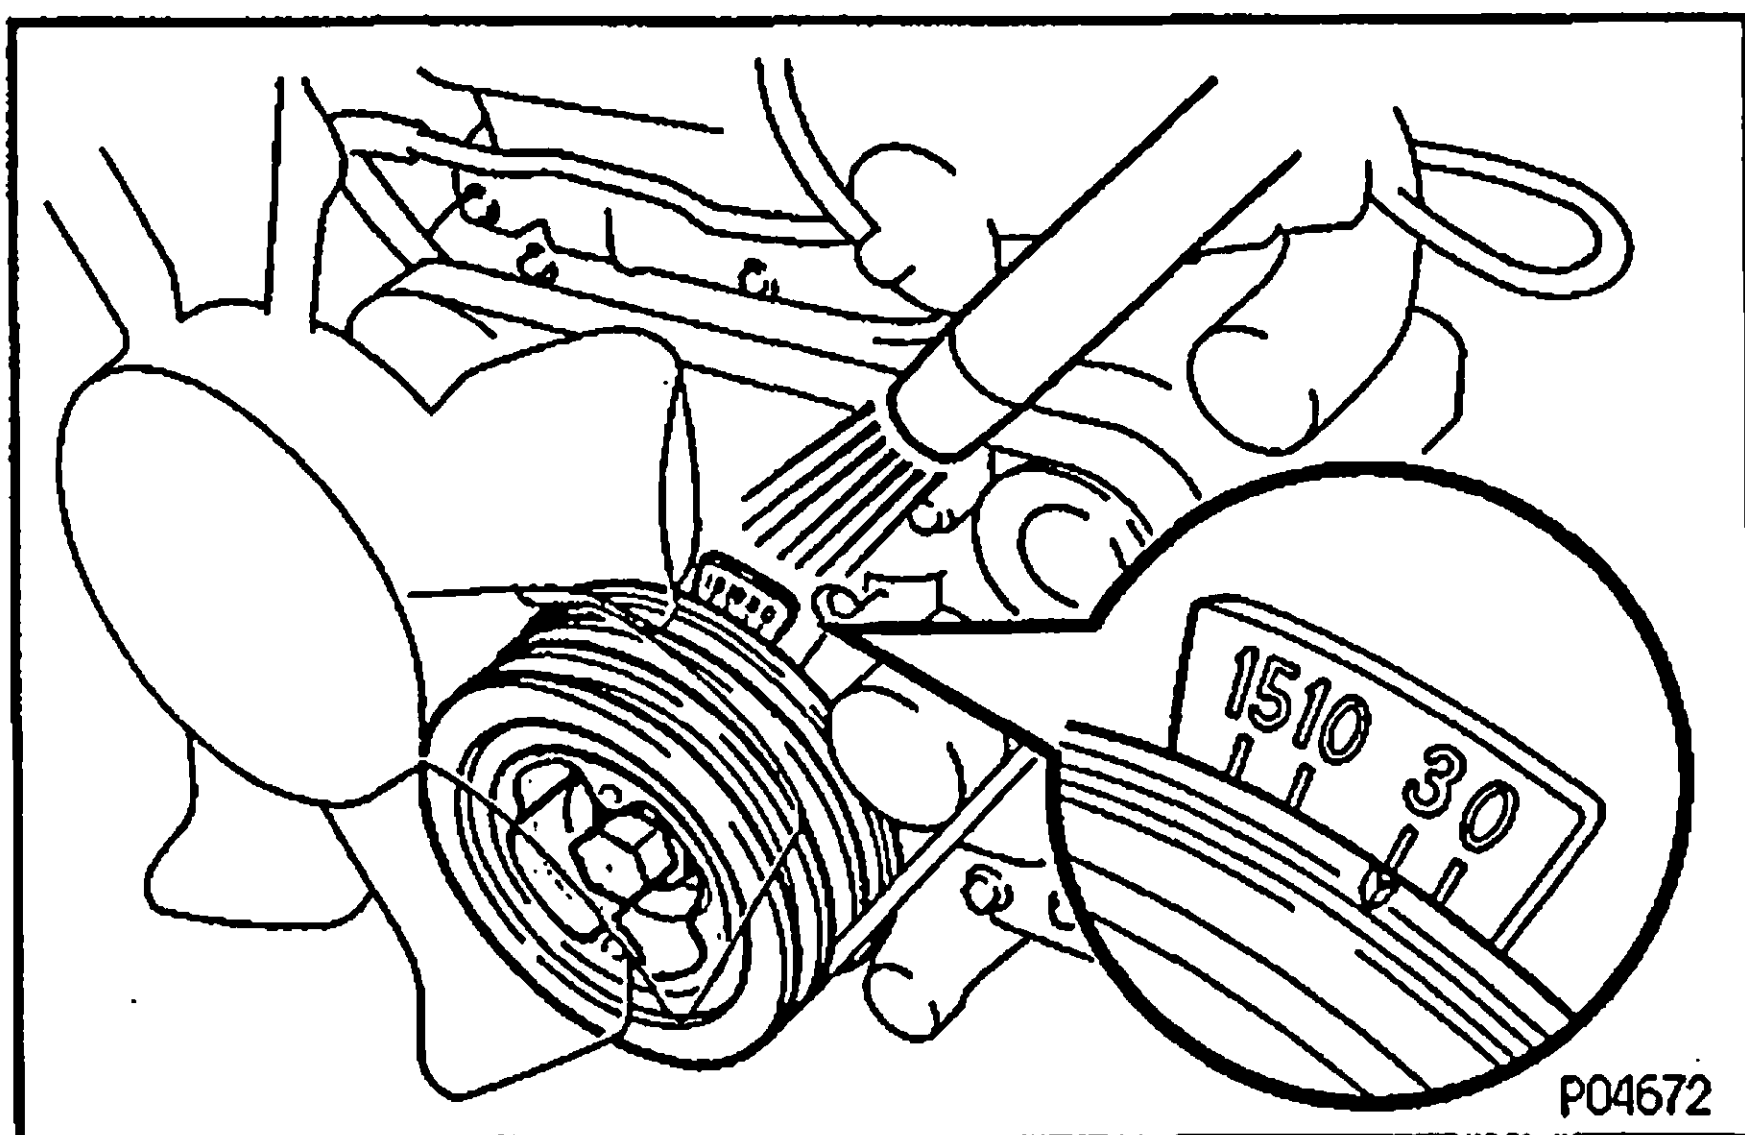

If necessary, loosen the distributor bolt and turn the distributor to align the marks. Recheck the timing after tightening the distributor bolt.

Torque: 21 N·m (210 kgf·cm, 15 ft·lbf)

IDLE SPEED INSPECTION AND ADJUSTMENT

1. WARM UP ENGINE

Allow the engine to warm up to normal operating temperature.

2. CONNECT TACHOMETER

3. INSPECT IDLE SPEED

Idle speed:

550 — 650 rpm

If not as specified, adjust according to the following procedure:

CAUTION:

- Always use a CO meter when adjusting the idle mixture. It is not necessary to adjust with the idle mixture adjusting screw in most vehicles if they are in good condition.
- If a CO meter is not available and it is absolutely necessary to adjust with the idle mixture adjusting screw, use the alternative method (See page EM-24).

A. METHOD WITH CO METER


EGOV6-01

1. VISUALLY INSPECT CARBURETOR

- (a) Check for loose screws or a loose mounting to the manifold.
- (b) Check for wear in the linkage, missing snap rings or excessive looseness in the throttle shaft. Correct any problems found.


2. INITIAL CONDITIONS

- (a) Air cleaner installed
- (b) Normal operating coolant temperature
- (c) Choke fully open
- (d) All accessories switched off
- (e) All vacuum lines connected
- (f) Ignition timing set correctly
- (g) Transmission in the "N" range

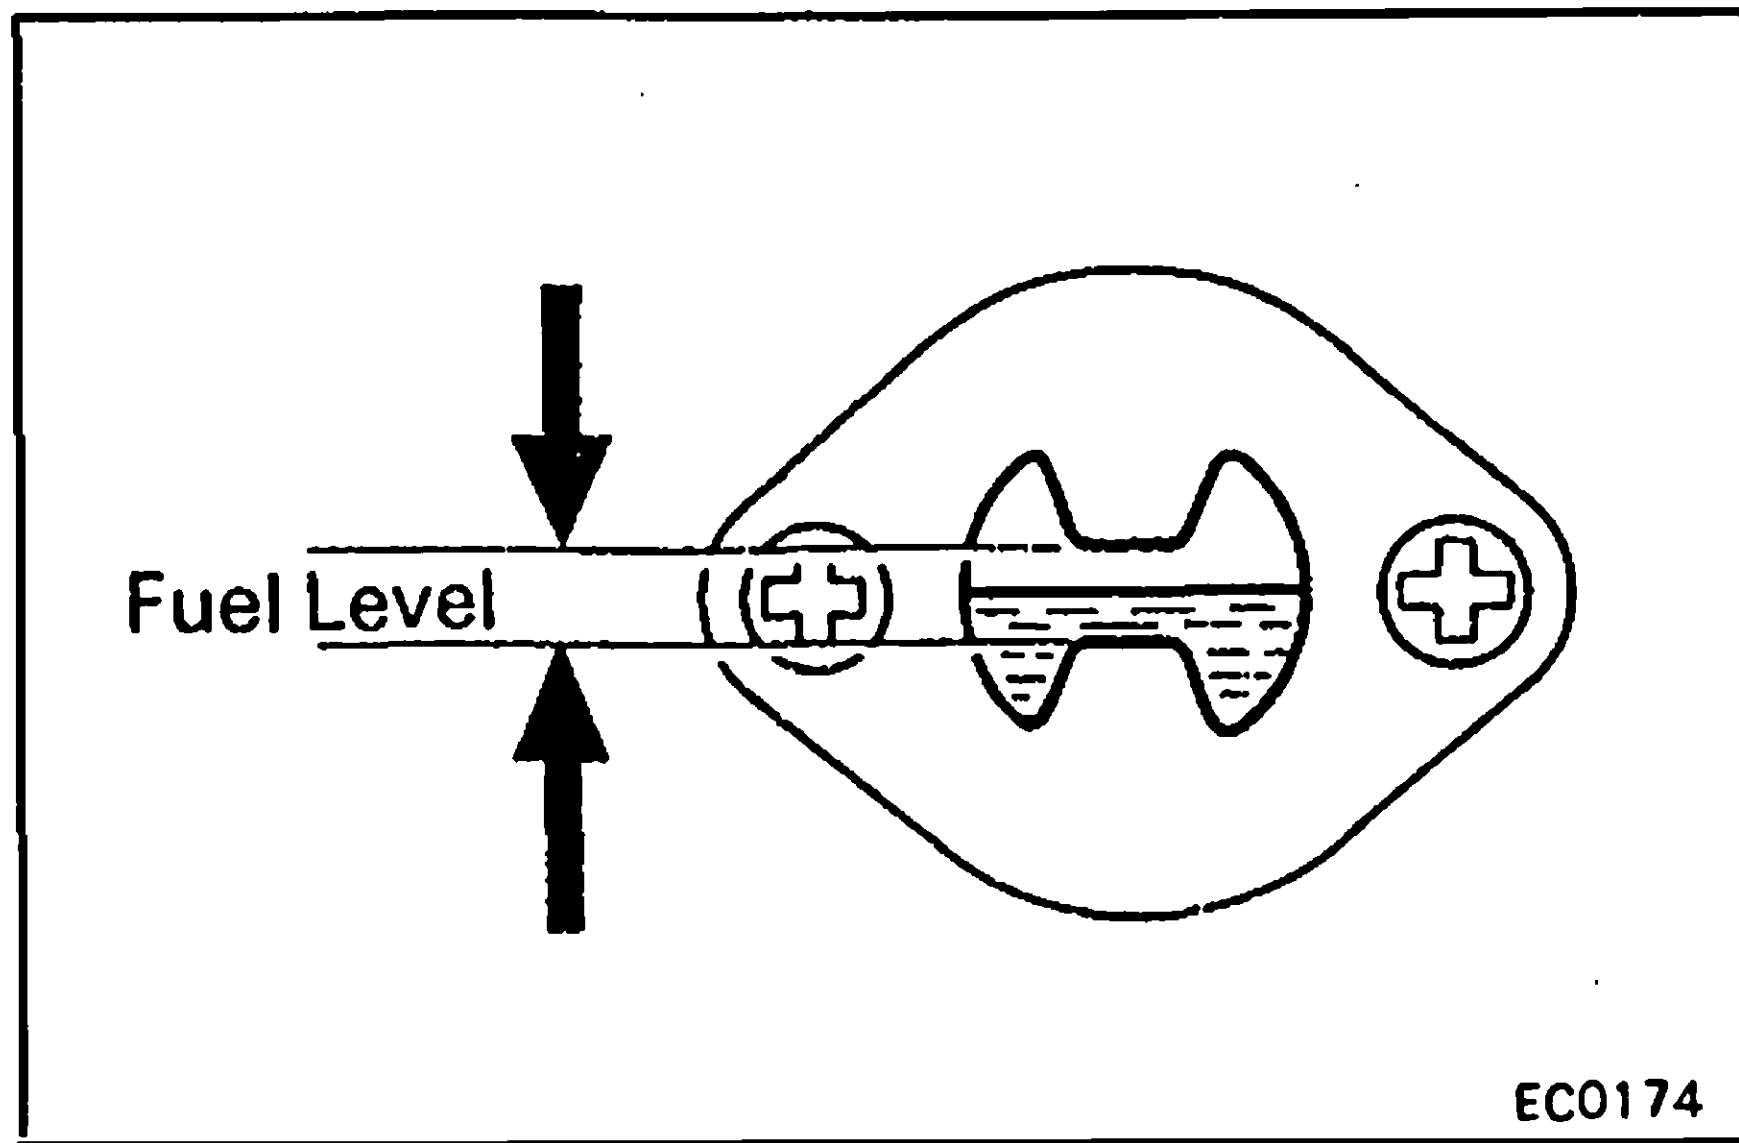

- (h) Fuel level should be about even with the correct level in the sight glass
- (i) CO meter operates normally


EG

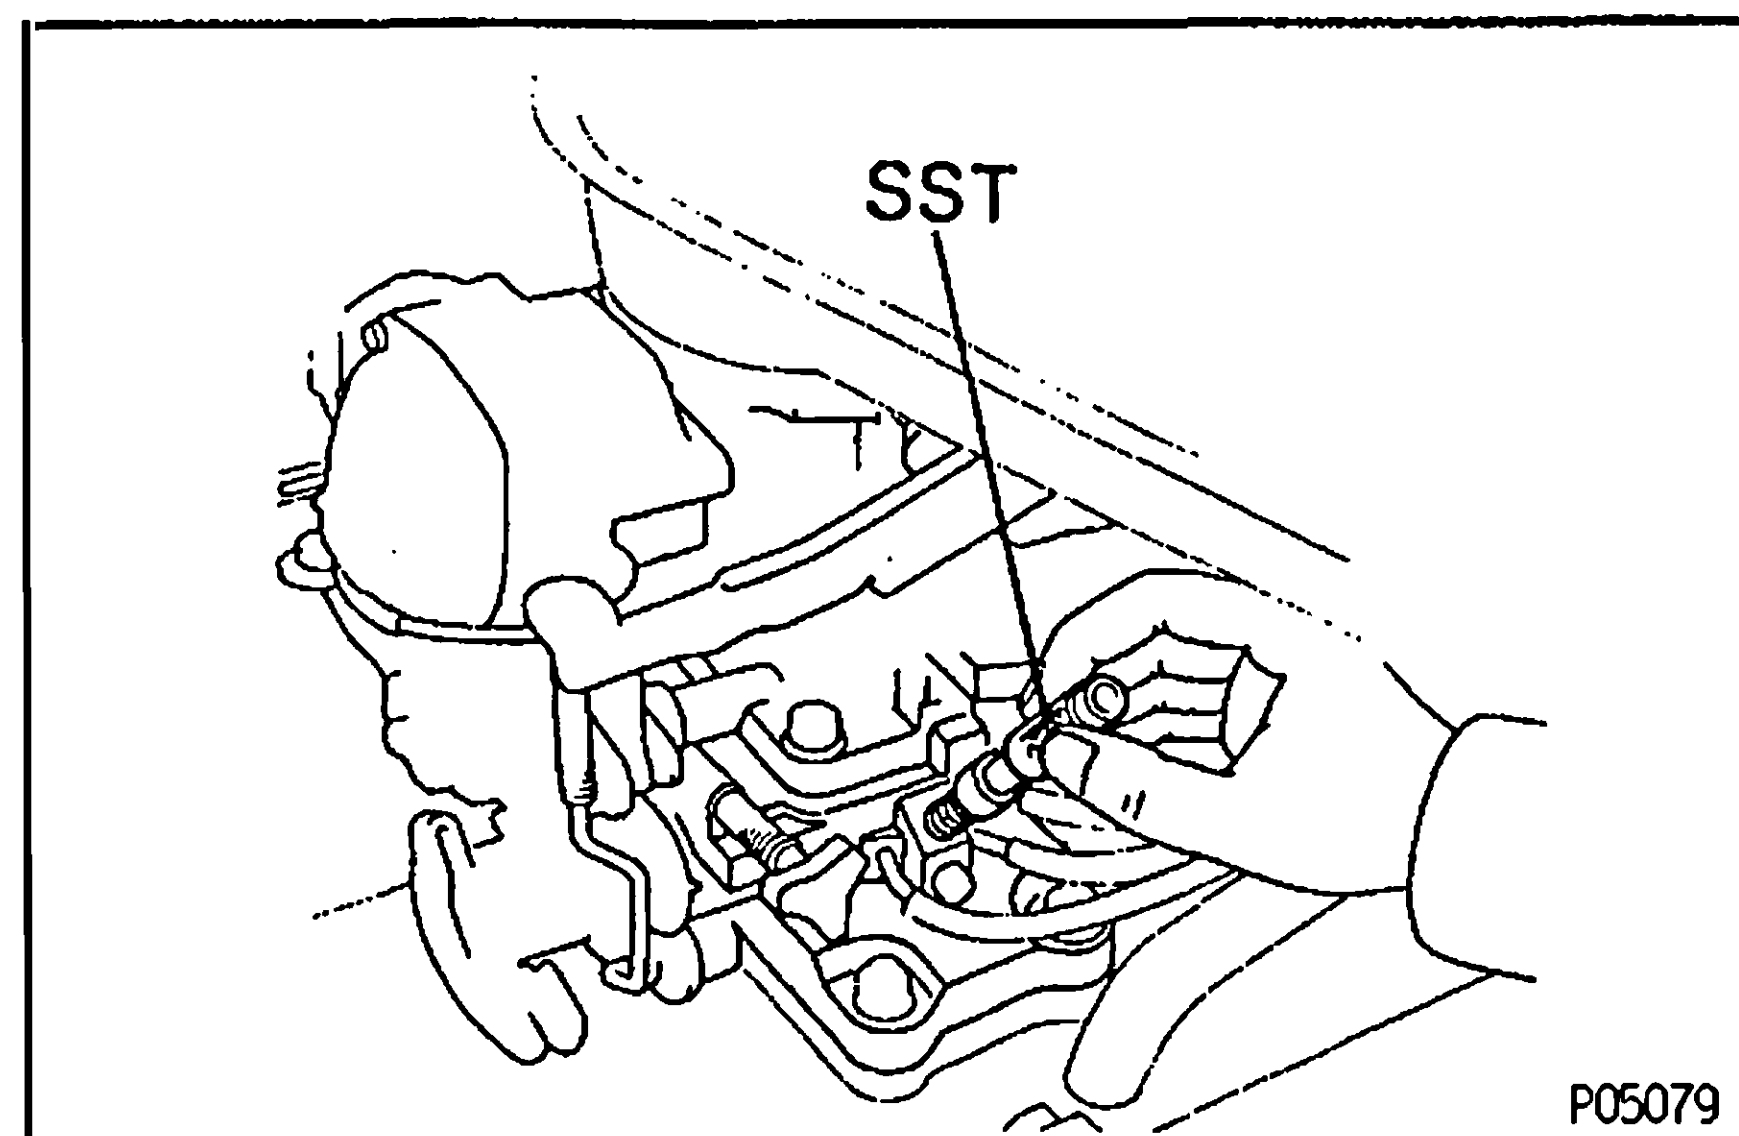

3. ADJUST IDLE SPEED AND IDLE MIXTURE

HINT: Use SST if necessary.


SST 09243-00020

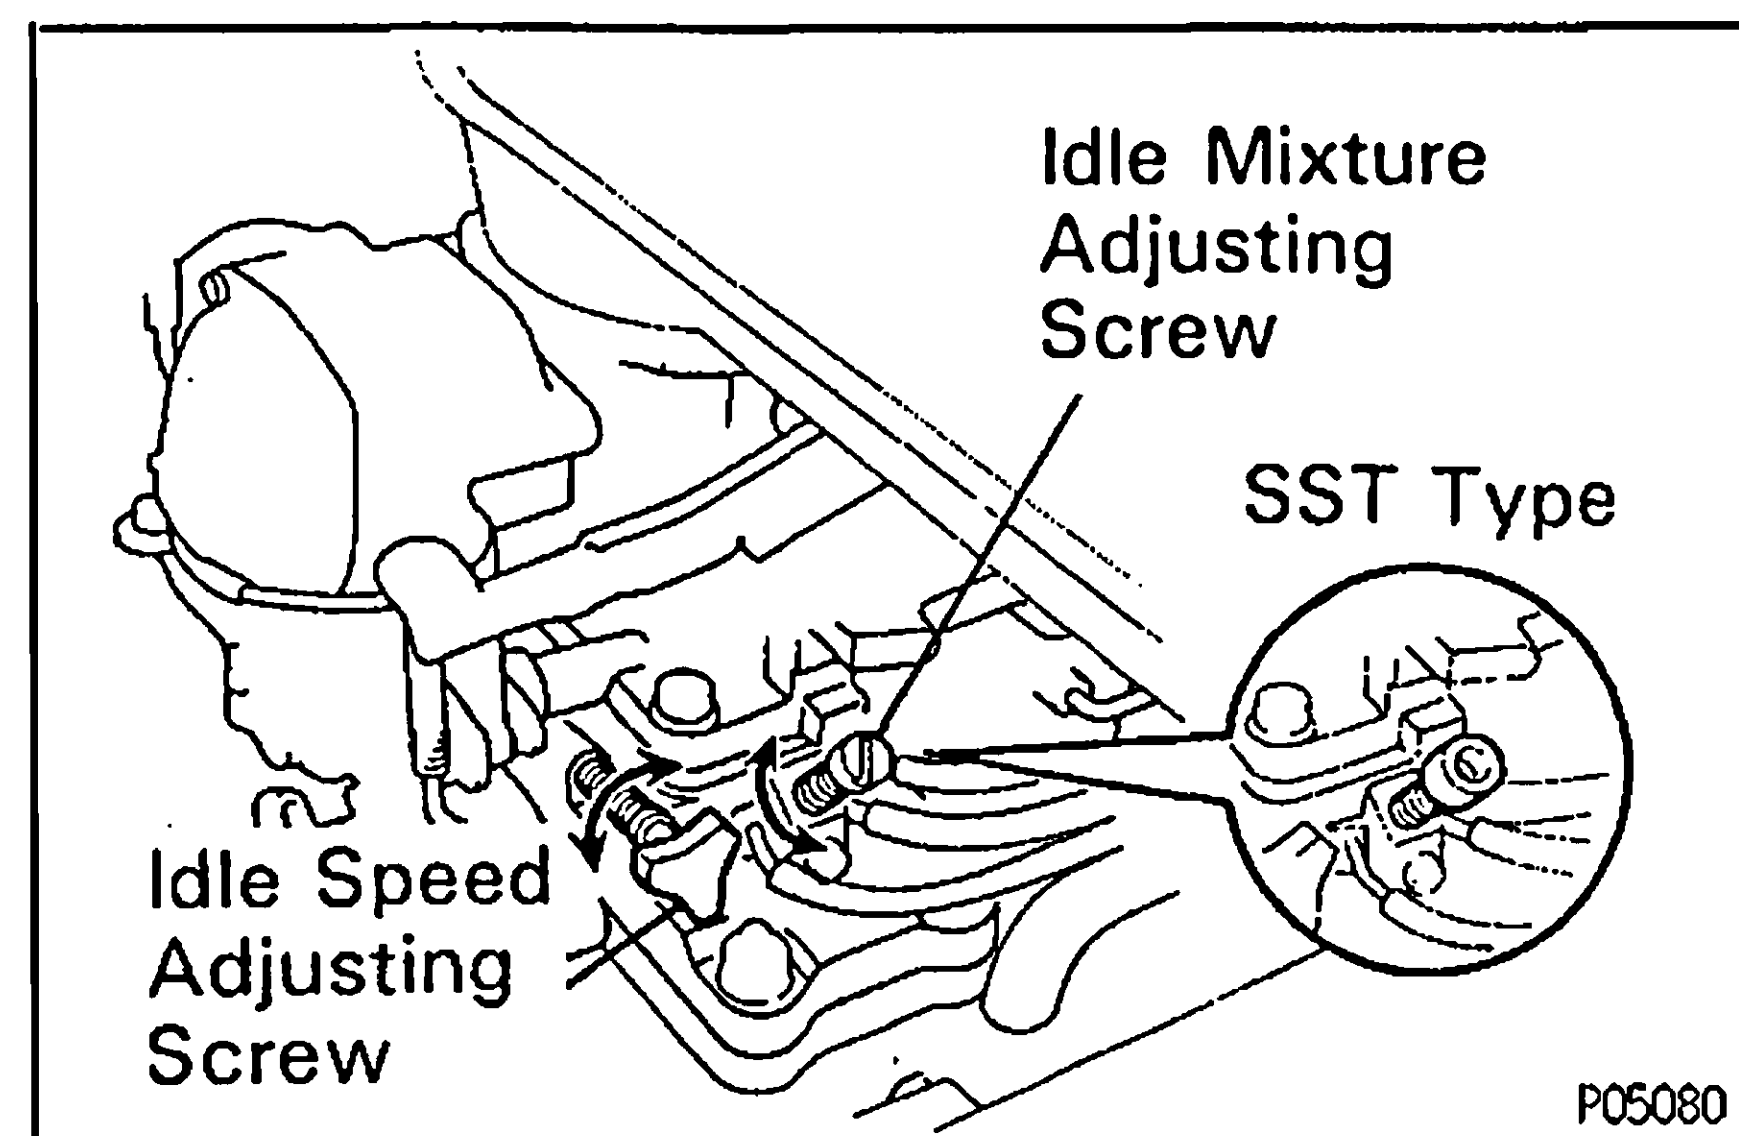

- (a) Start the engine.
- (b) Using a CO meter to measure the CO concentration in the exhaust, turn the idle speed and idle mixture adjusting screws to obtain the specified concentration value at idle speed.


Idle speed:

600 rpm

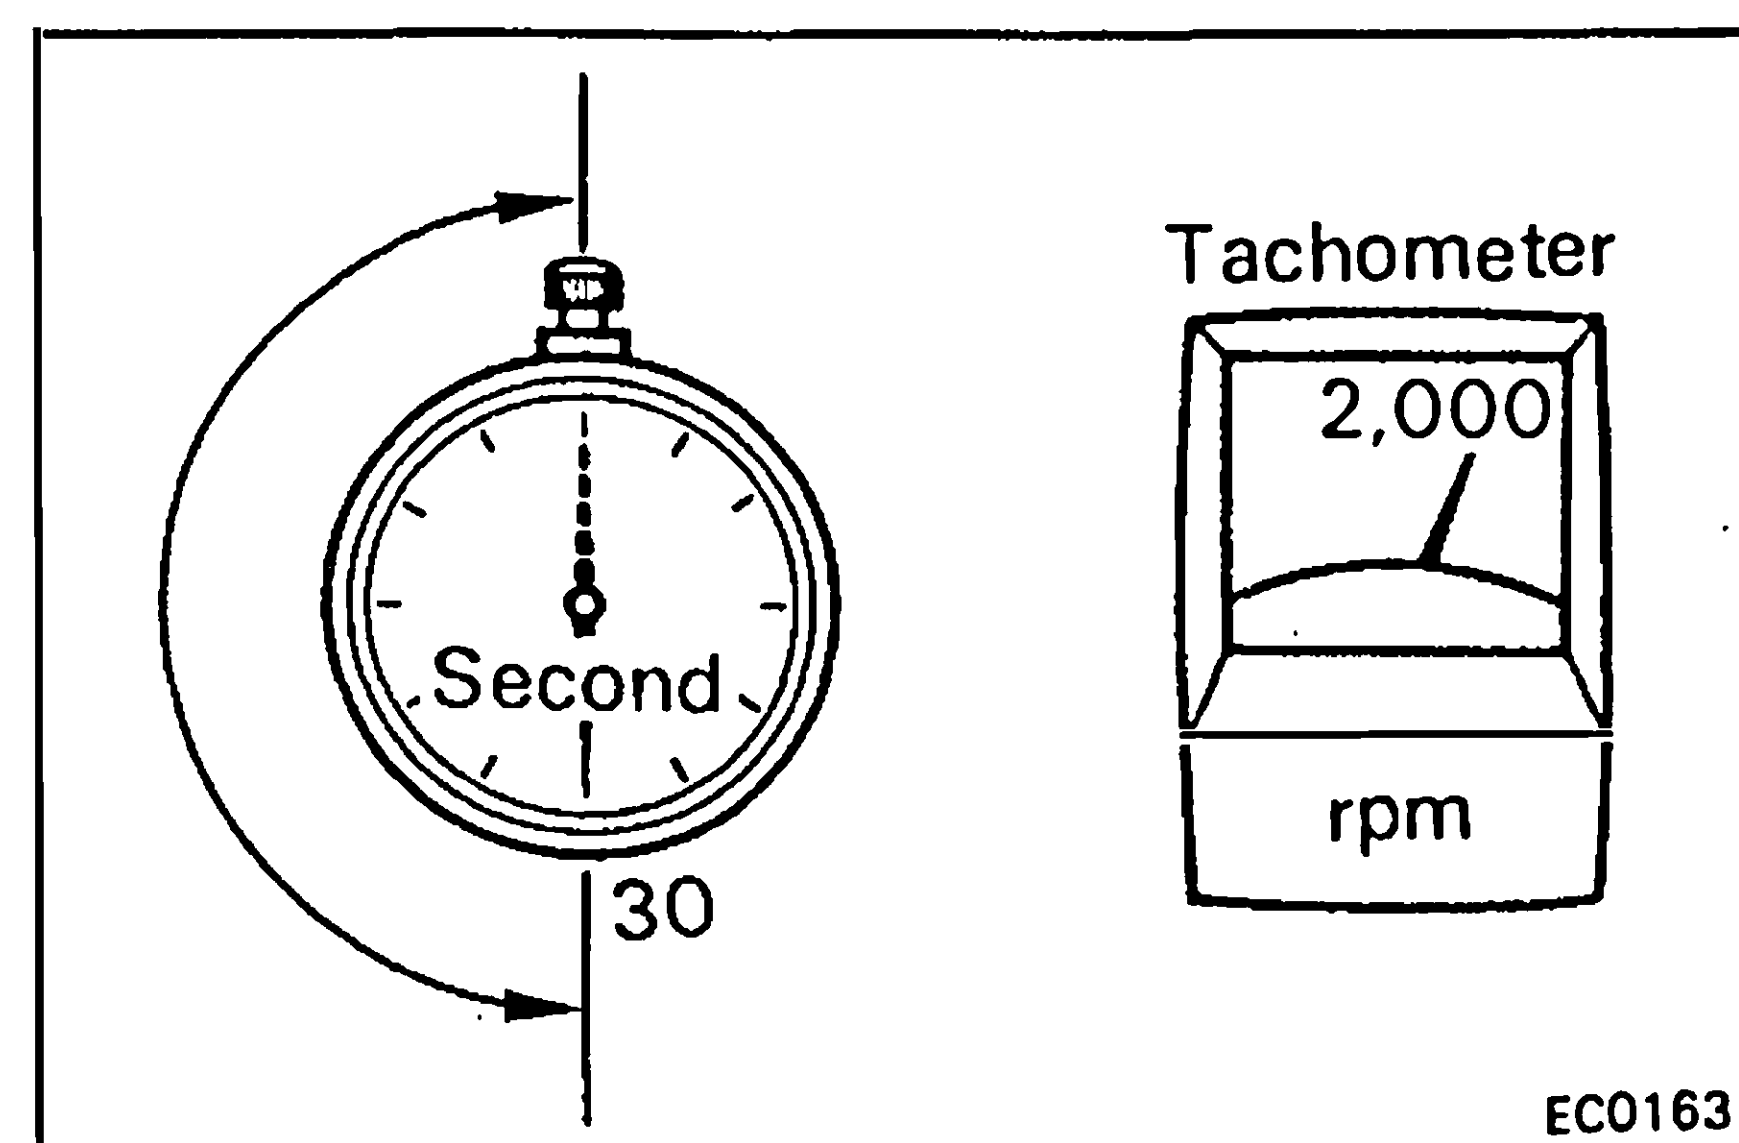

4. INSPECT CO CONCENTRATION

- (a) Check that the CO meter is properly calibrated.
- (b) Race the engine 30-60 seconds at about 2,000 rpm before measuring concentration.
- (c) Wait 1-3 minutes after racing the engine to allow the concentration to stabilize.

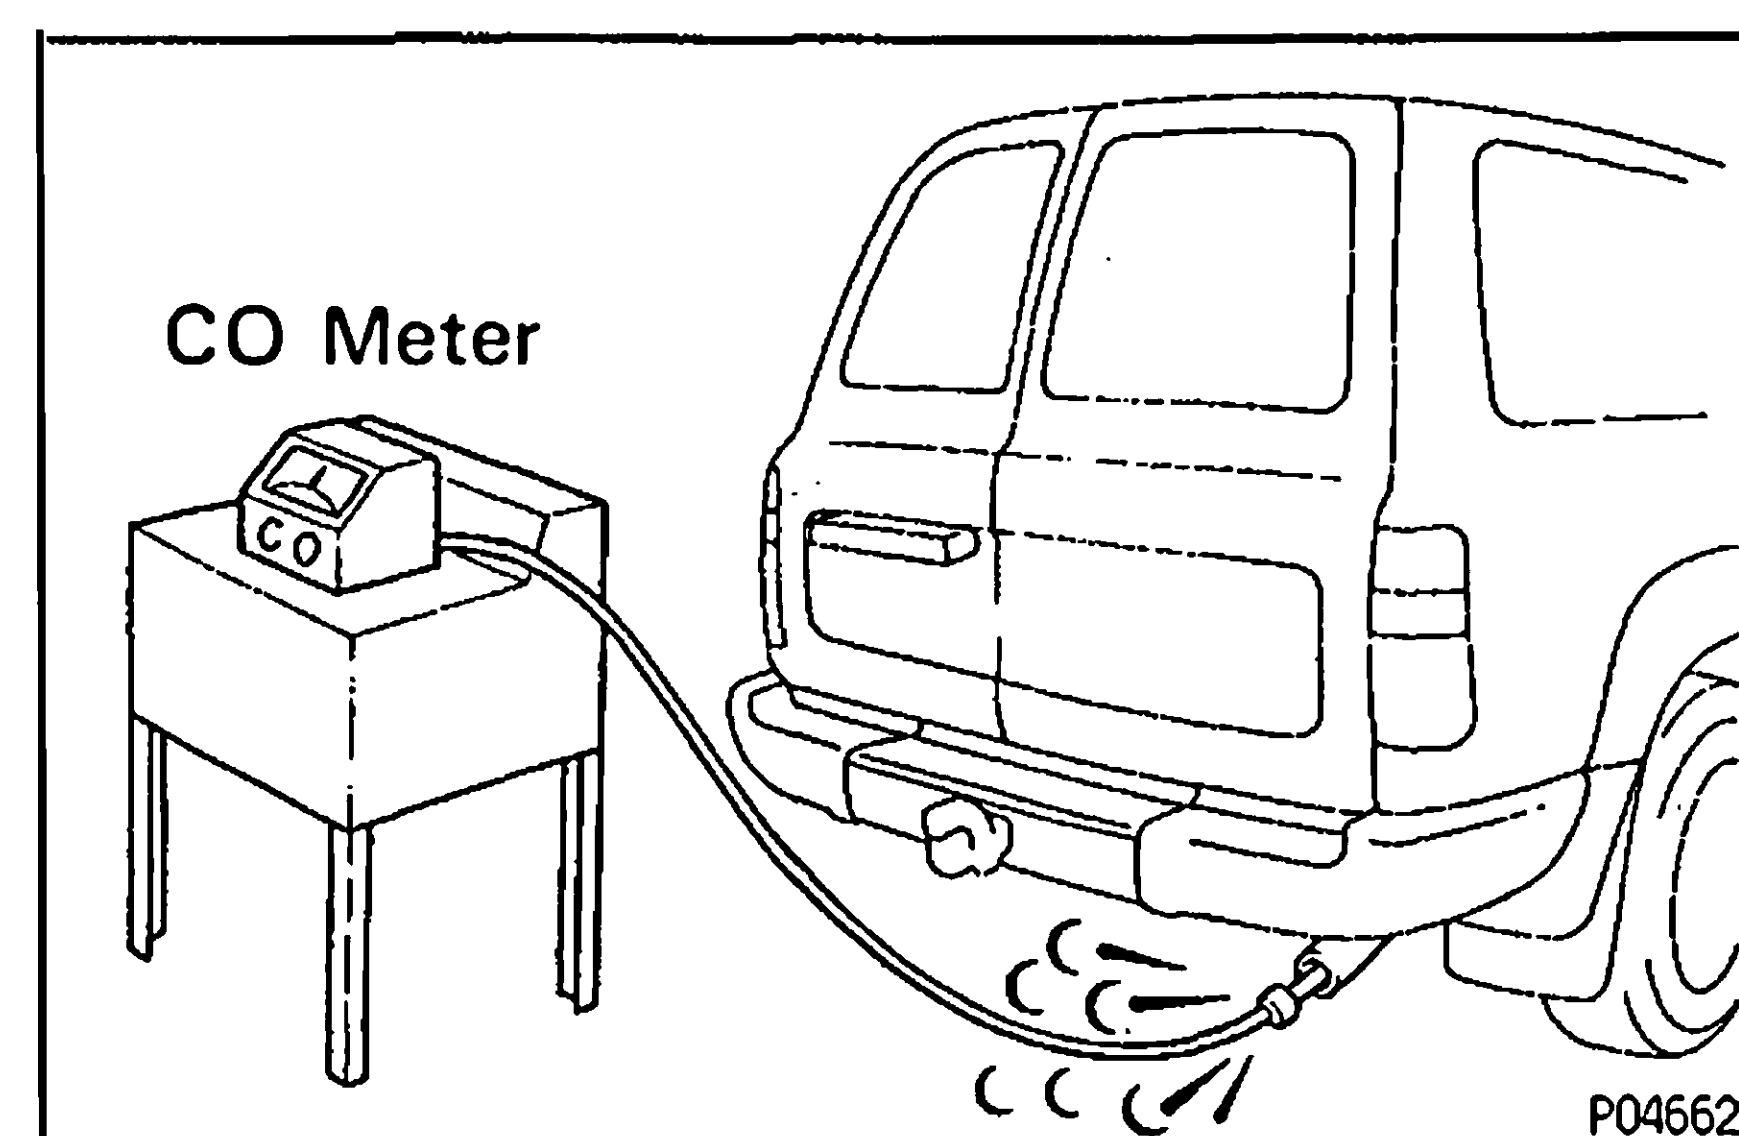

- (d) Insert a testing probe at least 40 cm (1.3 ft) into the tailpipe, and measure the concentration within a short time.

Idle CO concentration:

$1.5 \pm 0.5 \%$

- If the CO concentration is within specification this adjustment is complete.

- If the CO concentration is not within specification, turn the idle mixture adjusting screw to obtain the specified concentration value.
- If the CO concentration cannot be corrected by adjusting the idle mixture, see table below for other possible causes.

TROUBLESHOOTING

CO	HC	Problems	Causes
Normal	High	Rough idle	1. Faulty ignition: • Incorrect timing • Fouled, shorted or improperly gapped plugs • Open or crossed ignition wires • Cracked distributor cap 2. Leaky exhaust valves 3. Leaky cylinder
Low	High	Rough idle (Fluctuating HC reading)	1. Vacuum leak: • Vacuum hose • Intake manifold • PCV line • Carburetor base
High	High	Rough idle (Black smoke from exhaust)	1. Restricted air filter 2. Plugged PCV valve 3. Faulty carburetion: • Faulty choke action • Incorrect float setting • Leaking needle or seat • Leaking power valve

V00833

EG0V7-01

B. ALTERNATIVE METHOD


To be used only if CO meter is not available.

1. VISUALLY INSPECT CARBURETOR

- Check for loose screws or loose a mounting to the manifold.
- Check for wear in the linkage, missing snap rings or excessive looseness in the throttle shaft. Correct any problems found.



2. INITIAL CONDITIONS

- (a) Air cleaner installed
- (b) Normal operating coolant temperature
- (c) Choke fully open
- (d) All accessories switched off
- (e) All vacuum lines connected
- (f) Ignition timing set correctly
- (g) Transmission in the "N" range

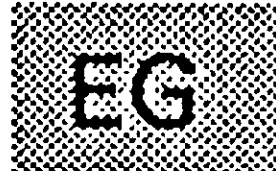**3. ADJUST IDLE SPEED AND IDLE MIXTURE**

HINT: Use SST if necessary.

SST 09243-00020

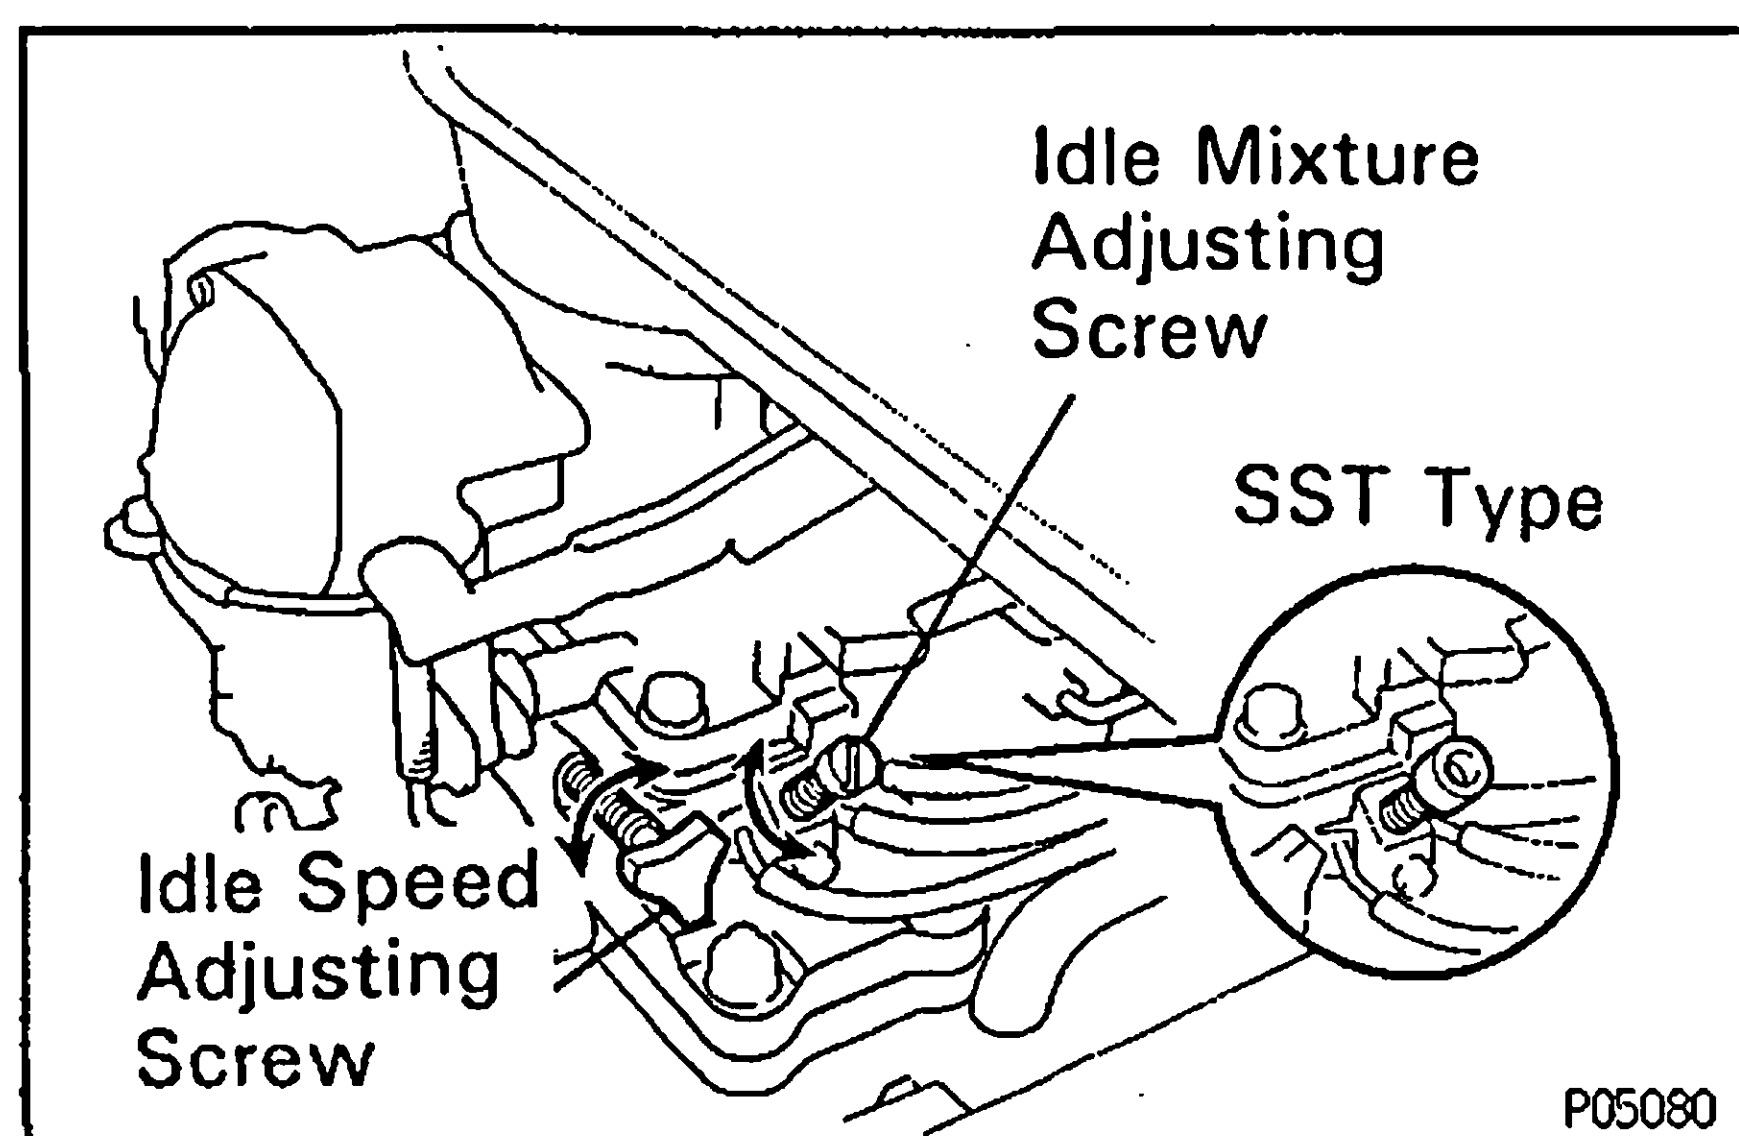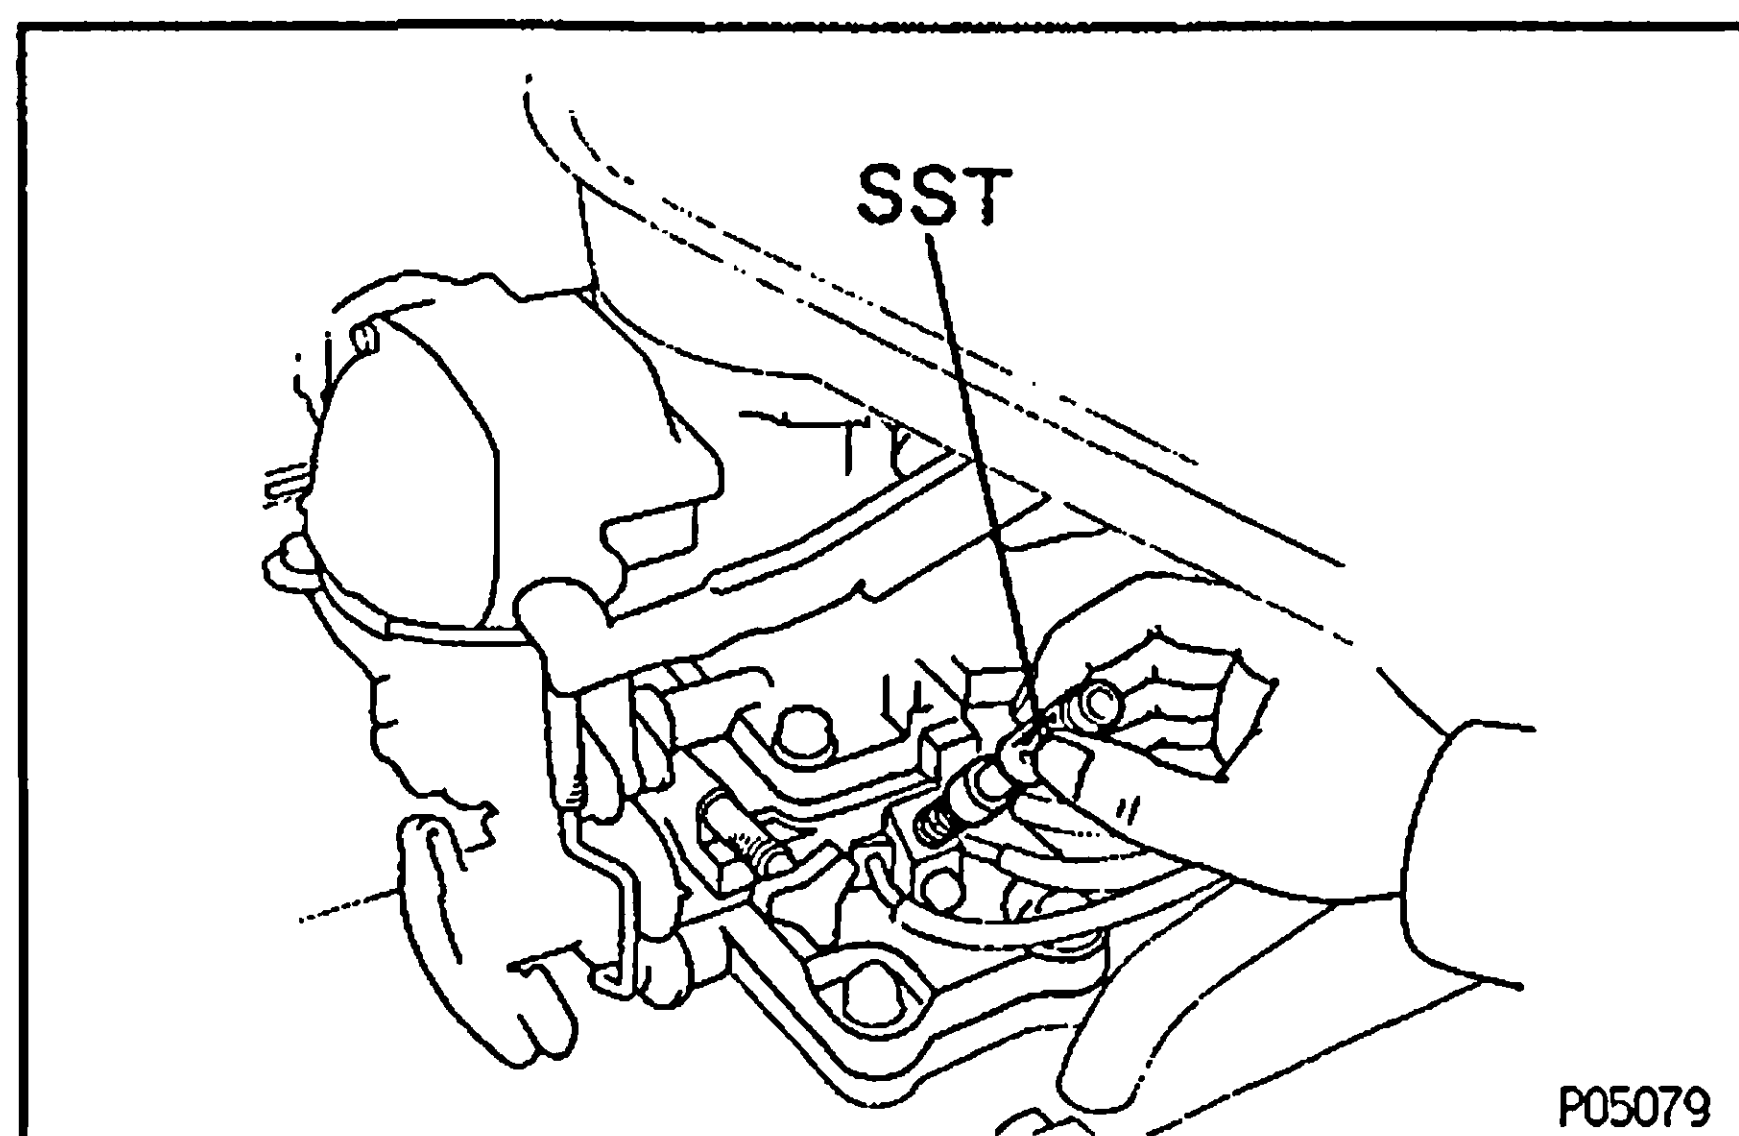

- (a) Start the engine.
 - (b) Set to the maximum speed by turning the idle mixture adjusting screw.
 - (c) Set to the idle mixture speed by turning the idle speed adjusting screw.
- Idle mixture speed:
- 650 rpm**
- (d) Before moving to the next step continue adjustments (b) and (c) until the maximum speed will not rise any further no matter how much the idle mixture adjusting screw is adjusted.
 - (e) Set to the idle speed by screwing in the idle mixture adjusting screw.

Idle speed:


600 rpm

This is Lean Drop Method for setting idle speed and mixture.

FAST IDLE SPEED INSPECTION AND ADJUSTMENT


1. WARM UP AND STOP ENGINE
2. CONNECT TACHOMETER TO ENGINE

EG

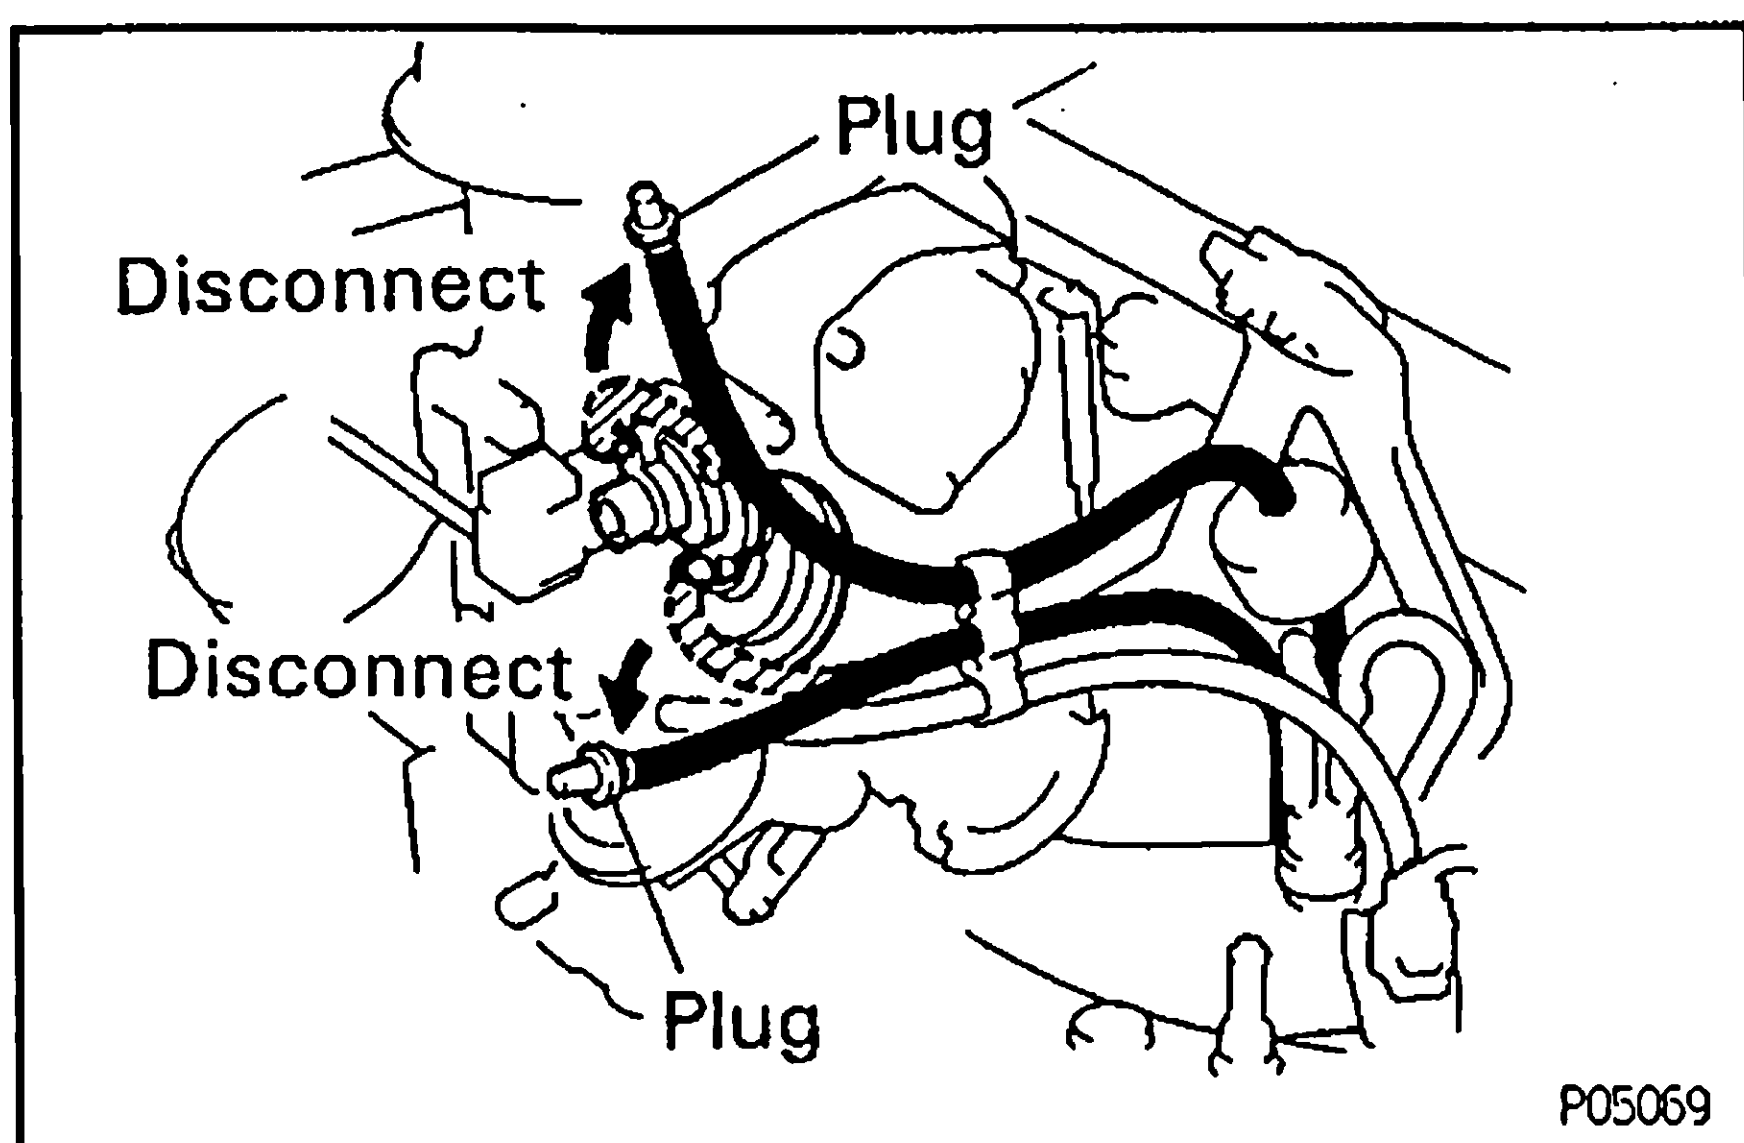


3. CUT OPERATION OF FAST IDLE CAM BREAKER (FICB) SYSTEM

Disconnect the vacuum hoses from the FICB and CB, and plug the hose ends. This shuts off the FICB and CB systems.

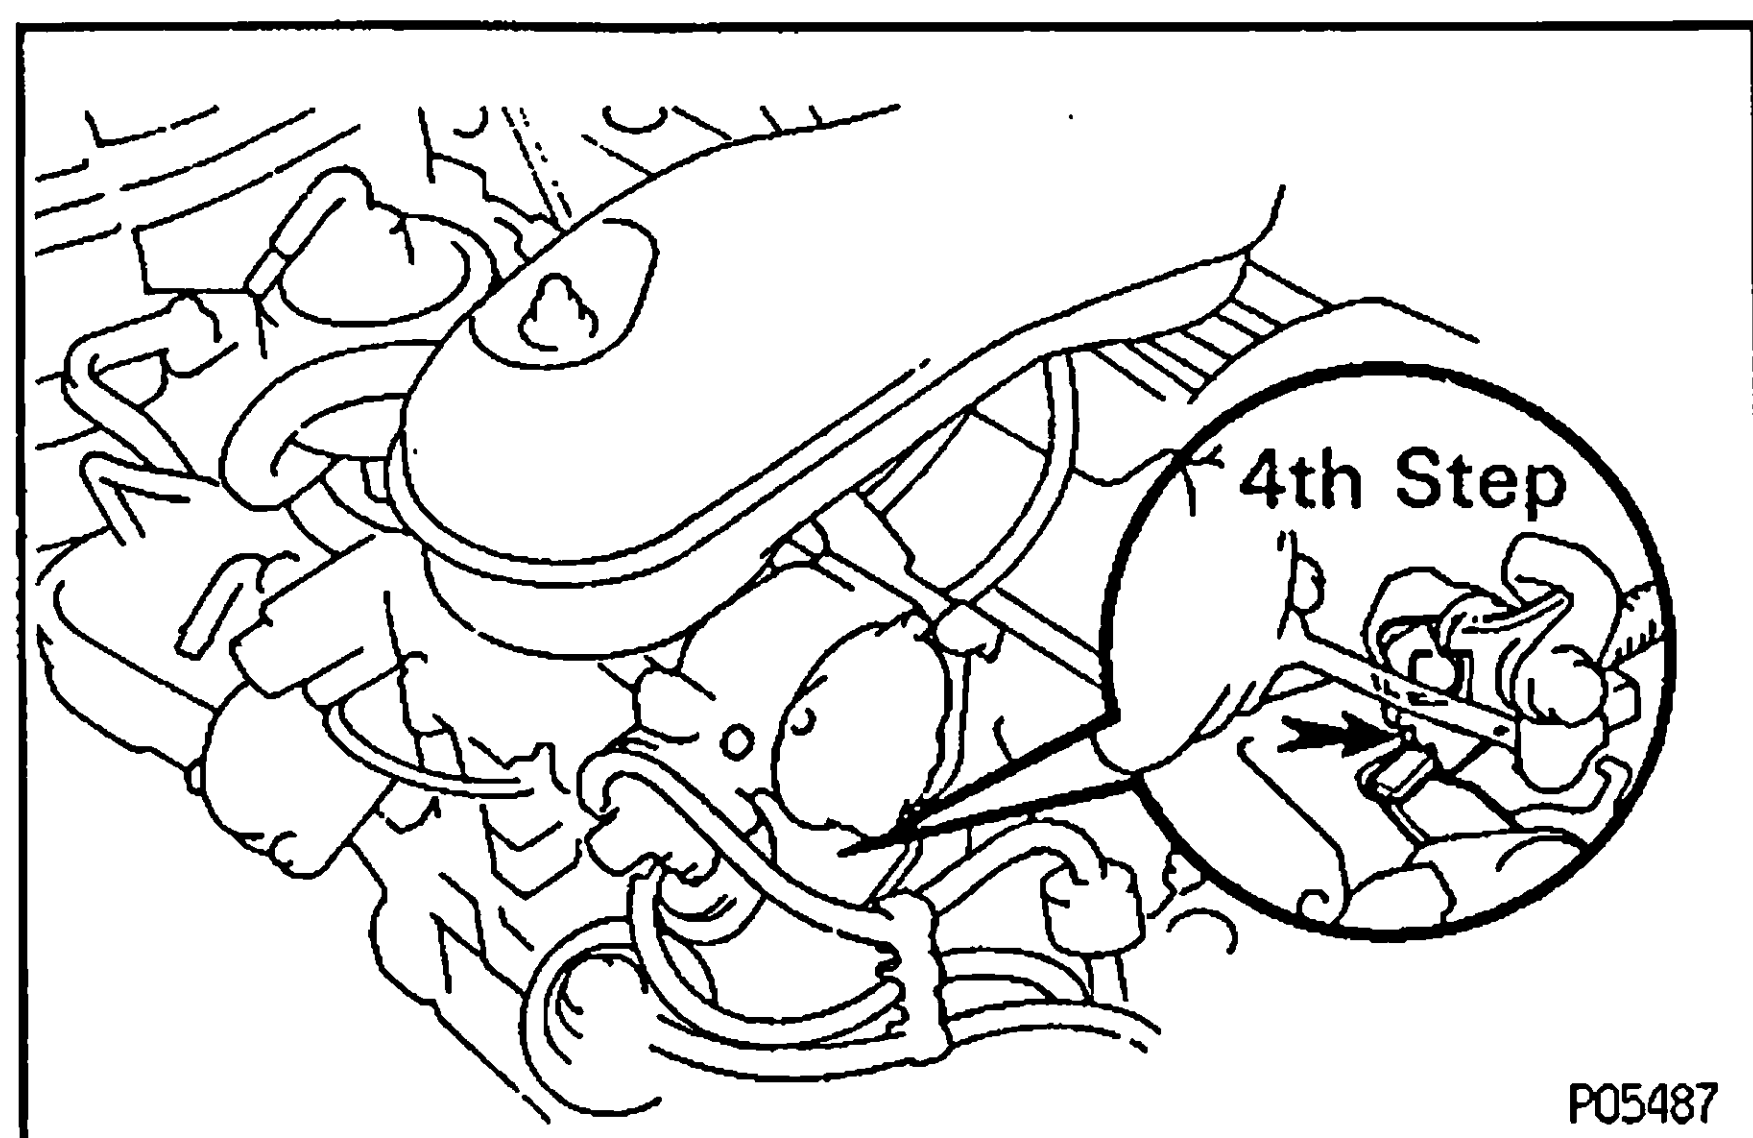

4. SET FAST IDLE CAM

Lightly race the engine and release the throttle, and check that the fast idle cam is set at the 4th step.

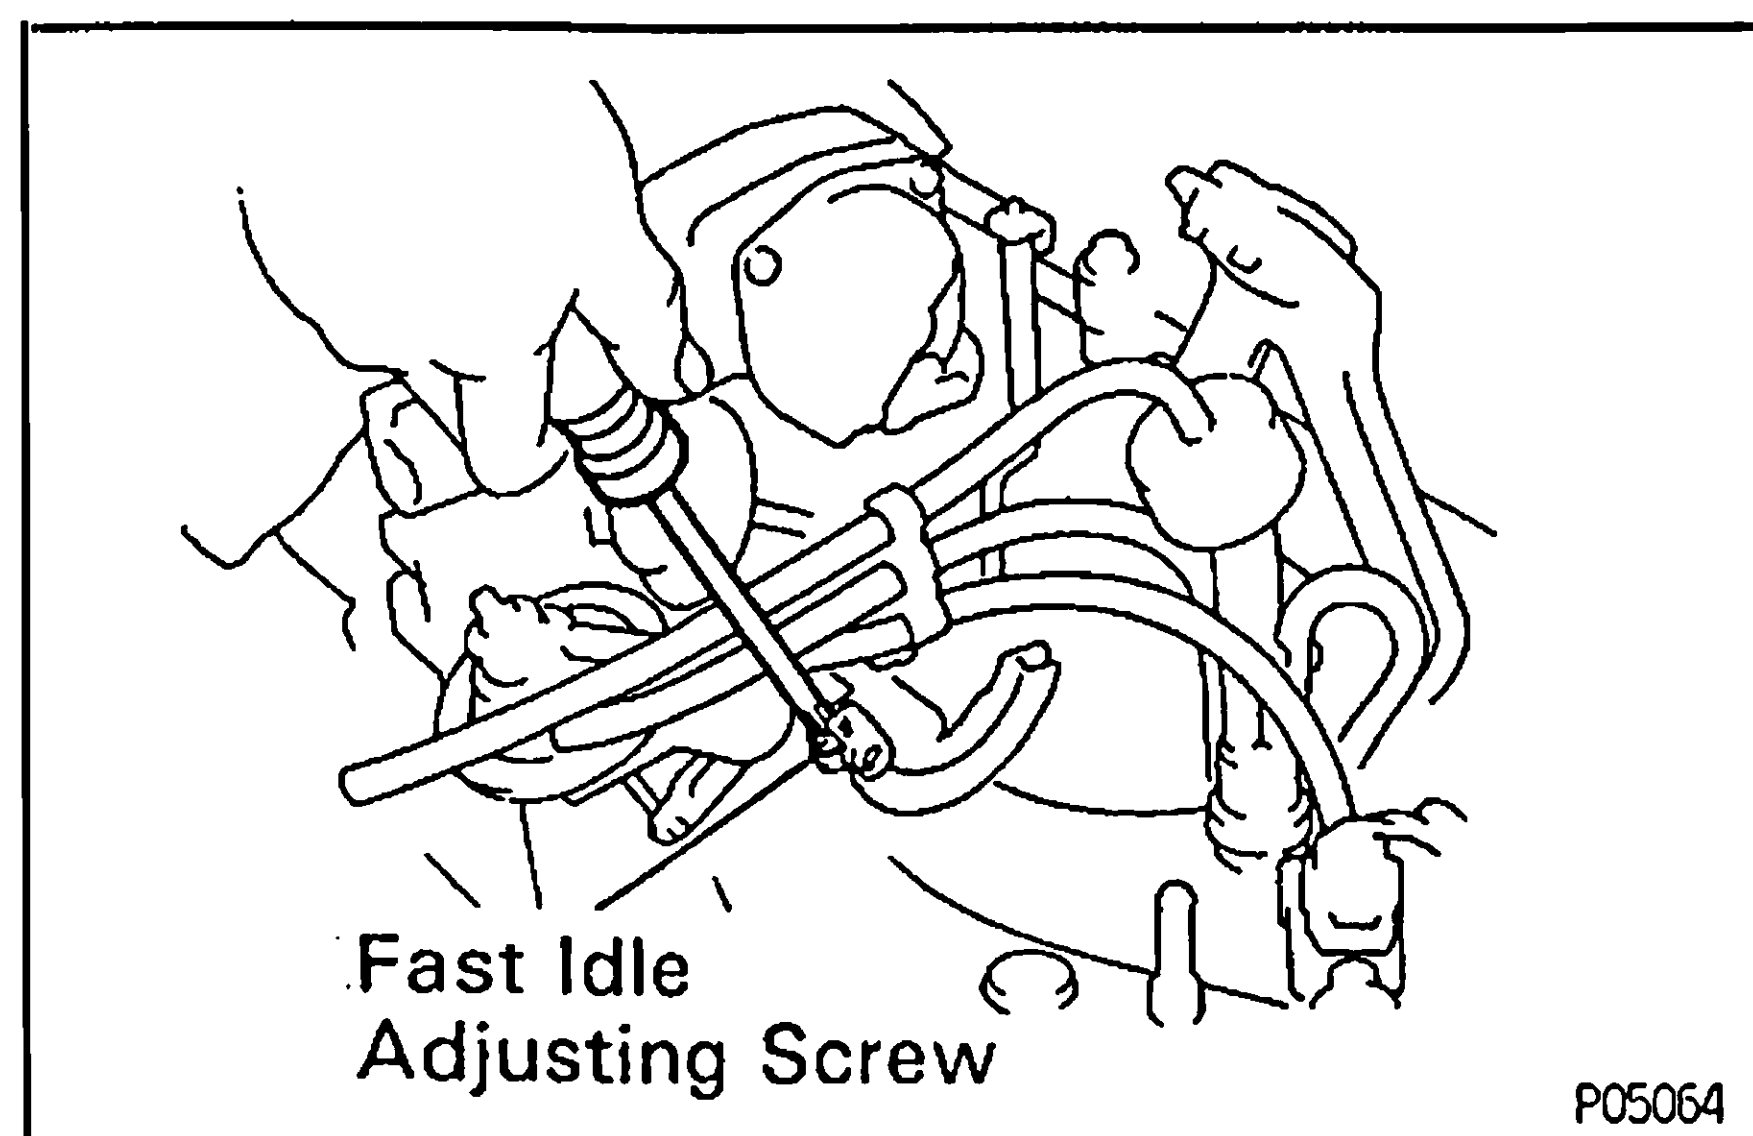

5. INSPECT AND ADJUST FAST IDLE SPEED

- (a) Check the fast idle speed.

Fast idle speed:

G.C.C.

800 — 1,000 rpm

Others

1,100 — 1,300 rpm

If the fast idle speed is not as specified, adjust the fast idle speed by turning the fast idle adjusting screw.

Fast idle speed:

G.C.C.

900 rpm

Others

1,200 rpm


- (b) Lightly race the engine and release the throttle, and repeat steps 4 and 5.

6. RECONNECT VACUUM HOSES TO FICB AND CB

DASH POT (DP) INSPECTION AND ADJUSTMENT

1. WARM UP AND STOP ENGINE
2. CONNECT TACHOMETER TO ENGINE
3. START ENGINE

EG

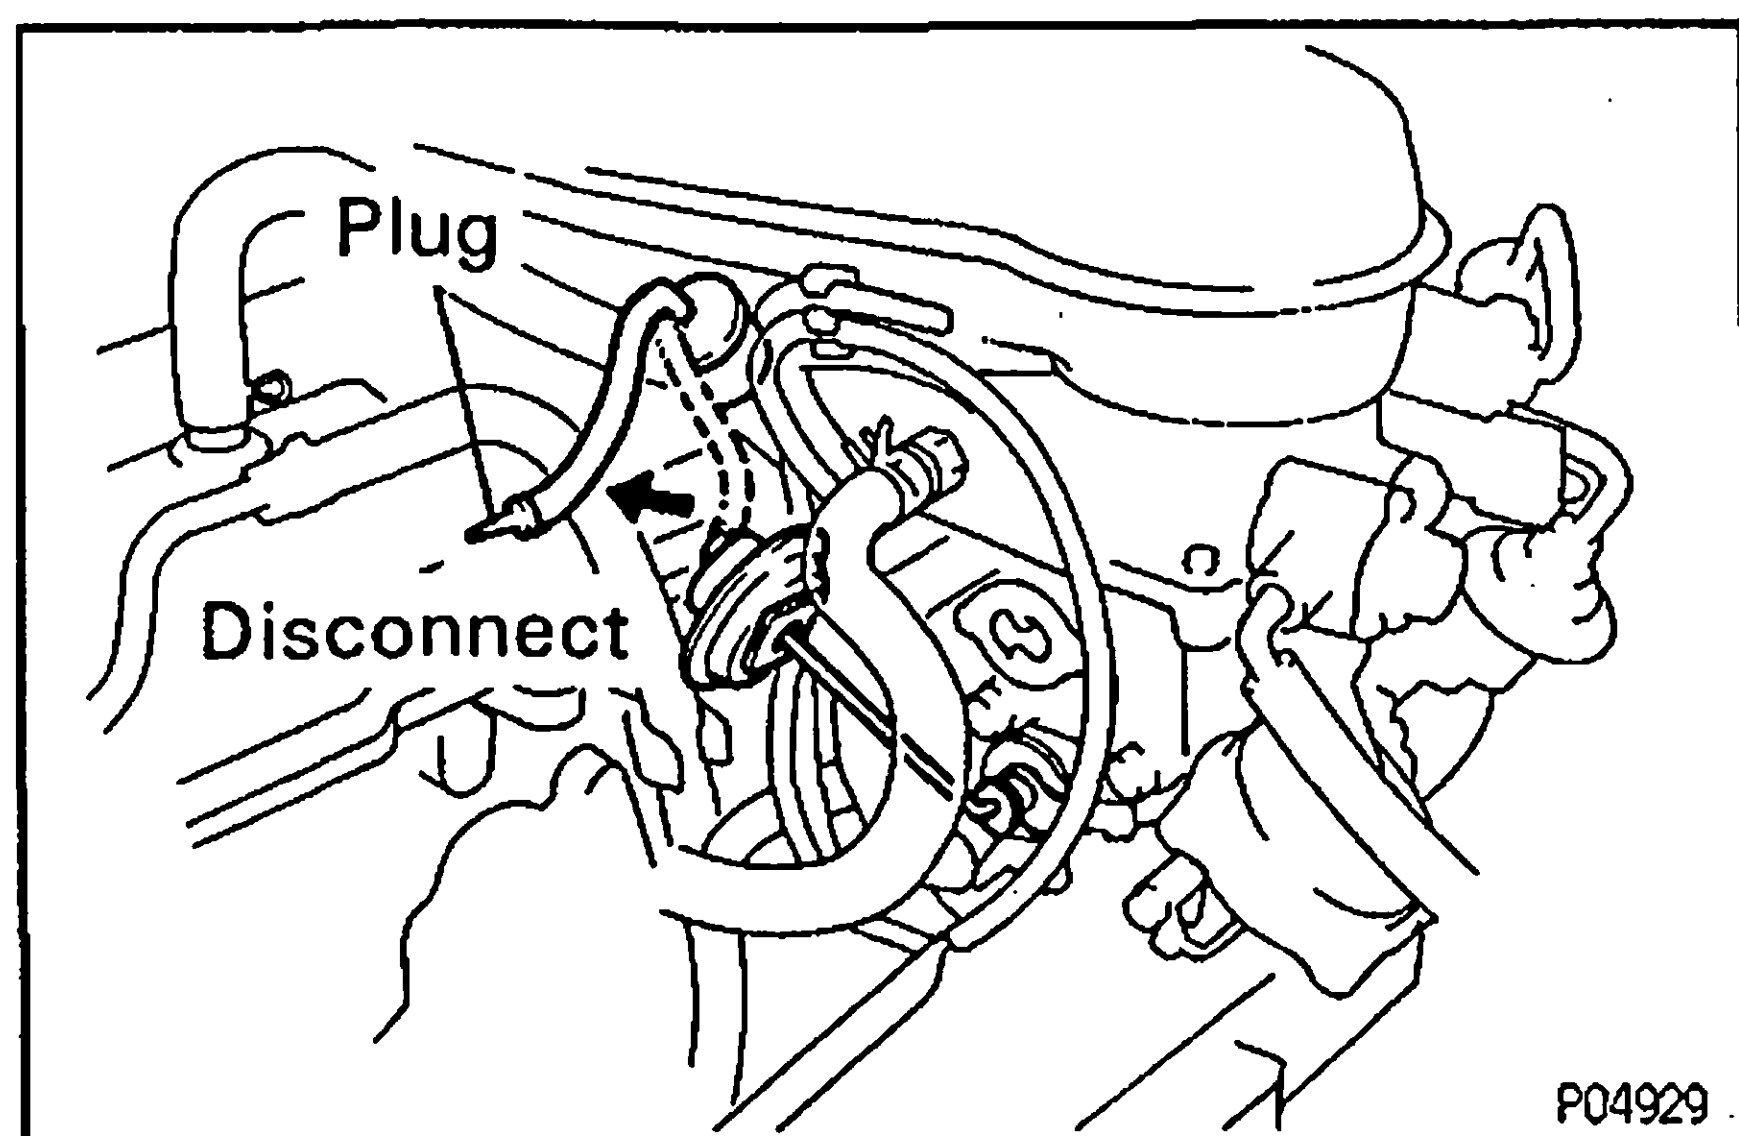

4. INSPECT AND ADJUST DASH POT (DP) SETTING SPEED

- (a) Disconnect the vacuum hose from the DP and plug the hose end.
- (b) Race the engine to 2,500 rpm for a few seconds, release the throttle and check the DP setting speed.

Dash pot setting speed:


1,400 – 1,600 rpm

If the DP setting speed is not as specified, adjust the setting speed by turning the DP adjusting screw.

Dash pot setting speed:

1,500 rpm

- (c) Race the engine to 2,500 rpm for a few seconds, release the throttle and recheck the DP setting speed.

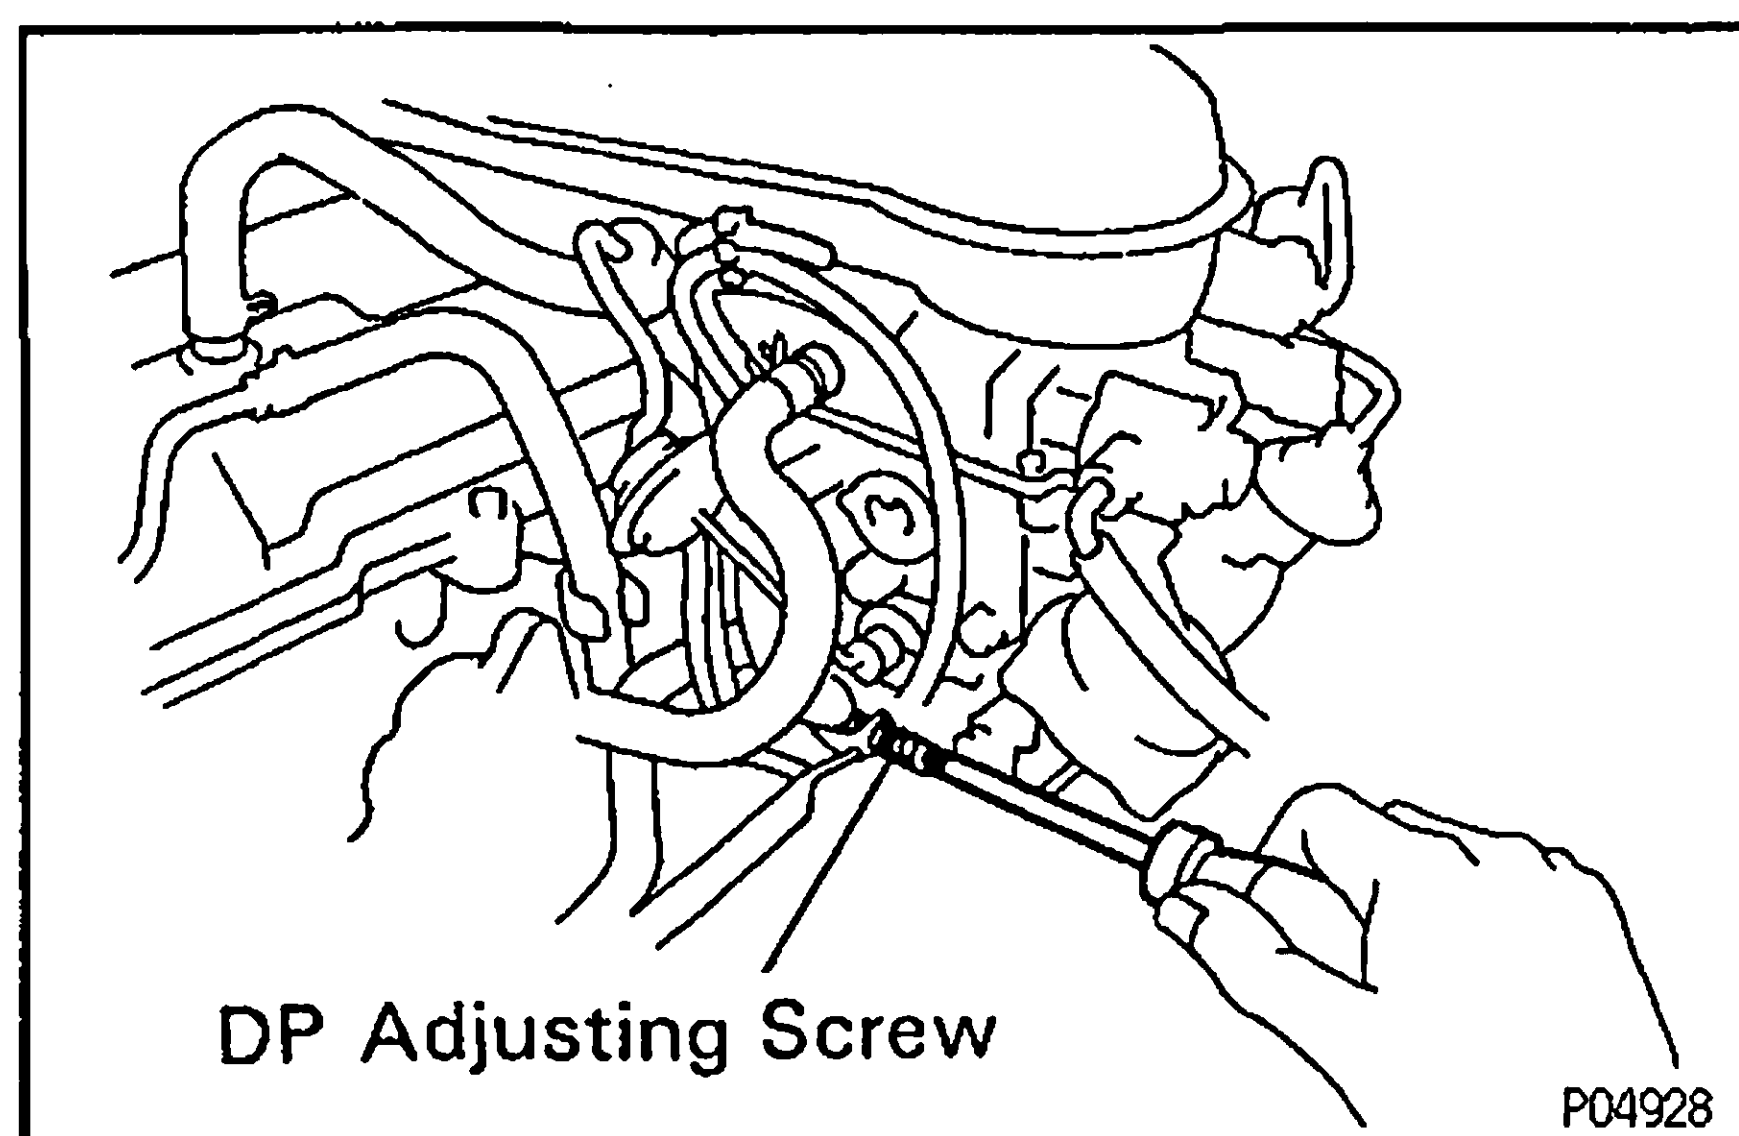


- (d) Reconnect the vacuum hose to the DP.

THROTTLE POSITIONER (TP) SETTING SPEED INSPECTION AND ADJUSTMENT

1. WARM UP AND STOP ENGINE
2. CONNECT TACHOMETER TO ENGINE
3. START ENGINE

EG

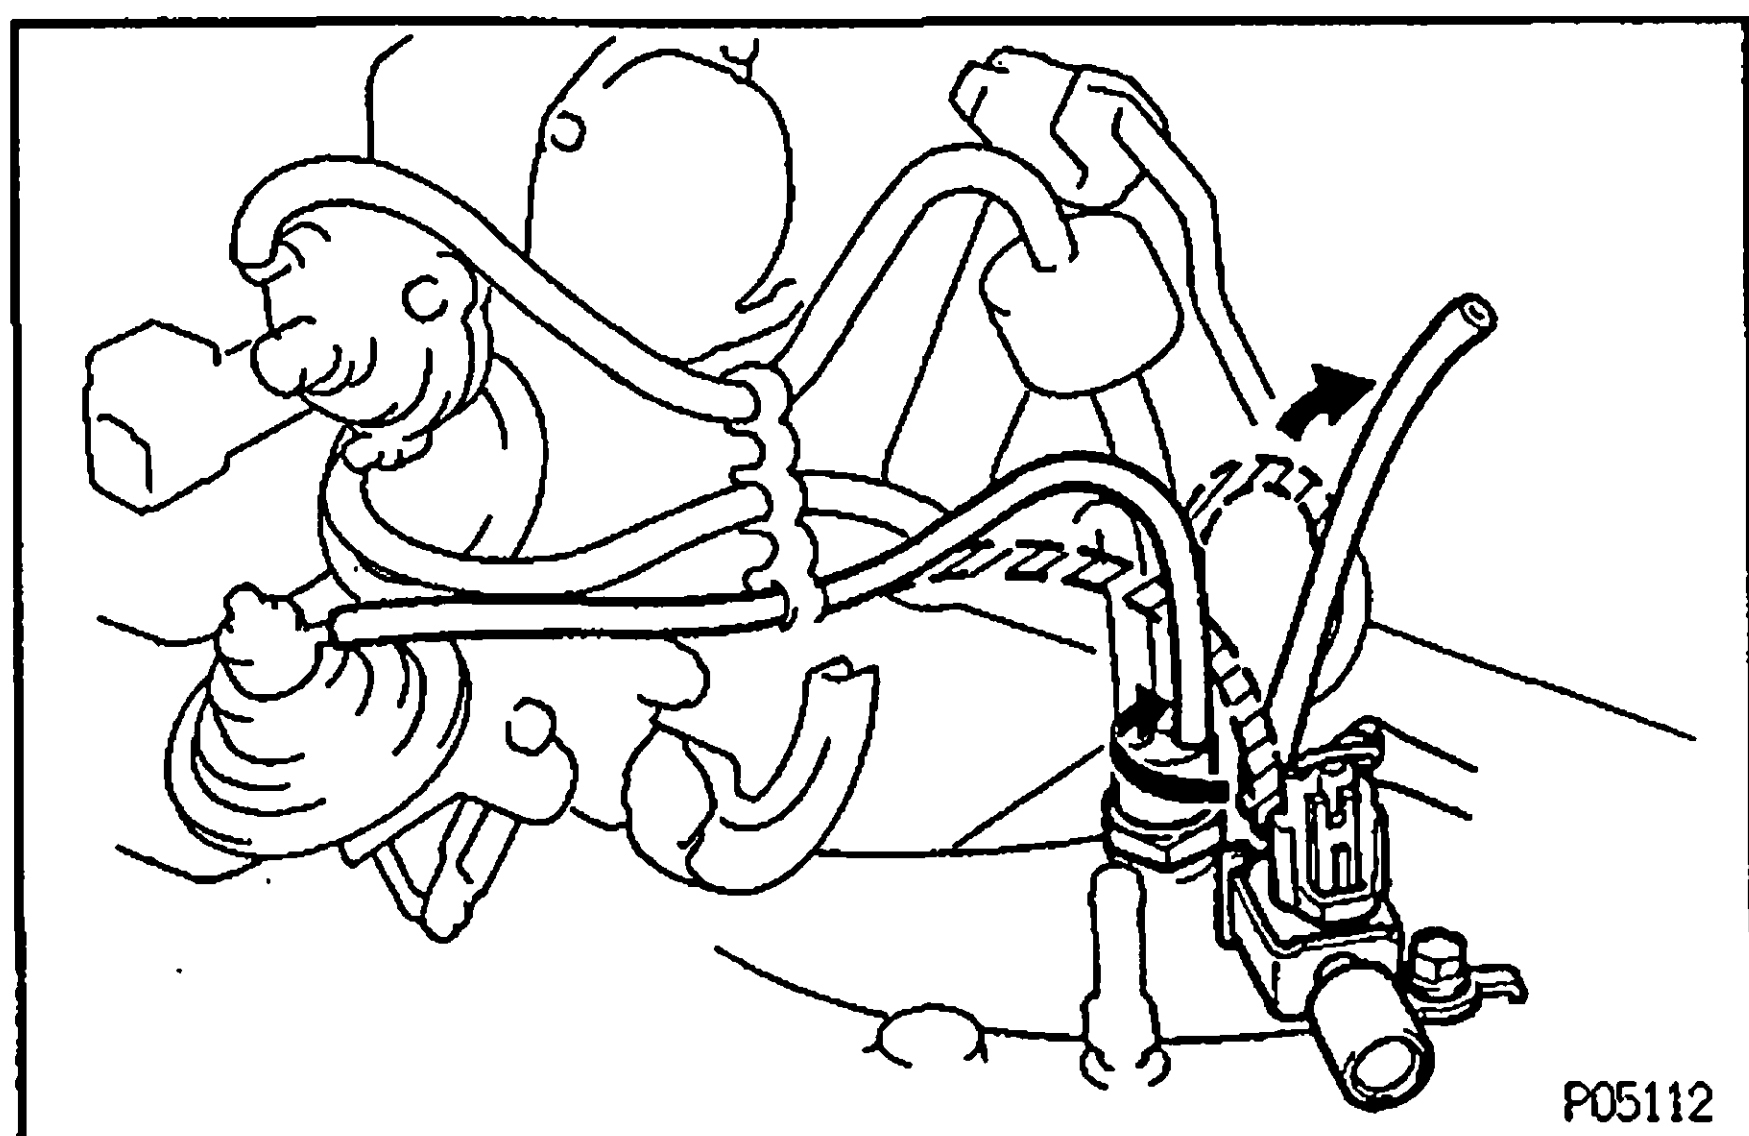

4. INSPECT AND ADJUST THROTTLE POSITIONER (TP) SETTING SPEED

- (a) Disconnect the vacuum hoses from the gas filter and VSV.
- (b) Connect the vacuum hose which you have disconnected from the VSV onto the gas filter.
- (c) Check the TP setting speed.

TP setting speed:


1,150 – 1,250 rpm

If the TP setting speed is not as specified, adjust the setting speed by turning the TP adjusting screw.

TP setting speed:

1,200 rpm

- (d) Lightly race the engine and release the throttle, and recheck the TP setting speed.

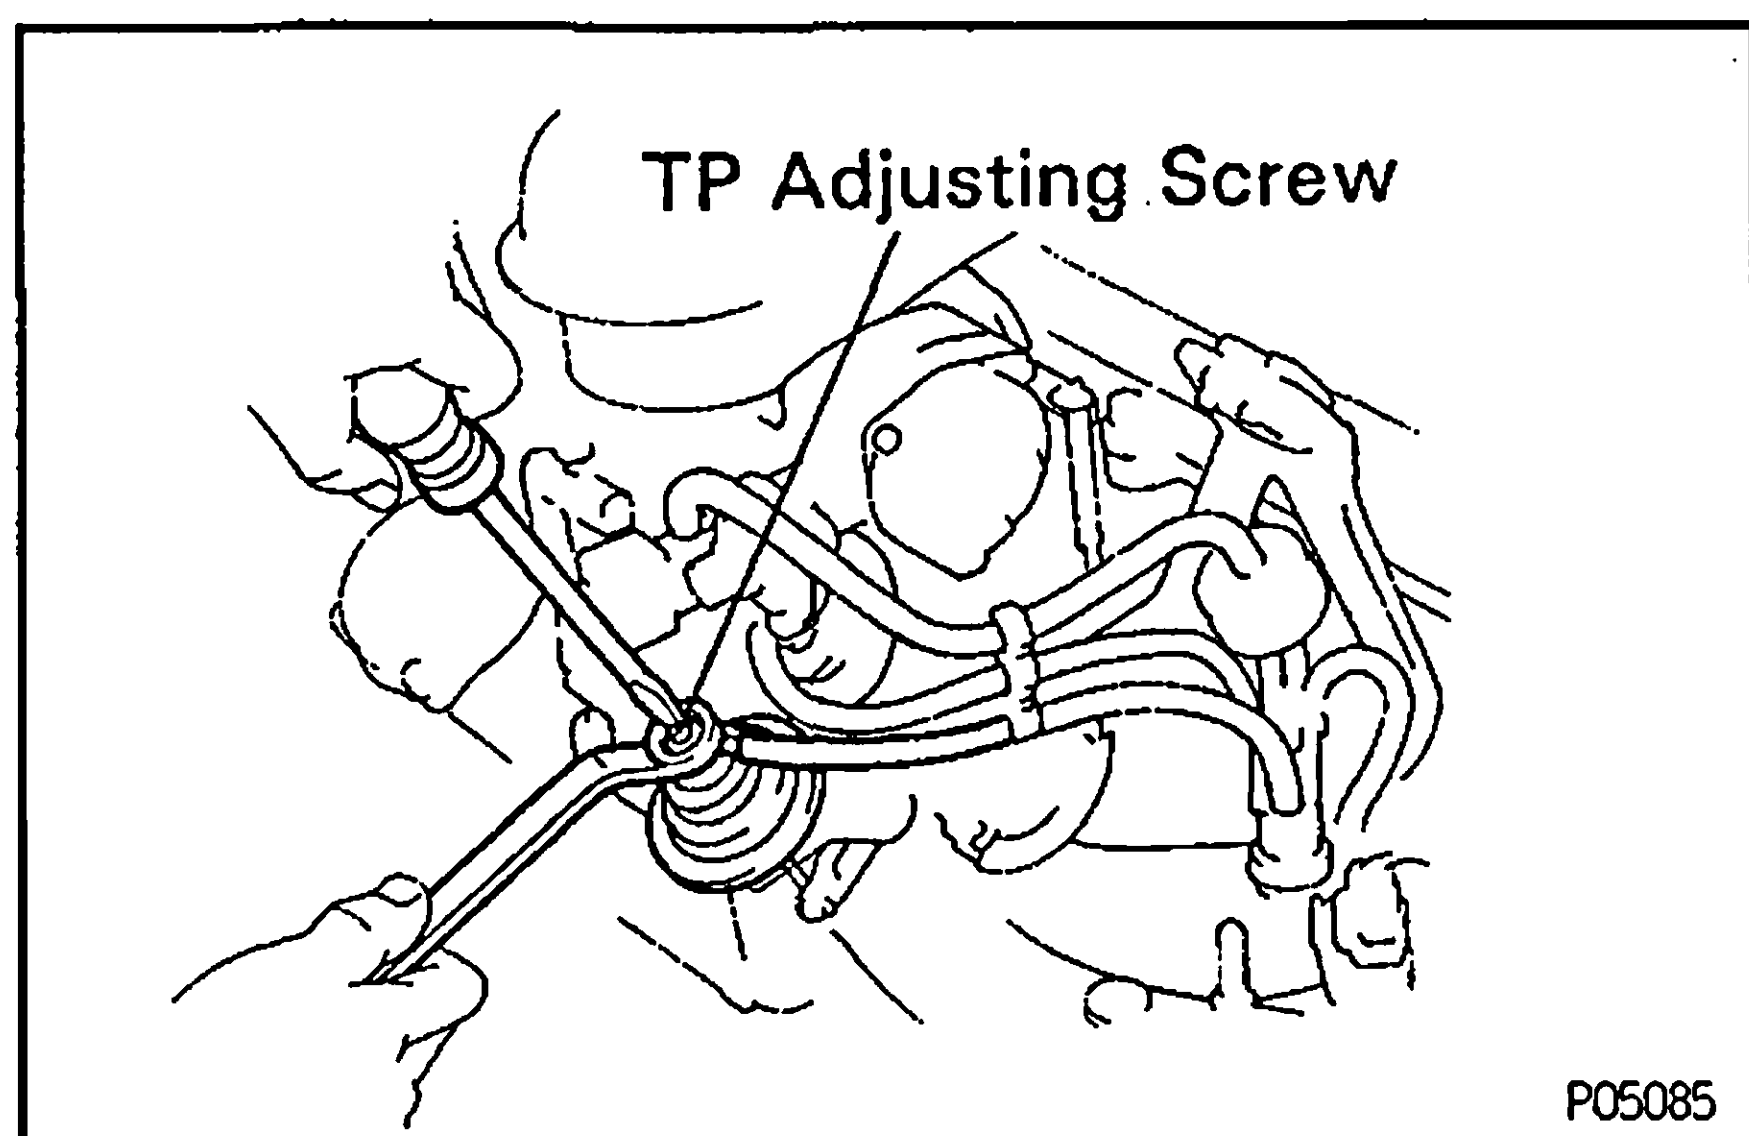

- (e) Reconnect the vacuum hoses to the proper locations.

COMPRESSION CHECK

HINT: If there is lack of power, excessive oil consumption or poor fuel economy, measure the compression pressure. ^{EG08E-02}


1. WARM UP AND STOP ENGINE

Allow the engine to warm up to normal operating temperature.

2. DISCONNECT DISTRIBUTOR CONNECTOR

3. REMOVE NO. 2 AND NO. 3 CYLINDER HEAD COVERS

Remove the four bolts and head covers.

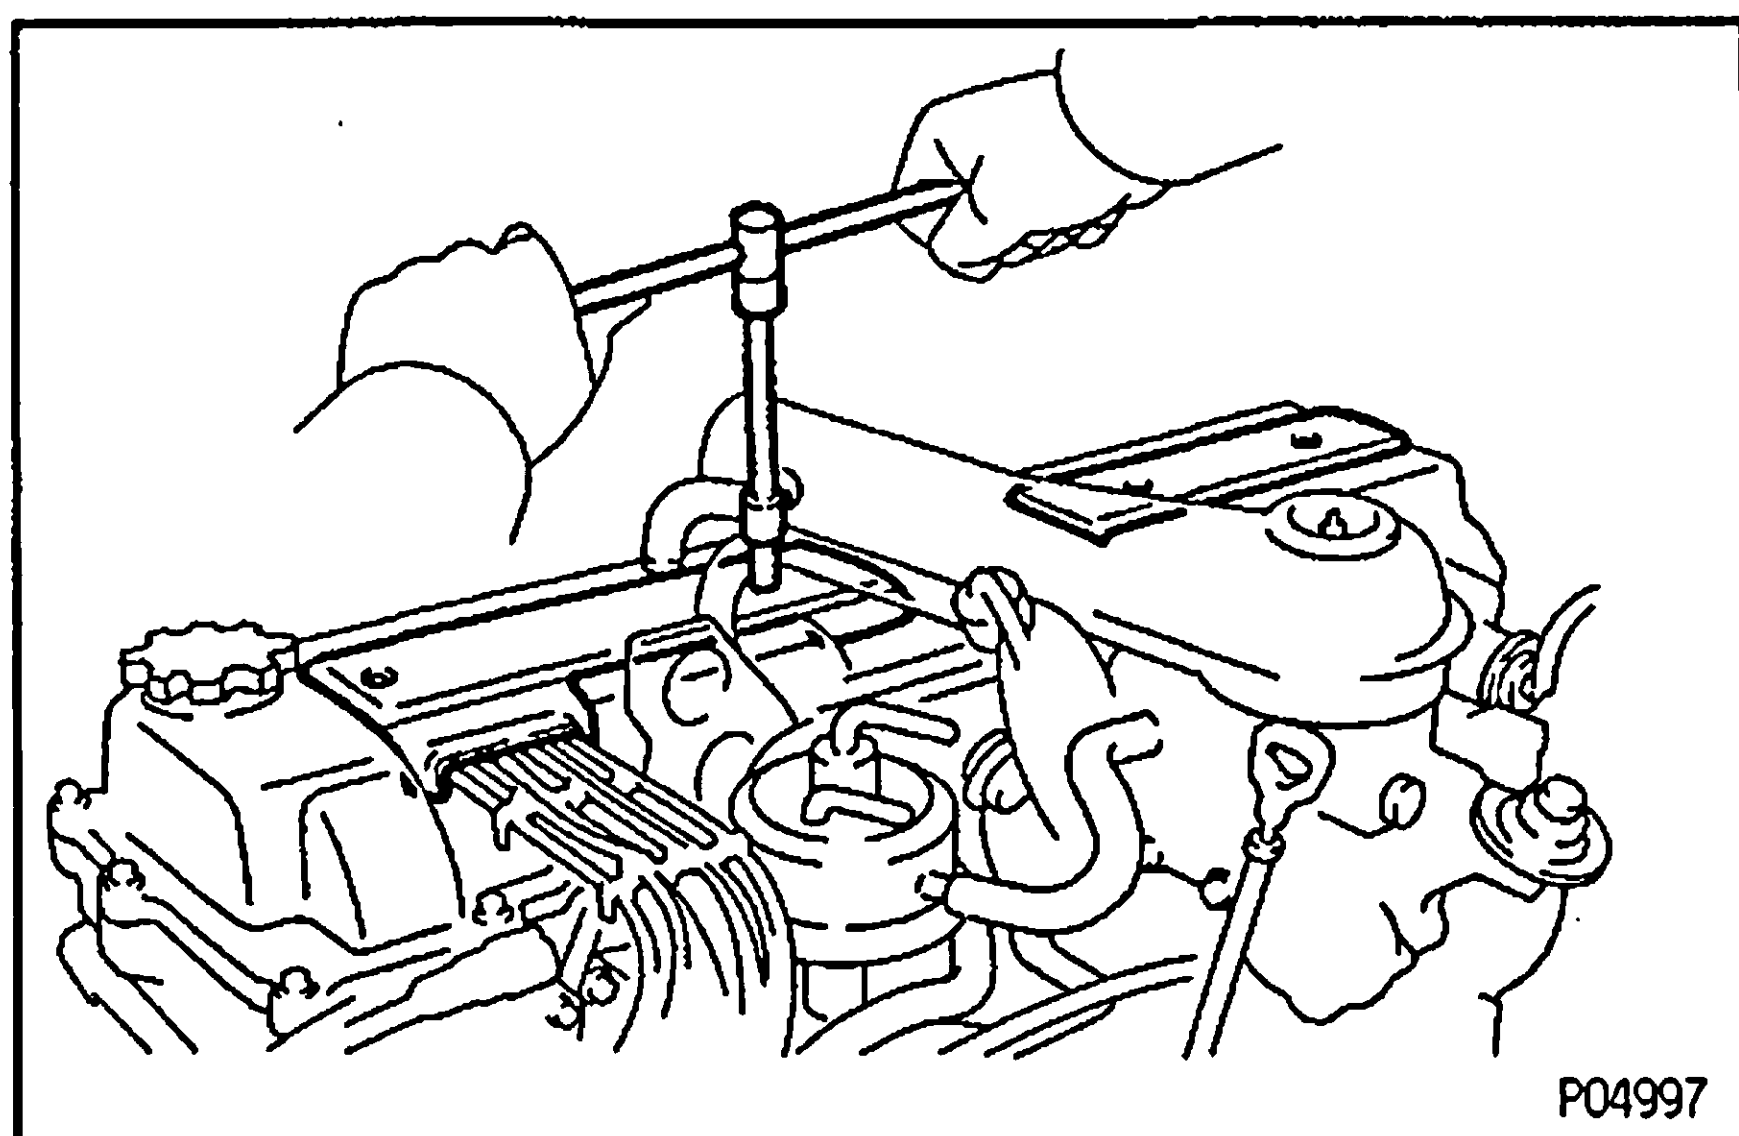


4. DISCONNECT HIGH — TENSION CORDS FROM SPARK PLUGS

Disconnect the high — tension cords at the rubber boot.

DO NOT pull on the cords.


NOTICE: Pulling on or bending the cords may damage the conductor inside.

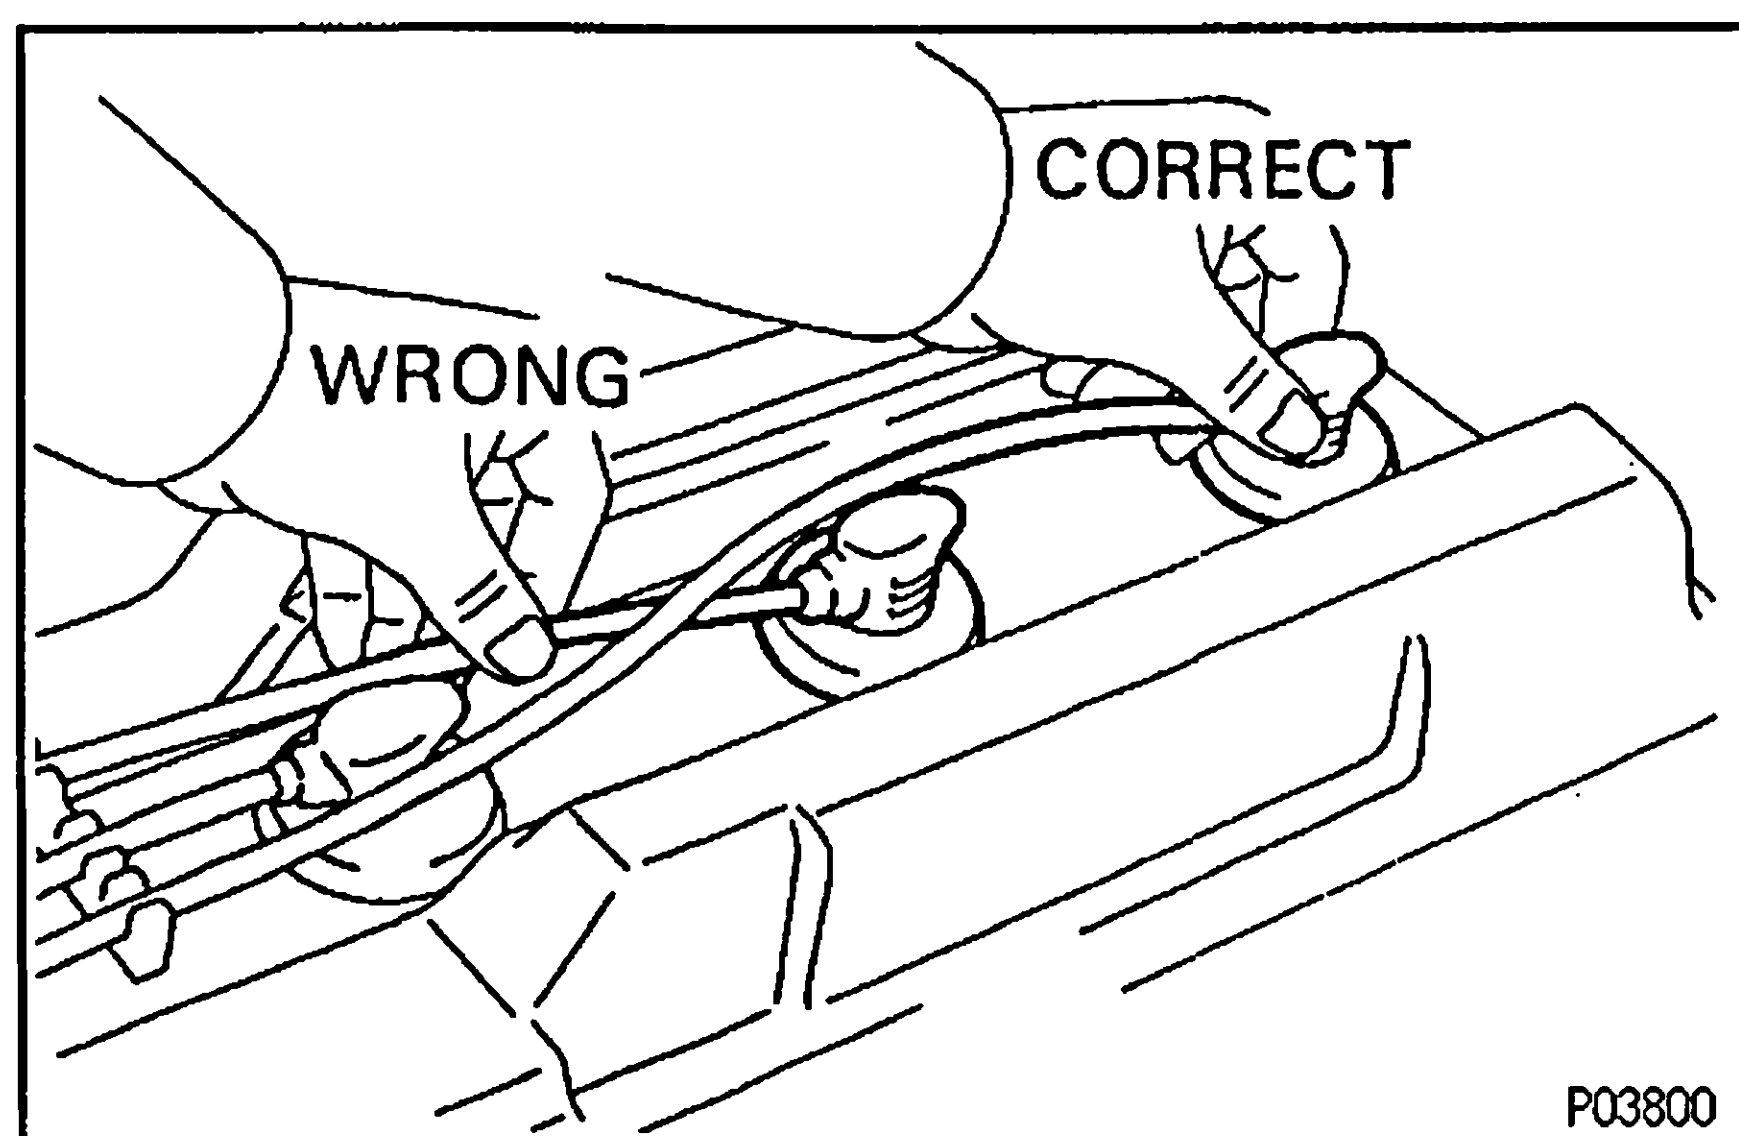


5. REMOVE SPARK PLUGS

Using SST, remove the spark plug.

SST 09155-16100

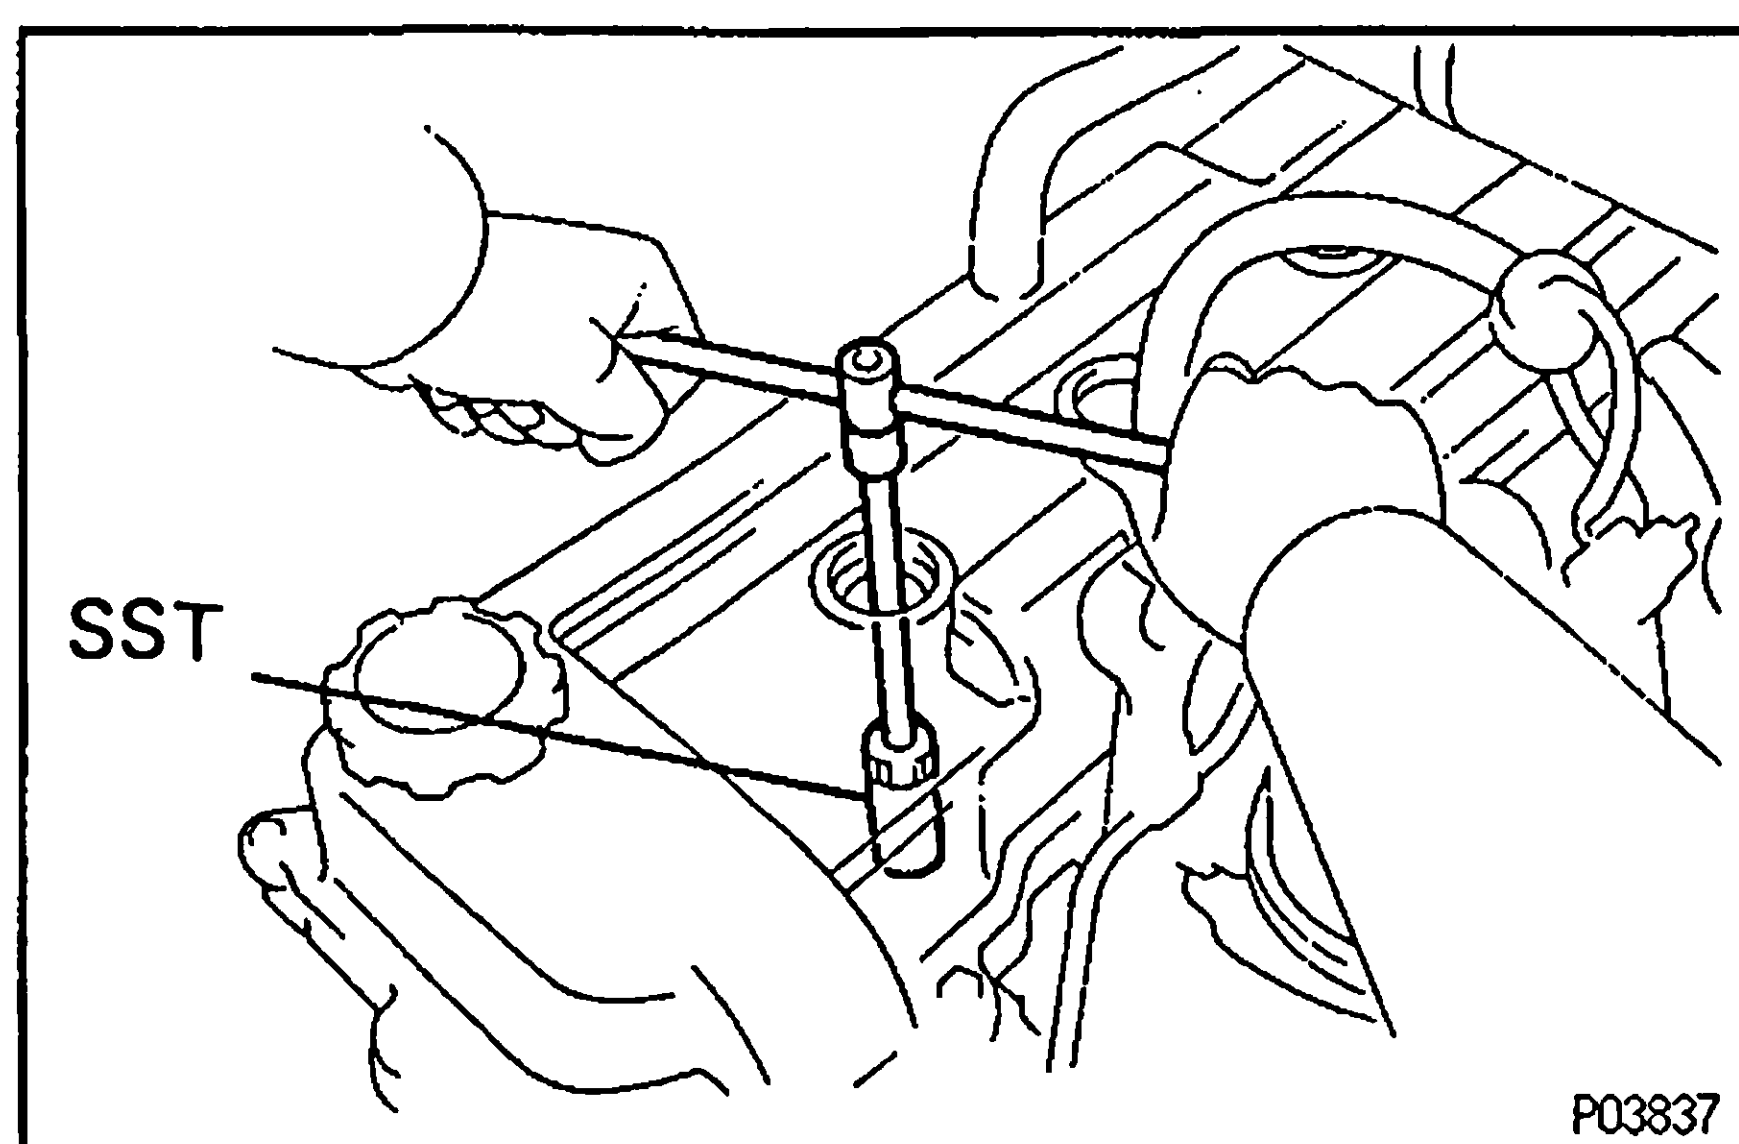

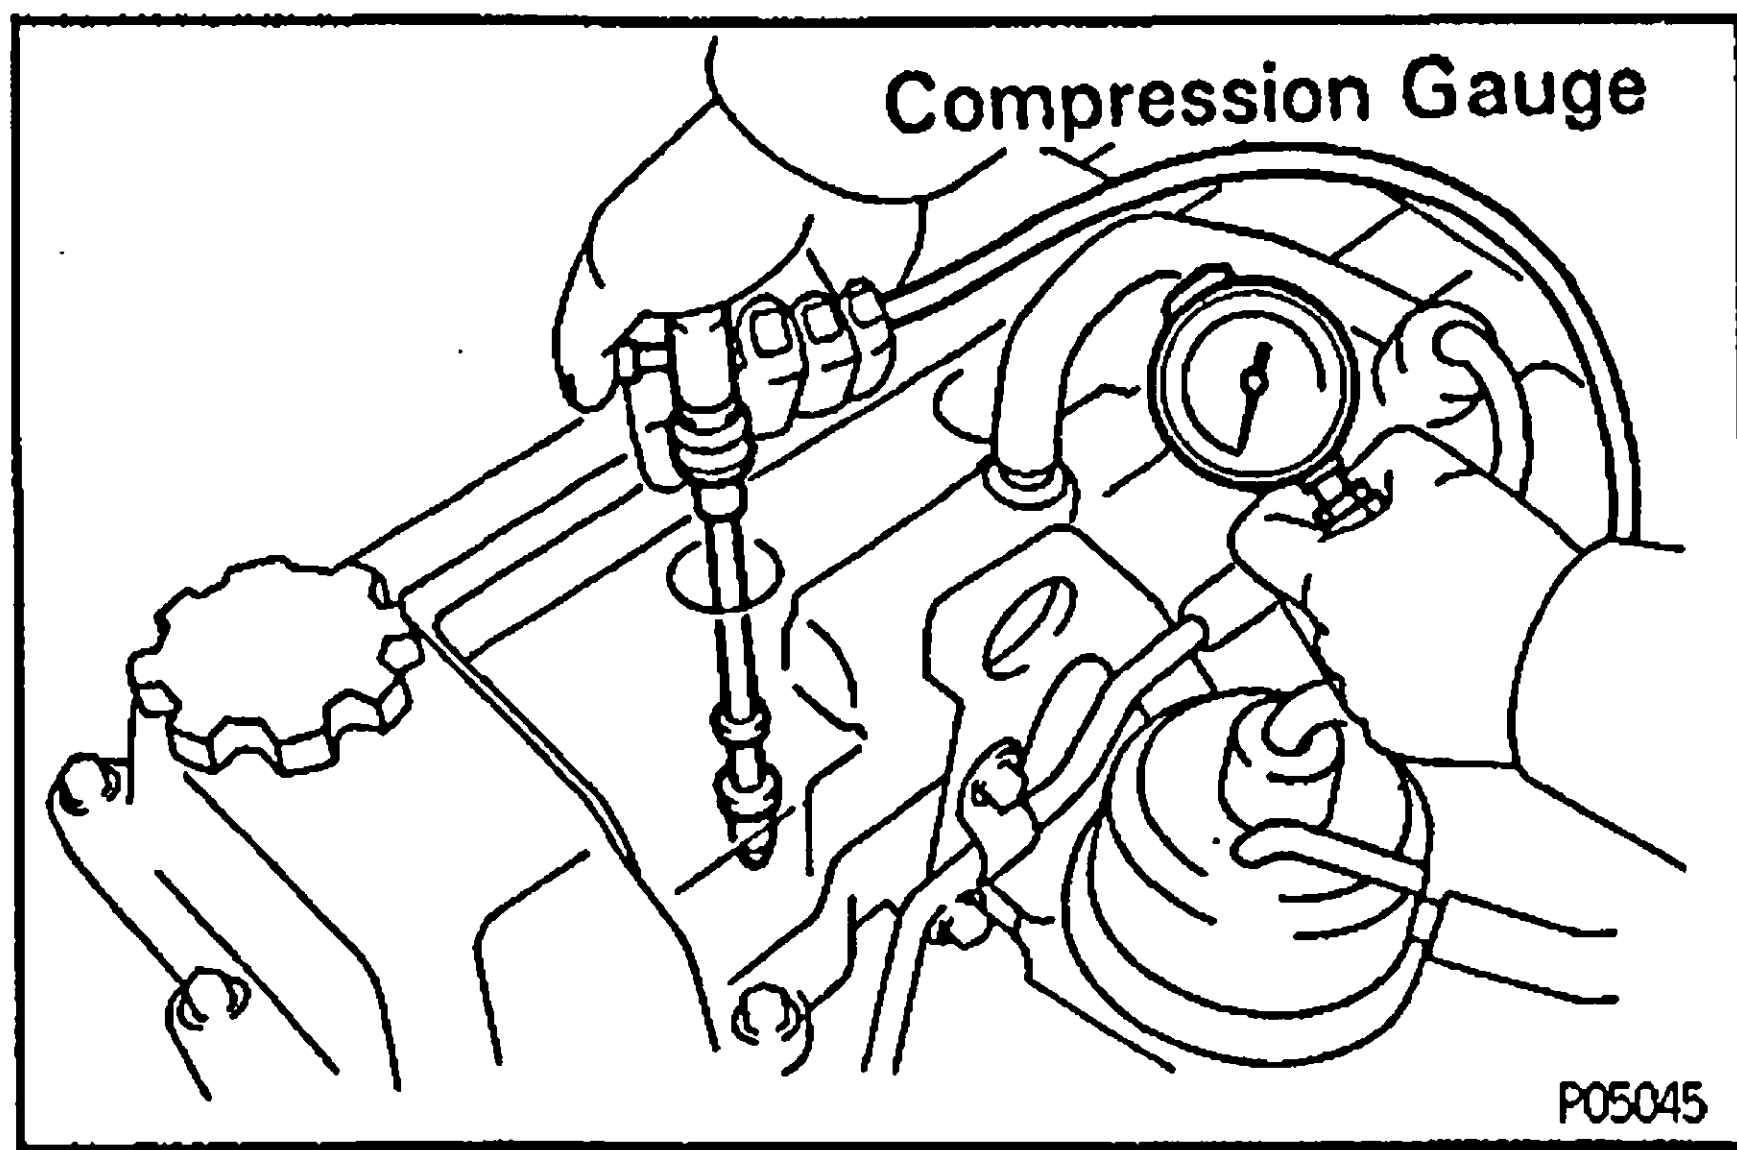

6. CHECK CYLINDER COMPRESSION PRESSURE

- (a) Insert a compression gauge into the spark plug hole.
- (b) Fully open the throttle.
- (c) While cranking the engine, measure the compression pressure.

HINT: Always use a fully charged battery to obtain engine speed of 250 rpm or more.

- (d) Repeat steps (a) through (c) for each cylinder.

NOTICE: This measurement must be done in as short a time as possible.

Compression pressure:

Low-octane models

900 kPa (9.2 kgf/cm², 131 psi) or more

Others

1,030 kPa (10.5 kgf/cm², 149 psi) or more

Minimum pressure:


785 kPa (8.0 kgf/cm², 114 psi)

Difference between each cylinder:

50 kPa (0.5 kgf/cm², 7 psi) or less

- (e) If the cylinder compression in one or more cylinders is low, pour a small amount of engine oil into the cylinder through the spark plug hole and repeat steps (a) through (c) for cylinders with low compression.

- If adding oil helps the compression, chances are that the piston rings and/or cylinder bore are worn or damaged.
- If pressure stays low, a valve may be sticking or seating is improper, or there may be leakage past the gasket.

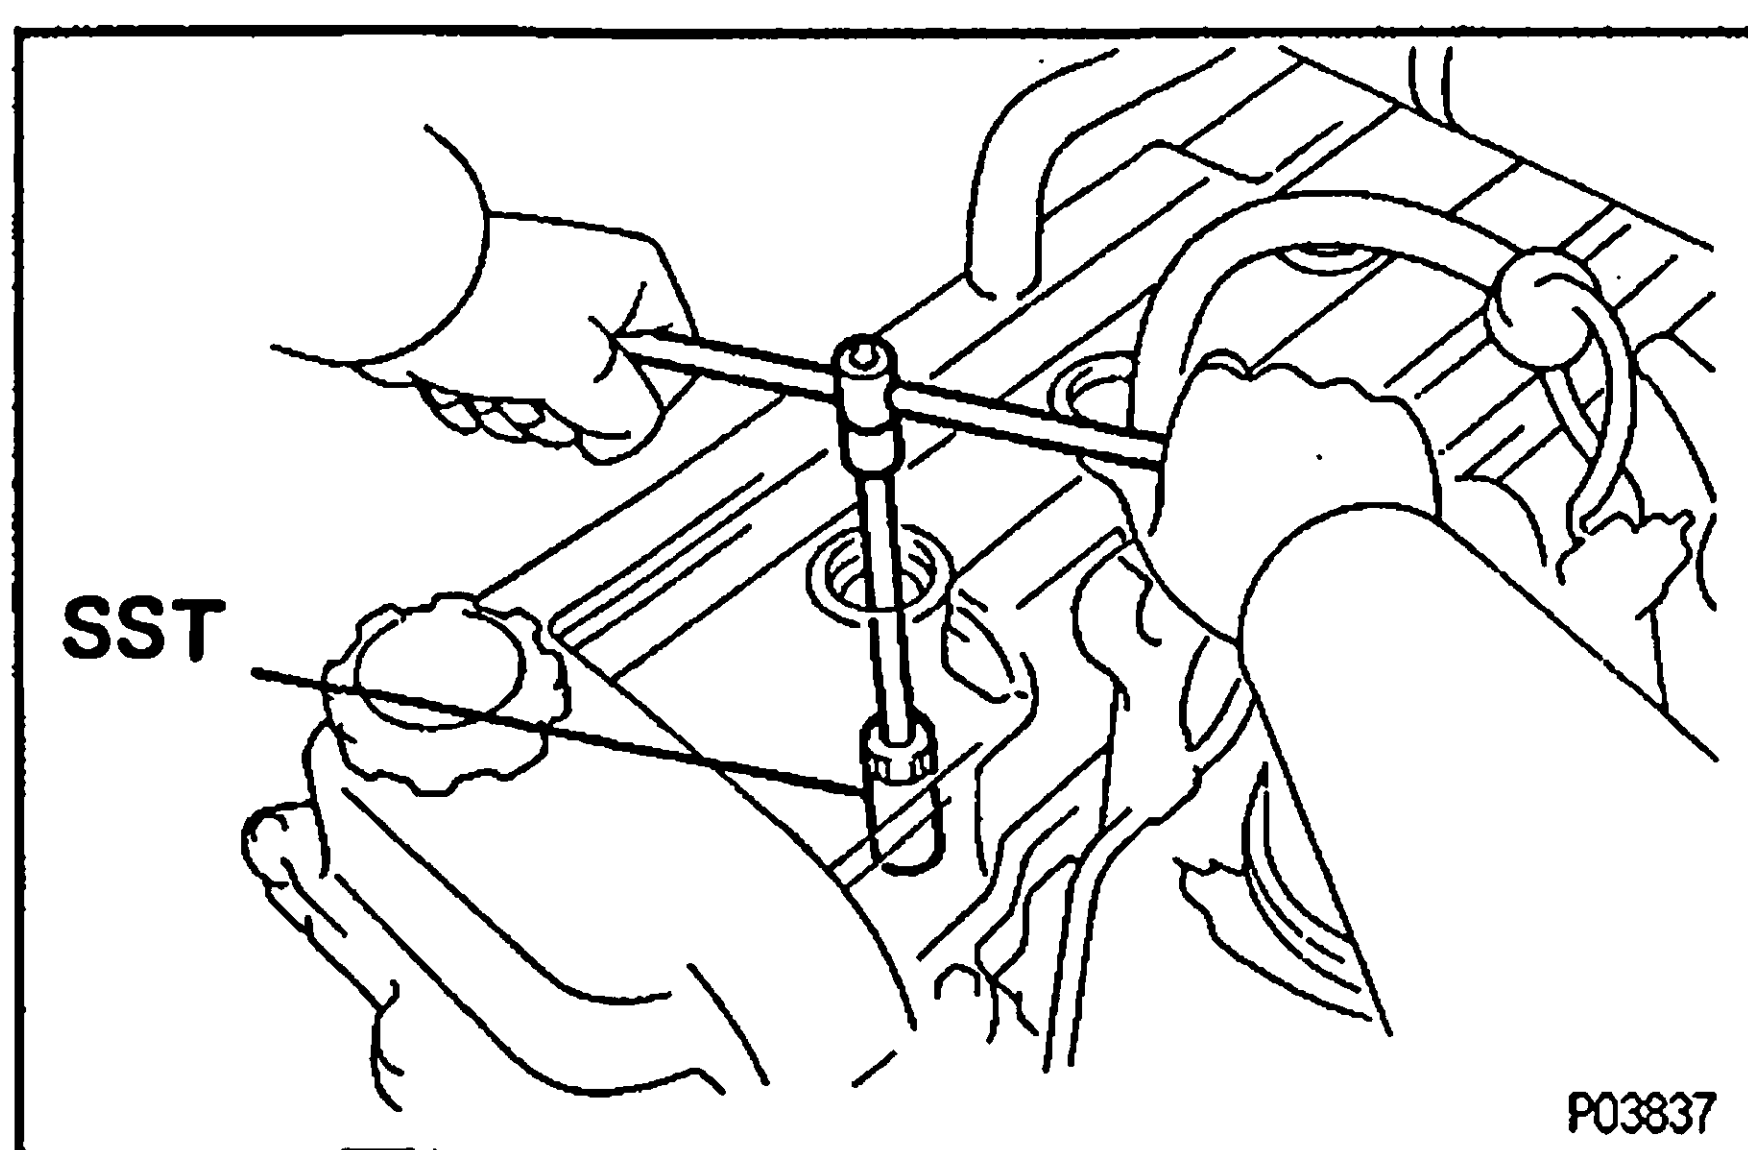


7. REINSTALL SPARK PLUGS

Using SST, install the spark plug.

SST 09155-16100

Torque: 20 N·m (200 kgf·cm, 14 ft·lbf)

8. RECONNECT HIGH-TENSION CORDS TO SPARK PLUGS

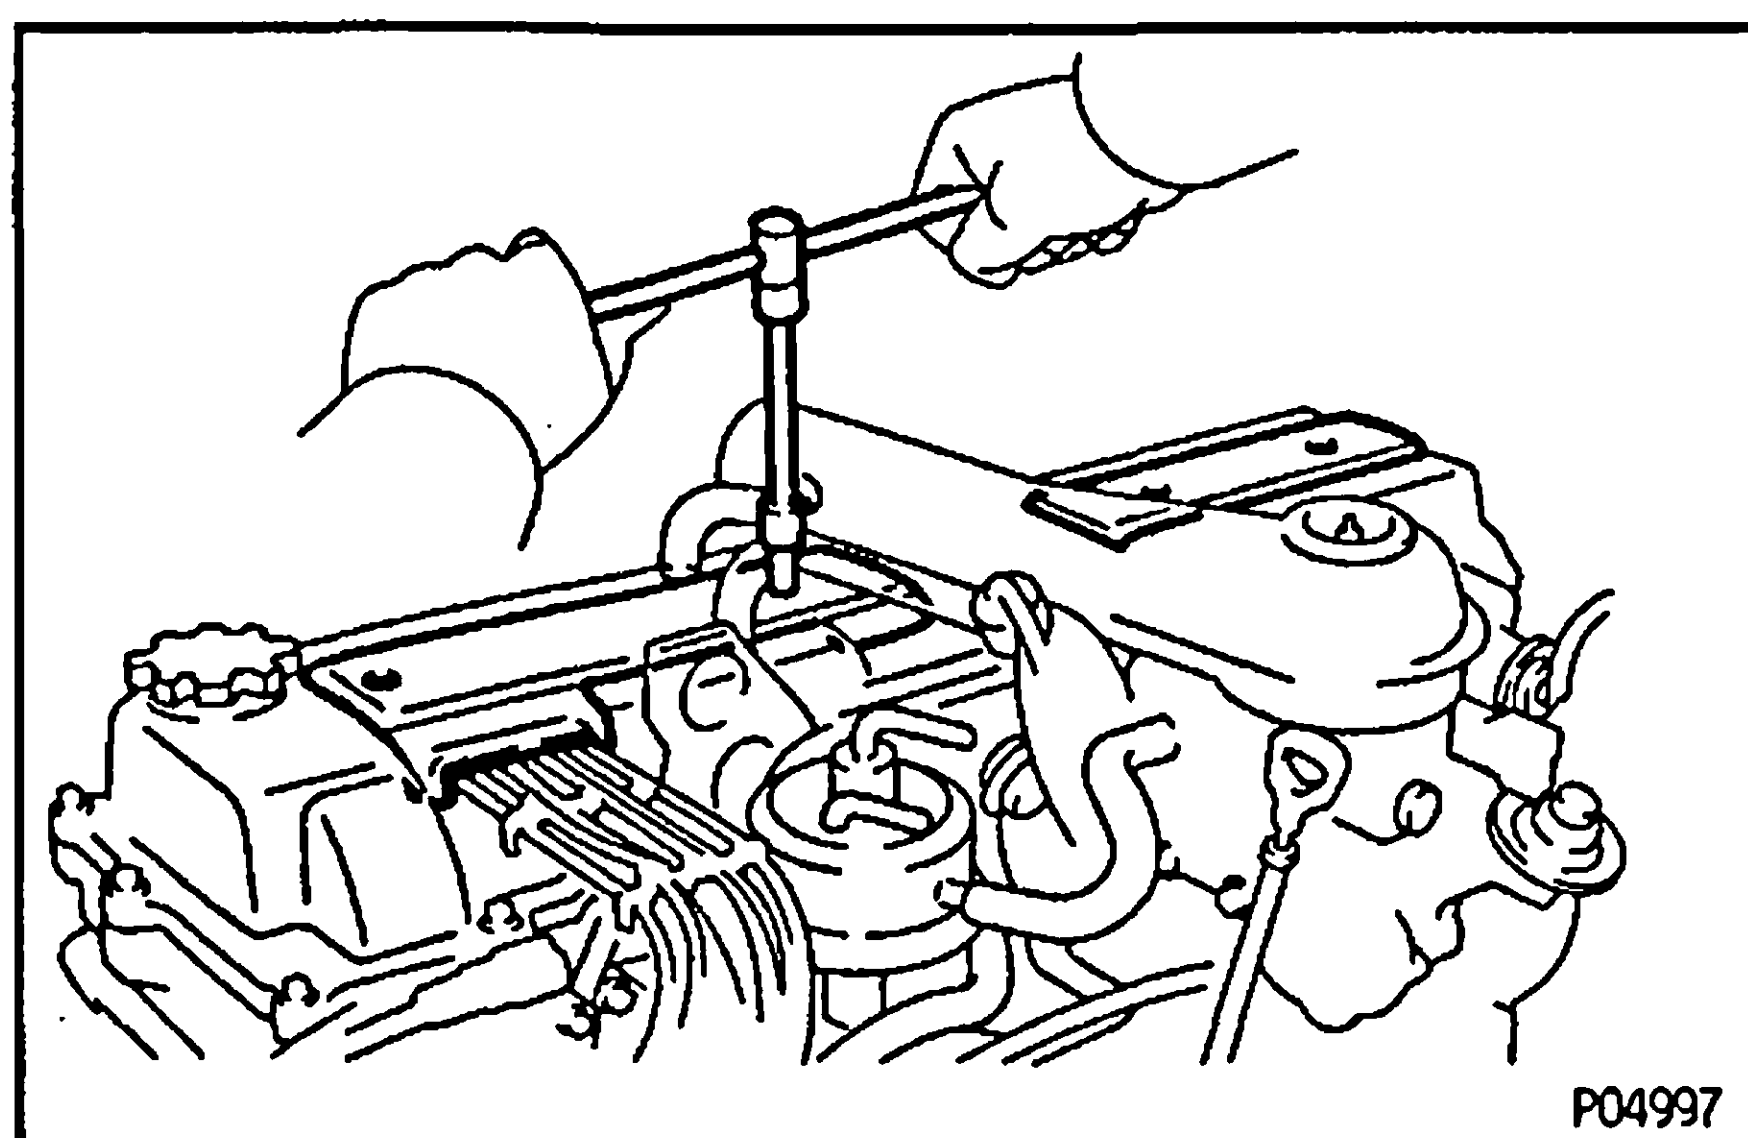

9. REINSTALL NO. 2 AND NO. 3 CYLINDER HEAD COVERS


Install the covers with the four bolts.

10. RECONNECT DISTRIBUTOR CONNECTOR


CYLINDER HEAD COMPONENTS

EG08K-02

EG

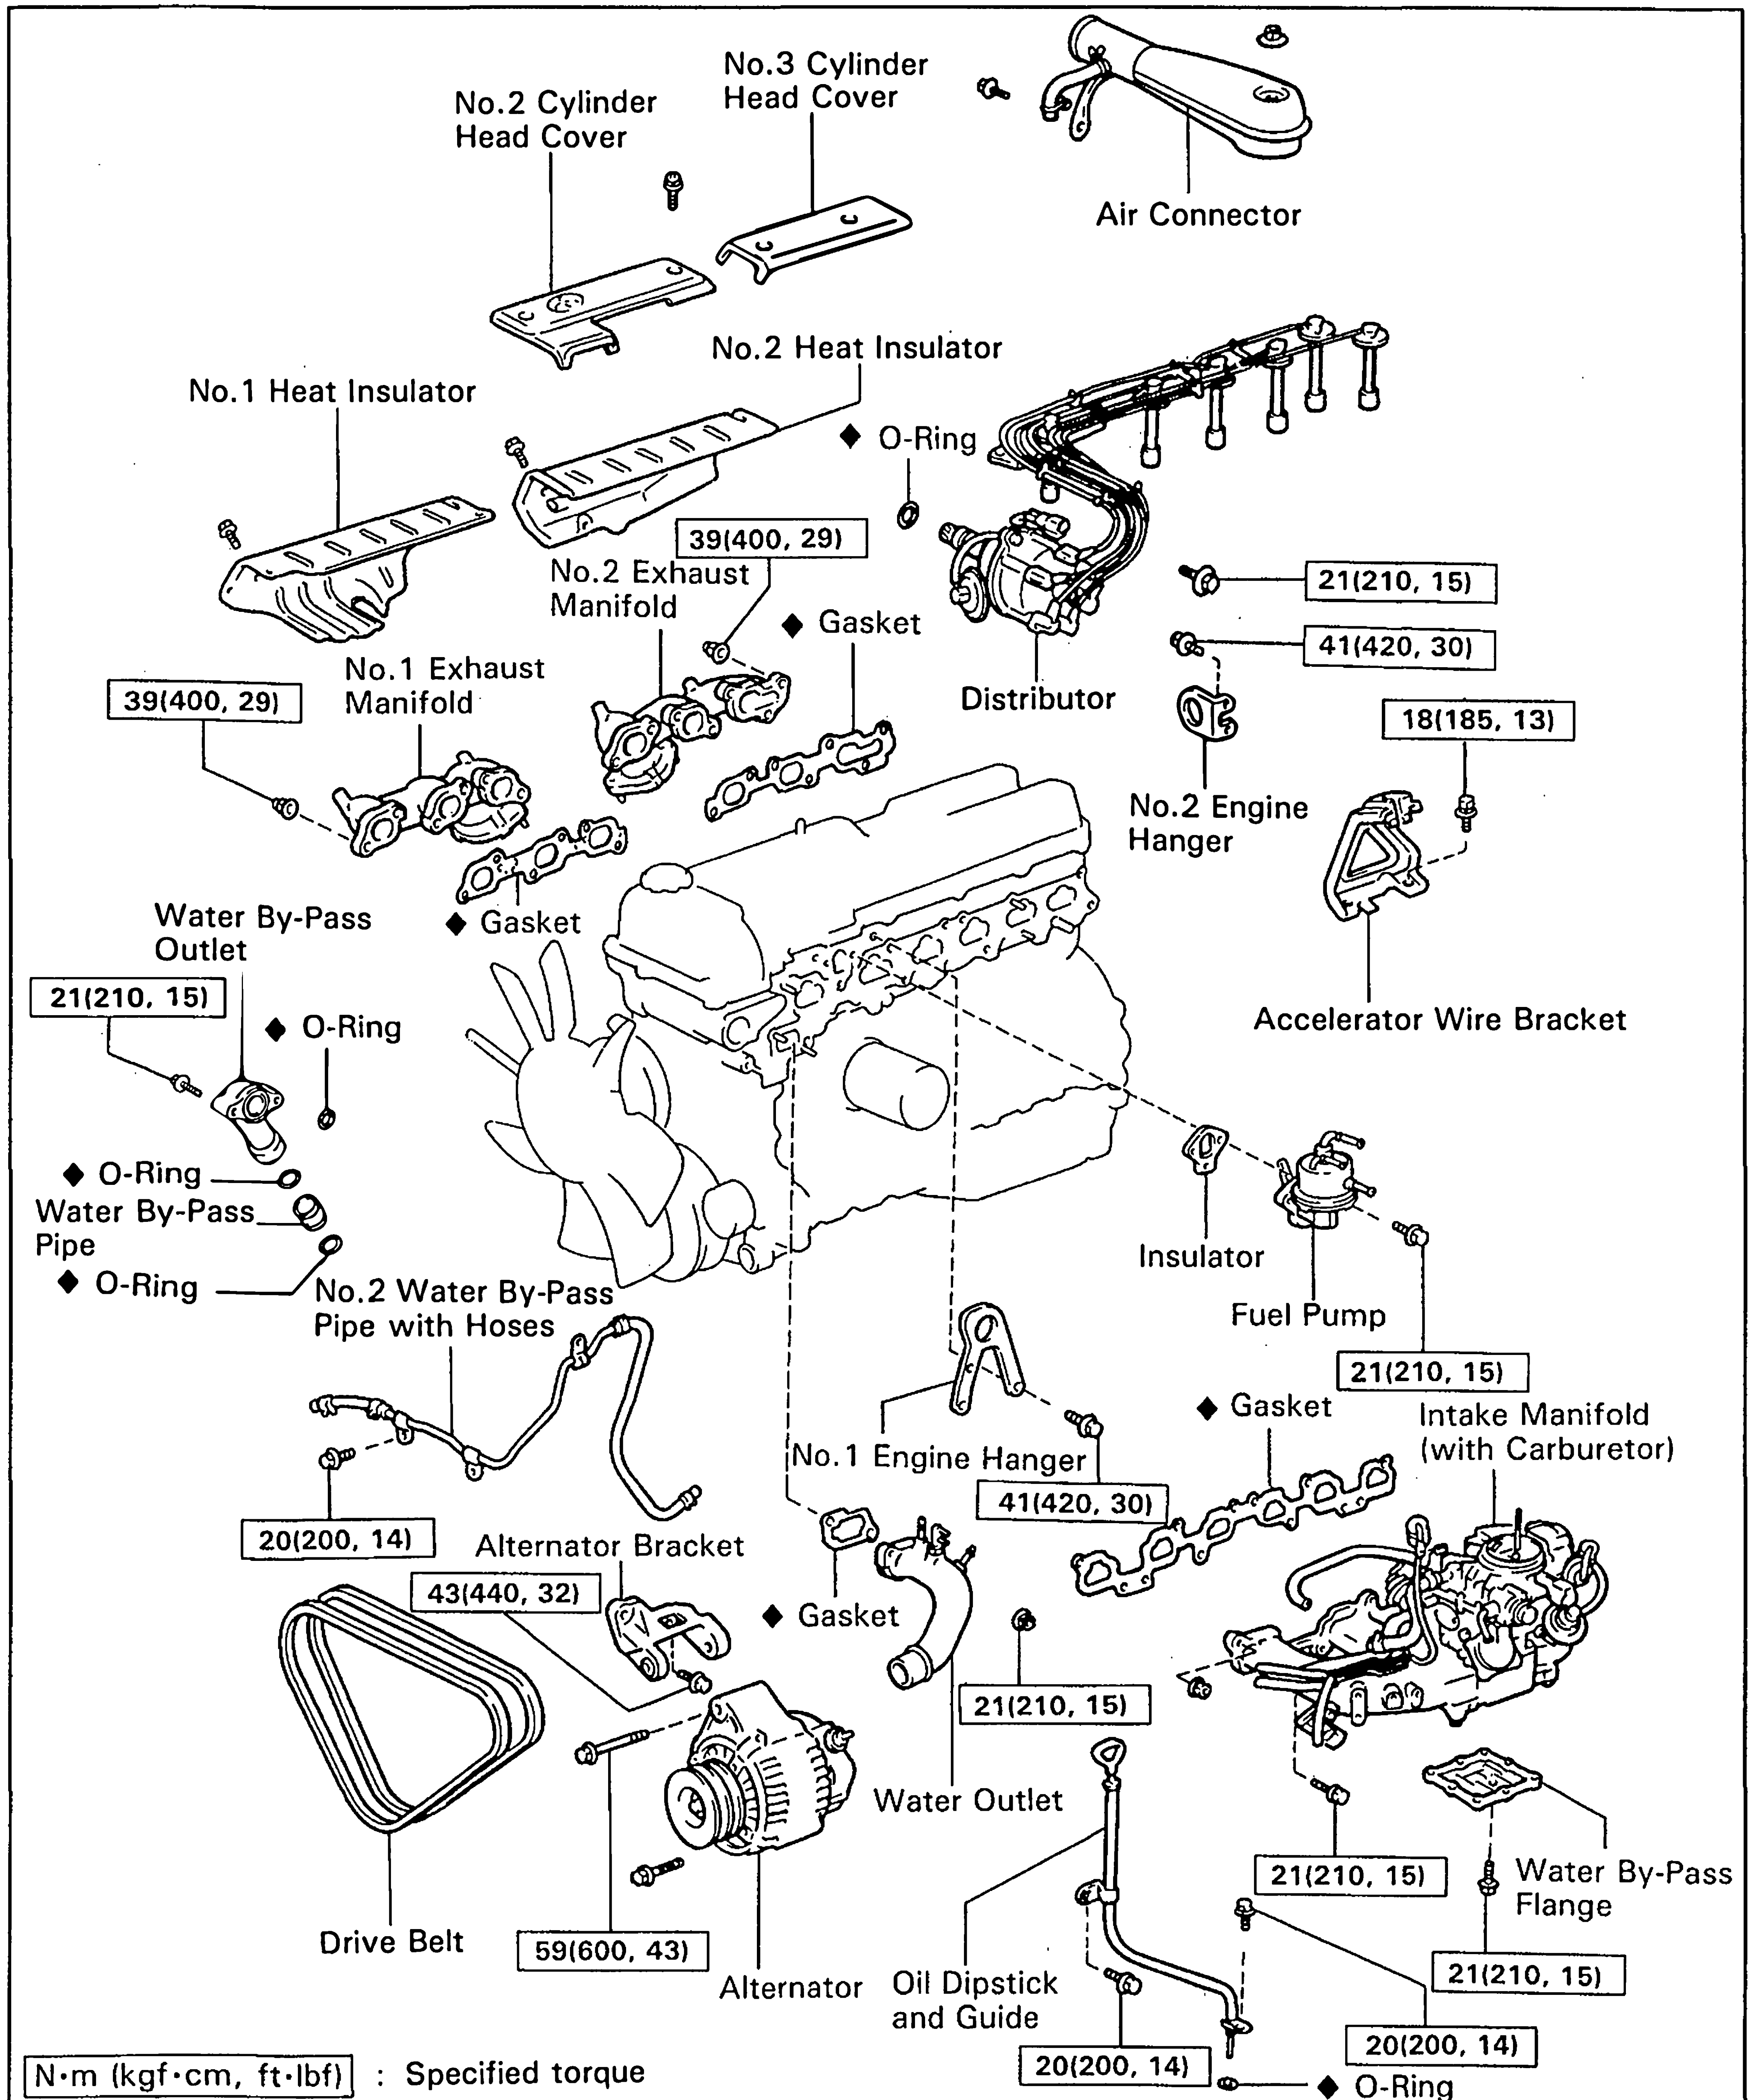

EG

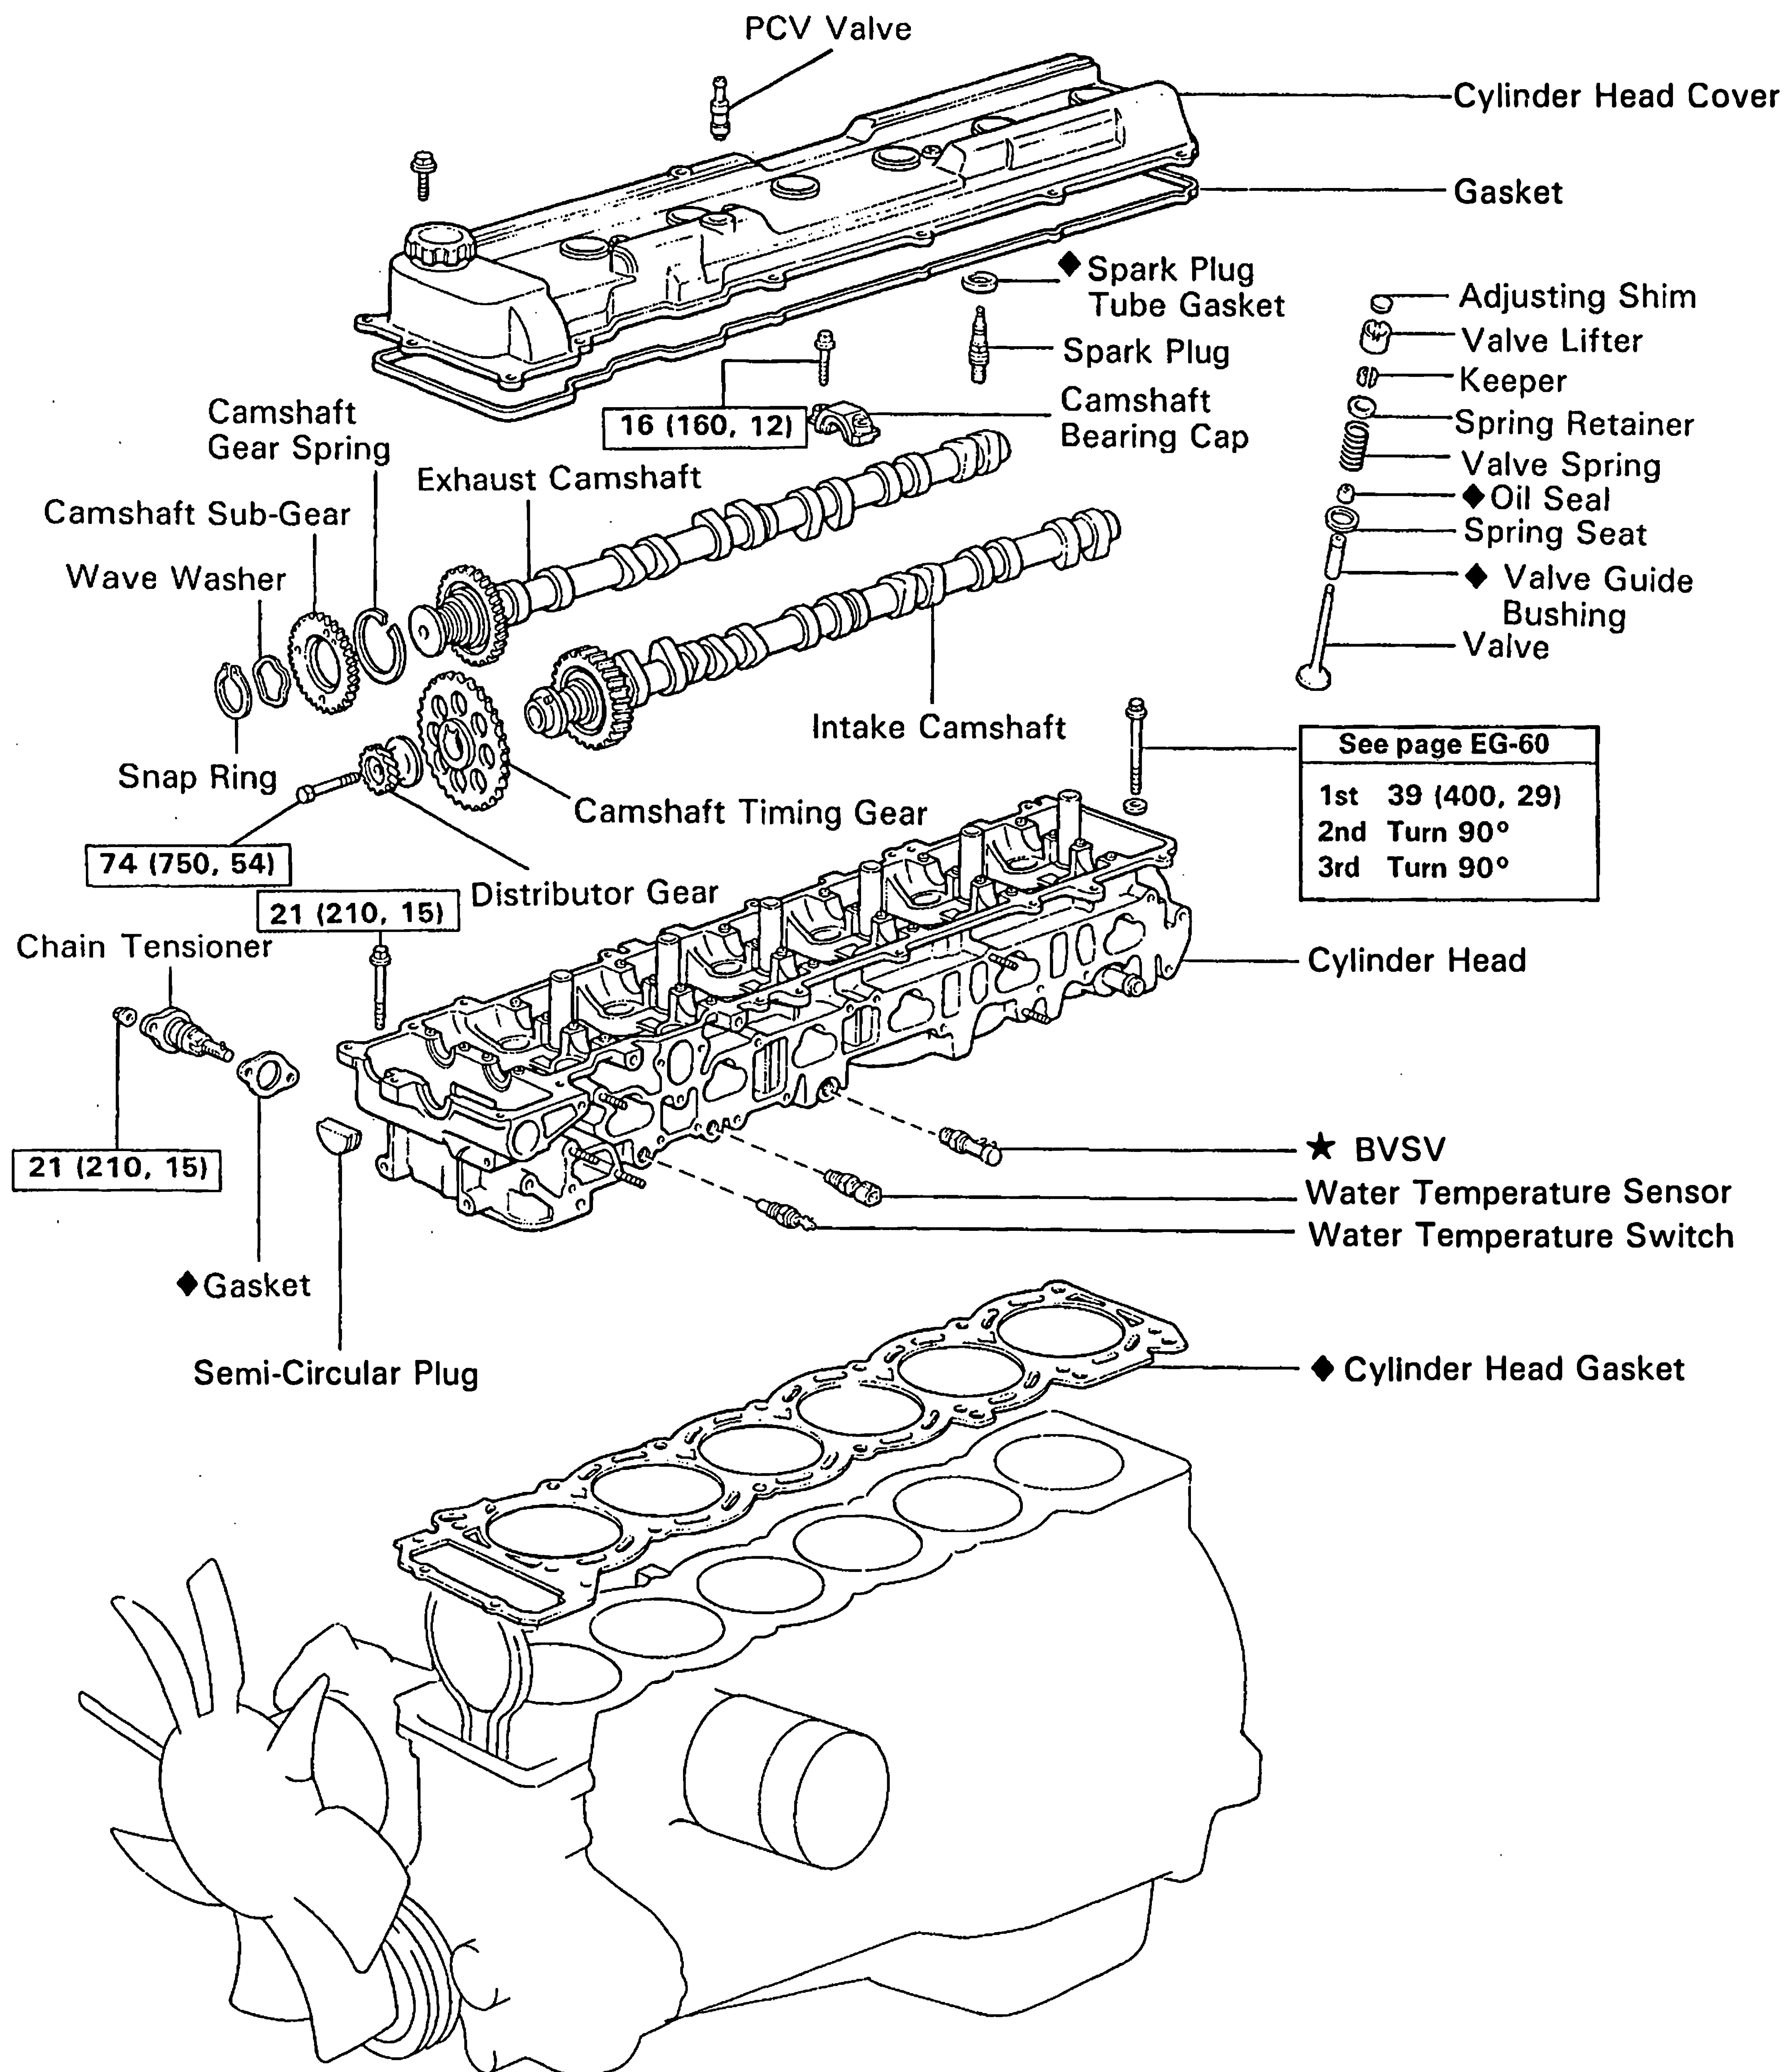

N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part


★ Precoated part

CYLINDER HEAD REMOVAL

(See pages EG—31, 32)


1. REMOVE INTAKE AIR CONNECTOR

- (a) Disconnect the PCV hose.
- (b) Remove the two bolts, nut and air connector.

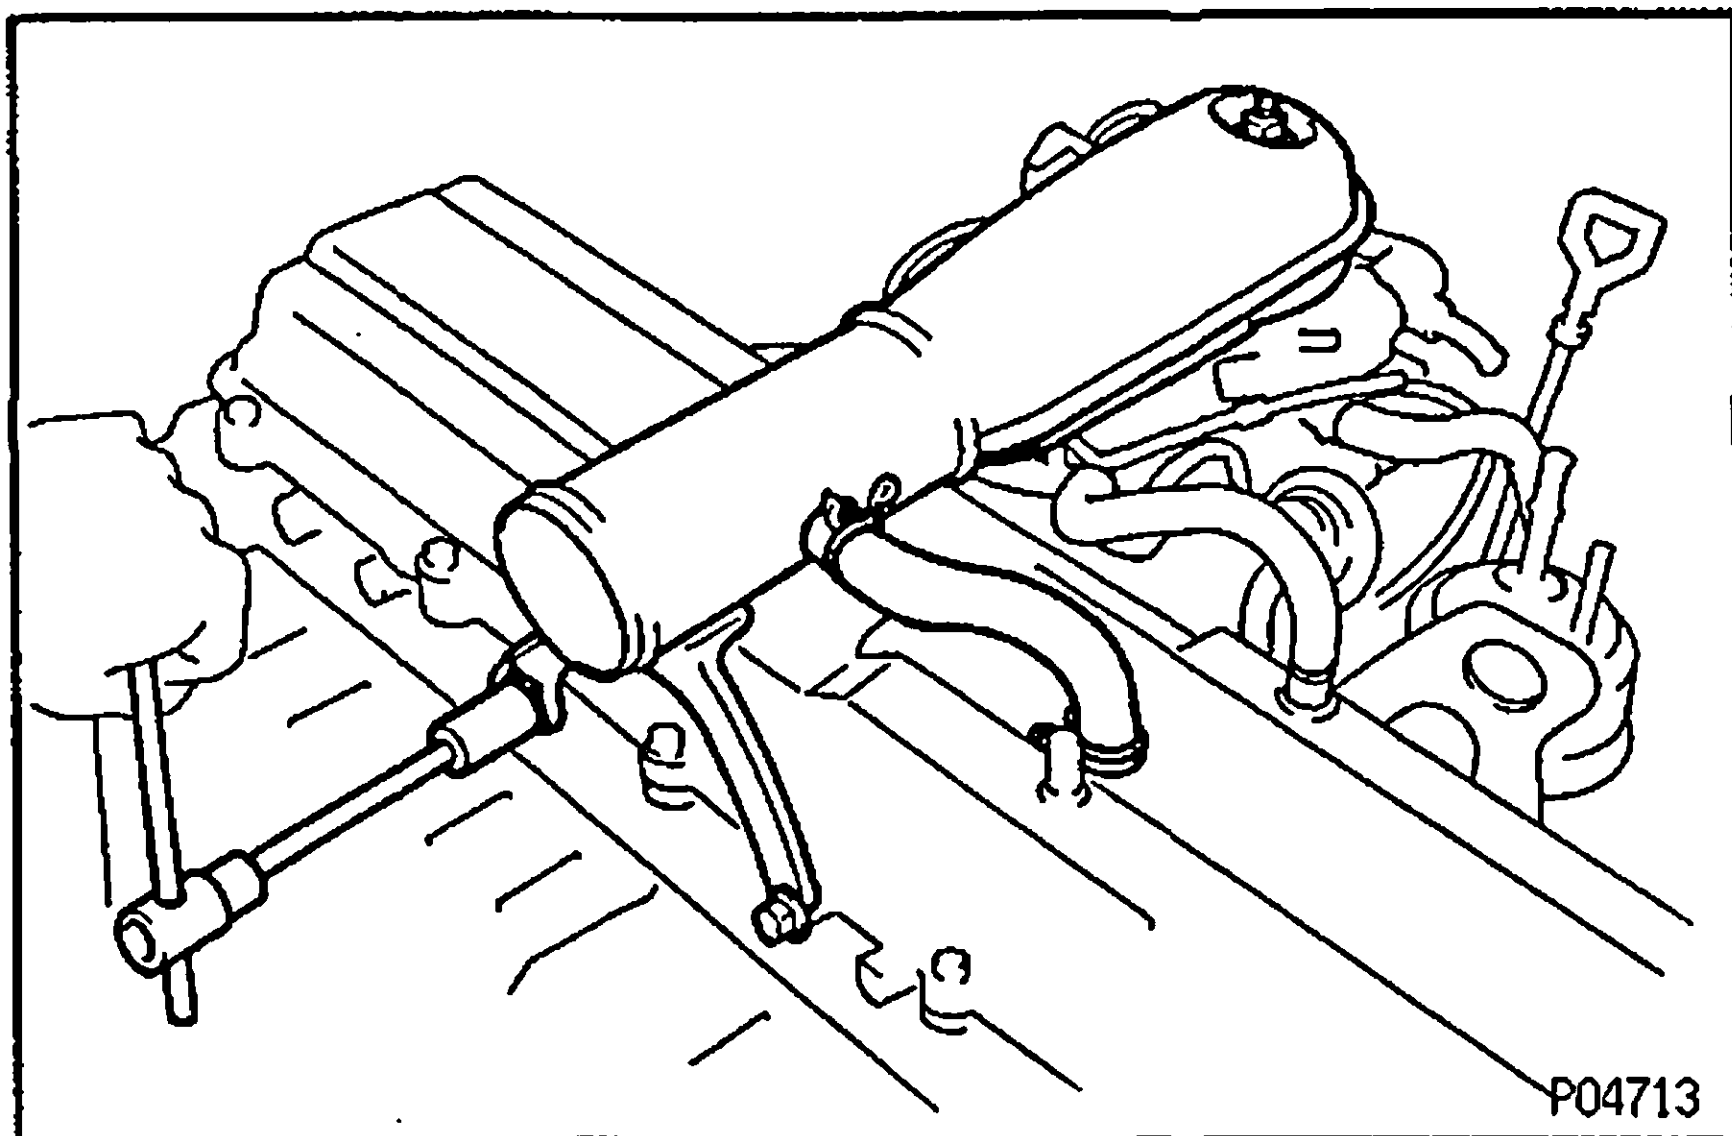


2. REMOVE NO. 2 AND NO. 3 CYLINDER HEAD COVERS

Remove the four bolts and head covers.

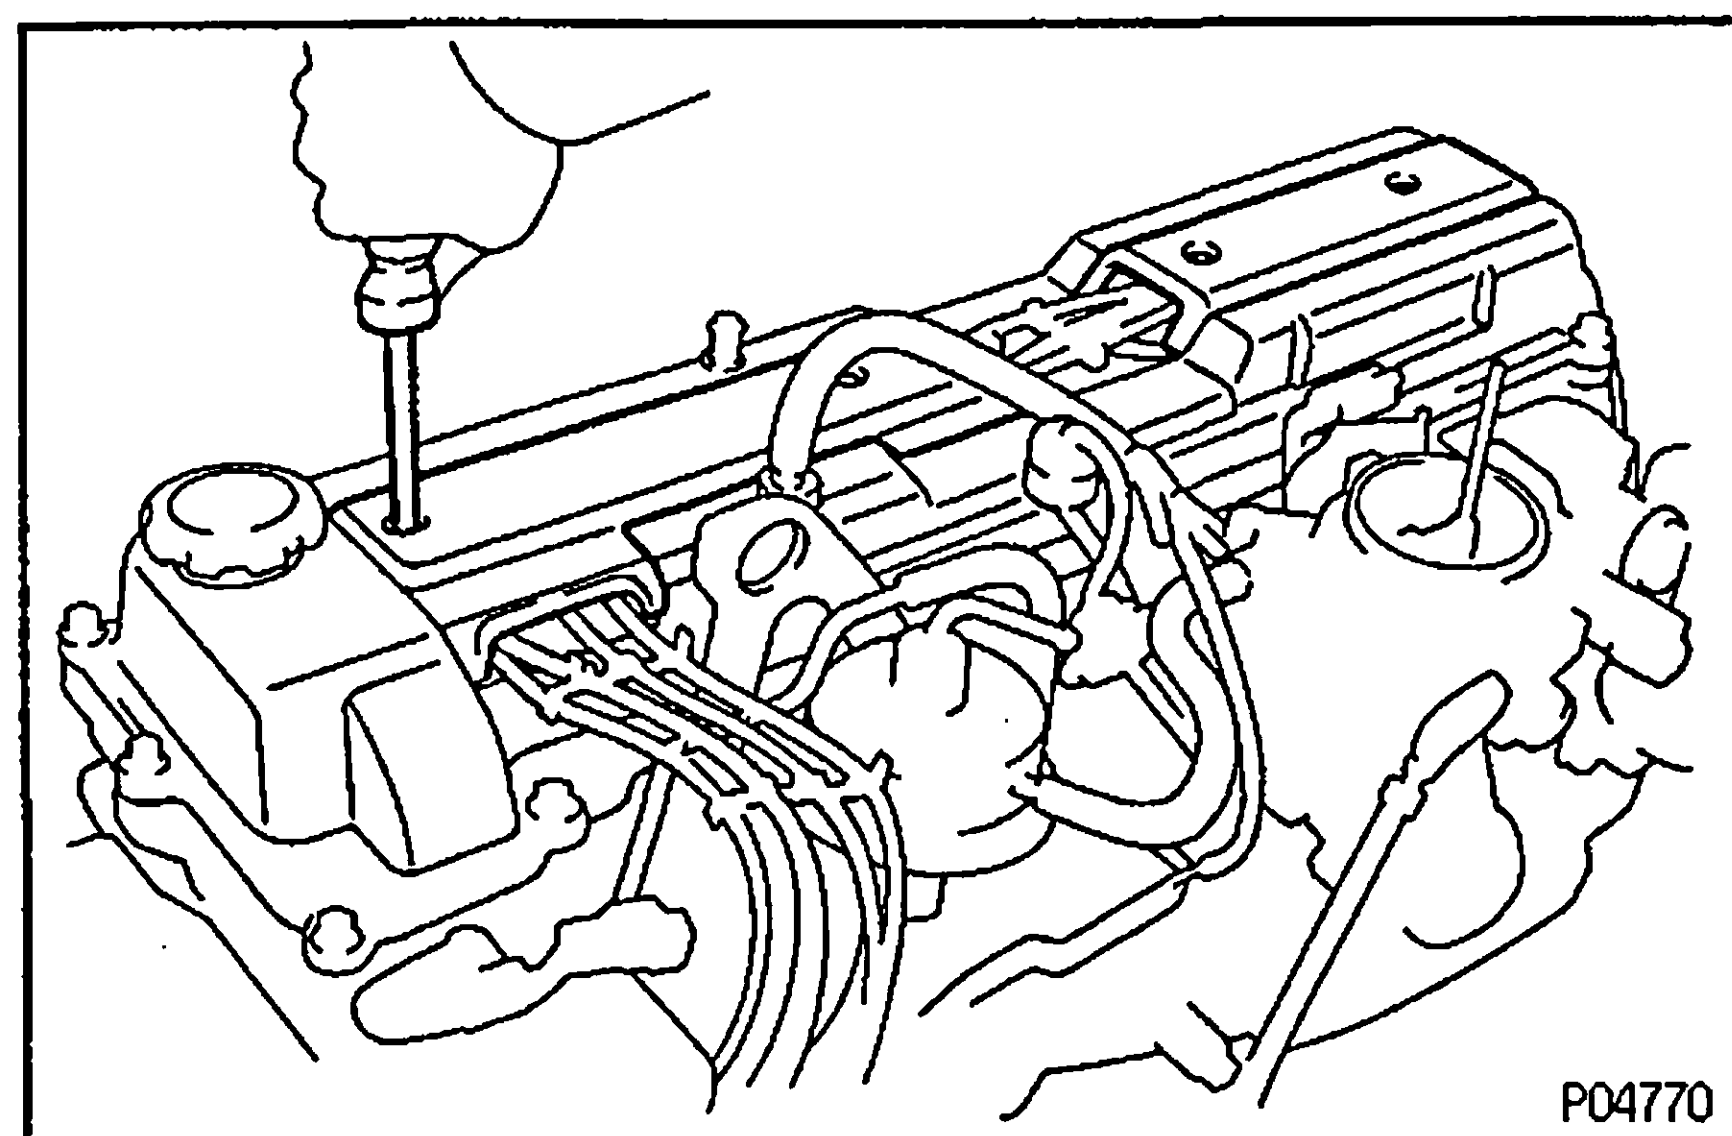

3. REMOVE DISTRIBUTOR


- (a) Remove the No.1 cord clamp mounting bolt.

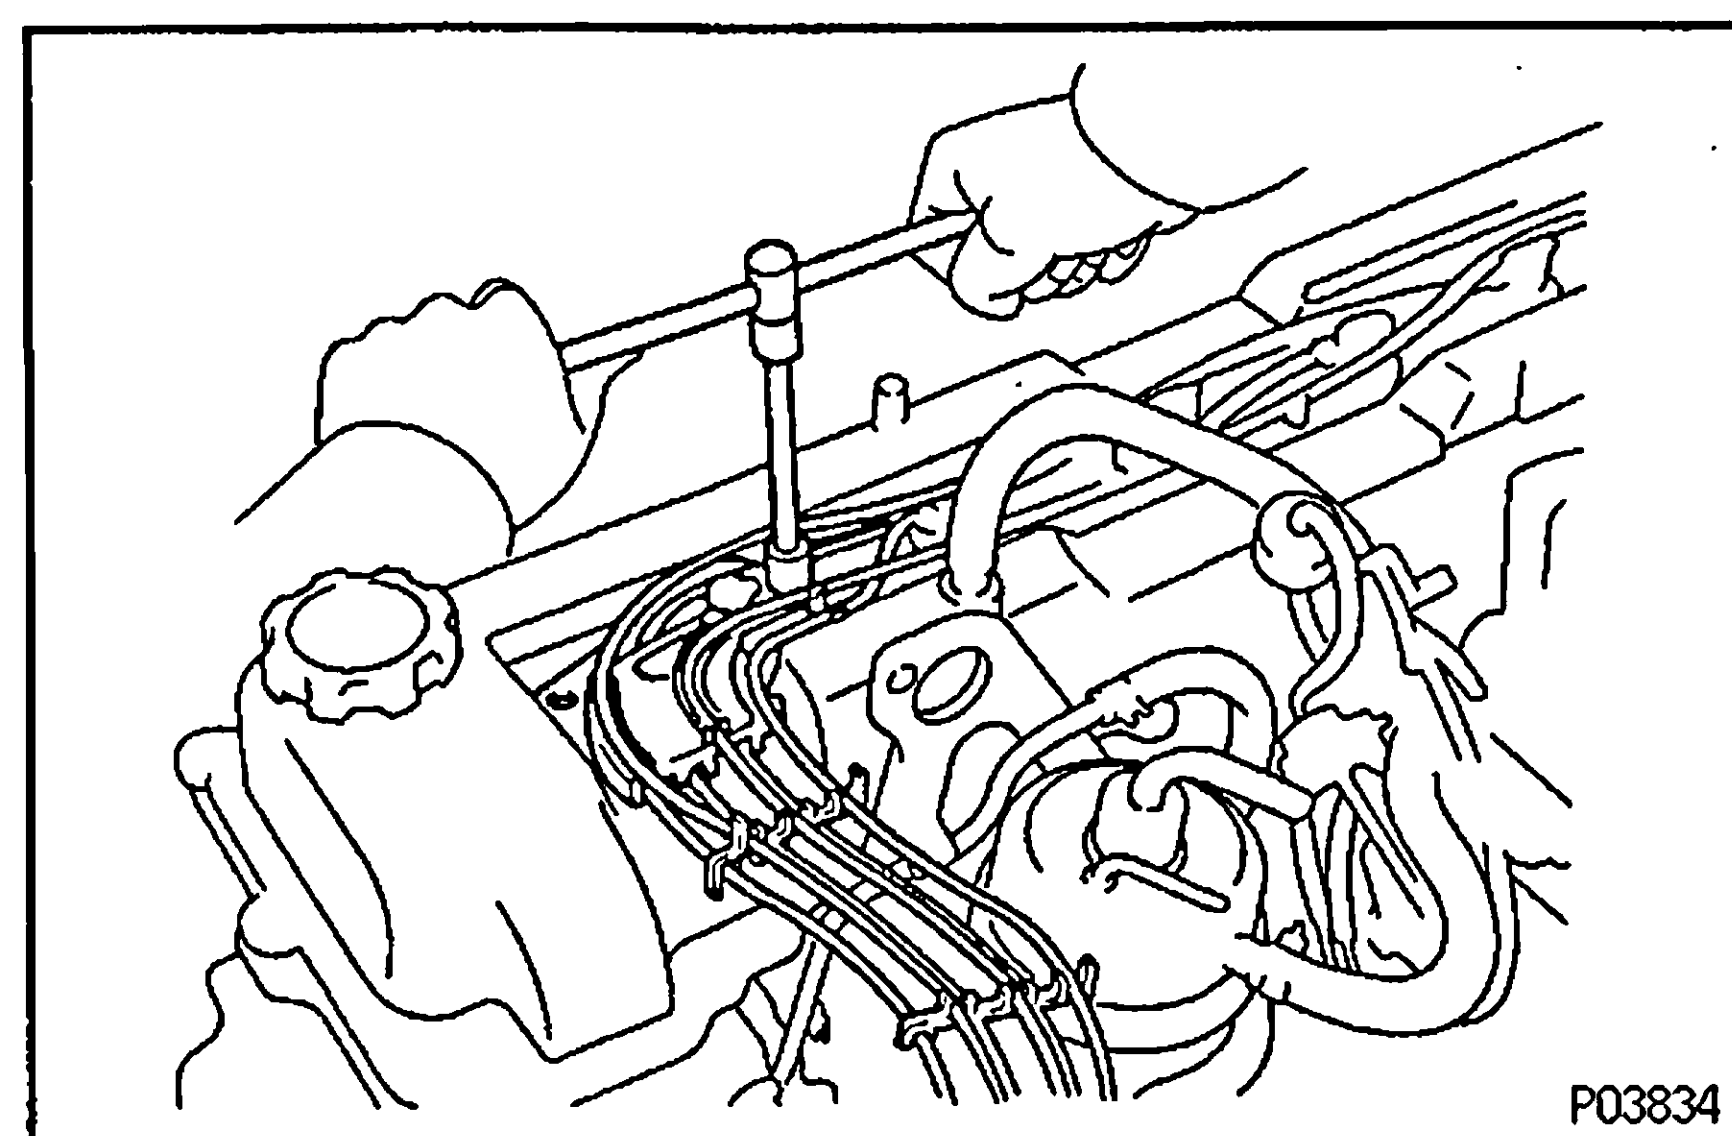


- (b) Disconnect the high — tension cords at the rubber boot.

DO NOT pull on the cords.


NOTICE: Pulling on or bending the cords may damage the conductor inside.

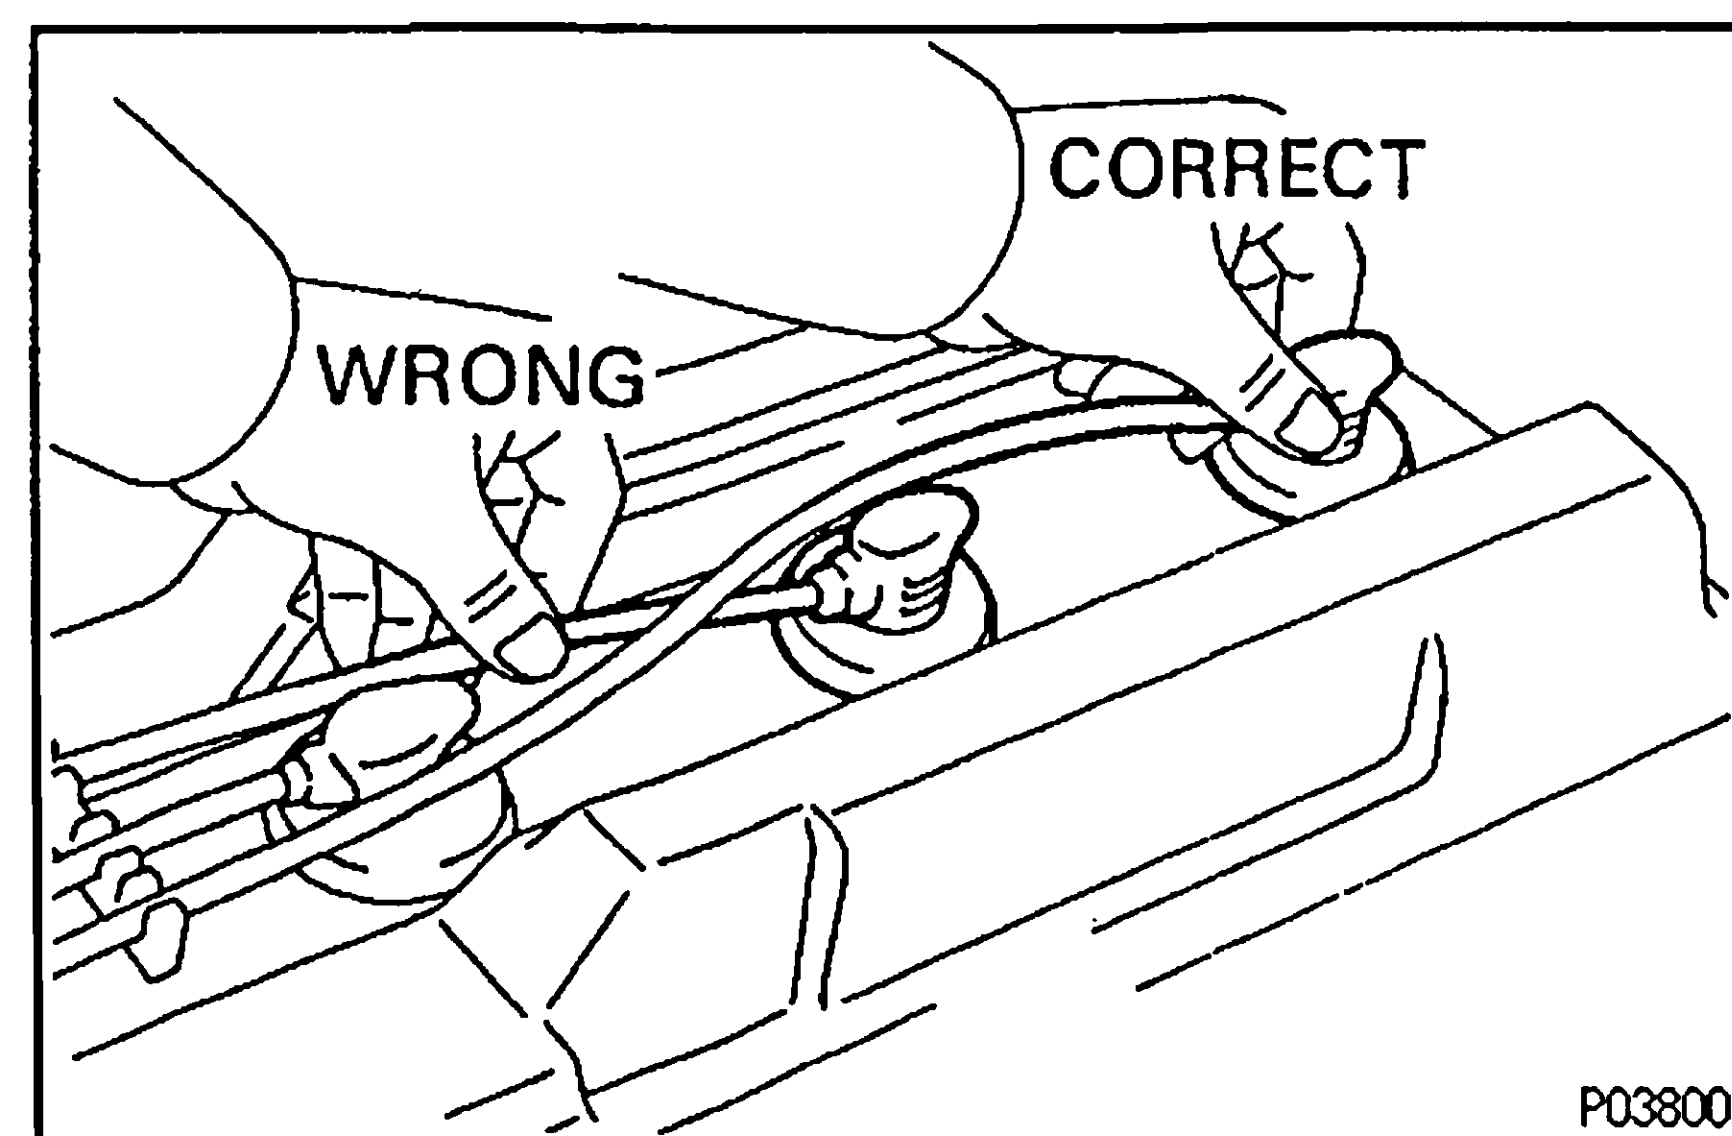


- (c) Remove the bolt and distributor.

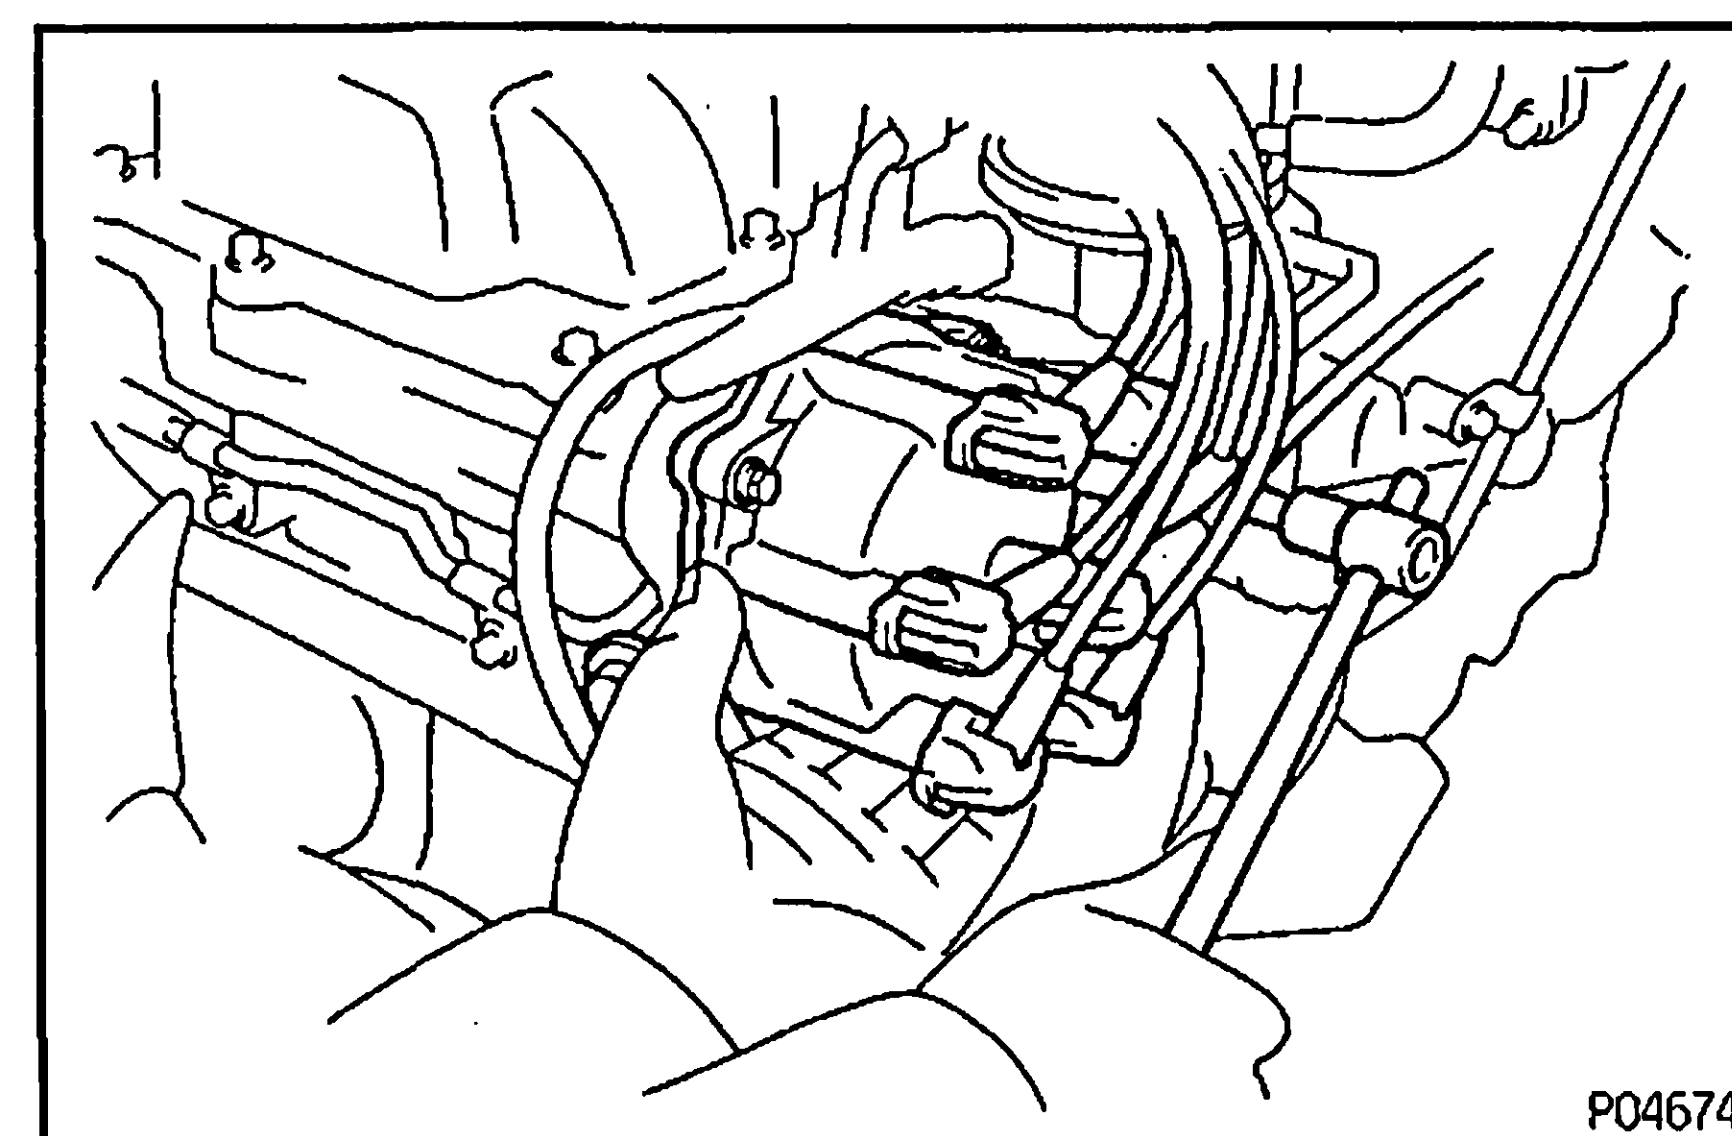


EG

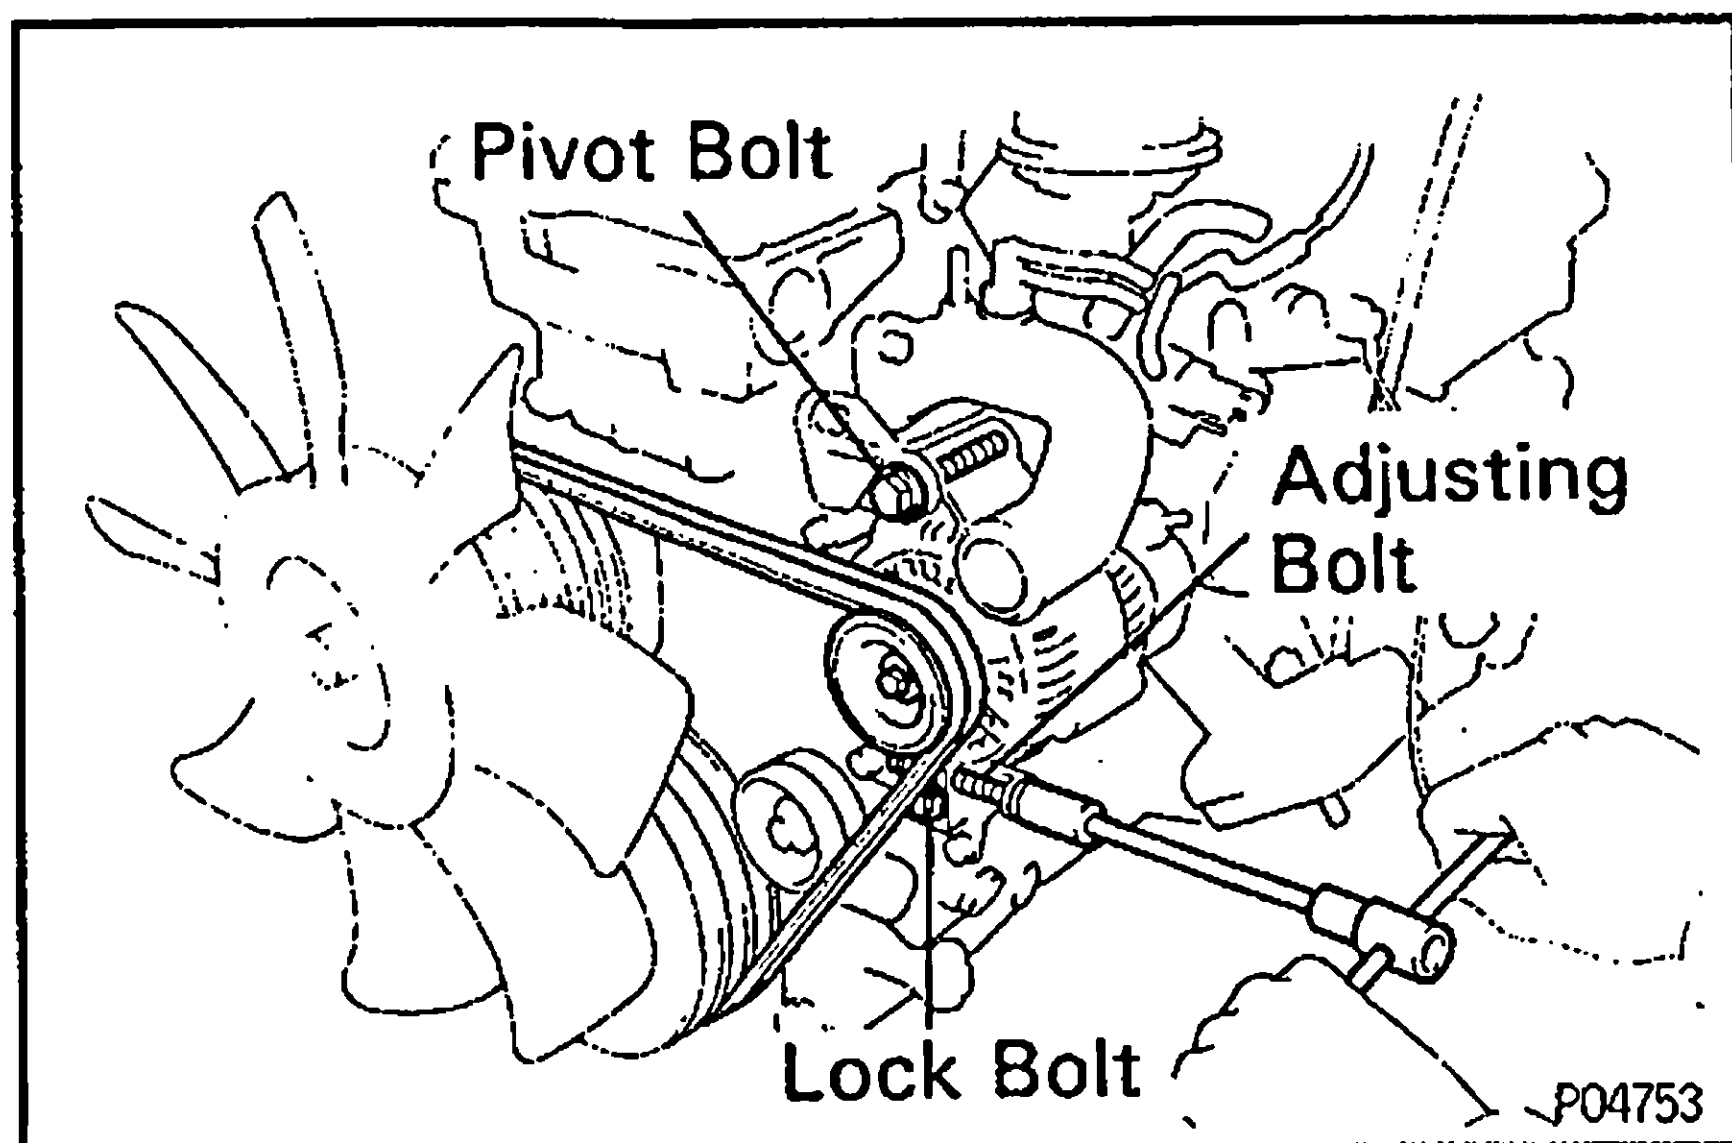**4. REMOVE ALTERNATOR**


- (a) Loosen the lock bolt, pivot bolt and adjusting bolt, and remove the drive belts.

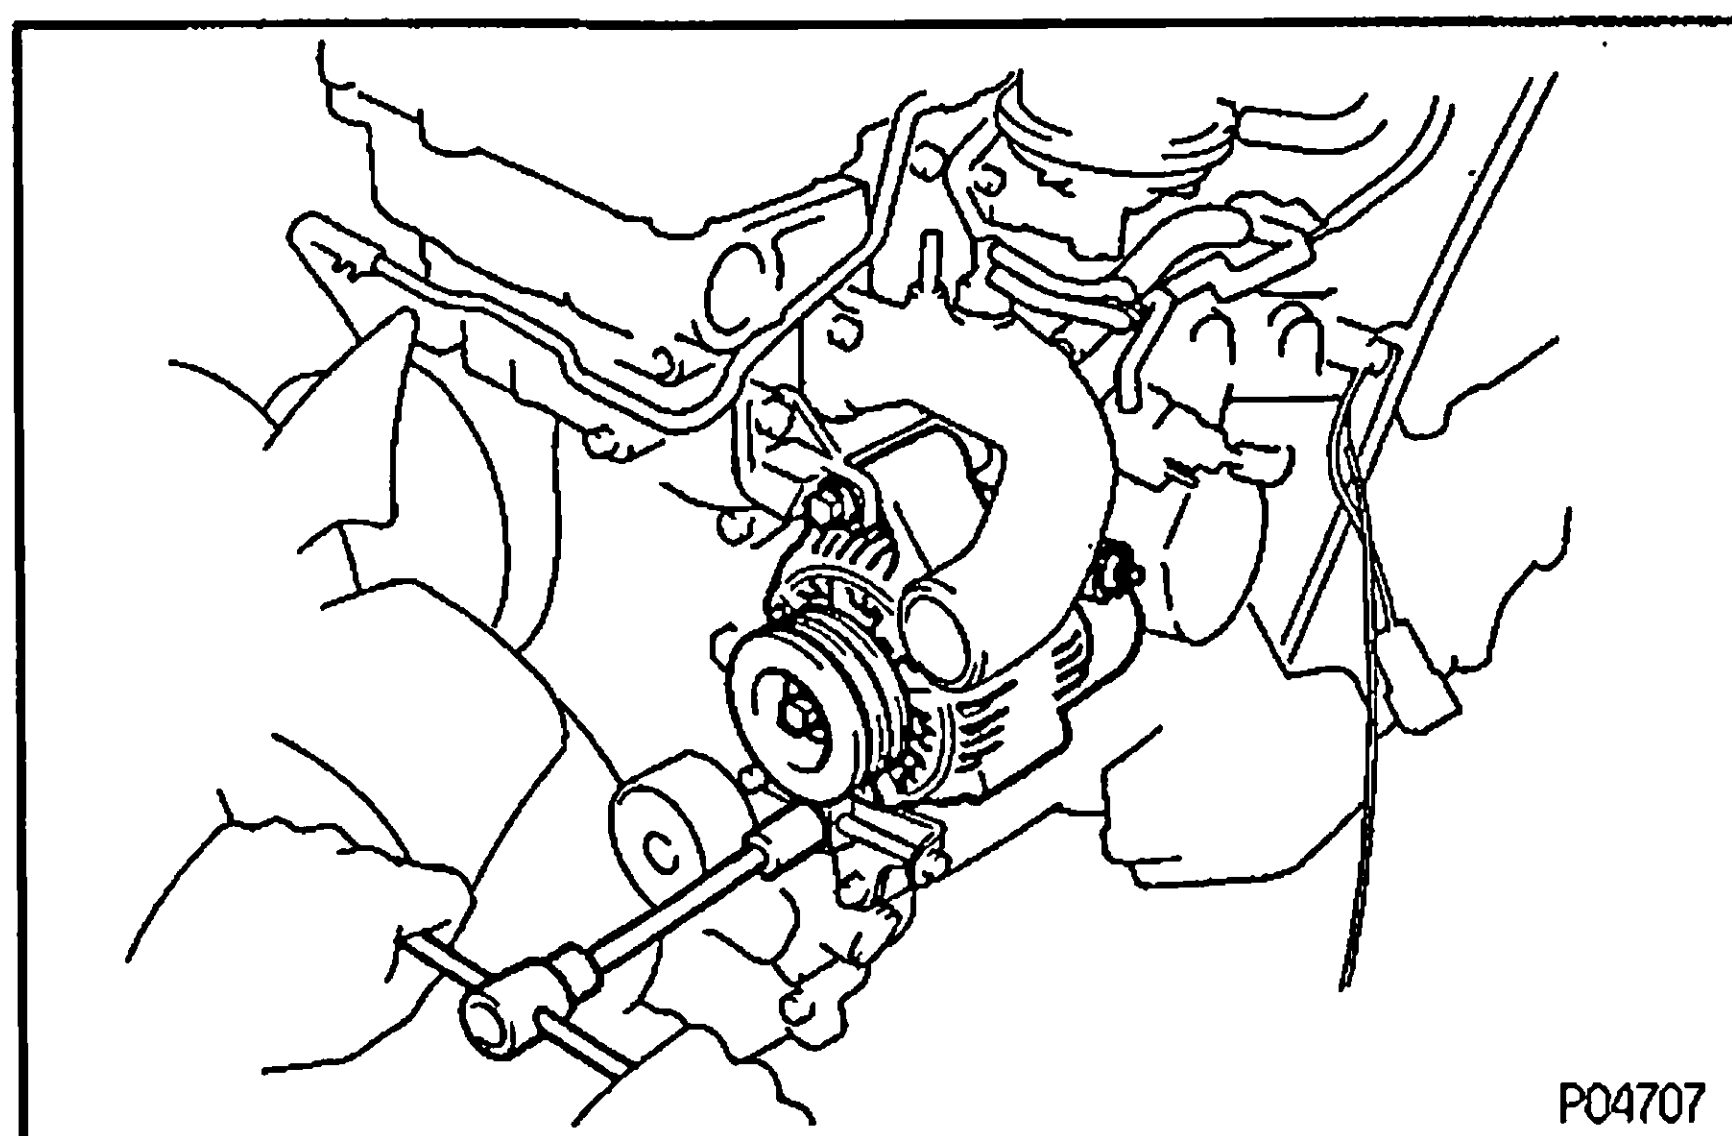


- (b) Remove the pivot bolt, lock bolt and alternator.

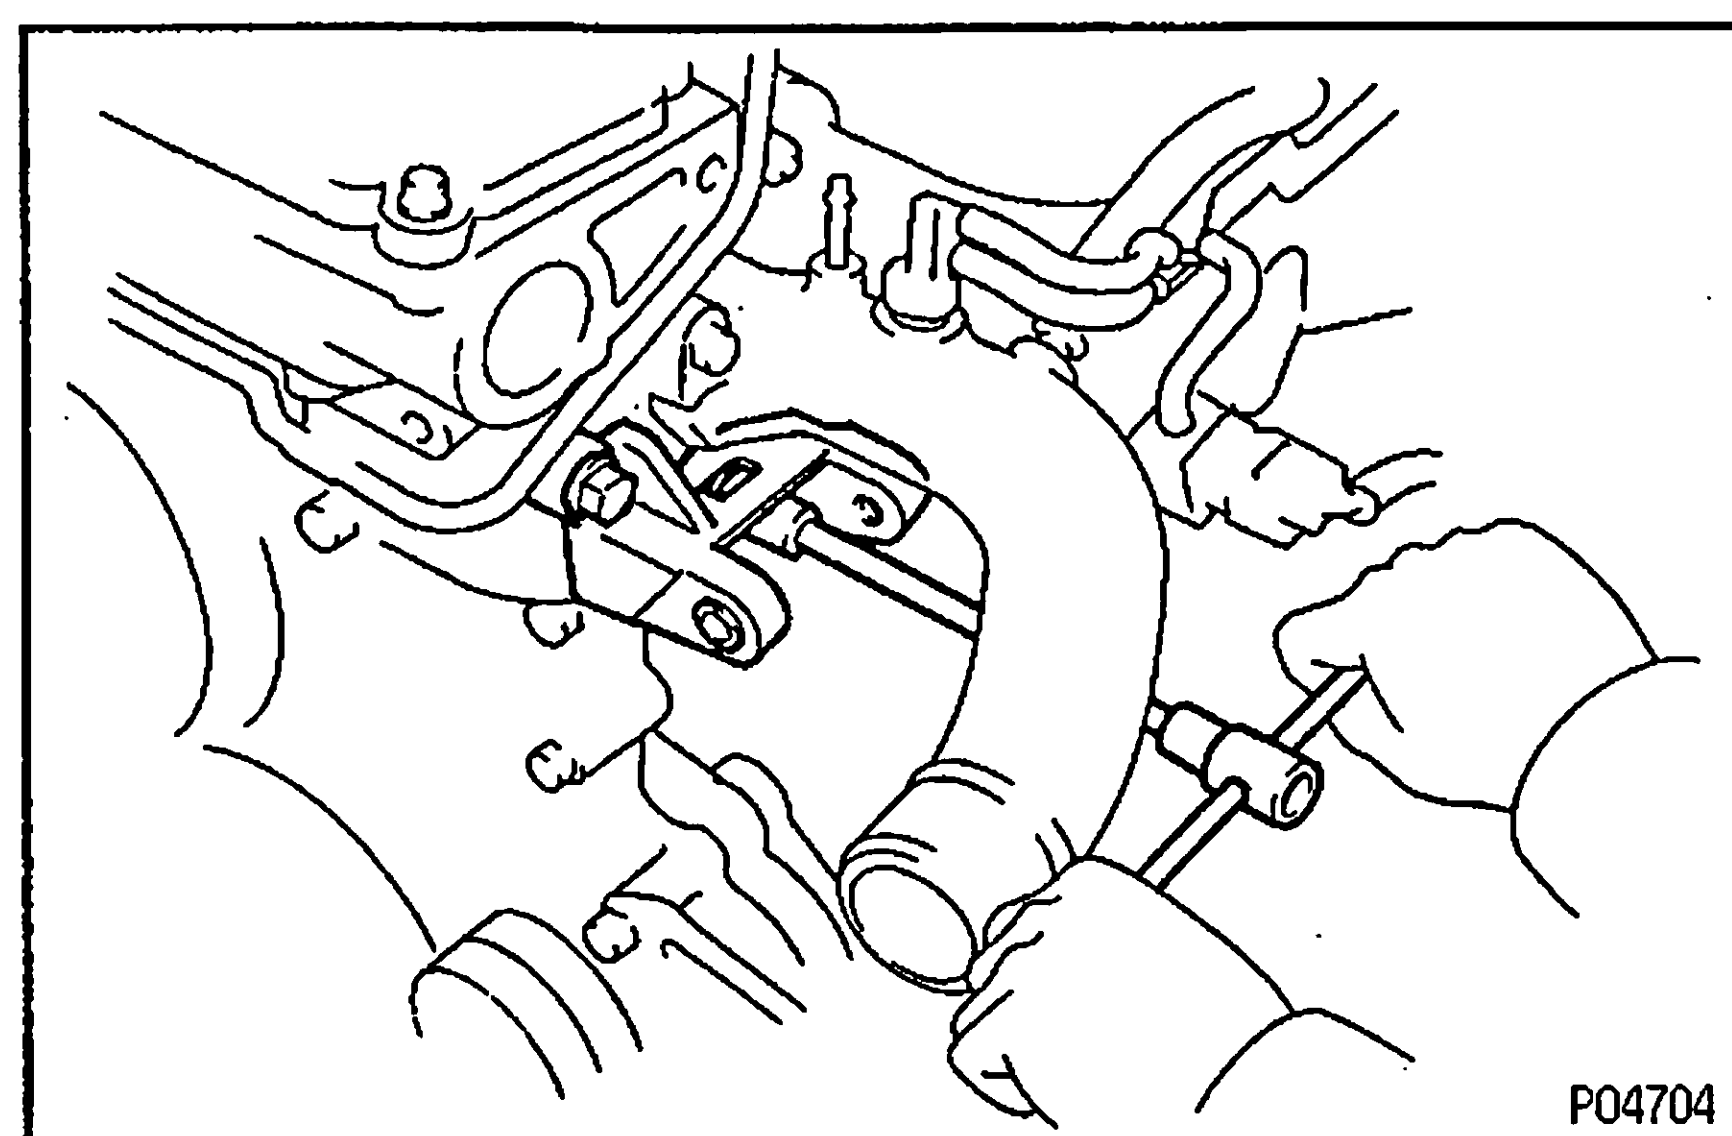**5. REMOVE ALTERNATOR BRACKET**


Remove the two bolts and alternator bracket.

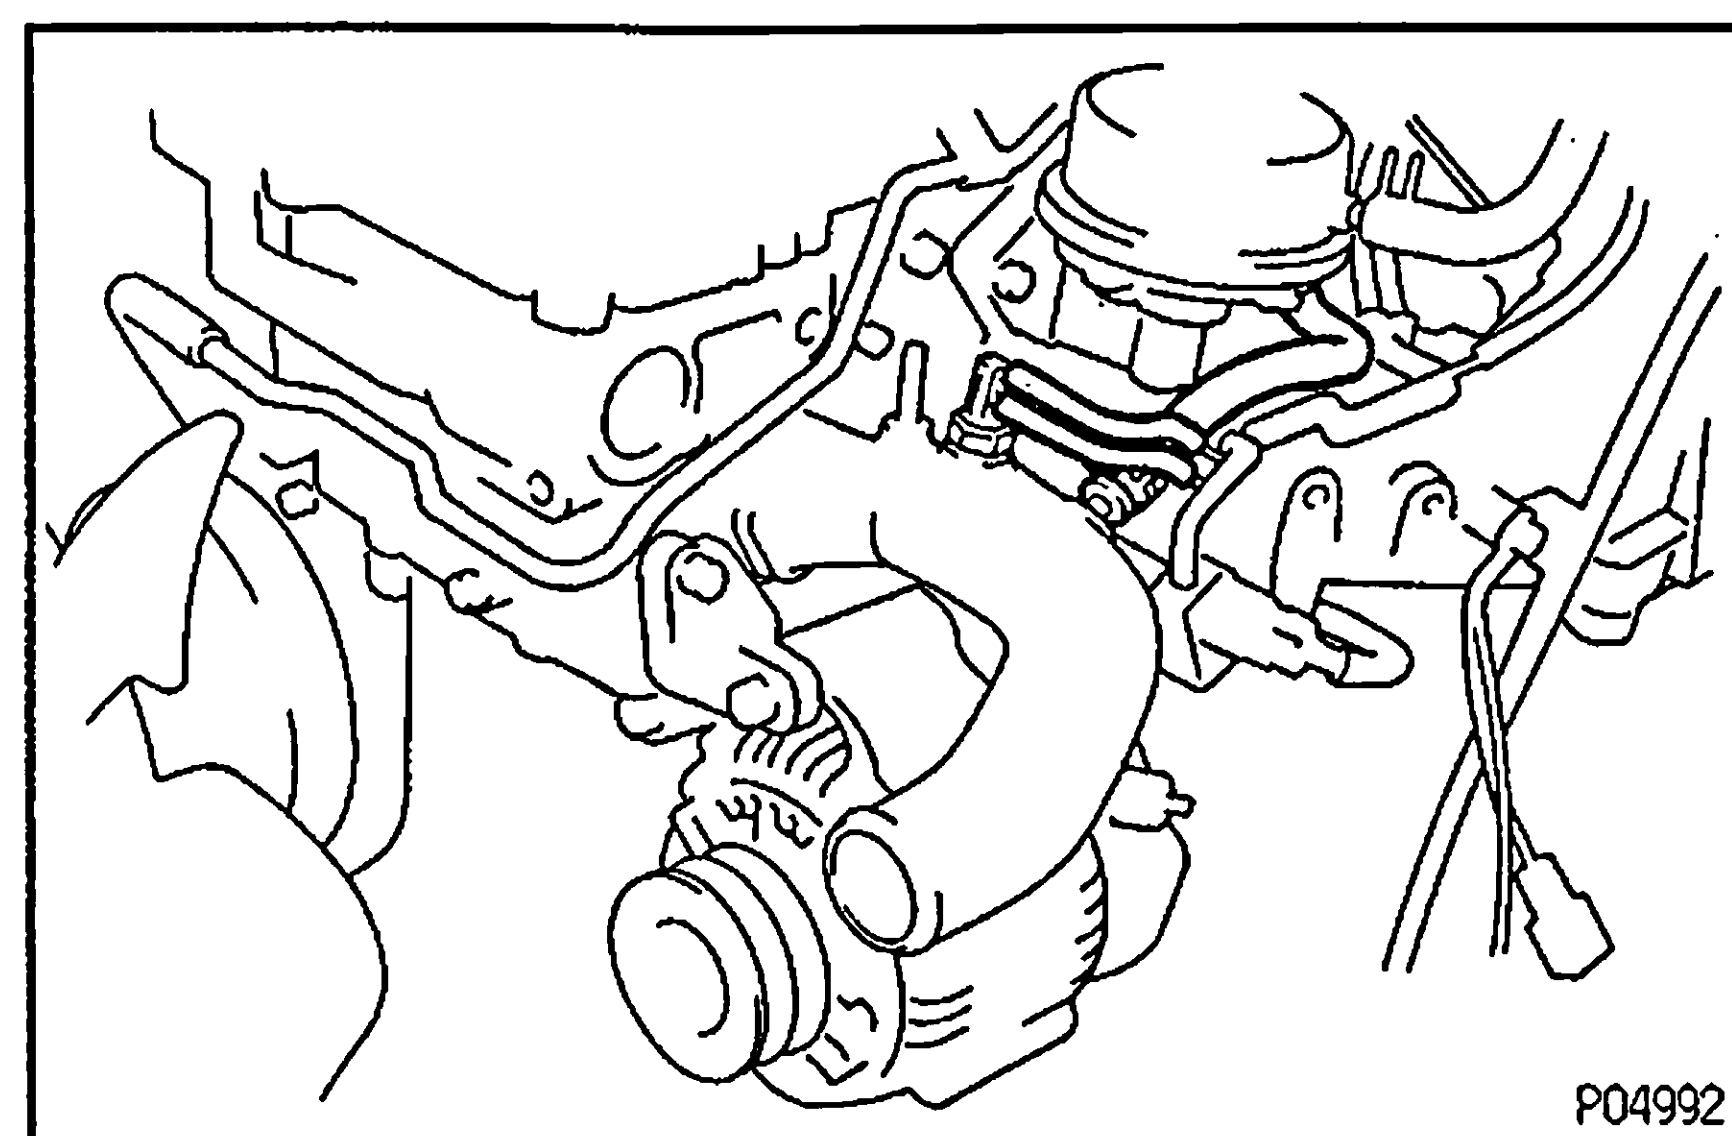**6. REMOVE WATER OUTLET**

- (a) Disconnect the vacuum hoses.
 (b) Disconnect the No.1 water by-pass hose.


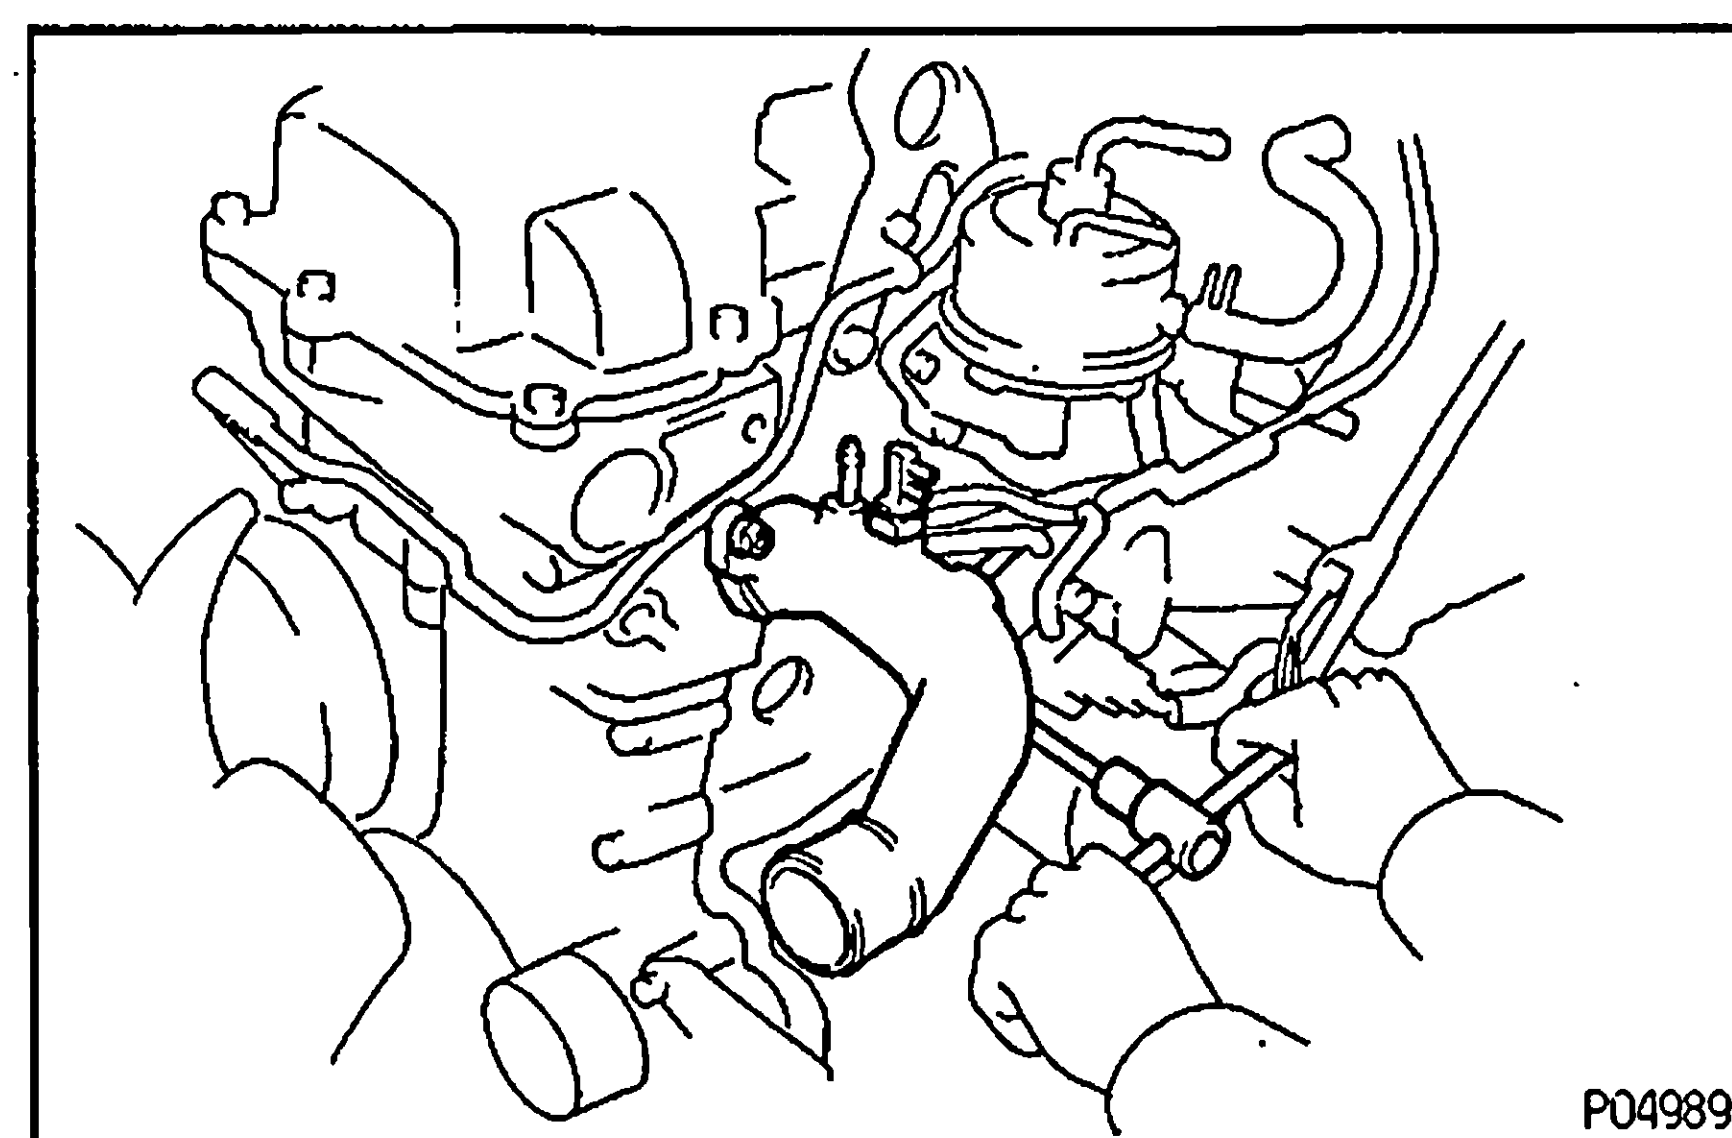


- (c) Remove the two nuts, water outlet and gasket.


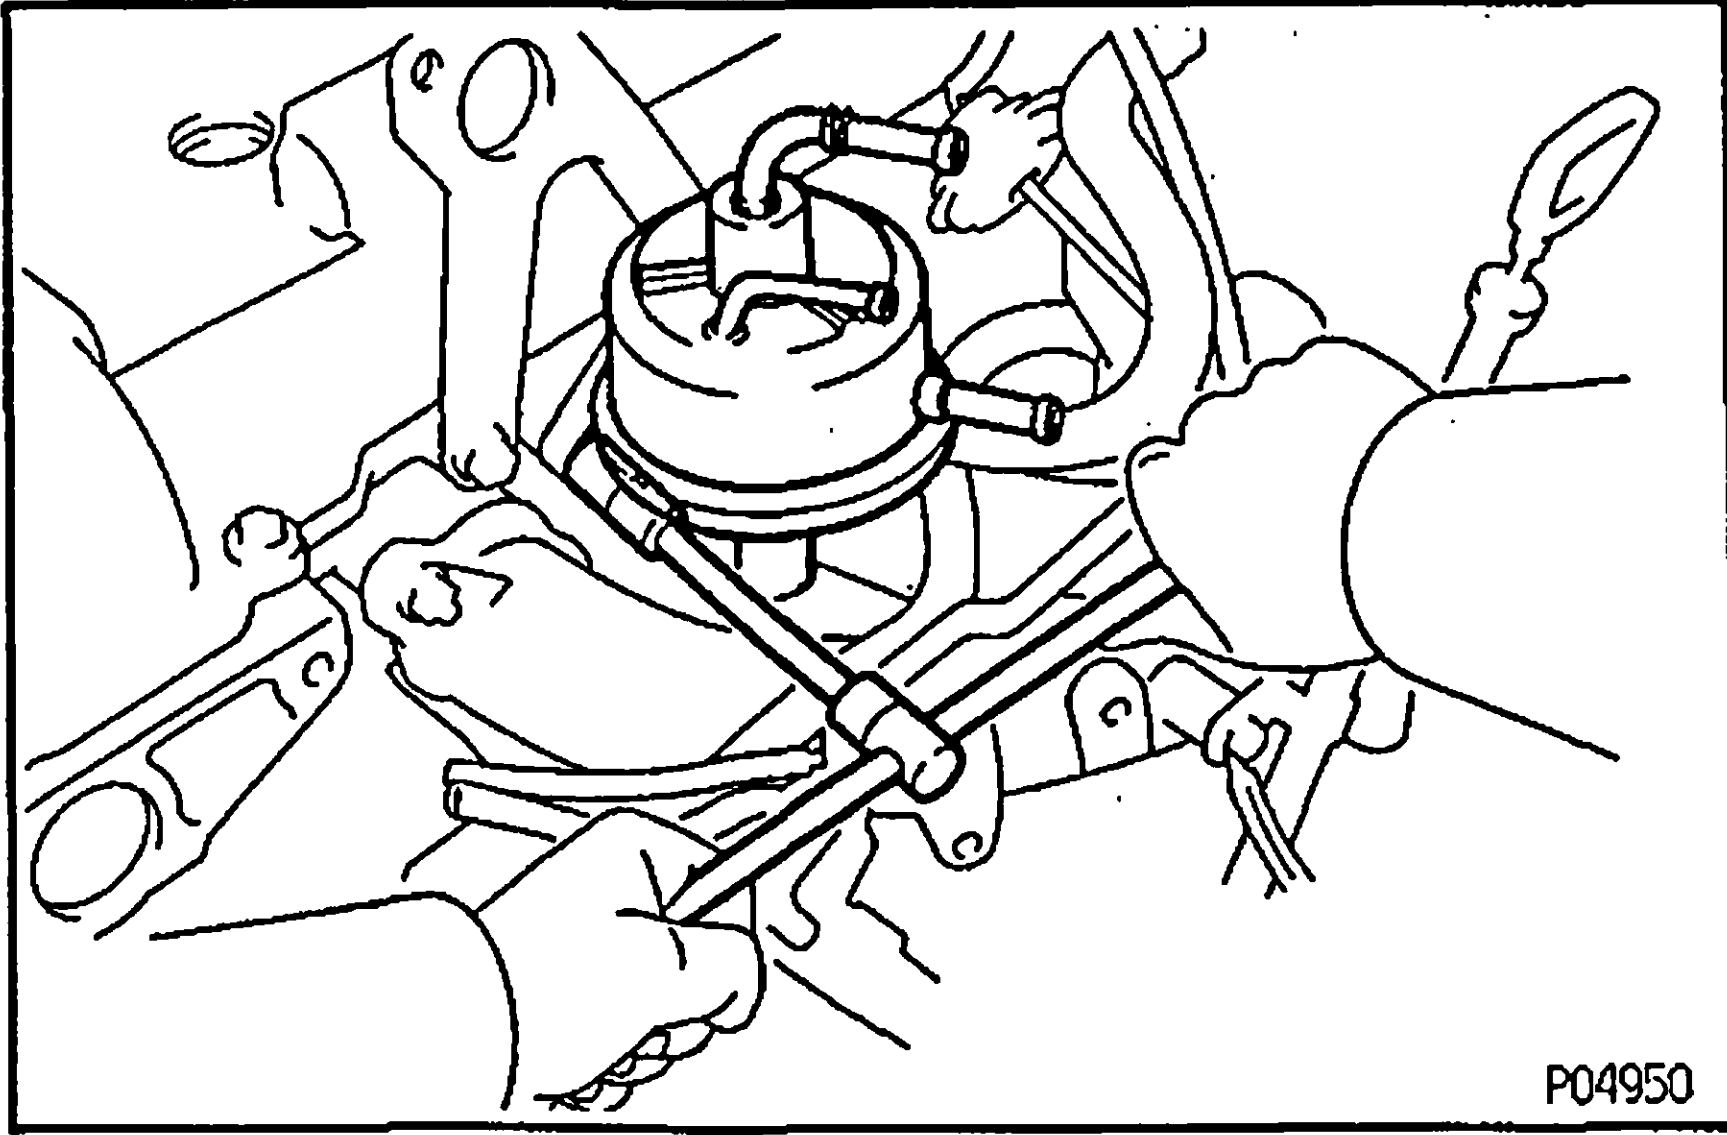
**7. REMOVE FUEL PUMP**


- (a) Disconnect the fuel outlet hose.
- (b) Remove the three bolts, fuel pump and gasket.

EG

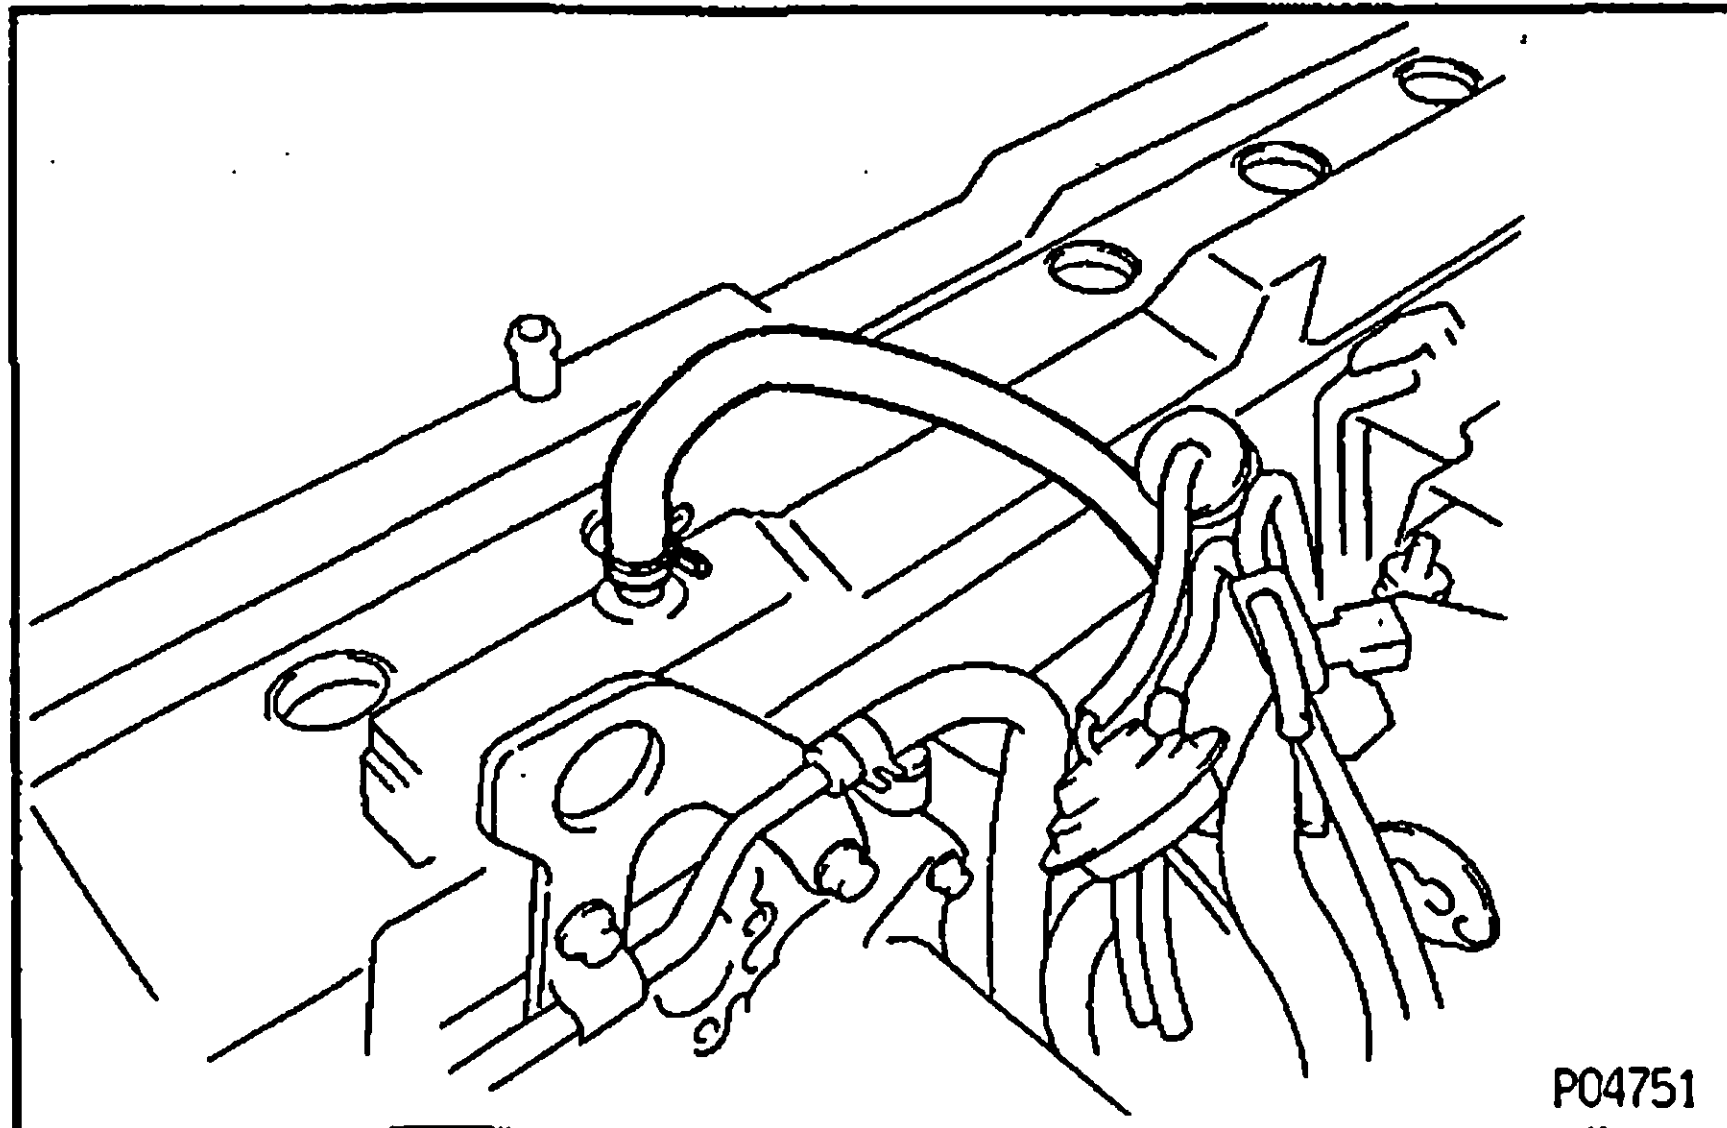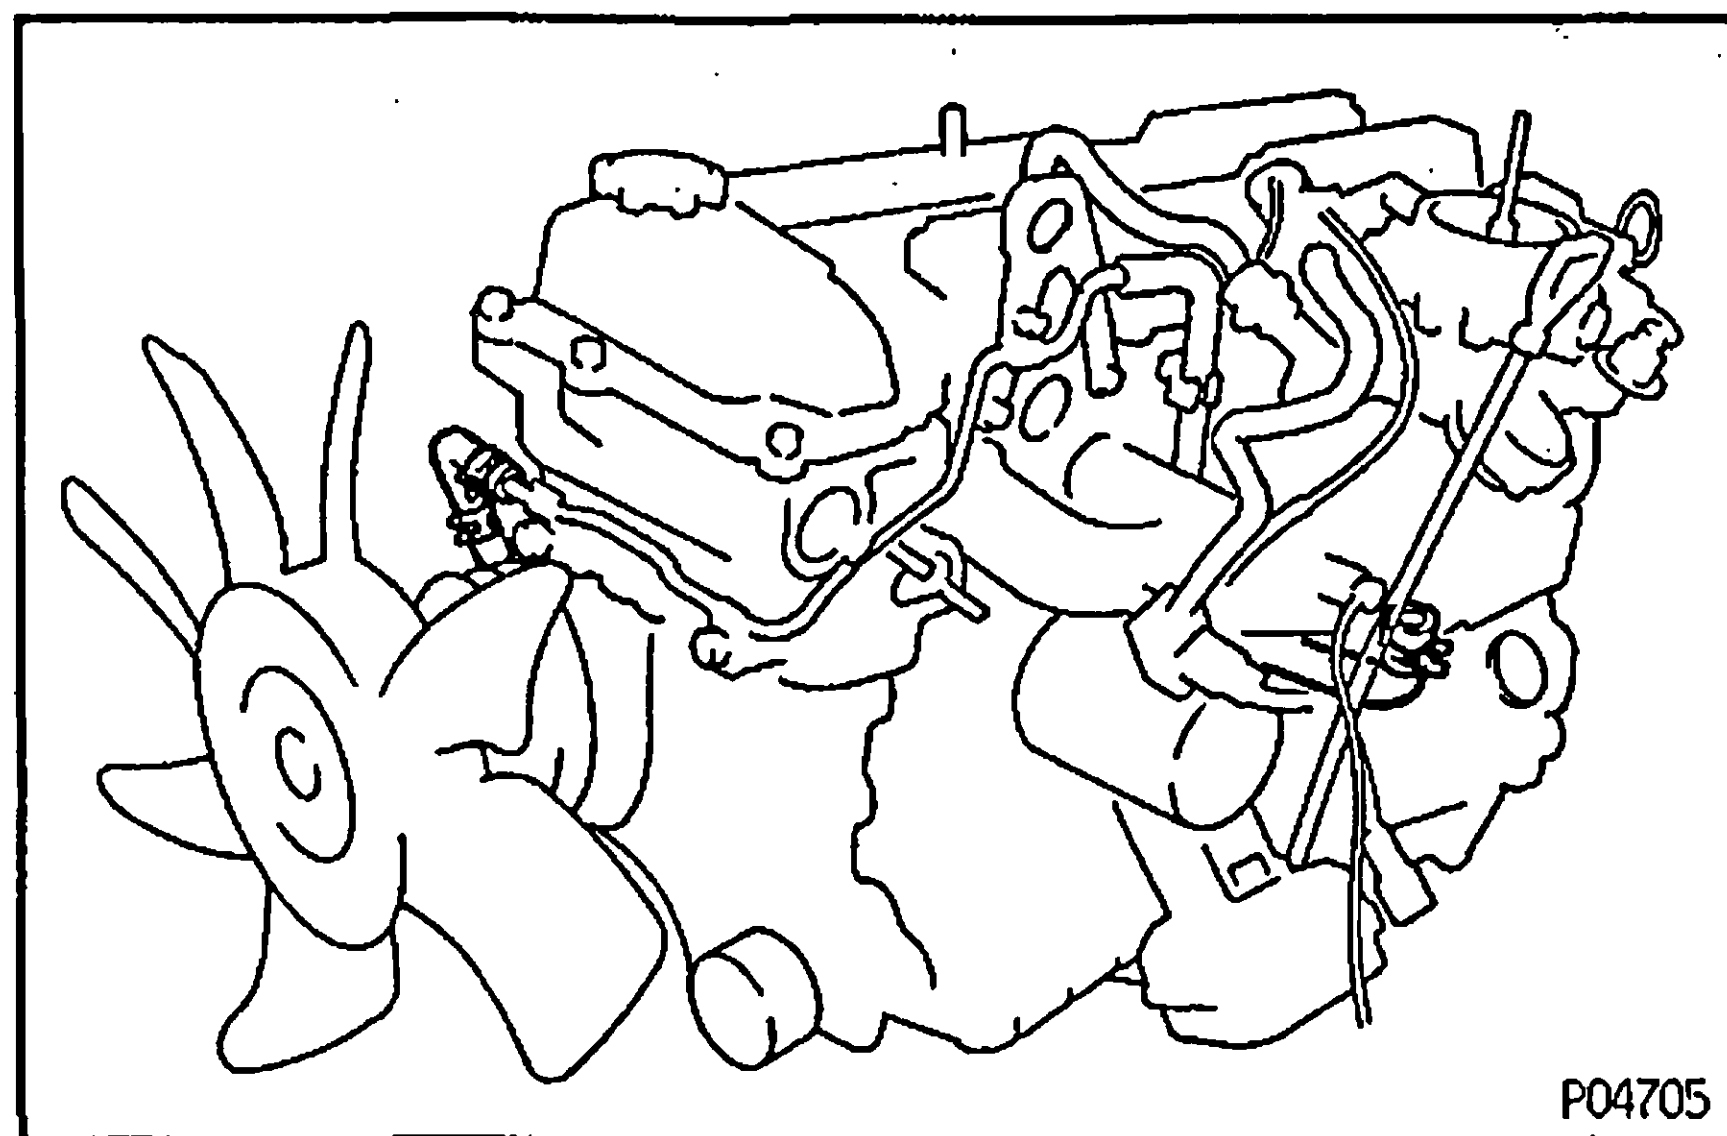
**8. DISCONNECT PCV HOSE****9. REMOVE NO. 2 WATER BY — PASS PIPE WITH HOSES**

- (a) Disconnect the two water hoses.
- (b) Disconnect the hose clamp.
- (c) Remove the three bolts and No.2 water by — pass pipe with hoses.

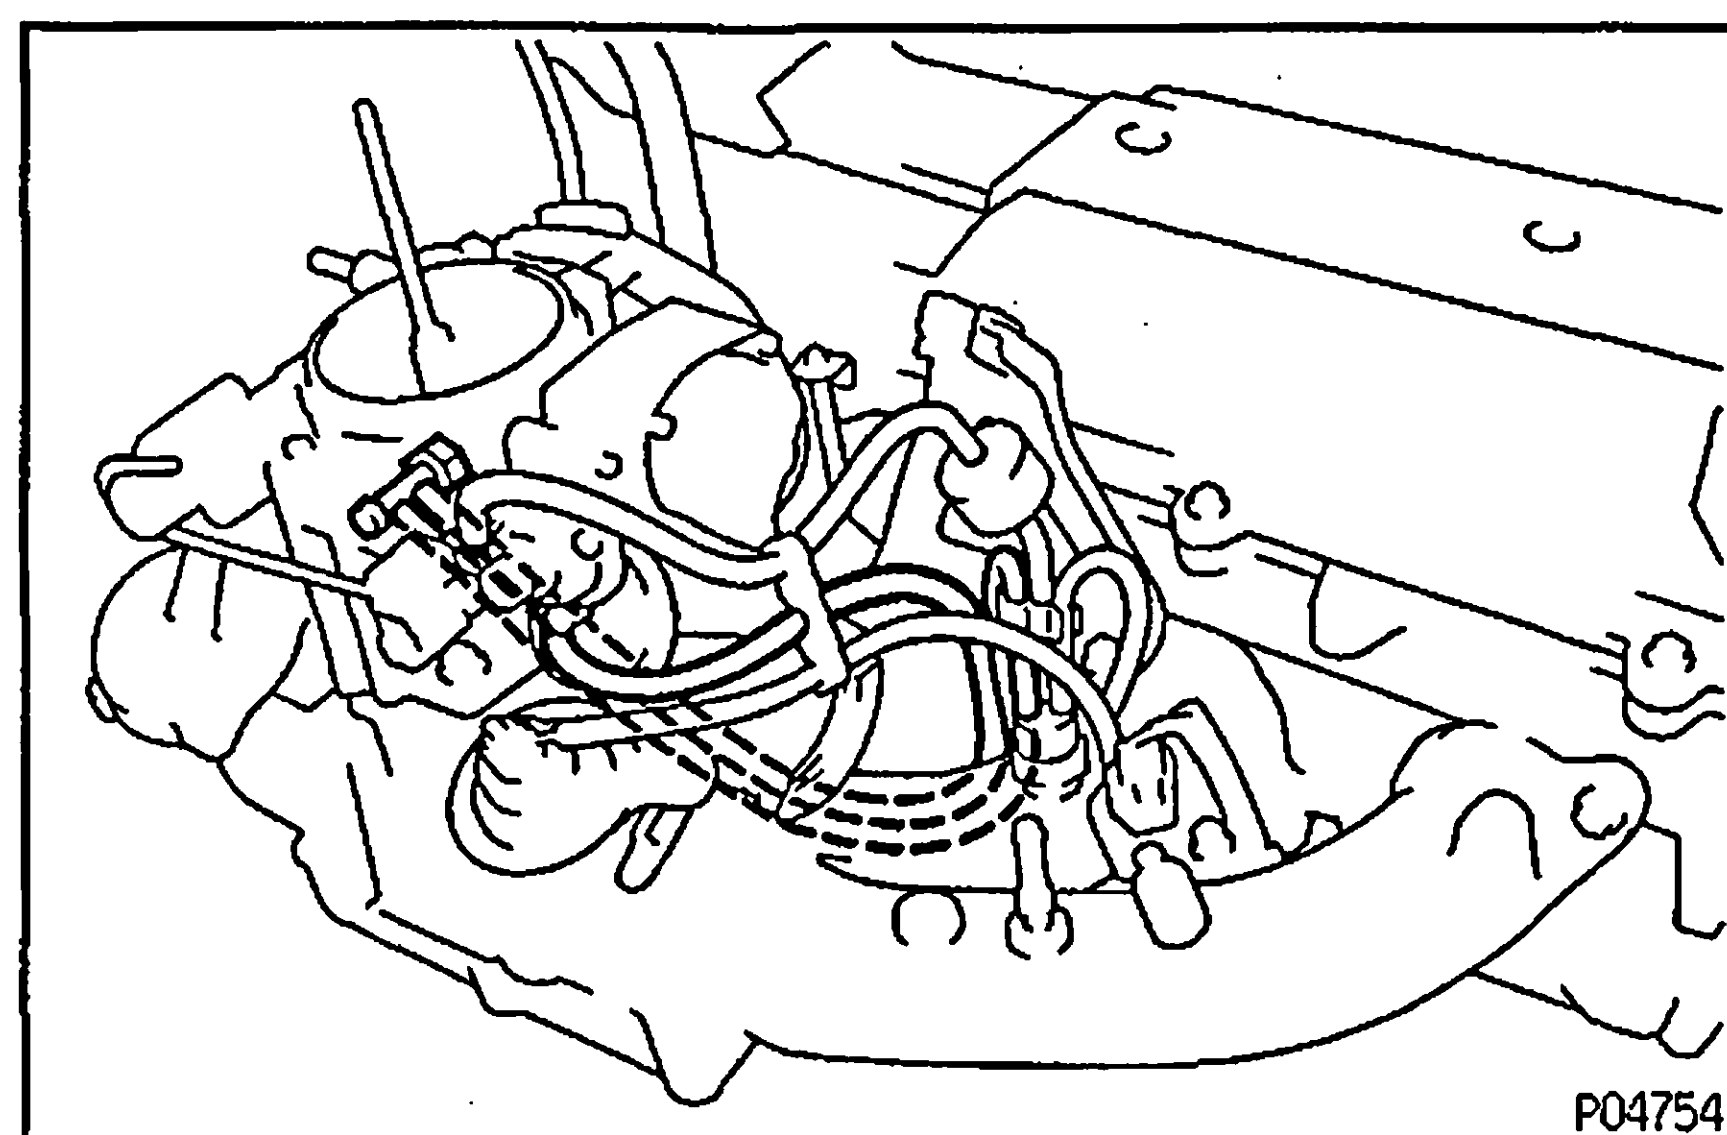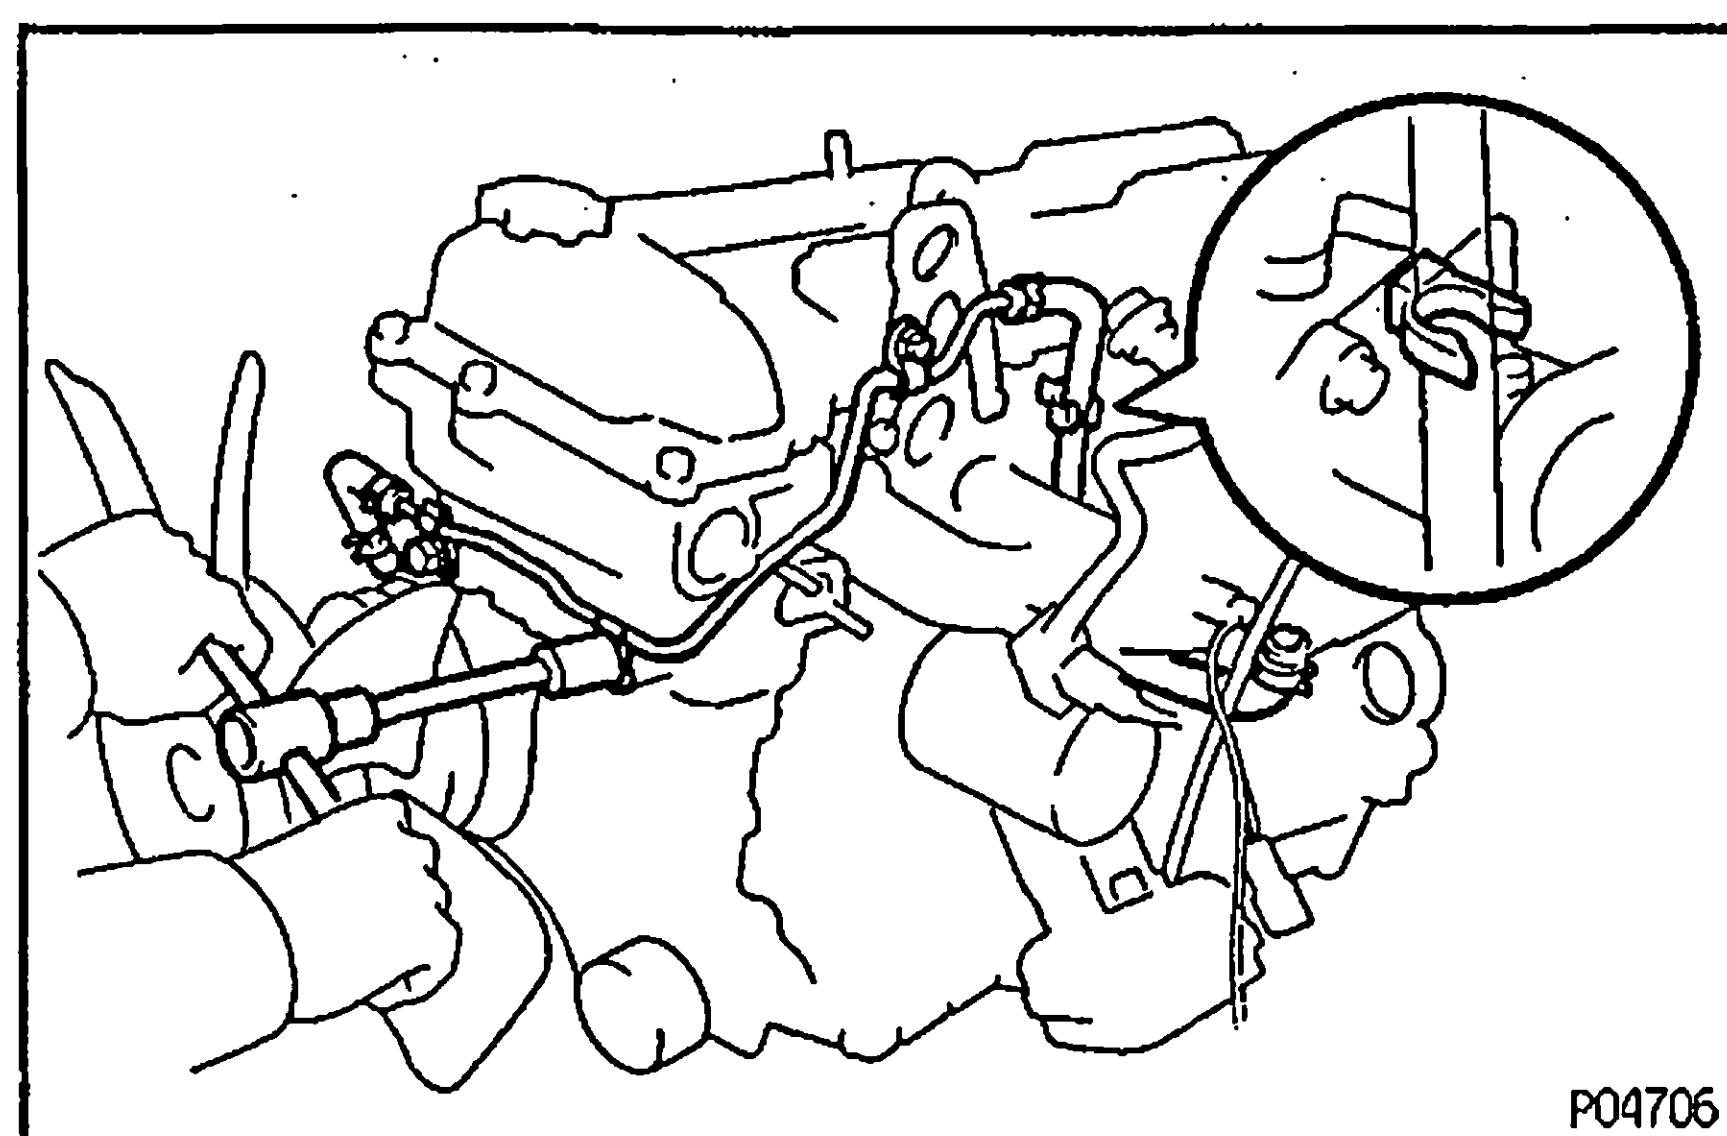
**10. DISCONNECT TWO VACUUM HOSES FROM BVS**

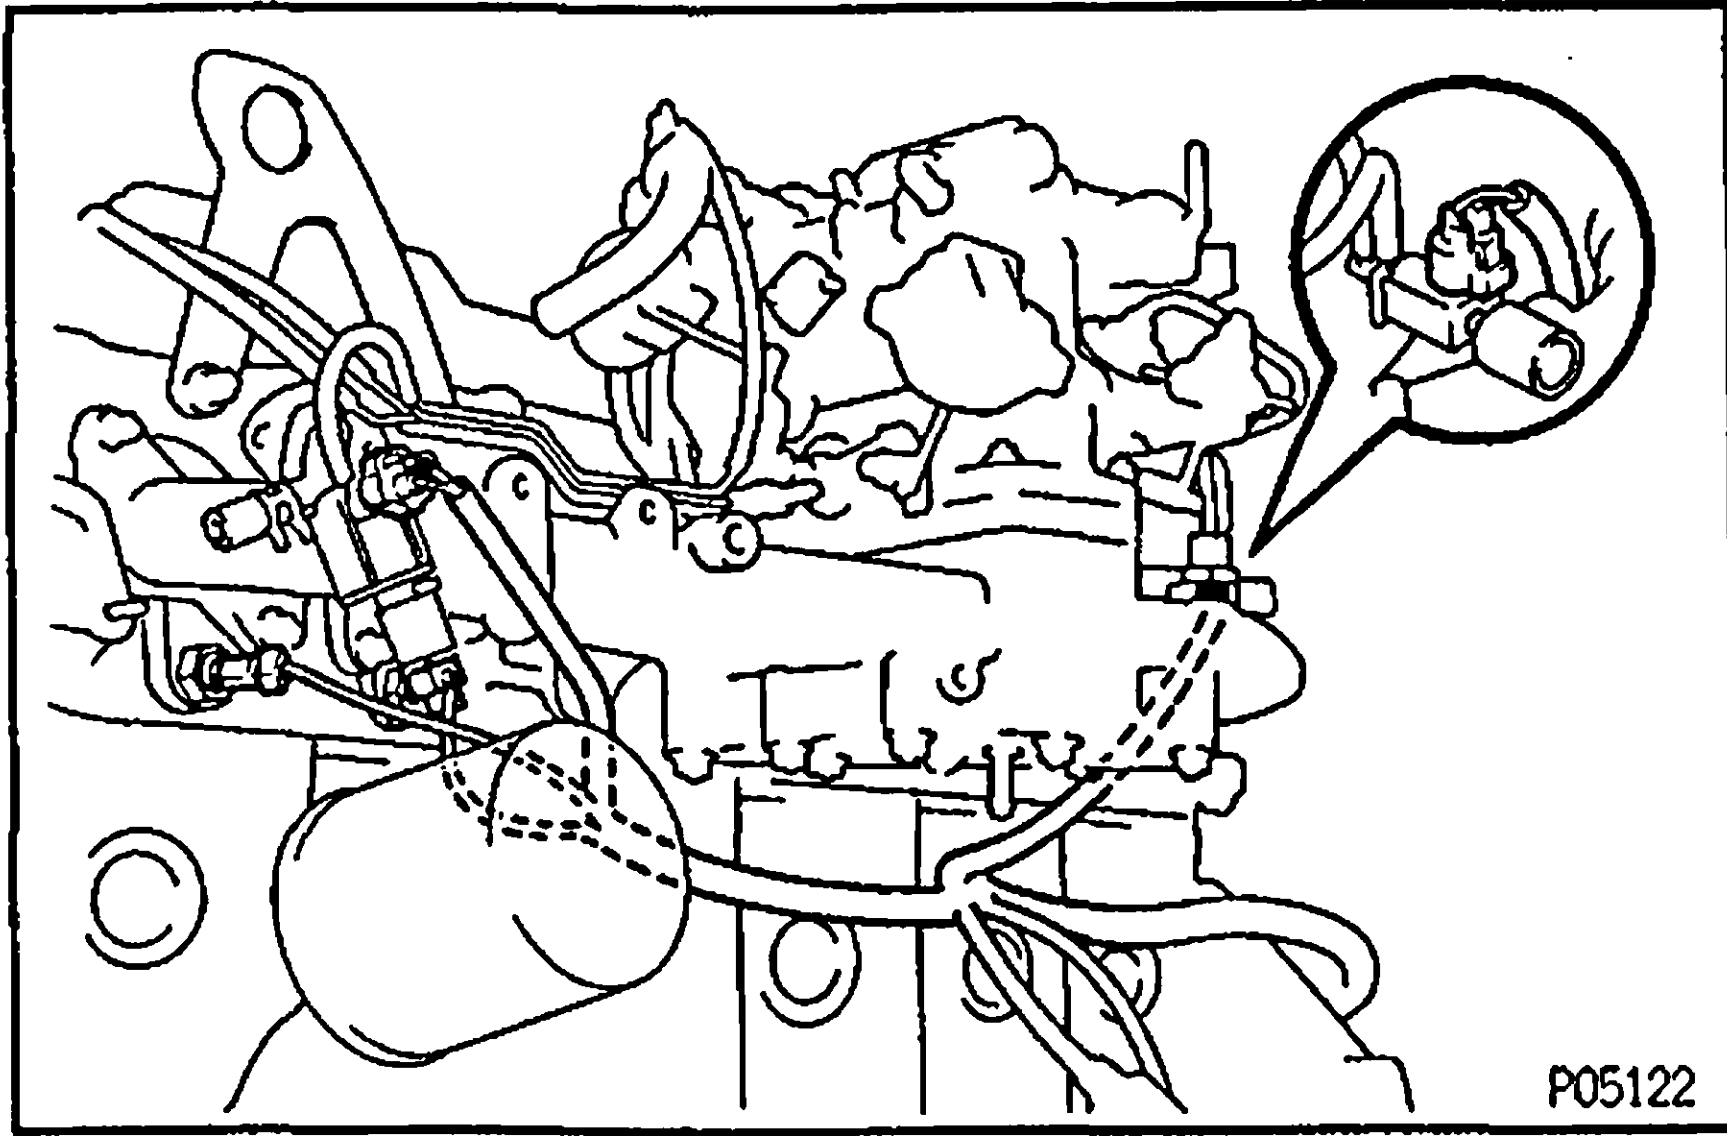**11. DISCONNECT FOLLOWING CONNETORS:**


- (a) Spark control VSV (for G.C.C.)
- (b) Water temperature switch
- (c) Water temperature sensor (for G.C.C.)
- (d) TP VSV

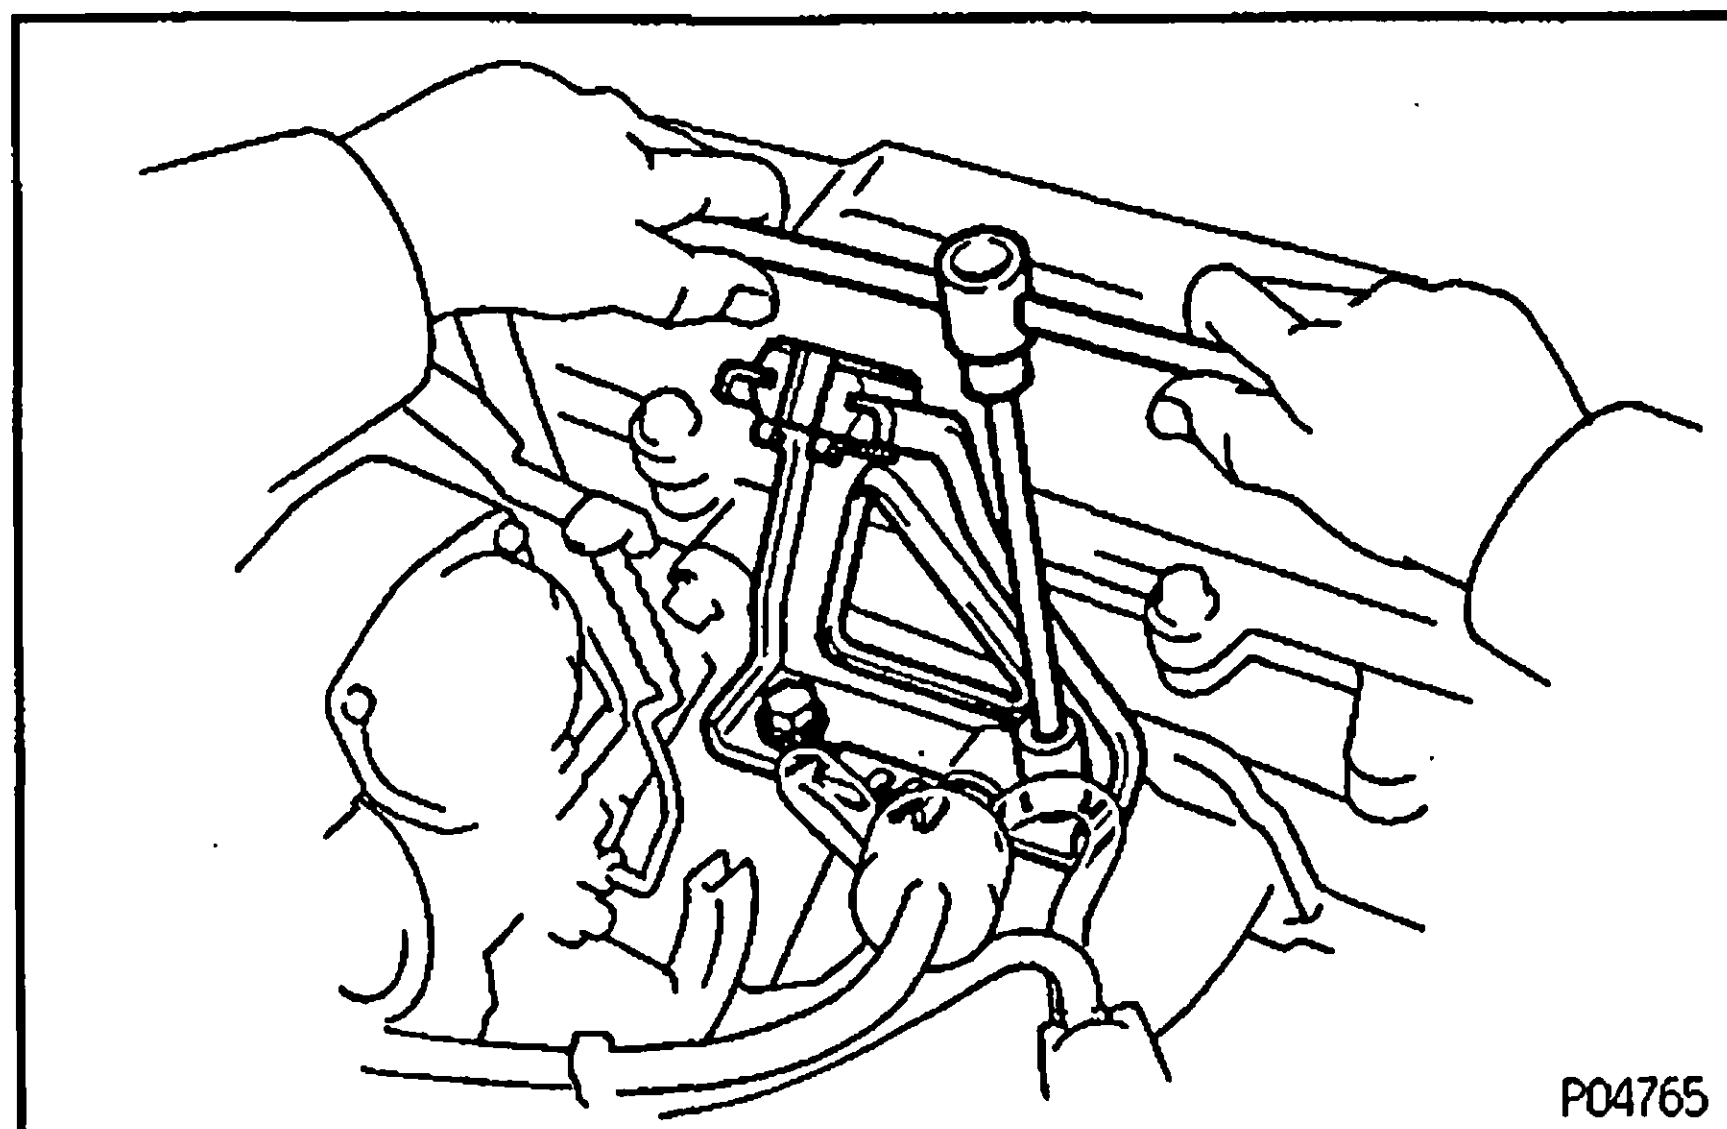**12. REMOVE ACCELERATOR CABLE BRACKET**


Remove the two bolts and accelerator cable bracket.

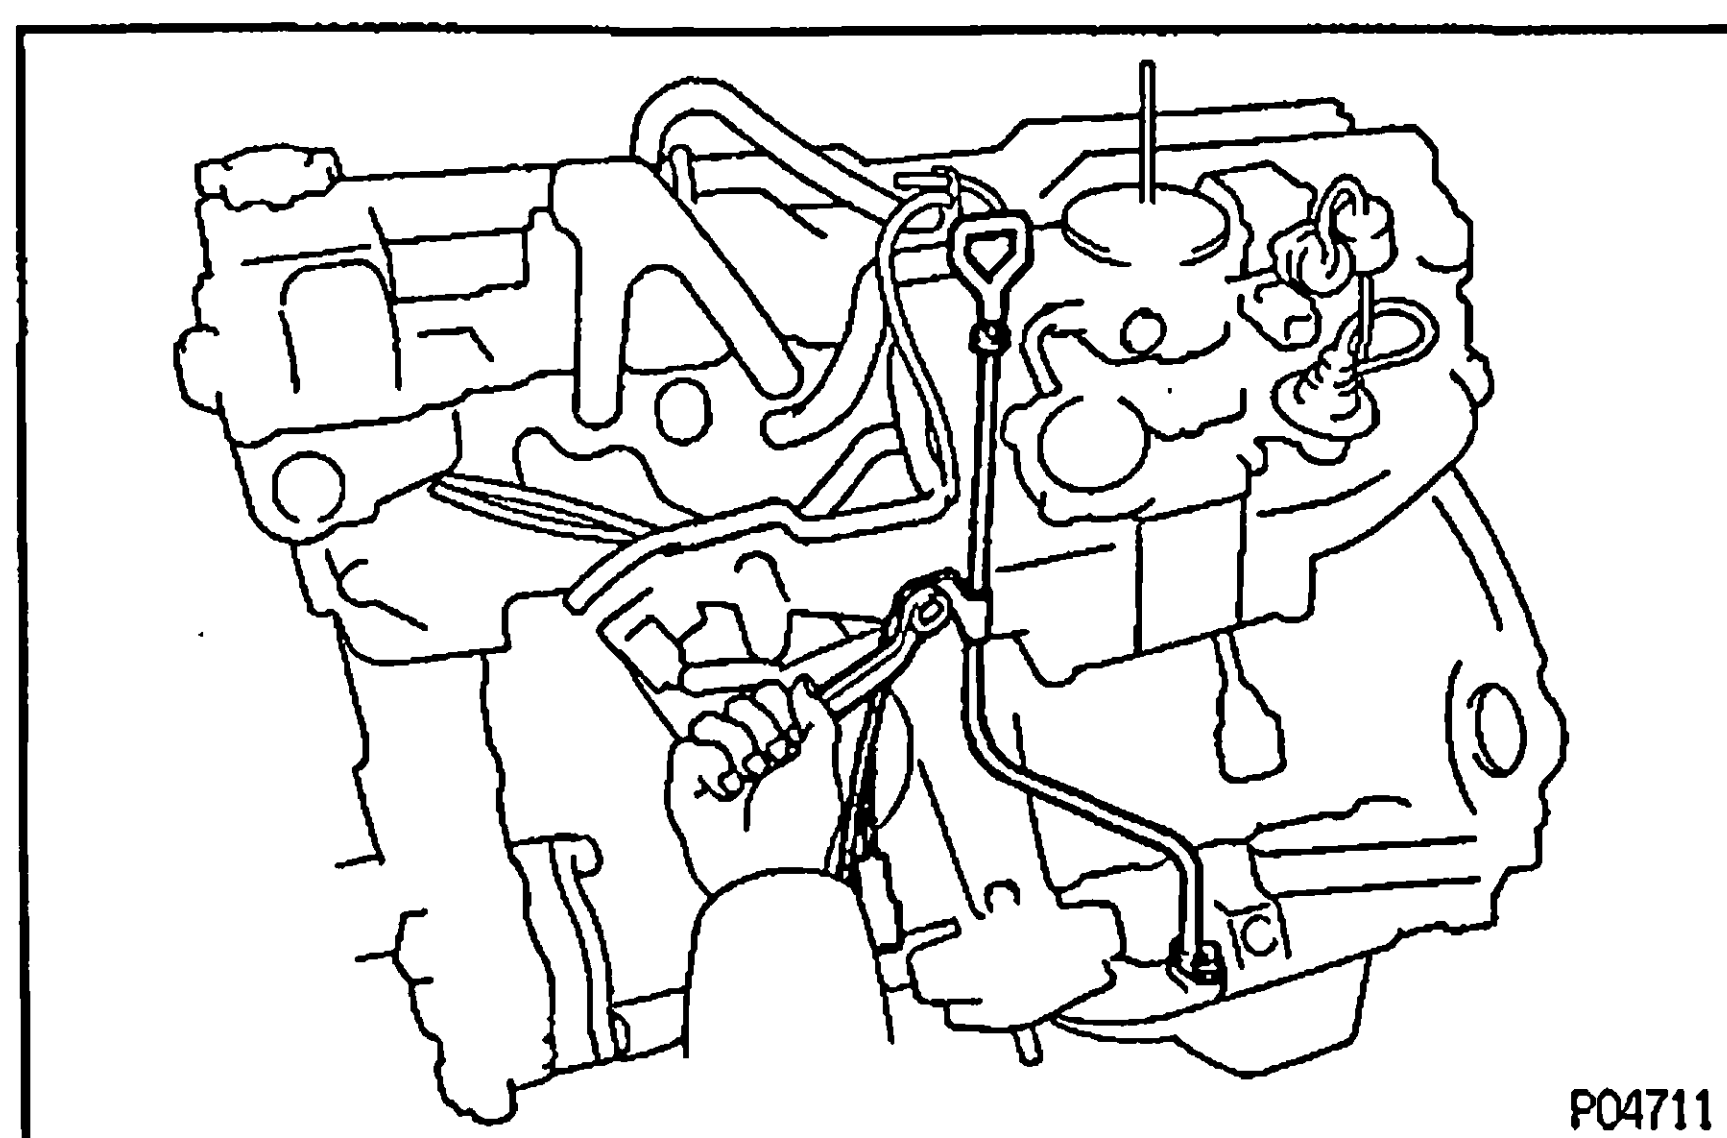**13. REMOVE OIL DIPSTICK AND GUIDE**


- (a) Remove the two mounting bolts and ground strap.
- (b) Pull out the dipstick together with dipstick guide.
- (c) Remove the O—ring from the dipstick guide.

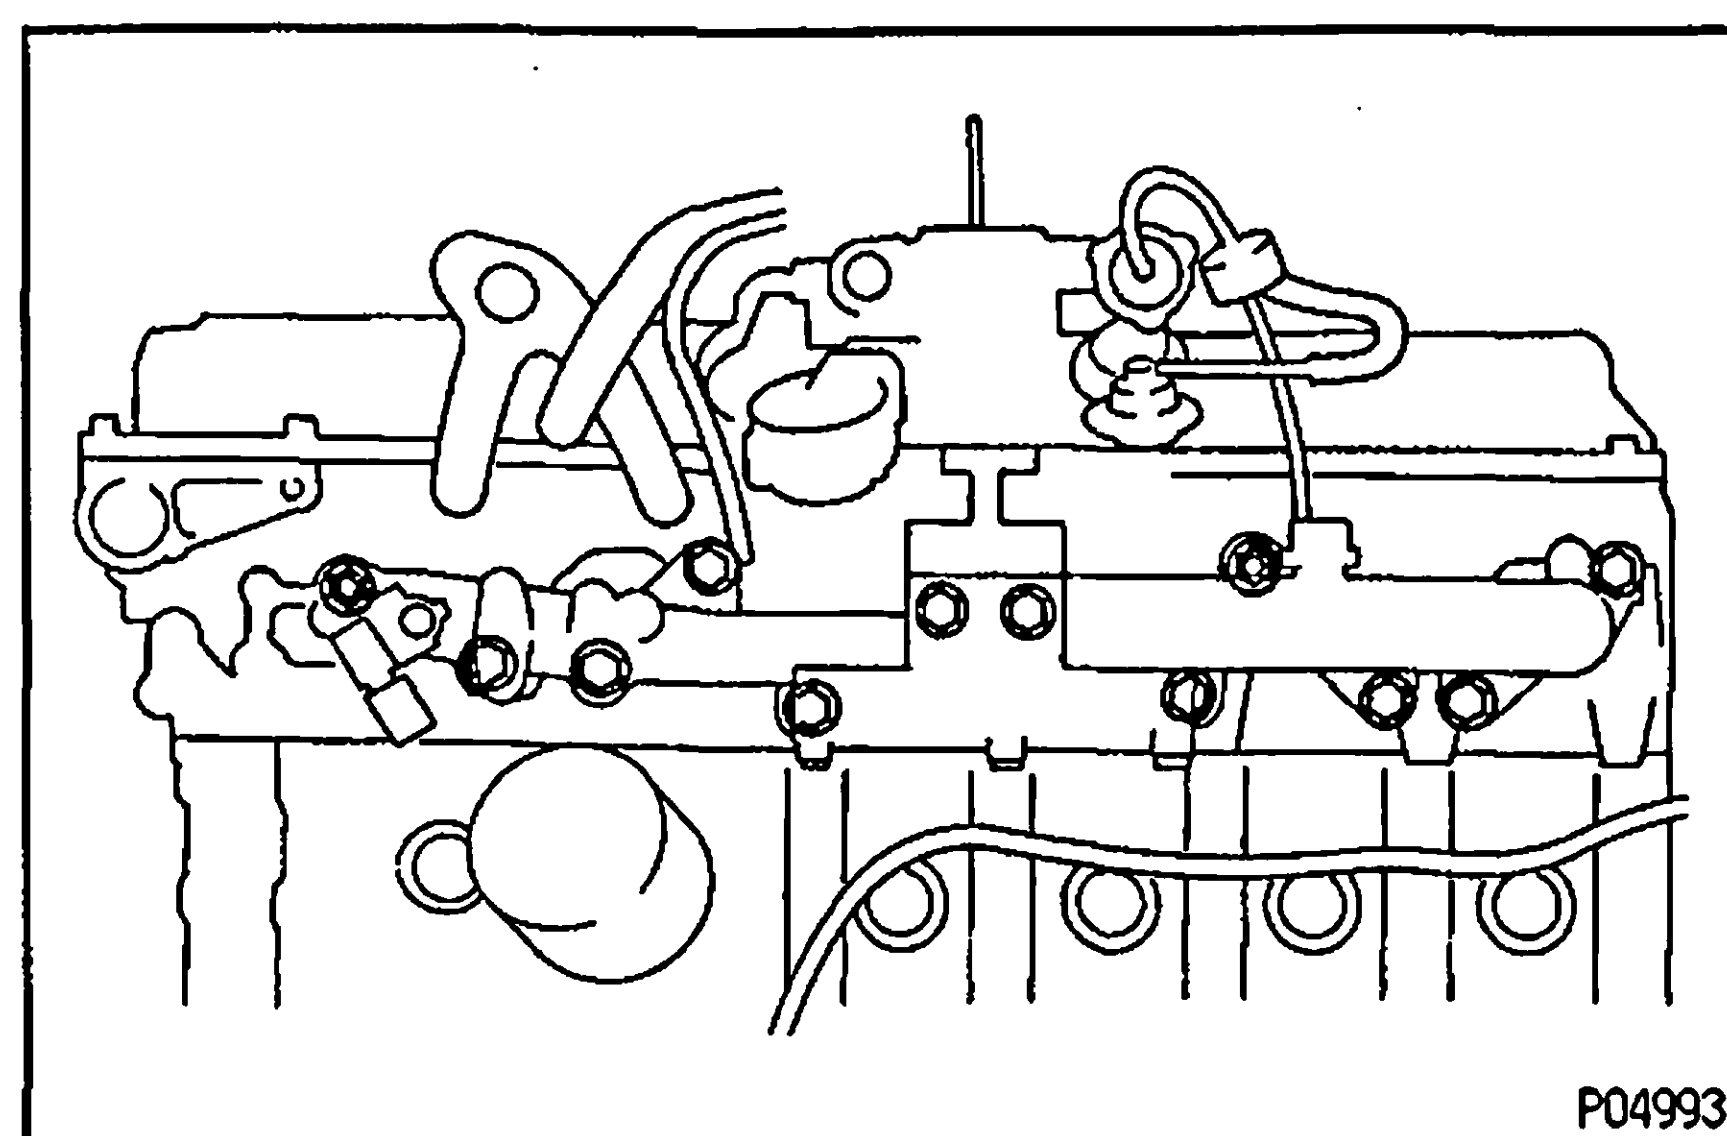**14. REMOVE INTAKE MANIFOLD WITH CARBURETOR**

Remove the six bolts, two nuts, intake manifold and gasket.

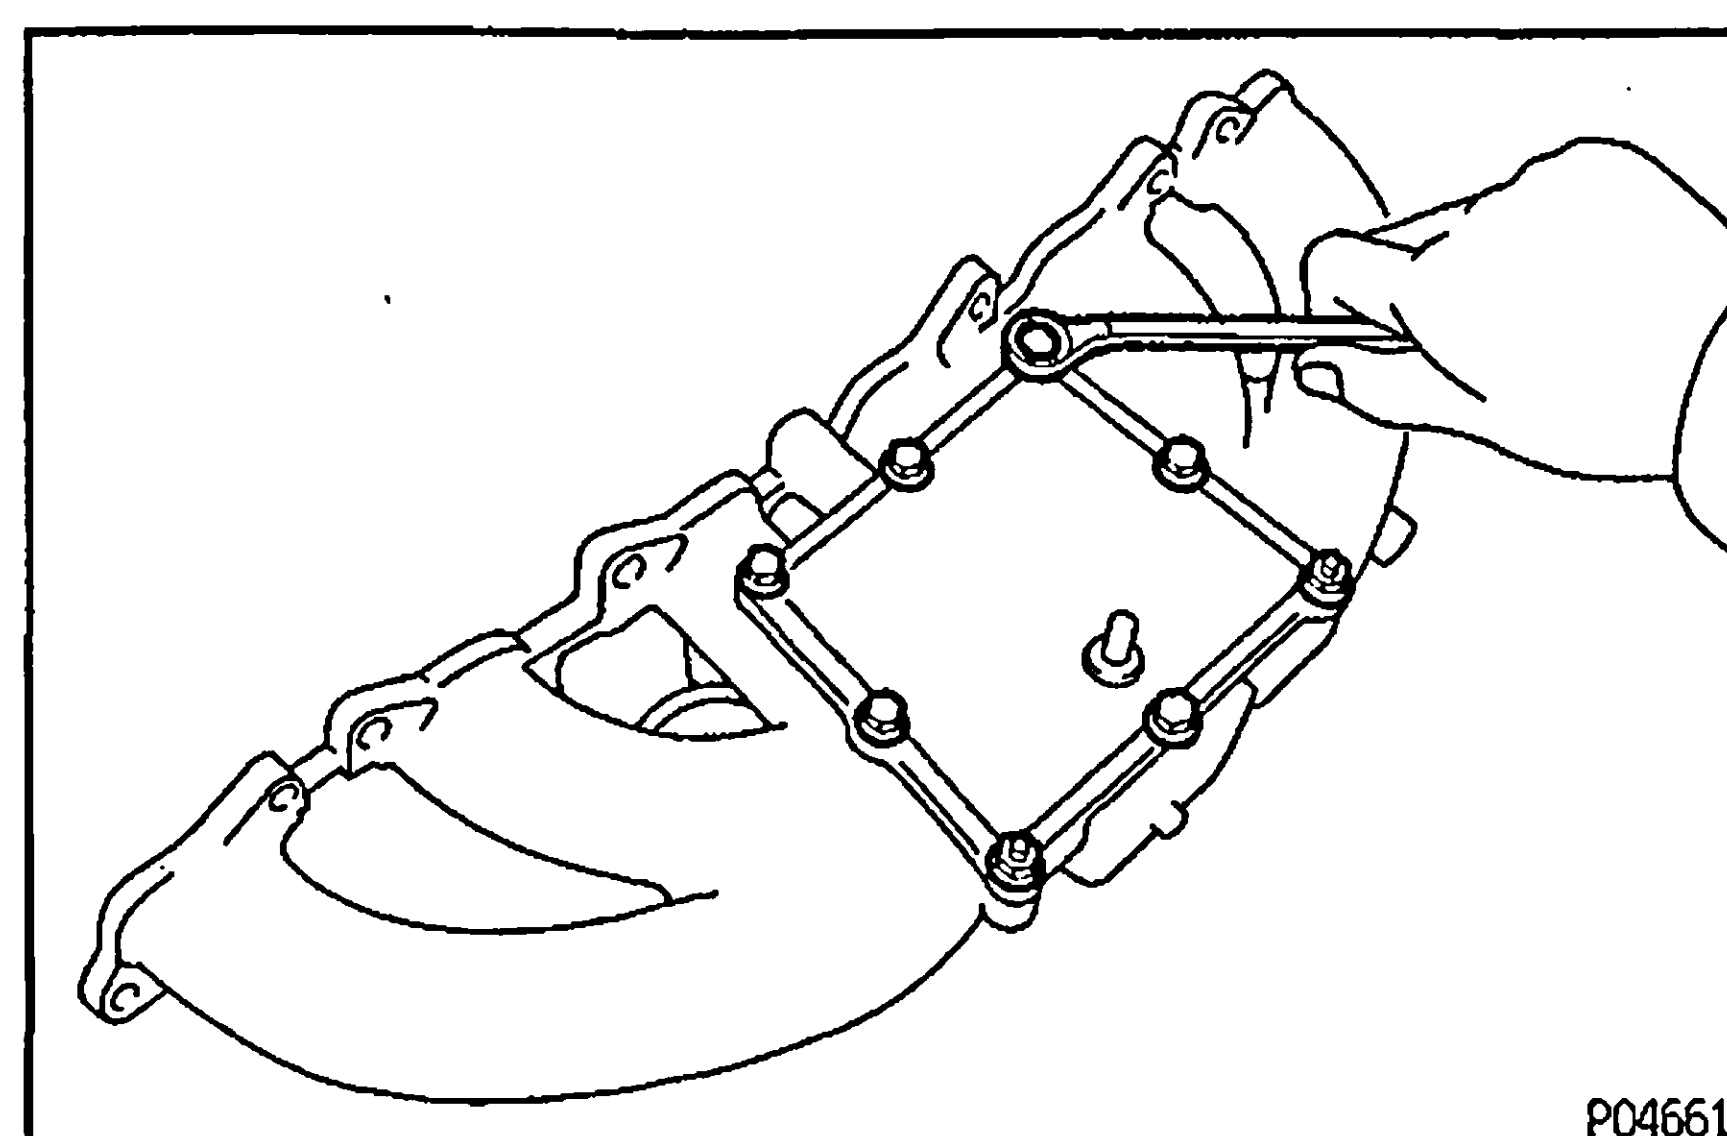**15. IF NECESSARY, REMOVE WATER BY — PASS FLANGE**

- (a) Remove the six bolts and two nuts.

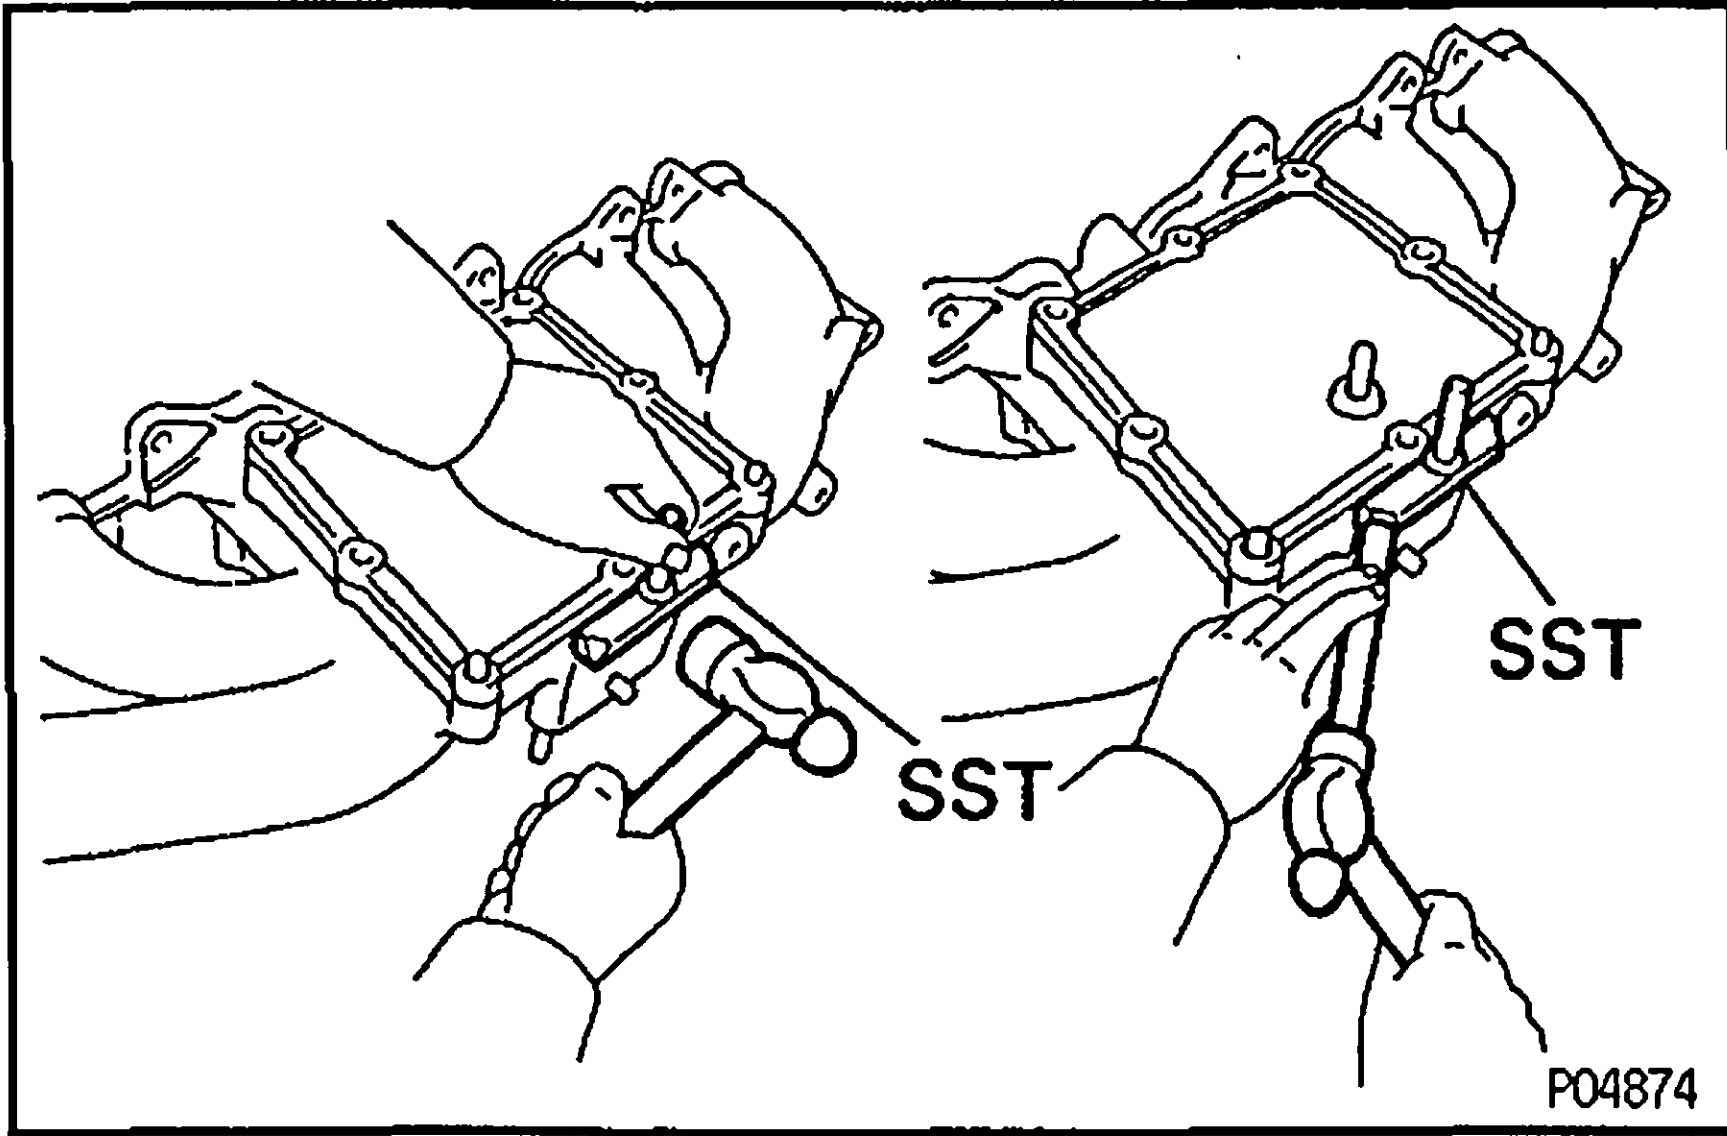


- (b) Insert the blade of SST between the intake manifold and water by-pass flange, and cut off applied sealer and remove the flange.

SST 09302-00100


NOTICE: Be careful not to damage the intake manifold and flange.

EG

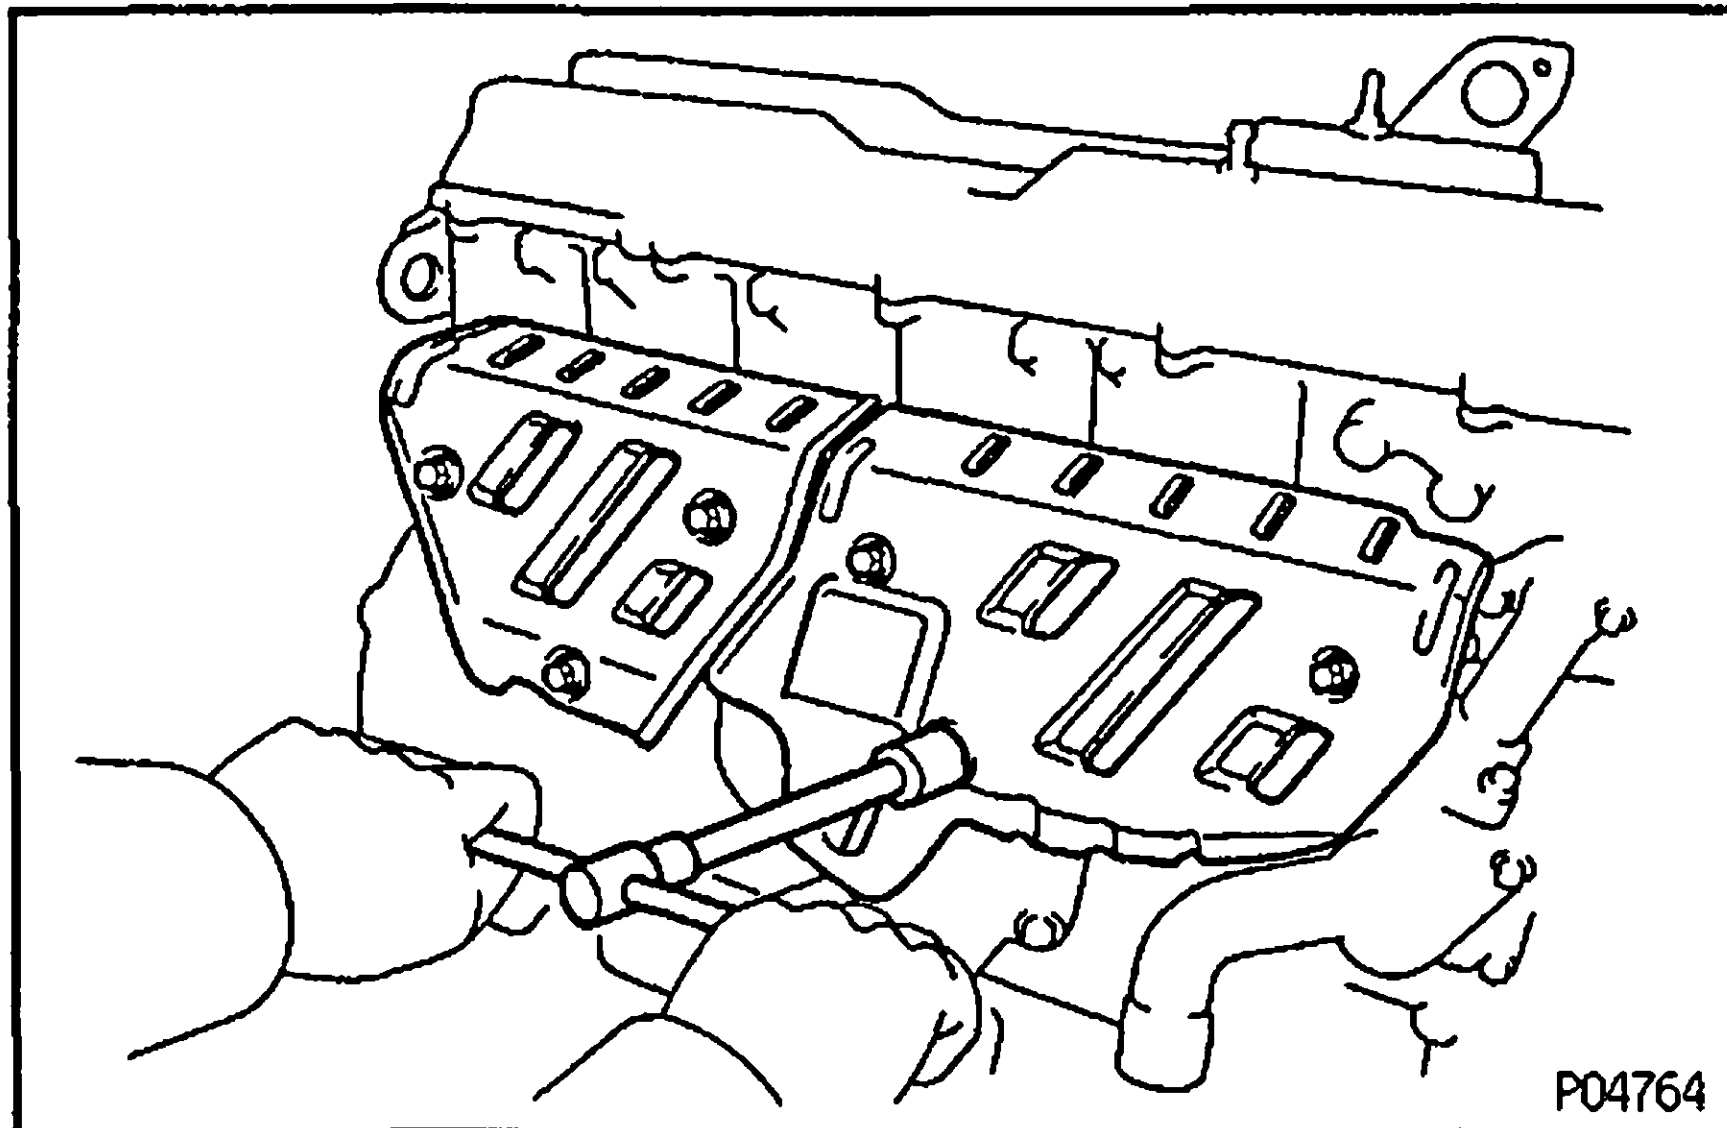


16. REMOVE NO.1 AND NO.2 EXHAUST MANIFOLDS


- (a) Remove the six bolts, No.1 heat insulator and No.2 heat insulator.

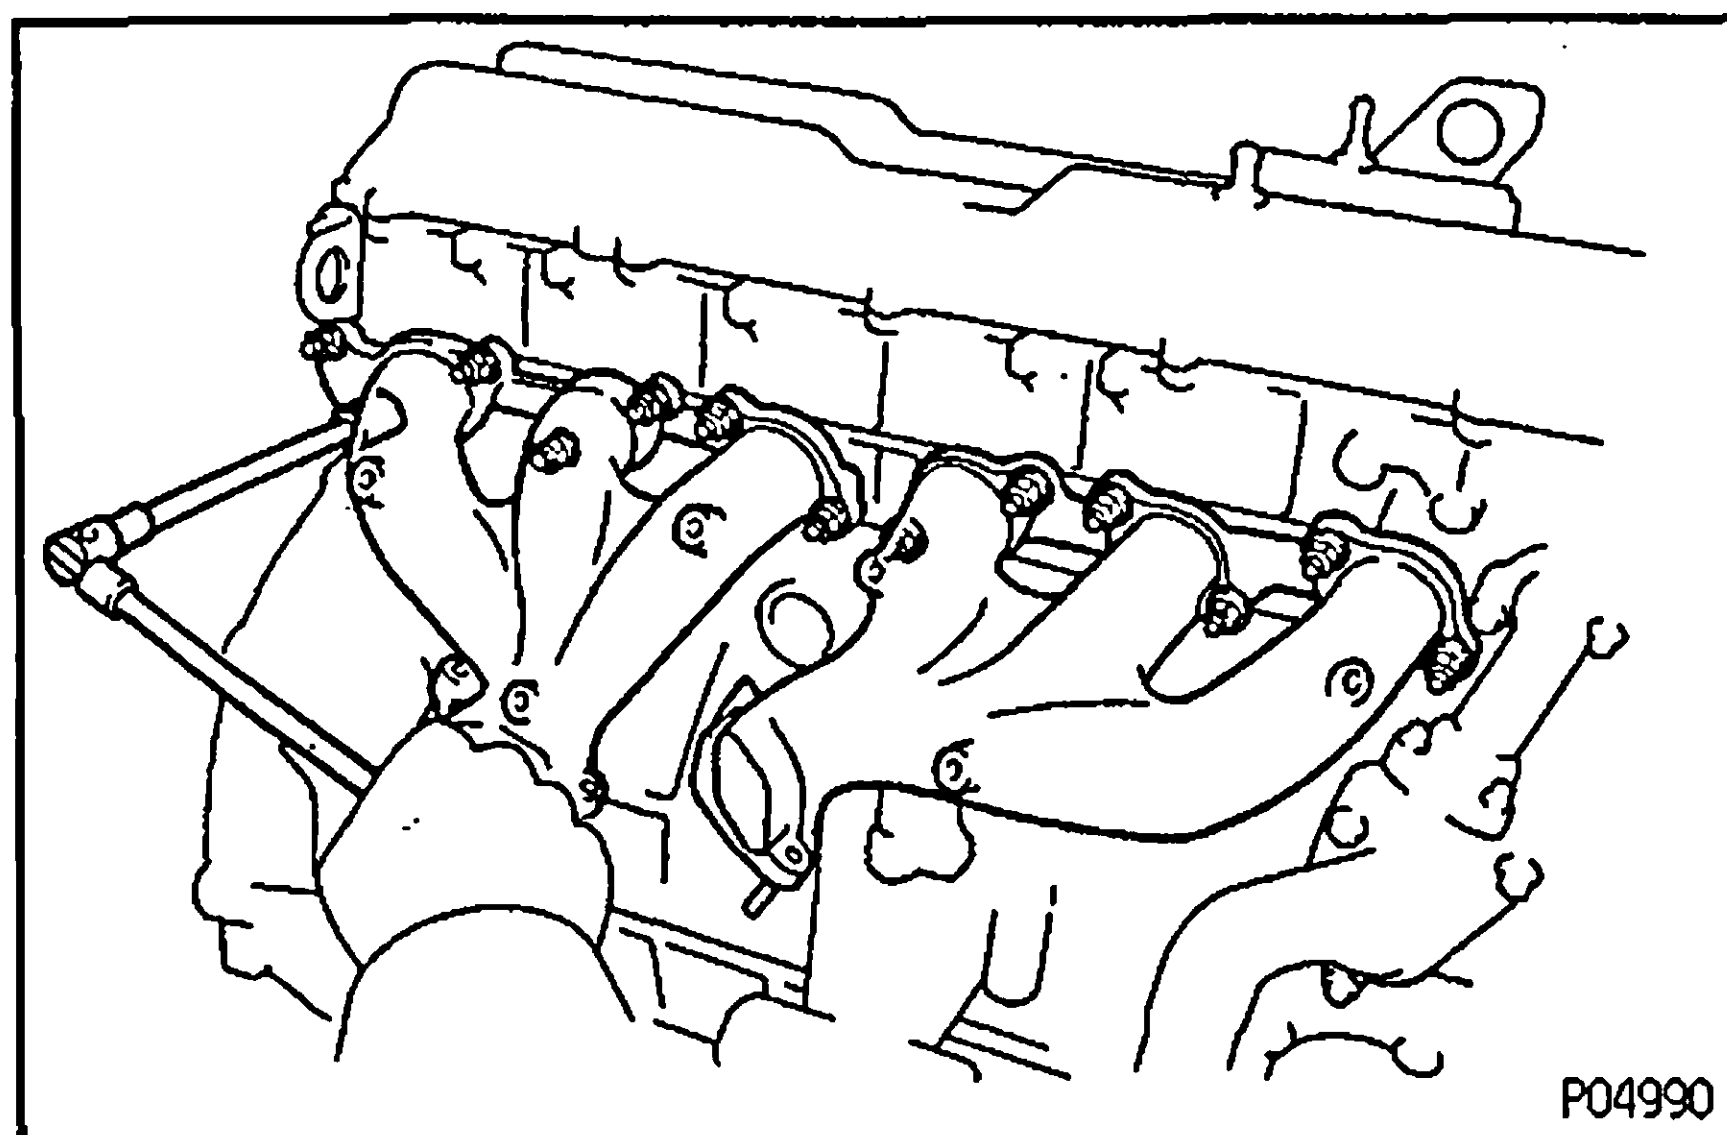

- (b) Remove the 13 nuts, No.1 exhaust manifold, No.2 exhaust manifold and two gaskets.

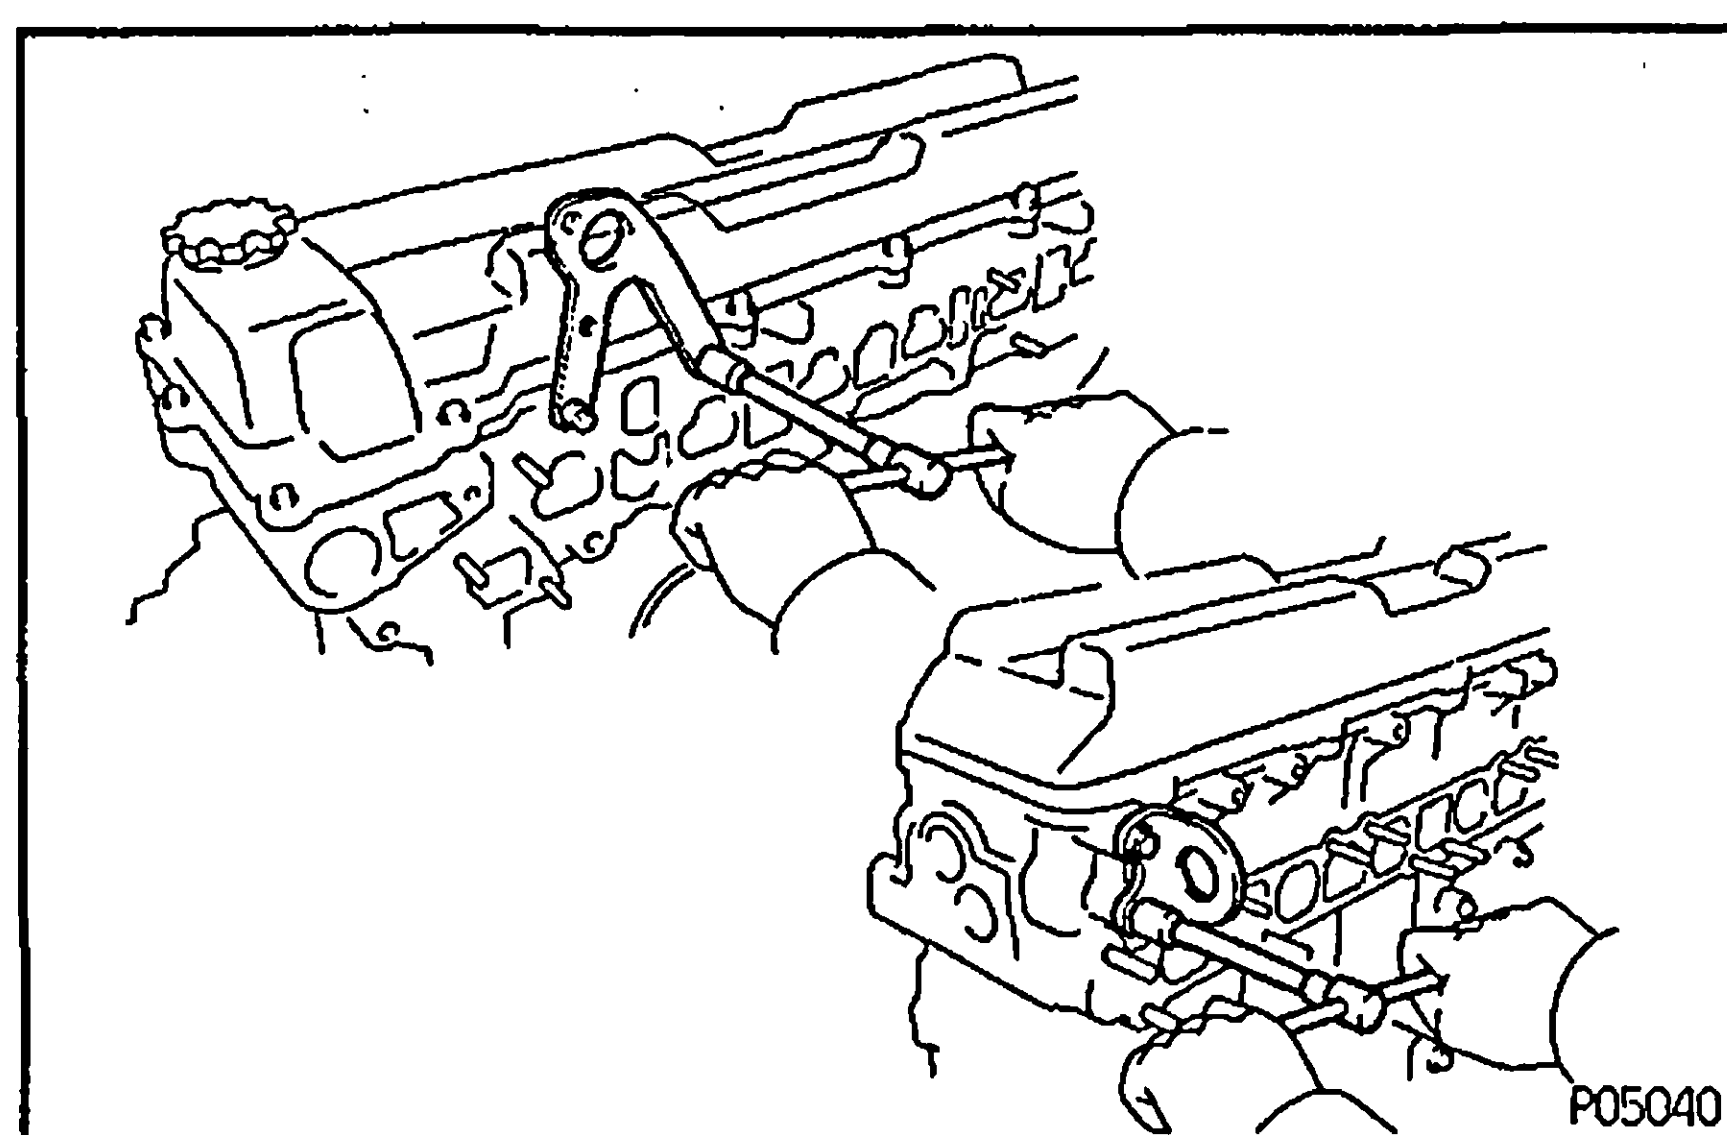


17. REMOVE NO.1 AND NO.2 ENGINE HANGERS

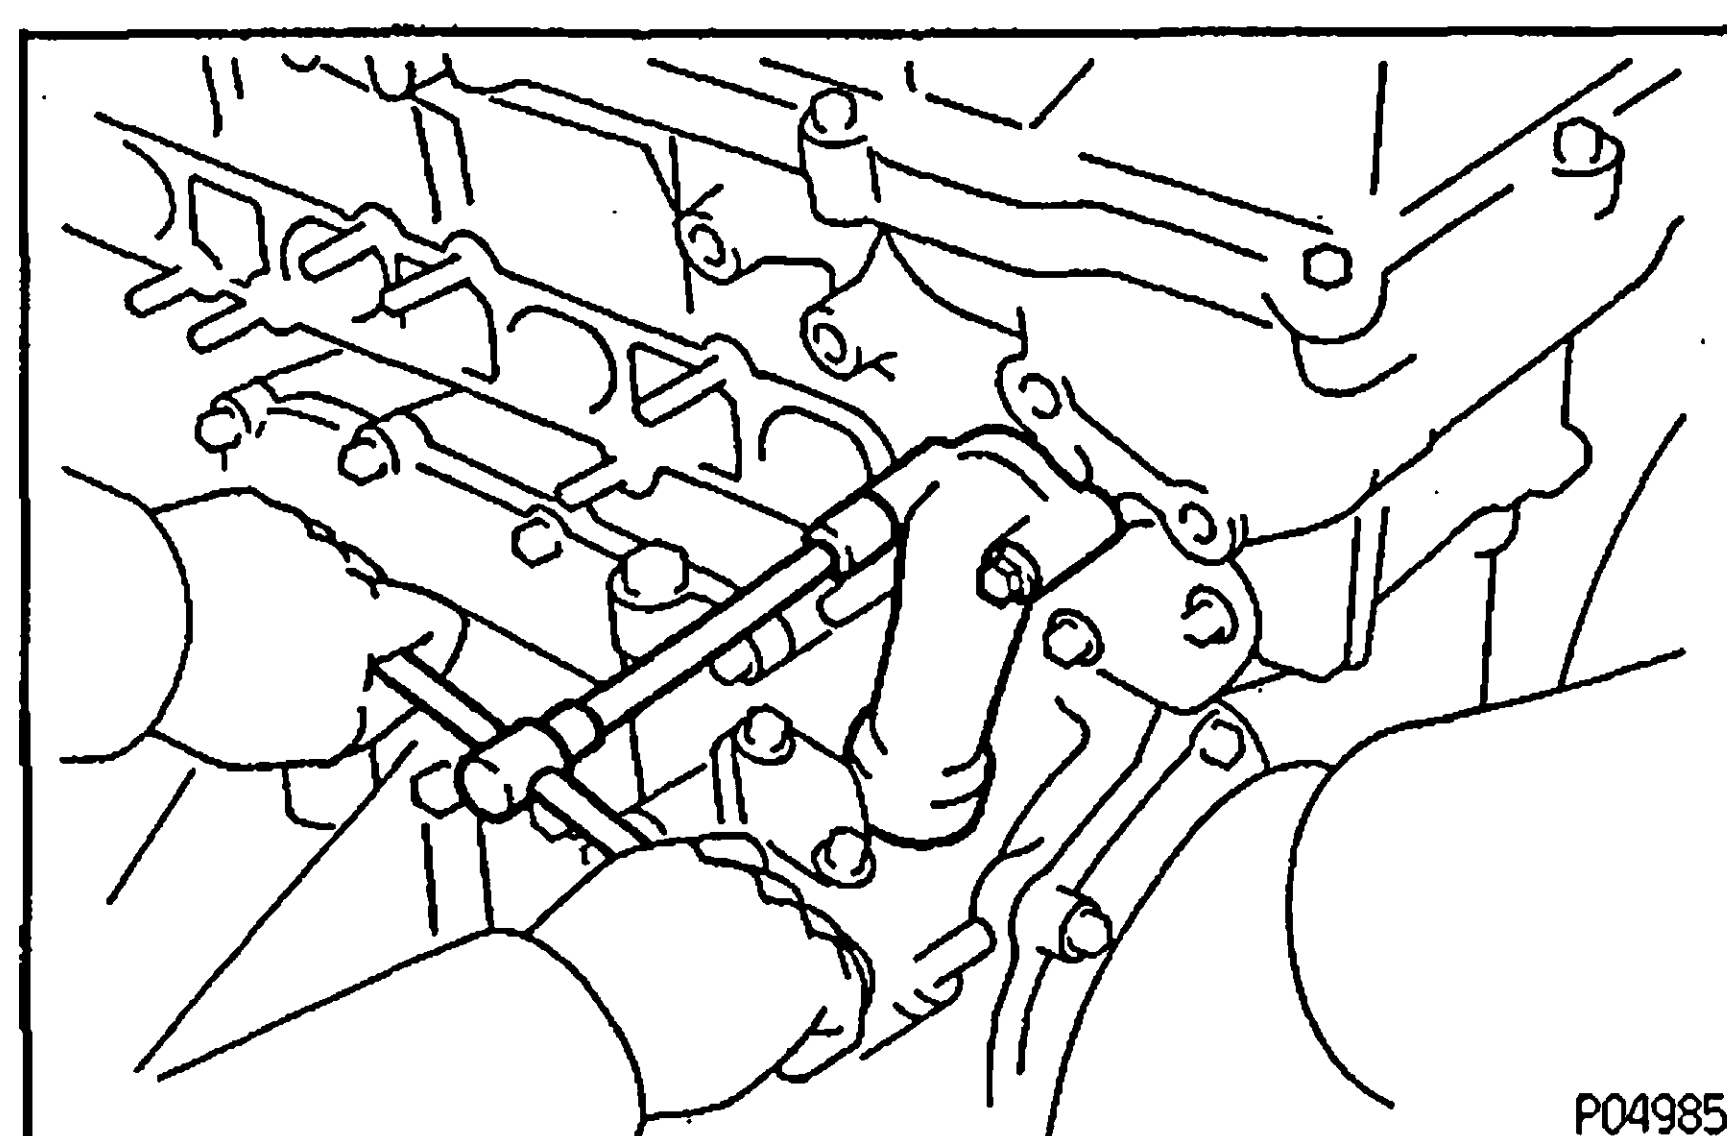


18. REMOVE WATER BY-PASS OUTLET AND PIPE

- (a) Remove the two bolts and water by-pass outlet and pipe.
- (b) Remove the three O-rings from the water by-pass outlet and pipe.


EG

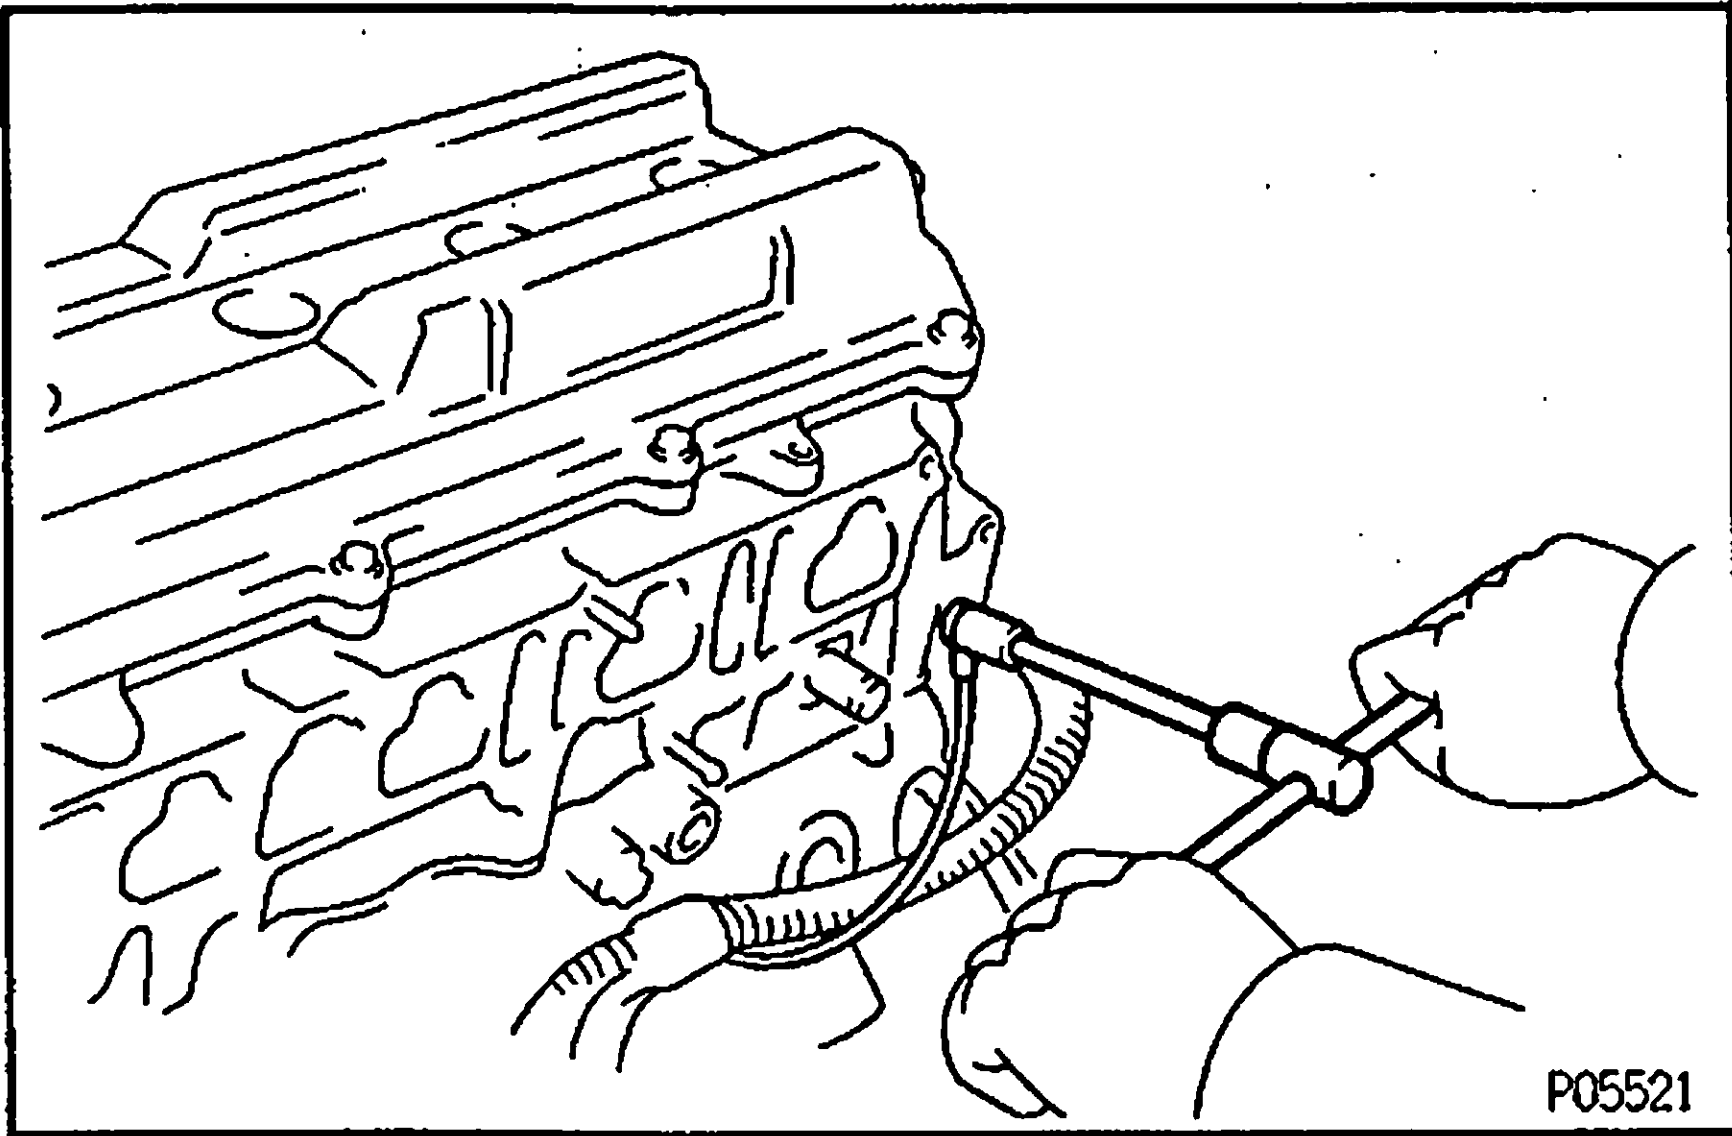**19. DISCONNECT ENGINE WIRE**


Remove the bolt and disconnect the engine wire from the cylinder head.

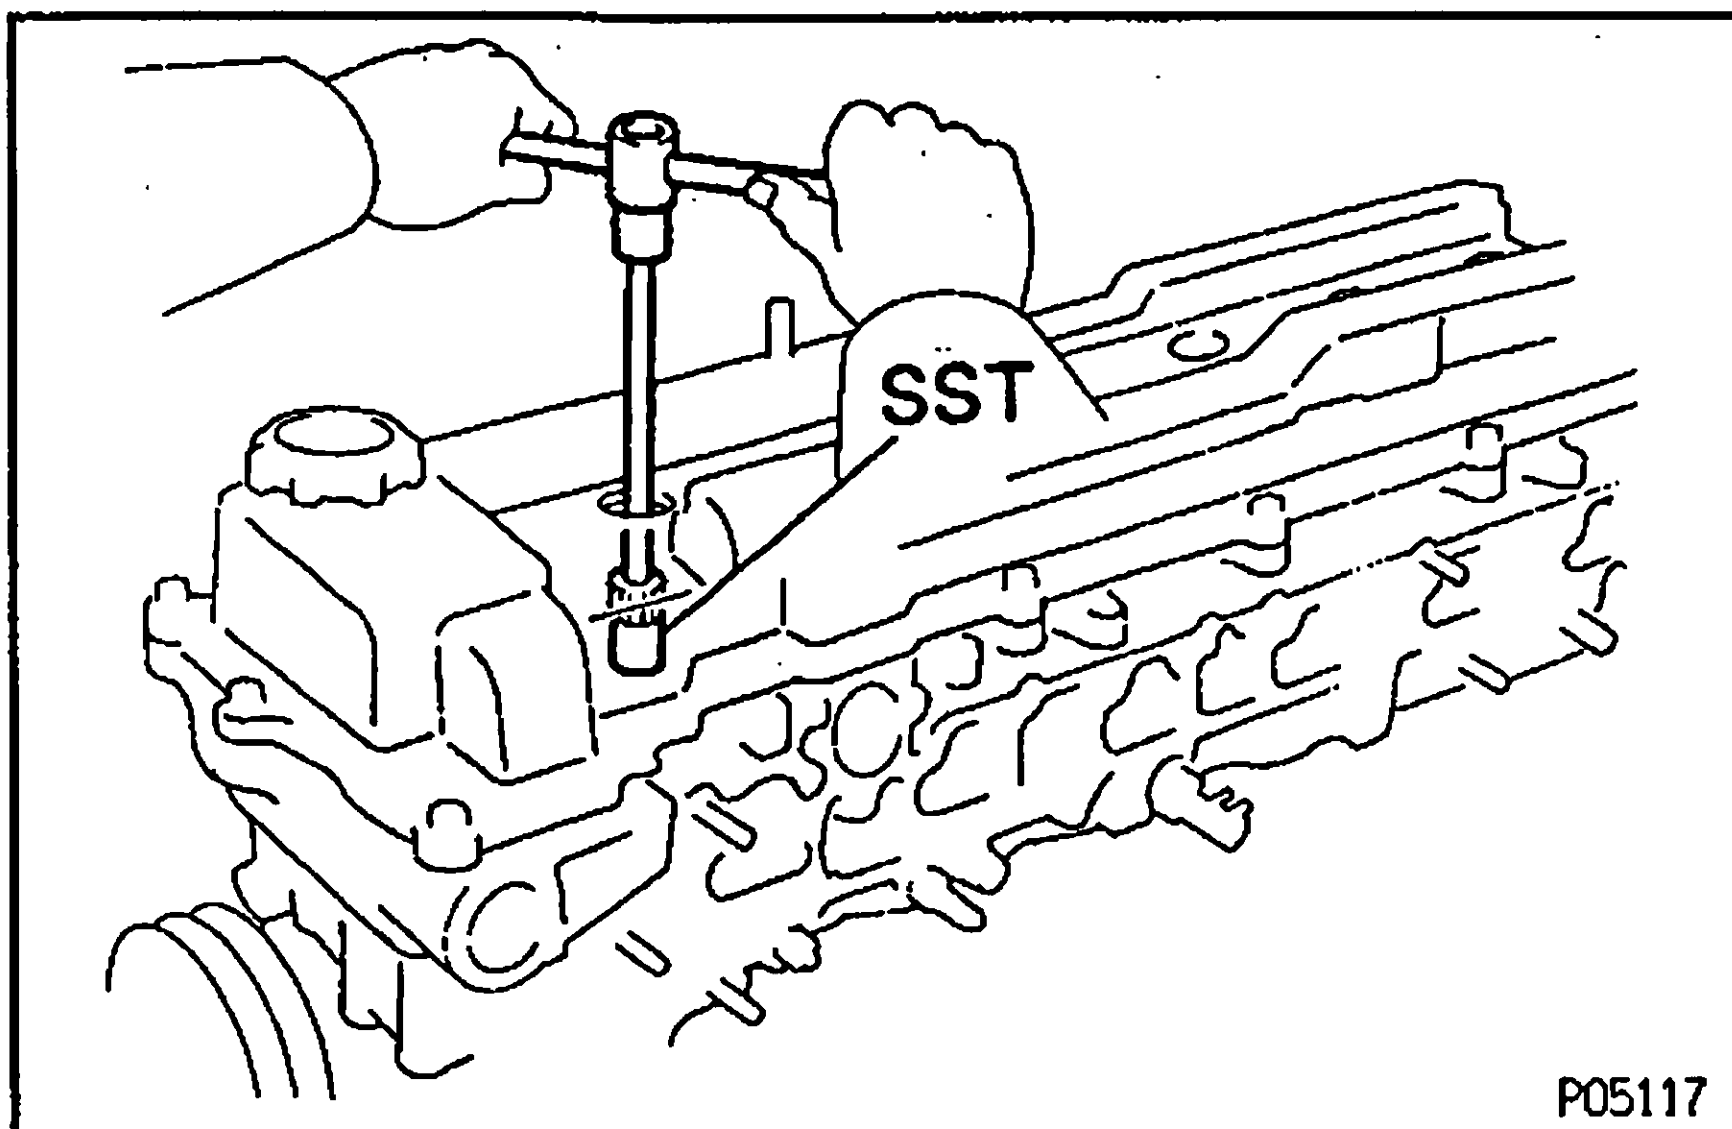**20. REMOVE SPARK PLUGS**


Using SST, remove the spark plug.
SST 09155-16100

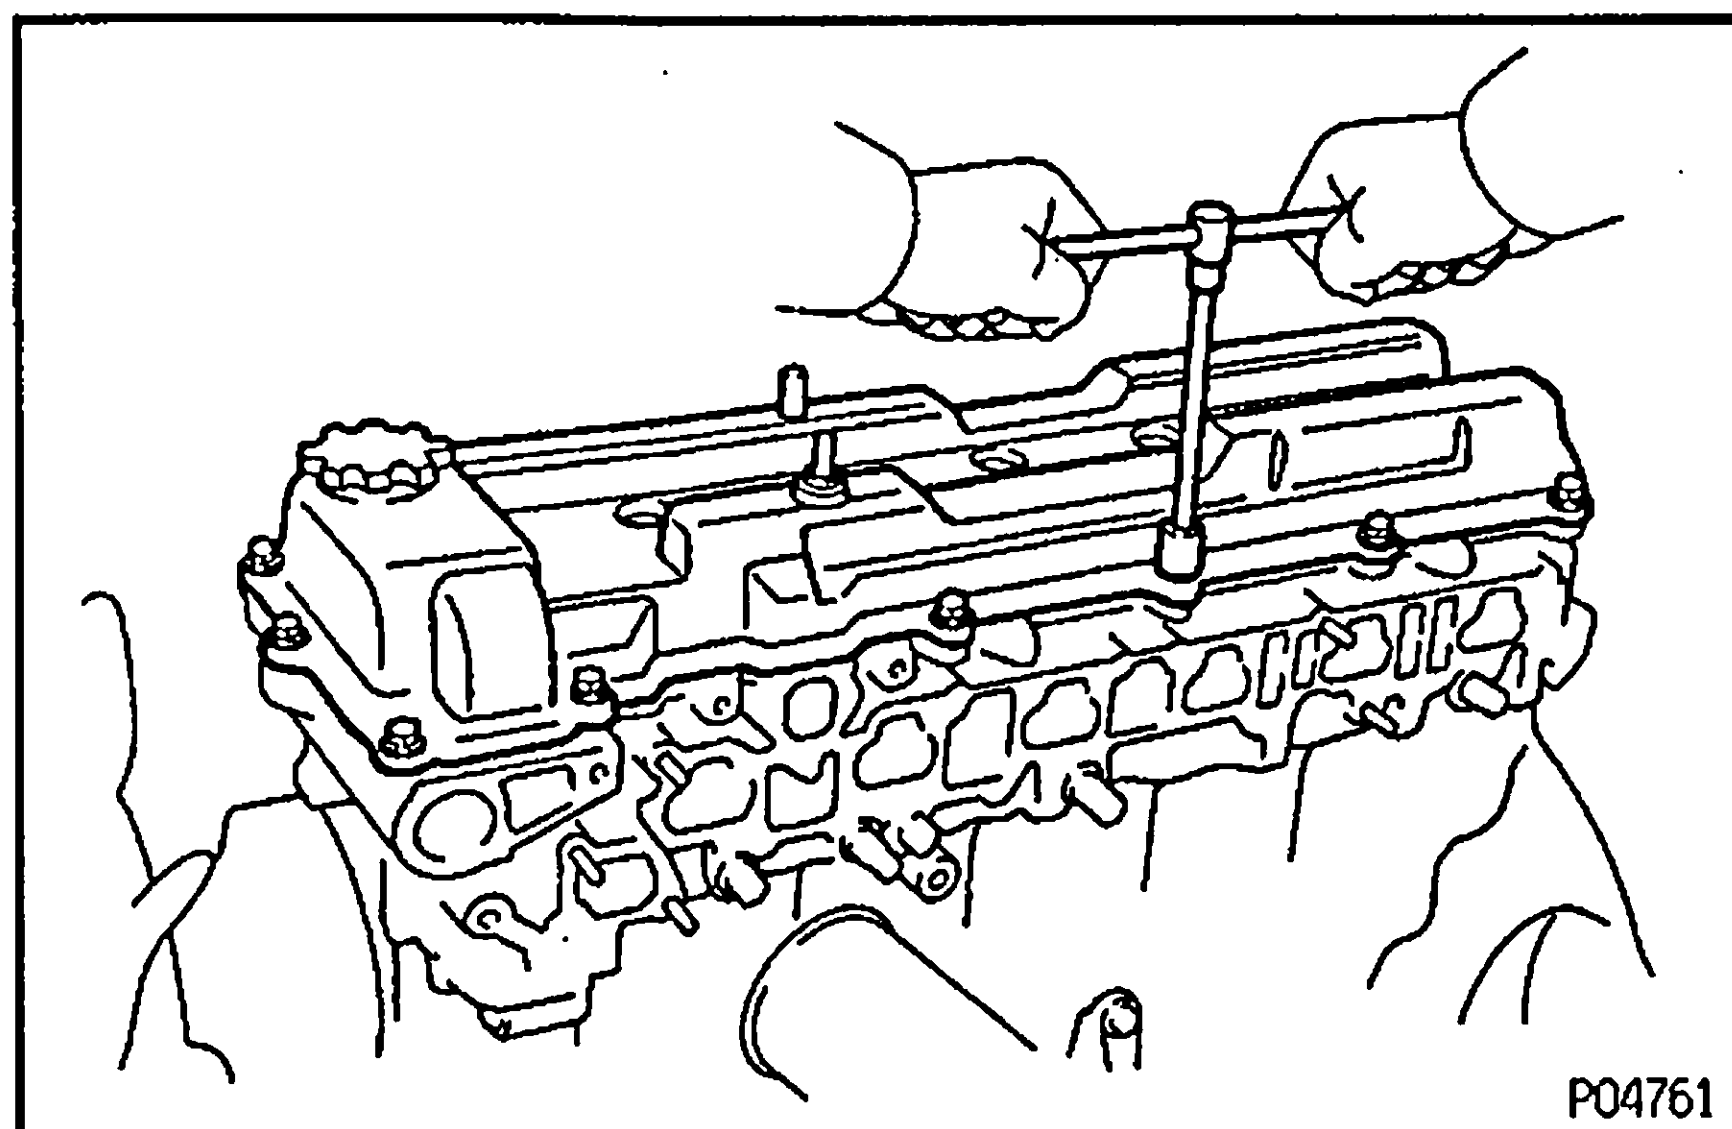**21. REMOVE CYLINDER HEAD COVER**


Remove the 13 bolts, cylinder head cover and gasket.

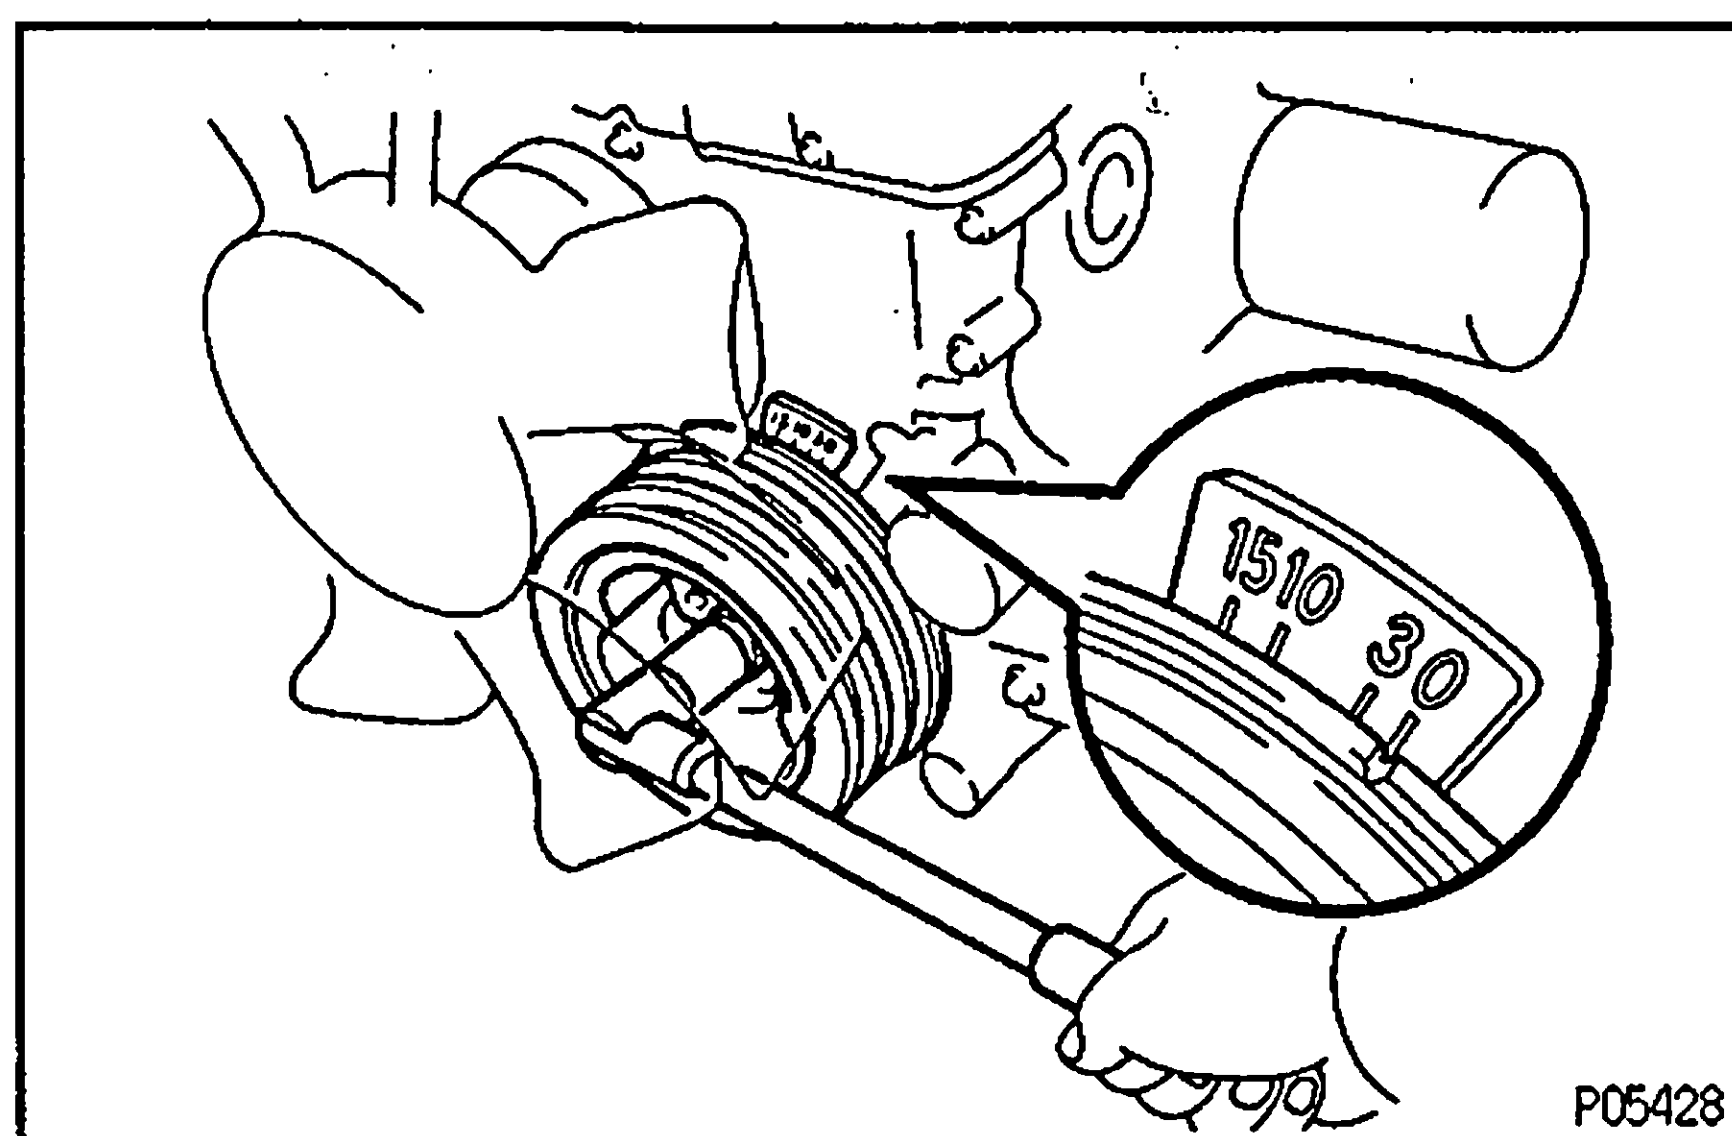**22. SET NO.1 CYLINDER TO TDC/COMPRESSION**

- (a) Turn the crankshaft pulley and align its groove with the "0" mark on the timing chain cover.

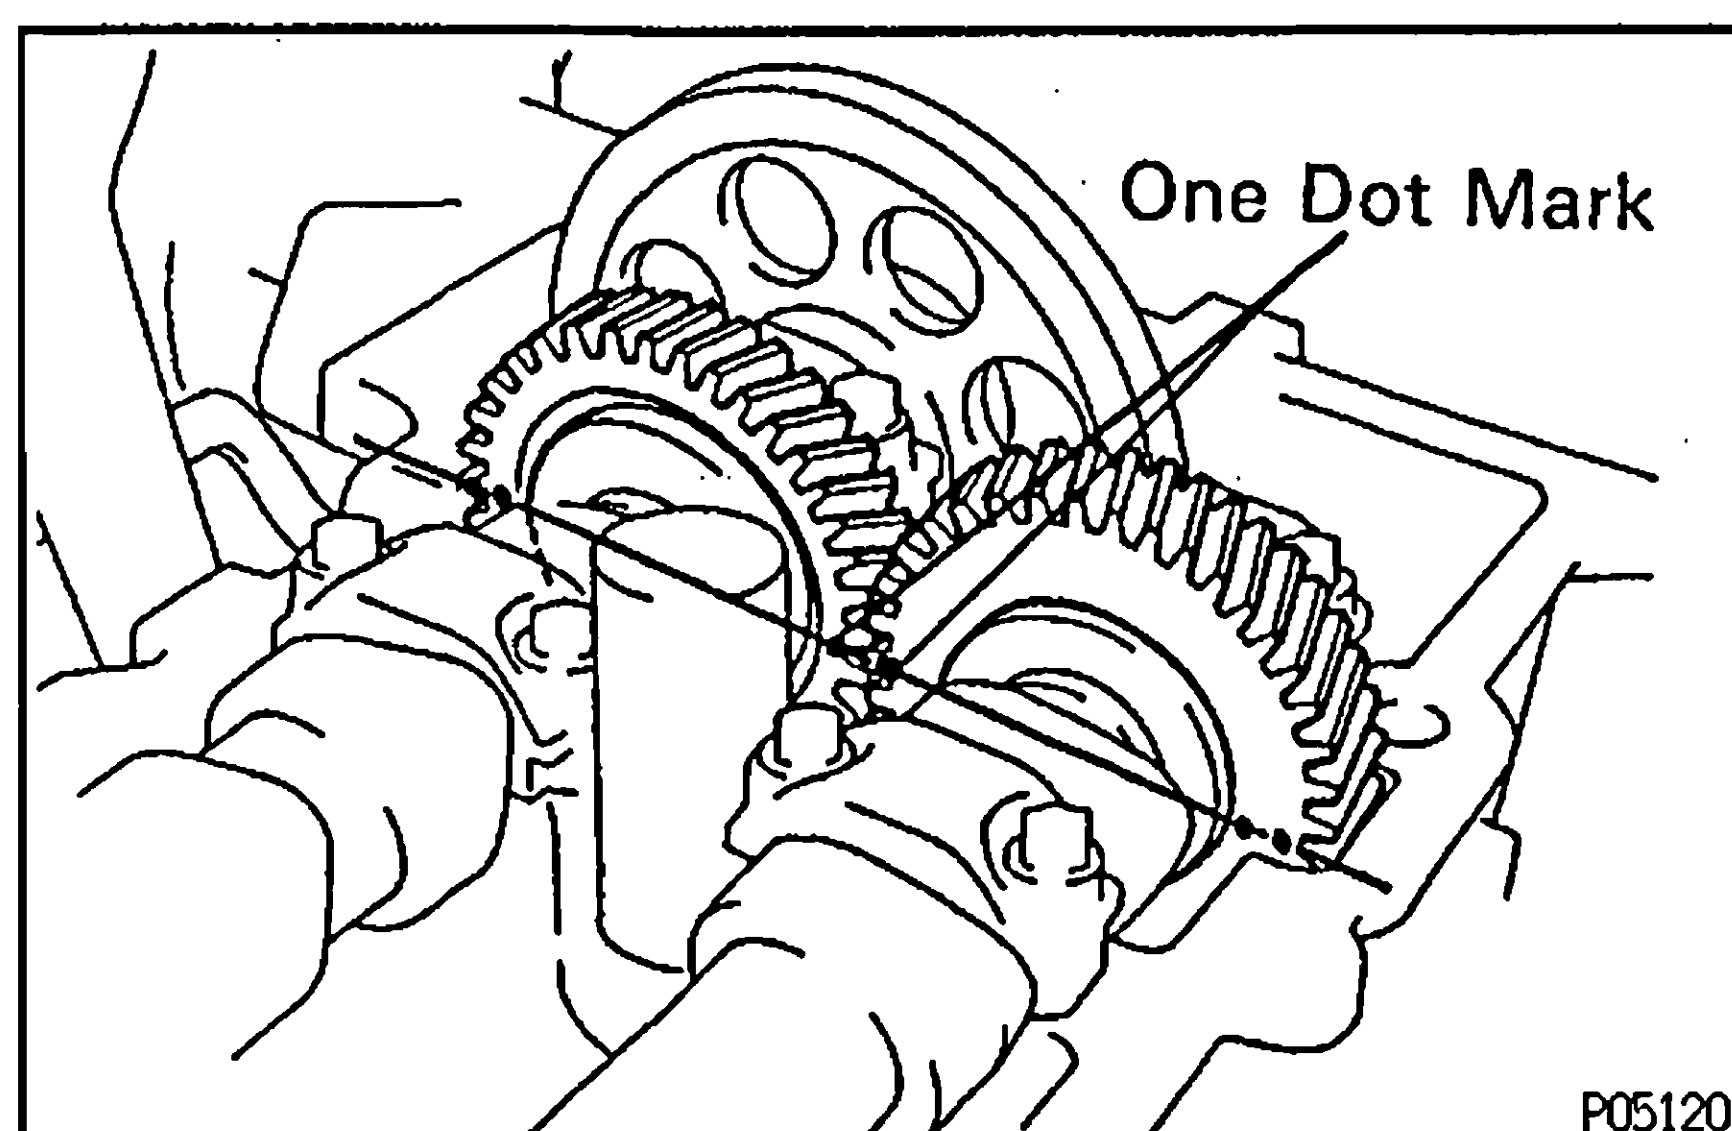


- (b) Check that the timing marks (one and two dots) of the camshaft drive and driven gears are in straight line on the cylinder head surface as shown in the illustration. If not, turn the crankshaft one revolution (360°) and align the marks as above.

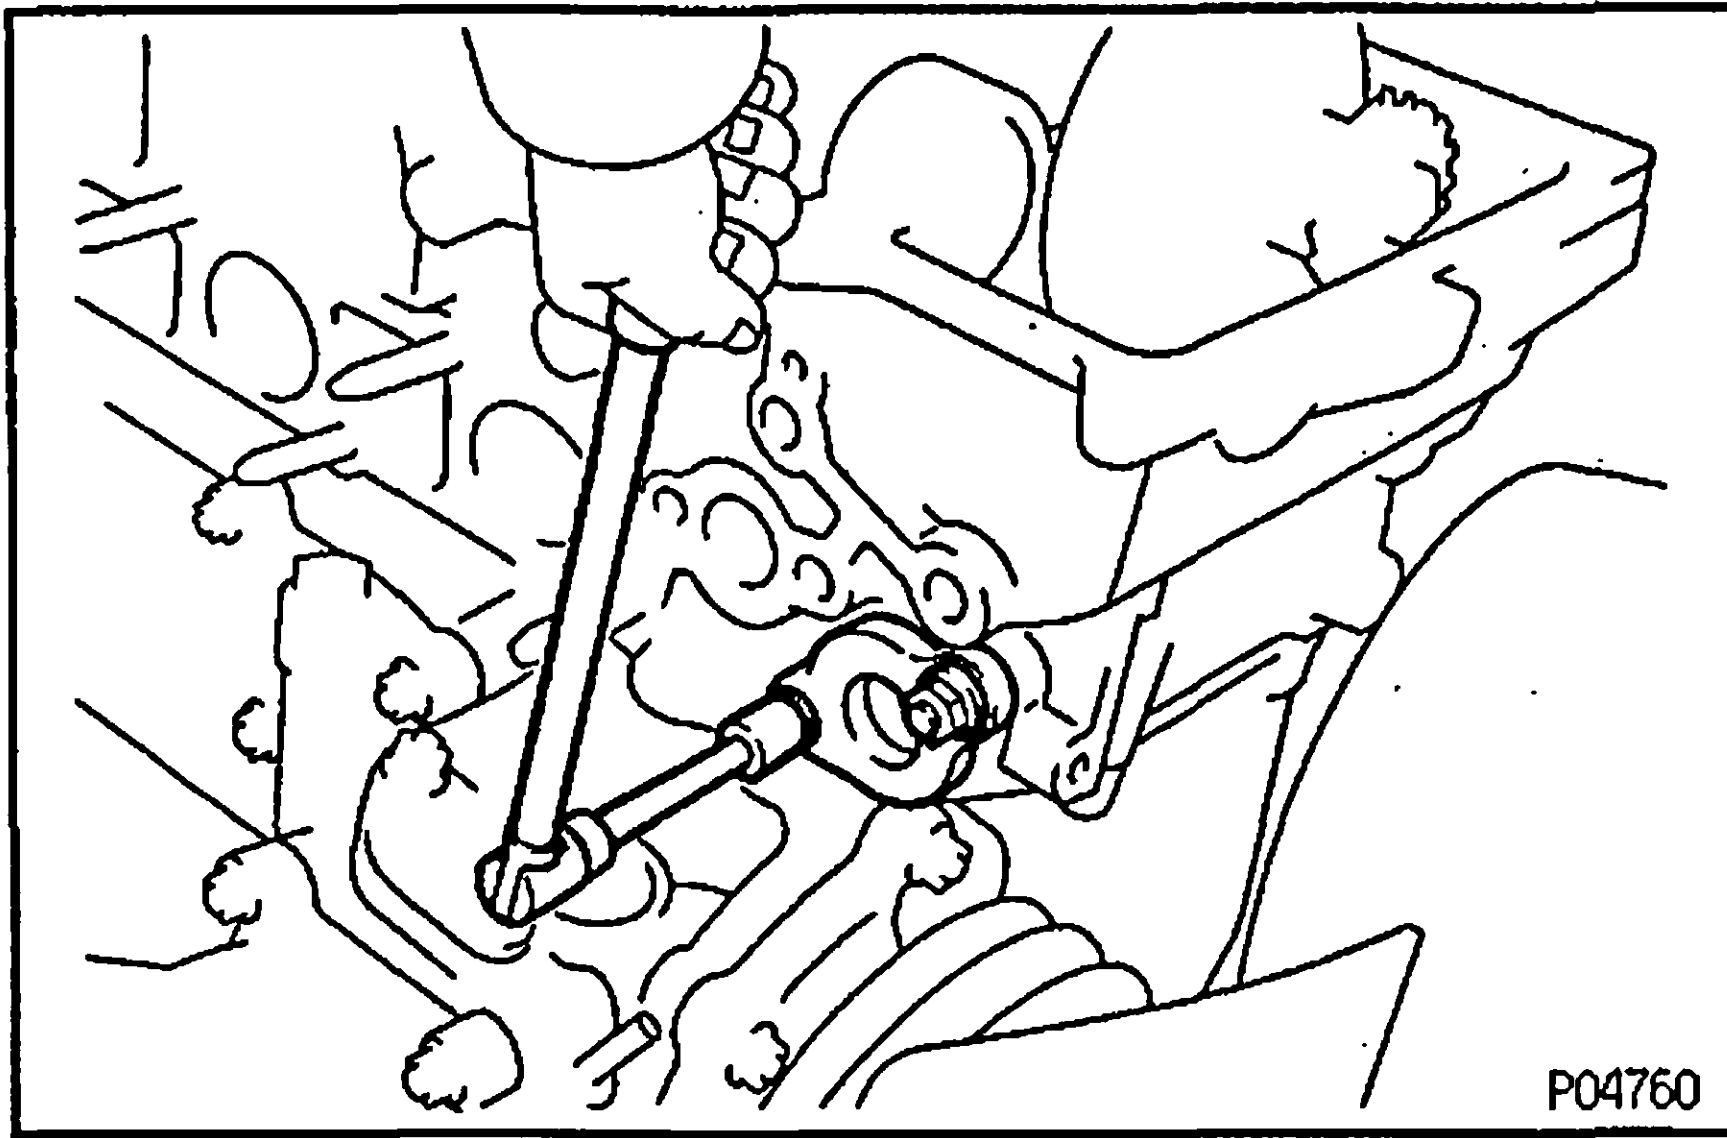
**23. REMOVE CHAIN TENSIONER**

Remove the two nuts, chain tensioner and gasket.


EG

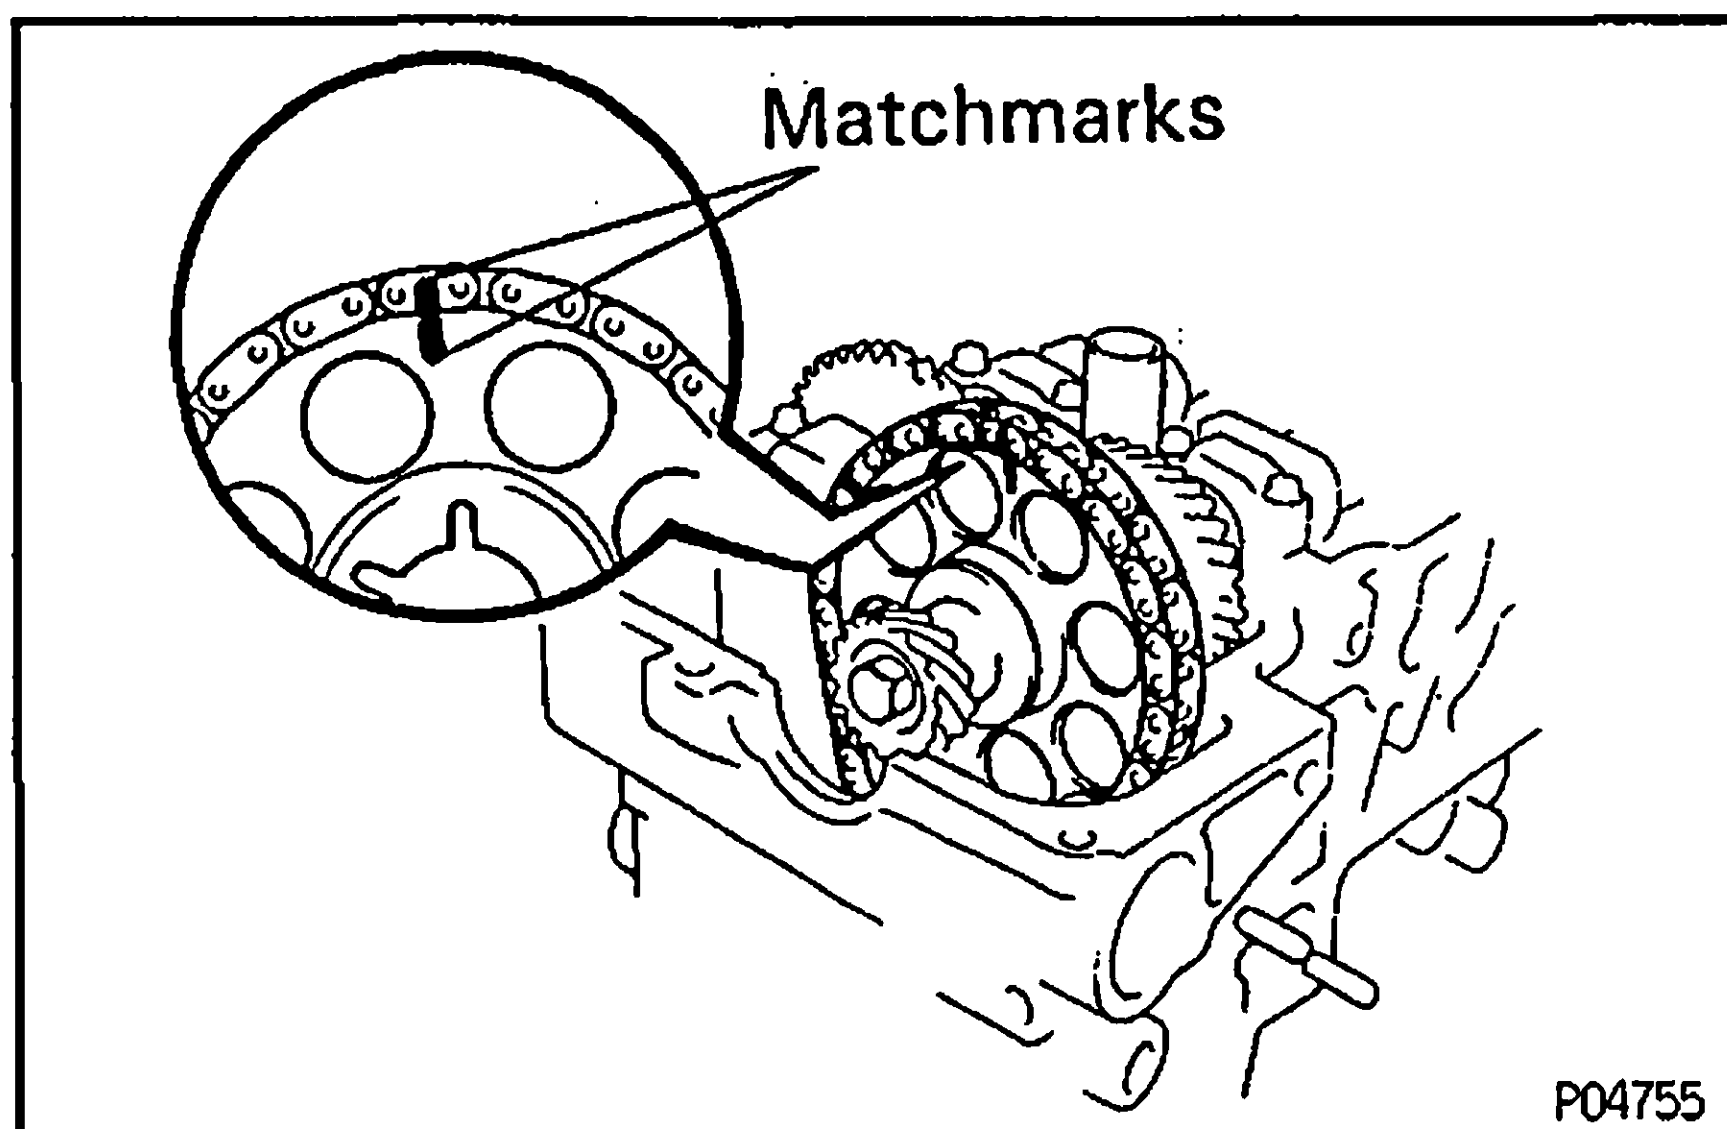**24. REMOVE CAMSHAFT TIMING GEAR**

- (a) Remove the half-circular plug.
- (b) Place the matchmarks on the camshaft timing gear and timing chain.

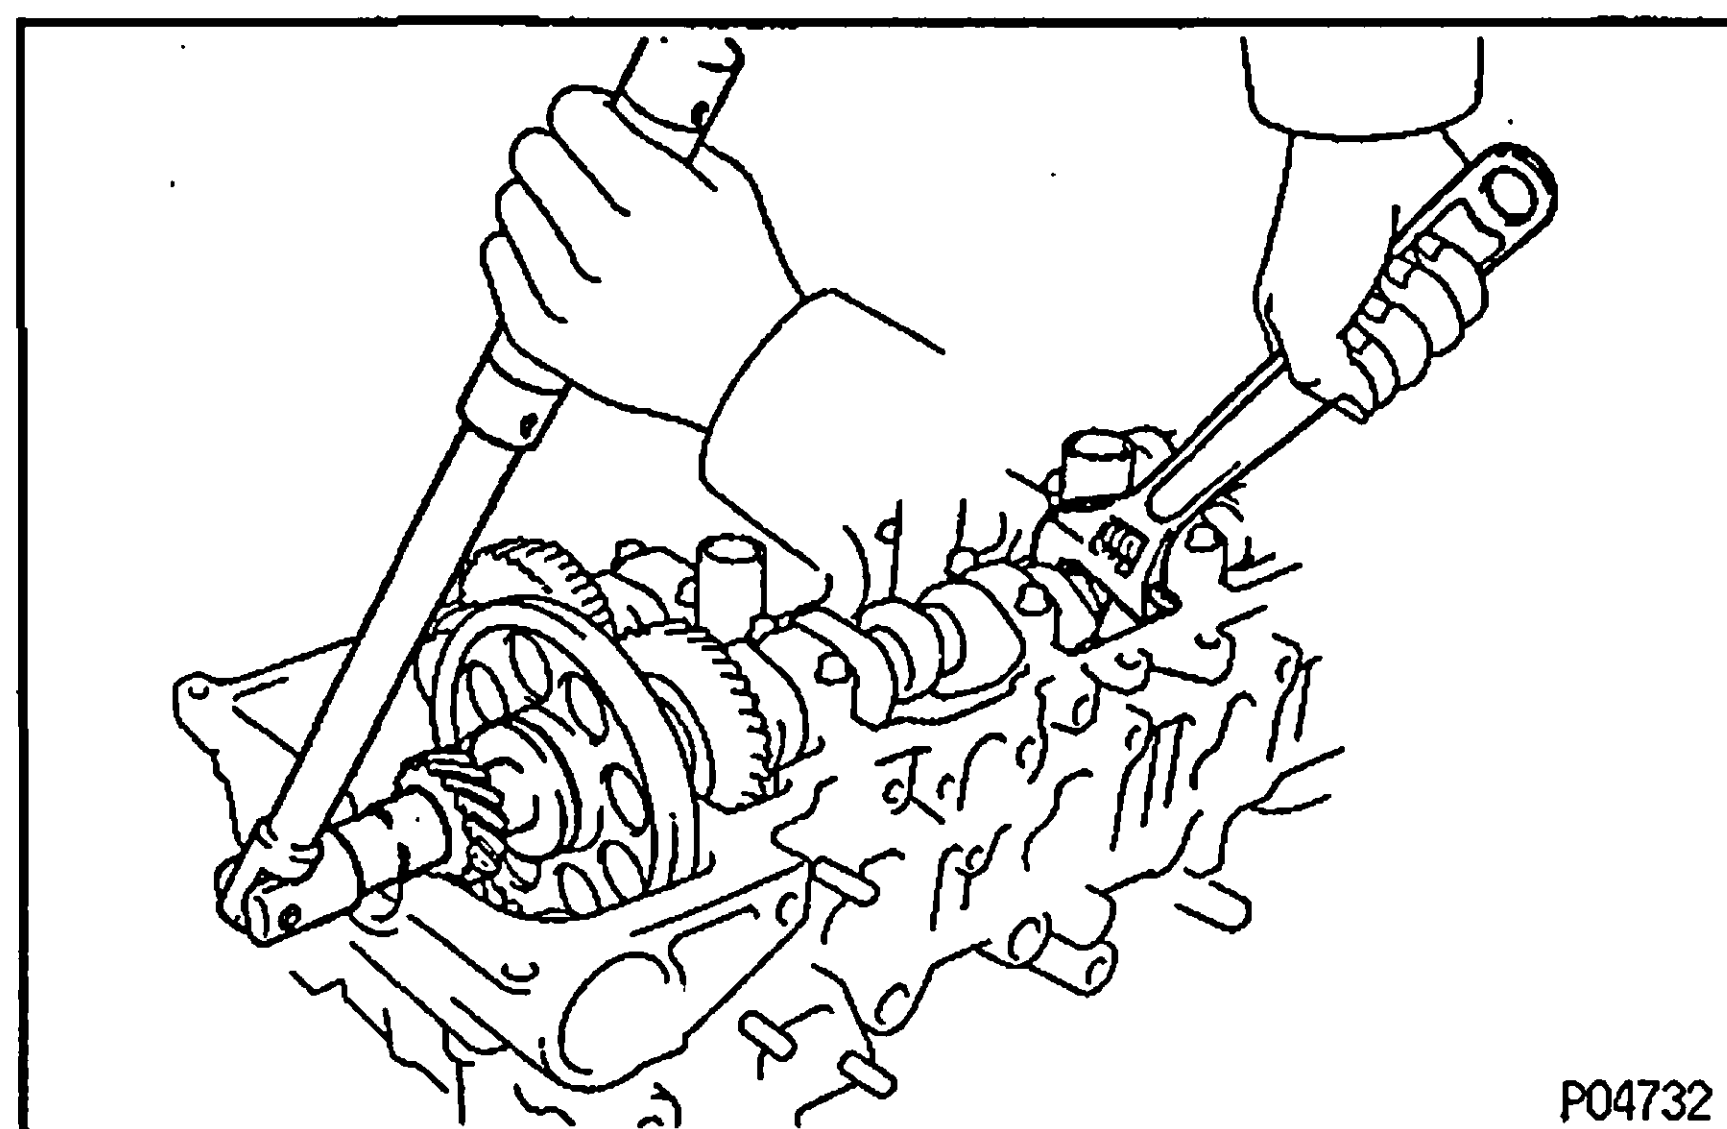


- (c) Hold the intake camshaft with a wrench, remove the bolt and distributor gear.

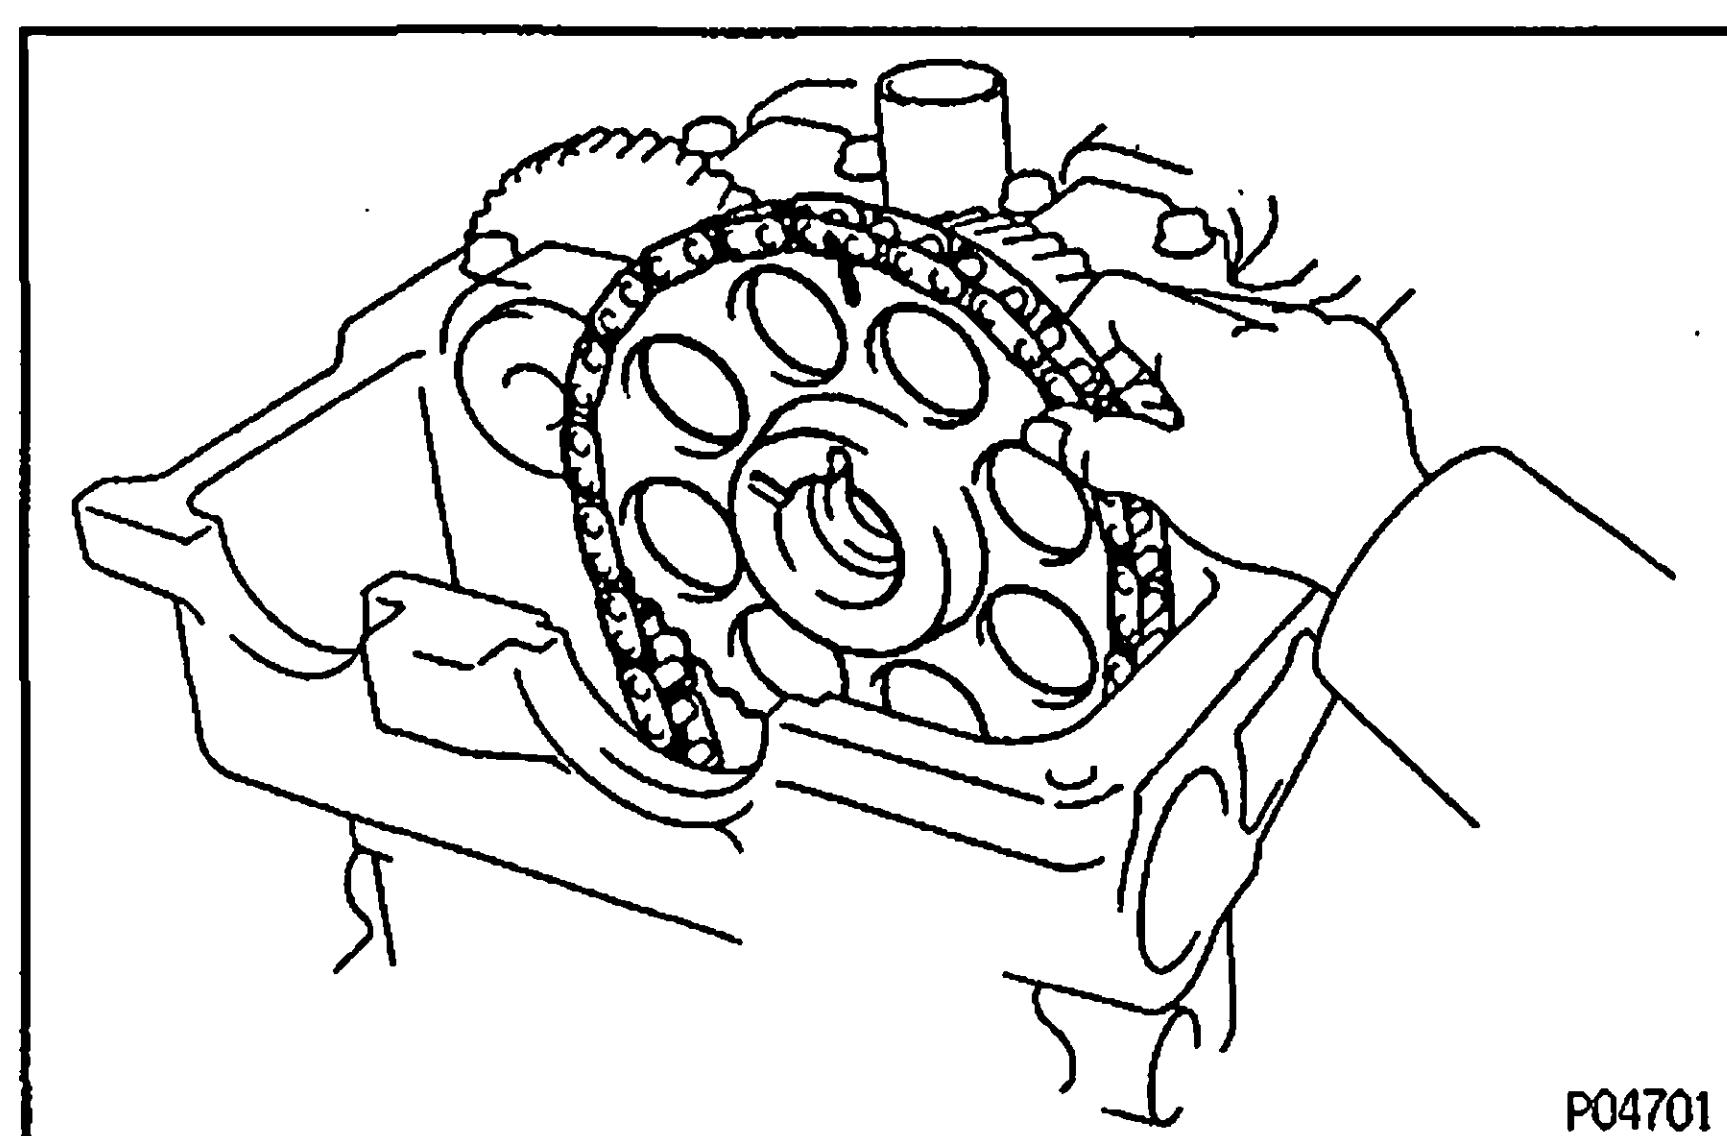

- (d) Remove the camshaft timing gear and chain from the intake camshaft and leave on the slipper and damper.

25. REMOVE CAMSHAFTS

NOTICE: Since the thrust clearance of the camshaft is small, the camshaft must be kept level while it is being removed. If the camshaft is not kept level, the portion of the cylinder head receiving the shaft thrust may crack or be damaged, causing the camshaft to seize or break. To avoid this, the following steps should be carried out.

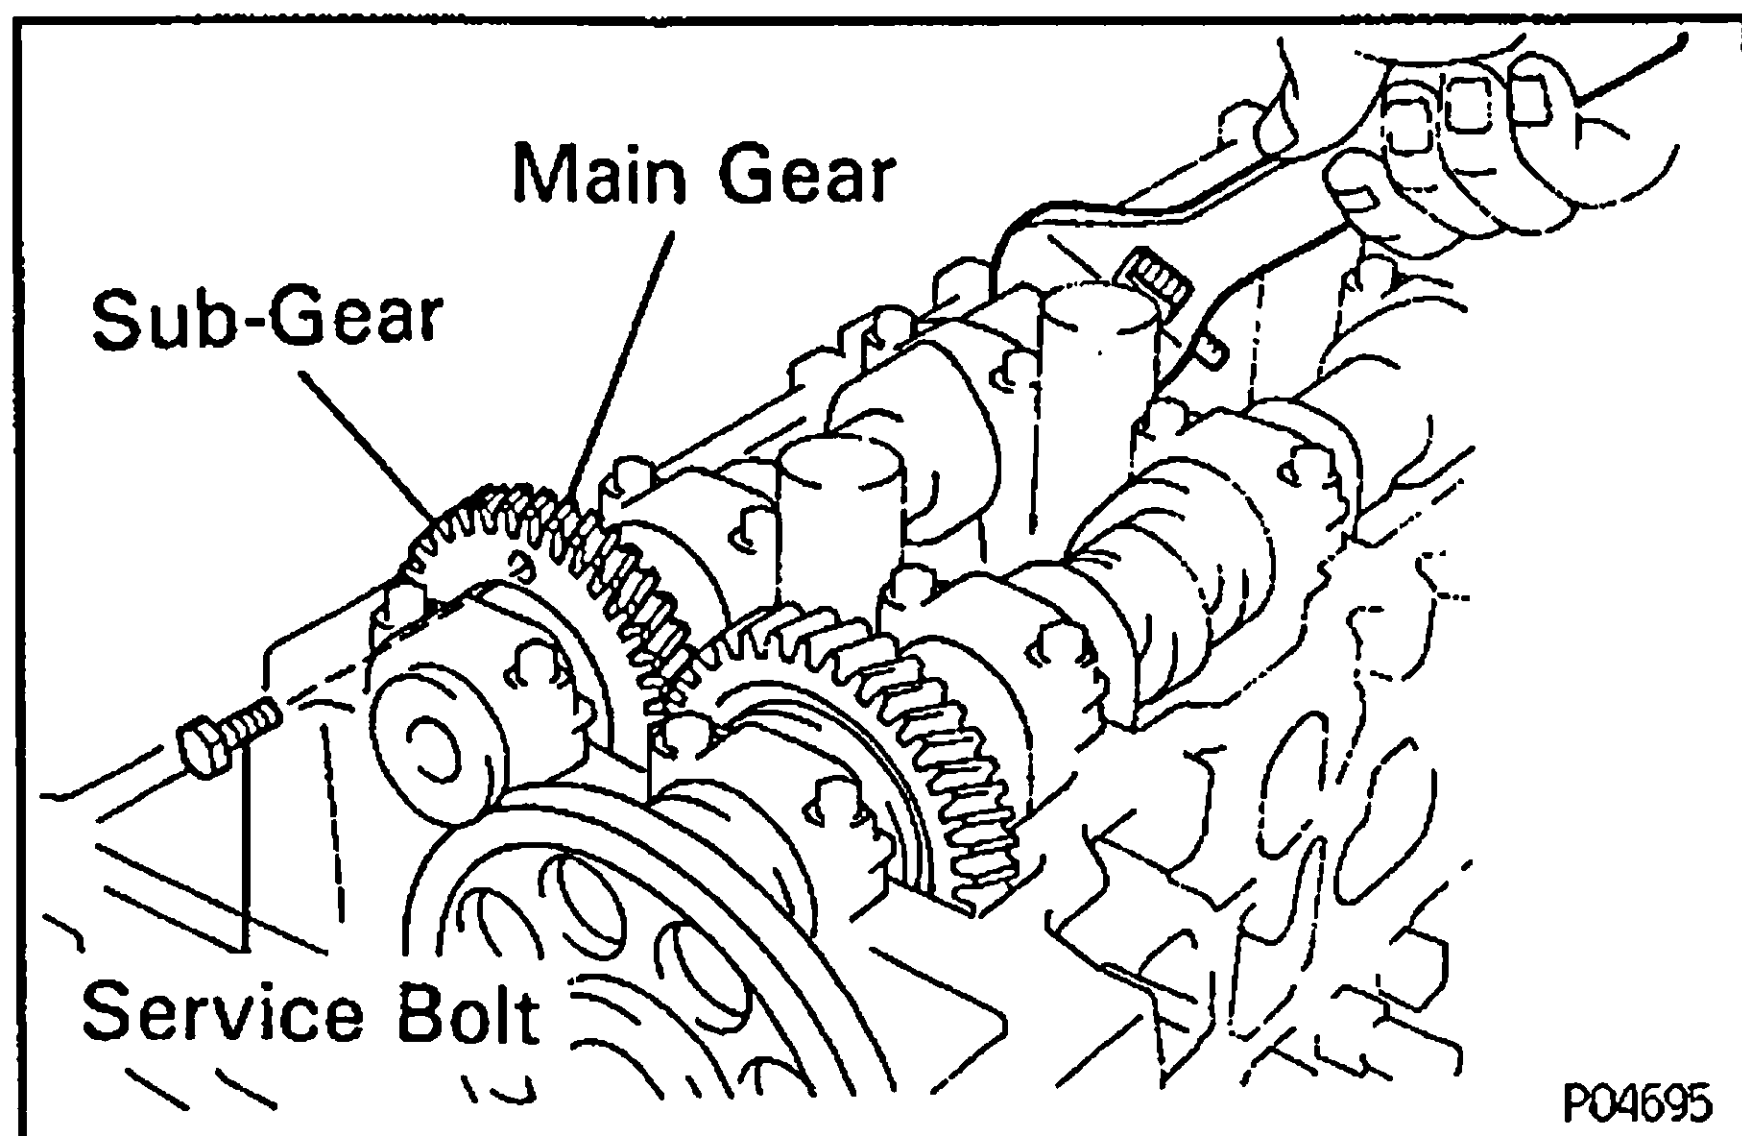**A. Remove exhaust camshaft**

- (a) Bring the service bolt hole of the driven sub—gear upward by turning the hexagon wrench head portion of the exhaust camshaft with a wrench.
- (b) Secure the exhaust camshaft sub—gear to the driven gear with a service bolt.


Recommended service bolt:

Thread diameter 6 mm


Thread pitch 1.0 mm

Bolt length 16 – 20 mm (0.63 – 0.79 in.)


HINT: When removing the camshaft, make sure that the torsional spring force of the sub—gear has been eliminated by the above operation.

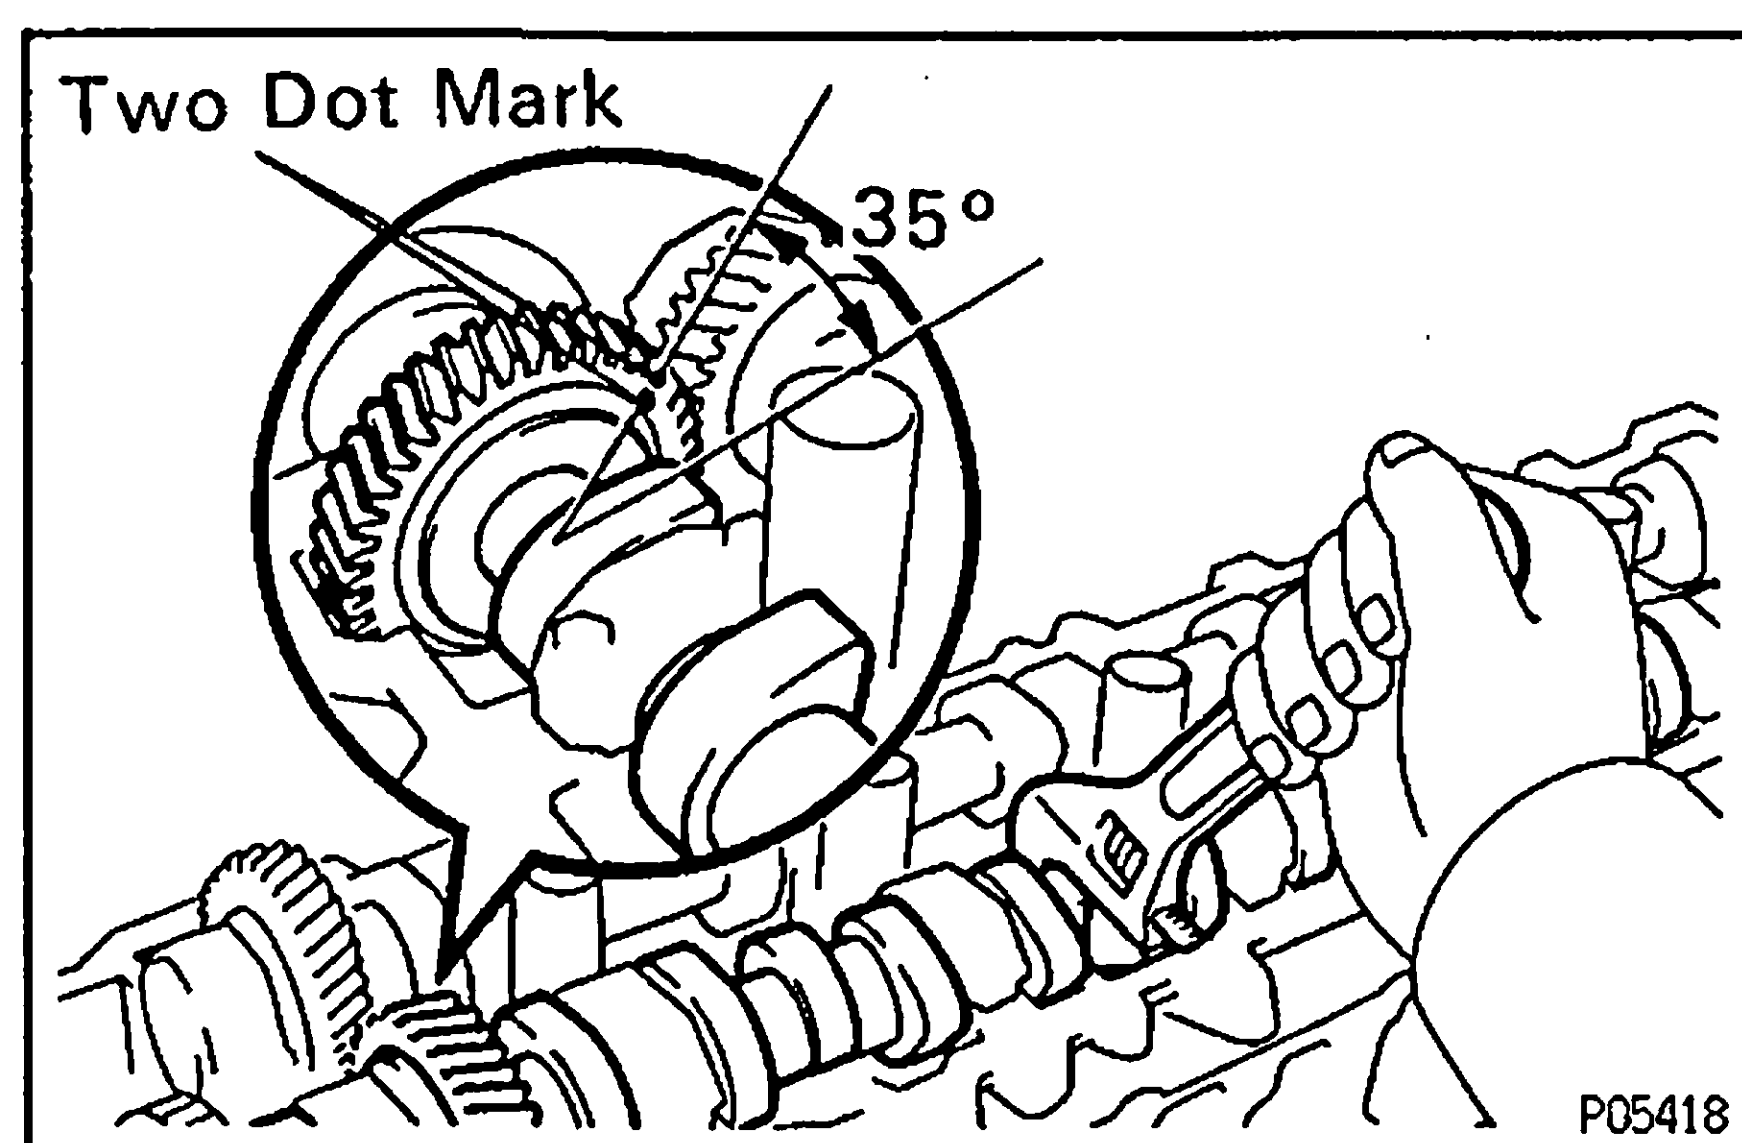

- (c) Set the timing mark (two dot marks) of the camshaft driven gear at approx. 35° angle by turning the hexagon wrench head portion of the exhaust camshaft with a wrench.

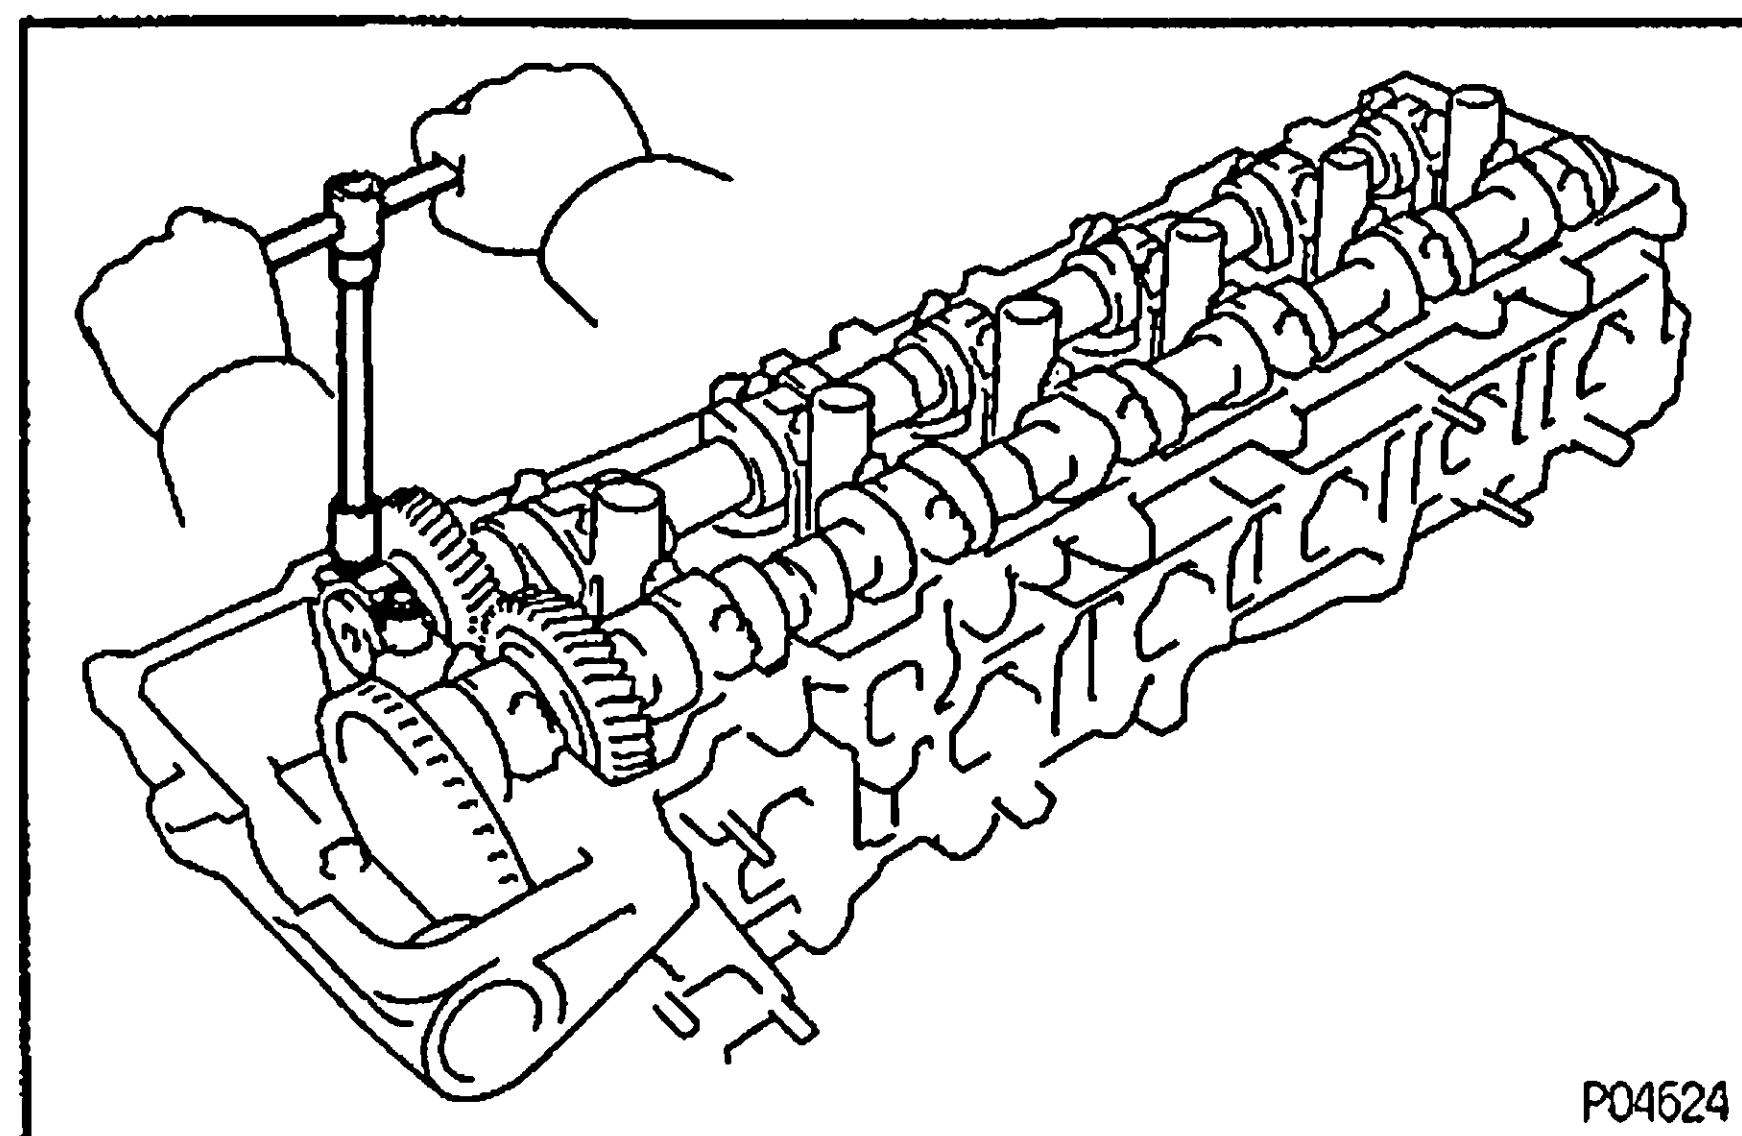


- (d) Lightly push the camshaft towards the rear without applying excessive force.
- (e) Loosen and remove the No.1 bearing cap bolts, alternately loosening the left and right bolts uniformly.

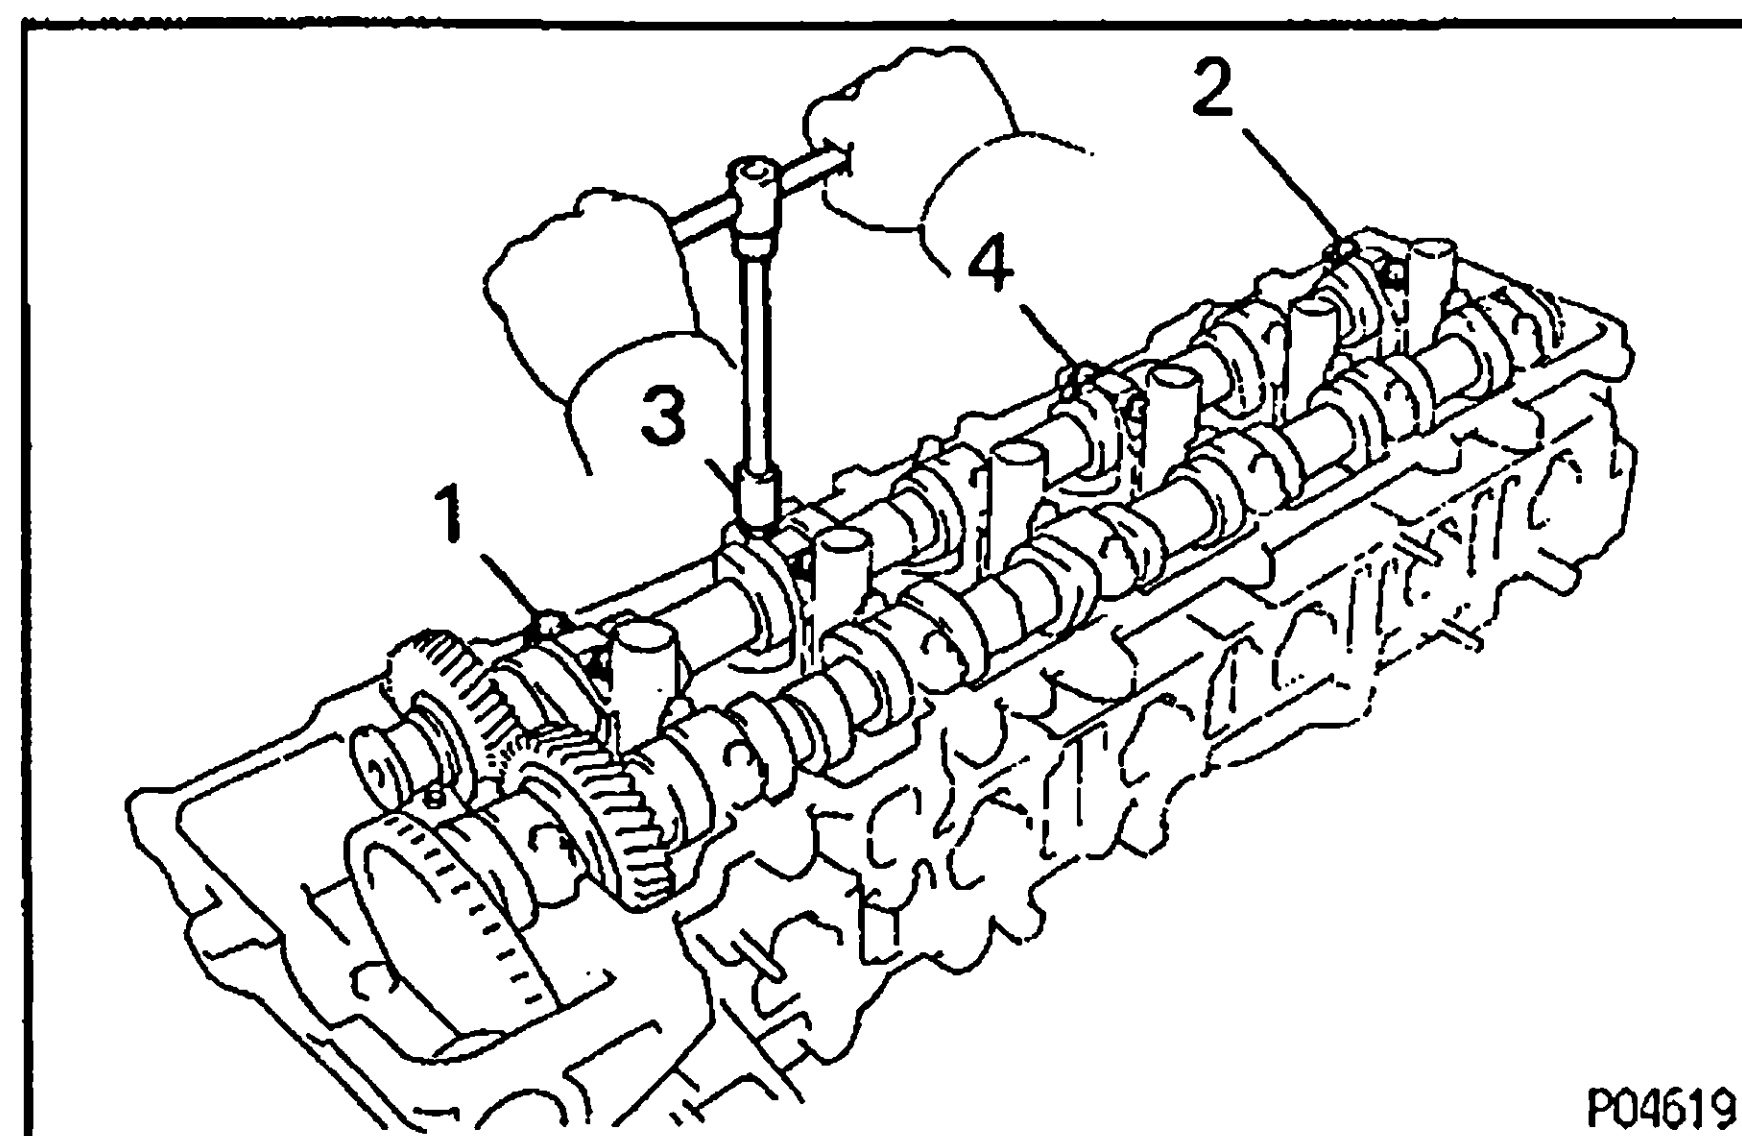

- (f) Loosen and remove the No.2, No.3, No.5 and No.7 bearing cap bolts, alternately loosening the left and right bolts uniformly in several passes, in the sequence shown.
- (g) Remove the four bearing caps.

NOTICE: Do not remove the No.4 and No.6 bearing cap bolts at this stage.

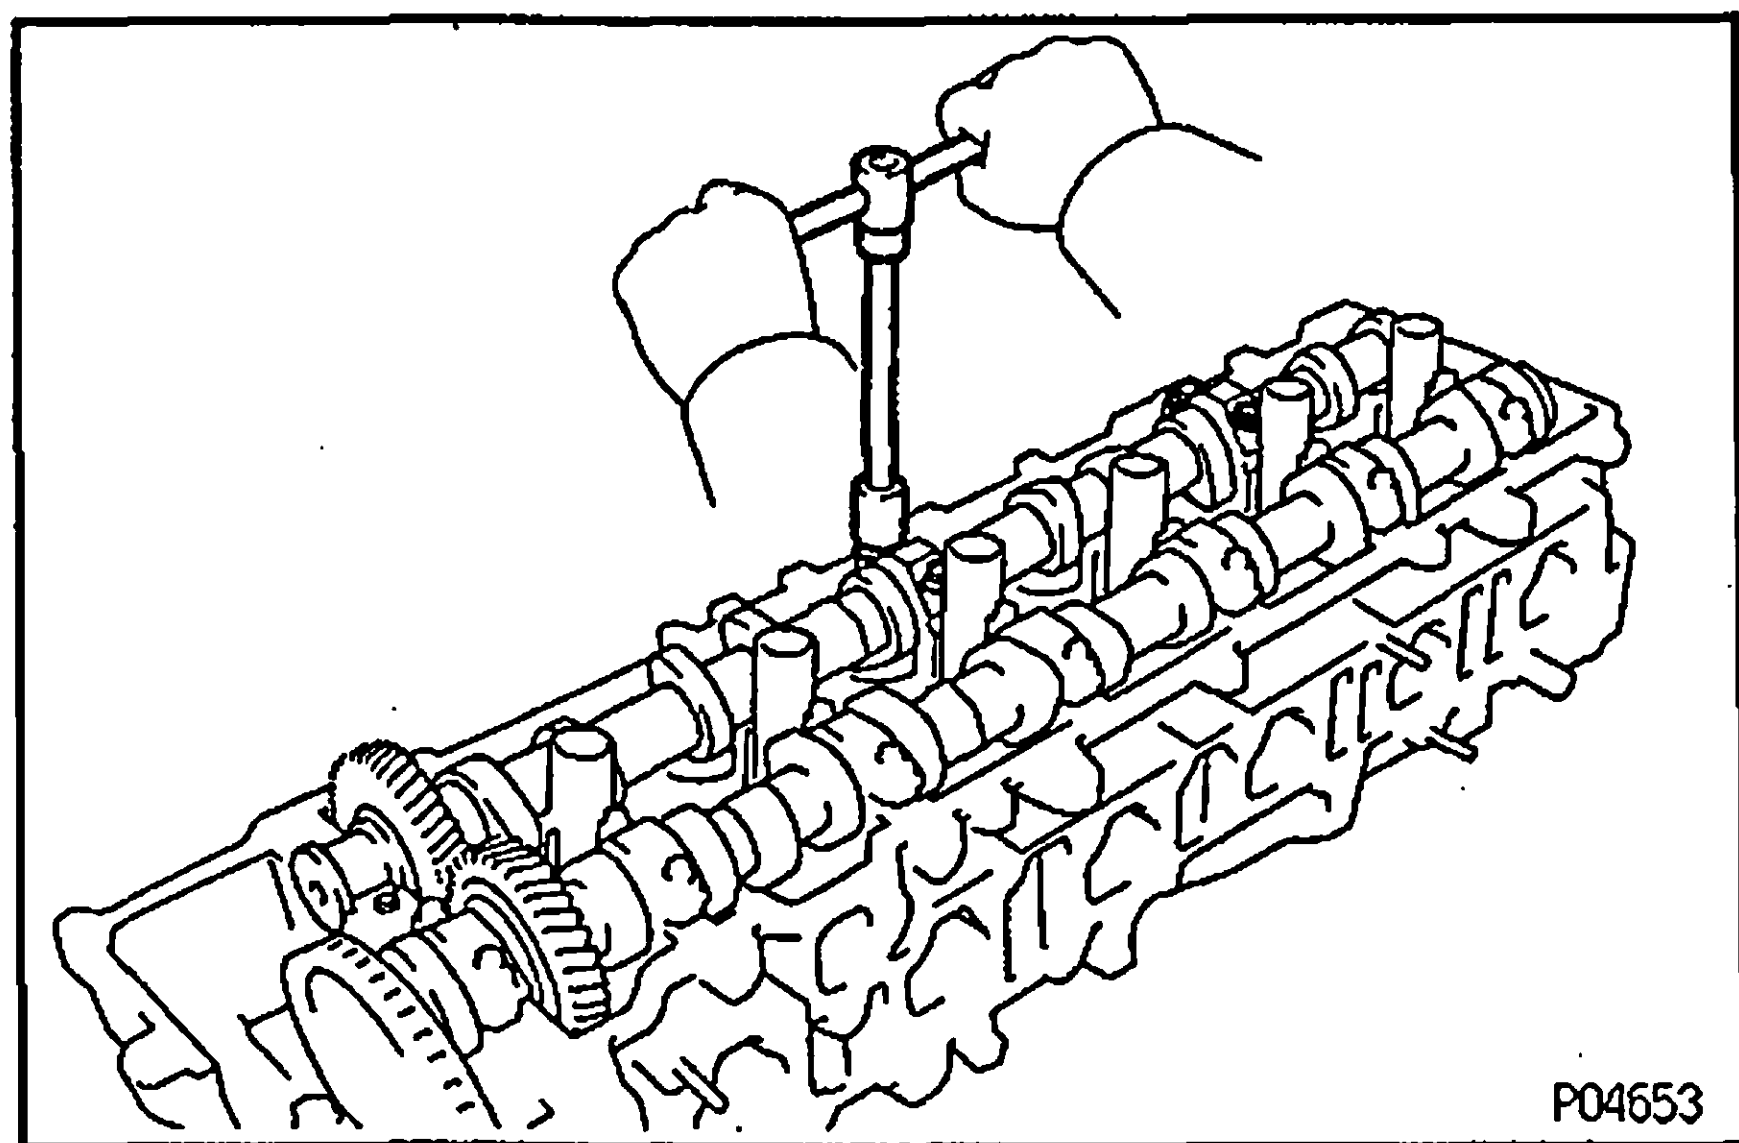


- (h) Alternately and uniformly loosen and remove the No.4 and No.6 bearing cap bolts.

HINT:

- As the four No.4 and No.6 bearing cap bolts are loosened, make sure that the camshaft is lifted out straight and level.
- If the camshaft is not being lifted out straight and level, retighten the four No.4 and No.6 bearing cap bolts. Then reverse the order of above steps from (g) to (a) and repeat steps from (a) to (f) once again.

NOTICE: Do not pry on or attempt to force the camshaft with a tool or other object.


- (i) Remove the two bearing caps and exhaust camshaft.

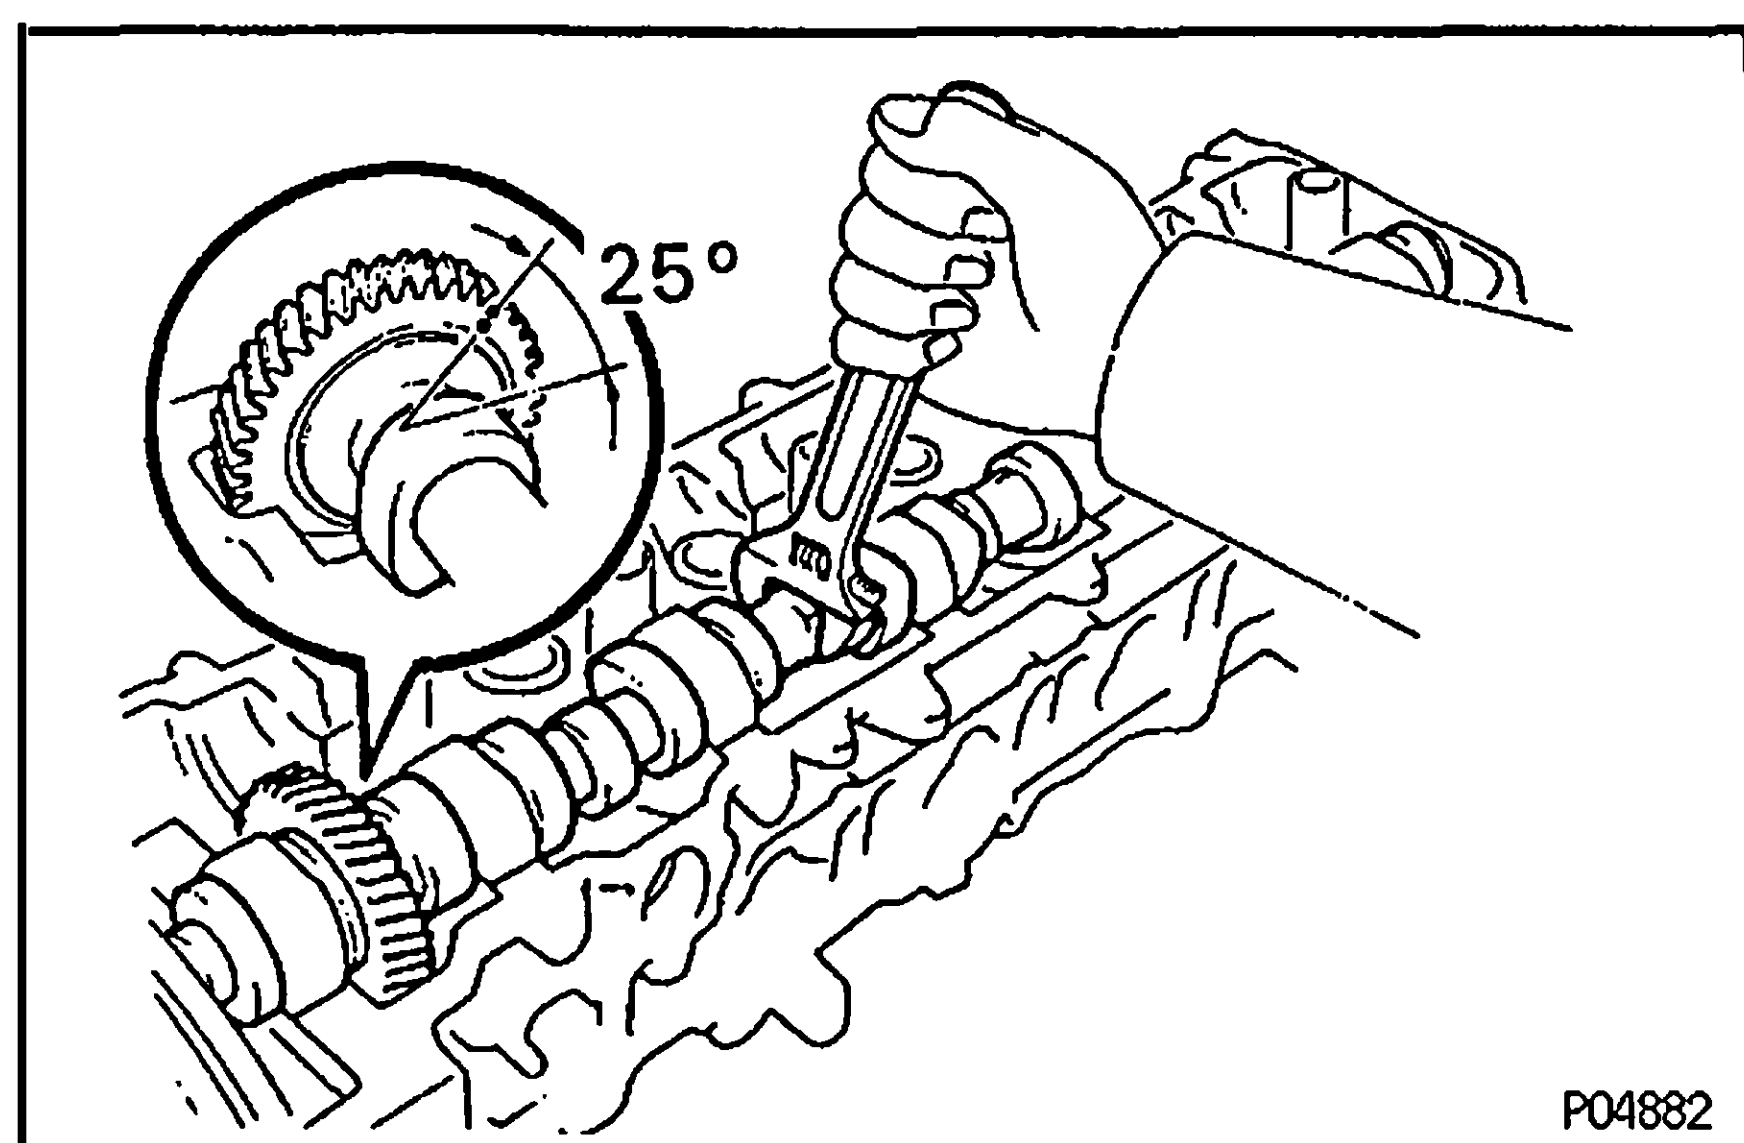


B. Remove intake camshaft

- (a) Set the timing mark (two dot marks) of the camshaft drive gear at approx. 25° angle by turning the hexagon wrench head portion of the intake camshaft with a wrench.

HINT: The above angle arrows the No.1 and No.4 cylinder cam lobes of the intake camshaft to push their valve lifters evenly.

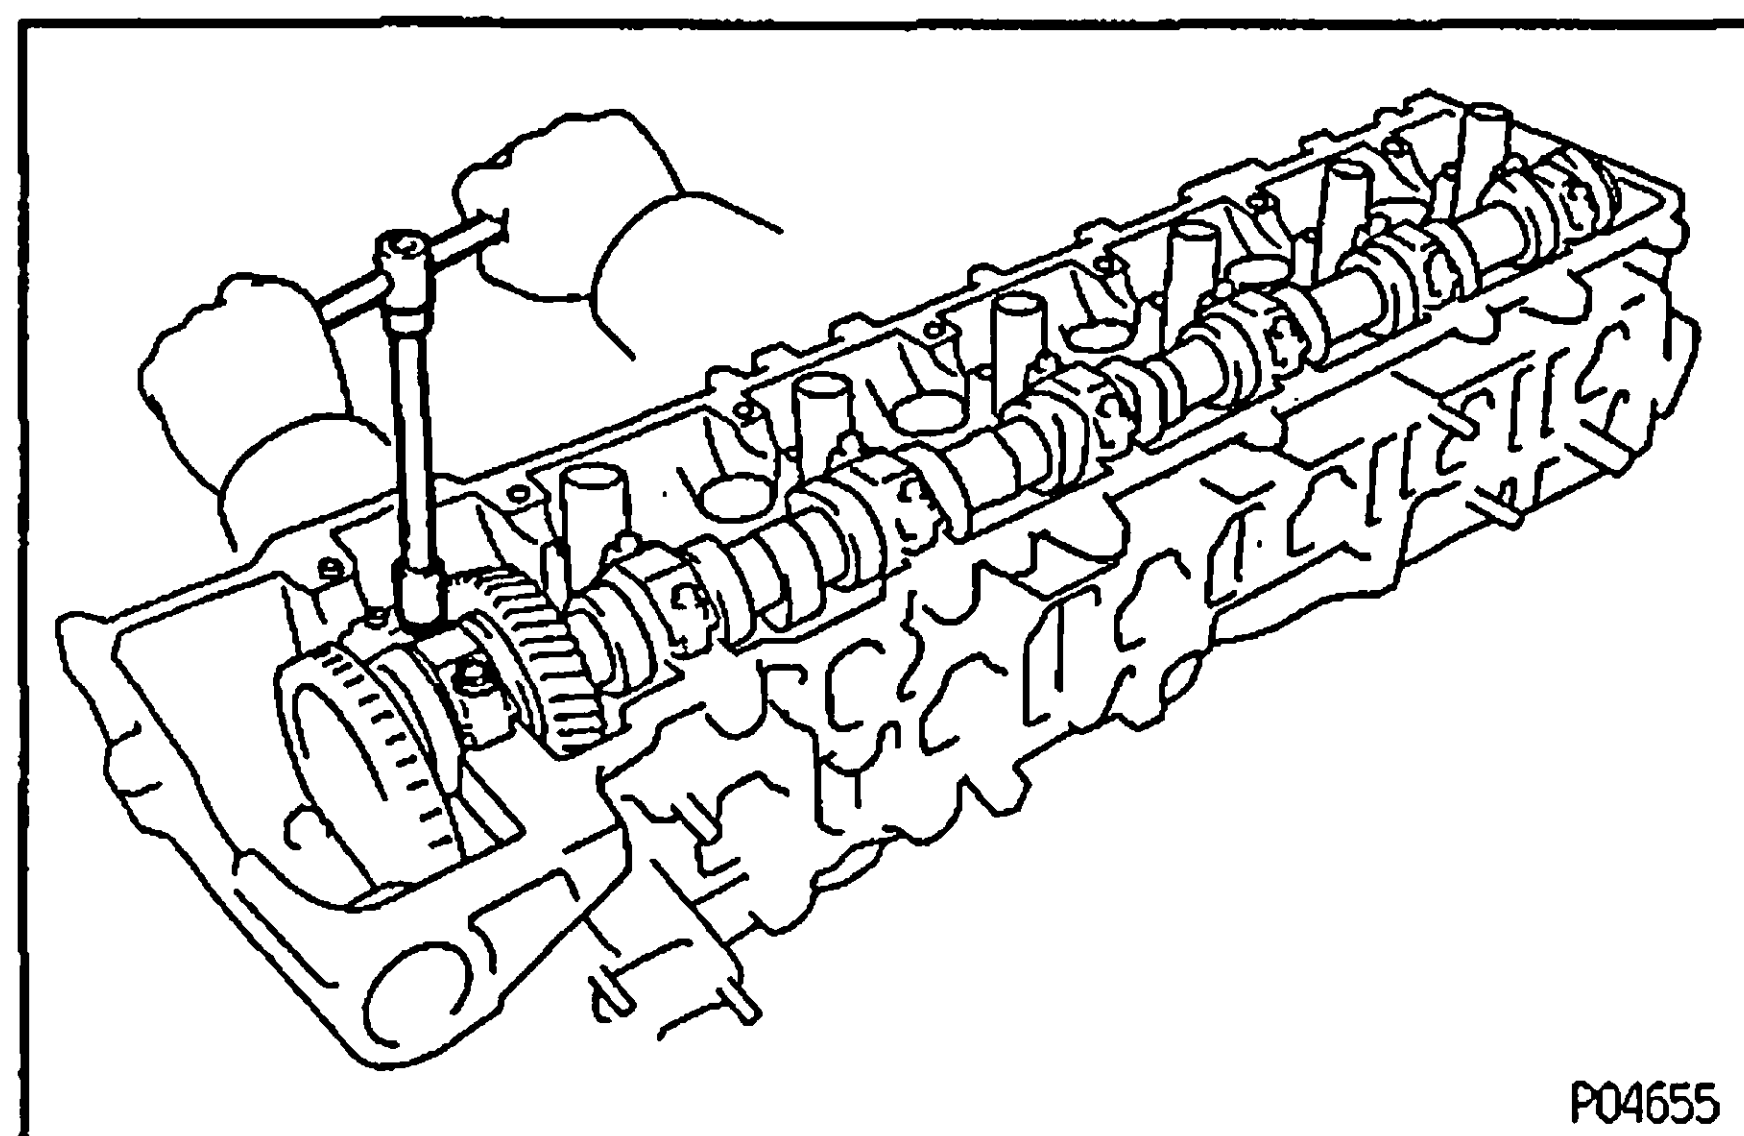


- (b) Lightly push the intake camshaft towards the front without applying excessive force.
- (c) Loosen and remove the No.1 bearing cap bolts, alternately loosening the left and right bolts uniformly.

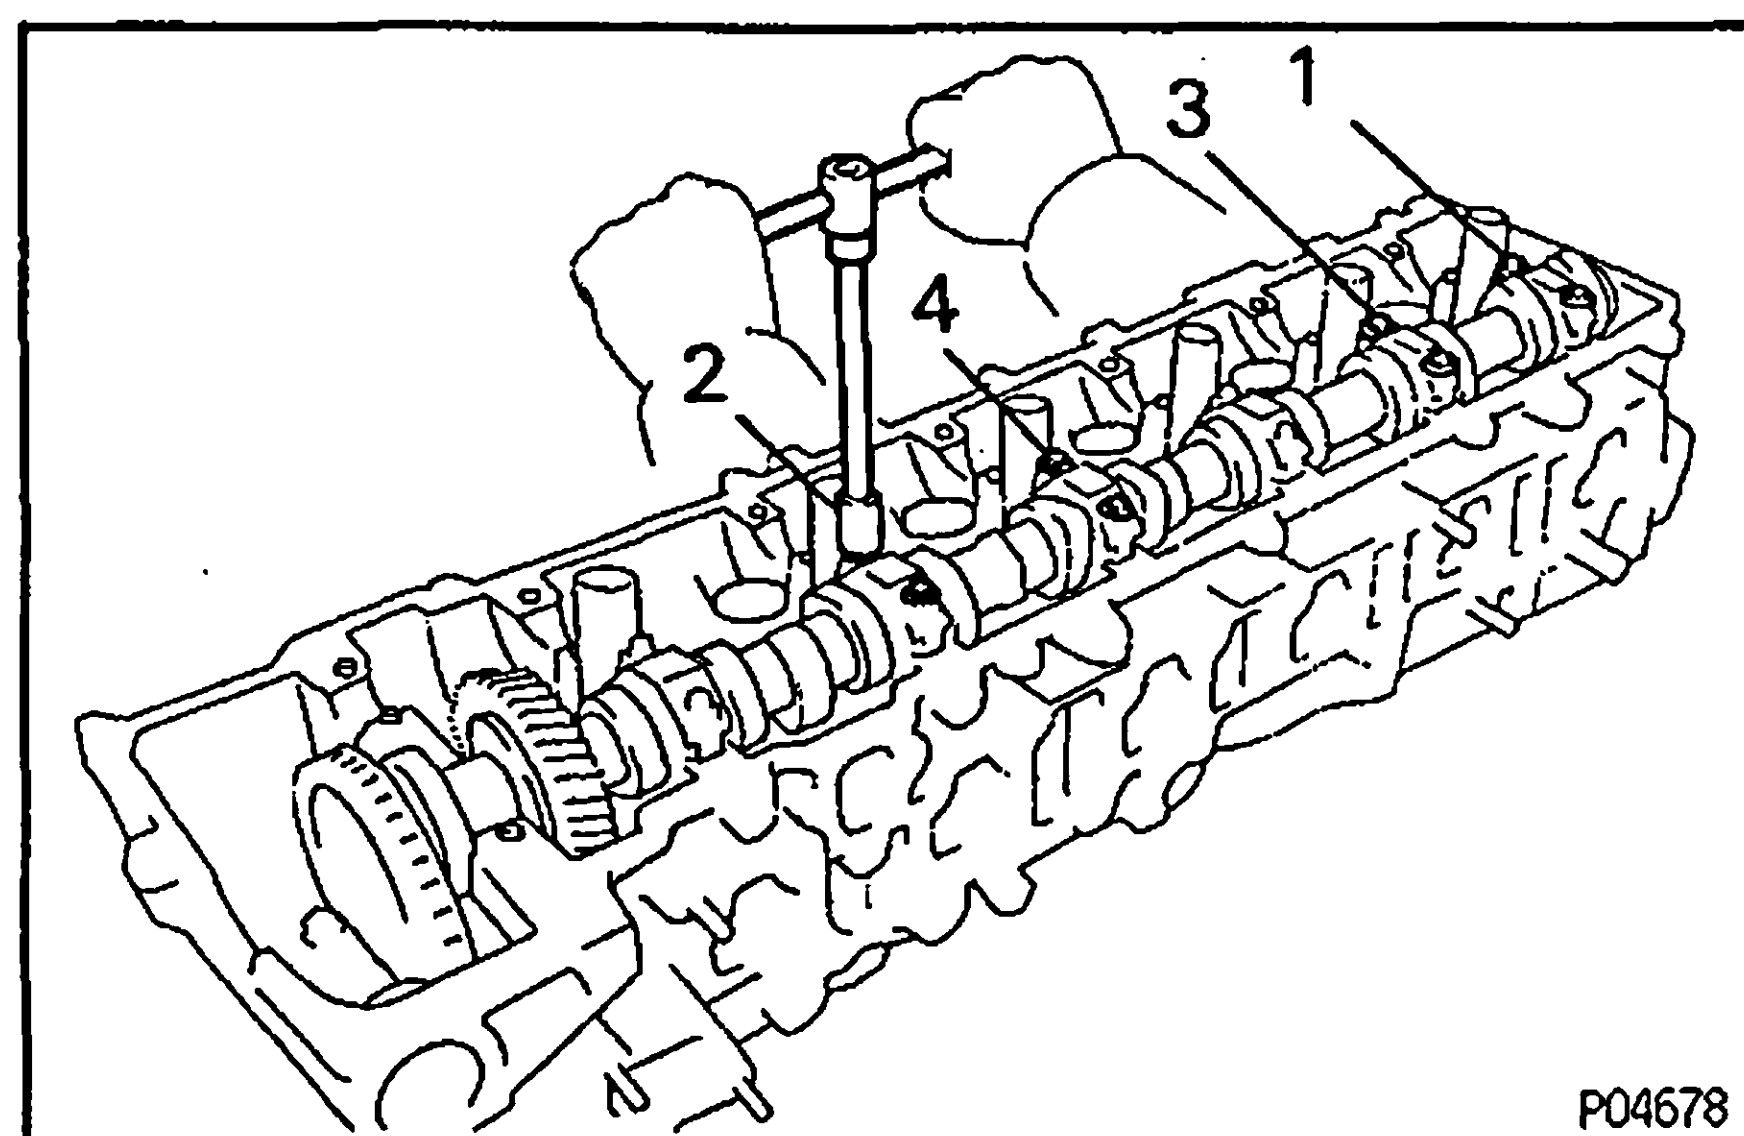

- (e) Loosen and remove the No.3, No.4, No.6 and No.7 bearing cap bolts, alternately loosening the left and right bolts uniformly in several passes, in the sequence shown.

NOTICE: Do not remove the No.2 and No.5 bearing cap bolts at this stage.

- (f) Remove the four bearing caps.

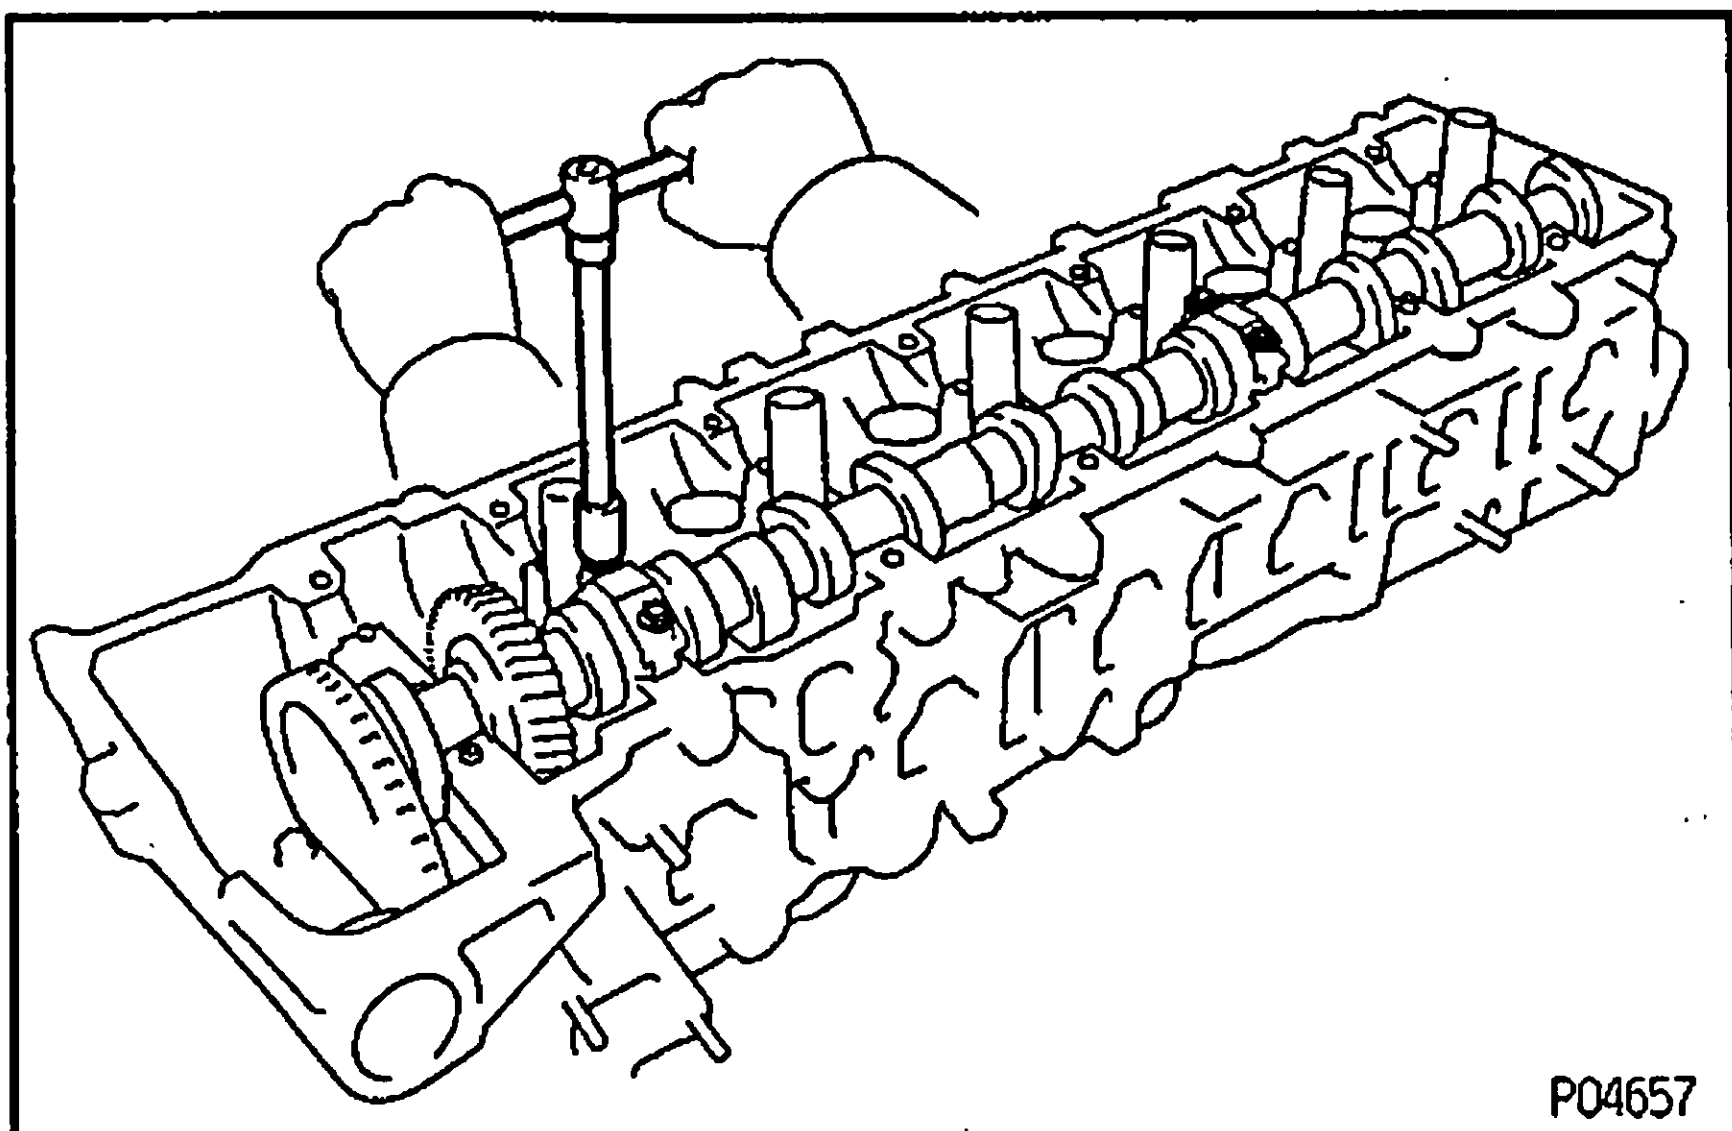

EG


- (g) Alternately and uniformly loosen and remove the No.2 and No.5 bearing cap bolts.

HINT:

- As the four No.2 and No.5 bearing cap bolts are loosened, make sure that the camshaft is lifted out straight and level.
- If the camshaft is not being lifted out straight and level, retighten the four No.2 and No.5 bearing cap bolts. Then reverse the order of above steps from (f) to (a) and repeat steps from (a) to (g) once again.

NOTICE: Do not pry on or attempt to force the camshaft with a tool or other object.


- (h) Remove the two bearing caps and exhaust camshaft.

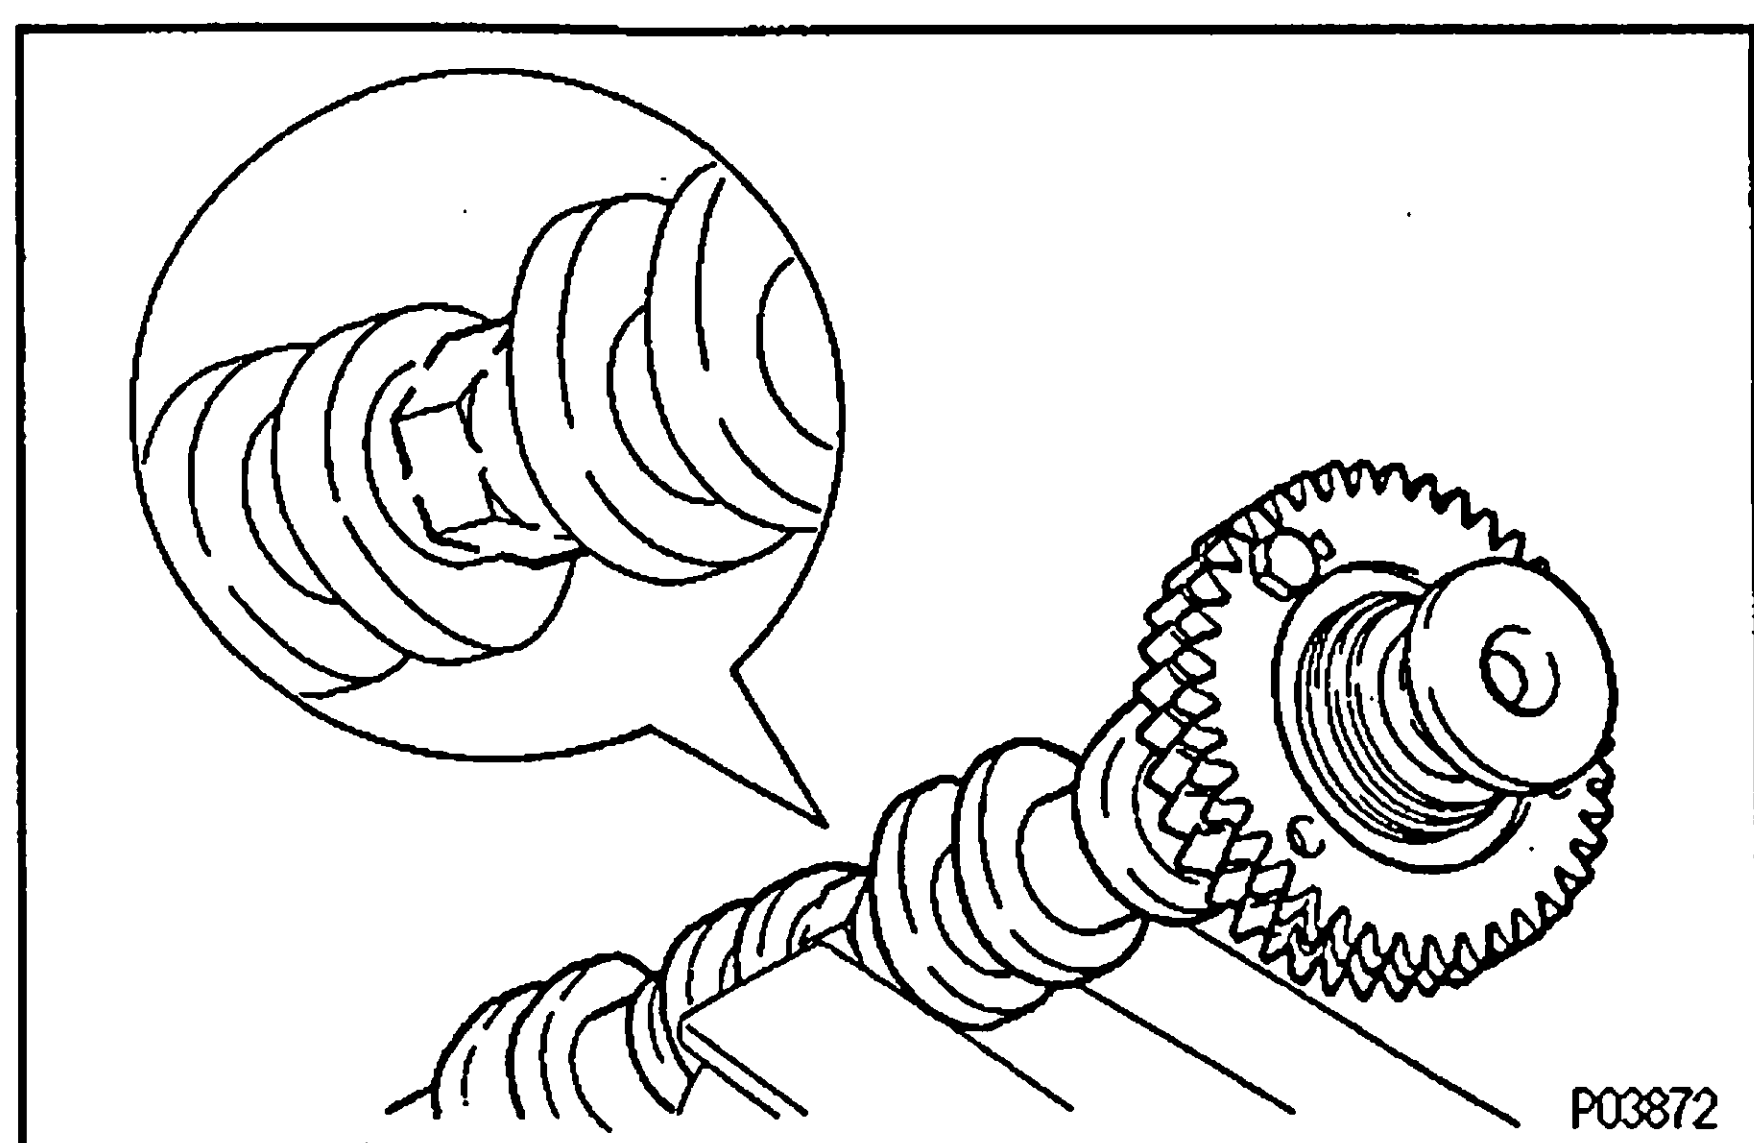

26. DISASSEMBLE EXHAUST CAMSHAFT


- (a) Mount the hexagon wrench head portion of the camshaft in a vise.

NOTICE: Be careful not to damage the camshaft.

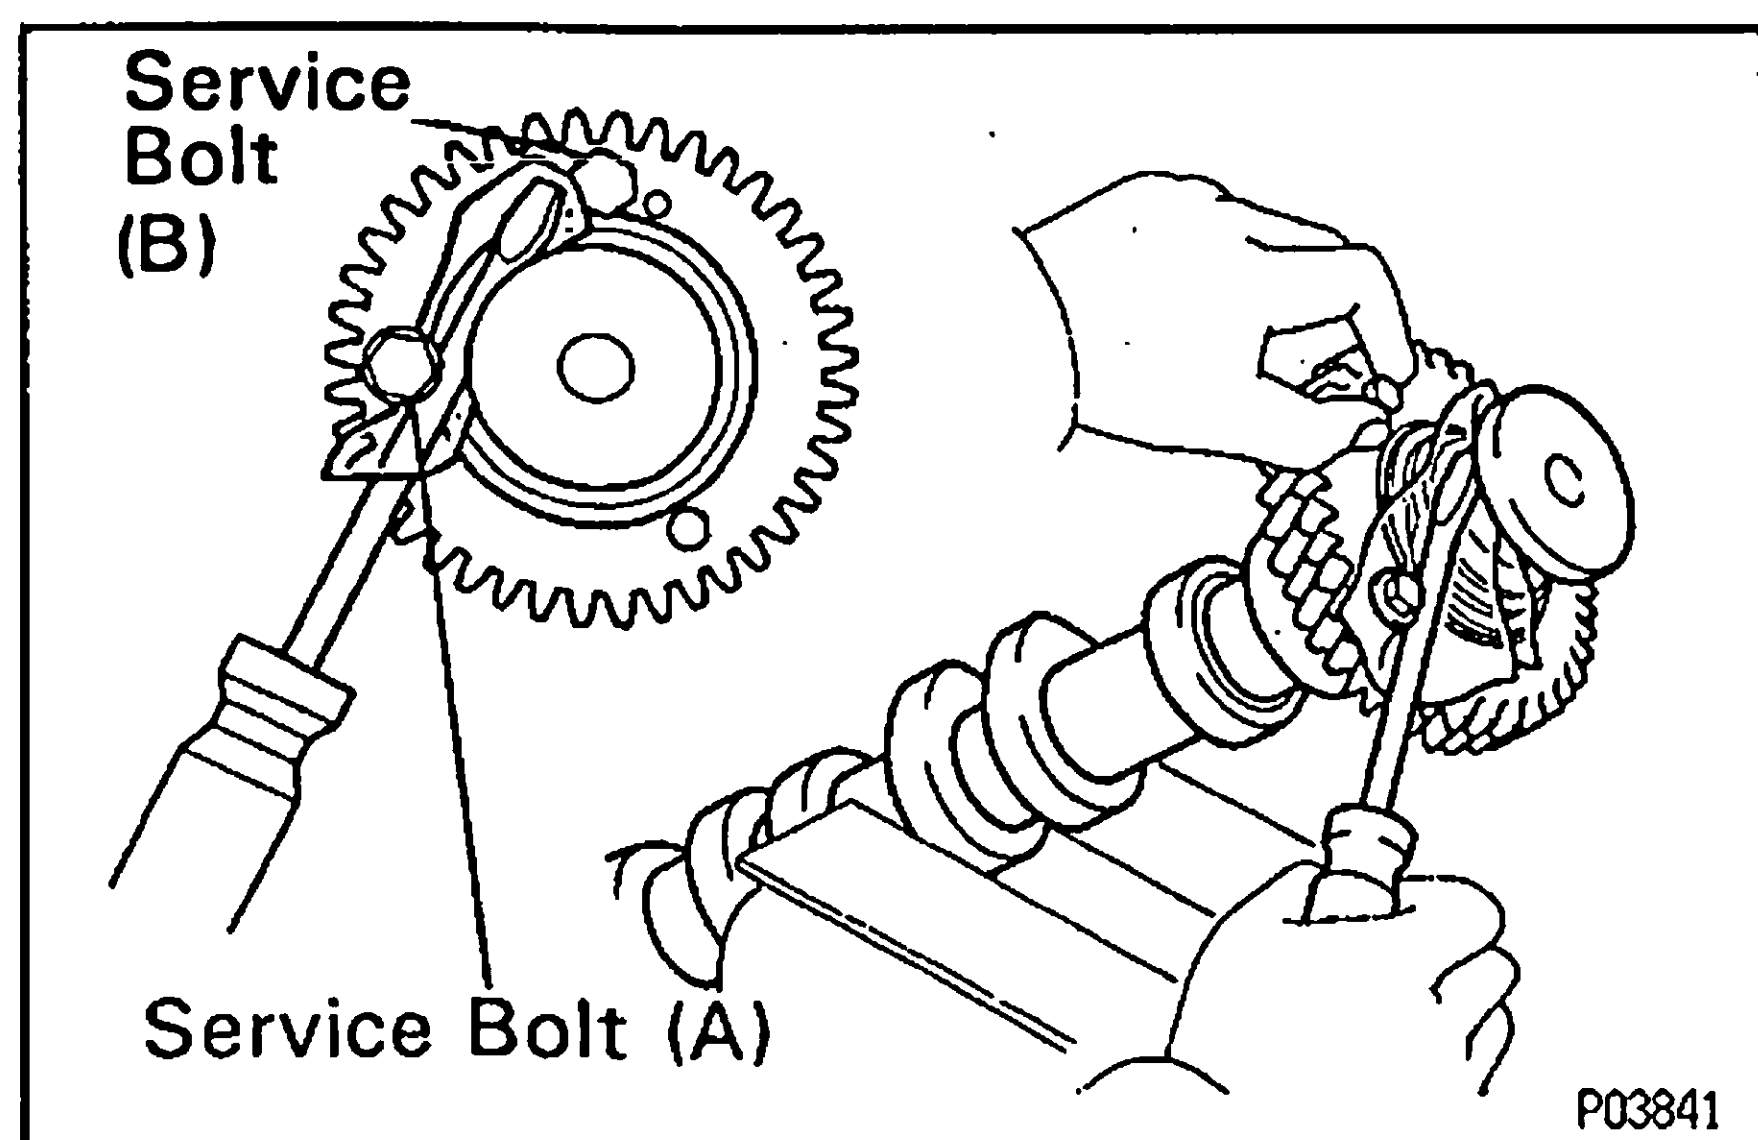


- (b) Insert a service bolt (A) into the service hole of the camshaft sub-gear.
- (c) Using a screwdriver, turn the sub-gear clockwise, and remove the service bolt (B).

NOTICE: Be careful not to damage the camshaft.

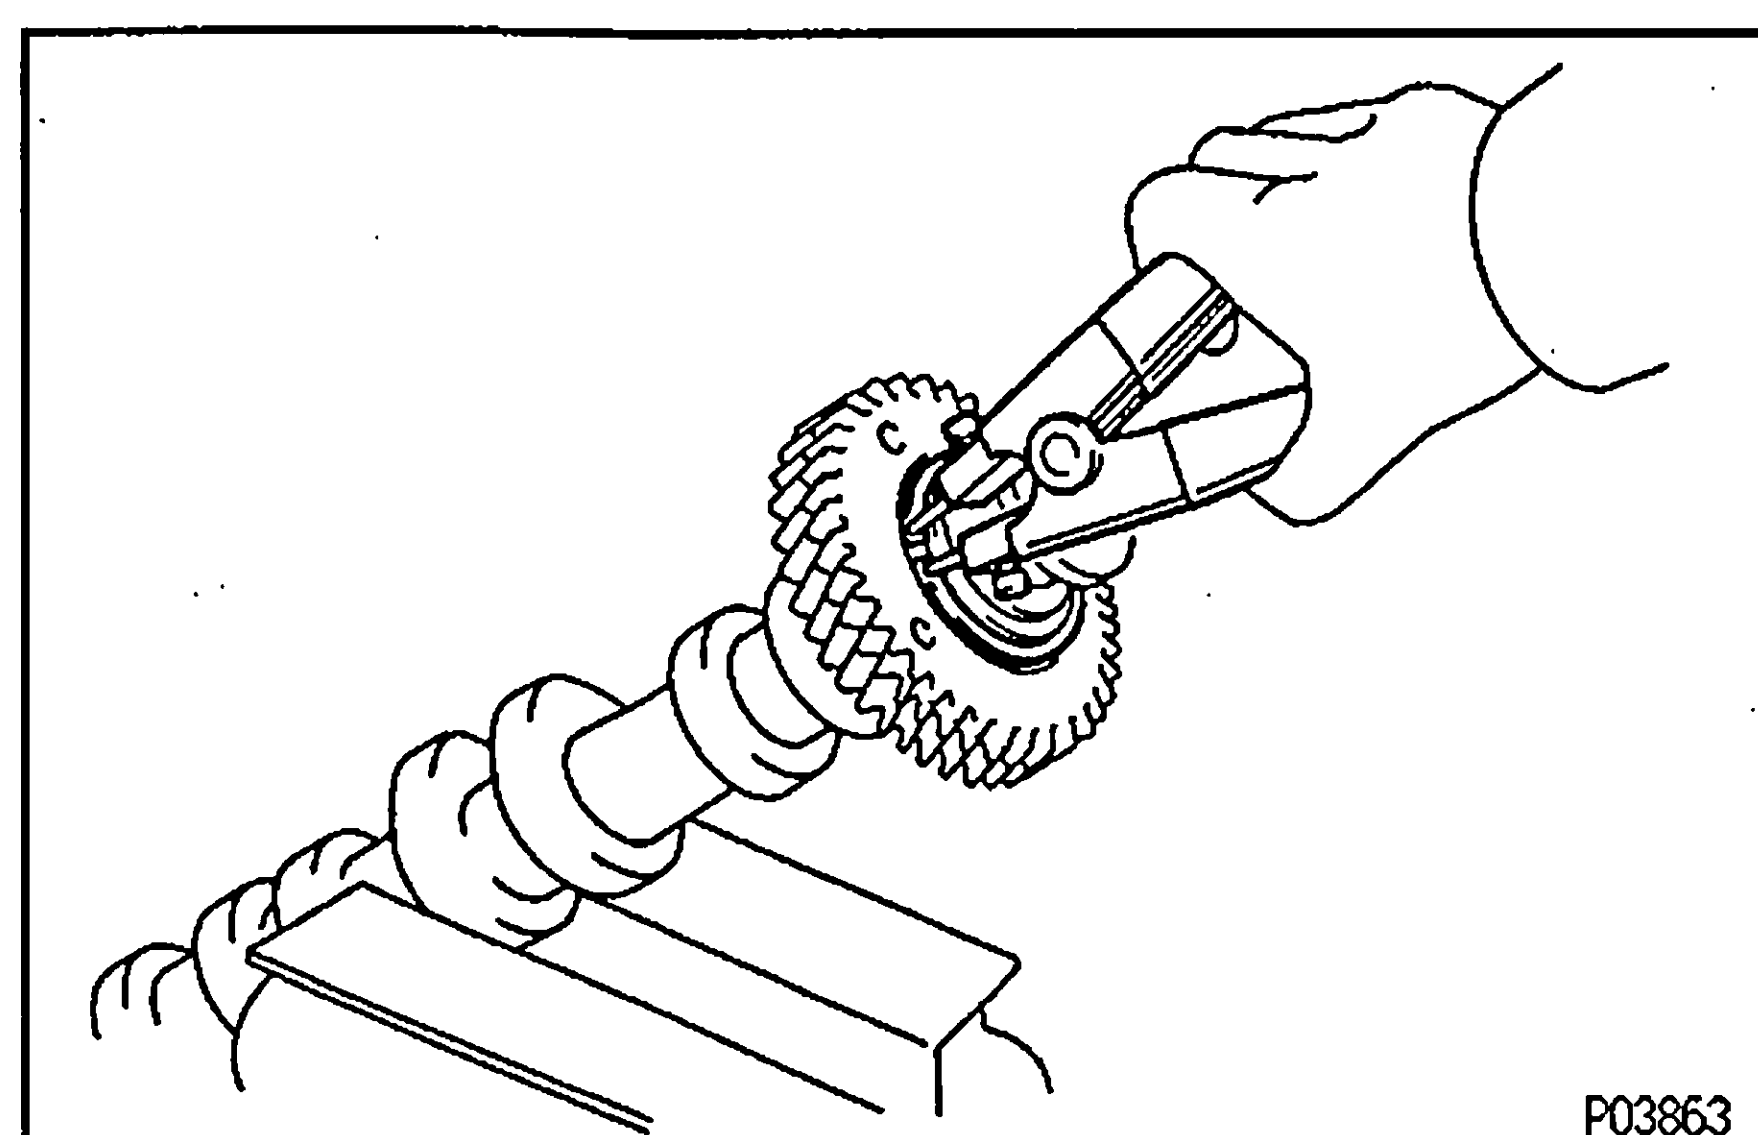


- (d) Using snap ring pliers, remove the snap ring.

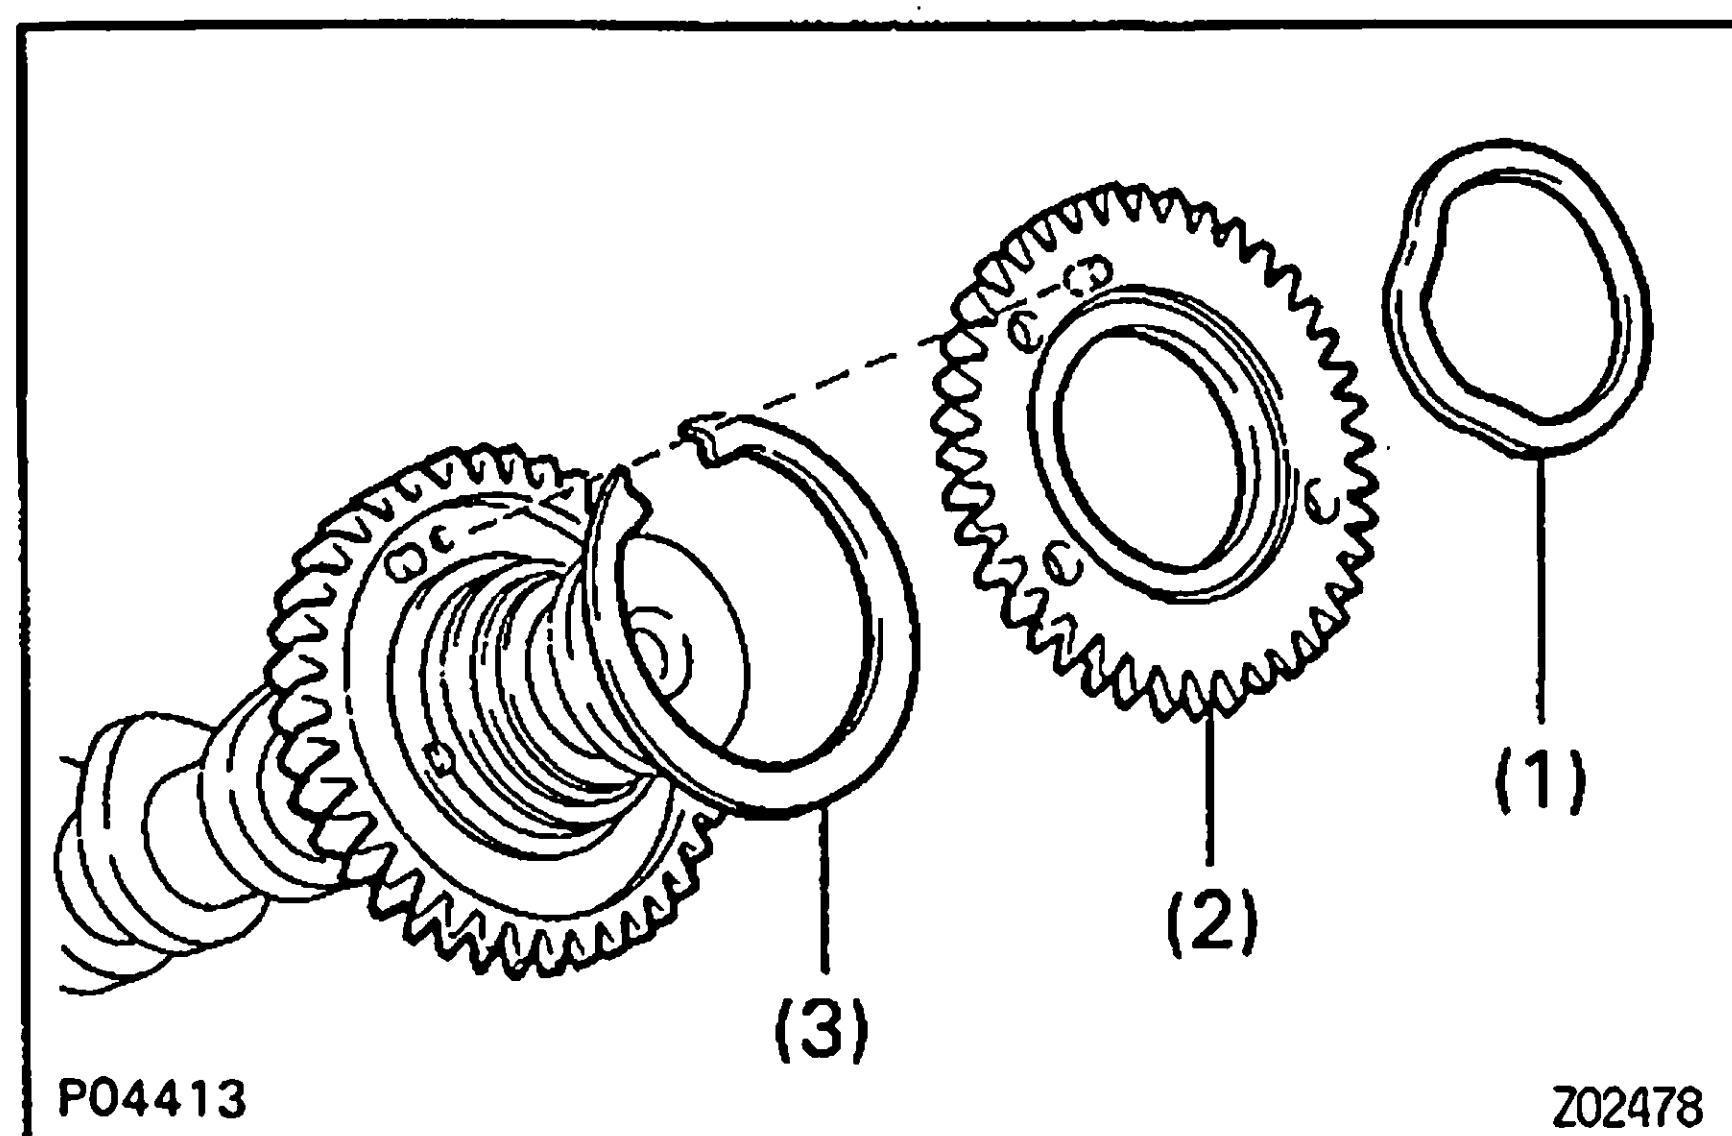

(e) Remove the following parts:


- (1) Wave washer
- (2) Camshaft sub—gear
- (3) Camshaft gear spring

EG

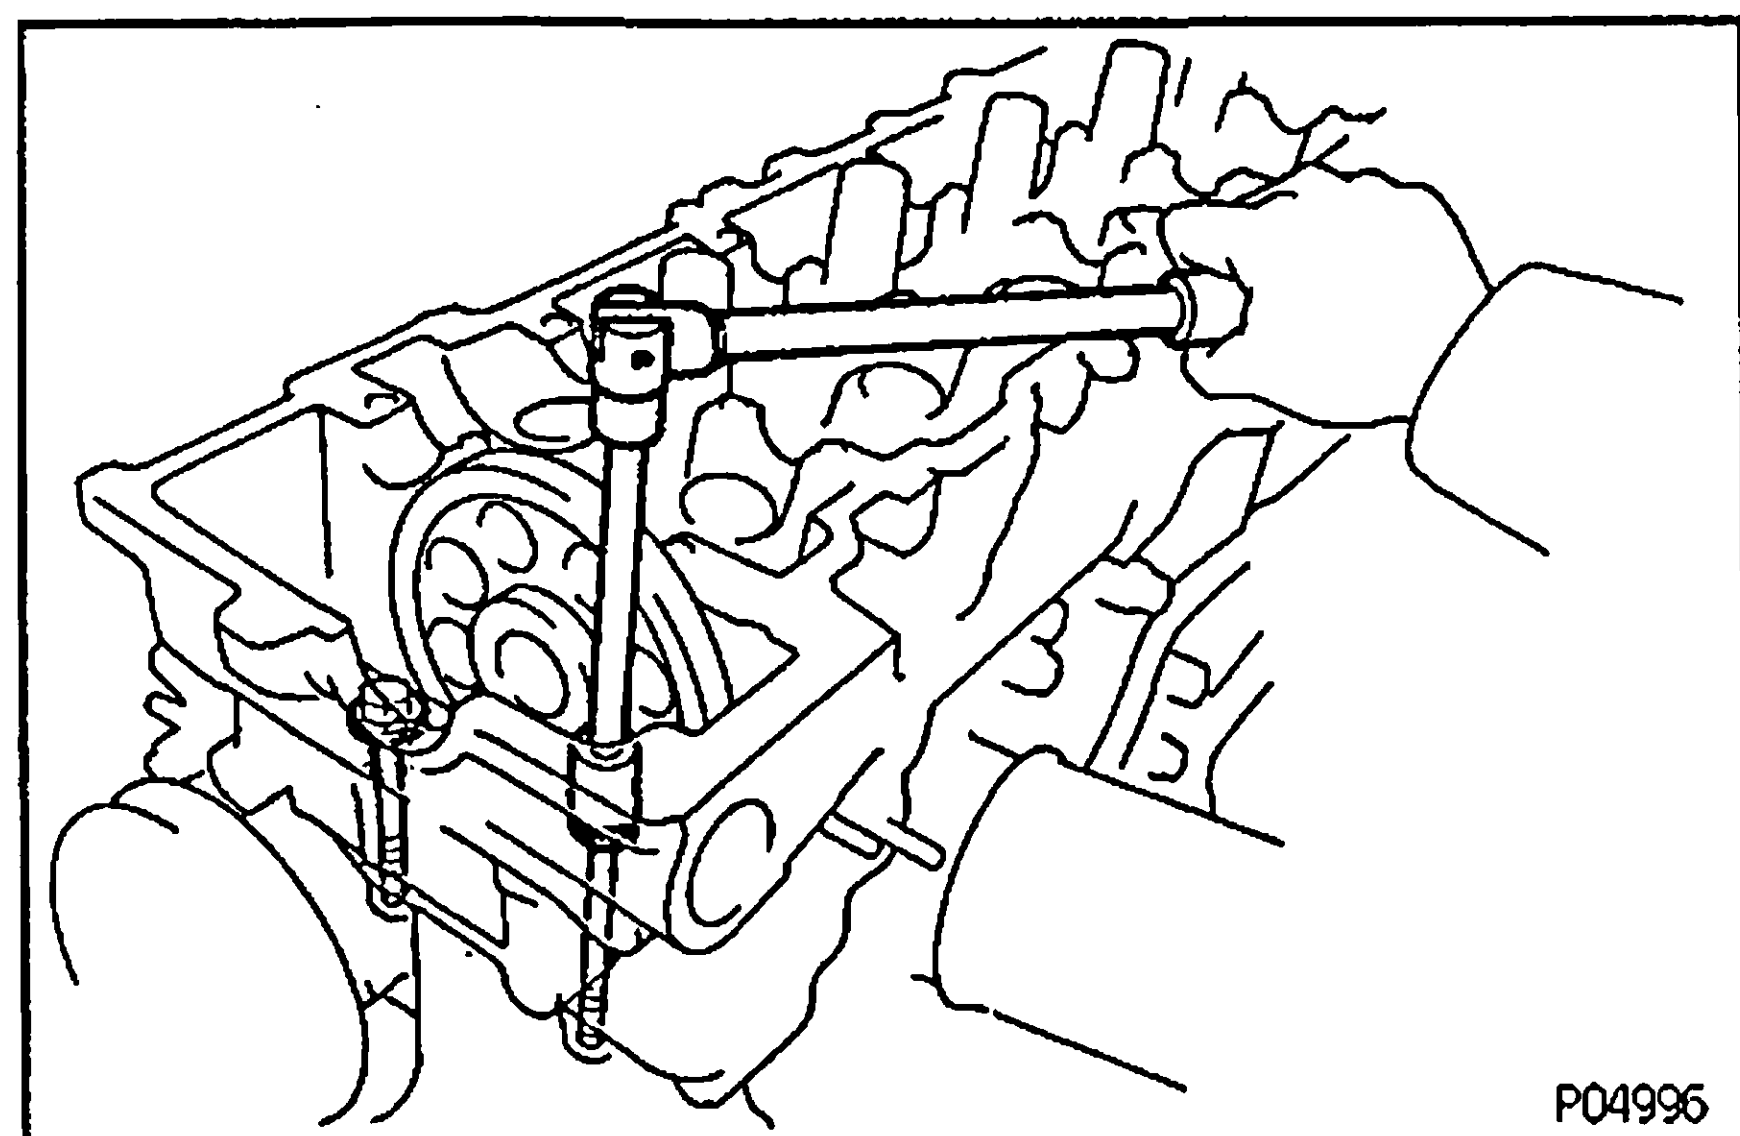

27. REMOVE CYLINDER HEAD


(a) Remove the two bolts in front of the head before the other head bolts are removed.

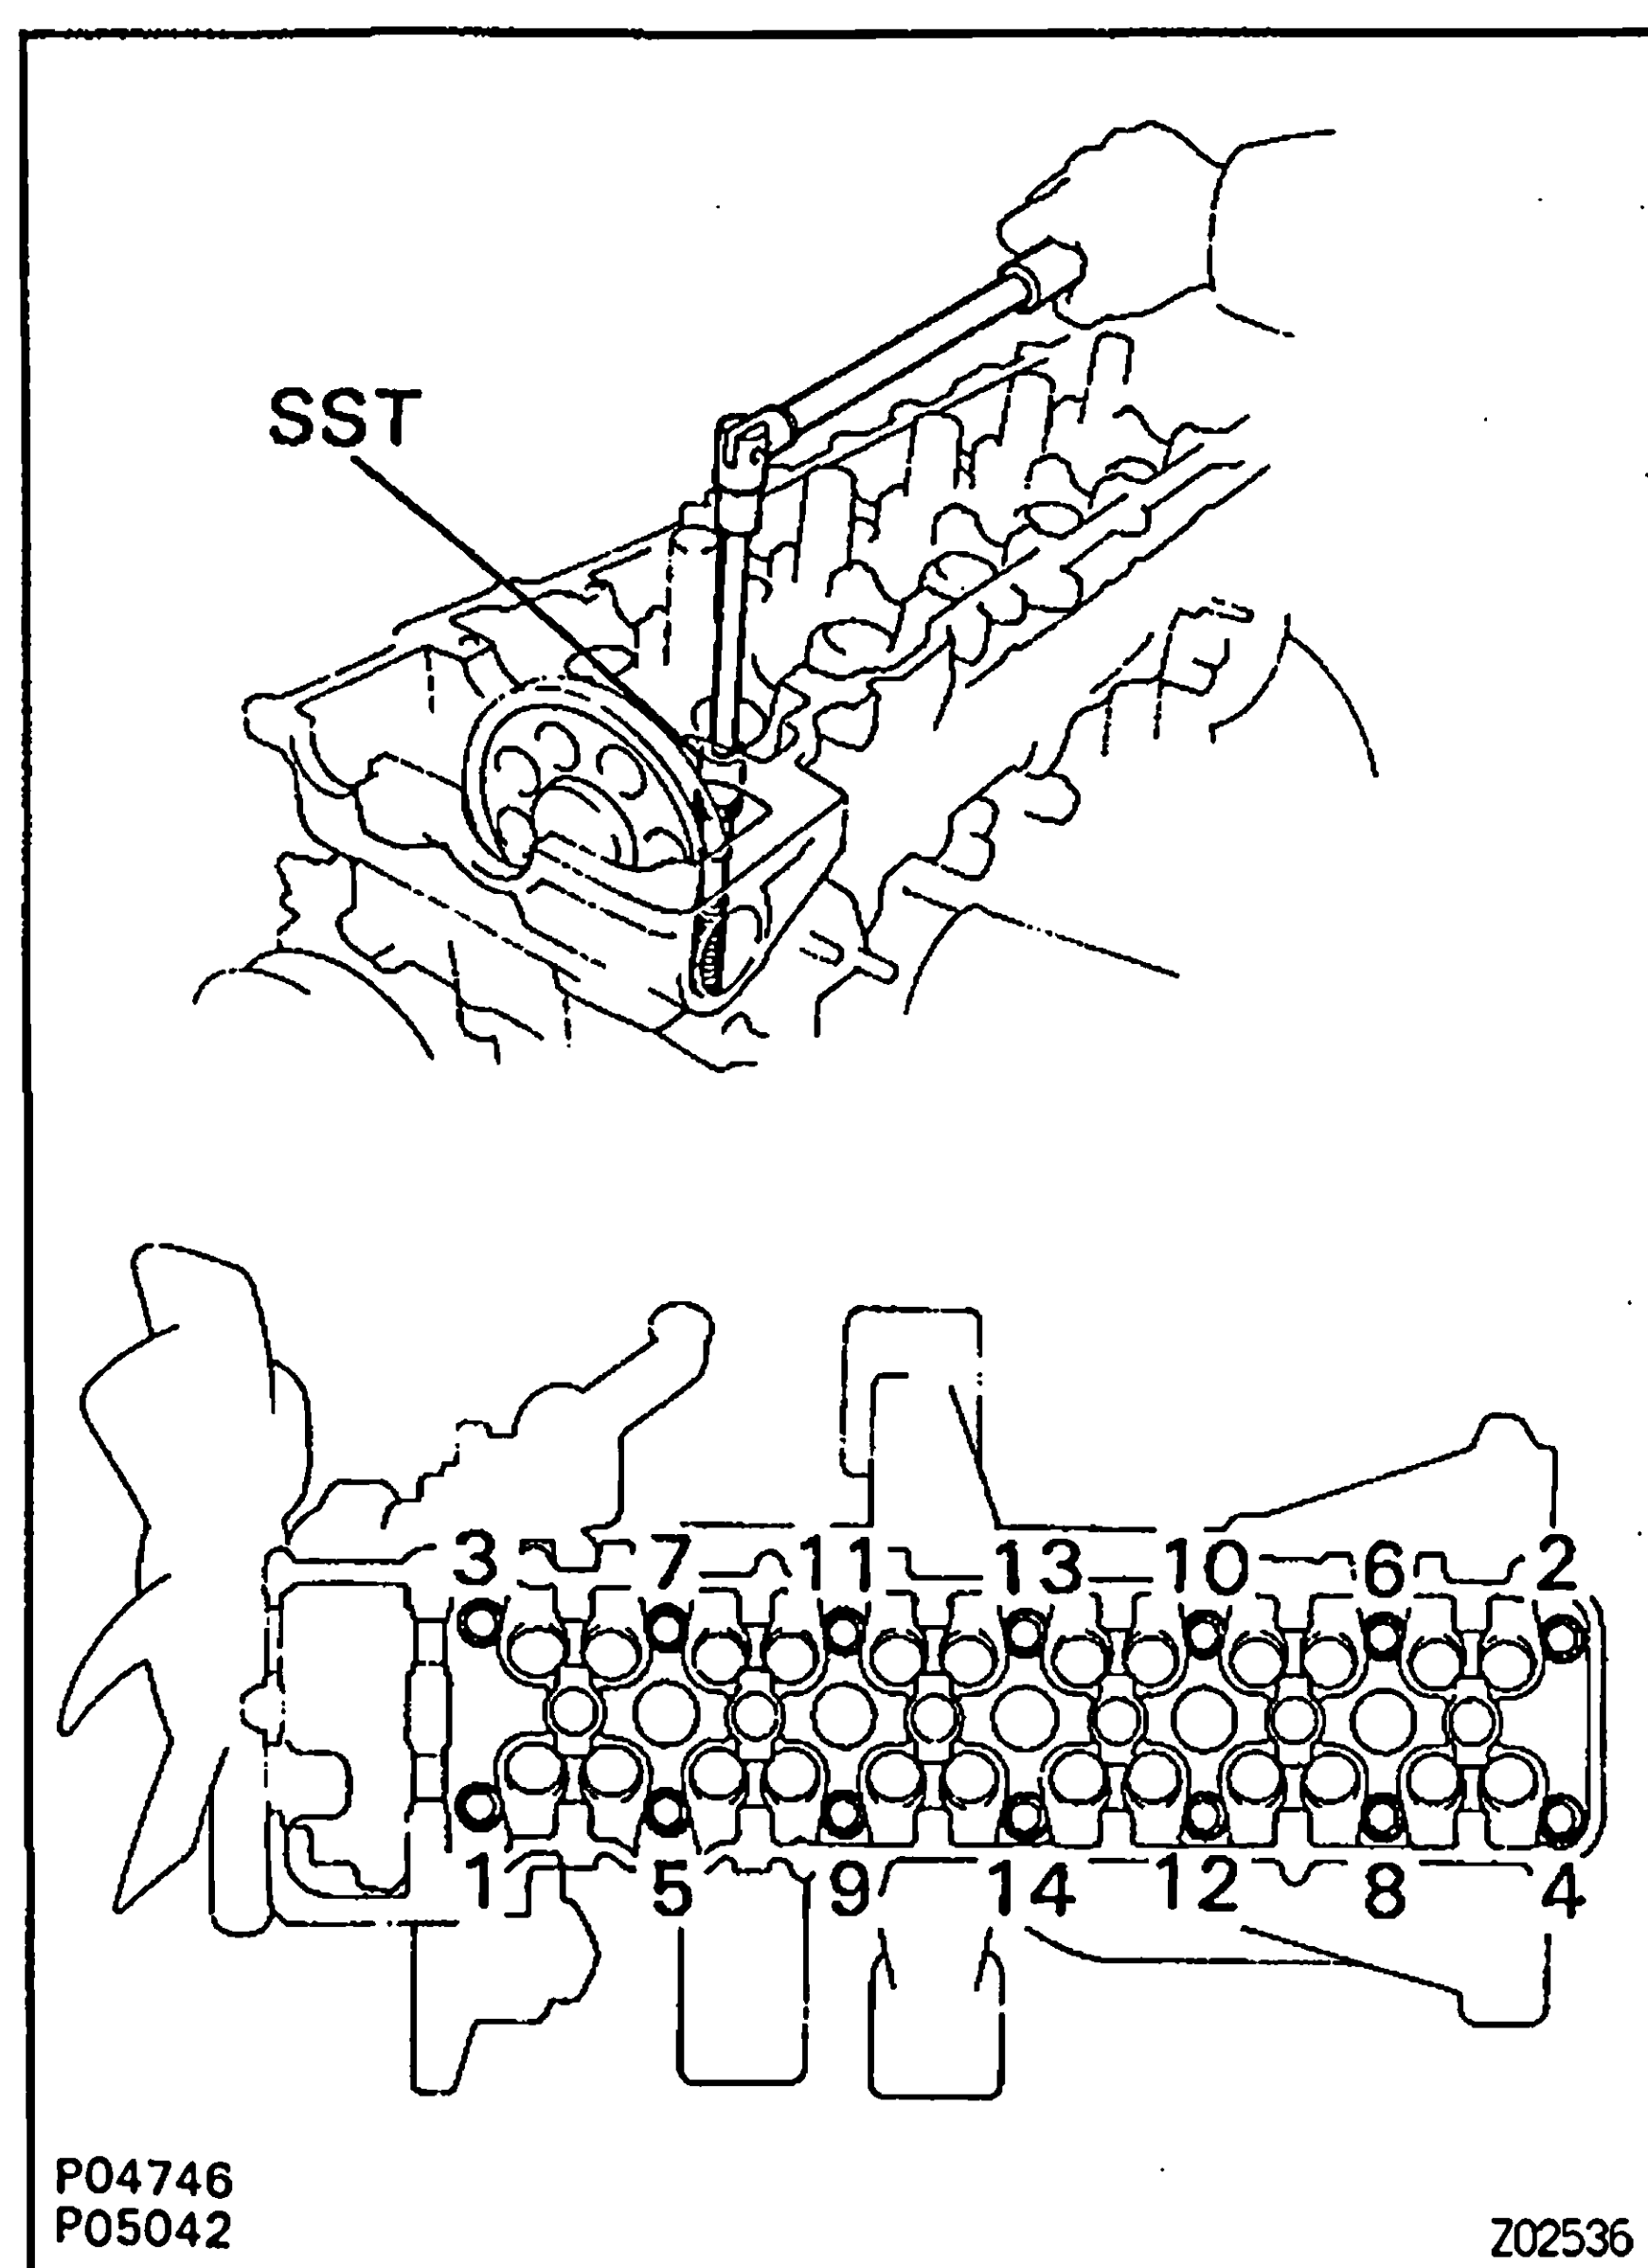

(b) Using SST, uniformly loosen and remove the 14 cylinder head bolts in several passes, in the sequence shown.

SST 09011—38121

NOTICE: Cylinder head warpage or cracking could result from removing bolts in incorrect order.

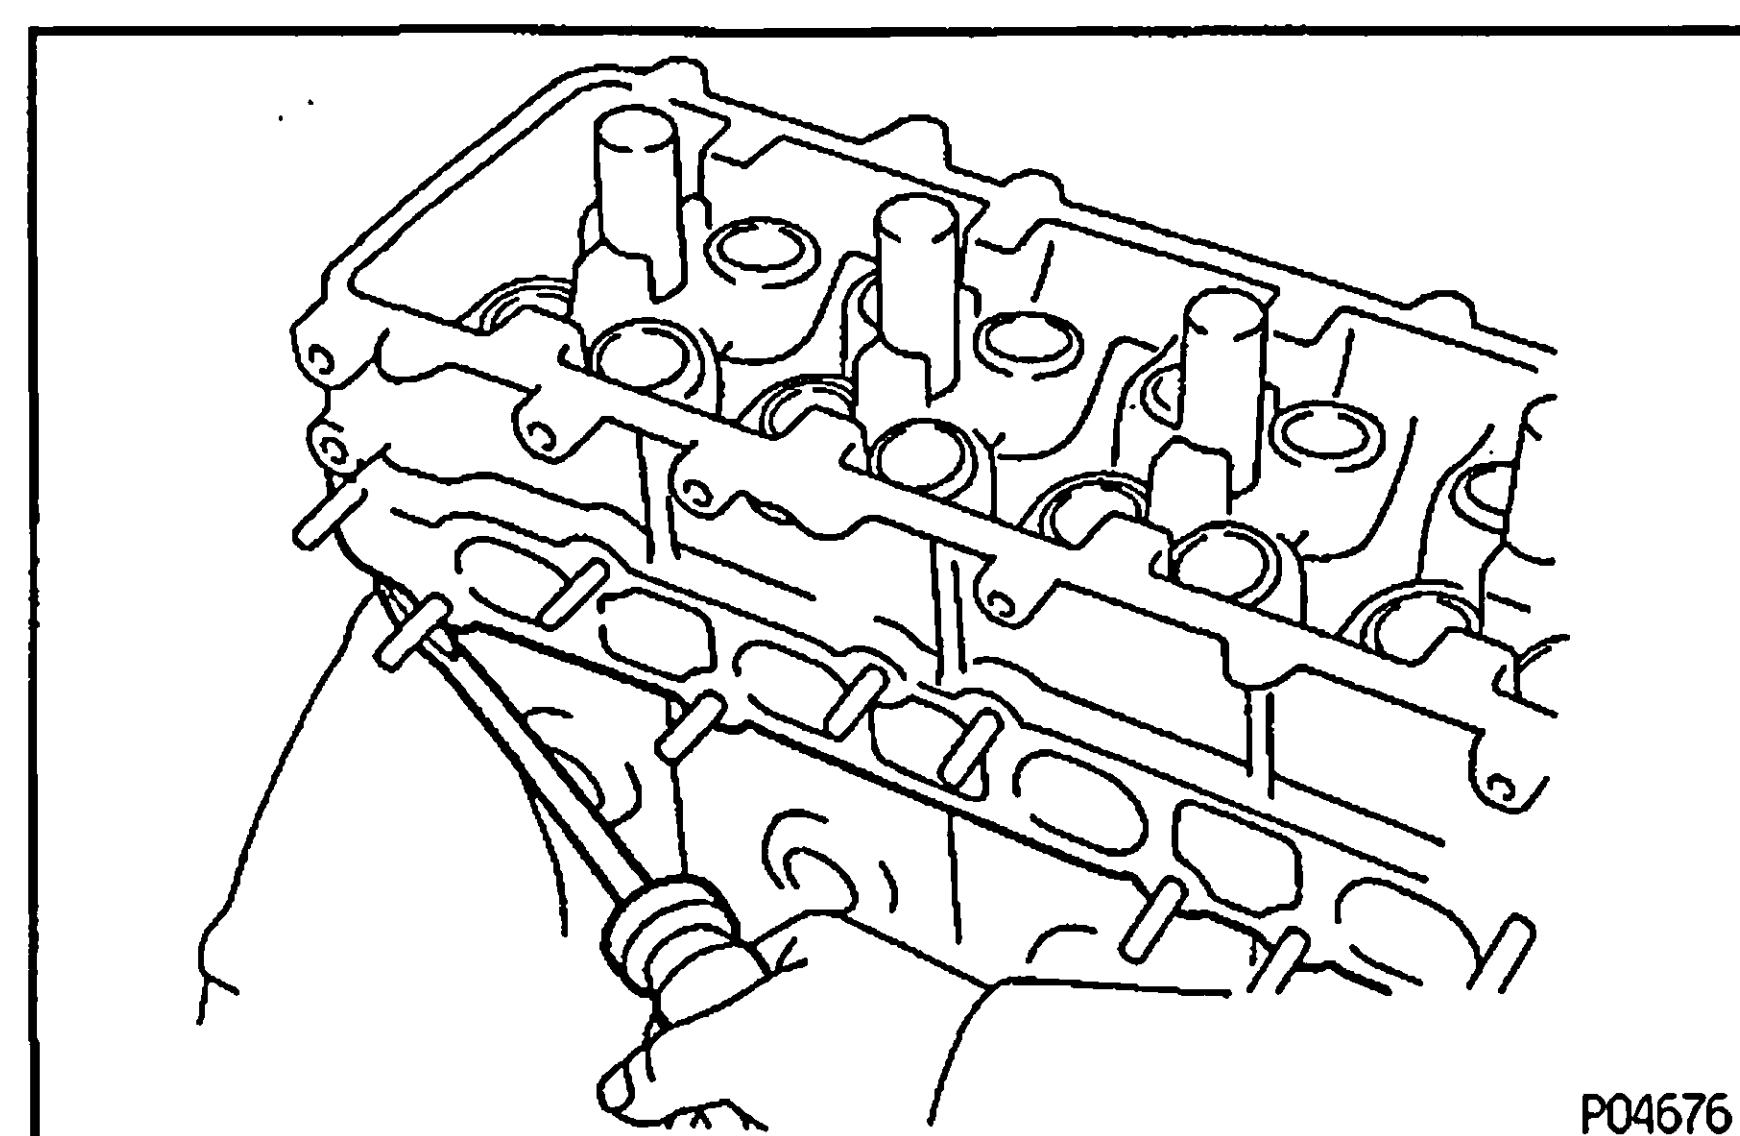


(c) Lift the cylinder head from the dowels on the cylinder block, and place the cylinder head on wooden blocks on a bench.

HINT: If the cylinder head is off, pry between the cylinder head and cylinder block with a screwdriver.

NOTICE: Be careful not to damage the contact surfaces of the cylinder head and cylinder block.


CYLINDER HEAD DISASSEMBLY

(See page EG-32)

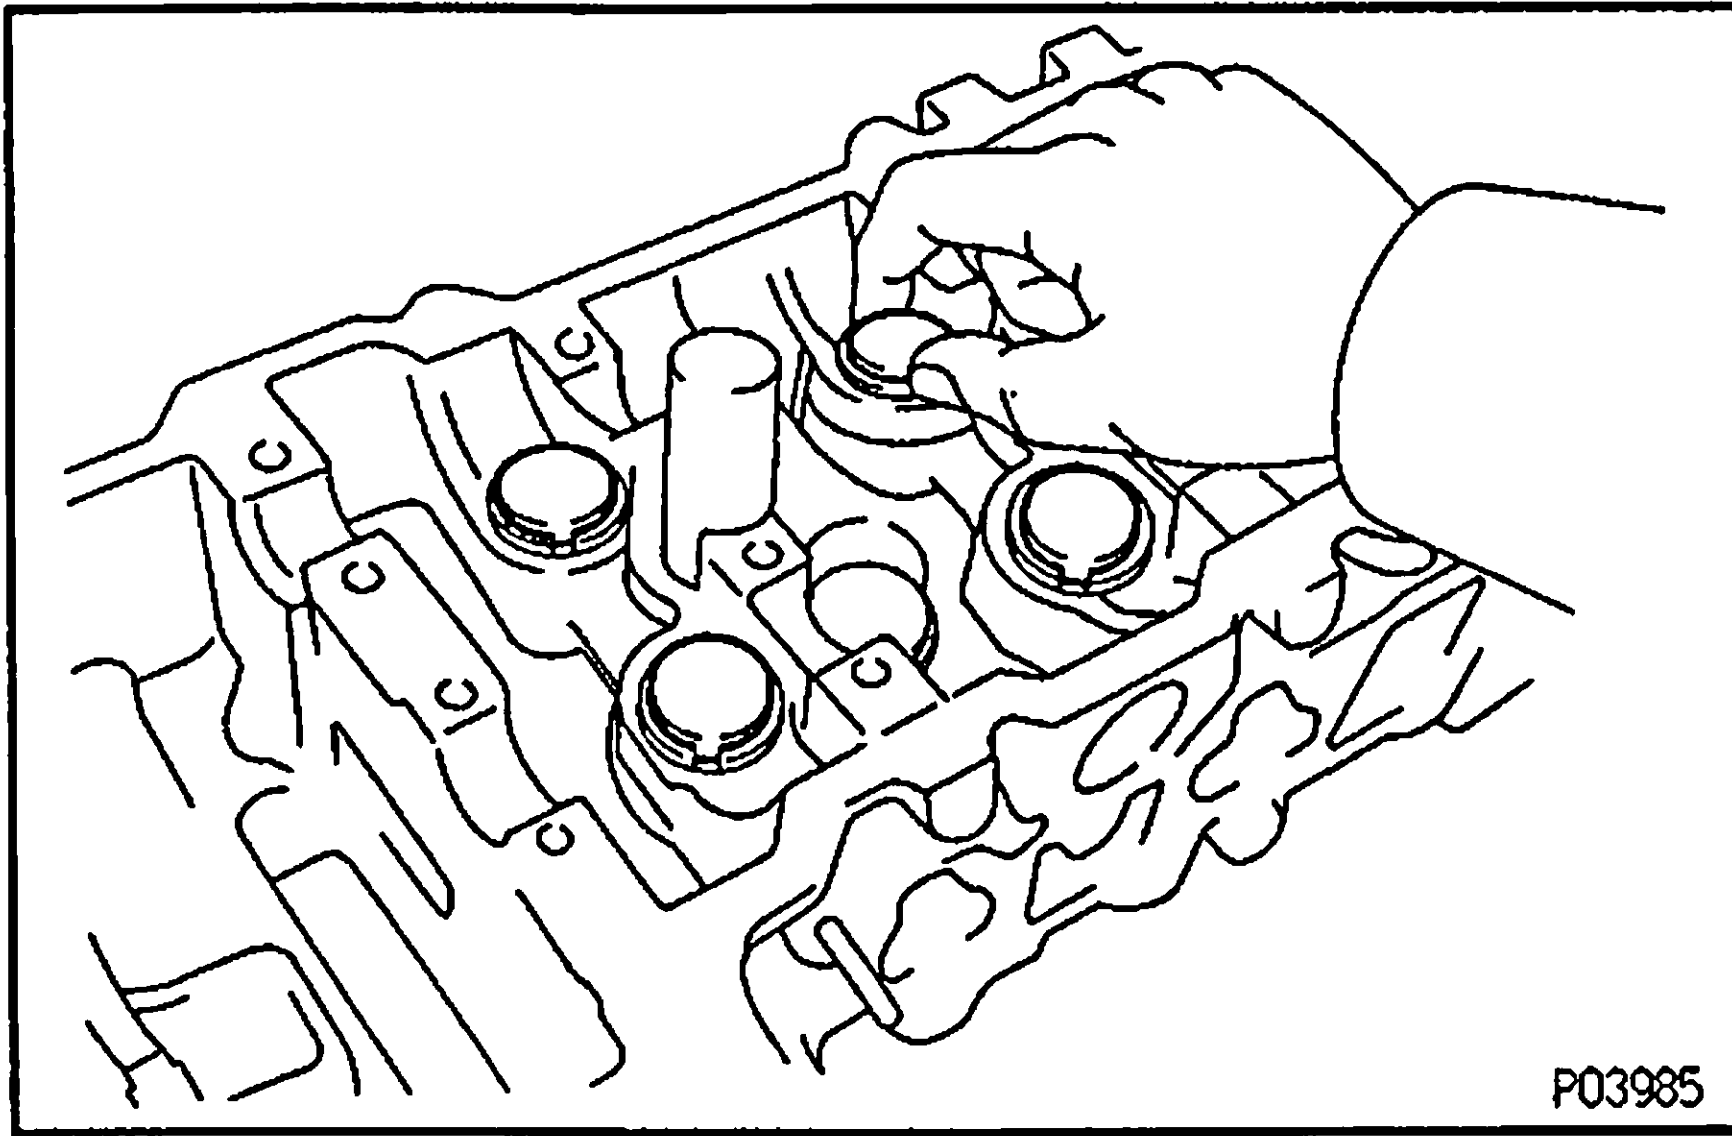1. REMOVE VALVE LIFTERS AND SHIMS

P03985

HINT: Arrange the valve lifters and shims in correct order.

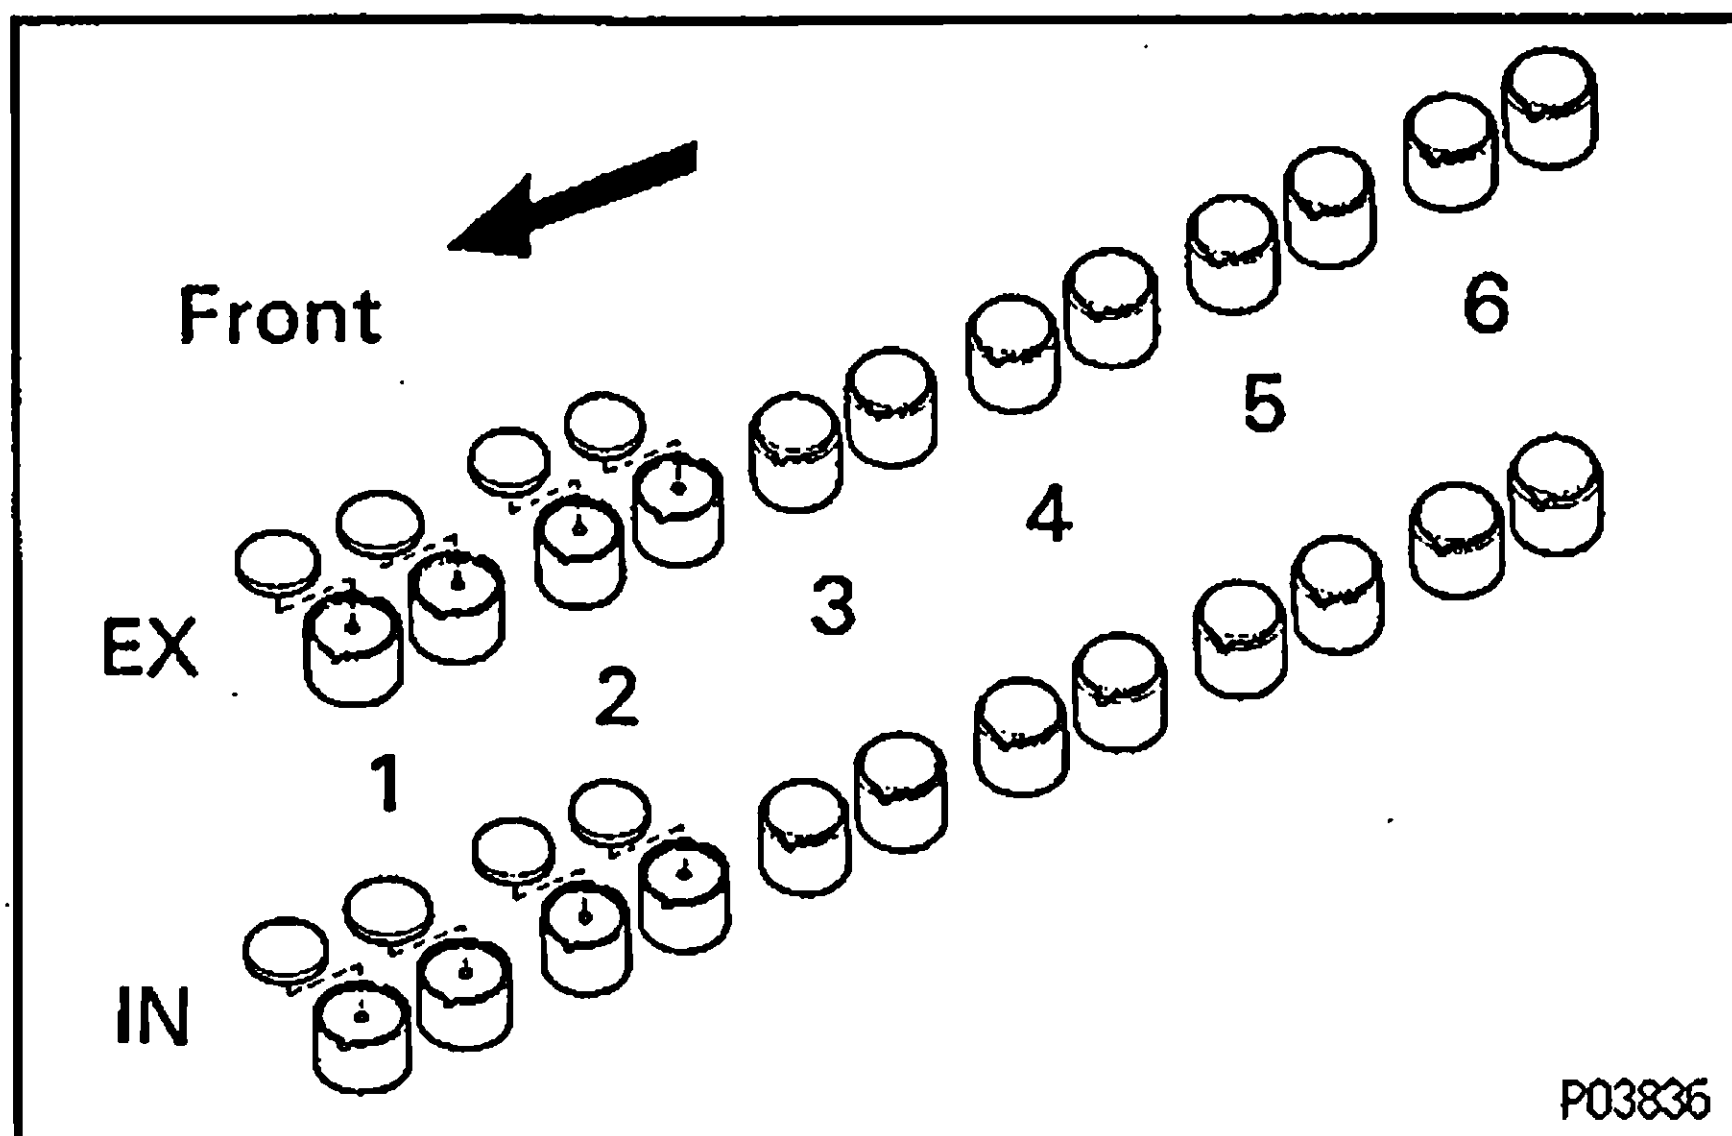


P03836

2. REMOVE VALVES

(a) Using SST, compress the valve spring and remove the two keepers.


SST 09202-70010

(b) Remove the spring retainer, valve spring and valve.

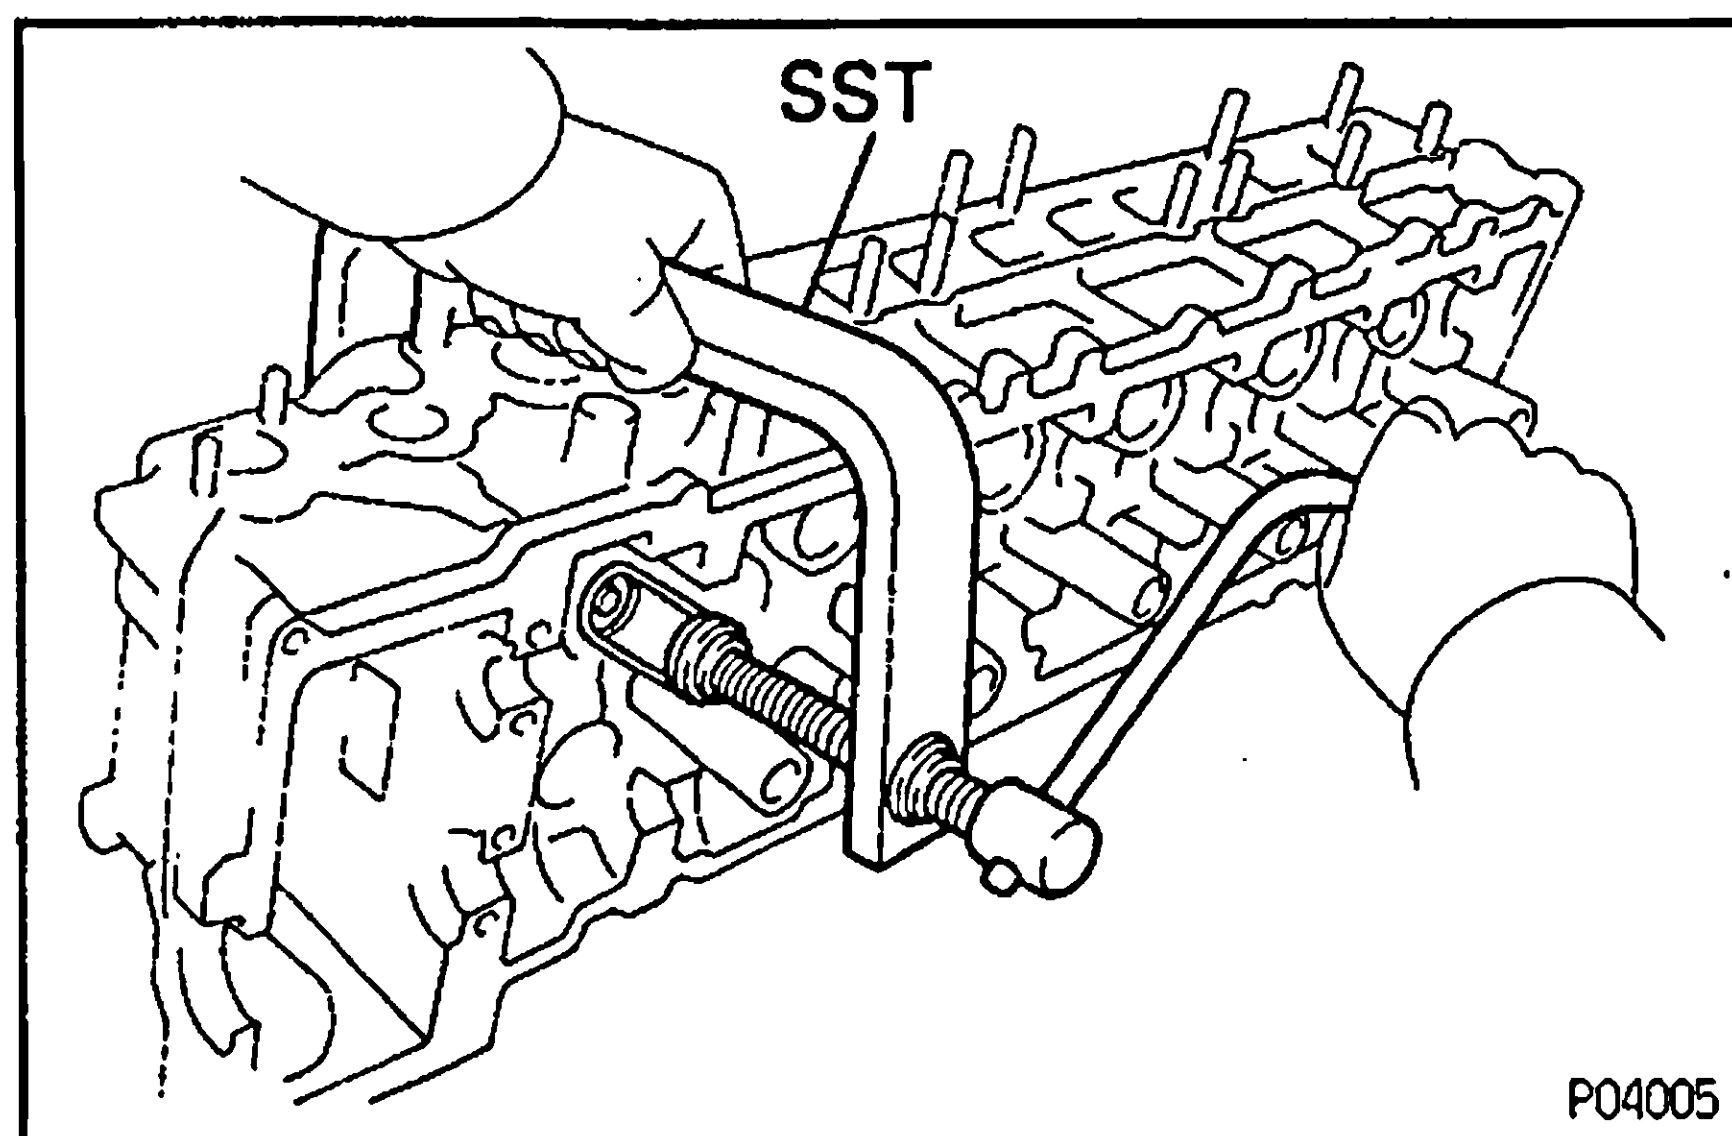


P04005

(c) Using needle-nose pliers, remove the oil seal.

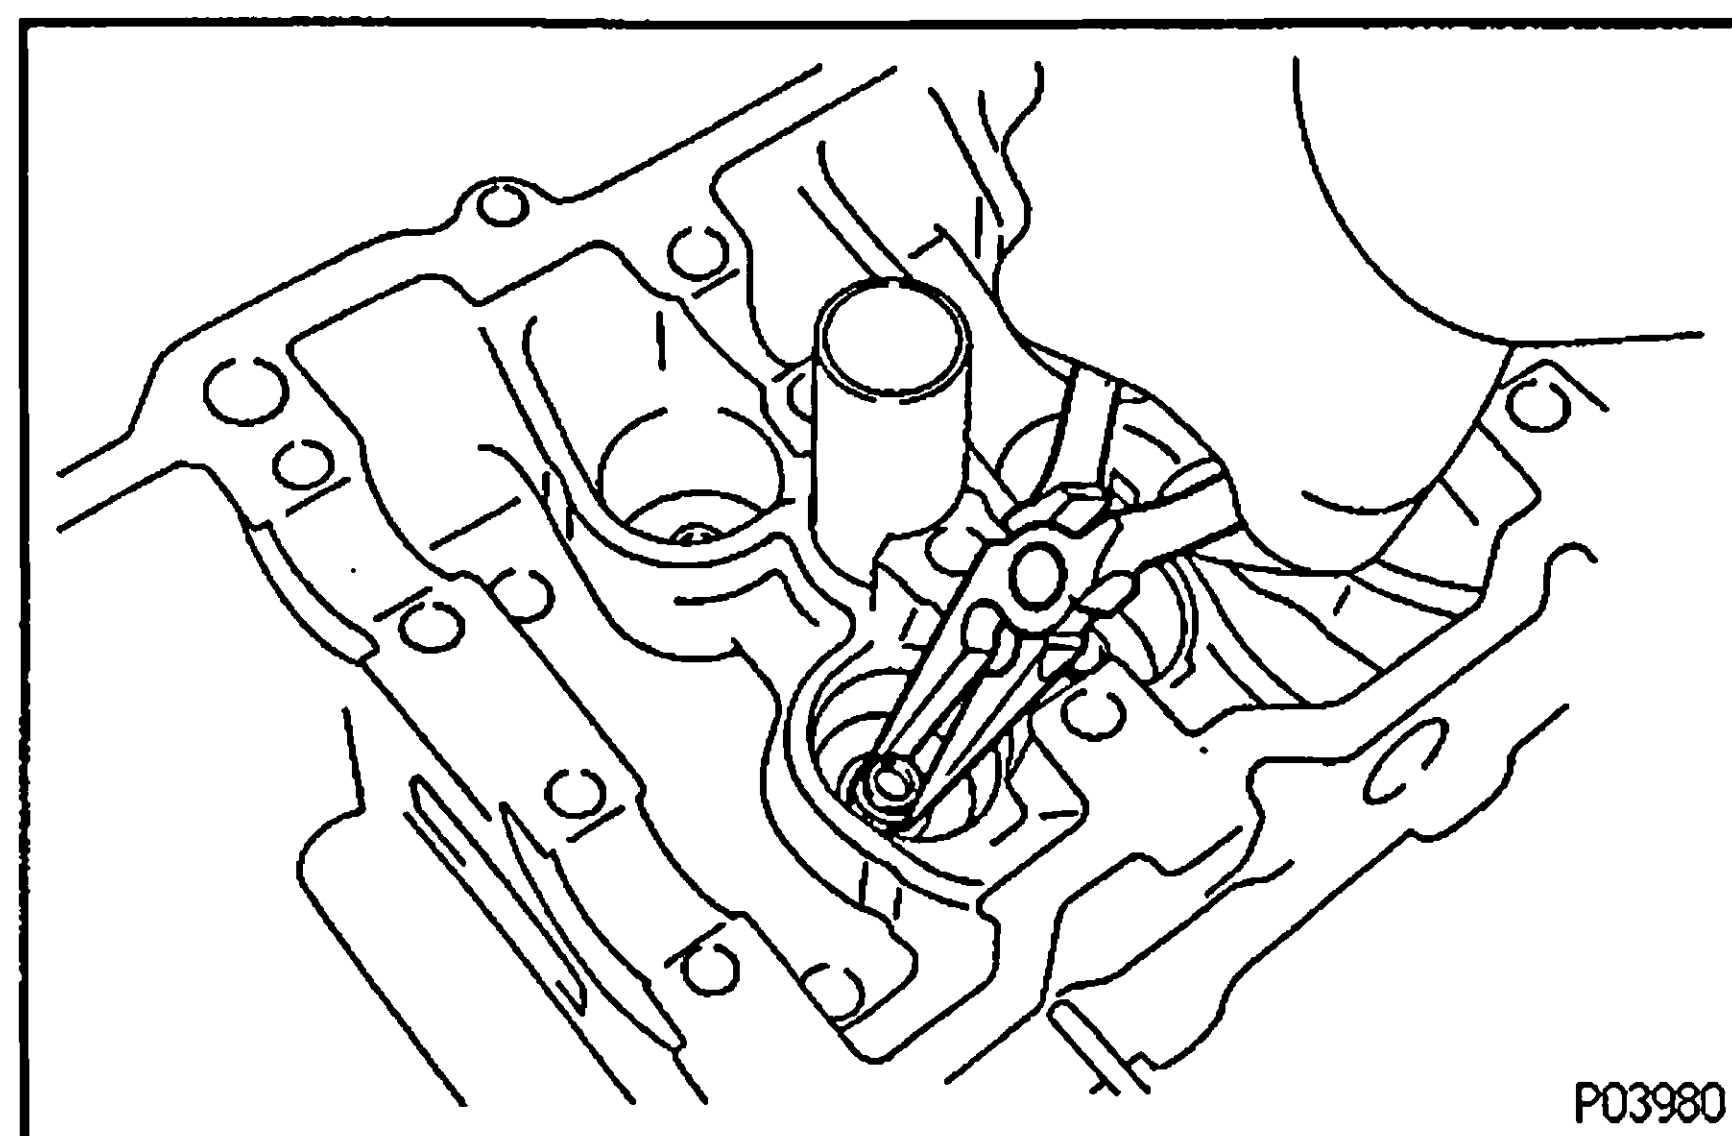


P03980

(d) Using compressed air and magnetic finger, remove the spring seat by blowing air.

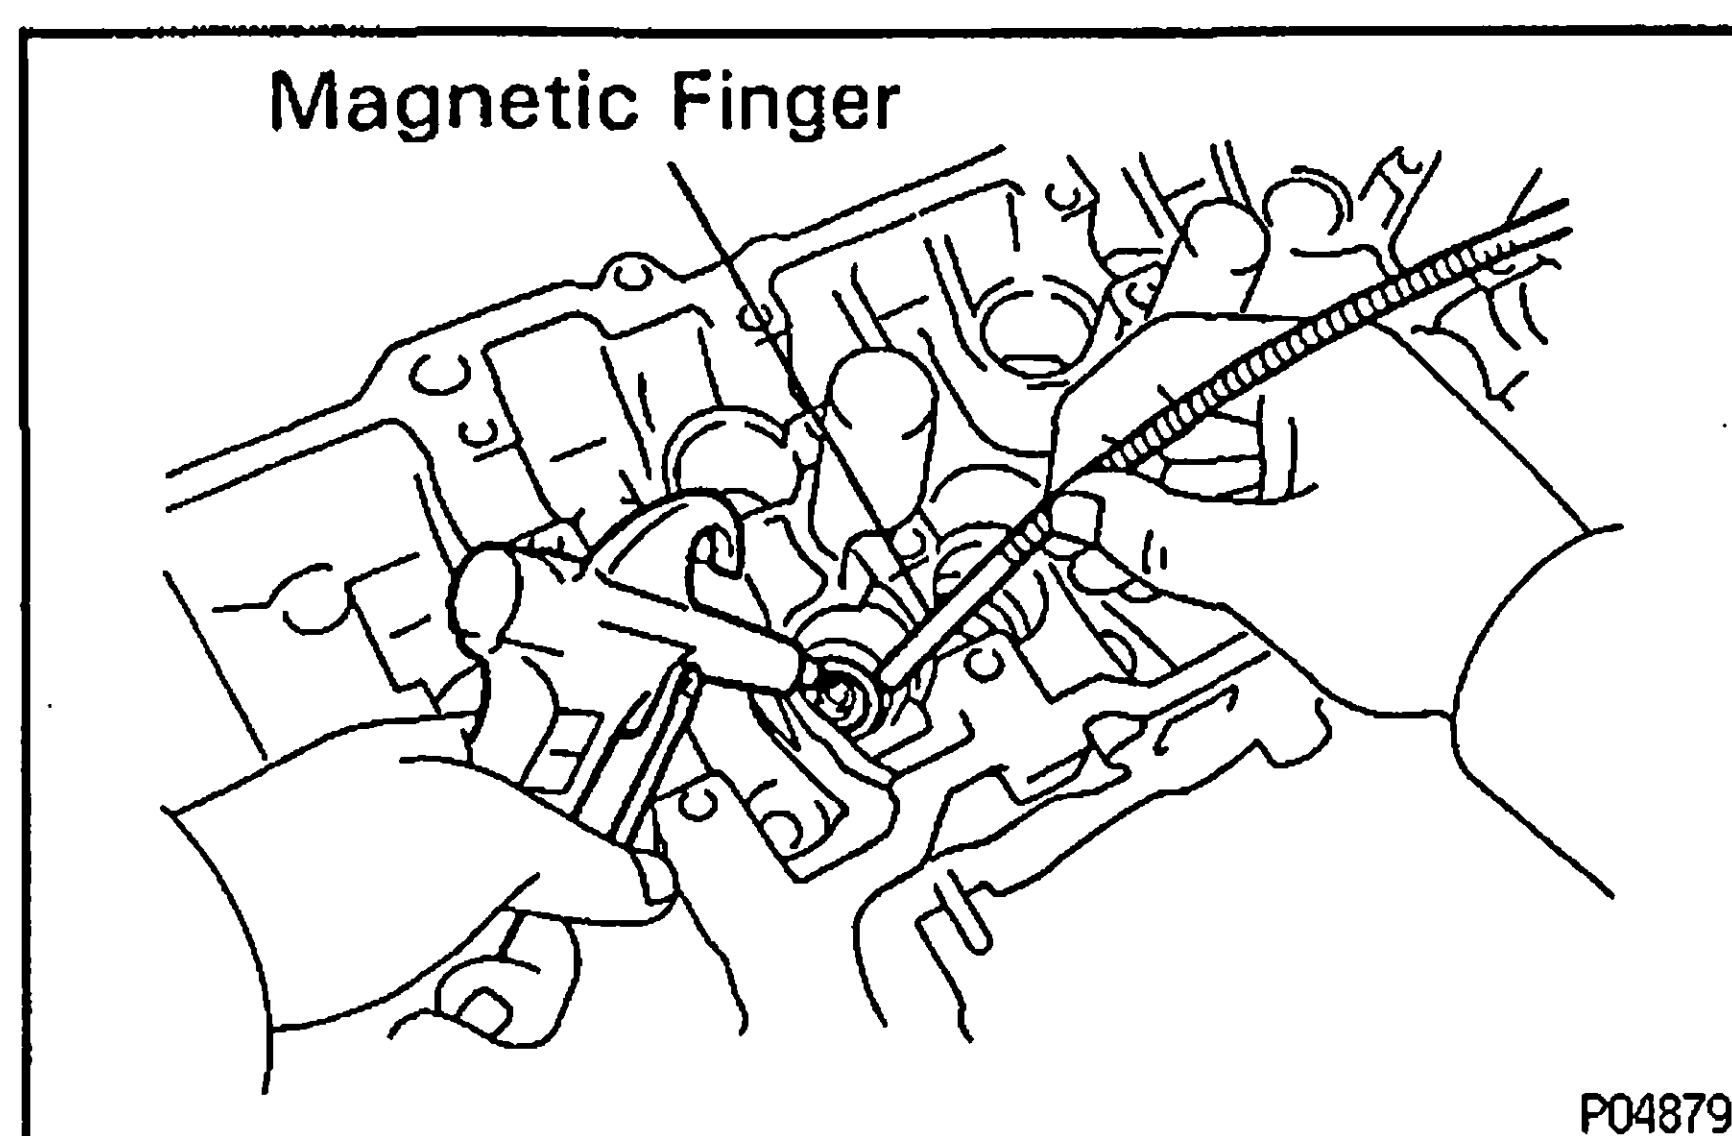


P04879

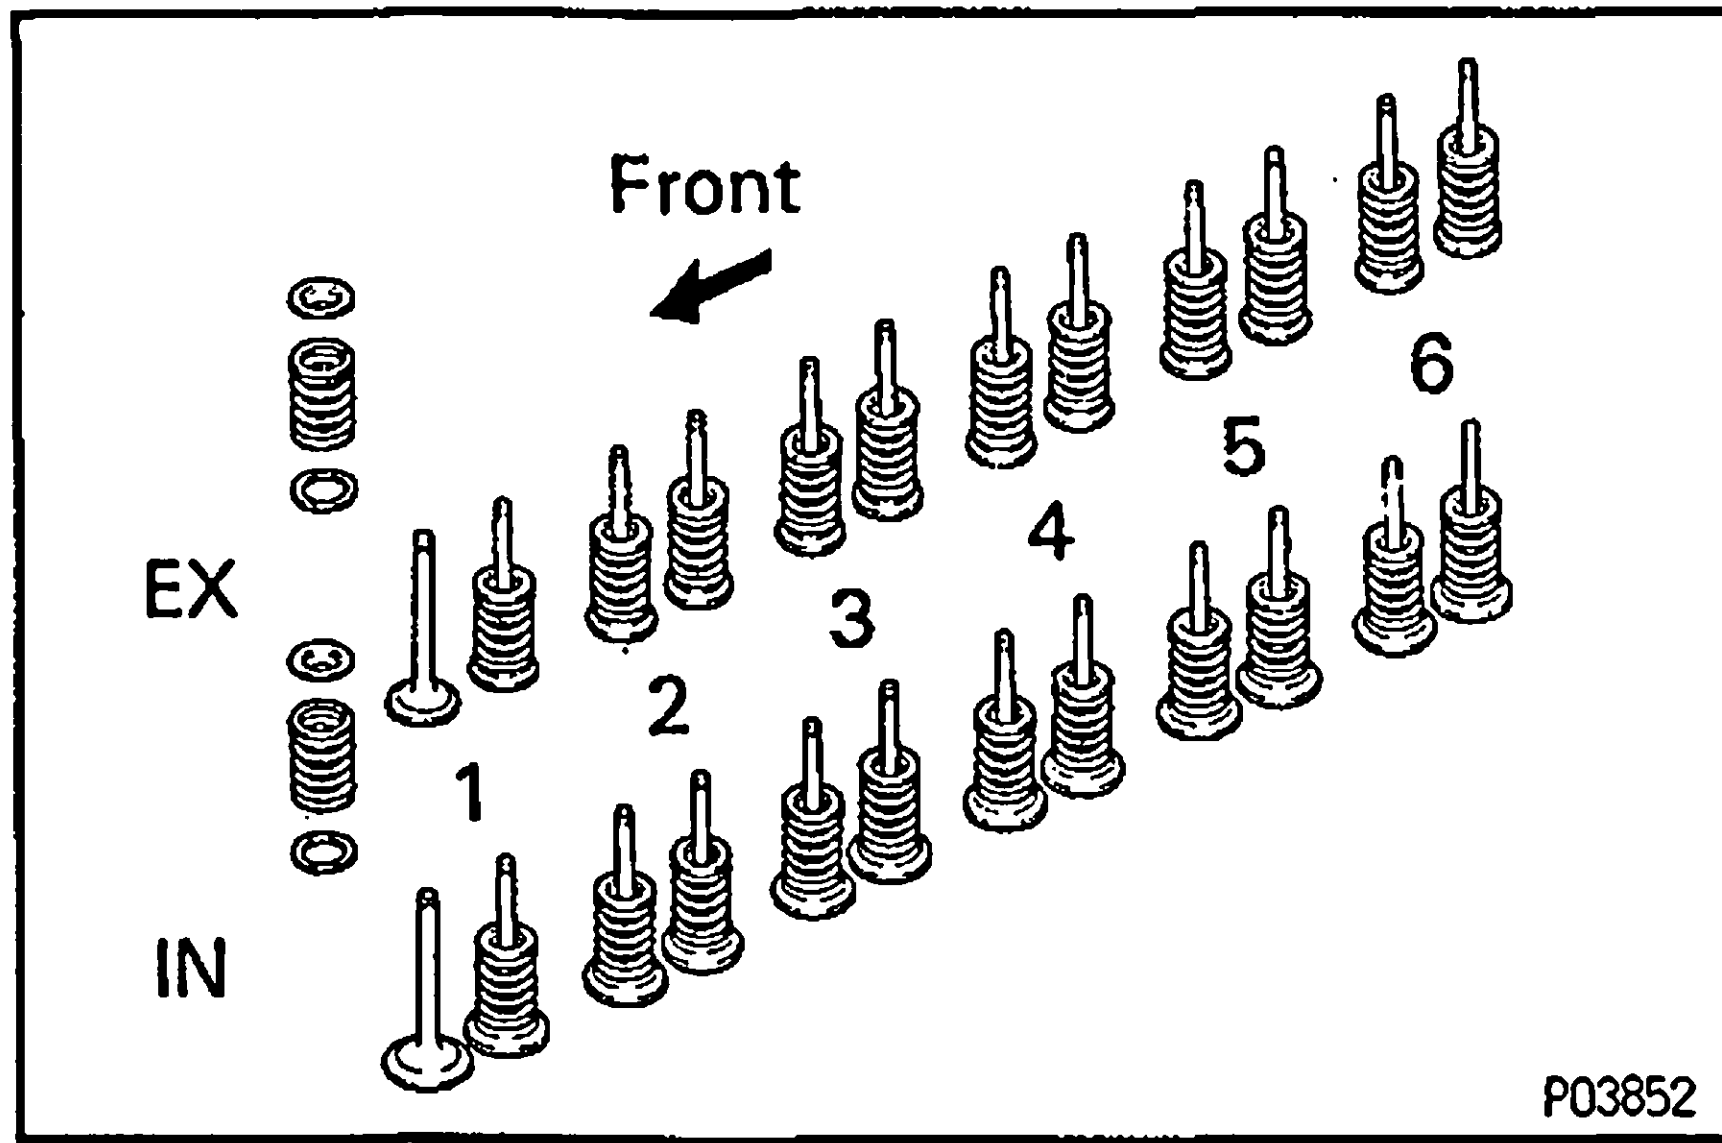

HINT: Arrange the valves, valve springs, spring seats and spring retainers in correct order.

EG

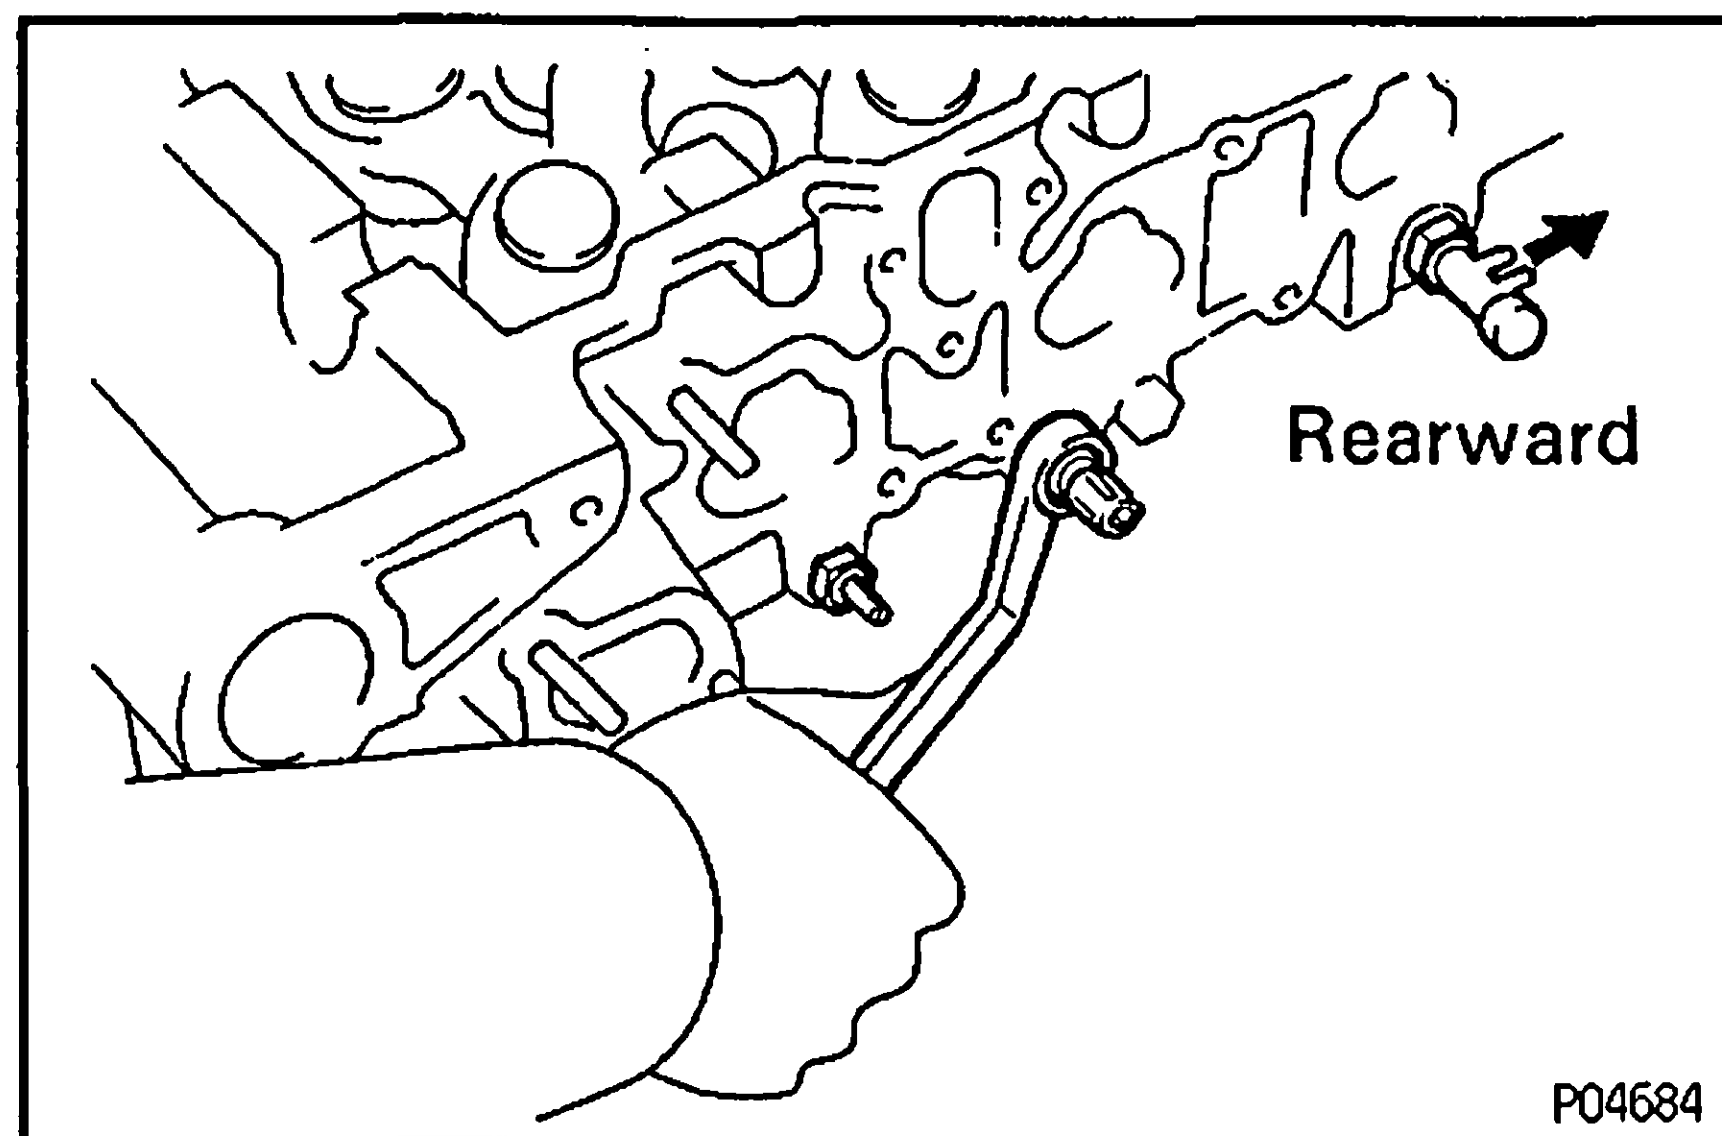


3. REMOVE FOLLOWING PARTS:

- (a) Water temperature switch
- (b) Water temperature sensor (for G.C.C.)
- (c) BVSV

CYLINDER HEAD COMPONENTS INSPECTION, CLEANING AND REPAIR


1. CLEAN TOP SURFACES OF PISTONS AND CYLINDER BLOCK

- (a) Turn the crankshaft, and bring each piston to top dead center (TDC). Using a gasket scraper, remove all the carbon from the piston top surface.

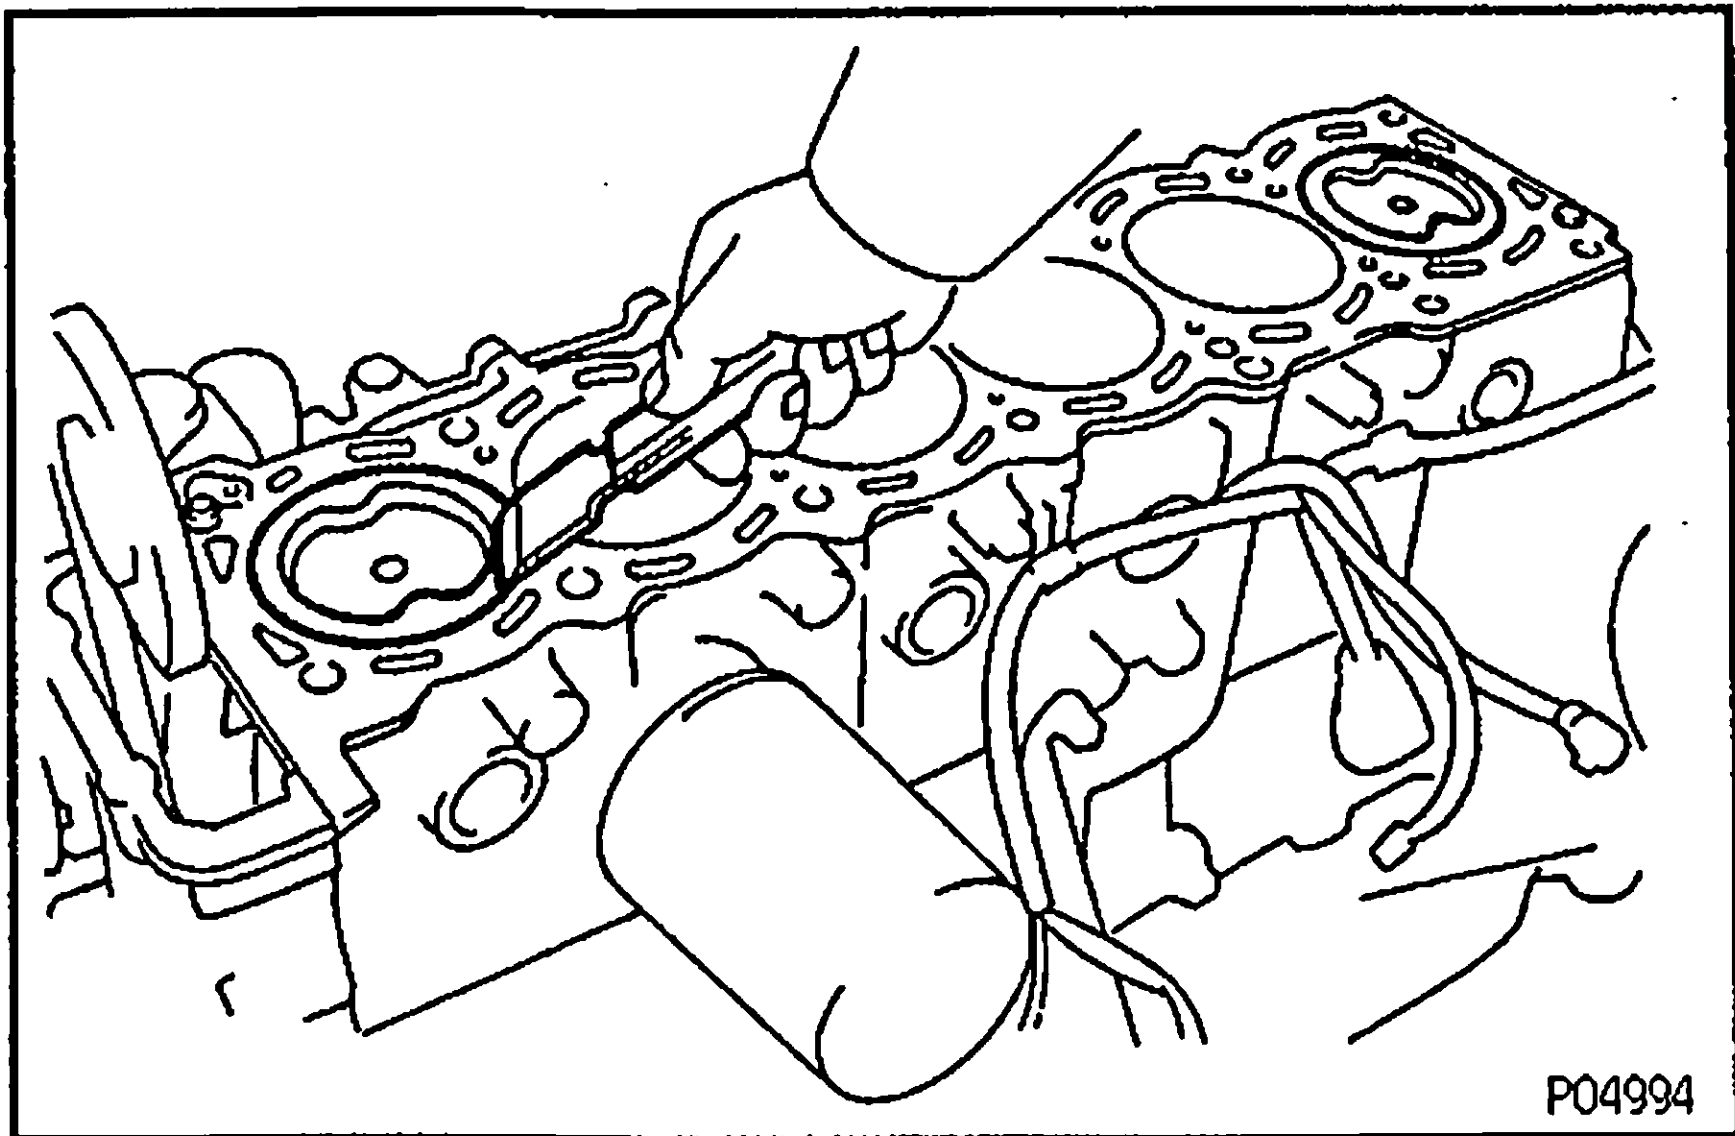

- (b) Using a gasket scraper, remove all the gasket material from the cylinder block surface.
- (c) Using compressed air, blow carbon and oil from the bolt holes.

CAUTION: Protect your eyes when using high-compressed air.

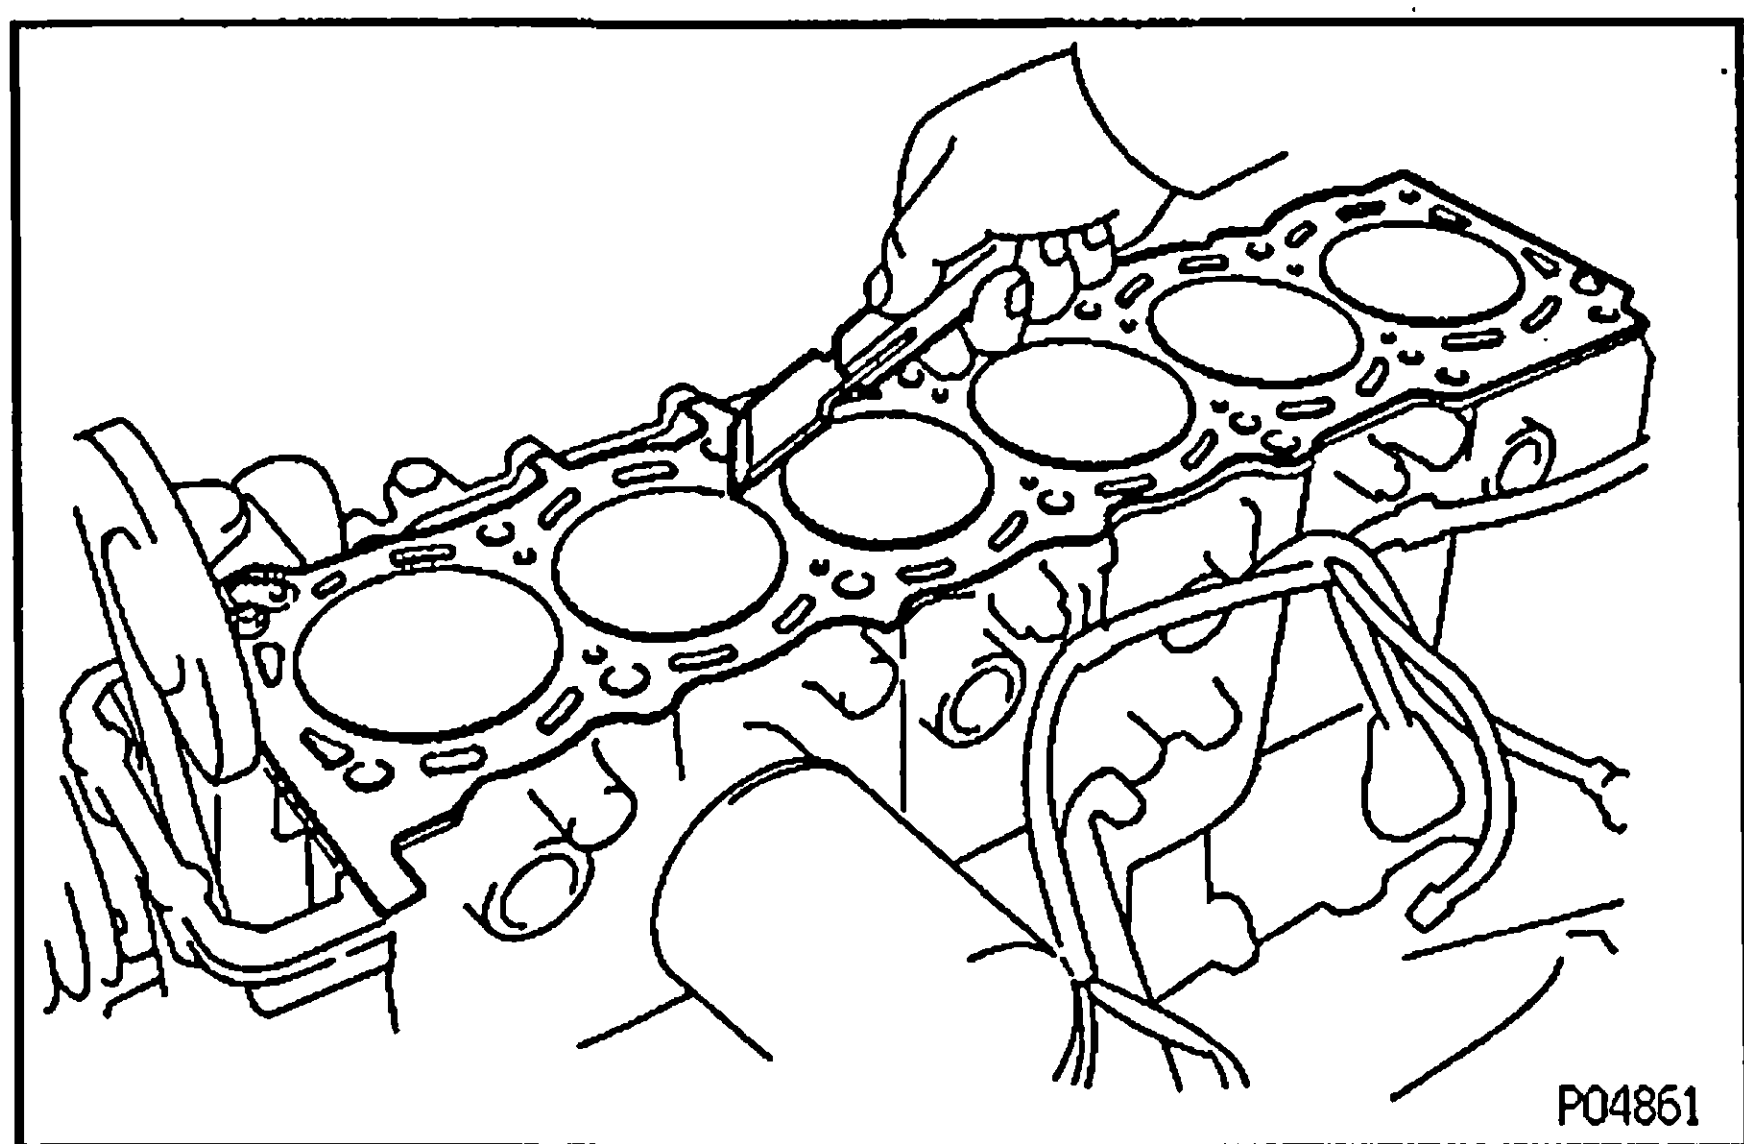


2. CLEAN CYLINDER HEAD

A. Remove gasket material

Using a gasket scraper, remove all the gasket material from the cylinder block contact surface.


NOTICE: Be careful not to scratch the cylinder block contact surface.

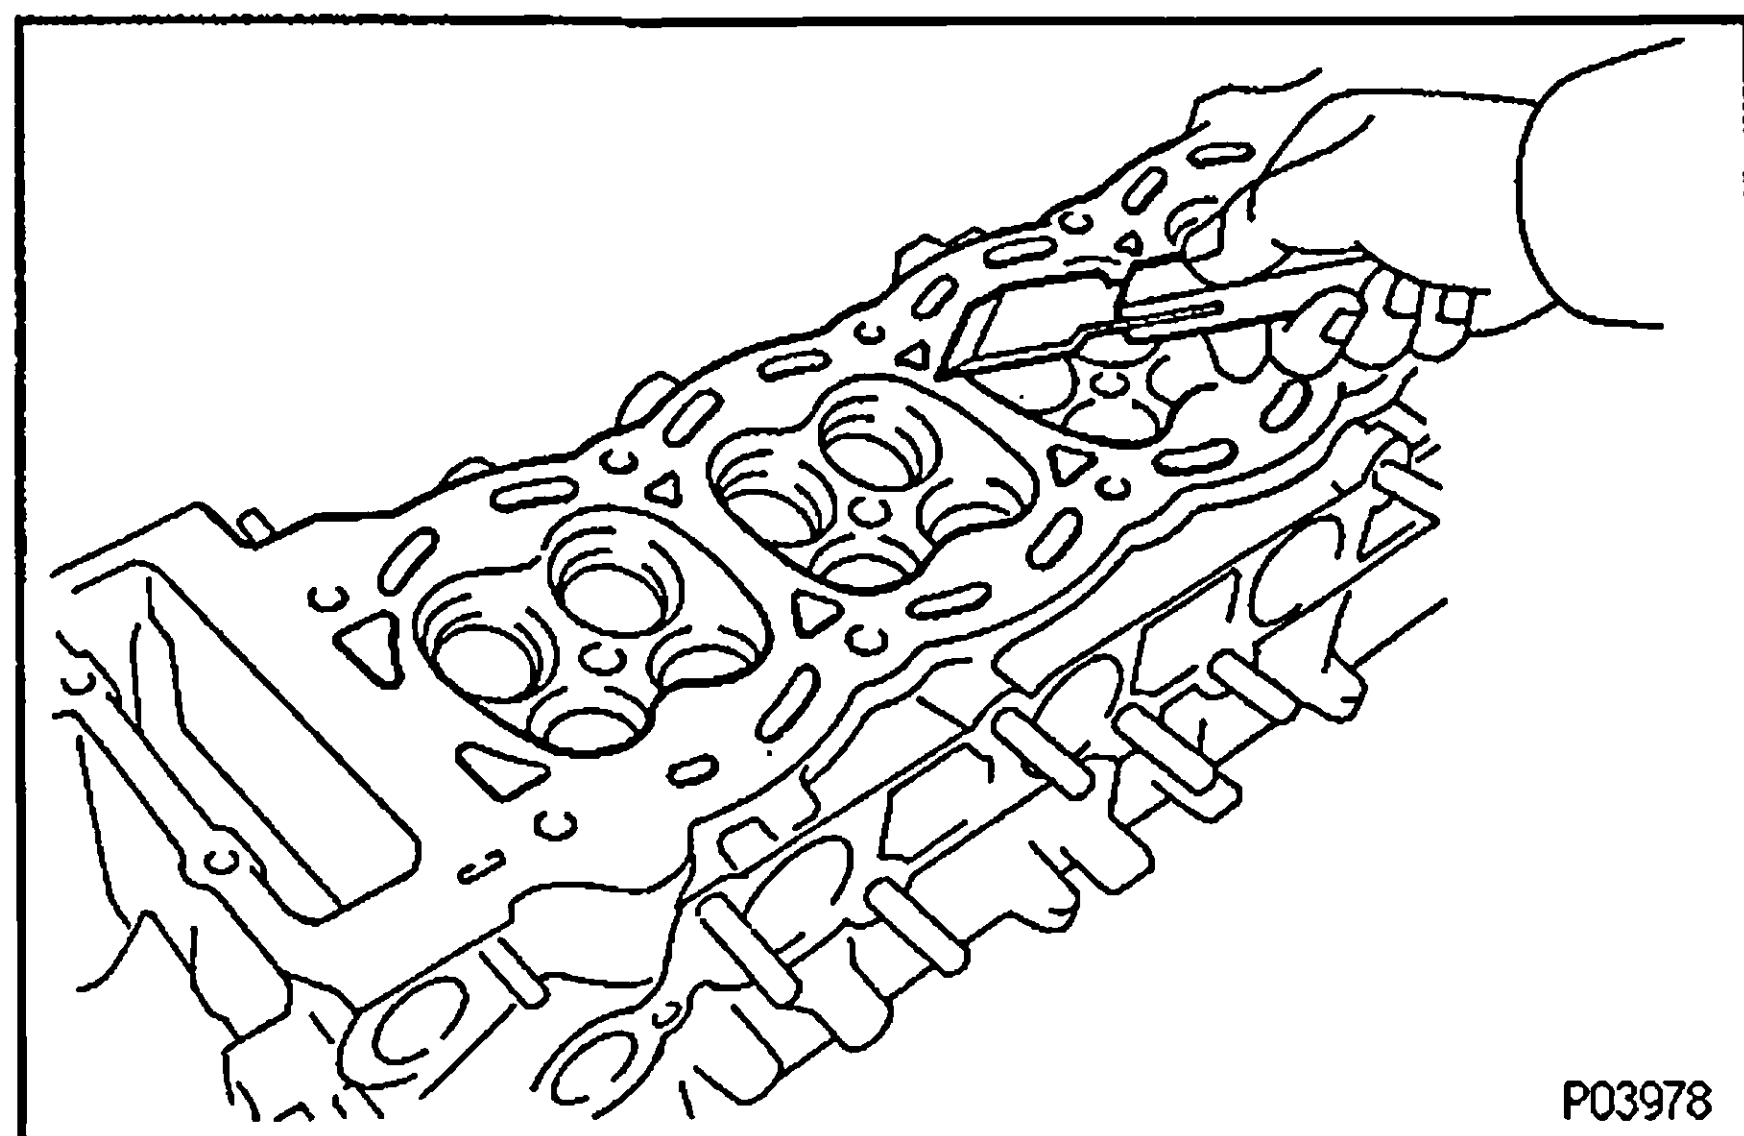

B. Clean combustion chambers


Using a wire brush, remove all the carbon from the combustion chambers.


NOTICE: Be careful not to scratch the cylinder block contact surface.

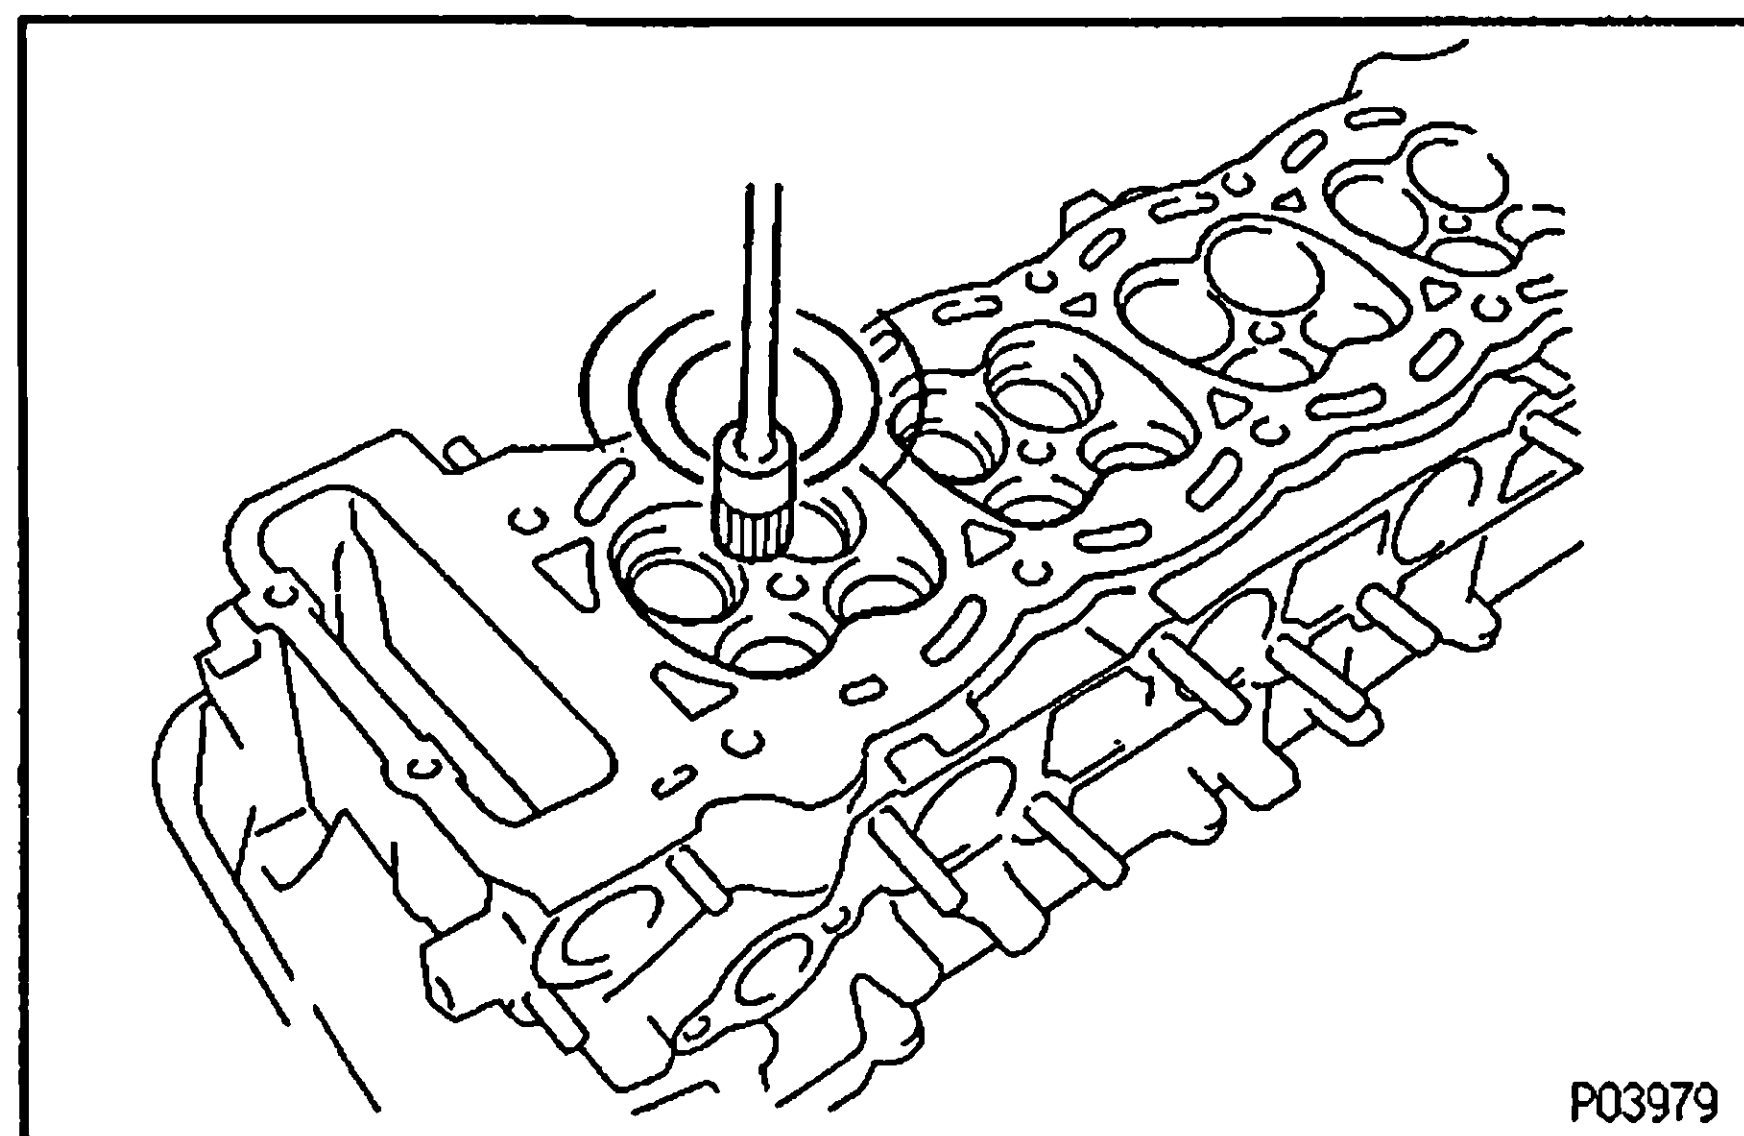

C. Clean valve guide bushings

Using a valve guide bushing brush and solvent, clean all the guide bushings.

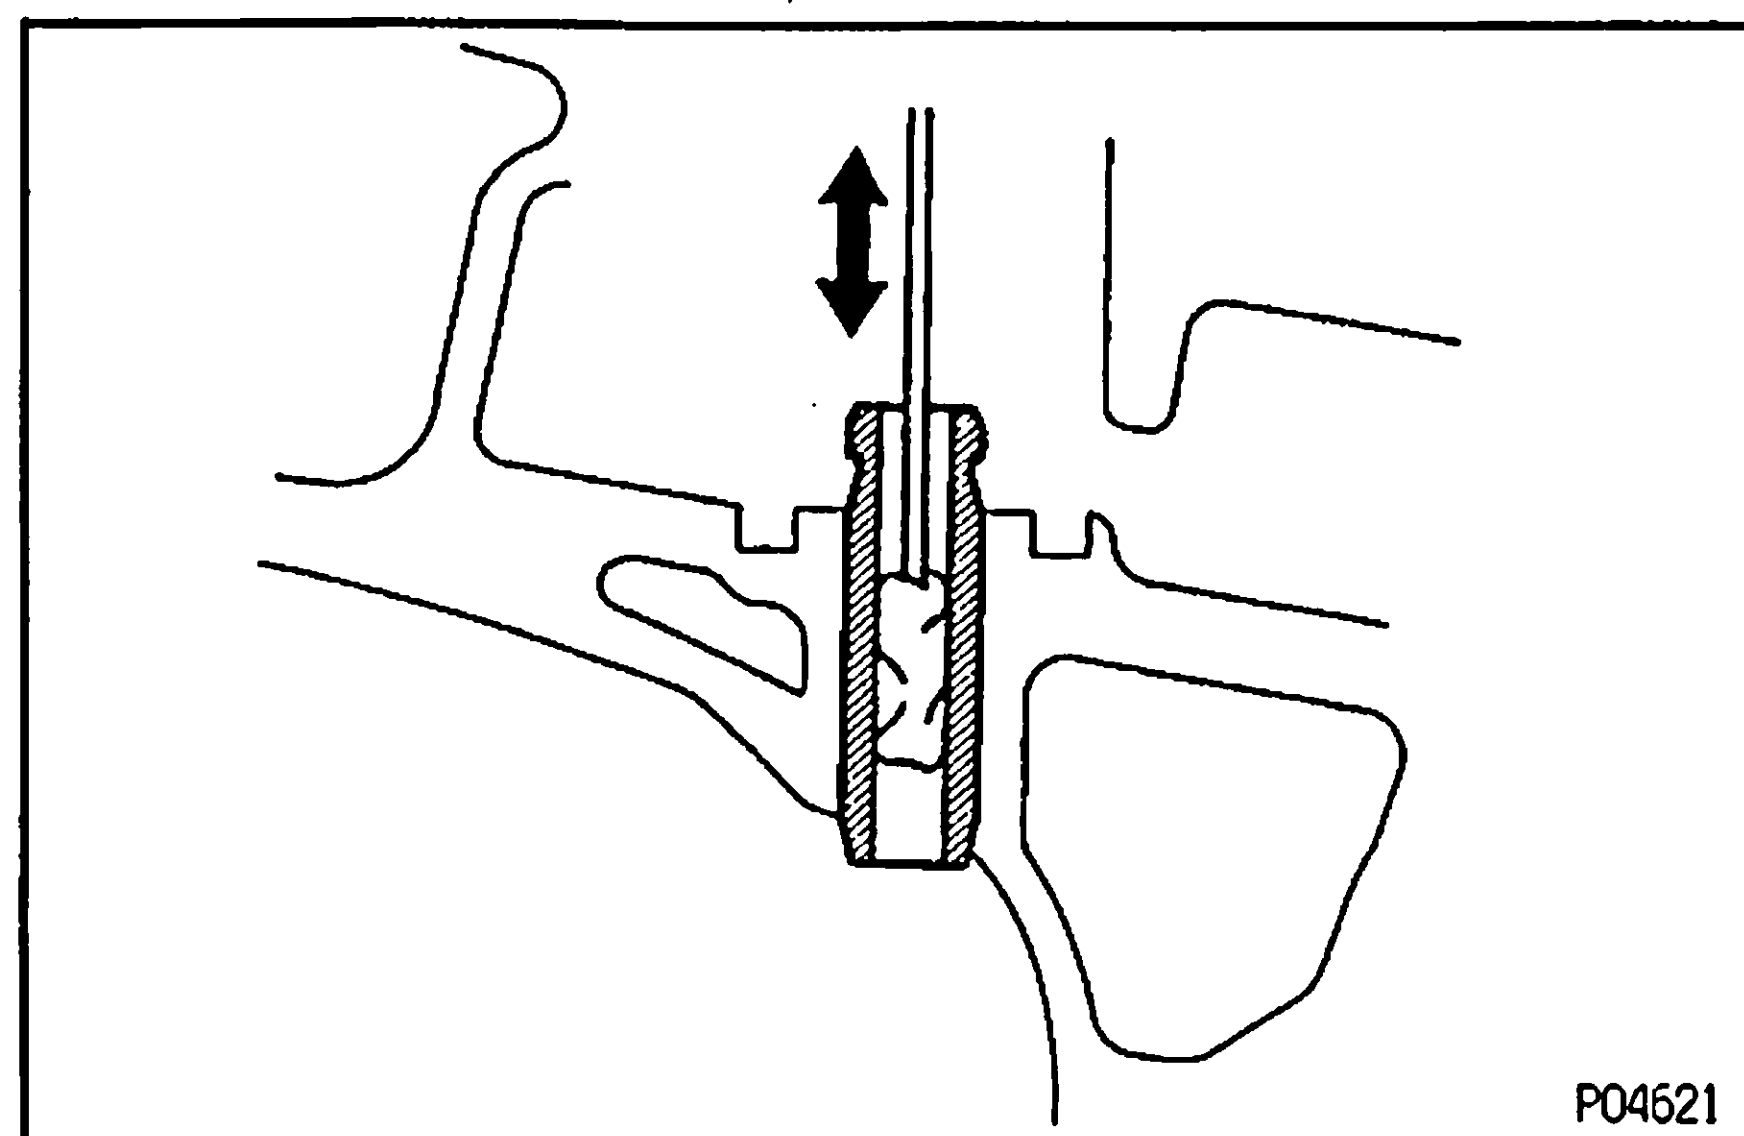


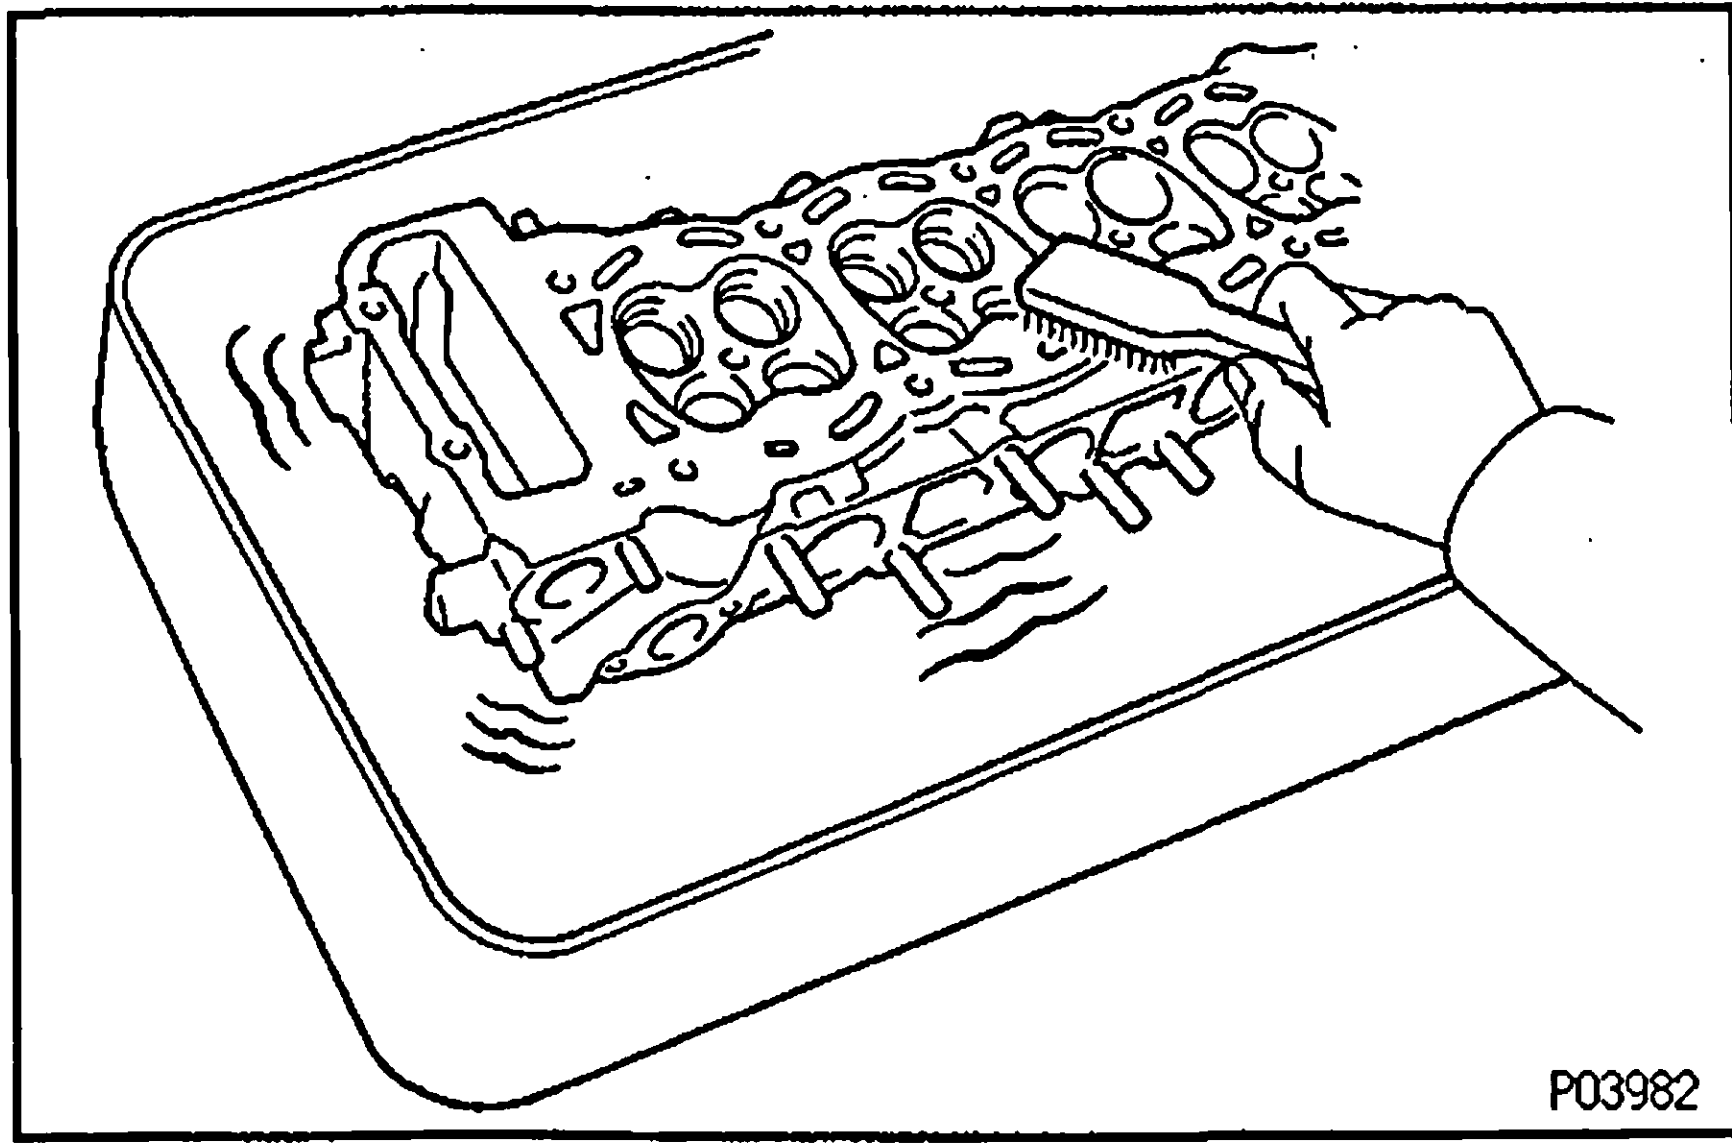

D. Clean cylinder head

Using a soft brush and solvent, thoroughly clean the cylinder head.

EG

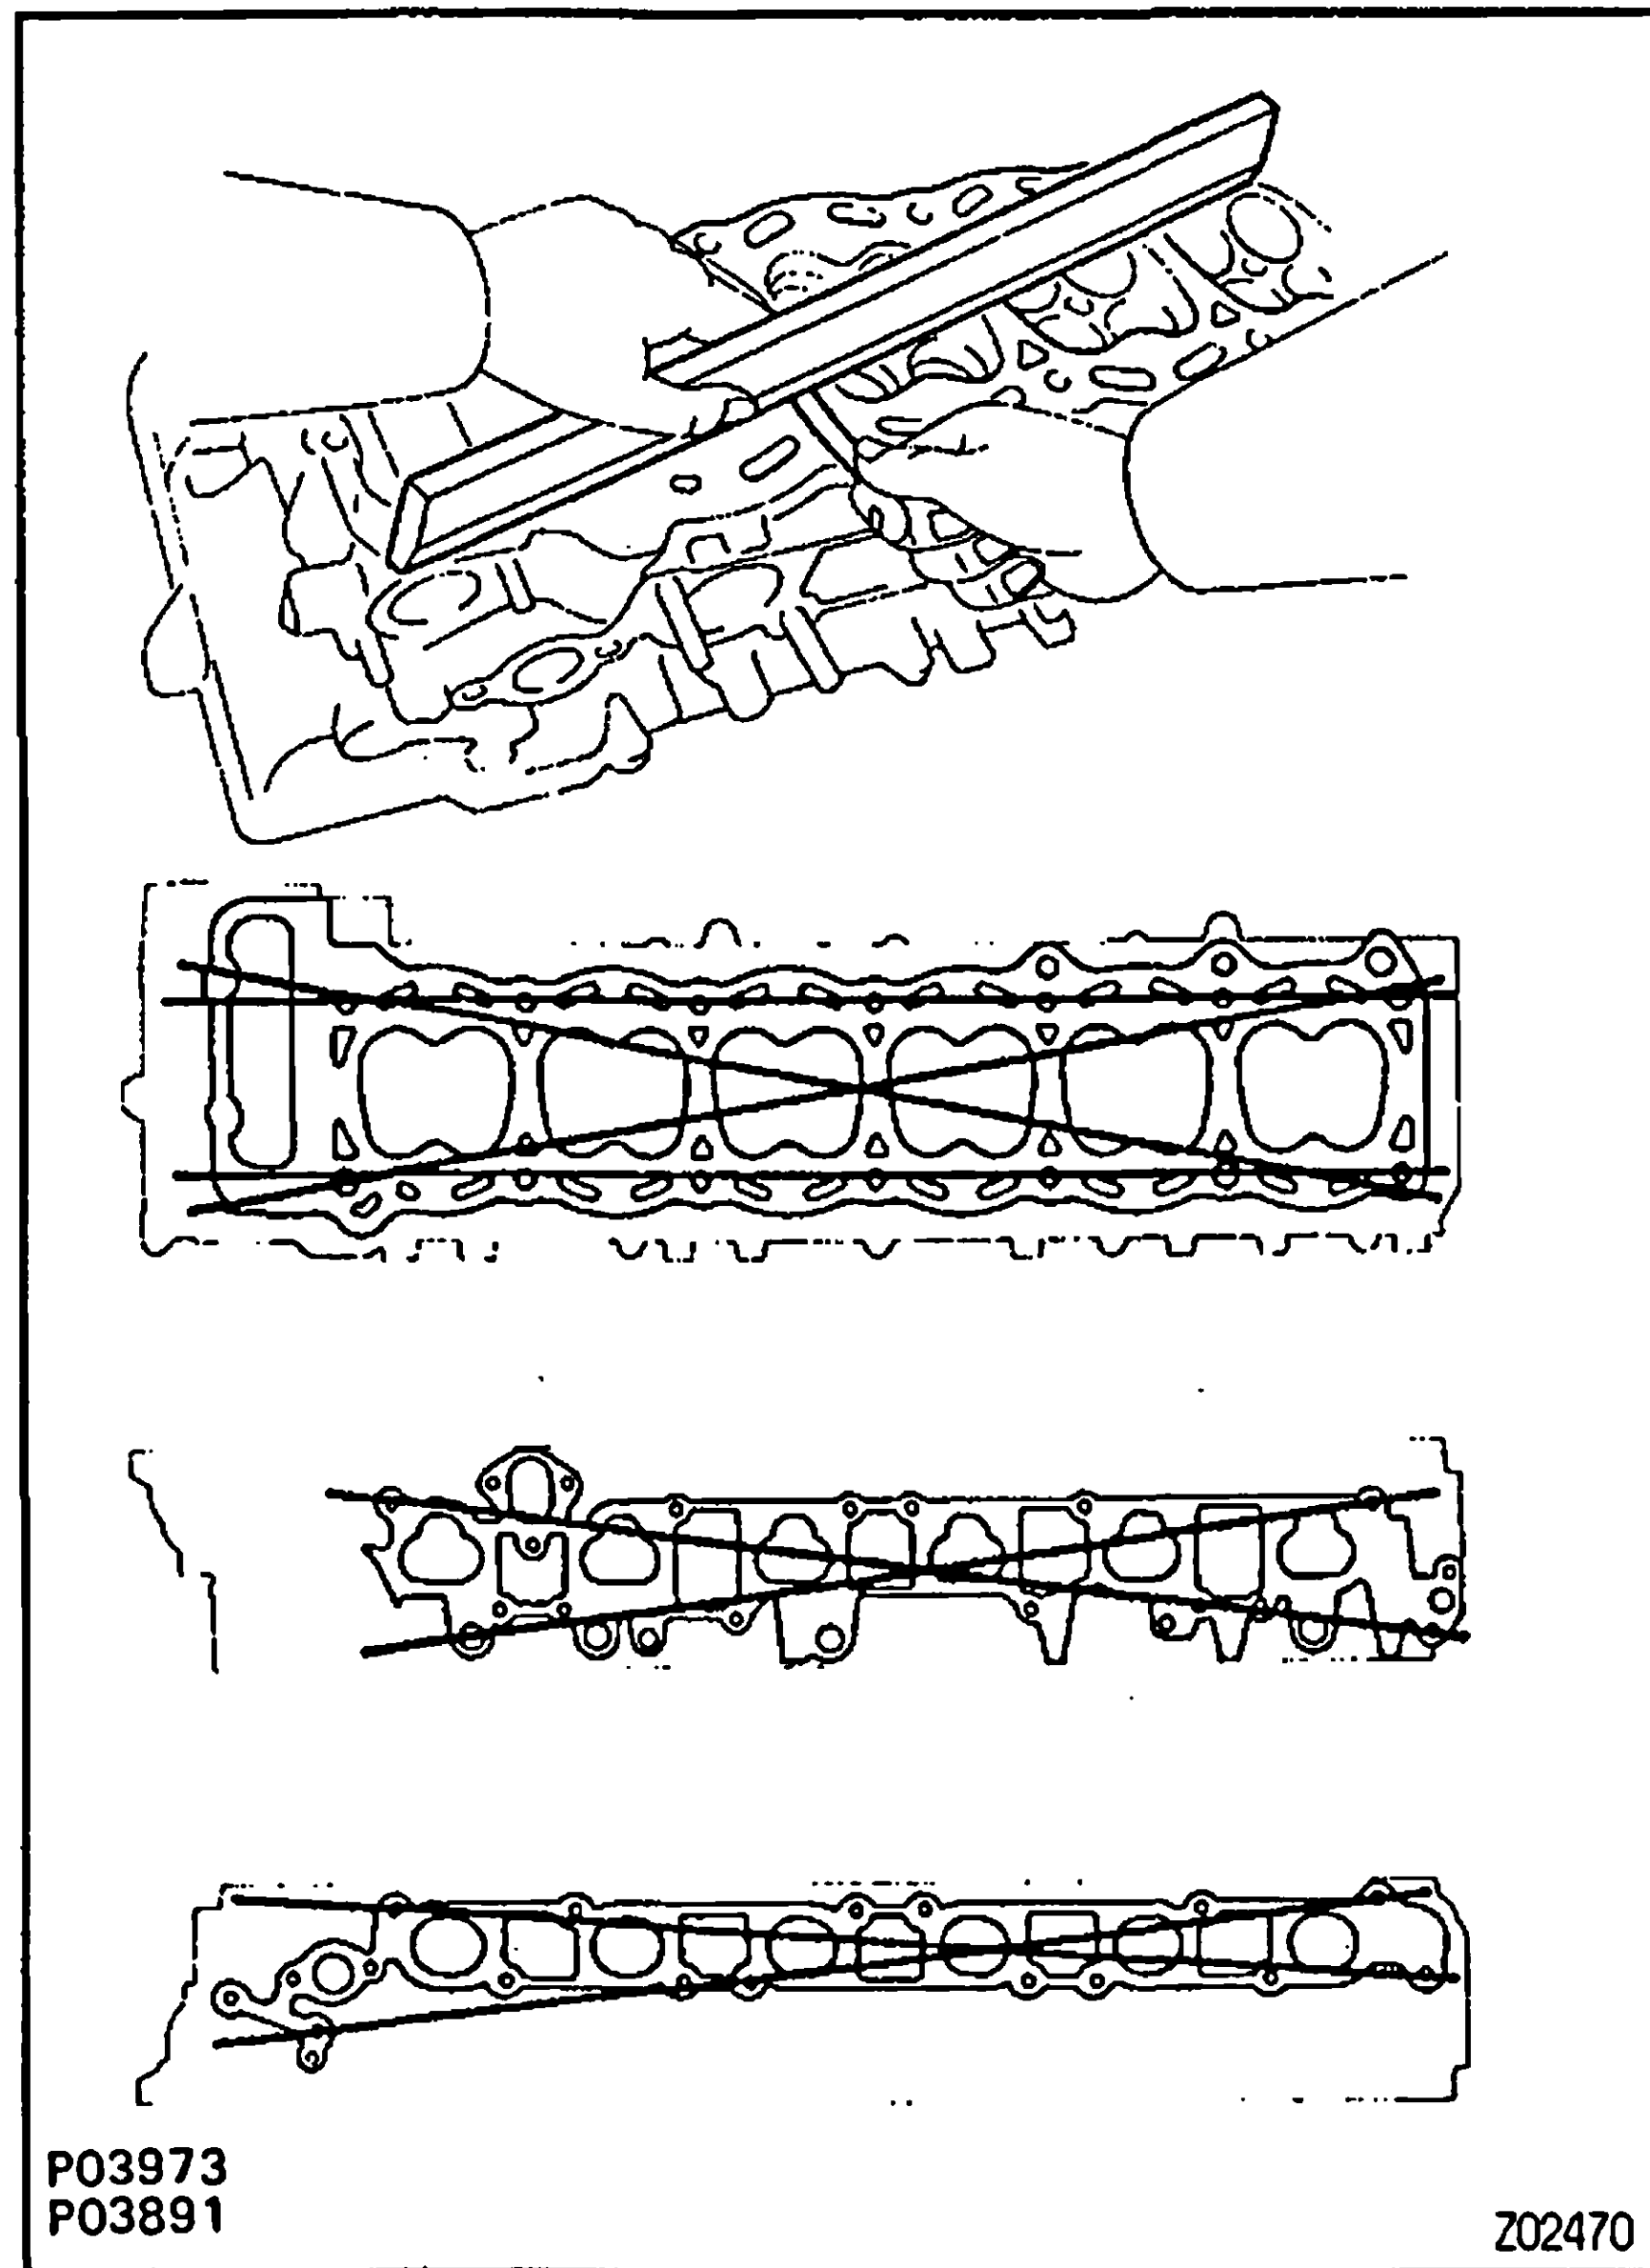

3. INSPECT CYLINDER HEAD

A. Inspect for flatness

Using precision straight edge and thickness gauge, measure the surfaces contacting the cylinder block and the manifolds for warpage.

Maximum warpage:


Cylinder block side

0.15 mm (0.0059 in.)

Manifold side

0.10 mm (0.0039 in.)


If warpage is greater than maximum, replace the cylinder head.

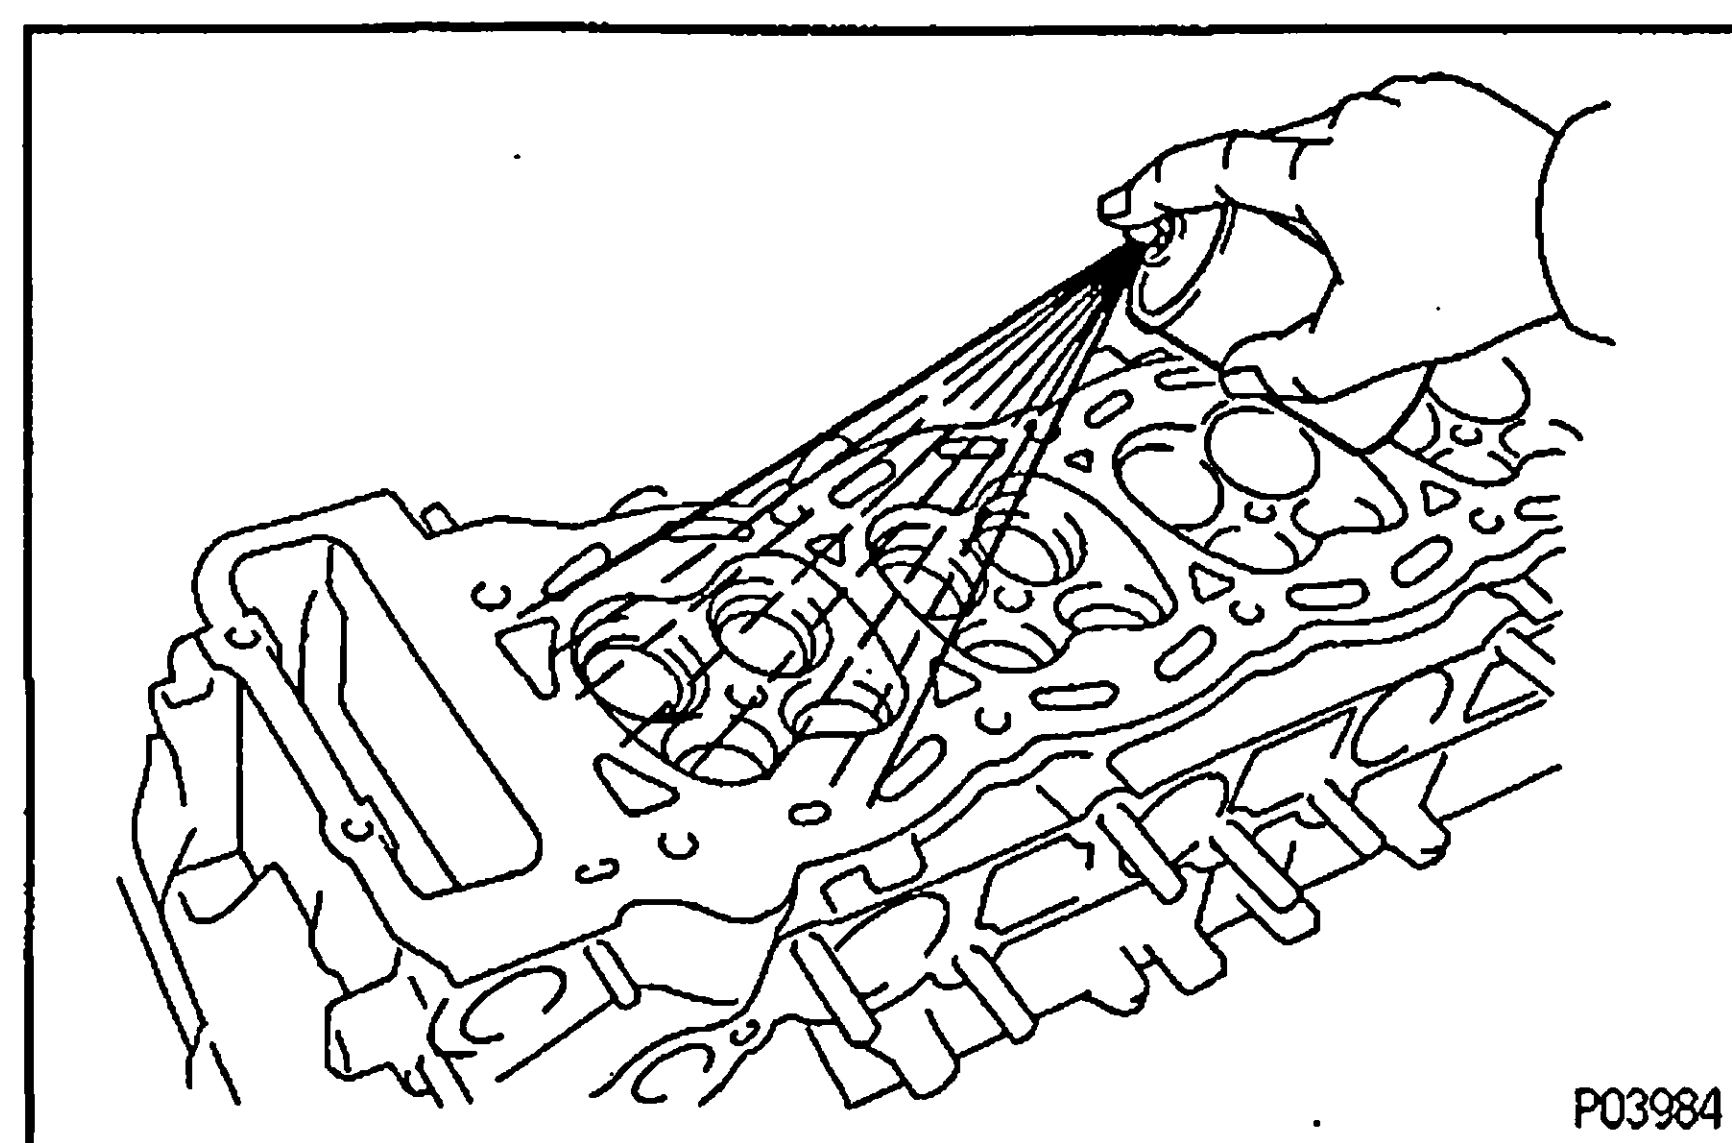

B. Inspect for cracks

Using a dye penetrant, check the combustion chamber, intake ports, exhaust ports and cylinder block surface for cracks.


If cracked, replace the cylinder head.

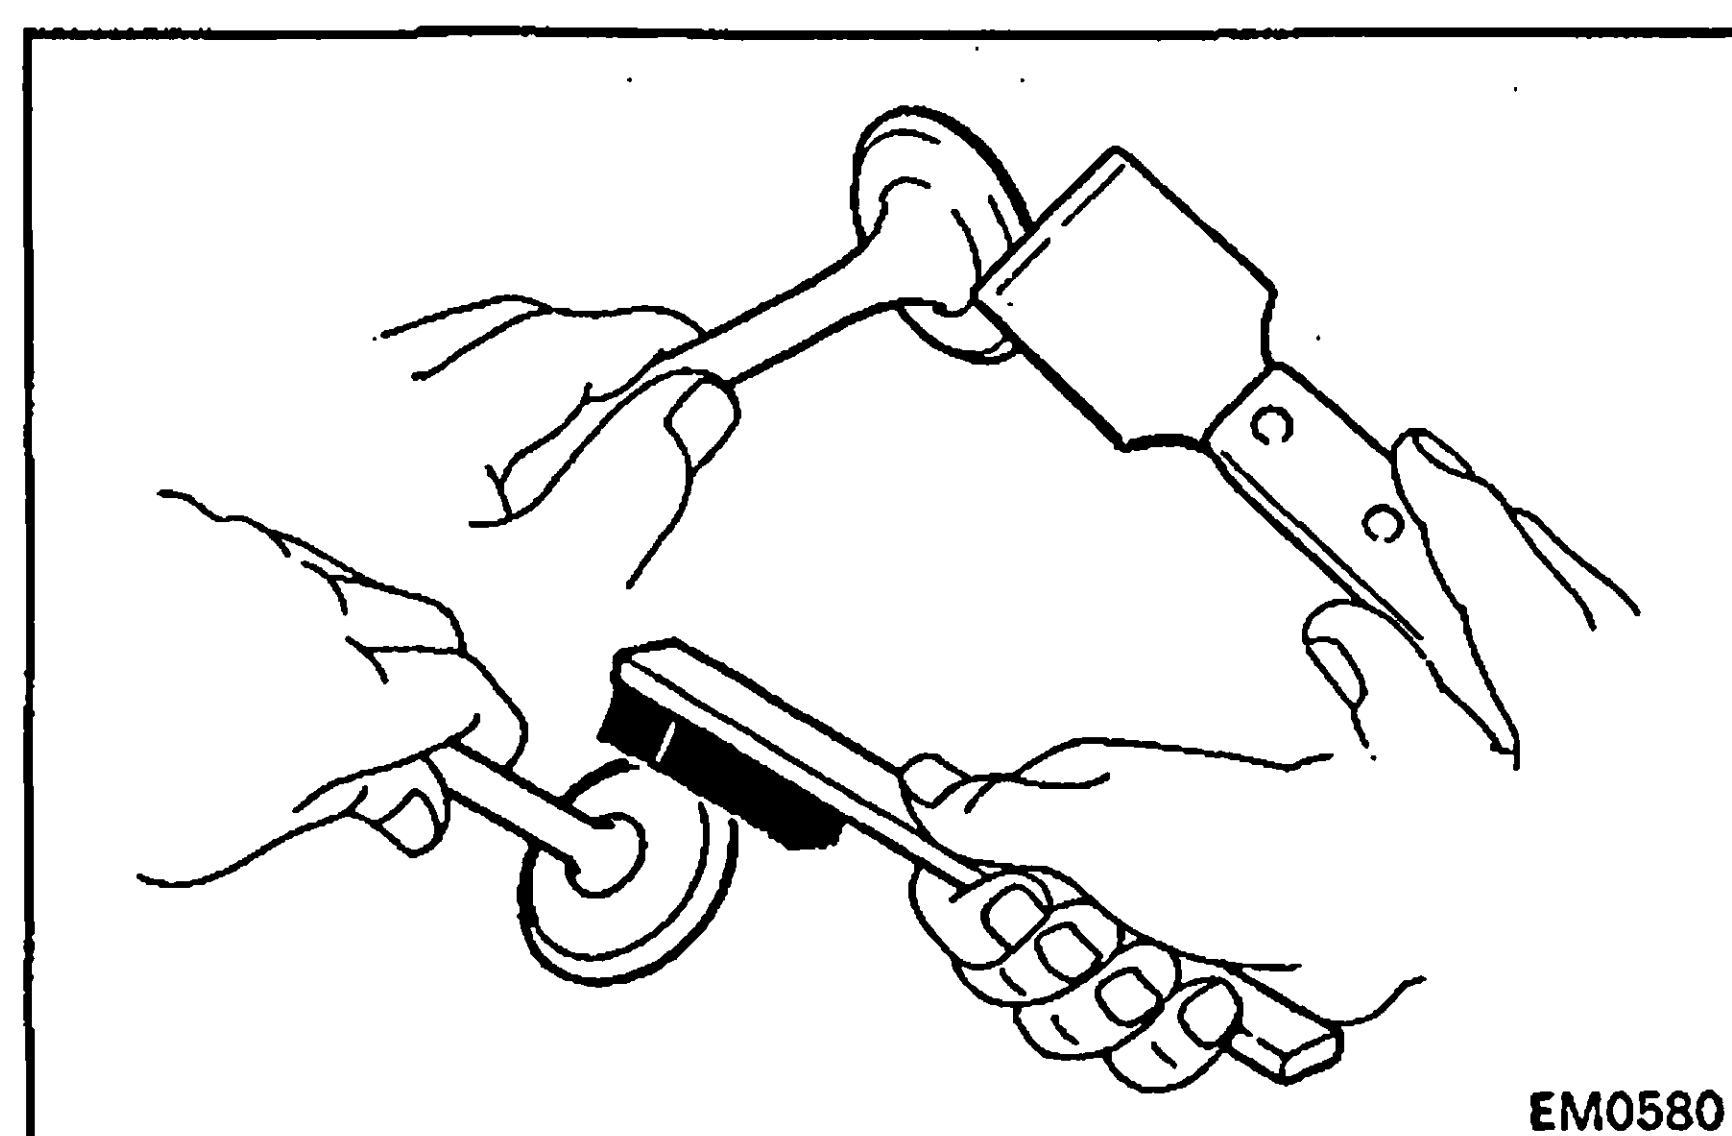

4. CLEAN VALVES

(a) Using a gasket scraper, chip off any carbon from the valve head.

(b) Using a wire brush, thoroughly clean the valve.

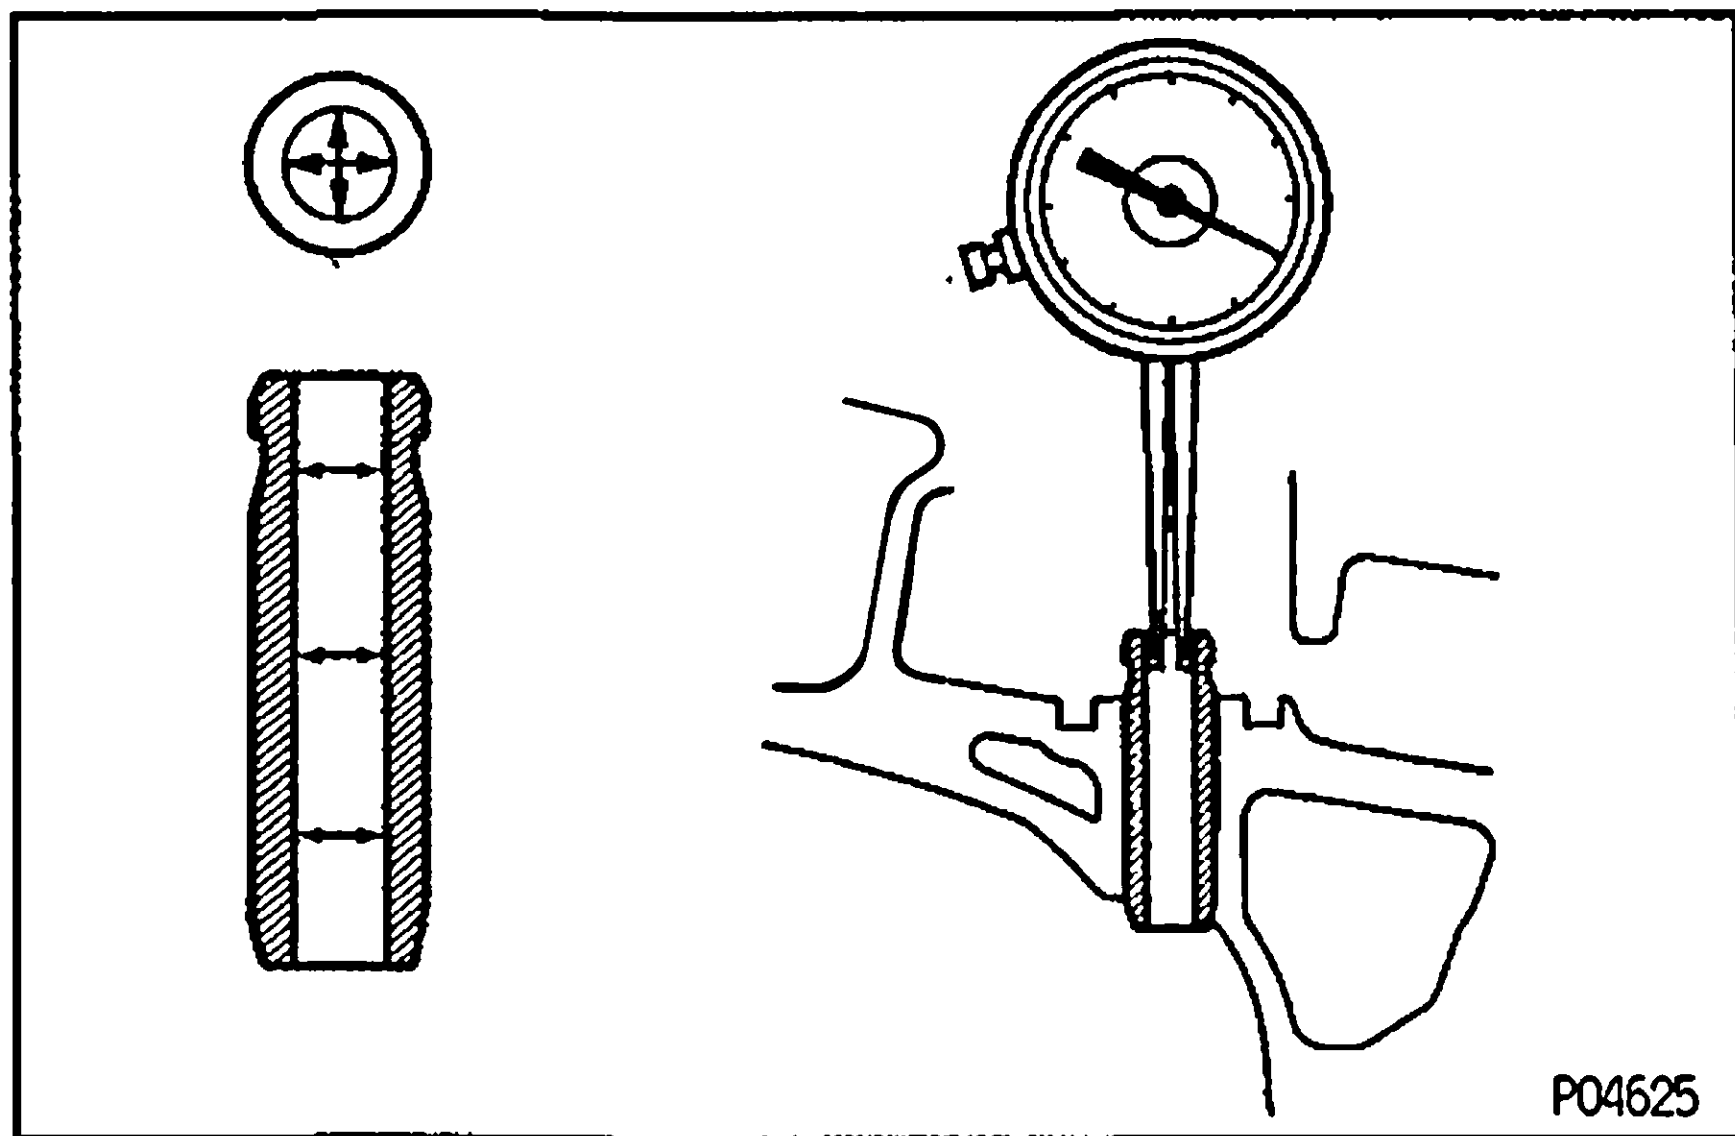


5. INSPECT VALVE STEMS AND GUIDE BUSHINGS

- (a) Using a caliper gauge, measure the inside diameter of the guide bushing.

Bushing inside diameter:

7.010 — 7.030 mm (0.2760 — 0.2768 in.)

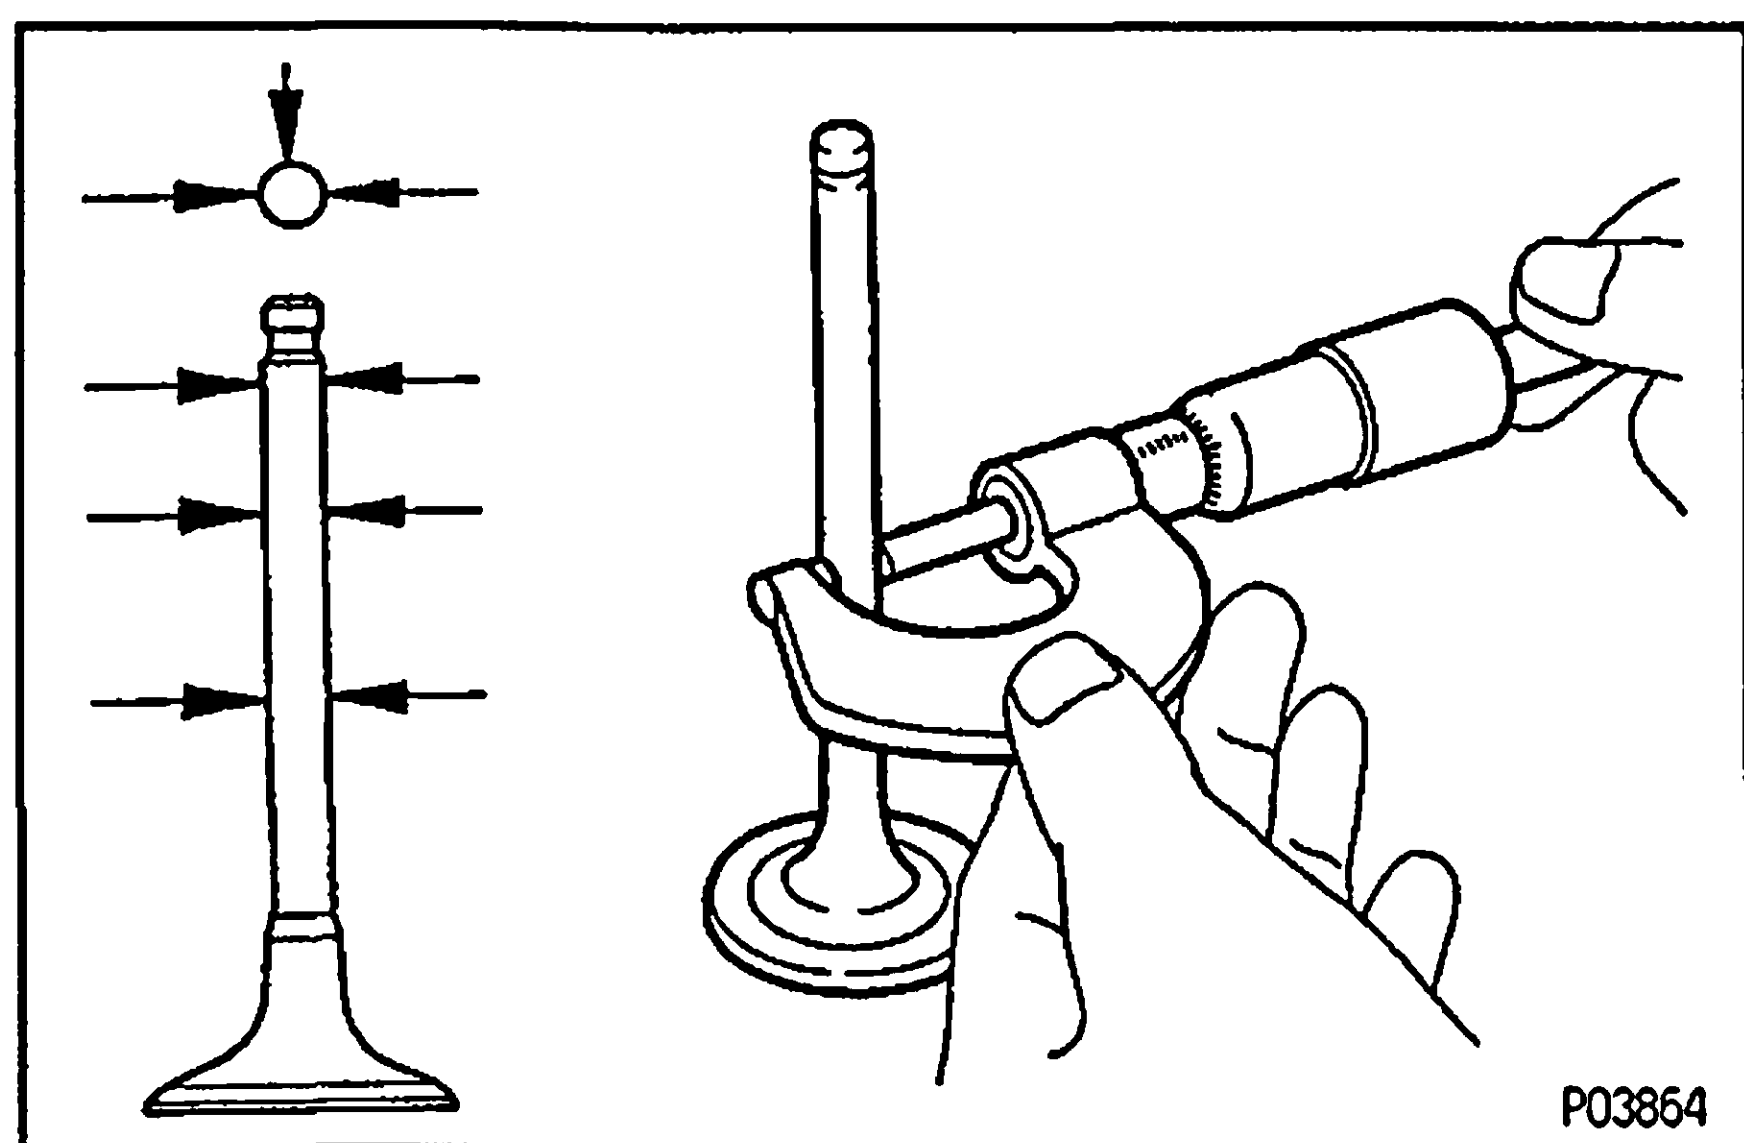

- (b) Using a micrometer, measure the diameter of the valve stem.

Valve stem diameter:

Intake

6.970 — 6.985 mm (0.2744 — 0.2750 in.)

Exhaust

6.965 — 6.980 mm (0.2742 — 0.2748 in.)

- (c) Subtract the valve stem diameter measurement from the guide bushing inside diameter measurement.

Standard oil clearance:

Intake

0.025 — 0.060 mm (0.0010 — 0.0024 in.)

Exhaust

0.030 — 0.065 mm (0.0012 — 0.0026 in.)

Maximum oil clearance:


Intake

0.08 mm (0.0031 in.)

Exhaust


0.10 mm (0.0039 in.)

If the clearance is greater than maximum, replace the valve and guide bushing.

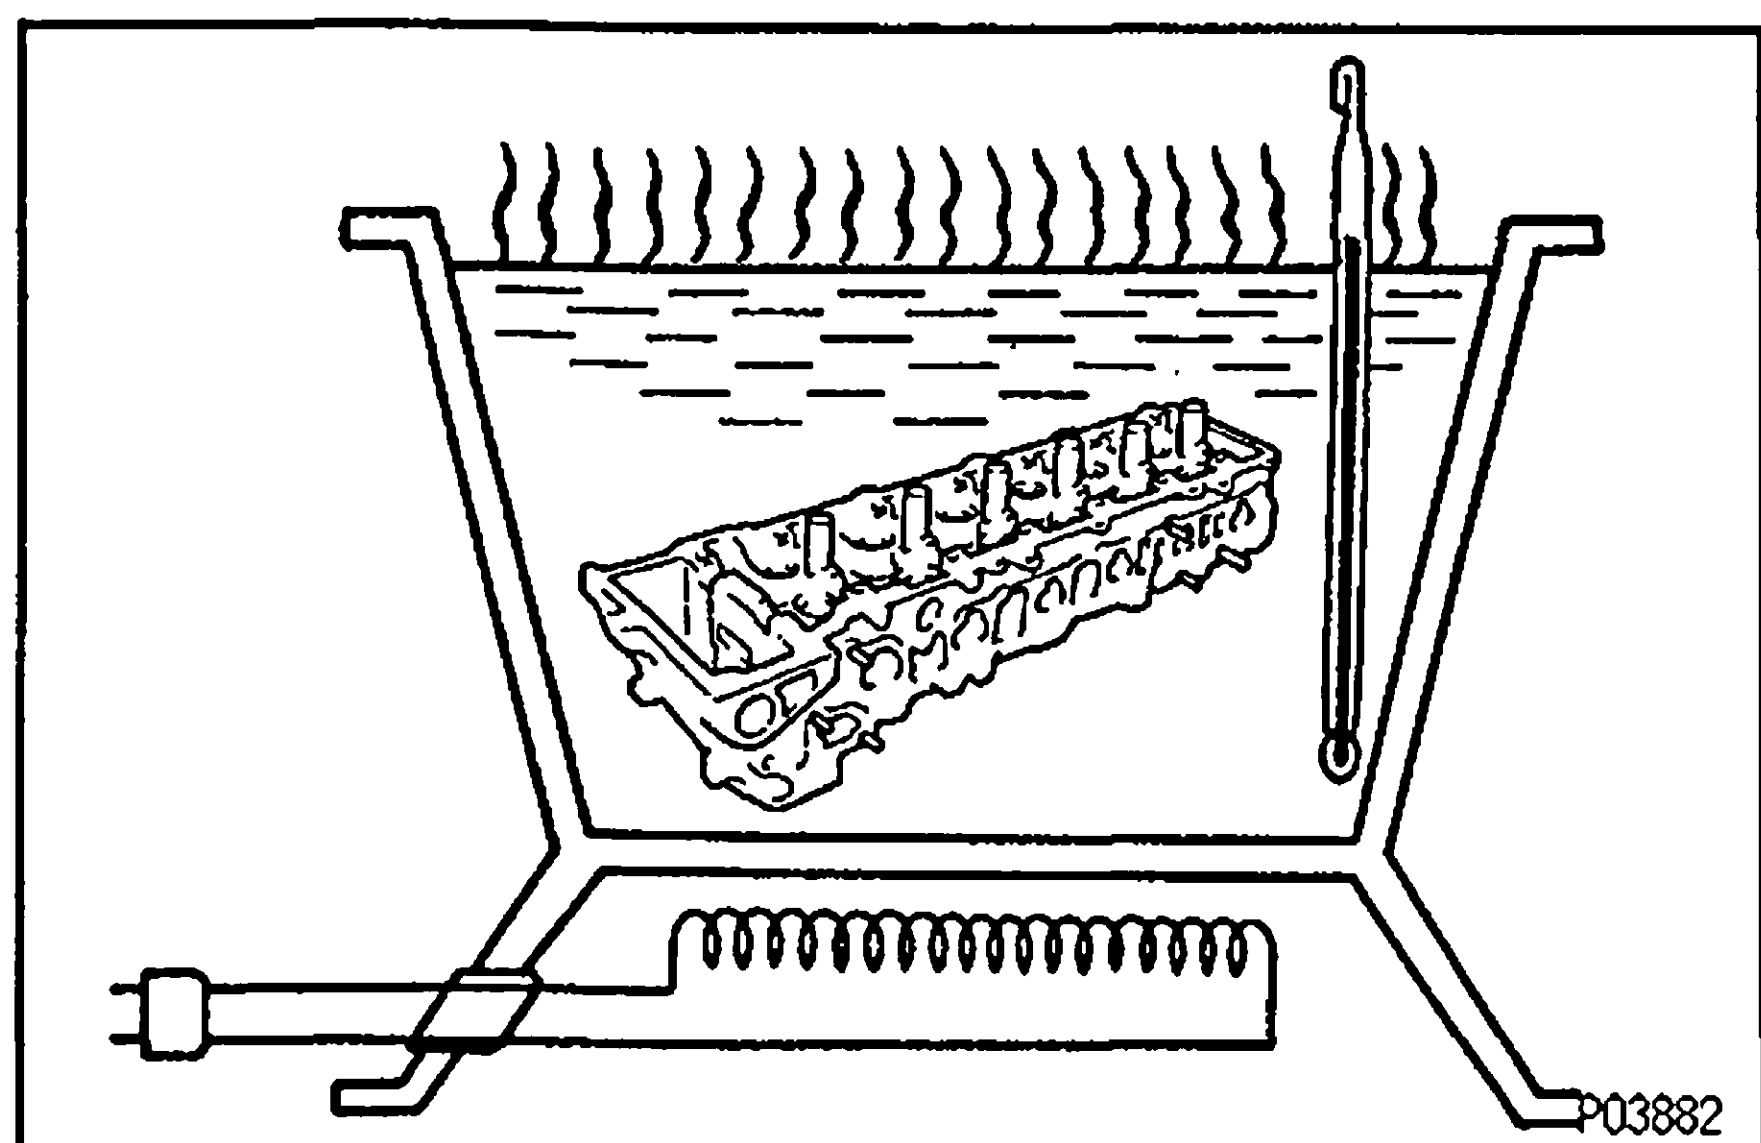


6. IF NECESSARY, REPLACE VALVE GUIDE BUSHINGS

- (a) Gradually heat the cylinder head to 80 — 100°C (176 — 212°F).

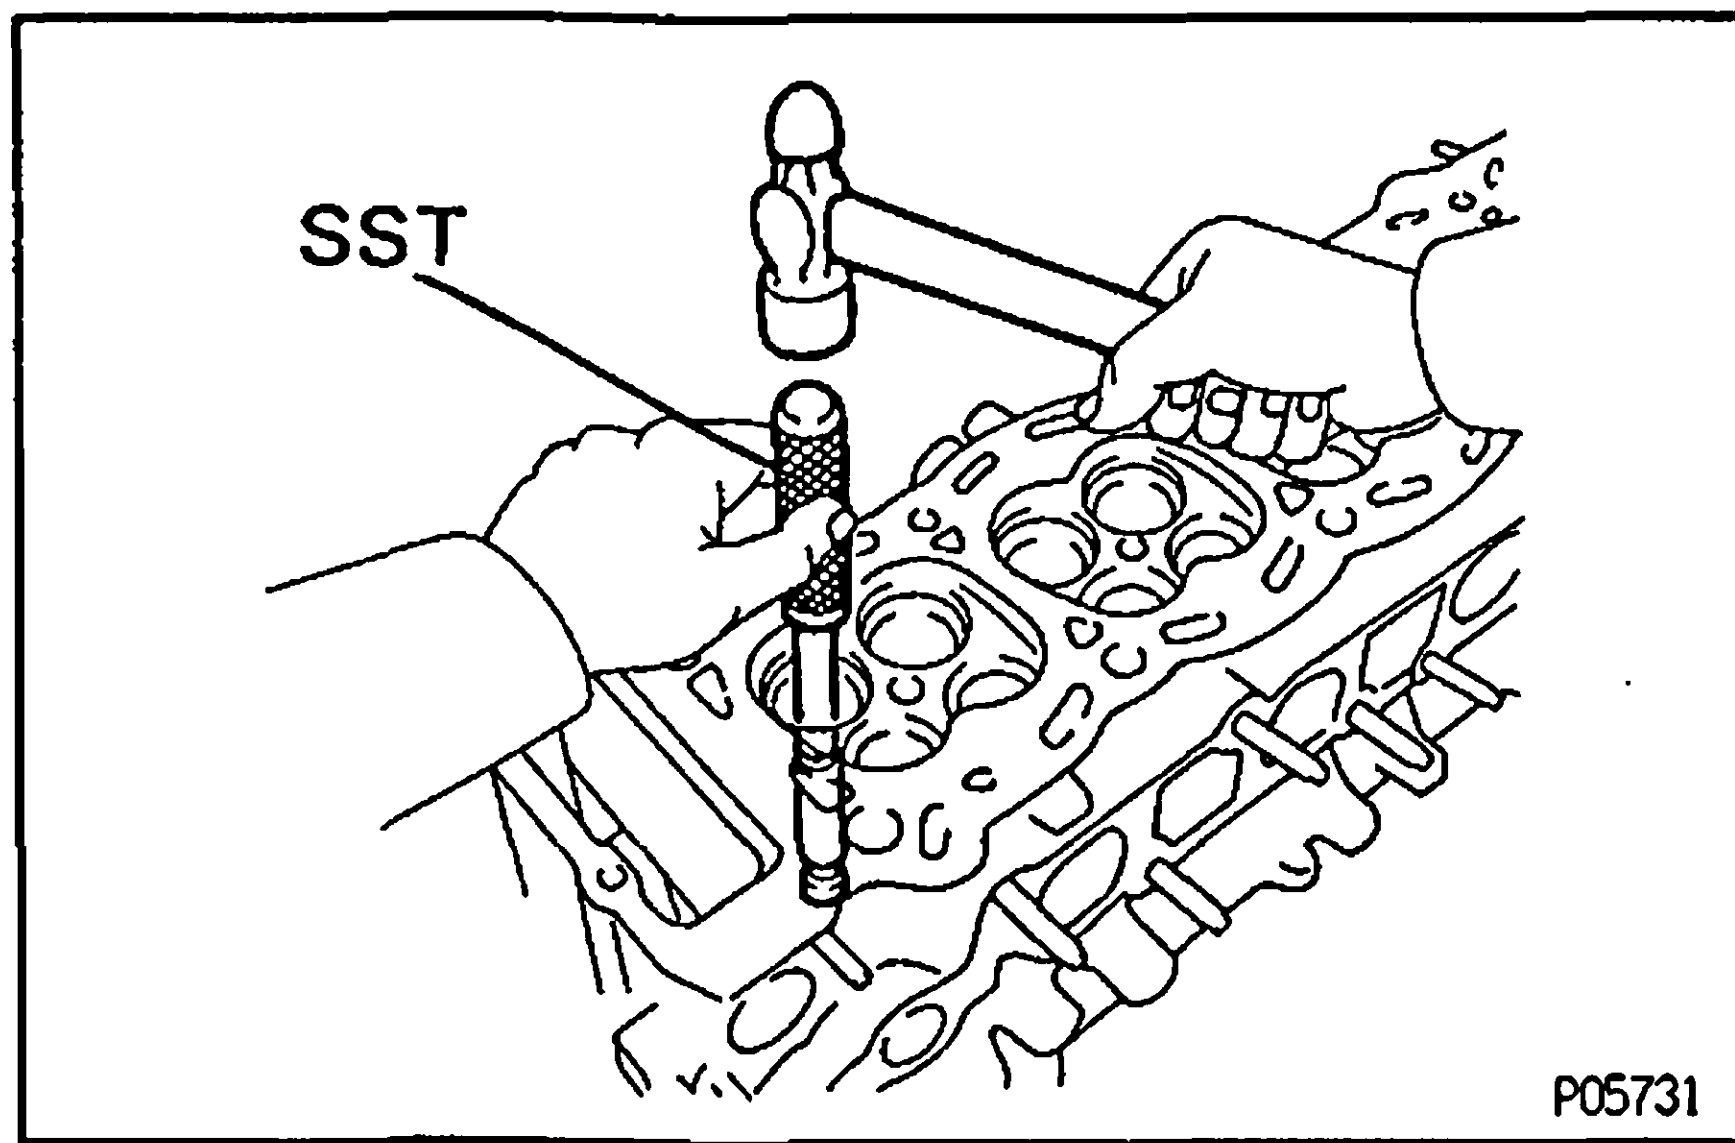

- (b) Using SST and a hammer, tap out the guide bushing.
SST 09201 – 15010

EG

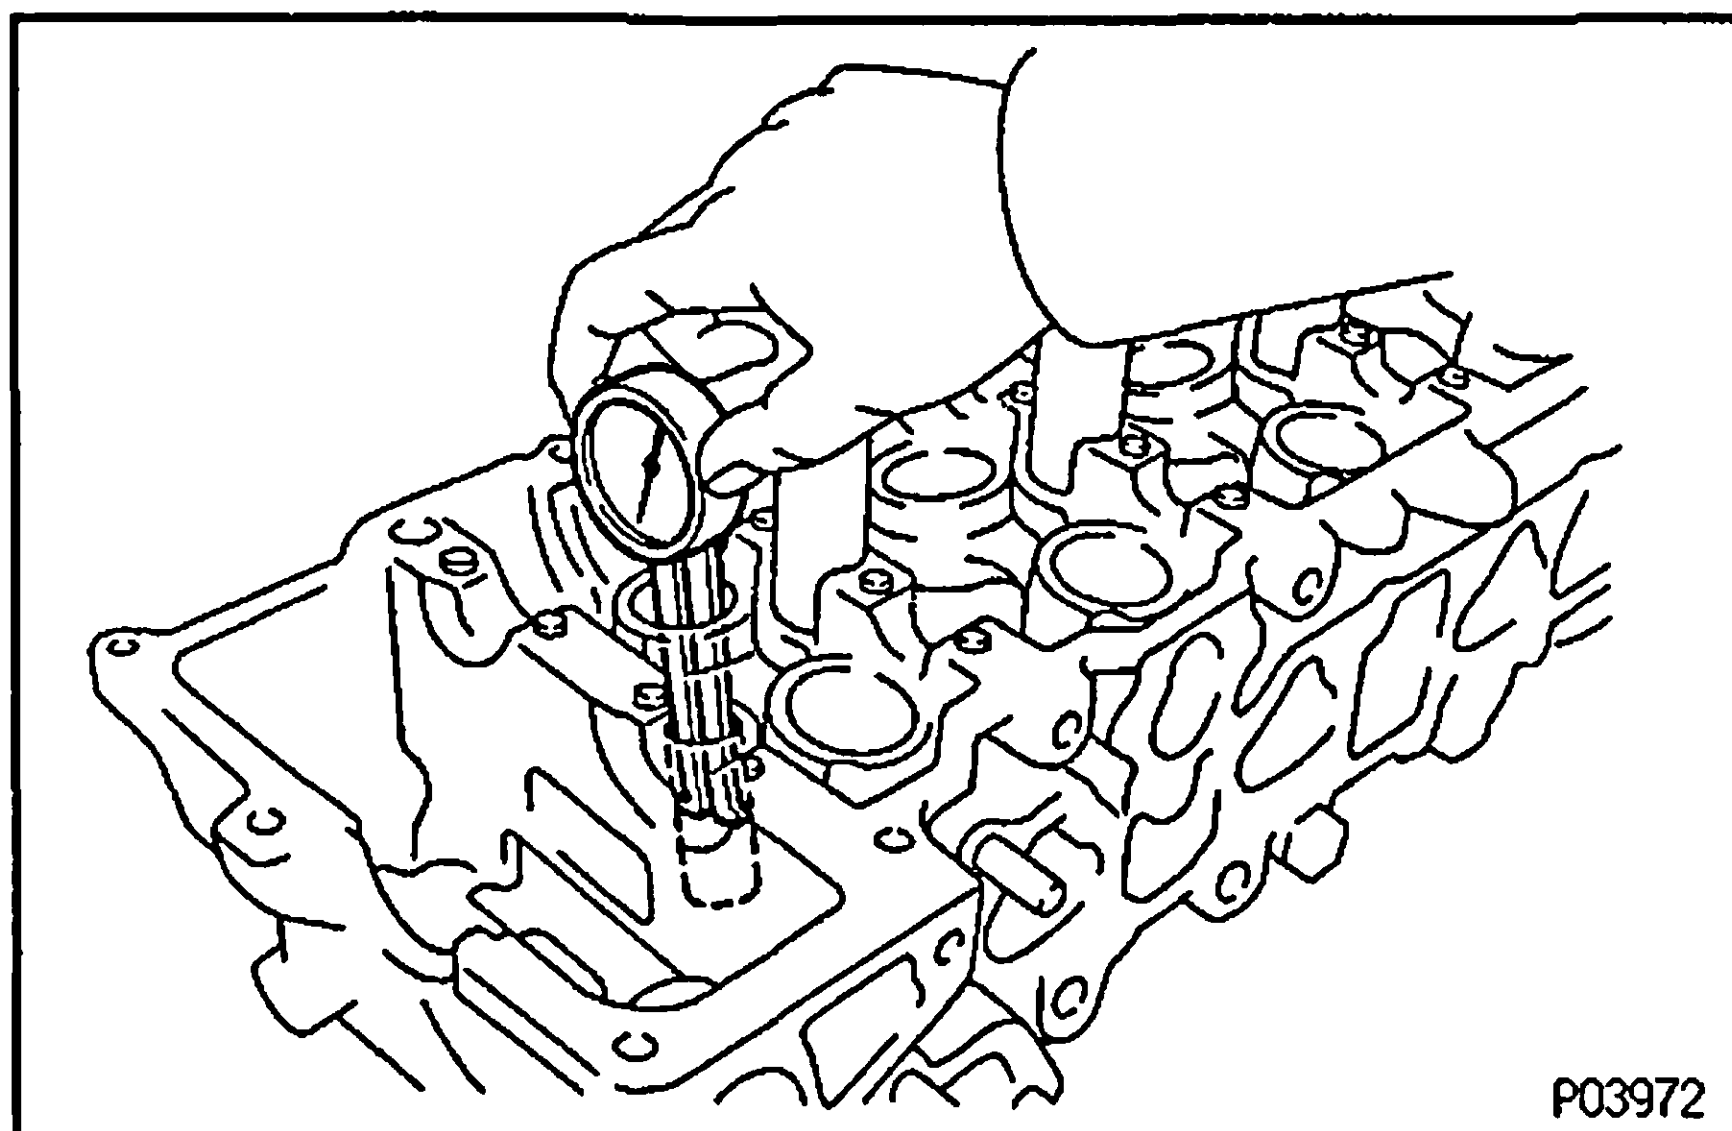


- (c) Using a caliper gauge, measure the bushing bore diameter of the cylinder head.

Both intake and exhaust


Bushing bore diameter mm (in.)	Bushing size
11.492 – 11.513 (0.4524 – 0.4533)	Use STD
11.542 – 11.563 (0.4544 – 0.4552)	Use O/S 0.05

V00741

- (d) Select a new guide bushing (STD size or O/S 0.05).
If the bushing bore diameter of the cylinder head is greater than 11.513 mm (0.4533 in.), machine the bushing bore to the following dimension:
11.542 – 11.563 mm (0.4544 – 0.4552 in.)
If the bushing bore diameter of the cylinder head is greater than 11.563 mm (0.4552 in.), replace the cylinder head.

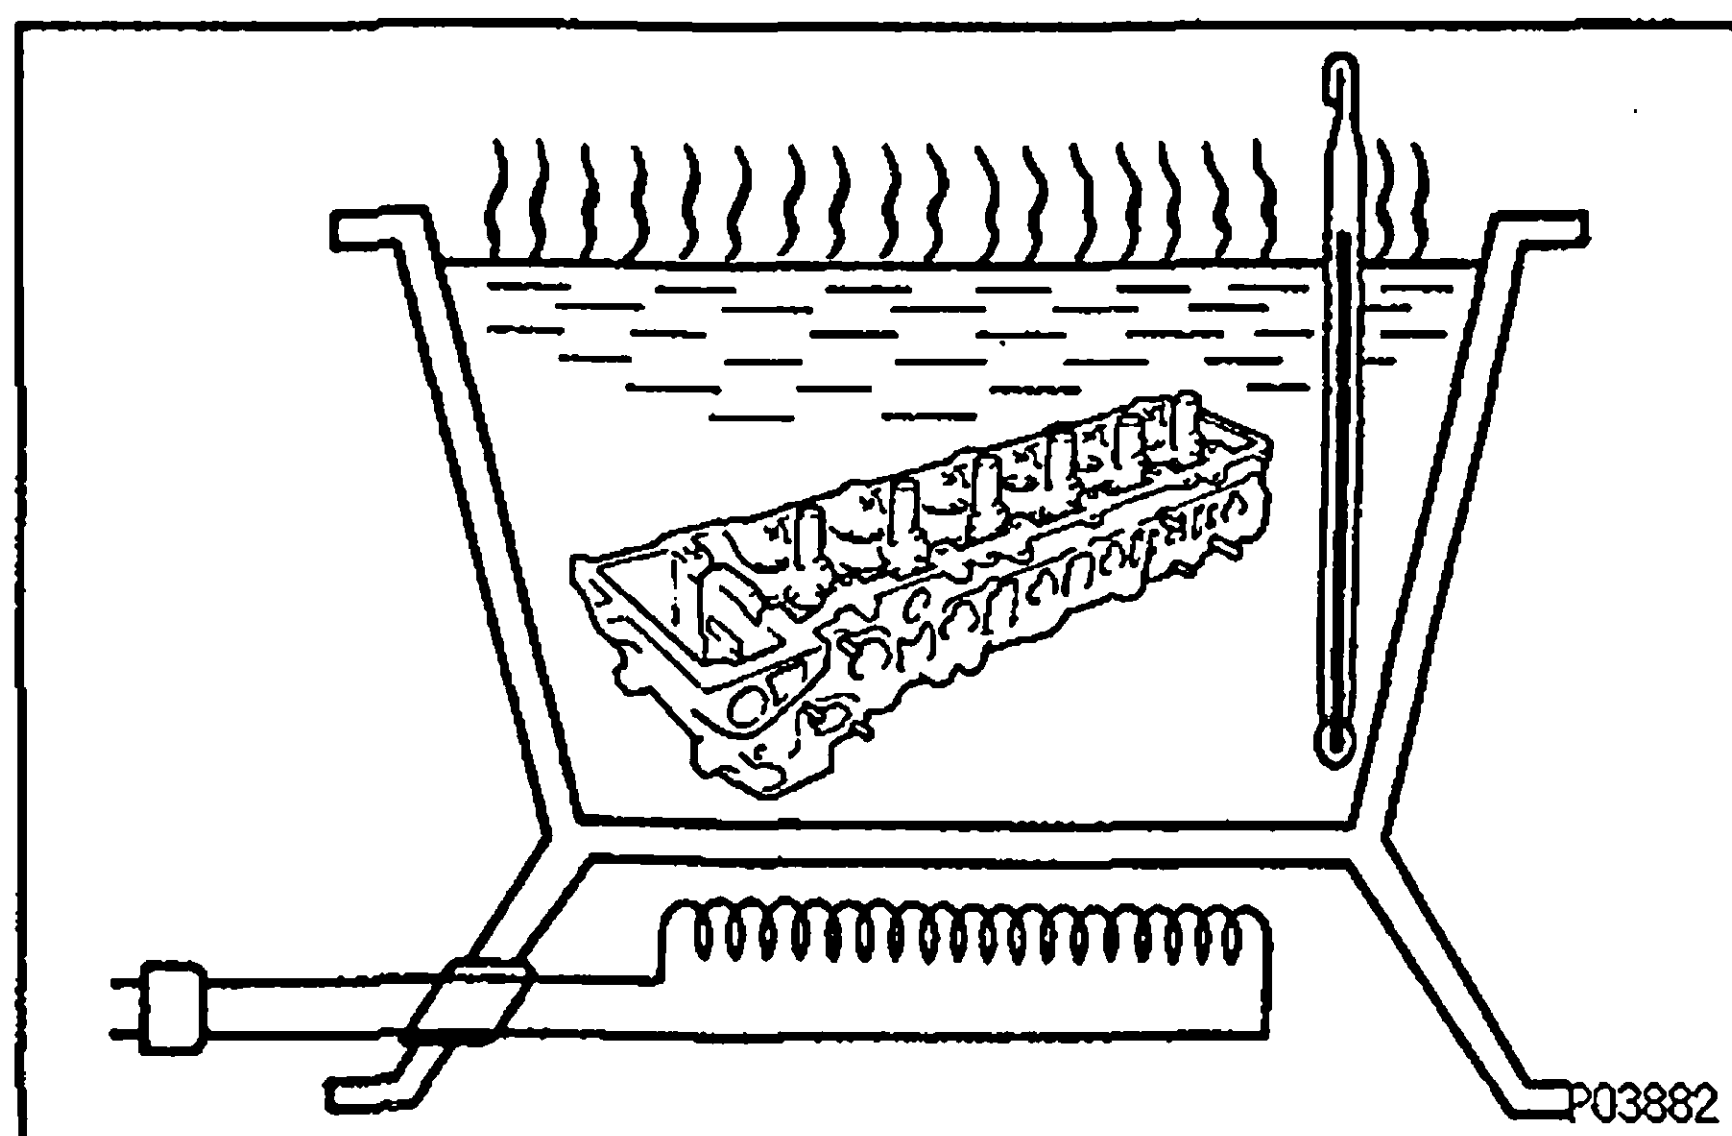


- (e) Gradually heat the cylinder head to 80 – 100°C (176 – 212°F).

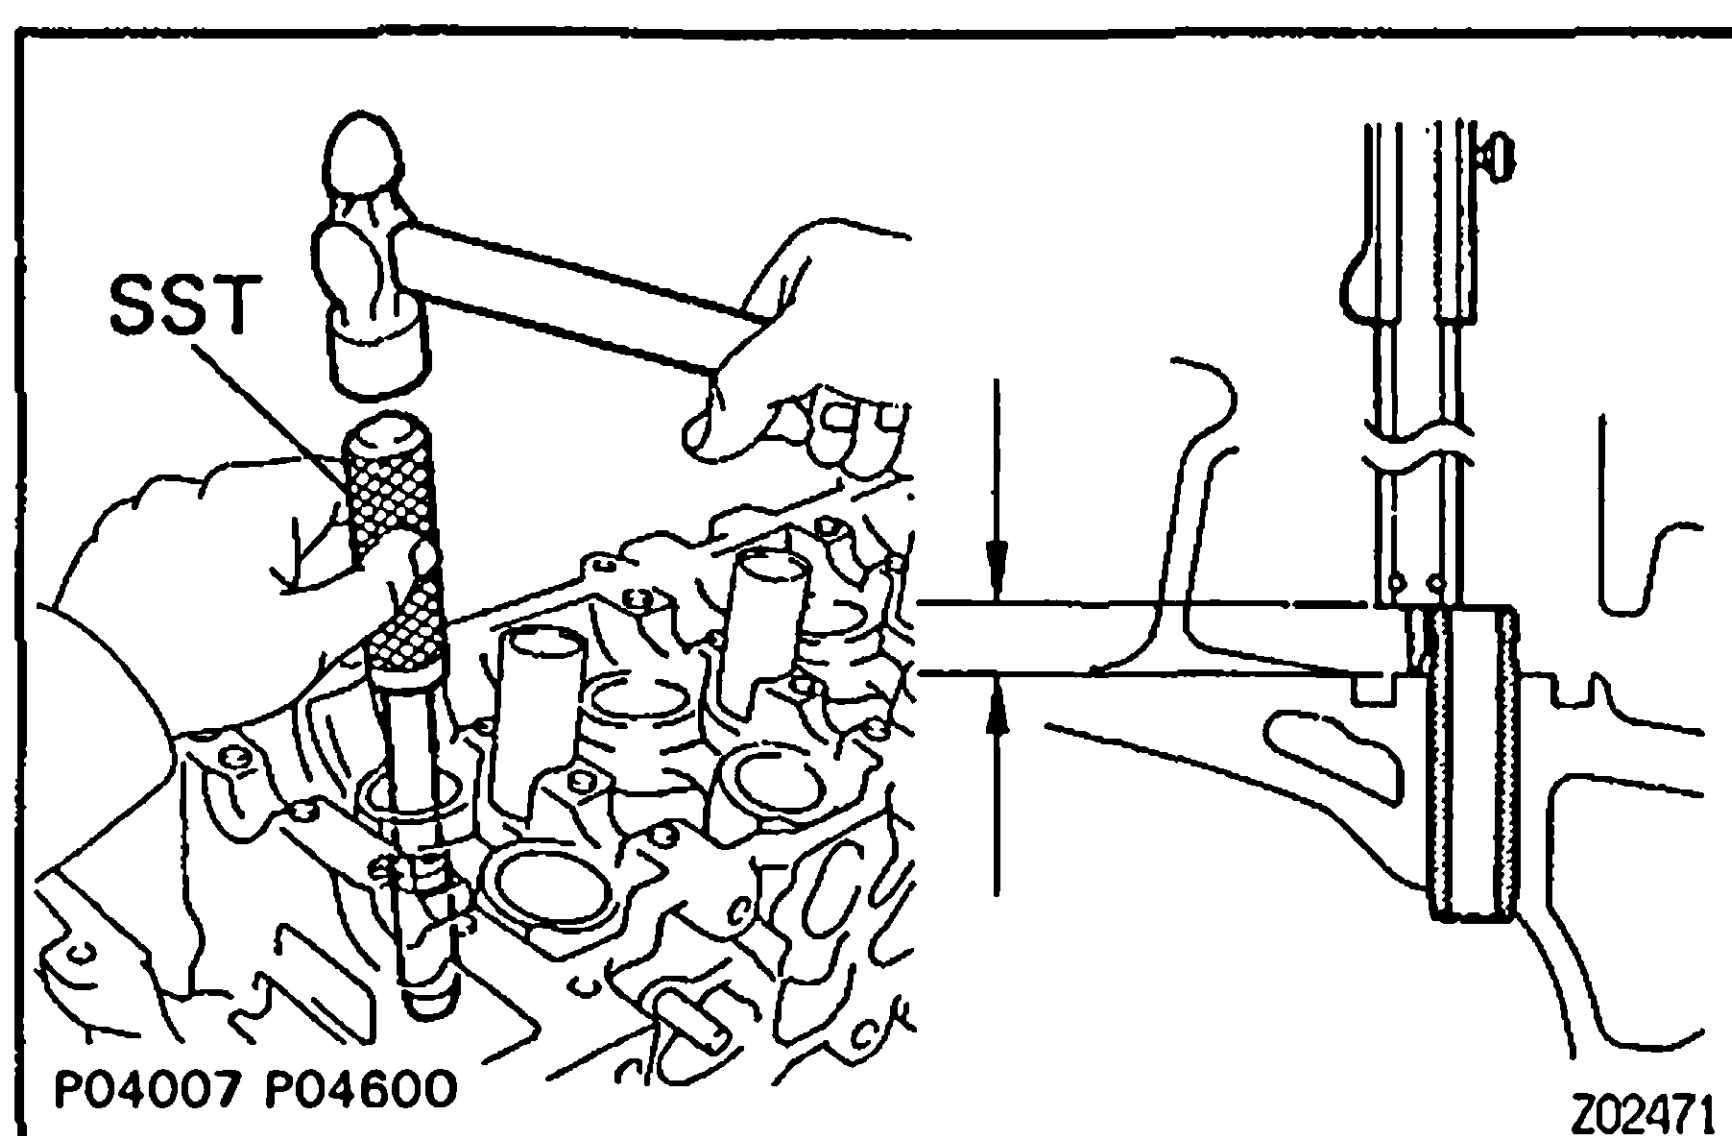


- (f) Using SST and a hammer, tap in a new guide bushing to where there 8.2 – 8.6 mm (0.323 – 0.339 in.) protruding from the cylinder head.
SST 09201 – 15010

EG

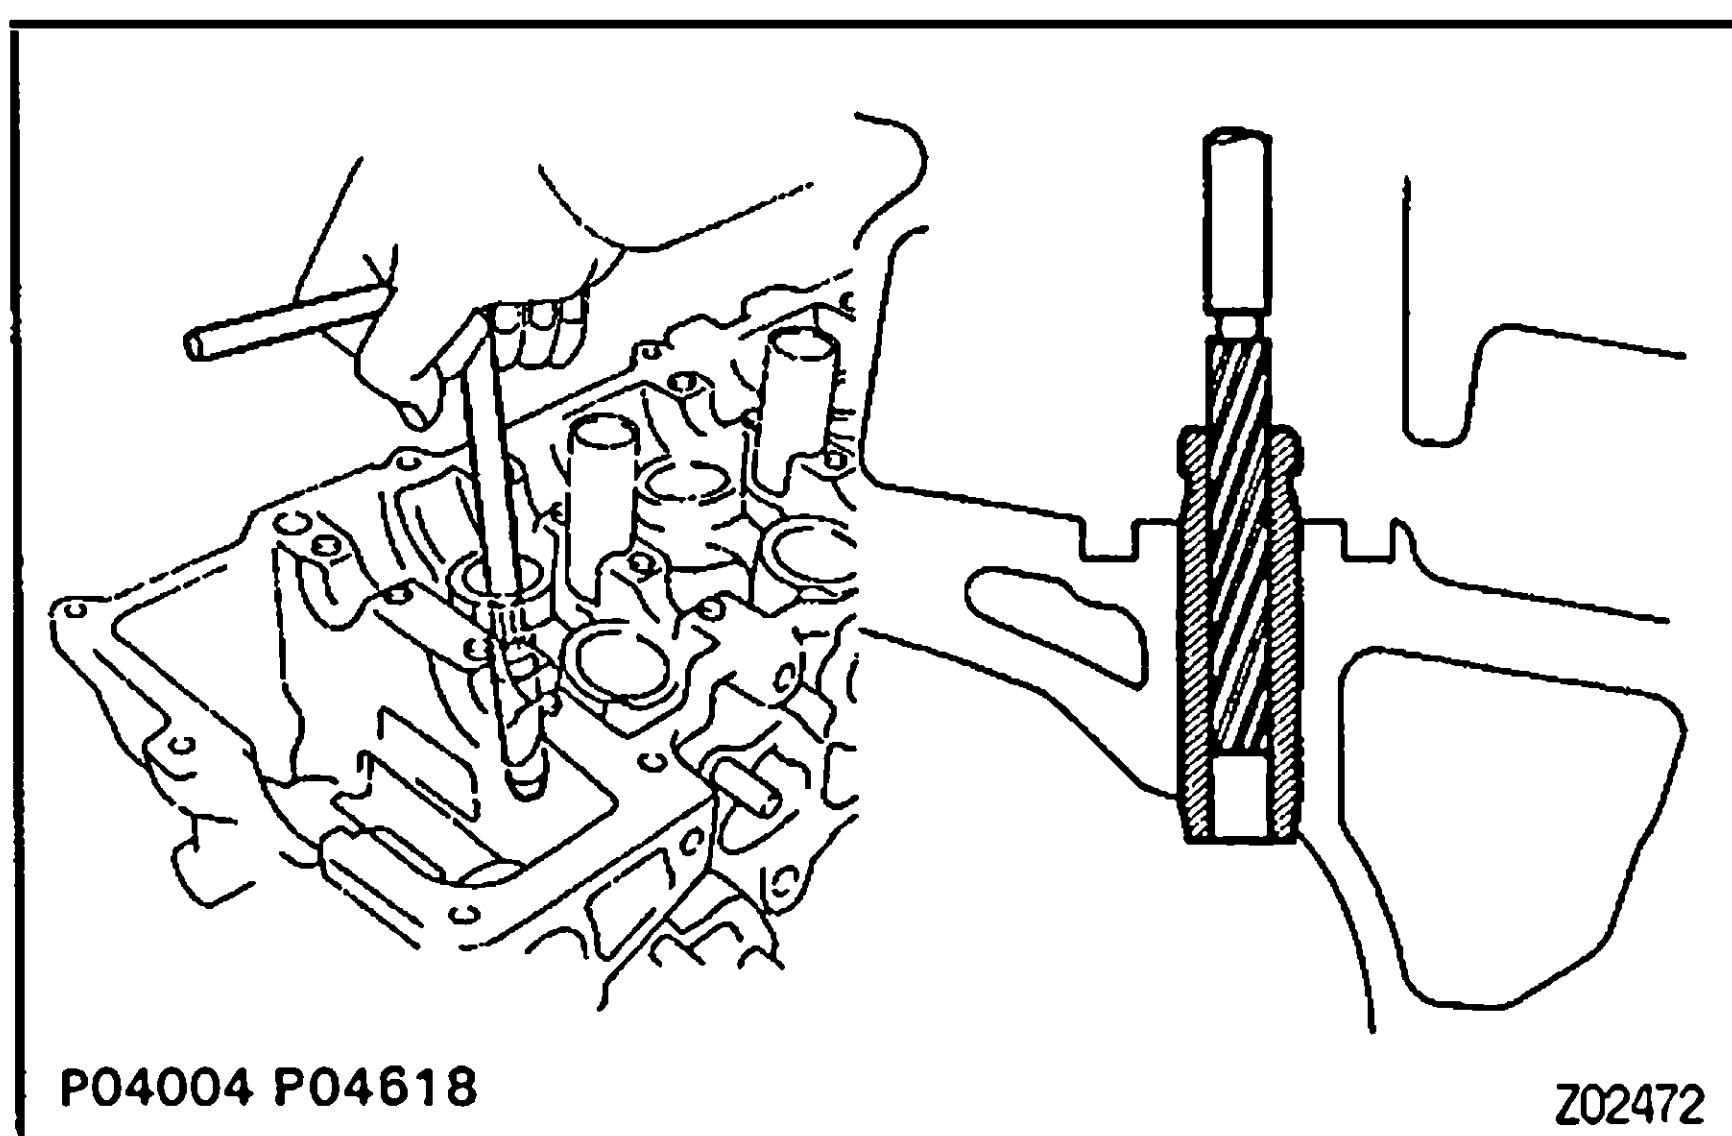

- (g) Using a sharp 7 mm reamer, ream the guide bushing to obtain the standard specified clearance (See page EG-48) between the guide bushing and valve stem.

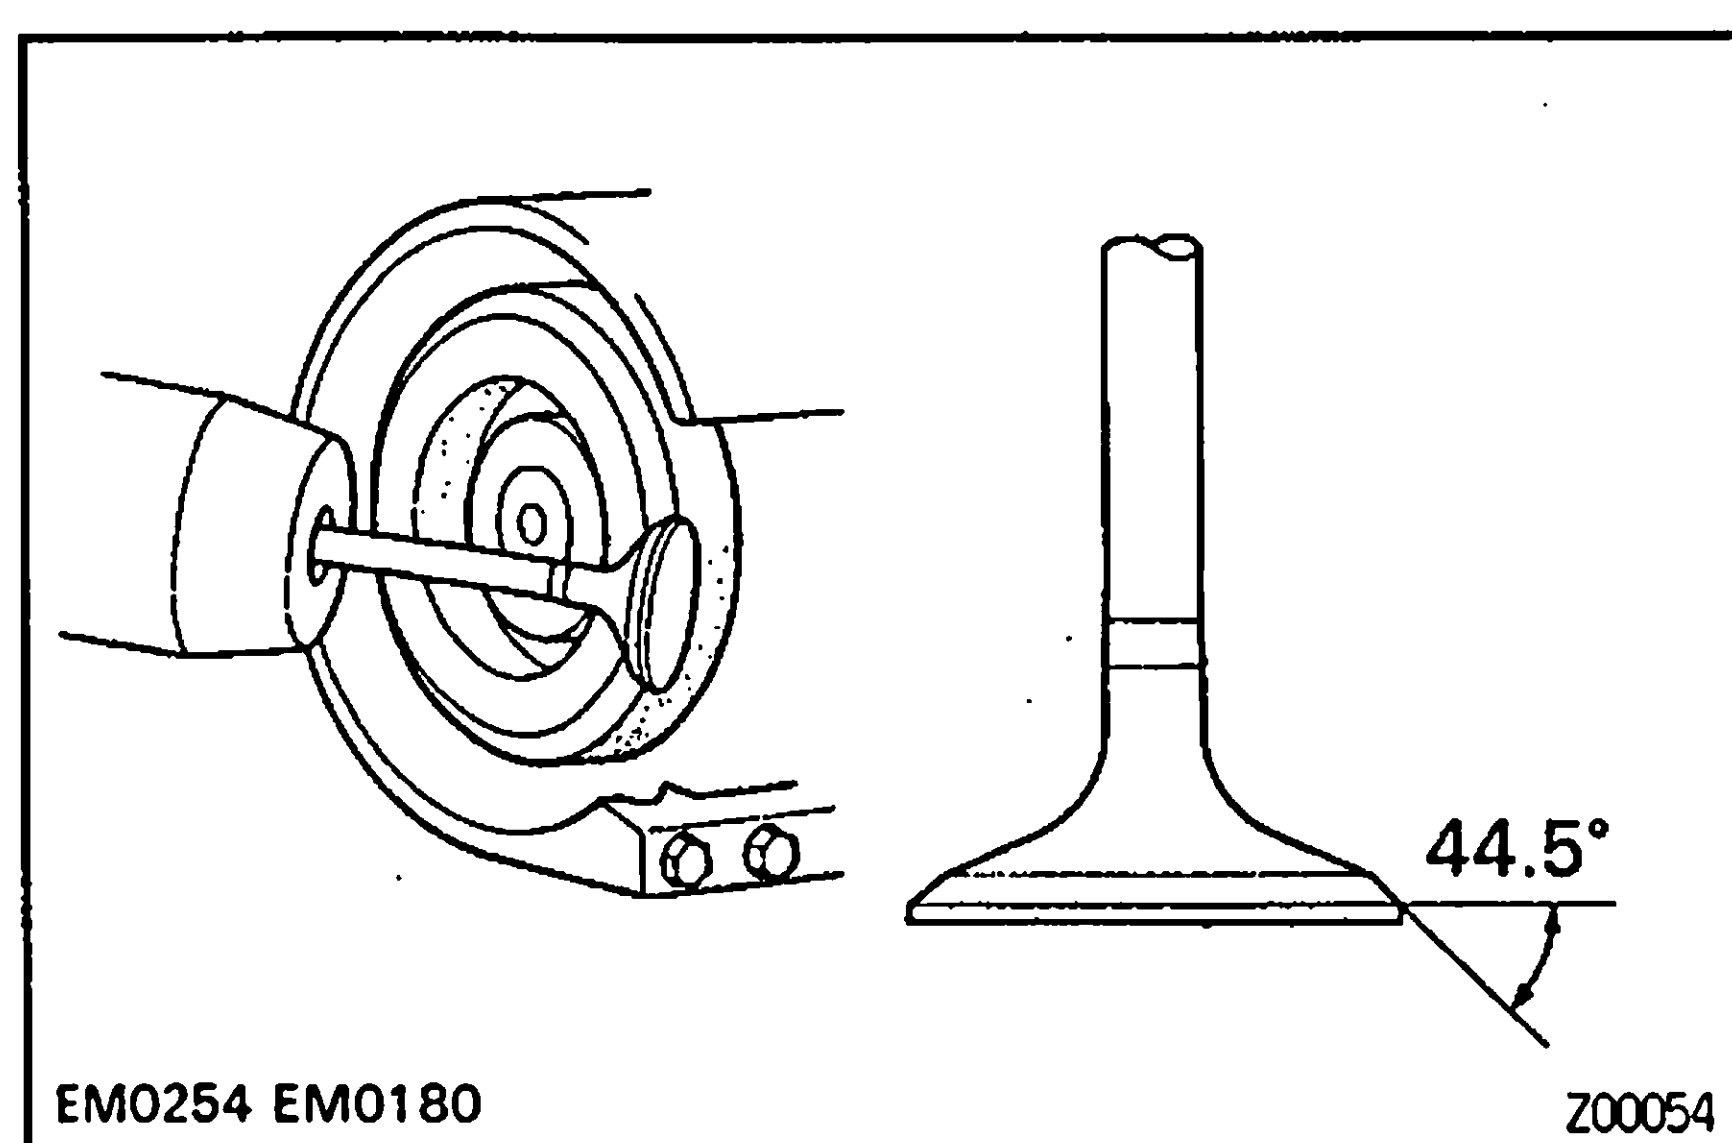


7. INSPECT AND GRIND VALVES

- (a) Grind the valve enough to remove pits and carbon.
(b) Check that the valve is ground to the correct valve face angle.

Valve face angle:

44.5°

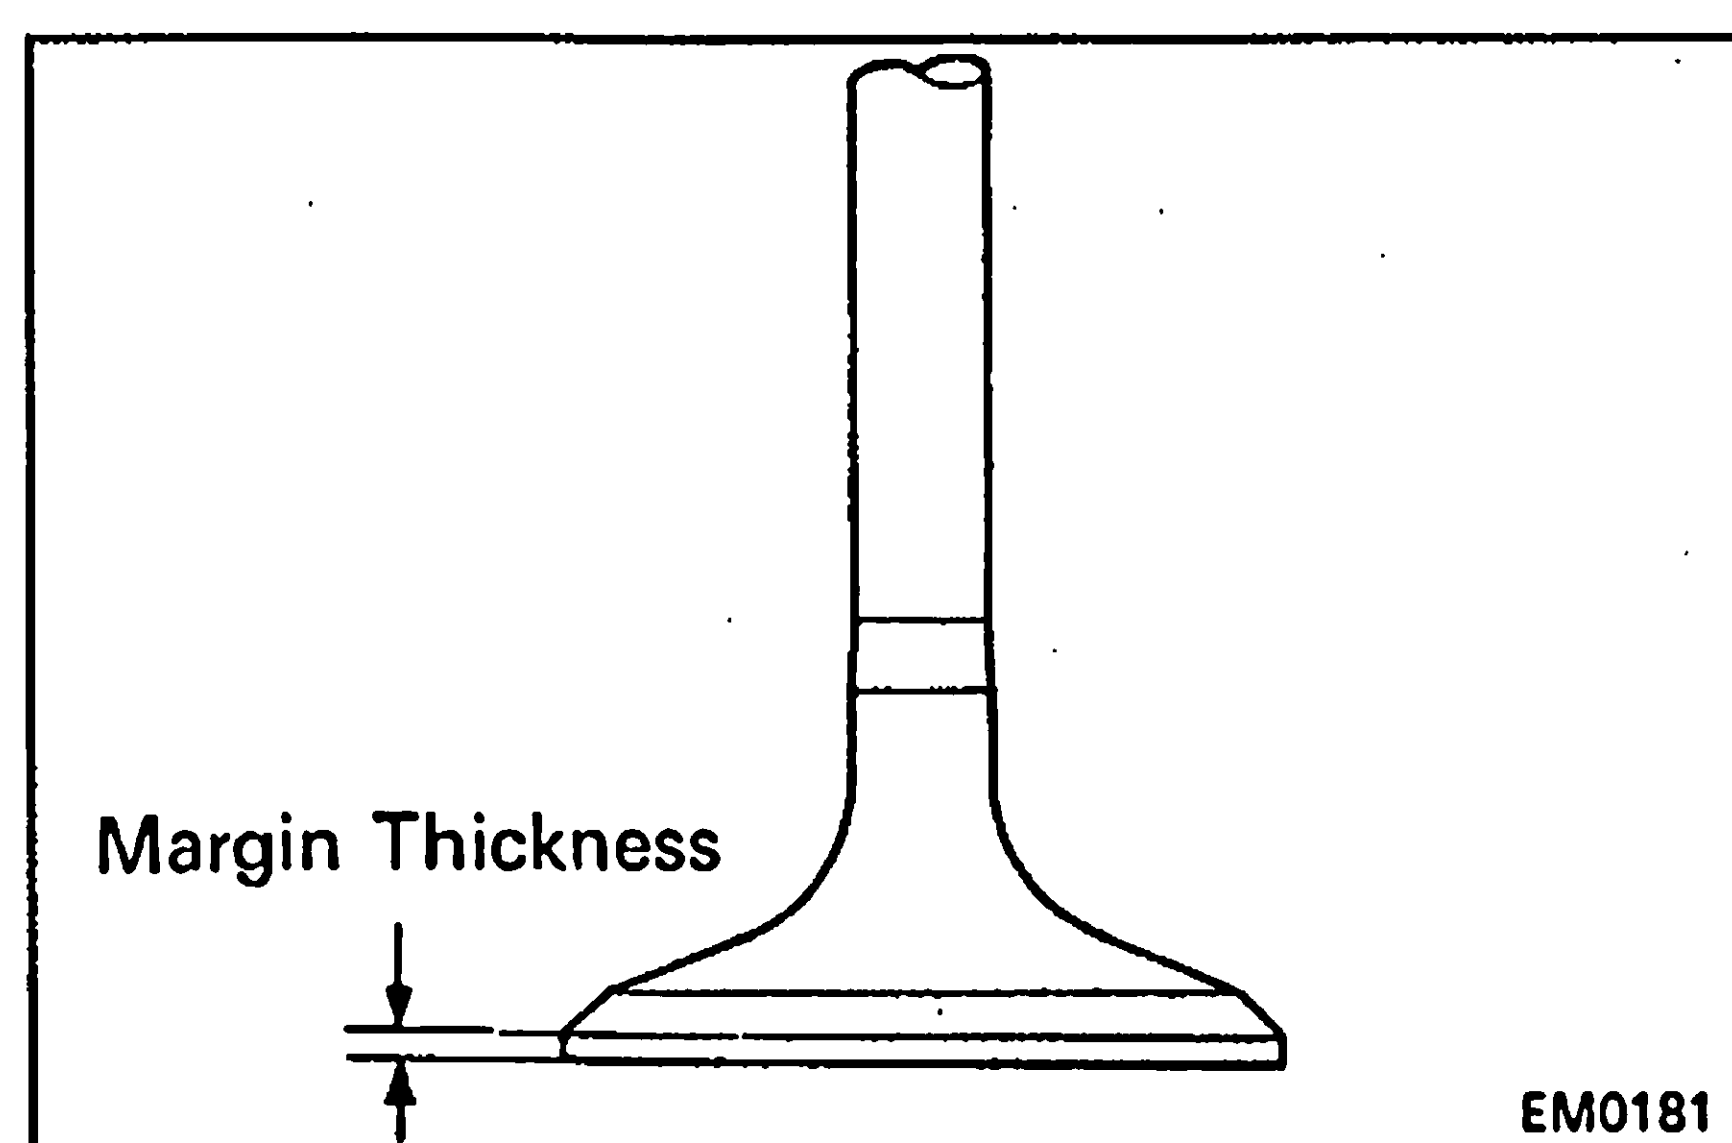

- (c) Check the valve head margin thickness.

Standard margin thickness:

Intake

1.5 mm (0.059 in.)


Exhaust

1.4 mm (0.055 in.)

Minimum margin thickness:

1.0 mm (0.039 in.)

If the margin thickness is less than minimum, replace the valve.

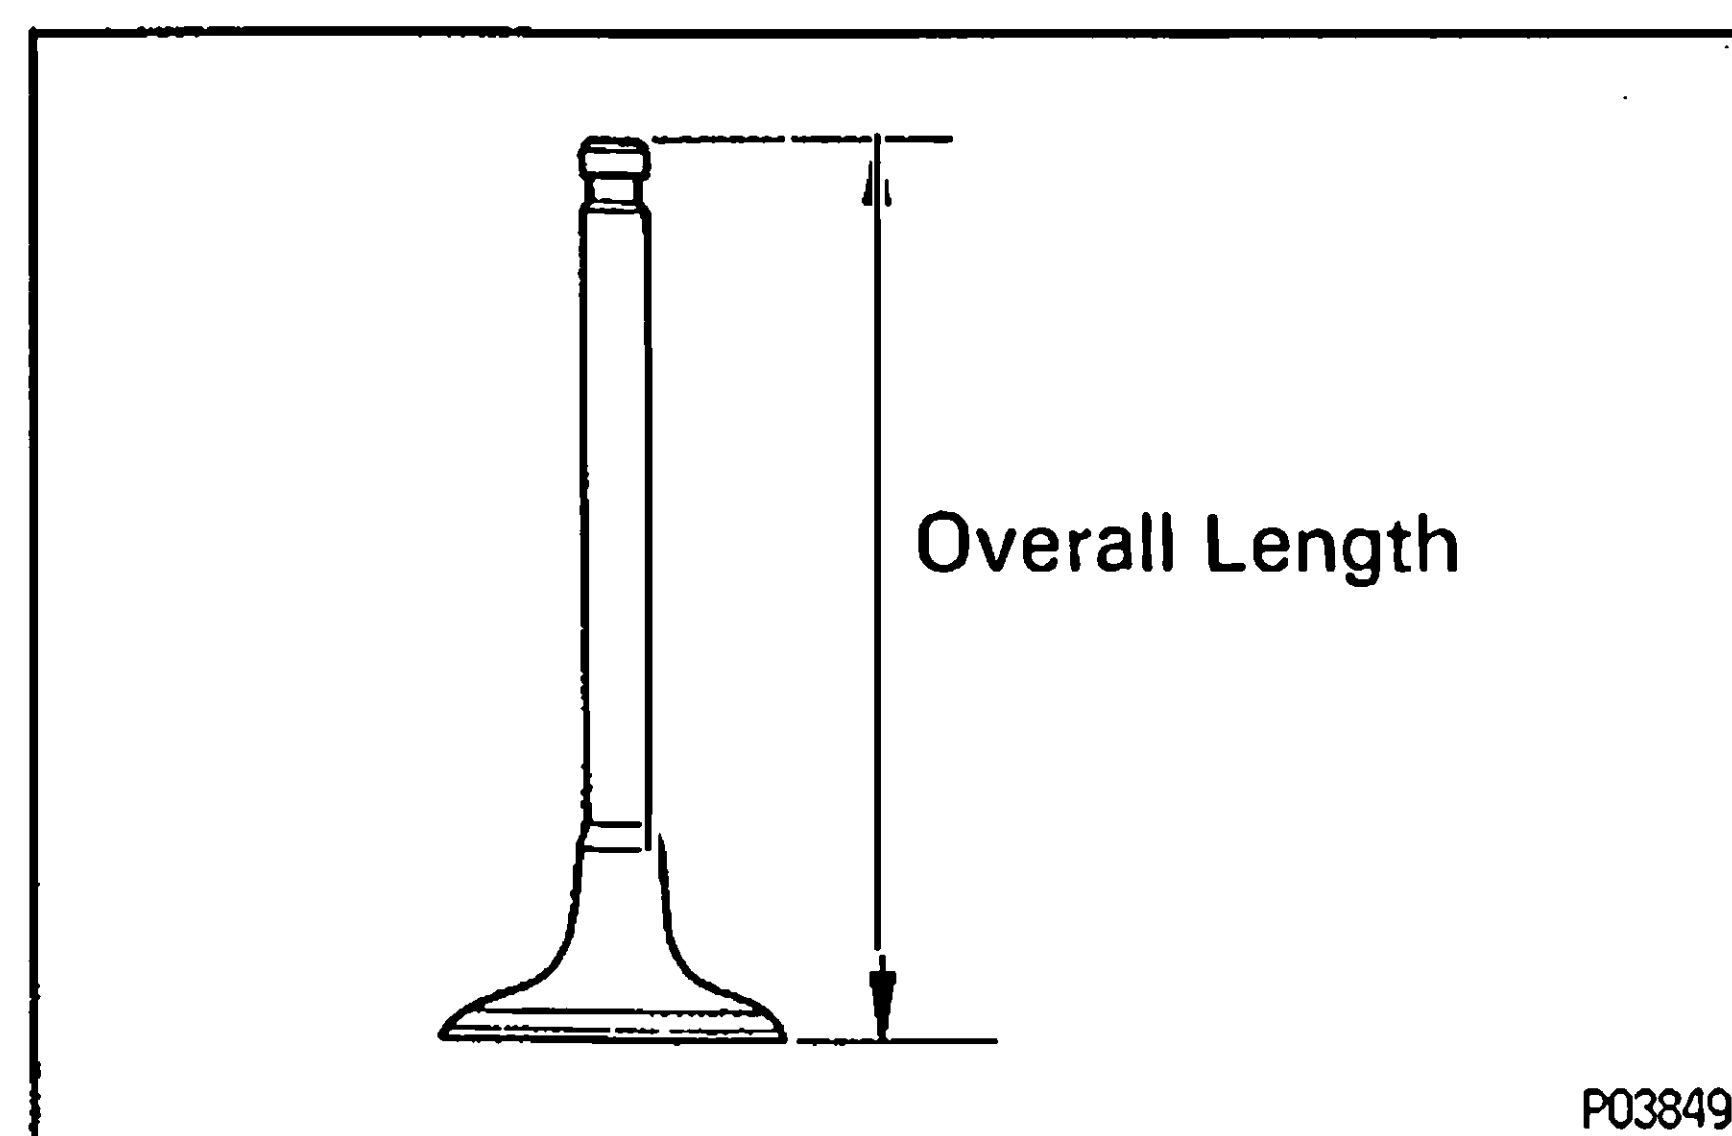

- (d) Check the valve overall length.

Standard overall length:

Intake

98.70 mm (3.8858 in.)

Exhaust

98.10 mm (3.8622 in.)

Minimum overall length:


Intake

98.2 mm (3.866 in.)

Exhaust

97.6 mm (3.843 in.)


If the overall length is less than minimum, replace the valve.

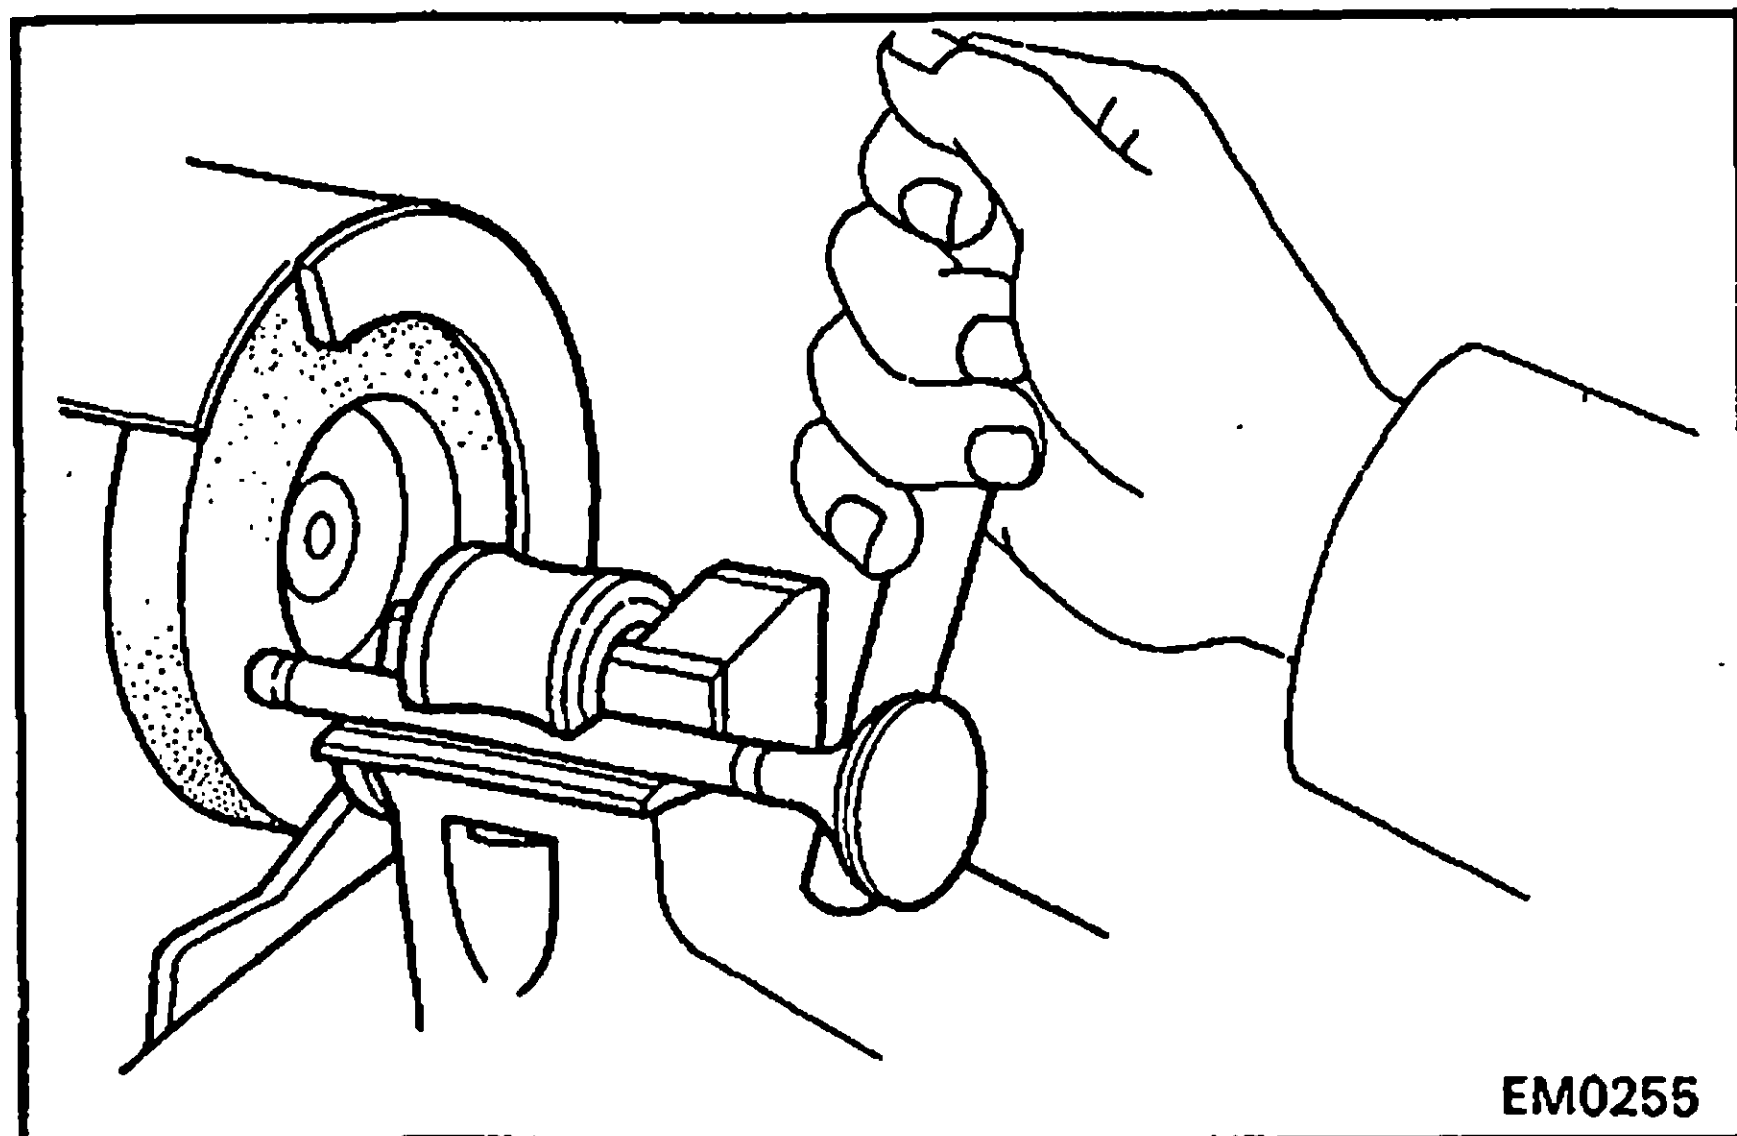

- (e) Check the surface of the valve stem tip for wear. If the valve stem tip is worn, resurface the tip with a grinder or replace the valve.


NOTICE: Do not grind off more than minimum.

EG

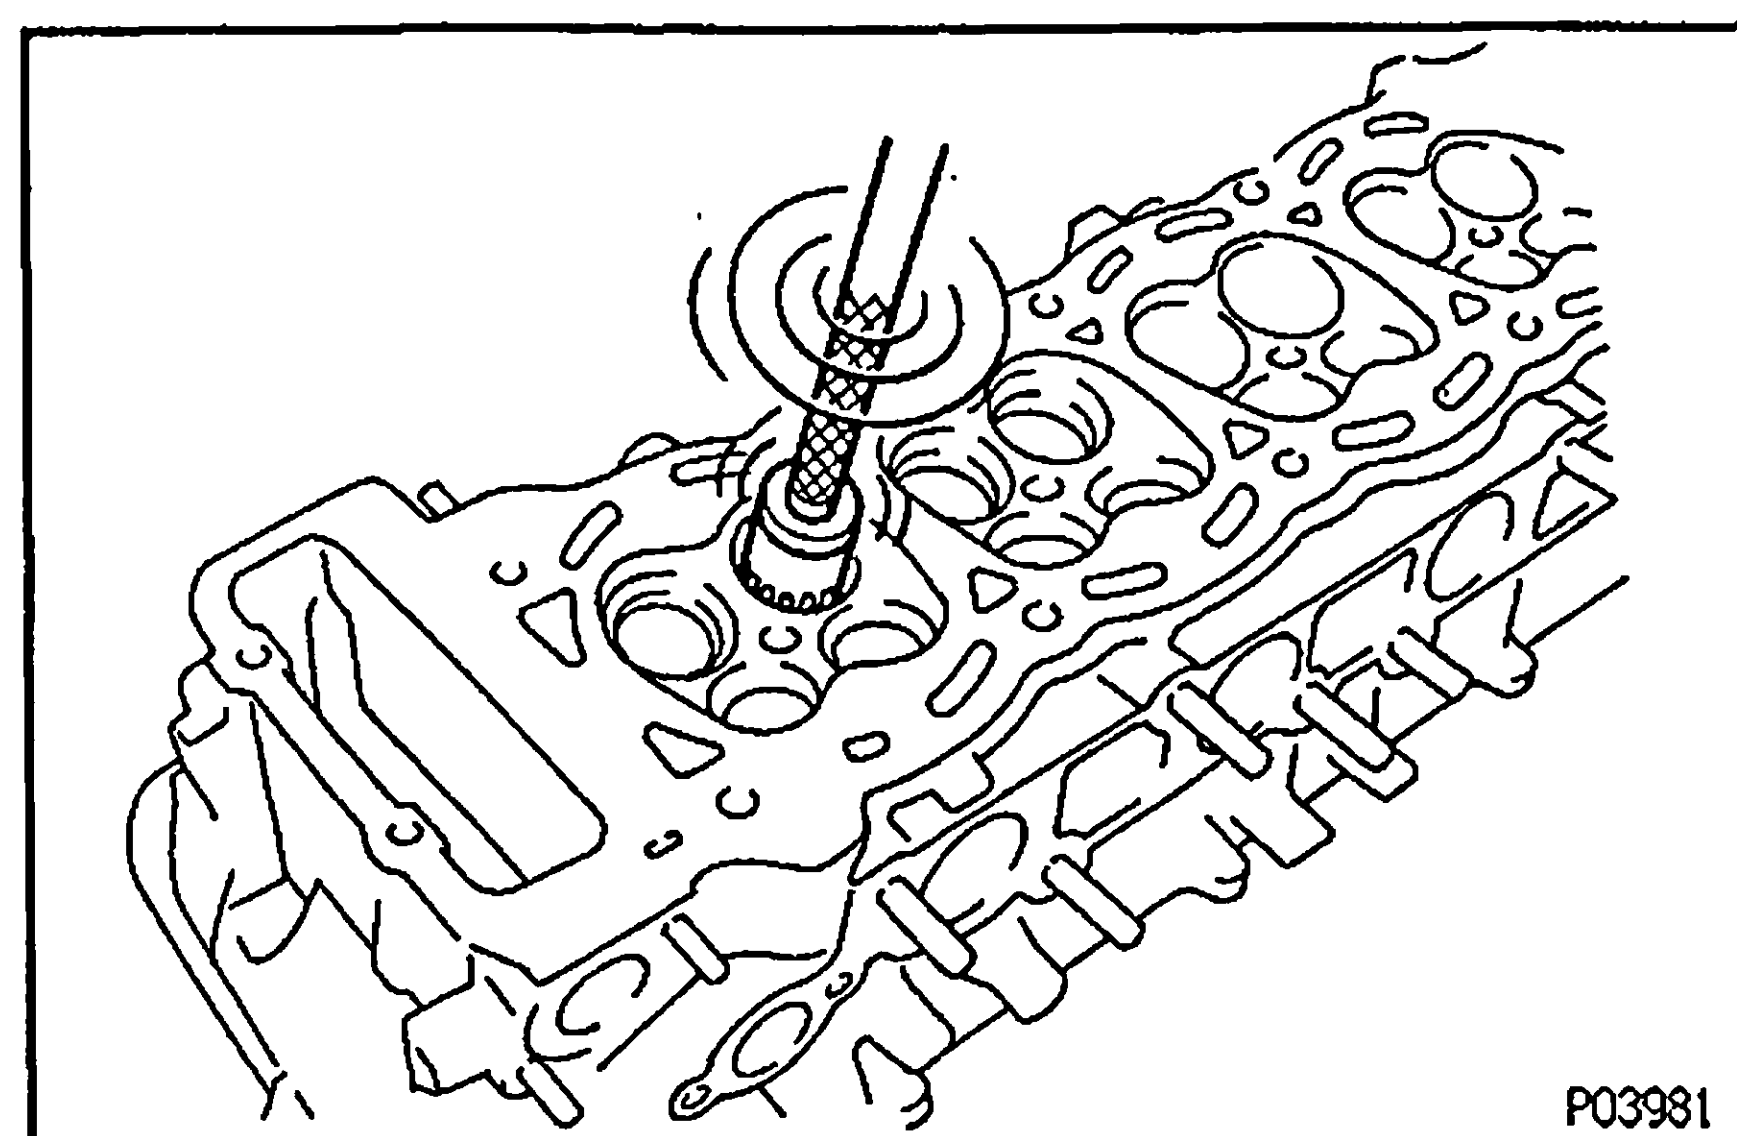


8. INSPECT AND CLEAN VALVE SEATS

- (a) Using a 45° carbide cutter, resurface the valve seats. Remove only enough metal to clean the seats.

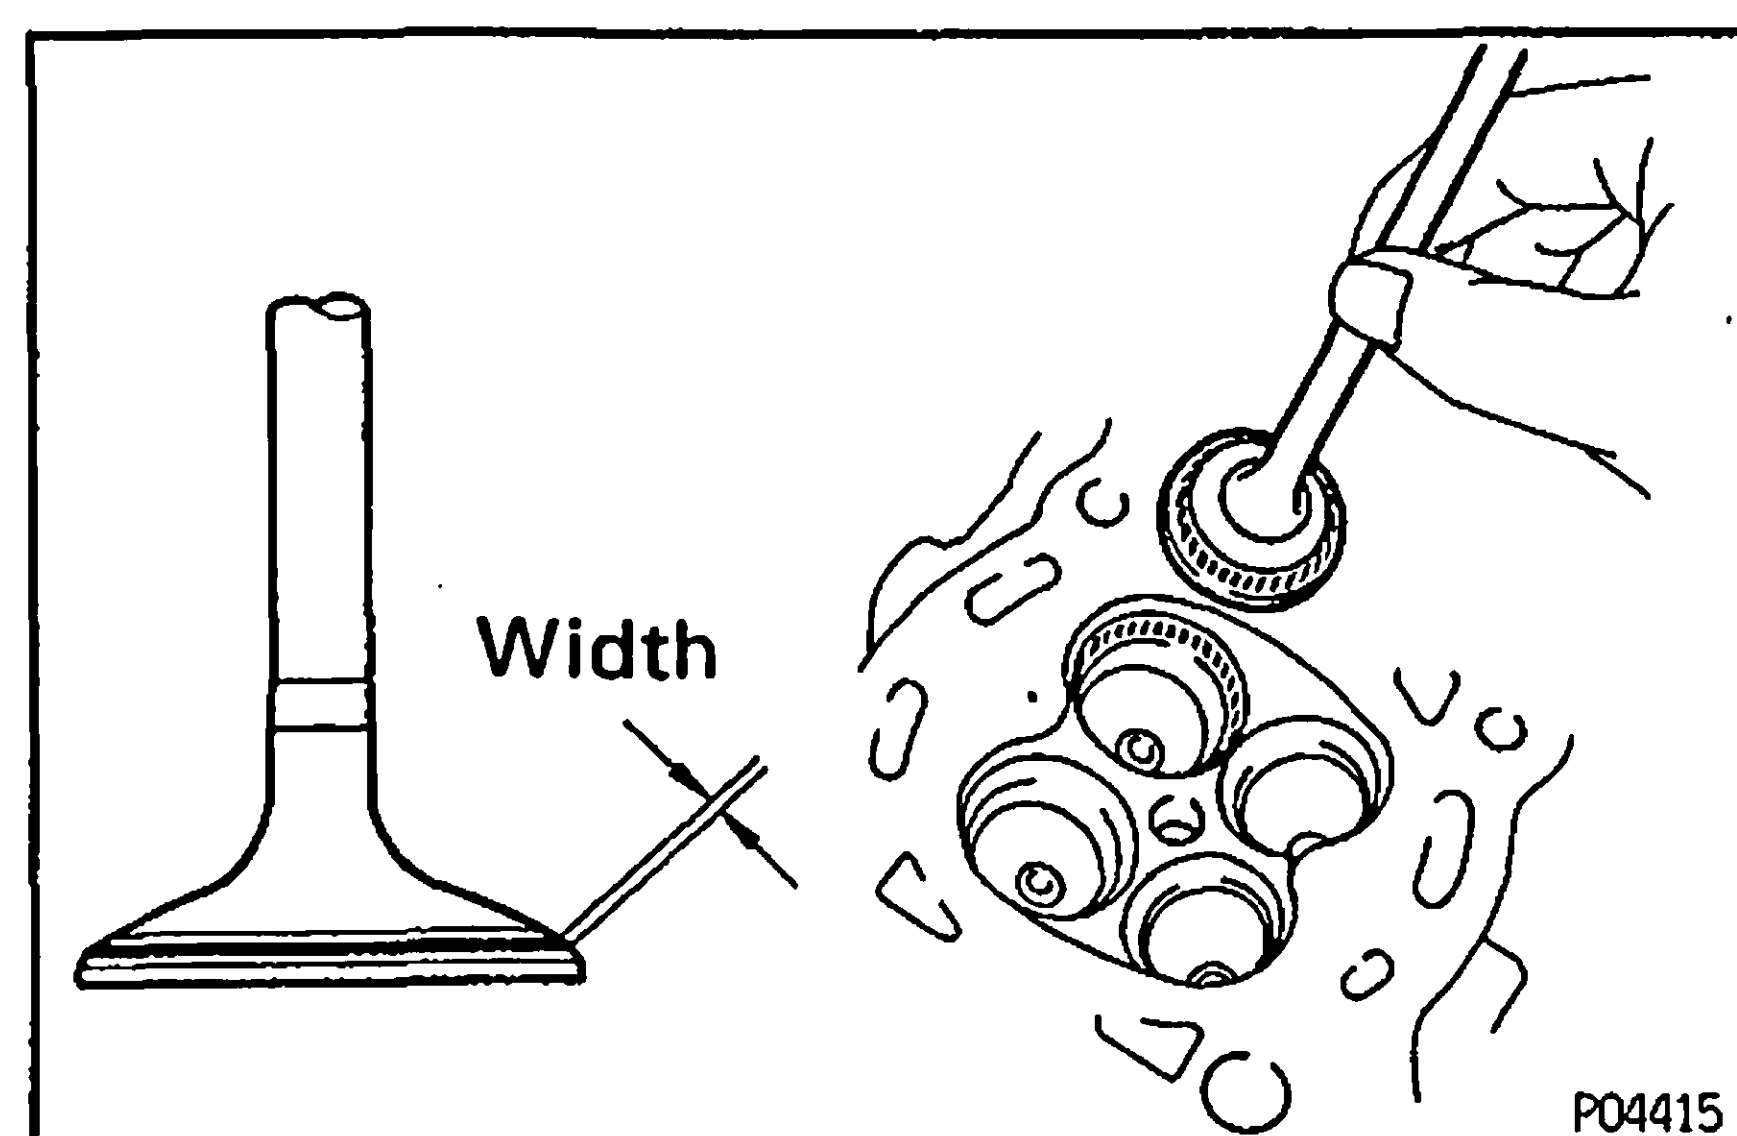

- (b) Check the valve seating position. Apply a light coat of prussian blue (or white lead) to the valve face. Lightly press the valve against the seat. Do not rotate valve.
- (c) Check the valve face and seat for the following:
- If blue appears 360° around the face, the valve is concentric. If not, replace the valve.

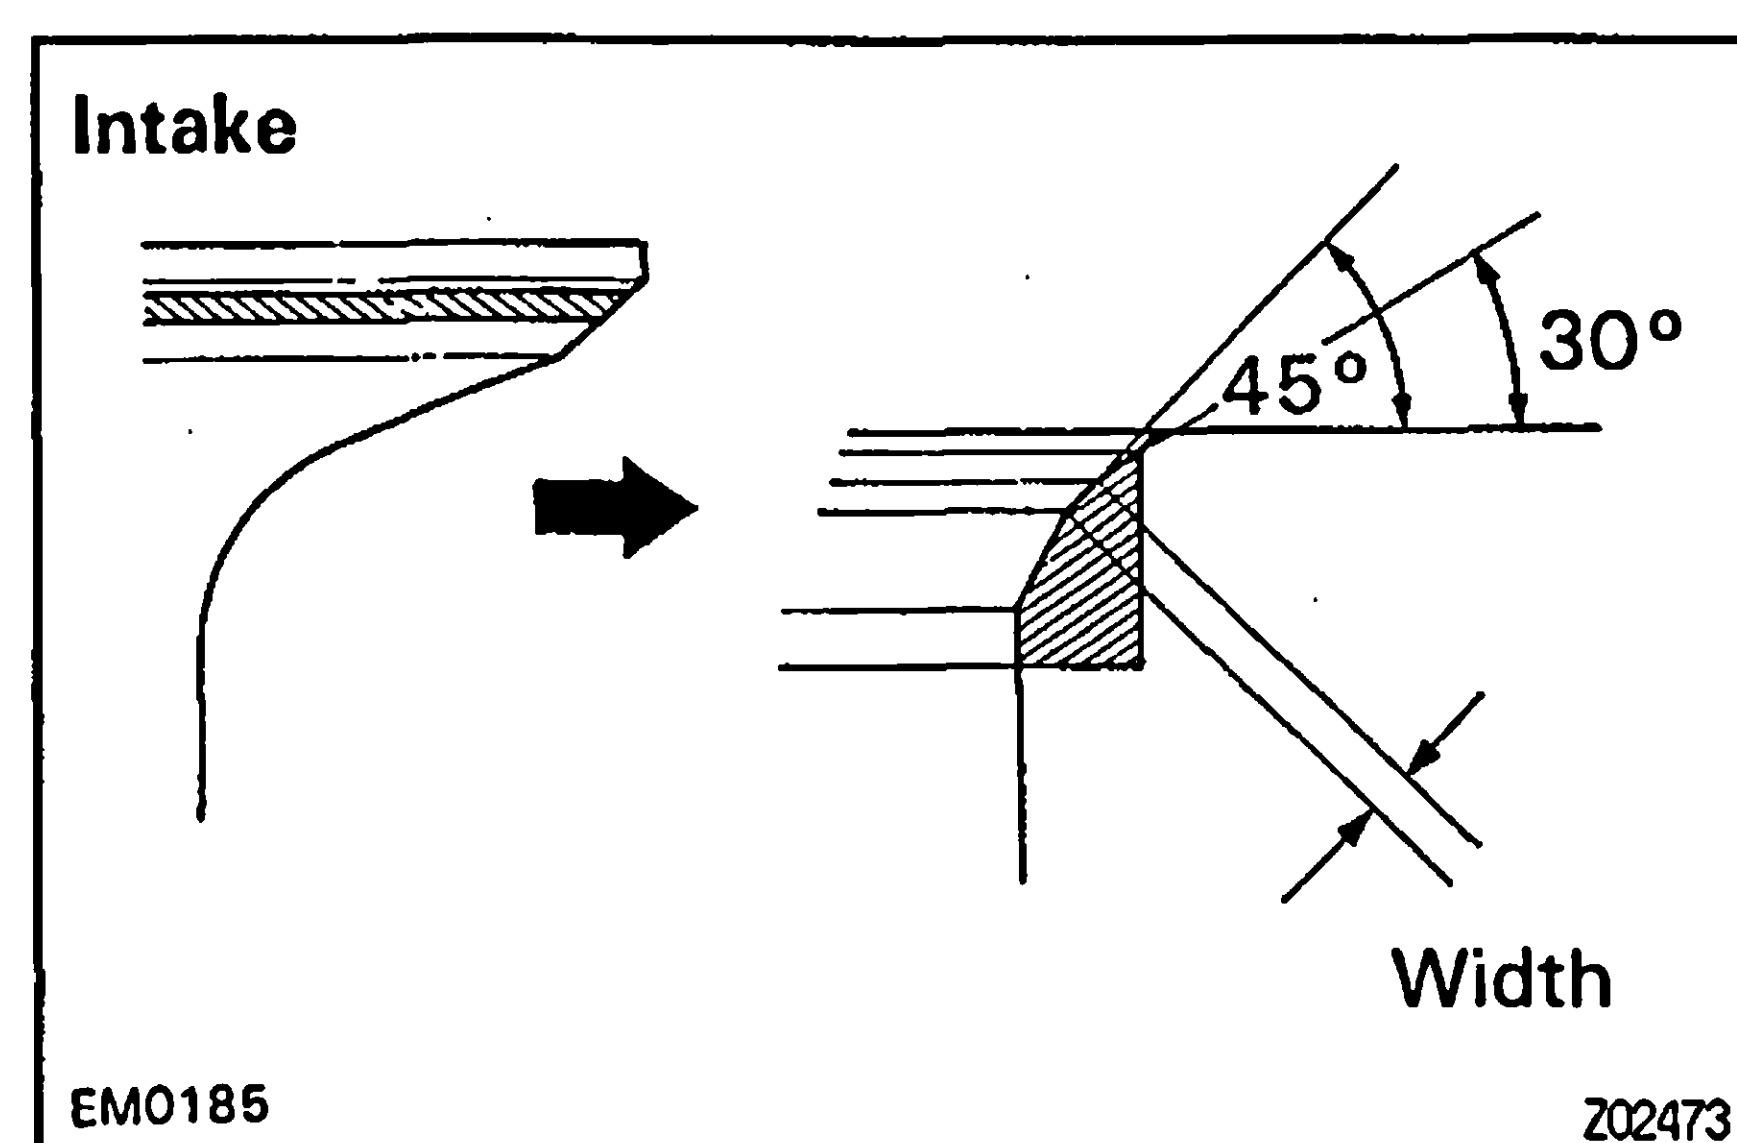


- If blue appears 360° around the valve seat, the guide and face are concentric. If not, resurface the seat.
- Check that the seat contact is in the middle of the valve face with the following width:
Intake
 1.2 — 1.6 mm (0.047 — 0.063 in.)
Exhaust
 1.0 — 1.4 mm (0.039 — 0.055 in.)


If not, correct the valve seats as follows:

- (1) (Intake)


If the seating is too high on the valve face, use 30° and 45° cutters to correct the seat.

- (2) If the seating is too low on the valve face, use 75° and 45° cutters to correct the seat.

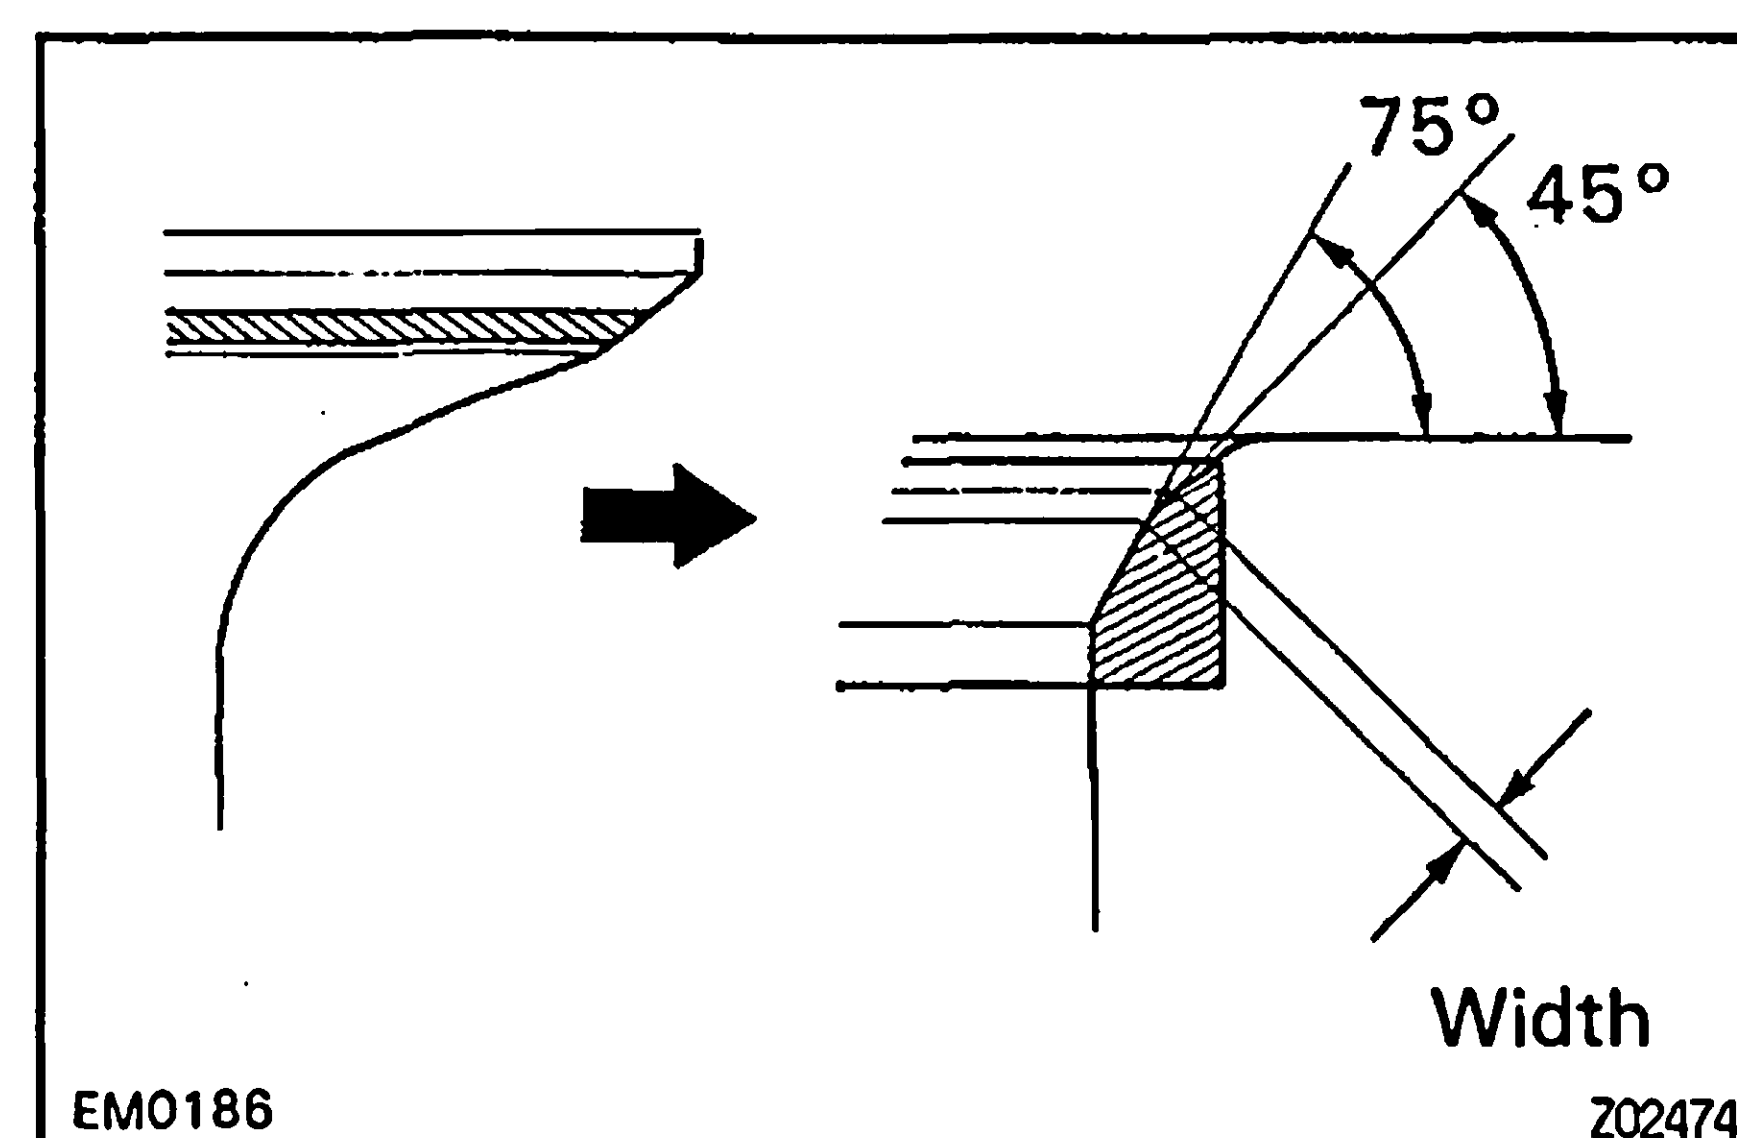

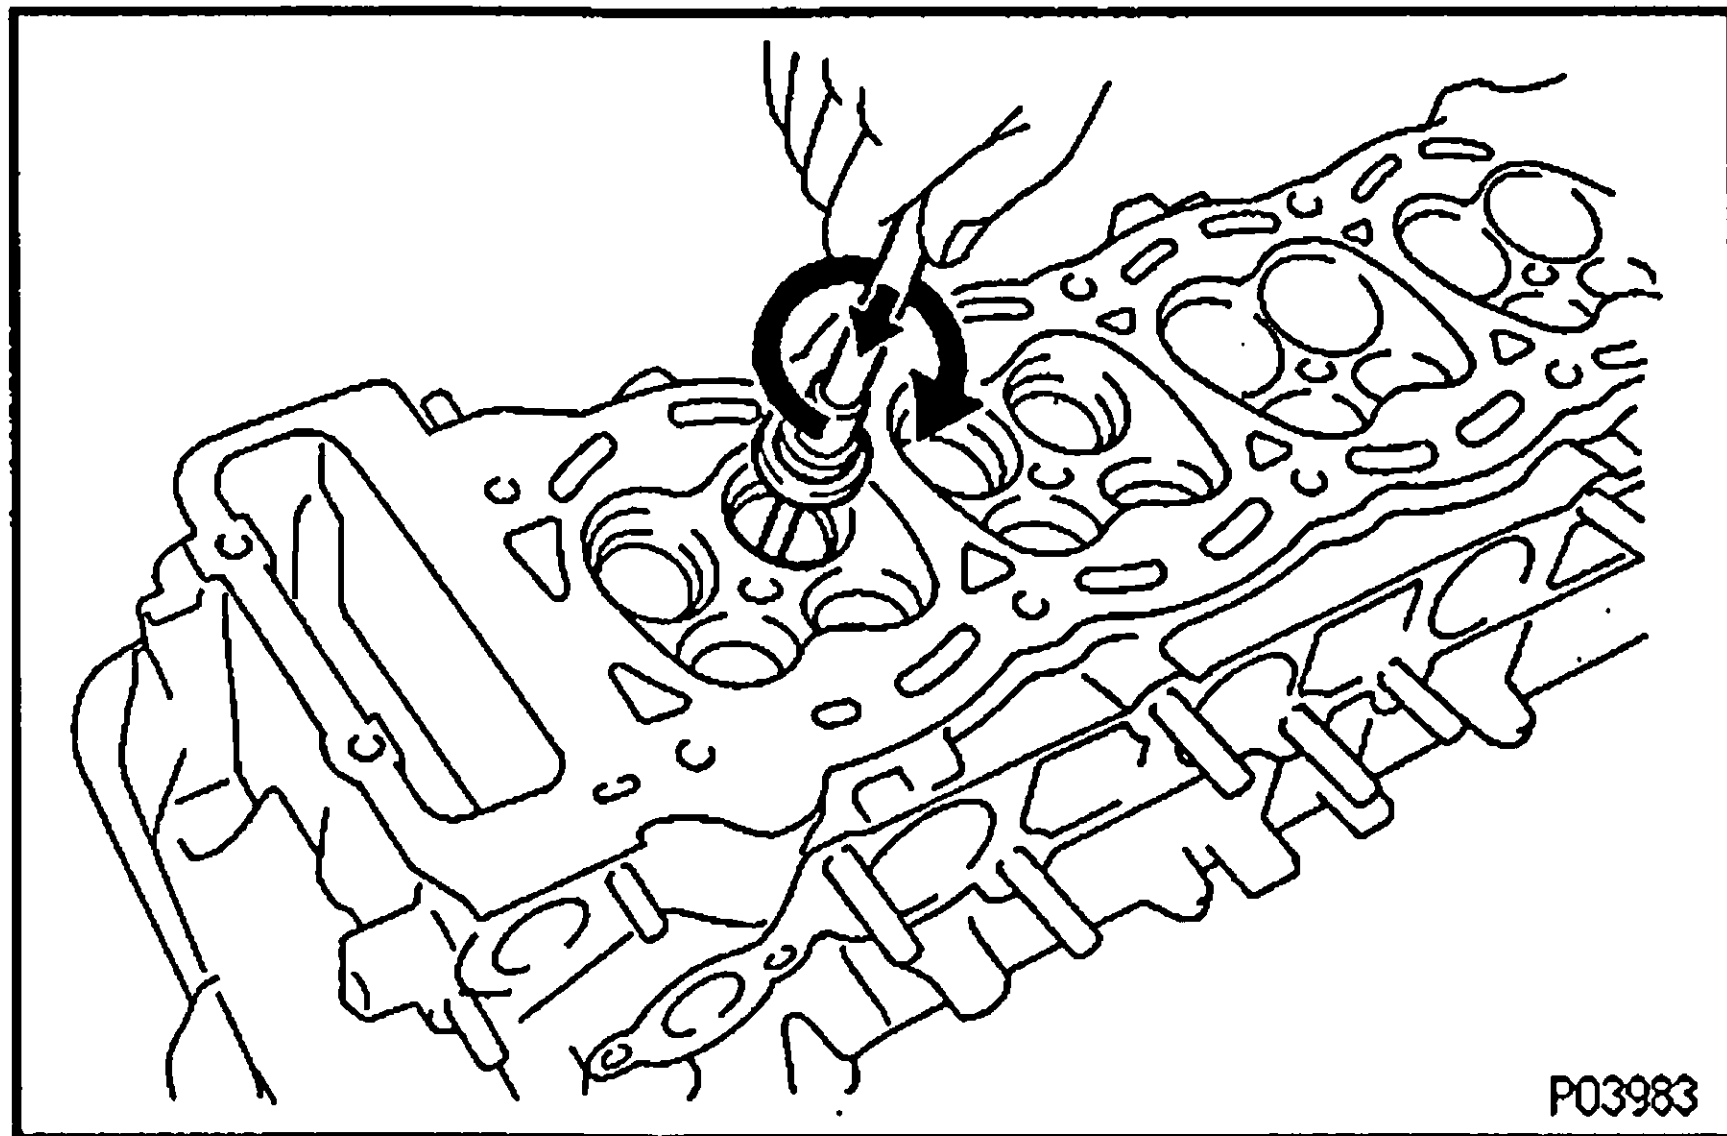

- (d) Hand—lap the valve and valve seat with an abrasive compound.
- (e) After hand—lapping, clean the valve and valve seat.

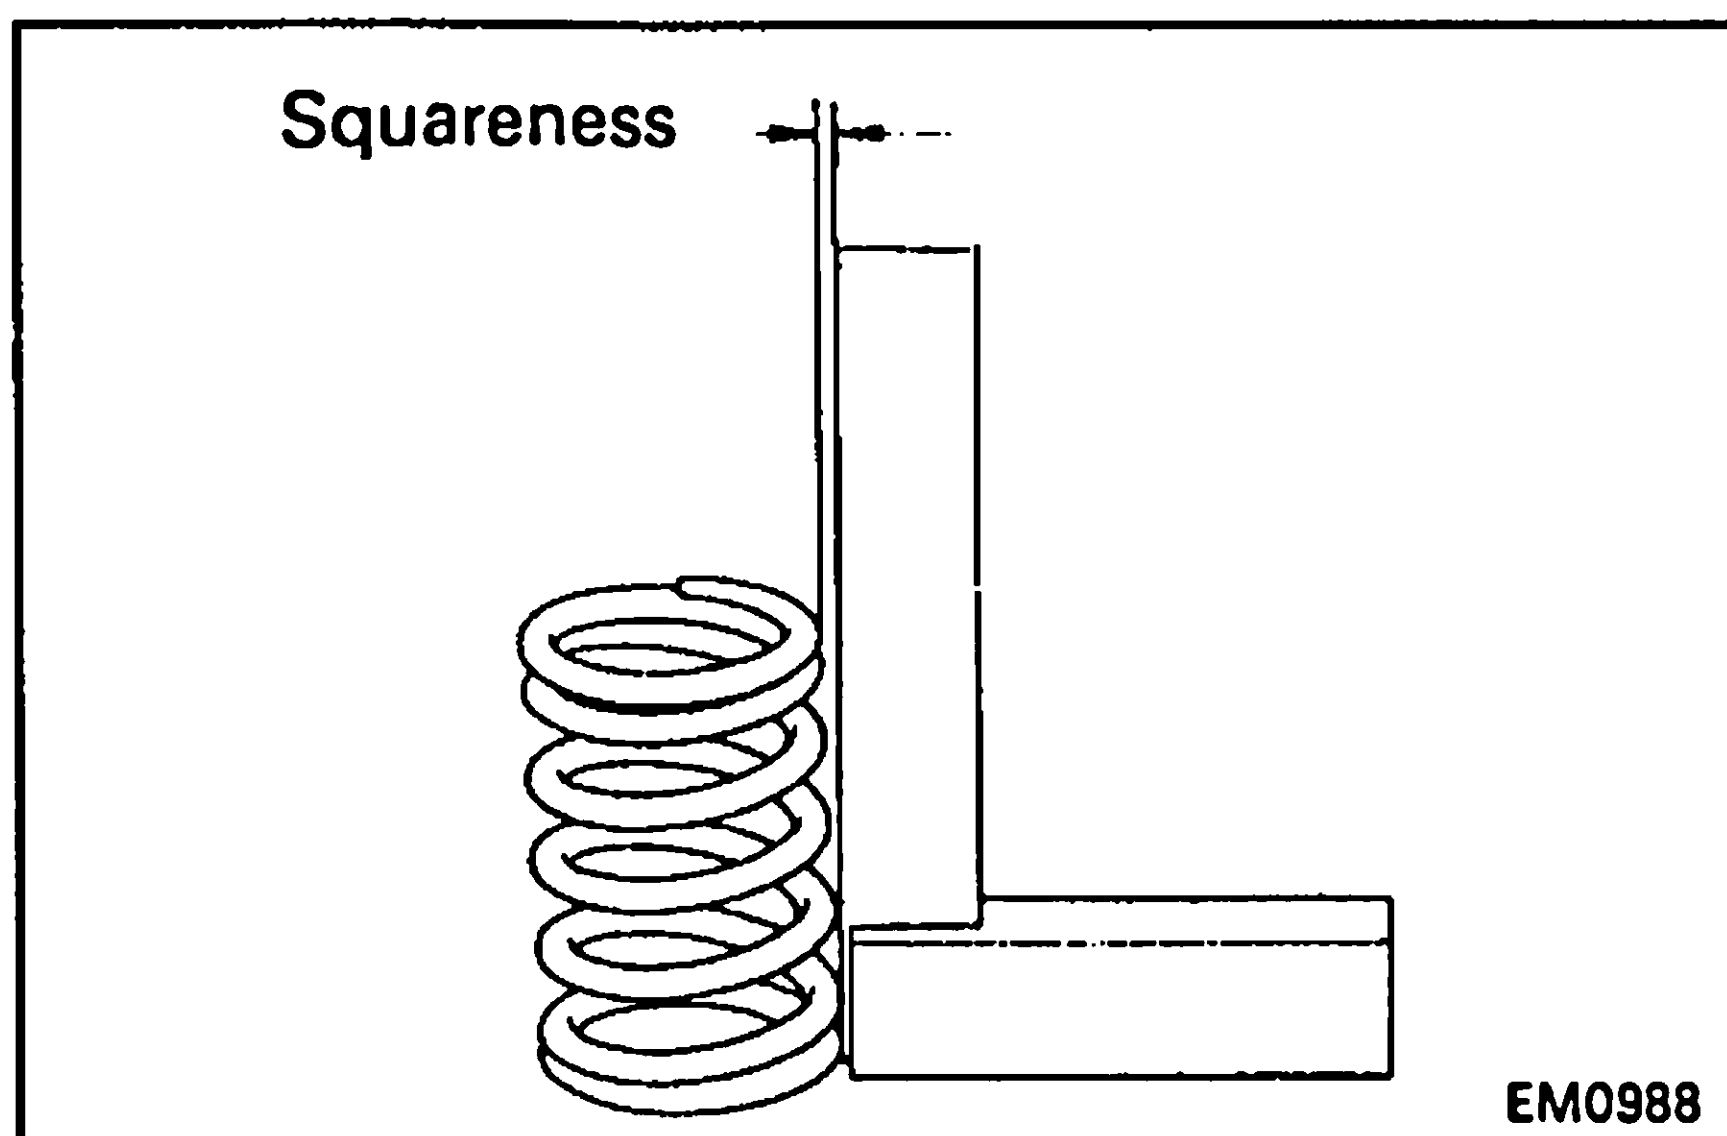


9. INSPECT VALVE SPRINGS

- (a) Using a steel square, measure the squareness of the valve spring.

Maximum squareness:

2.0 mm (0.079 in.)

If the deviation is greater than maximum, replace the valve spring.

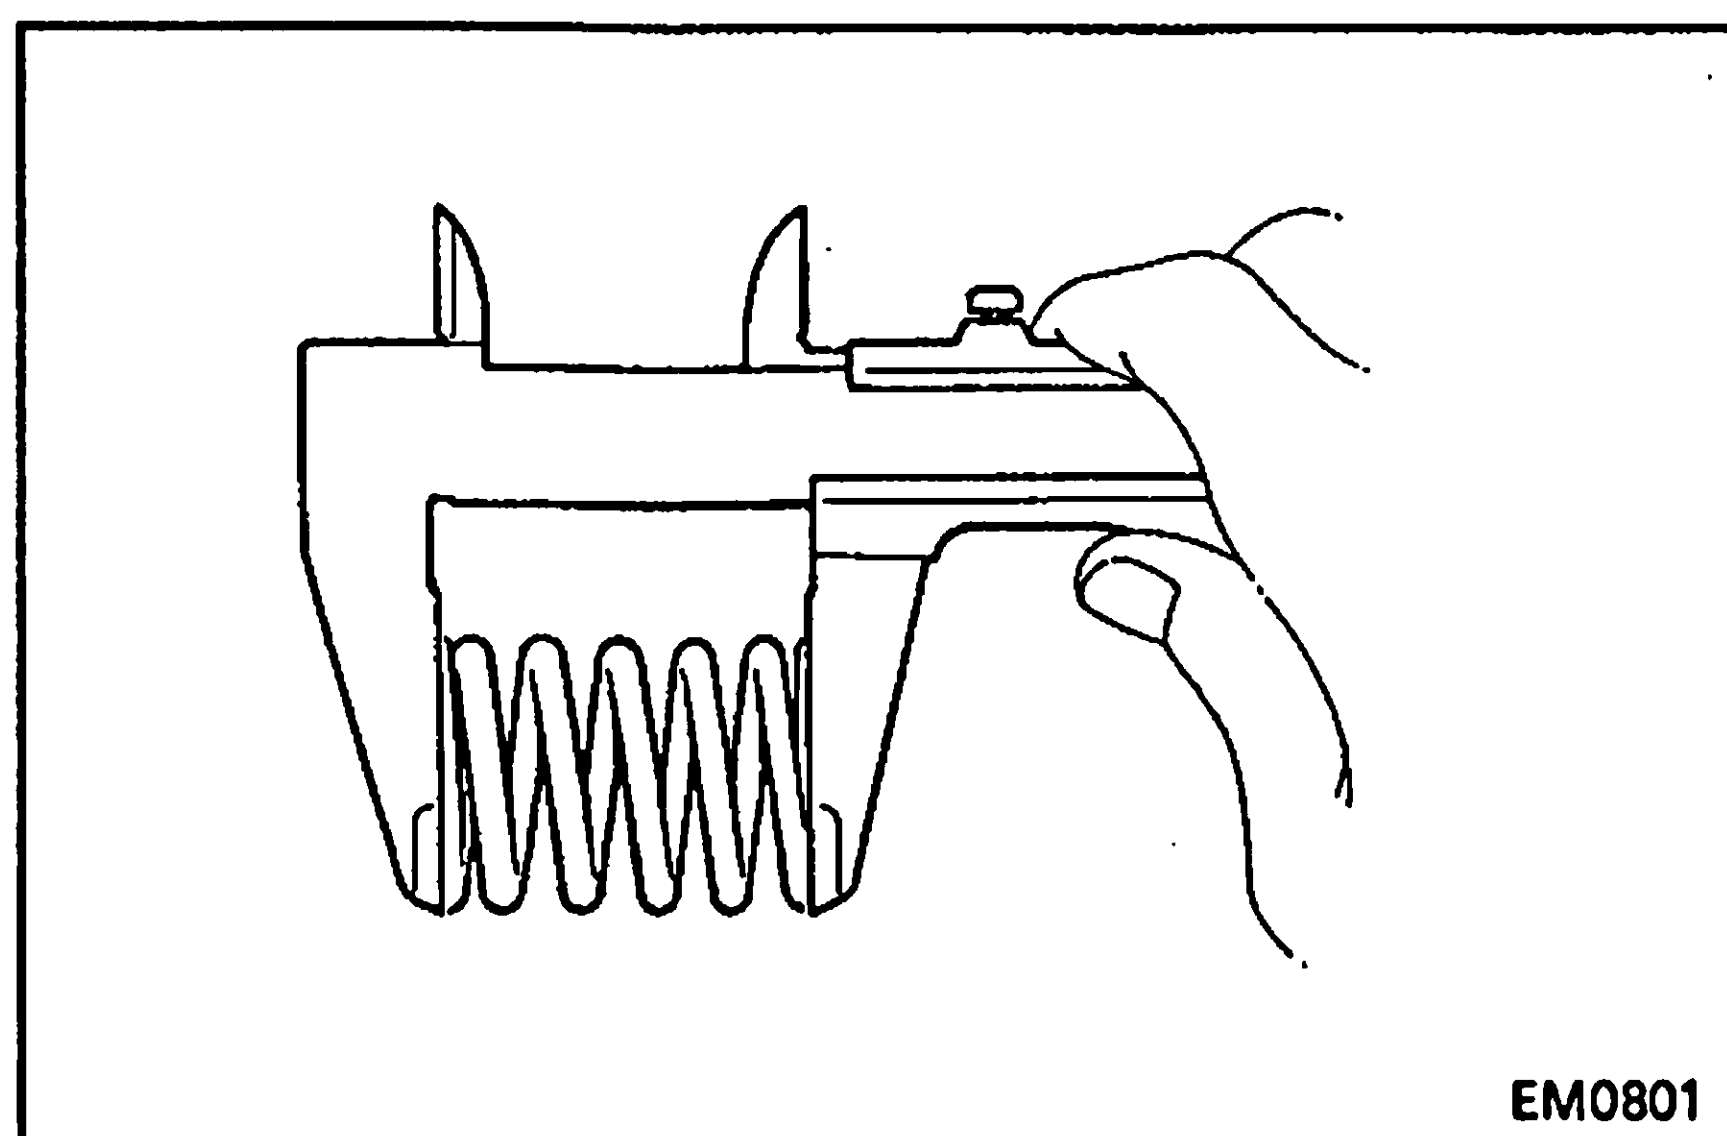


- (b) Using a vernier caliper, measure the free length of the valve spring.

Free length:

43.94 – 45.06 mm (1.7299 – 1.7740 in.)

If the free length is not as specified, replace the valve spring.

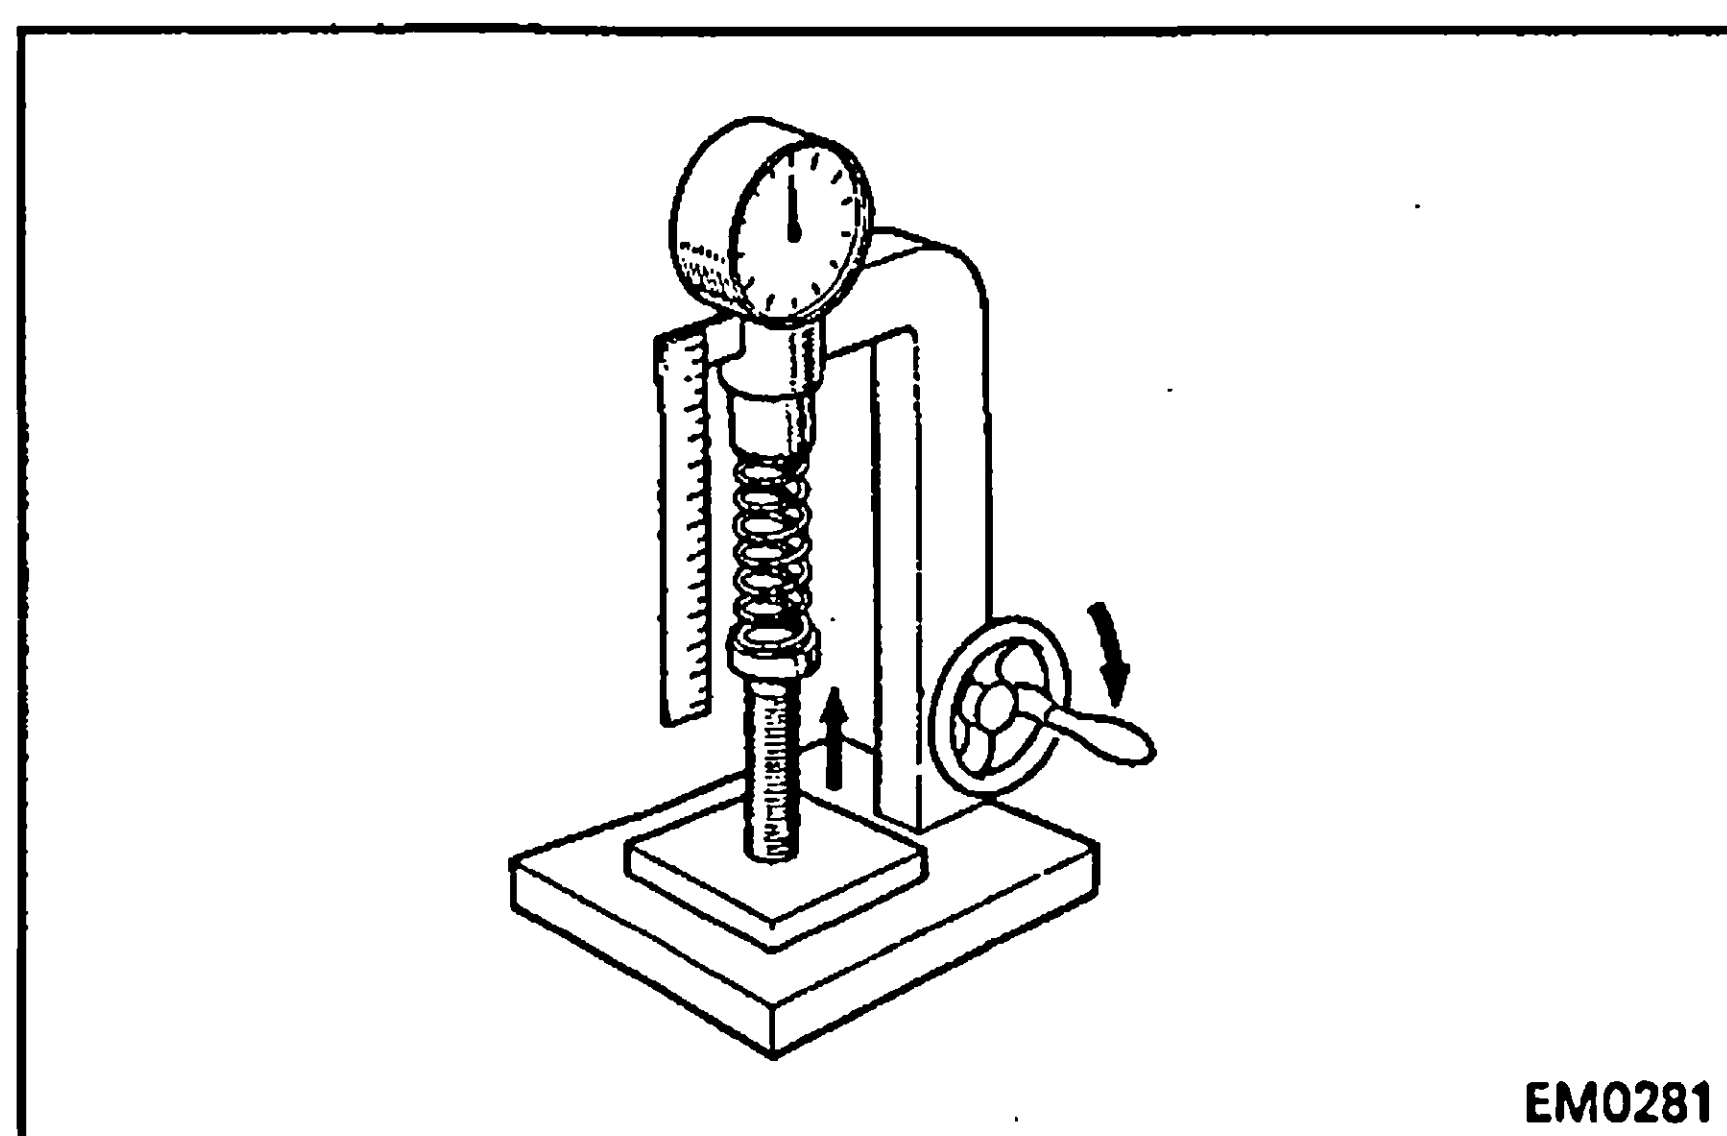


- (c) Using a spring tester, measure the tension of the valve spring at the specified installed length.

Installed tension:

214 – 238 N (21.8 – 24.2 kgf, 48.1 – 53.4 lbf)

at 36.5 mm (1.437 in.)

If the installed tension is not as specified, replace the valve spring.

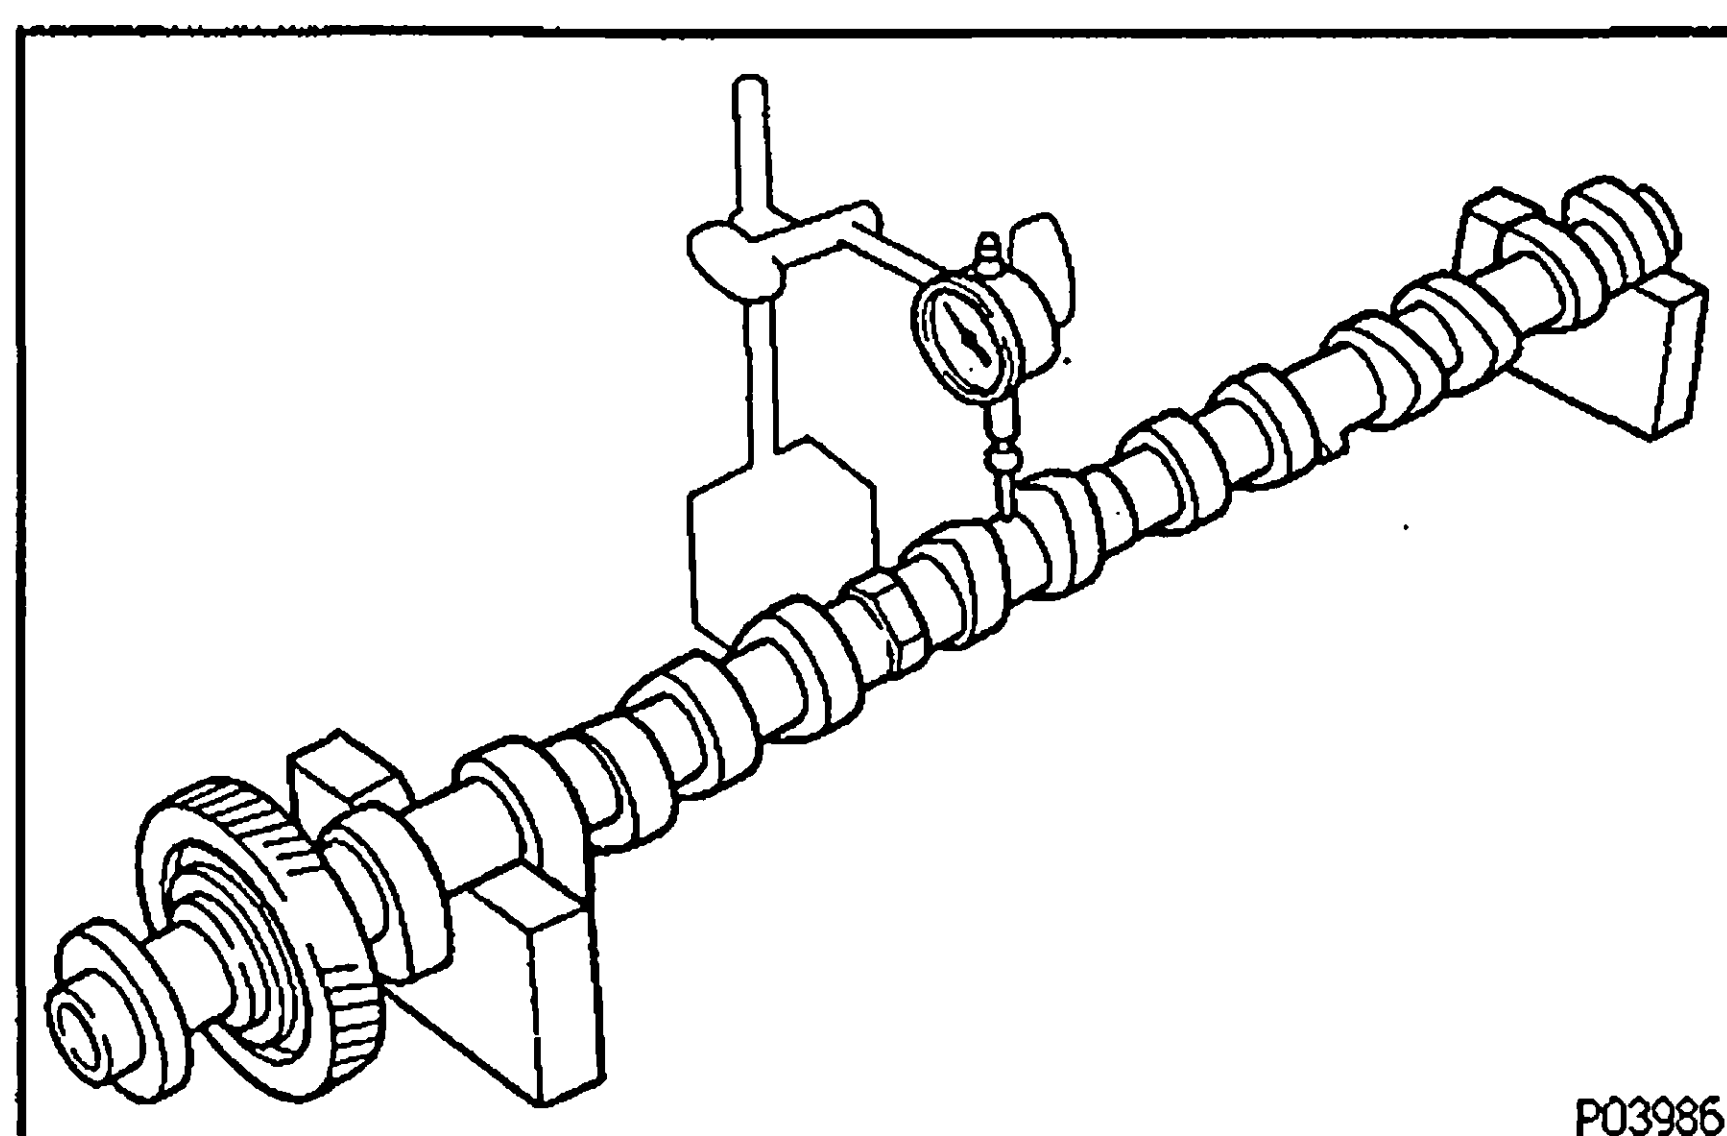

10. INSPECT CAMSHAFTS AND BEARINGS


A. Inspect camshaft for runout

- (a) Place the camshaft on V—blocks.
- (b) Using a dial indicator, measure the circle runout at the center journal.

Maximum circle runout:

0.06 mm (0.0024 in.)

If the circle runout is greater than maximum, replace the camshaft.

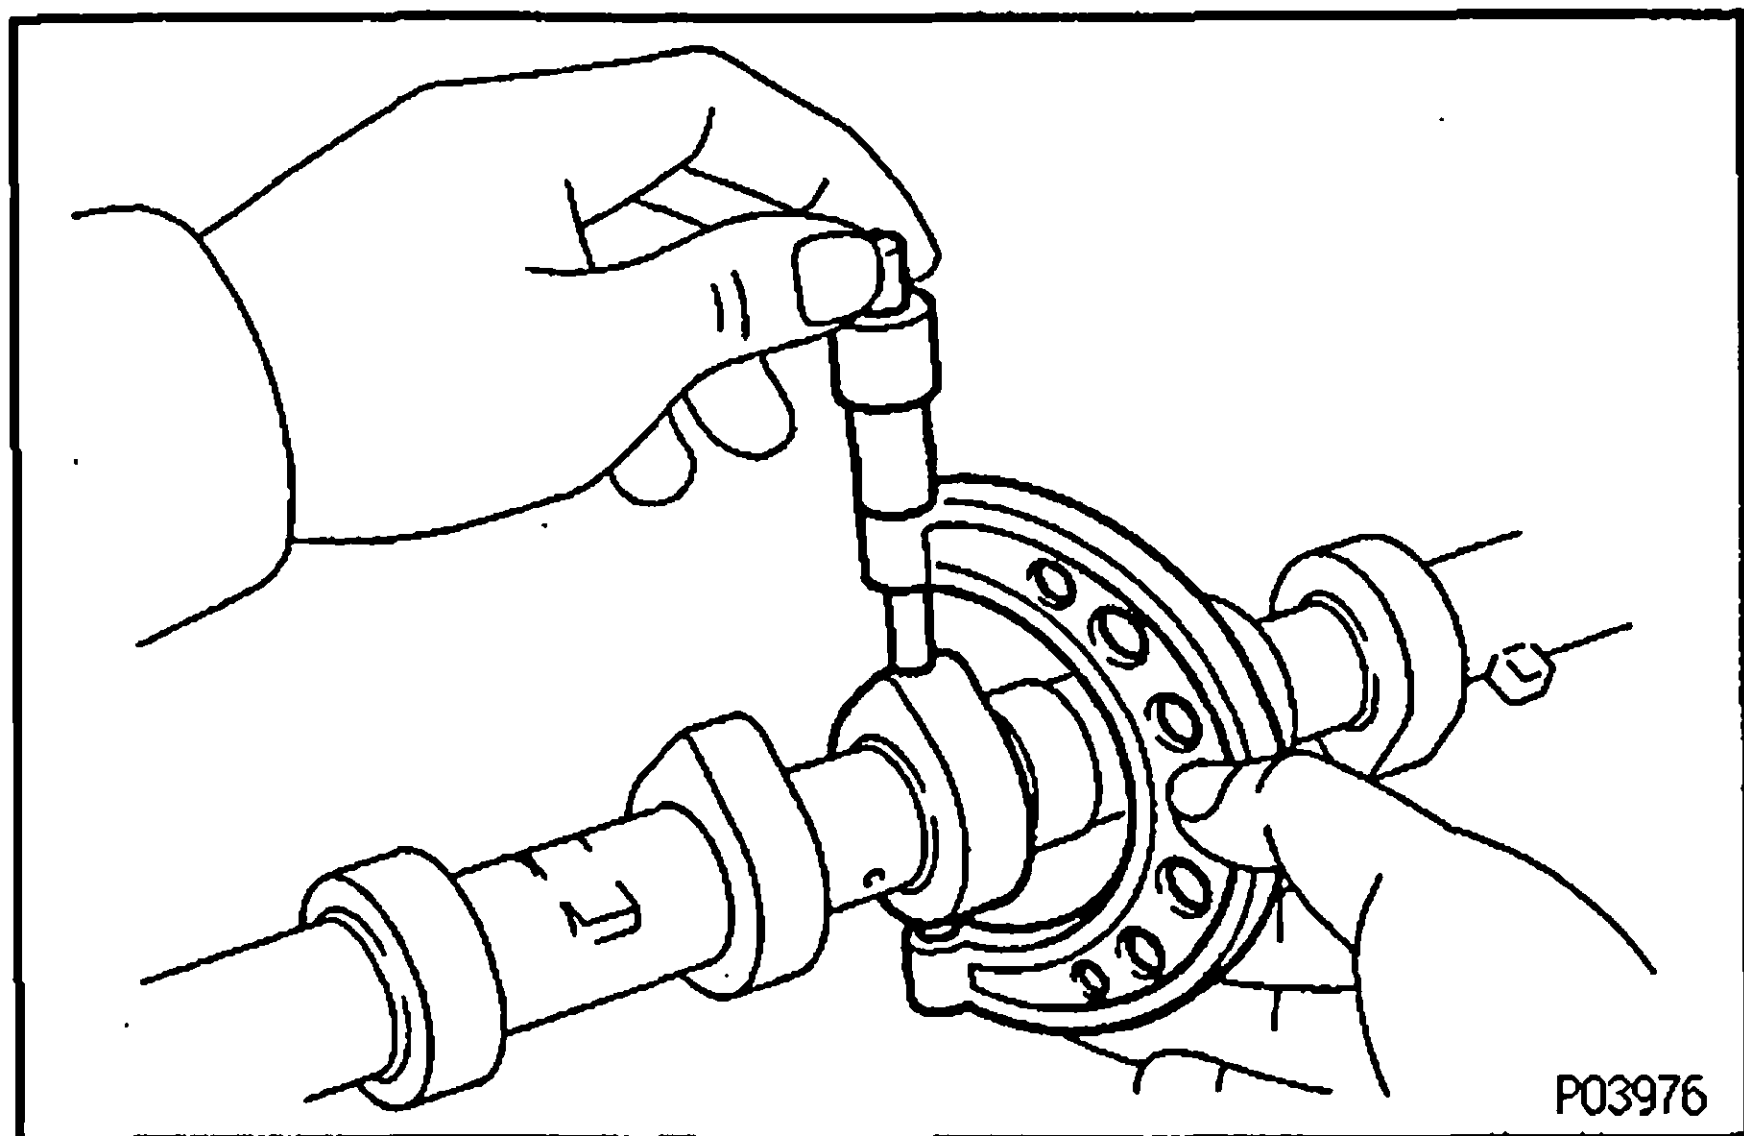**B. Inspect cam lobes**

Using a micrometer, measure the cam lobe height.

Standard cam lobe height:


50.61 – 50.71 mm (1.9925 – 1.9965 in.)

Minimum cam lobe height:

50.51 mm (1.9886 in.)

If the cam lobe height is less than minimum, replace the camshaft.

EG

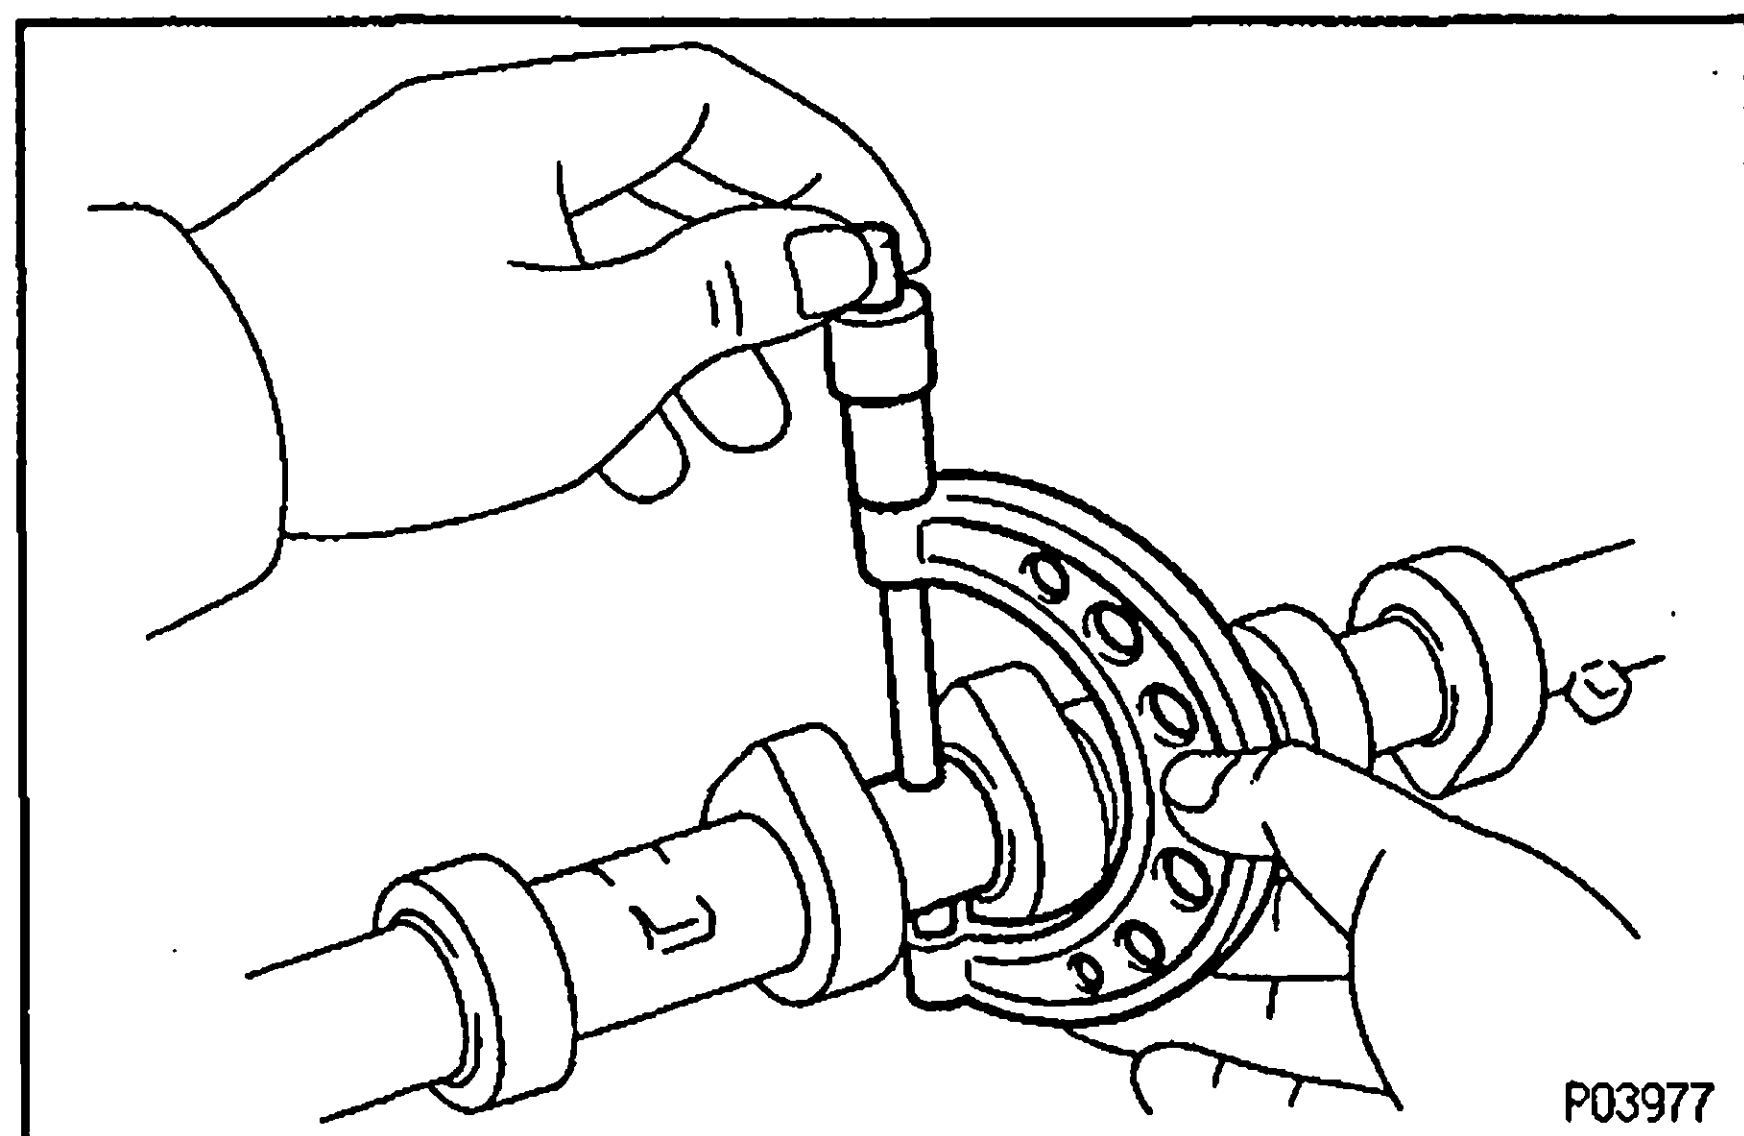
**C. Inspect camshaft journals**

Using a micrometer, measure the journal diameter.

Journal diameter:


26.959 – 26.975 mm (1.0614 – 1.0620 in.)

If the journal diameter is not as specified, check the oil clearance.

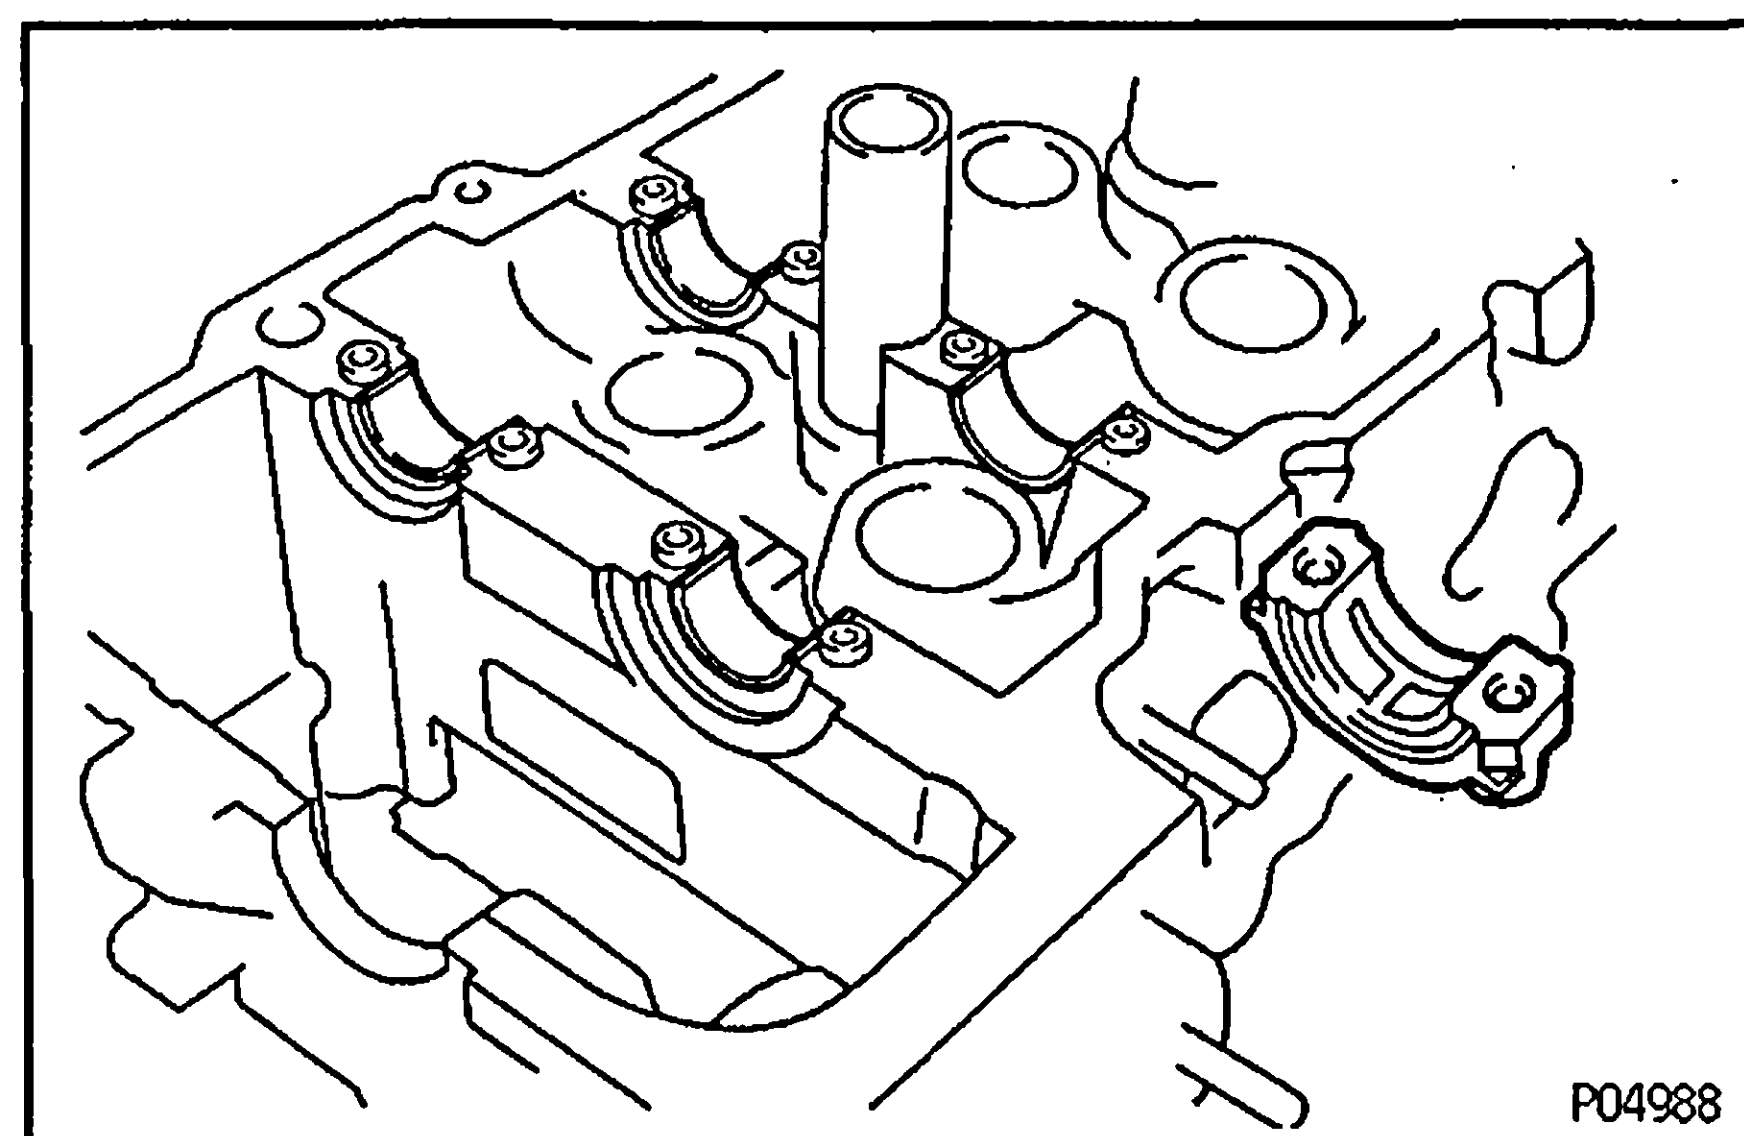**D. Inspect camshaft bearings**

Check that bearings for flaking and scoring.

If the bearings are damaged, replace the bearing caps and cylinder head as a set.

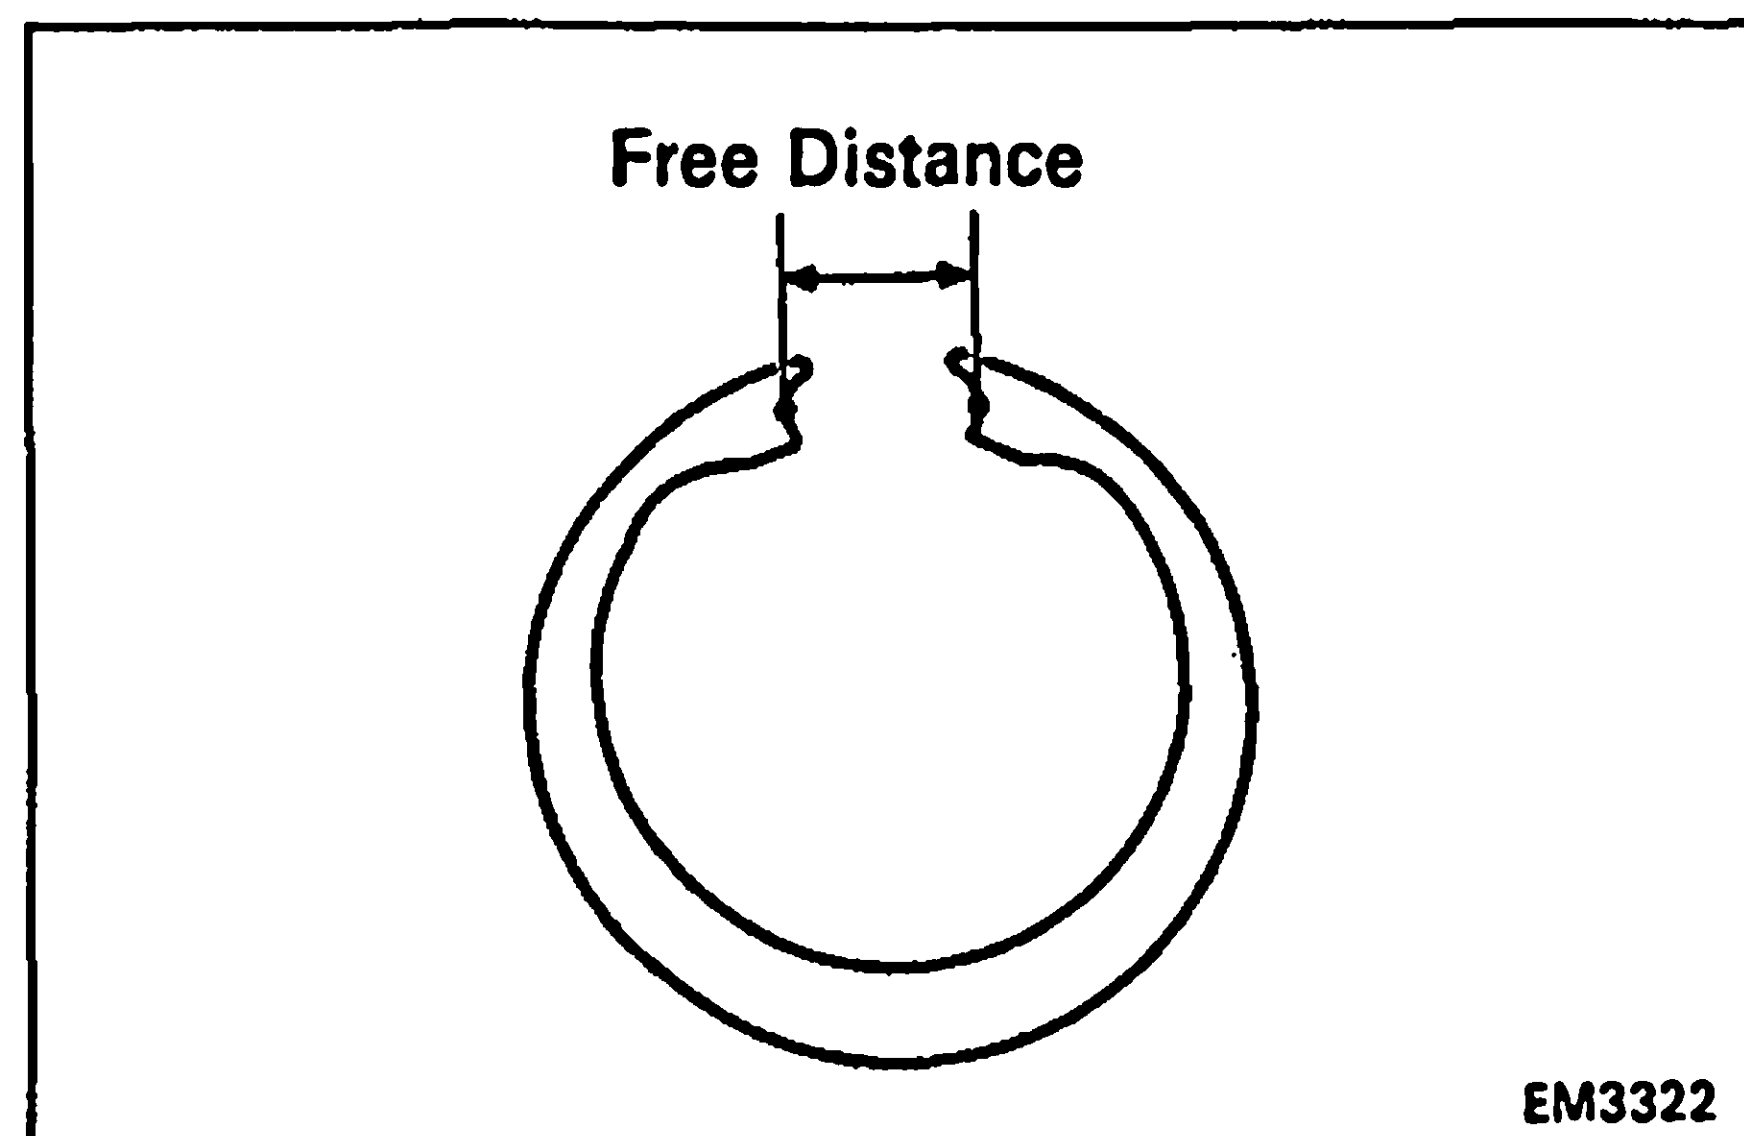
**E. Inspect camshaft gear spring**

Using a vernier caliper, measure the free distance between the spring ends.

Free distance:


18.2 – 18.8 mm (0.717 – 0.740 in.)

If the free distance is not as specified, replace the gear spring.

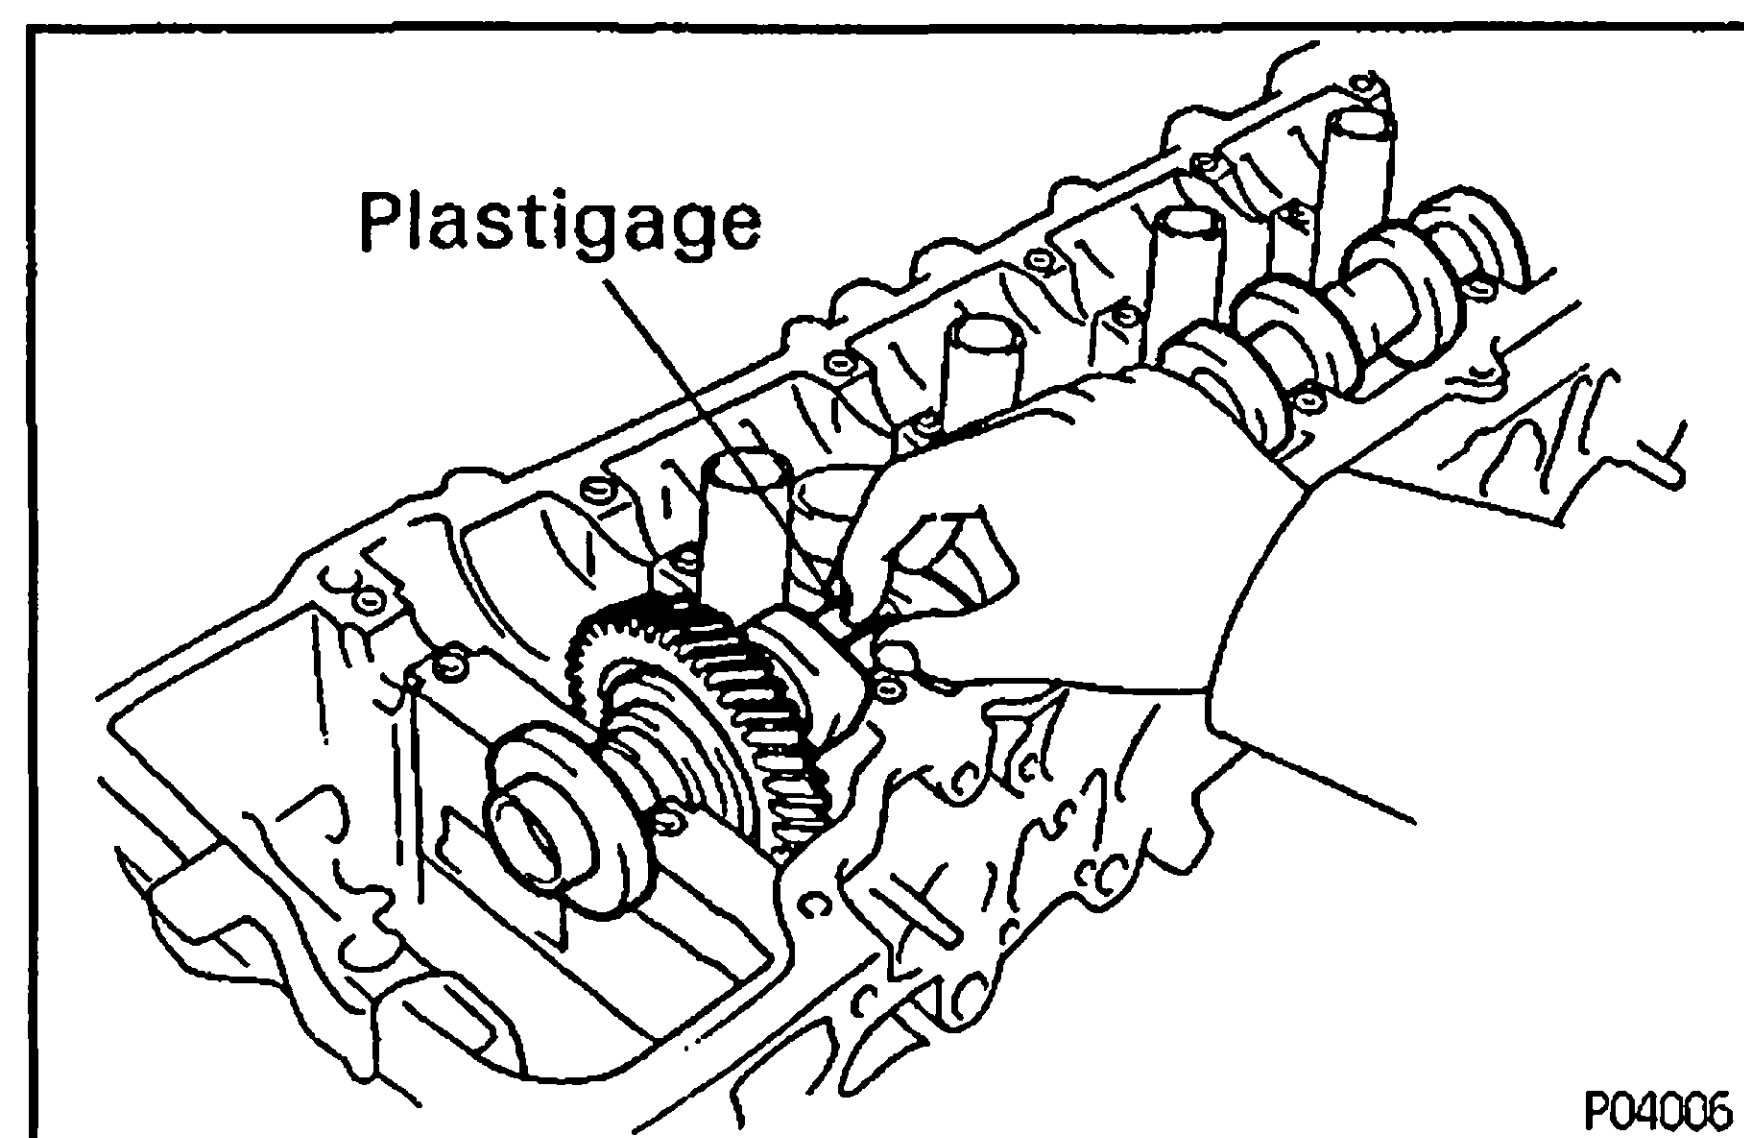
**F. Inspect camshaft journal oil clearance**

- (a) Clean the bearing caps and camshaft journals.
- (b) Place the camshafts on the cylinder head.
- (c) Lay a strip of Plastigage across each of the camshaft journals.


EG

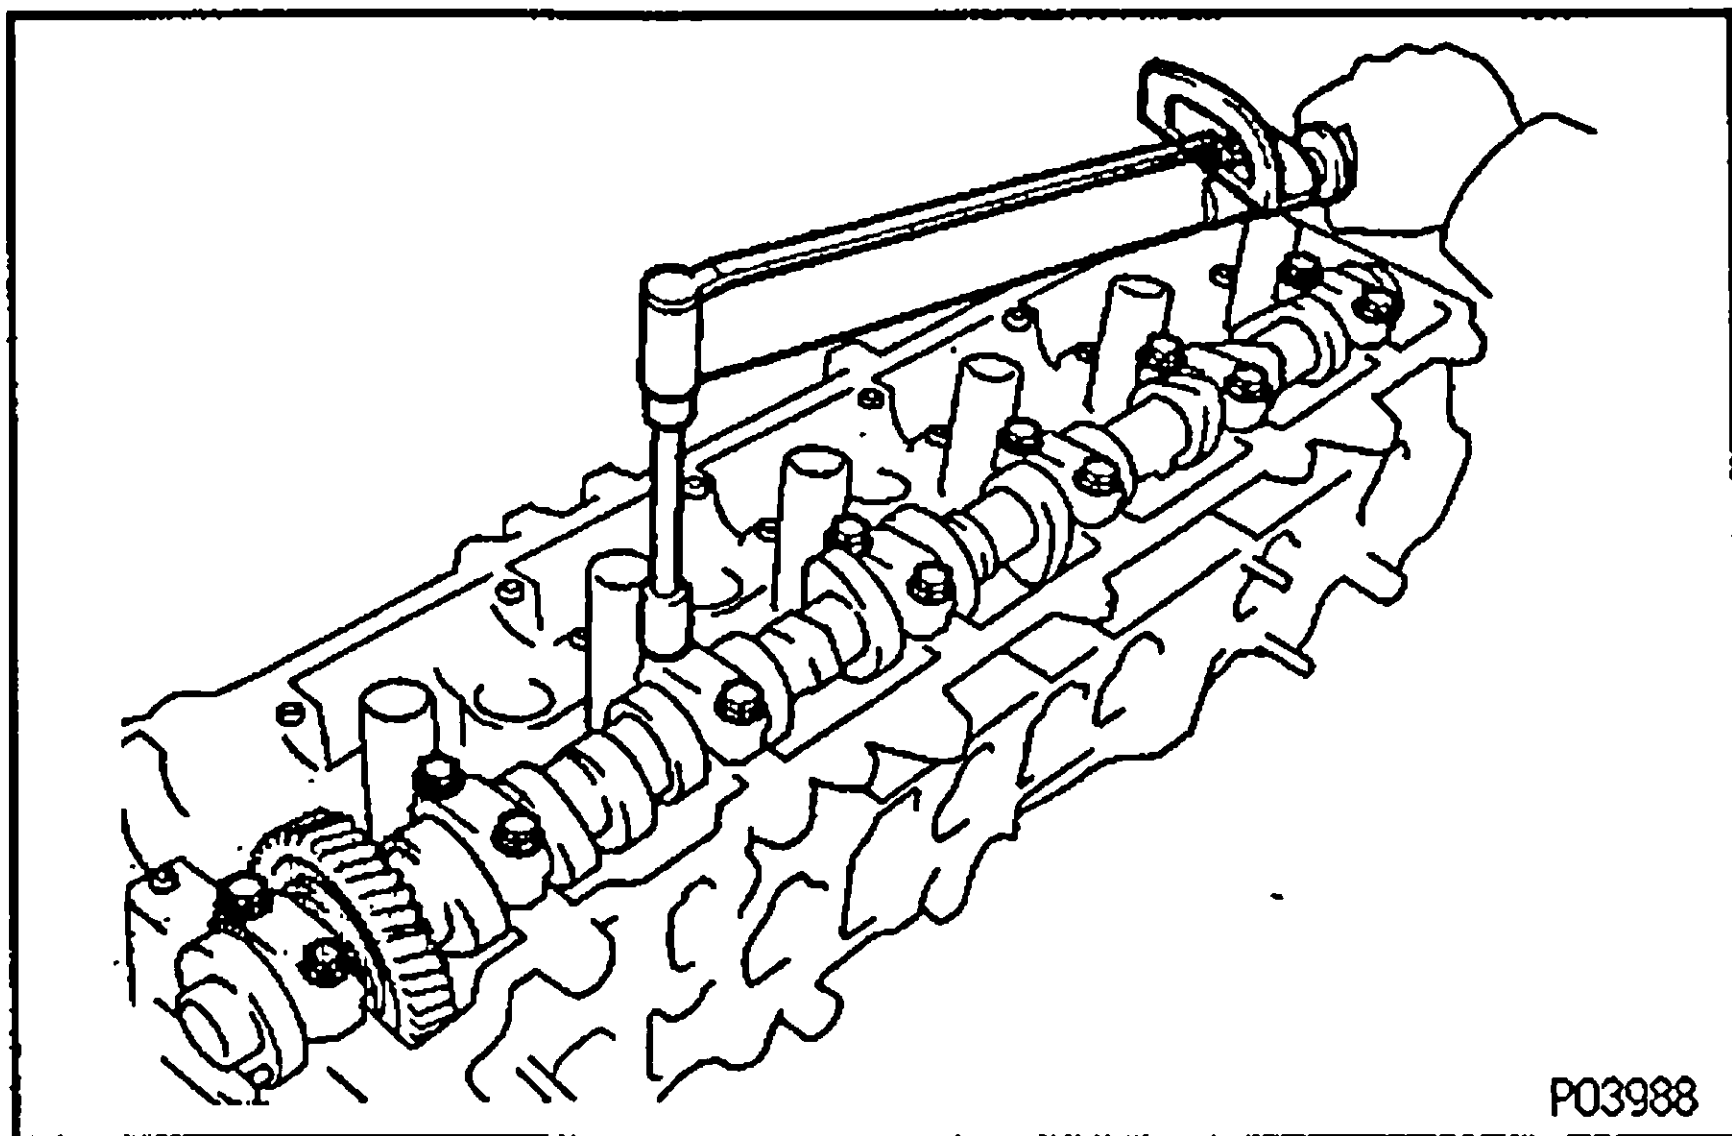


- (d) Install the bearing caps.
 (See step 3 on pages EG—62 to 64)
Torque: 16 N·m (160 kgf·cm, 12 ft·lbf)
NOTICE: Do not turn the camshaft.

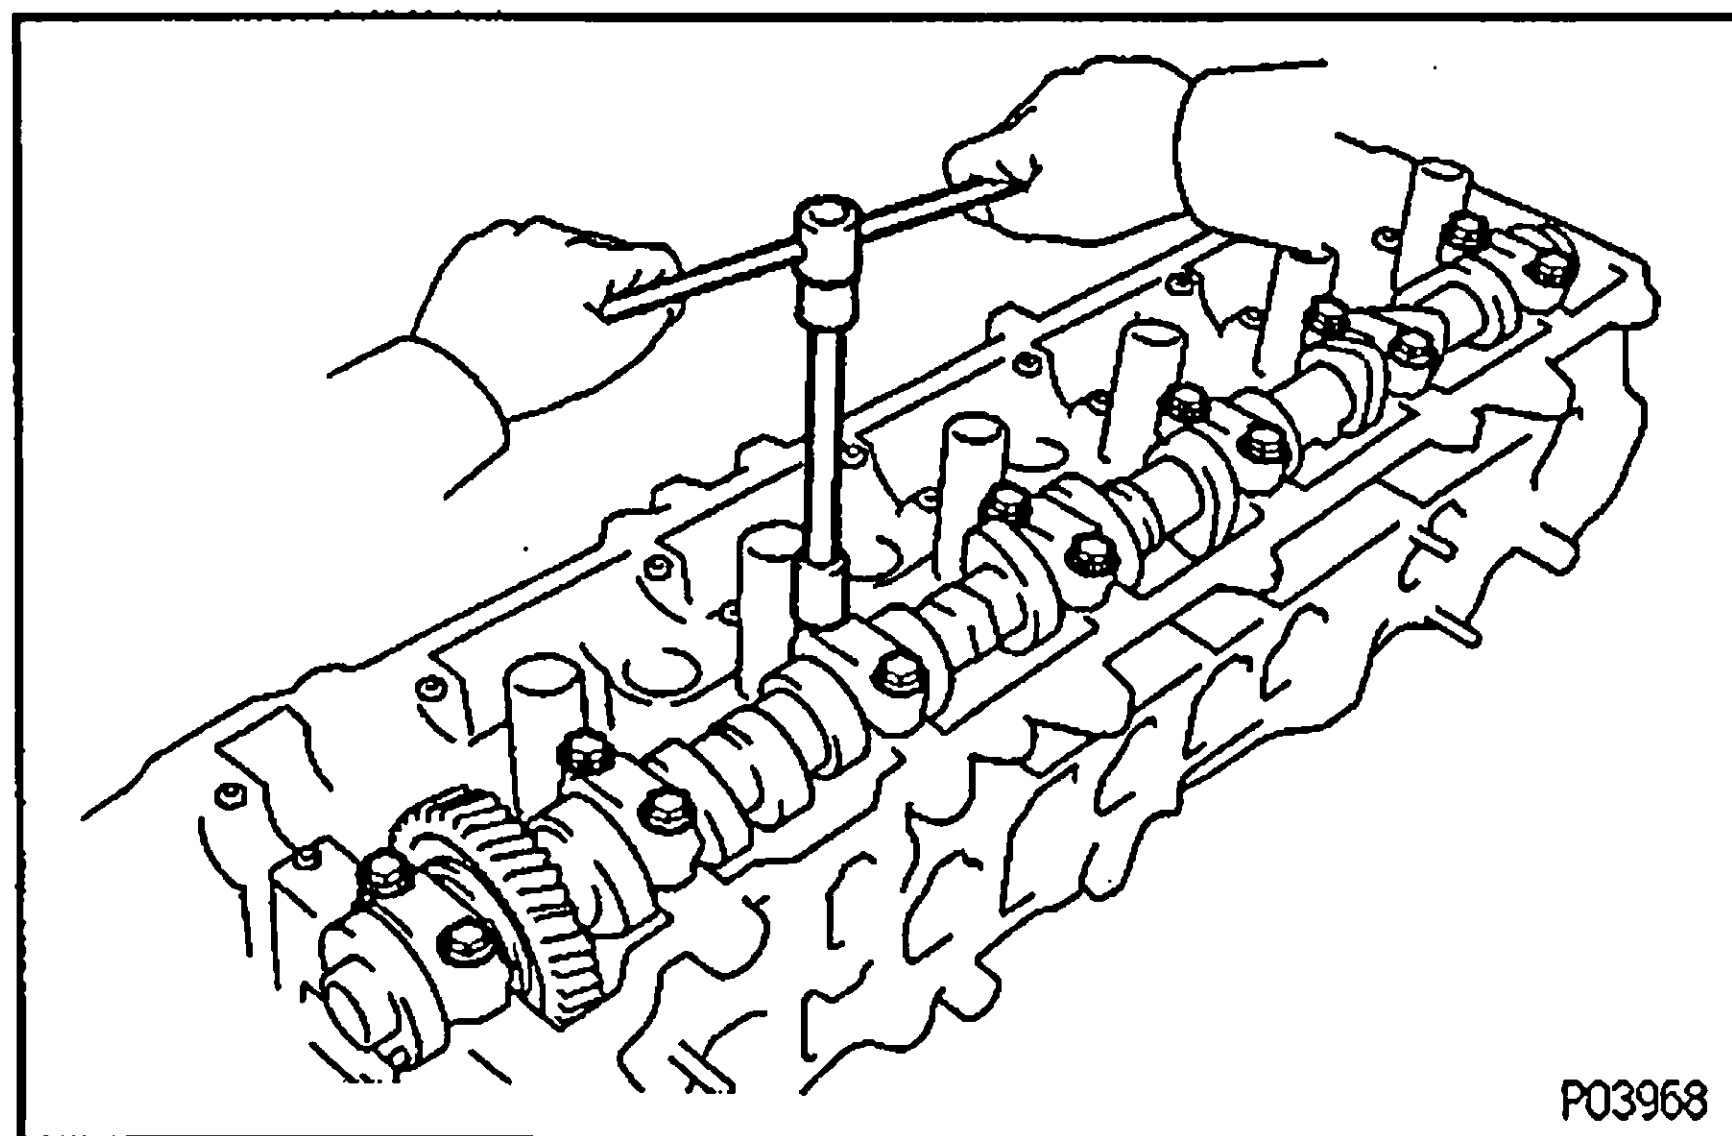


- (e) Remove the bearing caps.

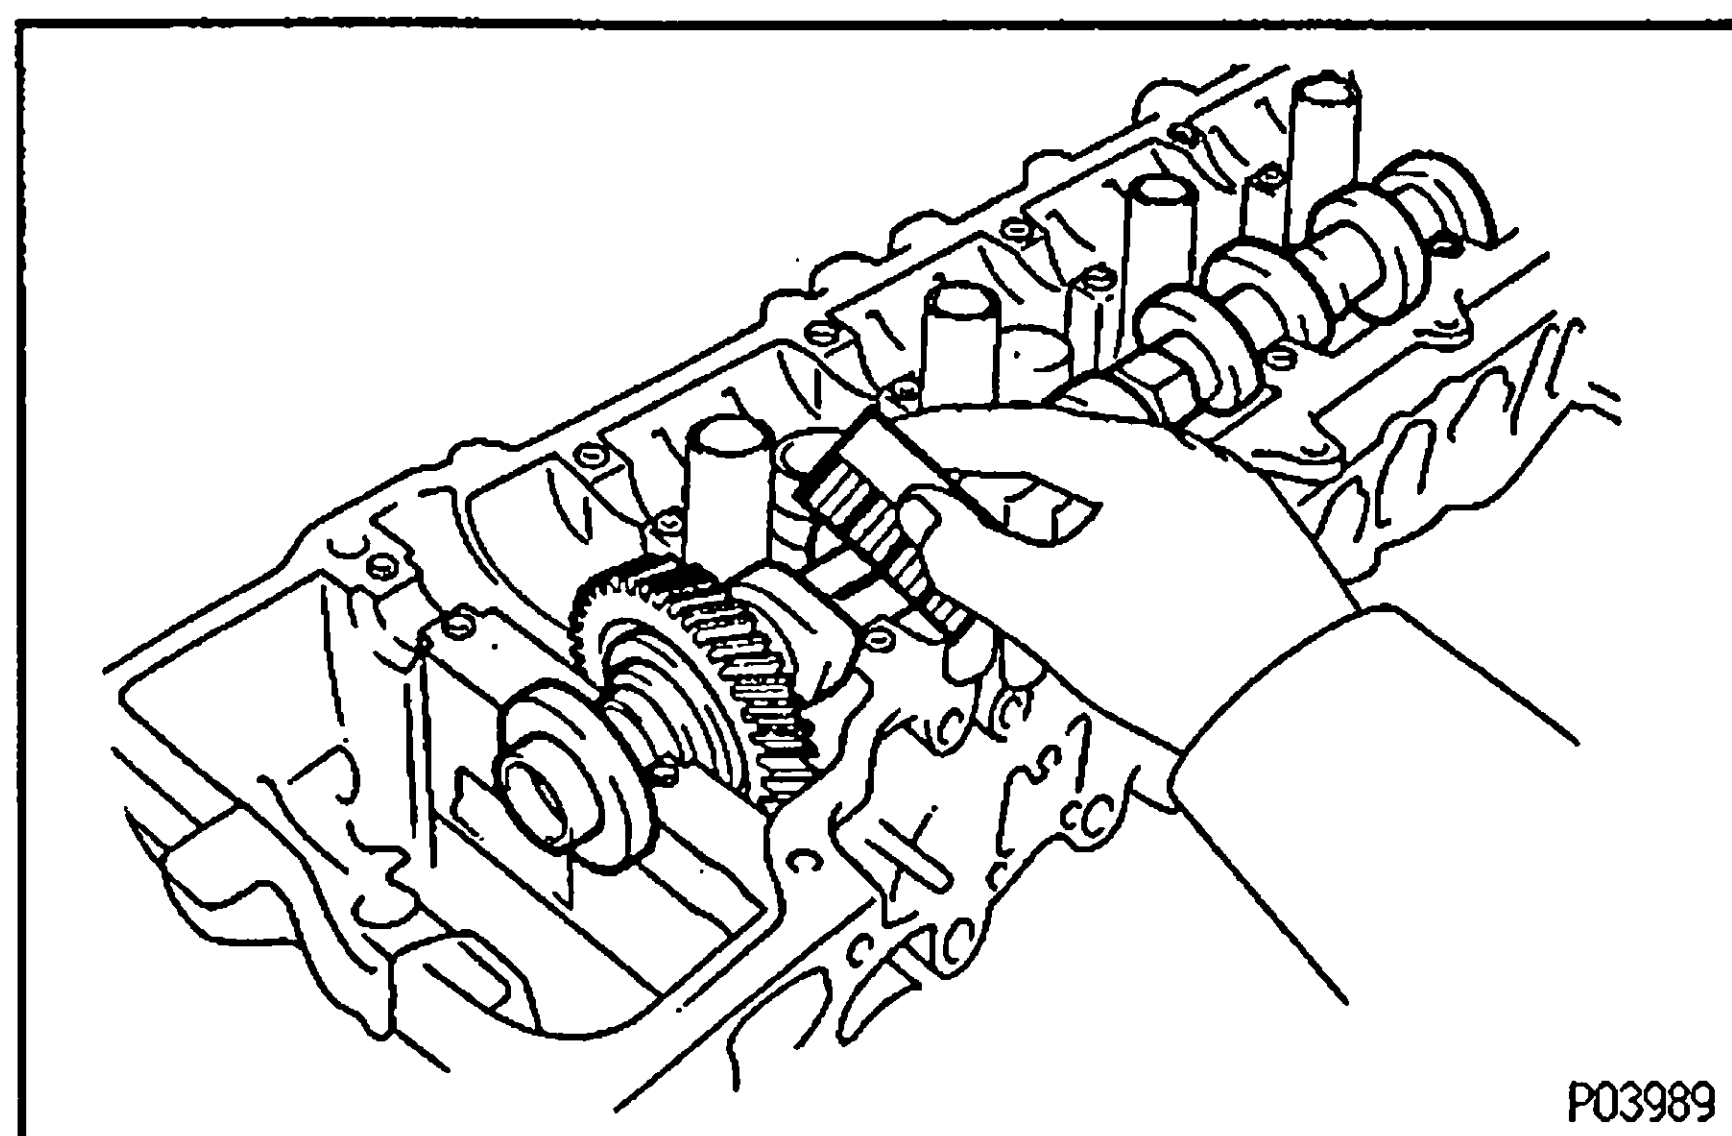

- (f) Measure the Plastigage at its widest point.
Standard oil clearance:
 0.025 — 0.062 mm (0.0010 — 0.0024 in.)
Maximum oil clearance:
 0.10 mm (0.0039 in.)
 If the oil clearance is greater than maximum, replace the camshaft. If necessary, replace the bearing caps and cylinder head as a set.
- (g) Completely remove the Plastigage.

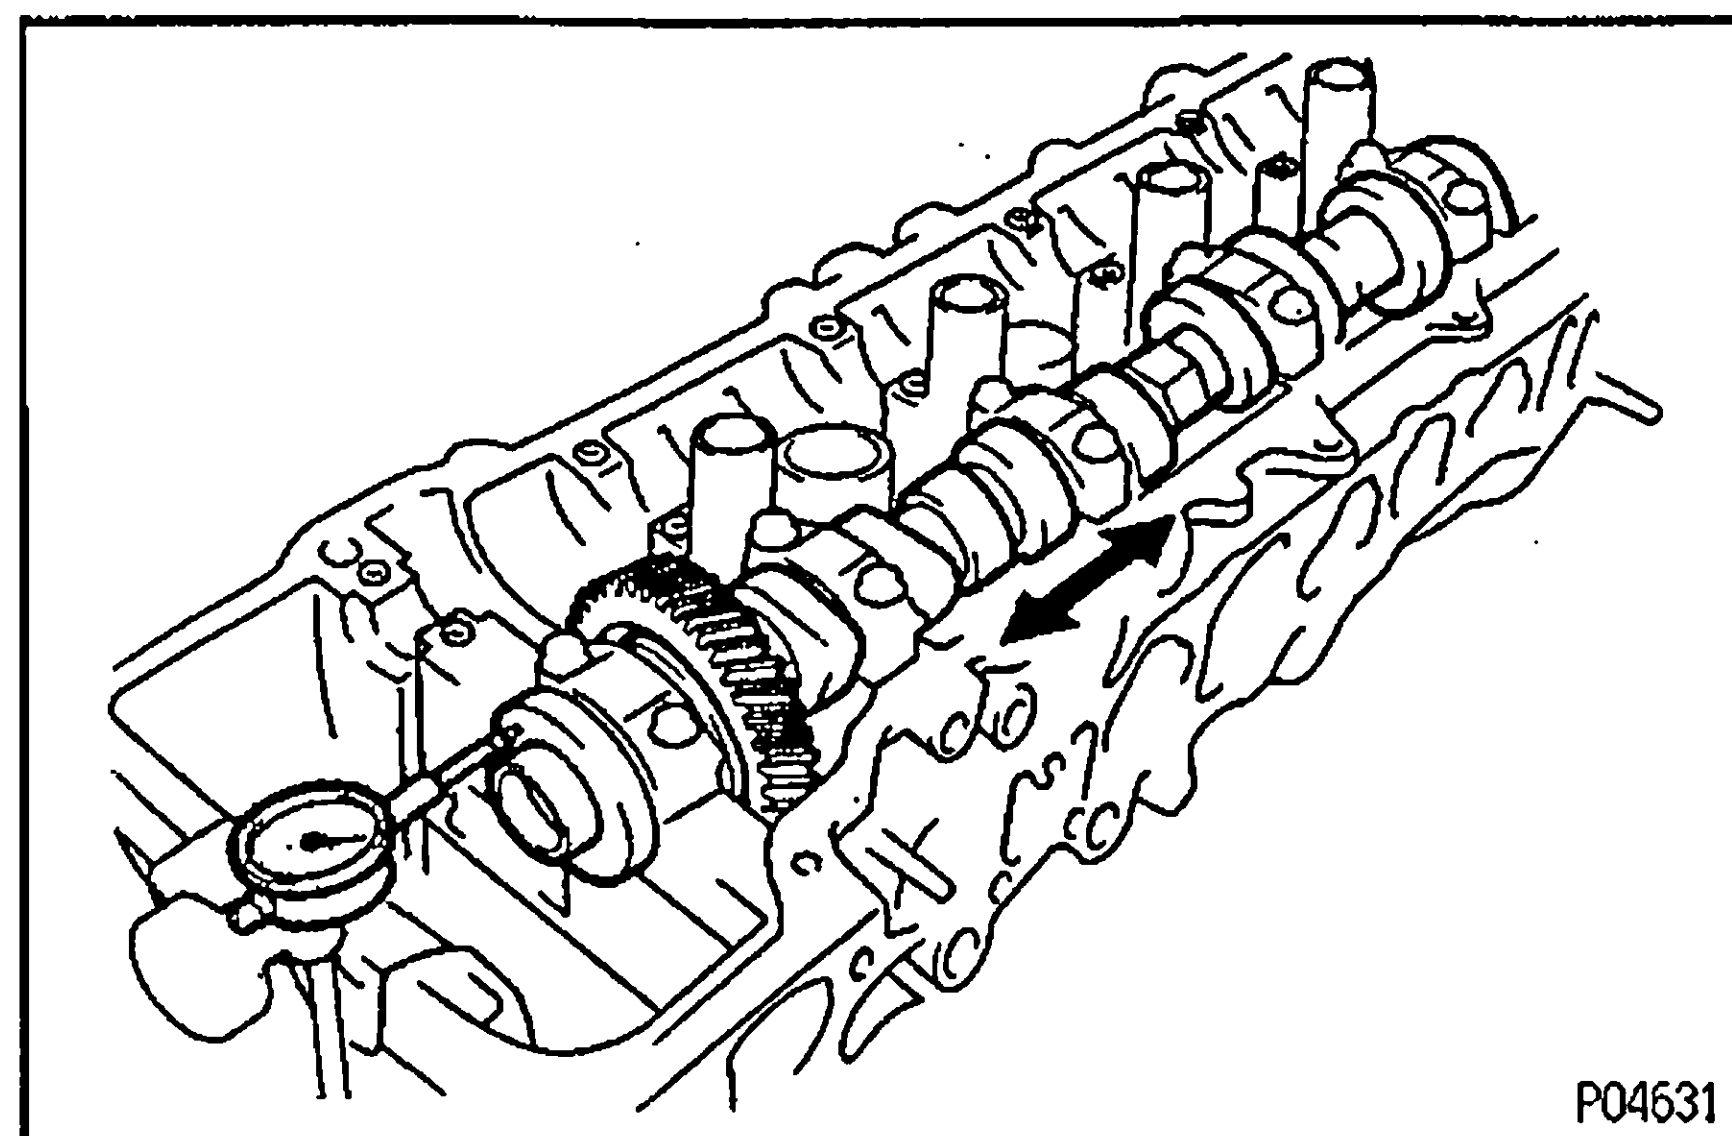

- G. Inspect camshaft thrust clearance**
- (a) Install the camshaft.
 (See step 3 on pages EG—62 to 64)
- (b) Using a dial indicator, measure the thrust clearance while moving the camshaft back and forth.
Standard thrust clearance:
 0.030 — 0.080 mm (0.0012 — 0.0031 in.)
Maximum thrust clearance:
 0.10 mm (0.0039 in.)
 If the thrust clearance is greater than maximum, replace the camshaft. If necessary, replace the bearing caps and cylinder head as a set.

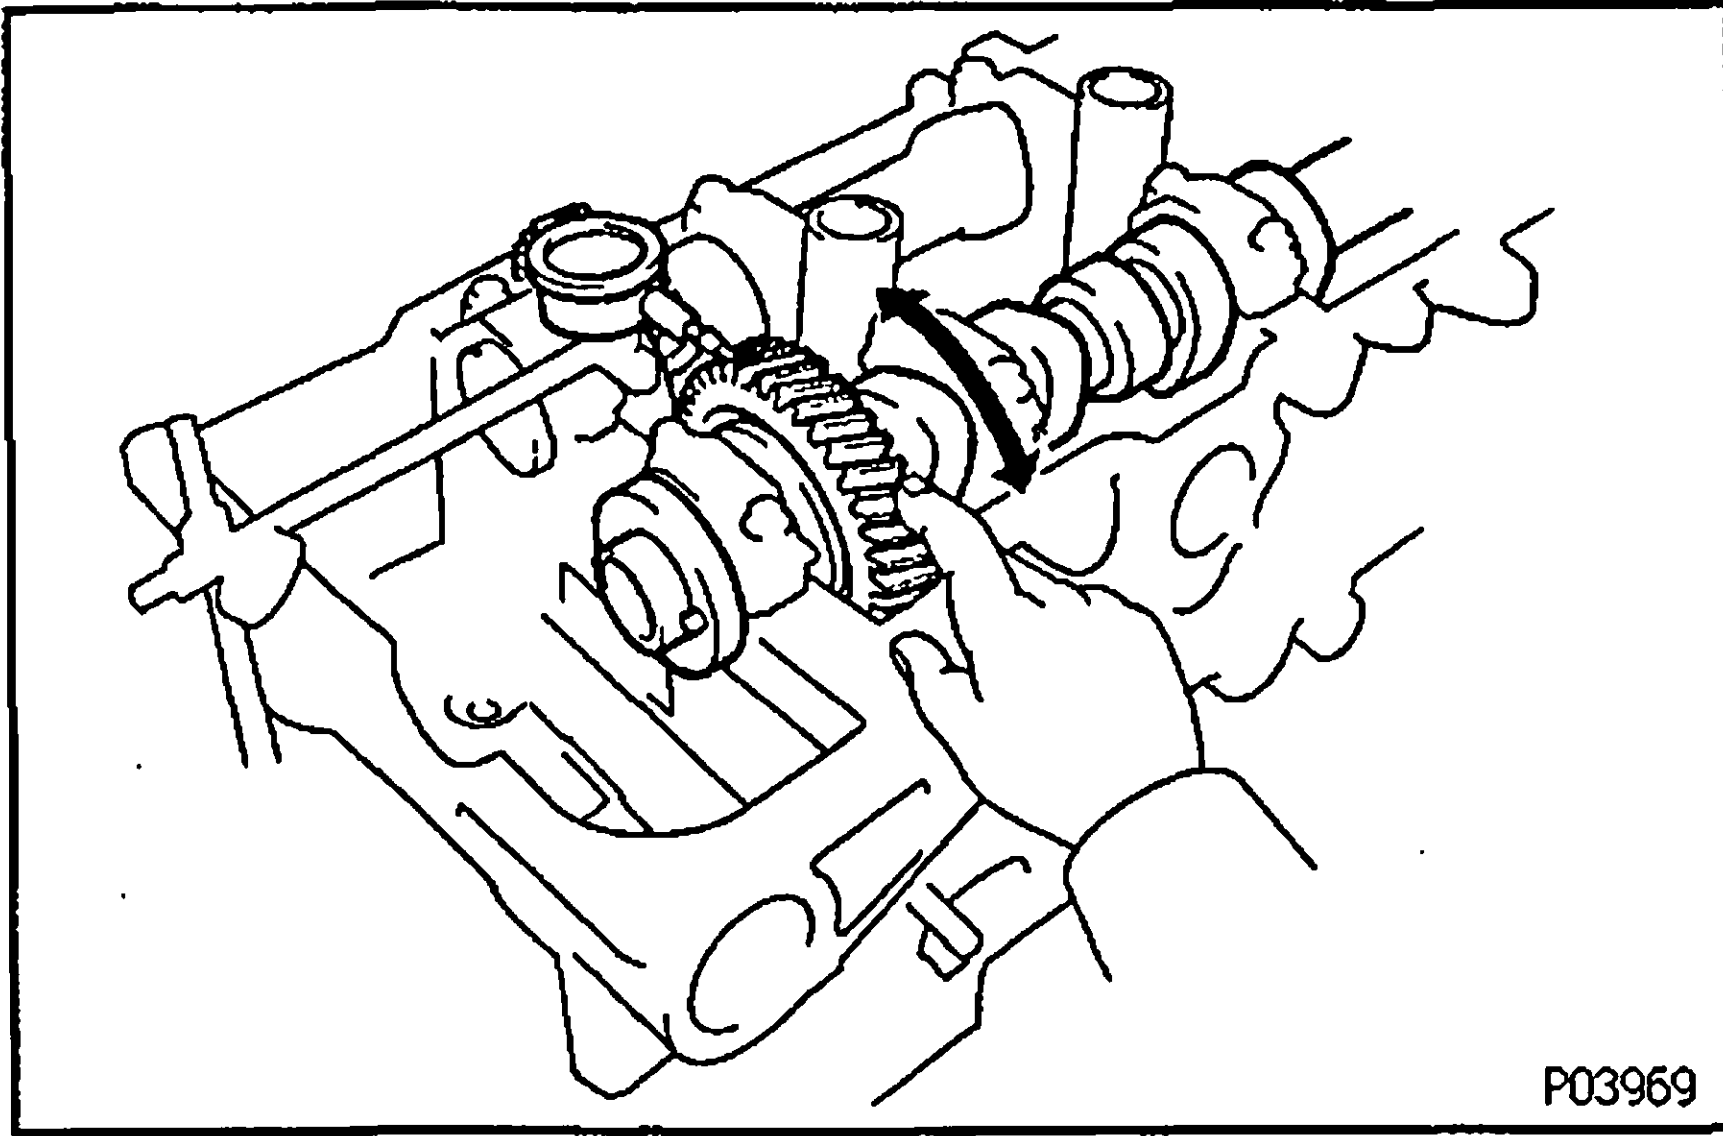

H. Inspect camshaft gear backlash

- (a) Install the camshafts without installing the exhaust cam sub—gear.

(See step 3 on pages EG—62 to 64)

- (b) Using a dial indicator, measure the backlash.

Standard backlash:


0.020 — 0.200 mm (0.0008 — 0.0079 in.)

Maximum backlash:

0.30 mm (0.0188 in.)

If the backlash is greater than maximum, replace the camshafts.

EG

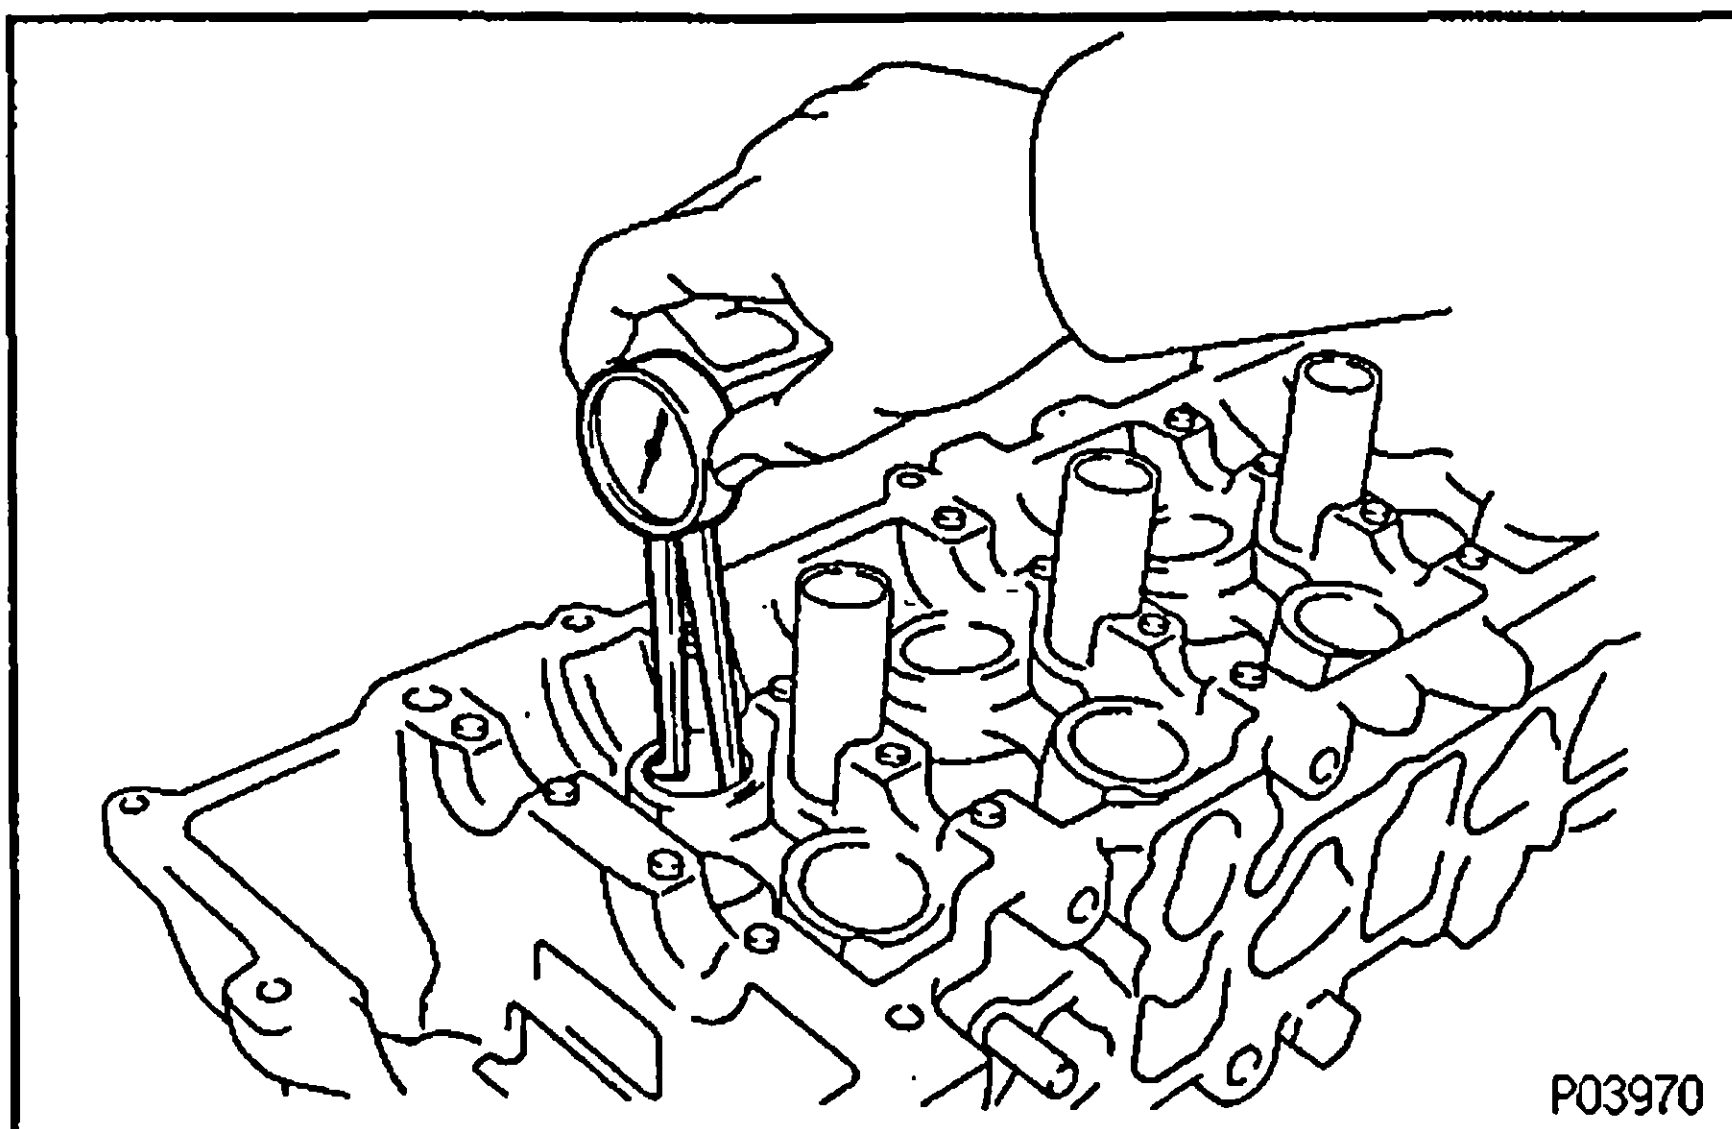


11. INSPECT VALVE LIFTERS AND LIFTER BORES

- (a) Using a caliper gauge, measure the lifter bore diameter of the cylinder head.

Lifter bore diameter:

34.000 — 34.021 mm (1.3386 — 1.3394 in.)

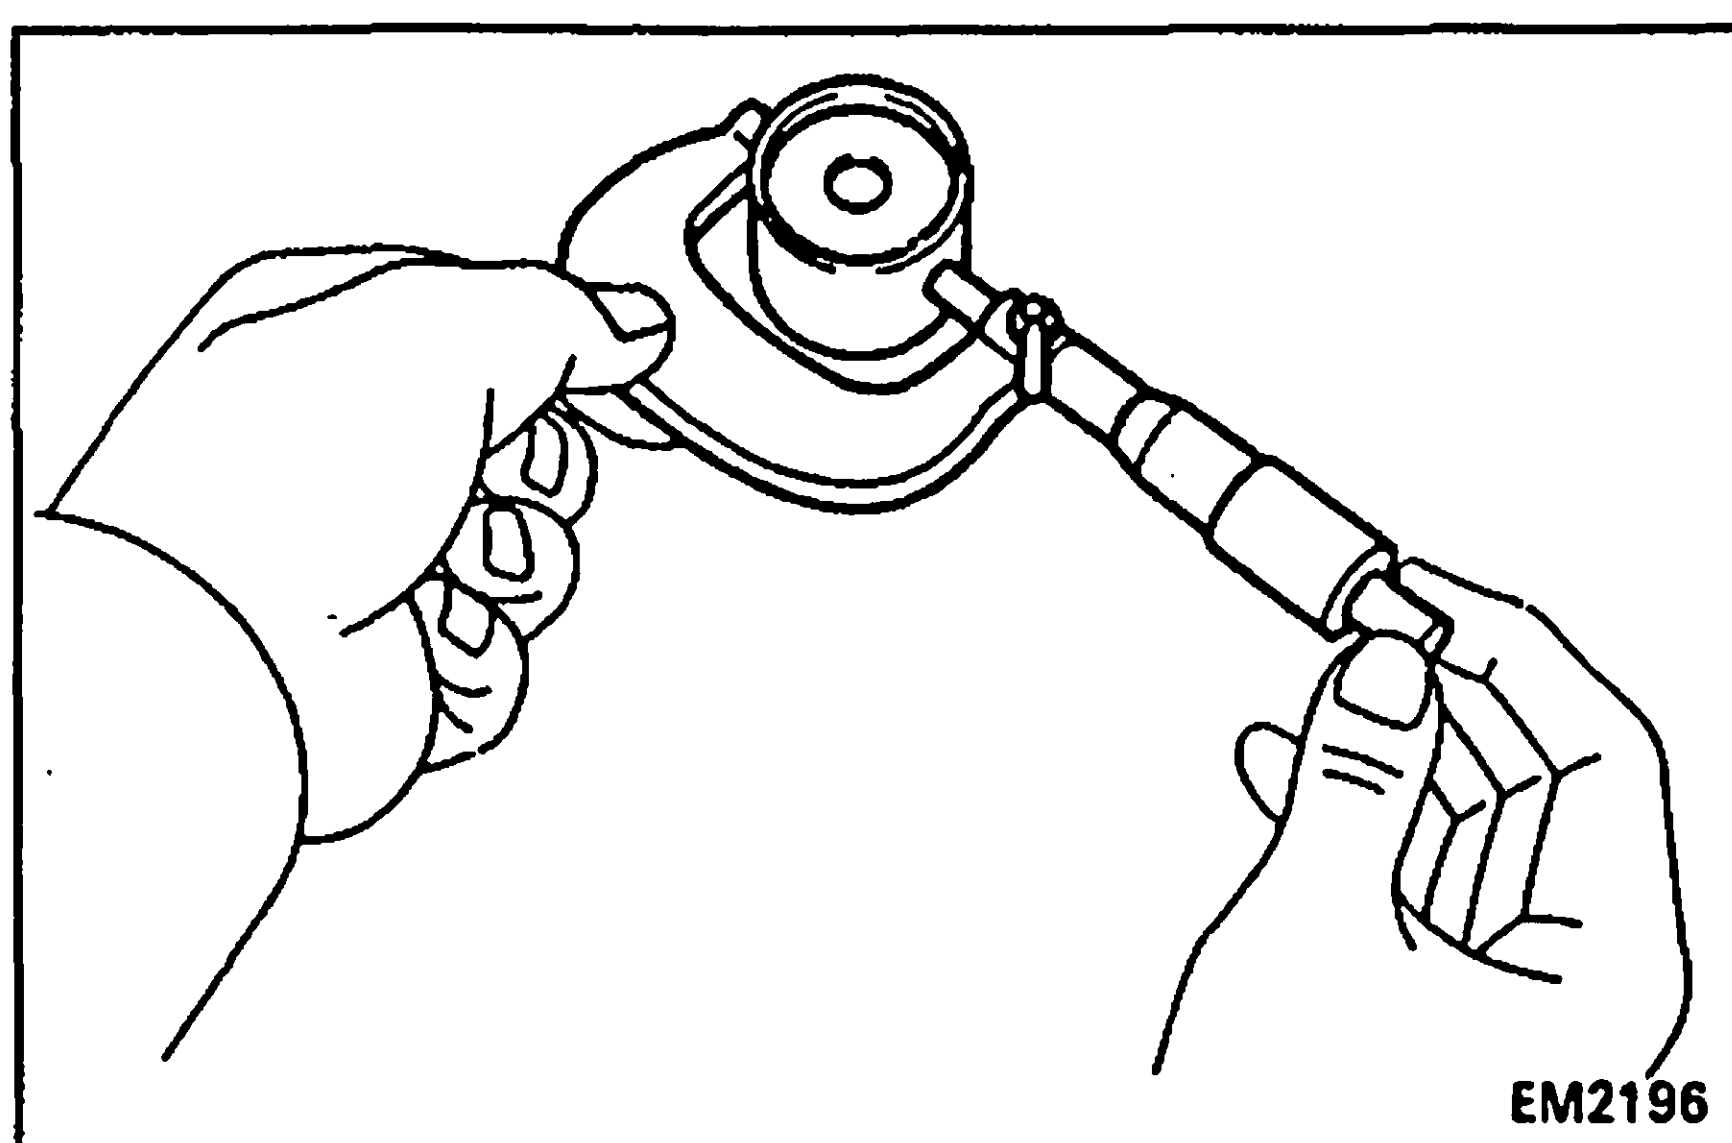

- (b) Using a micrometer, measure the lifter diameter.

Lifter diameter:

33.966 — 33.976 mm (1.3372 — 1.3376 in.)

- (c) Subtract the lifter diameter measurement from the lifter bore diameter measurement.

Standard oil clearance:


0.024 — 0.055 mm (0.0009 — 0.0022 in.)

Maximum oil clearance:

0.07 mm (0.0028 in.)

If the oil clearance is greater than maximum, replace the lifter. If necessary, replace the cylinder head.

EG

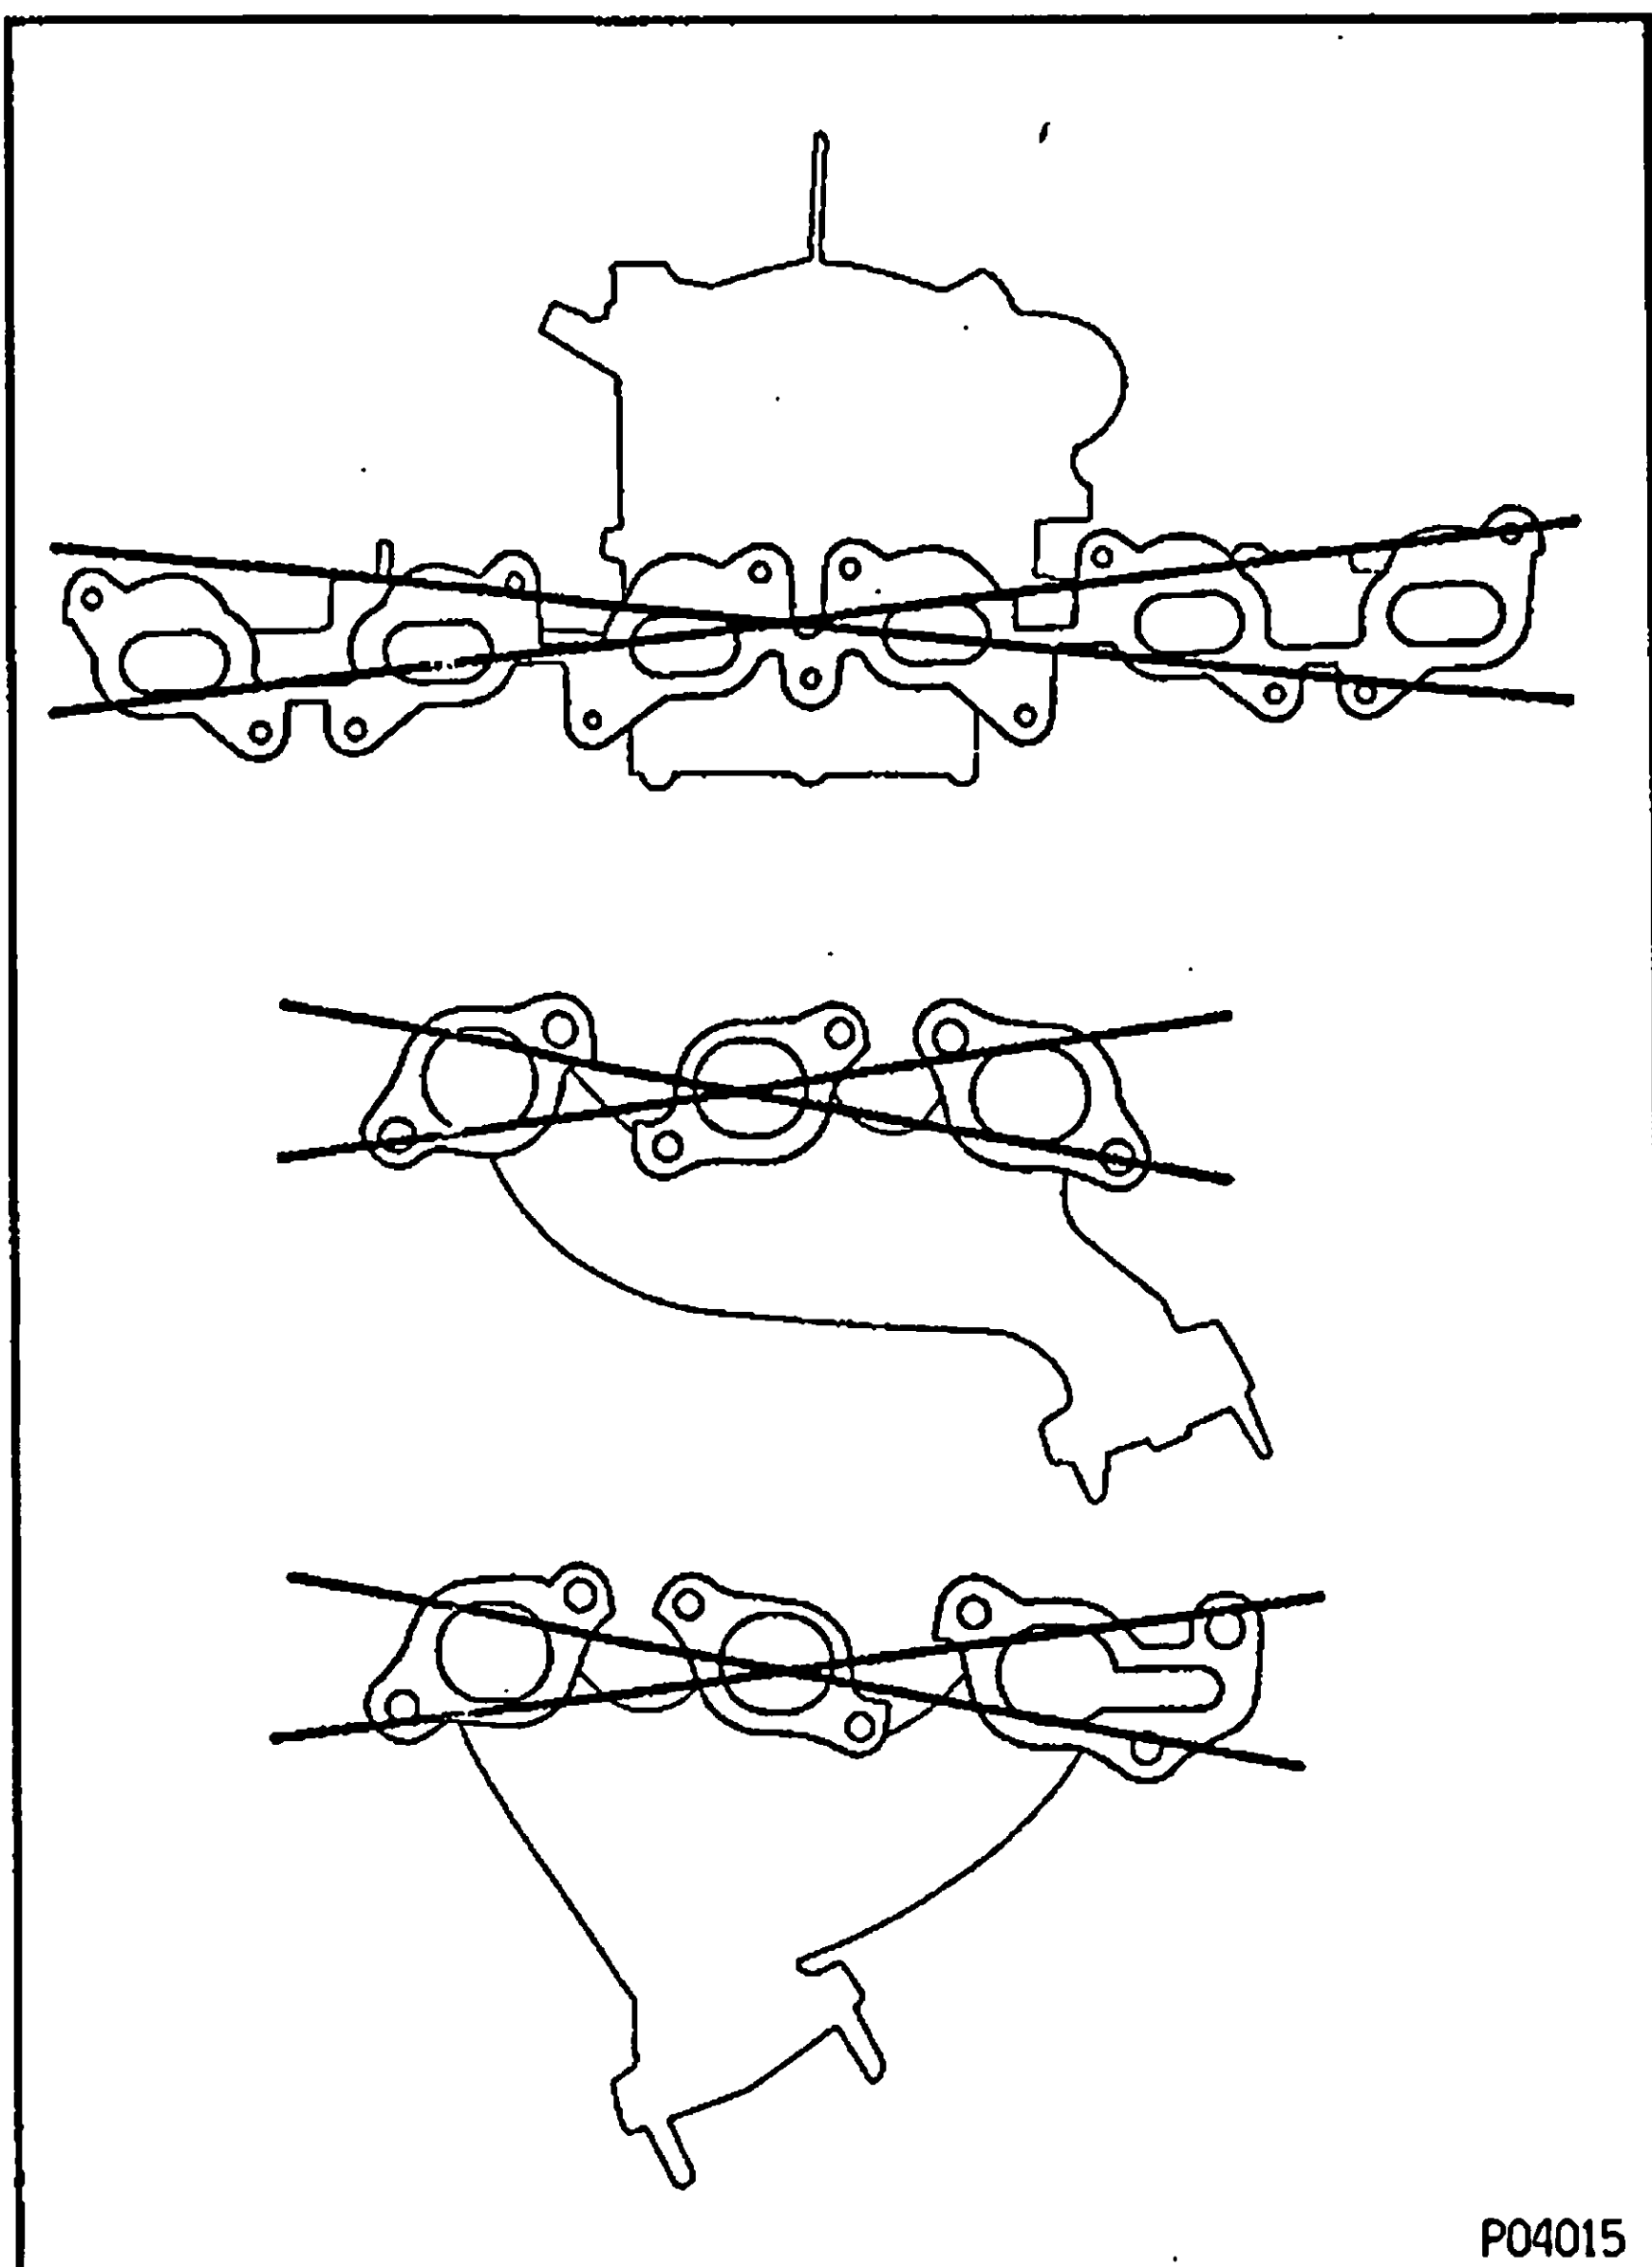
**12. INSPECT MANIFOLDS**

Using precision straight edge and feeler gauge, measure the surface contacting the cylinder head for warpage.


Maximum warpage:

0.30 mm (0.0118 in.)


If warpage is greater than maximum, replace the manifold.

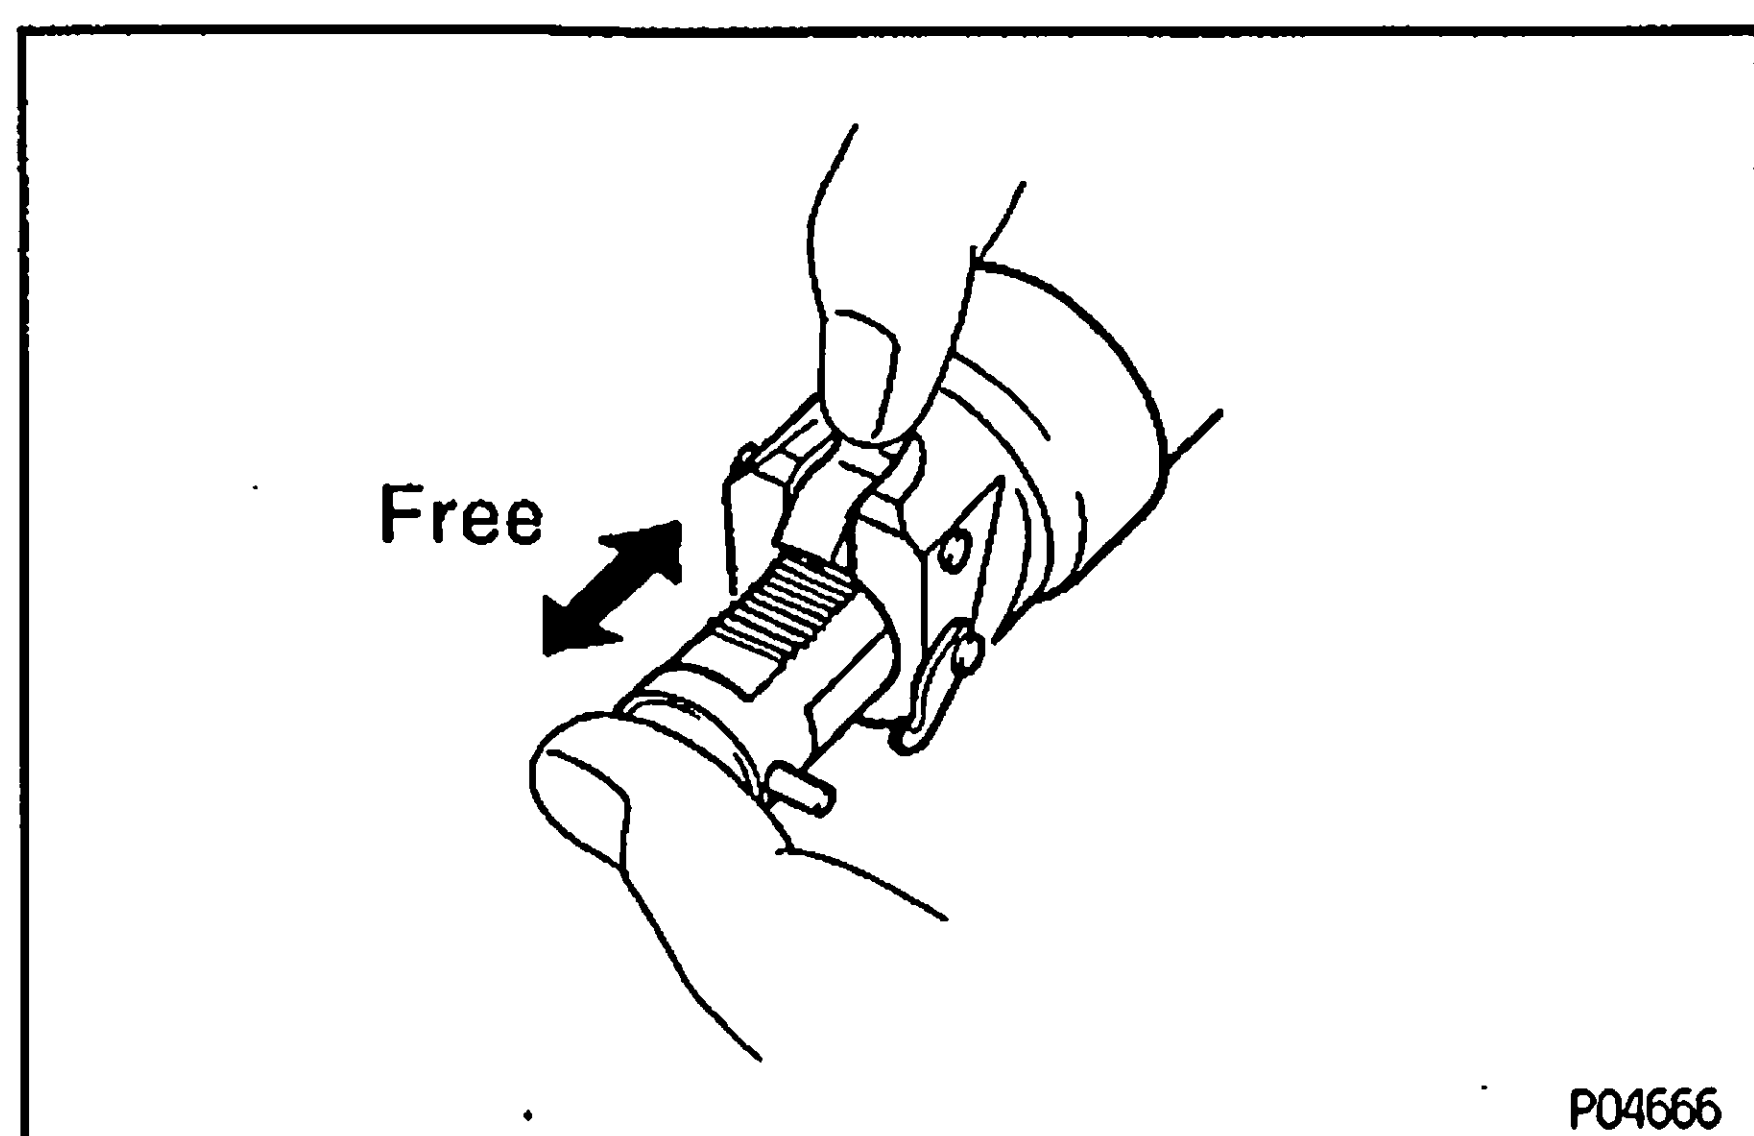**13. INSPECT CHAIN TENSIONER**


- (a) Check that the plunger moves smoothly when the ratchet pawl is raised with your finger.

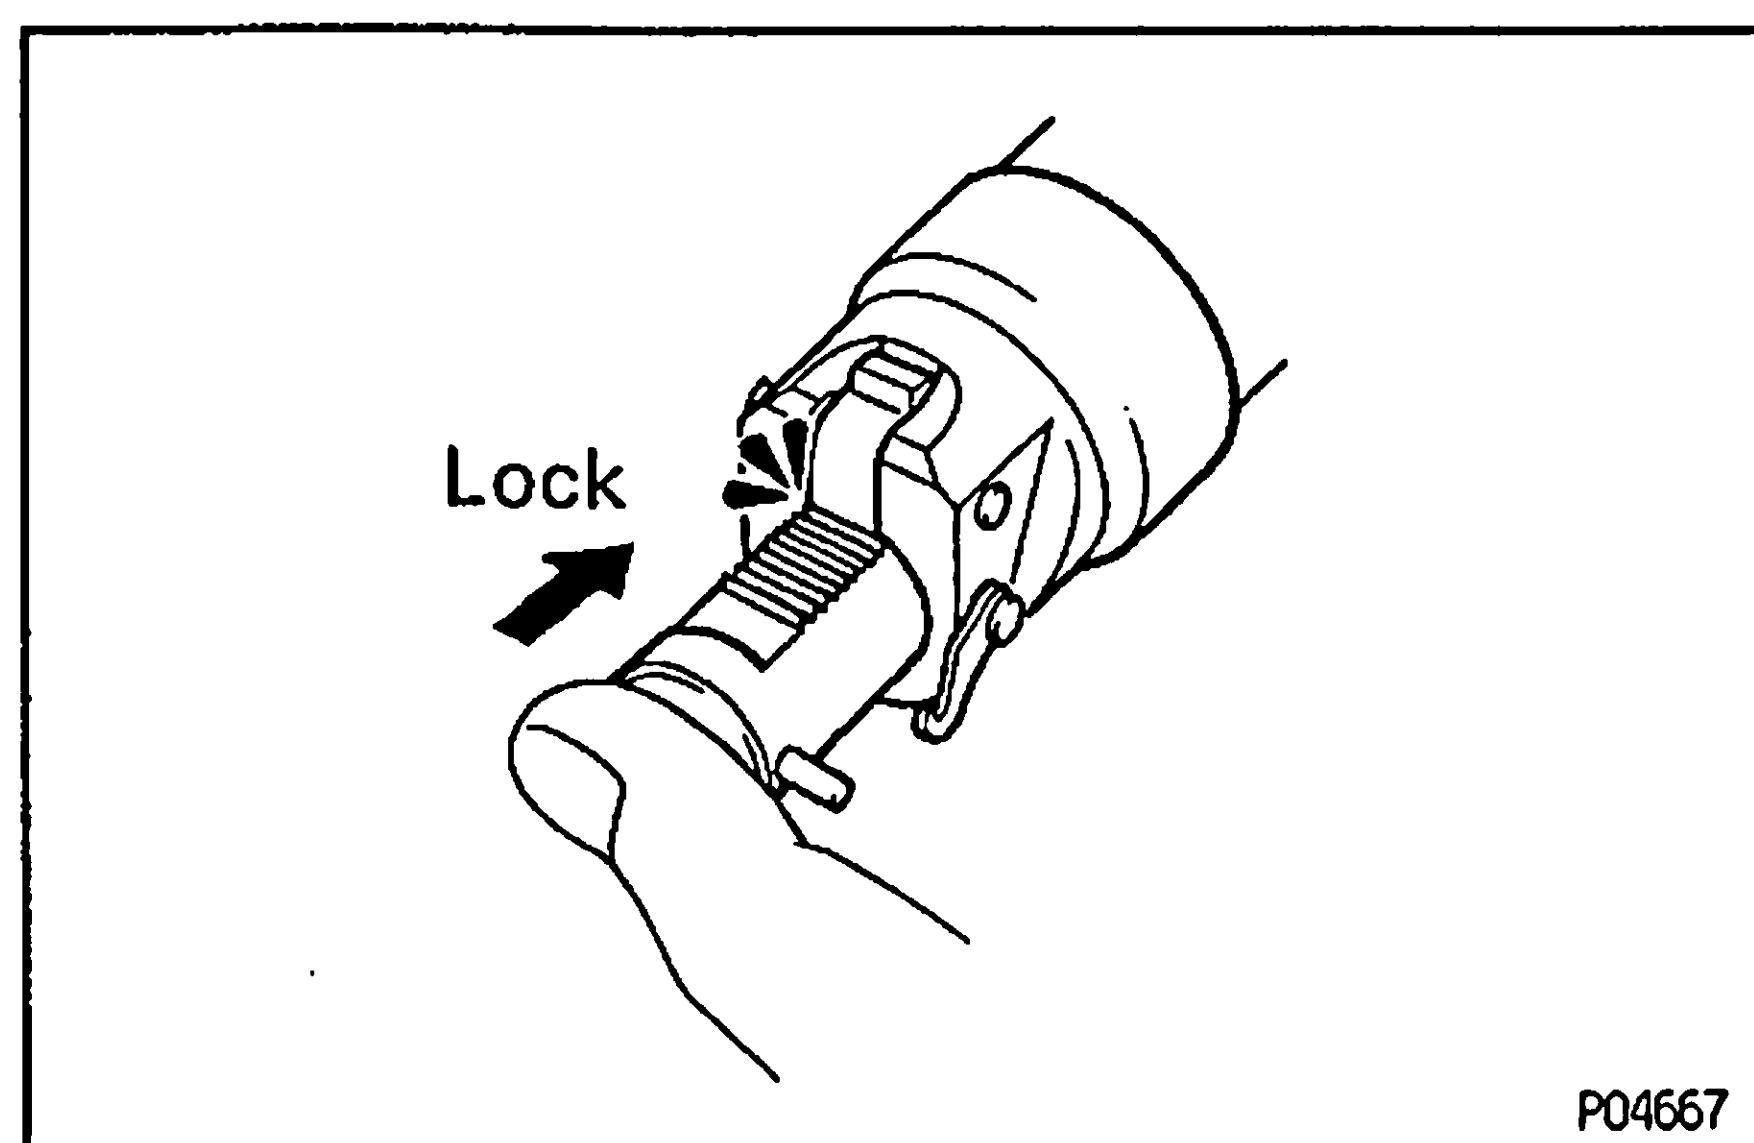

- (b) Released the ratchet pawl and check that the plunger is locked in place by the ratchet pawl and does not move when pushed with your finger.

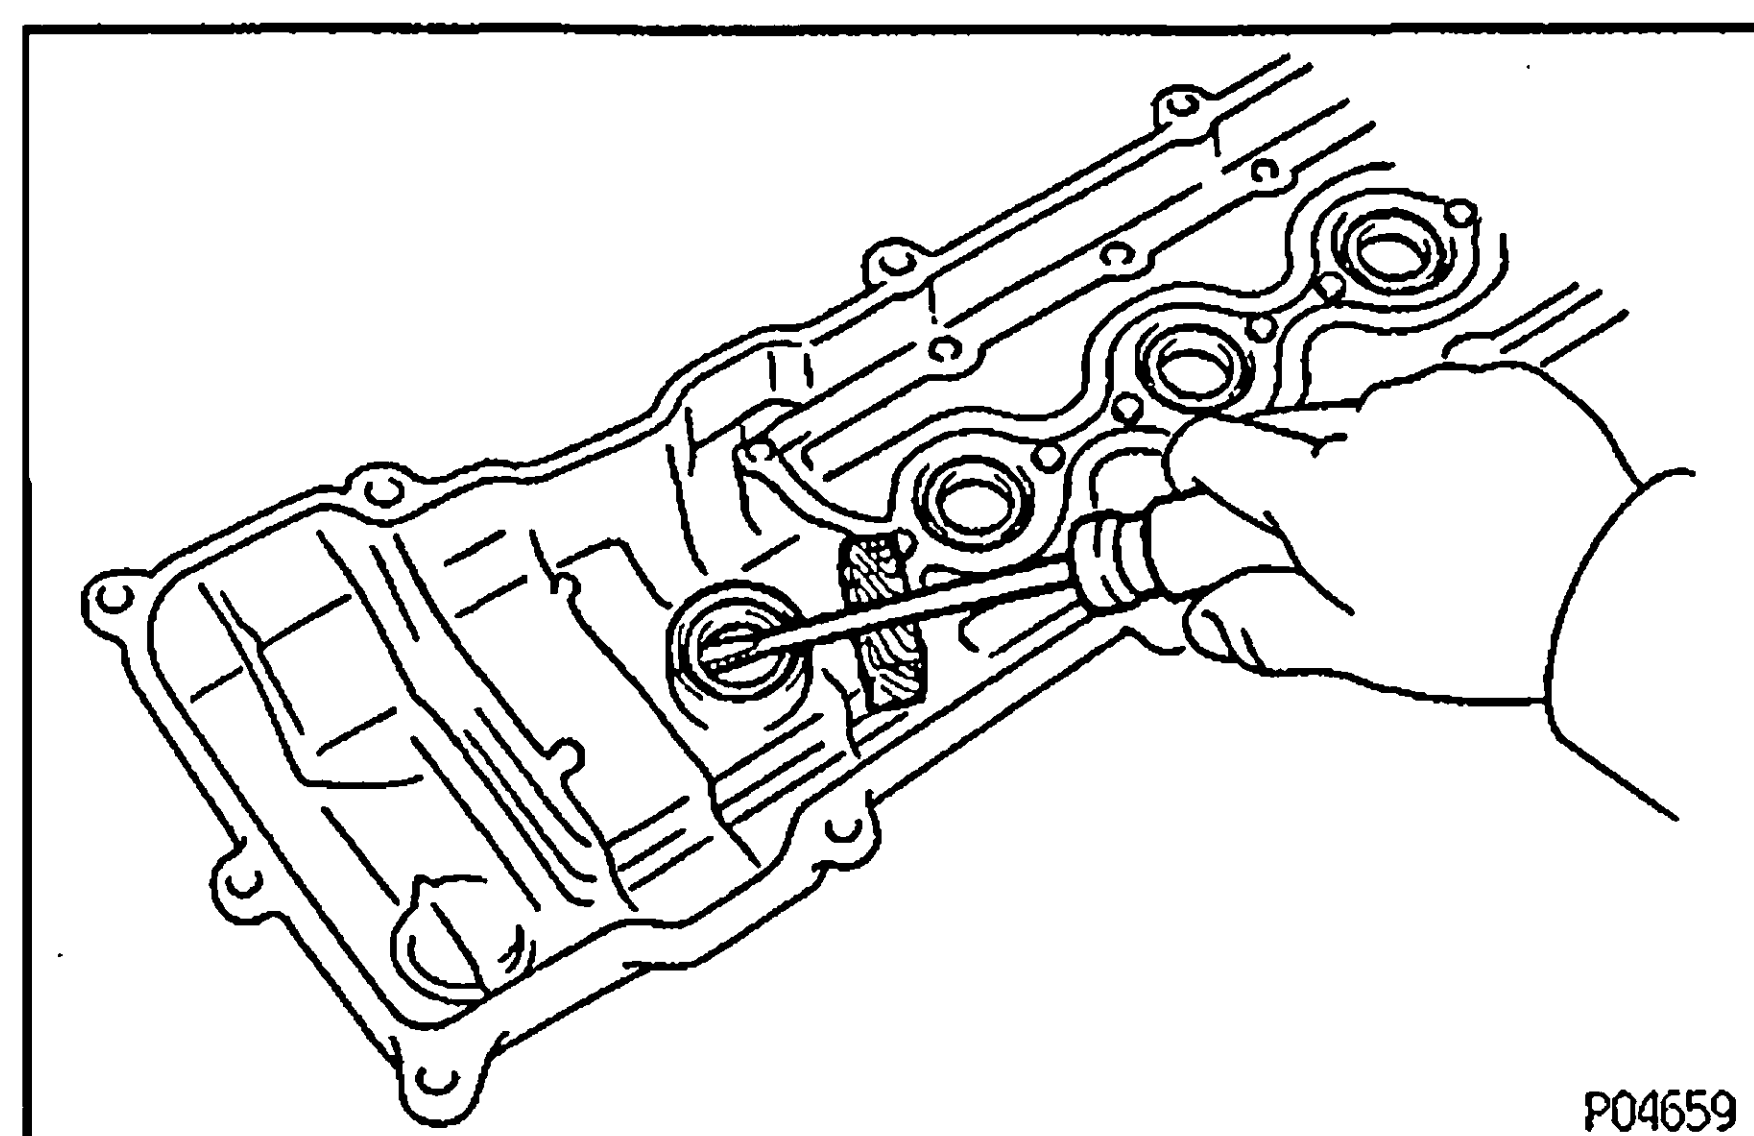
**14. IF NECESSARY, REPLACE SPARK PLUG TUBE GASKETS**

- (a) Using a screwdriver, pry off the tube gasket.

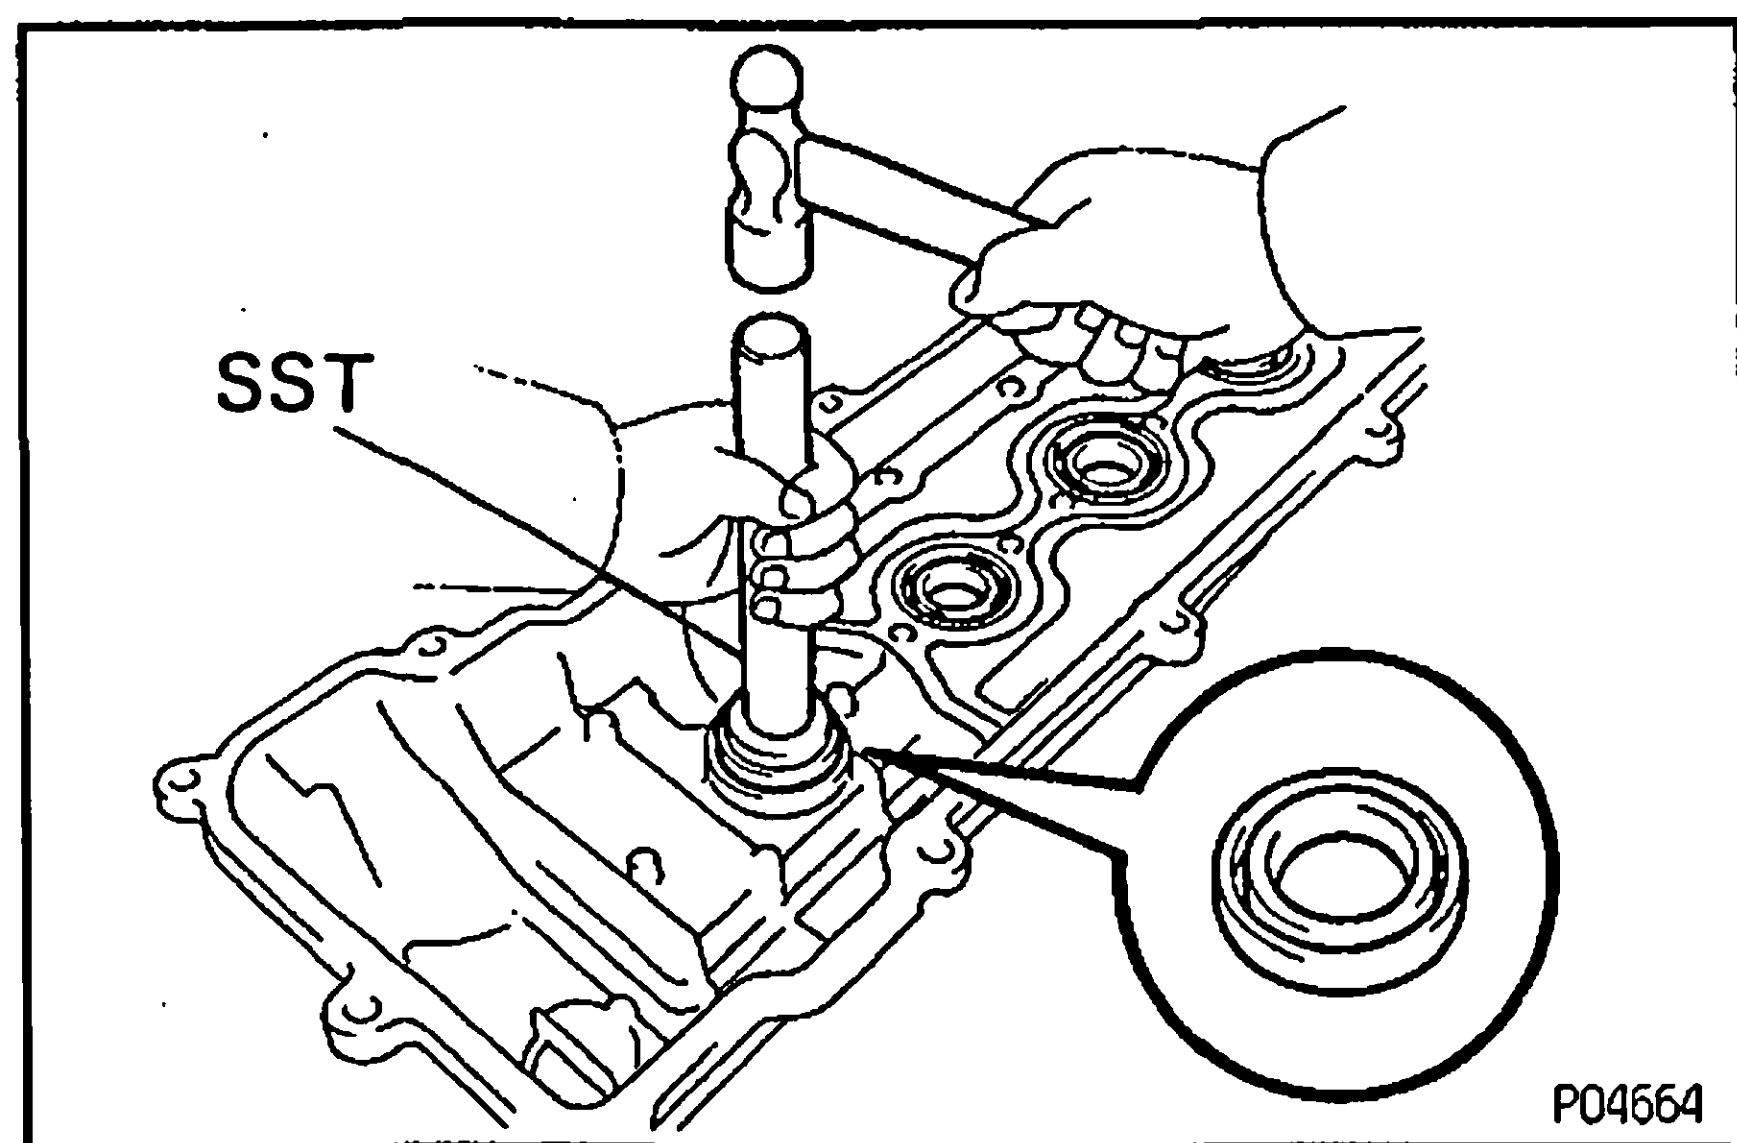

- (b) Using SST and a hammer, tap in a new tube gasket as shown in the illustration.
SST 09608-60012 (09608-04020, 09608-04060)
- (c) Apply a light coat of MP grease to the gasket lip.

EG

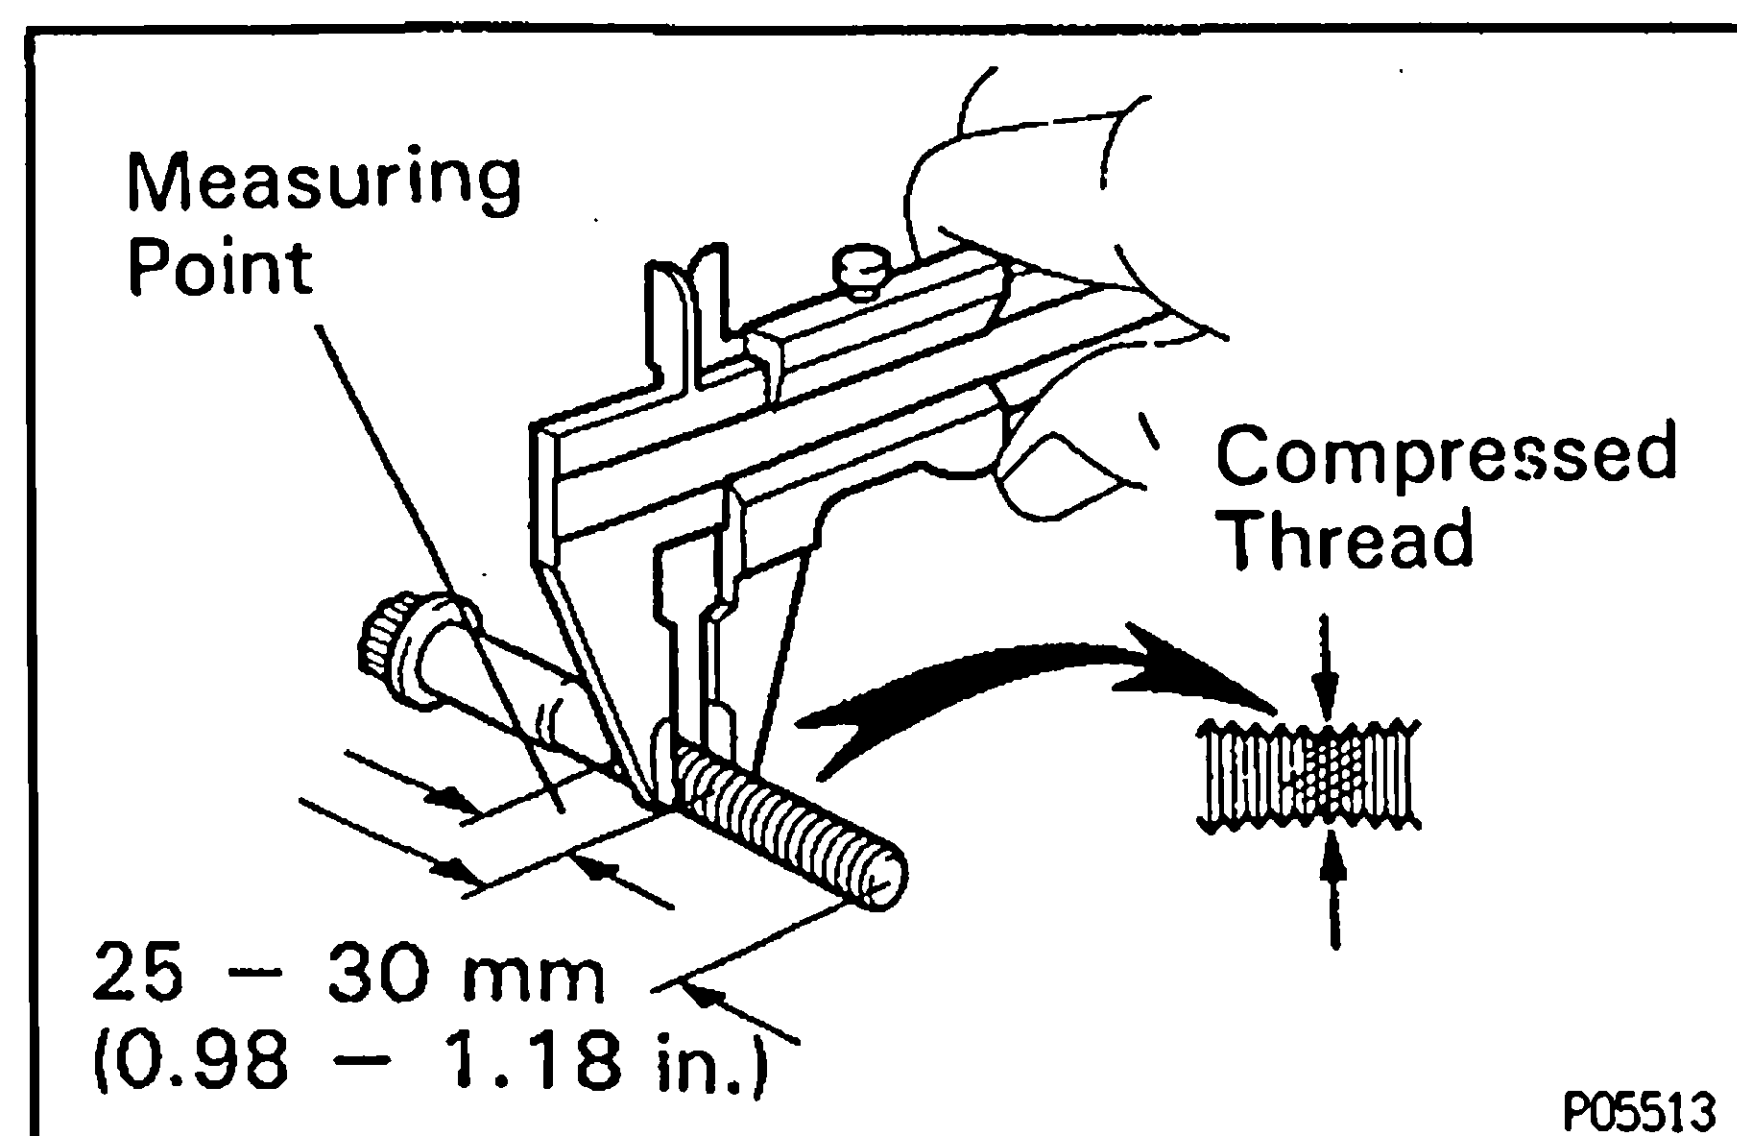

15. INSPECT CYLINDER HEAD BOLTS

Using vernier calipers, measure the thread outside diameter of the bolt.

Standard outside diameter:

10.85 – 11.00 mm (0.4272 – 0.4331 in.)

Minimum outside diameter:

10.6 mm (0.417 in.)

If the diameter is less than minimum, replace the bolt.


EGOVE-01

CYLINDER HEAD ASSEMBLY

(See page EG-32)

HINT:

- Thoroughly clean all parts to be assembled.
- Before installing the parts, apply new engine oil to all sliding and rotating surfaces.
- Replace all gaskets and oil seals with new ones.

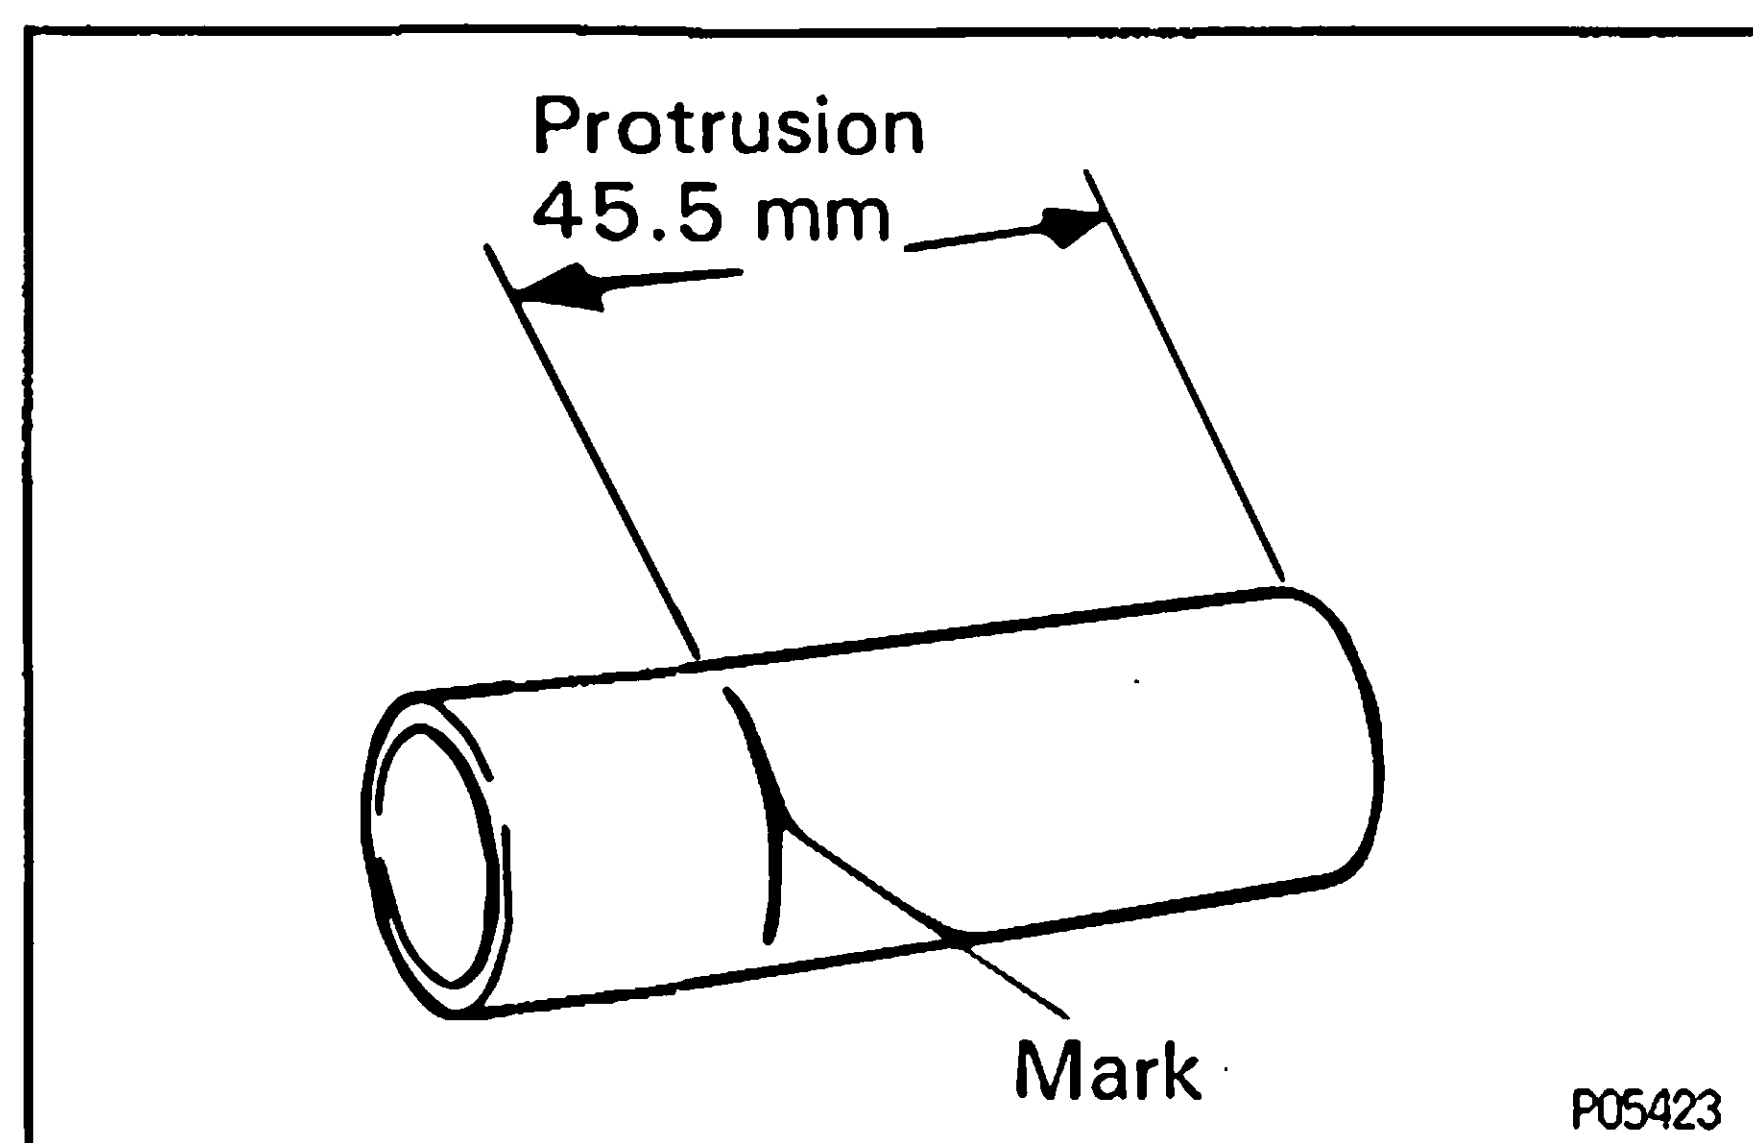


1. INSTALL SPARK PLUG TUBES

HINT: When using a new cylinder head, spark plug tubes must be installed.

- (a) Mark the standard position away from the edge, onto the spark plug tube.

Standard protrusion:

45.5 mm (1.791 in.)

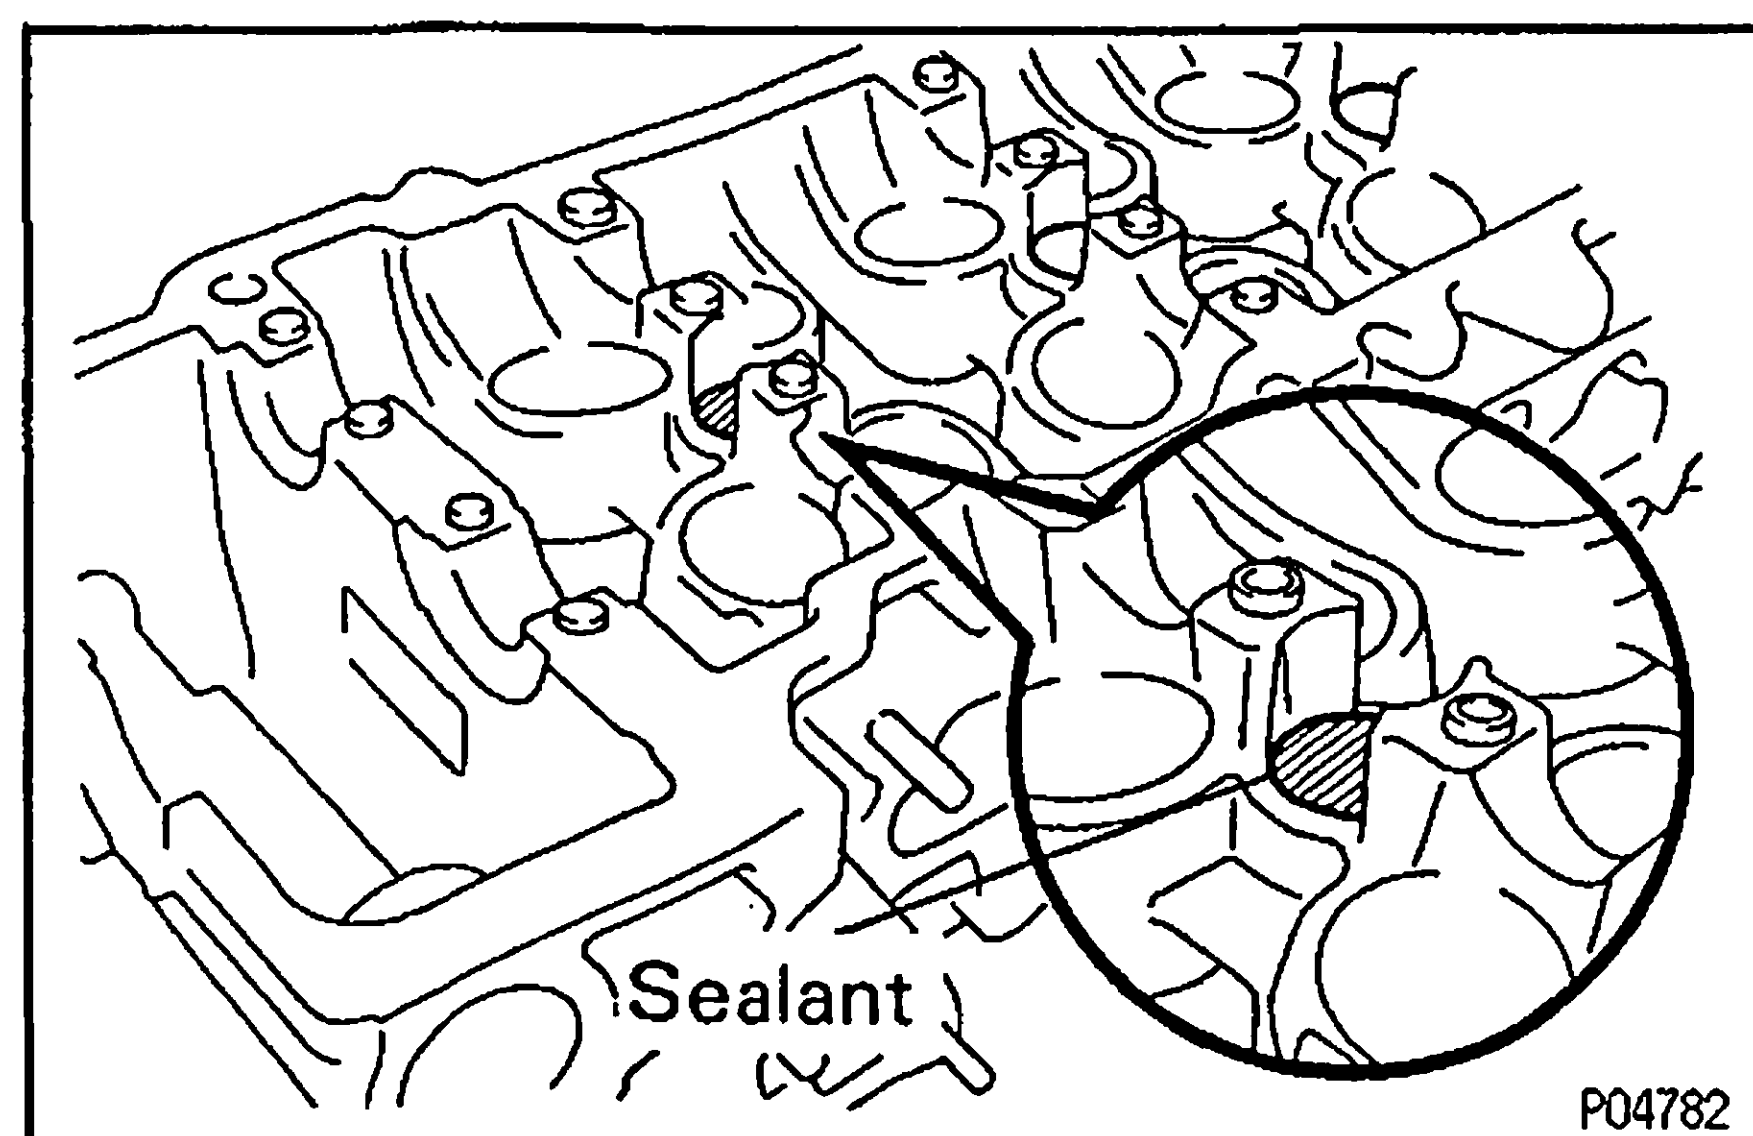


- (b) Apply adhesive to the spark plug tube hole of the cylinder head.

Sealant:


Part No. 08833 – 00070, Adhesive 1324, **THREE BOND 1324** or equivalent

EG

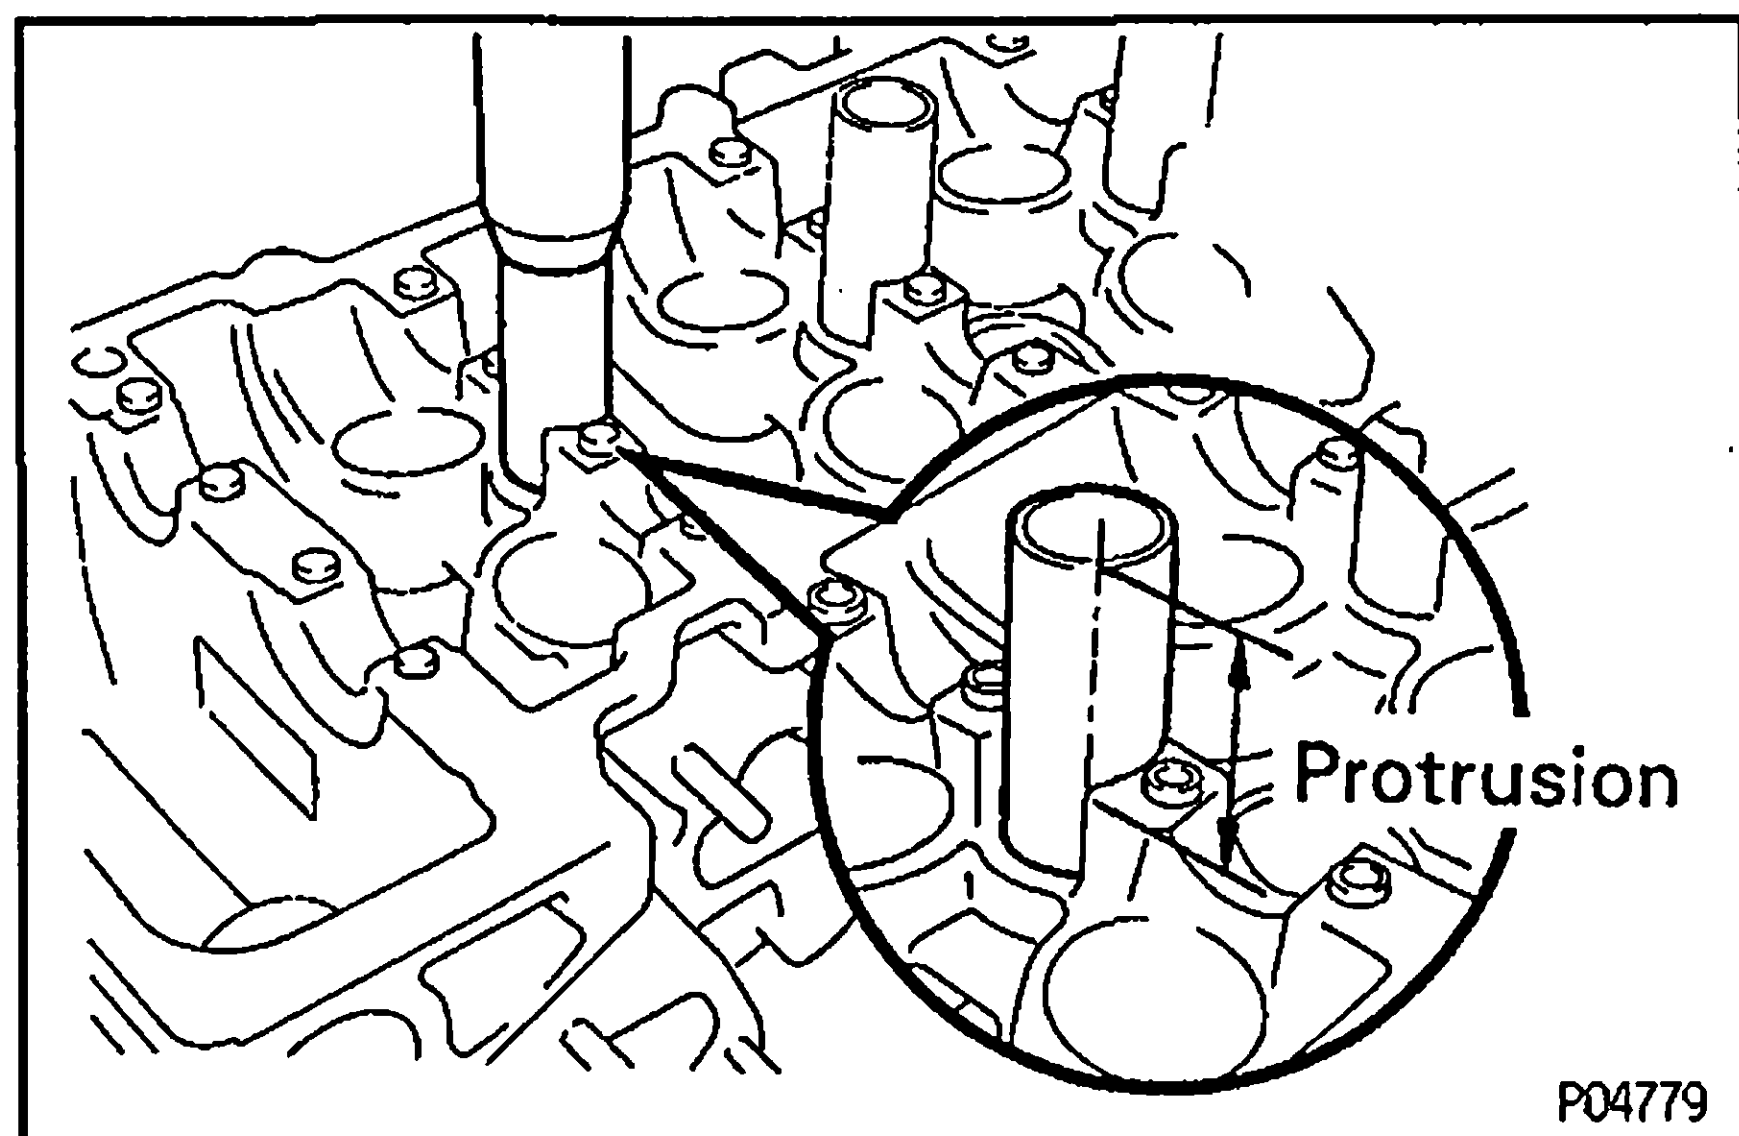

- (c) Using a press, press in a new spark plug tube until there is 45.5 mm (1.791 in.) protruding from the camshaft bearing cap installation surface of the cylinder head.

NOTICE: Avoid pressing a new spark plug tube in too far by measuring the amount of protrusion while pressing.

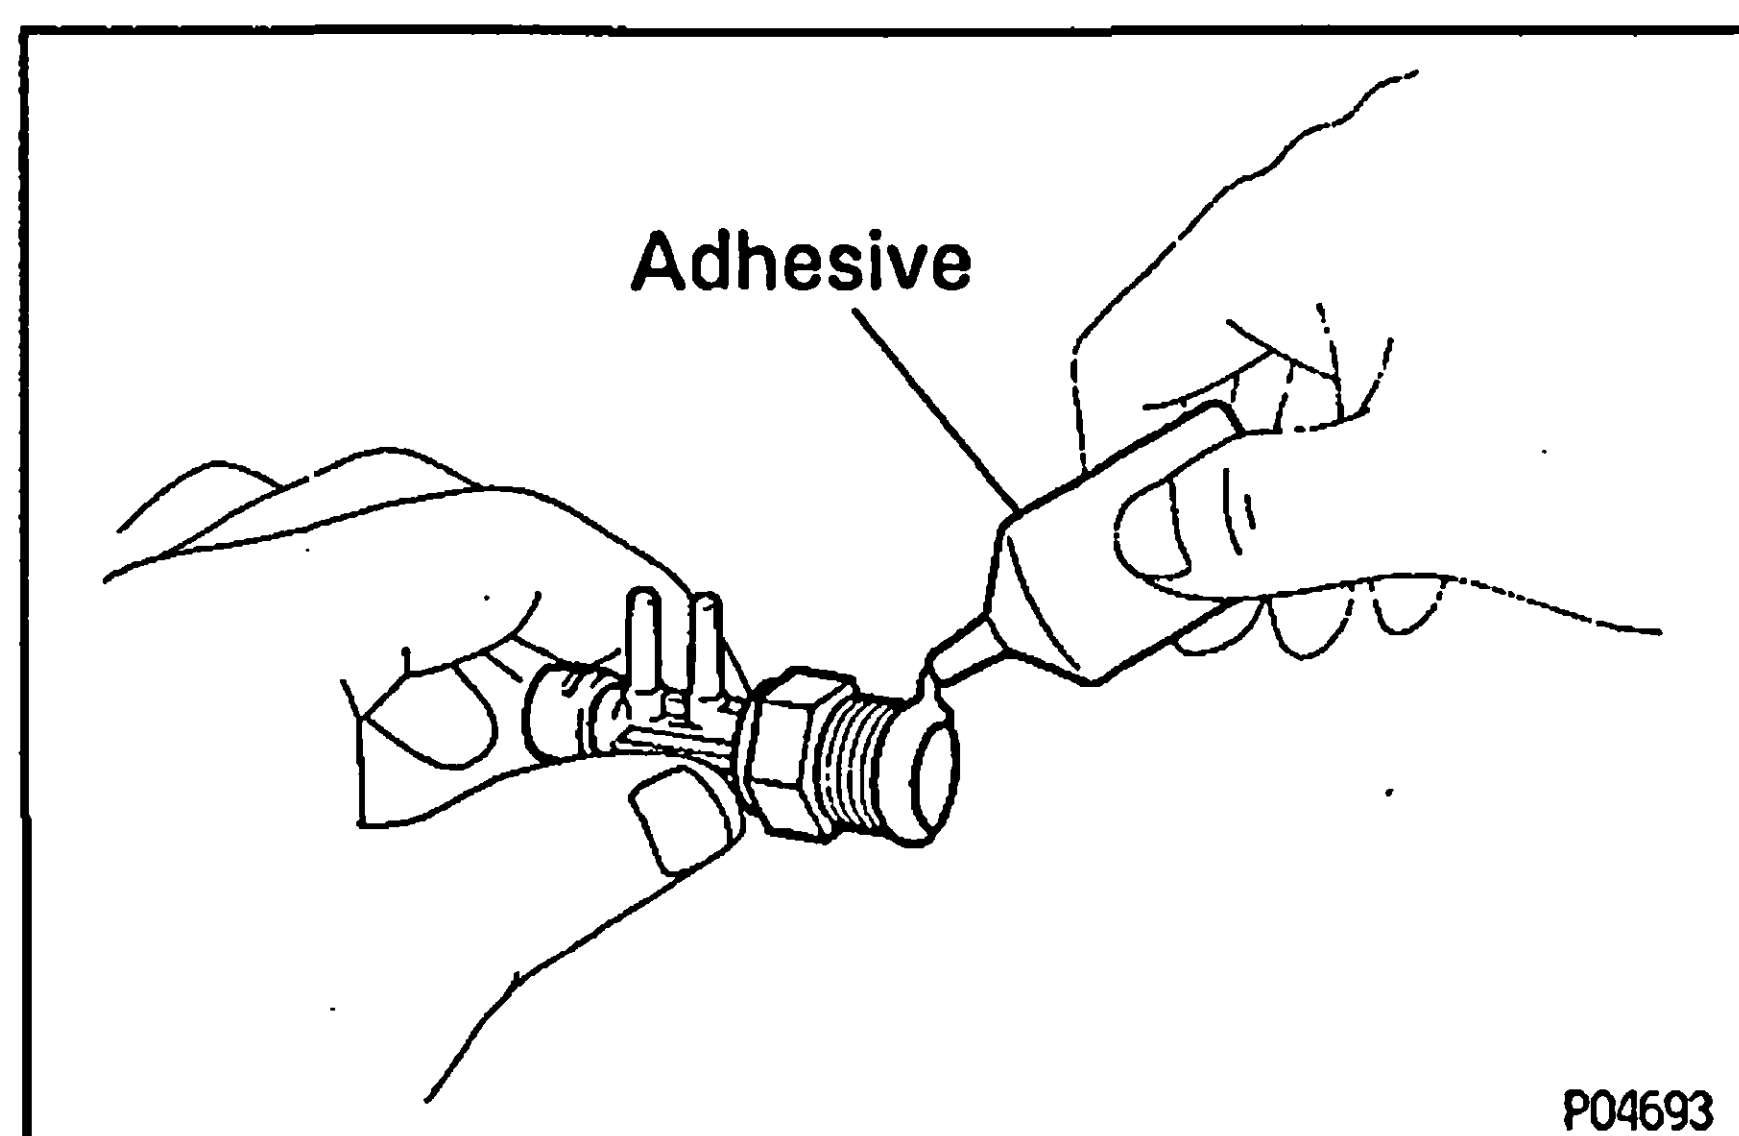


2. INSTALL FOLLOWING PARTS:


HINT: Apply adhesive to two or three threads of the BVS.

Adhesive:

Part No.08833-00080, THREE BOND 1344, LOCTITE 242 or equivalent

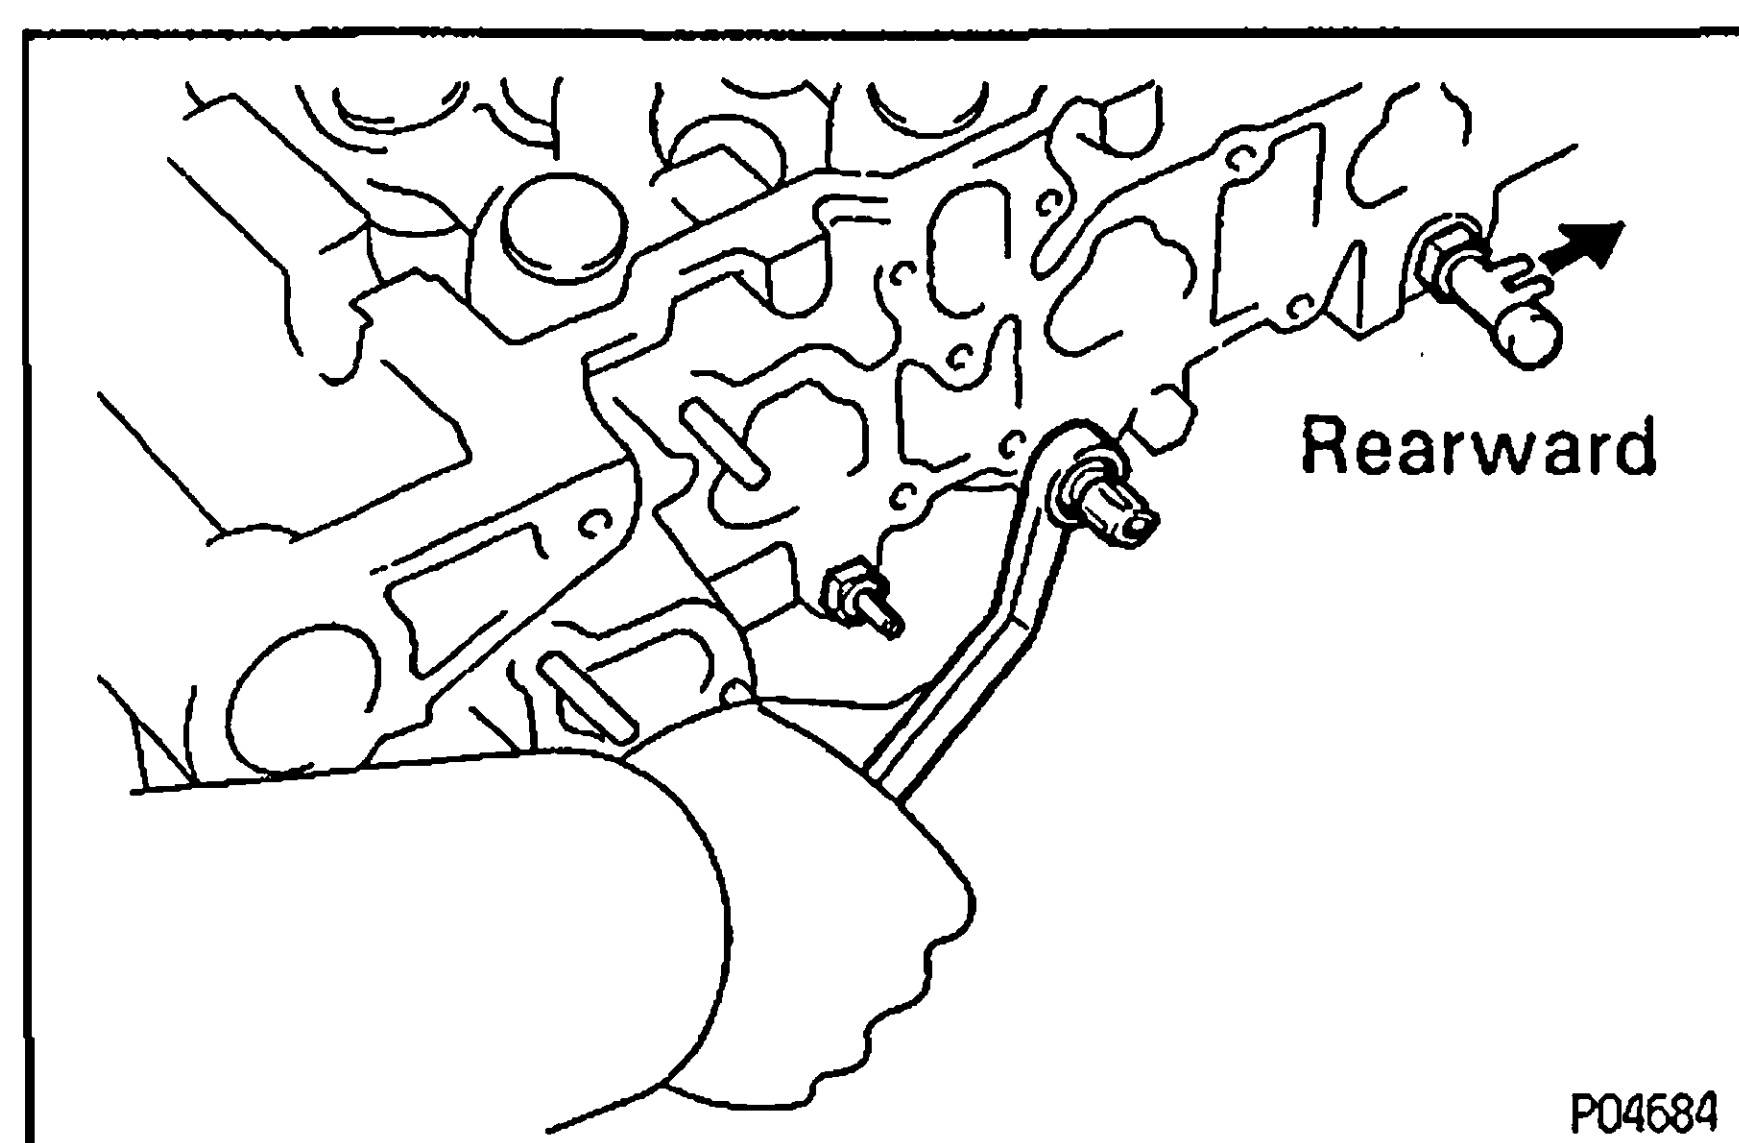


- (a) Water temperature switch
- (b) Water temperature sensor (for G.C.C.)
- (c) BVS

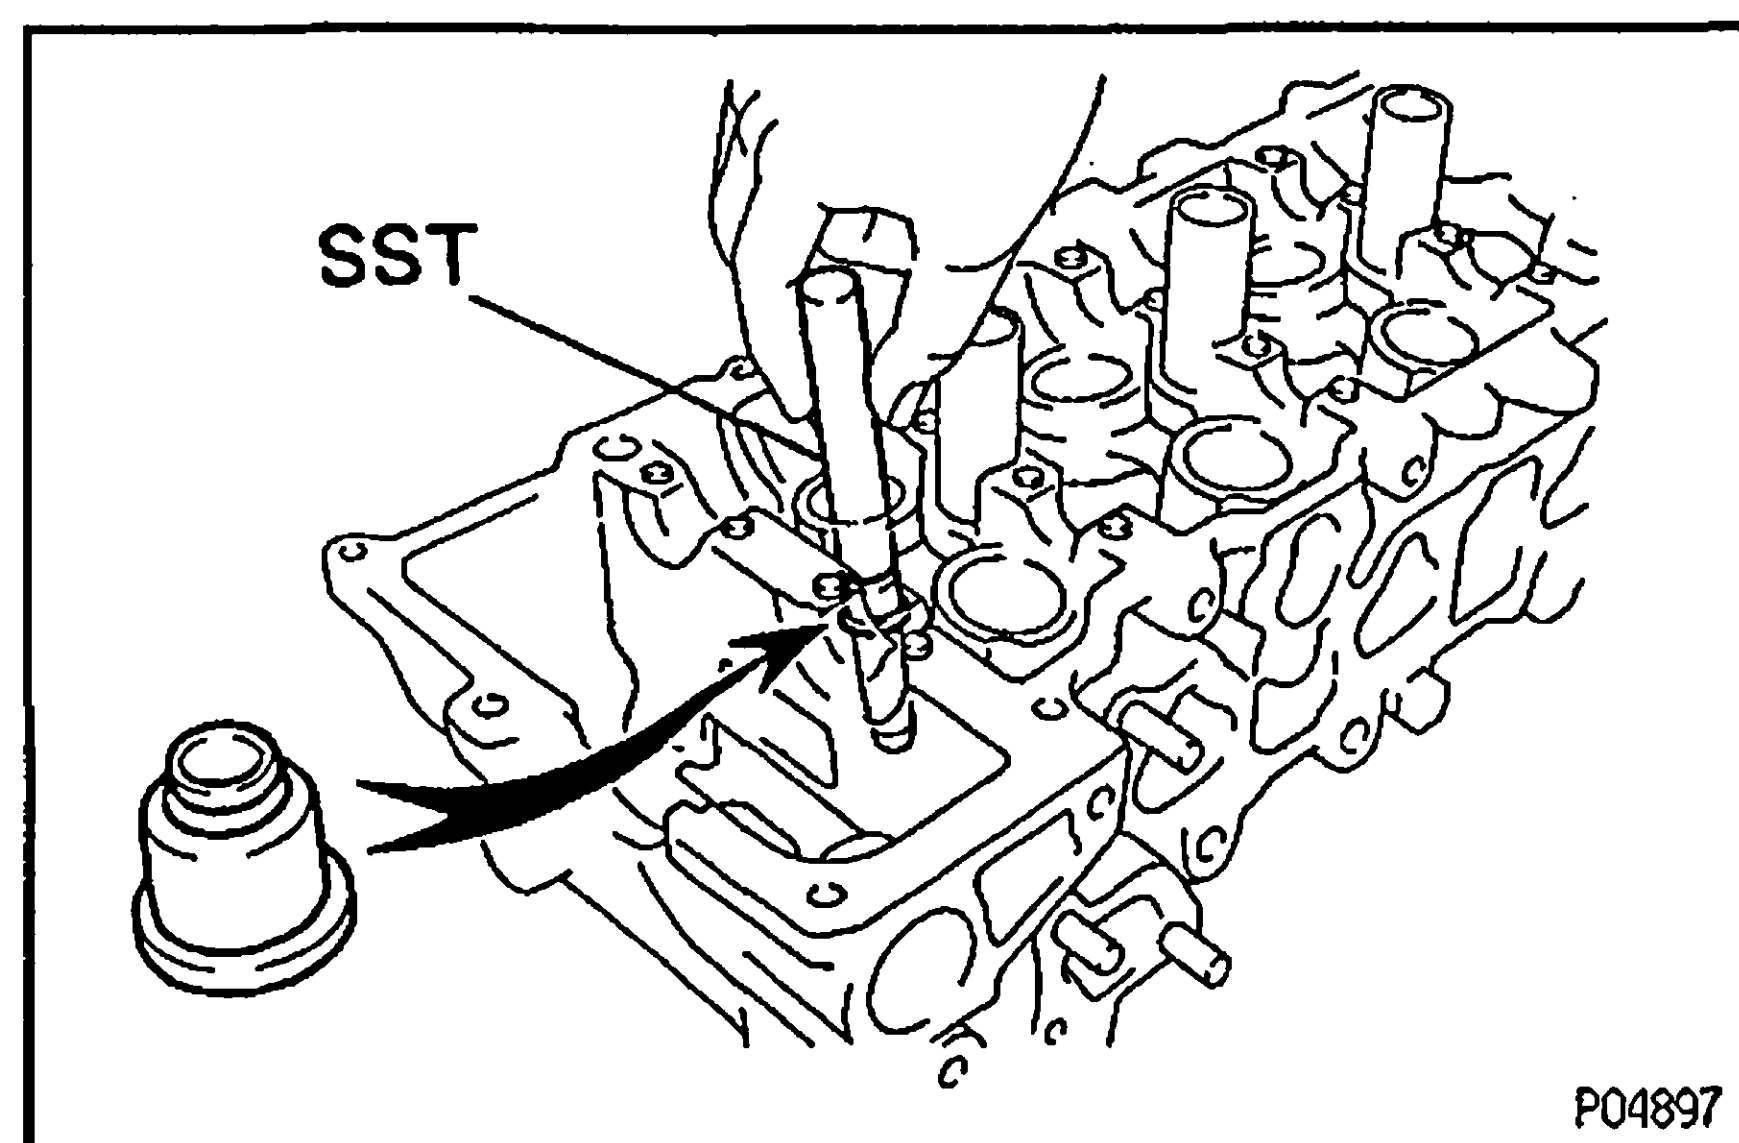


3. INSTALL VALVES

- (a) Using SST, push in a new oil seal.
SST 09236-00101 (09236-15010)

HINT: Different oil seals are used for the intake and exhaust.

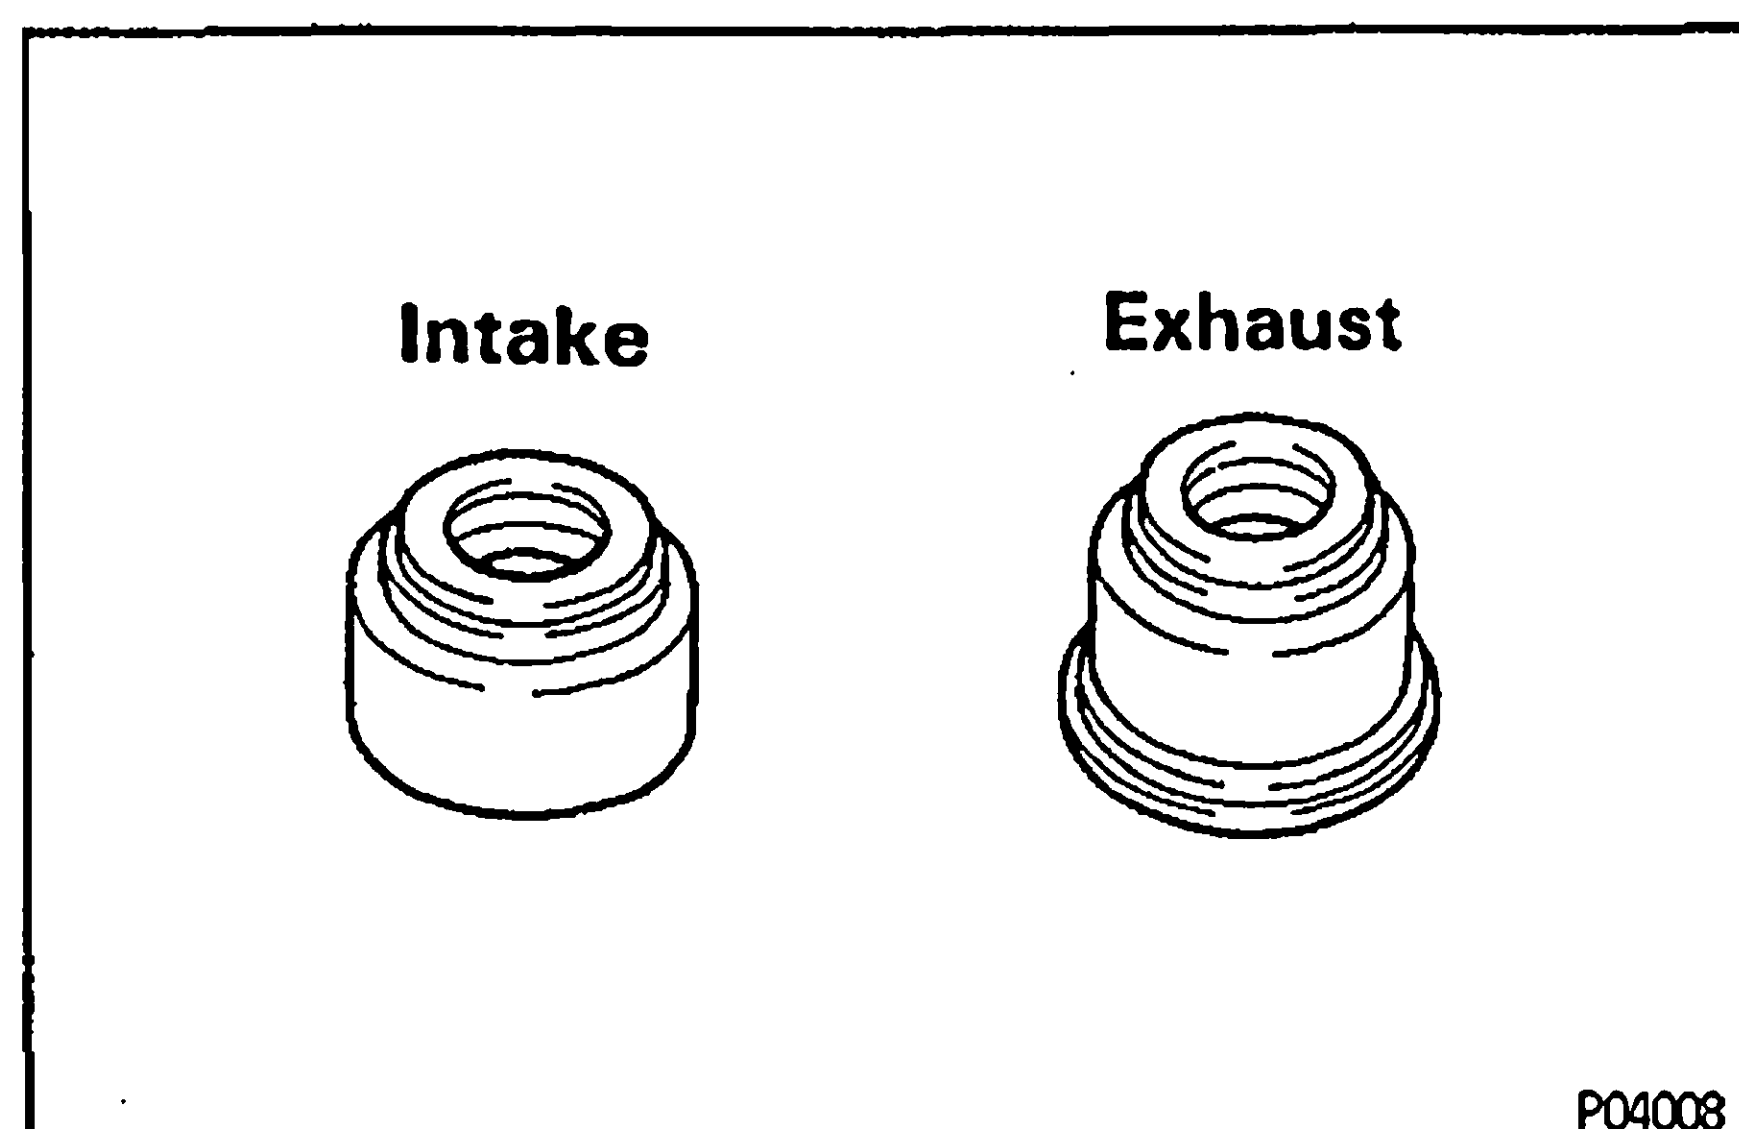


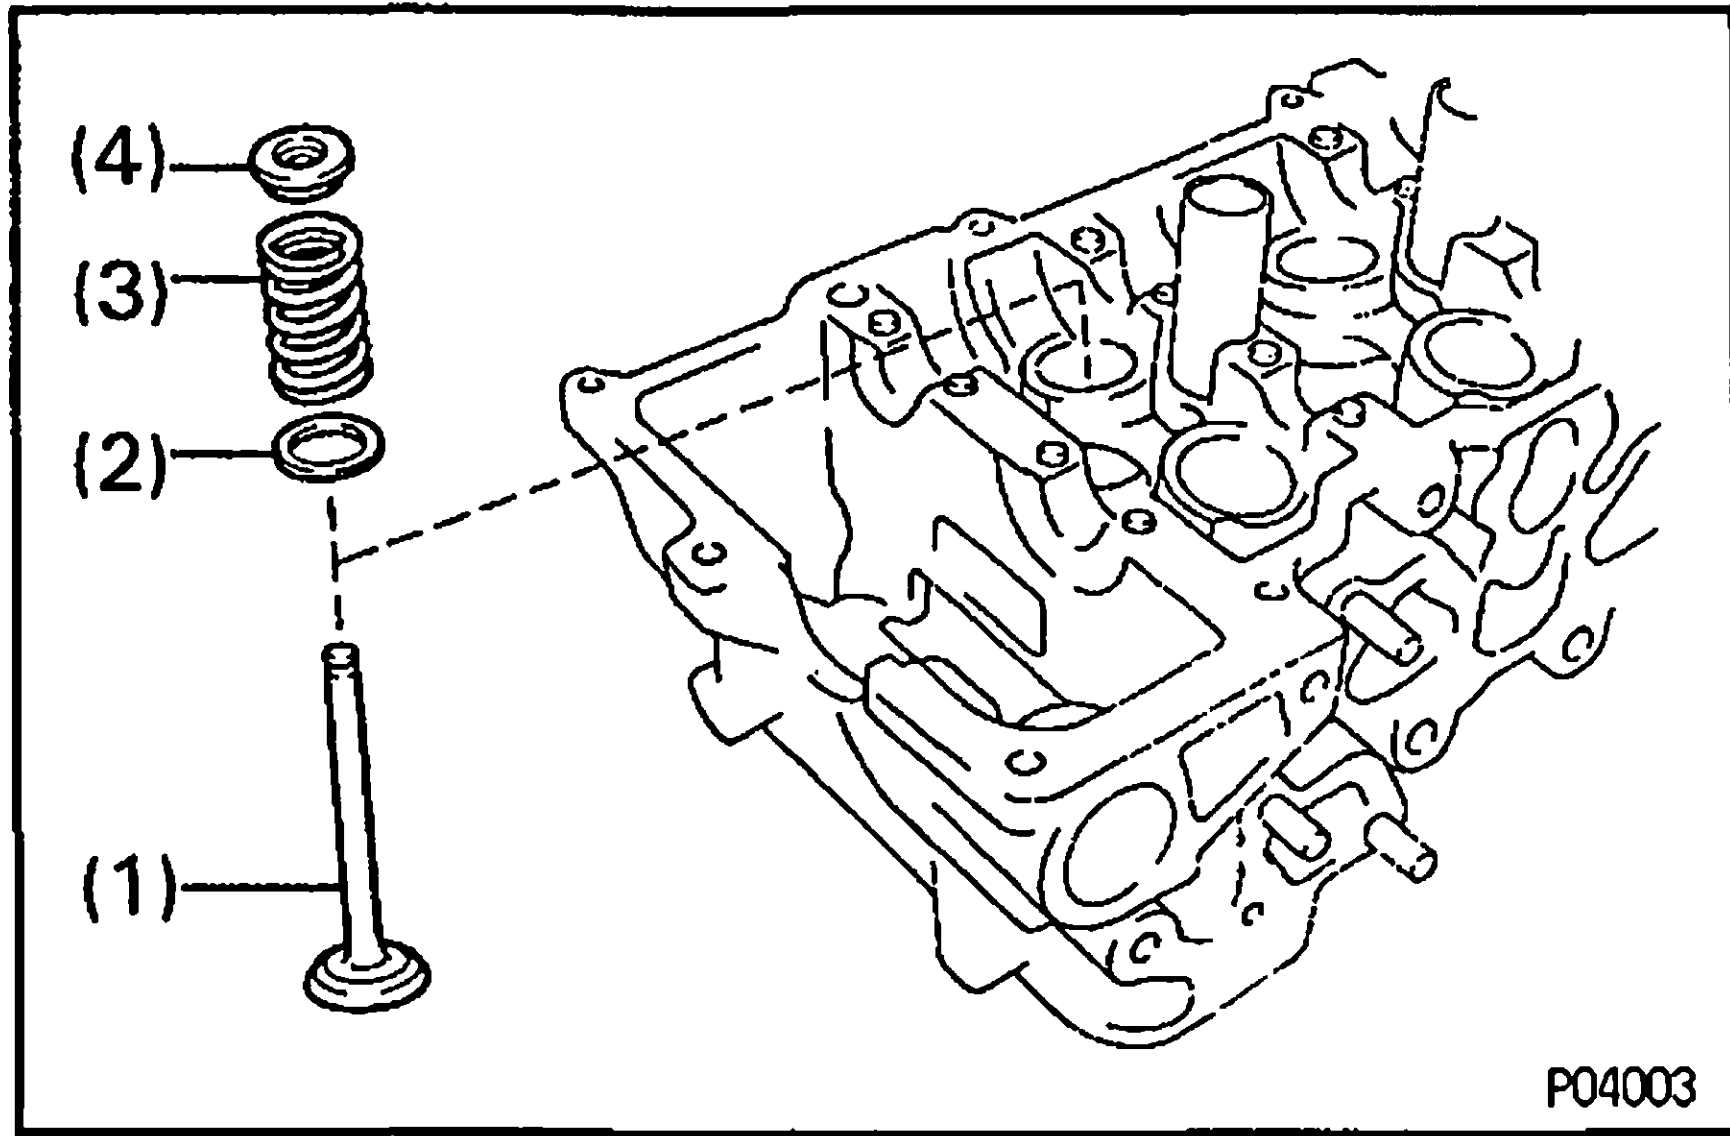


(b) Install the following parts:

- (1) Valve
- (2) Spring seat
- (3) Valve spring
- (4) Spring retainer


EG

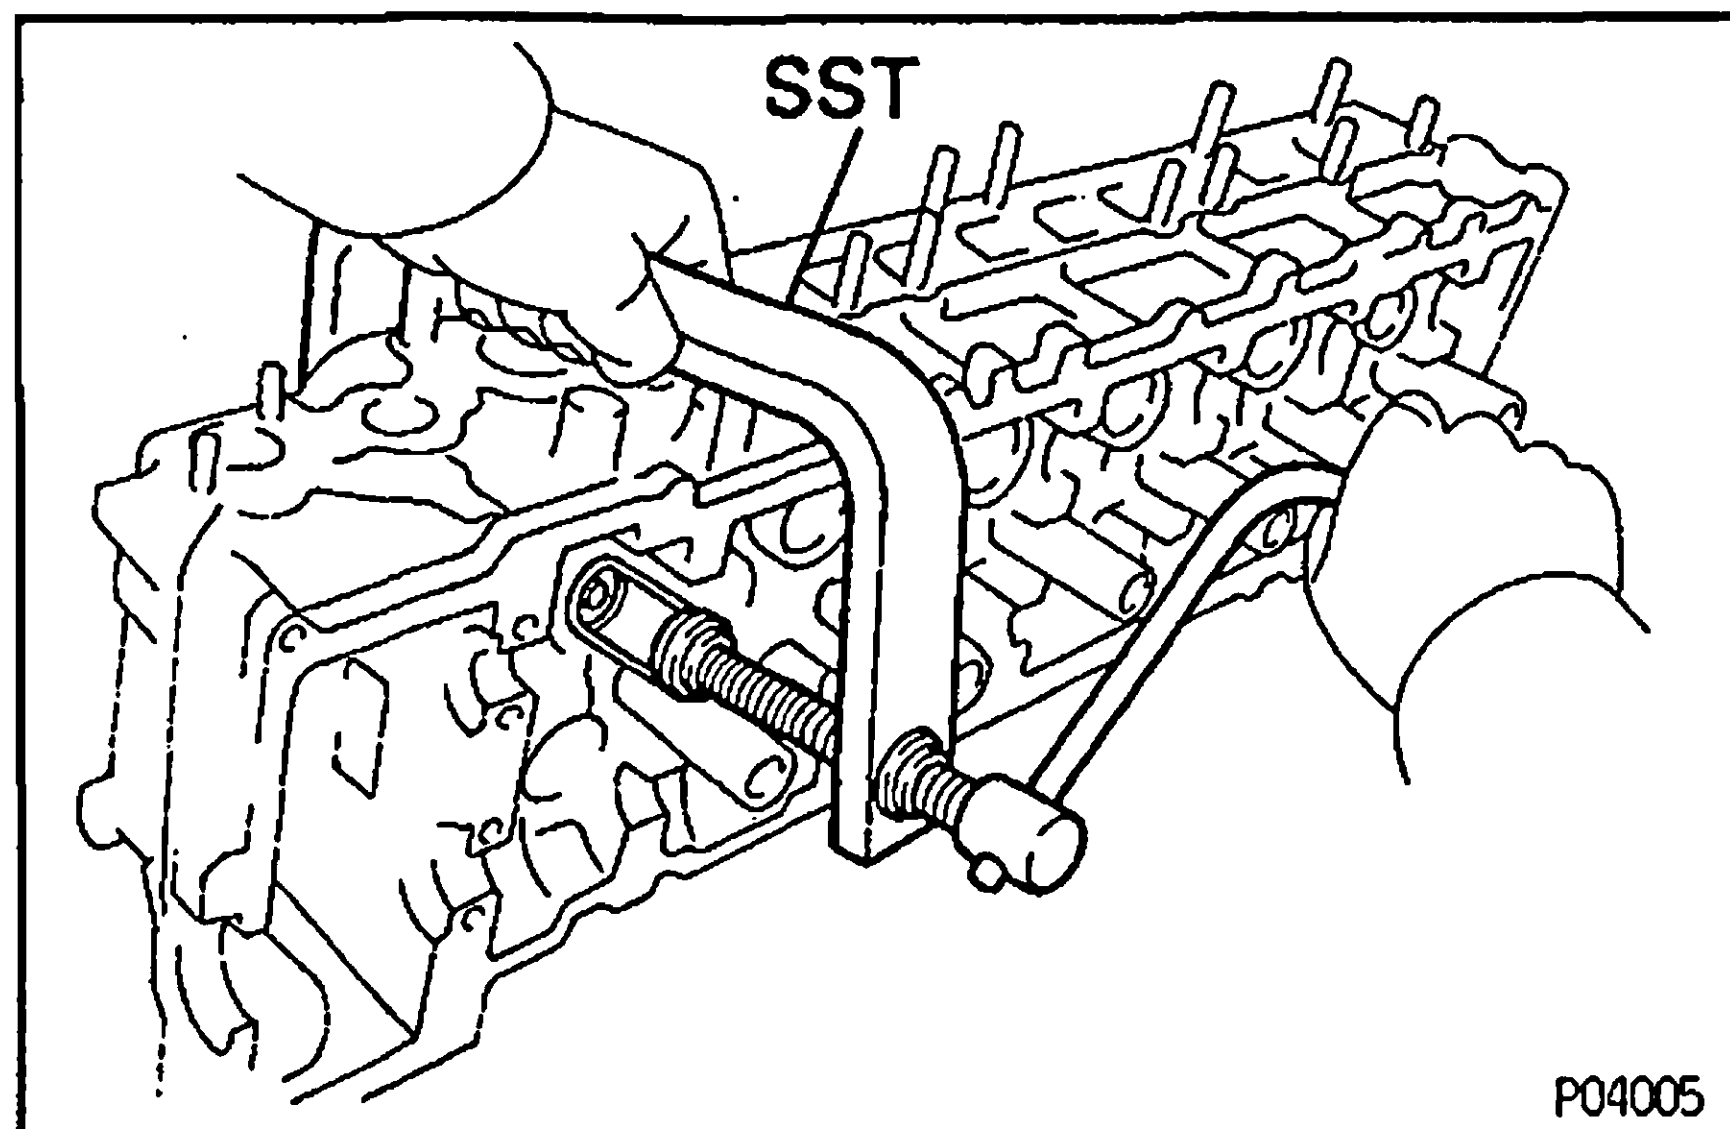

(c) Using SST, compress the valve spring and place the two keepers around the valve stem.
SST 09202-70010

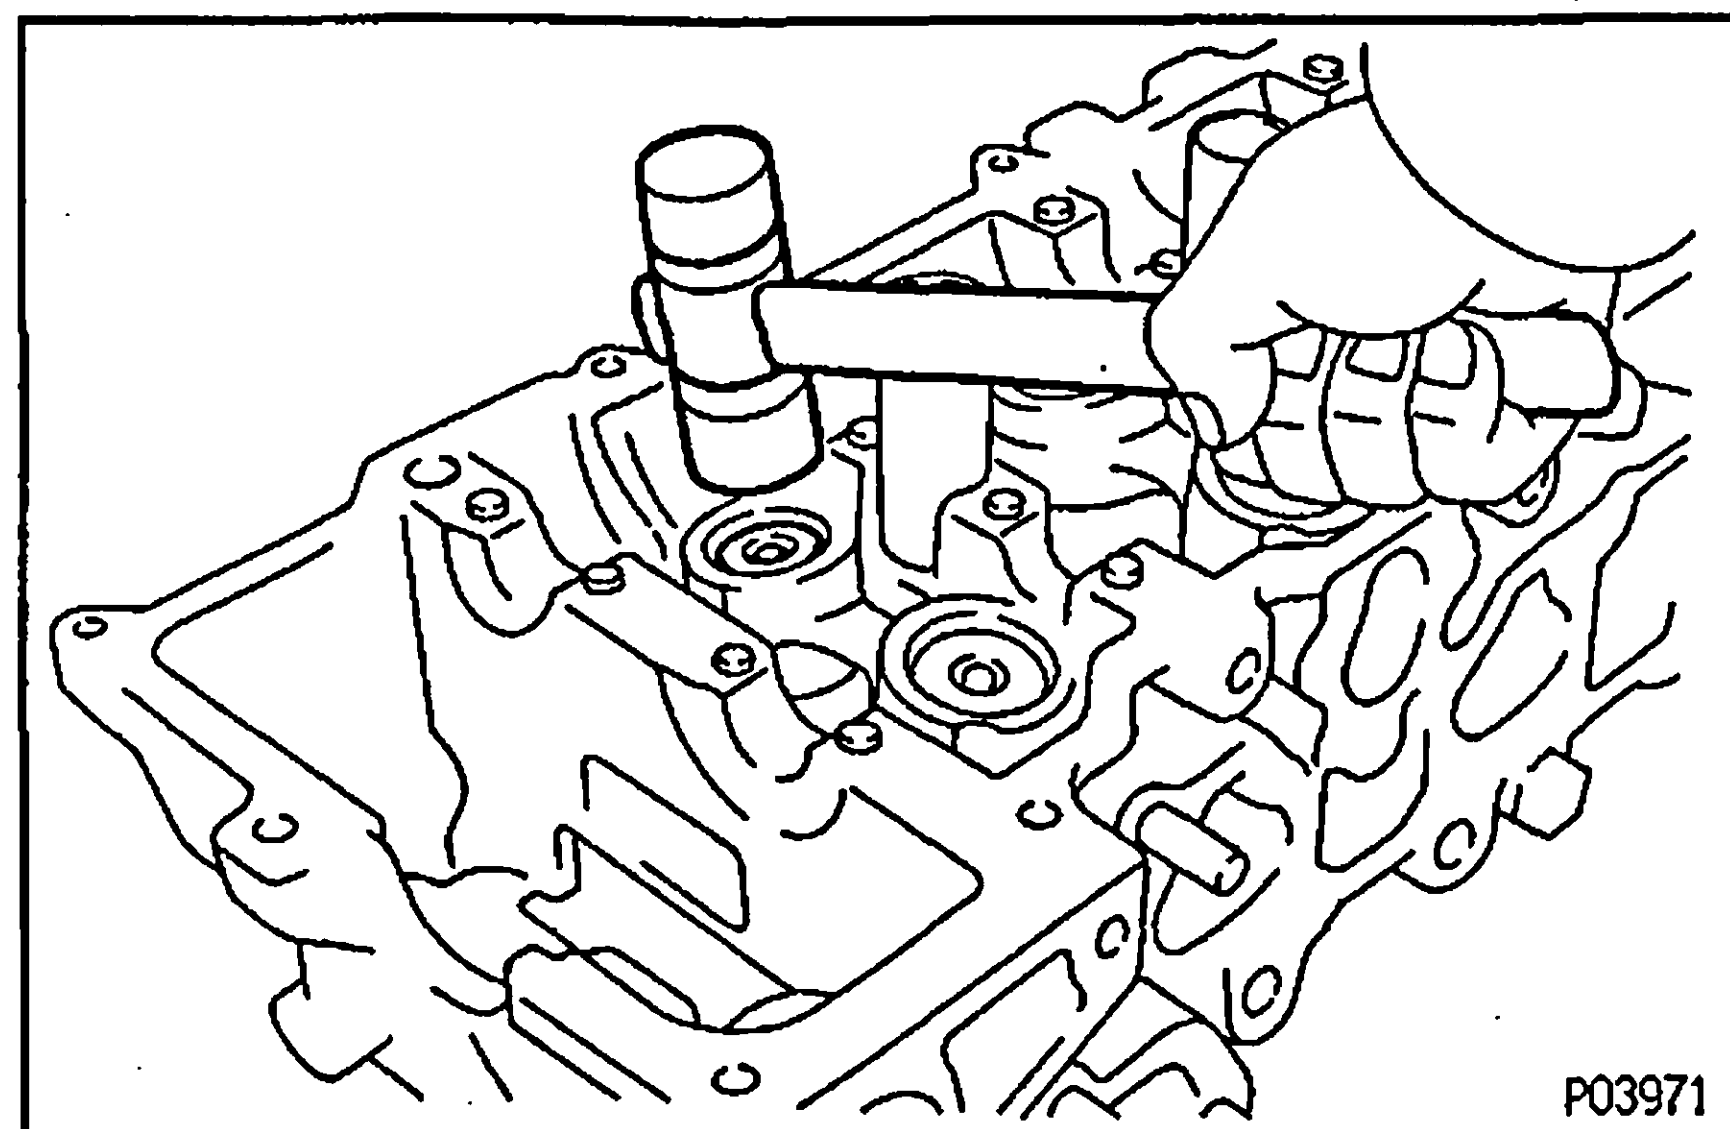

(d) Using a plastic-faced hammer, lightly tap the valve stem tip to assure proper fit.

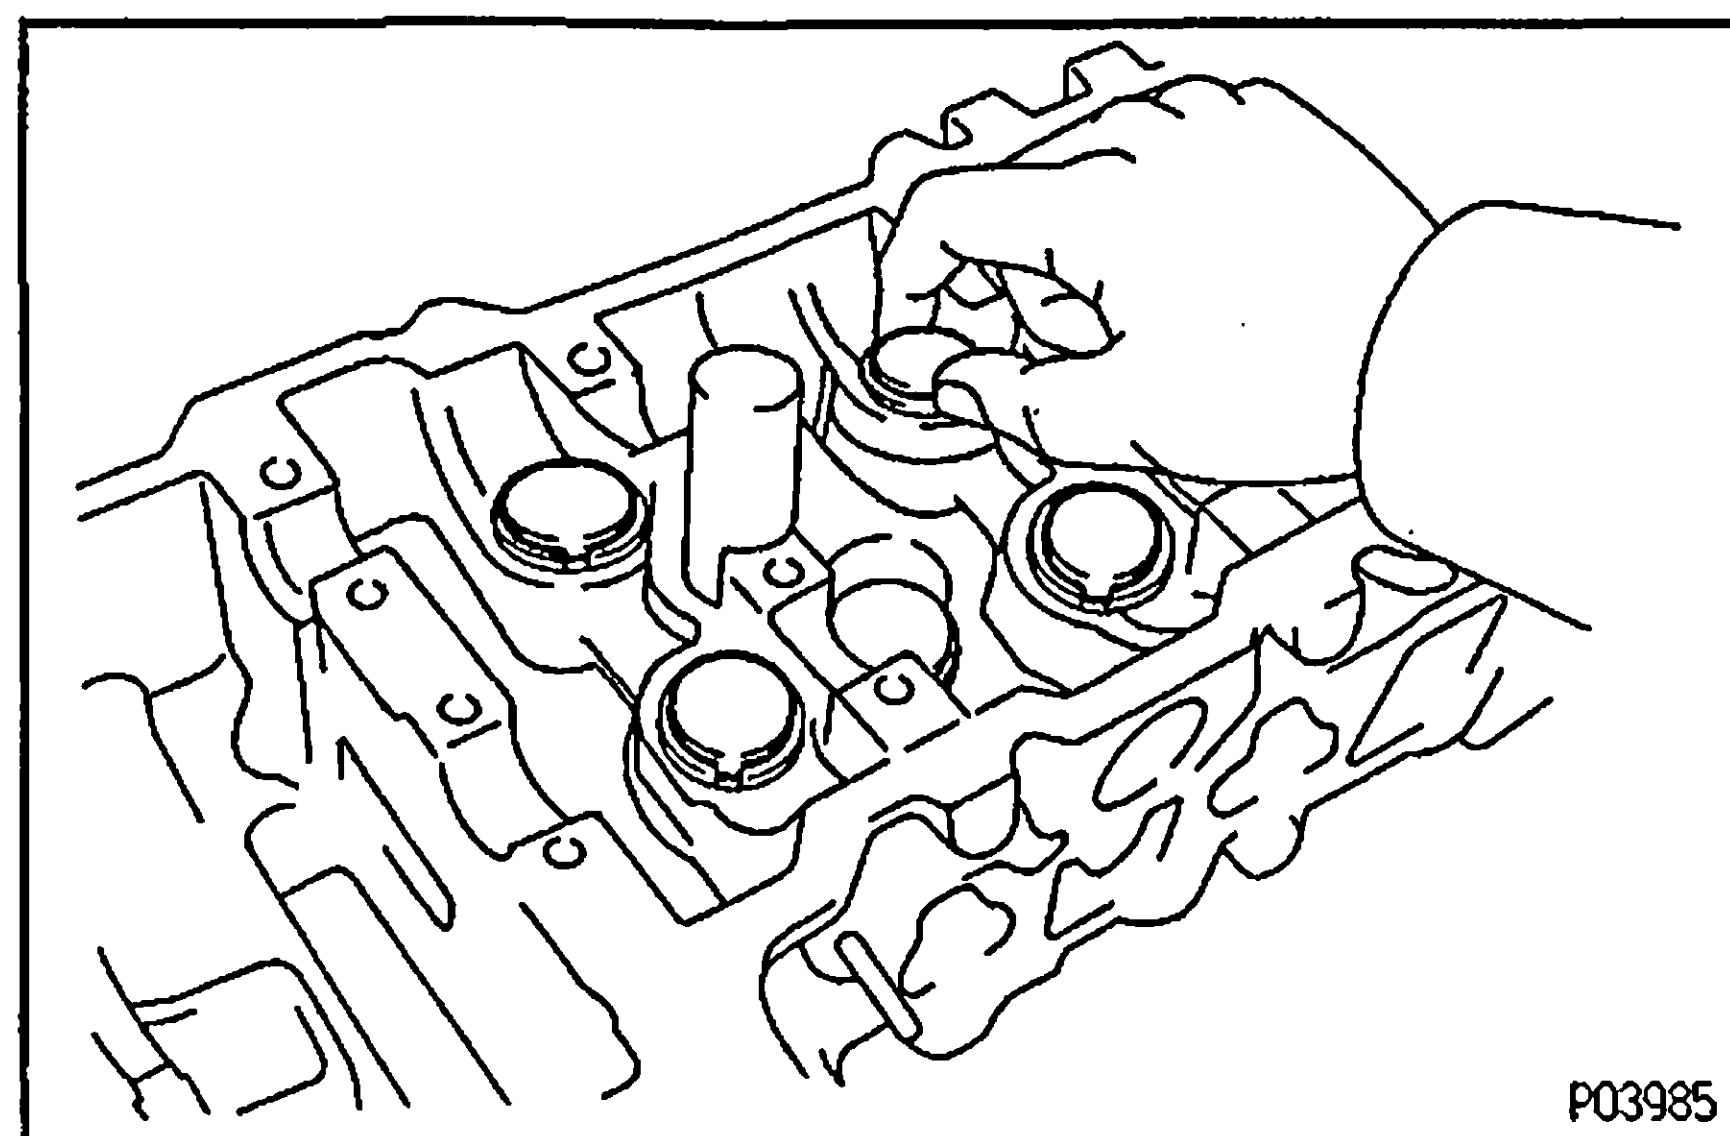

4. INSTALL VALVE LIFTERS AND SHIMS

- (a) Install the valve lifter and shim.
- (b) Check that the valve lifter rotates smoothly by hand.

CYLINDER HEAD INSTALLATION

(See pages EG—31, 32)

1. INSTALL CYLINDER HEAD

A. Place cylinder head on cylinder block

- (a) Apply seal packing to two locations as shown.

Seal packing:

Part No.08826—00080 or equivalent

NOTICE: Do not apply too much seal packing

- (b) Place a new cylinder head gasket in position on the cylinder block.

NOTICE: Be careful of the installation direction.

- (c) Place the cylinder head in position on the cylinder head gasket.

B. Install cylinder head bolts

HINT:

- The cylinder head bolts are tightened in two progressive steps (steps (b) and (d)).
- If any cylinder head bolt is broken or deformed, replace it.

- (a) Apply a light coat of engine oil on the threads and under the heads of the cylinder head bolts.





- (b) Using SST, install and uniformly tighten the 14 cylinder head bolts and plate washers in several passes, in the sequence shown.


SST 09011—38121

Torque: 39 N·m (400 kgf·cm, 29 ft·lbf)

If any one of the cylinder head bolts does not meet the torque specification, replace the cylinder head bolt.


- (c) Mark the front of the cylinder head bolt head with paint.

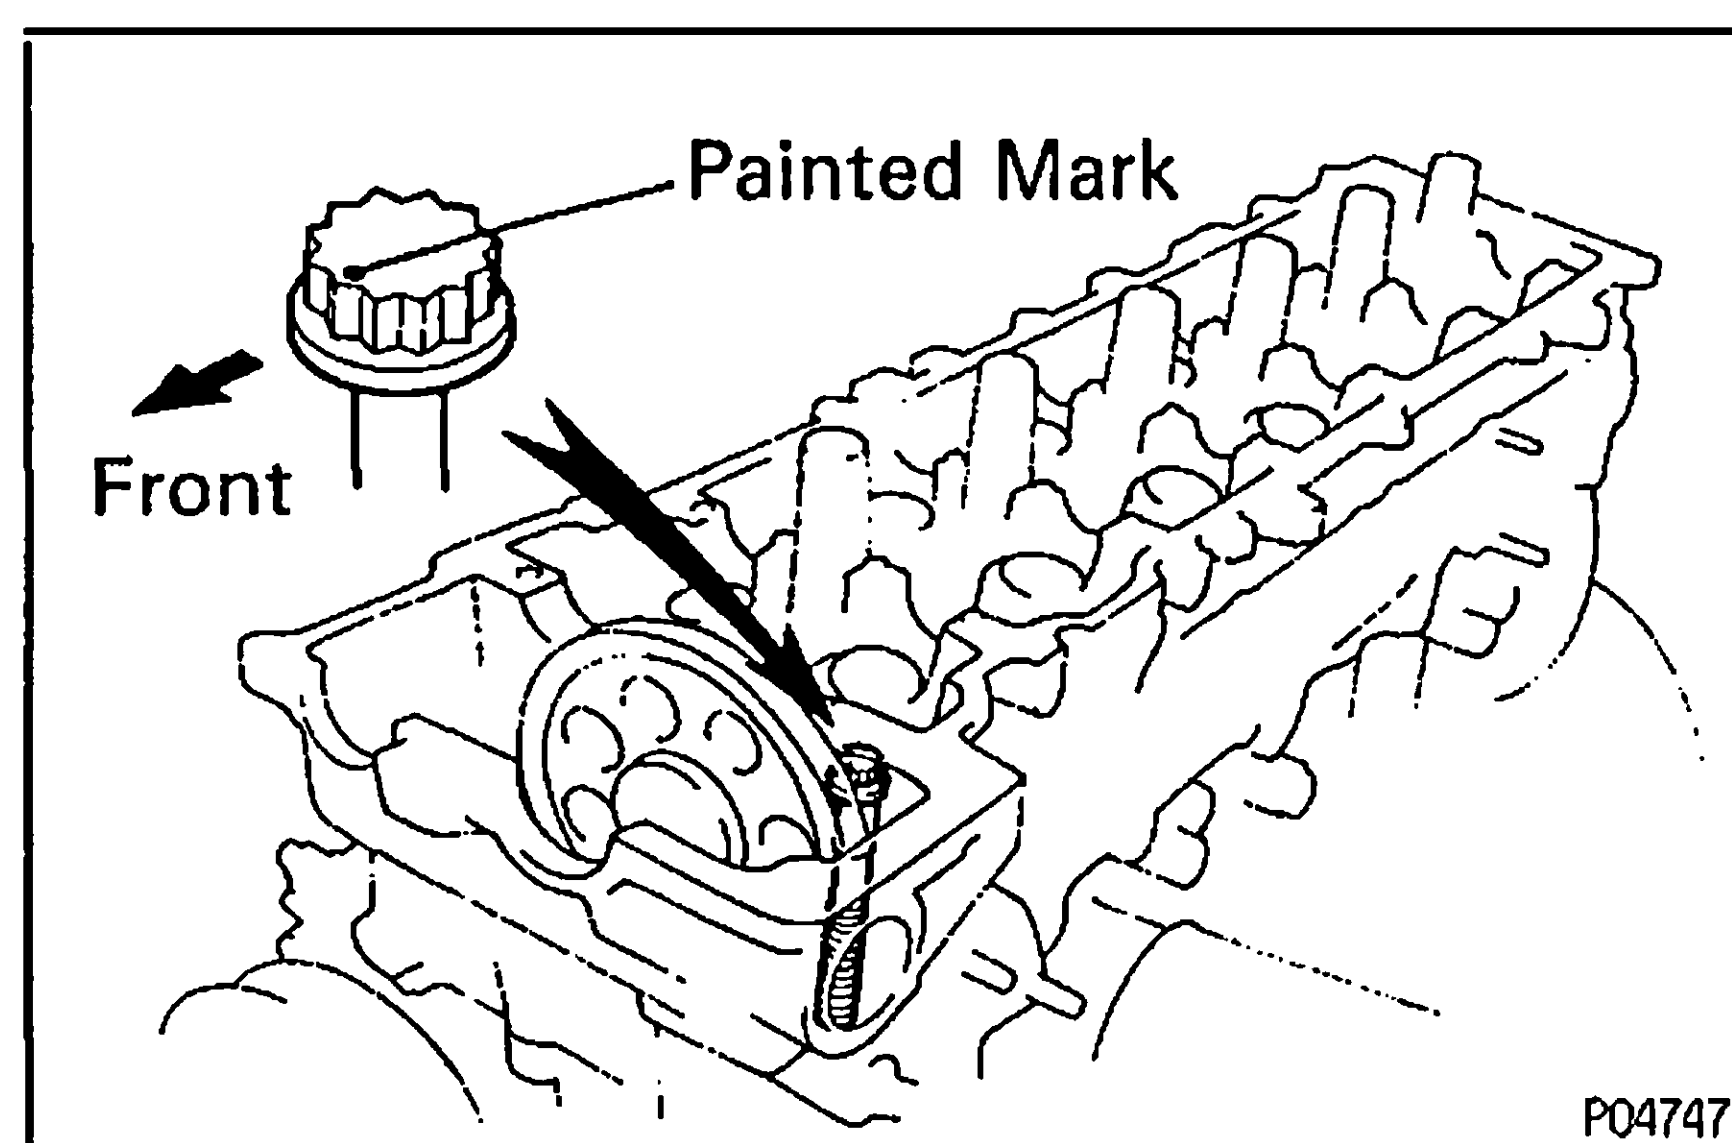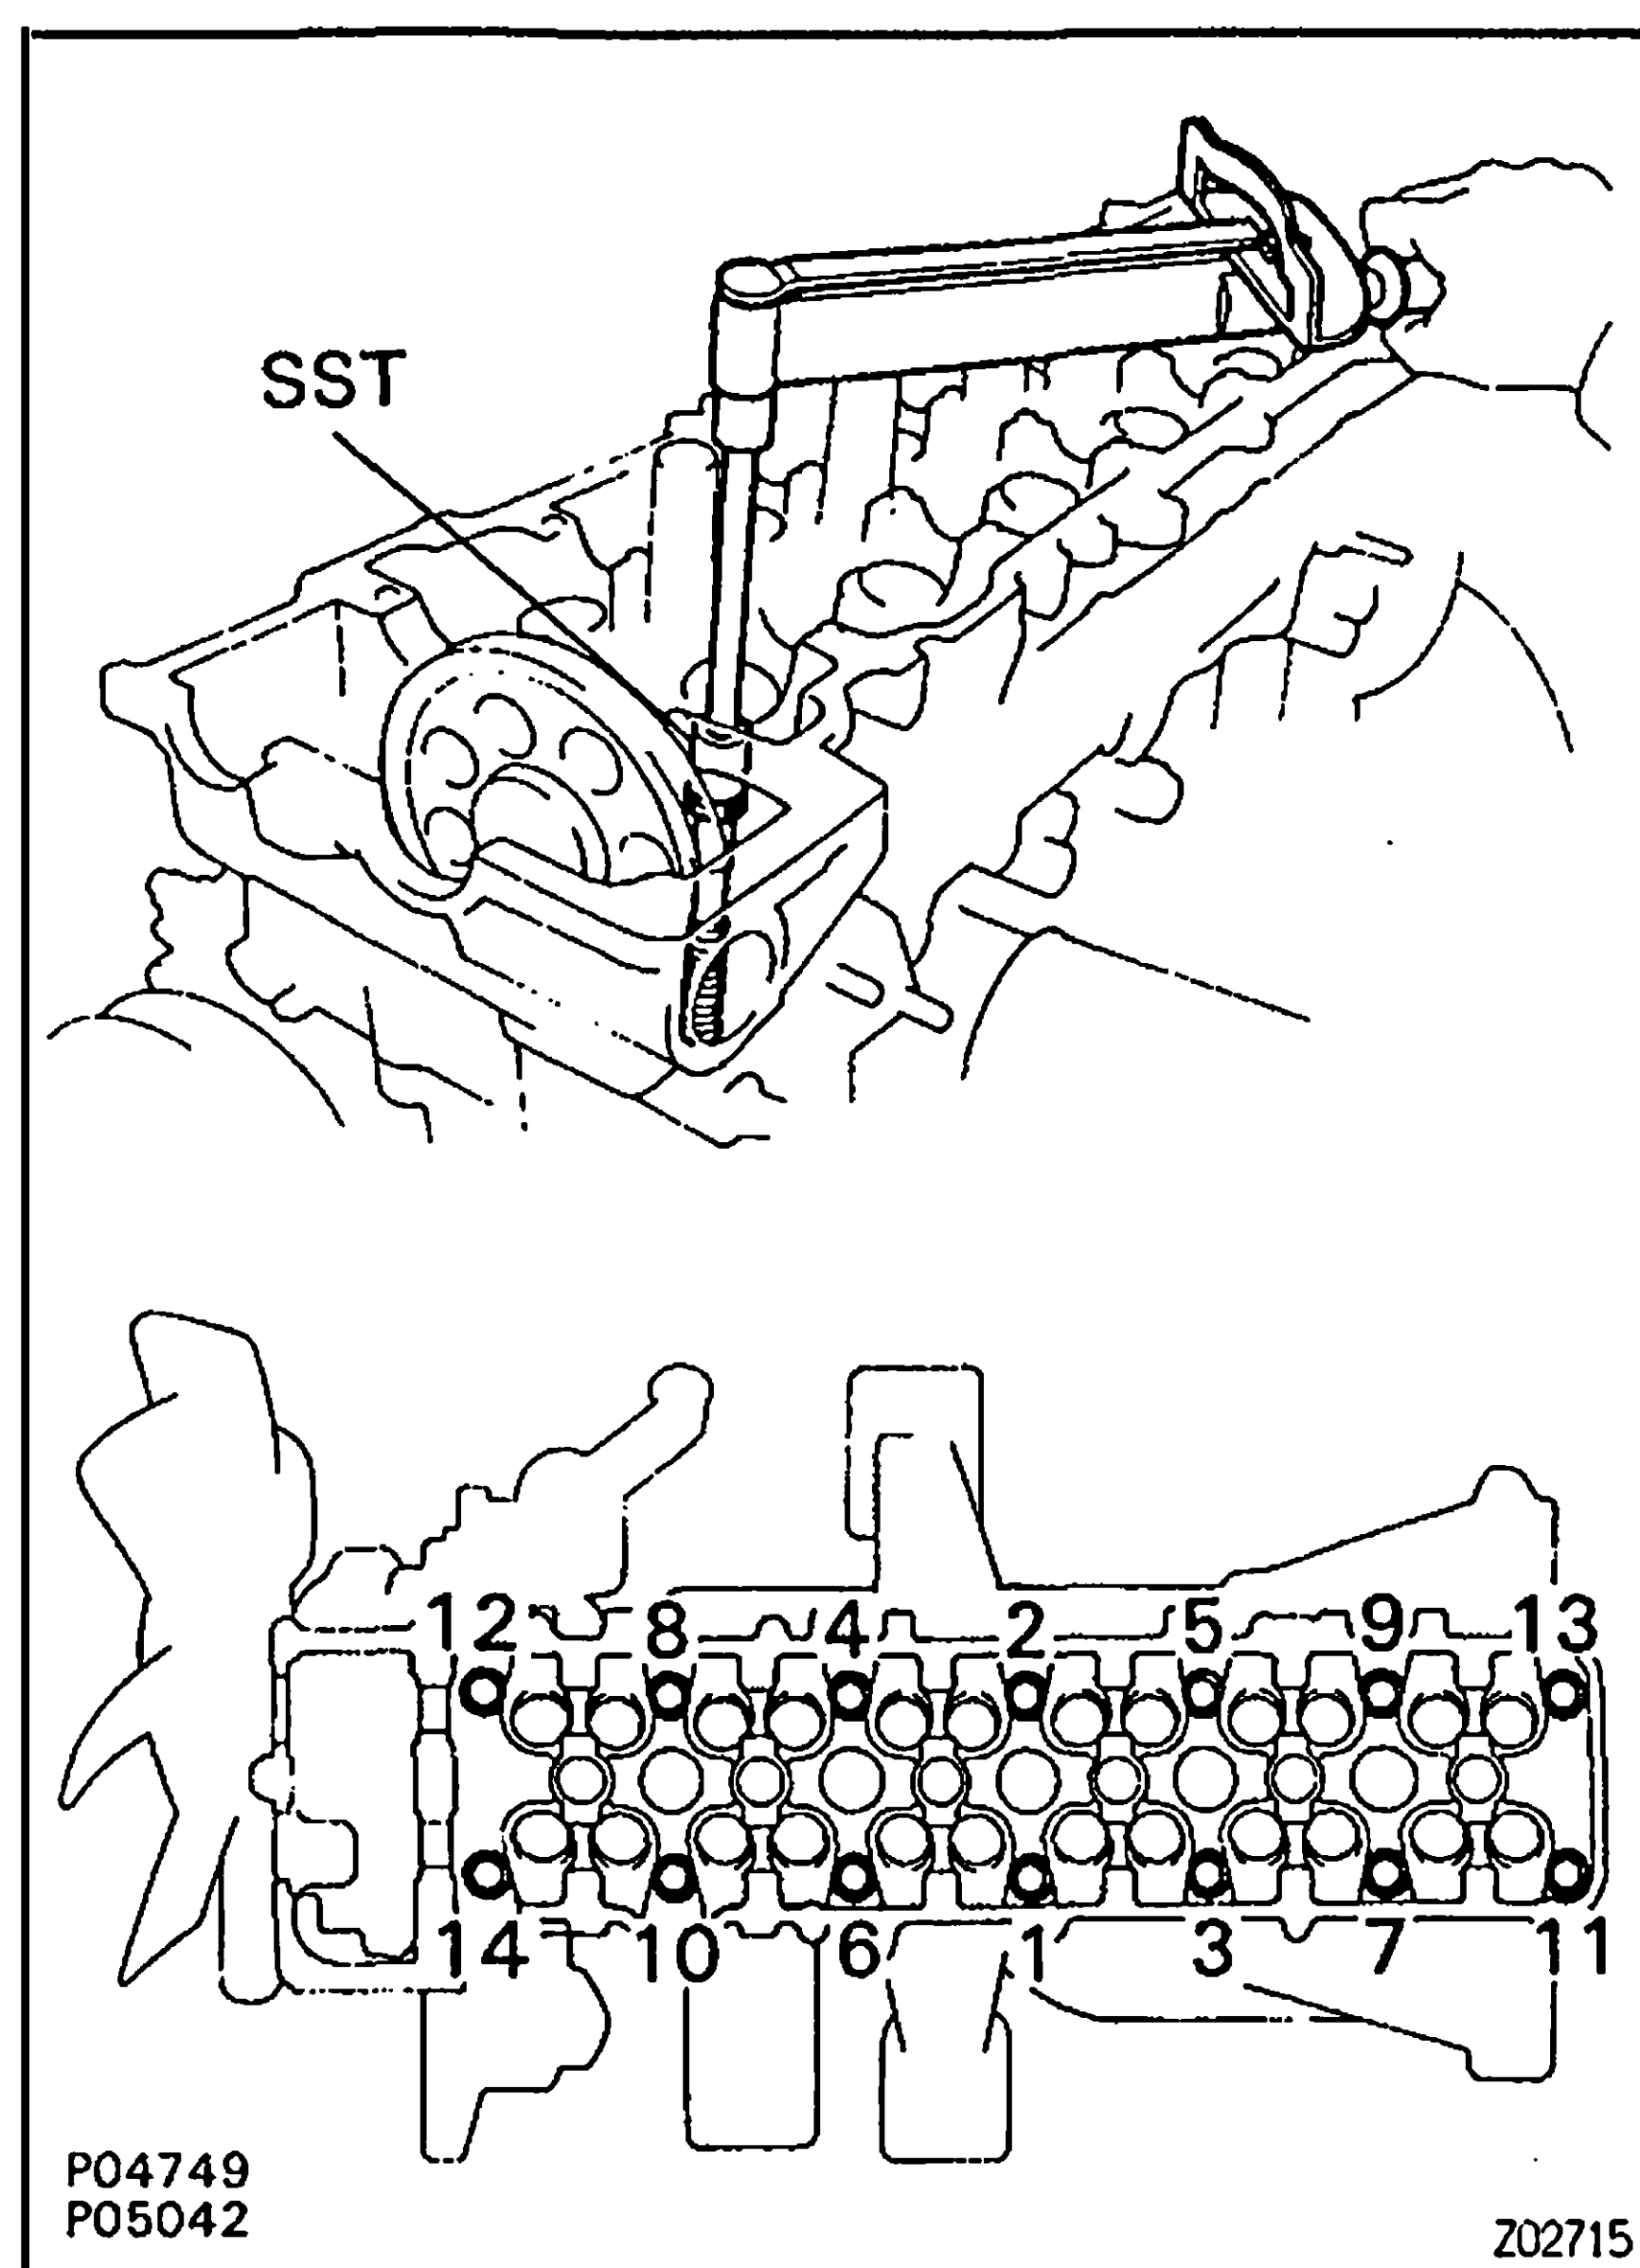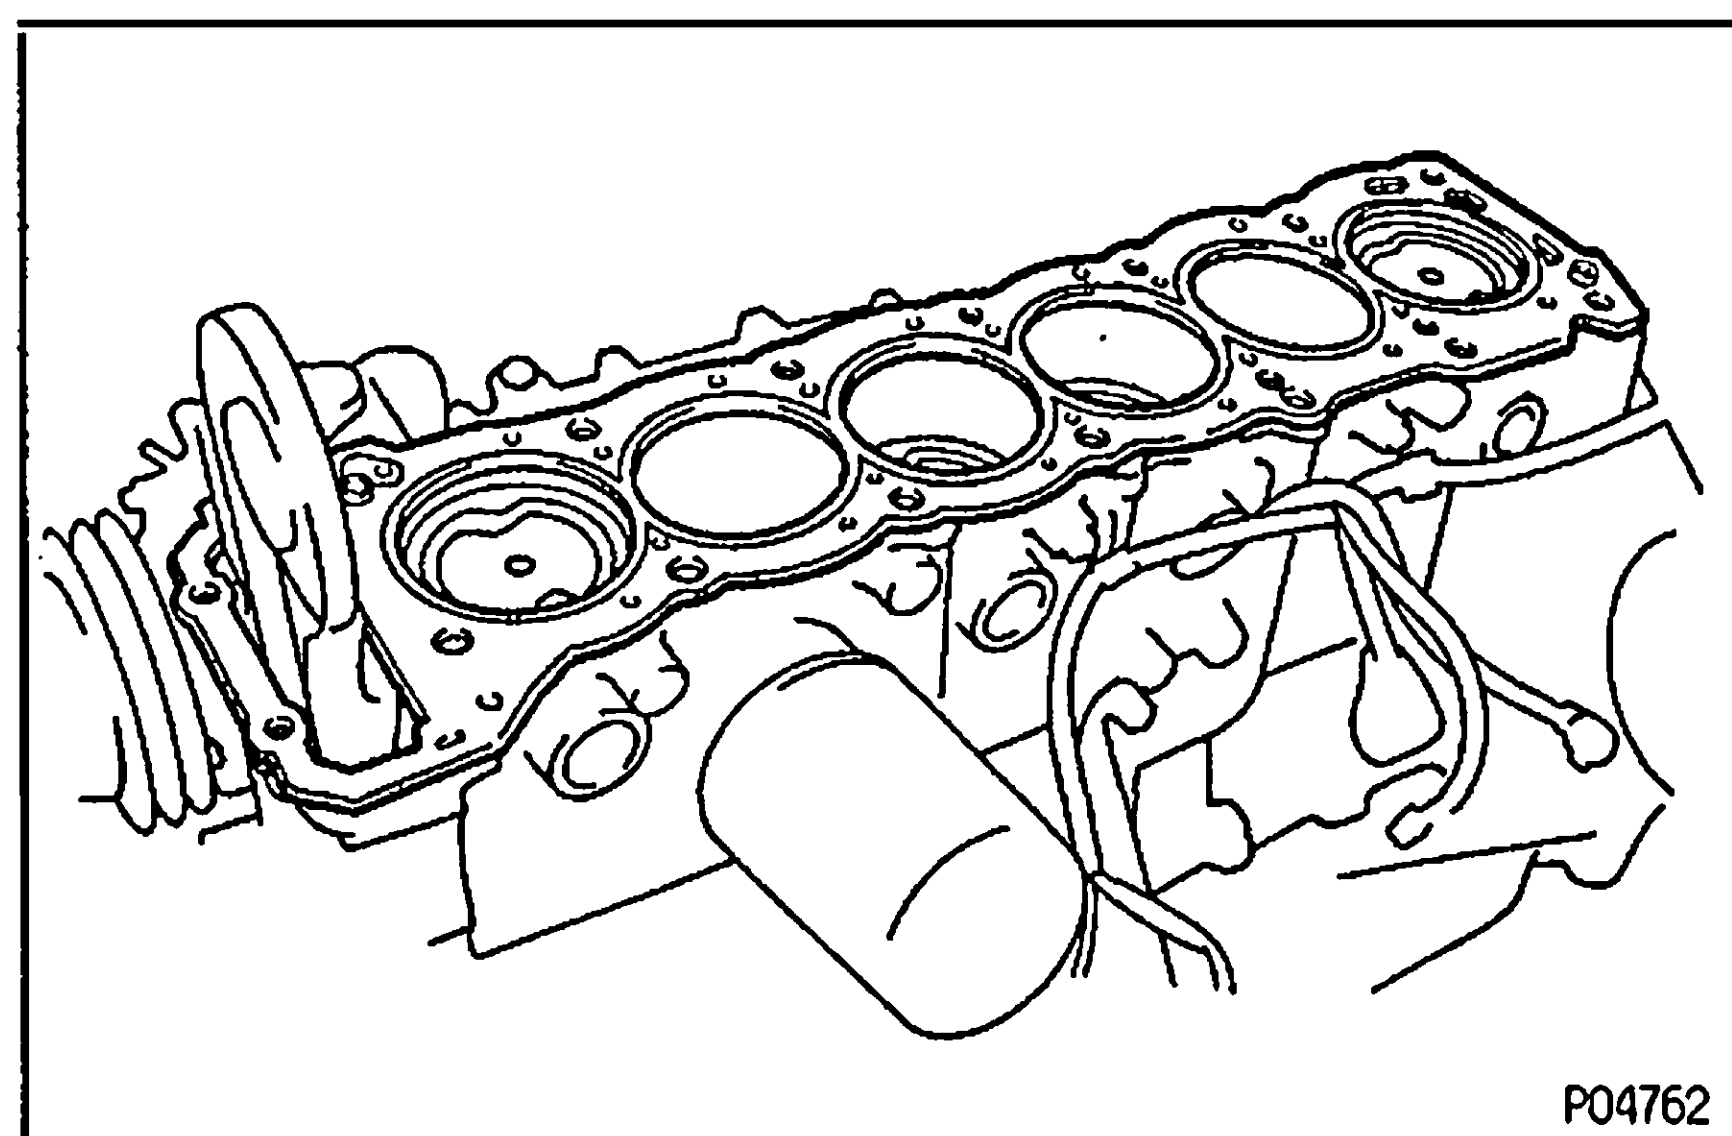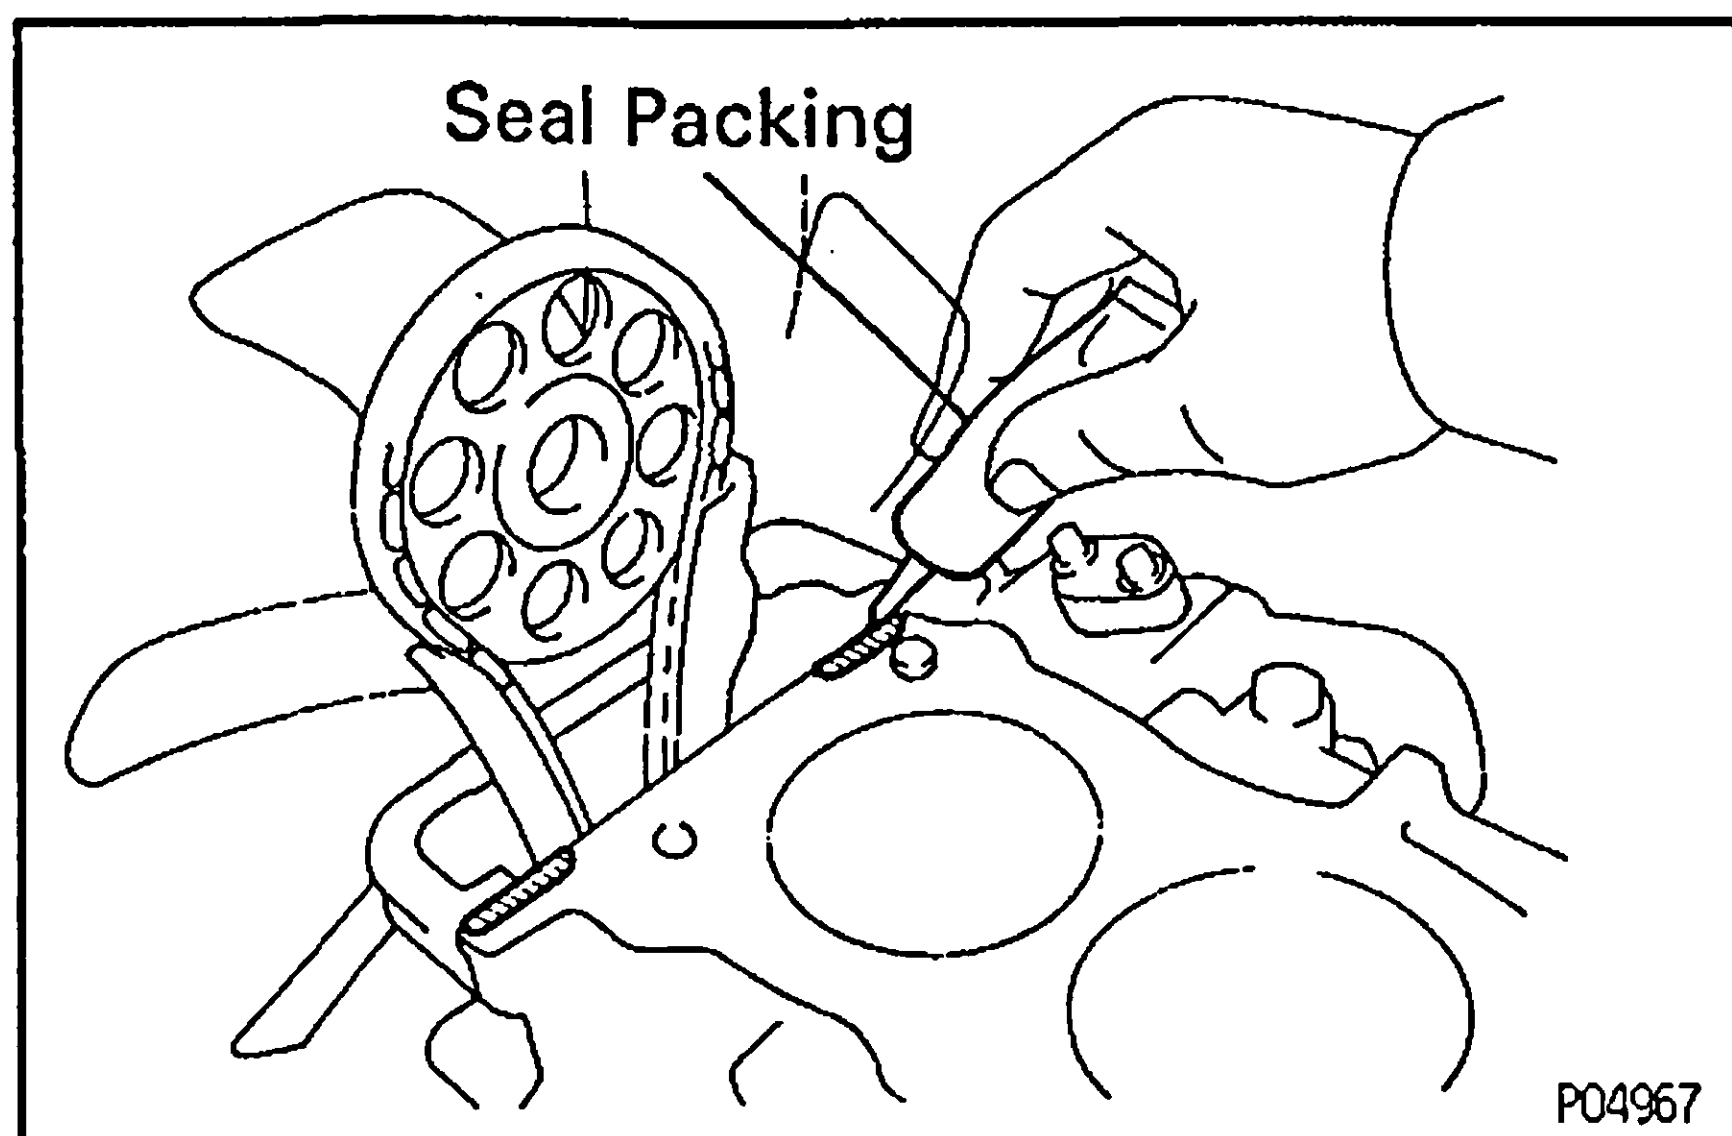

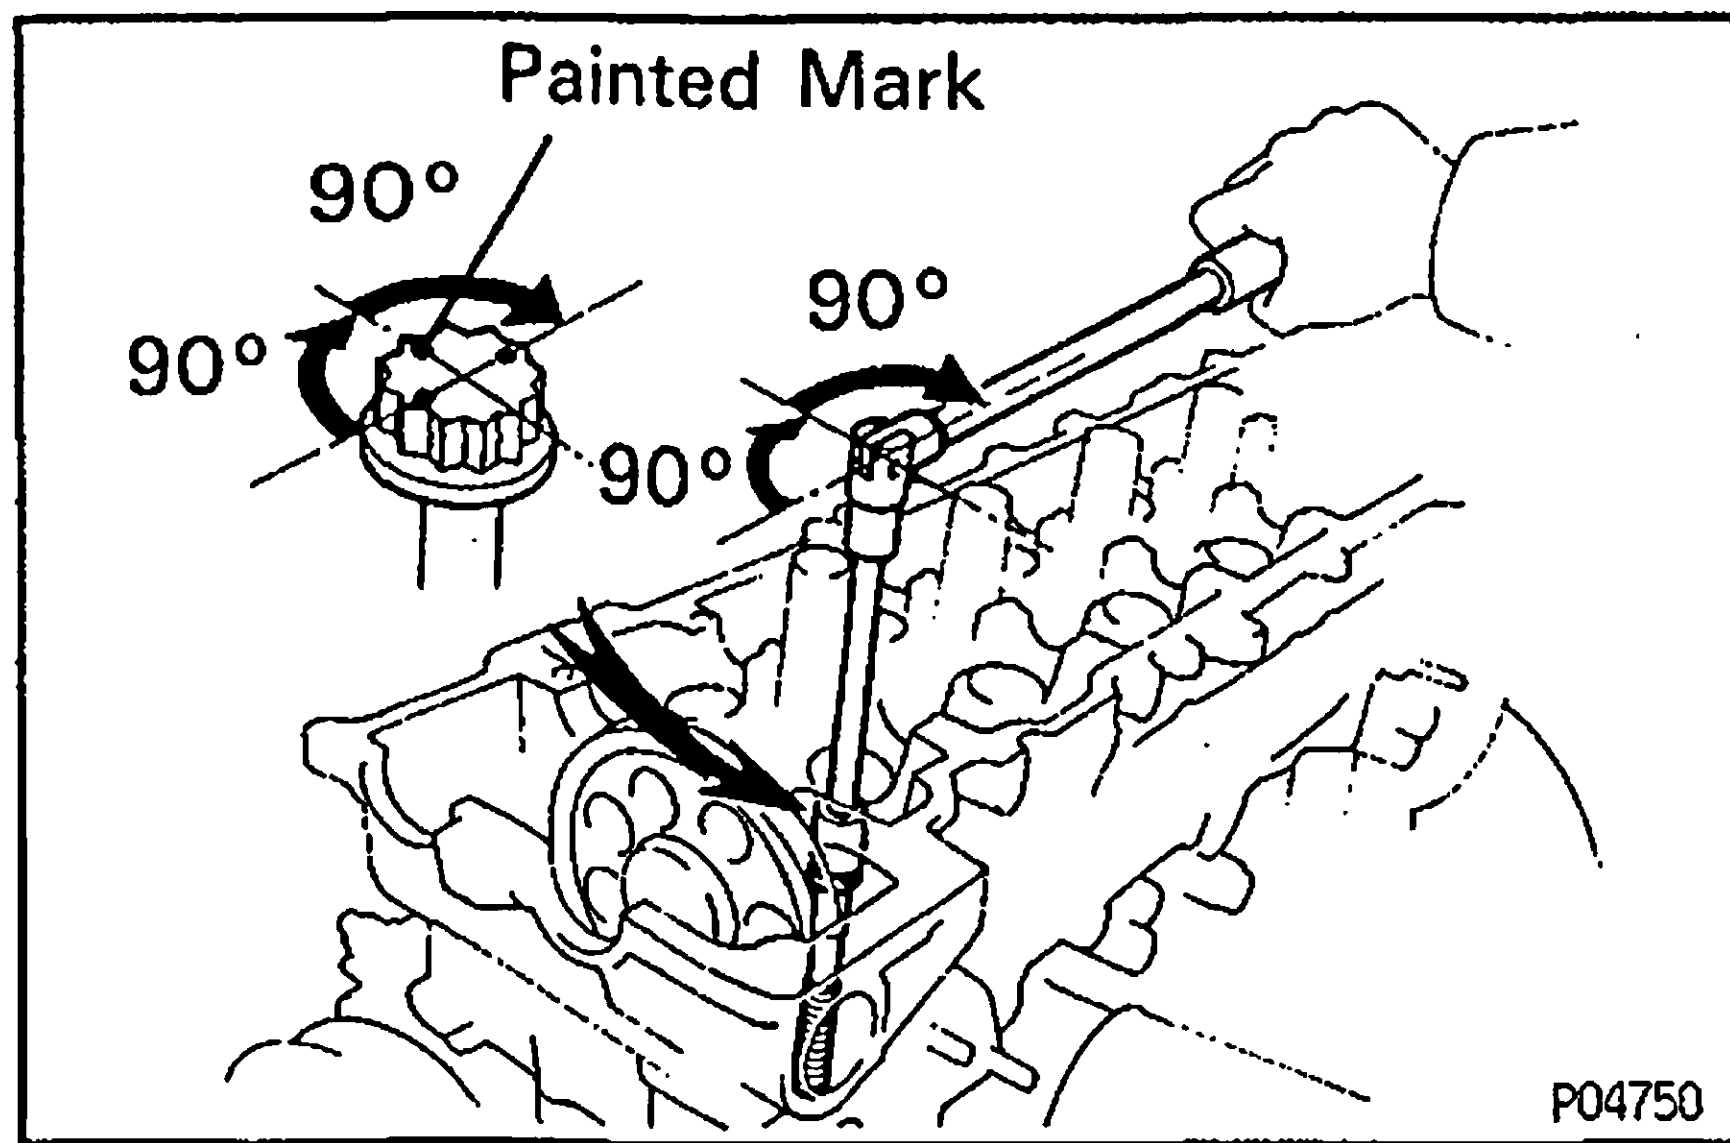


- (d) Retighten the cylinder head bolts 90° in the numerical order shown.
- (e) Retighten cylinder head bolts by an additional 90°.
- (f) Check that the painted mark is now facing rearward.

EG

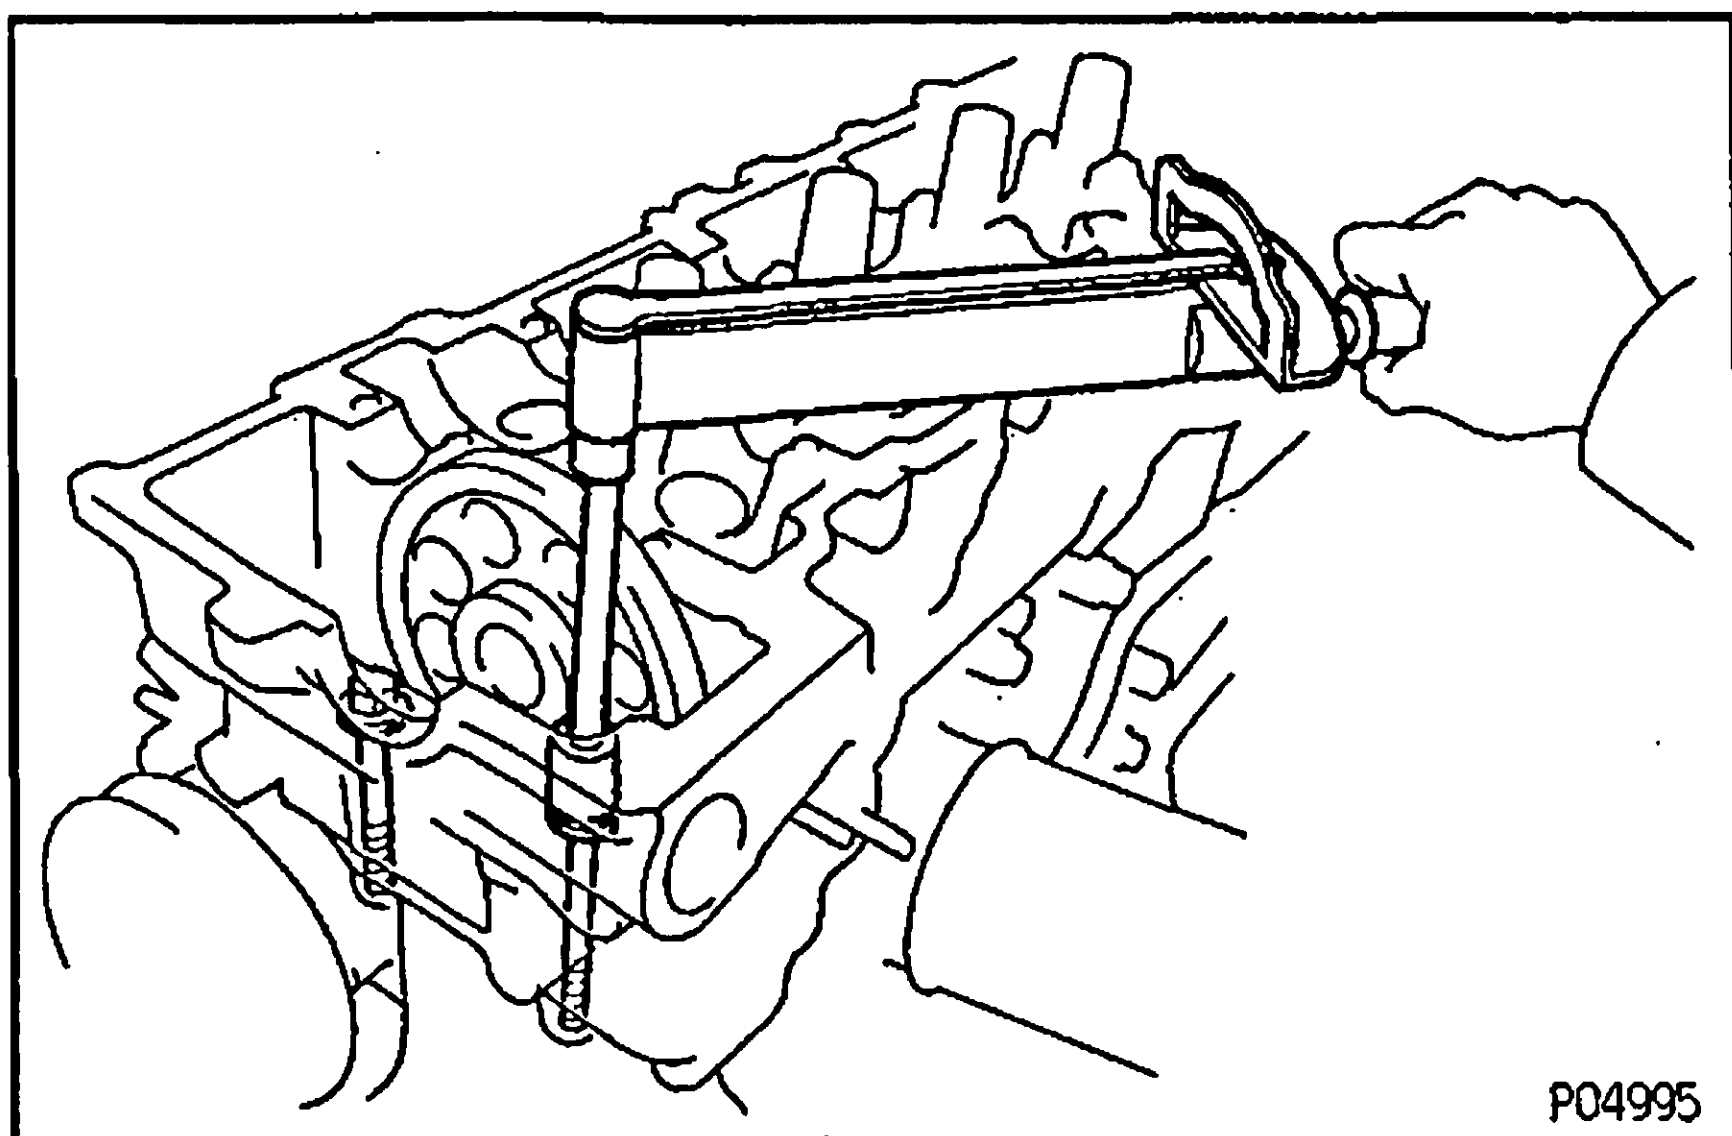


- (g) Install and torque the two mounting bolts.
Torque: 21N·m (210kgf·cm, 15ft·lbf)

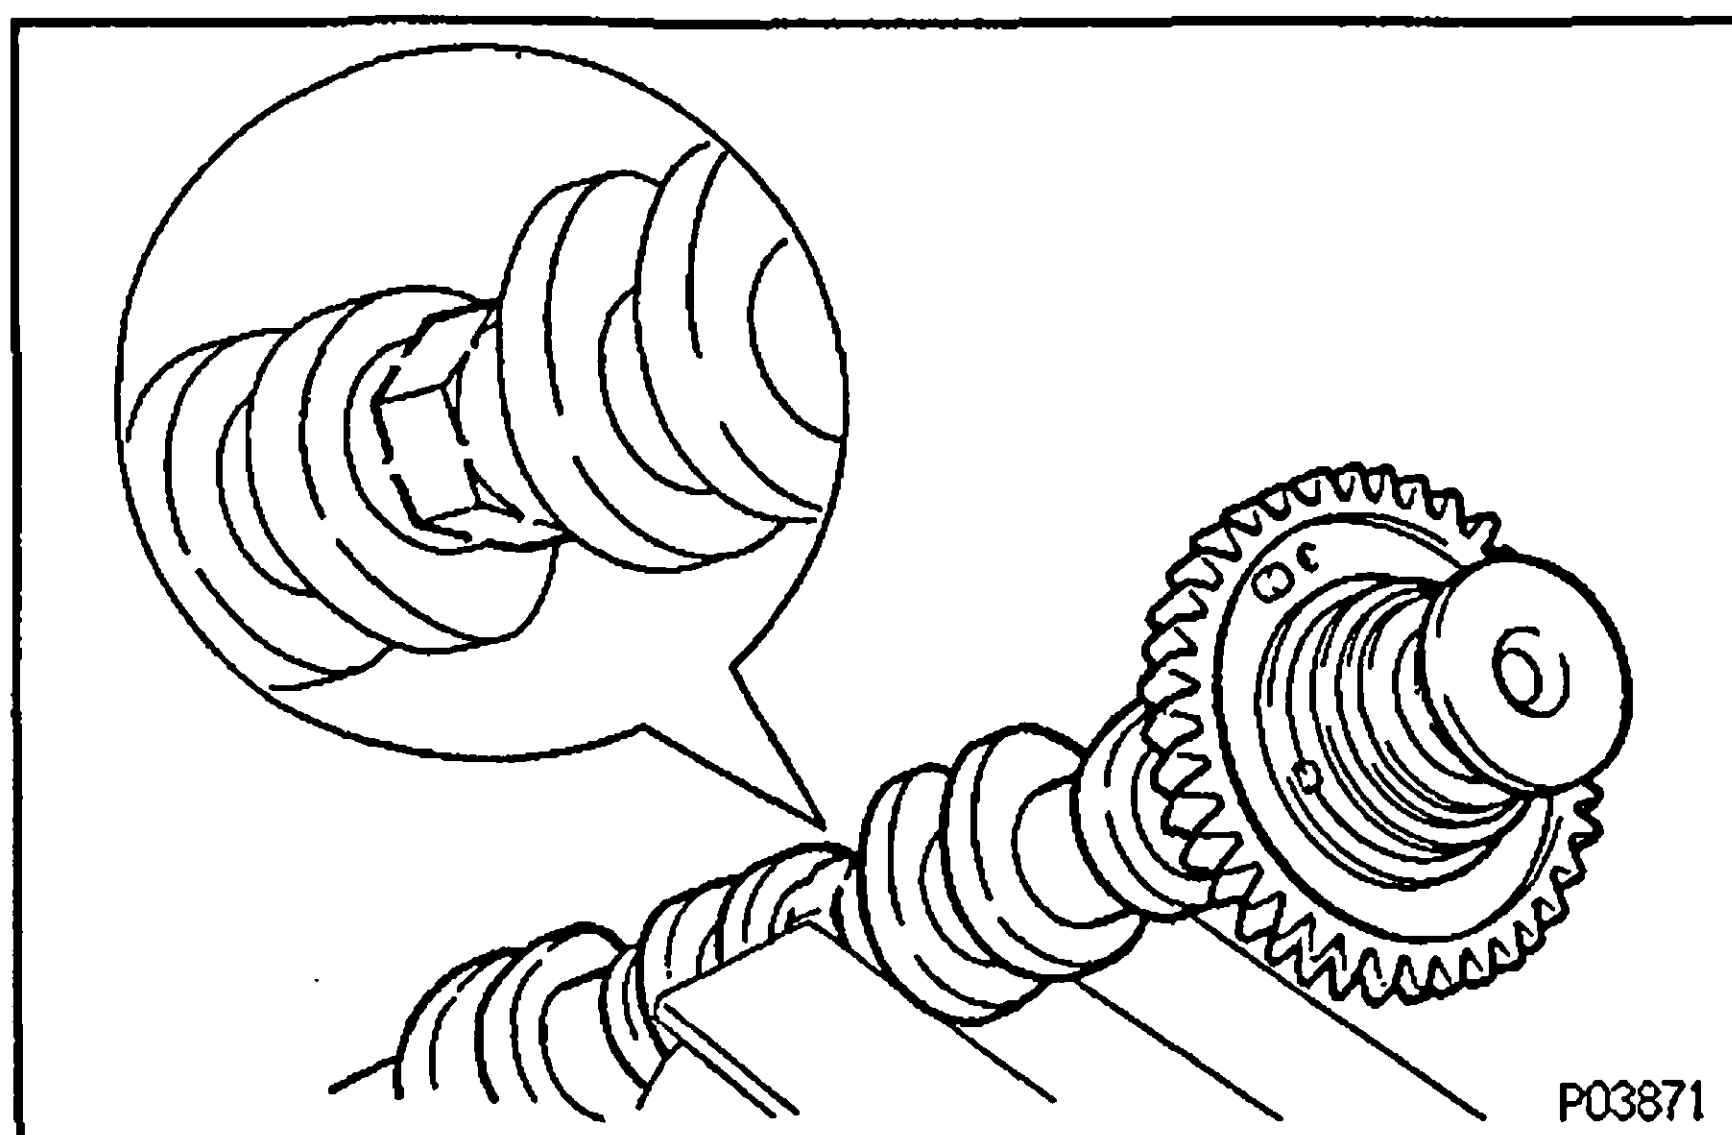

2. ASSEMBLY EXHAUST CAMSHAFT


- (a) Mount the hexagon wrench head portion of the camshaft in a vise.

NOTICE: Be careful not to damage the camshaft.

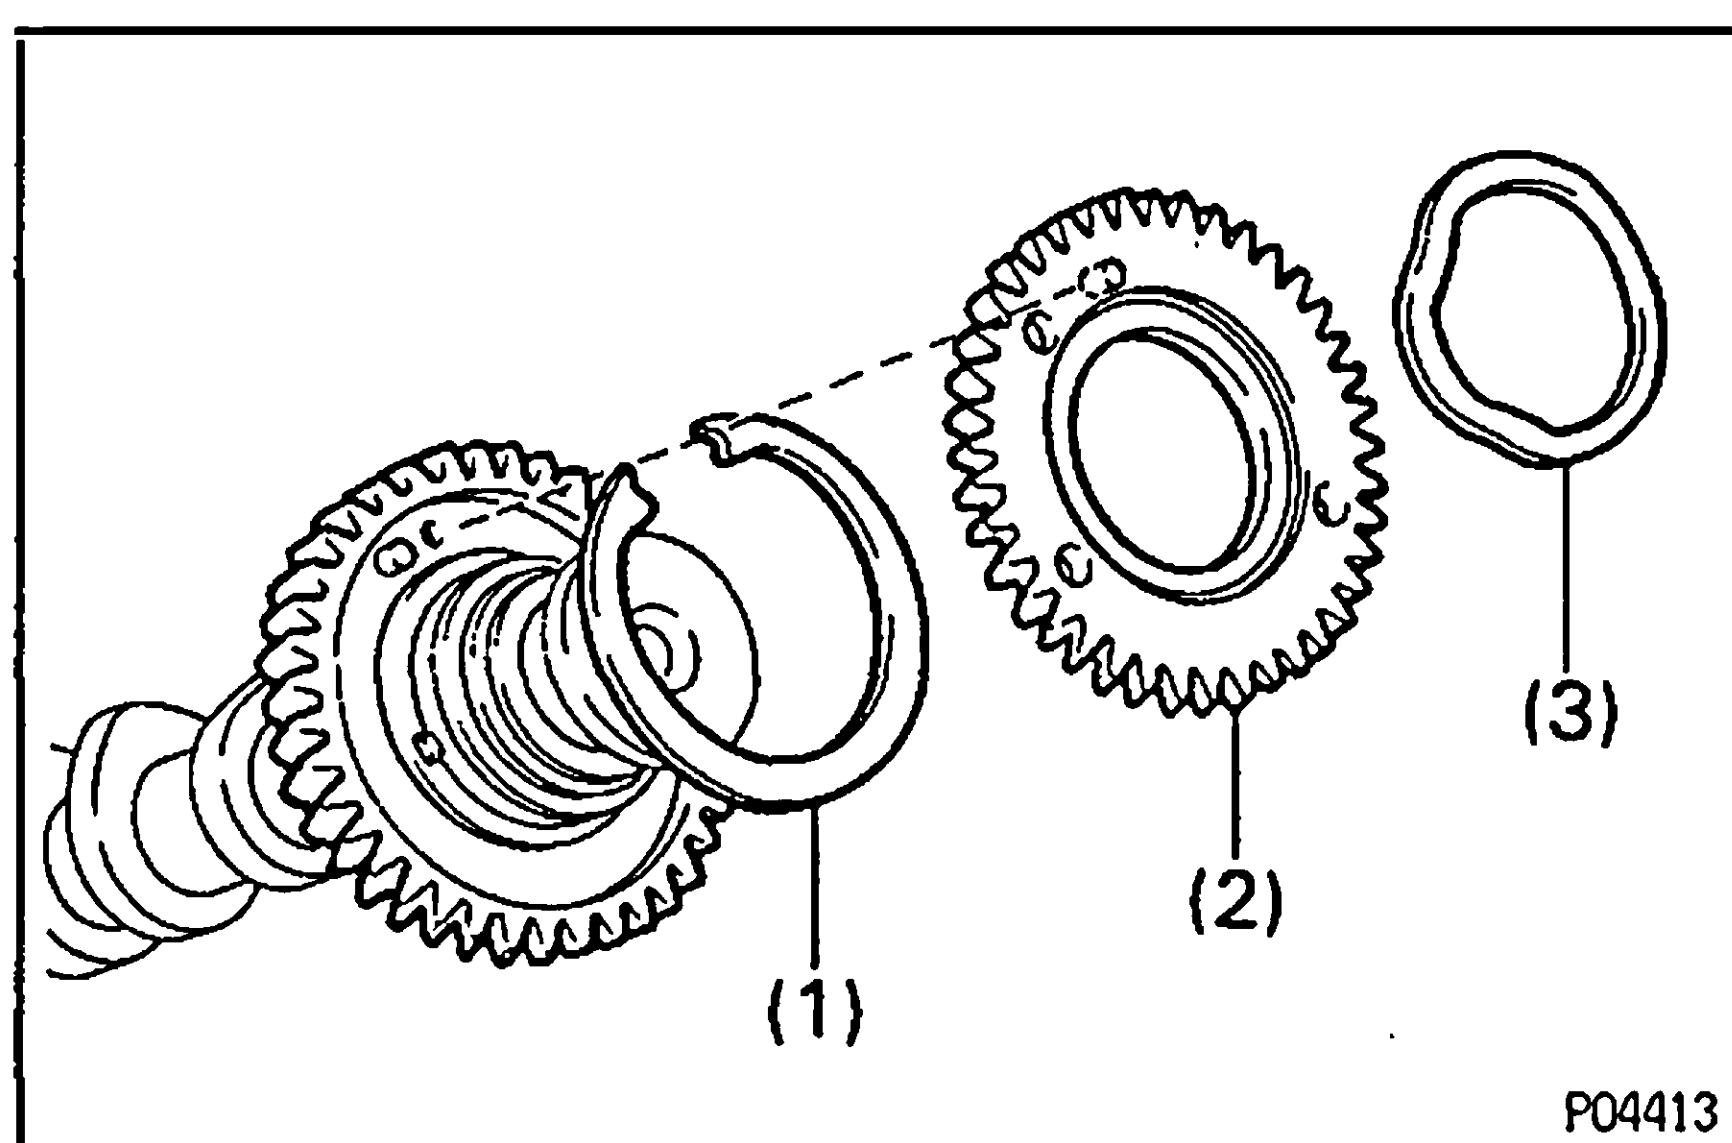


- (b) Install the following parts:
 - (1) Camshaft gear spring
 - (2) Camshaft sub—gear
 - (3) Wave washer

HINT: Align the pins on the gears with the spring ends.

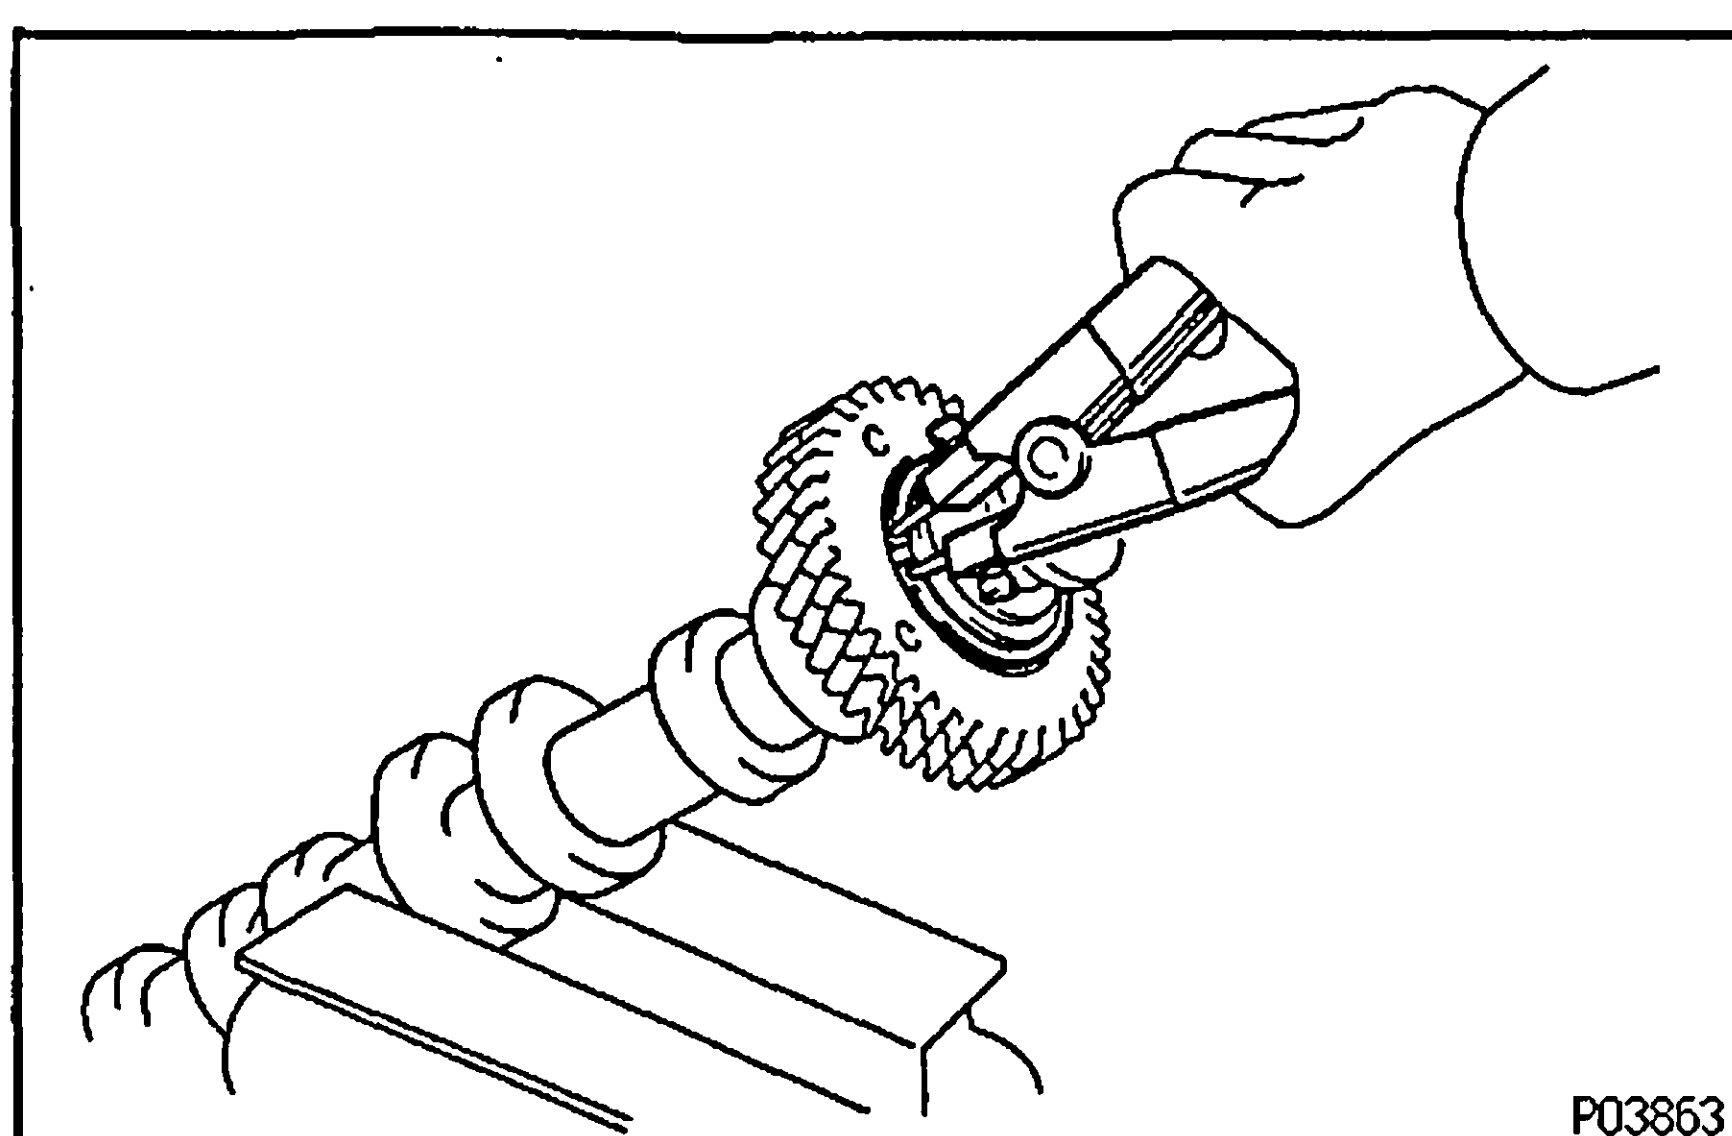


- (c) Using snap ring pliers, install the snap ring.

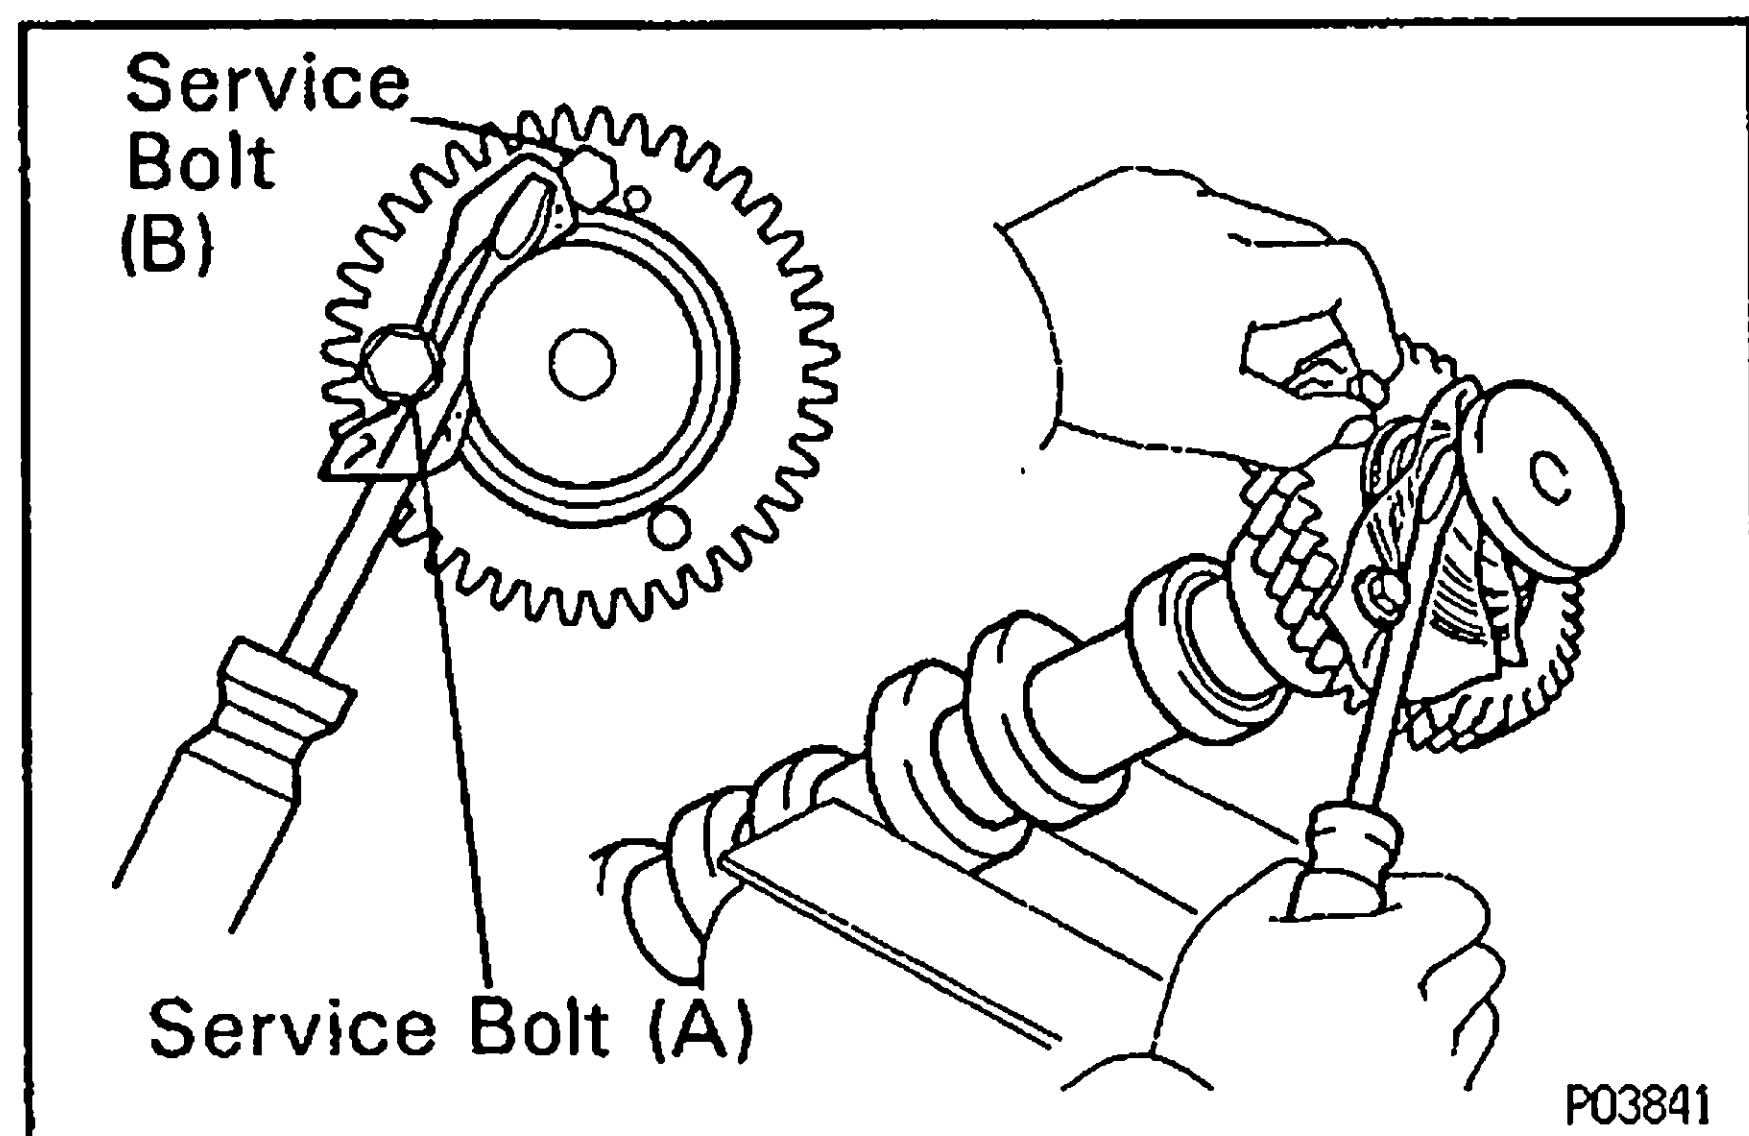


- (d) Insert a service bolt (A) into the service hole of the camshaft sub—gear.
 - (e) Using a screwdriver, align the holes of the camshaft main gear and sub—gear by turning camshaft sub—gear clockwise, and install a service bolt (B).
- NOTICE:** Be careful not to damage the camshaft.

3. INSTALL CAMSHAFTS


NOTICE: Since the thrust clearance of the camshaft is small, the camshaft must be kept level while it is being installed. If the camshaft is not kept level, the portion of the cylinder head receiving the shaft thrust may crack or be damaged, causing the camshaft to seize or break. To avoid this, the following steps should be carried out.

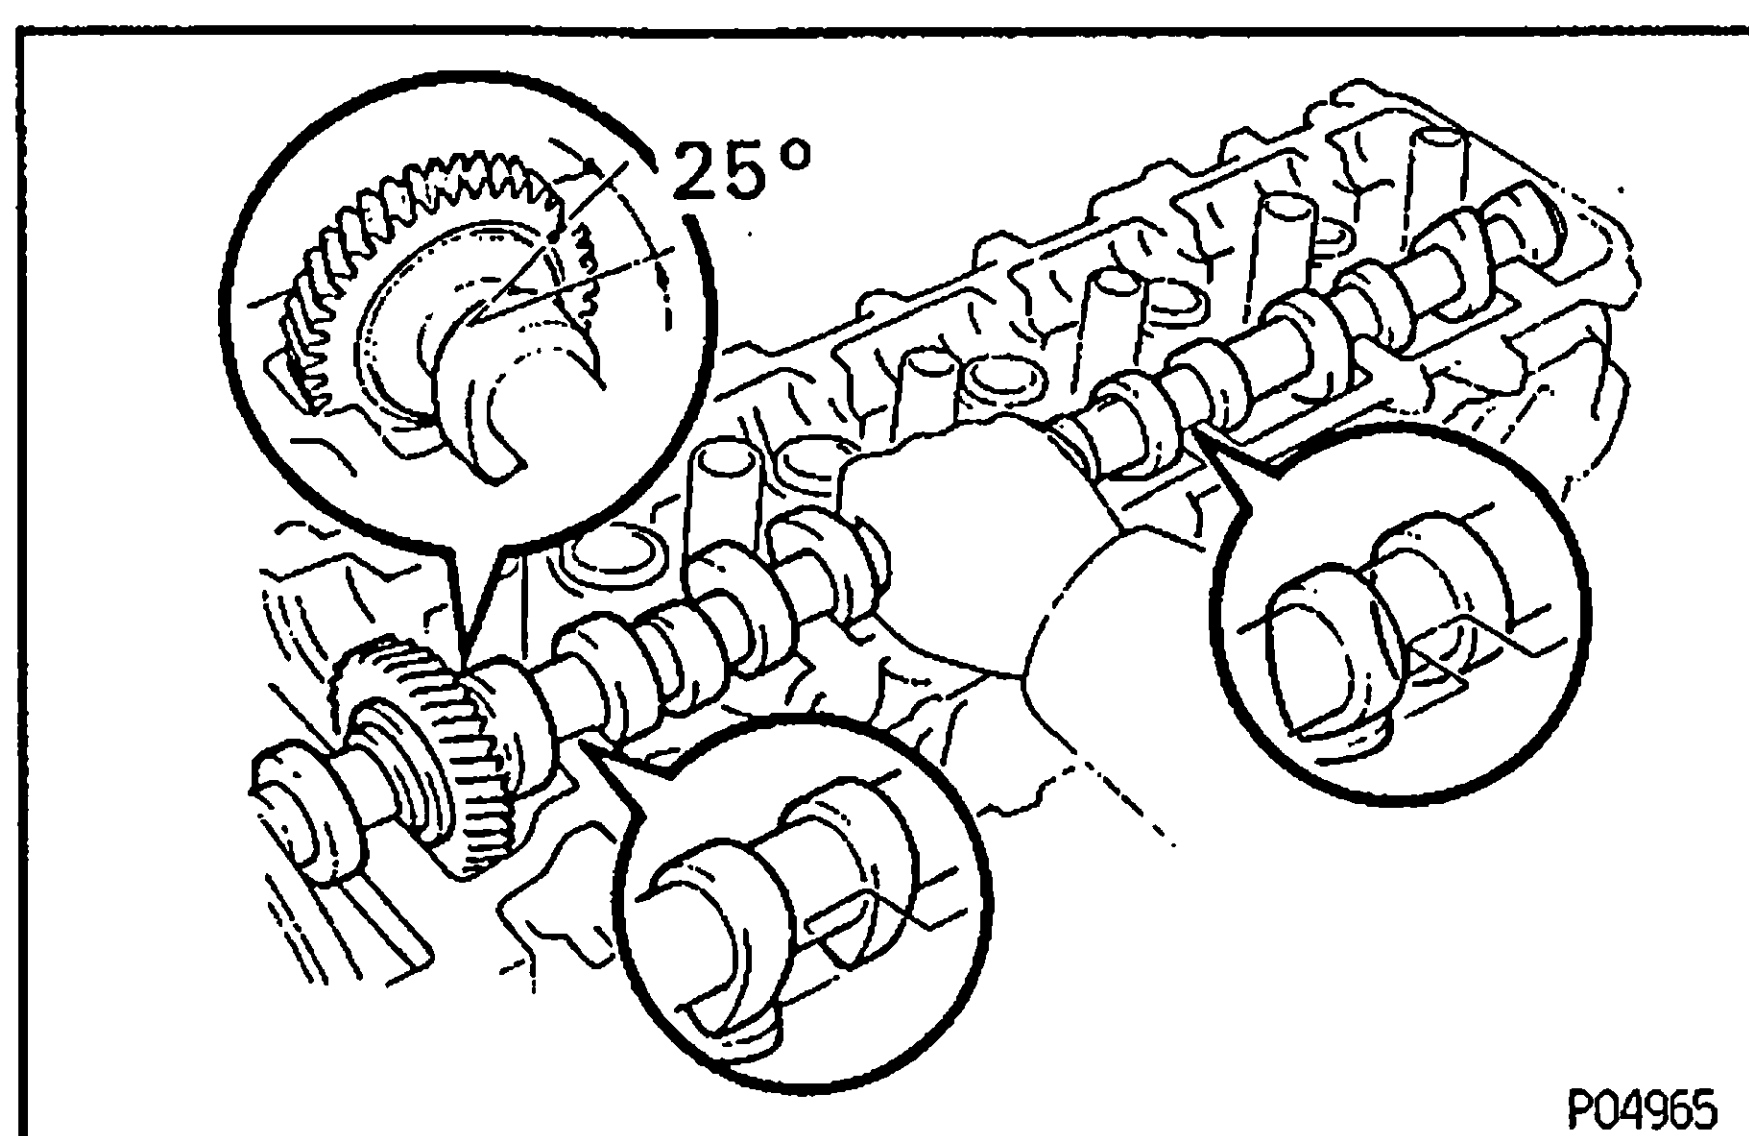


- A. Install intake camshaft**
 - (a) Apply engine oil to the thrust portion of the intake camshaft.
 - (b) Lightly place the intake camshaft on top of the cylinder head as shown in the illustration so that the No. 1 and No.4 cylinder cam lobes face downward.
 - (c) Lightly push the camshaft towards the front without applying excessive force.

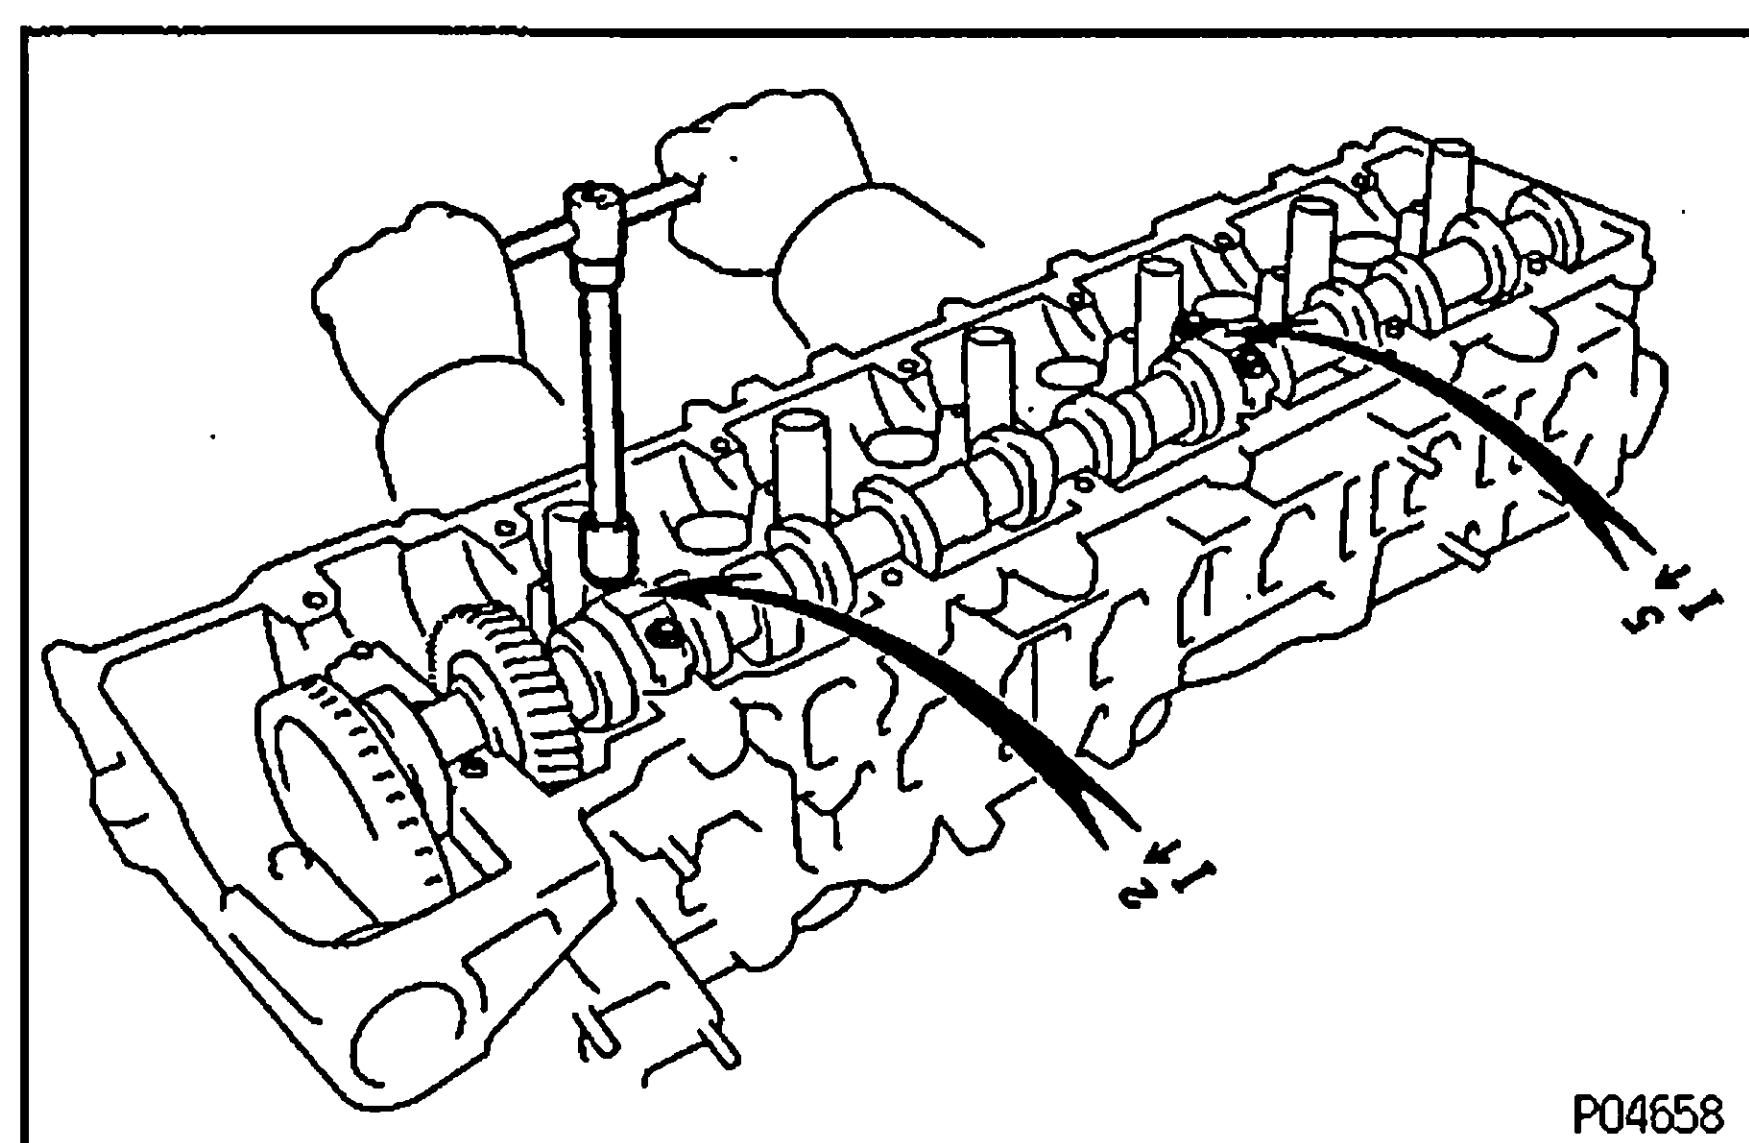

- (d) Place the No.2 and No.5 bearing caps in their proper location.
- (e) Temporarily tighten these bearing cap bolts uniformly and alternately in several passes until the bearing caps are snug with the cylinder head.

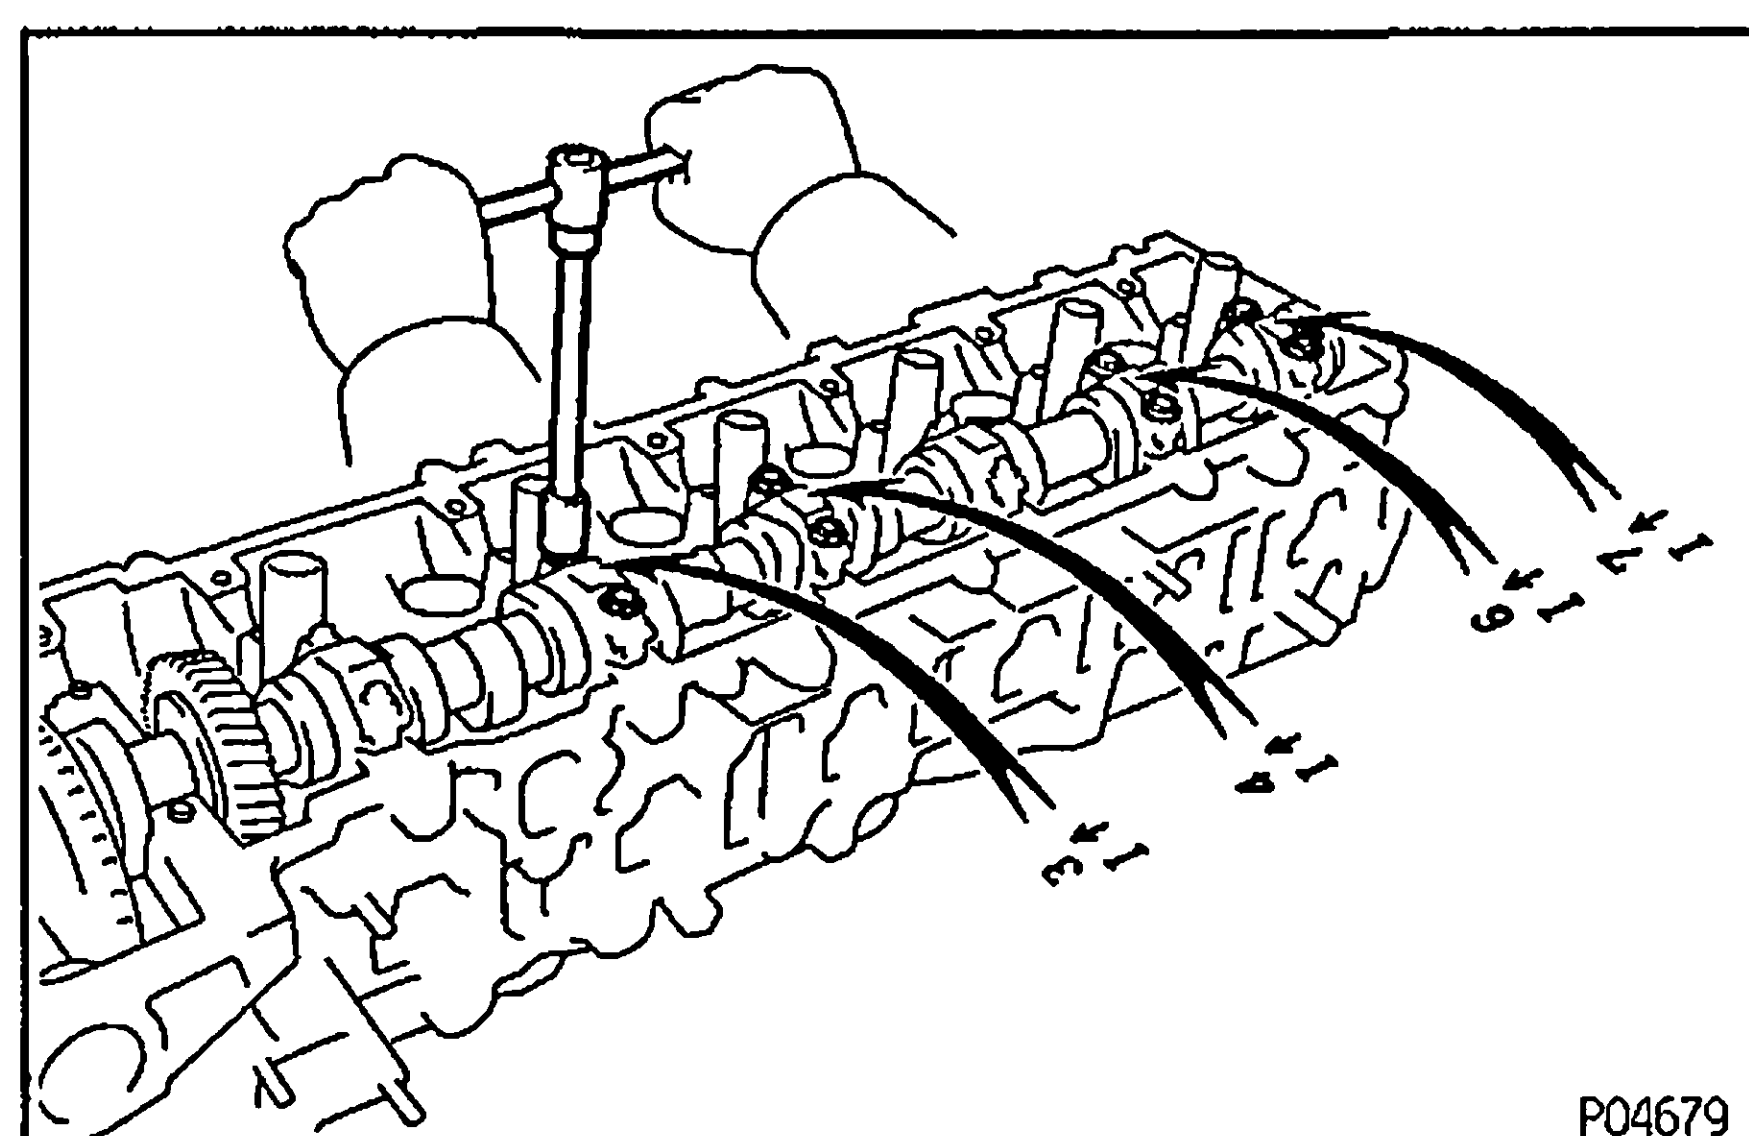


- (f) Place the No.3, No.4, No.6 and No.7 bearing caps in their proper location.
- (g) Temporarily tighten these bearing cap bolts, alternately tightening the left and right bolts uniformly.

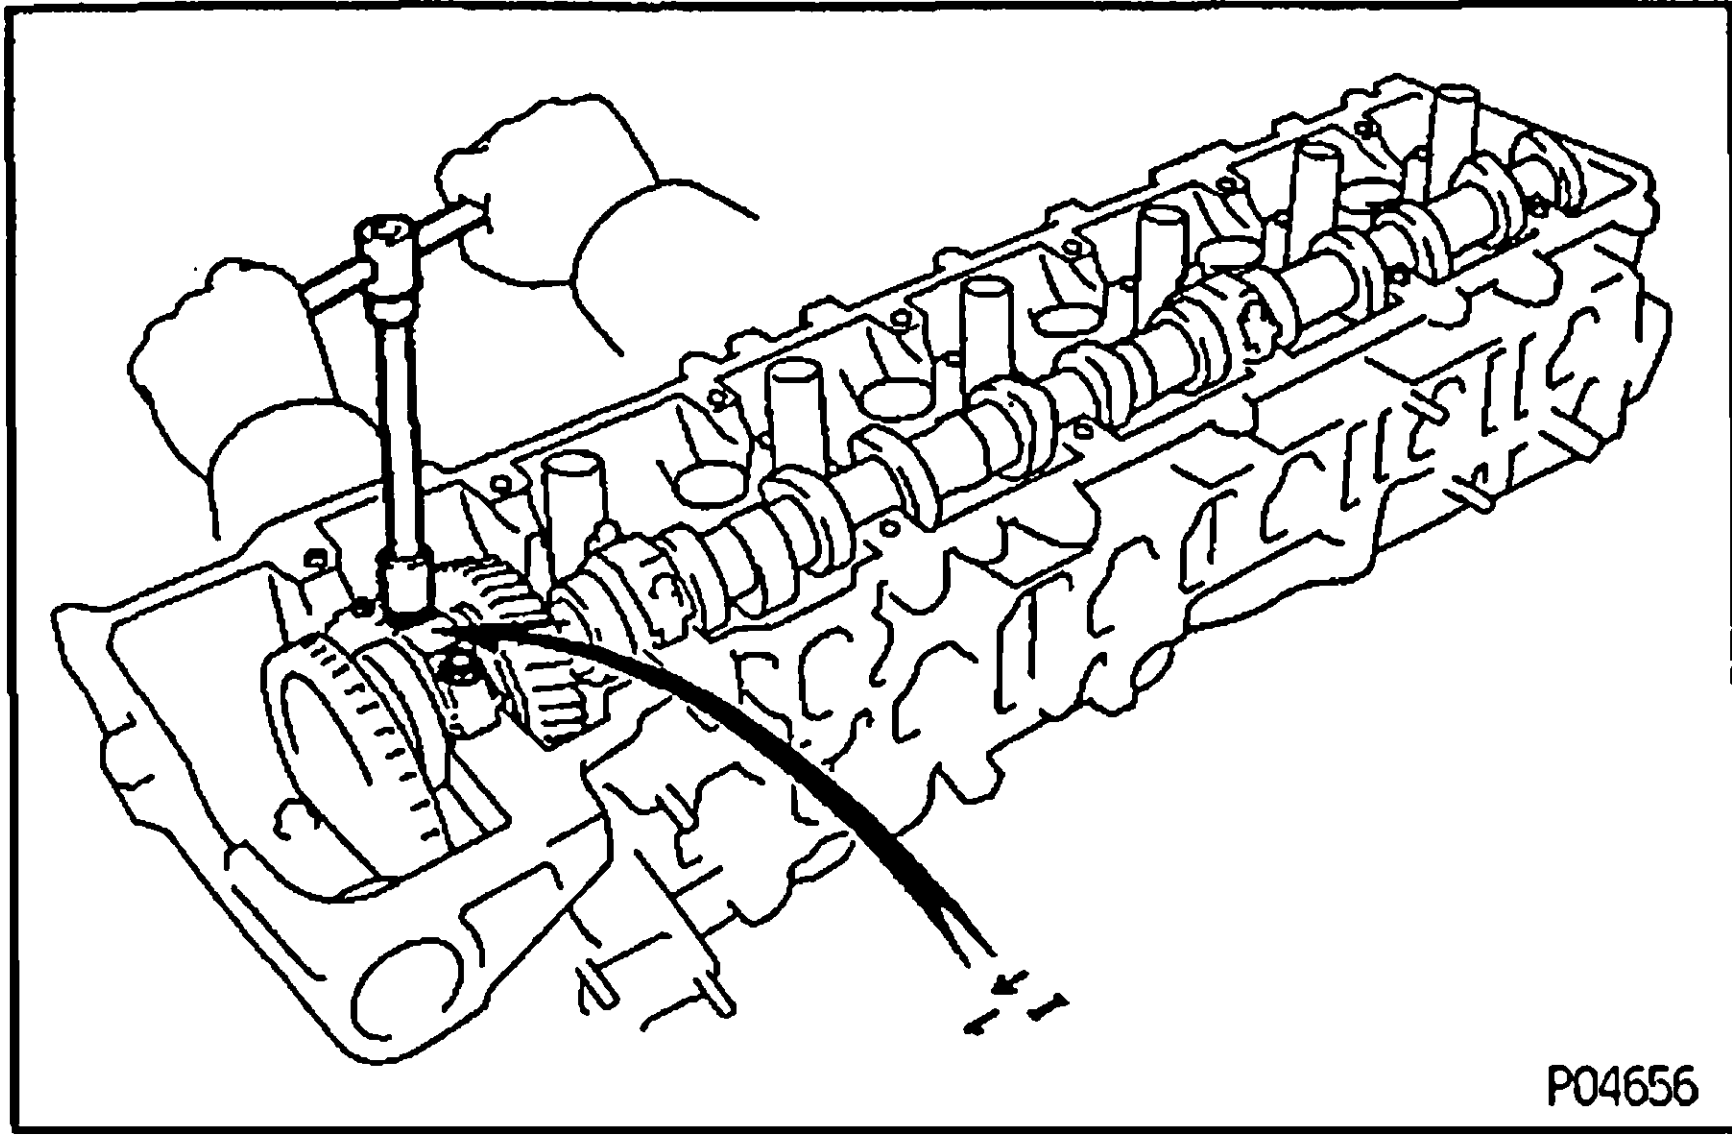


- (h) Place the No.1 bearing cap in its proper location. When doing this, check that there is no gap between the cylinder head and the contact surface of bearing cap.
- (i) Temporarily tighten the bearing cap bolts, alternately tightening the left and right bolts uniformly.

EG

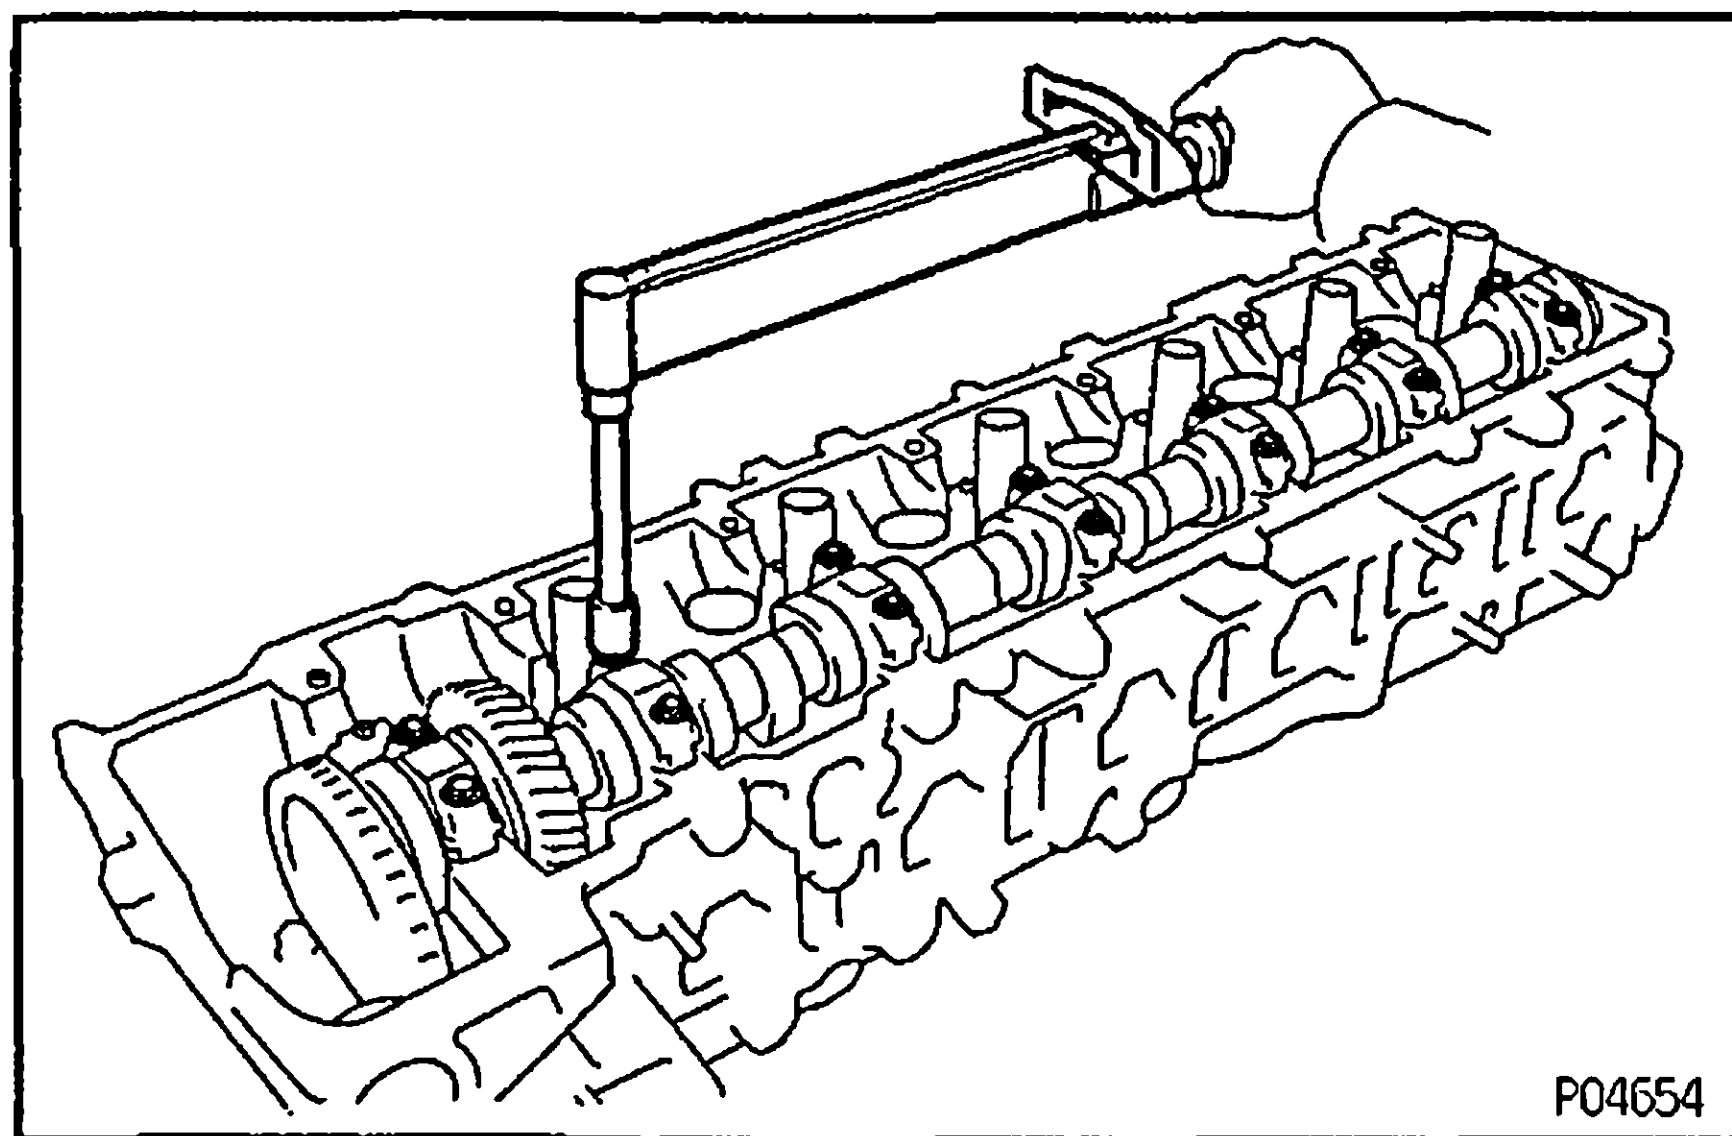


- (j) Uniformly tighten the fourteen bearing cap bolts in several passes.
Torque: 16 N·m (160 kgf·cm, 12 ft·lbf)

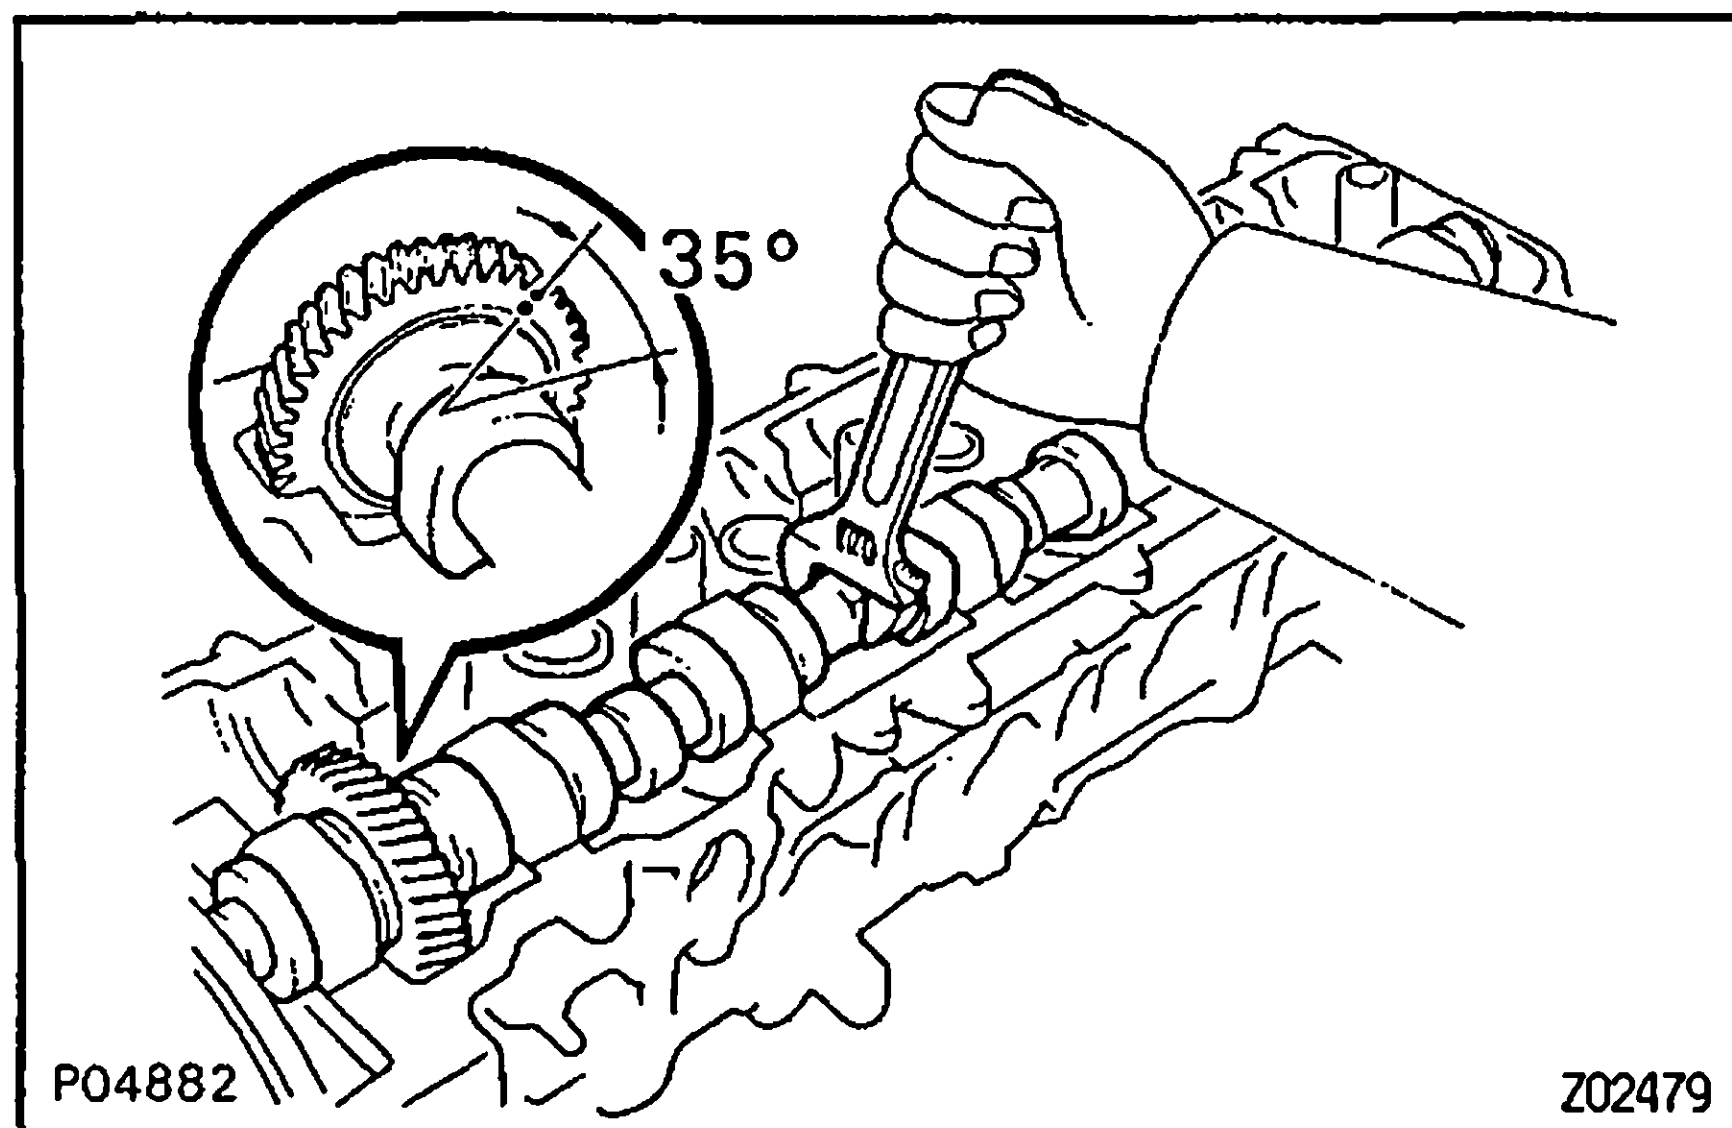


B. Install exhaust camshaft


- (a) Set the timing mark (two dot marks) of the camshaft drive gear at approx. 35° angle by turning the hexagon wrench head portion of the intake camshaft with a wrench.

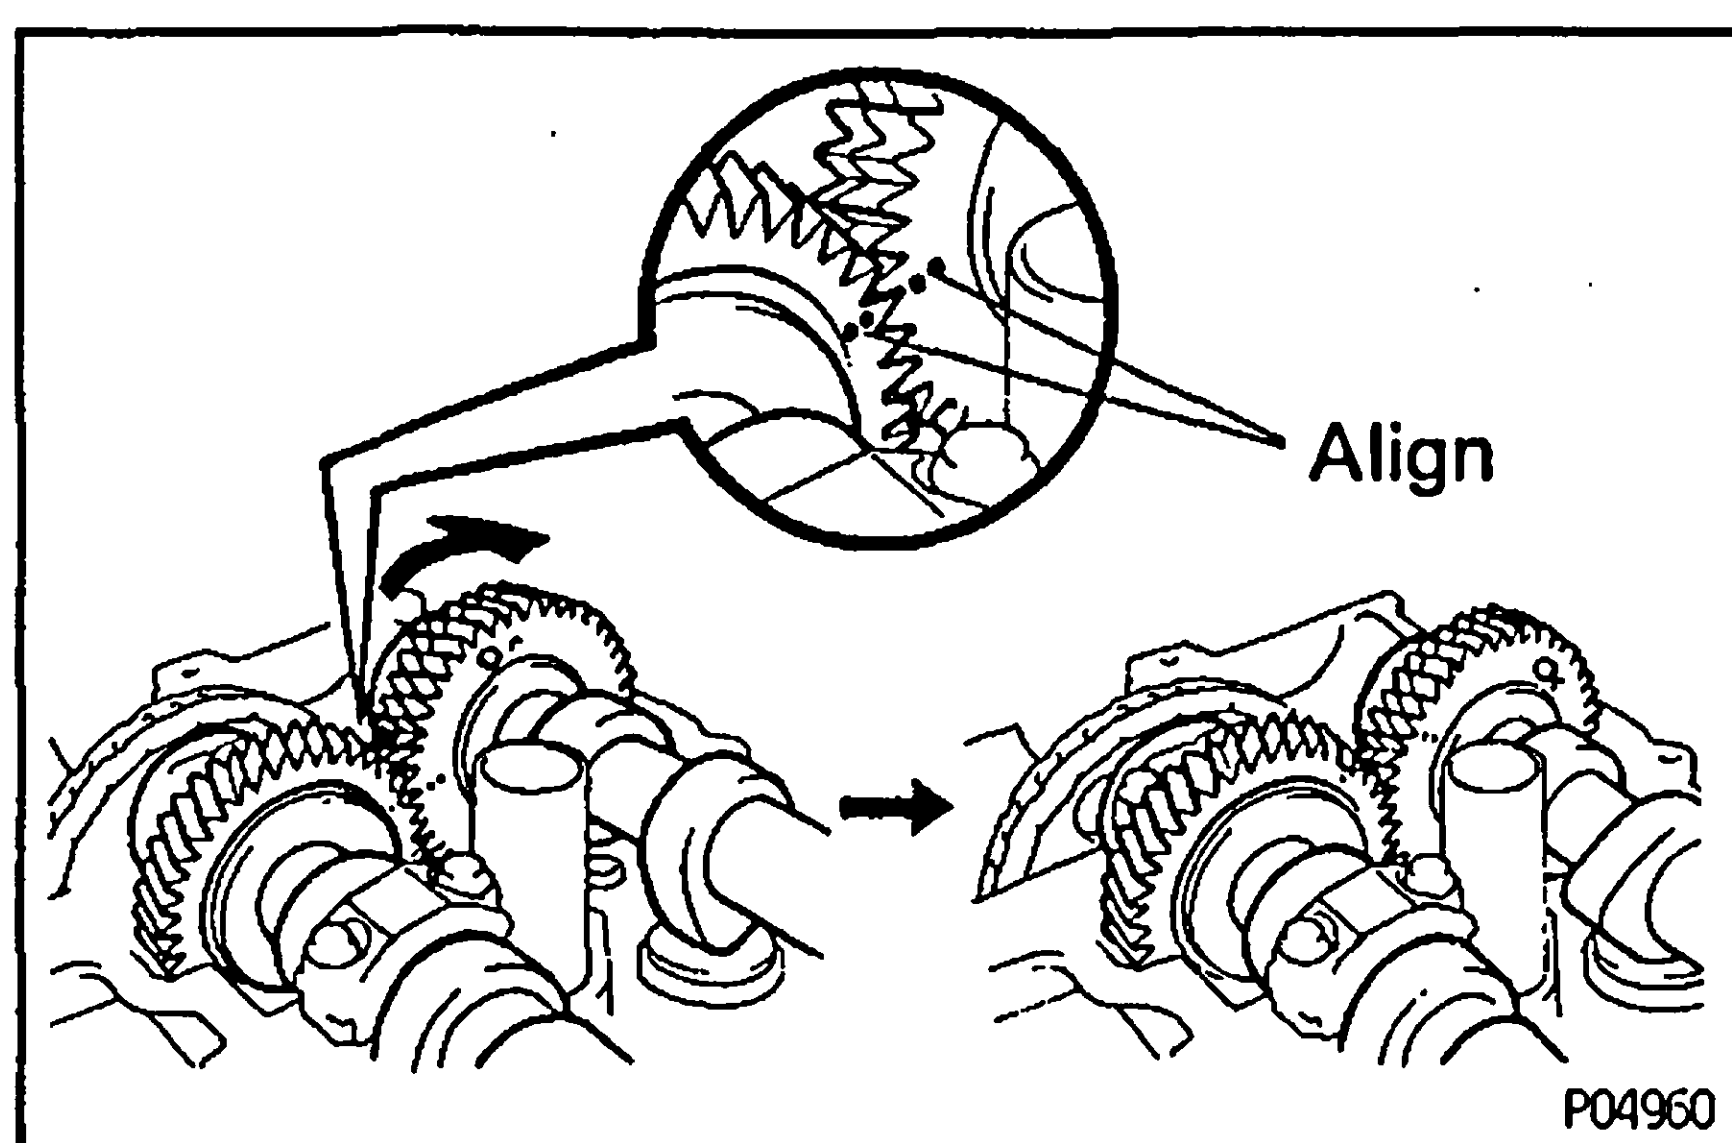


- (b) Apply engine oil to thrust portion of the exhaust camshaft.
- (c) Engage the exhaust camshaft gear to the intake camshaft gear by matching the timing marks (two dot marks) on each gear.
- (d) Roll down the exhaust camshaft onto the bearing journals while engaging gears with each other.
- (e) Lightly push the intake camshaft towards the front without applying excessive force.

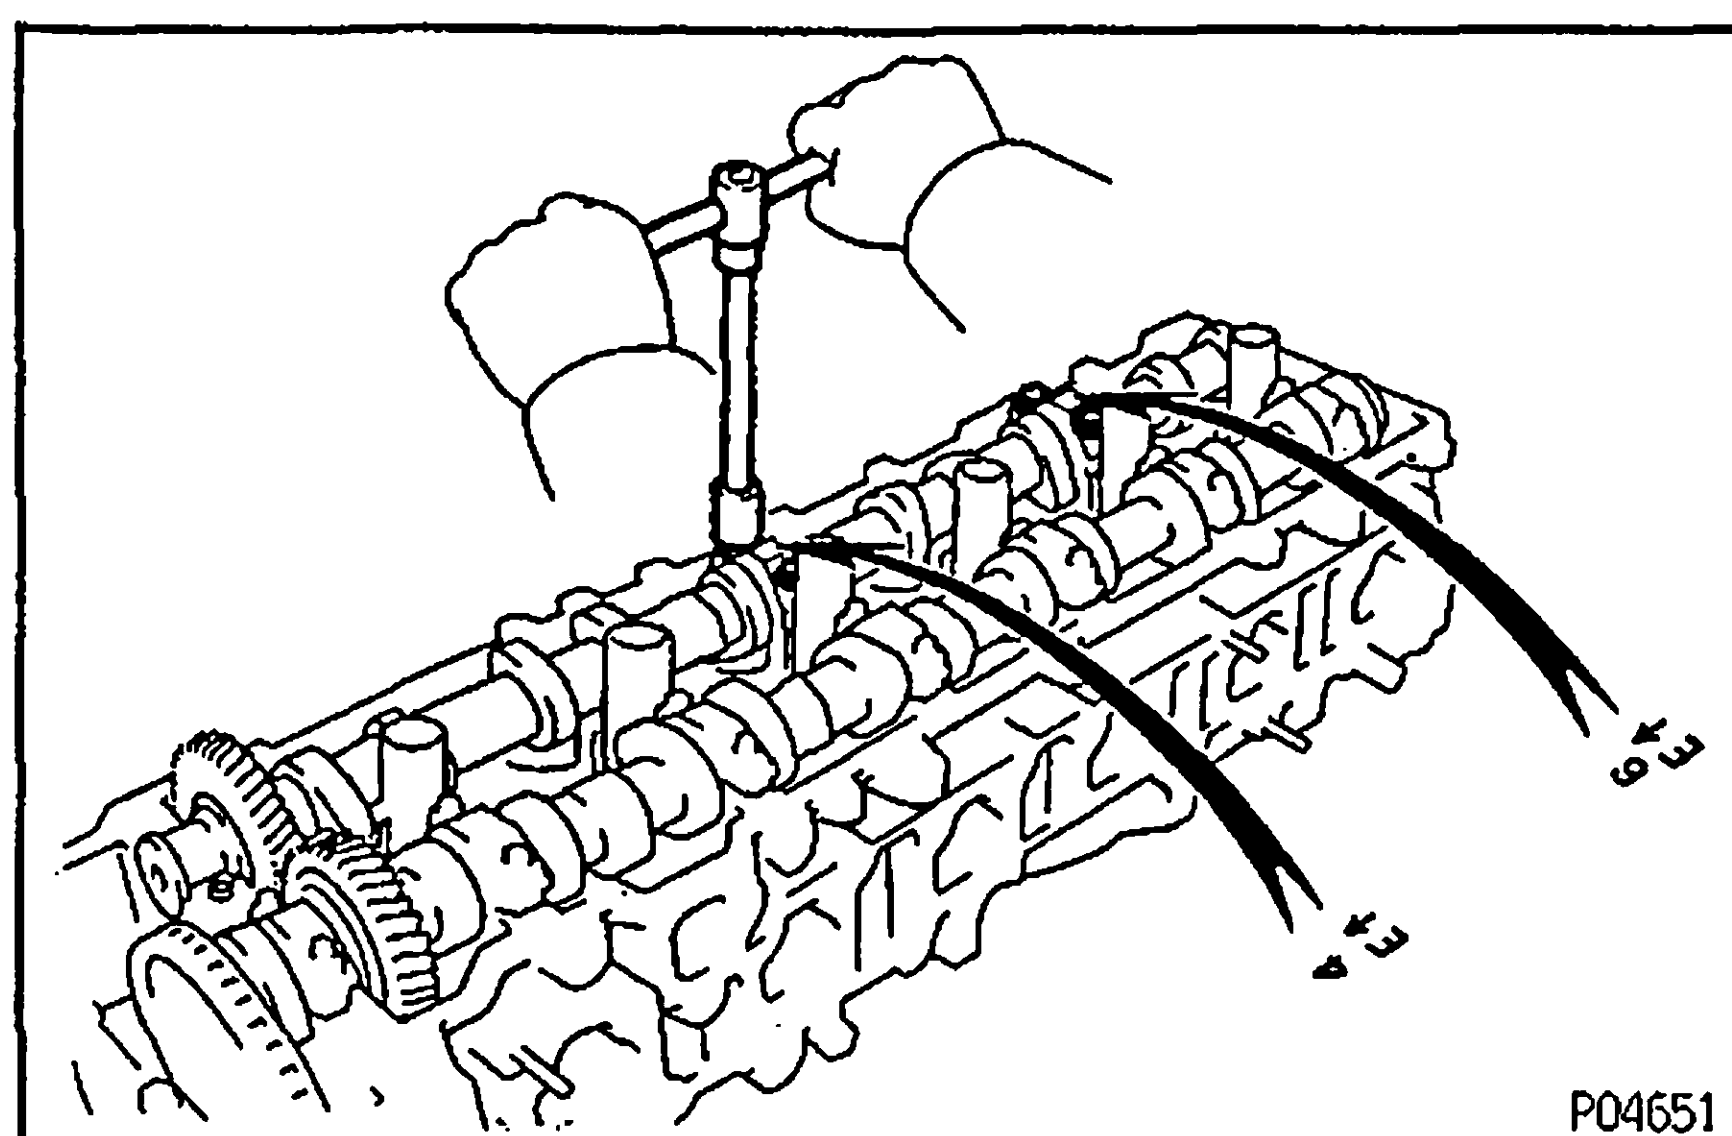


- (f) Install the No.4 and No.6 bearing caps in their proper location.
- (g) Temporarily tighten the bearing cap bolts uniformly and alternately in several passes until the bearing caps are snug with the cylinder head.

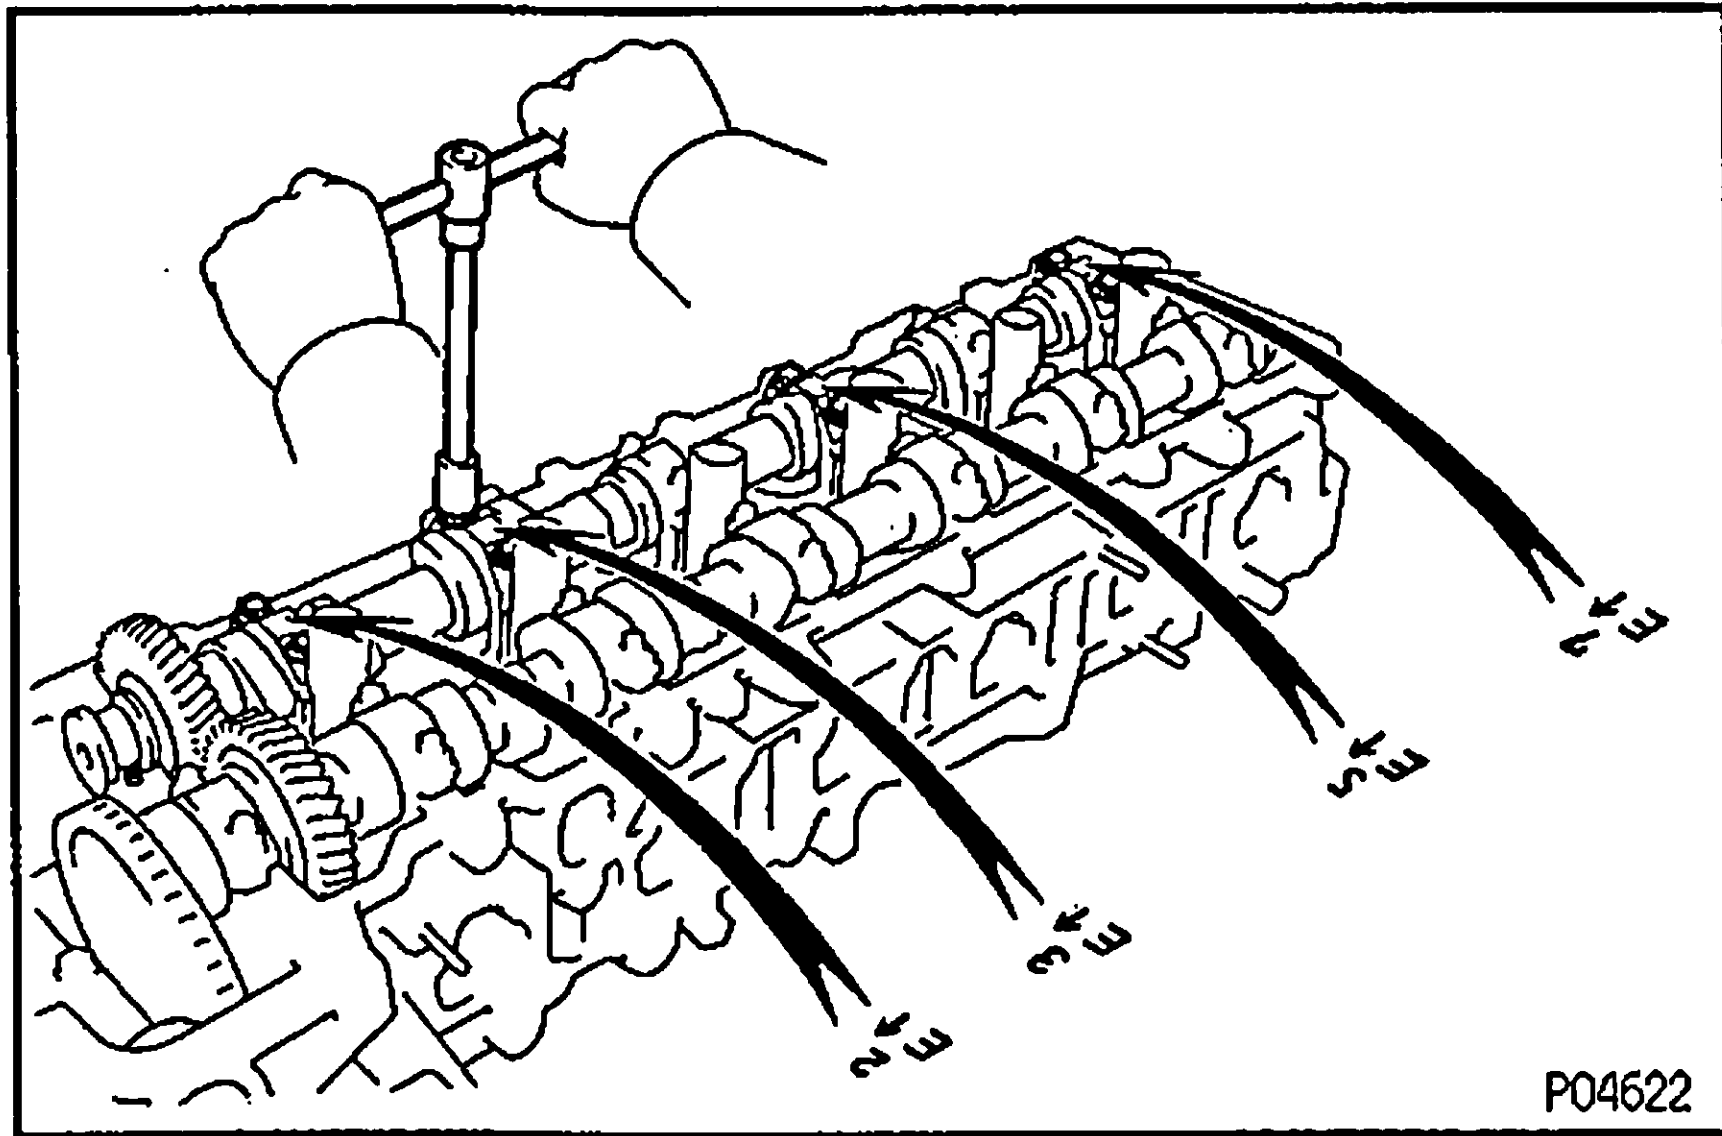


- (h) Place the No.2, No.3, No.5 and No.7 bearing caps in their proper location.
- (i) Temporarily tighten these bearing cap bolts, alternately tightening the left and right bolts uniformly.

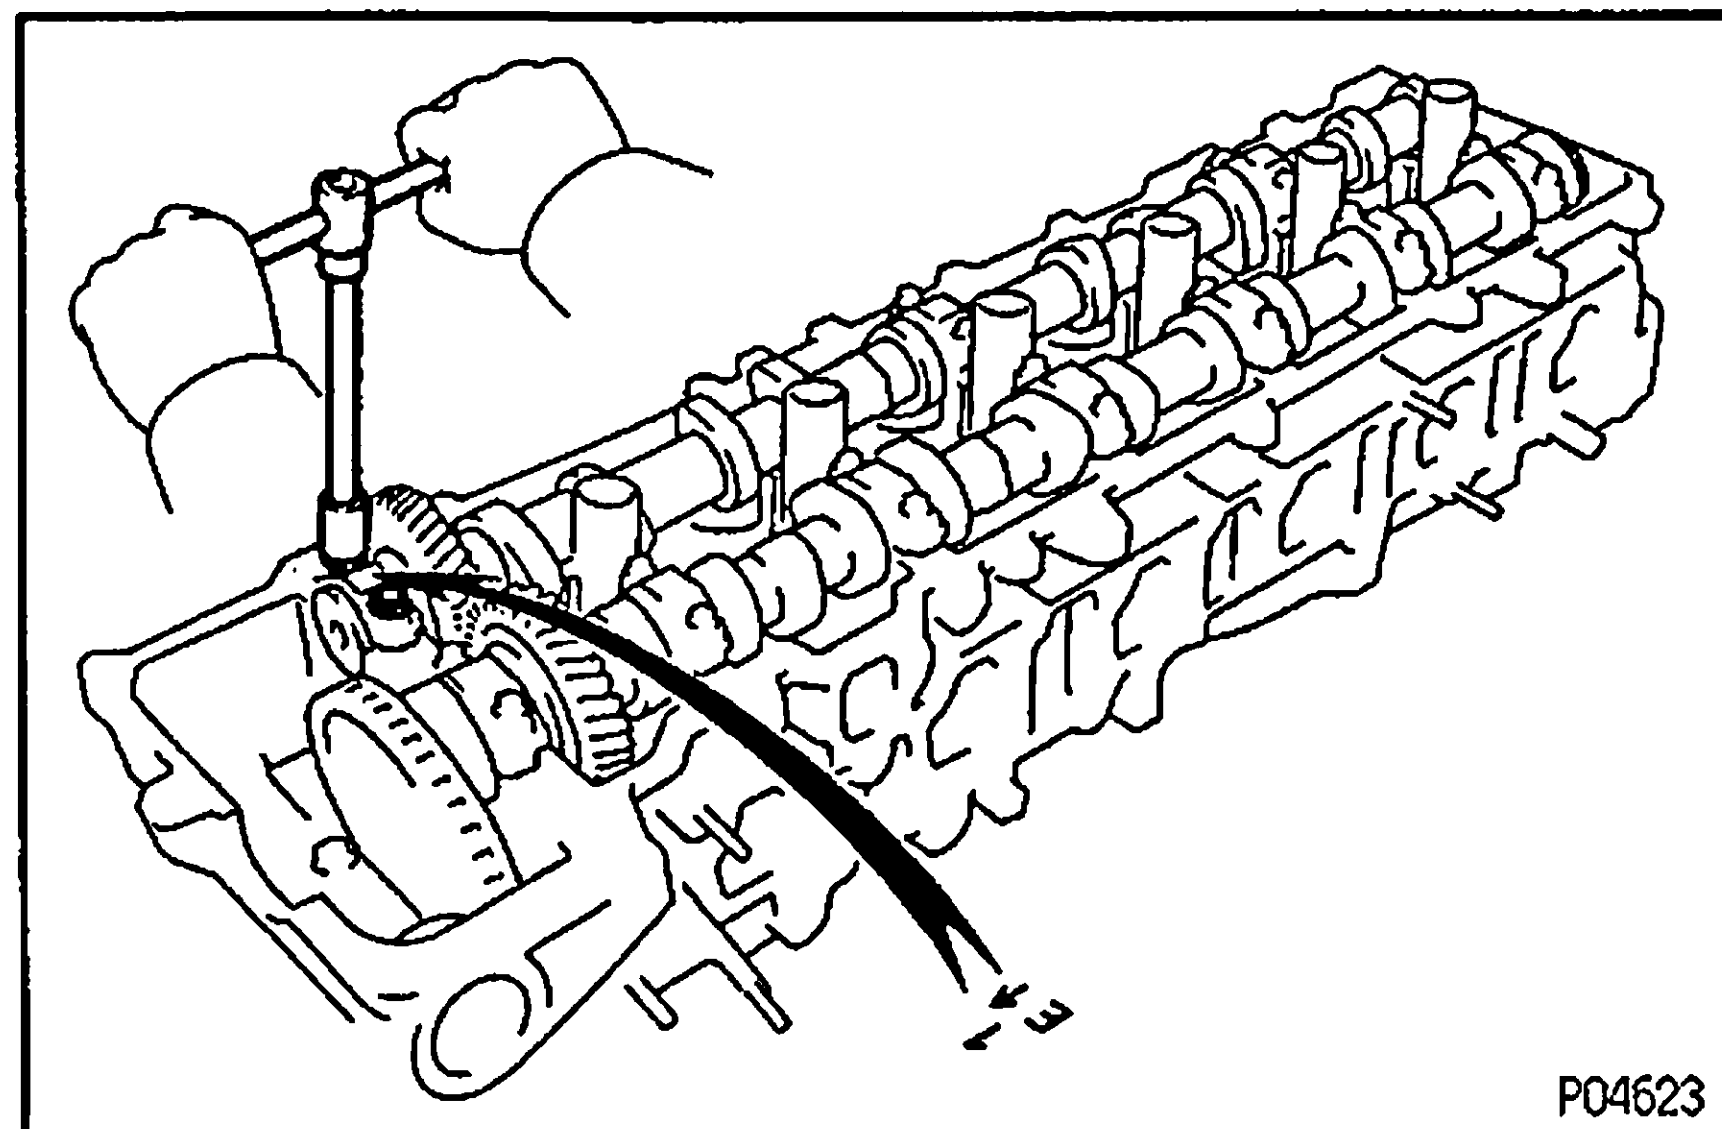


- (j) Place the No.1 bearing cap in its proper location. When doing this, check that there is no gap between the cylinder head and the contact surface of bearing cap.
- (k) Temporarily tighten the bearing cap bolts, alternately tightening the left and right bolts uniformly.

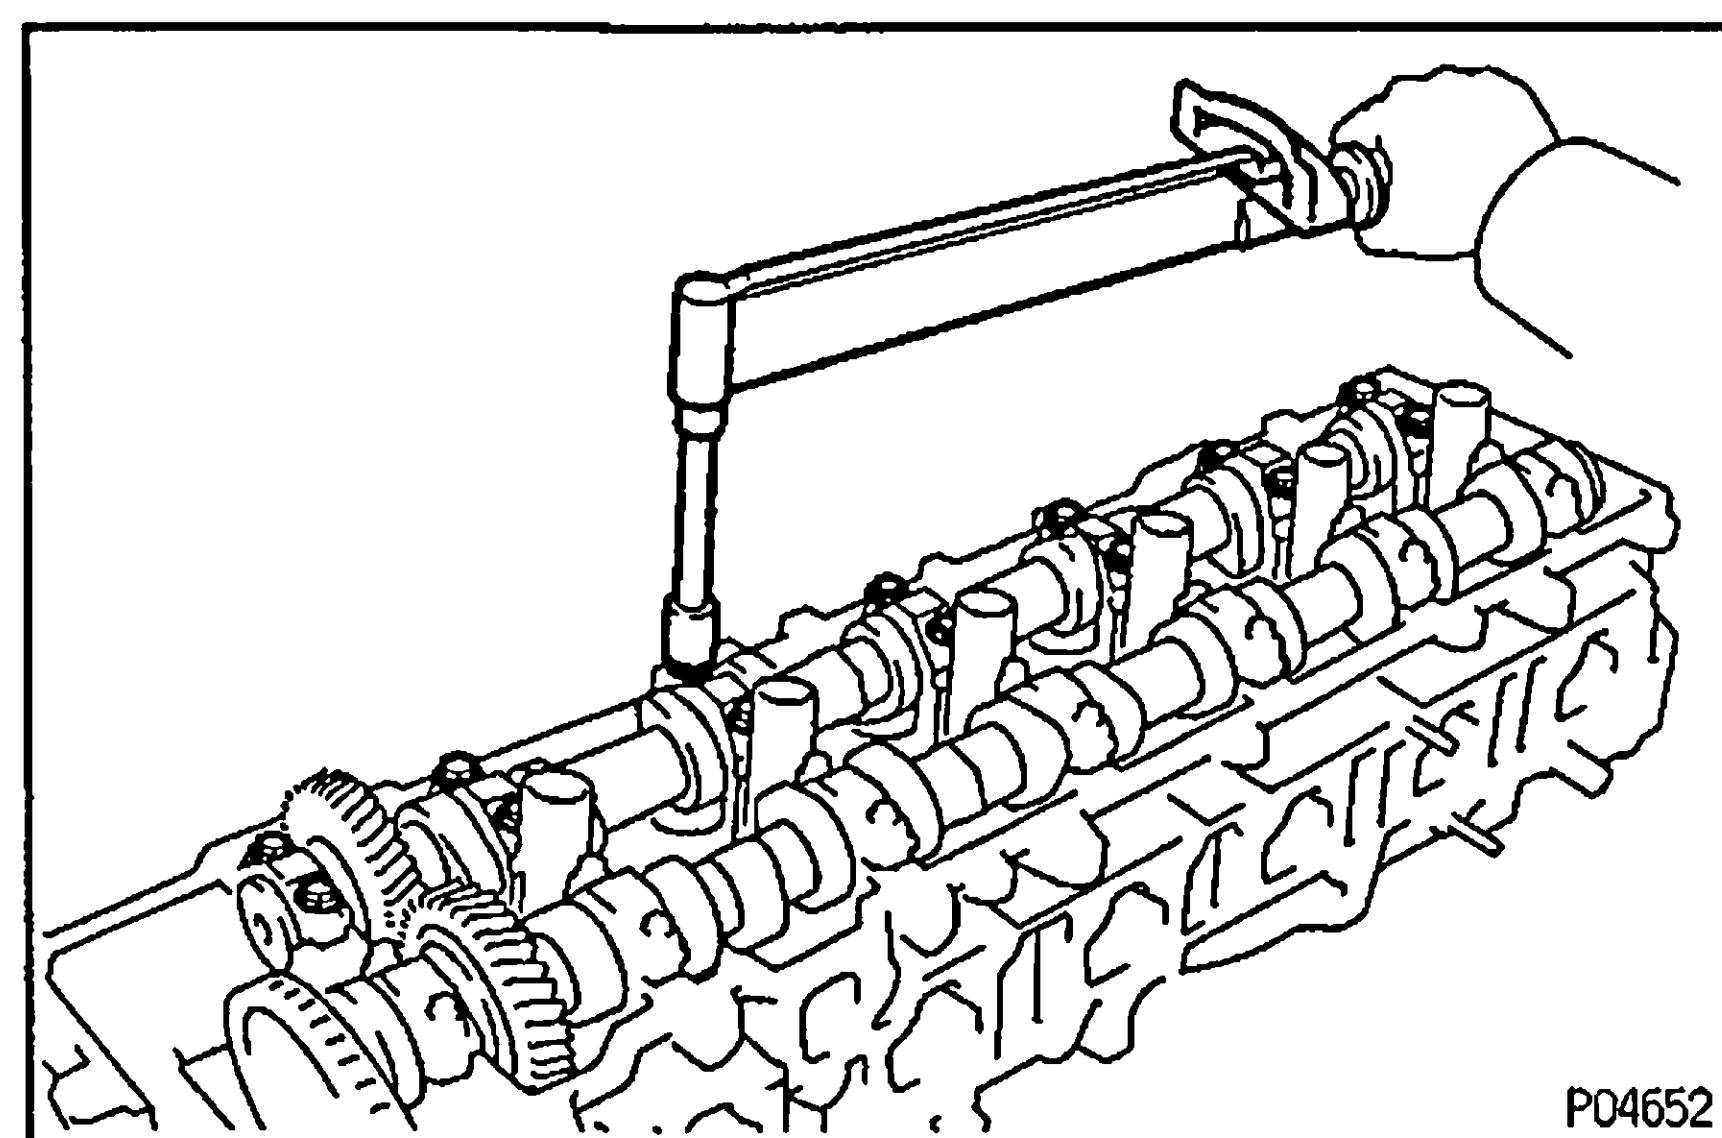


- (l) Uniformly tighten the fourteen bearing cap bolts in several passes.
Torque: 16 N·m (160 kgf·cm, 12 ft·lbf)

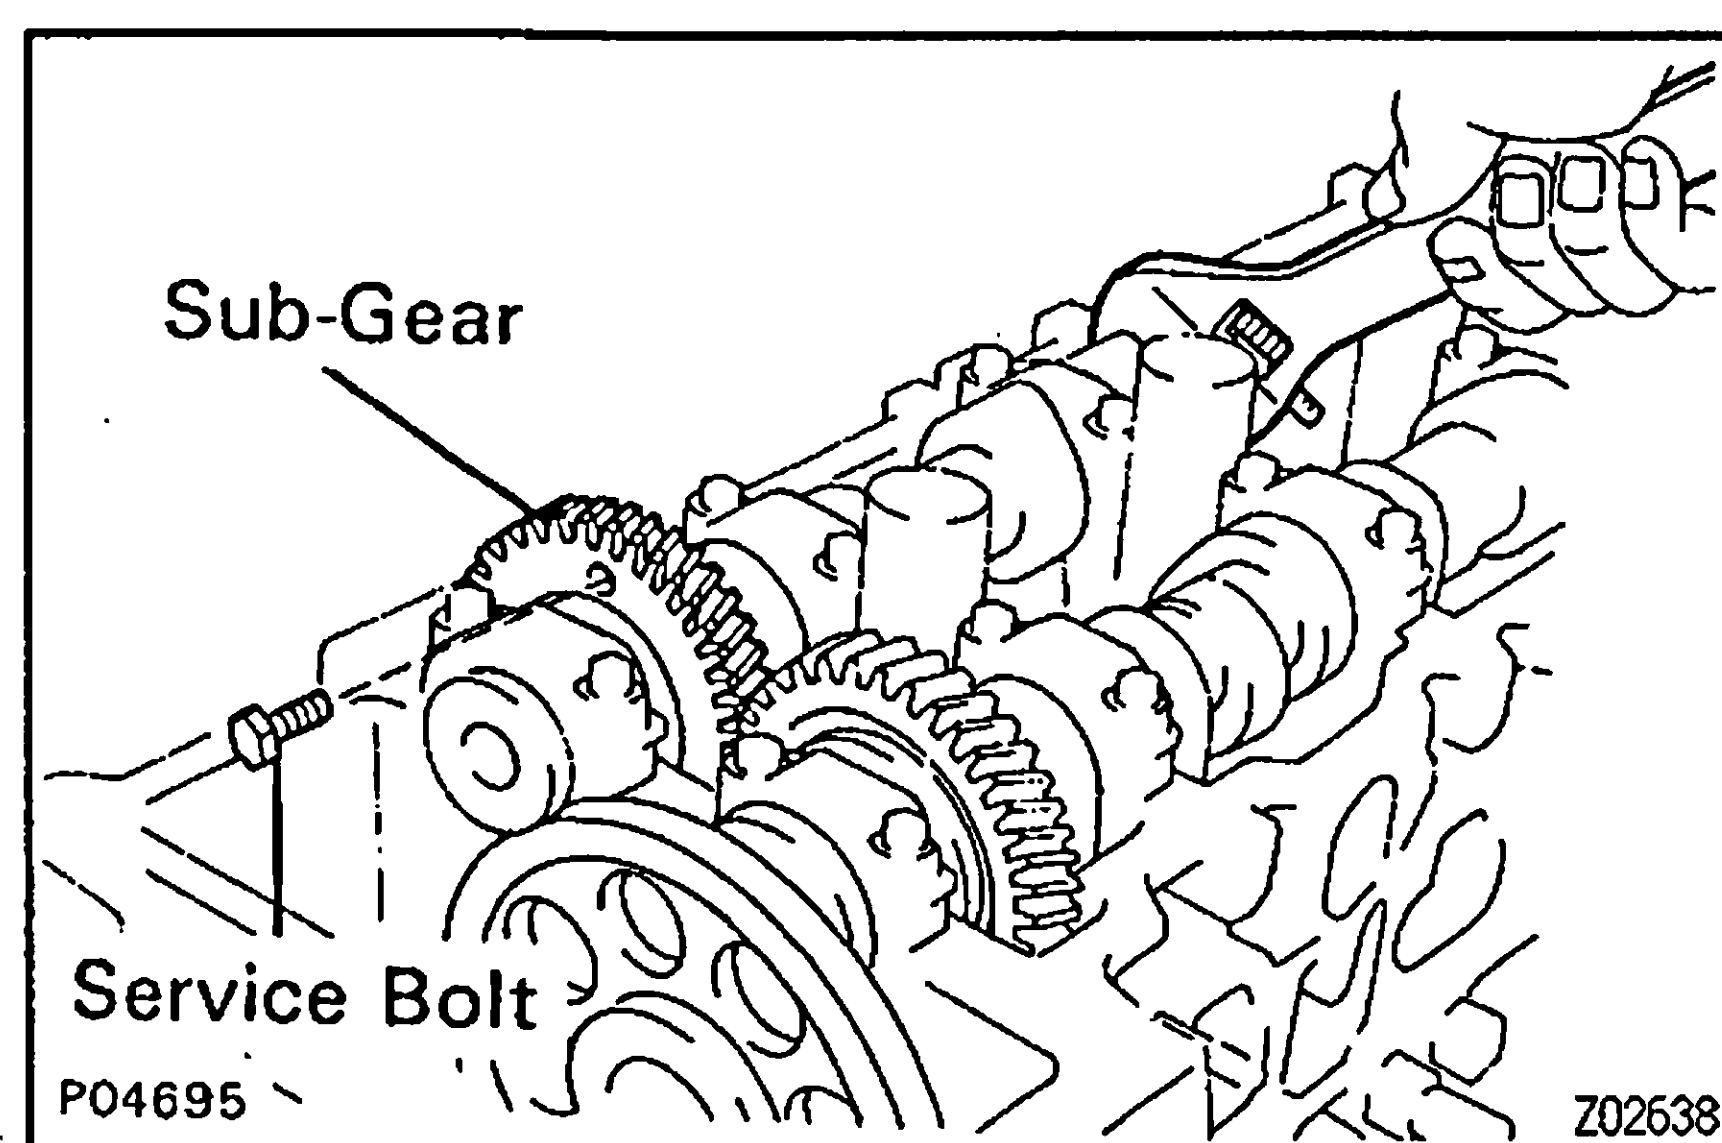

- (m) Bring the service bolt installed in the driven sub—gear upward by turning the hexagon wrench head portion of the camshaft with a wrench.
- (n) Remove the service bolt.
- (o) Check that the intake and exhaust camshafts turn smoothly.

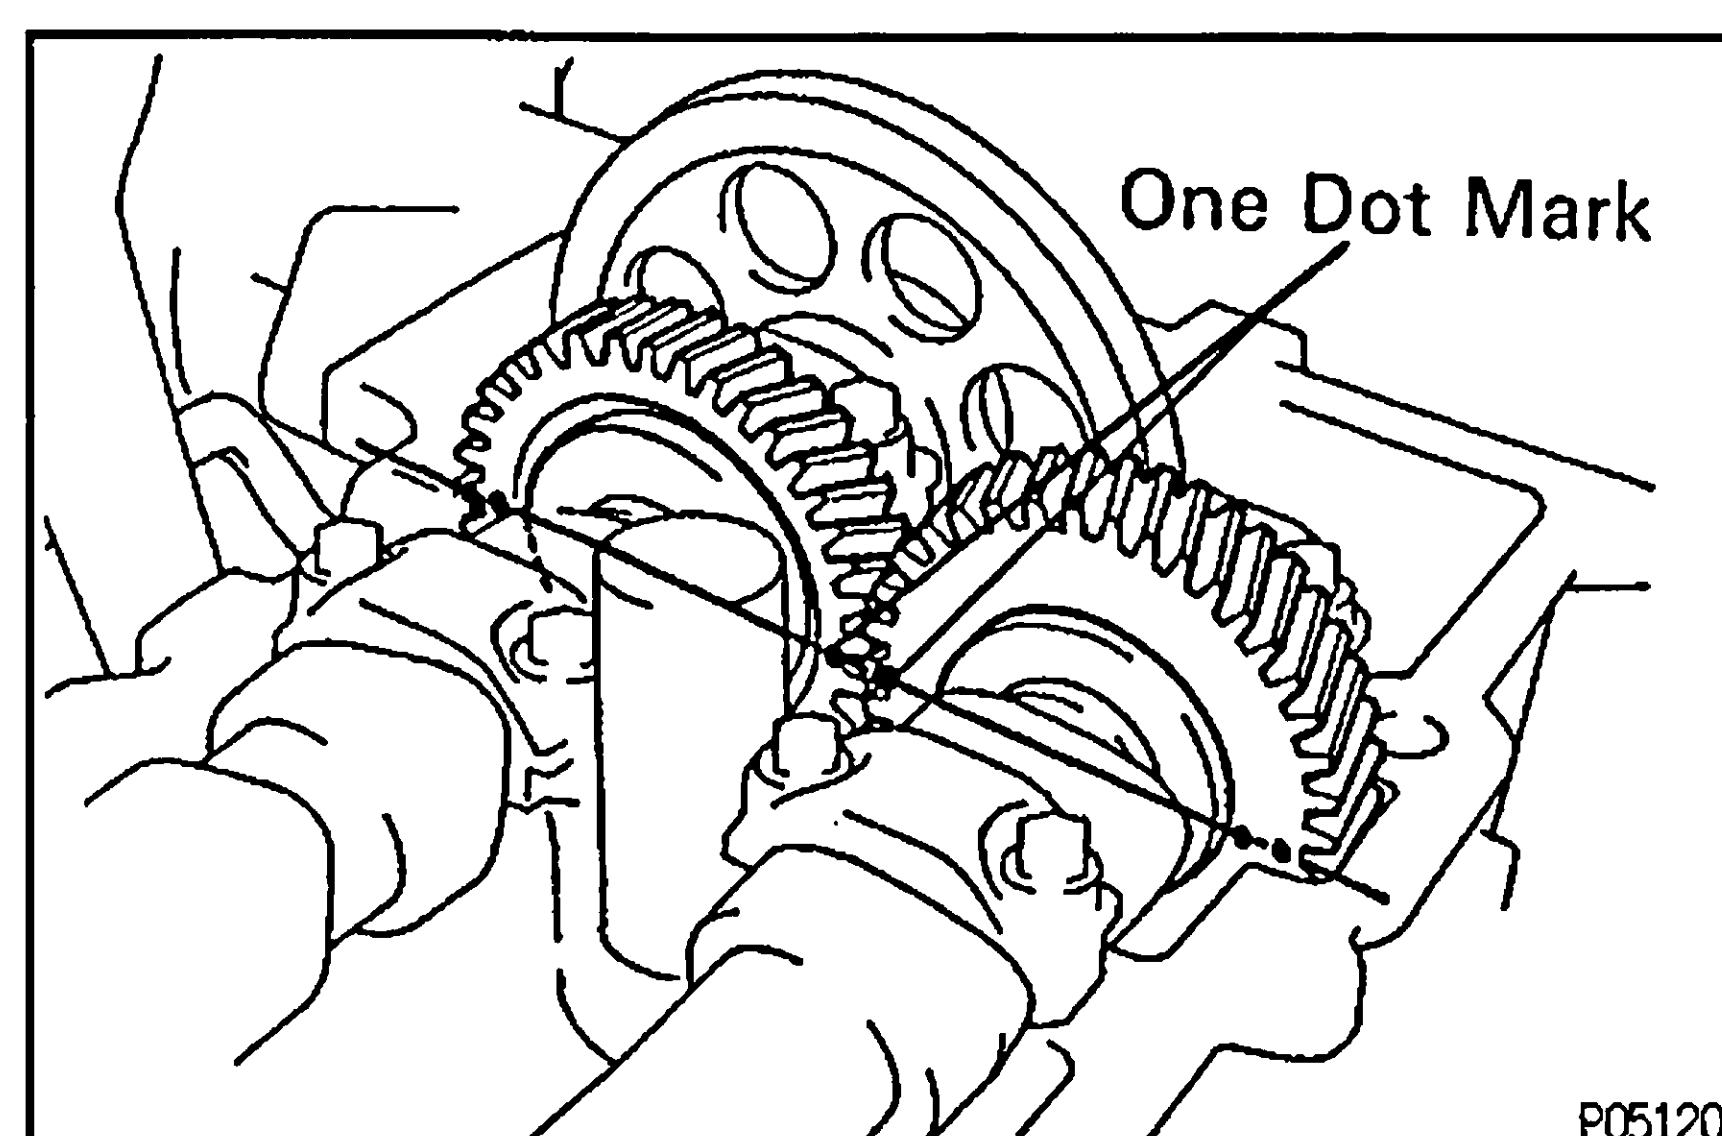


- 4. SET CAMSHAFTS TO FOLLOWING POSITION:**
Turn the camshafts so that the timing marks with one and two dots will be in straight line on the cylinder head surface as shown in the illustration.

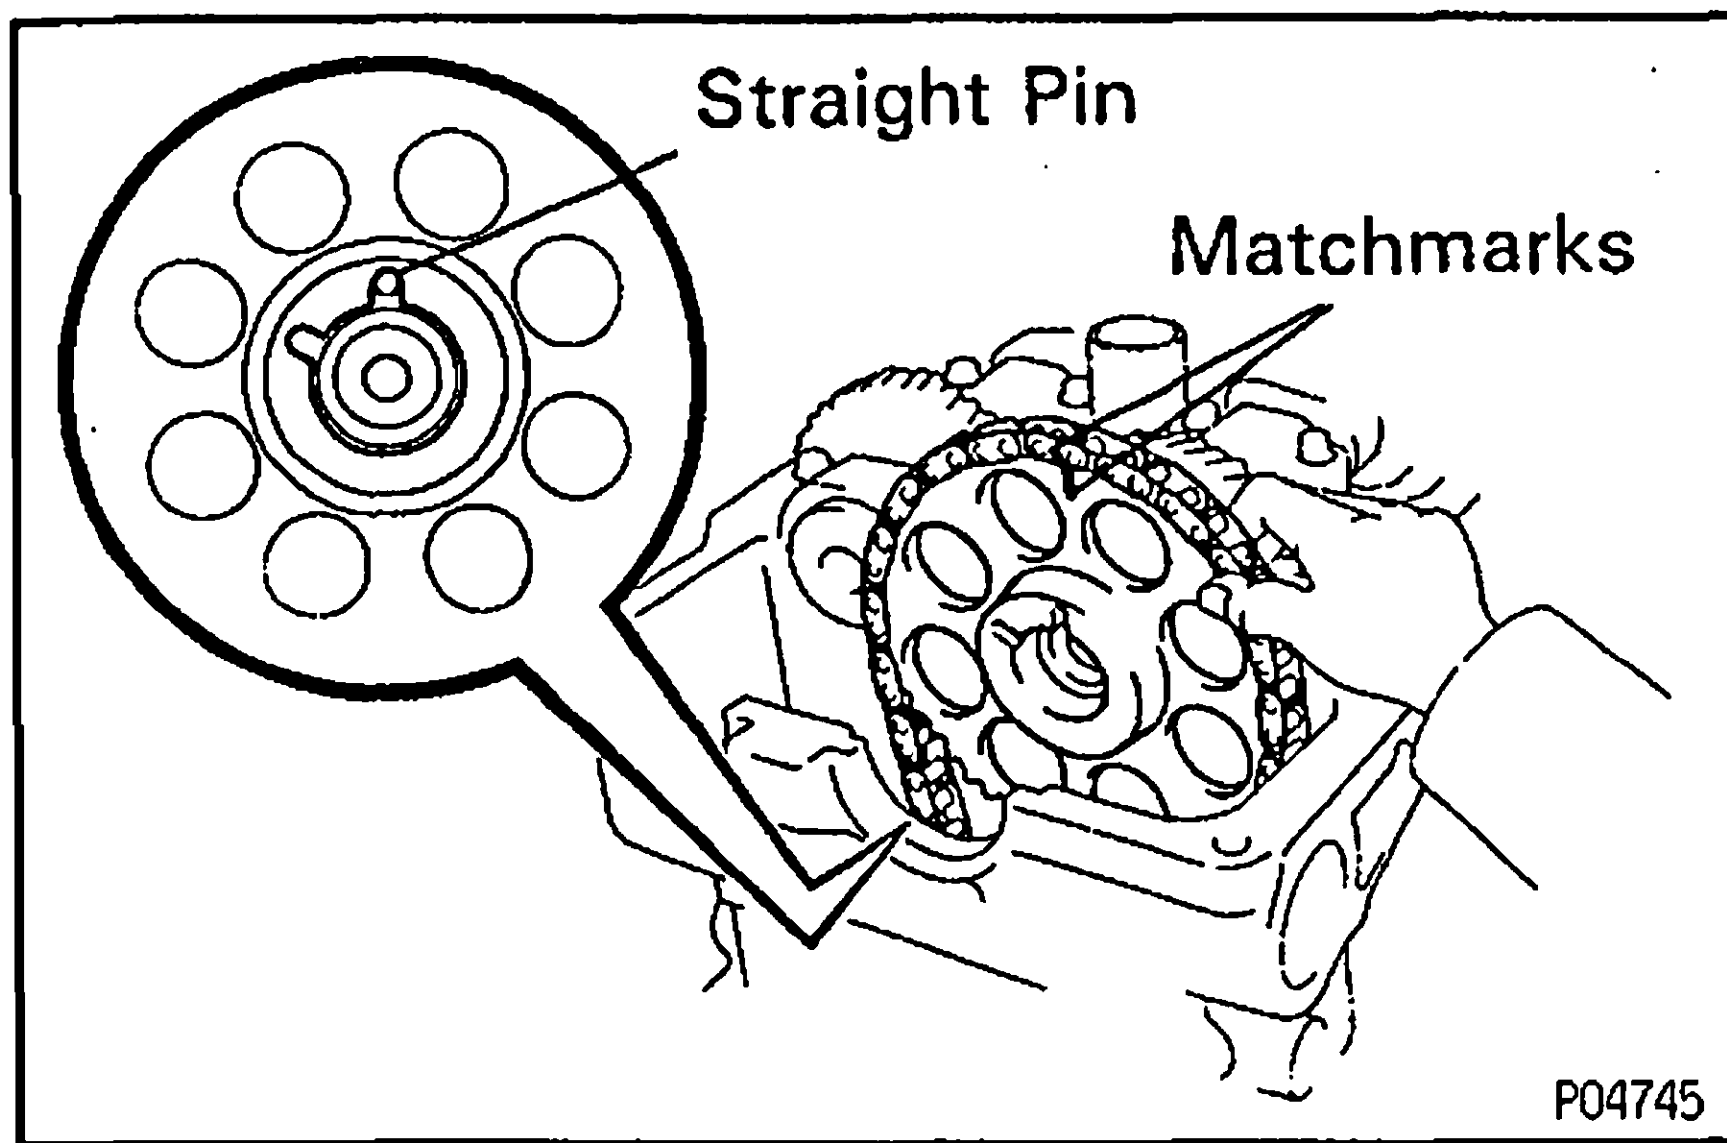


5. INSTALL CAMSHAFT TIMING GEAR

HINT: Check that the matchmarks on the camshaft timing gear and timing chain are aligned.

- (a) Place the gear over the straight pin of the intake camshaft.

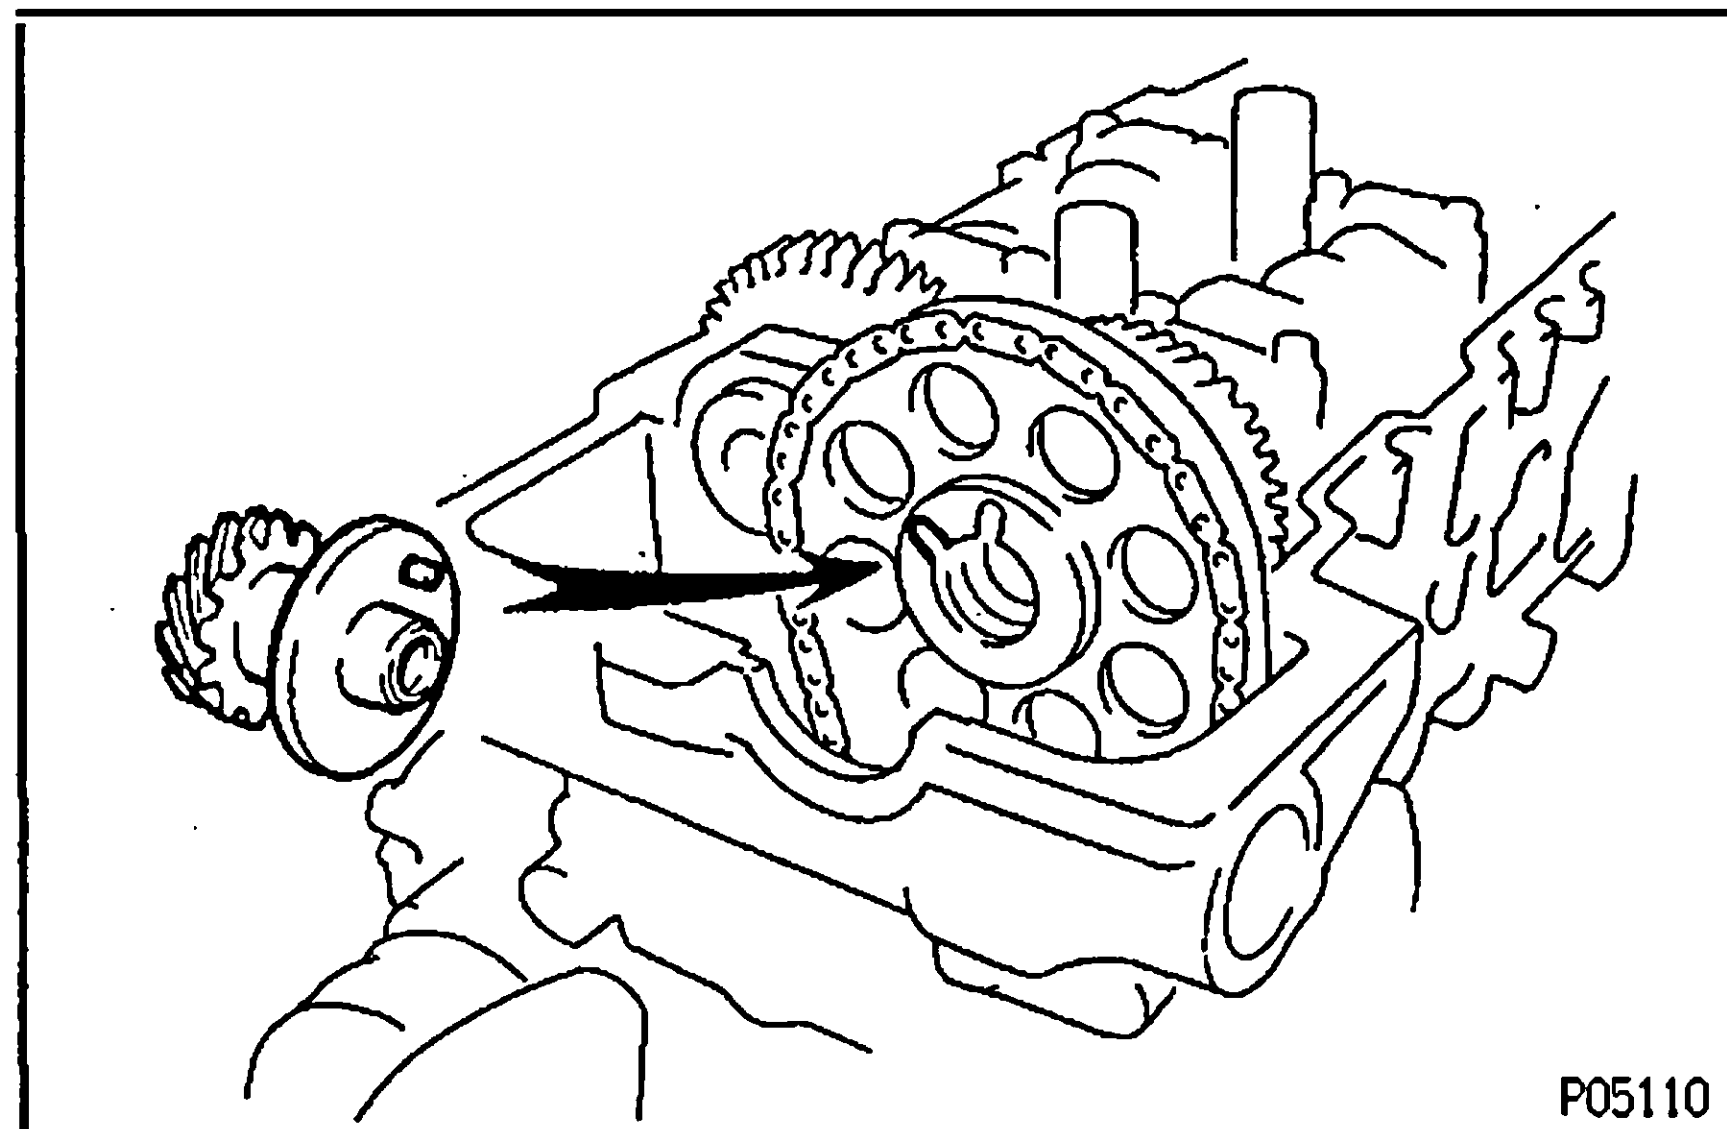


- (b) Align the straight pin of distributor gear with the straight pin groove of the intake camshaft gear as shown.

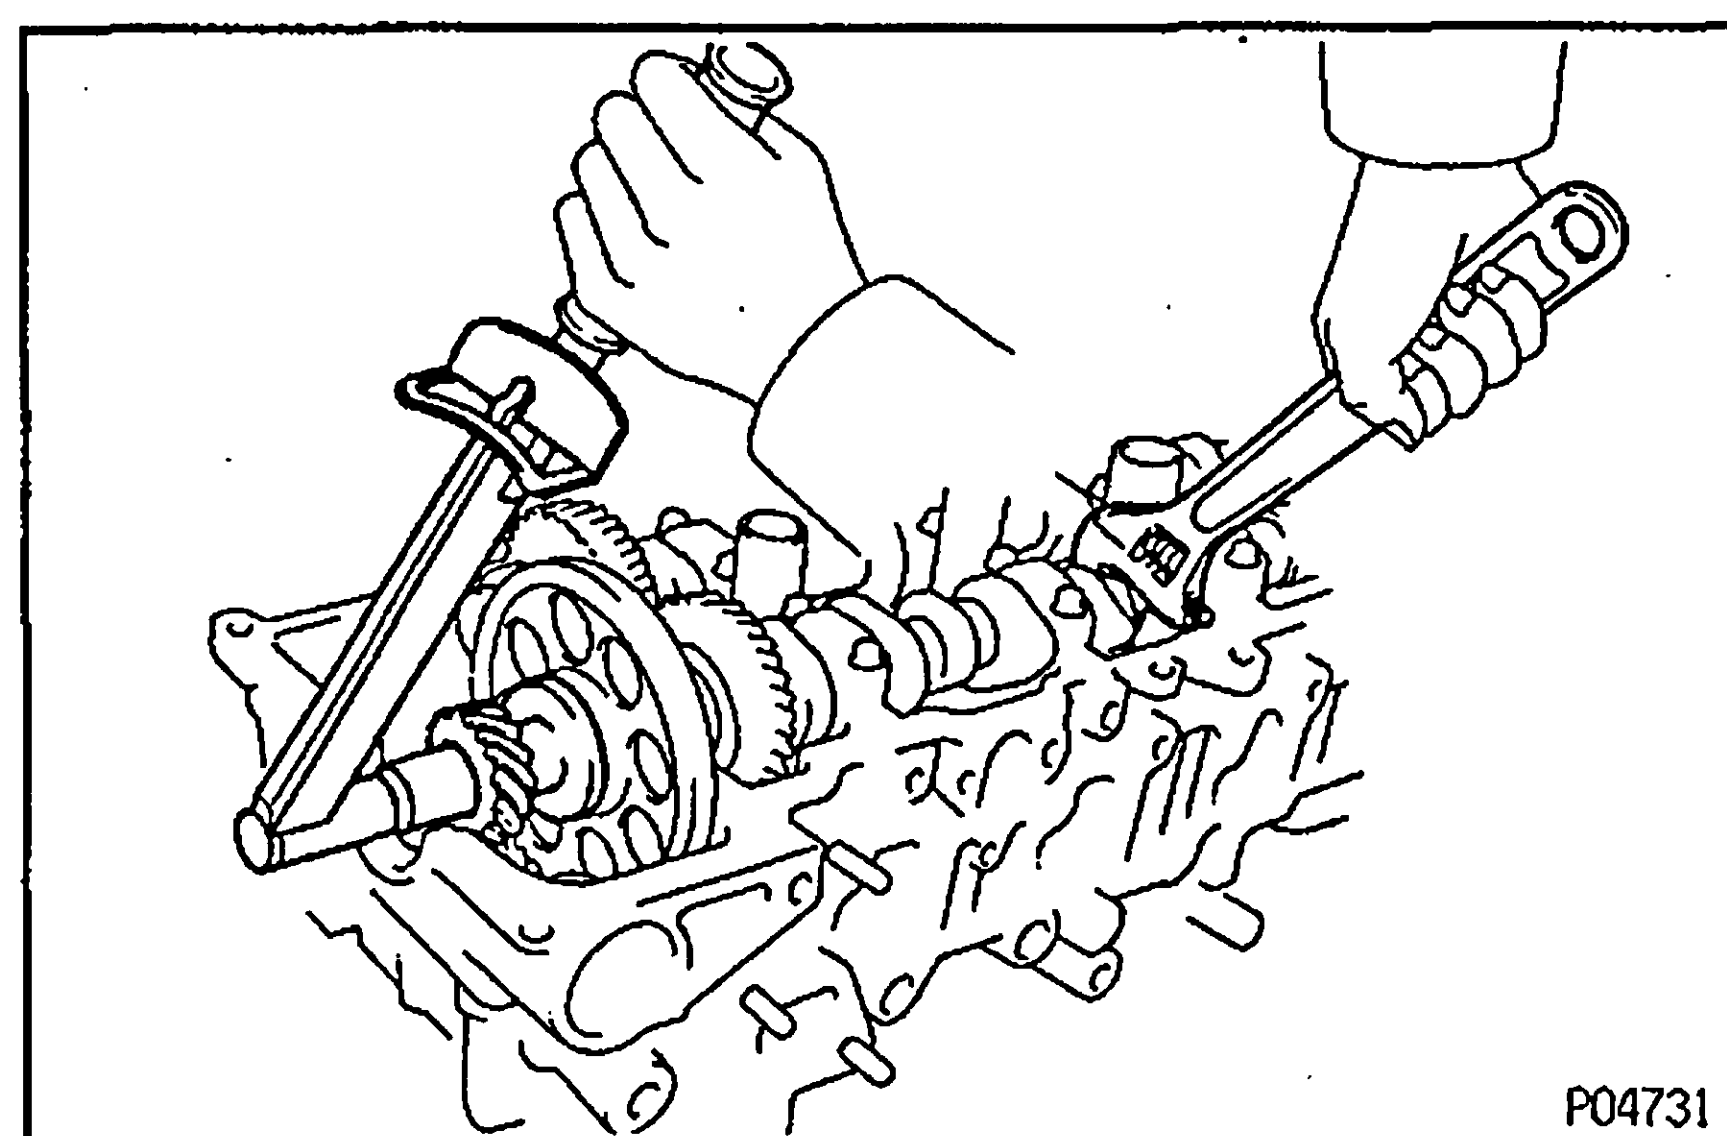


- (c) Hold the intake camshaft with a wrench, install and torque the bolt.

Torque: 74 N·m (750 kgf·cm, 54 ft·lbf)

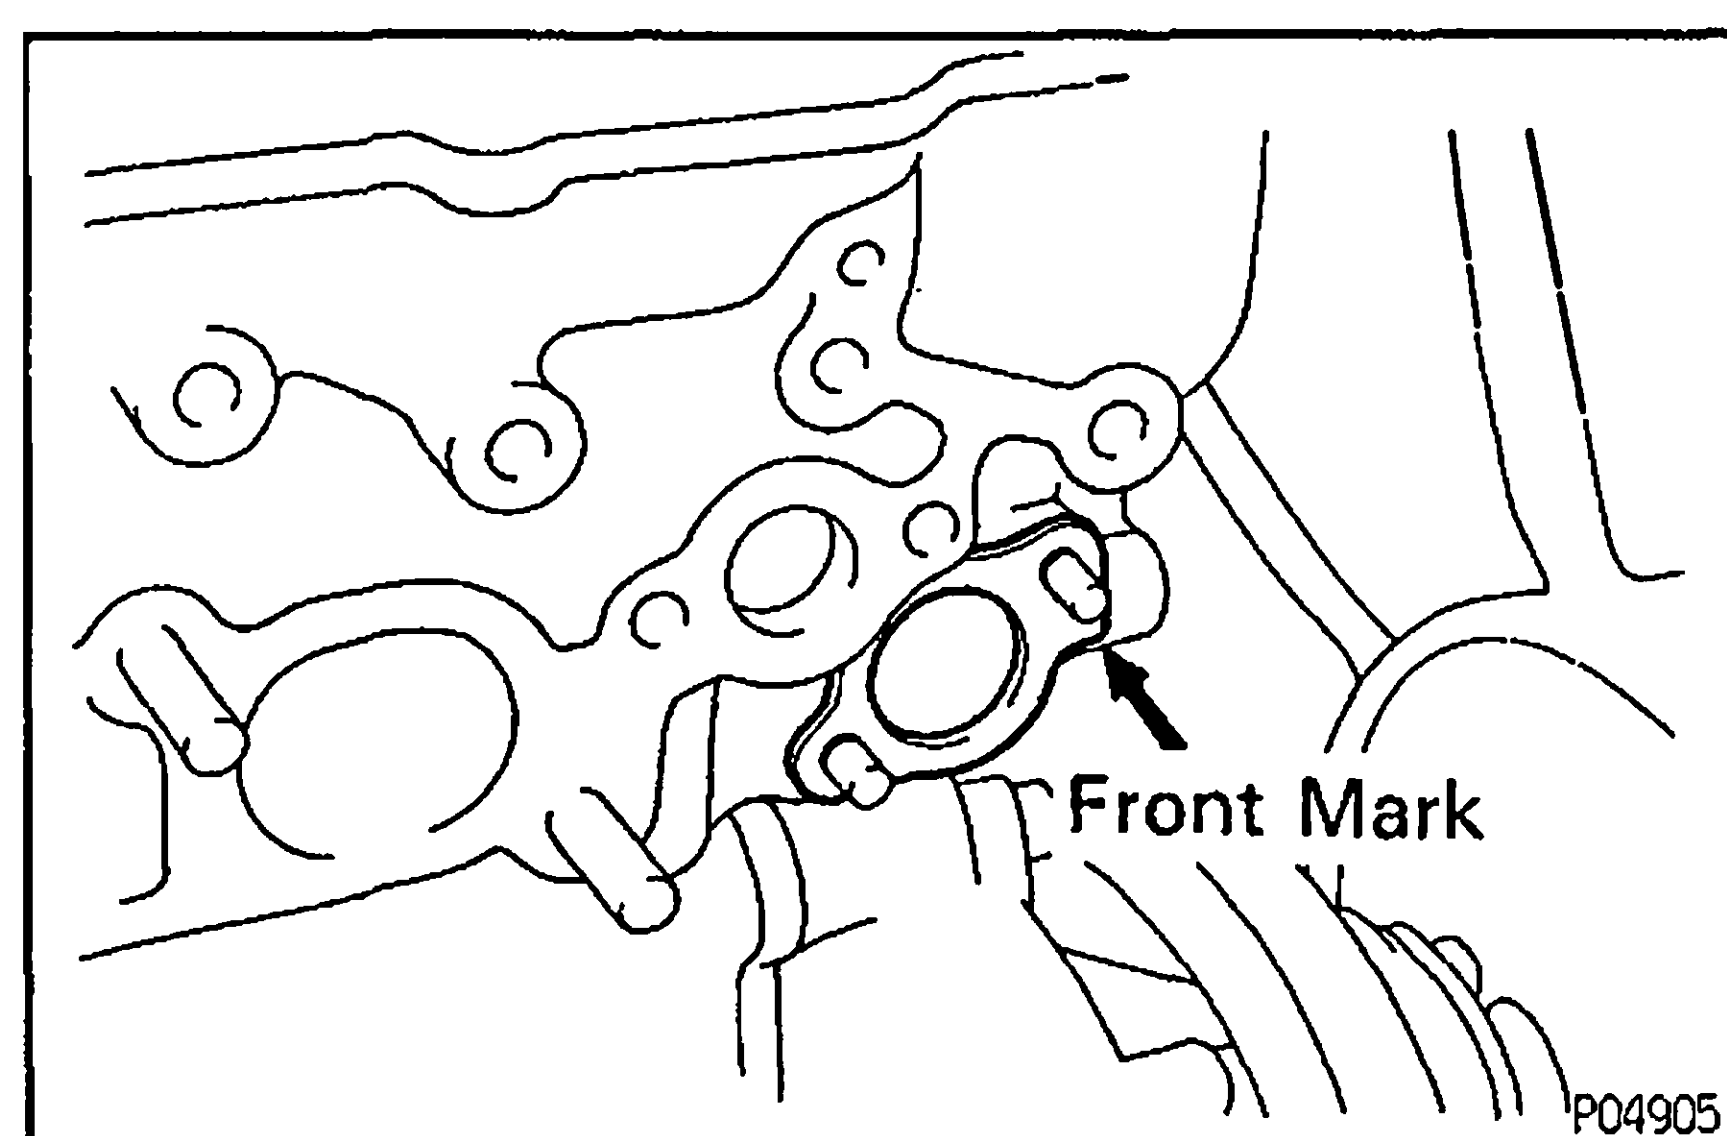


6. INSTALL CHAIN TENSIONER


- (a) Place a new gasket so that the front mark is toward the front side.

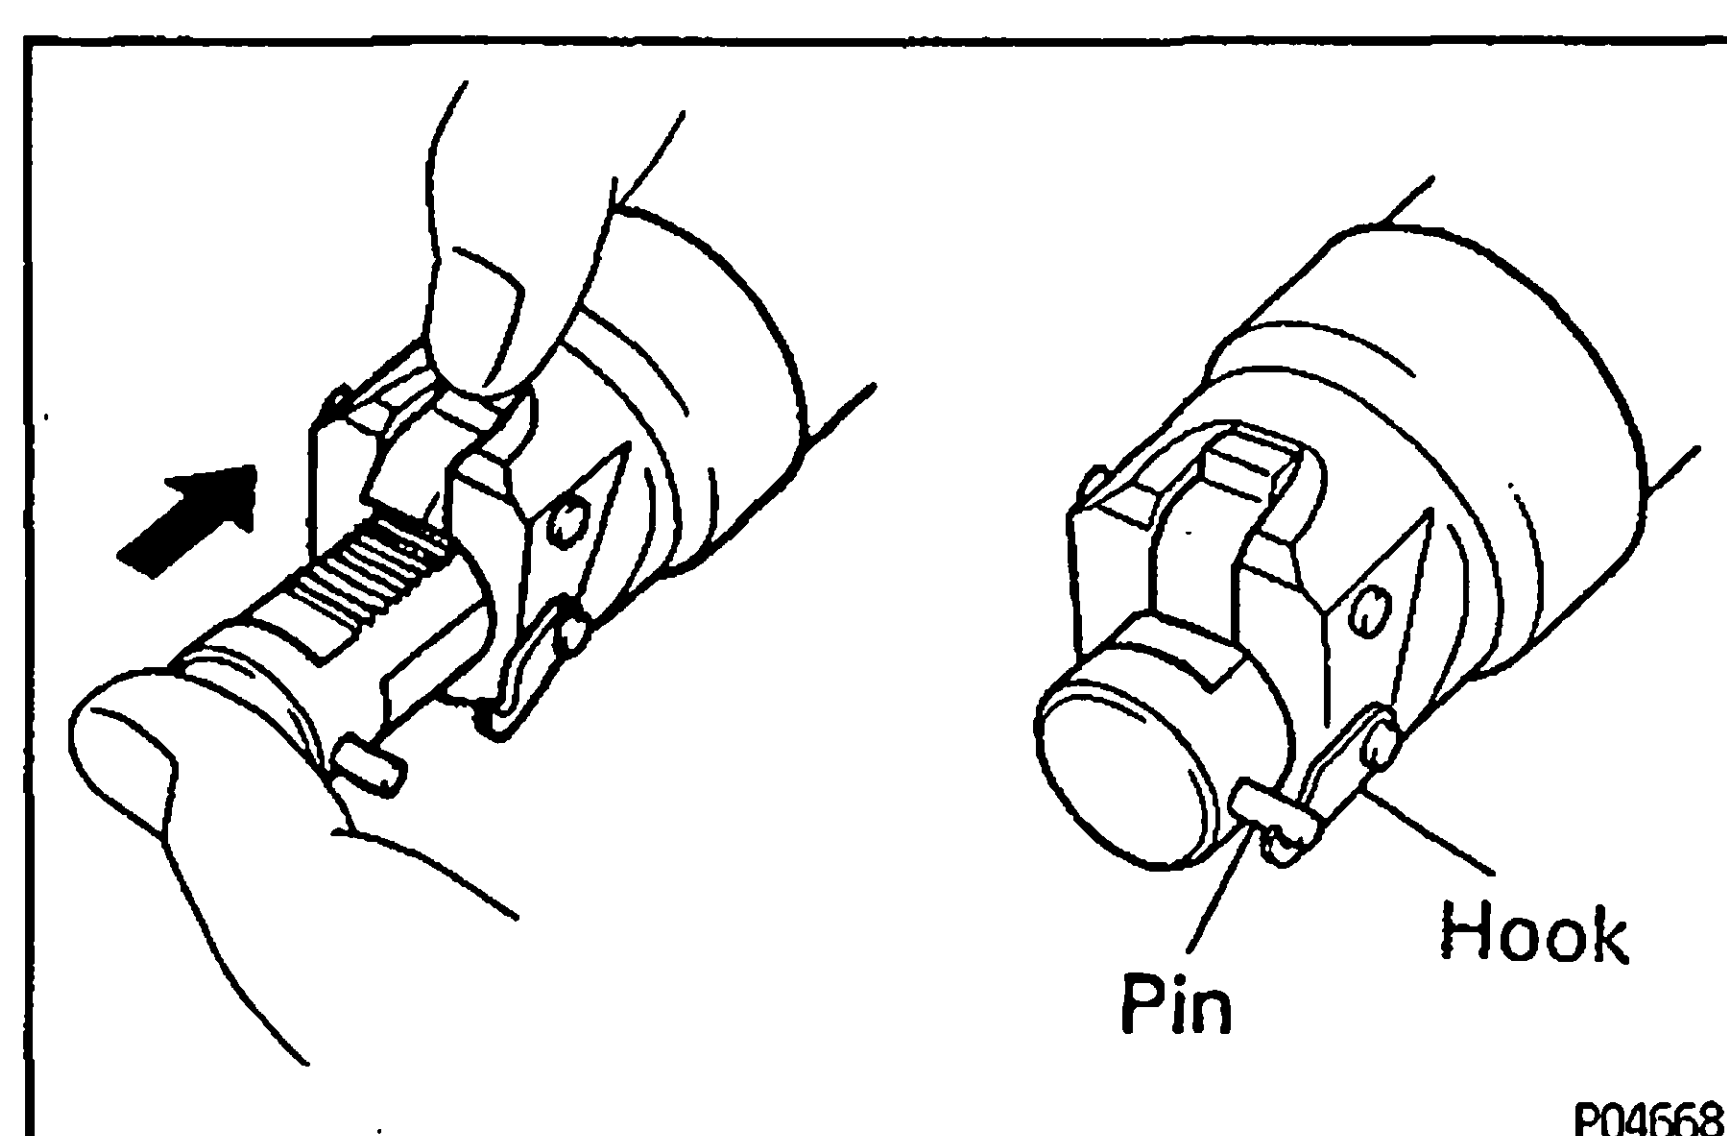

- (b) Release the ratchet pawl, fully push in the plunger and apply the hook to the pin so that the plunger cannot spring out.

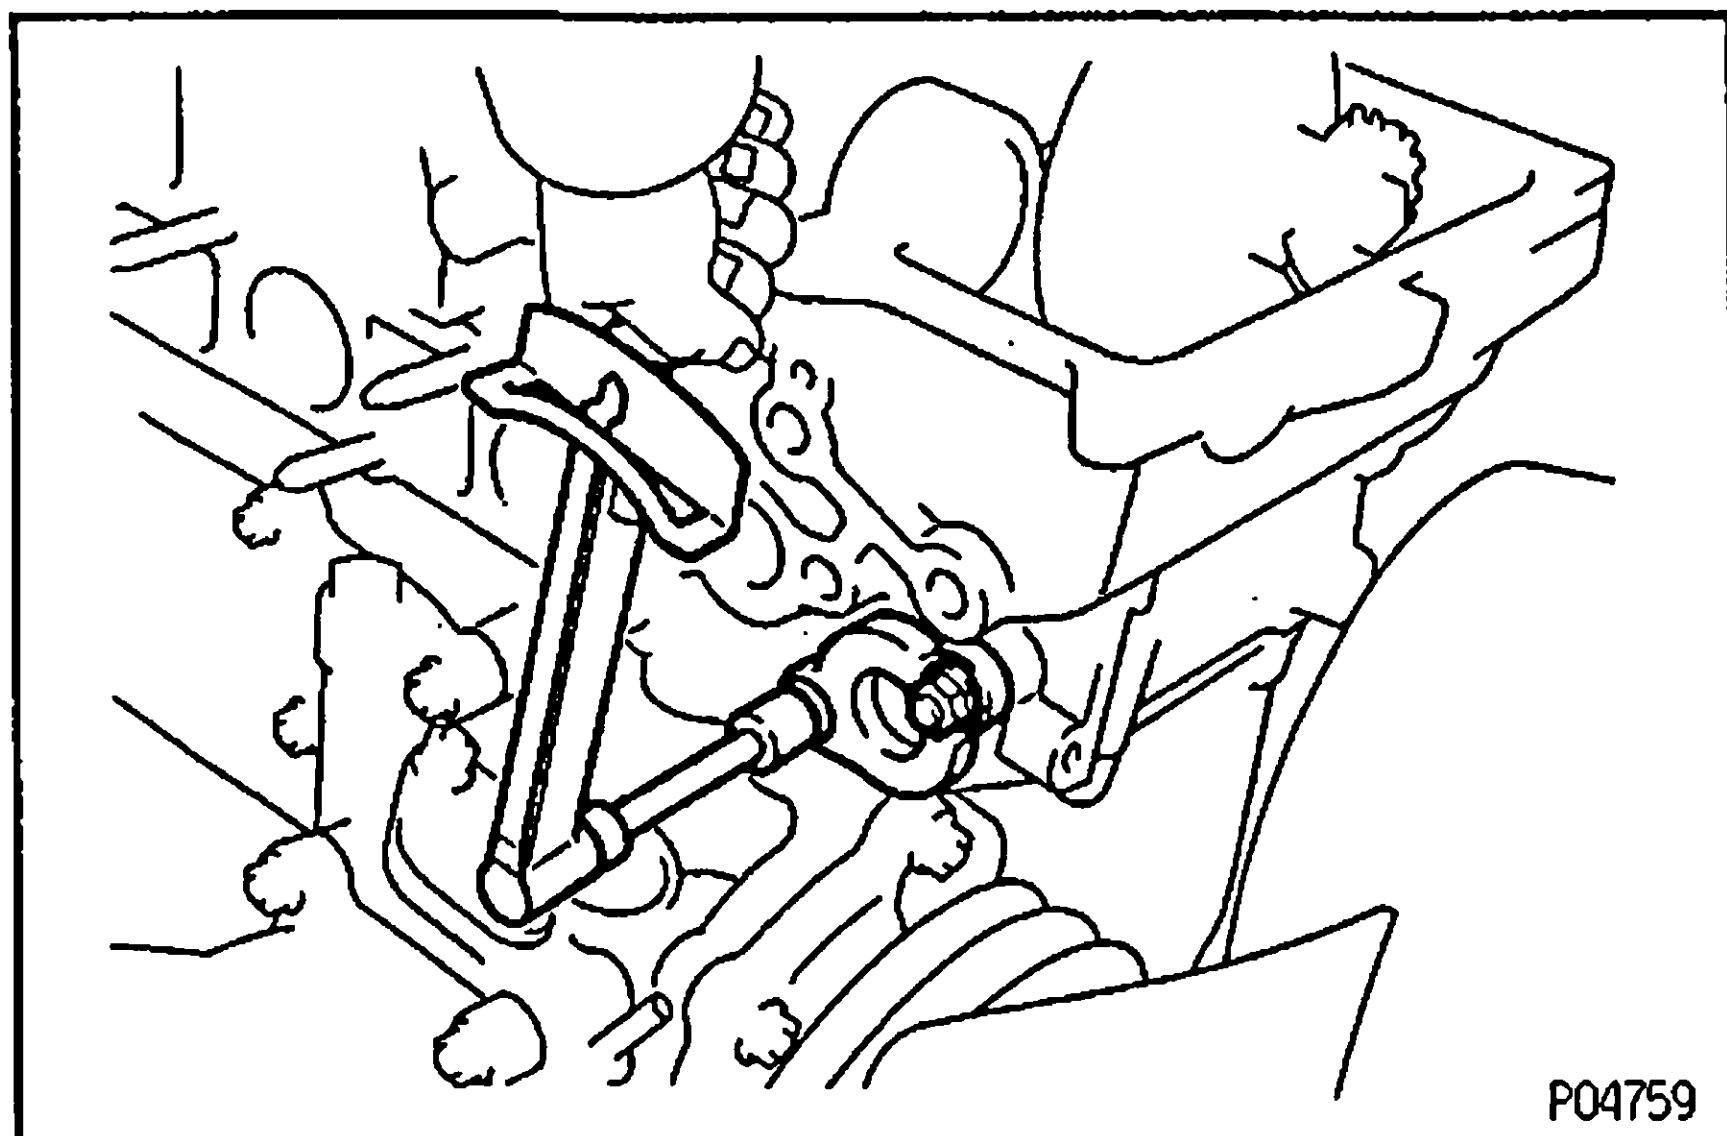


- (c) Install the chain tensioner with the two nuts.
Torque: 21 N·m (210 kgf·cm, 15 ft·lbf)
NOTICE: If the plunger springs out during installation of the chain tensioner, repeat the operation in step (b) before installing the tensioner.

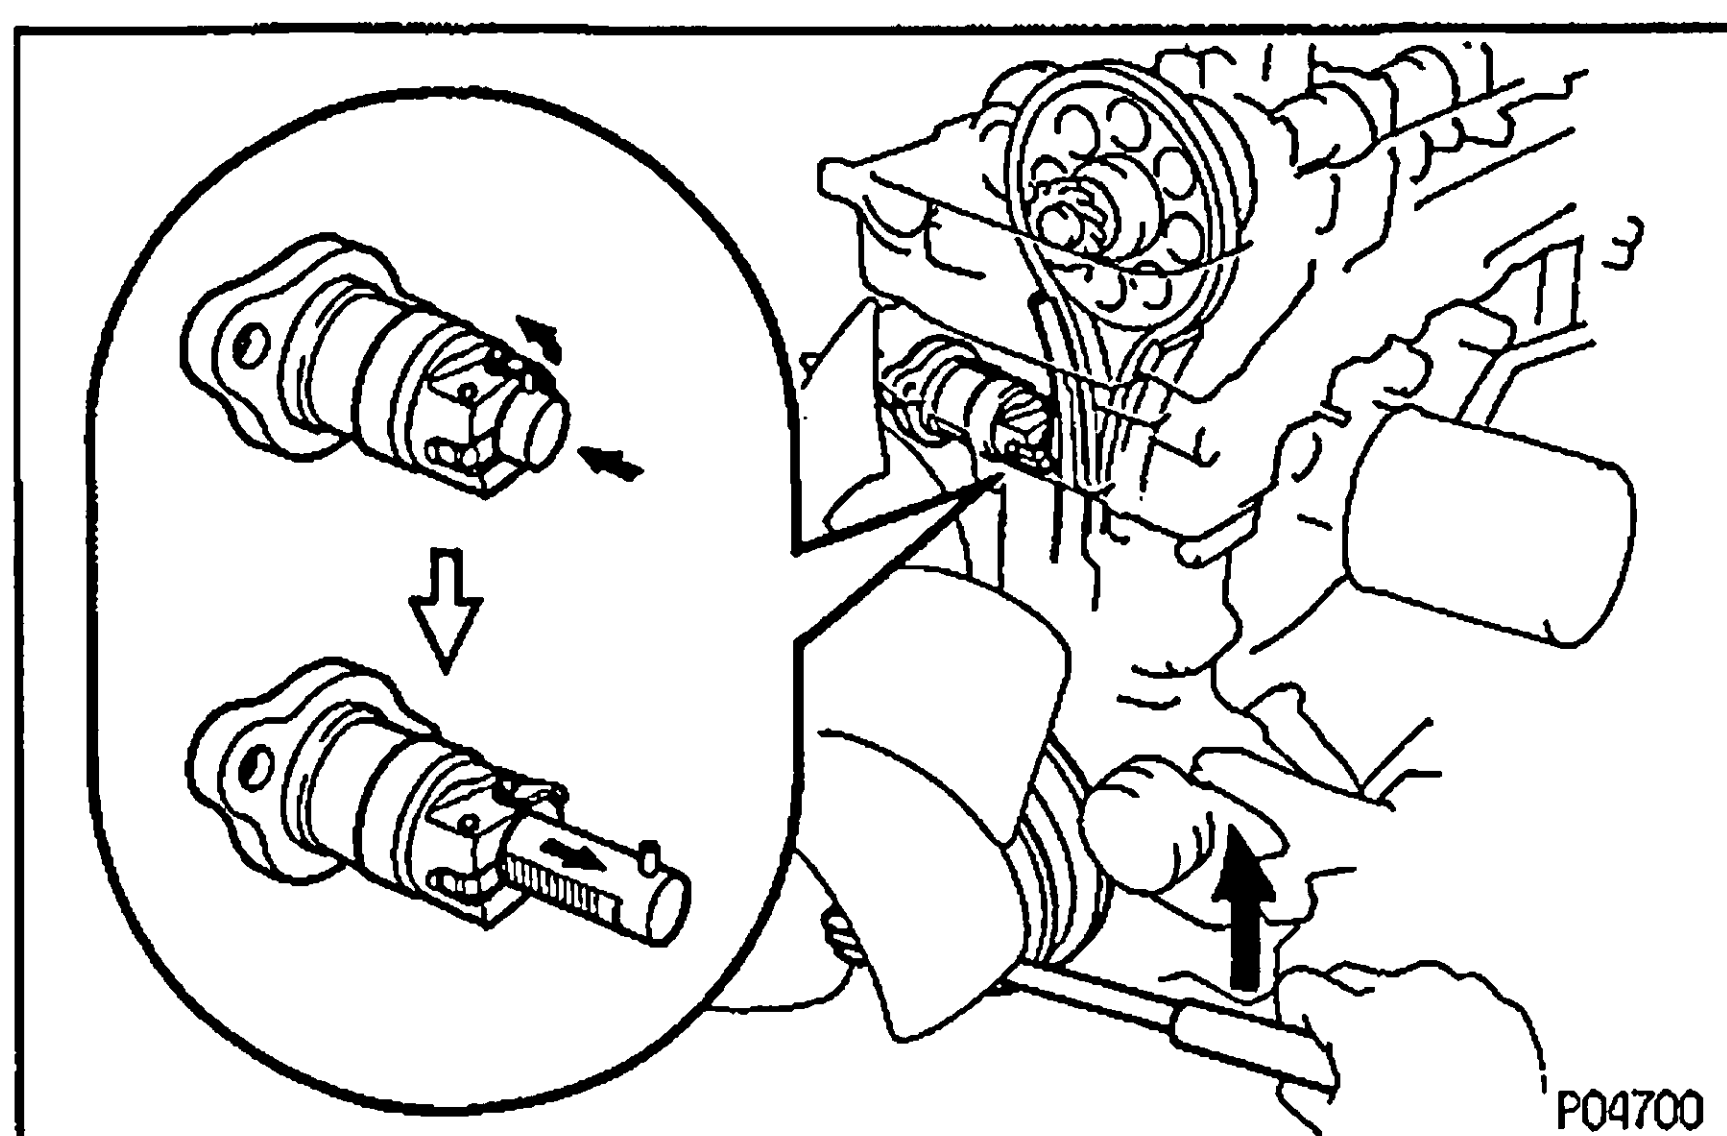


7. SET CHAIN TENSIONER

Turn the crankshaft to the left so that the hook of the chain tensioner is released from the pin of the plunger, causing the plunger to spring out and the slipper to be pushed into the chain.

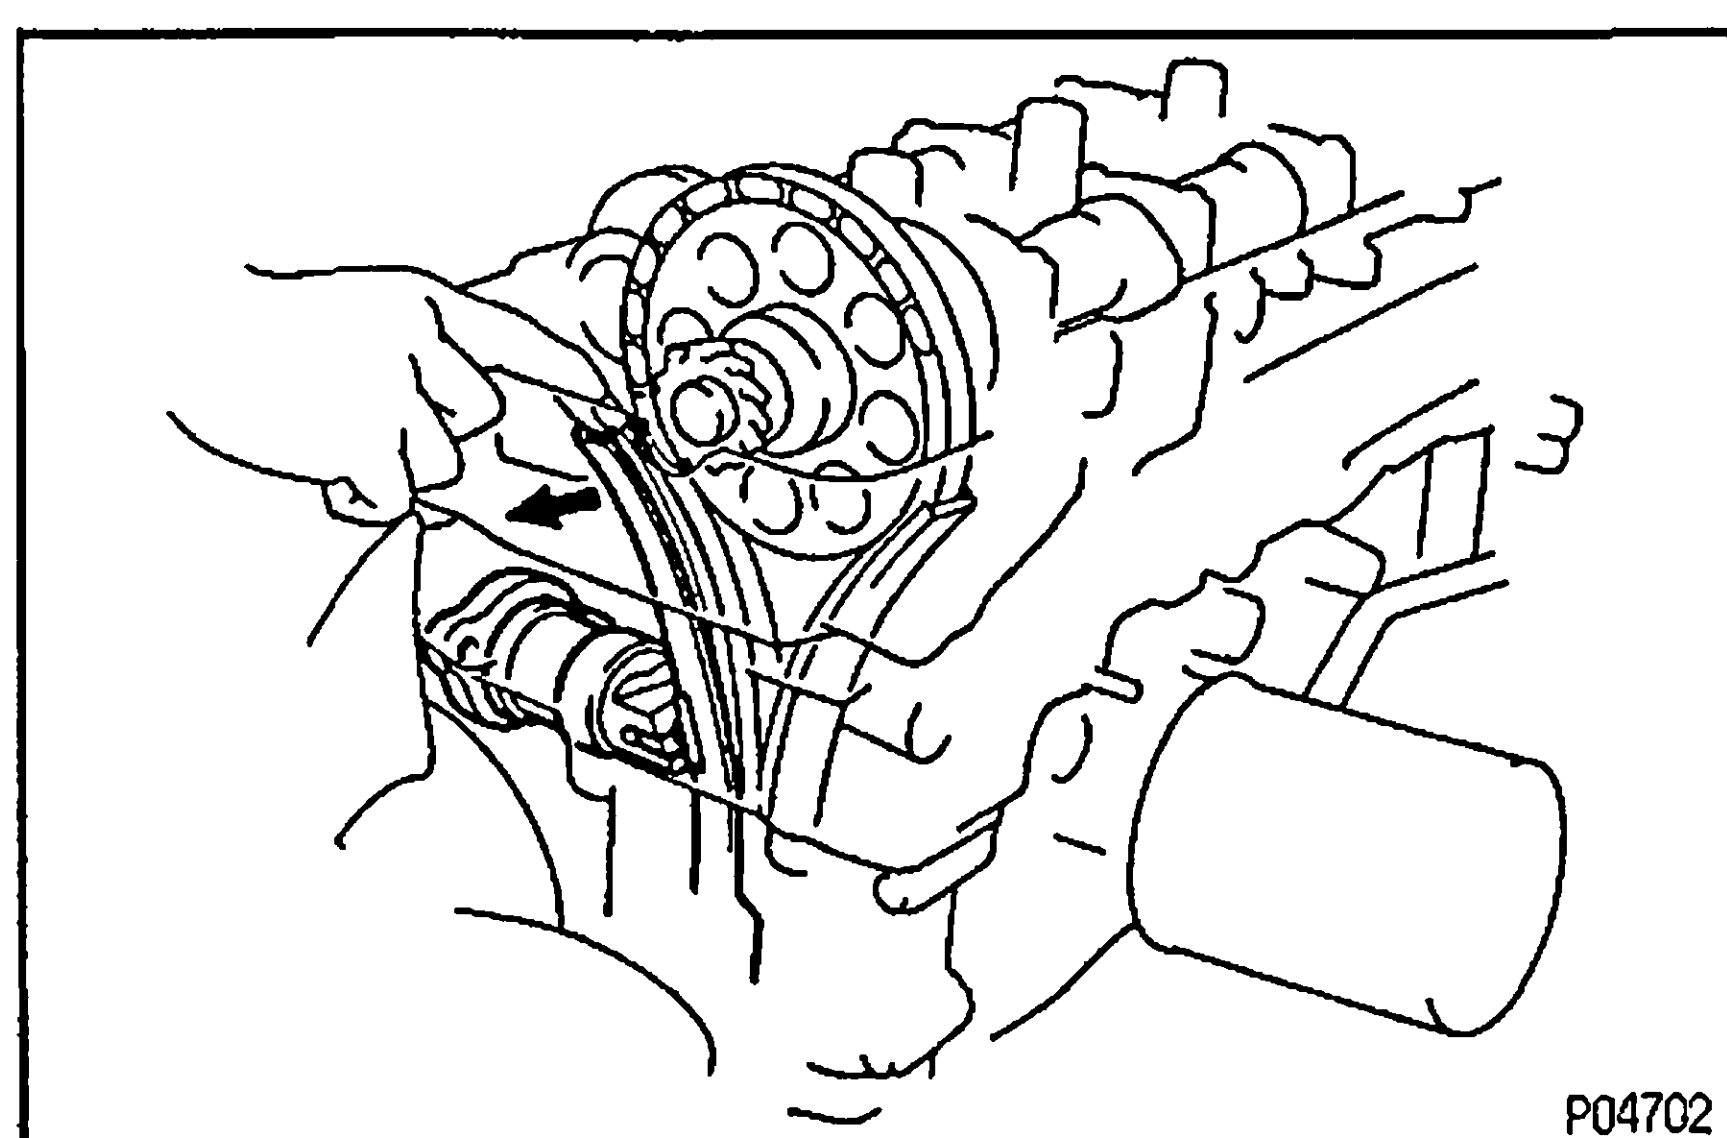


HINT: If the plunger does not spring out, press the slipper into the chain tensioner with a screwdriver or your finger so that the hook is released and the plunger springs out.

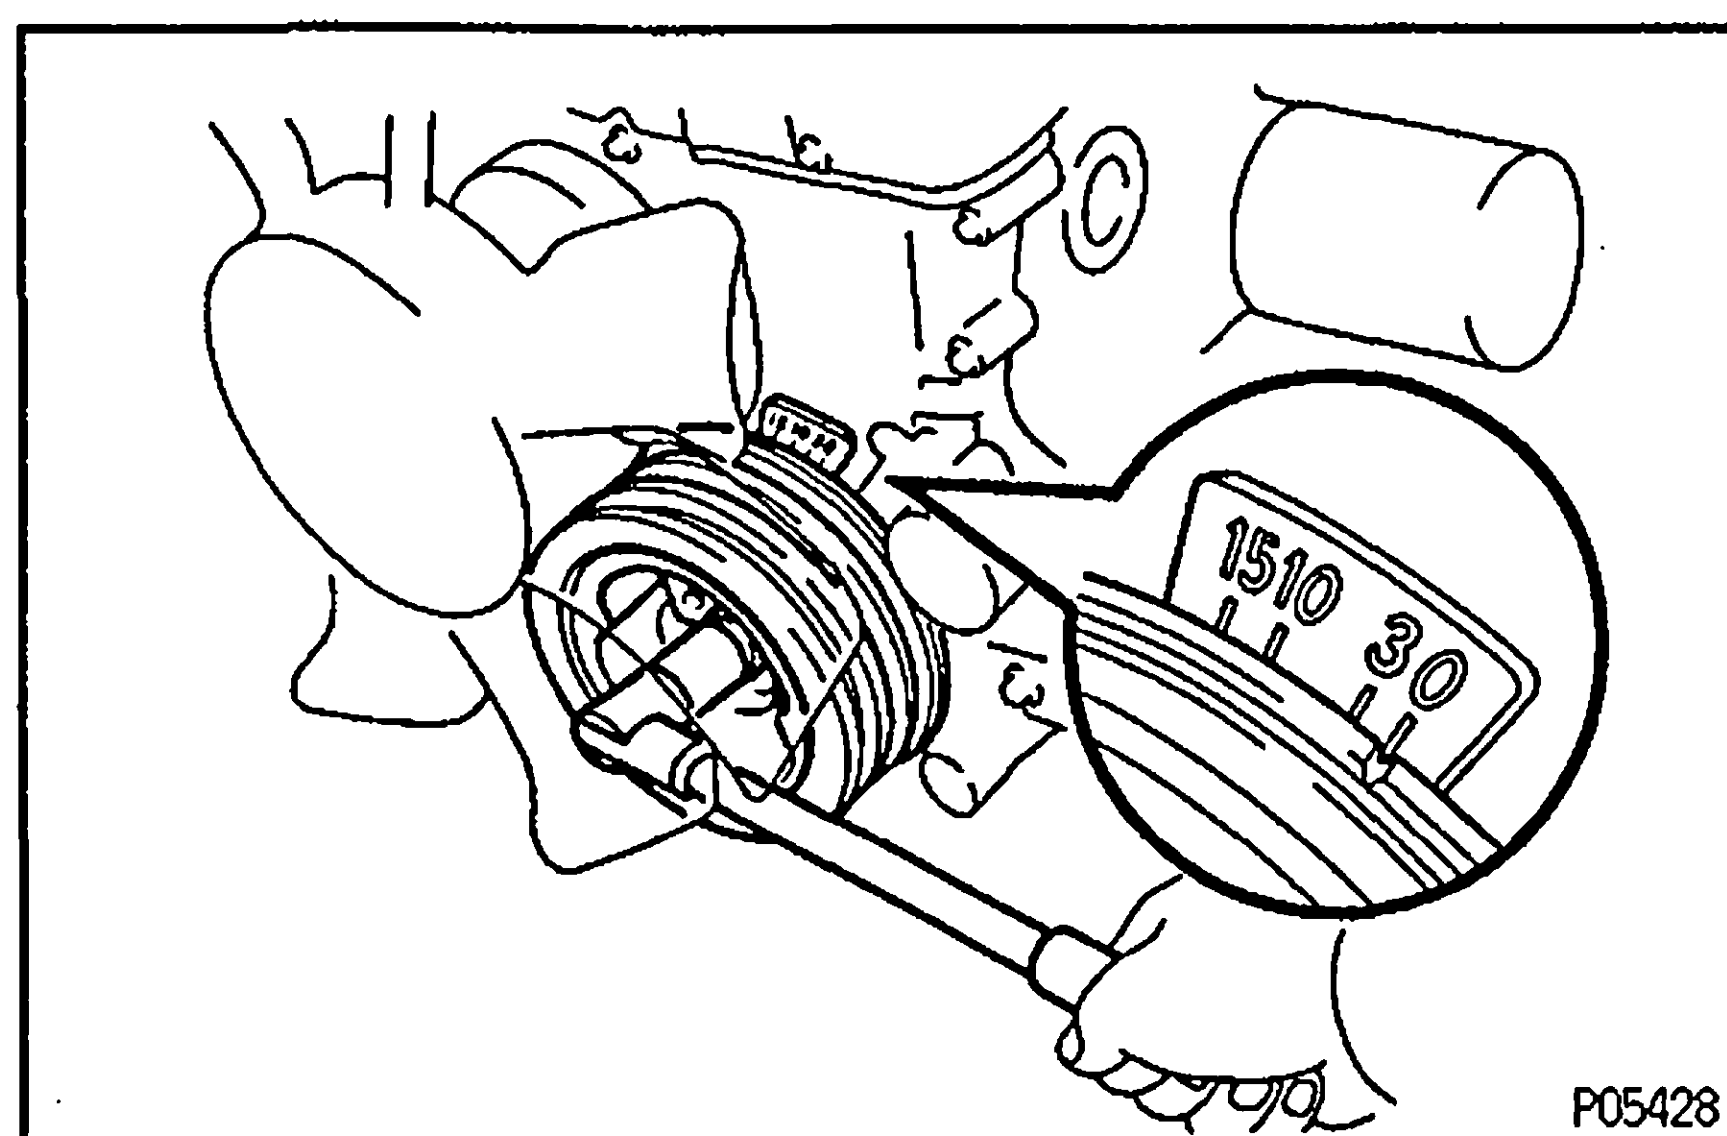

8. CHECK VALVE TIMING

- (a) Turn the crankshaft pulley two revolutions from TDC to TDC.

NOTICE: Always turn the crankshaft clockwise.

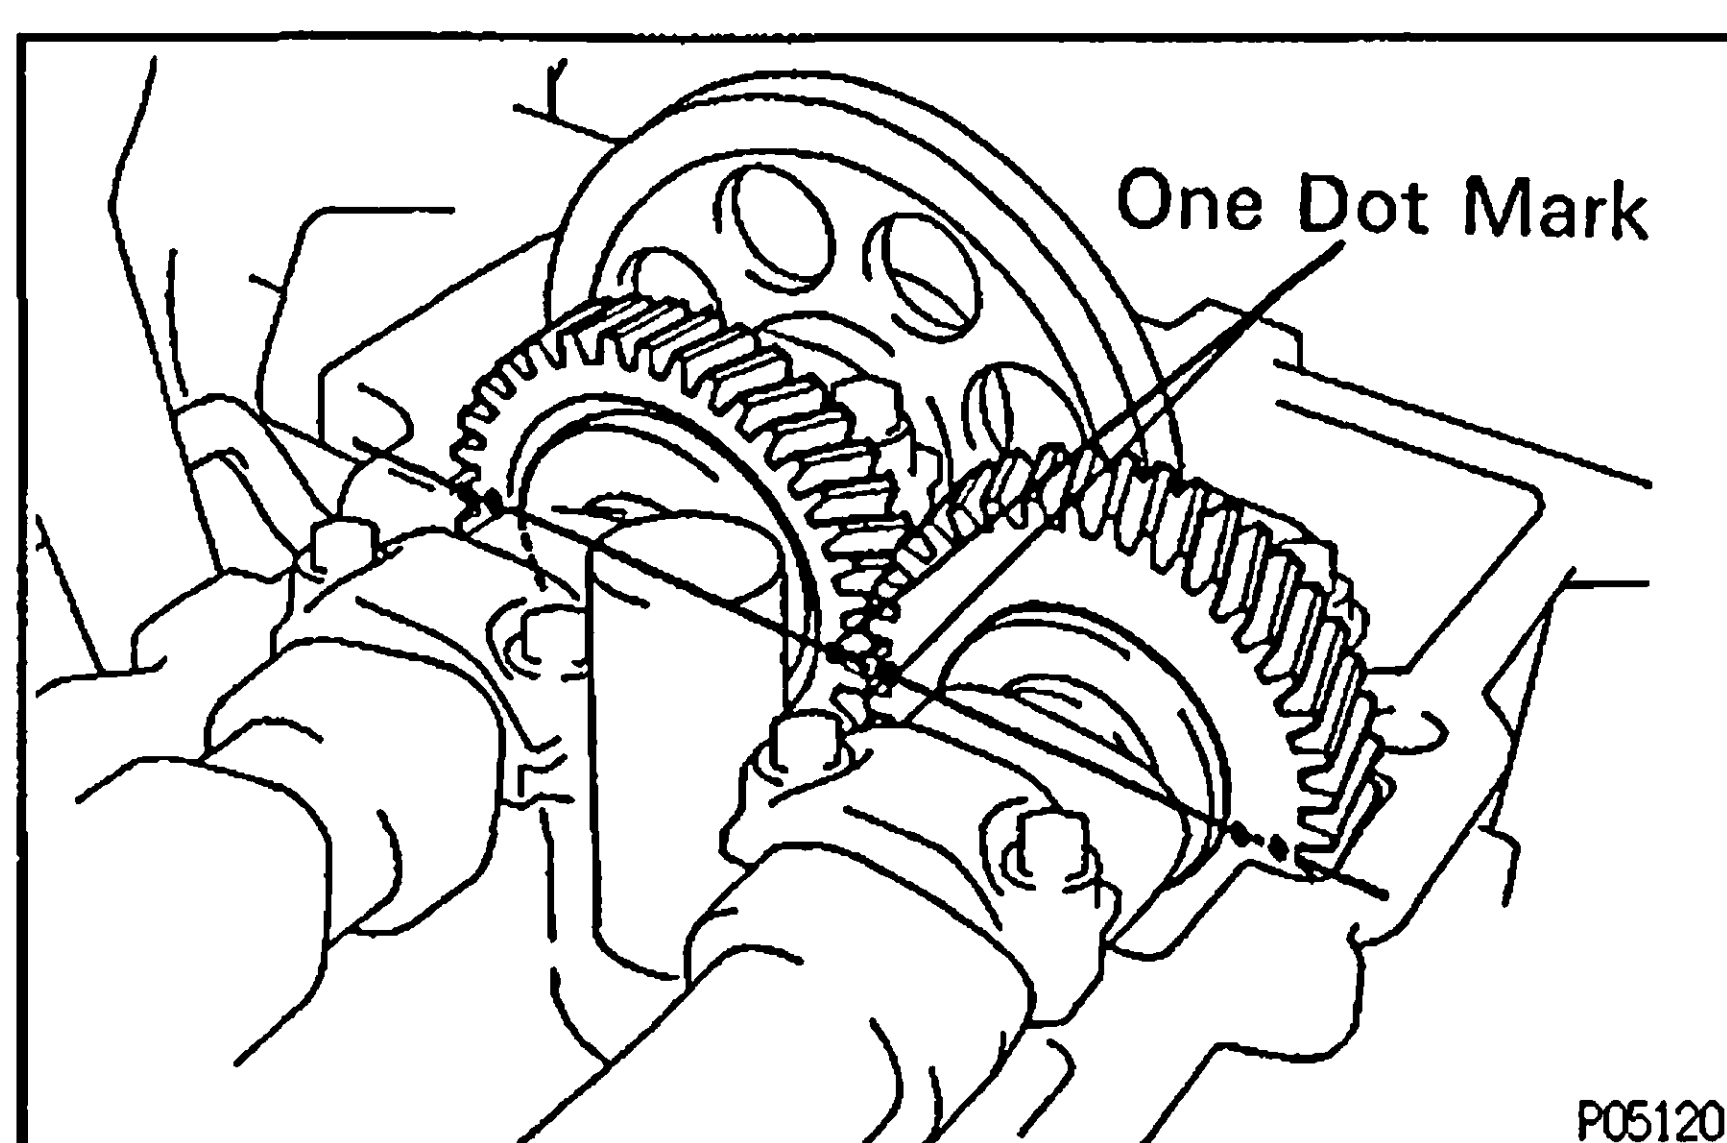

- (b) Check that the timing marks (one and two dots) of the camshaft drive and driven gears are in straight line on the cylinder head surface as shown in the illustration. If not, turn the crankshaft one revolution (360°) and align the marks as above.

9. CHECK AND ADJUST VALE CLEARANCE

(See page EG-14)

Turn the camshaft and position the cam lobe upward and check and adjust the valve clearance.

Valve clearance (Cold):


Intake

0.15 – 0.25 mm (0.006 – 0.010 in.)

Exhaust

0.25 – 0.35 mm (0.010 – 0.014 in.)

EG

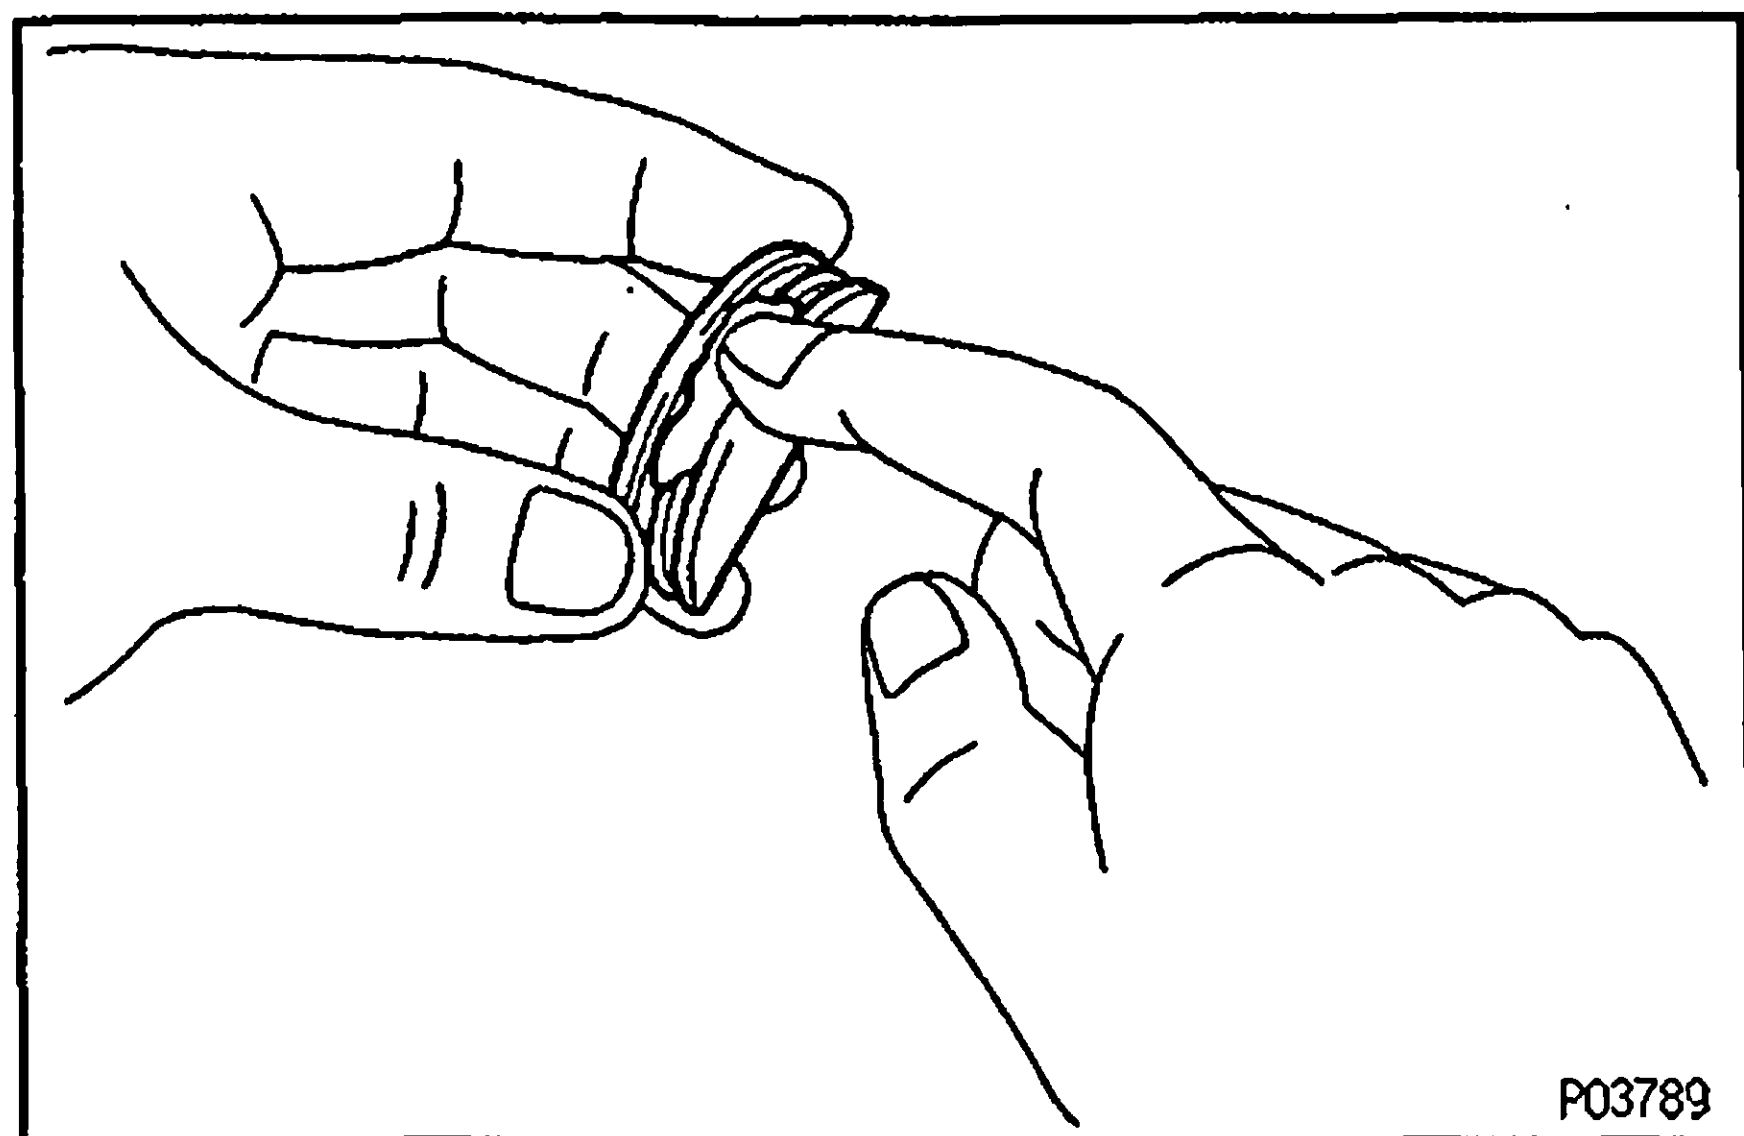
**10. INSTALL SEMI-CIRCULAR PLUG**

- (a) Remove any old packing (FIPG) material.
- (b) Apply seal packing to the cylinder head installation surface of the half-circular plug.


Seal packing:

Part No.08826-00080 or equivalent

- (c) Install the half-circular plug to the cylinder head.

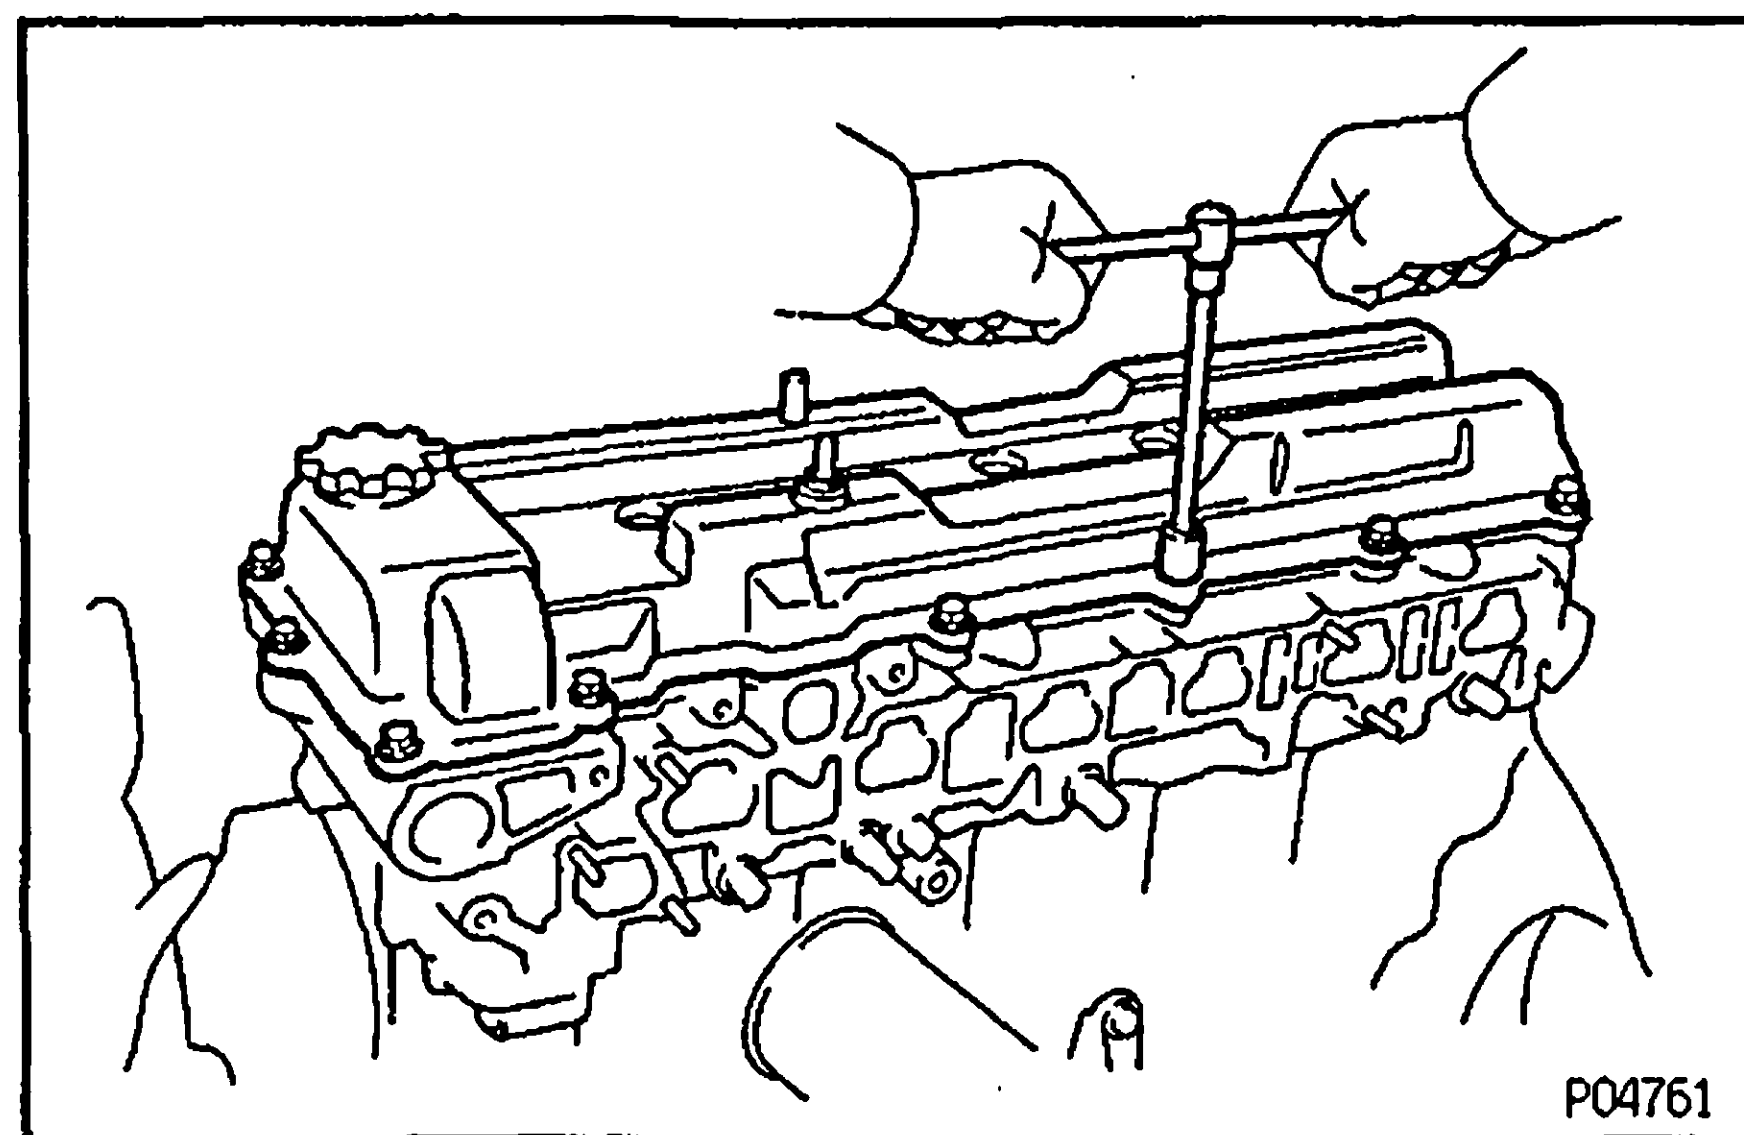**11. INSTALL CYLINDER HEAD COVER**


- (a) Install the gasket to the cylinder head cover.
- (b) Install the cylinder head cover with the 13 bolts.

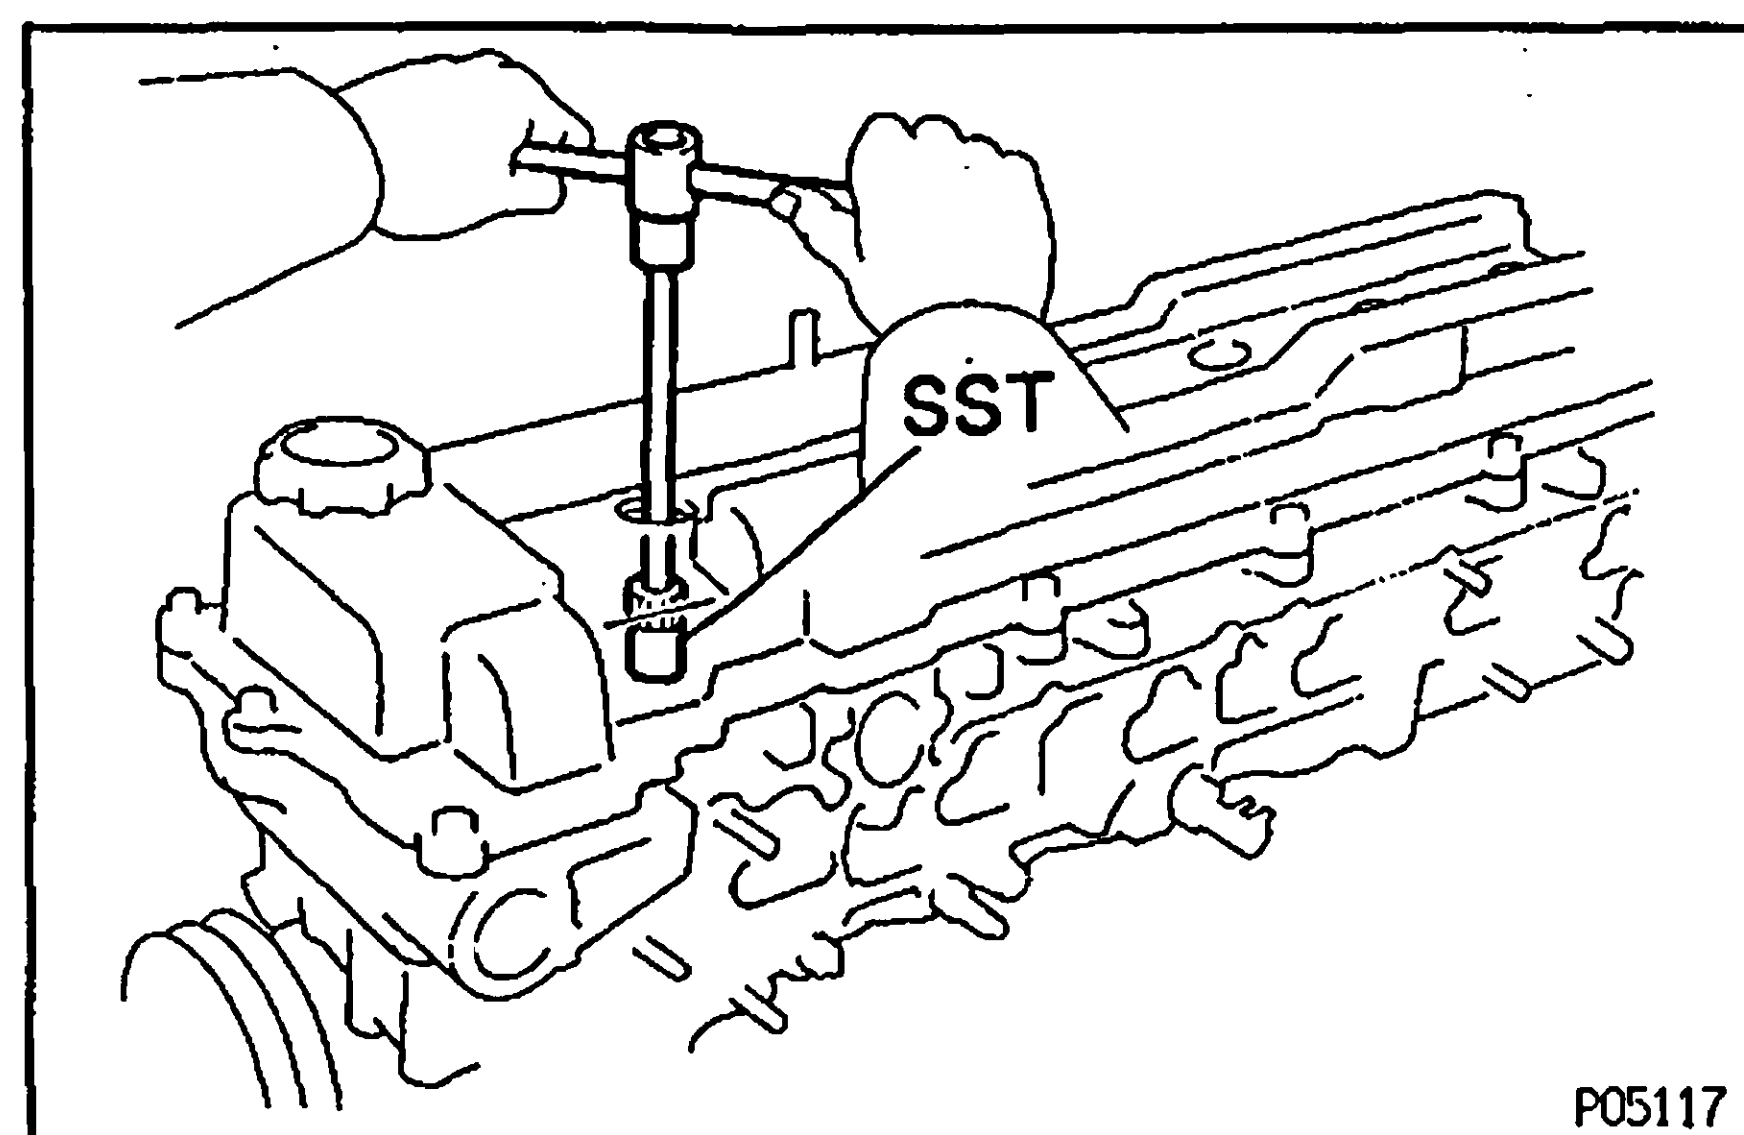**12. INSTALL SPARK PLUGS**

Using SST, install the spark plug.


SST 09155-16100

Torque: 20 N·m (200 kgf·cm, 14 ft·lbf)

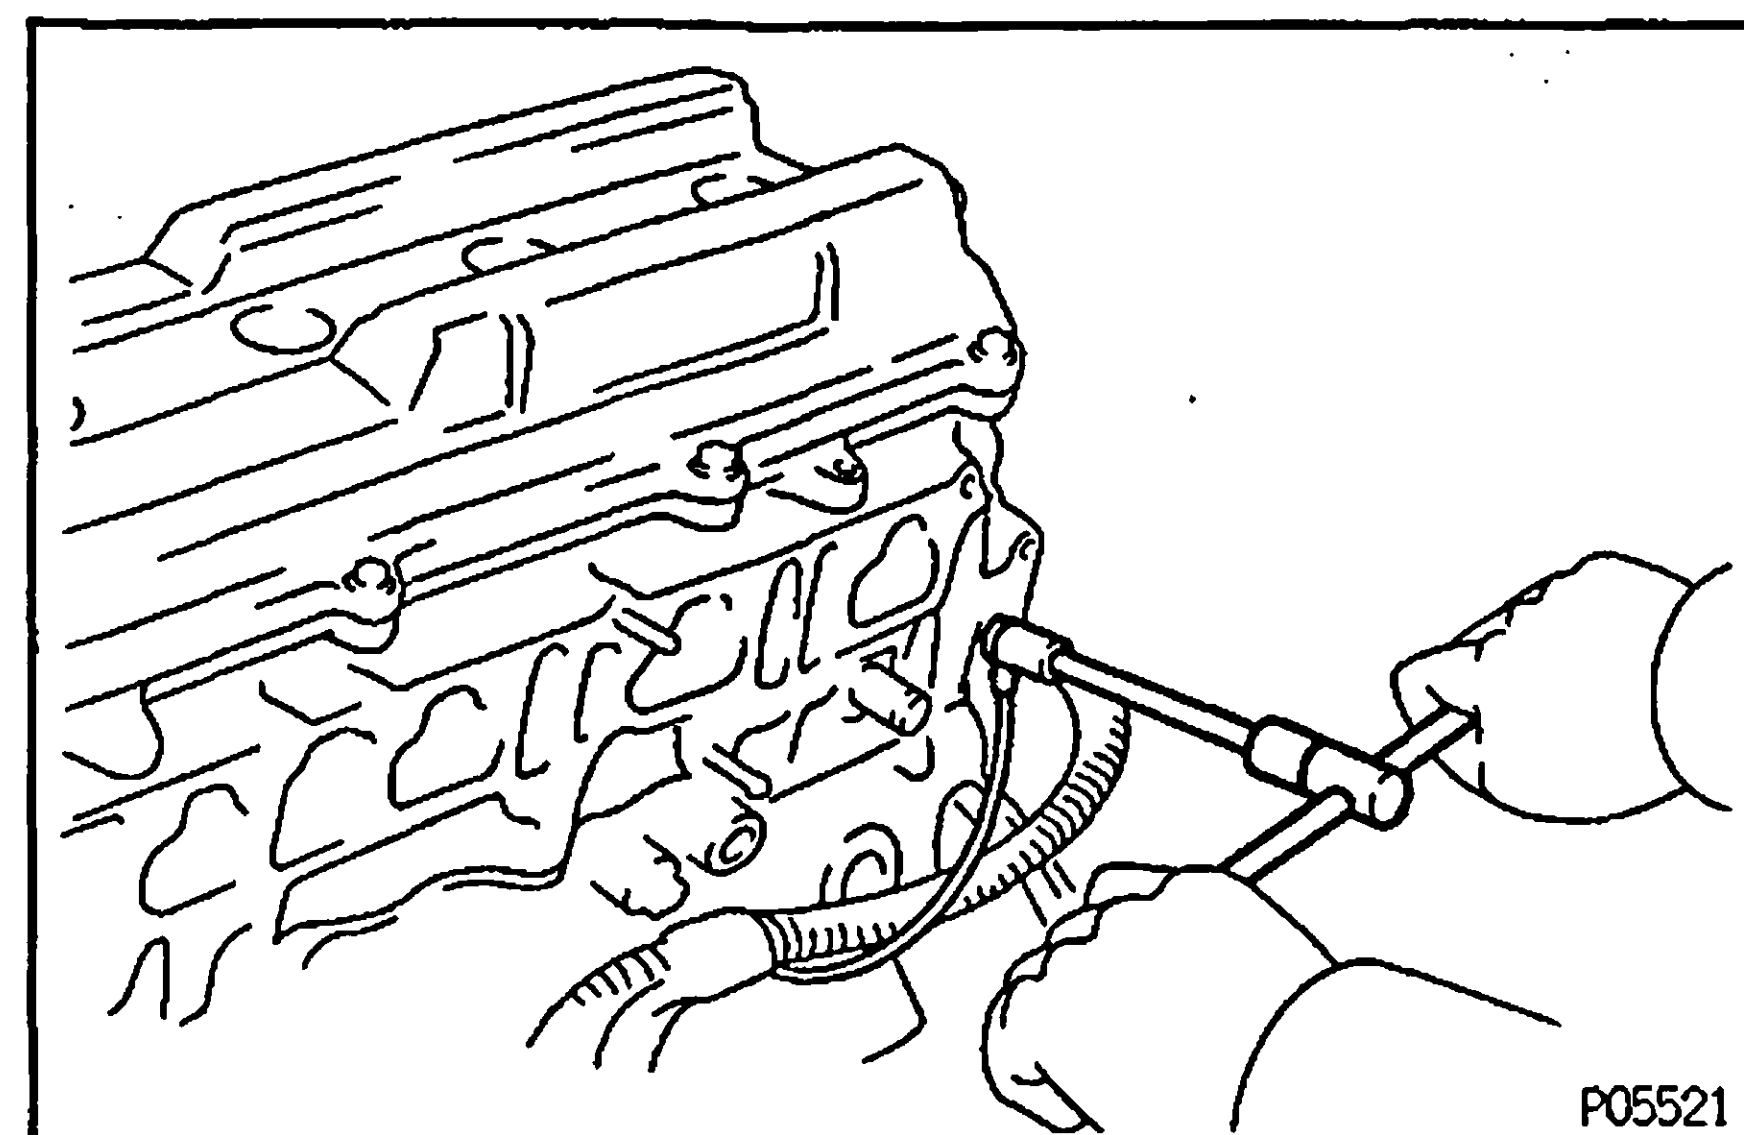
**13. CONNECT ENGINE WIRE**

Connect the engine wire to the cylinder head with the bolt.


EG

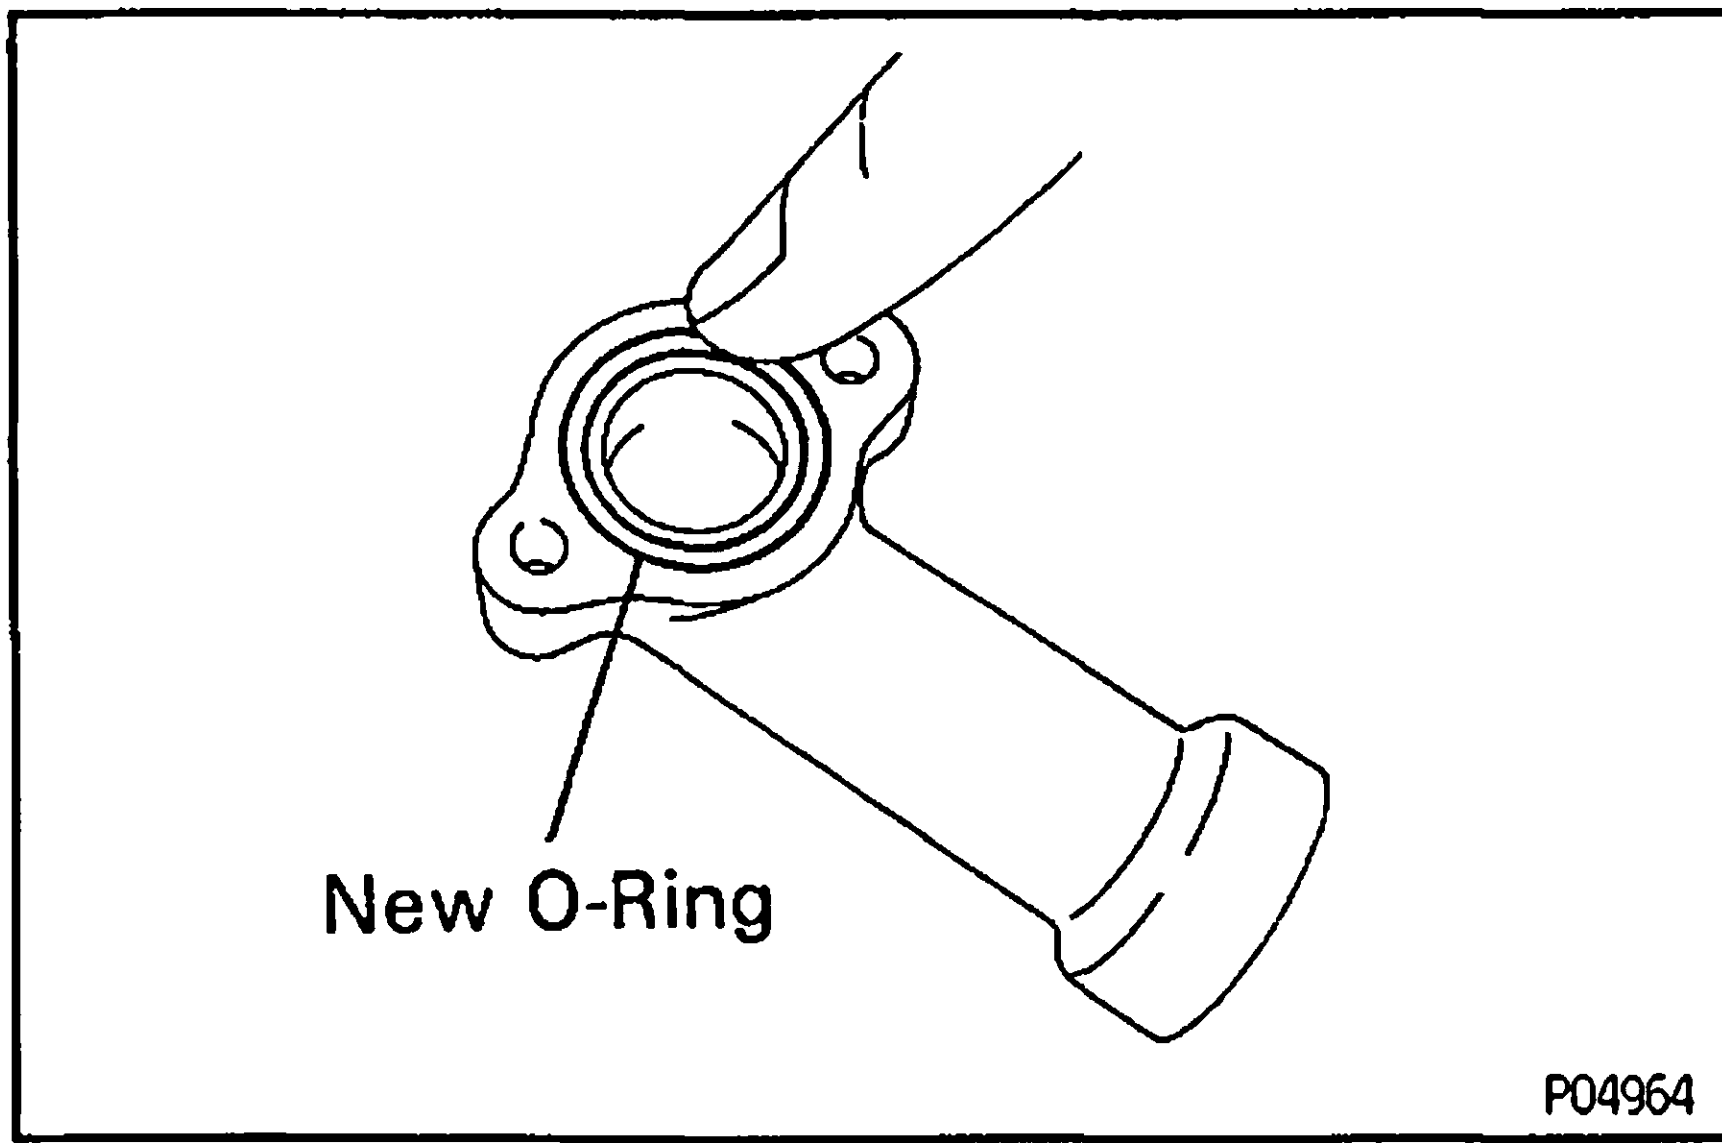


- 14. INSTALL WATER BY-PASS OUTLET AND PIPE**
 (a) Install a new O-ring to the water by-pass outlet.

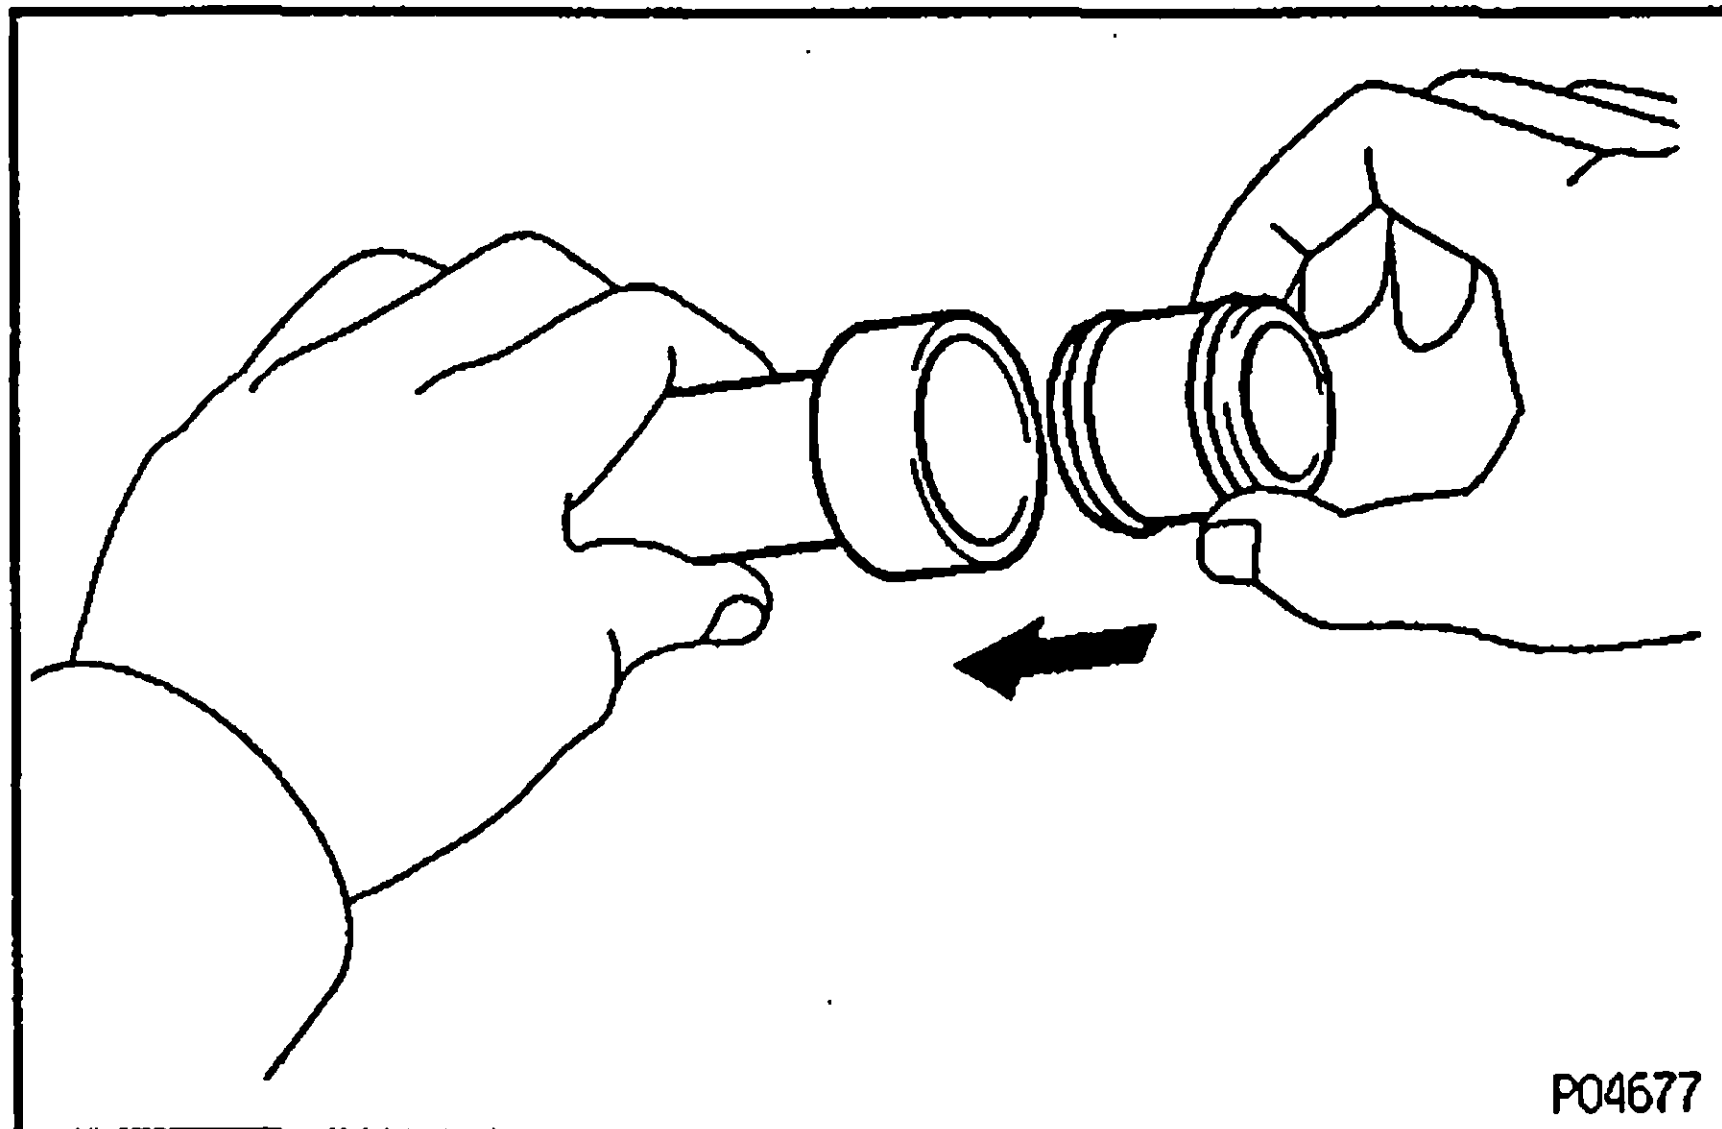


- (b) Install two new O-rings to the water by-pass pipe.
 (c) Apply soapy water to the O-rings.
 (d) Assemble the water by-pass outlet and pipe.

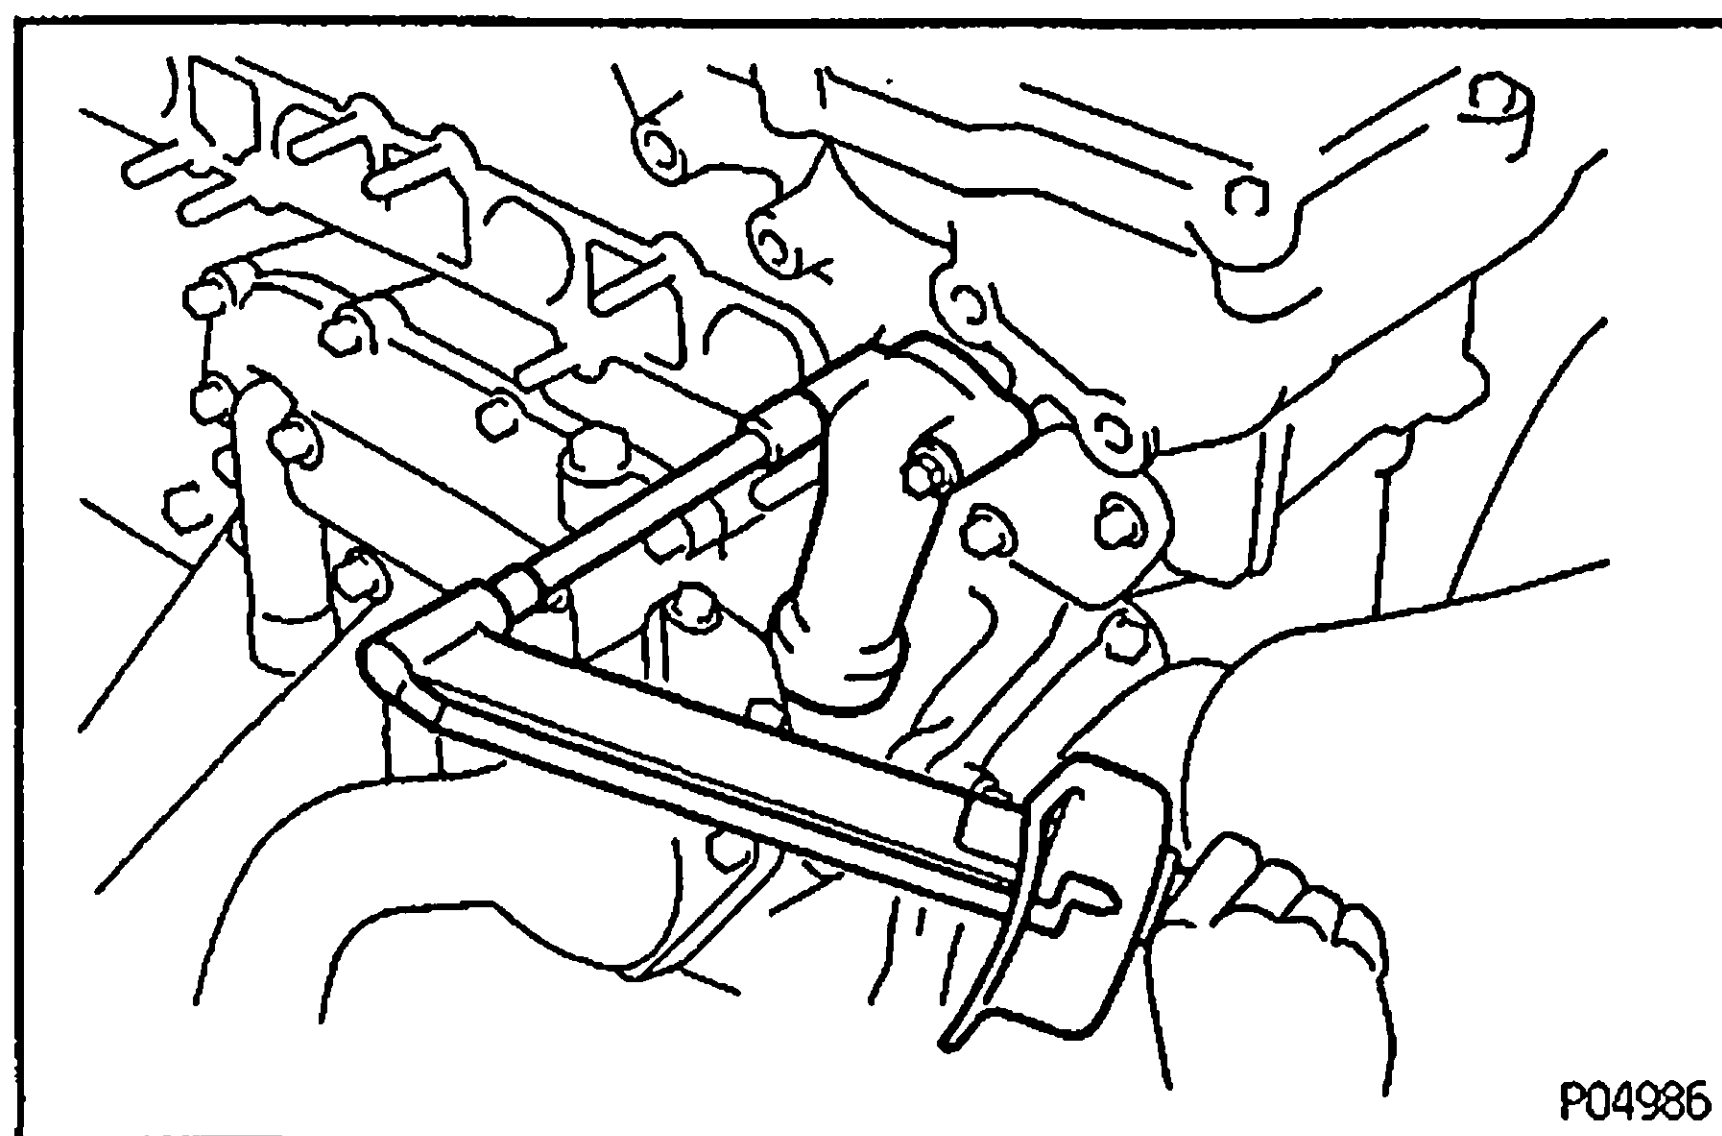


- (e) Install the water by-pass outlet and pipe with the two bolts.
 Torque: 21 N·m (210 kgf·cm, 15 ft·lbf)

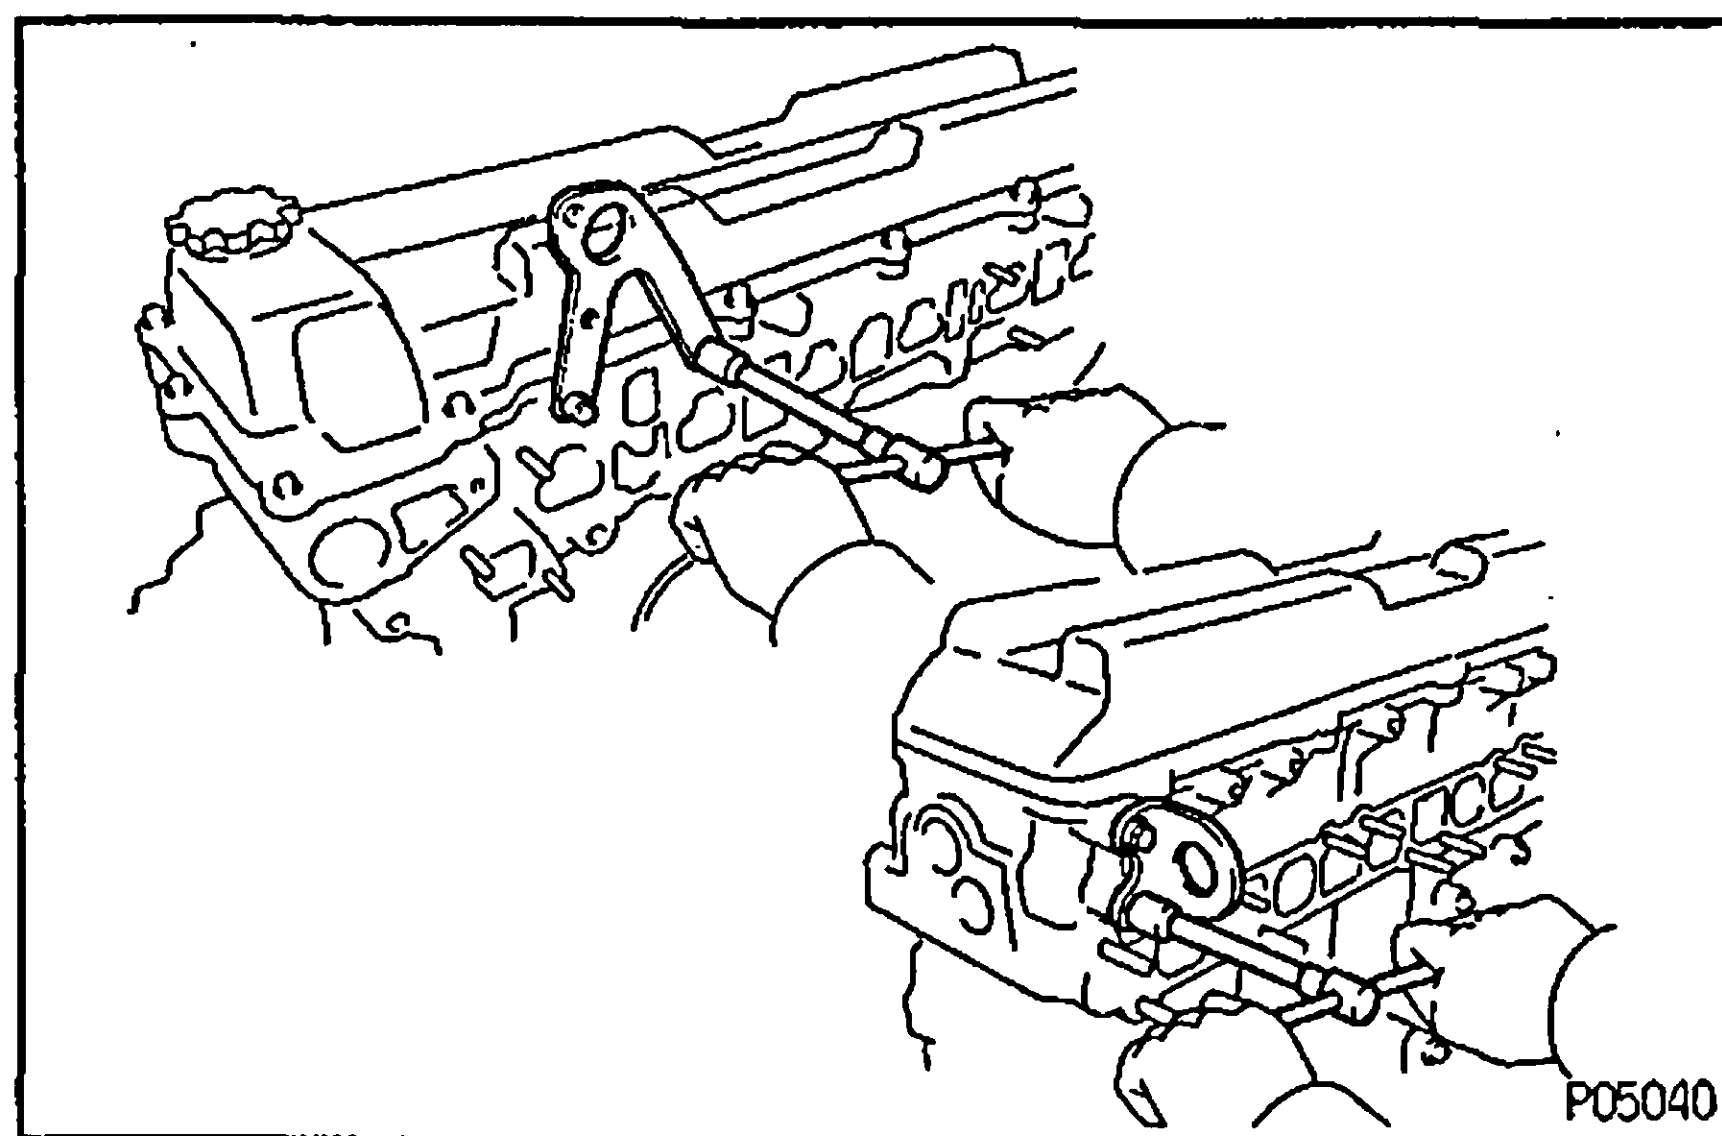

- 15. INSTALL NO.1 AND NO.2 ENGINE HANGERS**
 Torque: 41 N·m (420 kgf·cm, 30 ft·lbf)

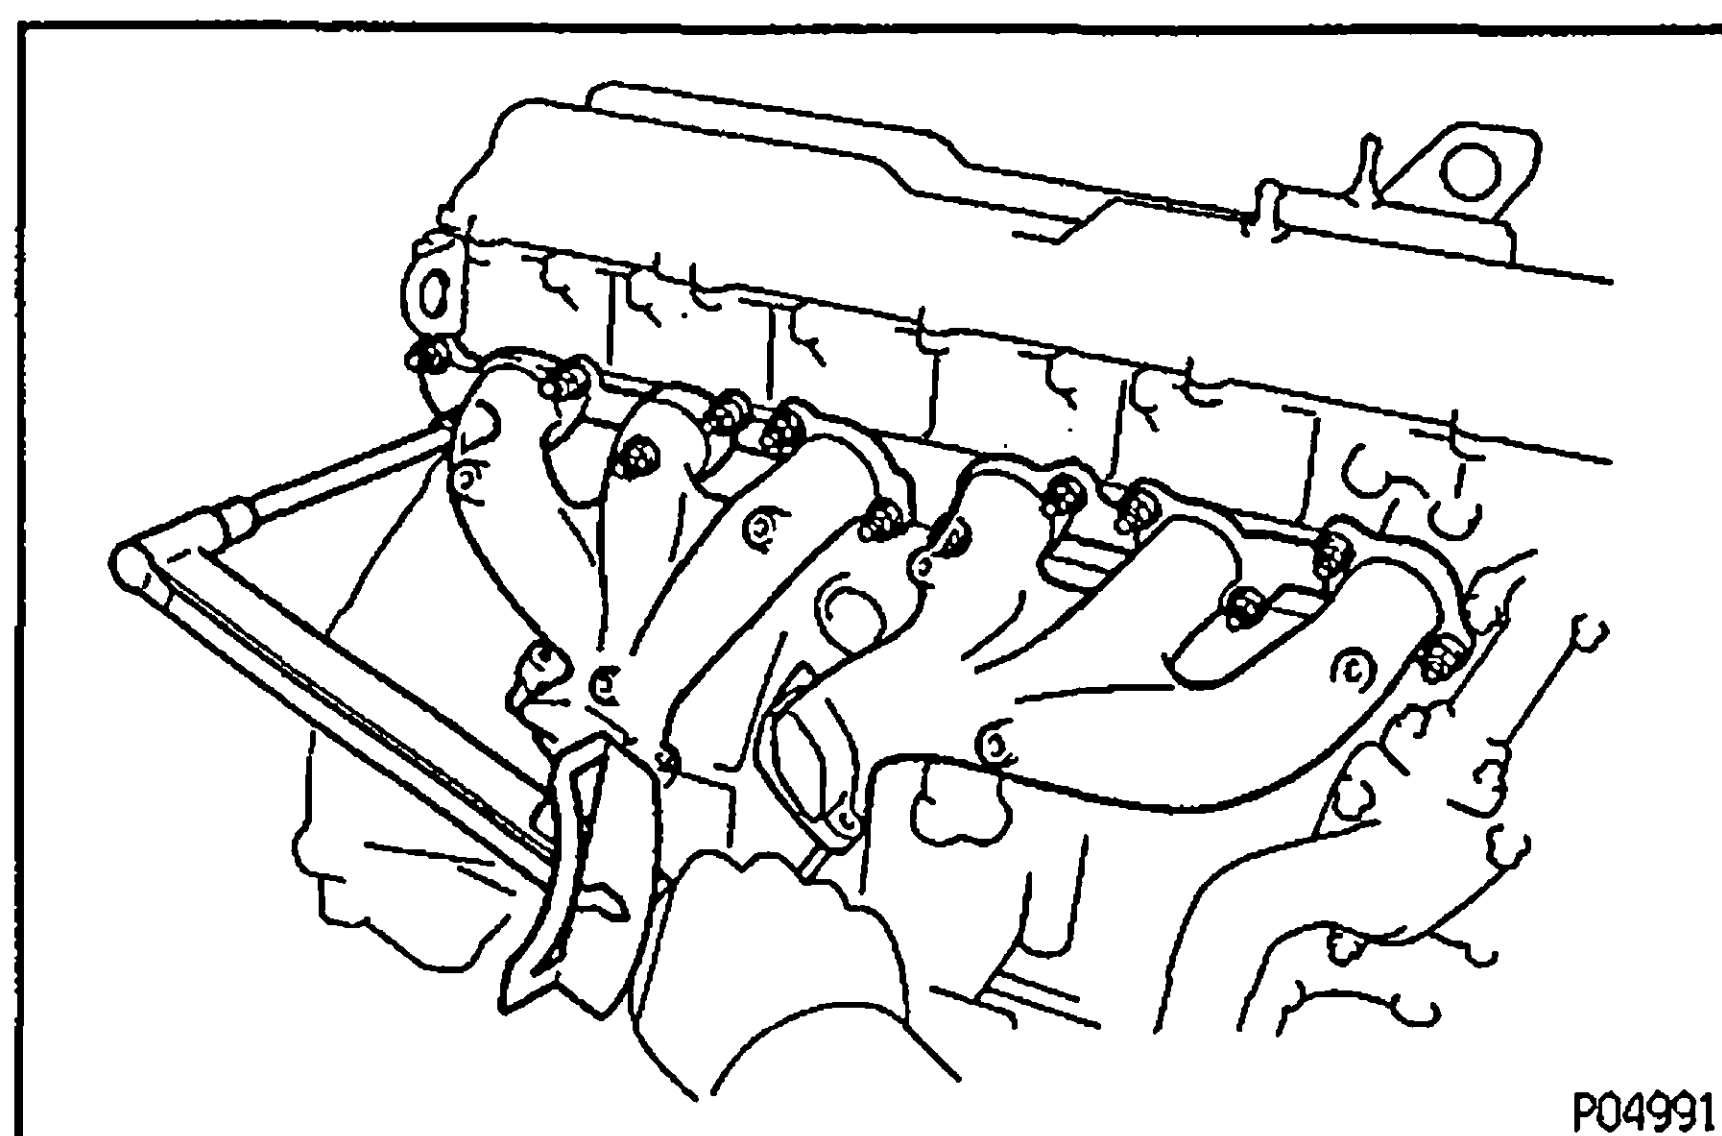

- 16. INSTALL NO.1 AND NO.2 EXHAUST MANIFOLDS**
 (a) Install two new gaskets, No.1 exhaust manifold and No.2 exhaust manifold with the 13 nuts.
 Torque: 39 N·m (400 kgf·cm, 29 ft·lbf)

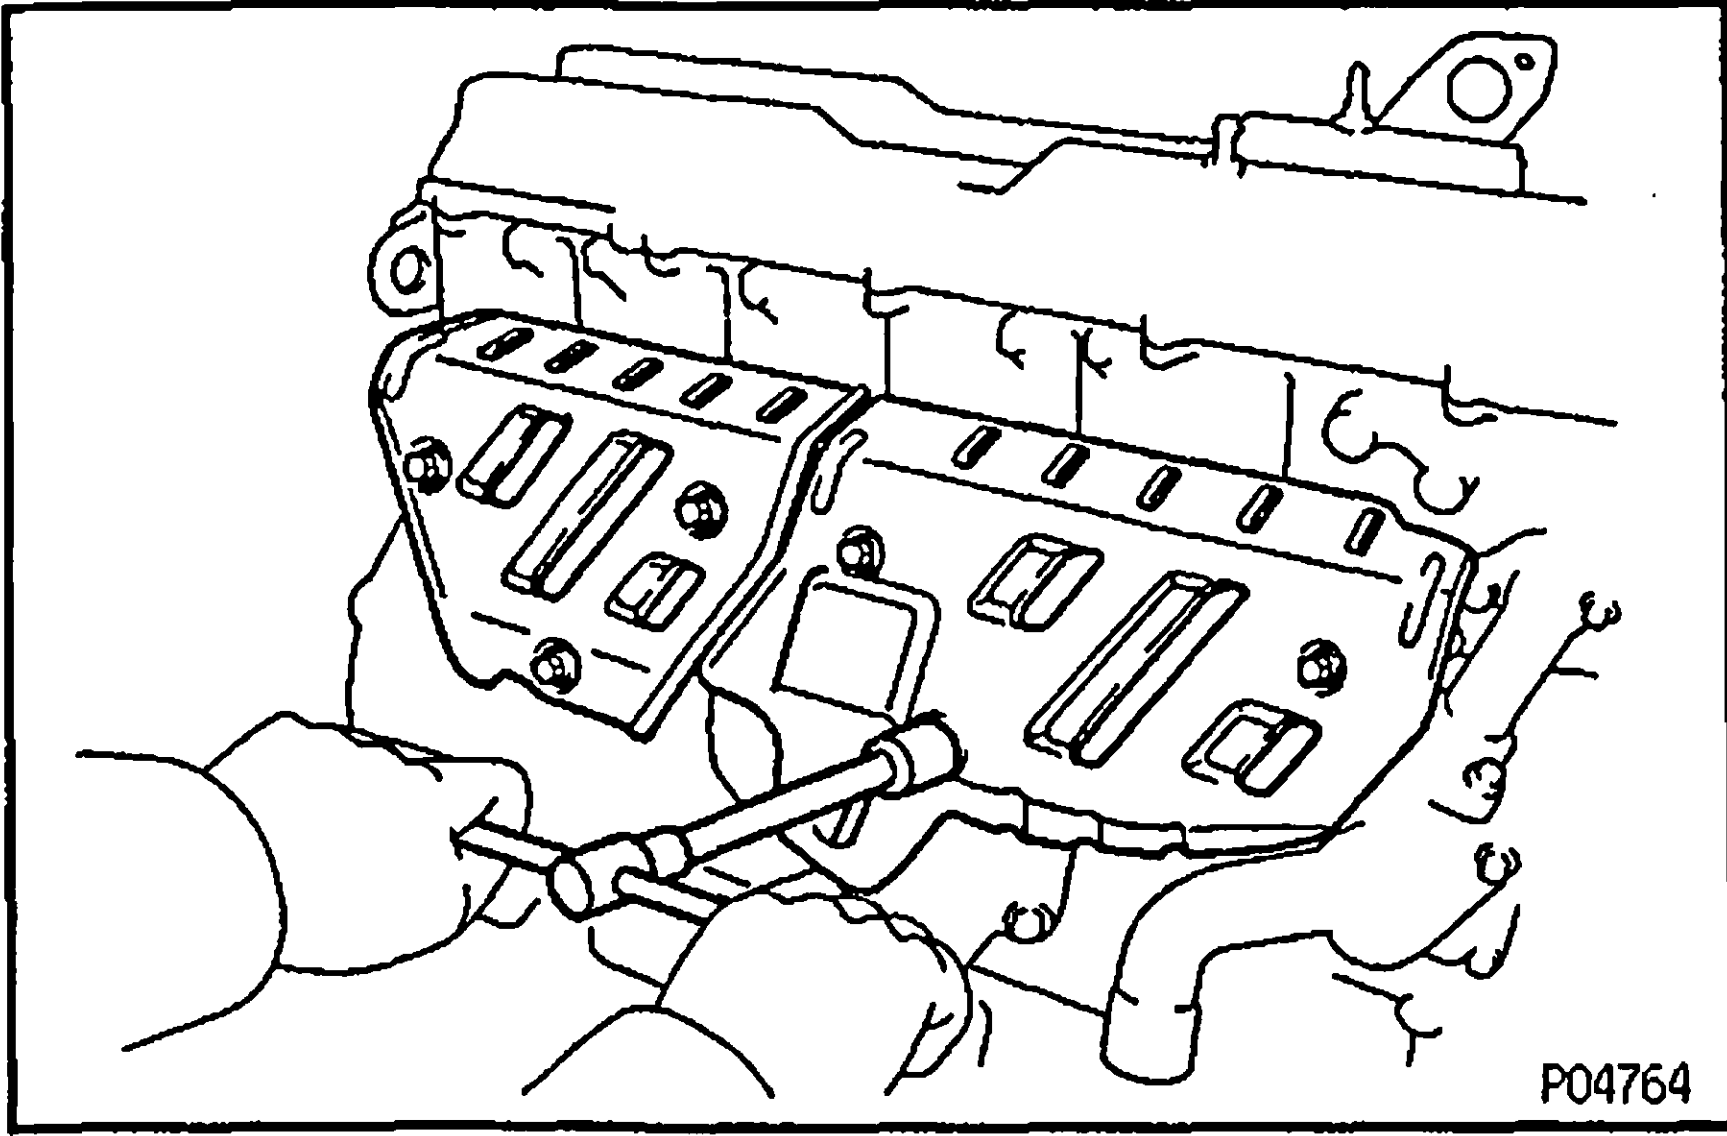

- (b) Install the No.1 heat insulator and No.2 heat insulator with the six bolts.


Torque: 19 N·m (195 kgf·cm, 14 ft·lbf)

EG

17. INSTALL WATER BY—PASS FLANGE

- (a) Remove any old packing (FIPG) material and be careful not to drop any oil on the contact surfaces of the water by—pass and intake manifold.

- Using a razor blade and gasket scraper, remove all the old packing (FIPG) material from the gasket surfaces and sealing grooves.
- Thoroughly clean all components to remove all the loose material.
- Using a non—residue solvent, clean both sealing surfaces.

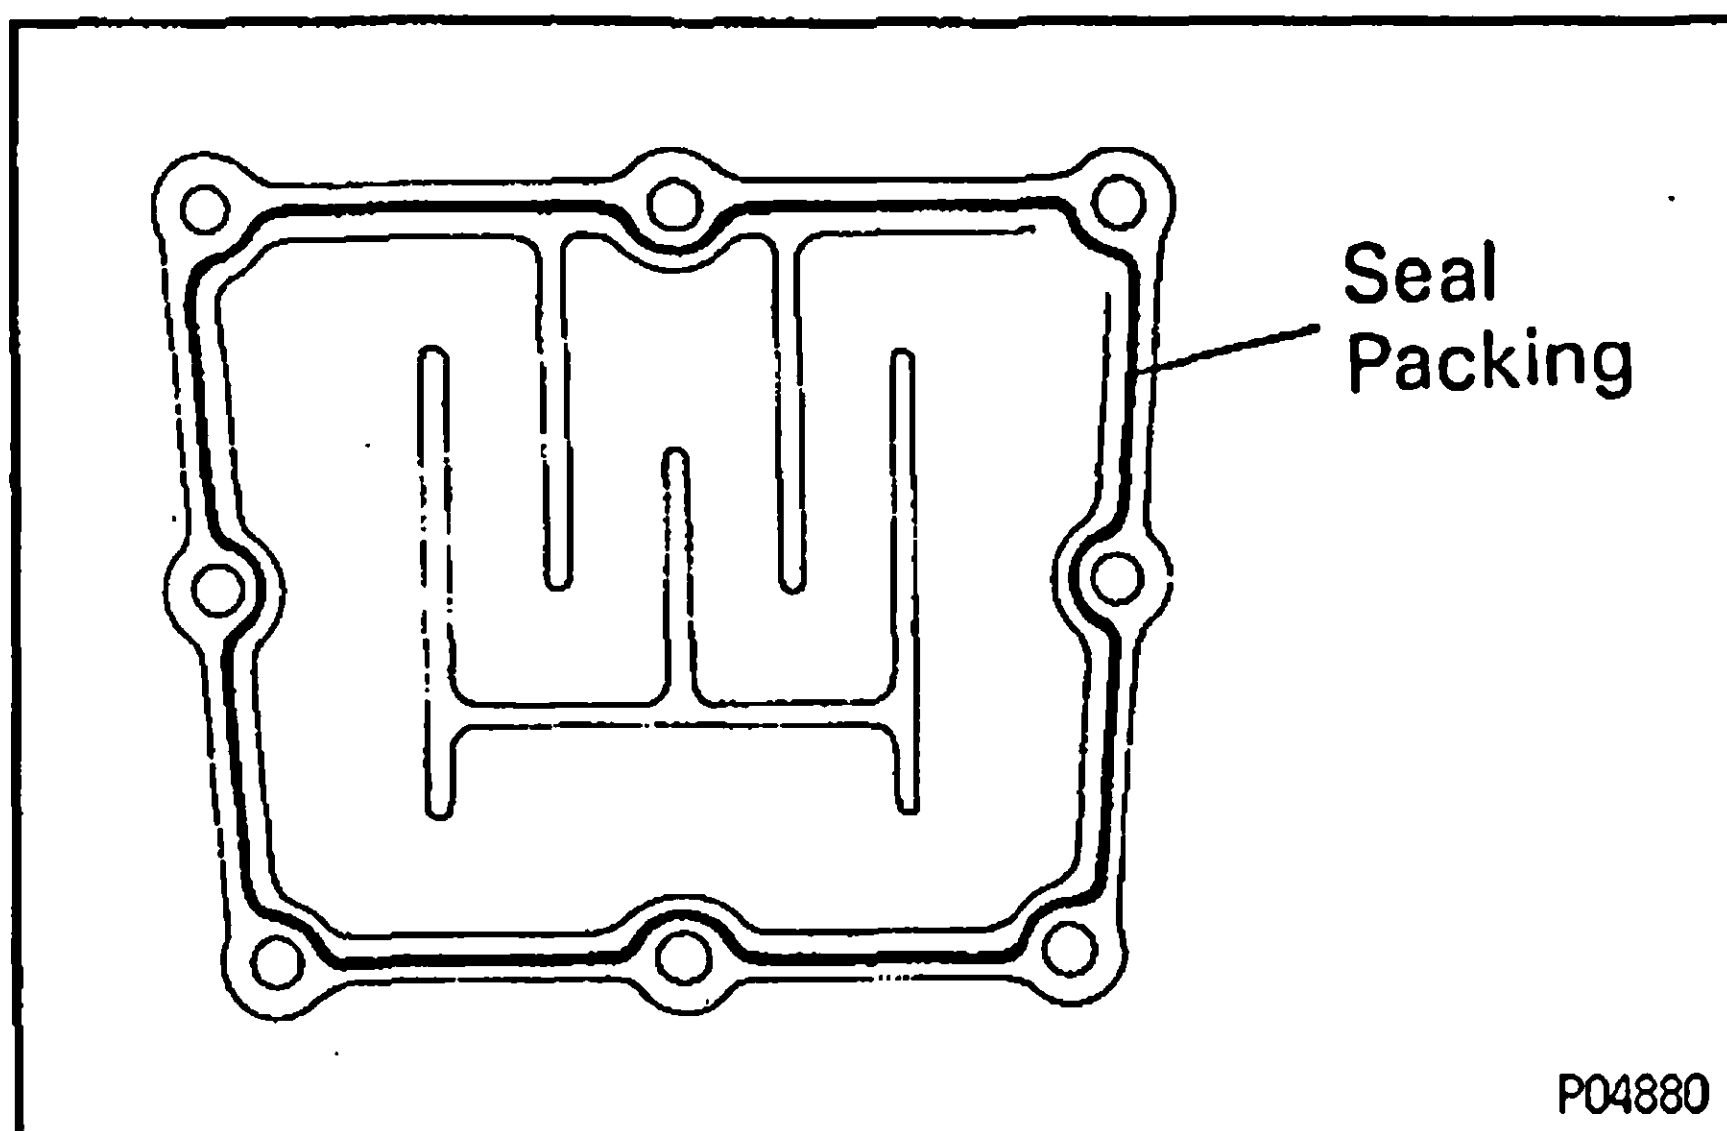

- (b) Apply seal packing to the water by—pass flange as shown in the illustration.


Seal packing:

Part No.08826—00080 or equivalent

- Install a nozzle that has been cut to a 3 — 4 mm (0.12 — 0.16 in.) opening.


HINT: Avoid applying an excessive amount to the surface.

- Parts must be assembled within 5 minutes of application. Otherwise the material must be removed and reapplied.
- Immediately remove nozzle from the tube and reinstall cap.

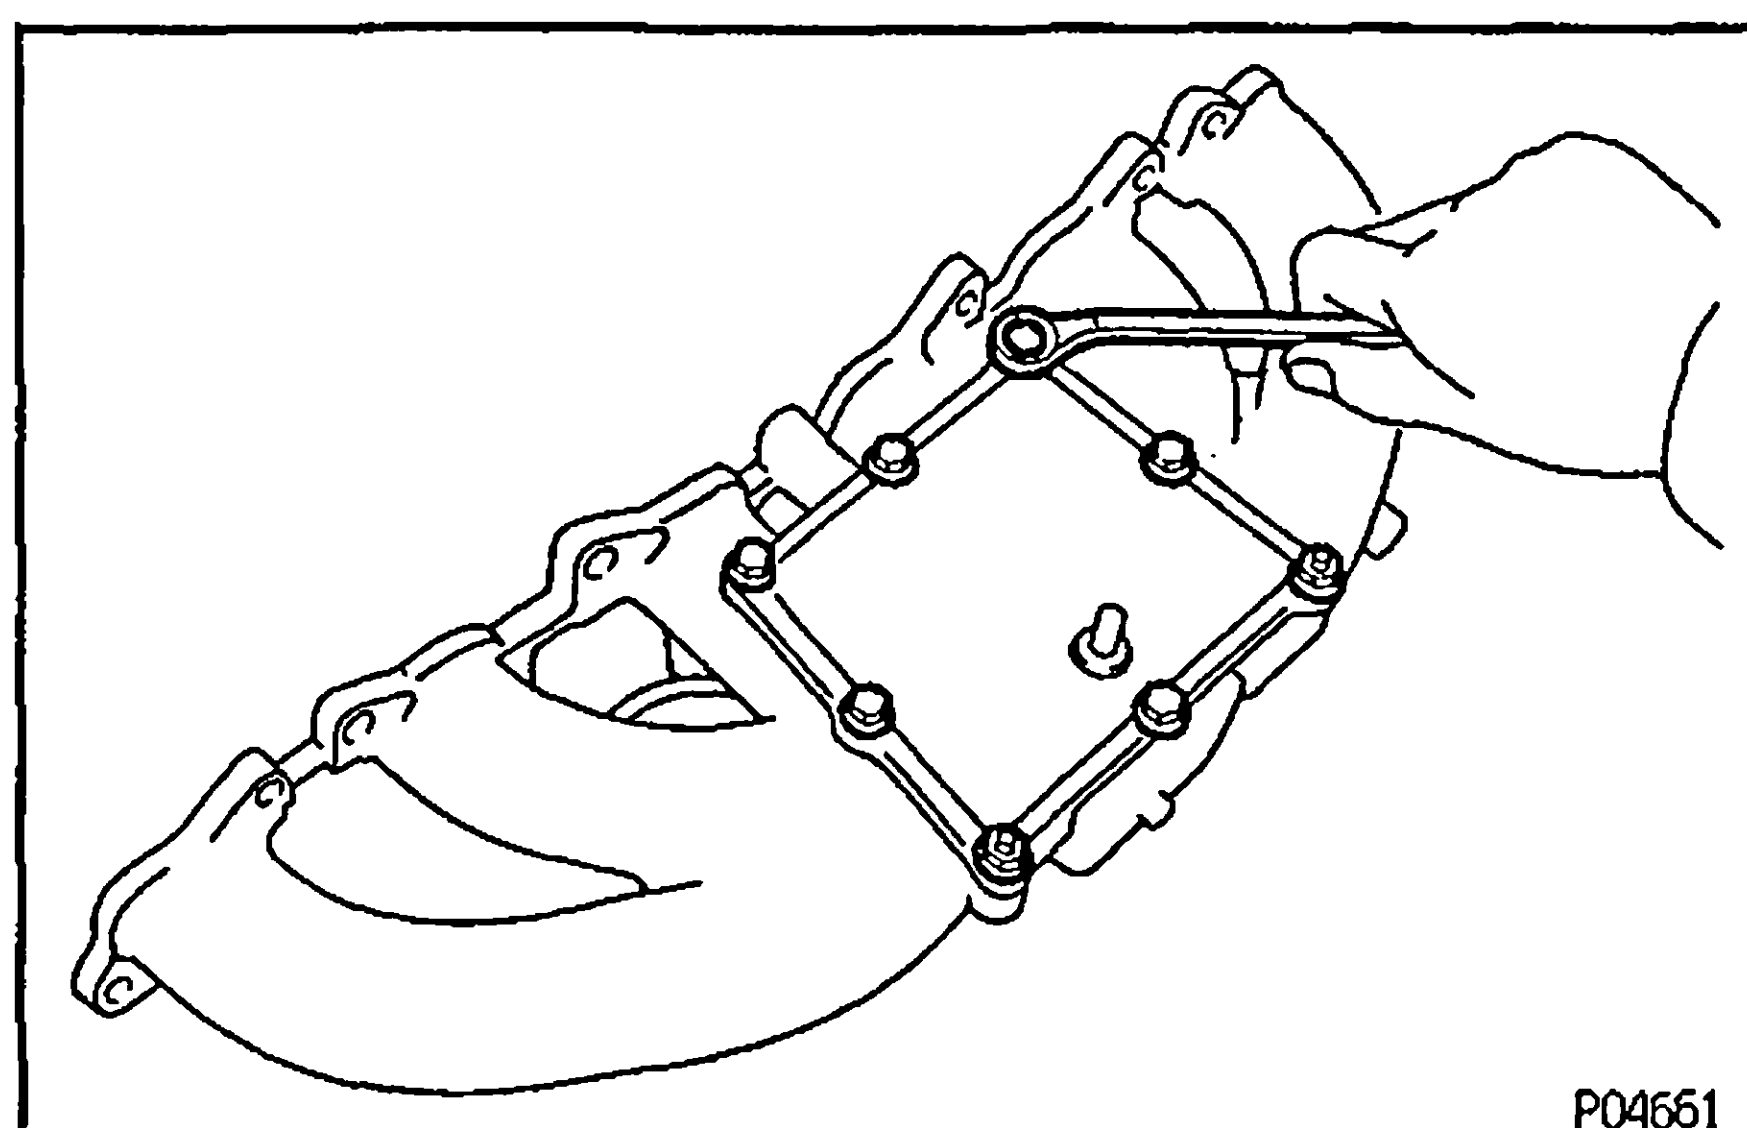


- (c) Install the water by—pass flange with the six bolts and two nuts.

Torque: 21 N·m (210 kgf·cm, 15 ft·lbf)

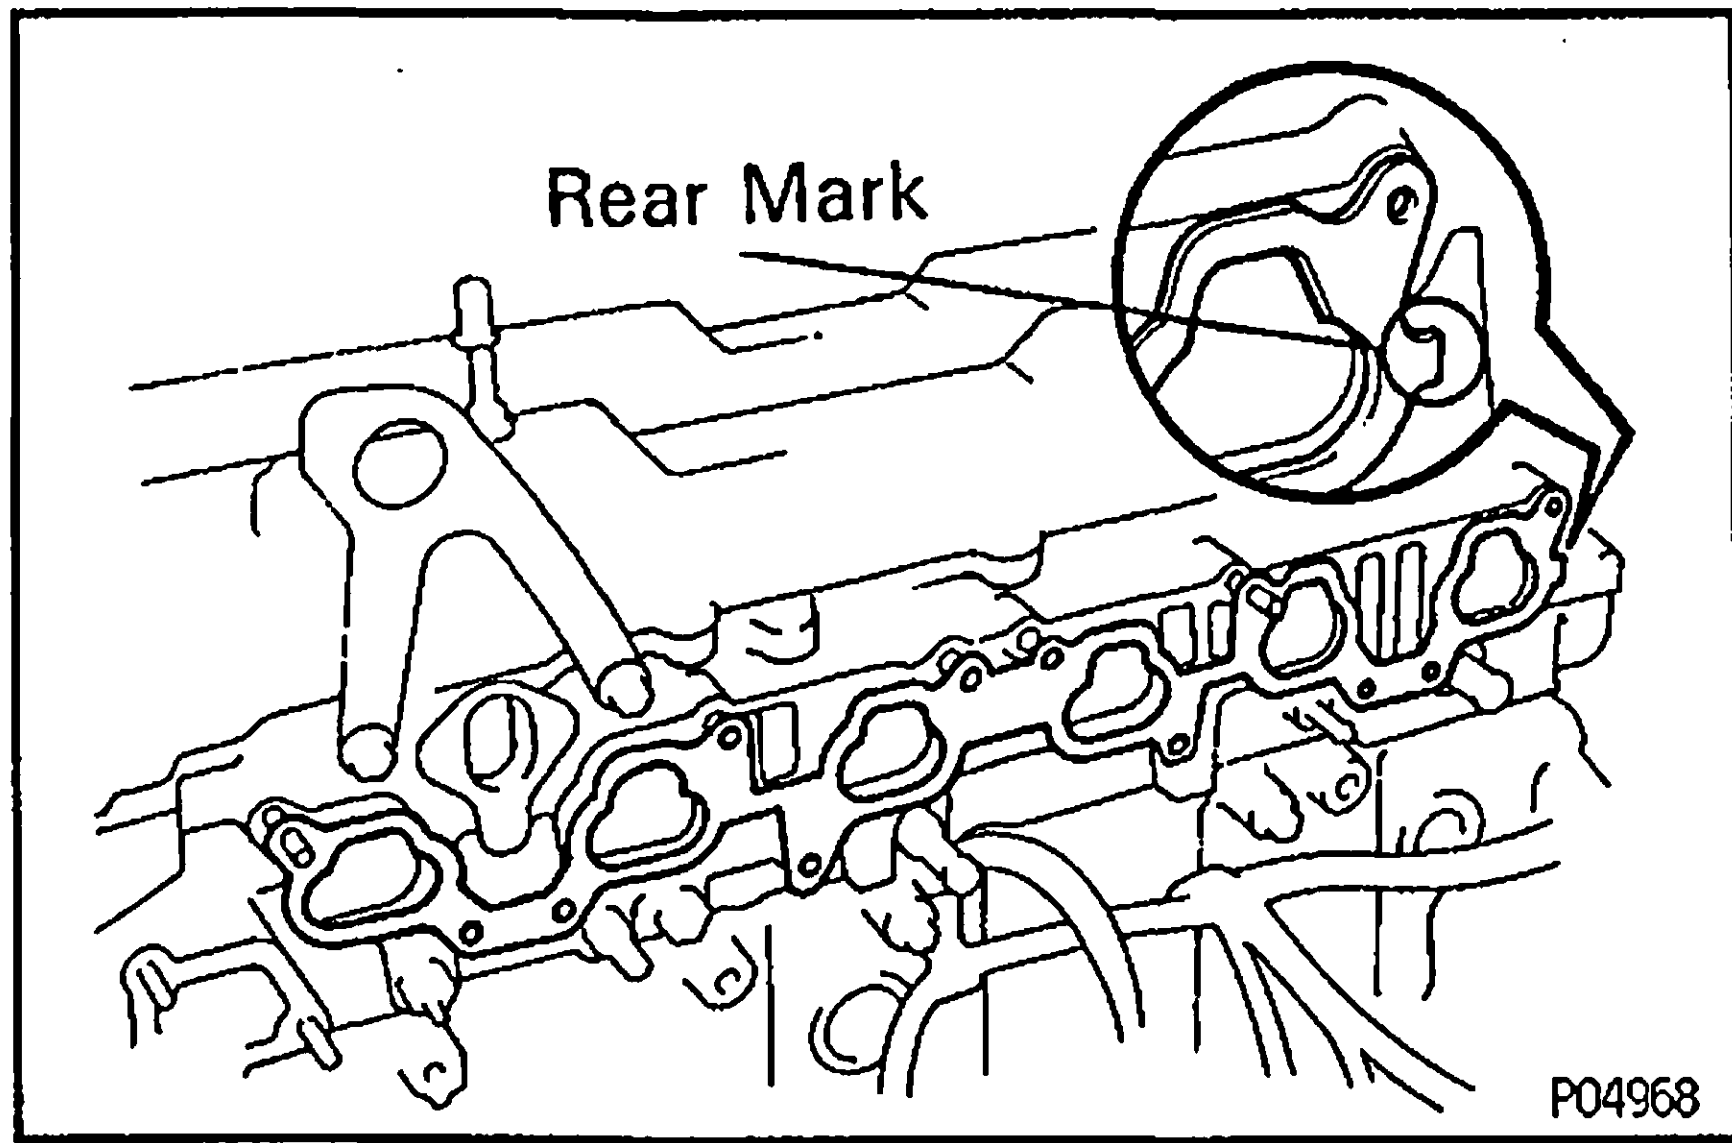
**18. INSTALL INTAKE MANIFOLD WITH CARBURETOR**

- (a) Place a new gasket so that the rear mark is toward the rear side.

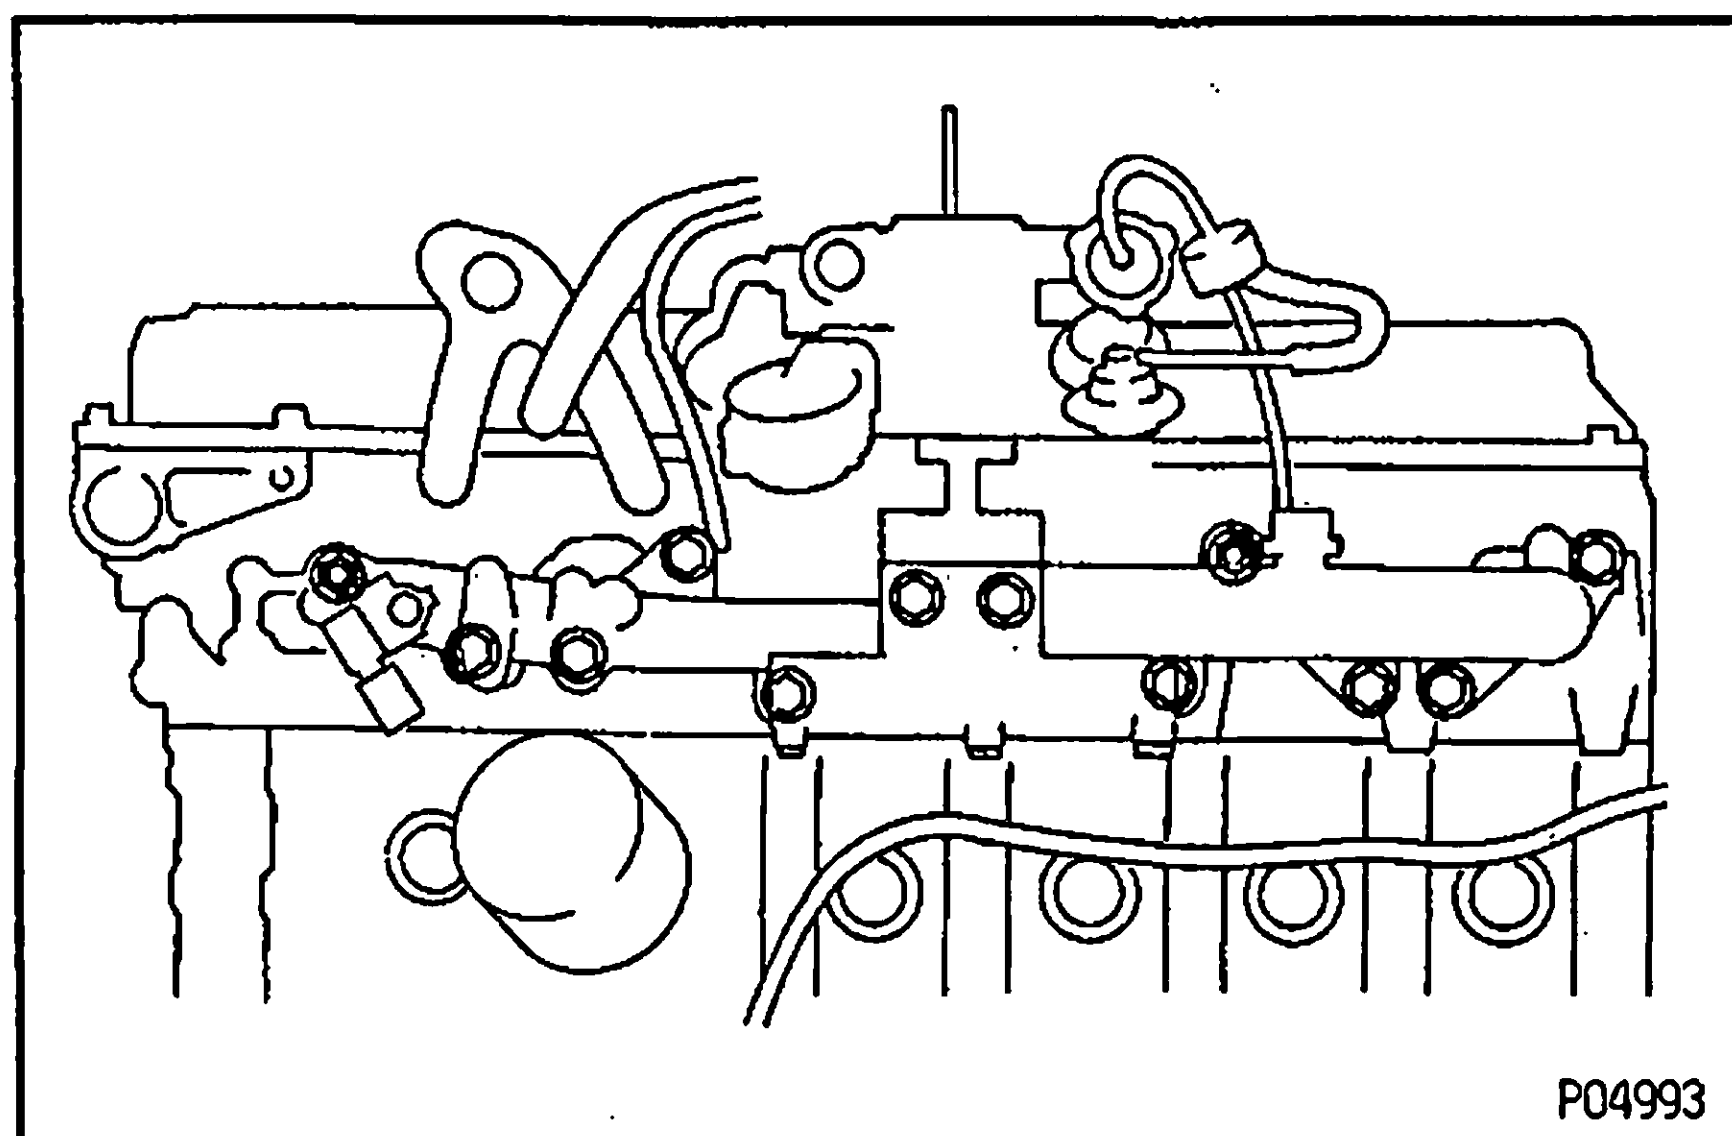


- (b) Install the intake manifold and ground strap with the six bolts and two nuts.

Torque: 21 N·m (210 kgf·cm, 15 ft·lbf)

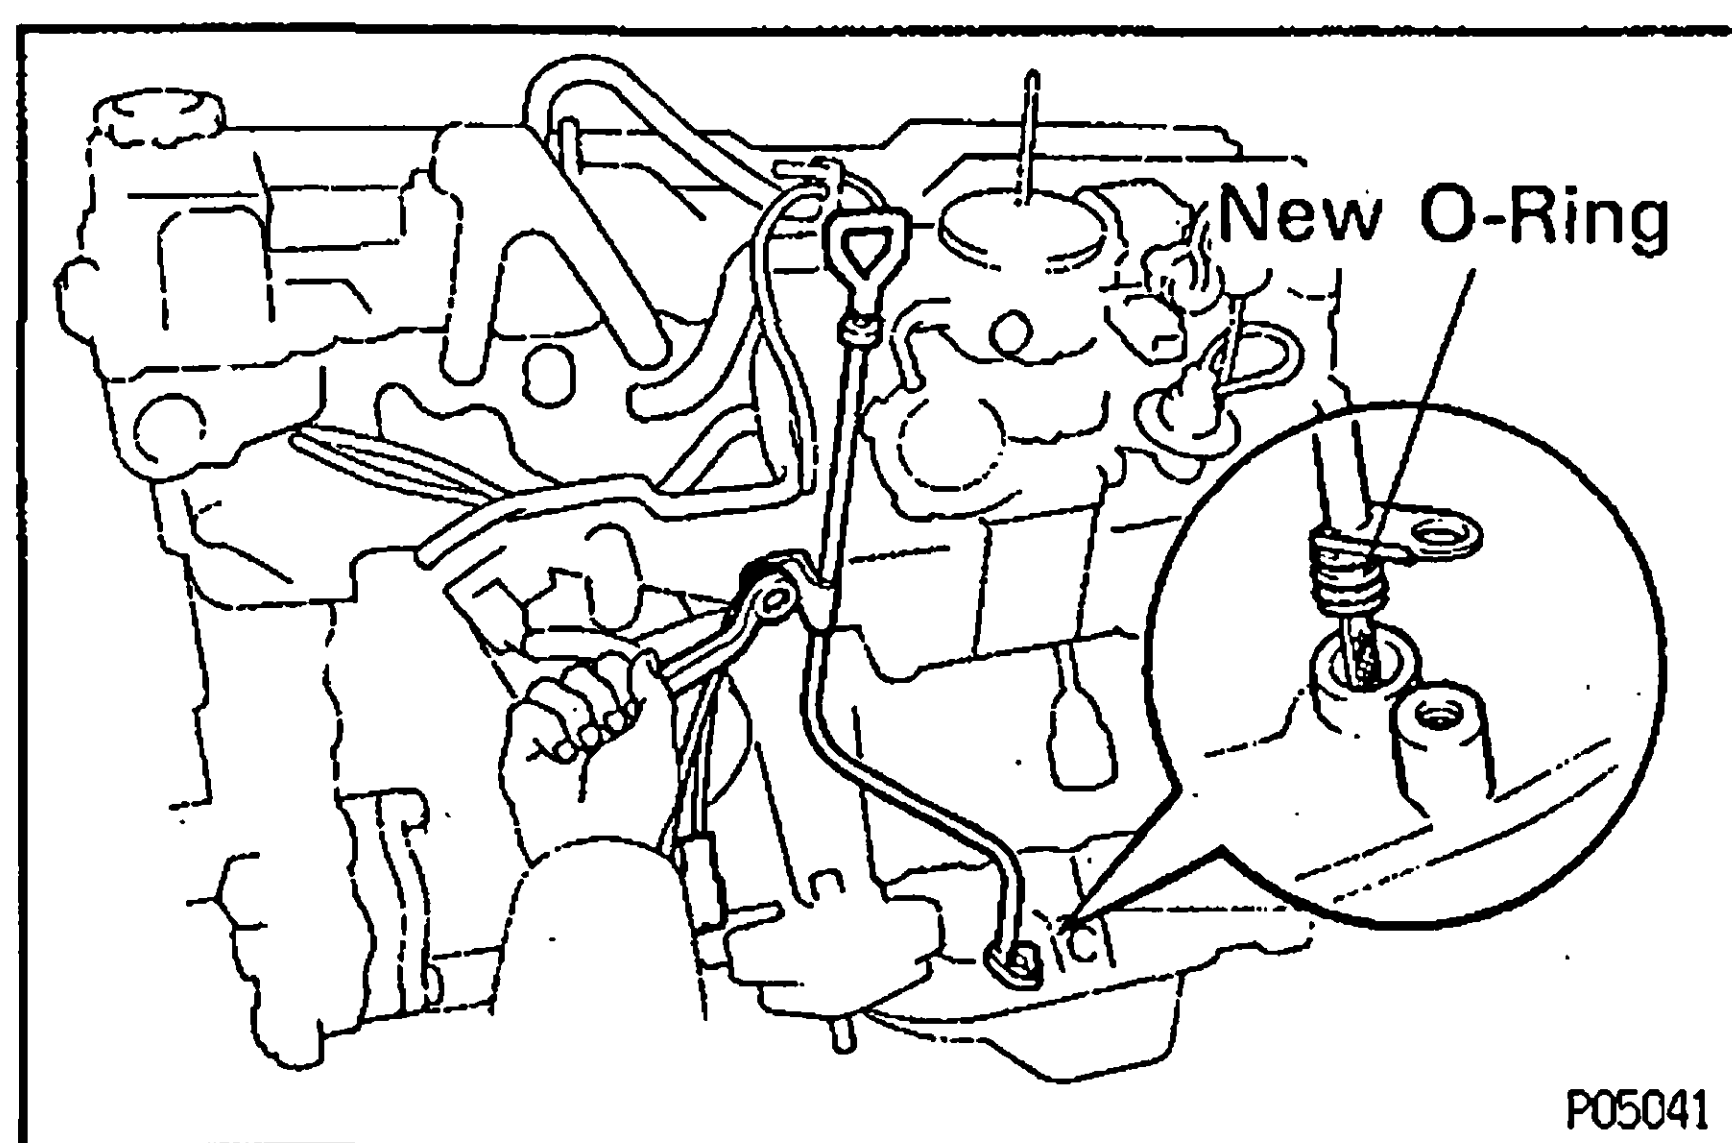**19. INSTALL OIL DIPSTICK AND GUIDE**


- (a) Install a new O—ring to the dipstick guide.
 (b) Apply light coat of engine oil on the O—ring.
 (c) Push in the dipstick guide into the guide hole of the No.1 oil pan.
 (d) Install the ground strap and dipstick guide with the two bolts.

Torque: 20 N·m (200 kgf·cm, 14 ft·lbf)


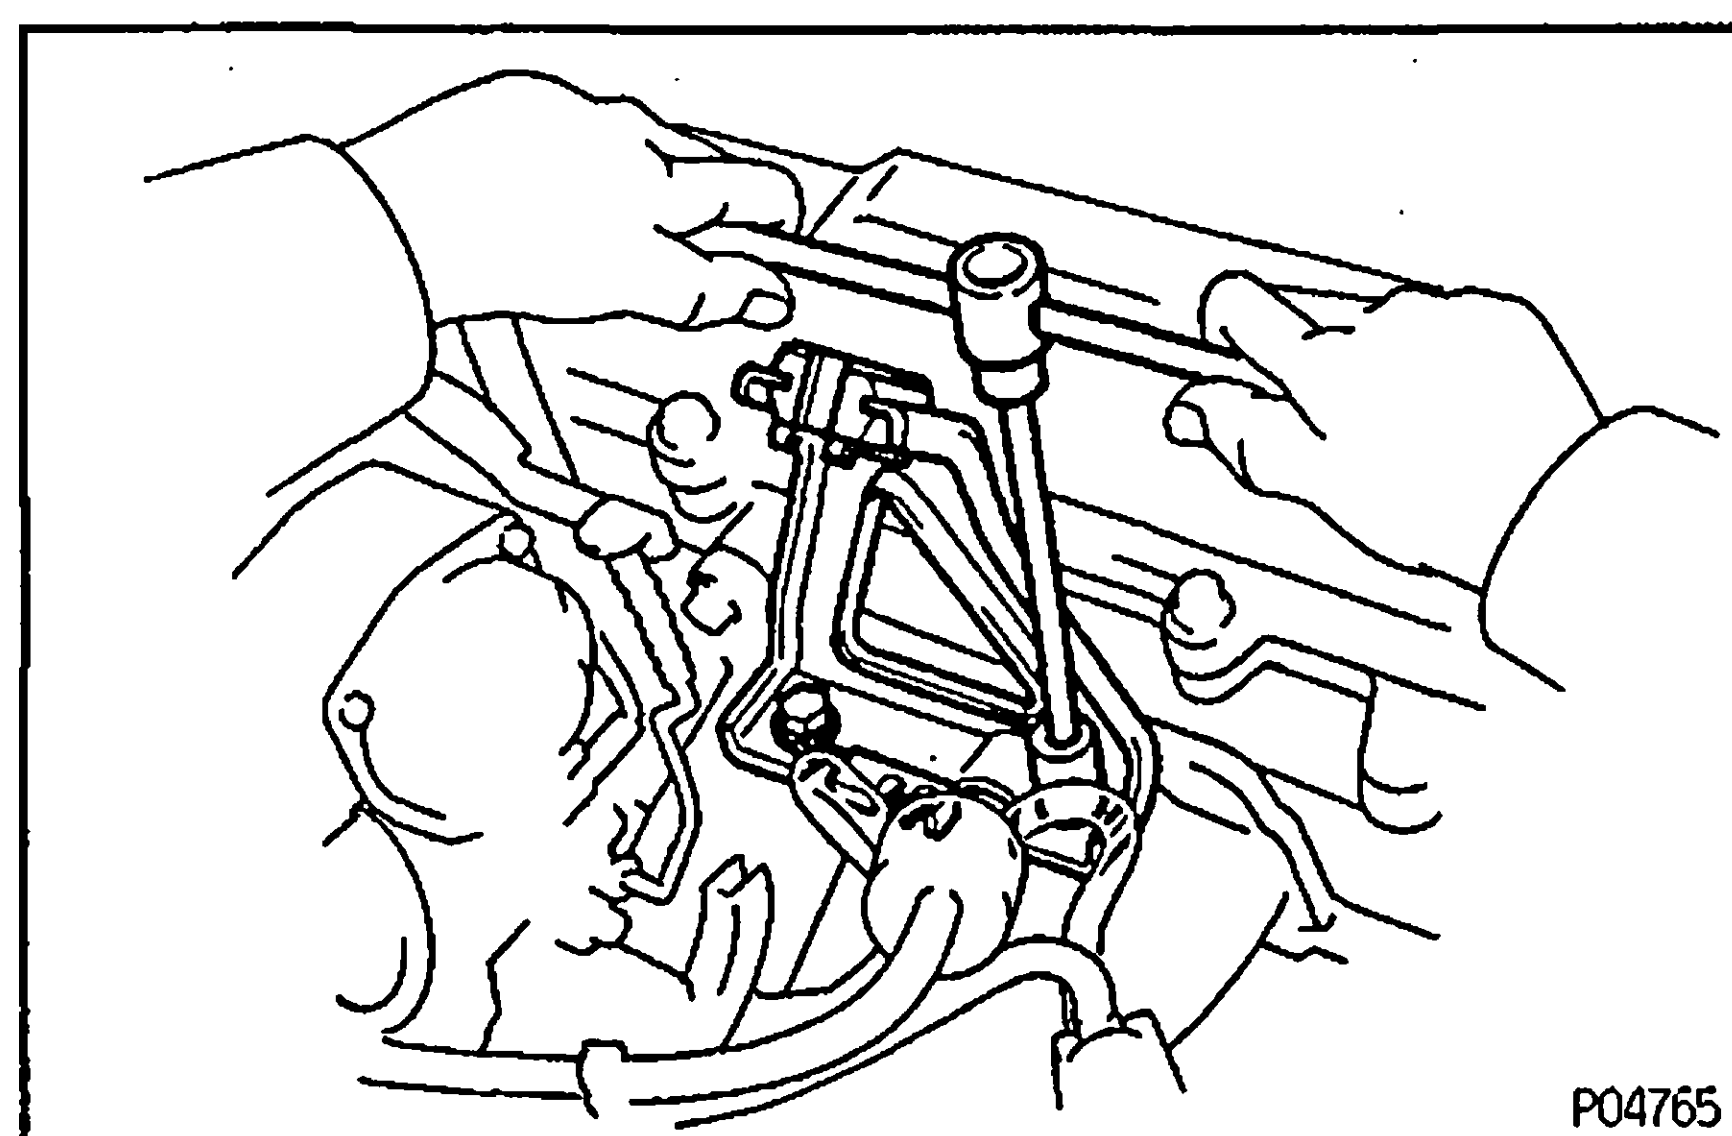
**20. INSTALL ACCELERATOR CABLE BRACKET**

Install the accelerator cable bracket with the two bolts.

Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

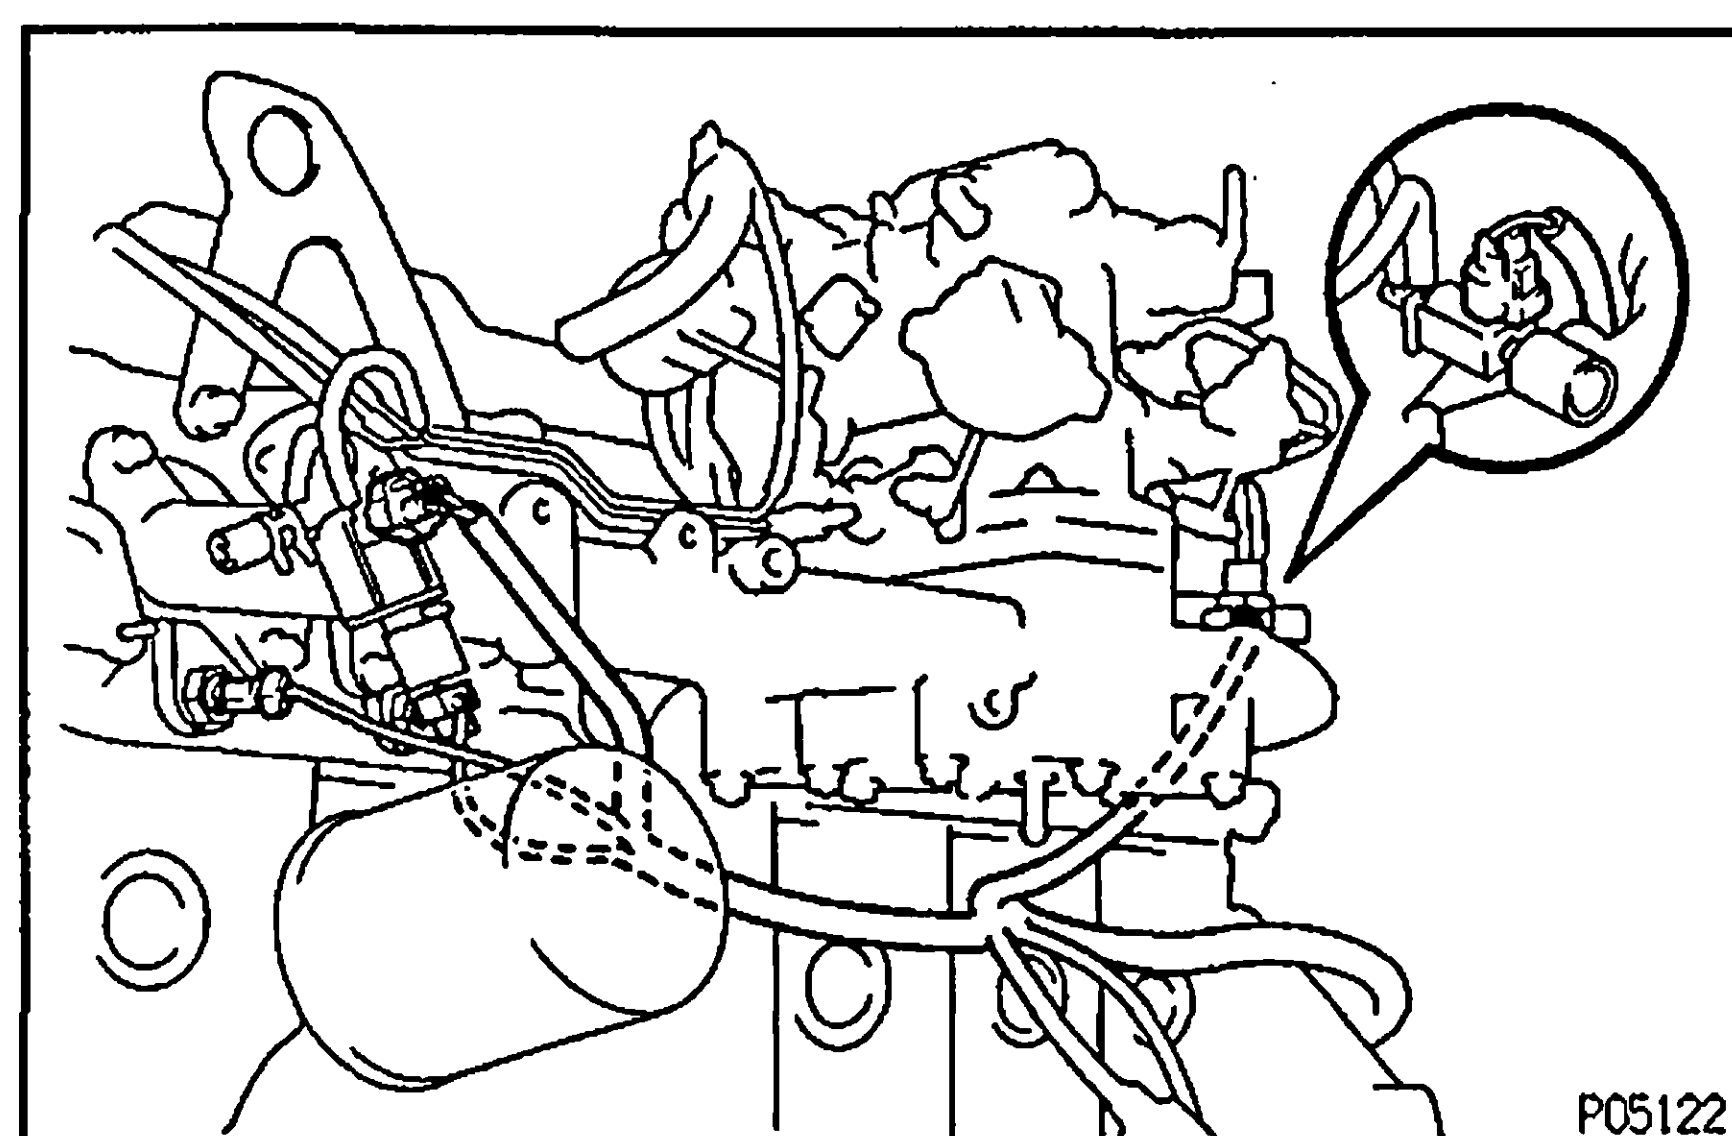**21. CONNECT FOLLOWING CONNECTORS:**


- (a) Spark control VSV (for G.C.C.)
 (b) Water temperature switch
 (c) Water temperature sensor (for G.C.C.)
 (d) TP VSV

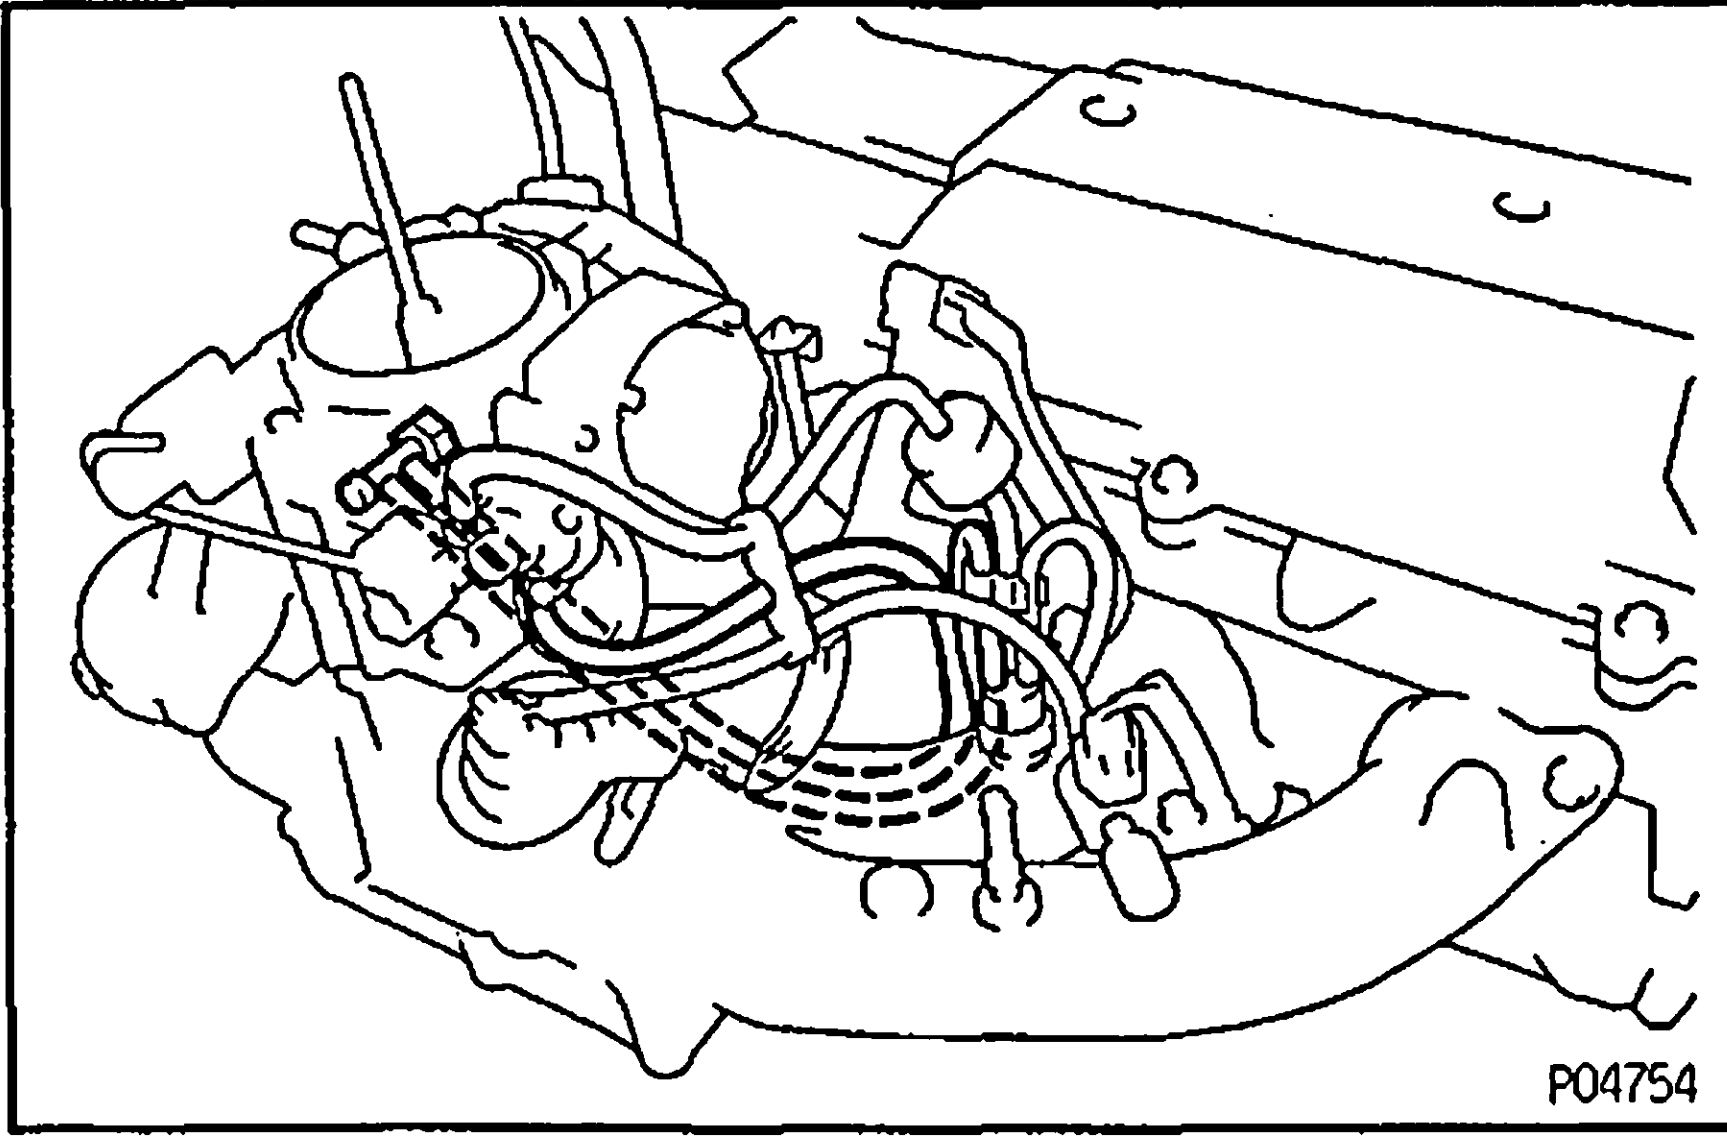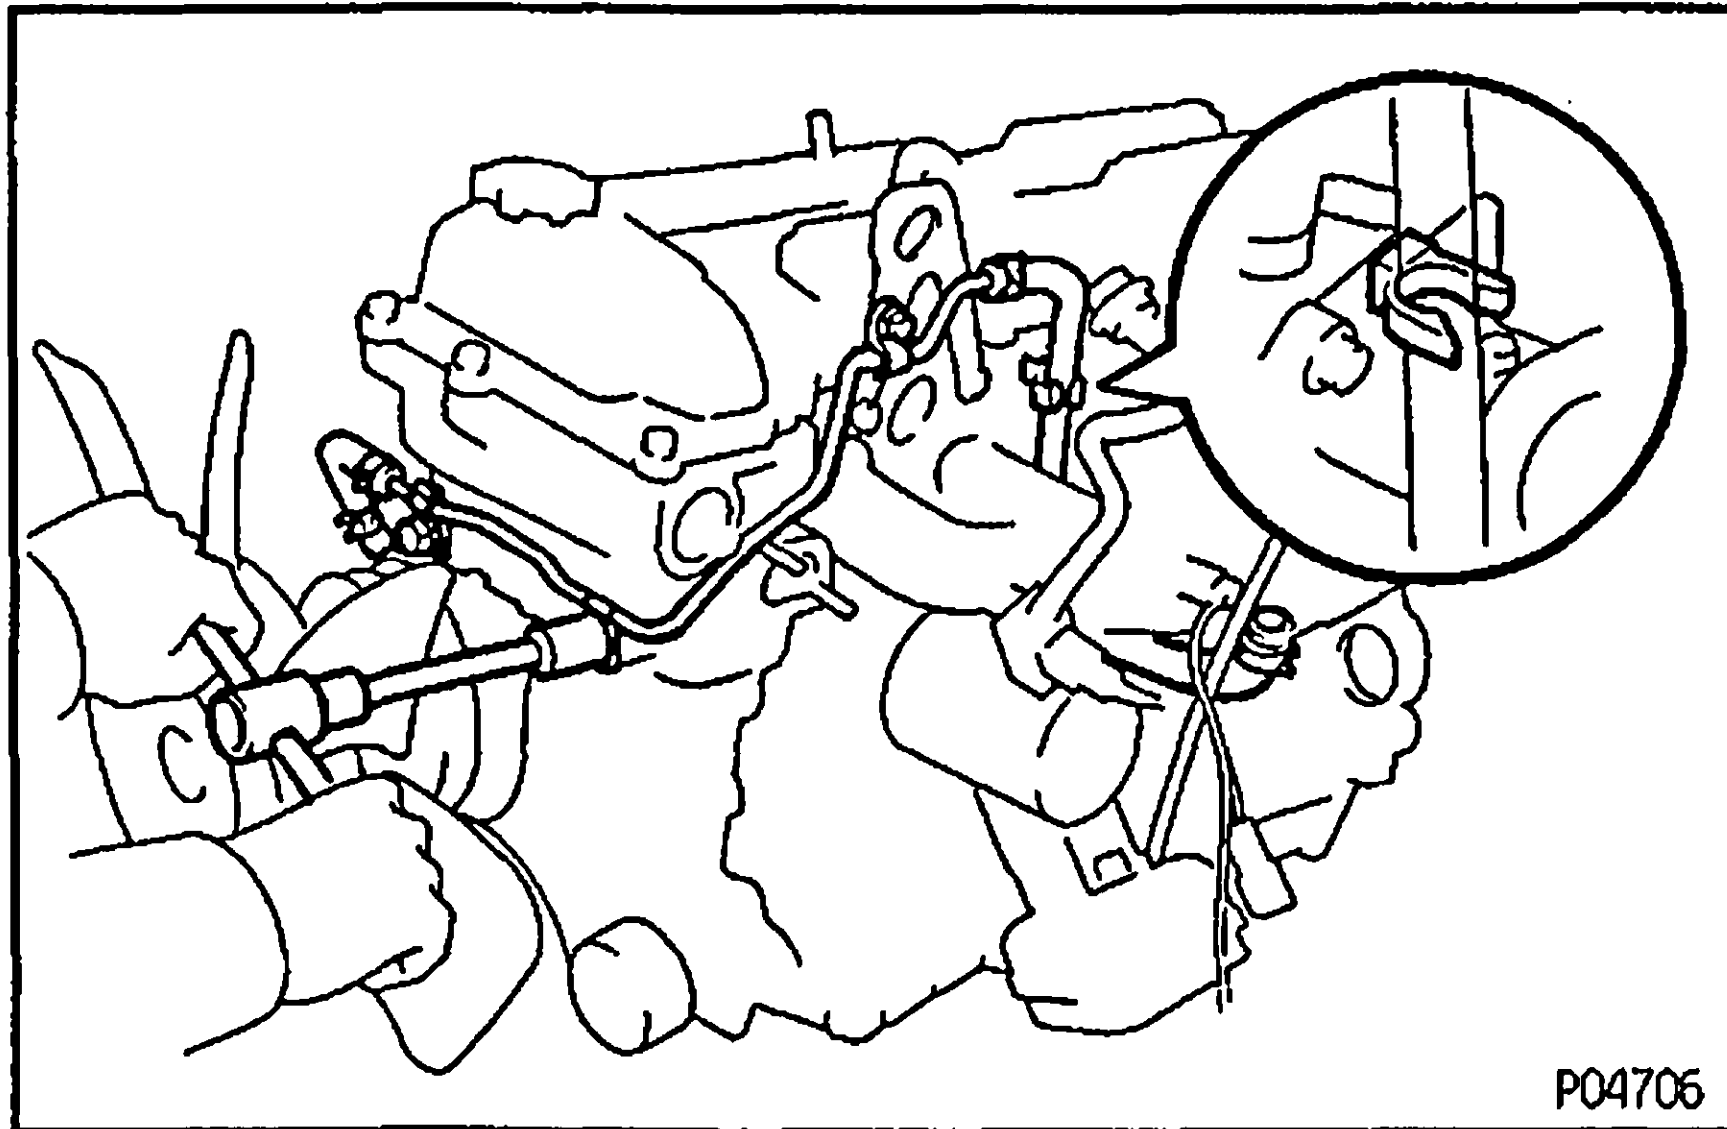**22. CONNECT TWO VACUUM HOSES TO BVS****23. INSTALL NO.2 WATER BY-PASS PIPE AND HOSES**



- (a) Install the No.2 water by-pass pipe and hoses with the three bolts.

Torque: 20 N·m (200 kgf·cm, 14 ft·lbf)

- (b) Connect the hose to the hose clamp.

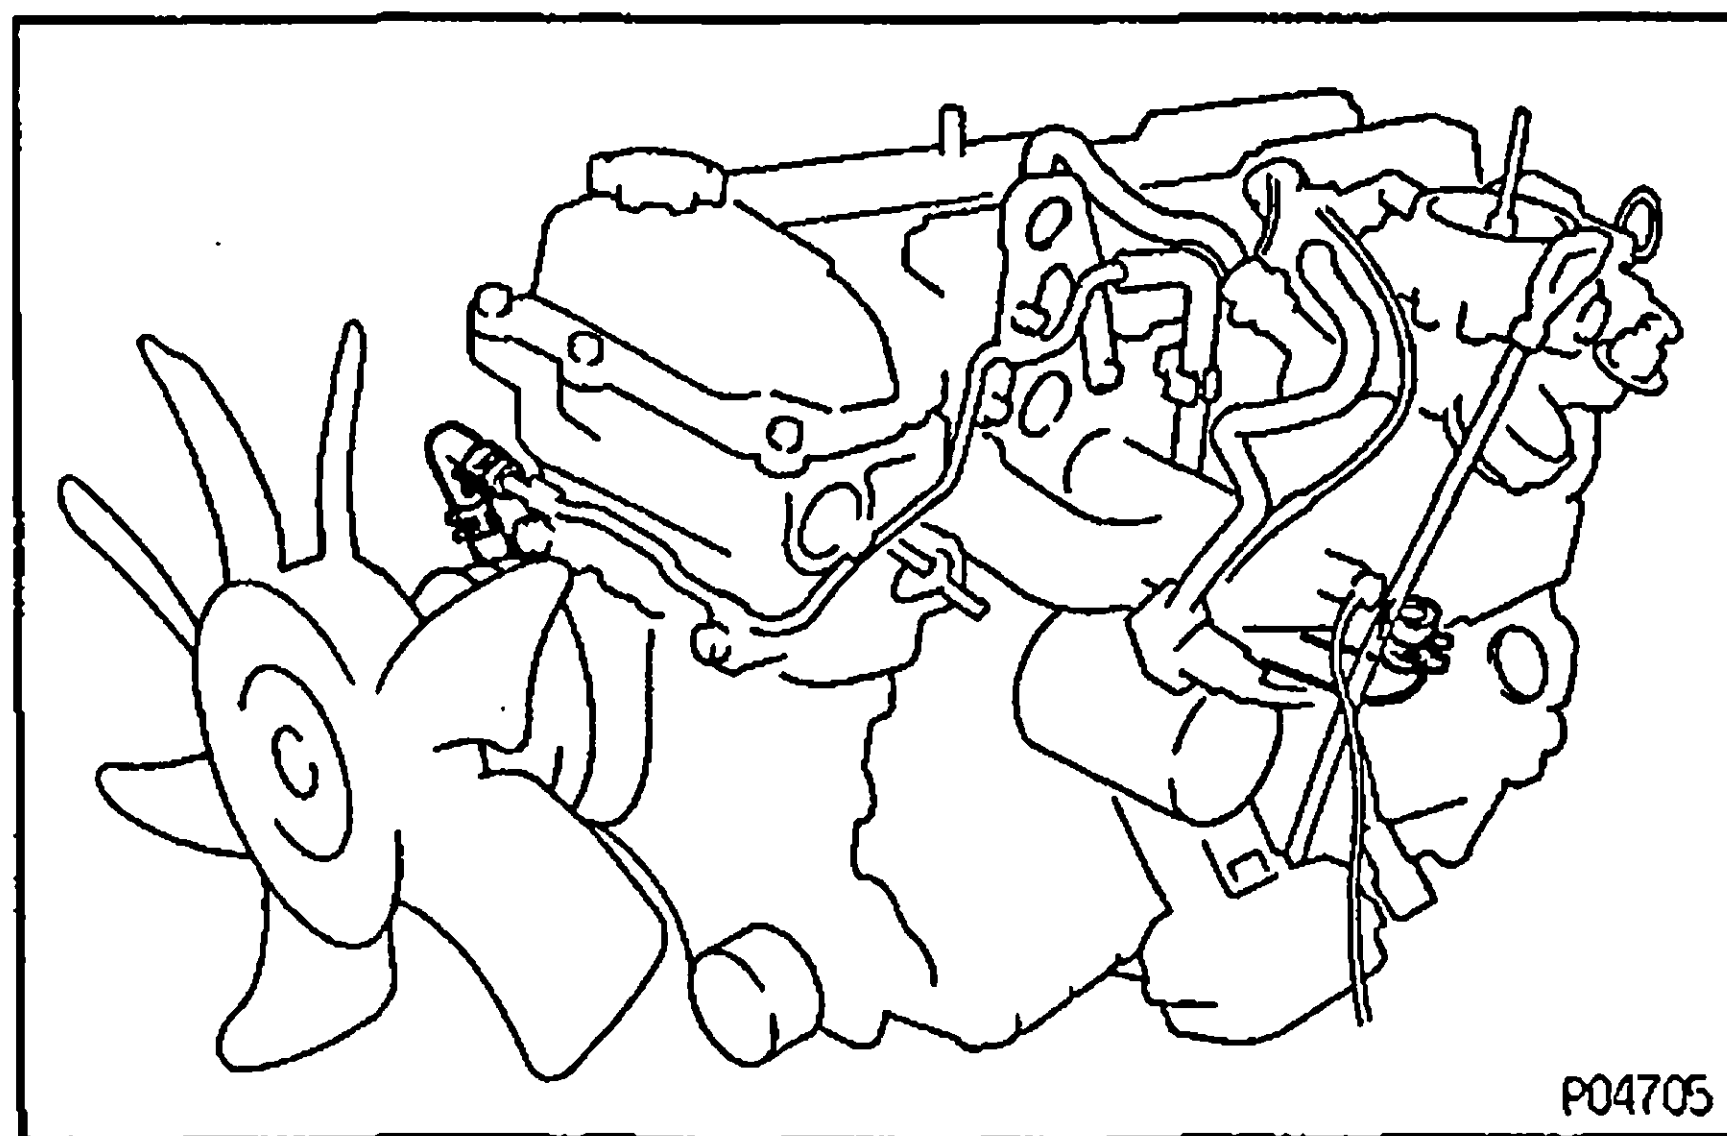

- (c) Connect the two water hoses.

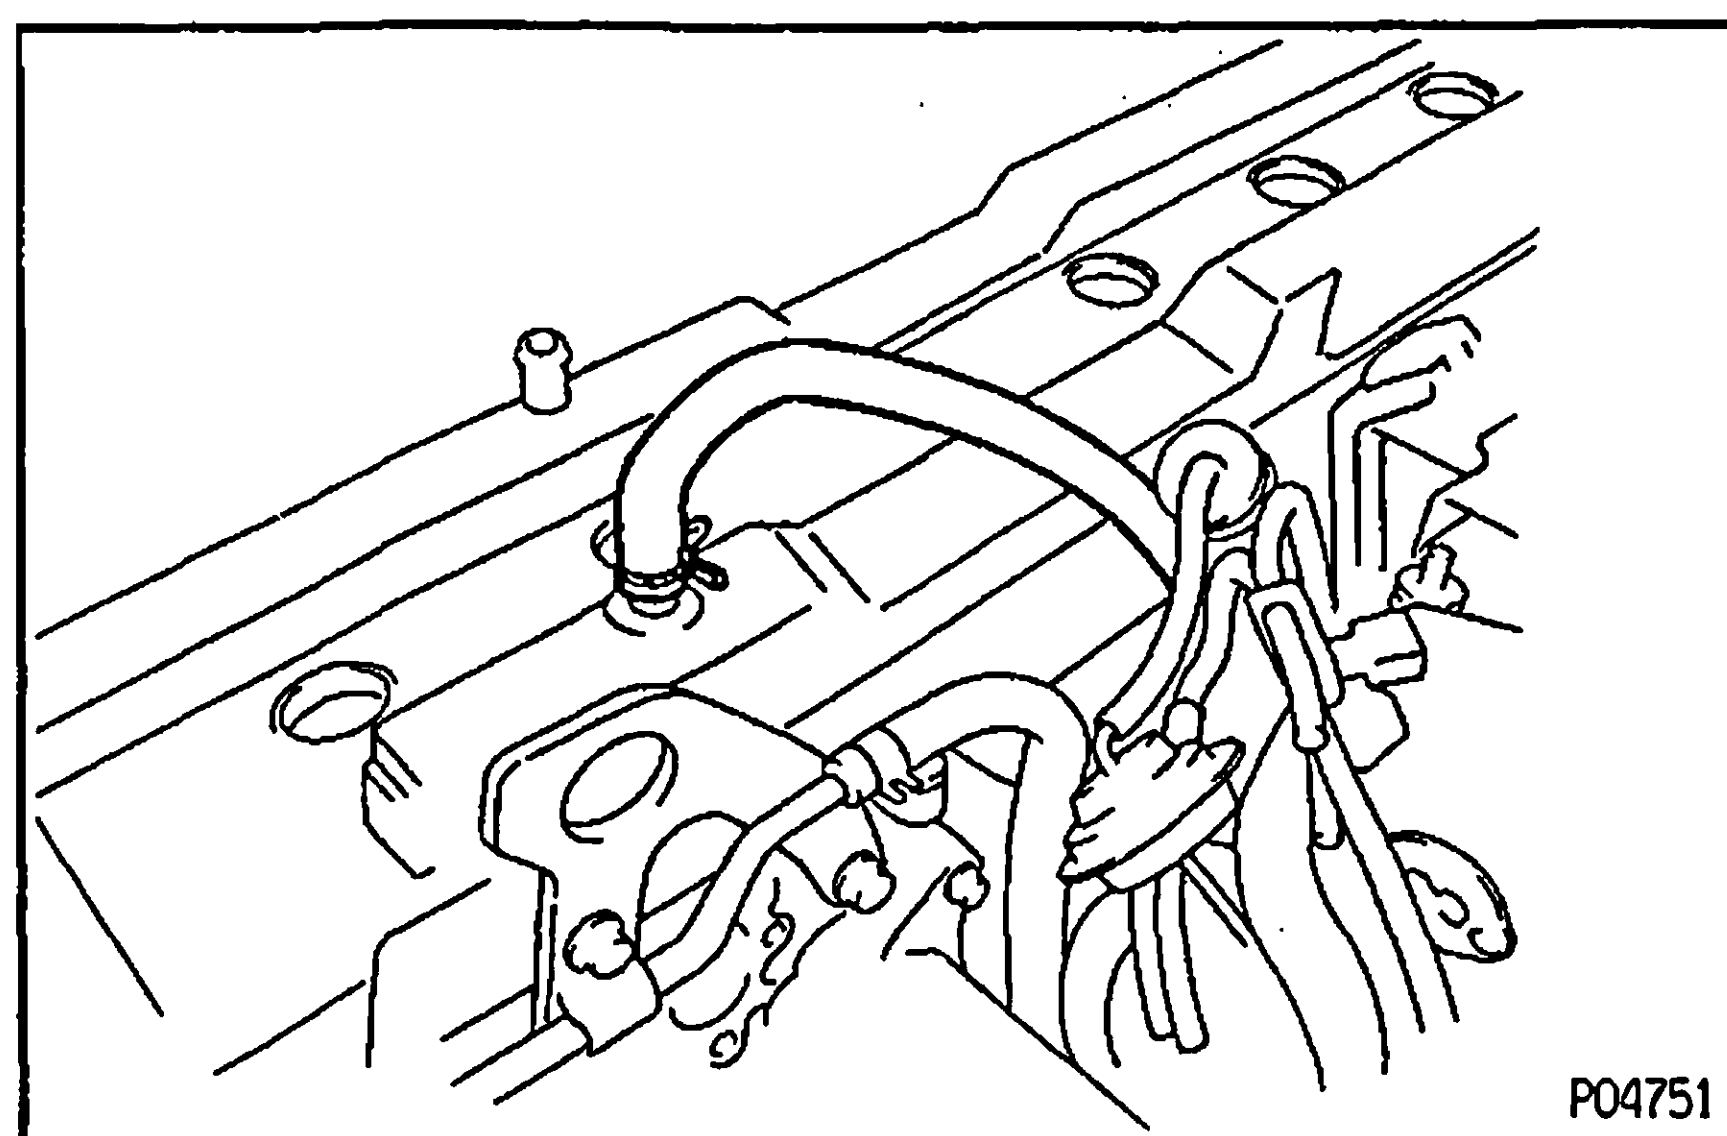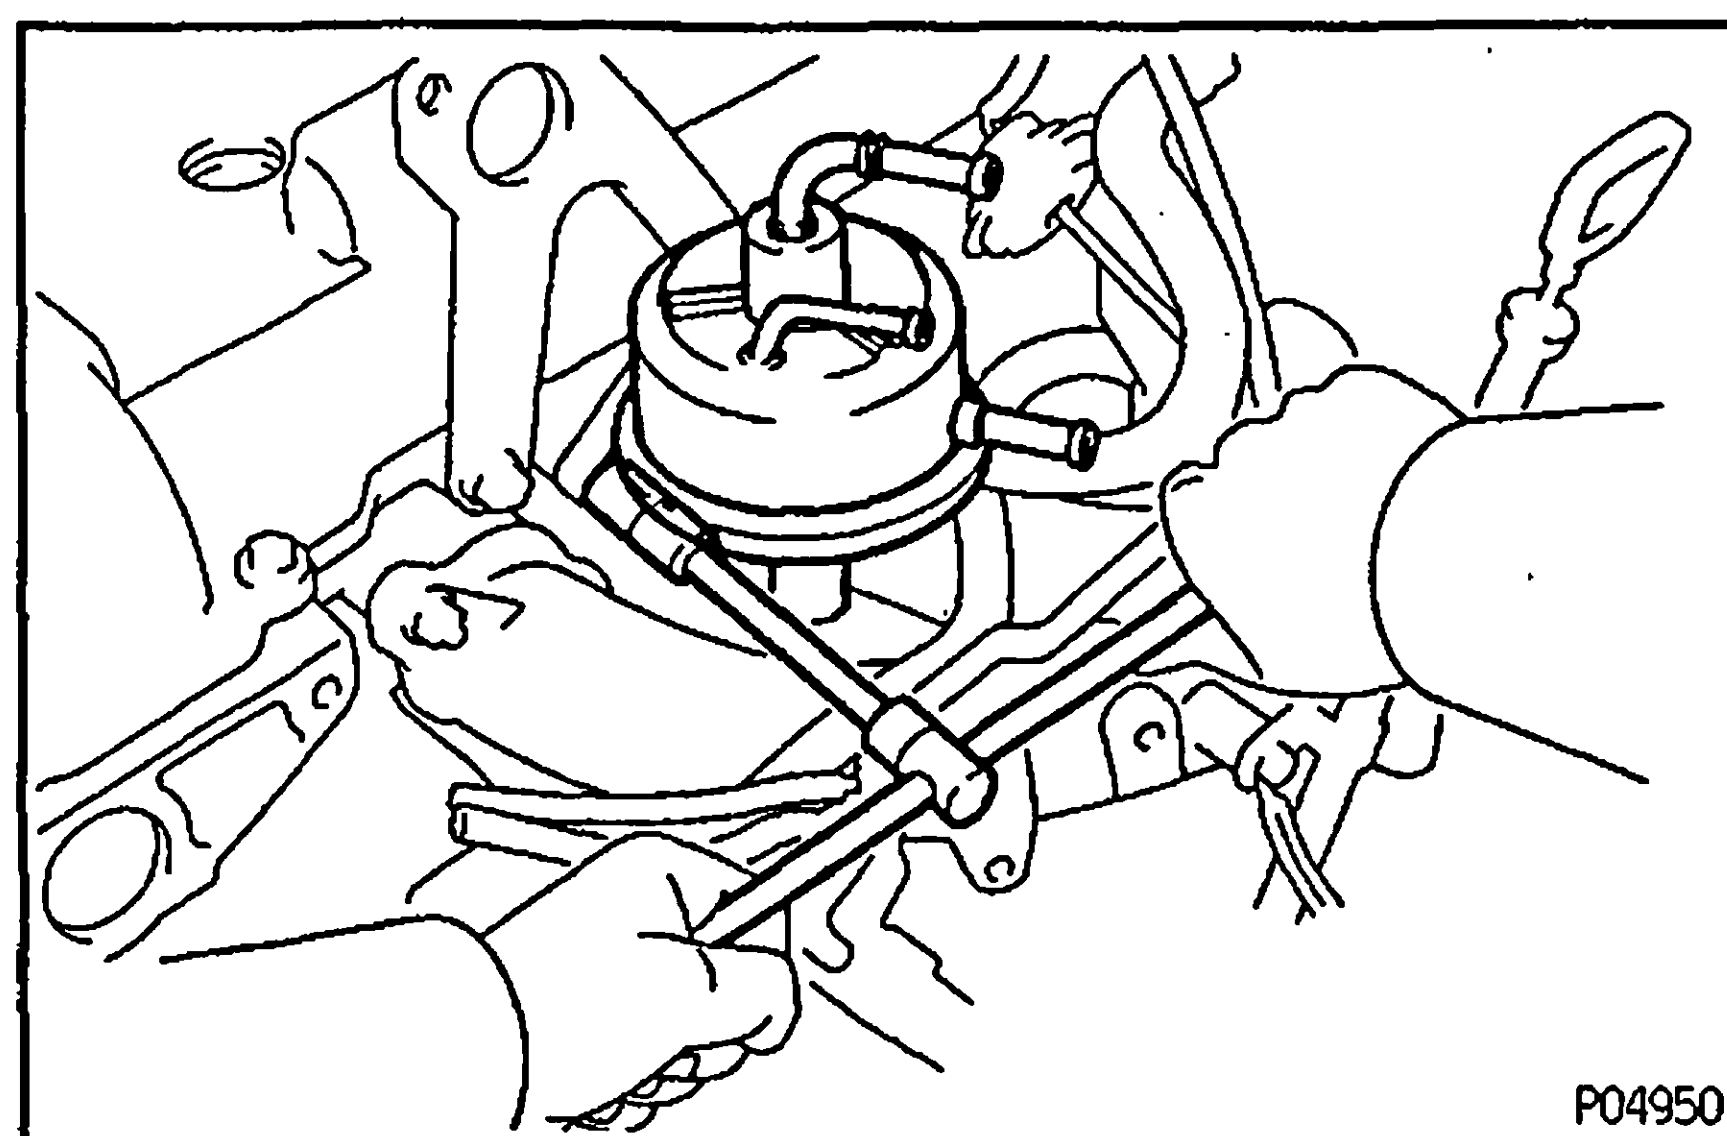
**24. CONNECT PCV HOSE****25. INSTALL FUEL PUMP**

- (a) Install a new insulator and fuel pump with the three bolts.

Torque: 21 N·m (210 kgf·cm, 15 ft·lbf)


- (b) Connect the fuel outlet hose.

EG

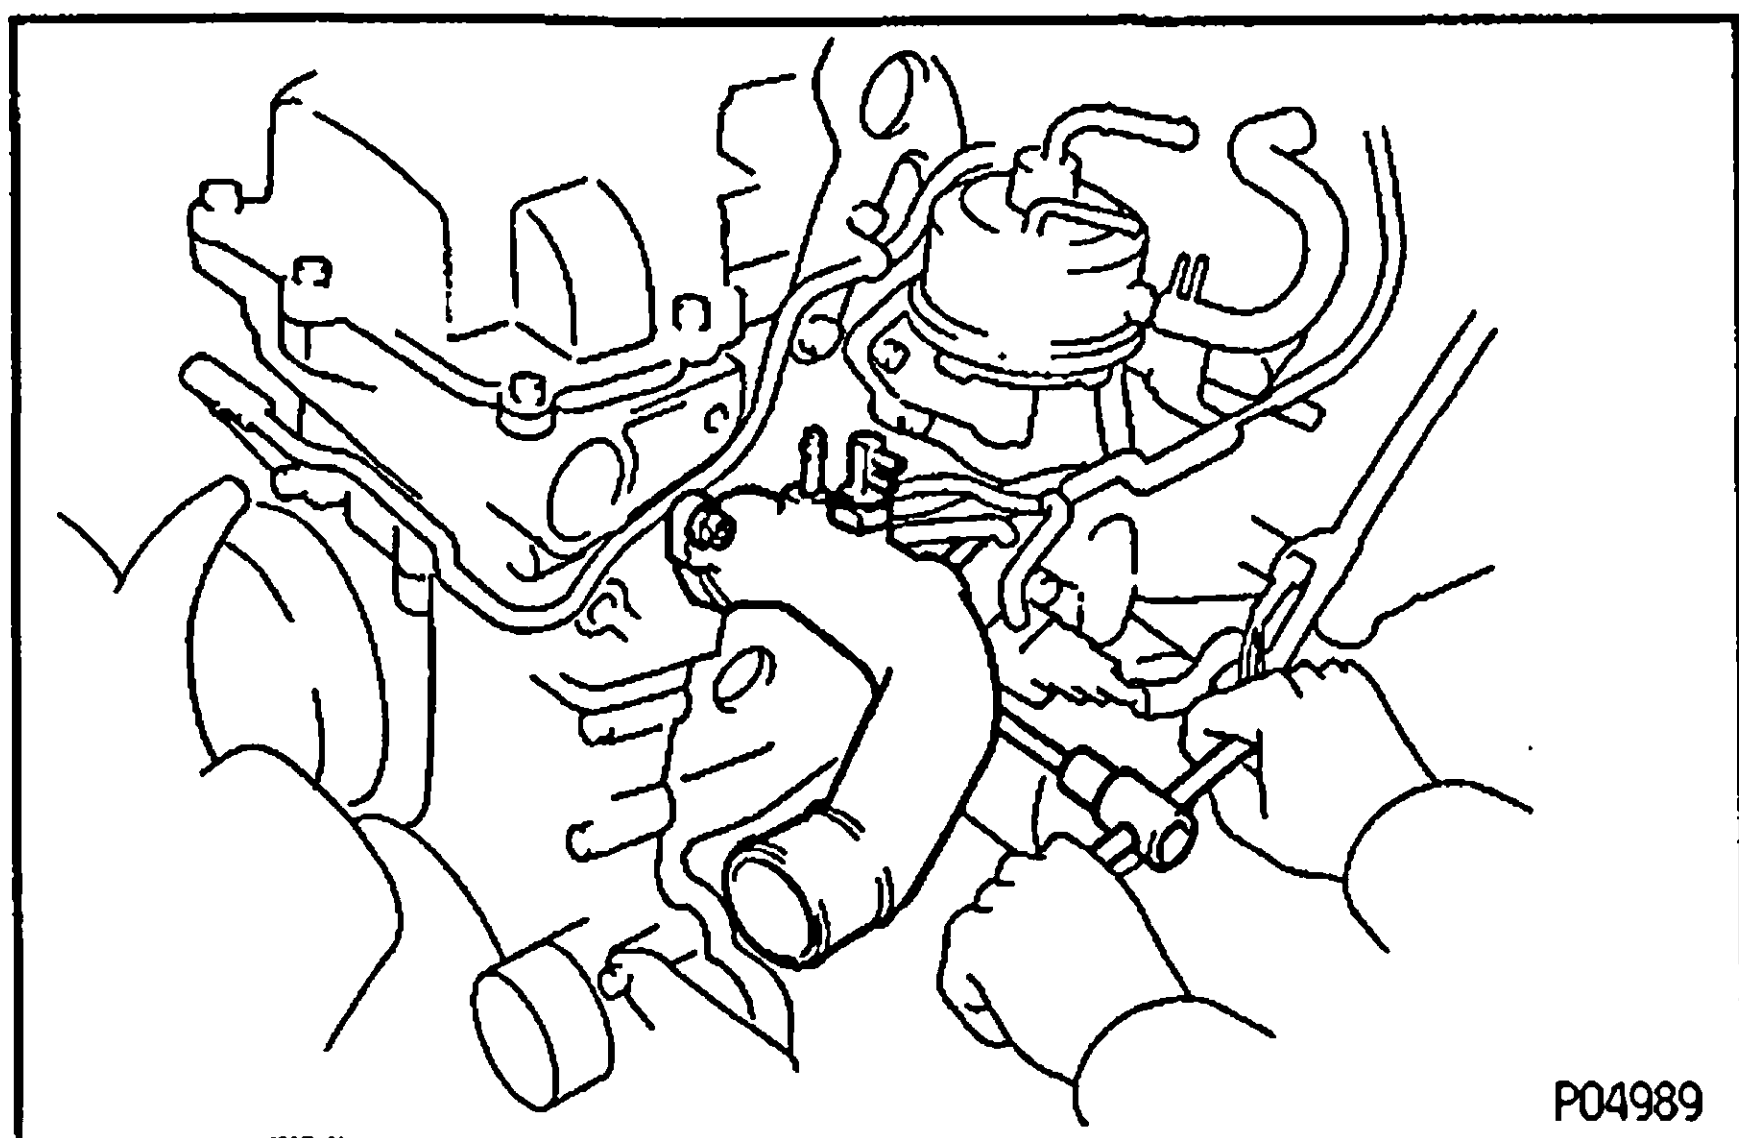
**26. INSTALL WATER OUTLET**

- (a) Install a new gasket and water outlet with the two nuts.

Torque: 21 N·m (210 kgf·cm, 15 ft·lbf)


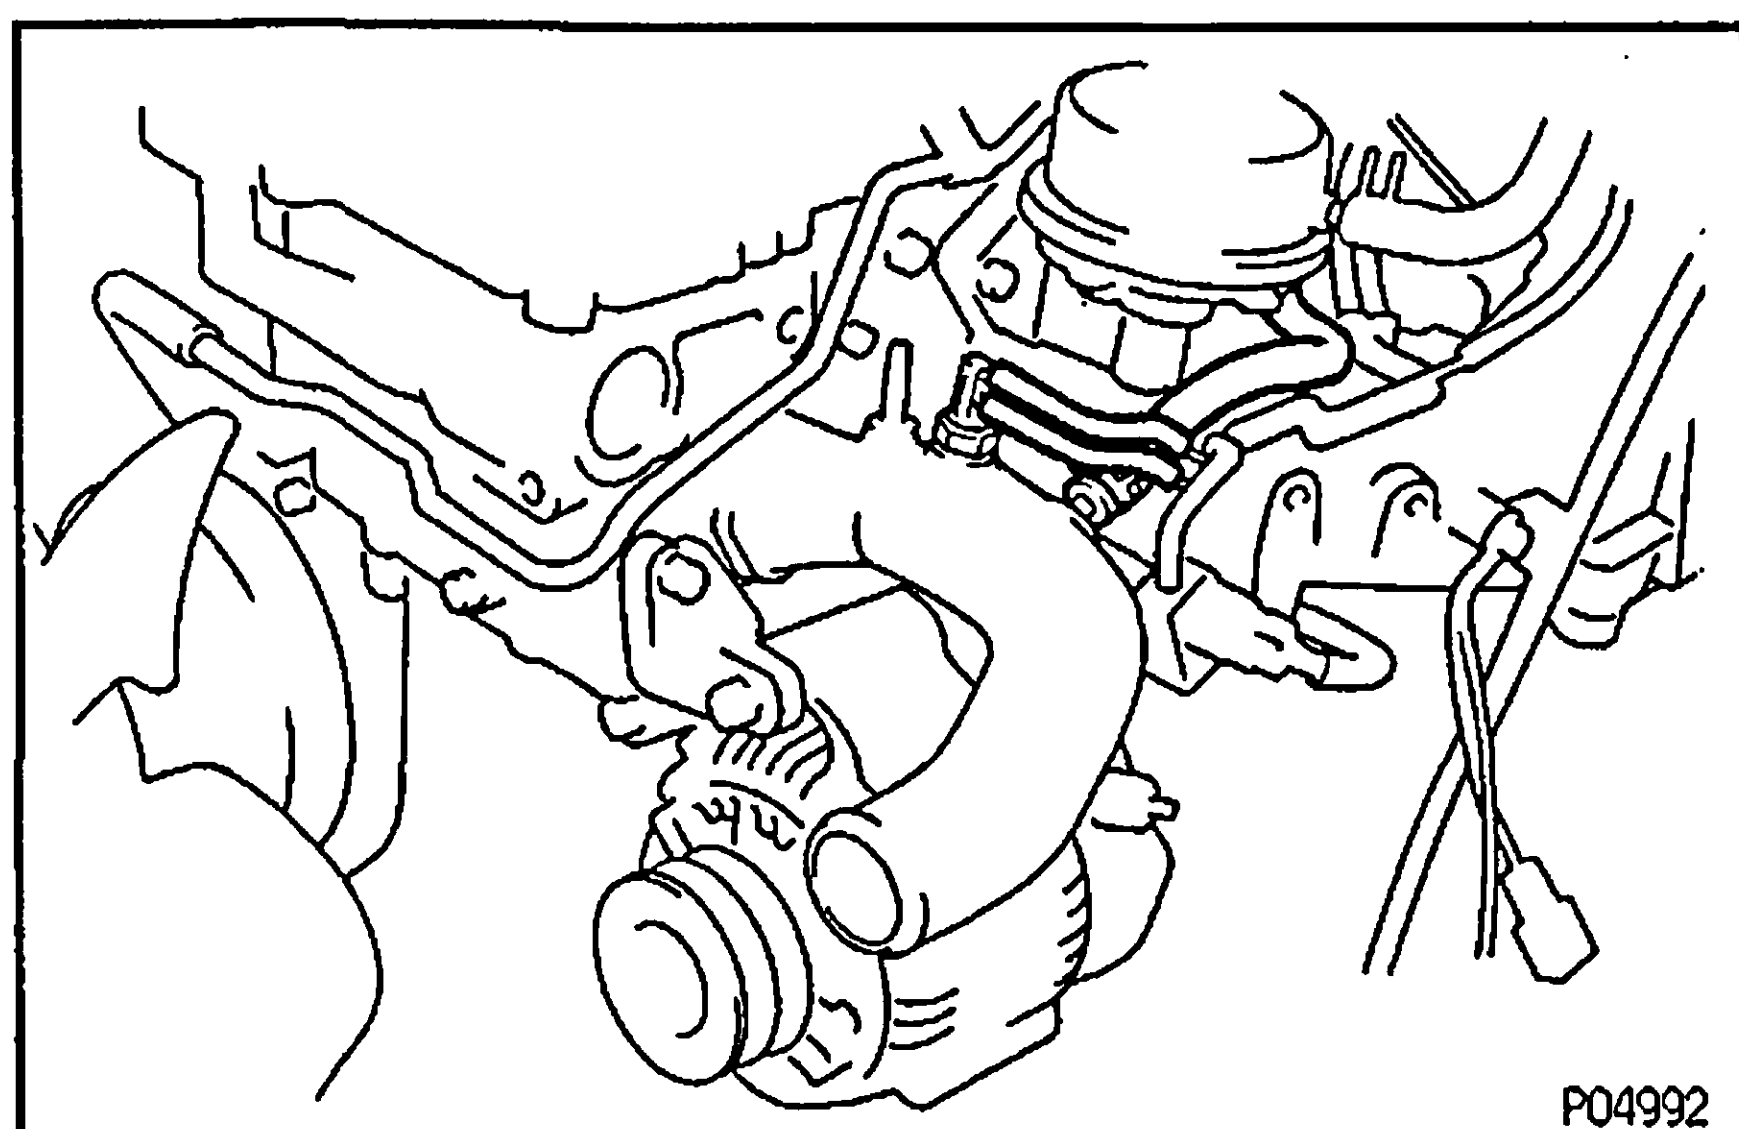


- (b) Connect No.1 water by-pass hose.
(c) Connect the vacuum hoses.

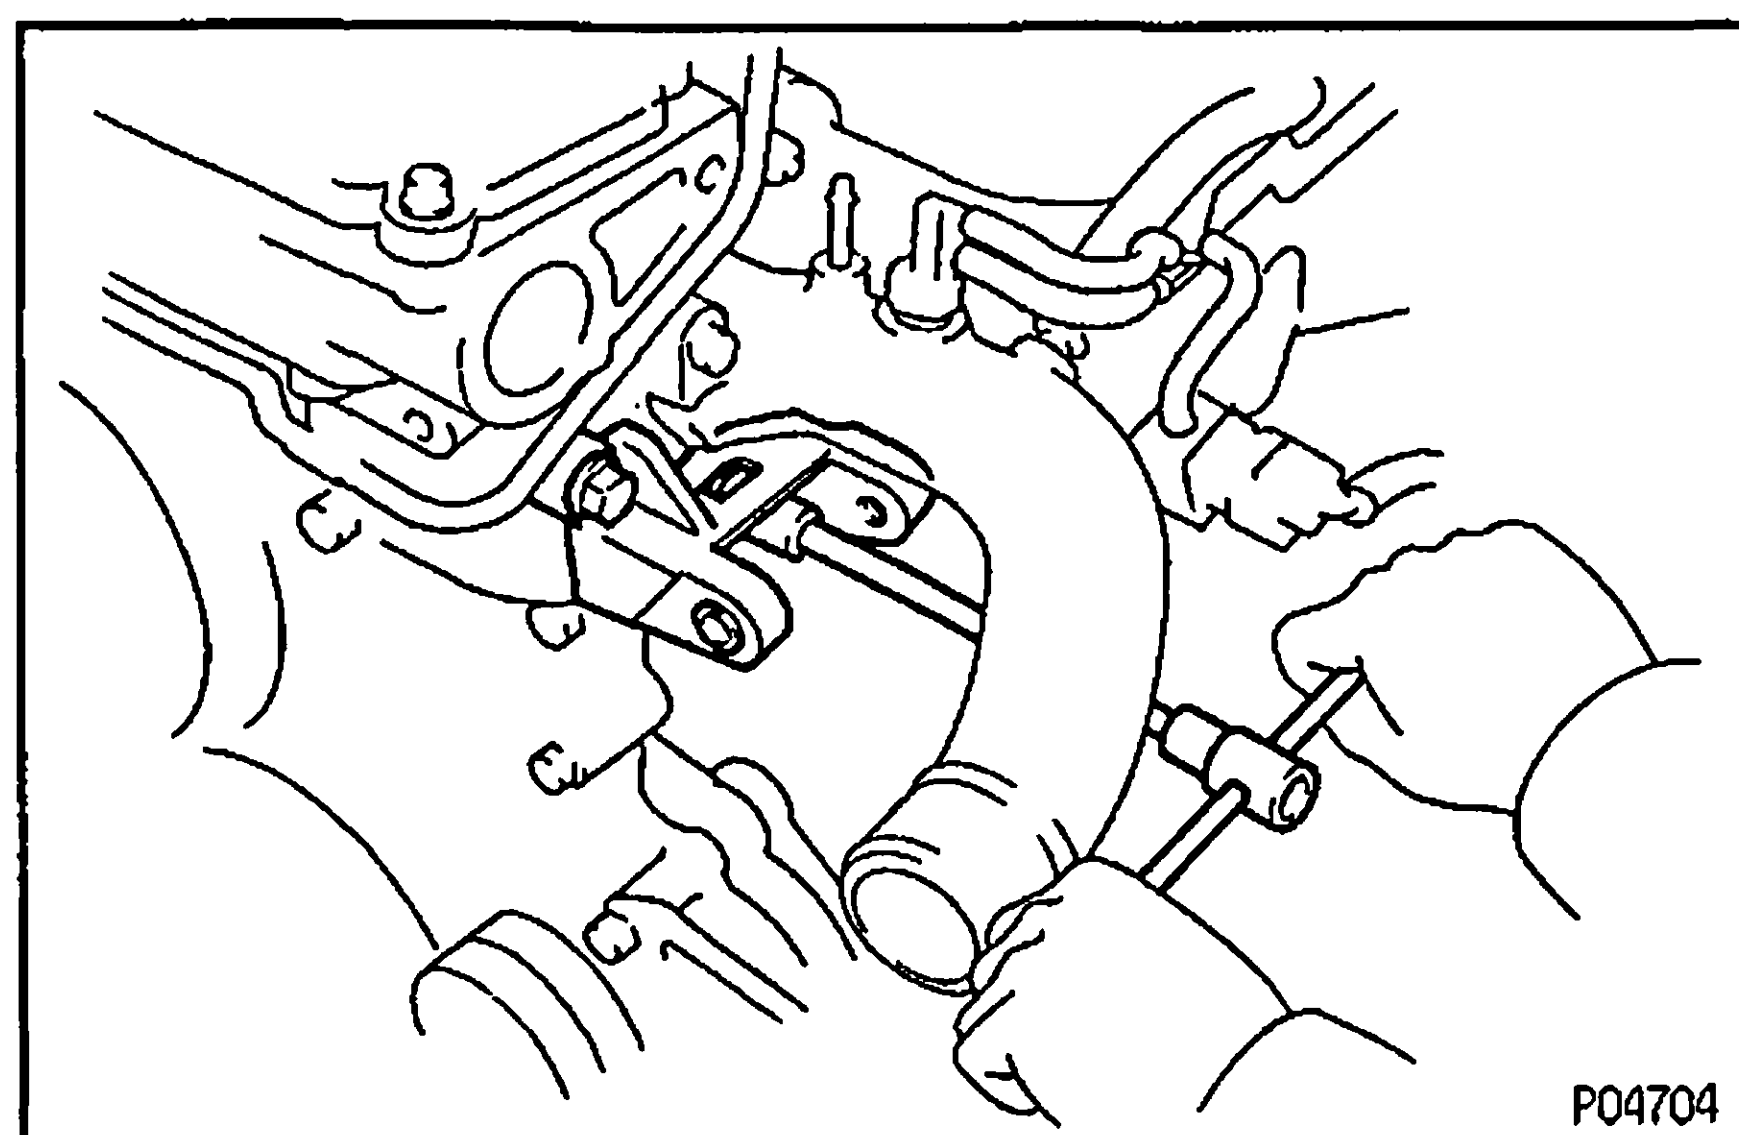**27. INSTALL ALTERNATOR BRACKET**


Install the alternator bracket with the two bolts.

Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)

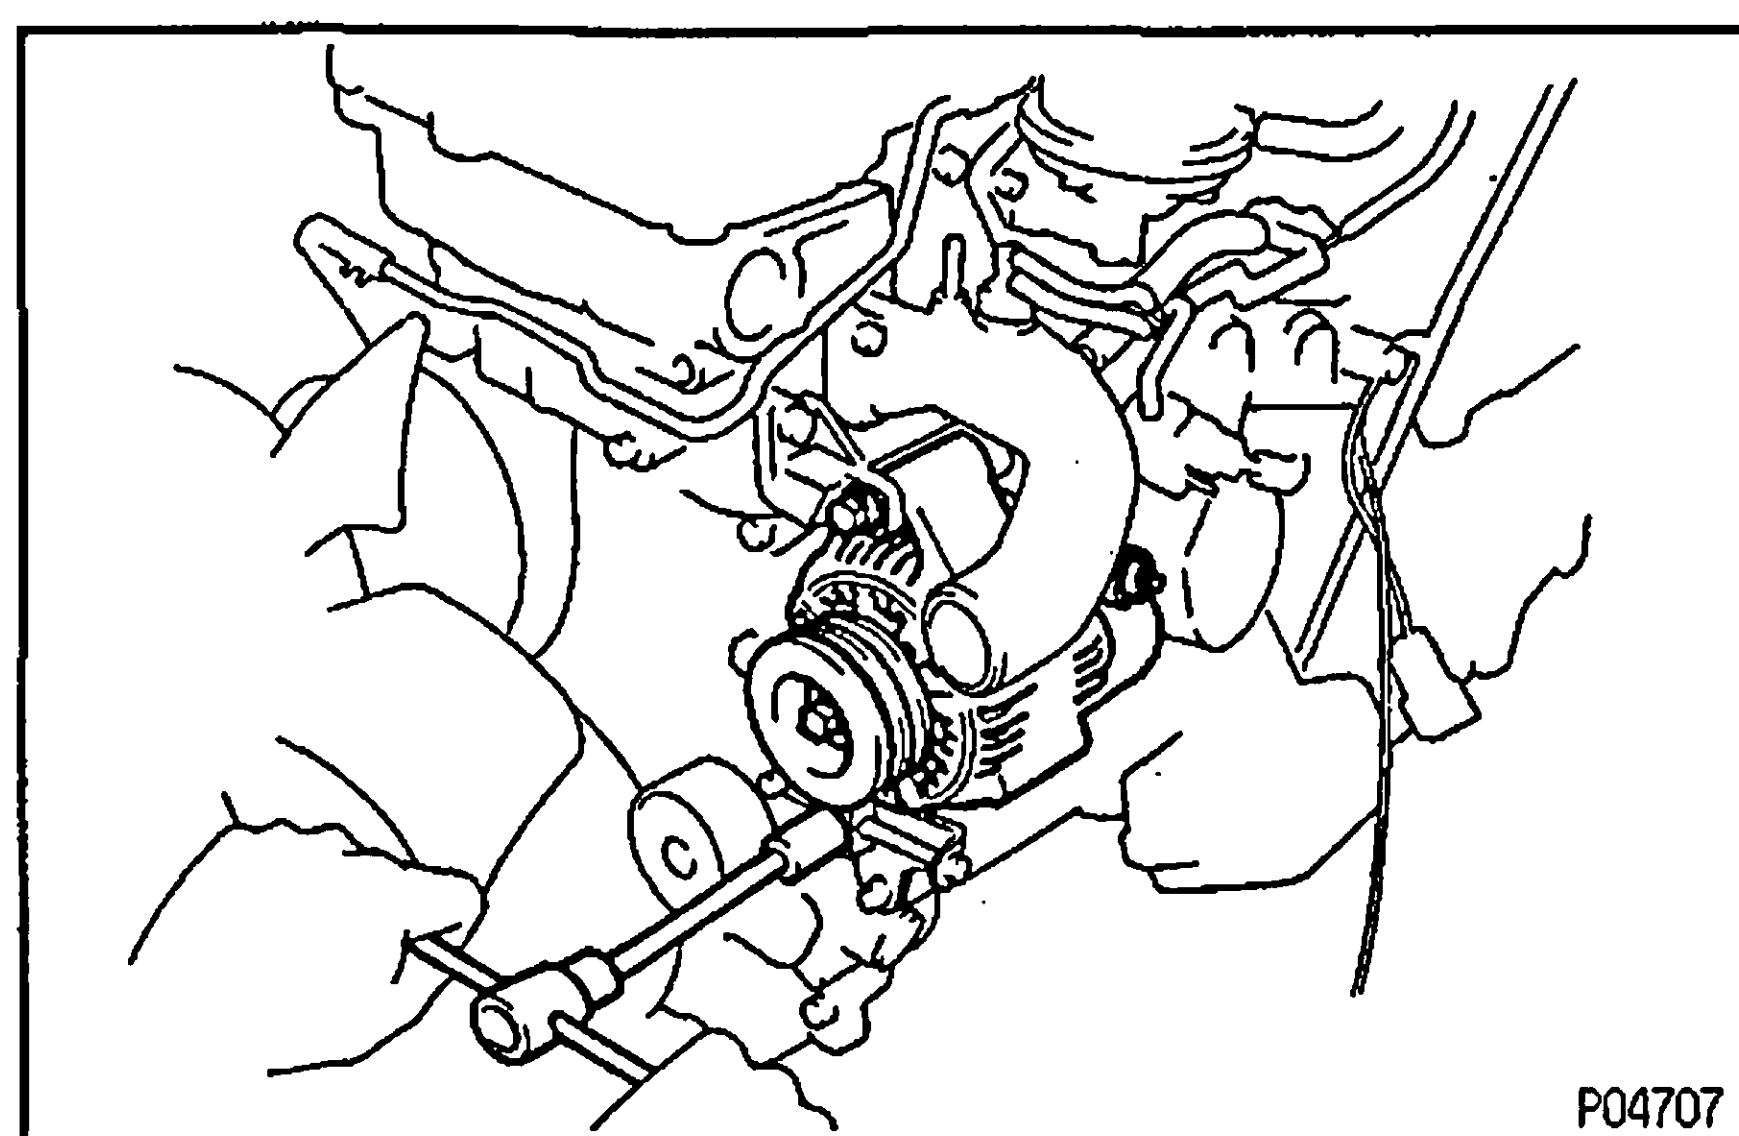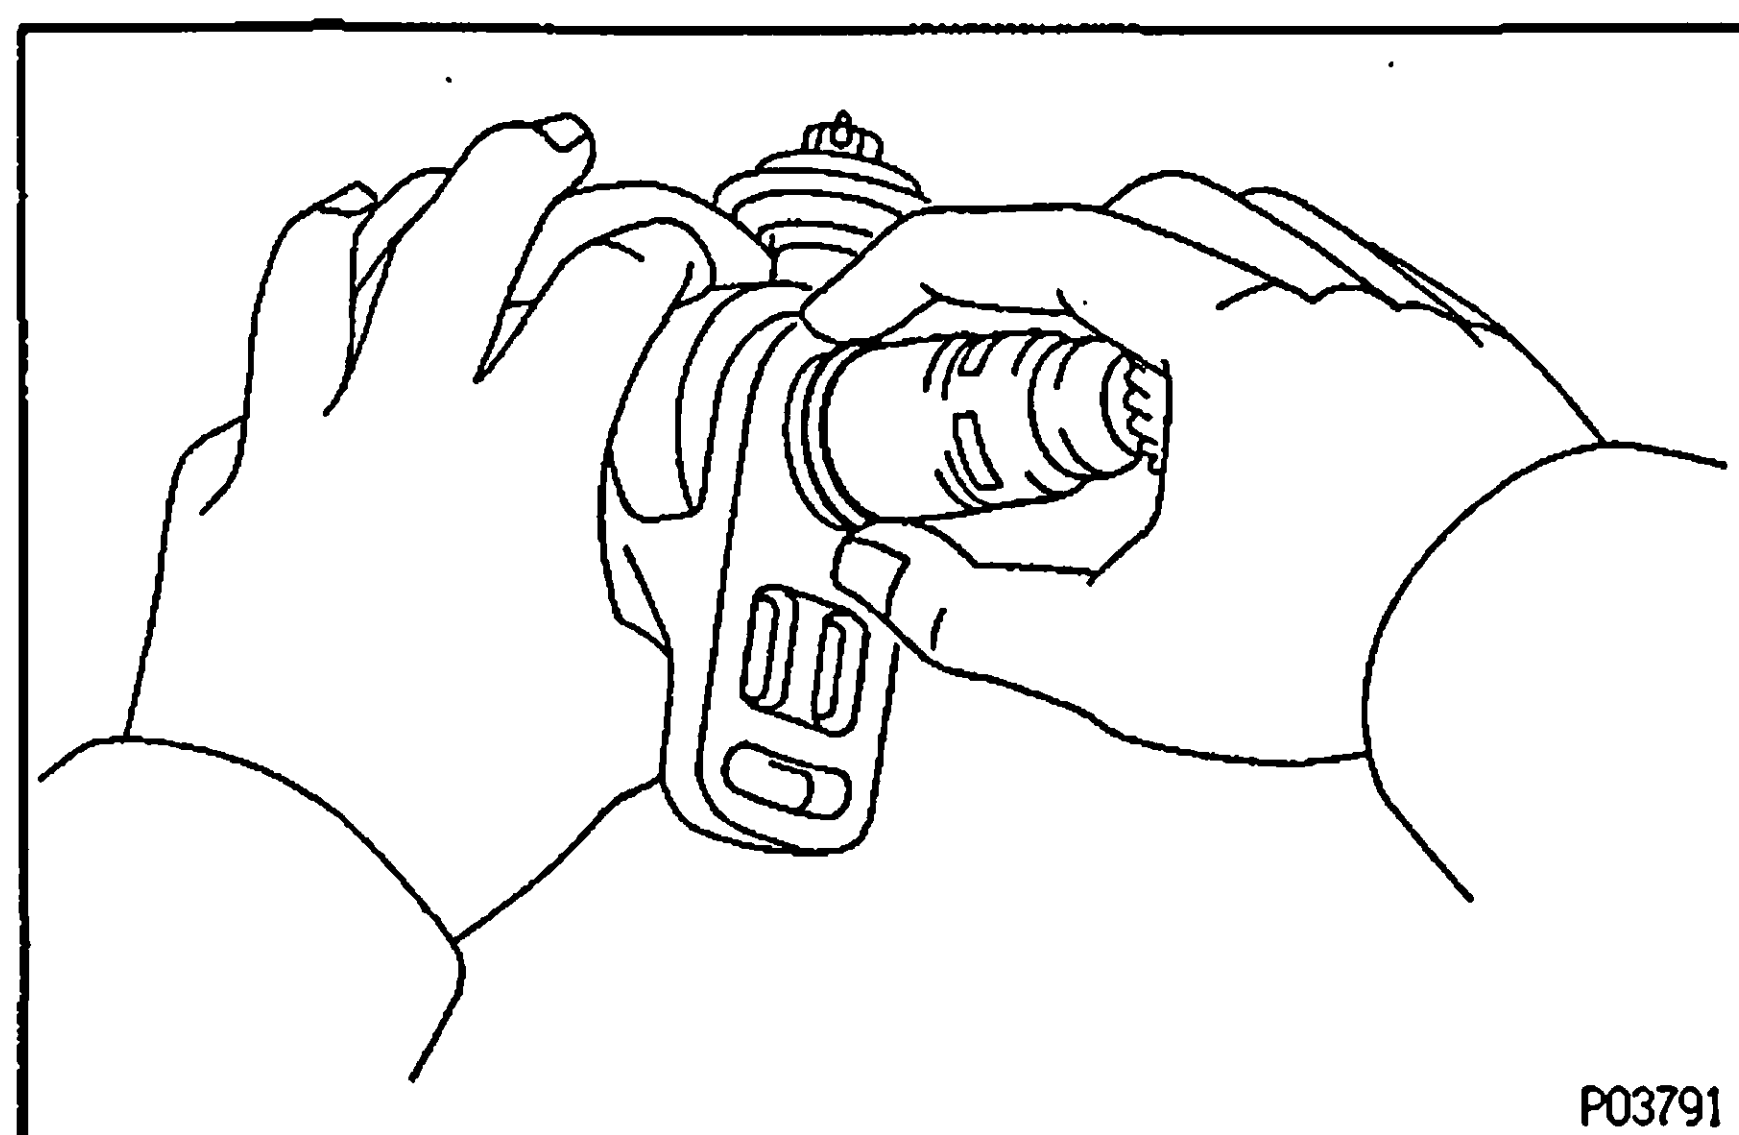**28. INSTALL ALTERNATOR AND DRIVE BELTS**
(See CH section)**29. INSTALL DISTRIBUTOR**


- (a) Install a new O-ring to the distributor.

HINT: Always use a new O-ring when installing the distributor.

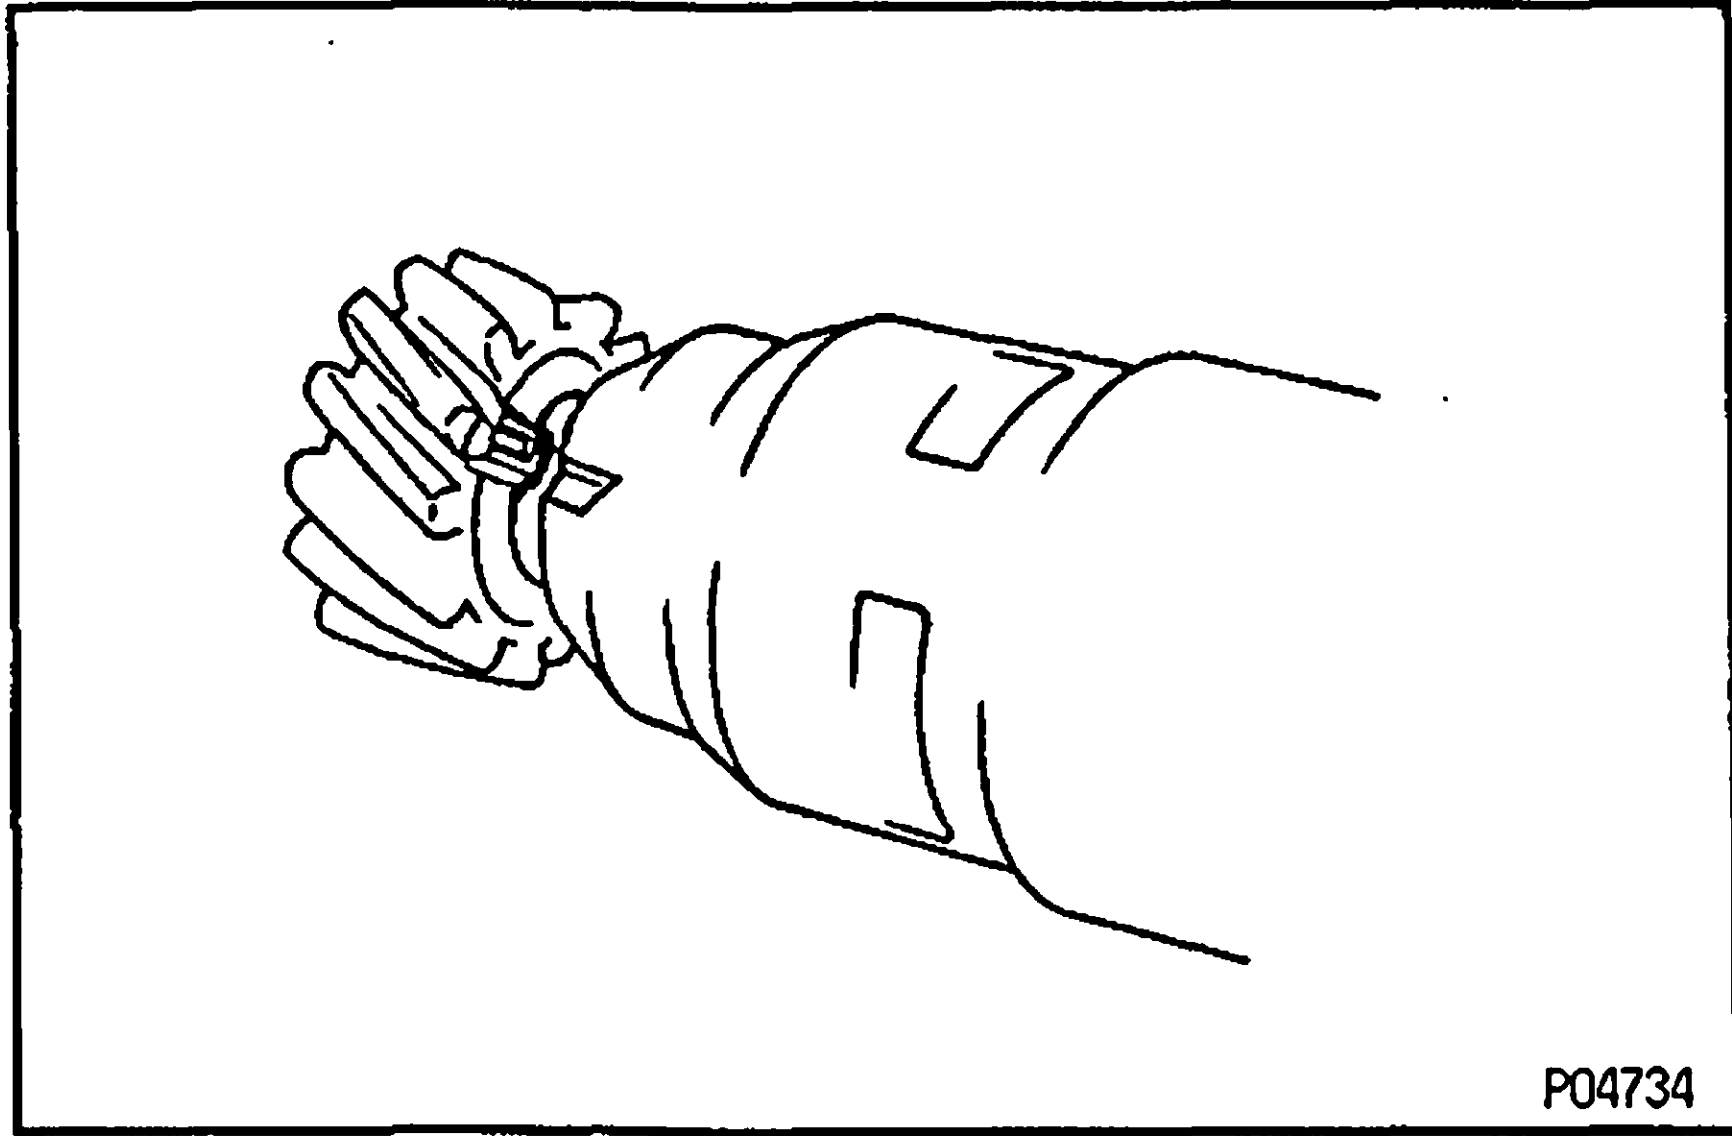

- (b) Align the groove of the distributor housing with the protrusion on the driven gear.
- (c) Apply a light coat of engine oil on the O—ring.


EG

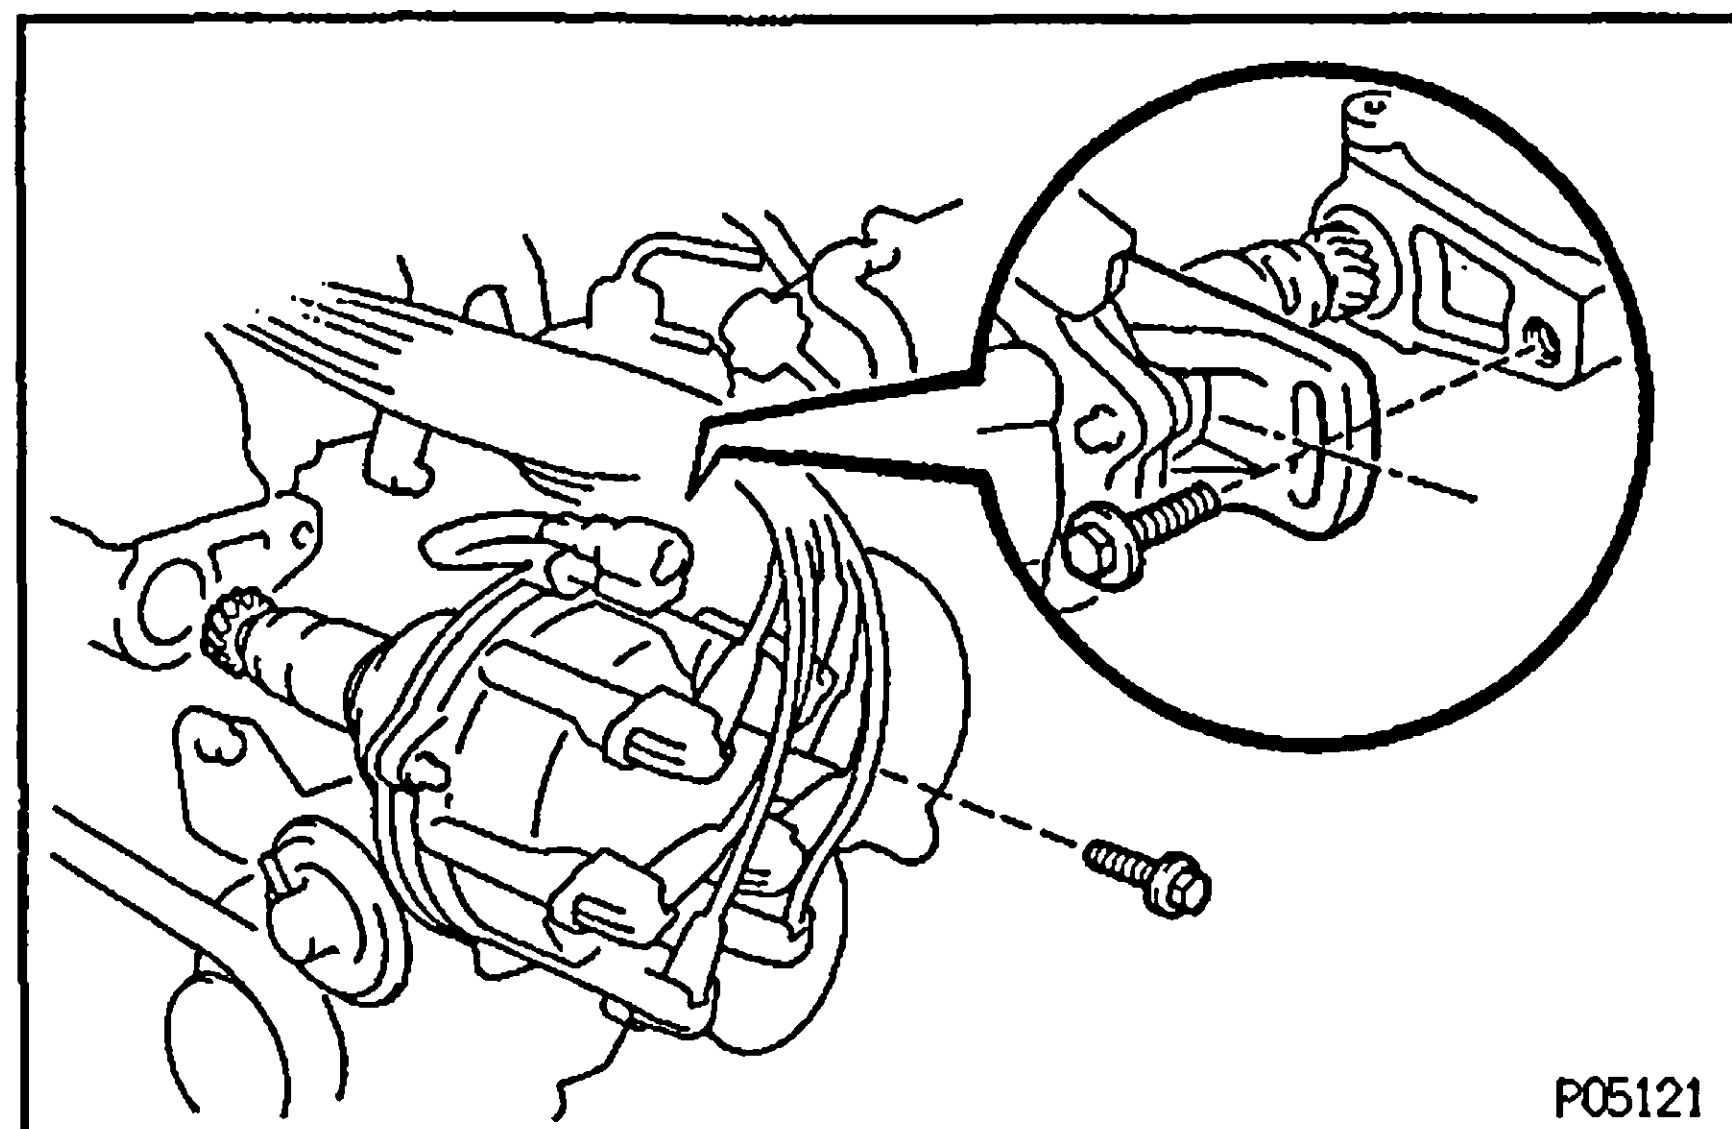


- (d) Insert the distributor, aligning the center of the flange with that of the bolt hole on the cylinder head.
- (e) Lightly tighten the hold—down bolts.
- (f) Connect the high—tension cords.

Firing order:

1—5—3—6—2—4

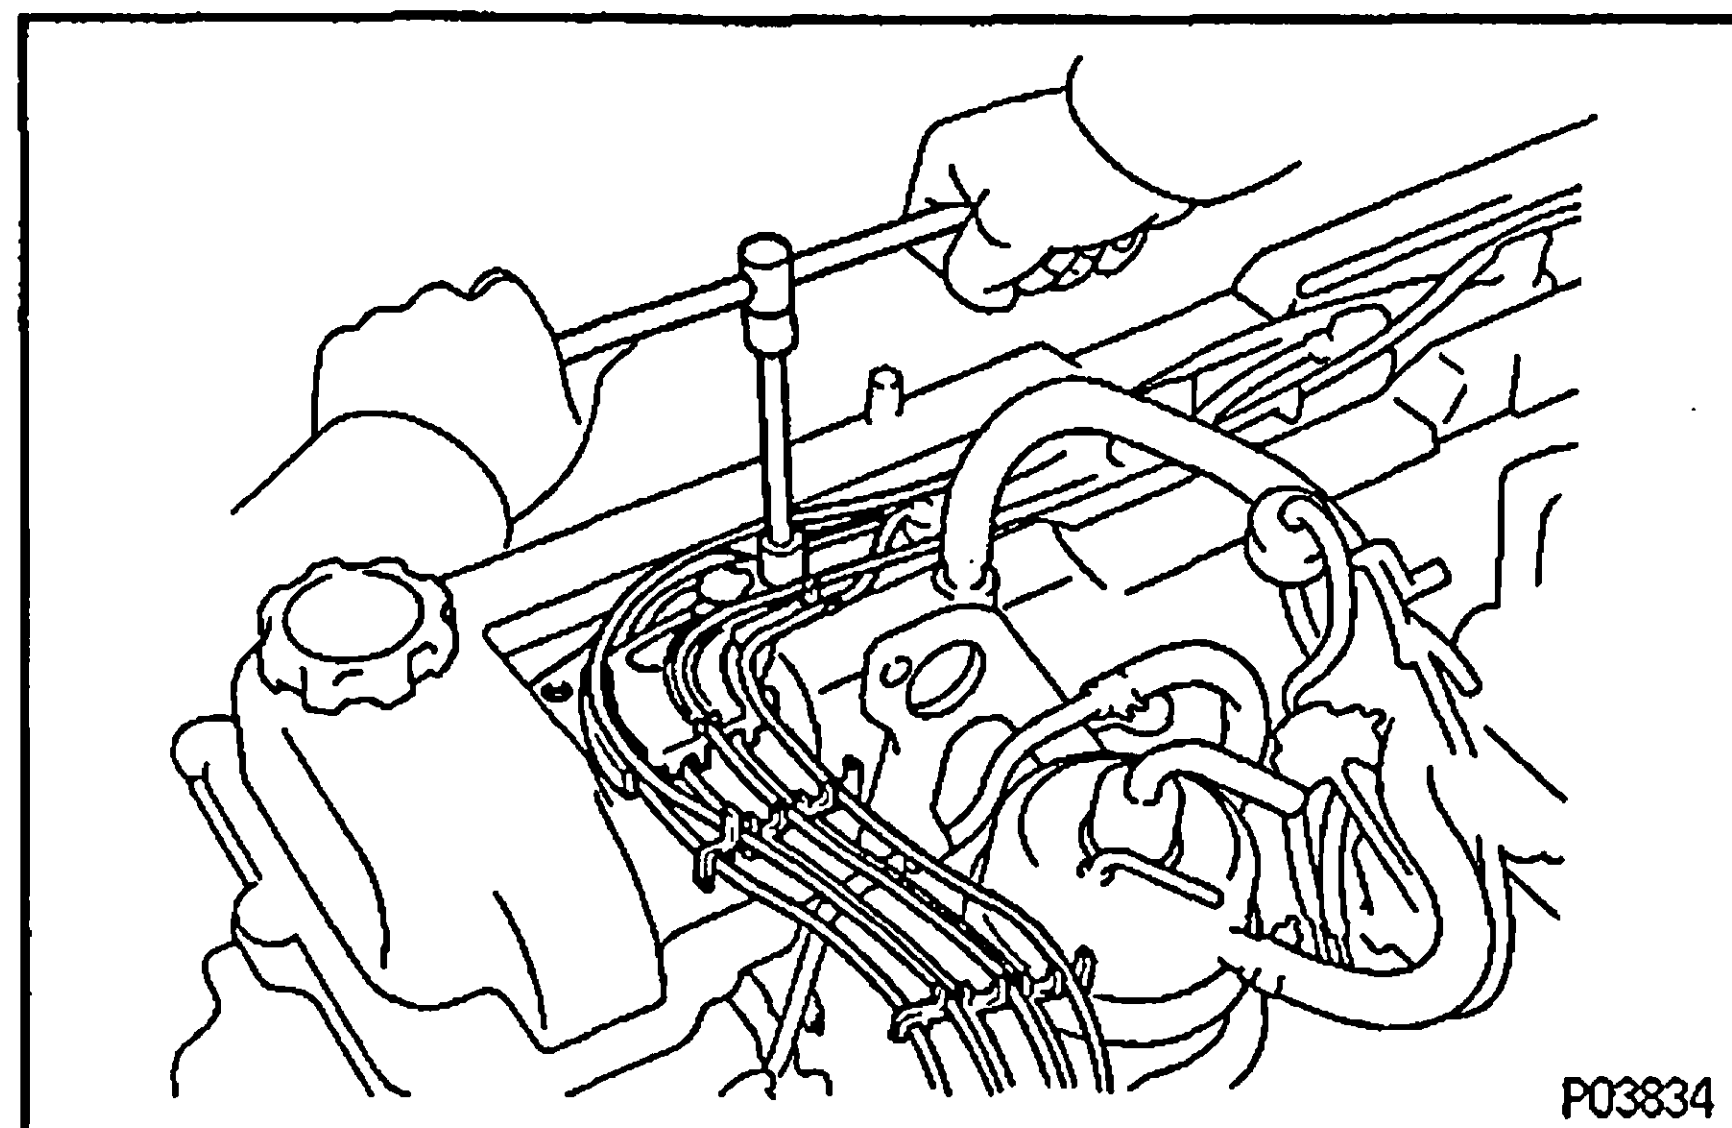


- (g) Install the No.1 cord clamp mounting bolt.

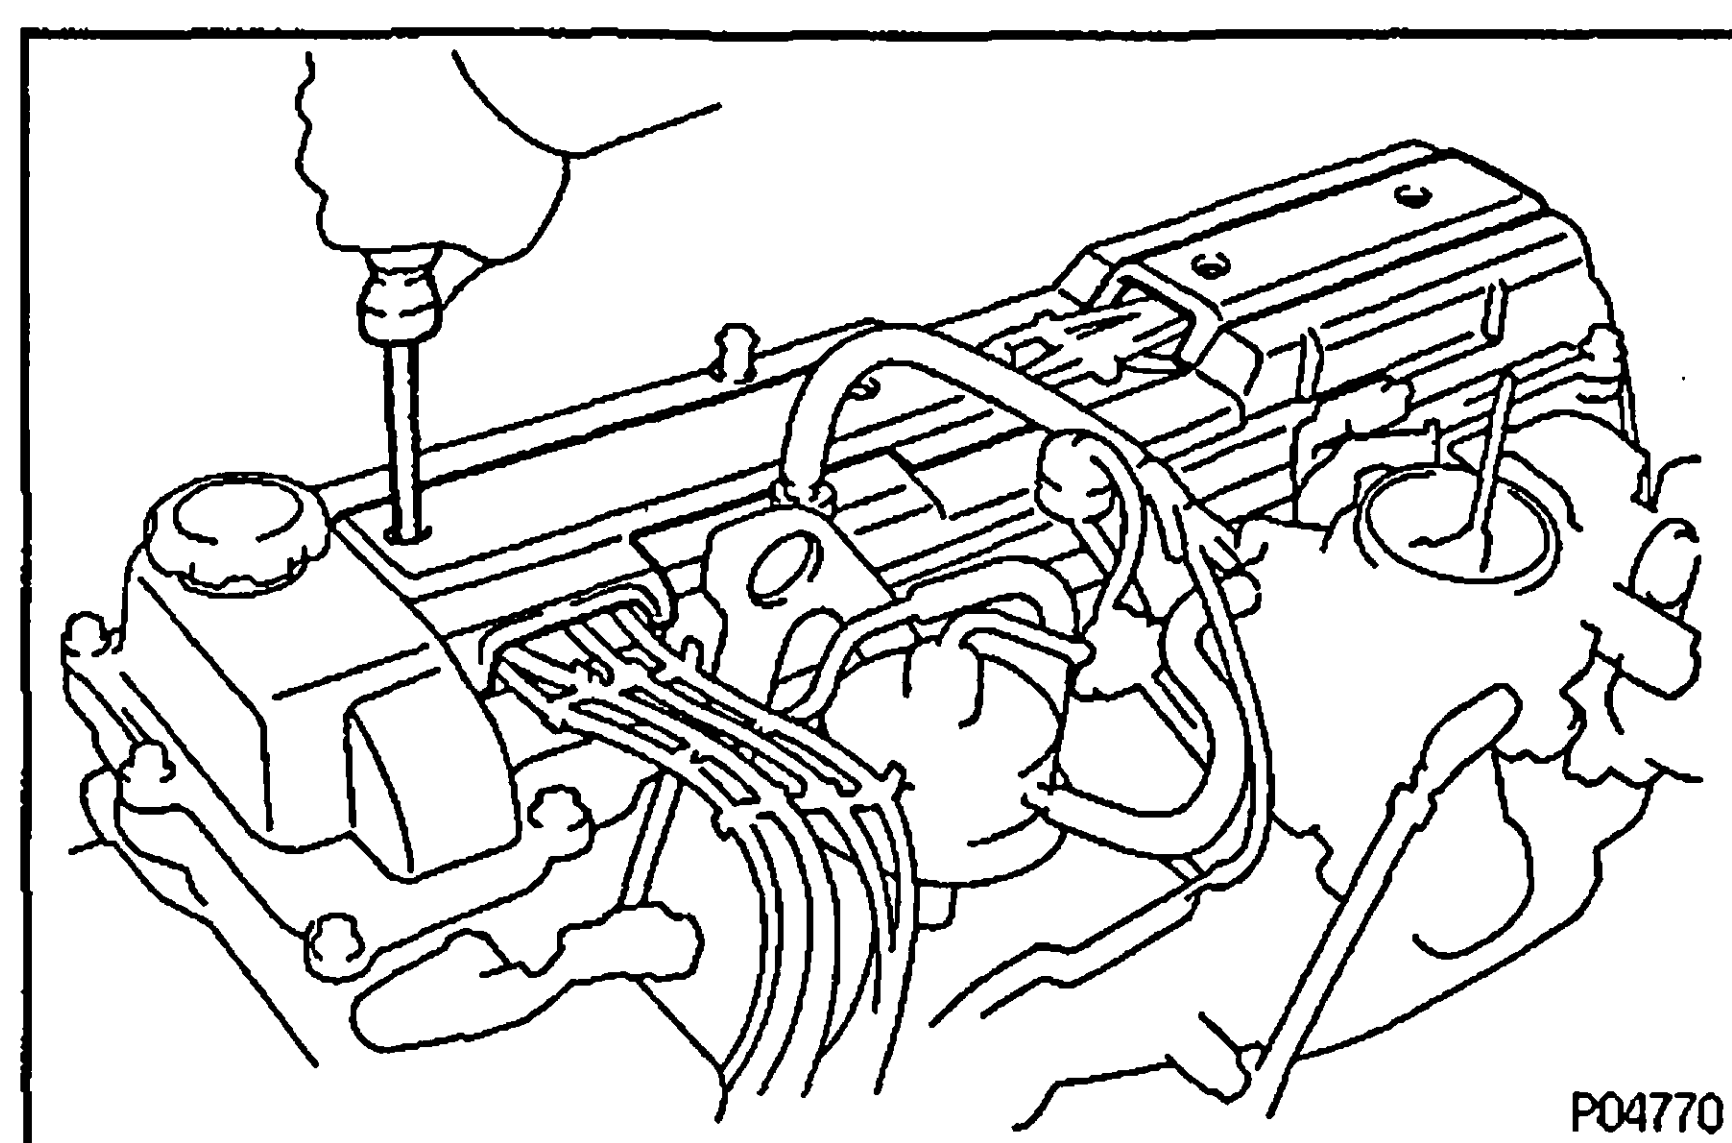

30. INSTALL NO. 2 AND NO. 3 CYLINDER HEAD COVERS

Install the head covers with the four bolts.

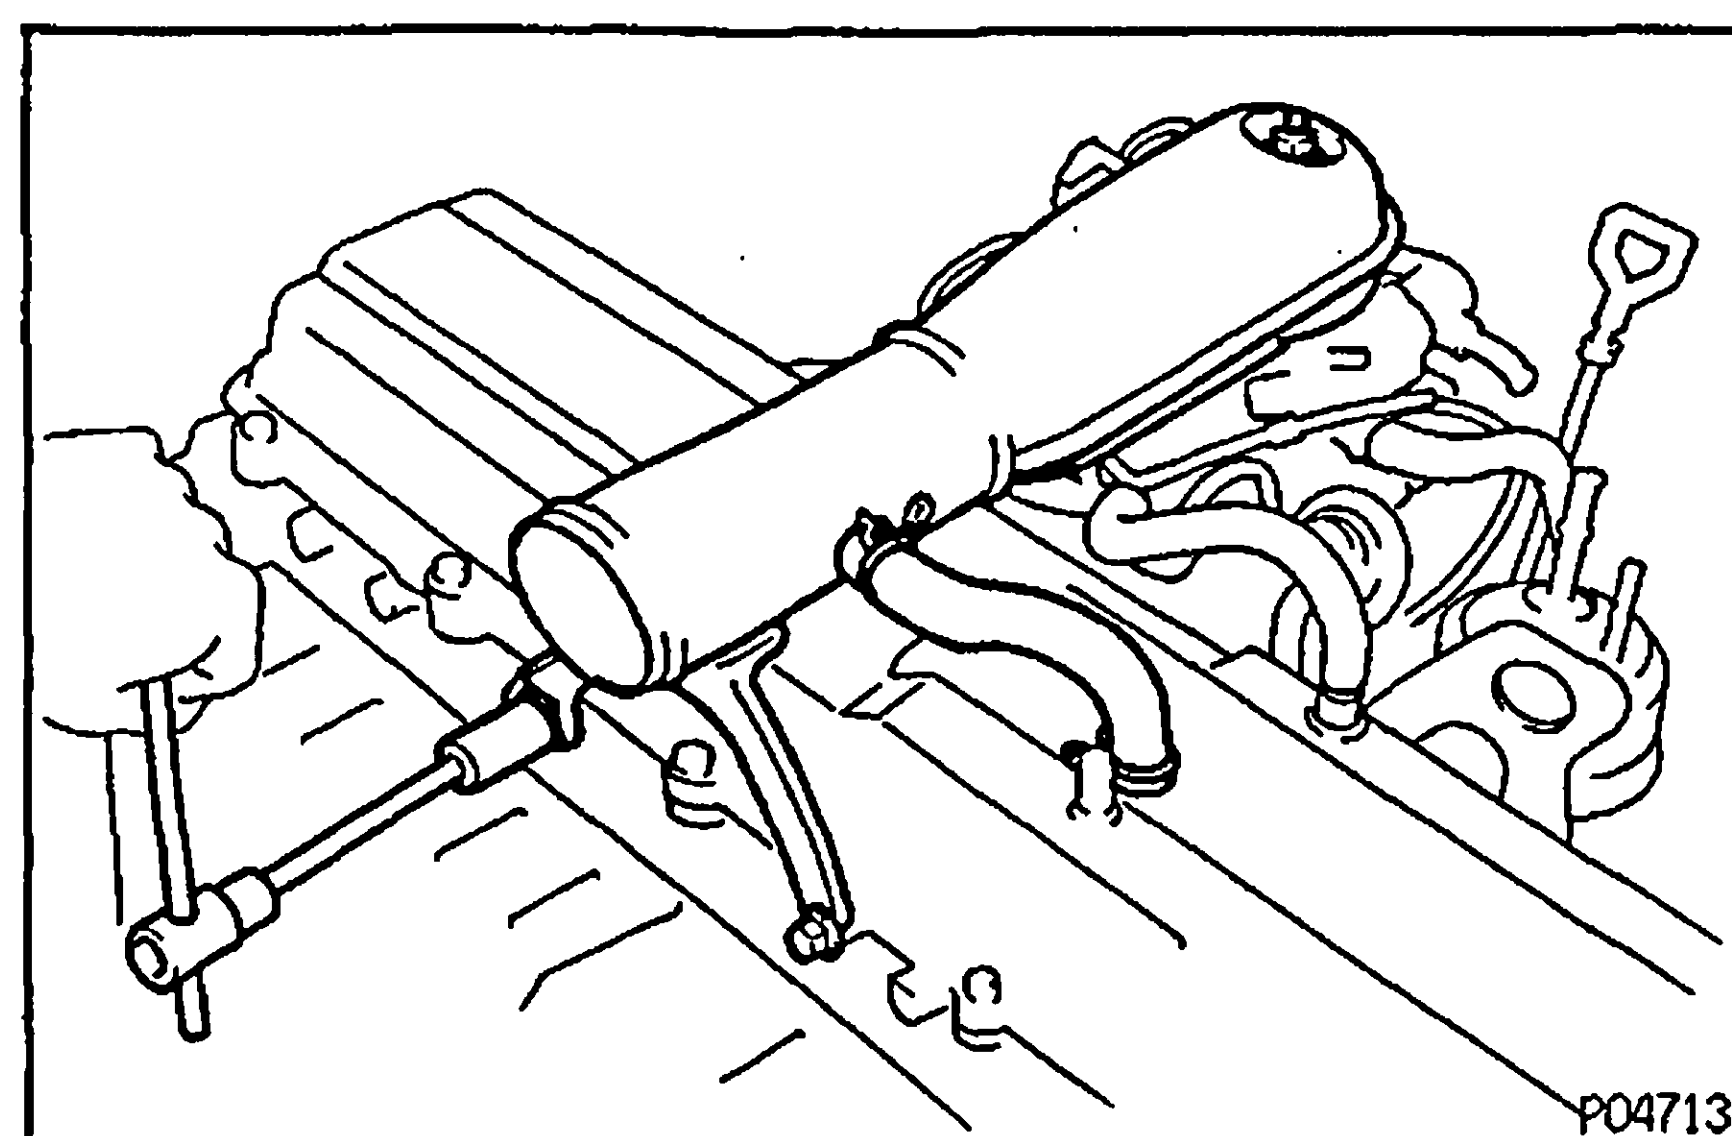

31. INSTALL INTAKE AIR CONNECTOR

- (a) Install the air connector with the two bolts and nut.

Bolt

Torque: 20 N·m (200 kgf·cm, 14 ft·lbf)

Nut


Torque: 5.4 N·m (55 kgf·cm, 48 ft·lbf)

- (b) Connect the PCV hose.

TIMING CHAIN COMPONENTS


EG0VG-01

EG

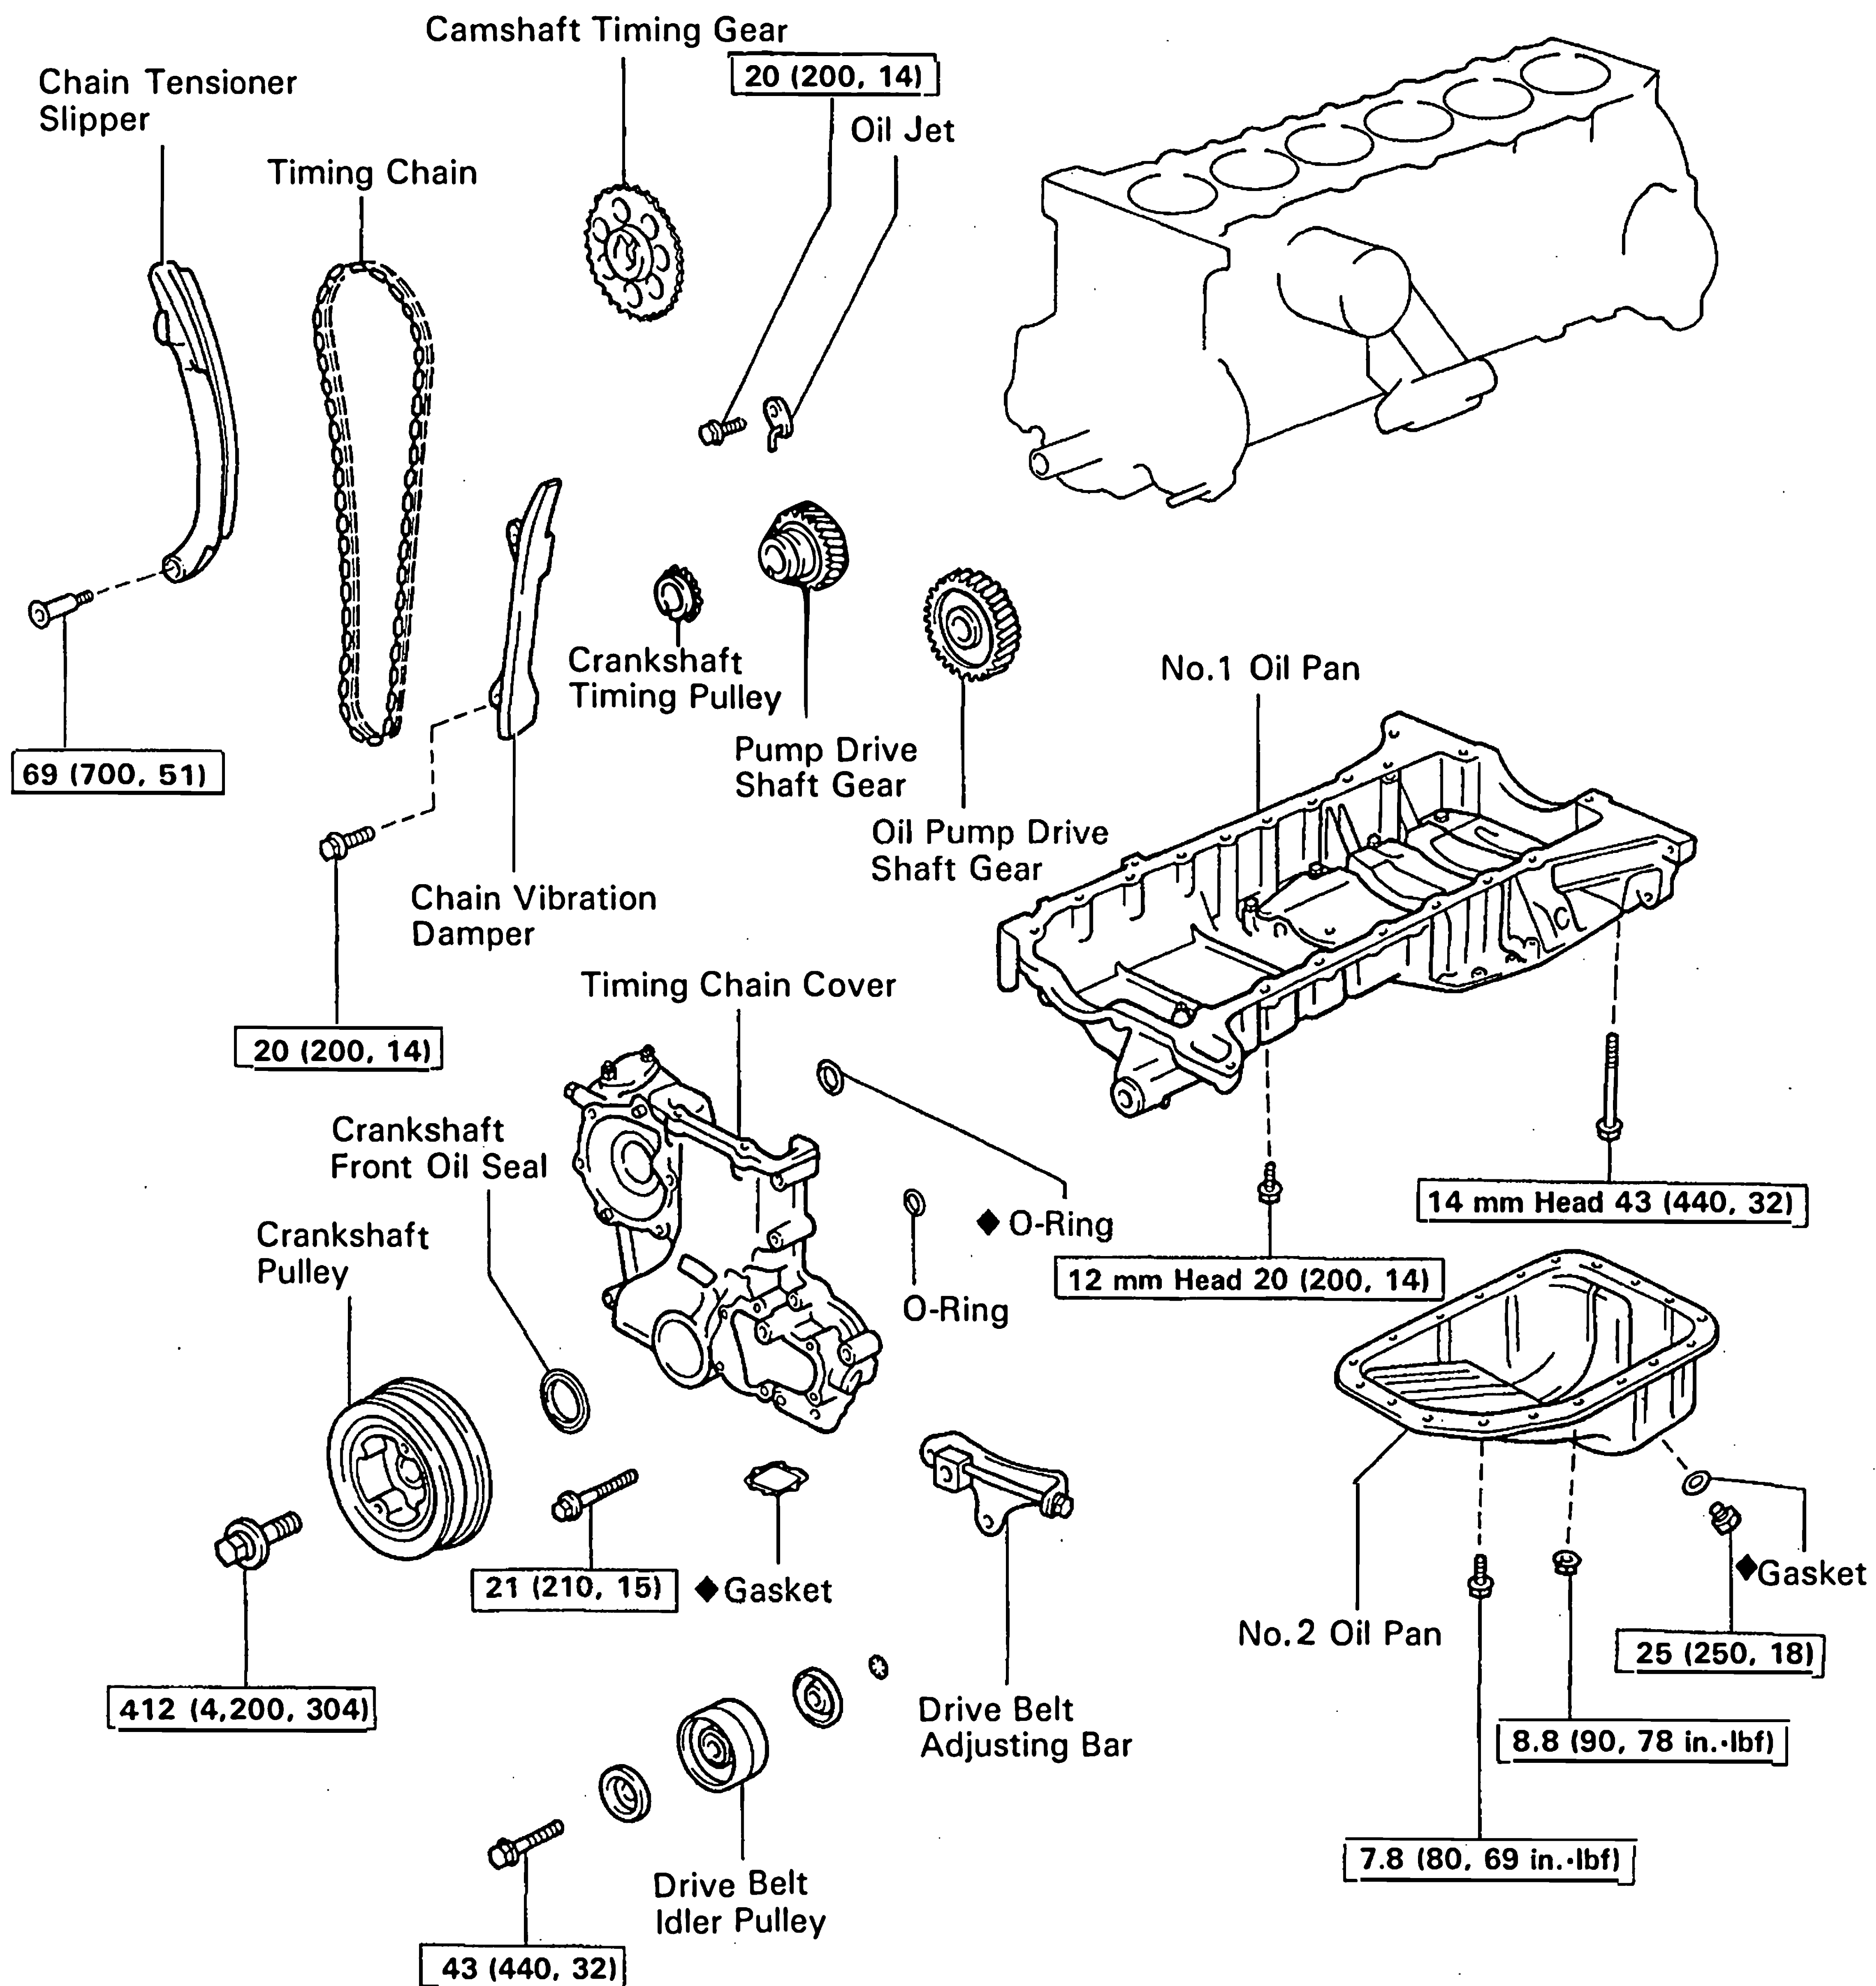

N·m (kgf·cm, ft·lbf) : Specified torque


◆ Non-reusable part

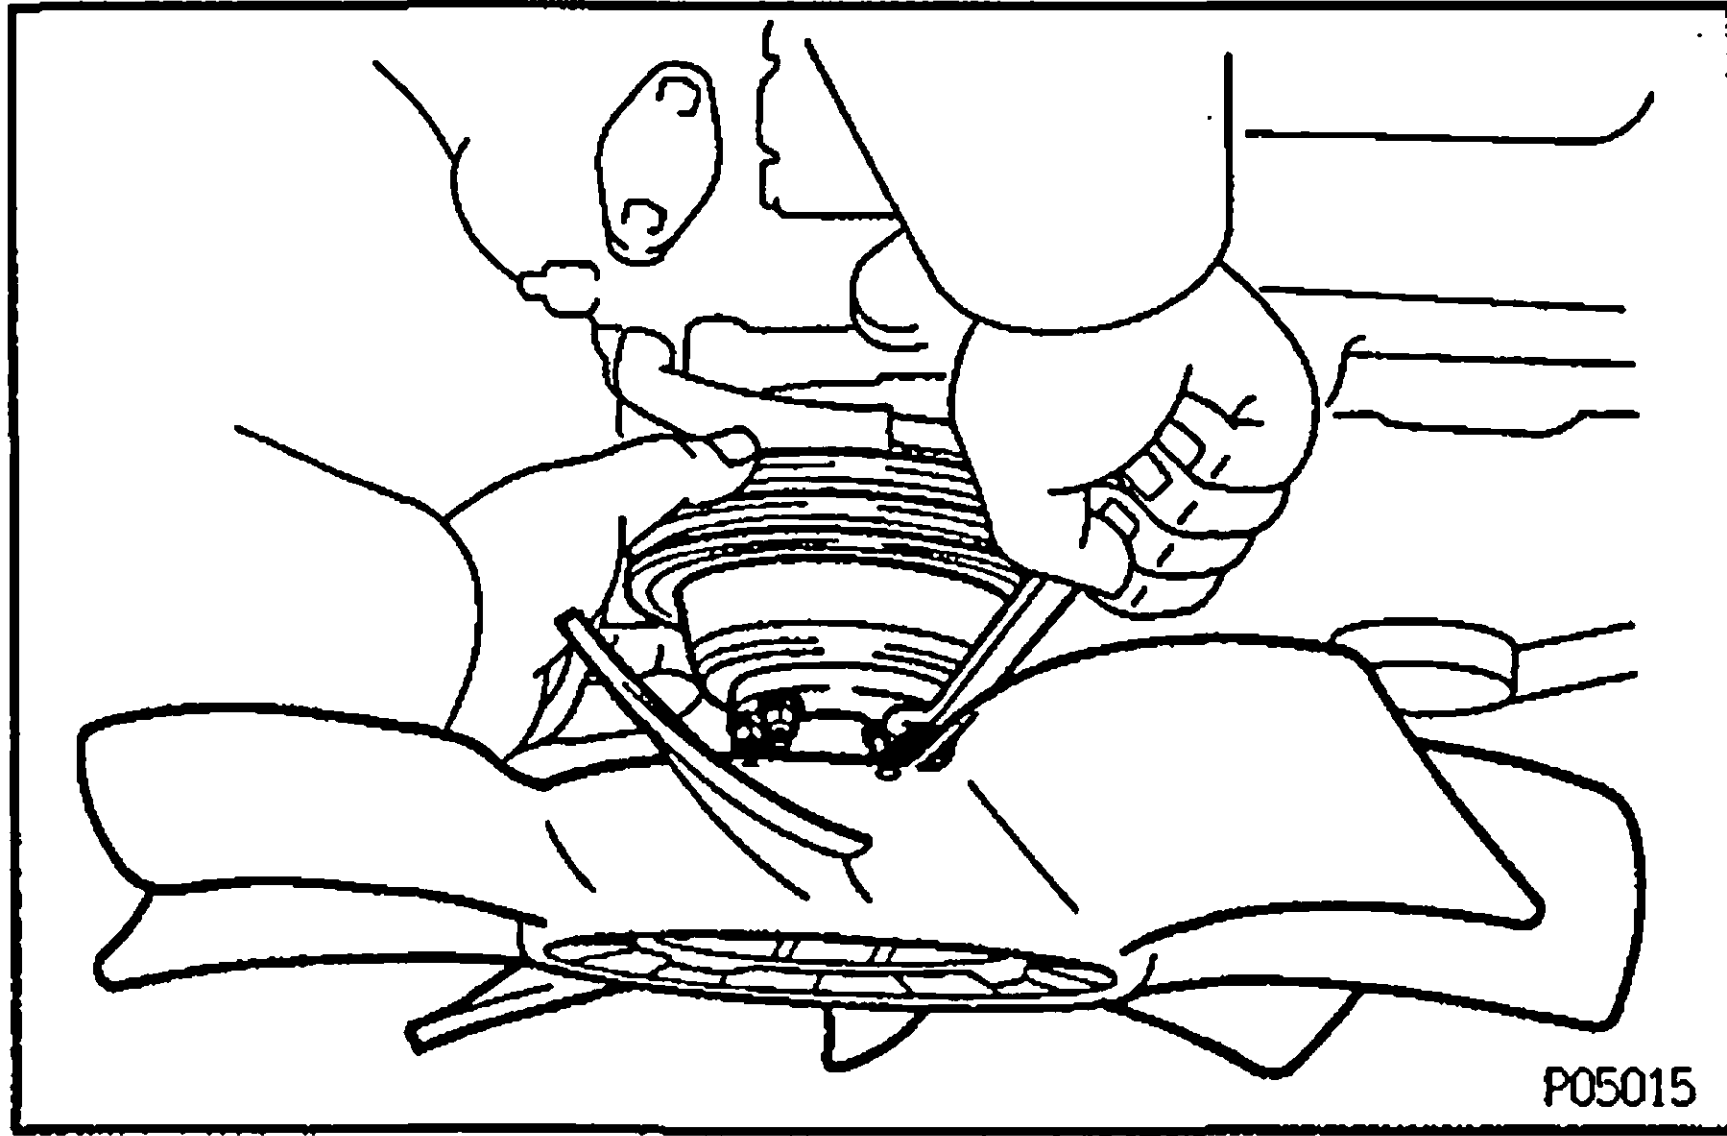

TIMING CHAIN REMOVAL

1. REMOVE WATER PUMP


- (a) Stretch the belts and loosen the fan pulley mounting nuts.
- (b) Loosen the pivot and adjusting bolts of the alternator, and remove the drive belts.
- (c) Remove the four nuts, fan with fluid coupling and water pump pulley.
- (d) Remove the four bolts, two nuts, water pump and gasket.

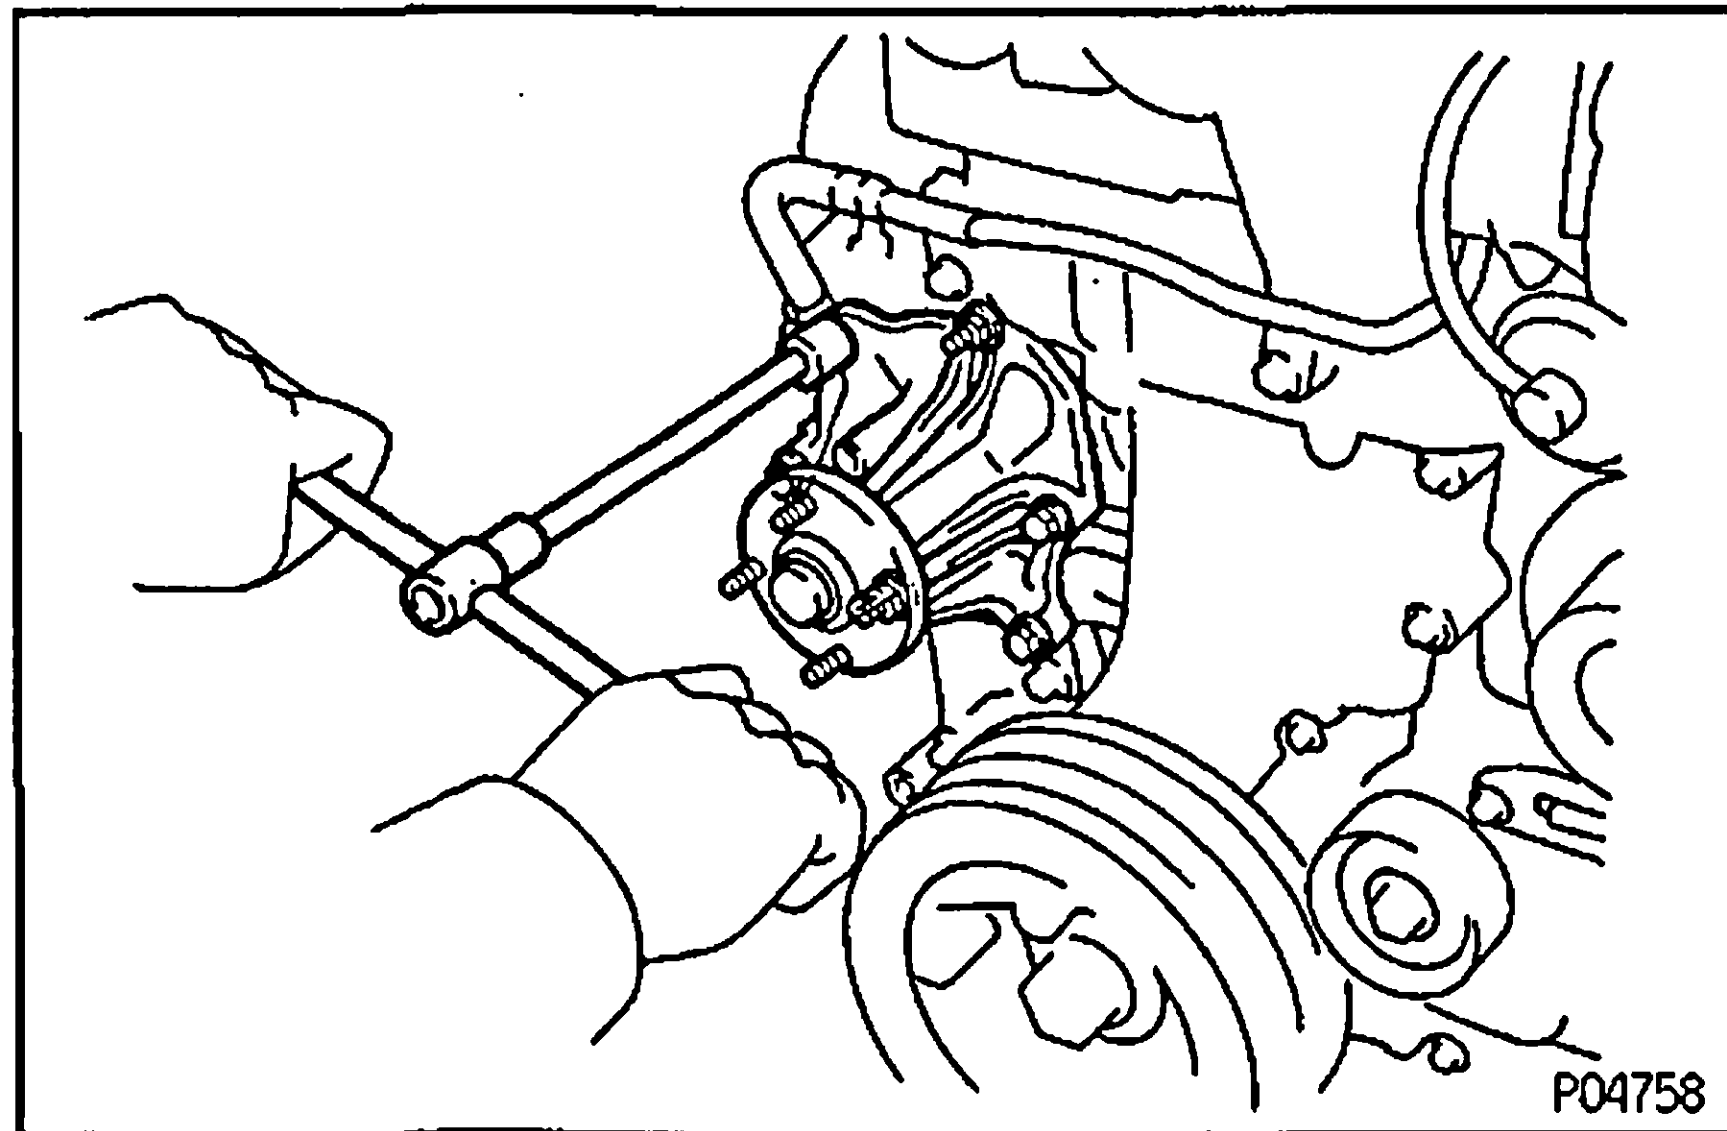

2. REMOVE CYLINDER HEAD

3. REMOVE NO.2 OIL PAN

- (a) Remove the 17 mounting bolts and two nuts.

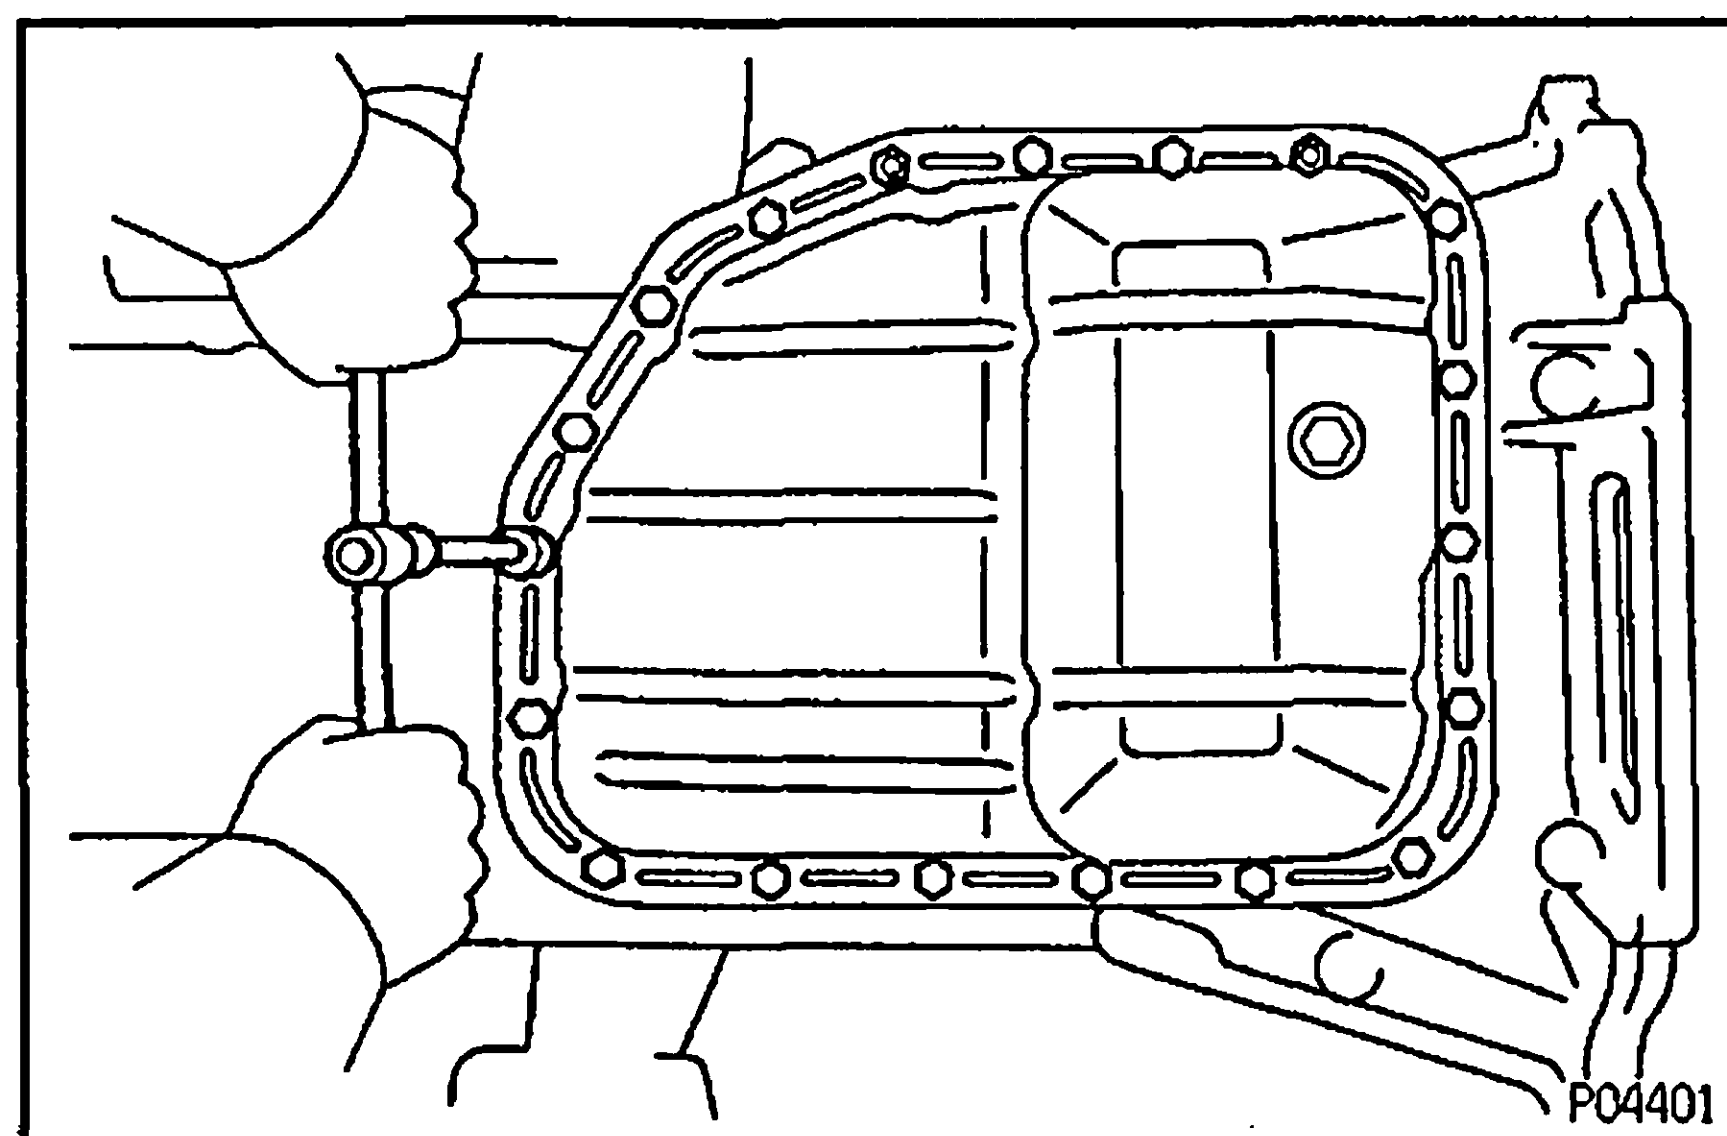



- (b) Insert the blade of SST between the No.1 and No.2 oil pans, cut off applied sealer and remove the No.1 oil pan.

SST 09032-00100

NOTICE:


- Be careful not to damage the No.2 oil pan contact surface of the No.1 oil pan.
- Be careful not to damage the oil pan flange.

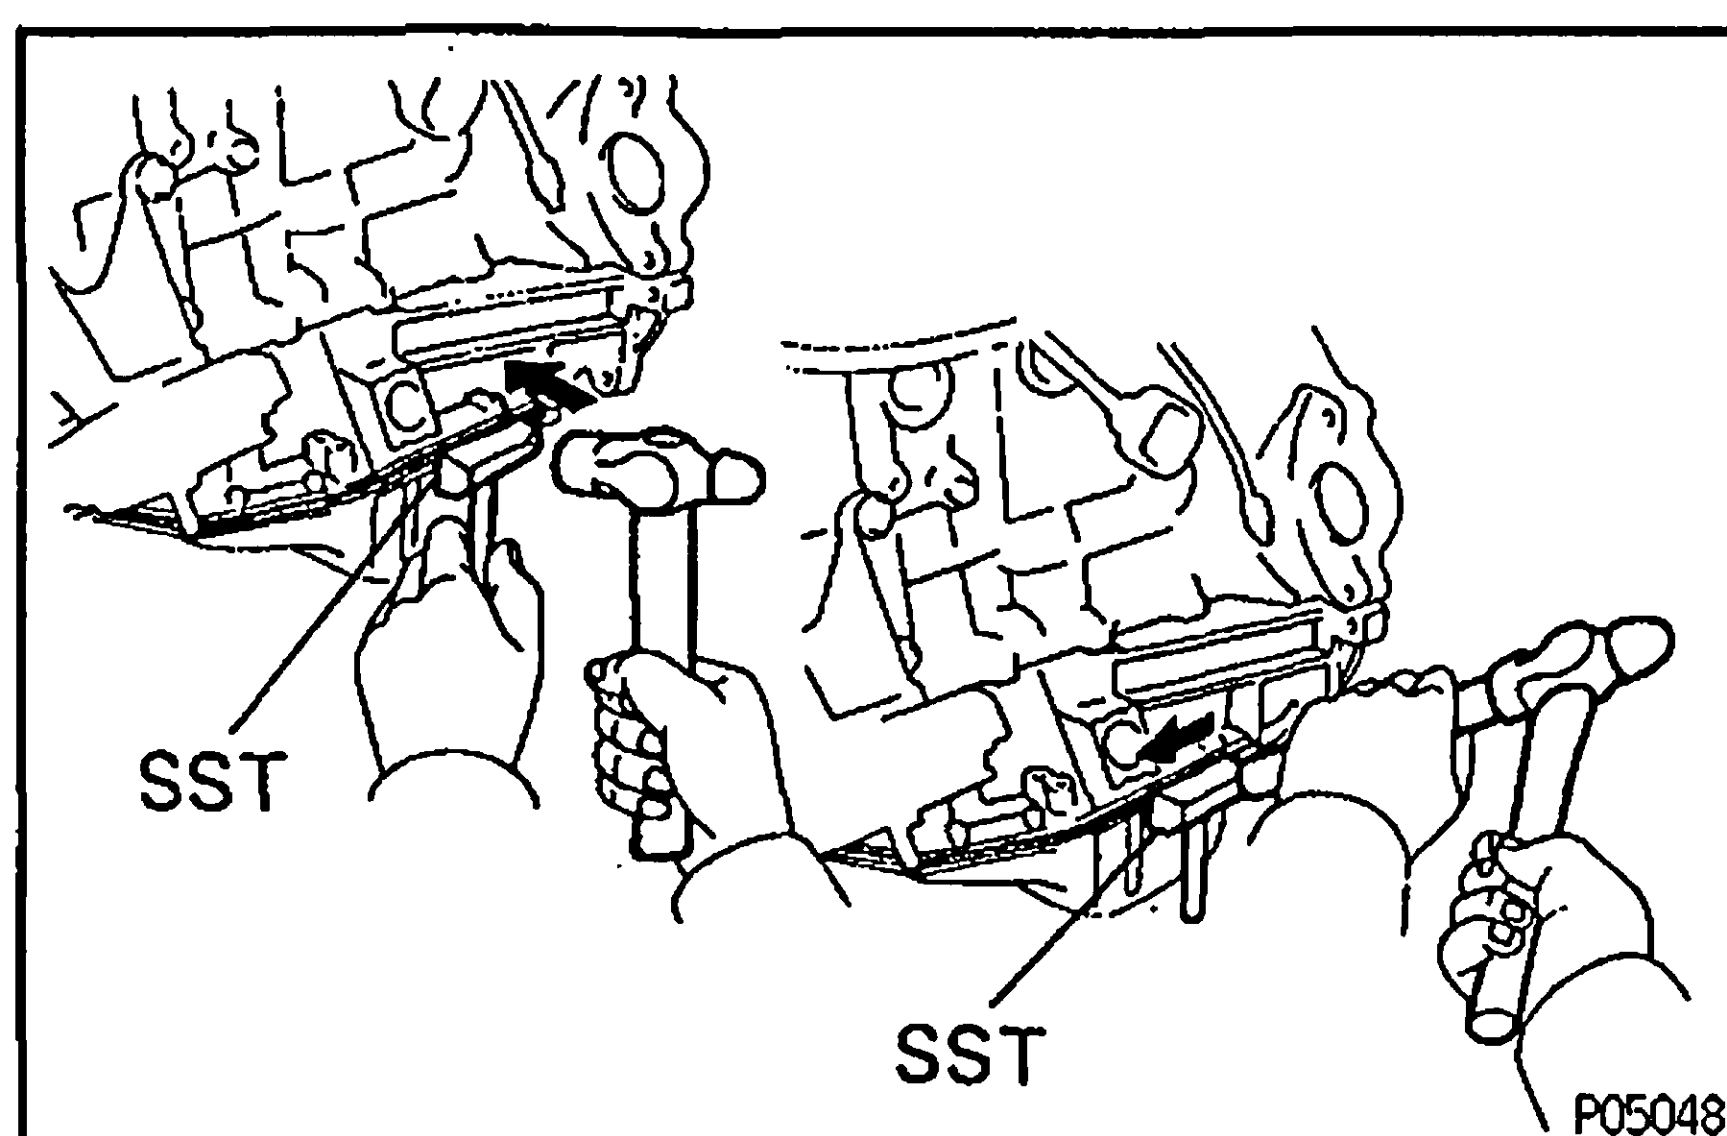

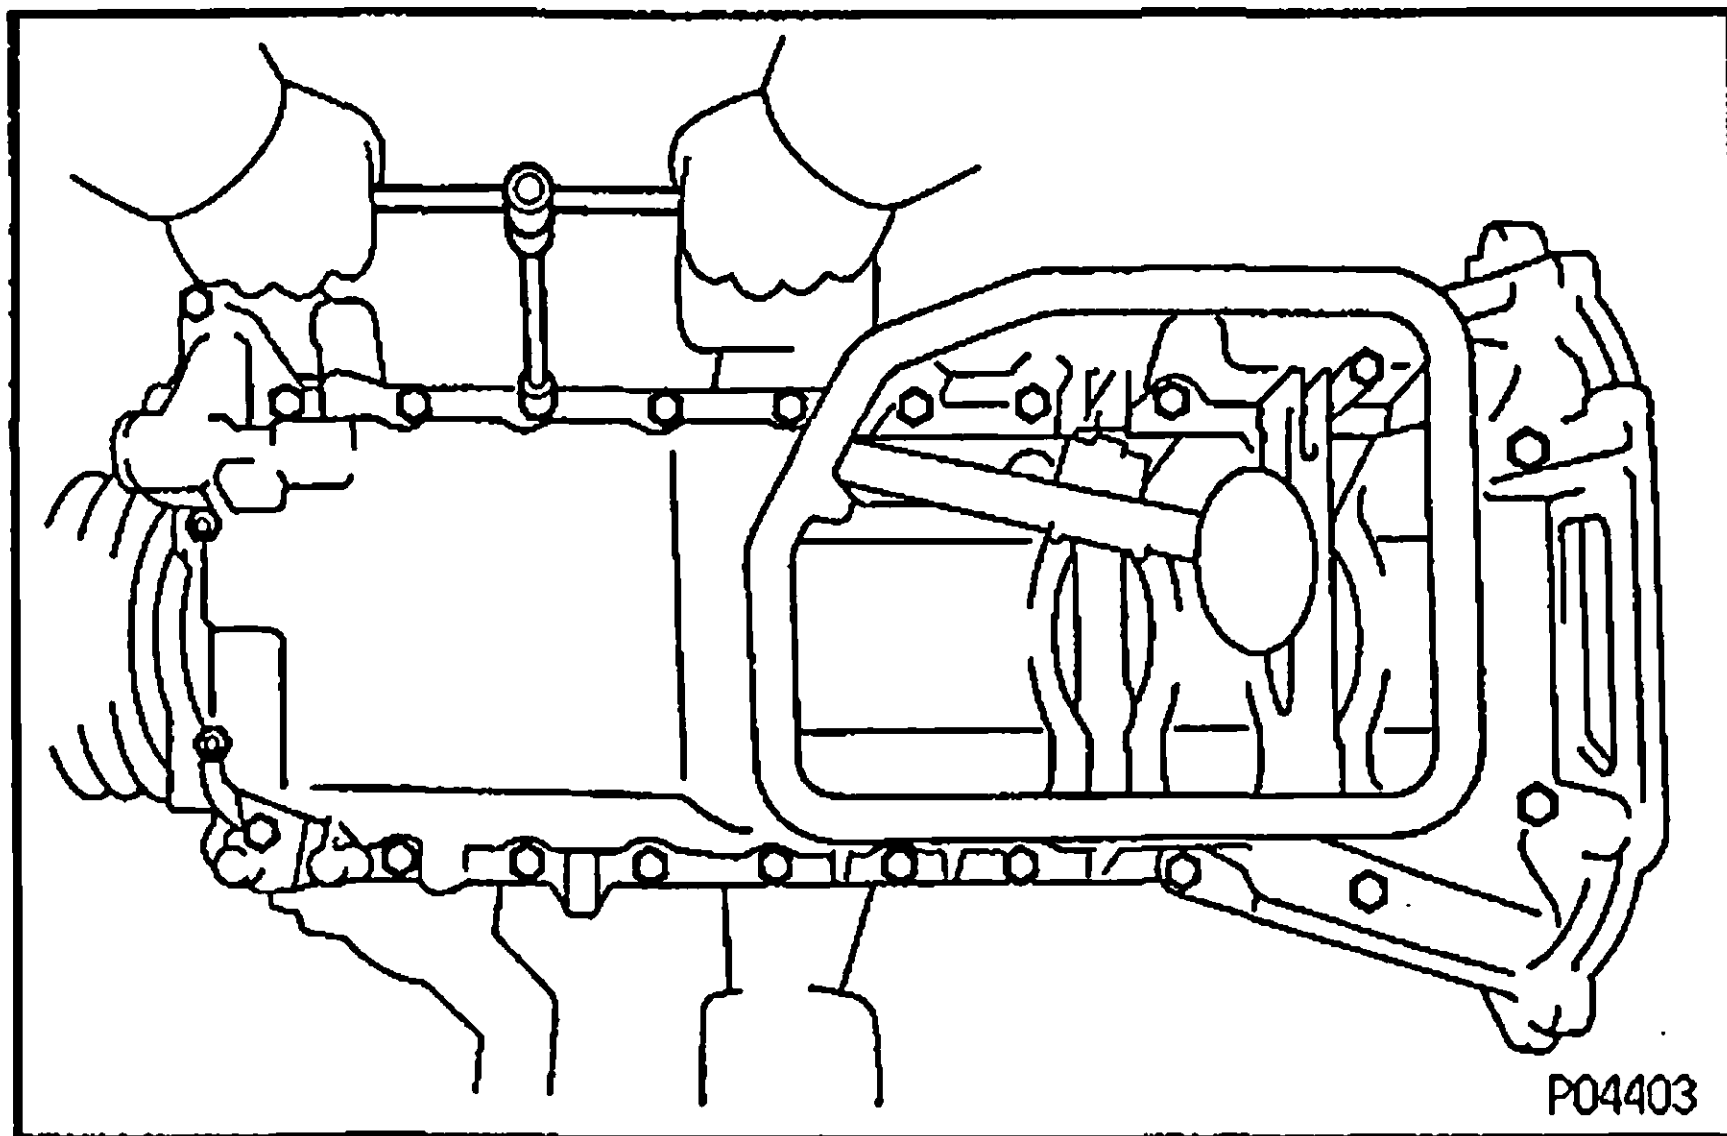


4. REMOVE NO.1 OIL PAN

- (a) Remove the 21 mounting bolts and two nuts.

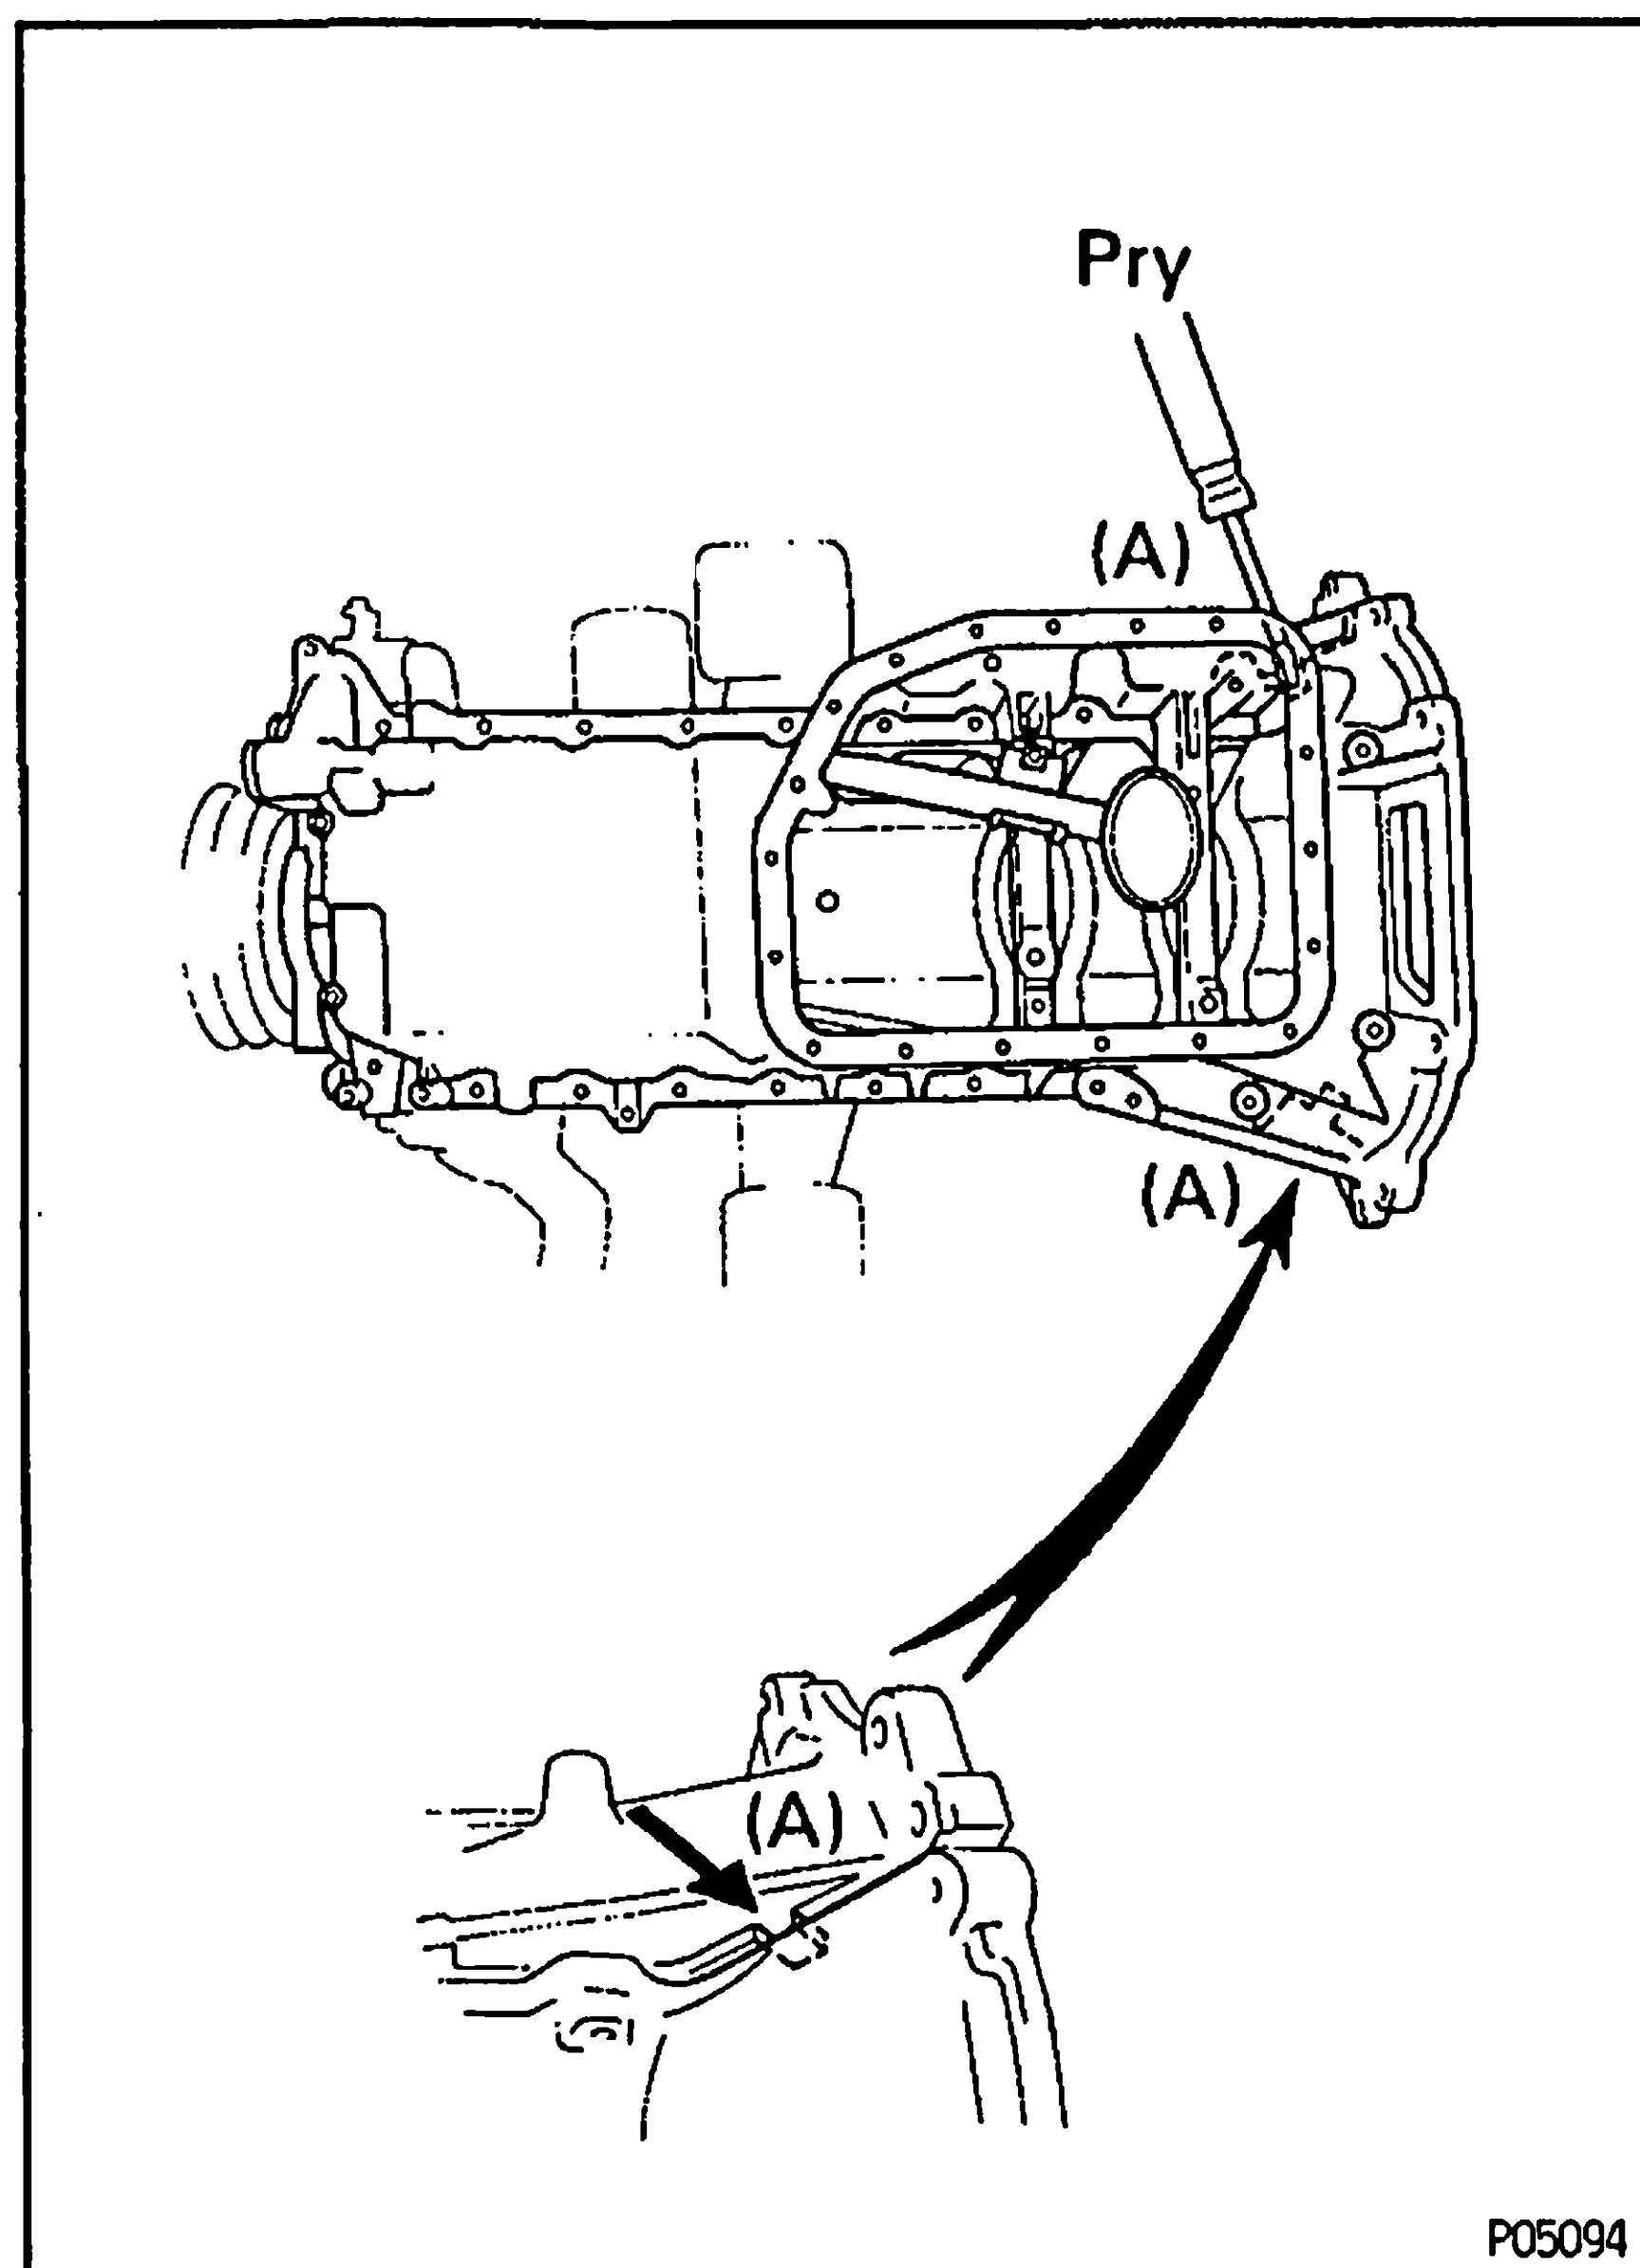


- (b) Remove the No.1 oil pan by prying the portions (A) between the cylinder block and No.1 oil pan with a screwdriver.

NOTICE: Be careful not to damage the contact surfaces of the cylinder block and No.1 oil pan.

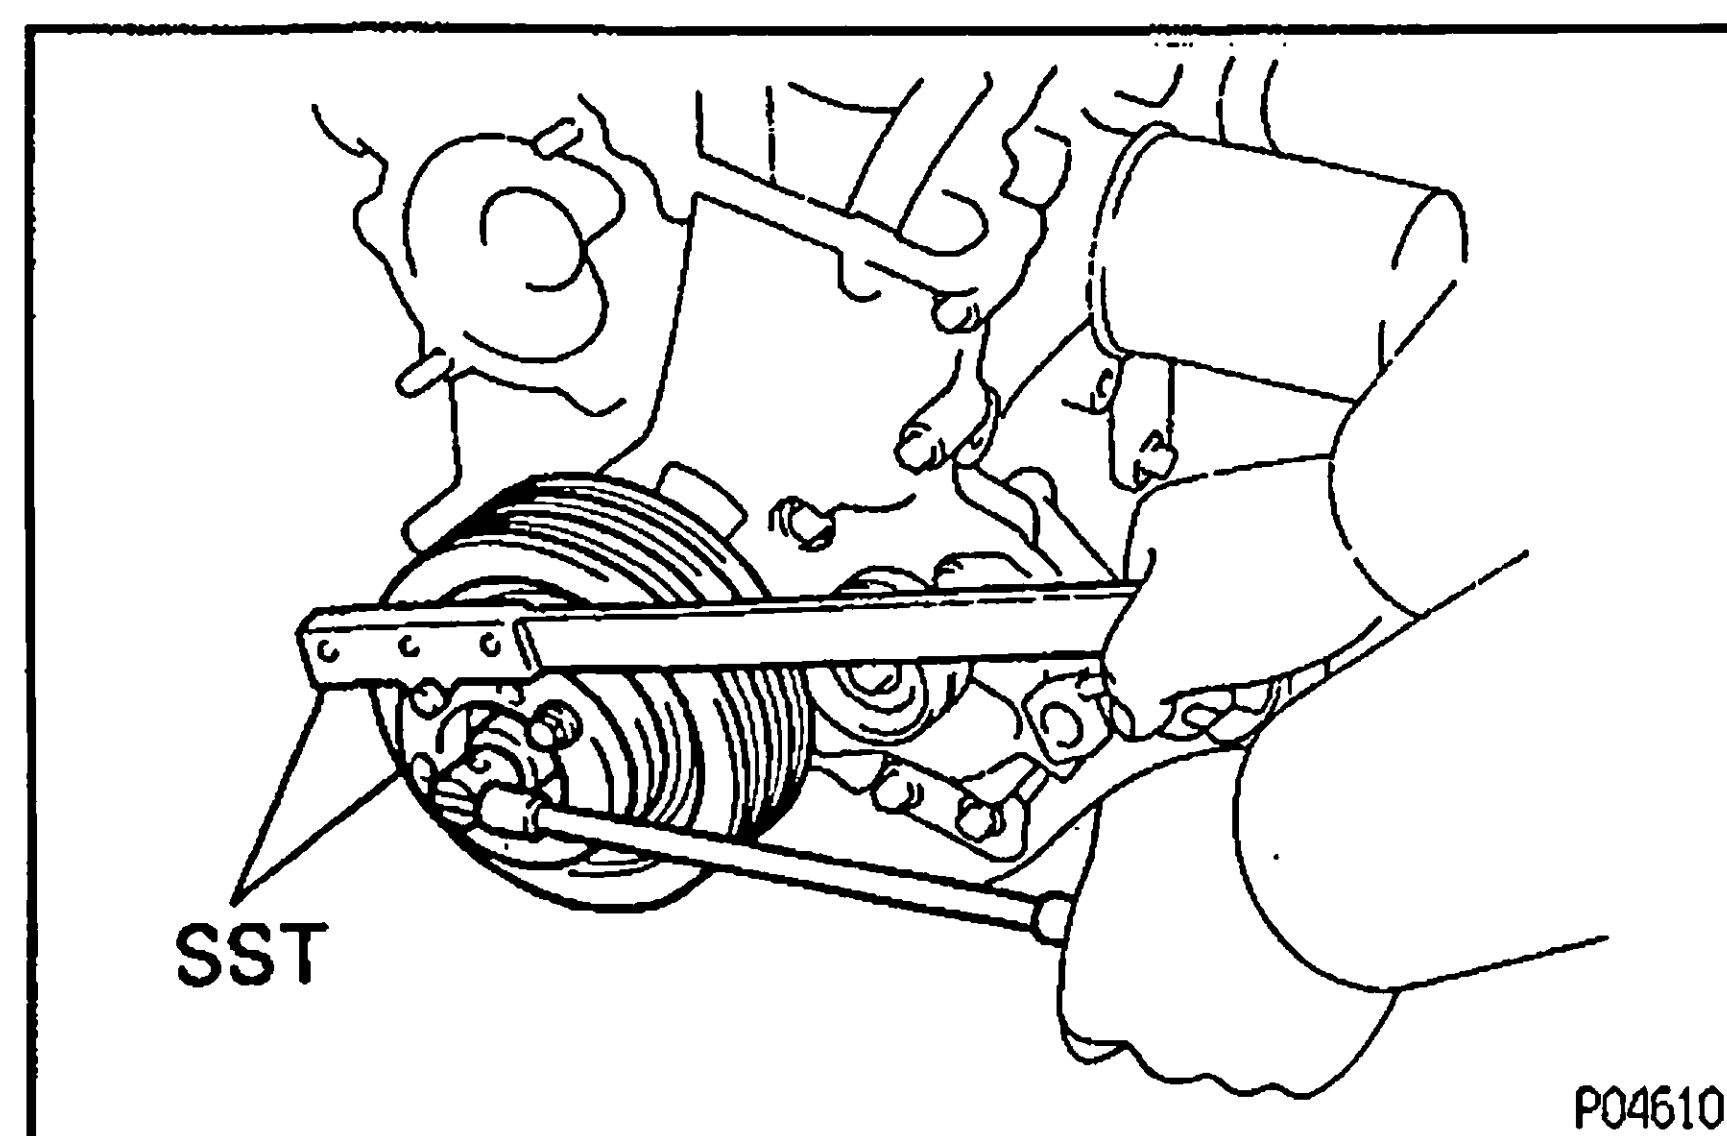


5. REMOVE CRANKSHAFT PULLEY

- (a) Using SST, remove the pulley bolt.
SST 09213-58012, 09330-00021
- (b) Remove the crankshaft pulley.

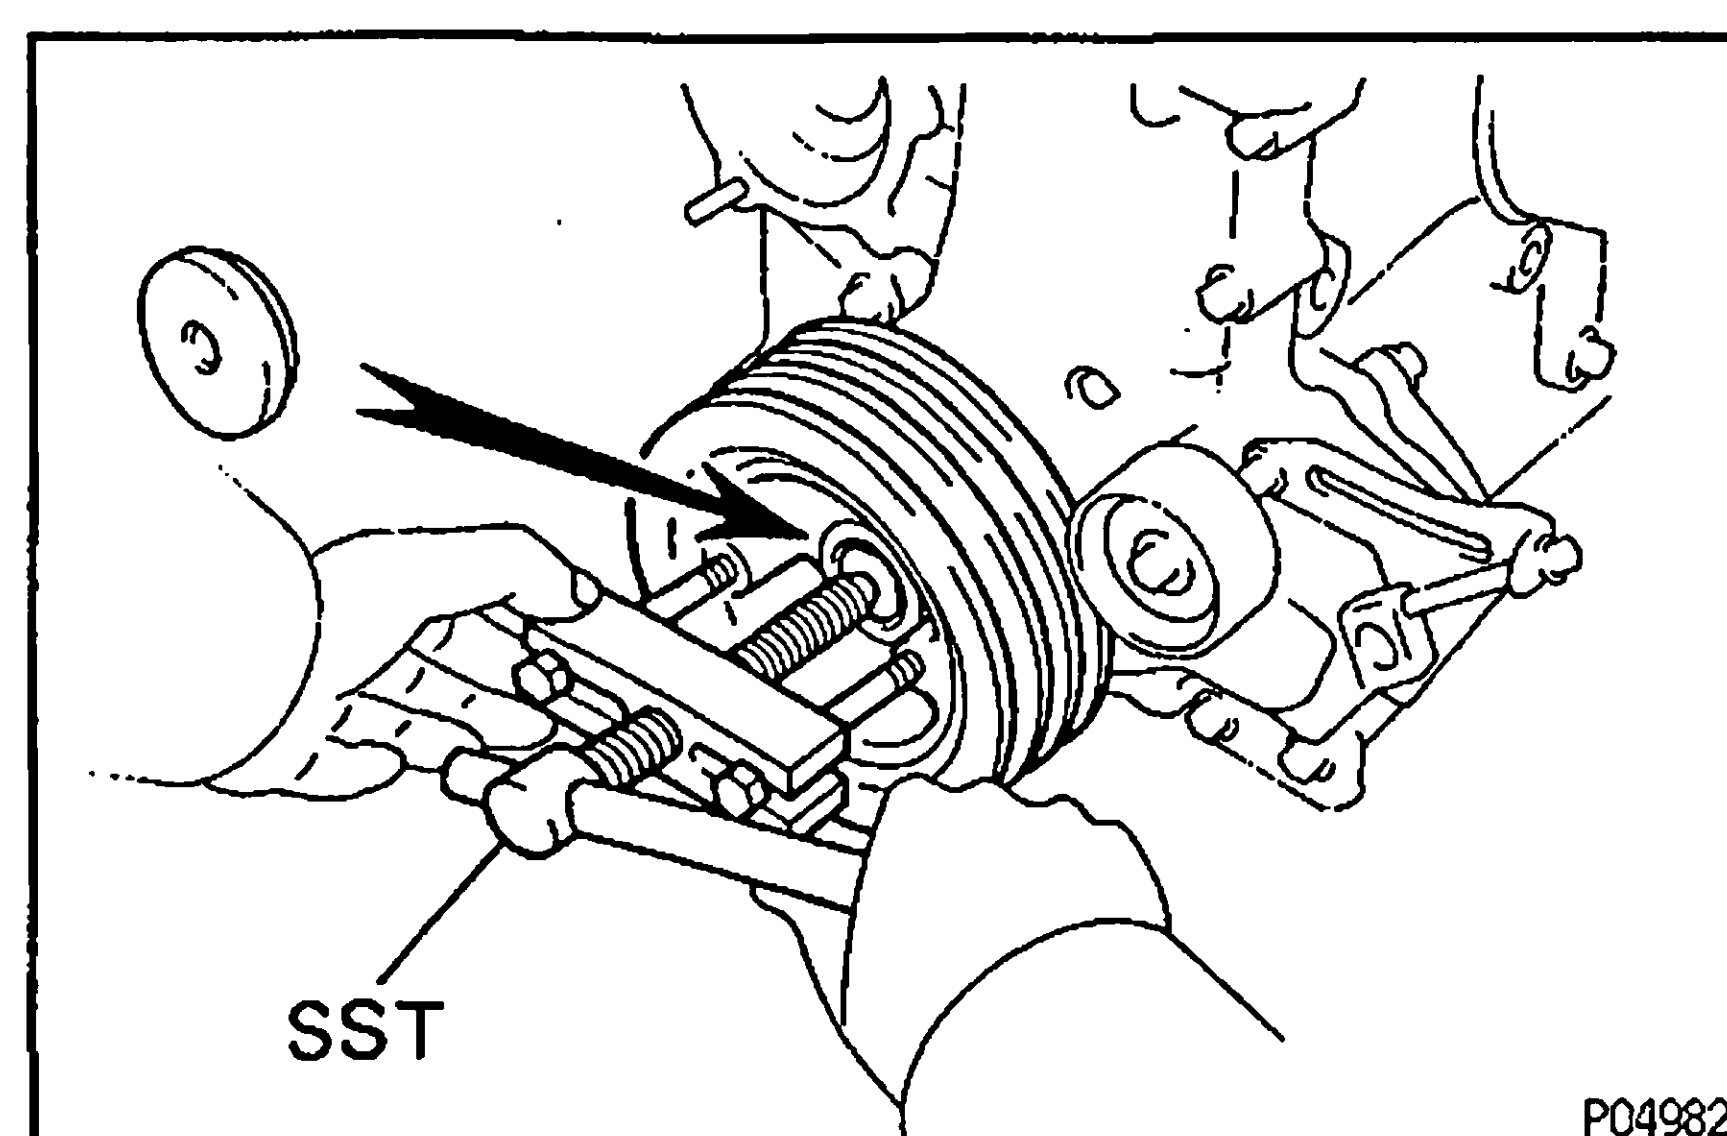

HINT: If necessary, remove the pulley with SST.
SST 09213-60017 (09213-00020, 09213-00030, 09213-00060), 09950-20017

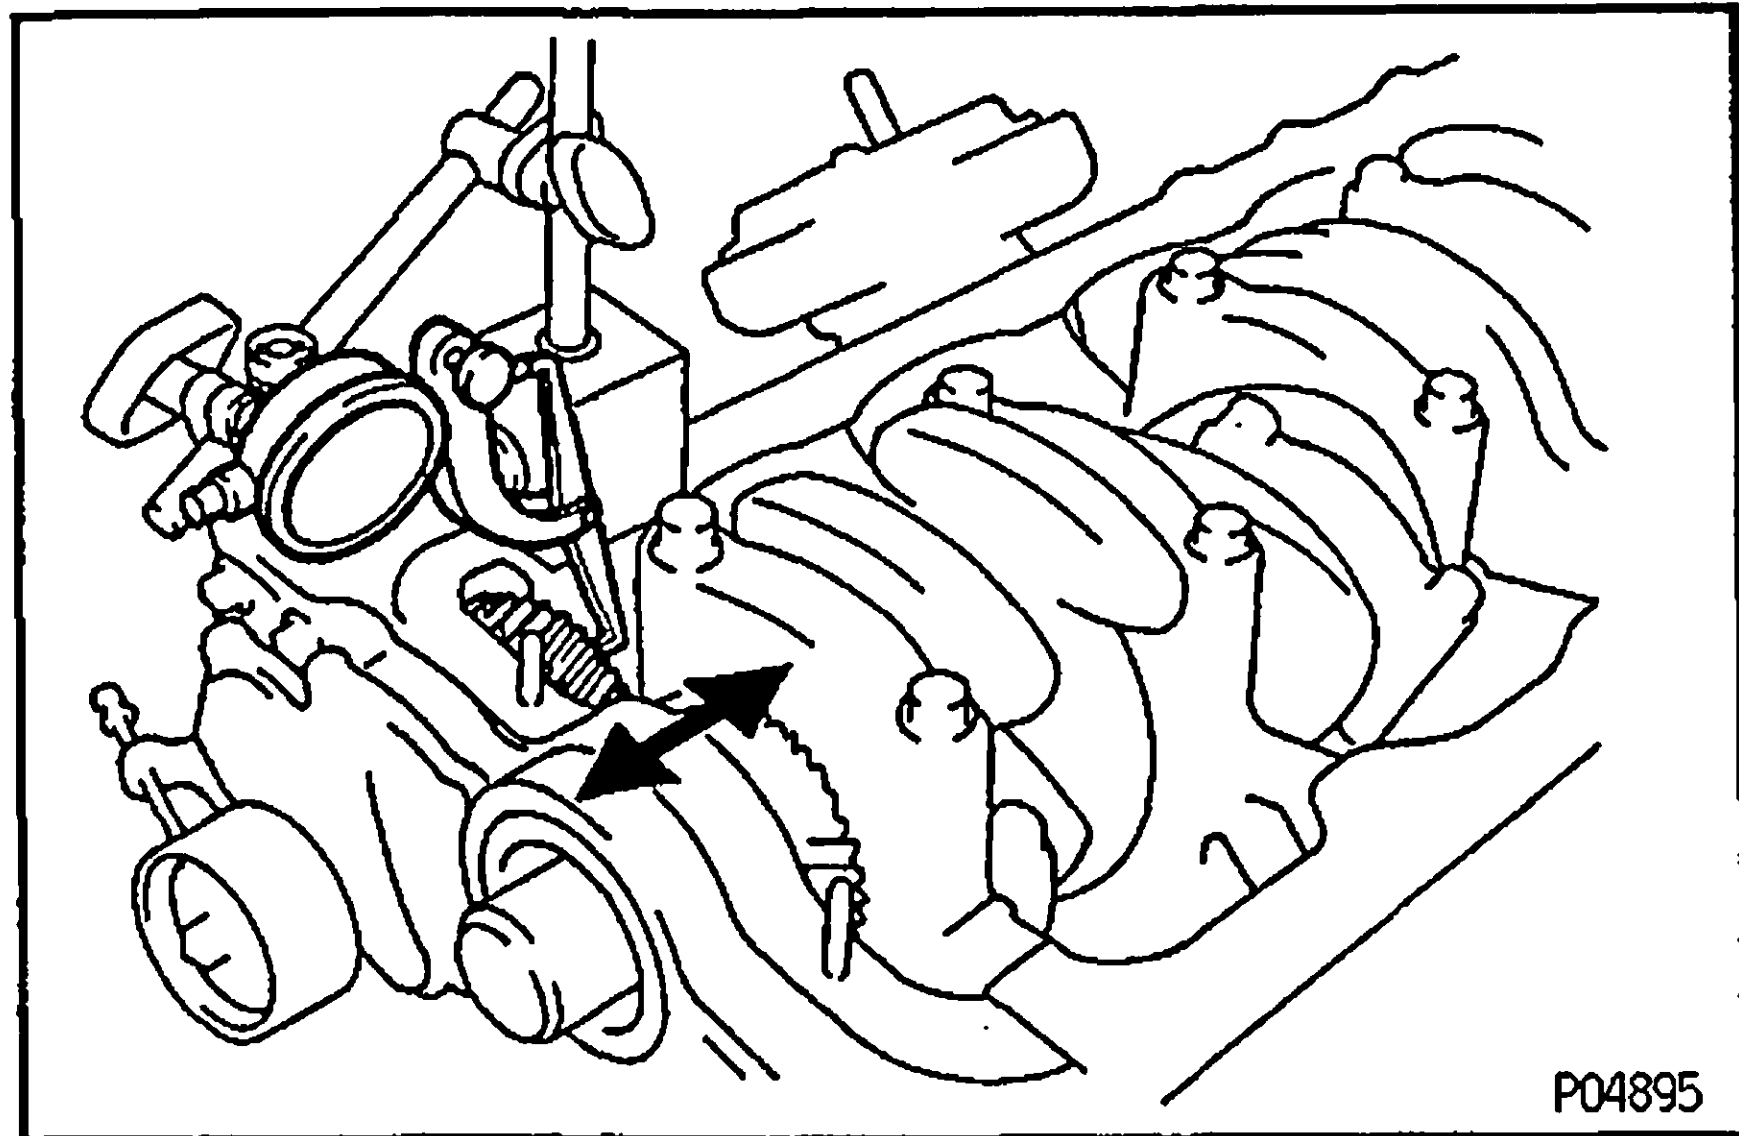

6. CHECK THRUST CLEARANCE OF OIL PUMP DRIVE SHAFT GEAR

Using a dial indicator with lever type attachment, measure the thrust clearance.

Standard thrust clearance:


0.050 — 0.150 mm (0.0020 — 0.0059 in.)

Maximum thrust clearance:

0.30 mm (0.0118 in.)


If the thrust clearance is greater than maximum, replace the oil pump drive shaft gear and/or timing chain cover.

EG

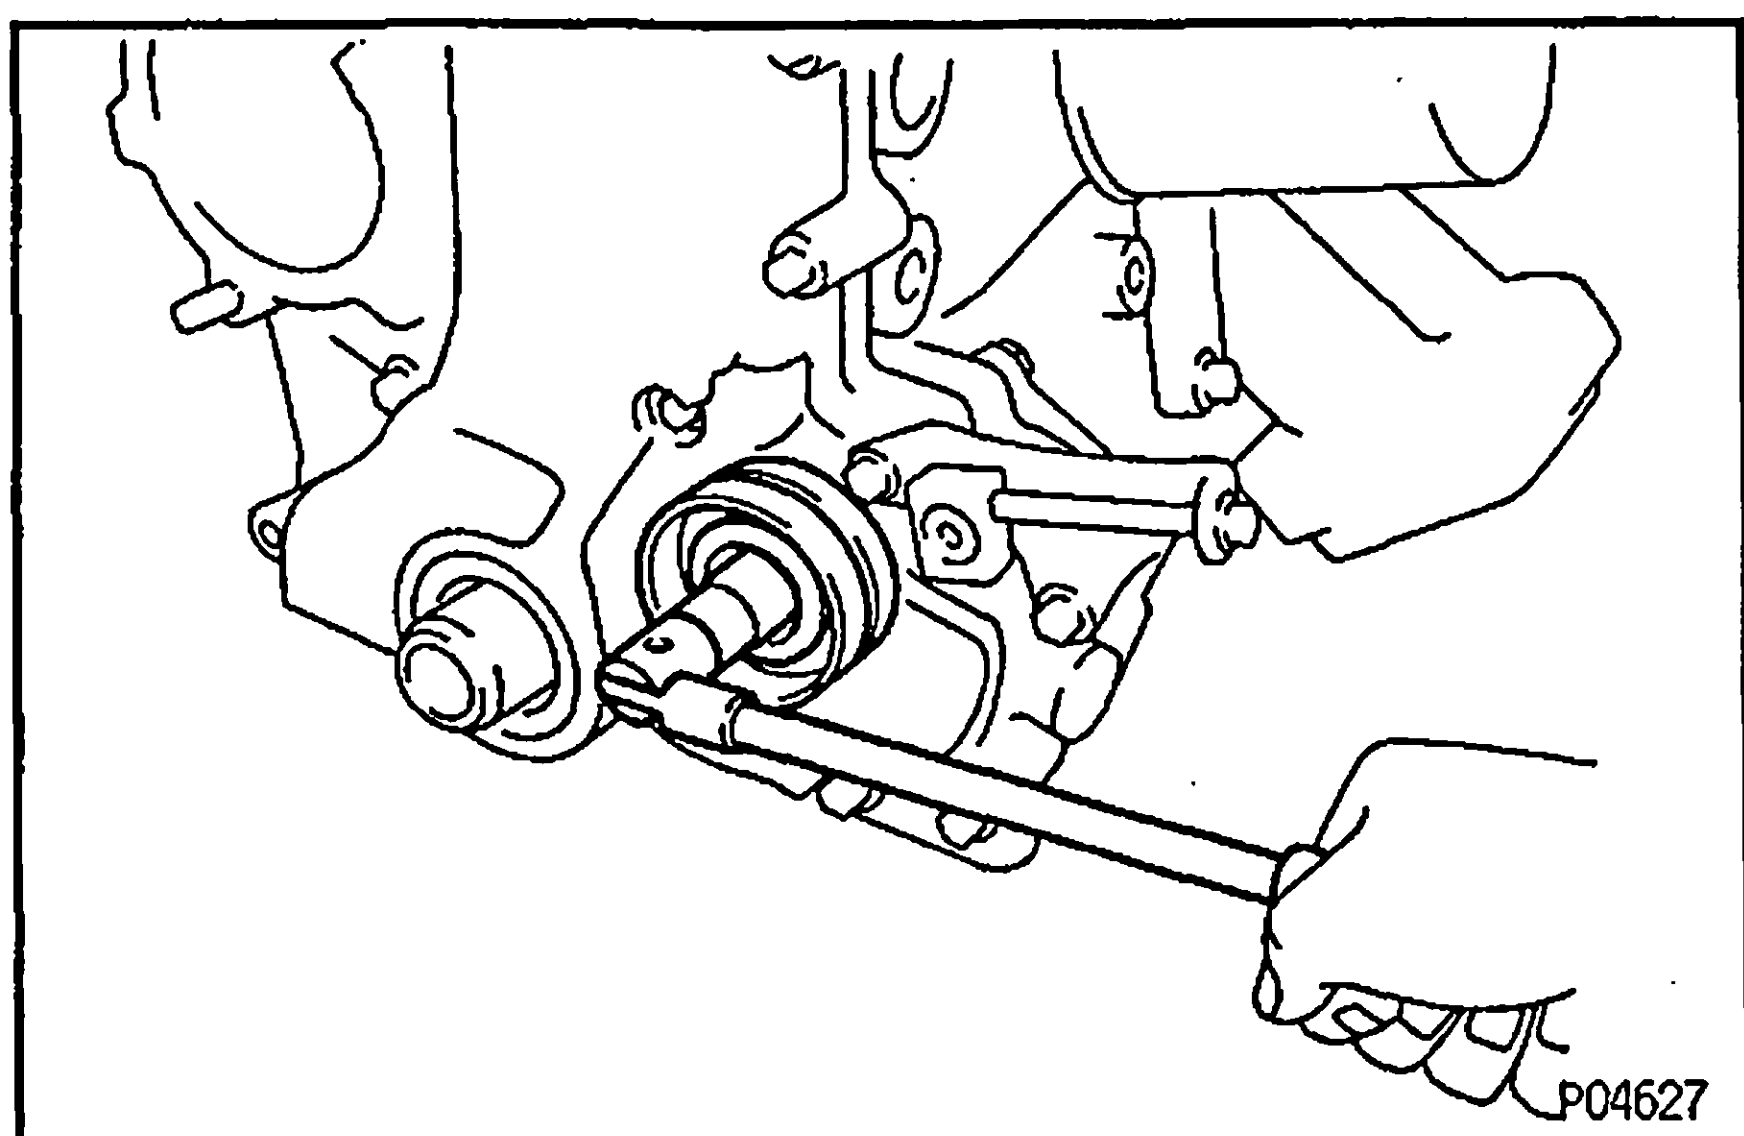


7. REMOVE DRIVE BELT IDLER PULLEY

Remove the bolt and idler pulley.

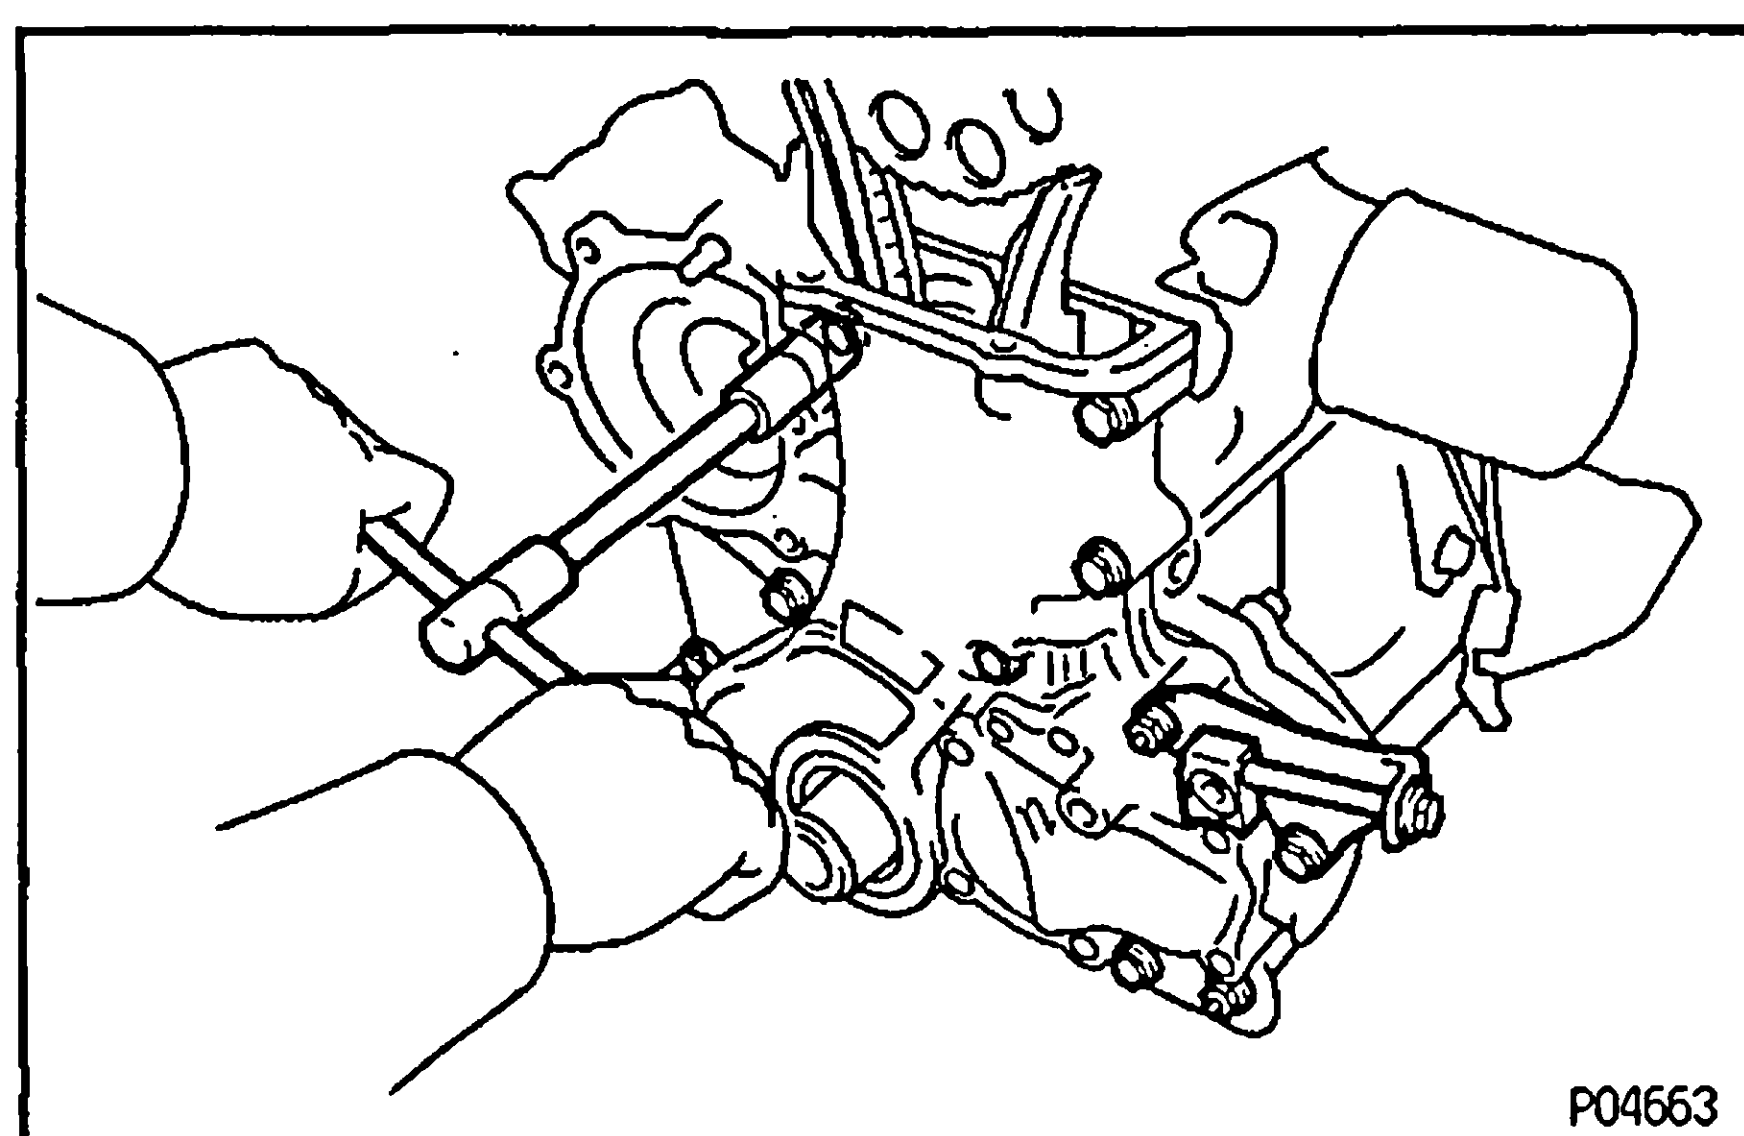

8. REMOVE TIMING CHAIN COVER

- (a) Remove the nine mounting bolts, two mounting nuts and drive belt adjusting bar.

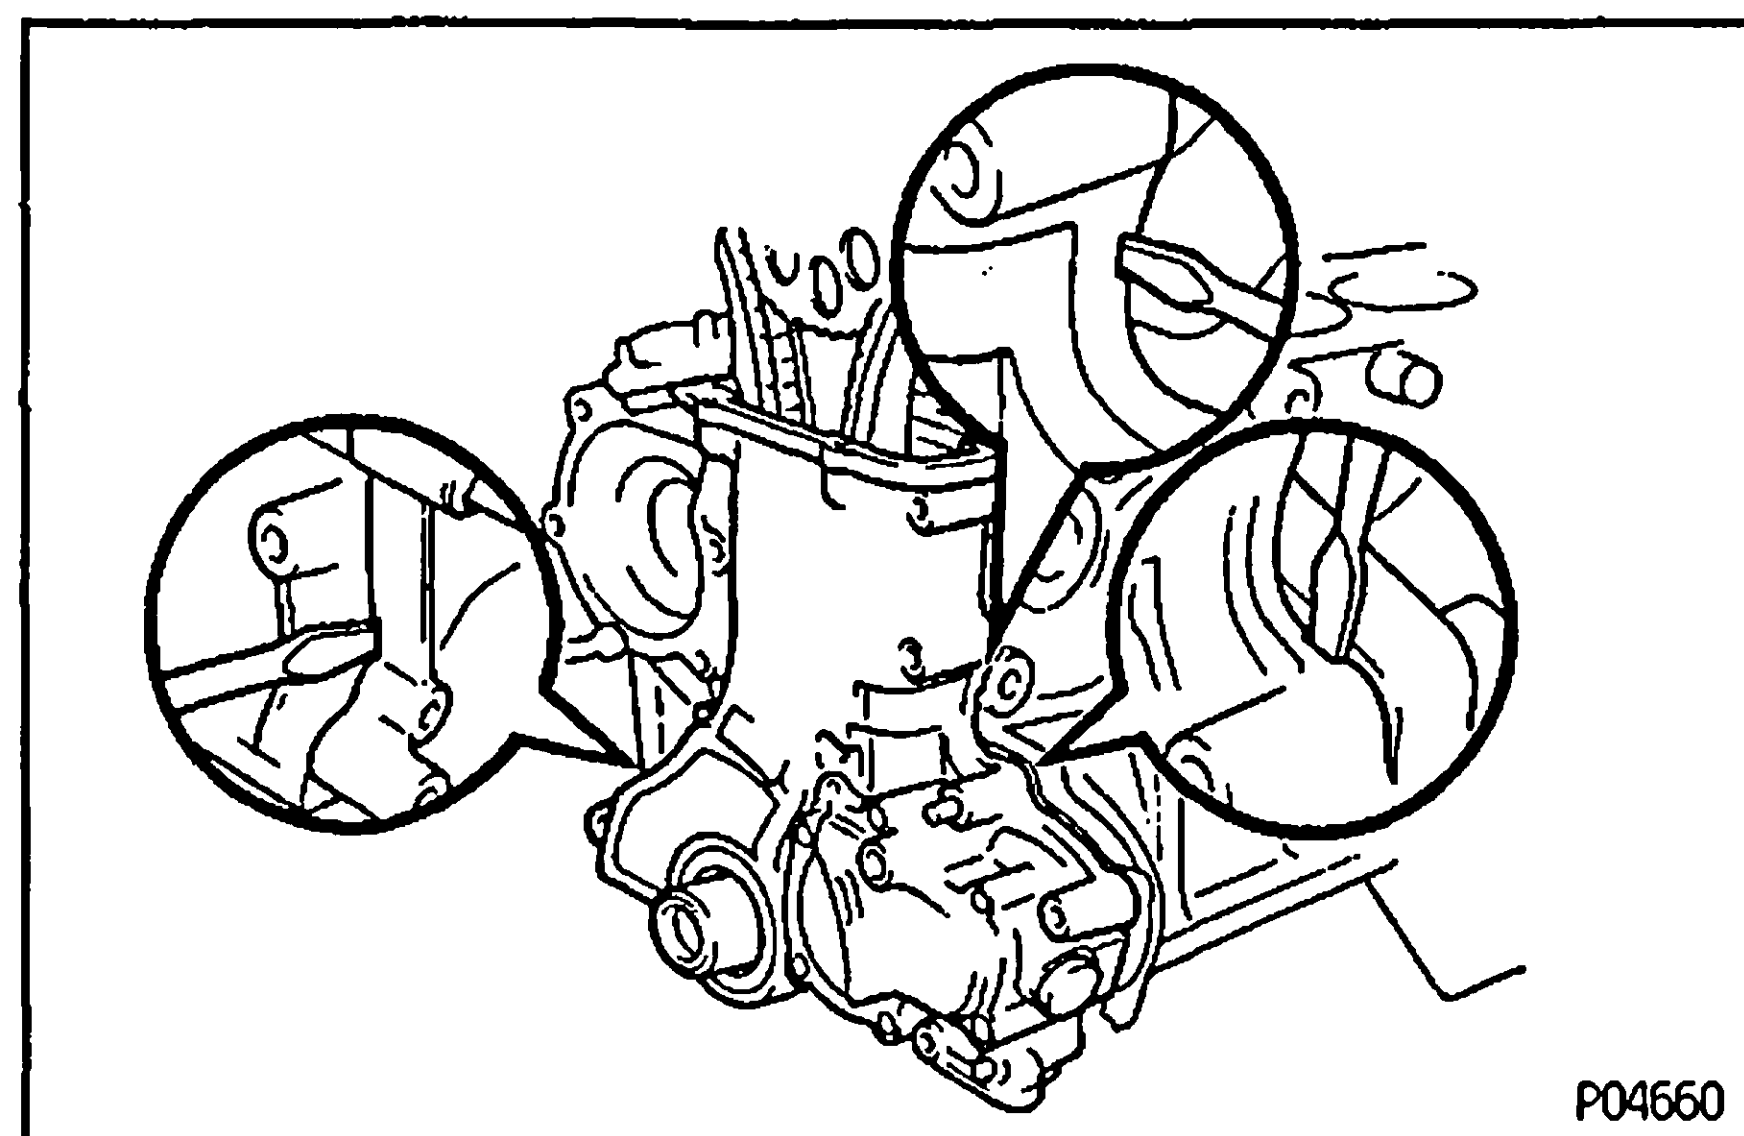


- (b) Remove the timing chain cover by prying the portions between the cylinder block and timing chain cover with a screwdriver.


NOTICE: Be careful not to damage the contact surfaces of the cylinder block and oil pump.

- (c) Remove the O-rings from the timing chain cover.
- (d) Remove the gasket from the timing chain cover.


EG

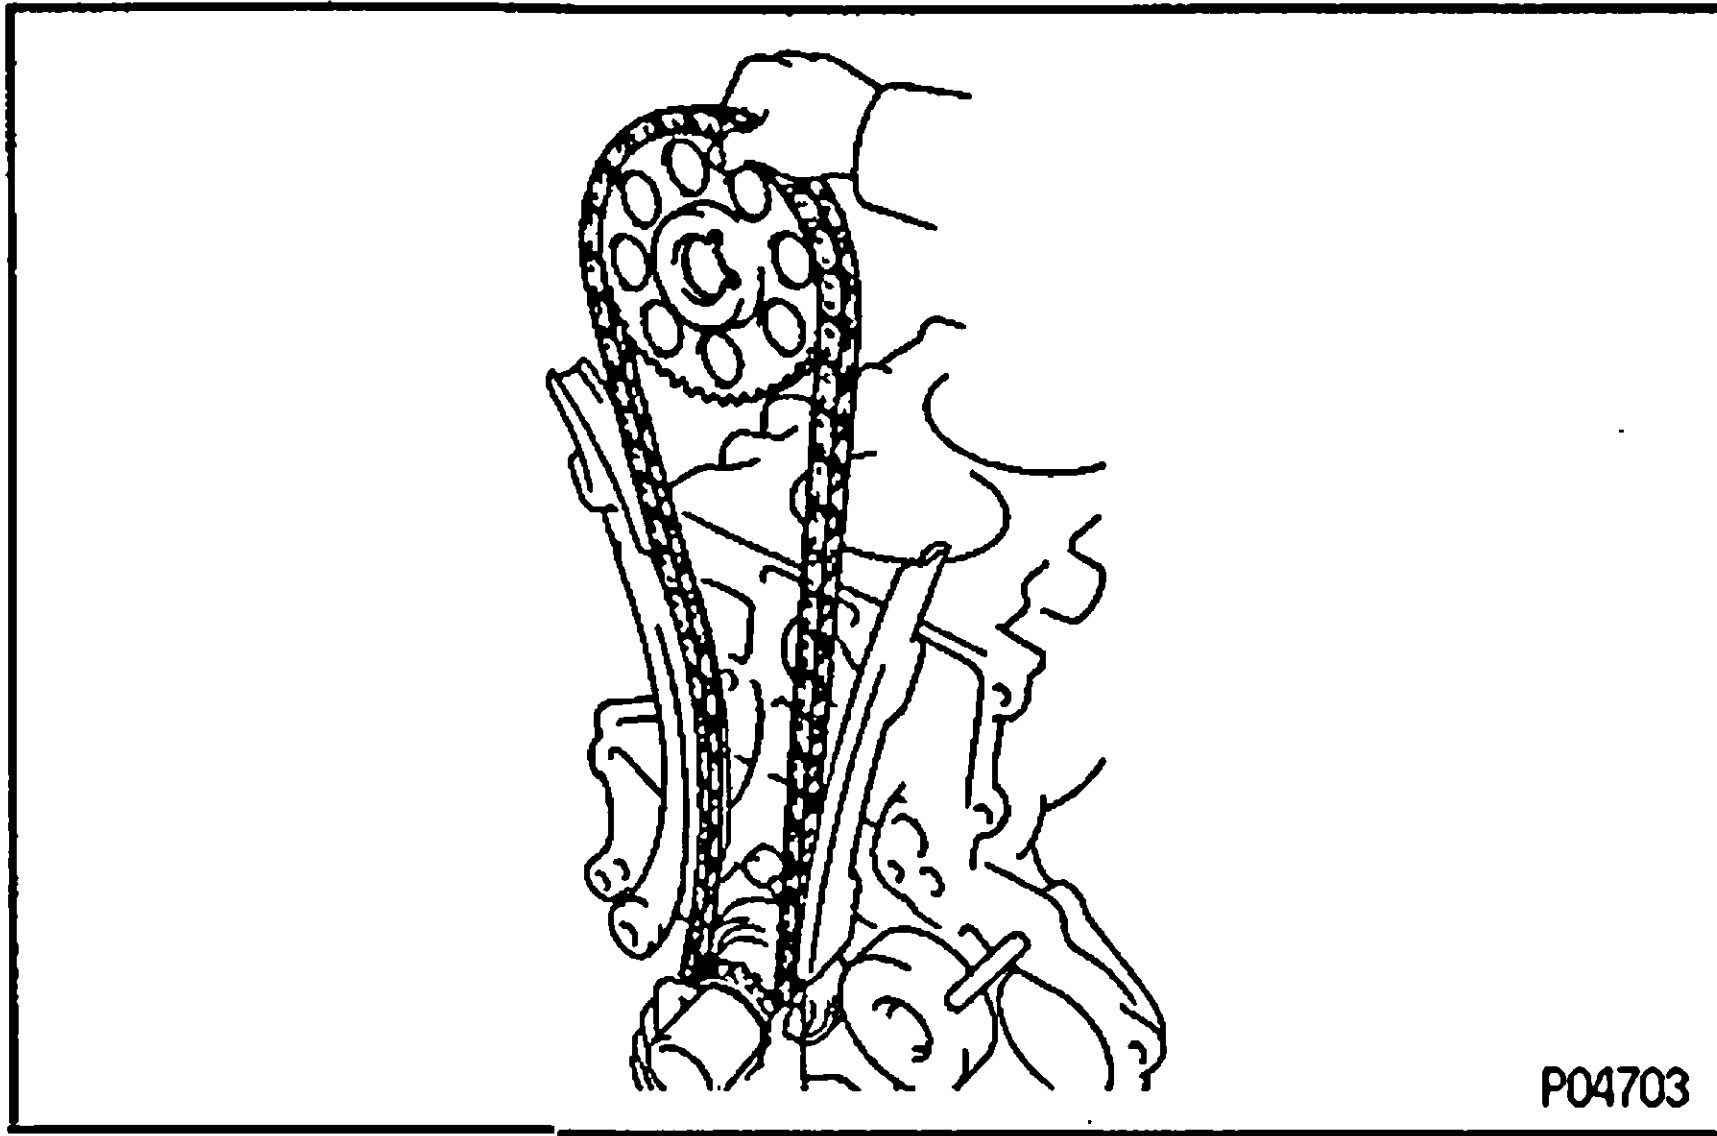


9. REMOVE TIMING CHAIN AND CAMSHAFT TIMING GEAR

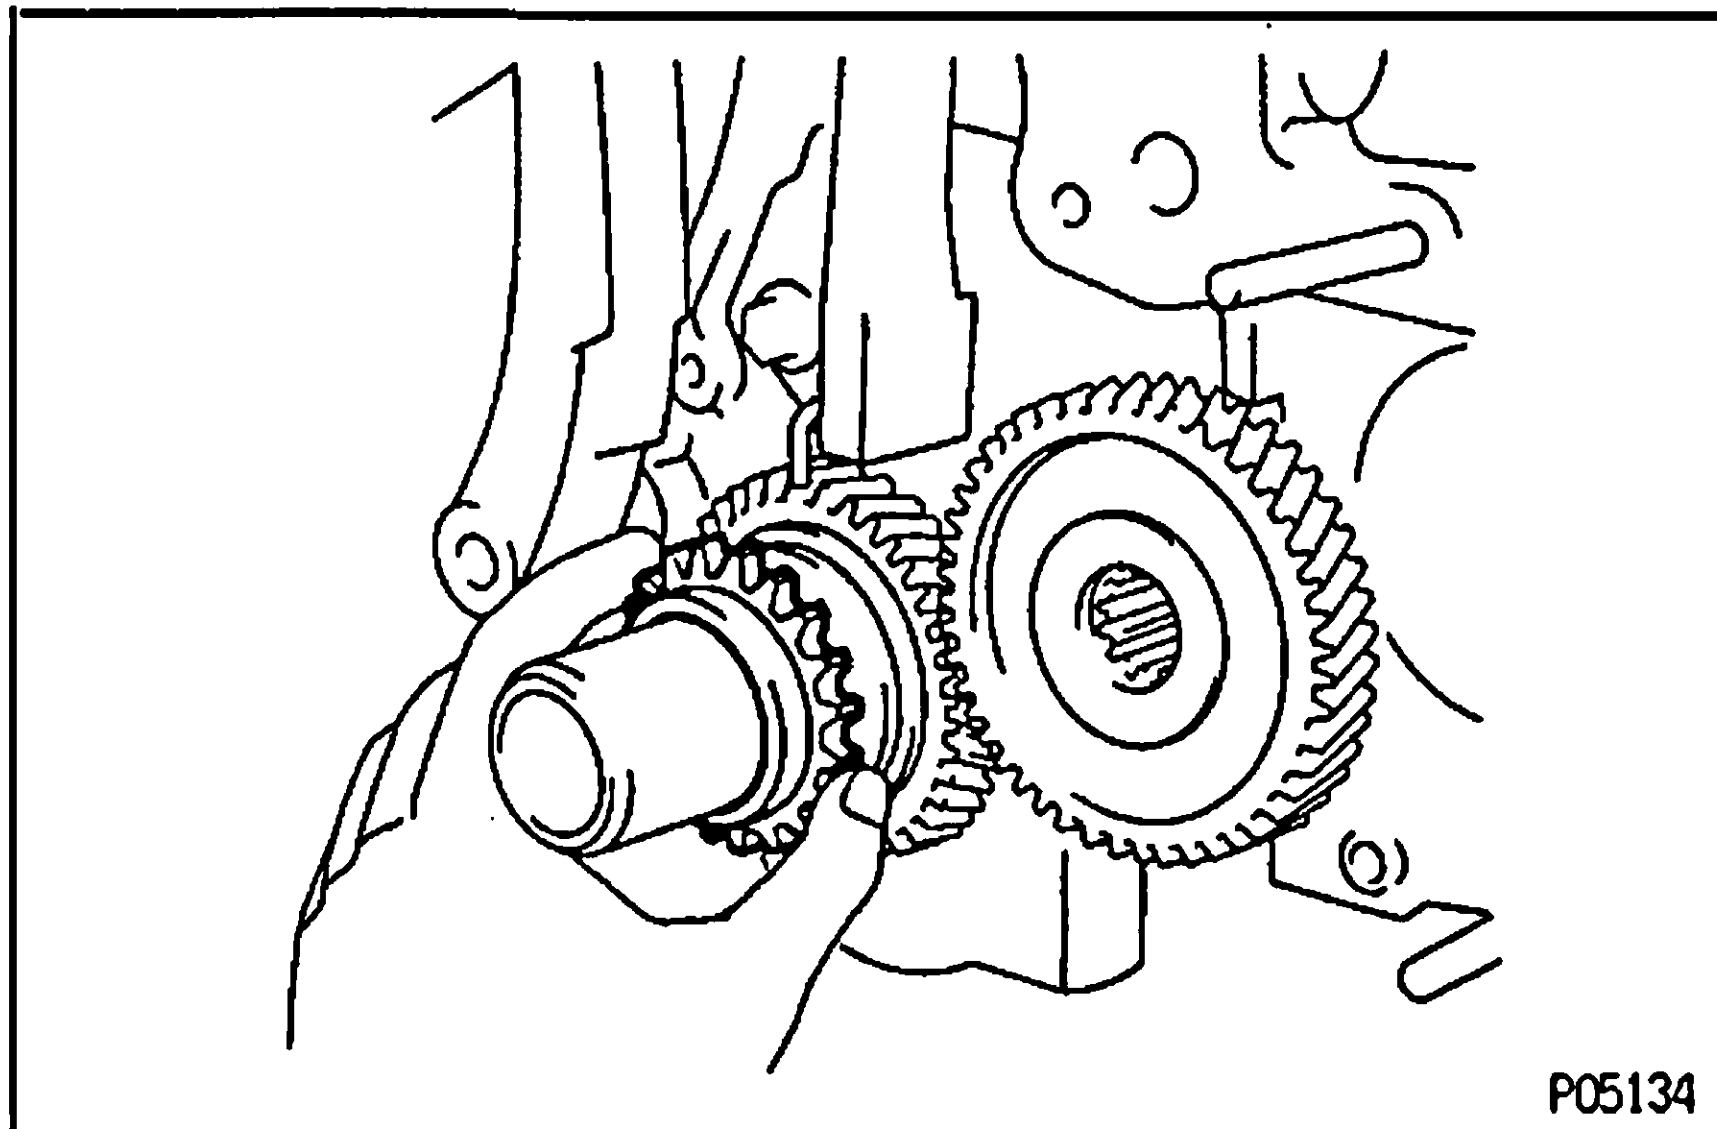

10. REMOVE CRANKSHAFT TIMING GEAR

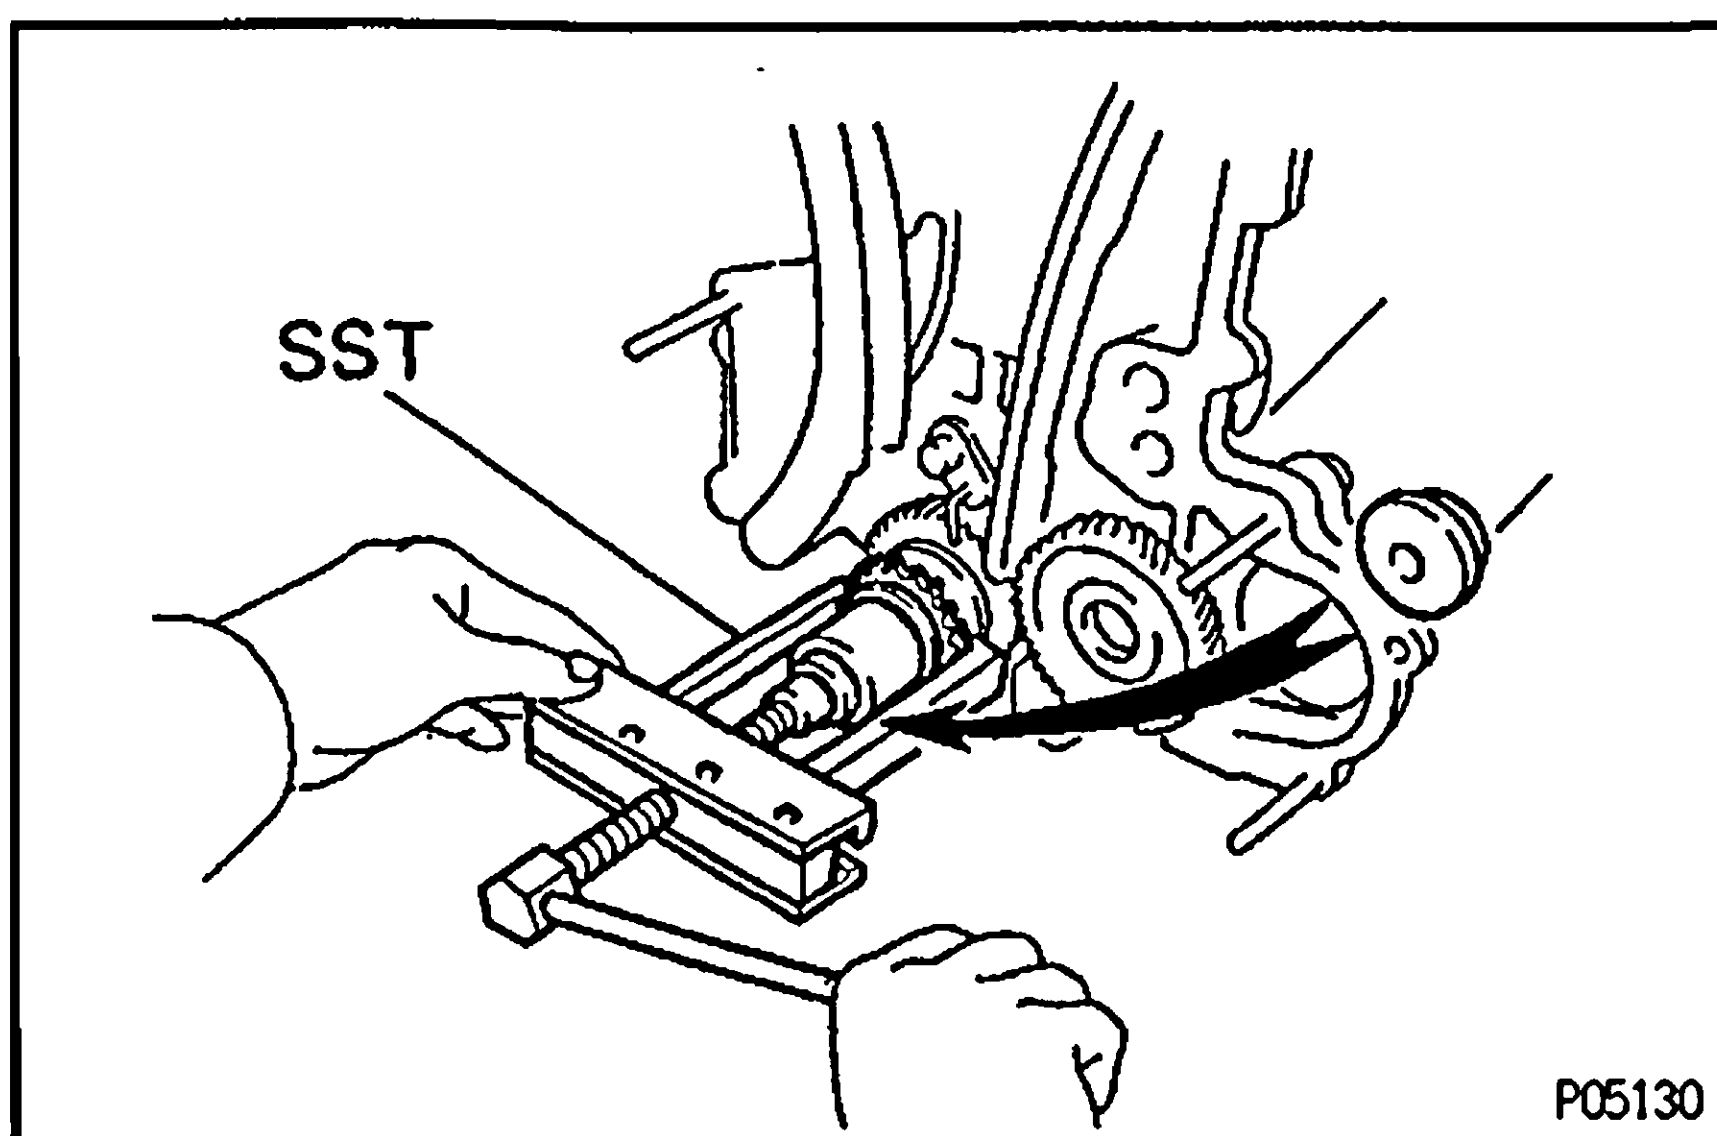


HINT: If necessary, remove the gear with SST.
SST 09213-36020, 09950-20017

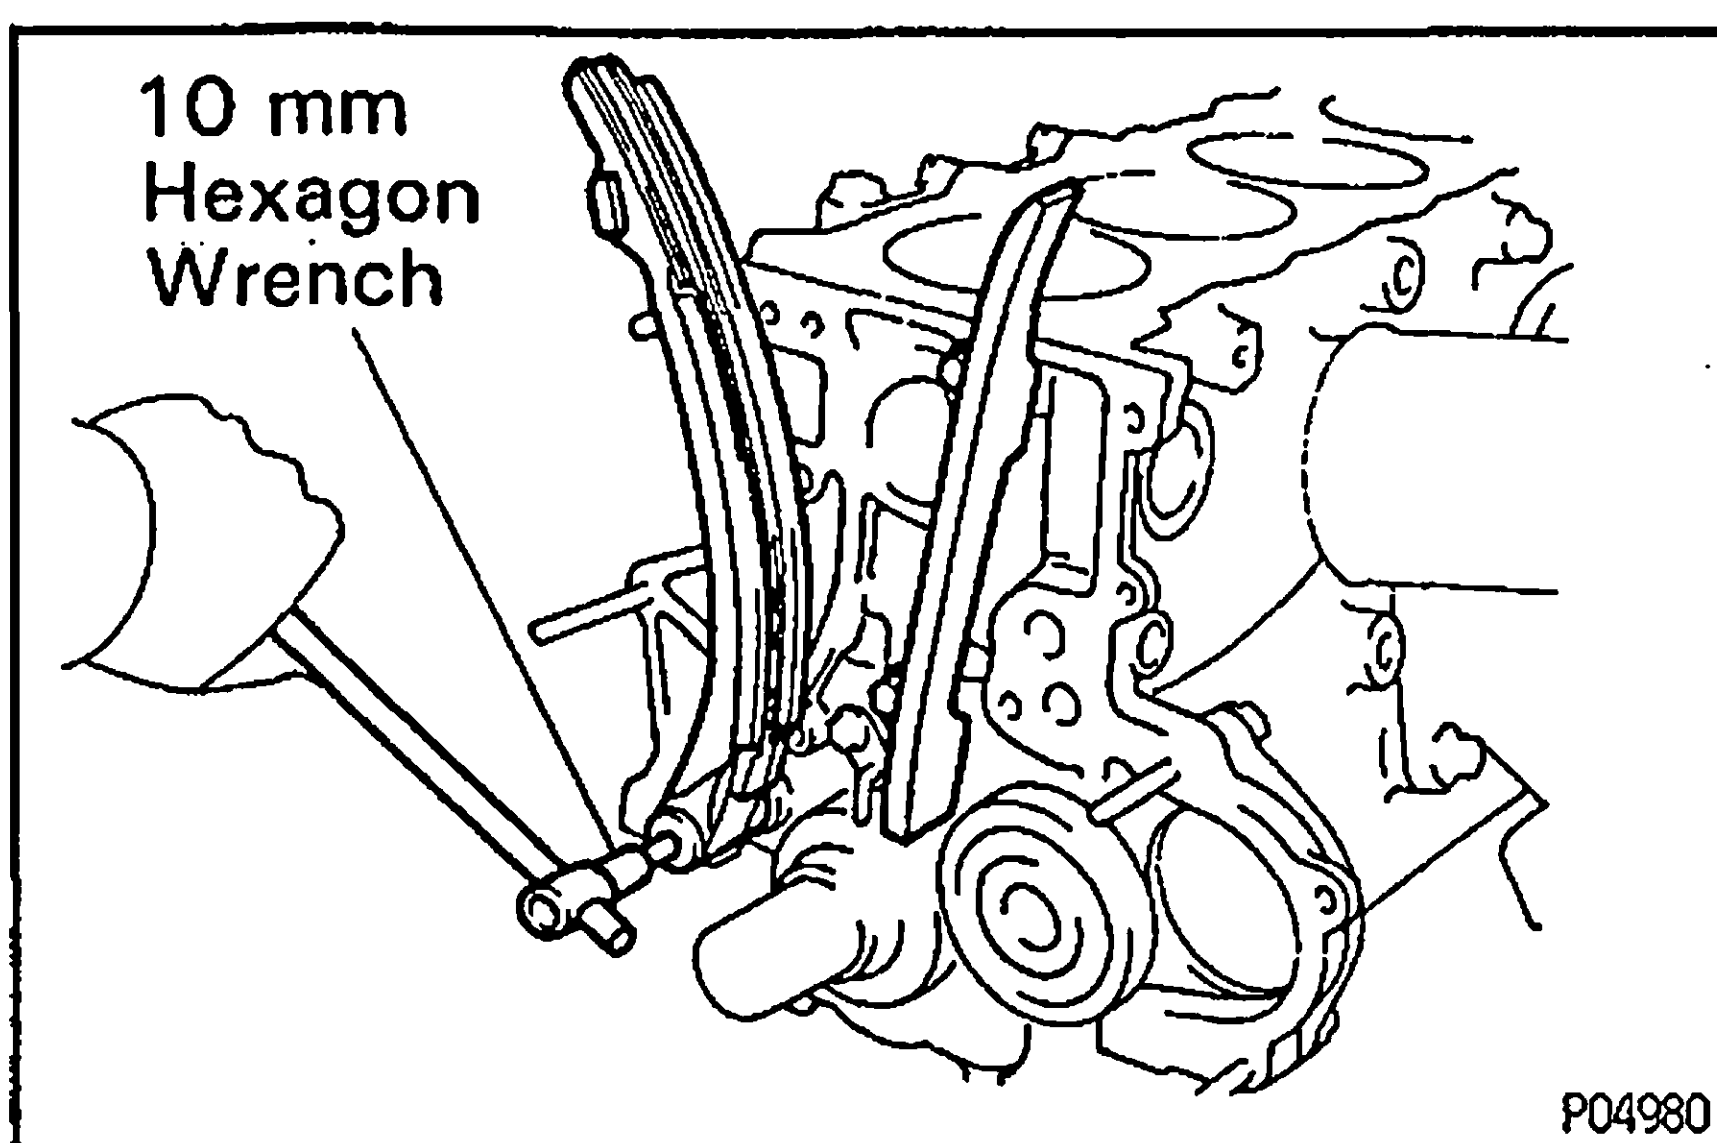


11. REMOVE CHAIN TENSIONER SLIPPER AND VIBRATION DAMPER

- (a) Using a 10mm hexagon wrench, remove the bolt and slipper.
- (b) Remove the two bolts and damper.

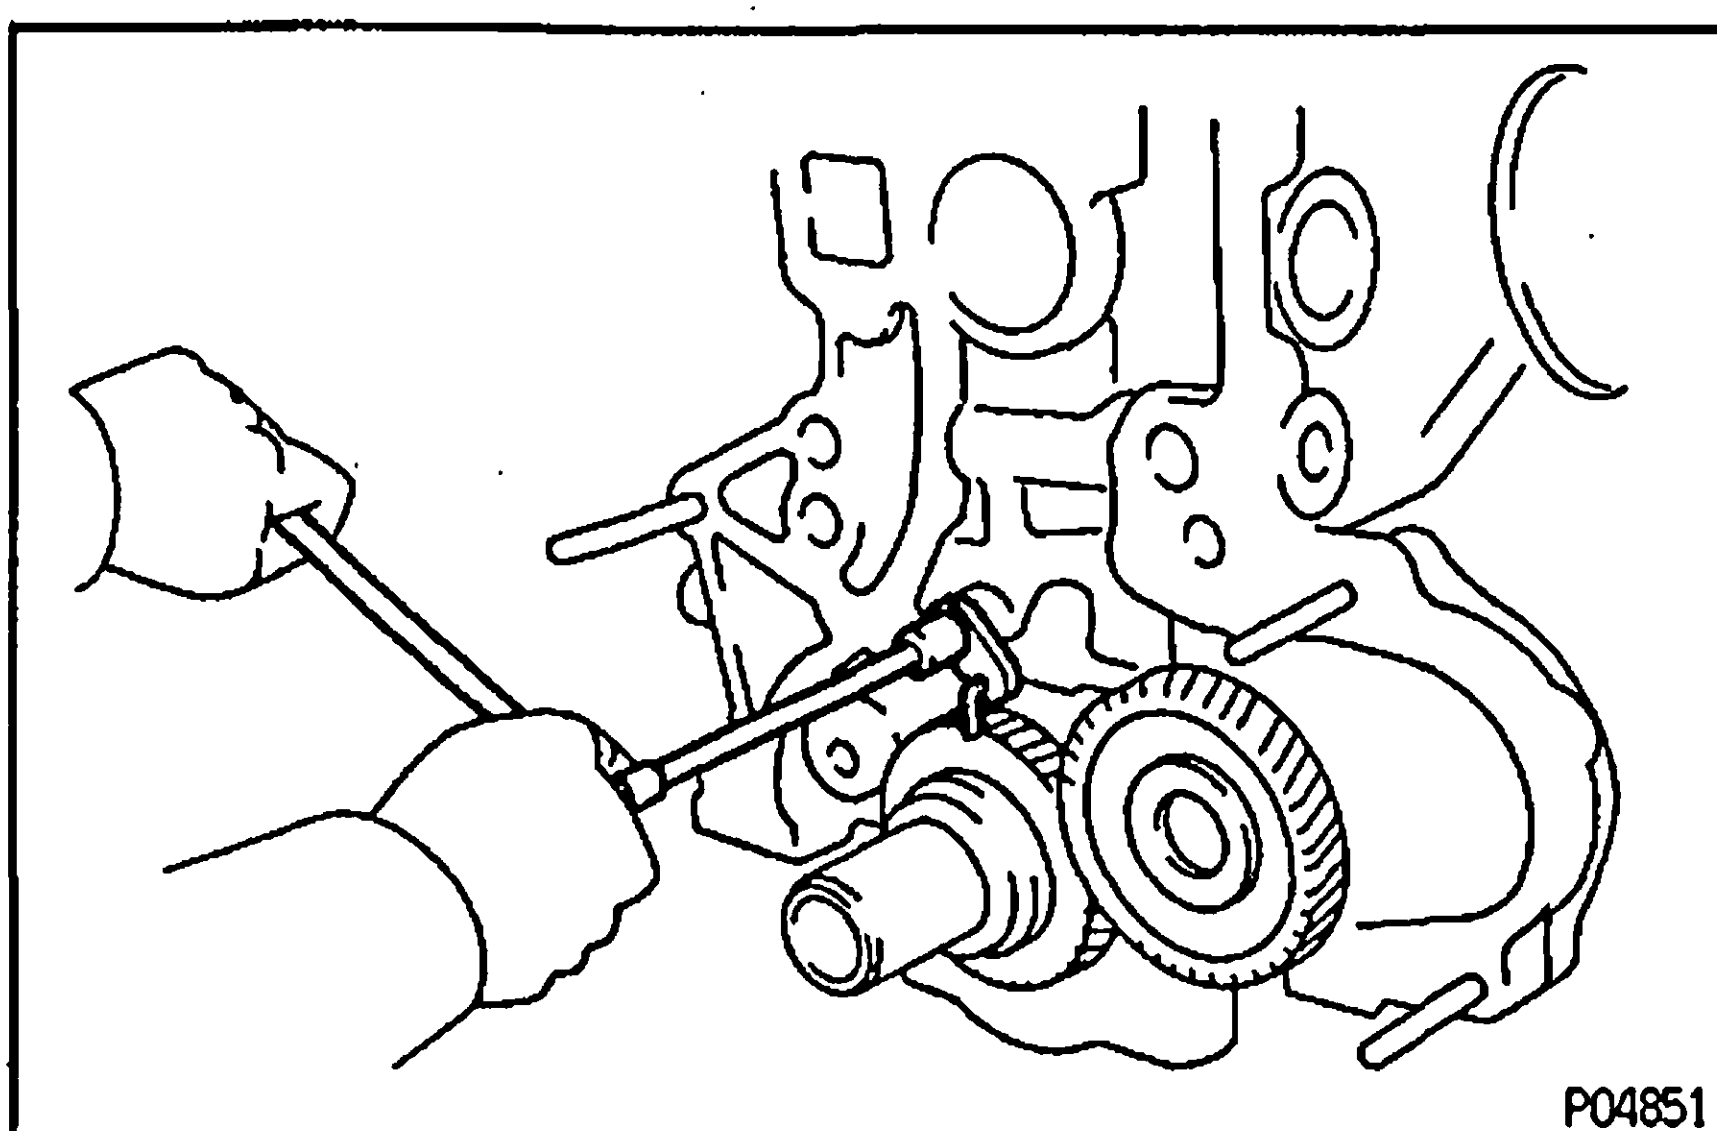


12. REMOVE OIL JET

Remove the bolt and oil jet.


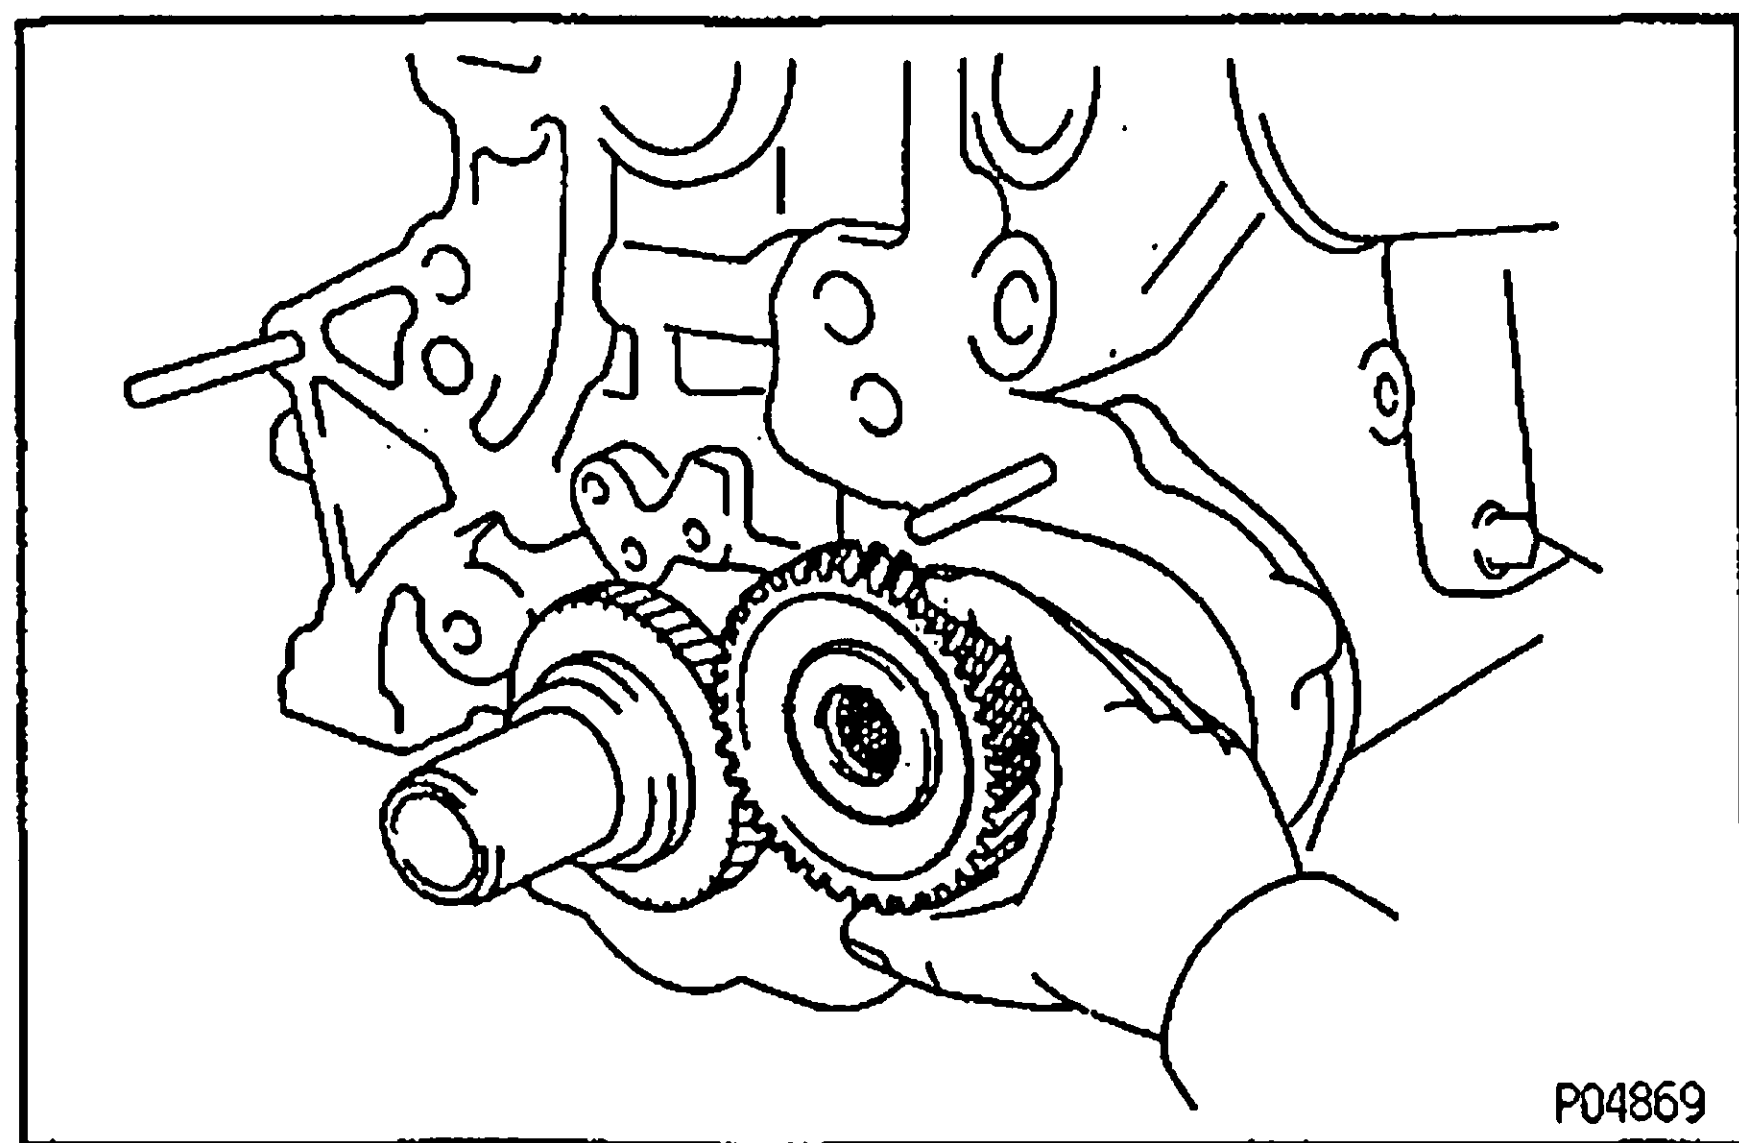
**13. REMOVE OIL PUMP DRIVE SHAFT GEAR**

EG

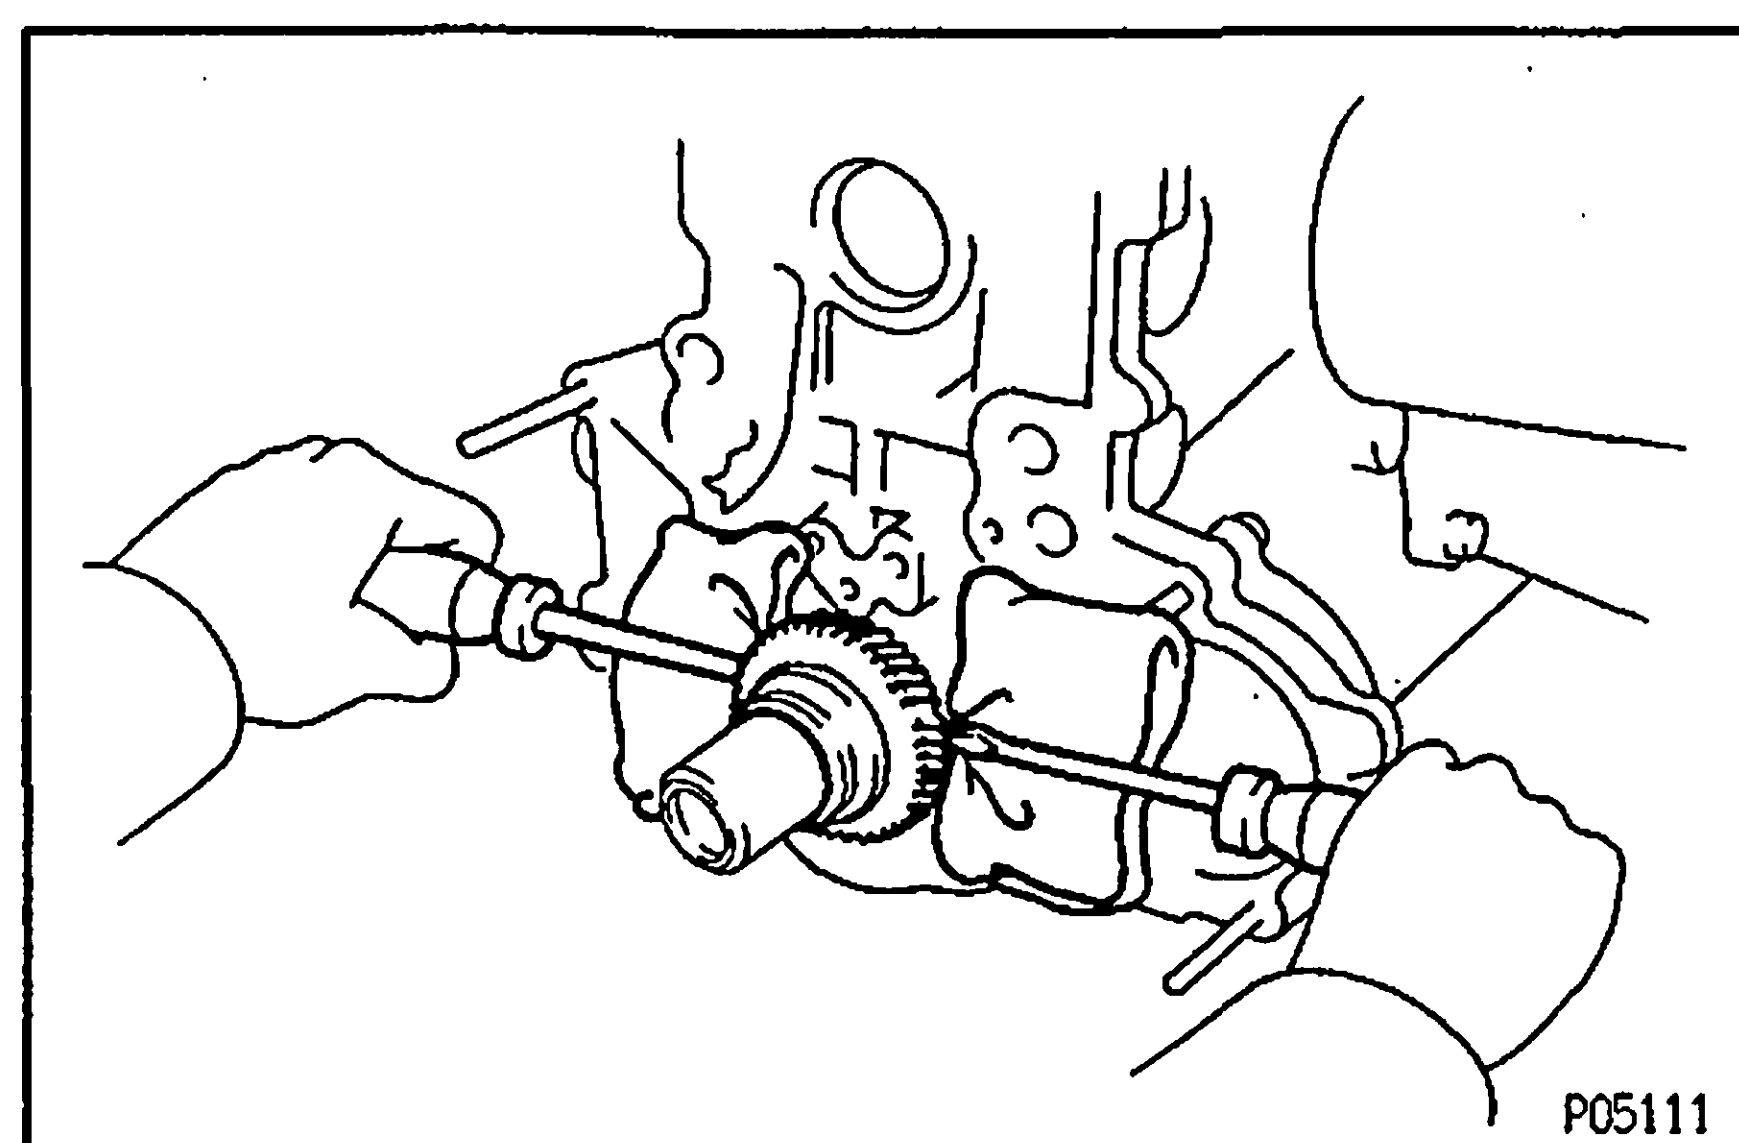**14. REMOVE PUMP DRIVE SHAFT GEAR**

If the pump drive shaft gear cannot be removed by hand, use two screwdrivers.

NOTICE: Position shop rags as shown to prevent damage.

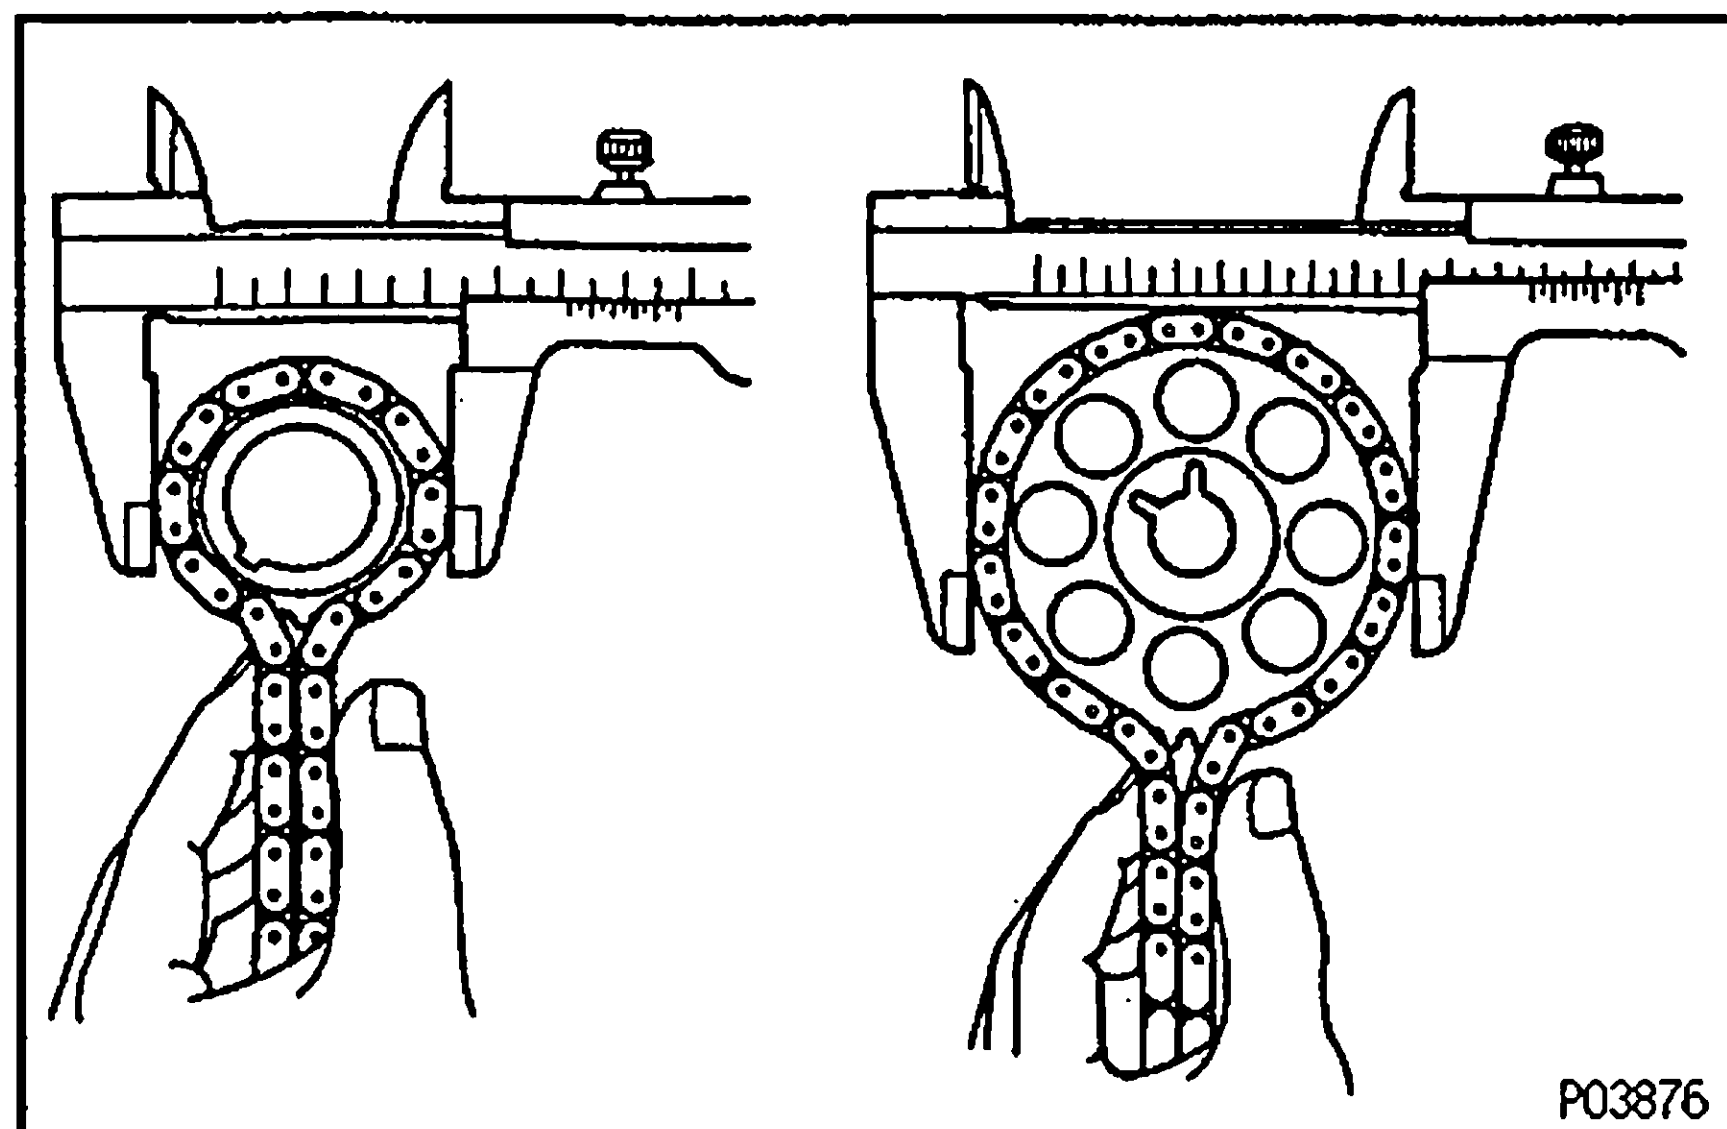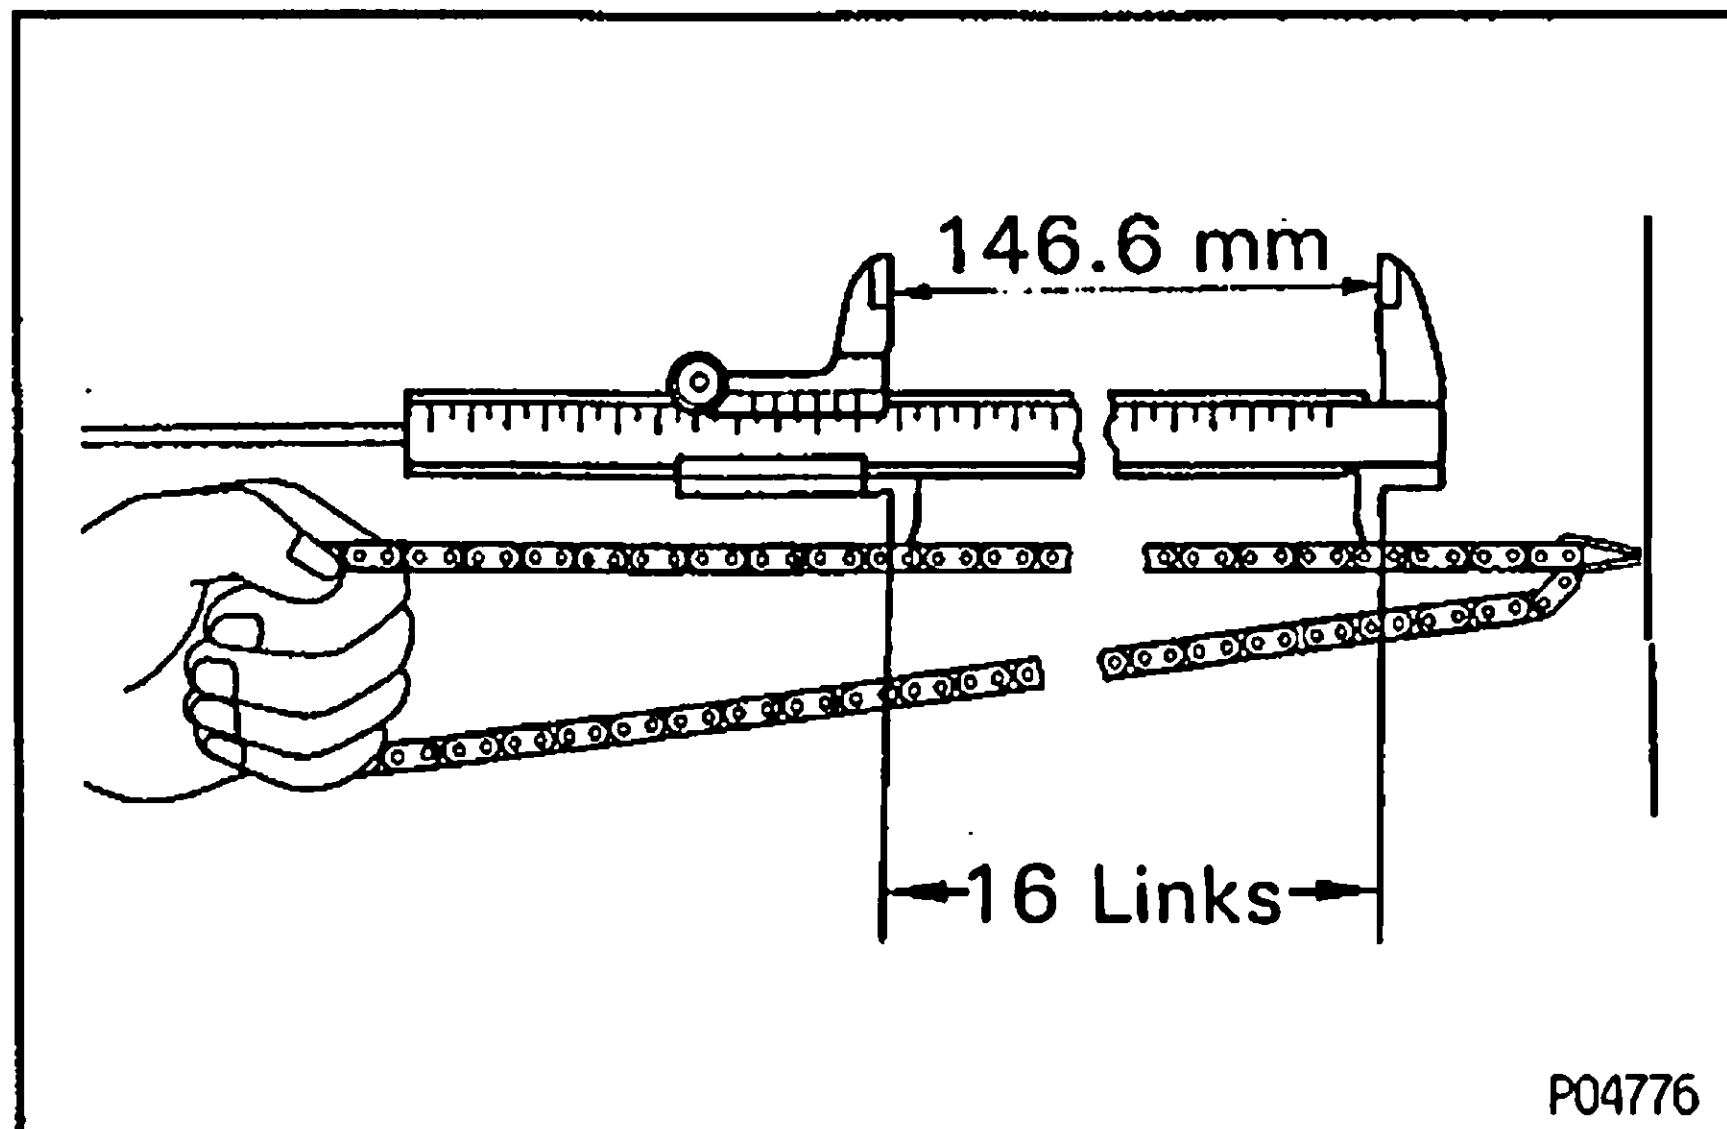

TIMING CHAIN COMPONENTS INSPECTION

1. INSPECT TIMING CHAIN AND TIMING GEARS

- (a) Measure the length of 16 links with the chain fully stretched.

Maximum chain elongation:

146.6 mm (5.772 in.)

If the elongation is greater than maximum, replace the chain.

HINT: Make the same measurements pulling at three or more places selected at random.

- (b) Warp the chain around the timing gear.
(c) Using vernier calipers, measure the timing gear diameter with the chain.

NOTICE: Vernier calipers must contact the chain rollers for measuring.

Minimum gear diameter (w/chain):


Crankshaft

126.0 mm (4.961 in.)

Camshaft

65.4 mm (2.575 in.)

If the diameter is less than minimum, replace the chain and gears.

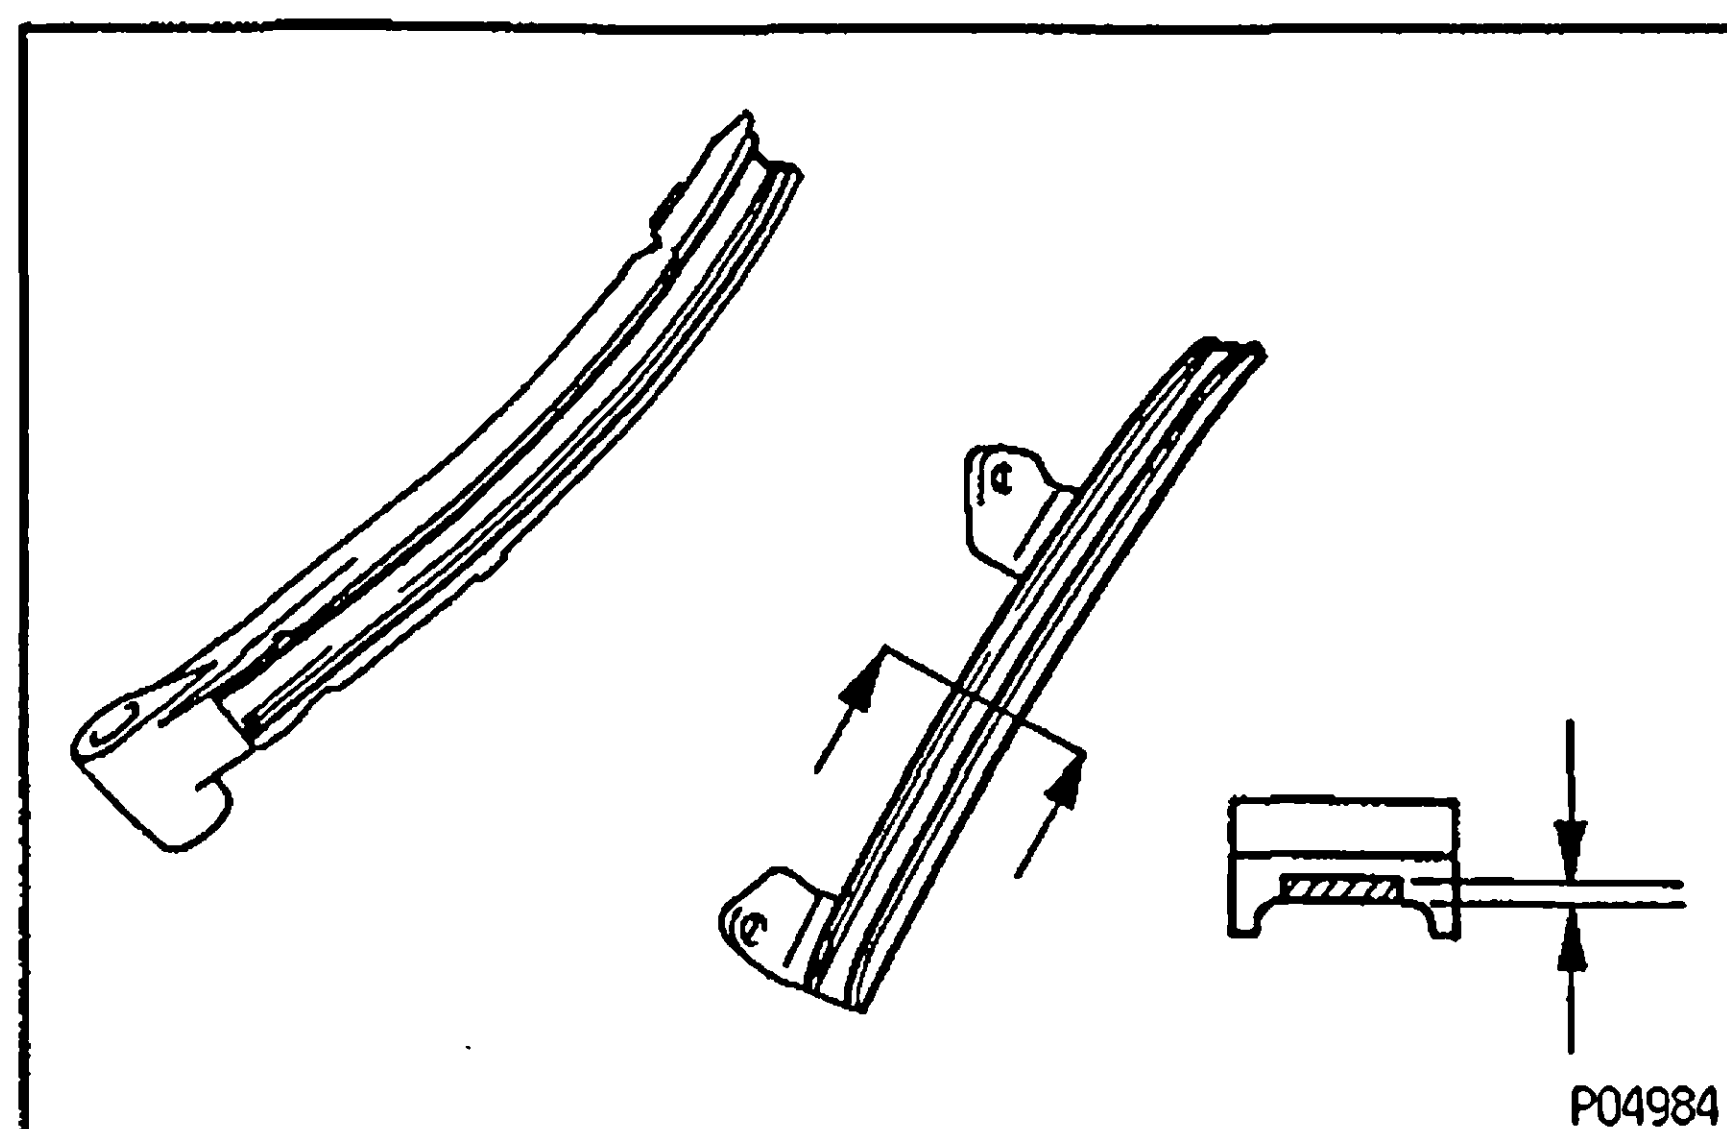


2. INSPECT CHAIN TENSIONER SLIPPER AND VIBRATION DAMPER

Measure the chain tensioner slipper and vibration damper wears.

Maximum wear:

1.0 mm (0.039 in.)

If the wear is greater than maximum, replace the slipper and/or damper.

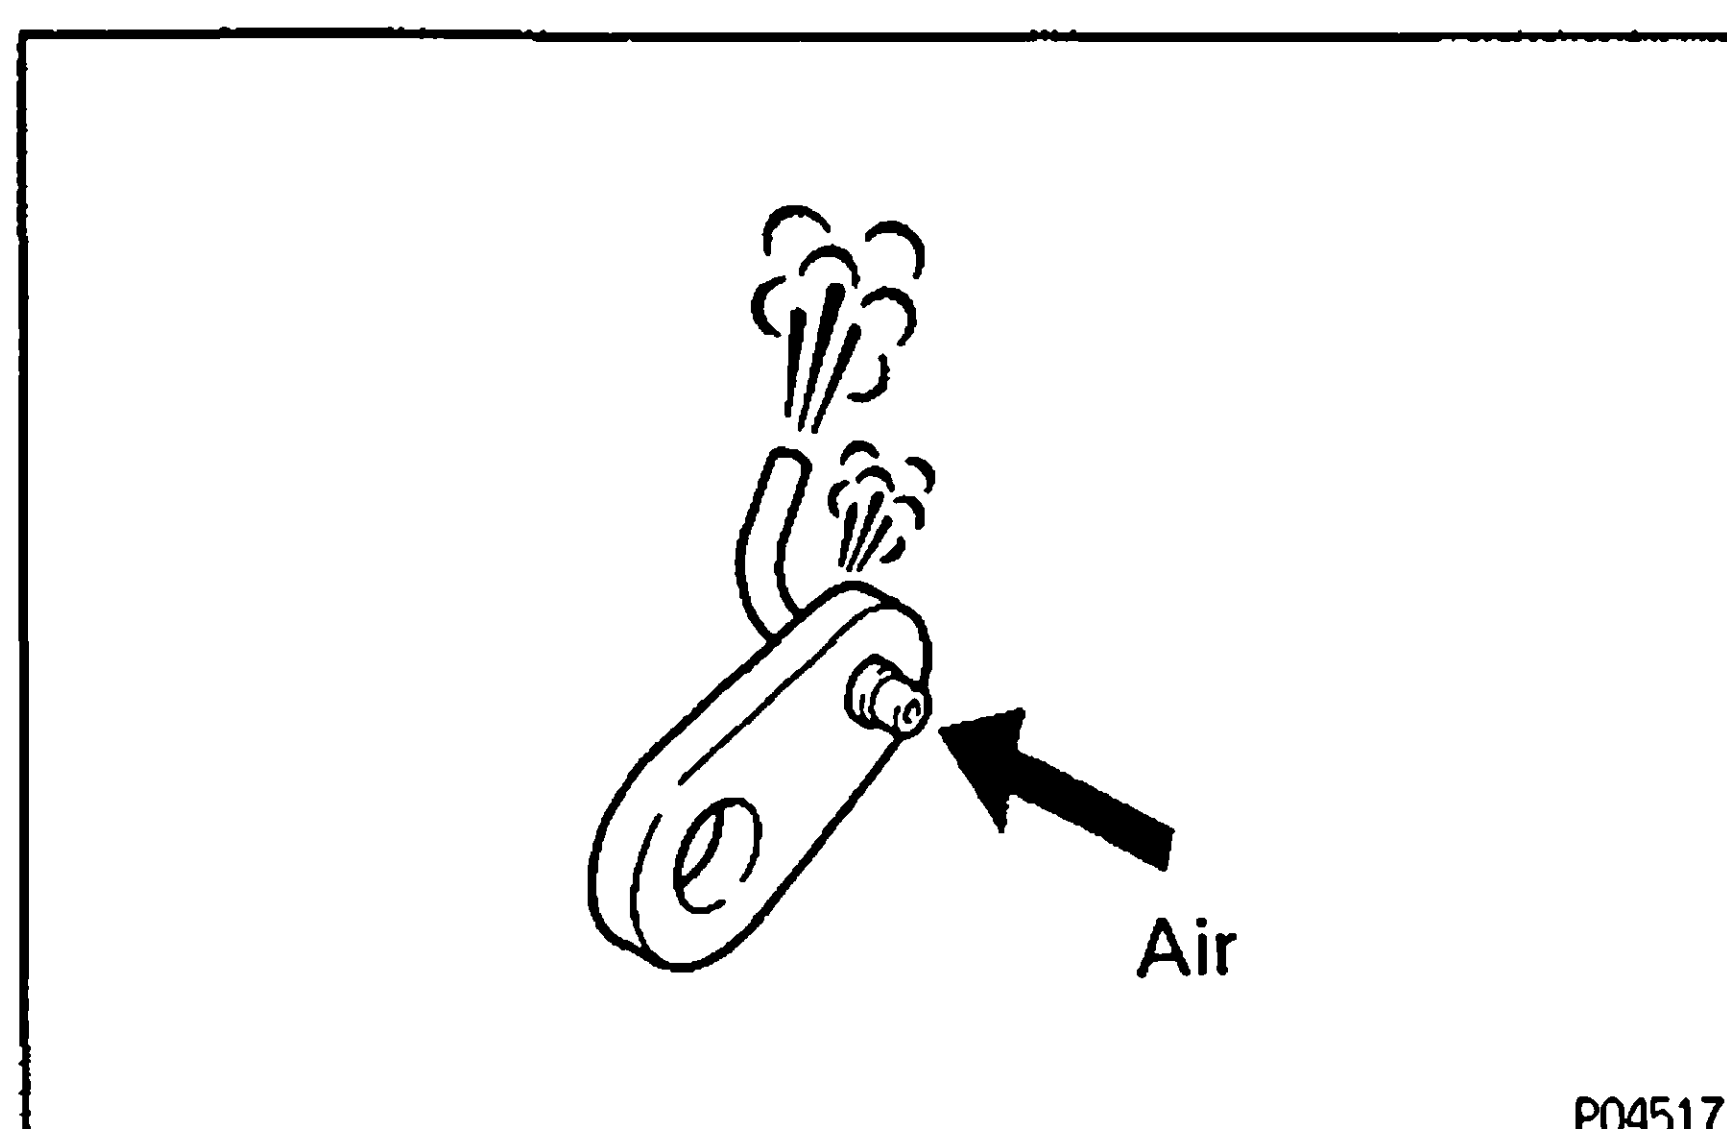

3. INSPECT OIL JET


Check the oil jet for damage or clogging.

If necessary, replace the oil jet.

CRANKSHAFT FRONT OIL SEAL REPLACEMENT

HINT: There are two methods (A and B) to replace the oil seal which are as follows:


EG

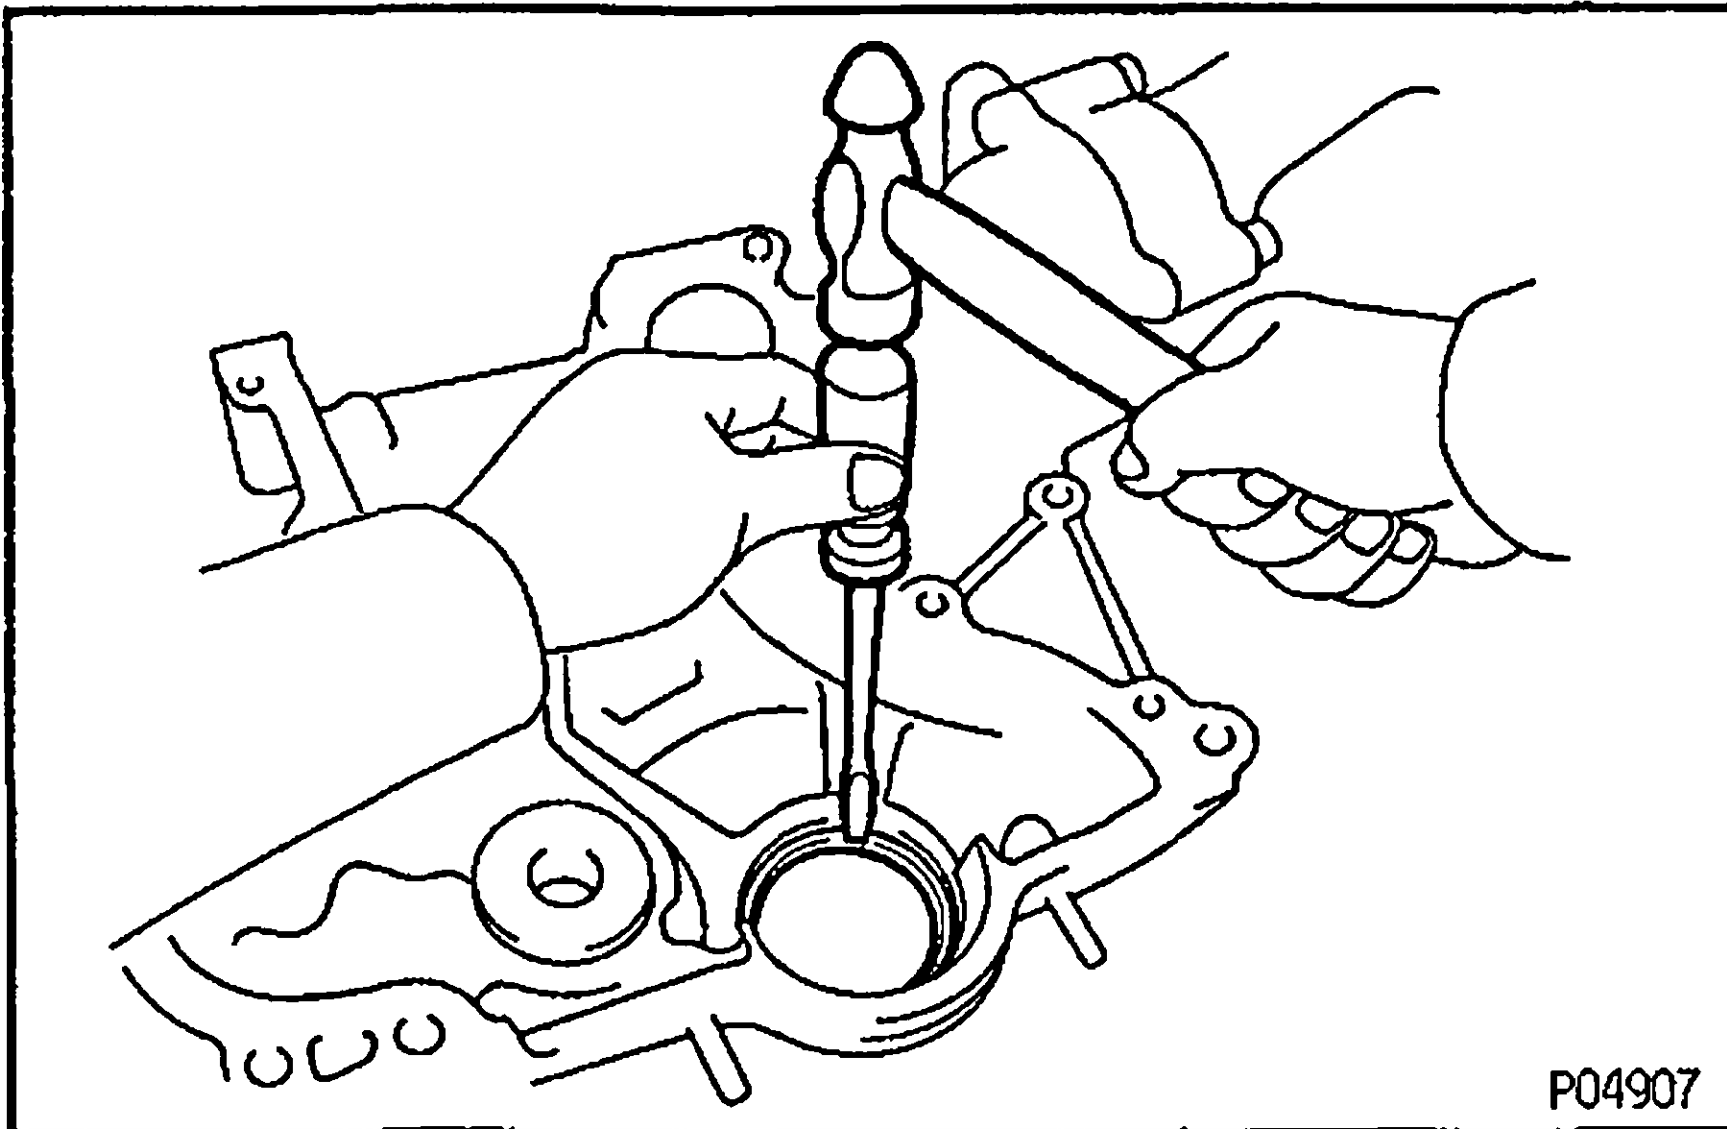

REPLACE CRANKSHAFT FRONT OIL SEAL

A. If timing chain cover is removed from cylinder block:


- (a) Using a screwdriver, pry out the oil seal.

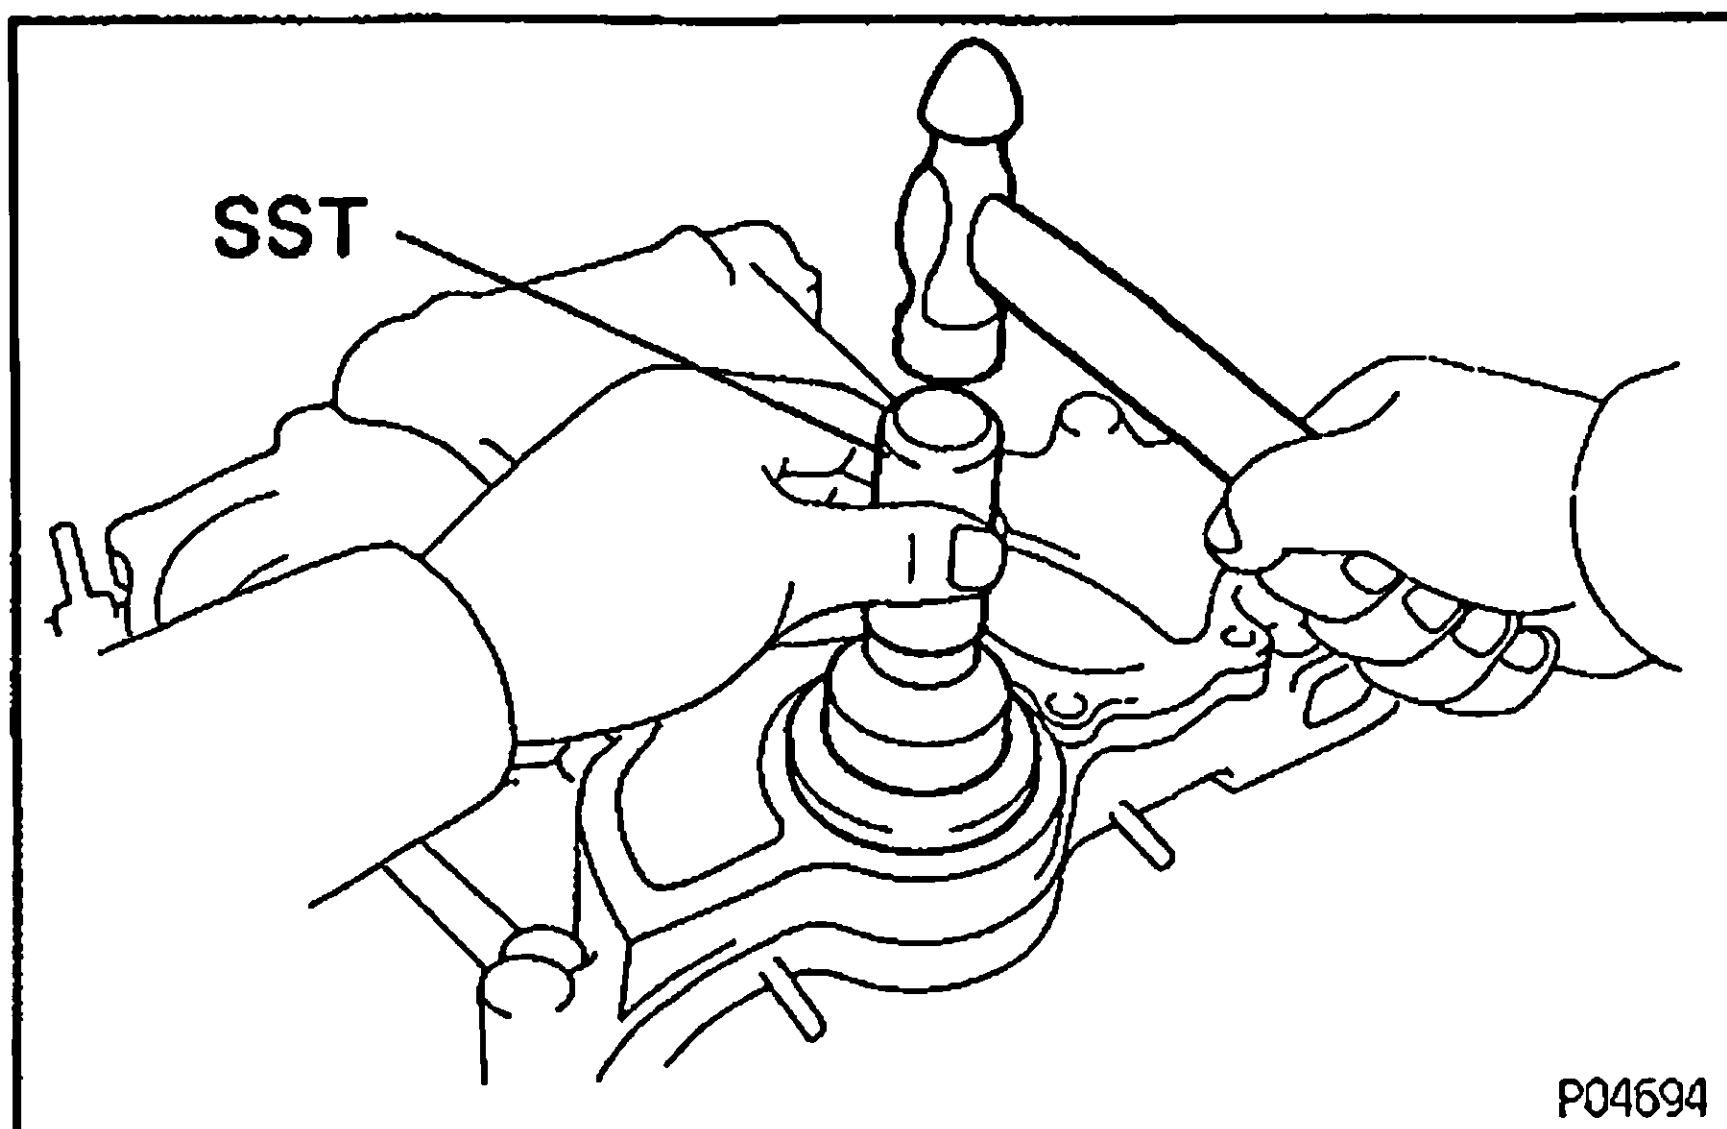

- (b) Using SST and a hammer, tap in a new oil seal until its surface is flush with the timing chain cover edge.

SST 09923-46011


- (c) Apply MP grease to the oil seal lip.

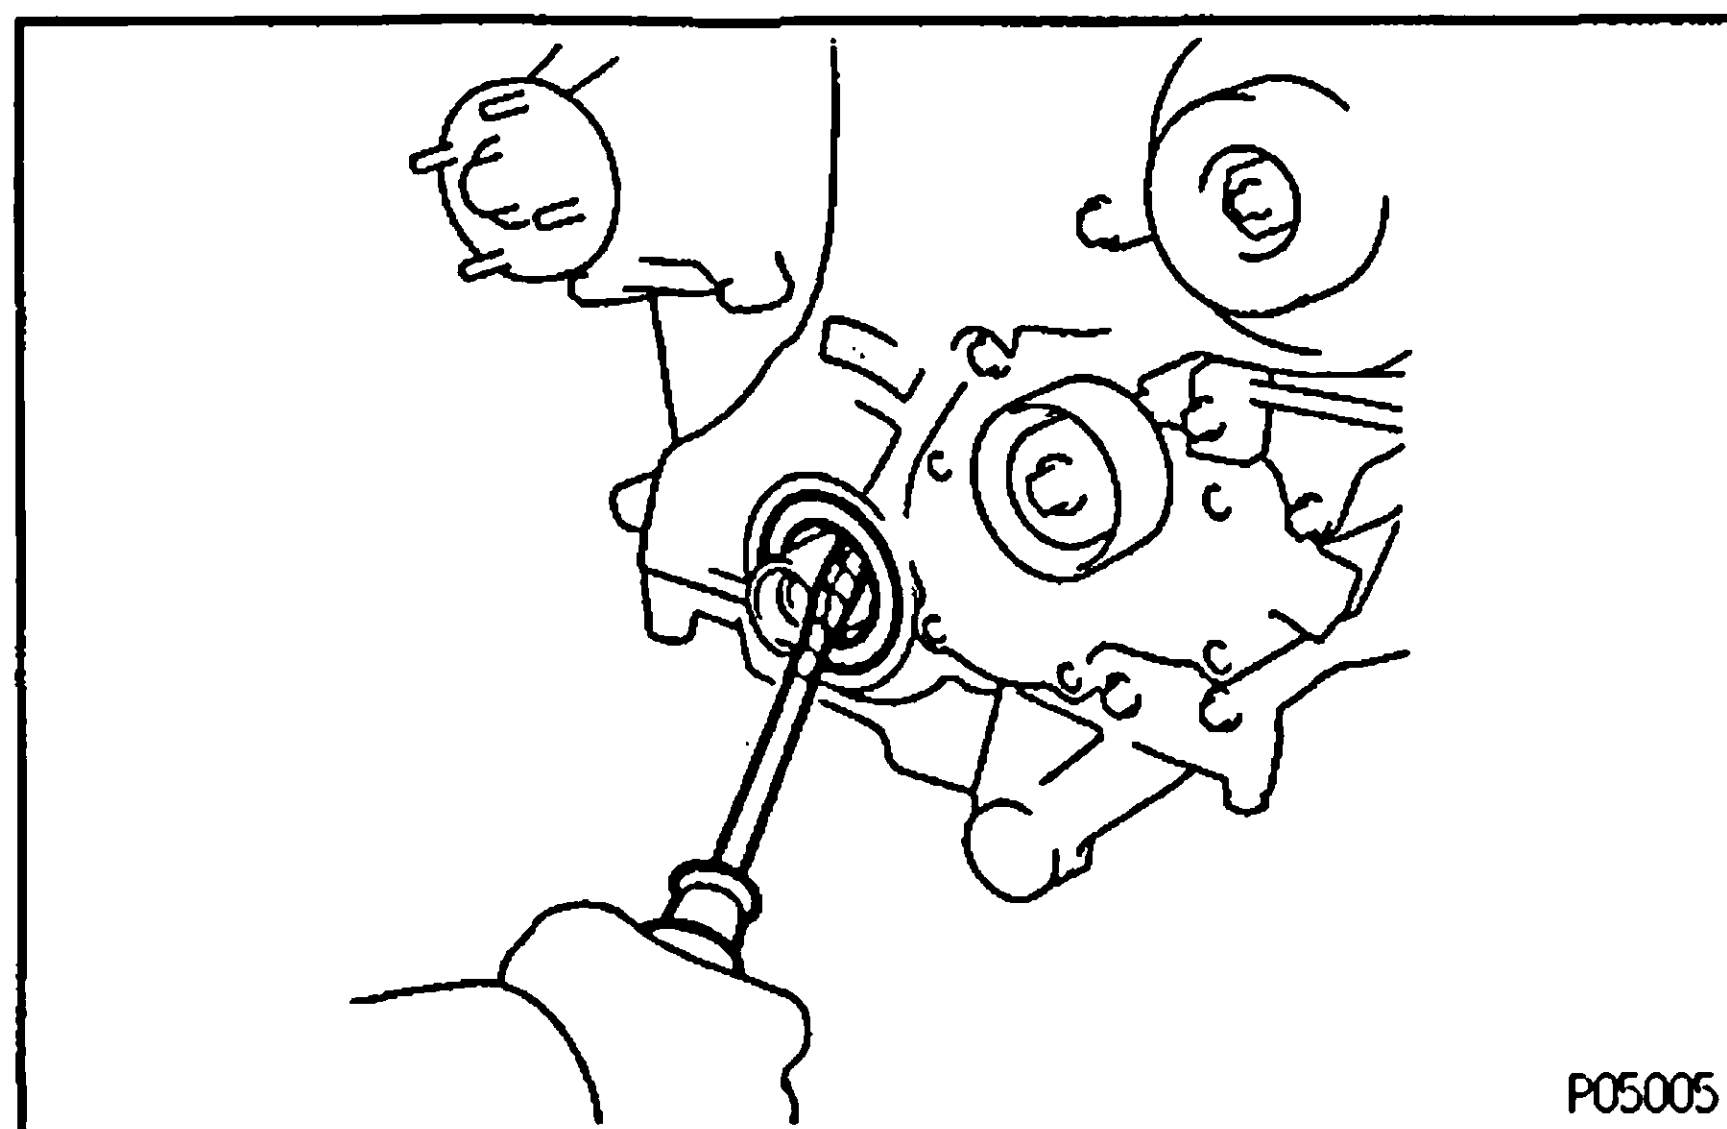

B. If timing chain cover is installed to the cylinder block:

- (a) Using a screwdriver, pry out the oil seal.


NOTICE: Be careful not to damage the crankshaft. Tape the screwdriver tip.

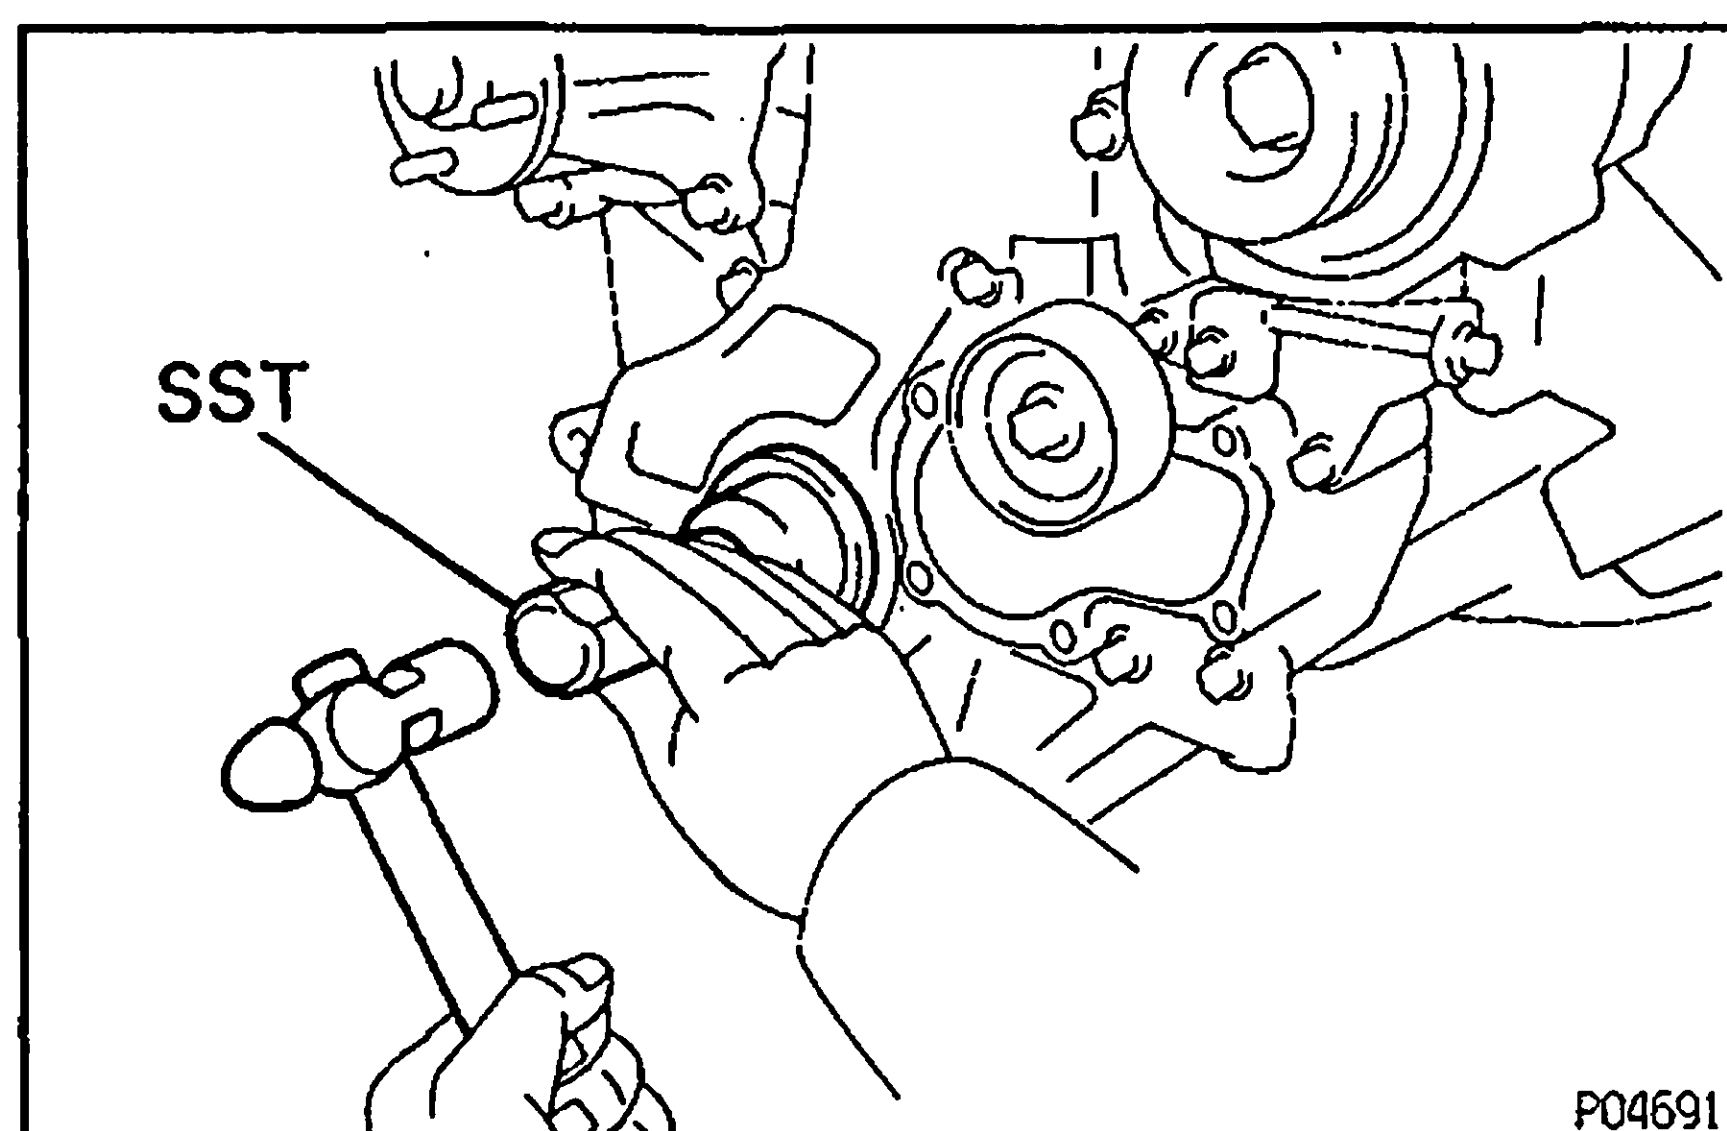

- (b) Apply MP grease to a new oil seal lip.

- (c) Using SST and a hammer, tap in the oil seal until its surface is flush with the timing chain cover edge.

SST 09223-46011

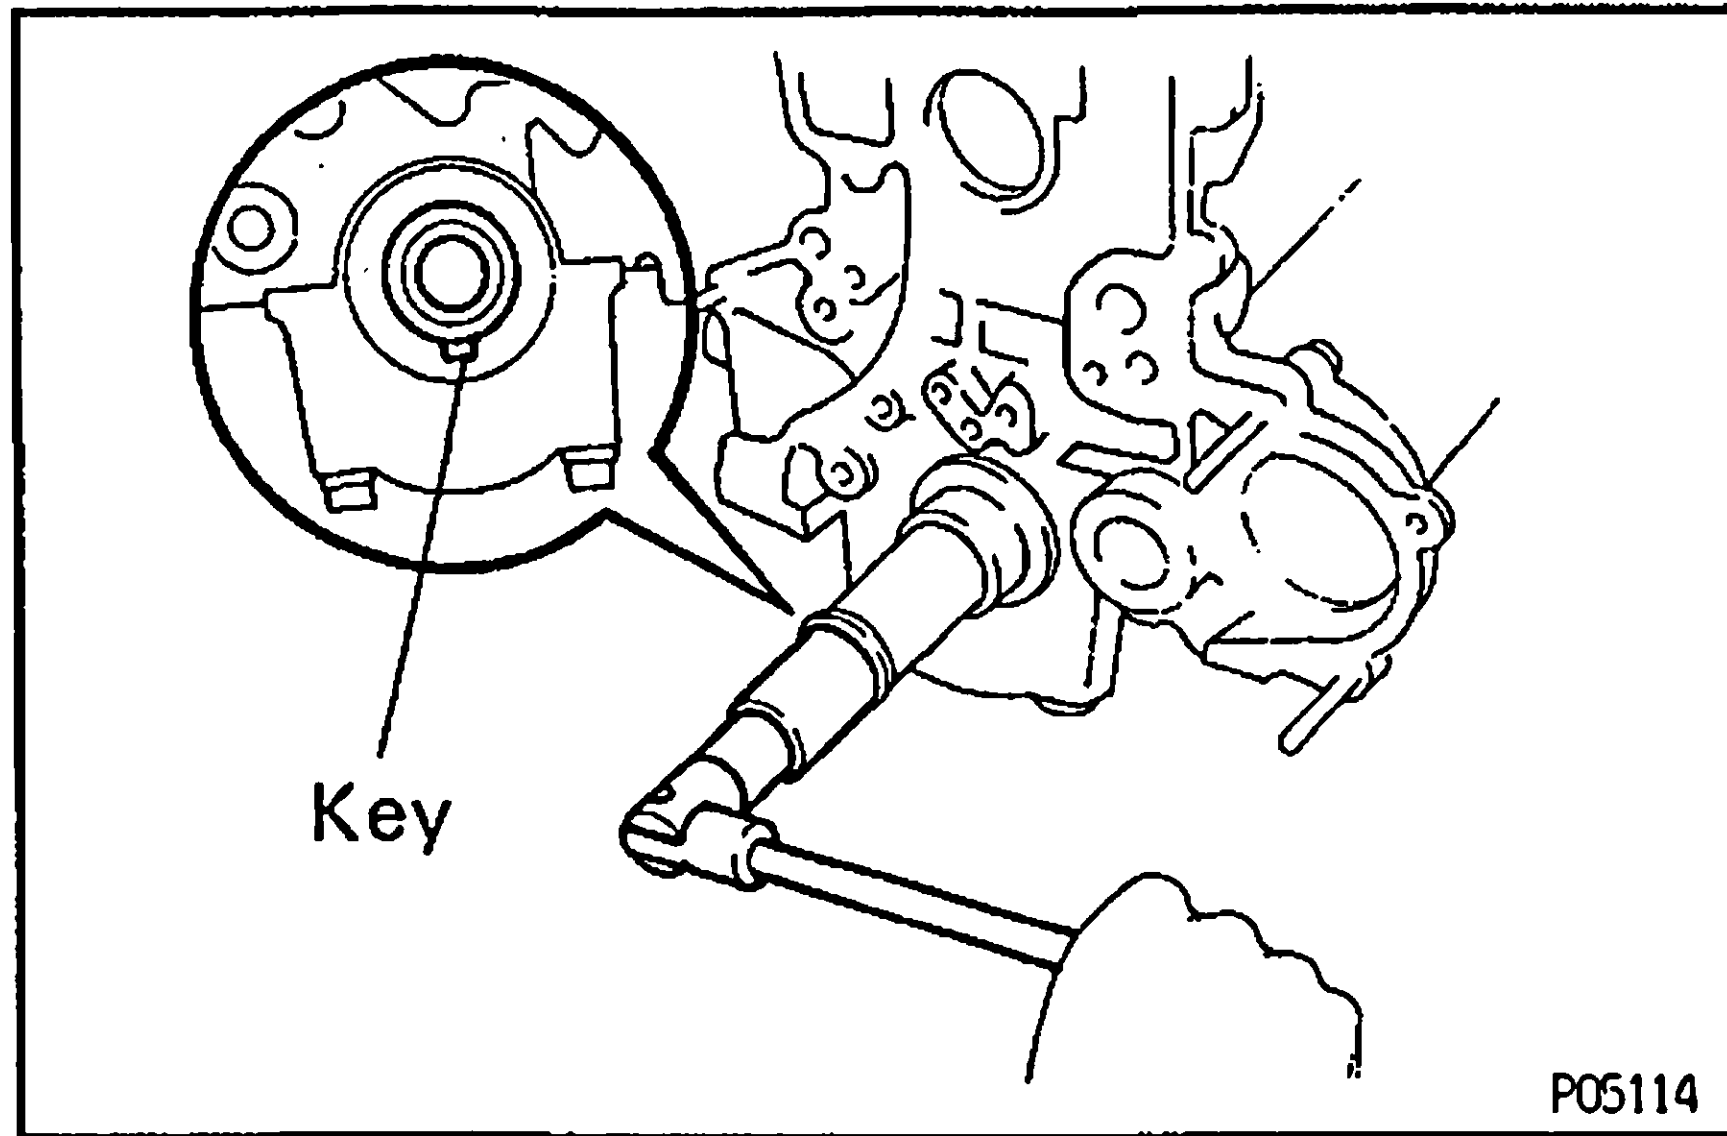


TIMING CHAIN INSTALLATION


(See page EG-74)

1. SET CRANKSHAFT

Turn the crankshaft until the set key on crankshaft facing downward.

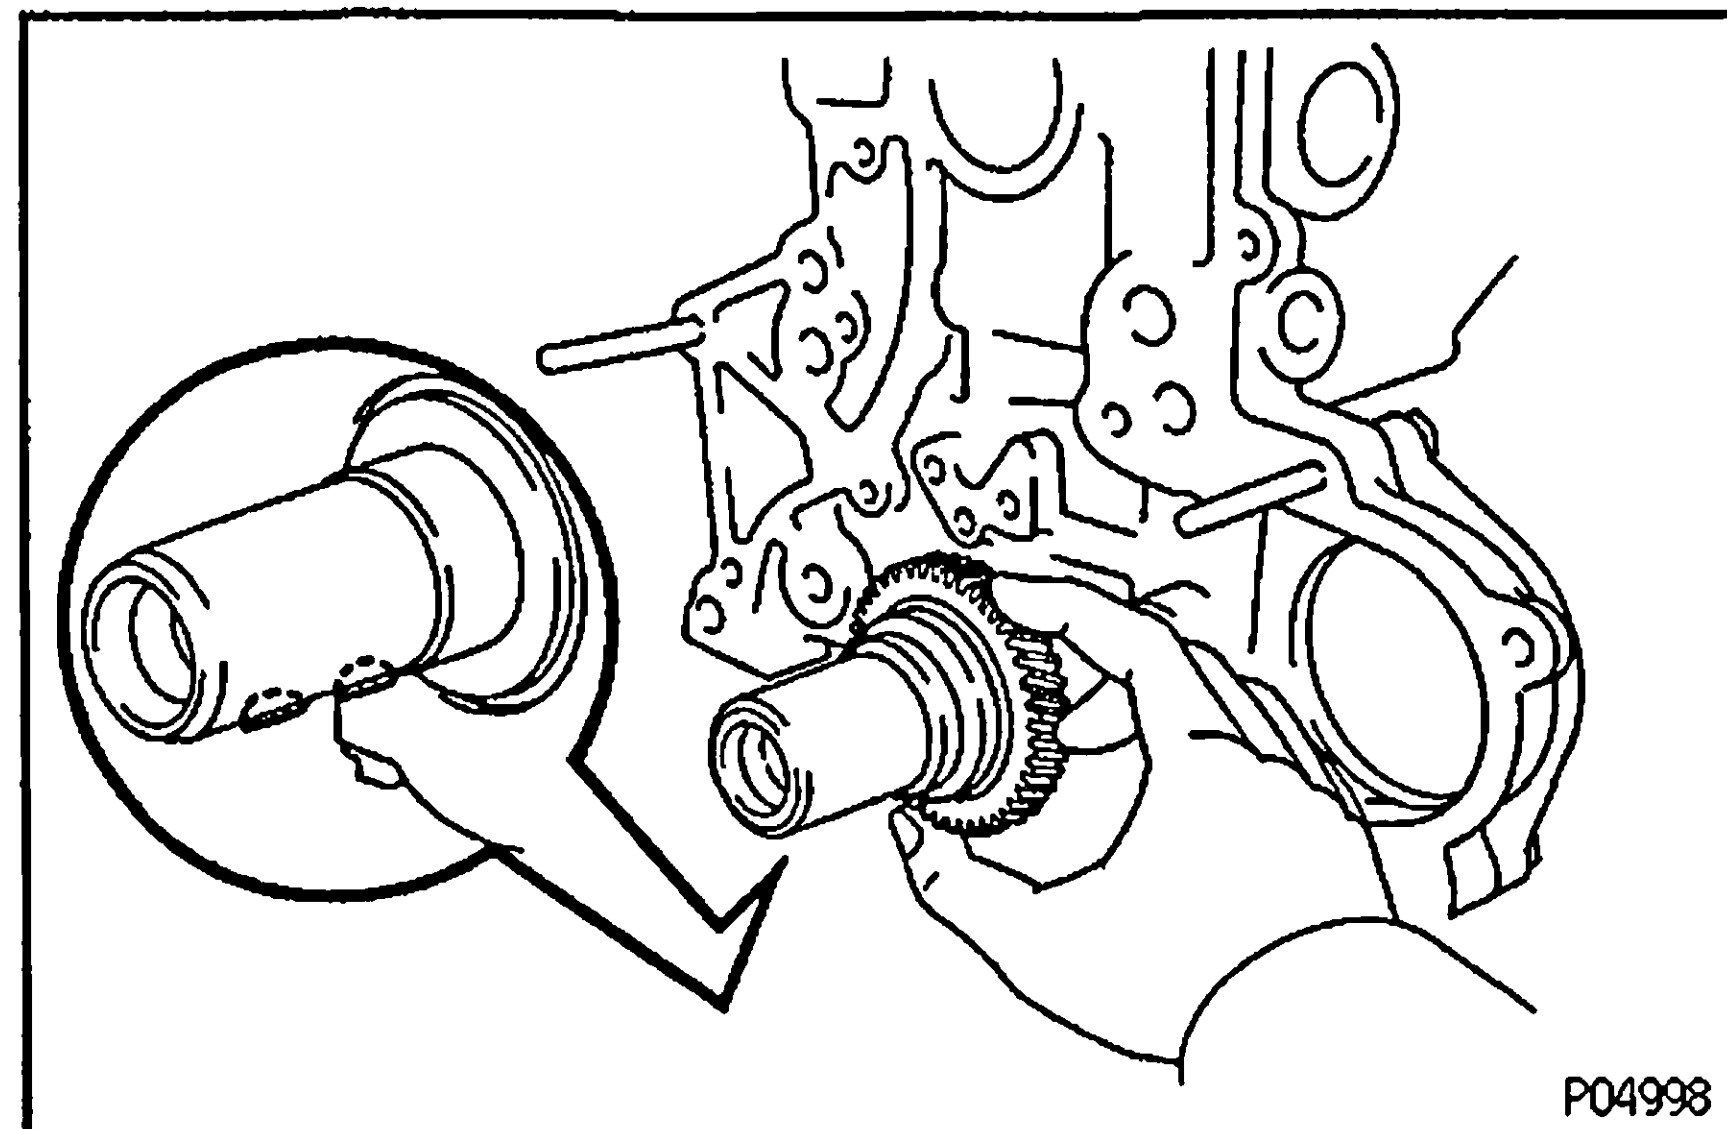


2. INSTALL PUMP DRIVE SHAFT GEAR

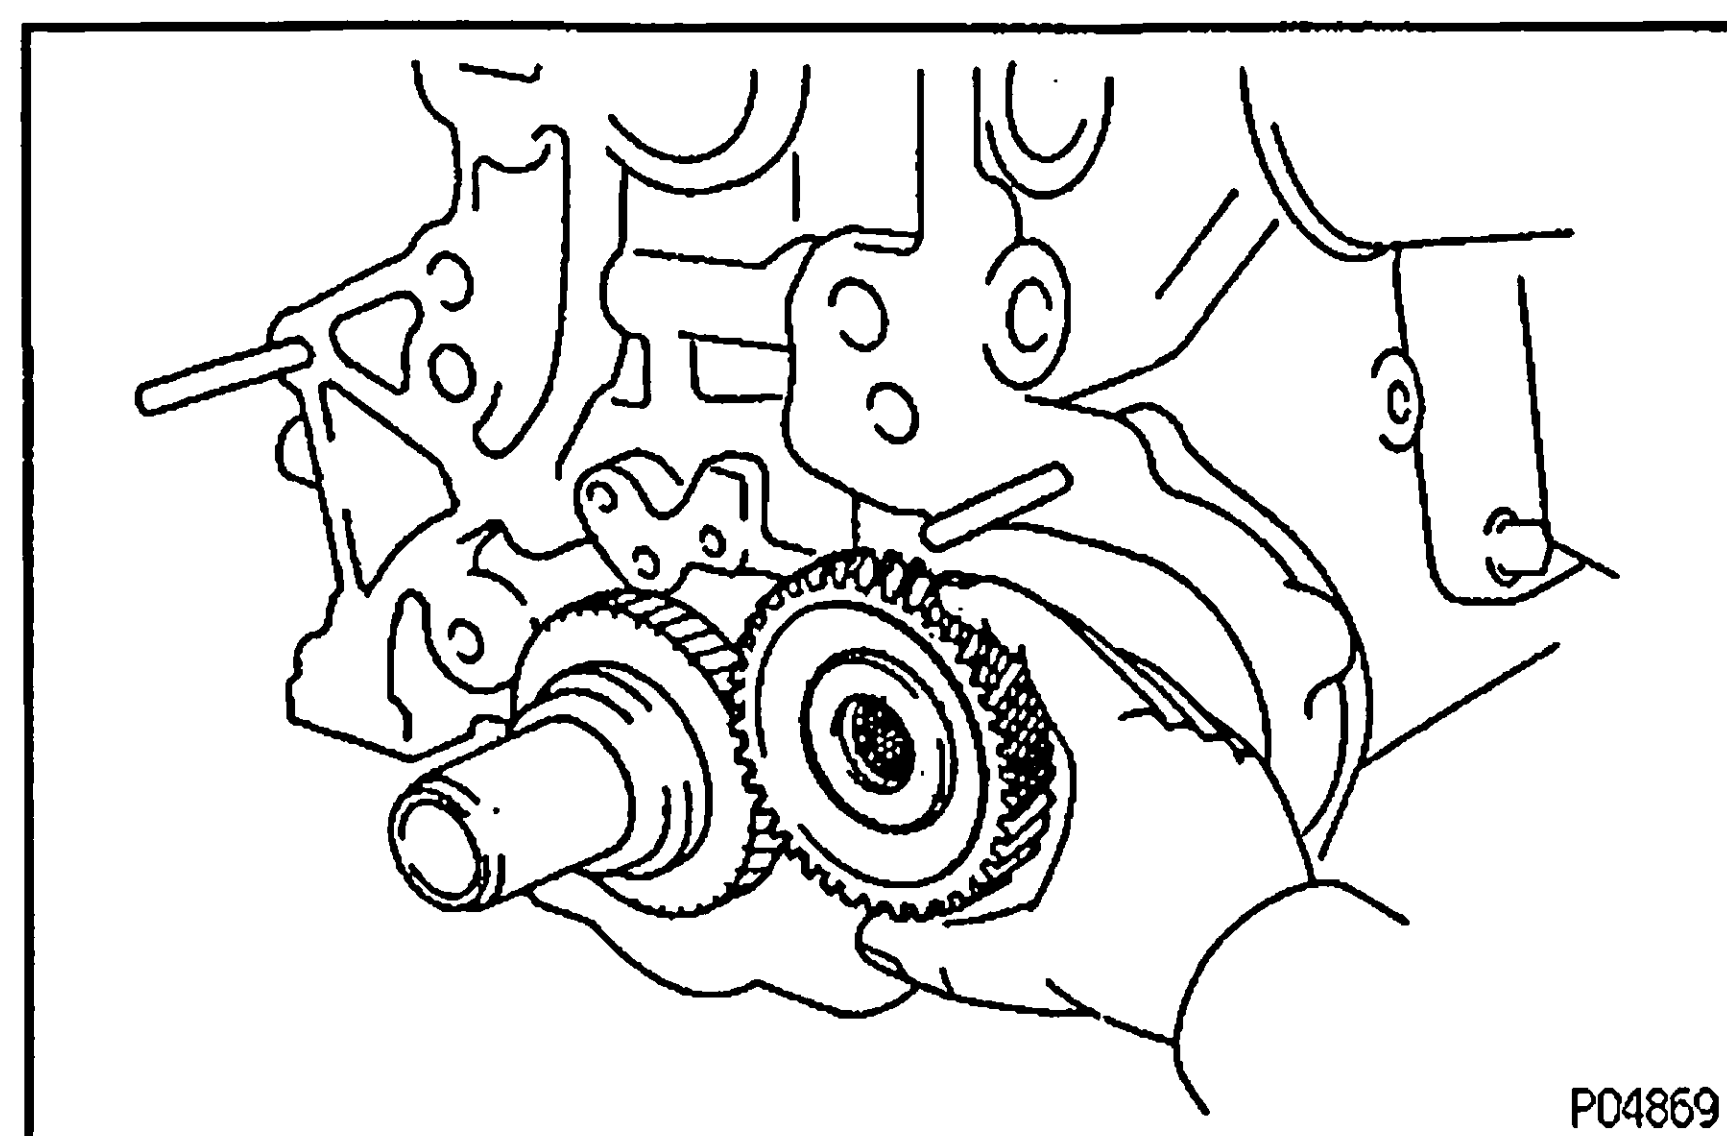

3. INSTALL OIL PUMP DRIVE SHAFT GEAR


- Apply light coat of engine oil on the shaft portion of the gear.
- Install the gear.

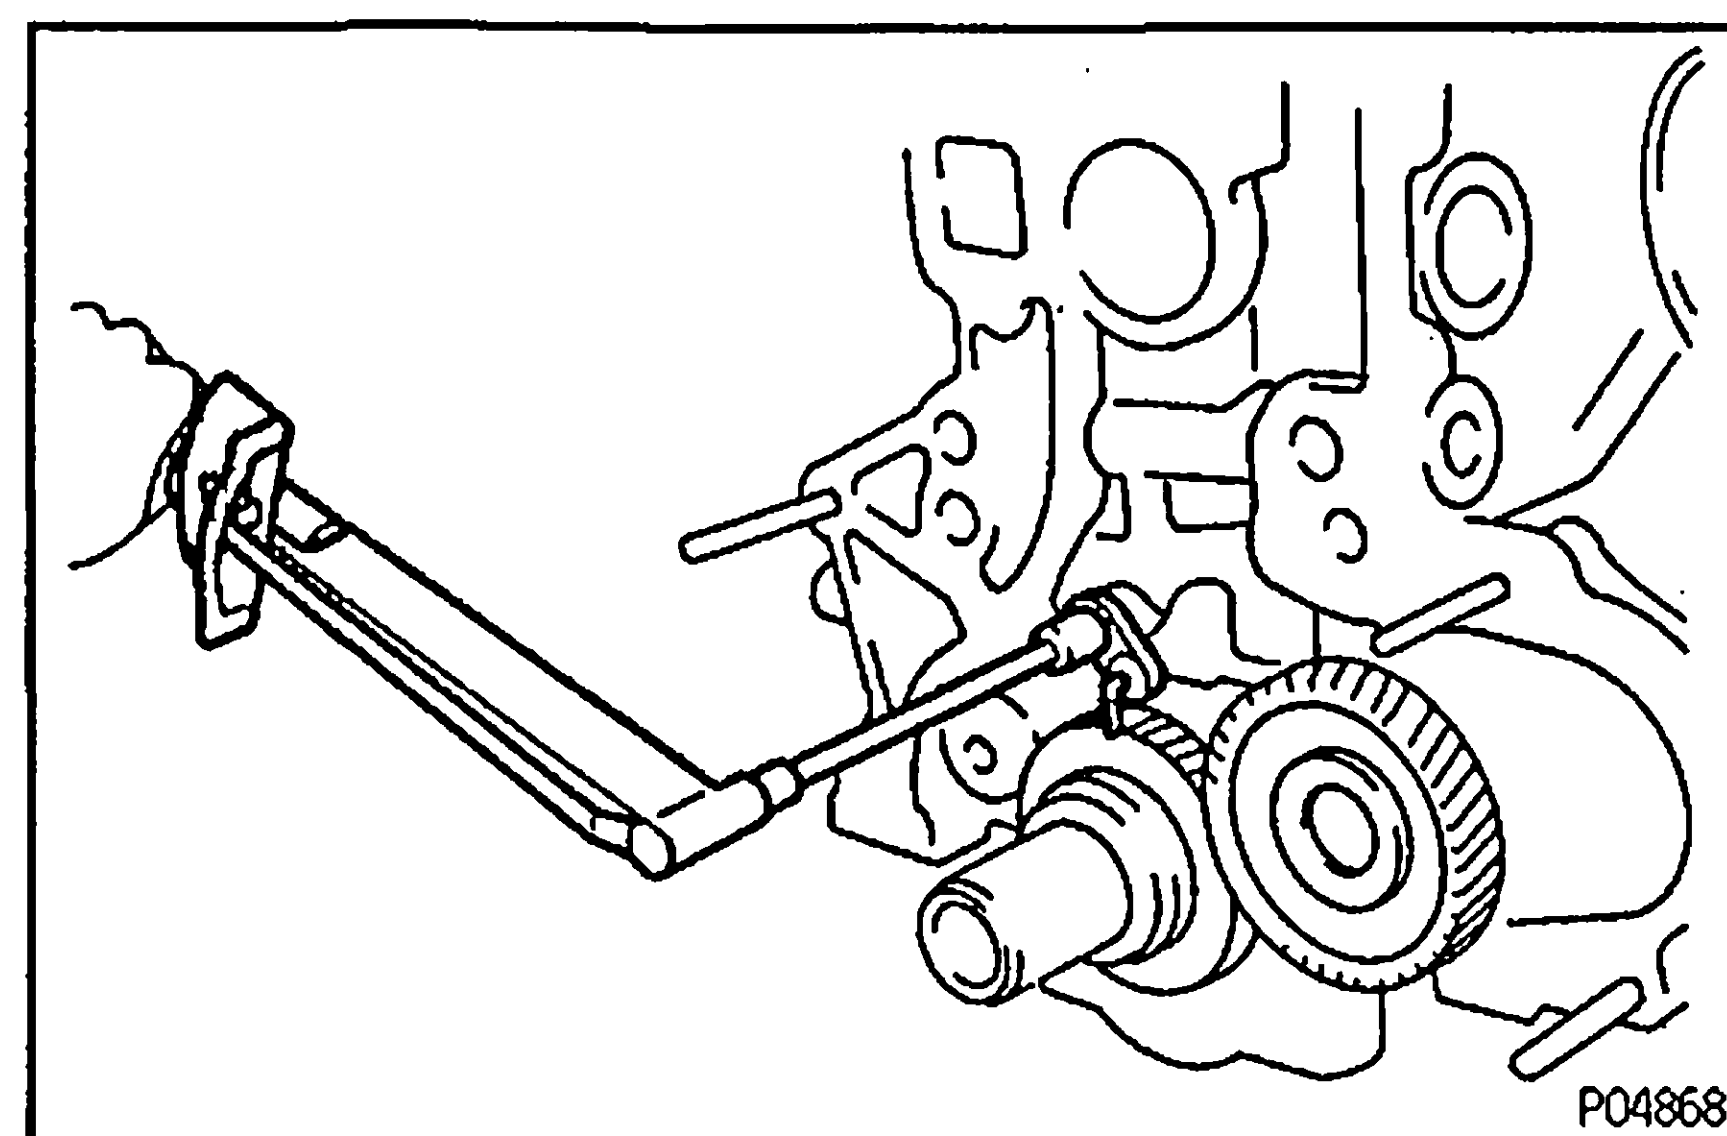

4. INSTALL OIL JET


Install the oil jet with the bolt.

Torque: 20 N·m (200 kgf·cm, 14 ft·lbf)

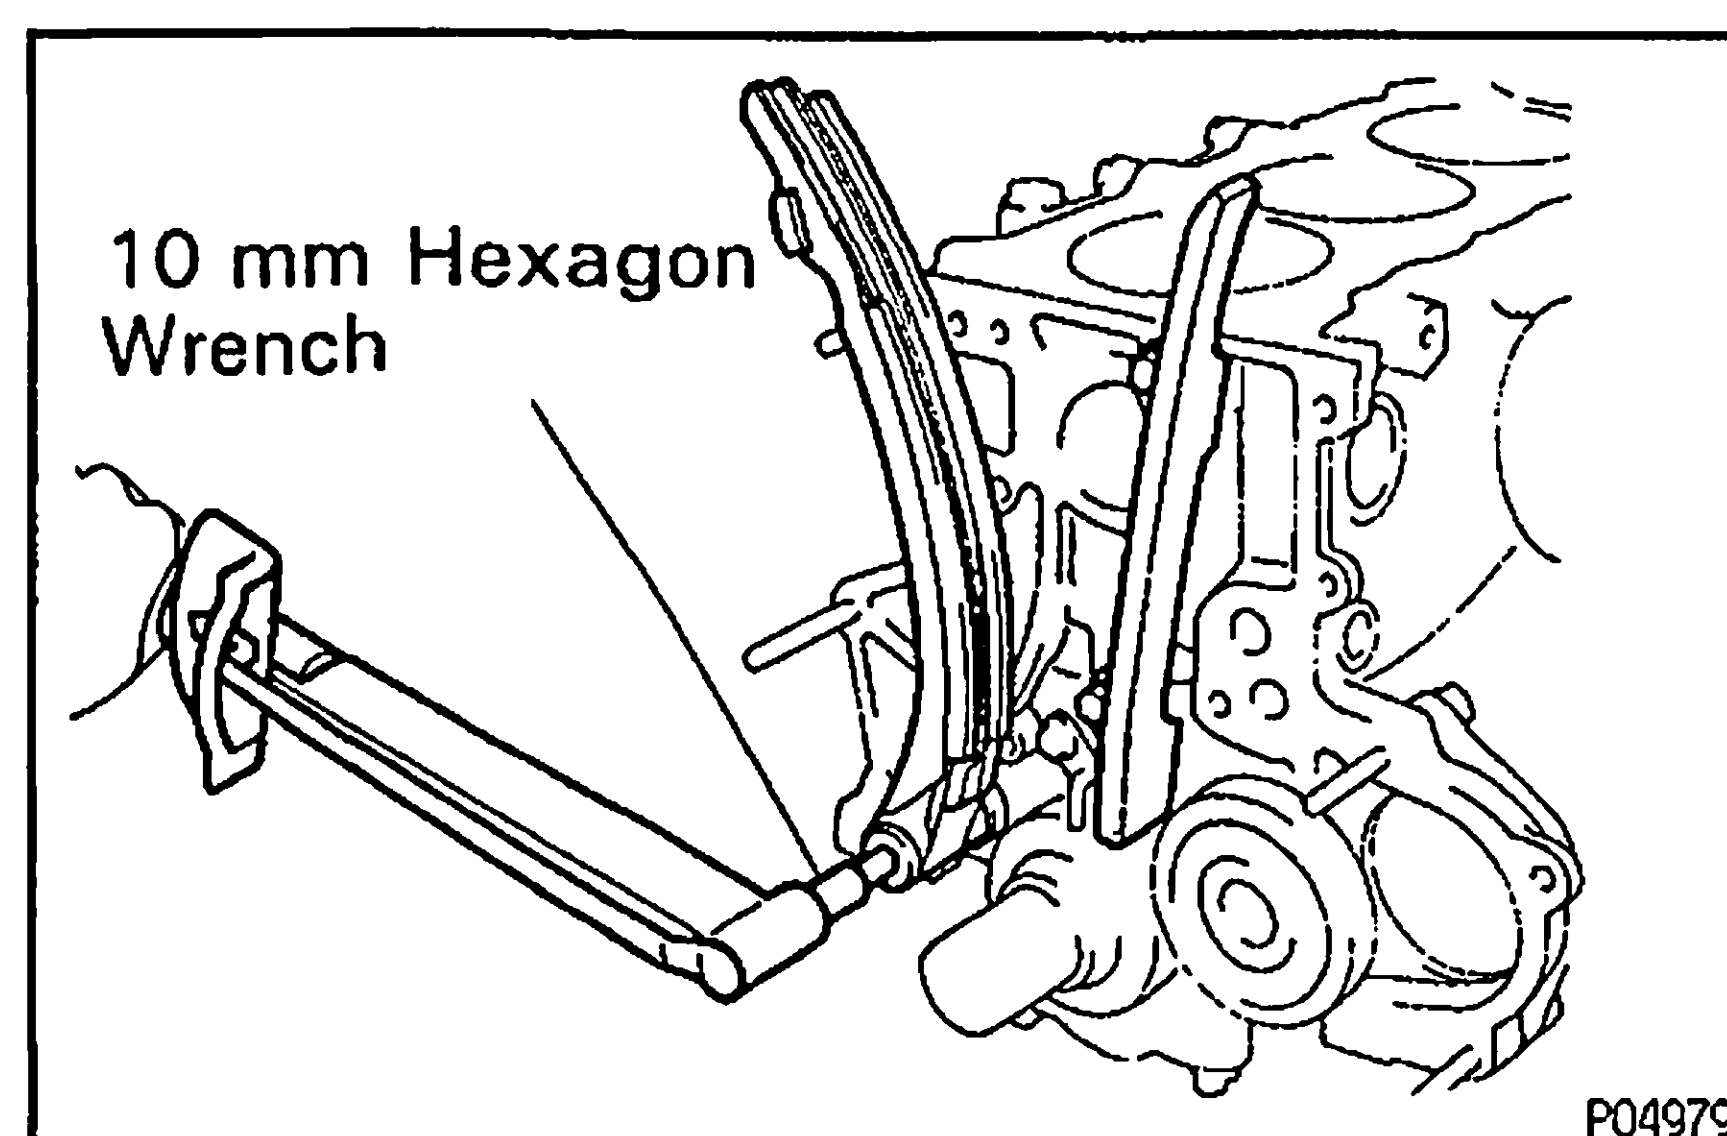


5. INSTALL CHAIN TENSIONER SLIPPER AND VIBRATION DAMPER

- Install the damper with the two bolts.
Torque: 20 N·m (200 kgf·cm, 14 ft·lbf)
- Using a 10 mm hexagon wrench, install the slipper with the bolt.
Torque: 69 N·m (700 kgf·cm, 51 ft·lbf)

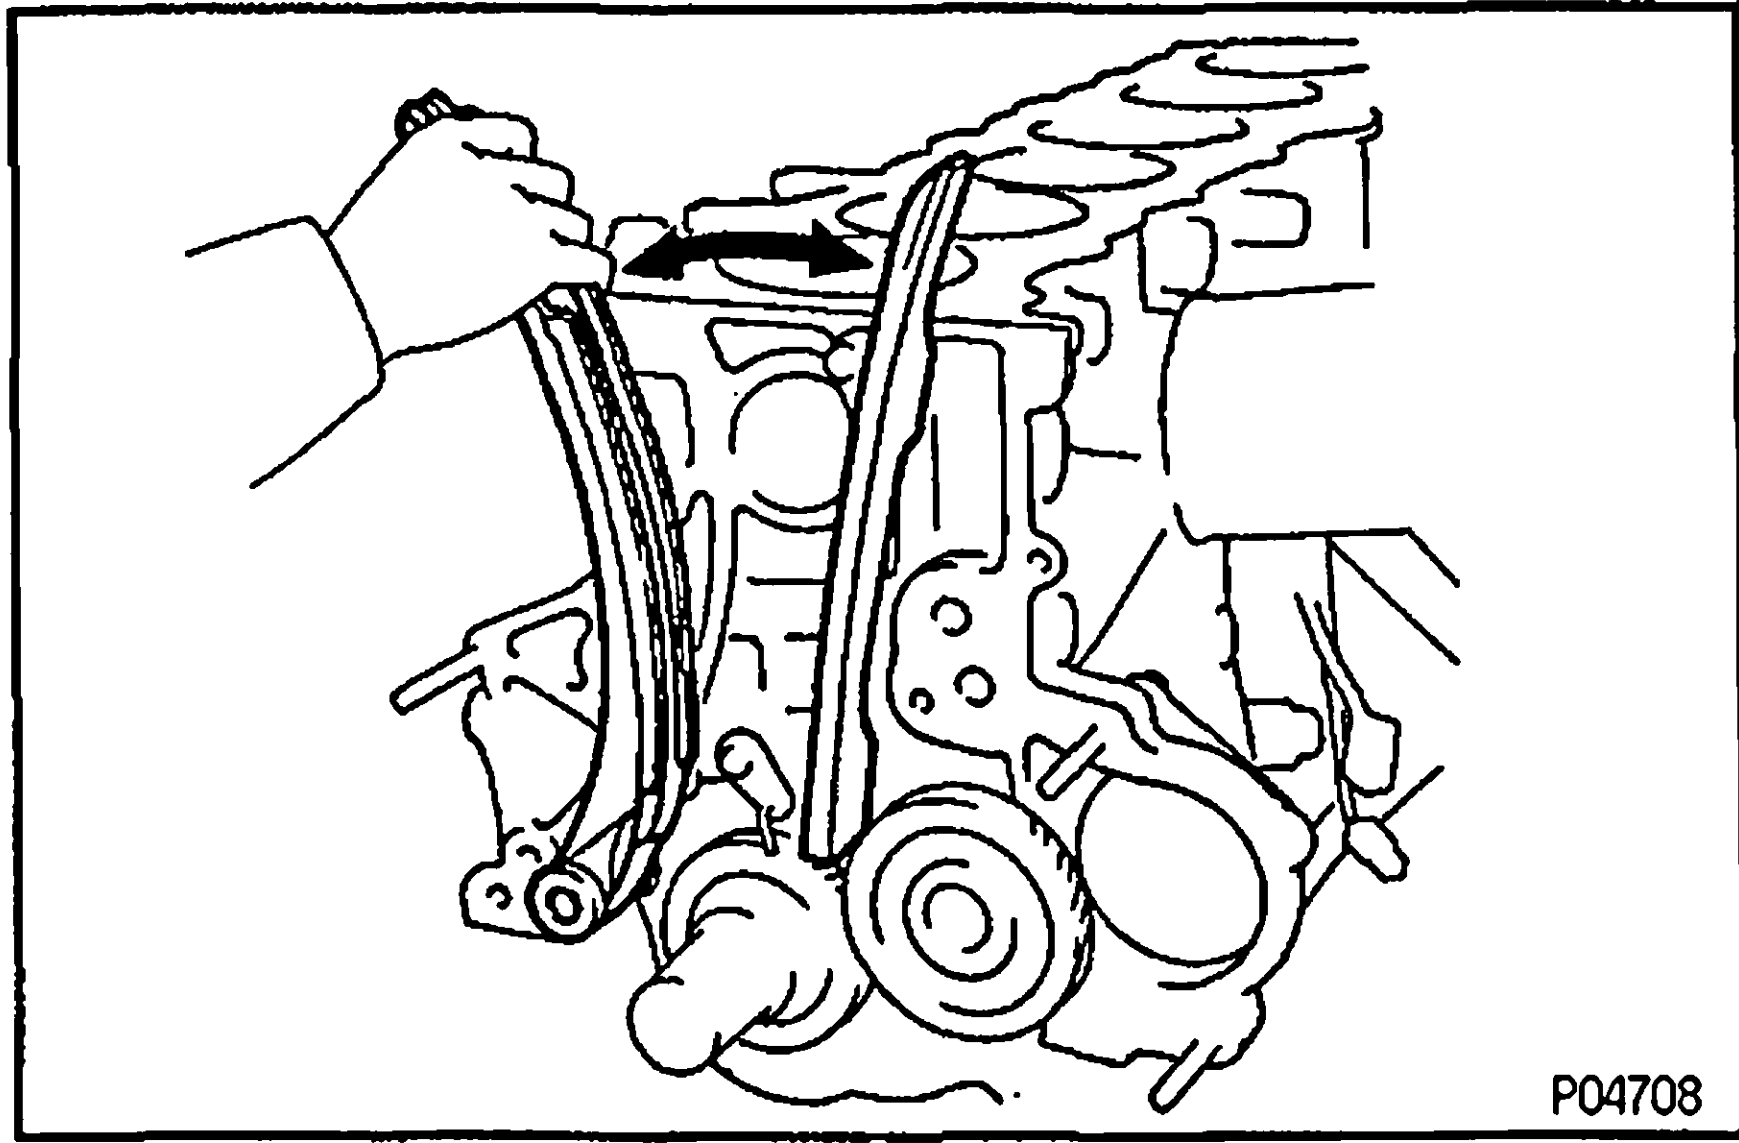


- (c) Check that the slipper moves smoothly.


EG

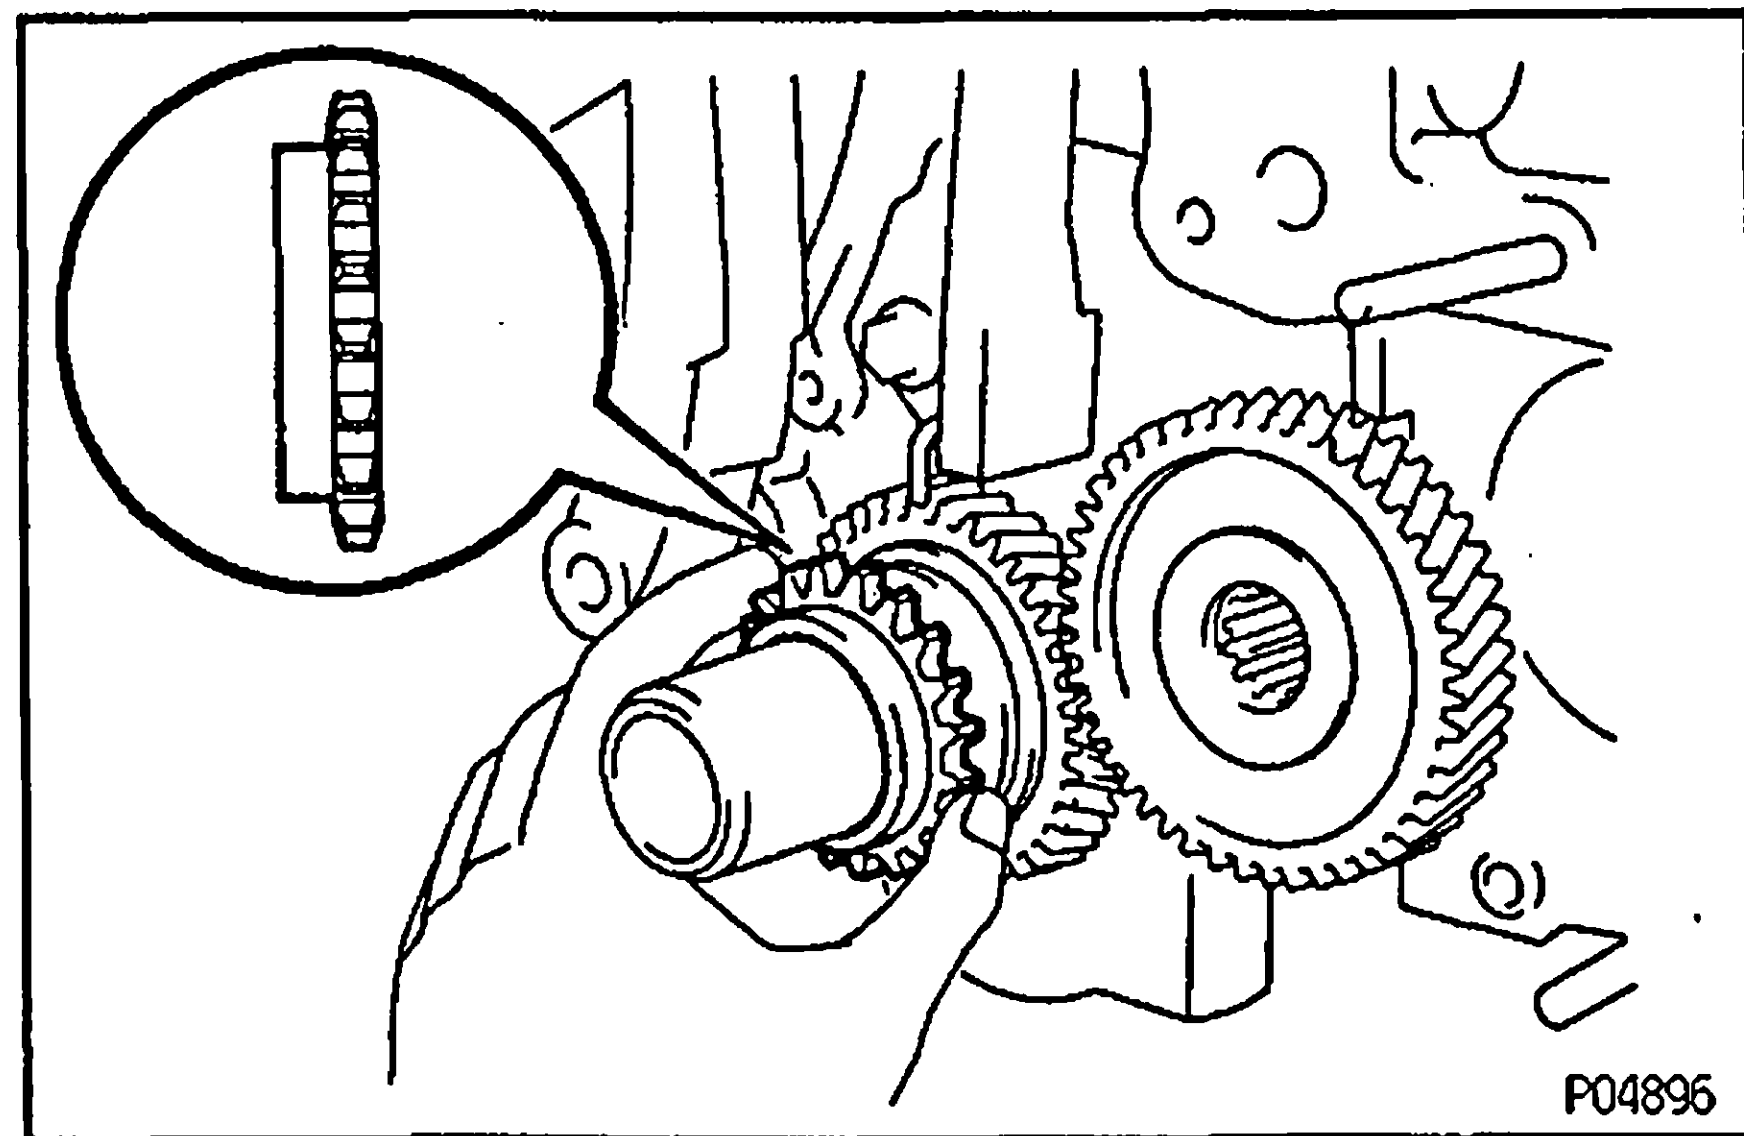

6. INSTALL CRANKSHAFT TIMING GEAR

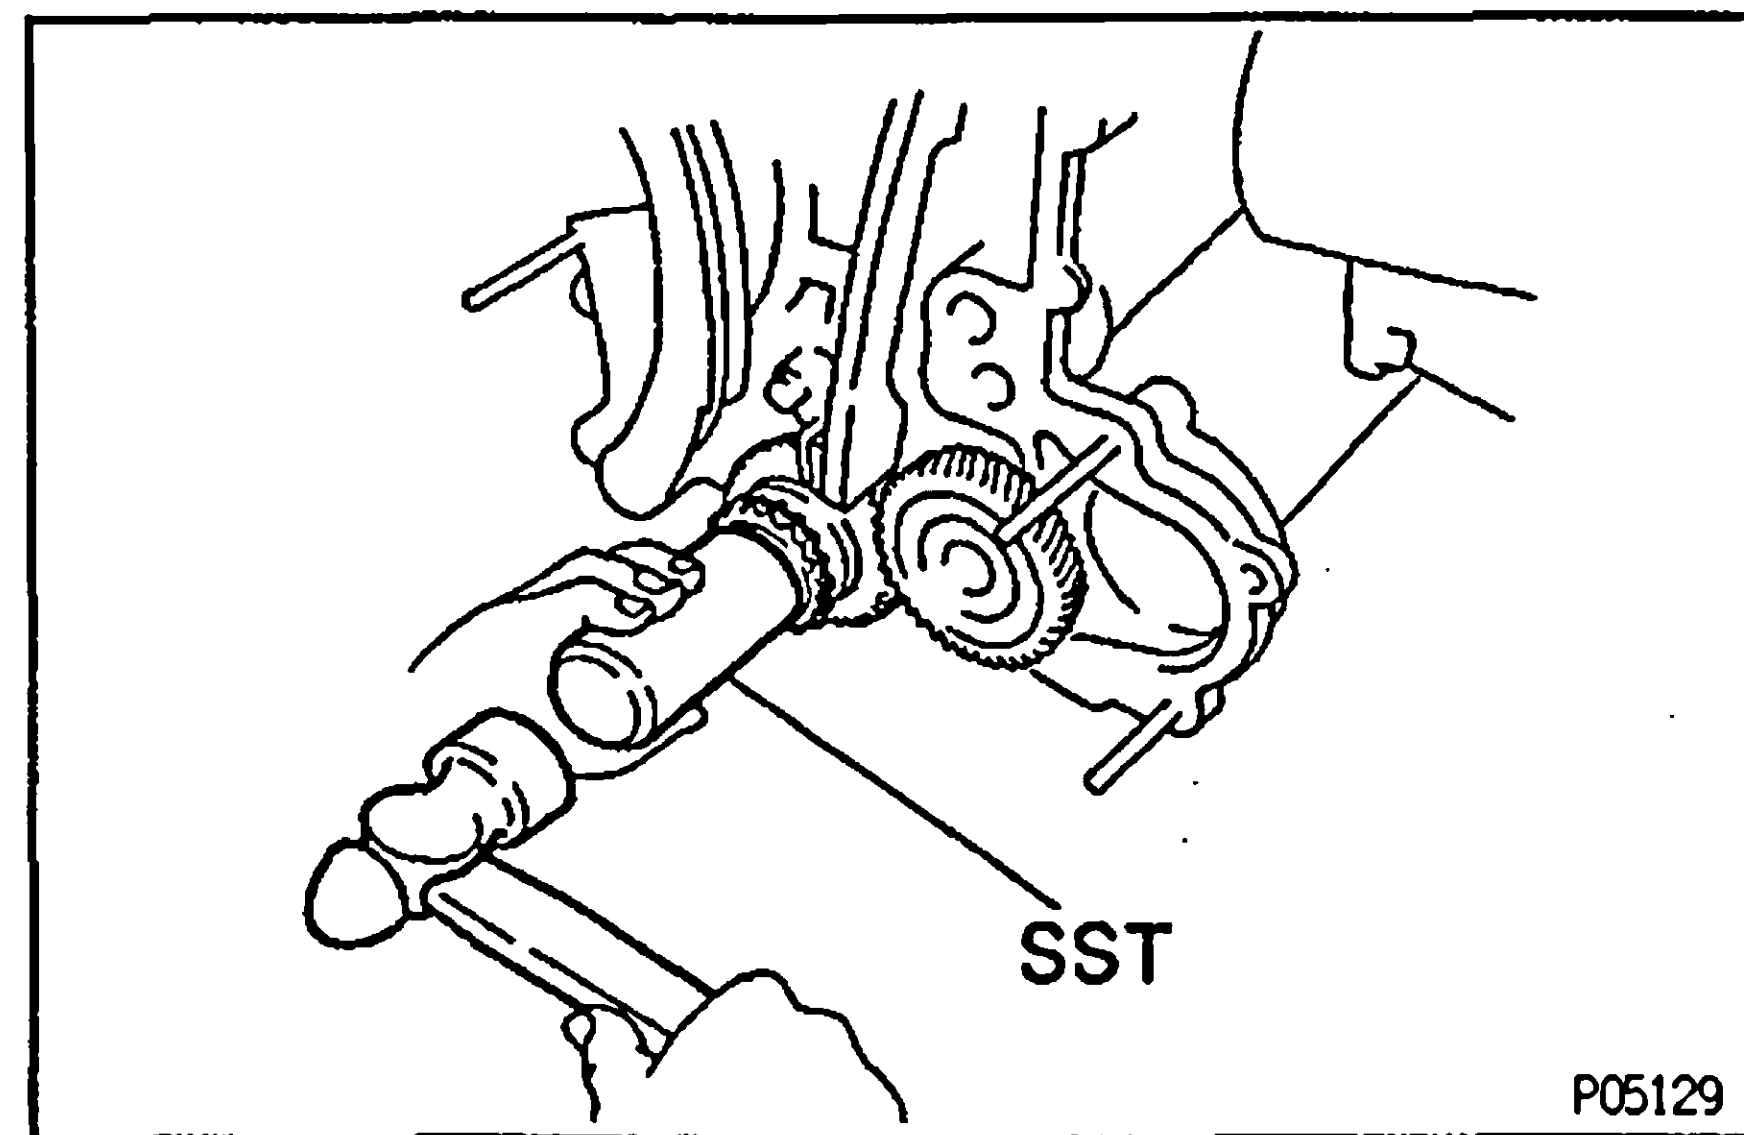


HINT: If necessary, install the gear with SST.
SST 09636-20010

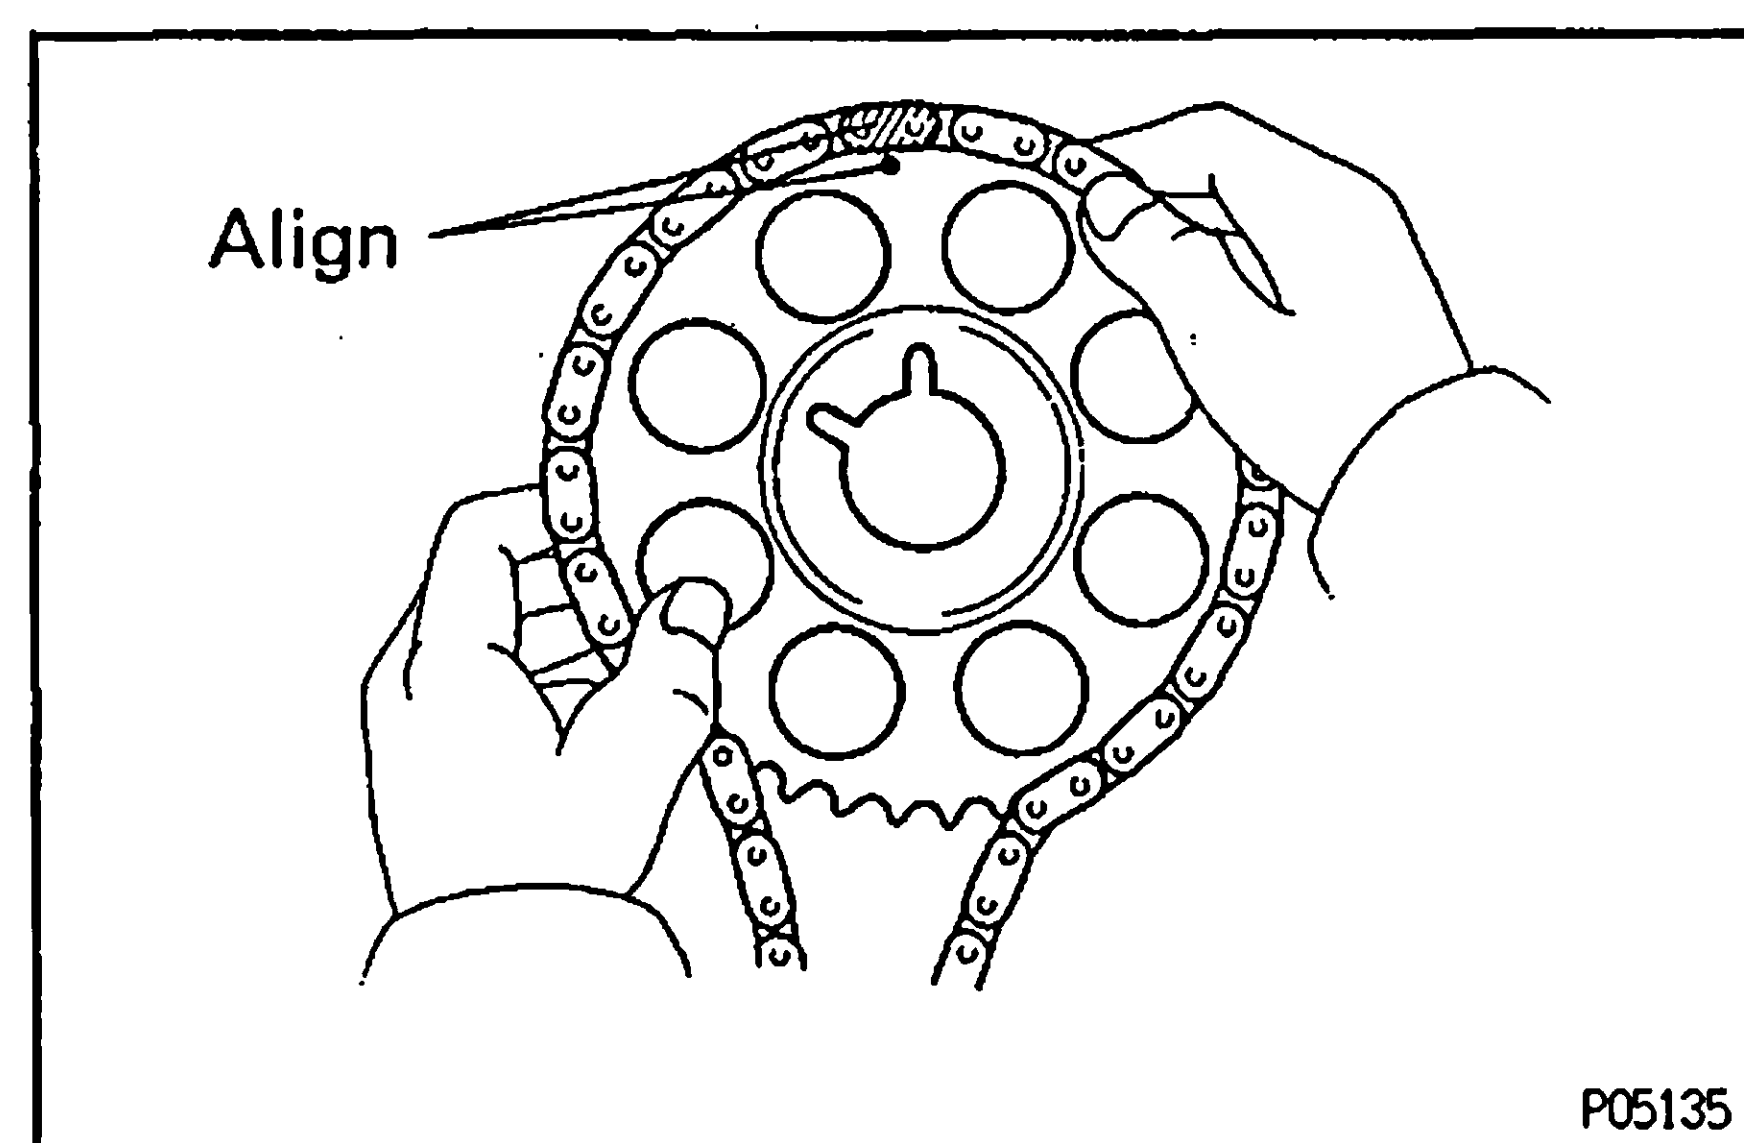


7. INSTALL TIMING CHAIN AND CAMSHAFT TIMING GEAR

- (a) Install the timing chain on the camshaft timing gear with the bright link aligned with the timing mark on the camshaft timing gear.

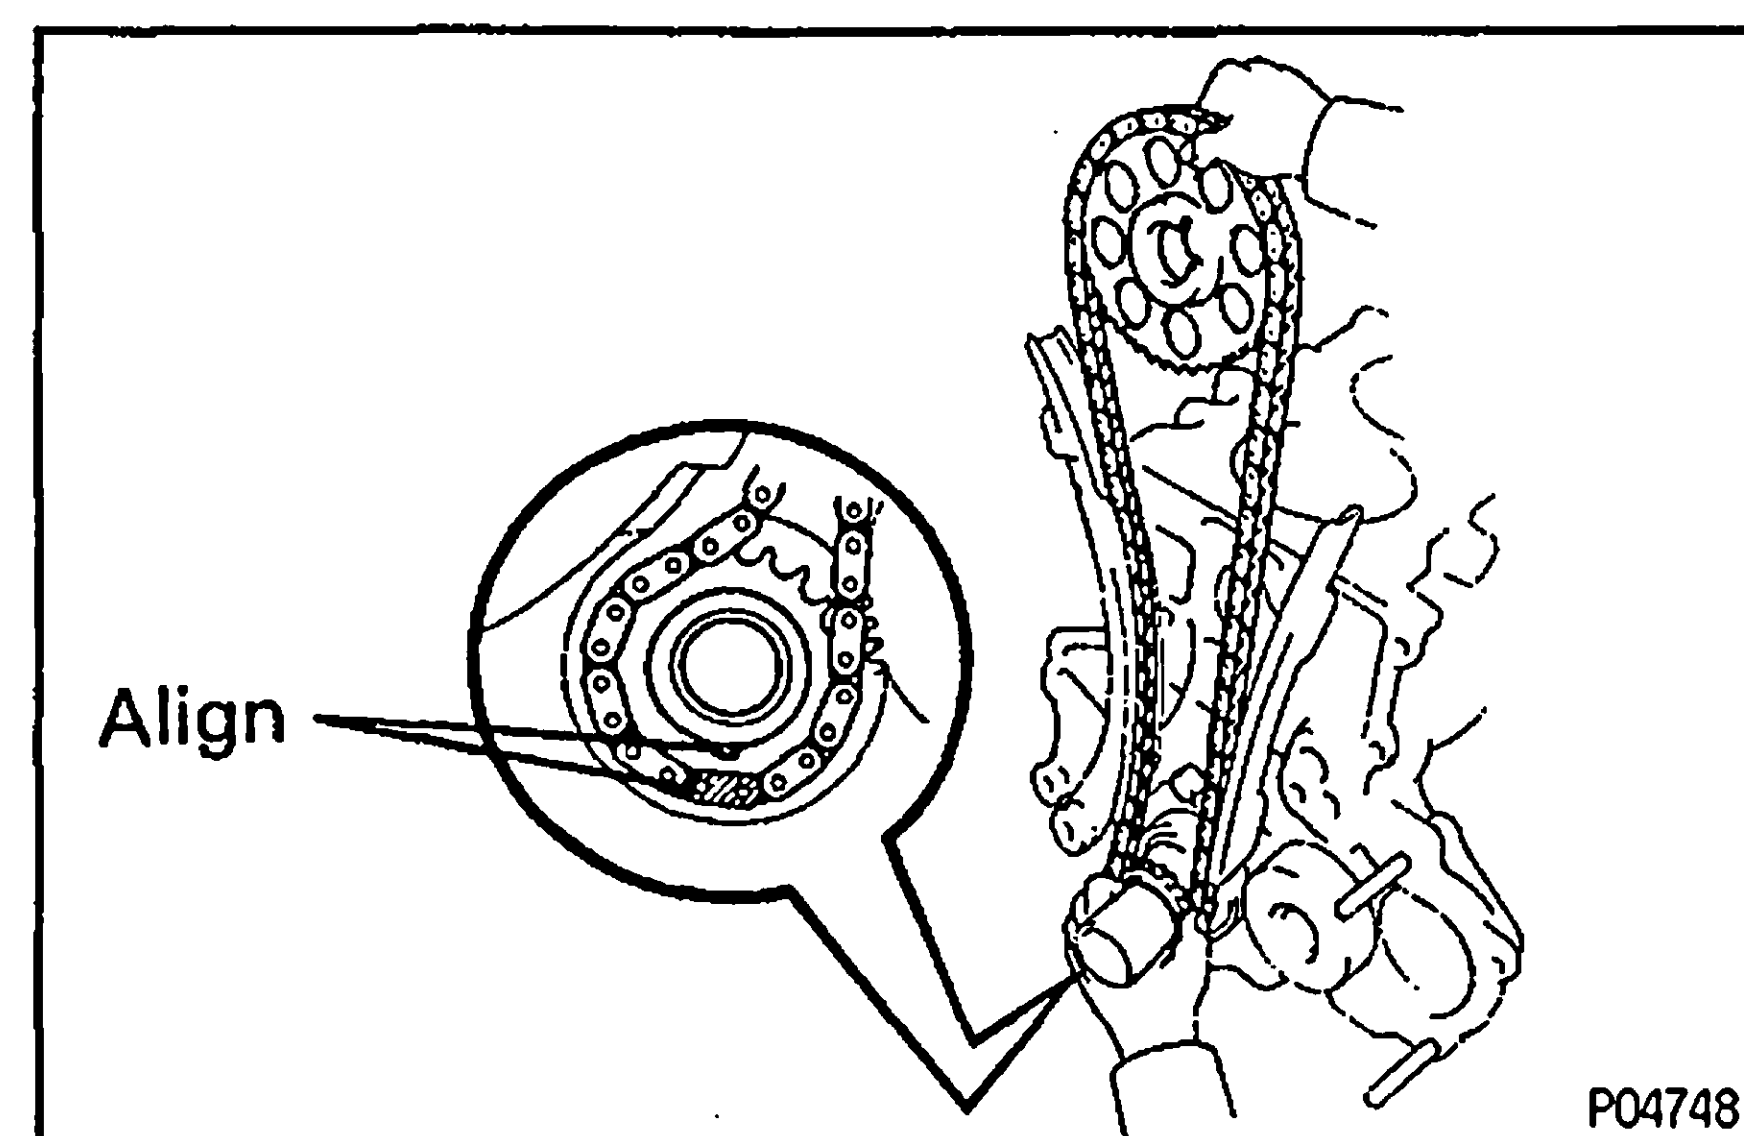

- (b) Install the timing chain on the crankshaft timing gear with the other bright link aligned with the timing mark on the crankshaft timing gear.

EG

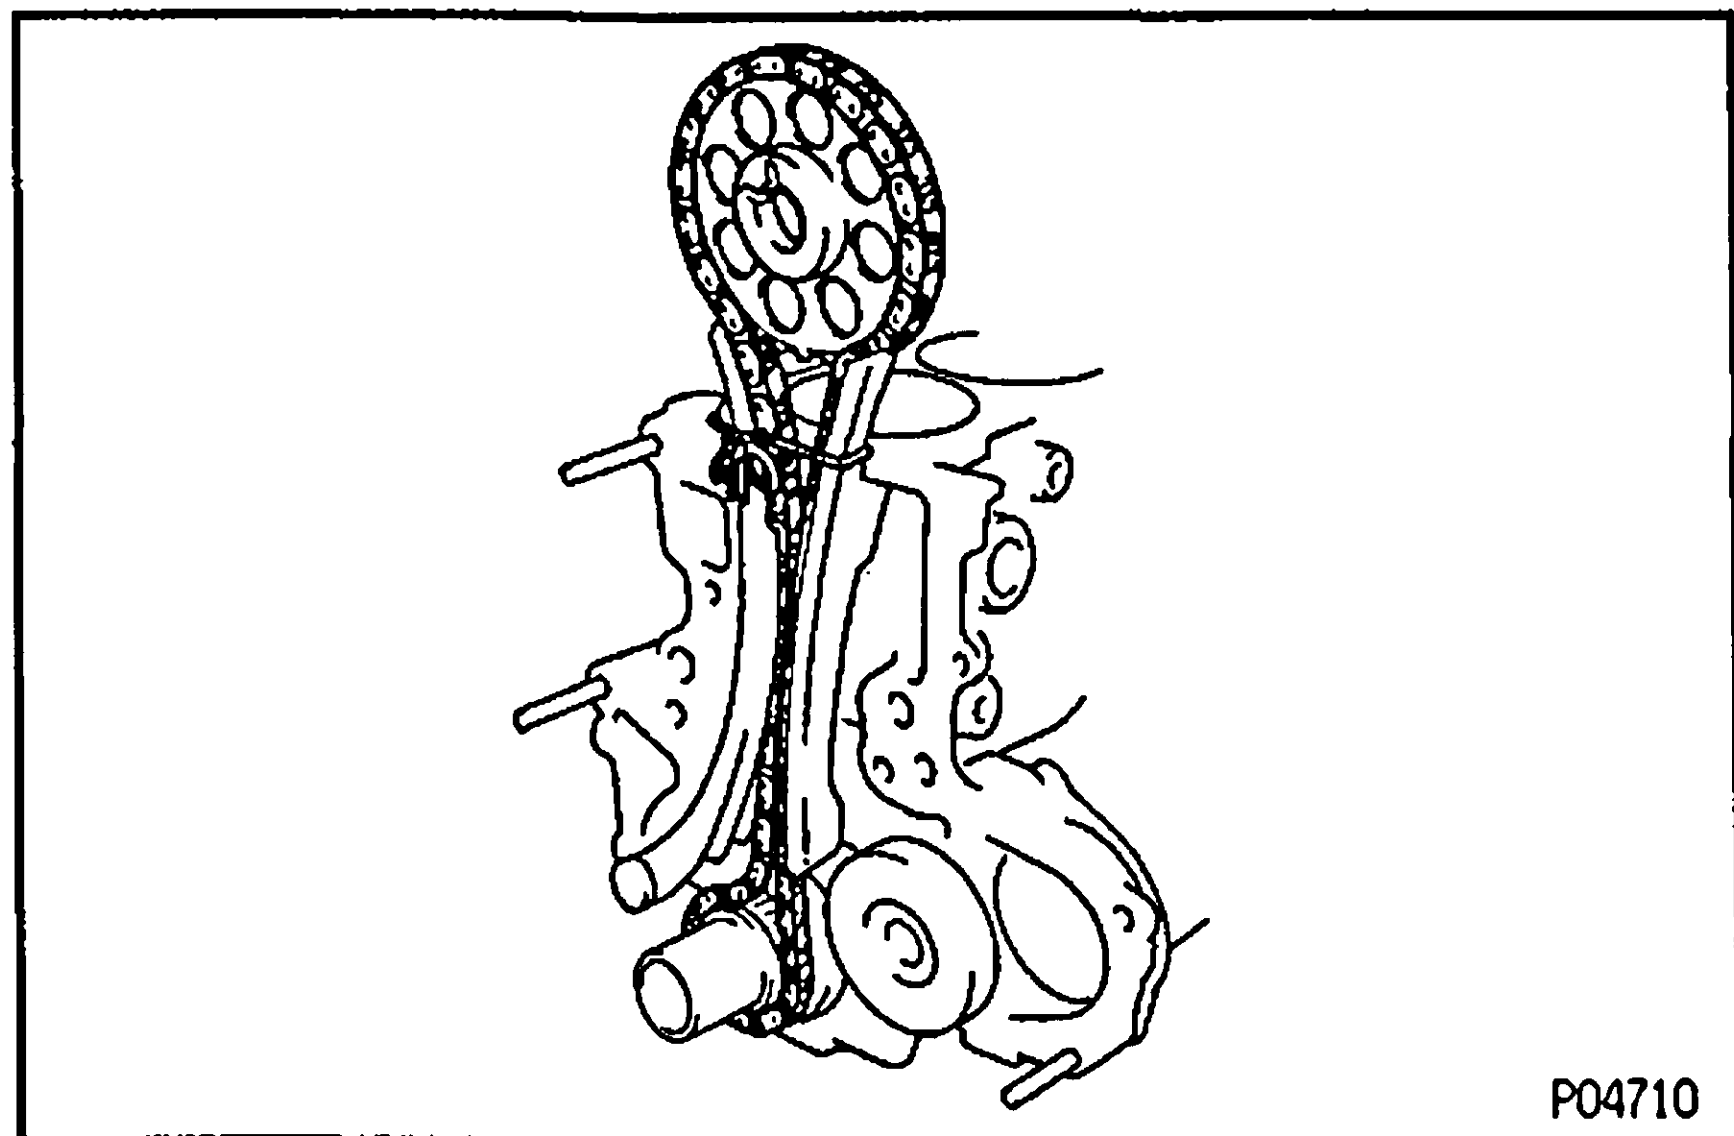

- (c) Tie the timing chain with a cords as shown in the illustration and make sure it doesn't come loose.

8. INSTALL TIMING CHAIN COVER

- (a) Remove any old packing (FIPG) material and be careful not to drop any oil on the contact surfaces of the timing chain cover and cylinder block.

- Using a razor blade and gasket scraper, remove all the old packing (FIPG) material from the gasket surfaces and sealing grooves.
- Thoroughly clean all components to remove all the loose material.
- Using a non-residue solvent, clean both sealing surfaces.

- (b) Apply seal packing to the timing chain cover as shown in the illustration.



Seal packing:

Part No.08826—00080 or equivalent


- Install a nozzle that has been cut to a 2 — 3 mm (0.08 — 0.12 in.) opening.

HINT: Avoid applying an excessive amount to the surface.


- Parts must be assembled within 5 minutes of application. Otherwise the material must be removed and reapplied.
- Immediately remove nozzle from the tube and reinstall cap.

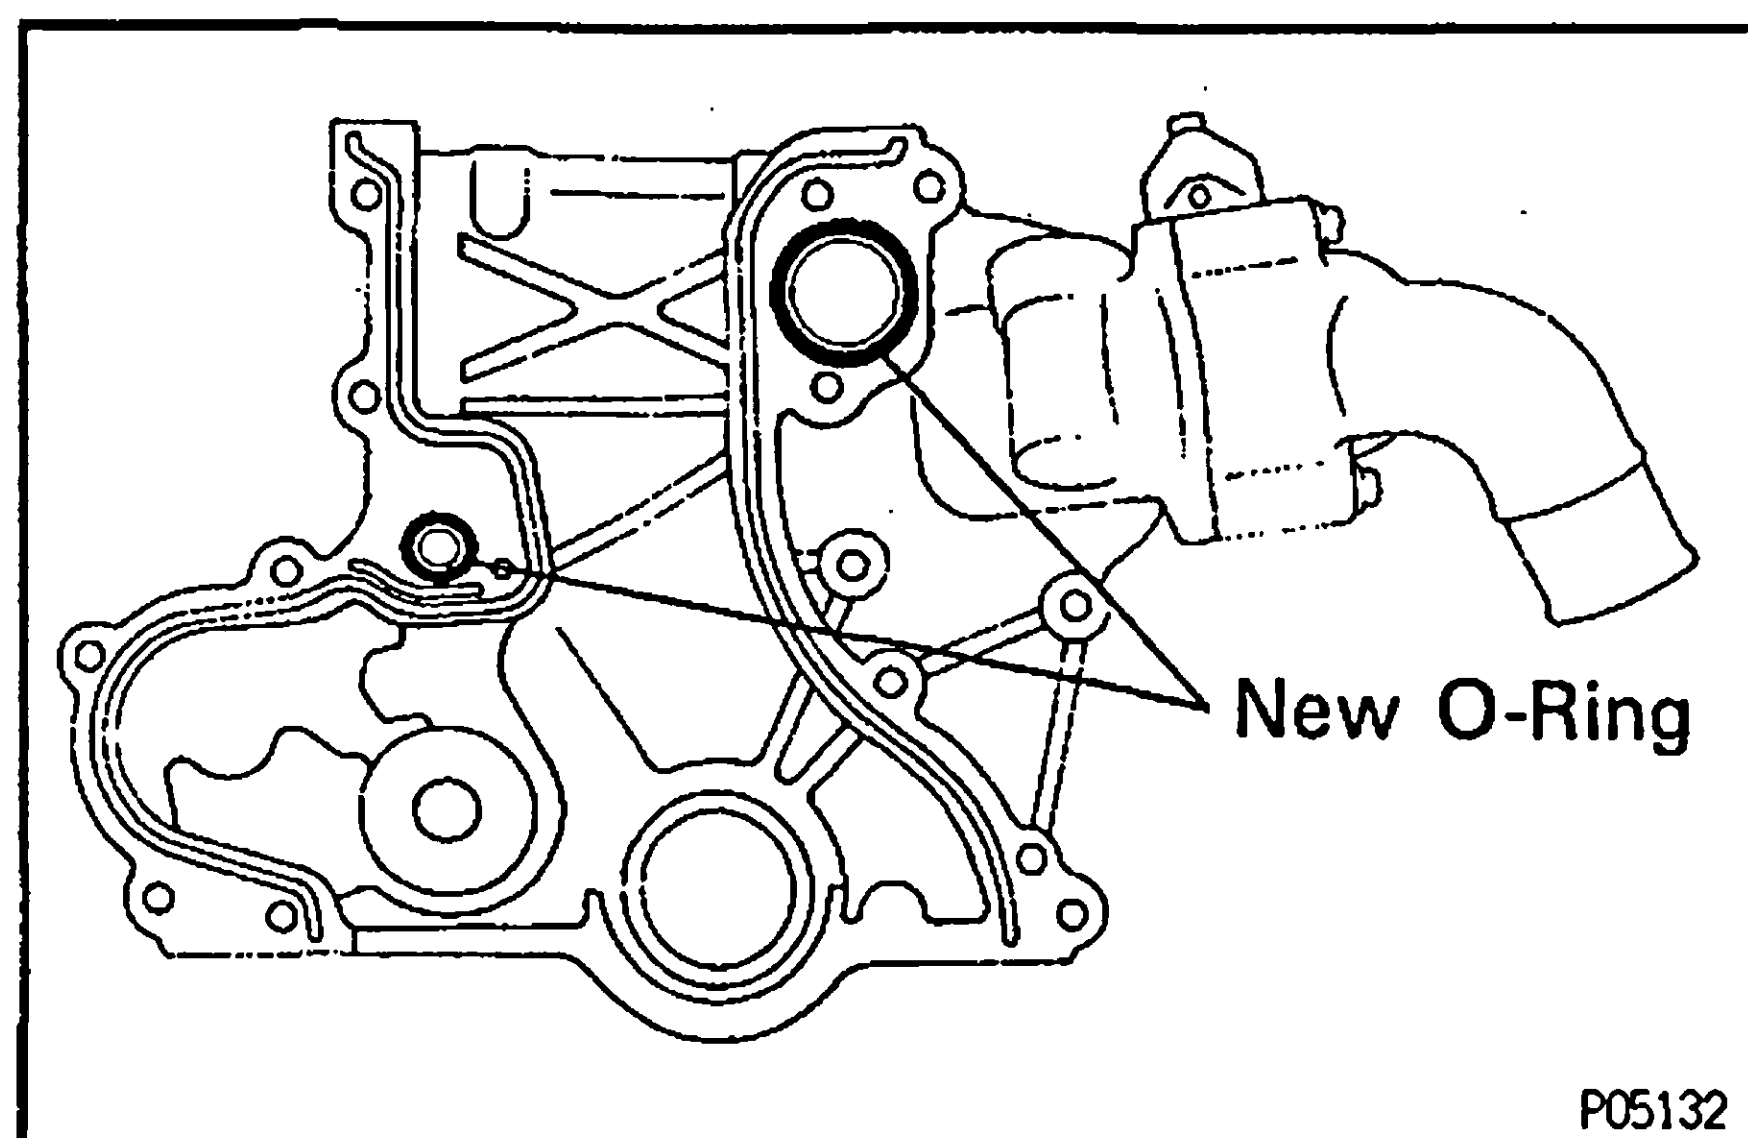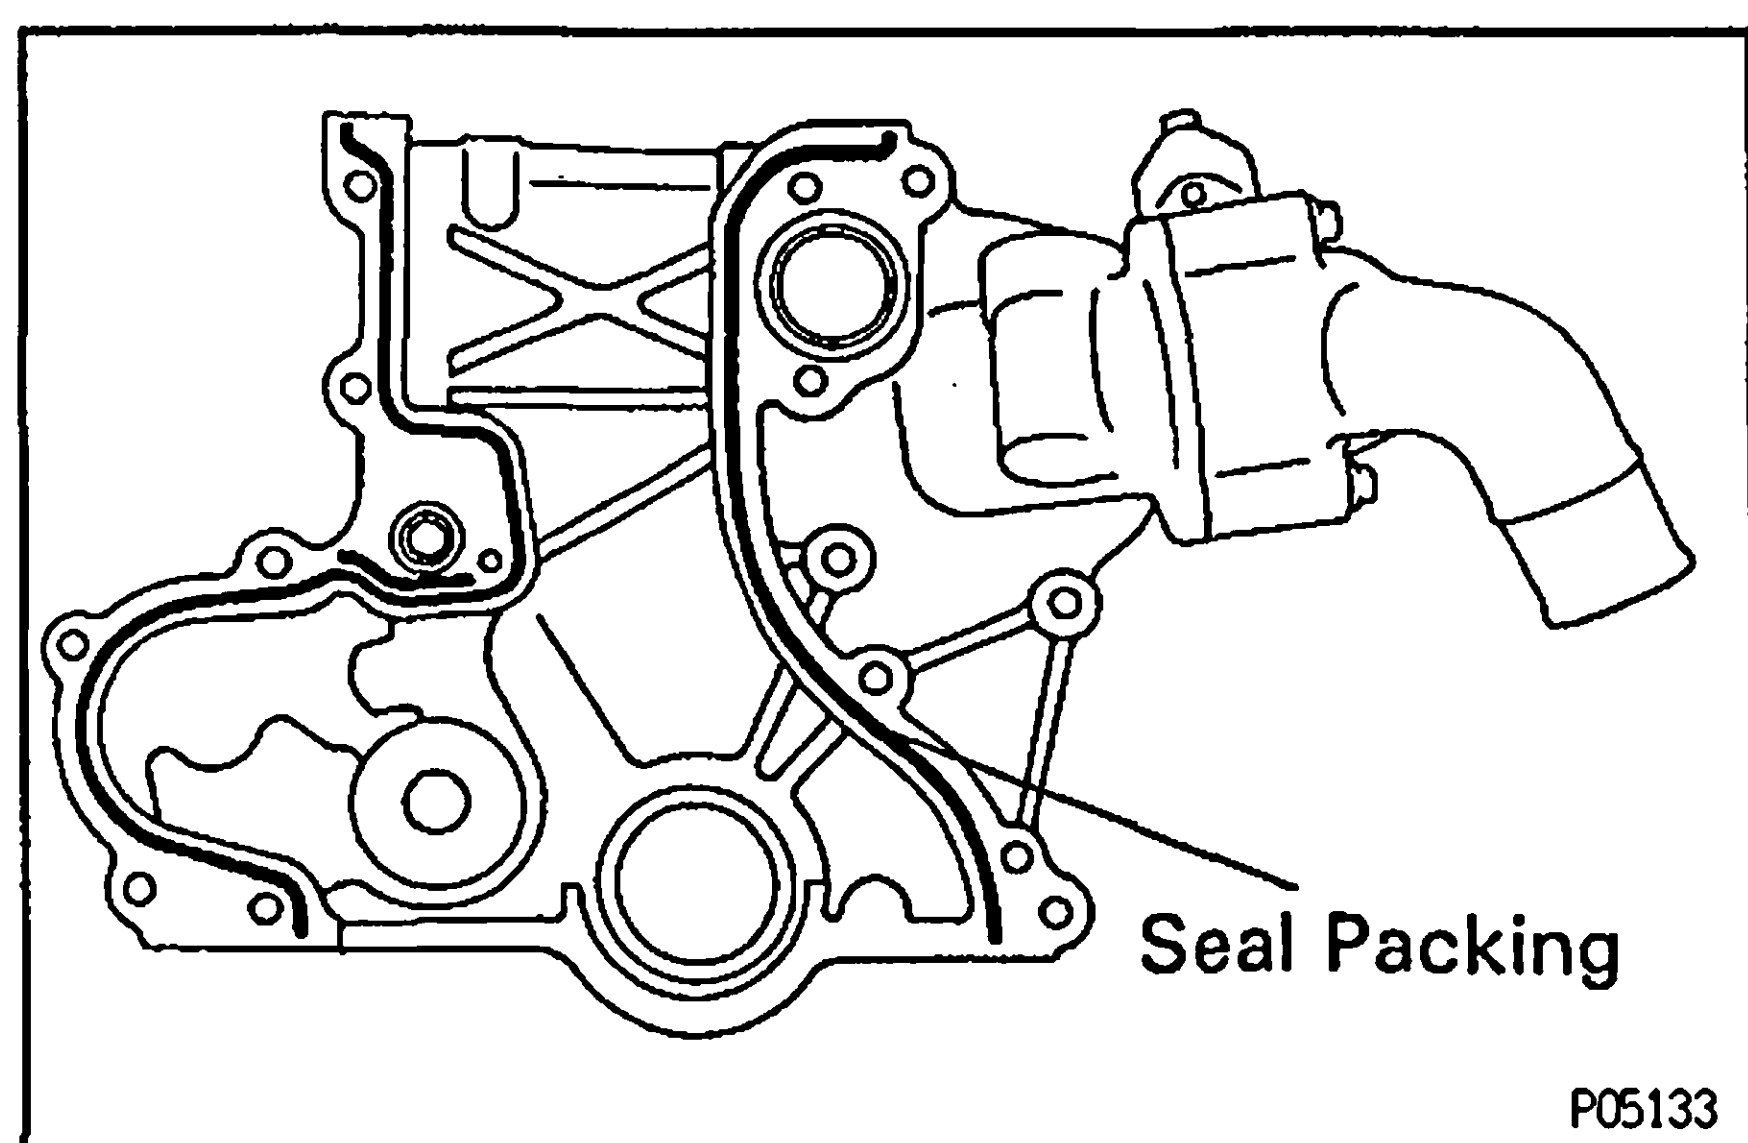

- (c) Place two new O—ring in position on the timing chain cover.

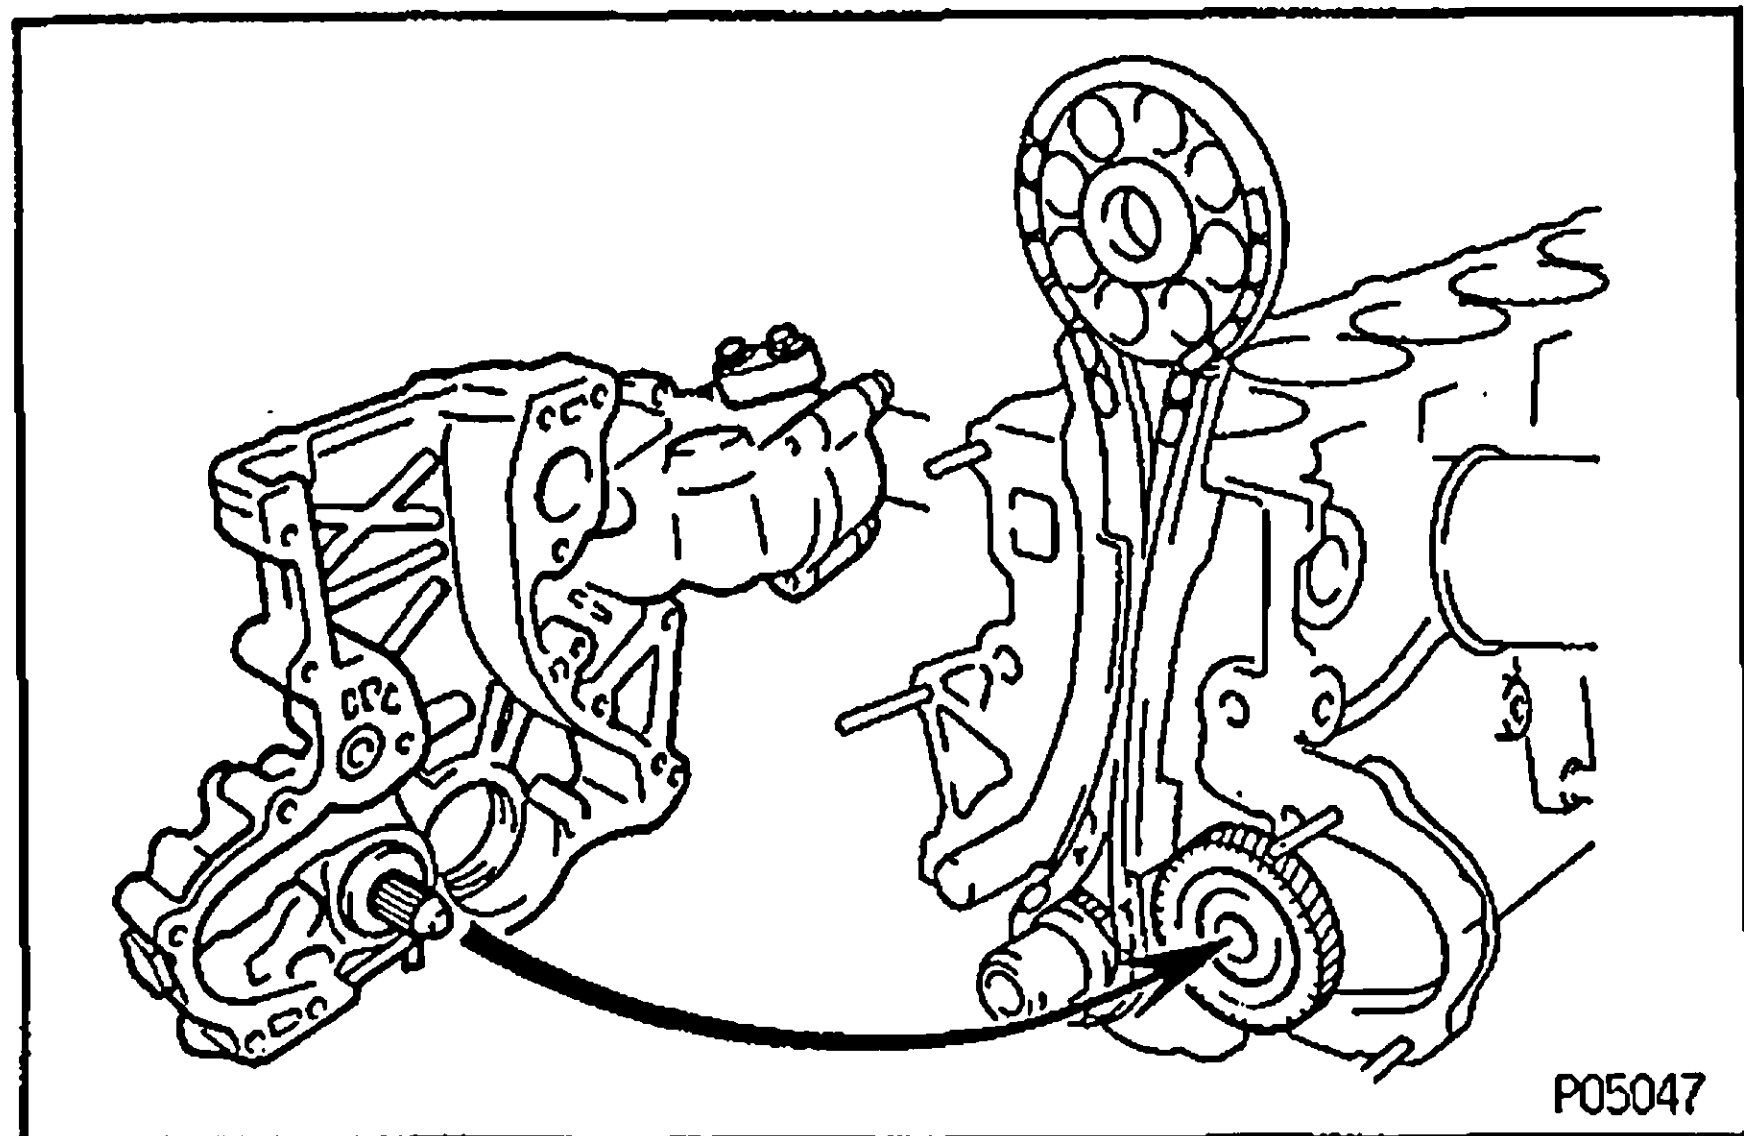

- (d) Engage the gear of the oil pump drive rotor with the gear of the oil pump drive gear, and slide the oil pump.

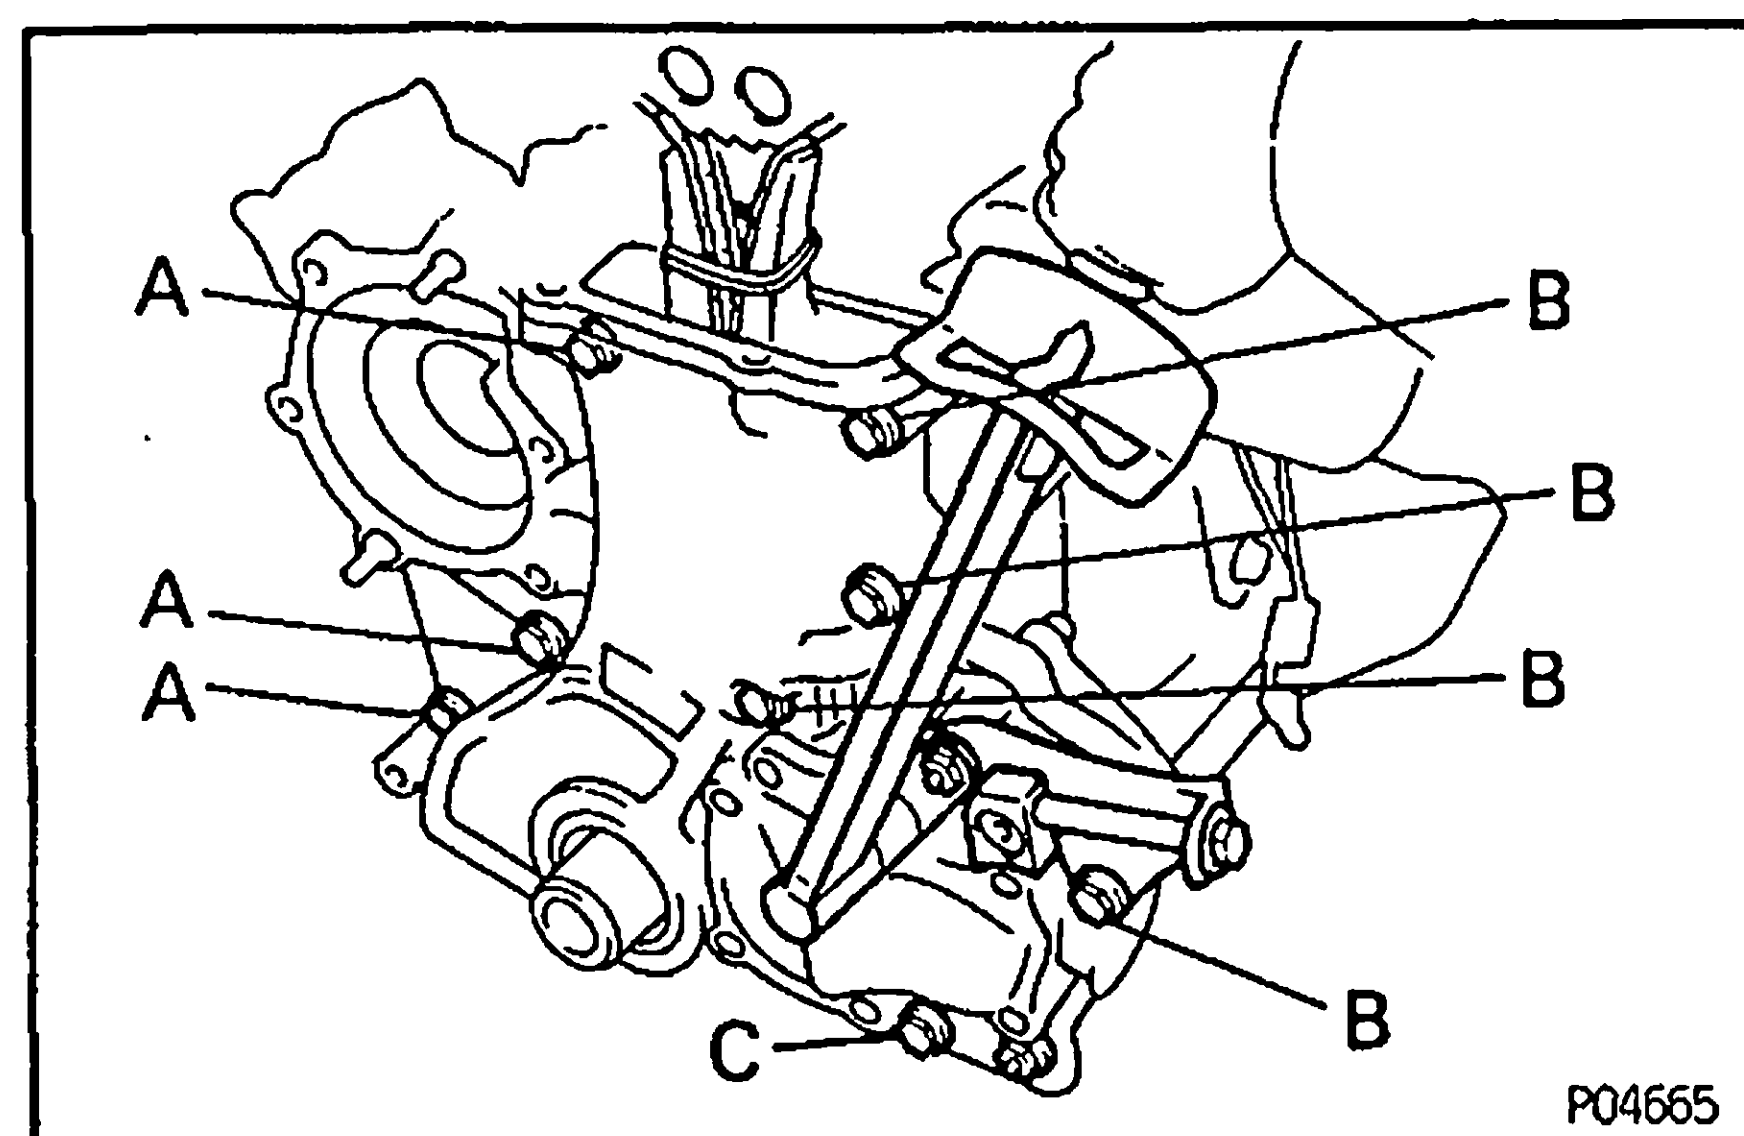


- (e) Install the oil pump and drive belt adjusting bar with the nine bolts and two nuts.

Torque: 21 N·m (210 kgf·cm, 15 ft·lbf)

HINT: Each bolt length is indicated in the illustration.


- A 30 mm (1.18 in.)
B 50 mm (1.97 in.)
C 60 mm (2.38 in.)

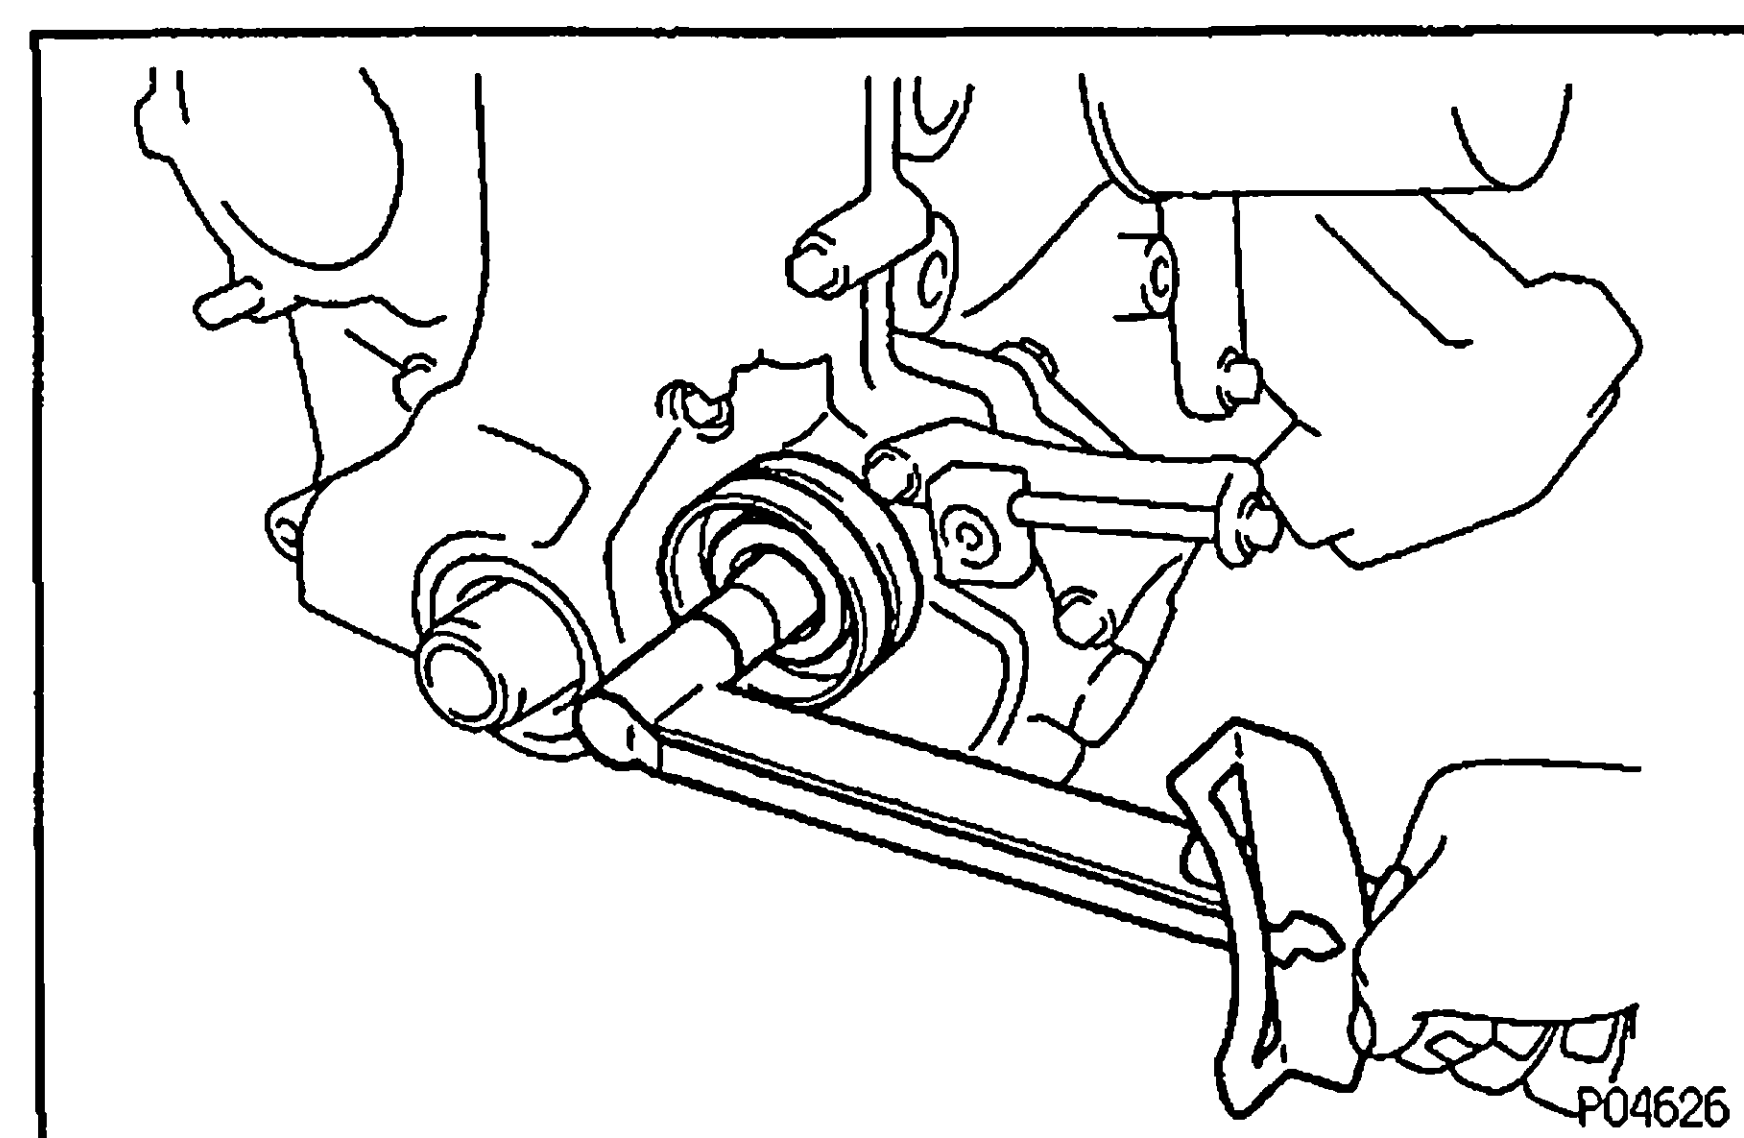

9. INSTALL DRIVE BELT IDLER PULLEY

Install the pulley with the bolt.

Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)

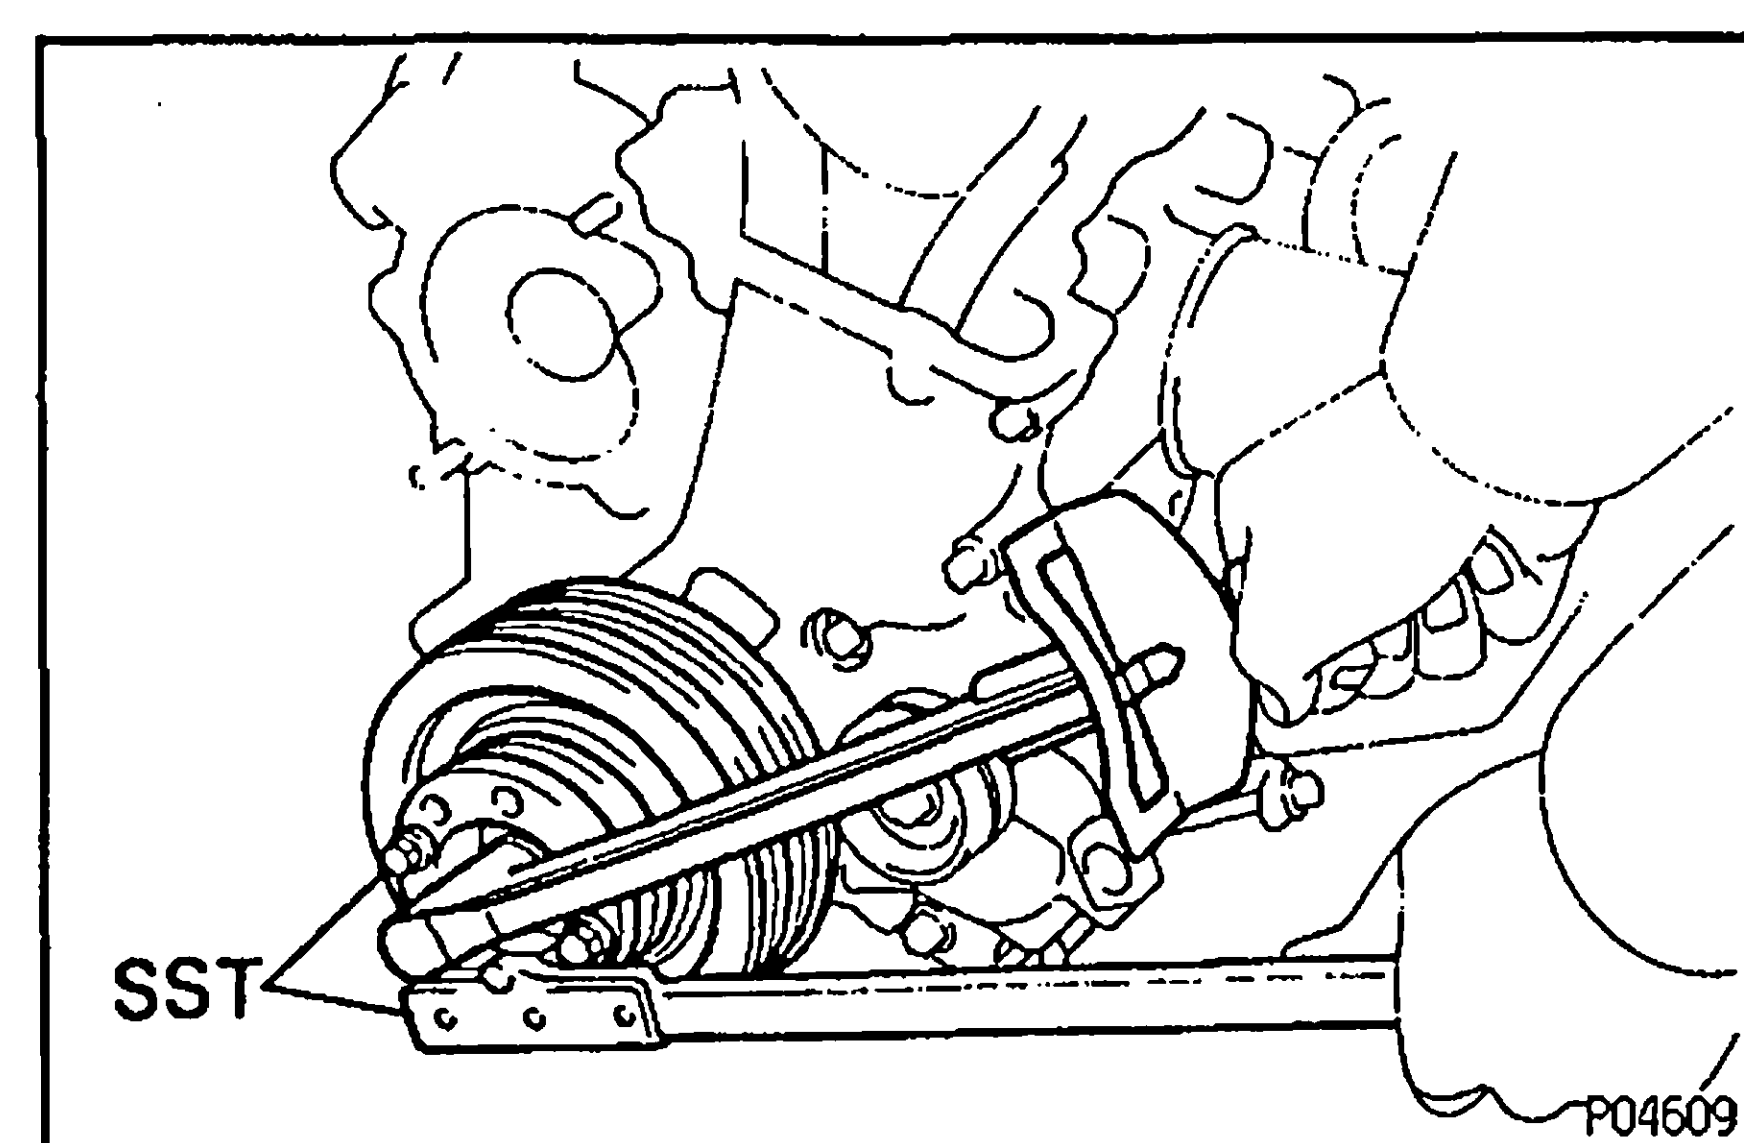

10. INSTALL CRANKSHAFT PULLEY

- (a) Align the pulley set key with the key groove of the pulley, and slide on the pulley.

- (b) Using SST, install and torque the pulley bolt.

SST 09213-58012, 09330-00021


Torque: 412 N·m (4,200 kgf·cm, 304 ft·lbf)

11. INSTALL NO.1 OIL PAN

- (a) Remove any old packing (FIPG) material and be careful not to drop any oil on the contact surfaces of the timing chain cover and cylinder block.

- Using a razor blade and gasket scraper, remove all the old packing (FIPG) material from the gasket surfaces and sealing grooves.
- Thoroughly clean all components to remove all the loose material.

EG

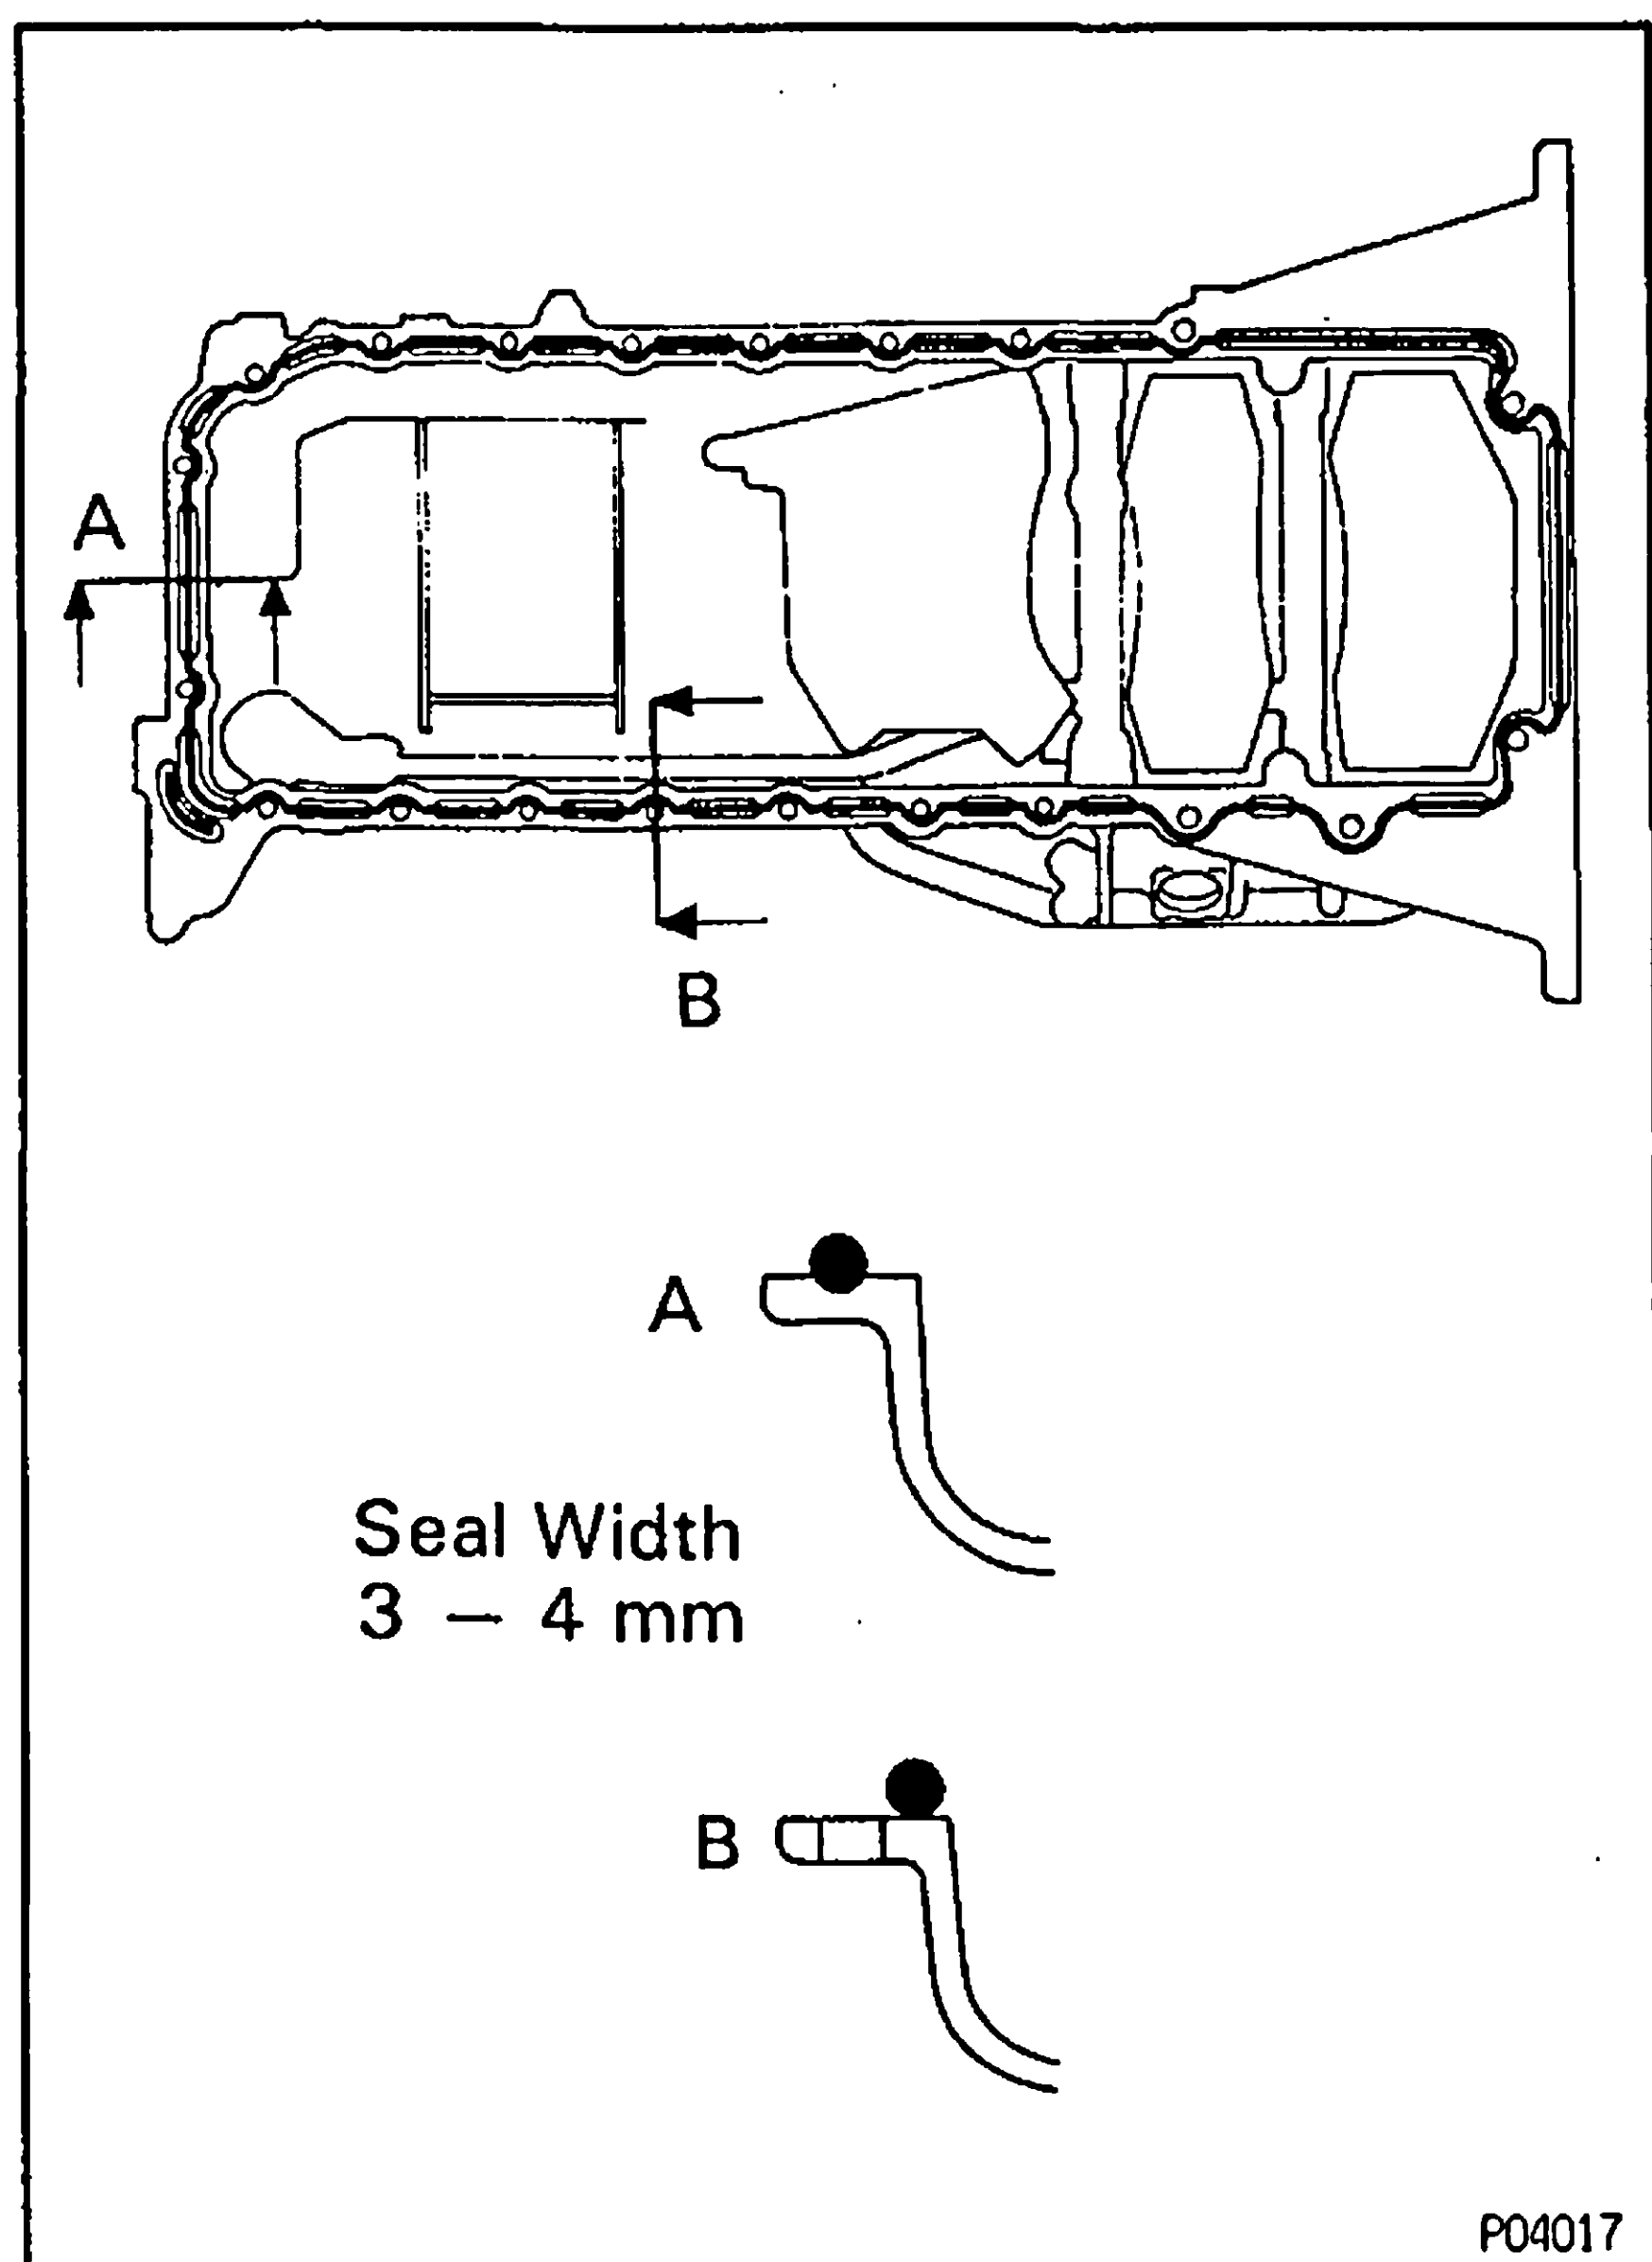


- Using a non-residue solvent, clean both sealing surfaces.
- (b) Apply seal packing to the No.1 oil pan as shown in the illustration.

Seal packing:**Part No.08826-00080 or equivalent**


- Install a nozzle that has been cut to a 3 - 4 mm (0.12 - 0.16 in.) opening.

HINT: Avoid applying an excessive amount to the surface.


- Parts must be assembled within 5 minutes of application. Otherwise the material must be removed and reapplied.
- Immediately remove nozzle from the tube and reinstall cap.

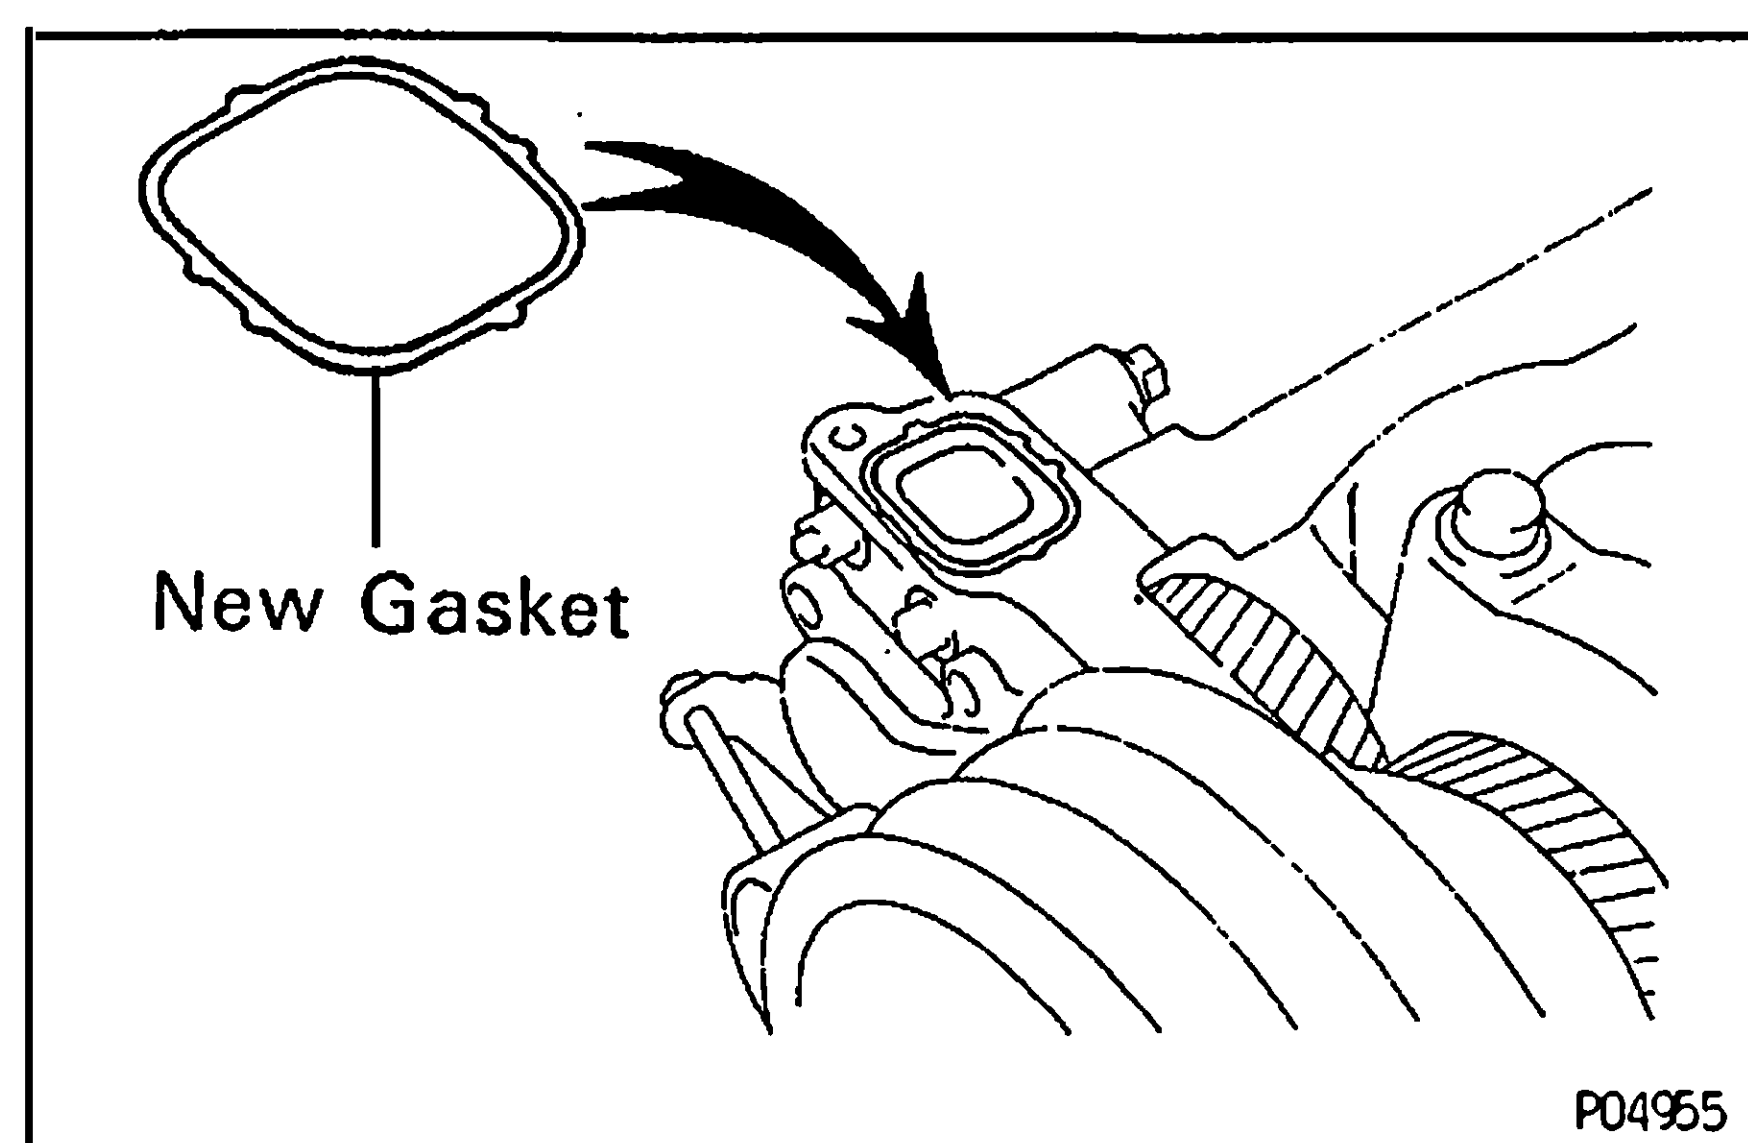


- (c) Install a new gasket in position.

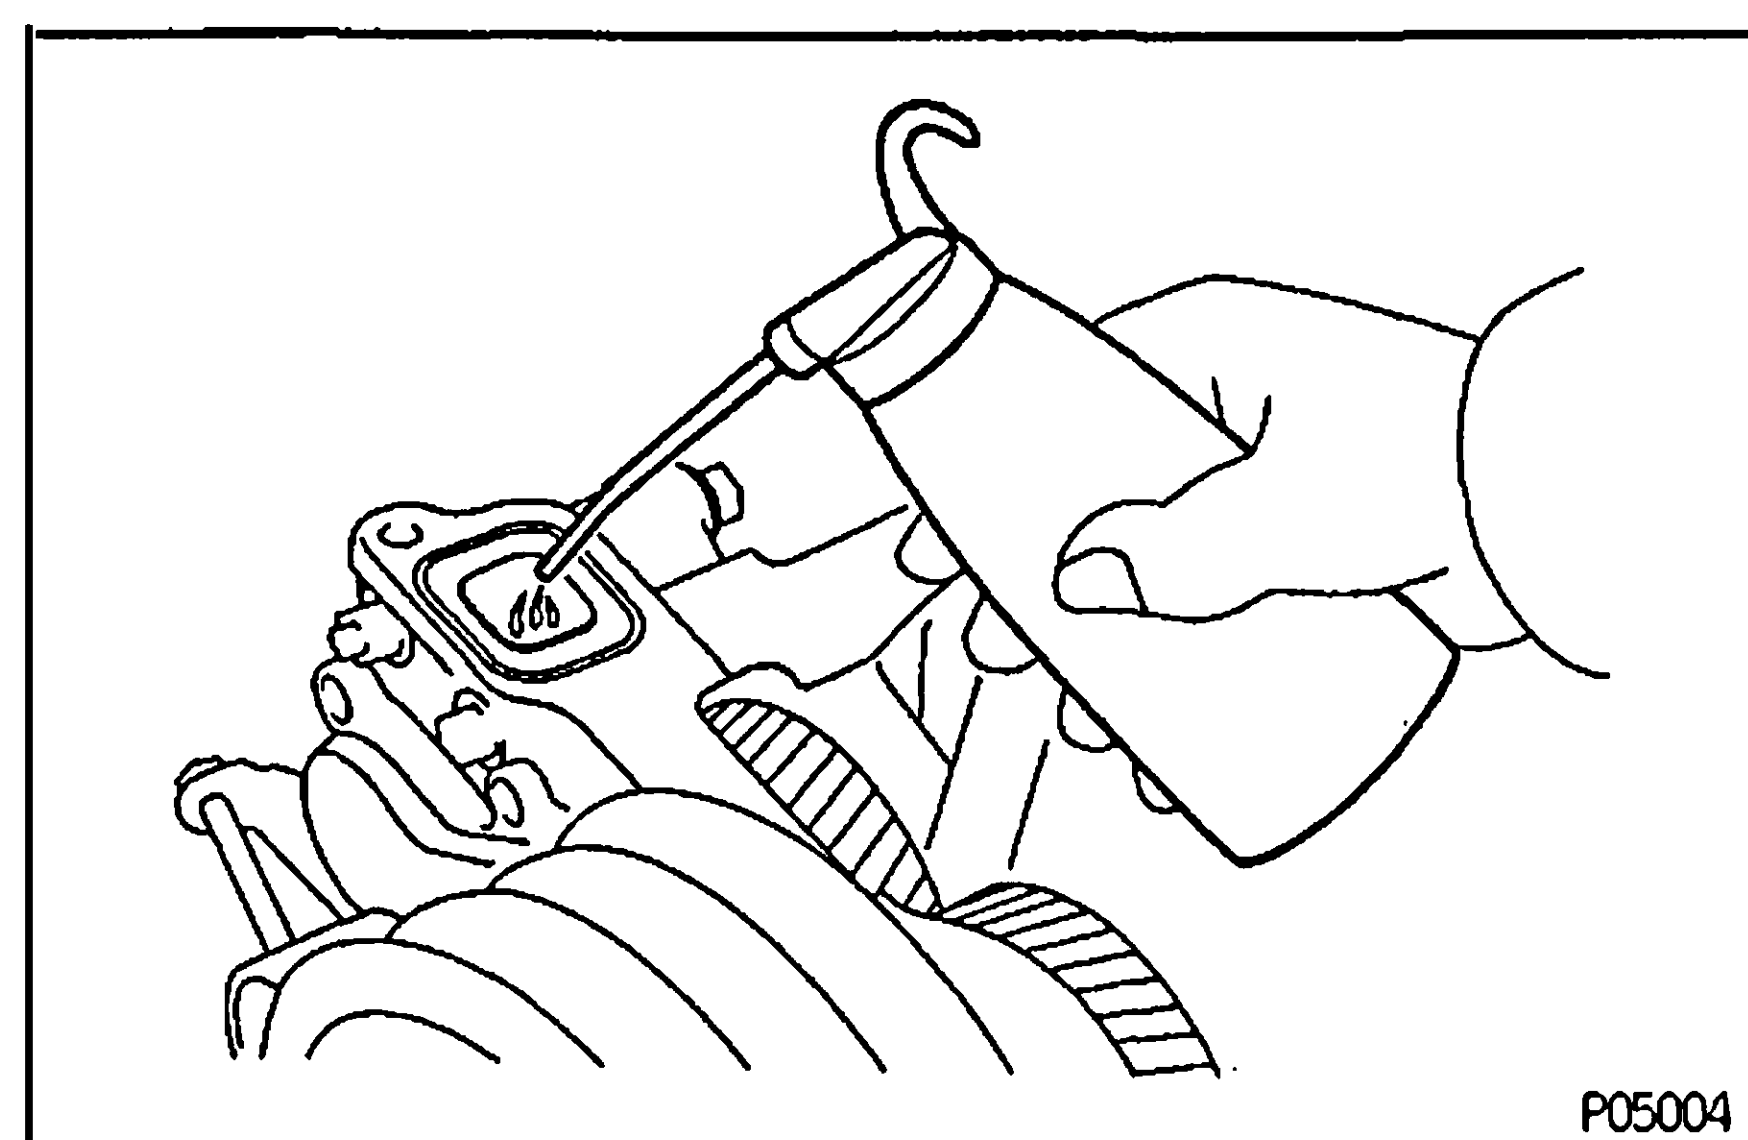

- (d) Pour in approximately 15 cm³ (0.9 cu in.) of engine oil in position.

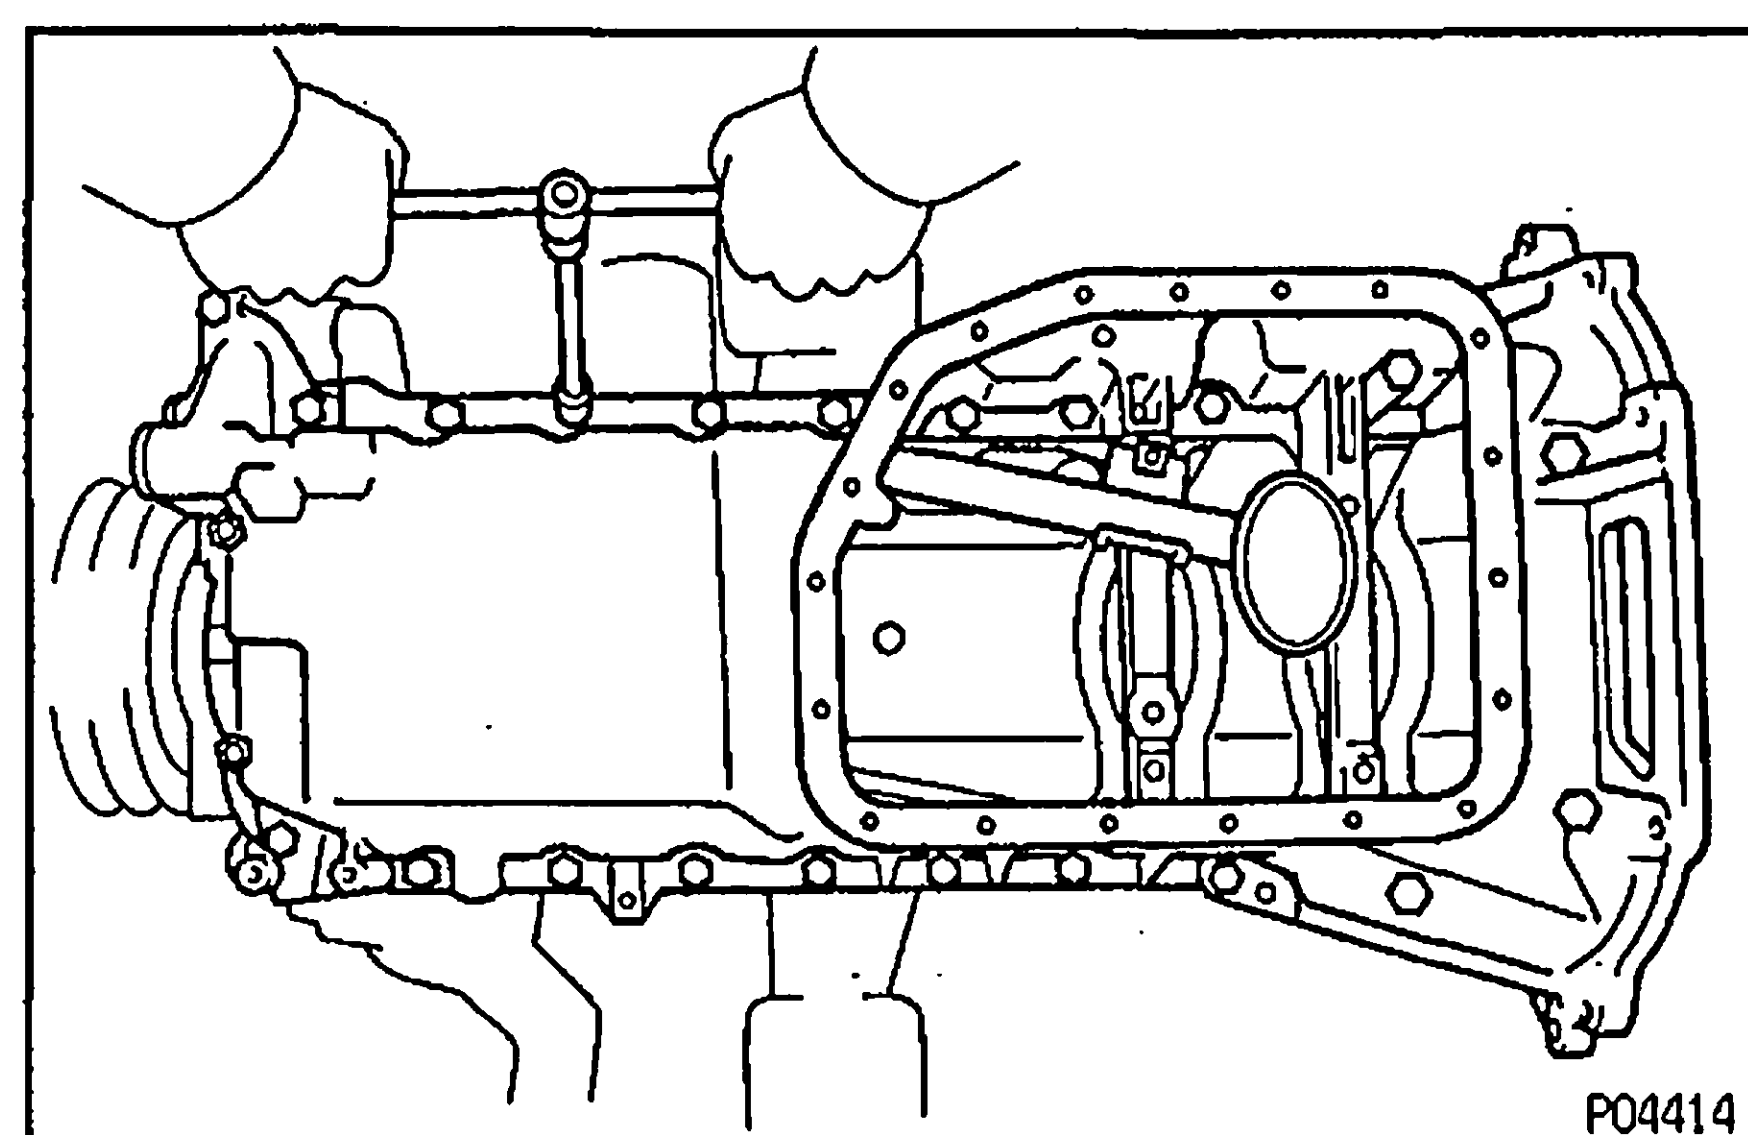

- (e) Install the No.1 oil pan with the 21 bolts and two nuts.
- 14mm head**
Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)
- 12mm head**
Torque: 20 N·m (200 kgf·cm, 14 ft·lbf)

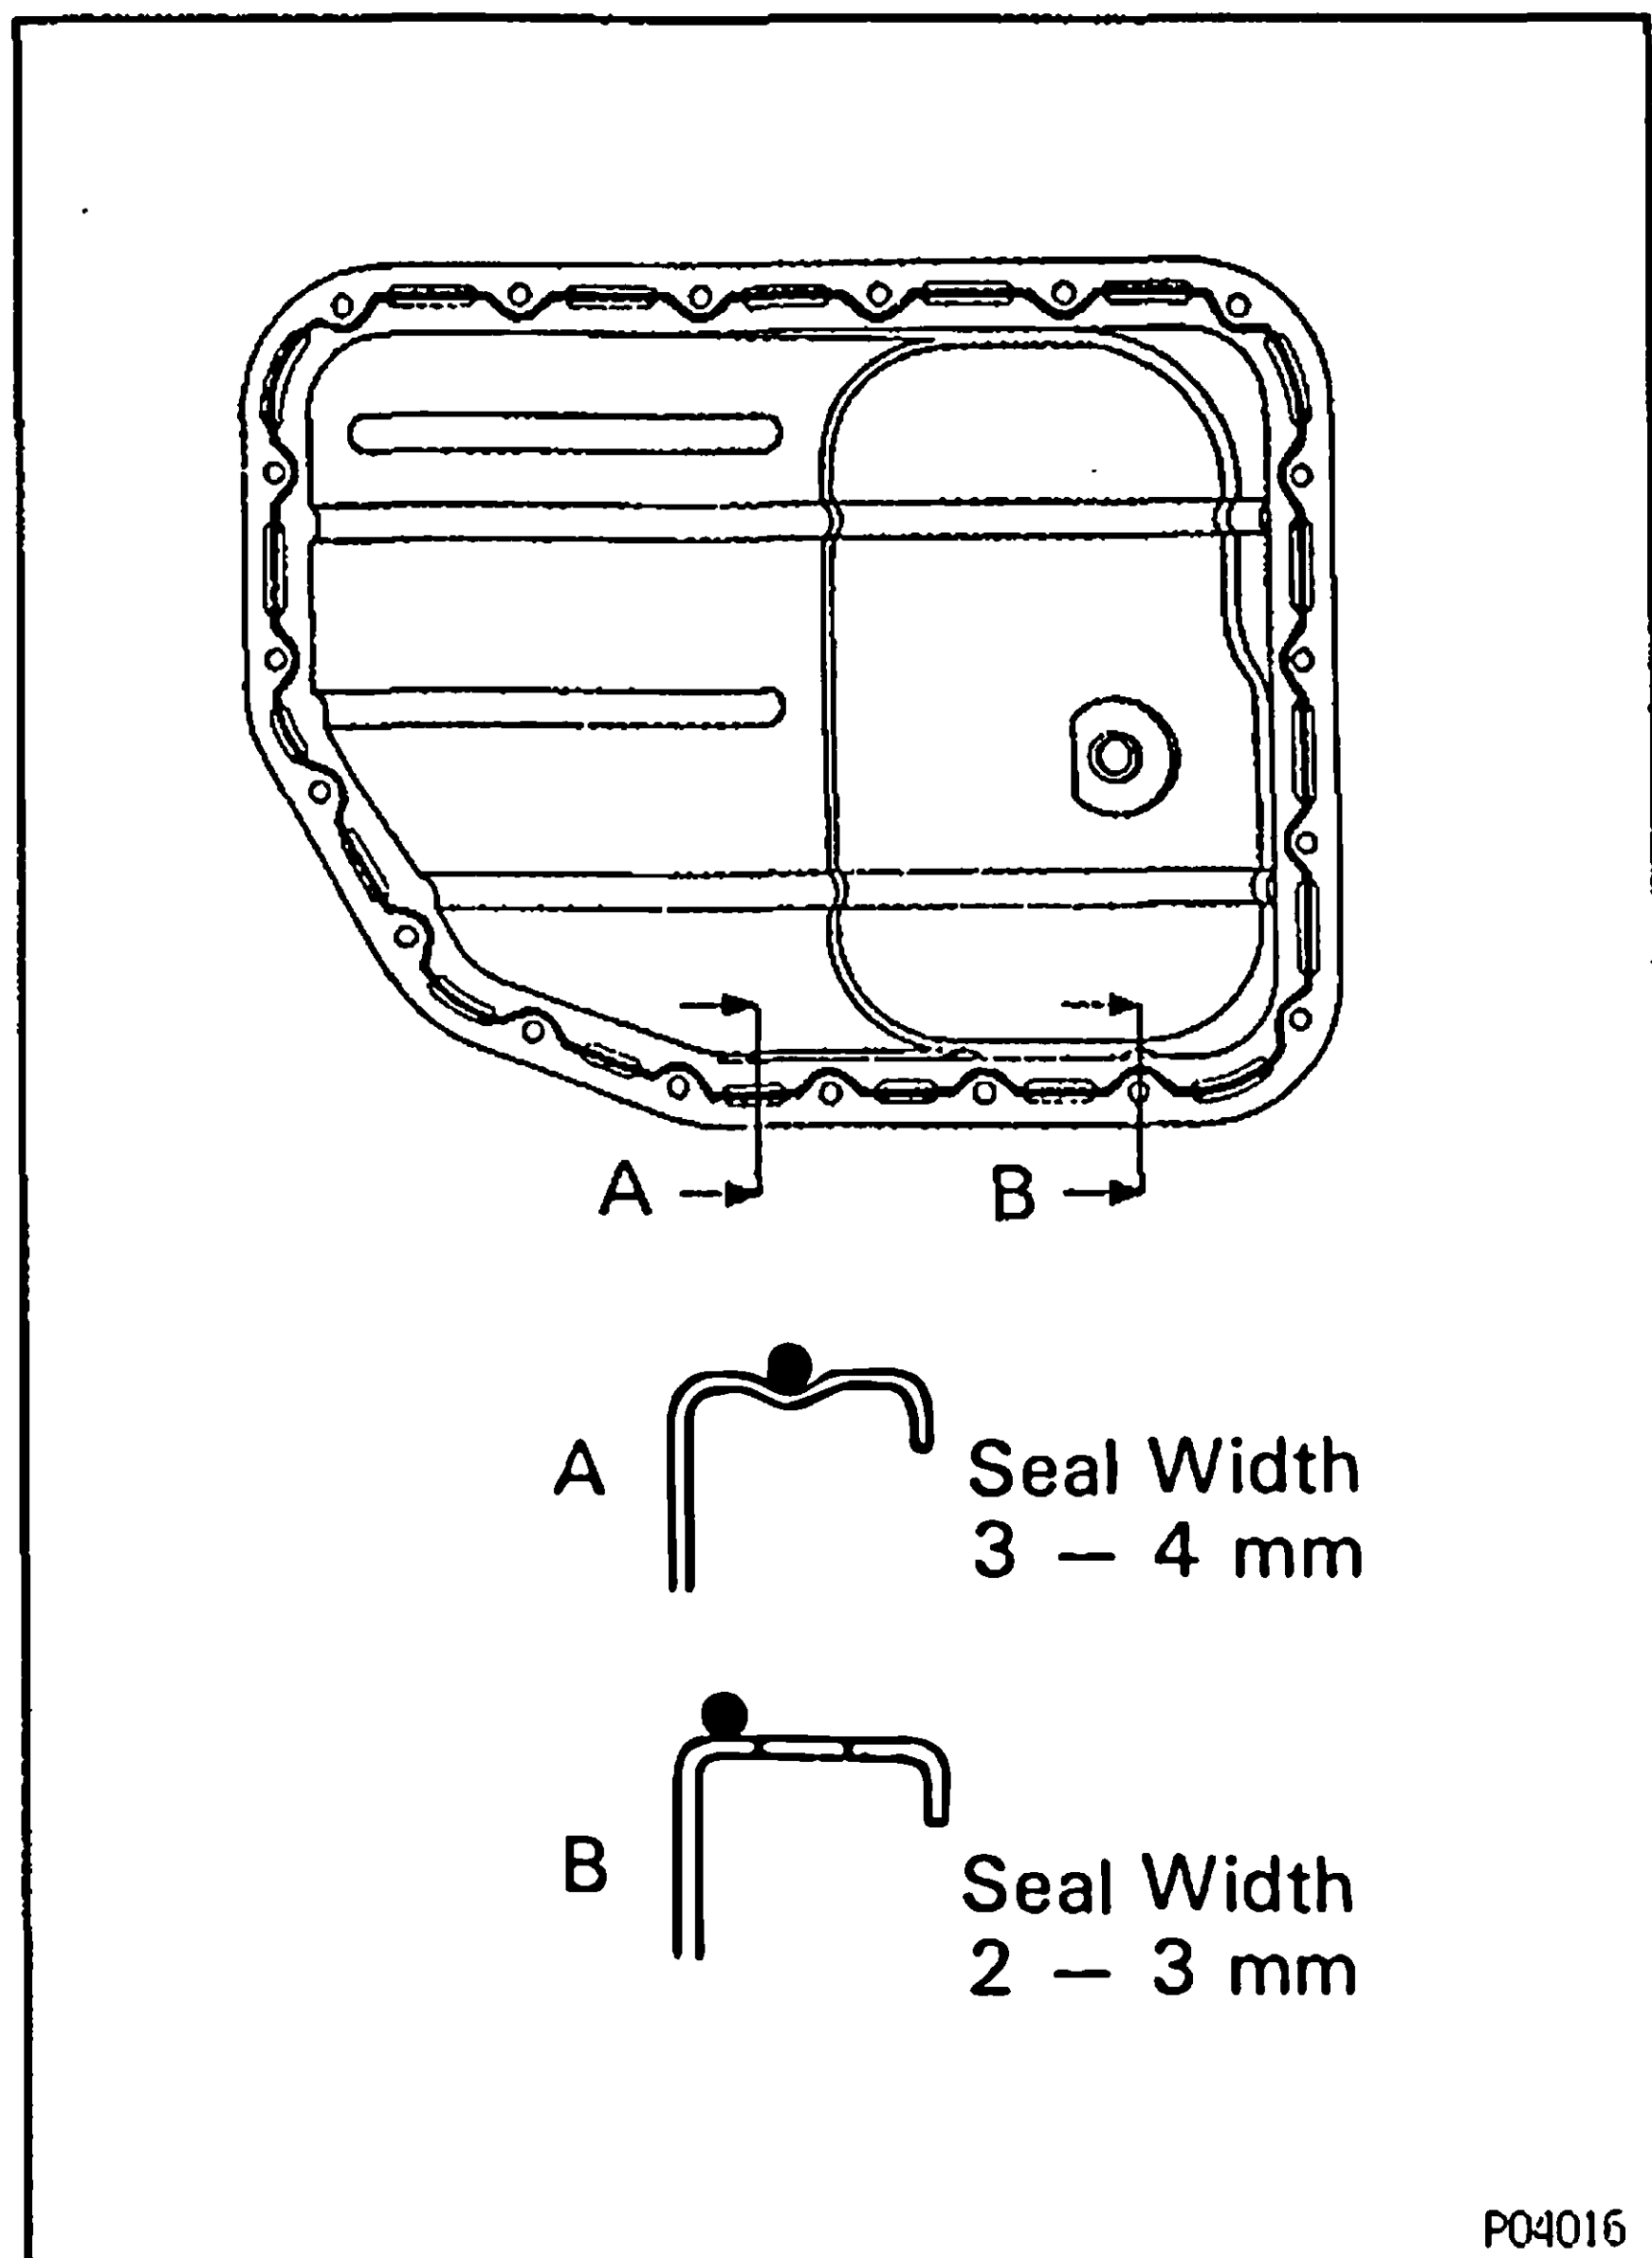

12. INSTALL NO.2 OIL PAN

- (a) Remove any old packing (FIPG) material and be careful not to drop any oil on the contact surface of the No.1 oil pan.

- Using a razor blade and gasket scraper, remove all the old packing (FIPG) material from the gasket surfaces and sealing grooves.
- Thoroughly clean all components to remove all the loose material.
- Using a non-residue solvent, clean both sealing surfaces.

- (b) Apply seal packing to the No.2 oil pan as shown in the illustration.

NOTICE: Do not use a solvent which will affect the painted surfaces.


Seal packing:

Part No.08826–00080 or equivalent

- Install a nozzle that has been cut to a 2 – 3 mm (0.08 – 0.12 in.) opening or 3 – 4 mm (0.012 – 0.016 in.) opening.

HINT: Avoid applying an excessive amount to the surface.

- Parts must be assembled within 5 minutes of application. Otherwise the material must be removed and reapplied.
- Immediately remove nozzle from the tube and reinstall cap.

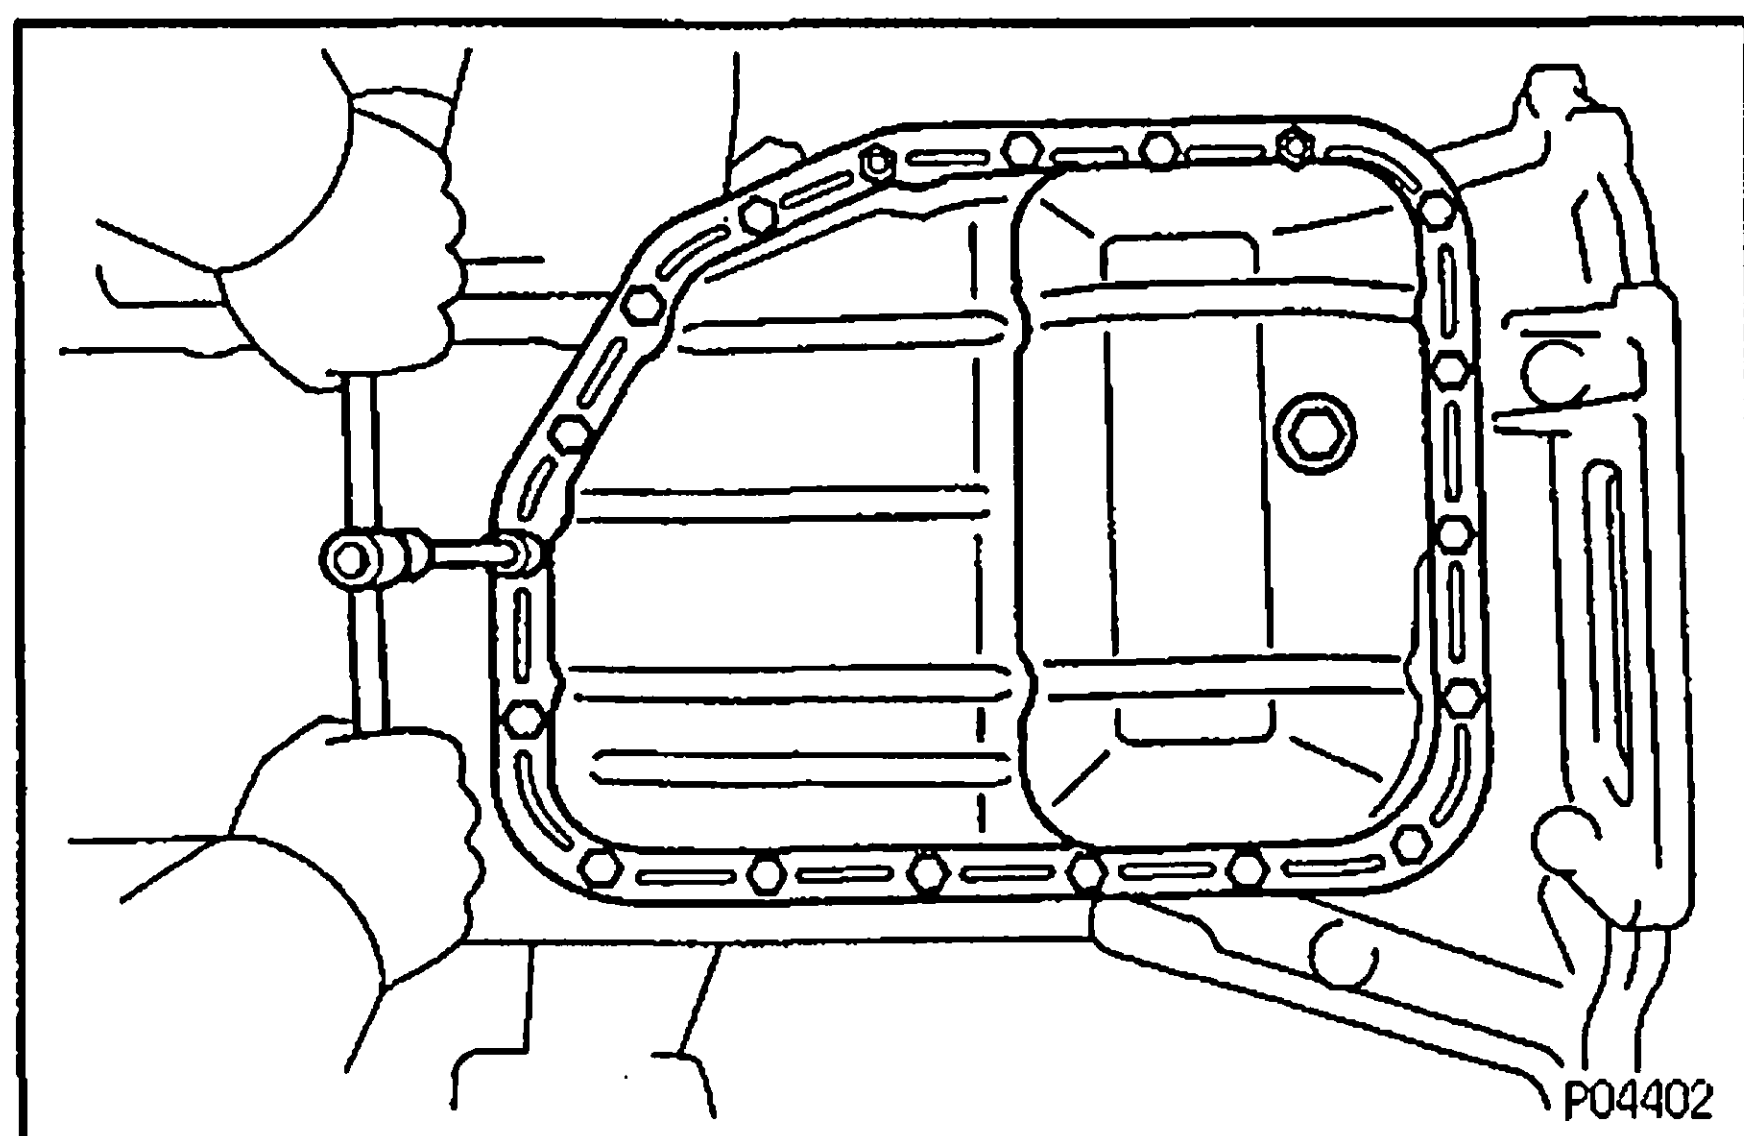


- (c) Install the No.2 oil pan with the 17 bolts and two nuts.

Bolt

Torque: 7.8 N·m (80 kgf·cm, 69 in.-lbf)


Nut

Torque: 8.8 N·m (90 kgf·cm, 78 in.-lbf)

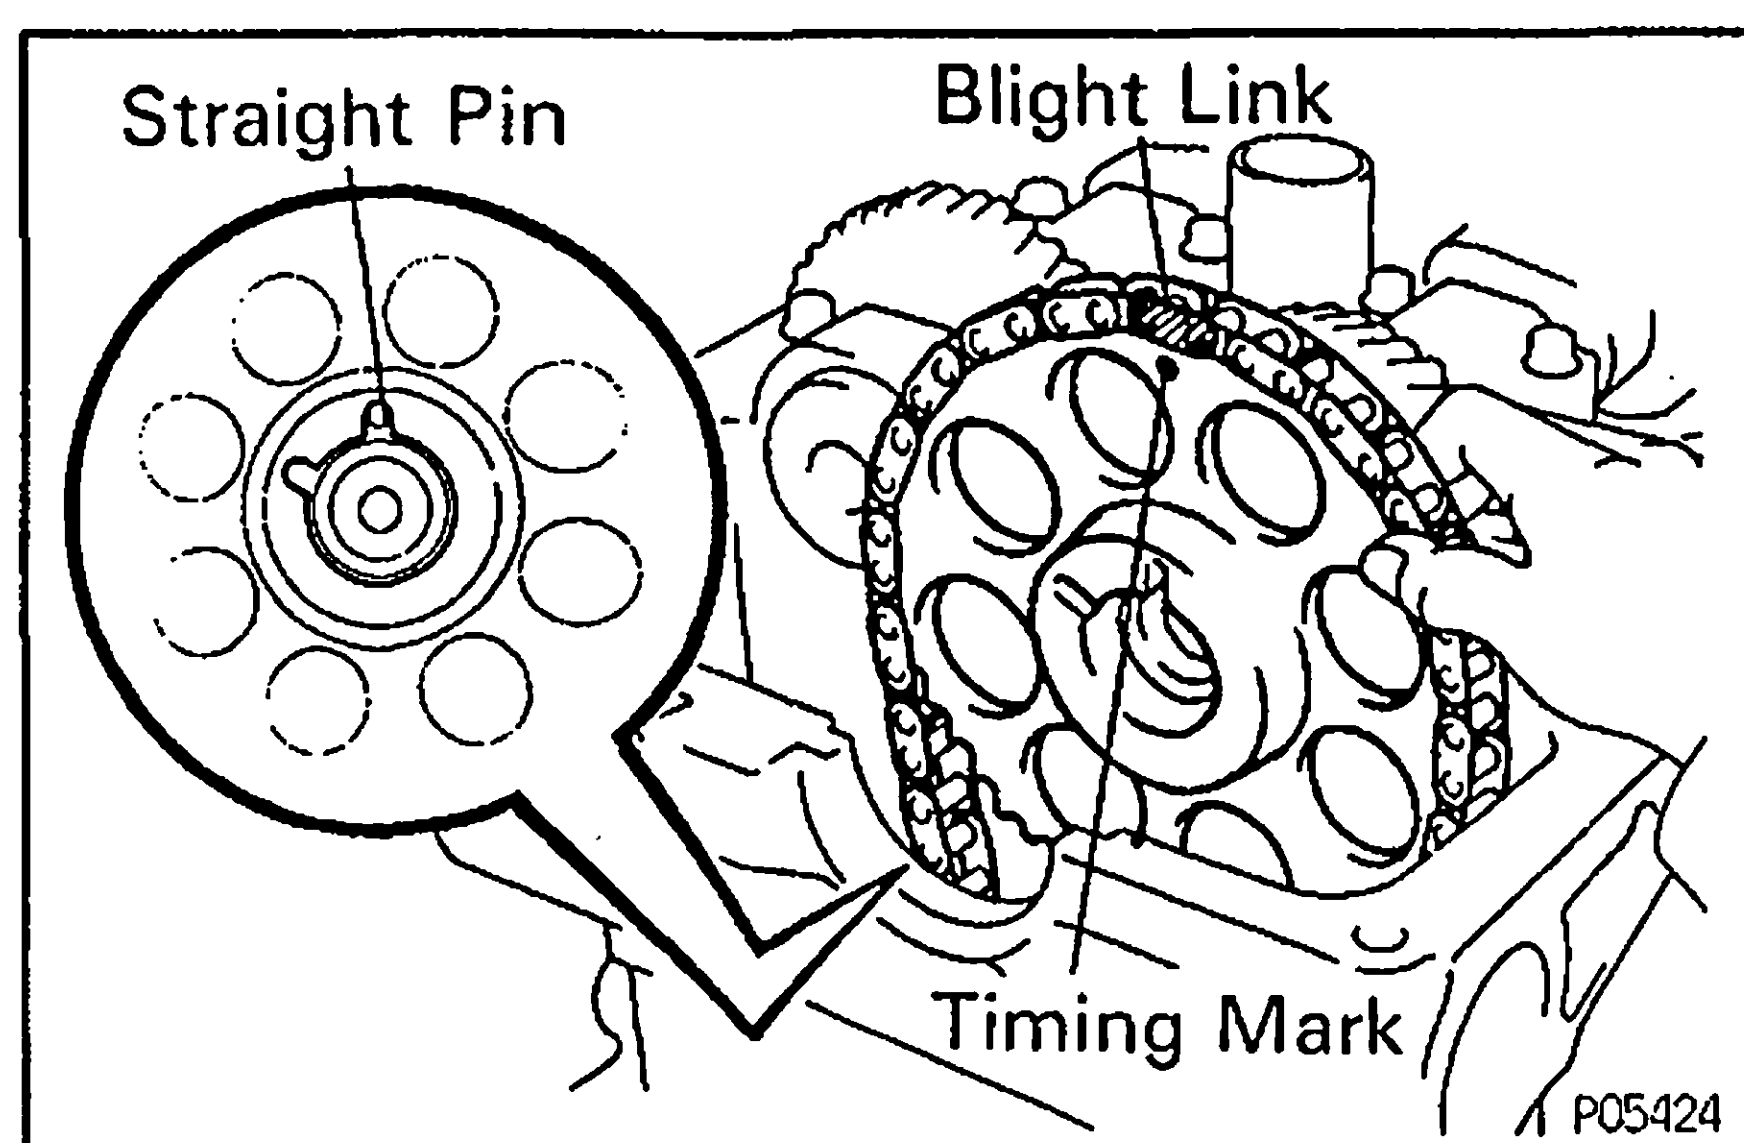


13. INSTALL CYLINDER HEAD (See page EG–60)

NOTICE: However, for the installation of the camshaft timing gear and timing chain, follow the blow procedure. Align the blight link of the timing chain and camshaft timing gear mark, and install them to the camshaft.

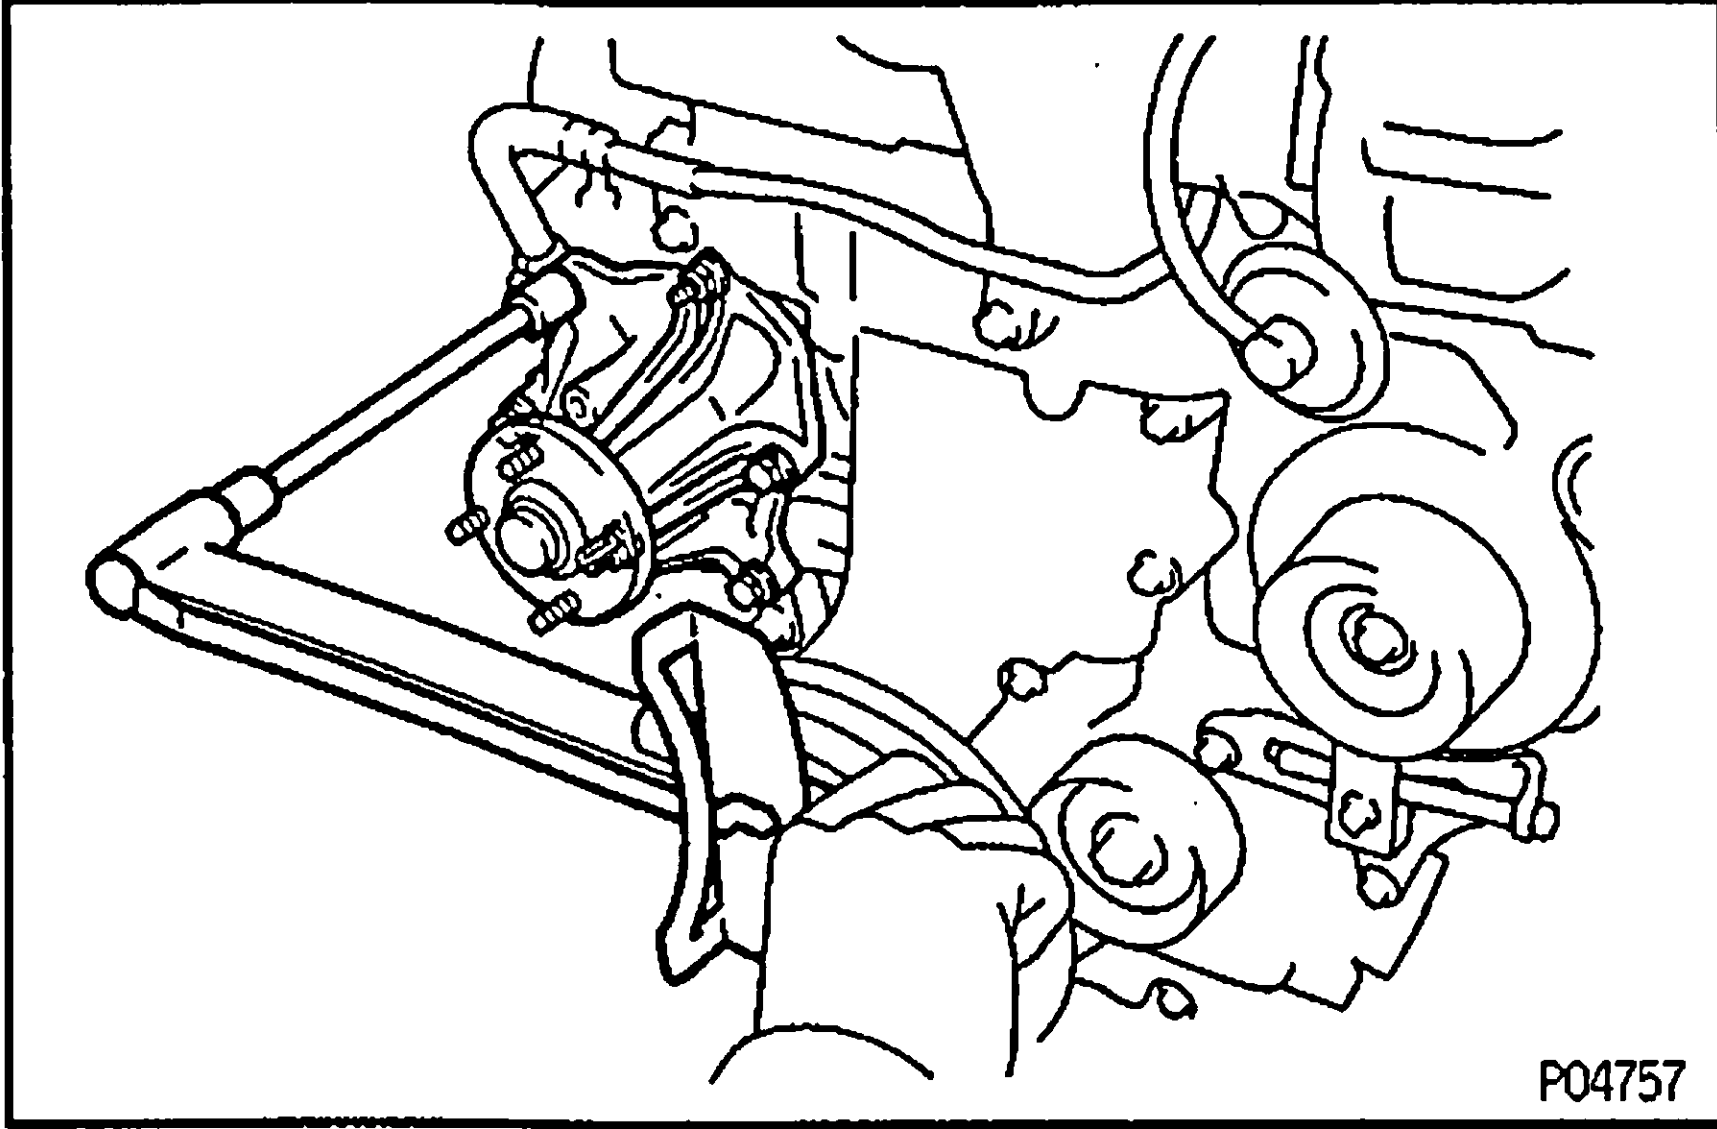**14. INSTALL WATER PUMP**

Install a new gasket and water pump with the four bolts and two nuts.


Torque: 21N·m (210 kgf·cm, 14 ft·lbf)

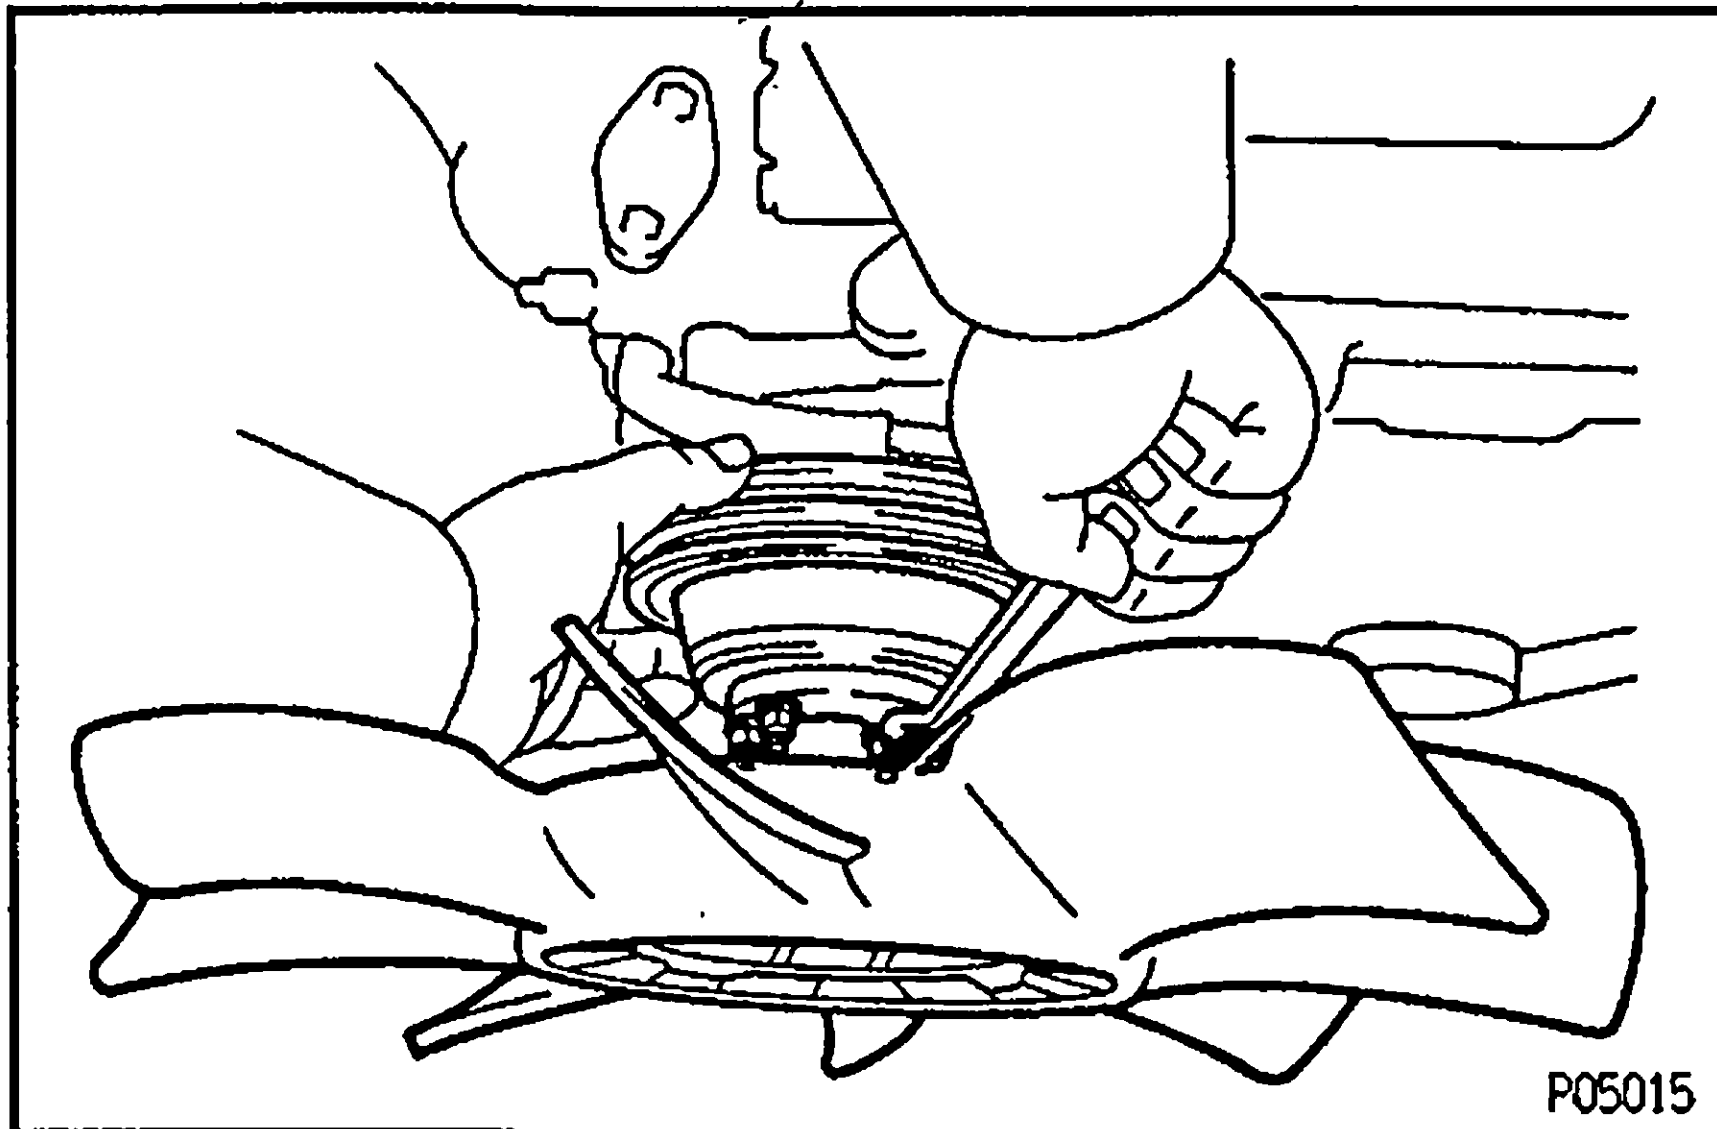**15. INSTALL WATER PUMP PULLEY, FAN WITH FLUID COUPLING AND DRIVE BELTS**

- (a) Install the water pump pulley and fan with fluid coupling with the four nuts.
- (b) Place the drive belts on to each pulley.
- (c) Stretch the belts tight and tighten the four nuts.
- (d) Adjust the drive belts.


CYLINDER BLOCK COMPONENTS

EG085-02

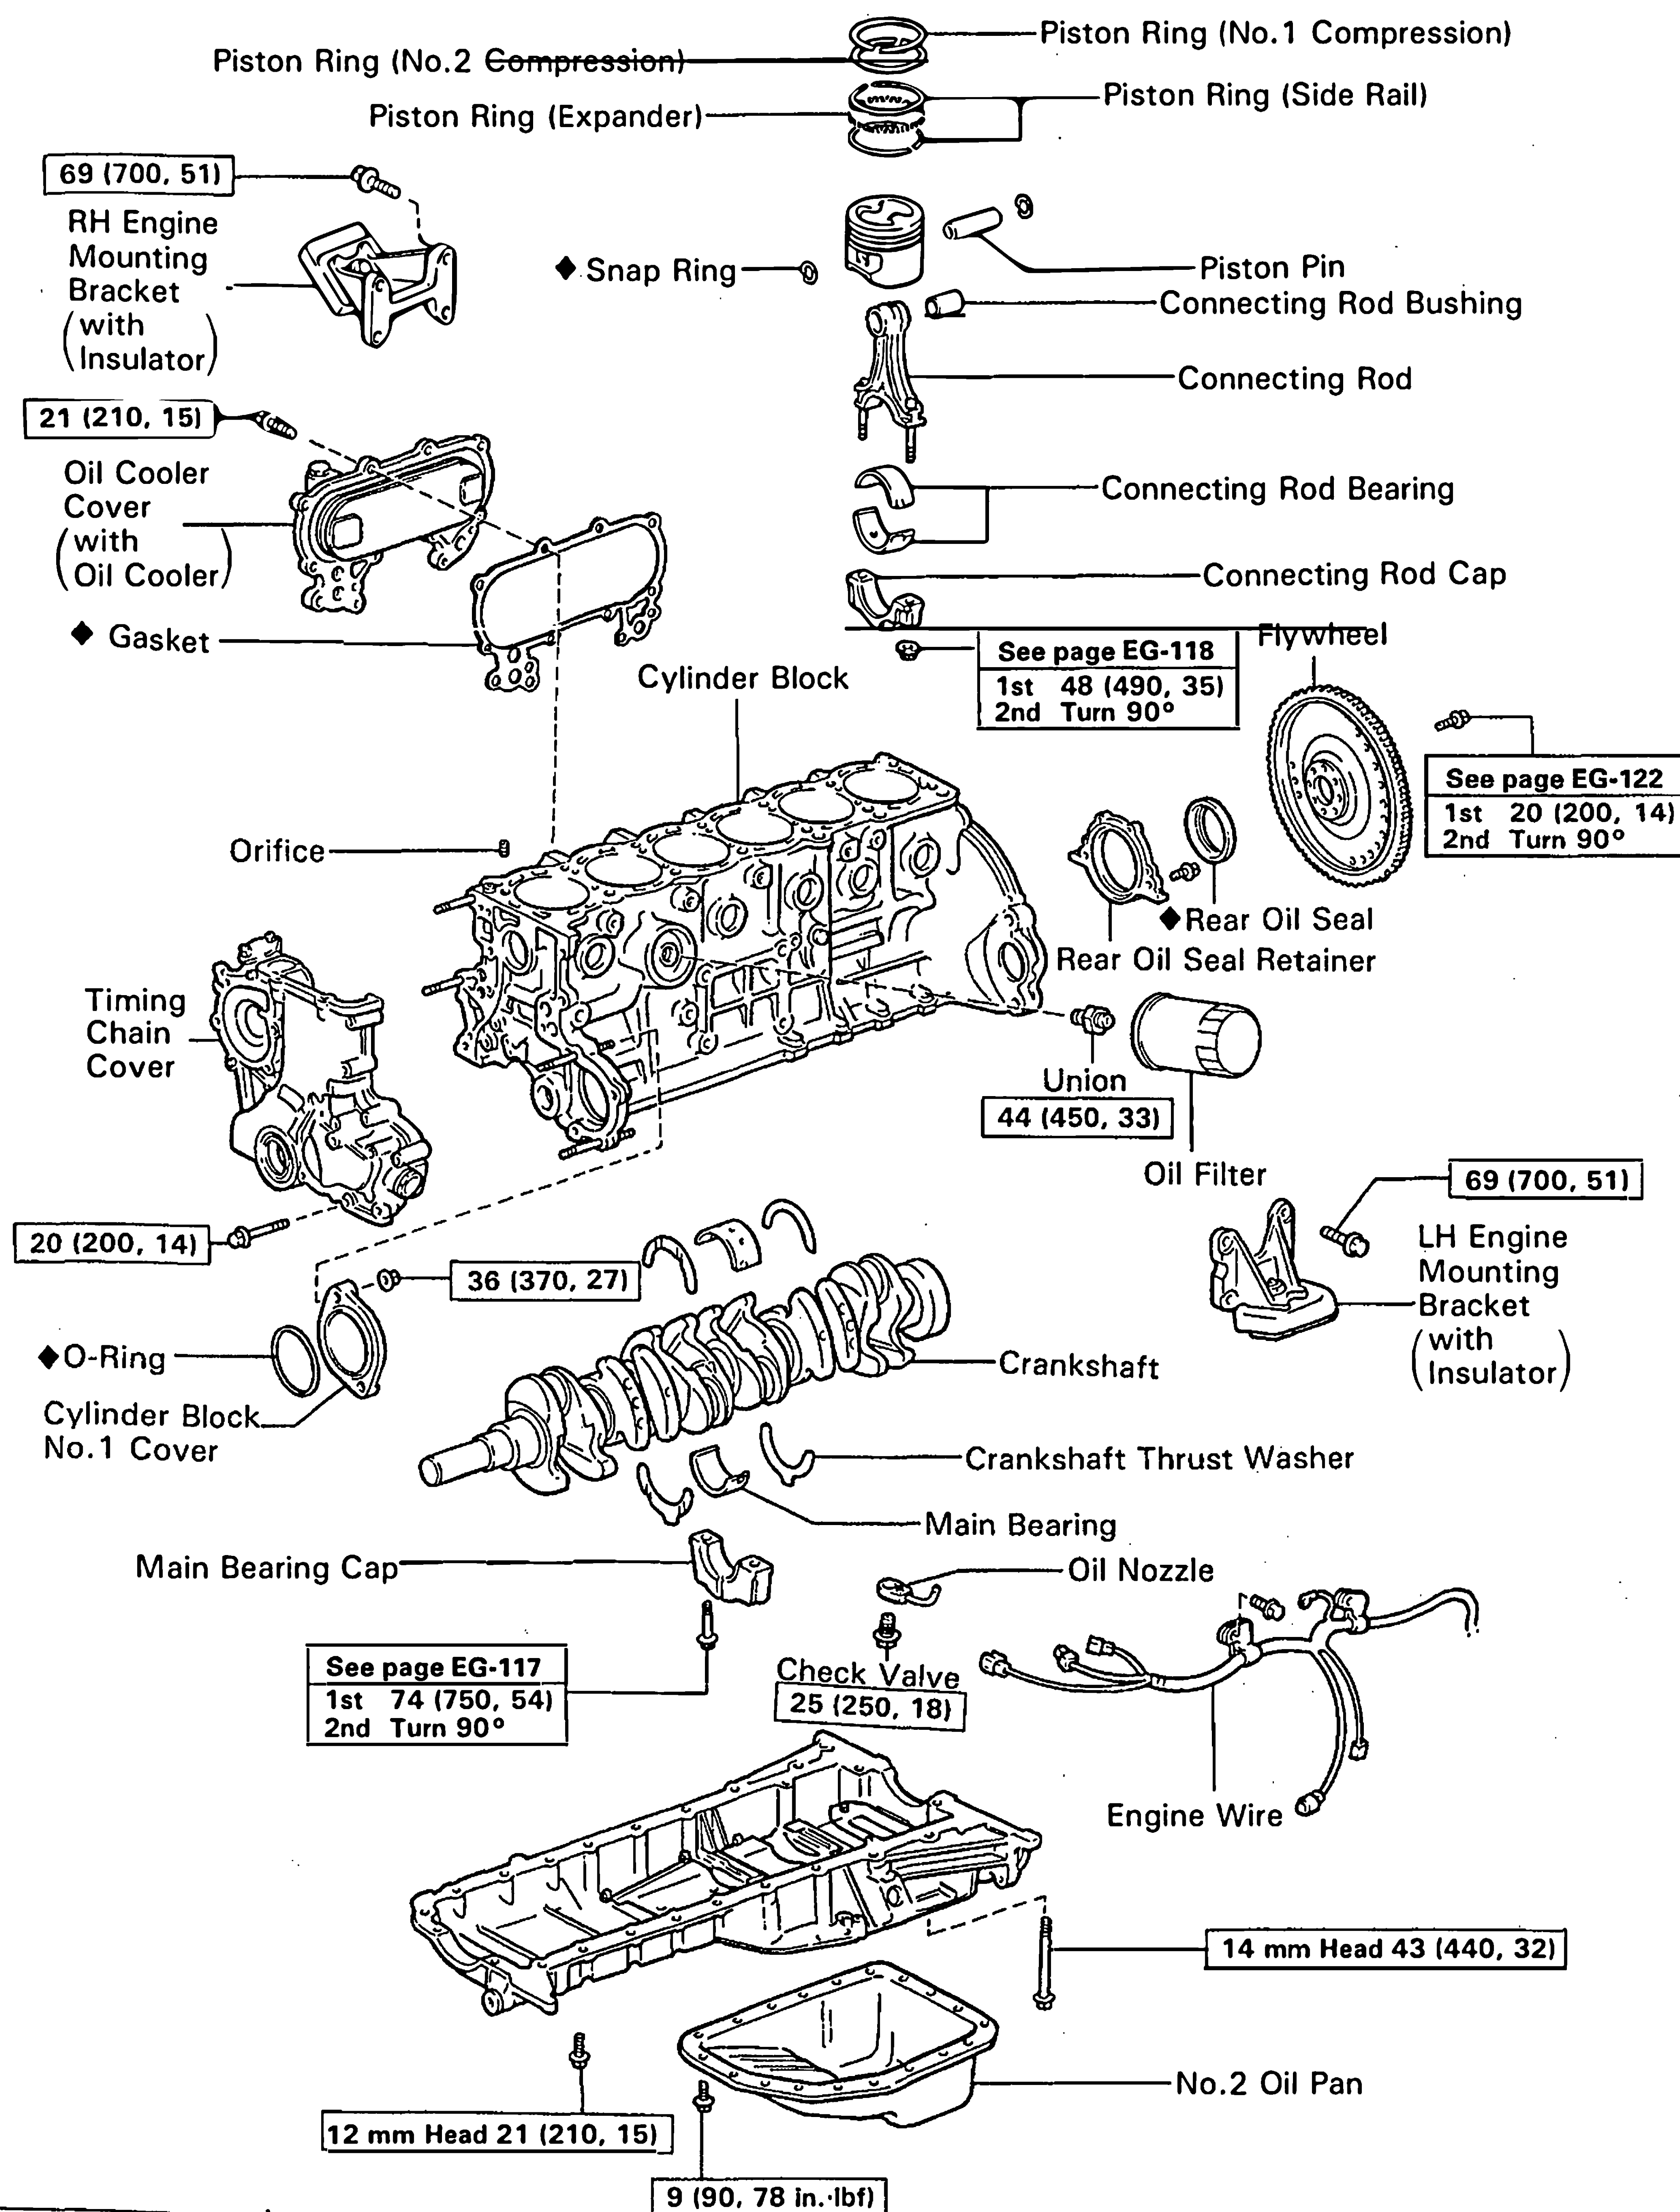

N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part

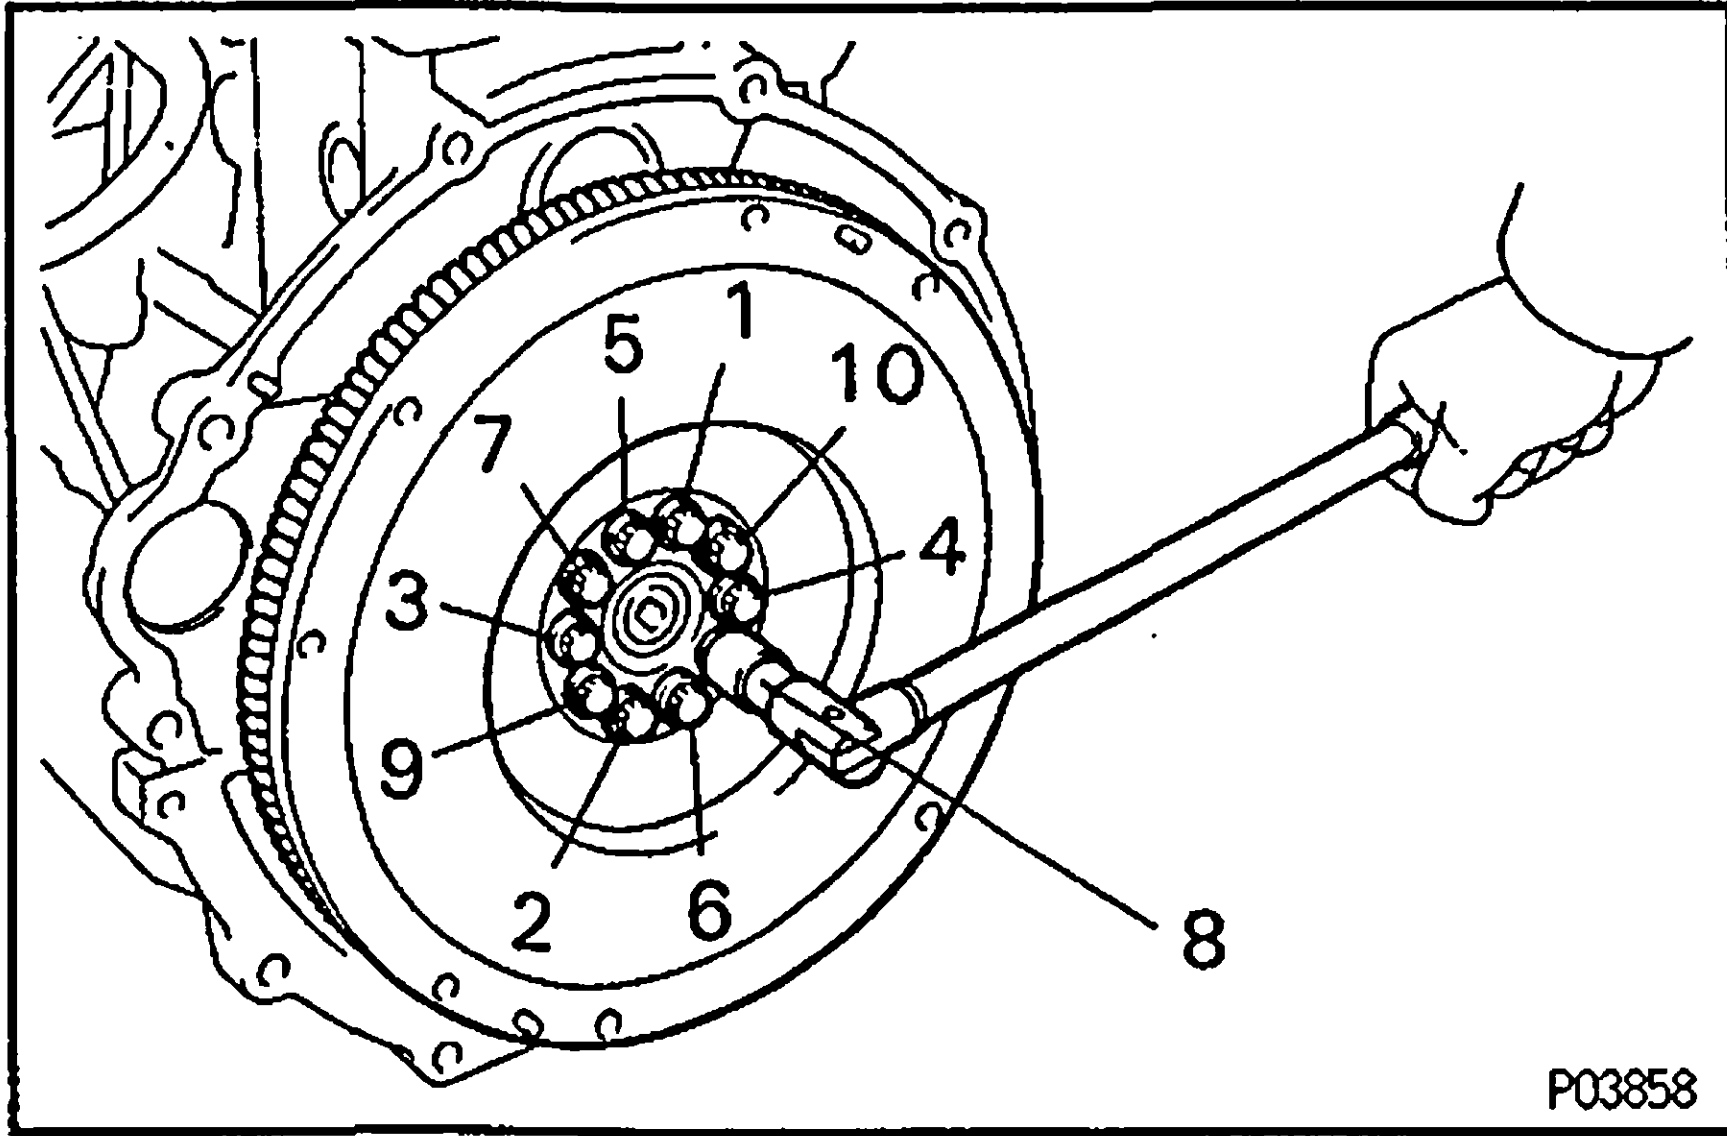

PREPARATION FOR DISASSEMBLY

1. REMOVE CLUTCH COVER AND DISC

2. REMOVE FLYWHEEL

Uniformly loosen and remove the flywheel bolts in several passes, in the sequence shown.


3. INSTALL ENGINE TO ENGINE STAND FOR DISASSEMBLY

4. REMOVE CYLINDER HEAD

(See page EG—33)


5. REMOVE TIMING CHAIN

(See page EG—75)

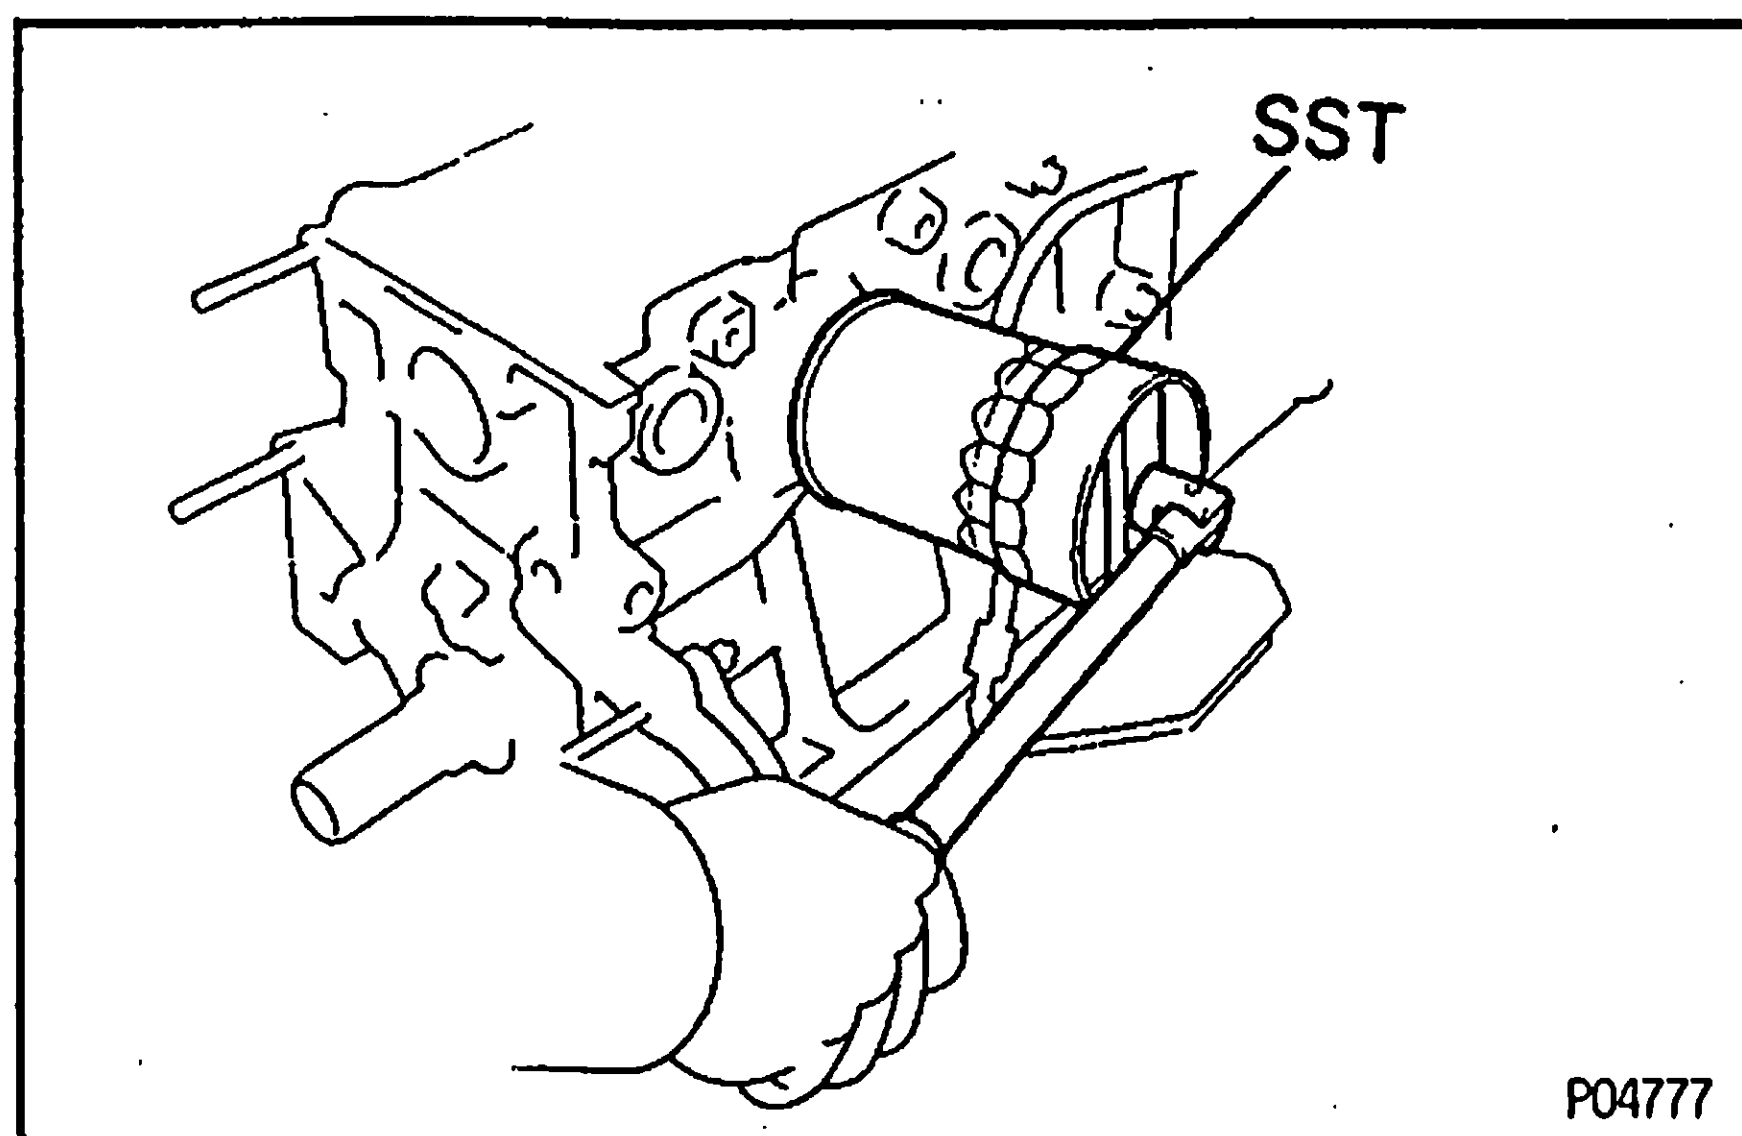


6. REMOVE OIL FILTER

Using SST, remove the oil filter.
SST 09228-44011

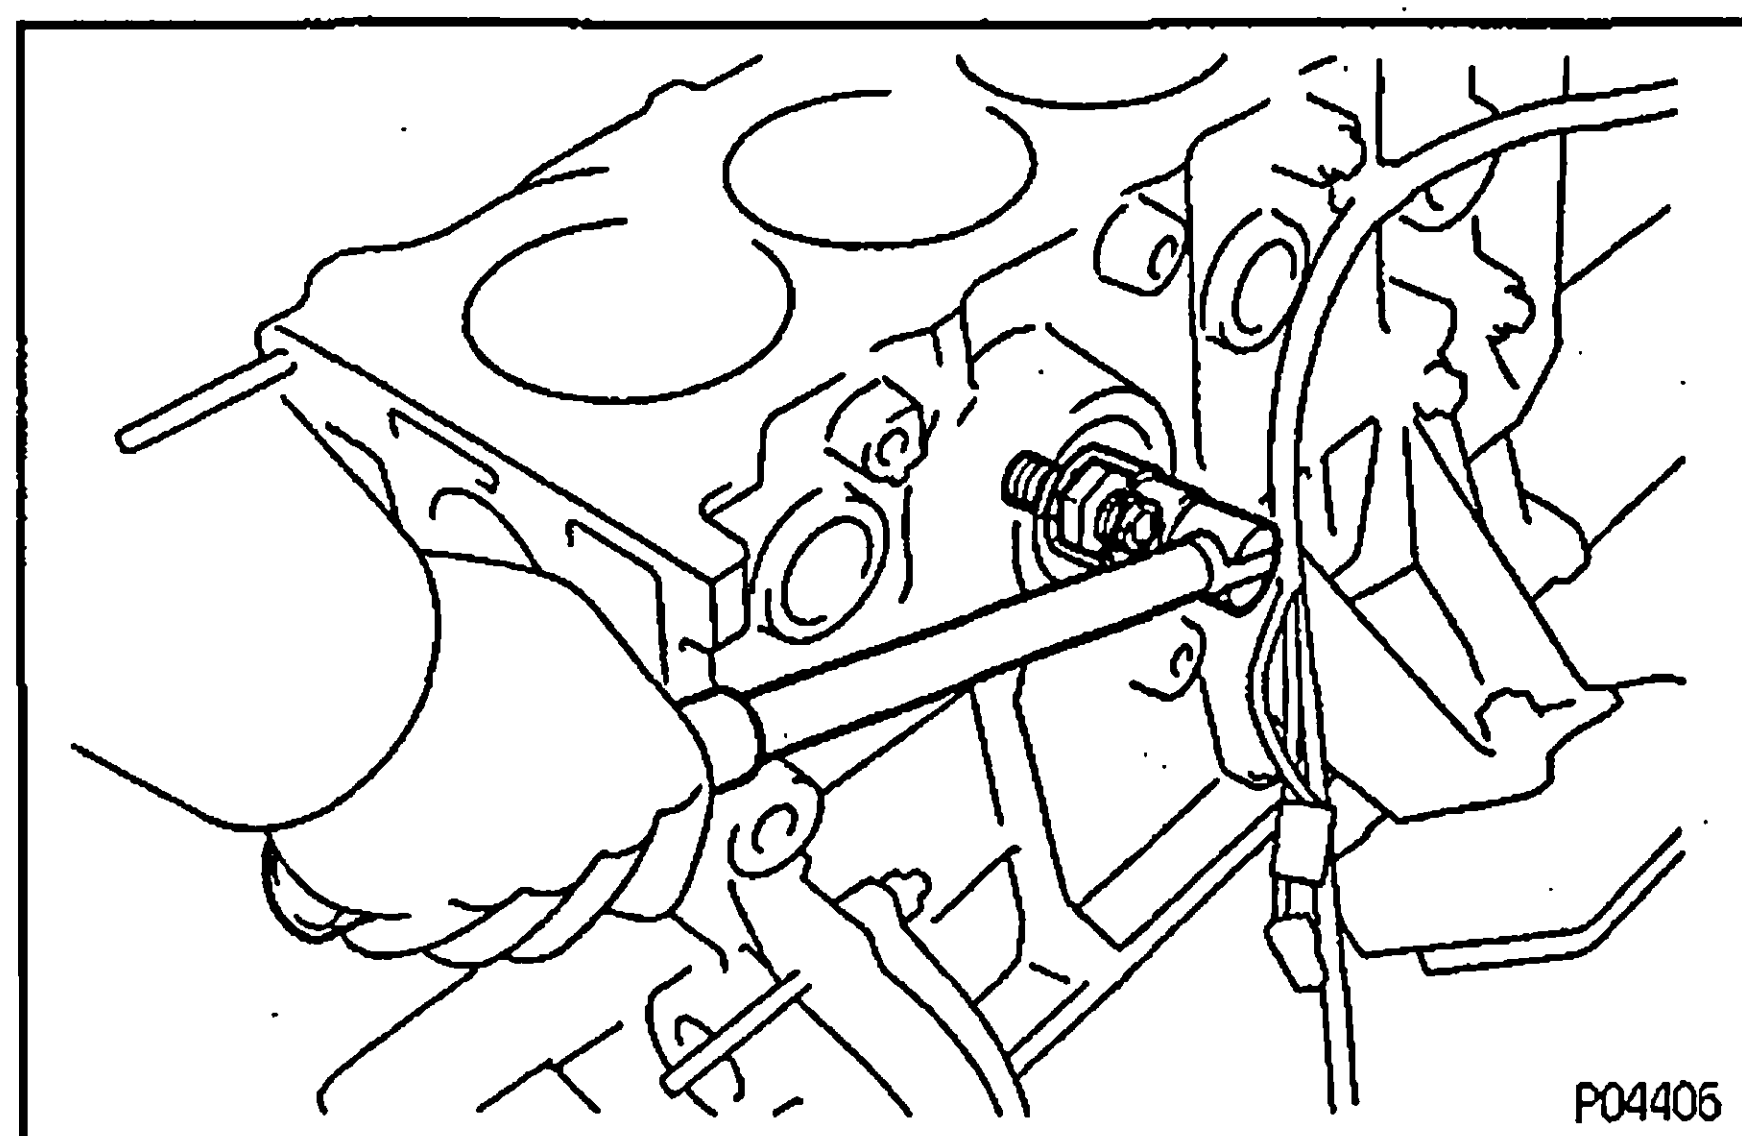


7. REMOVE OIL FILTER UNION

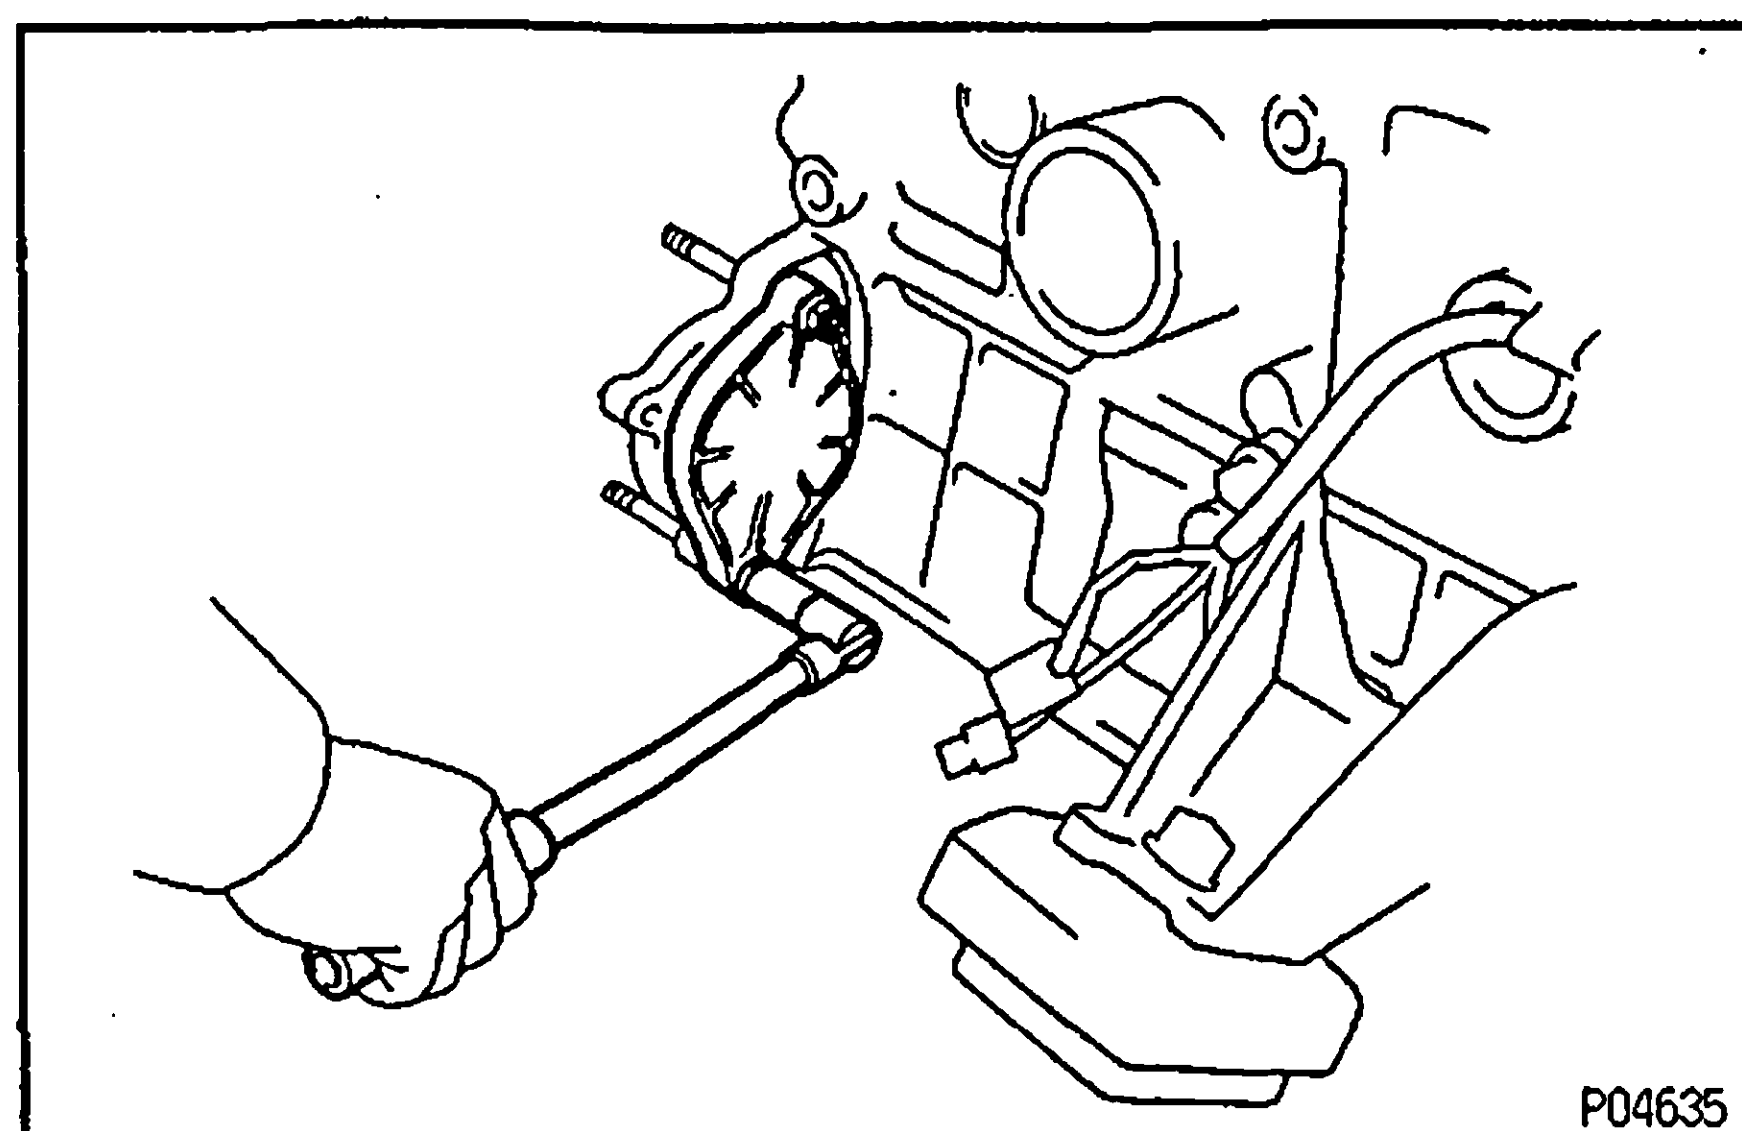

8. REMOVE CYLINDER BLOCK NO.1 COVER


(a) Remove the two nuts and cover.

(b) Remove the O-ring from the cover.

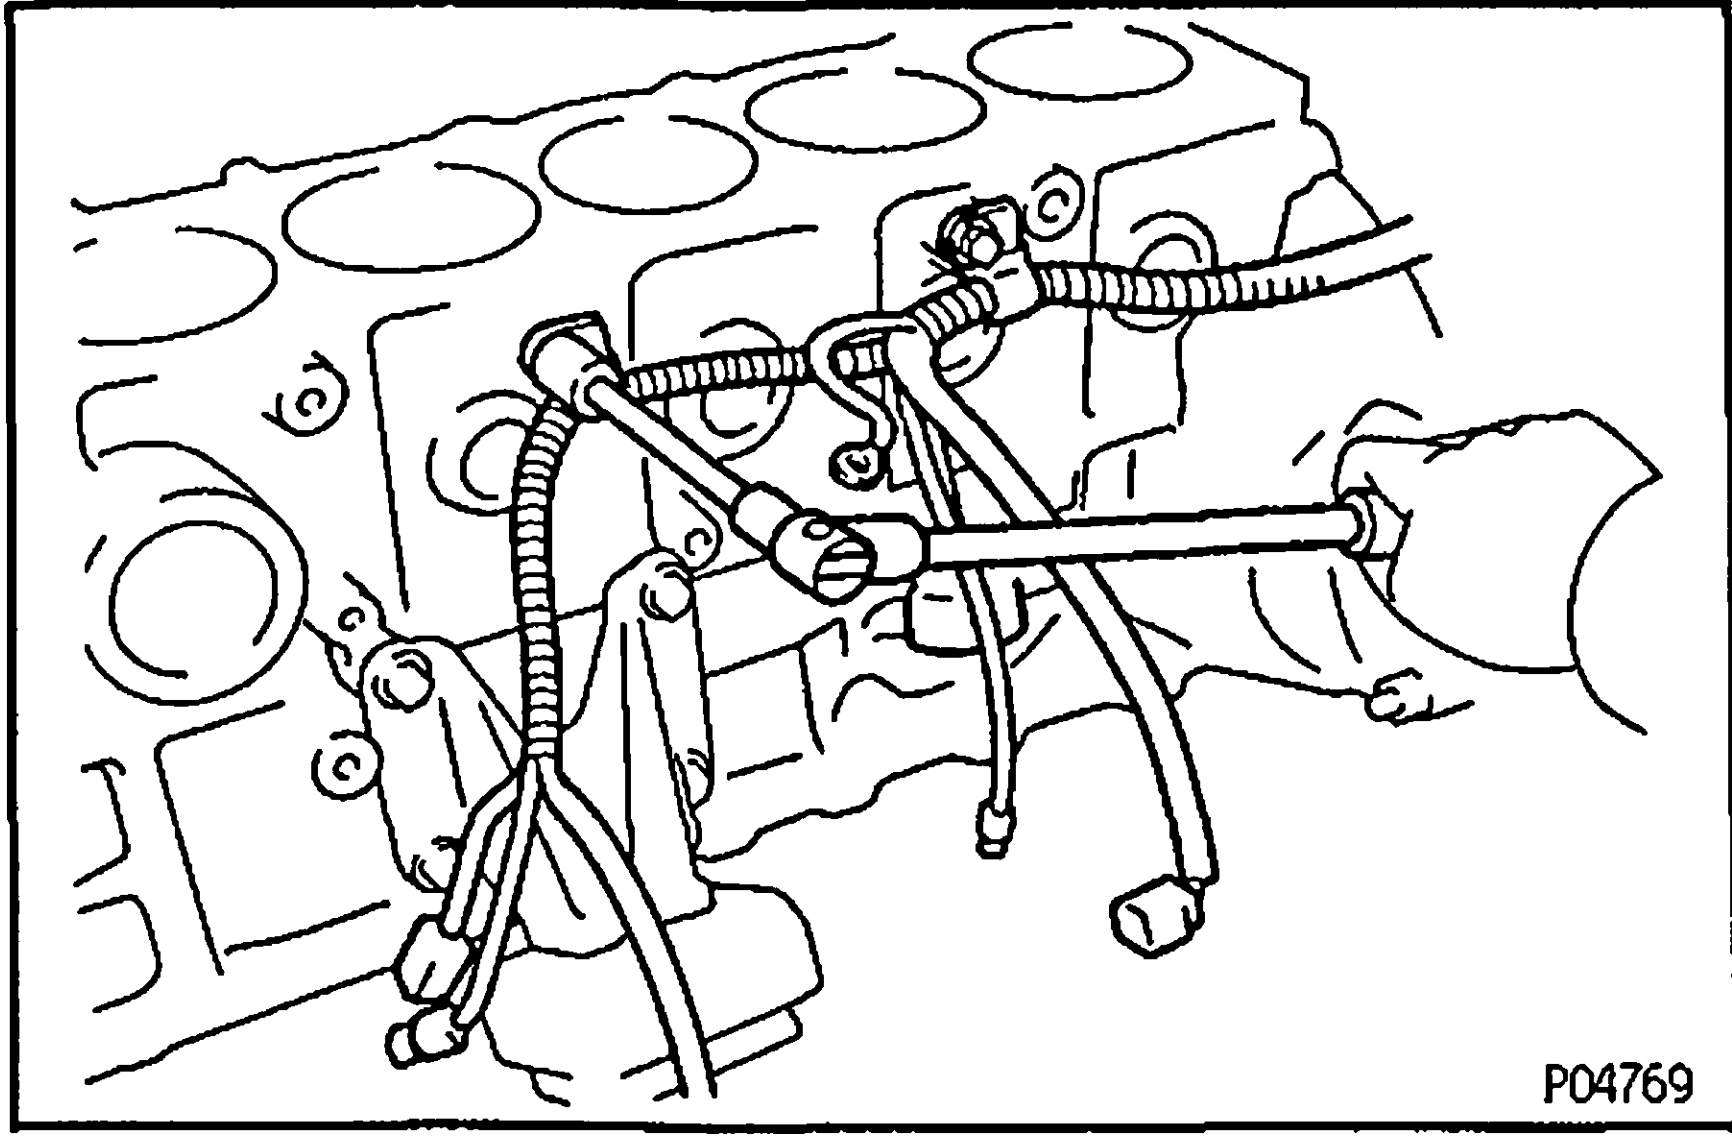
**9. REMOVE ENGINE WIRE**

Remove the two bolts and engine wire.


EG

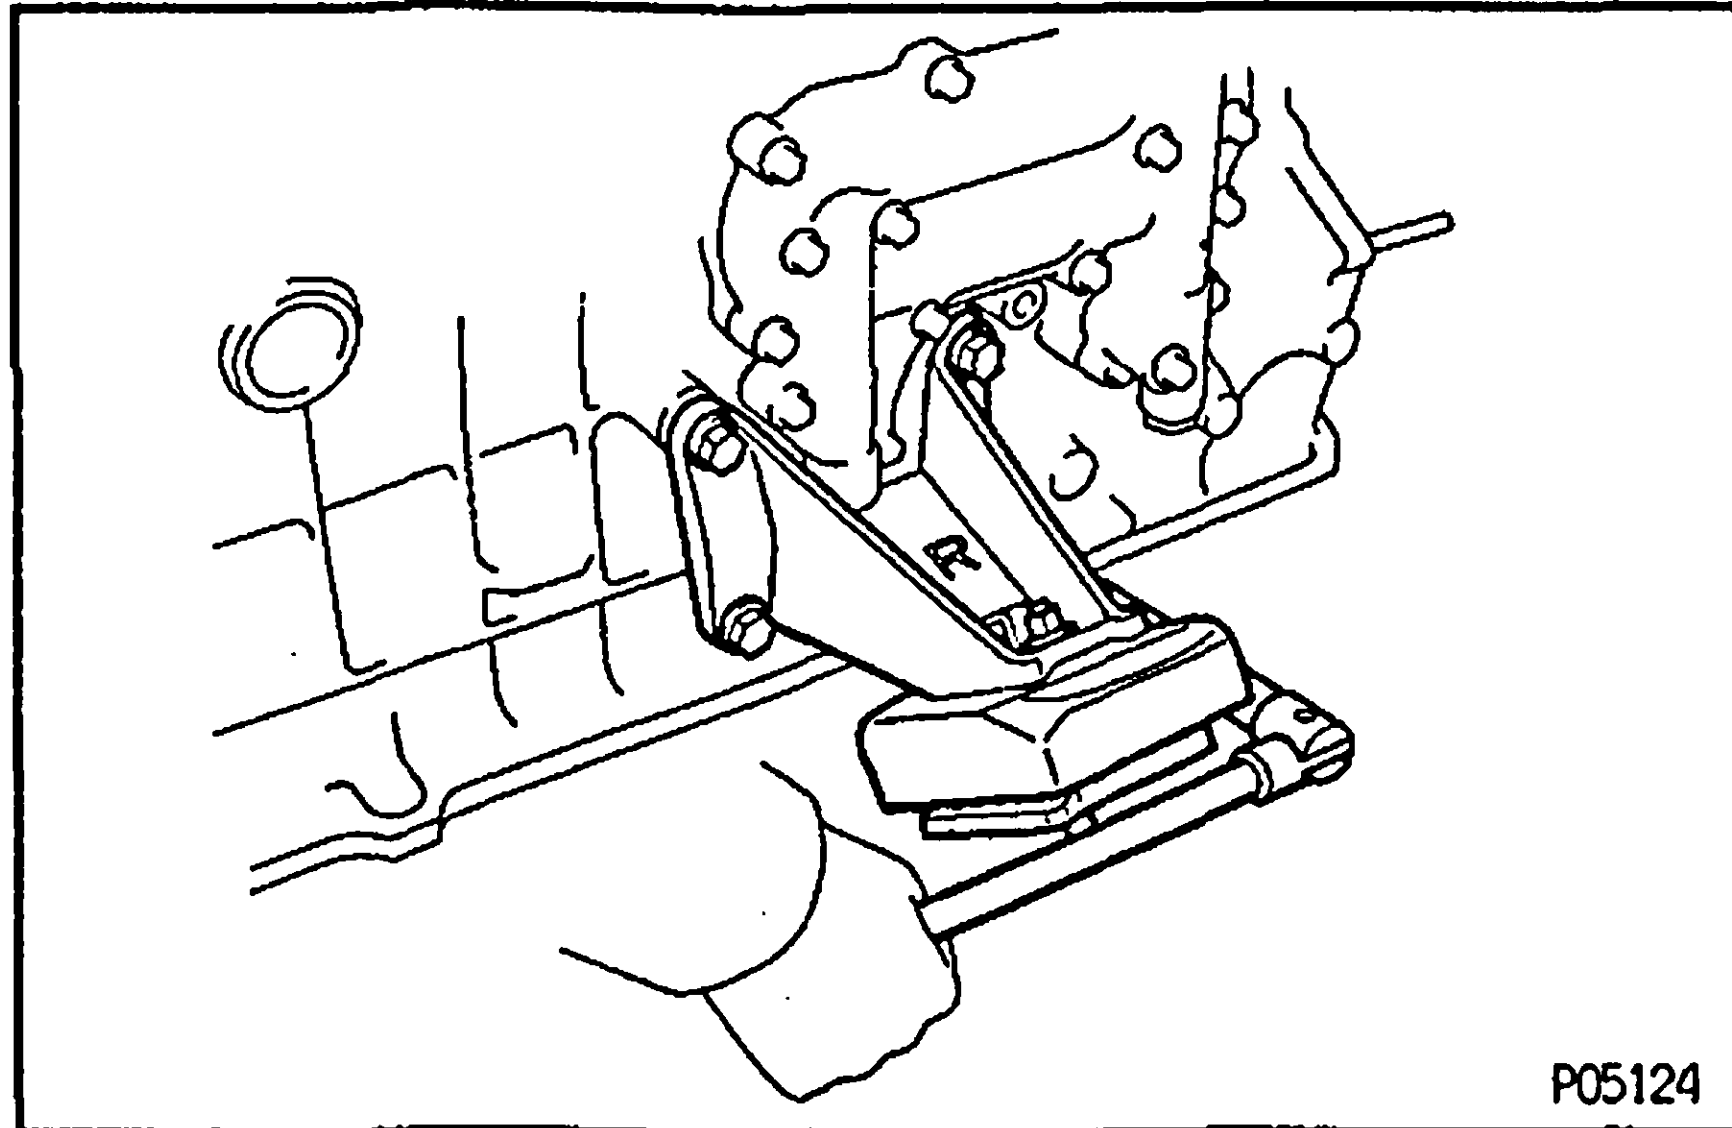**10. REMOVE RH ENGINE MOUNTING BRACKET**

Remove the four bolts and bracket.

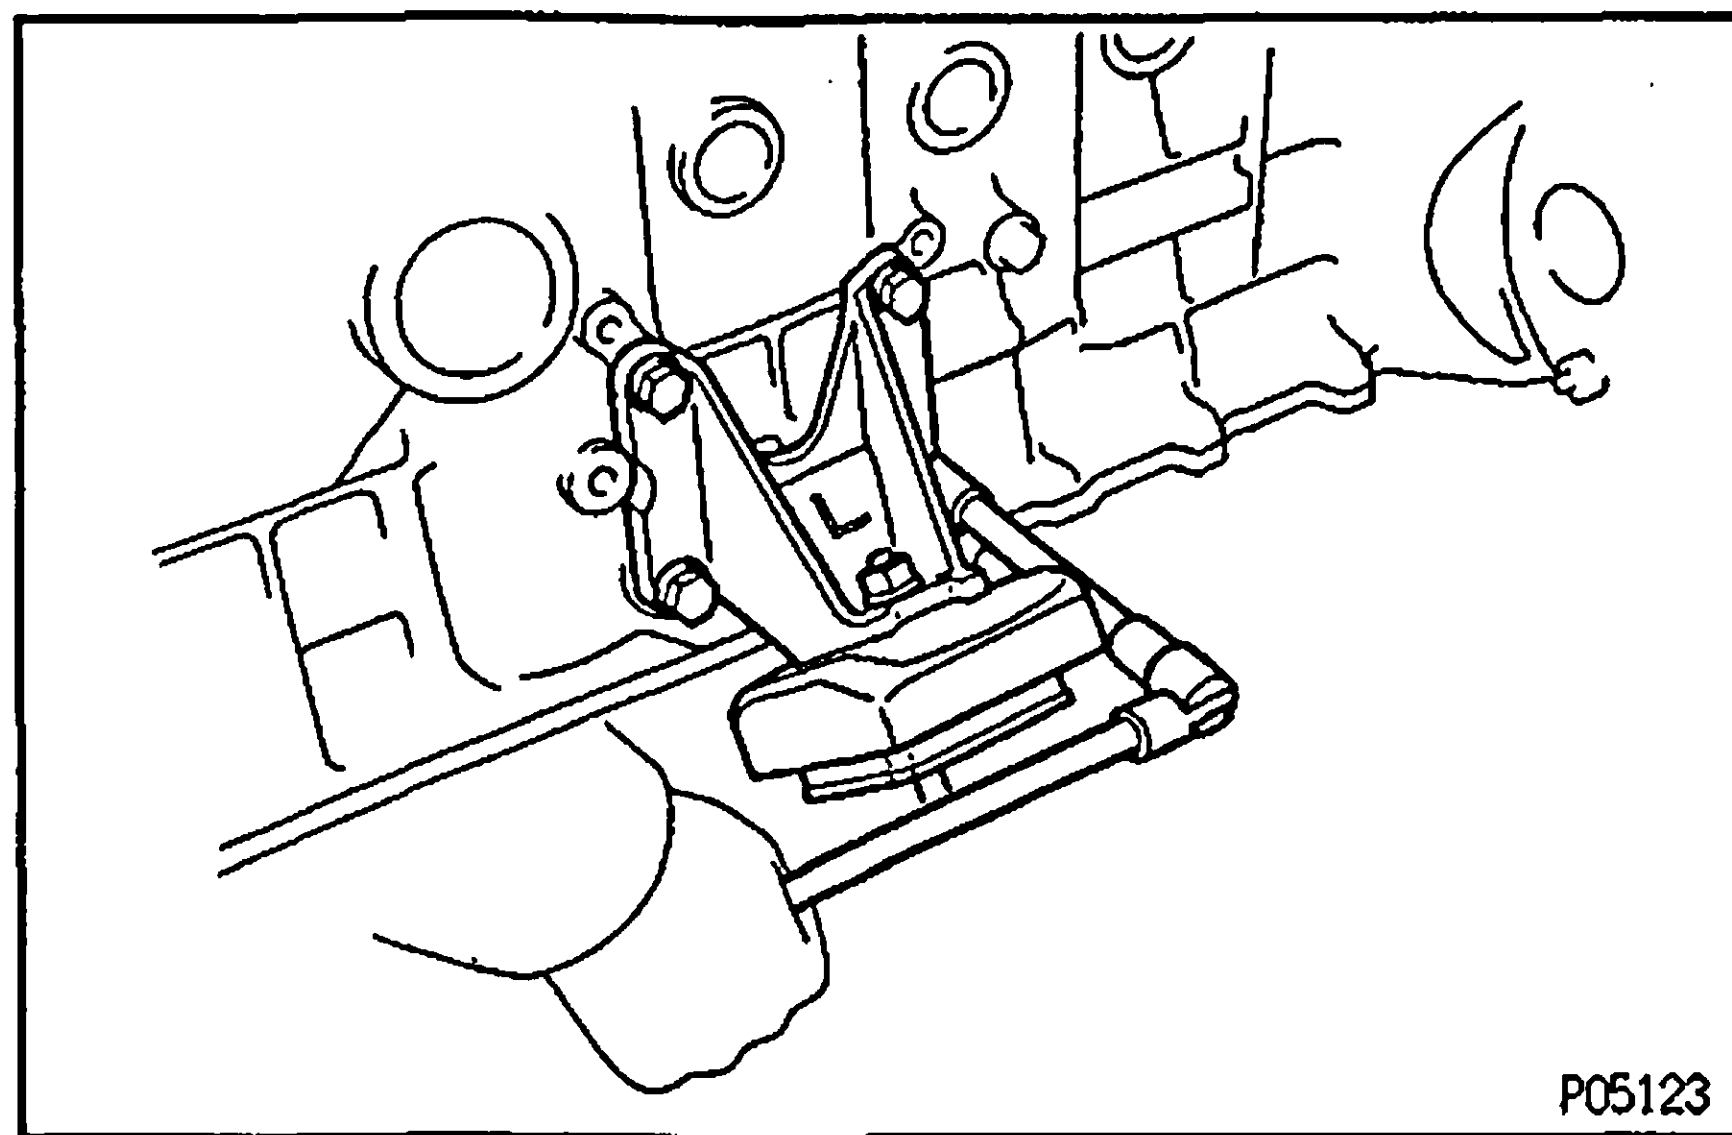**11. REMOVE LH ENGINE MOUNTING BRACKET**

Remove the four bolts and bracket.

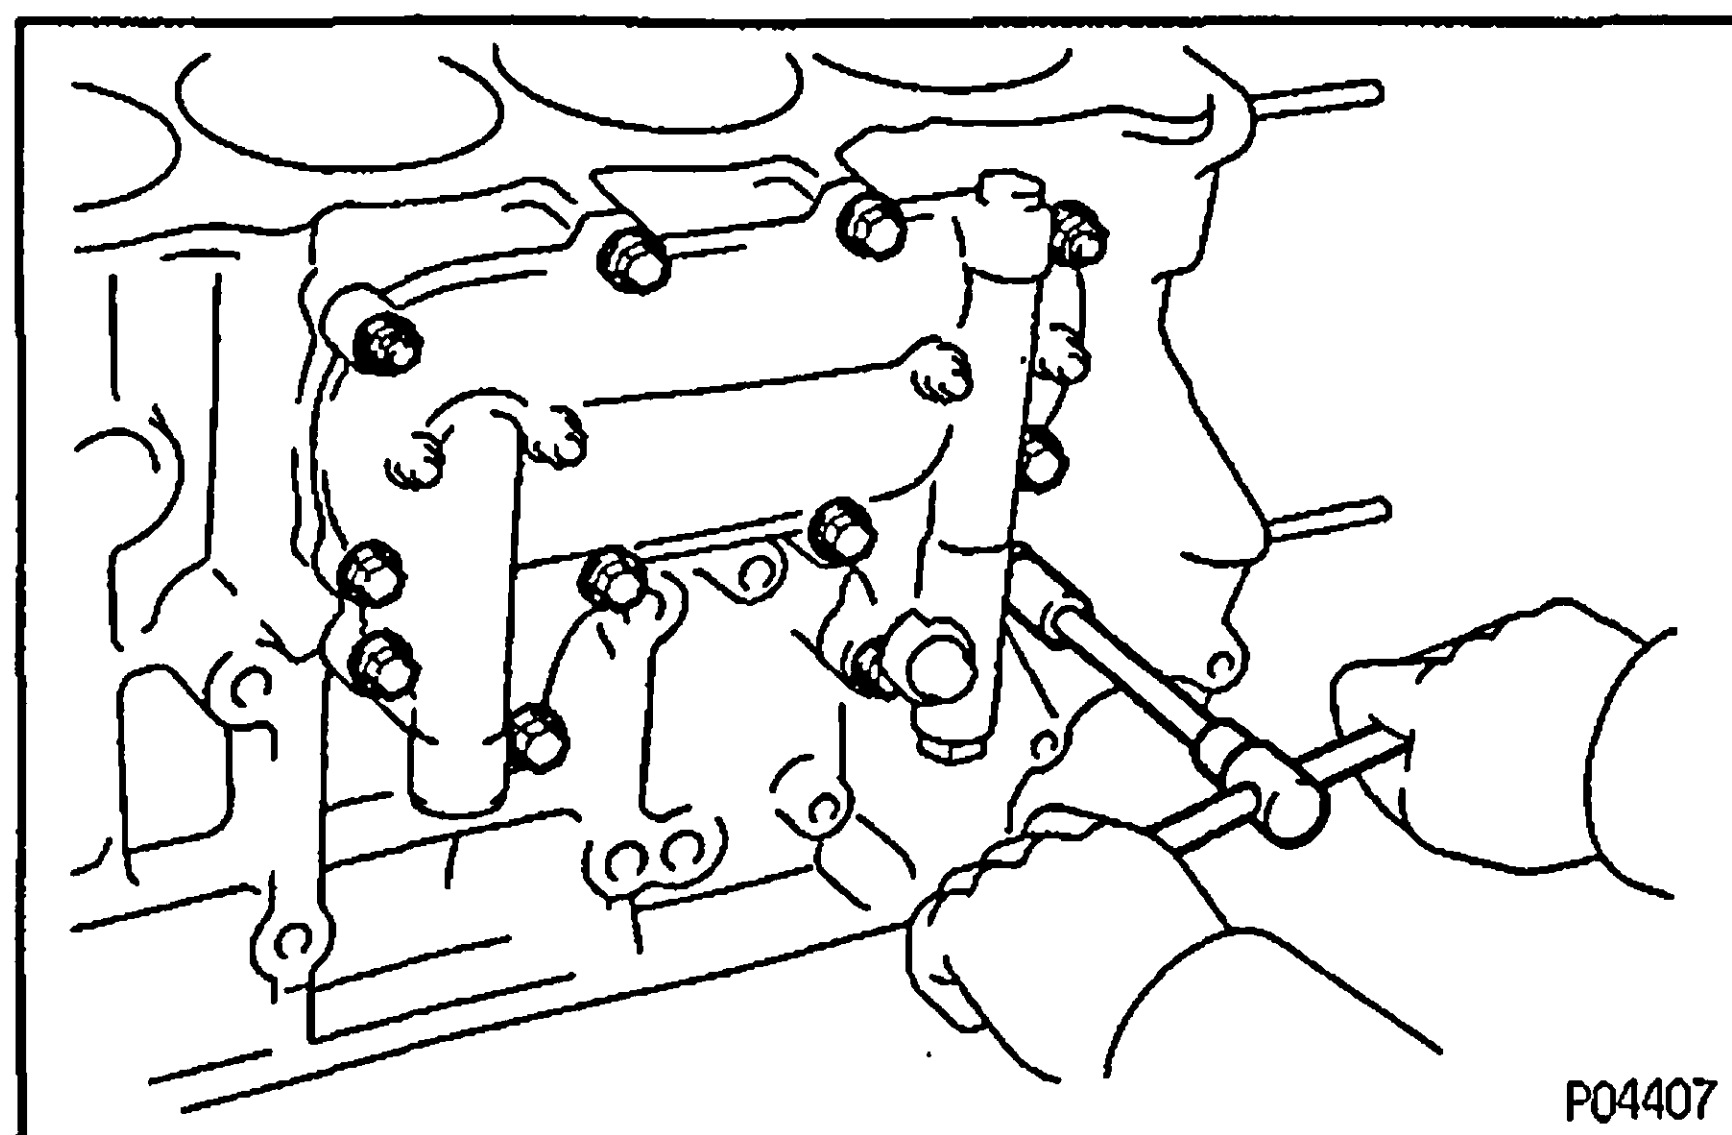**12. REMOVE OIL COOLER COVER AND OIL COOLER**


Remove the ten bolts, two nuts, oil cooler cover with the oil cooler and gasket.

CYLINDER BLOCK DISASSEMBLY

(See page EG-89)

1. REMOVE REAR OIL SEAL RETAINER

Remove the four bolts and retainer.

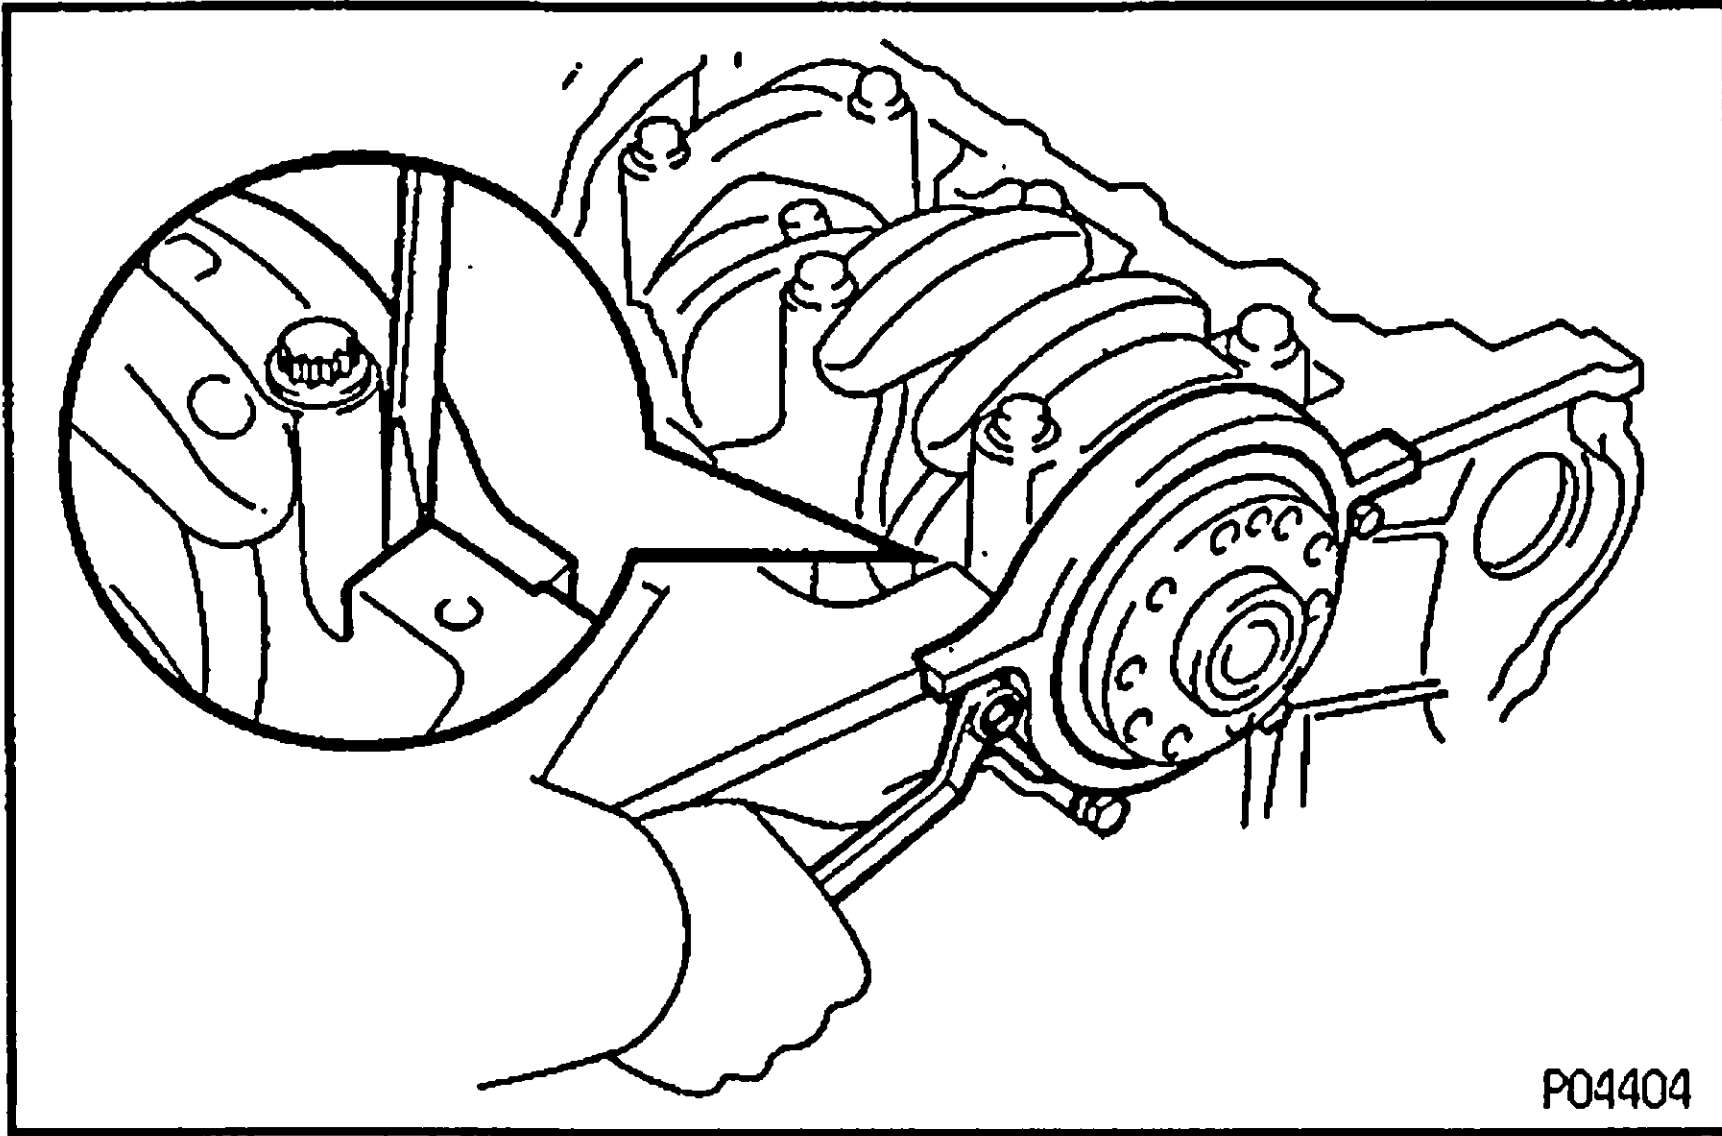

2. CHECK CONNECTING ROD THRUST CLEARANCE

Using a dial indicator, measure the thrust clearance while moving the connecting rod back and forth.


Standard thrust clearance:

0.160 – 0.262 mm (0.0063 – 0.0103 in.)

Maximum thrust clearance:


0.362 mm (0.0143 in.)

If the thrust clearance is greater than maximum, replace the connecting rod assembly. If necessary, replace the crankshaft.

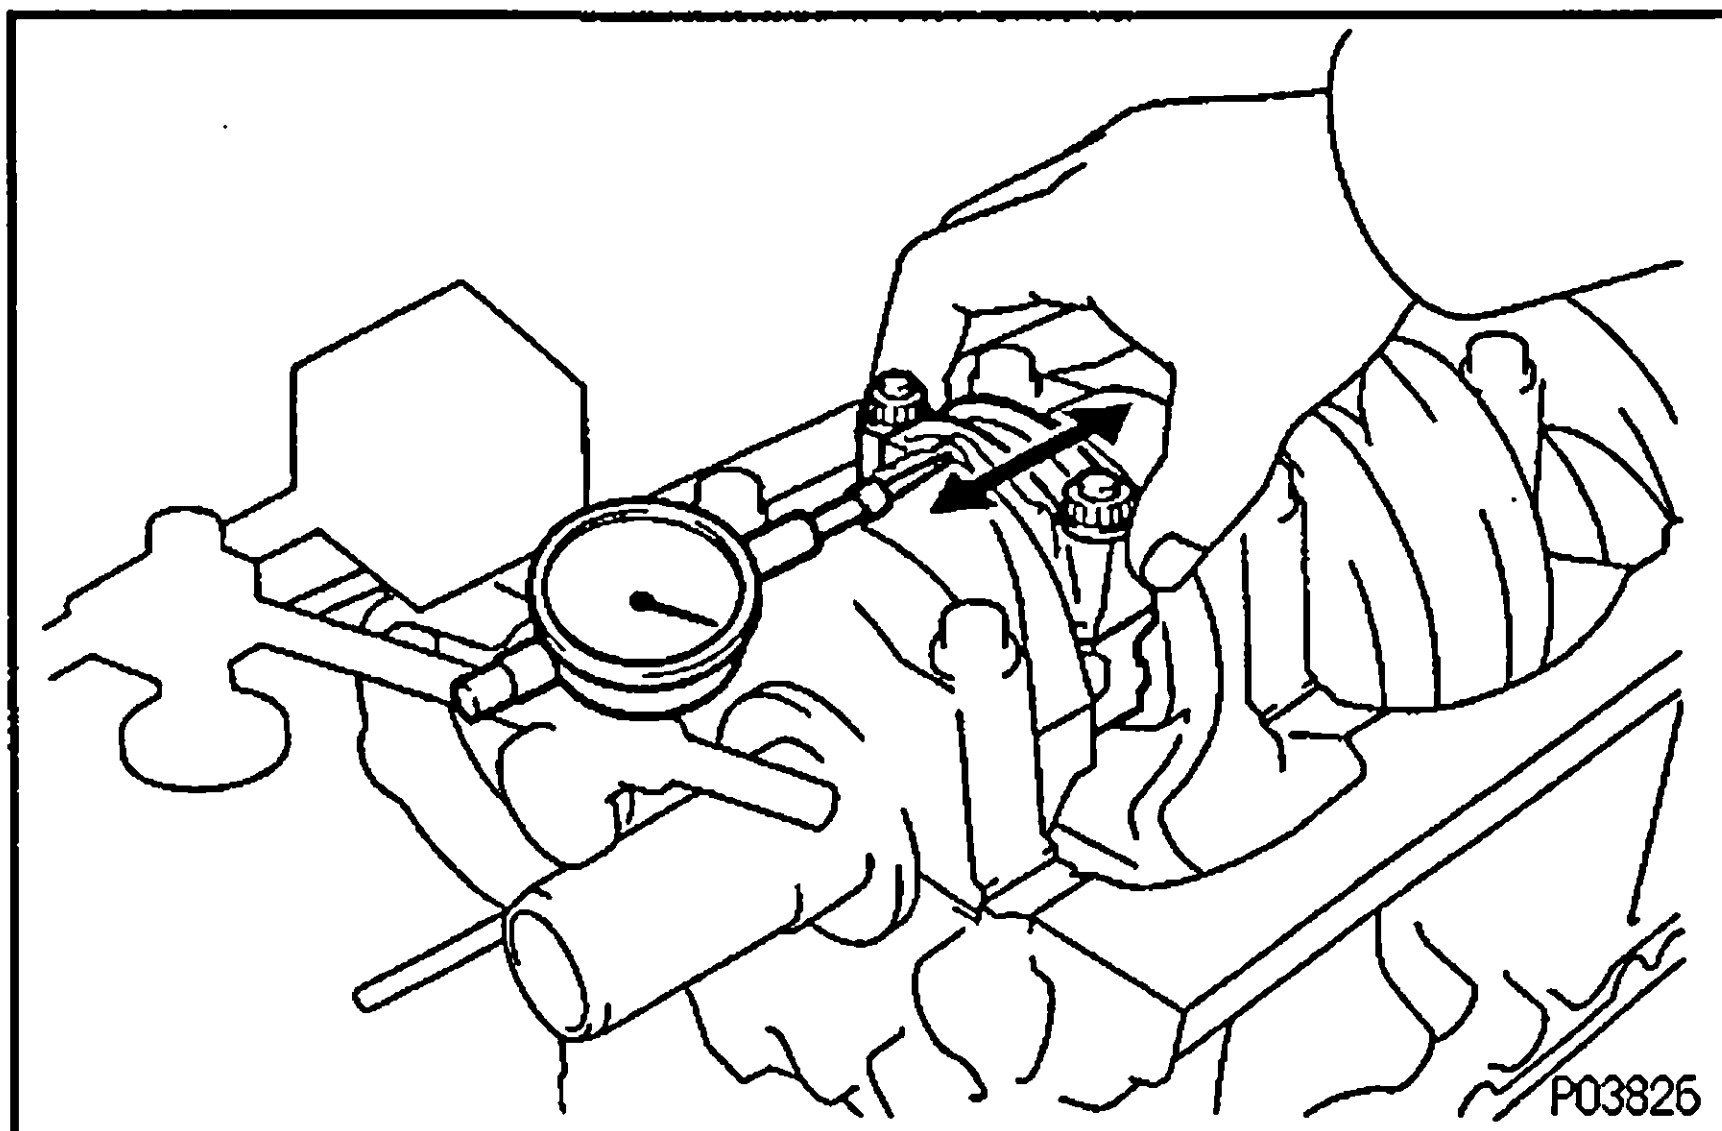


3. REMOVE CONNECTING ROD CAPS AND CHECK OIL CLEARANCE


(a) Using a punch or numbering stamp, mark the connecting rod and cap to ensure correct reassembly.

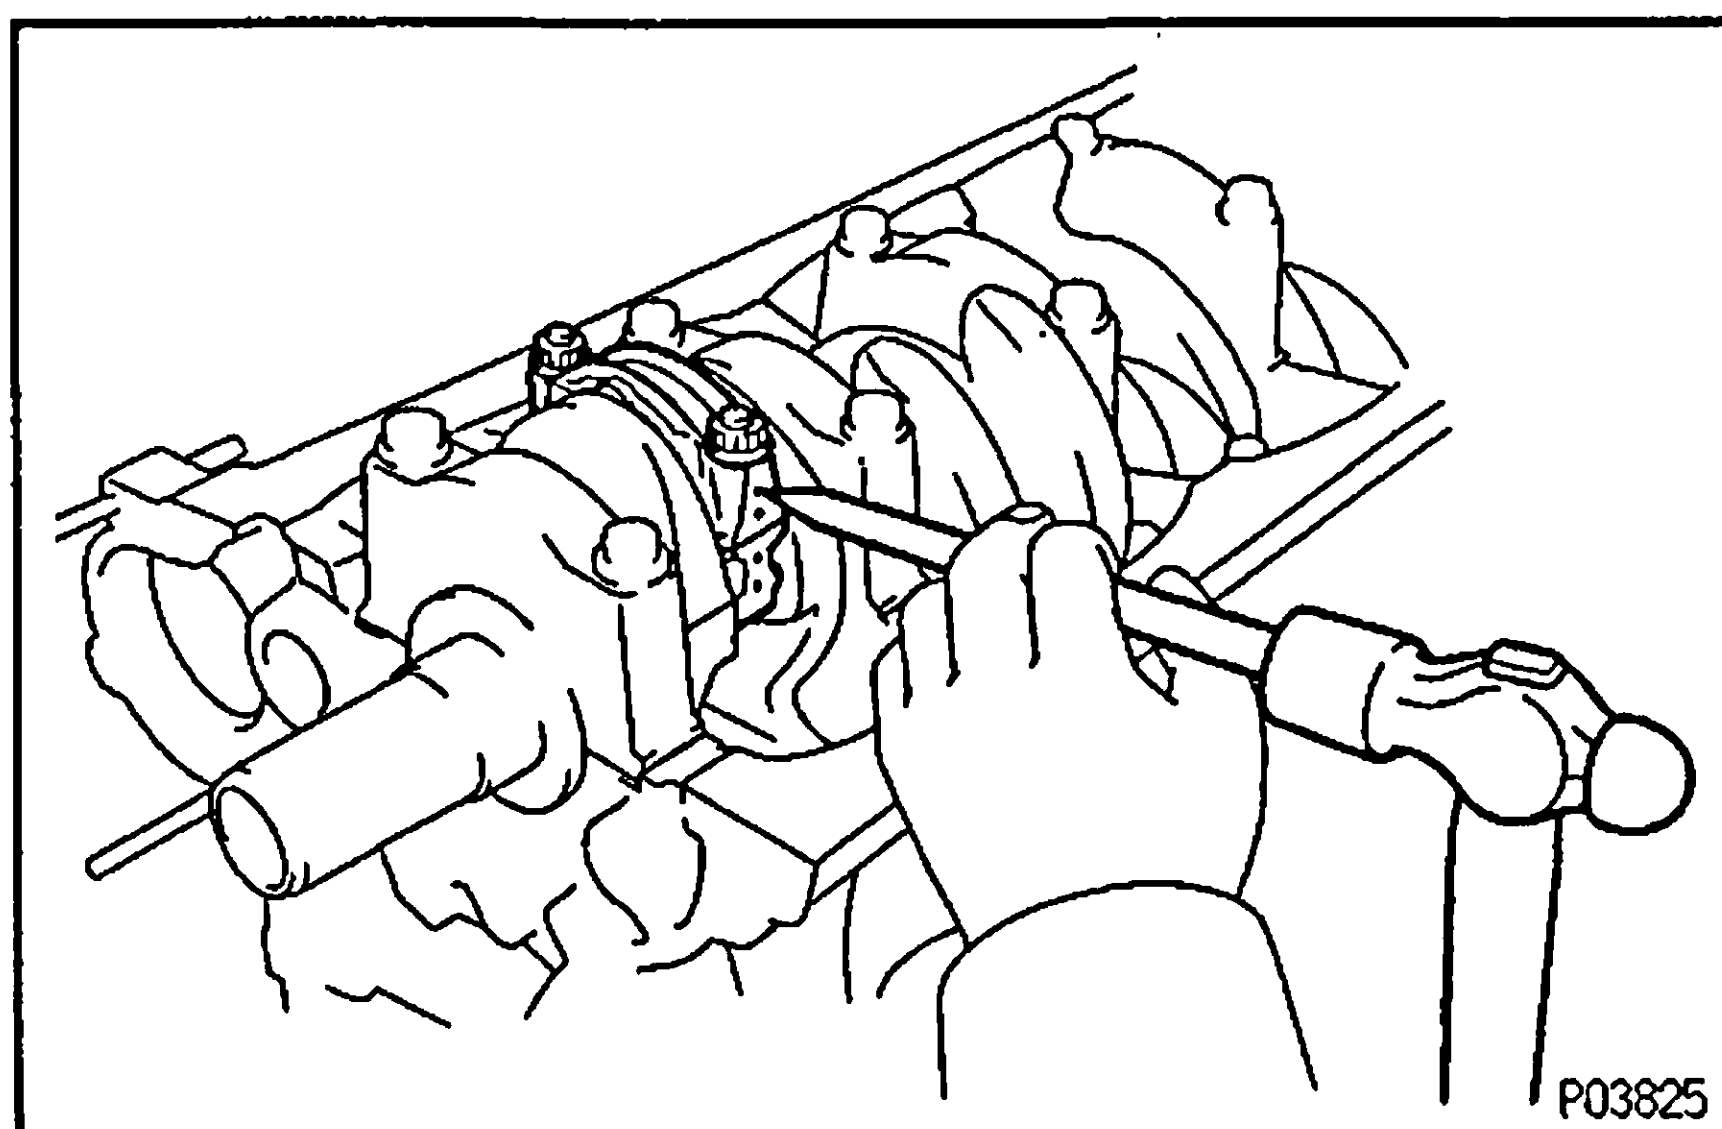


(b) Remove the connecting rod cap nuts.

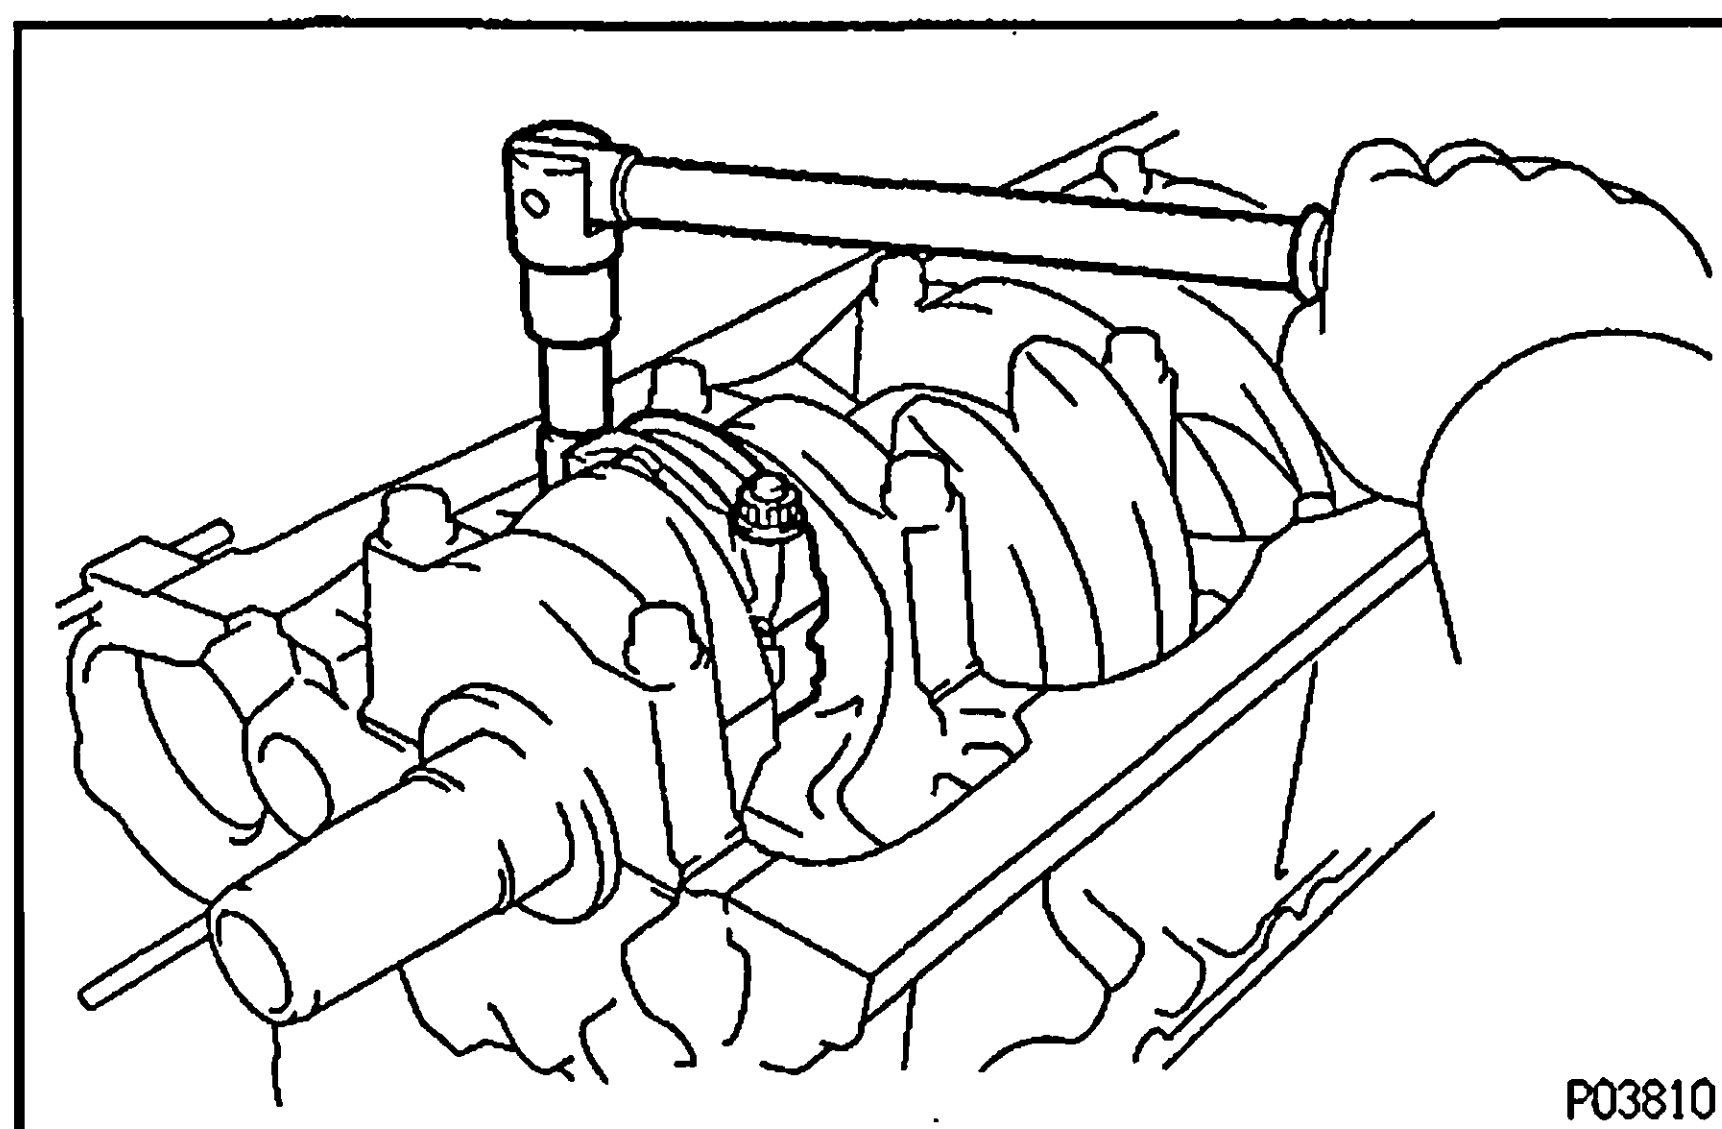


(c) Using a plastic-faced hammer, lightly tap the connecting rod bolts and lift off the connecting rod cap. **HINT:** Keep the lower bearing inserted with the connecting rod cap.

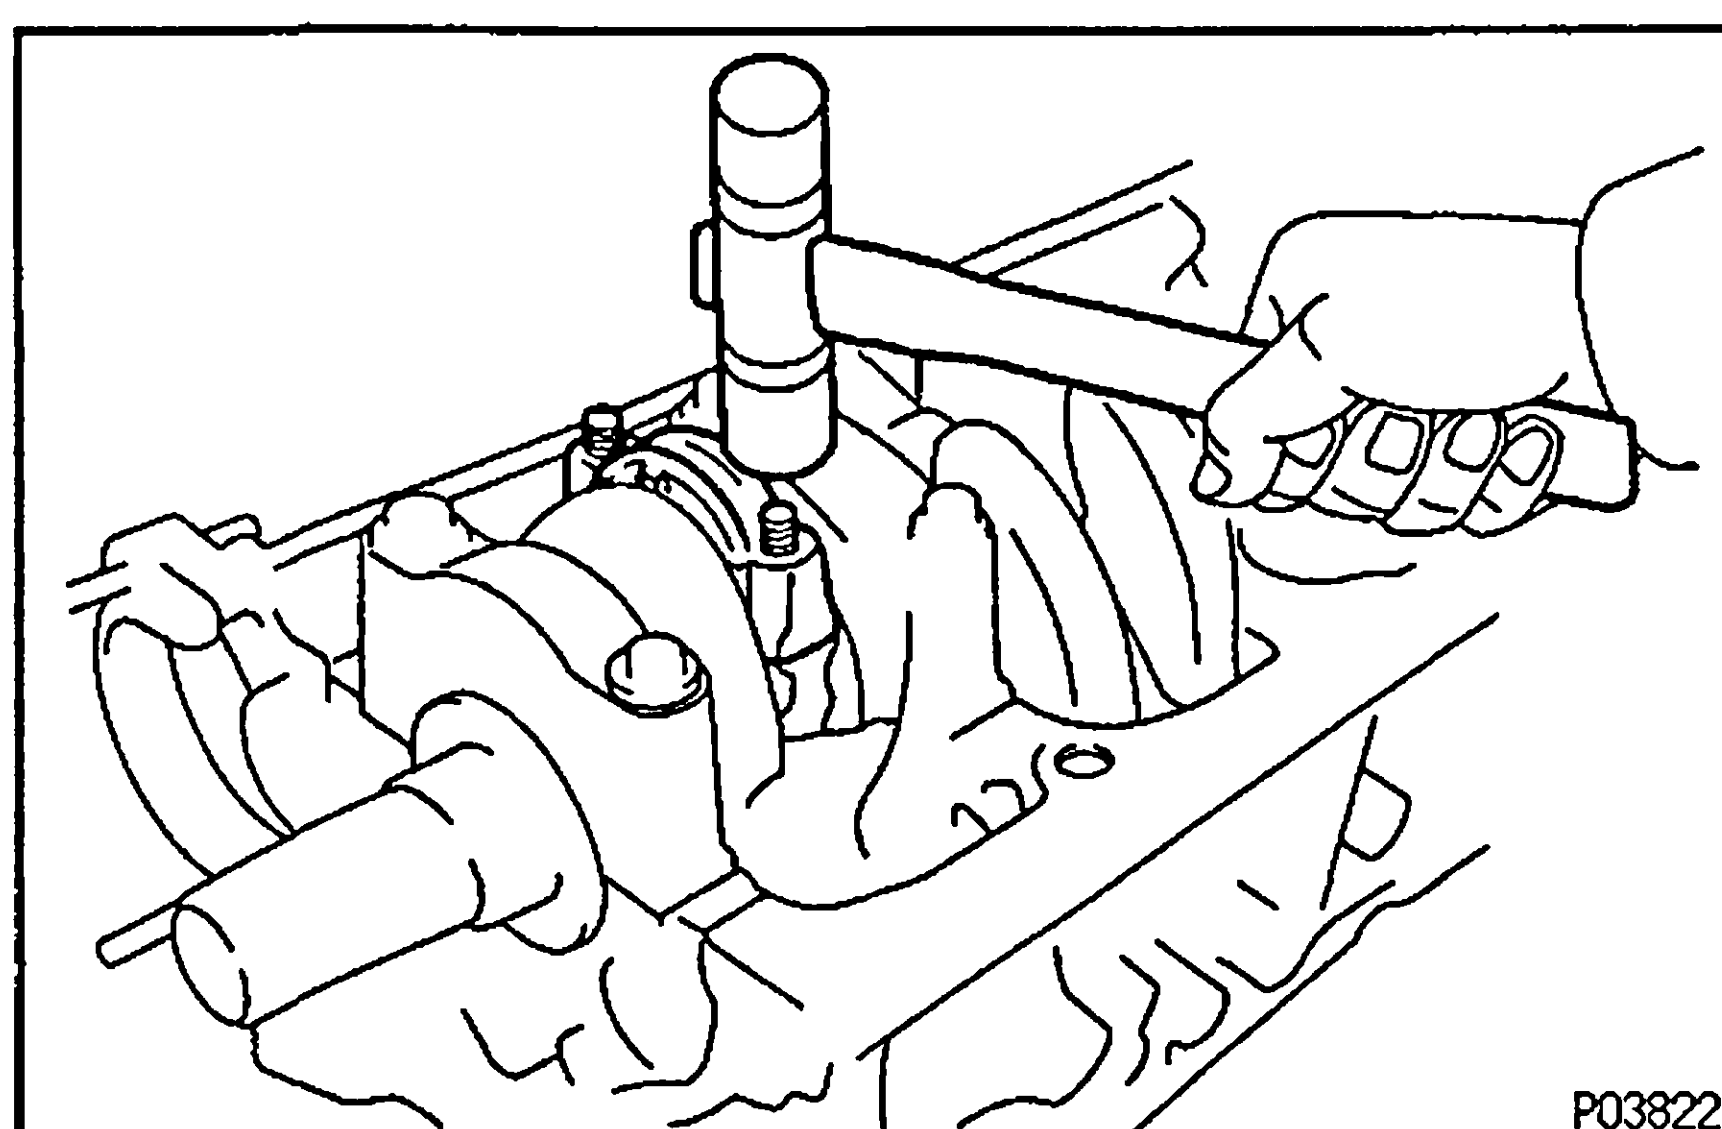

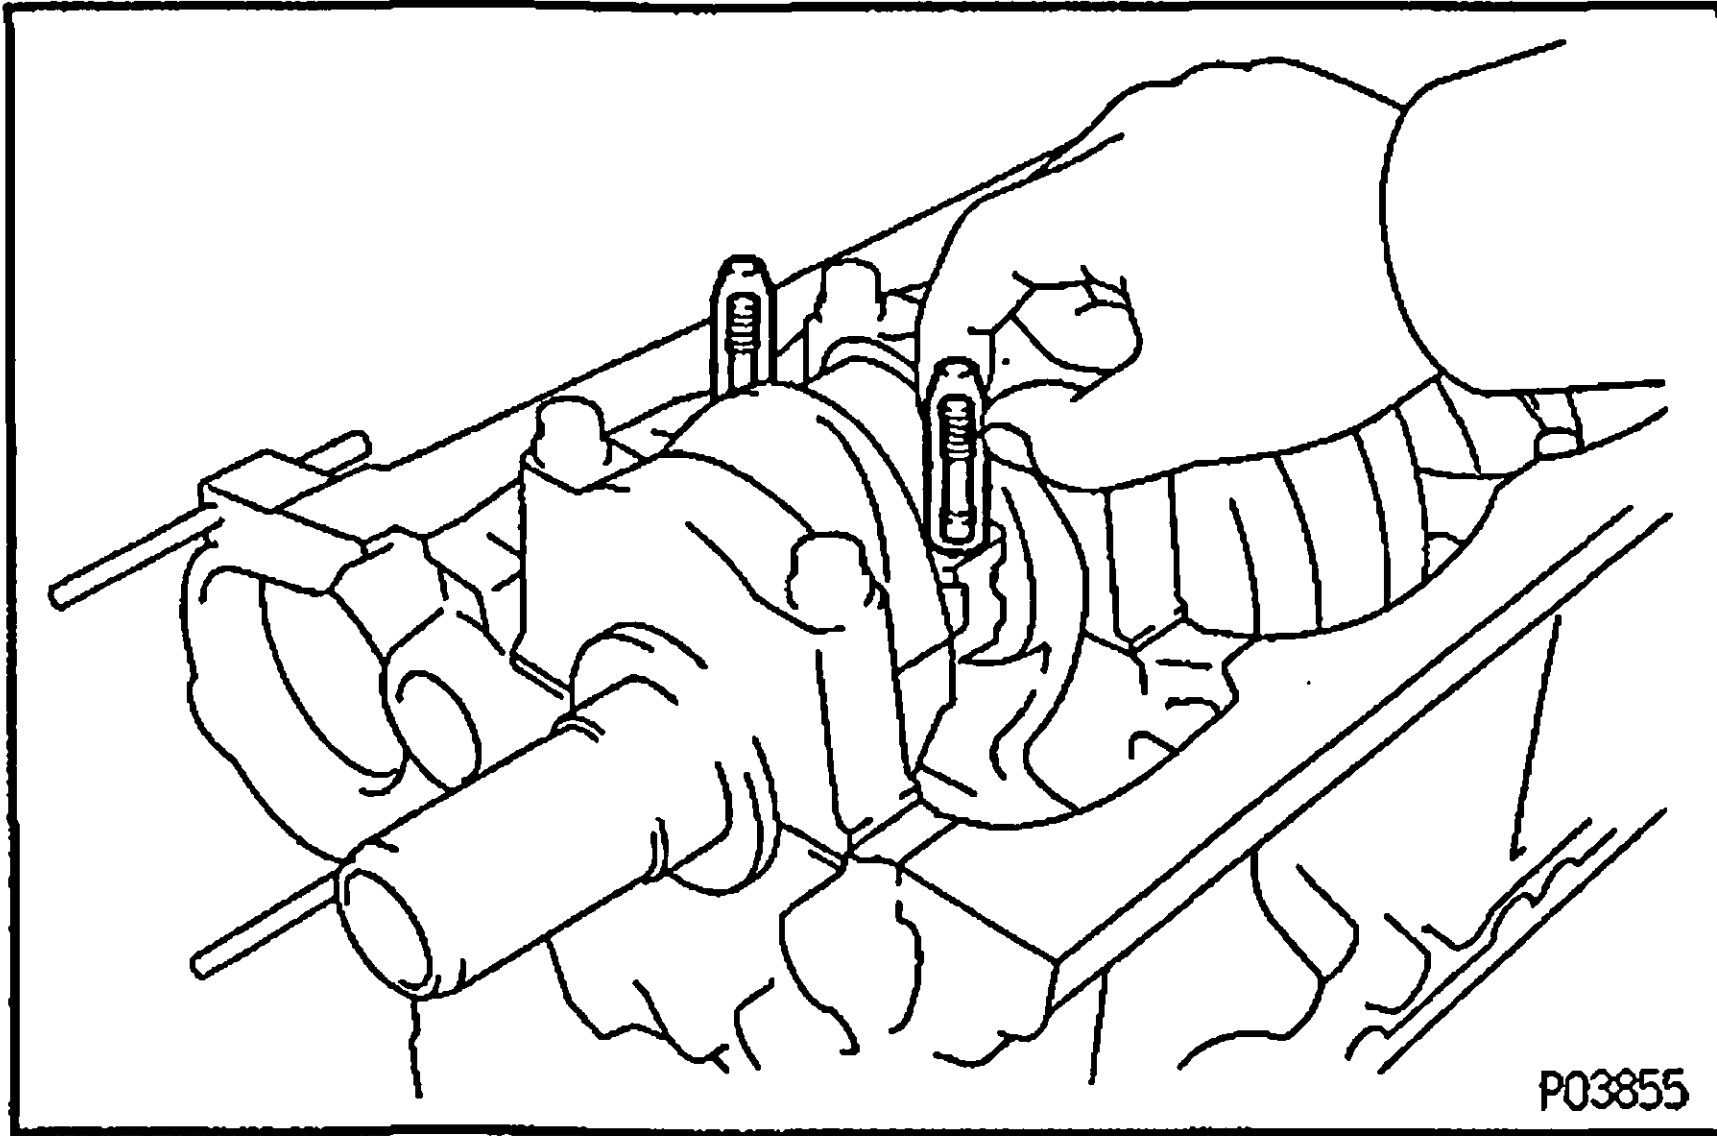


- (d) Cover the connecting rod bolts with a short piece of hose to protect the crankshaft from damage.


EG

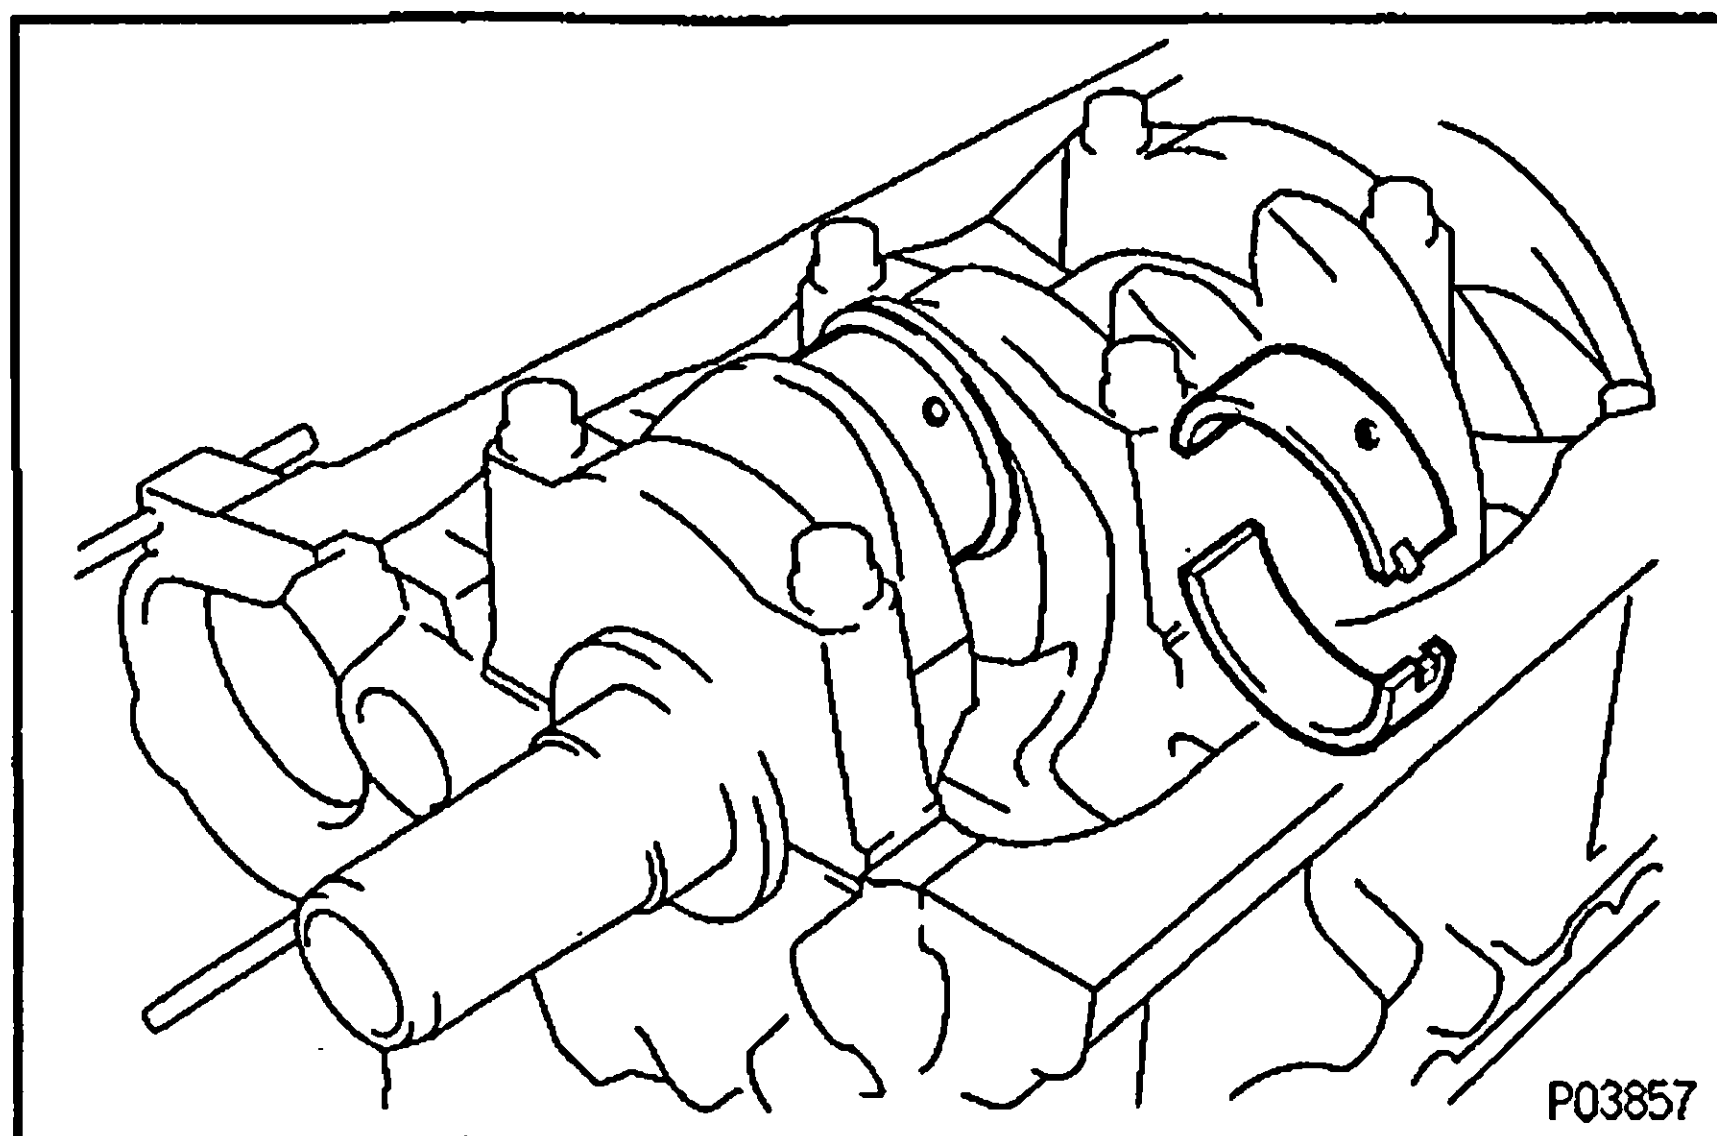


- (e) Clean the crank pin and bearing.
 (f) Check the crank pin and bearing for pitting and scratches.
 If the crank pin or bearing is damaged, replace the bearings. If necessary, grind or replace the crankshaft.

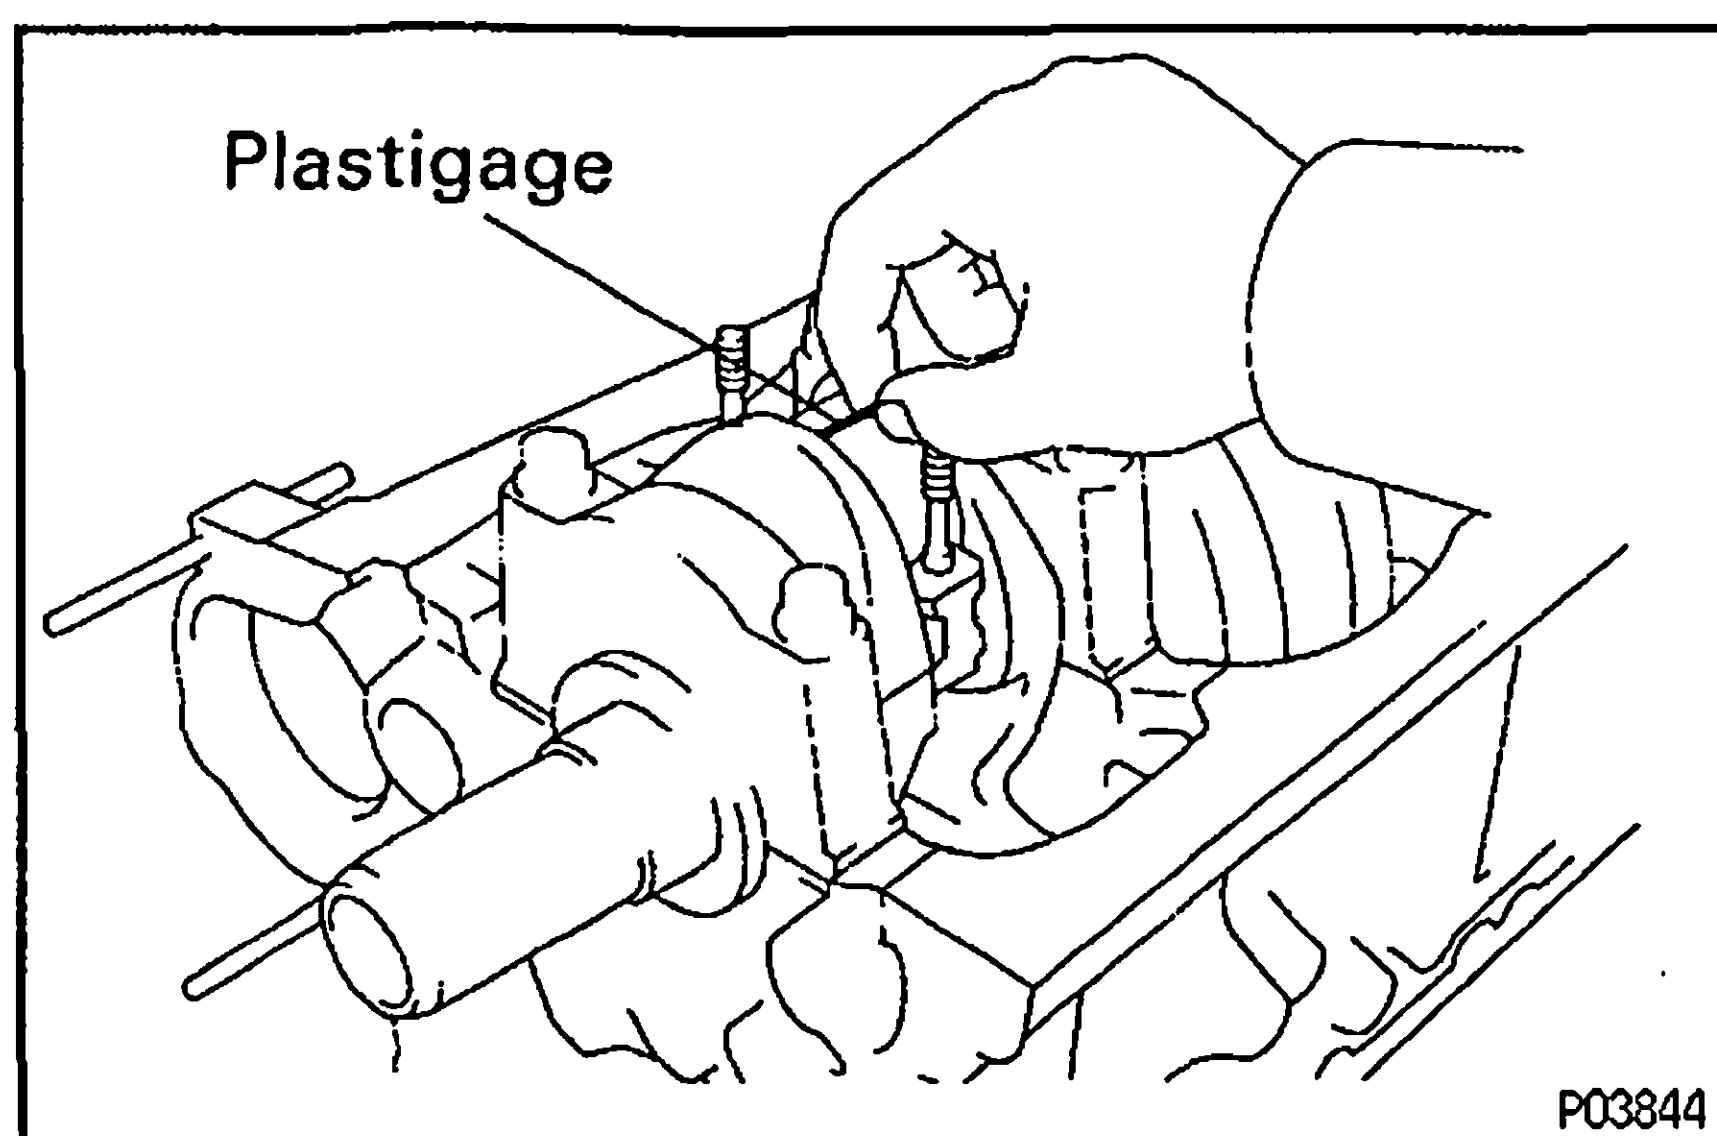


- (g) Lay a strip of Plastigage across the crank pin.

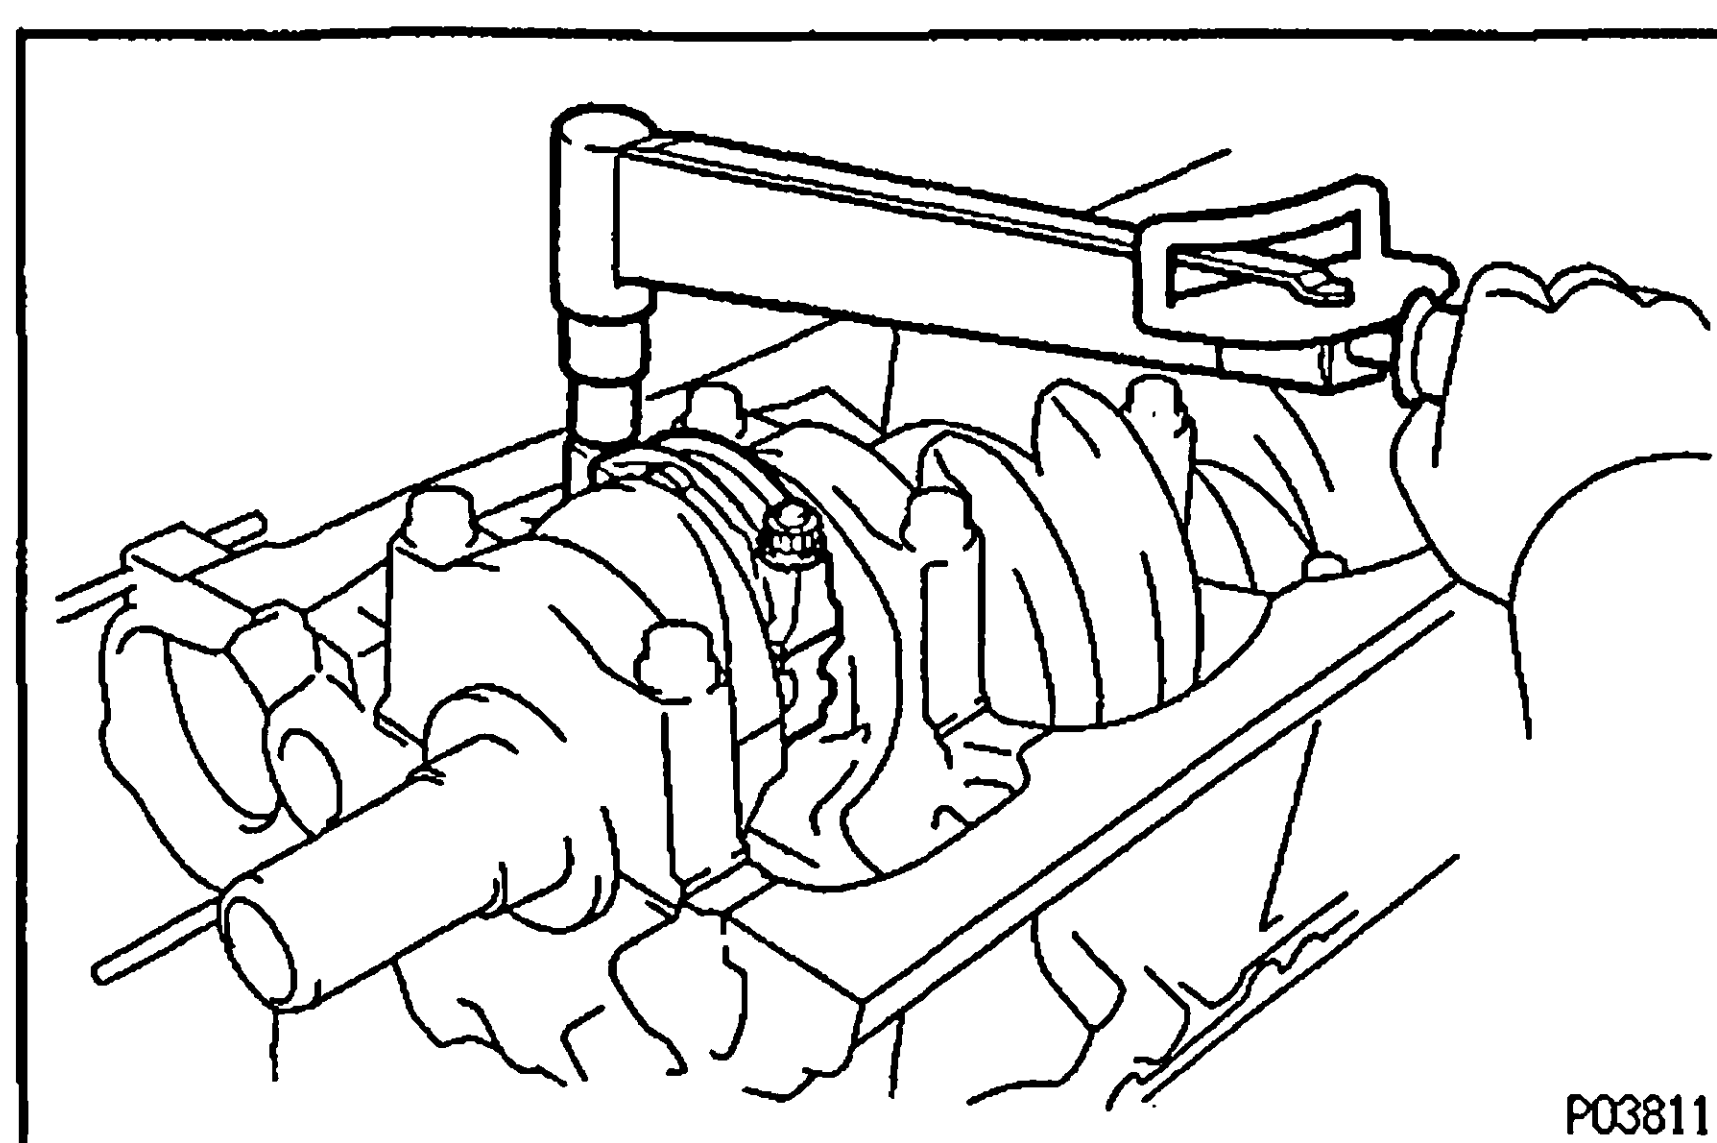

- (h) Install the connecting rod cap with the two nuts.
 (See page EG — 118)
 1st
 Torque: 48 N·m (490 kgf·cm, 35 ft·lbf)
 2nd Turn 90°
 NOTICE: Do not turn the crankshaft.

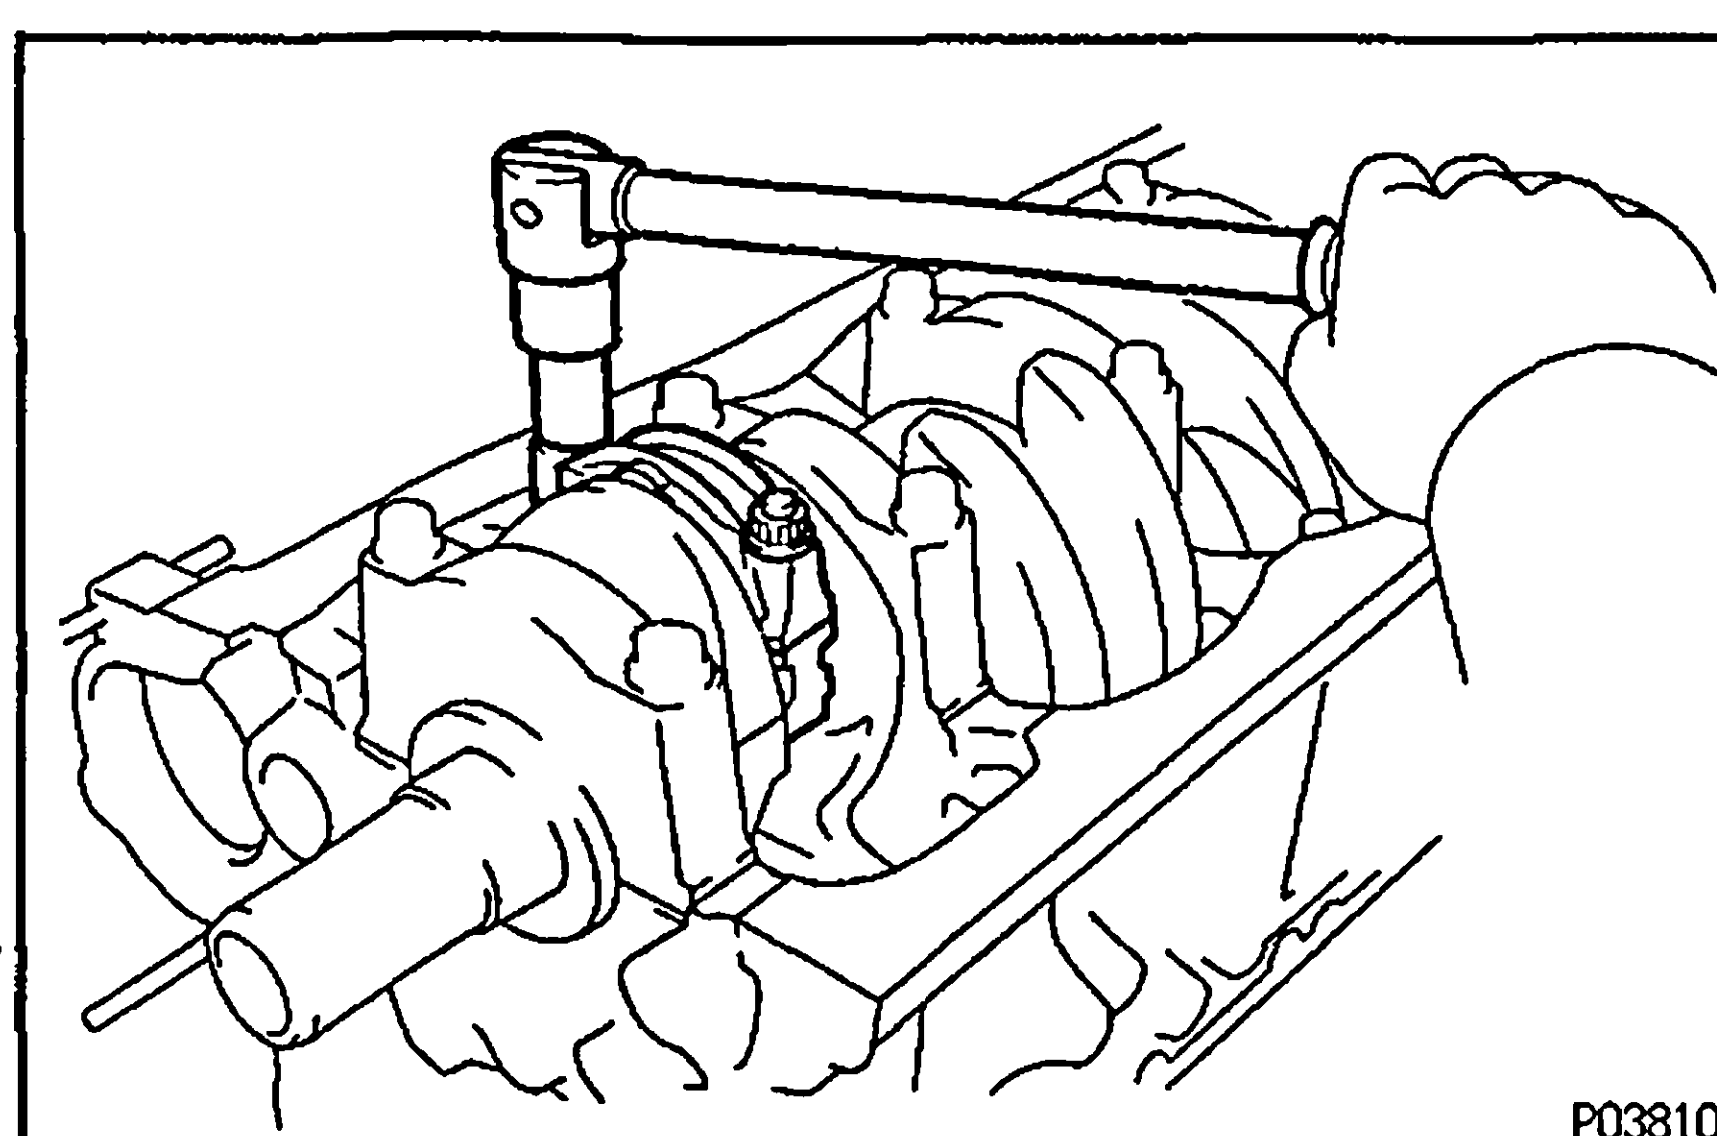

- (i) Remove the two nuts and connecting rod cap.
 (See procedure (b) and (c) above)

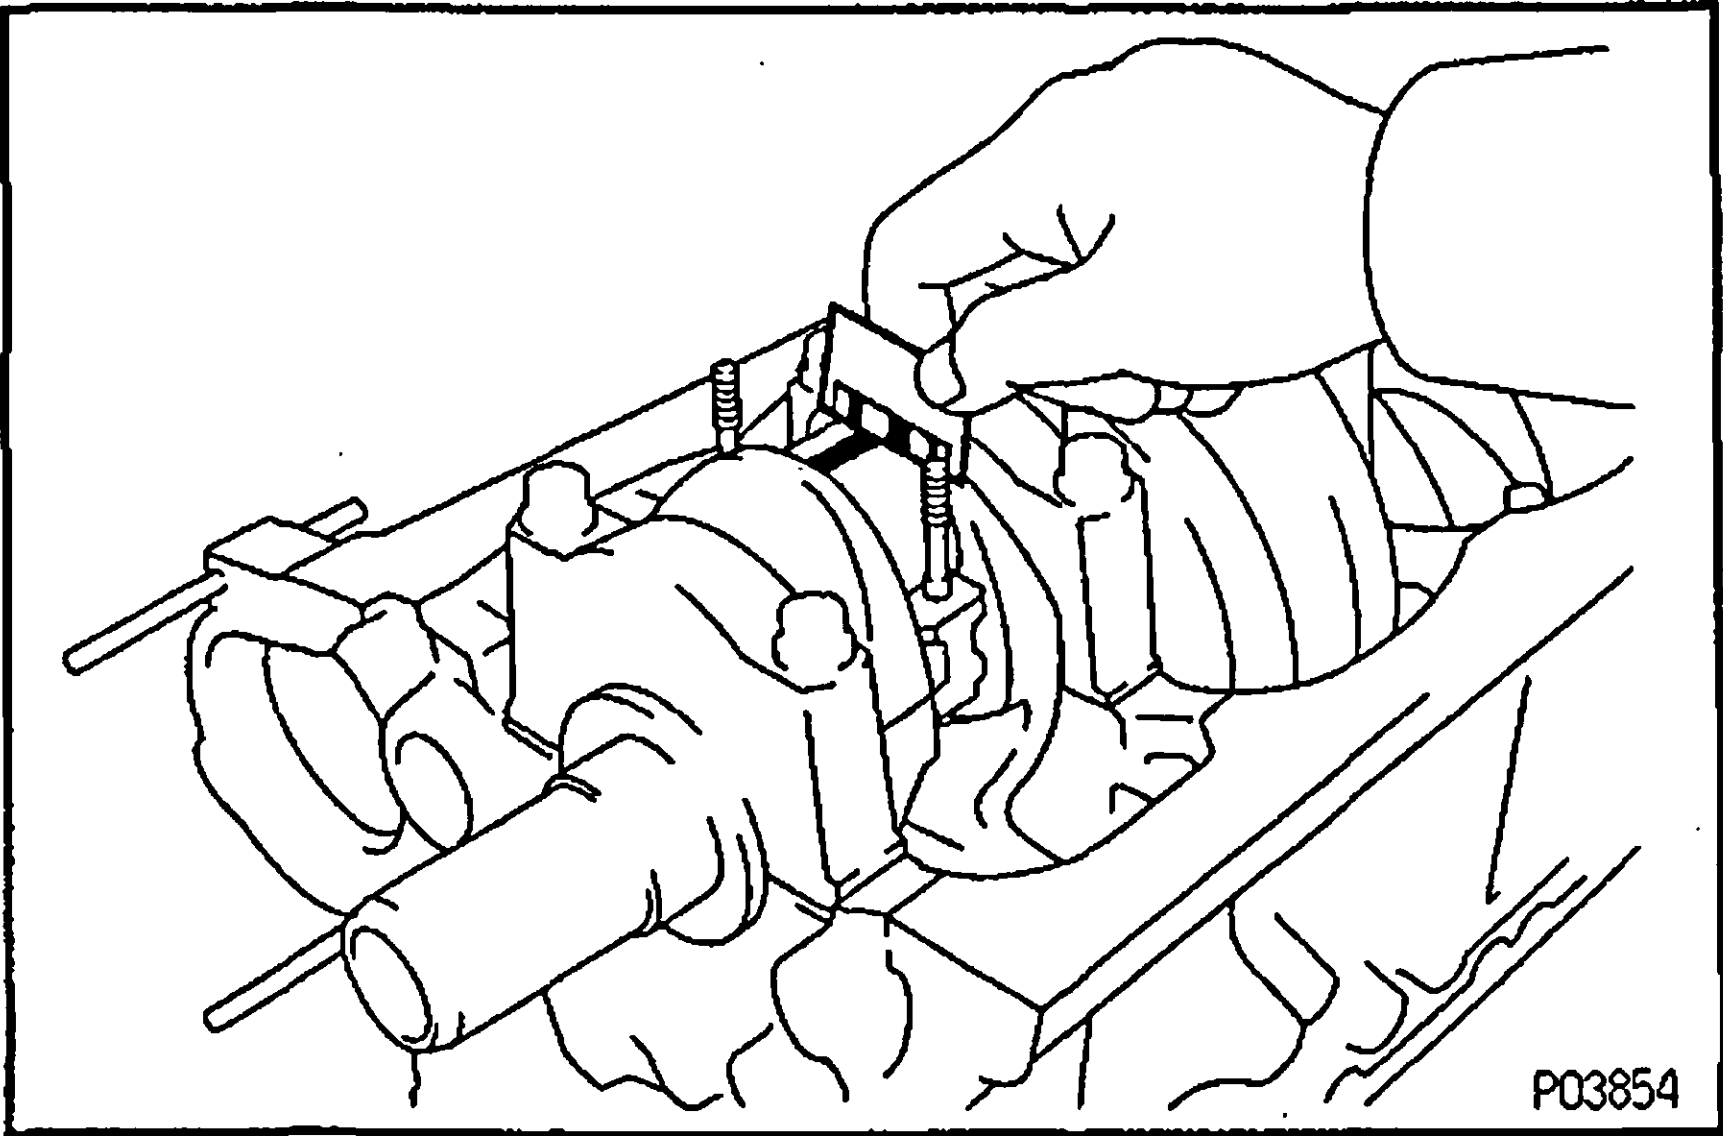

(j) Measure the Plastigage at its widest point.

Standard oil clearance:

STD

0.032 – 0.050 mm (0.0013 – 0.0020 in.)


U/S 0.25

0.033 – 0.073 mm (0.0013 – 0.0029 in.)

Maximum oil clearance:

0.10 mm (0.0039 in.)

If the oil clearance is greater than maximum, replace the bearings. If necessary, grind or replace the crankshaft.

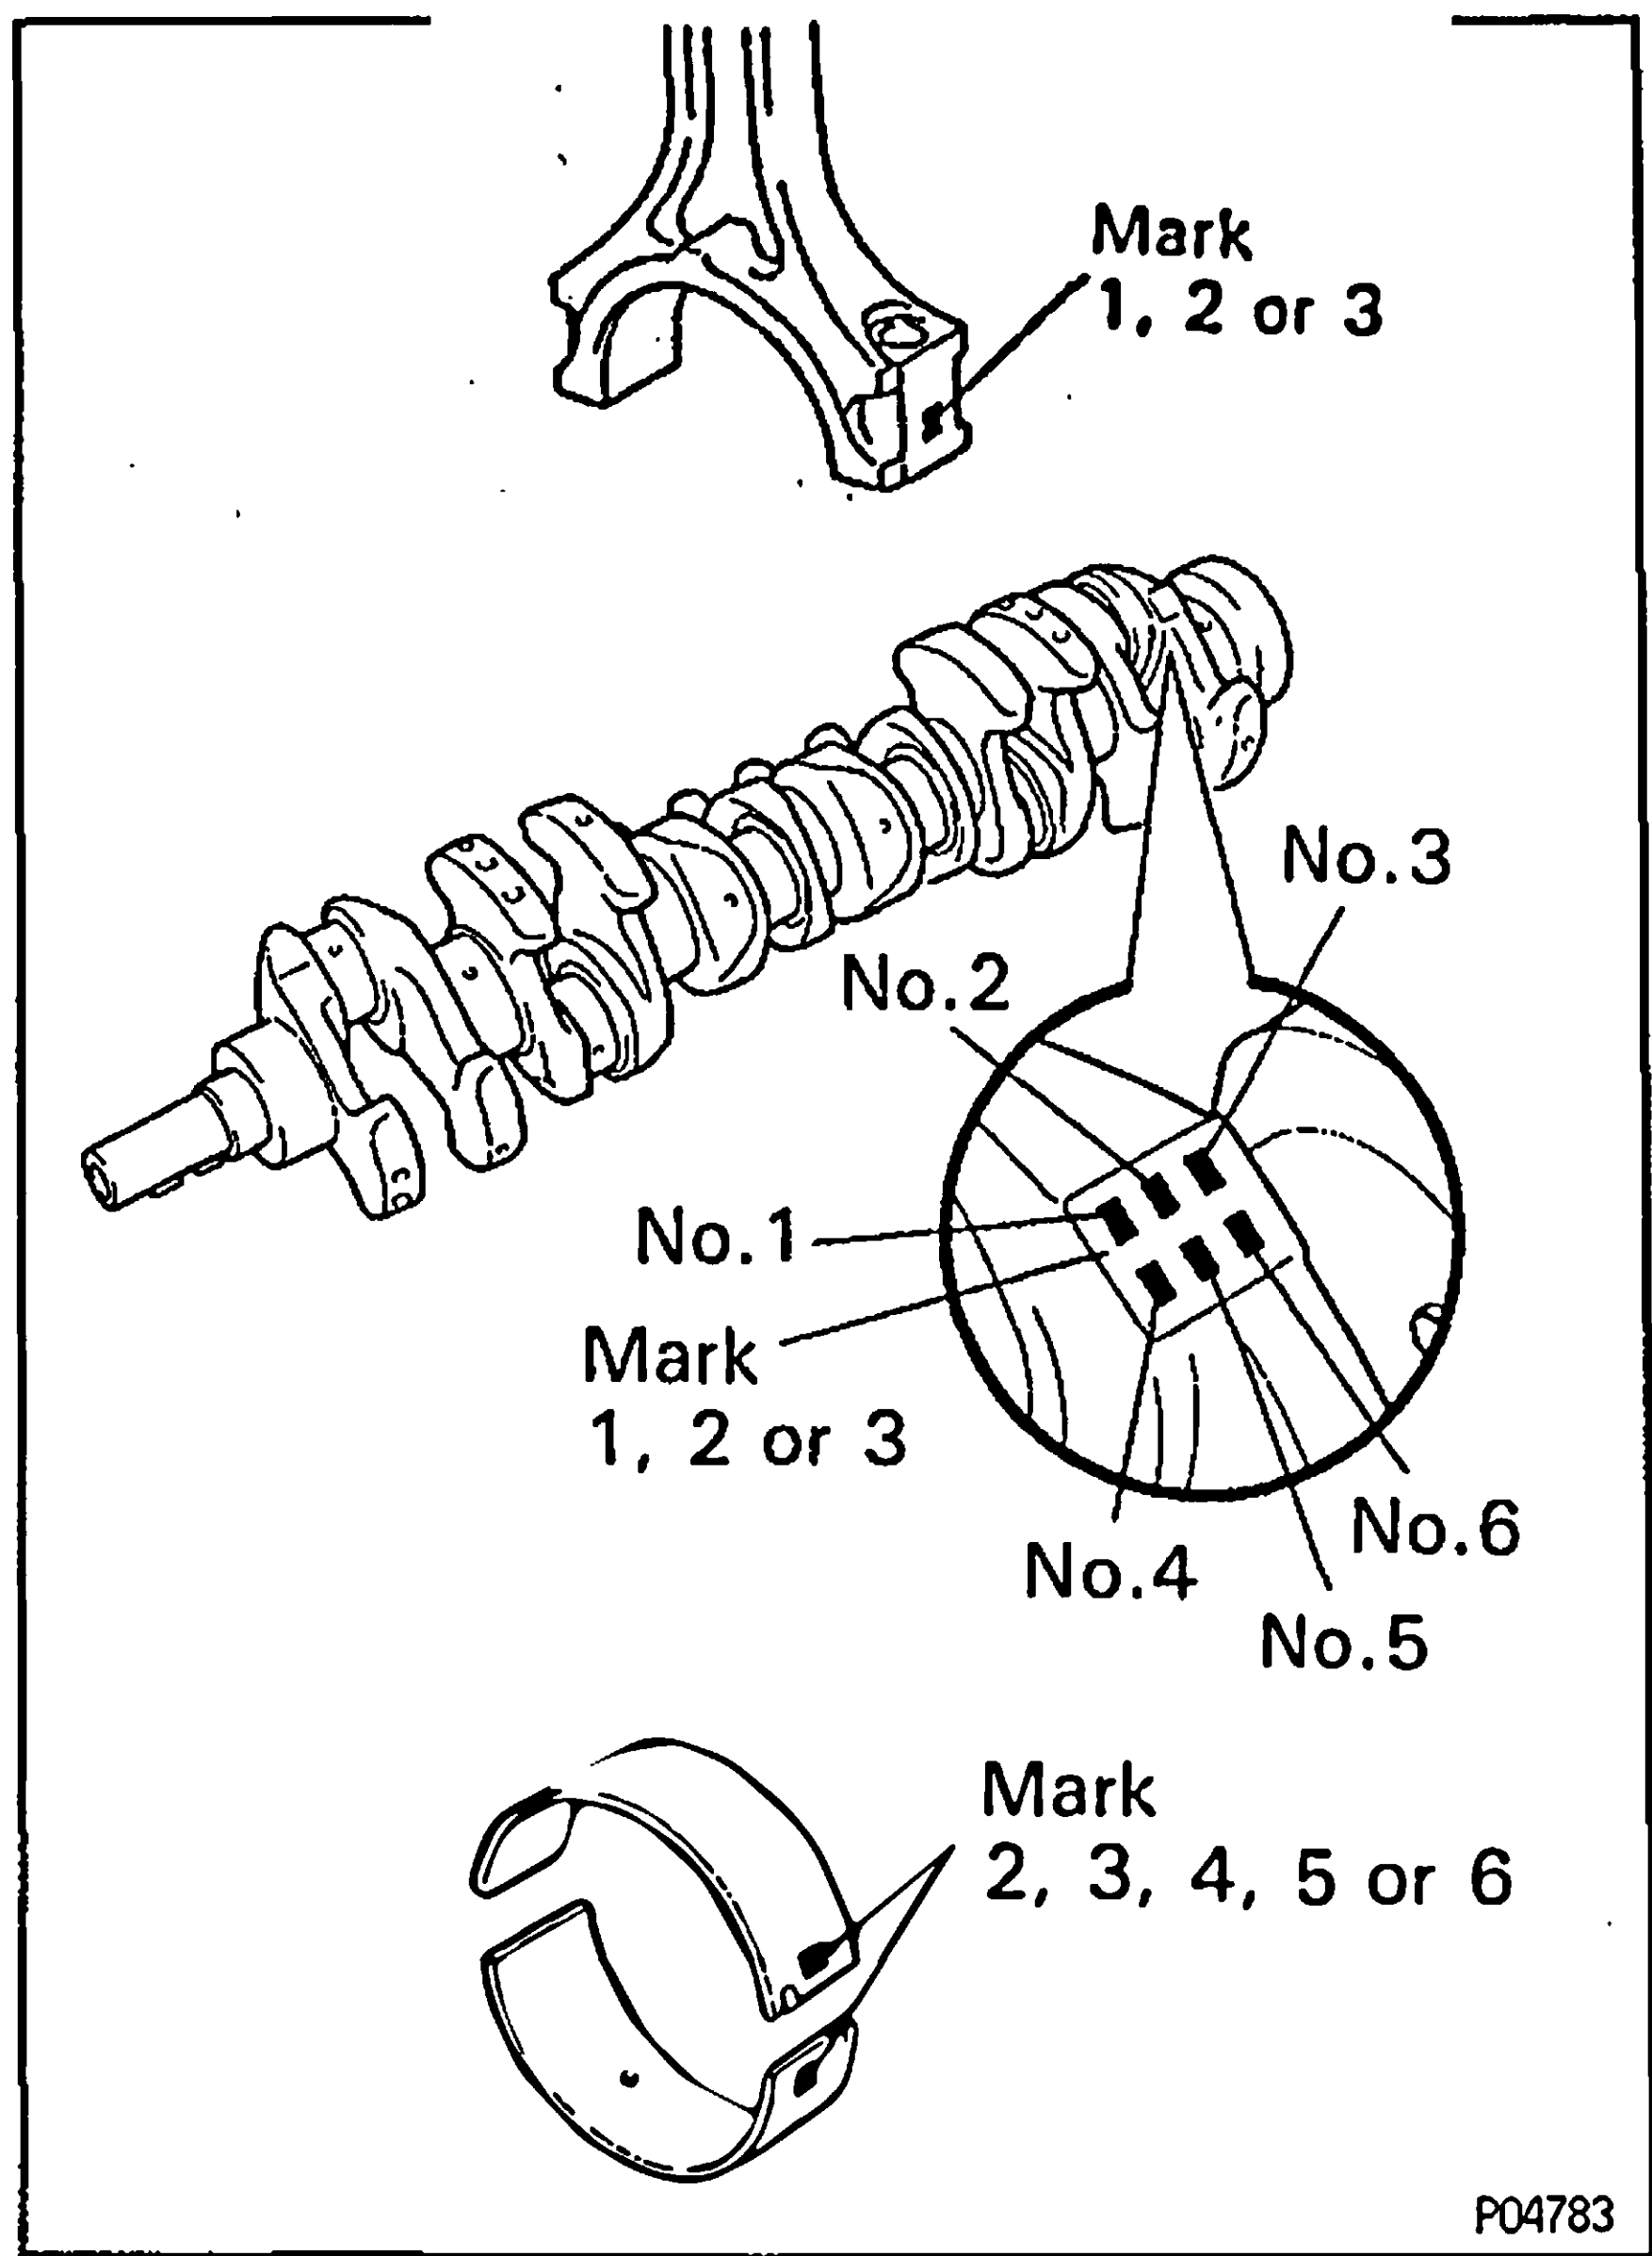

HINT: If using a standard bearing, replace with one having the same number. If the number of the bearing cannot be determined, select the correct bearing by adding together the numbers imprinted on the connecting rod ~~cap~~ and crankshaft, then selecting the bearing with the same number as the total. There are five sizes of standard bearings, marked "2", "3", "4", "5" and "6" accordingly.

	Number marked								
Connecting rod cap	1			2			3		
Crankshaft	1	2	3	1	2	3	1	2	3
Use bearing	2	3	4	3	4	5	4	5	6

EXAMPLE: Connecting rod ~~cap~~ "3" + Crankshaft "1"
= Total number 4 (Use bearing "4")

V00740

(Reference)

Connecting rod big end inside diameter:

Mark "1"

60.526 – 60.532 mm (2.3829 – 2.3831 in.)

Mark "2"

60.532 – 60.538 mm (2.3851 – 2.3834 in.)

Mark "3"

60.538 – 60.544 mm (2.3834 – 2.3836 in.)

Crankshaft crank pin diameter:

Mark "1"

56.994 — 57.000 mm (2.2439 — 2.2441 in.)

Mark "2"

56.988 — 56.994 mm (2.2436 — 2.2439 in.)

Mark "3"

56.982 — 56.988 mm (2.2434 — 2.2436 in.)

Standard sized bearing center wall thickness:

Mark "2"

2.489 — 2.492 mm (0.0980 — 0.0981 in.)

Mark "3"

2.492 — 2.495 mm (0.0981 — 0.0982 in.)

Mark "4"

2.495 — 2.498 mm (0.0982 — 0.0983 in.)


Mark "5"

2.498 — 2.501 mm (0.0983 — 0.0985 in.)

Mark "6"


2.501 — 2.504 mm (0.0985 — 0.0986 in.)

(k) Completely remove the Plastigage.

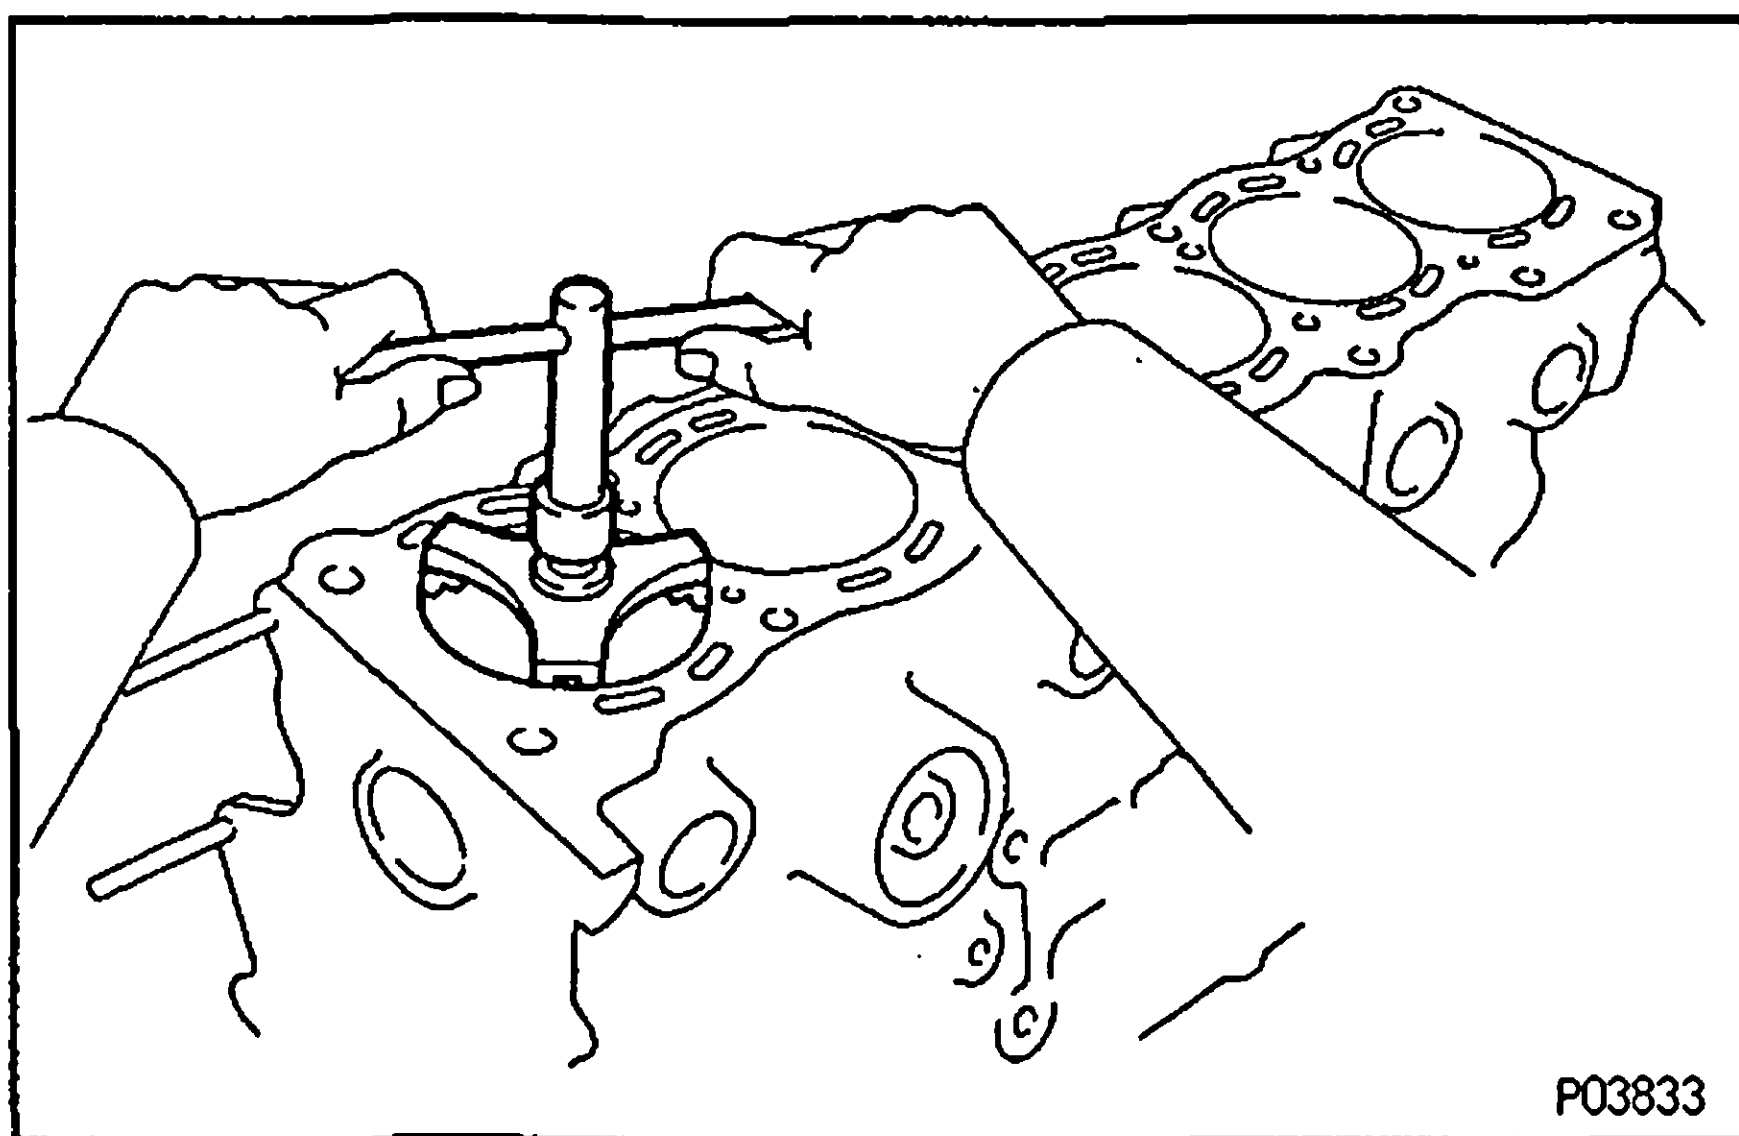

4. REMOVE PISTON AND CONNECTING ROD ASSEMBLIES

- Using a ridge reamer, remove the all carbon from the top of the cylinder.
- Push the piston, connecting rod assembly and upper bearing through the top of the cylinder block.

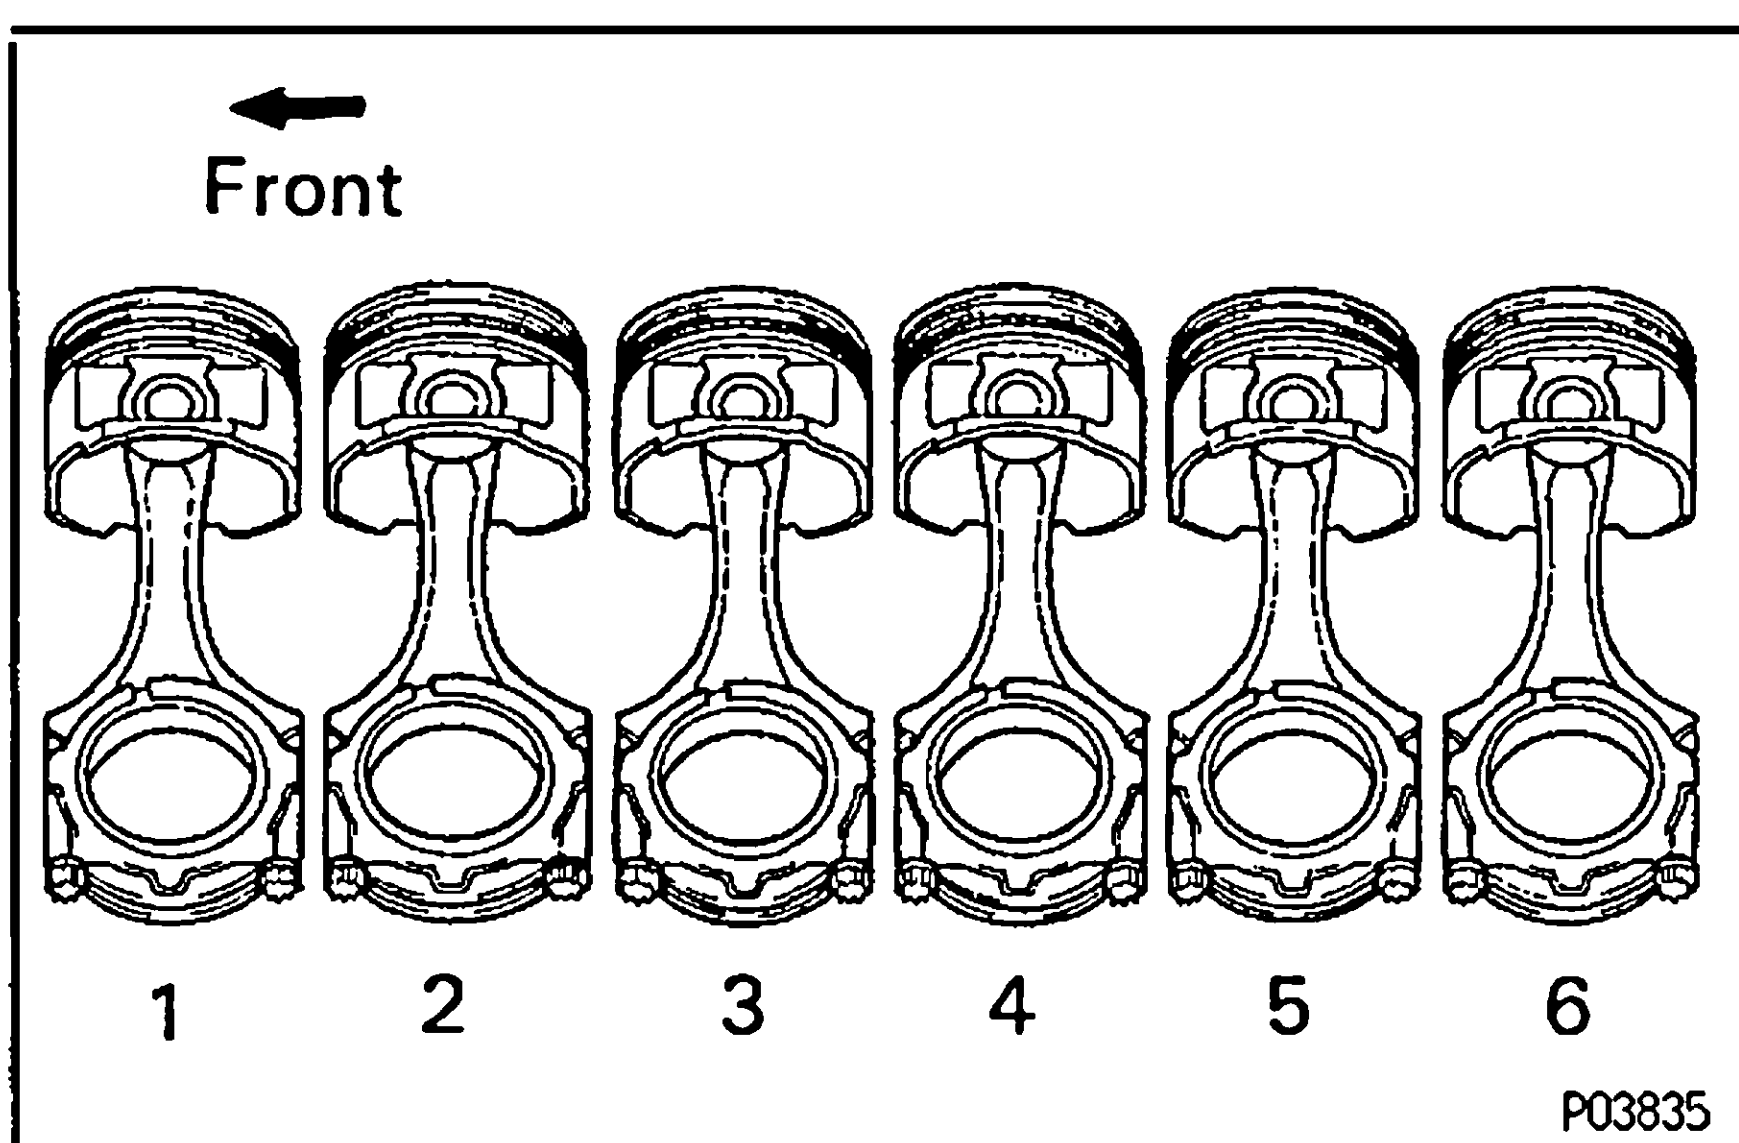

HINT:

- Keep the bearings, connecting rod and cap together.
- Arrange the piston and connecting rod assemblies in correct order.

5. CHECK CRANKSHAFT THRUST CLEARANCE


Using a dial indicator, measure the thrust clearance while prying the crankshaft back and forth with a screwdriver.

Standard thrust clearance:

0.020 — 0.220 mm (0.0008 — 0.0087 in.)

Maximum thrust clearance:

0.30 mm (0.0118 in.)

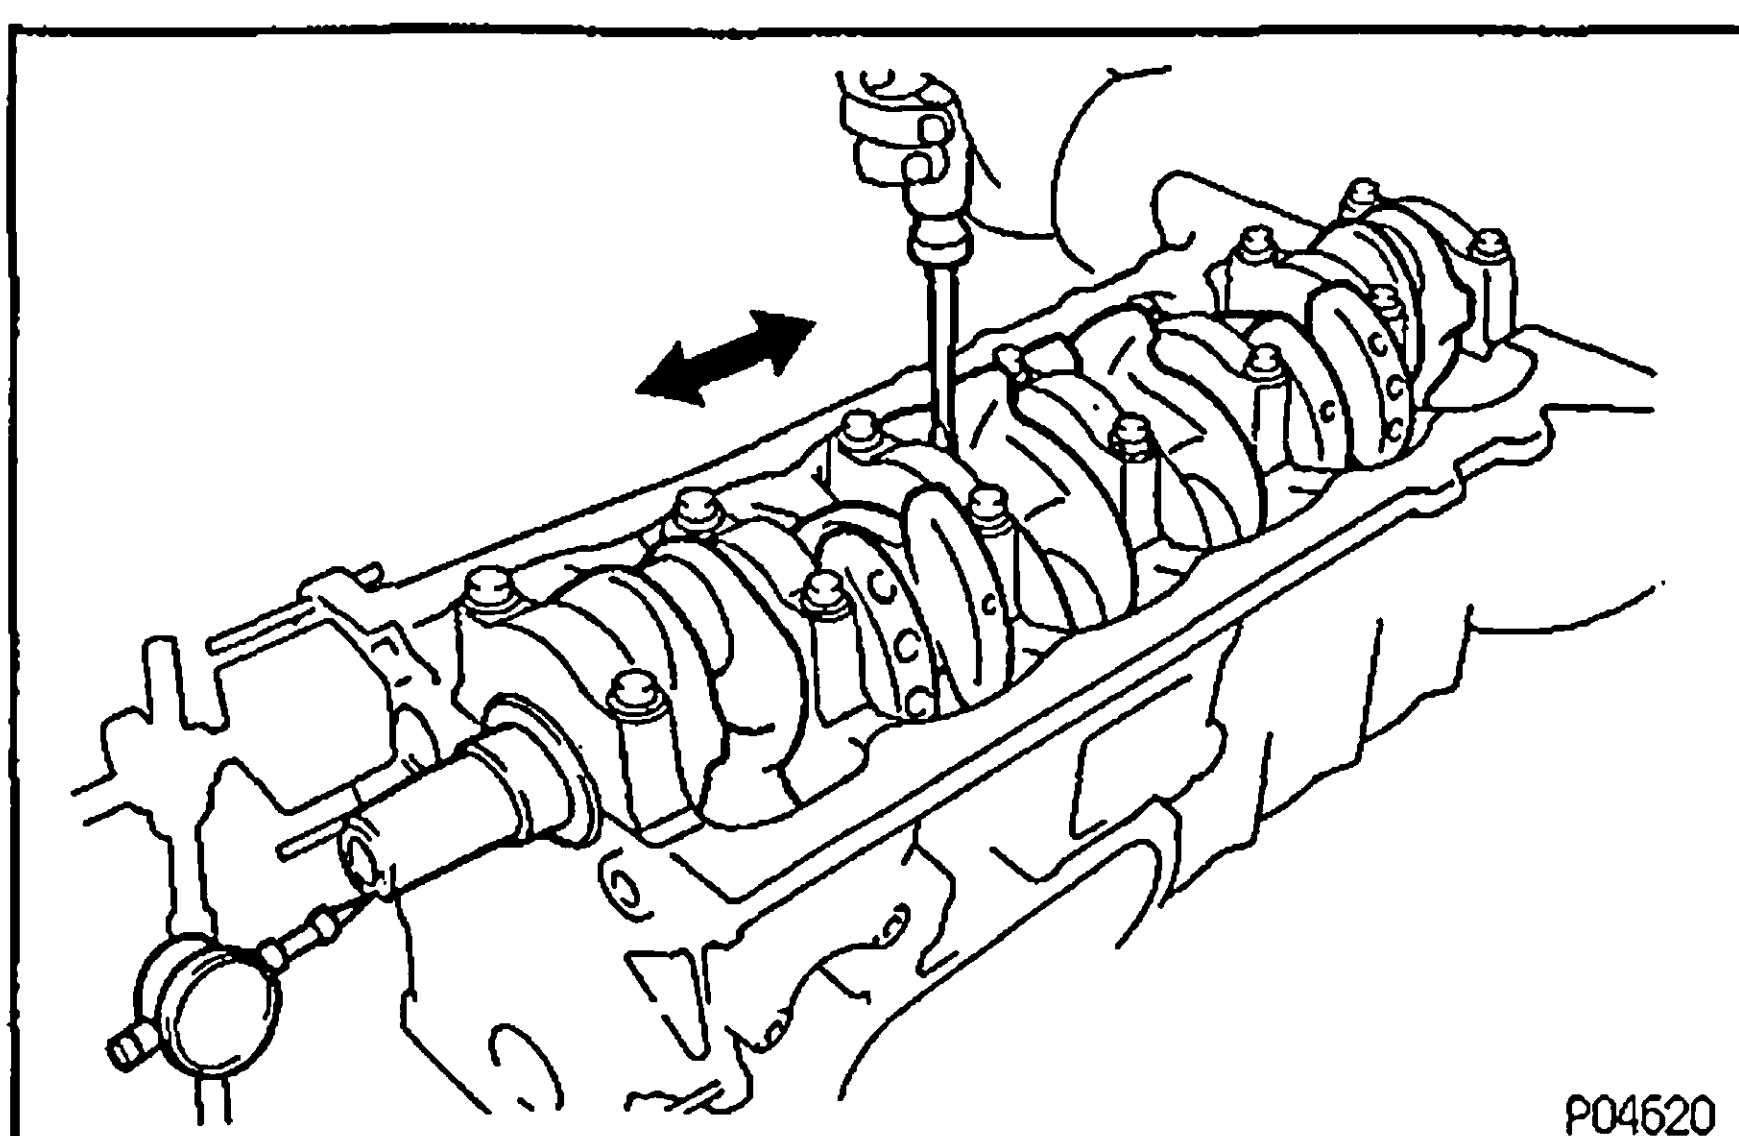

If the thrust clearance is greater than maximum, replace the thrust washers as a set.

Thrust washer thickness:

STD

2.440 — 2.490 mm (0.0961 — 0.0980 in.)

O/S 0.125


2.503 — 2.553 mm (0.0985 — 0.1005 in.)

O/S 0.250

2.565 — 2.615 mm (0.1010 — 0.1030 in.)

6. REMOVE MAIN BEARING CAPS AND CHECK OIL CLEARANCE

- (a) Uniformly loosen and remove the main bearing cap bolts in several passes, in the sequence shown.

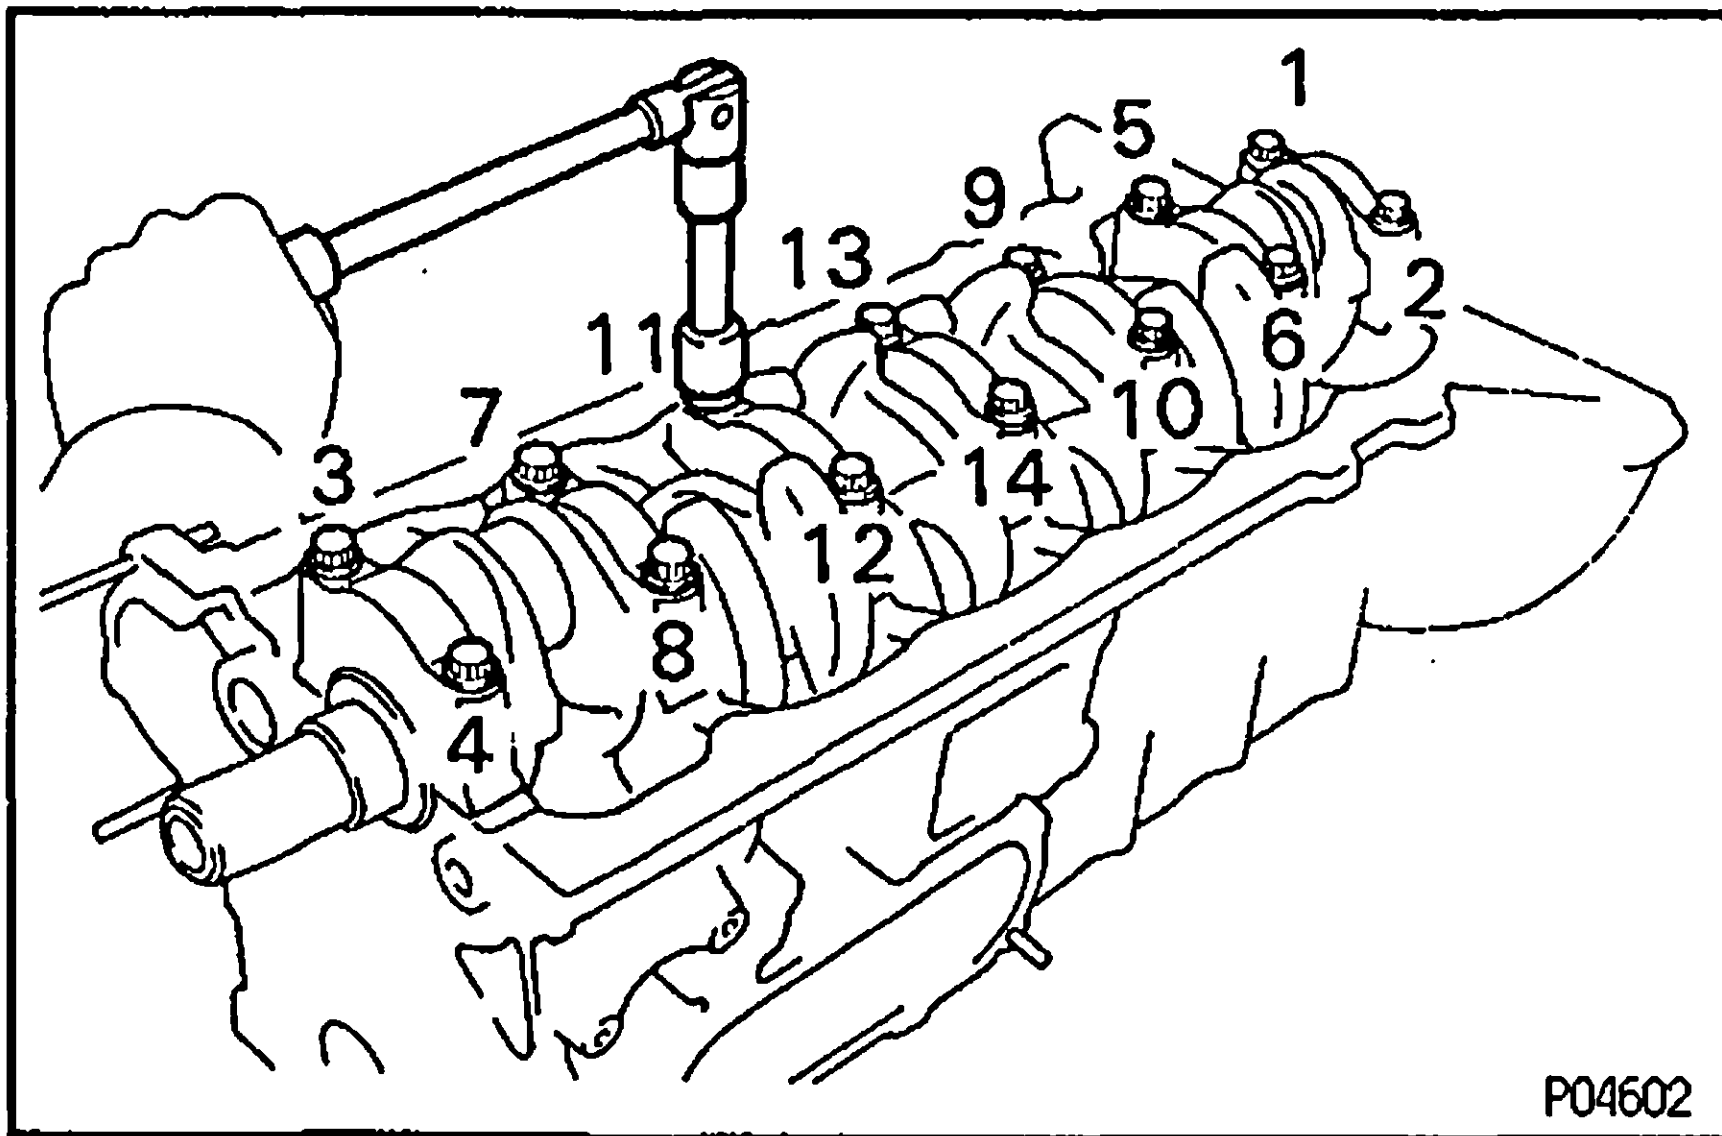


P04602

- (b) Using the removed main bearing cap bolts, pry the main bearing cap back and forth, and remove the main bearing caps, lower bearings and lower thrust washers (No.4 main bearing cap only).

HINT:


- Keep the lower bearing and main bearing cap together.
- Arrange the main bearing caps and lower thrust washers in correct order.

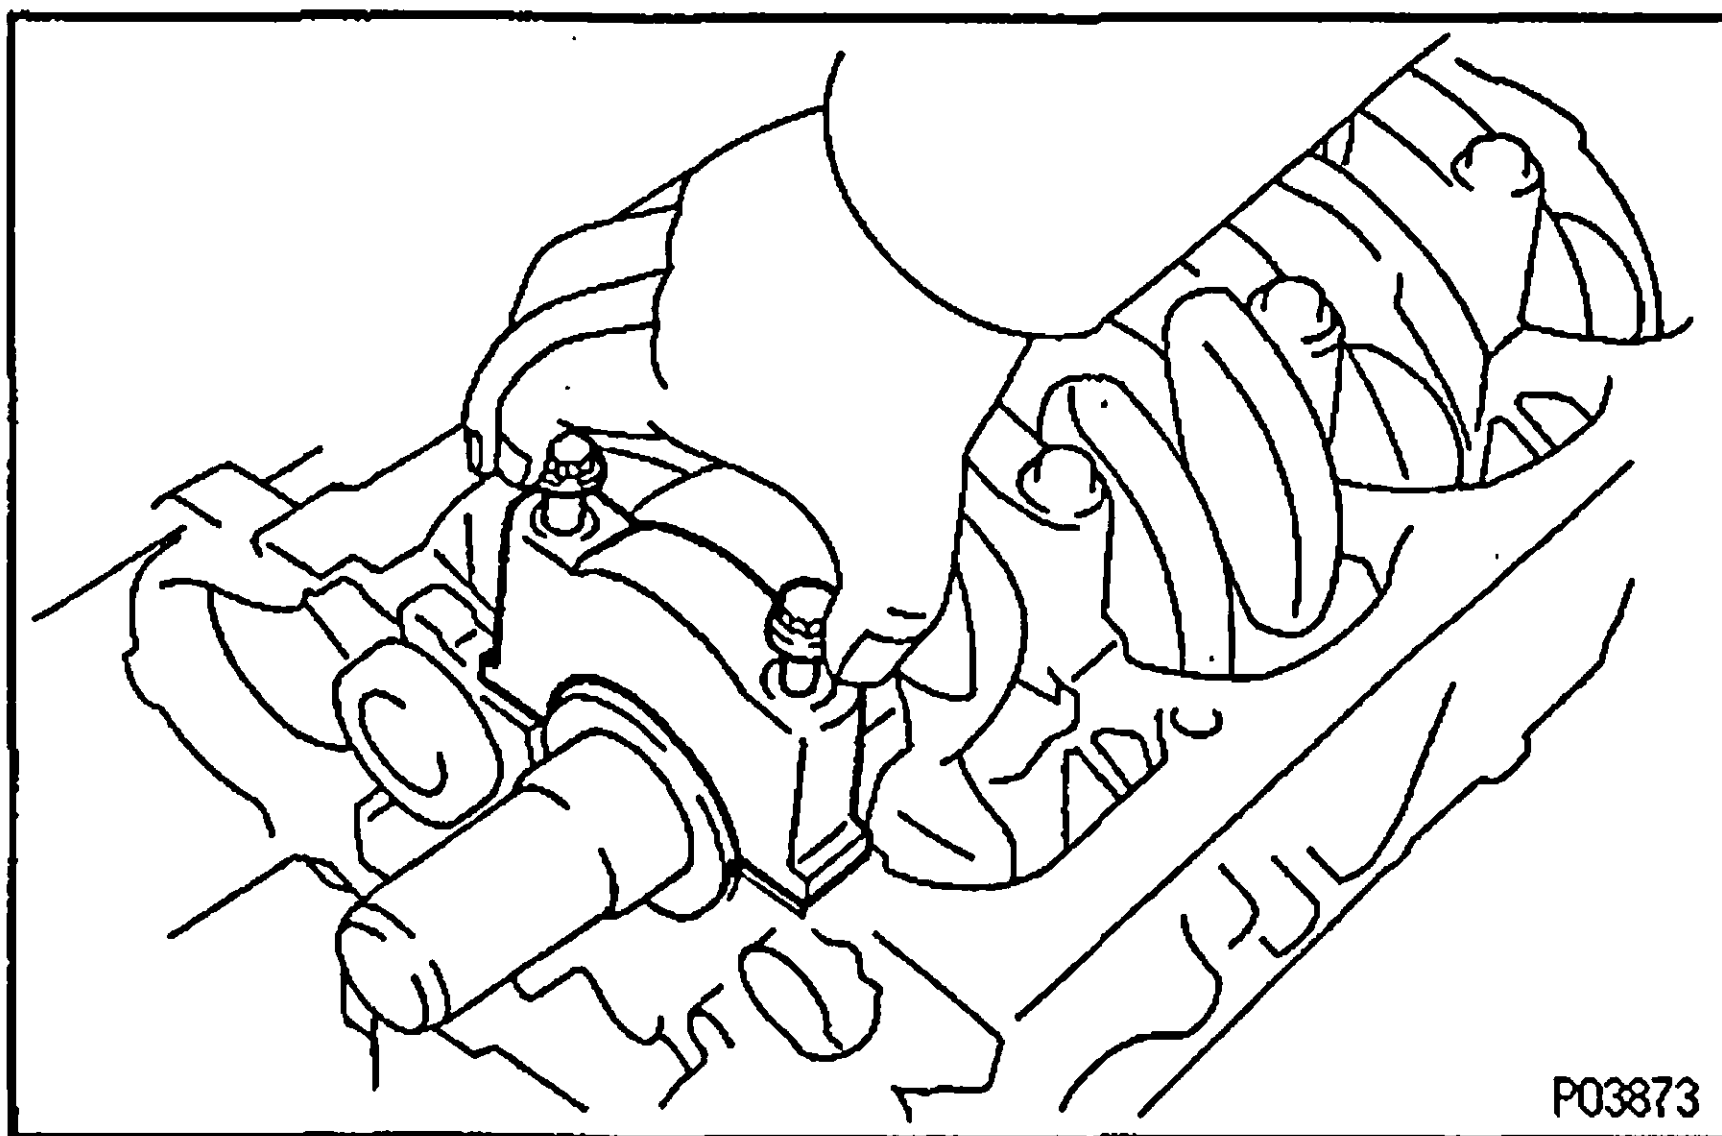

P03873

- (c) Lift out the crankshaft.


HINT: Keep the upper bearing and upper thrust washers together with the cylinder block.

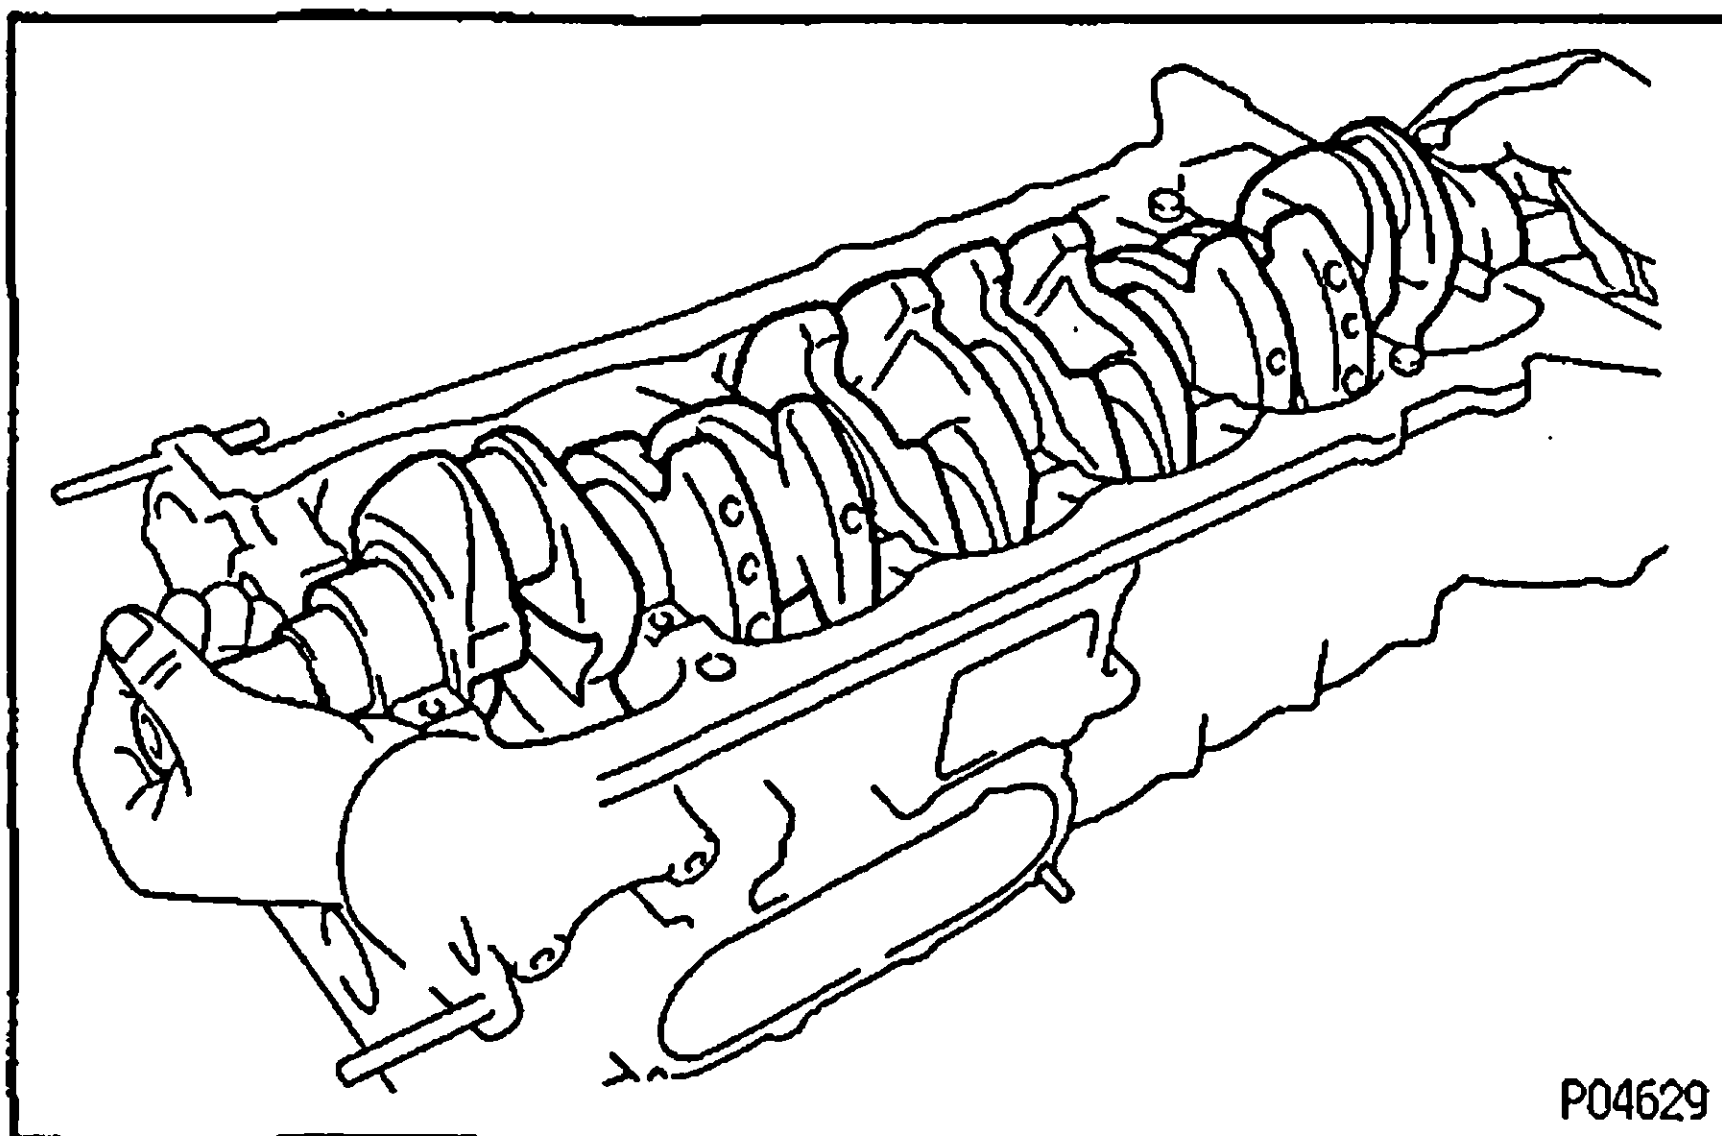


P04629

- (d) Clean each main journal and bearing.
(e) Check each main journal and bearing for pitting and scratches.

If the journal or bearing is damaged, replace the bearings. If necessary, grind or replace the crankshaft.

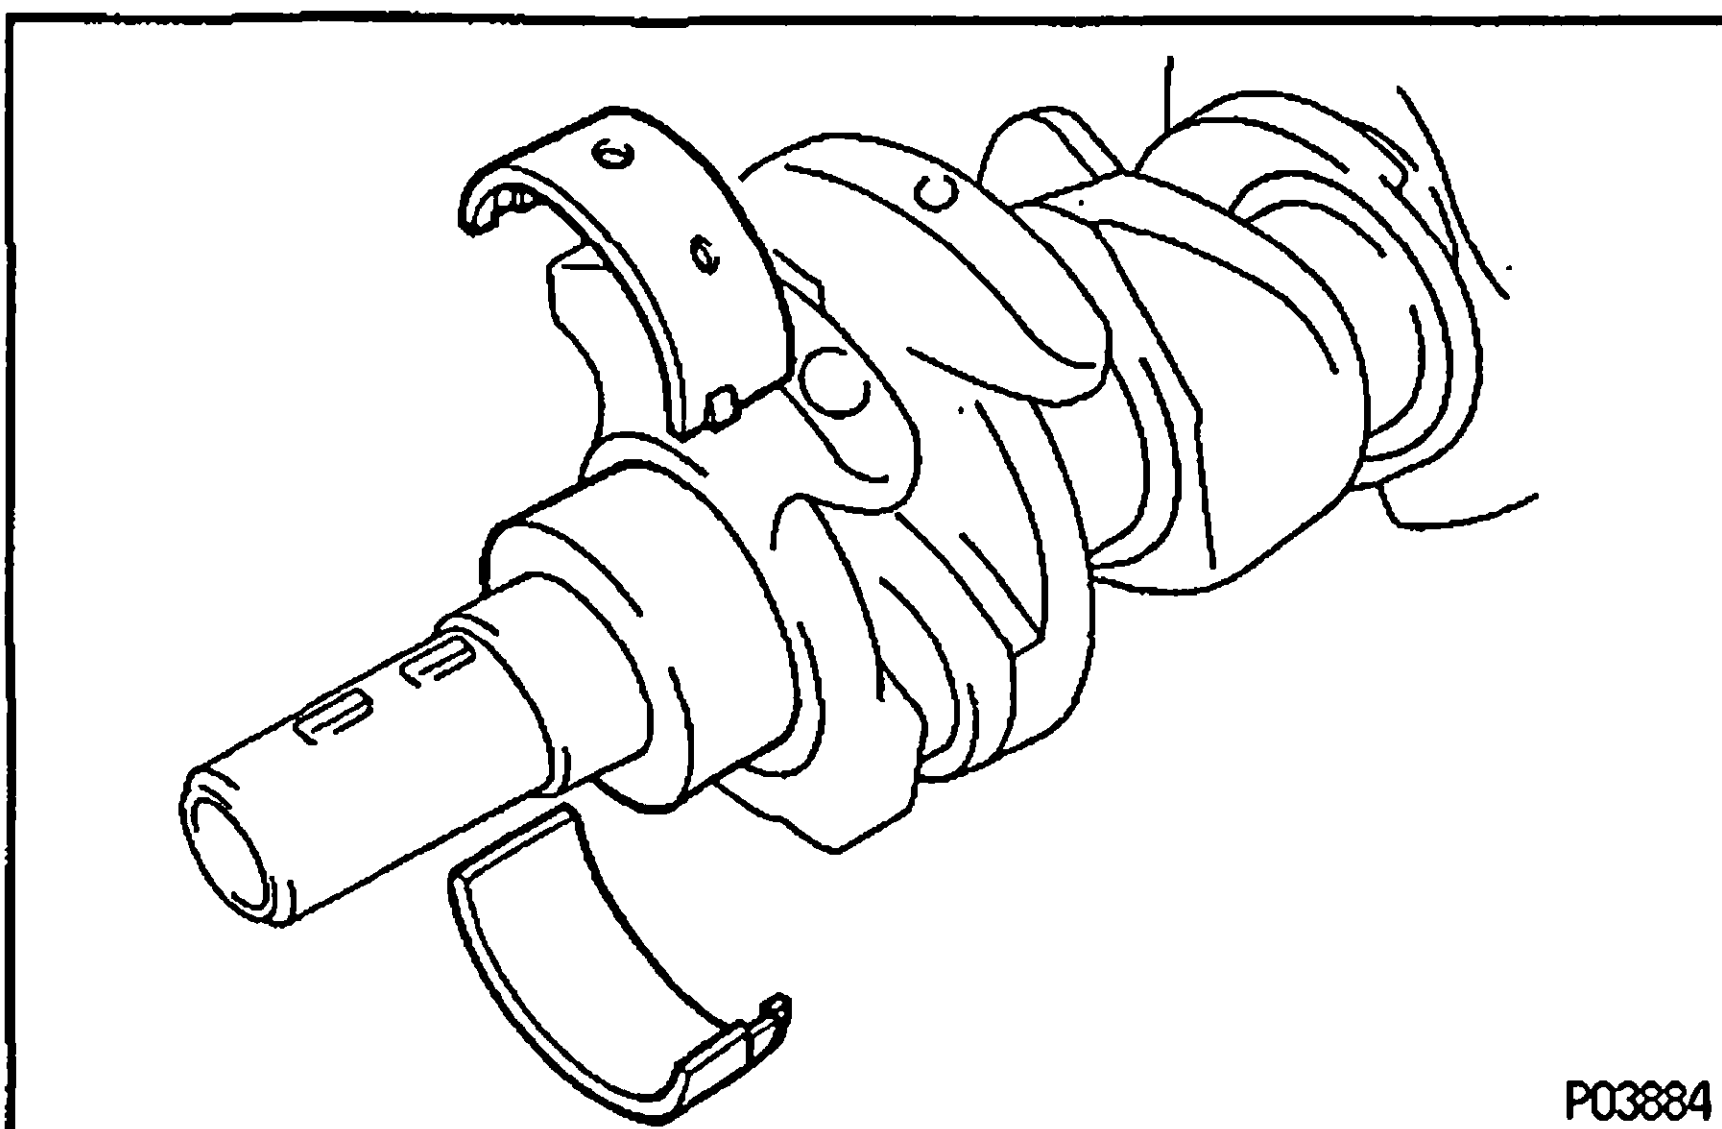


P03884

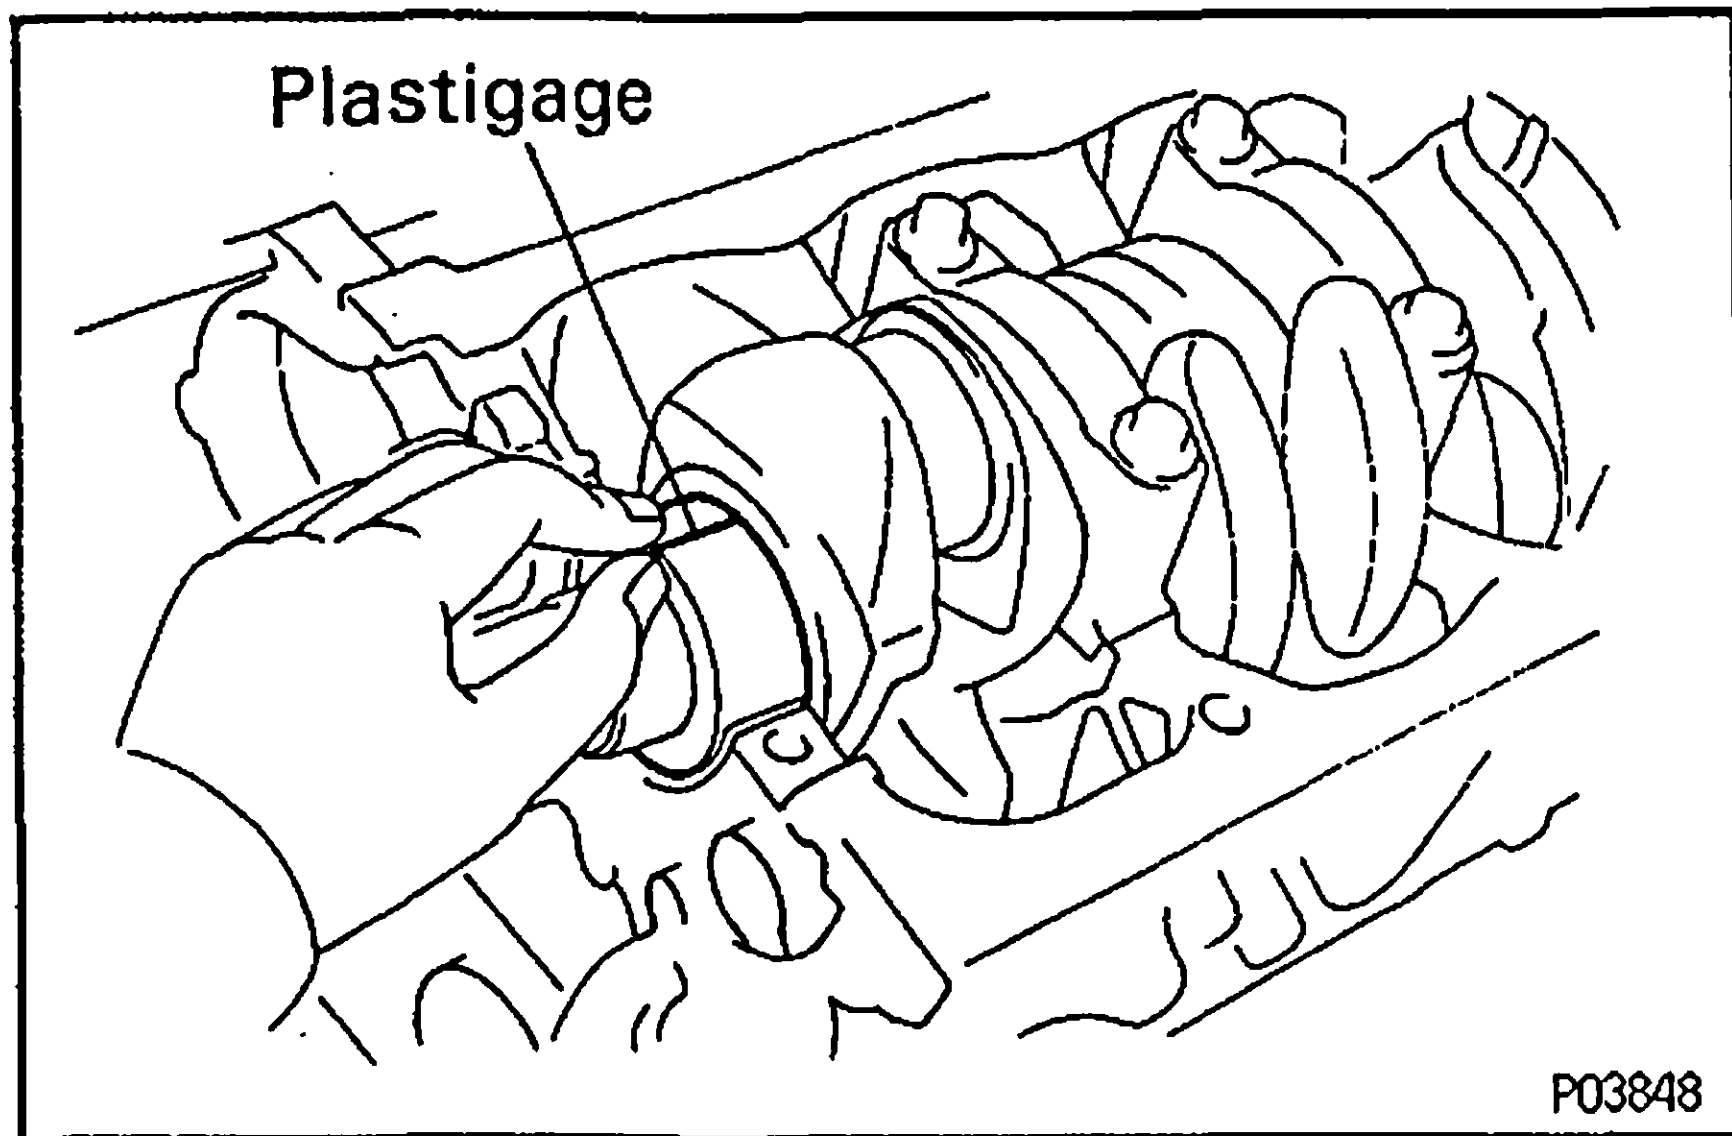


- (f) Place the crankshaft on the cylinder block.
- (g) lay a strip of Plastigage across each journal.


EG

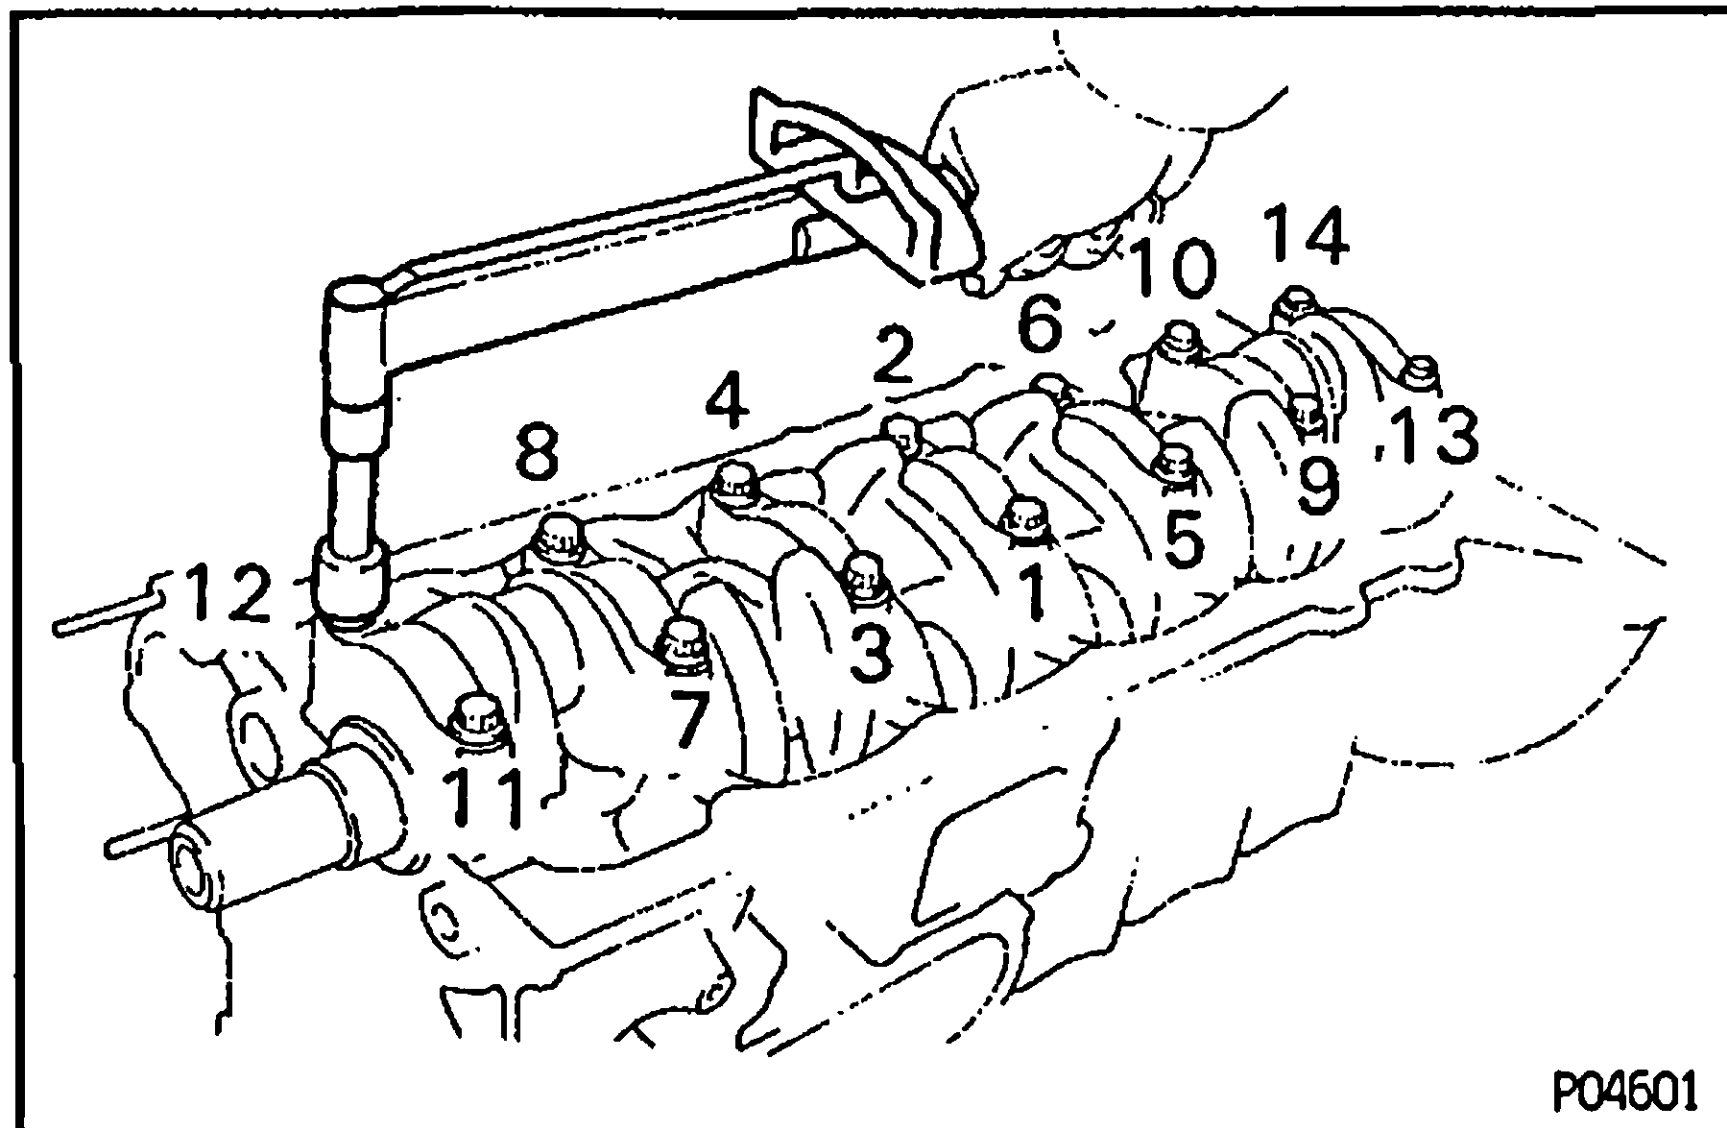


- (h) Install the main bearing caps.
(See step 4 on page EG—116)
1st
Torque: 74 N·m (750 kgf·cm, 54 ft·lbf)
2nd Turn 90°
NOTICE: Do not turn the crankshaft.

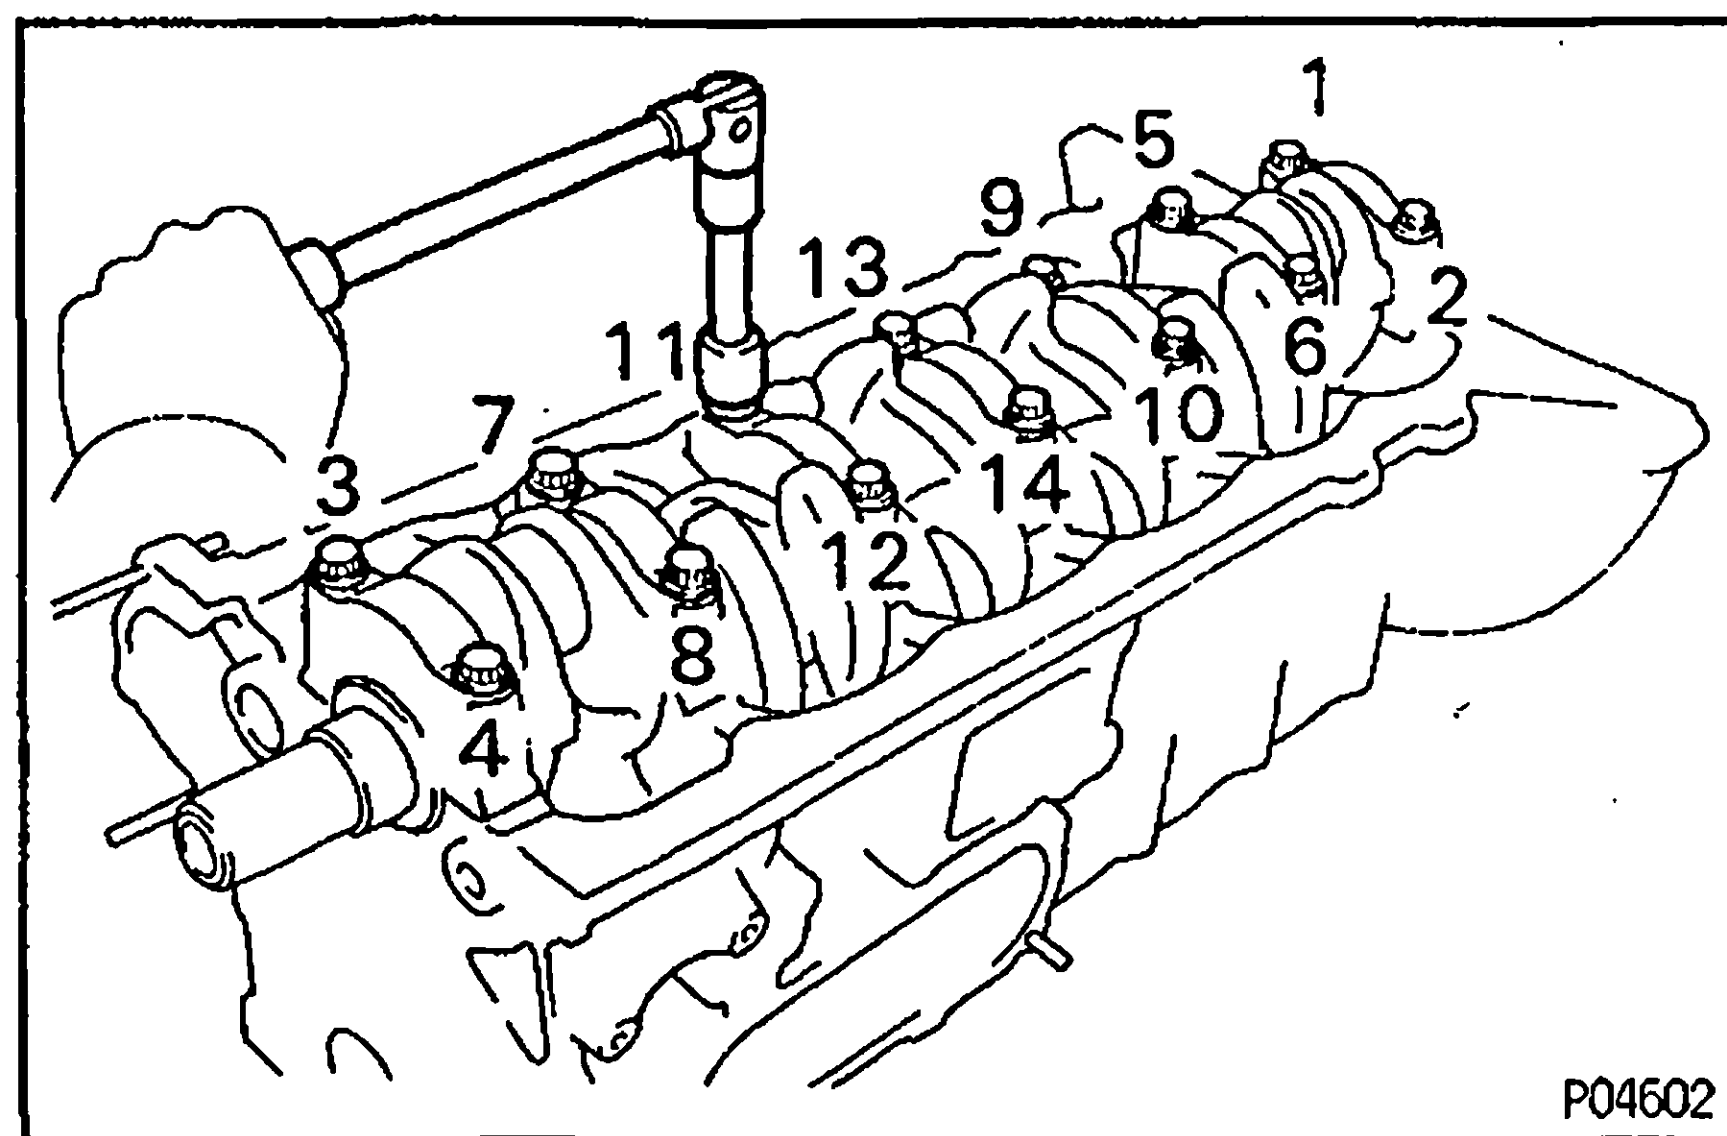

- (i) Remove the main bearing caps.
(See procedure (a) and (b) above)

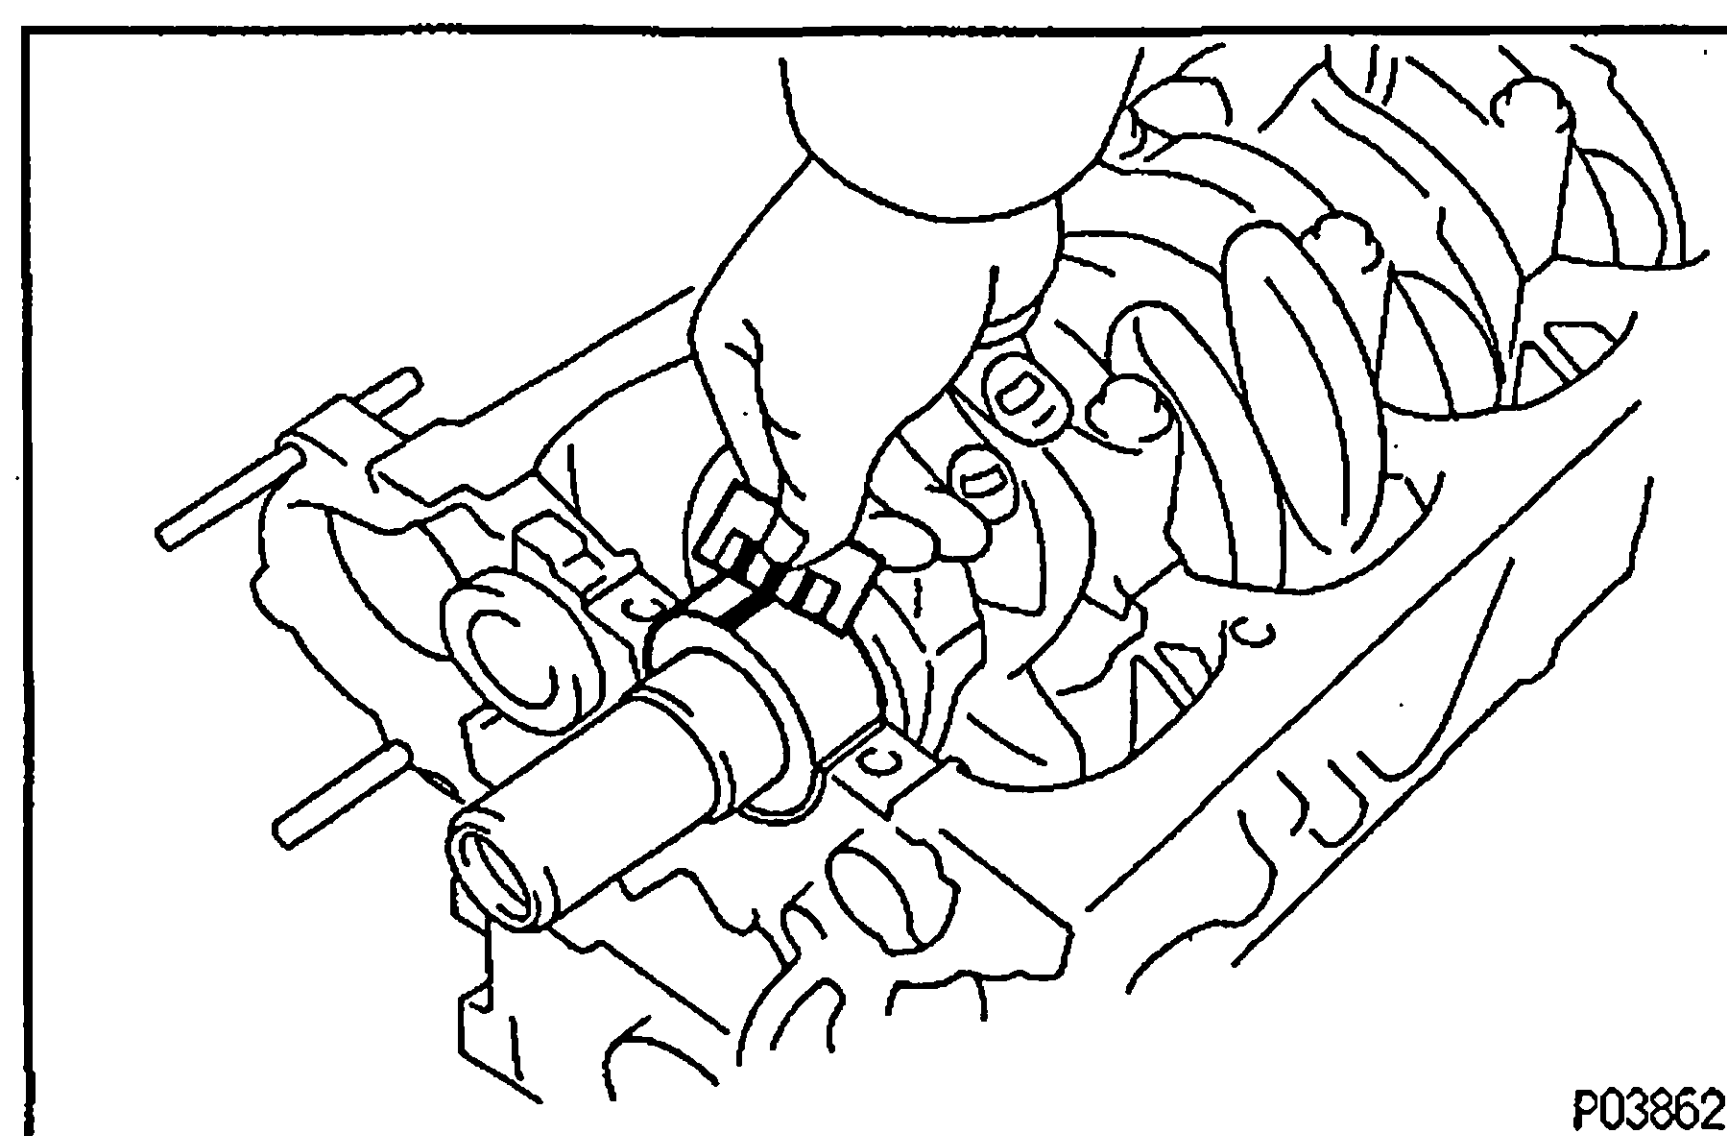

- (j) Measure the Plastigage at its widest point.
Standard clearance:
STD
0.042 — 0.060 mm (0.0017 — 0.0024 in.)
U/S 0.25
0.041 — 0.081 mm (0.0016 — 0.0032 in.)
Maximum clearance:
0.10 mm (0.0039 in.)
If the oil clearance is greater than maximum, replace the bearings. If necessary, grind or replace the crankshaft.

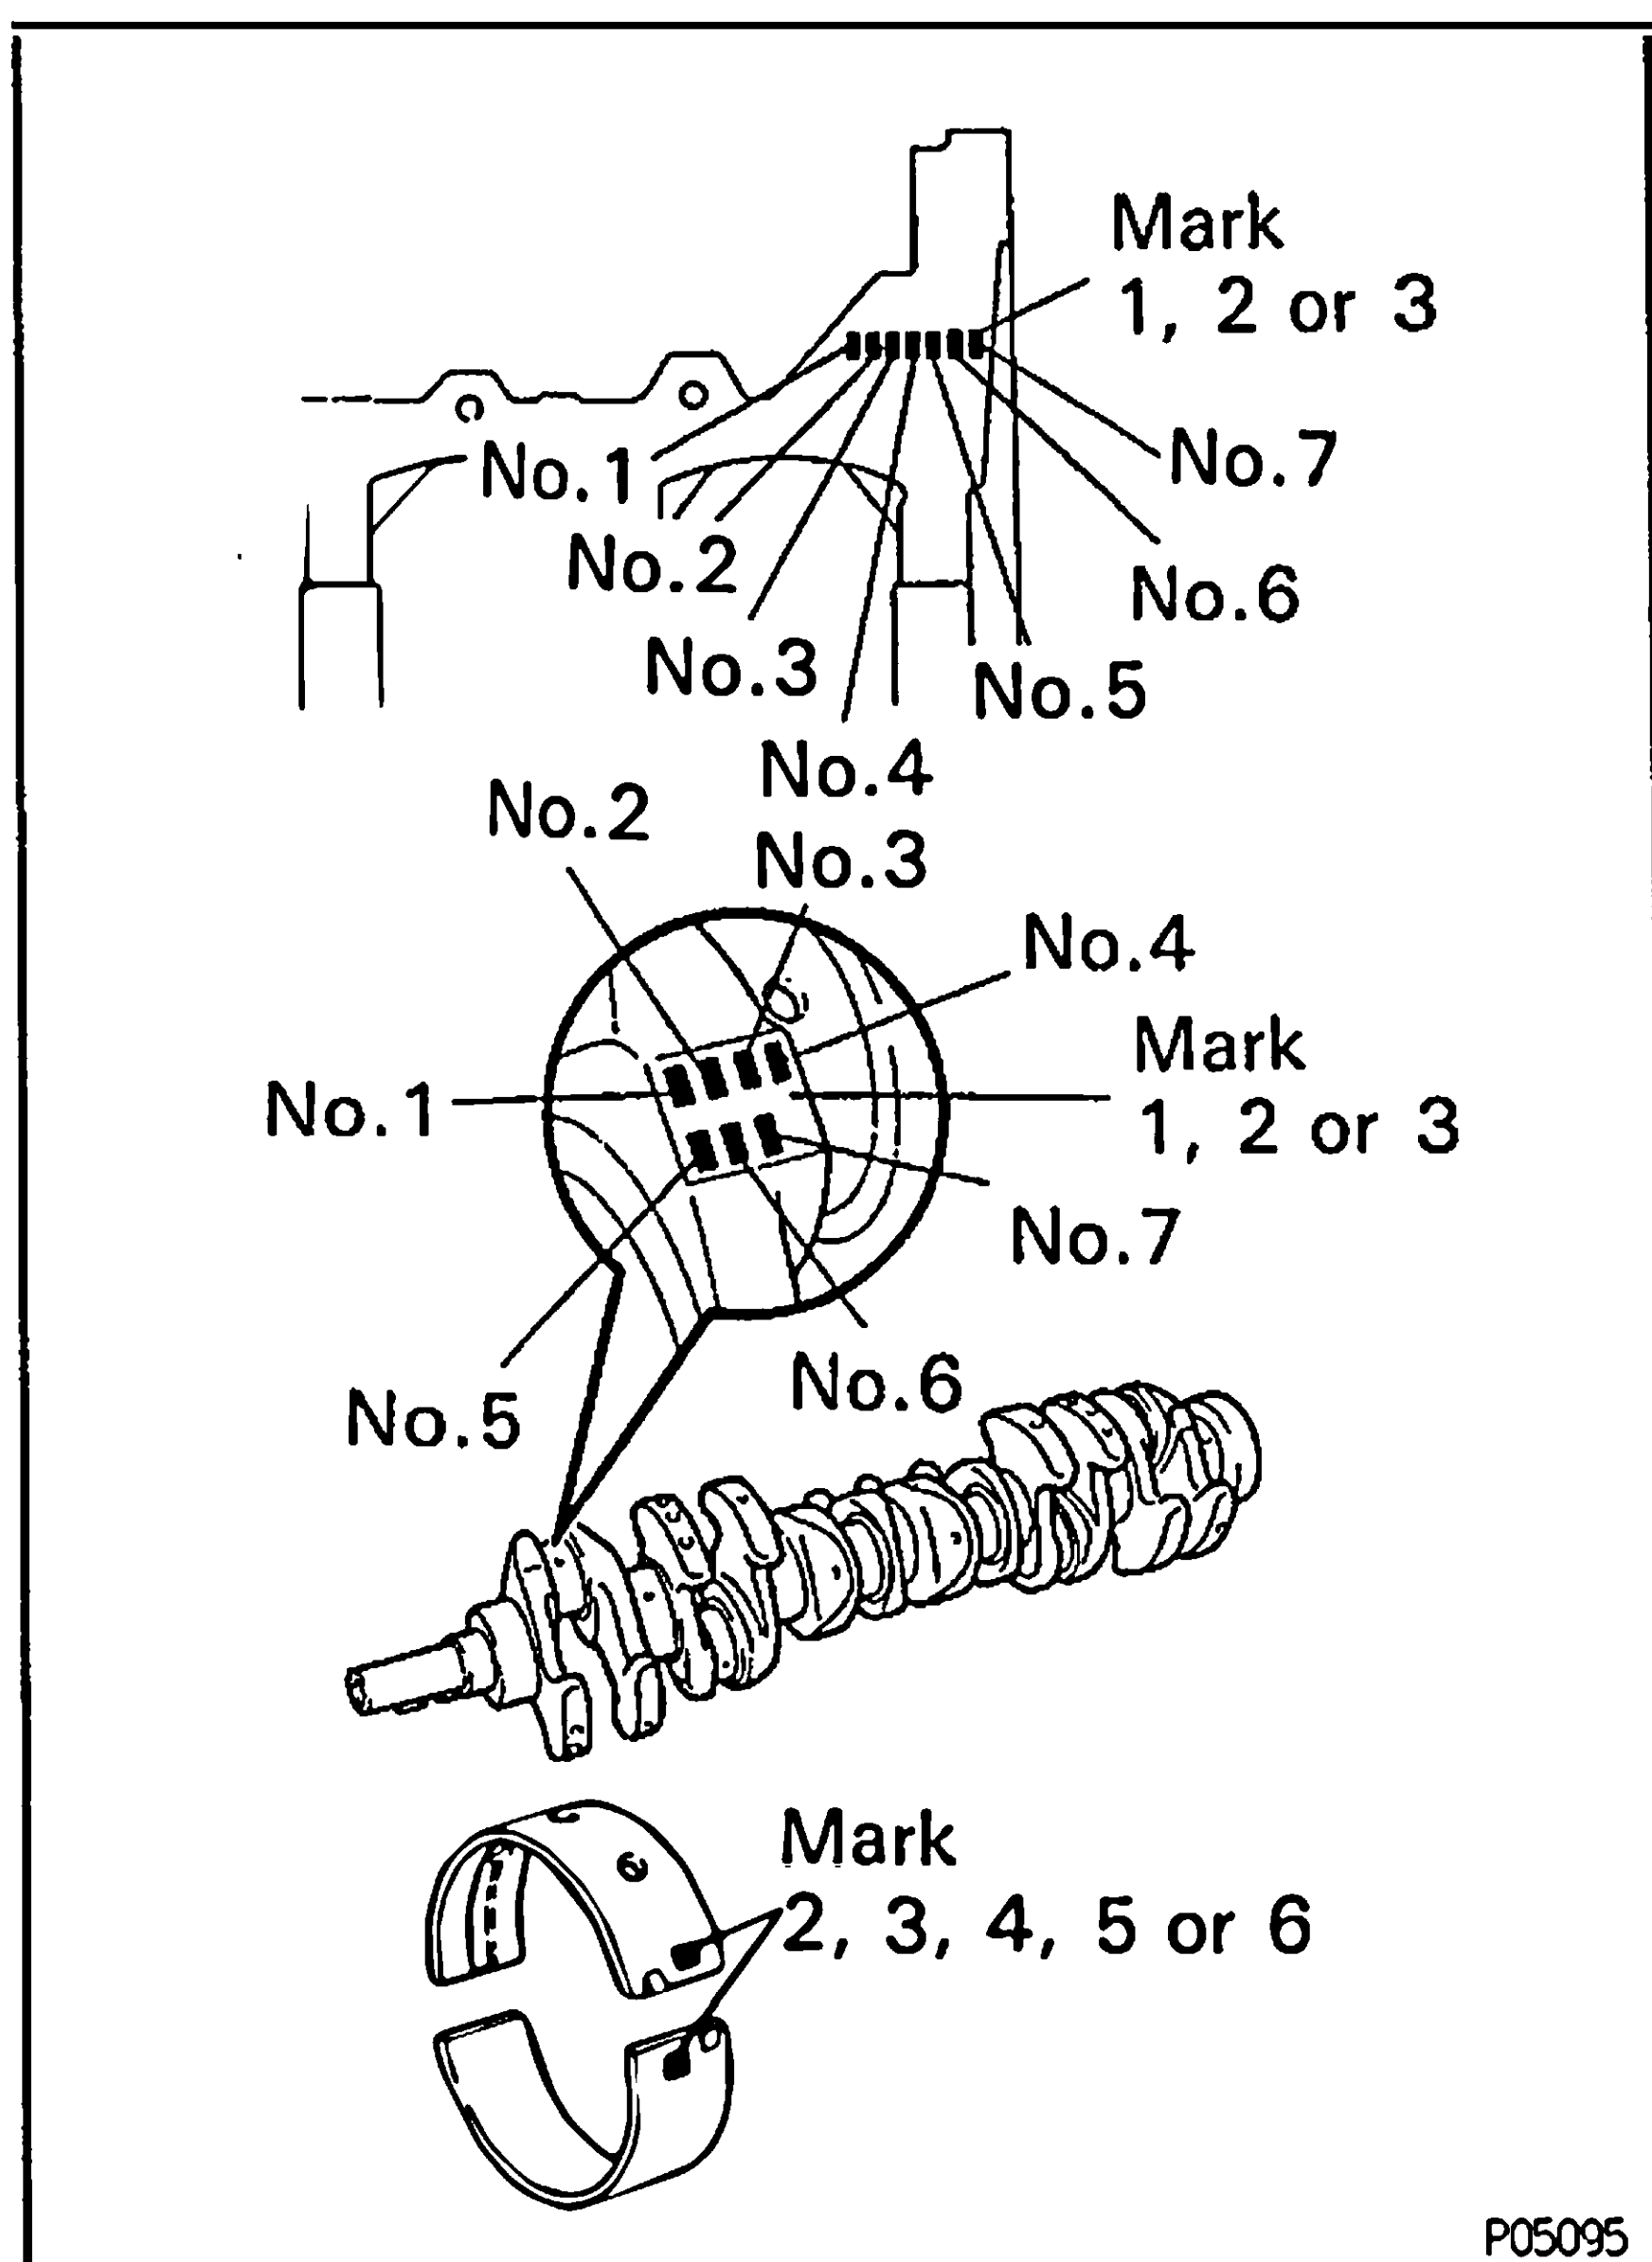

P05095

HINT: If using a standard bearing, replace with one having the same number. If the number of the bearing cannot be determined, select the correct bearing by adding together the numbers imprinted on the cylinder block and crankshaft, then selecting the bearing with the same number as the total. There are five sizes of standard bearings, marked "2", "3", "4", "5" and "6" accordingly.

	Number marked								
	1			2			3		
Cylinder block									
Crankshaft	1	2	3	1	2	3	1	2	3
Use bearing	2	3	4	3	4	5	4	5	6

EXAMPLE: Cylinder block "2" + Crankshaft "1"
= Total number 3 (Use bearing "3")

V00739

(Reference)

Cylinder block main journal bore diameter:

Mark "1"

74.026 — 74.032 mm (2.9144 — 2.9146 in.)

Mark "2"

74.032 — 74.038 mm (2.9146 — 2.9149 in.)

Mark "3"

74.038 — 74.044 mm (2.9149 — 2.9151 in.)

Crankshaft journal diameter:

Mark "1"

68.994 — 69.000 mm (2.7163 — 2.7165 in.)

Mark "2"

68.988 — 68.994 mm (2.7161 — 2.7163 in.)

Mark "3"

68.982 — 68.988 mm (2.7158 — 2.7161 in.)

Standard sized bearing center wall thickness:

Mark "2"

2.489 — 2.492 mm (0.0980 — 0.0981 in.)

Mark "3"

2.492 — 2.495 mm (0.0981 — 0.0982 in.)

Mark "4"

2.495 — 2.498 mm (0.0982 — 0.0983 in.)


Mark "5"

2.498 — 2.501 mm (0.0983 — 0.0985 in.)

Mark "6"

2.501 — 2.504 mm (0.0985 — 0.0986 in.)



(k) Completely remove the Plastigage.

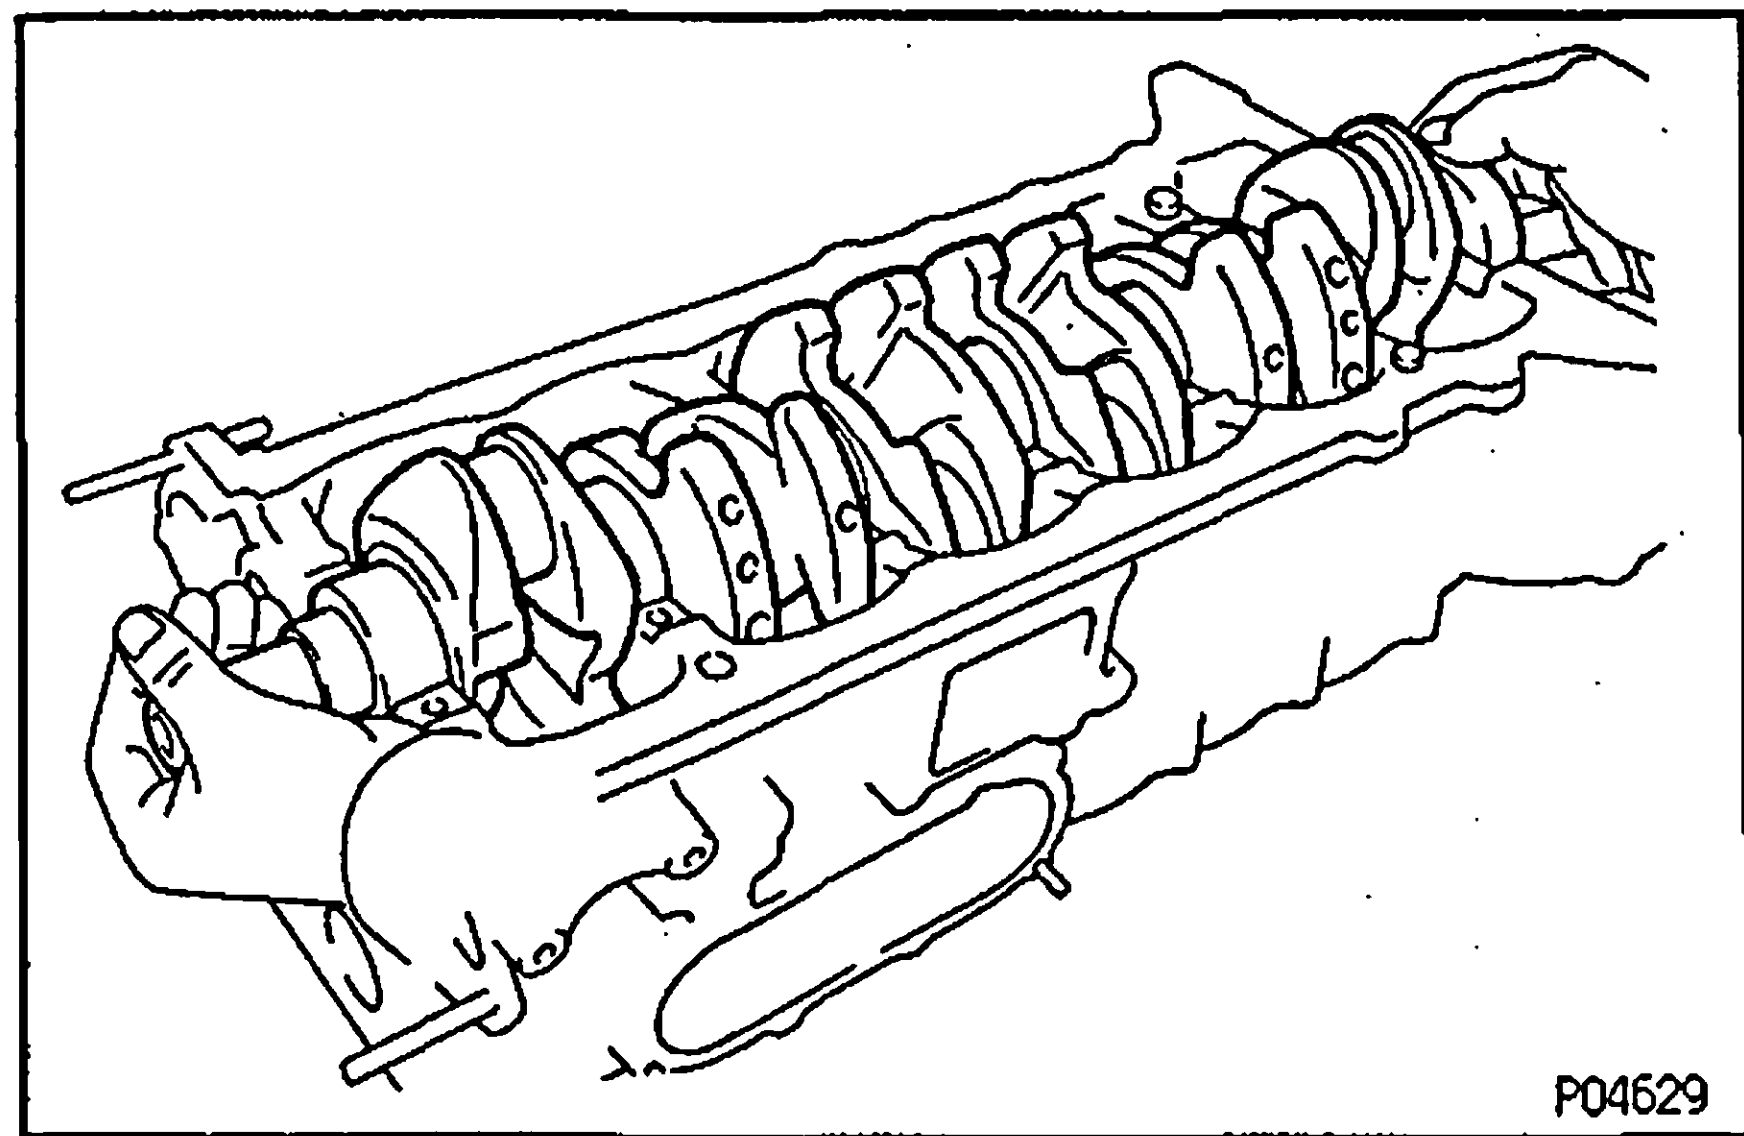**7. REMOVE CRANKSHAFT**


- (a) Lift out the crankshaft.
- (b) Remove the upper main bearings and upper thrust washers from the cylinder block.

EG


HINT: Arrange the main bearings and thrust washers in correct order.

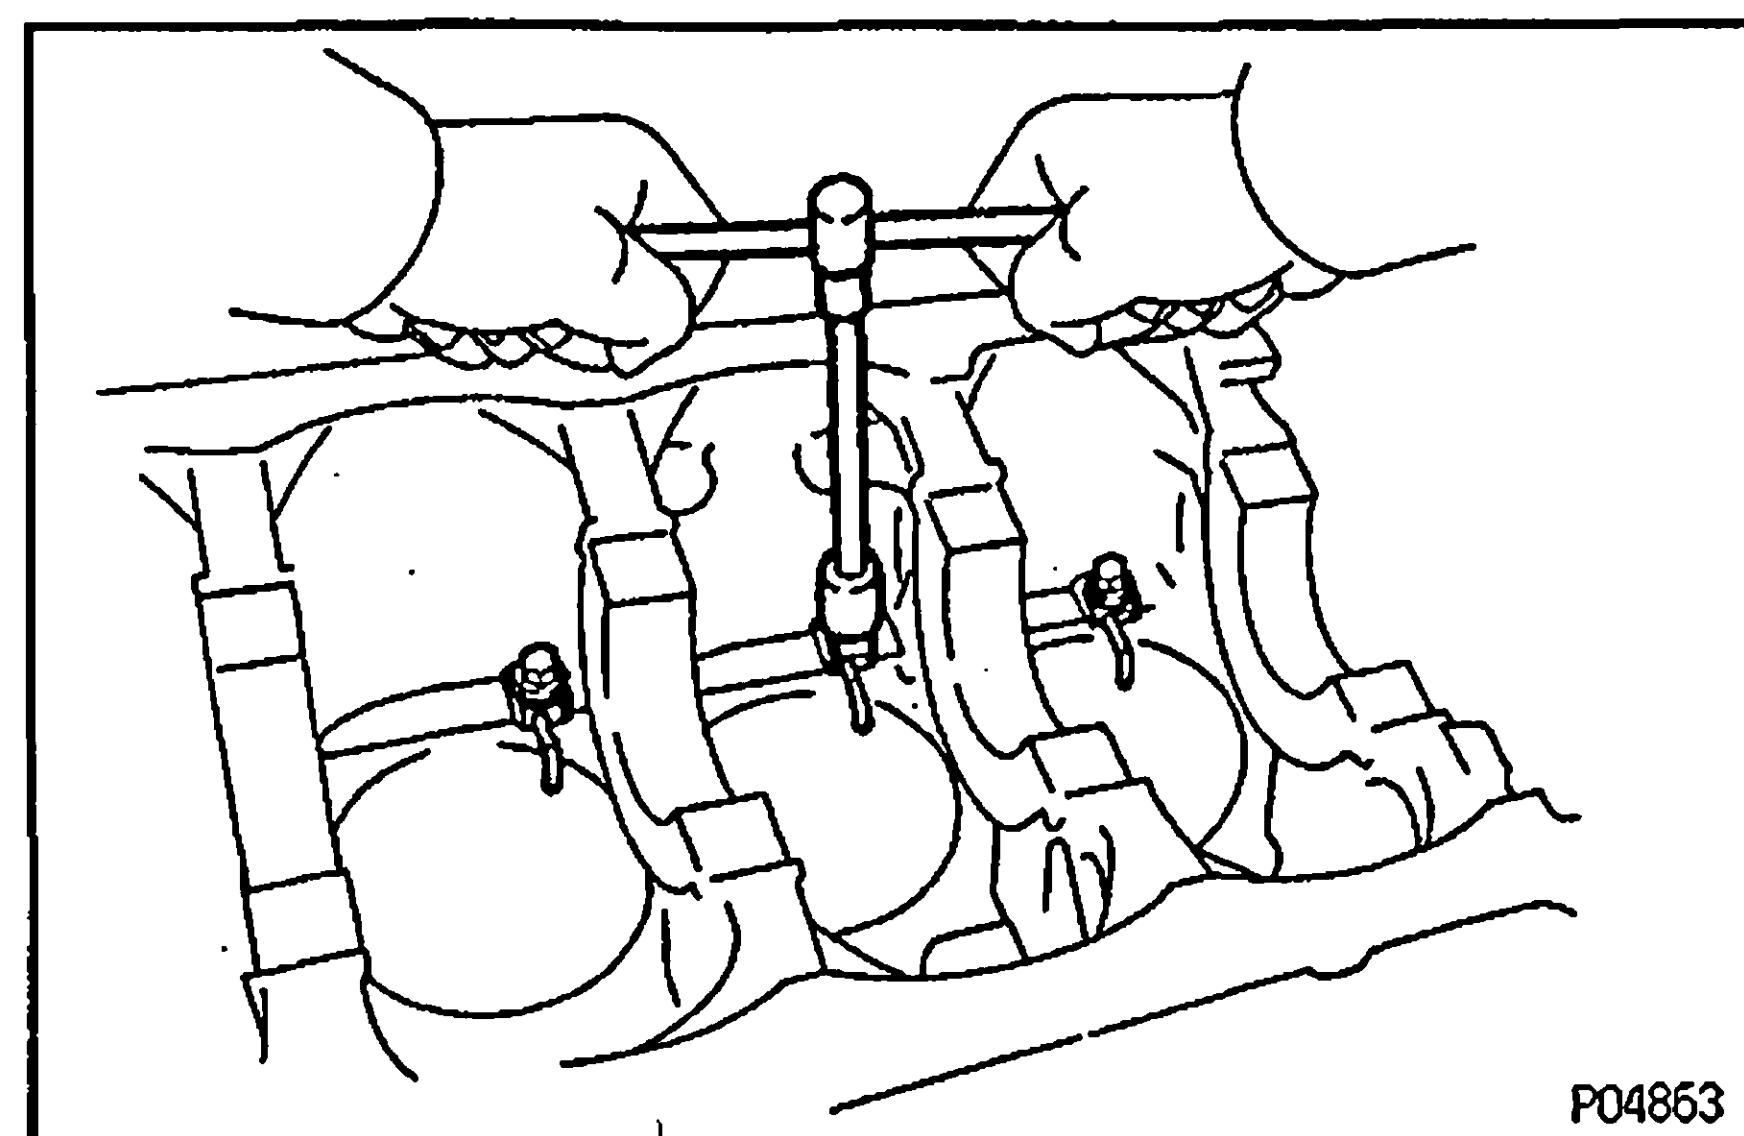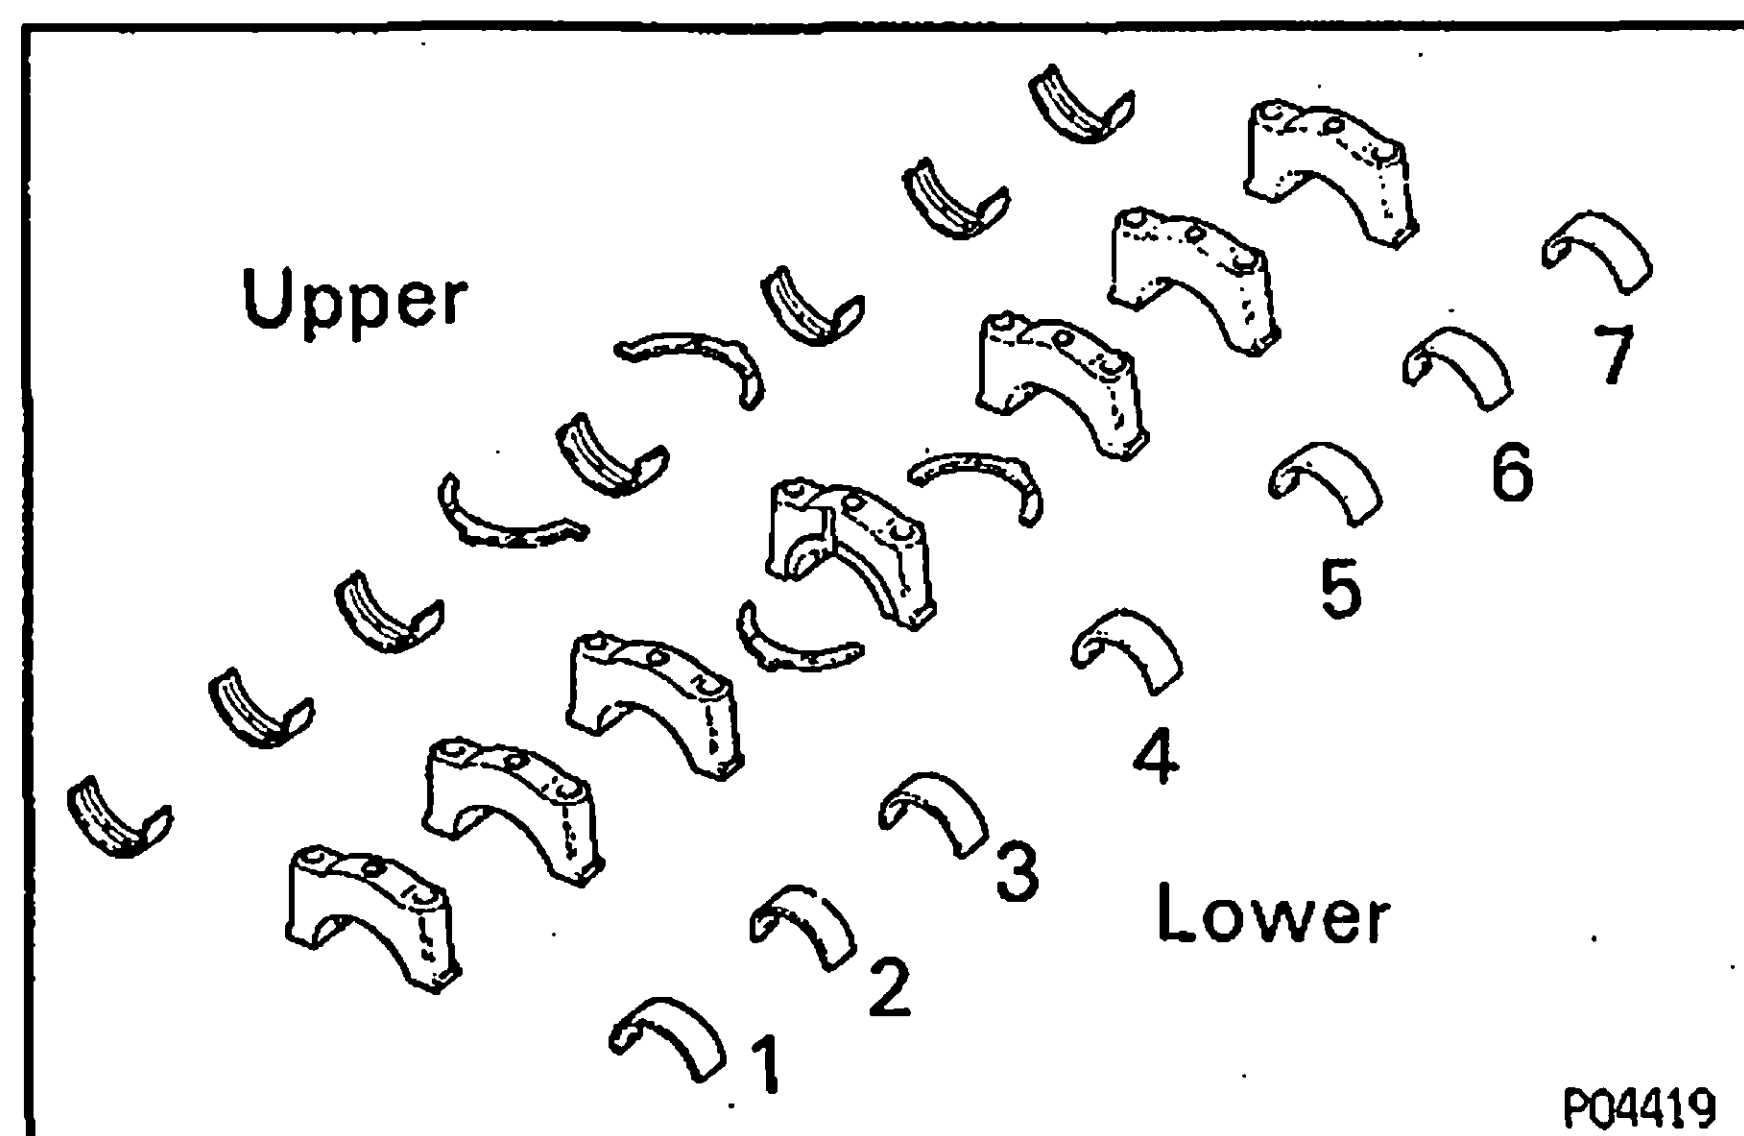**8. REMOVE CHECK VALVES AND OIL NOZZLES**

Remove the six check valves and oil nozzles.

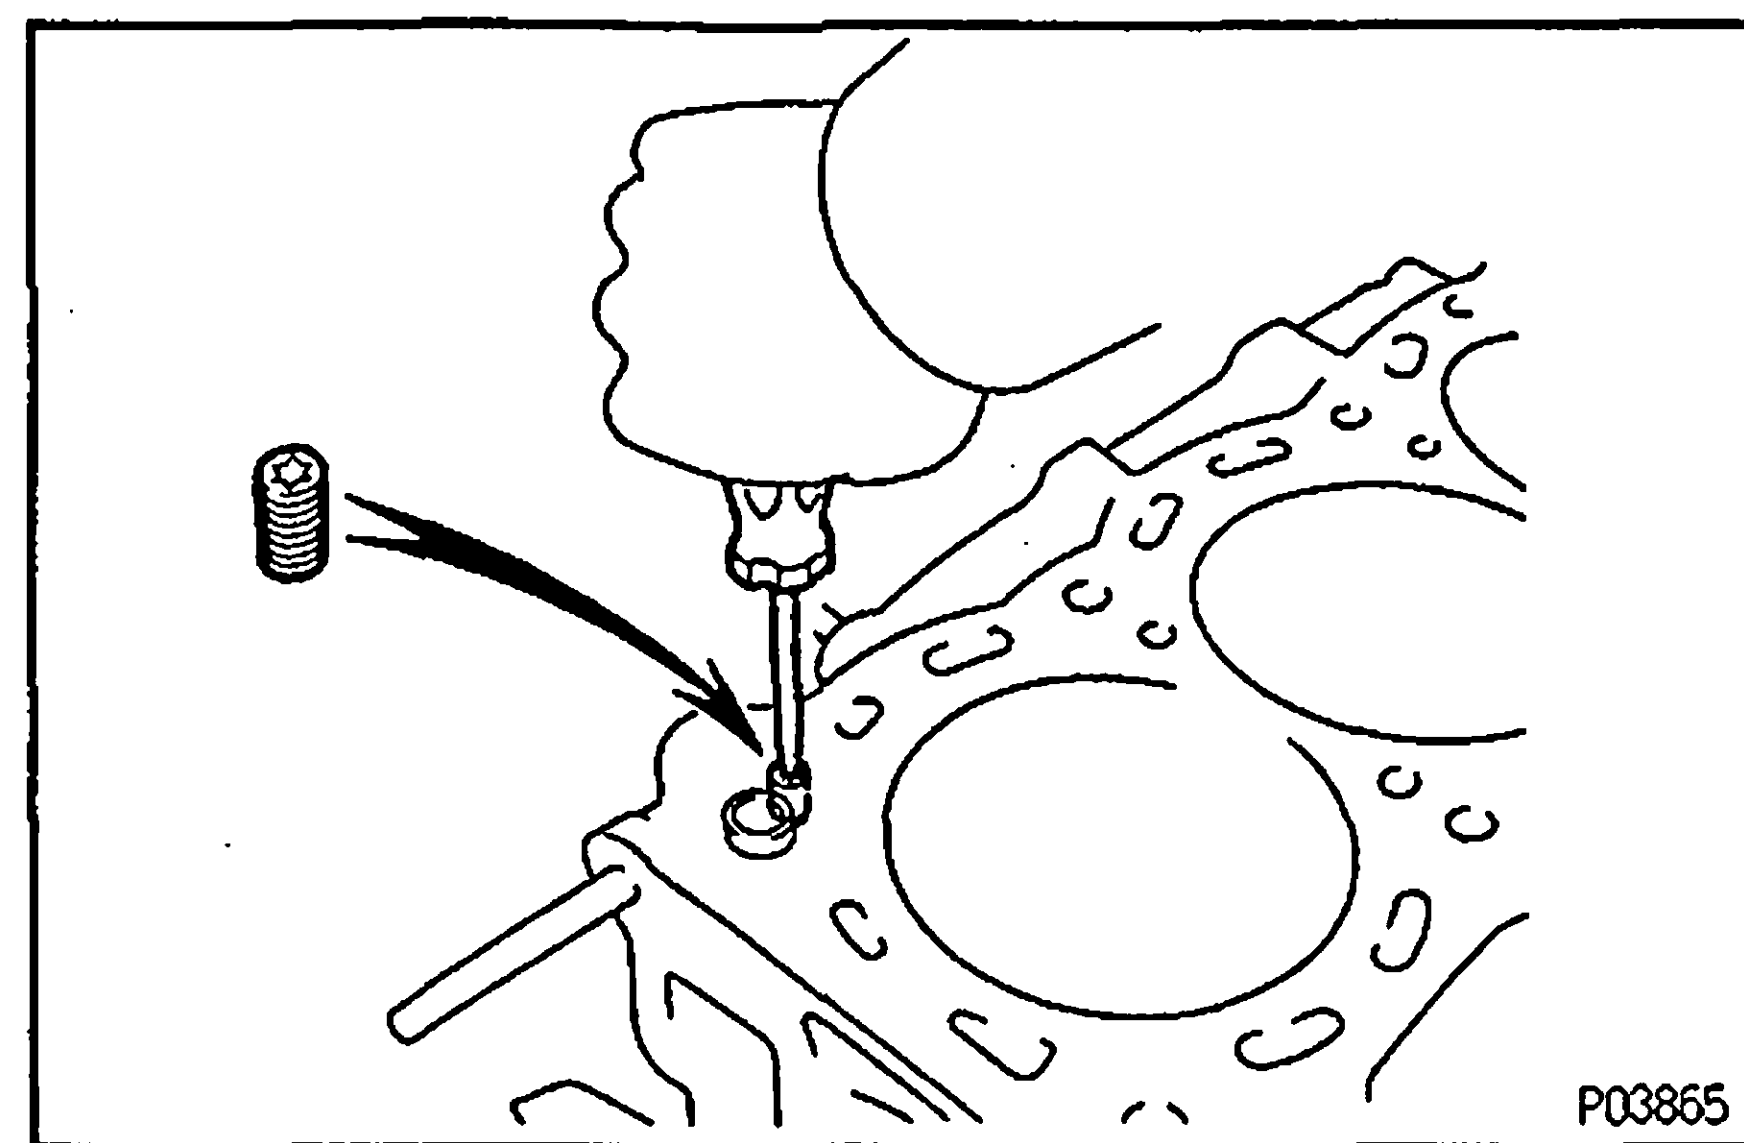**9. REMOVE CYLINDER BLOCK ORIFICE**

EG

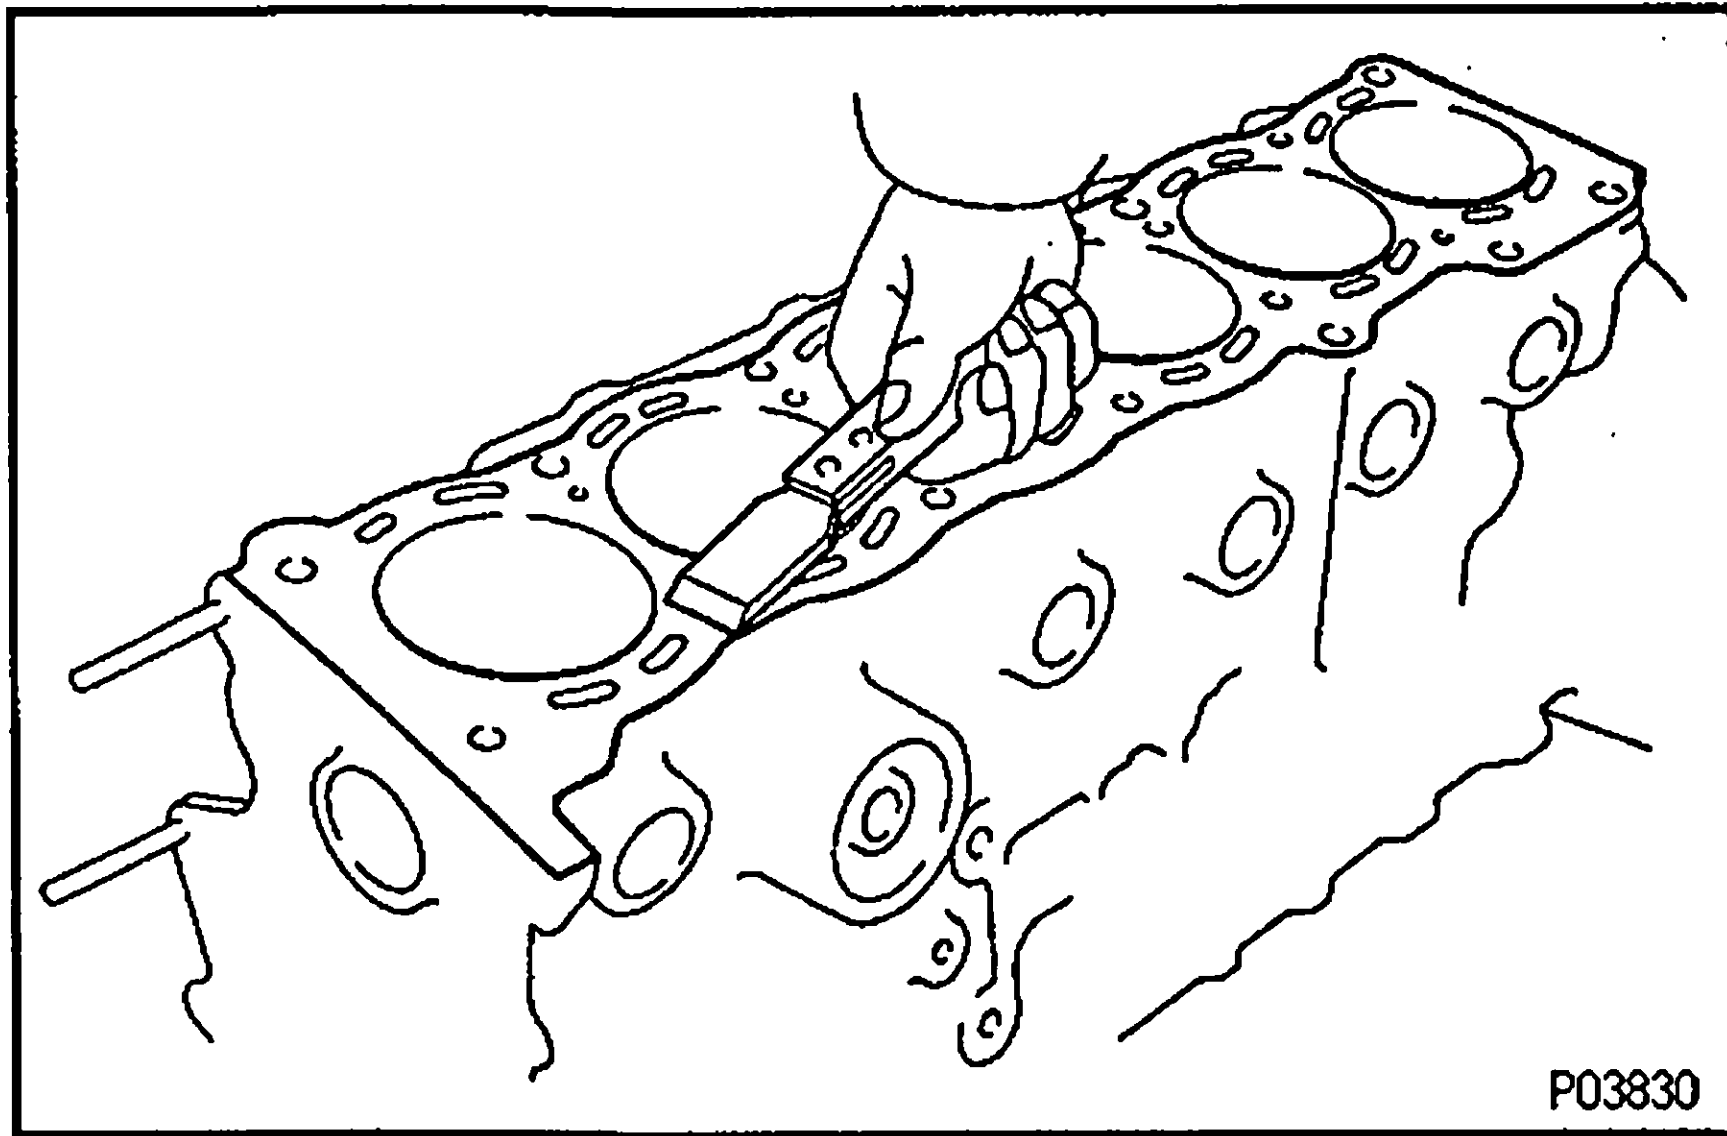

CYLINDER BLOCK INSPECTION


1. CLEAN CYLINDER BLOCK

A. Remove gasket material

Using a gasket scraper, remove all the gasket material from the top surface of the cylinder block.

B. Clean cylinder block

Using a soft brush and solvent, thoroughly clean the cylinder block.

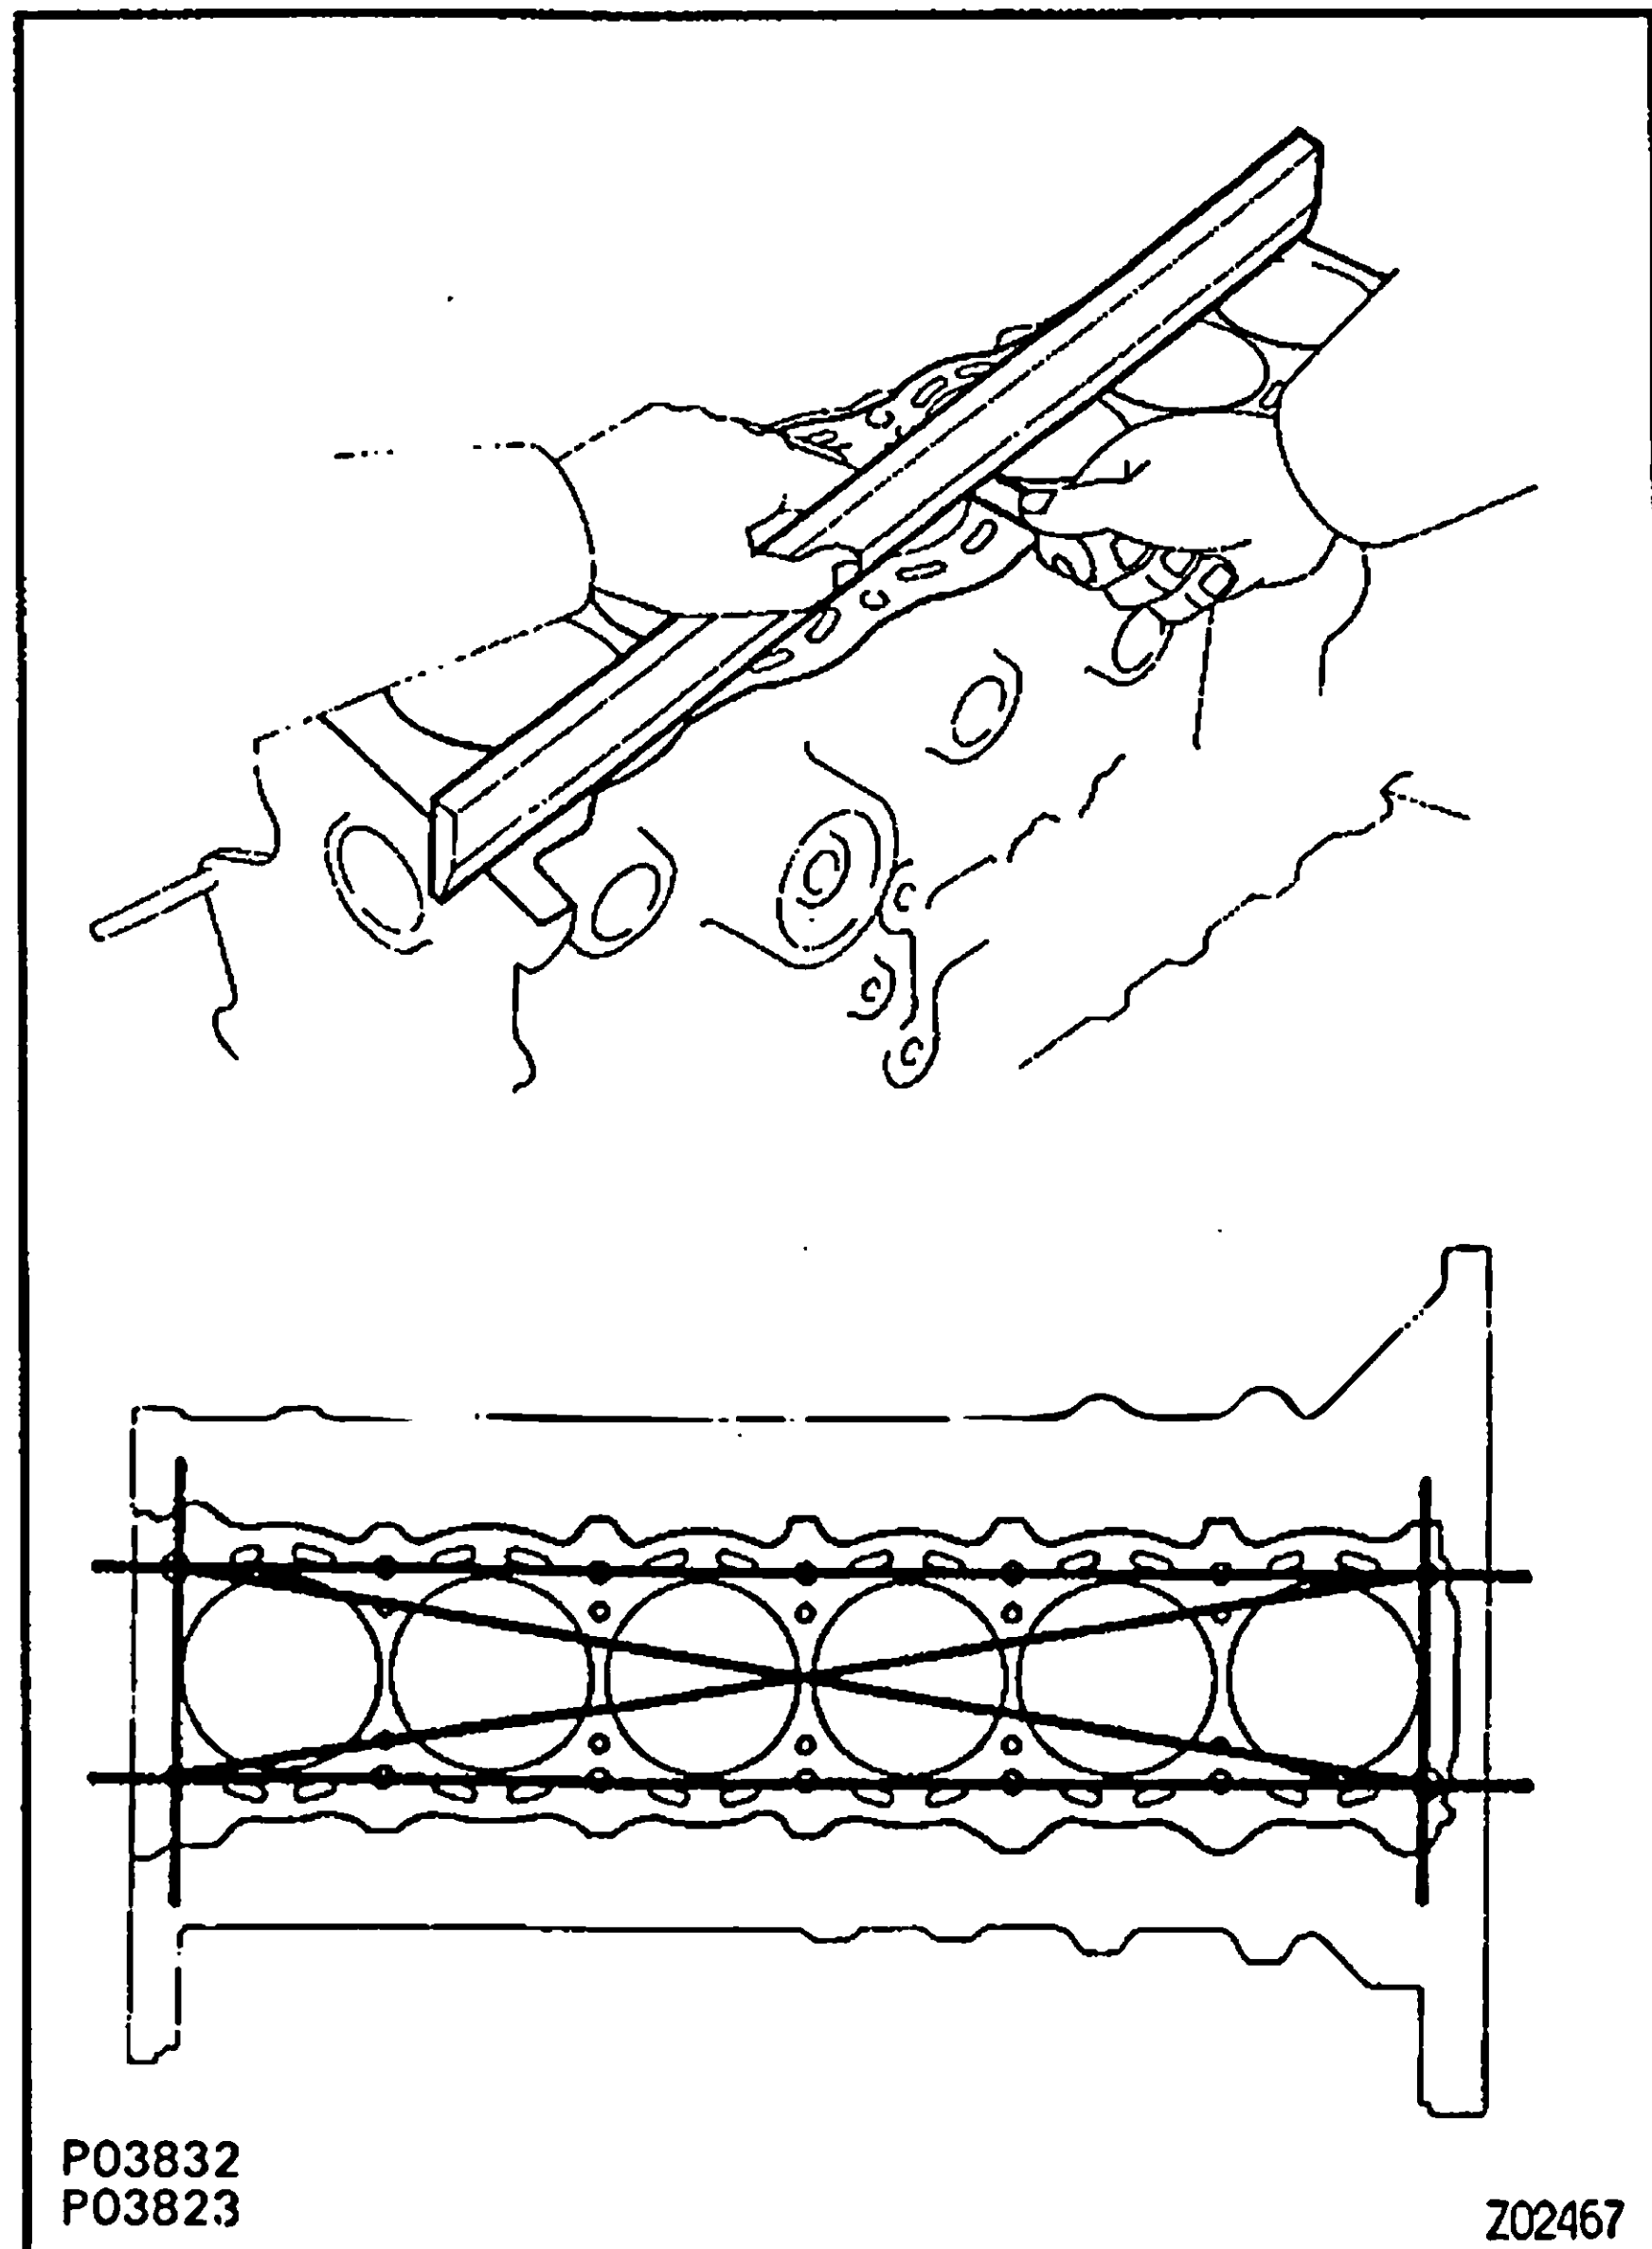


2. INSPECT TOP SURFACE OF CYLINDER BLOCK FOR FLATNESS

Using a precision straight edge and thickness gauge, measure the surfaces contacting the cylinder head gasket for warpage.

Maximum warpage:

0.05 mm (0.0020 in.)


If warpage is greater than maximum, replace the cylinder block.

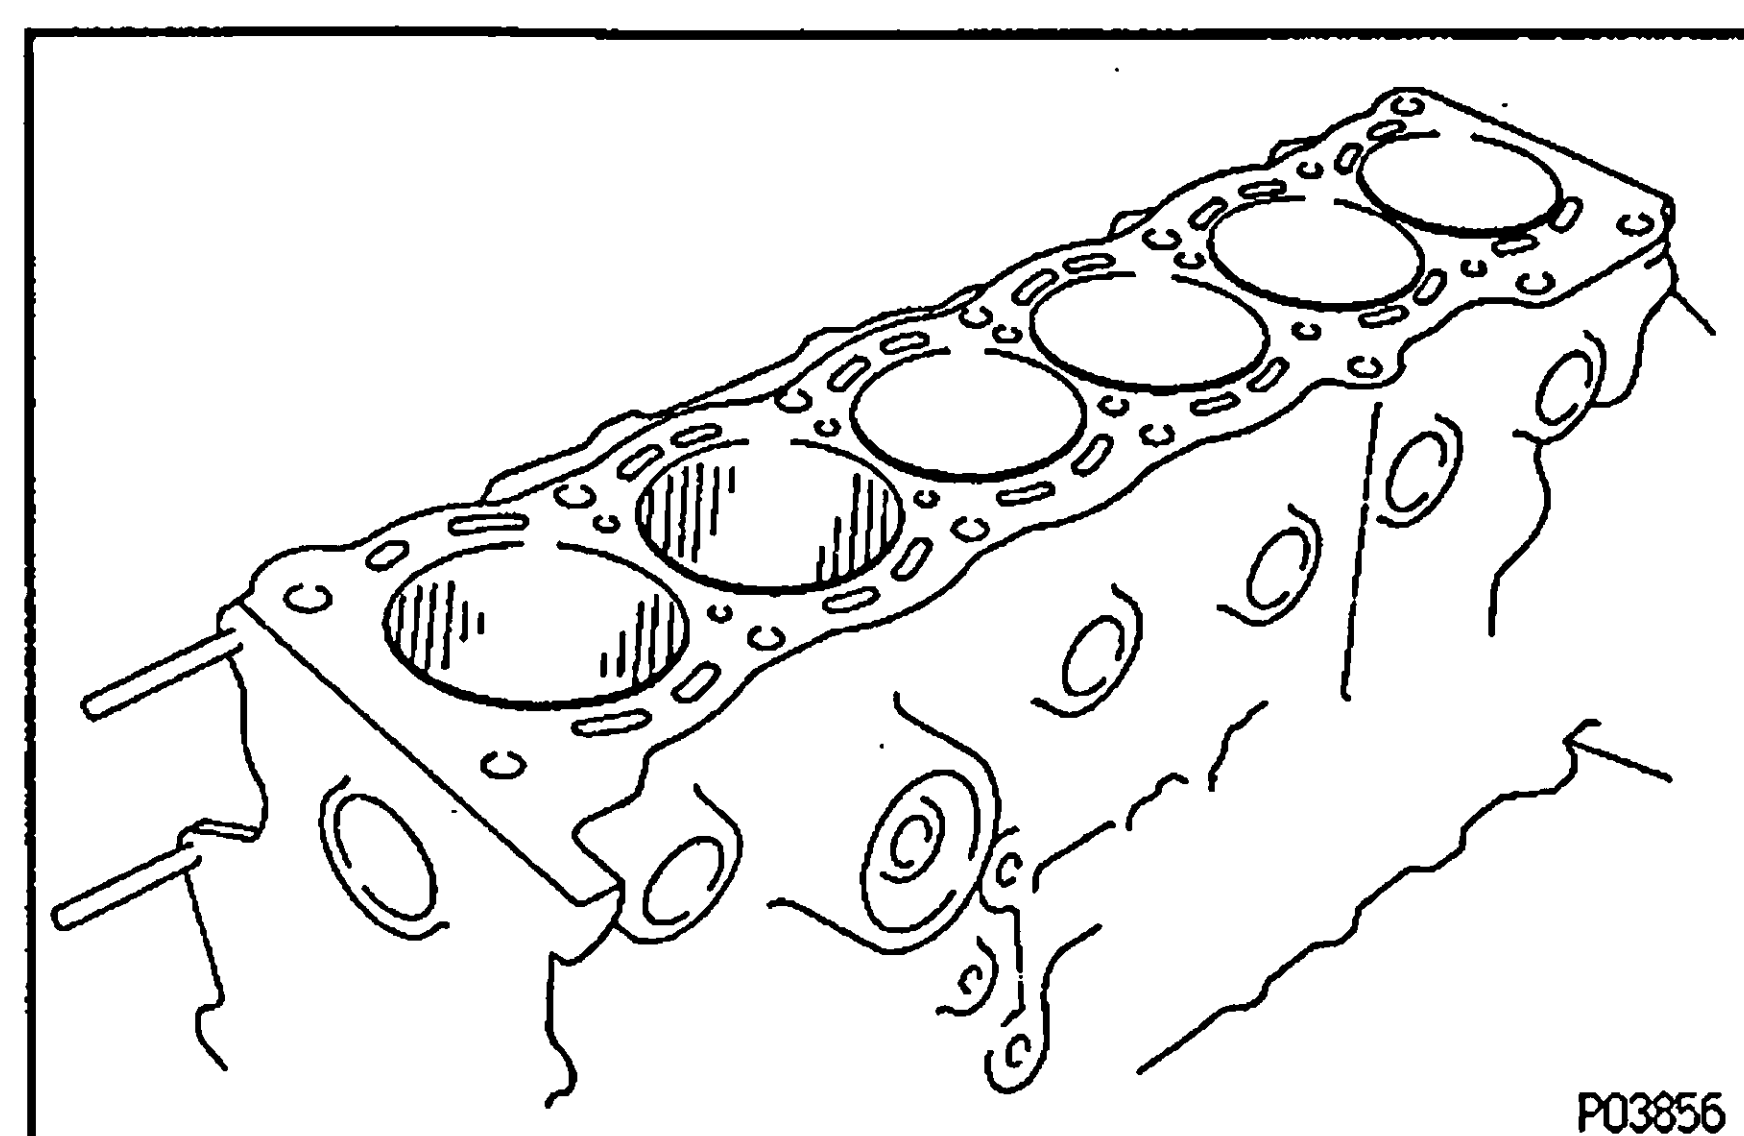

3. INSPECT CYLINDER FOR VERTICAL SCRATCHES


Visually check the cylinder for vertical scratches.

If deep scratches are present, rebore all the six cylinders. If necessary, replace the cylinder block.

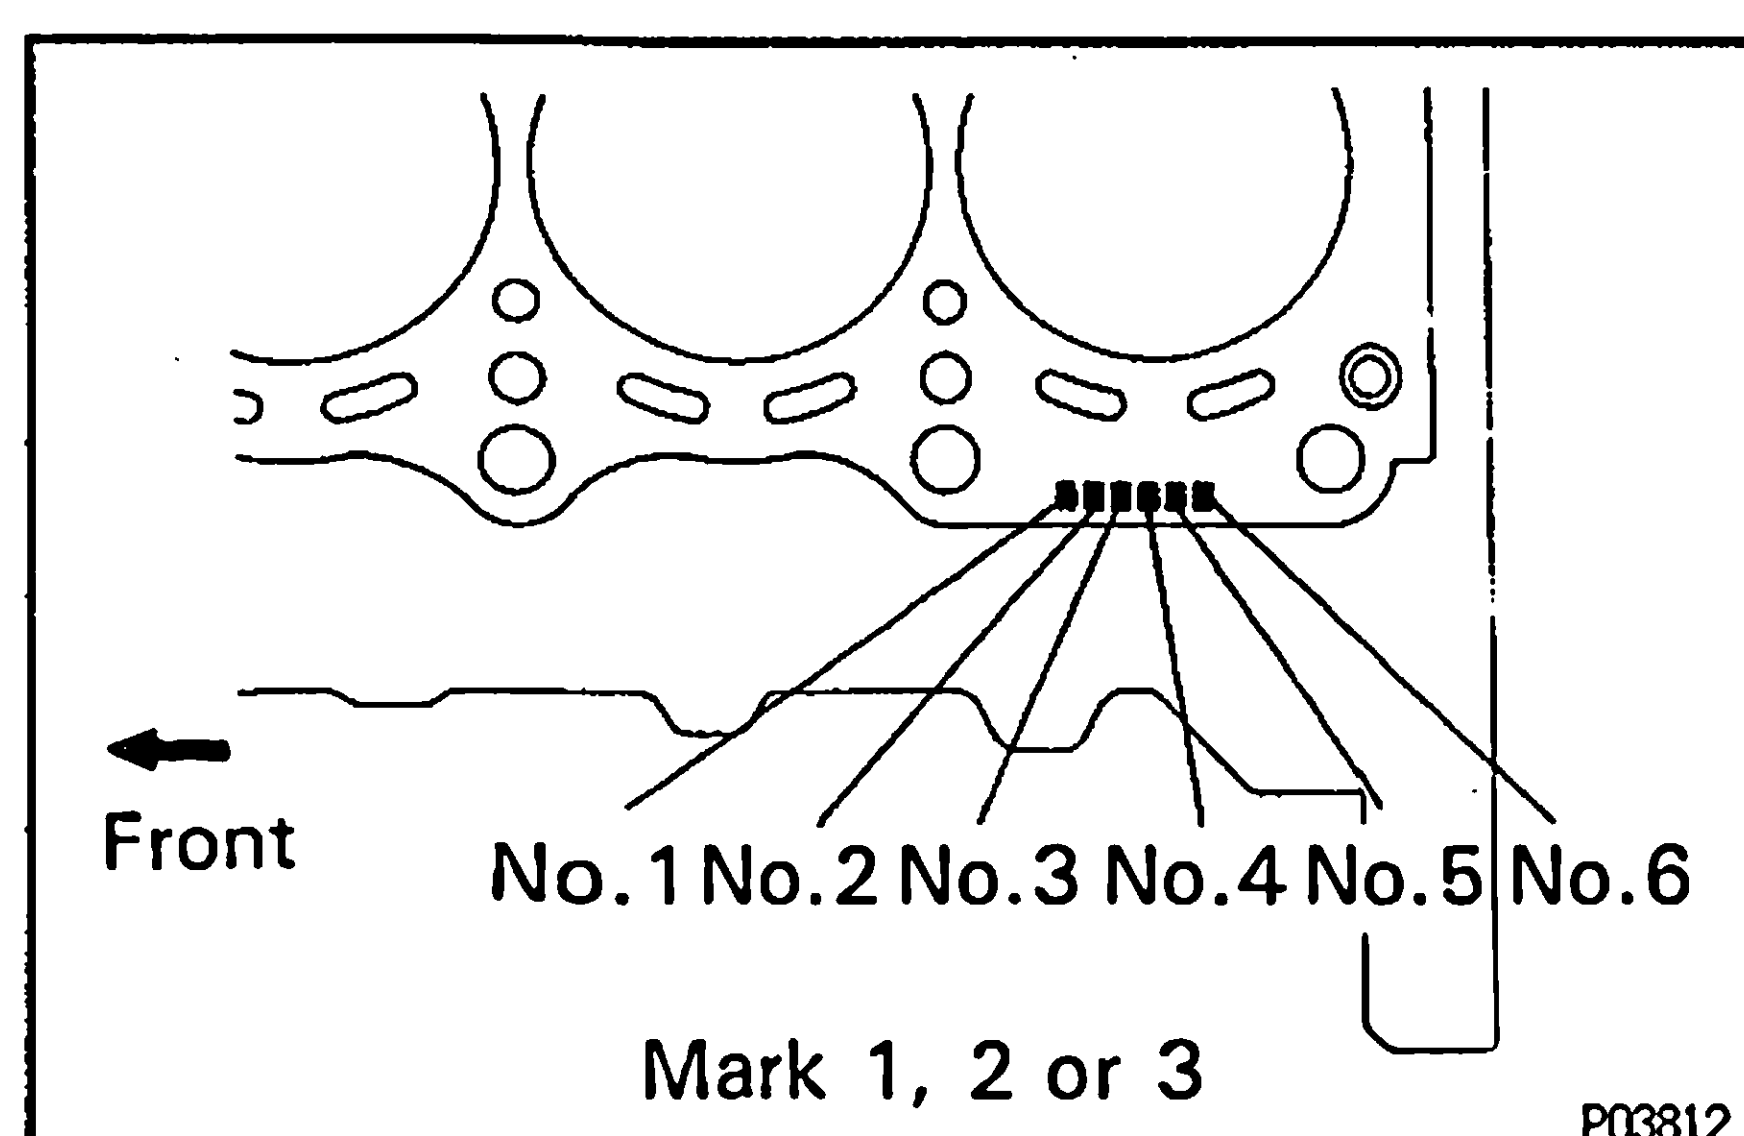

4. INSPECT CYLINDER BORE DIAMETER

HINT: There are three sizes of the standard cylinder bore diameter, marked "1", "2" and "3" accordingly. The mark is stamped on the top of the cylinder block.

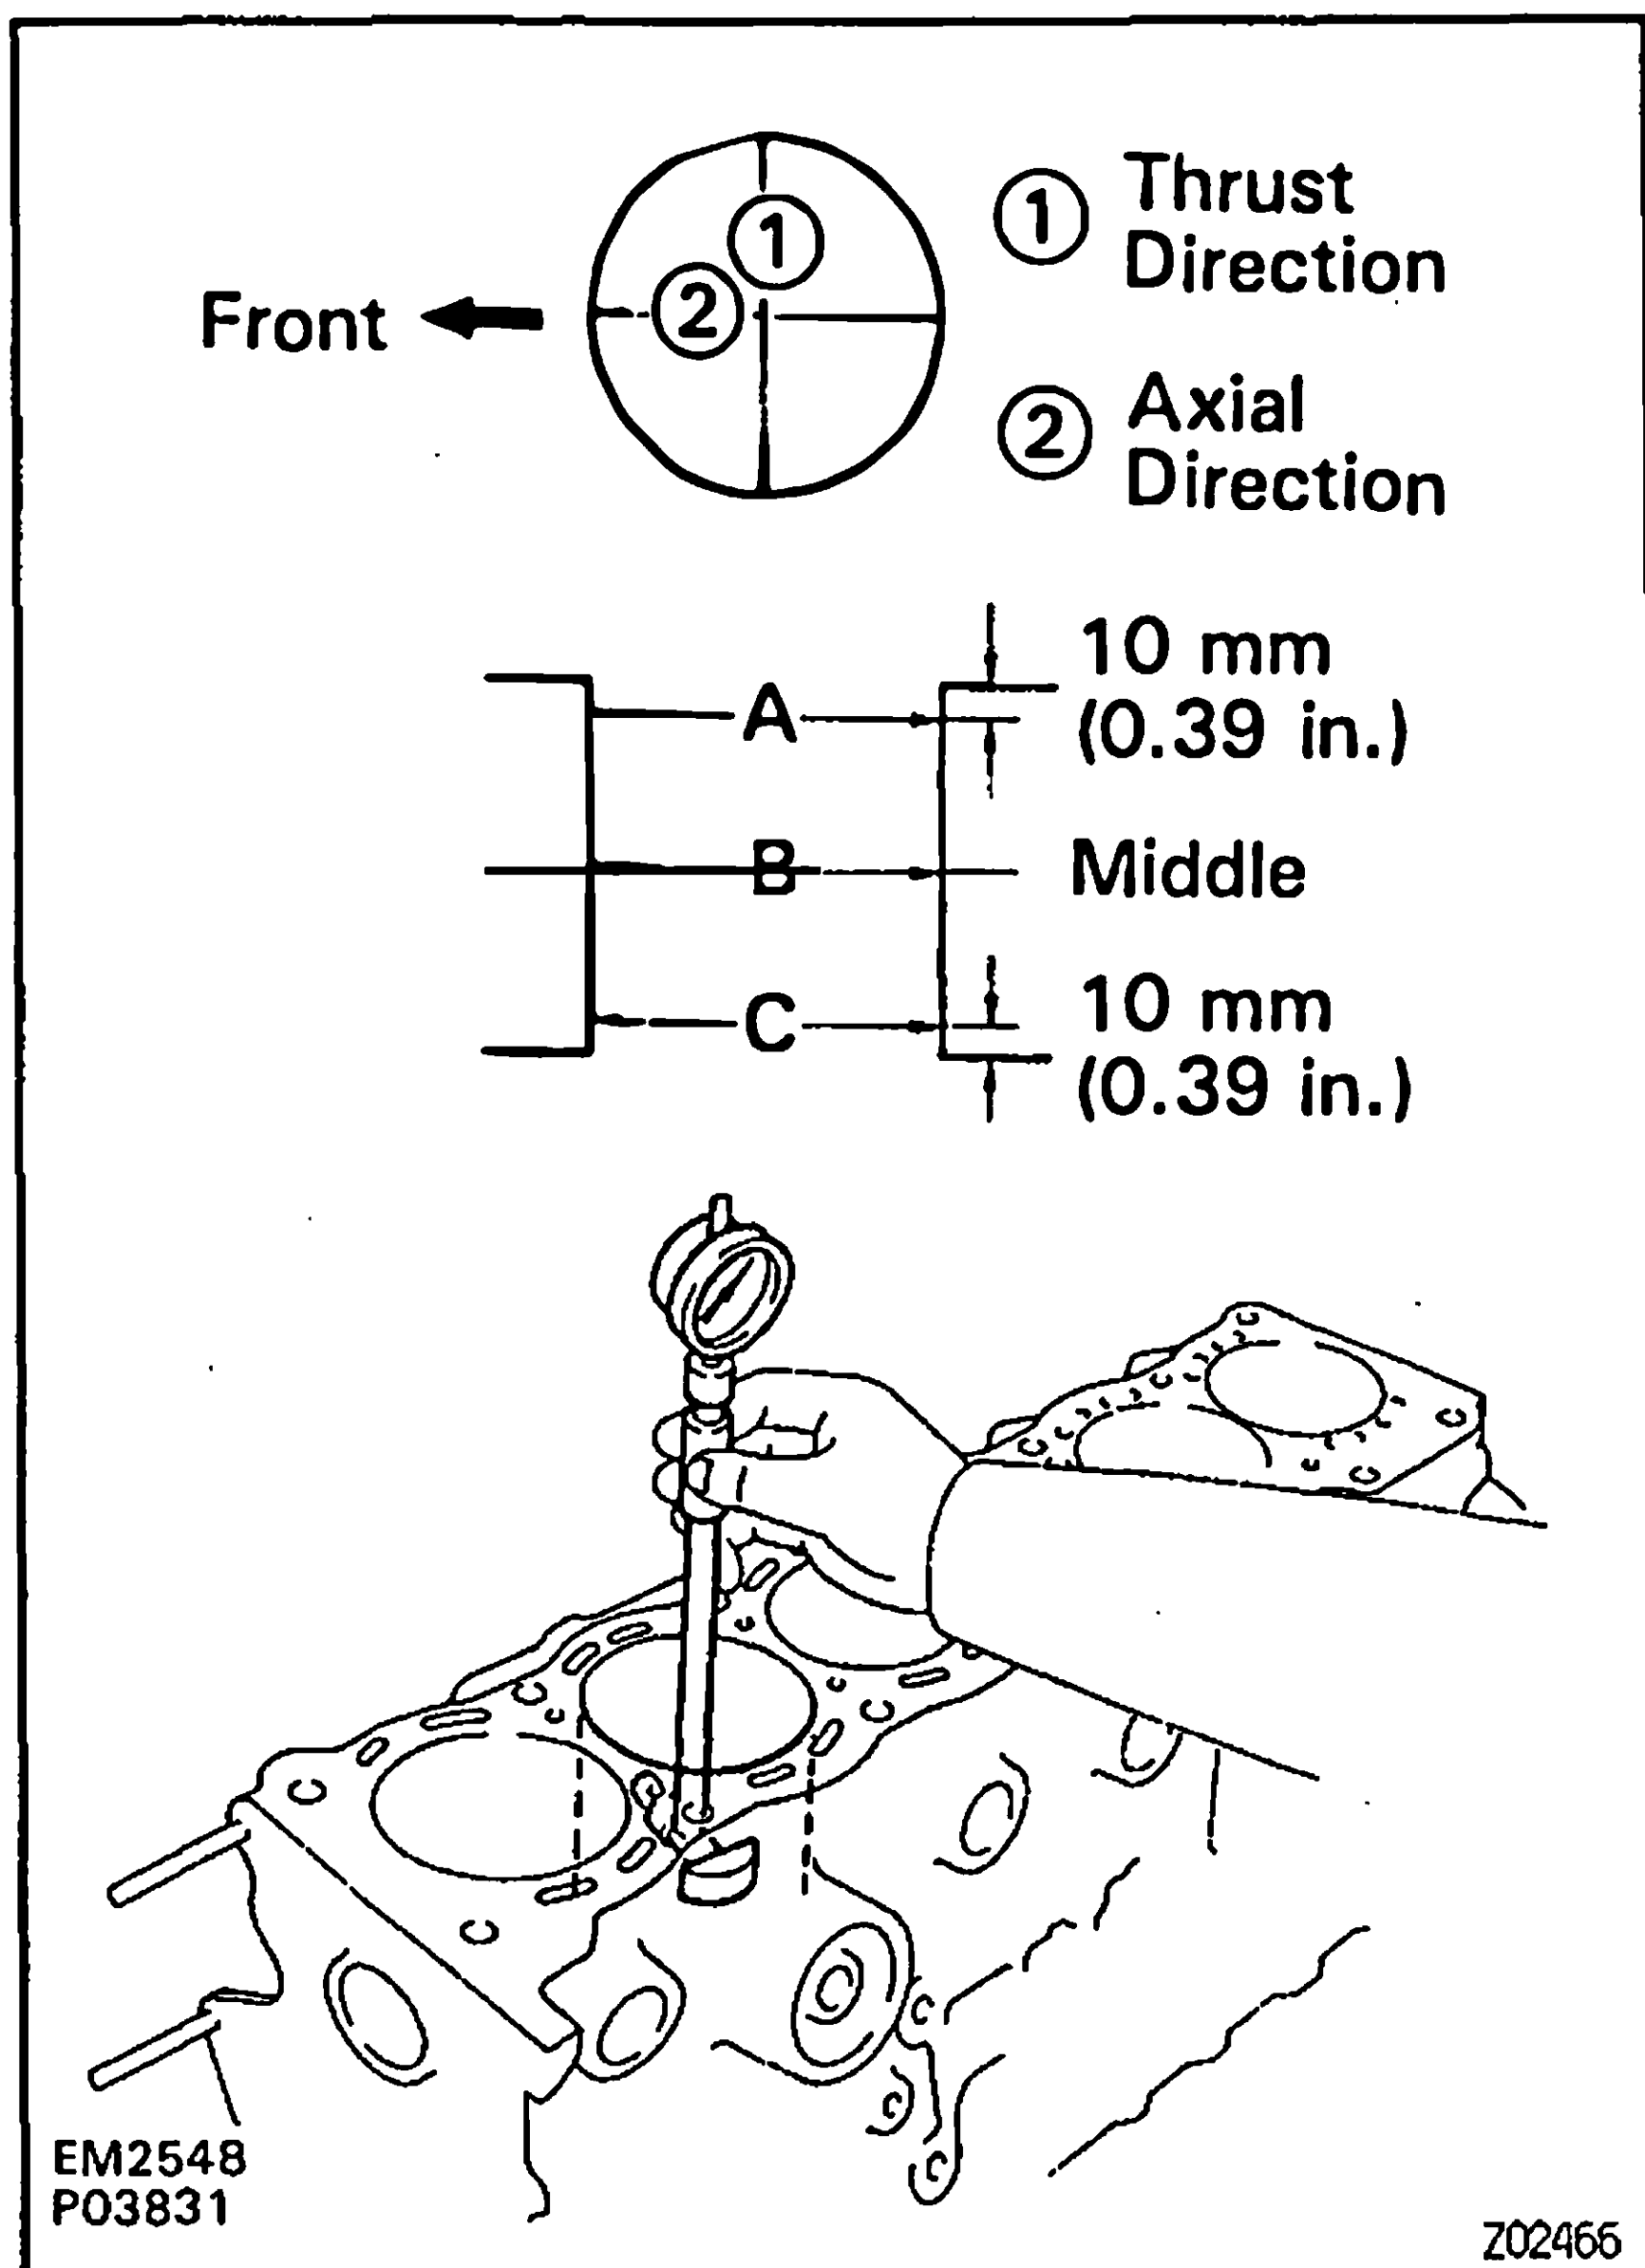

Using a cylinder gauge, measure the cylinder bore diameter at positions A, B and C in the thrust and axial directions.

Standard diameter:

STD

Mark "1"

100.000 — 100.010 mm (3.9370 — 3.9374 in.)

Mark "2"

100.010 — 100.020 mm (3.9374 — 3.9378 in.)

Mark "3"

100.020 — 100.030 mm (3.9378 — 3.9382 in.)

Maximum diameter:

STD

100.23 mm (3.9461 in.)

O/S 0.50

100.73 mm (3.9658 in.)



O/S 1.00

101.23 mm (3.9854 in.)

If the diameter is greater than maximum, rebore all the six cylinders. If necessary, replace the cylinder block.

5. REMOVE CYLINDER RIDGE

If the wear is less than 0.2 mm (0.008 in.), using a ridge reamer, grind the top of the cylinder.

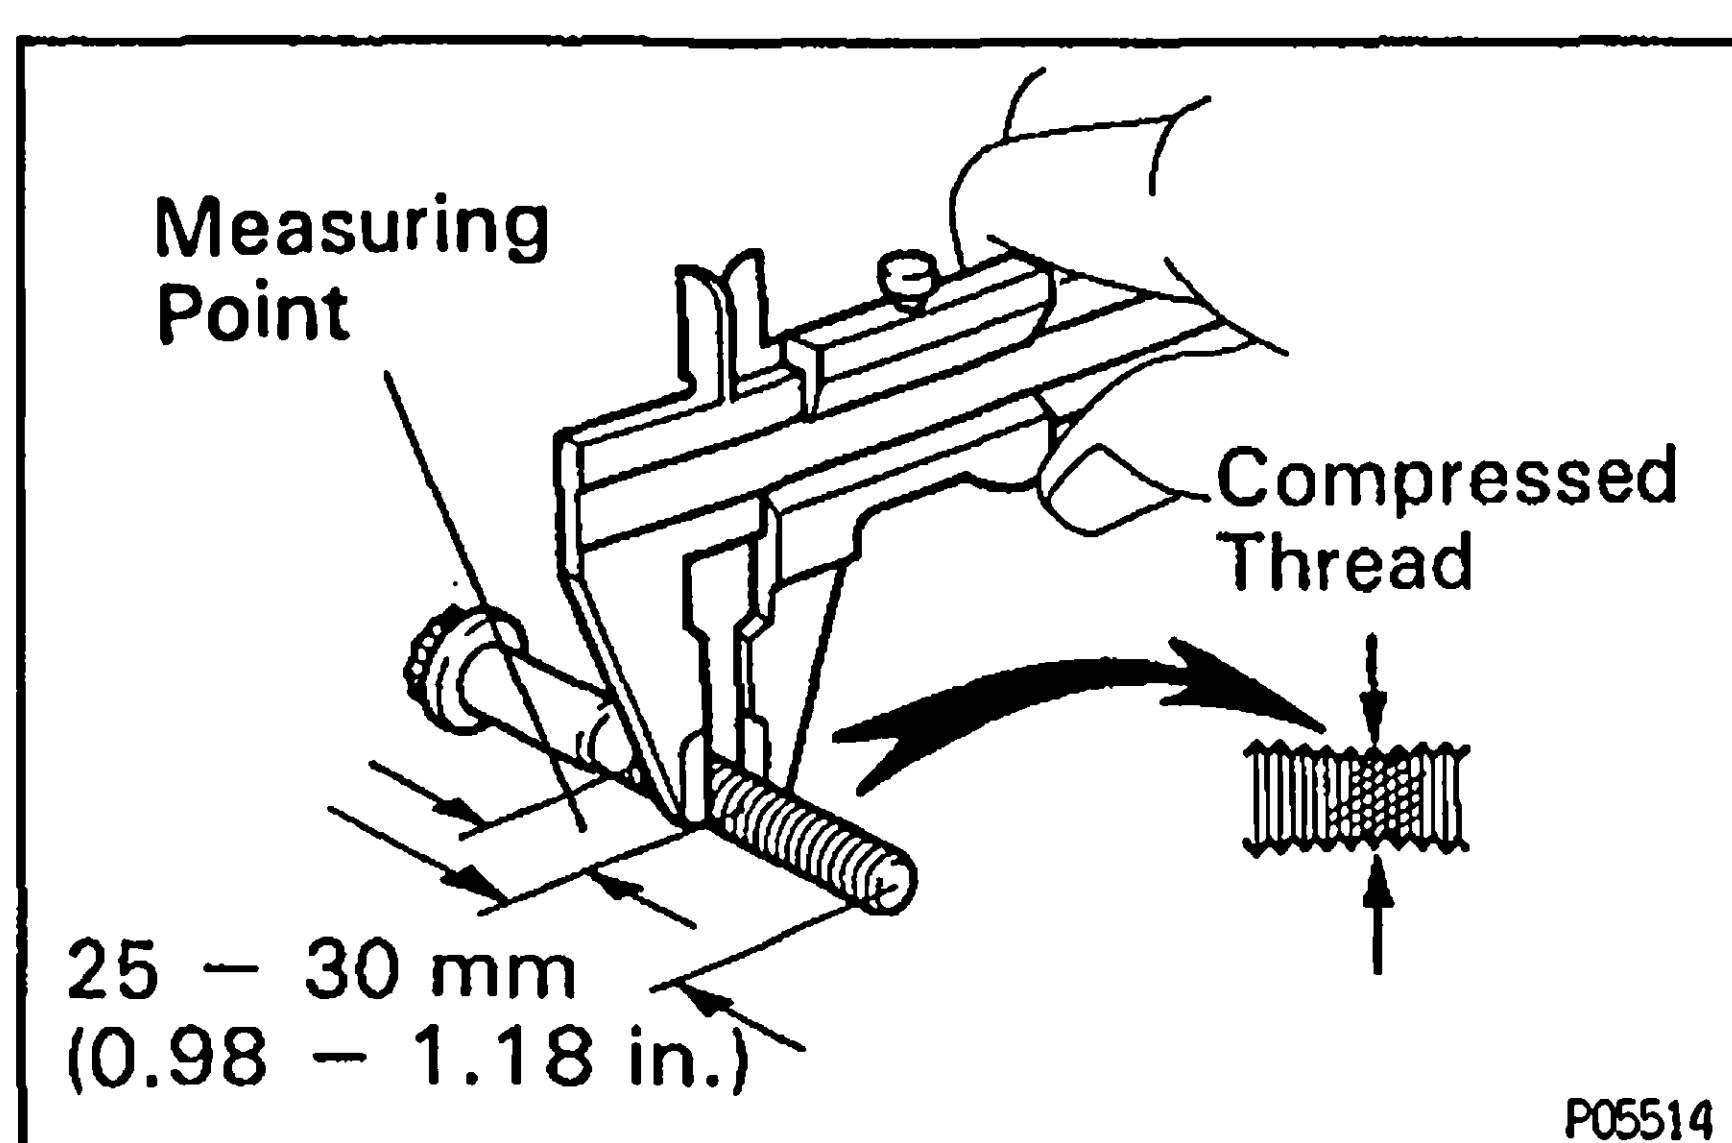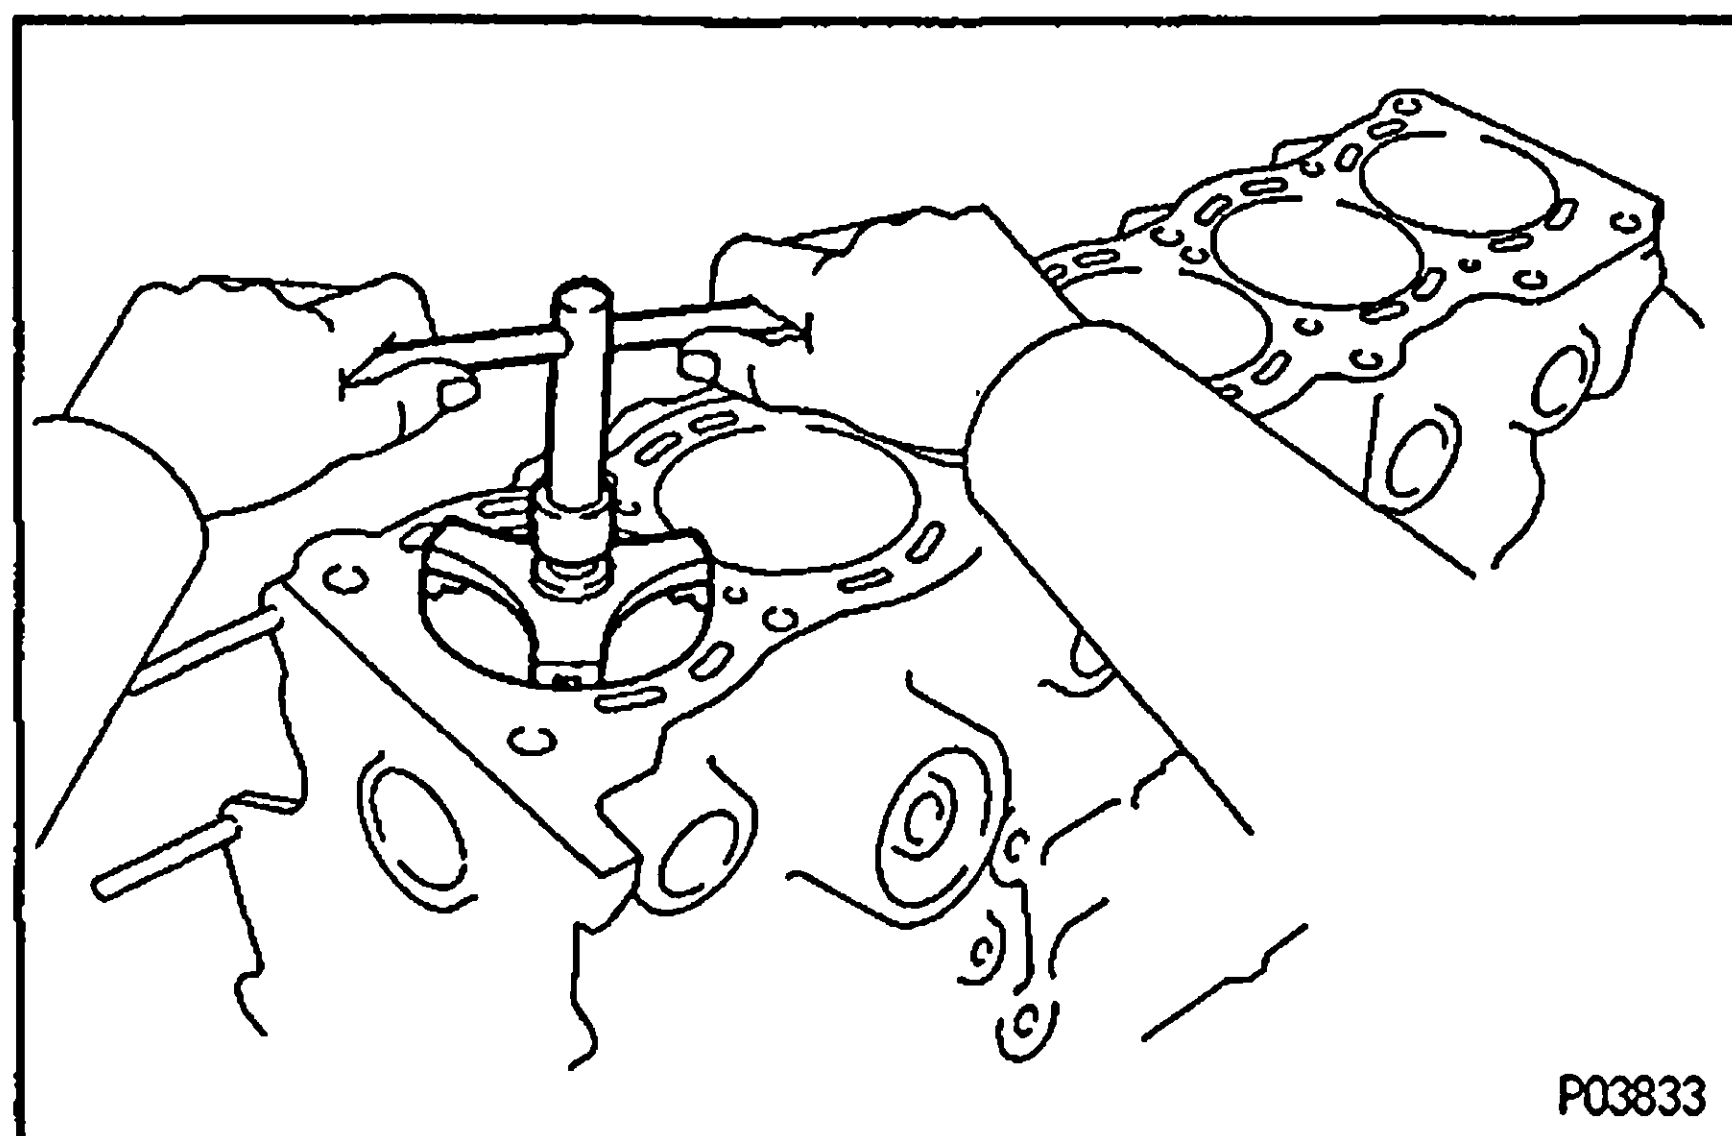

6. INSPECT MAIN BEARING CAP BOLTS

Using vernier calipers, measure the thread outside diameter of the bolt.

Standard outside diameter:

10.85 — 11.00 mm (0.4271 — 0.4331 in.)

Minimum outside diameter:


10.6 mm (0.417 in.)

If the diameter is less than minimum, replace the bolt.


7. INSPECT CYLINDER BLOCK OLIFICE

Check the olifice for clogging.

If necessary, replace the olifice.

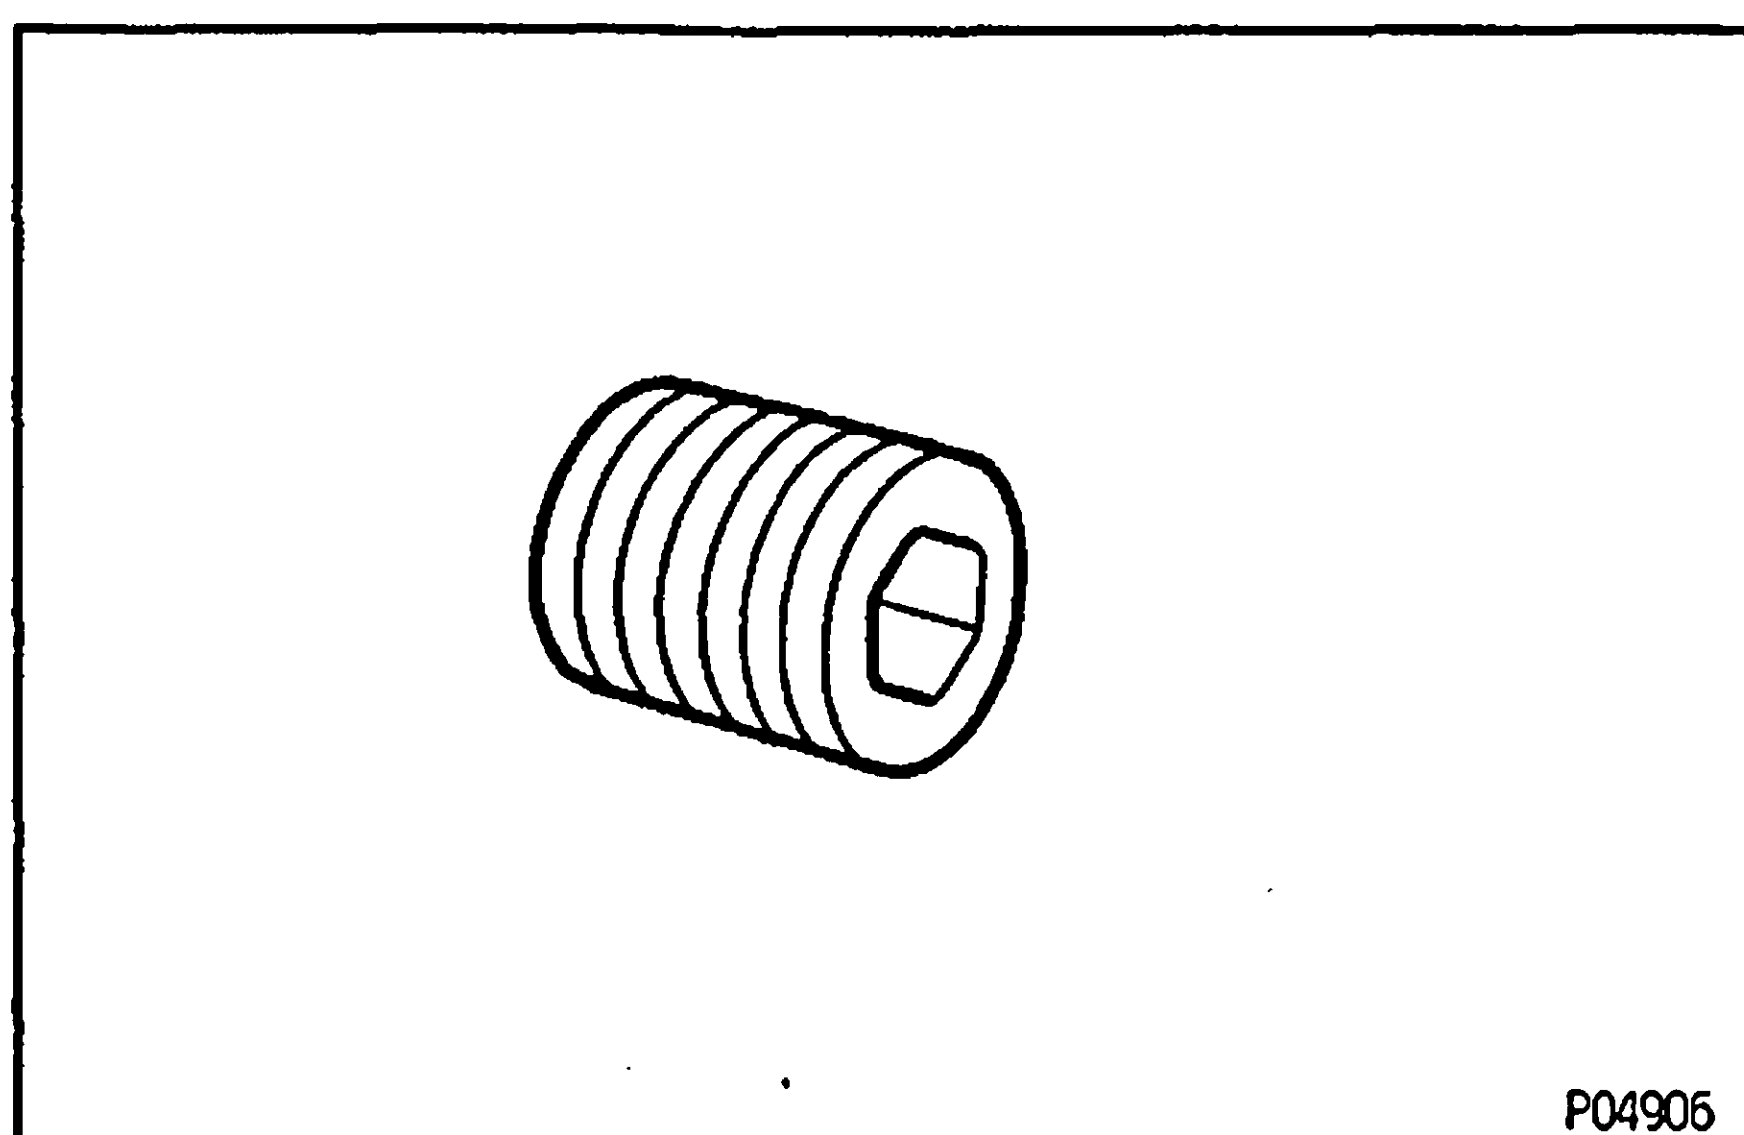


EG

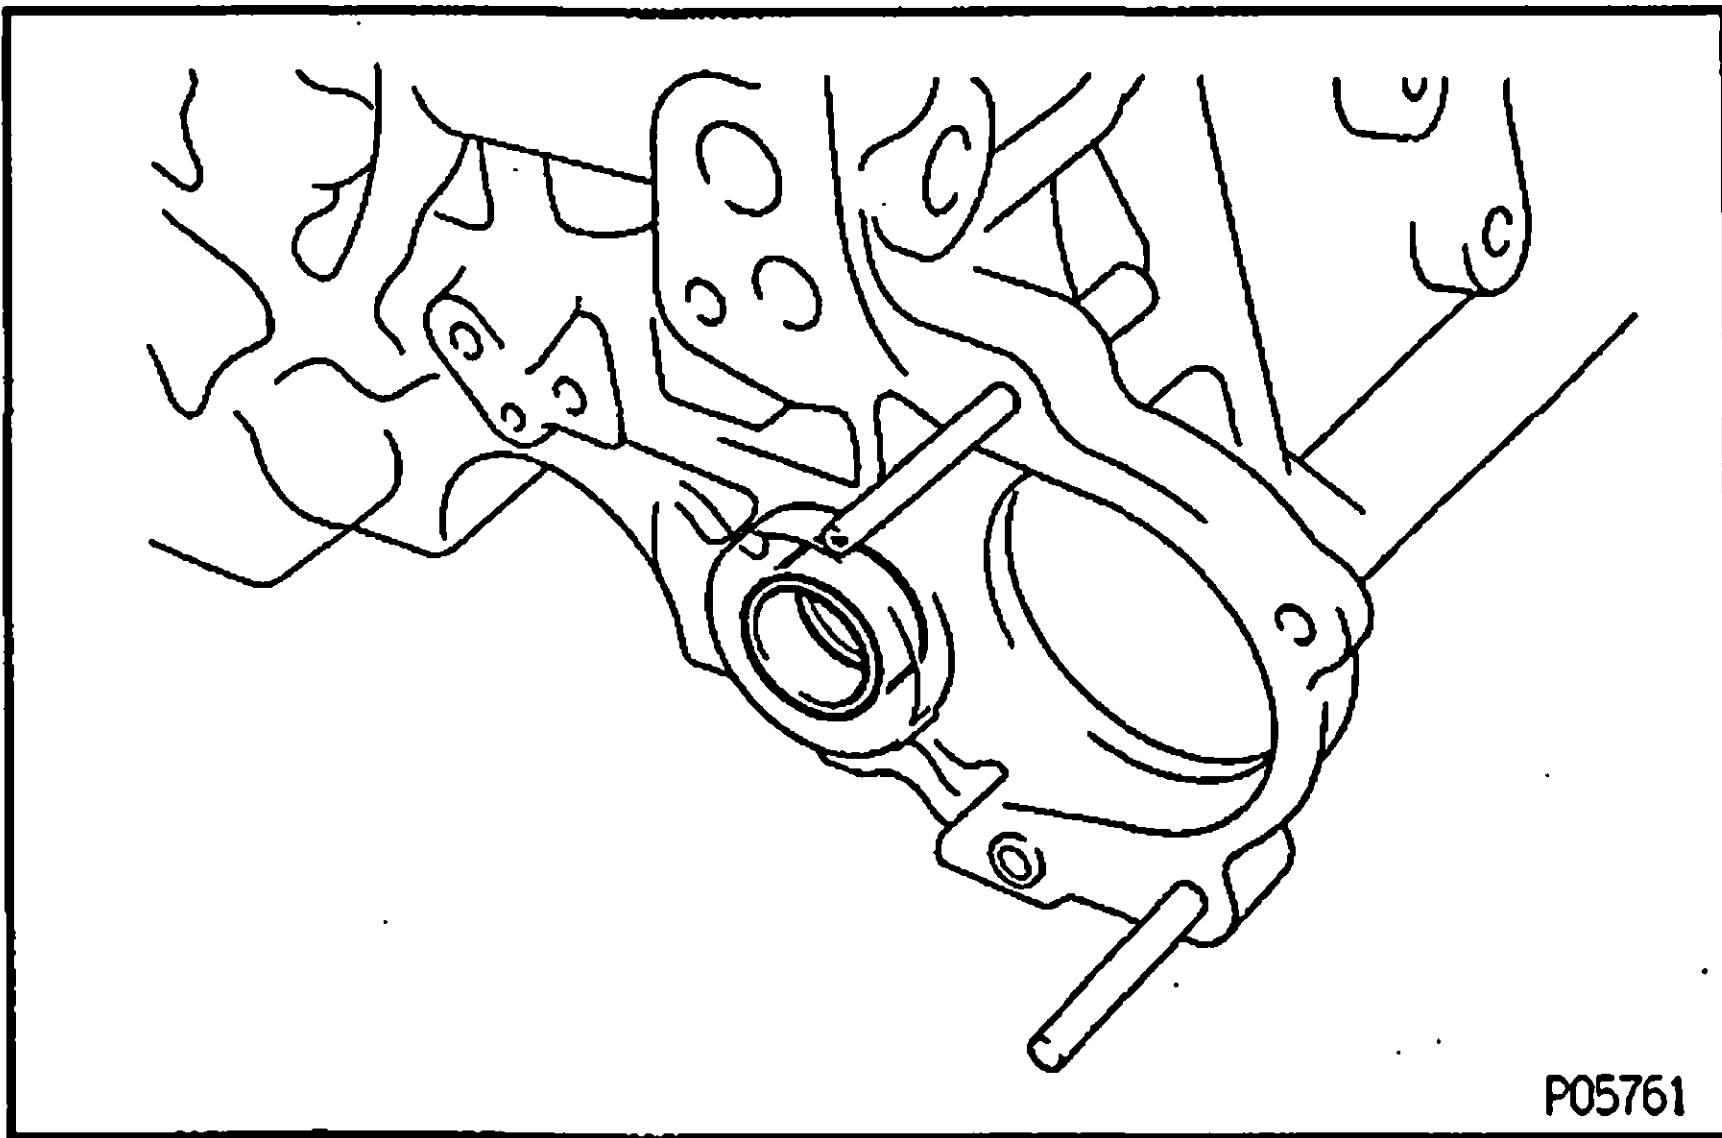

8. INSPECT BEARING OF OIL PUMP DRIVE SHAFT GEAR

Check the bearing for pitting and scratches.
If the bearing is damaged, replace the bearing.

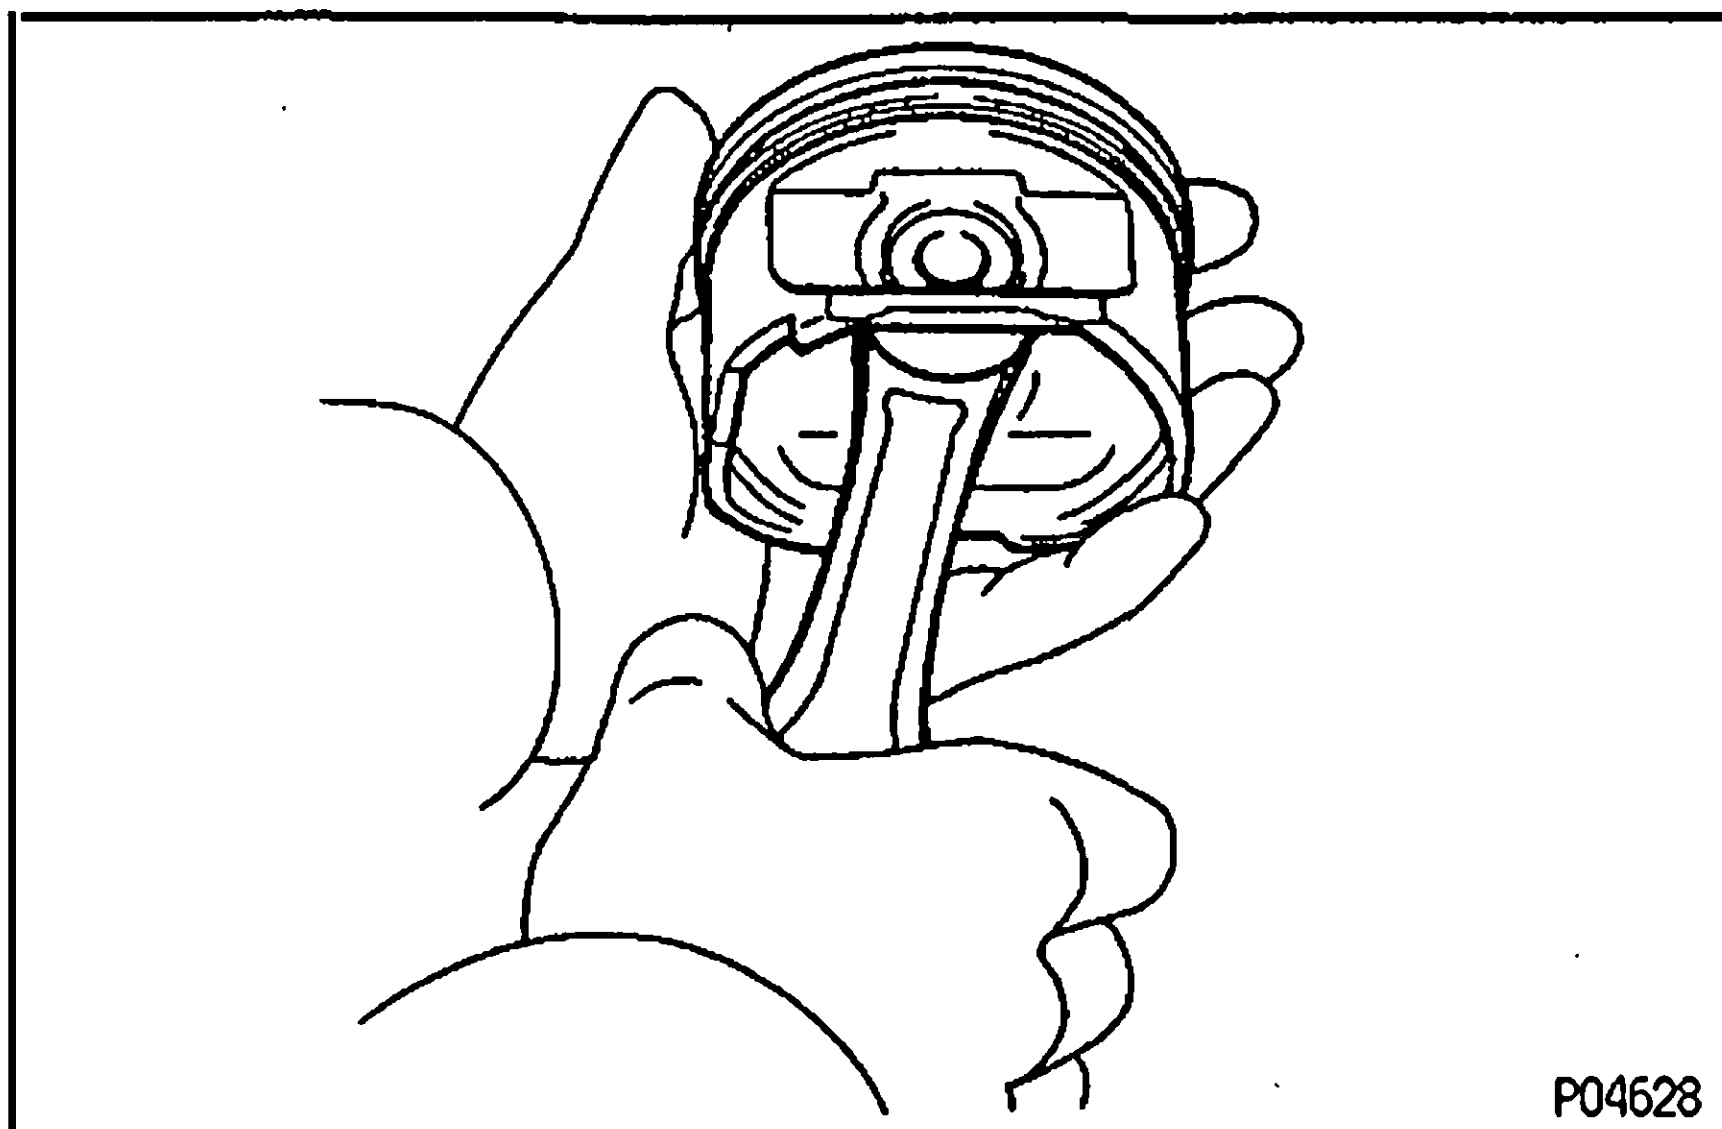


PISTON AND CONNECTING ROD ASSY DISASSEMBLY

EG08V-02

1. CHECK FIT BETWEEN PISTON AND PISTON PIN


Try to move the piston back and forth on the piston pin.

If any movement is felt, replace the piston and pin as a set.

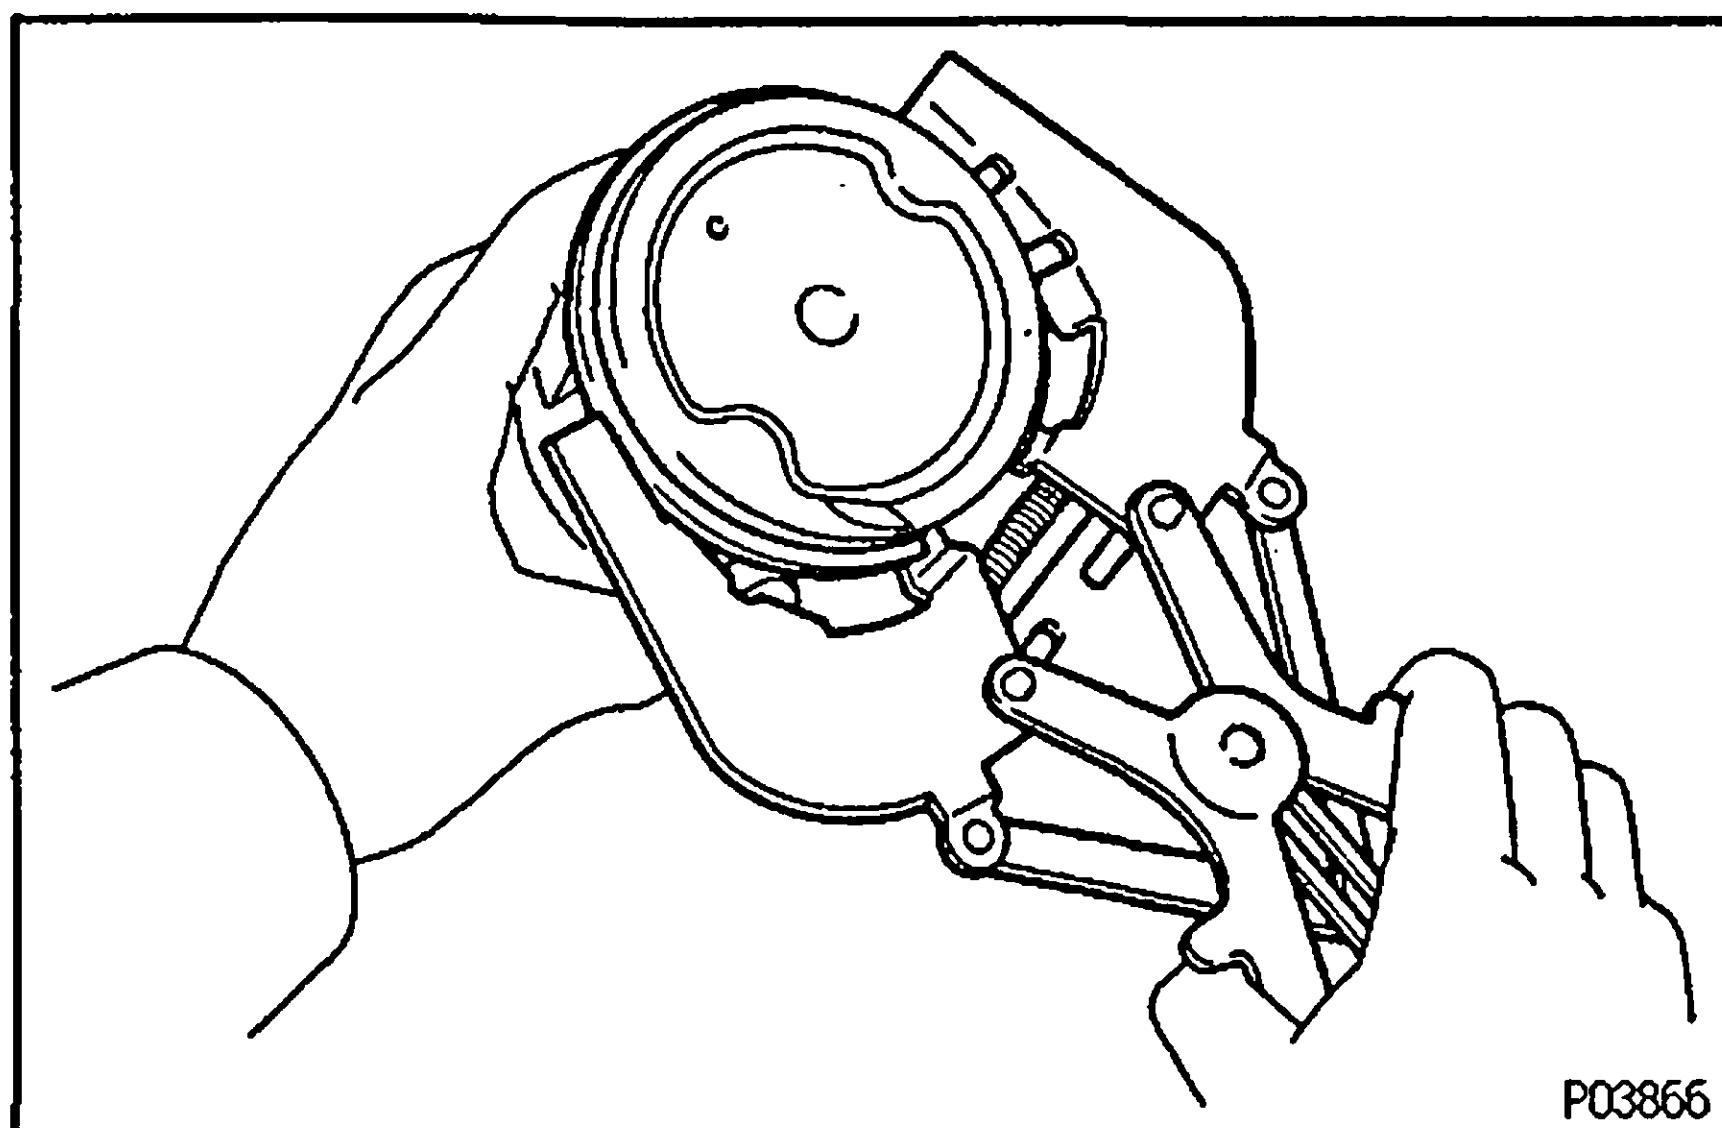


2. REMOVE PISTON RINGS

(a) Using a piston ring expander, remove the two compression rings.

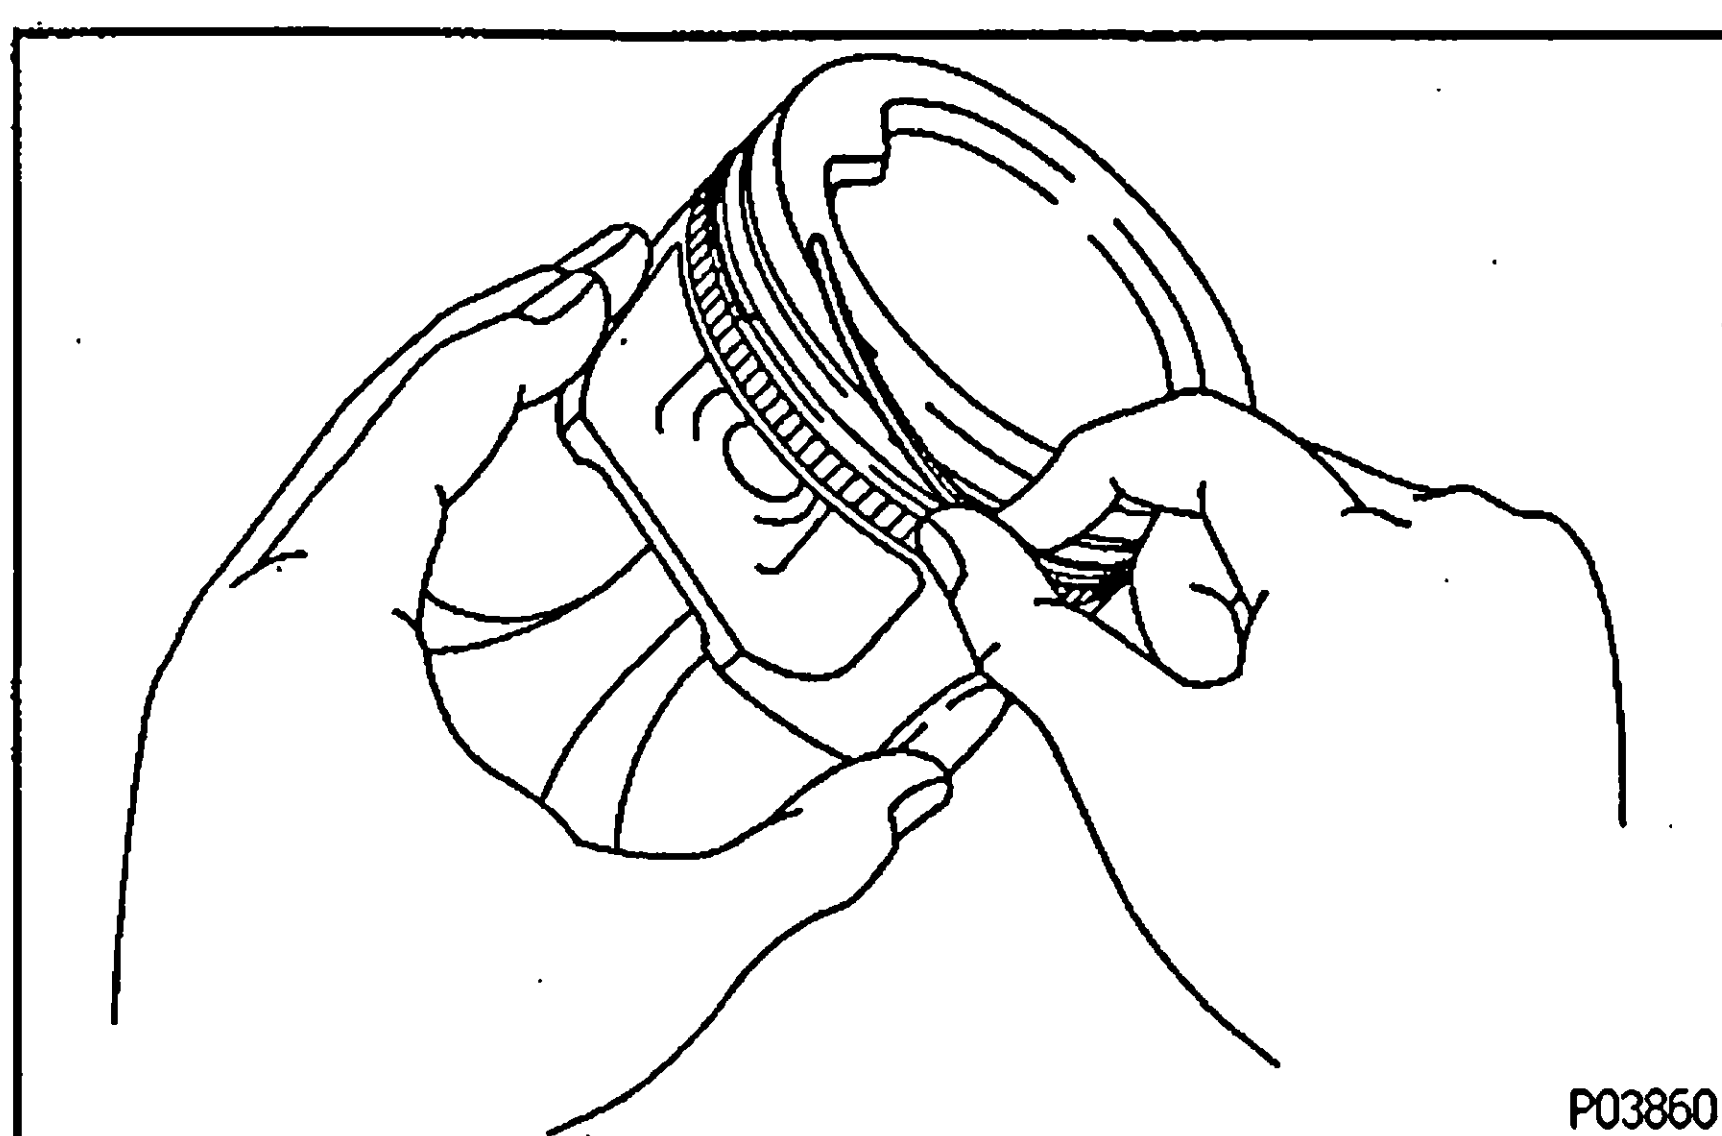


(b) Remove the two side rails and oil ring by hand.

HINT: Arrange the rings in correct order only.

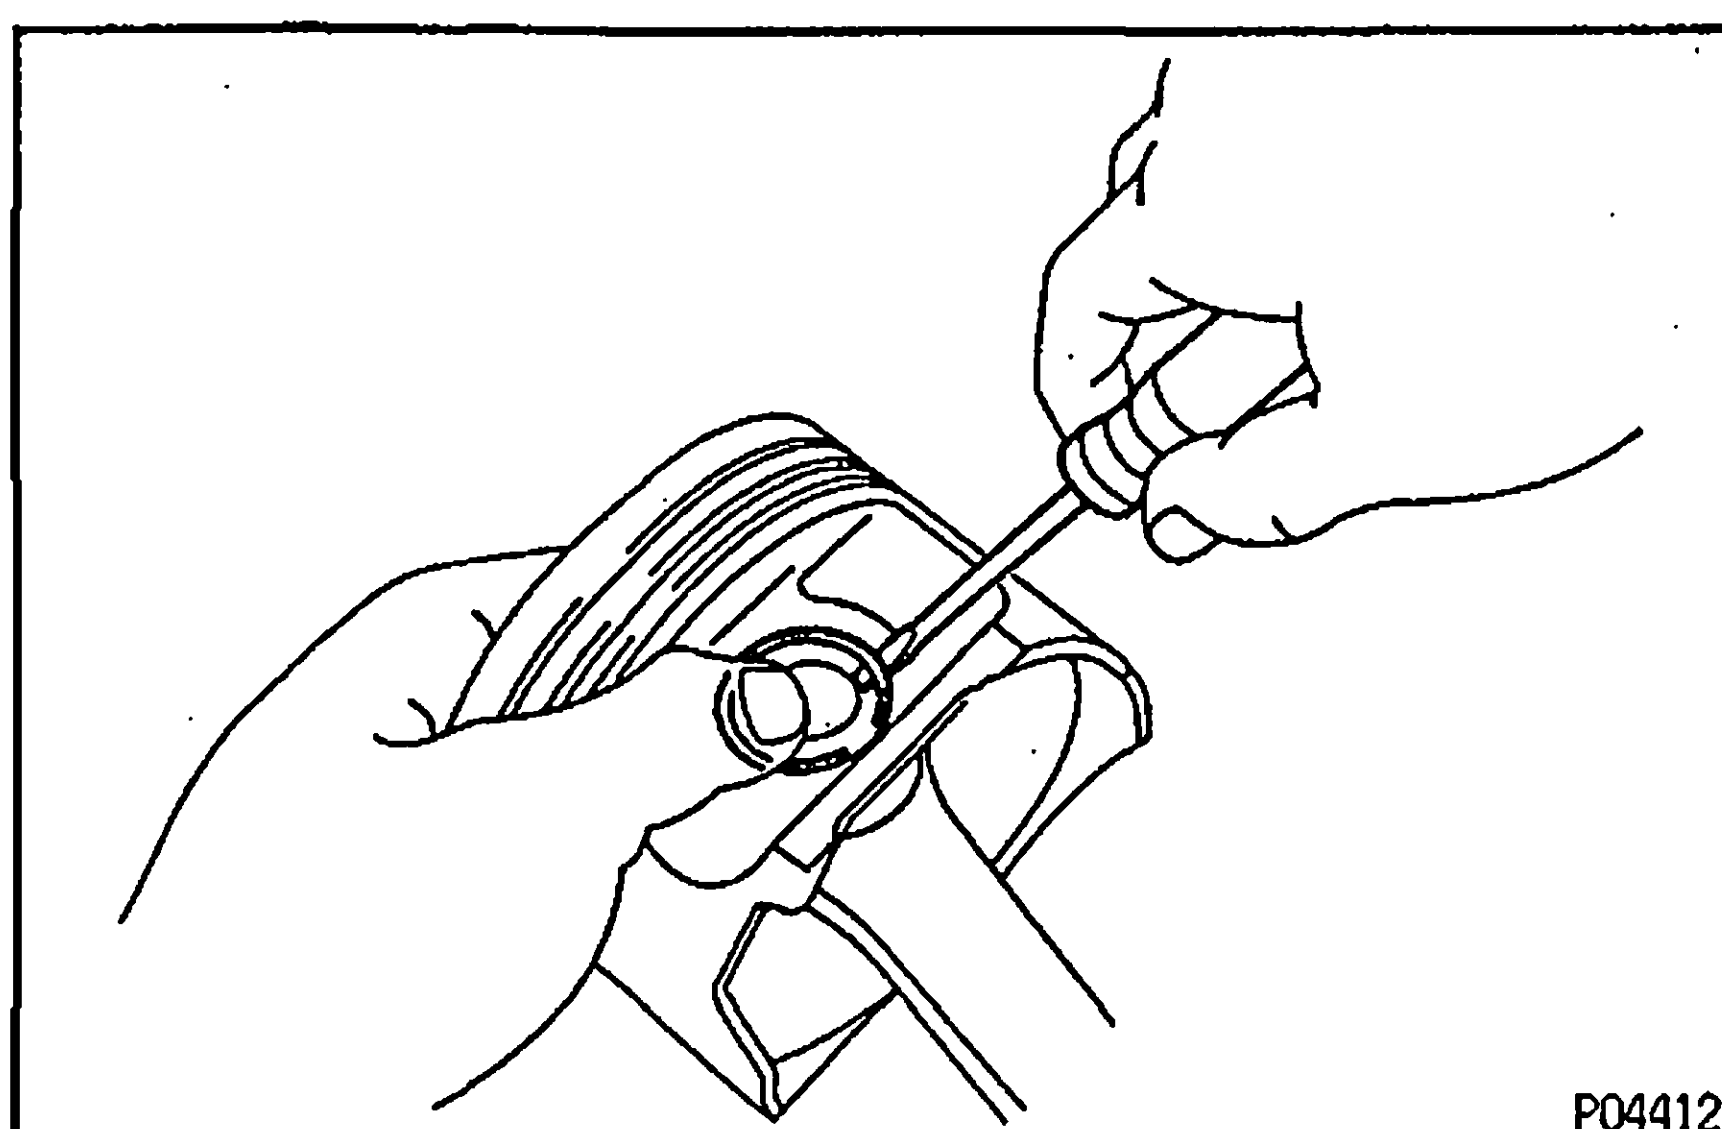


3. DISCONNECT CONNECTING ROD FROM PISTON

(a) Using a small screwdriver, pry out the two snap rings.

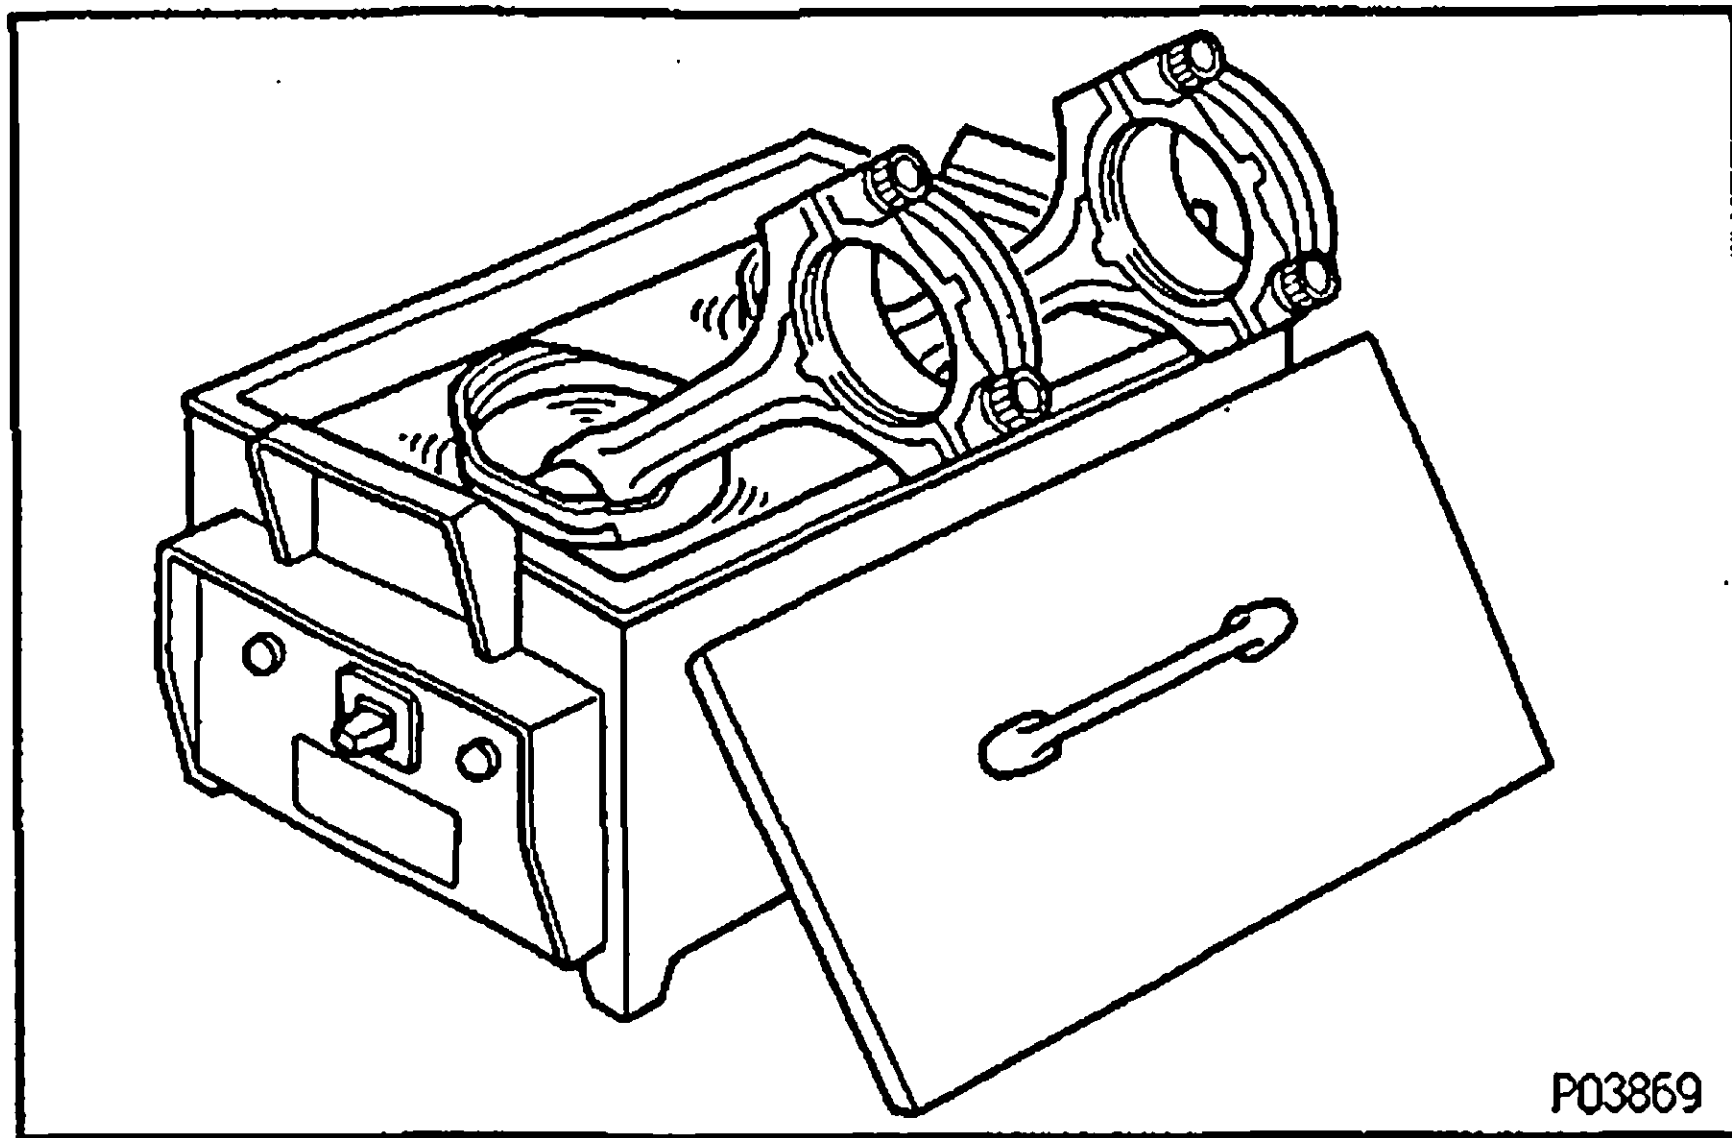


- (b) Gradually heat the piston to 80 — 90°C (176 — 194°F).

EG

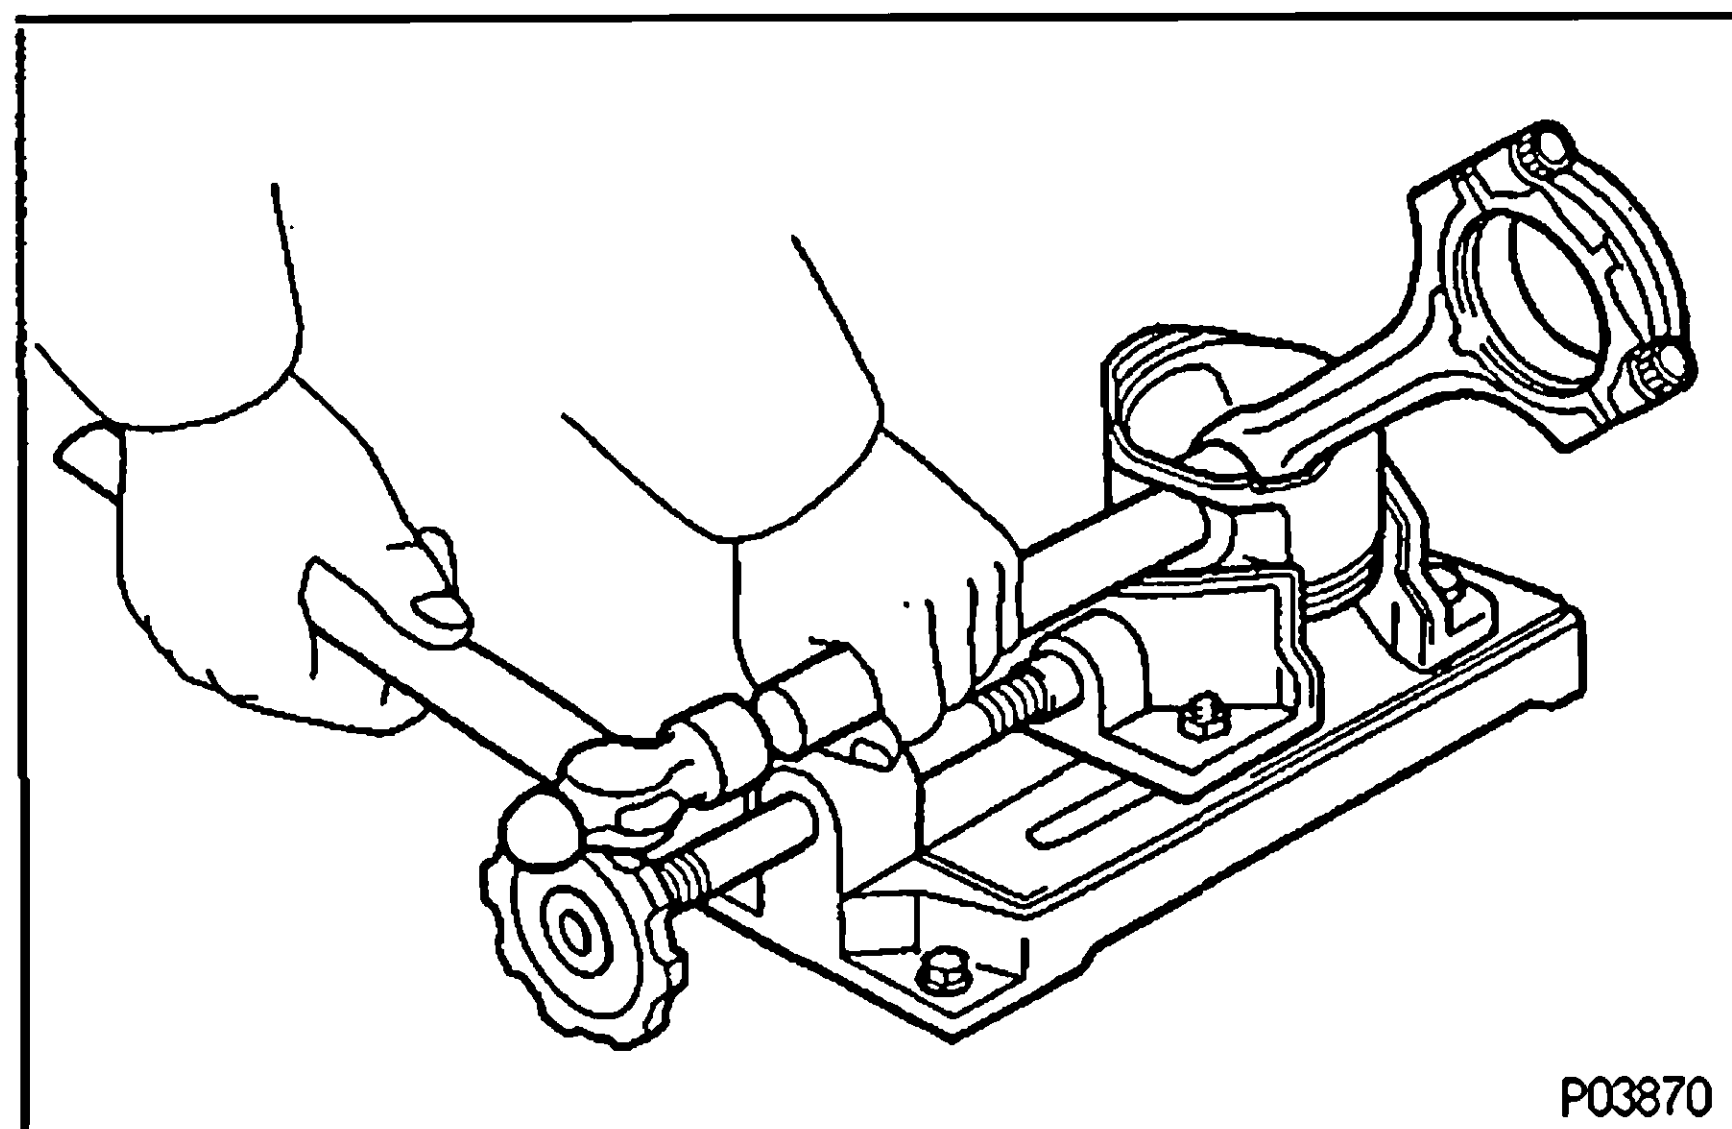


- (c) Using plastic-faced hammer and brass bar, lightly tap out the piston pin and remove the connecting rod.

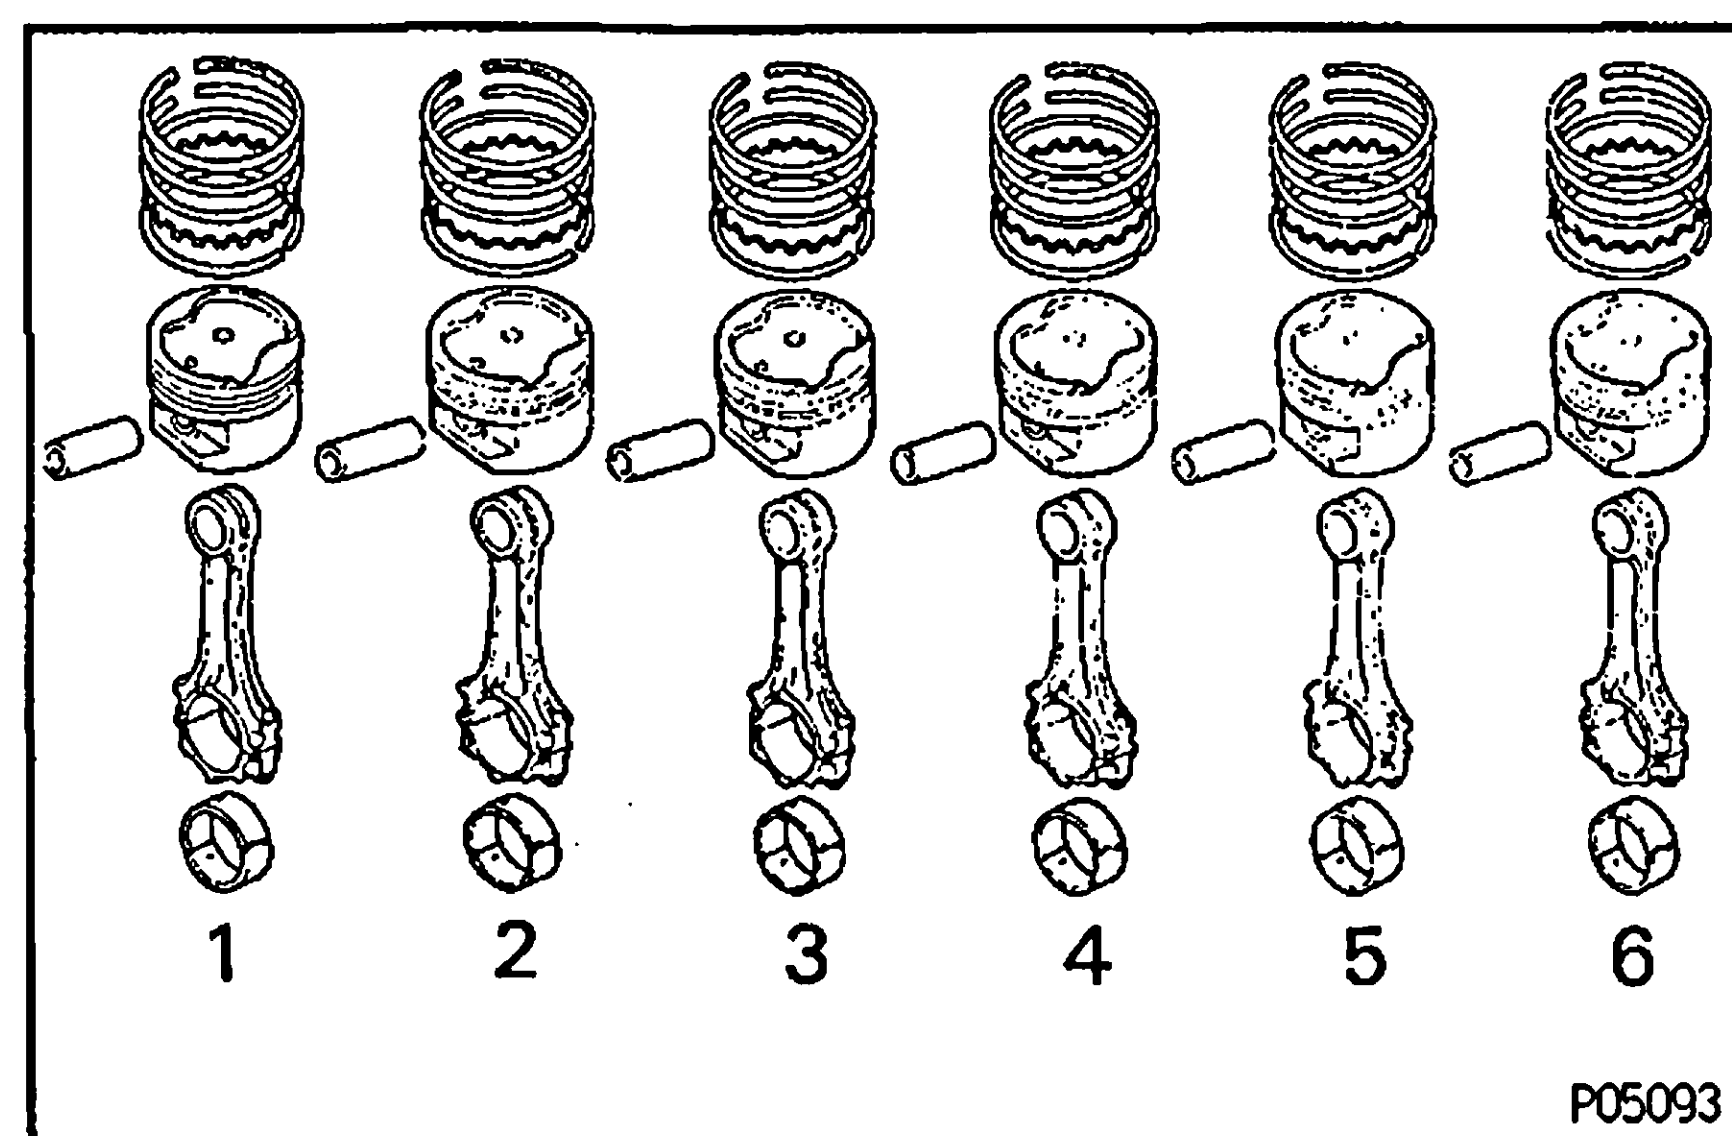

HINT:

- The piston and pin are a matched set.
- Arrange the pistons, pins, rings, connecting rods and bearings in correct order.

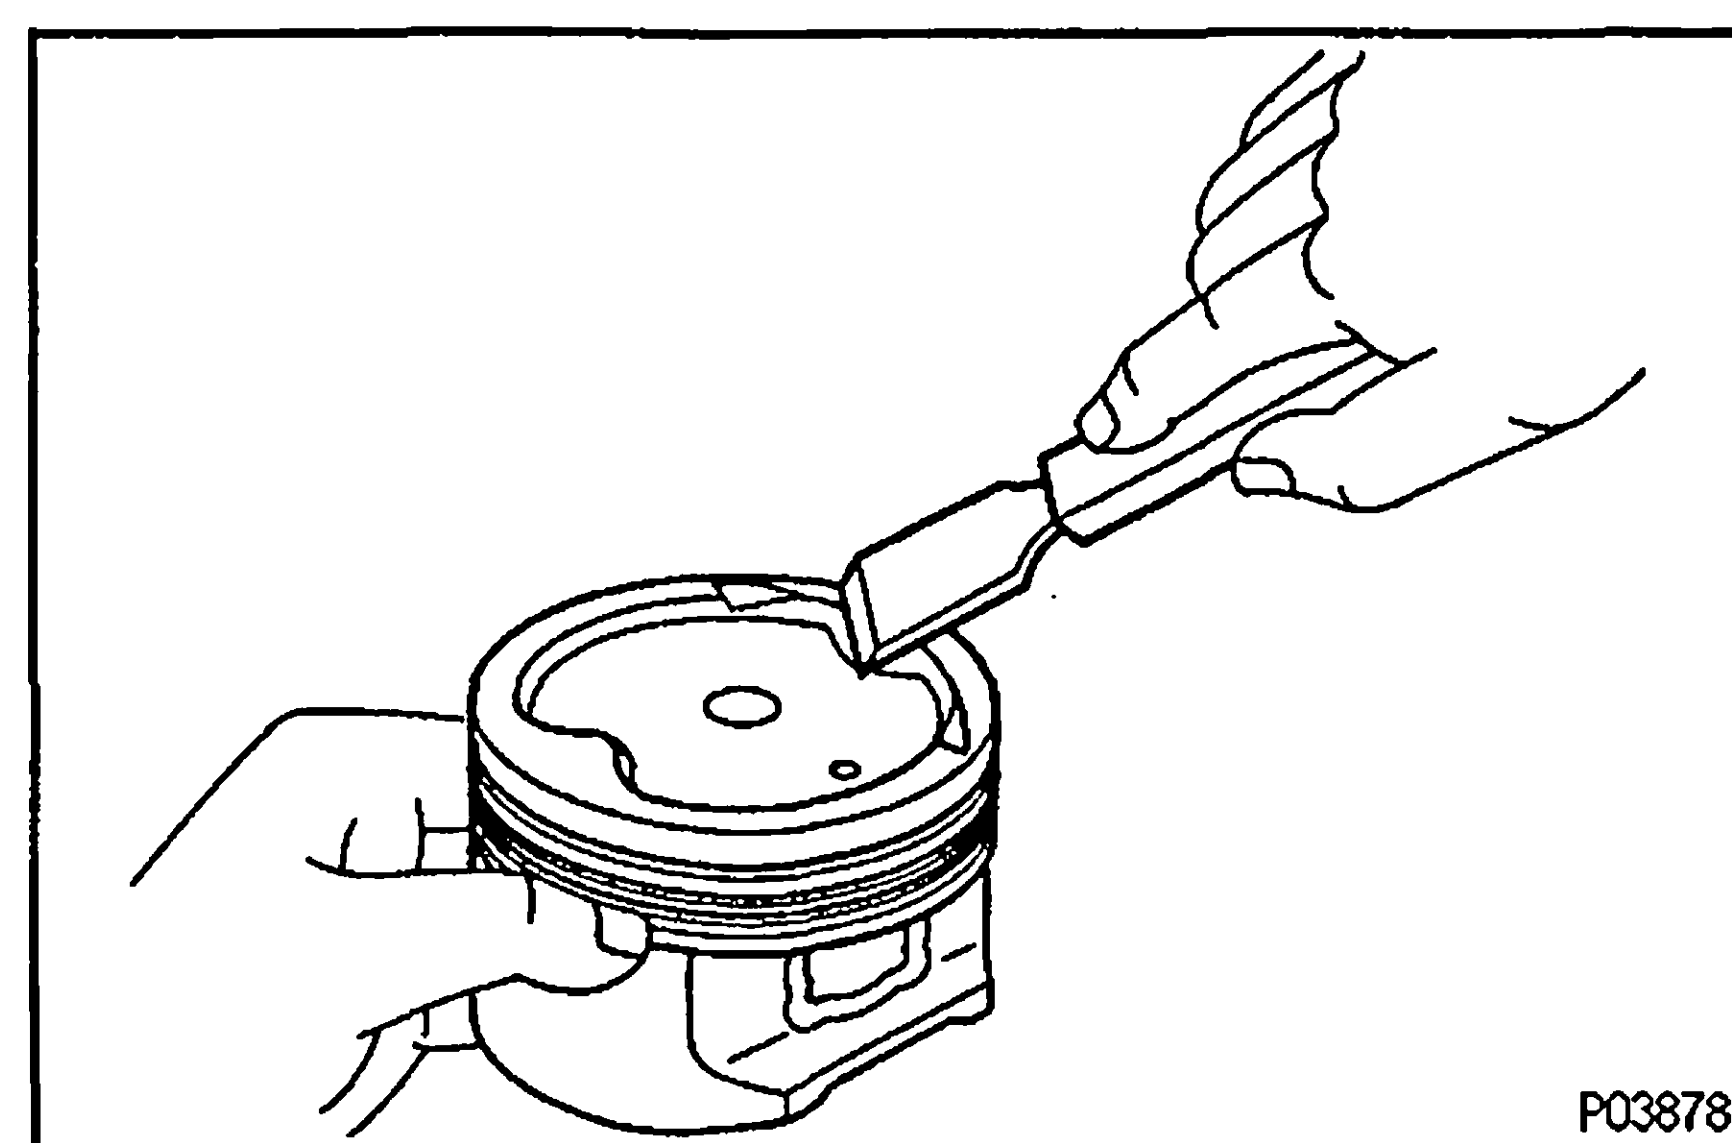


PISTON AND CONNECTING ROD INSPECTION


EG0VP-01

1. CLEAN PISTON

- (a) Using a gasket scraper, remove the carbon from the piston top.

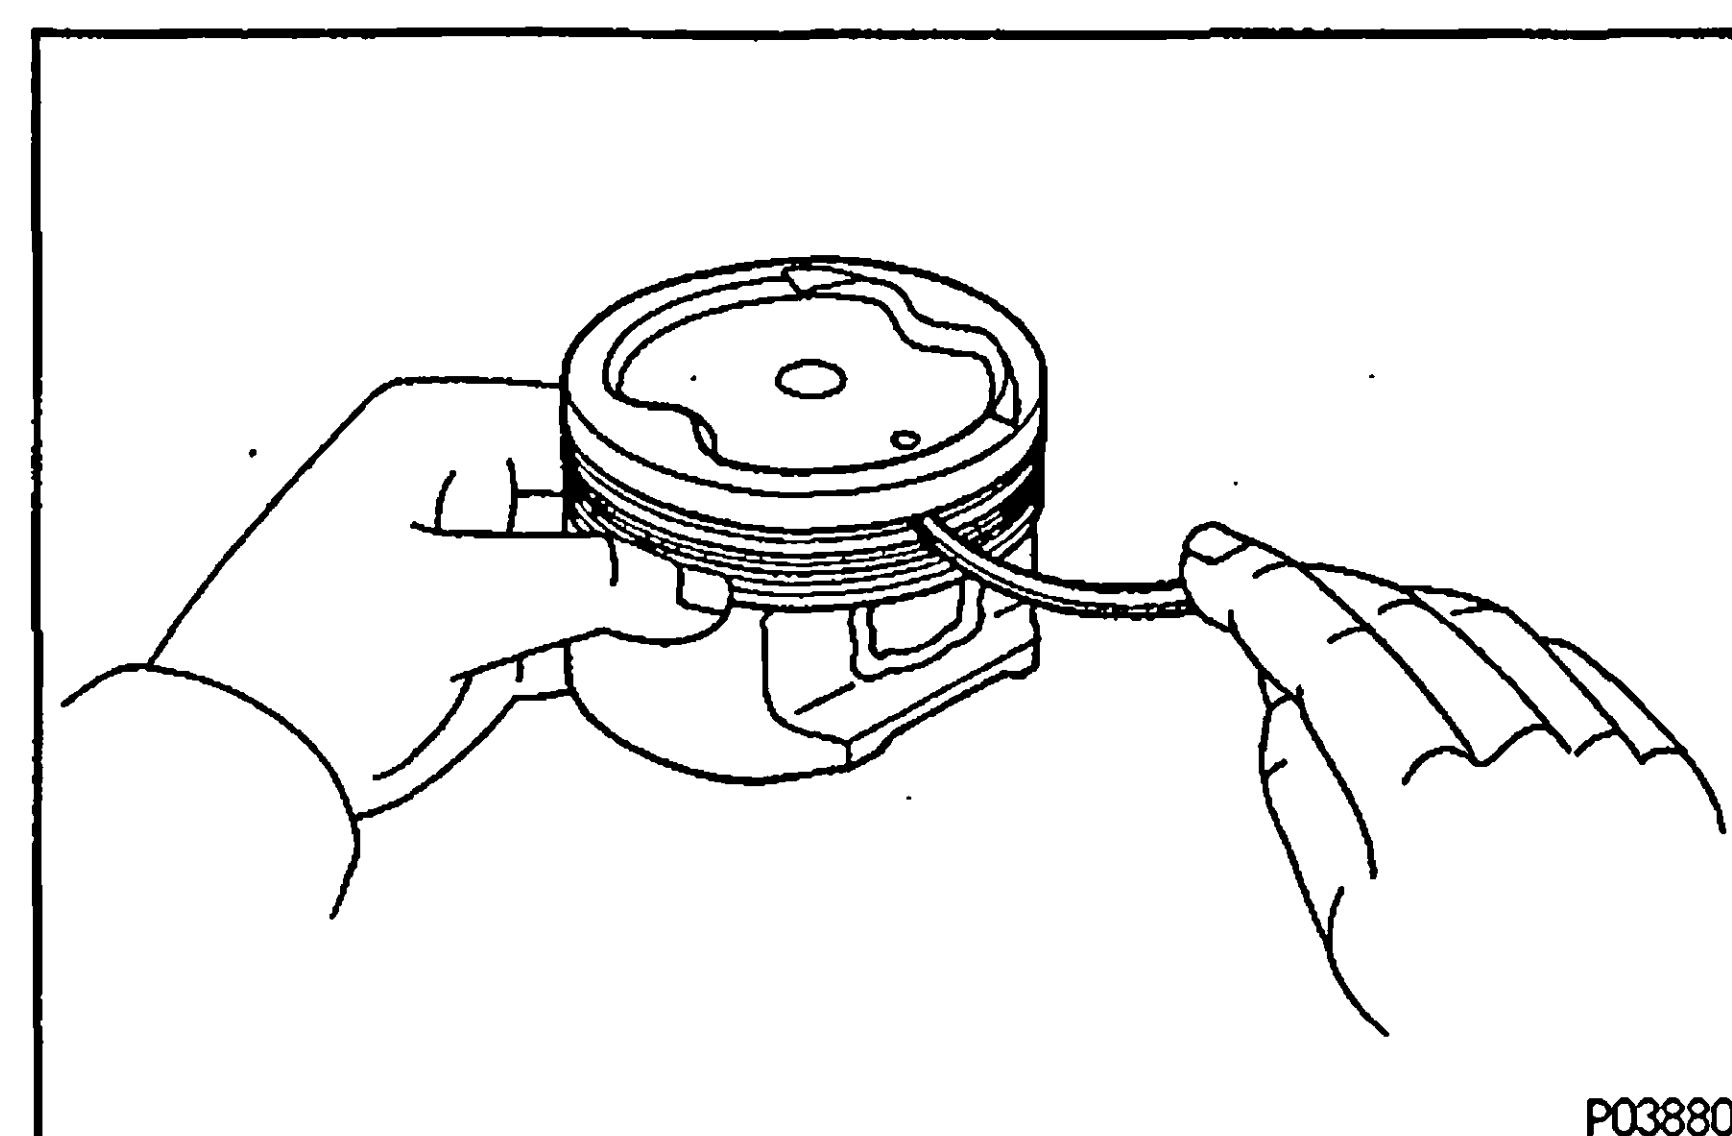


- (b) Using a groove cleaning tool or broken ring, clean the piston ring grooves.

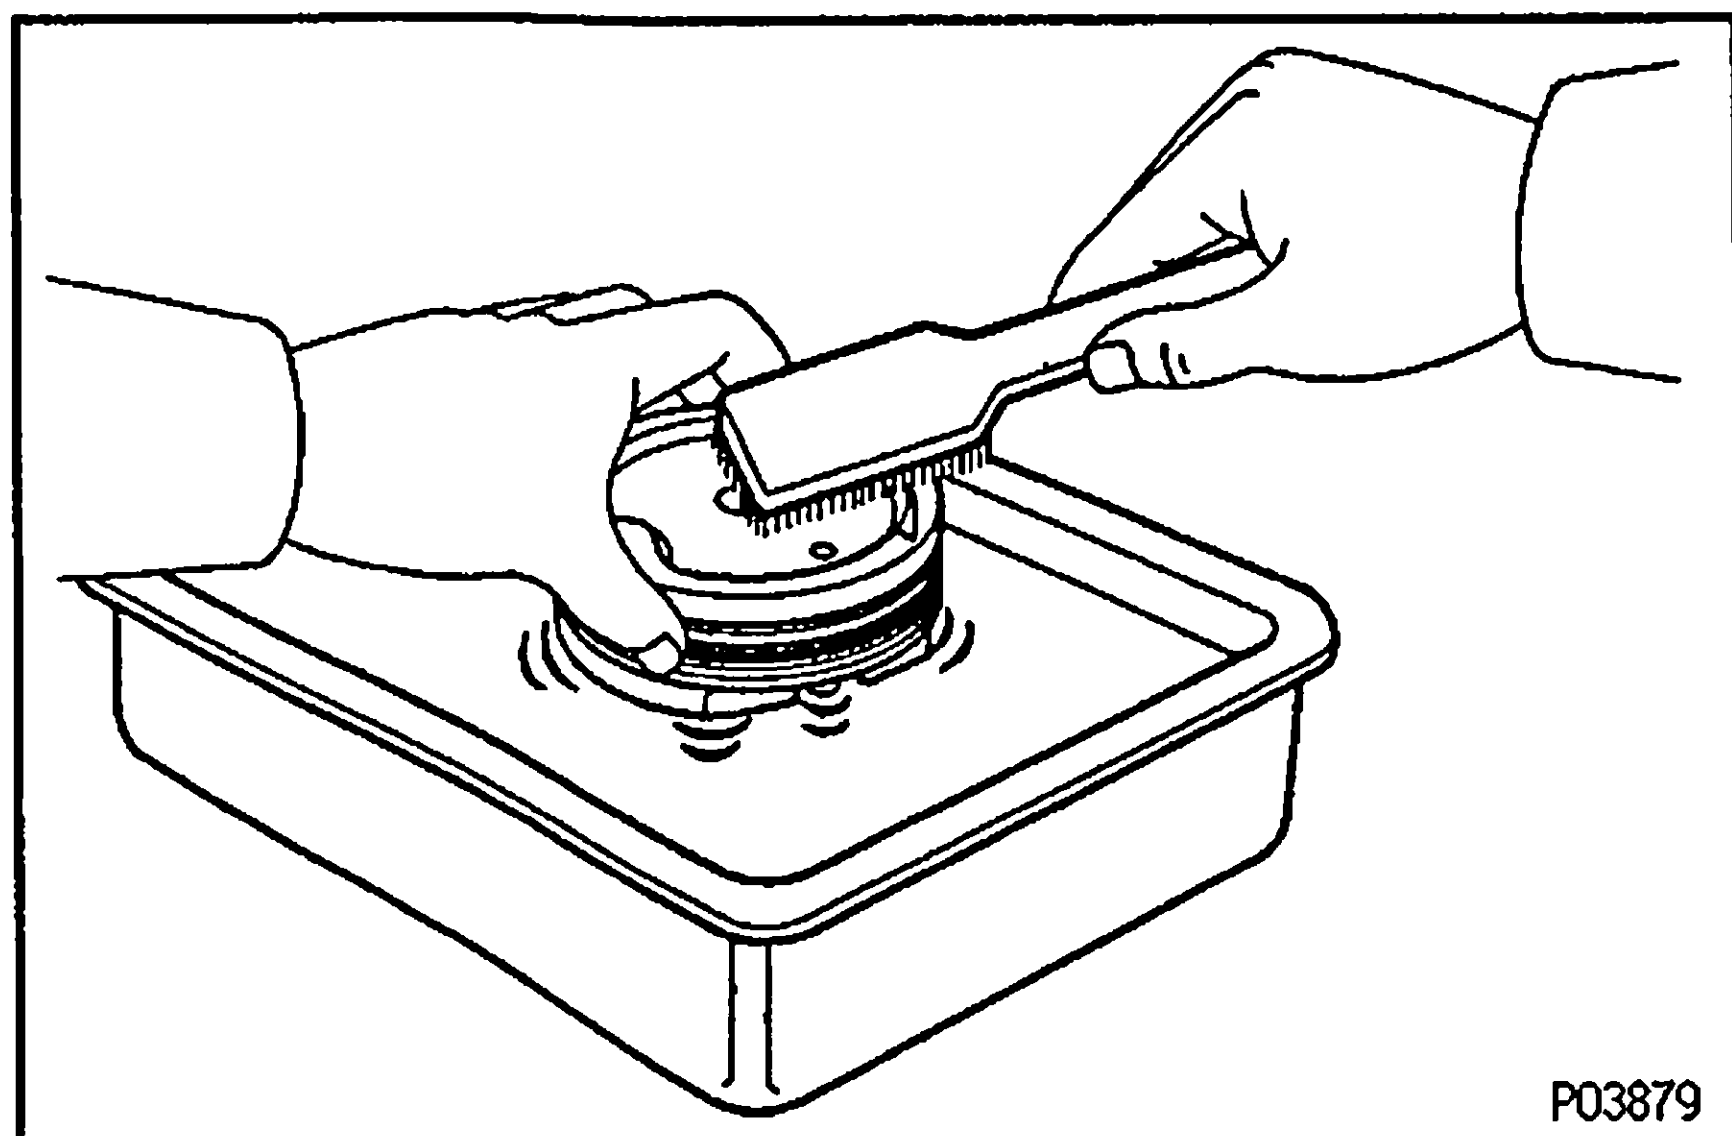

- (c) Using solvent and a brush, thoroughly clean the piston.


NOTICE: Do not use a wire brush.

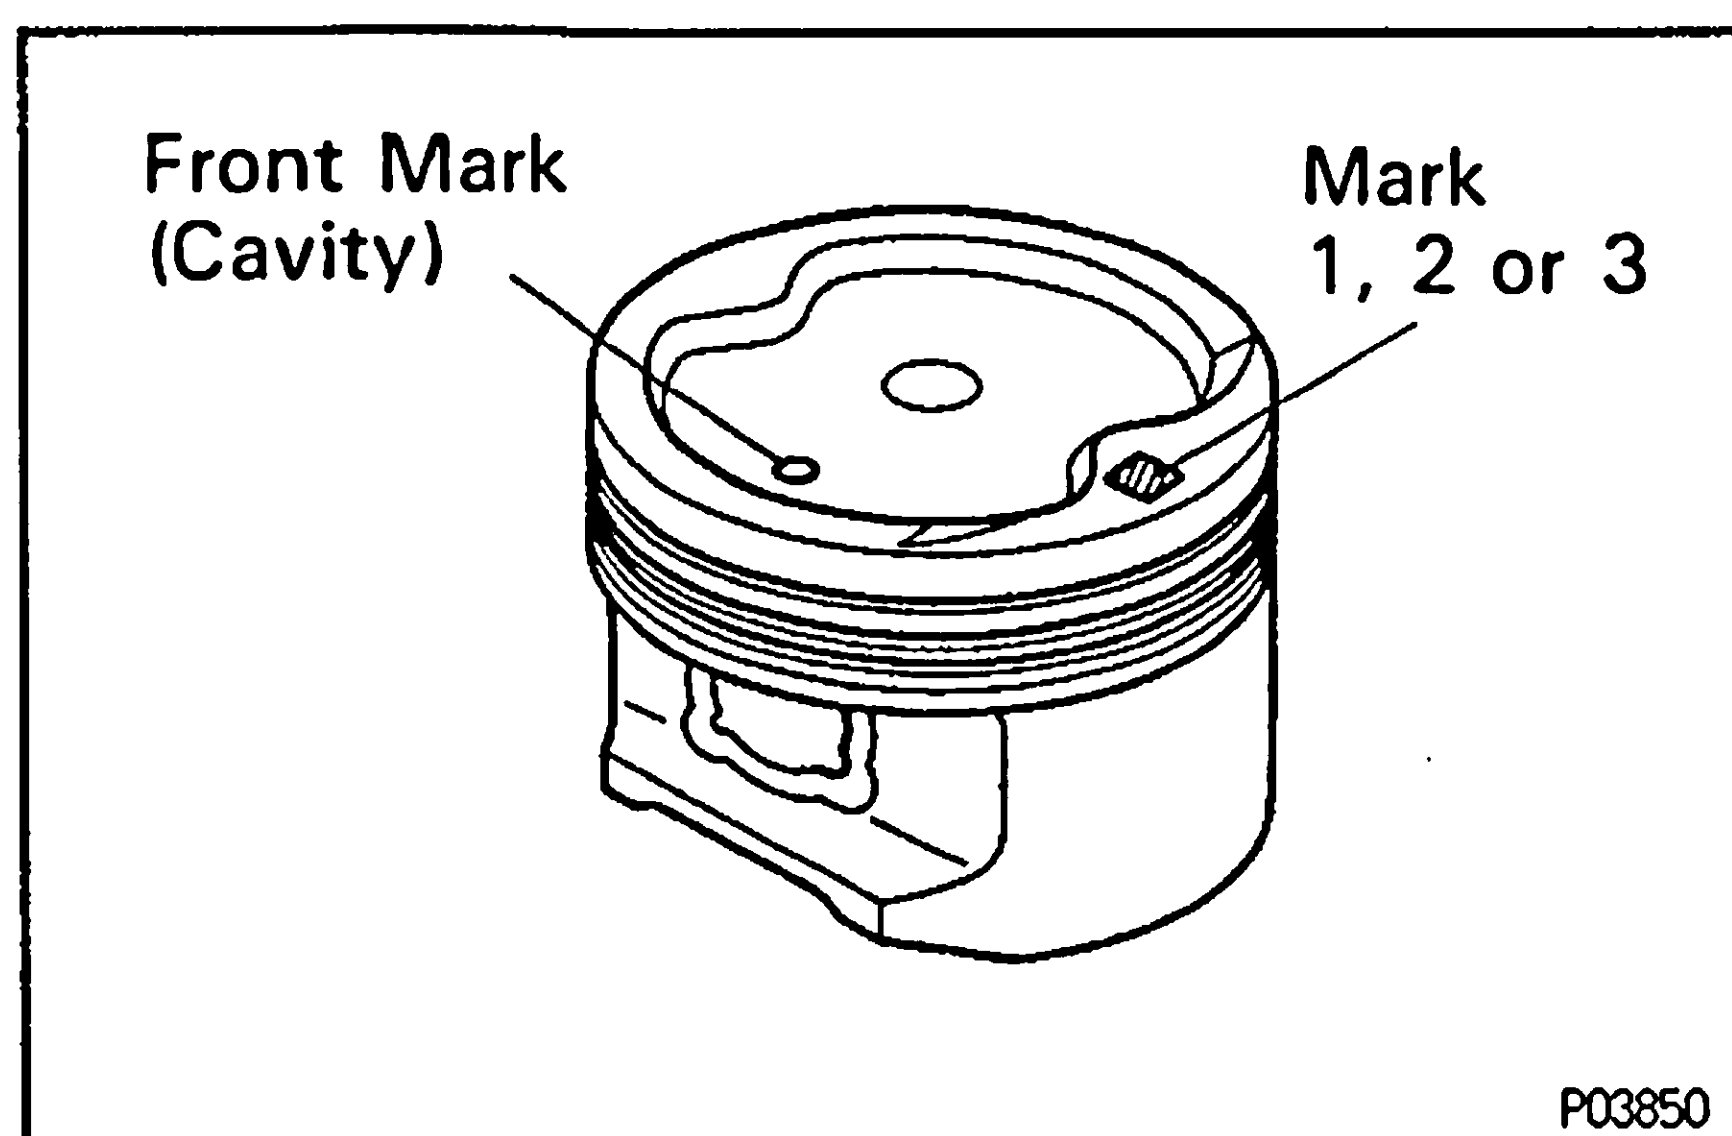

2. INSPECT PISTON

A. Inspect piston oil clearance

HINT: There are three sizes of the standard piston diameter, marked "1", "2" and "3" accordingly. The mark is stamped on the piston top.

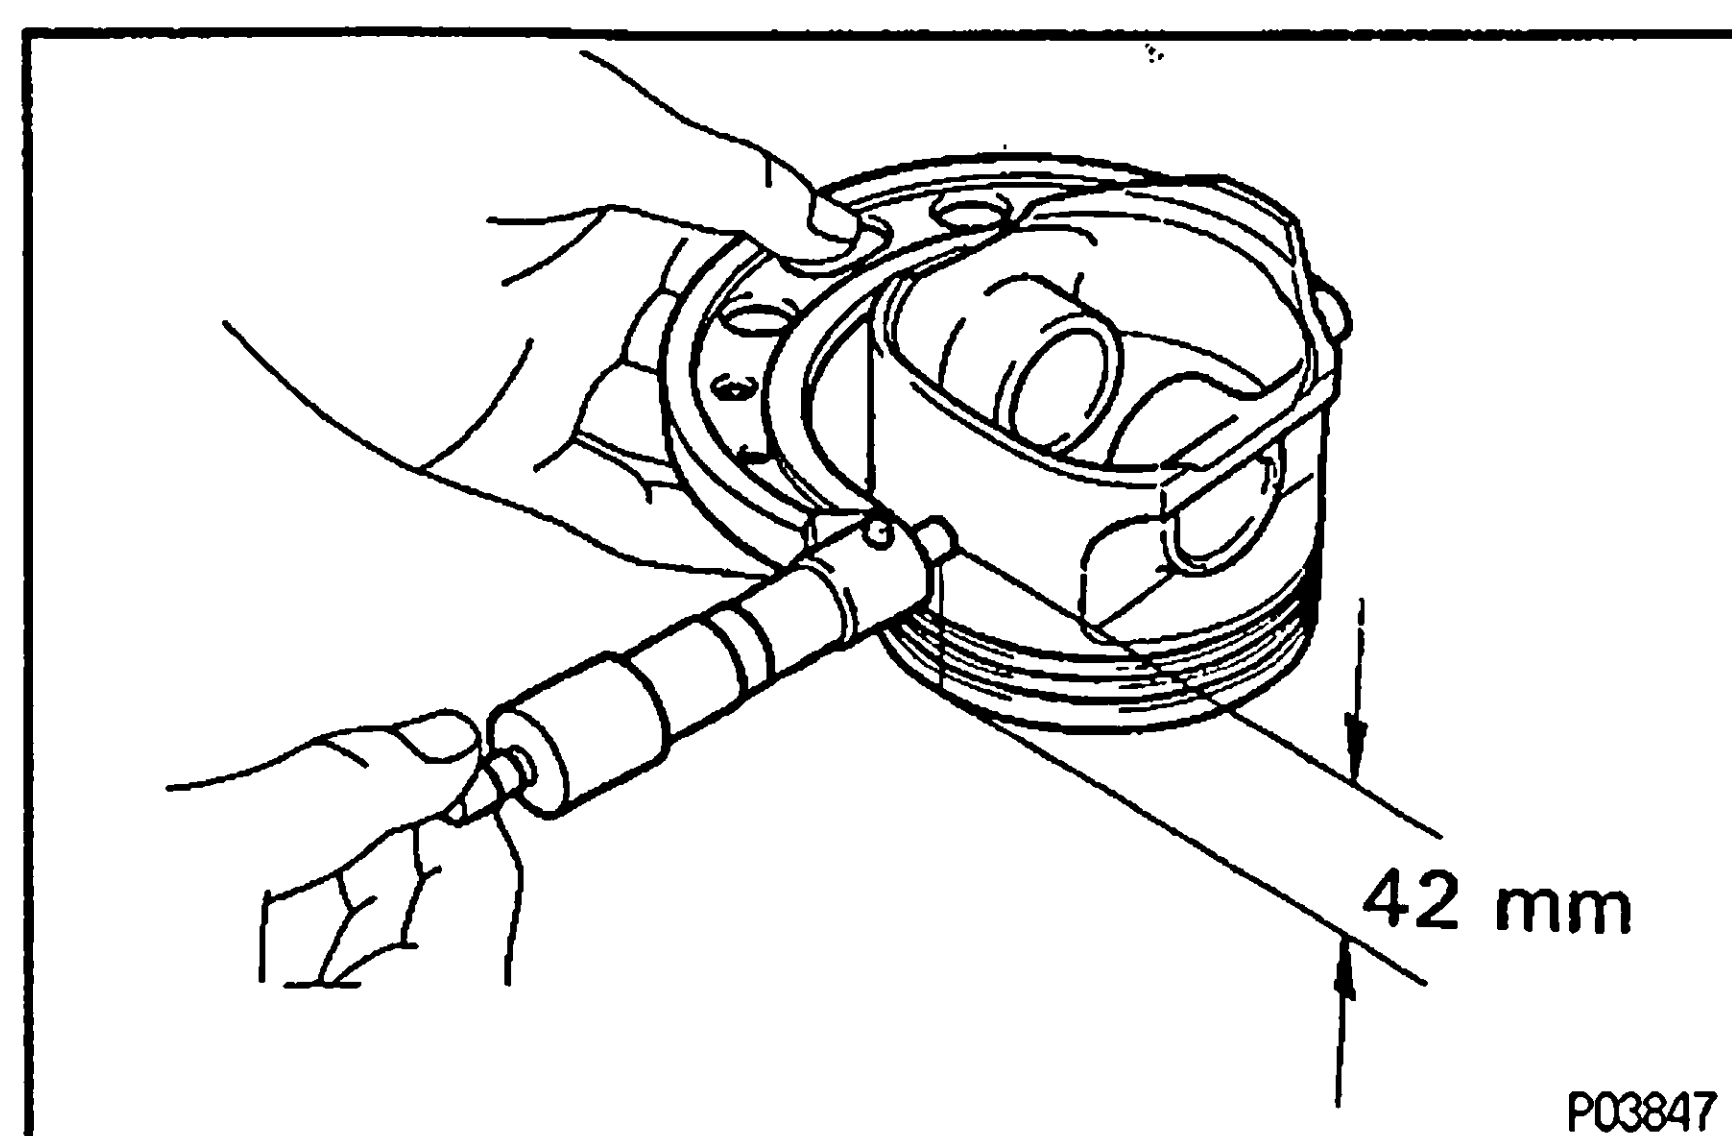

- (a) Using a micrometer, measure the piston diameter at ring angles to the piston pin center line, 42 mm (1.65 in.) from the piston head.

Piston diameter:

STD

Mark "1"

99.950 – 99.960 mm (3.9350 – 3.9354 in.)

Mark "2"

99.960 – 99.970 mm (3.9354 – 3.9358 in.)

Mark "3"

99.970 – 99.980 mm (3.9358 – 3.9362 in.)

O/S 0.50

100.450 – 100.480 mm (3.9547 – 3.9559 in.)

O/S 1.00

100.950 – 100.980 mm (3.9744 – 3.9756 in.)

- (b) Measure the cylinder bore diameter in the thrust directions.

(See step 4 on page EG-100)


- (c) Subtract the piston diameter measurement from the cylinder bore diameter measurement.


Standard oil clearance:

0.040 – 0.060 mm (0.0016 – 0.0024 in.)

If the oil clearance is greater than maximum, replace all the six pistons and rebore all the six cylinders. If necessary, replace the cylinder block.

HINT (Use new cylinder block): Use a piston with the same number mark as the cylinder bore diameter marked on the cylinder block.

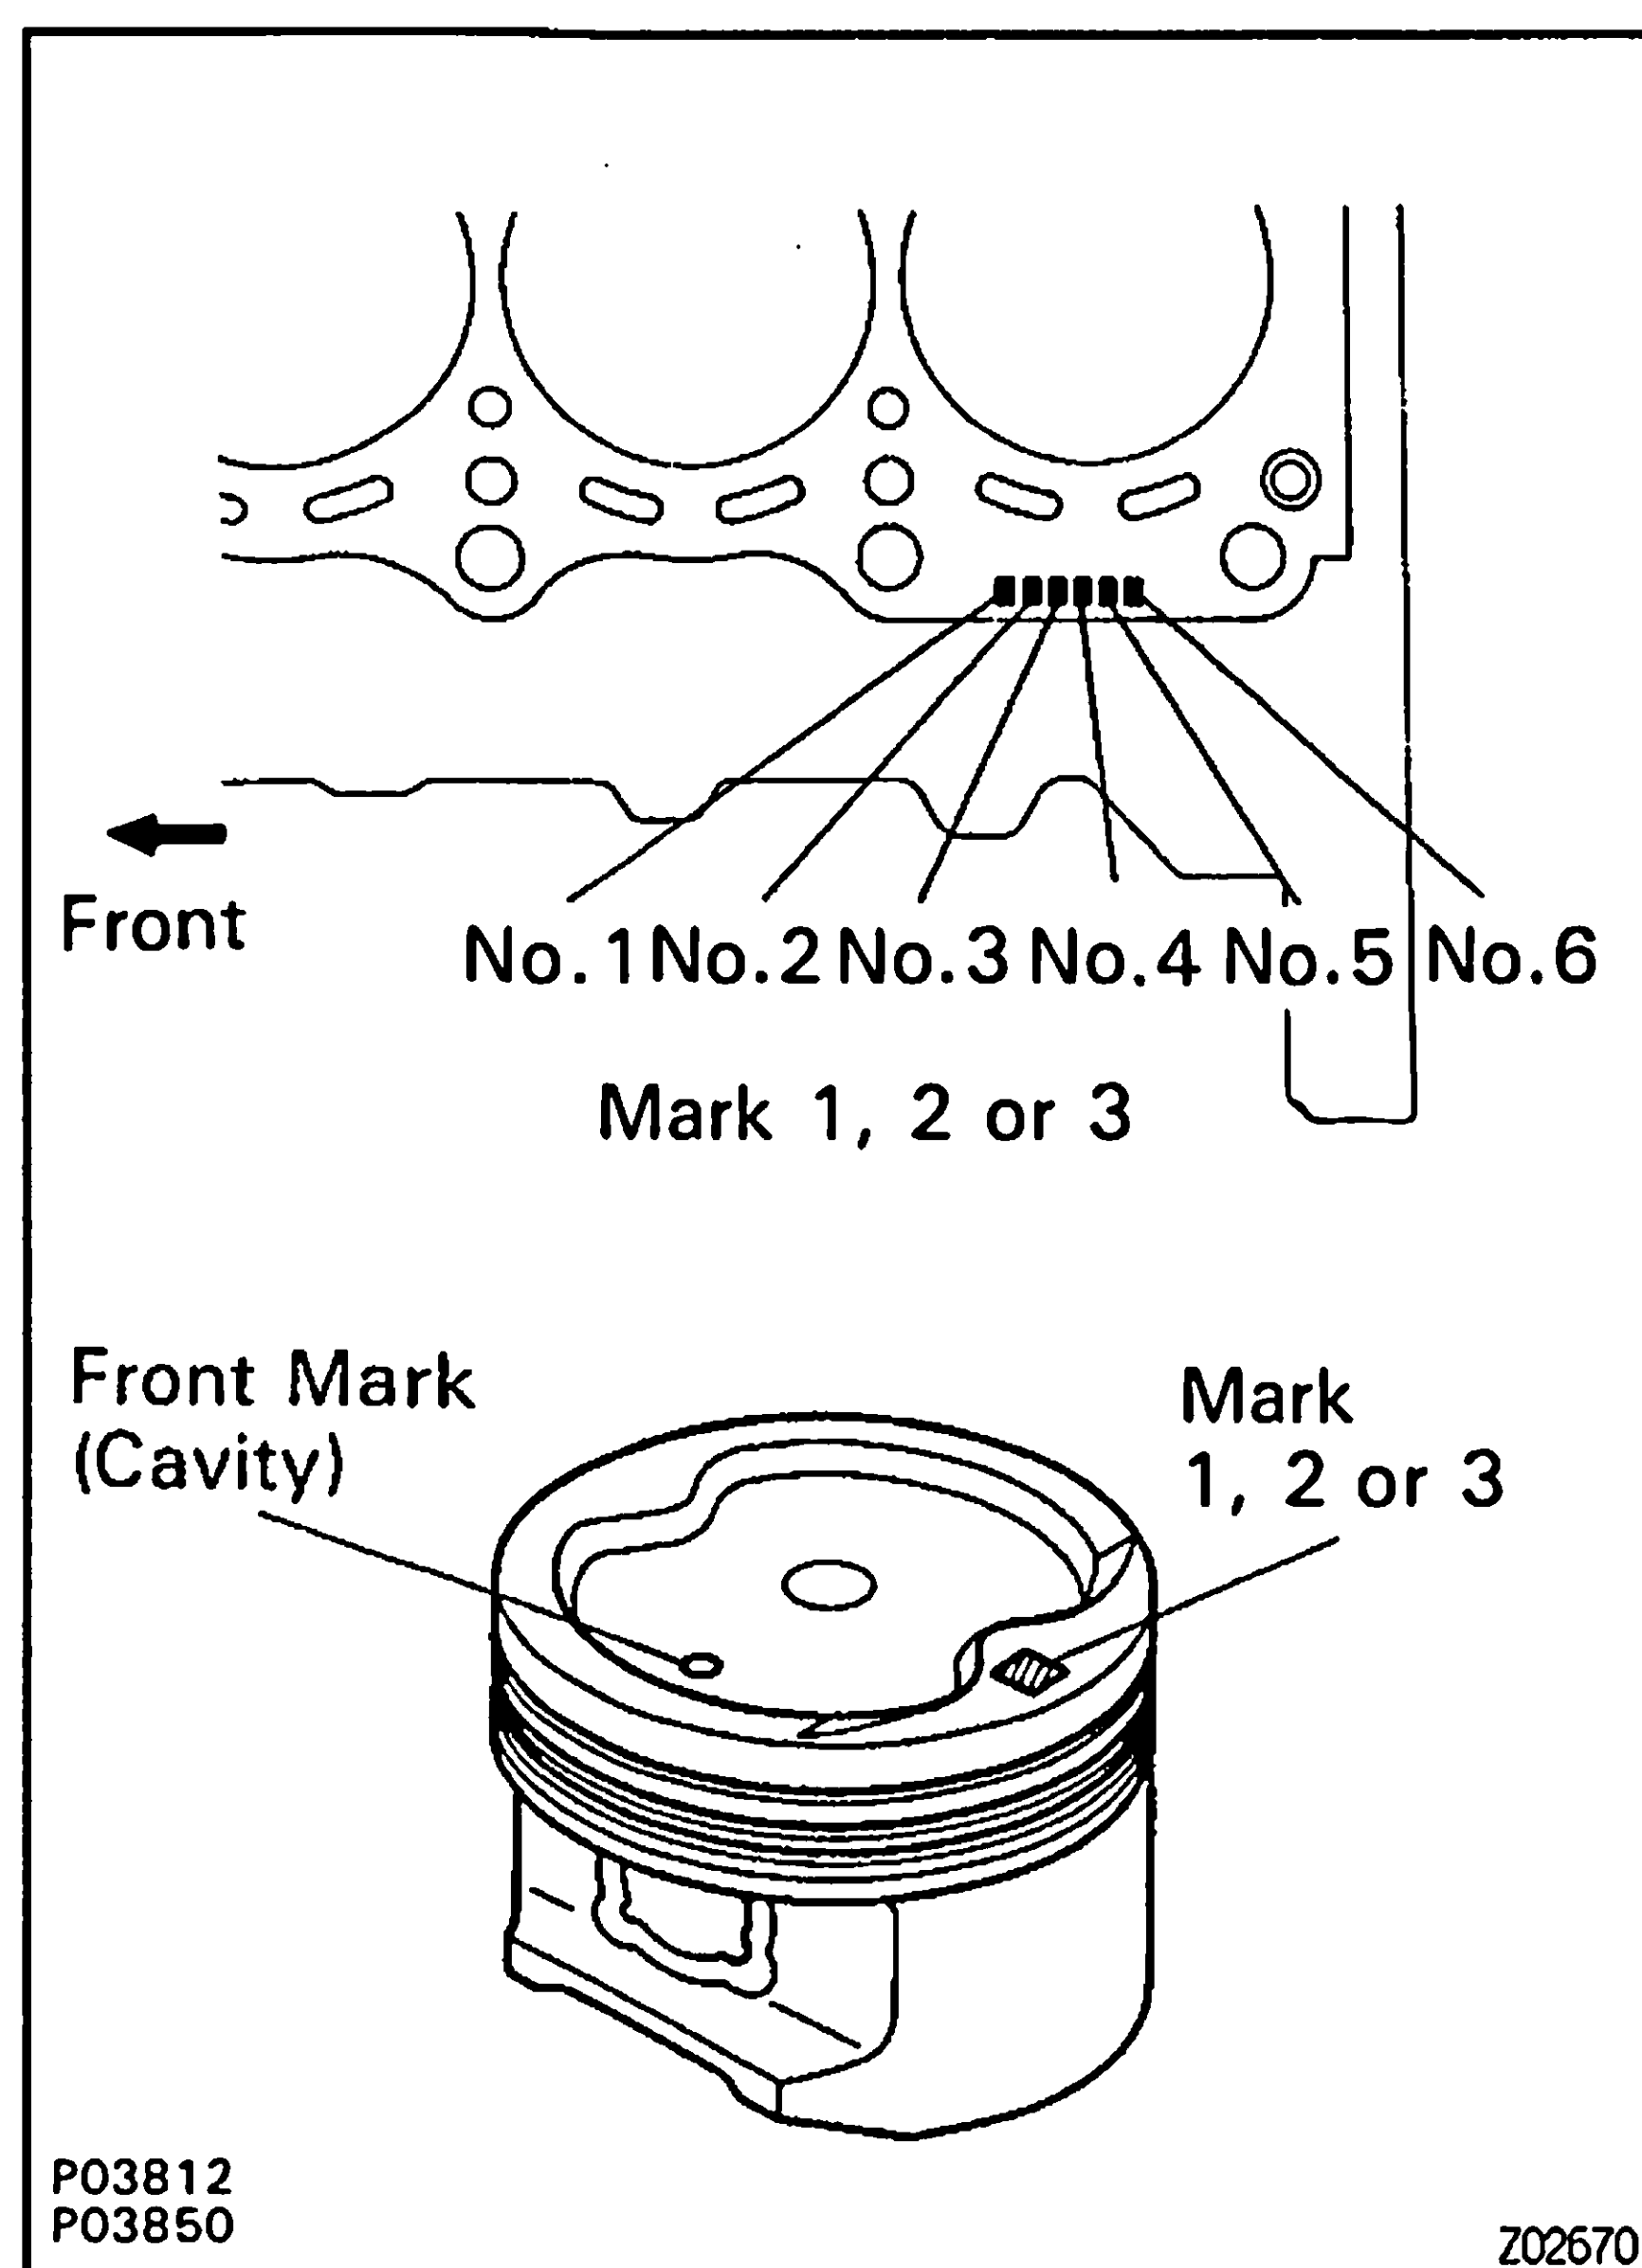

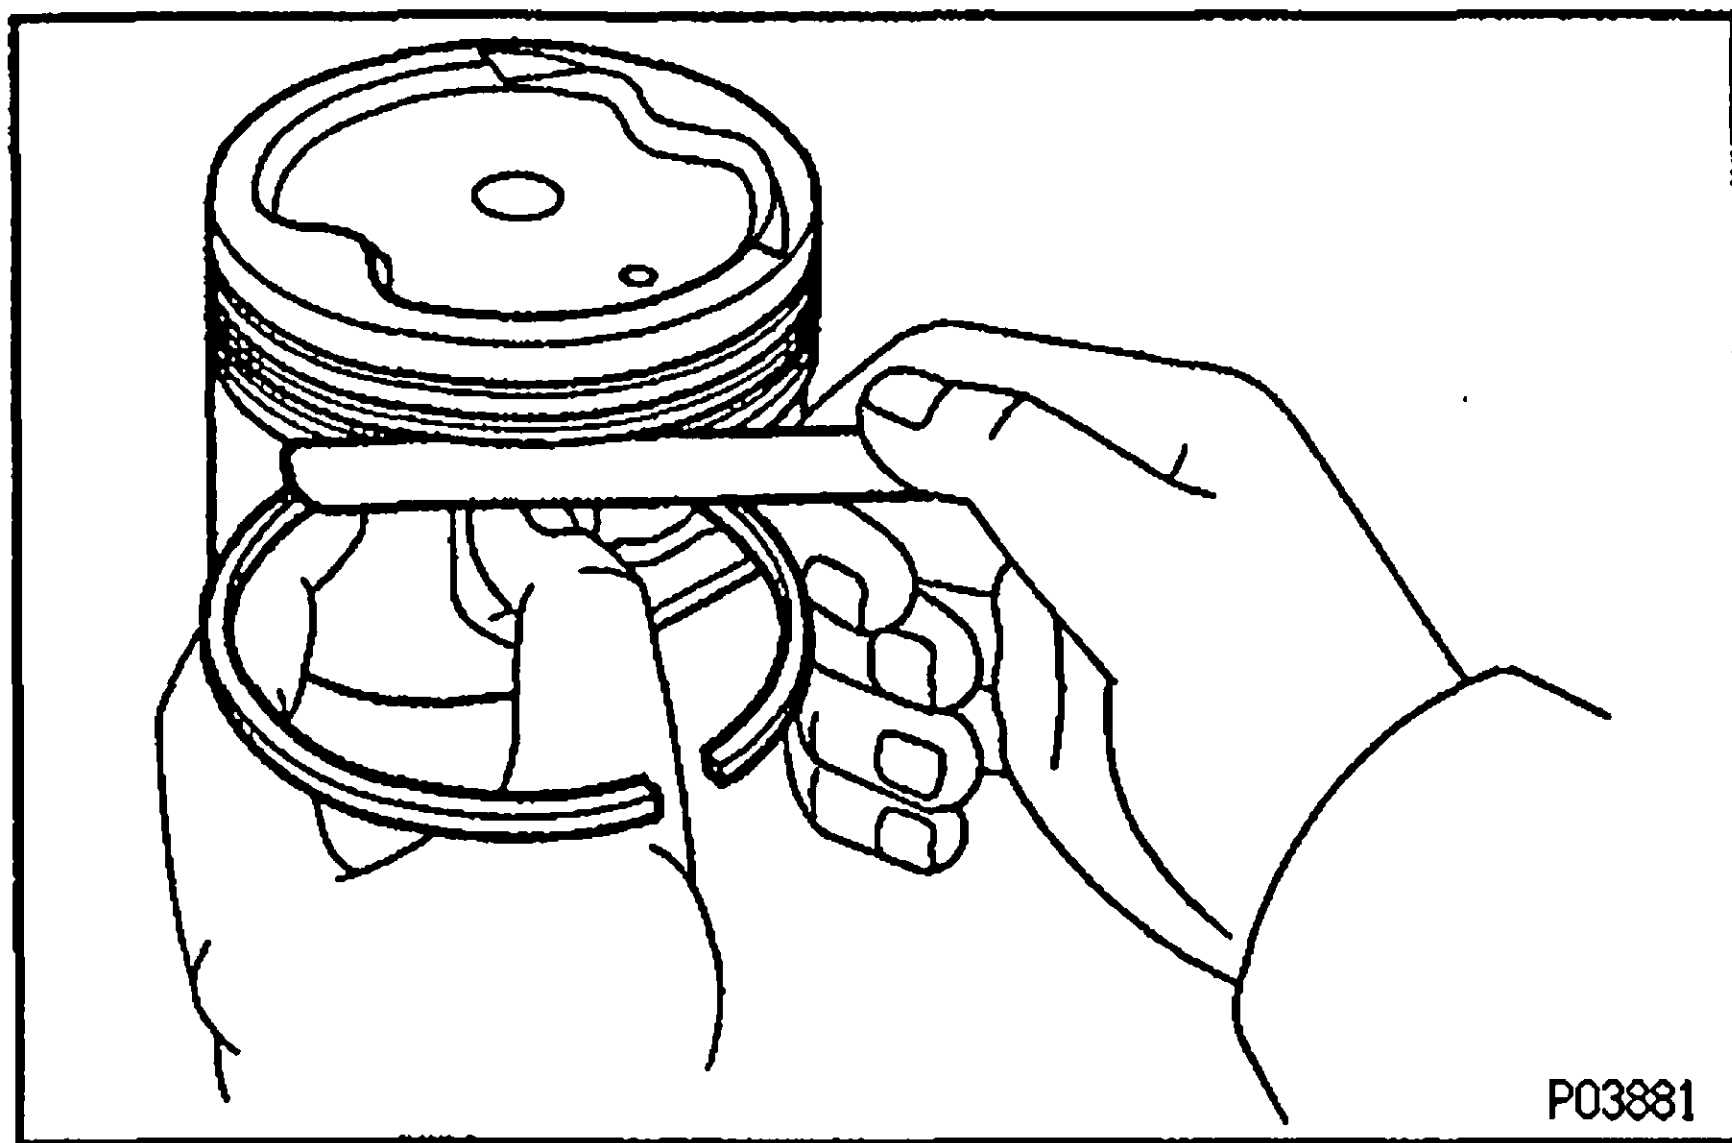**B. Inspect piston ring groove clearance**

Using a thickness gauge, measure the clearance between new piston ring and the wall of the piston ring groove.

Ring groove clearance:

No.1


0.040 — 0.080 (0.0016 — 0.0031 in.)

No.2


0.030 — 0.070 (0.0012 — 0.0028 in.)

If the clearance is greater than maximum, replace the piston.

EG

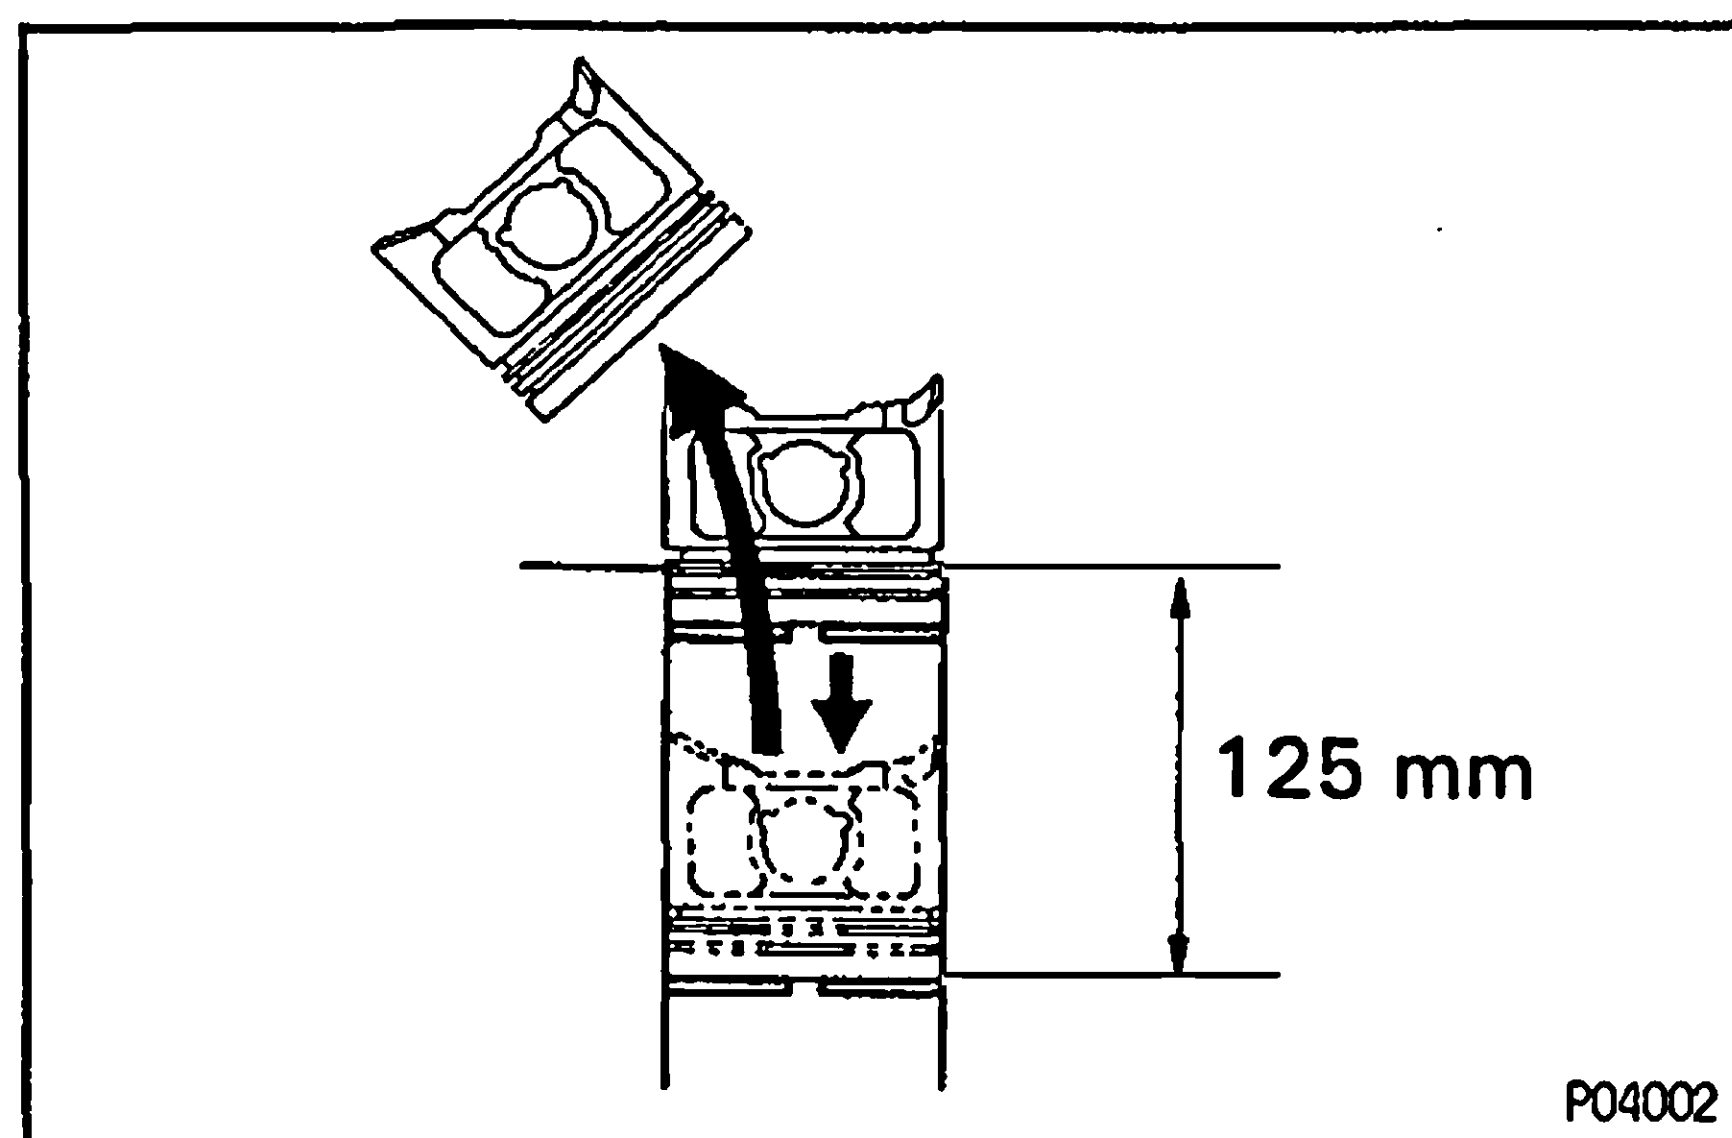**C. Inspect piston ring end gap**

- (a) Insert the piston ring into the cylinder bore.
- (b) Using a piston, push the piston ring a little beyond the bottom of the ring travel, 125 mm (4.92 in.) from the top of the cylinder block.

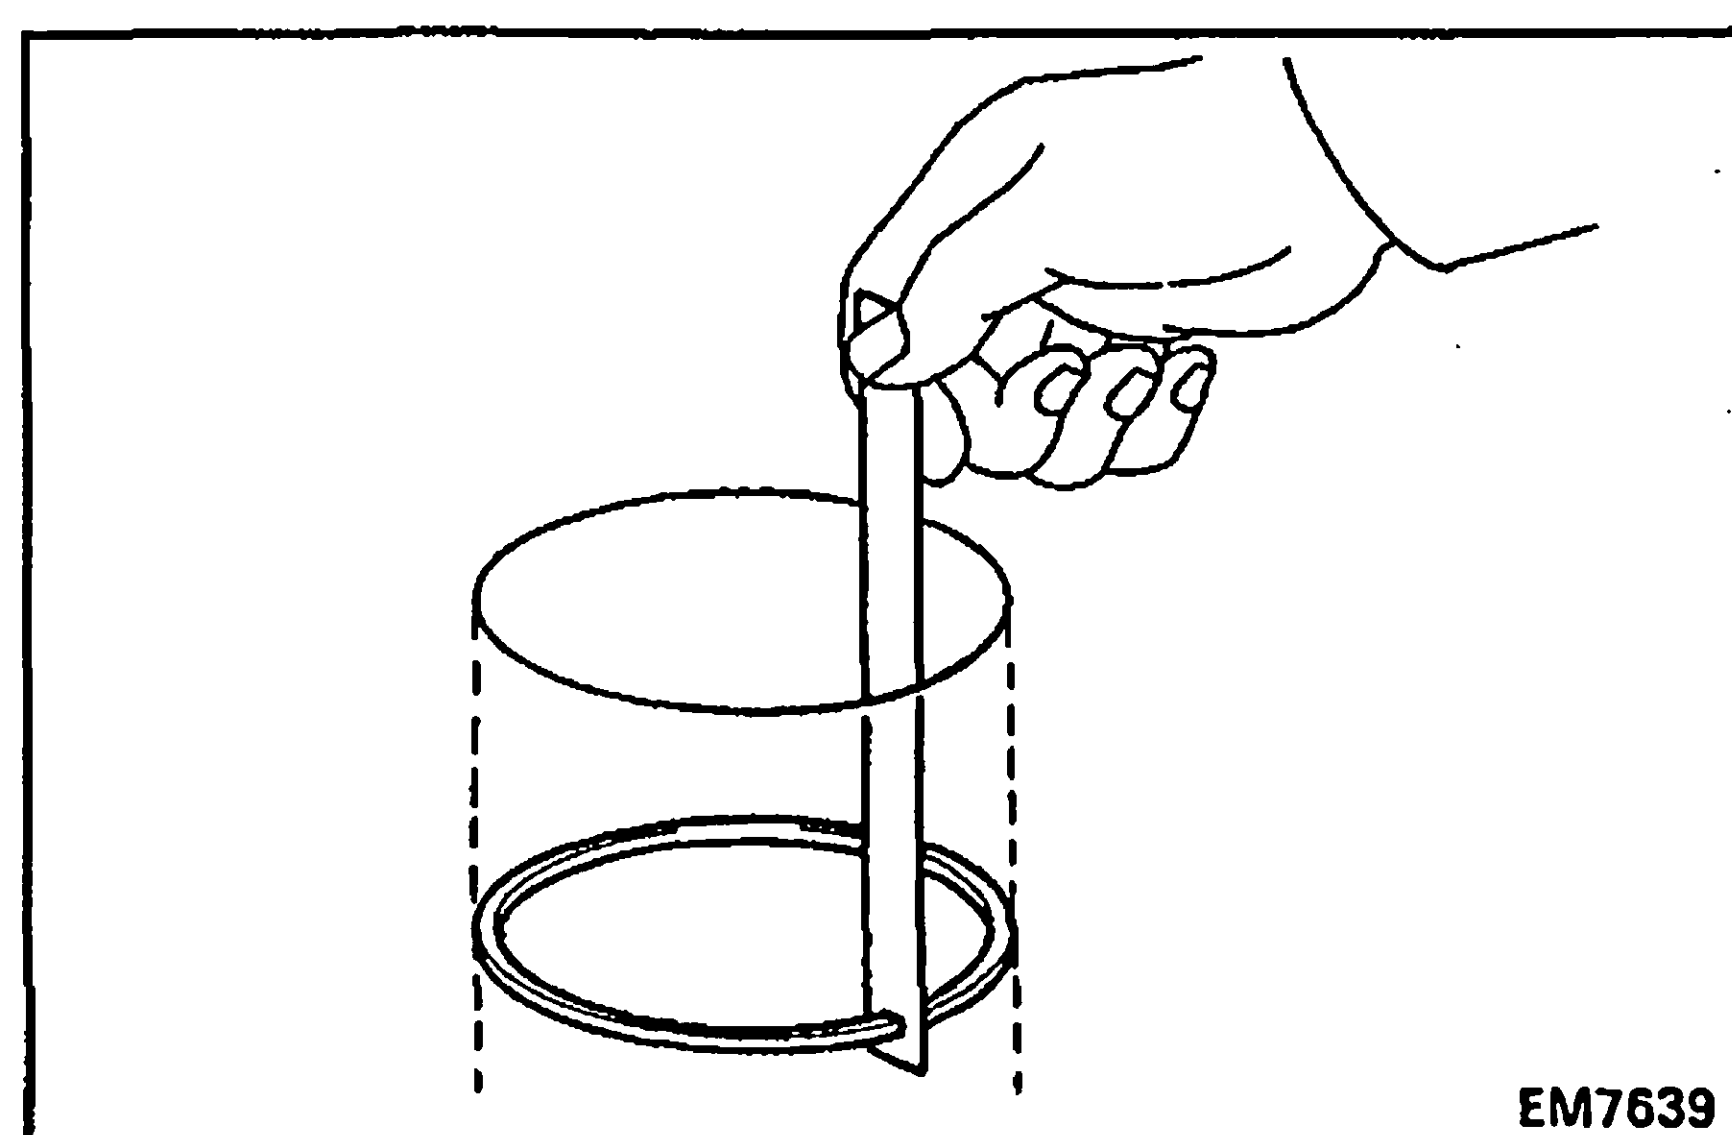

- (c) Using a thickness gauge, measure the end gap.

Standard end gap:

No.1

0.300 — 0.520 mm (0.0118 — 0.0205 in.)

No.2

0.450 — 0.670 mm (0.0177 — 0.0264 in.)

Oil (Side rail)

0.150 — 0.520 mm (0.0059 — 0.0205 in.)

Maximum end gap:

No.1

1.12 mm (0.0441 in.)

No.2


1.17 mm (0.0461 in.)

Oil (Side rail)


1.12 mm (0.0441 in.)

If the end gap is greater than maximum, replace the piston ring. If the end gap is greater than maximum, even with a new piston ring, rebore all the six cylinders or replace the cylinder block.

EG

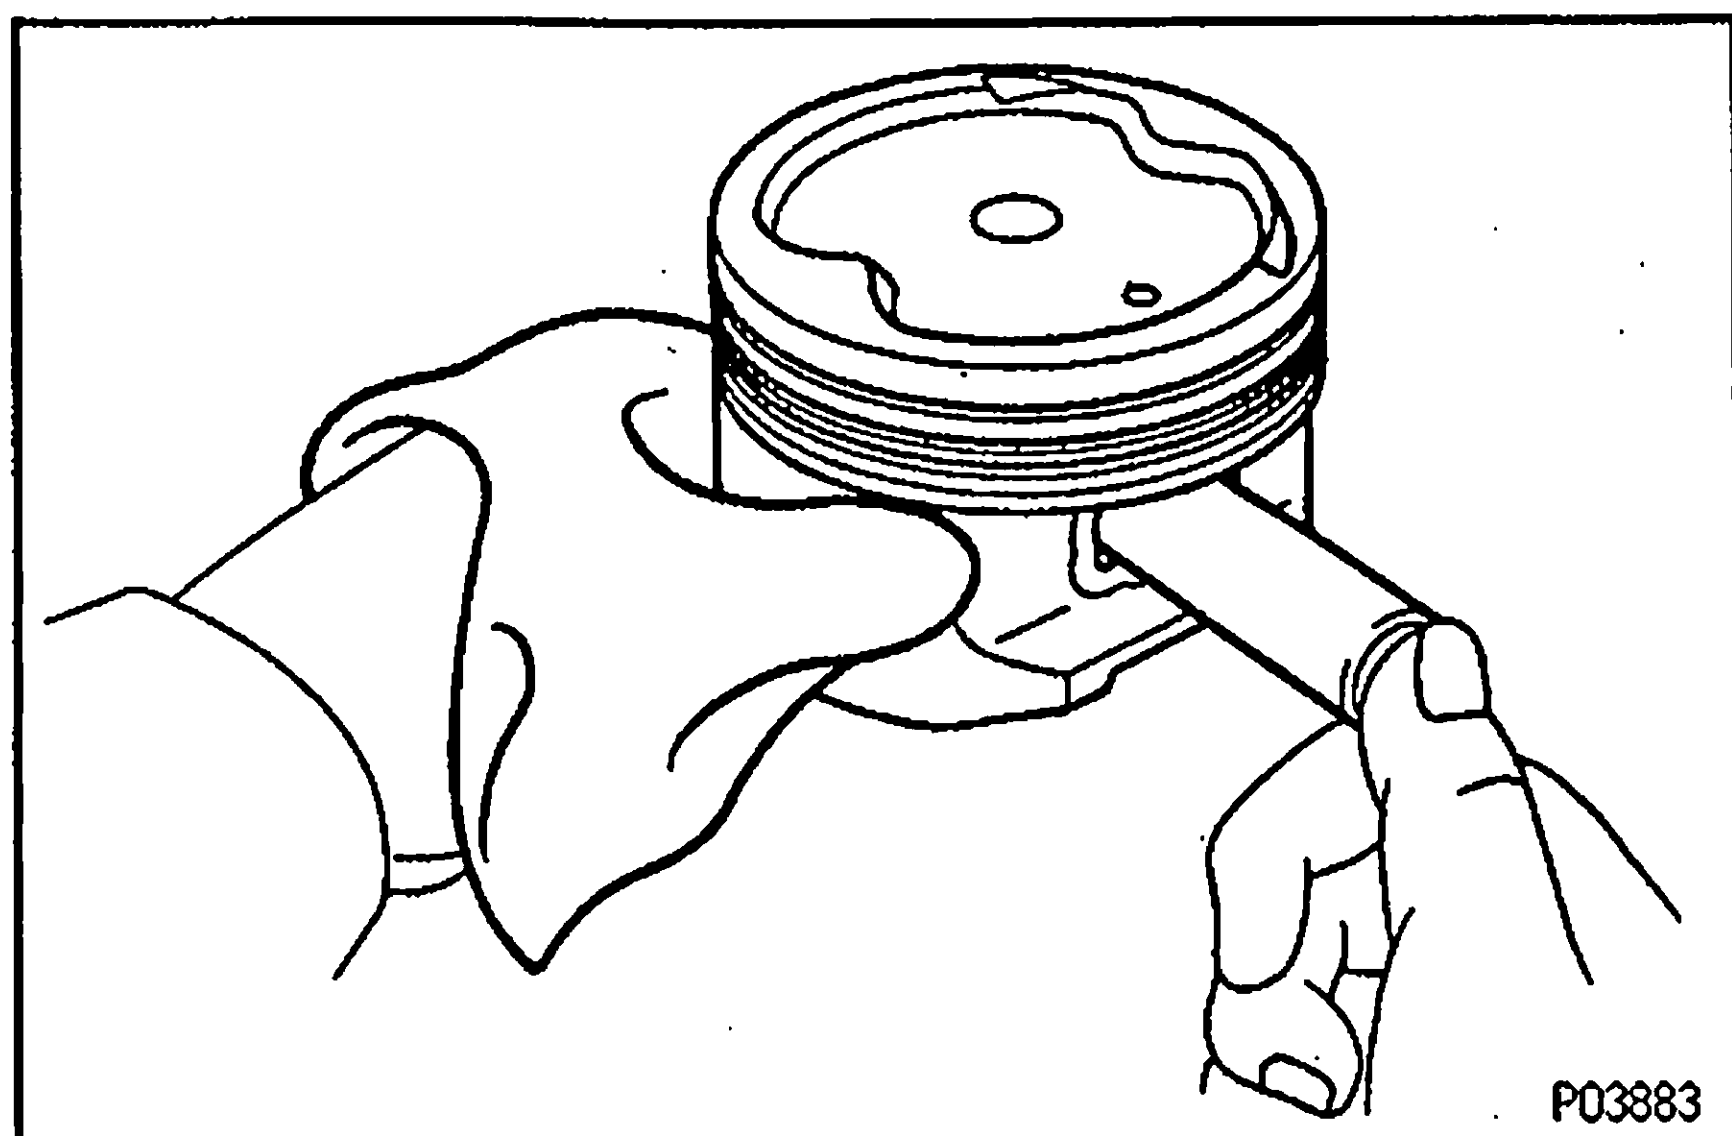**D. Inspect piston pin fit**

At 80 — 90°C (176 — 194°F), you should be able to push the piston pin into the piston pin hole with your thumb.

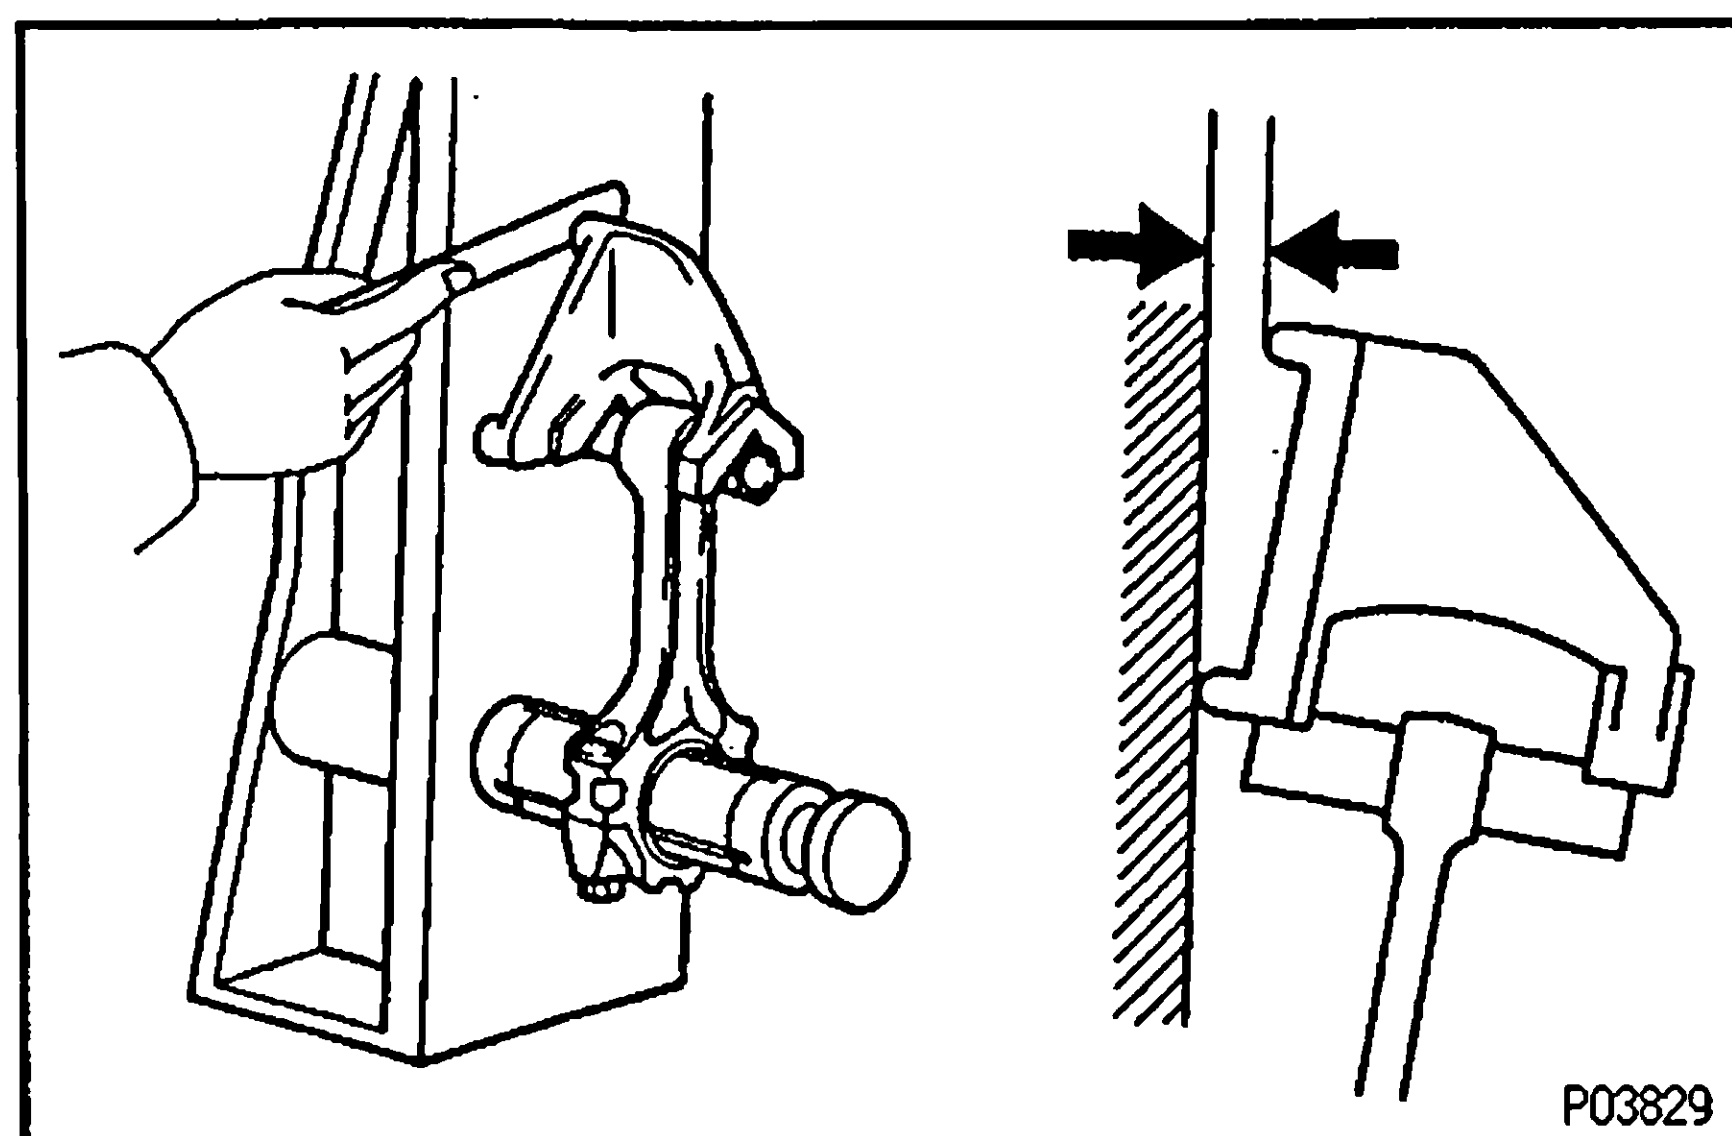**3. INSPECT CONNECTING ROD****A. Inspect connecting rod alignment**


Using a rod aligner and thickness gauge, check the connecting rod alignment.

- Check for bend.

Maximum bend:

0.05 mm (0.0020 in.) per 100 mm (3.94 in.)

If bend is greater than maximum, replace the connecting rod assembly.

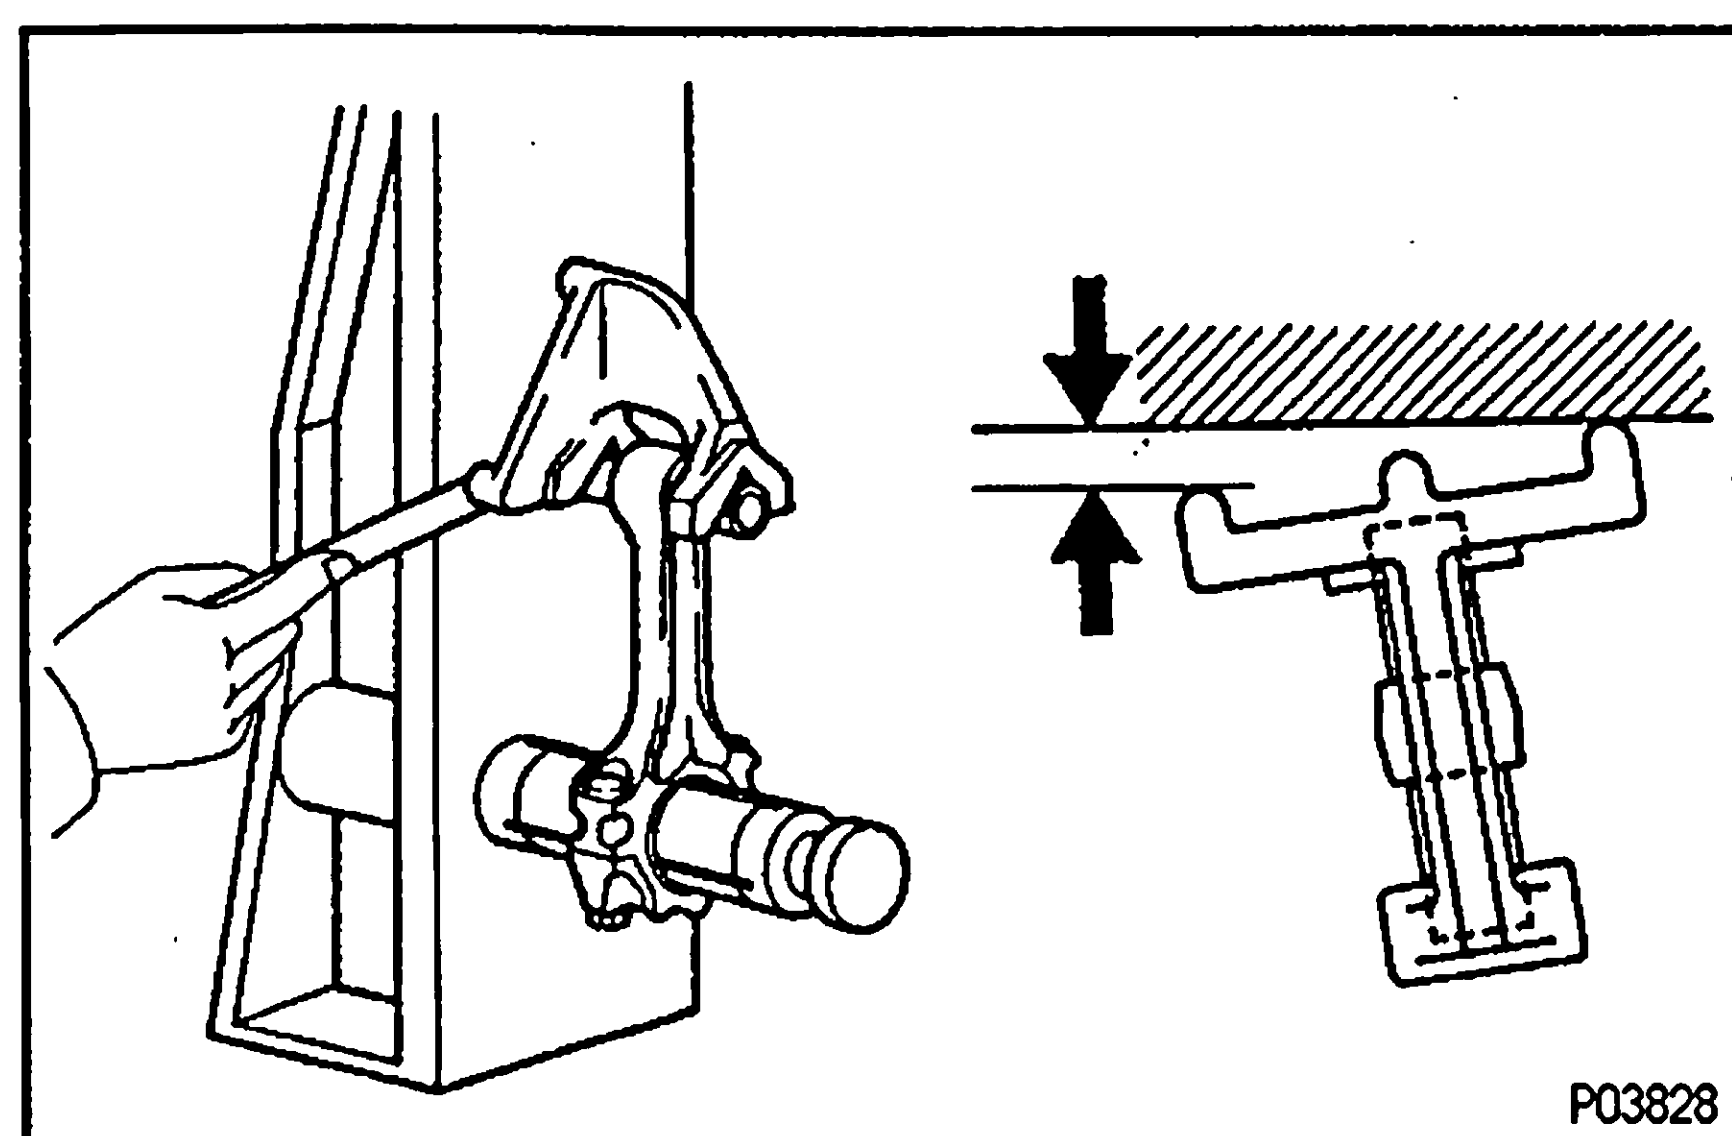


- Check for twist

Maximum twist:

0.15 mm (0.0059 in.) per 100 mm (3.94 in.)


If twist is greater than maximum, replace the connecting rod assembly.

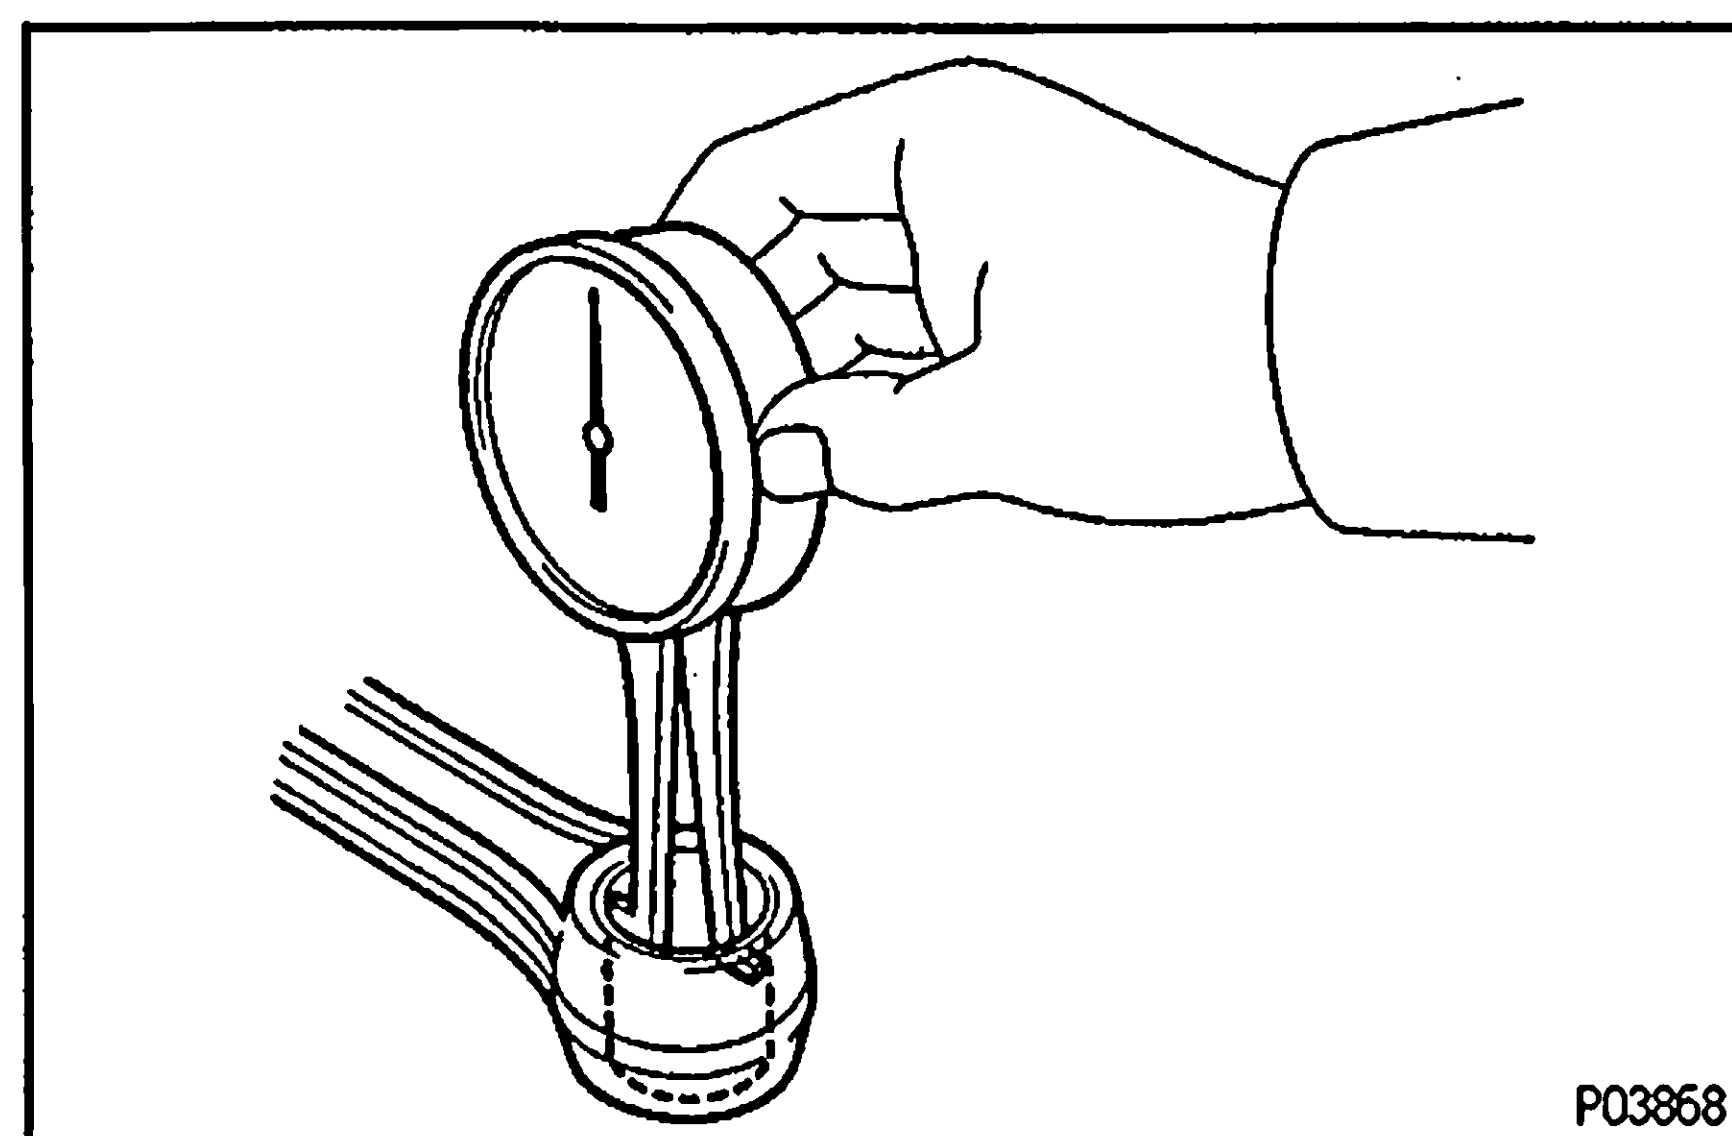**B. Inspect piston pin oil clearance**

- (a) Using a caliper gauge, measure the inside diameter of the connecting rod bushing.

Bushing inside diameter:

26.008 — 26.020 mm (1.0239 — 1.0244 in.)

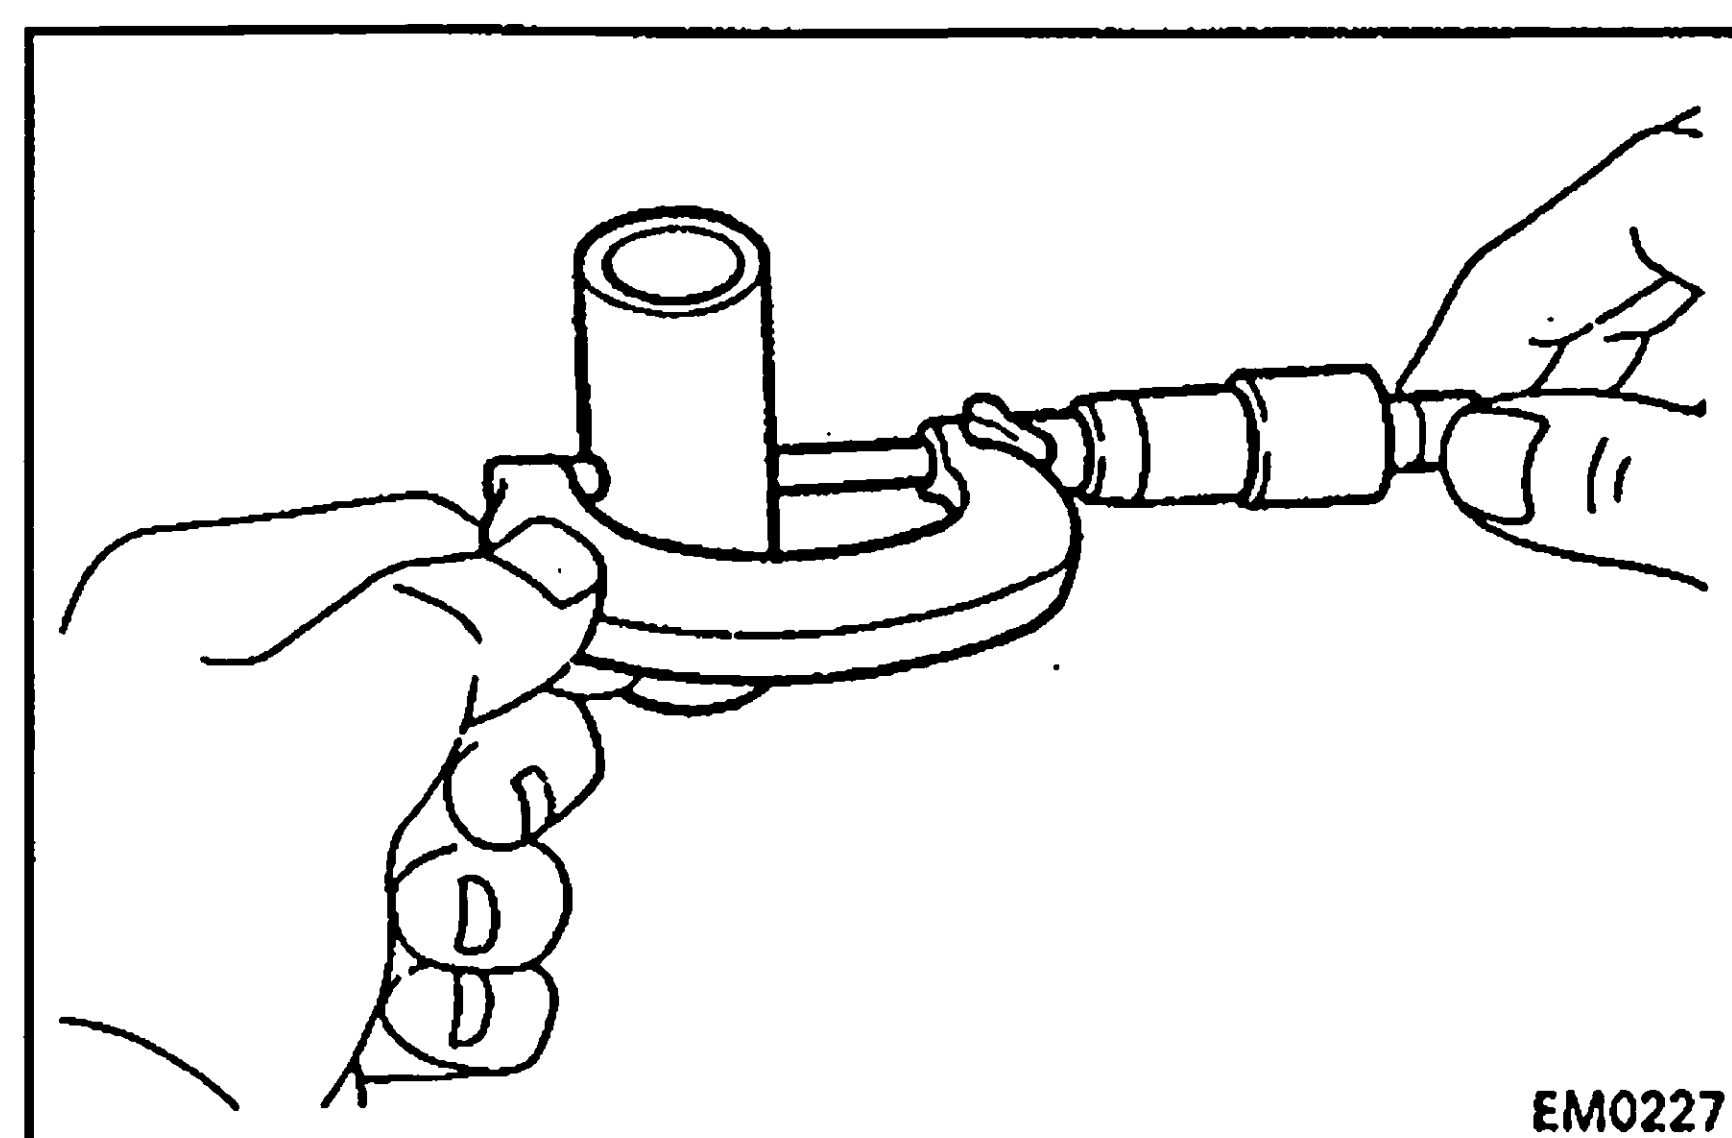

- (b) Using a micrometer, measure the piston pin diameter.

Piston pin diameter:

26.000 — 26.012 mm (1.0236 — 1.0241 in.)

- (c) Subtract the piston pin diameter measurement from the bushing inside diameter measurement.

Standard oil clearance:

0.004 — 0.012 mm (0.0002 — 0.0005 in.)

Maximum oil clearance:

0.05 mm (0.0020 in.)


If the oil clearance is greater than maximum, replace the bushing. If necessary, replace the piston and piston pin as a set.

EG


C. If necessary, replace connecting rod bushing

- (a) Using SST and a press, press out the bushing.

SST 09608—30012, (09608—04020), 09631—20031

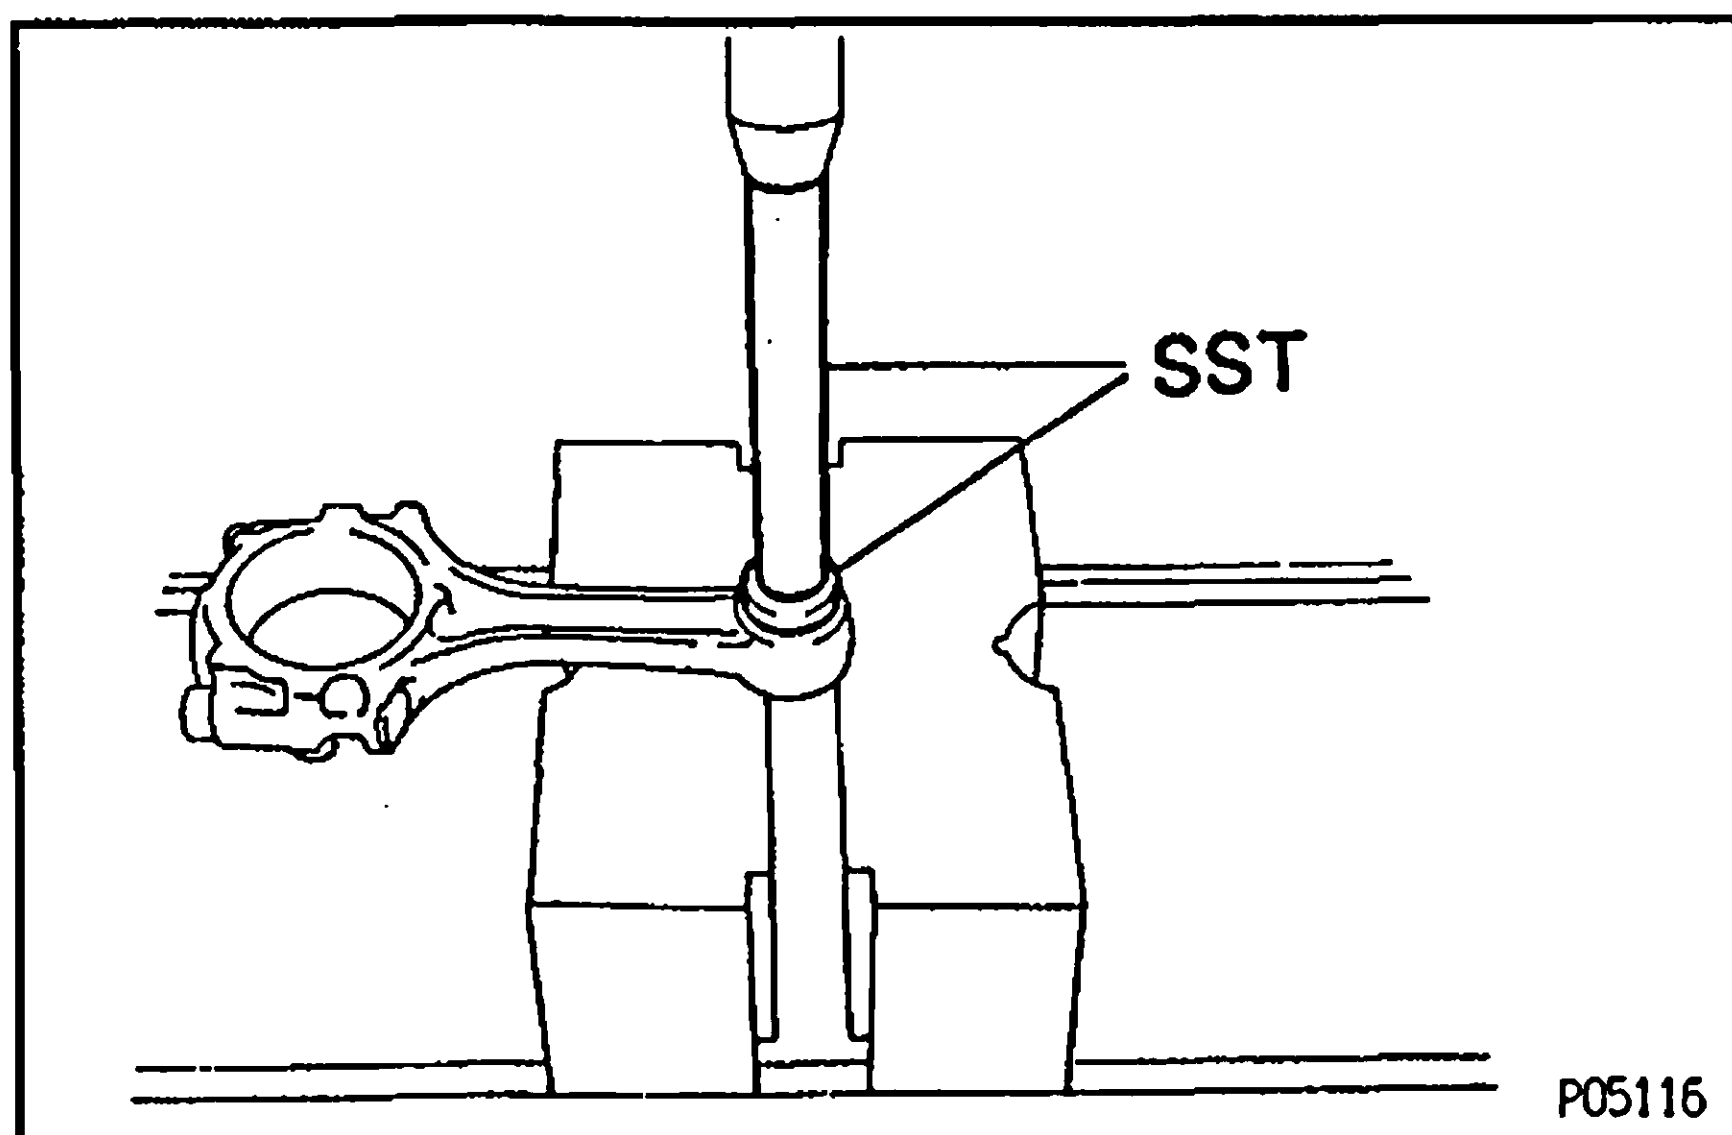


- (b) Align the oil holes of a new bushing and the connecting rod.

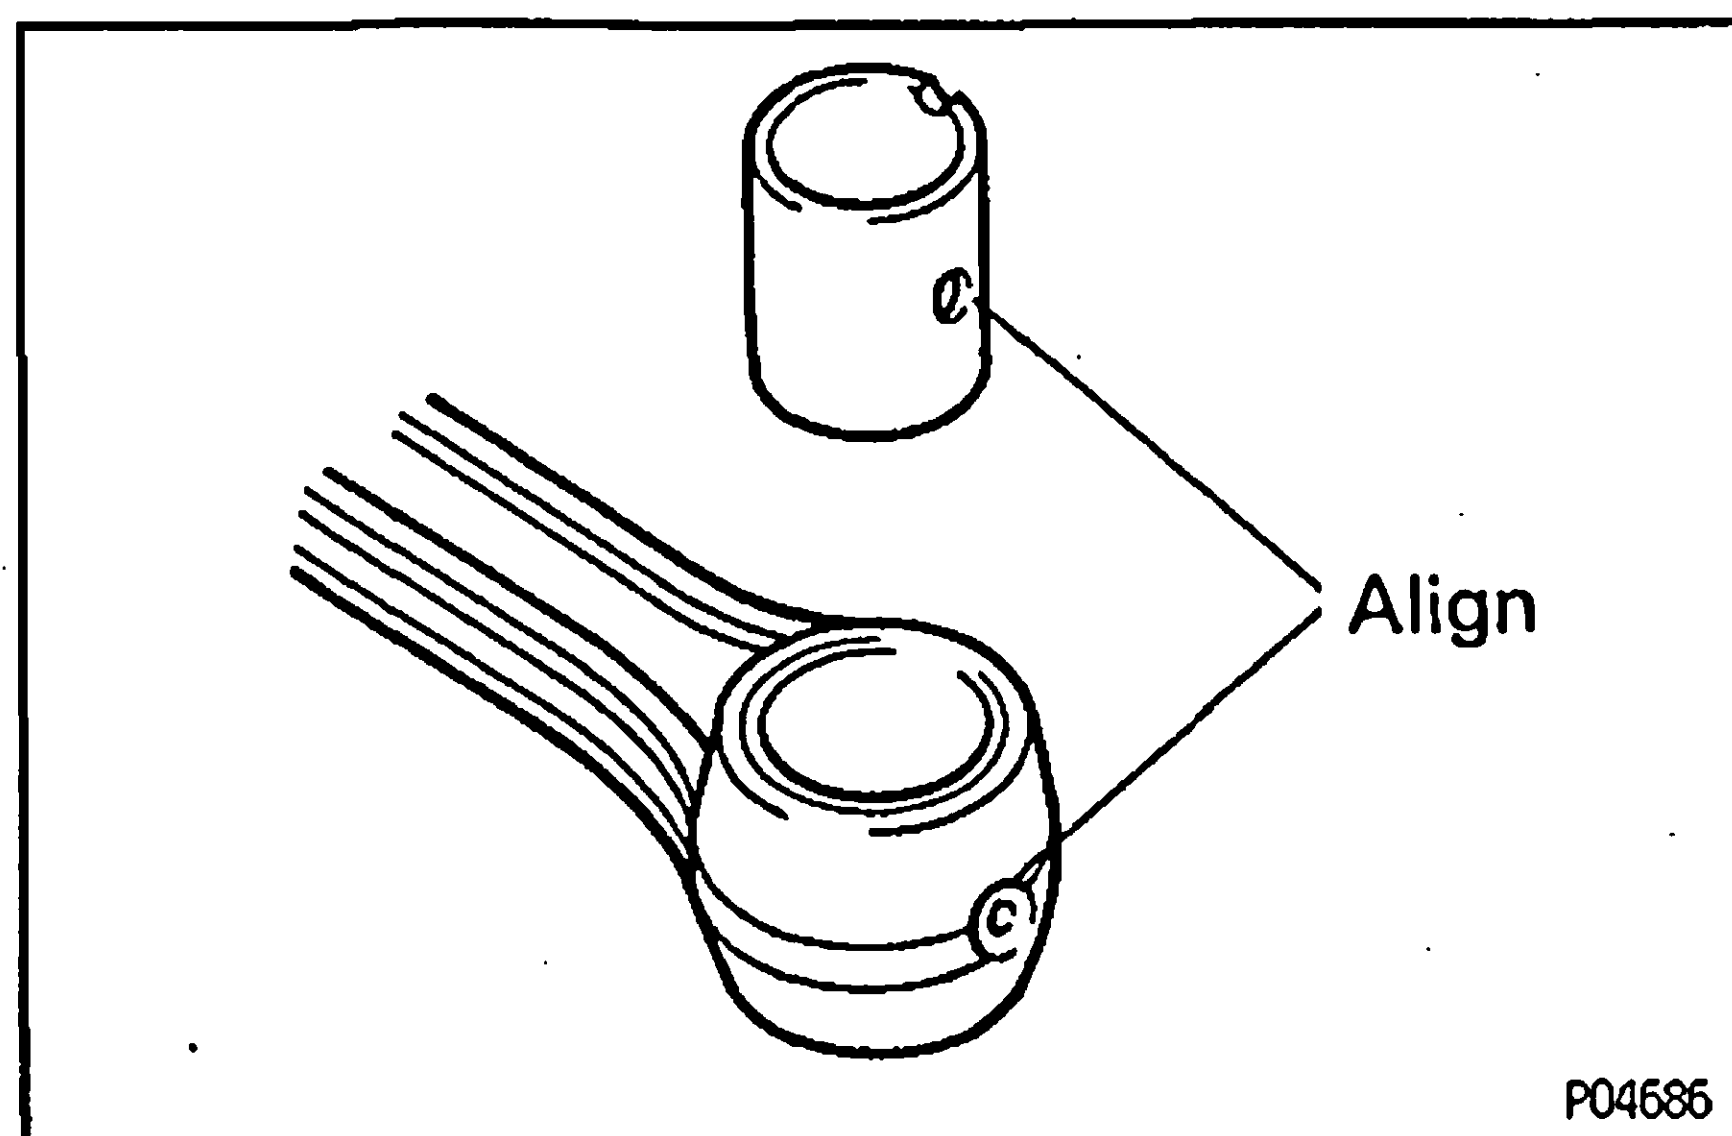


- (c) Using SST and a press, press in the bushing.


SST 09608—30012, (09608—04020), 09631—20031

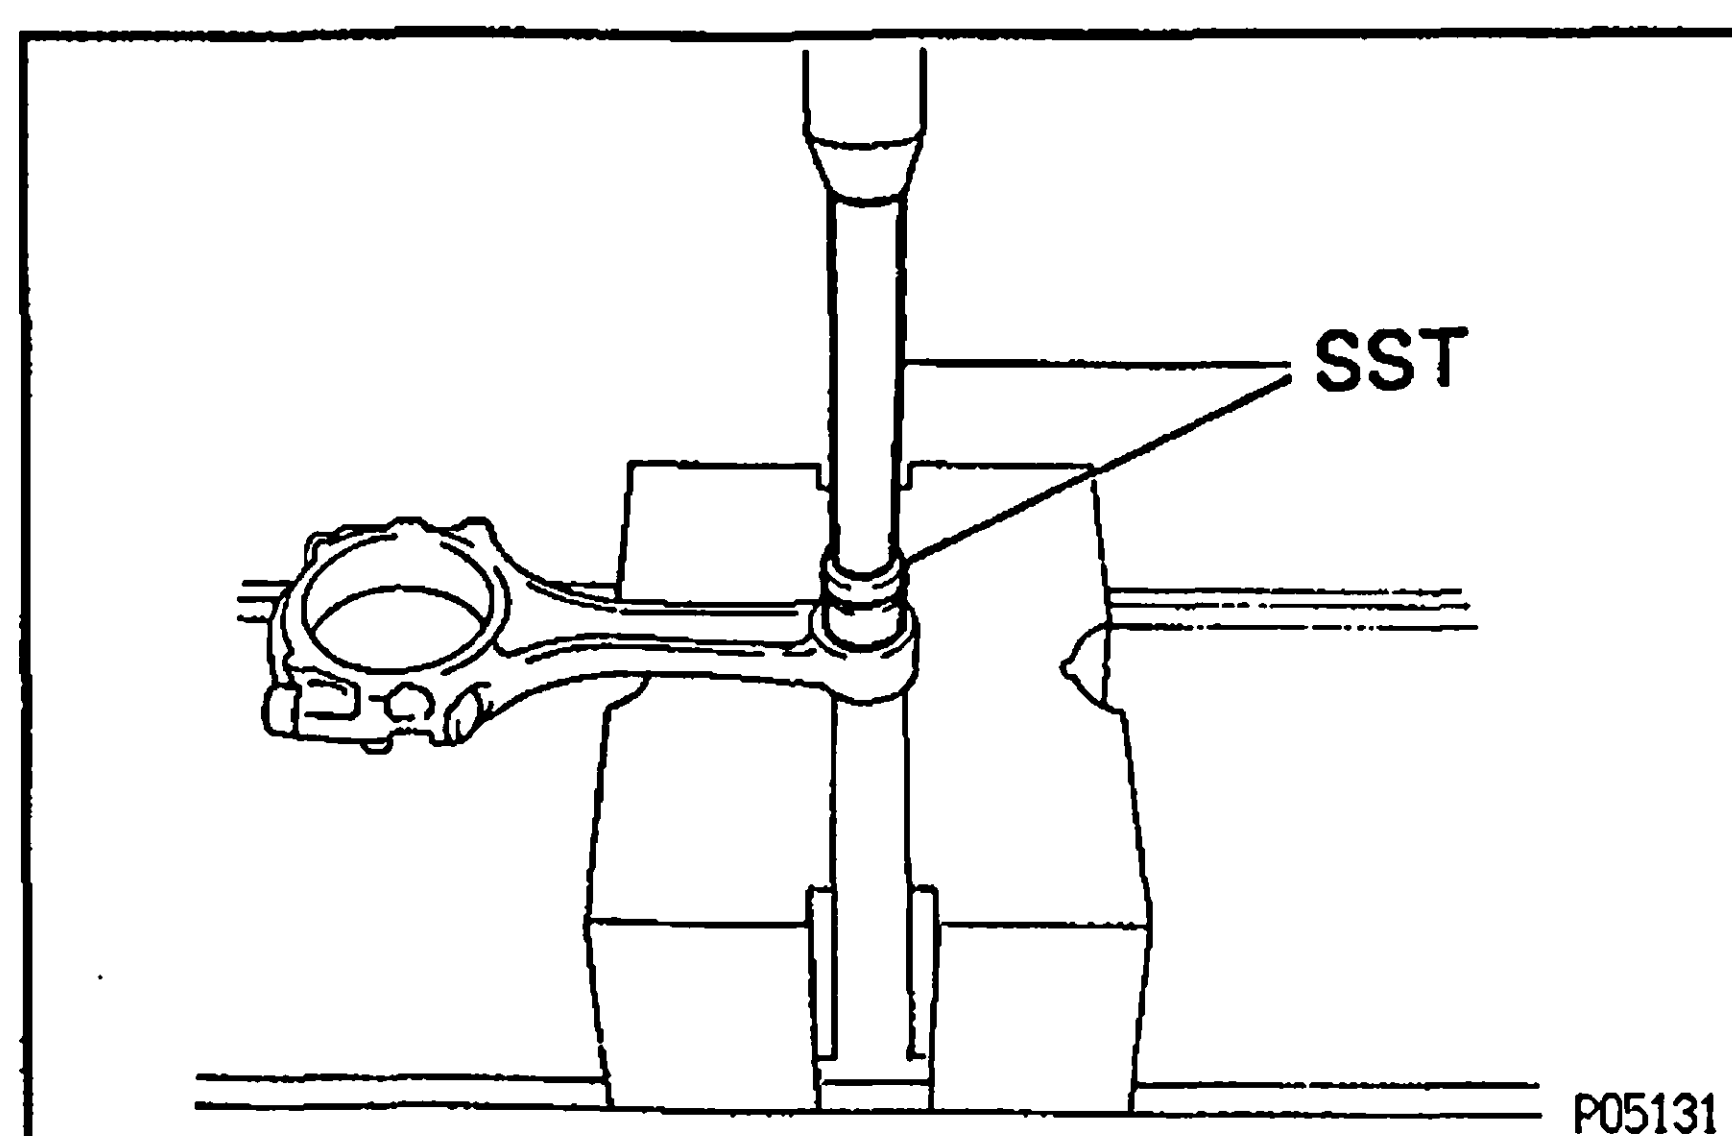


- (d) Using a pin hole grinder, hone the bushing to obtain the standard specified clearance (see step B above) between the bushing and piston pin.

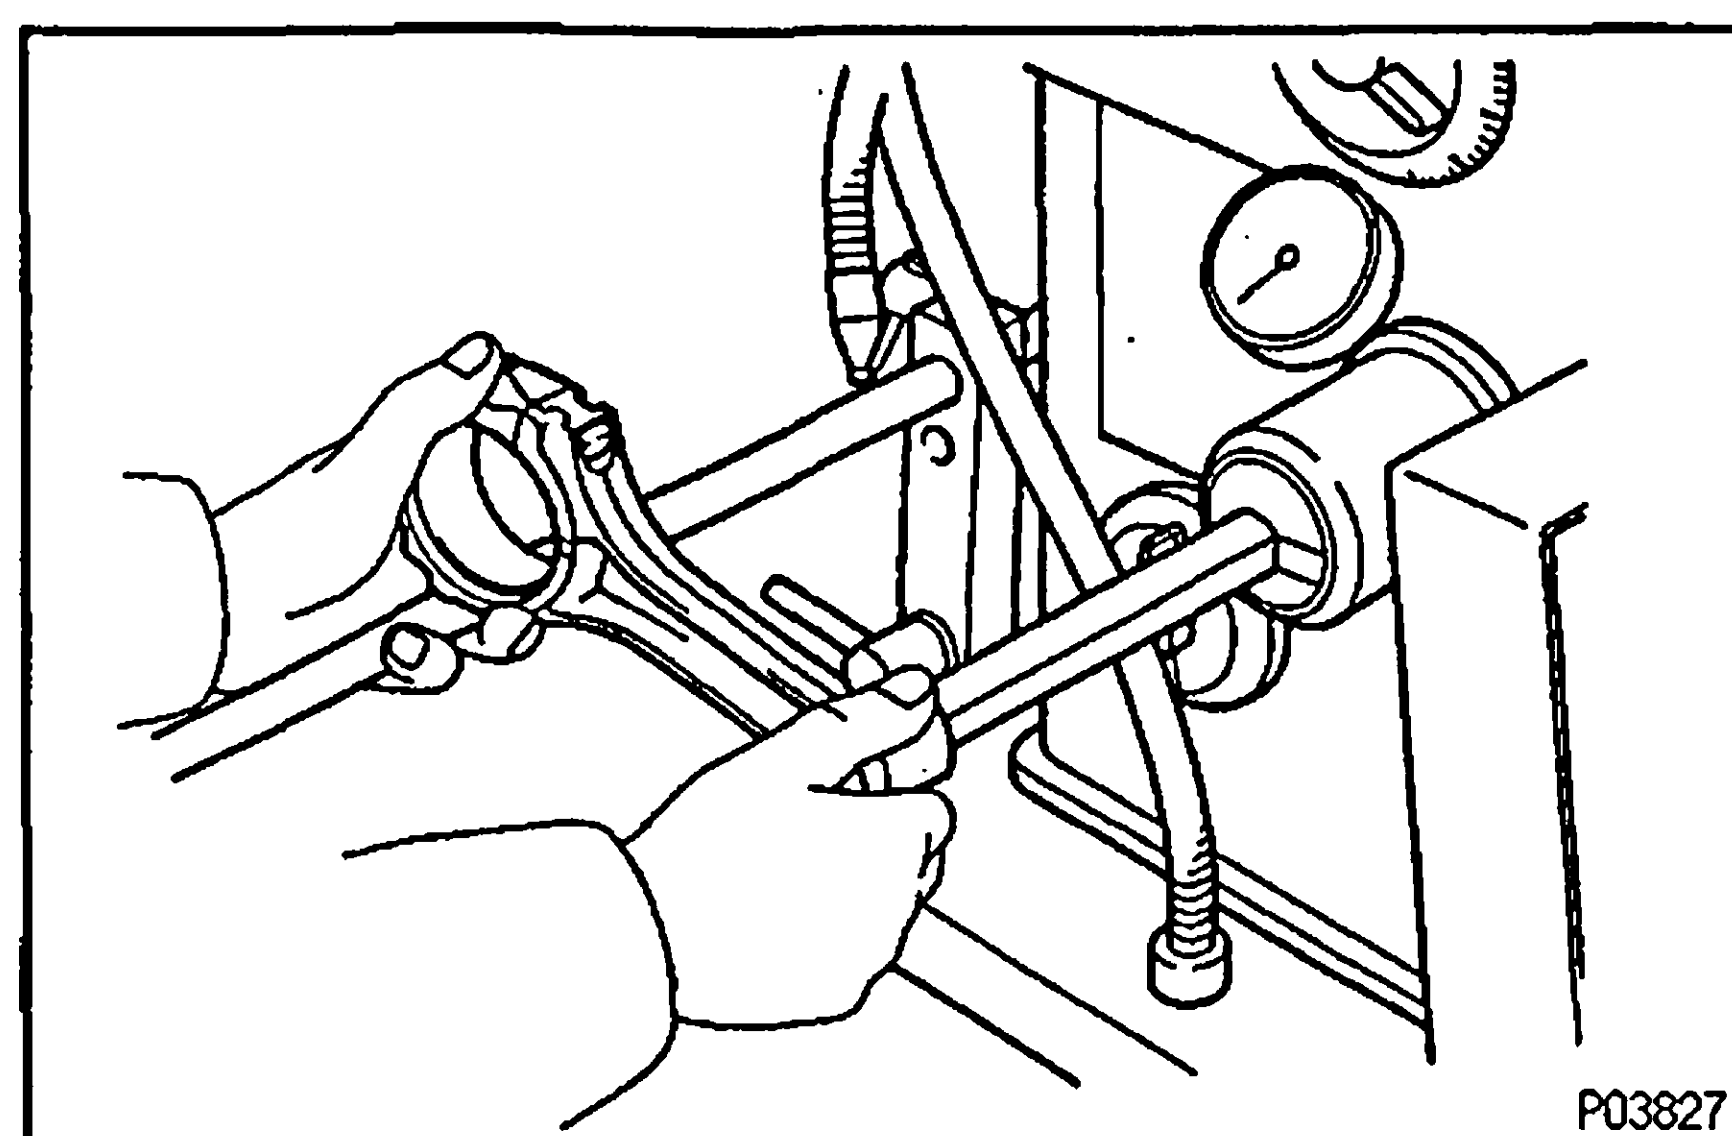

EG

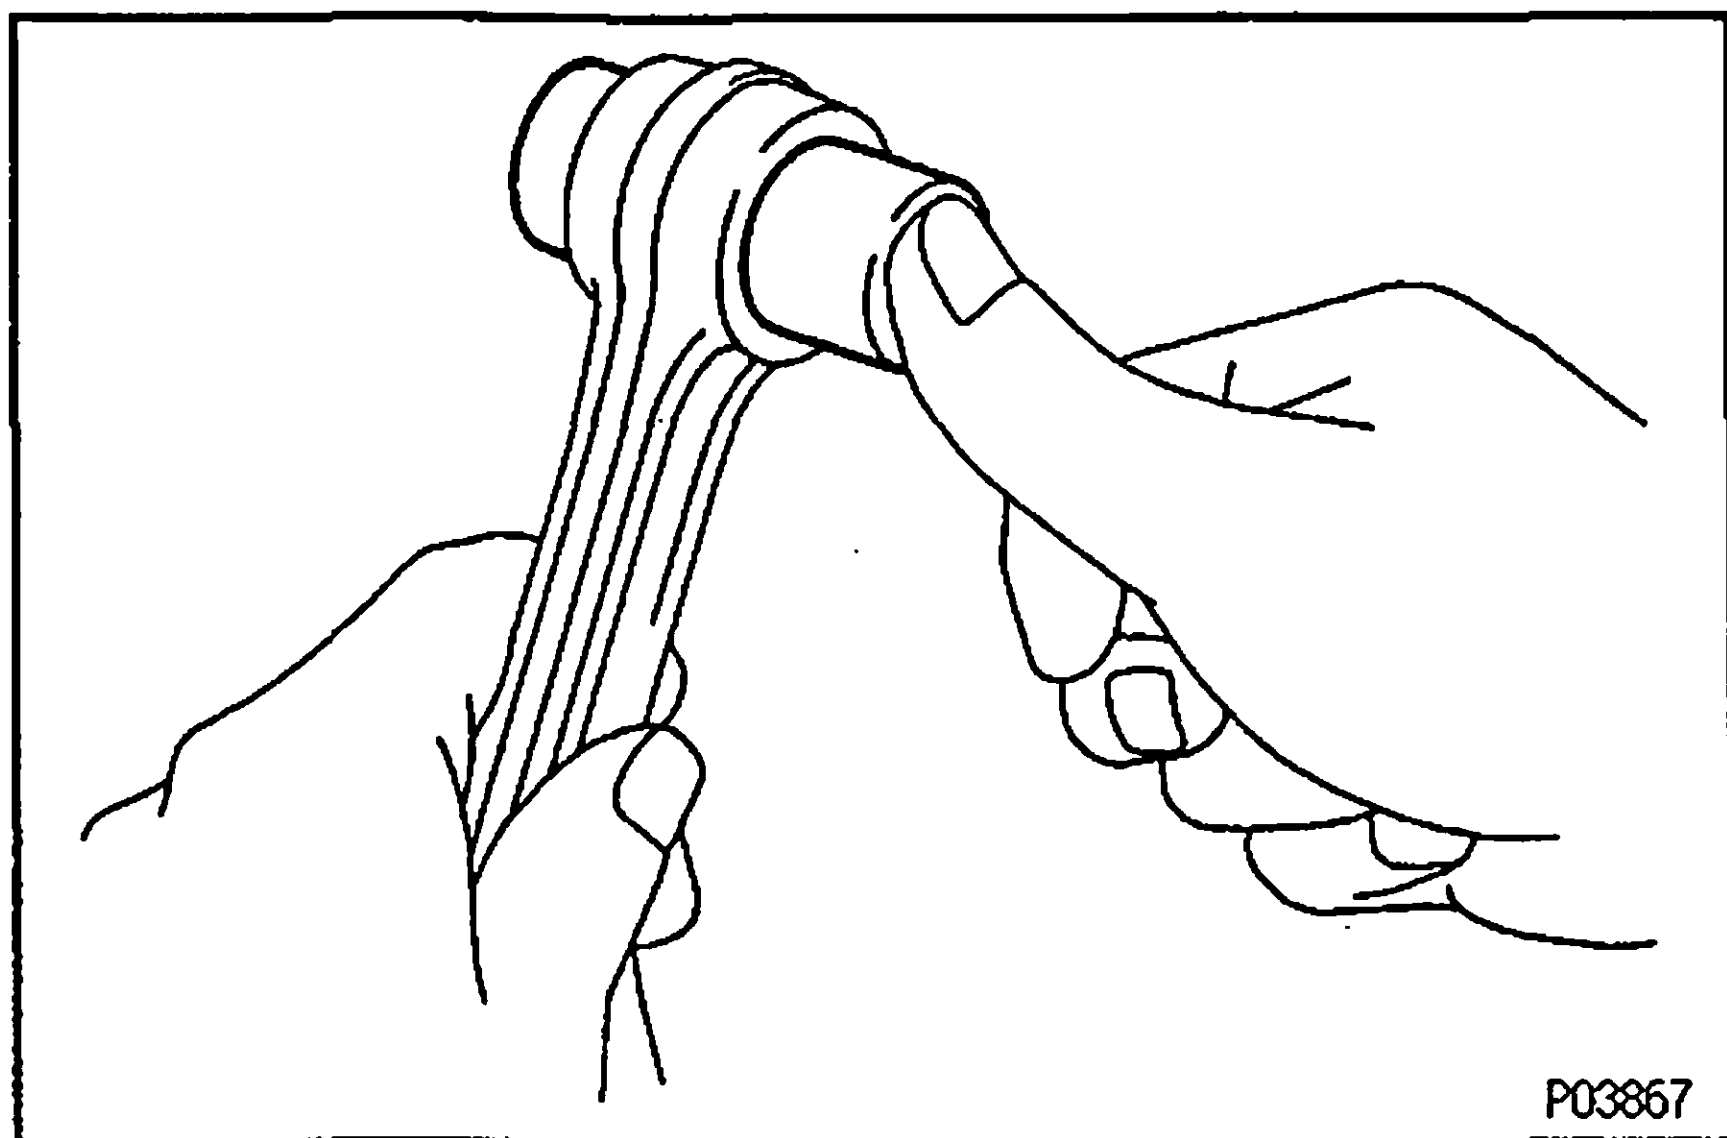


- (e) Check the piston pin fit at normal room temperature. Coat the piston pin with engine oil, and push it into the connecting rod with your thumb.

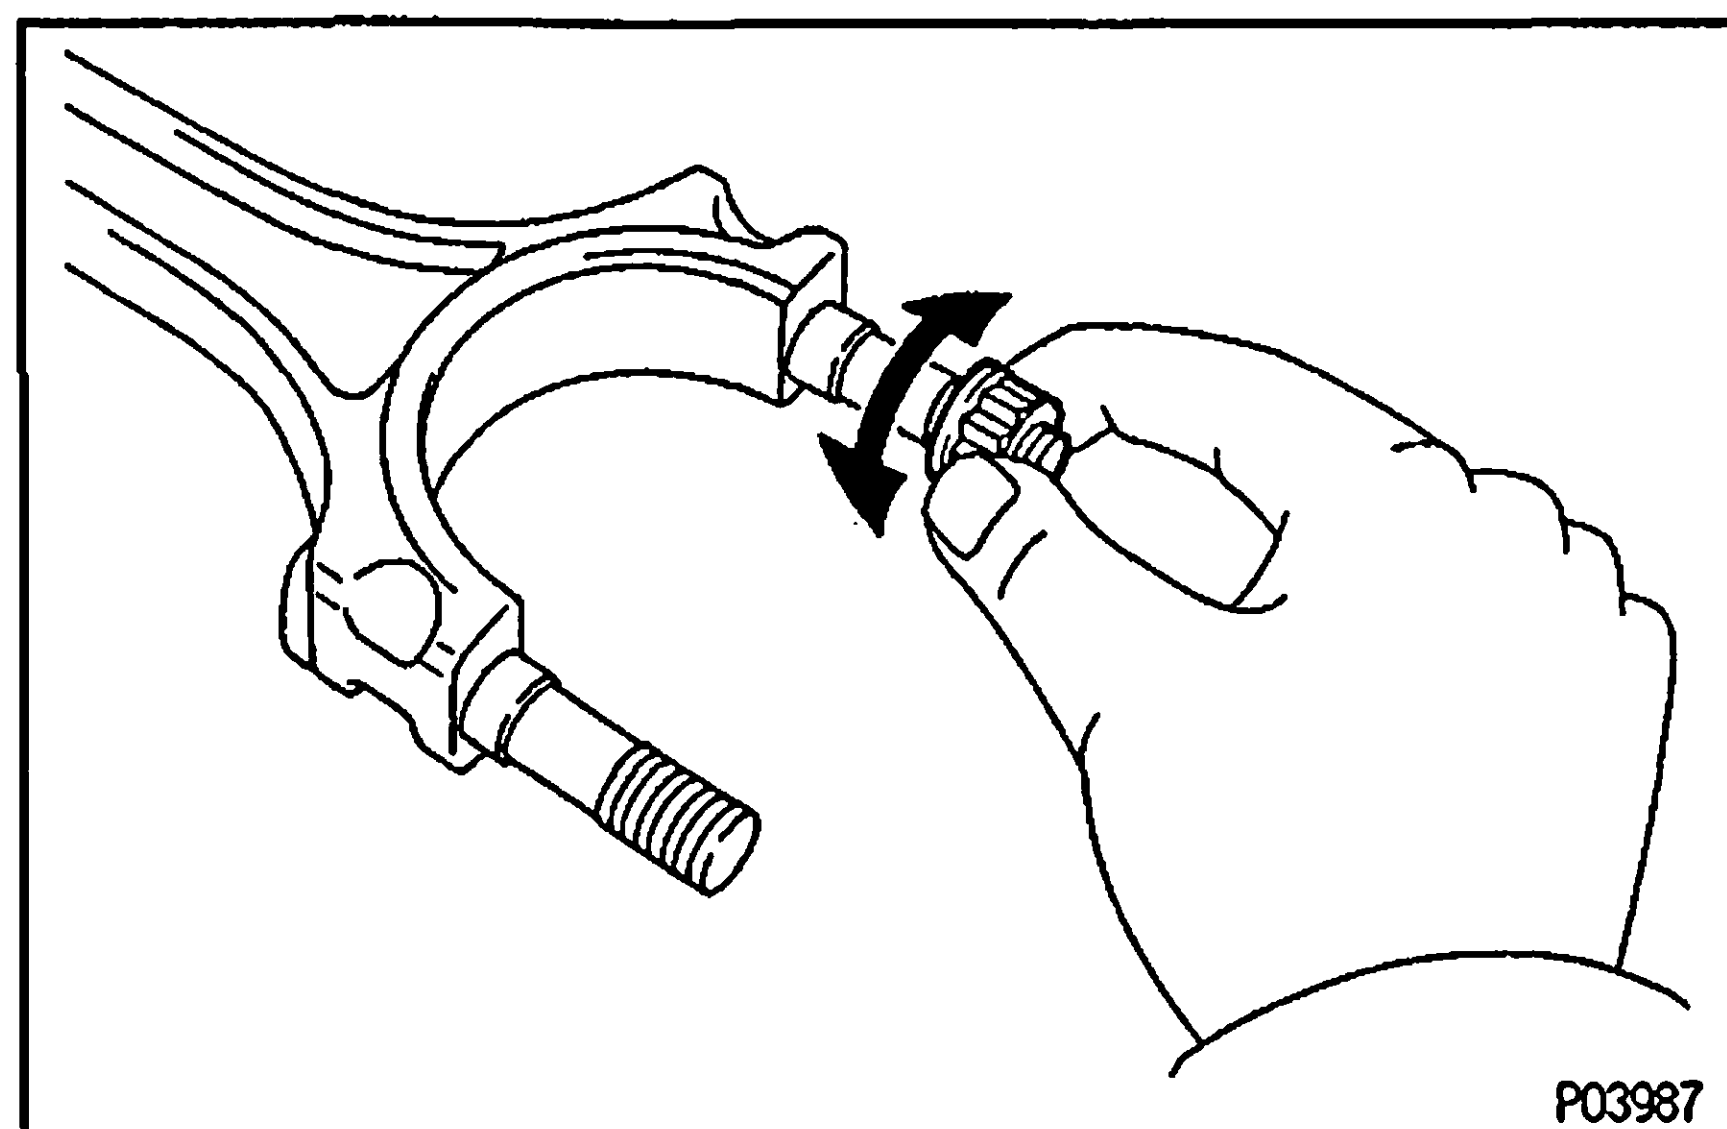

D. Inspect connecting rod bolts

- (a) Install the cap nut to the connecting rod bolt. Check that the cap nut can be turned easily by hand to the end of the thread.

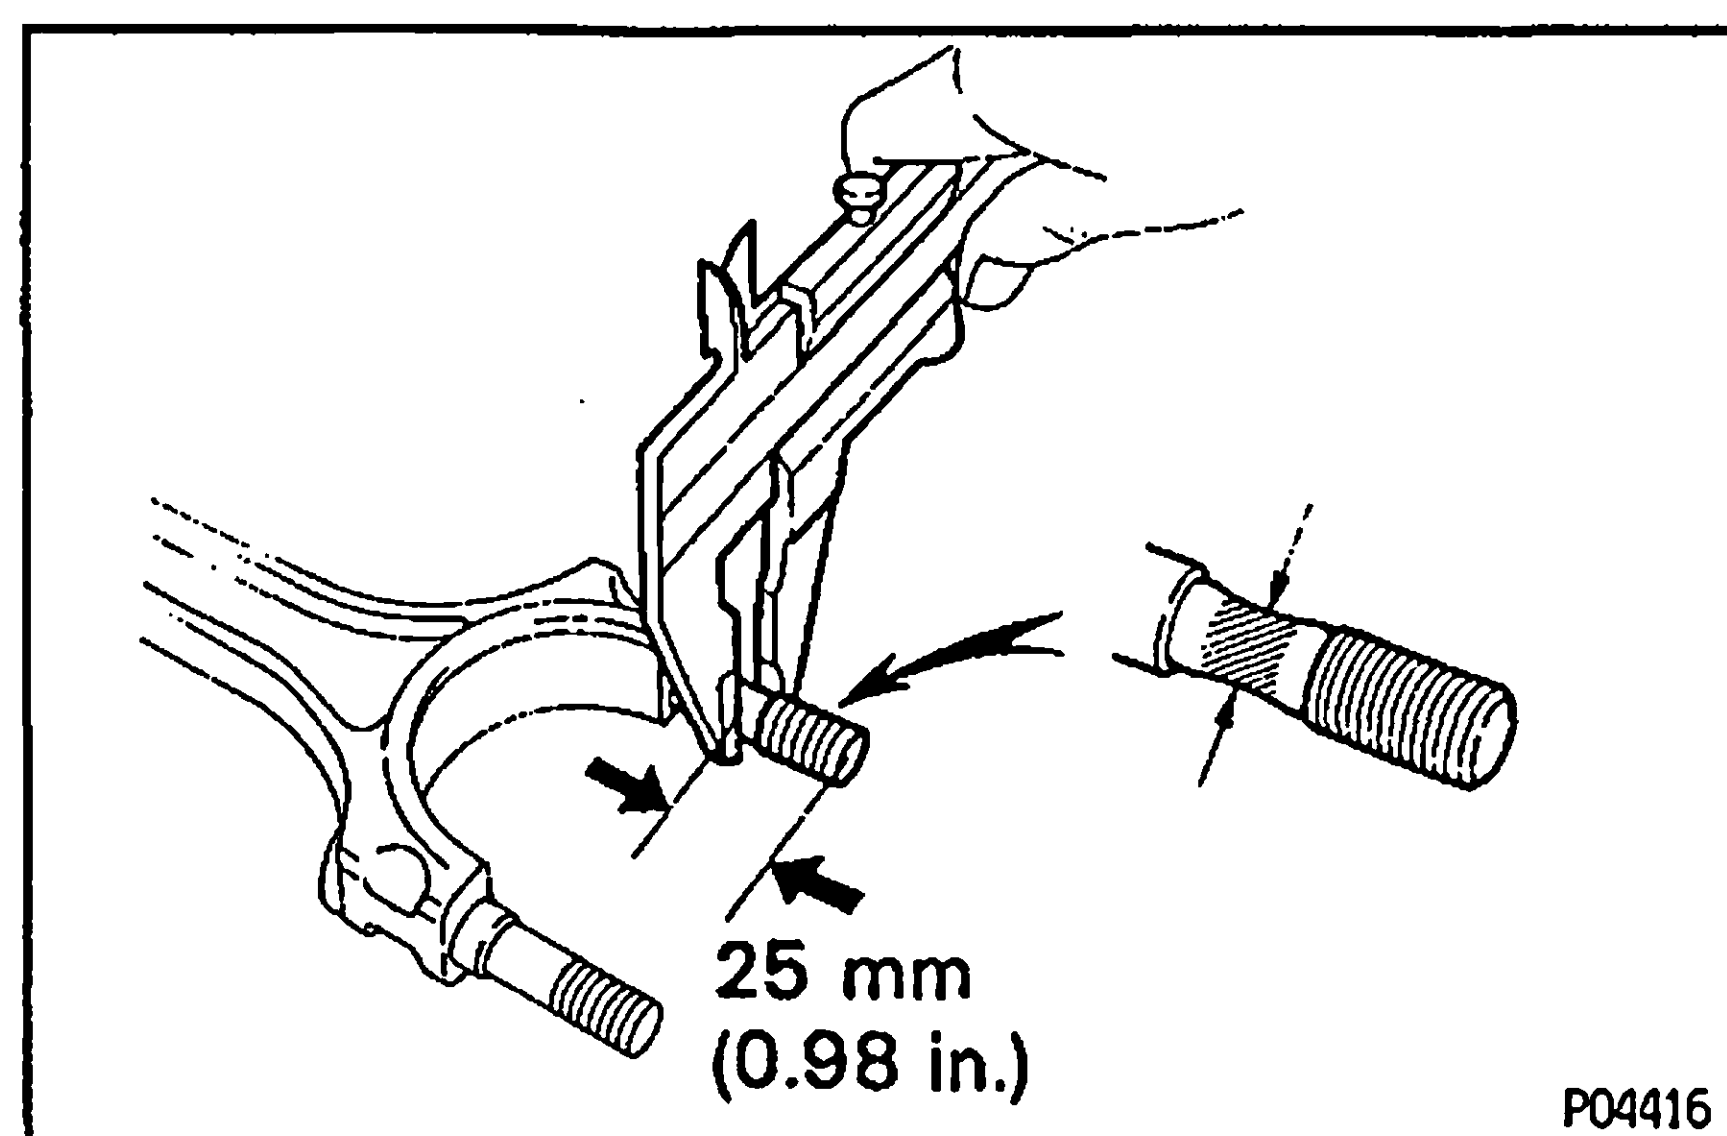

- (b) If the cap nut cannot be turned easily, measure the outside diameter of the connecting rod bolt with vernier calipers.

Standard outside diameter:

8.40 – 8.60 mm (0.3307 – 0.3386 in.)

Minimum outside diameter:

8.00 mm (0.3150 in.)

HINT: If the location of this area cannot be judged by visual inspection, measure the outer diameter at the location shown in the illustration.

If the outside diameter is less than minimum, replace the connecting rod bolt and nut as a set.

CYLINDER BORING

HINT:

- Bore all the six cylinders for the oversized piston outside diameter.
- Replace all the piston rings with ones to match the oversized pistons.

EG

1. SELECT OVERSIZED PISTONS


Oversized piston diameter:

O/S 0.50

100.450 — 100.480 mm (3.9547 — 3.9559 in.)

O/S 1.00

100.950 — 100.980 mm (3.9744 — 3.9756 in.)

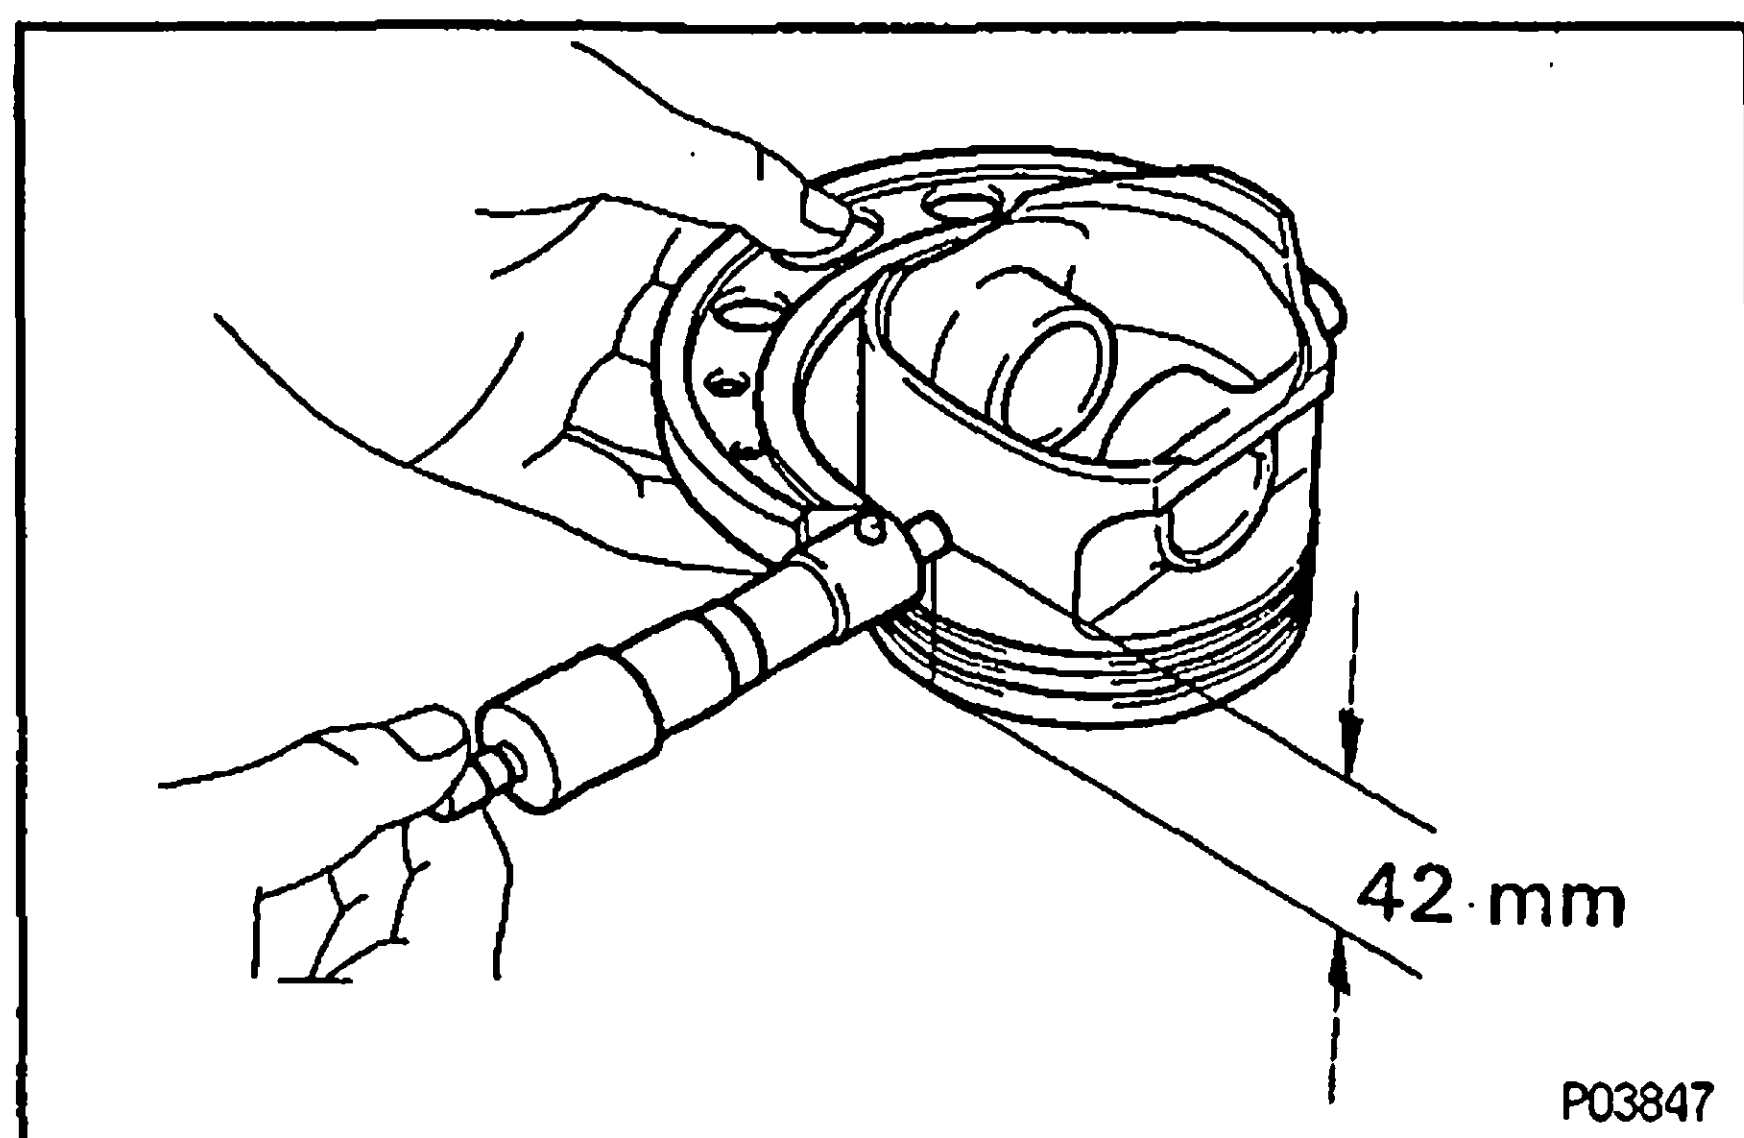

2. CALCULATE AMOUNT TO BORE CYLINDERS

- Using a micrometer, measure the piston diameter at right angles to the piston pin center line, 42 mm (1.65 in.) from the piston head.
- Calculate the amount of each cylinder is to be rebored as follows:

$$\text{Size to be rebored} = P + C - H$$

P = Piston diameter

C = Piston clearance

0.040 — 0.060 mm (0.0016 — 0.0024 in.)

H = Allowance for honing


0.20 mm (0.0008 in.) or less

3. BORE AND HONE CYLINDER TO CALCULATED DIMENSIONS

Maximum honing:

0.02 mm (0.0008 in.)

NOTICE: Excess honing will destroy the finished roundness.

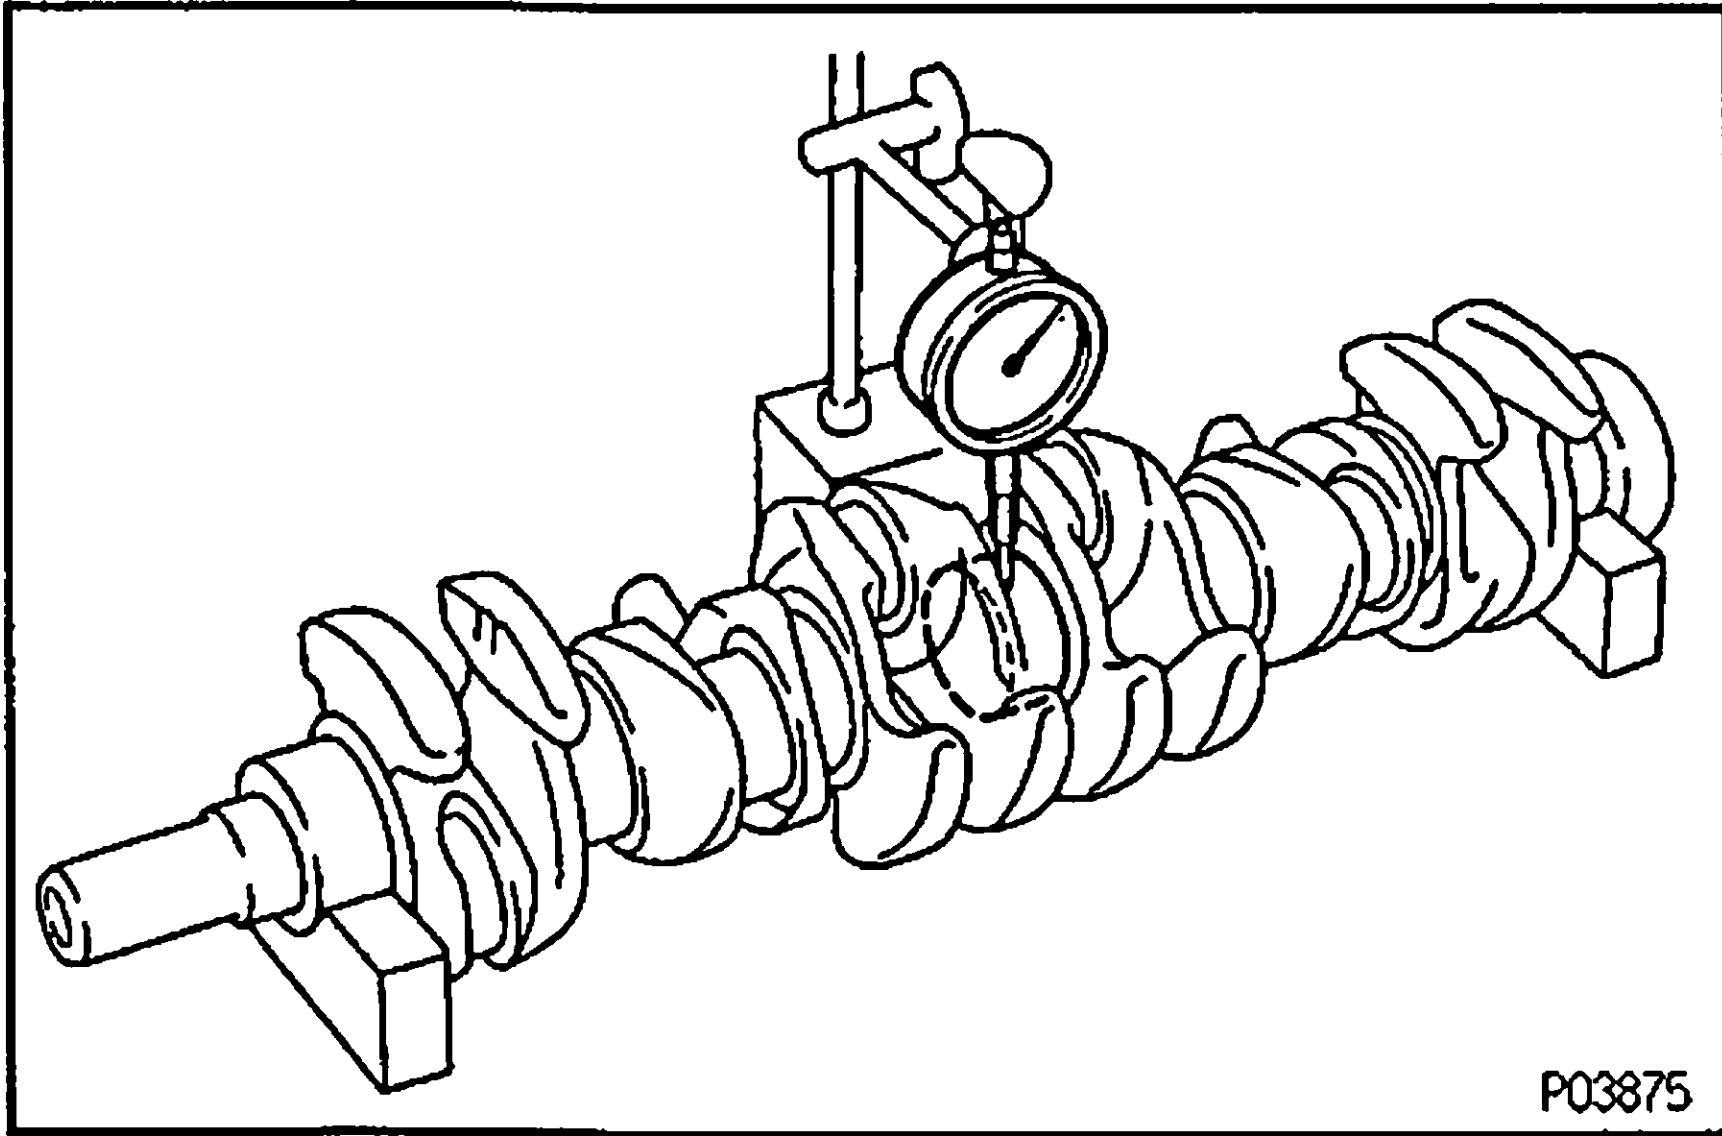

CRANKSHAFT INSPECTION AND REPAIR

1. INSPECT CRANKSHAFT FOR RUNOUT

- (a) Place the crankshaft on V—blocks.
- (b) Using a dial indicator, measure the circle runout at the center journal.

Maximum circle runout:

0.06 mm (0.0024 in.)

If the circle runout is greater than maximum, replace the crankshaft.

2. INSPECT MAIN JOURNALS AND CRANK PINS

- (a) Using a micrometer, measure the diameter of each main journal and crank pin.

Main journal diameter:

STD size

68.982 — 69.000 mm (2.7158 — 2.7165 in.)

U/S 0.25

68.745 — 68.755 mm (2.7065 — 2.7069 in.)

Crank pin diameter:

STD size

56.982 — 57.000 mm (2.2434 — 2.2441 in.)

U/S 0.25

56.745 — 56.755 mm (2.2341 — 2.2344 in.)

If the diameter is not as specified, check the oil clearance (See pages EG—92 to 97). If necessary, grind or replace the crankshaft.

- (b) Check each main journal and crank pin for taper and out—of—round as shown.

Maximum taper and out—of—round:


0.02 mm (0.0008 in.)

If the taper and out—of—round is greater than maximum, replace the crankshaft.

3. IF NECESSARY, GRIND AND HONE MAIN JOURNALS AND/OR CRANK PINS

Grind and hone the main journals and/or crank pins to the finished undersized diameter (See procedure in step 2).


Install new main journal and/or crankshaft pin undersized bearings.

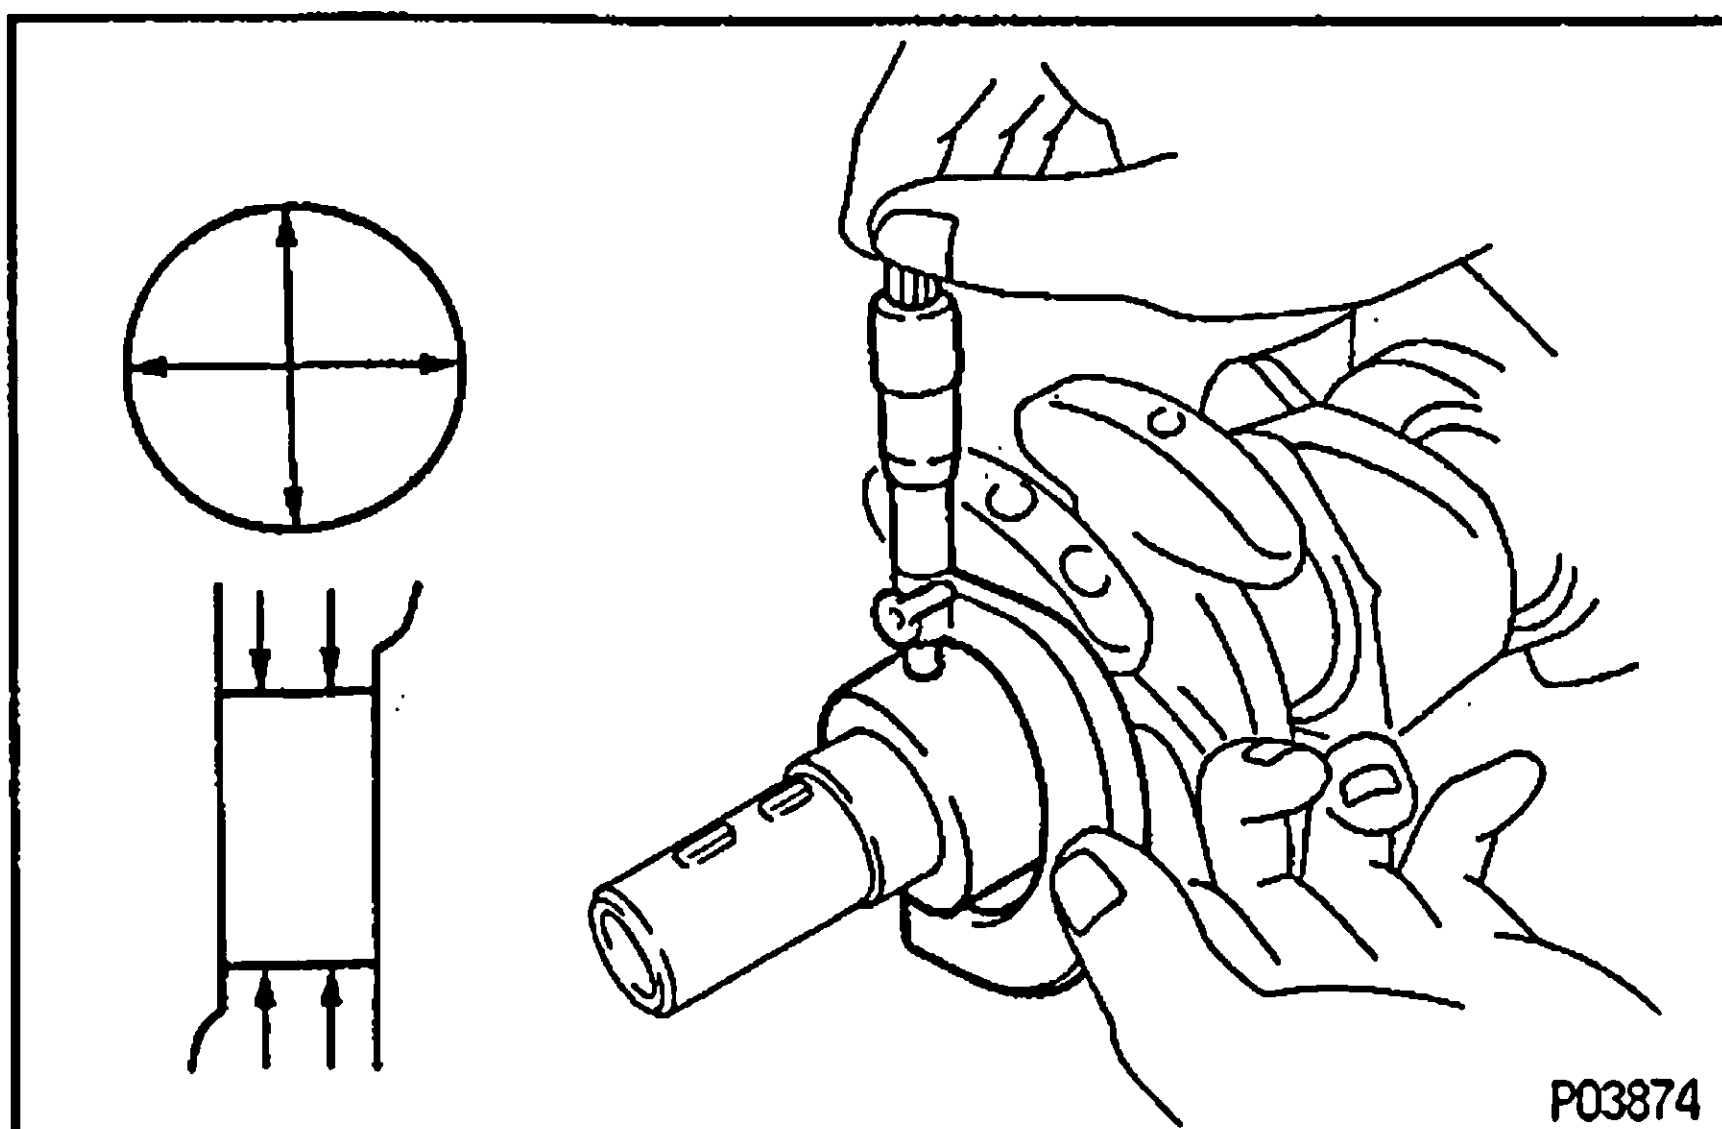

CRANKSHAFT OIL SEALS REPLACEMENT^{EGOC0-02}

HINT: There are two methods (A and B) to replace the oil seal which are as follows:


EG

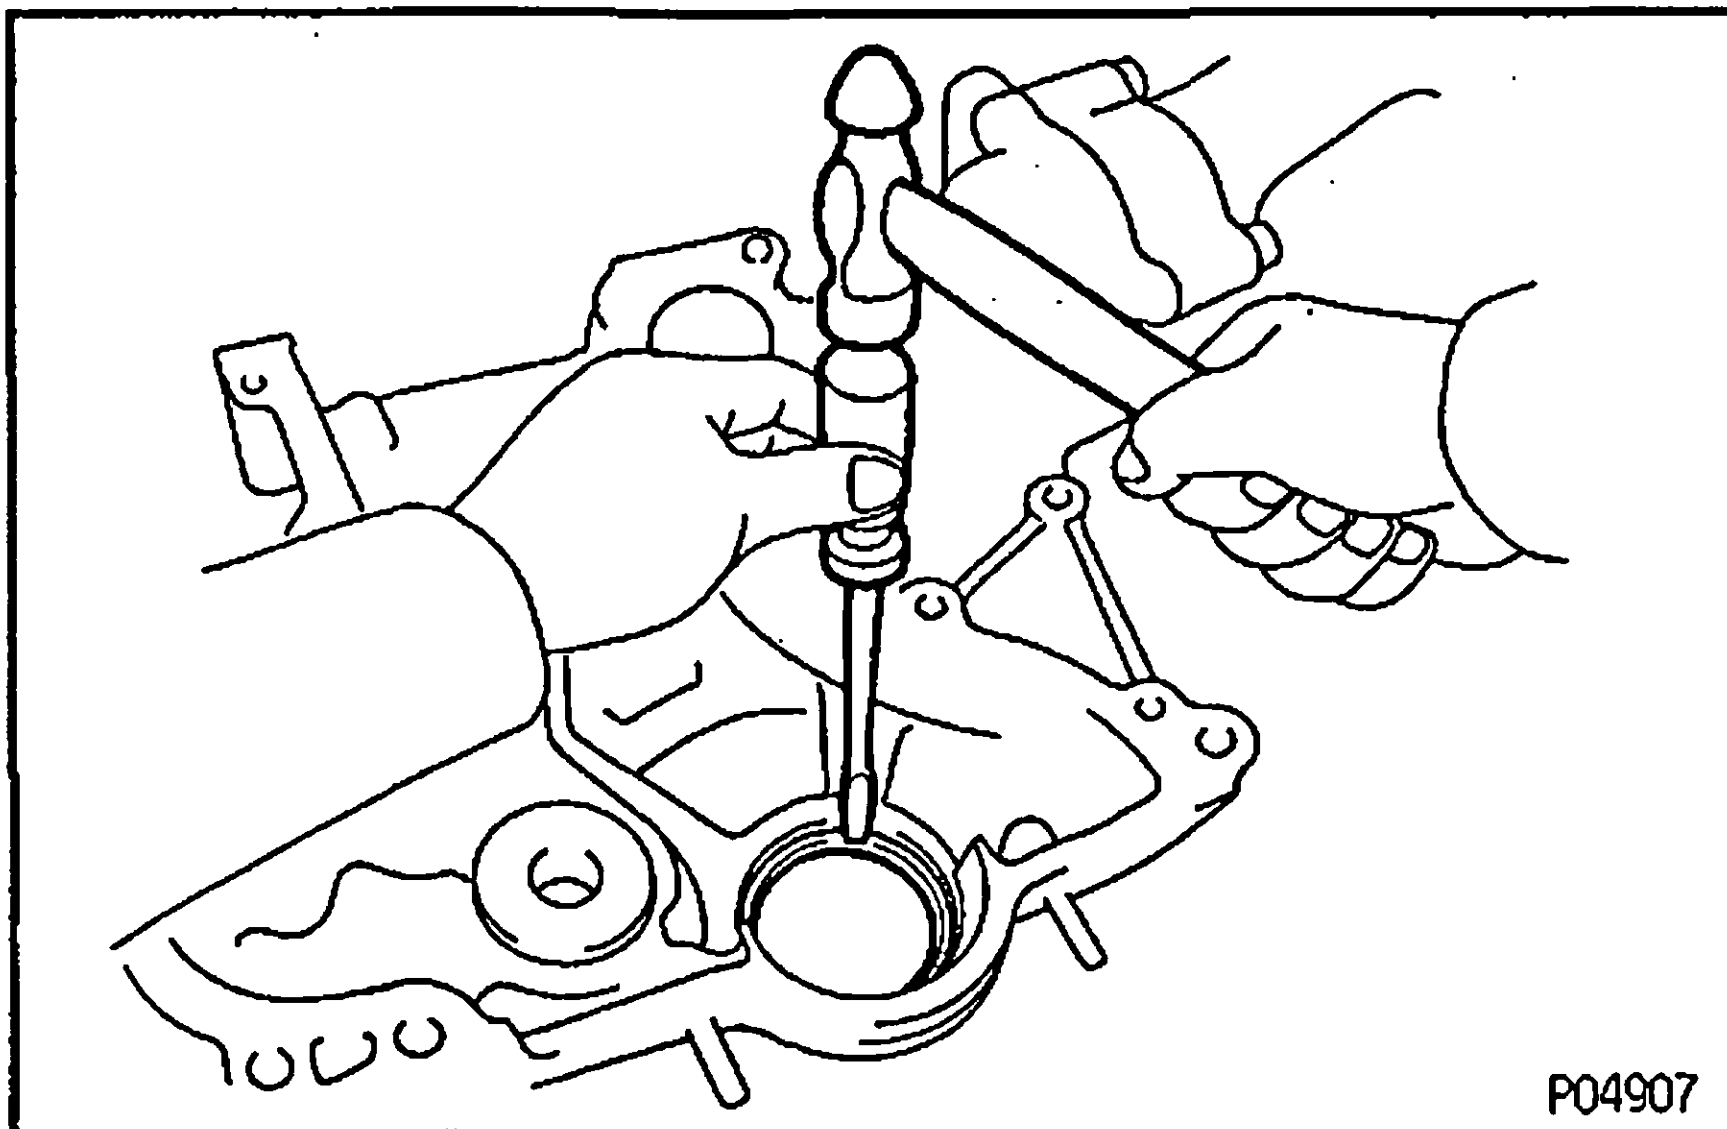

1. REPLACE CRANKSHAFT FRONT OIL SEAL

A. If timing chain cover is removed from cylinder block:


- (a) Using a screwdriver and hammer, tap out the oil seal.

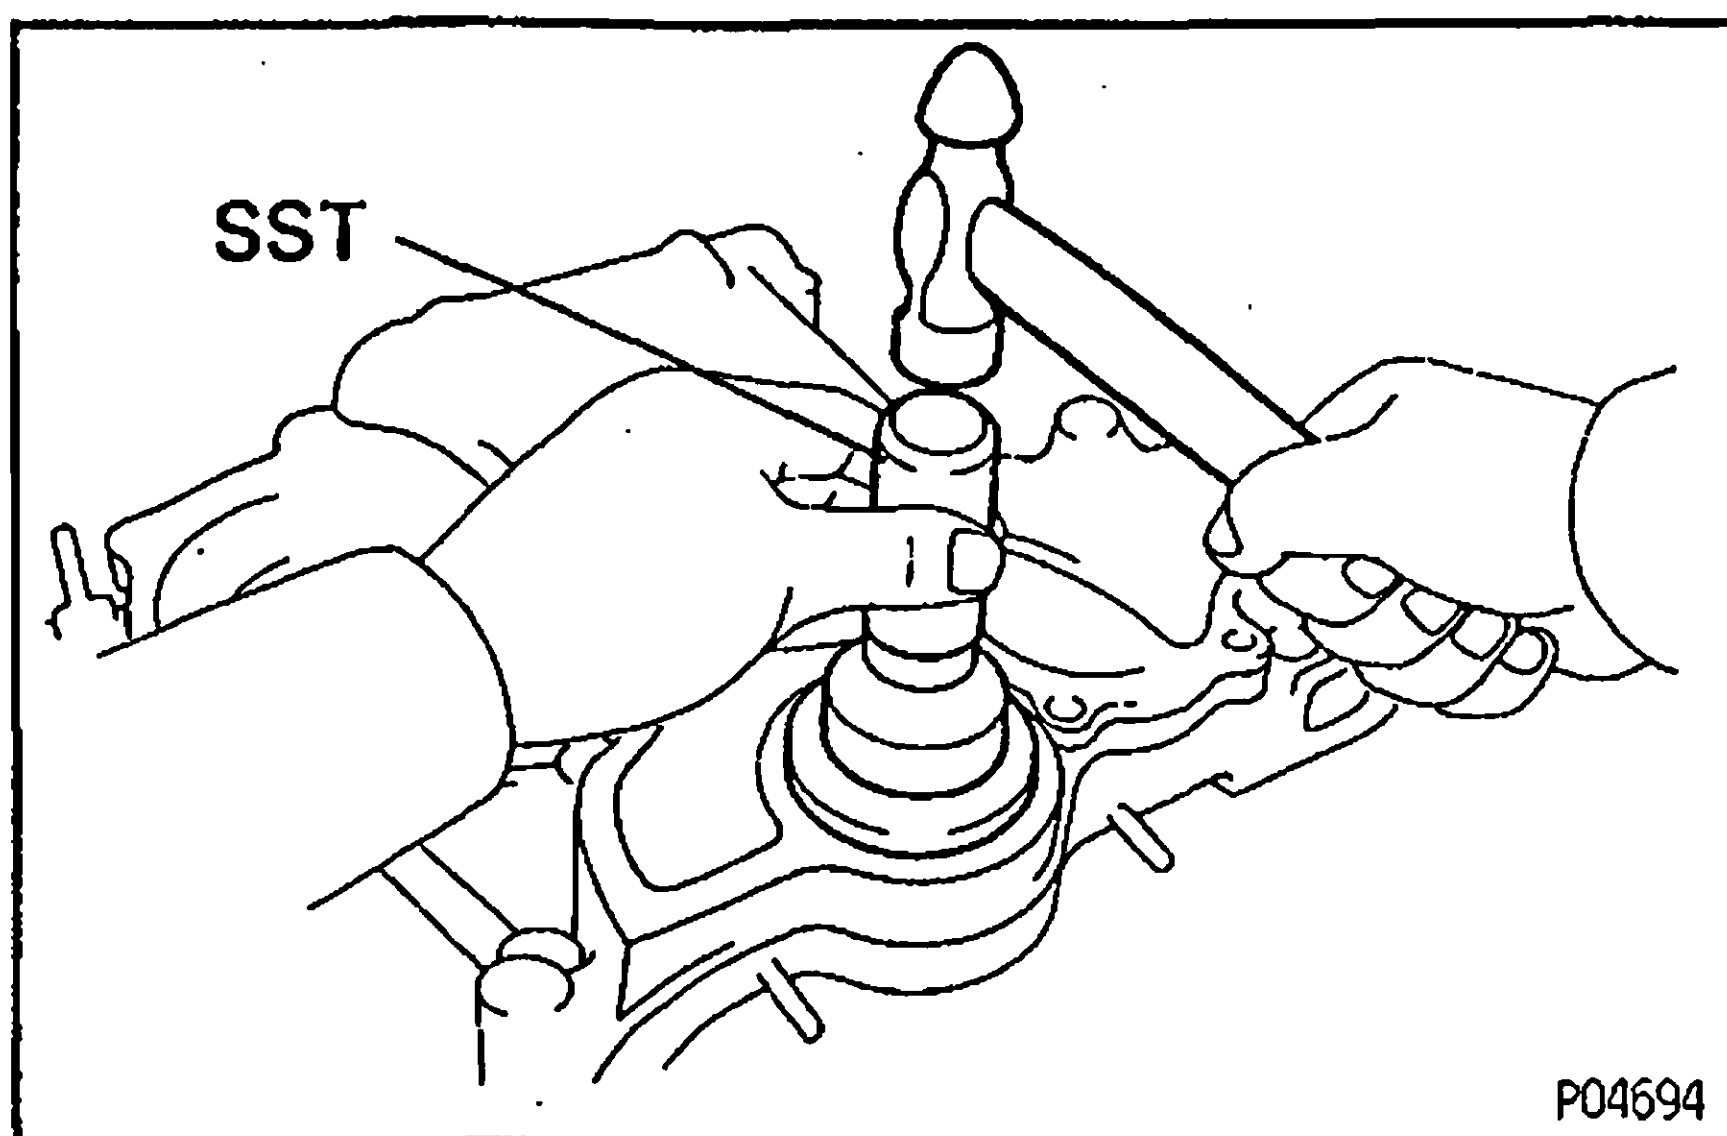

- (b) Using SST and a hammer, tap in a new oil seal until its surface is flush with the timing chain cover edge.

SST 09223-46011


- (c) Apply MP grease to the oil seal lip.

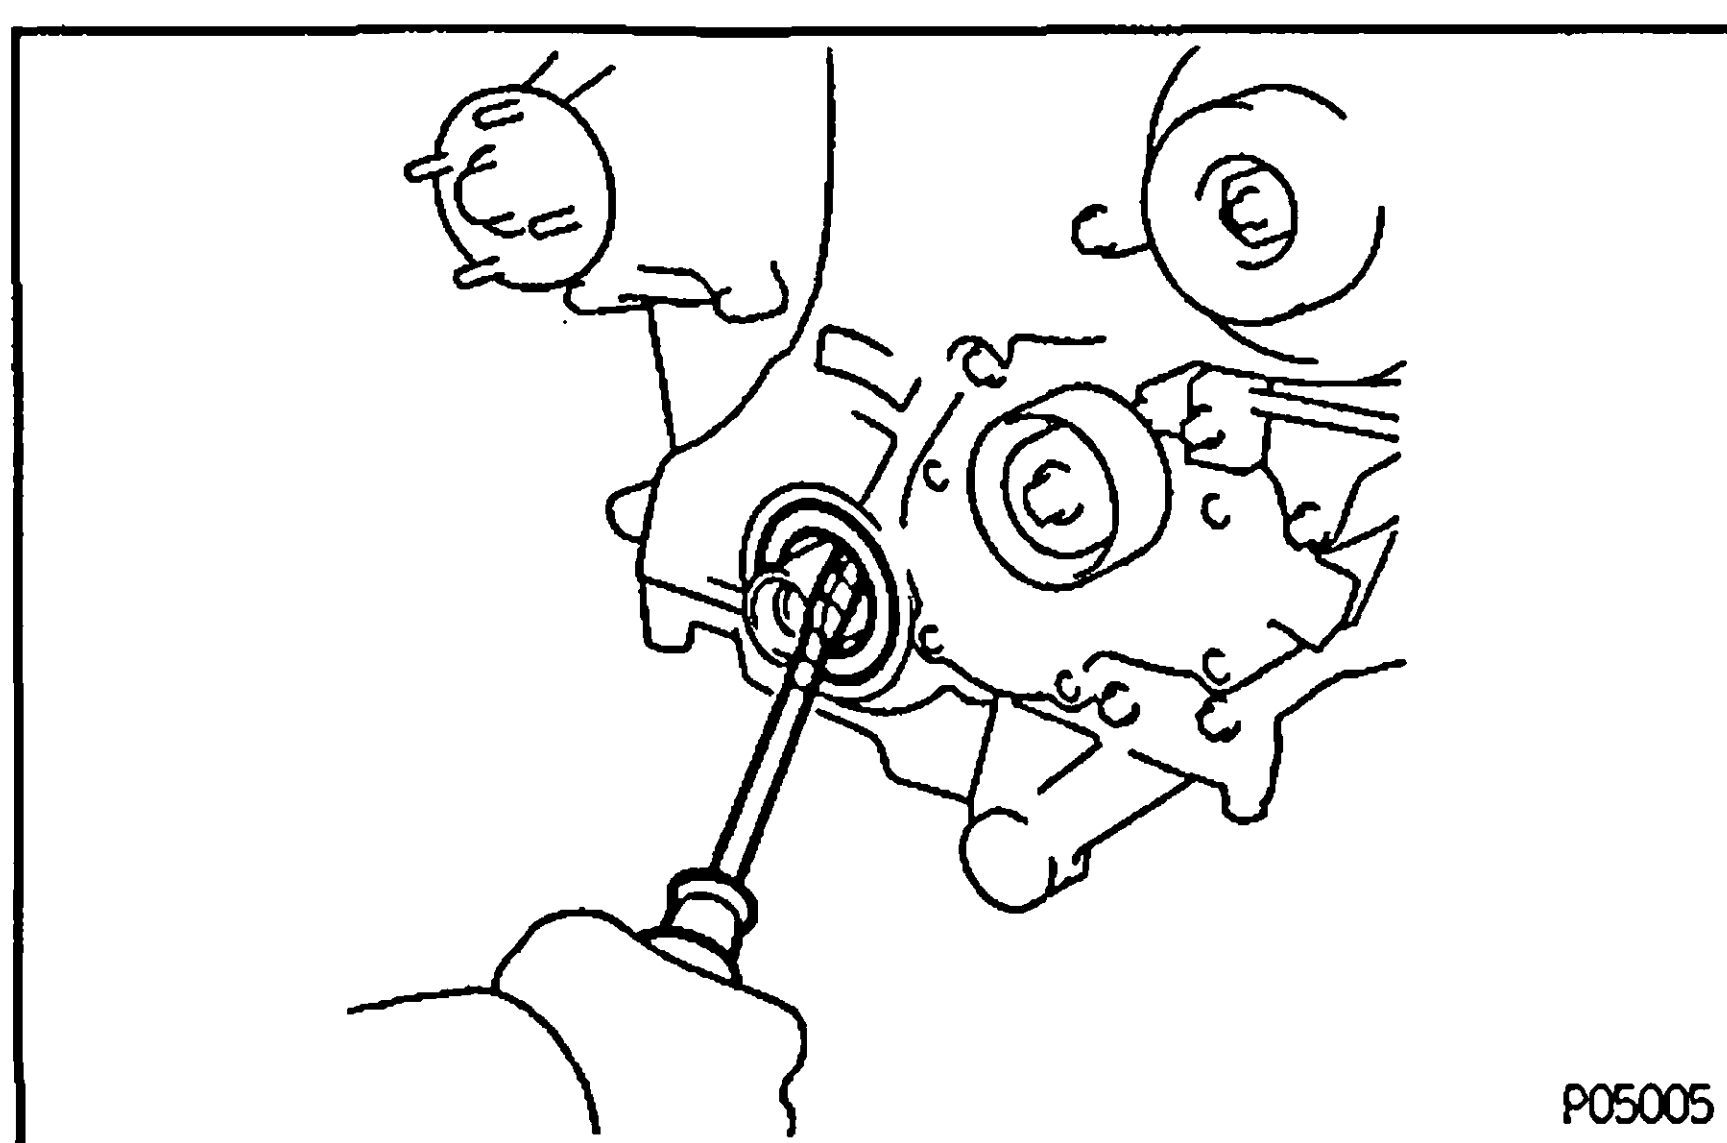

B. If timing chain cover is installed to the cylinder block:

- (a) Using a screwdriver, pry out the oil seal.

NOTICE: Be careful not to damage the crankshaft. Tape the screwdriver tip.

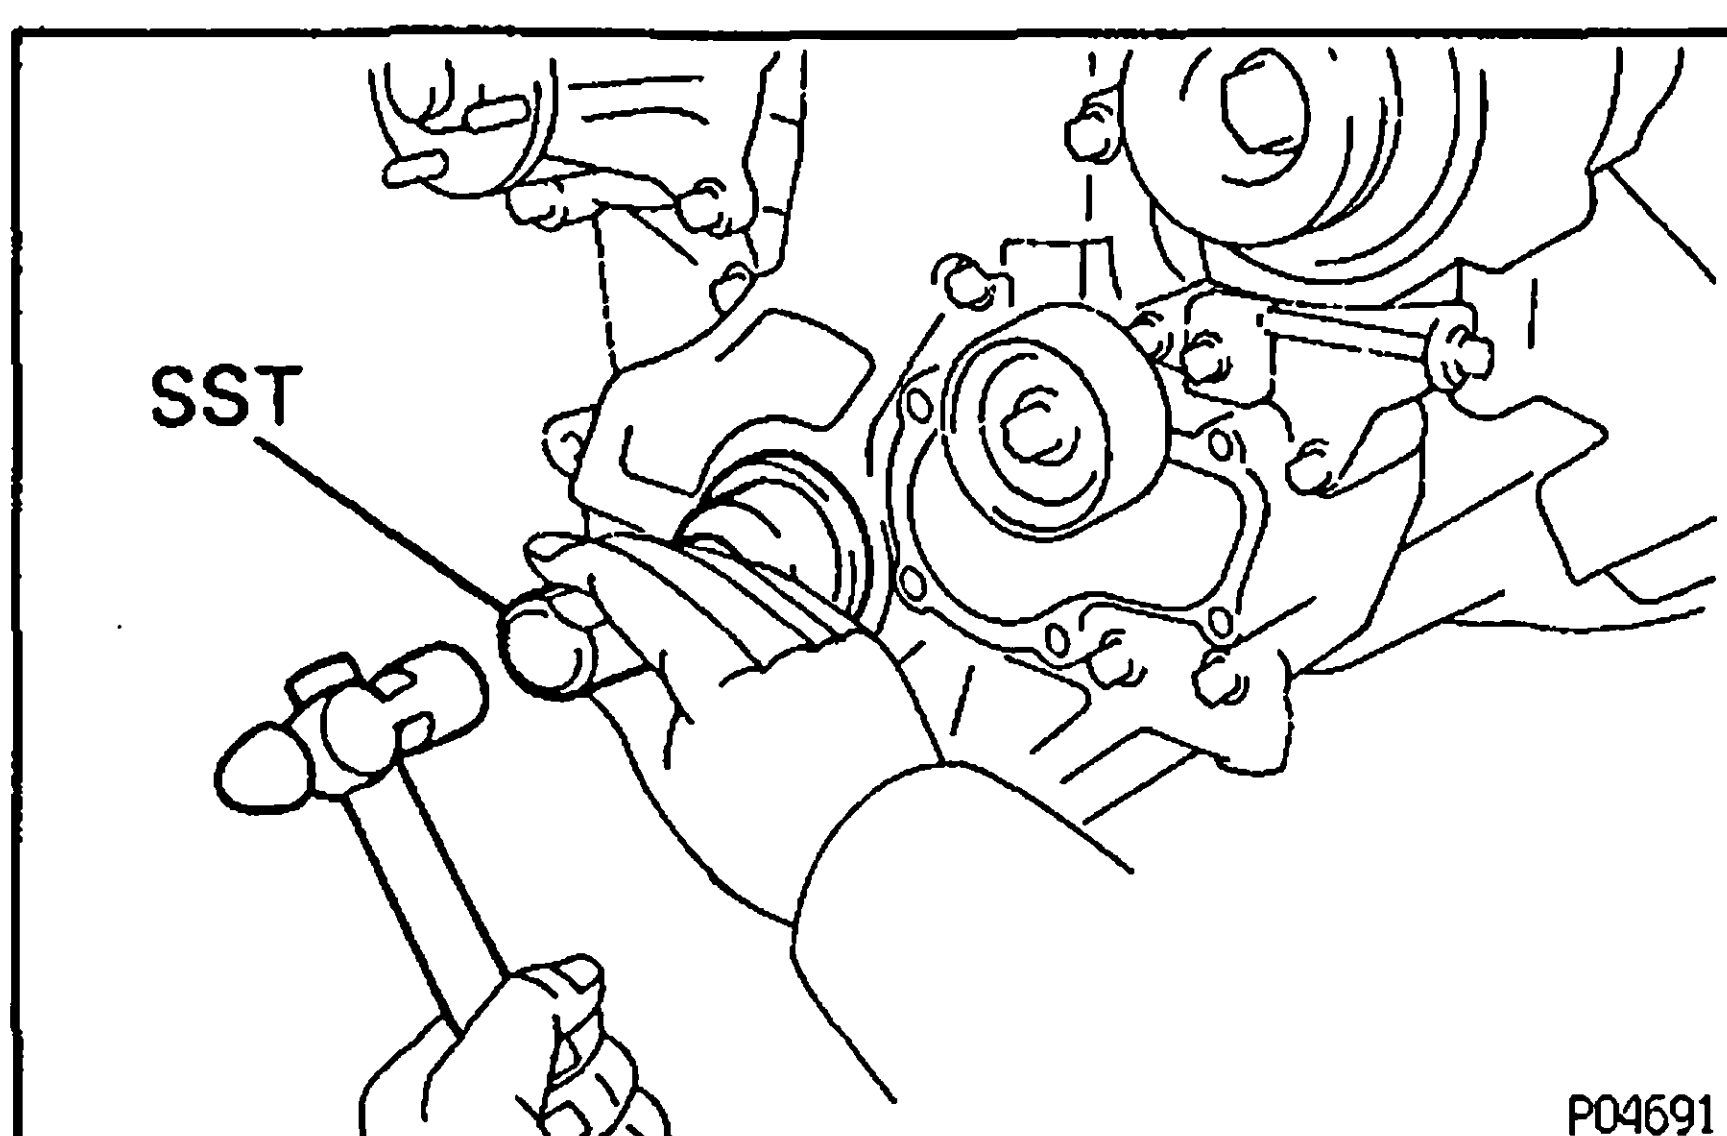


- (b) Apply MP grease to a new oil seal lip.

- (c) Using SST and a hammer, tap in the oil seal until its surface is flush with the timing chain cover edge.

SST 09223-46011


EG

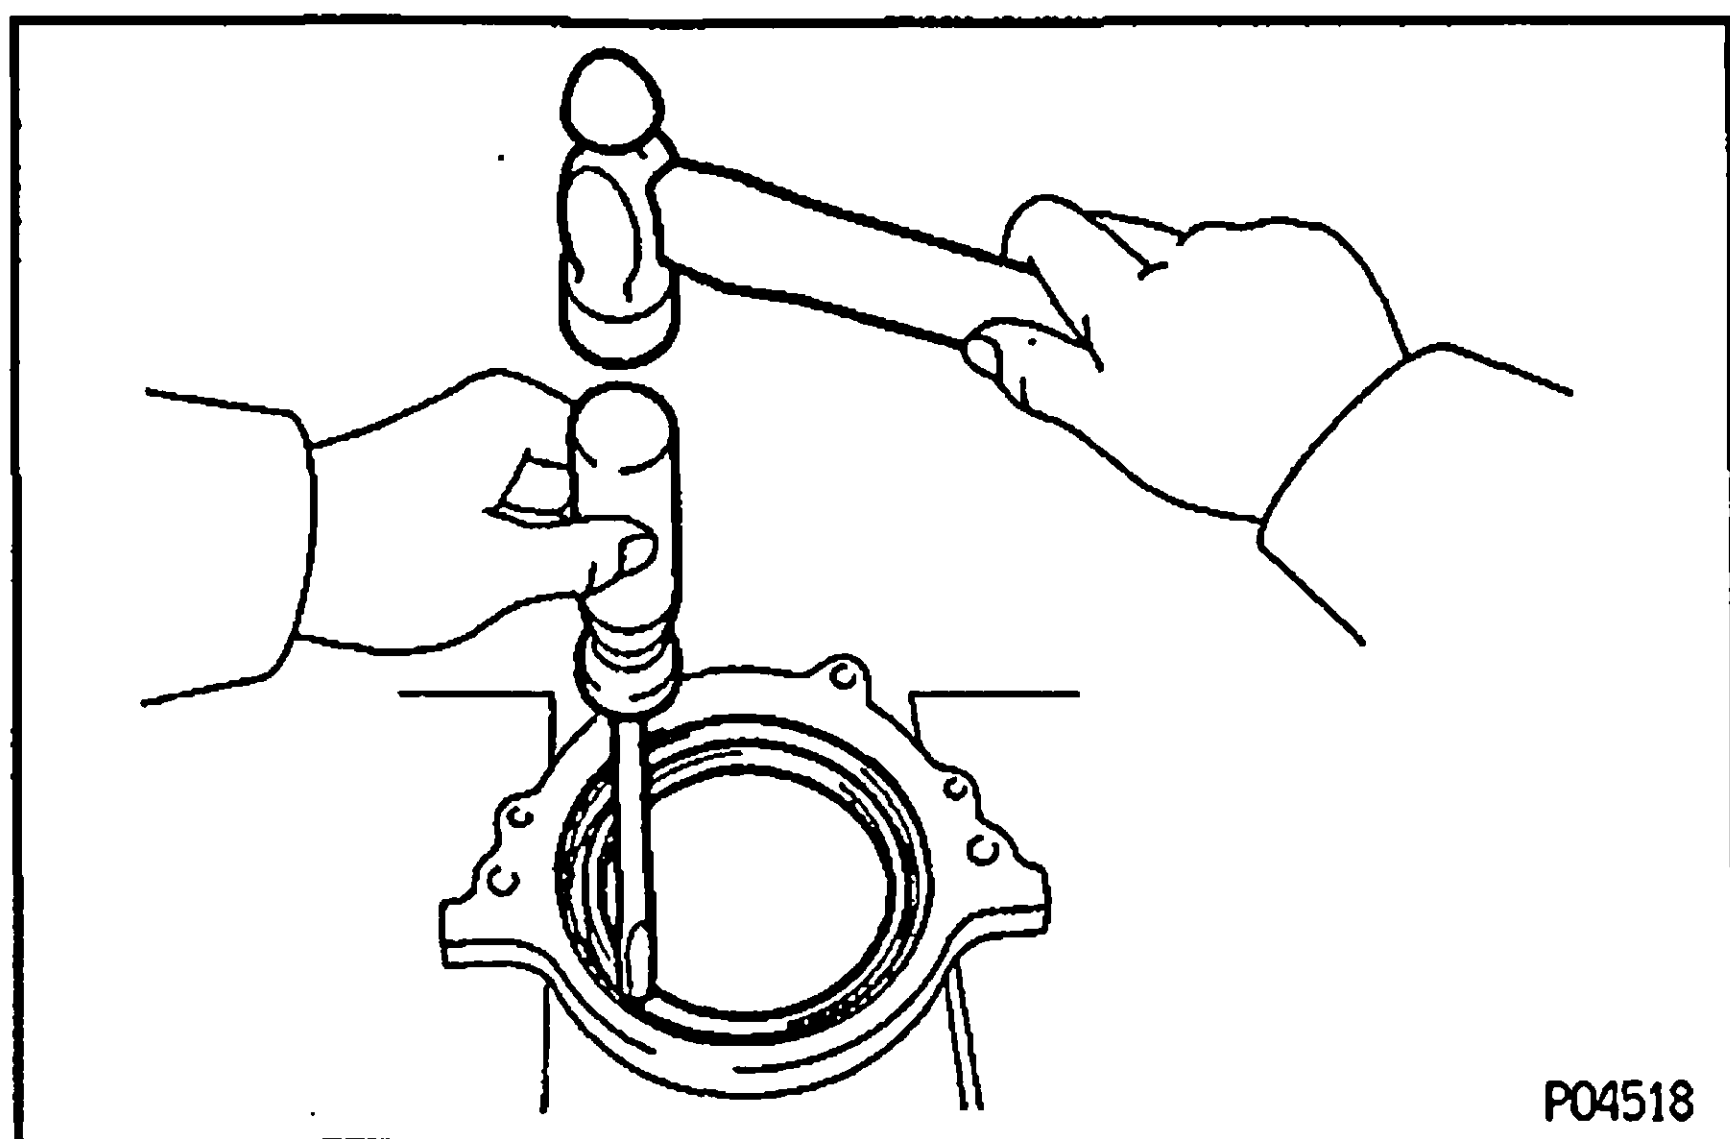

2. REPLACE CRANKSHAFT REAR OIL SEAL

A. If rear oil seal retainer is removed from cylinder block:


- (a) Using screwdriver and hammer, tap out the oil seal.

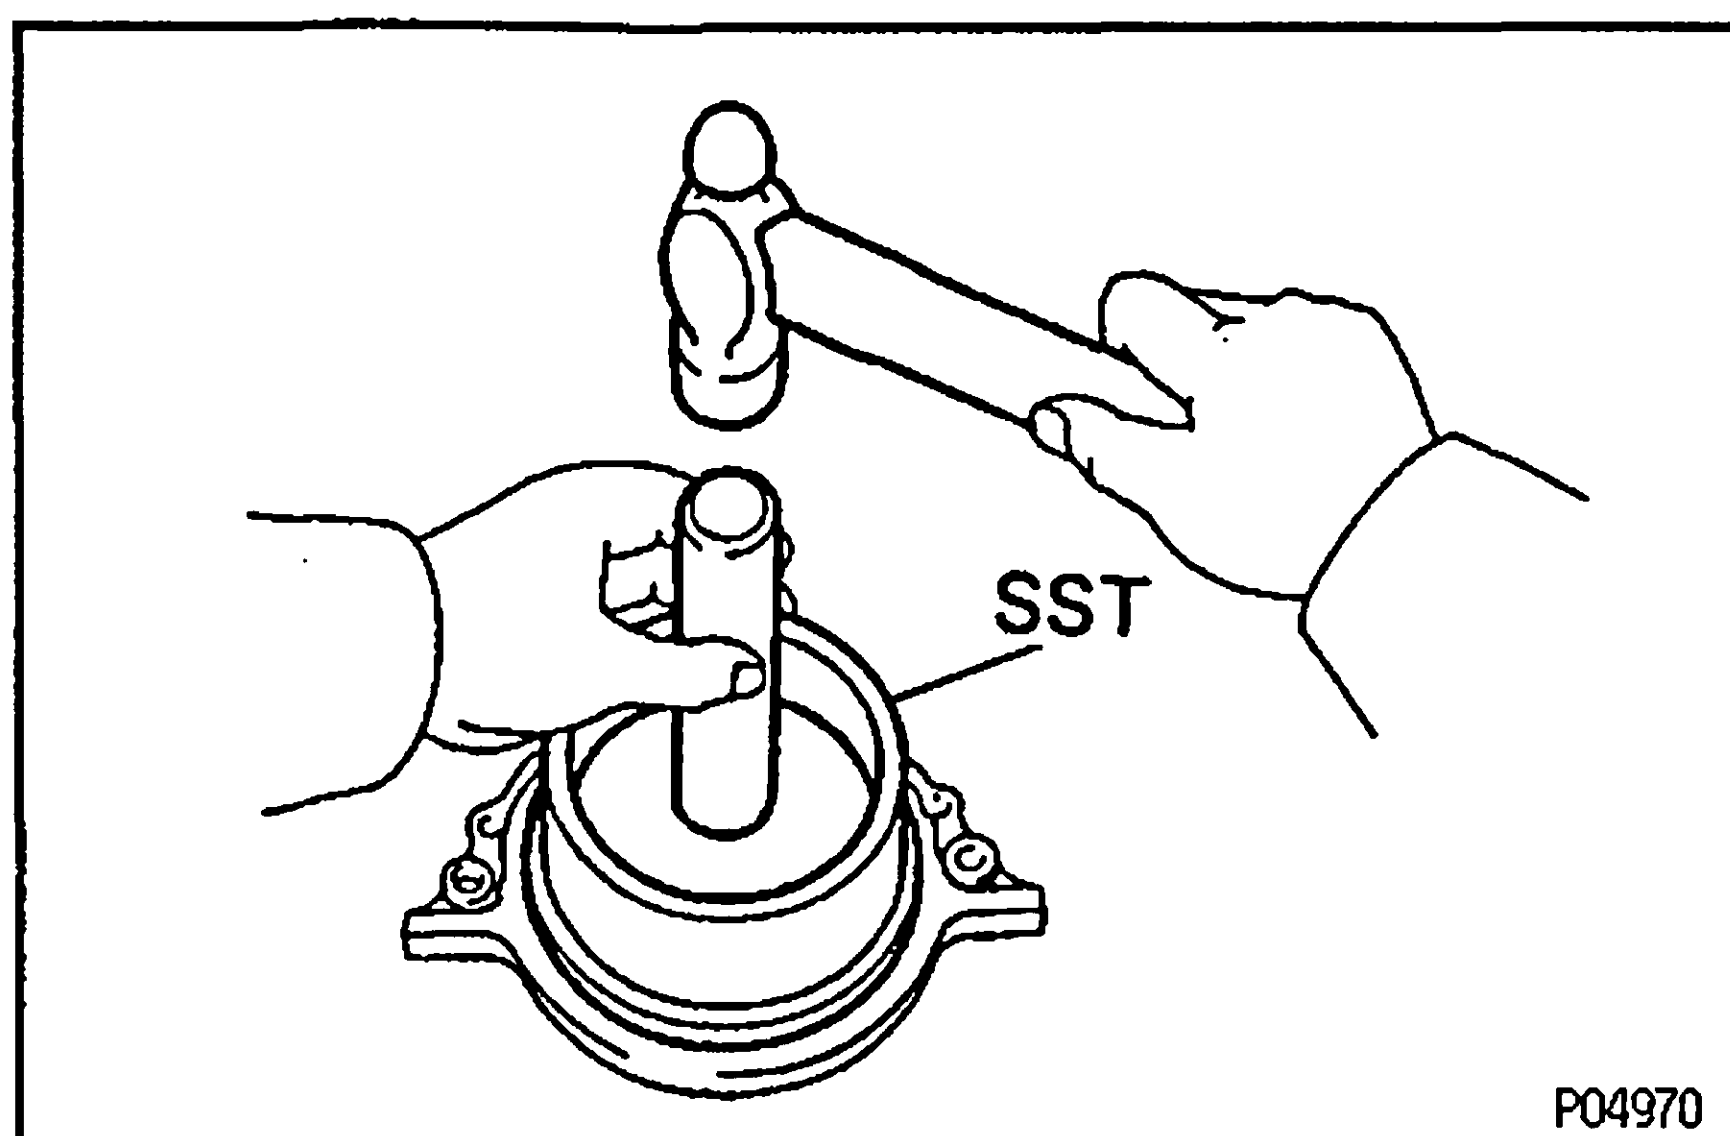

- (b) Using SST and a hammer, tap in a new oil seal until its surface is flush with the rear oil seal edge.

SST 09223-15030, 09608-30012 (09608-04020)

- (c) Apply MP grease to the oil seal lip.

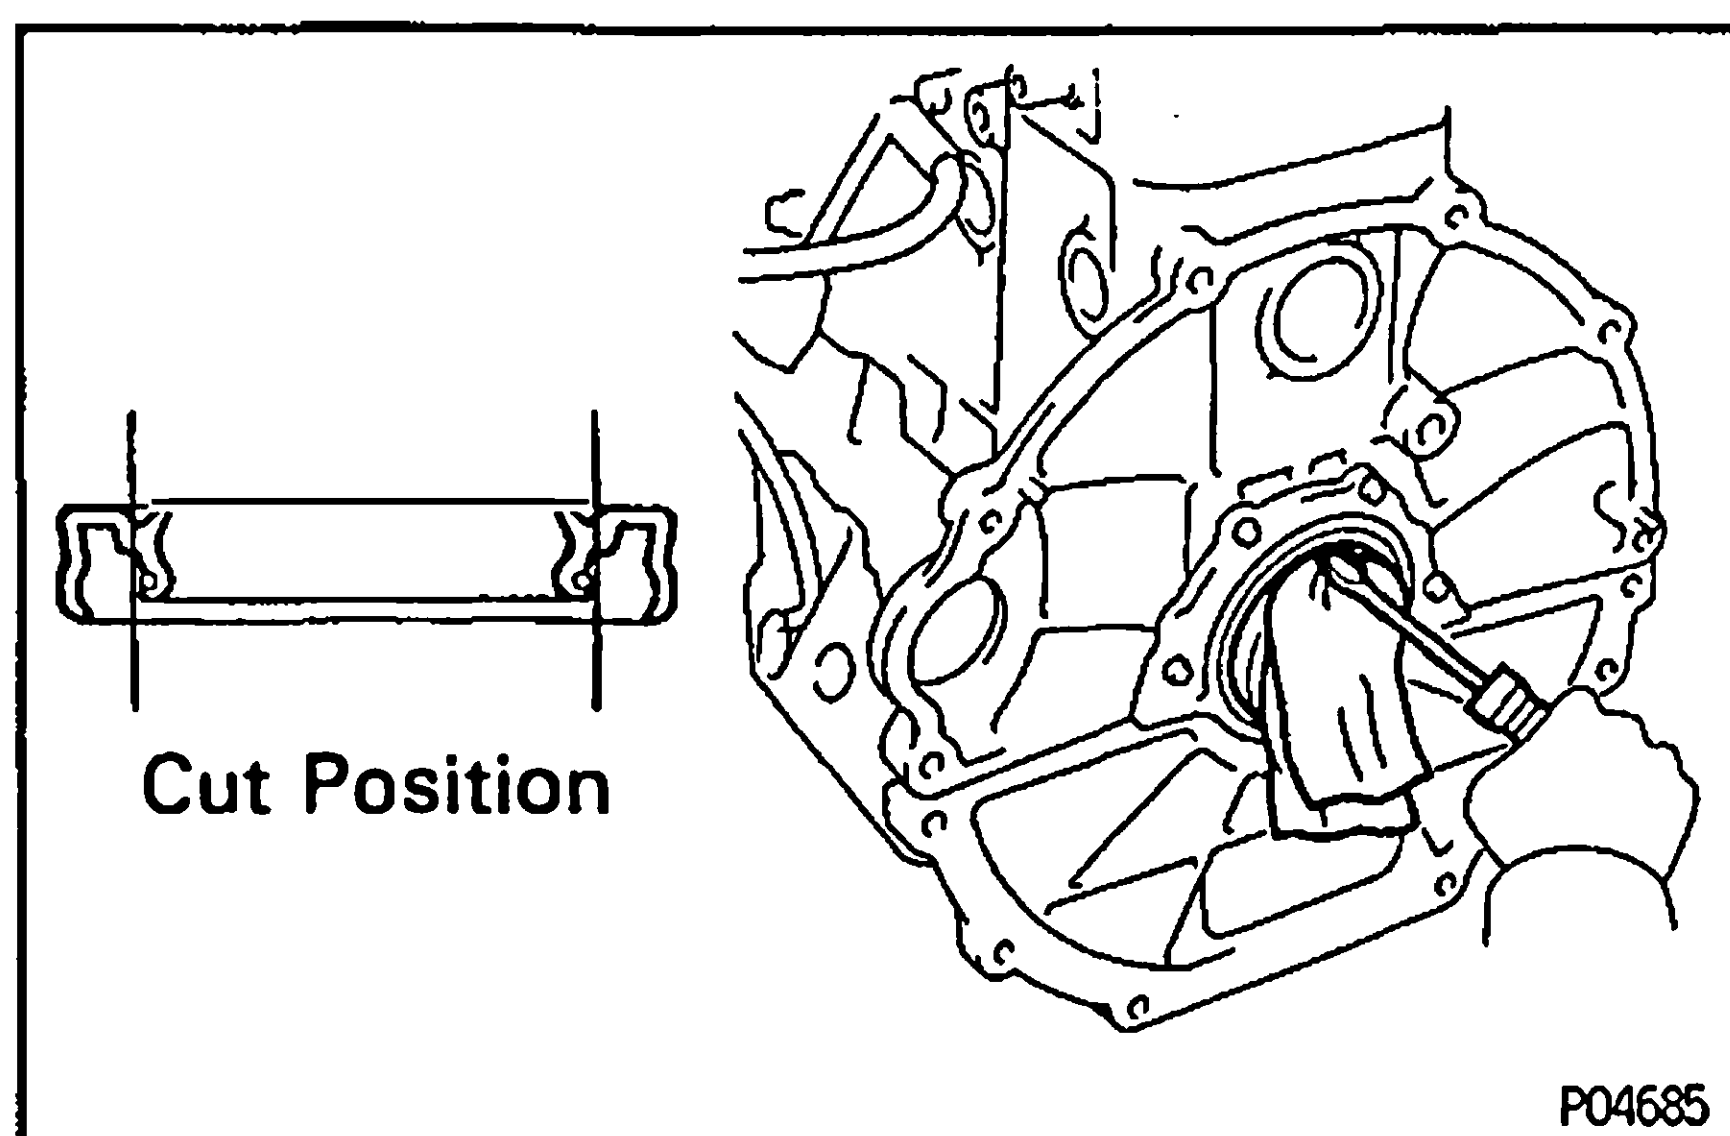


B. If rear oil seal retainer is installed to cylinder block:

- (a) Using a knife, cut off the oil seal lip.

- (b) Using a screwdriver, pry out the oil seal.


NOTICE: Be careful not to damage the crankshaft.
Tape the screwdriver tip.

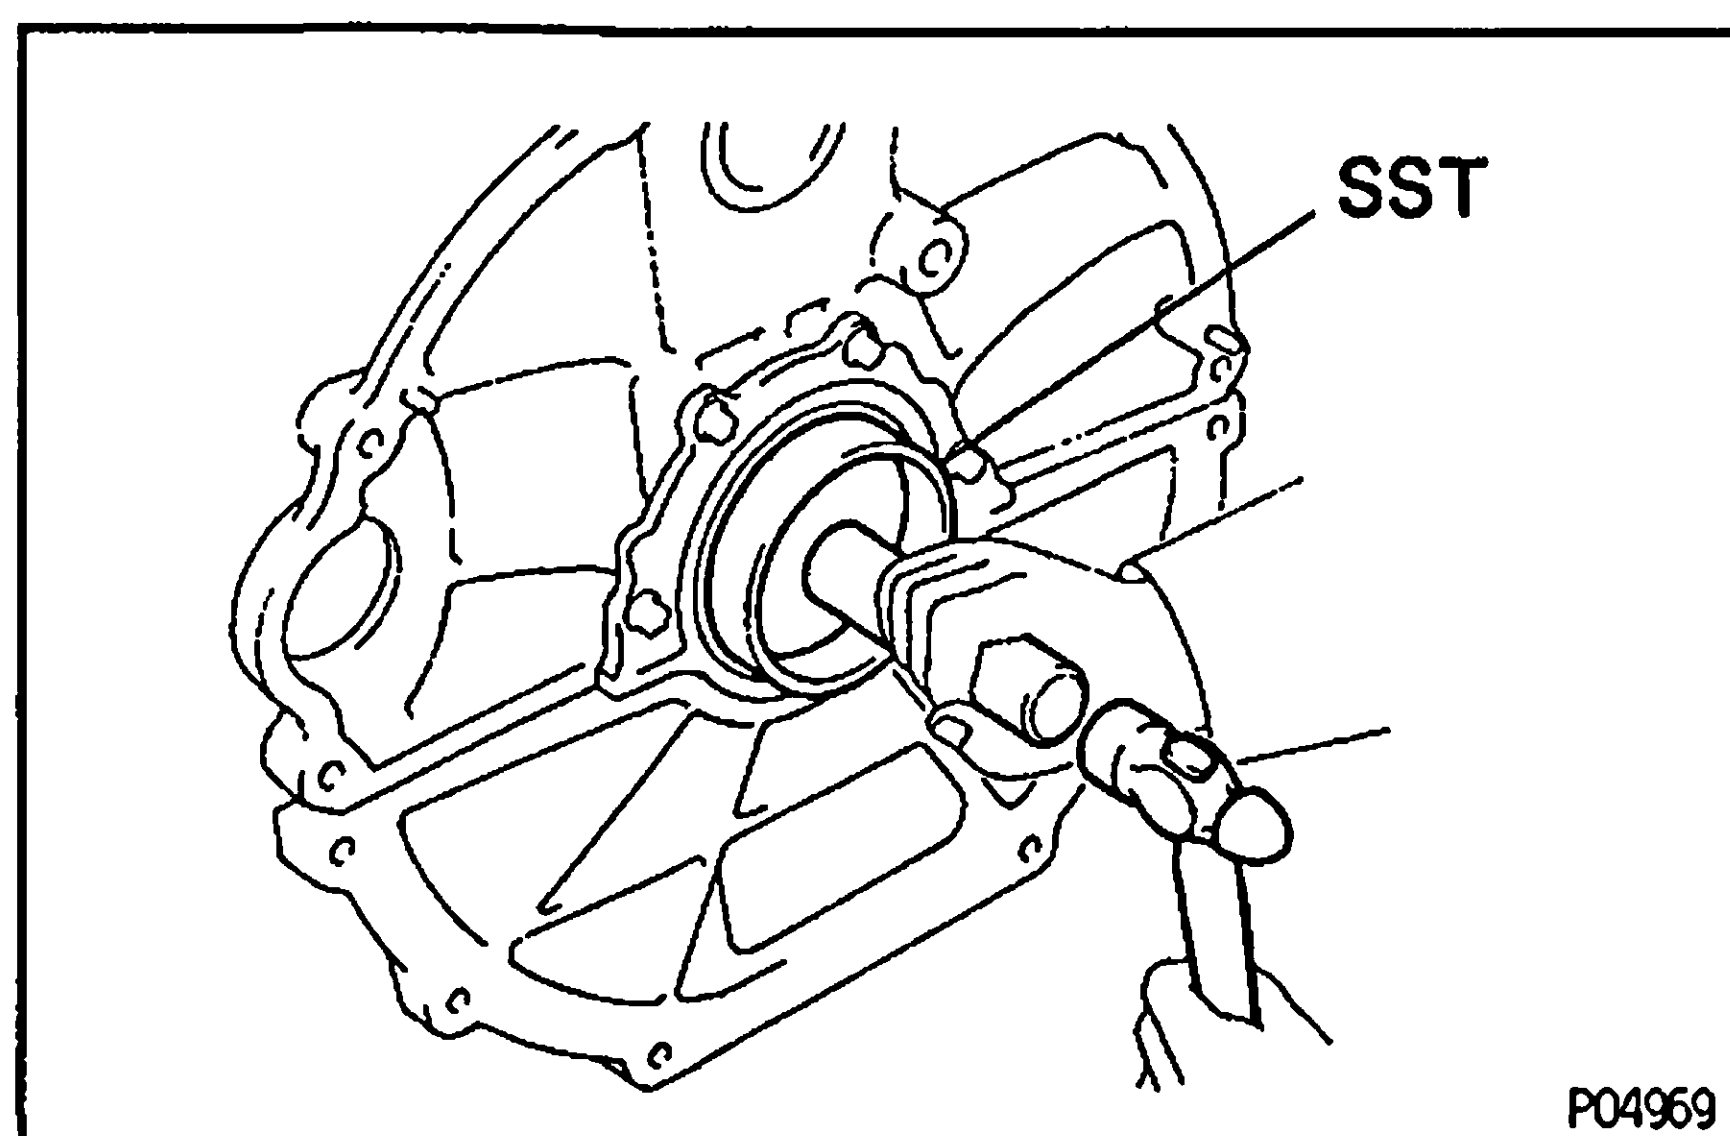

- (c) Apply MP grease to a new oil seal lip.

- (d) Using SST and a hammer, tap in the oil seal until its surface is flush with the rear oil seal retainer edge.

SST 09223-15030, 09608-30012 (09608-04020)

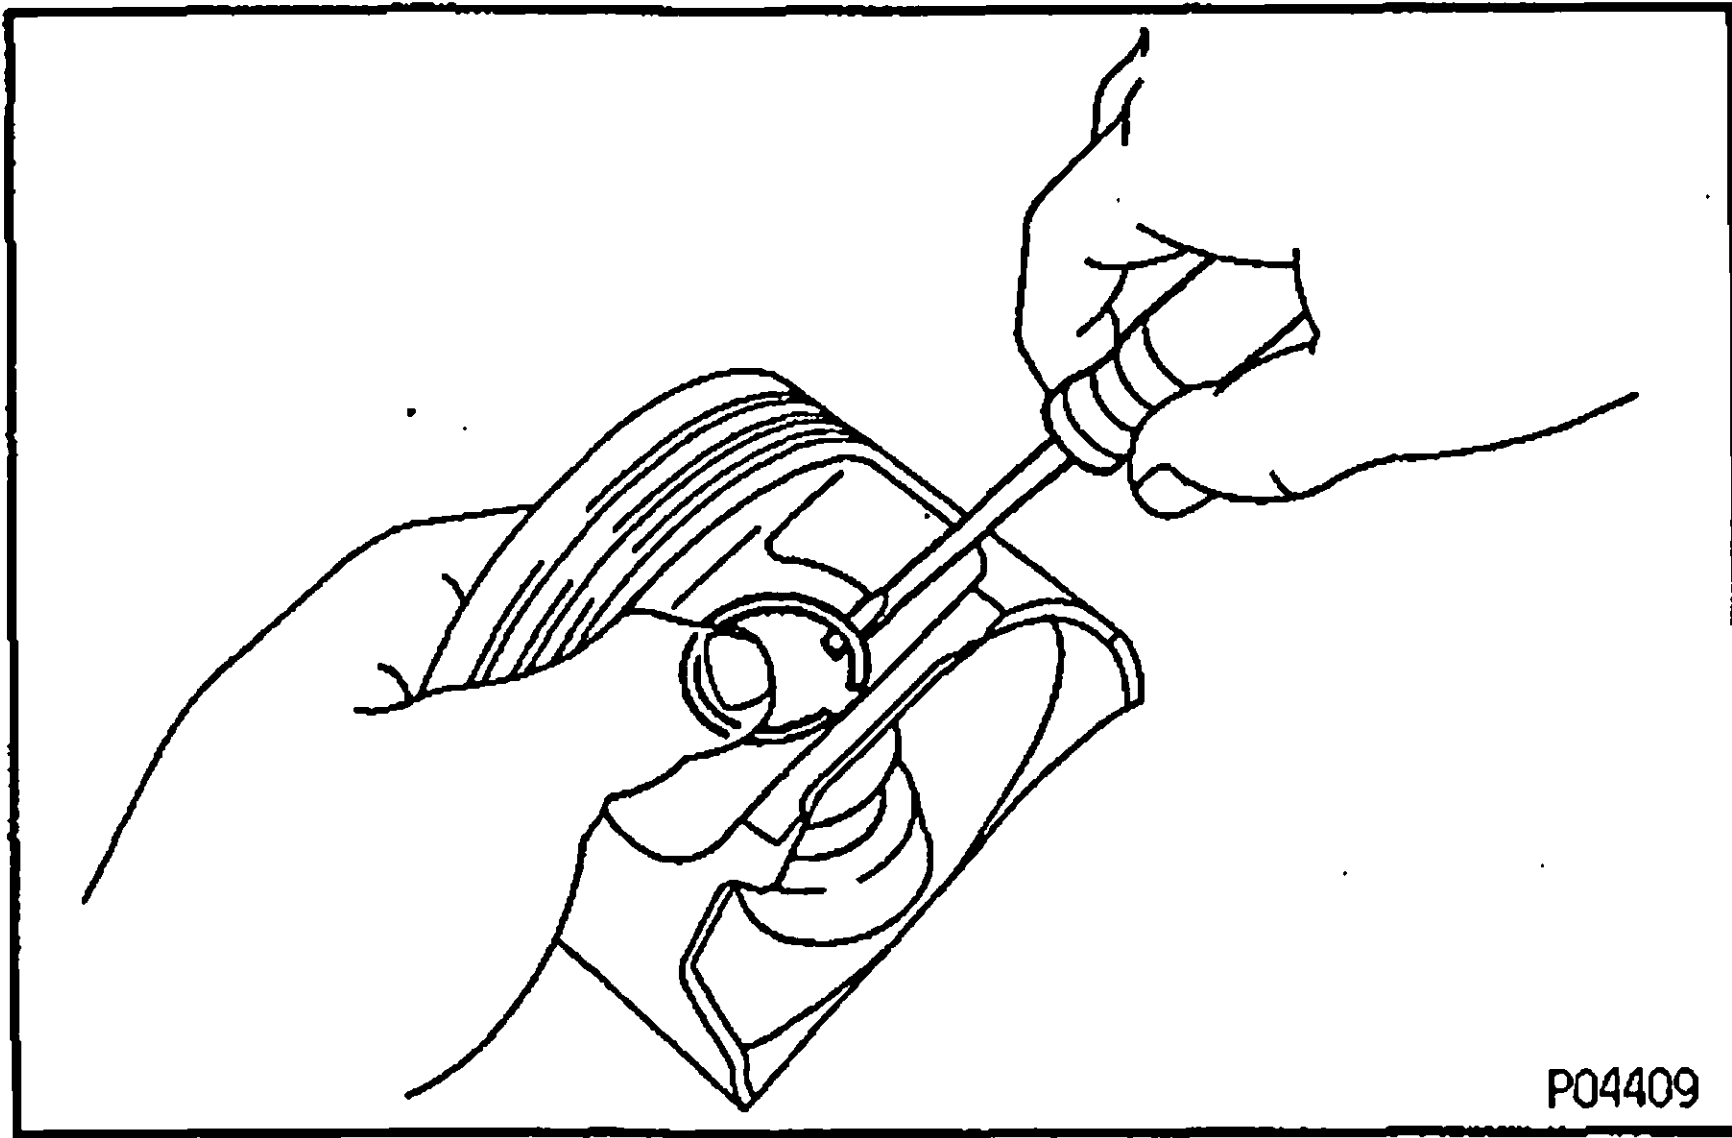


PISTON AND CONNECTING ROD ASSEMBLY


1. ASSEMBLE PISTON AND CONNECTING ROD

- (a) Install a new snap ring on one side of the piston pin hole.


EG

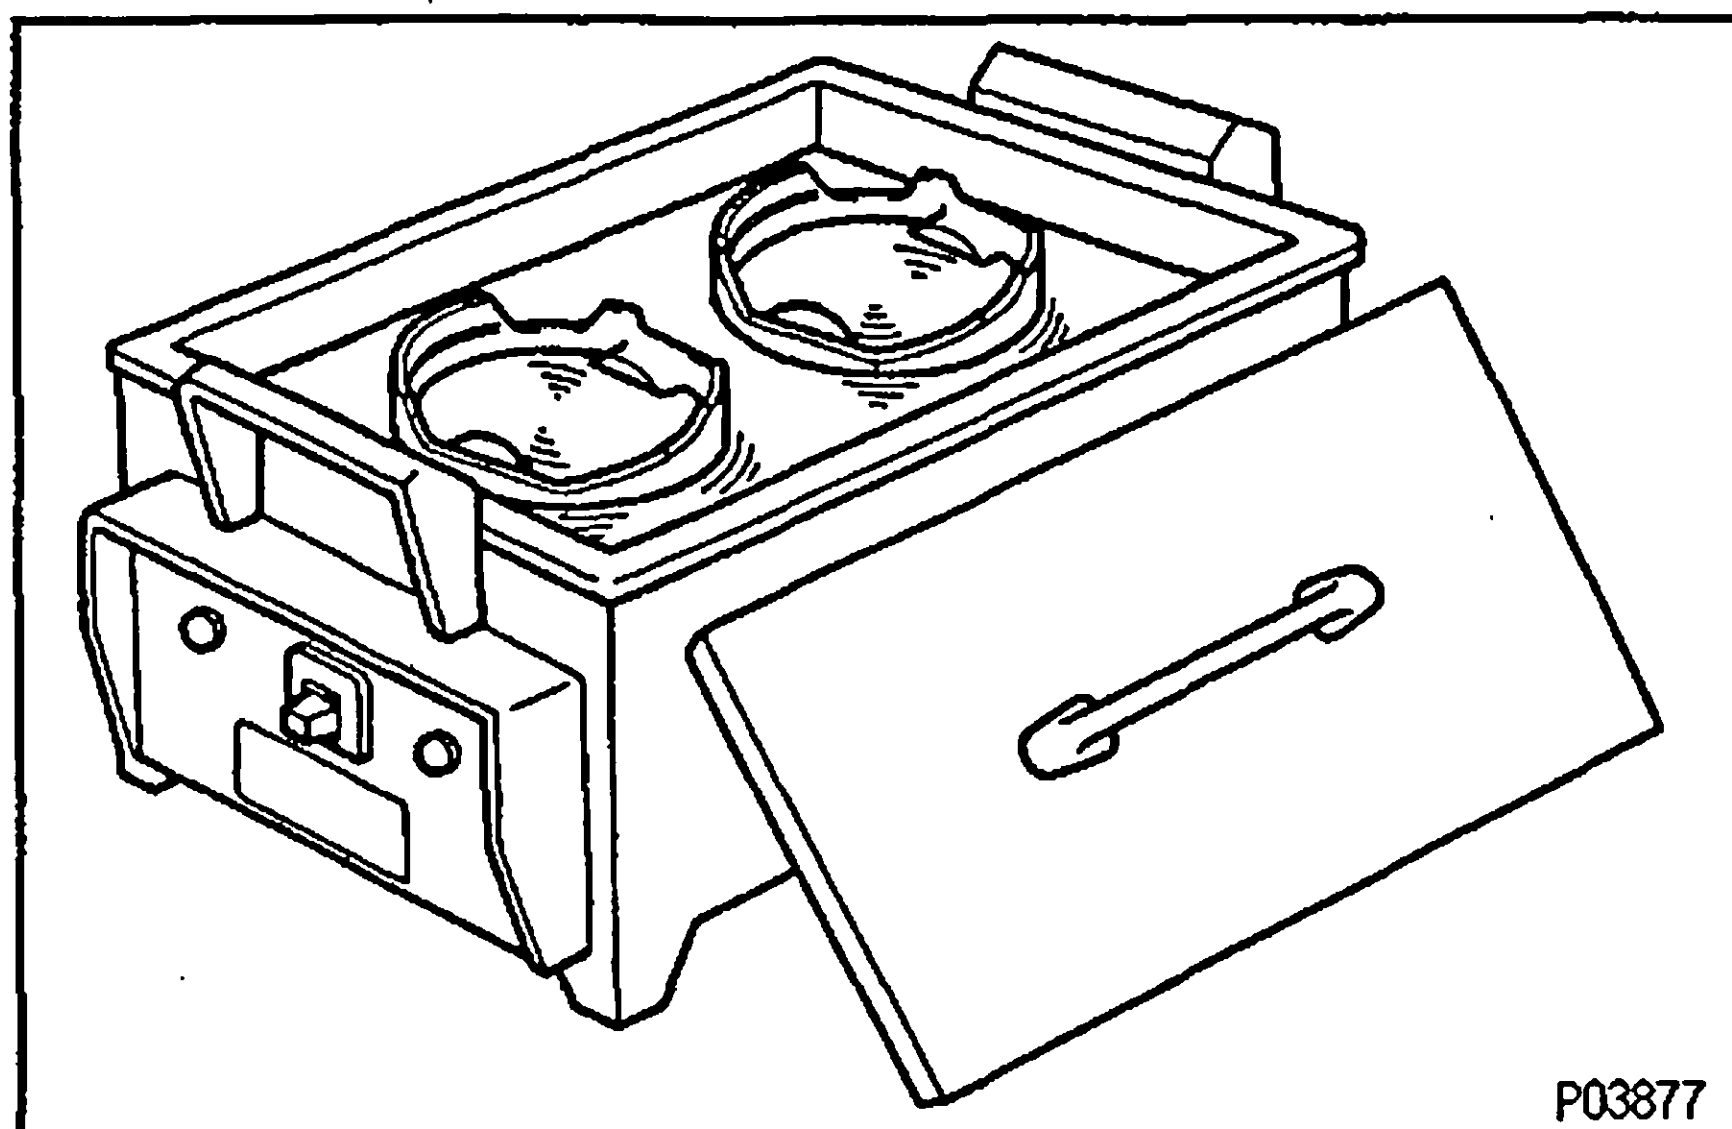


- (b) Gradually heat the piston to 80–90°C (176–194°F).

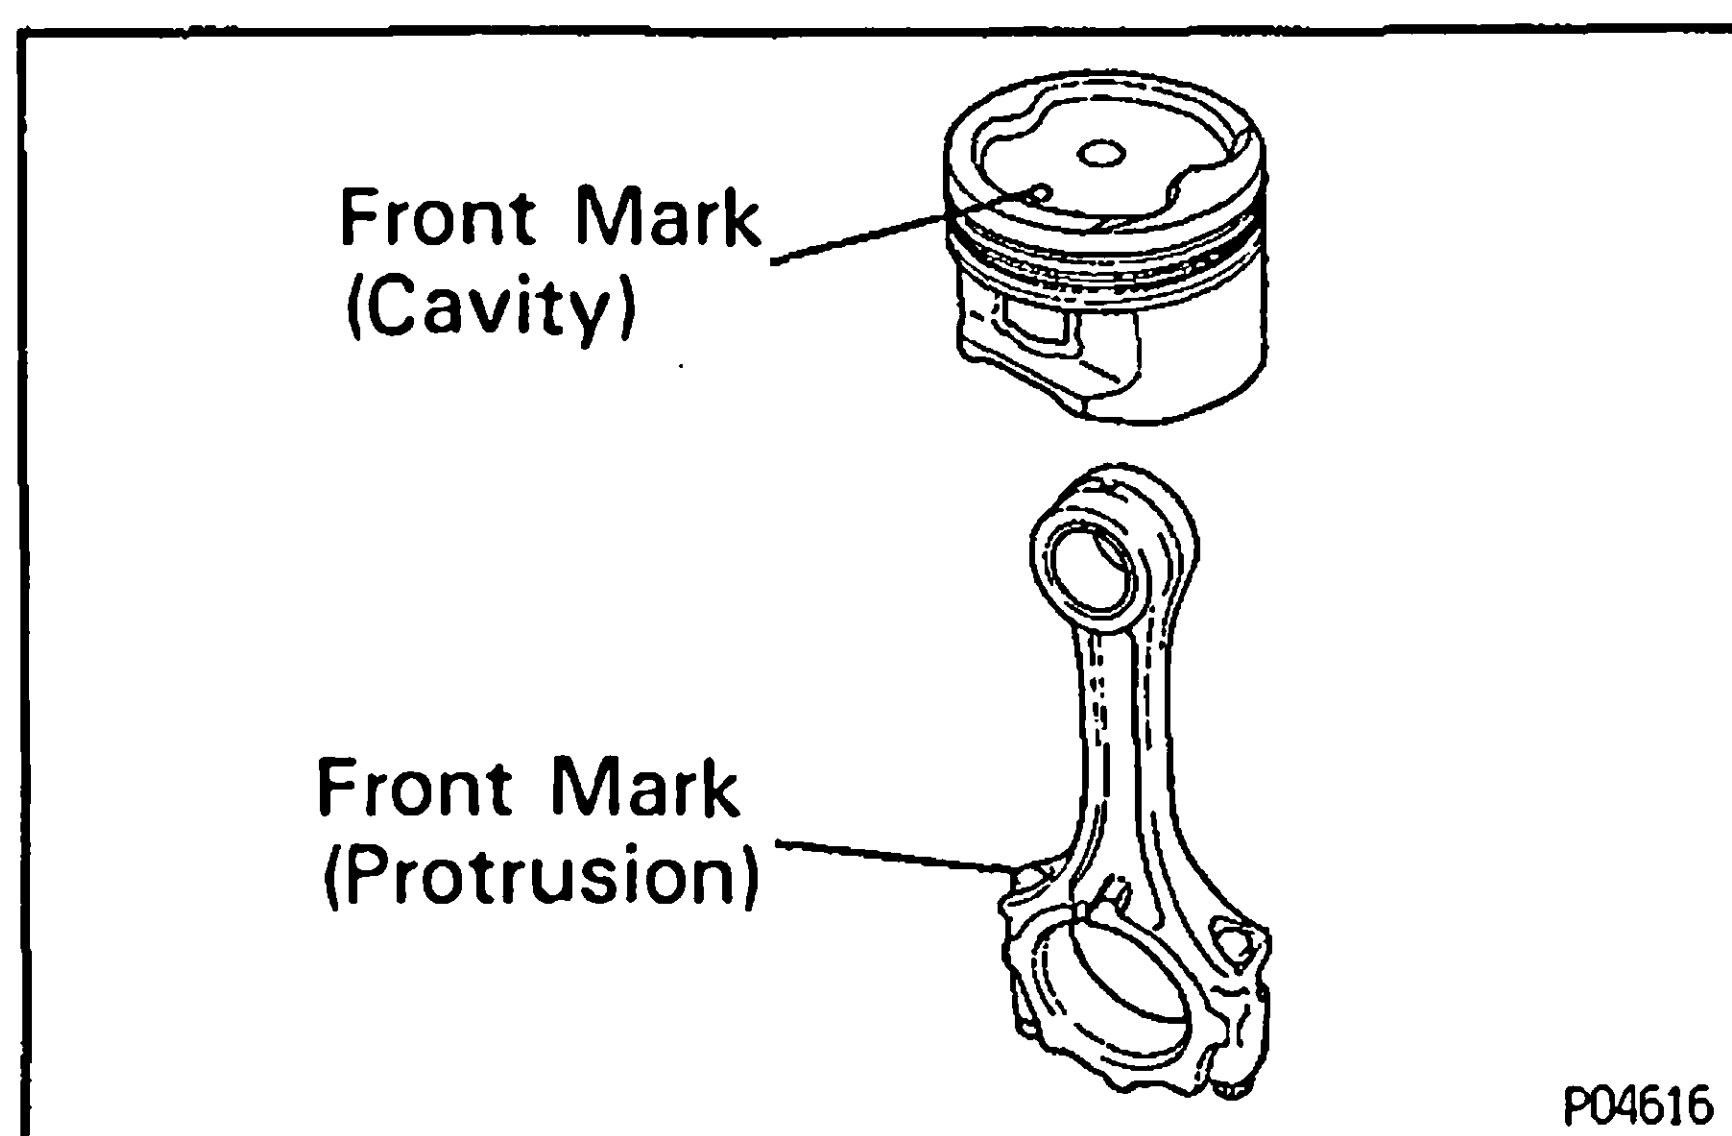

- (c) Coat the piston pin with engine oil.
(d) Align the front marks of the piston and connecting rod, and push in the piston pin with your thumb.

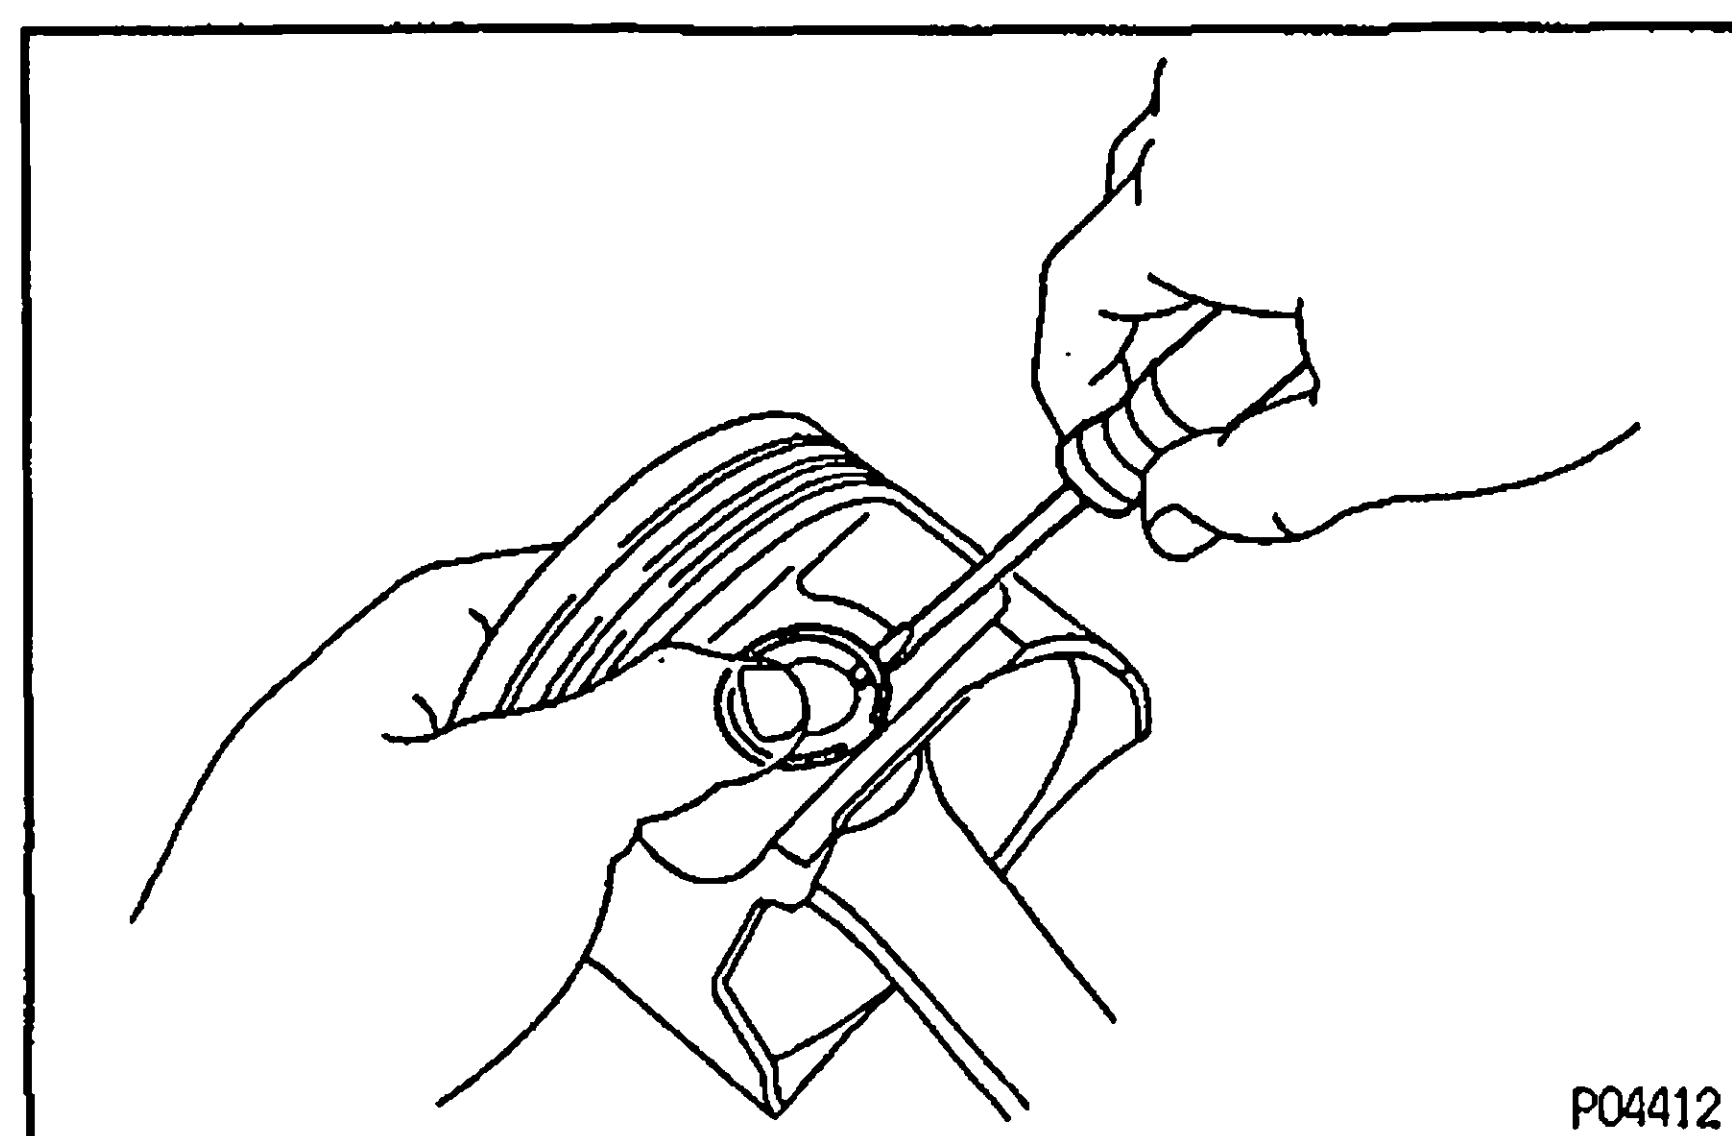


- (e) Install a new snap ring on the other side of the piston pin hole.

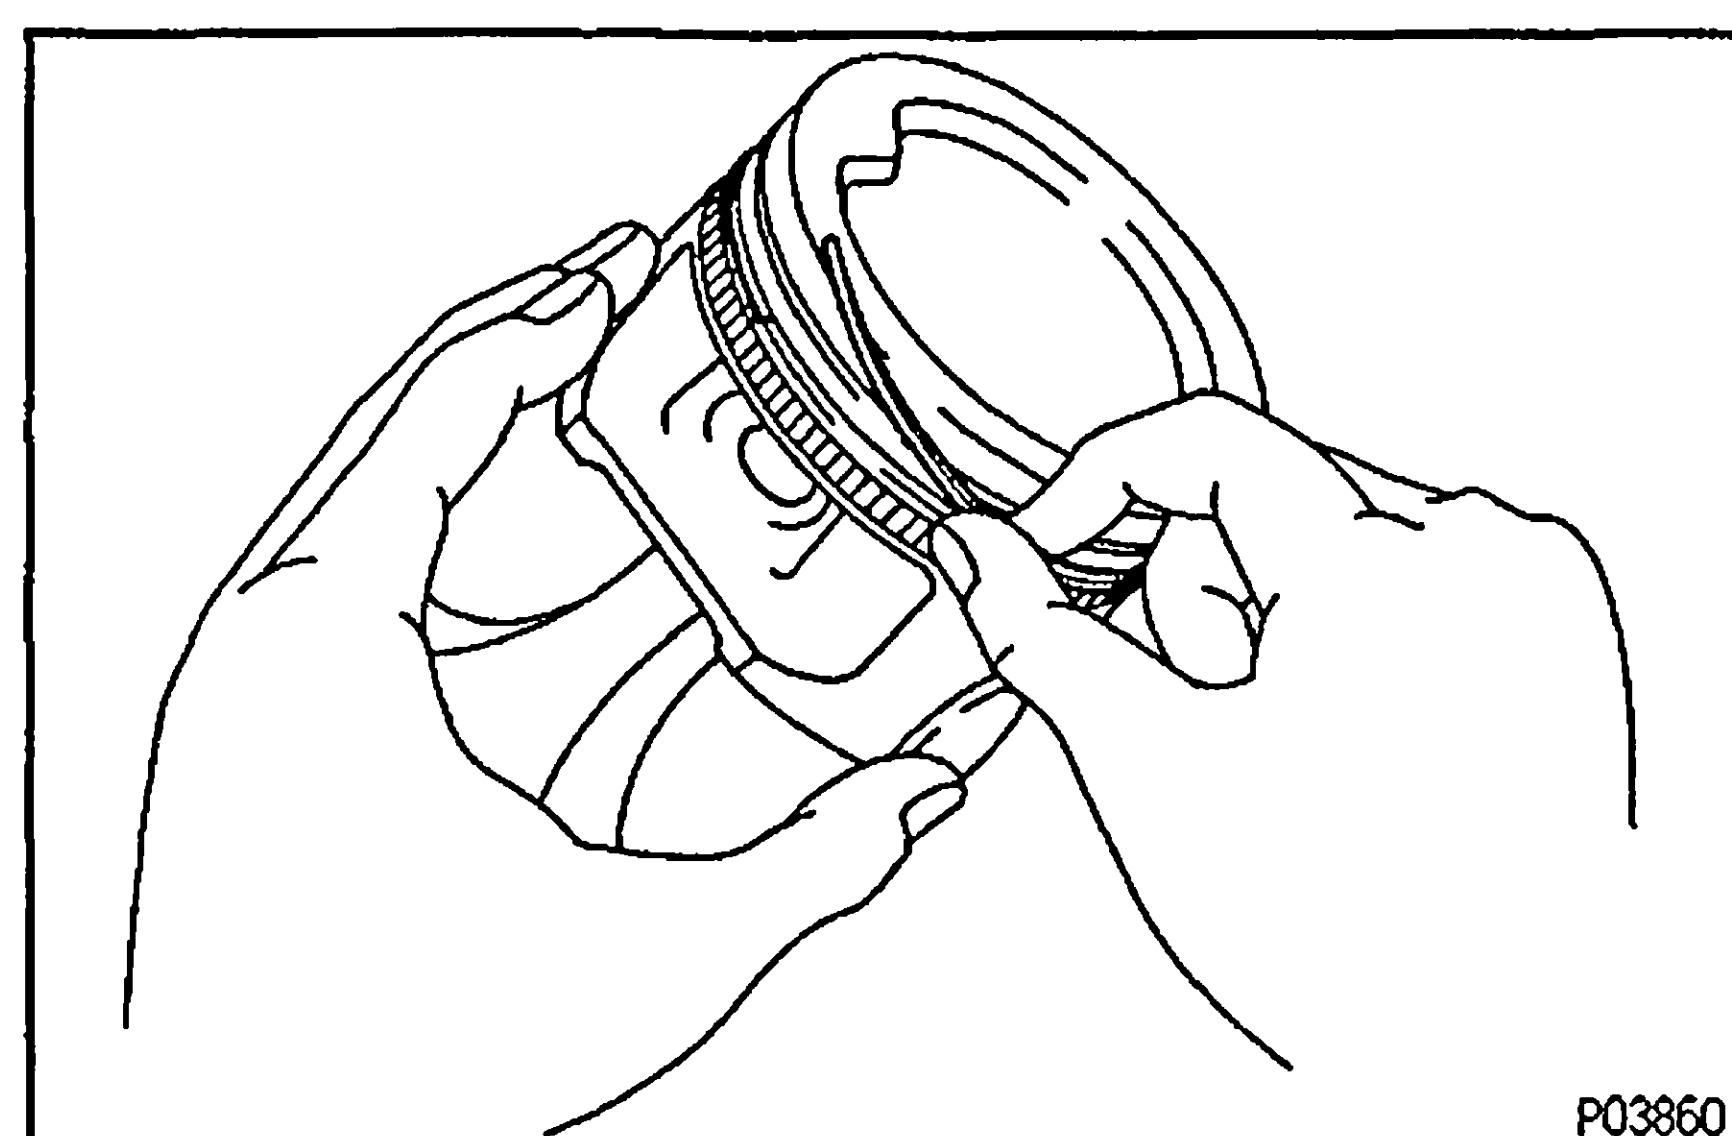

2. INSTALL PISTON RINGS

- (a) Install the oil ring expander and two side rails by hand.

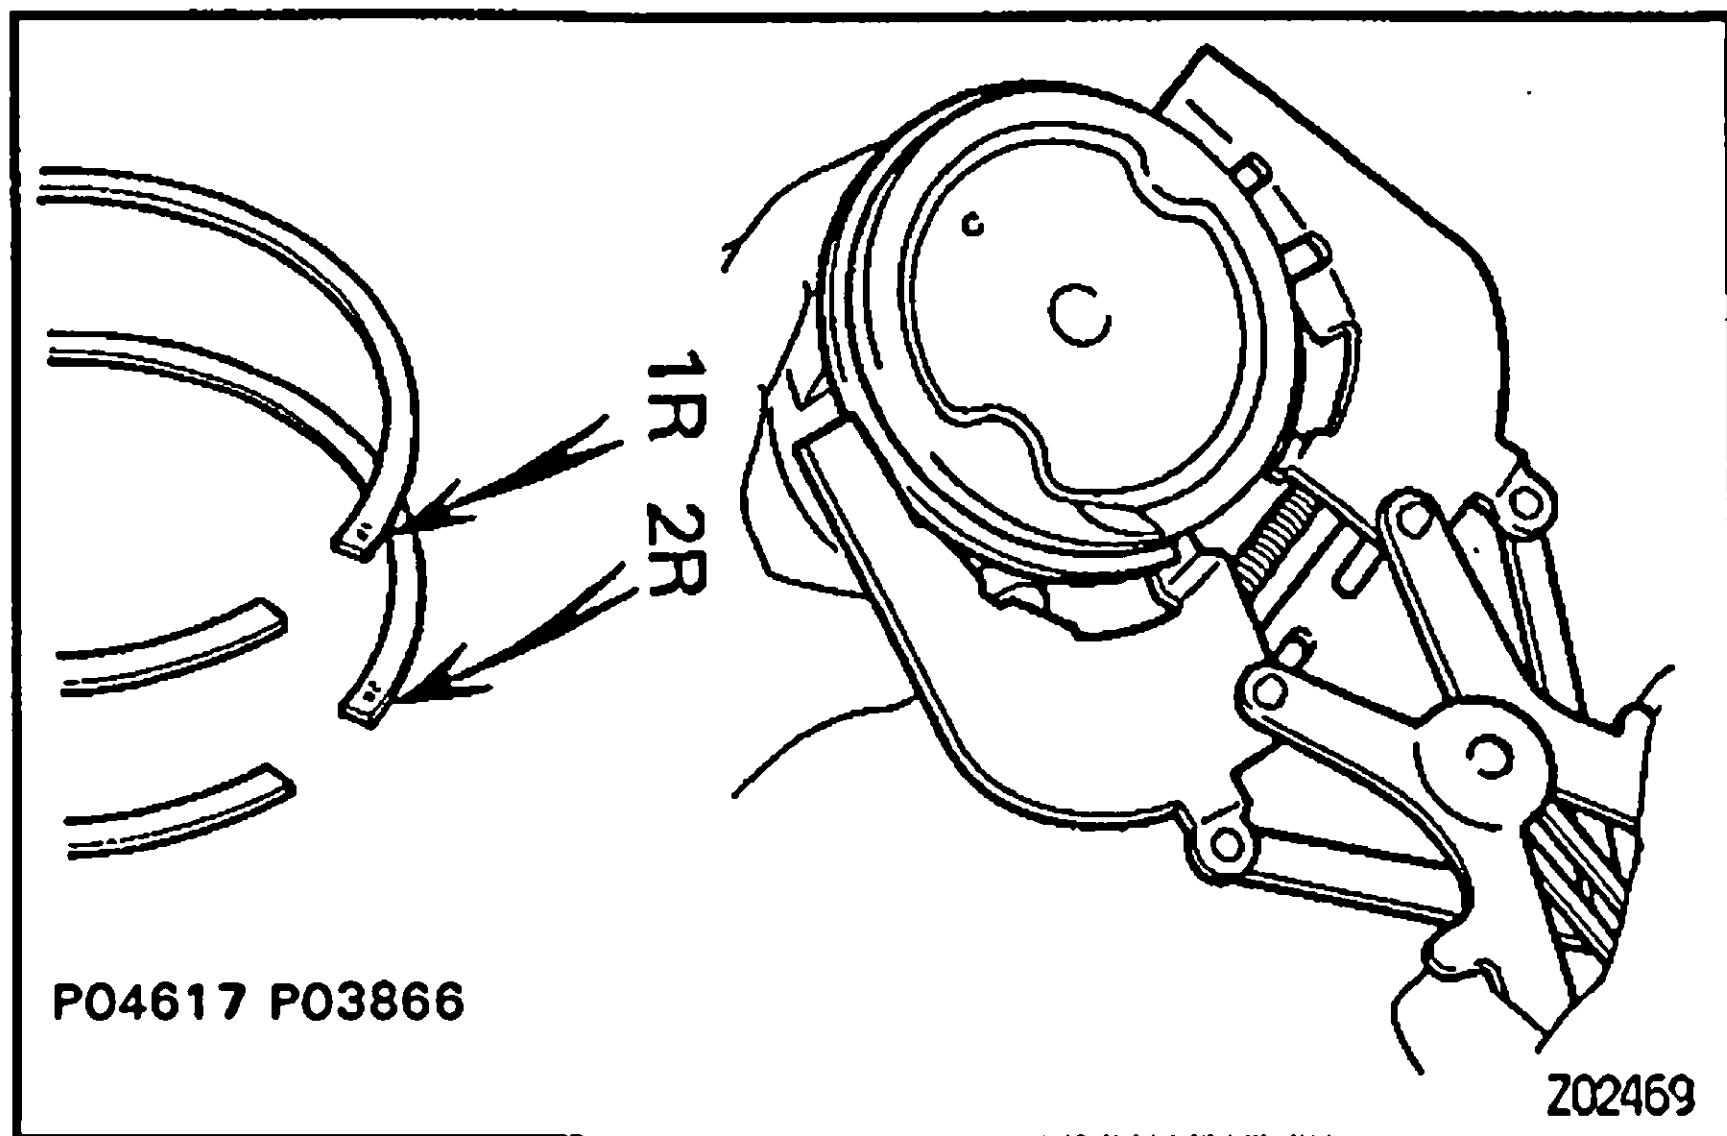

- (b) Using a piston ring expander, install the two compression rings with the code mark facing upward.


Code mark:

No.1

1R


No.2

2R

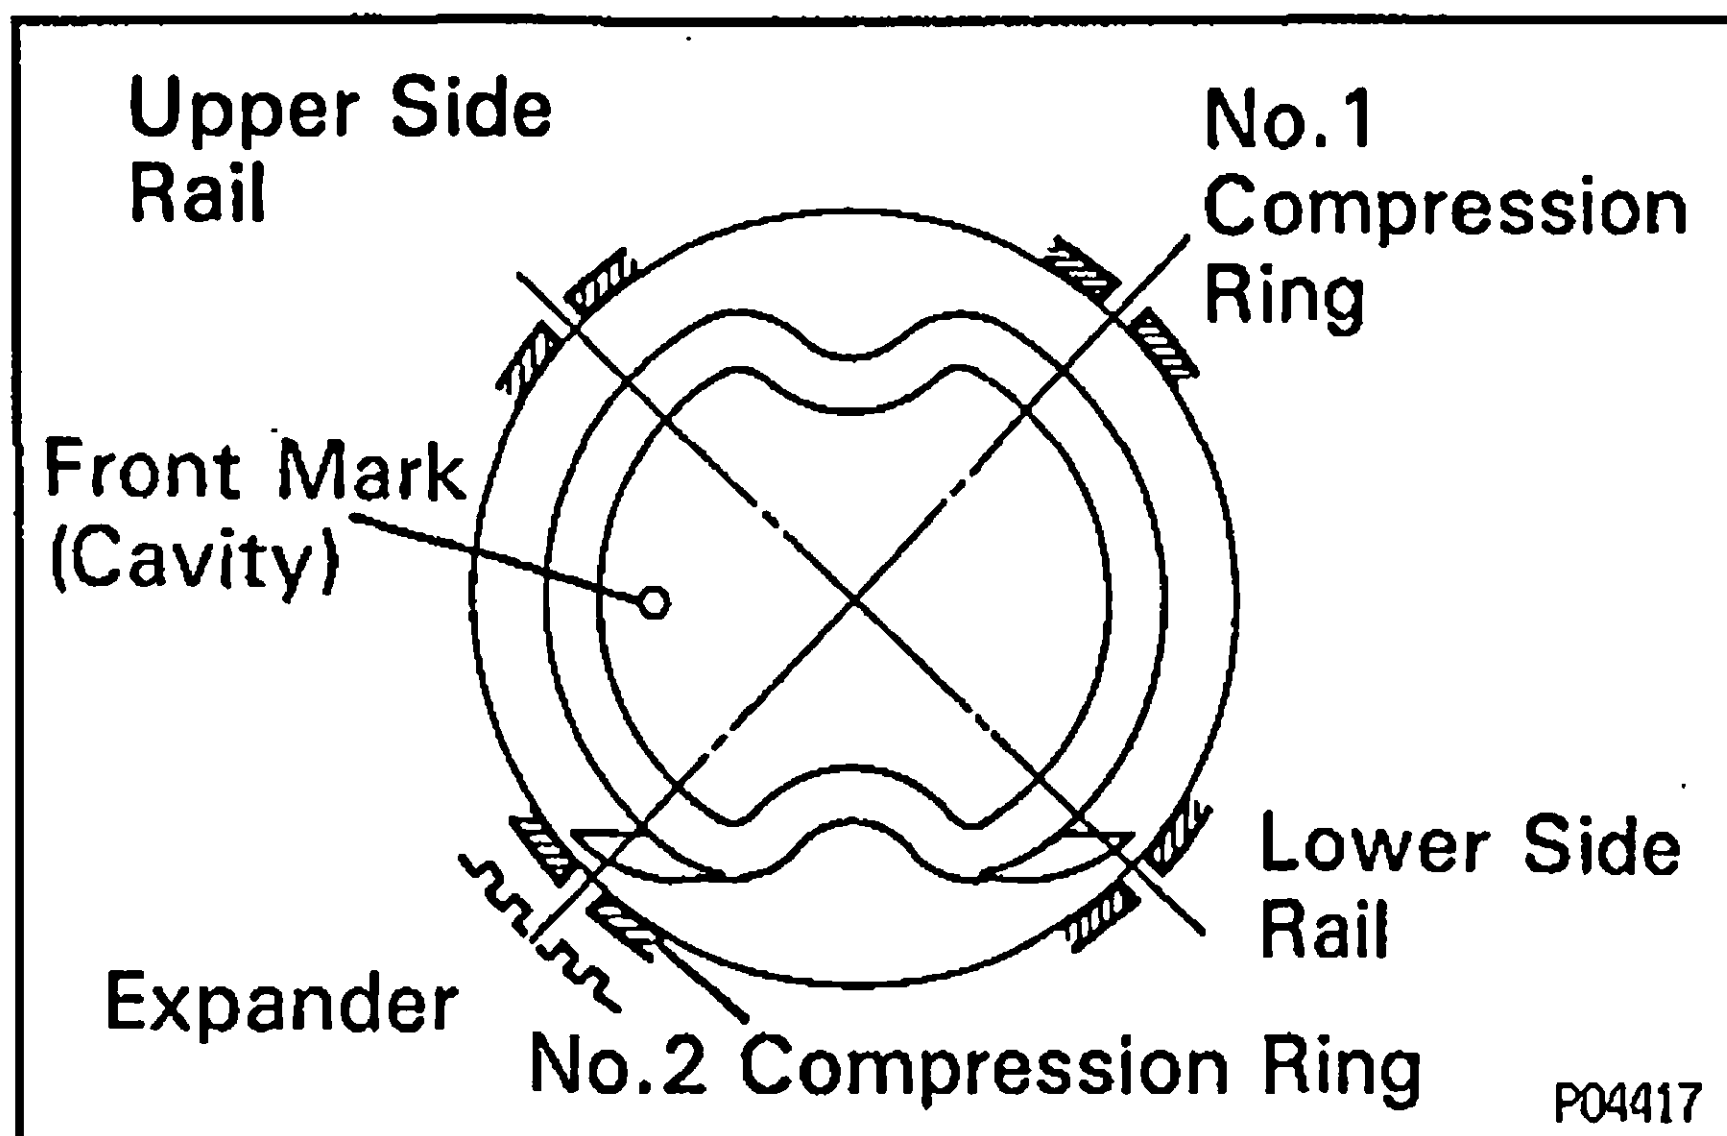

- (c) Position the piston rings so that the ring ends are as shown.

NOTICE: Do not align the ring ends.

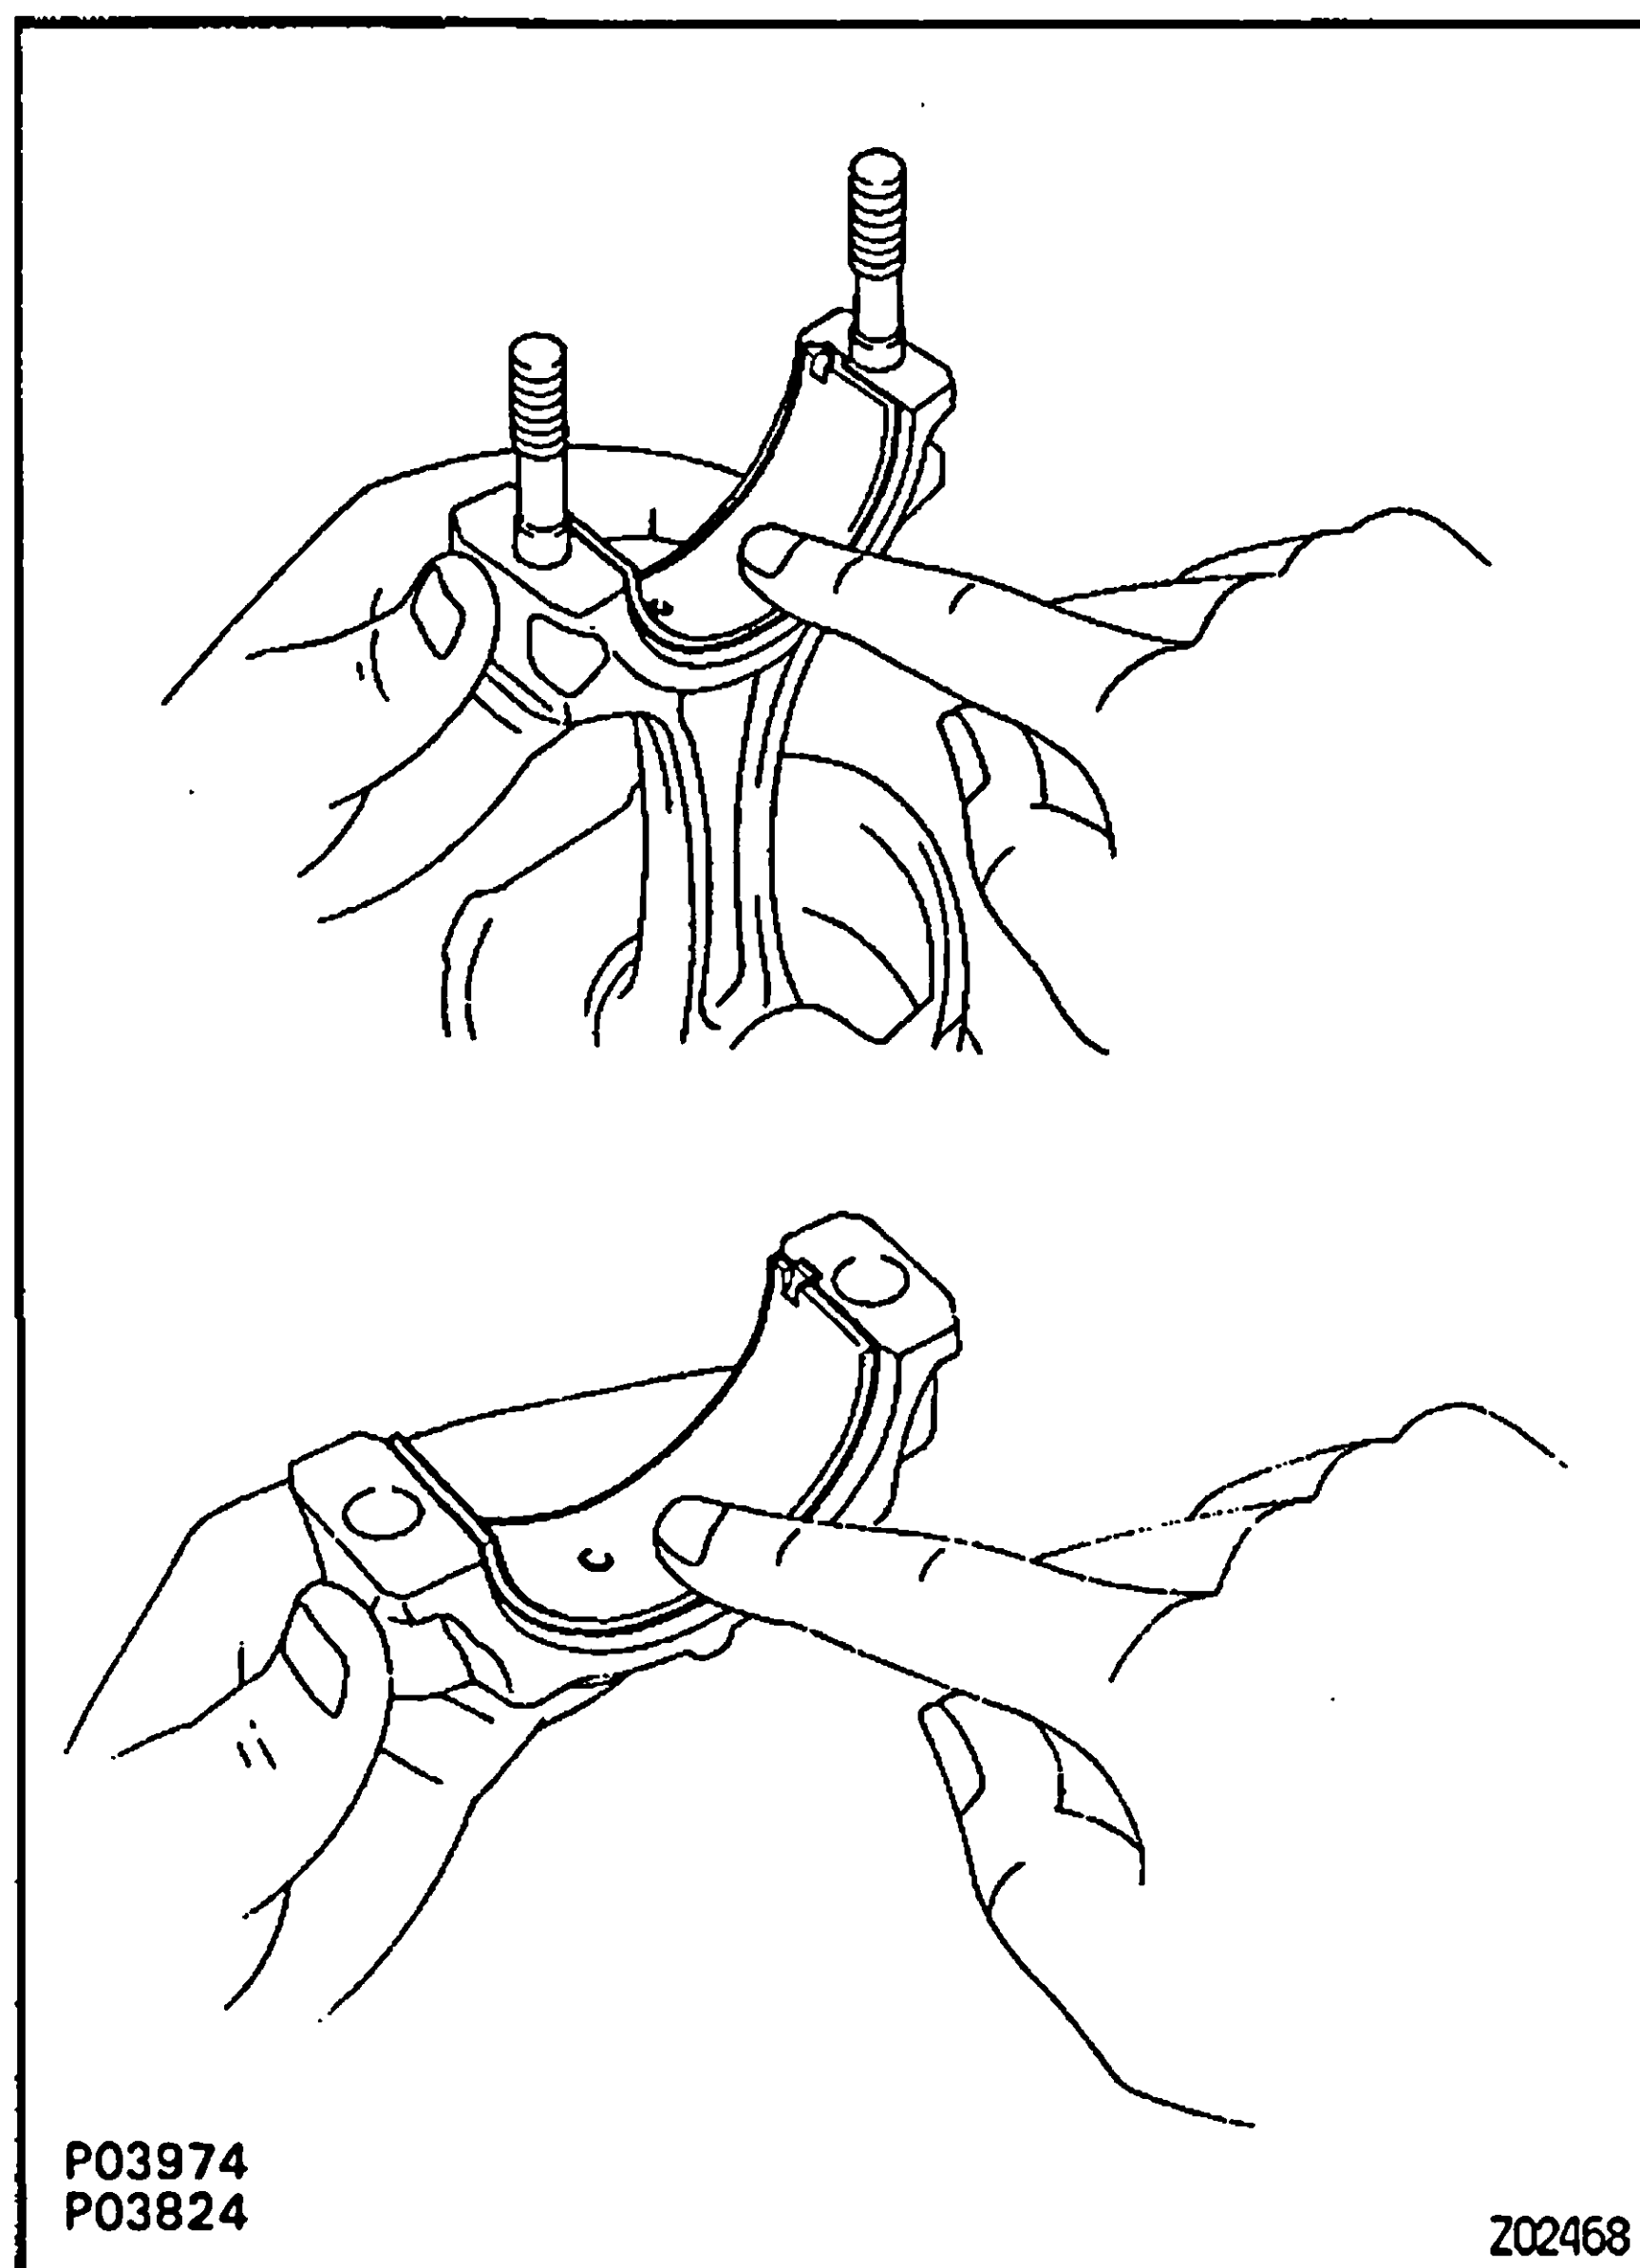

3. INSTALL BEARINGS

- (a) Align the bearing claw with the groove of the connecting rod or connecting cap.
- (b) Install the bearings in the connecting rod and connecting rod cap.

CYLINDER BLOCK ASSEMBLY


(See page EG-89)

HINT:

- Thoroughly clean all parts to be assembled.
- Before installing the parts, apply new engine oil to all sliding and rotating surfaces.
- Replace all gaskets, O-rings and oil seals with new parts.

EG


1. INSTALL CYLINDER BLOCK ORIFICE

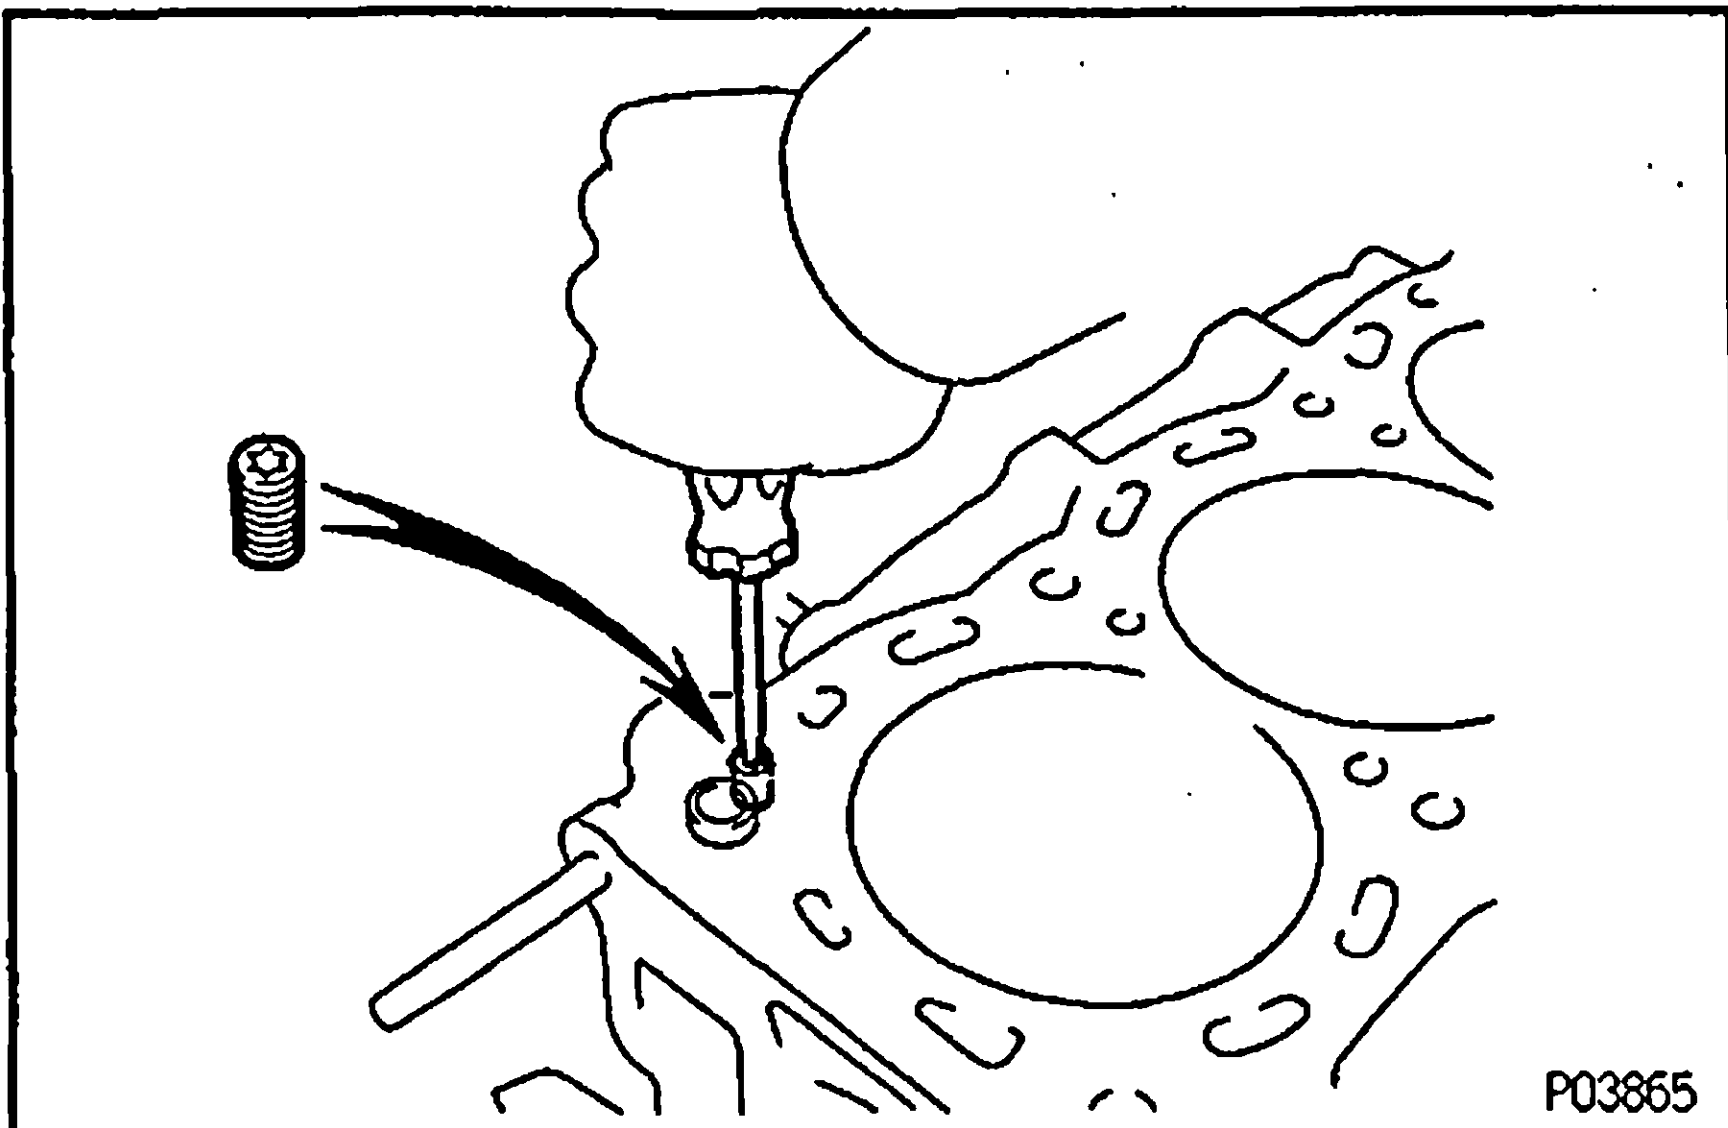

2. INSTALL OIL NOZZLES AND CHECK VALVES


- Align the pin of the oil nozzle with the pin hole of the cylinder block.
- Install the oil nozzle with the check valve. Install the six oil nozzles and check valves.

Torque: 25 N·m (250 kgf·cm, 18 ft·lbf)

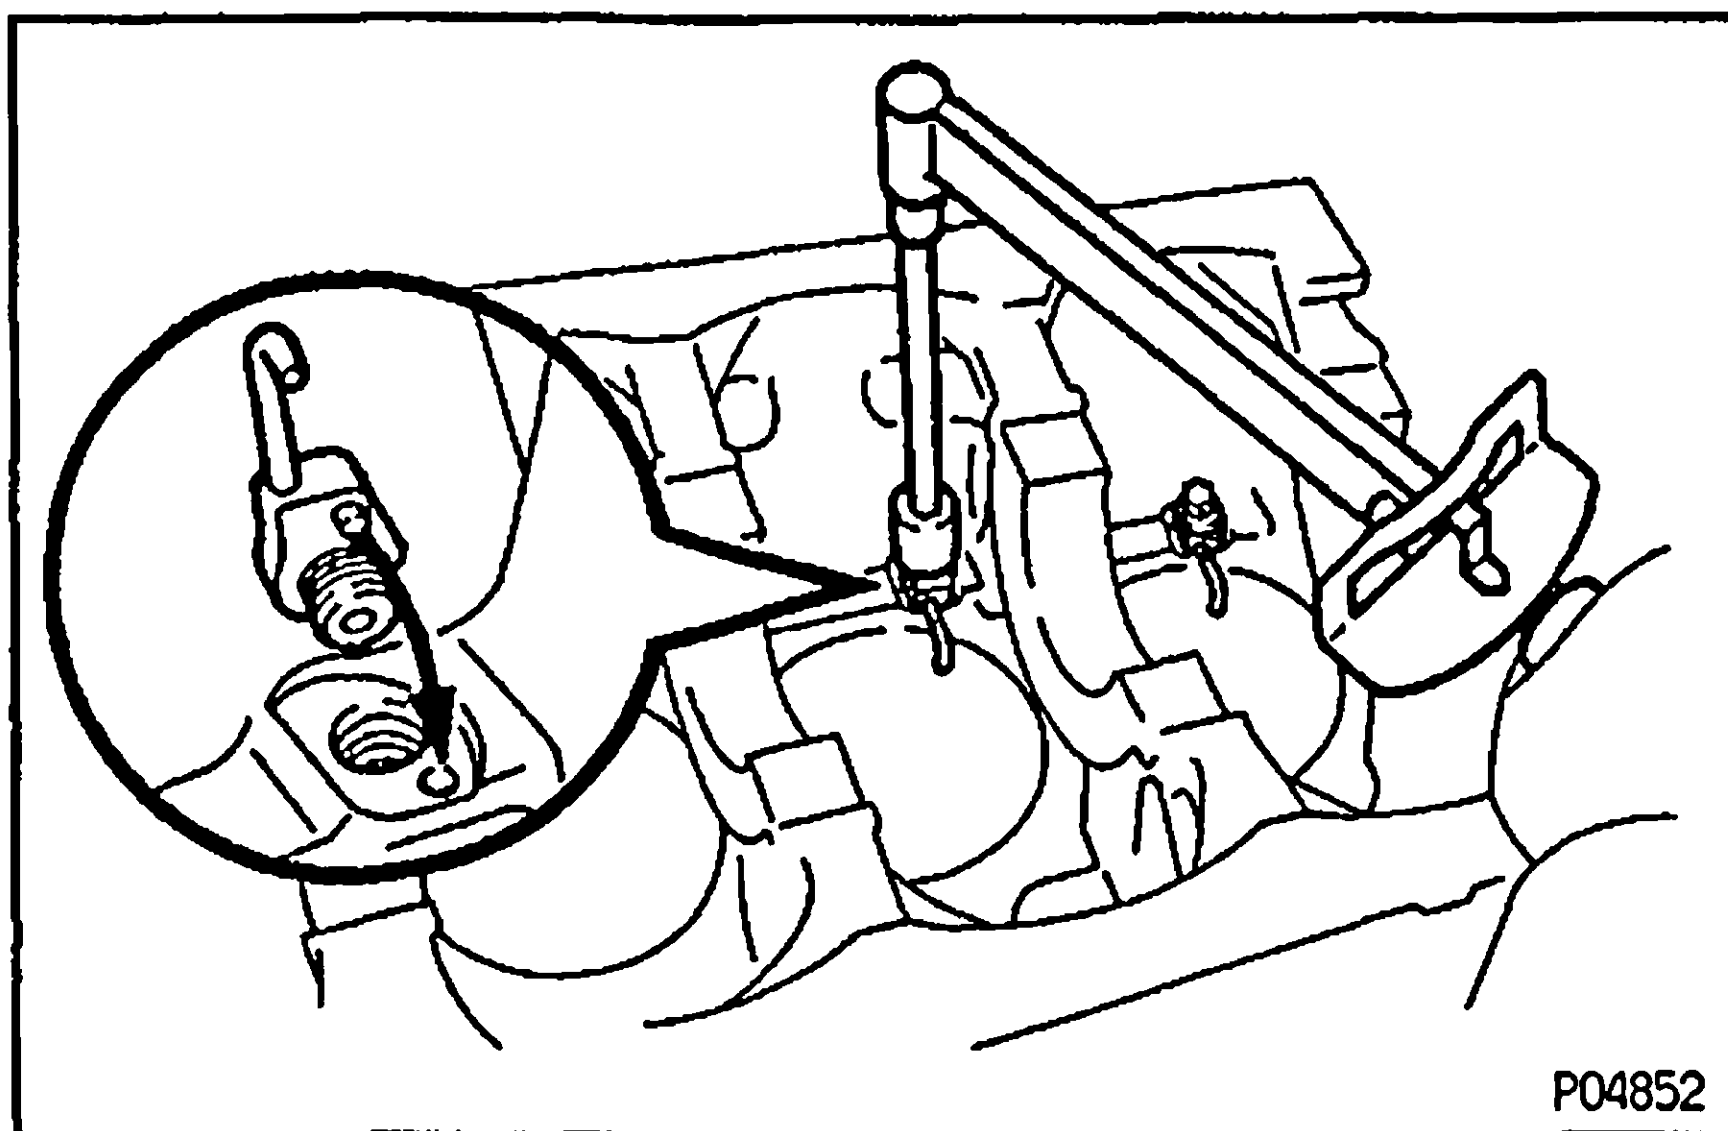


3. INSTALL MAIN BEARINGS

- Align the bearing claw with the claw groove of the cylinder block, and push in the seven upper bearings.

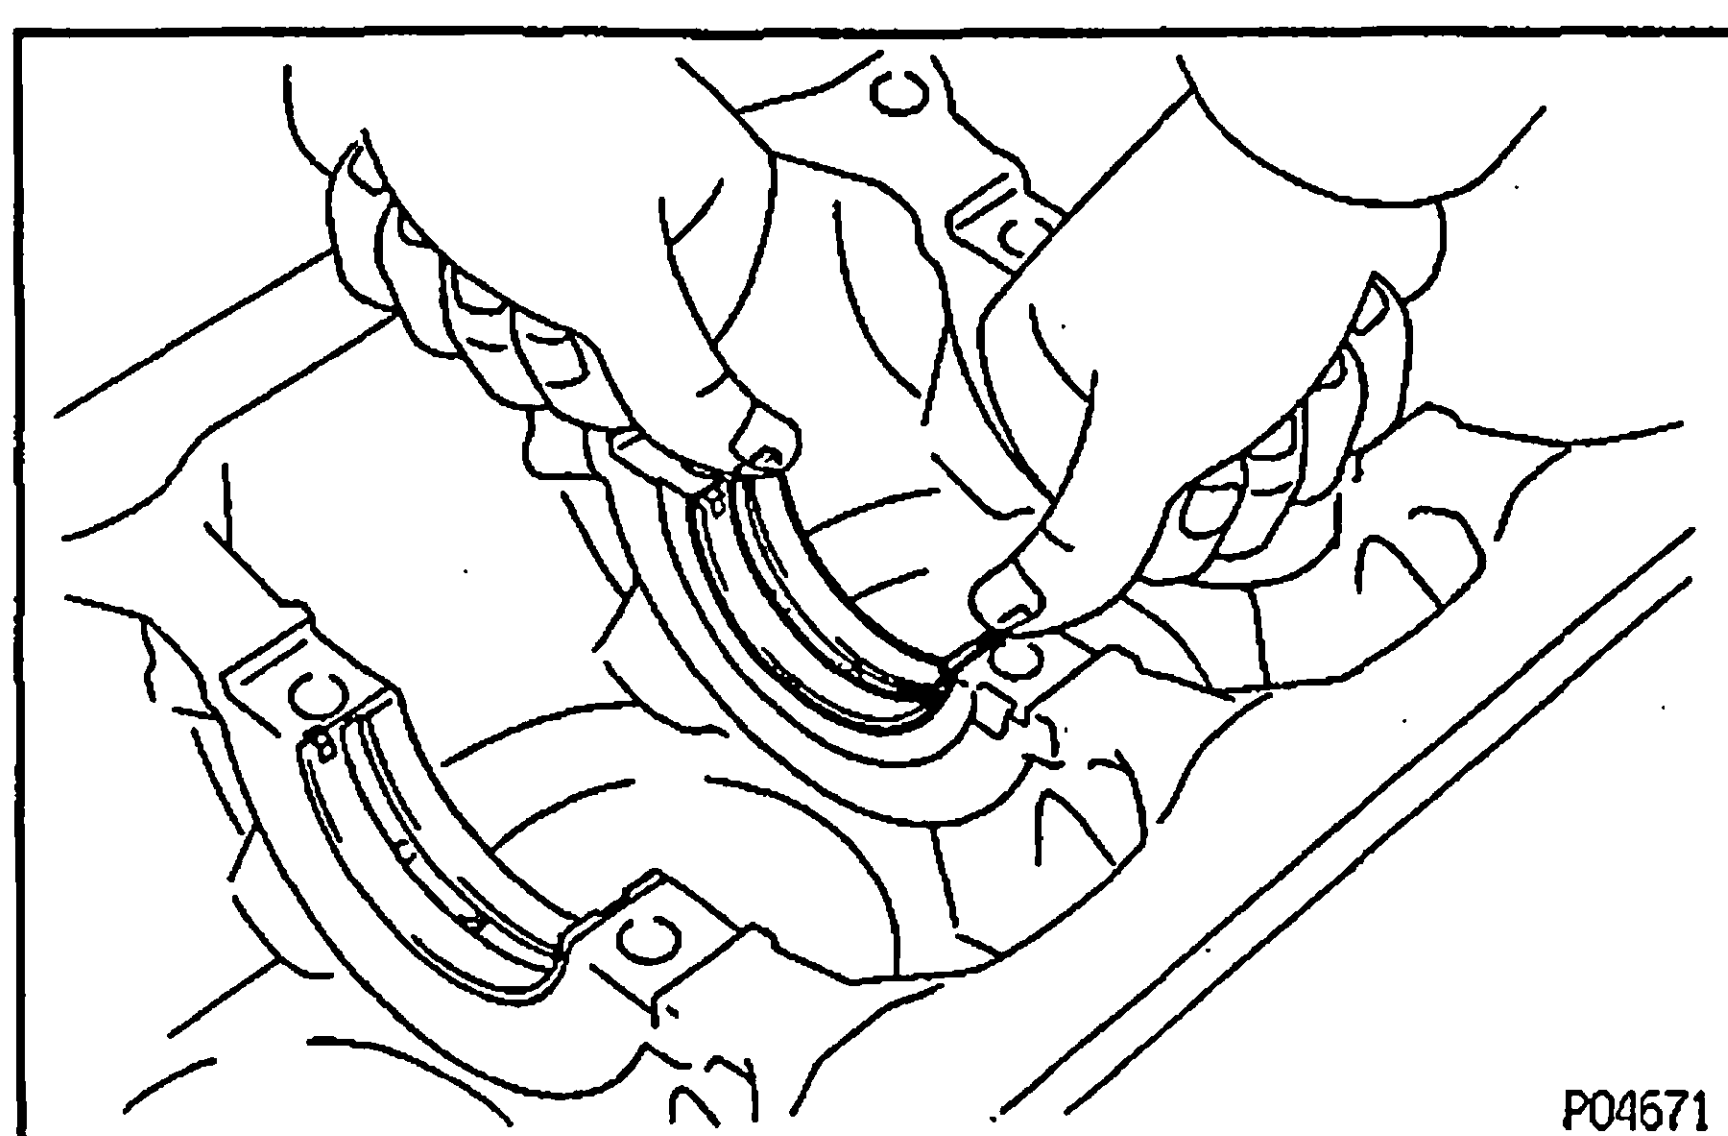



No.4 Bearing Cap

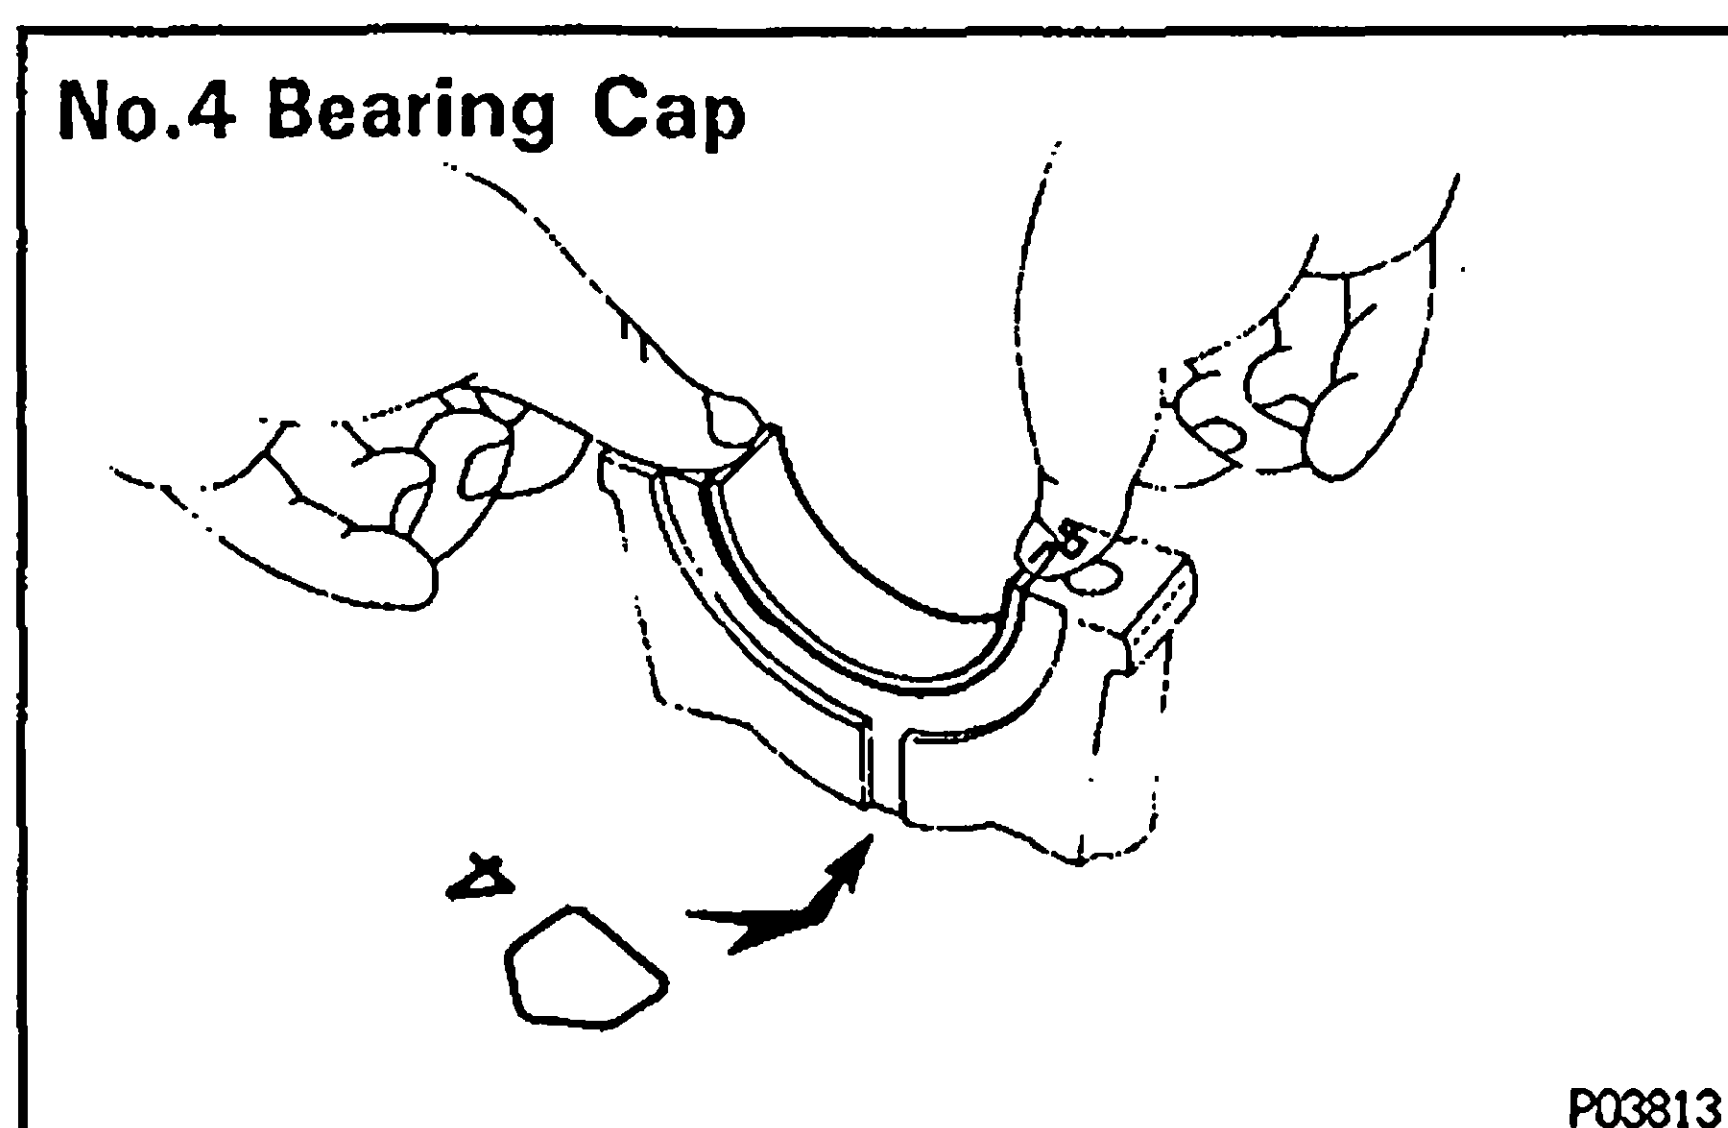

- Align the bearing claw with the claw groove of the main bearing cap, and push in the seven lower bearings.


HINT: A number is marked on each main bearing cap to indicate the installation position.

EG

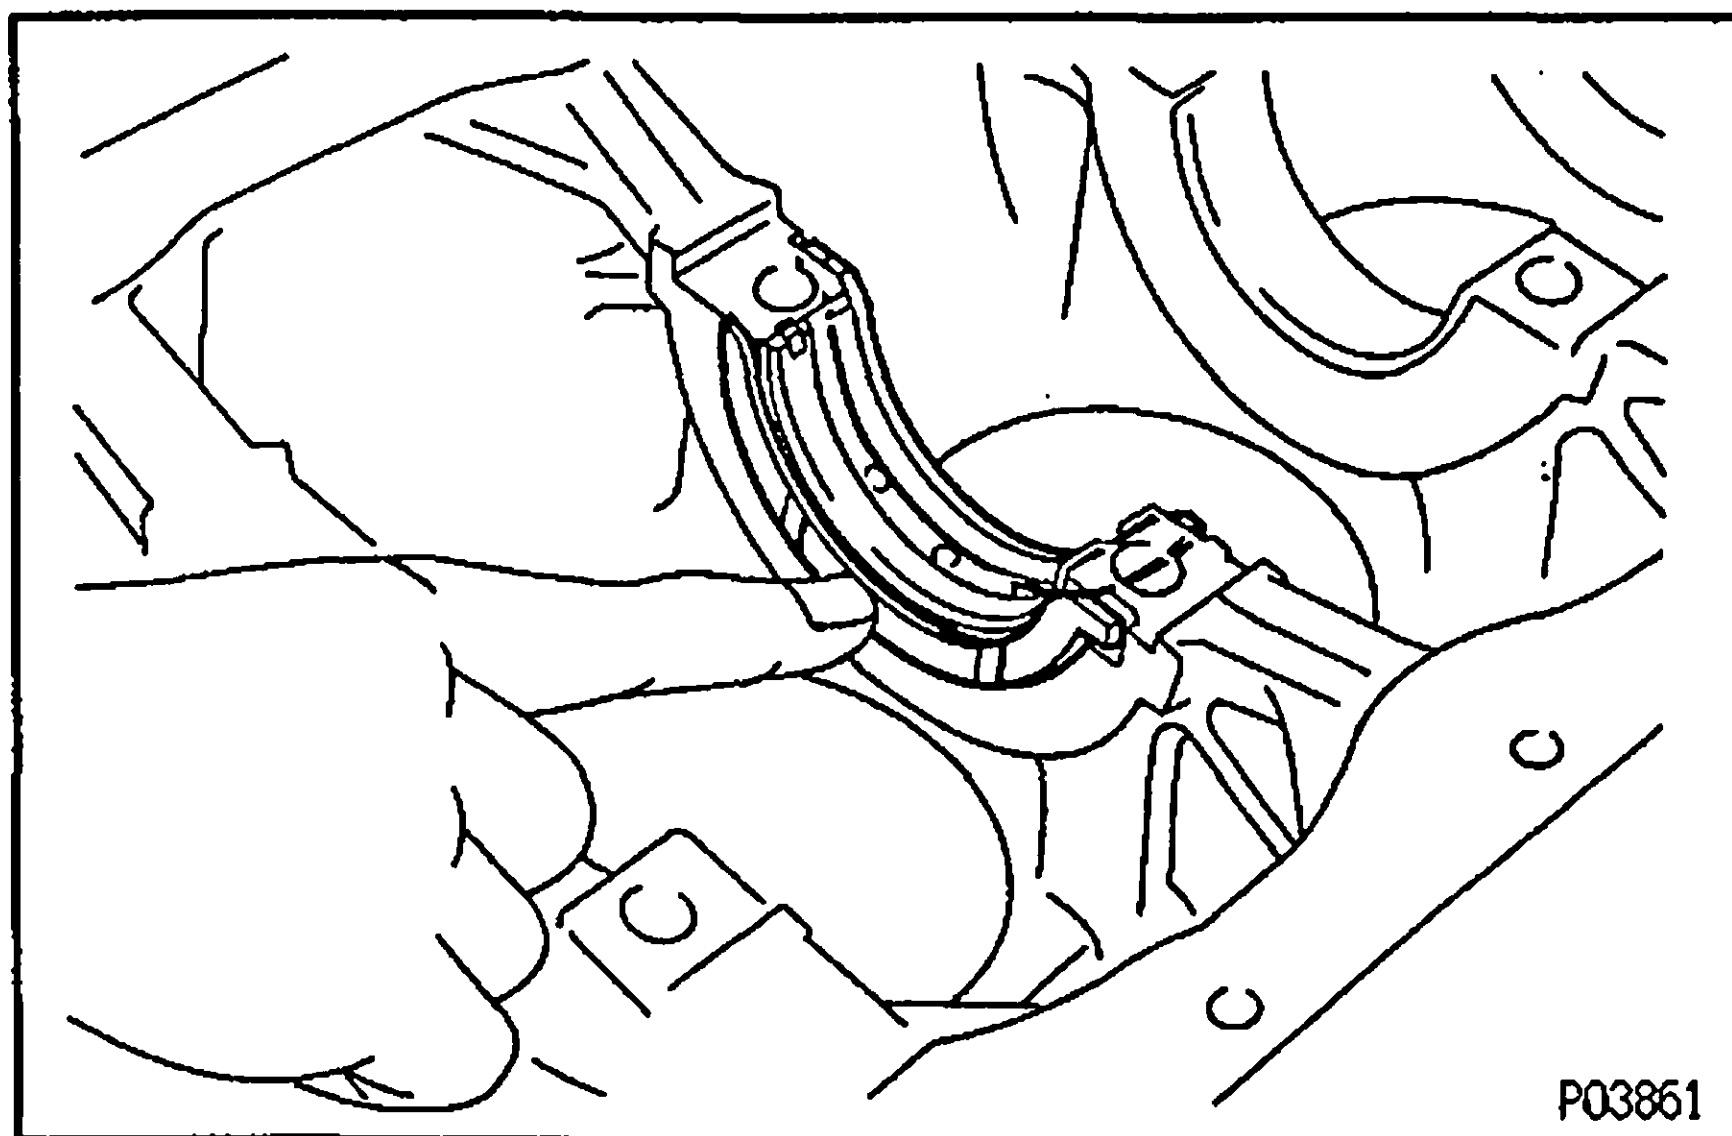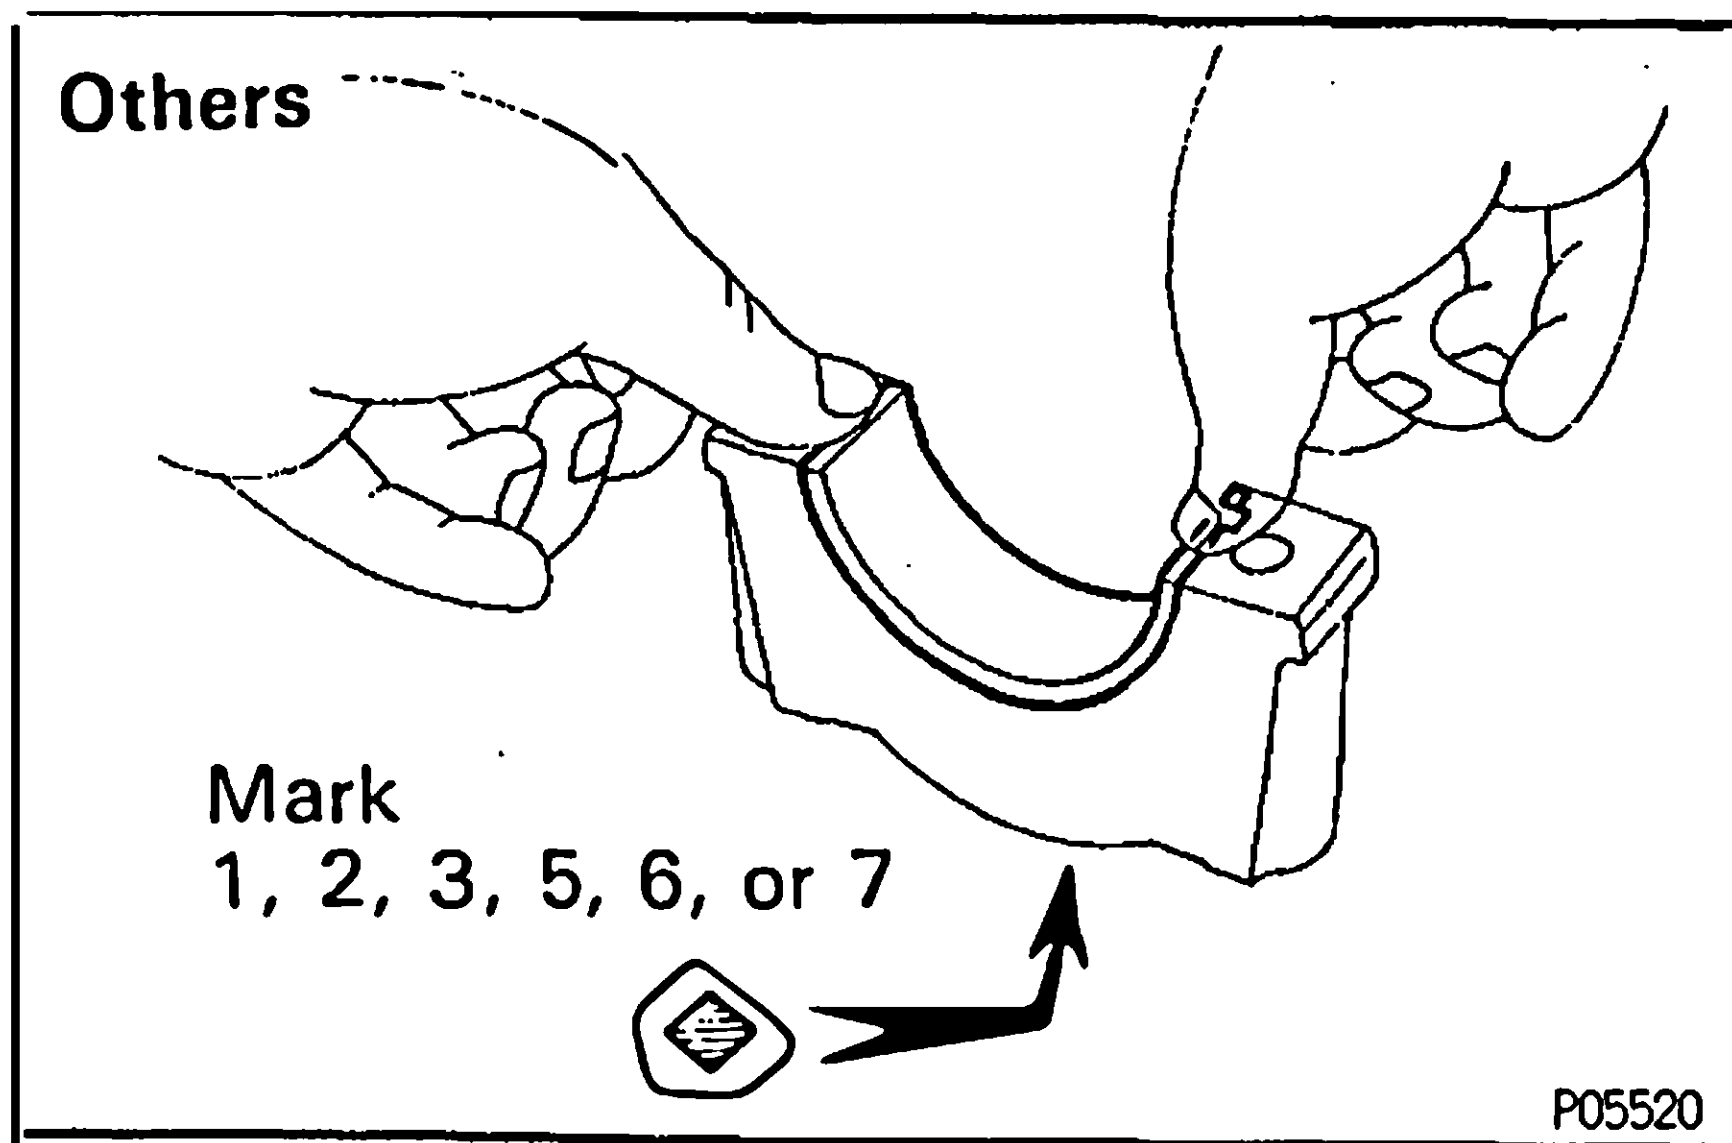


4. INSTALL UPPER THRUST WASHERS

Install the two thrust washers under the No.4 journal position of the cylinder block with the oil grooves facing outward.

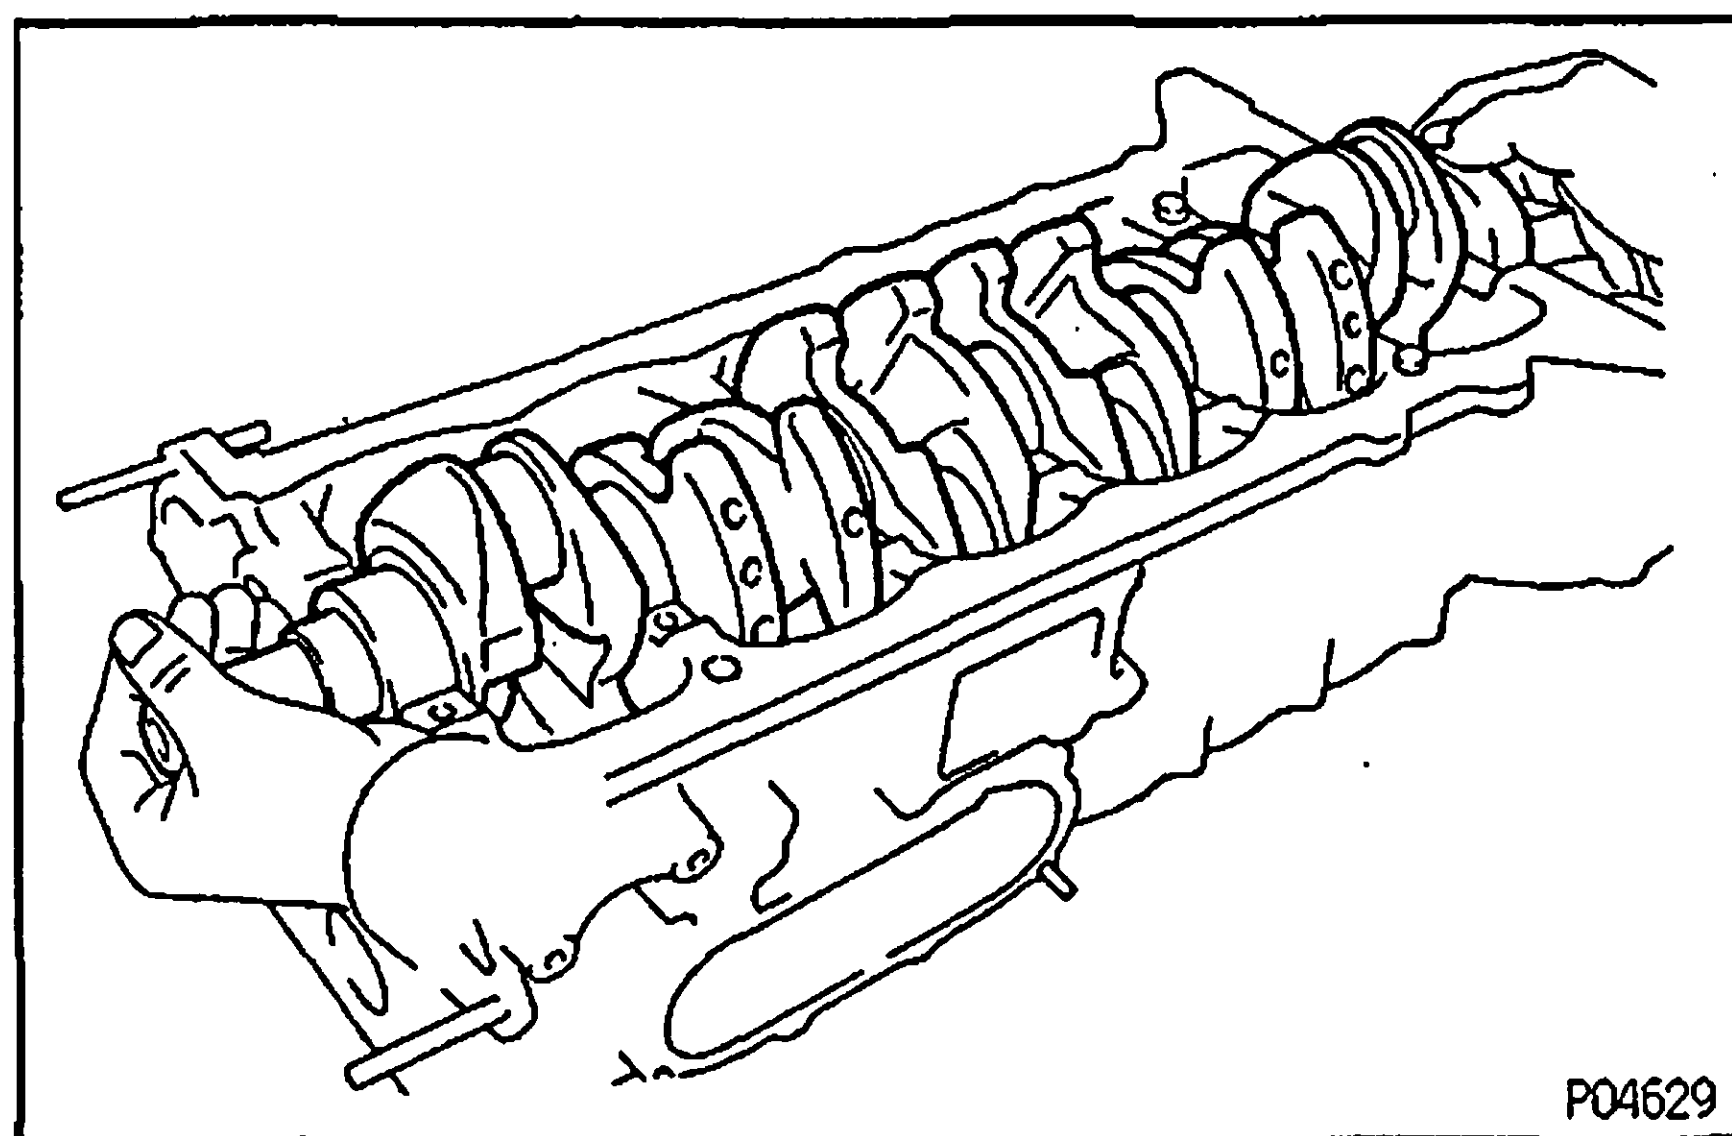

5. PLACE CRANKSHAFT ON CYLINDER BLOCK

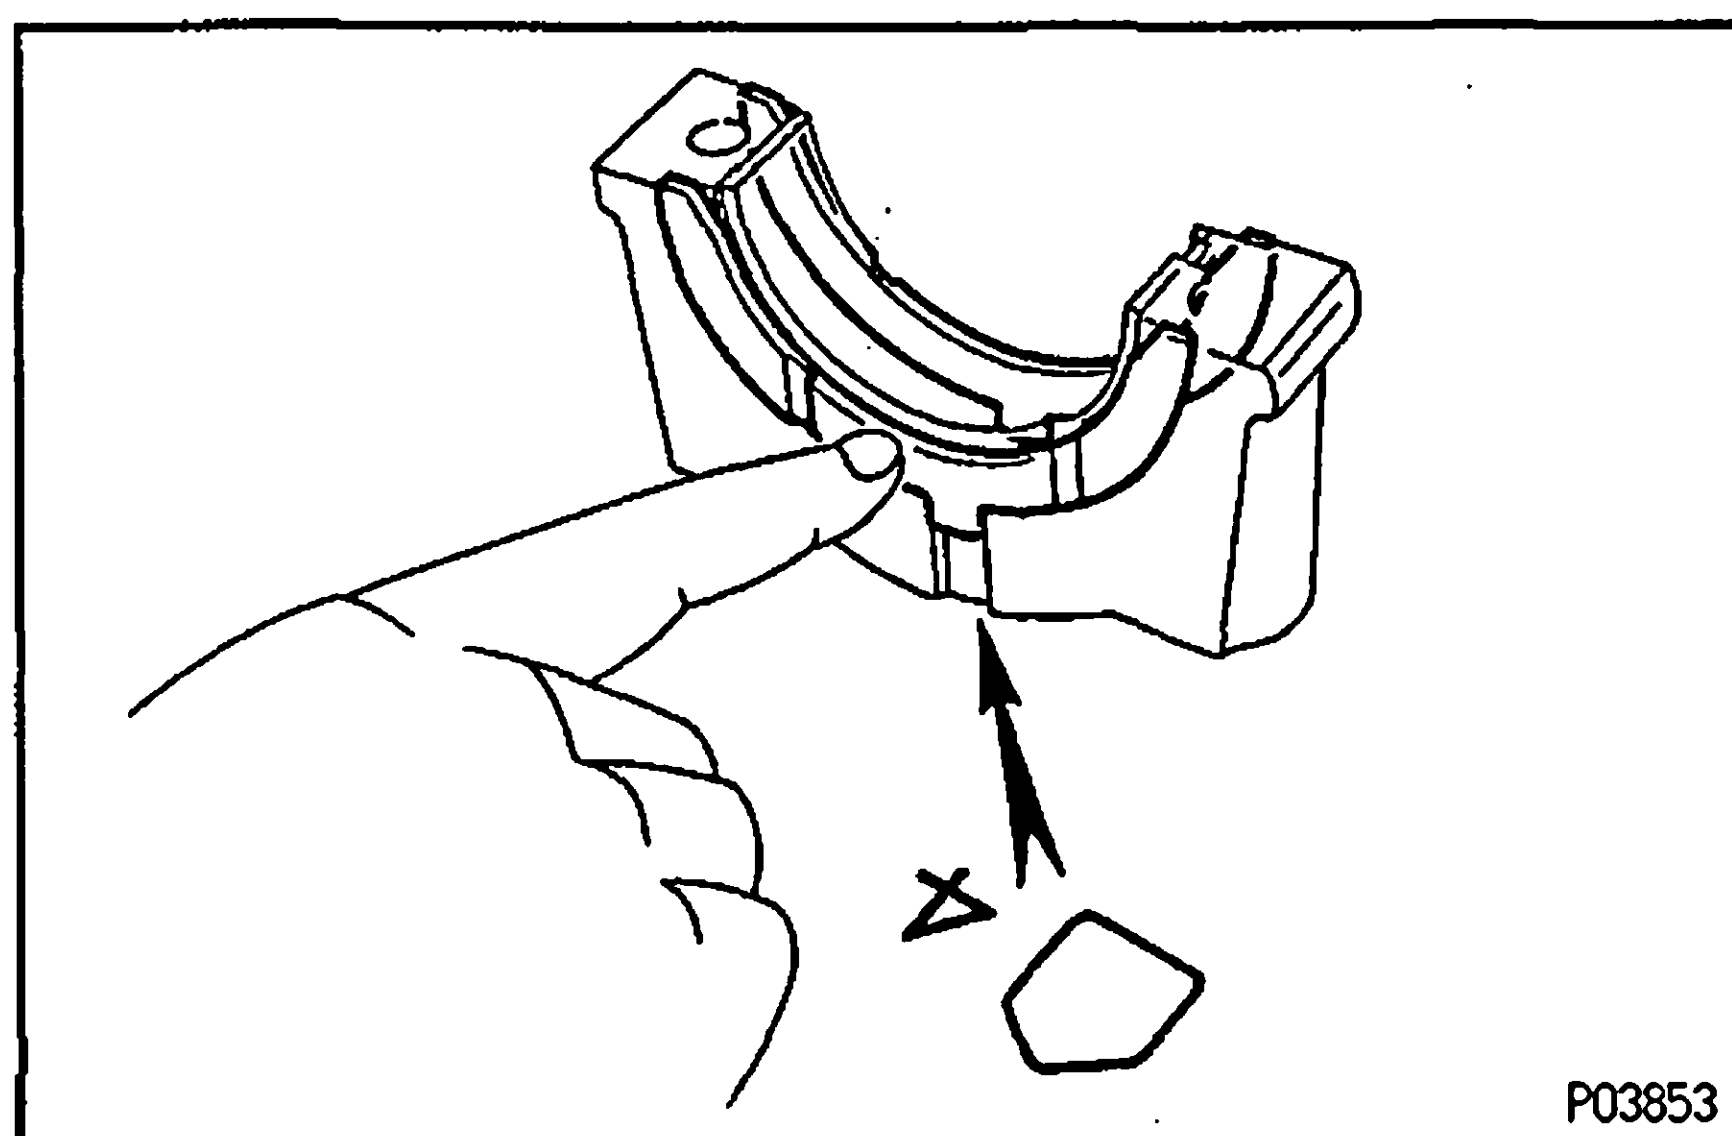


6. INSTALL MAIN BEARING CAPS AND LOWER THRUST WASHERS

A. Place main bearing cap and lower thrust washers on cylinder block

(a) Install the two thrust washers on the No.4 bearing cap with the grooves facing outward.

(b) Install the seven main bearing caps in their proper locations.


HINT: Each bearing cap has a number and front mark.

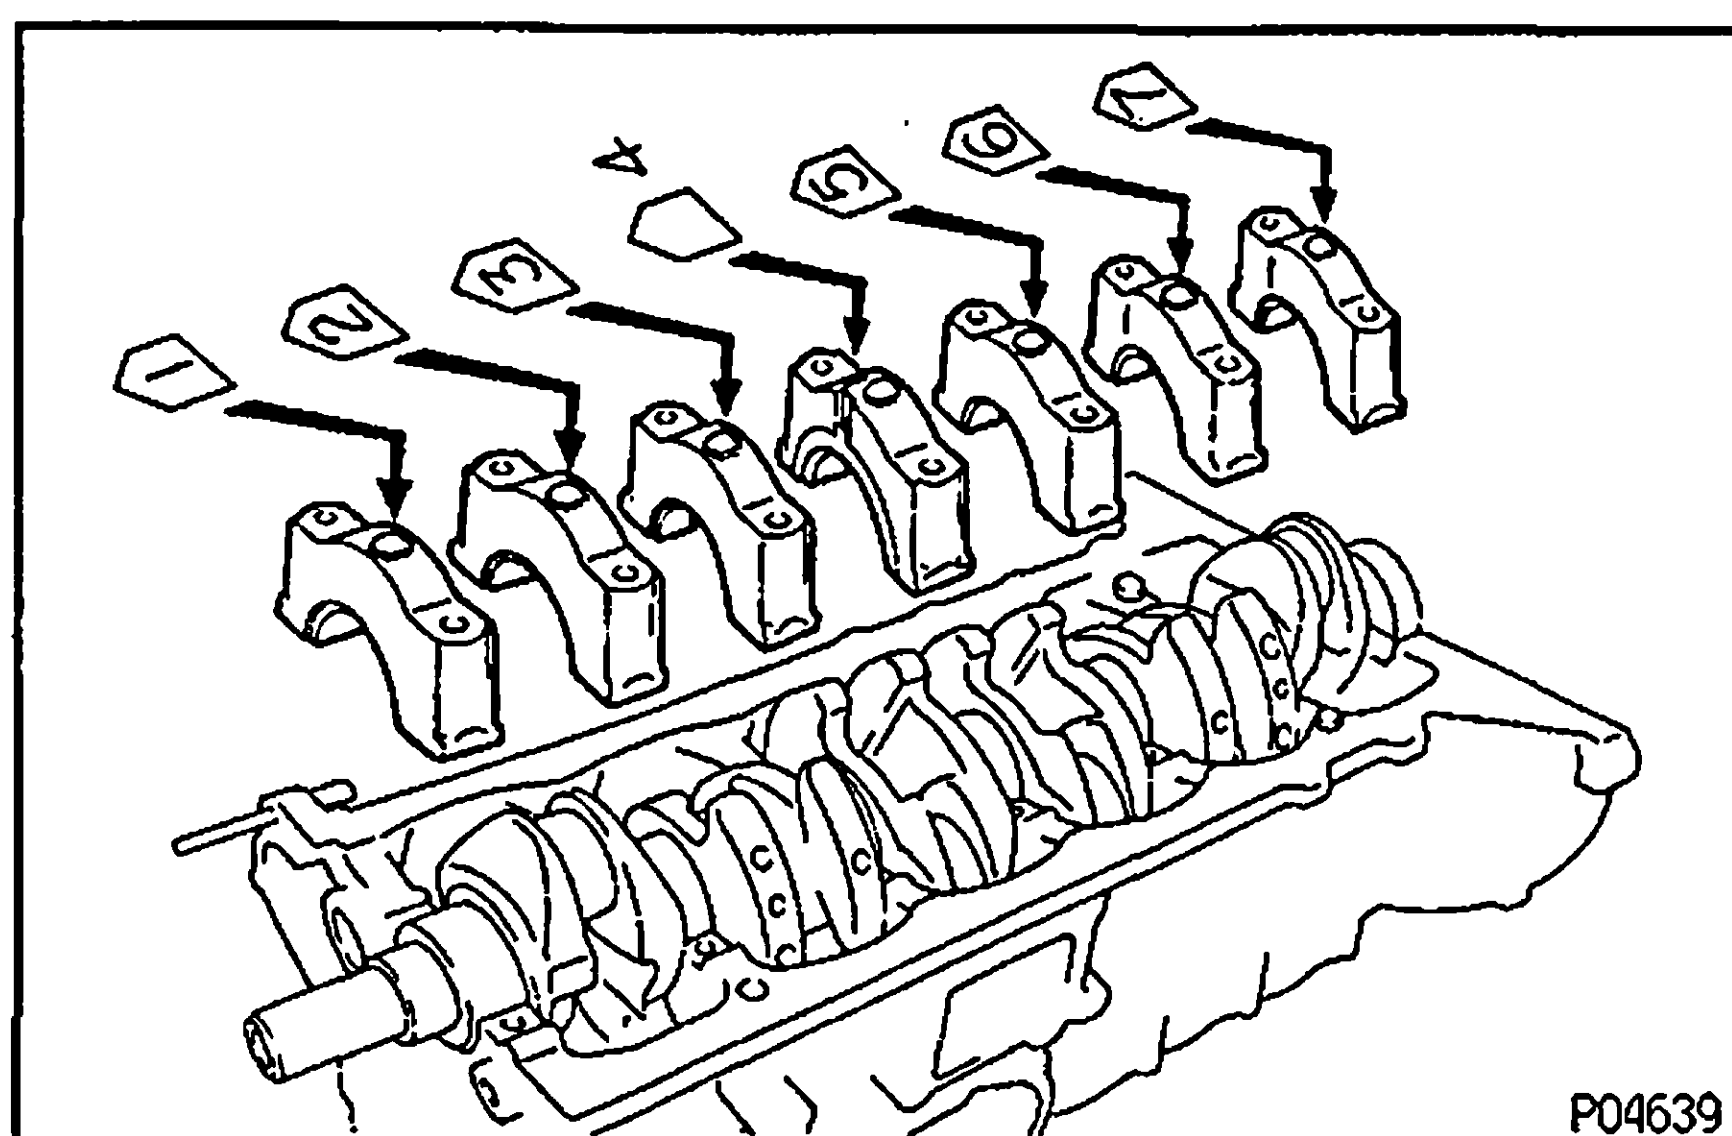

B. Install main bearing cap bolts**HINT:**

- The main bearing cap bolts are tightened in two progressive steps (steps (b) and (d)).
- If any one of the main bearing cap bolts is broken or deformed, replace it.


EG

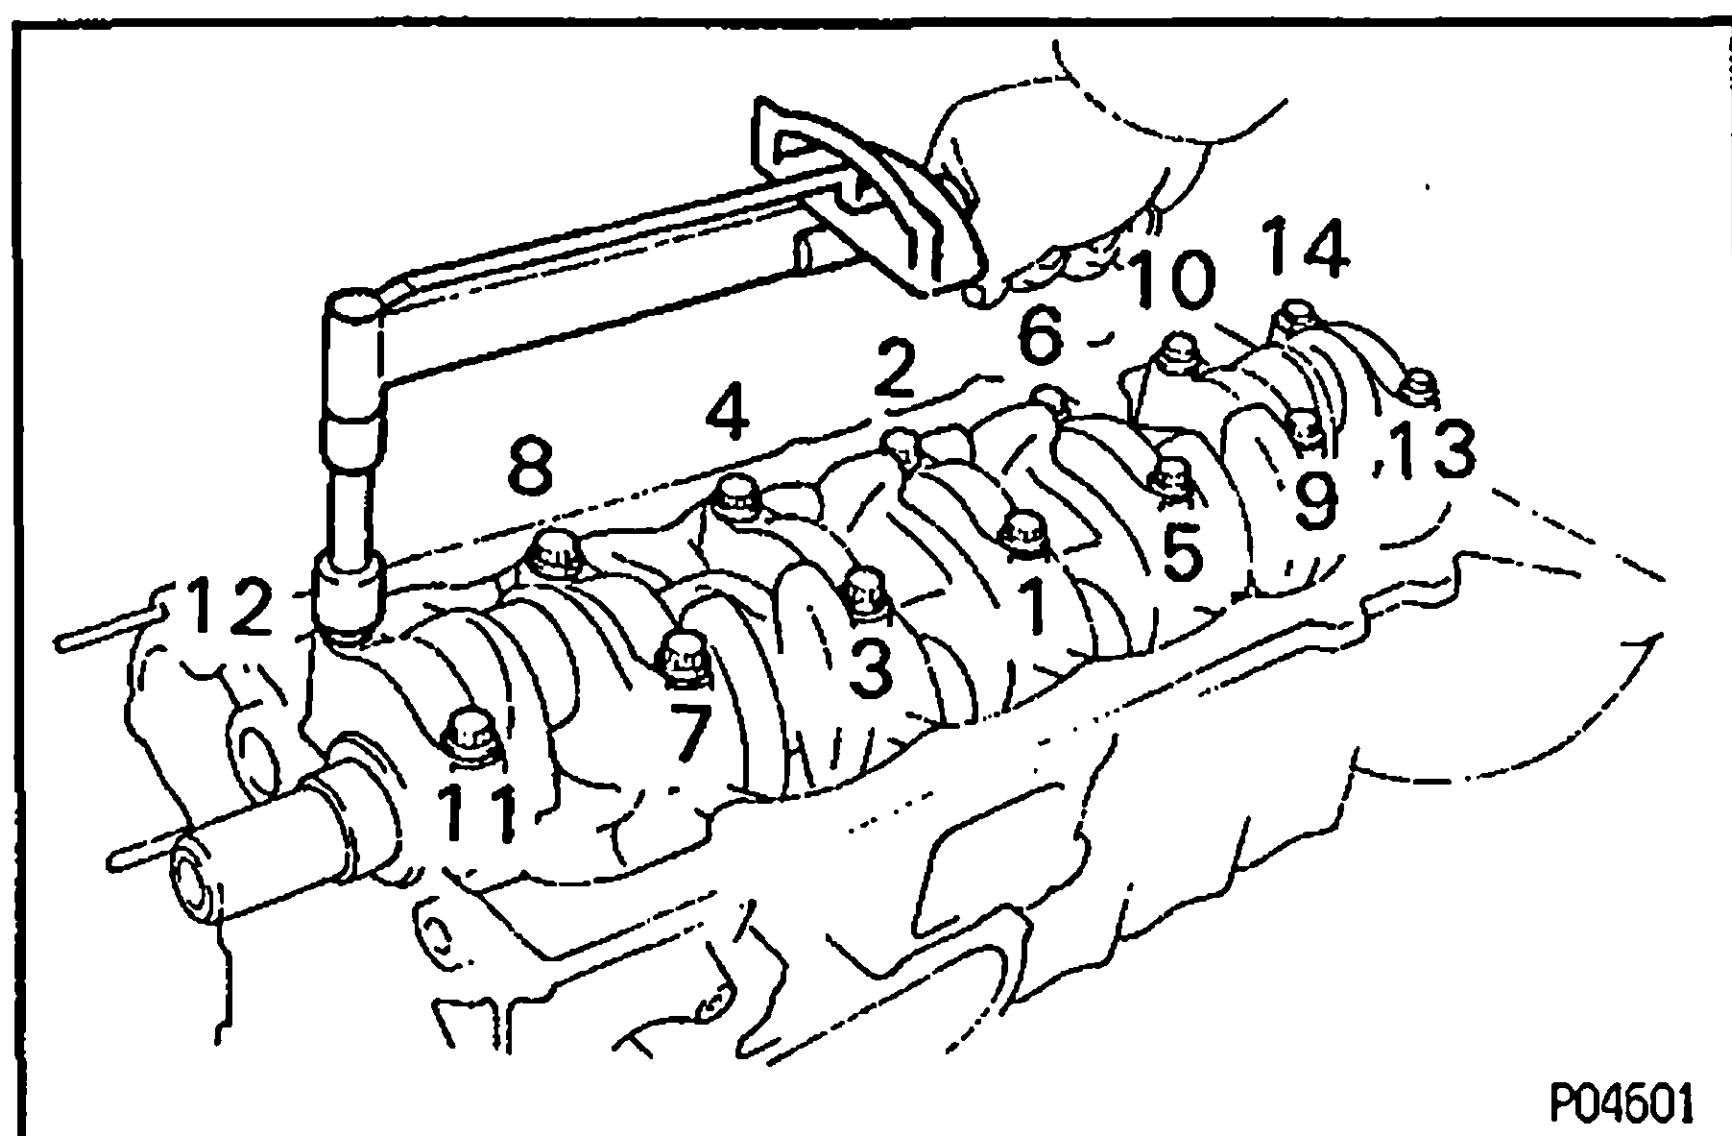


- Apply a light coat of engine oil on the threads and under the heads of the main bearing cap bolts.
- Install and uniformly tighten the 14 bolts of the main bearing cap bolts in several passes, in the sequence shown.

Torque: 74 N·m (750 kgf·cm, 54 ft·lbf)


If any one of the main bearing cap bolts does not meet the torque specification, replace the main bearing cap bolt.

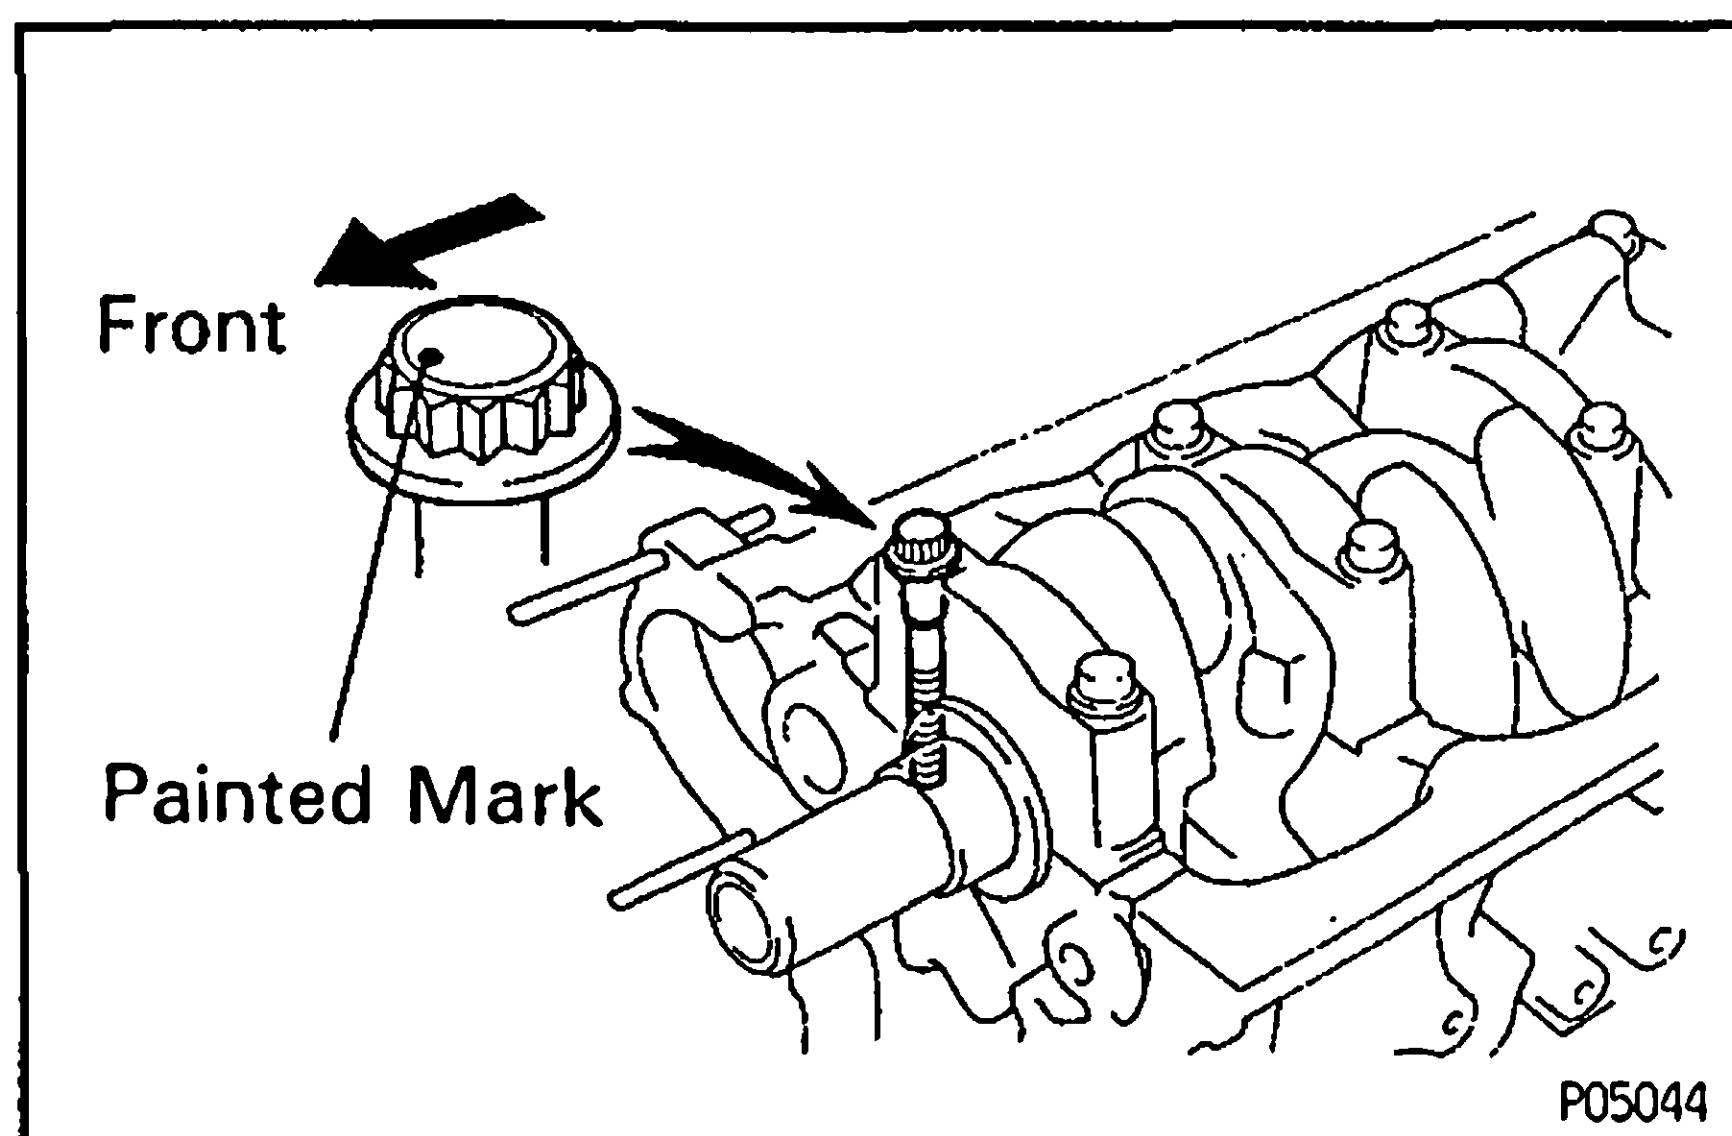


- Mark the front of the main bearing cap bolt with paint.

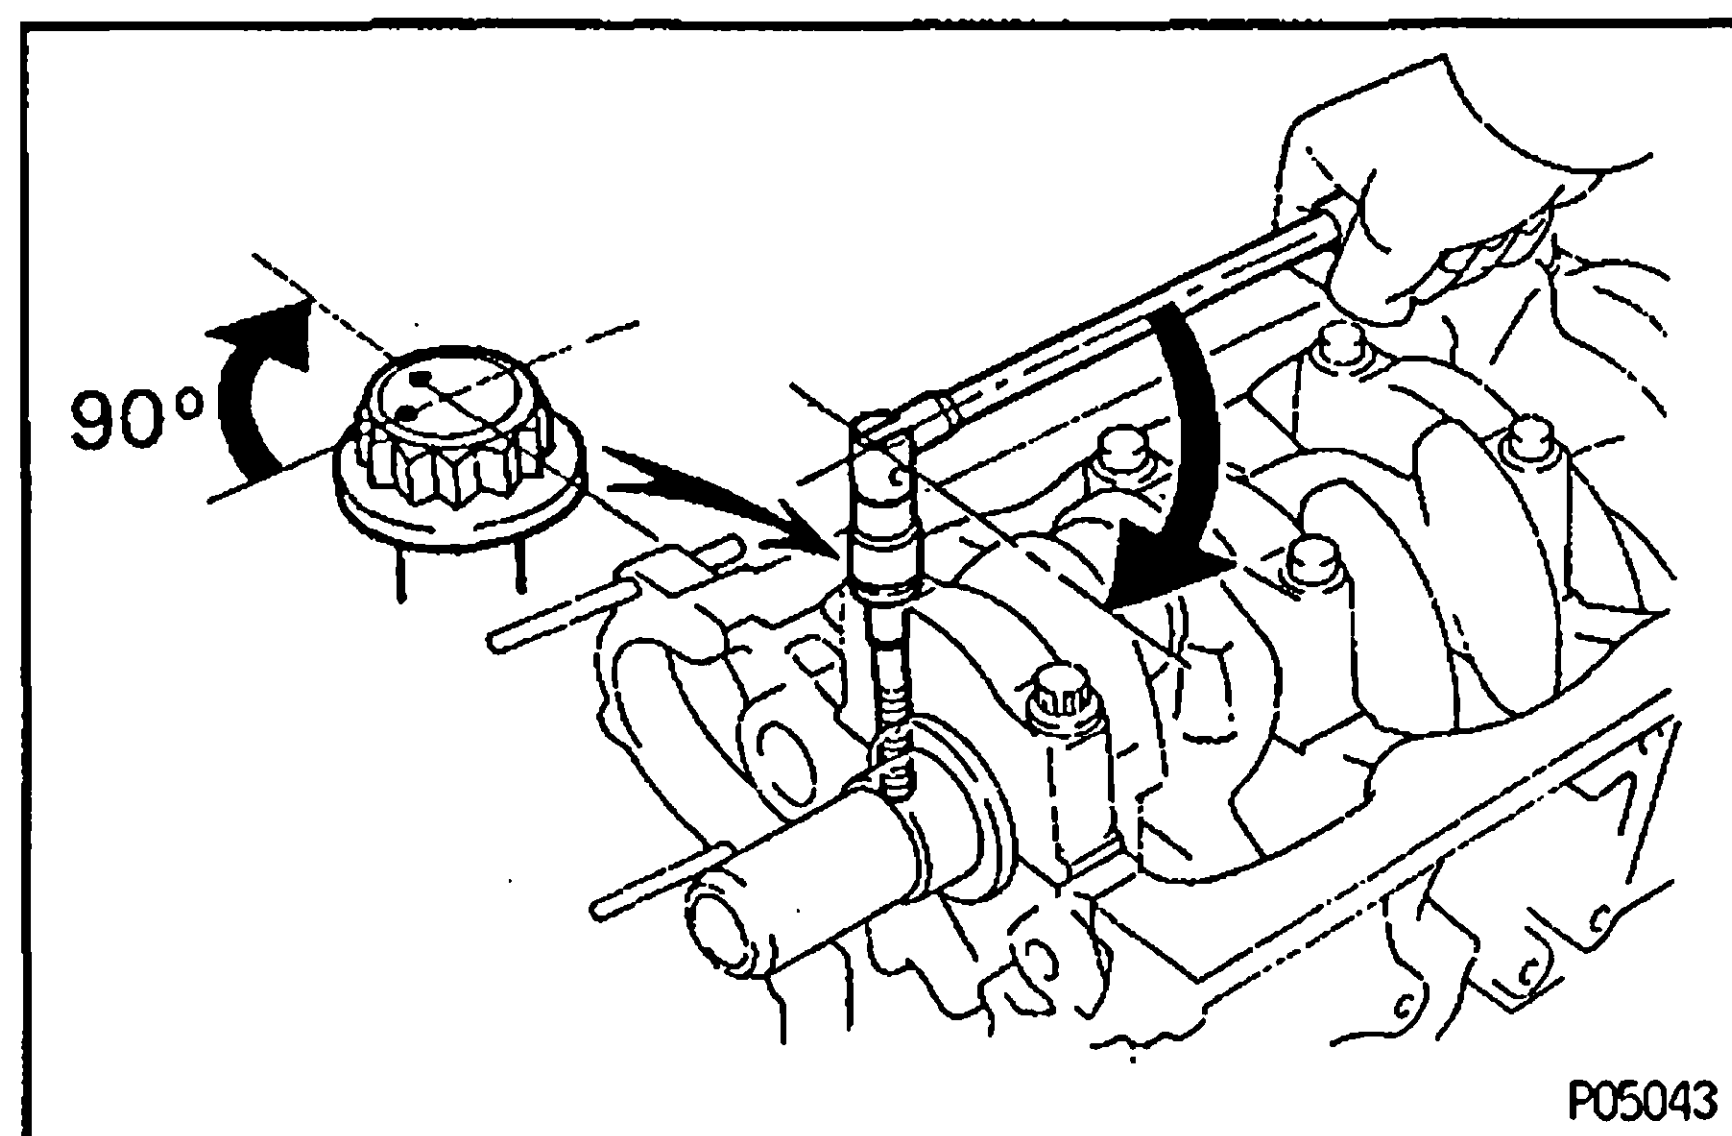


- Retighten the main bearing cap bolts 90° in the numerical order shown above.
- Check that the painted mark is now at a 90° angle to the front.
- Check that the crankshaft turns smoothly.
- Check the crankshaft thrust clearance.
(See step 5 on page EG-95)

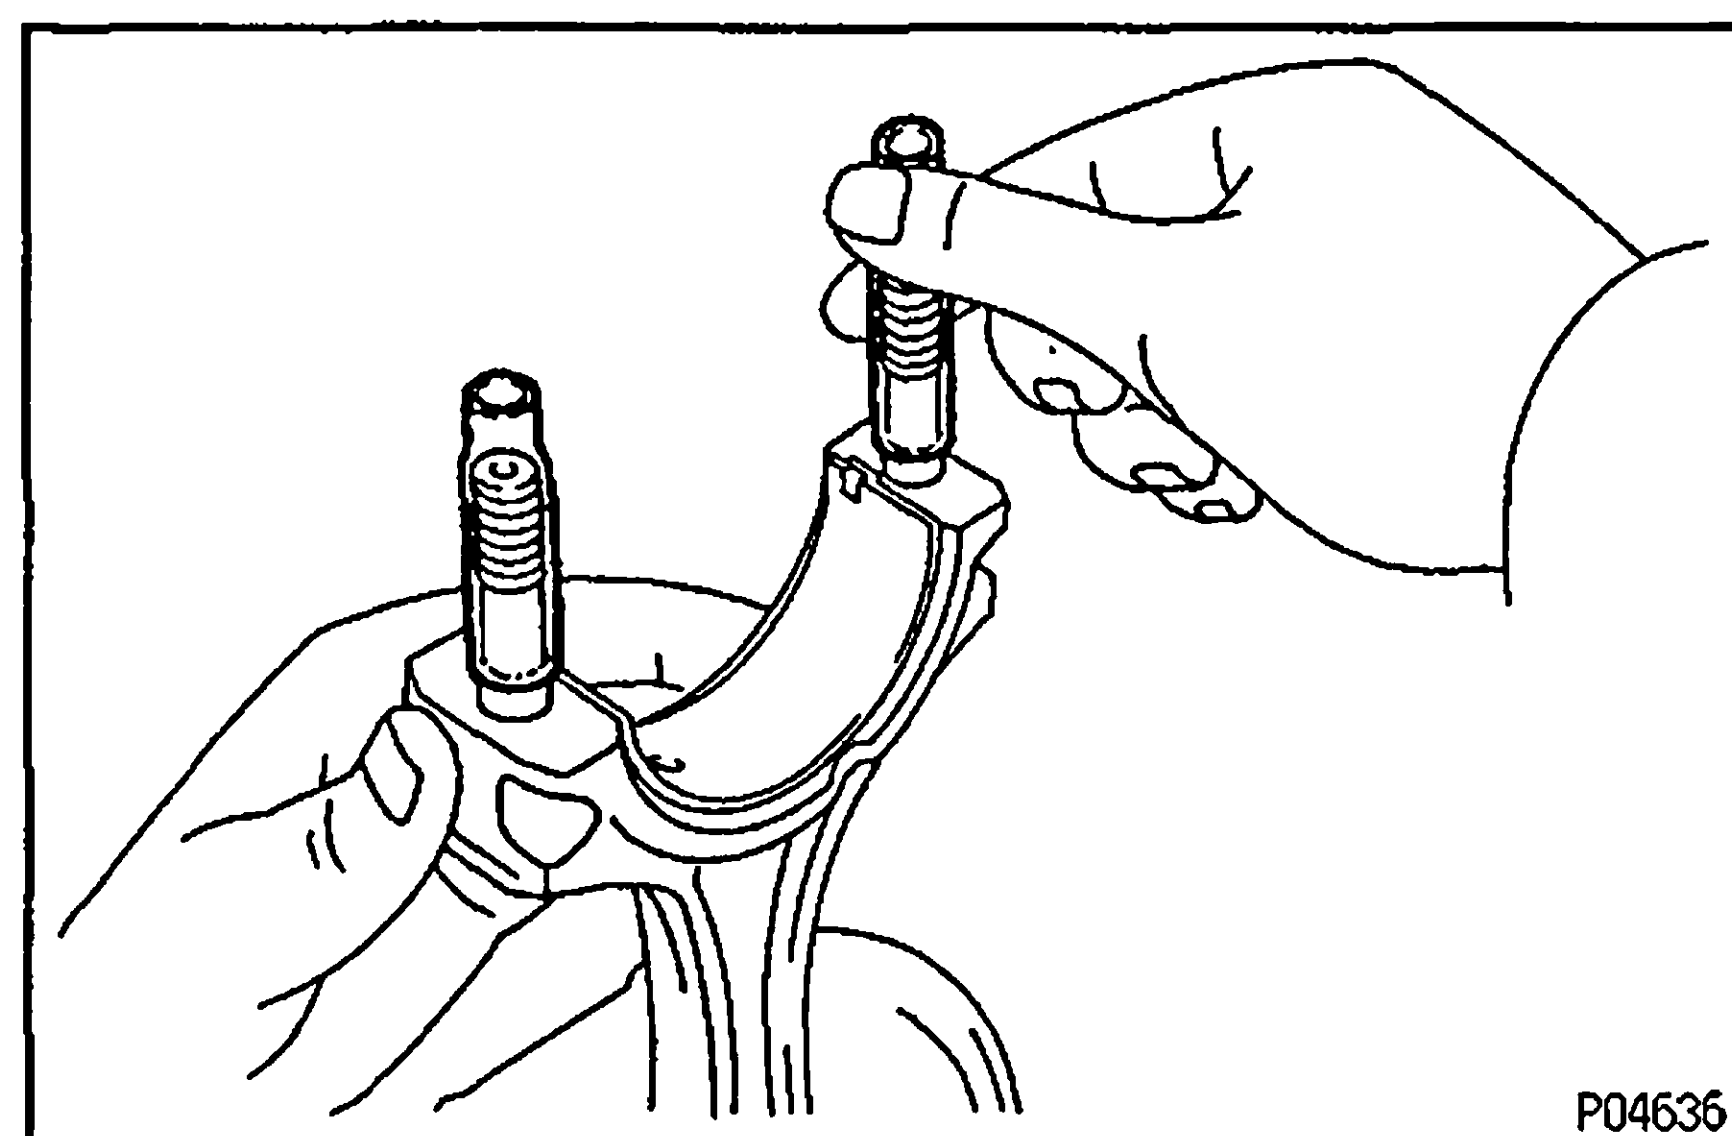**7. INSTALL PISTON AND CONNECTING ROD ASSEMBLIES**

- Cover the connecting rod bolts with a short piece of hose to protect the crankshaft from damage.

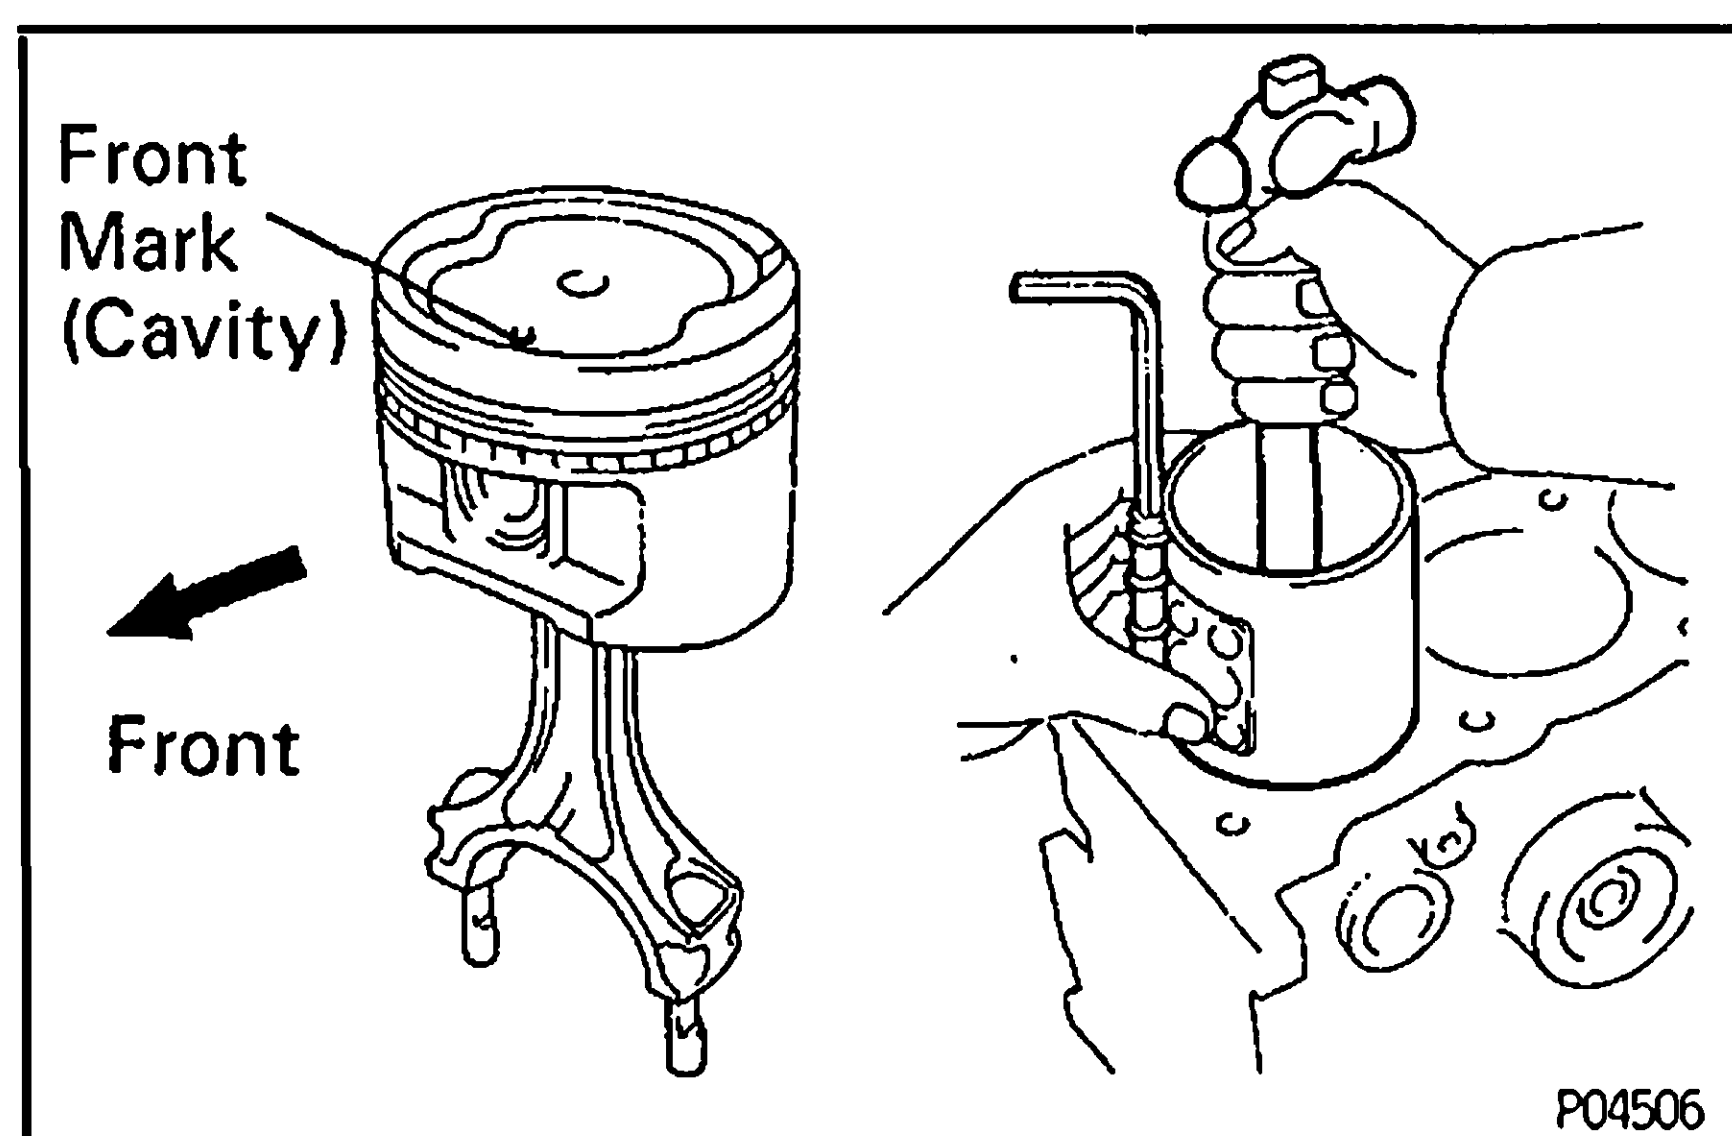

- (b) Using a piston ring compressor, push the correctly numbered piston and connecting rod assemblies into each cylinder with the front mark of the piston facing forward.

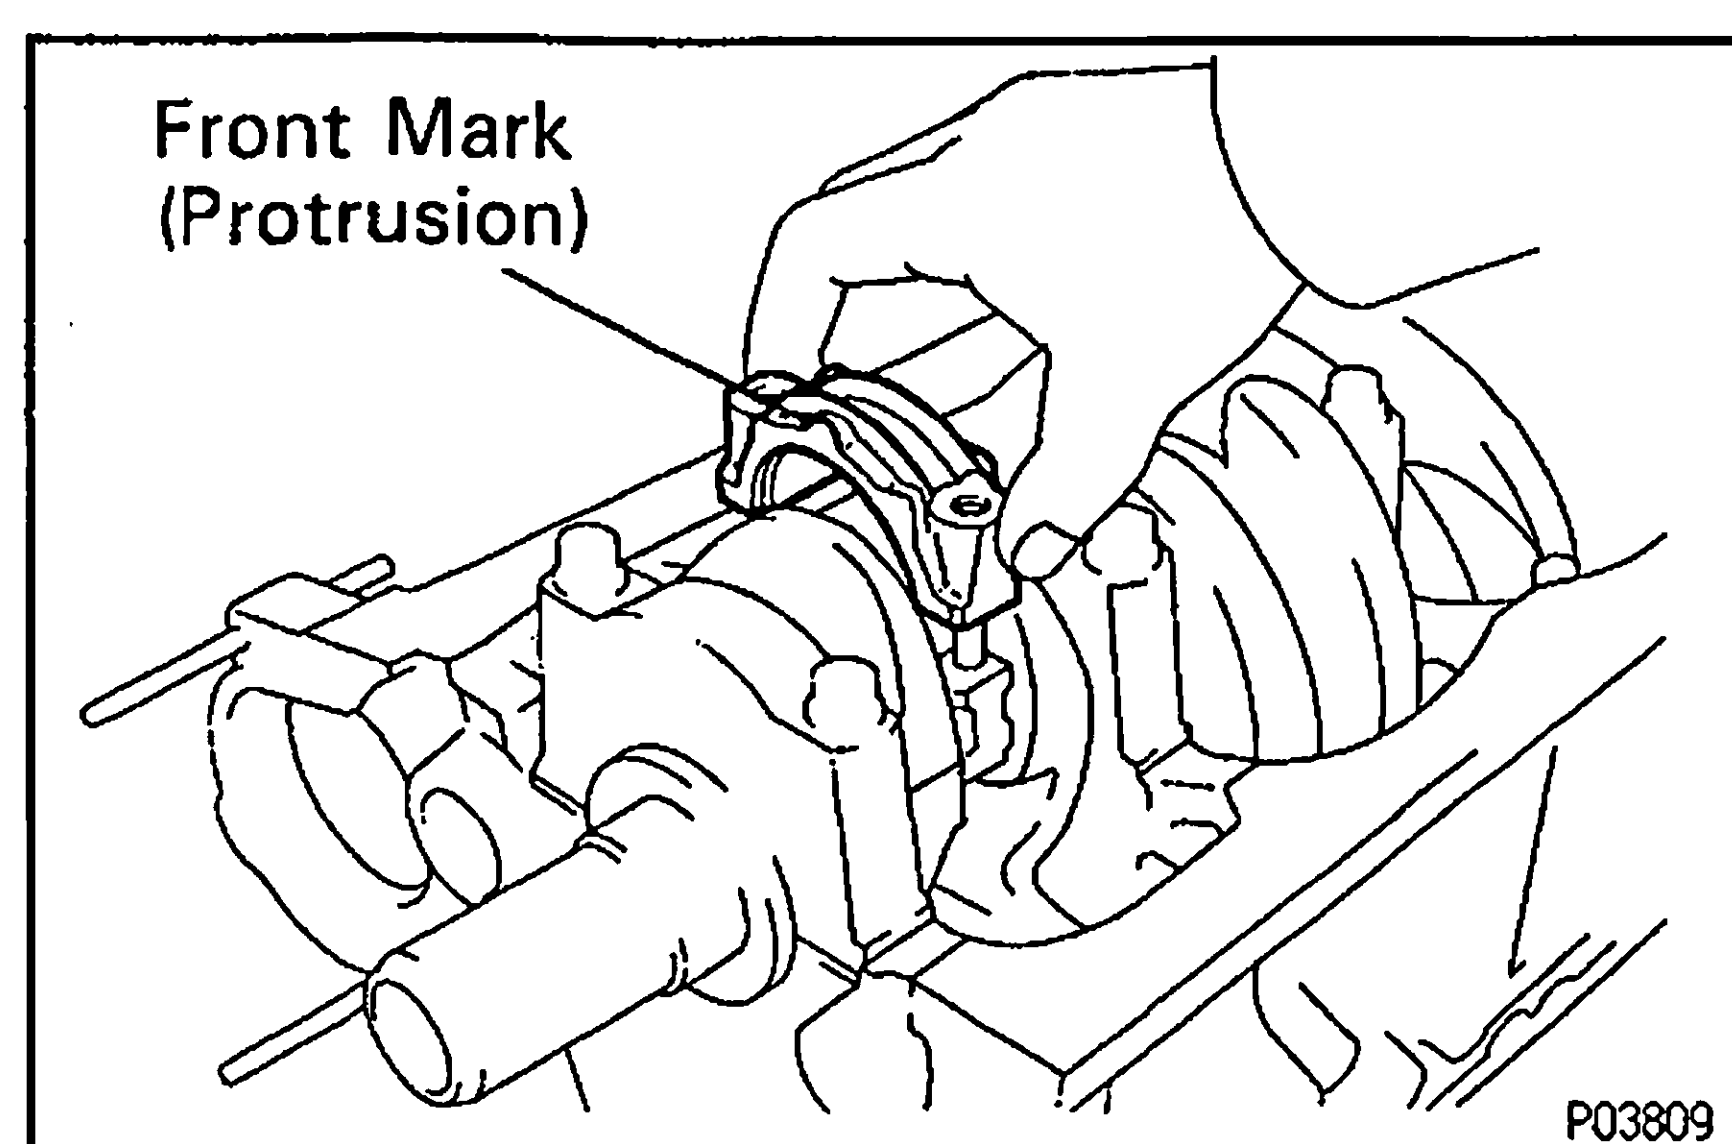

8. INSTALL CONNECTING ROD CAPS


A. Place connecting rod cap on connecting rod

- (a) Match the numbered connecting rod cap with the connecting rod.
- (b) Install the connecting rod cap with the front mark facing forward.

B. Install connecting rod cap nuts

HINT:


- The connecting rod cap nuts are tightened in two progressive steps (steps (b) and (d)).
- If any connecting rod bolt is broken or deformed, replace it.

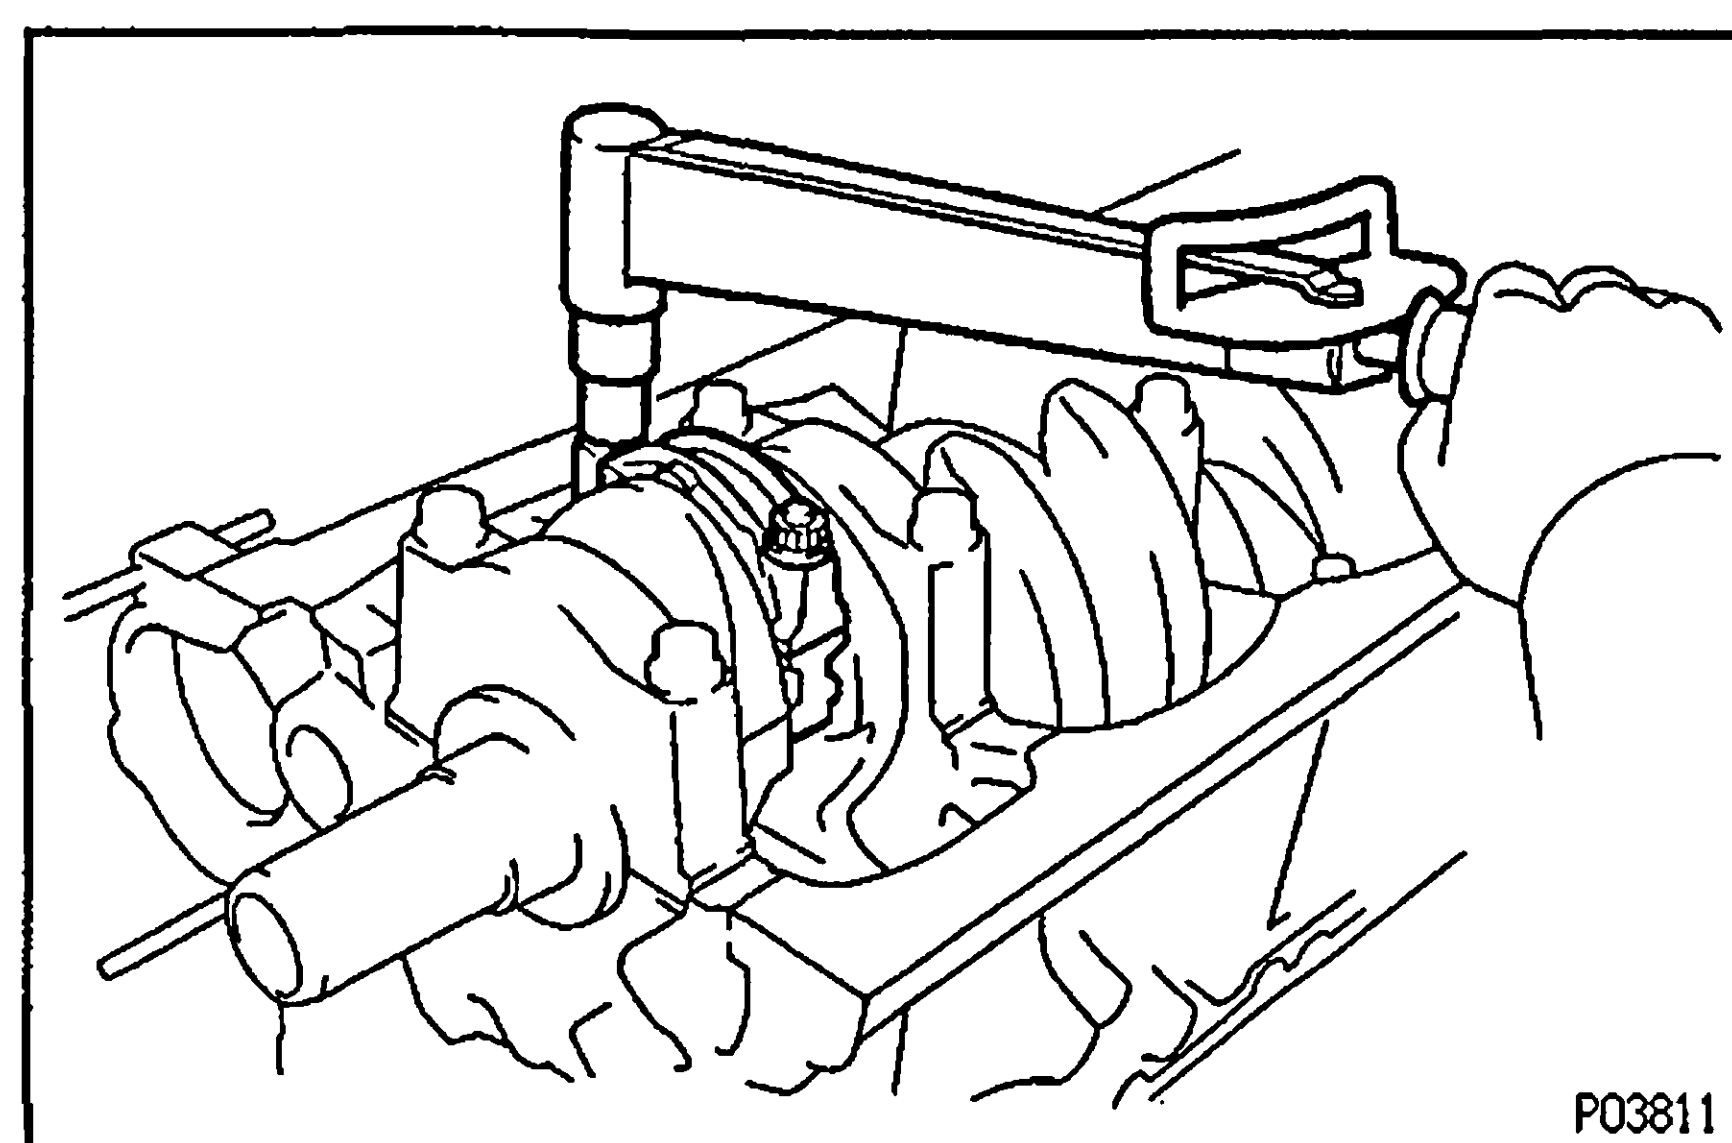


- (a) Apply a light of engine oil on the threads and under the nuts of the connecting rod cap.
- (b) Install and alternately tighten the nuts of the connecting rod cap in several passes.

Torque: 48 N·m (490 kgf·cm, 35 ft·lbf)


If any one of the connecting rod cap nuts does not meet the torque specification, replace the cap nut.

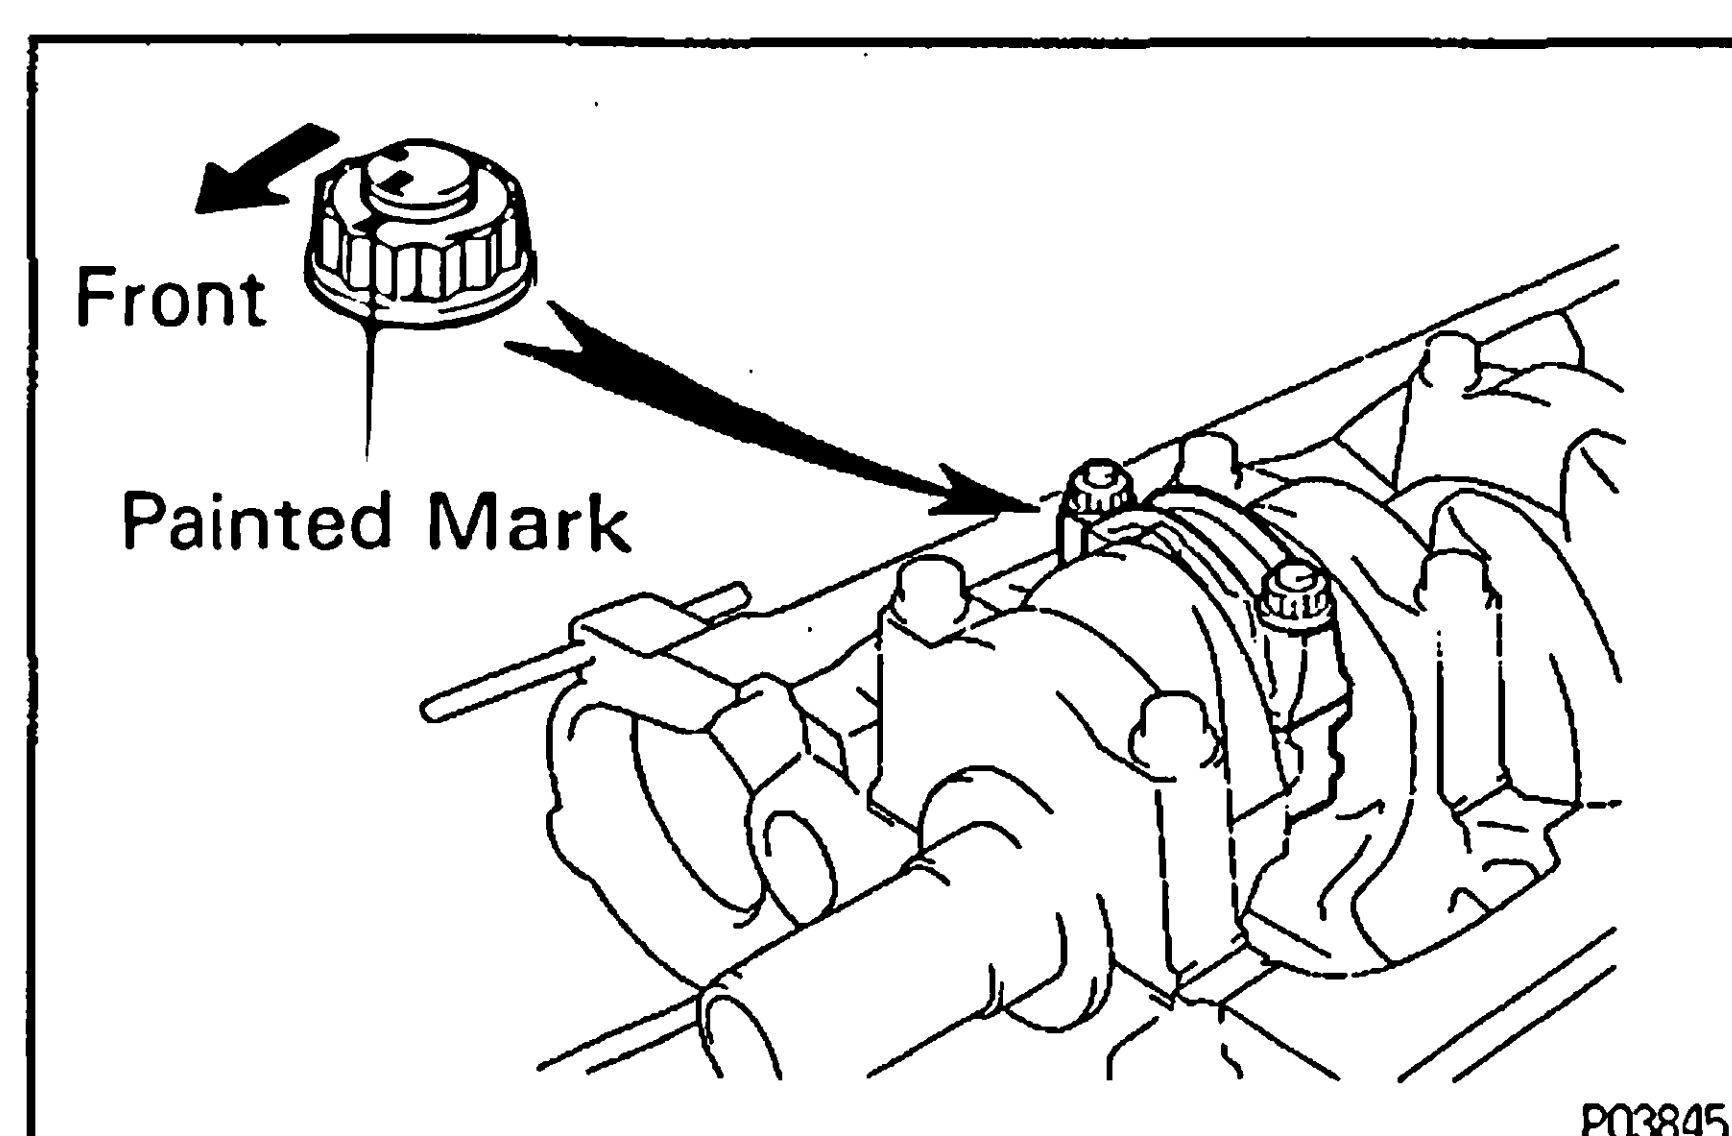

- (c) Mark the front of the connecting rod cap nut and bolt with paint.

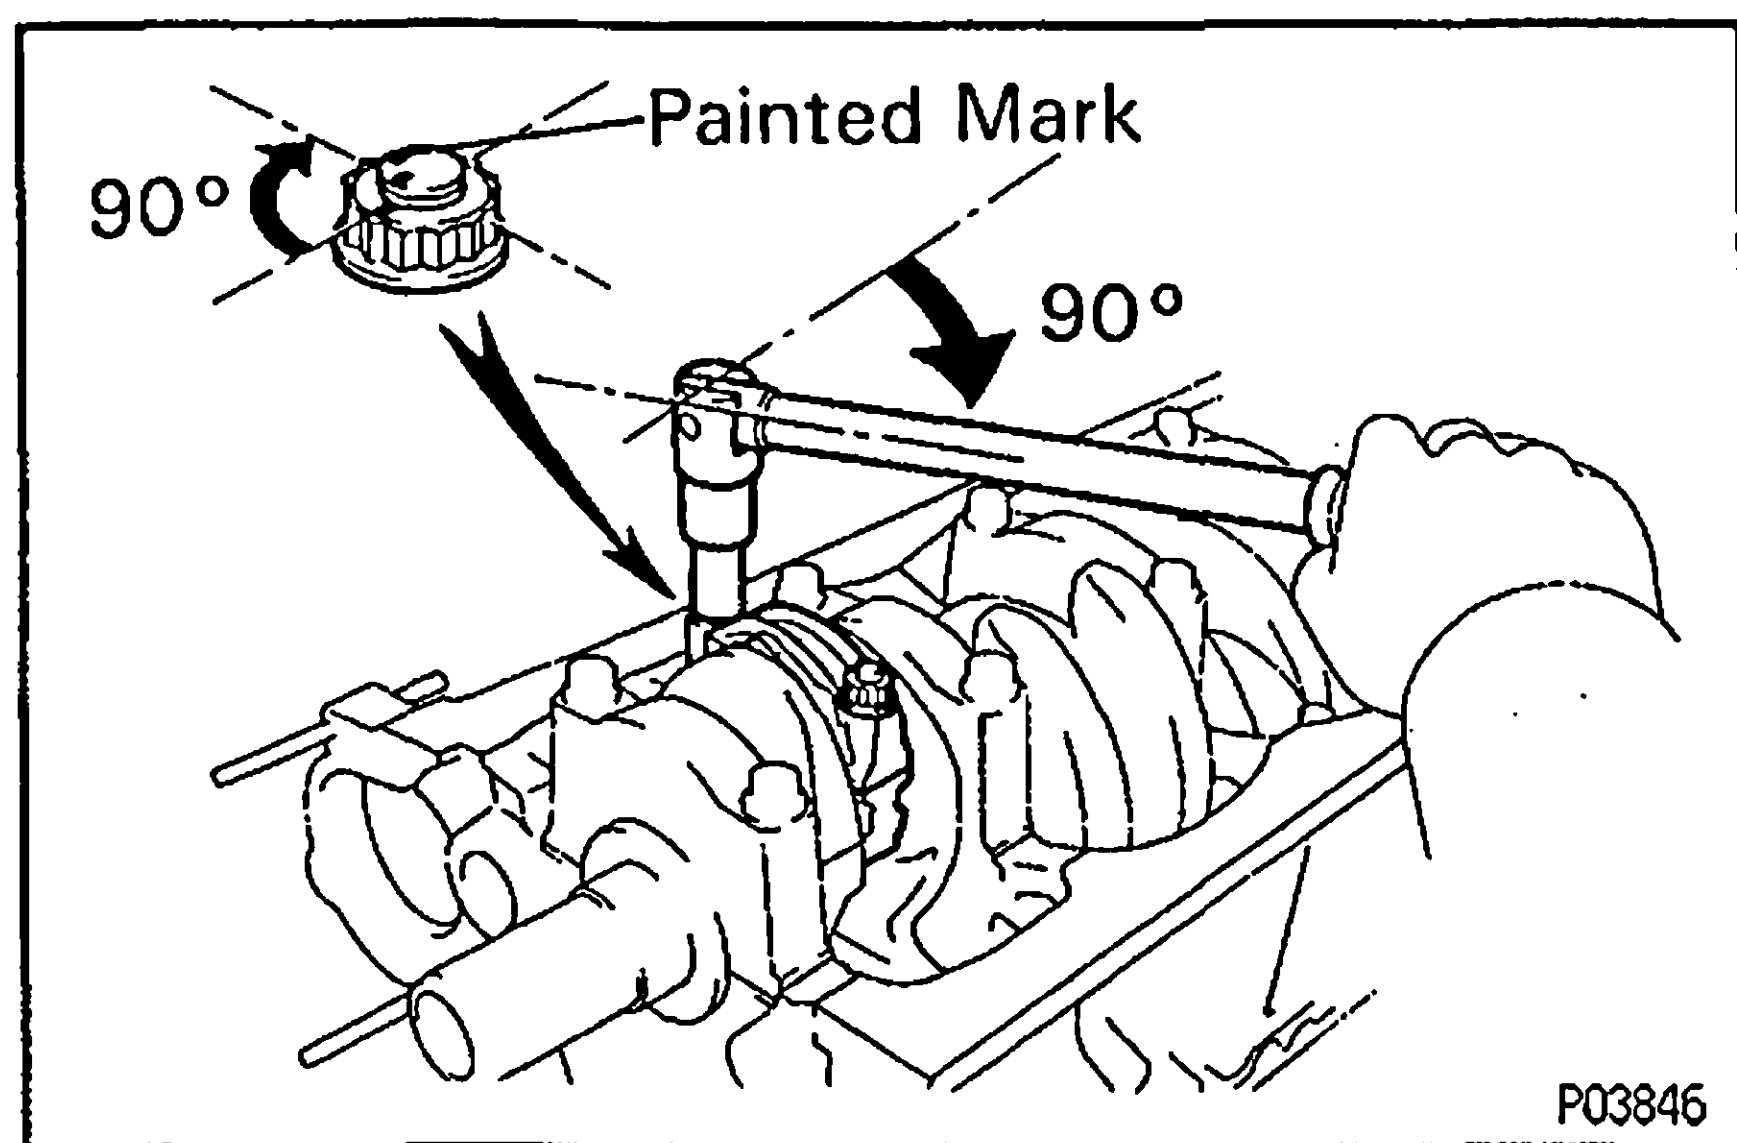

(d) Retighten the connecting rod cap nuts 90° as shown.

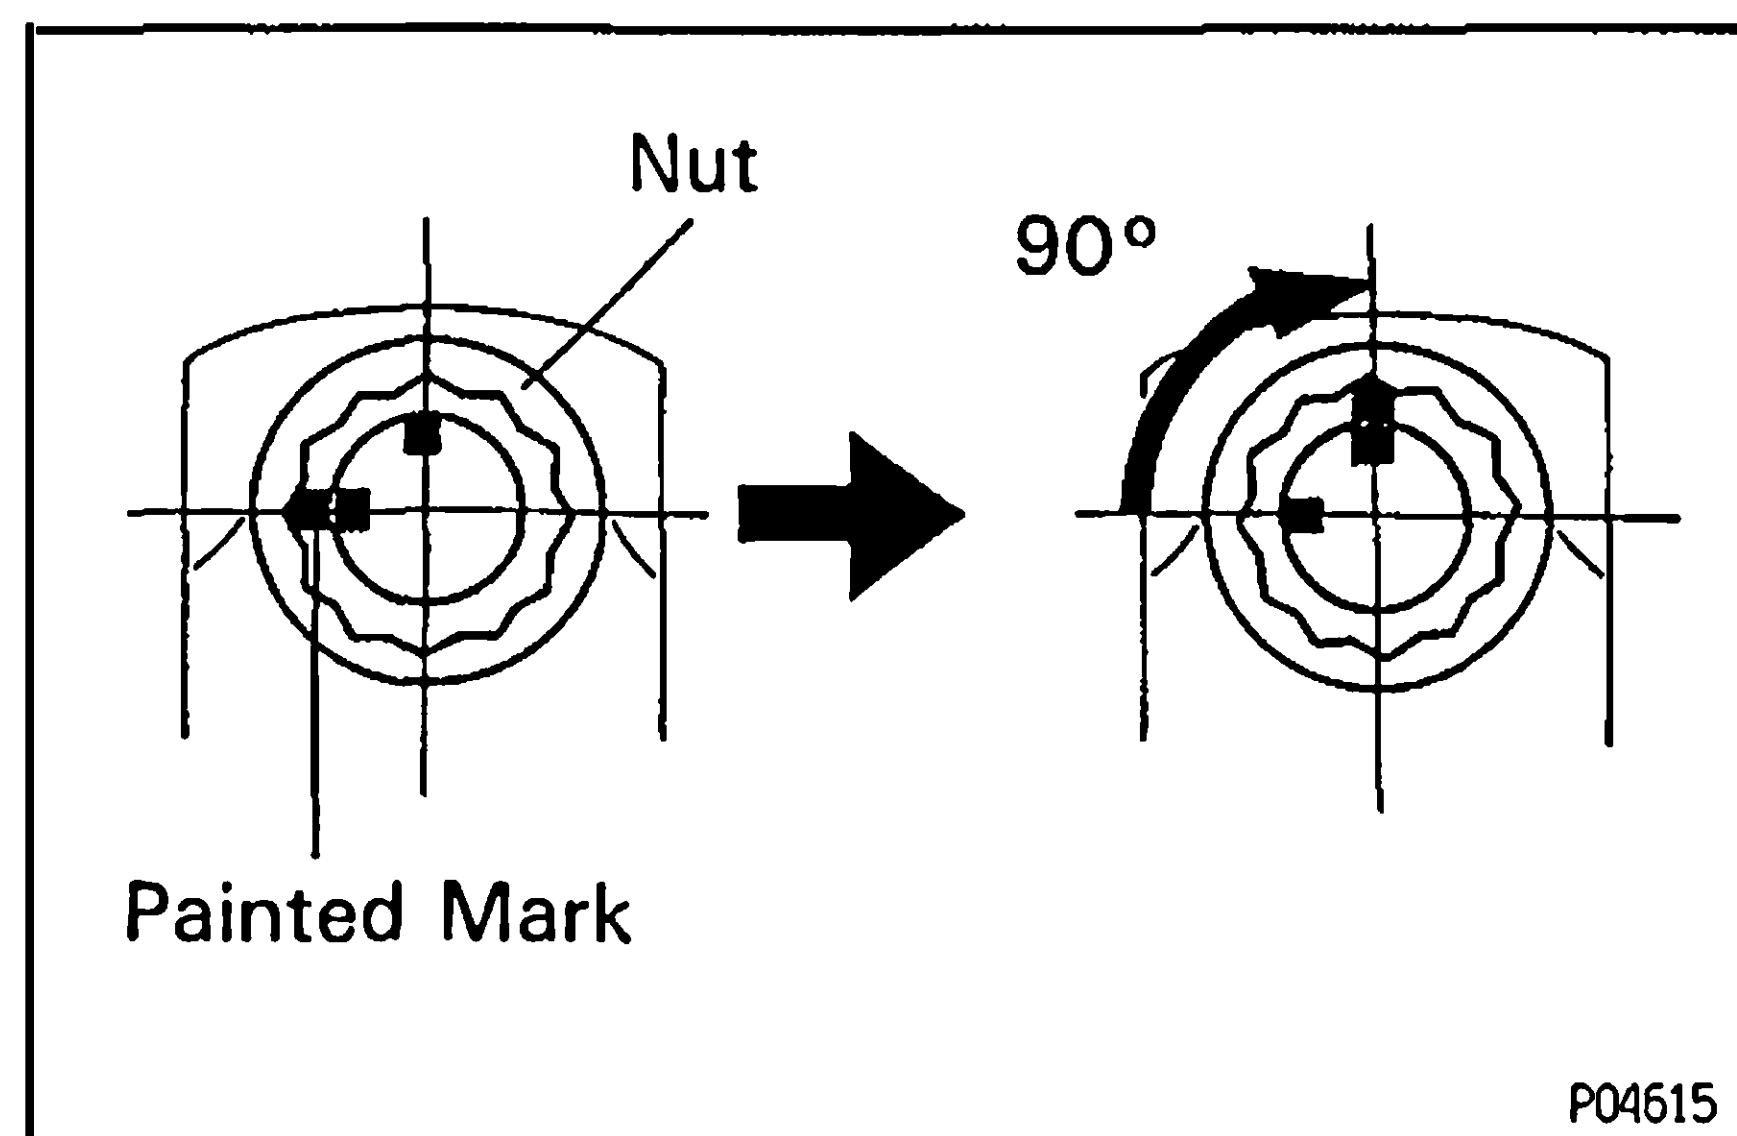

(e) Check that the painted mark on the nut is at 90° angle in relation to the mark on the bolt.

(f) Check that the crankshaft turns smoothly.

(g) Check the connecting rod thrust clearance.
(See step 2 on page EG-89)

7. INSTALL REAR OIL SEAL RETAINER

(a) Remove any old packing (FIPG) material and be careful not to drop any oil on the contact surfaces of the retainer and cylinder block.

- Using a razor blade and gasket scraper, remove all the old packing (FIPG) material from the gasket surfaces and sealing groove.
- Thoroughly clean all components to remove all the loose material.
- Using a non-residue solvent, clean both sealing surfaces.

(b) Apply seal packing to the retainer as shown in the illustration.

Seal packing:

Part No.08826-00080 or equivalent



- Install a nozzle that has been cut to a 2 – 3 mm (0.08 – 0.12 in.) opening.

HINT: Avoid applying an excessive amount to the surface.

- Parts must be assembled within 5 minutes of application. Otherwise the material must be removed and reapplied.
- Immediately remove nozzle from the tube and reinstall cap.


(c) Install the retainer with the four bolts.

Torque: 20 N·m (200 kgf·cm, 14 ft·lbf)

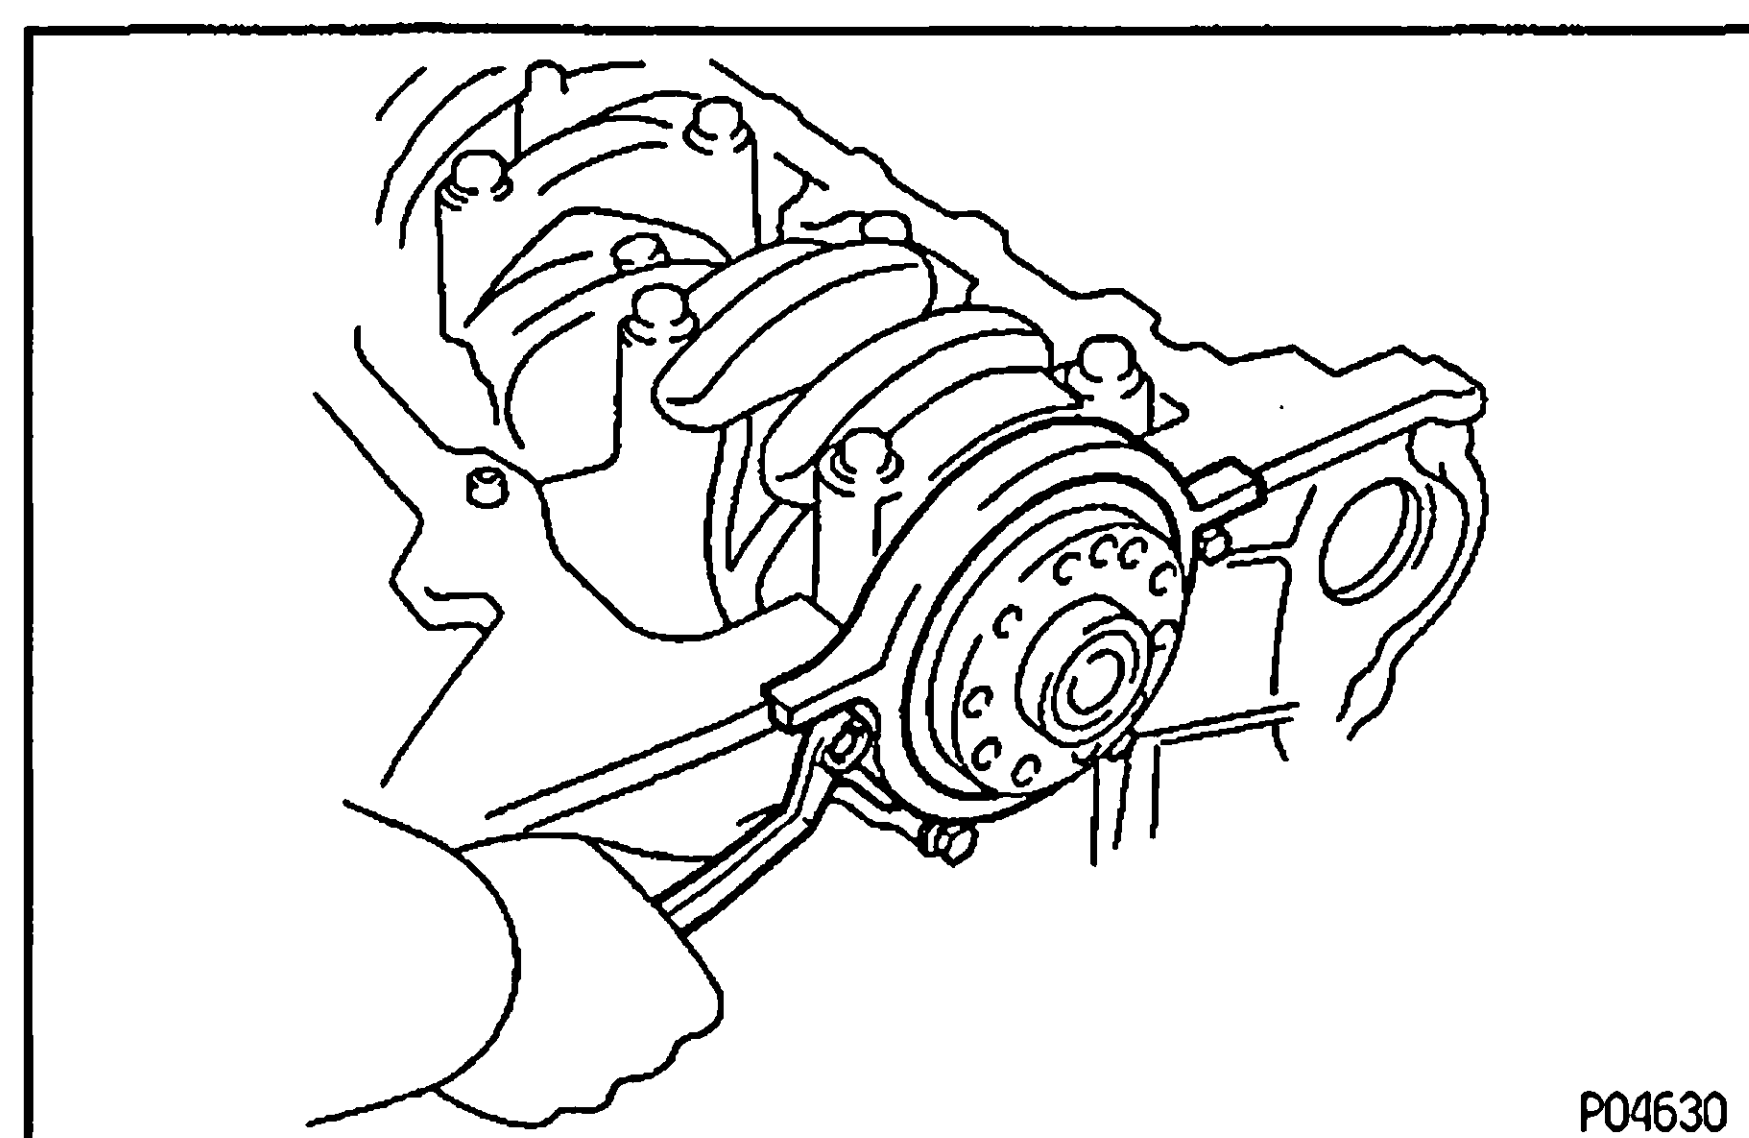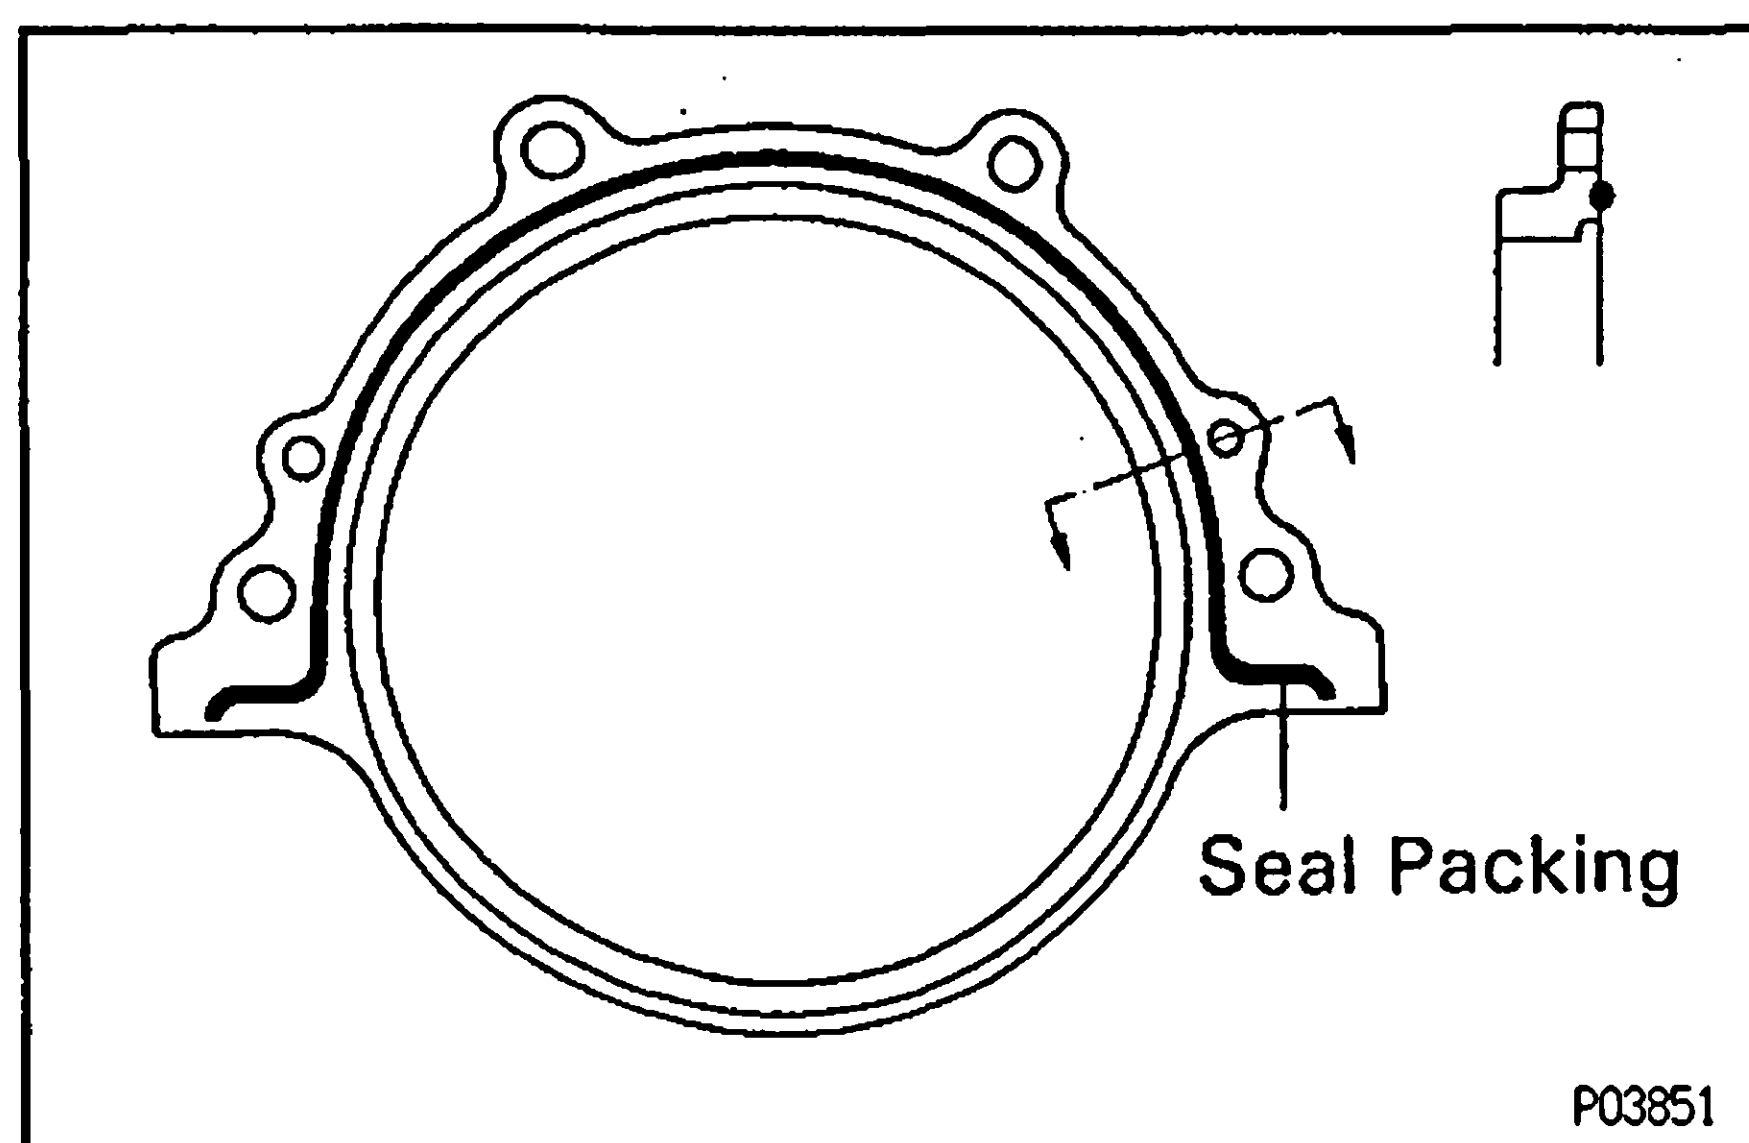


POST ASSEMBLY


1. **INSTALL OIL COOLER COVER AND OIL COOLER**
Install a new gasket, oil cooler cover and oil cooler with the ten bolts and two nuts.
Torque: 21 N·m (210 kgf·cm, 15 ft·lbf)

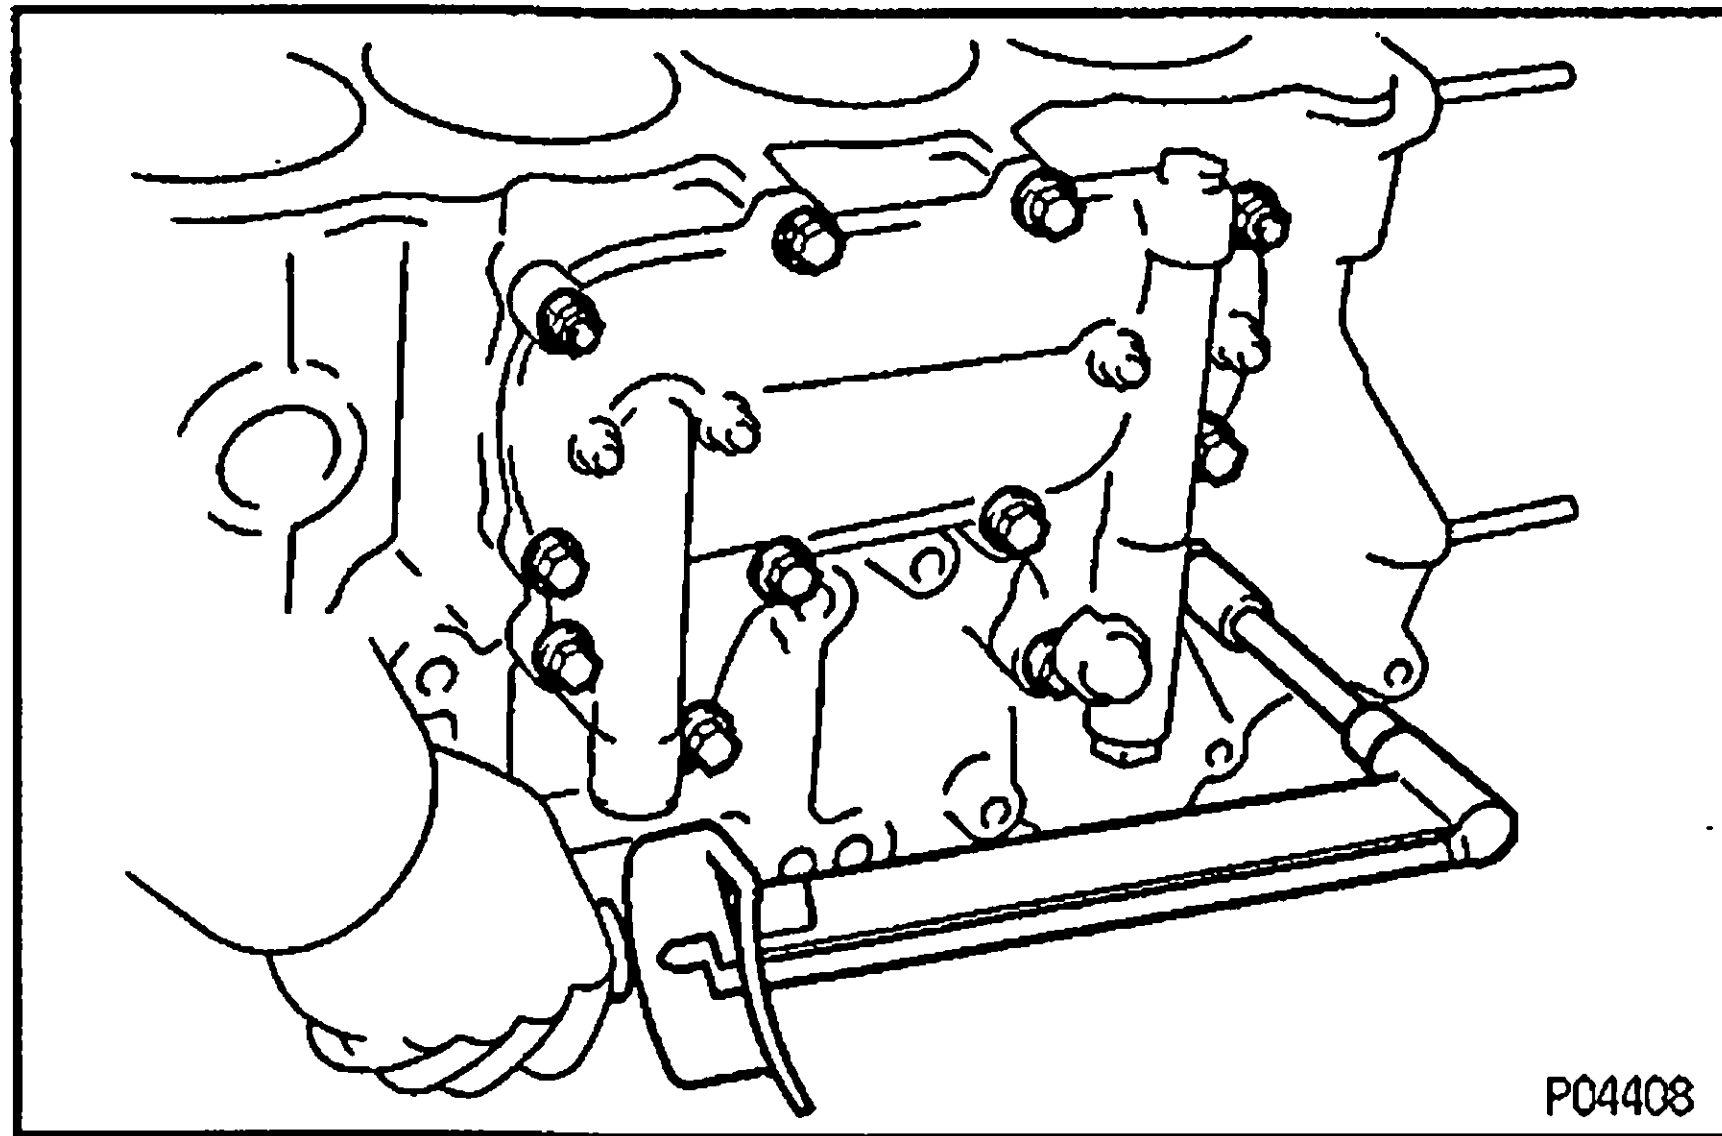

70 Series

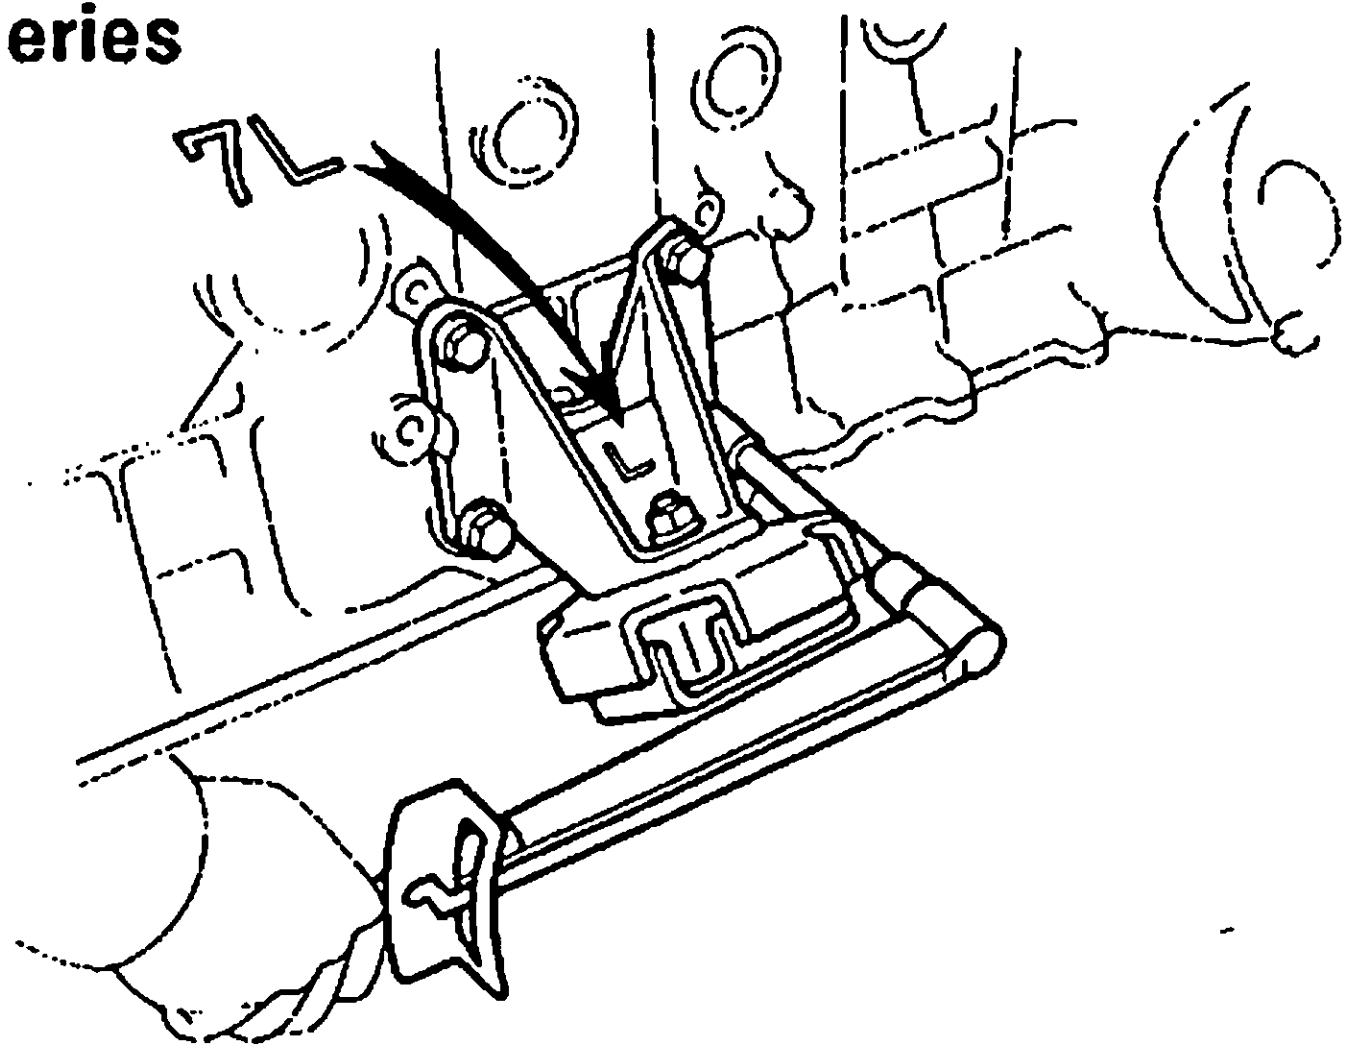

80 Series

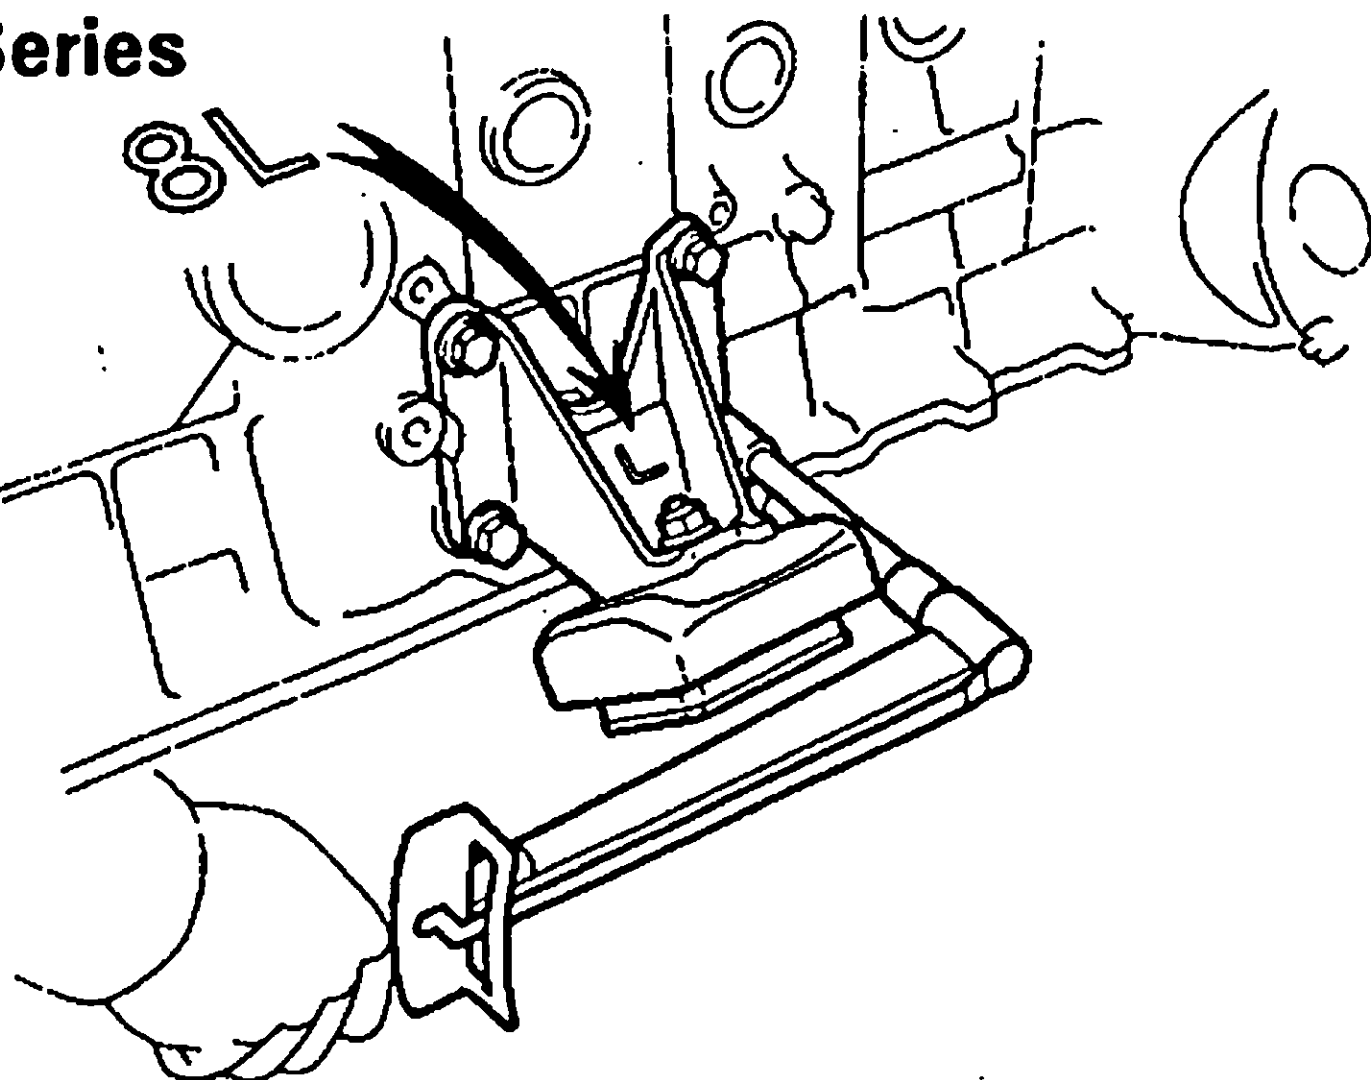


P04613
P04011


Z02493

2. **INSTALL LH ENGINE MOUNTING BRACKET**
Install the bracket with the four bolts.
Torque: 69 N·m (700 kgf·cm, 51 ft·lbf)

70 Series

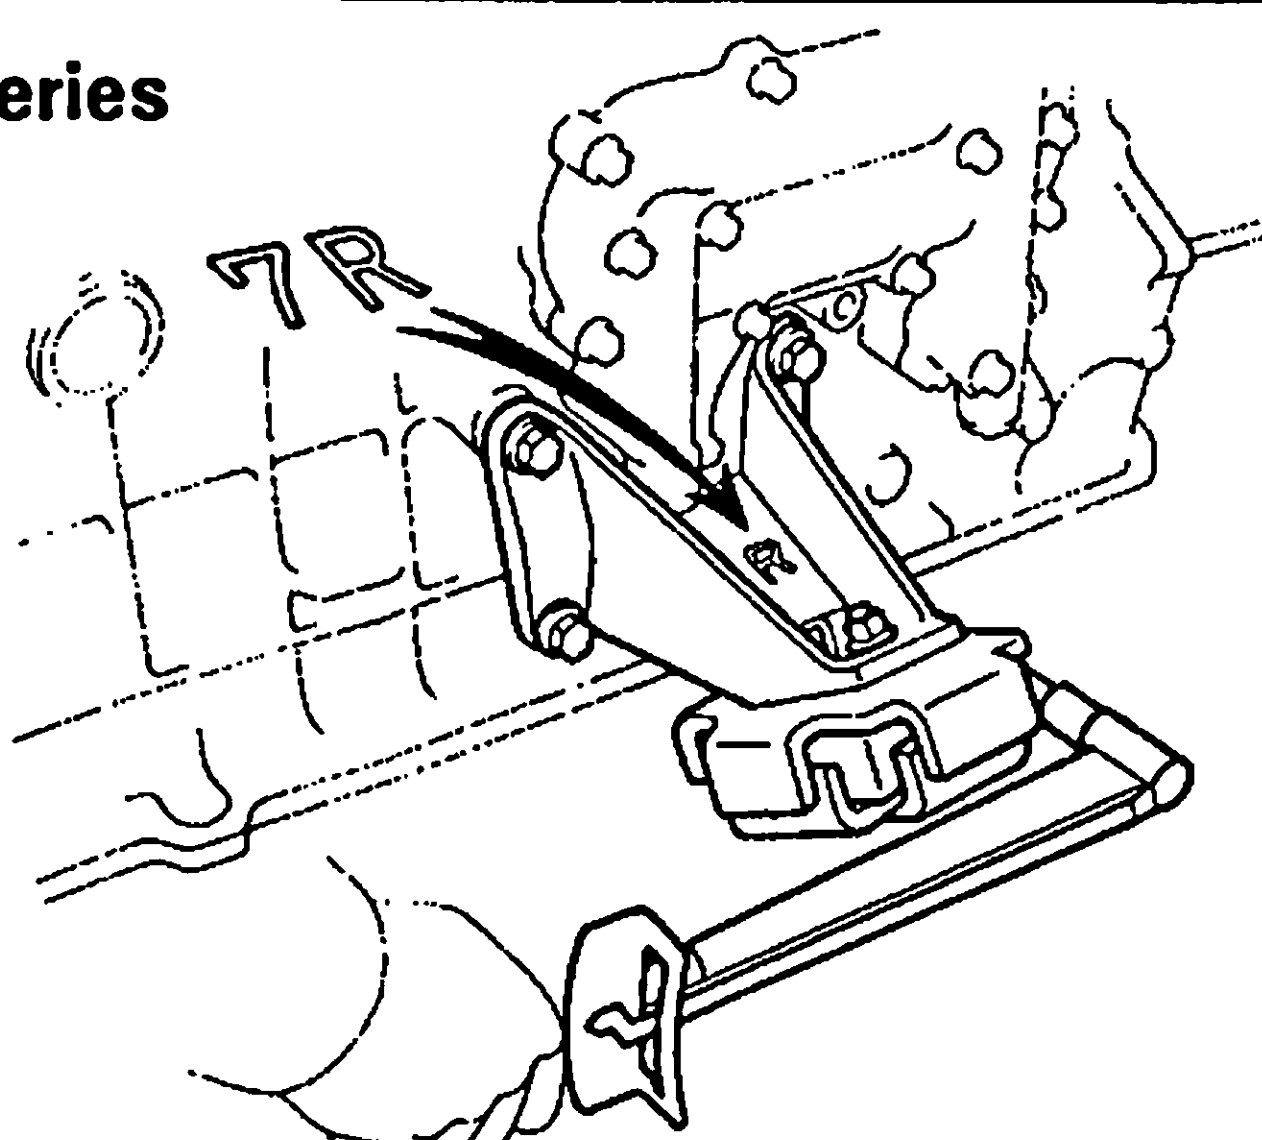


80 Series

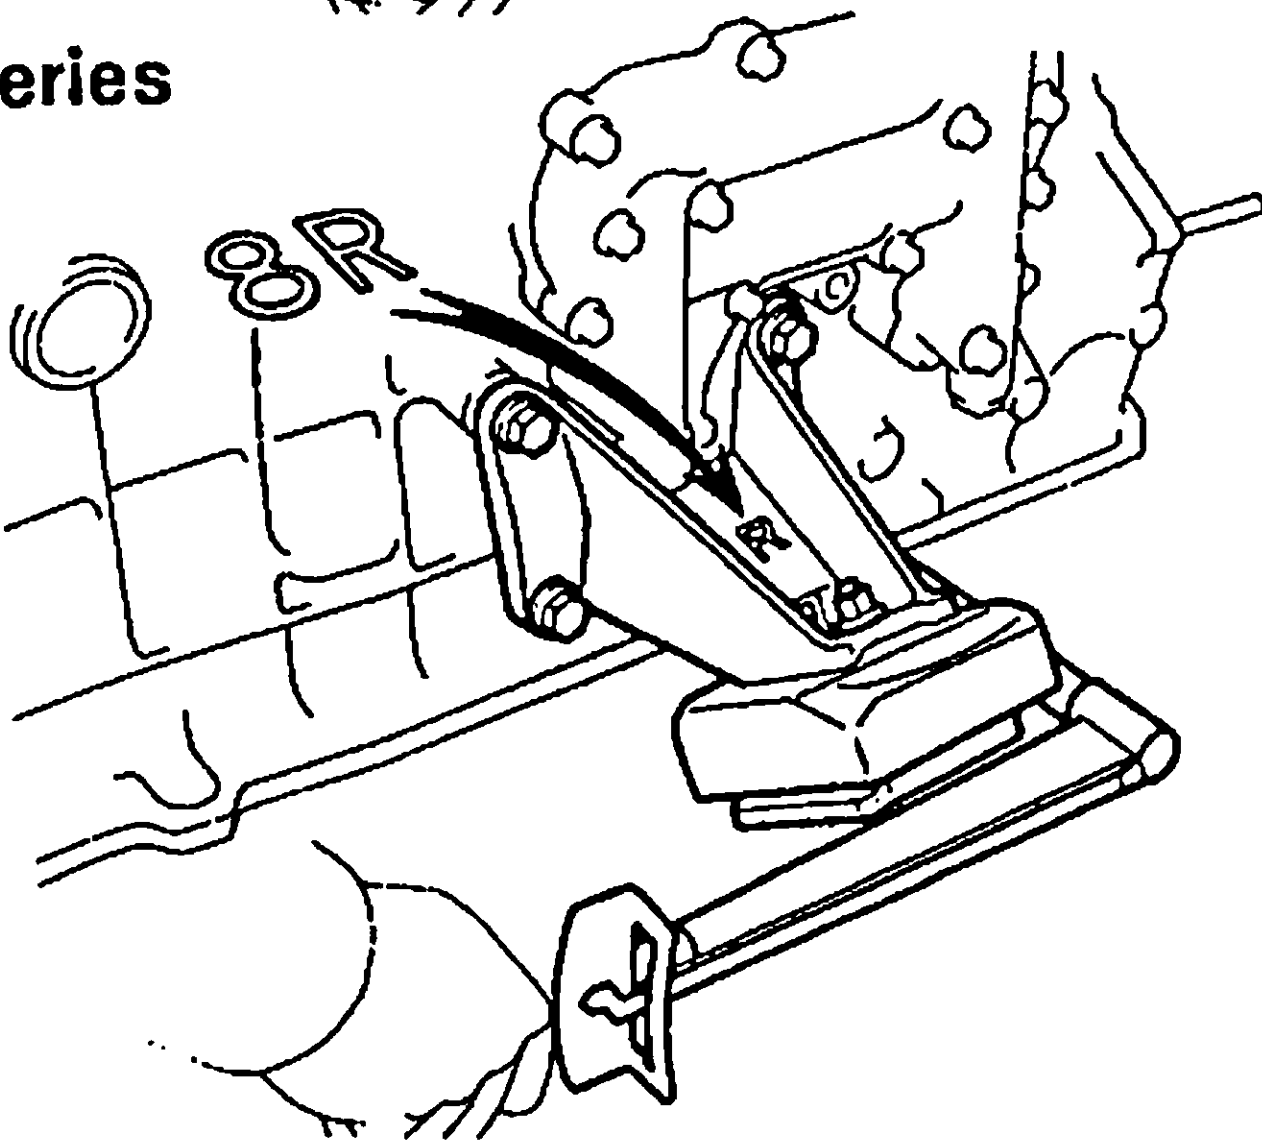

P04612
P04013


Z02494

3. **INSTALL RH ENGINE MOUNTING BRACKET**
Install the bracket with the four bolts.
Torque: 69 N·m (700 kgf·cm, 51 ft·lbf)

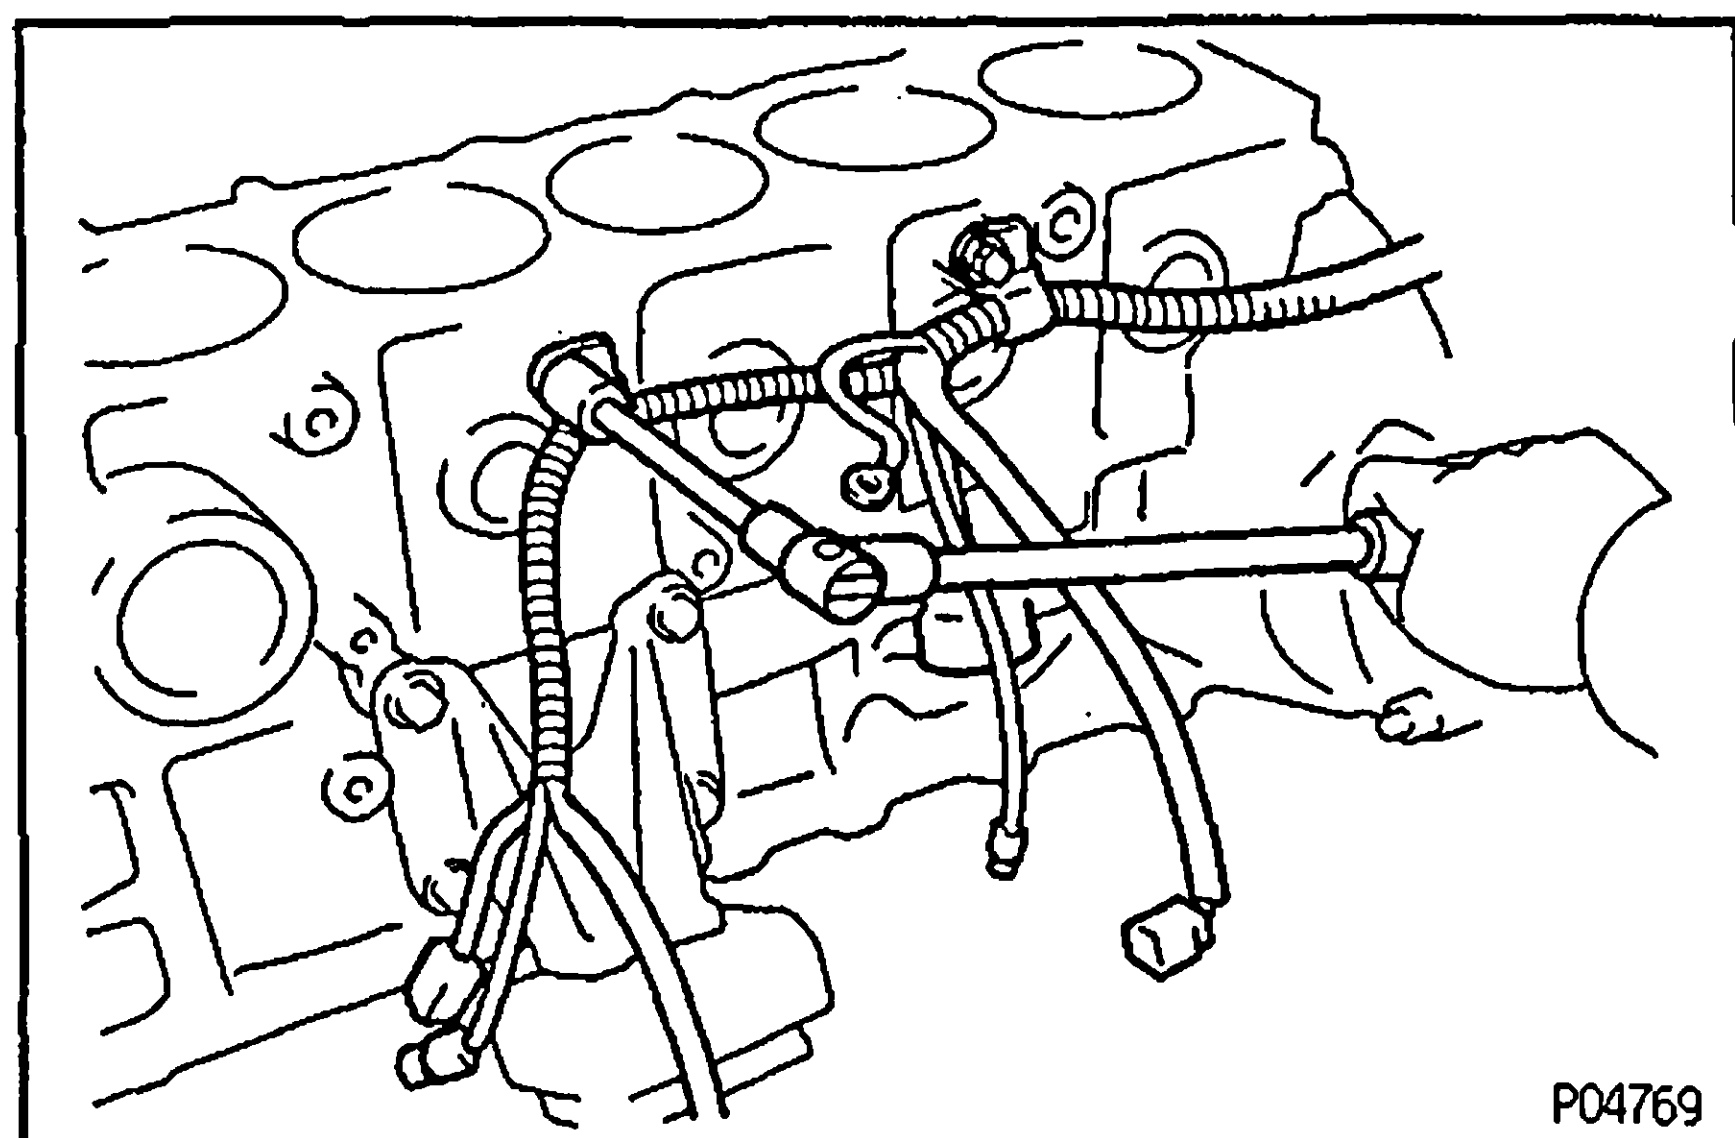
**4. INSTALL ENGINE WIRE**

Install the engine wire with the two bolts.


EG

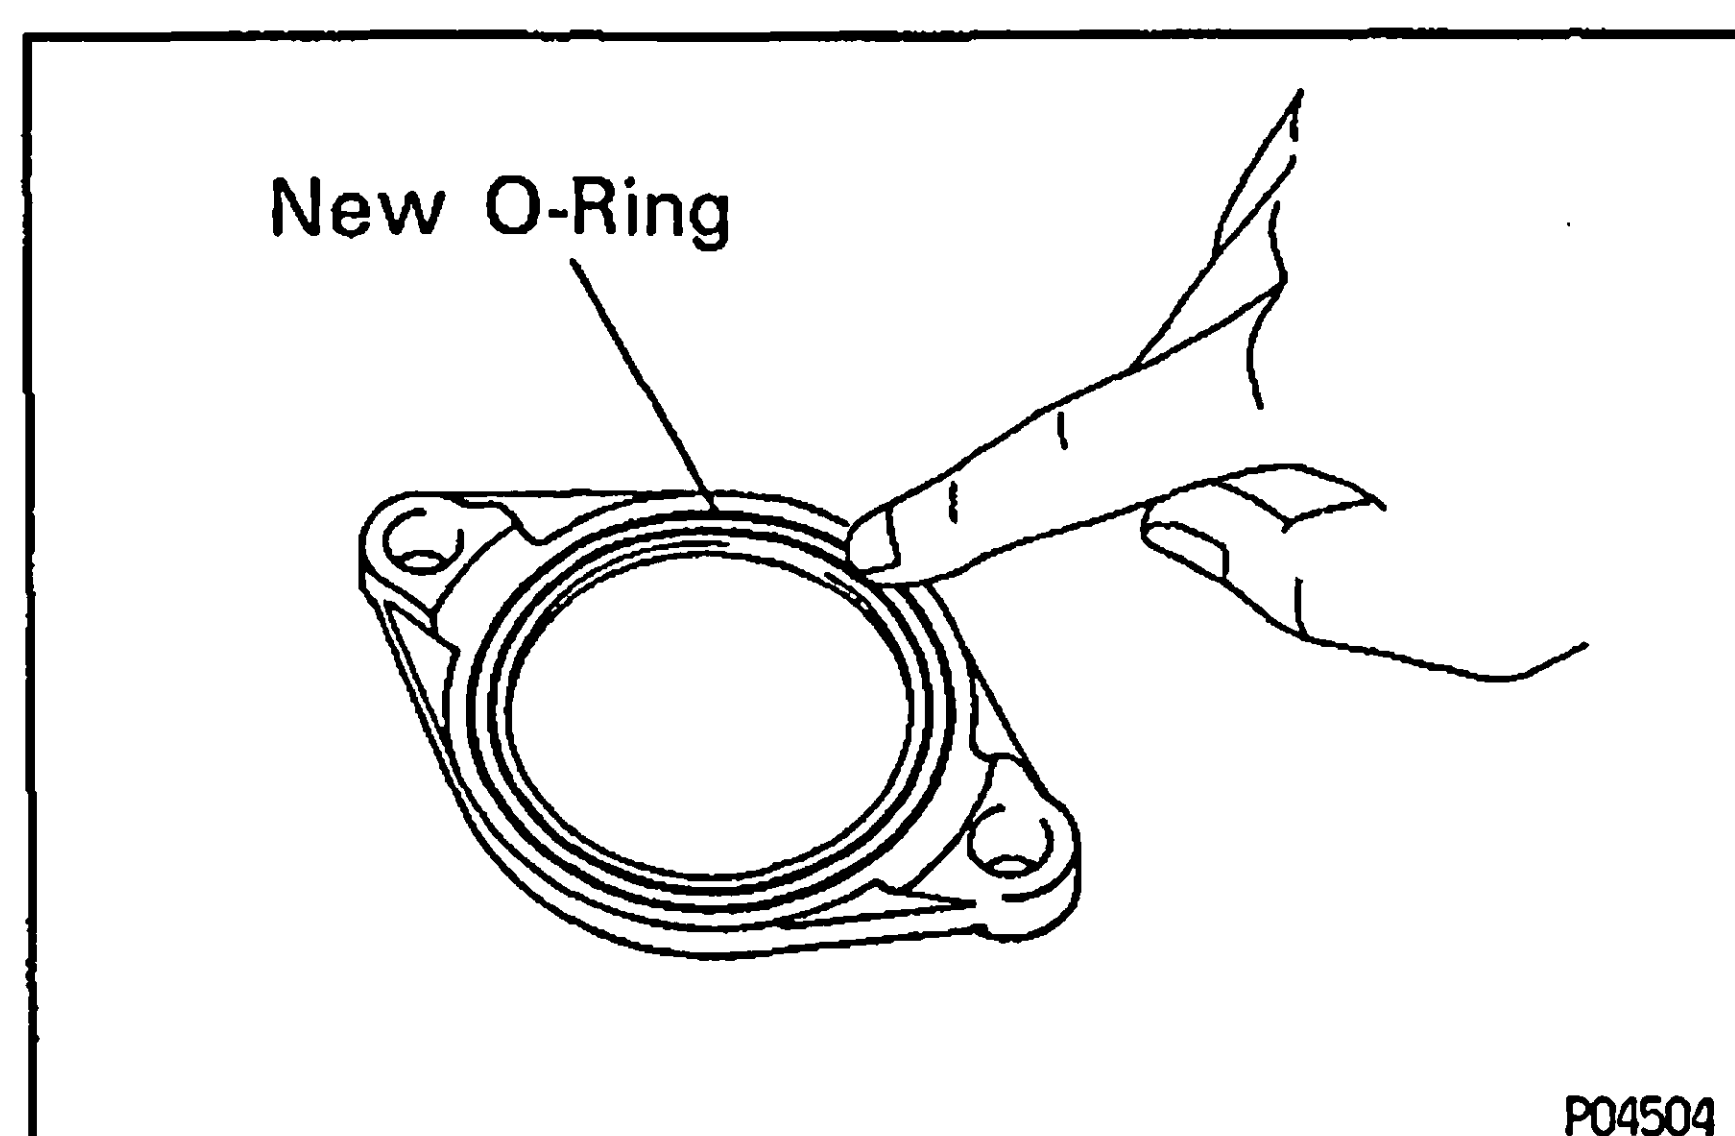**5. INSTALL CYLINDER BLOCK NO.1 COVER**


(a) Place a new O-ring to the cover.

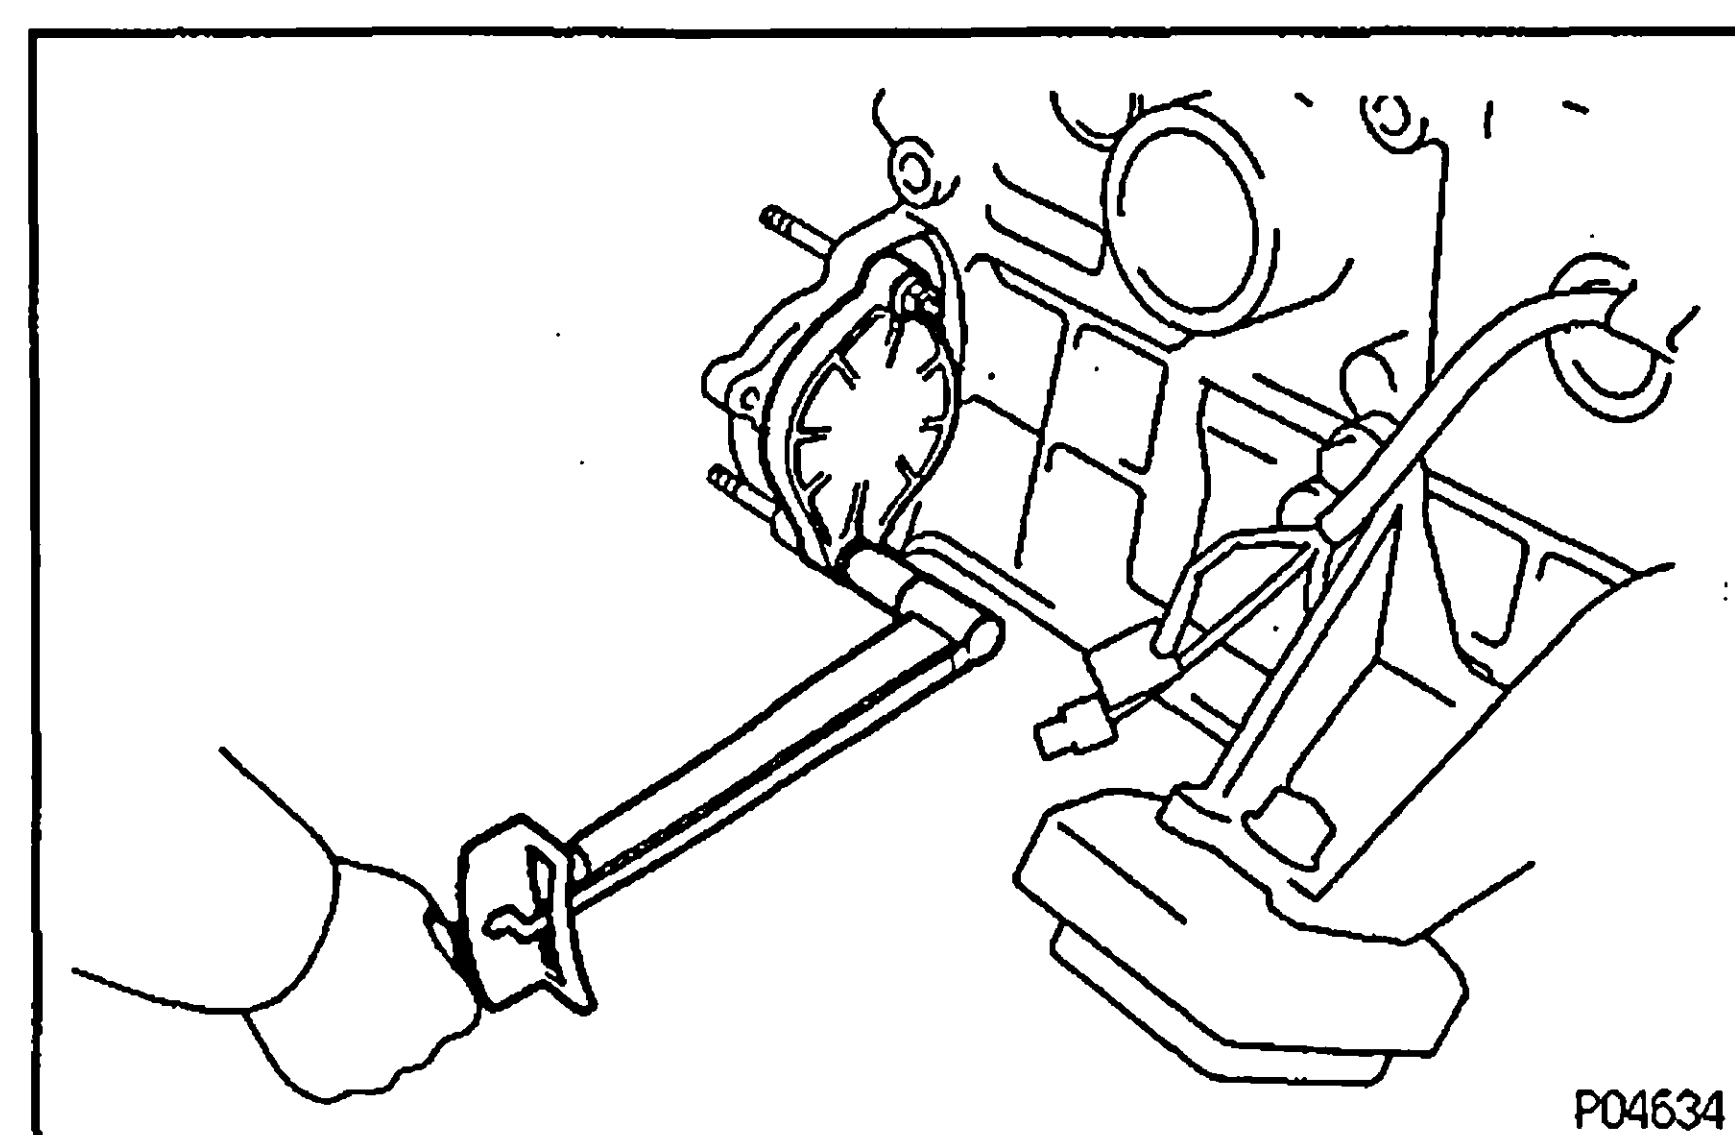

(b) Install the cover with the two nuts.
Torque: 36 N·m (370 kgf·cm, 27 ft·lbf)

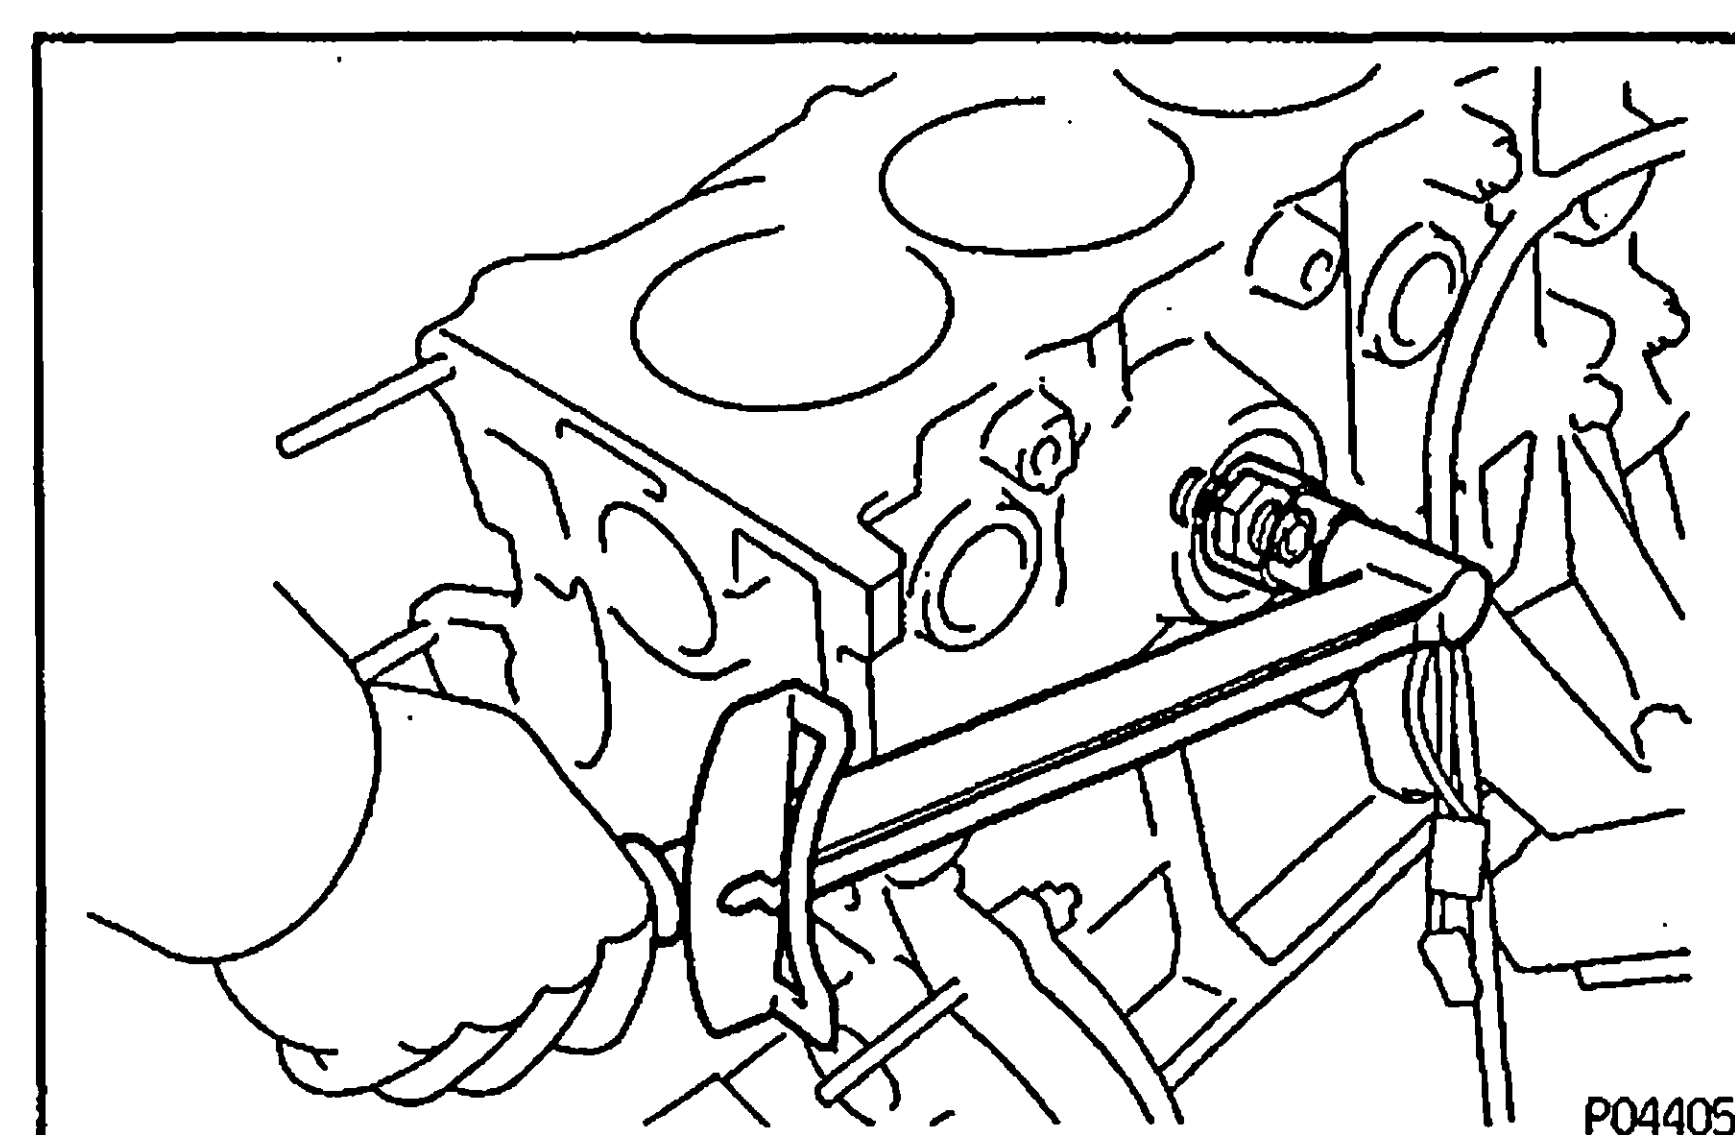**6. INSTALL OIL FILTER UNION**


Torque: 44 N·m (450 kgf·cm, 33 ft·lbf)

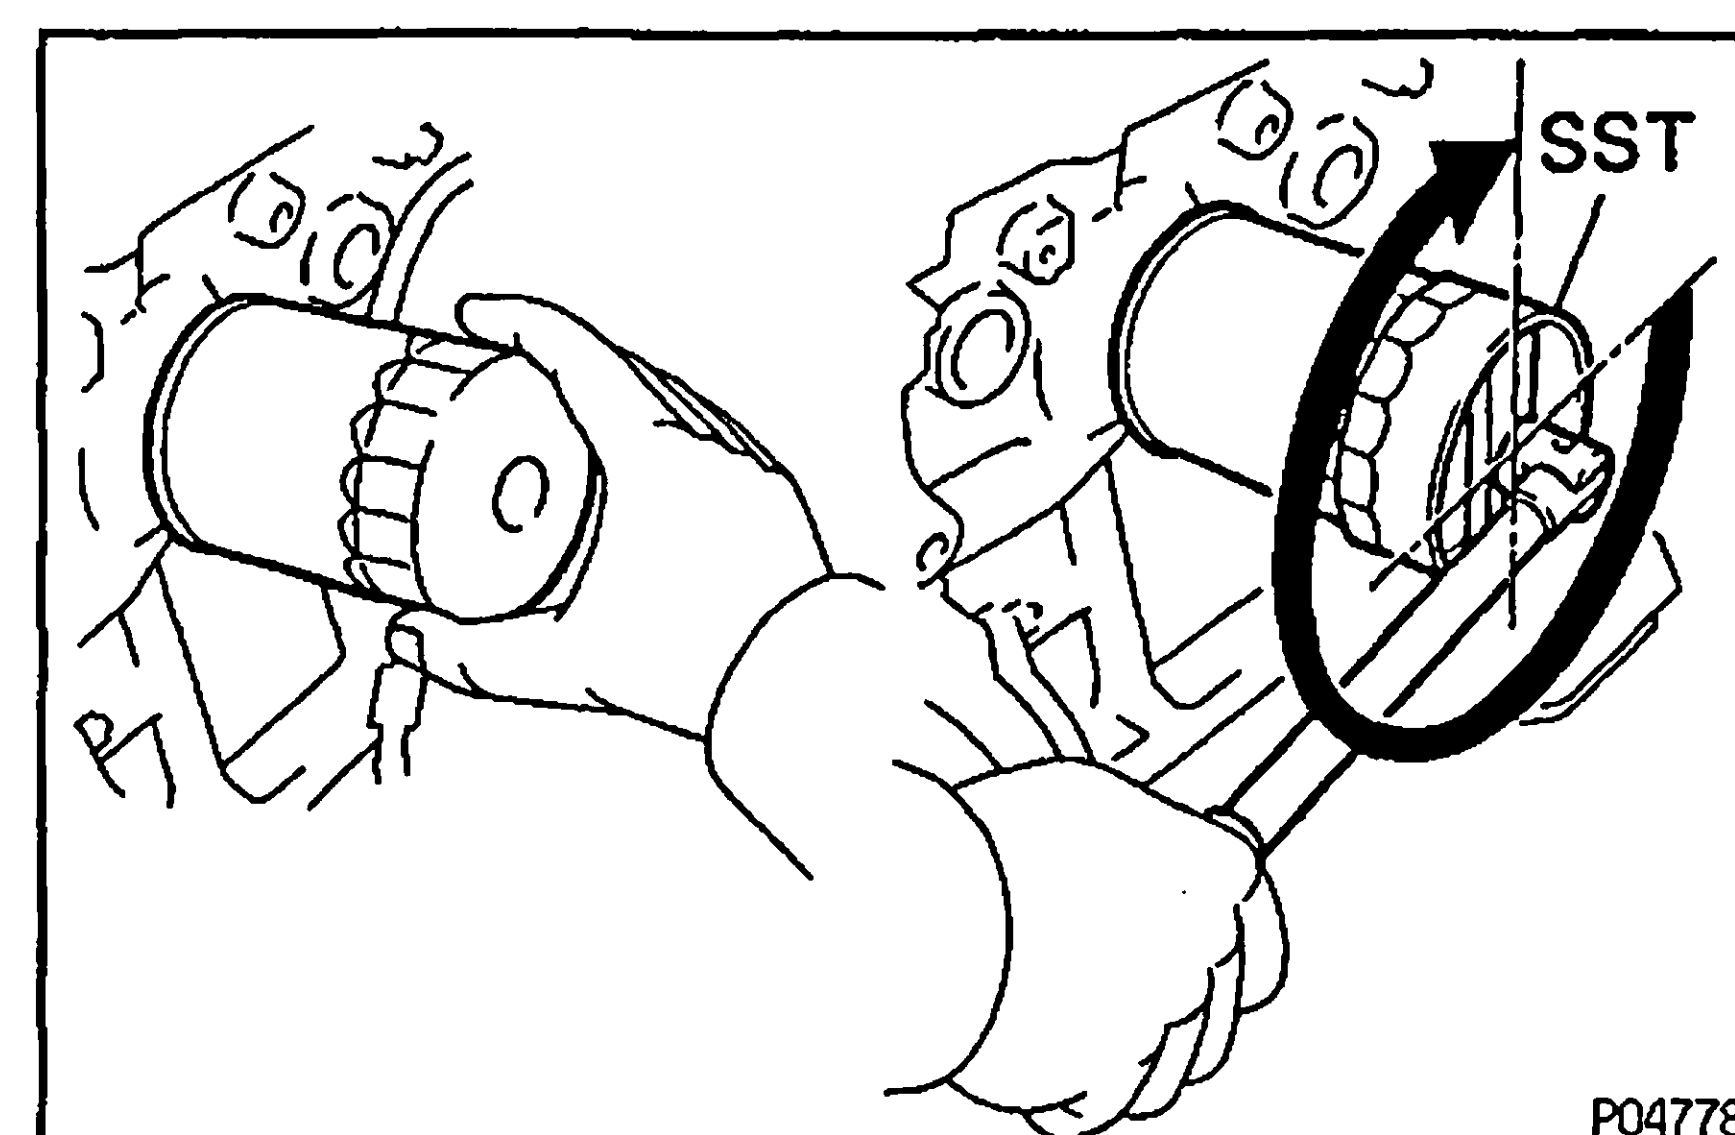**7. INSTALL OIL FILTER**

(a) Lubricate the filter rubber gasket with engine oil.
(b) Tighten filter until the gasket contacts seat of the filter mounting. Then using SST, give it an additional 3/4 turn to seat the filter.
SST 09228-44011

EG

8. **INSTALL TIMING CHAIN**
(See page EG—82)
9. **INSTALL CYLINDER HEAD**
(See page EG—60)
10. **REMOVE ENGINE STAND**

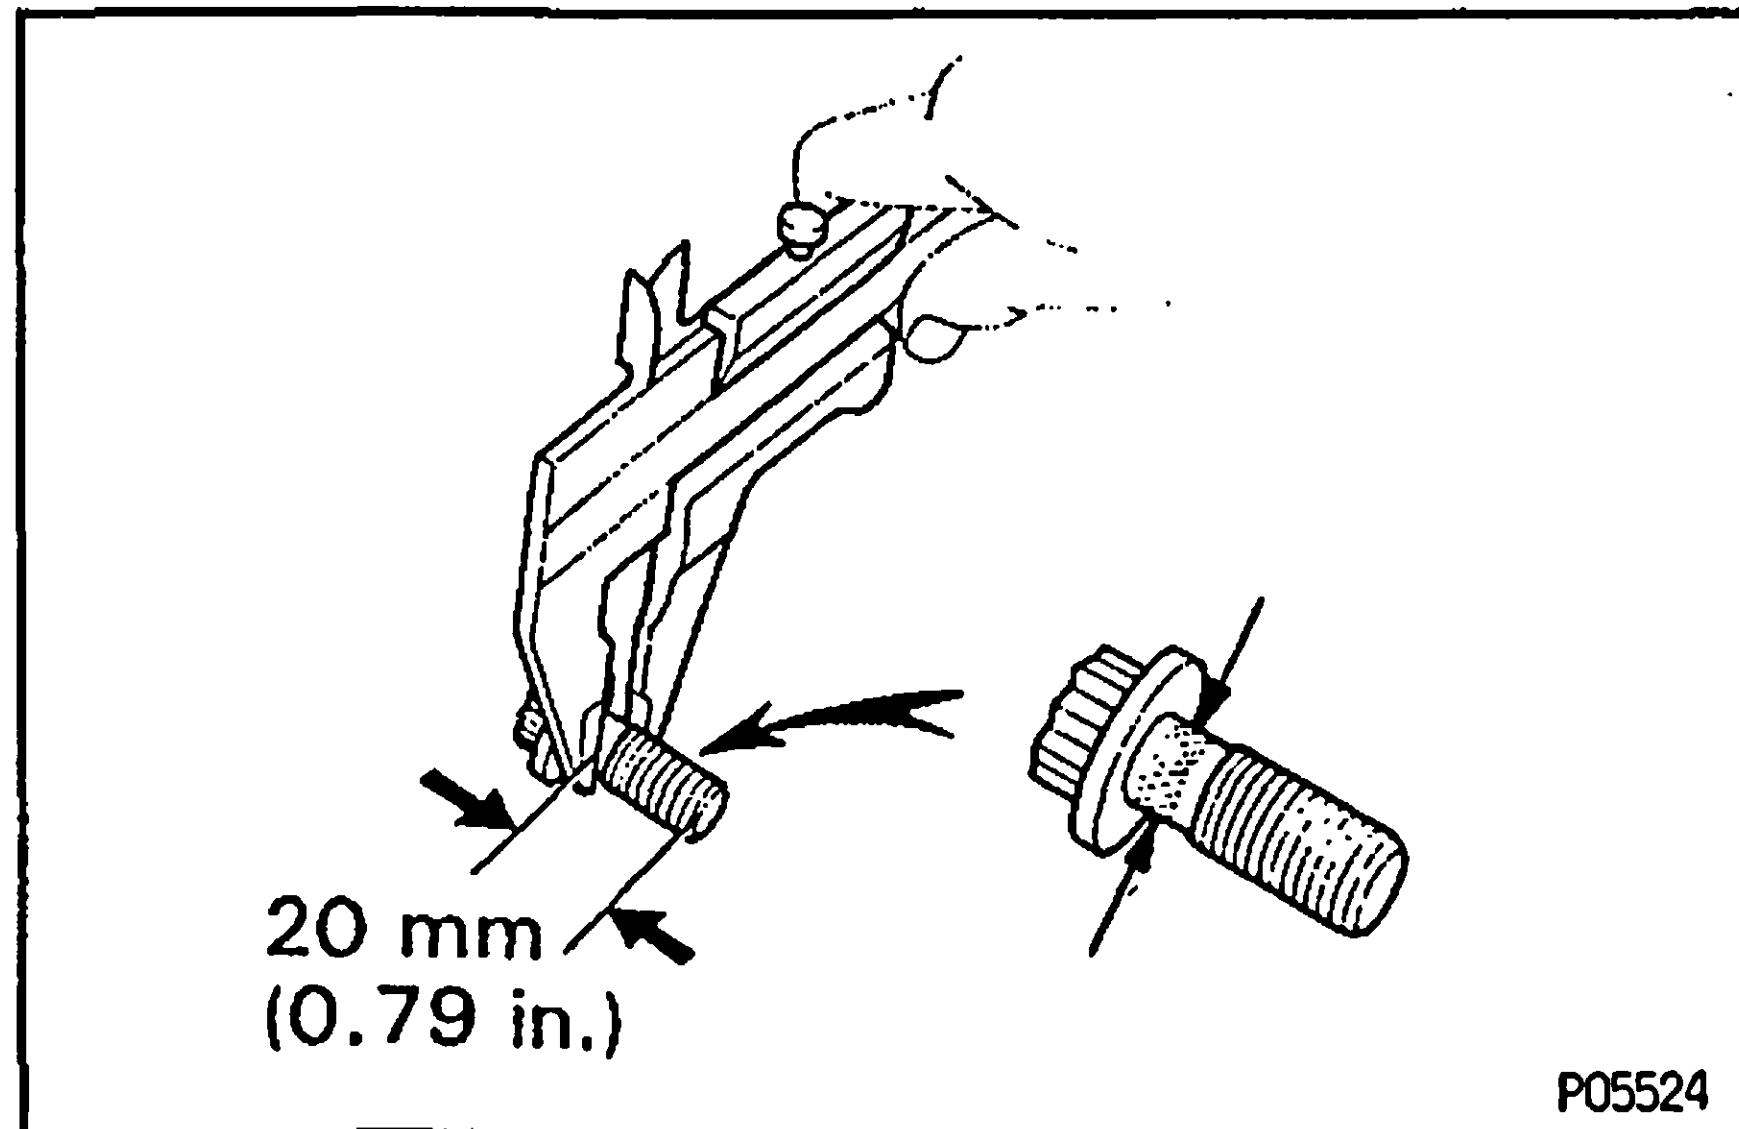

11. INSTALL FLYWHEEL

A. Inspect flywheel bolts

Using vernier calipers, measure the outside diameter of the flywheel bolt.

Standard outside diameter:

10.3 — 10.5 mm (0.406 — 0.413 in.)

Minimum outside diameter:


9.5 mm (0.374 in.)

If the diameter is less than minimum, replace the bolt.

B. Install flywheel bolts

HINT:


- The flywheel bolts are tightened in two progressive steps (steps (b) and (d)).
- If any flywheel bolt is broken or deformed, replace it.

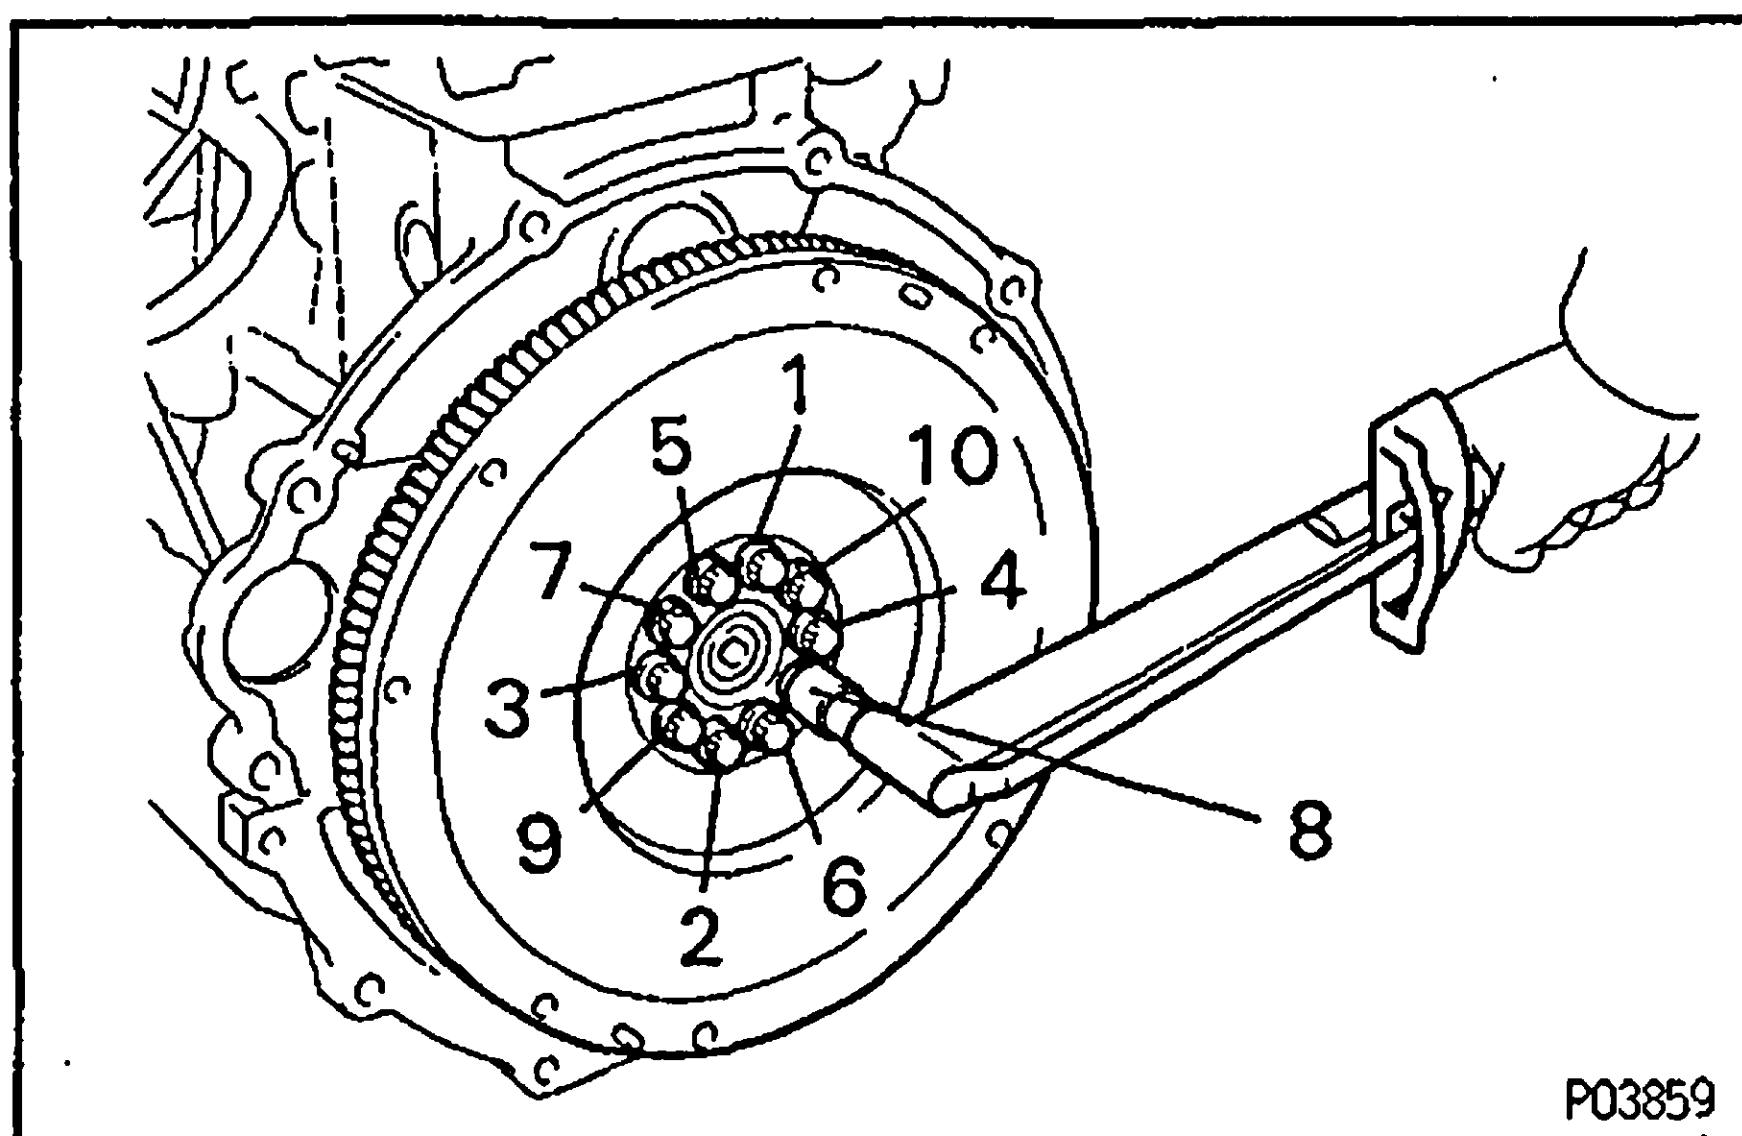


- (a) Apply a light of engine oil on the threads and under the heads of the flywheel bolts.
- (b) Install and uniformly tighten the ten flywheel bolts in several passes, in the sequence shown.

Torque: 20 N·m (200 kgf·cm, 14 ft·lbf)

If any one of the flywheel bolts does not meet the torque specification, replace the flywheel bolt.

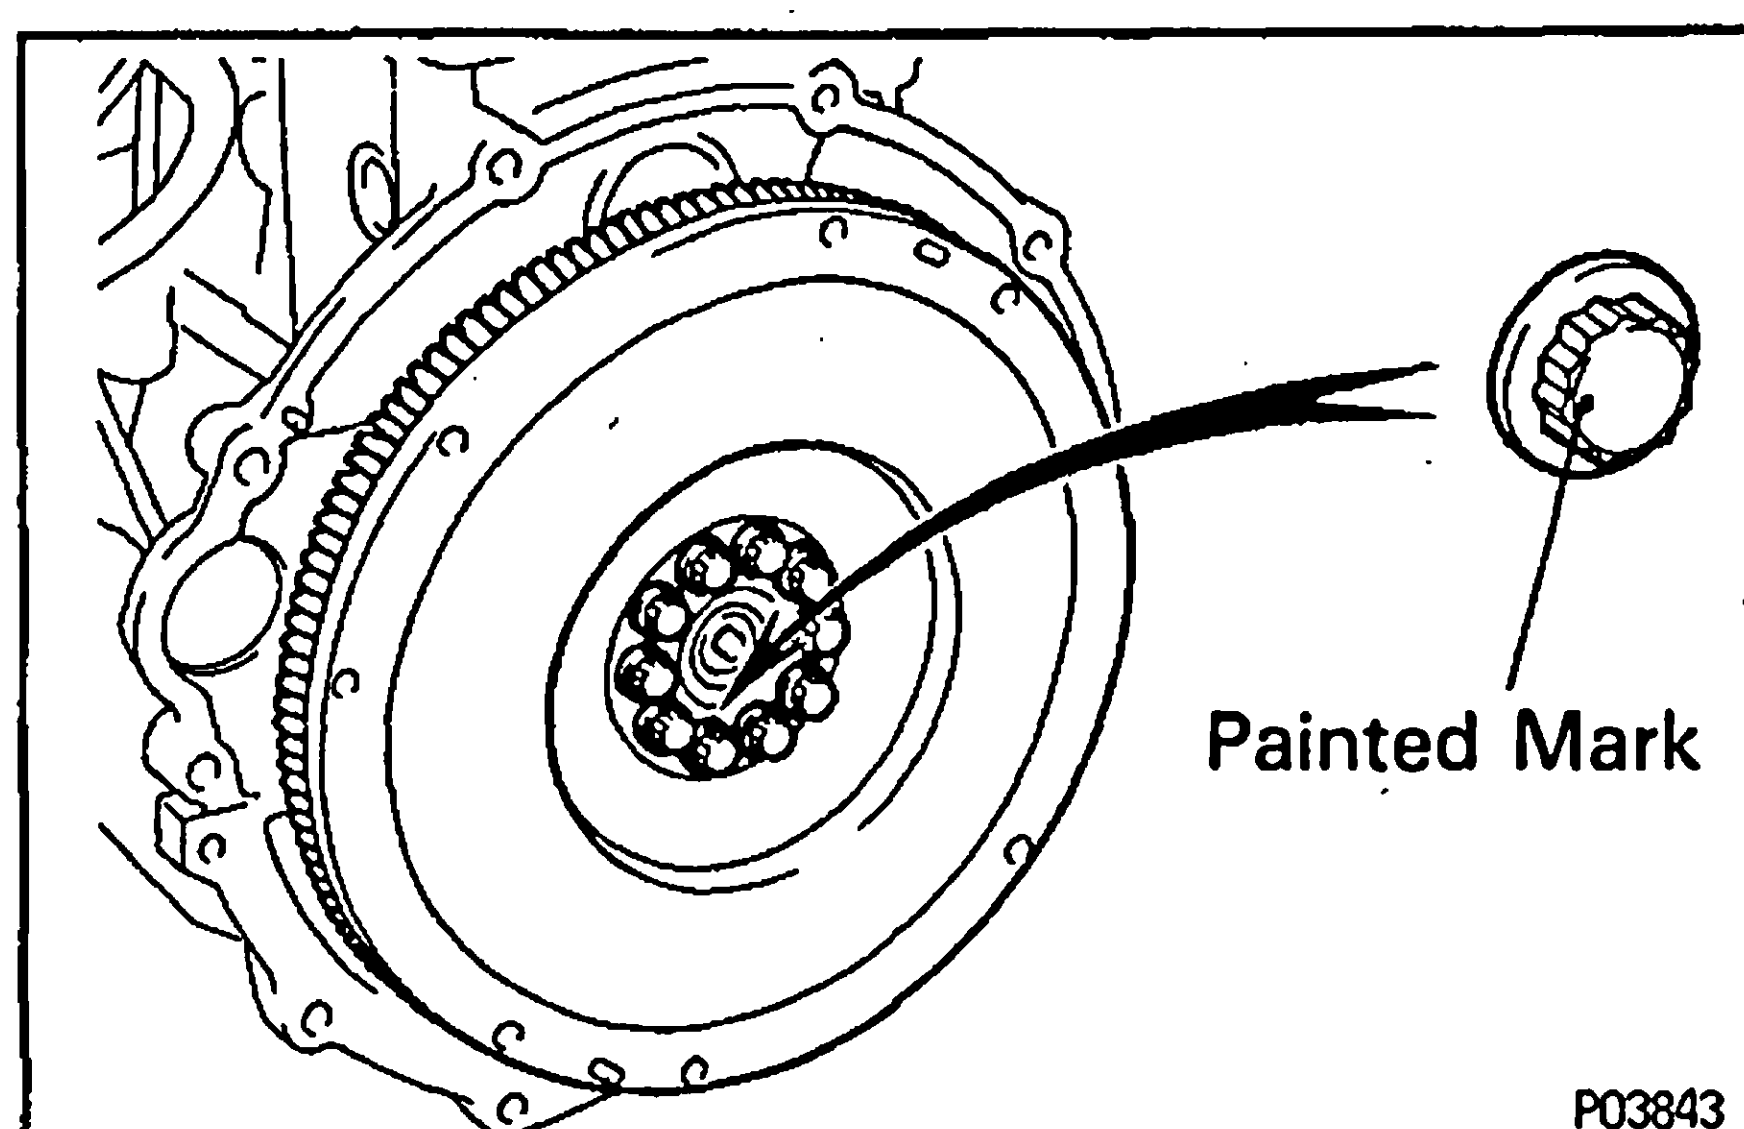

- (c) Mark the flywheel bolt with paint.

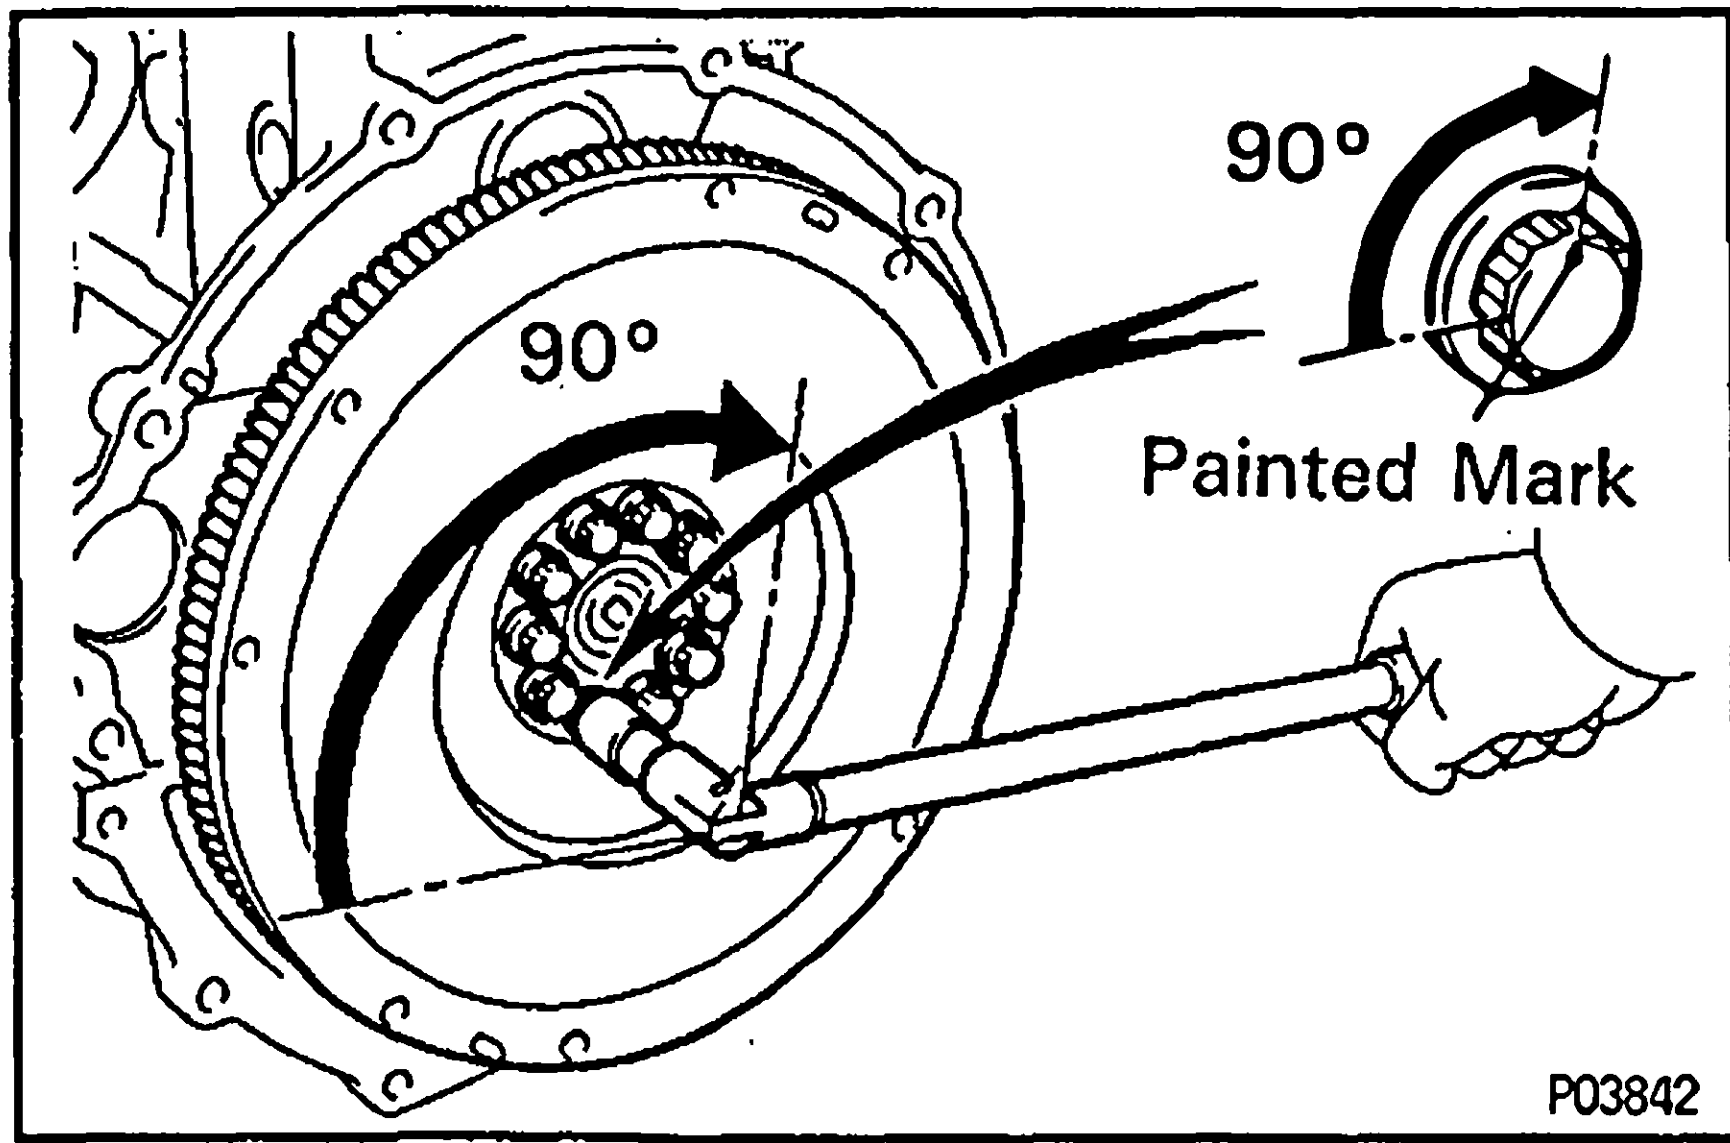

- (d) Retighten the flywheel bolts 90° in the numerical order shown above.
- (e) Check that the painted mark is now at a 90° angle to (c).

EG

12. INSTALL CLUTCH DISC AND COVER

SERVICE SPECIFICATIONS
SERVICE DATA

EG0VT-01

EG

Tune-up	Engine oil API grade Battery specific gravity High-tension cord resistance — Limit Spark plug (Recommended spark plug) — ND Spark plug (Recommended spark plug) — NGK Spark plug (Correct electrod gap) Alternator drive belt deflection with 98 N (10 kgf, 22.0 lbf) New belt Used belt Alternator drive belt tension with SST New belt Used belt Valve clearance (Cold) — Intake Valve clearance (Cold) — Exhaust Ignition timing Idle speed Idle CO concentration Idle mixture speed Fast idle speed (G.C.C.) Fast idle speed (Others) DP setting speed TP setting speed	SG or better 1.25 — 1.27 [when fully charged at 20°C (68°F)] 25 kΩ per cord K16R-U BKR5EYA 0.8 mm (0.031 in.) 11 — 15 mm (0.43 — 0.59 in.) 15 — 20 mm (0.59 — 0.79 in.) 33 — 57 kgf 15 — 35 kgf 0.15 — 0.25 mm (0.006 — 0.010 in.) 0.25 — 0.35 mm (0.010 — 0.014 in.) 3° BTDC @ Max. 725 rpm 600 rpm 1.0 — 2.0 % 650 rpm 900 rpm 1,200 rpm 1,500 rpm 1,200 rpm
Compression pressure	at 250 rpm — STD (Low-octane models) at 250 rpm — STD (Others) at 250 rpm — Limit Difference of pressure between each cylinder	900 kPa (9.2 kgf/cm², 131 psi) or more 1,030 kPa (10.5 kgf/cm², 149 psi) or more 785 kPa (8.0 kgf/cm², 114 psi) 50 kPa (0.5 kgf/cm², 7 psi) or less
Intake manifold vacuum	at idle speed	63 kPa (473 mmHg, 18.6 in.Hg)
Cylinder head	Warpage — Cylinder block side (Limit) Warpage — Manifold side (Limit) Valve seat — Refacing angle (Intake) Valve seat — Refacing angle (Exhaust) Valve seat — Contacting angle Valve seat — Contacting width (Intake) Valve seat — Contacting width (Exhaust) Cylinder head bolt outside diametr — STD Cylinder head bolt outside diameter — Limit	0.15 mm (0.0059 in.) 0.10 mm (0.0039 in.) 30°, 45°, 75° 45°, 75° 45° 1.2 — 1.6 mm (0.047 — 0.063 in.) 1.0 — 1.4 mm (0.039 — 0.055 in.) 10.85 — 11.00 mm (0.4272 — 0.4331 in.) 10.6 mm (0.417 in.)
Valve guide bushing	Inside diameter Outside diameter (for repair part) — STD Outside diameter (for repair part) — O/S 0.05 Protrusion height Replacing temperature (Clinder head side)	7.010 — 7.030 mm (0.2760 — 0.2768 in.) 11.492 — 11.513 mm (0.4524 — 0.4533 in.) 11.542 — 11.563 mm (0.4544 — 0.4552 in.) 8.2 — 8.6 mm (0.323 — 0.339 in.) 80 — 100°C (176 —212°F)

Valve	Valve overall length — STD (Intake)	98.70 mm (3.8858 in.)
	Valve overall length — STD (Exhaust)	98.10 mm (3.8622 in.)
	Valve overall length — Limit (Intake)	98.2 mm (3.866 in.)
	Valve overall length — Limit (Exhaust)	97.6 mm (3.843 in.)
	Valve face angle	44.5°
	Stem diameter (Intake)	6.970 — 6.985 mm (0.2744 — 0.2750 in.)
	Stem diameter (Exhaust)	6.965 — 6.980 mm (0.2742 — 0.2748 in.)
	Stem oil clearance — STD (Intake)	0.025 — 0.060 mm (0.0010 — 0.0024 in.)
	Stem oil clearance — STD (Exhaust)	0.030 — 0.065 mm (0.0012 — 0.0026 in.)
	Stem oil clearance — Limit (Intake)	0.08 mm (0.0031 in.)
	Stem oil clearance — Limit (Exhaust)	0.10 mm (0.0039 in.)
	Margin thickness — STD (Intake)	1.5 mm (0.059 in.)
	Margin thickness — STD (Exhaust)	1.4 mm (0.055 in.)
	Margin thickness — Limit	1.0 mm (0.039 in.)
Valve spring	Squareness — Limit	2.0 mm (0.079 in.)
	Free length	43.94 — 45.06 mm (1.7299 — 1.7740 in.)
	Installed tension at 36.5 mm (1.437 in.)	214 — 238 N (21.8 — 24.2 kgf, 48.1 — 53.4 lbf)
Valve lifter	Lifter diameter	33.966 — 33.976 mm (1.3372 — 1.3376 in.)
	Lifter bore diameter	34.000 — 34.021 mm (1.3386 — 1.3394 in.)
	Oil clearance — STD	0.024 — 0.055 mm (0.0009 — 0.0022 in.)
	Oil clearance — Limit	0.07 mm (0.0028 in.)
Manifold	Warpage — Limit	0.30 mm (0.0118 in.)
Camshaft	Thrust clearance — STD	0.030 — 0.080 mm (0.0012 — 0.0031 in.)
	Thrust clearance — Limit	0.10 mm (0.0039 in.)
	Journal oil clearance — STD	0.0025 — 0.062 mm (0.0010 — 0.0024 in.)
	Journal oil clearance — Limit	0.10 mm (0.0039 in.)
	Journal diameter	26.959 — 26.975 mm (1.0614 — 1.0620 in.)
	Circle runout — Limit	0.06 mm (0.0024 in.)
	Cam lobe height — STD	50.61 — 50.71 mm (1.9925 — 1.9965 in.)
	Cam lobe height — Limit	50.51 mm (1.9886 in.)
	Camshaft gear backlash — STD	0.020 — 0.200 mm (0.0008 — 0.0079 in.)
	Camshaft gear backlash — Limit	0.30 mm (0.0188 in.)
	Camshaft gear spring end free distance	18.2 — 18.8 mm (0.717 — 0.740 in.)
Spark plug tube	Protrusion	45.5 mm (1.791 in.)
Oil pump drive shaft gear	Thrust clearance — STD	0.050 — 0.150 mm (0.0020 — 0.0059 in.)
	Thrust clearance — Limit	0.30 mm (0.0118 in.)
Chain and timing gear	Chain elongation at 16 links — Limit	146.6 mm (5.772 in.)
	Crankshaft timing gear wear — Limit	126.0 mm (4.961 in.)
	Camshaft timing gear wear — Limit	65.4 mm (2.575 in.)
Chain tensioner slipper and vibration damper	Wear — Limit	1.0 mm (0.039 in.)

Cylinder block	Cylinder head surface warpage — Limit	0.05 mm (0.0020 in.)
	Cylinder bore diameter — STD (Mark 1)	100.000 — 100.010 mm (3.9370 — 3.9374 in.)
	Cylinder bore diameter — STD (Mark 2)	100.010 — 100.020 mm (3.9374 — 3.9378 in.)
	Cylinder bore diameter — STD (Mark 3)	100.020 — 100.030 mm (3.9378 — 3.9382 in.)
	Cylinder bore diameter — Limit (STD)	100.23 mm (3.9461 in.)
	Cylinder bore diameter — Limit (O/S 0.50)	100.73 mm (3.9658 in.)
	Main bearing bolt outside diameter — STD	10.85 — 11.00 mm (0.4271 — 0.4331 in.)
	Main bearing bolt outside diameter — Limit	10.6 mm (0.417 in.)
Piston and piston ring	Piston diameter — STD (Mark 1)	99.950 — 99.960 mm (3.9350 — 3.9354 in.)
	Piston diameter — STD (Mark 2)	99.960 — 99.970 mm (3.9354 — 3.9358 in.)
	Piston diameter — STD (Mark 3)	99.970 — 99.980 mm (3.9358 — 3.9362 in.)
	Piston diameter — O/S 0.50	100.450 — 100.480 mm (3.9547 — 3.9559 in.)
	Piston diameter — O/S 1.00	100.950 — 100.980 mm (3.9744 — 3.9756 in.)
	Piston oil clearance — STD	0.040 — 0.060 mm (0.0016 — 0.0024 in.)
	Piston ring groove clearance — No.1	0.040 — 0.080 mm (0.0016 — 0.0031 in.)
	Piston ring groove clearance — No.2	0.030 — 0.070 mm (0.0012 — 0.0028 in.)
	Piston ring end gap — STD (No.1)	0.300 — 0.520 mm (0.0118 — 0.0205 in.)
	Piston ring end gap — STD (No.2)	0.450 — 0.670 mm (0.0177 — 0.0264 in.)
	Piston ring end gap — STD (Oil)	0.150 — 0.520 mm (0.0059 — 0.0205 in.)
	Piston ring end gap — Limit (No.1)	1.12 mm (0.0441 in.)
	Piston ring end gap — Limit (No.2)	1.17 mm (0.0461 in.)
	Piston ring end gap — Limit (Oil)	1.12 mm (0.0441 in.)
	Piston pin installing temperature	80 — 90°C (176 — 194°F)
Connecting rod	Thrust clearance — STD	0.16 — 0.262 mm (0.0063 — 0.0103 in.)
	Thrust clearance — Limit	0.362 mm (0.0143 in.)
	Connecting rod bearing center wall thickness	
	— STD (Mark 2)	2.489 — 2.492 mm (0.0980 — 0.0981 in.)
	— STD (Mark 3)	2.492 — 2.495 mm (0.0981 — 0.0982 in.)
	— STD (Mark 4)	2.495 — 2.498 mm (0.0982 — 0.0983 in.)
	— STD (Mark 5)	2.498 — 2.501 mm (0.0983 — 0.0985 in.)
	— STD (Mark 6)	2.501 — 2.504 mm (0.0985 — 0.0986 in.)
	Connecting rod oil clearance	
	— STD (STD)	0.032 — 0.050 mm (0.0013 — 0.0020 in.)
	— STD (U/S 0.25)	0.033 — 0.073 mm (0.0013 — 0.0029 in.)
	— Limit	0.10 mm (0.0039 in.)
	Rod bending — Limit per 100 mm (3.94 in.)	0.05 mm (0.0020 in.)
	Rod twist — Limit per 100 mm (3.94 in.)	0.15 mm (0.0059 in.)
	Bushing inside diameter	26.008 — 26.020 mm (1.0239 — 1.0244 in.)
	Piston pin diameter	26.000 — 26.012 mm (1.0236 — 1.0241 in.)
	Piston pin oil clearance — STD	0.004 — 0.012 mm (0.0002 — 0.0005 in.)
	Piston pin oil clearance — Limit	0.05 mm (0.0020 in.)
	Connecting rod bolt outside diameter — STD	8.40 — 8.60 mm (0.3307 — 0.3386 in.)
	Connecting rod bolt outside diameter — Limit	8.0 mm (0.315 in.)

Crankshaft	Thrust clearance — STD	0.020 — 0.0220 mm (0.0008 — 0.0087 in.)
	Thrust clearance — Limit	0.30 mm (0.0118 in.)
	Thrust washer thickness (STD)	2.440 — 2.490 mm (0.0961 — 0.0980 in.)
	Thrust washer thickness (O/S 0.125)	2.503 — 2.553 mm (0.0985 — 0.1005 in.)
	Thrust washer thickness (O/S 0.250)	2.565 — 2.615 mm (0.1010 — 0.1030 in.)
	Main journal oil clearance — STD (STD)	0.042 — 0.060 mm (0.0017 — 0.0024 in.)
	Main journal oil clearance — STD (U/S 0.25)	0.041 — 0.81 mm (0.0016 — 0.0032 in.)
	Main journal oil clearance — Limit	0.10 mm (0.0039 in.)
	Main journal diameter — STD	68.982 — 69.000 mm (2.7158 — 2.7165 in.)
	Main journal diameter — U/S 0.25	68.745 — 68.755 mm (2.7065 — 2.7069 in.)
	Main bearing center wall thickness	
	— STD (Mark 2)	2.489 — 2.492 mm (0.0980 — 0.0981 in.)
	— STD (Mark 3)	2.492 — 2.495 mm (0.0981 — 0.0982 in.)
	— STD (Mark 4)	2.495 — 2.498 mm (0.0982 — 0.0983 in.)
	— STD (Mark 5)	2.498 — 2.501 mm (0.0983 — 0.0985 in.)
	— STD (Mark 6)	2.501 — 2.504 mm (0.0985 — 0.0986 in.)
	Crank pin diameter — STD	56.982 — 57.000 mm (2.2434 — 2.2441 in.)
	Crank pin diameter — U/S 0.25	56.745 — 56.755 mm (2.2341 — 2.2344 in.)
	Circle runout — Limit	0.06 mm (0.0024 in.)
	Main journal taper and out-of-round (Limit)	0.02 mm (0.0008 in.)
	Crank pin taper and out-of-round (Limit)	0.02 mm (0.0008 in.)
Flywheel bolt	Outside diameter — STD	10.3 — 10.5 mm (0.406 — 0.413 in.)
	Outside diameter — Limit	9.5 mm (0.374 in.)



TORQUE SPECIFICATIONS

EGOVU-01

Part tightened	N·m	kgf·cm	ft·lbf
Air intake connector x Cylinder head	20	200	14
Air intake connector x Carburetor	5.4	55	48 in·lbf
Distributor x Cylinder head	21	210	15
Spark plug x Cylinder head	20	200	14
Cylinder head x Cylinder block (1st)	39	400	29
Cylinder head x Cylinder block (2st)	Turn 90°	Turn 90°	Turn 90°
Cylinder head x Cylinder block (3rd)	Turn 90°	Turn 90°	Turn 90°
Cylinder head x Timing chain cover	21	210	15
Camshaft bearing cap x Cylinder head	16	160	12
Chain tensioner x Cylinder head	21	210	15
Water by-pass outlet x Cylinder head	21	210	15
Engine hanger x Cylinder head	41	420	30
Exhaust manifold x Cylinder head	39	400	29
Heat insulator x Exhaust manifold	19	195	14
Water by-pass flange x Intake manifold	21	210	15
Intake manifold x Cylinder head	21	210	15
Oil dipstick guide x Intake manifold	20	200	14
Oil dipstick guide x No.1 oil pan	20	200	14
Accelerator cable bracket x Cylinder head	18	185	13
No.2 water by-pass pipe x Cylinder head	20	200	14
No.2 water by-pass pipe x Engine hanger	20	200	14
Fuel pump x Cylinder head	21	210	15


EG

Water outlet x Cylinder head	21	210	15
Alternator bracket x Cylinder head	43	440	32
Oil jet x Cylinder block	20	200	14
Chain tensioner slipper x Cylinder block	69	700	51
Vibration damper x Cylinder block	20	200	14
Timing chain cover x Cylinder block	21	210	15
Cranckshaft pulley x Crankshaft	412	4,200	304
No.1 oil pan x Cylinder block (14 mm head bolt)	43	440	32
No.1 oil pan x Cylinder block (12 mm head bolt)	20	200	14
No.1 oil pan x Timinnng chain cover	20	200	14
No.2 oil pan x No.1 oil pan (Bolt)	7.8	80	69 in.·lbf
No.2 oil pan x No.1 oil pan (Nut)	8.8	90	78 in.·lbf
Water pump x Timing chain cover	21	210	14
Main bearing cap x Cylinder block (1st)	74	750	54
Main bearing cap x Cylinder block (2nd)	Turn 90°	Turn 90°	Turn 90°
Connecting rod cap x Connecting rod (1st)	48	490	35
Connecting rod cap x Connecting rod (2nd)	Turn 90°	Turn 90°	Turn 90°
Rear oil seal retainer x Cylinder block	20	200	14
Oil cooler cover x Cylinder block	21	210	15
LH engine mounting bracket	69	700	51
RH engine mounting bracket	69	700	51
Cylinder block No.1 cover x Cylinder block	36	370	27
Oil filter union x Cylinder block	44	450	33
Flywheel x Crankshaft (1st)	20	200	14
Flywheel x Crankshaft (2nd)	Turn 90°	Turn 90°	Turn 90°

FUEL SYSTEM

DESCRIPTION

EGOUN-01

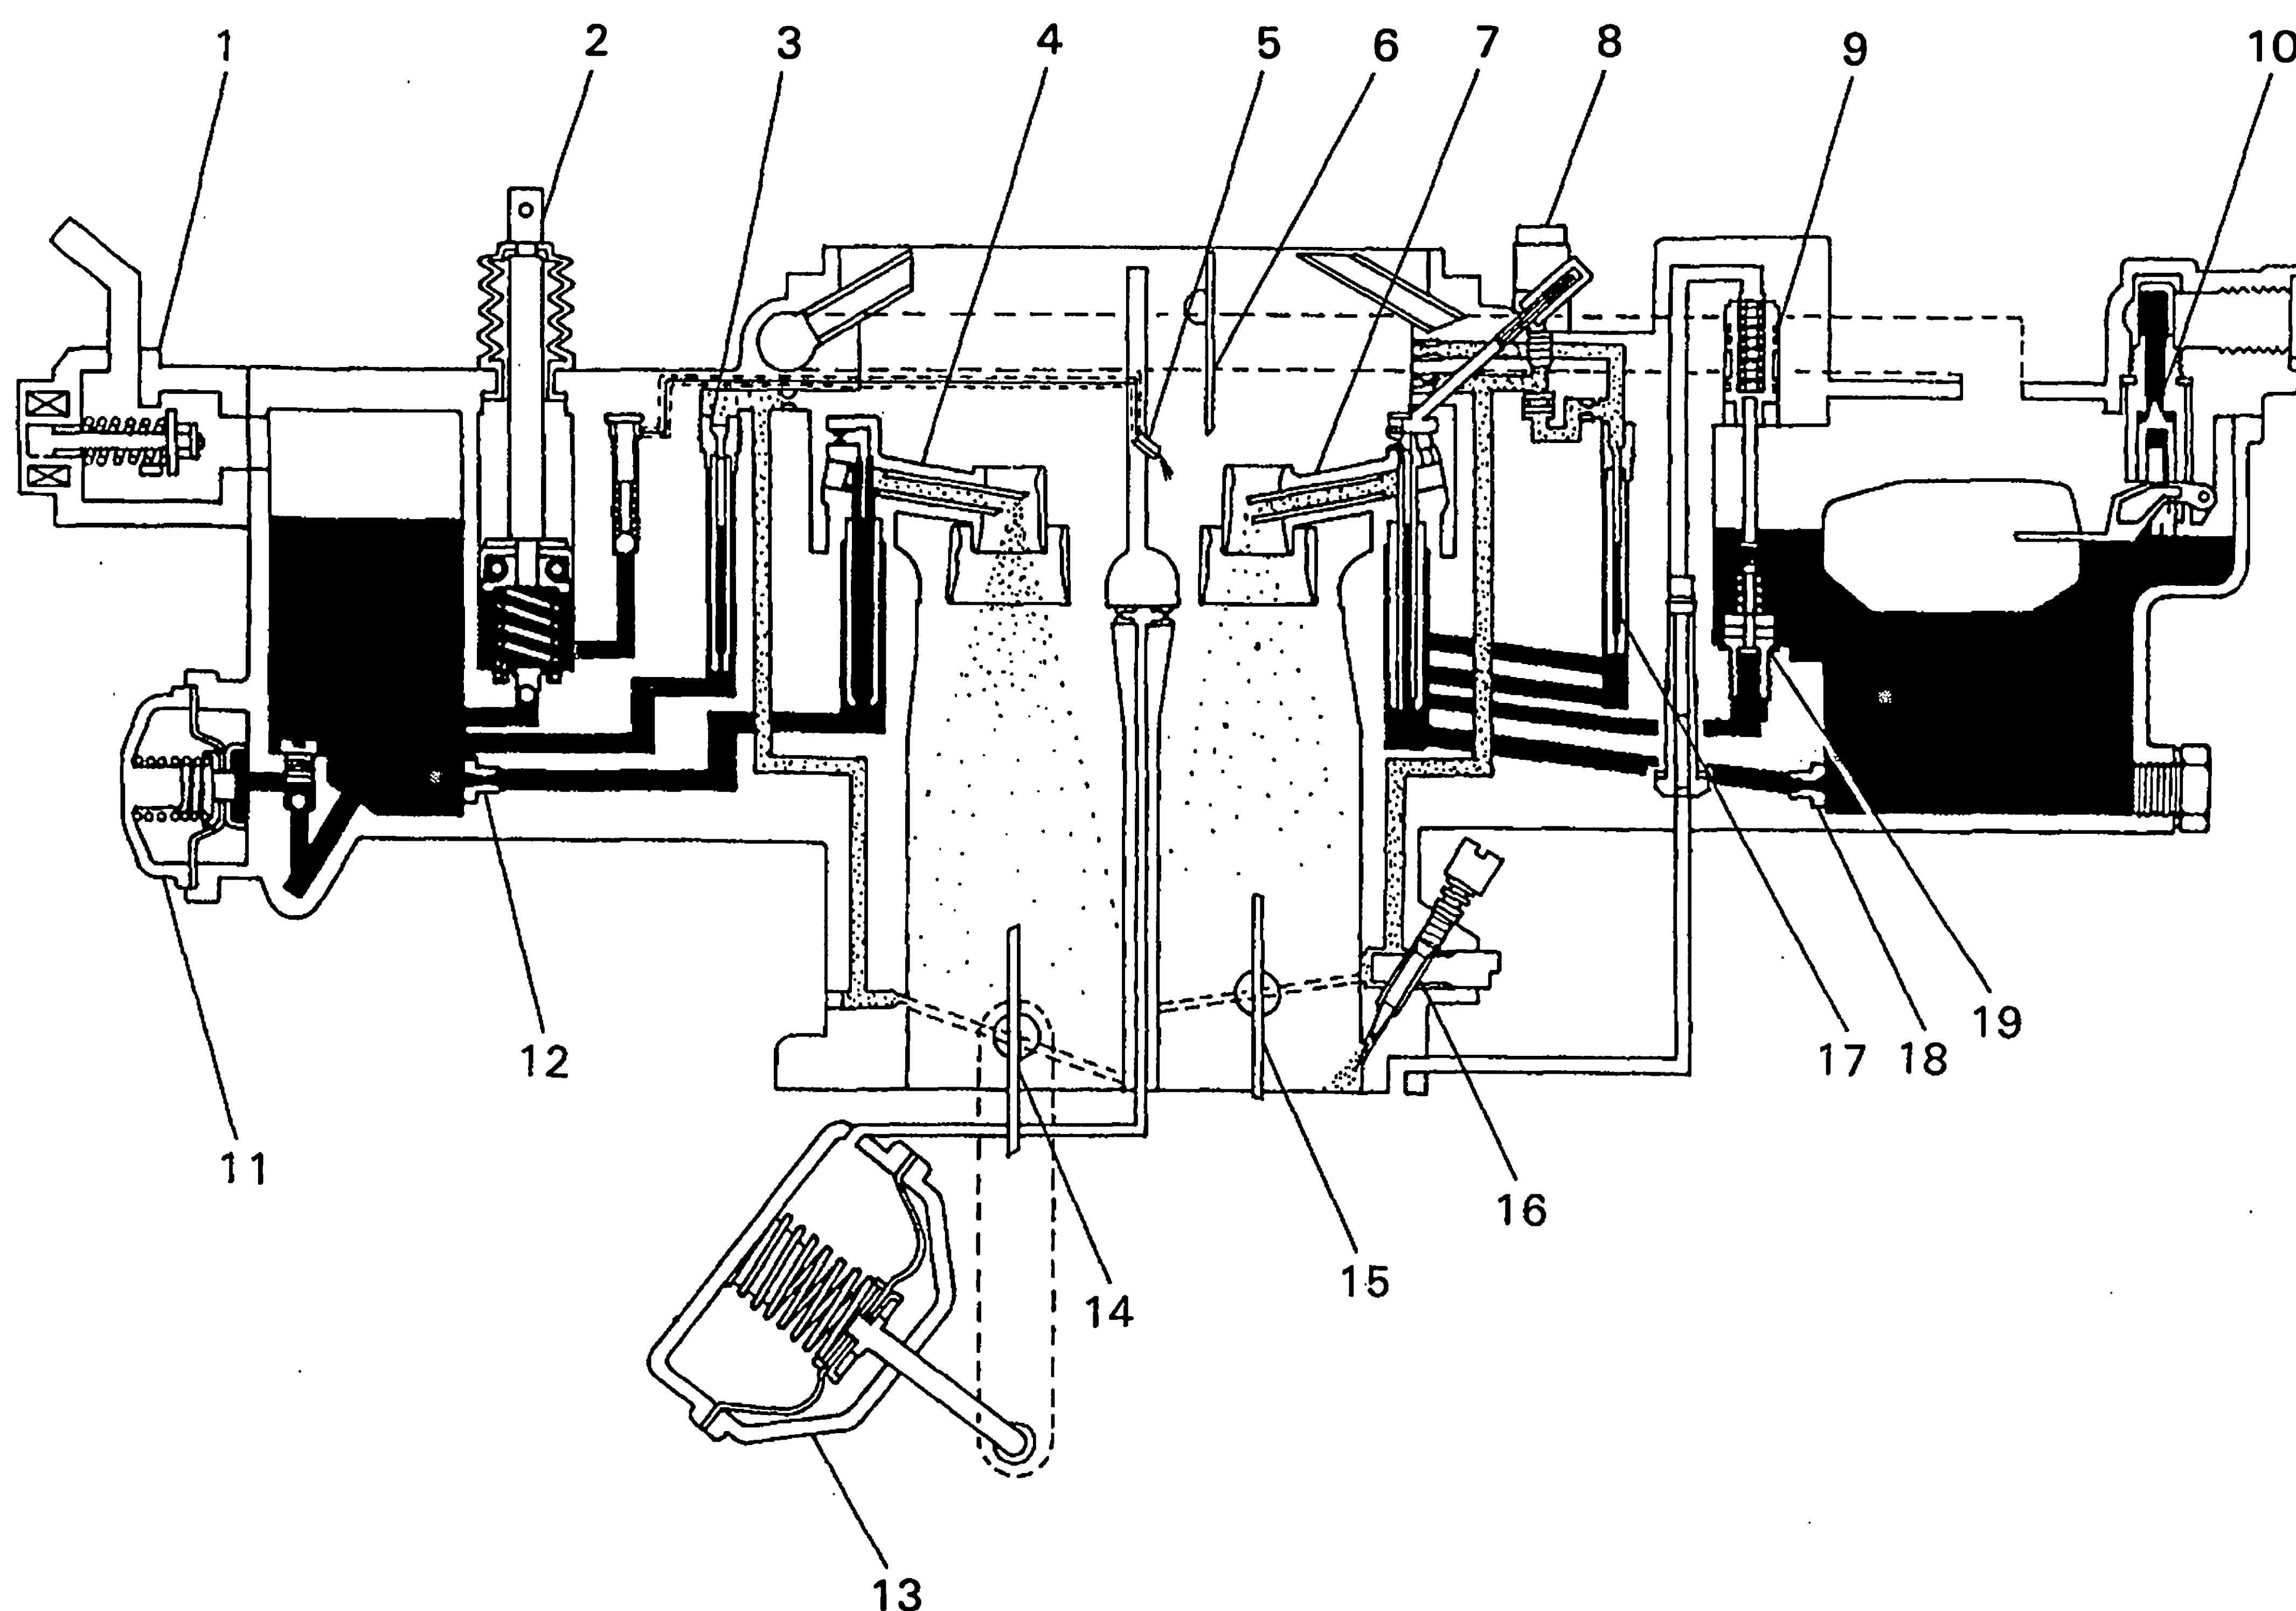

1. Outer Vent Control Valve (OVCV)
2. Acceleration Pump Plunger
3. Secondary Slow Jet
4. Secondary Main Nozzle
5. Acceleration Nozzle
6. Choke Valve
7. Primary Main Nozzle
8. Fuel Cut Solenoid Valve
9. Power Piston
10. Needle Valve

11. Auxiliary Acceleration Pump (AAP)
12. Secondary Main Jet
13. Secondary Throttle Valve Diaphragm
14. Secondary Throttle Valve
15. Primary Throttle Valve
16. Idle Mixture Adjusting Screw
17. Primary Slow Jet
18. Primary Main Jet
19. Power valve

CARBURETOR

In this type of double barrel carburetor, air and fuel are mixed in a single barrel (venturi chamber) when the engine is under comparatively light loads, as when driving at low to medium speeds. When the engine is under a heavy load or is running at high speeds, air and fuel are mixed in both barrels (venturi chambers).

The carburetor utilizes venturi vacuum to spray the required gasoline mixture through the main nozzle to the intake manifold. The carburetor consists of a venturi which detects the airflow, a main jet and nozzle which measures the amount of fuel, and a throttle valve and other parts which are used to adjust the intake air pressure. Gasoline fed from the fuel pump accumulates for a short time in the float chamber, with float assuring that the amount is always constant. In the engine intake process, when a piston moves downward inside a cylinder, the air in the chamber becomes thin. This causes air to flow into the cylinder from air cleaner through the carburetor and intake manifold. The speed of this air is increased when it passes through the narrowed portion of the carburetor body, that is, the venturi. The pressure drops in this area and results in gasoline being sprayed from the main nozzle in a jet. The amount of gasoline sprayed is determined mainly by the airflow in response to the amount the throttle valve is opened, and by the venturi vacuum. The sprayed gasoline is scattered by the flow of high speed air and vaporized, then this gas mixture is conducted into intake manifold.

Float System

The float system temporarily stores gasoline sent from the fuel pump and also serves the function of maintaining the amount of accumulated fuel (the fuel level) at a constant level.

Primary Low Speed System

The primary low speed system is used to supply gasoline for low engine speeds, when the throttle valve is opened only an extremely small amount.

Solenoid Valve

Turning off the ignition switch closes the solenoid valve and stops the supply of fuel to the low speed circuit. Turning the ignition switch on causes current to flow through the solenoid valve coil, opening the valve and allowing the supply of fuel to the low speed circuit.

Primary High Speed System

The primary high speed system is the most used operating system, in which the negative pressure generated by the passage of air through the venturi is used to suck out gasoline. This system operates to mix fuel for a wide range of speeds, and therefore has a great influence on the performance of the carburetor. The high speed system is designed to deliver an economical mixing ratio. However, auxiliary systems such as the acceleration system or the power system are used when a larger output is required.

Secondary Low Speed System

The flow rate through the venturi on the secondary side is low when the secondary throttle valve is opened only a little, and no gasoline is sprayed from the secondary main nozzle. Only air is sucked in from the secondary side. Since the gas mixture is lean, the secondary side low speed system is prevented from operating.

Secondary High Speed System

The primary high speed side operates during low output, when only a small amount of air is sucked in. However, during medium or high output, when a large amount of air is sucked in, the primary high speed side is inadequate for supplying enough fuel mixture. Therefore, the throttle valve on the secondary side opens, permitting use of both high speed systems. The construction of the secondary high speed system is the same as that of the primary high speed system, but since the secondary high speed system is used when the engine is delivering a greater output, the secondary high speed system is designed with larger nozzle, venturi and jet than the primary side.

Power System

The primary high speed system is designed to use fuel economically. However, when the engine's output is high, a greater quantity of fuel is required than can be delivered by the primary high speed system. The extra fuel required for high output is supplied through the power system, which delivers a rich gas mixture to the high speed system.

Acceleration System

Depressing the accelerator pedal suddenly during normal driving requires an increase in the engine's output, and at such a time, the carburetor must supply a rich gas mixture to the engine. However, even though the amount of air is increased immediately when the throttle valve is opened, the gas mixture becomes temporarily diluted due to the weight of the gasoline being greater than that of air. The acceleration system has been adopted to prevent this delay by supplying a rich gas mixture during acceleration.

The acceleration pump always operates, regardless of the coolant temperature, but the auxiliary acceleration pump (AAP) operates only when the coolant temperature is low.

Choke System

The choke system makes it easier to start the engine when the temperature is low. At such times, cranking speed is lower and as a result, the intake negative pressure is also lower, reducing the amount of fuel supplied. In addition, since the intake manifold is cold, gasification of fuel is poor and the gas mixture delivered to the combustion chamber is thin, making starting difficult. The choke system supplies a rich gas mixture to the intake manifold to overcome this problem.

Outer Vent Control Valve (OVCV)

While the engine is stopped, if gasoline vapor from the float chamber passes through the air vent and a large amount collects in the intake manifold, engine restartability will decline. To prevent this, an outer vent control valve (OVCV) is fitted. When the engine is stopped, this valve opens and releases the gasoline vapor from the carburetor to be absorbed by charcoal cannister, from where it is drawn to the engine during.

FUEL FILTER

Gasoline used for fuel contains a small proportion of dirt or moisture. If permitted to reach the narrow channels of the carburetor or the jet nozzle, these contaminants would soon clog them and cause the engine to stall. The fuel filter is designed to remove the dirt and moisture from fuel. Fuel passes through an element in the filter. This element slows the rate of flow of the fuel, causing the moisture and particles of dirt, etc. to settle out. The lighter contaminants are filtered by the filter element.

FUEL PUMP

The fuel pump pumps fuel from the fuel tank and delivers it to the carburetor. The fuel pump in this engine is a mechanical type (diaphragm type) pump which is operated directly by the camshaft.




The diaphragm type fuel pump uses a diaphragm, which moves up and down in a pump chamber. Two valves are located in the each pump chamber opposite the direction of operation. This up and down motion of the diaphragm creates a pumping action.

PRECAUTIONS

1. Before working on the fuel system, disconnect the cable from the negative battery terminal. EGROUP-01
2. When working on the fuel system, keep away from possible fire hazards and do not smoke.
3. Keep gasoline off rubber or leather parts.
4. Work on only one component group at a time to help avoid confusion between similar looking parts.
5. Keep work area clean to avoid contamination of the carburetor and components.
6. Be careful not to mix up or lose clips or springs.

PREPARATION
SST (SPECIAL SERVICE TOOLS)



EGOUQ-01

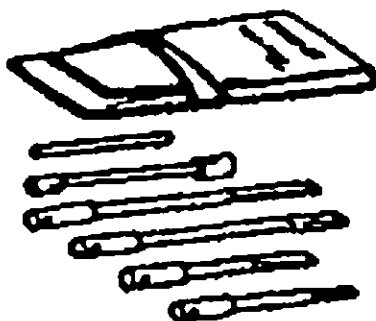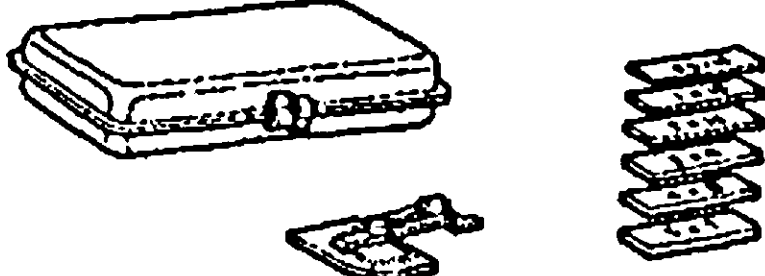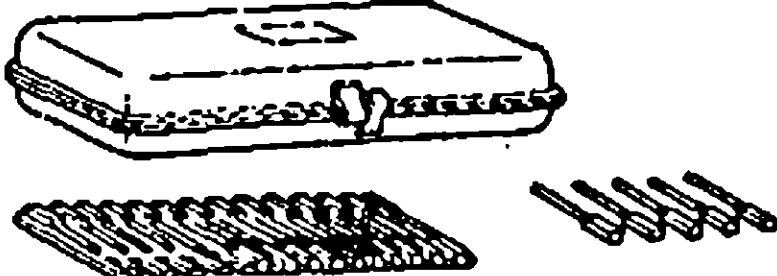	09860-11011 Carburetor Driver Set	
	09240-00014 Carburetor Adjusting Gauge Set	
	09240-00020 Wire Gauge Set	

EG

RECOMMENDED TOOLS

EGOUR-01

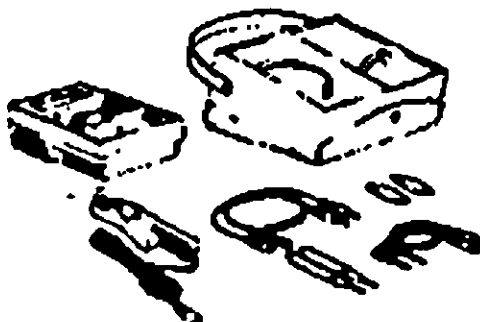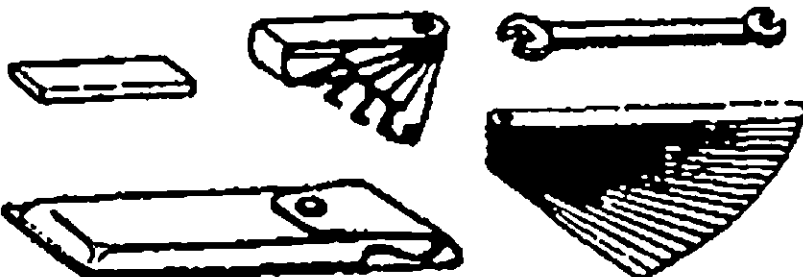	09082-00015 TOYOTA Electrical Tester	
	09200-00010 Engine Adjust Kit	

EQUIPMENT

EGOUS-01

Torque wrench	
---------------	--

ON — VEHICLE INSPECTION


EGOUT-01

1. REMOVE INTAKE AIR CONNECTOR FROM CARBURETOR

2. INSPECT CARBURETOR AND LINKAGE

- Check that the various set screws, plugs and union bolts are tight and correctly installed.
- Check the linkage for excessive wear and missing snap rings.
- Check that the throttle valves open fully when the accelerator pedal is fully depressed.


EG

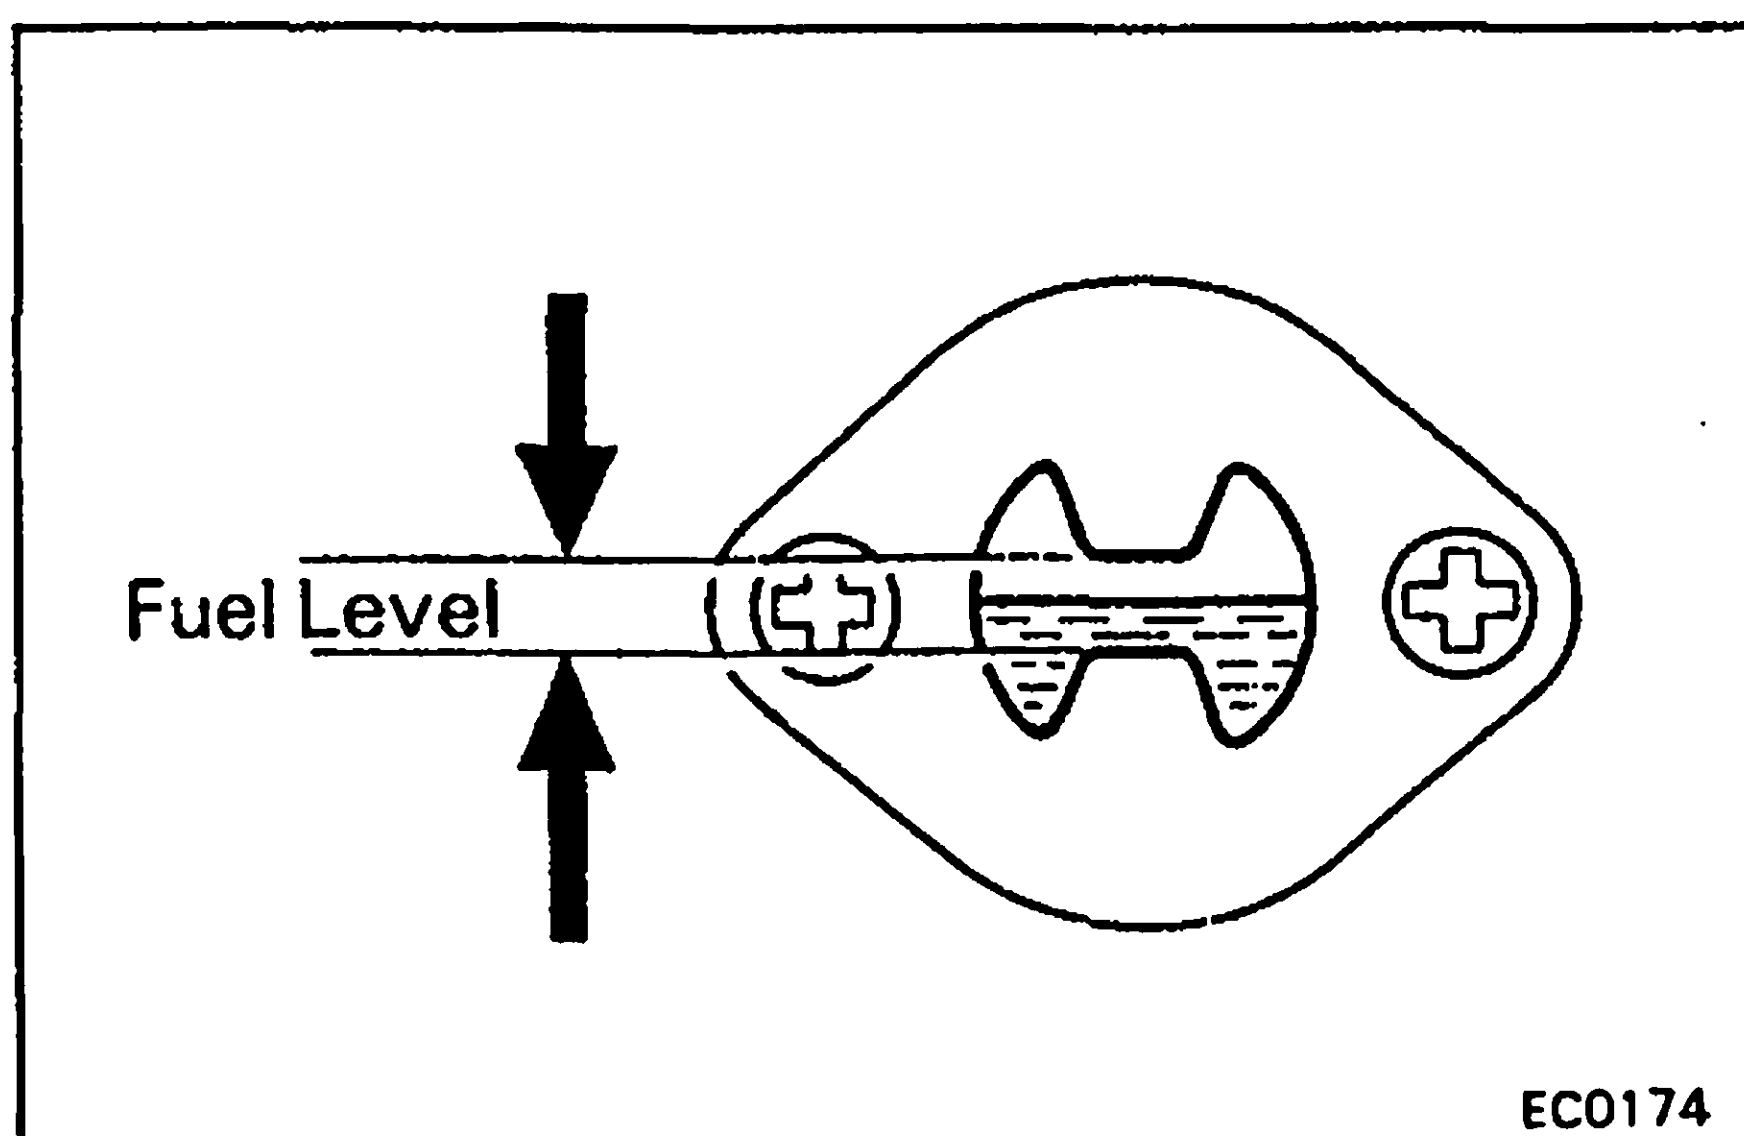

3. INSPECT FLOAT LEVEL

Check that the float level is about even with the correct level in the sight glass.

If not, check the carburetor needle valve and float level, and adjust or repair, as necessary.

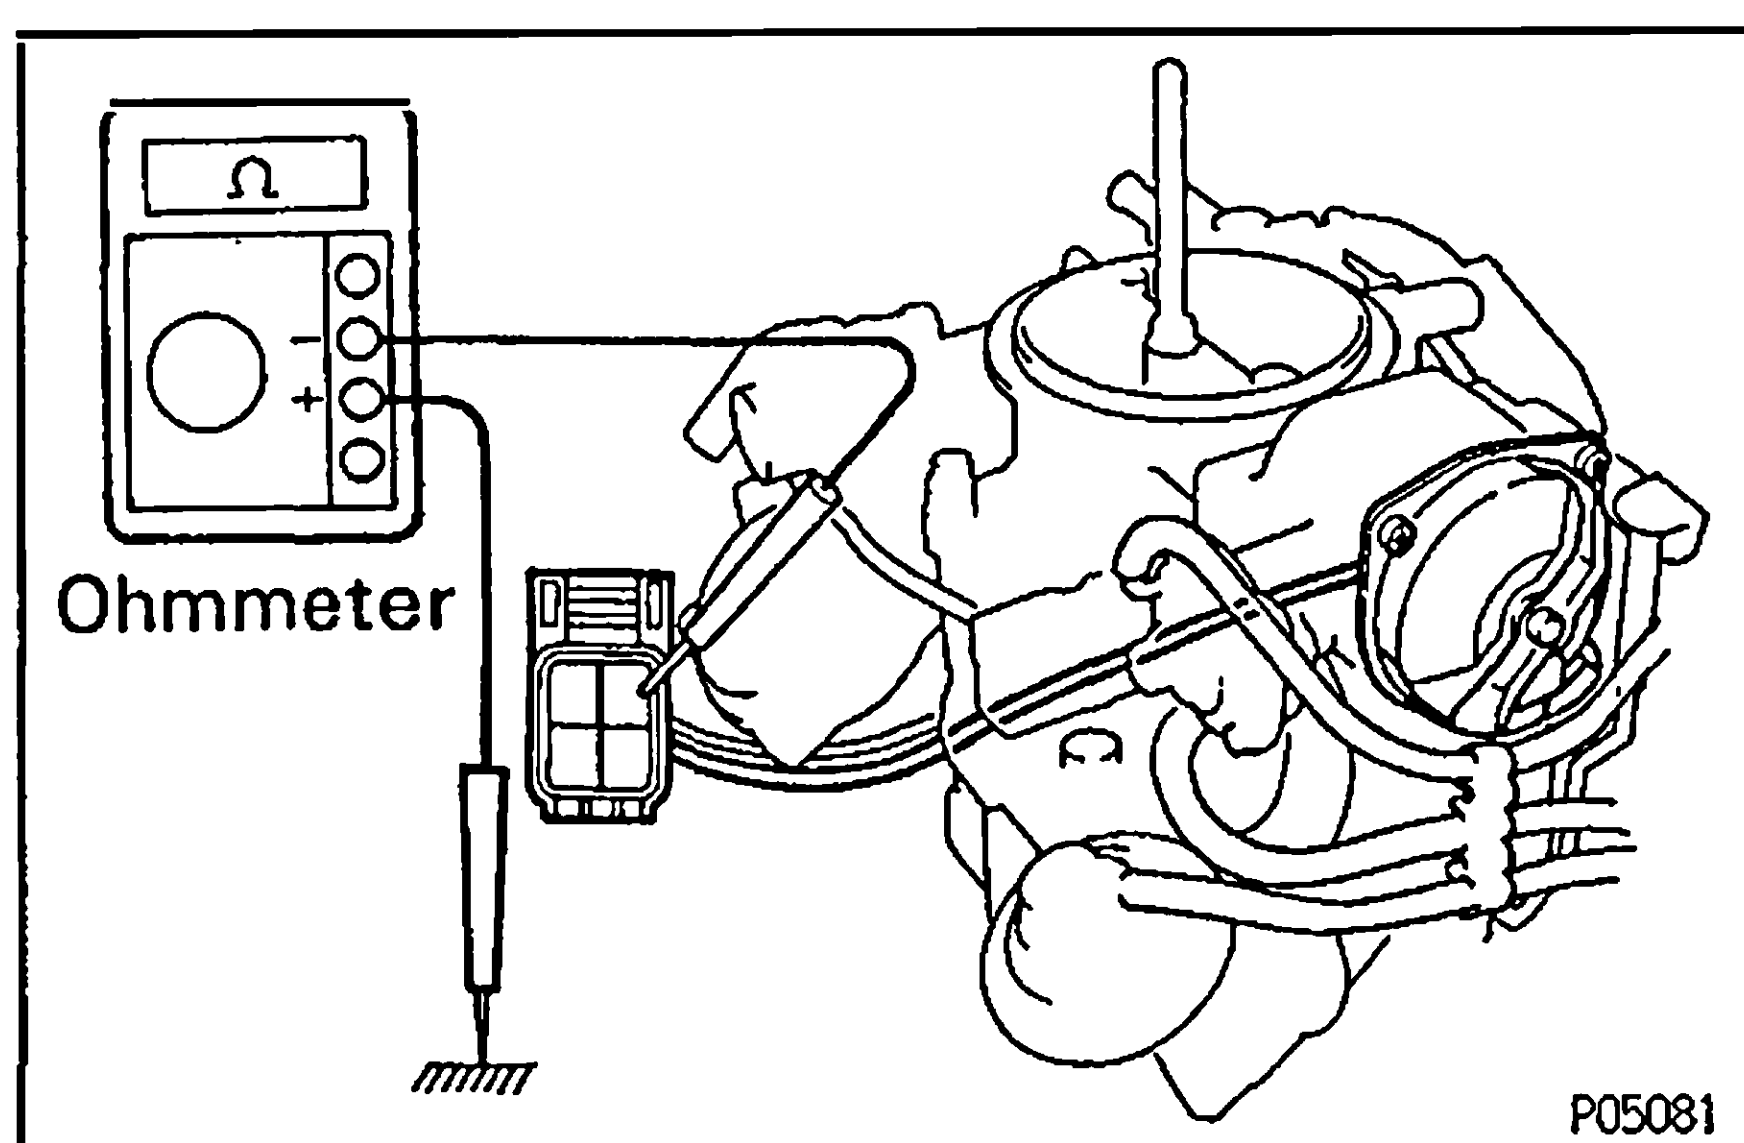

COLD ENGINE


4. INSPECT AUTOMATIC CHOKE SYSTEM

- Disconnect the wiring connector.
- Using an ohmmeter, measure the resistance between the coil housing terminal (red wire) and body ground.


Resistance:

17 — 19 Ω at 20°C (68°F)

- Connect the wiring connector.

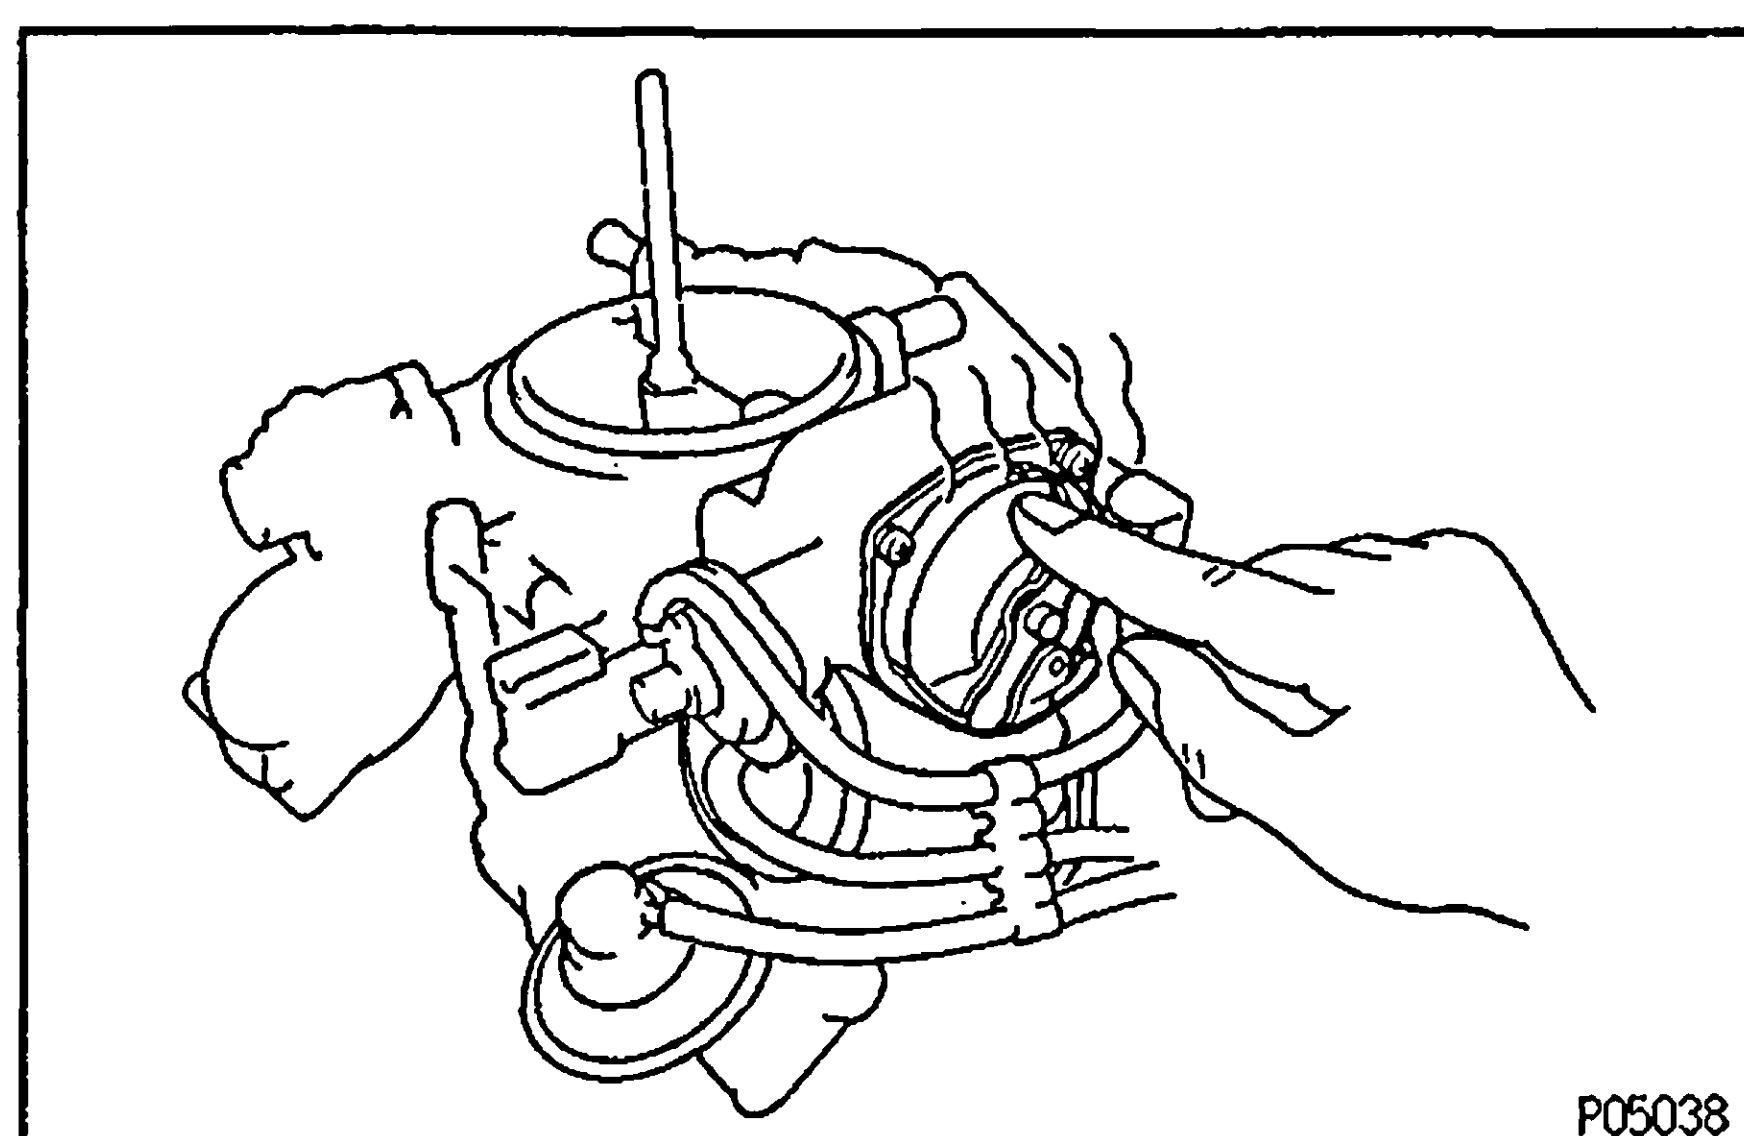

- Start the engine.
- Shortly after, check that the choke valve begins to open and the coil housing (choke heater) is heated.
- Stop the engine.

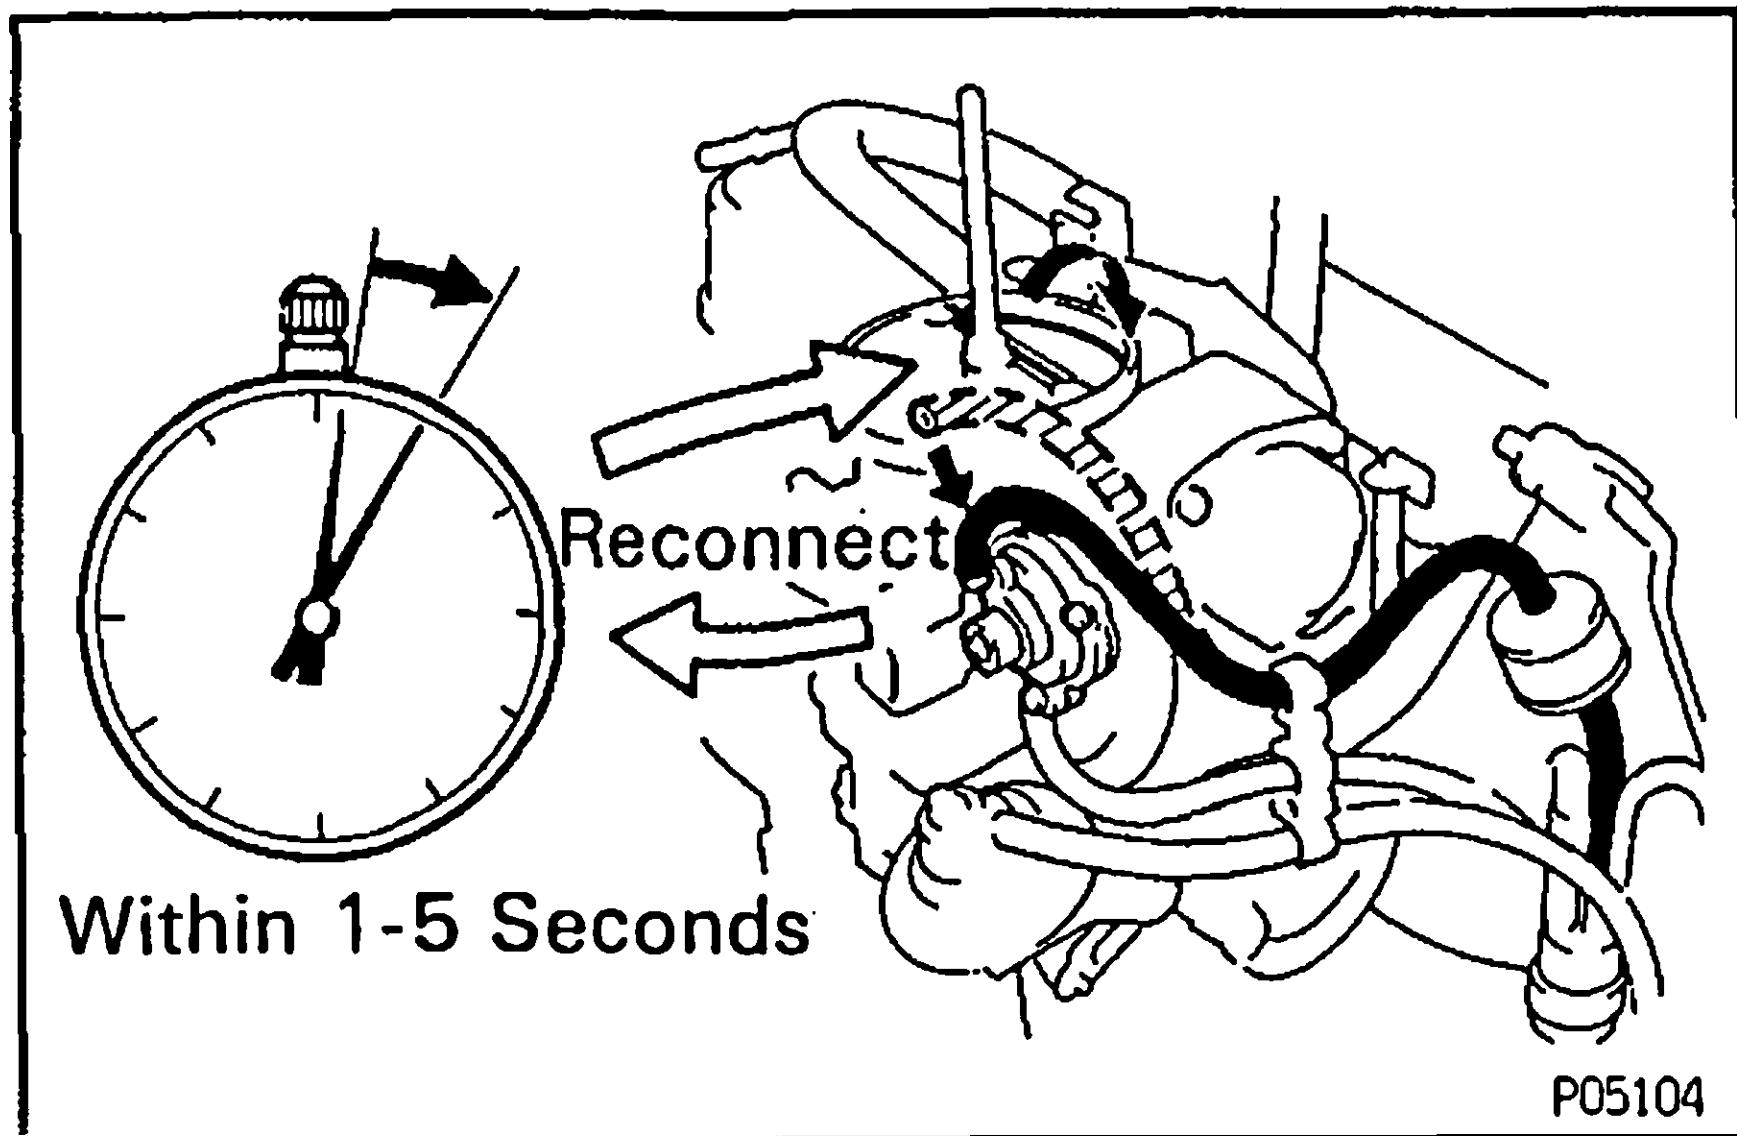**5. INSPECT CHOKE BREAKER (CB) SYSTEM**


- (a) Start the engine.
- (b) Disconnect the vacuum hose from the CB and check that the choke valve moves.
- (c) Reconnect the vacuum hose to the CB and check that the choke valve moves within the specified time after reconnecting the hose.

Time:


1 – 5 seconds

EG


- (d) Stop the engine.

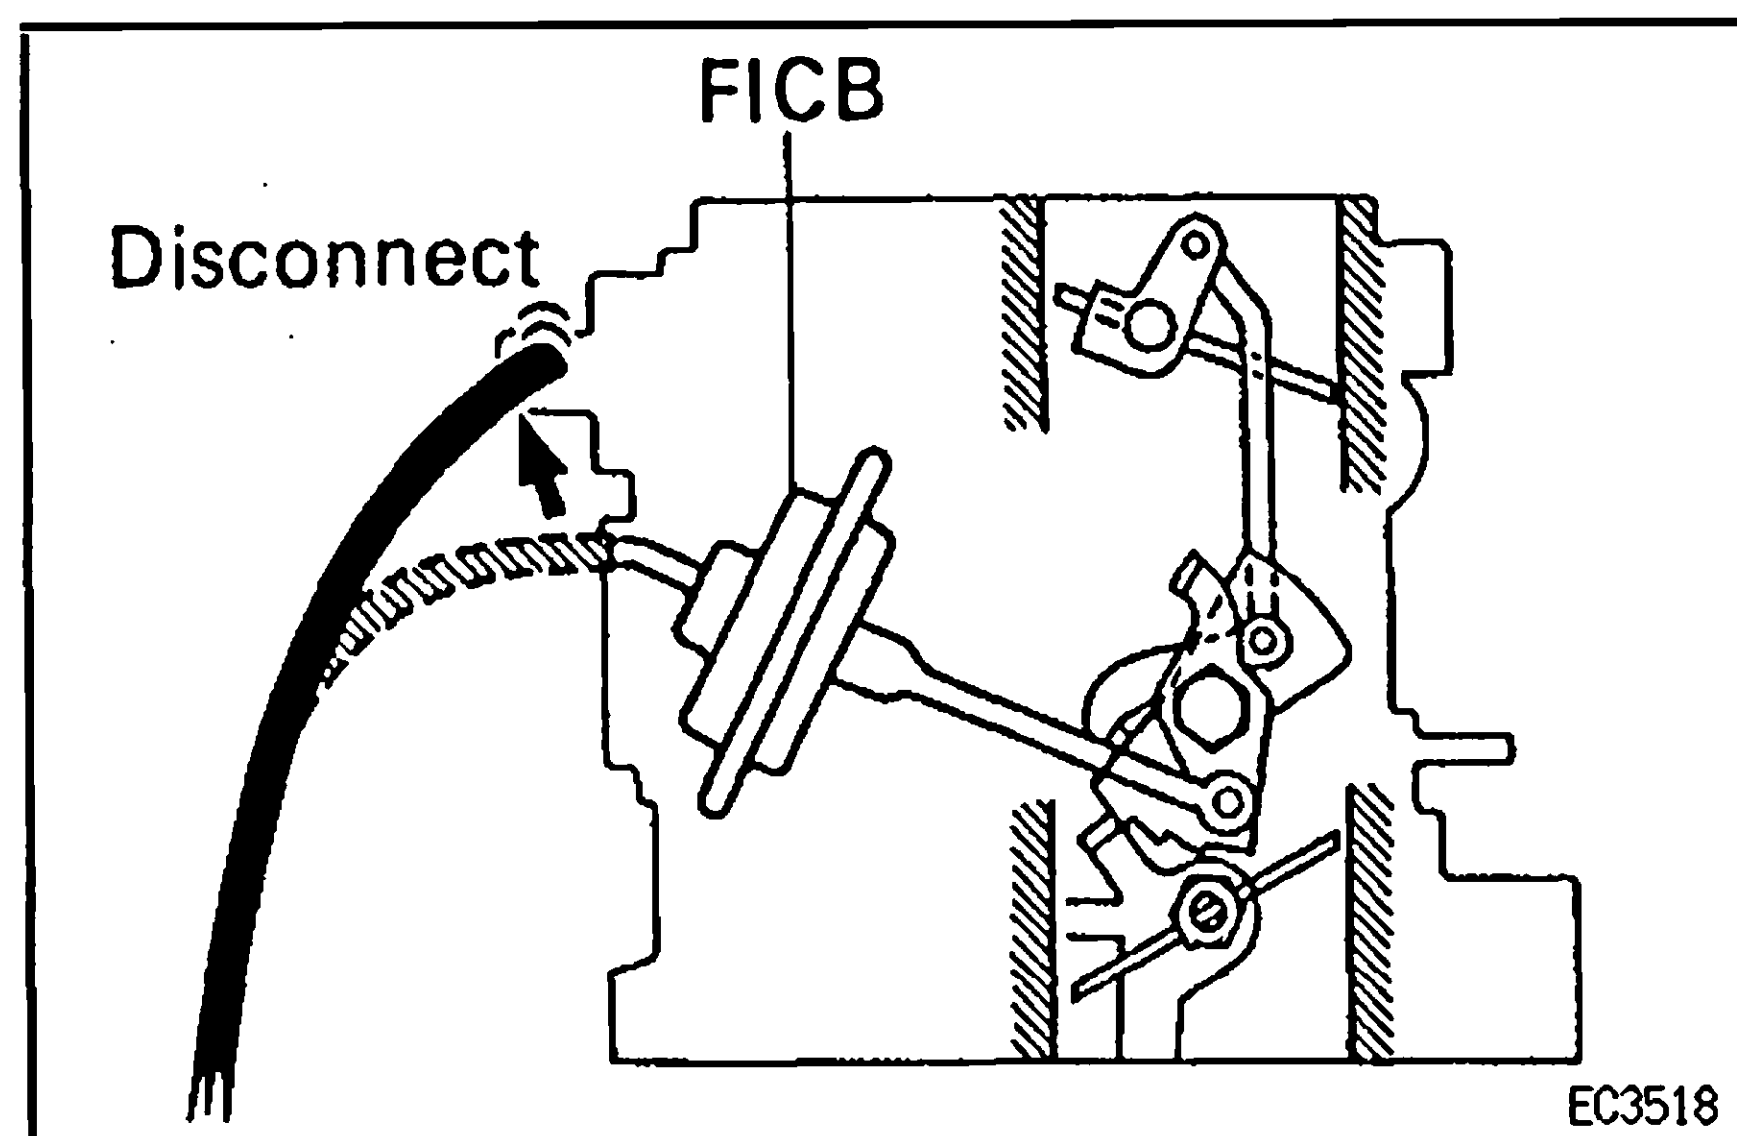6. INSPECT FAST IDLE CAM BREAKER (FICB) SYSTEM


- (a) Disconnect the vacuum hose from the FICB.
- (b) With the coolant temperature below 40°C (104°F), step down on the accelerator pedal and release it.
- (c) Start the engine.

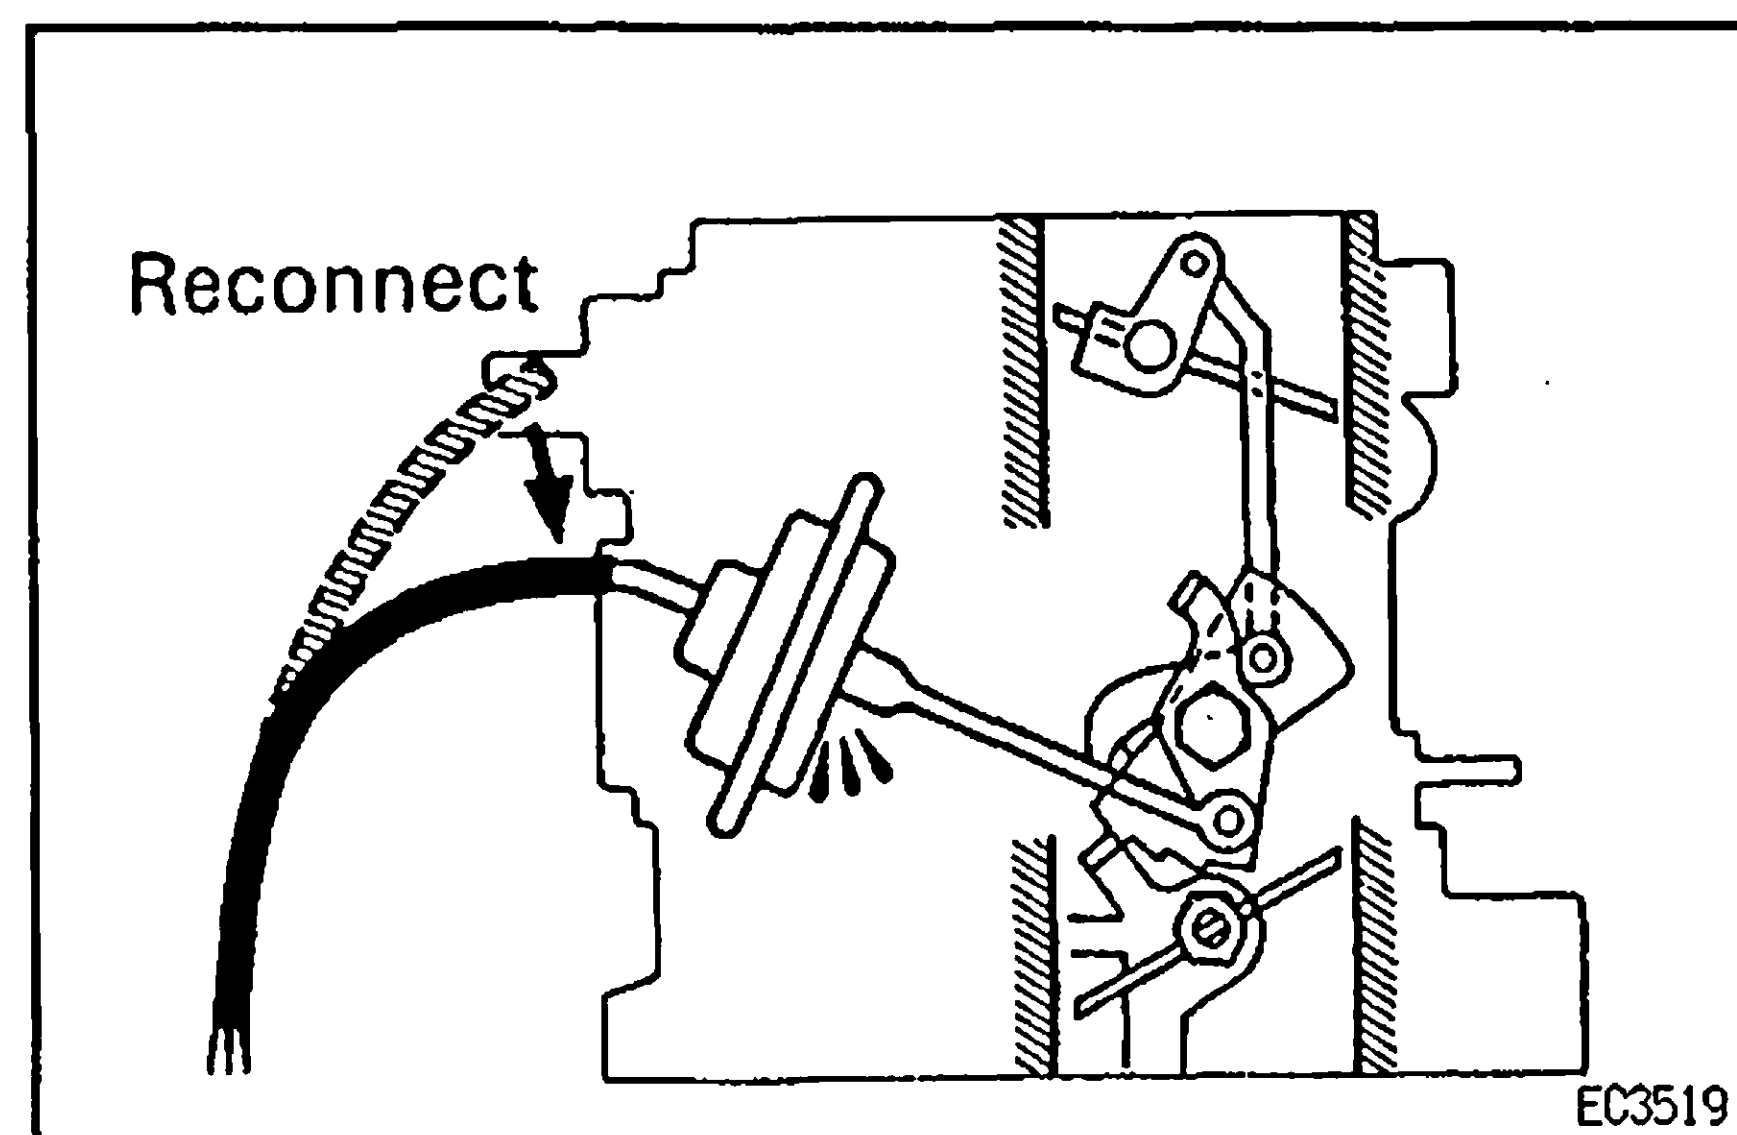

- (d) Reconnect the vacuum hose and check that the choke linkage does not move.

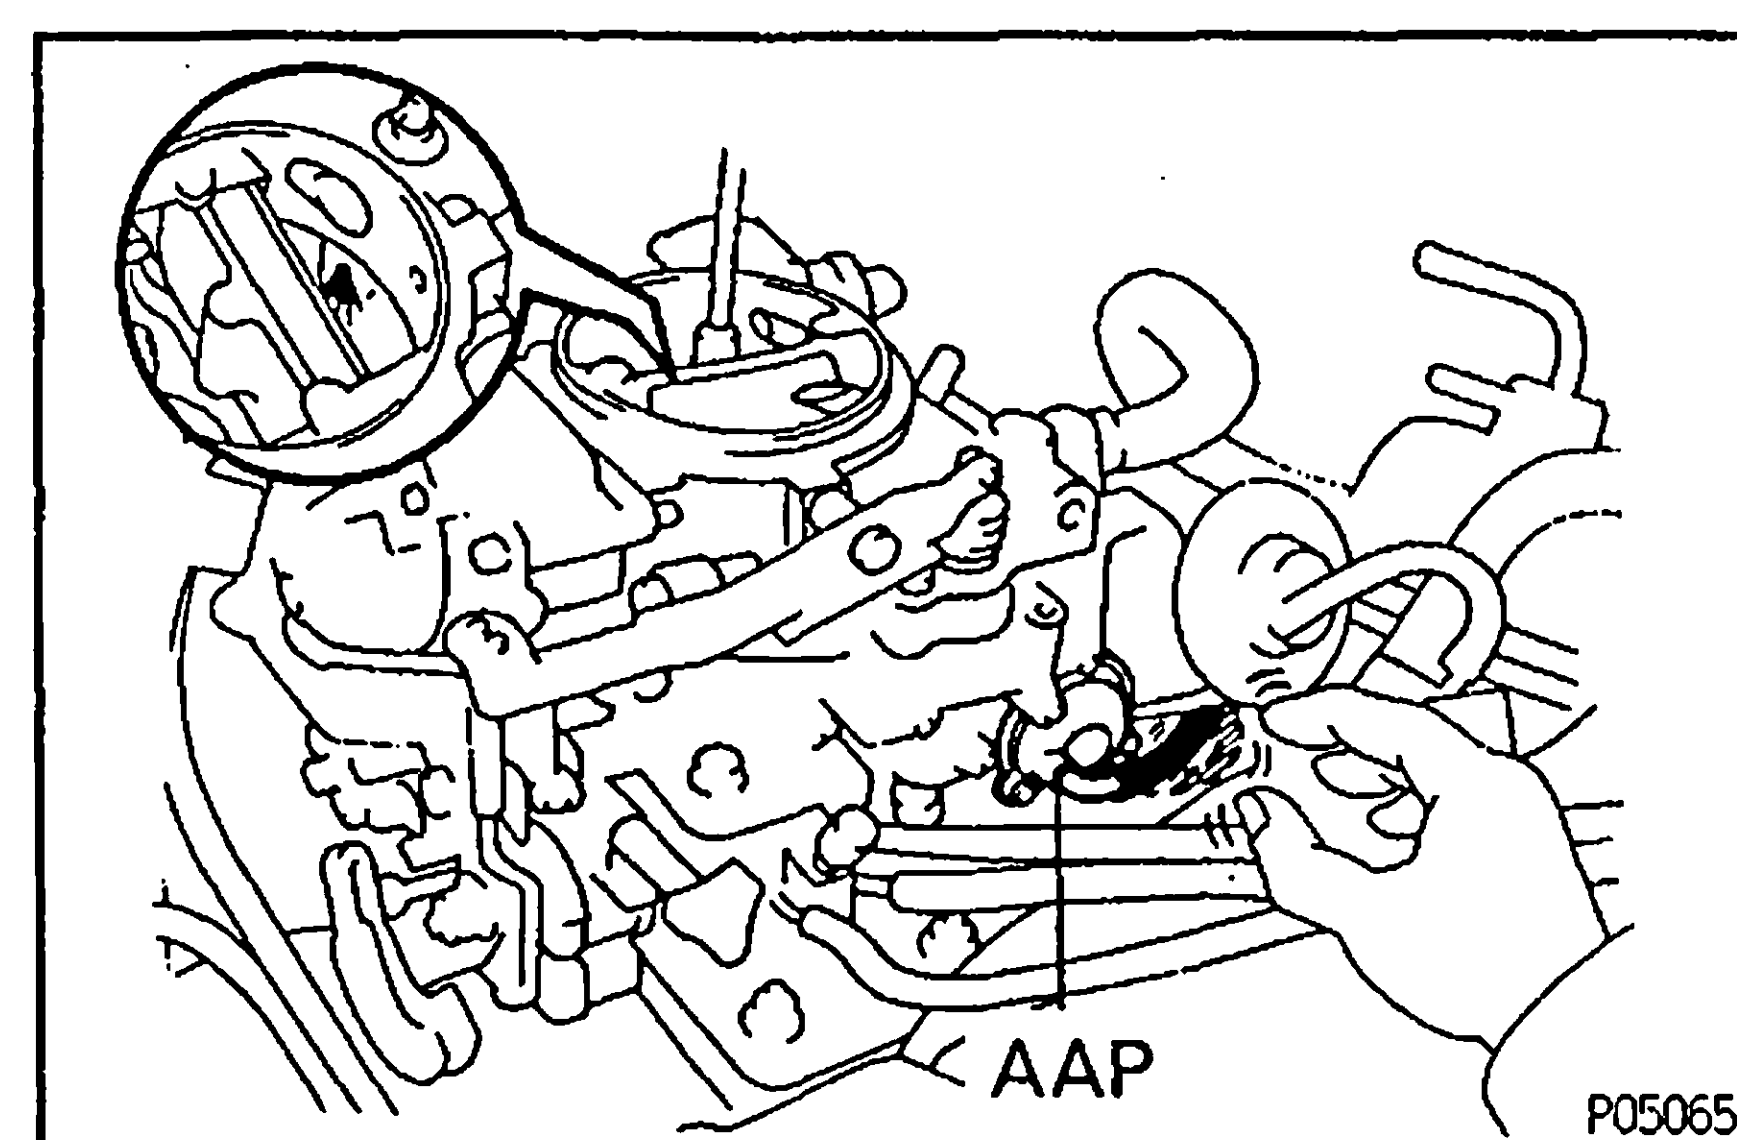
**7. INSPECT AUXILIARY ACCELERATION PUMP (AAP) SYSTEM**

- (a) Check that the coolant temperature is below 50°C (122°F).
- (b) Start the engine.
- (c) Pinch the AAP hose, and stop the engine.
- (d) Release the hose.
- (e) Check that gasoline spurts out from the acceleration nozzle.

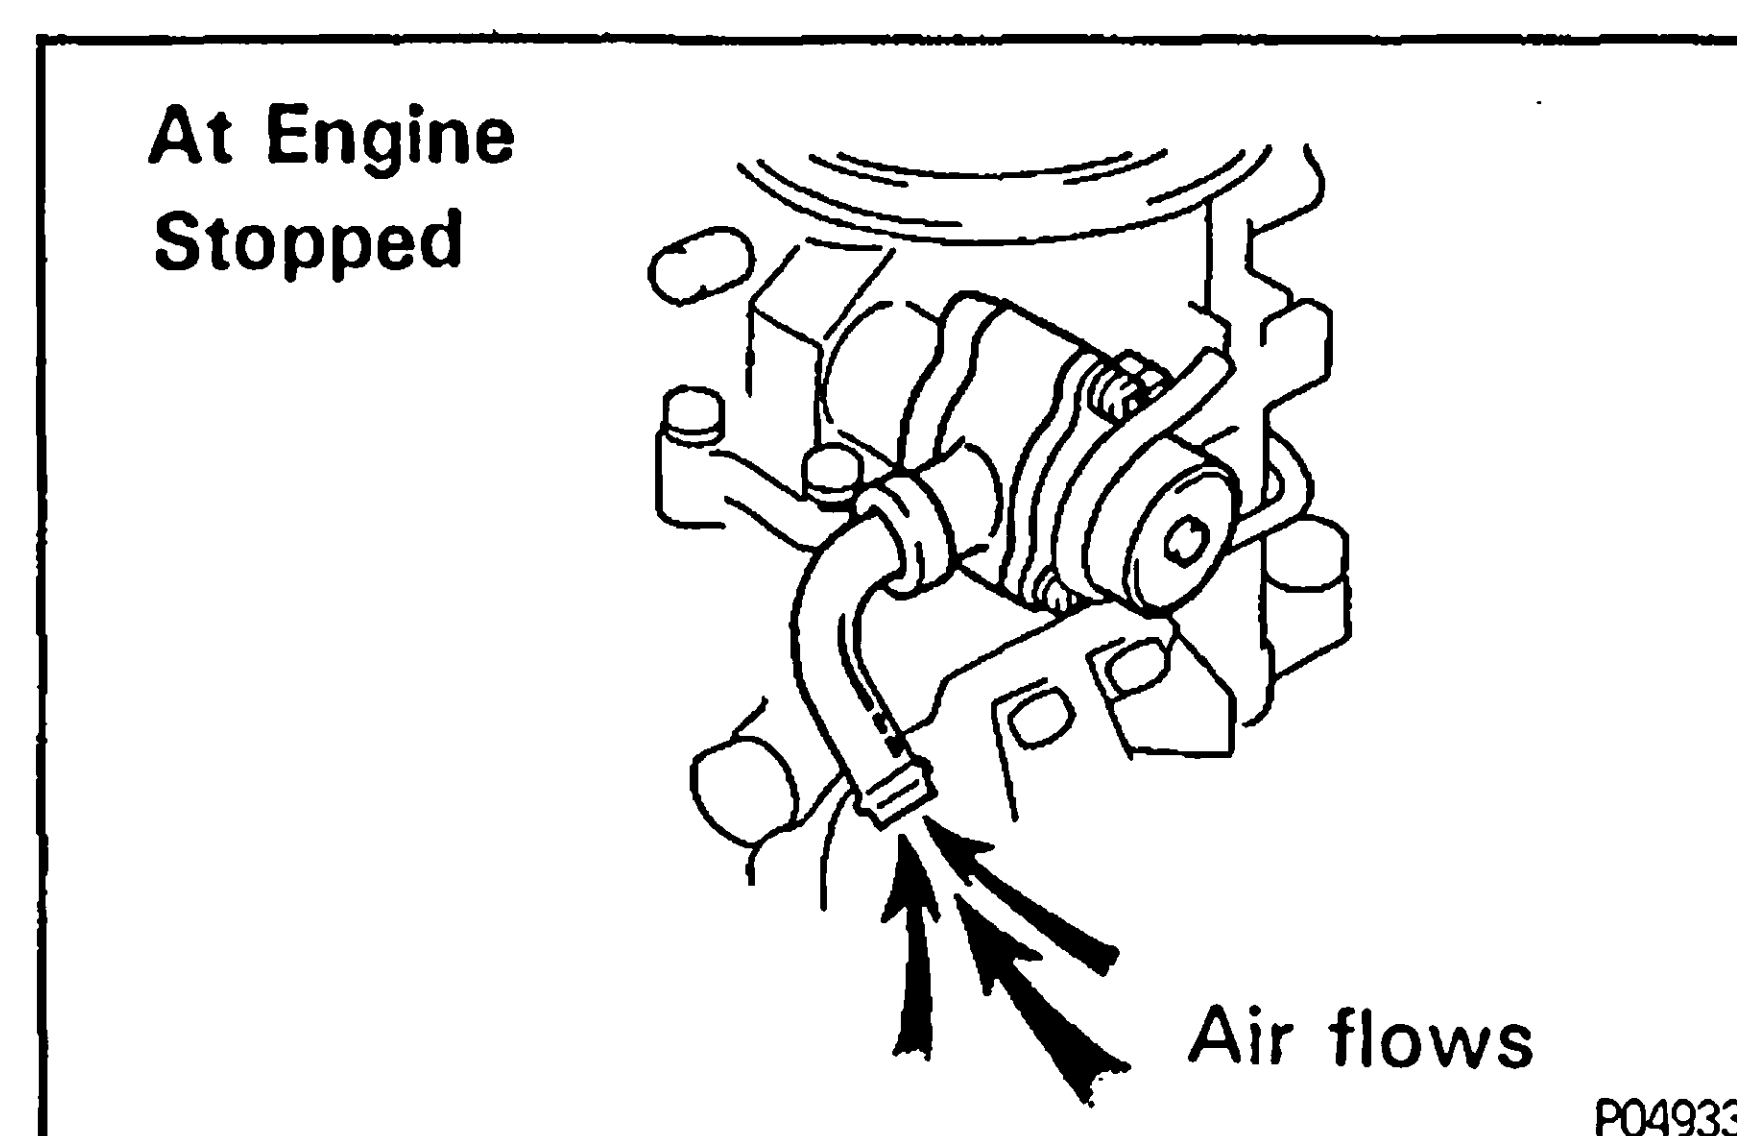**8. INSPECT OUTER VENT CONTROL VALVE (OVCV) OPERATION**


- (a) Disconnect the outer vent hose from the carburetor.
- (b) Blow air into the outer vent pipe and check that the OVCV is open.

At Idle

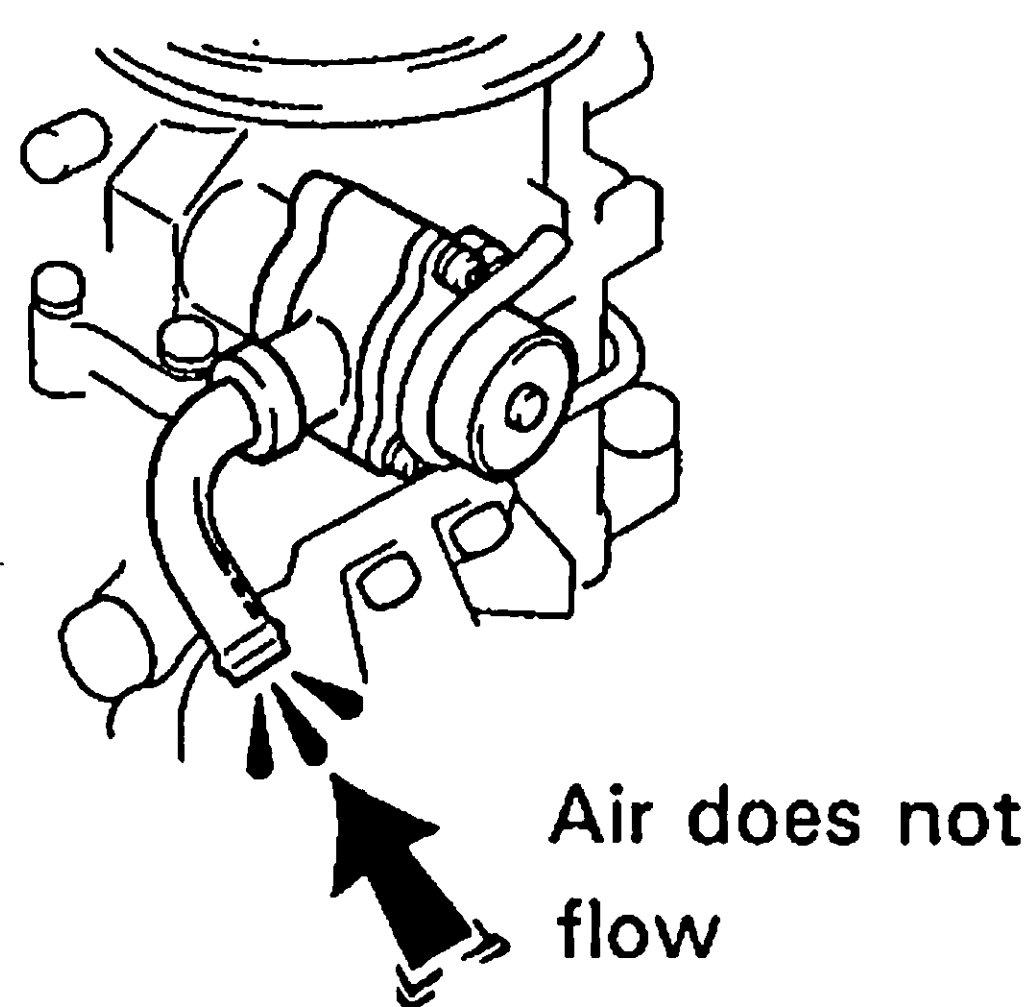

P04934

- (c) Start the engine.
- (d) With the engine idling, blow air into the outer vent pipe and check that the OVCV is closed.

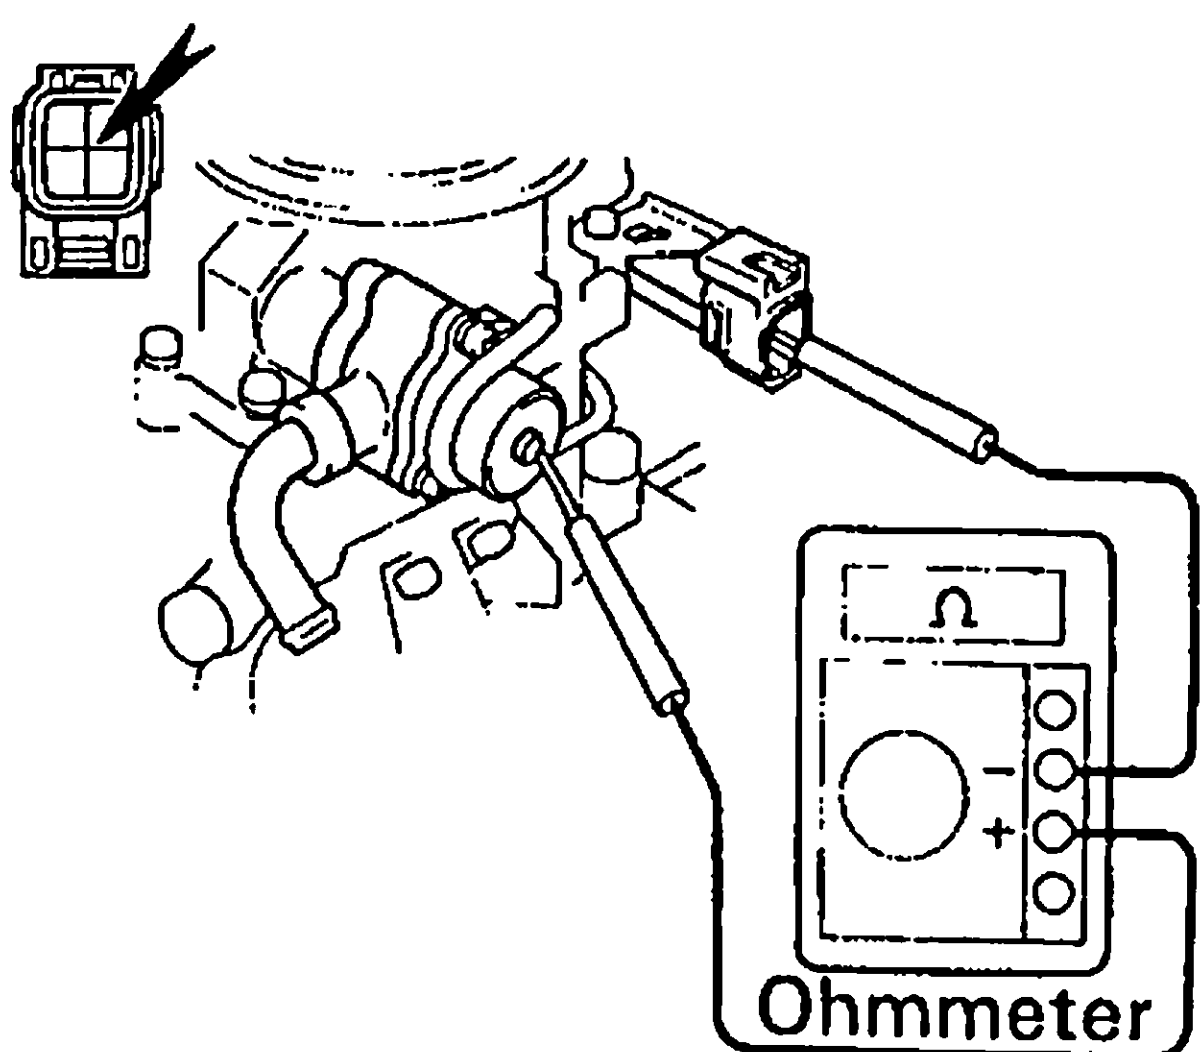


P04932

- (e) Disconnect the carburetor connector.
- (f) Using an ohmmeter, measure the resistance between the OVCV terminal of the carburetor connector and body ground.
Resistance (Cold):
32–38 Ω
- (g) Reconnect the outer vent hose.

HOT ENGINE


9. CHECK FAST IDLE CAM BREAKER (FICB) SYSTEM

- (a) Warm up the engine to normal operating temperature and stop the engine.
- (b) Disconnect the vacuum hose from the FICB.

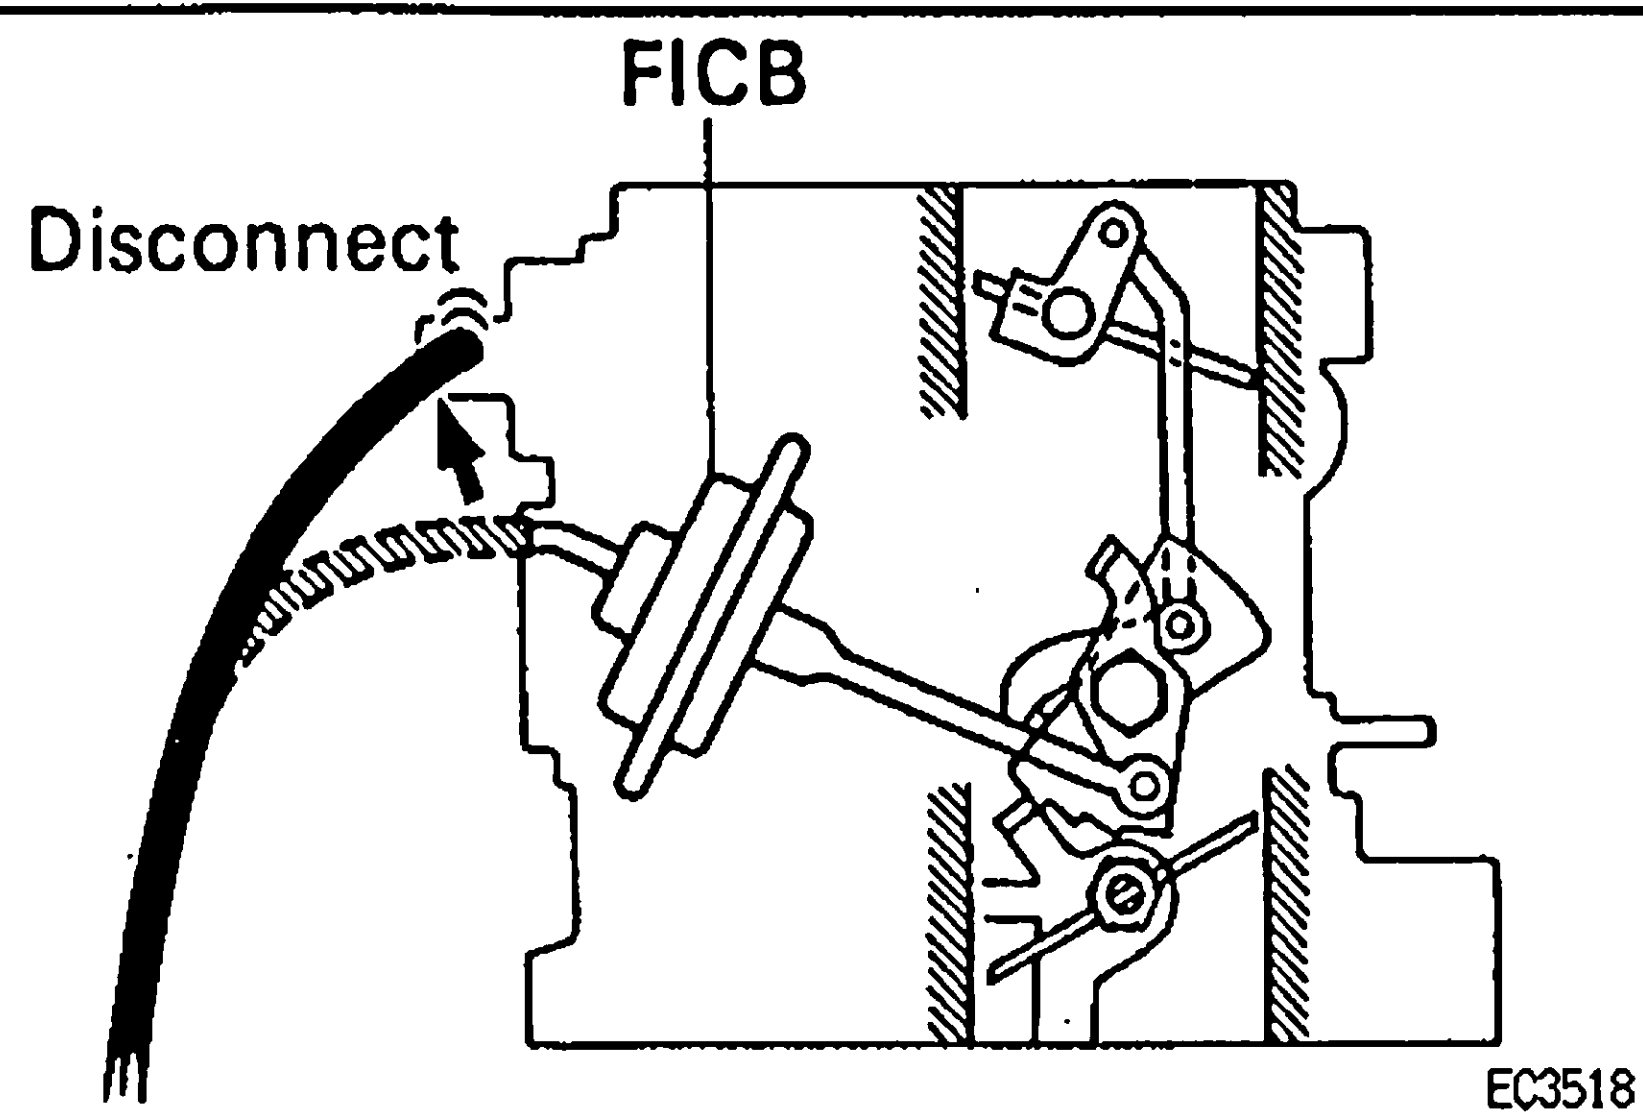


EC3518

- (c) Set the fast idle cam. While holding the throttle slightly open, push the choke valve closed, and hold it closed as you release the throttle valve.
- (d) Start the engine, but do not touch the accelerator pedal.

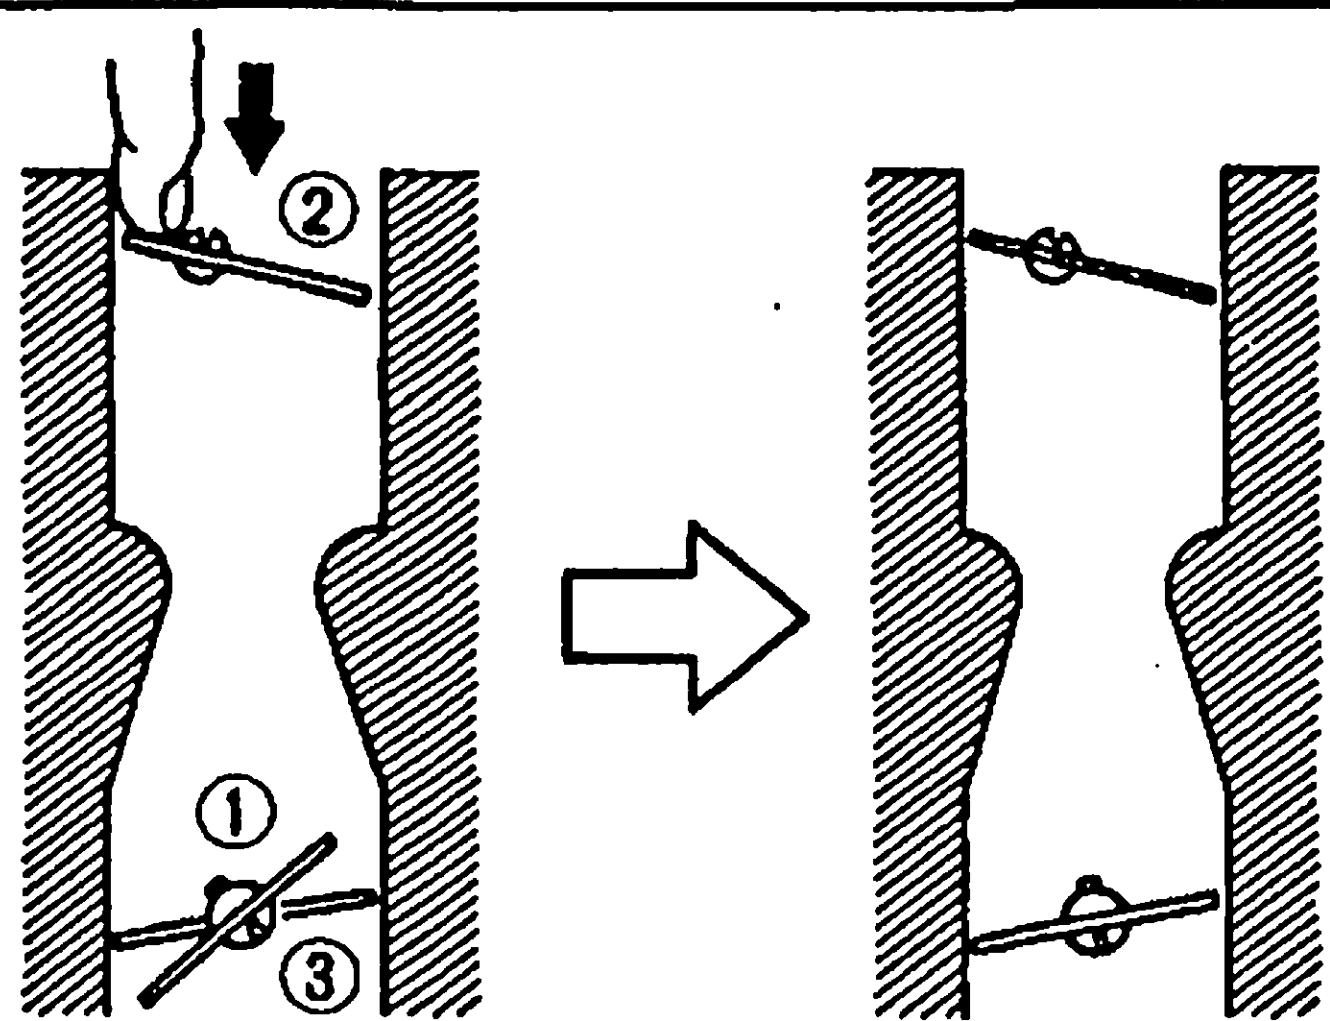

FU0089

- (e) Reconnect the vacuum hose, and check that the choke linkage moves, and that the fast idle cam is released to the 4th step.

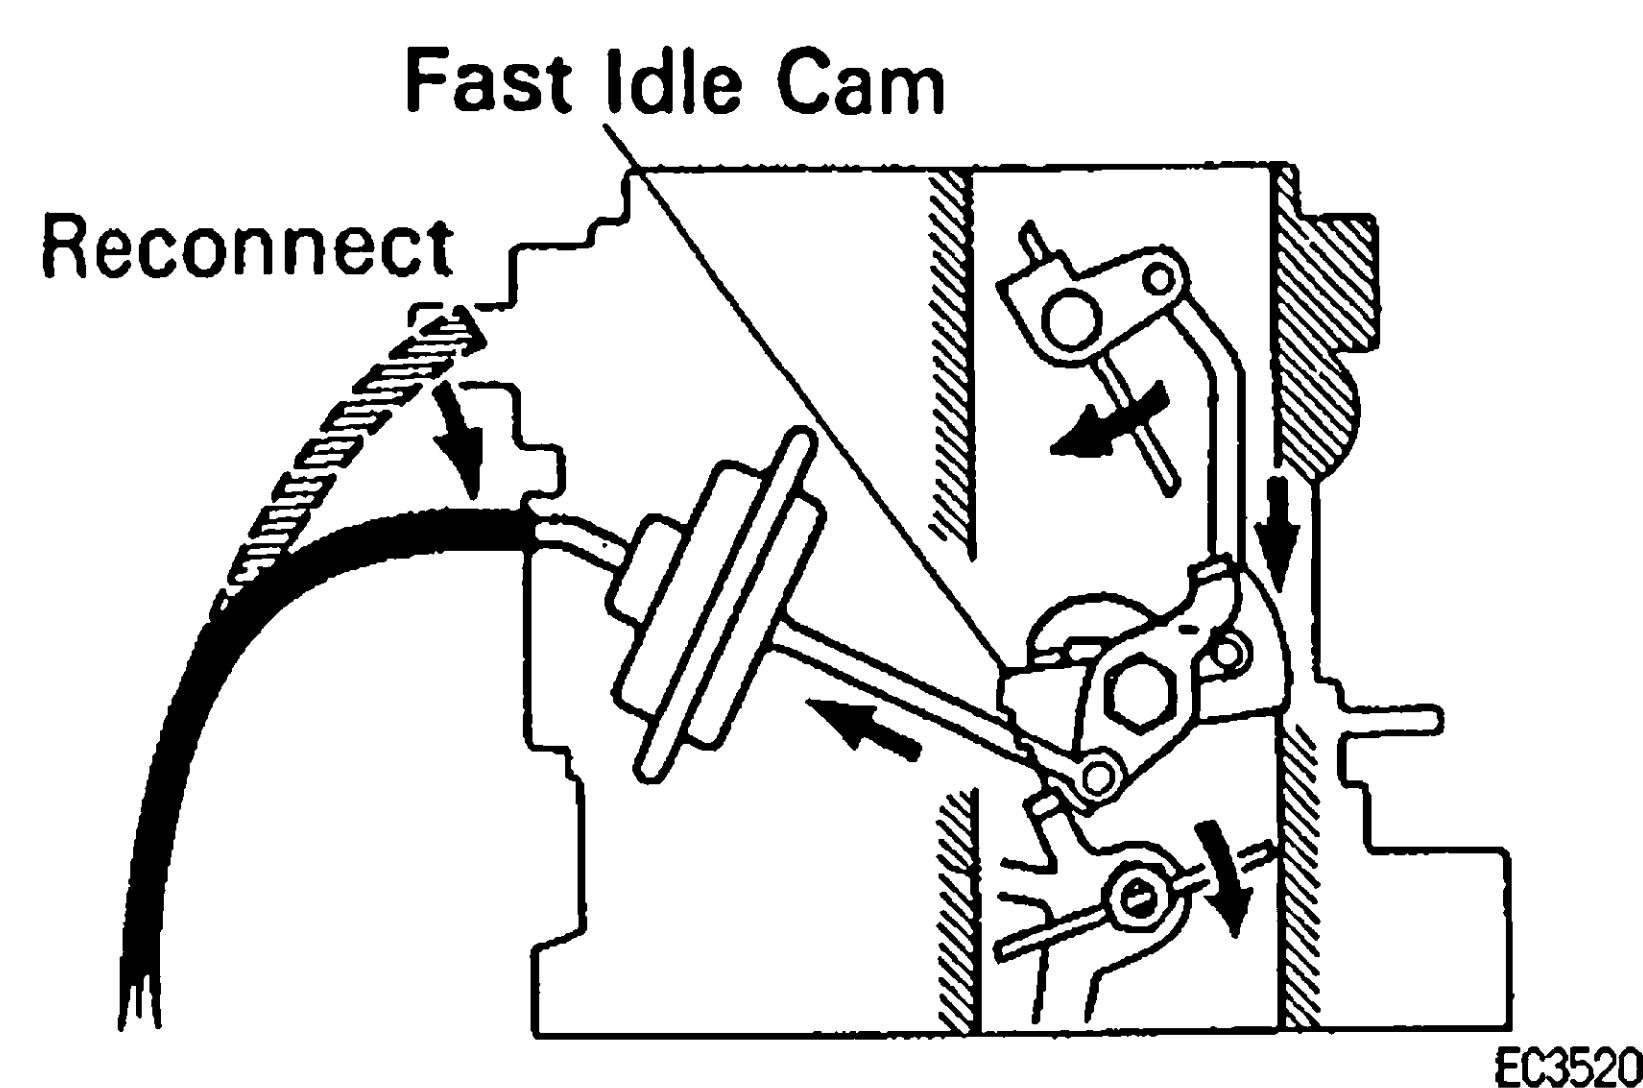


EC3520


10. INSPECT CHOKE VALVE

Check that the choke valve opens fully.

EG

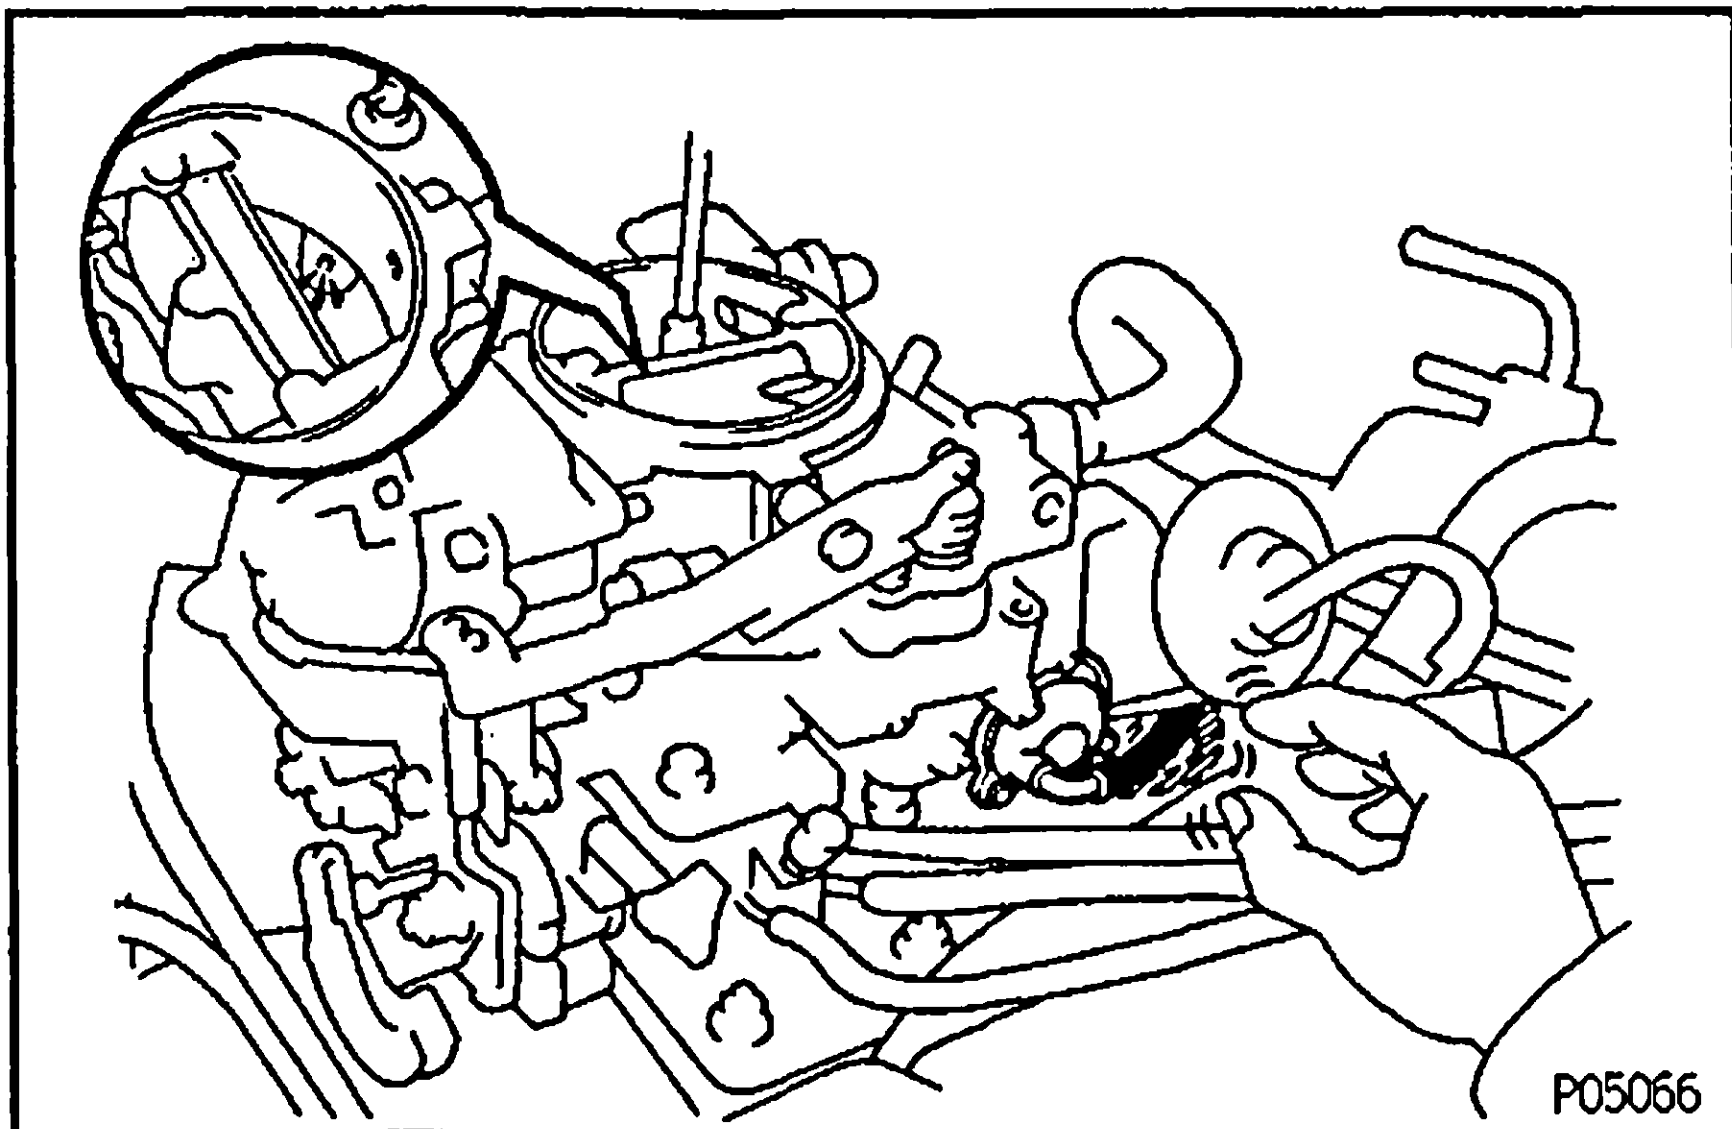**11. INSPECT AUXILIARY ACCELERATIONS PUMP (AAP) SYSTEM**

- (a) Warm up the engine to normal operating temperature.
- (b) Start the engine.
- (c) Pinch the AAP hose, and stop the engine.
- (d) Release the hose.
- (e) Check that gasoline does not spurt out from the acceleration nozzle.

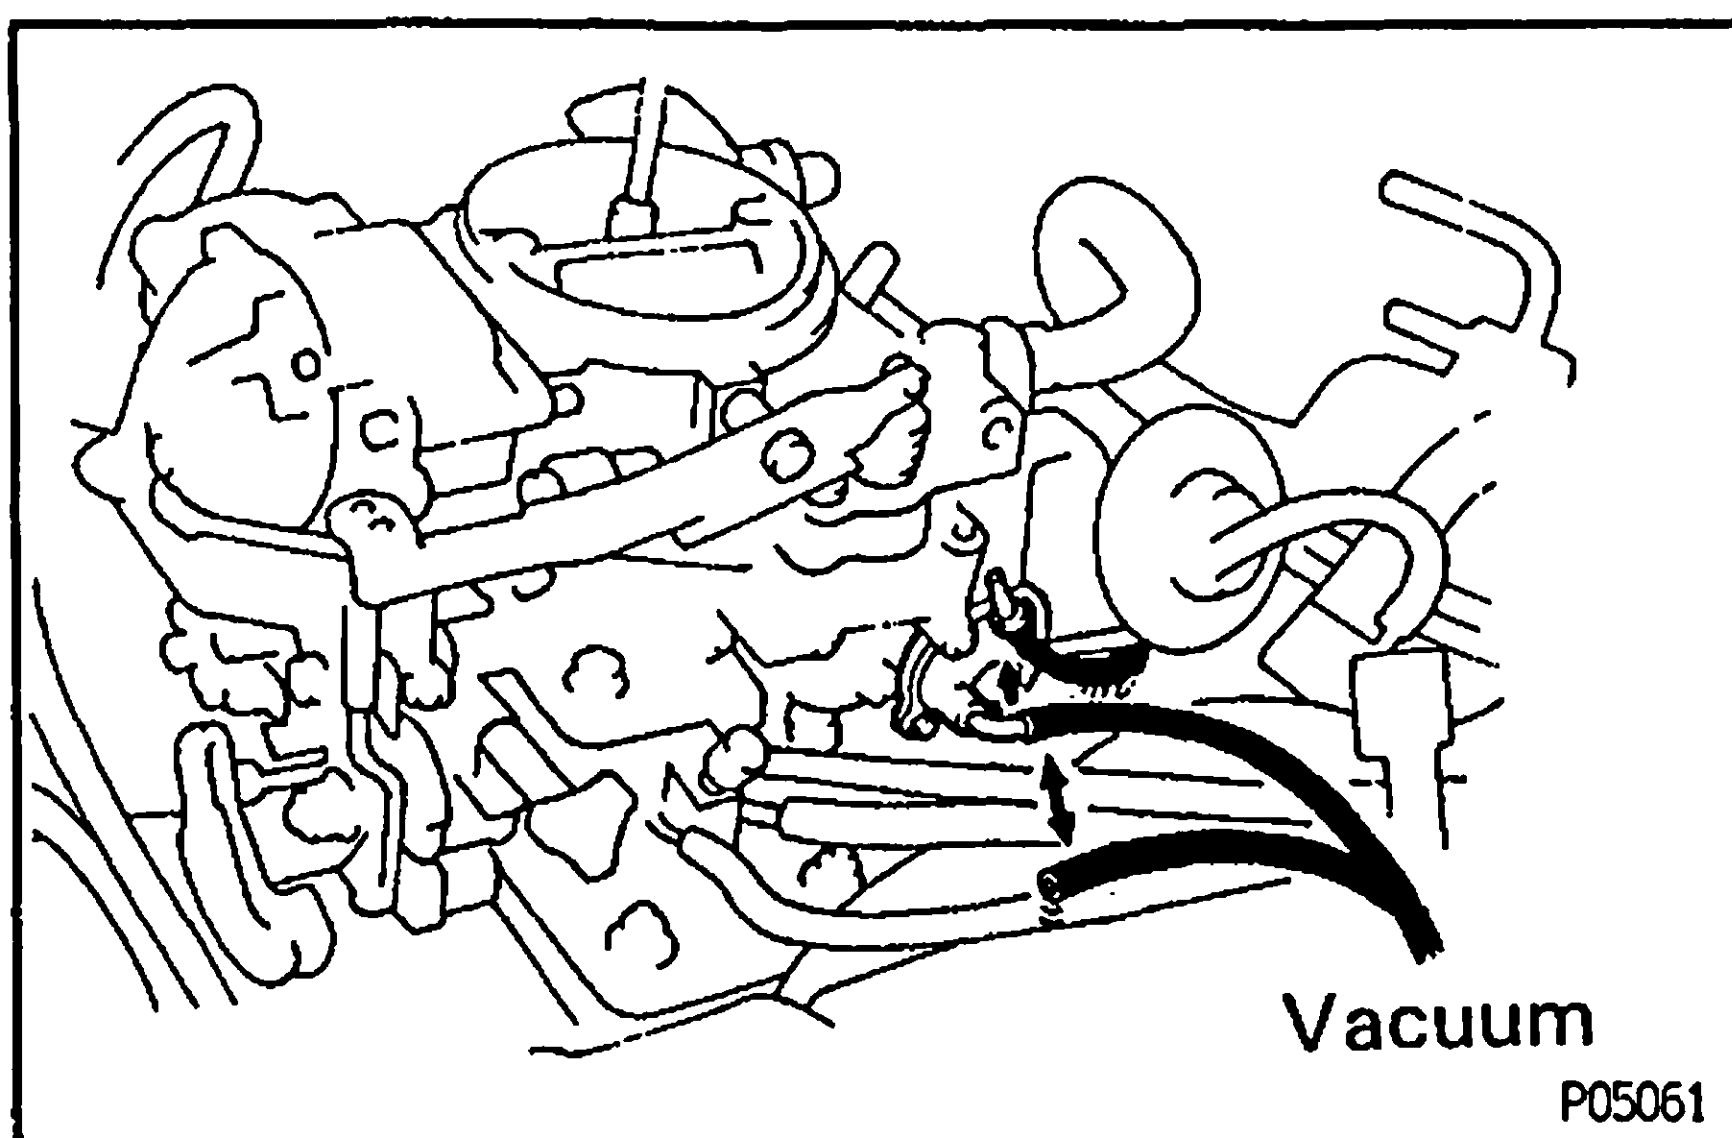
**12. INSPECT AUXILIARY ACCELERATION PUMP (AAP) DIAPHRAGM**

- (a) Start the engine.
- (b) Disconnect the hose from the AAP.
- (c) Apply and release the vacuum directly to the AAP at idle.
- (d) Check that the engine rpm changes by releasing vacuum.
- (e) Reconnect the AAP hose.

If a problem is found, replace the AAP diaphragm.


13. INSPECT ACCELERATION PUMP

Open the throttle valve, and check that gasoline spurts out from the acceleration nozzle.

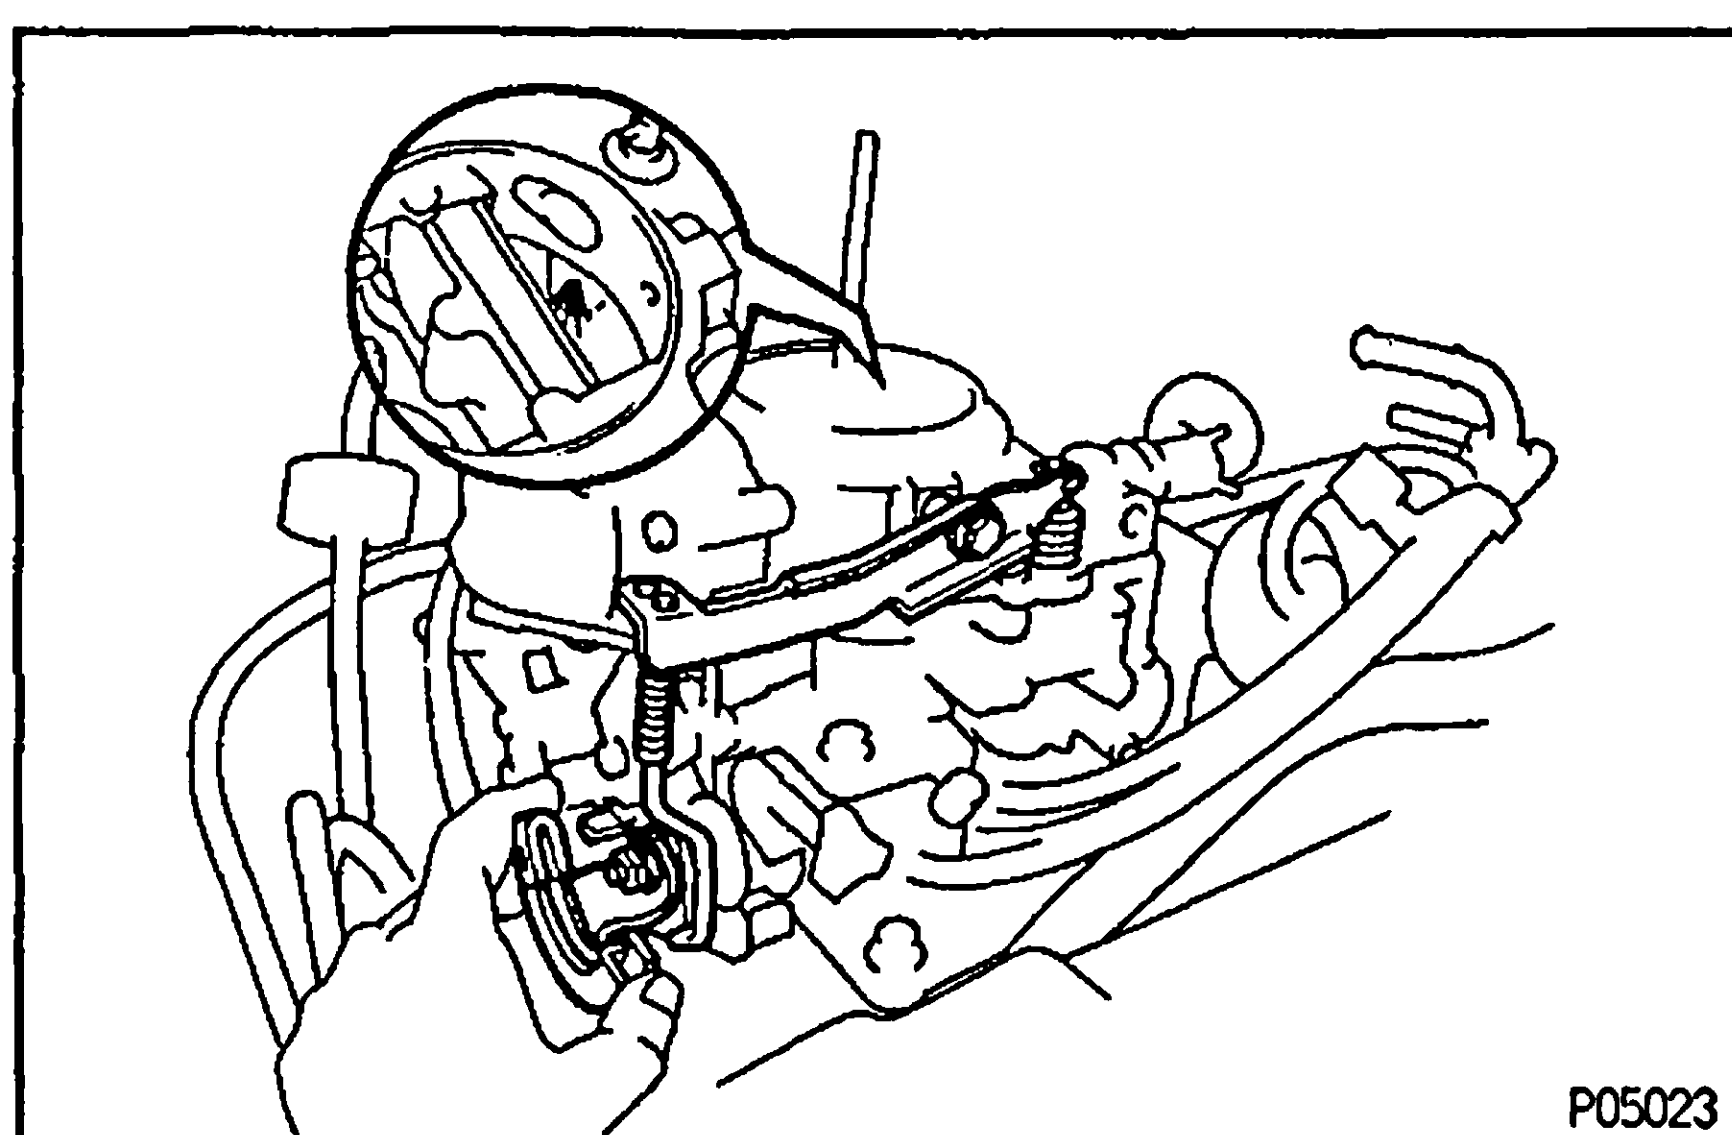**14. INSTALL AIR INTAKE CONNECTOR****15. CHECK AND ADJUST IDLE SPEED AND IDLE MIXTURE****16. CHECK AND ADJUST FAST IDLE SPEED****17. CHECK AND ADJUST DASH POT (DP) SETTING SPEED****18. CHECK AND ADJUST THROTTLE POSITIONER (TP) SETTING SPEED**

CARBURETOR CARBURETOR REMOVAL

EG0UA-01

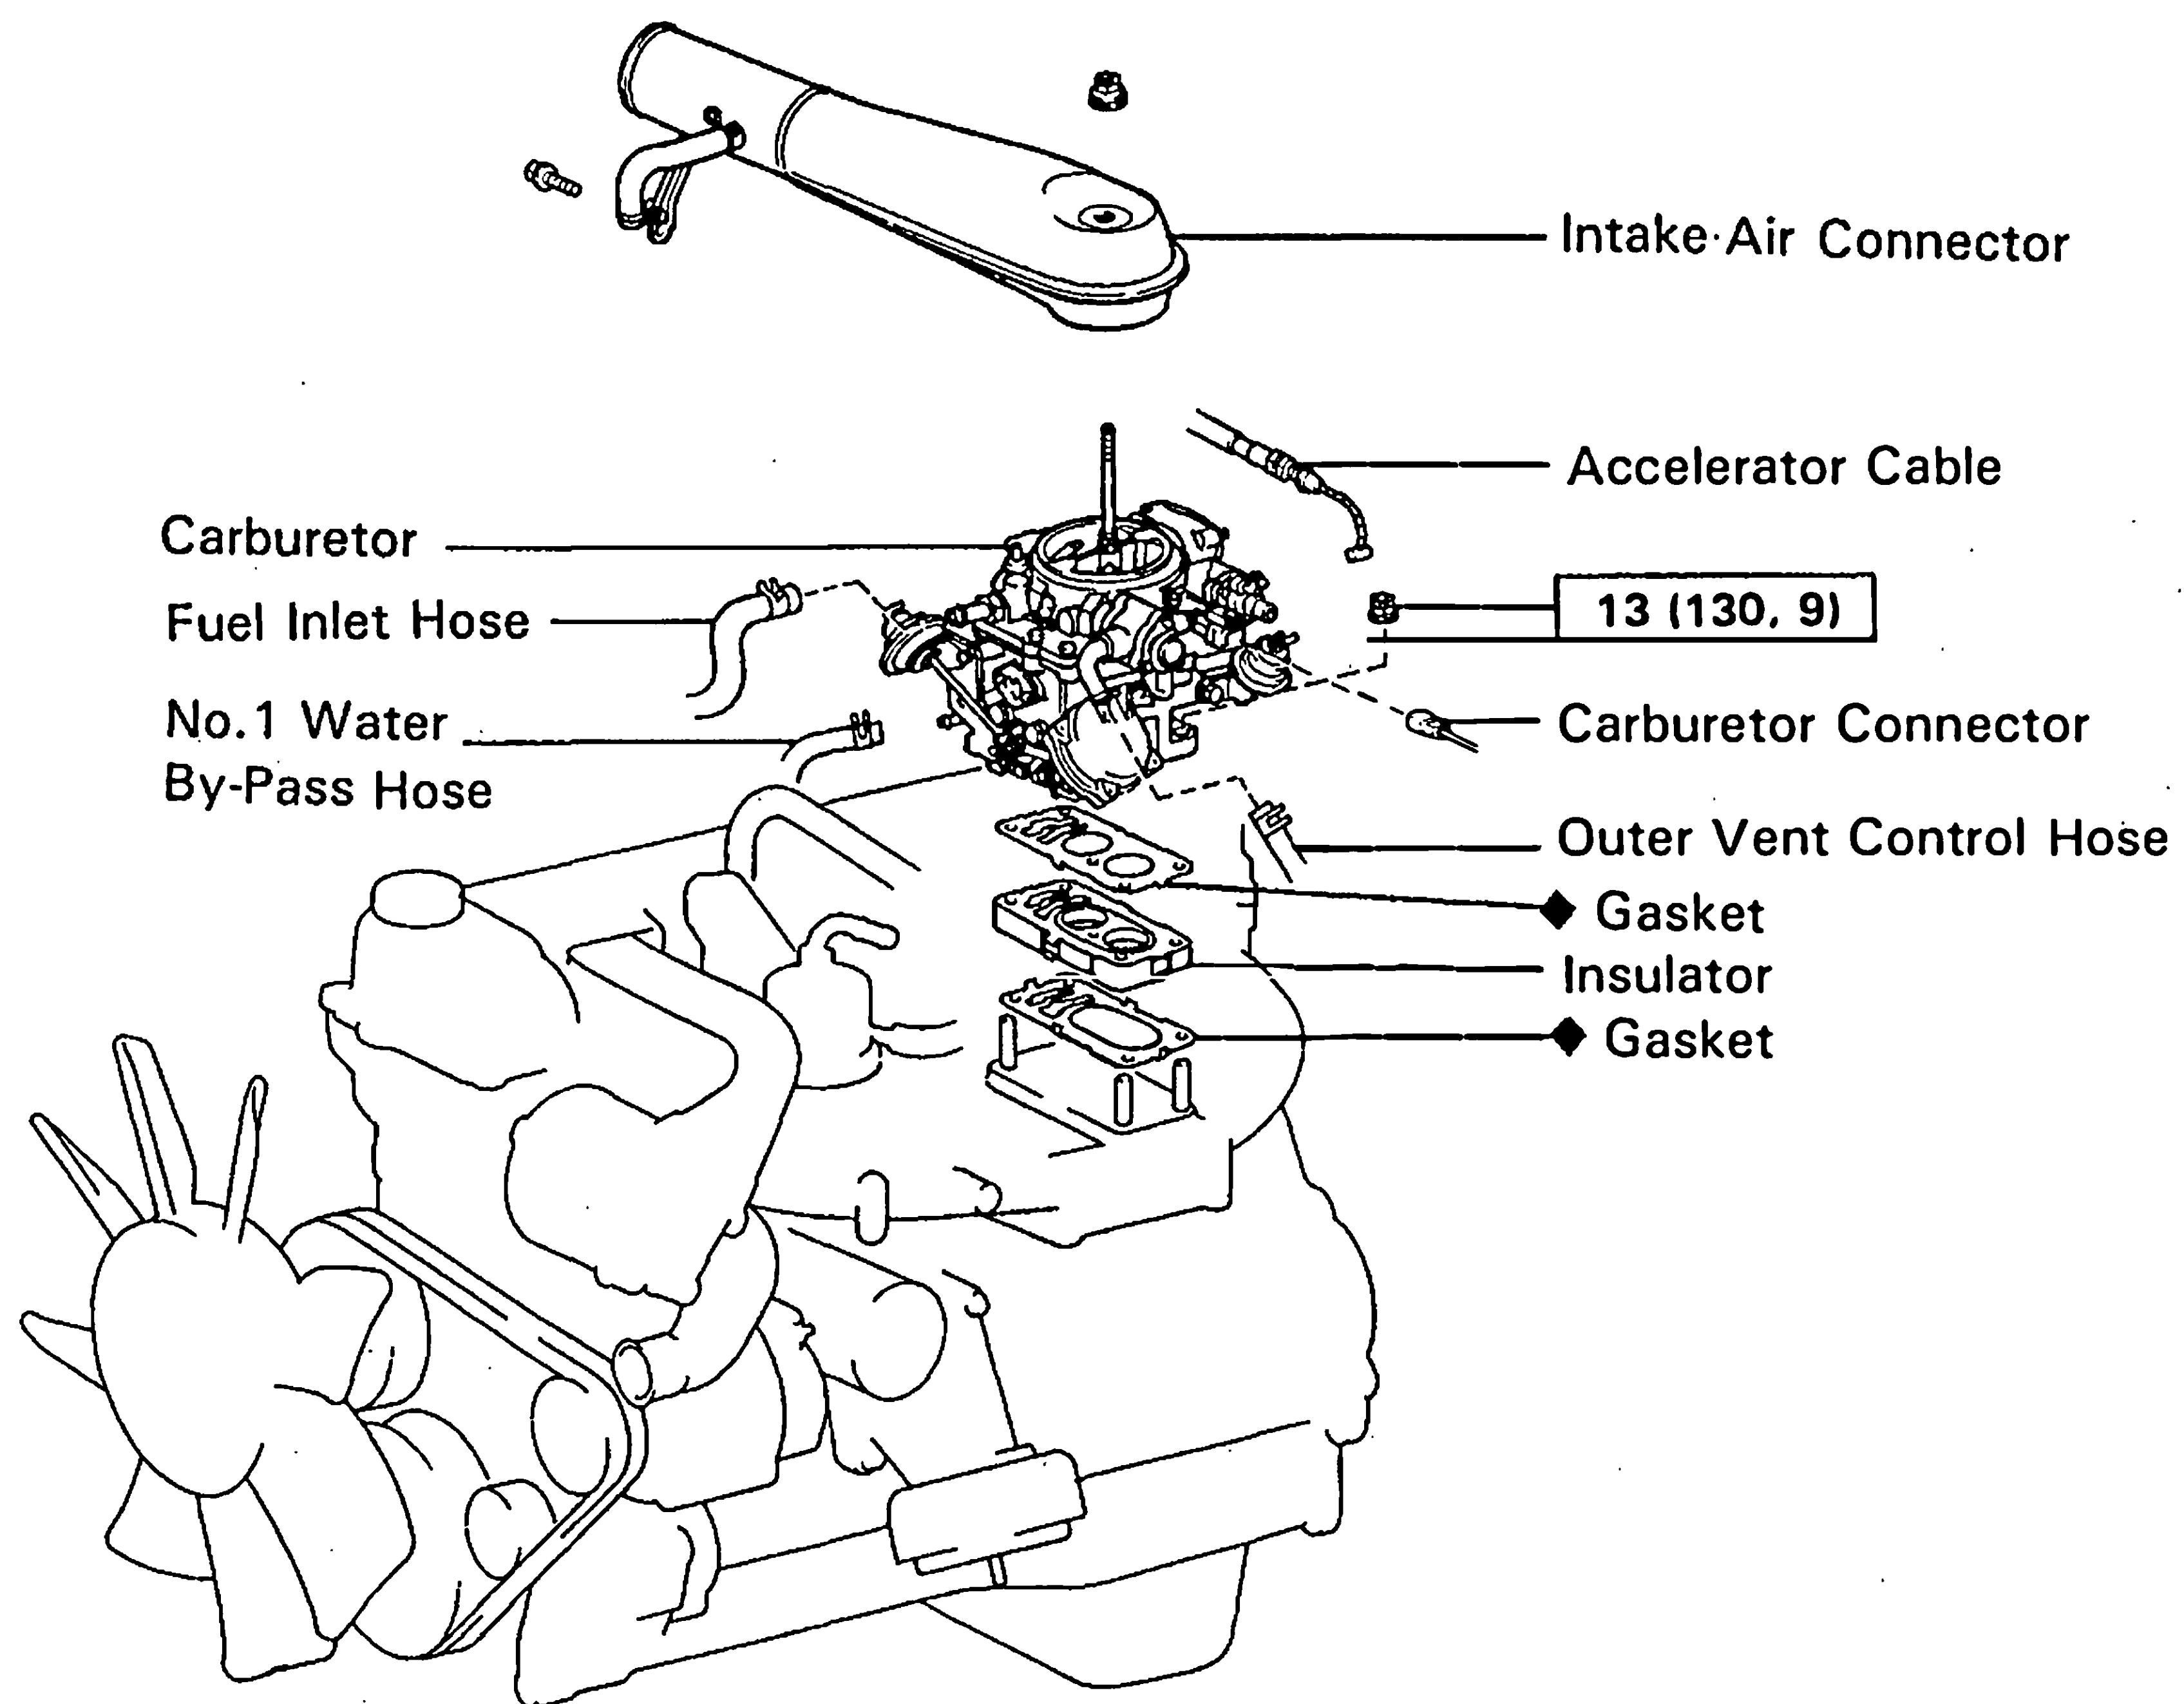

N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part

P05108

1. DRAIN COOLANT

Disconnect the No.2 water by-pass hose from the intake manifold and drain the coolant from the manifold.

2. REMOVE INTAKE AIR CONNECTOR


3. DISCONNECT ACCELERATOR CABLE FROM CARBURETOR

4. DISCONNECT CARBURETOR CONNECTOR


5. DISCONNECT FOLLOWING HOSES:

- (a) Fuel inlet hose
- (b) Outer vent control hose
- (c) No.1 water by-pass hose
- (d) Emission control hoses

HINT: Before disconnecting the emission control hoses, use tag to identify how they should be reconnected.

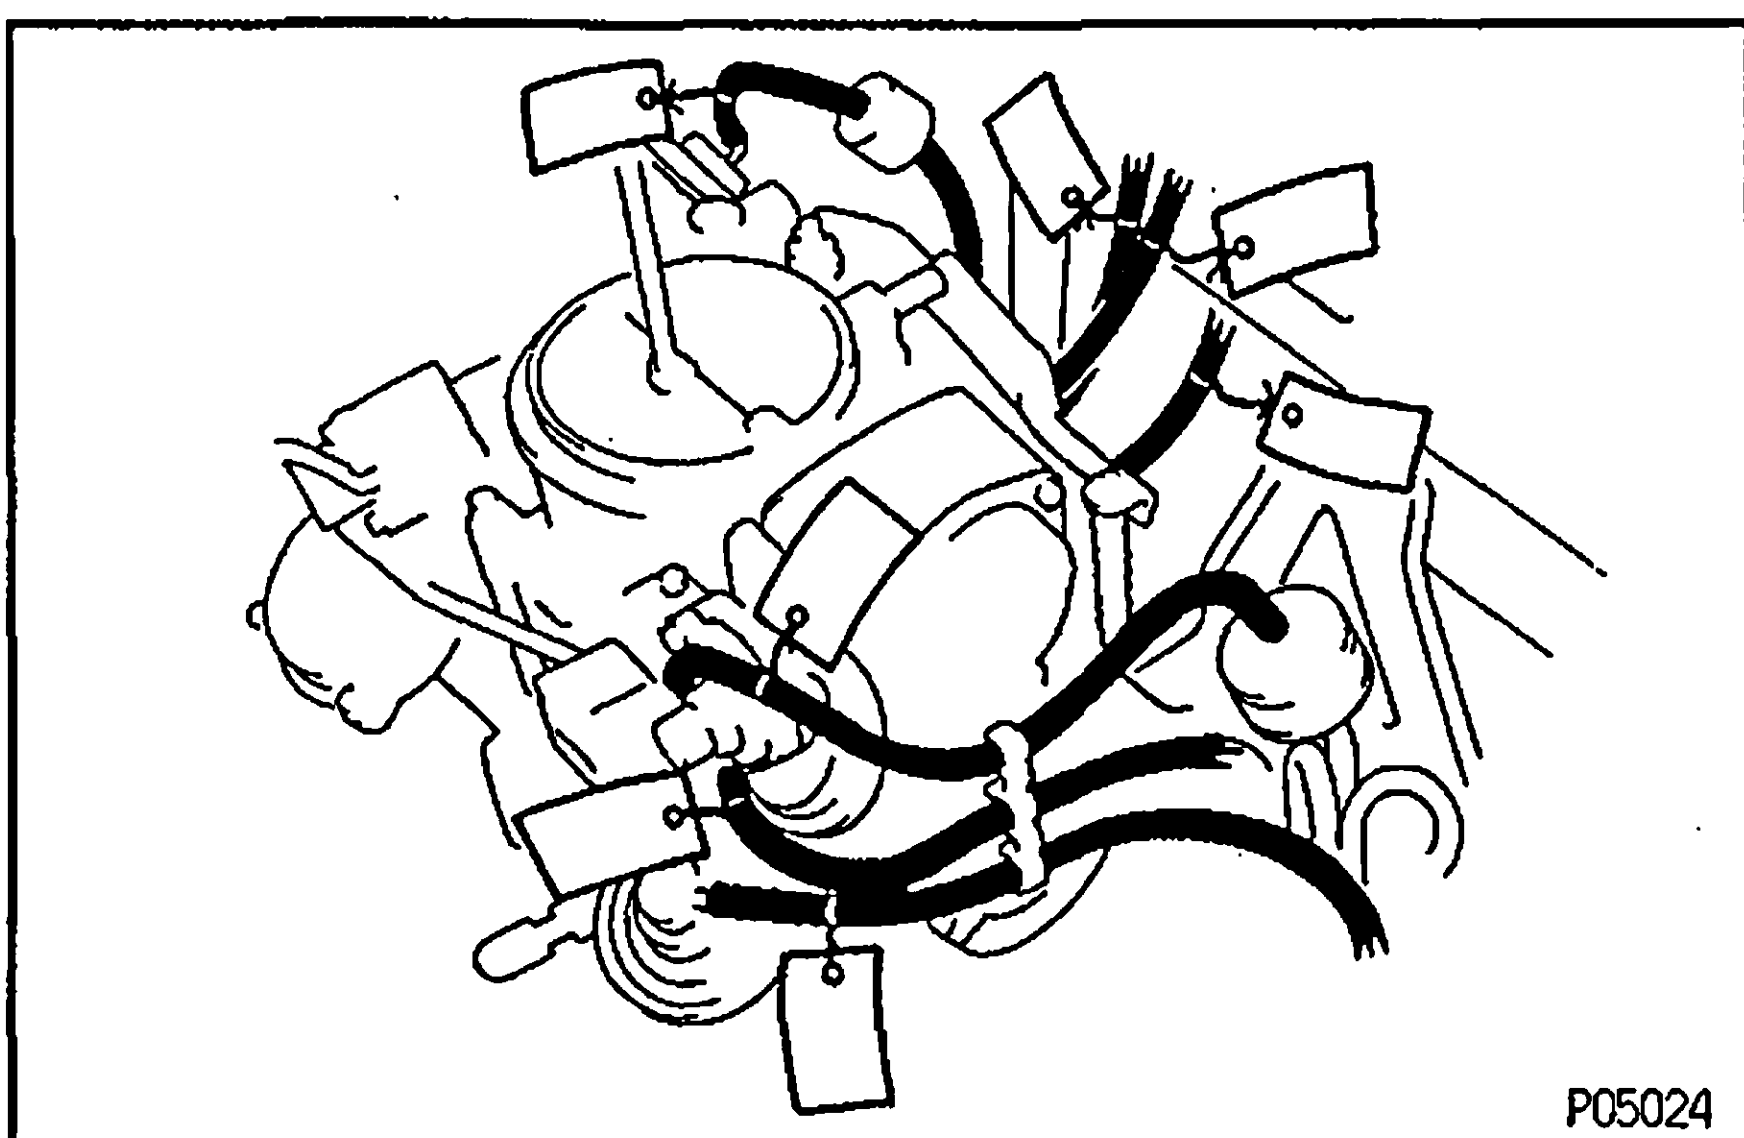


P05024

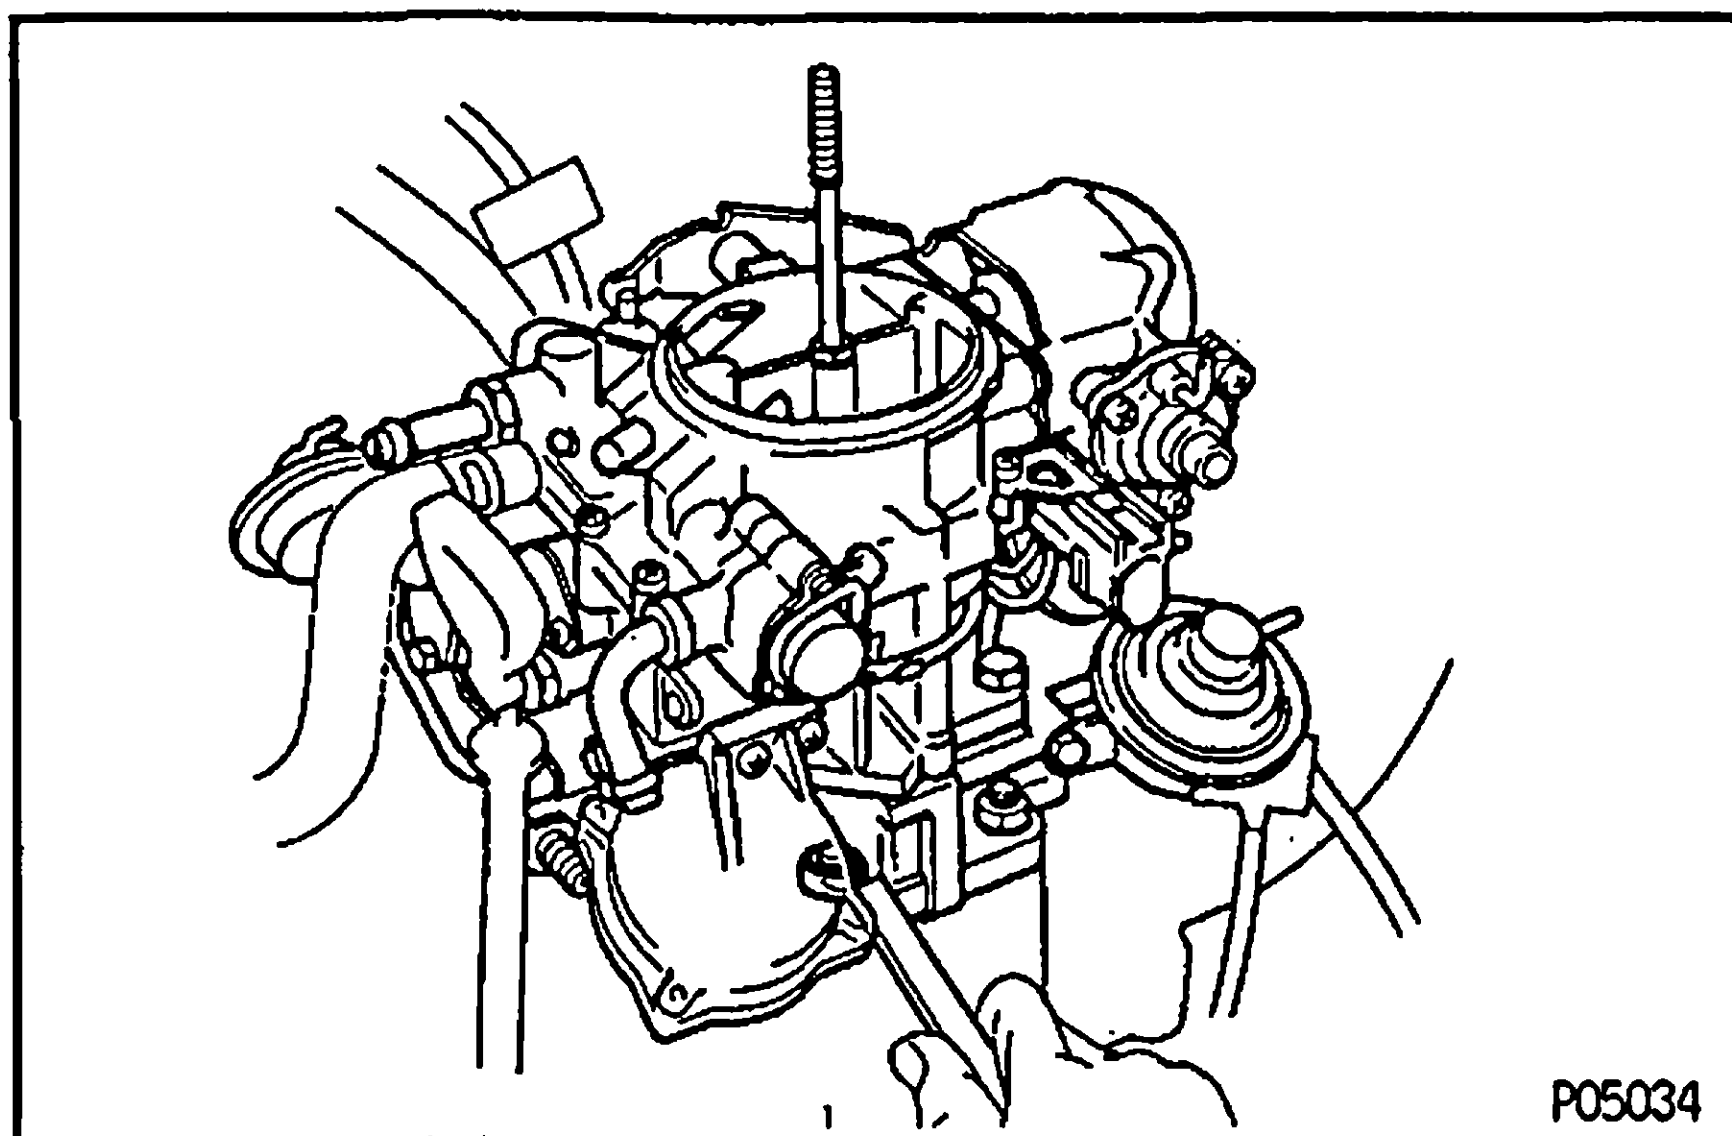**6. REMOVE CARBURETOR**


- (a) Remove the four carburetor mounting nuts.
- (b) Lift out the carburetor.

EG

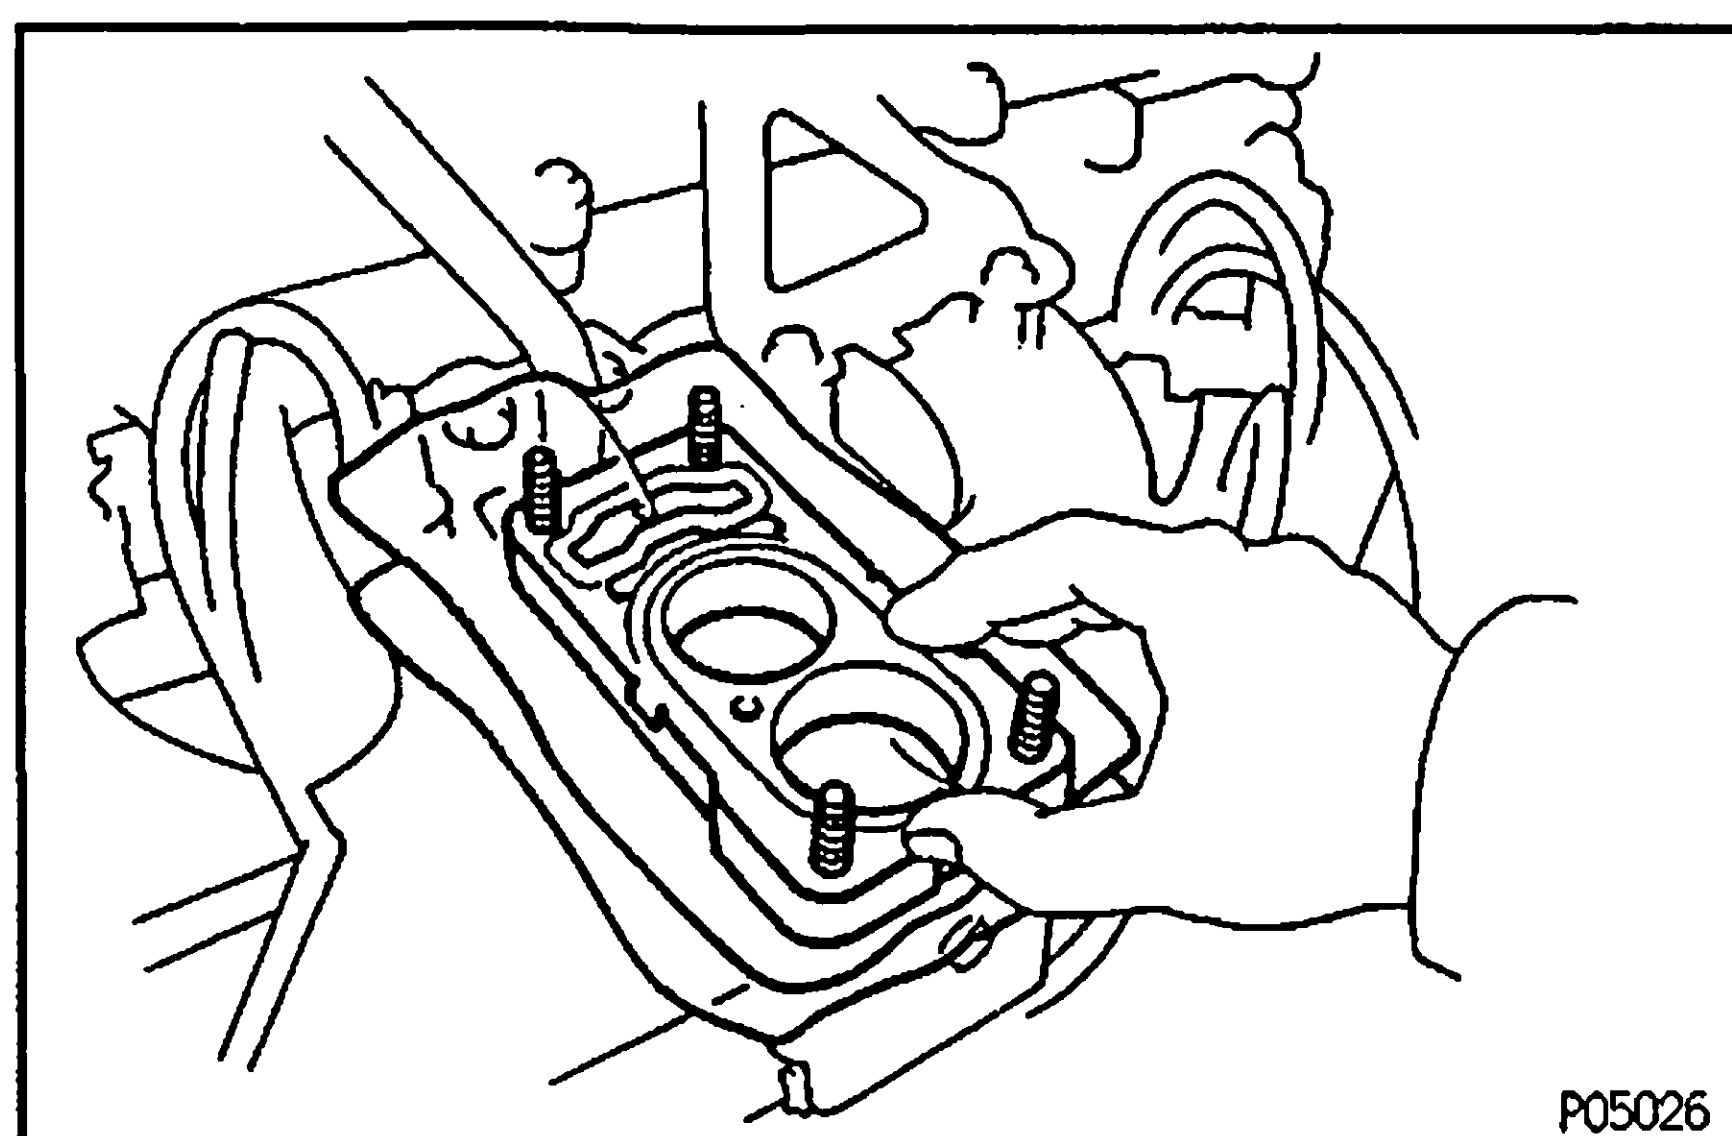


- (c) Cover the inlet hole of the intake manifold with a cloth.

COMPONENTS

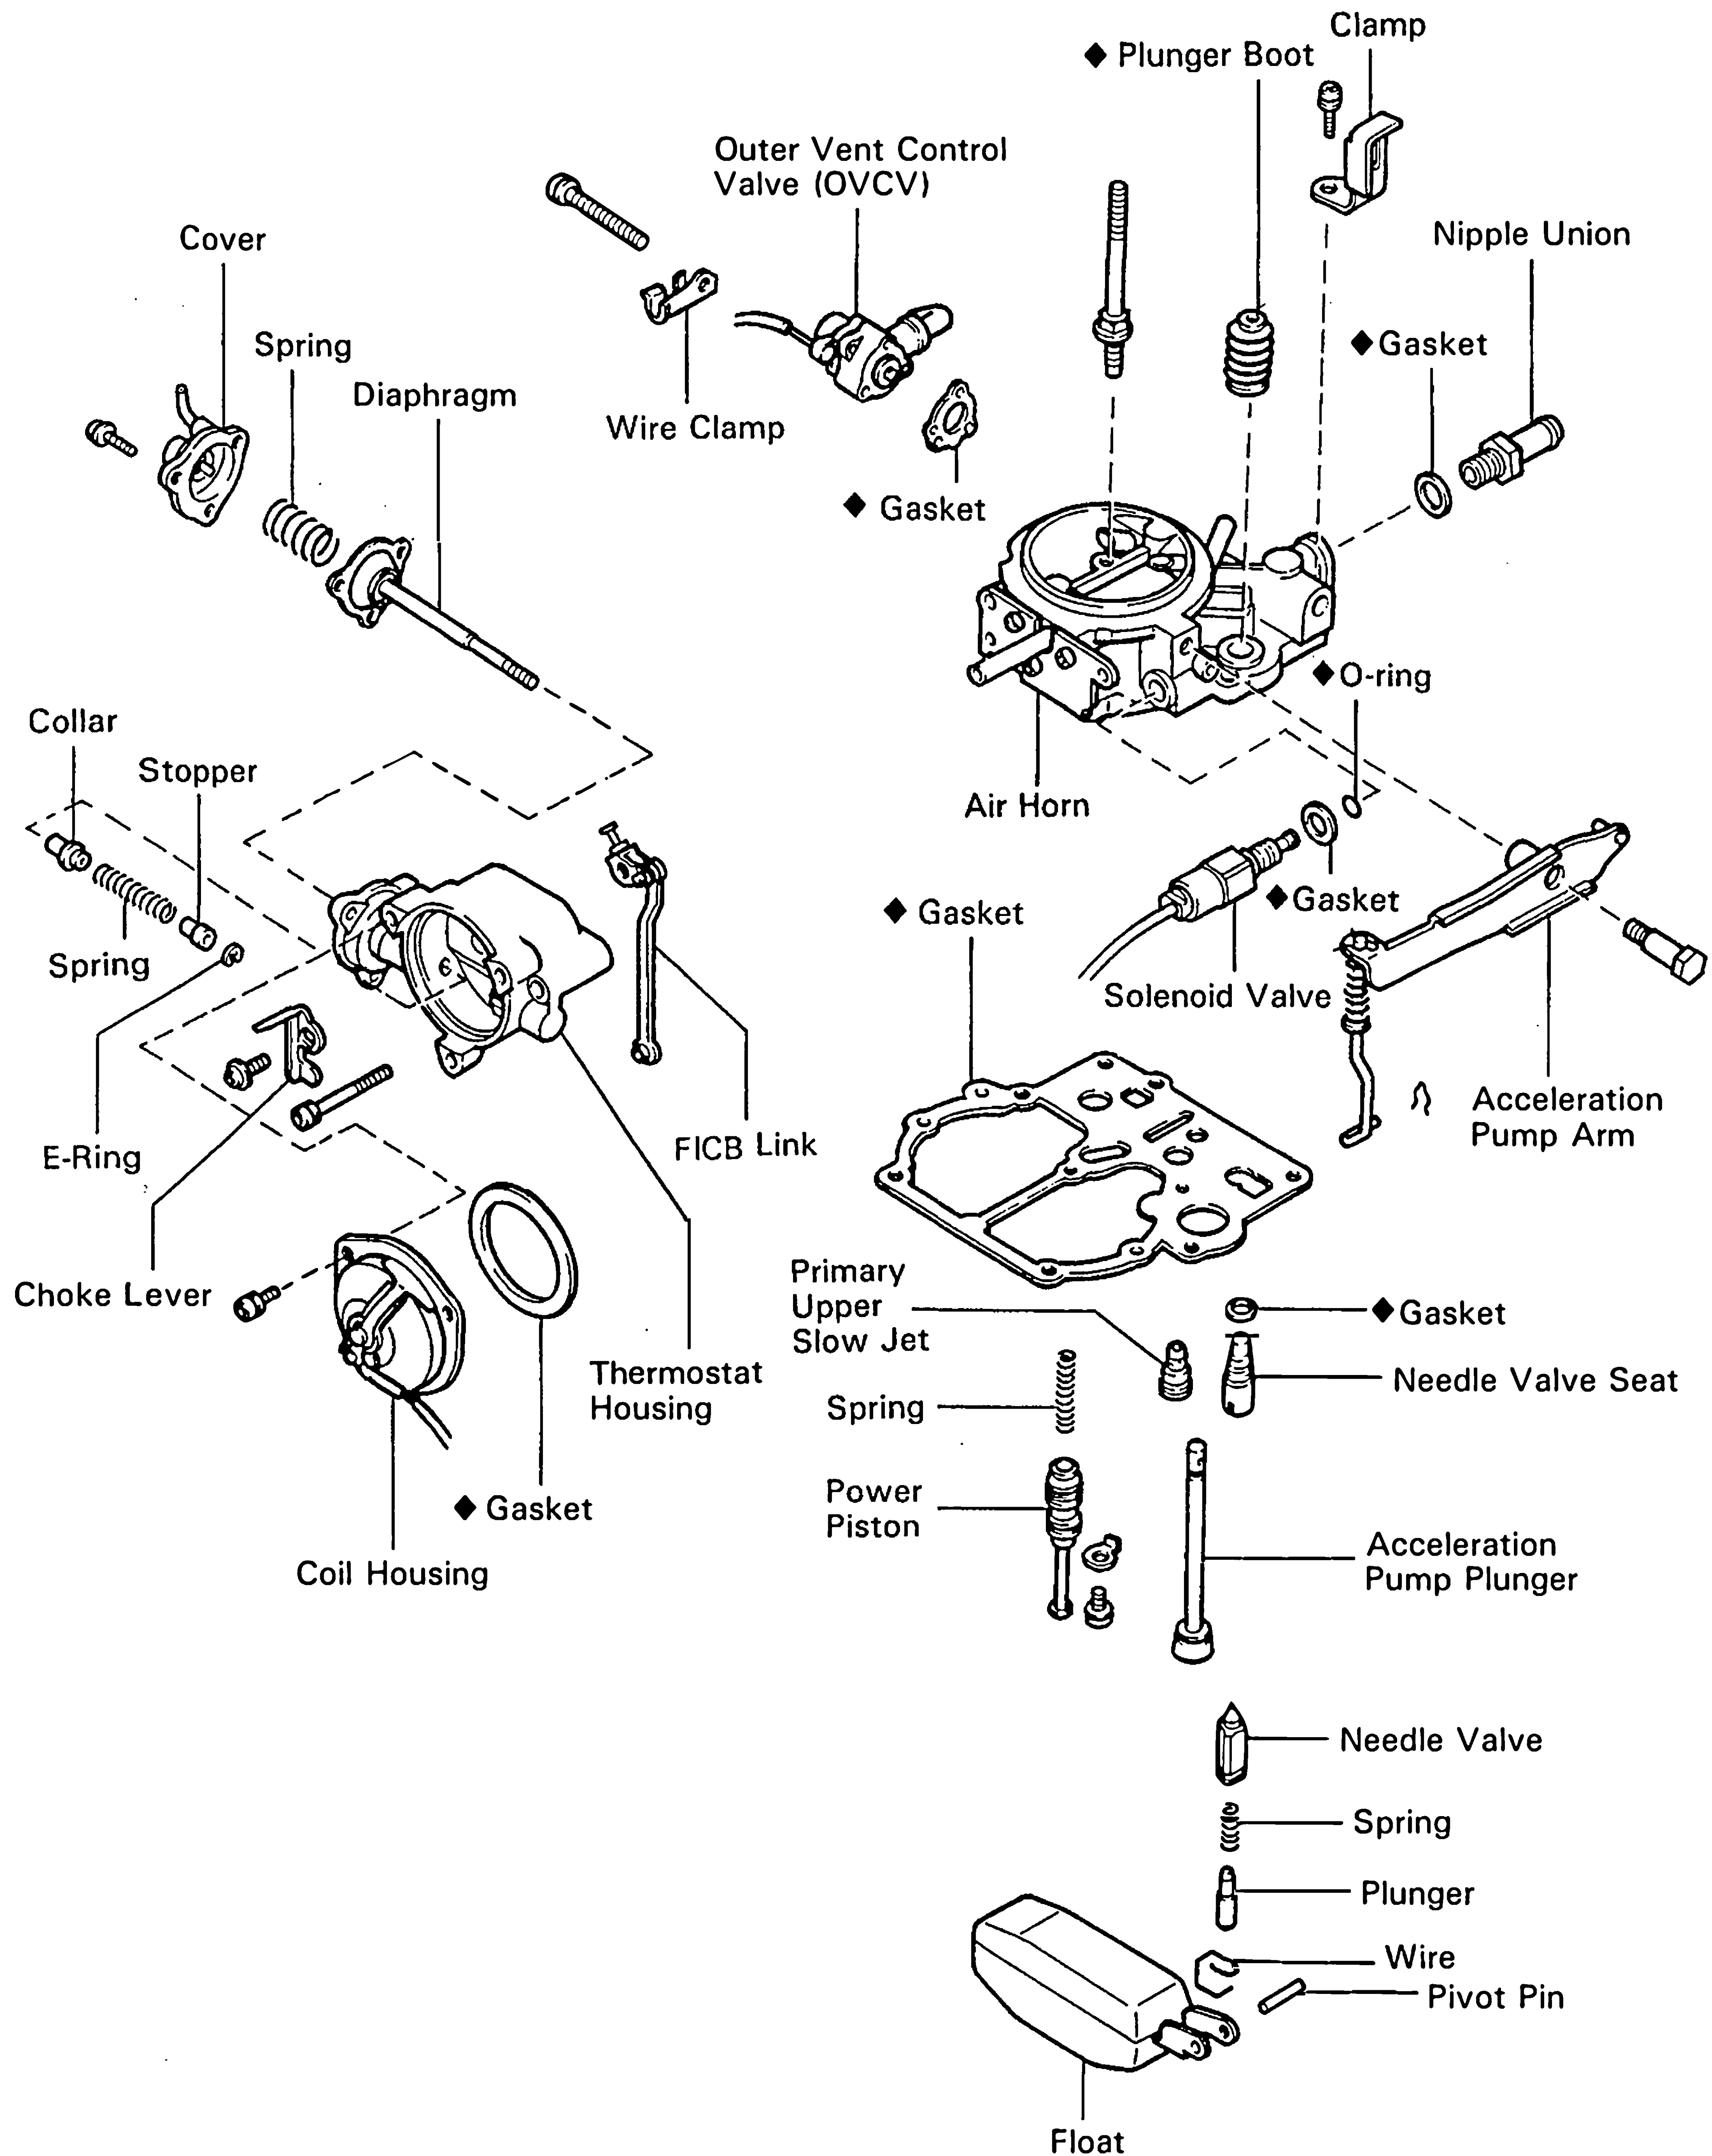

◆ Non-reusable part

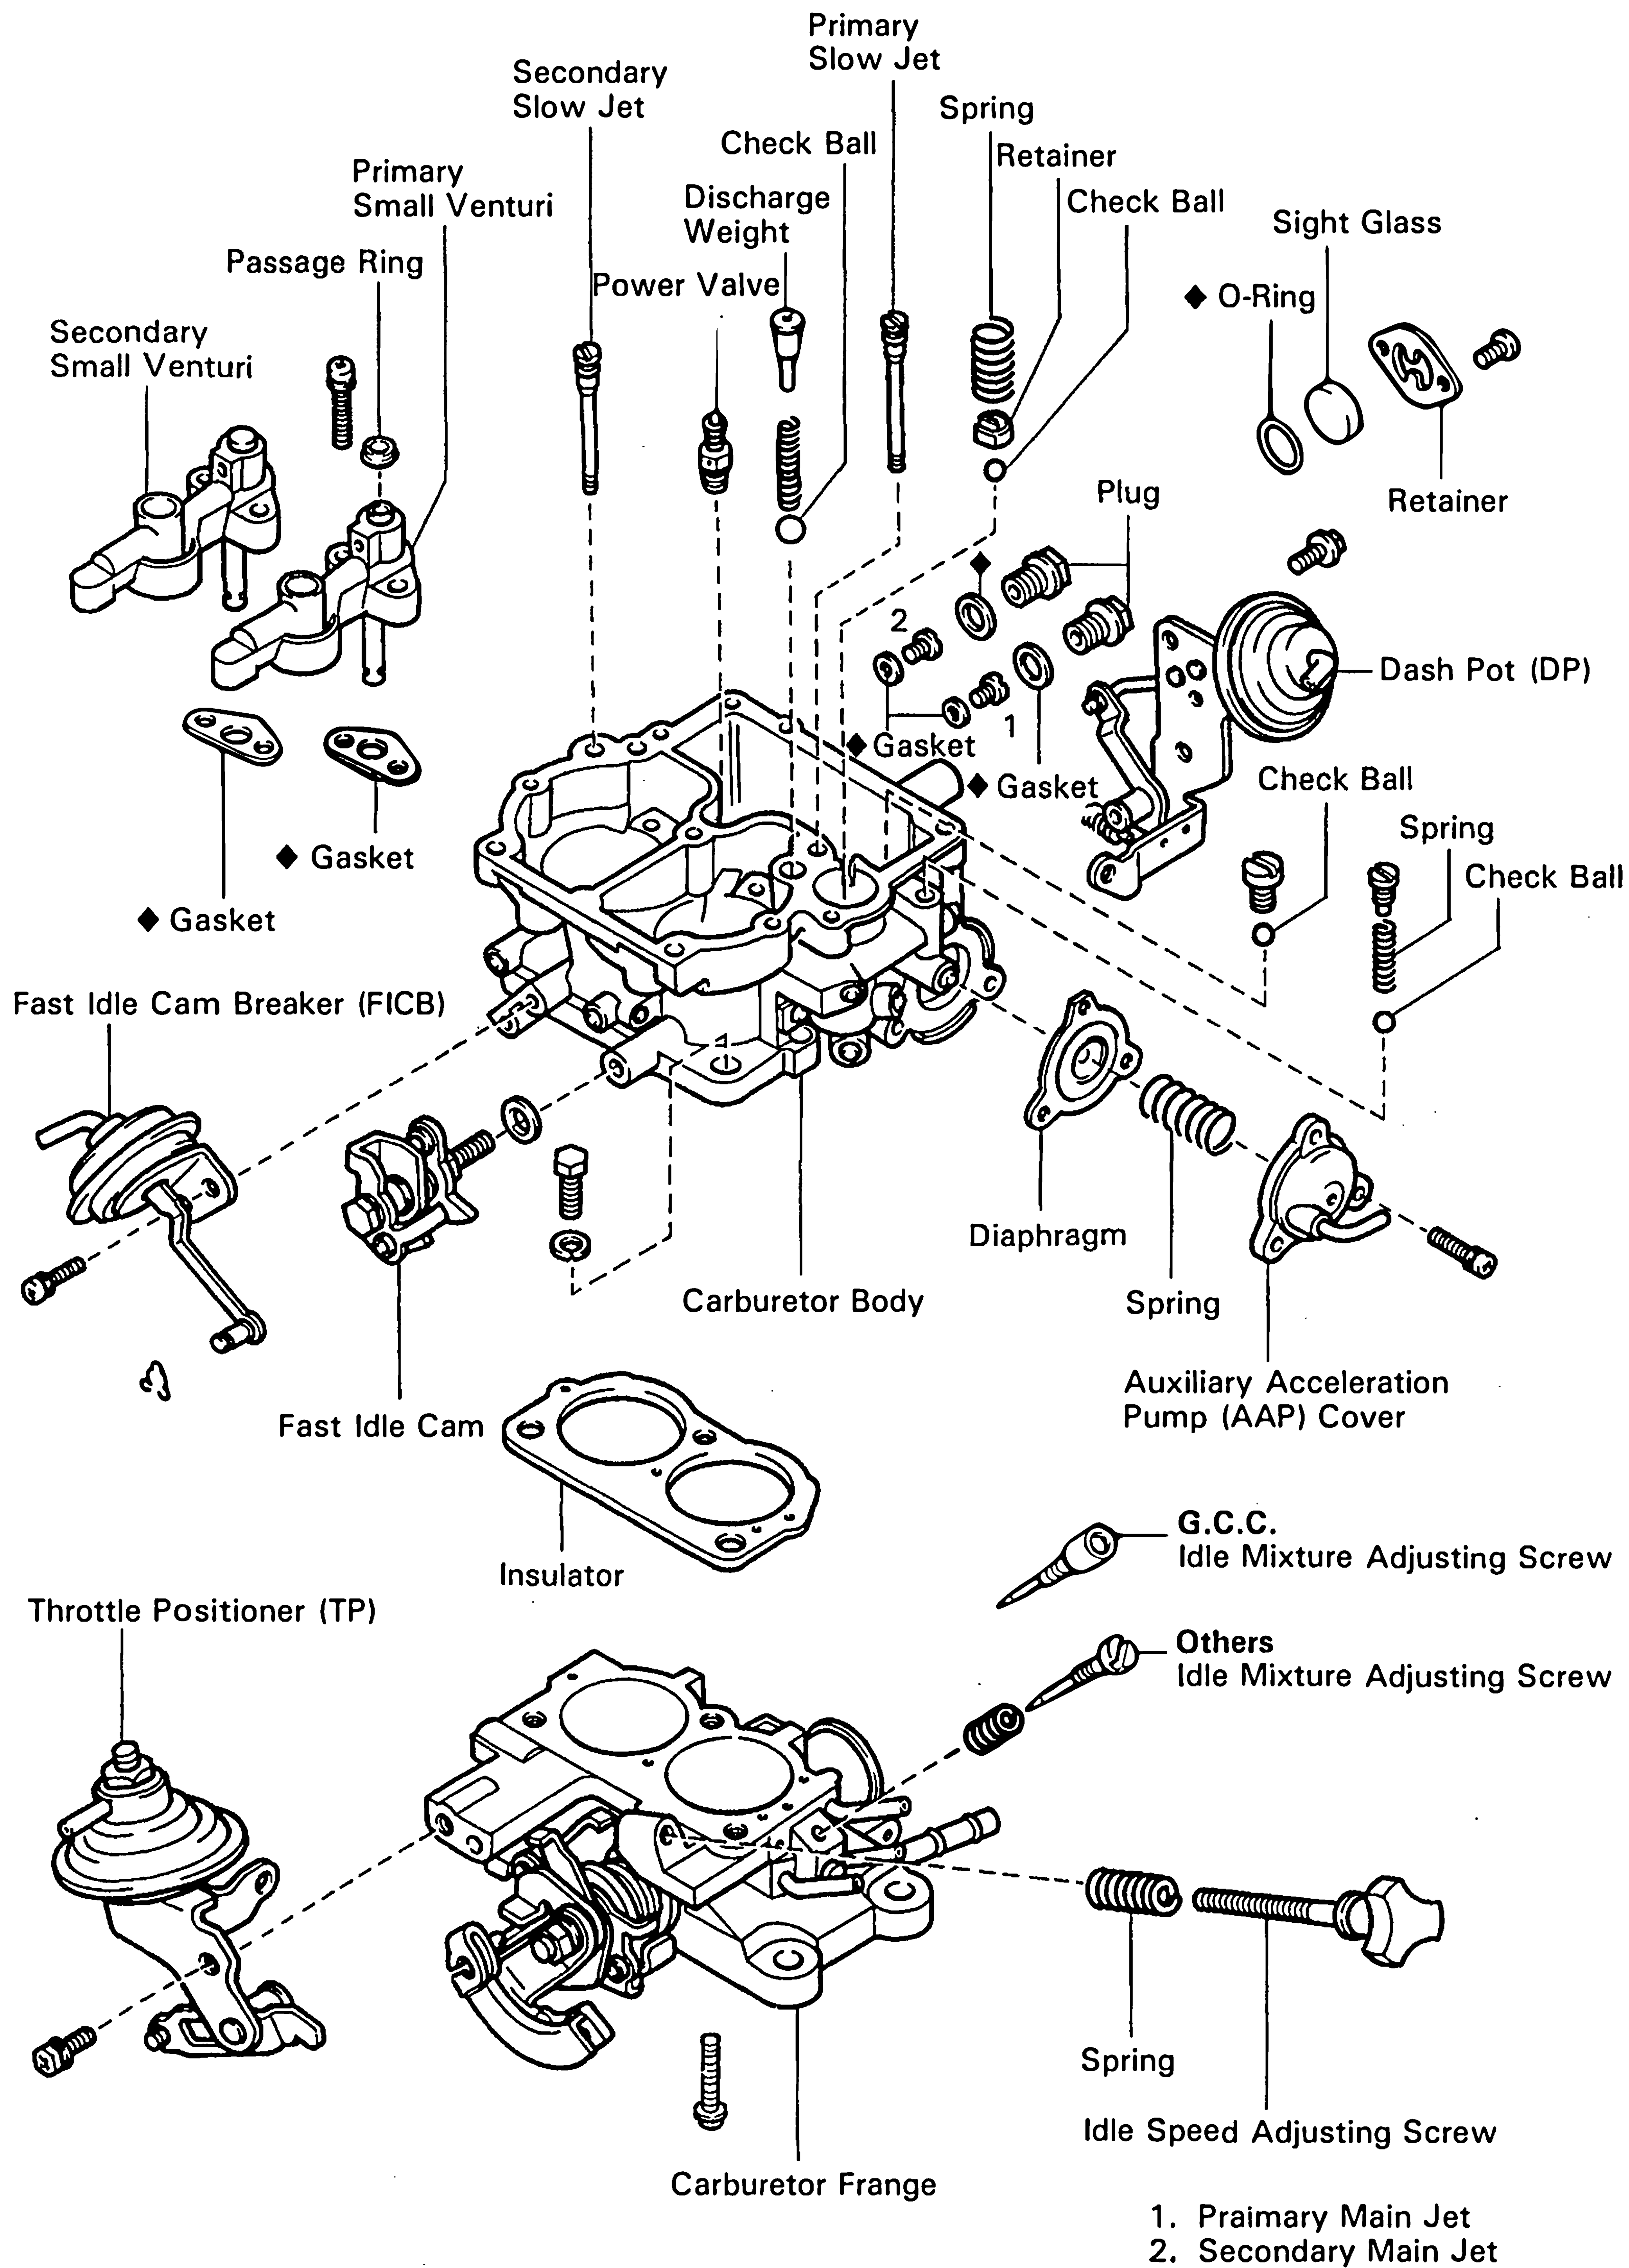

CARBURETOR DISASSEMBLY


(See pages EG — 140, 141)

HINT: The following instructions are organized so that you will work only one component group at a time.

This will help you avoid confusion between similar looking parts from different subassemblies being on your workbench at the same time.

- (a) To facilitate reassembly, arrange parts in order.
- (b) Be careful not to mix up or lose balls, clips or springs.
- (c) Use SST (carburetor driver set).
SST 09860—11011

EG

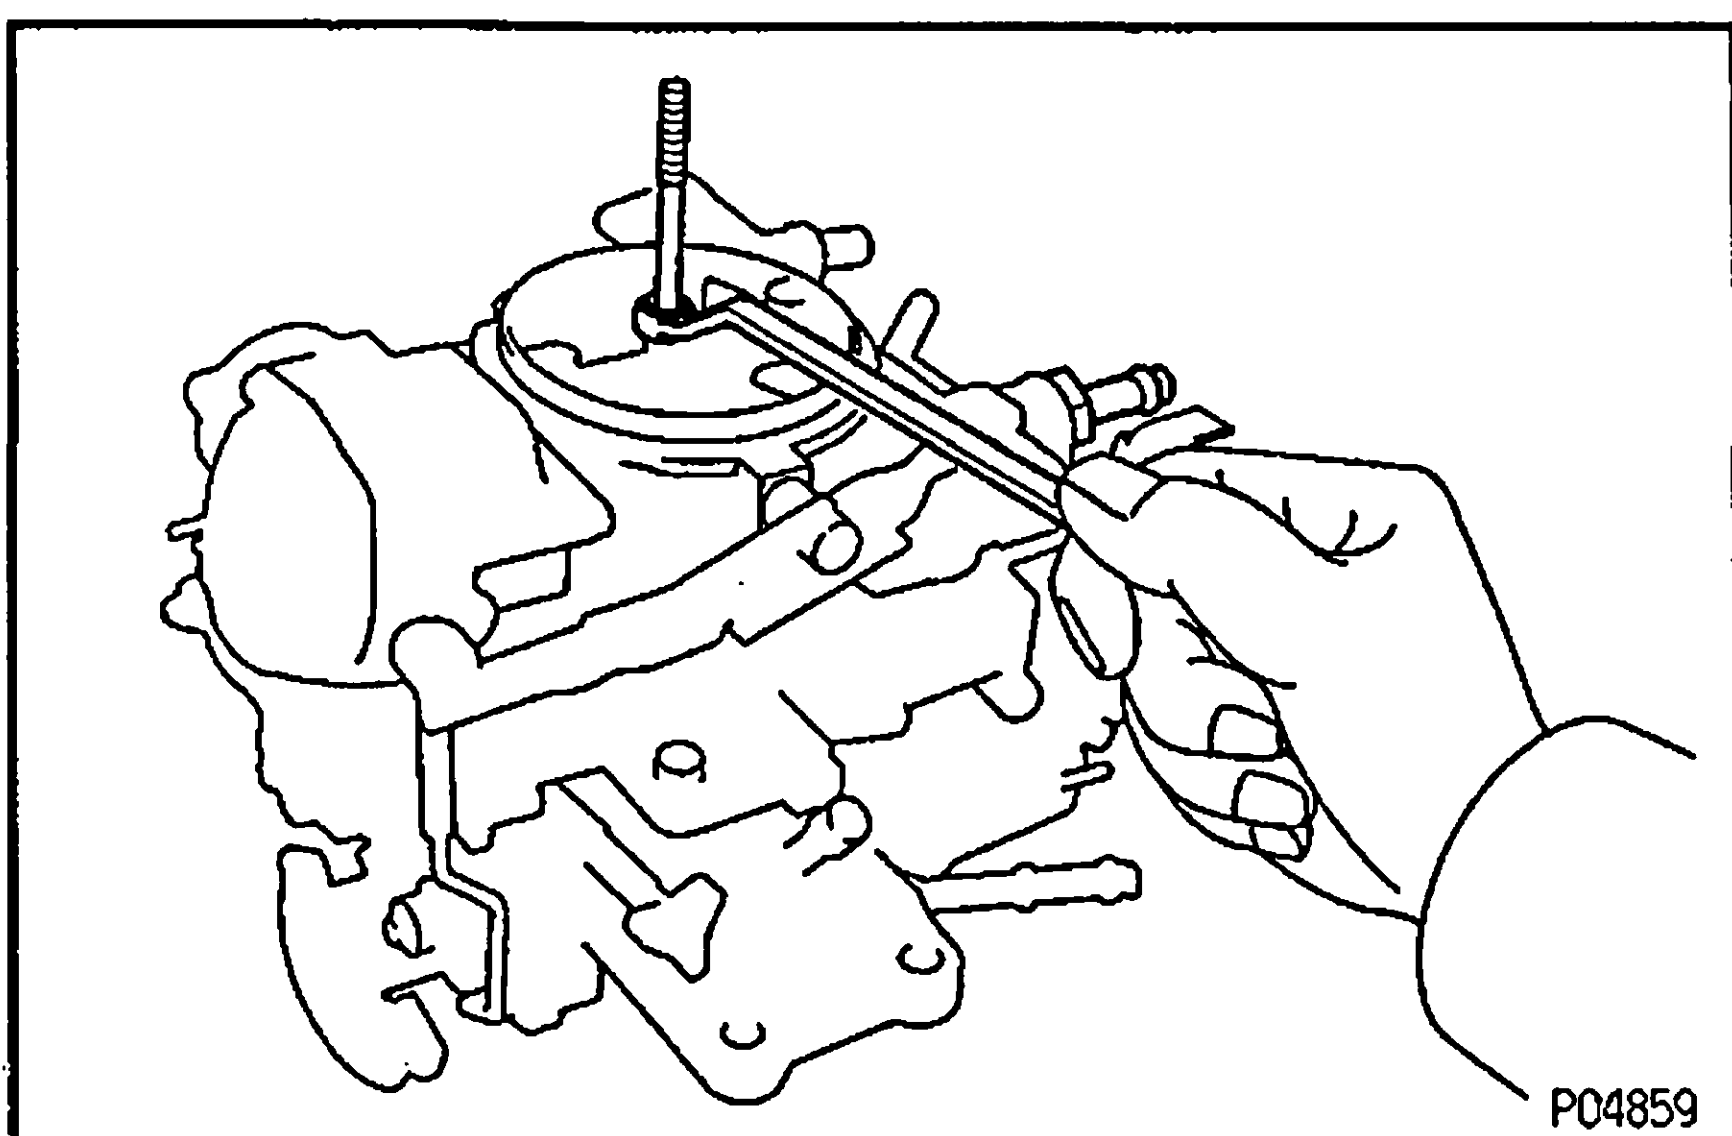


Air Horn Disassembly

EG0UD-01


(See page EG — 140)

1. REMOVE CARBURETOR STUD BOLT AND NIPPLE UNION

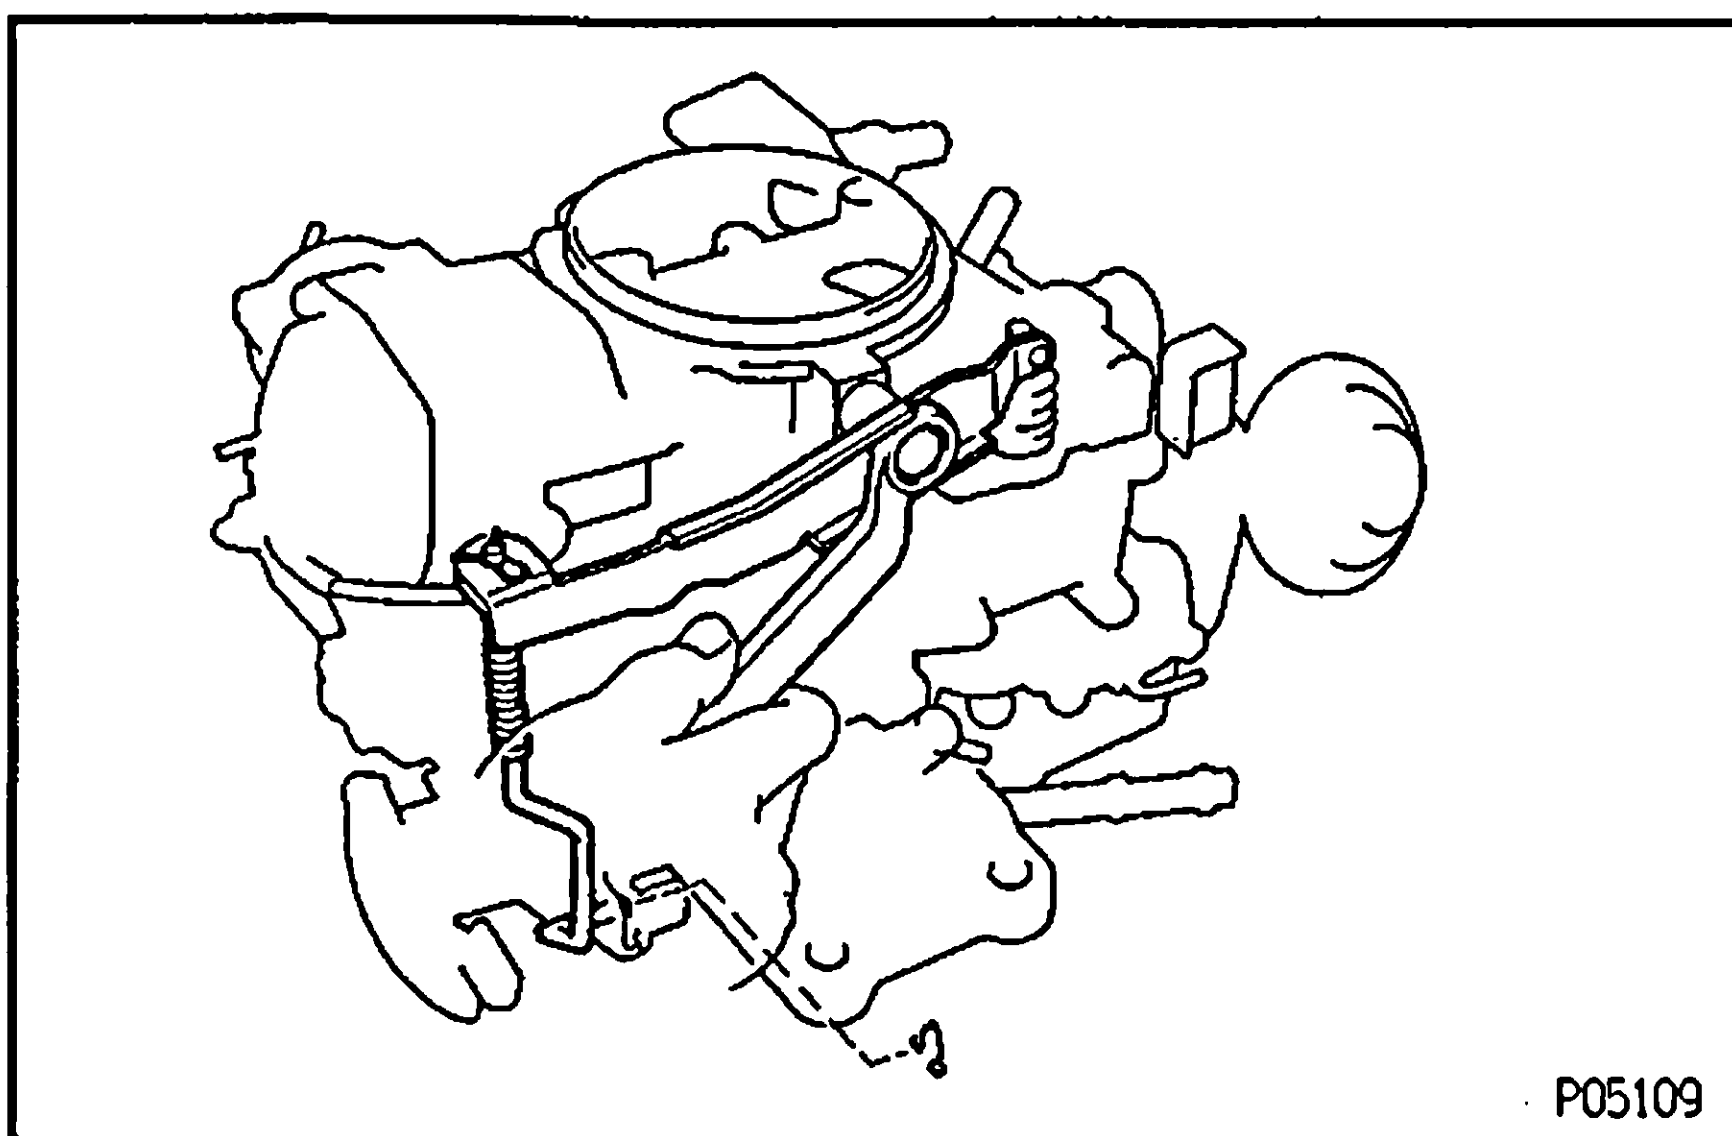


2. REMOVE ACCELERATION PUMP ARM

- (a) Remove the snap ring from the pump connecting link.
- (b) Remove the pivot bolt.
- (c) Disconnect the pump arm from the pump plunger.
- (d) Disconnect the pump connecting link from the throttle lever and remove the pump arm and pump connecting link.

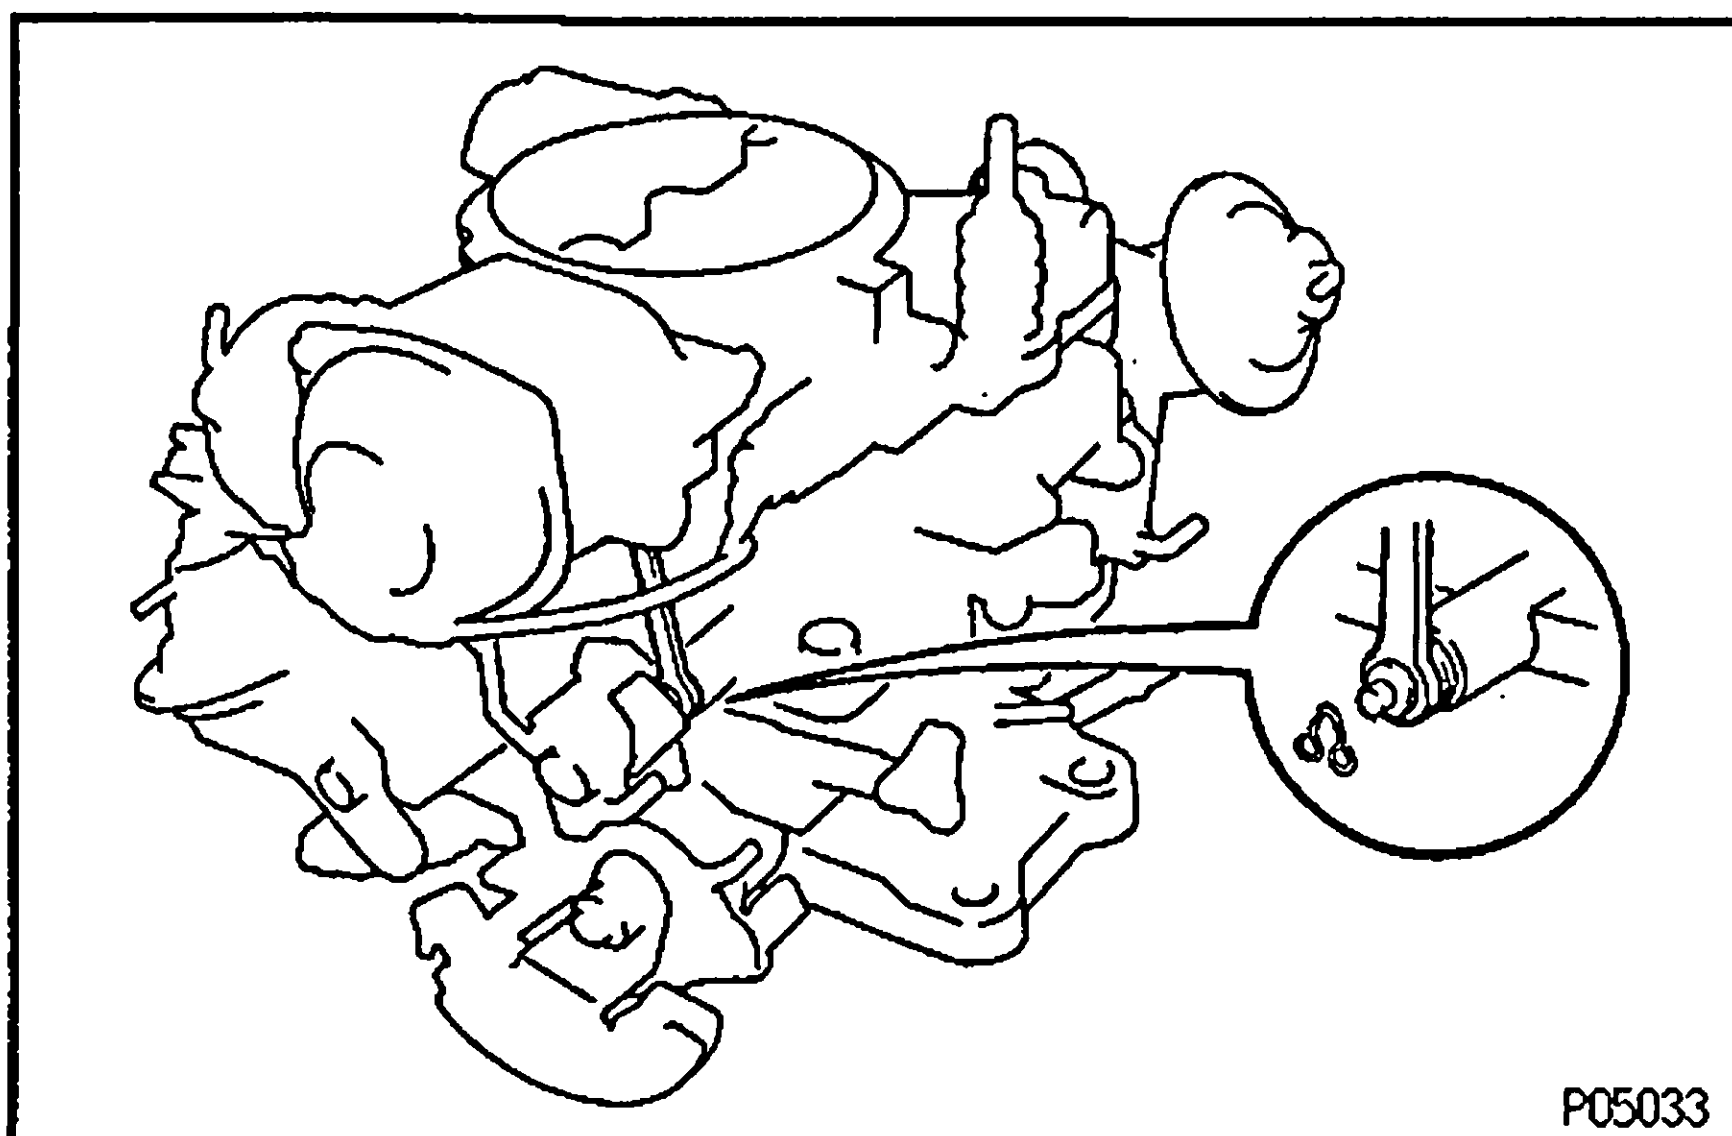


3. DISCONNECT FAST IDLE CAM BREAKER (FICB) LINK

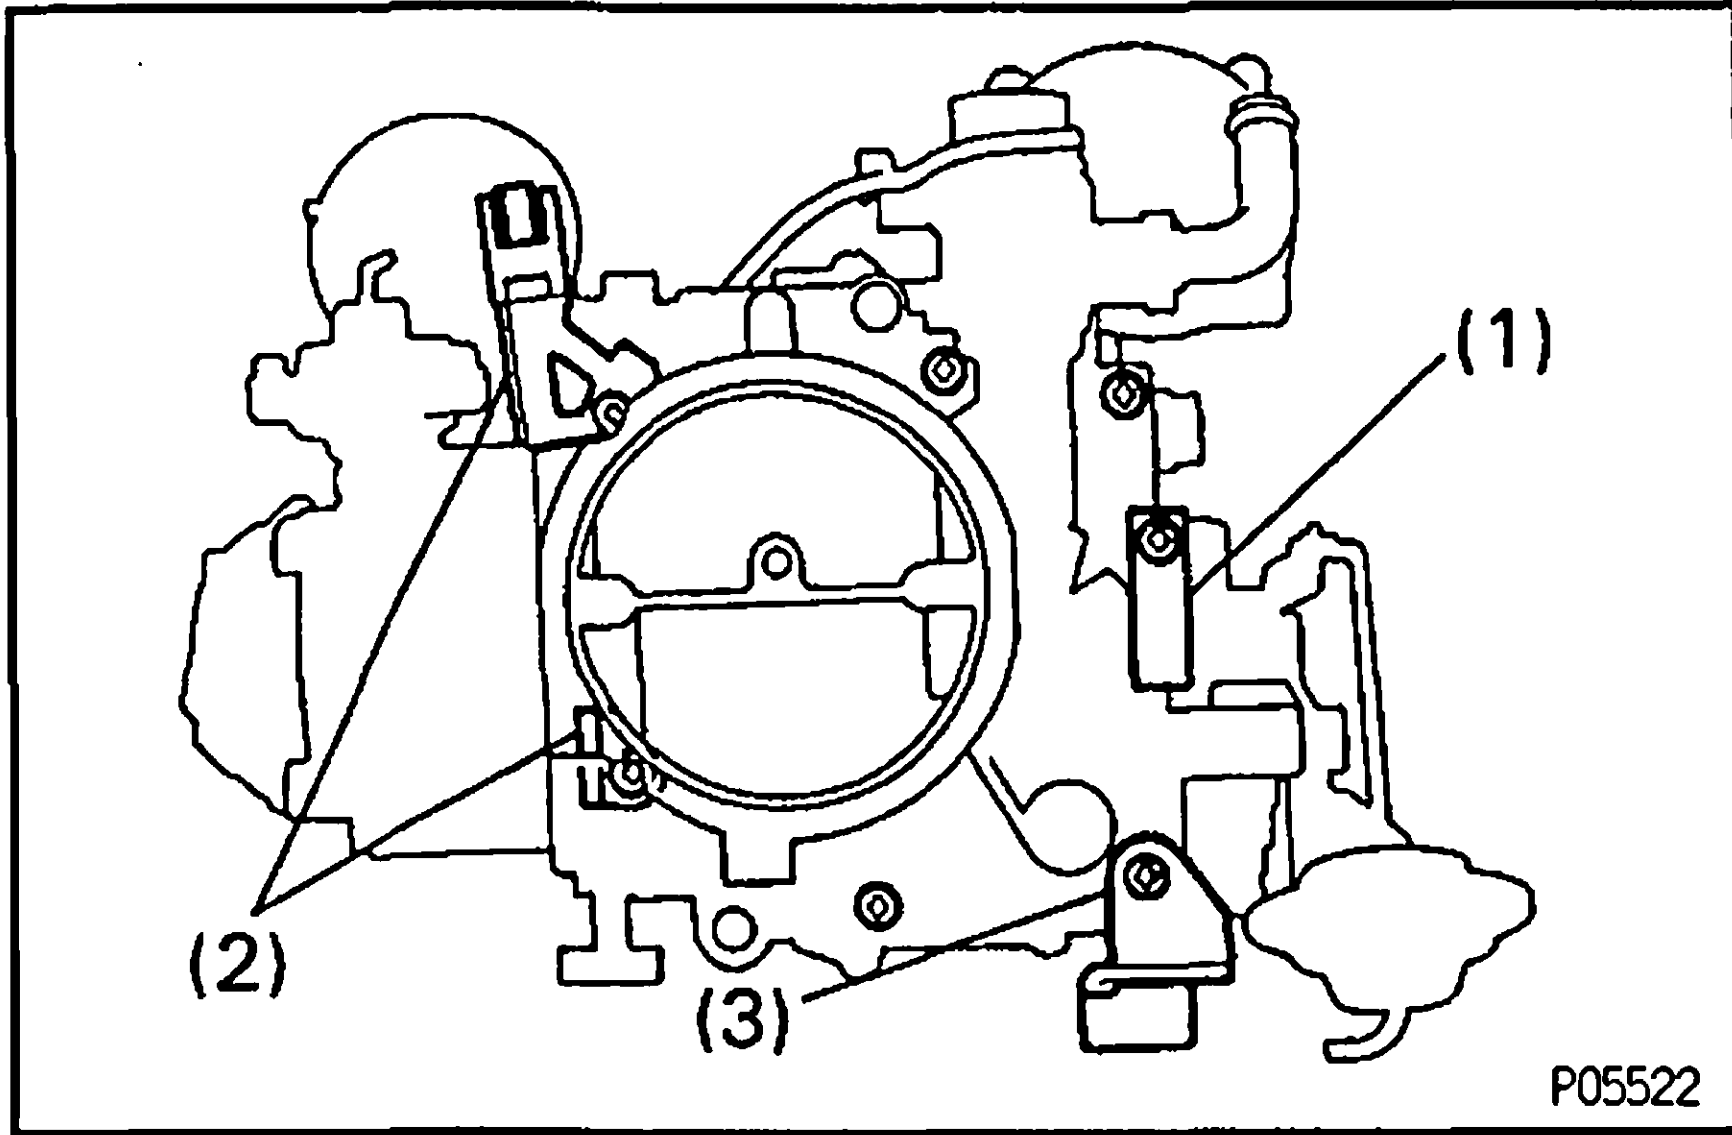
**4. REMOVE AIR HORN ASSEMBLY**

- (a) Remove the seven screws and following parts:
 - (1) Number plate
 - (2) Wire clamps
 - (3) Vacuum hose clamp
- (b) Lift off the air horn assembly together with the air horn gasket.


EG

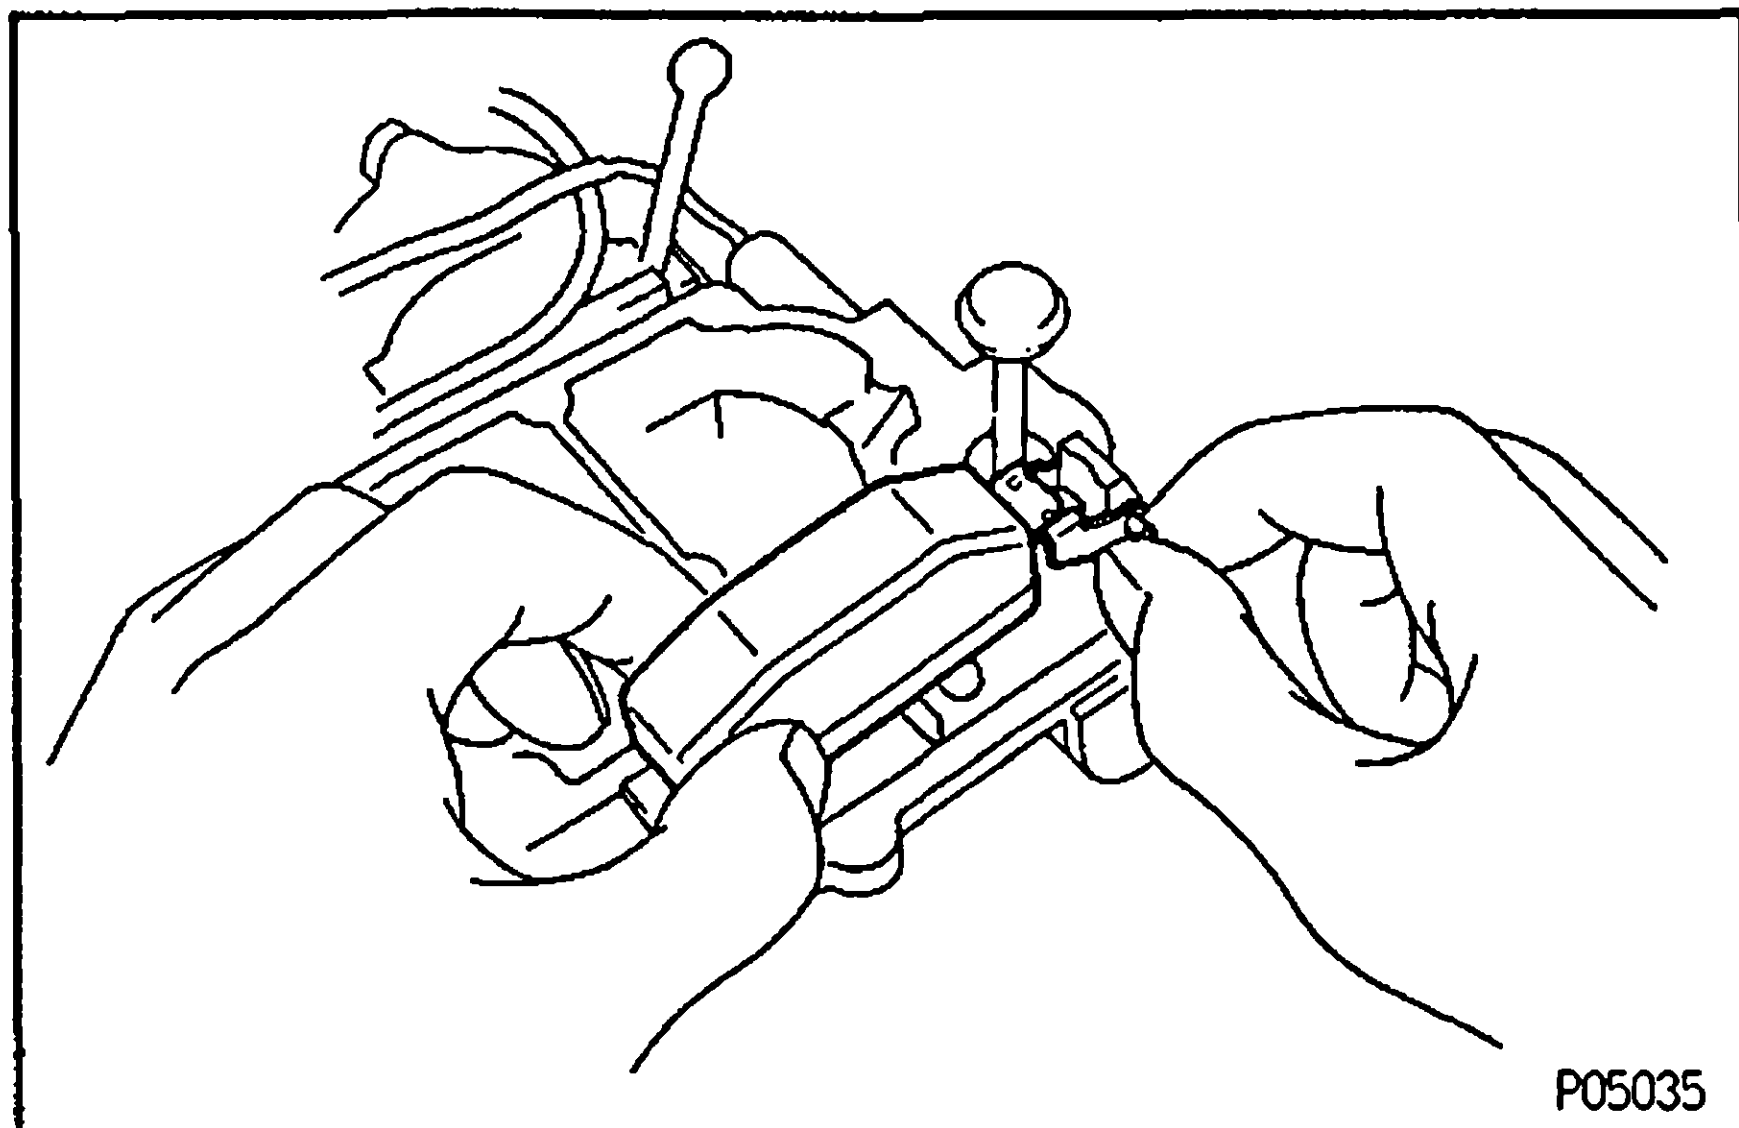**5. REMOVE FLOAT AND NEEDLE VALVE**


Remove the float pivot pin, float and needle valve subassembly.

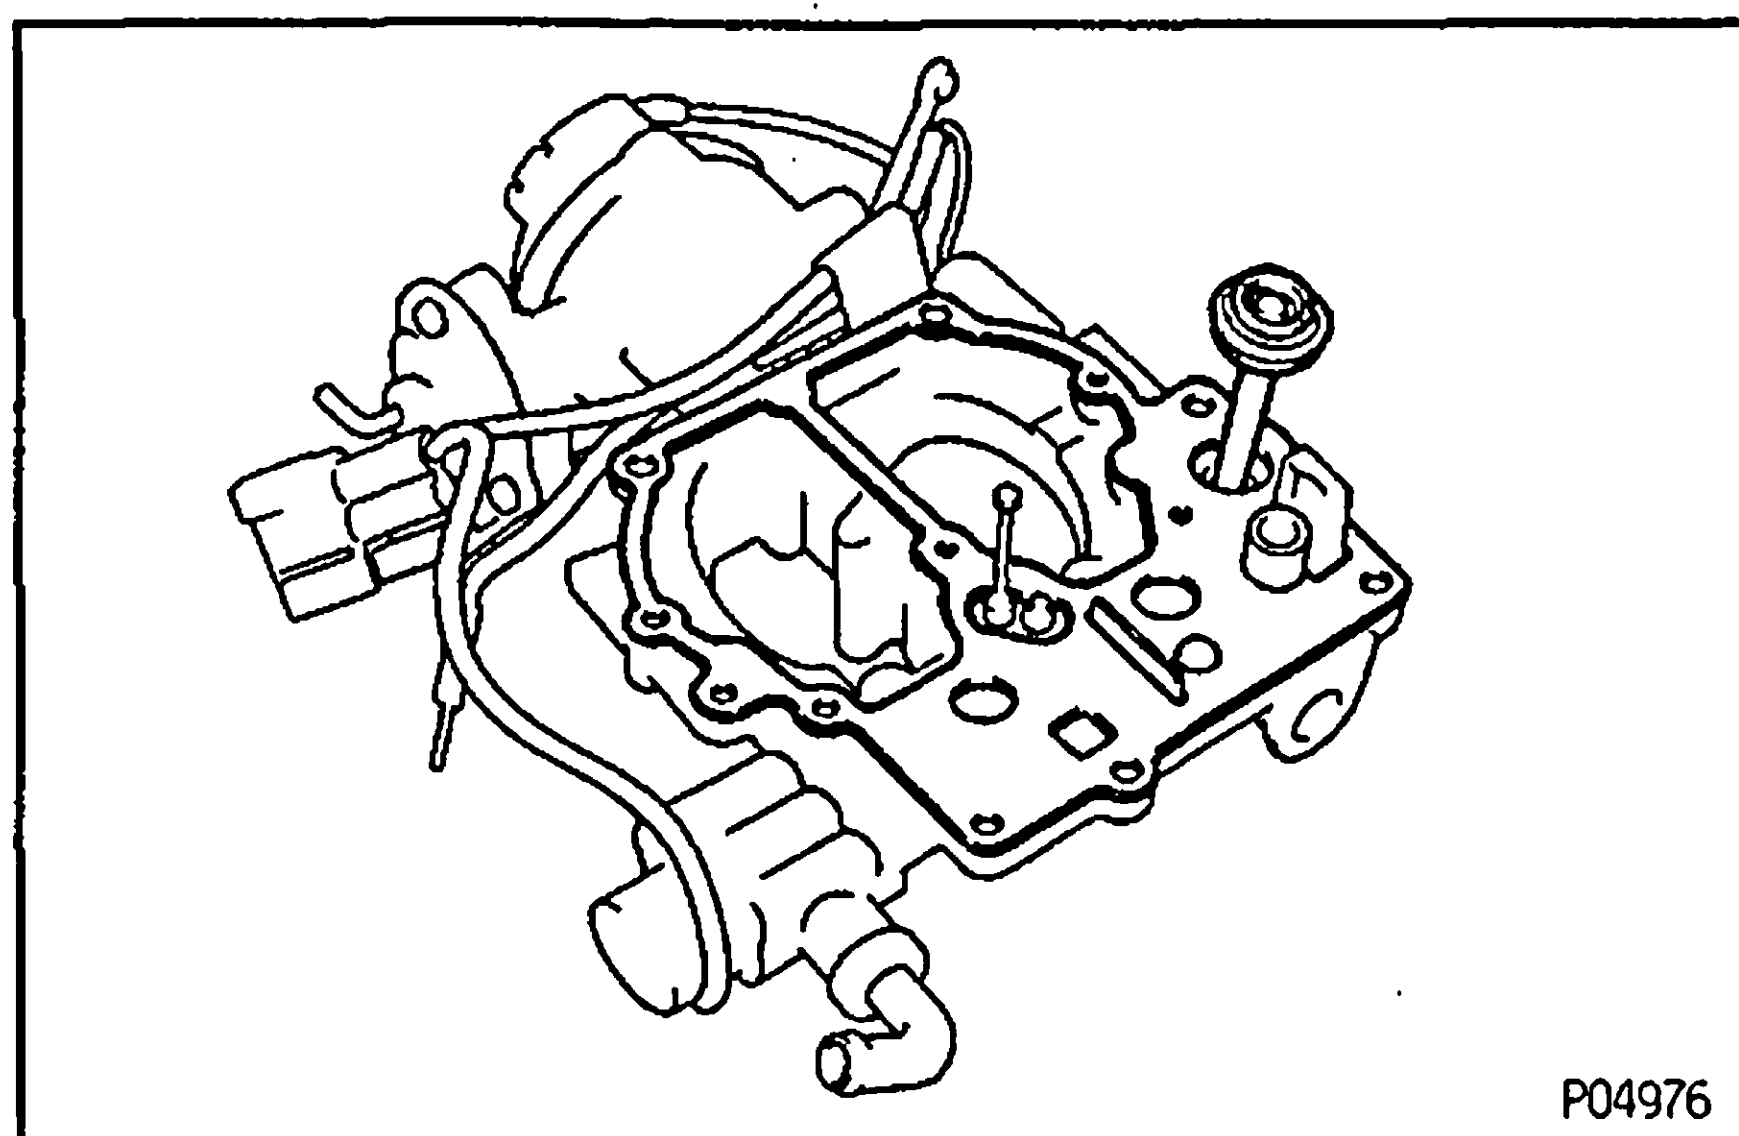**6. REMOVE ACCELERATION PUMP PLUNGER**


Remove the pump plunger and boot.

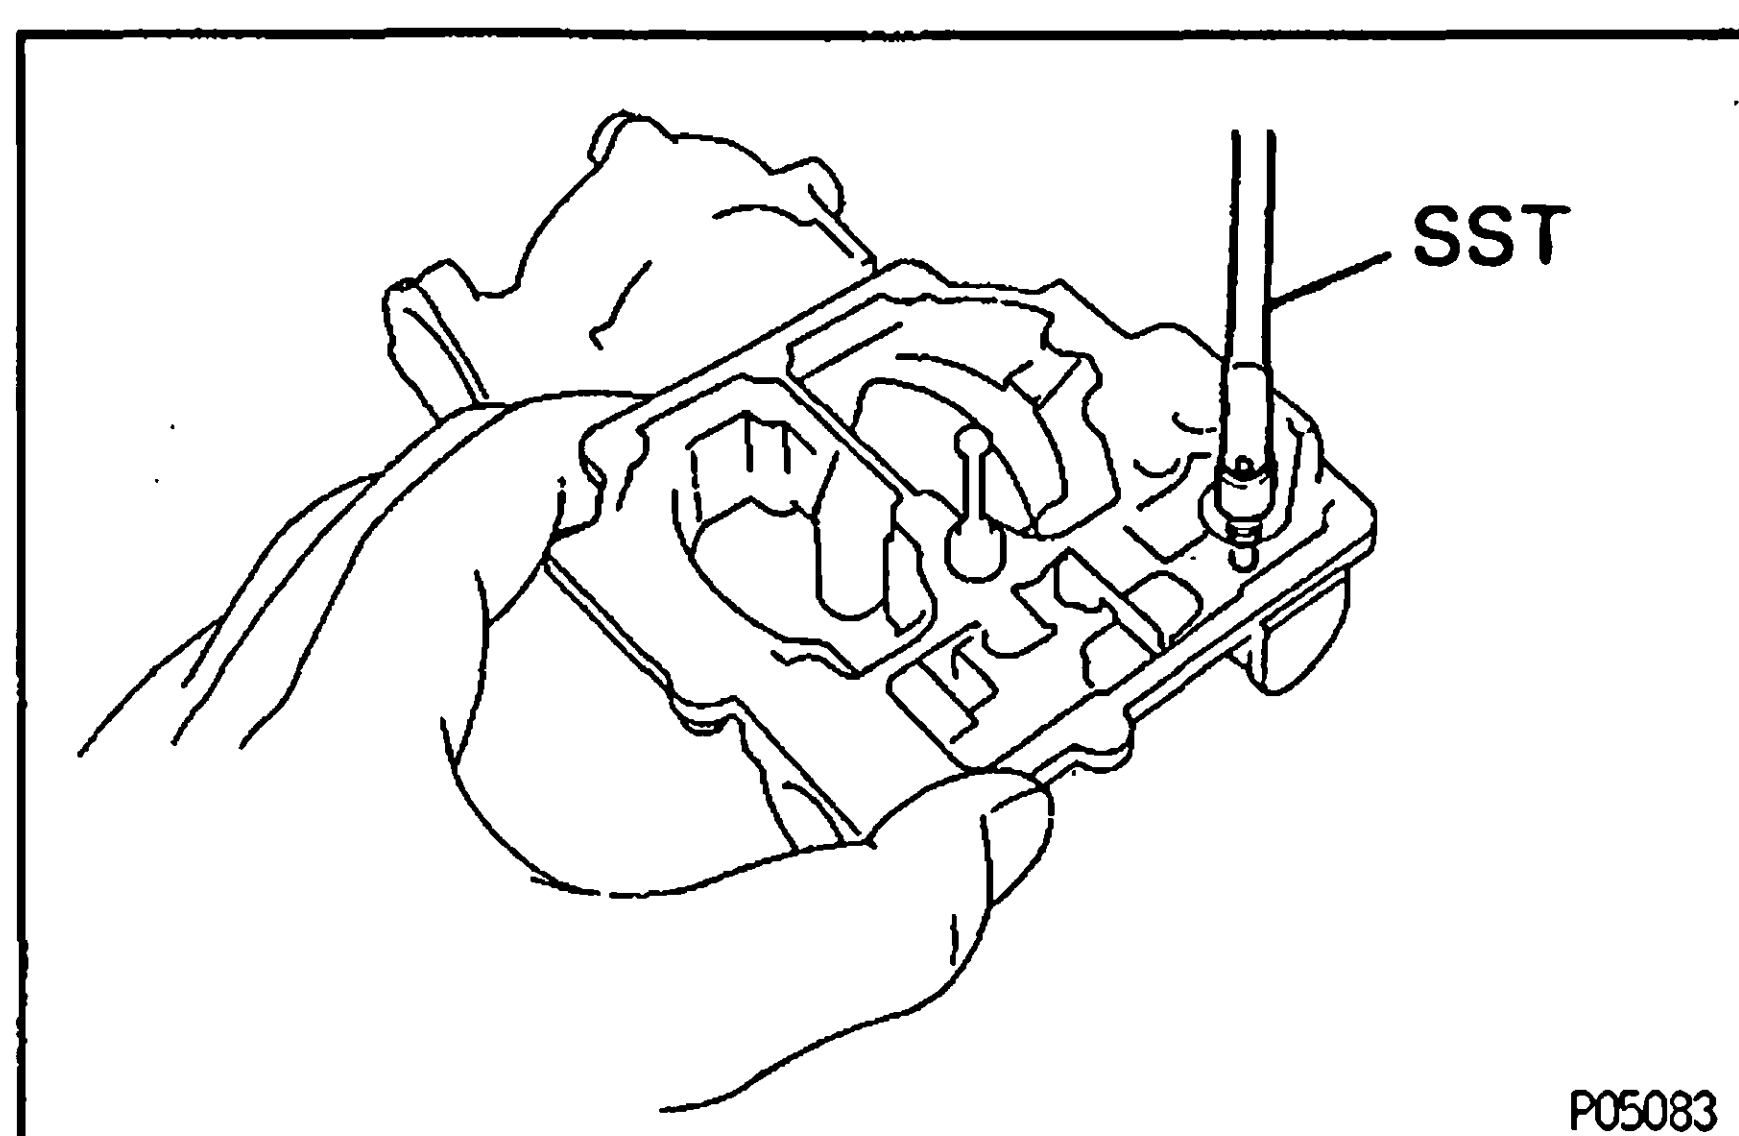7. REMOVE AIR HORN GASKET**8. REMOVE NEEDLE VALVE SEAT**

Remove the needle valve seat and gasket.

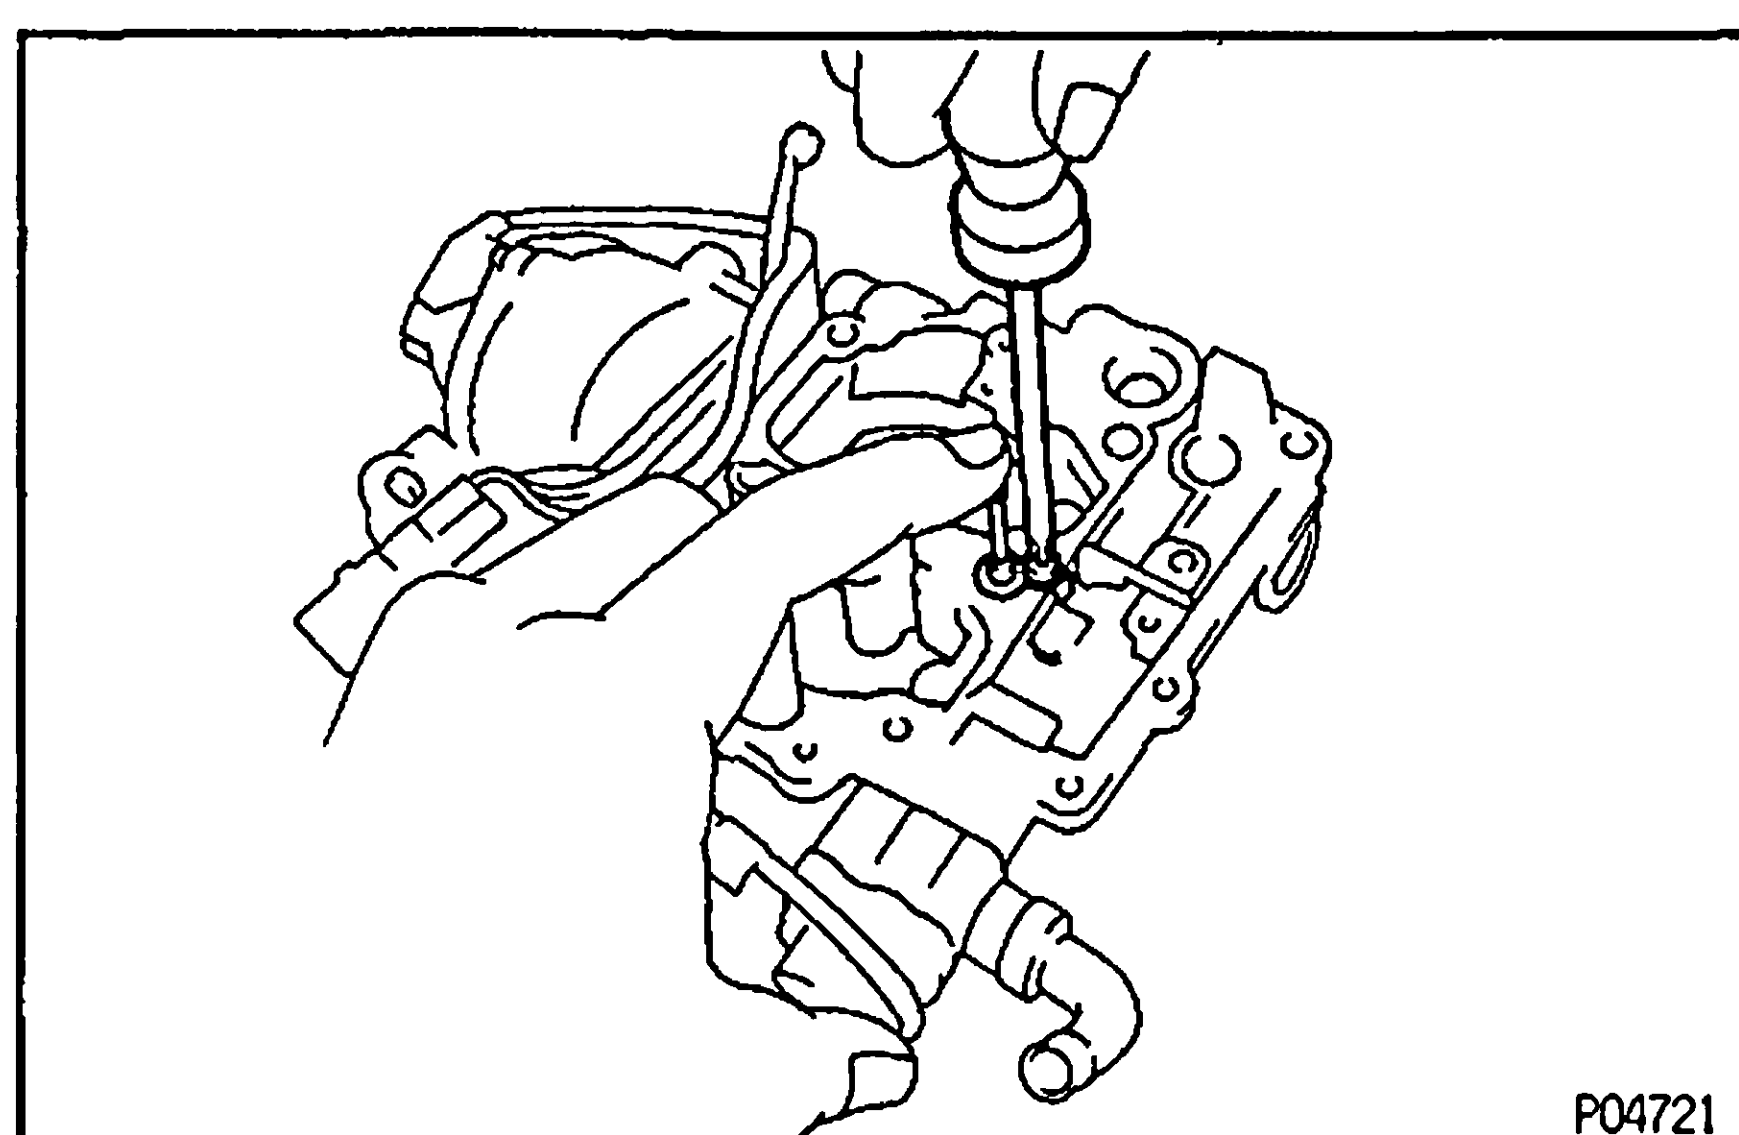**9. REMOVE POWER PISTON**


Remove the screw, retainer, power piston and spring.

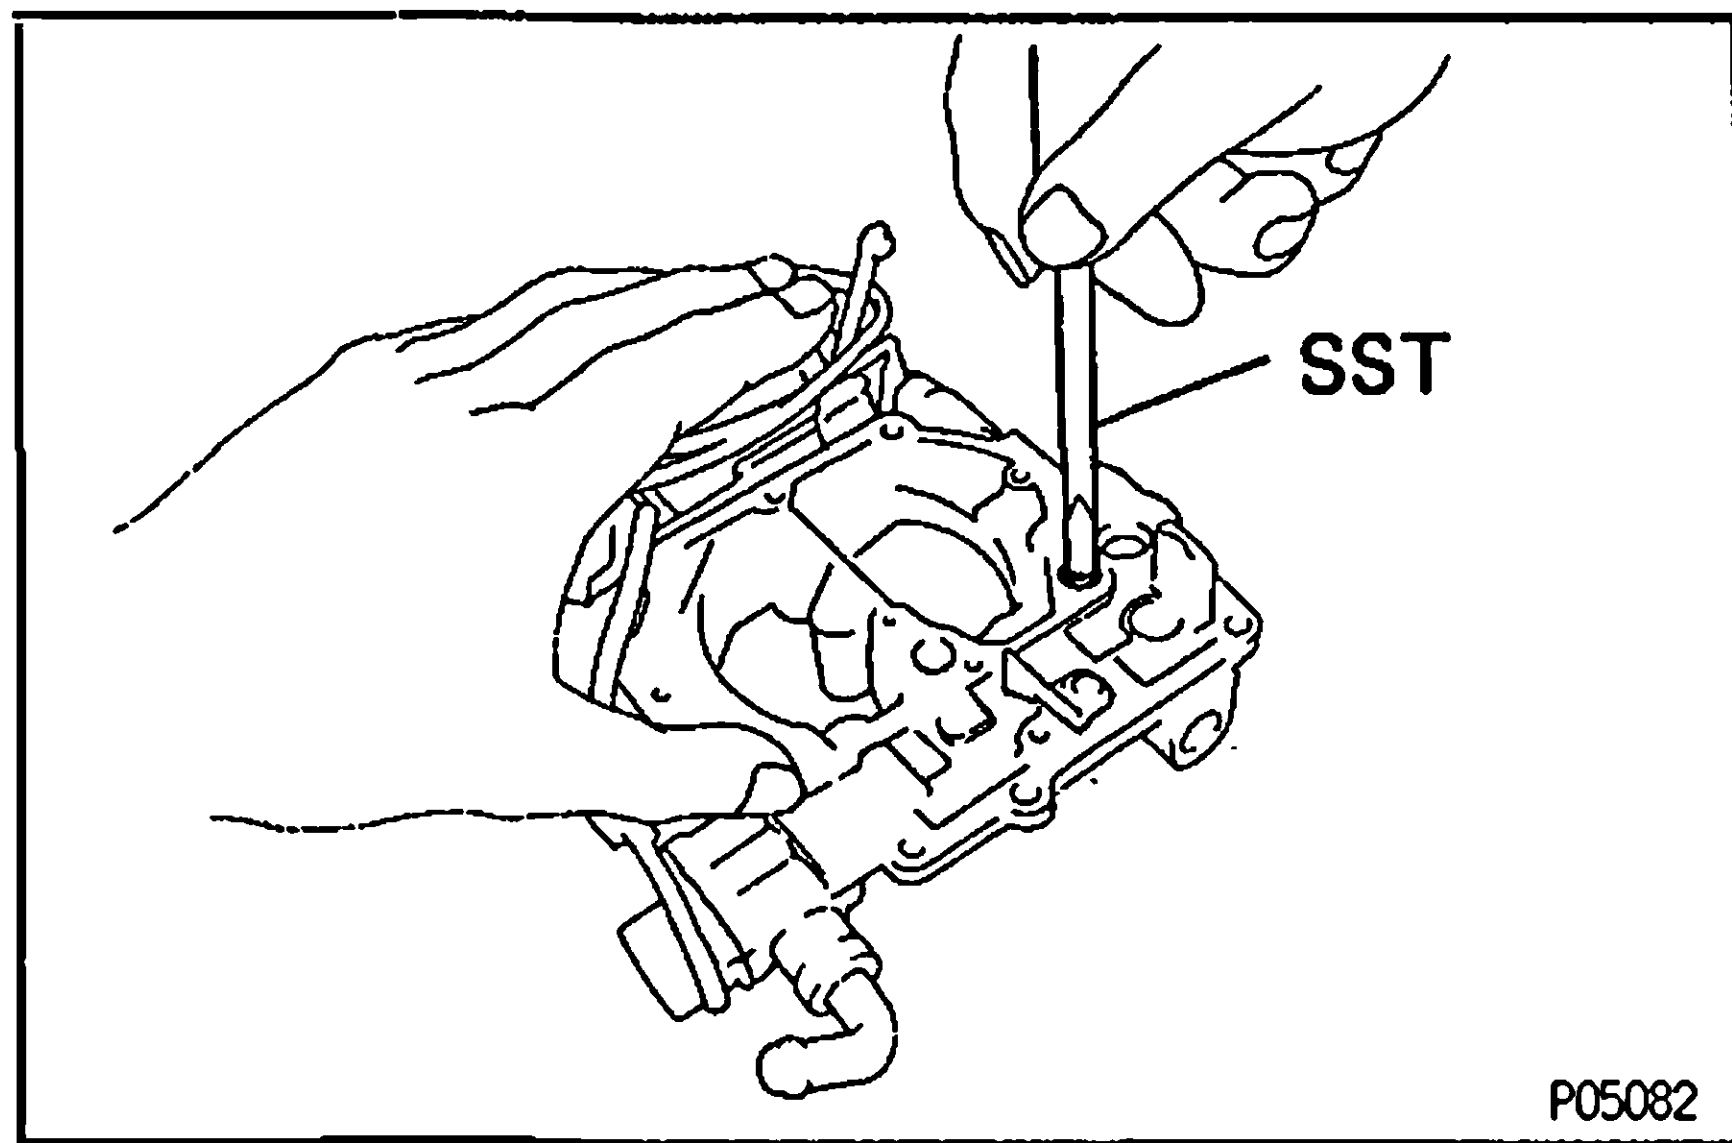10. REMOVE PRIMARY UPPER SLOW JET**11. DISCONNECT WIRES FROM CARBURETOR CONNECTOR**


Pry up the locking lugs with a screwdriver and pull out the terminal.

12. REMOVE OUTER VENT CONTROL VALVE (OVCV)


Remove the three screws, wire clamp, OVCV and gasket.

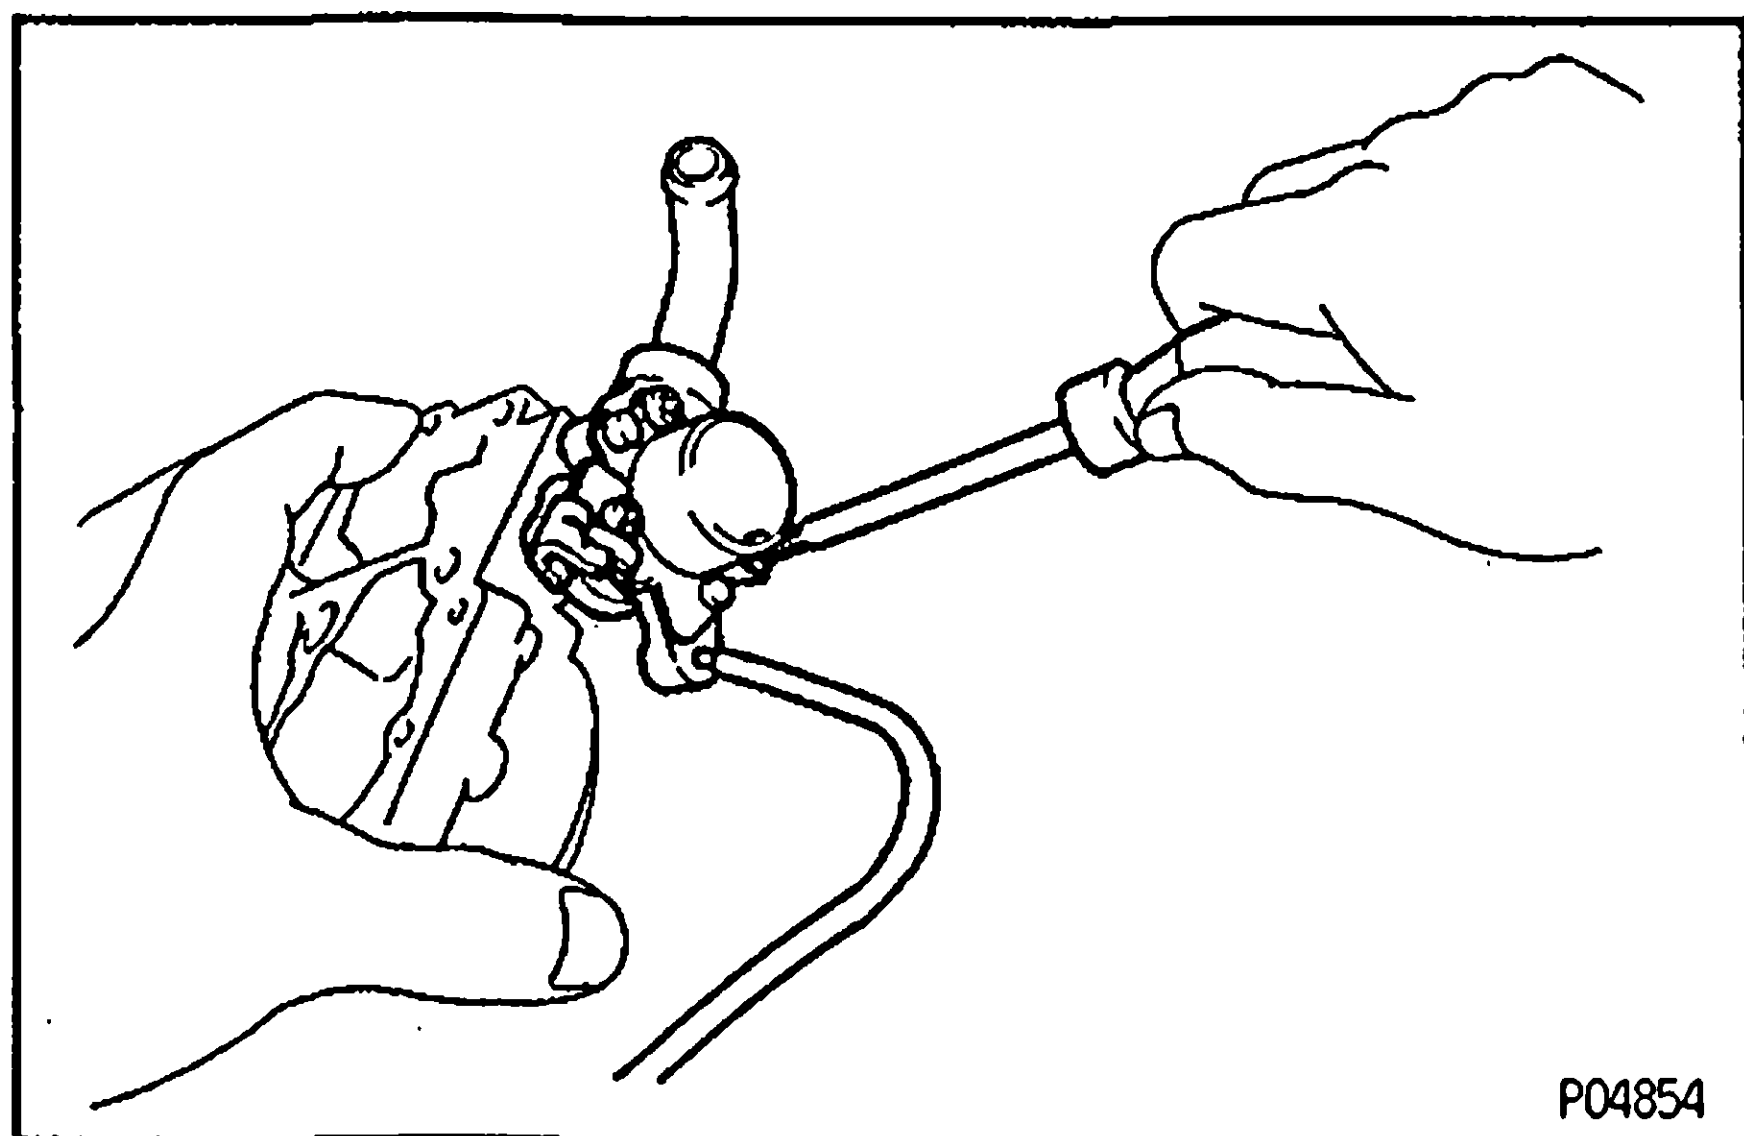**13. REMOVE COIL HOUSING**

Remove the three screws, retainer, coil housing and gasket.

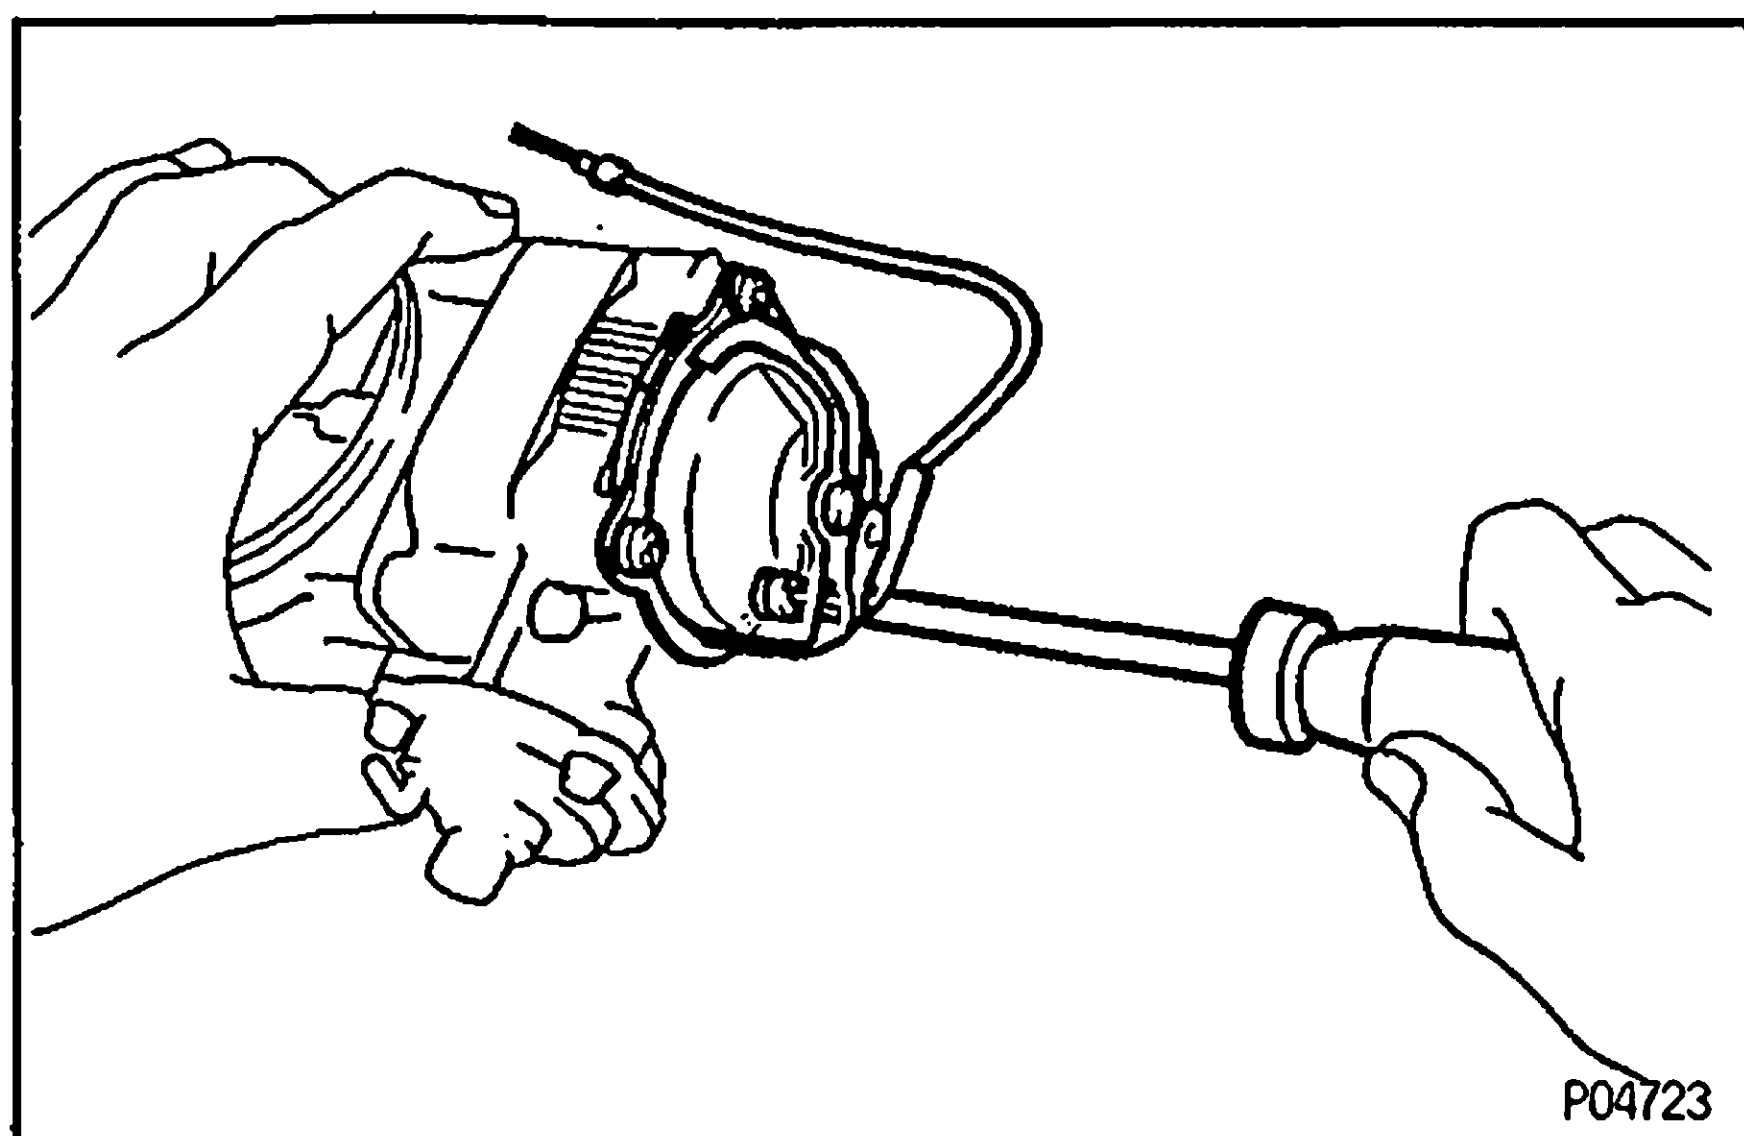
**14. REMOVE CHOKE BREAKER (CB)**

(a) Remove the three screws, cover and spring.

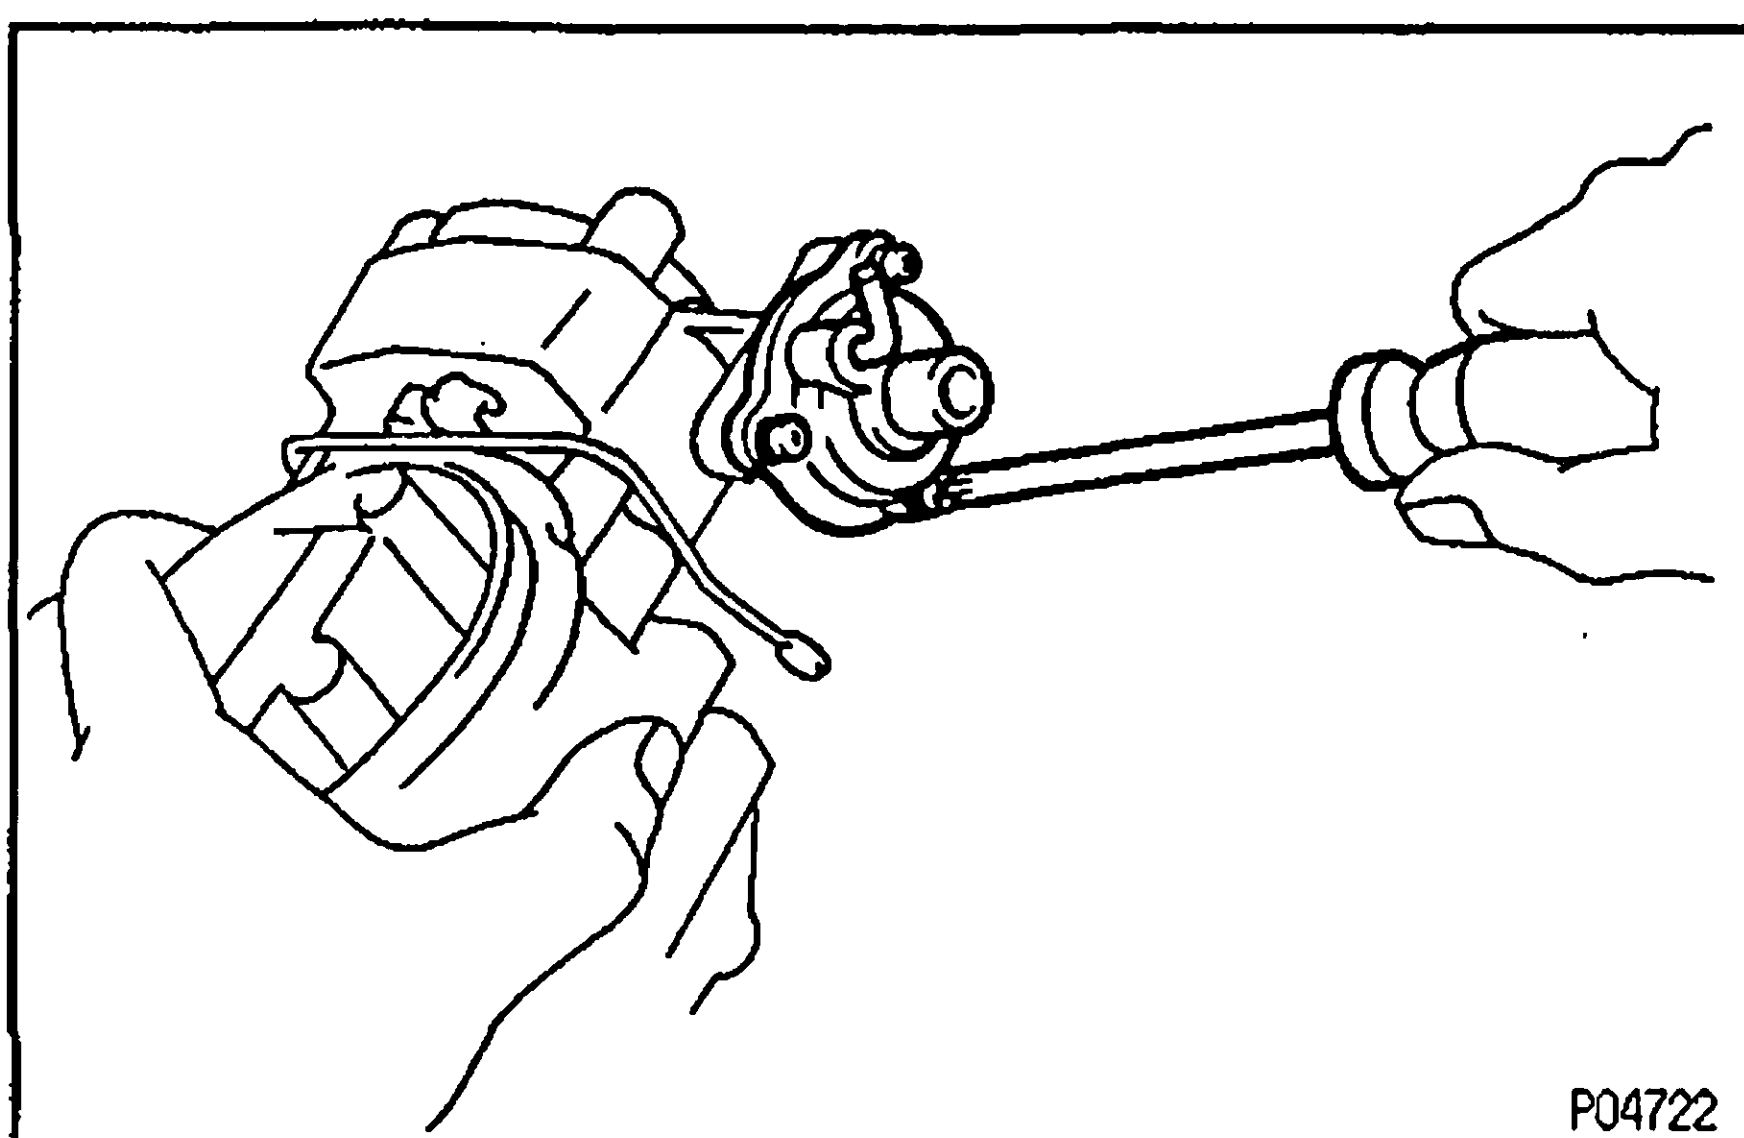




- (b) Remove the E—ring, stopper, spring collar and diaphragm.

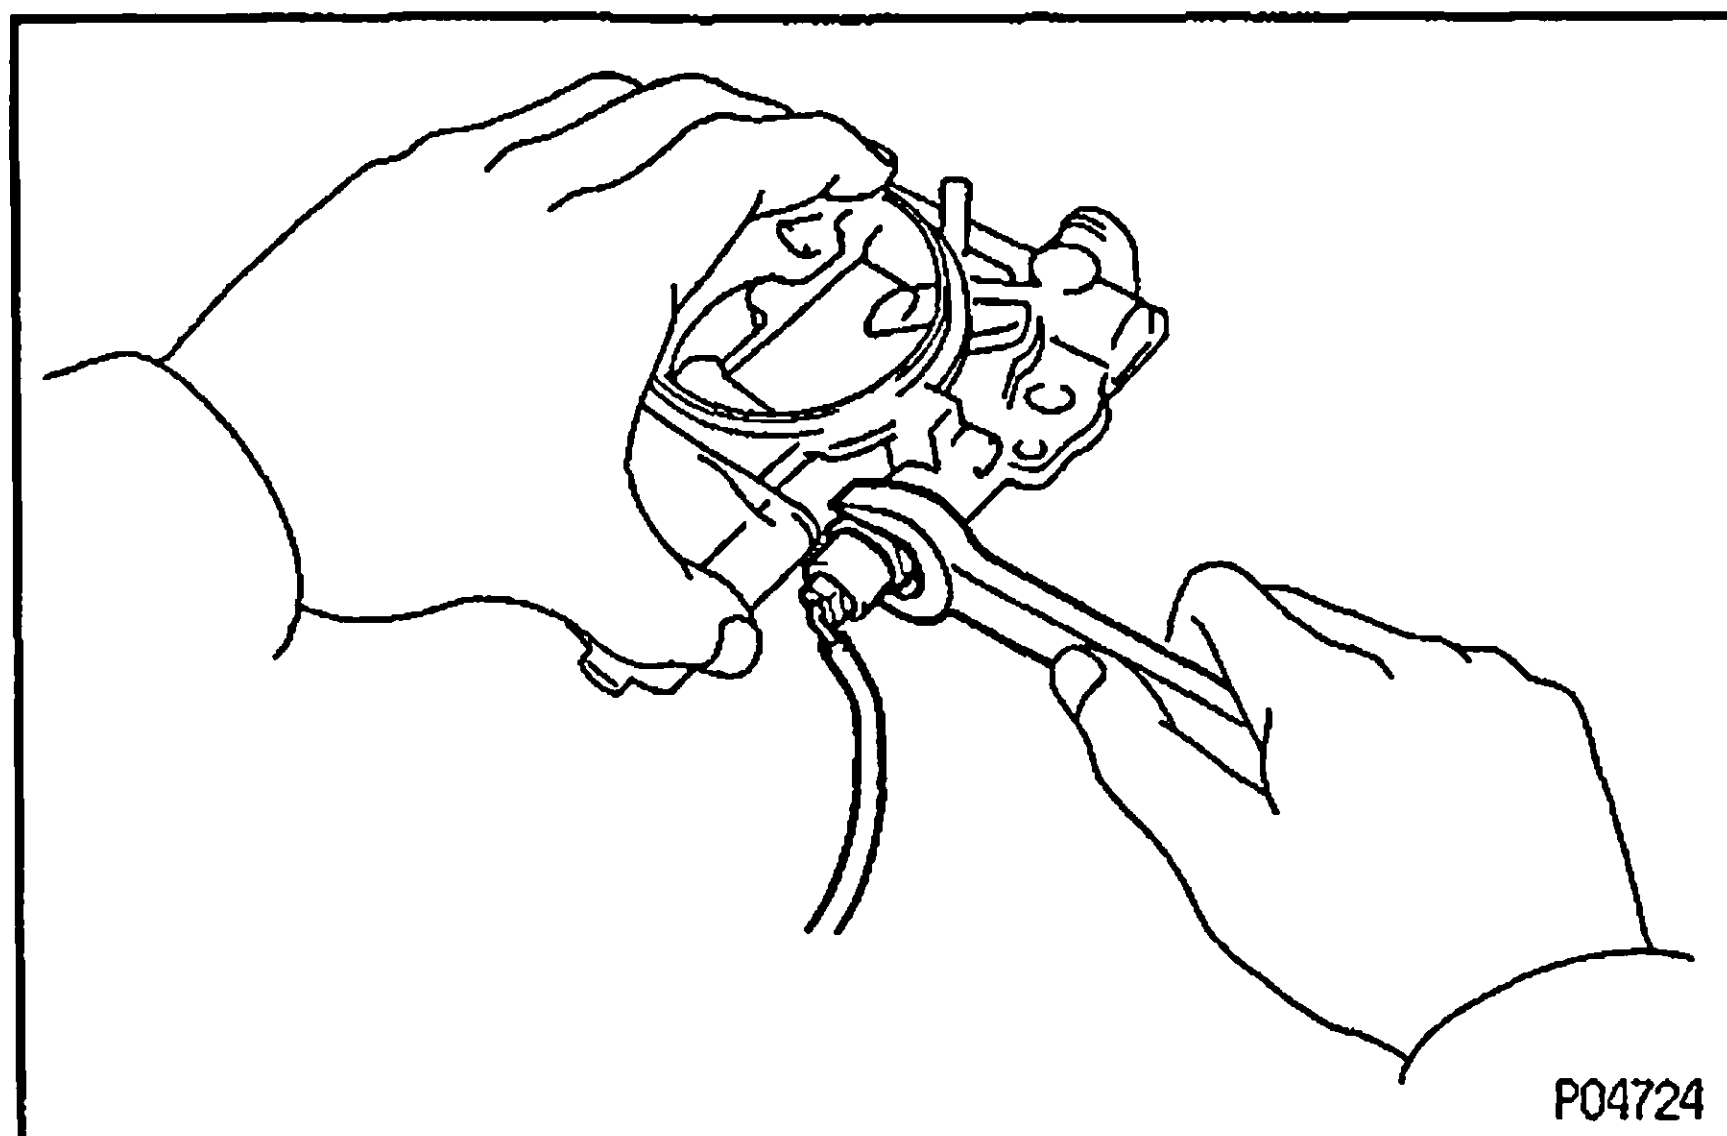


15. REMOVE FUEL CUT SOLENOID VALVE

Remove the solenoid valve and gasket.

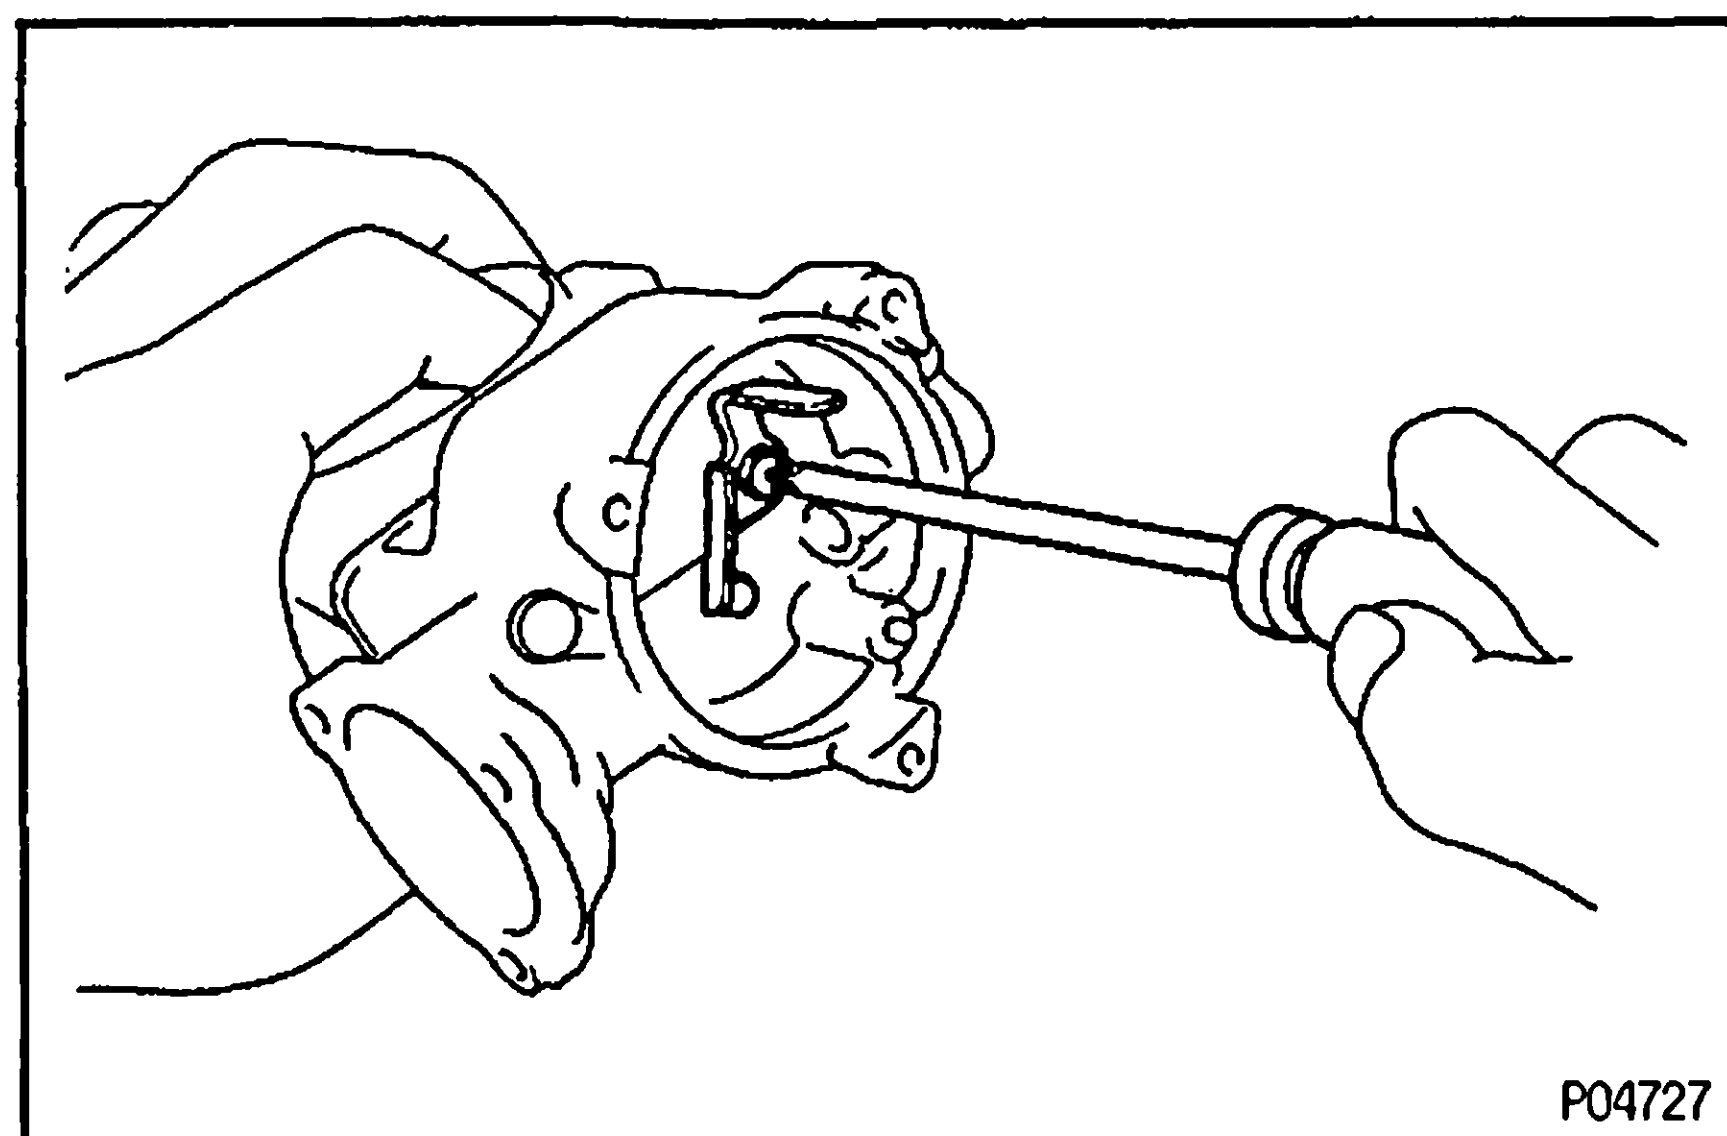


16. REMOVE THERMOSTAT HOUSING

- (a) Remove the screw and choke lever.

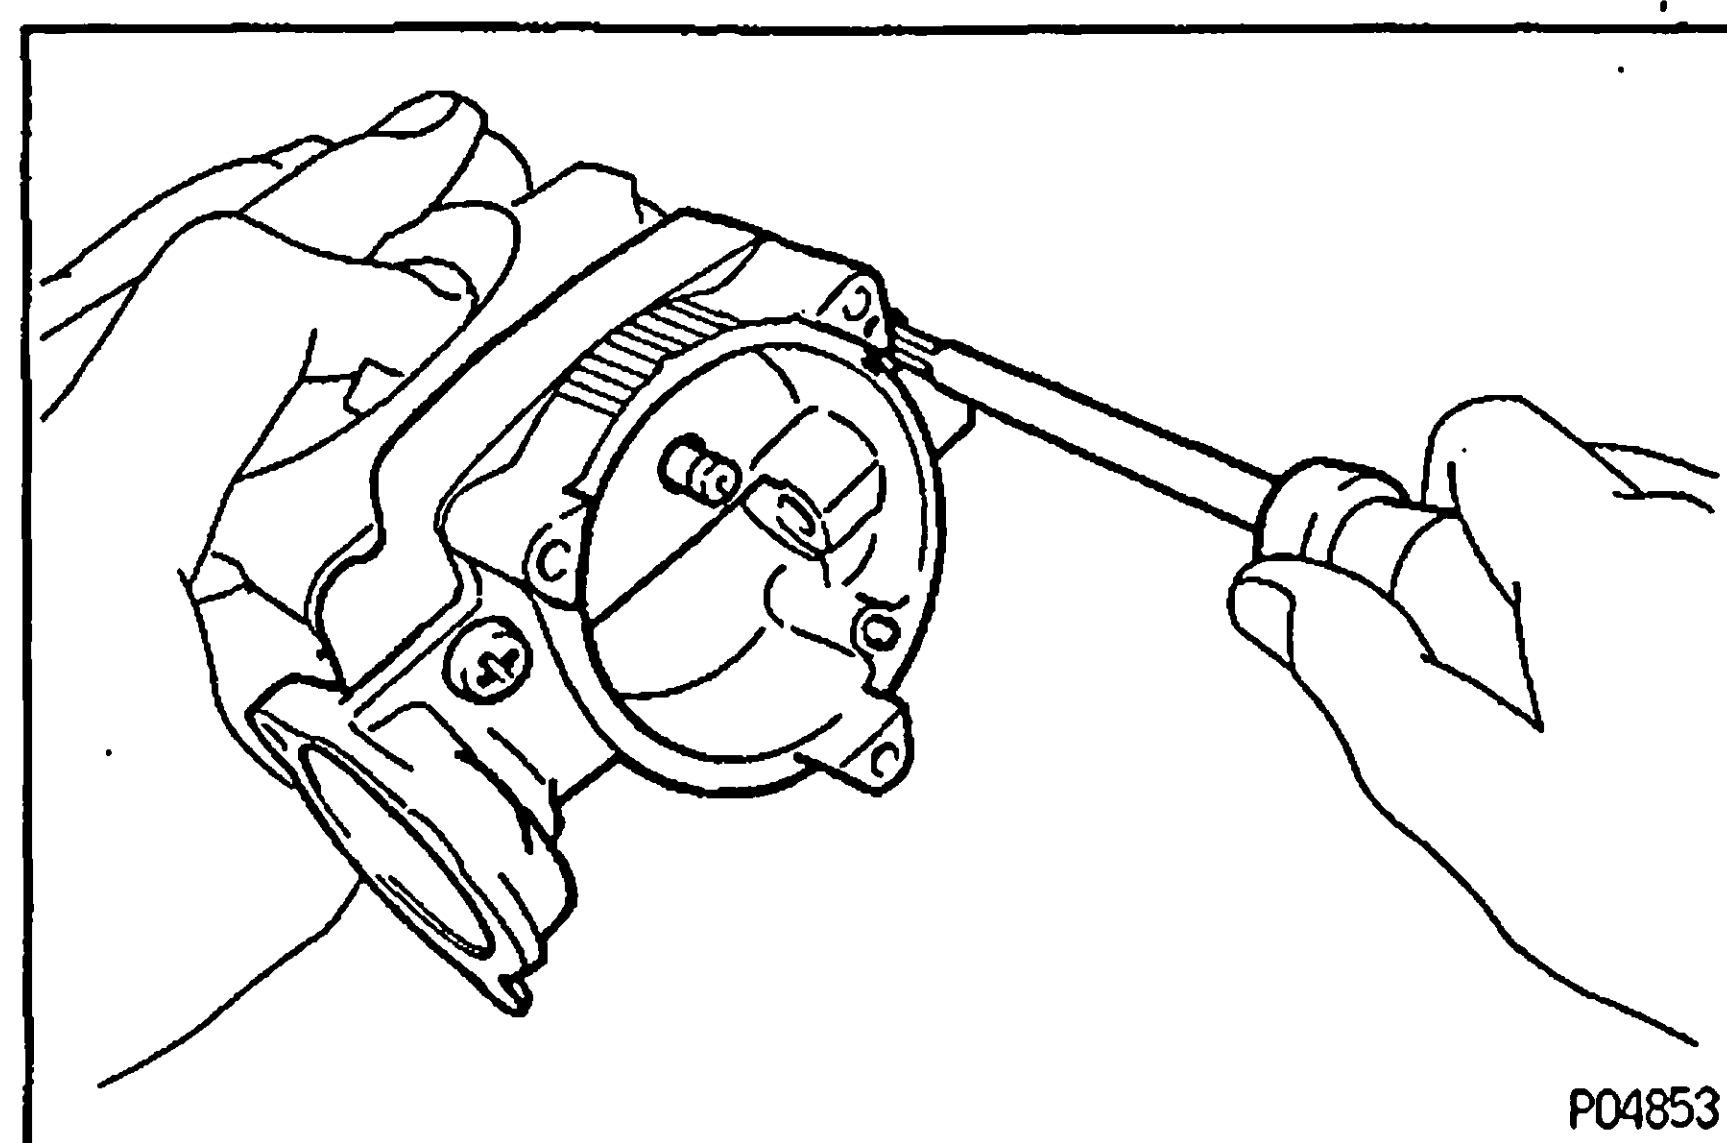

- (b) Remove the two screws and thermostat housing.

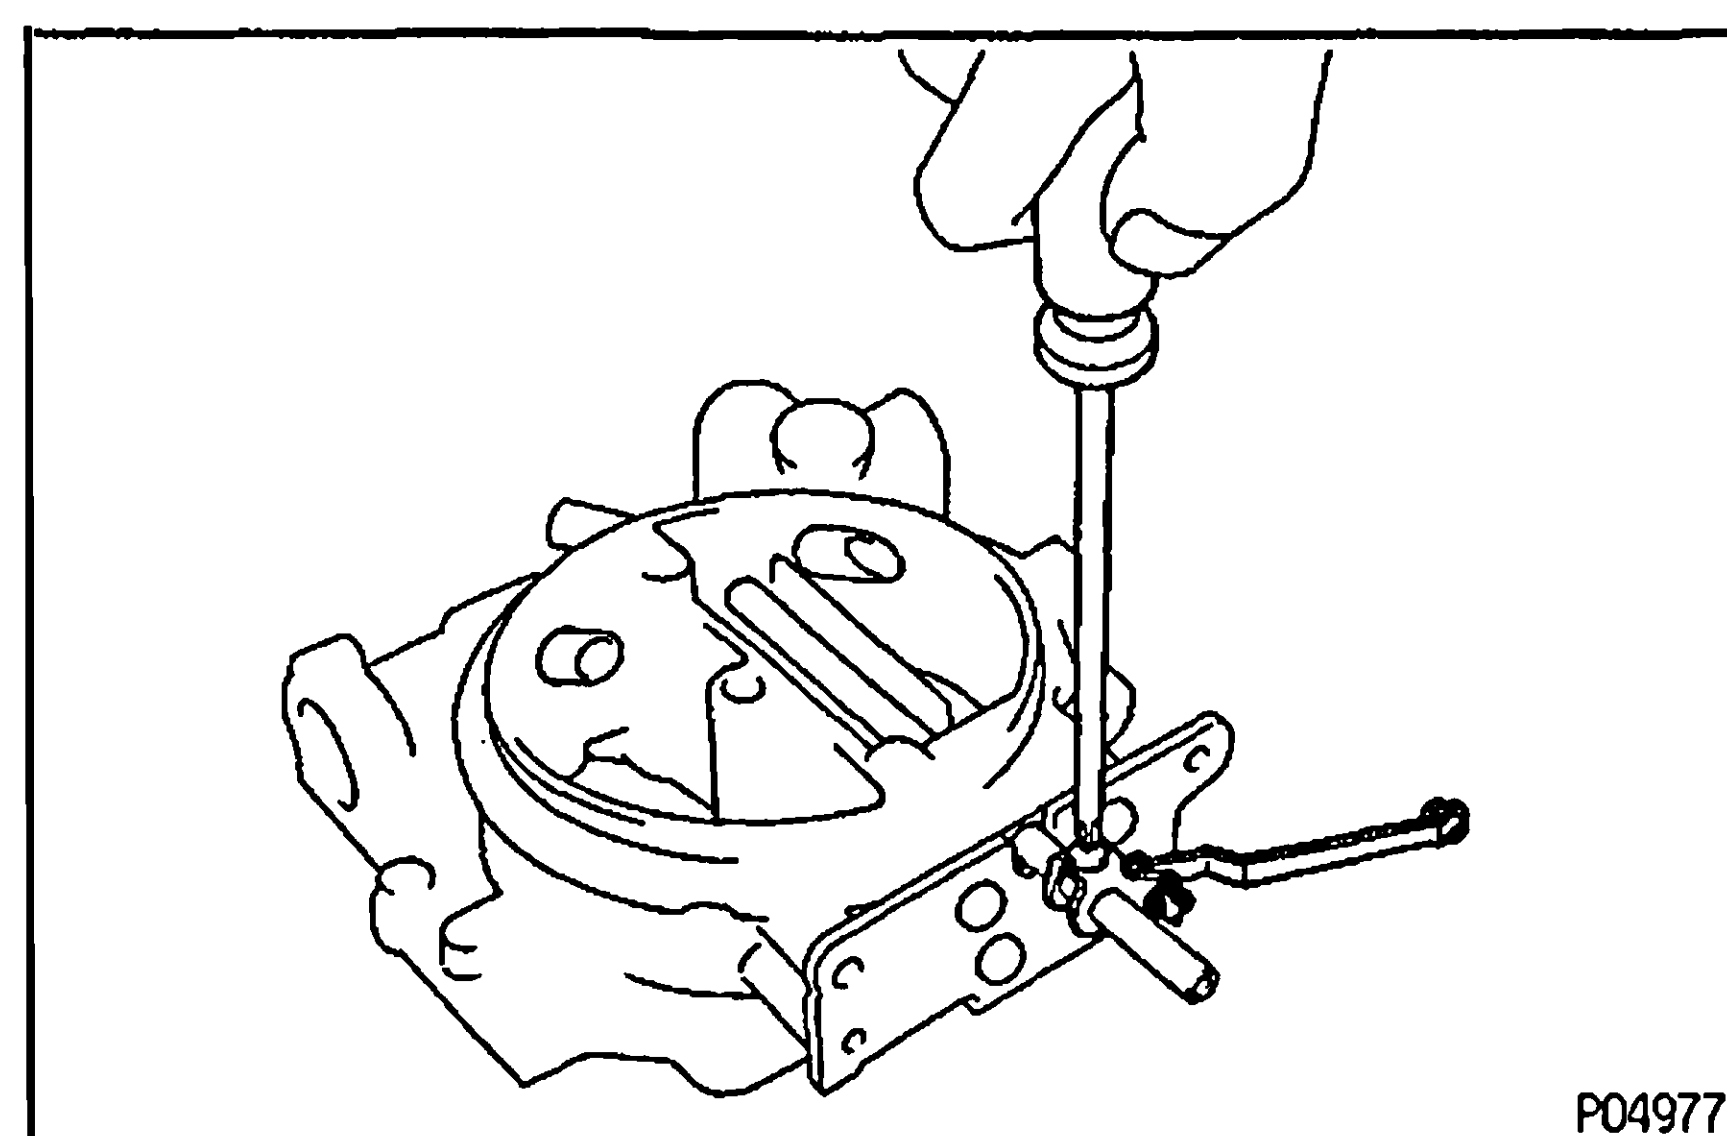

17. REMOVE FAST IDLE CAM BREAKER (FICB) LINK




Remove the screw and FICB link.

Carburetor Body Disassembly

(See page EG-141)


1. REMOVE CHECK BALLS FOR ACCELERATION PUMP

- (a) Remove the pump discharge weight, spring and large ball.
- (b) Remove the plunger spring.
- (c) Using tweezers, remove the ball retainer.
- (d) Remove the small ball.

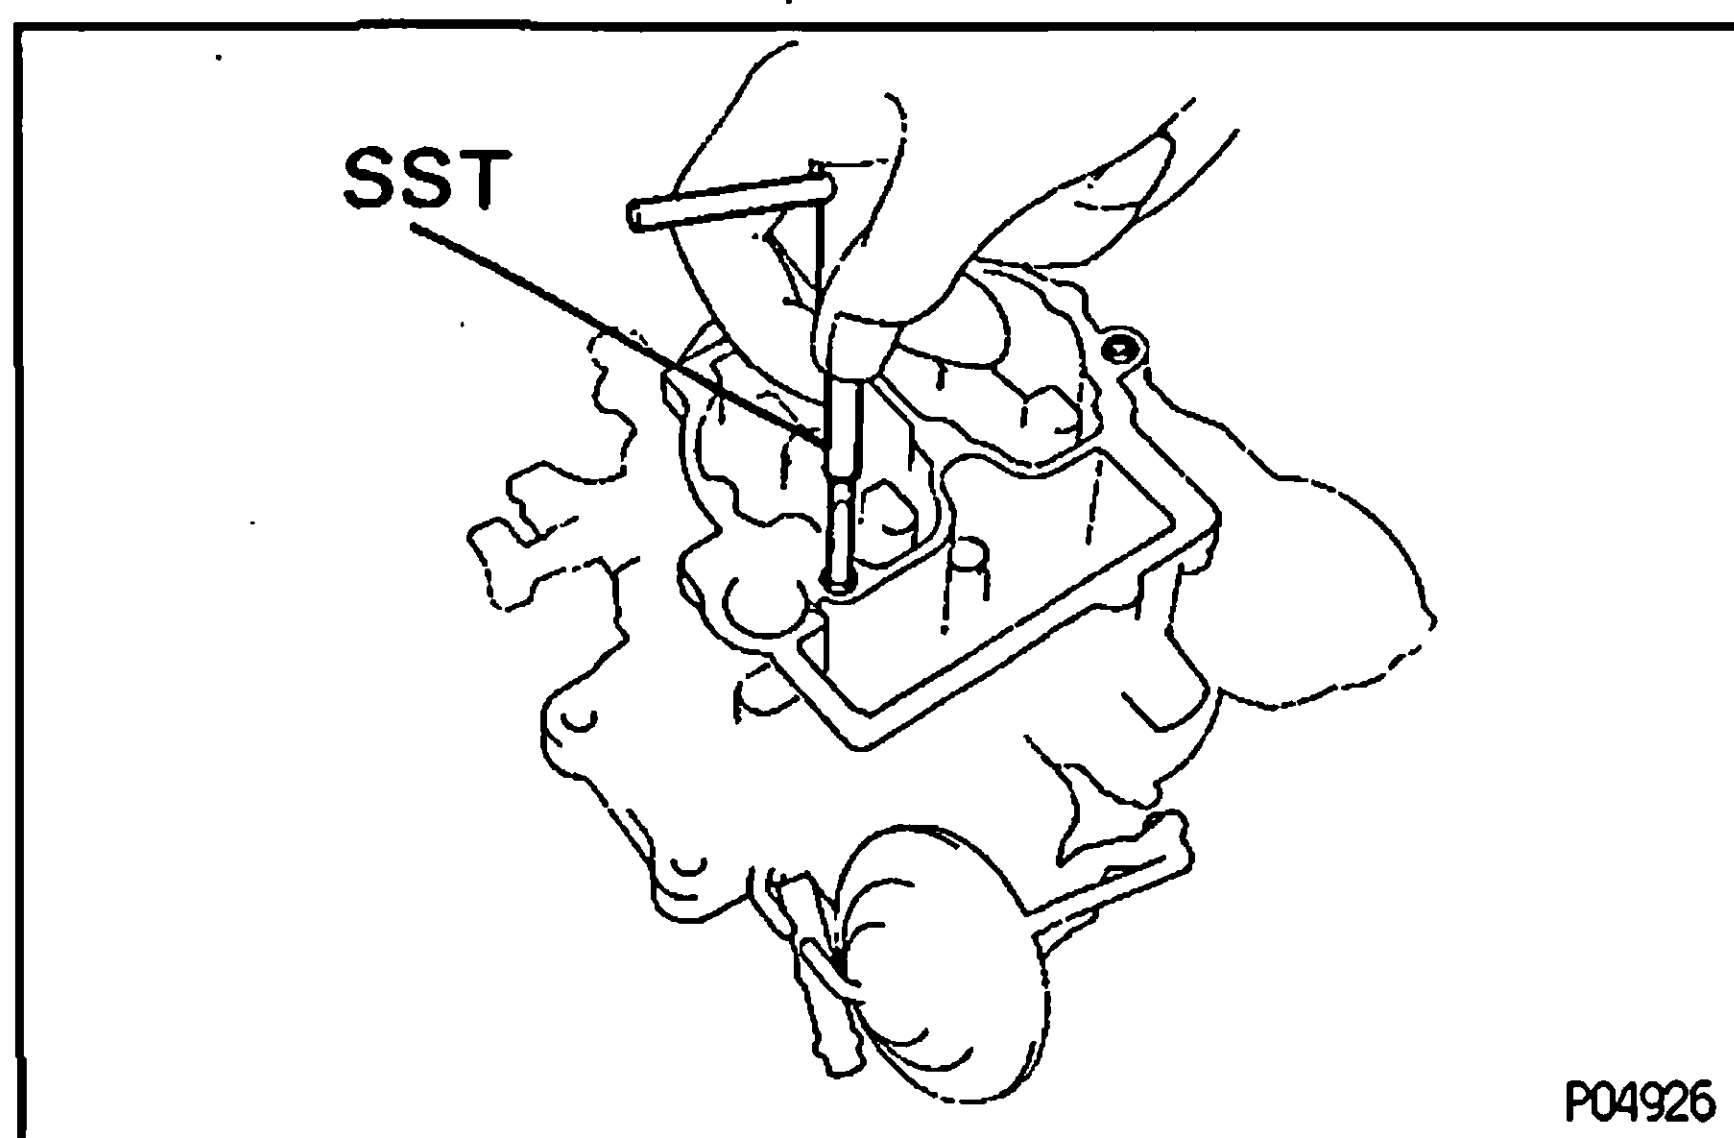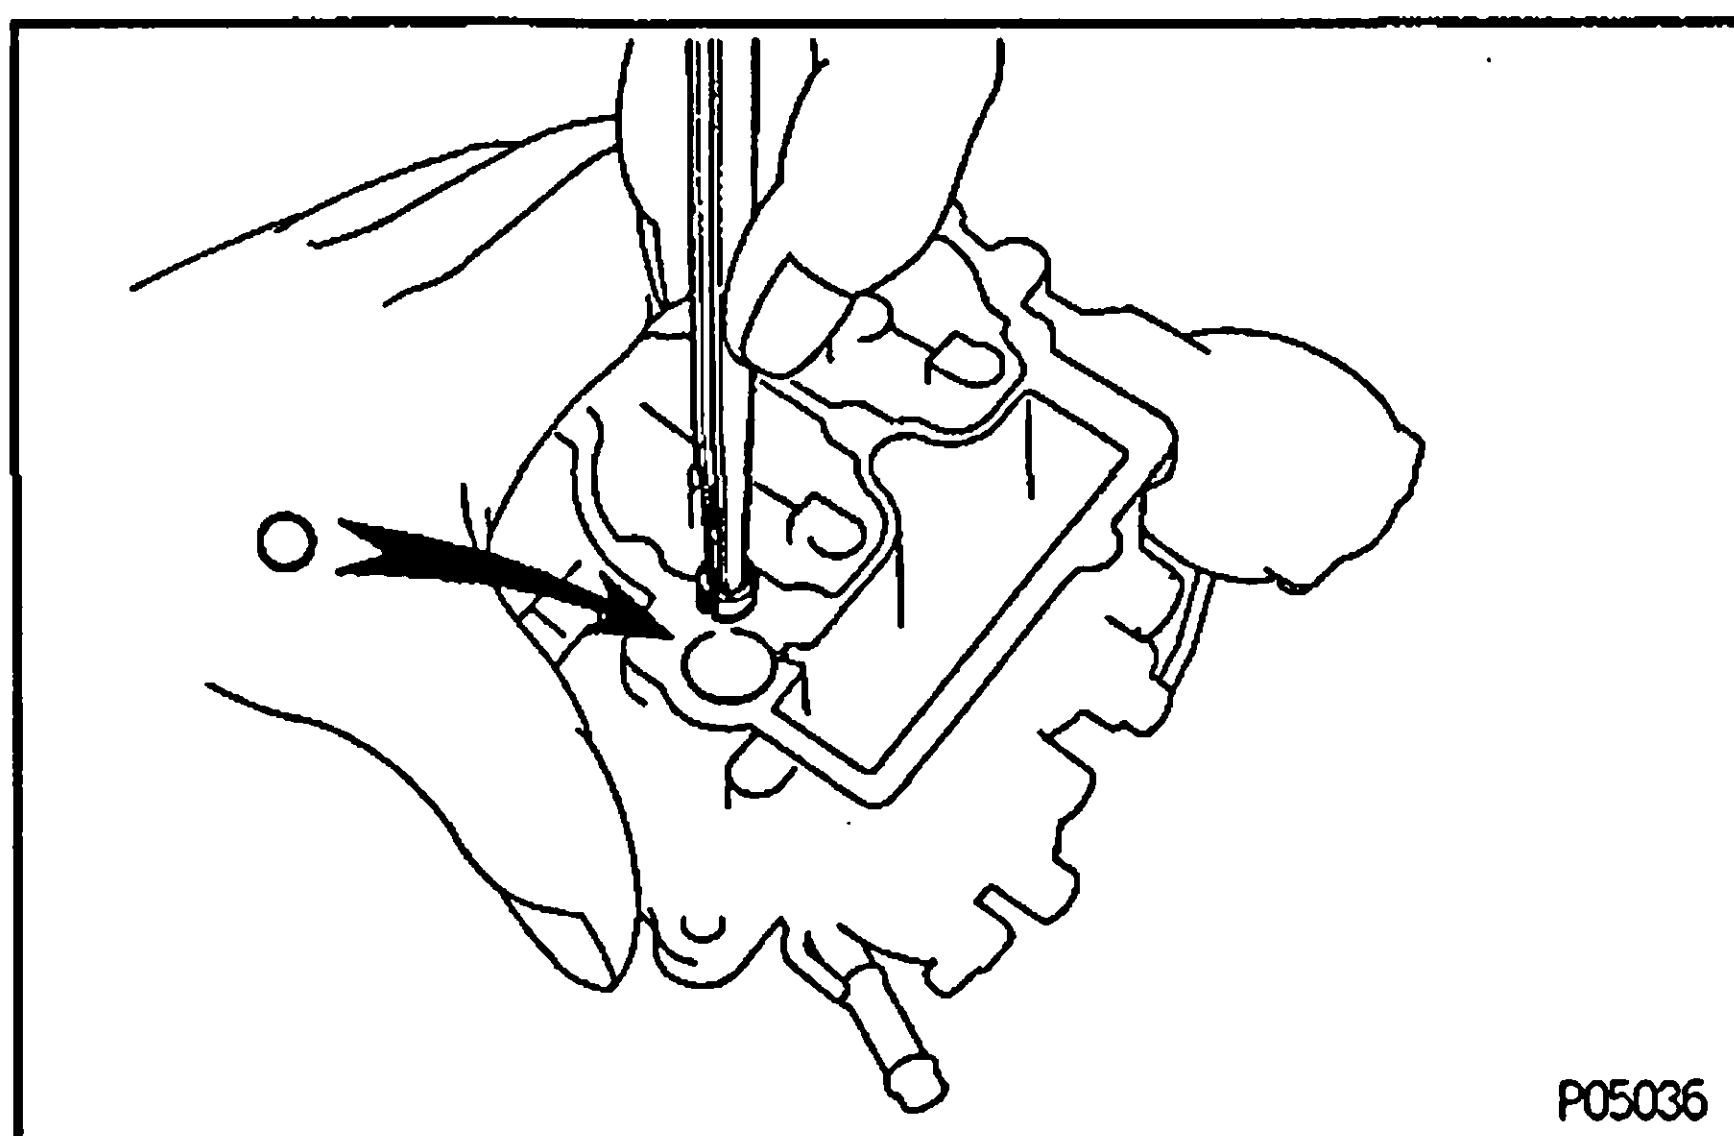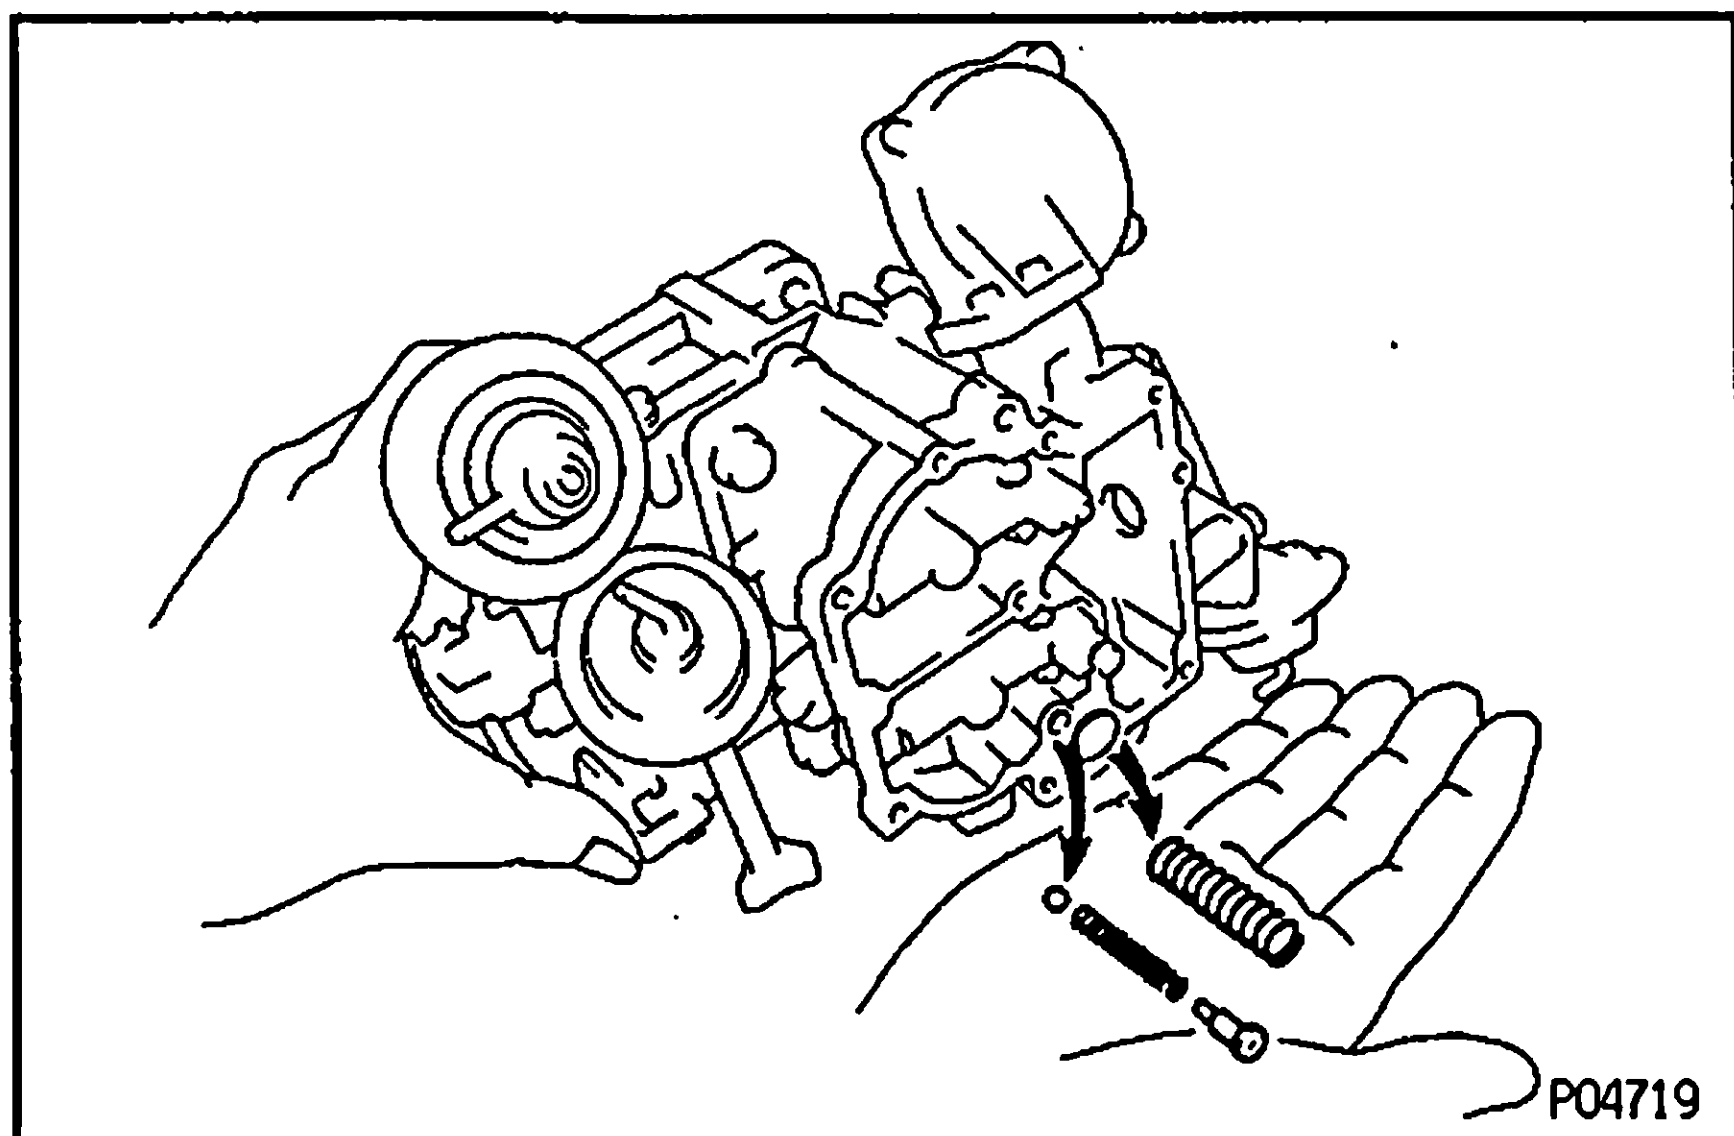


2. REMOVE SLOW JETS

- (a) Remove the primary slow jet.
- (b) Remove the secondary slow jet.

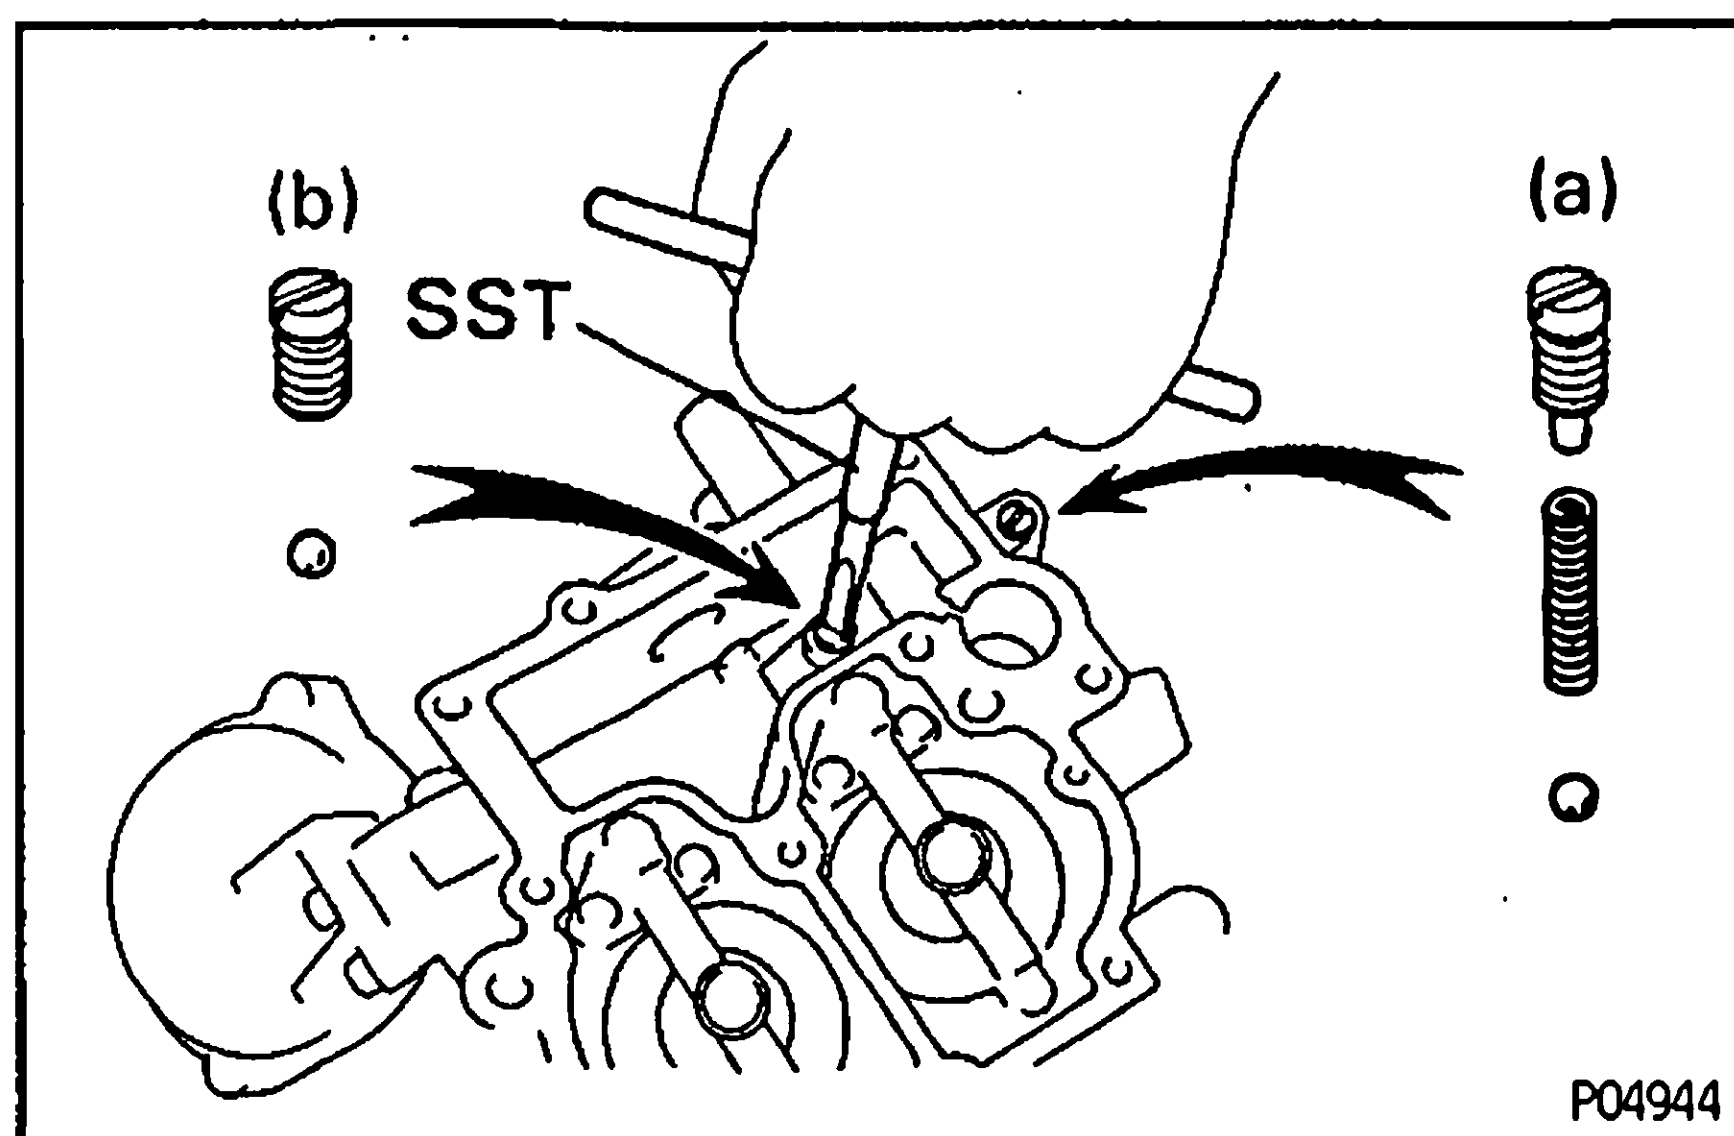


3. REMOVE CHECK BALLS FOR AUXILIARY ACCELERATION PUMP (AAP)


- (a) Remove the plug, spring and ball.
- (b) Remove the plug and ball.

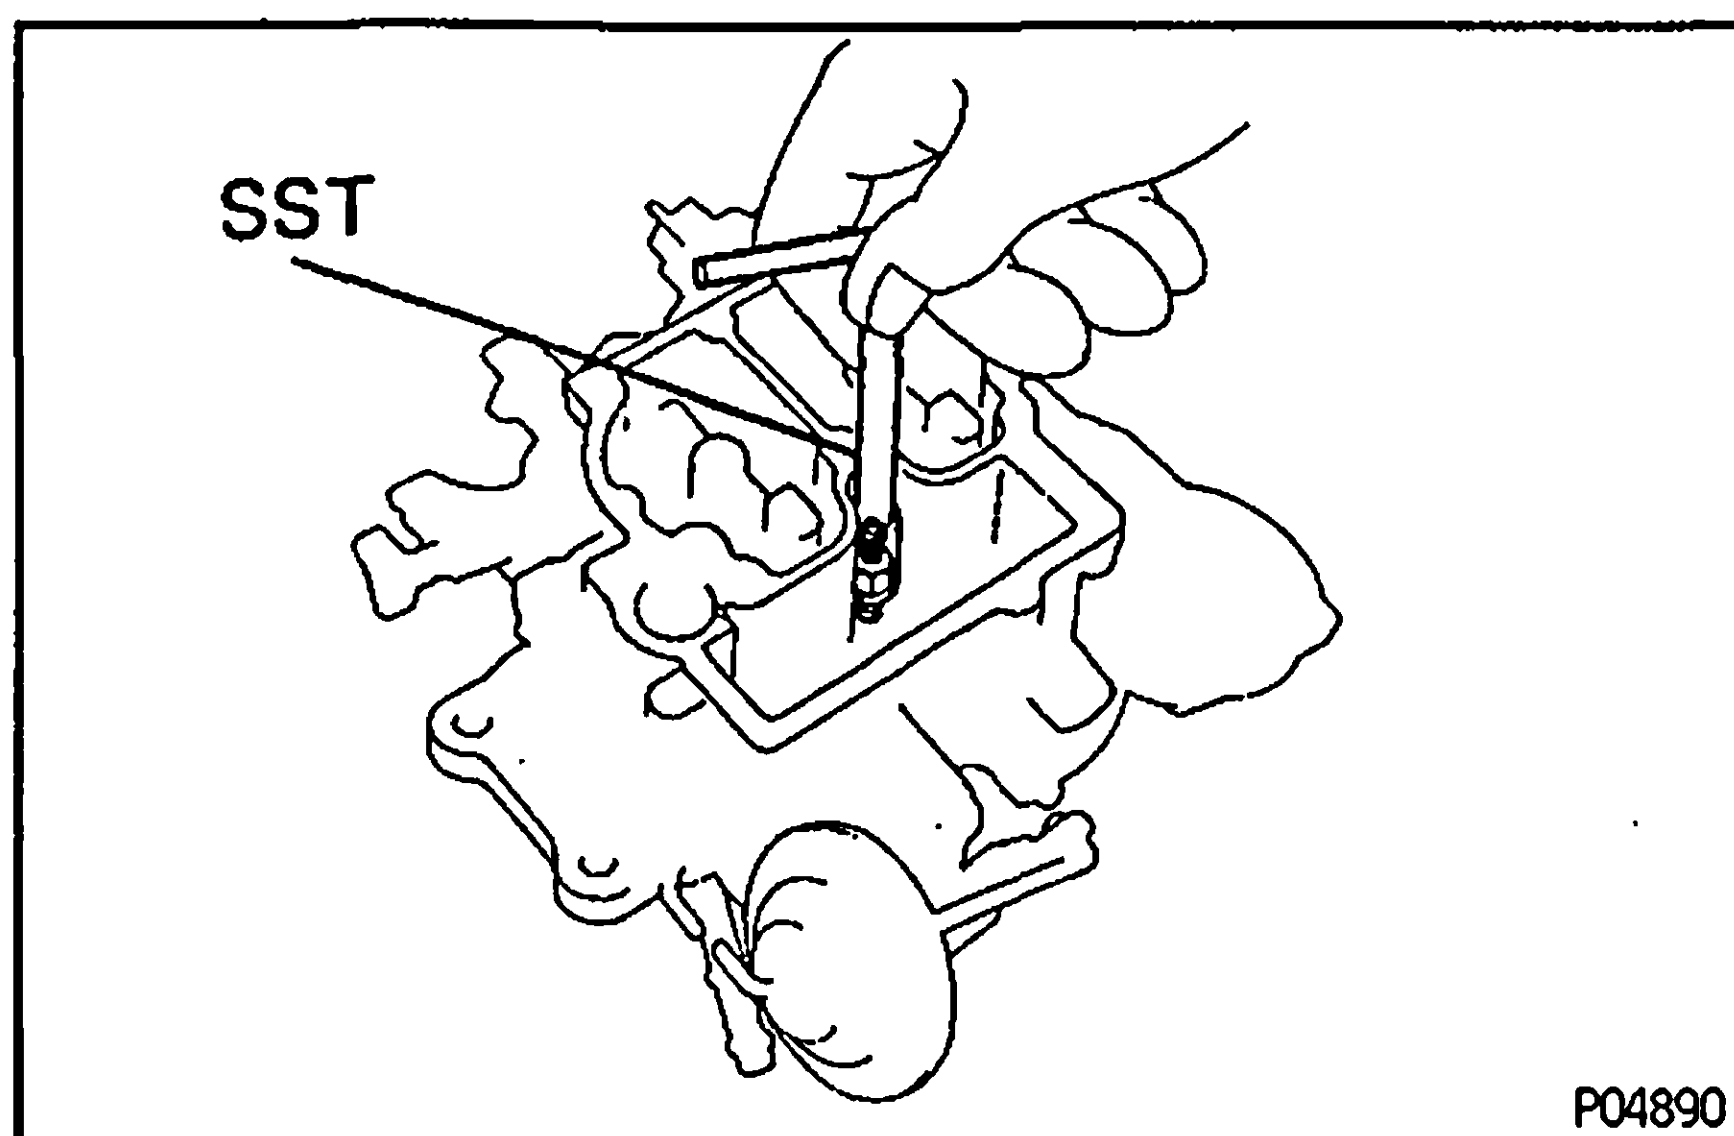


4. REMOVE POWER VALVE

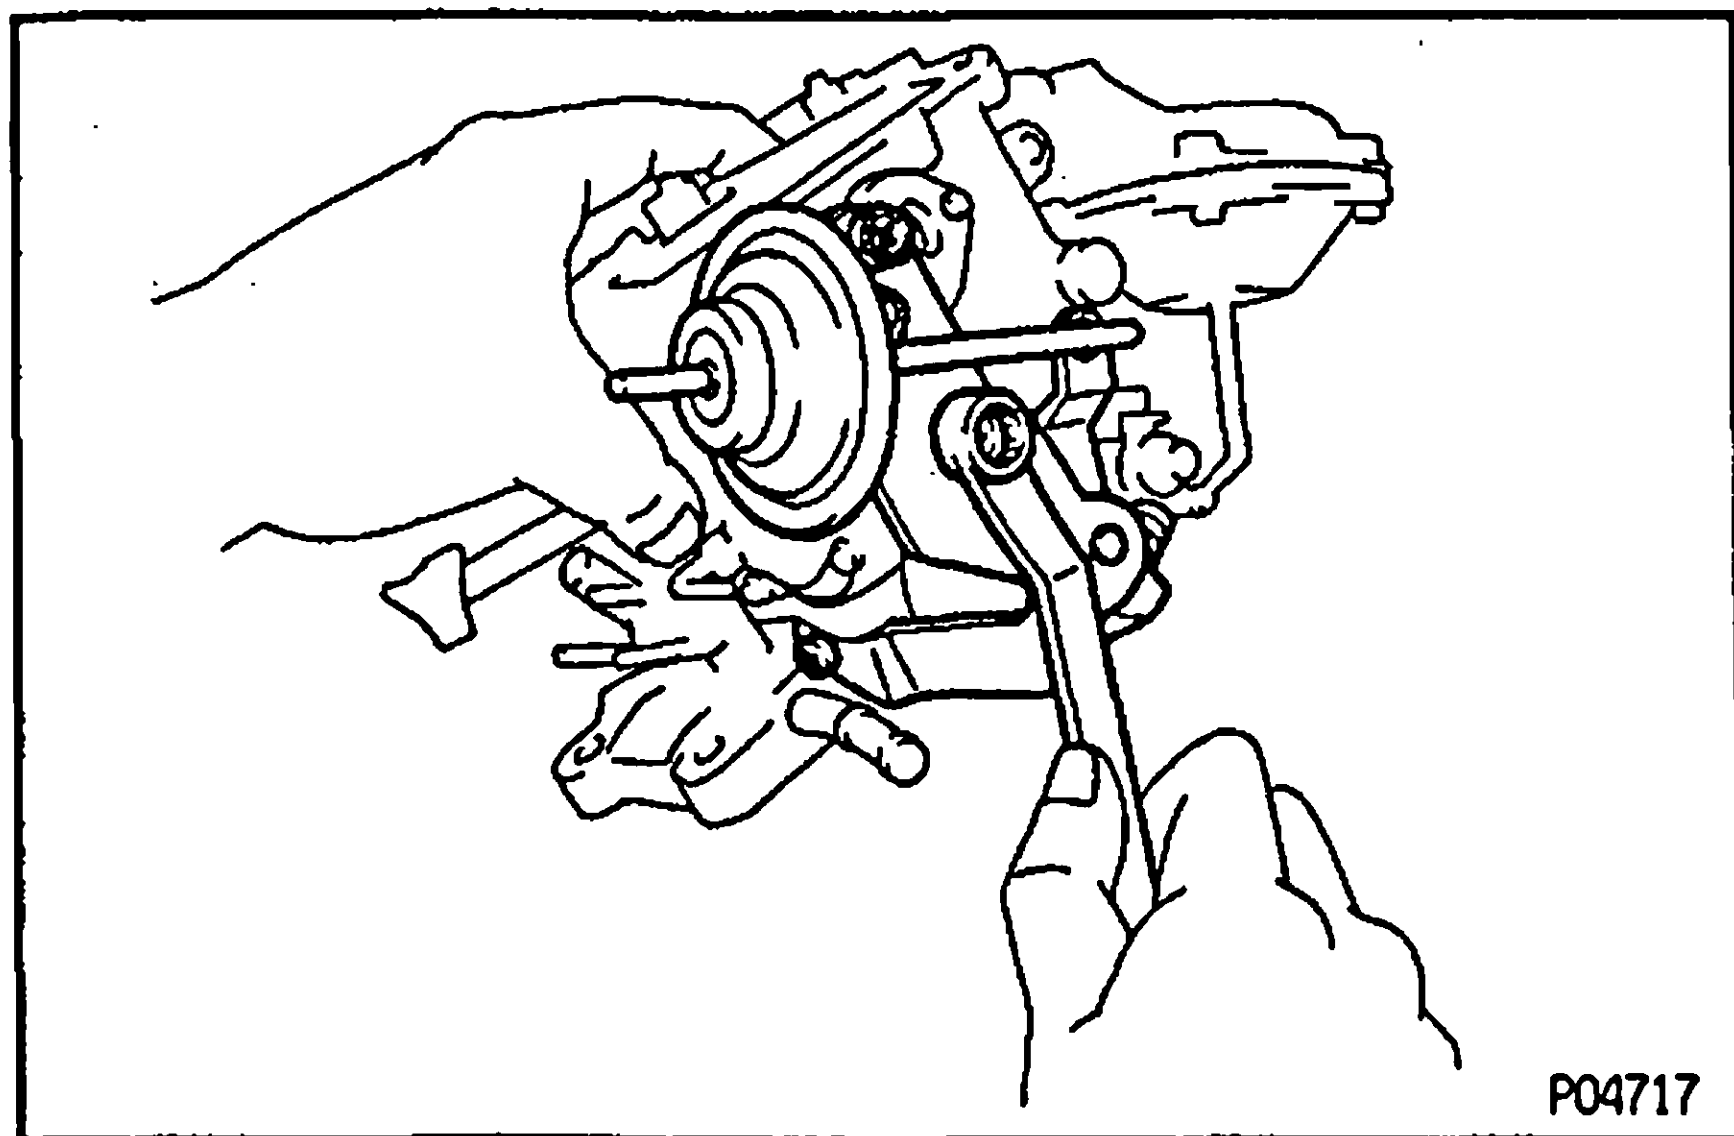**5. REMOVE DASH POT (DP)**


Remove the three screws and DP.

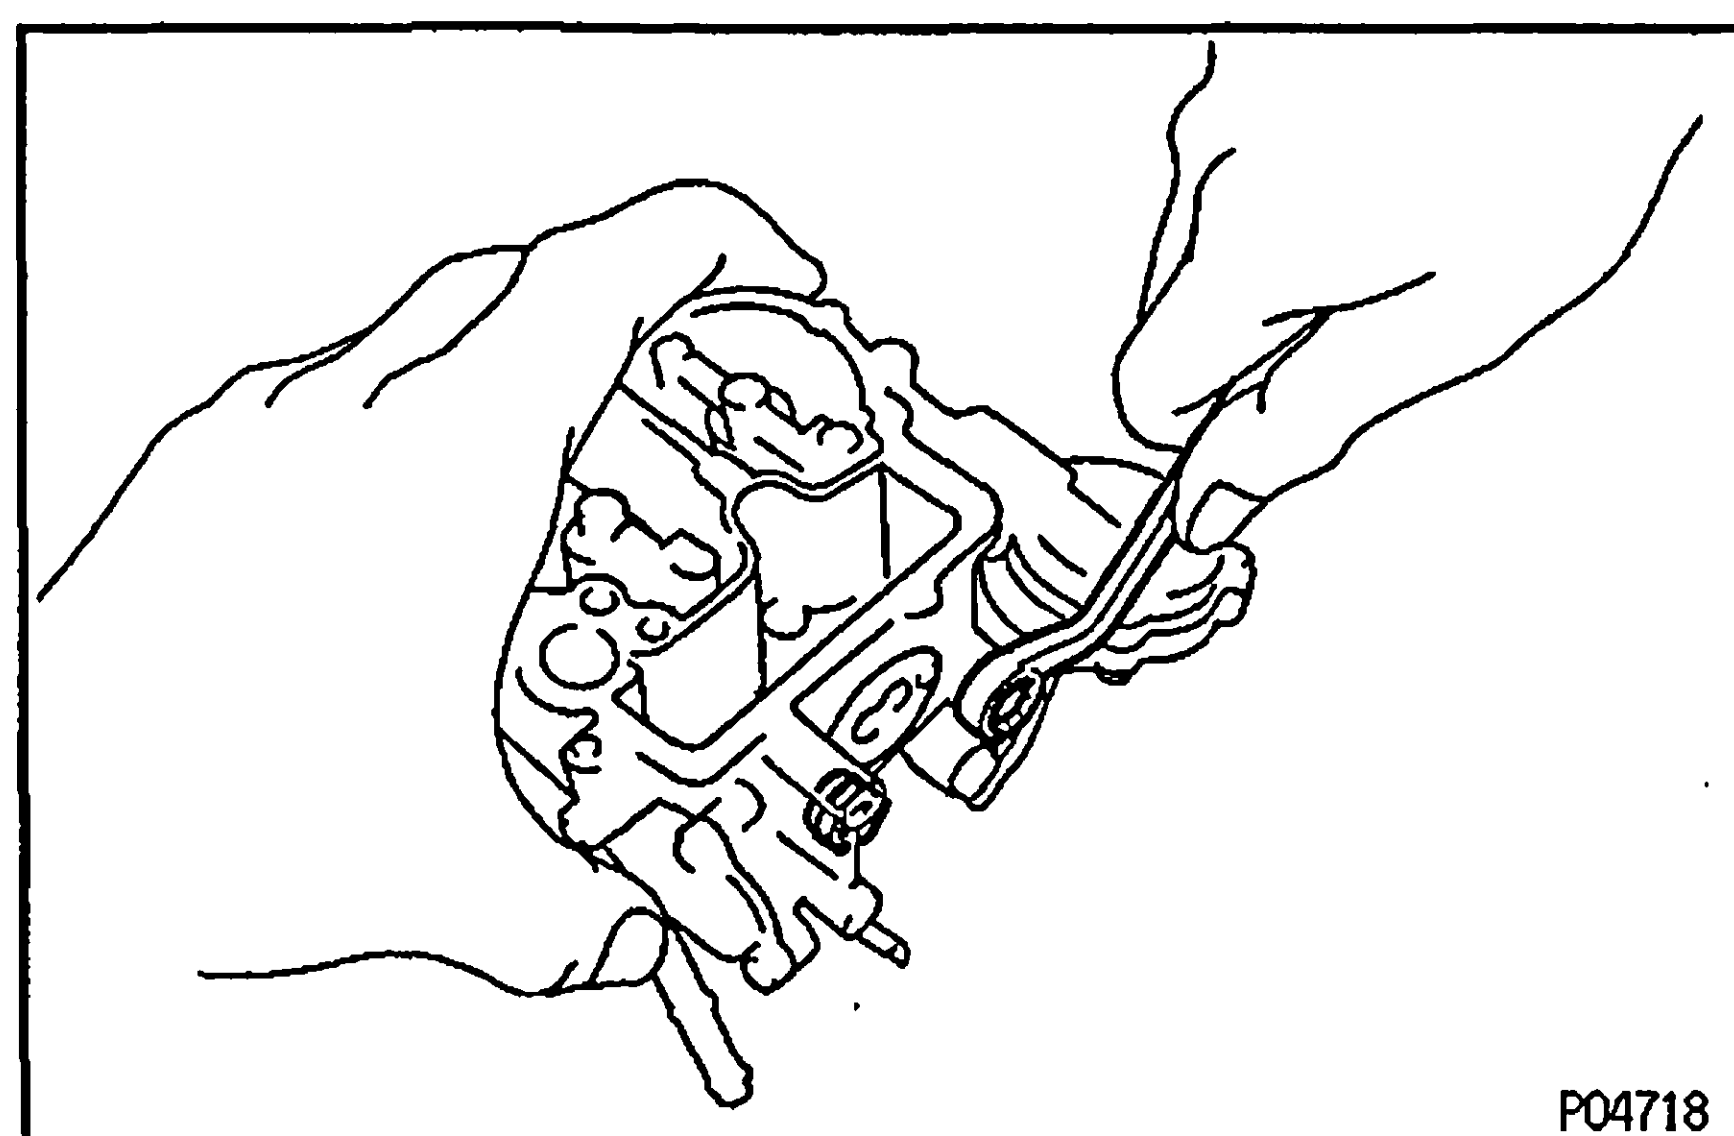**6. REMOVE PRIMARY AND SECONDARY MAIN JETS**


(a) Remove the two passage plugs and gaskets.

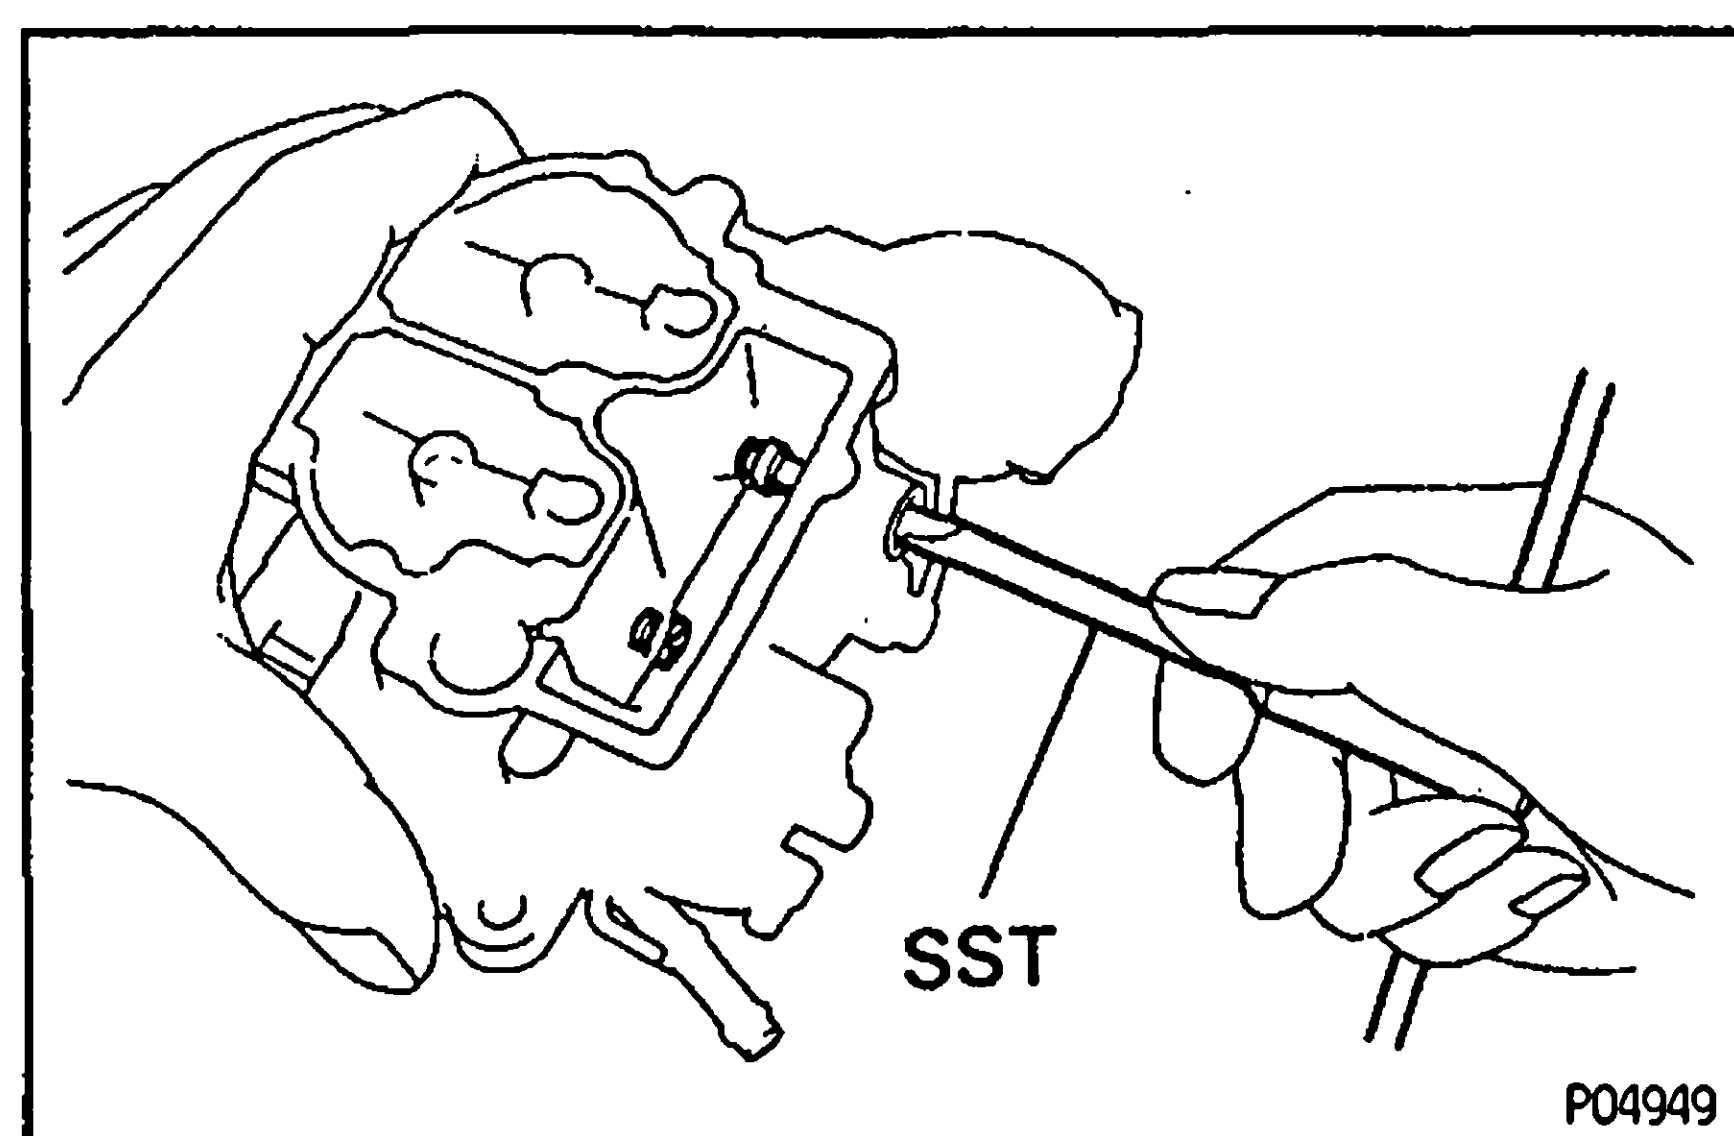

(b) Remove the primary and secondary main jets and gaskets.

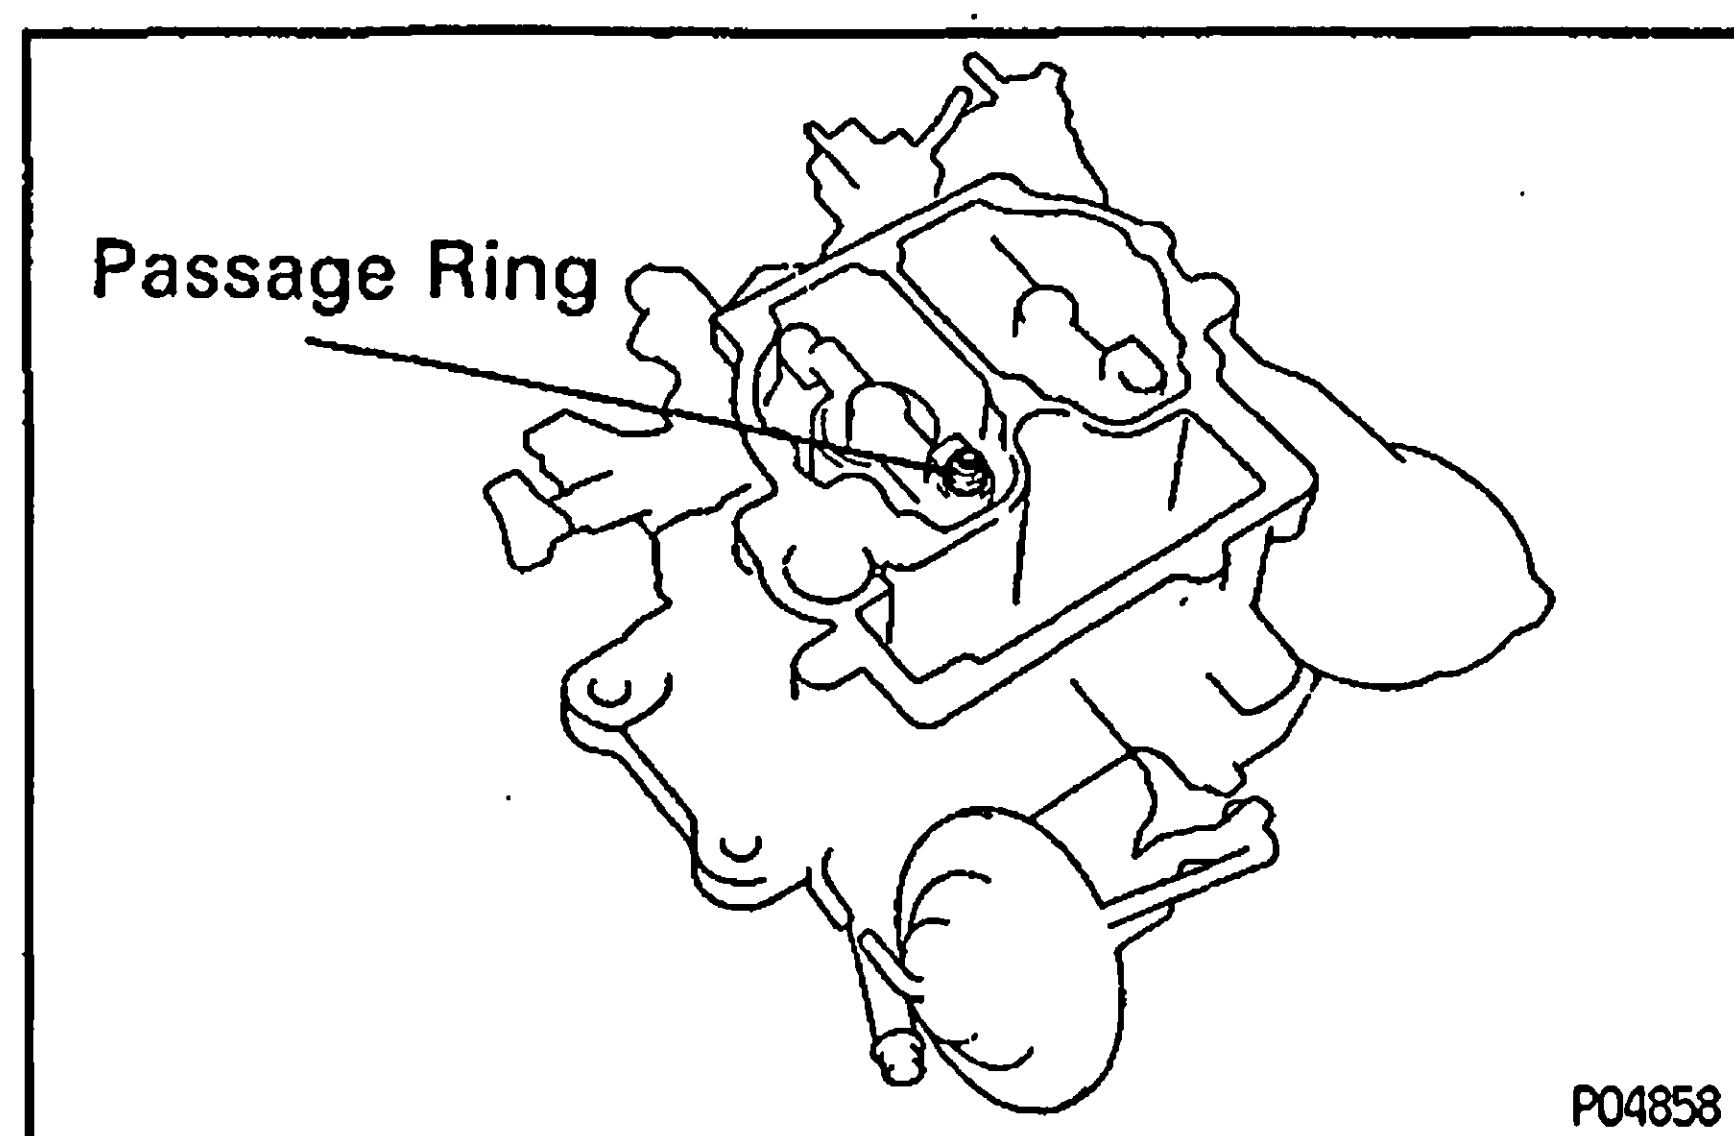**7. REMOVE SMALL VENTURIES**


(a) Remove the passage ring.

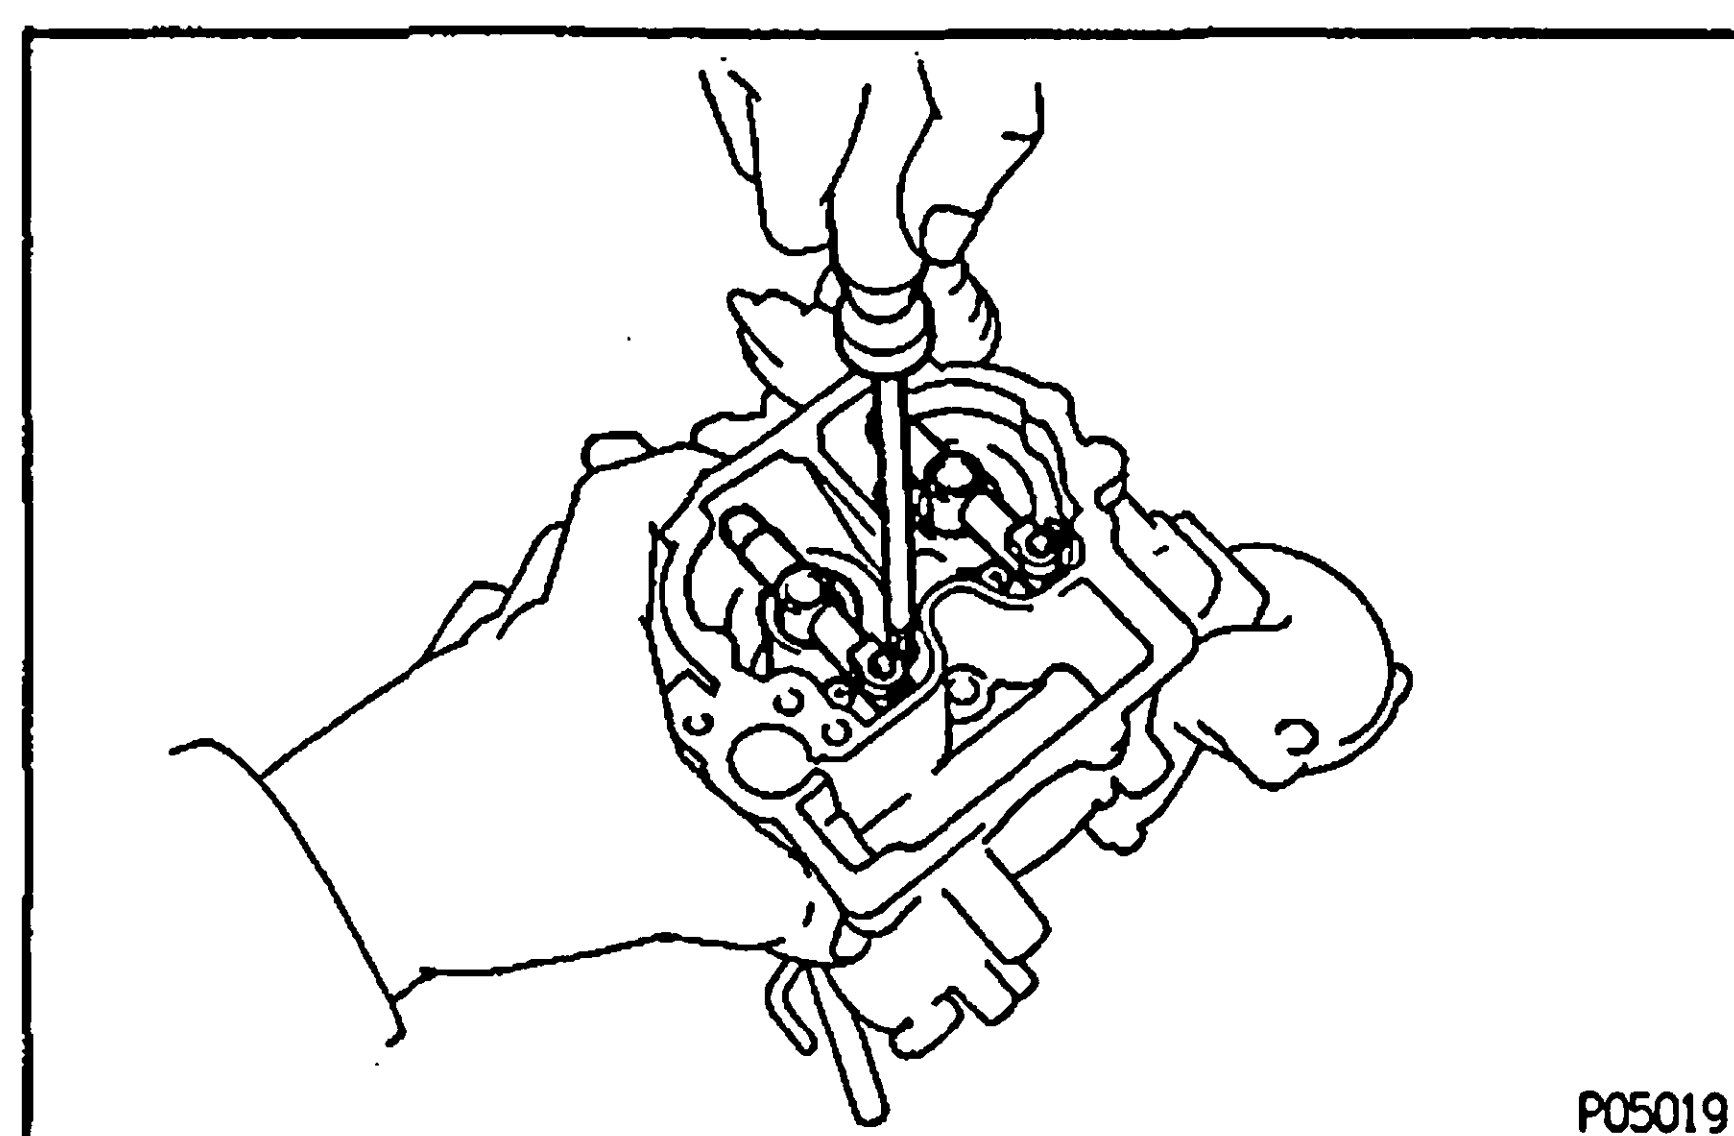


(b) Remove the two screws, primary small venturi and gasket.

(c) Remove the two screws, secondary small venturi and gasket.

EG

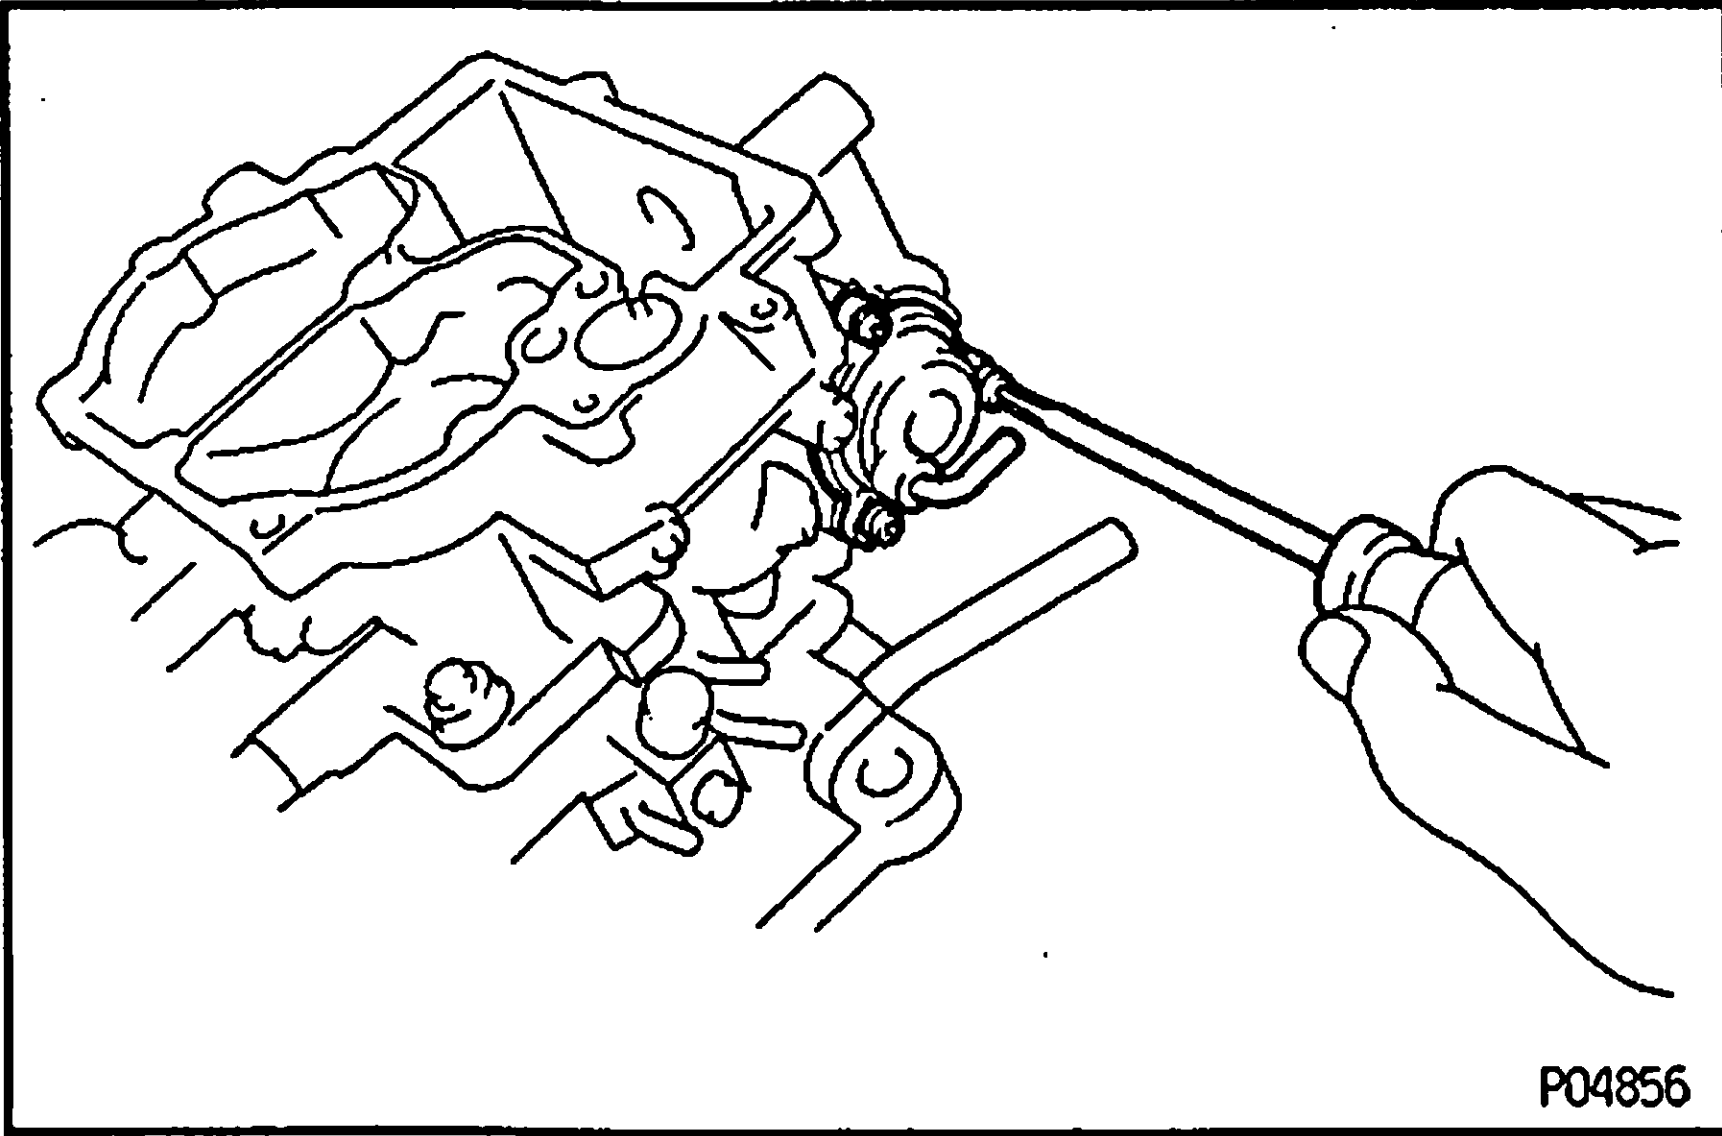


- 8. REMOVE AUXILIARY ACCELERATION PUMP (AAP)**
Remove the three screws, pump housing, spring and diaphragm.

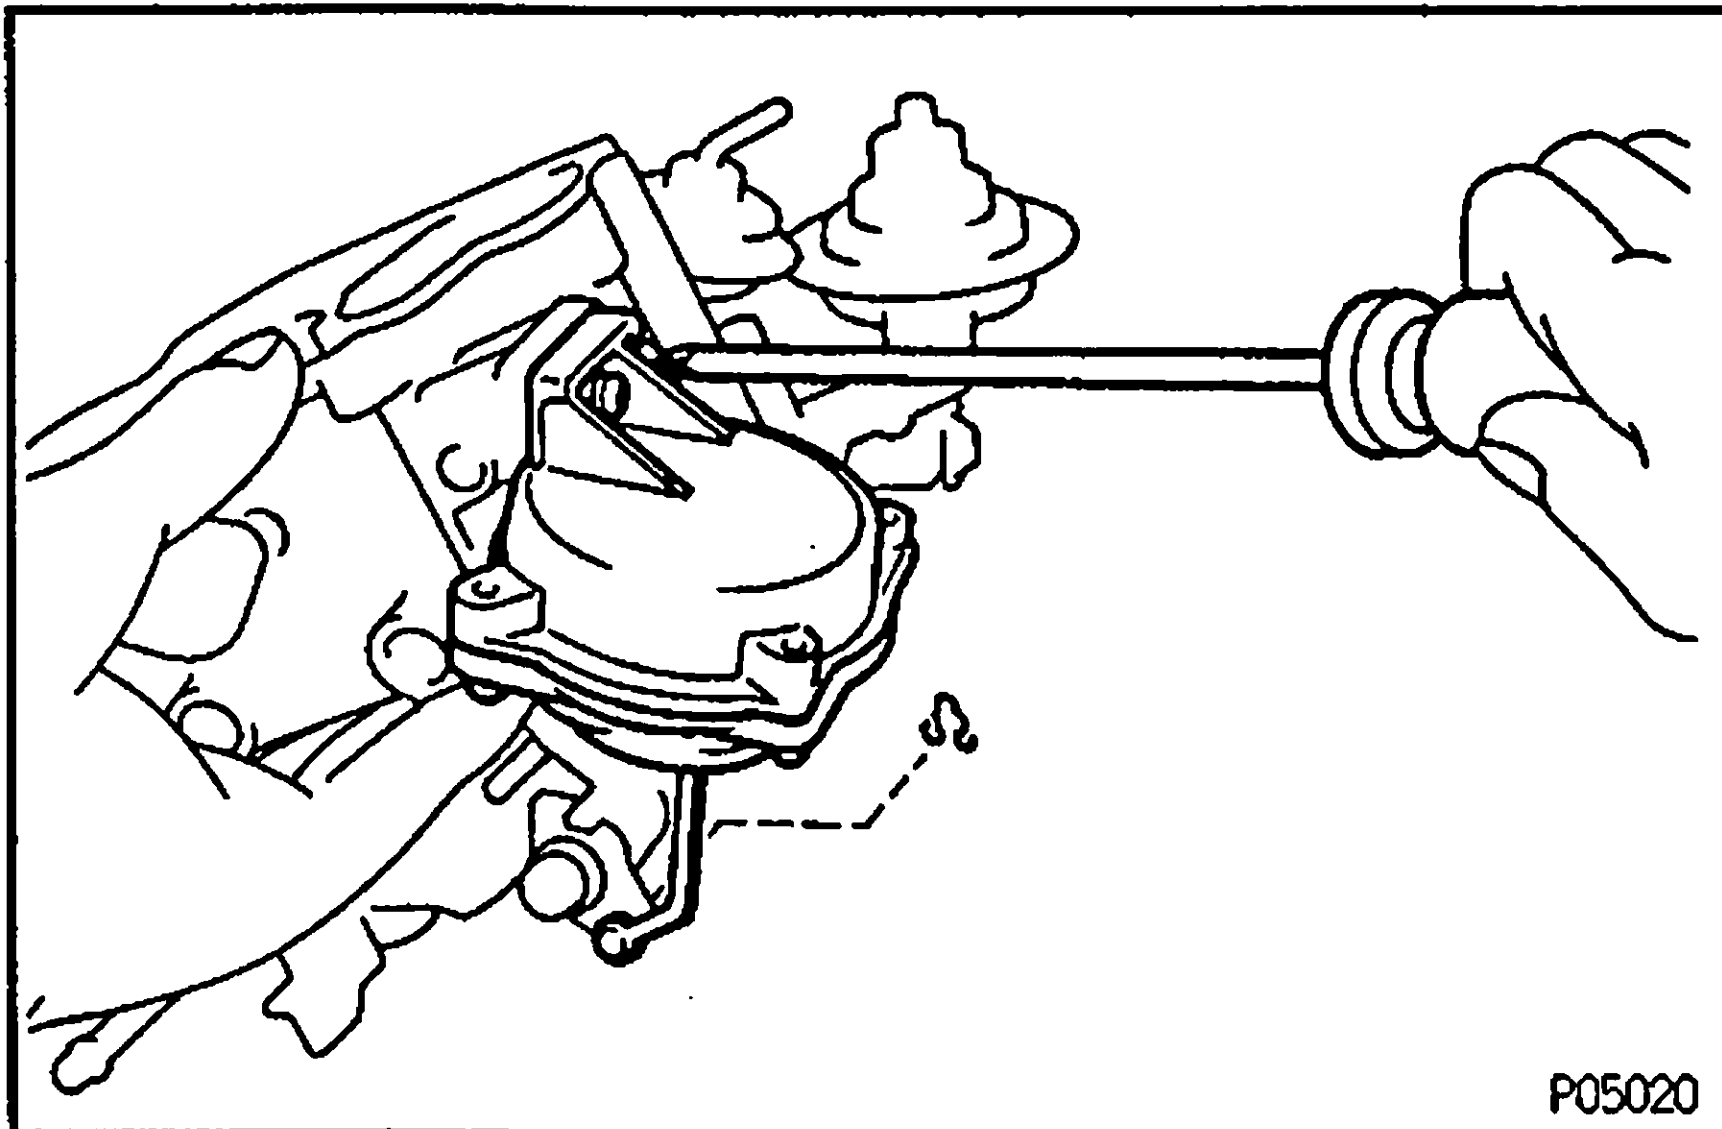


9. REMOVE SECONDARY THROTTLE VALVE DIAPHRAGM

- (a) Remove the snap ring and disconnect the diaphragm link.
- (b) Remove the two screws, throttle valve diaphragm assembly and gasket.

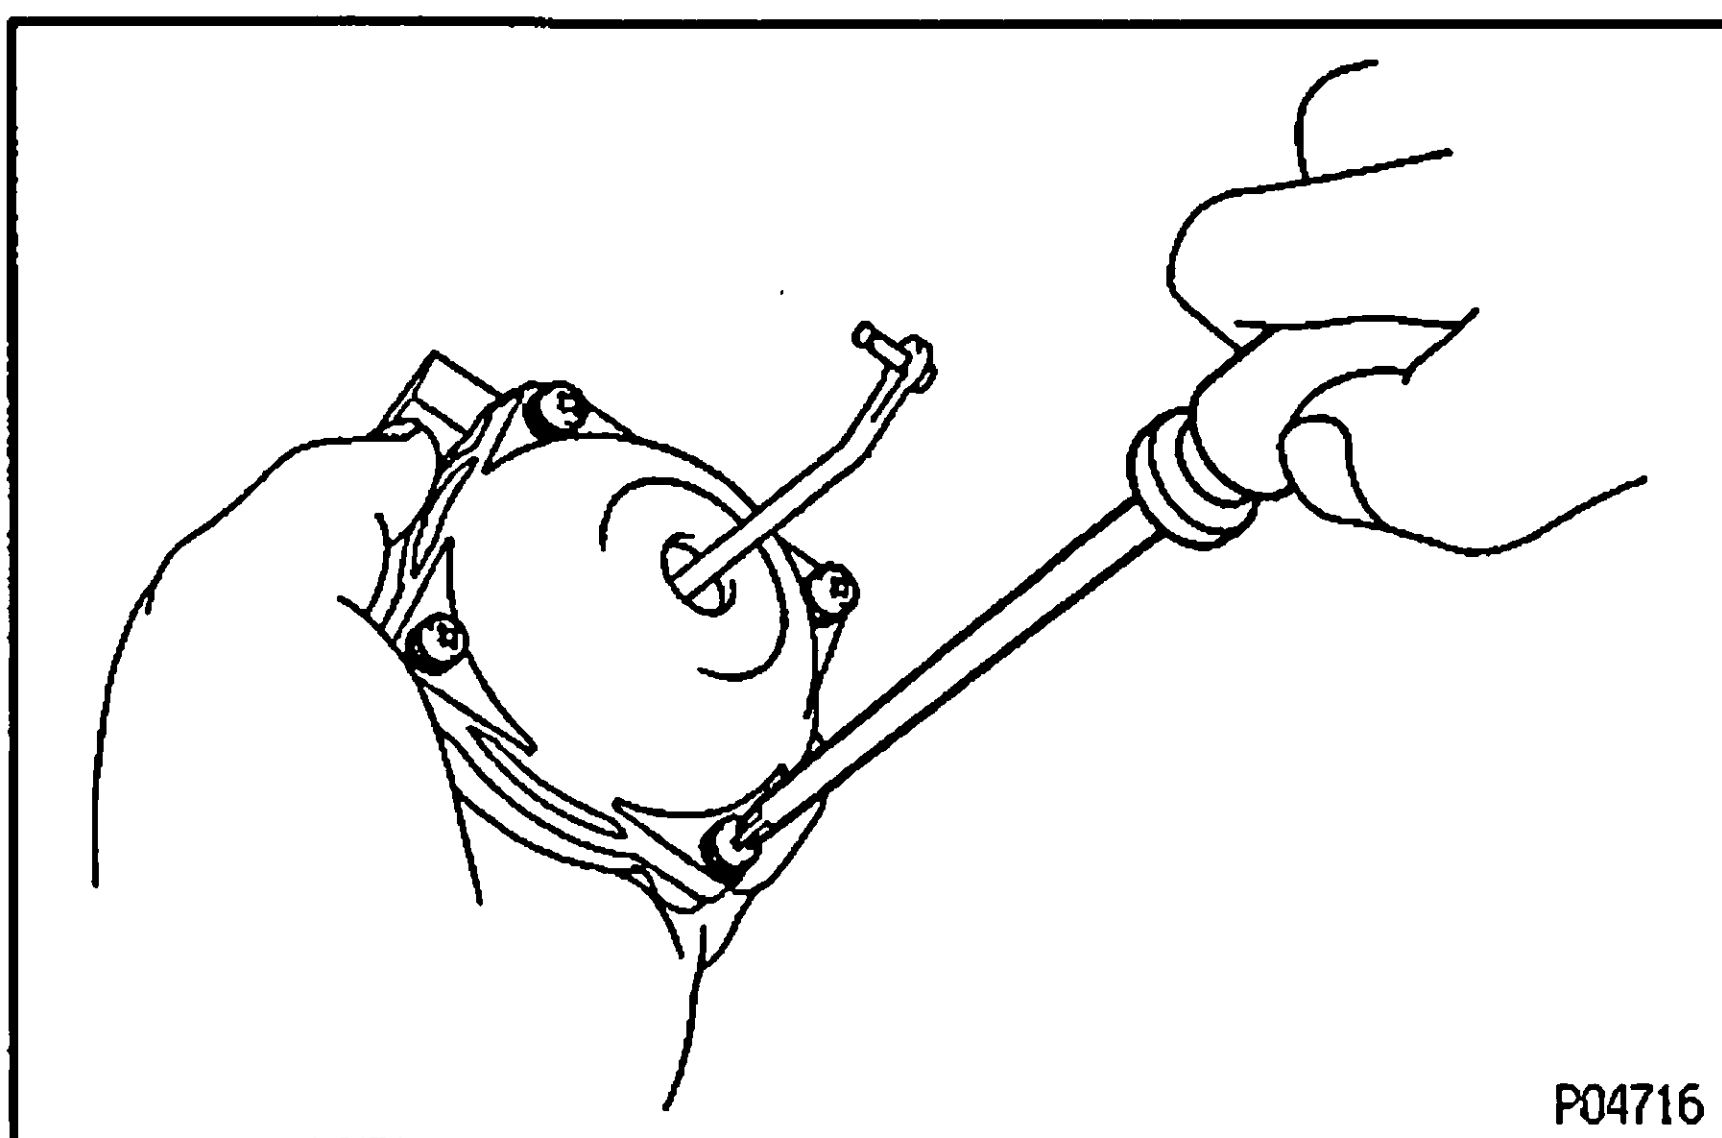


- (c) If necessary, remove the four screws and disassembly the throttle valve diaphragm.

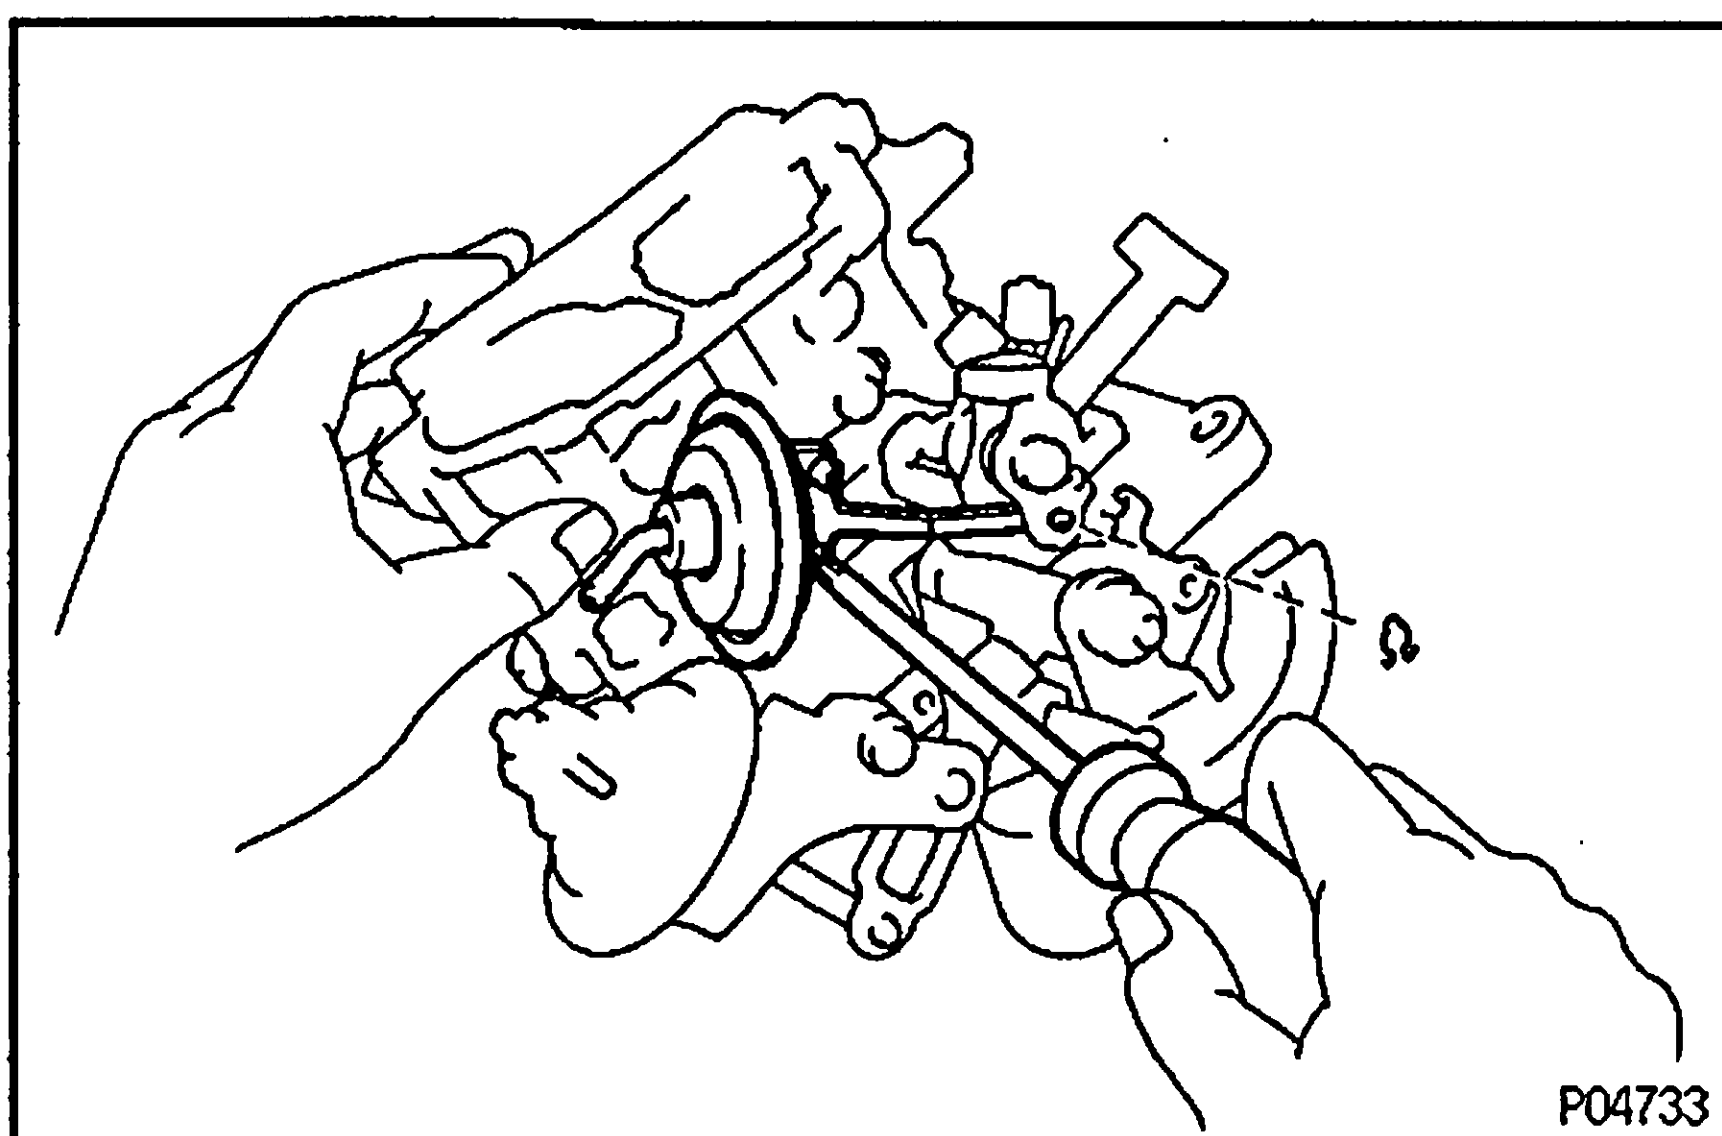


10. REMOVE FAST IDLE CAM BREAKER (FICB)


- (a) Remove the snap ring.
- (b) Remove the two screws.
- (c) Disconnect the link, and remove the FICB.

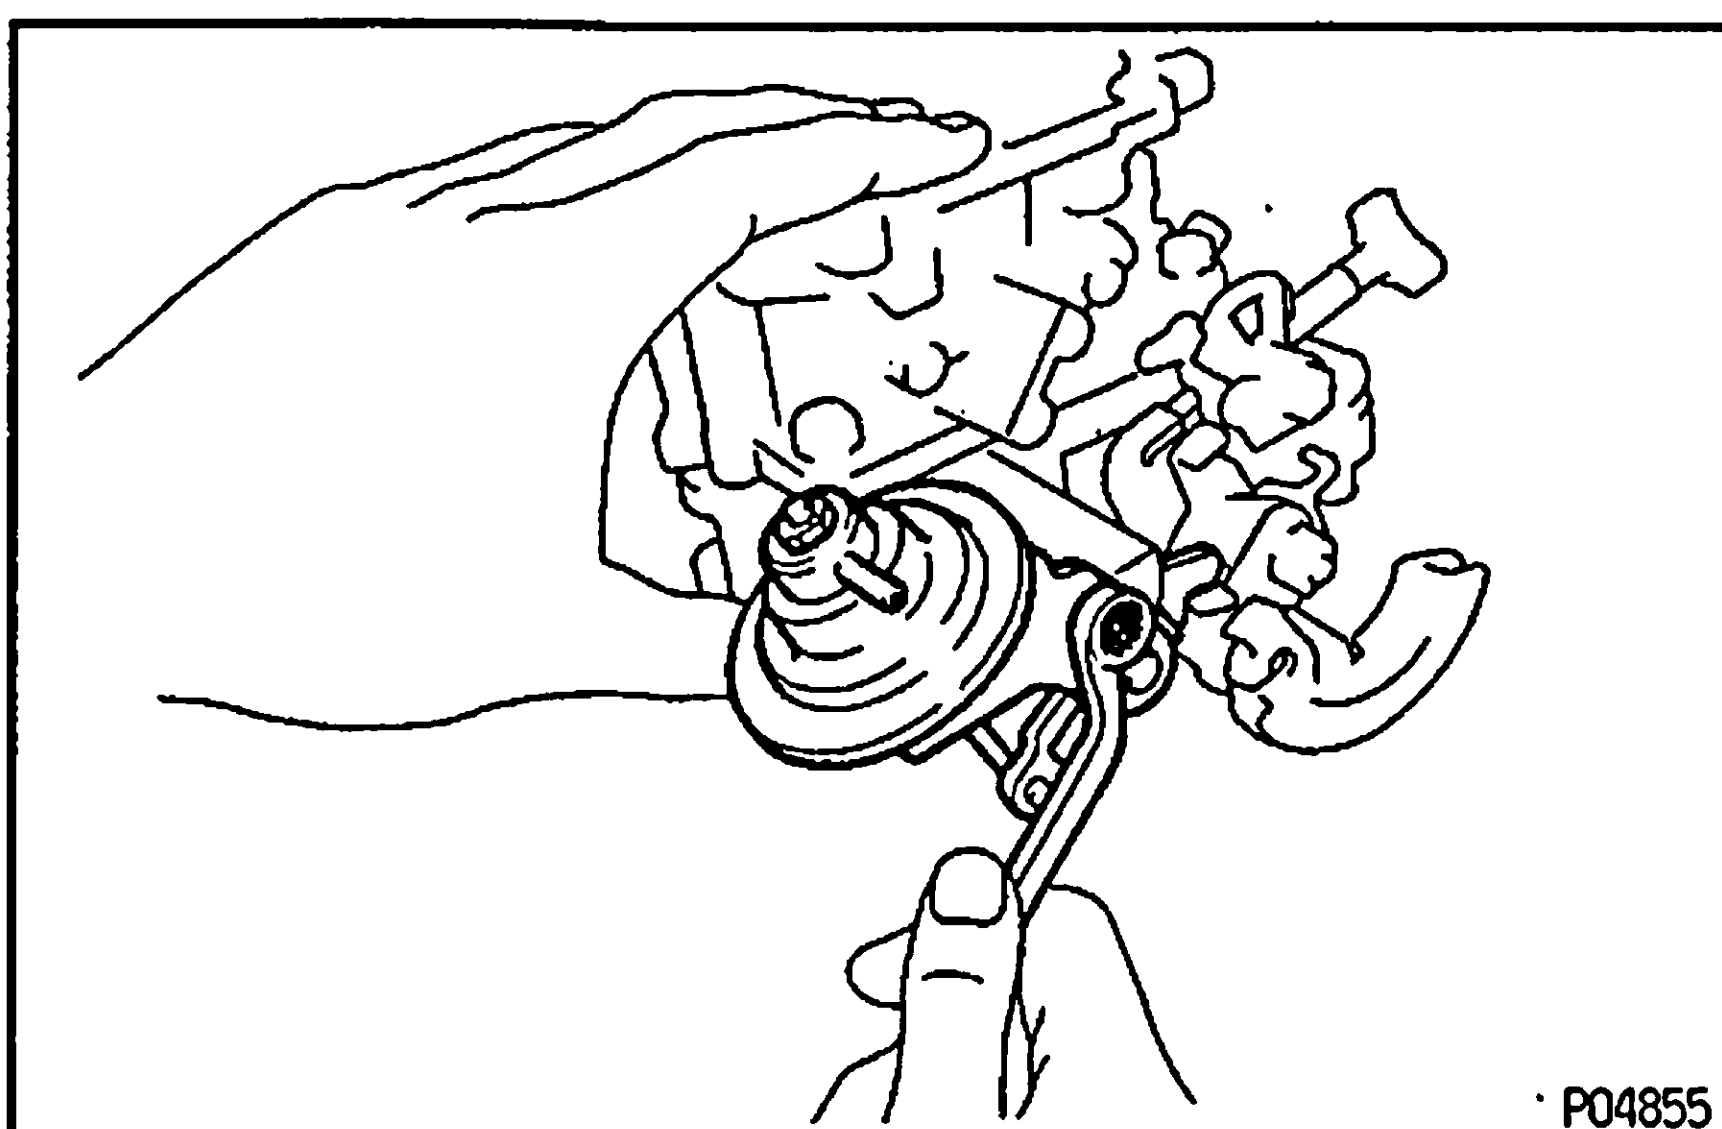


- 11. REMOVE THROTTLE POSITIONER (TP)**
Remove the two screws and TP.

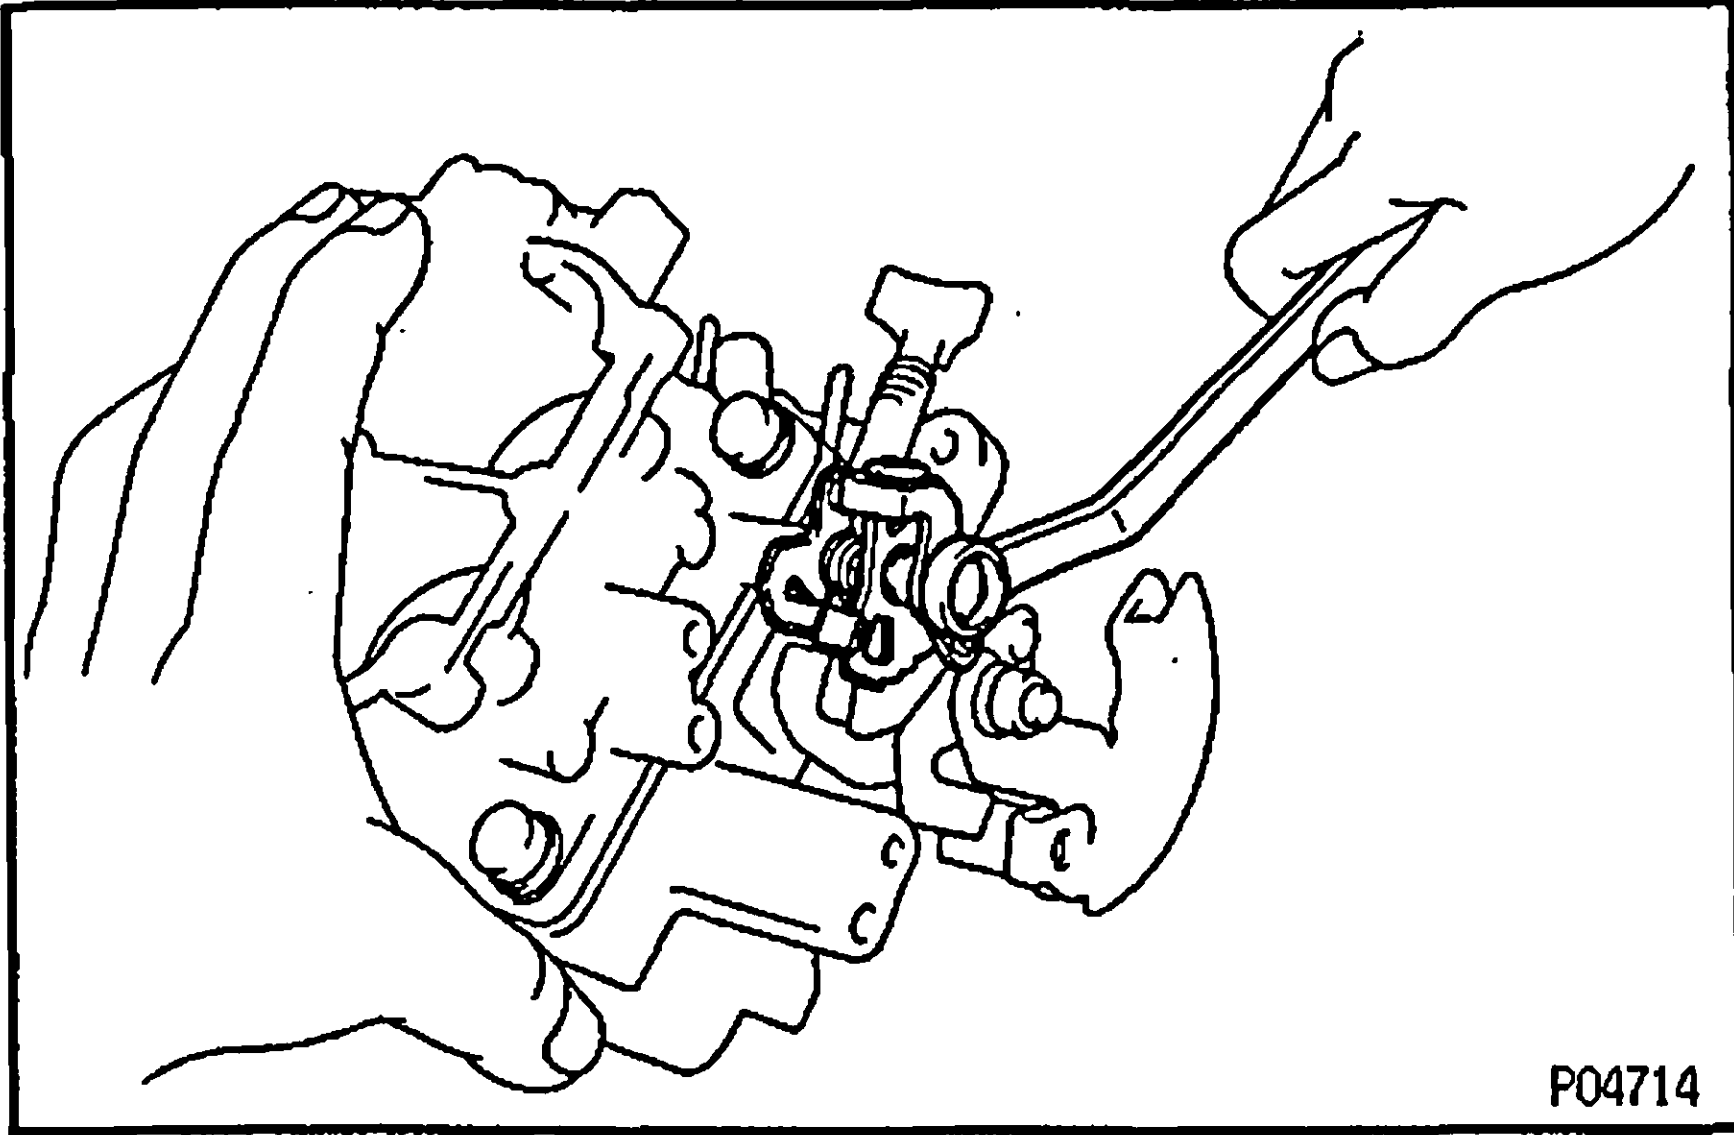**12. REMOVE FAST IDLE CAM**


EG

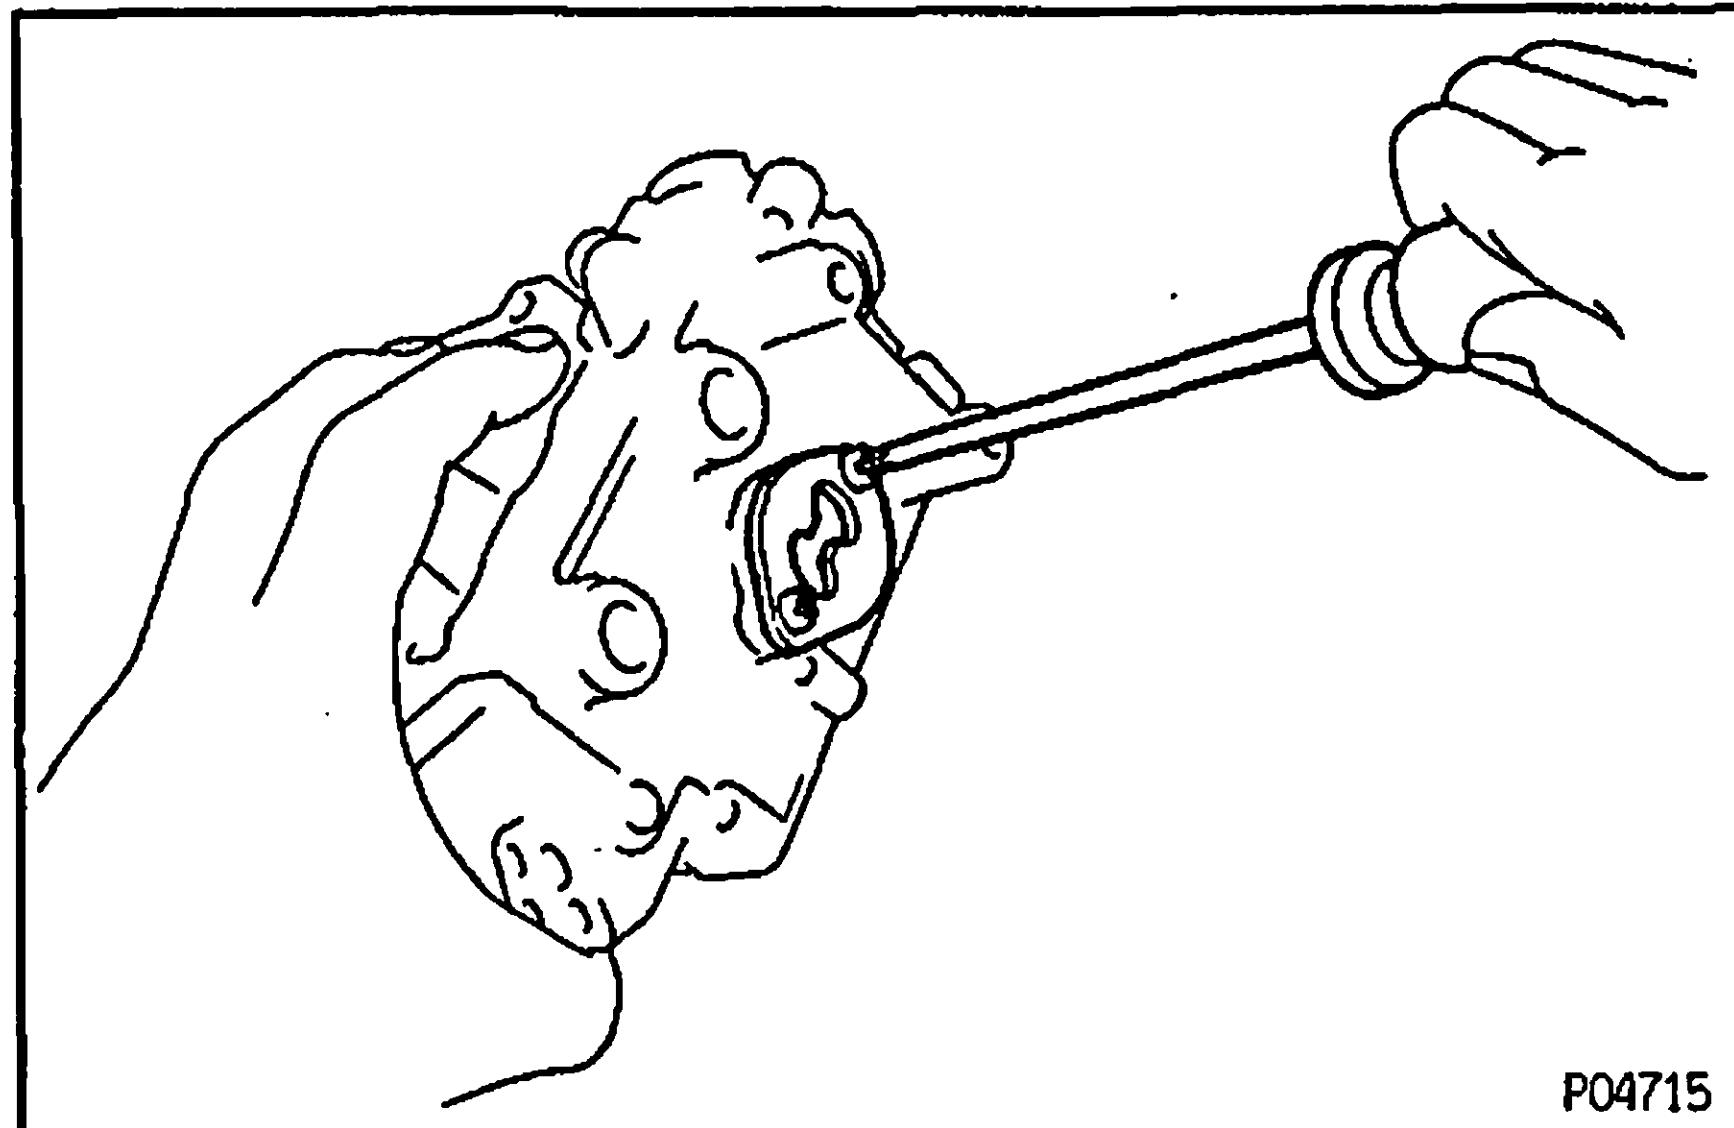**13. REMOVE SIGHT GLASS**

Remove the two screws, retainer, sight glass and O-ring.

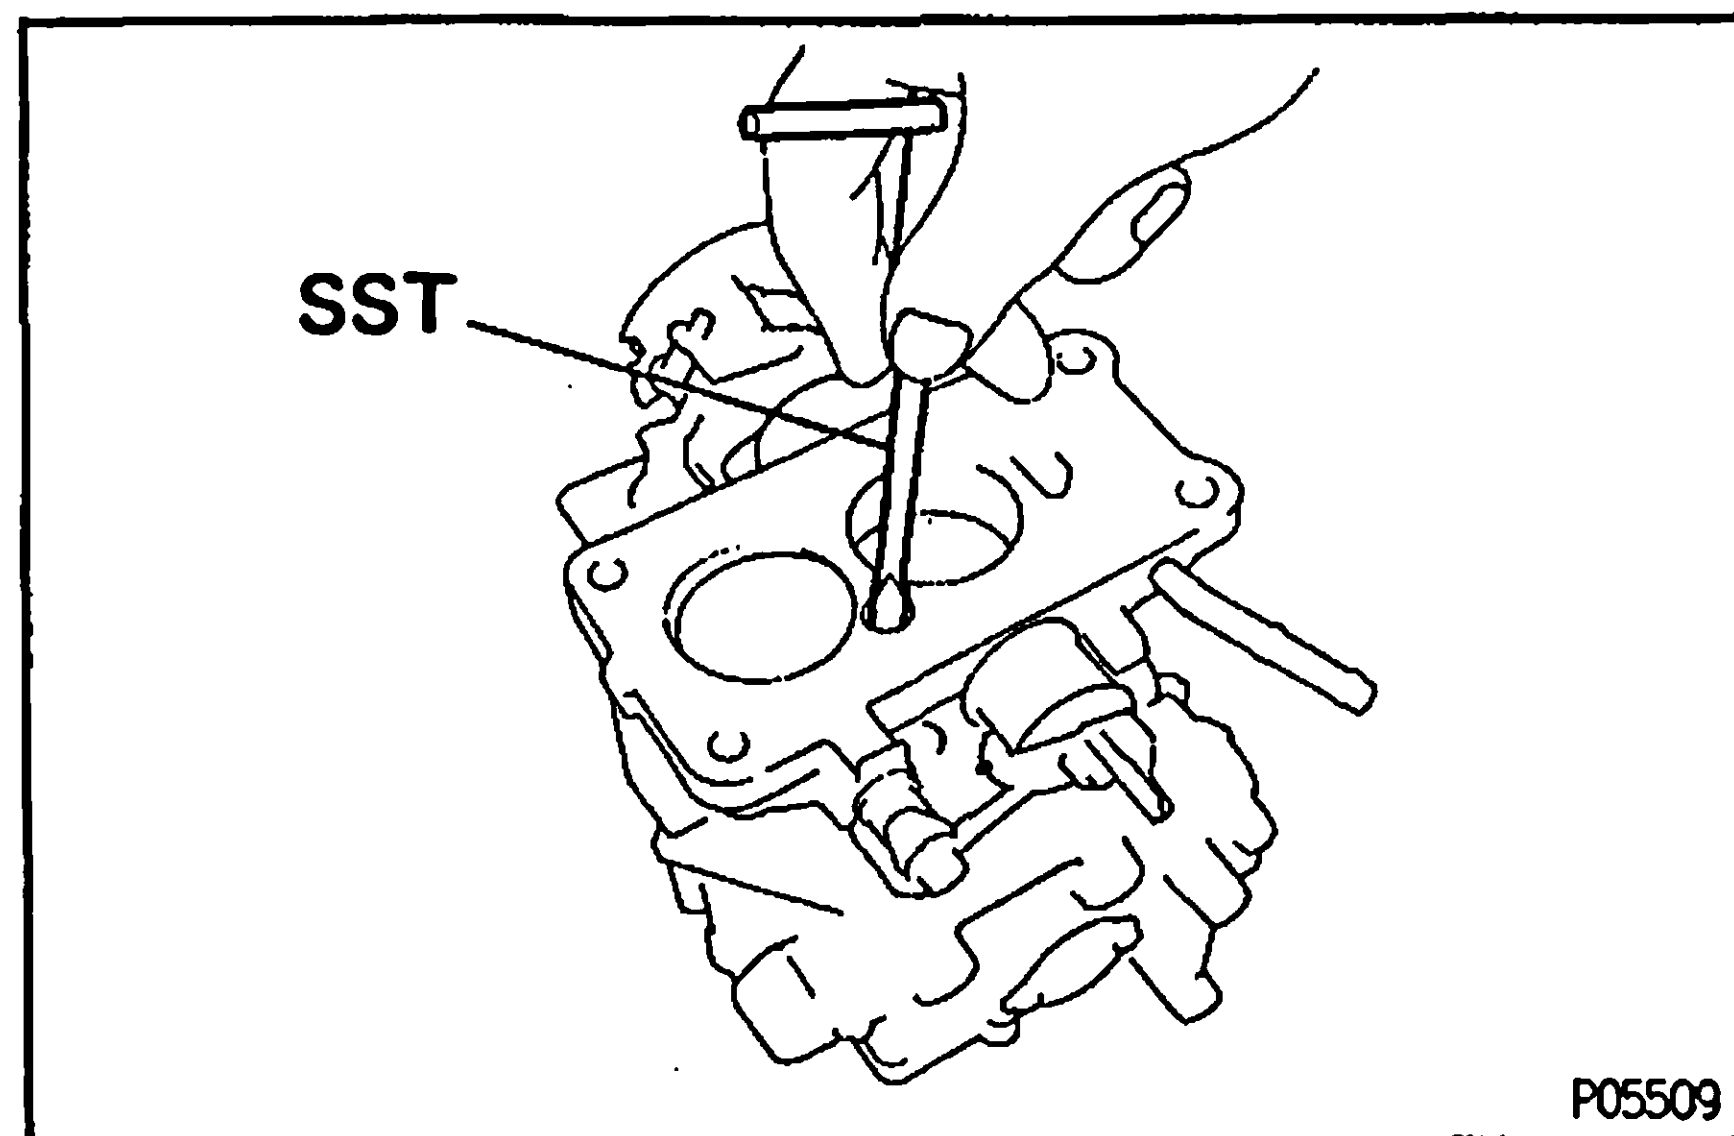**14. SEPARATE CARBURETOR BODY AND FLANGE**


(a) Remove the passage screw and spring washer.

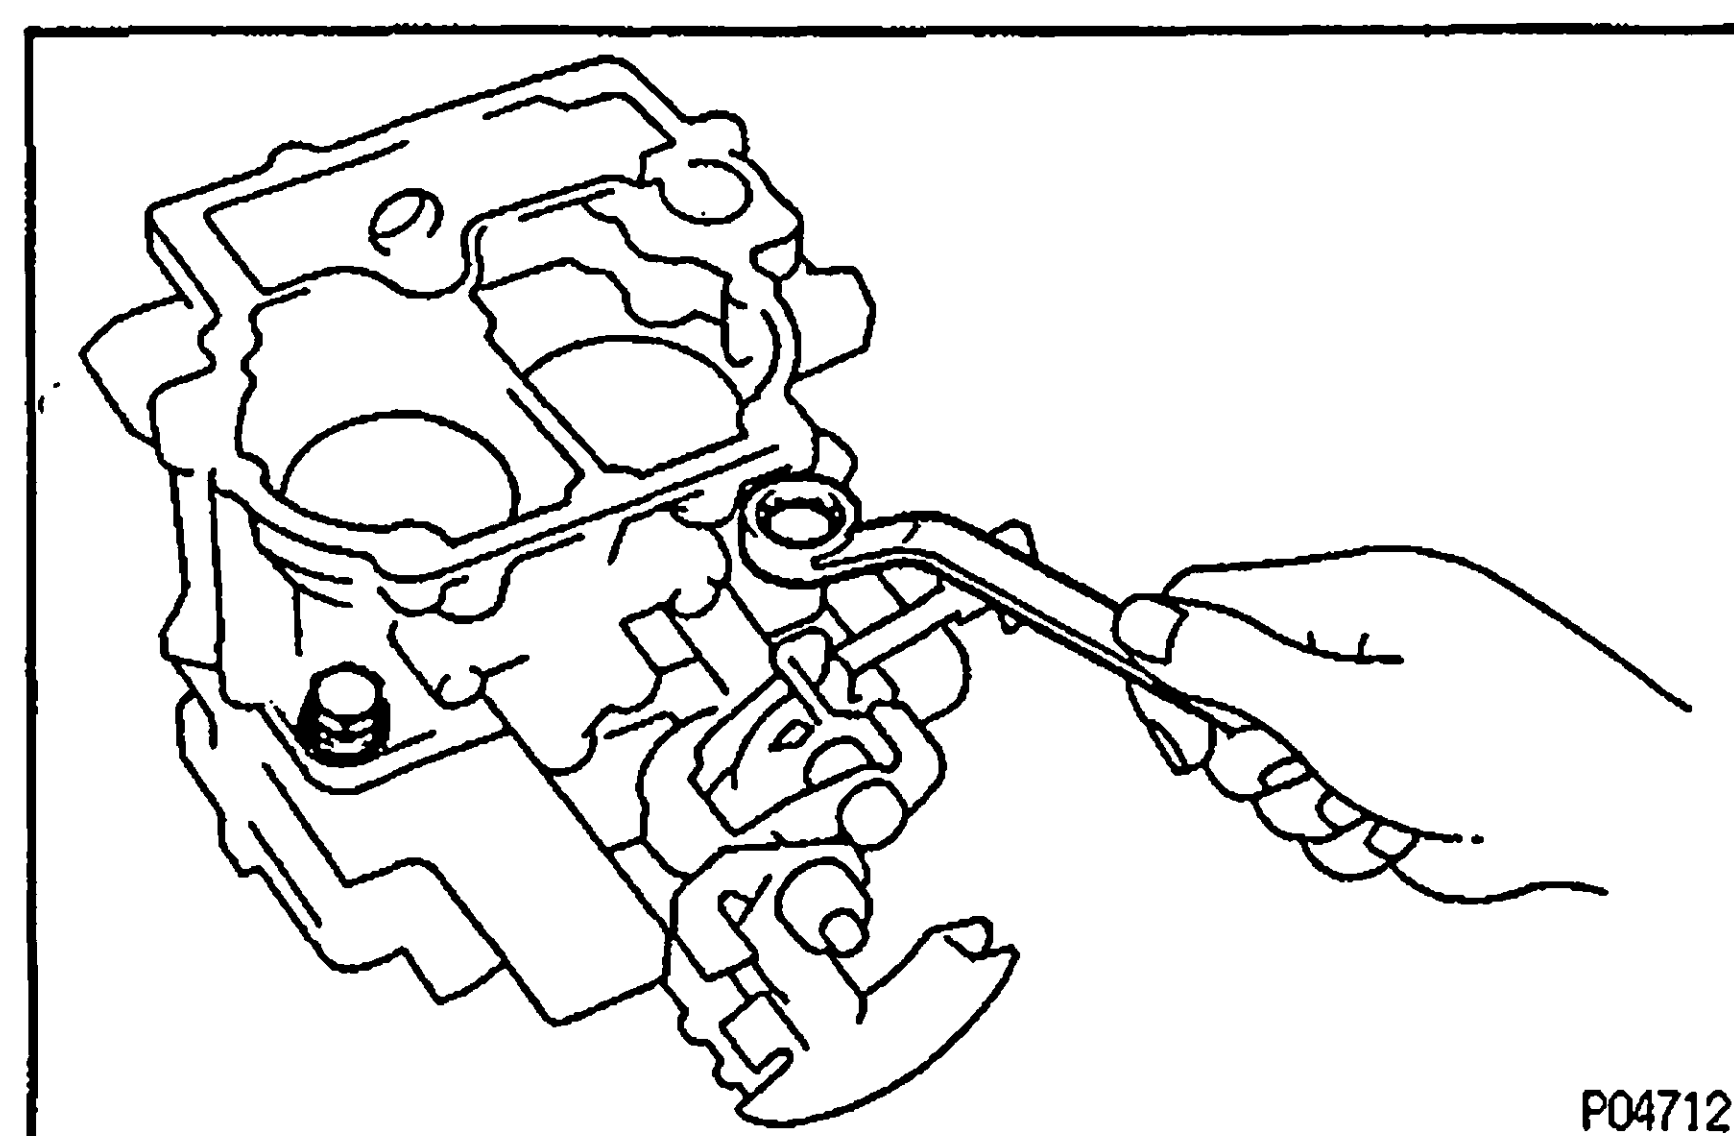

(b) Remove the two bolts.

(c) Separate the body and flange.

(d) Remove the insulator.

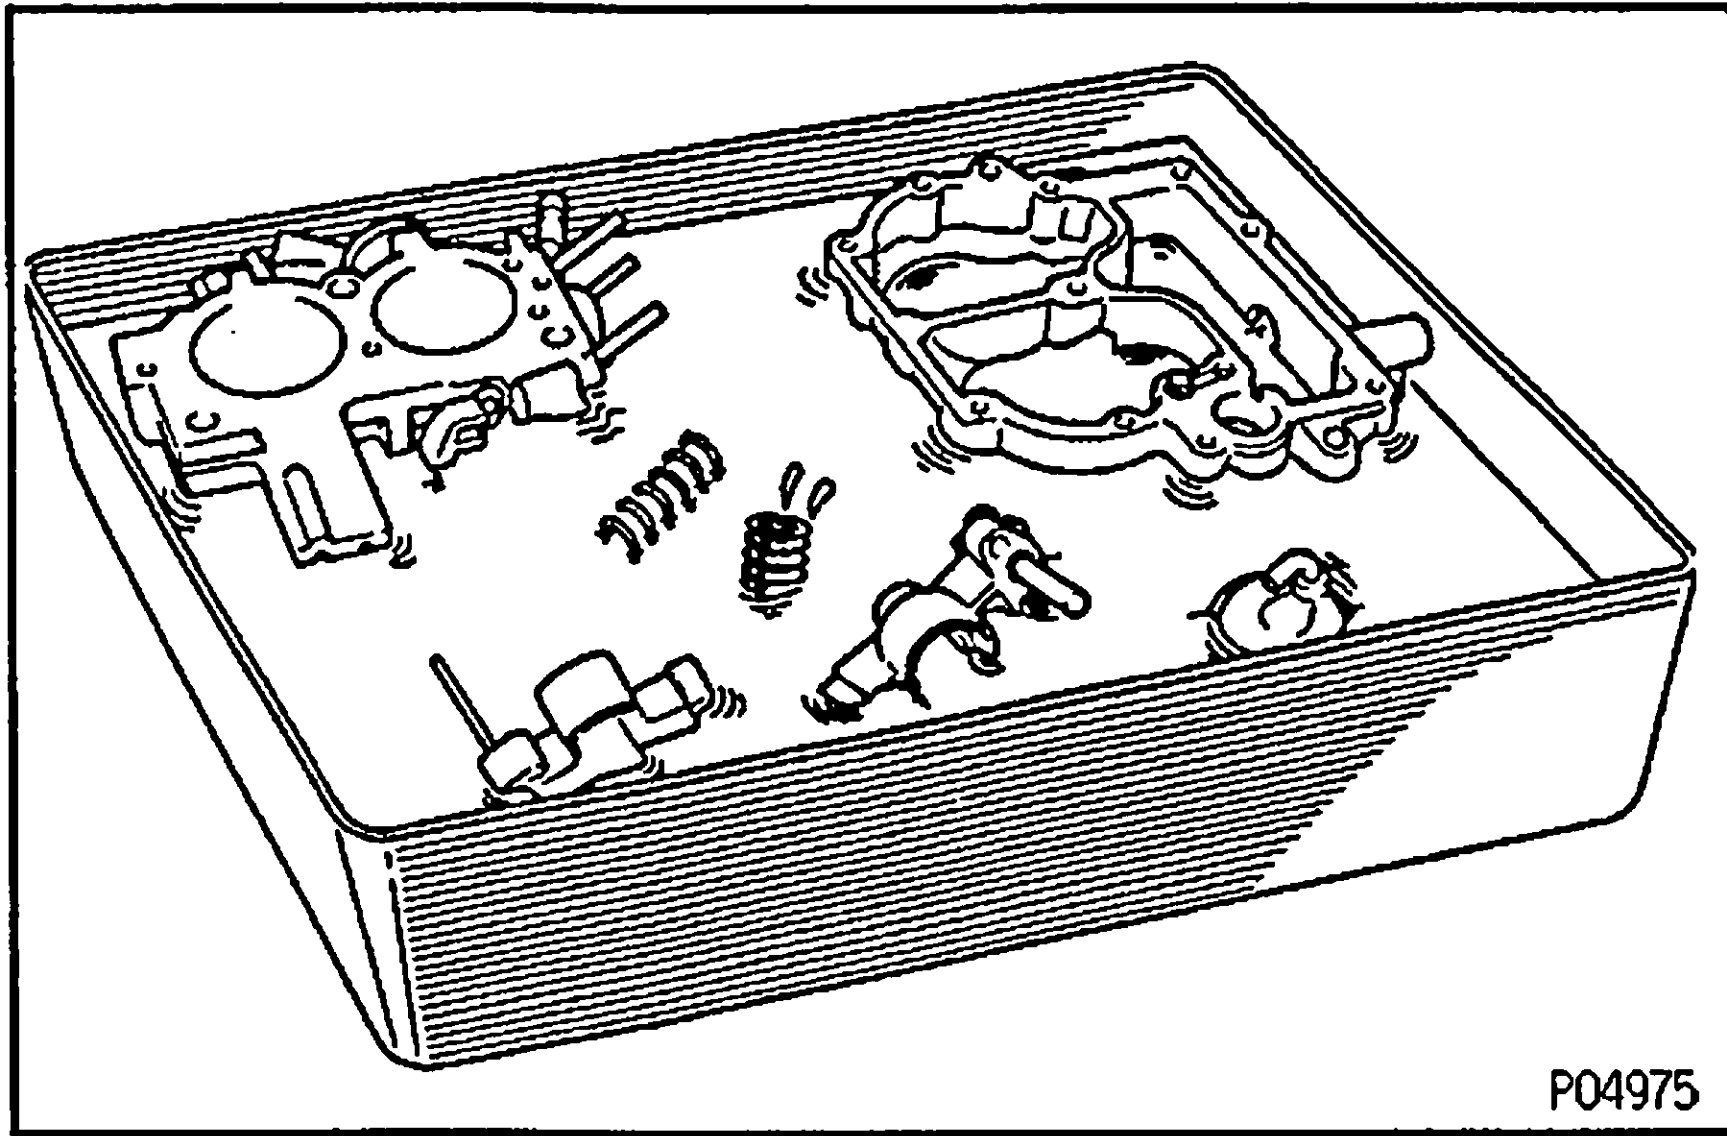

GENERAL CLEANING PROCEDURE

CLEAN DISASSEMBLED PARTS BEFORE INSPECTION



- With a soft brush wash and clean the cast parts in carburetor cleaner.
- Clean off the carbon around the throttle valve.
- Wash the other parts thoroughly in carburetor cleaner.
- Blow all dirt and other foreign material from the jets, fuel passages and restrictions in the body.

EG0UG-01

INSPECTION OF CARBURETOR

1. INSPECT FLOAT AND NEEDLE VALVE

- Inspect the pivot pin (1) for scratches and excessive wear.
- Inspect the float (2) for broken lips and wear in the pivot pin holes.
- Inspect the spring (3) for breaks and deformation.
- Inspect the needle valve (4) and plunger (5) for wear or damage.
- Inspect the strainer (6) for rust and breaks.

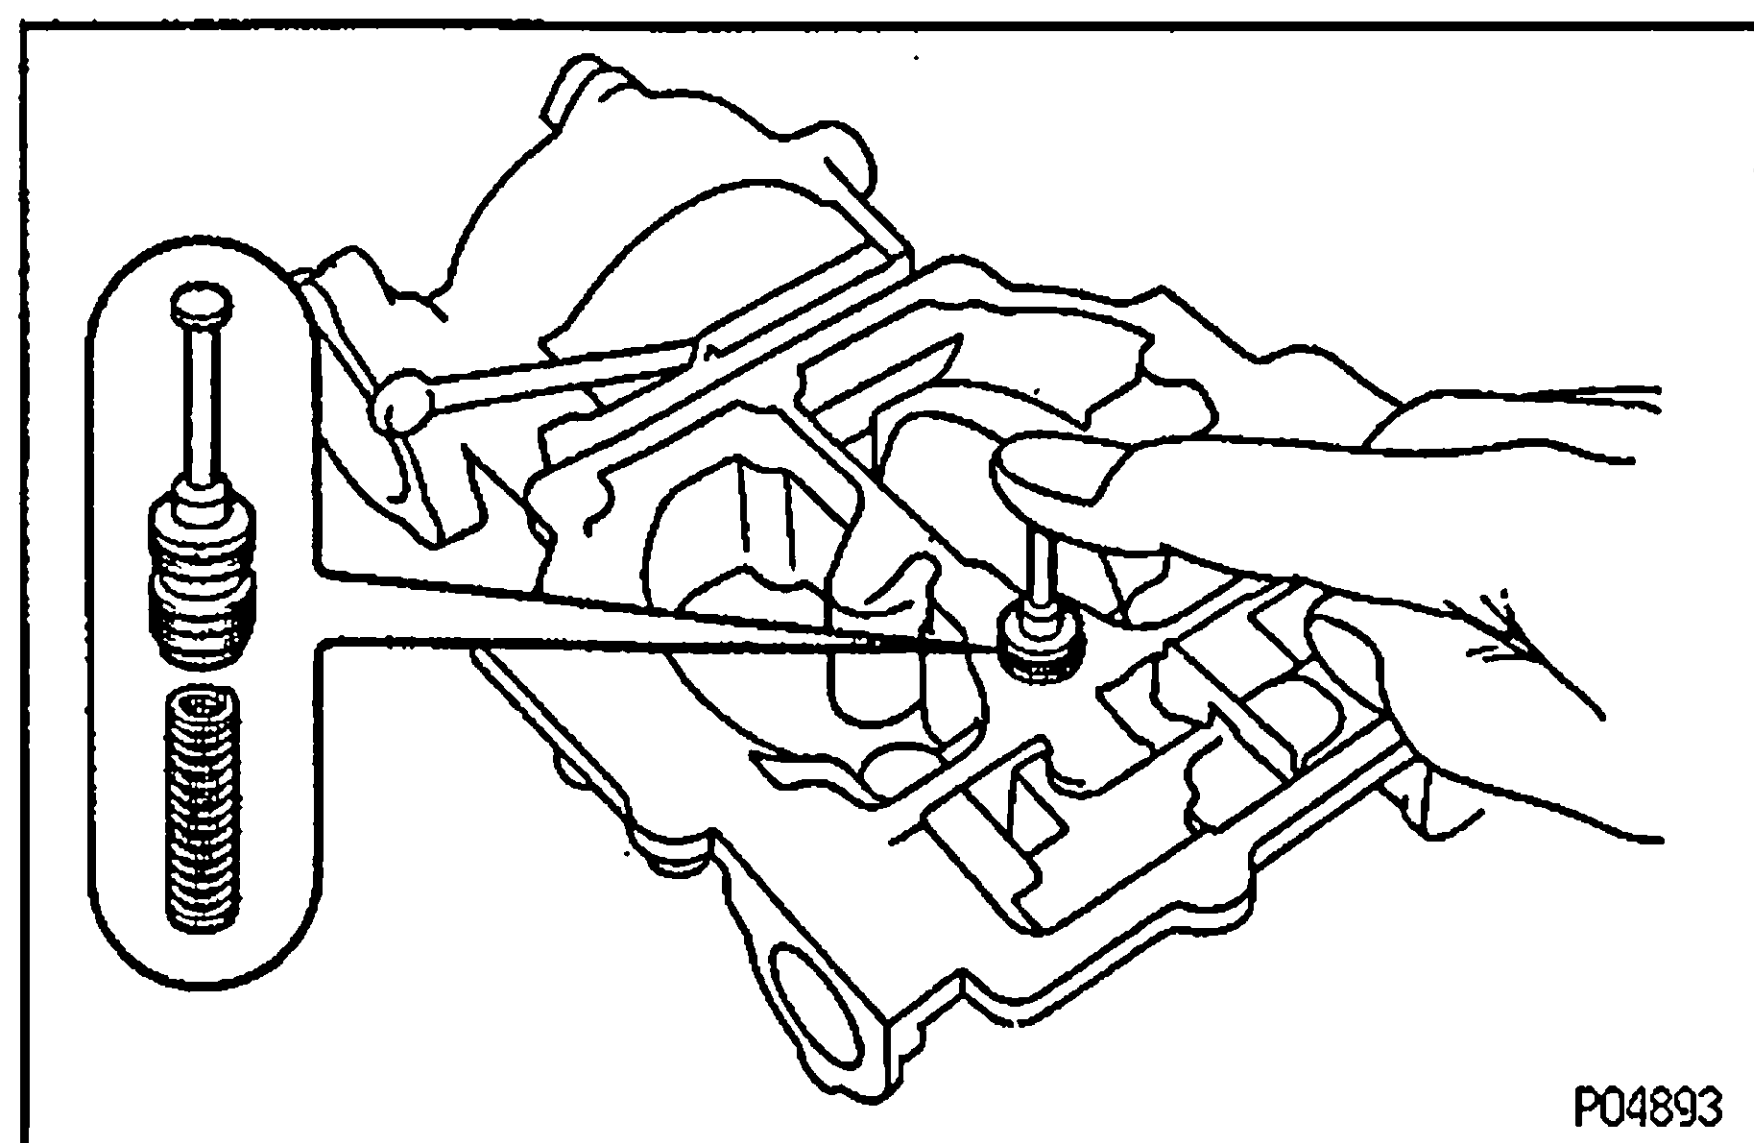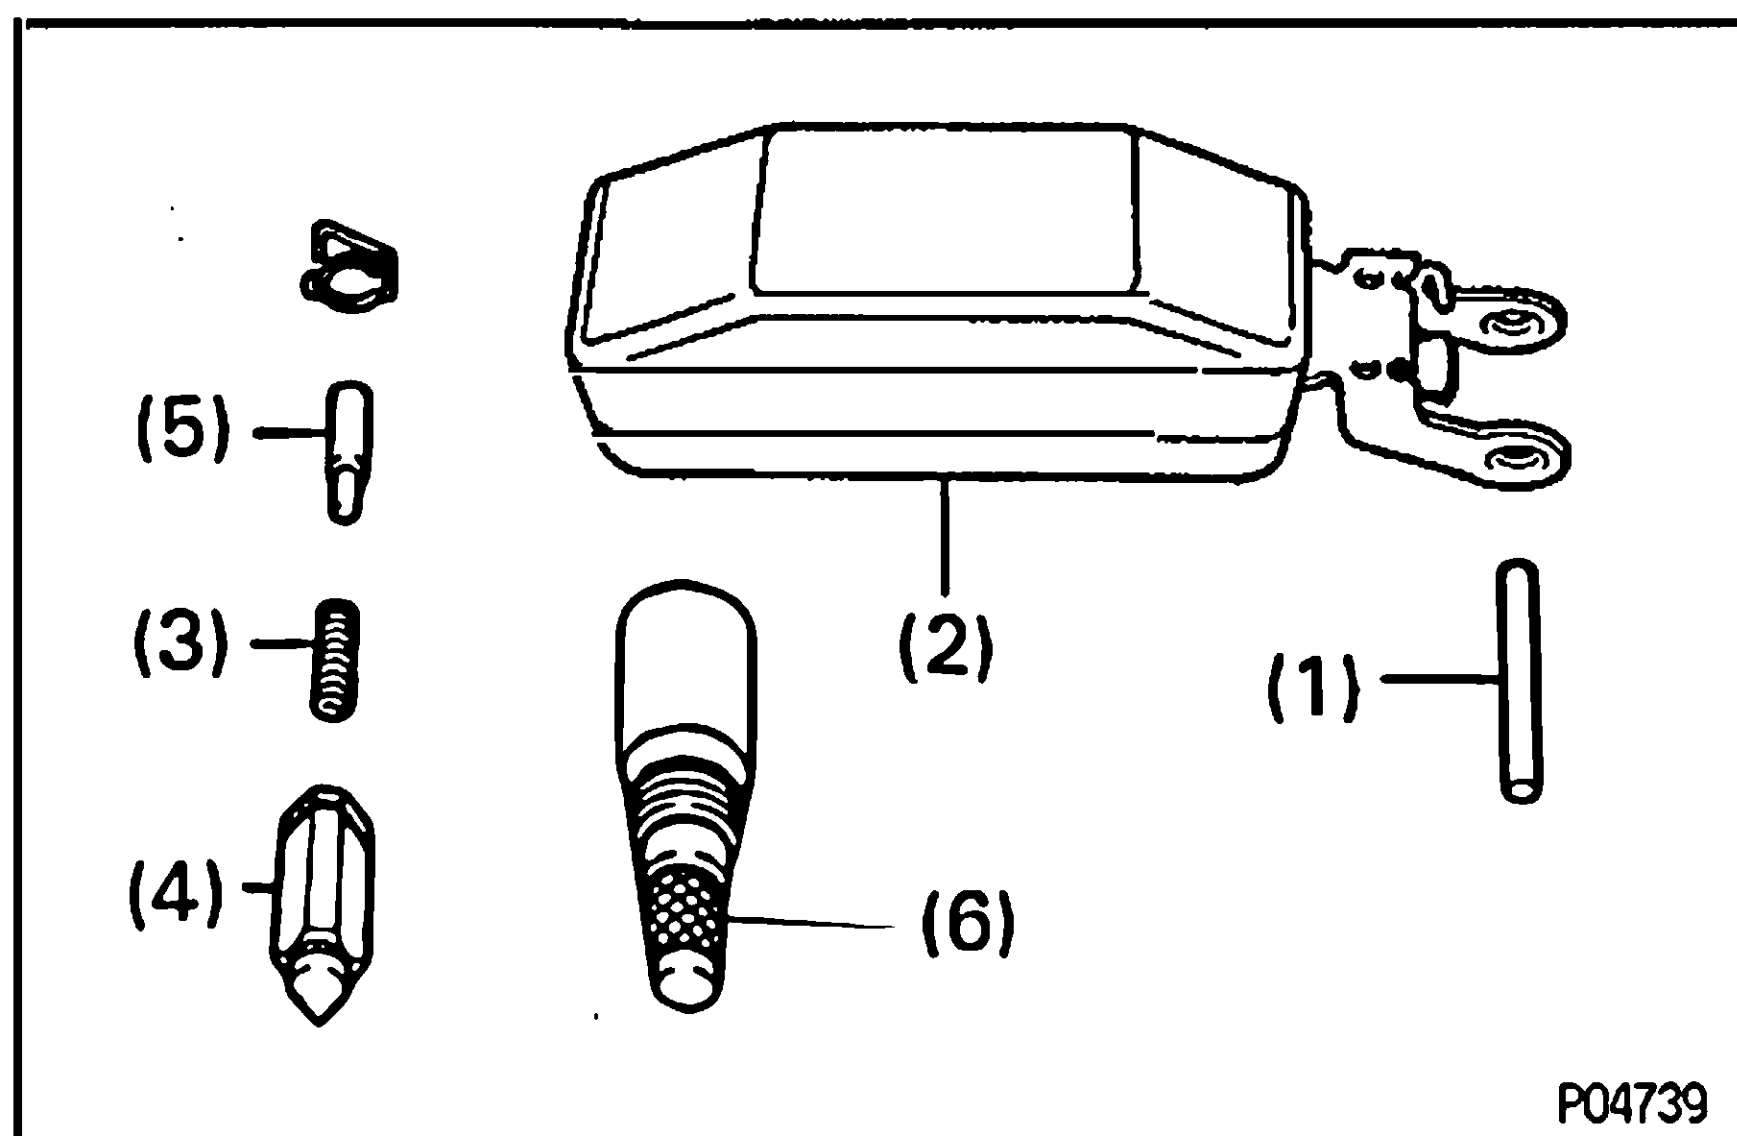



2. INSPECT POWER PISTON

Check that the power piston moves smoothly.

3. INSPECT POWER VALVE

Check for faulty opening and closing action.

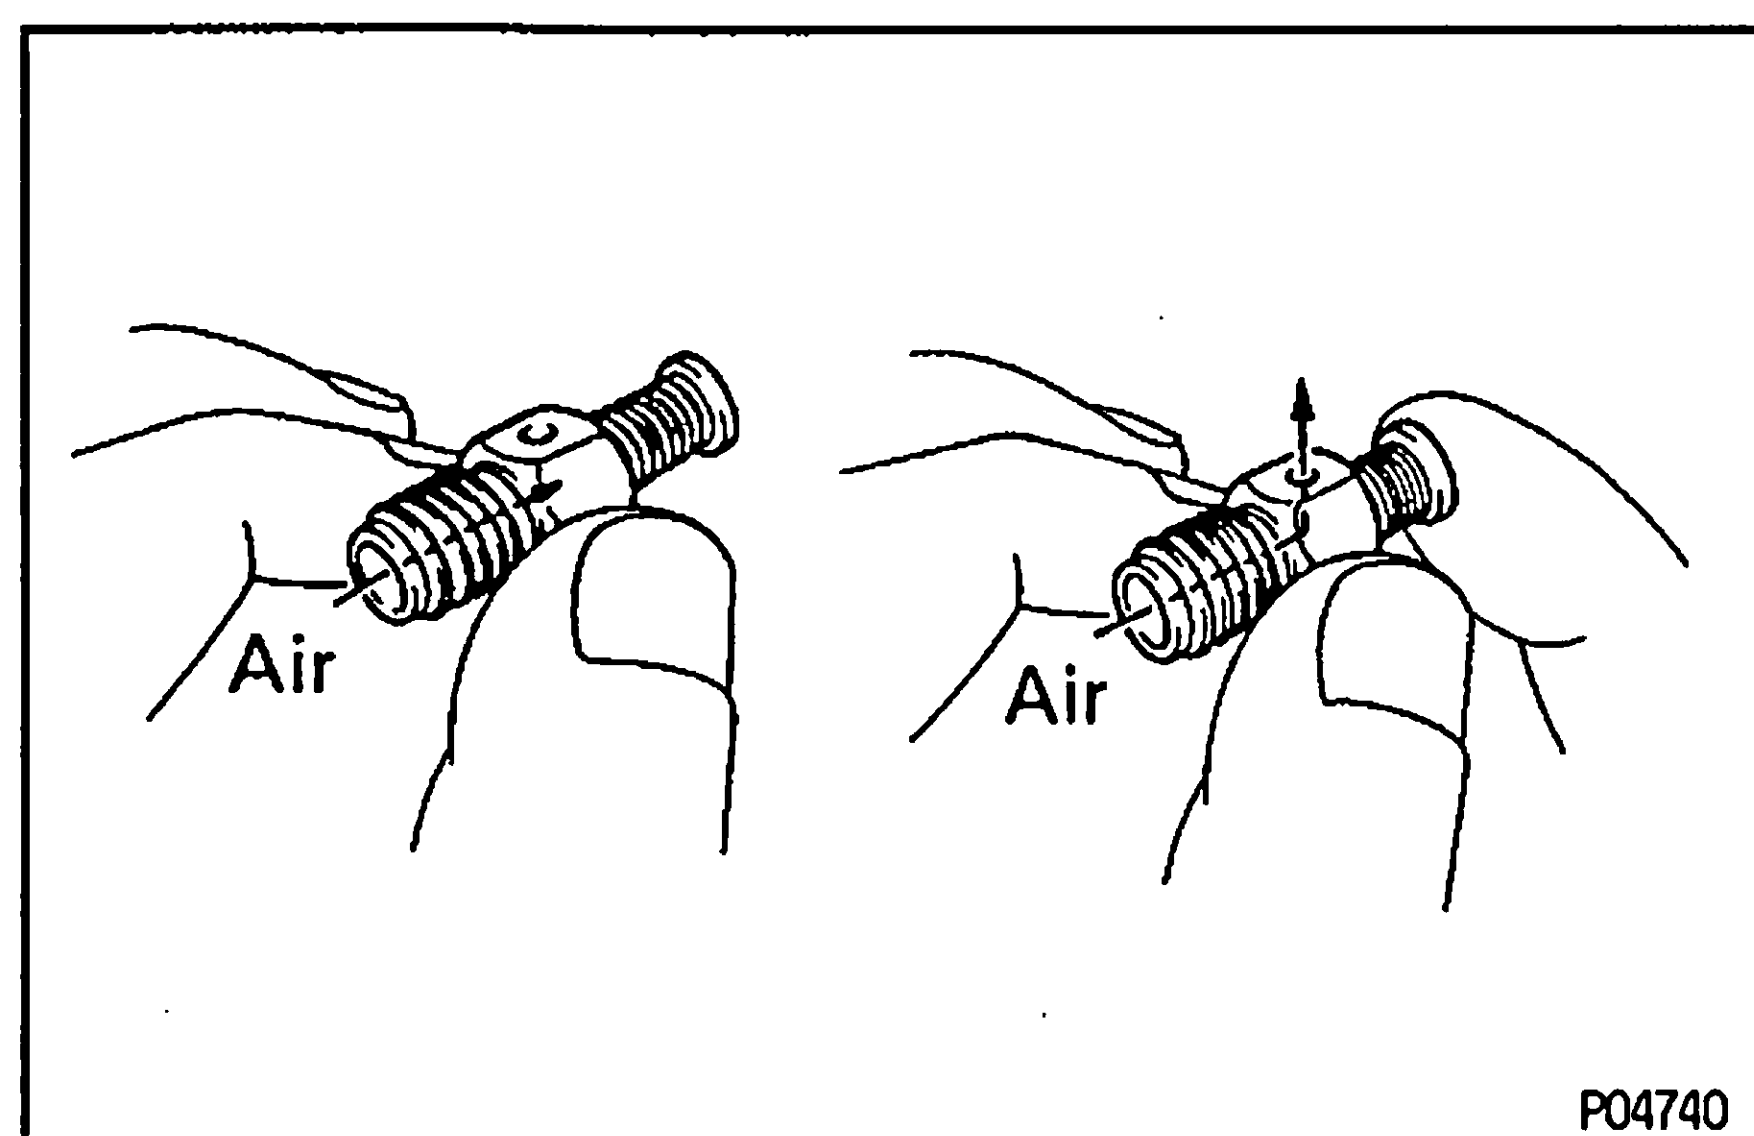


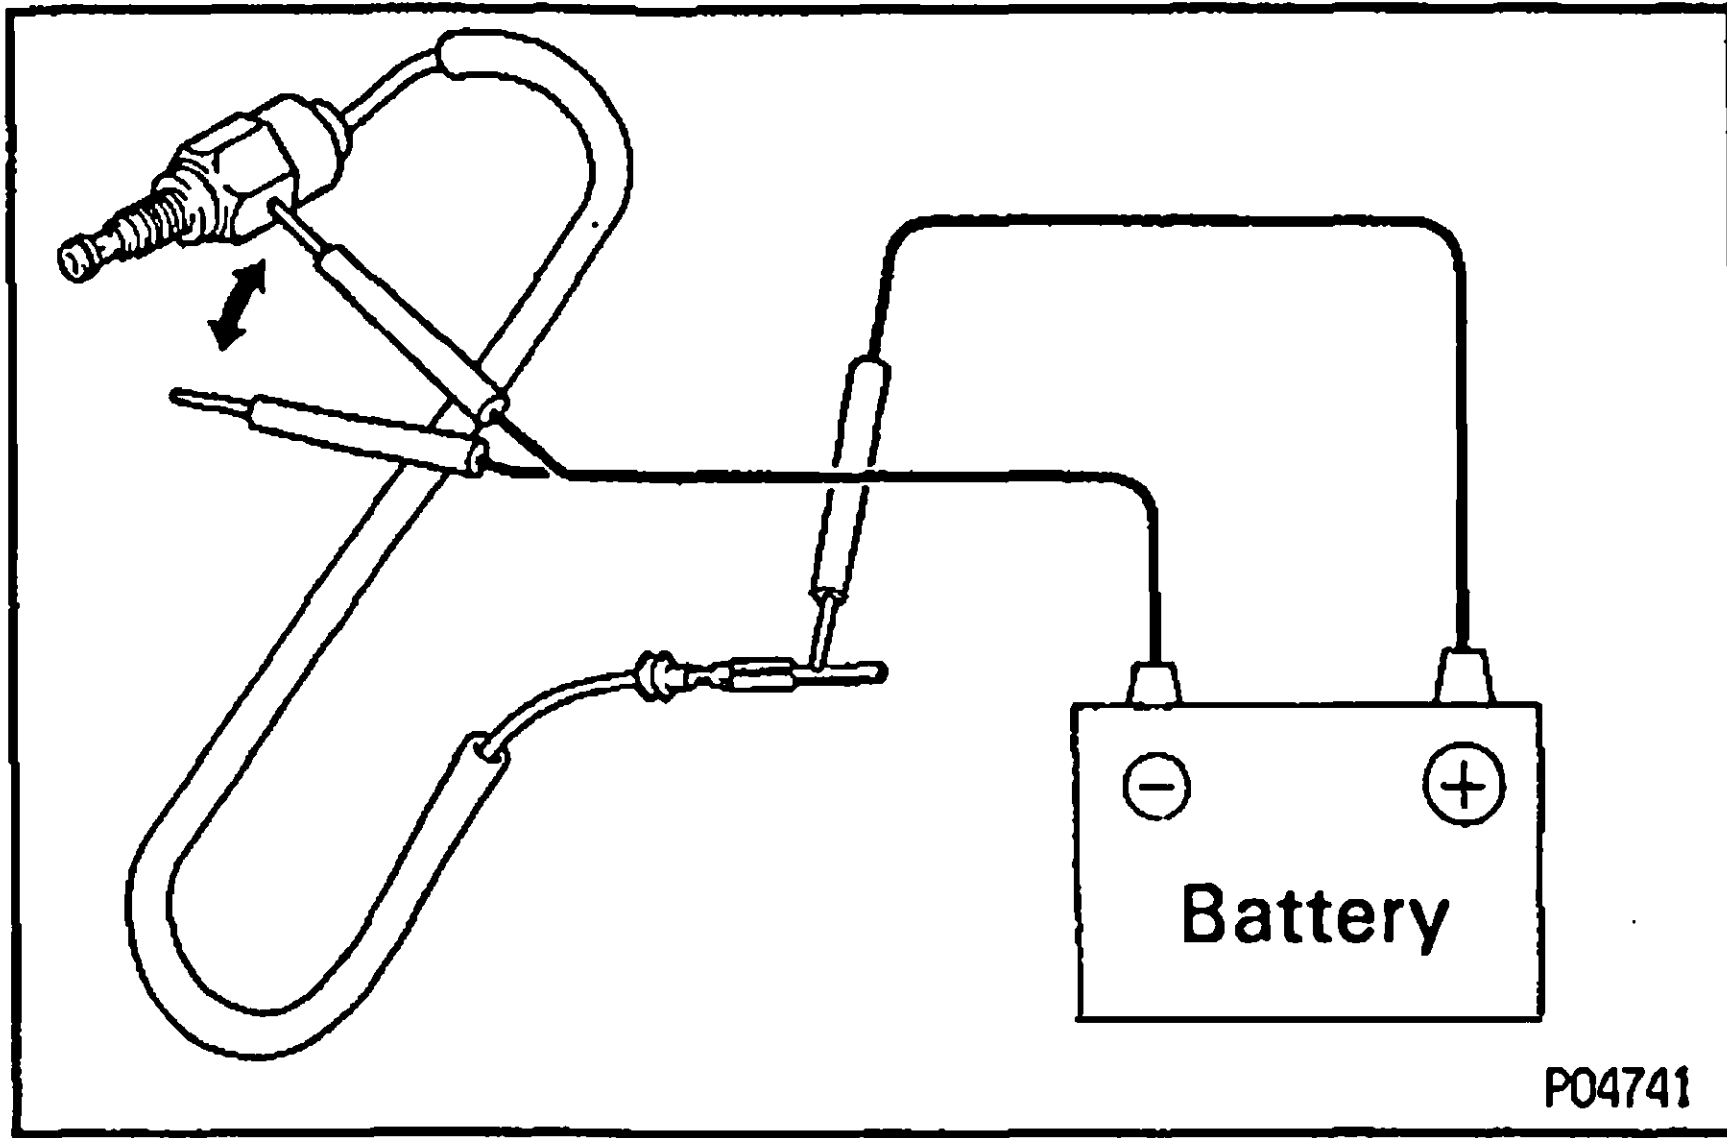

4. INSPECT FUEL CUT SOLENOID VALVE

- (a) Connect the connector terminals to the battery terminals.
- (b) You should feel a "click" from the solenoid valve when the battery power is connected and disconnected. If the solenoid valve is not operating properly, replace it.

EG

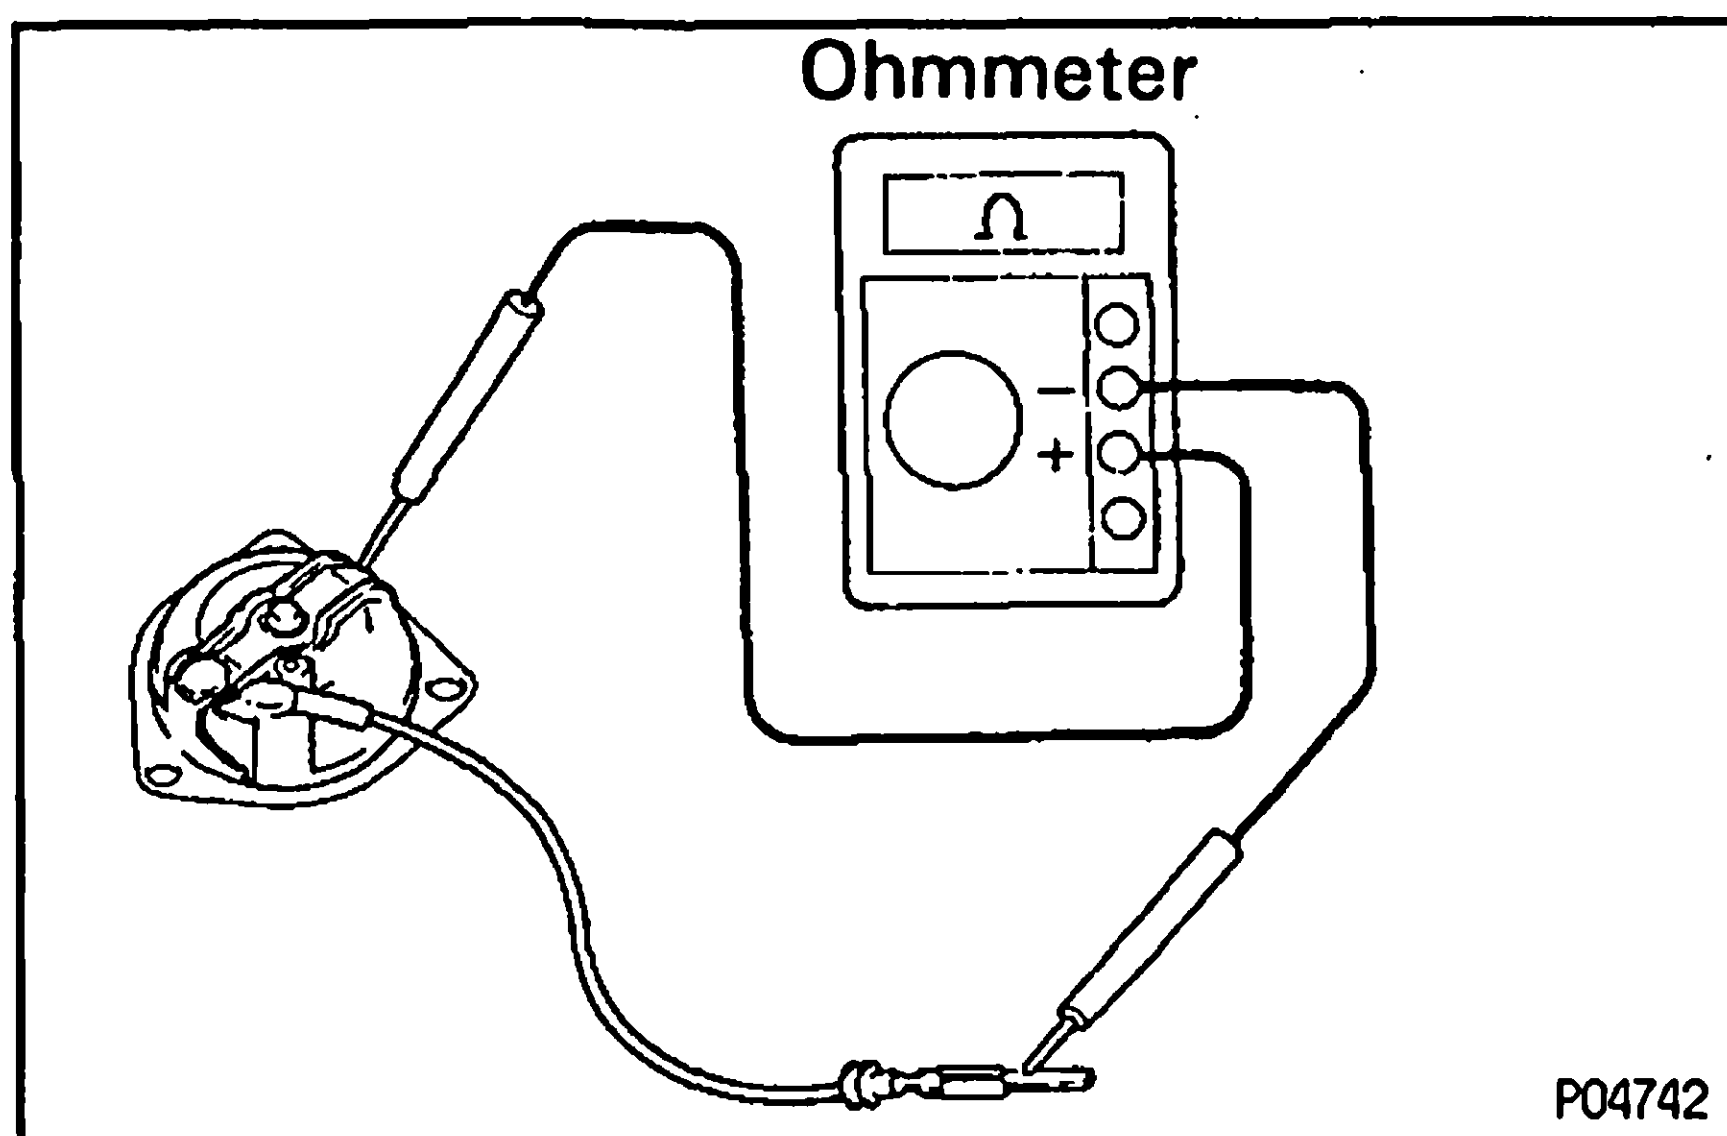


5. INSPECT CHOKE HEATER (COIL HOUSING)

Using an ohmmeter, measure the resistance between the terminals.

Resistance (Cold):


1.7–1.9 Ω at 20°C (68°F)

If a problem is found, replace the choke heater.

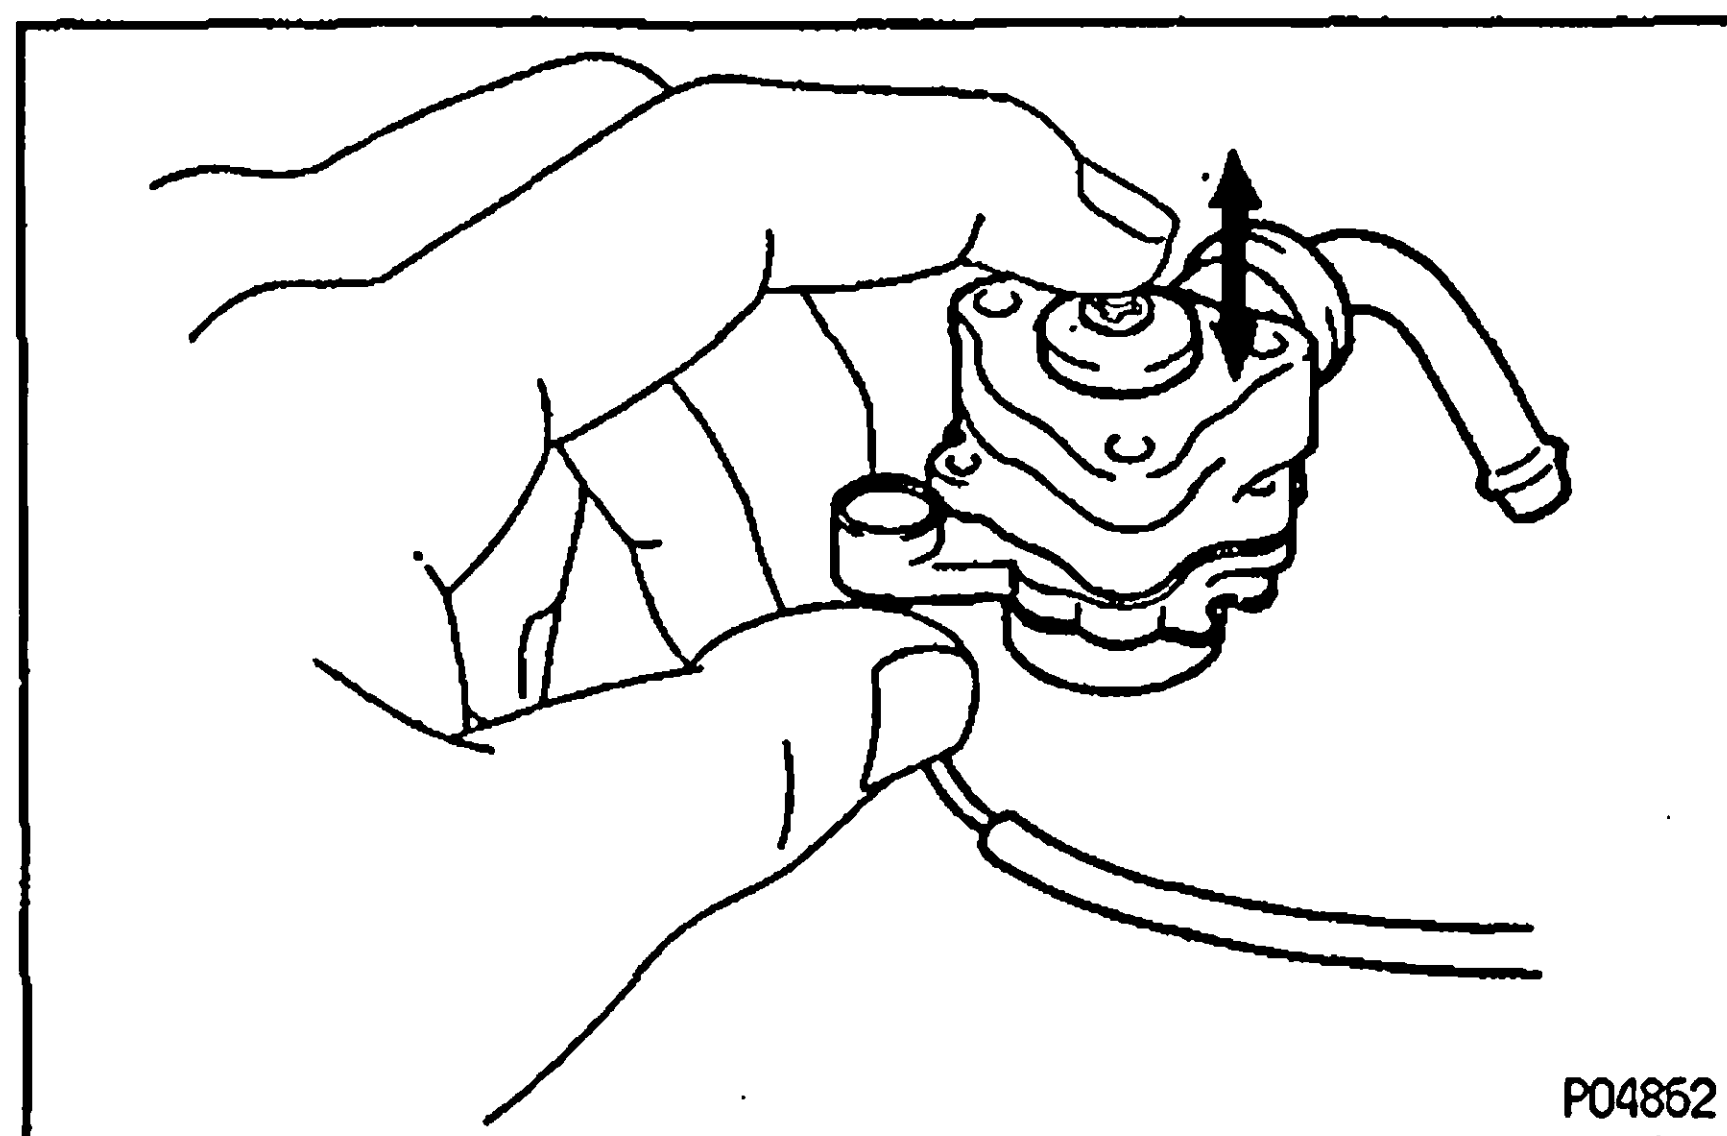

6. INSPECT OUTER VENT CONTROL VALVE (OVCV)

- (a) Check the valve and seats for damage.
- (b) Check the valve rod moves smoothly.

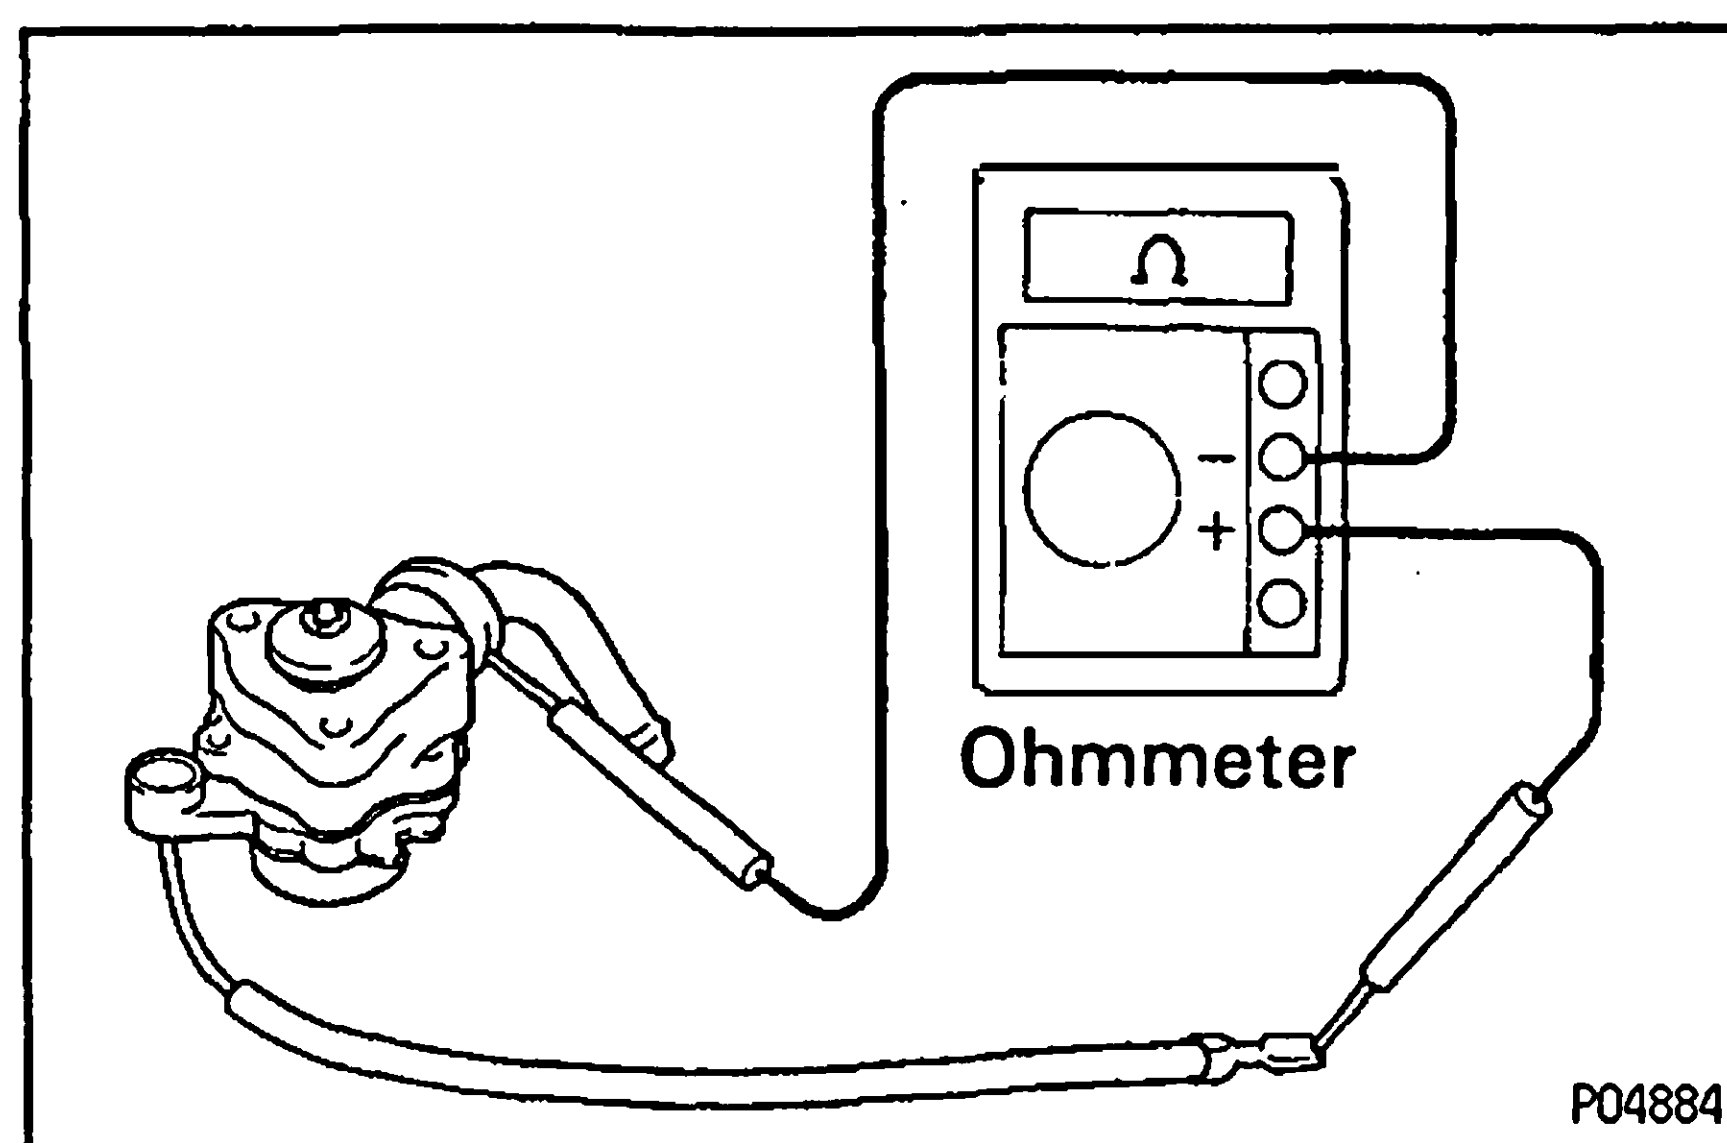


- (c) Using an ohmmeter, measure the resistance between the wire terminal and body.

Resistance (Cold):

32–38 Ω

If the resistance is not within specification, replace the OVCV.

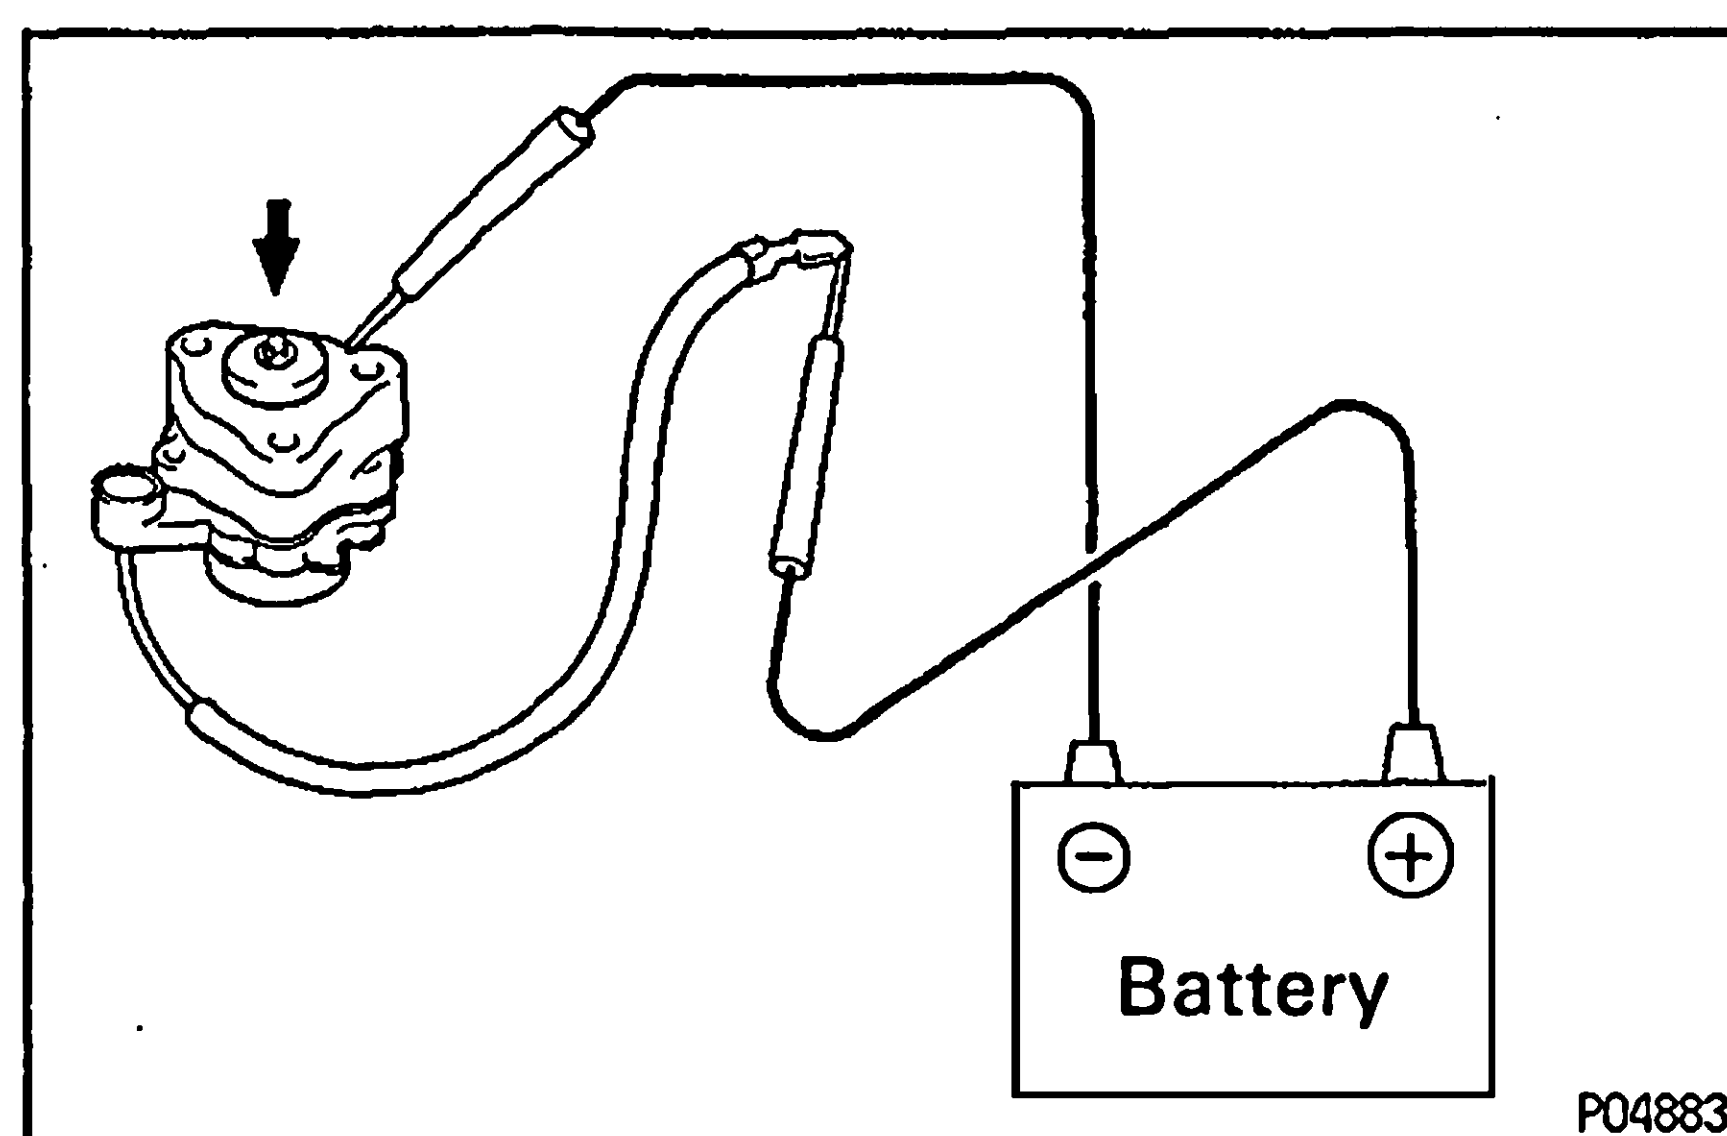

- (d) Connect the OVCV body and wire terminal to the battery terminals and check that the valve is retracted.


If the OVCV is not operating properly, replace it.

CARBURETOR ASSEMBLY

(See pages EG—140, 141)

HINT: Use new gaskets and O—rings throughout.

EG

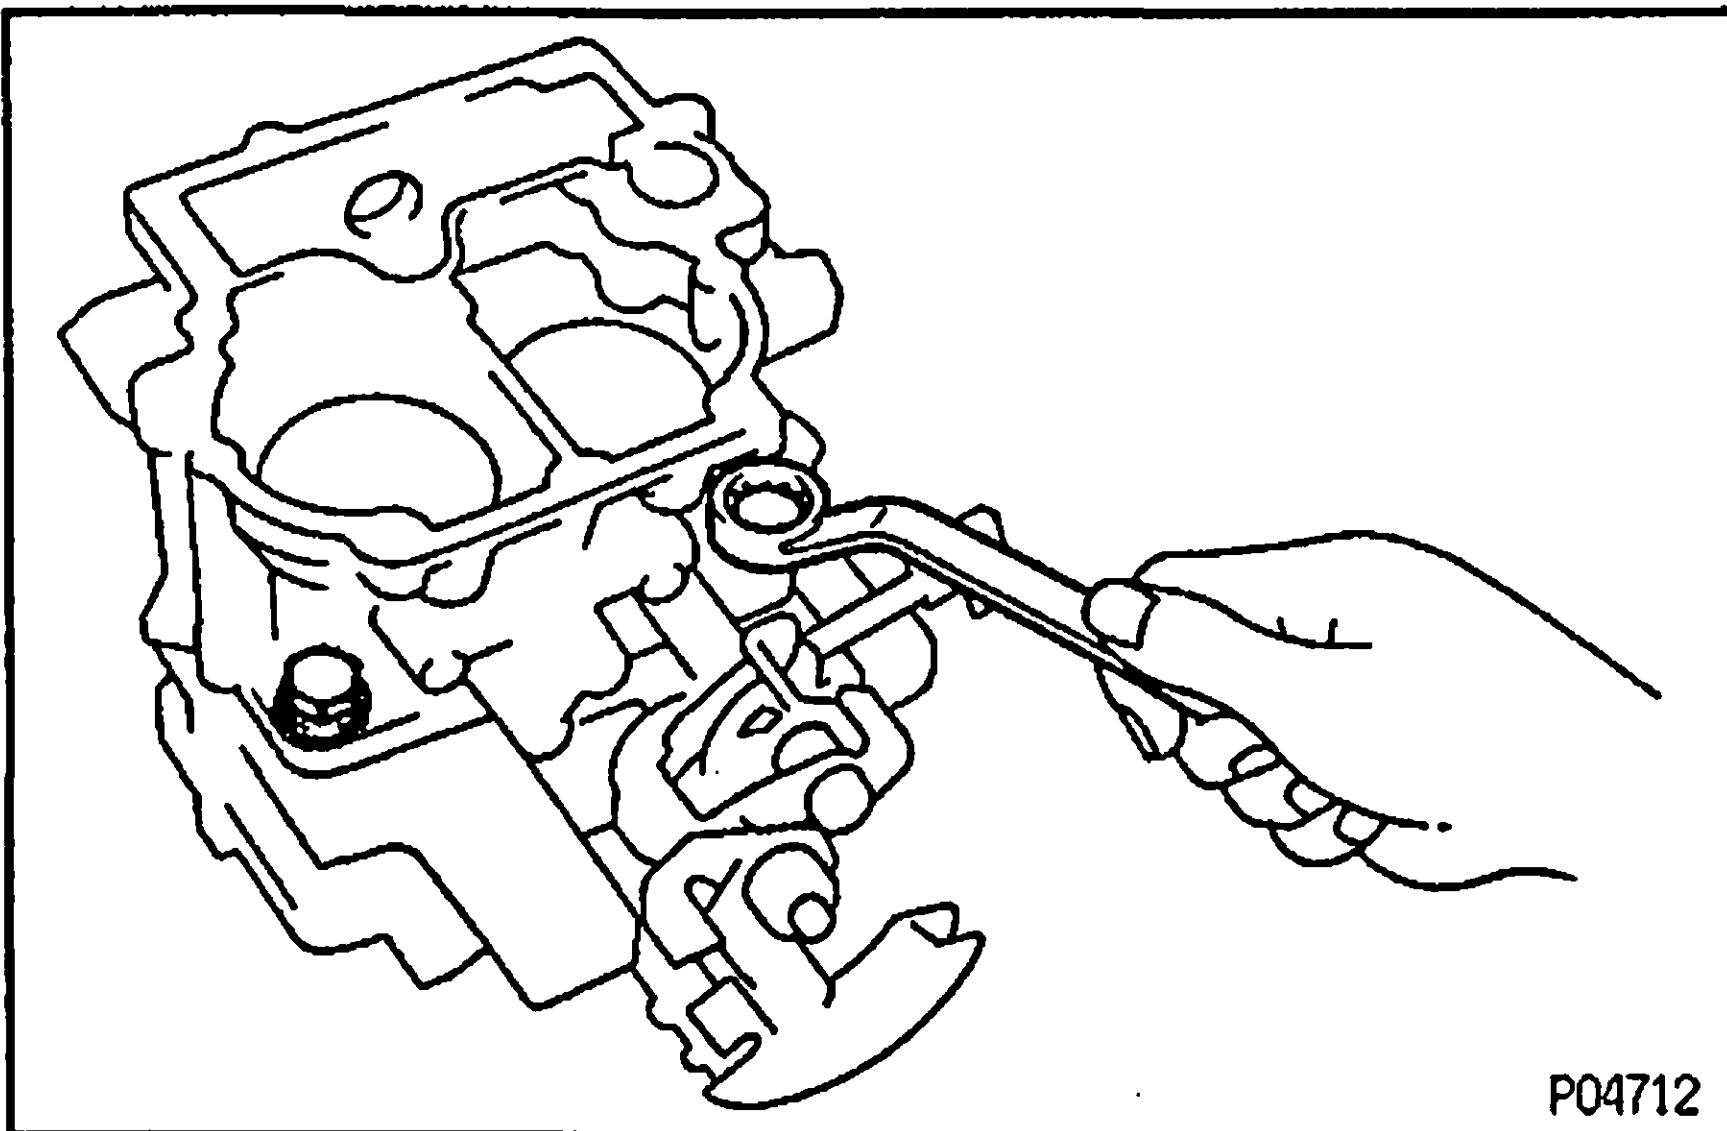

P04712


Carburetor Body Assembly

EG0UJ-01

(See page EG—141)


1. ASSEMBLE CARBURETOR BODY AND FLANGE

- (a) Assemble the flange and body together with a new insulator.
- (b) Install the two bolts.

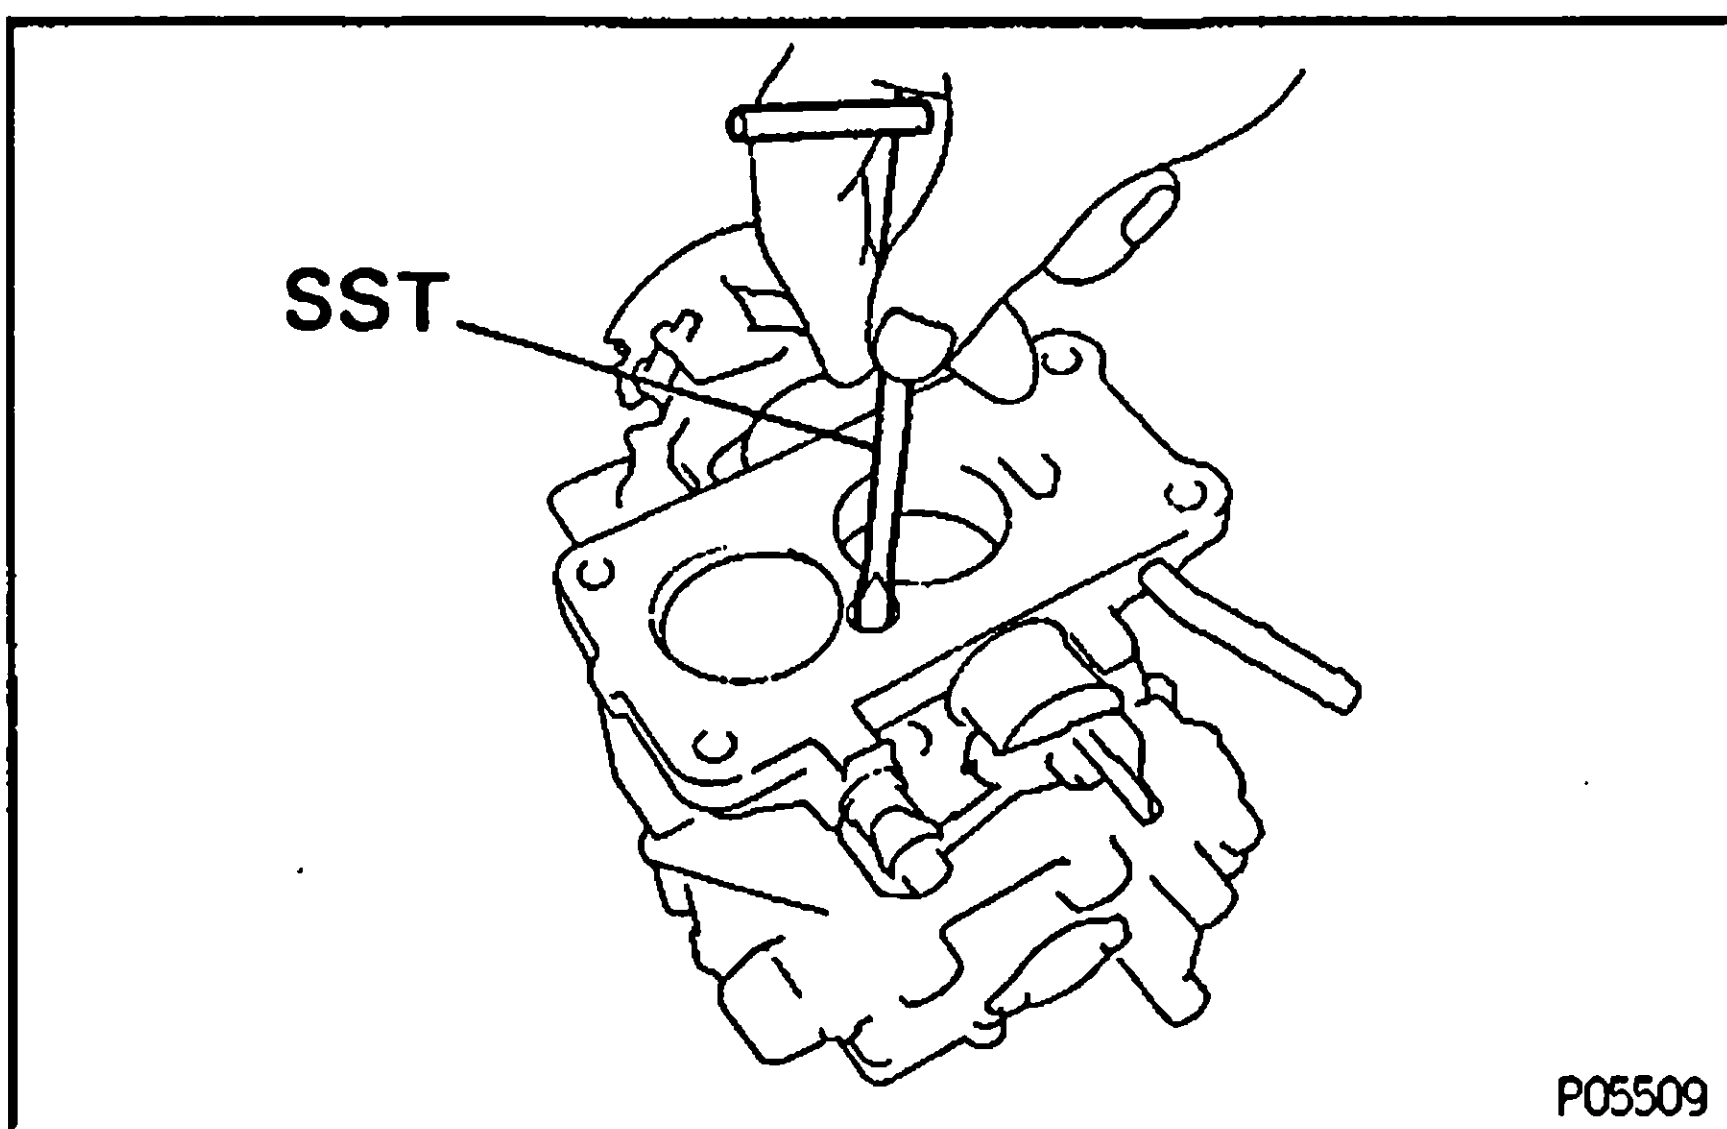

P05509


- (c) Install the passage screw together with the spring washer.

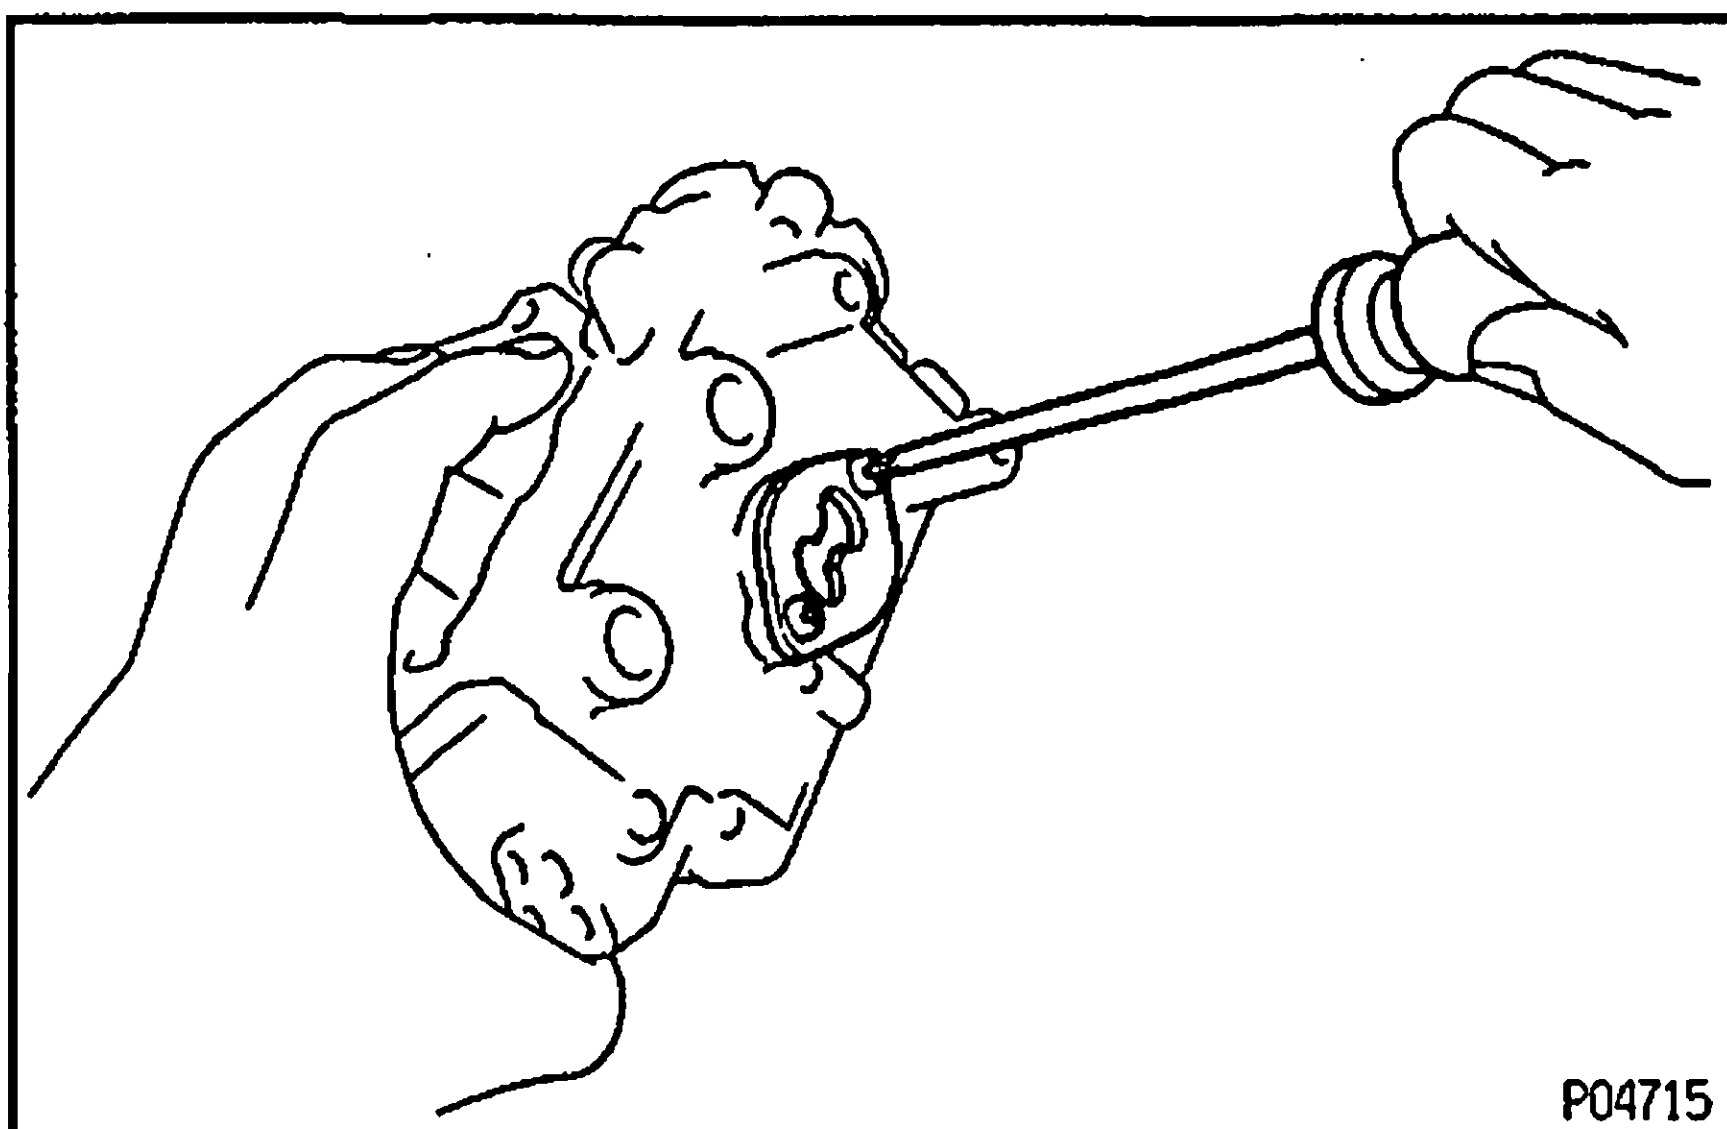

P04715


2. INSTALL SIGHT GLASS

Install a new O—ring, the sight glass and retainer with the two screws.

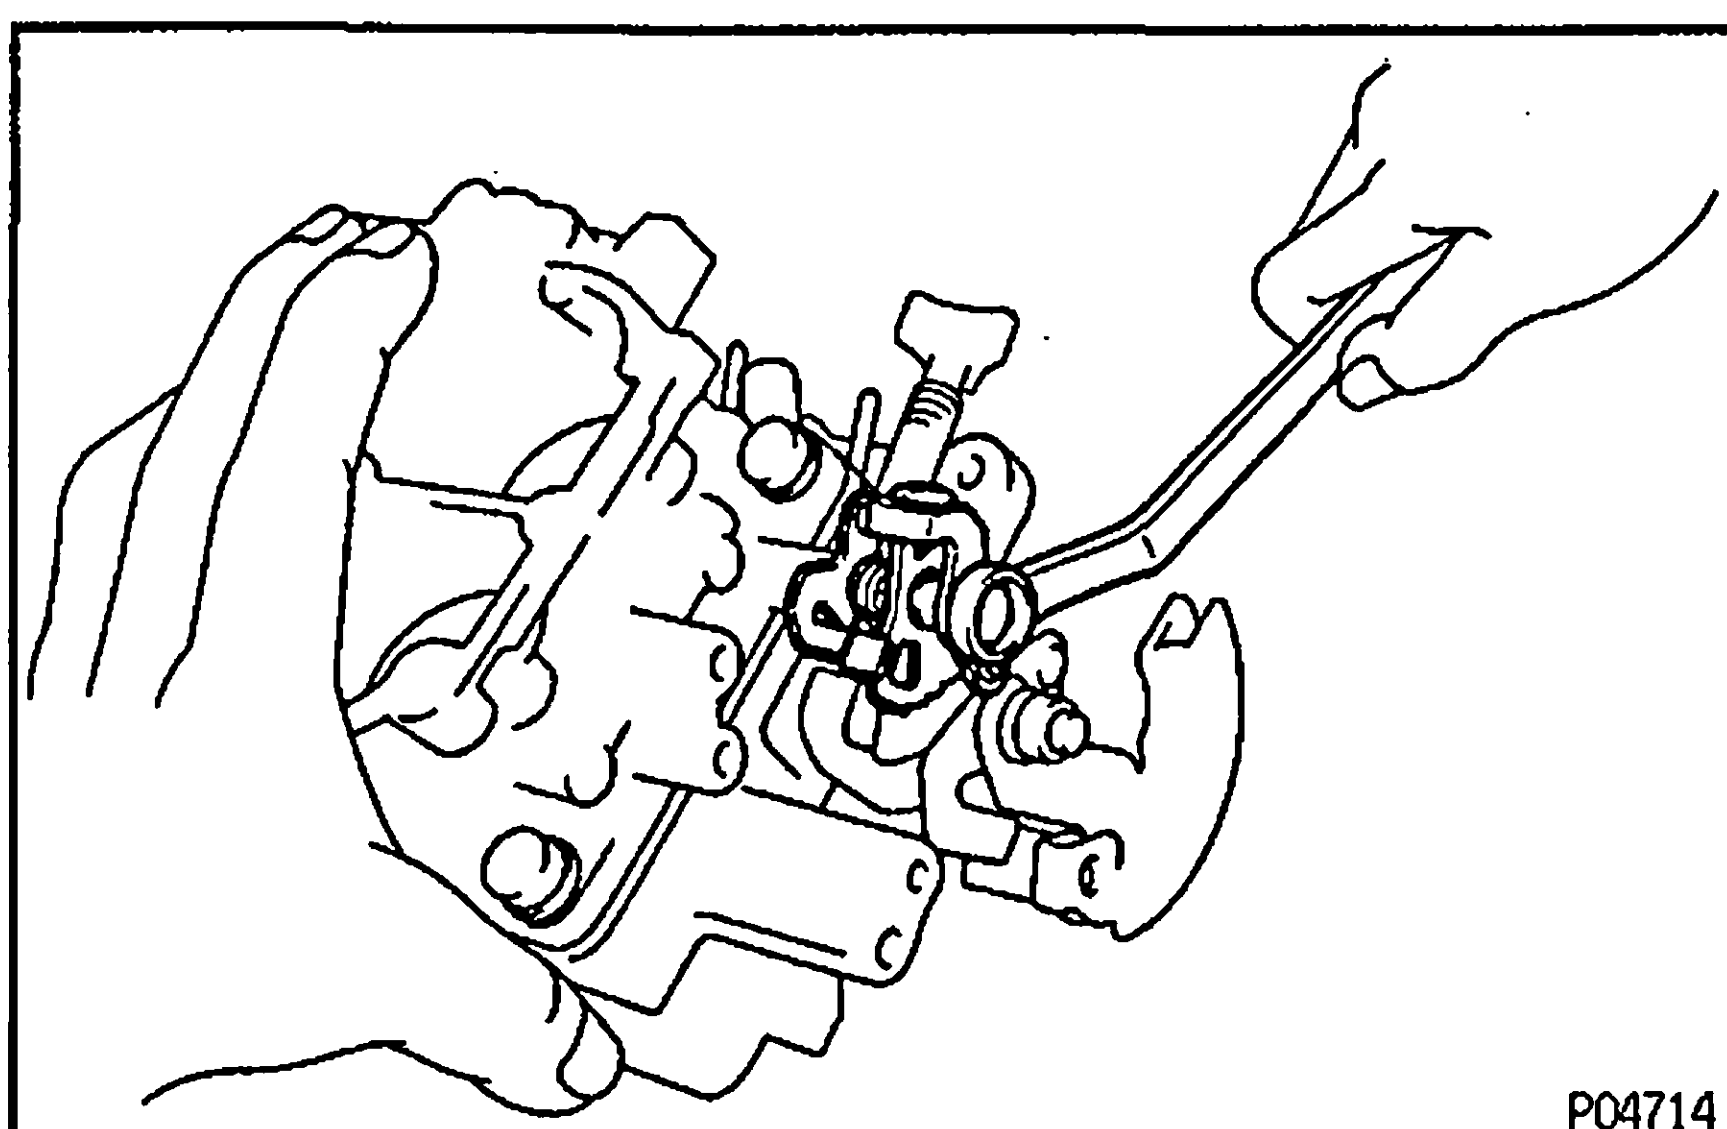


P04714


3. INSTALL FAST IDLE CAM

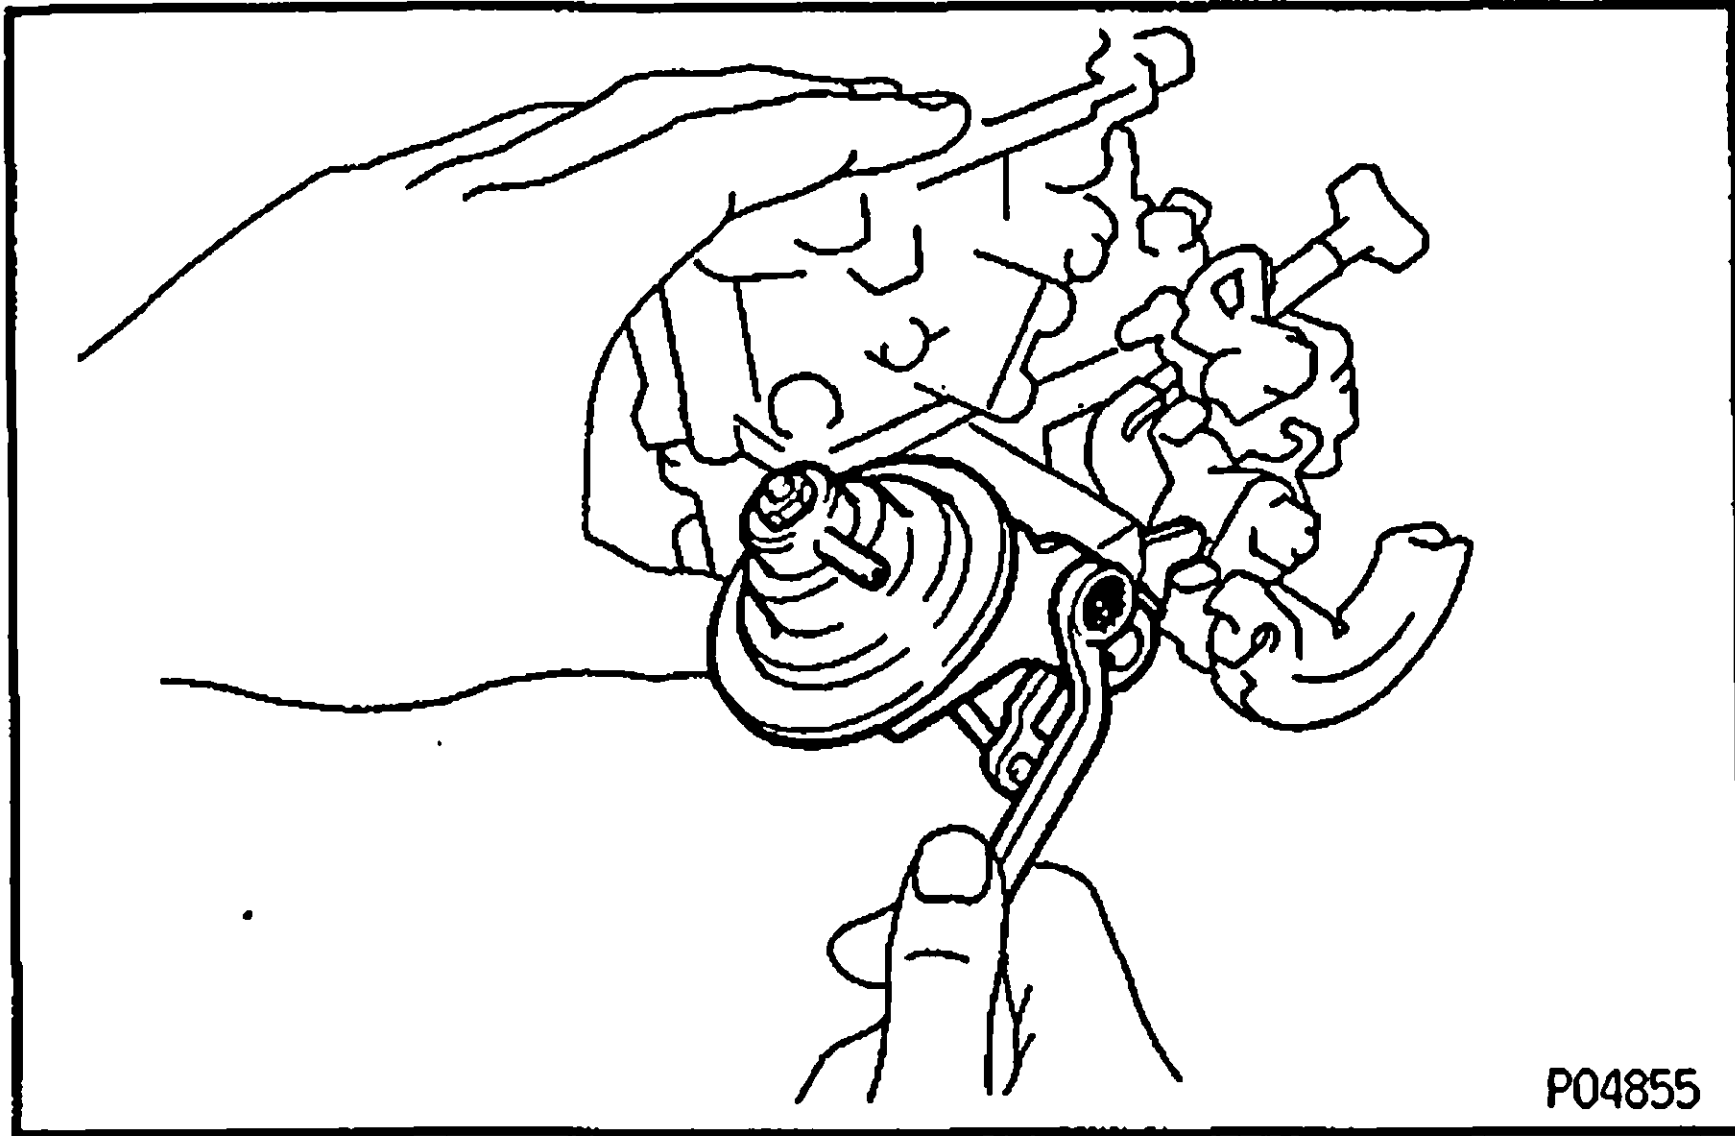**4. INSTALL THROTTLE POSITIONER (TP)**


Install the TP with the two screws.

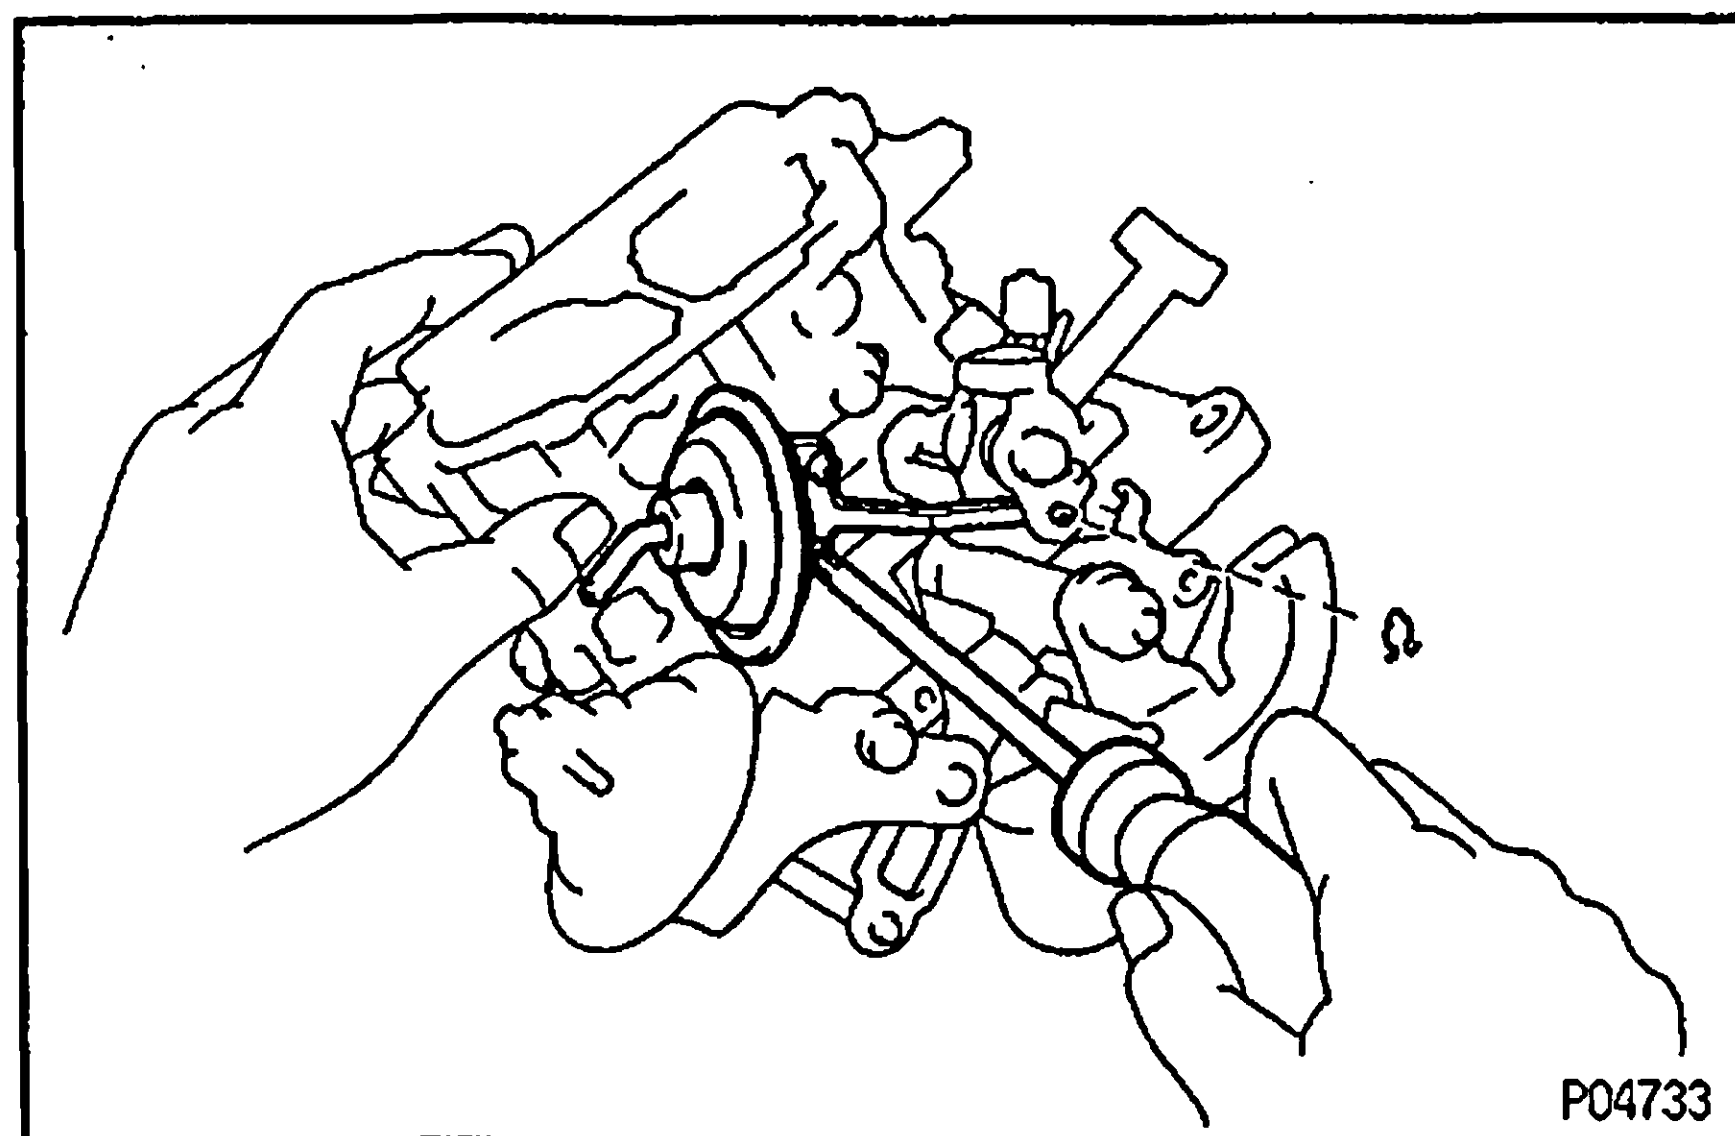**5. INSTALL FAST IDLE CAM BREAKER (FICB)**


- (a) Connect the link, and install the FICB with the two screws.
- (b) Secure the link with the snap ring.

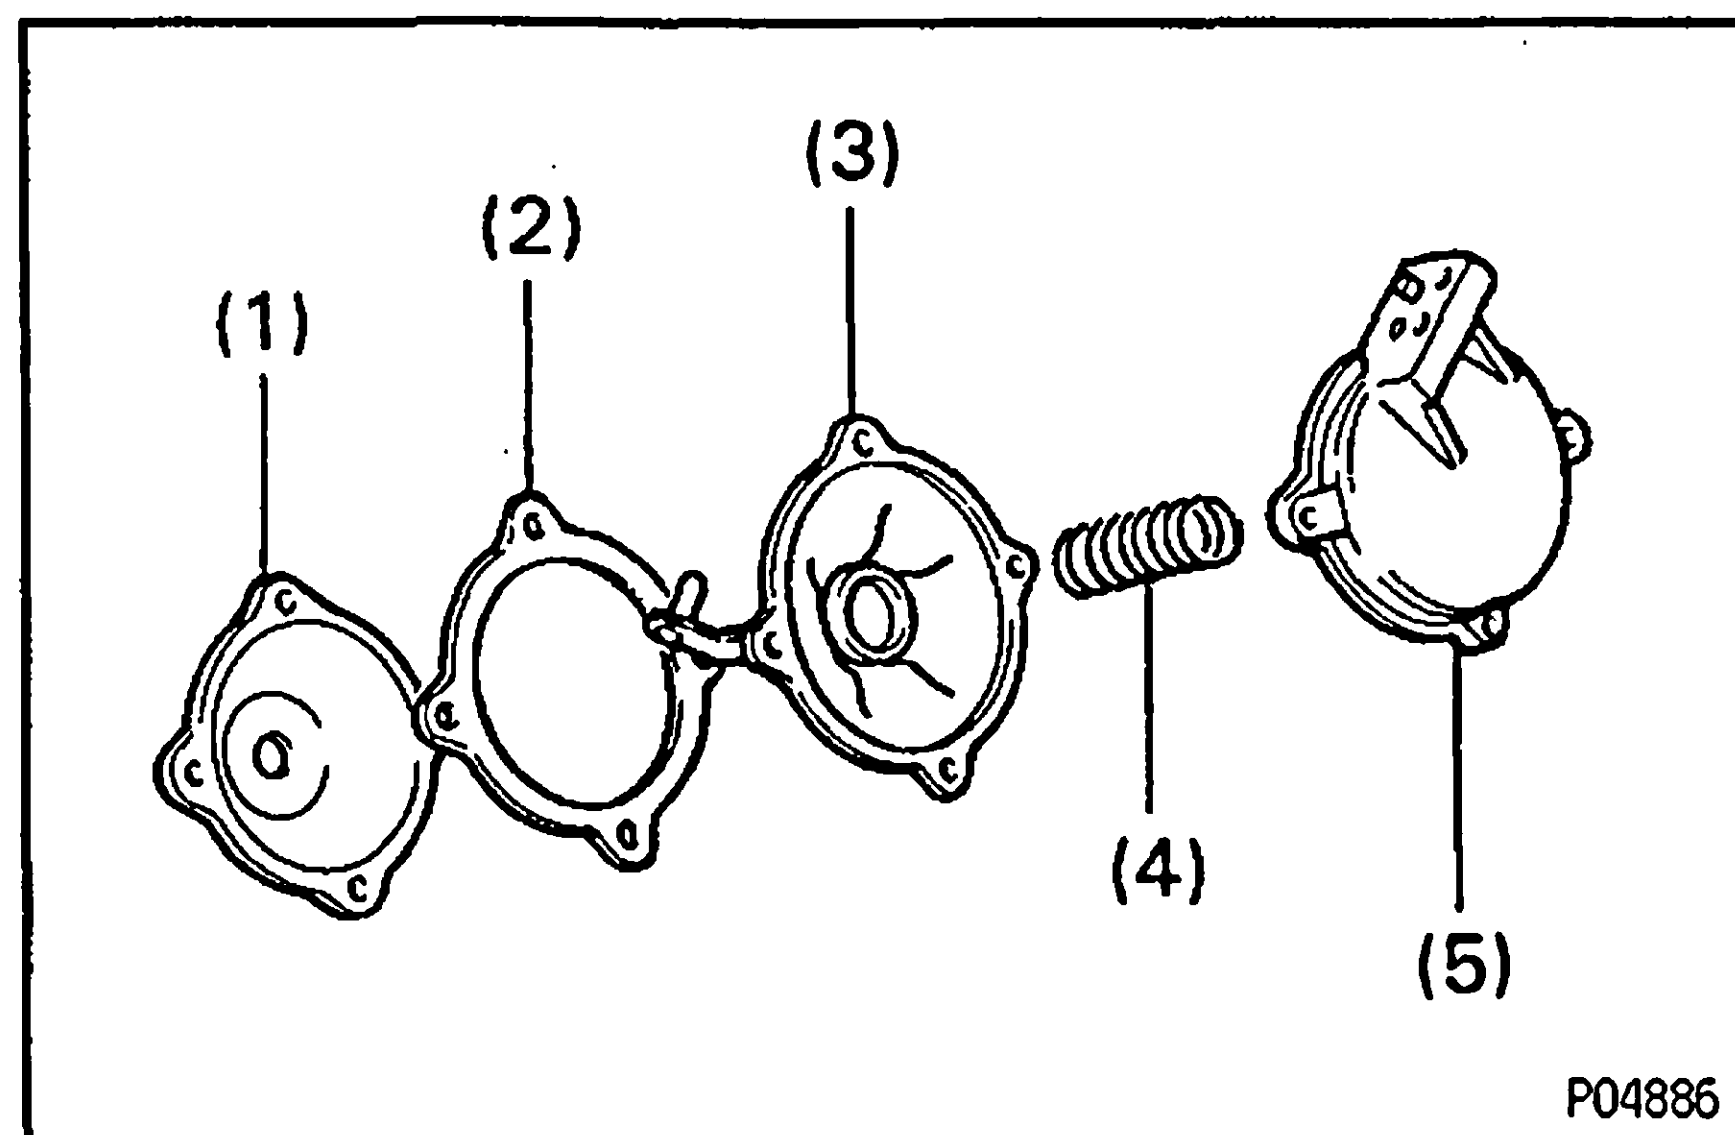**6. INSTALL SECONDARY THROTTLE VALVE DIAPHRAGM**


- (a) Assemble the housing (1), a new gasket (2), the diaphragm (3), spring (4) and cover (5).

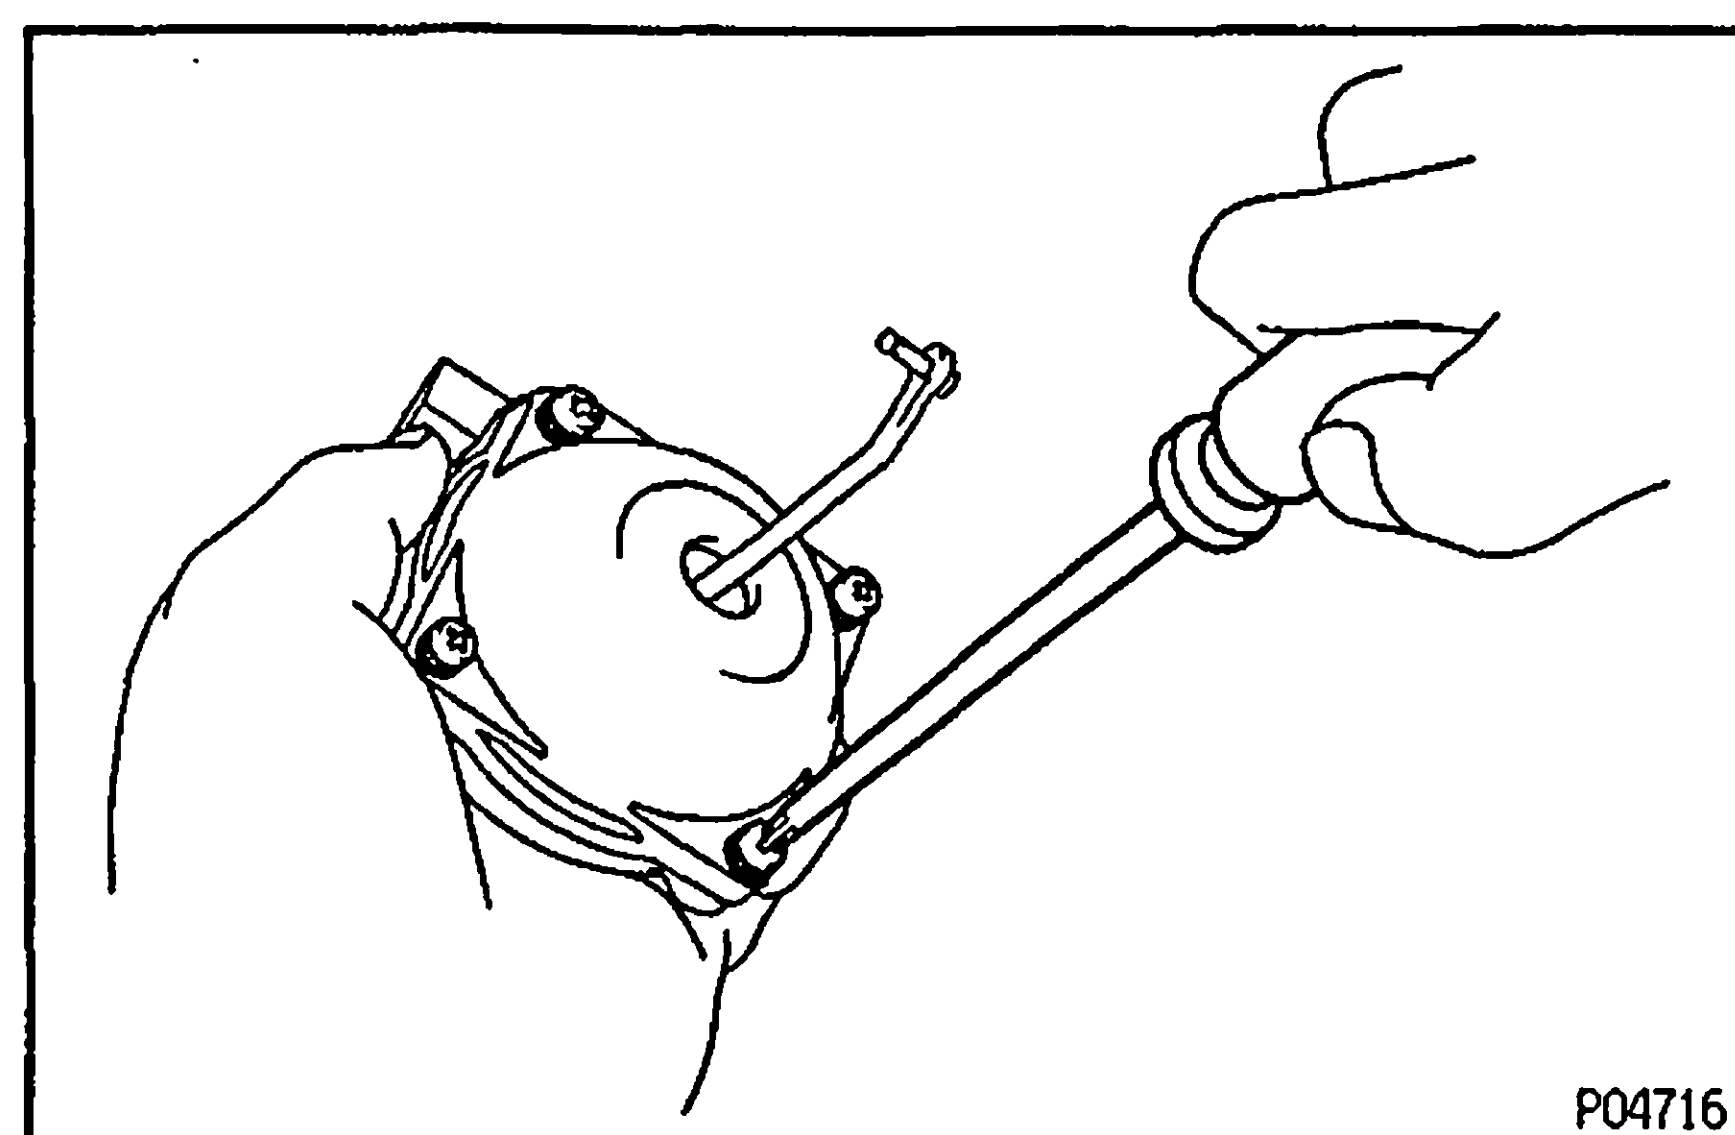


- (b) Install the four screws.

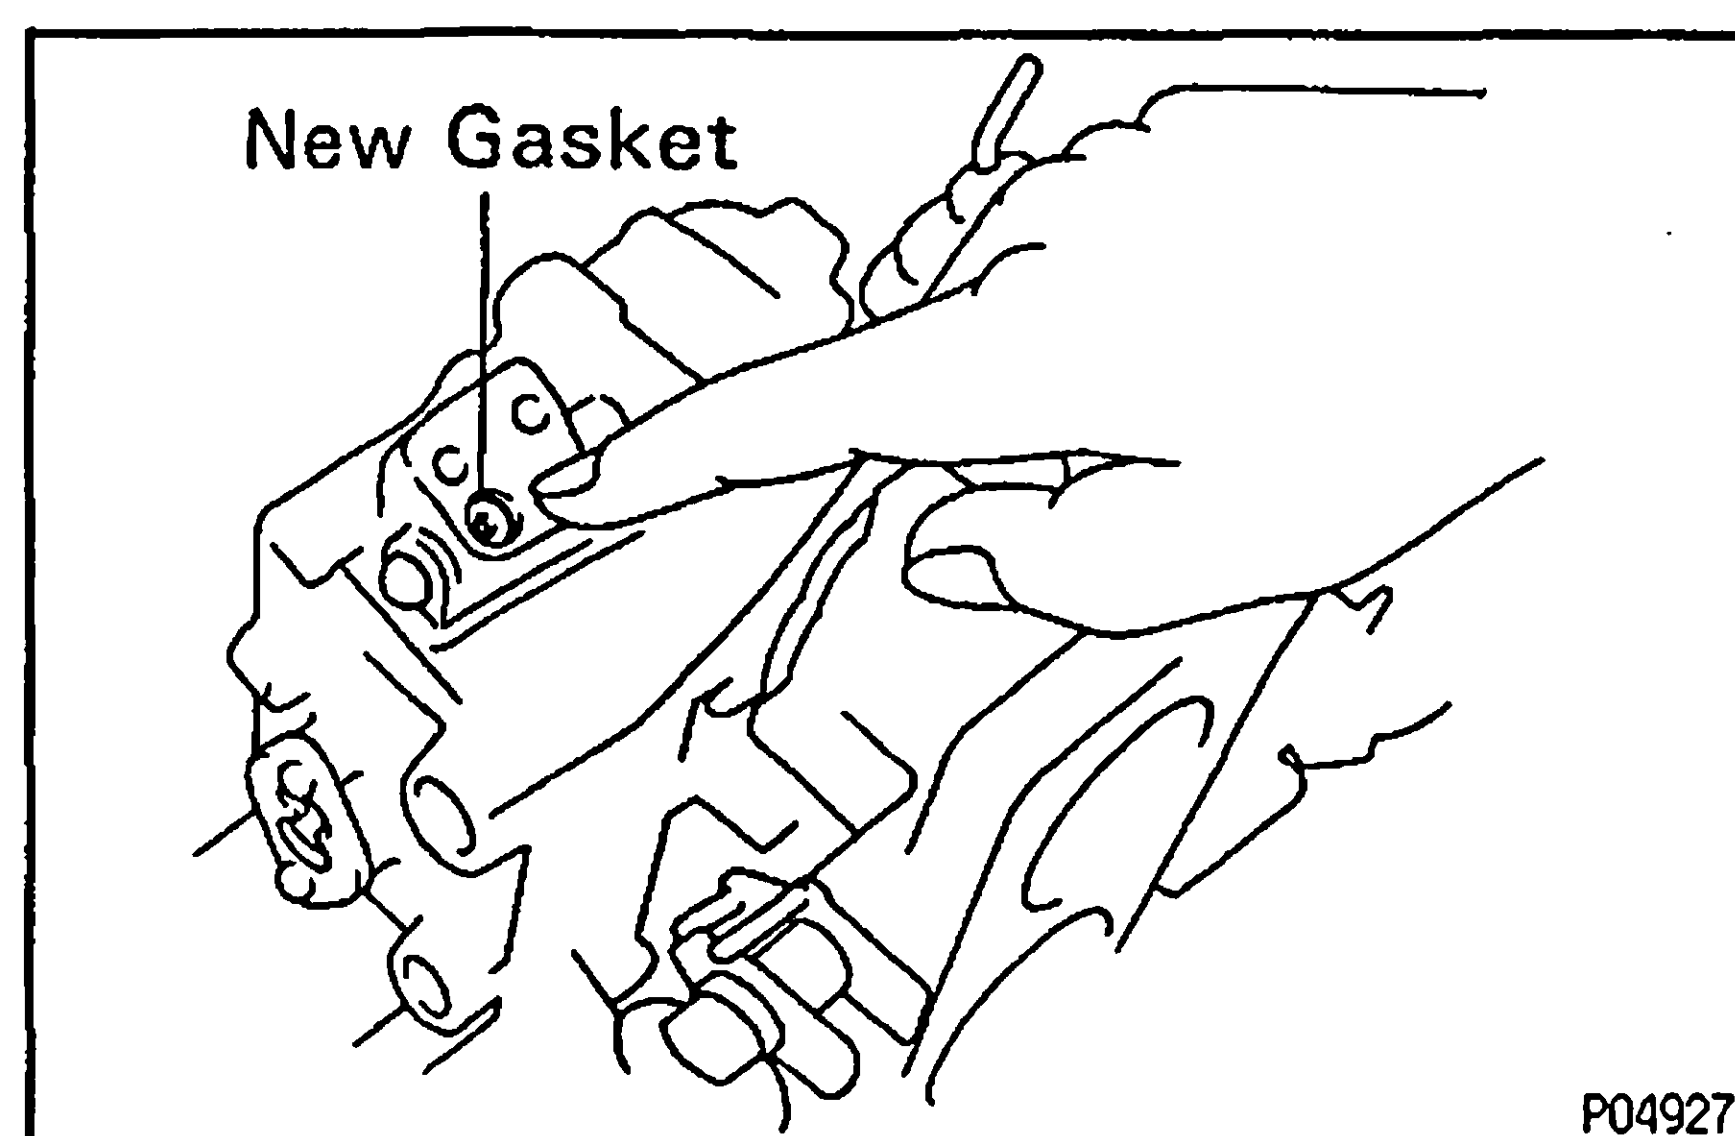

- (c) Place a new gasket in position on the carburetor body.

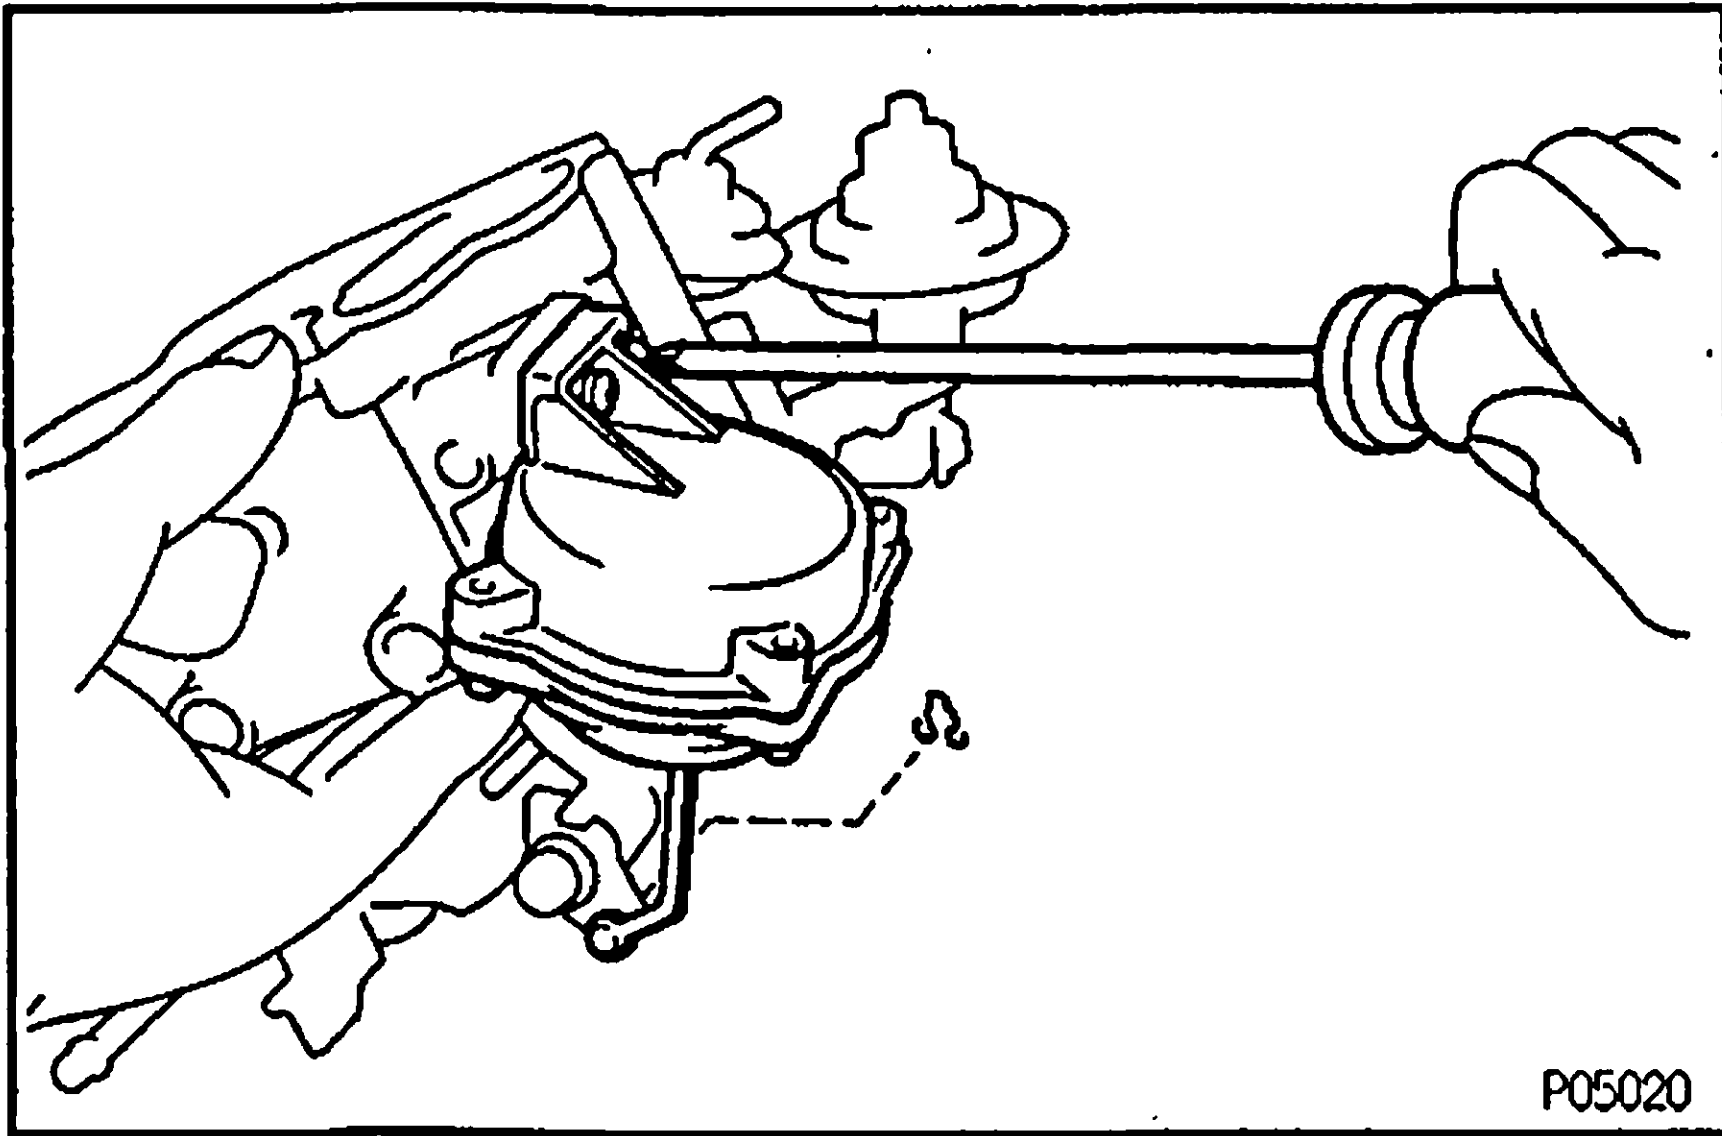


- (d) Install the throttle valve diaphragm with the two screws.
- (e) Connect the diaphragm link with the snap ring.

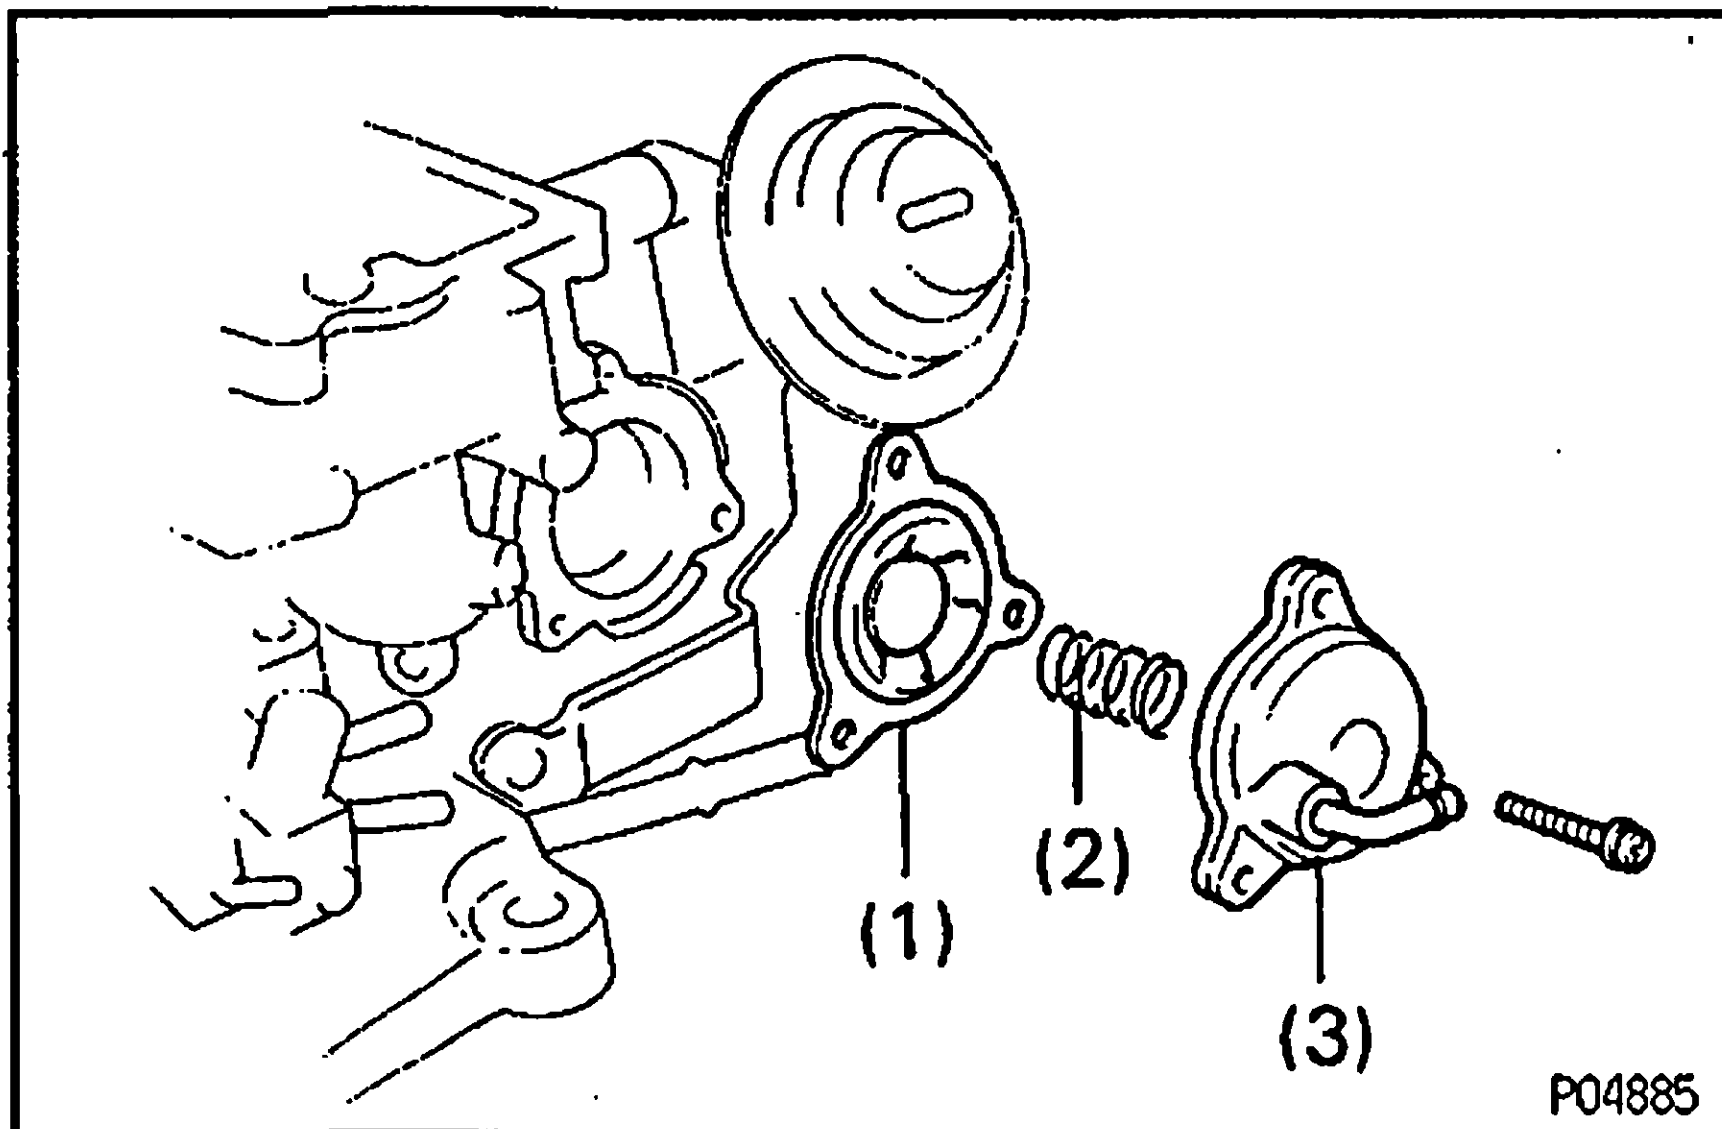

7. INSTALL AUXILIARY ACCELERATION PUMP (AAP)


Install the following parts with the three screws.

- (1) Diaphragm
- (2) Spring
- (3) Cover

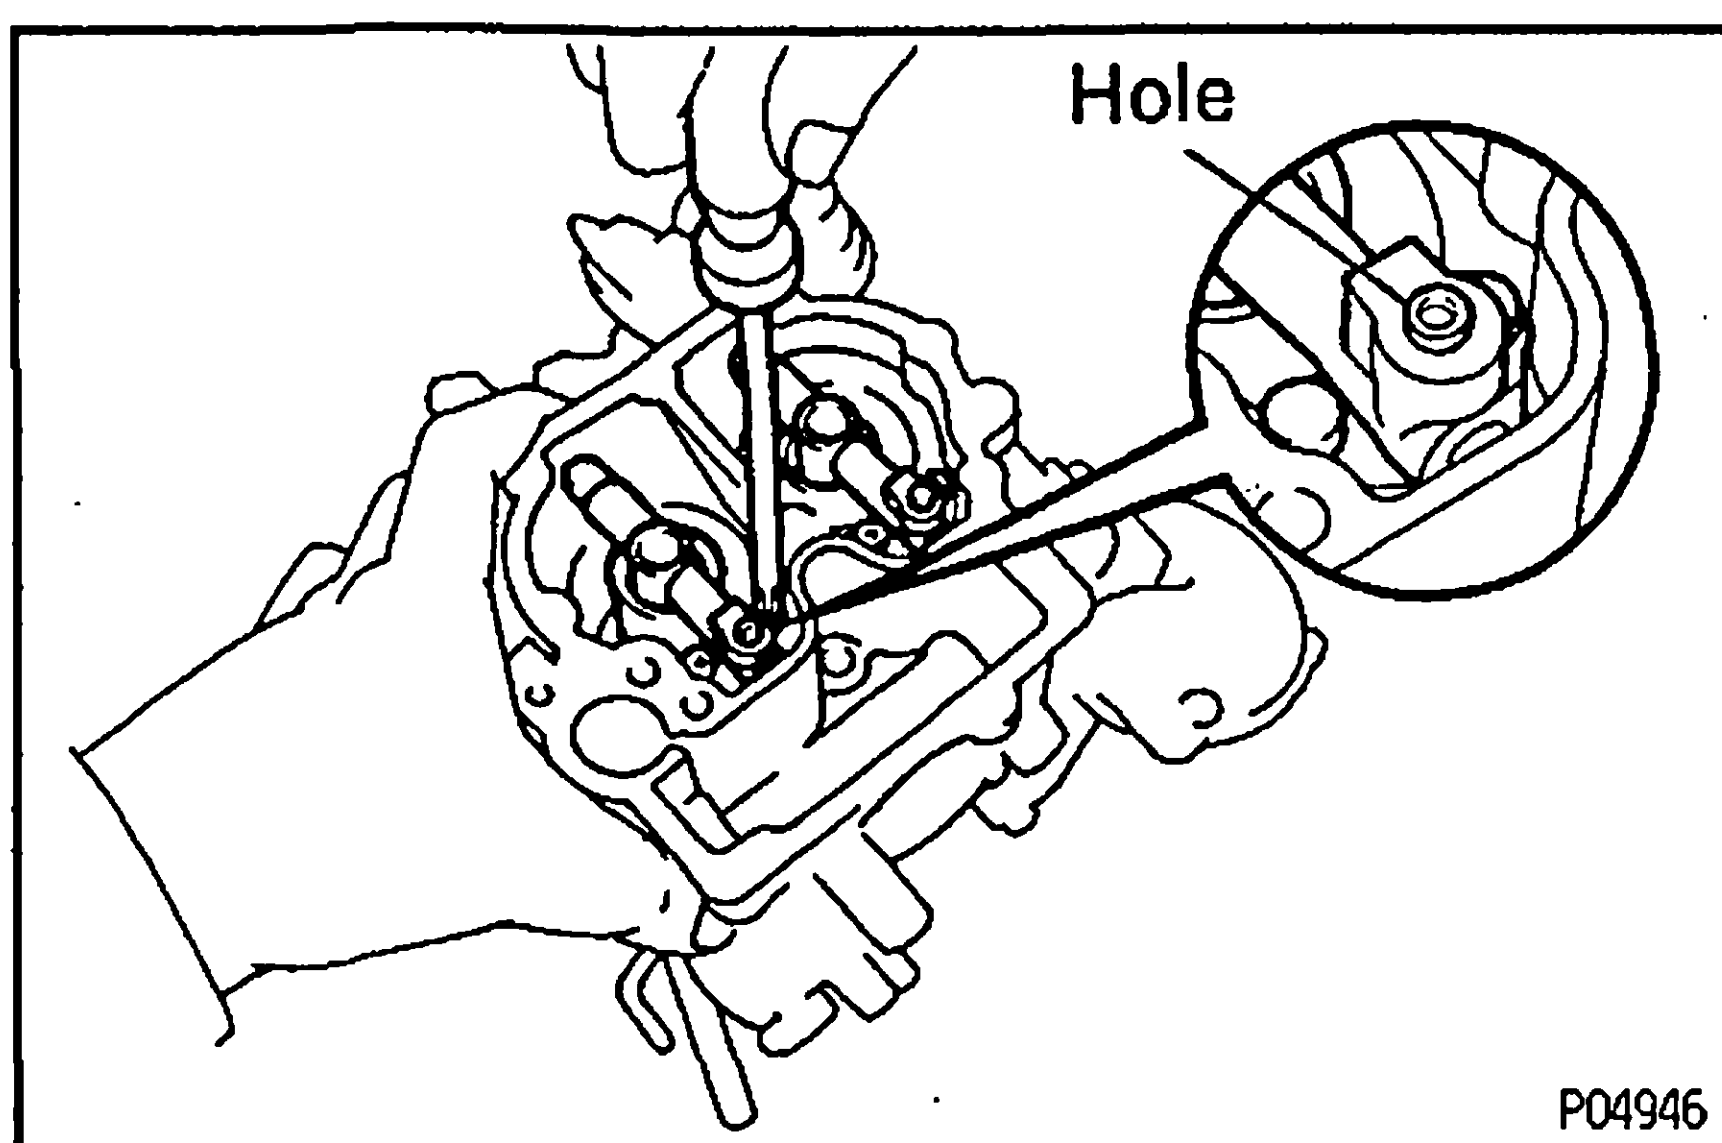


8. INSTALL SMALL VENTURIES

- (a) Install a new gasket and the primary venturi with the two screws.
- (b) Install a new gasket and the secondary venturi with the two screws.

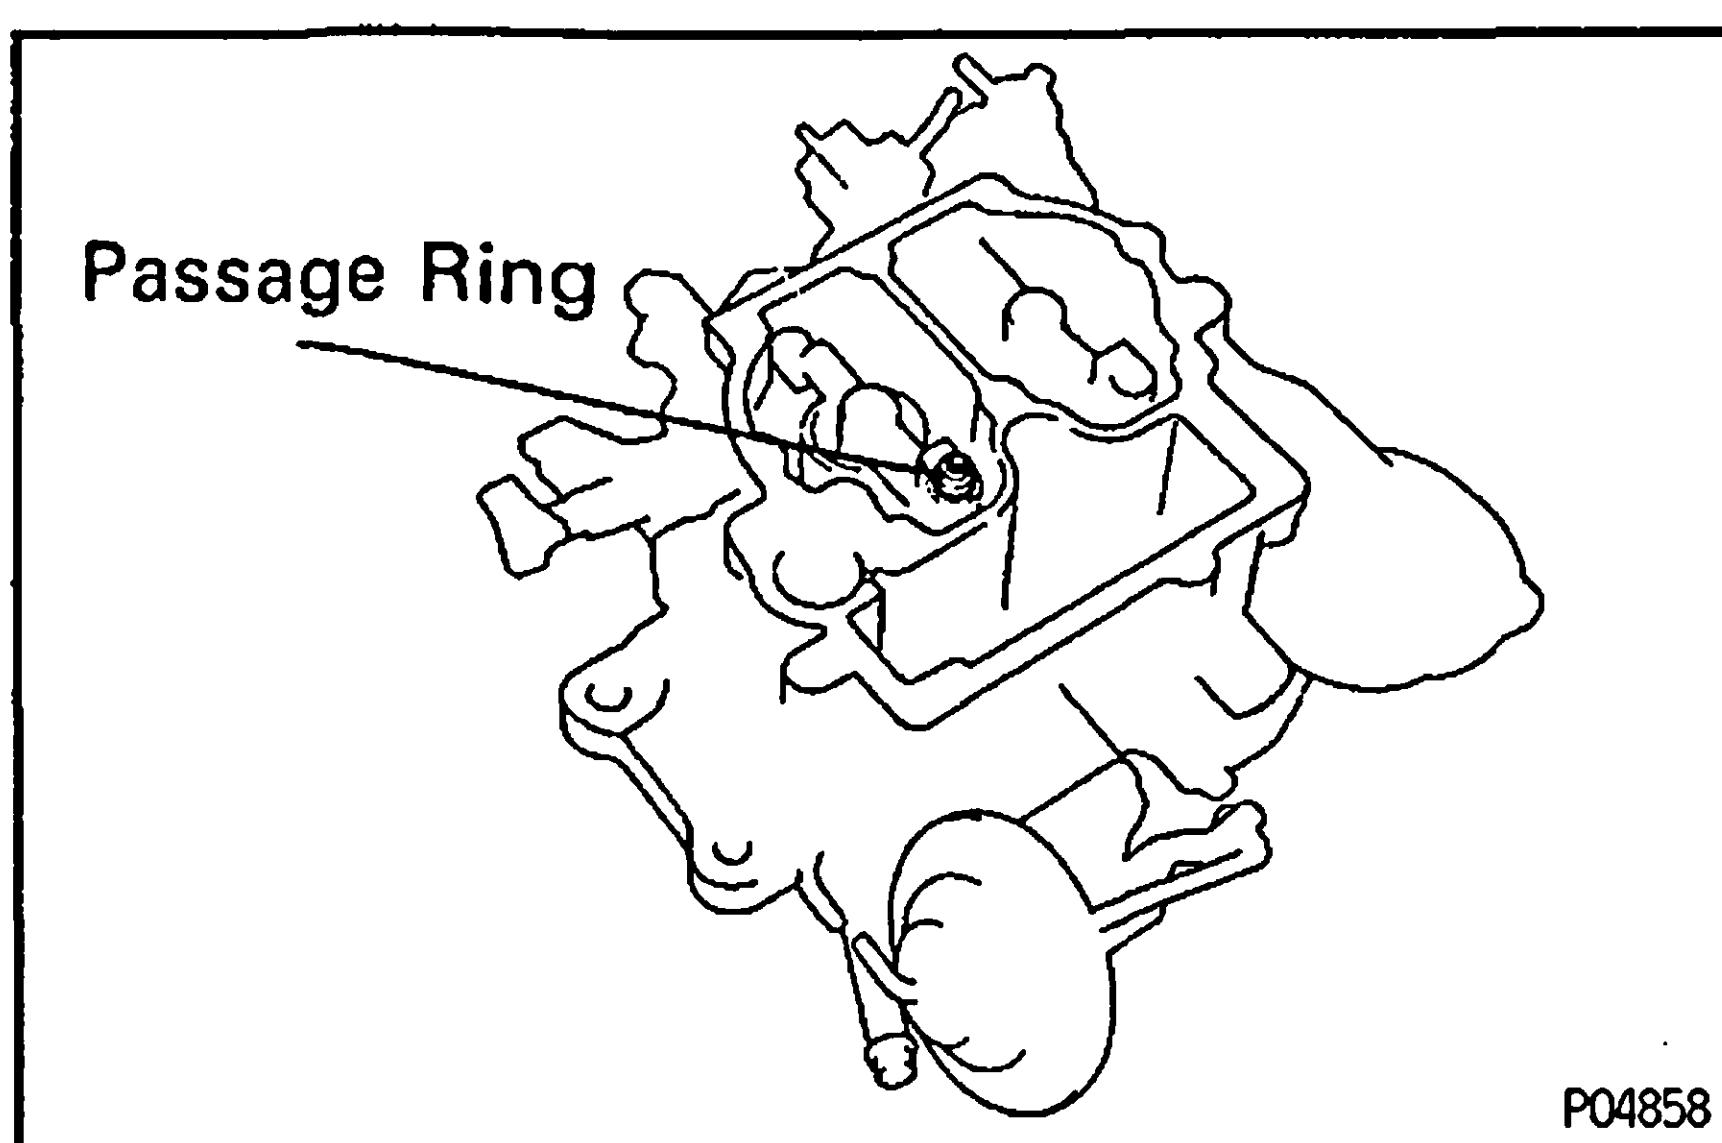

- (c) Install the passage ring.

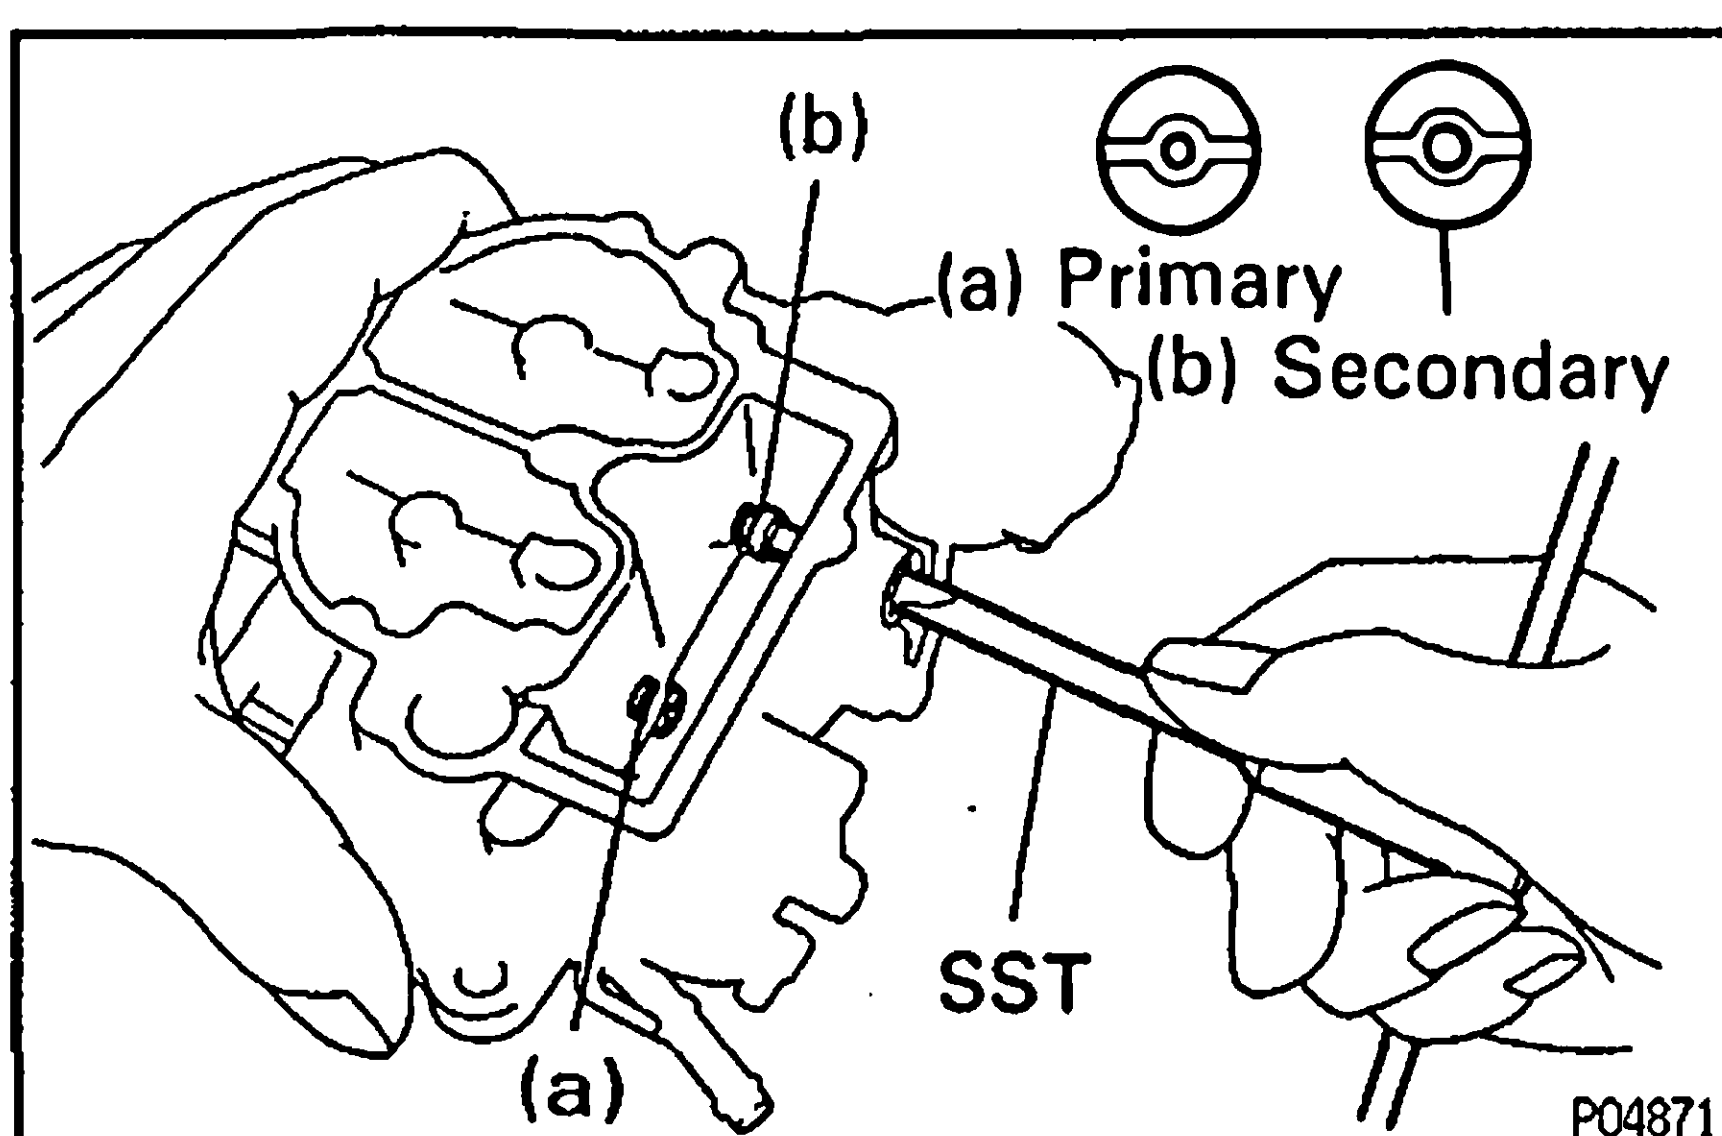


9. INSTALL PRIMARY AND SECONDARY MAIN JETS

- (a) Install the primary and secondary main jets with new gaskets.




- (b) Install the primary and secondary passage plugs with new gaskets.

EG

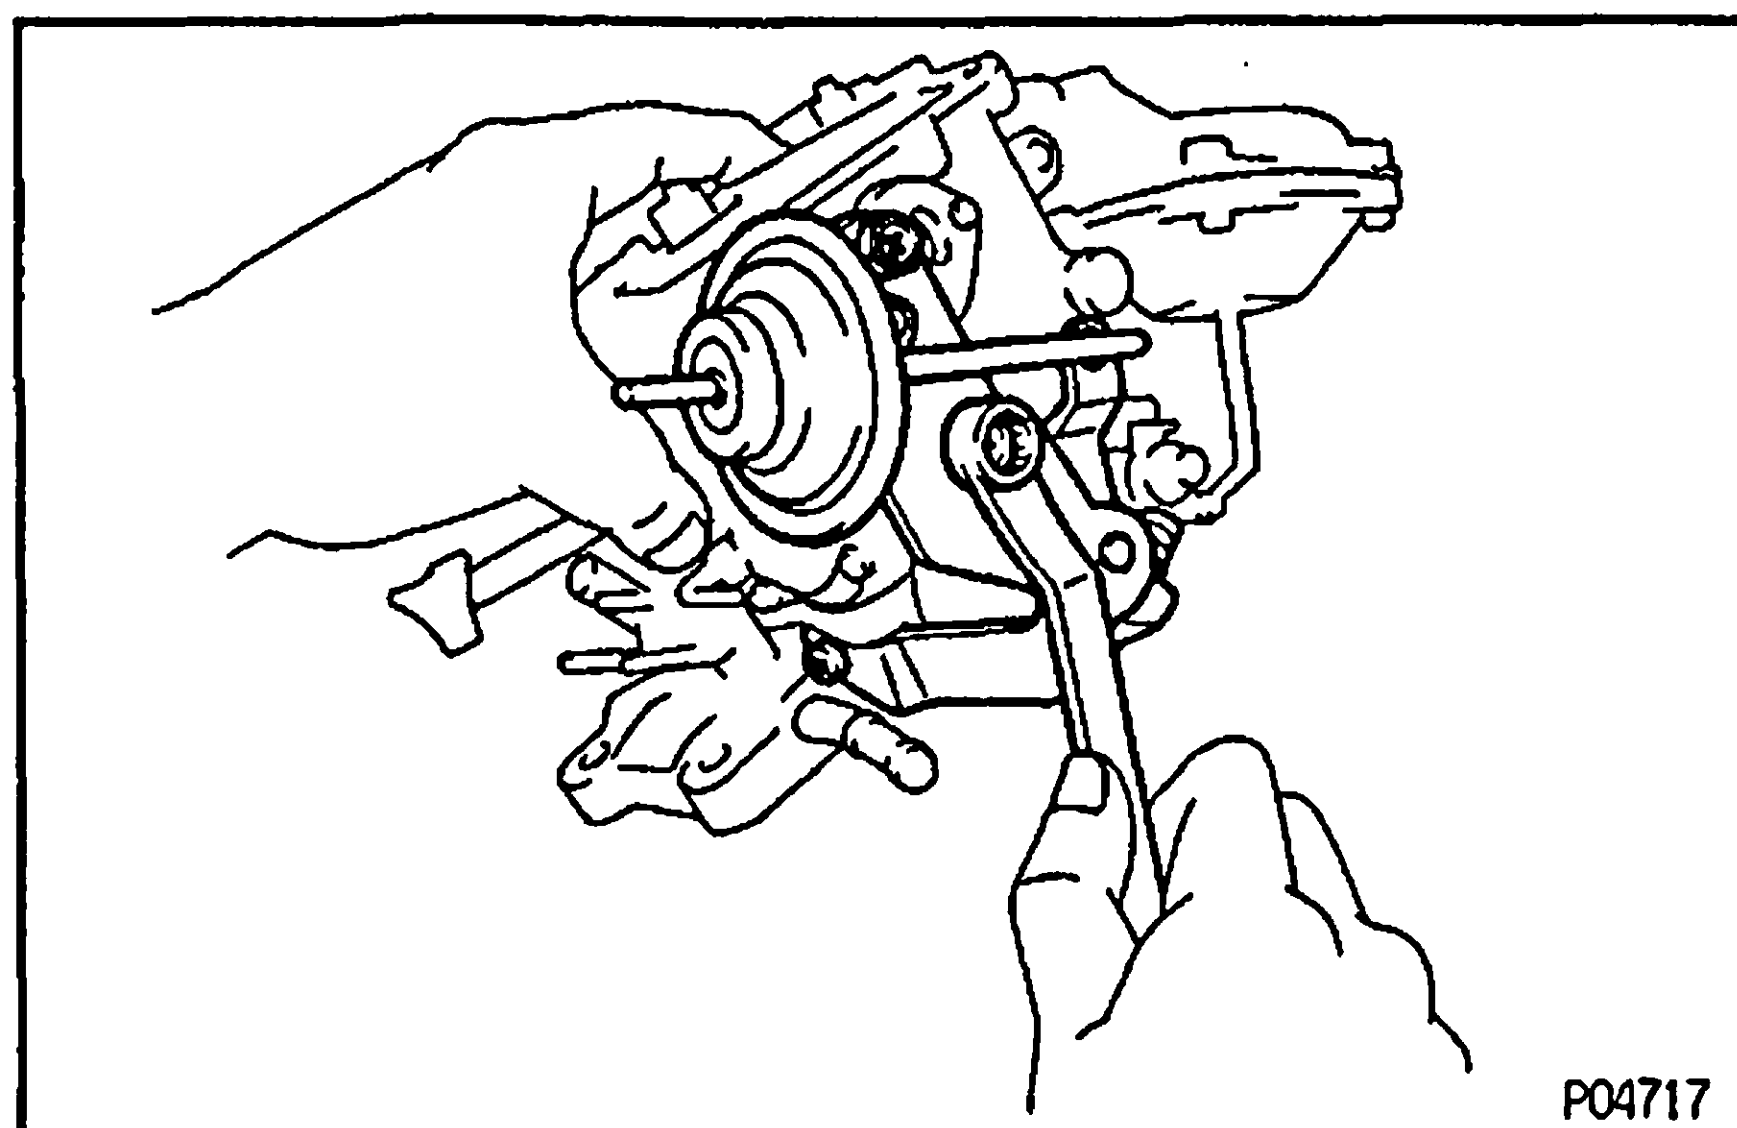


10. INSTALL DASH POT (DP)

Install the DP with the three screws.

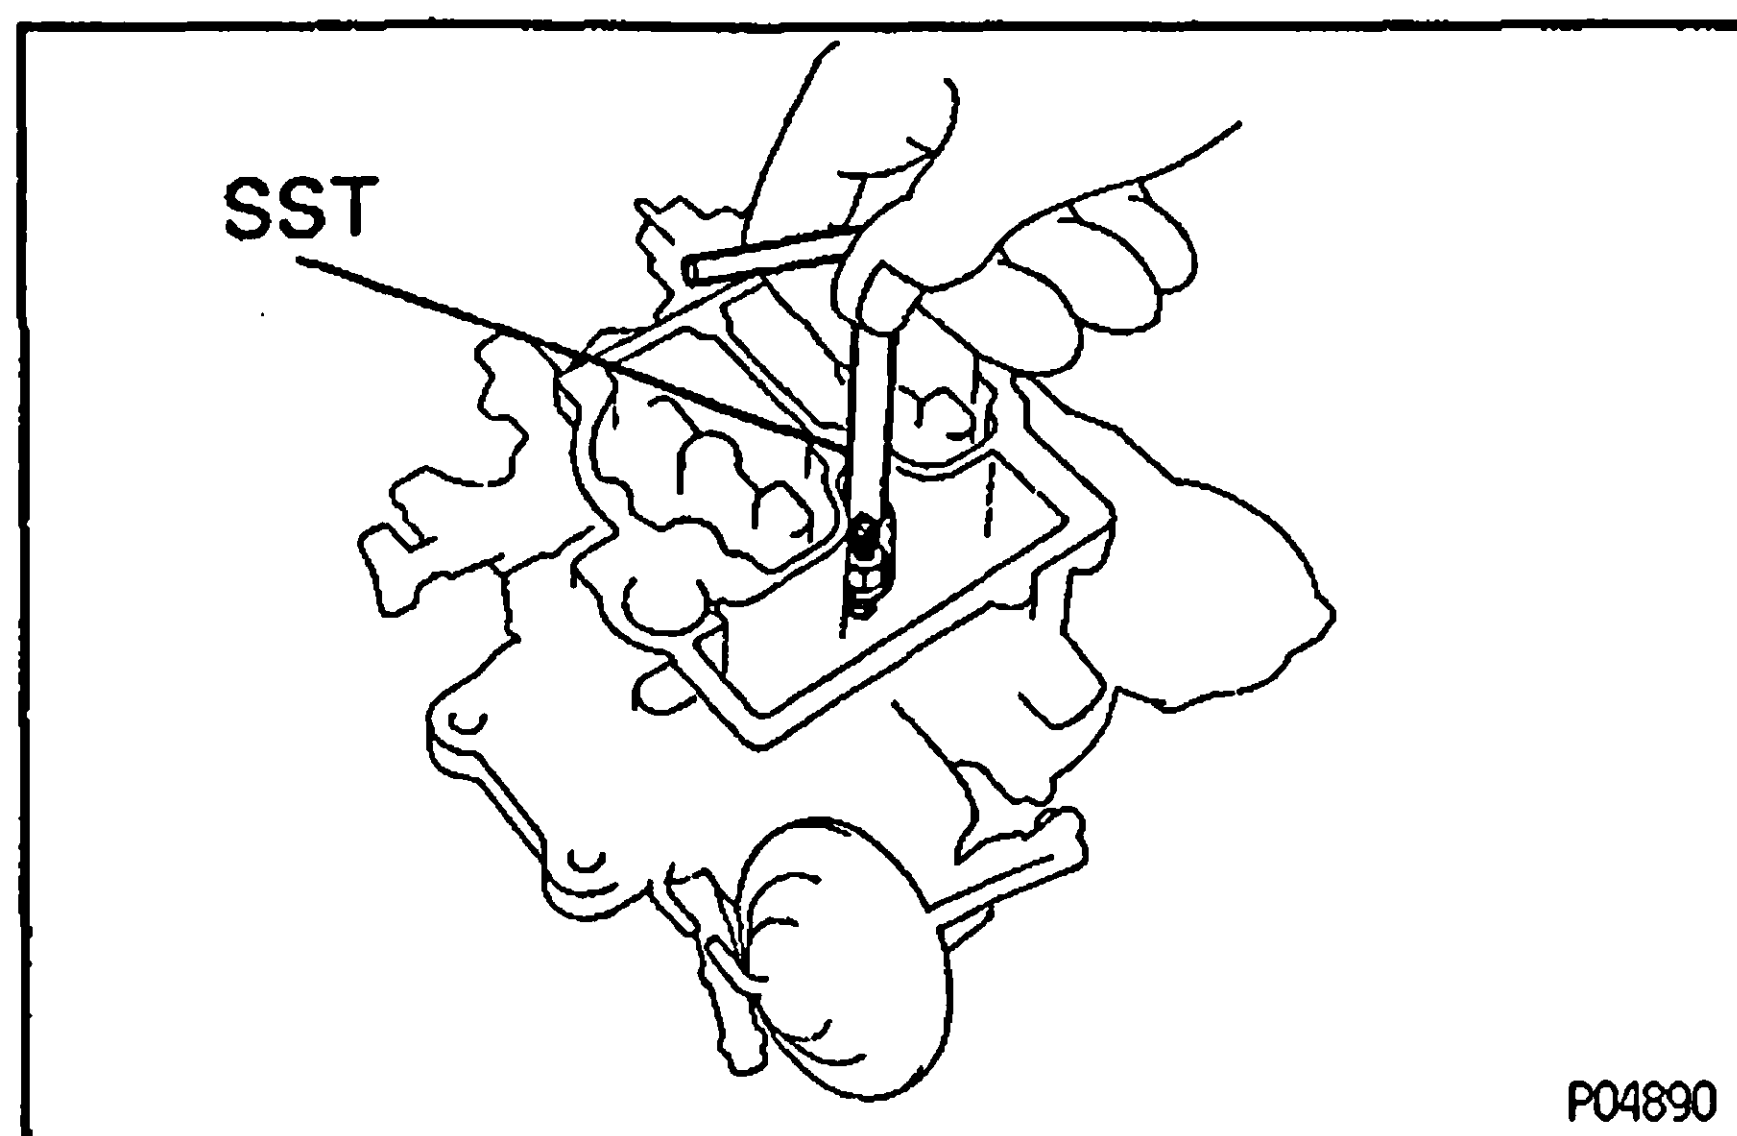


11. INSTALL POWER VALVE

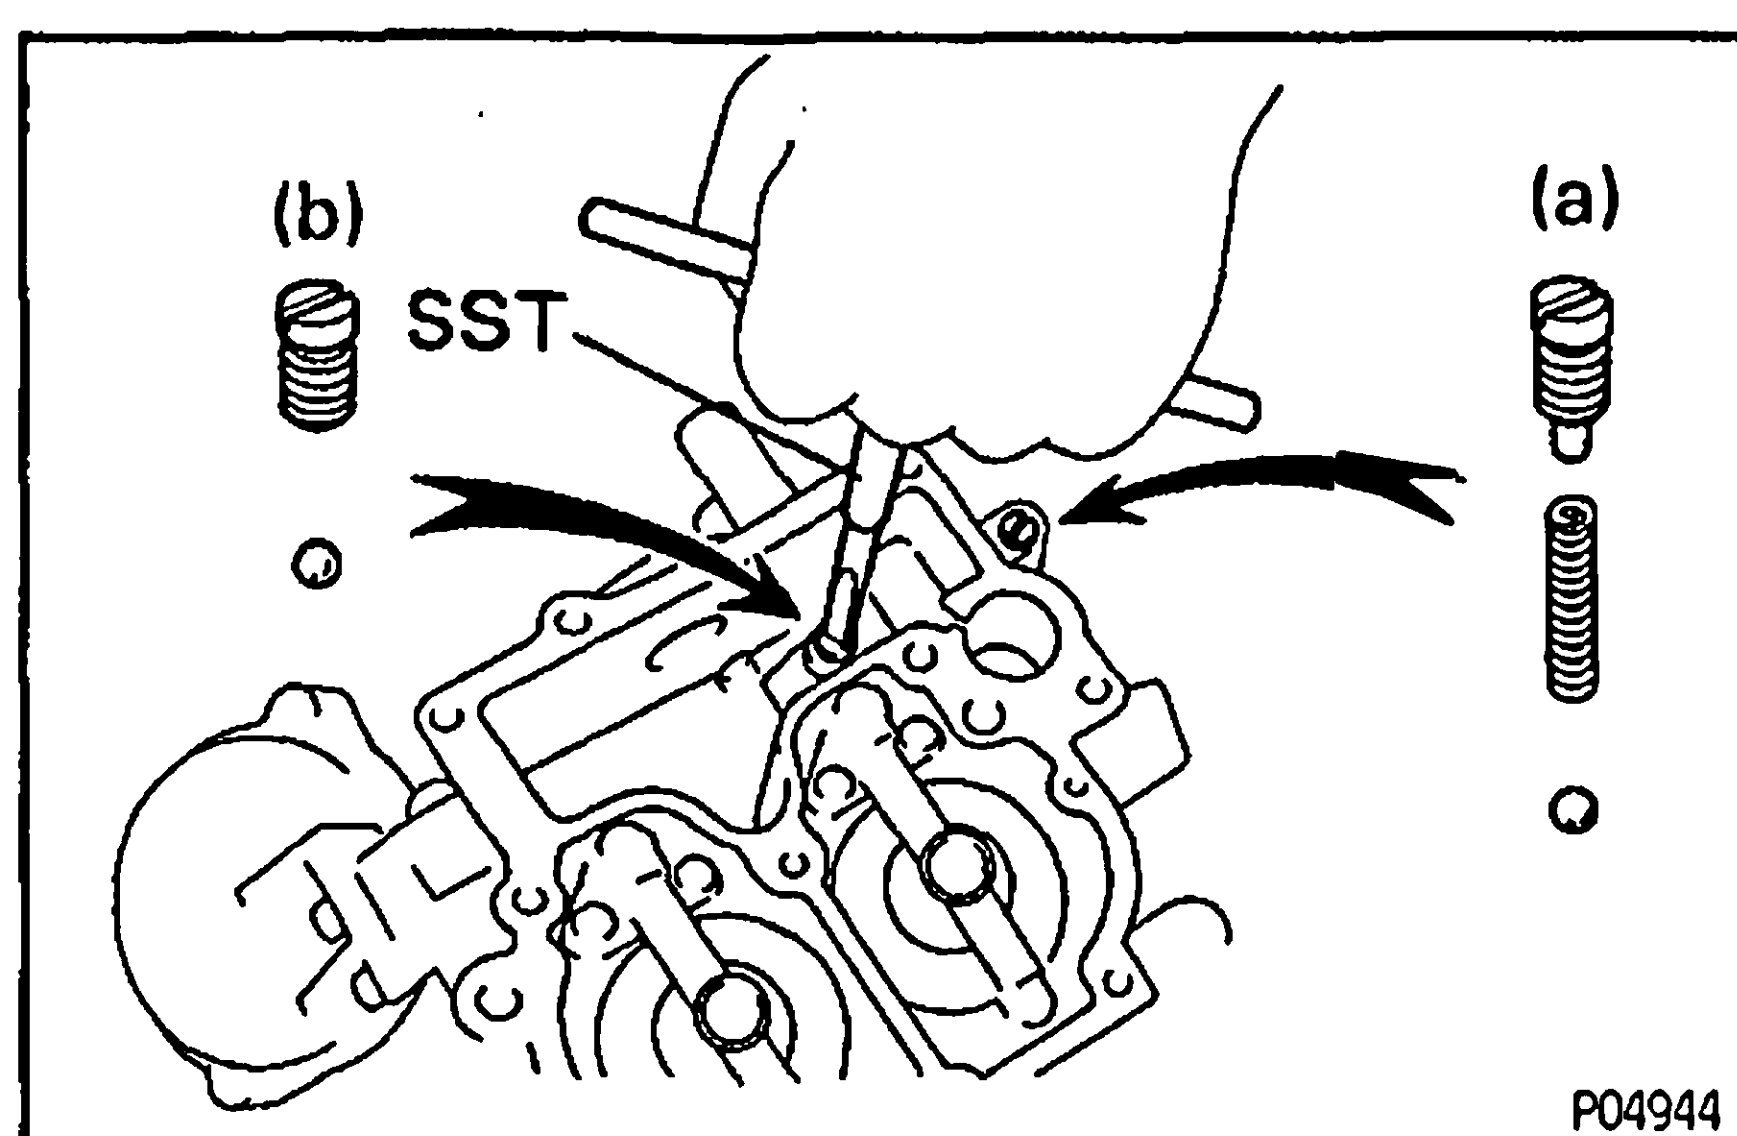

12. INSTALL CHACK BALLS FOR AUXILIARY ACCELERATION PUMP (AAP)


- (a) Install the ball, spring and plug.
(b) Install the ball and plug.

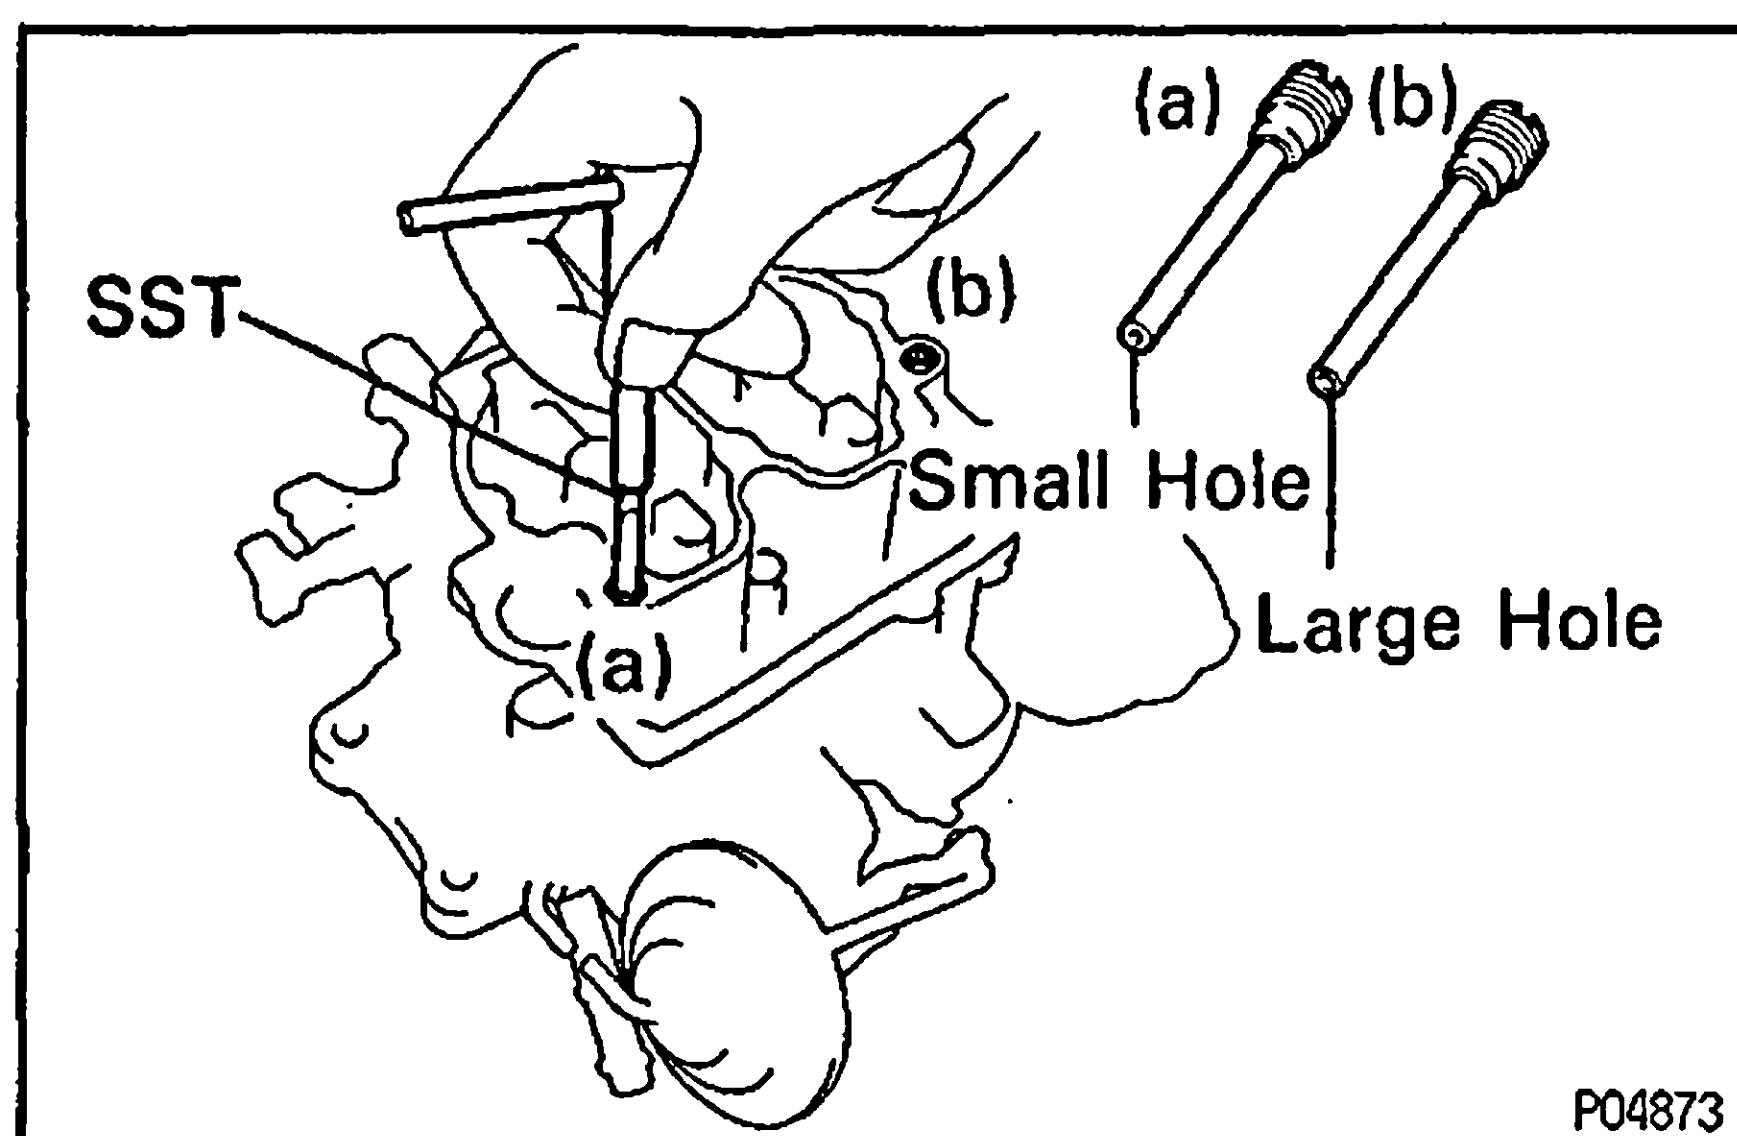


13. INSTALL SLOW JETS

- (a) Install the primary slow jet.
(b) Install the secondary slow jet.


EG

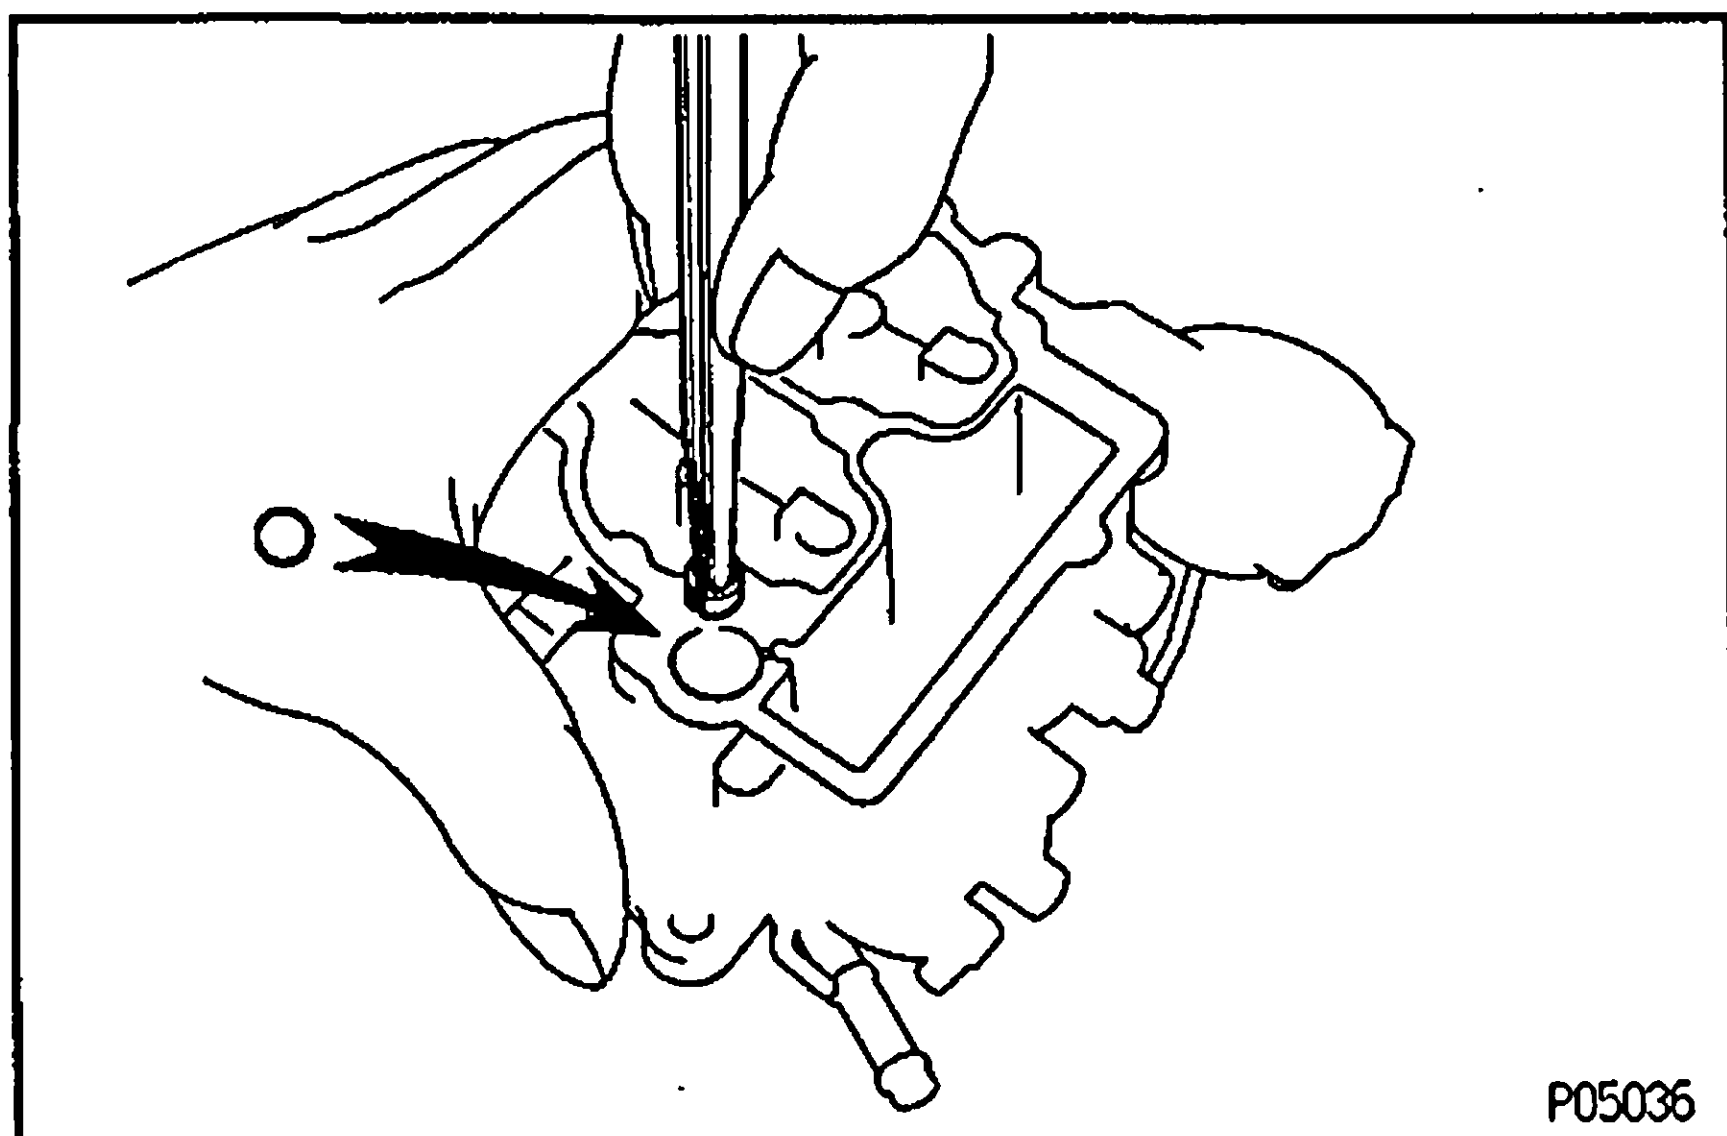**14. INSTALL CHECK BALLS FOR ACCELERATION**

- (a) Install the plunger small ball.
- (b) Using tweezers, install the ball retainer.

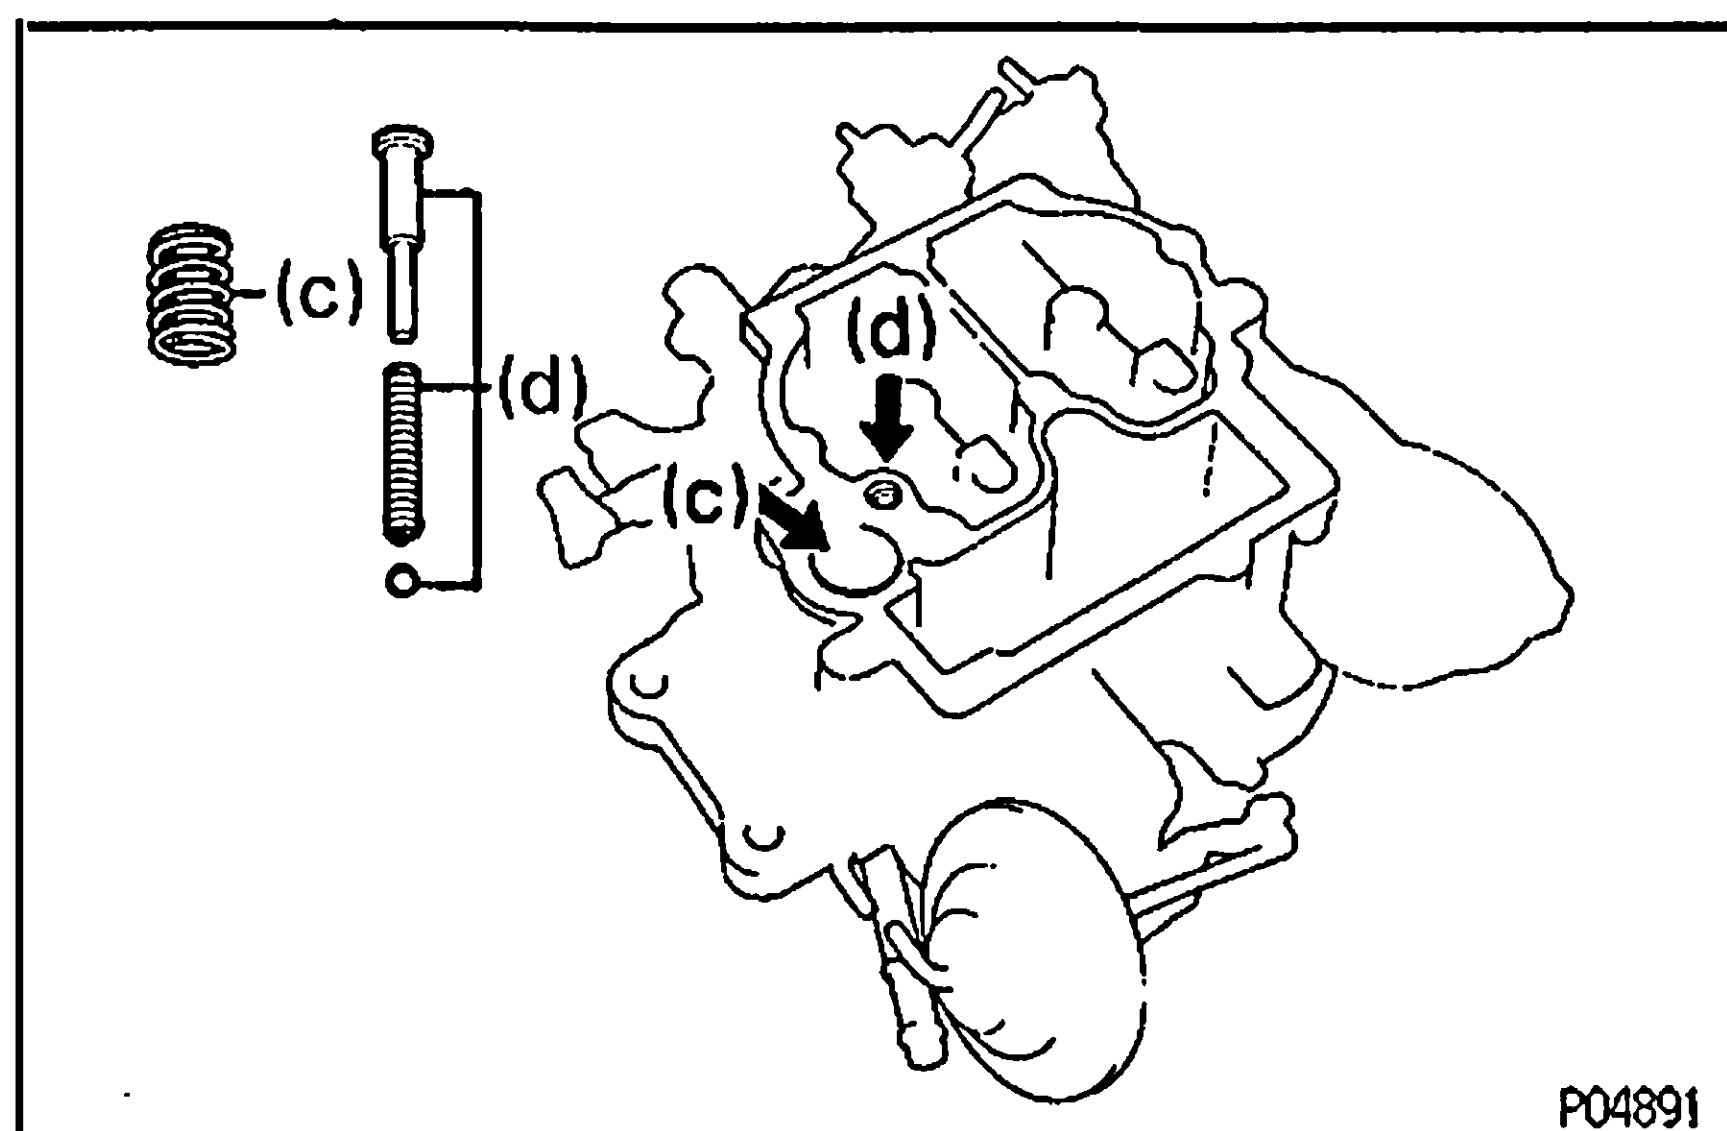

- (c) Install the plunger spring.
- (d) Install the pump discharge large ball, spring and weight.

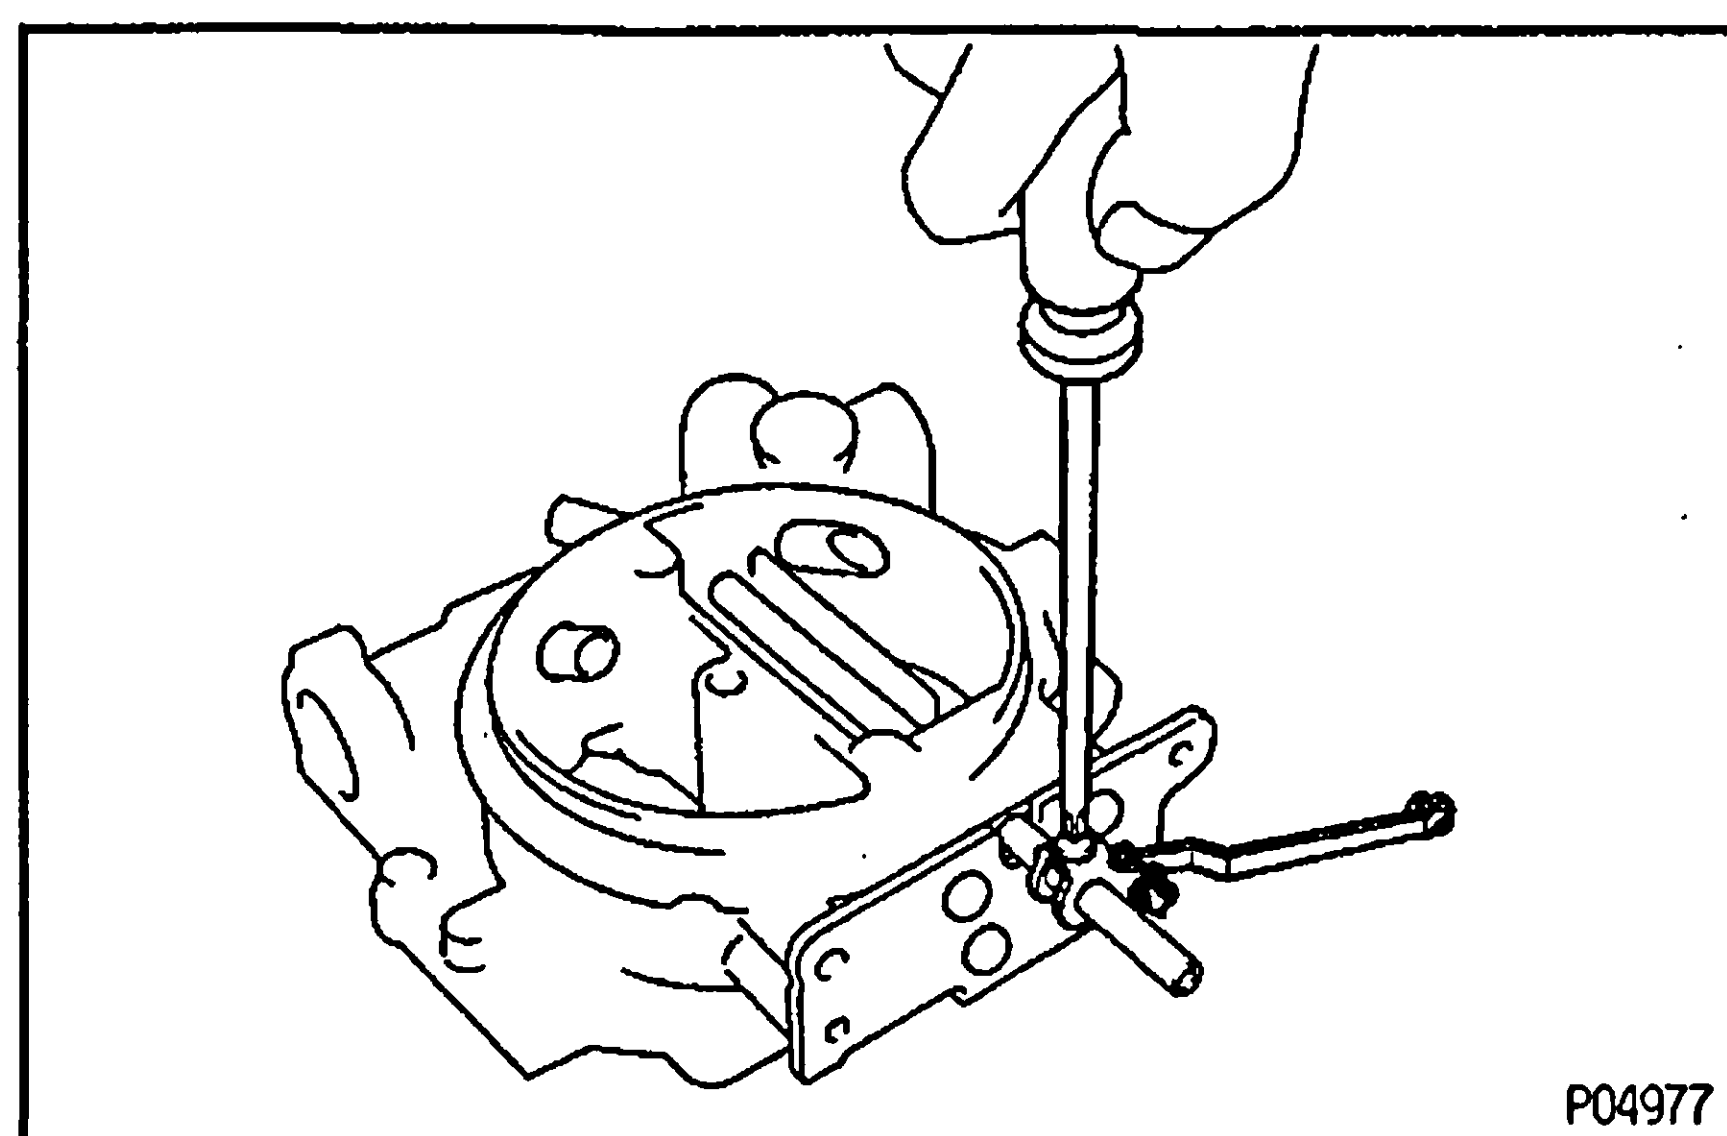
**Air Horn Assembly**

EG0UK-01


(See page EG-140)

1. INSTALL FAST IDLE CAM BREAKER (FICB) LINK


Install the FICB link with the screw.

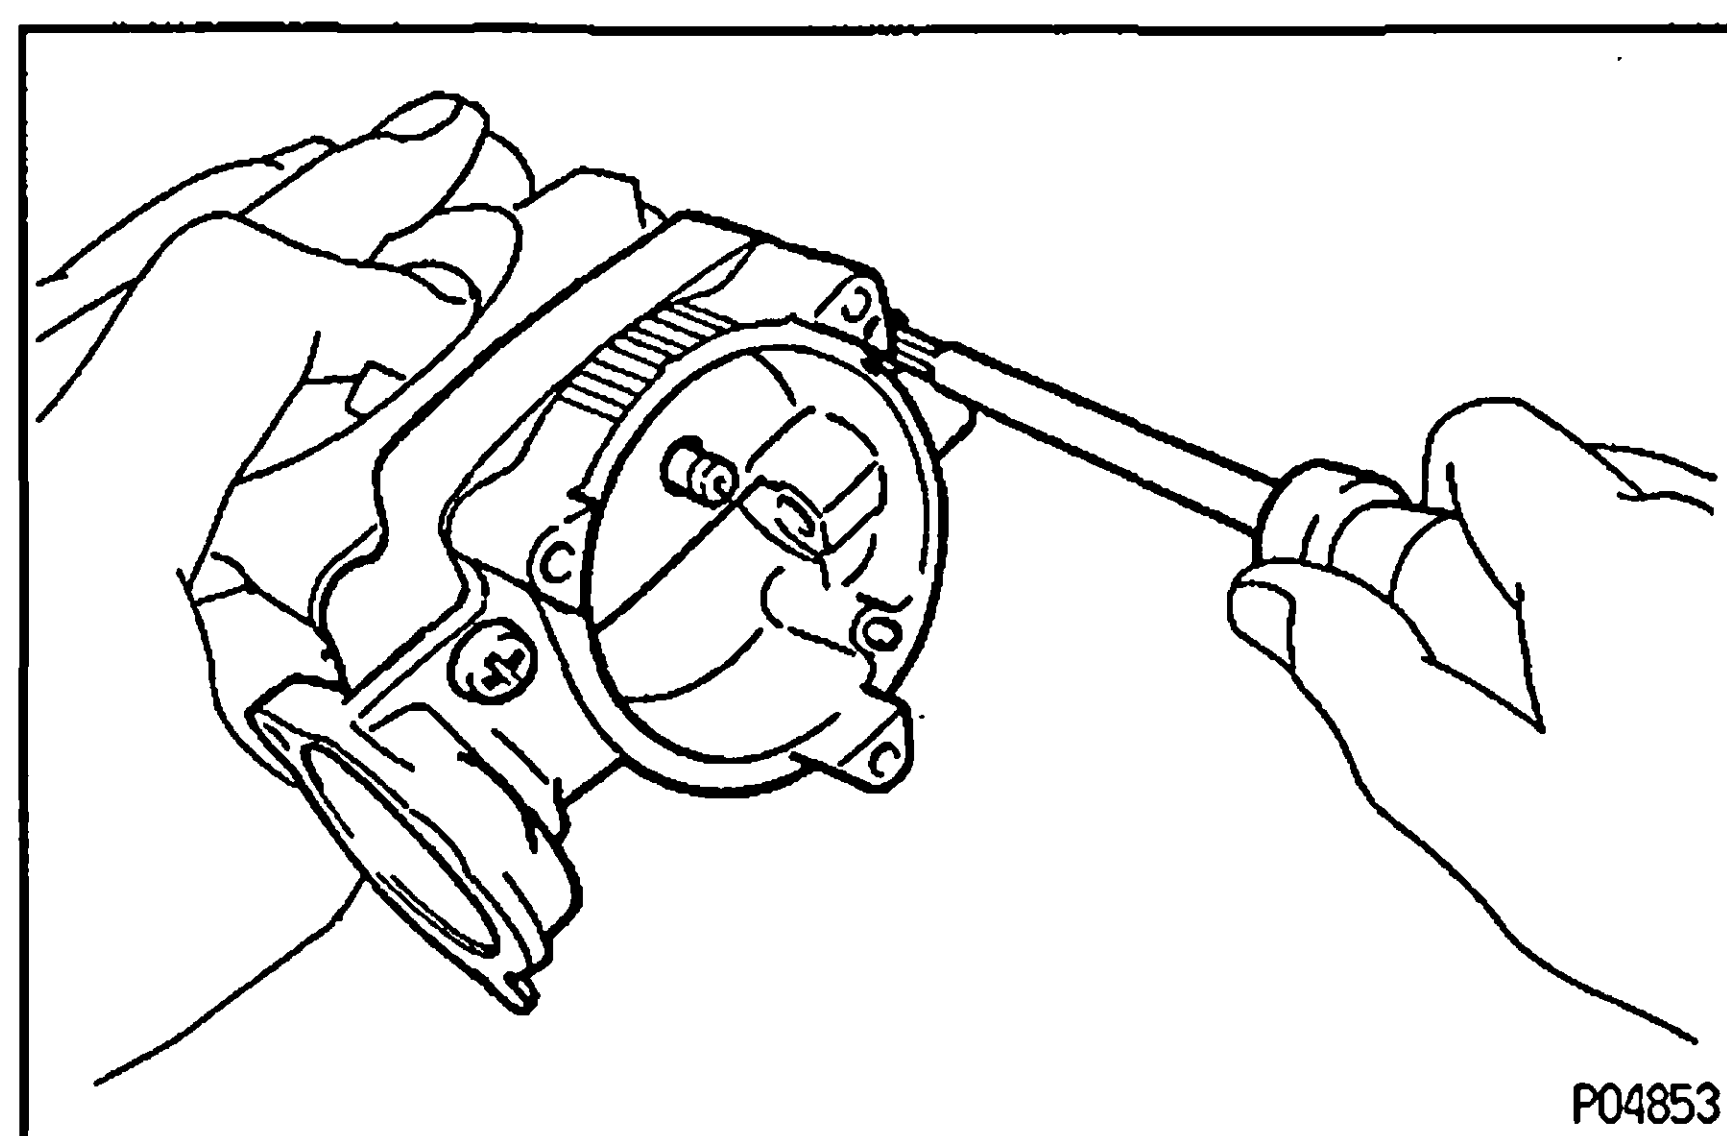**2. INSTALL THERMOSTAT HOUSING**

- (a) Install the thermostat housing with the two screws.

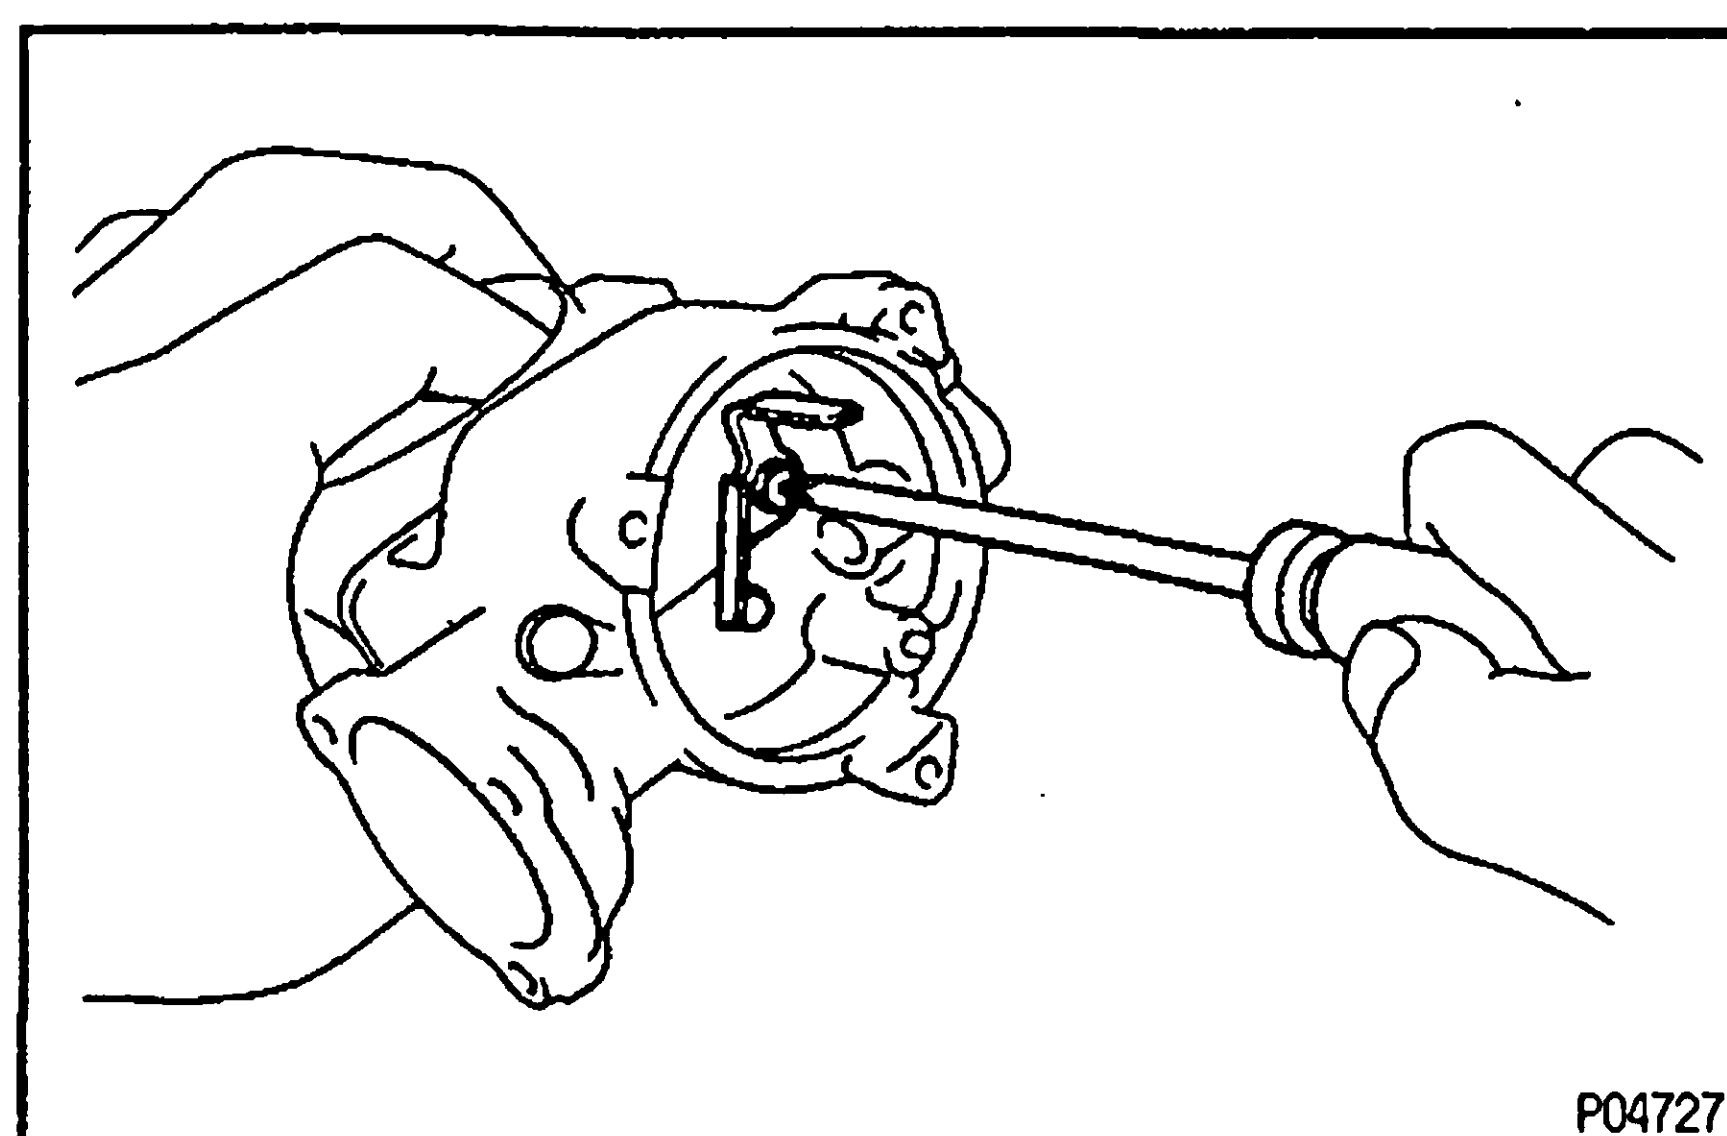

- (b) Install the chock lever with the screw.

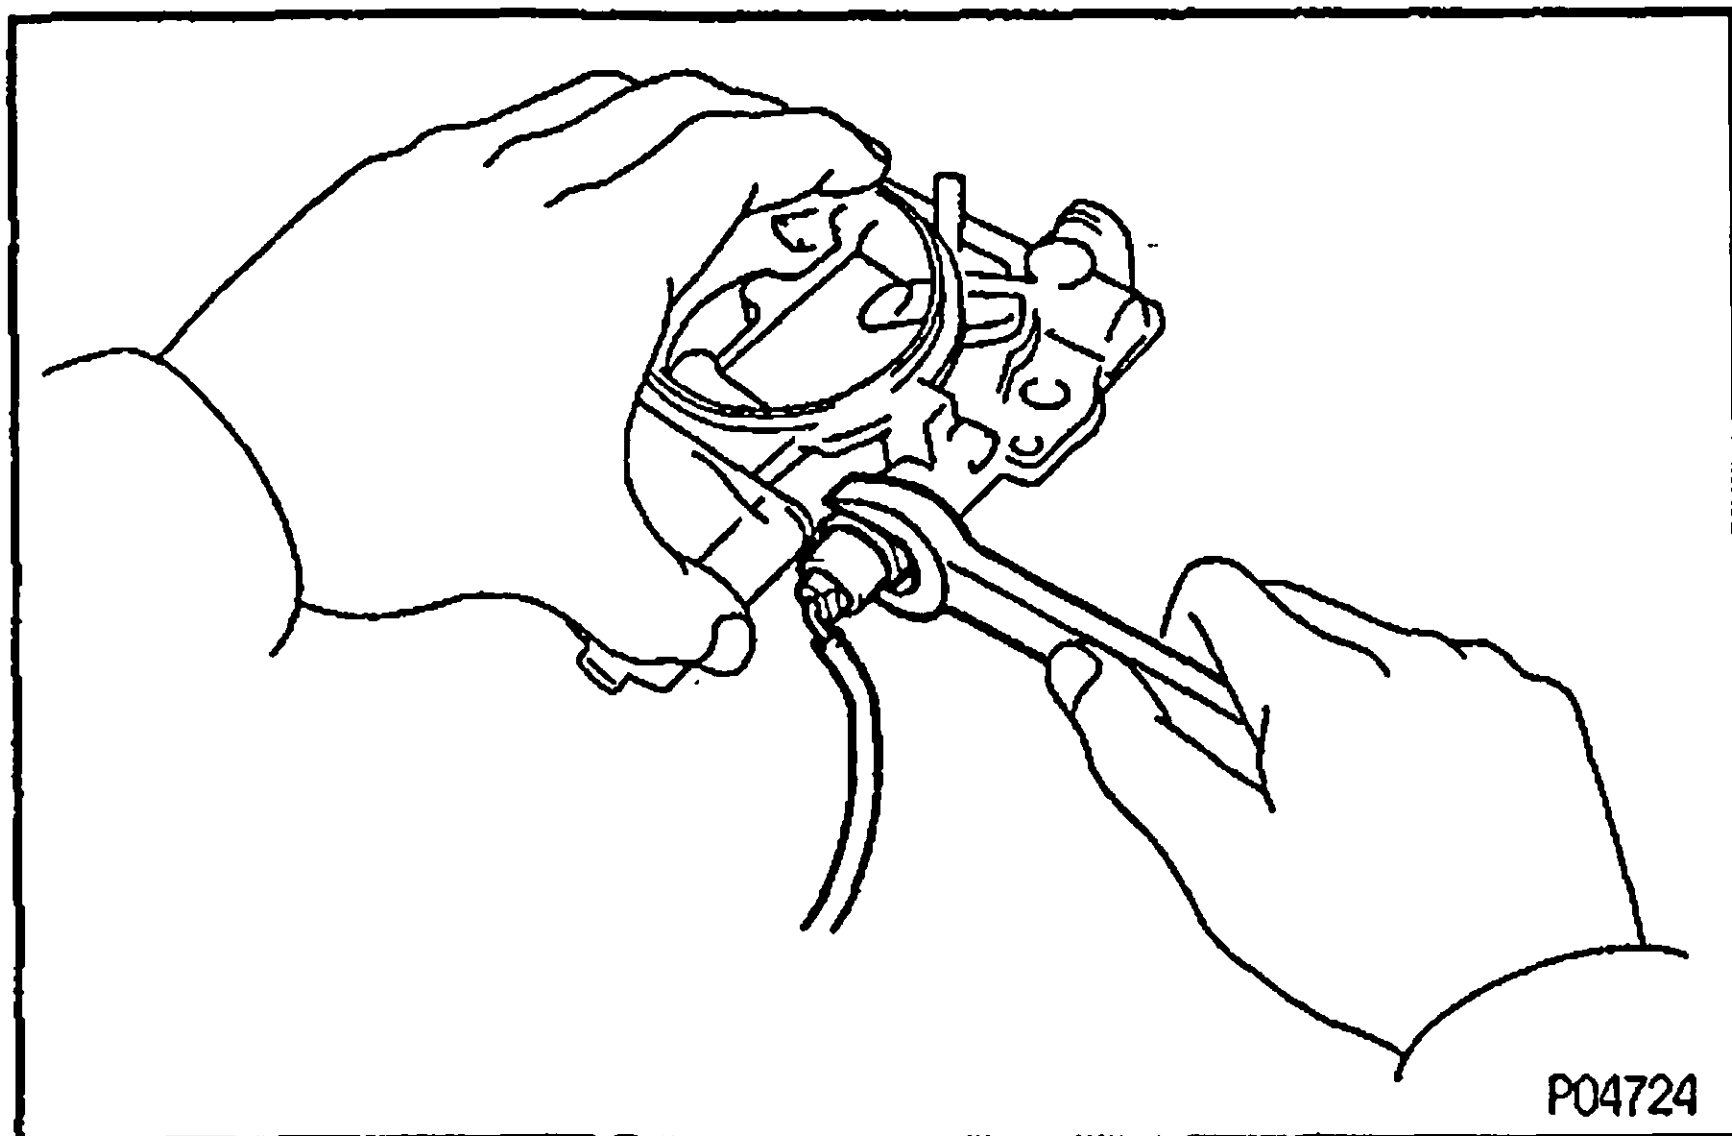

3. INSTALL FUEL CUT SOLENOID VALVE


- (a) Install a new O—ring to the solenoid valve.
- (b) Install the solenoid valve together with a new gasket.

EG




4. INSTALL CHOKE BREAKER (CB)

- (a) Insert the diaphragm into the thermostat case, and install the collar, spring and stopper with the E—ring.
- (b) Insert the shaft of the diaphragm into the hole of the thermostat case.

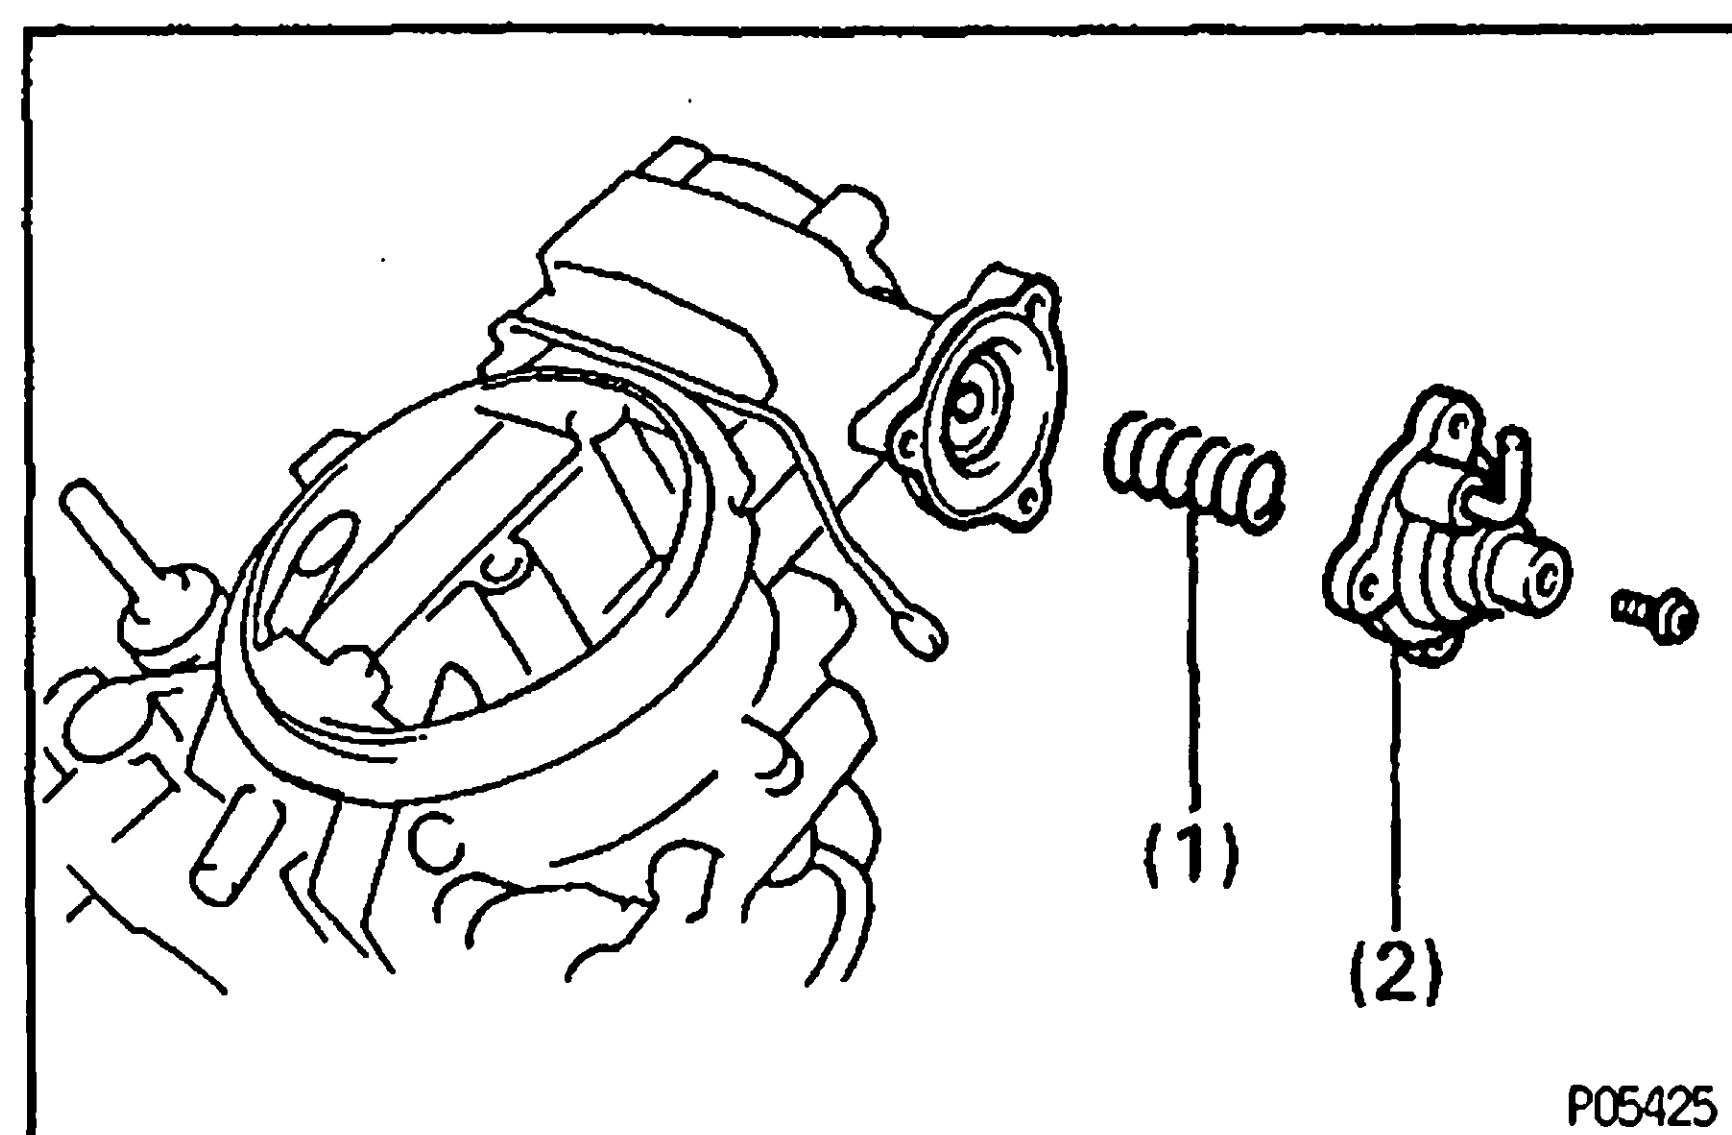


- (c) Install the following parts with the three screws:
 - (1) Spring
 - (2) Cover

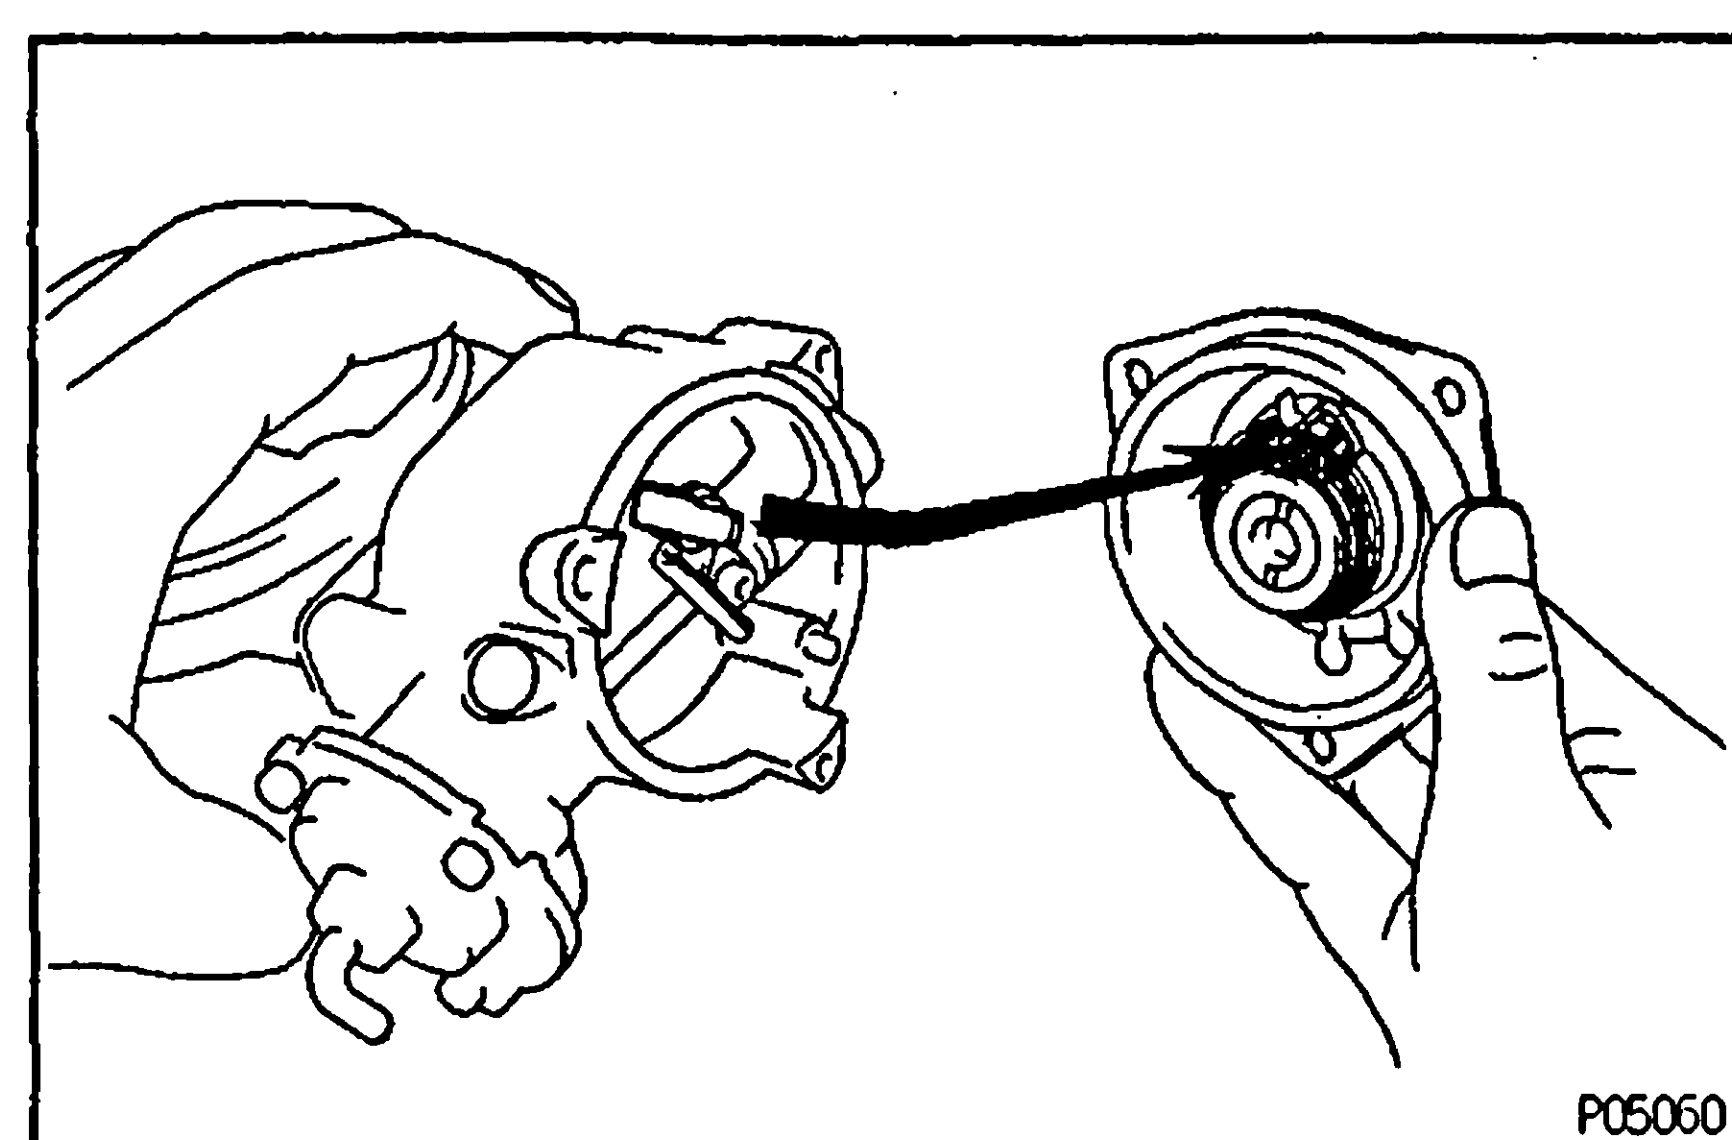


5. INSTALL COIL HOUSING


- (a) Install the gasket to the thermostat case.
- (b) Align the bi—metal spring with the wire spring and install the coil housing, aligning the choke lever as shown in the illustration.
- (c) Align the scale center line of the thermostat case with the coil housing line, and install the plate with the three screws.
- (d) Check the choke valve action.

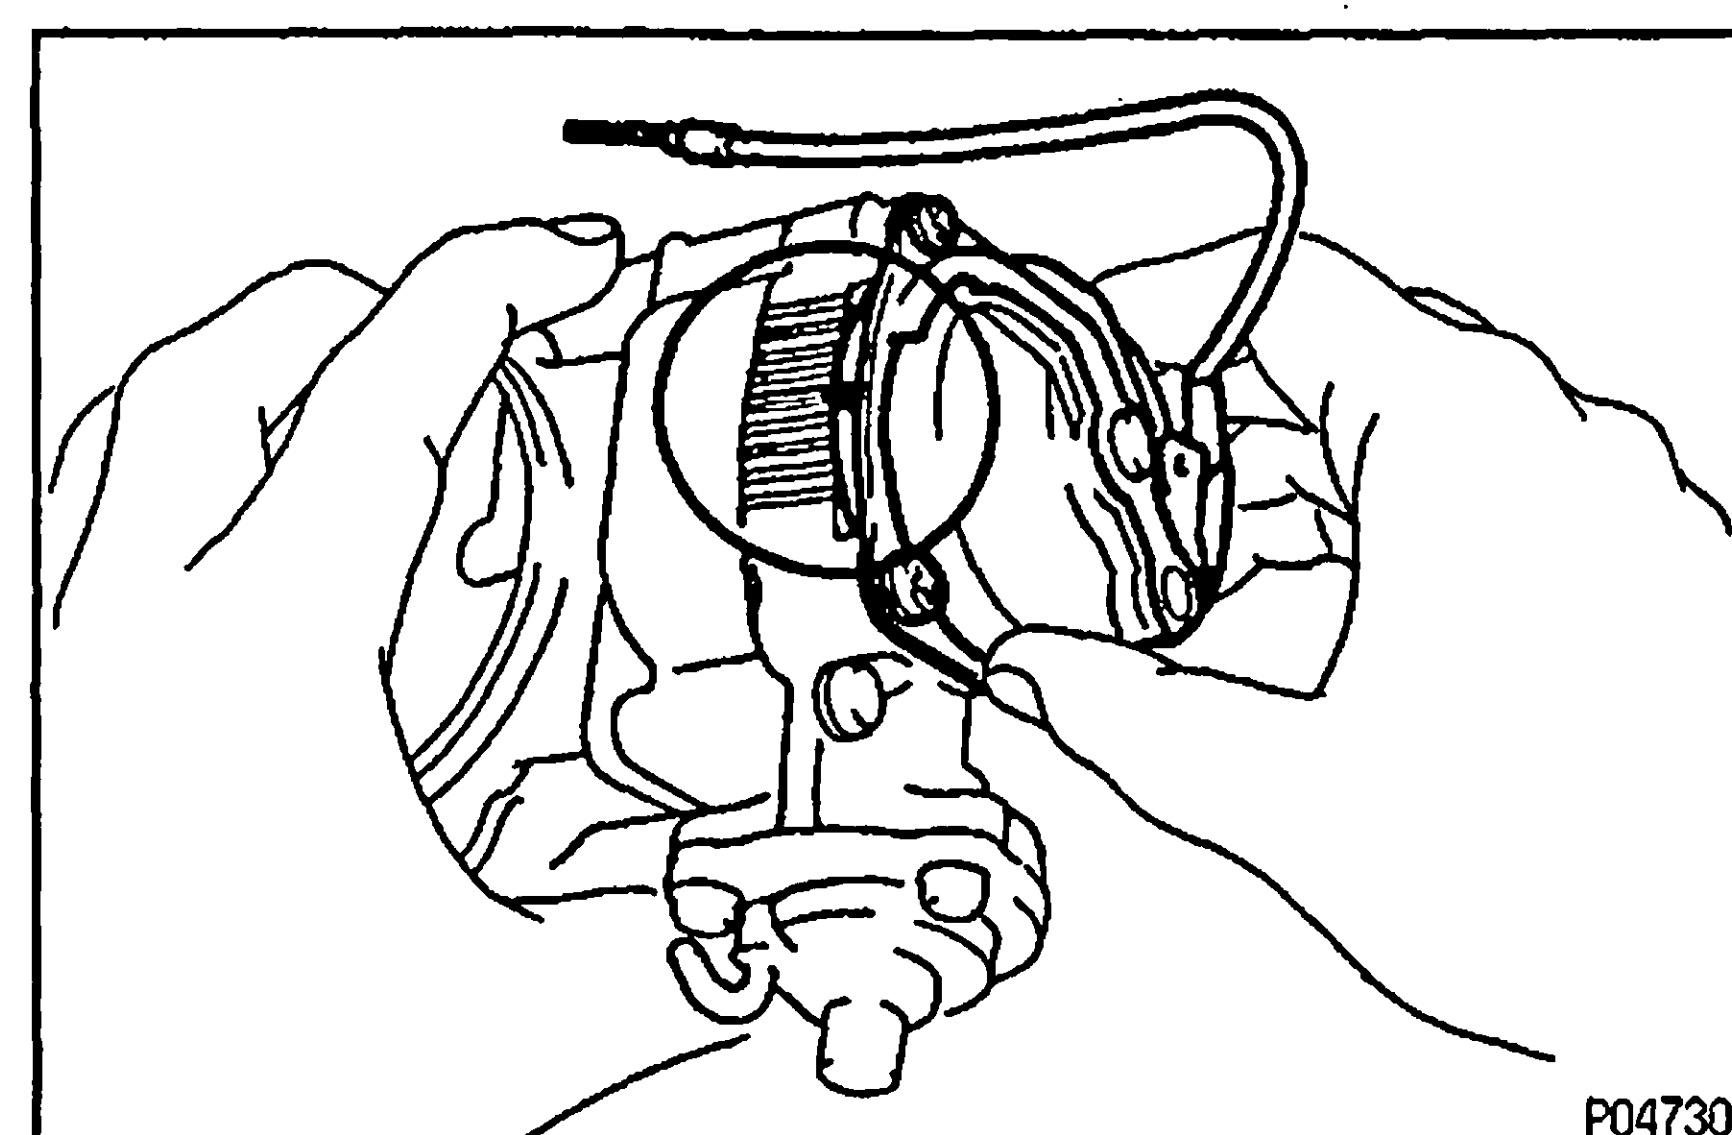


EG

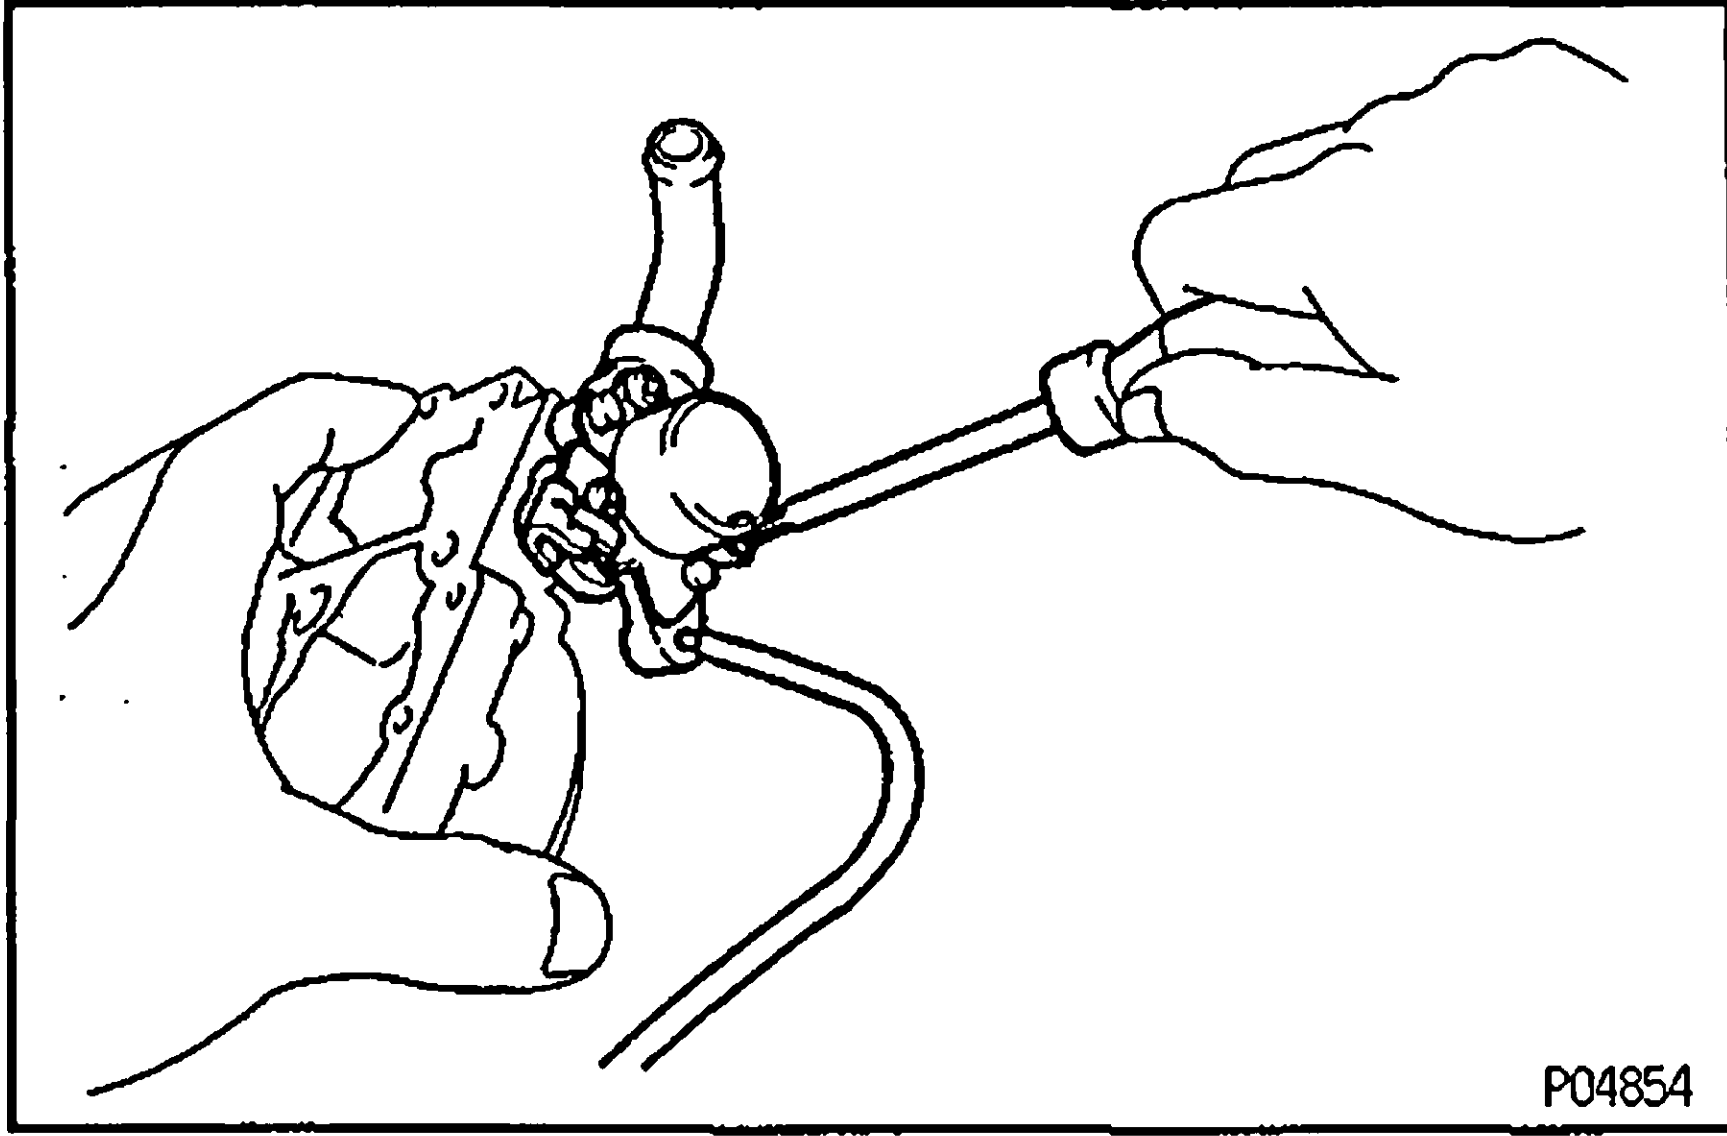


- 6. INSTALL OUTER VENT CONTROL VALVE (OVCV)**
Install a new gasket, the wire clamp and OVCV with the three screws.

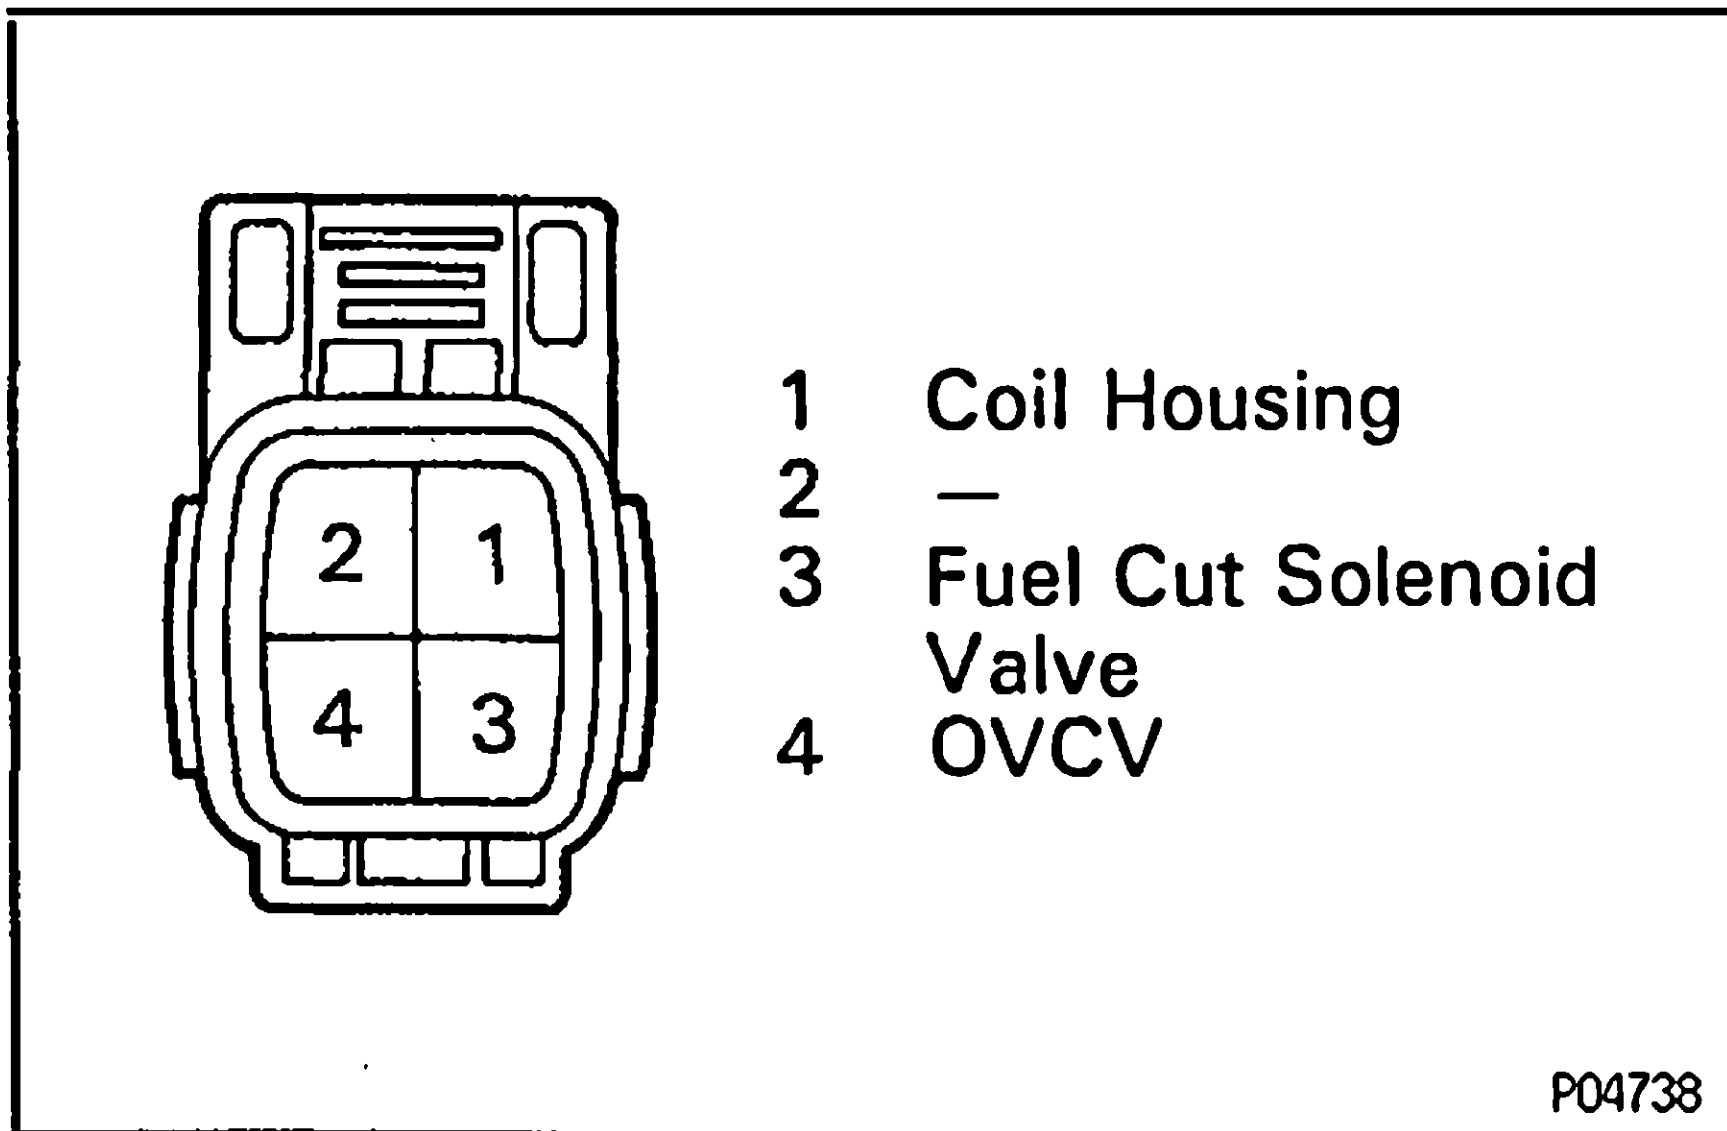


- 7. CONNECT WIRES TO CONNECTOR**
(a) Push in the terminal until it is securely locked in the connecting lug.
(b) Pull on the wire to check that it is securely locked.

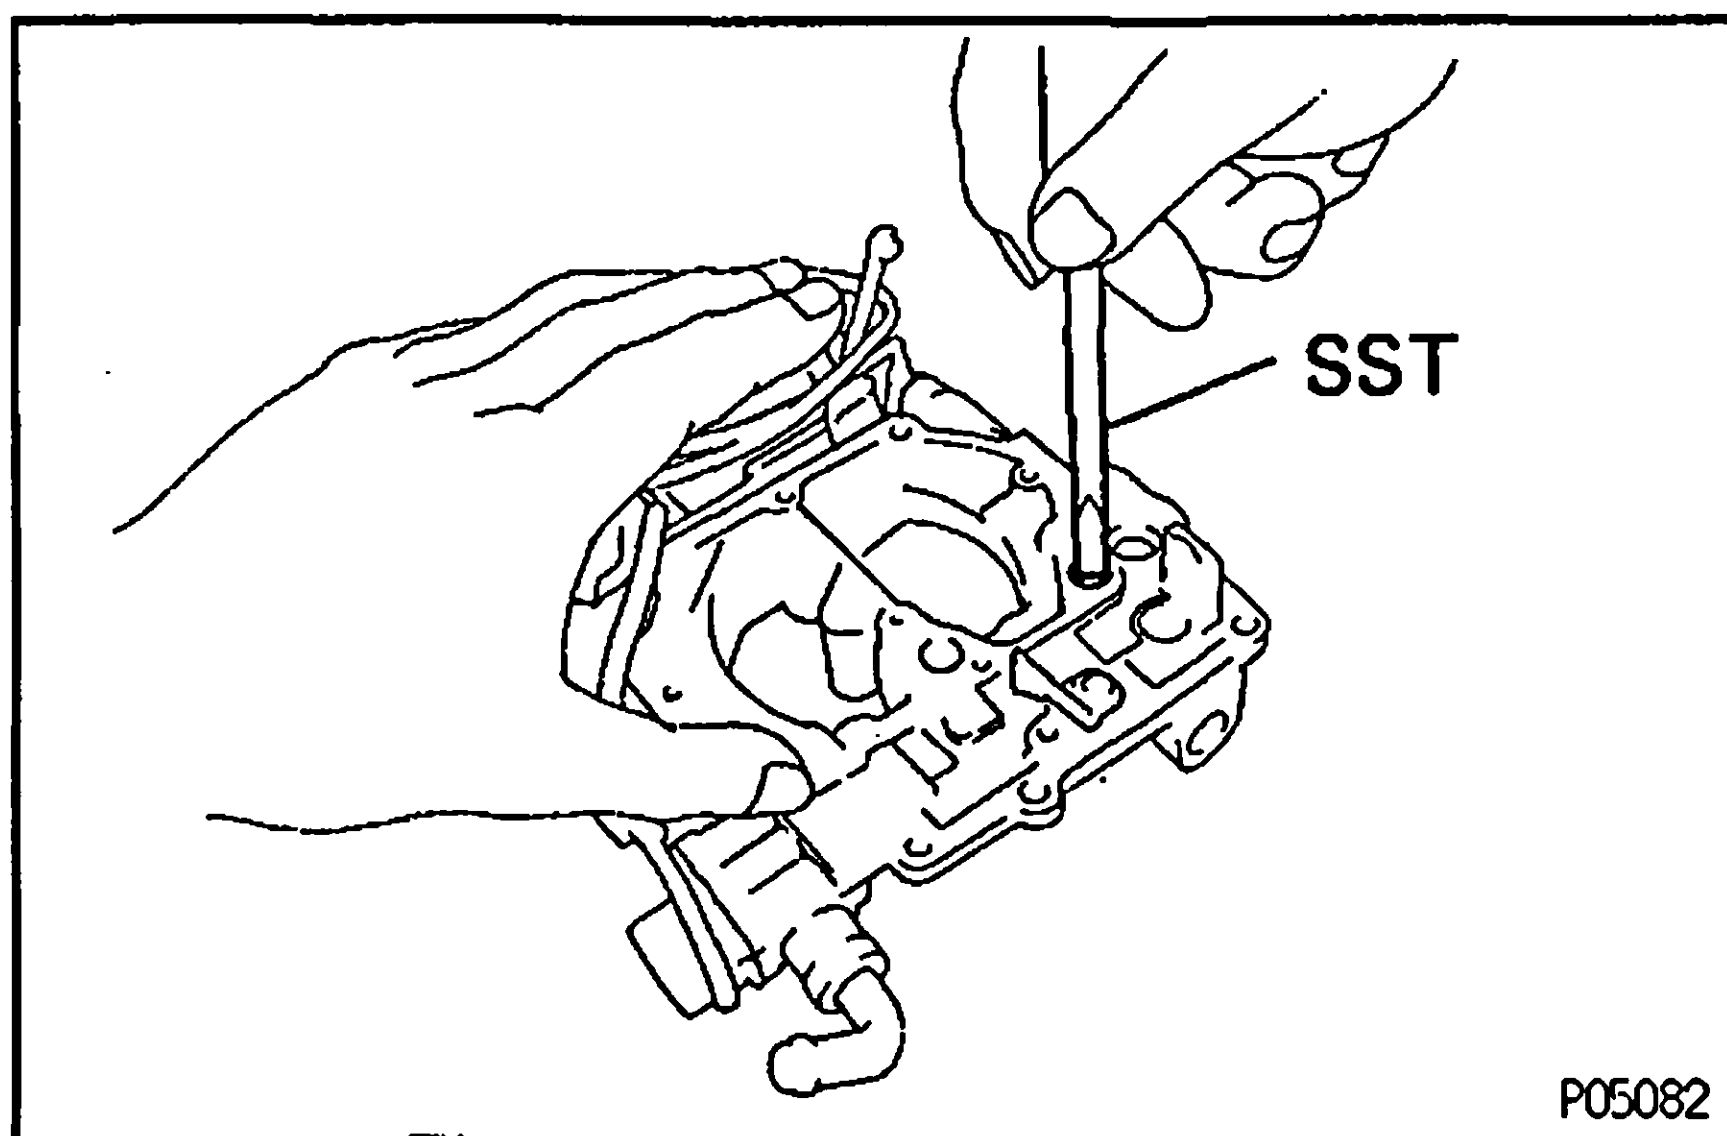


- 8. INSTALL PRIMARY UPPER SLOW JET**

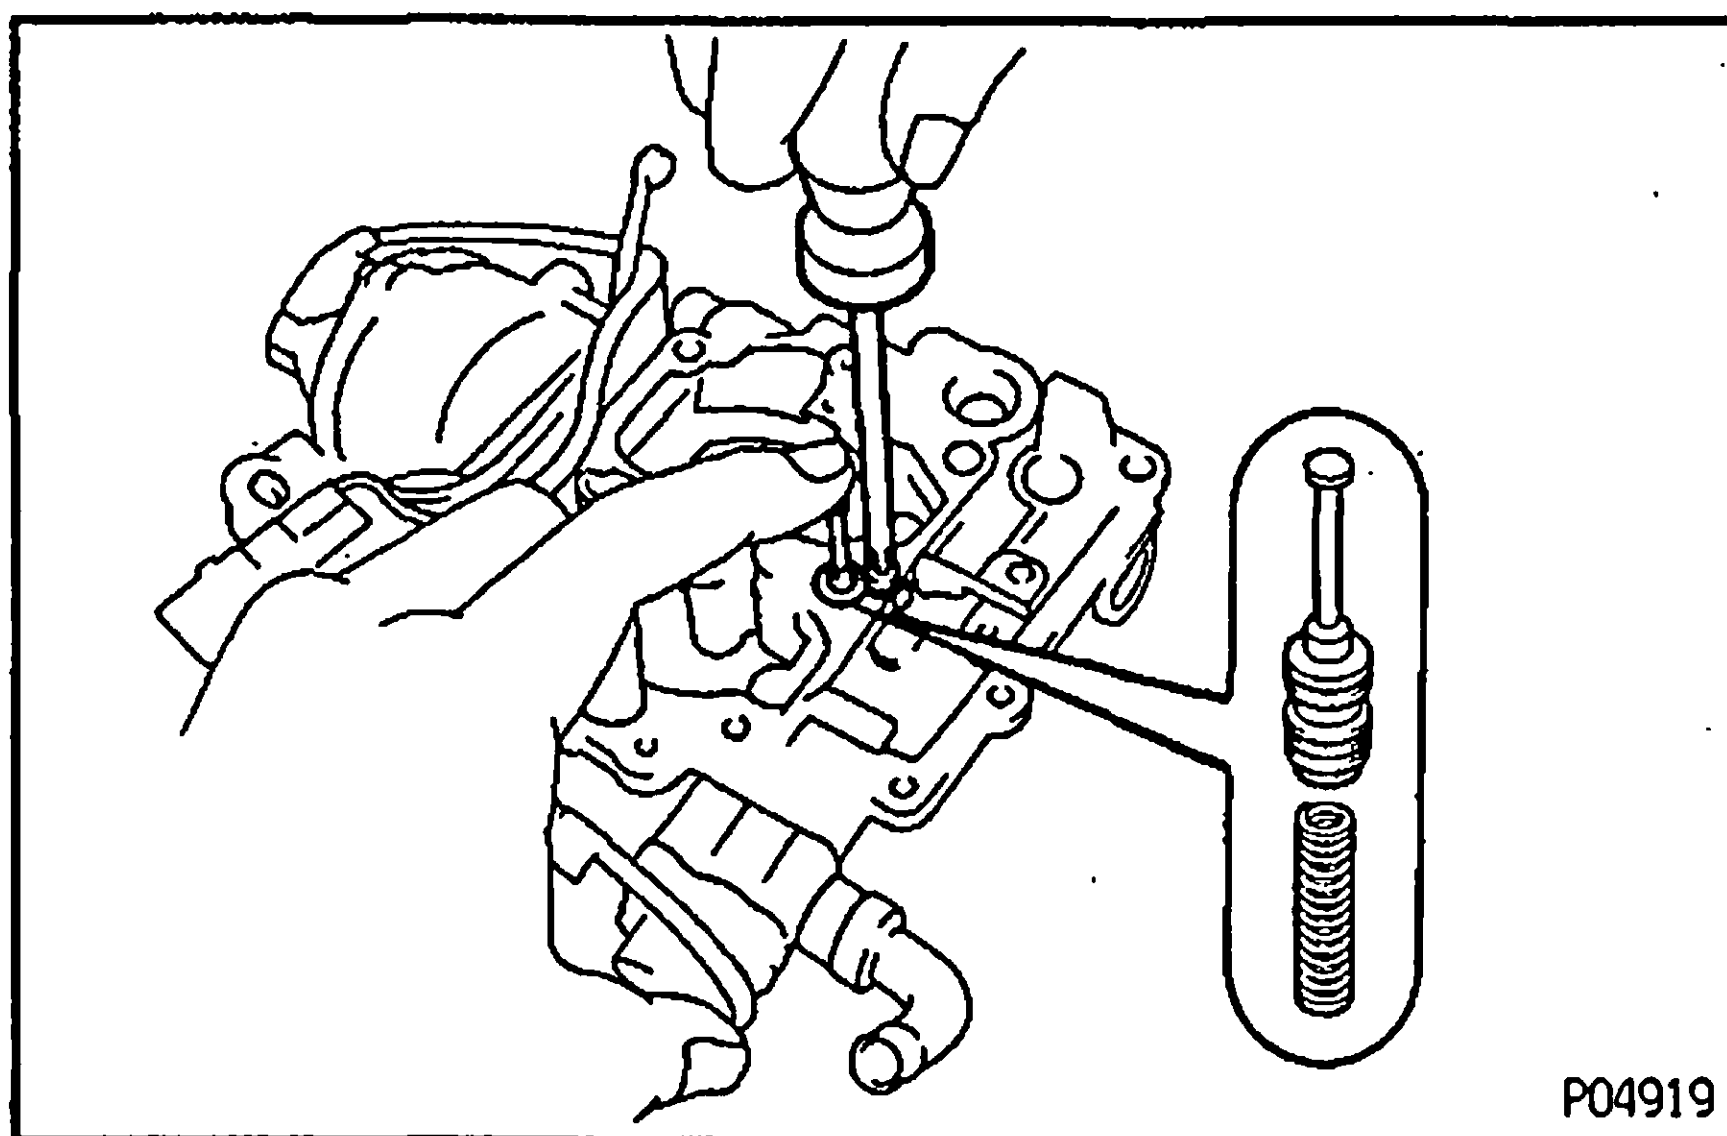

- 9. INSTALL POWER PISTON**
Install the spring and power piston with the retainer and screw.

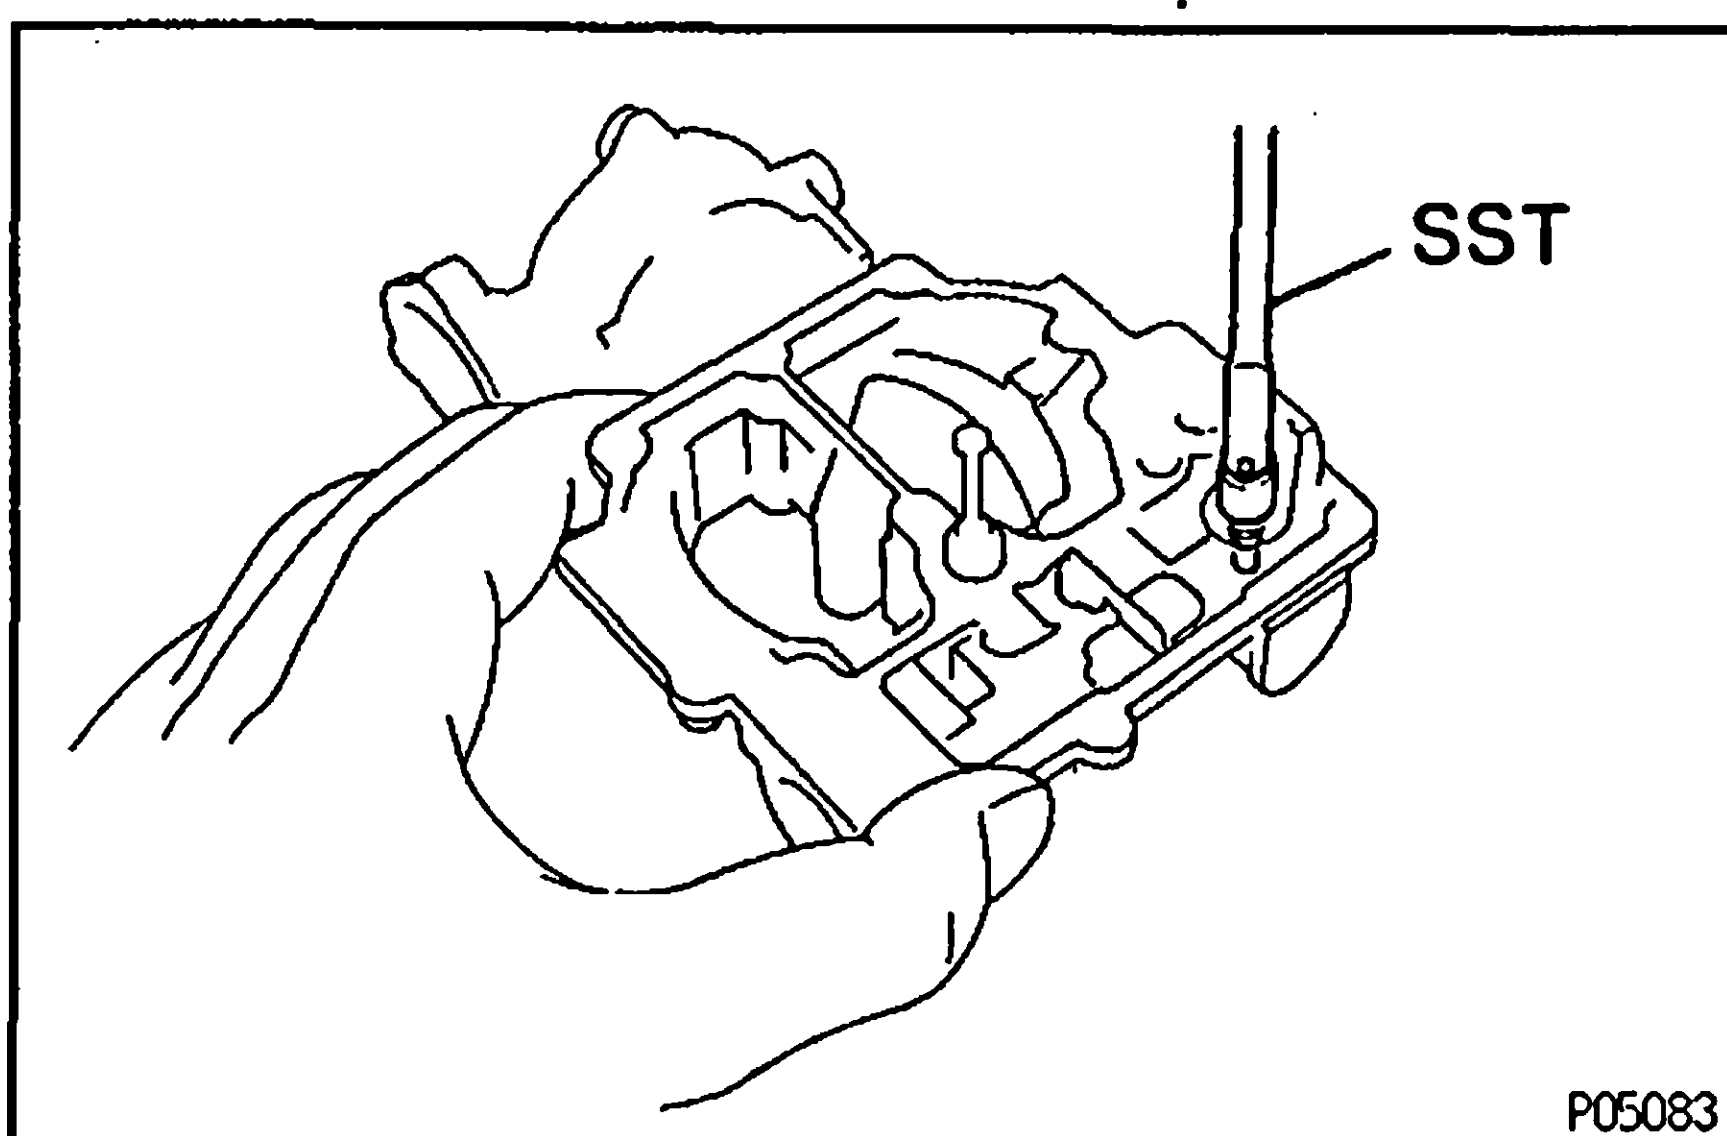


- 10. INSTALL NEEDLE VALVE SEAT**
Install the valve seat together with a new gasket.

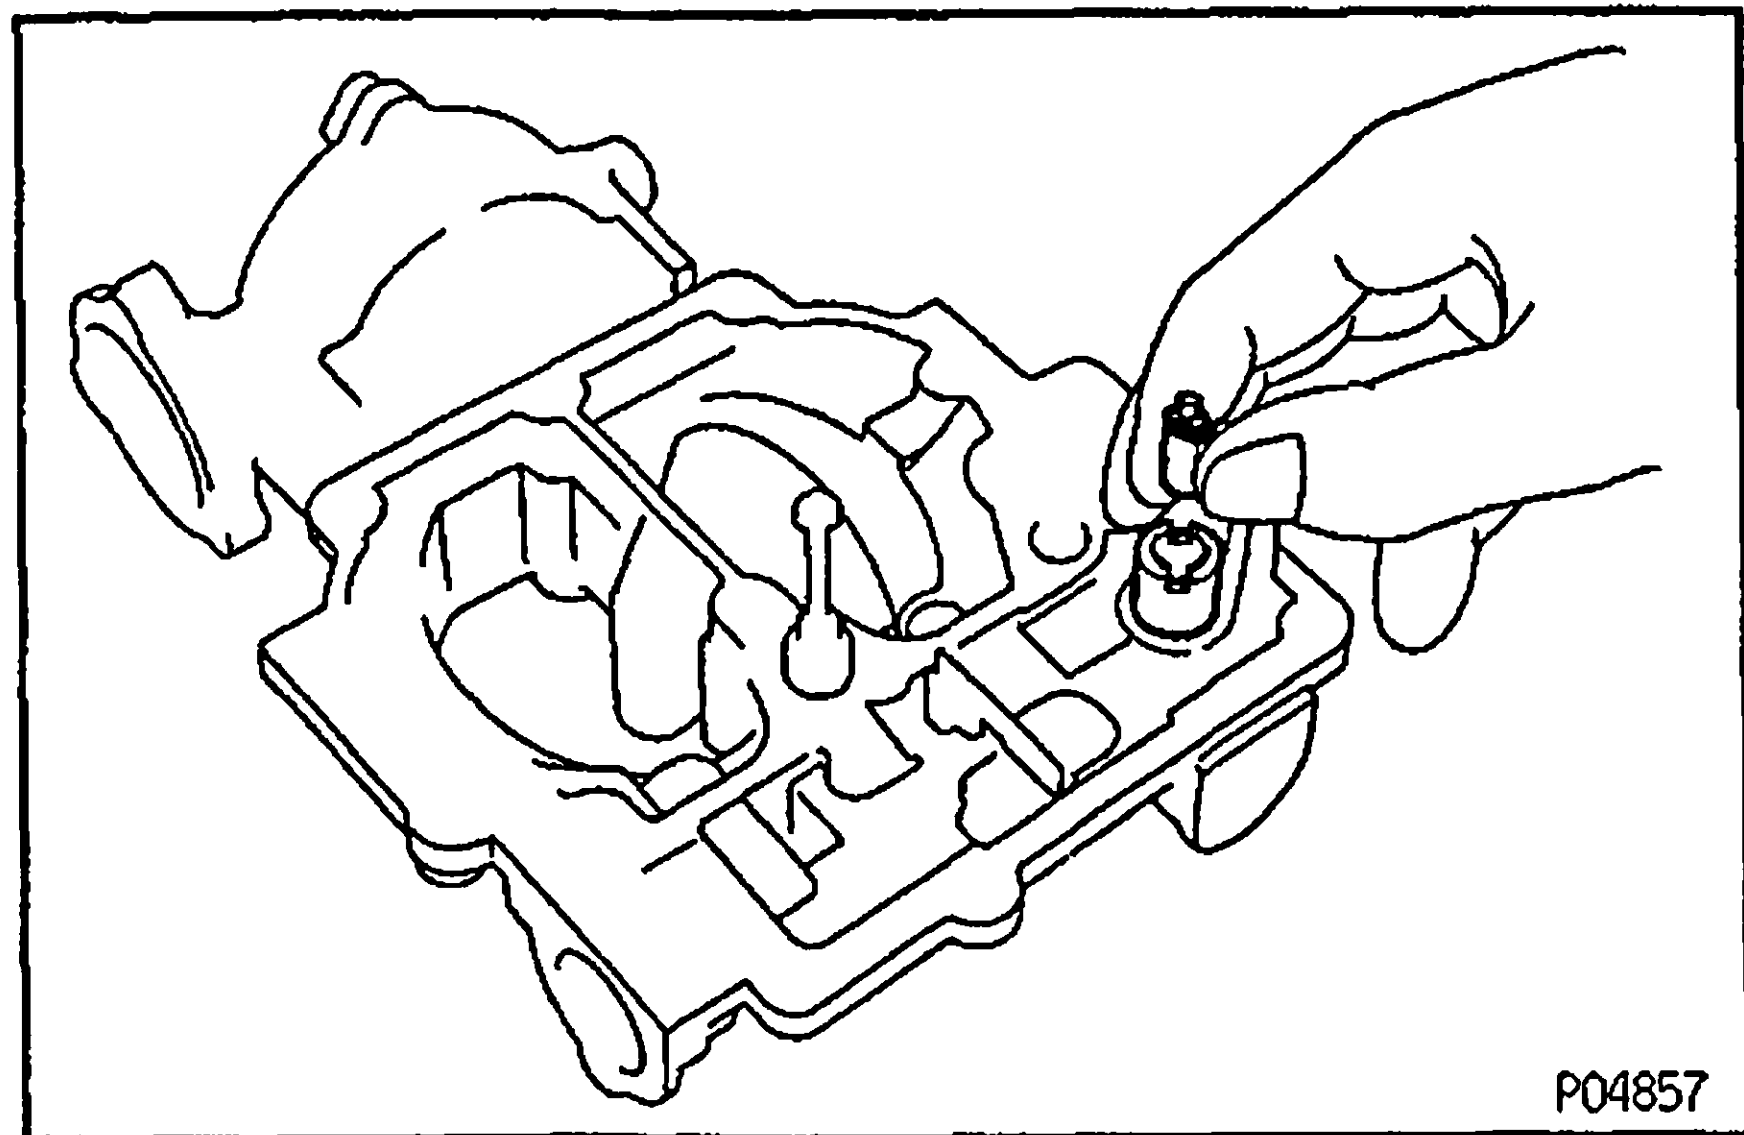**11. ADJUST FLOAT LEVEL**


- (a) Insert the needle valve, spring and plunger into the needle valve seat.

HINT: After adjusting the float level, install the clip onto the needle valve.

EG

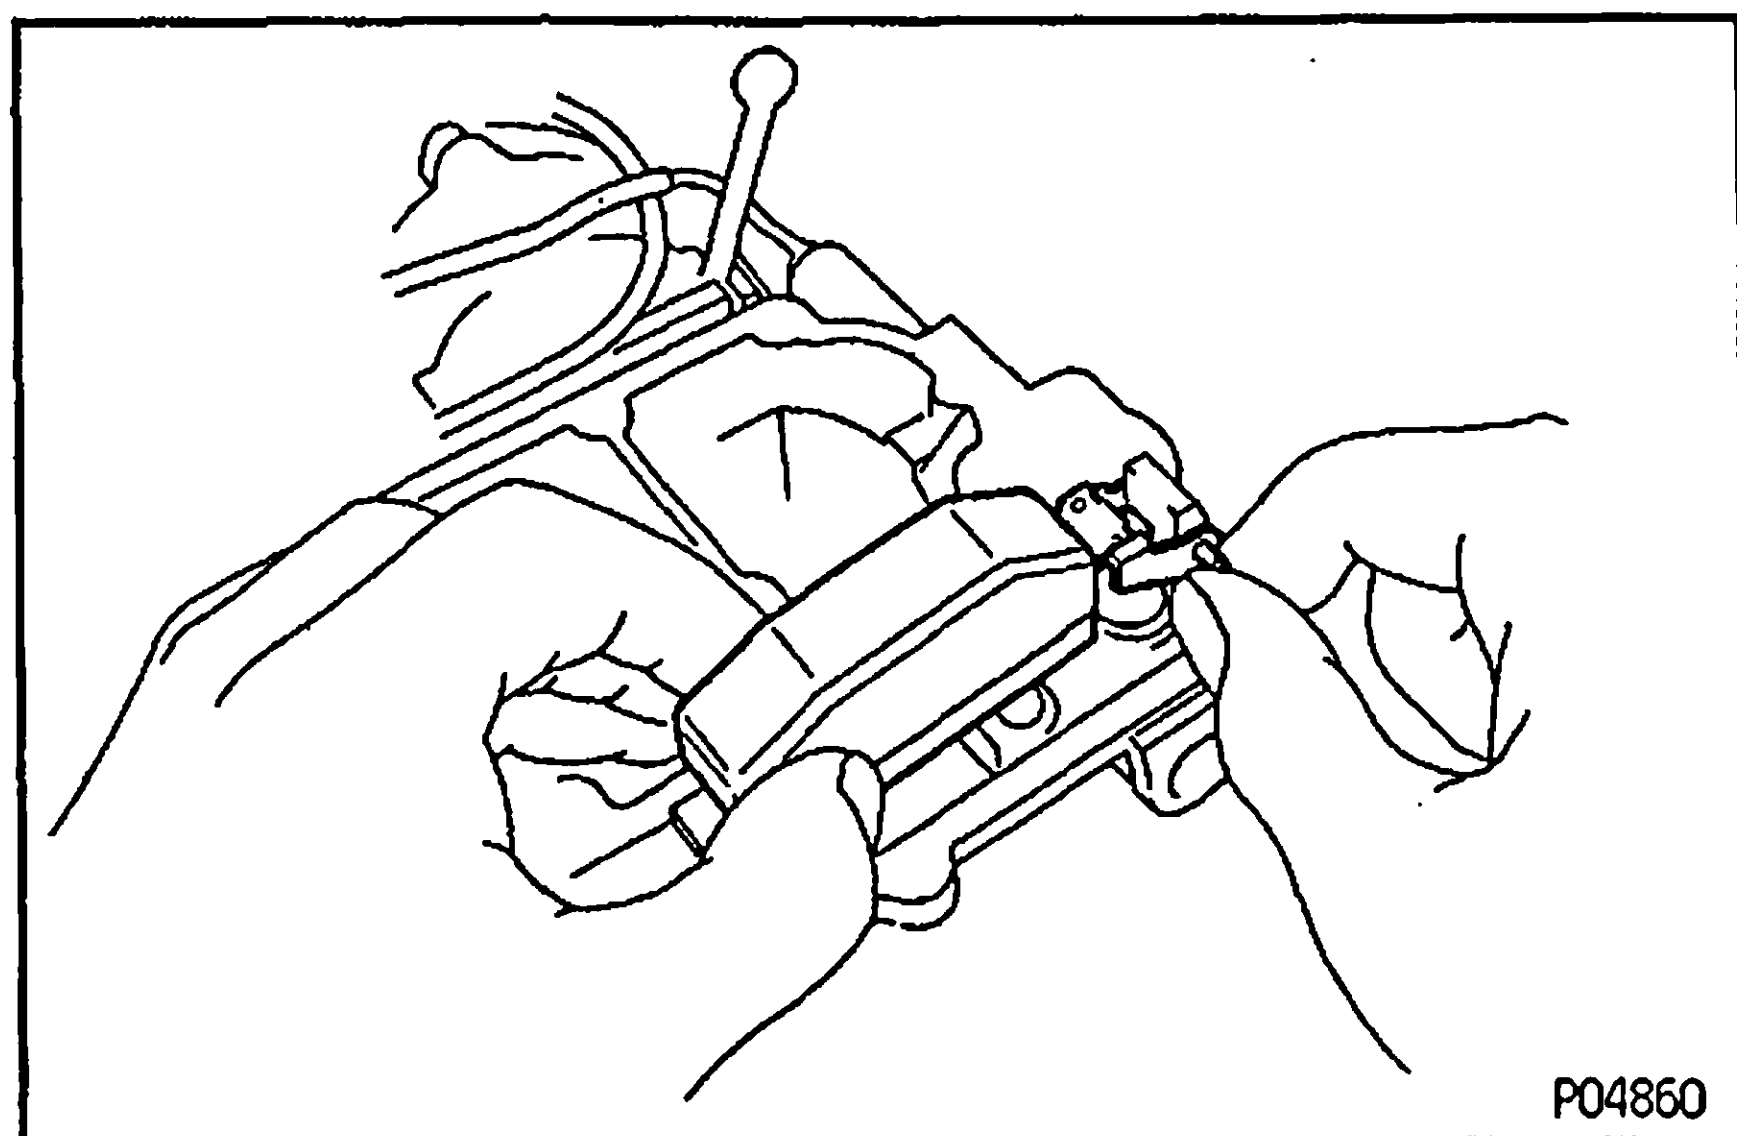

- (b) Install the float with the pivot pin.

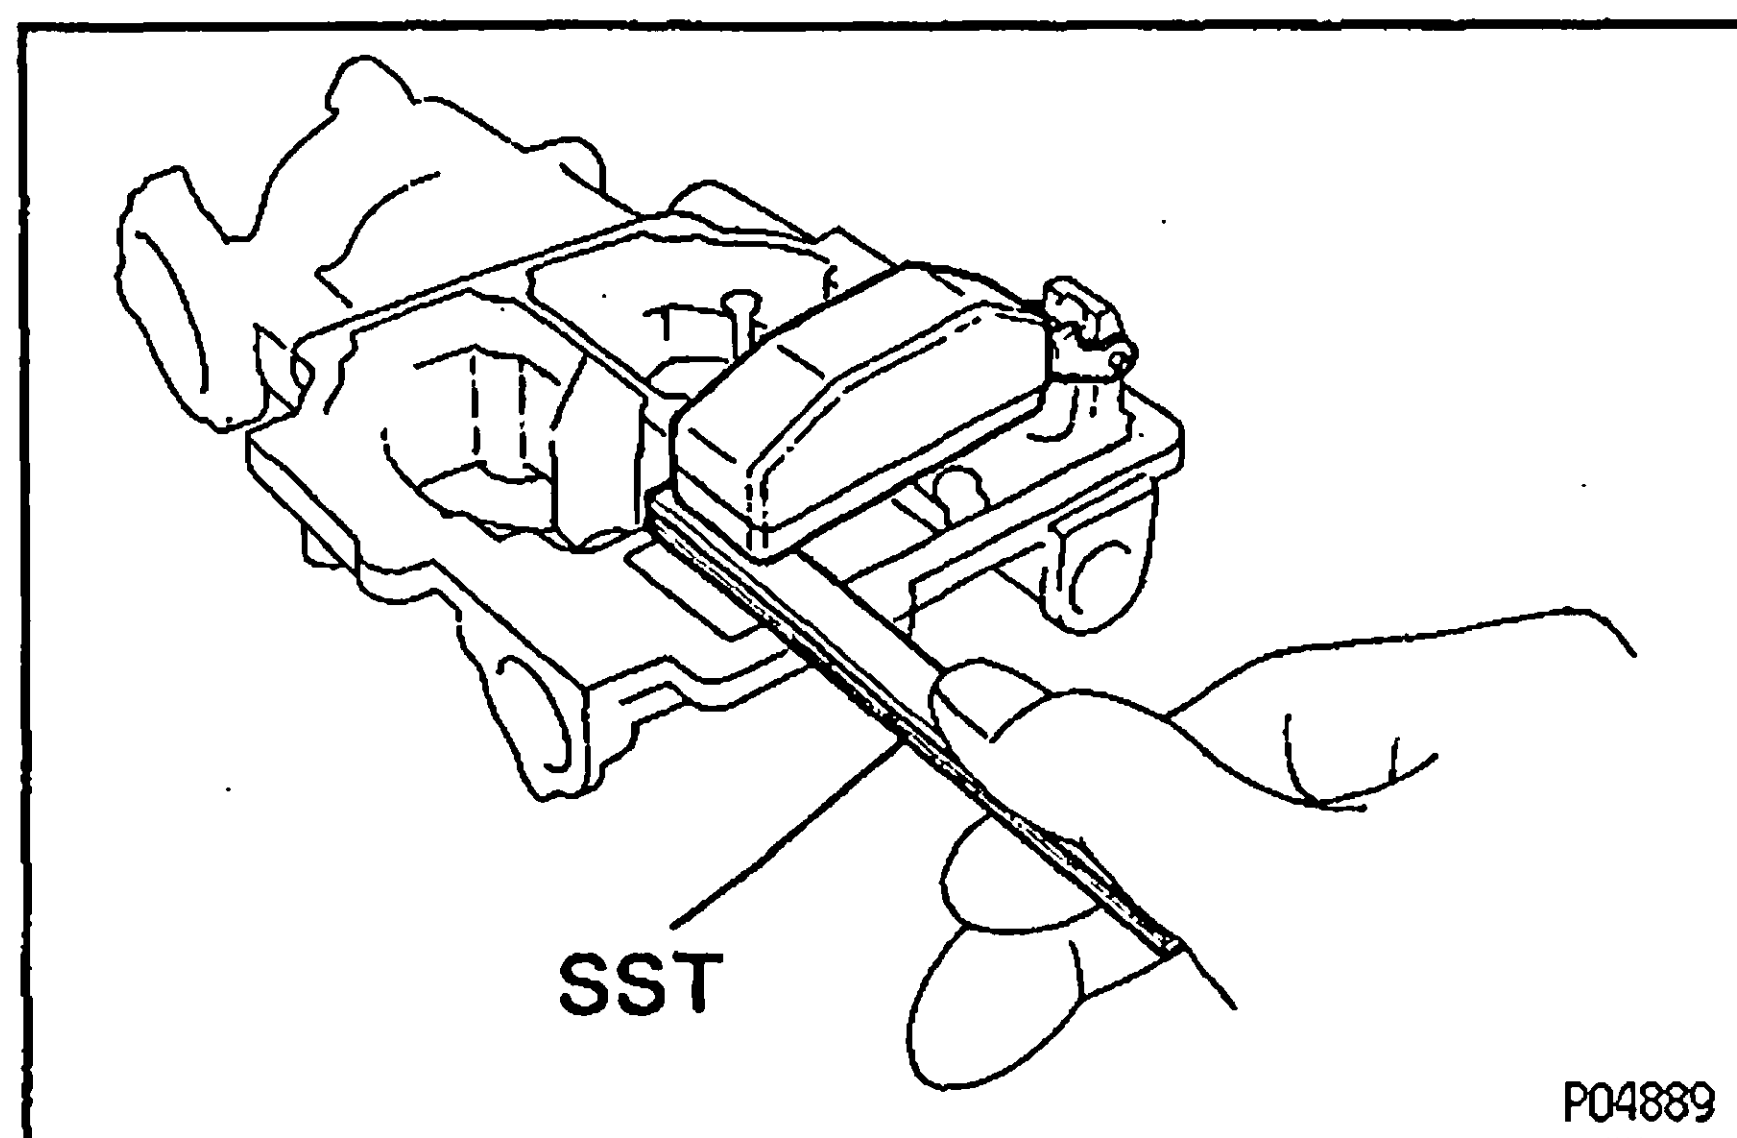


- (c) Allow the float to hang down by its own weight. Using SST, measure the clearance between the float tip and air horn.

SST 09240-00014


Float level (Raised position):

7.0 mm (0.276 in.)

HINT: This measurement should be made without a gasket on the air horn.

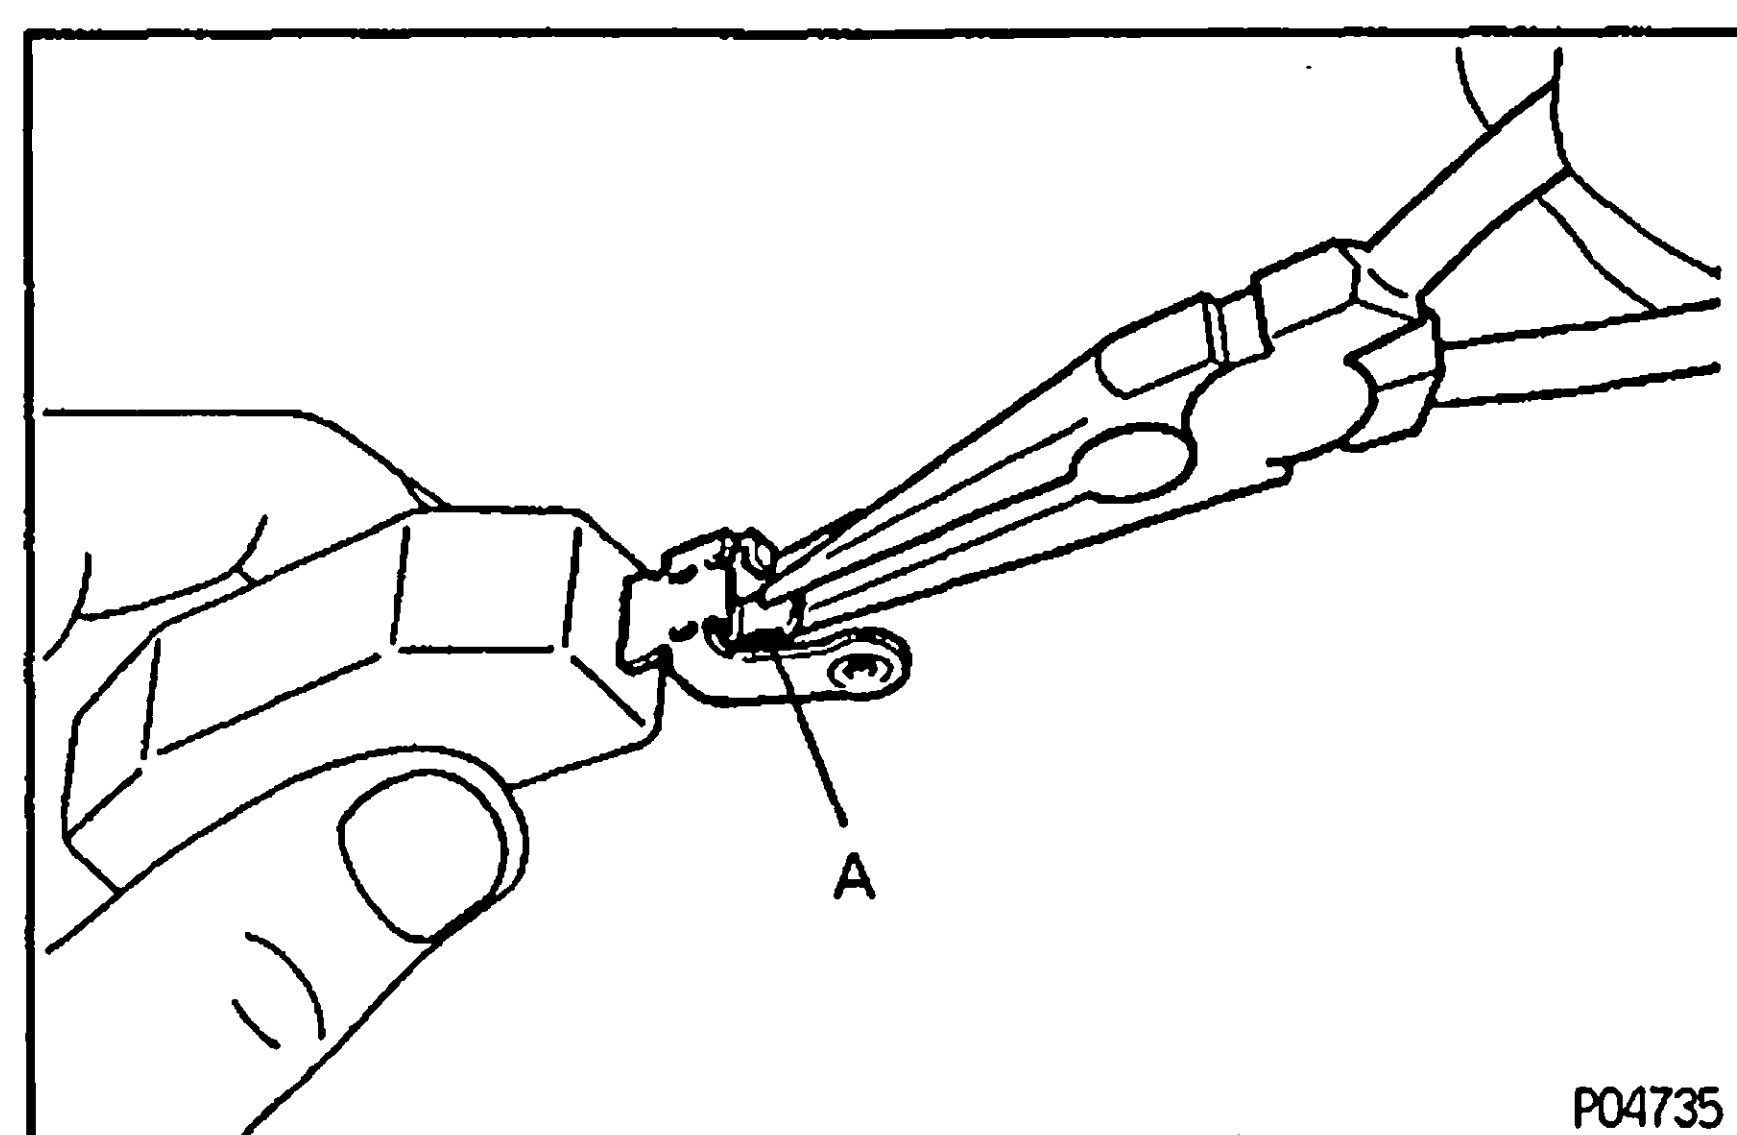

- (d) Adjust by bending the portion of the float lip marked A.

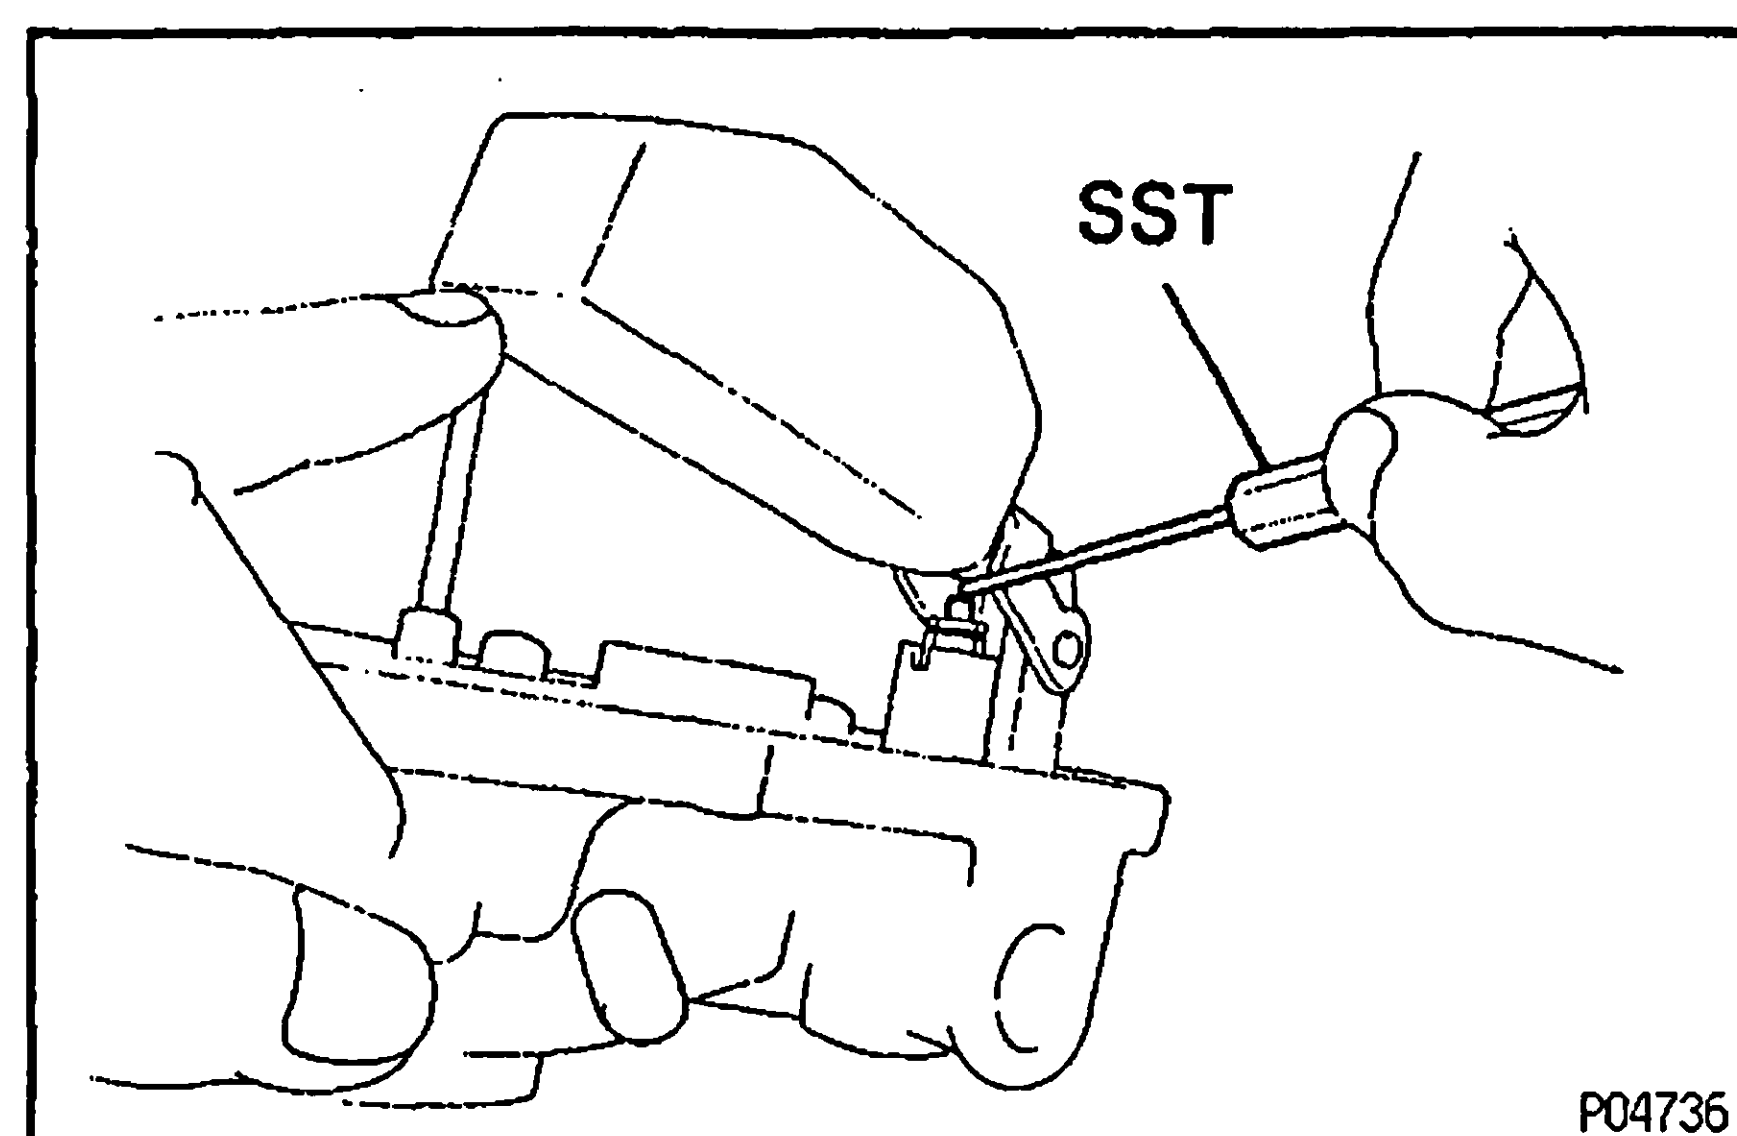

- (e) Lift up the float.


Using SST, measure the clearance between the needle valve plunger and float lip.

SST 09240-00020


Float level (Lowered position):

0.9 – 1.1 mm (0.035 – 0.043 in.)


EG

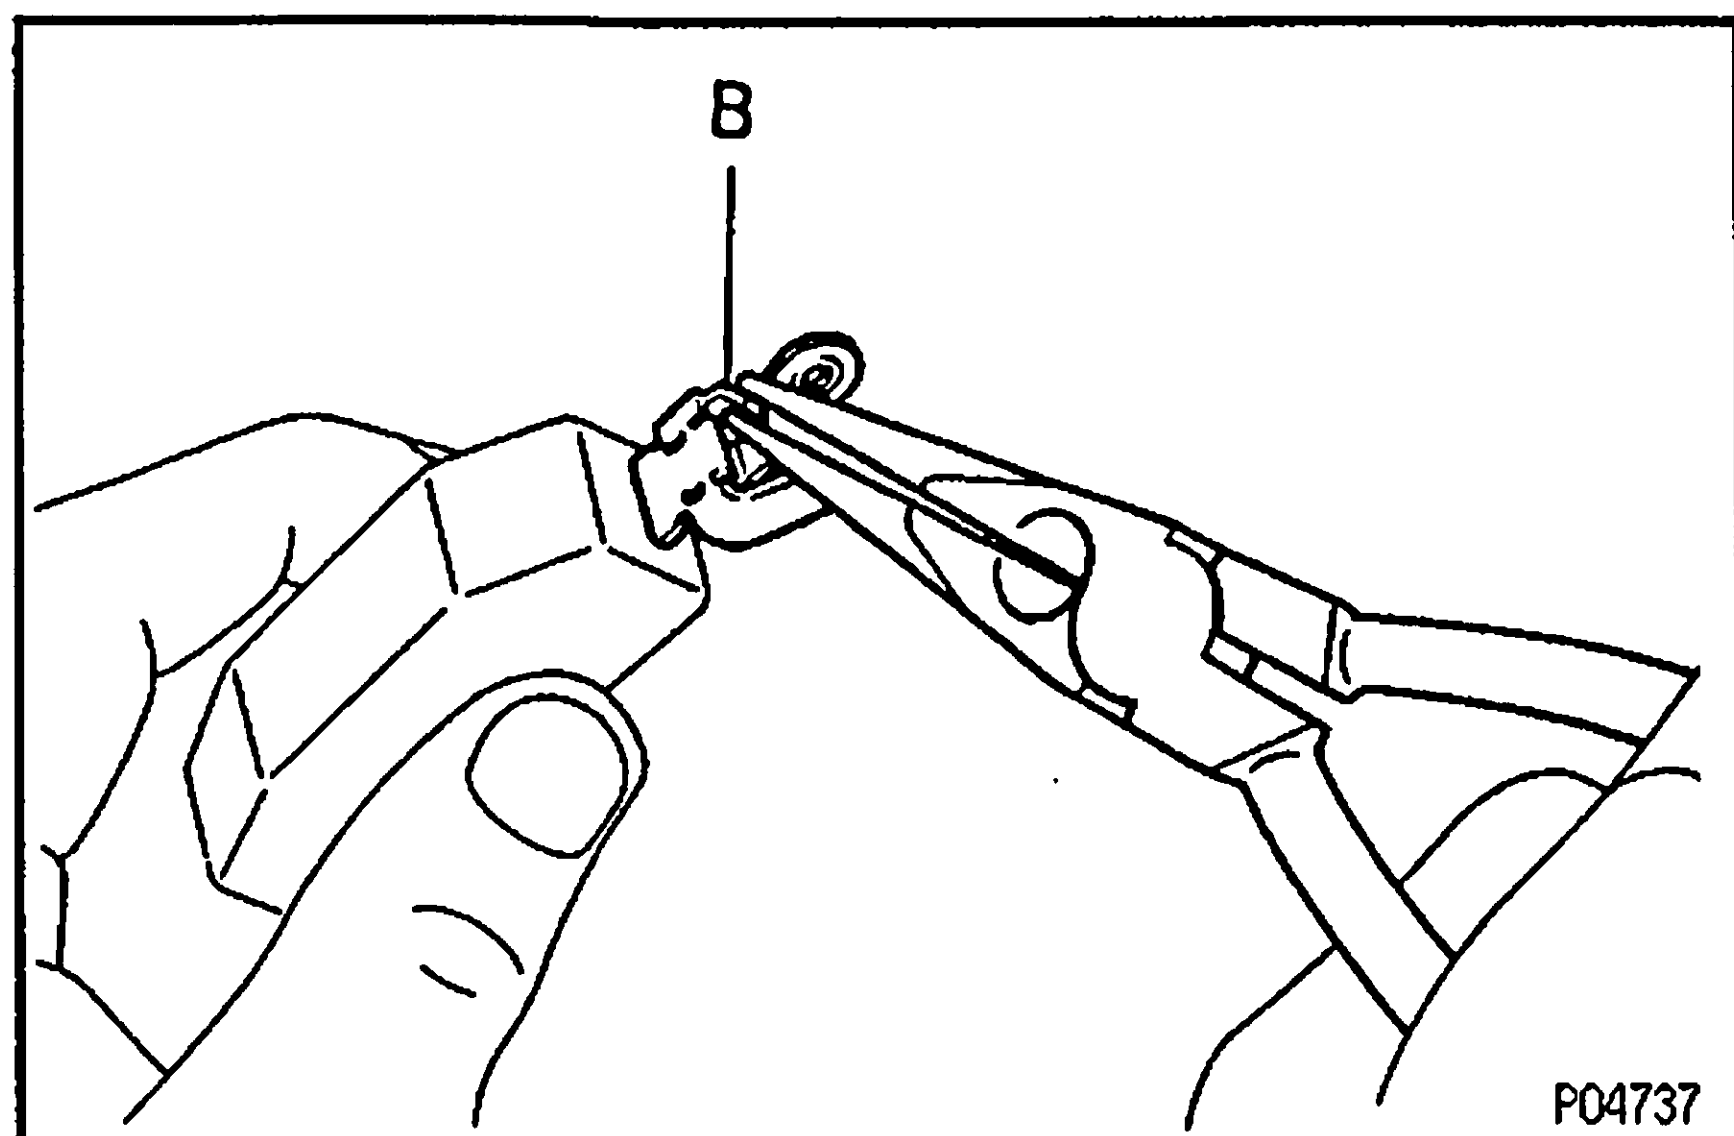

- (f) Adjust by bending the position of the float lip marked B.
- (g) After adjusting the float level, remove the float, plunger, spring and needle valve.

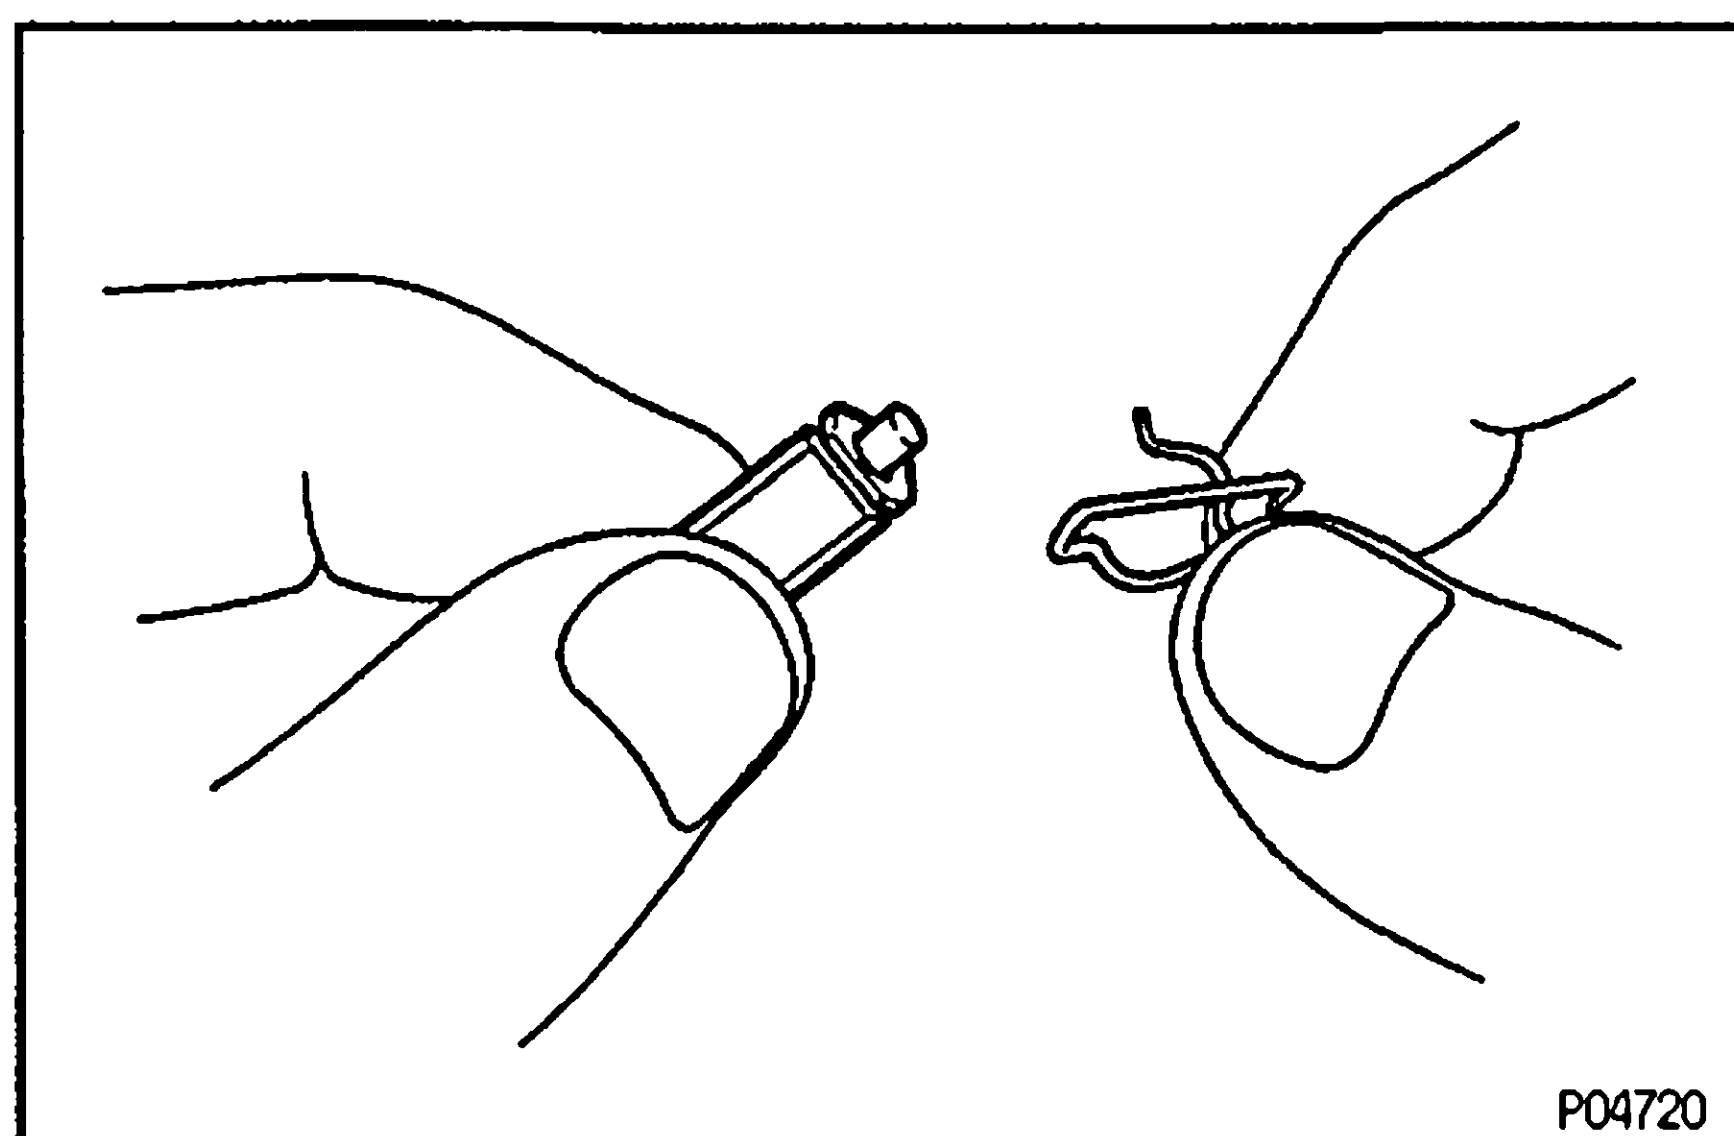

- (h) Assemble the clip onto the needle valve.

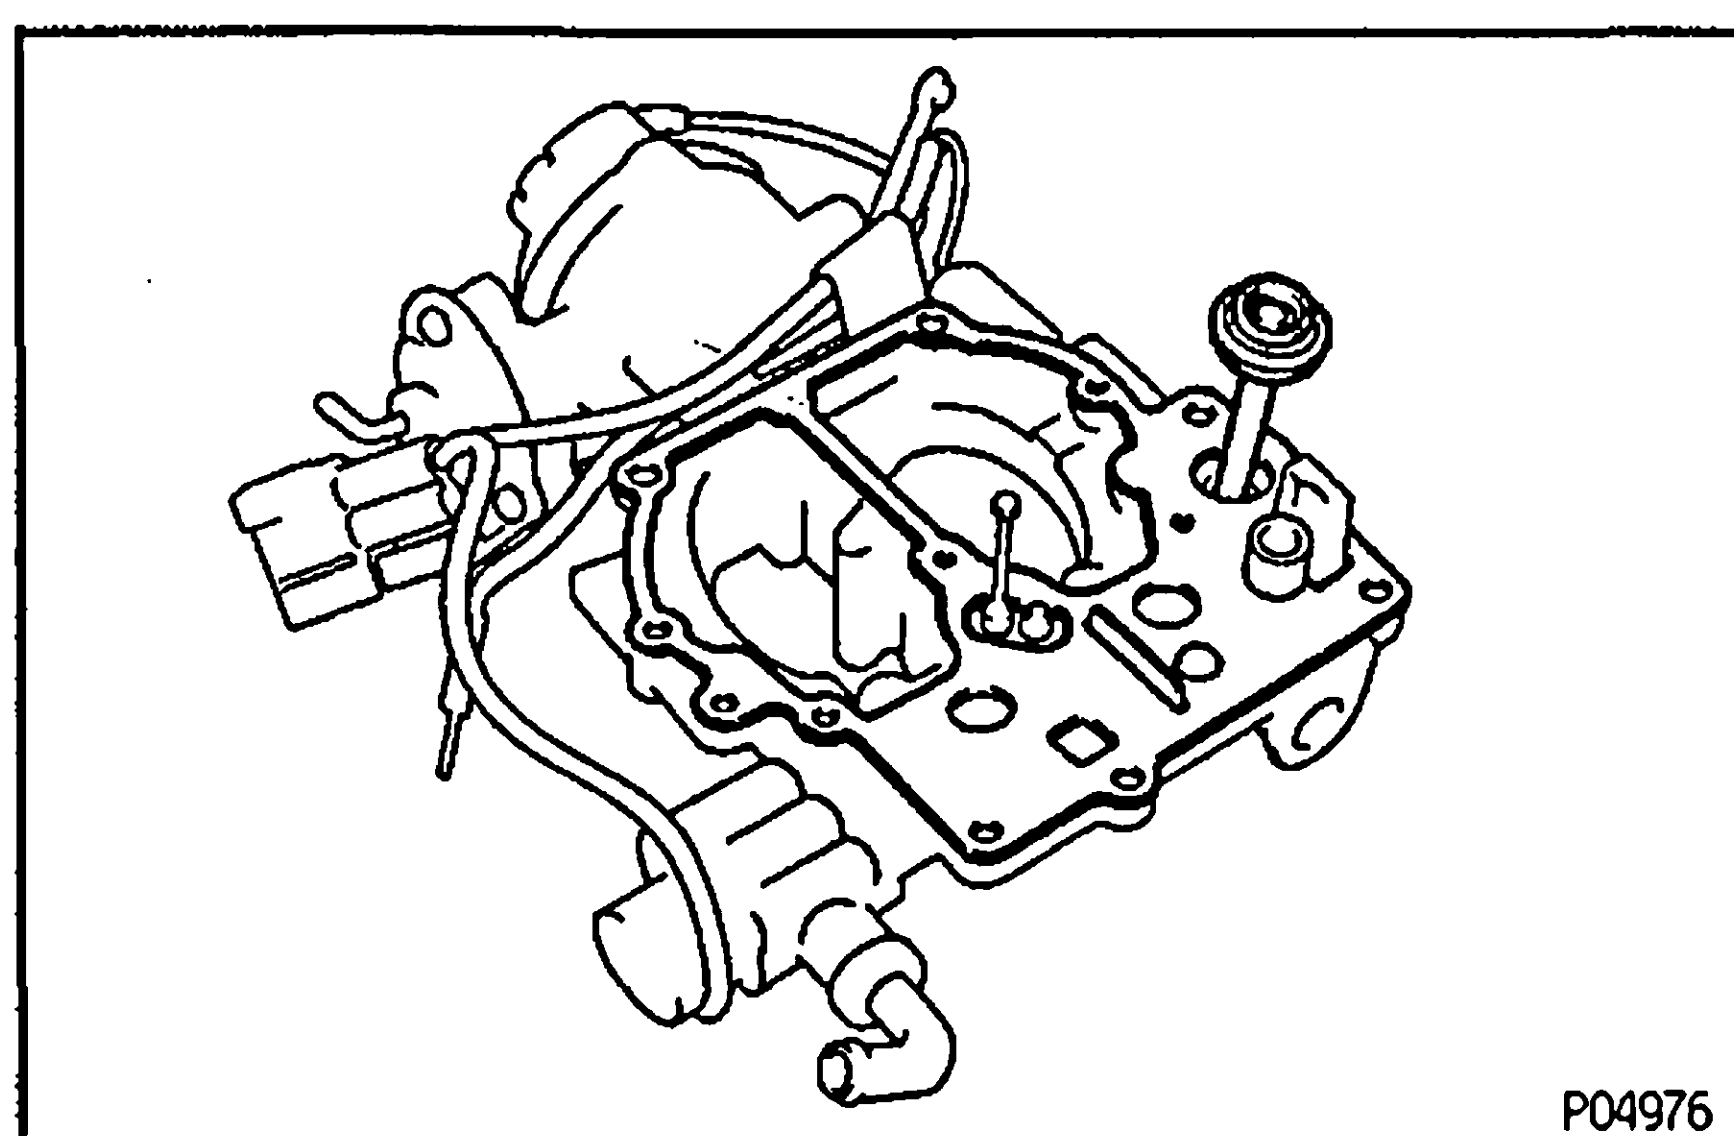


12. INSTALL NEW AIR HORN GASKET

Place the air horn gasket on the air horn.


13. INSTALL ACCELERATION PUMP PLUNGER

Install a new boot and the pump plunger.

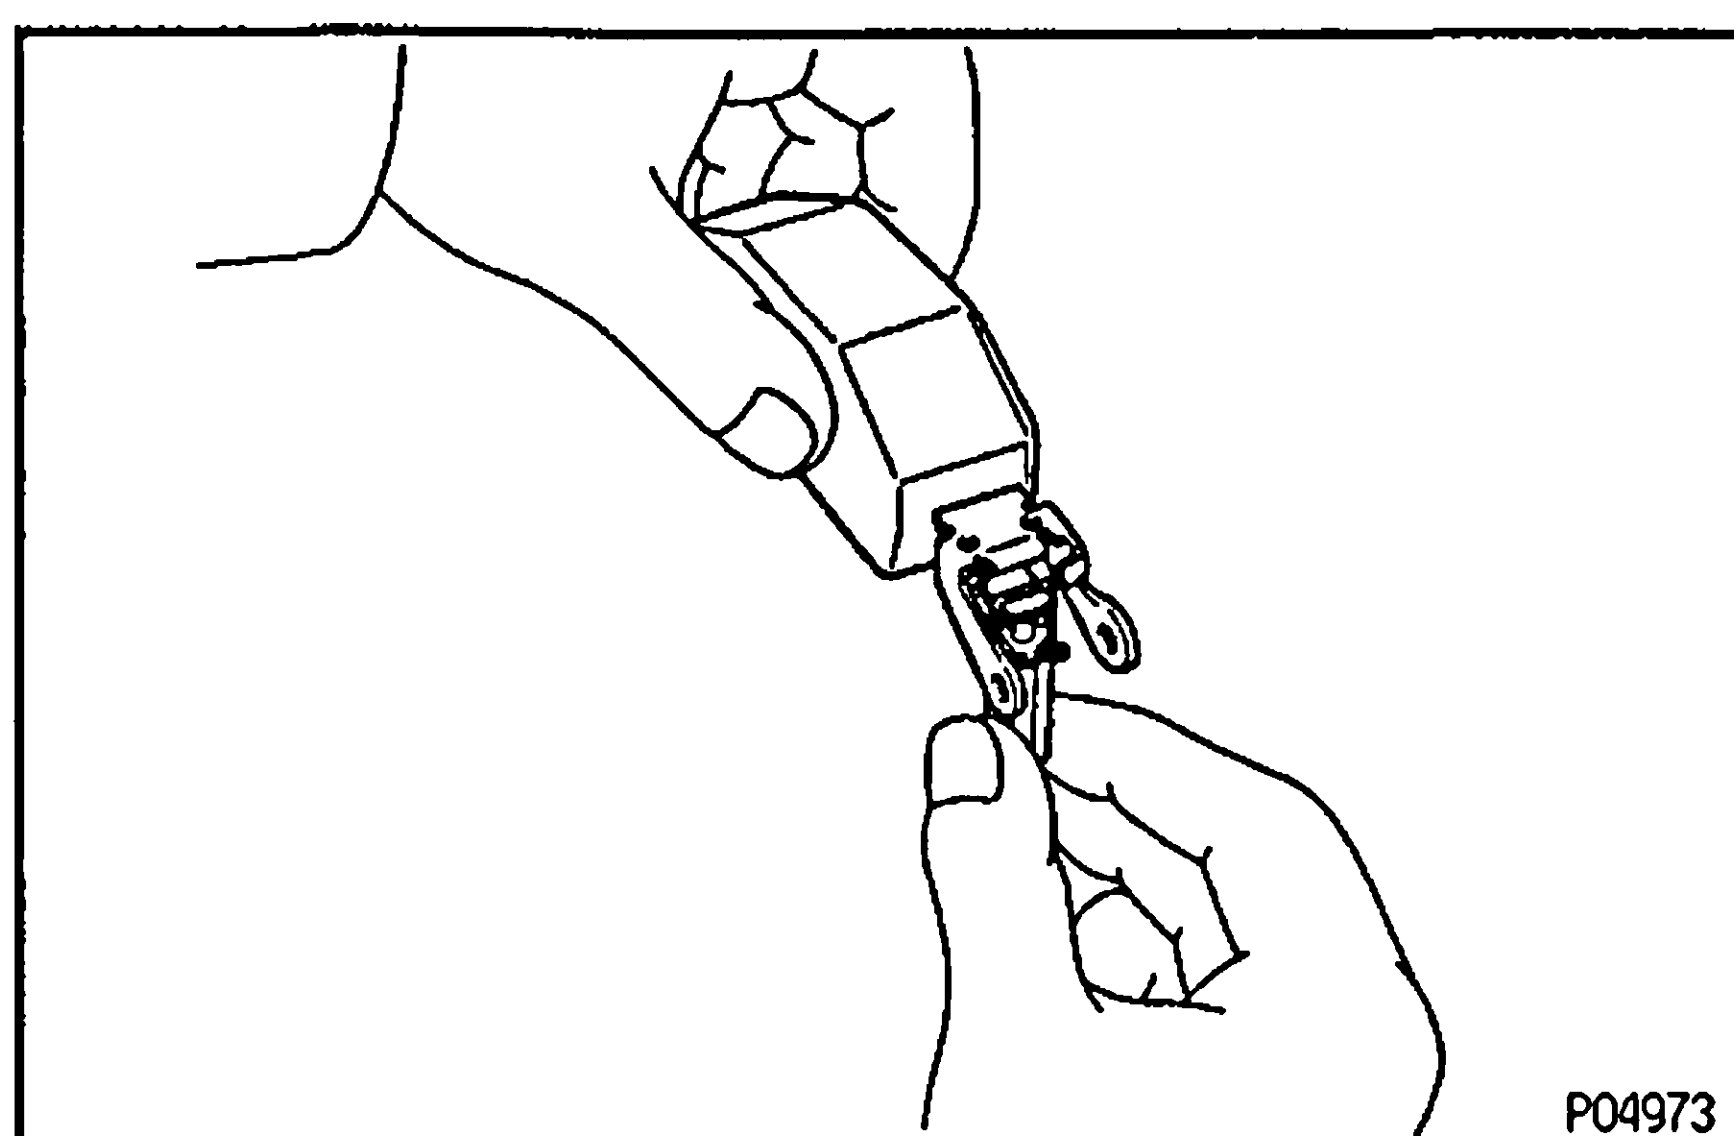


14. INSTALL NEEDLE VALVE AND FLOAT


- (a) Hook the needle valve clip to the lip portion of the float.

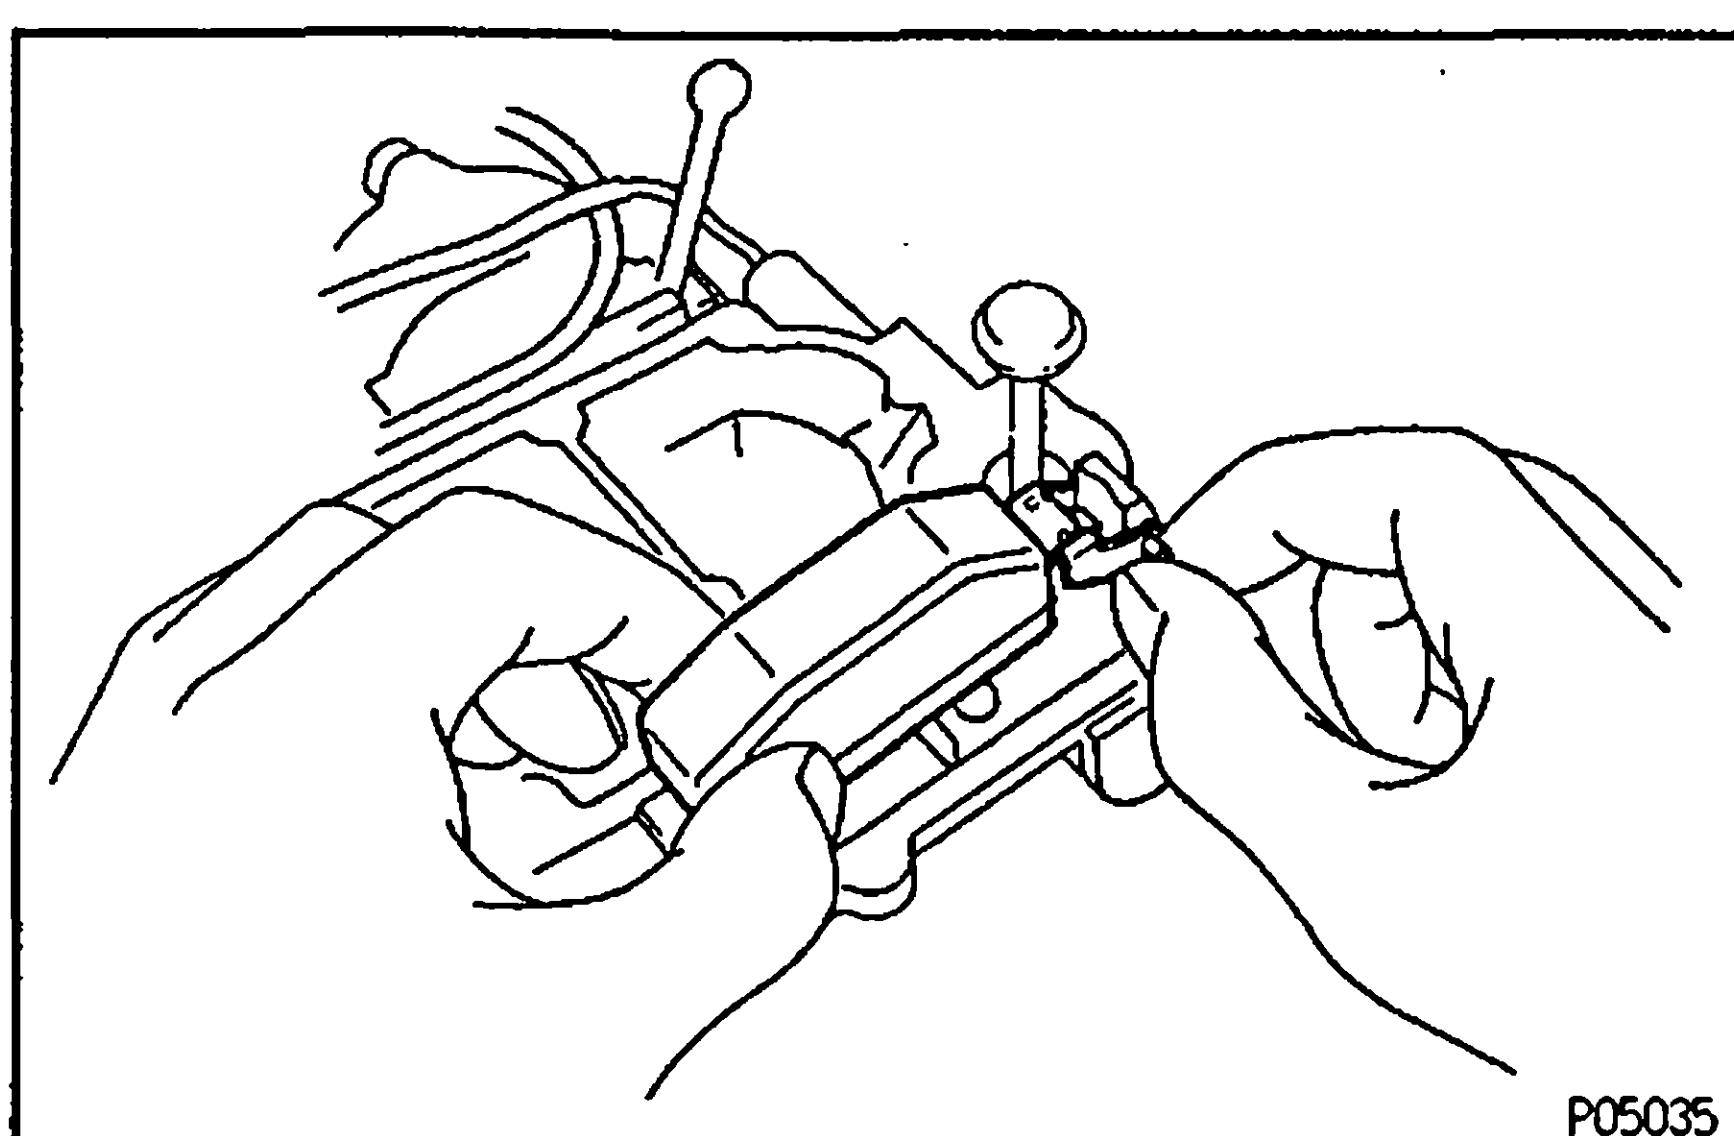



- (b) Install the float and secure it with the pivot pin.

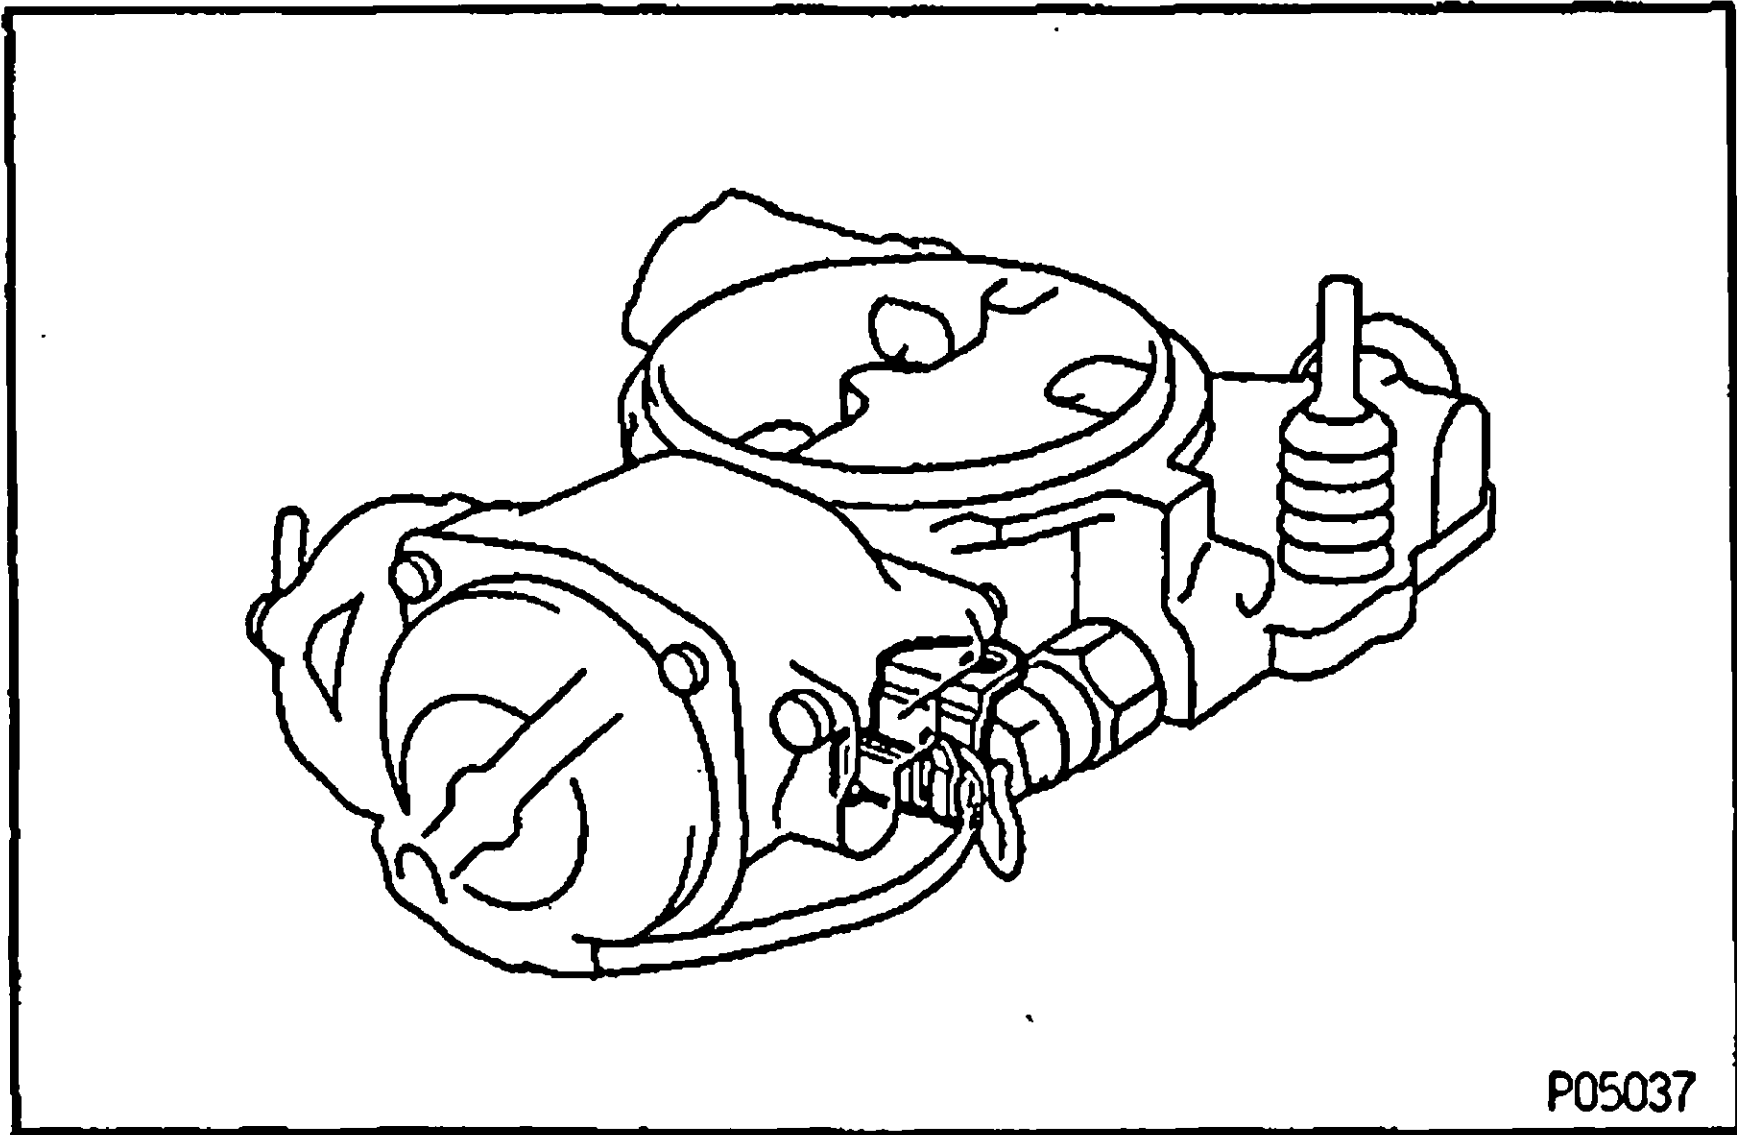**15. INSTALL AIR HORN ASSEMBLY**


- (a) Install the wire clamp in position.

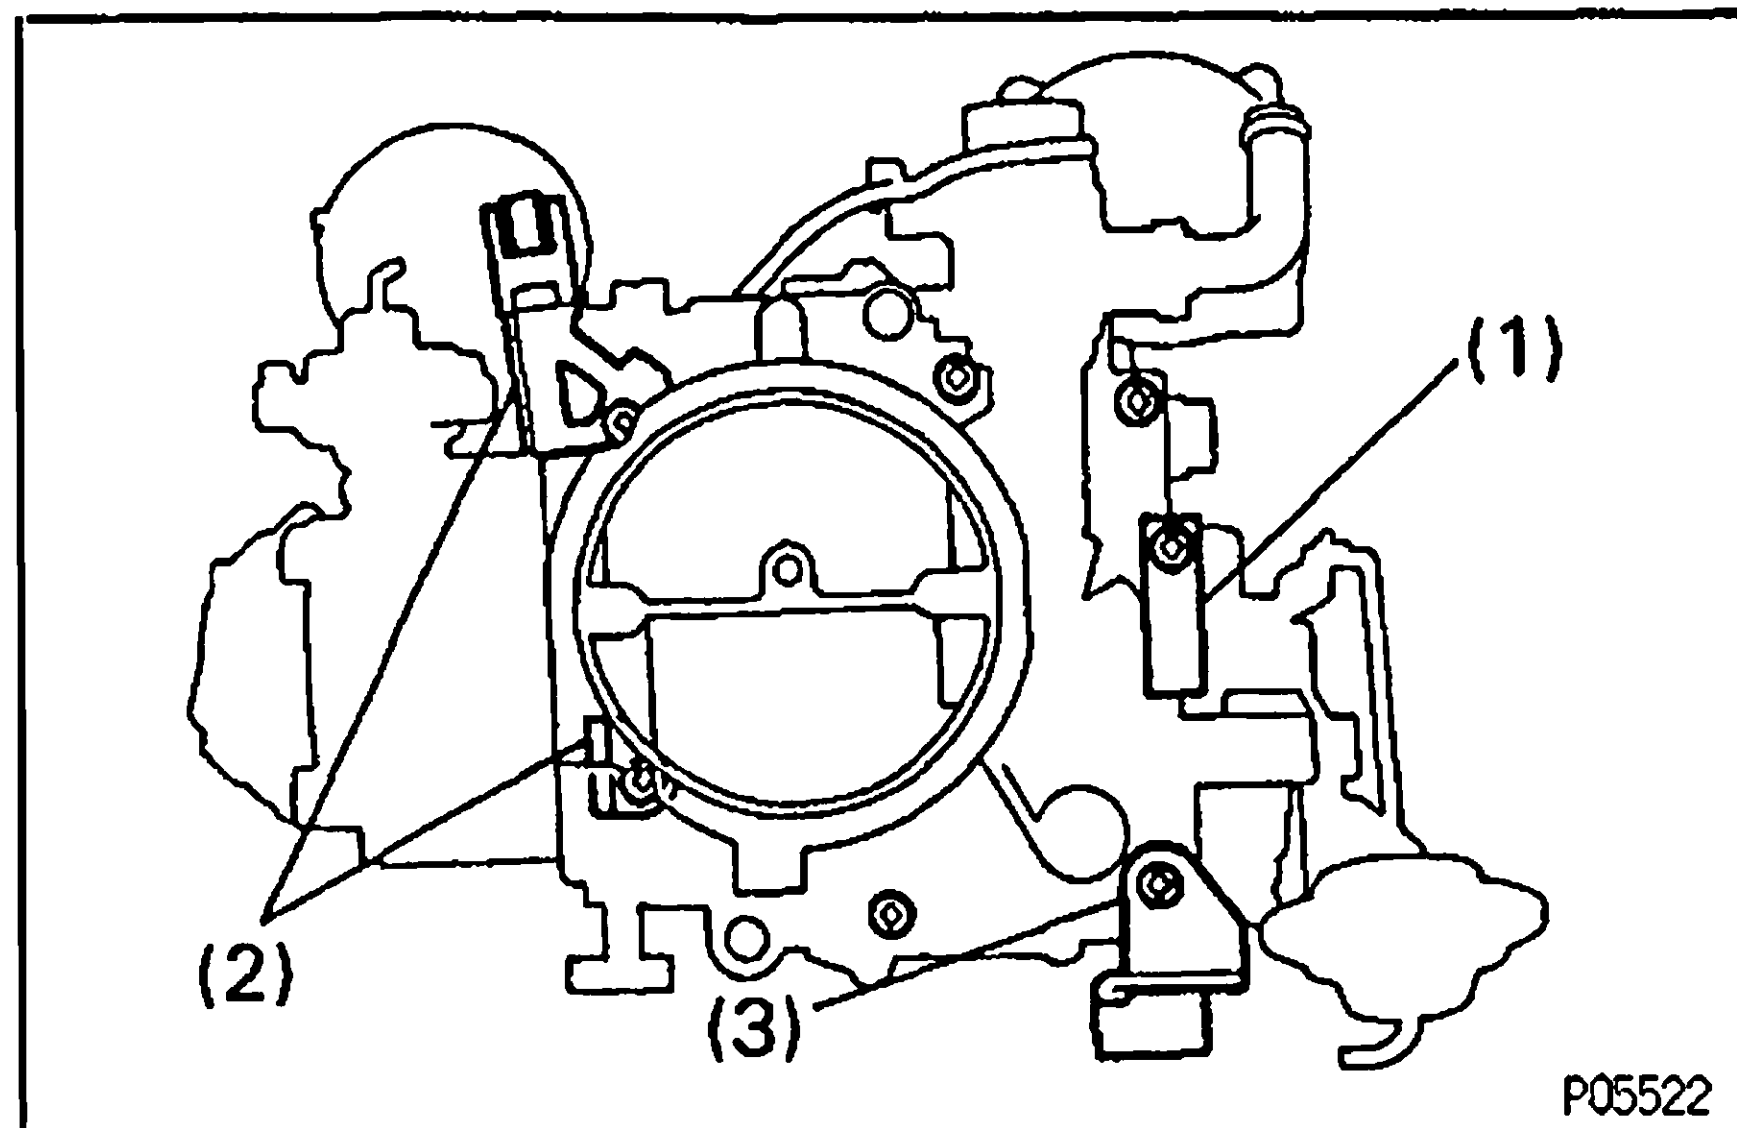

- (b) Place the air horn in the carburetor body.
 (c) Install the following parts with the seven screws:
 (1) Number plate
 (2) Wire clamps
 (3) Vacuum hose clamp

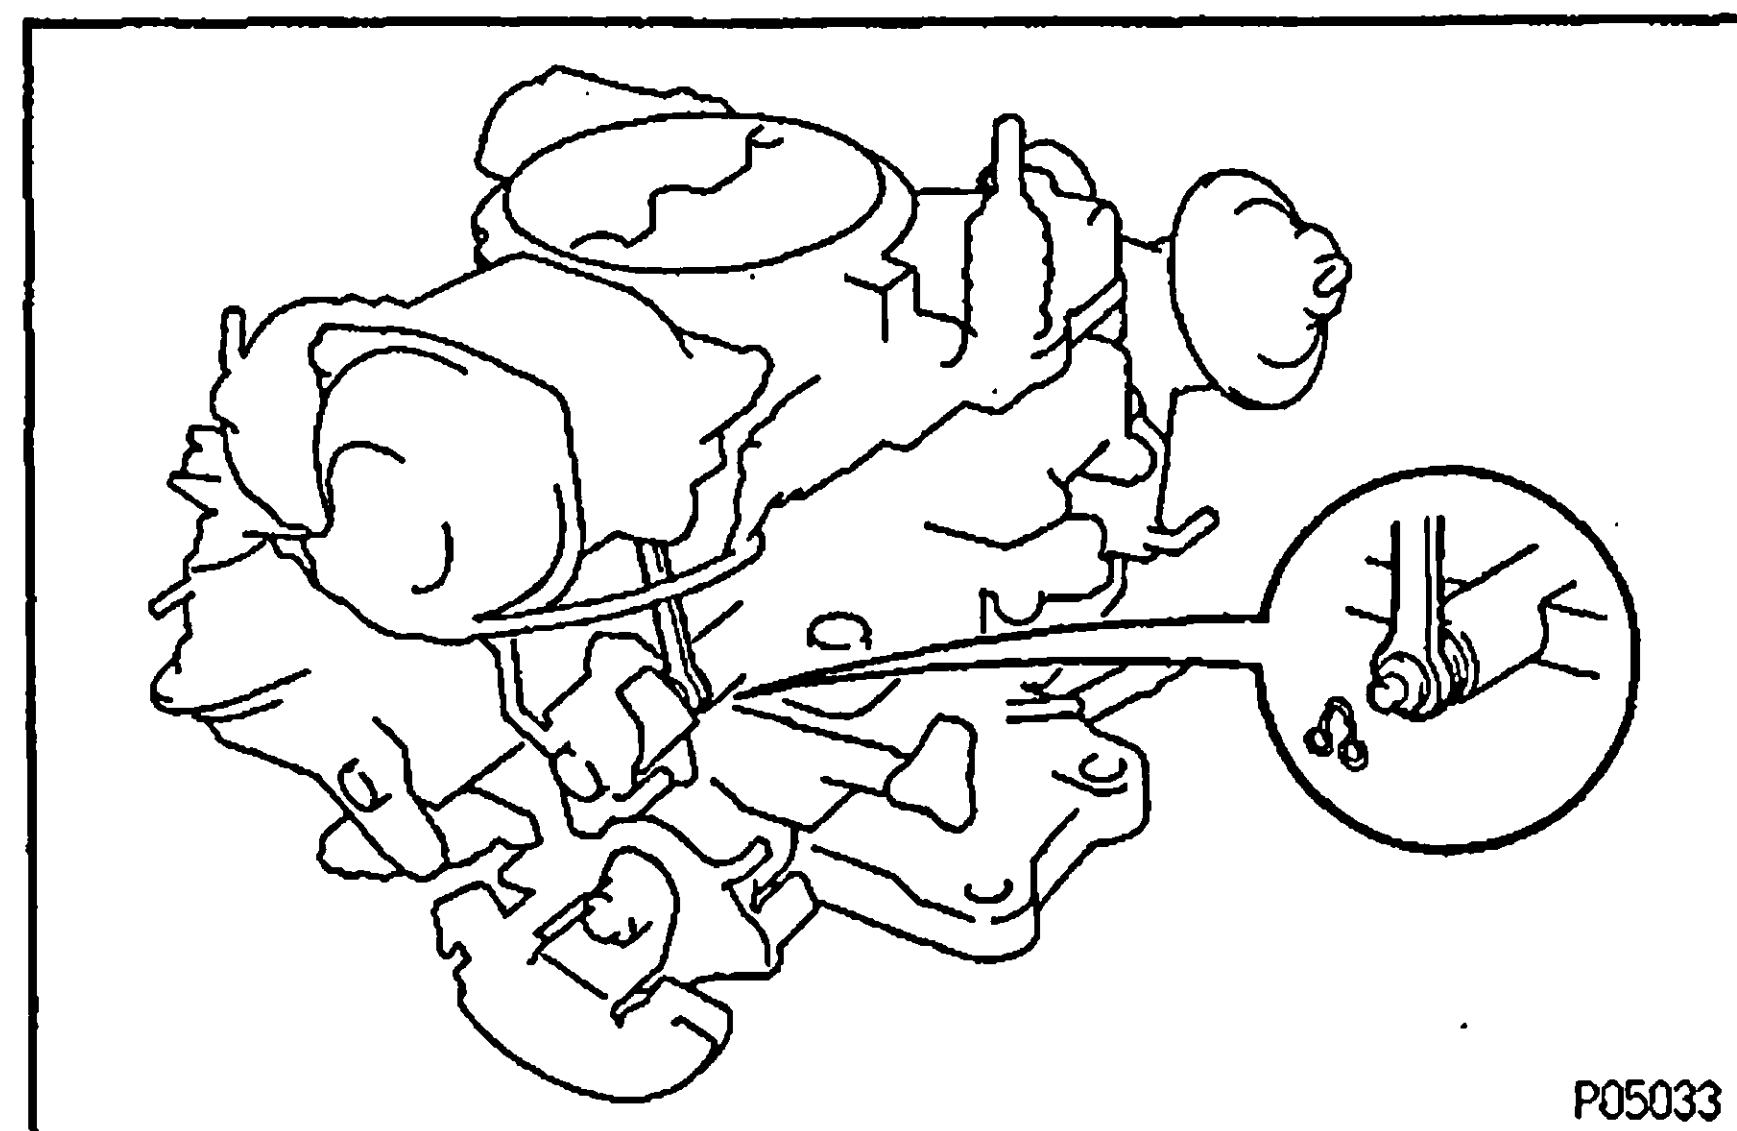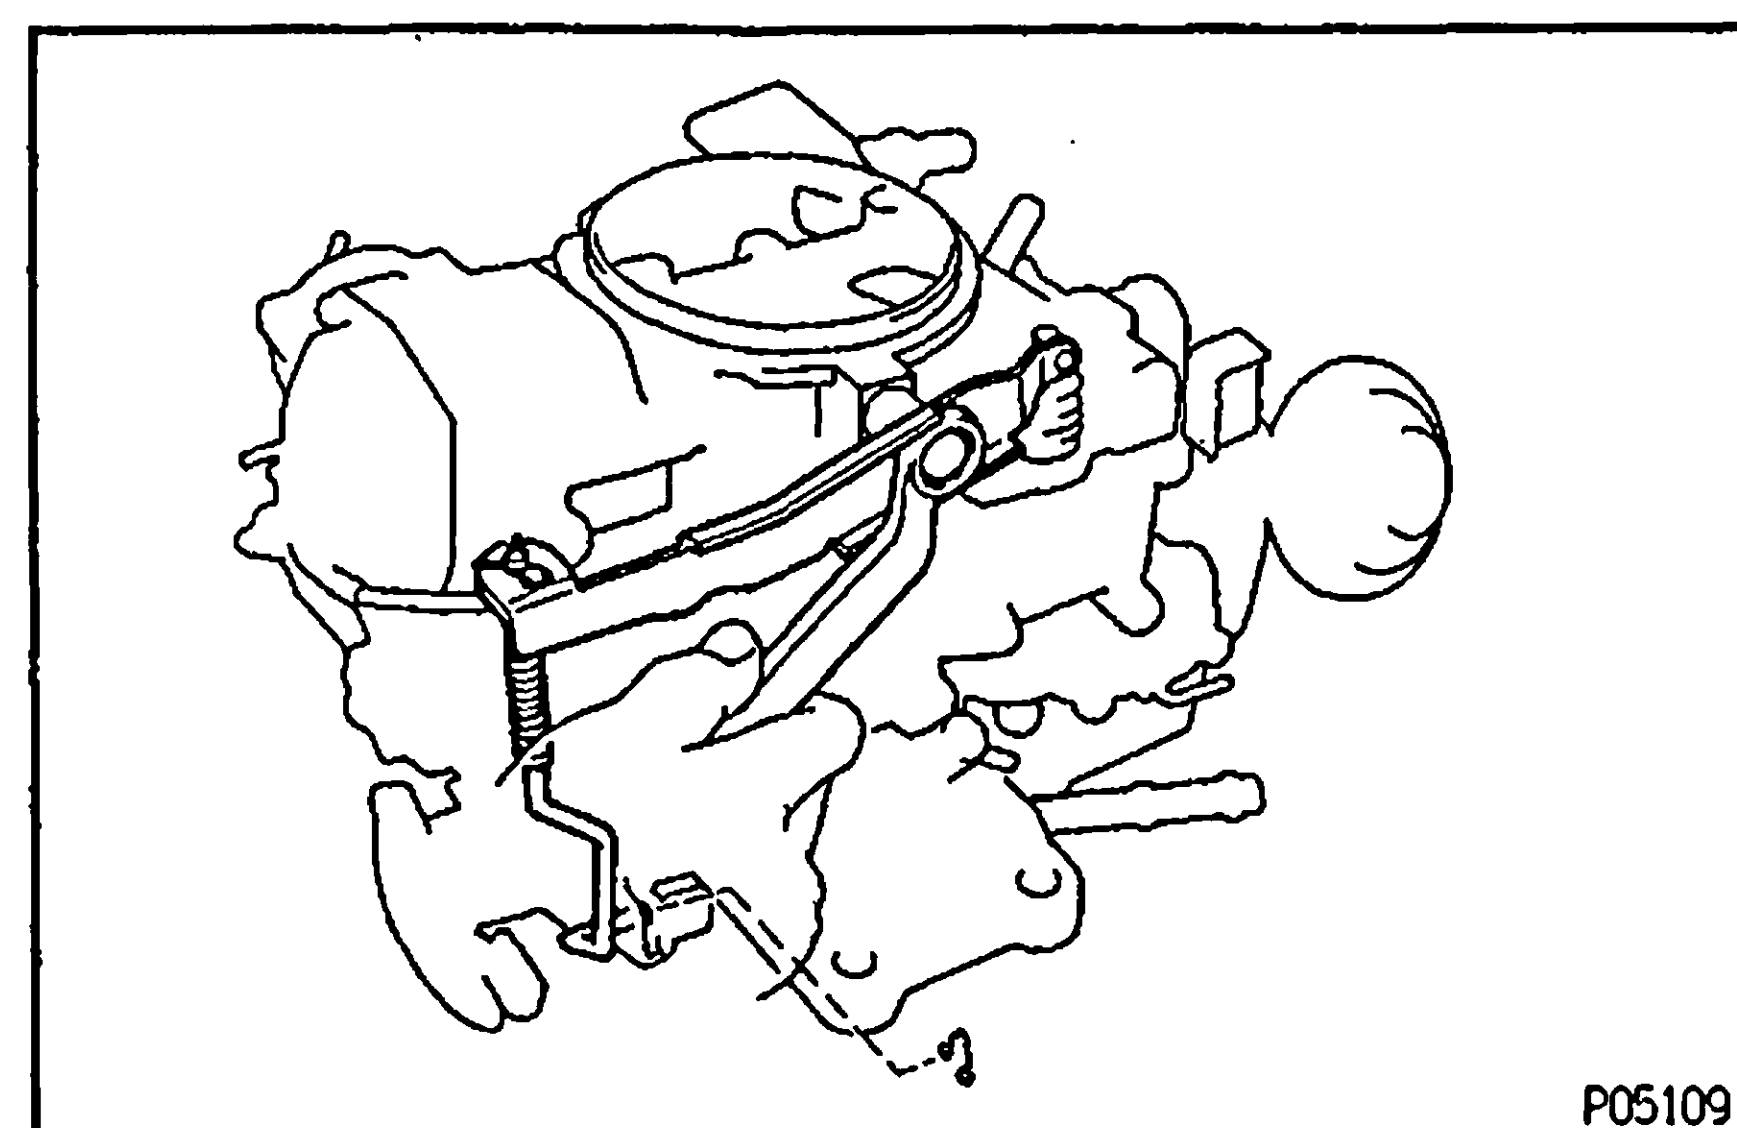**16. CONNECT FAST IDLE CAM BREAKER (FICB) LINK****17. INSTALL ACCELERATION PUMP ARM**

- (a) Connect the pump connecting link to the throttle lever.
 (b) Connect the pump arm to the pump plunger.
 (c) Install the pump arm with the pivot bolt.
 (d) Secure the link with the snap ring.

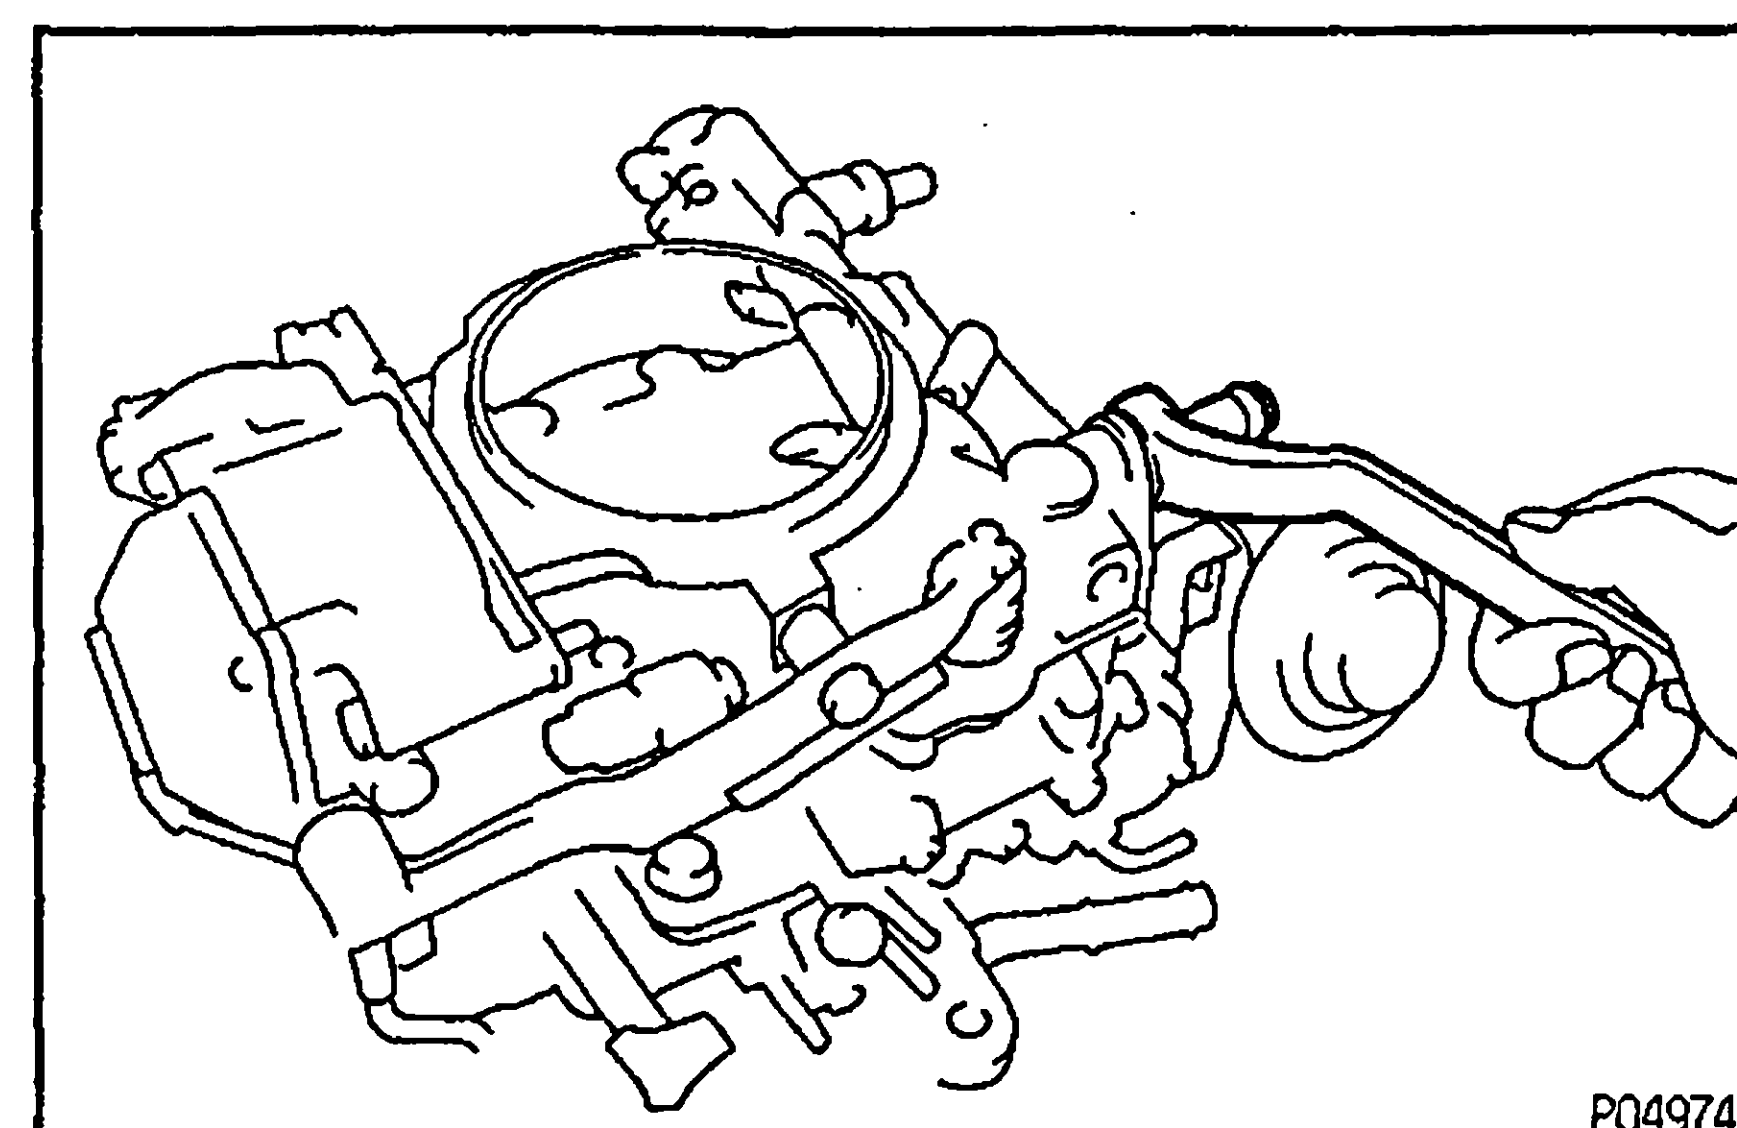**18. INSTALL NIPPLE UNION**


Install a new gasket and nipple union

19. CHECK FOR SMOOTH OPERATION OF EACH PART

CARBURETOR ADJUSTMENT

HINT: Use SST 09240-00014 to make adjustment.


EG

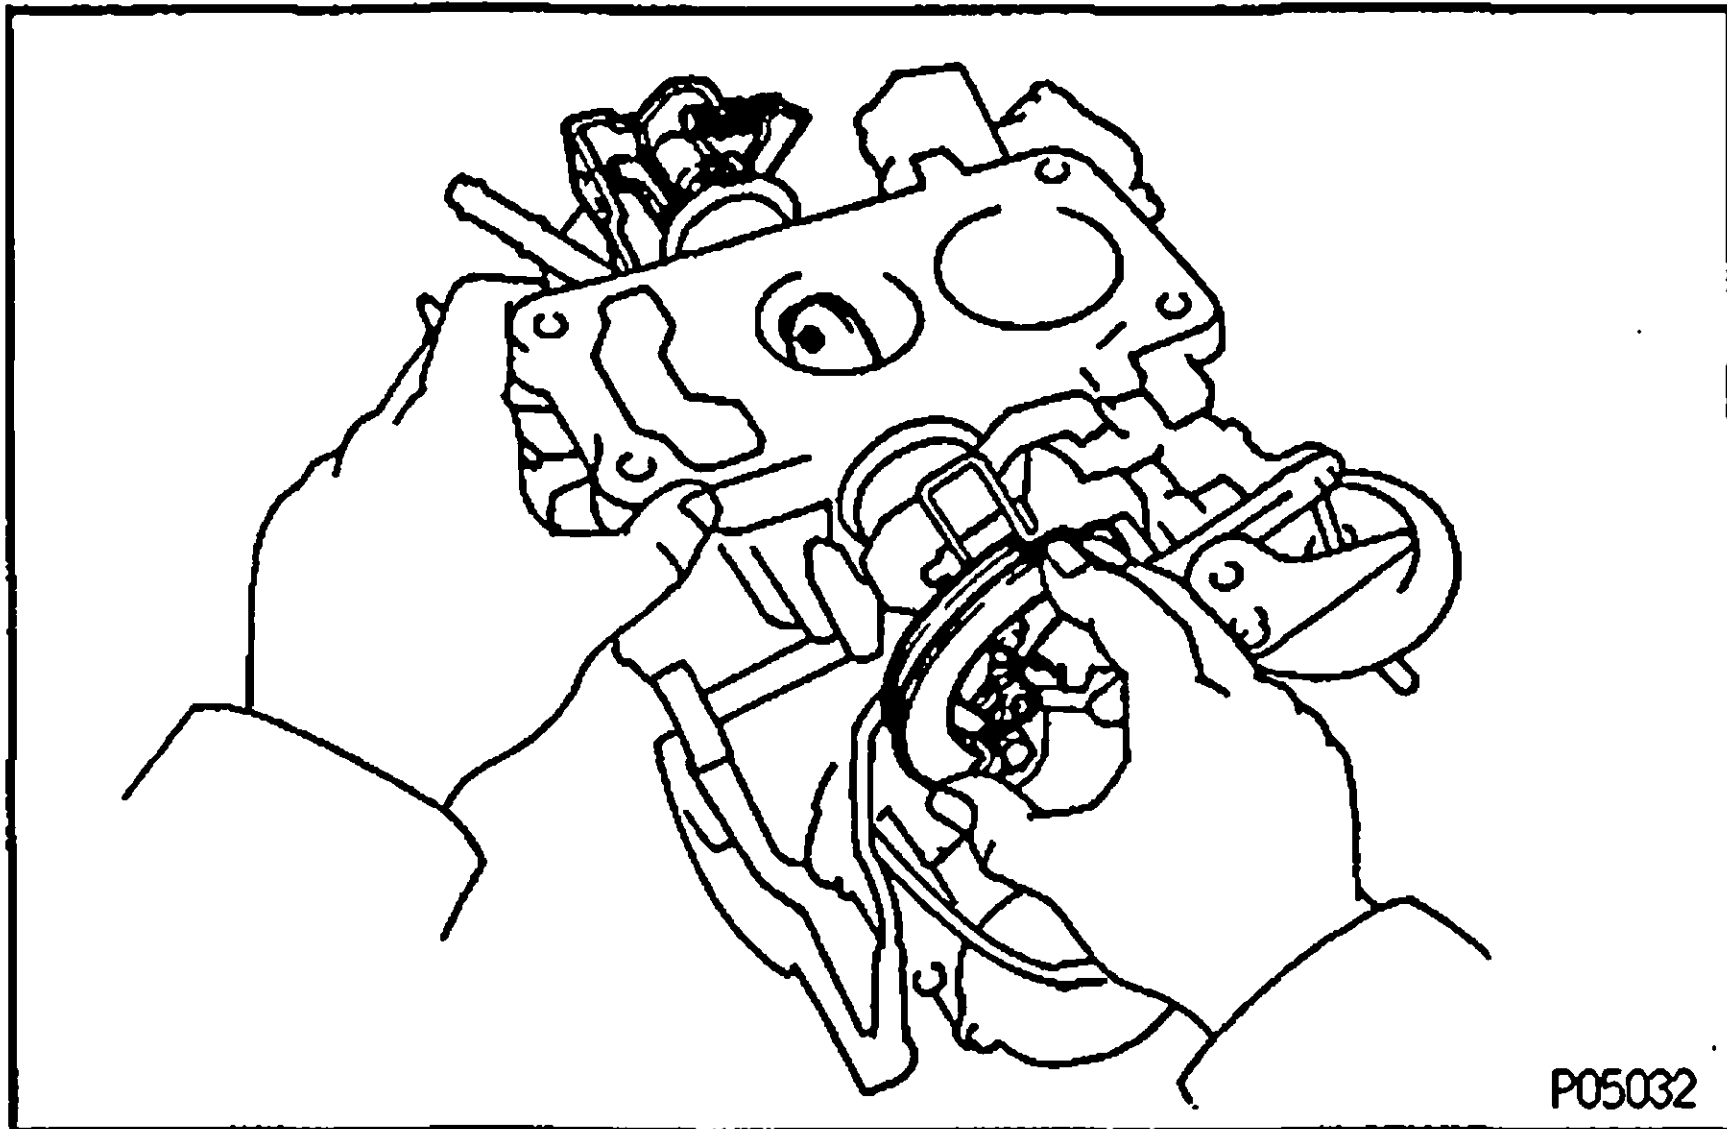


1. **CHECK AND ADJUST THROTTLE VALVE OPENING**
 - (a) Check the full opening angle of the primary throttle valve.

Standard angle:

90° from horizontal

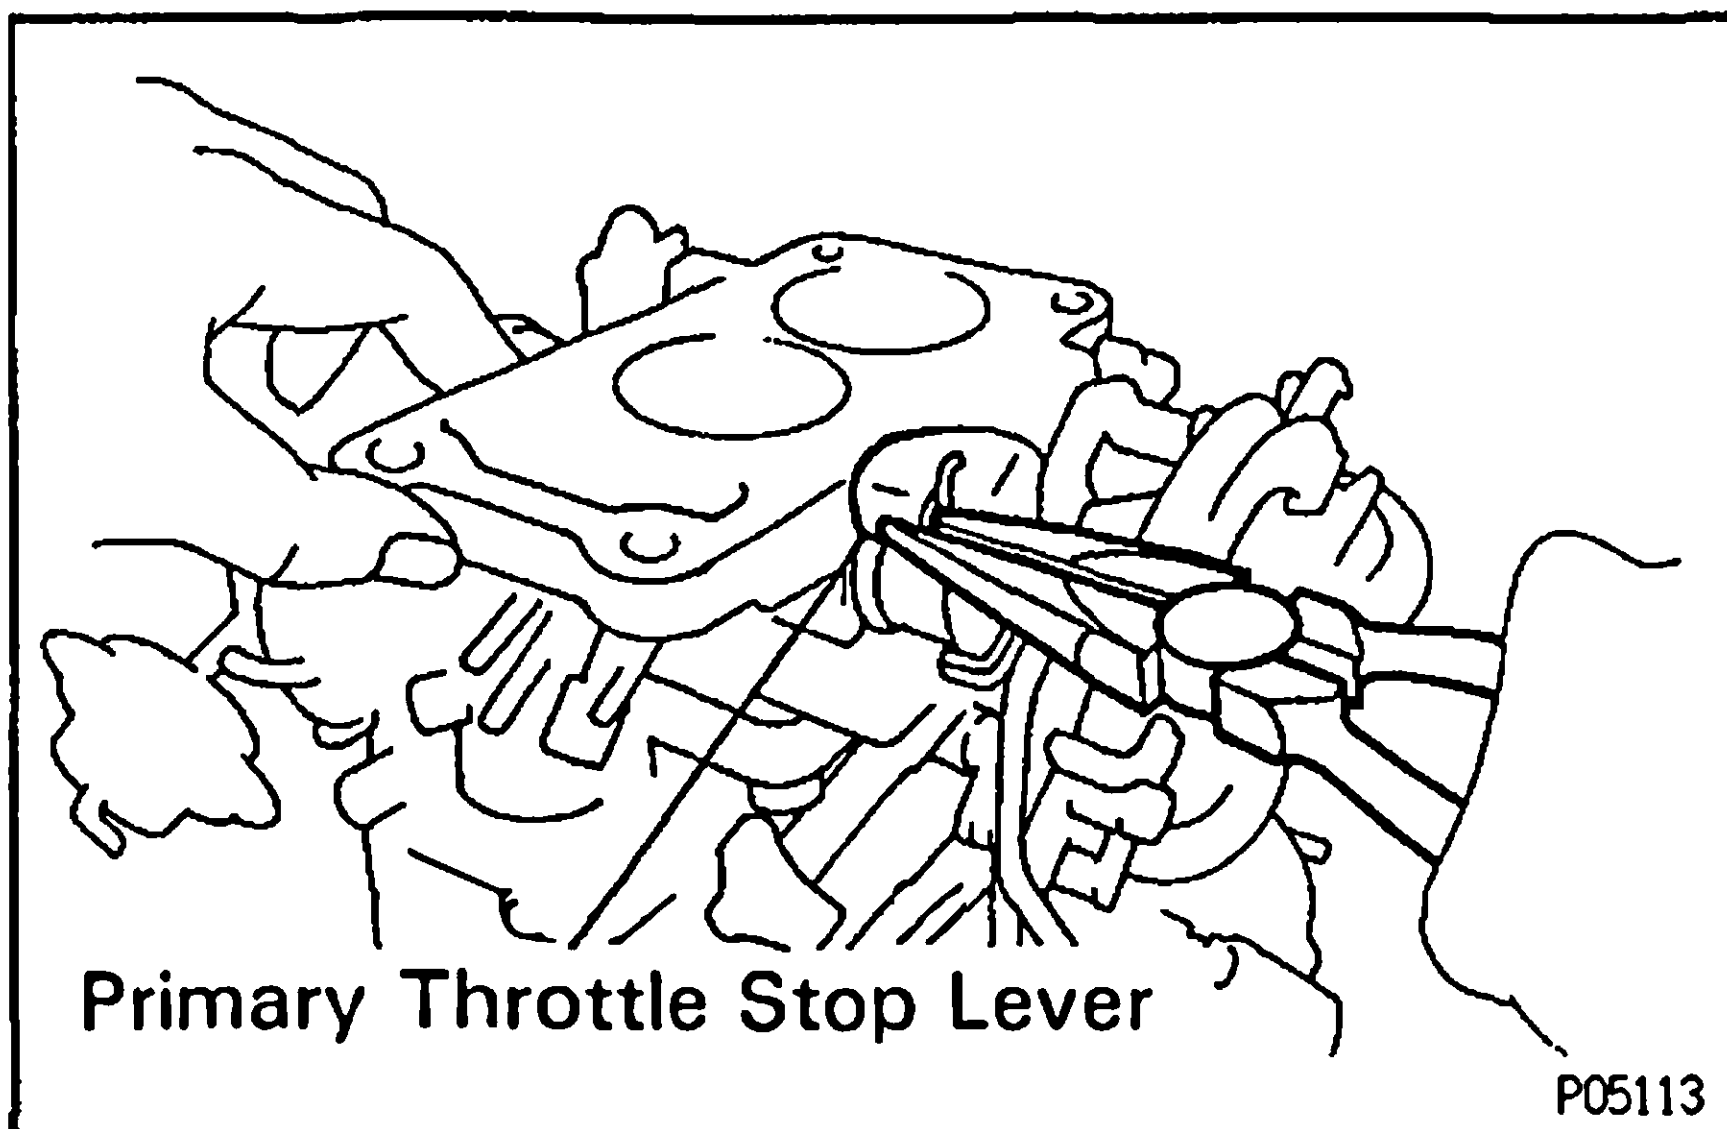


- (b) Adjust by bending the primary throttle stop lever.

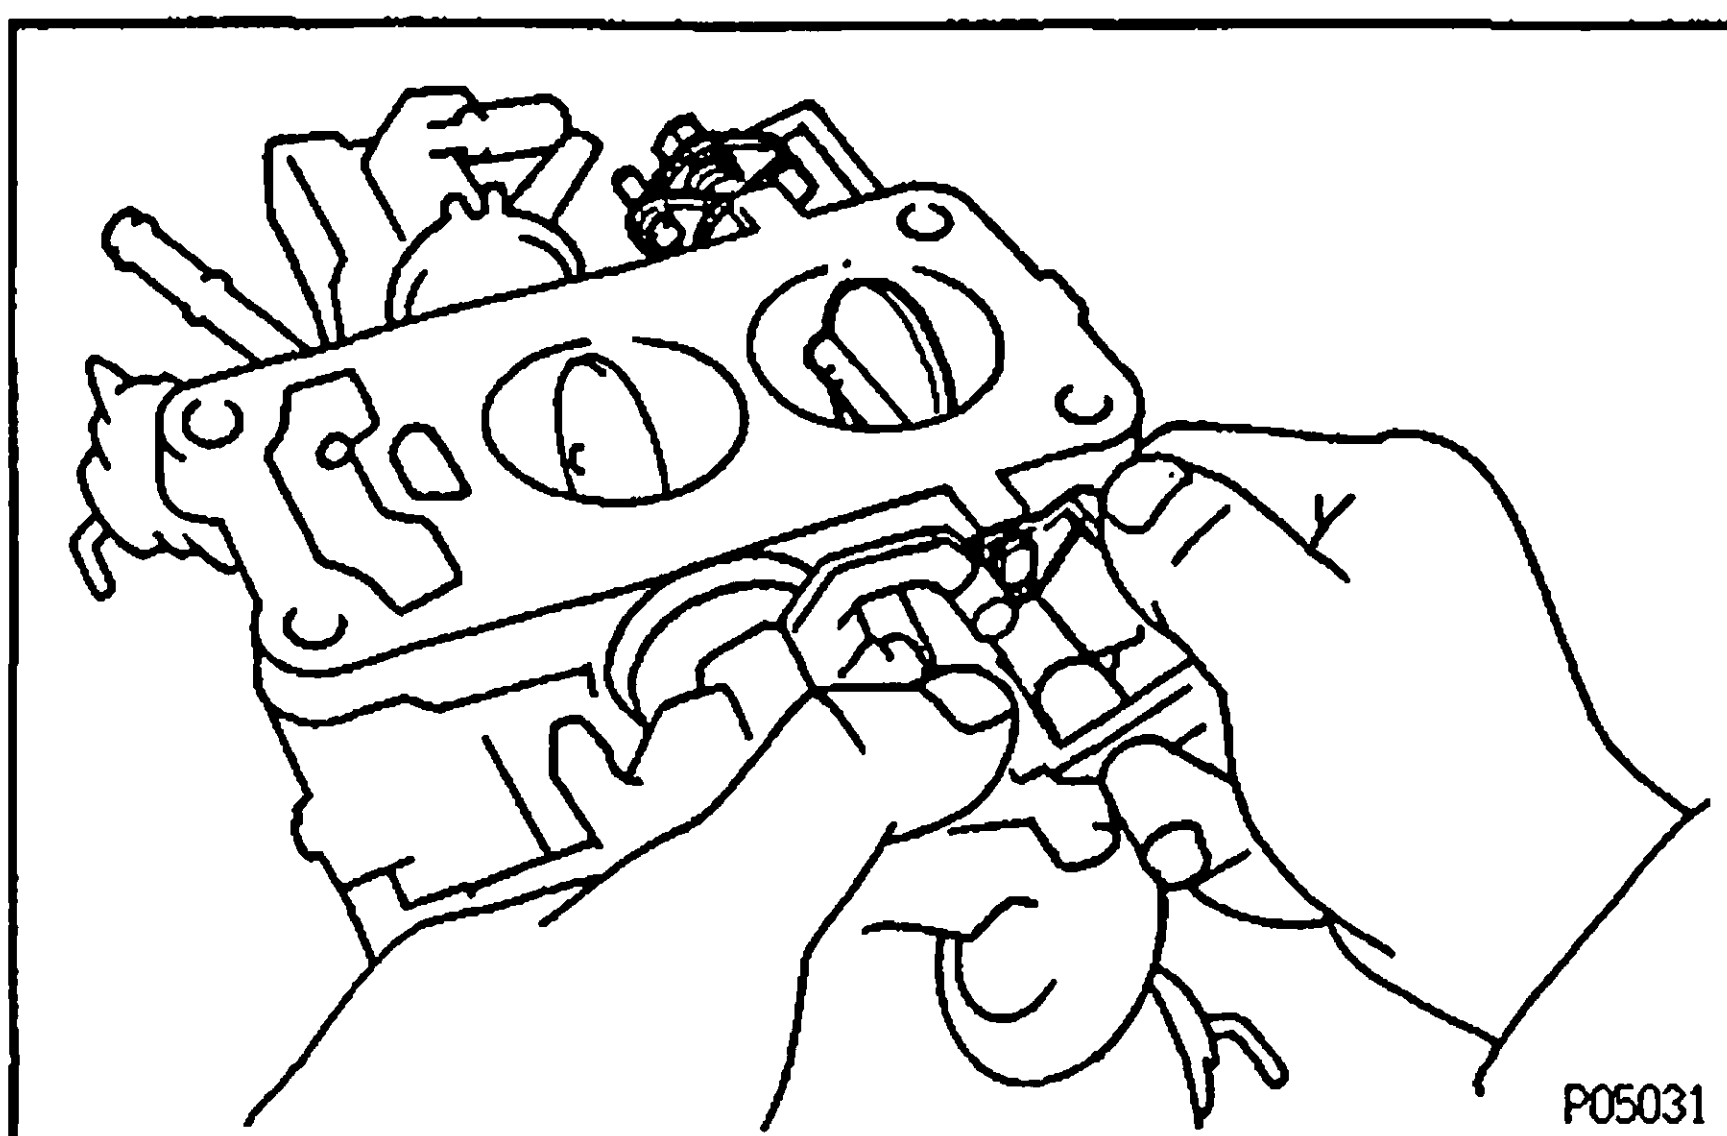


- (c) Check the full opening angle of the secondary throttle valve.

Standard angle:

90° from horizontal

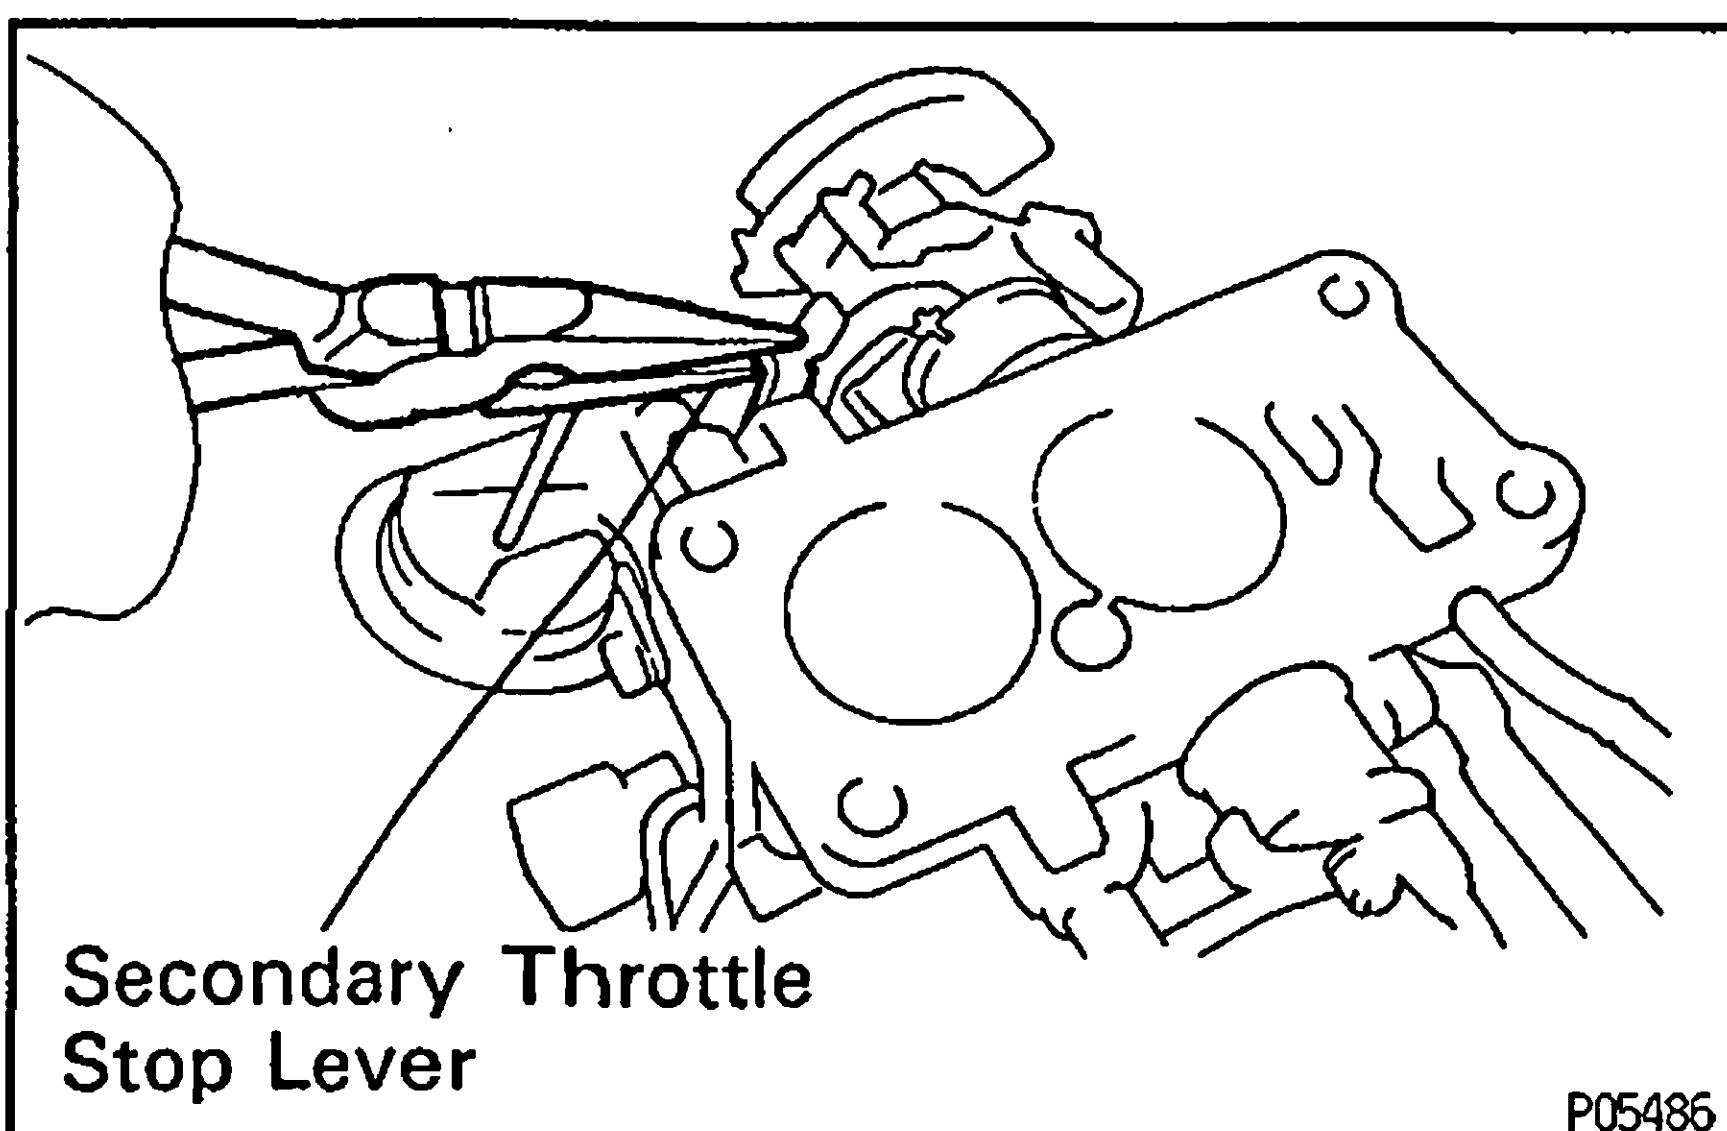

- (d) Adjust by bending the secondary throttle stop lever.

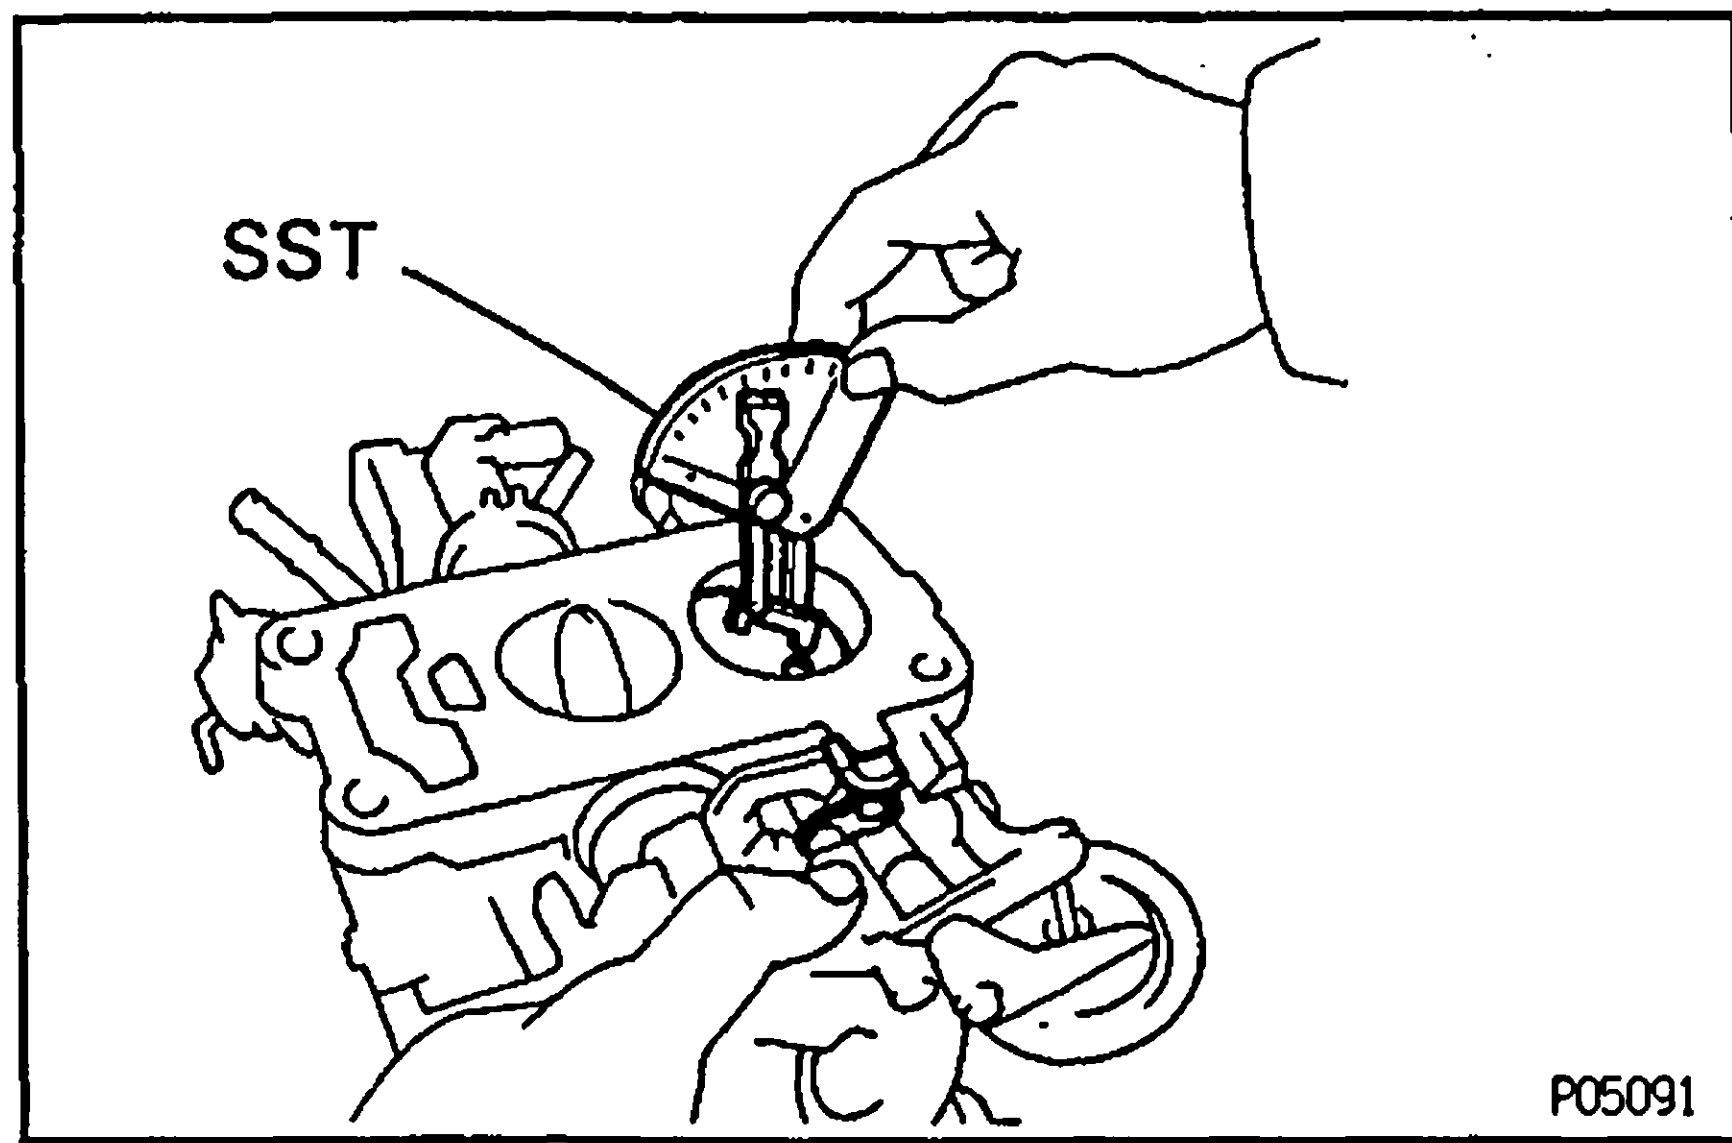


2. CHECK AND ADJUST KICK—UP SETTING

- (a) With the primary throttle valve fully opened, check the opening angle of the secondary throttle valve.


Standard angle:

23° from horizontal

EG

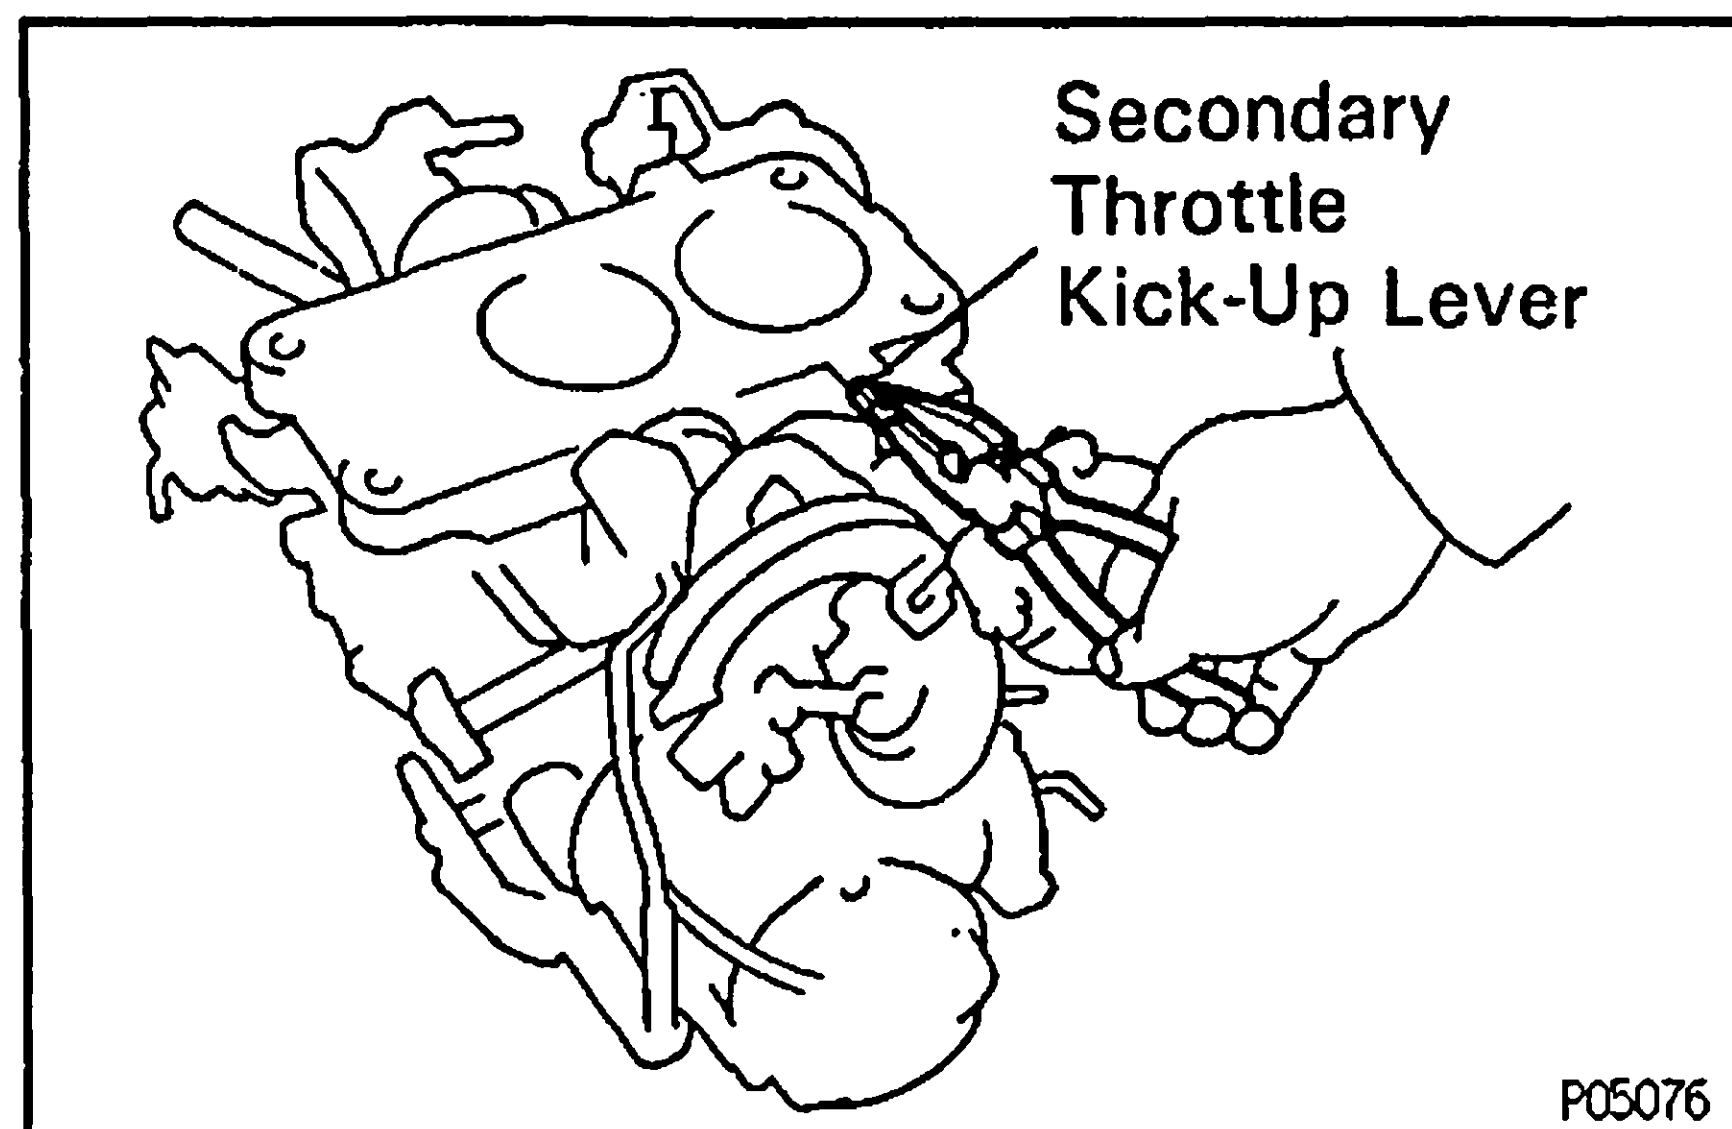

- (b) Adjust by bending the secondary throttle kick—up lever.

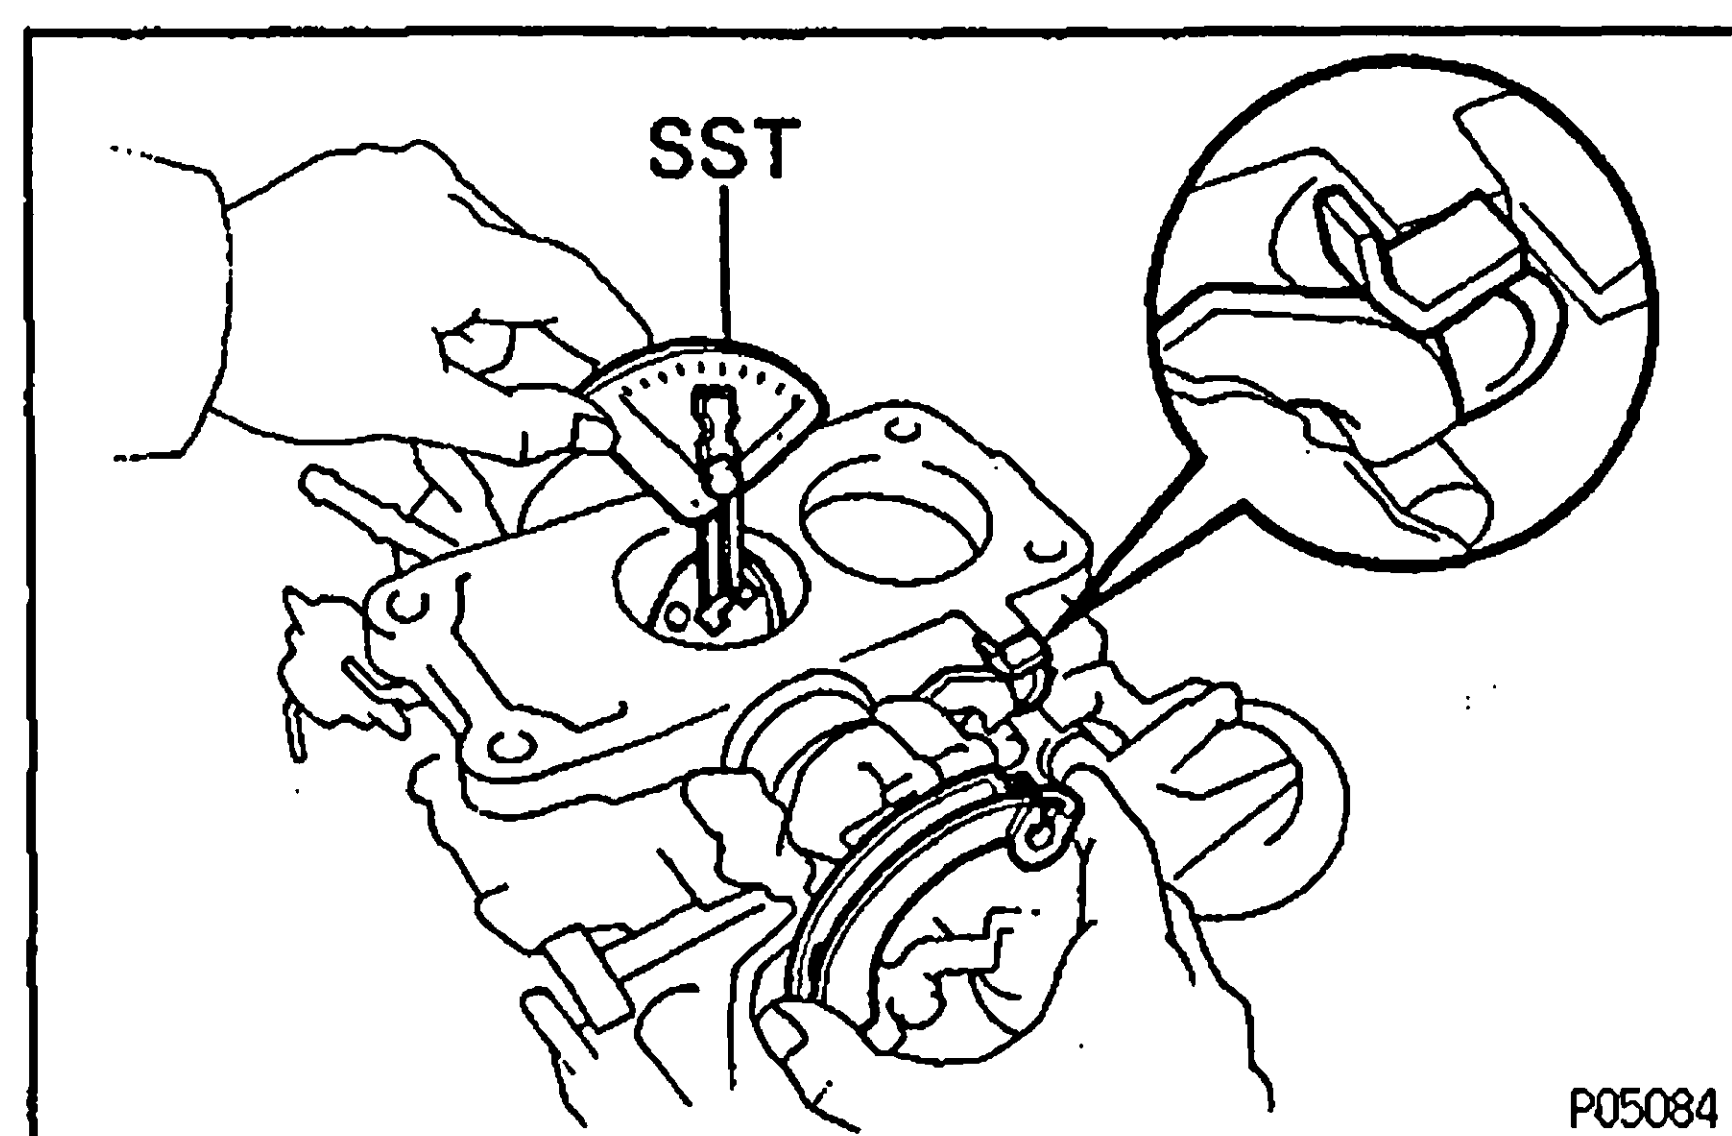


3. CHECK AND ADJUST SECONDARY TOUCH ANGLE

- (a) Check the primary throttle valve opening angle at the same time the primary kick lever just touches the secondary kick lever.

Standard angle:

58° from horizontal


- (b) If the angle is not within specification, replace the carburetor flange.

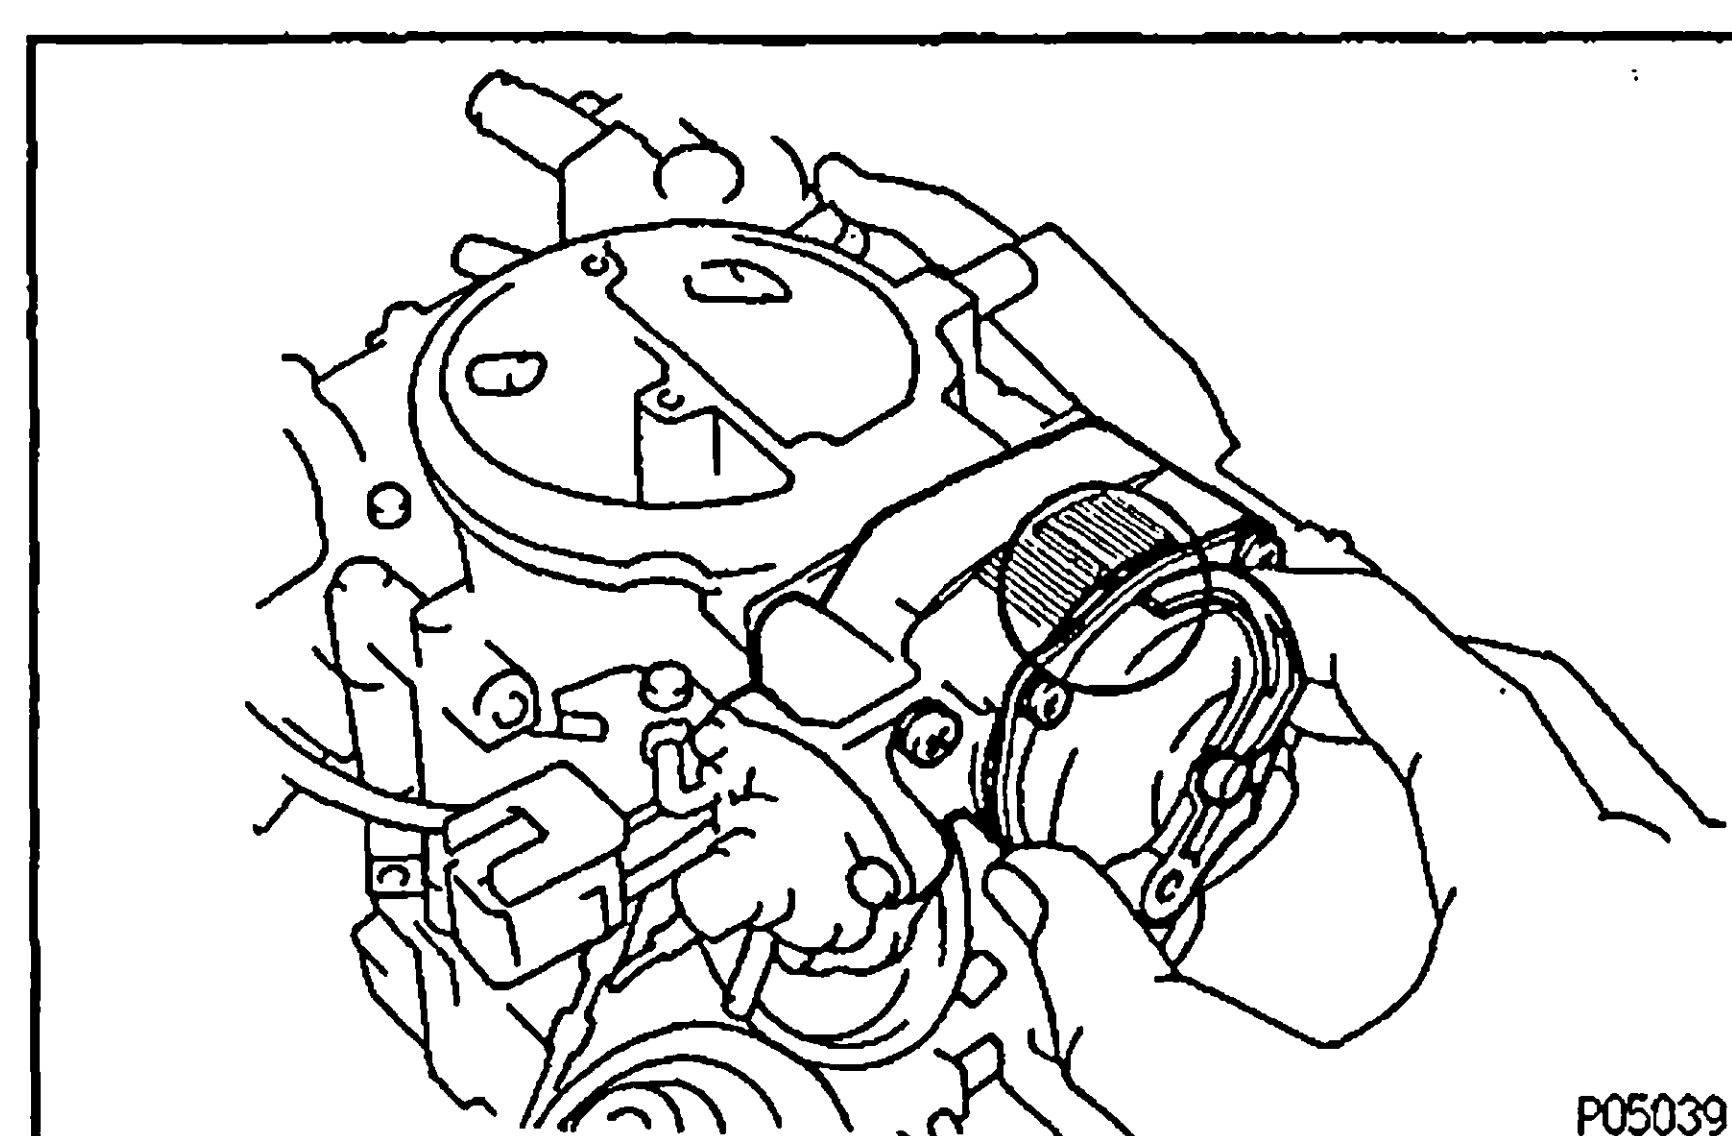

5. SET AUTOMATIC CHOKE

- (a) Set the coil housing line so that it is aligned with the center line of the thermostat housing.

HINT: The choke valve becomes fully closed when the atmospheric temperature reaches 30° C (86° F).

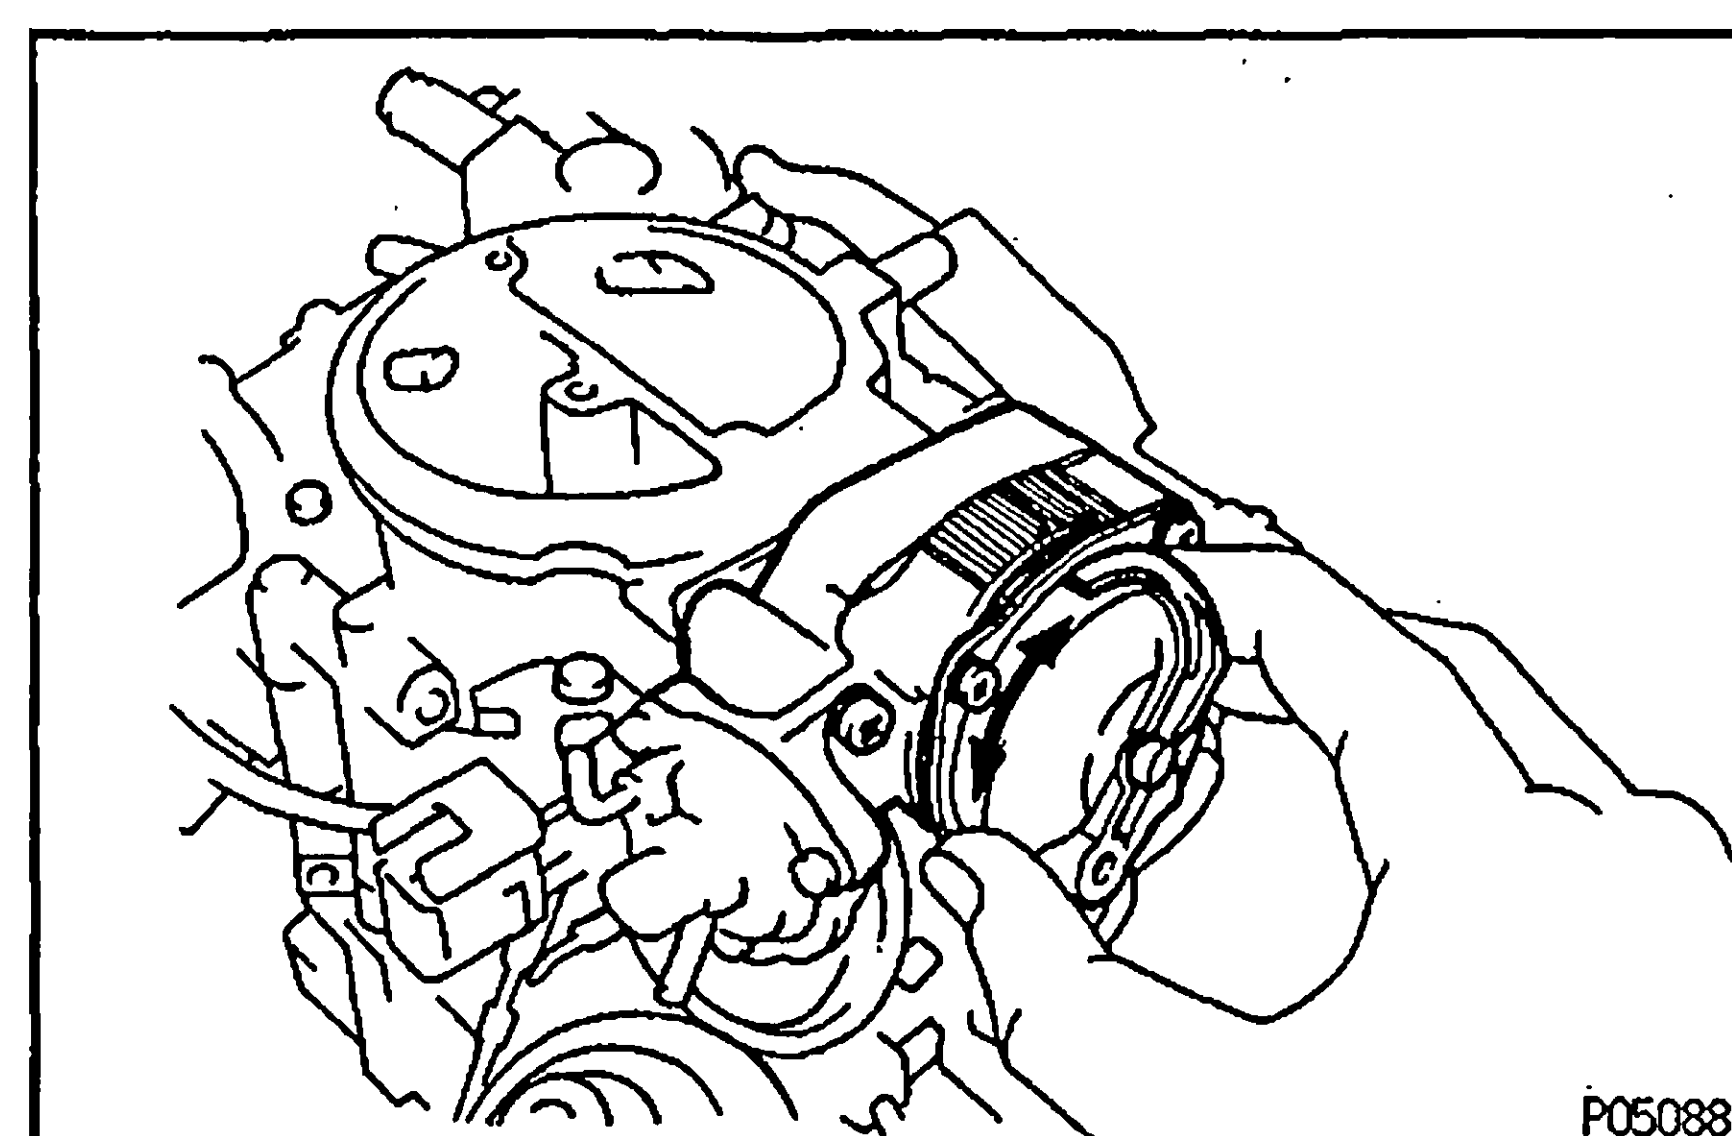


- (b) Depending on vehicle operating conditions, turn the coil housing and adjust the engine starting mixture.

If too rich Turn clockwise


If too lean Turn counterclockwise

6. CHECK AND ADJUST FAST IDLE SETTING

- (a) Apply vacuum to the dash pot (DP).

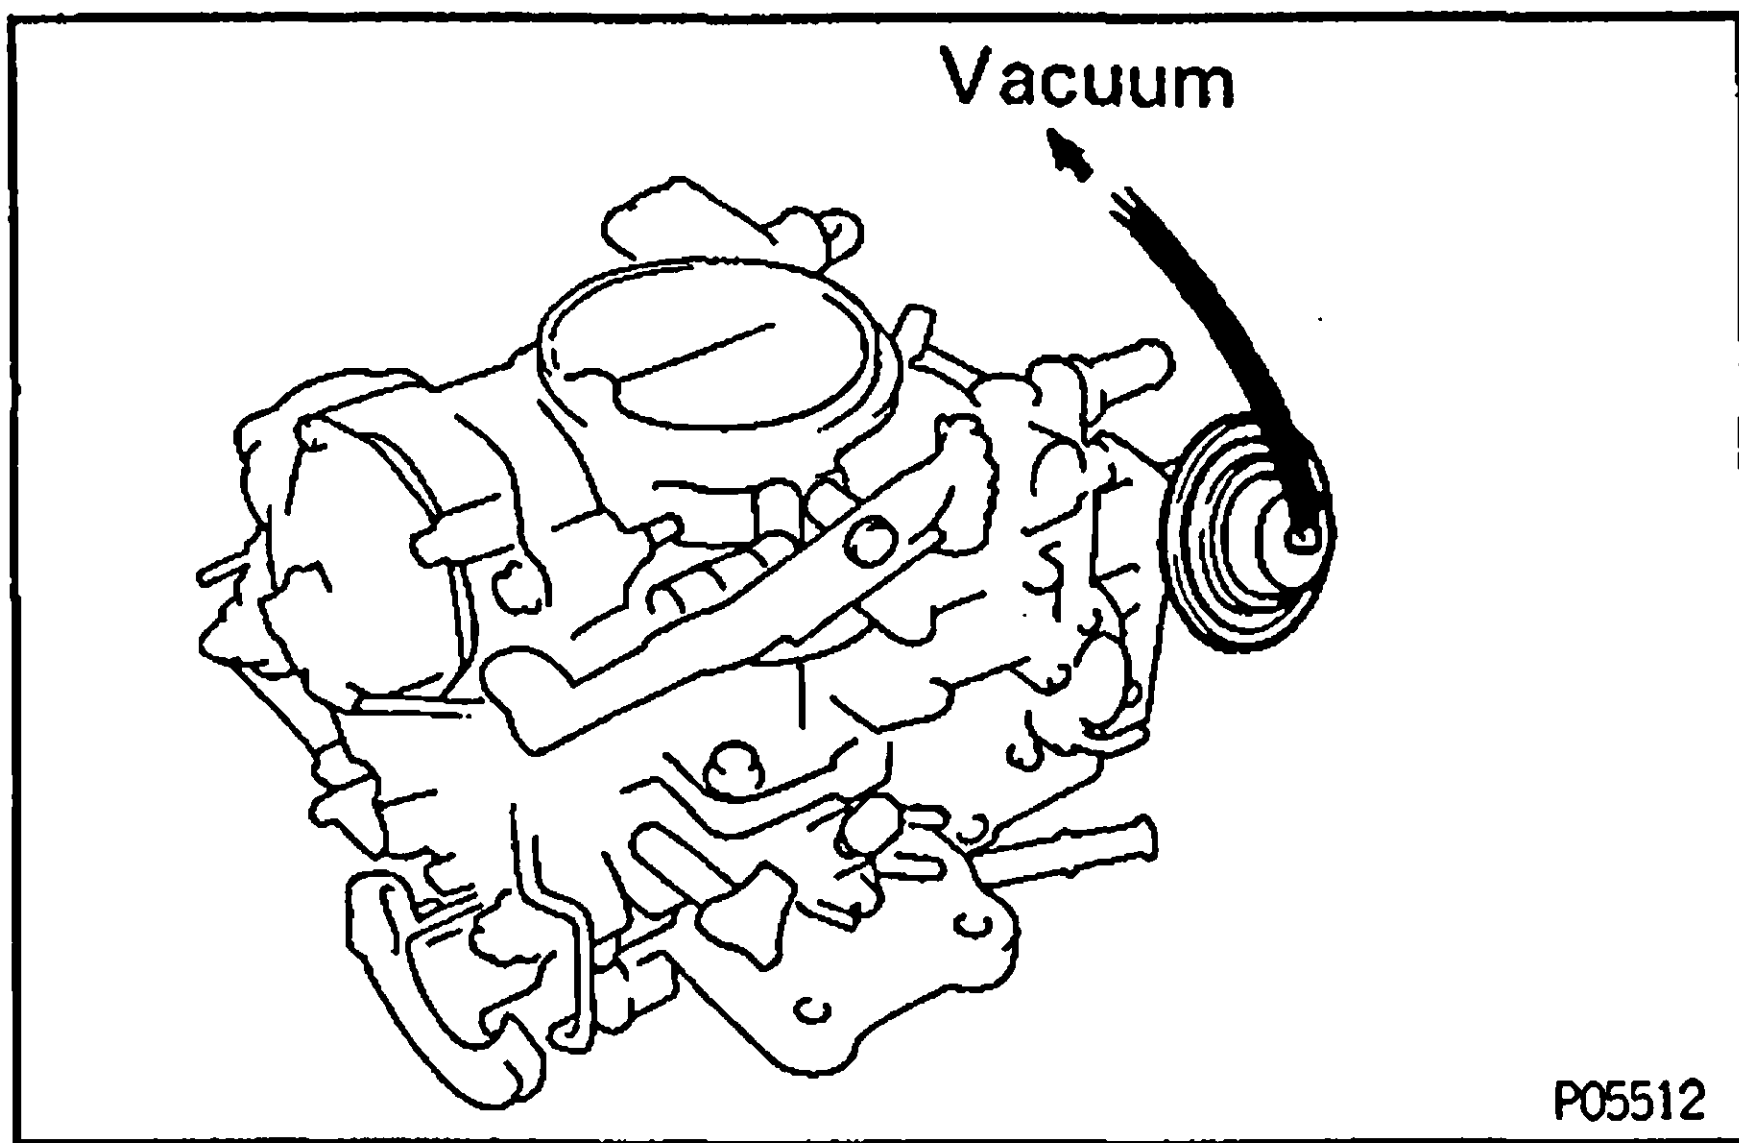

- (b) Position the fast idle lever onto the 4th step as shown.

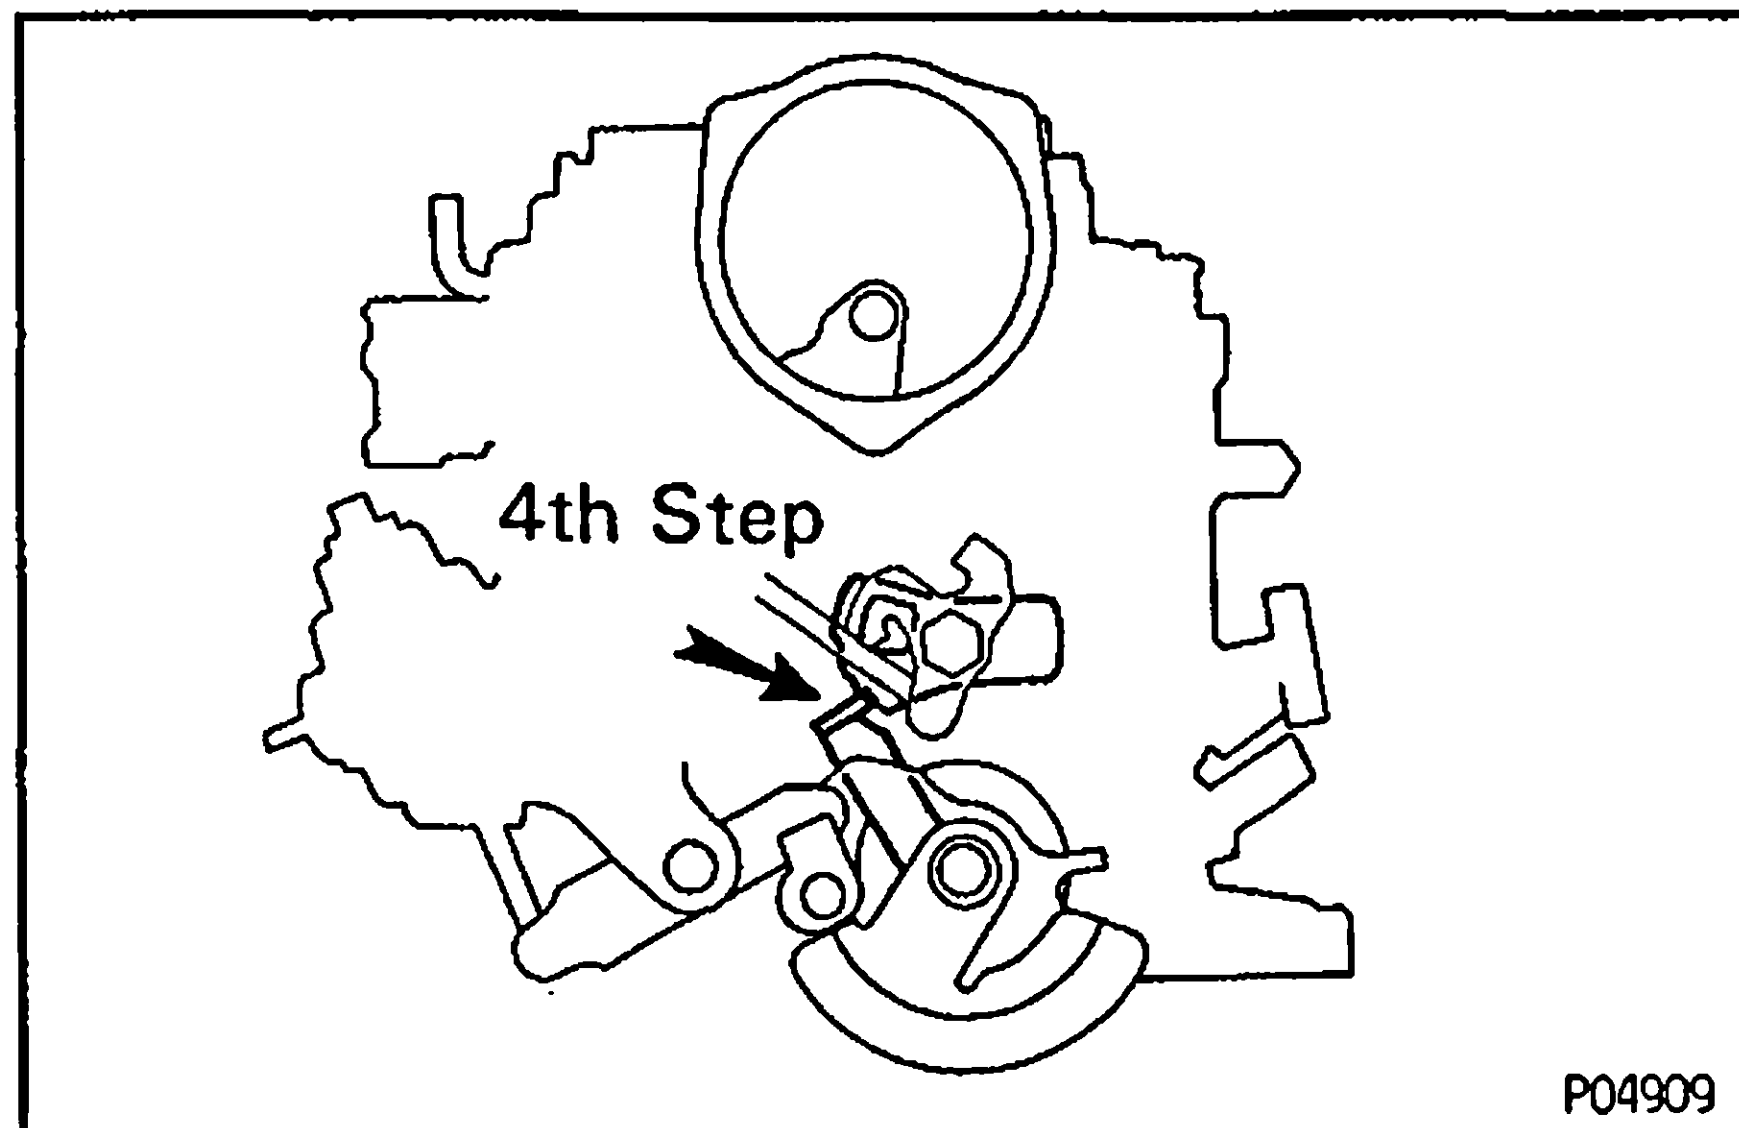

- (c) Check the primary throttle valve angle.


Standard angle:

G.C.C.


15.5 – 17.5° from horizontal

Others

17.0 – 19.0° from horizontal

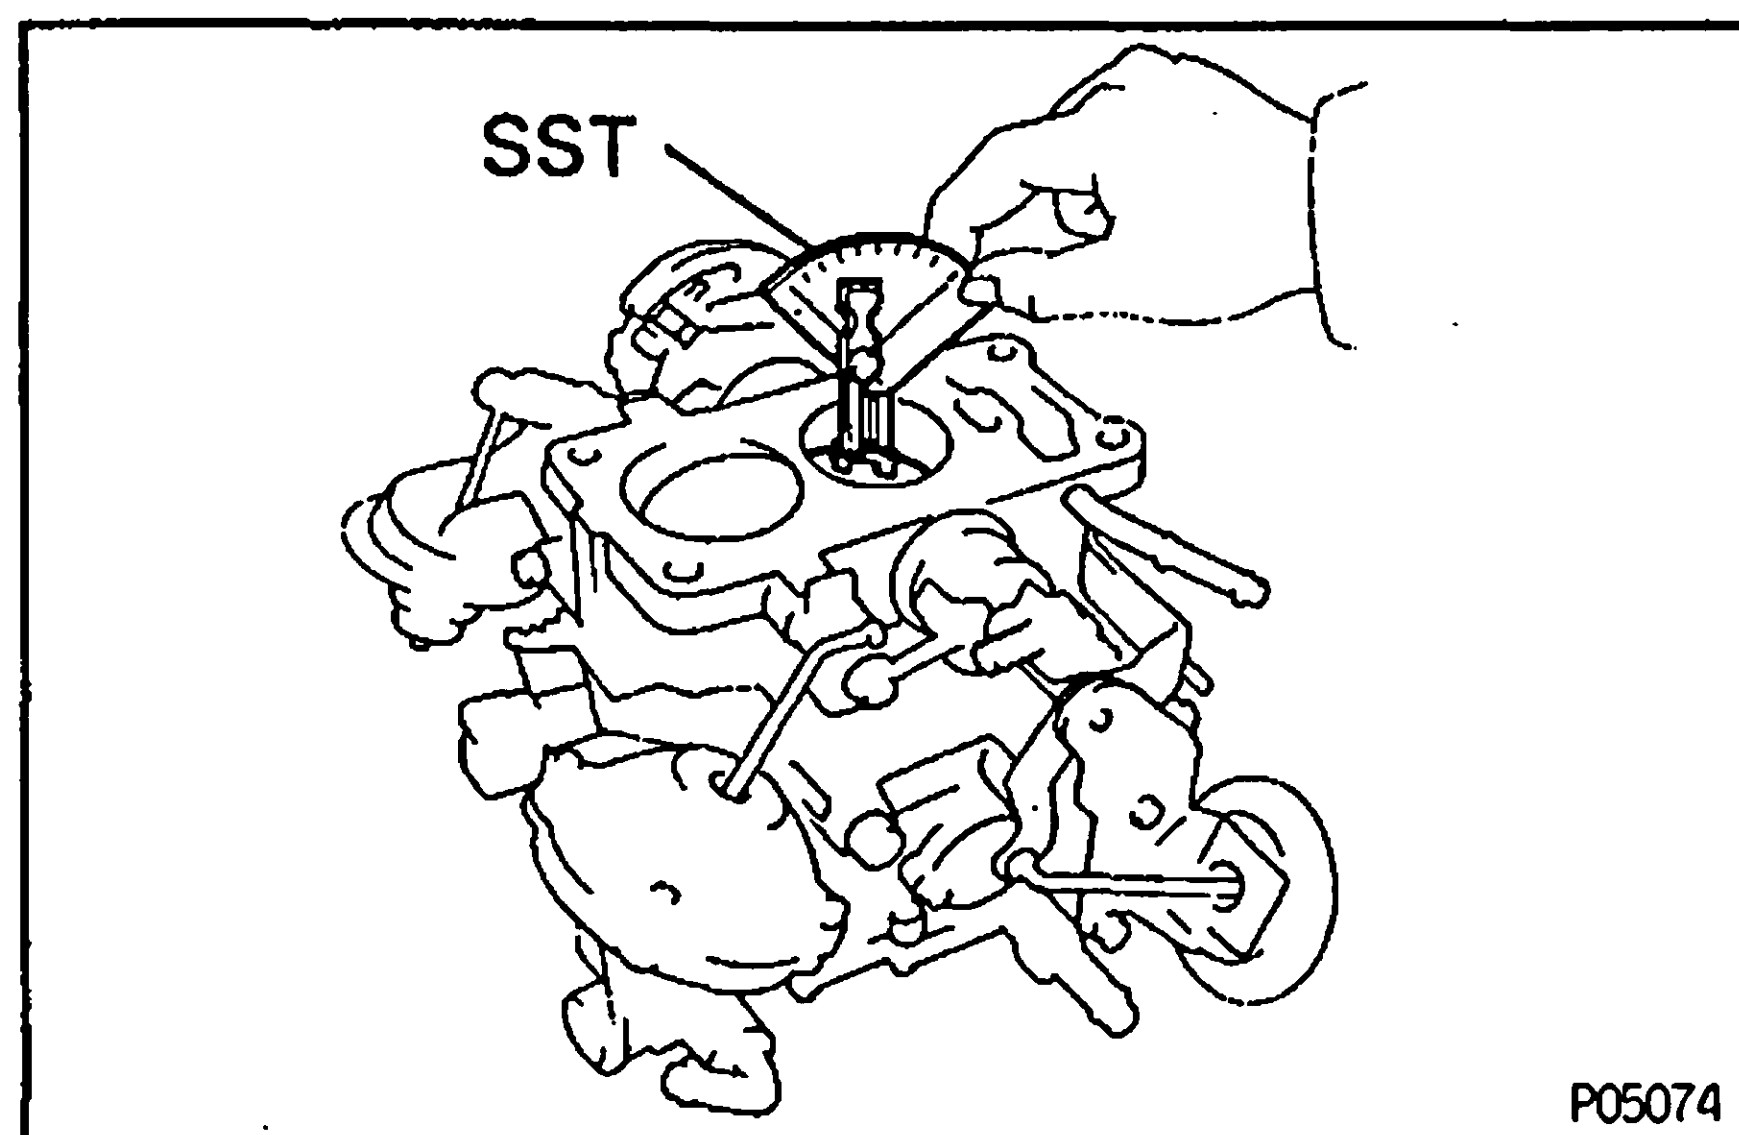


- (d) Adjust by turning the fast idle adjusting screw.

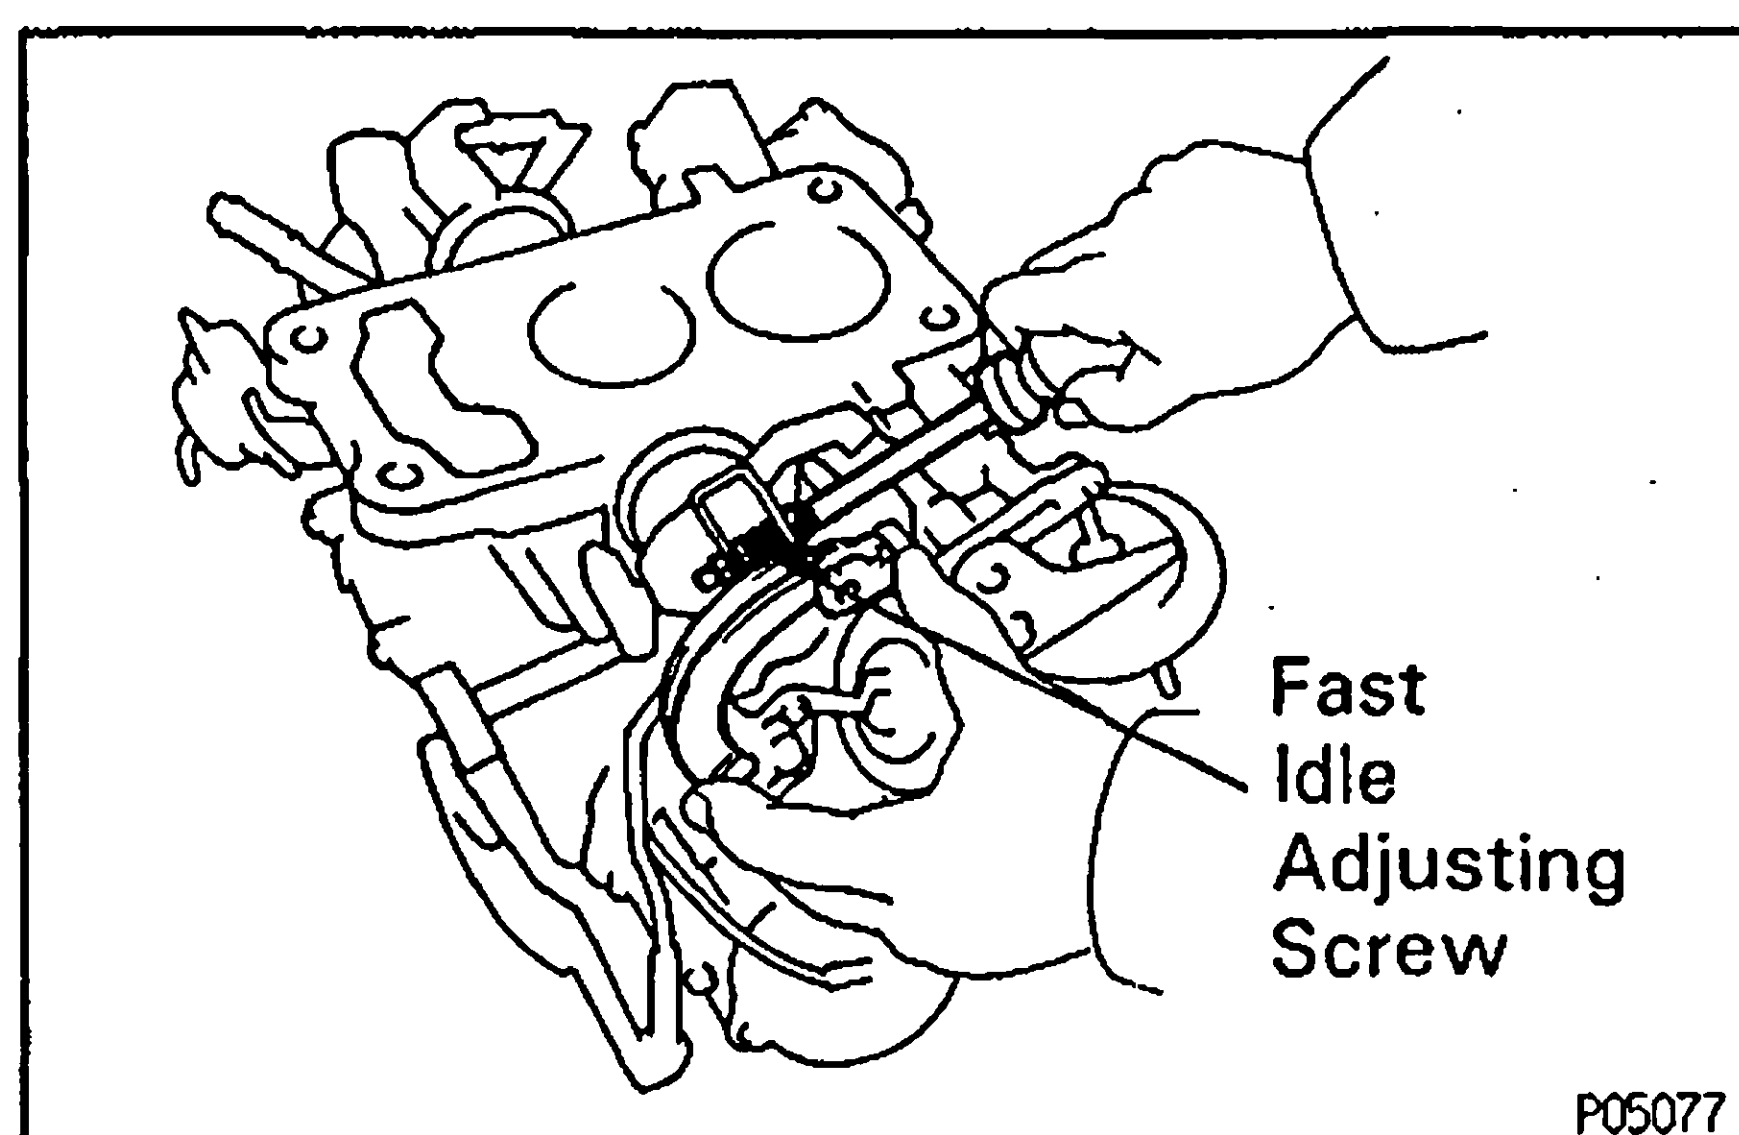
**7. CHECK AND ADJUST UNLOADER**

- (a) With the primary throttle valve fully opened, check the choke valve angle.

Standard angle:


35 – 39° from horizontal

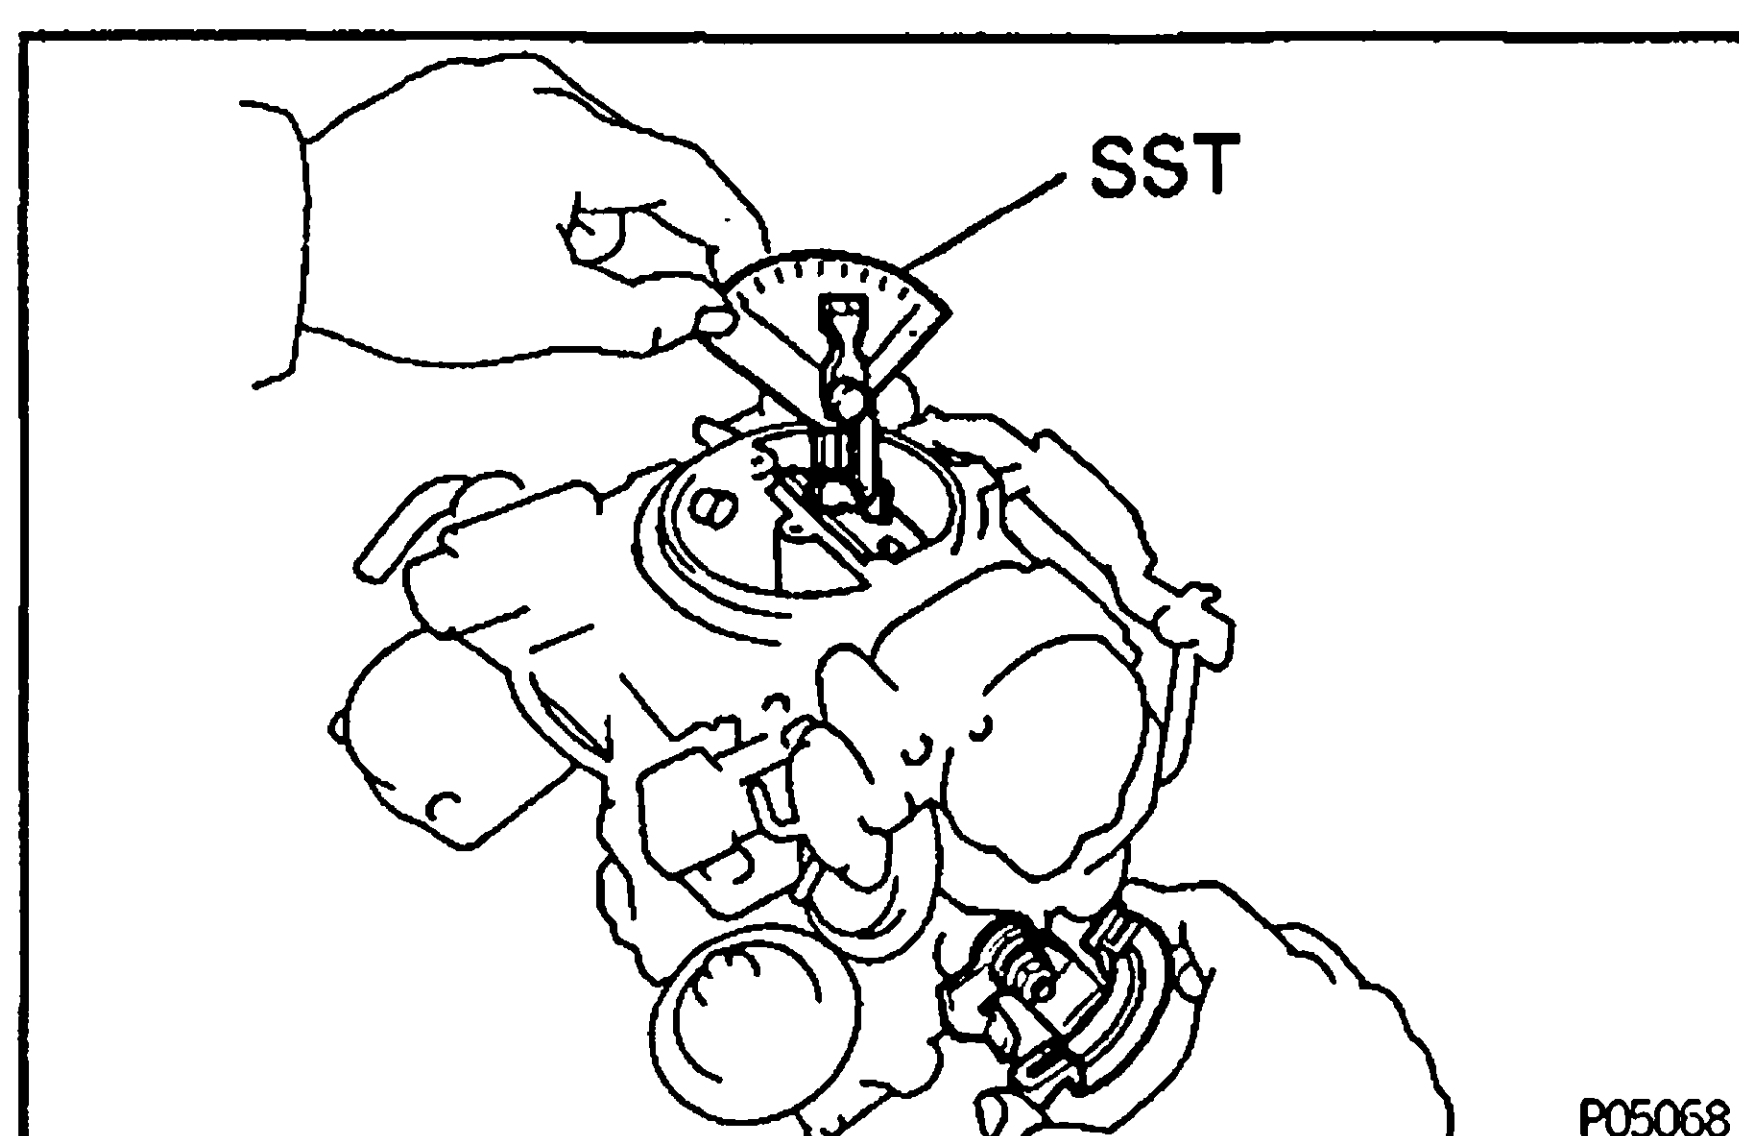

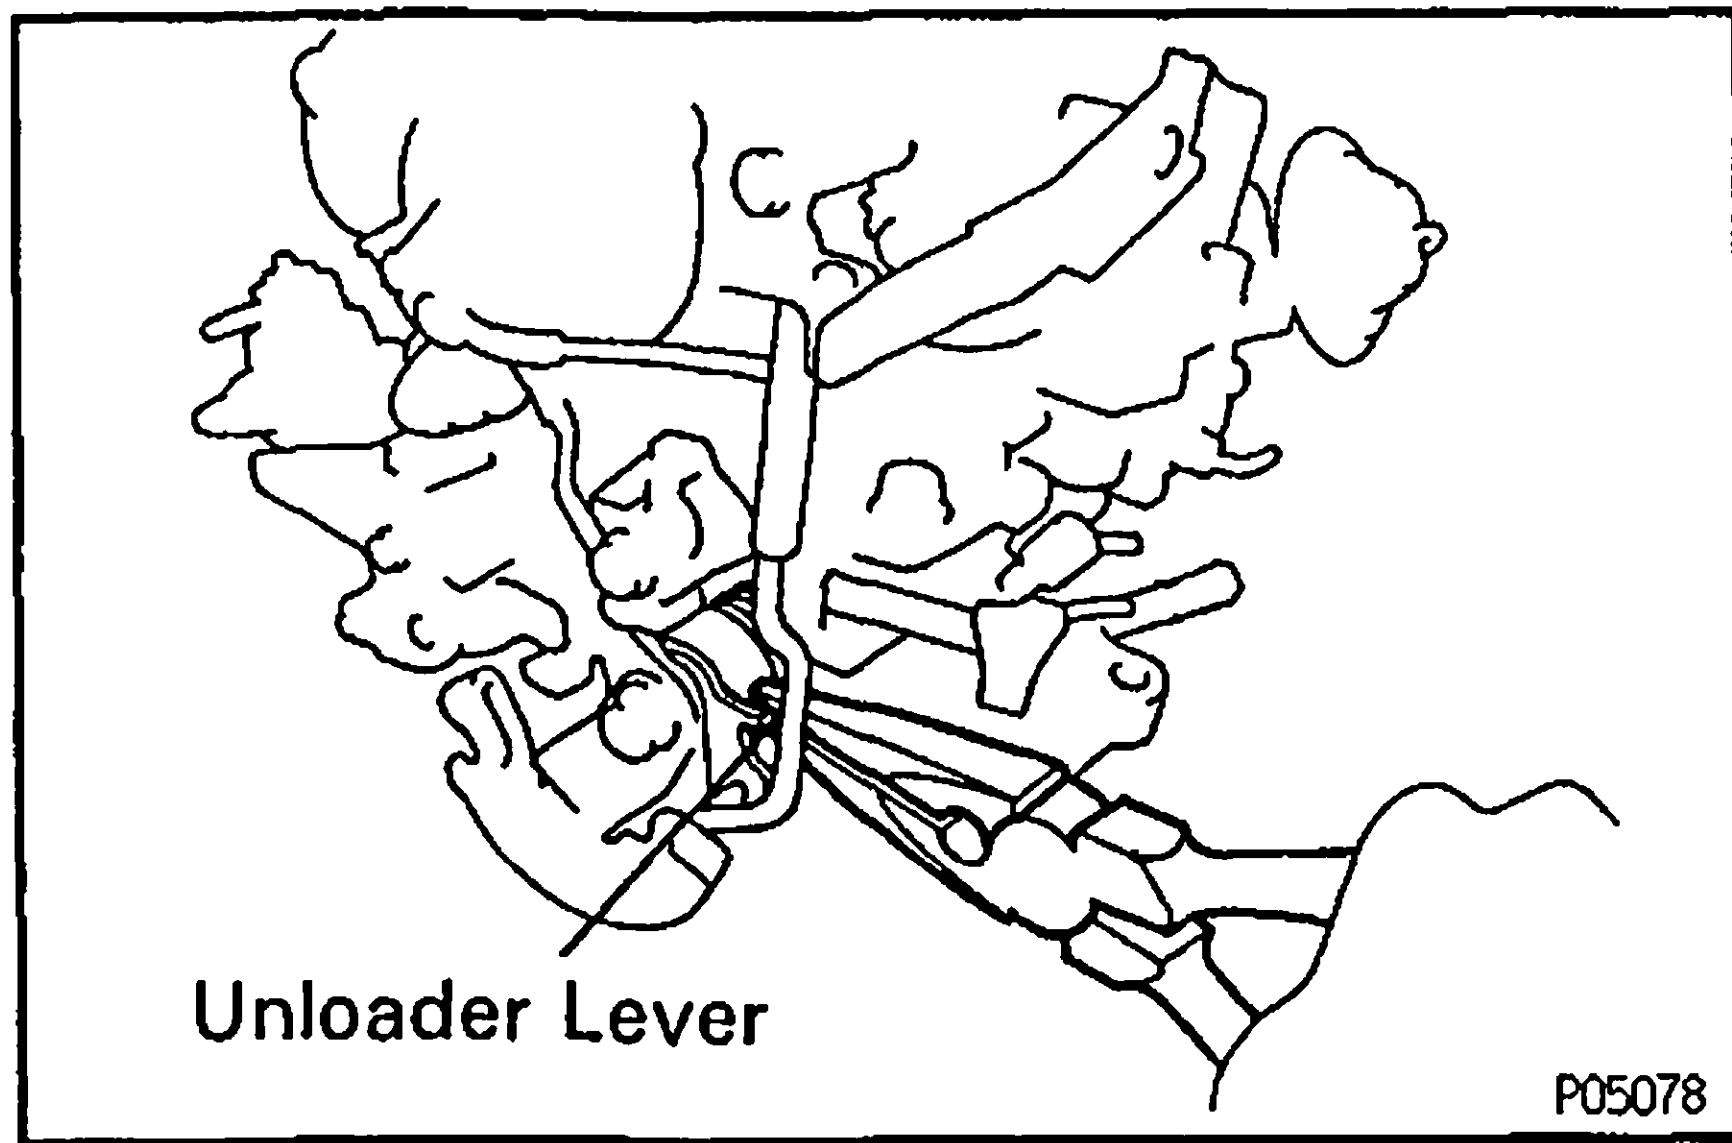


- (b) Adjust by bending the unloader lever.

EG

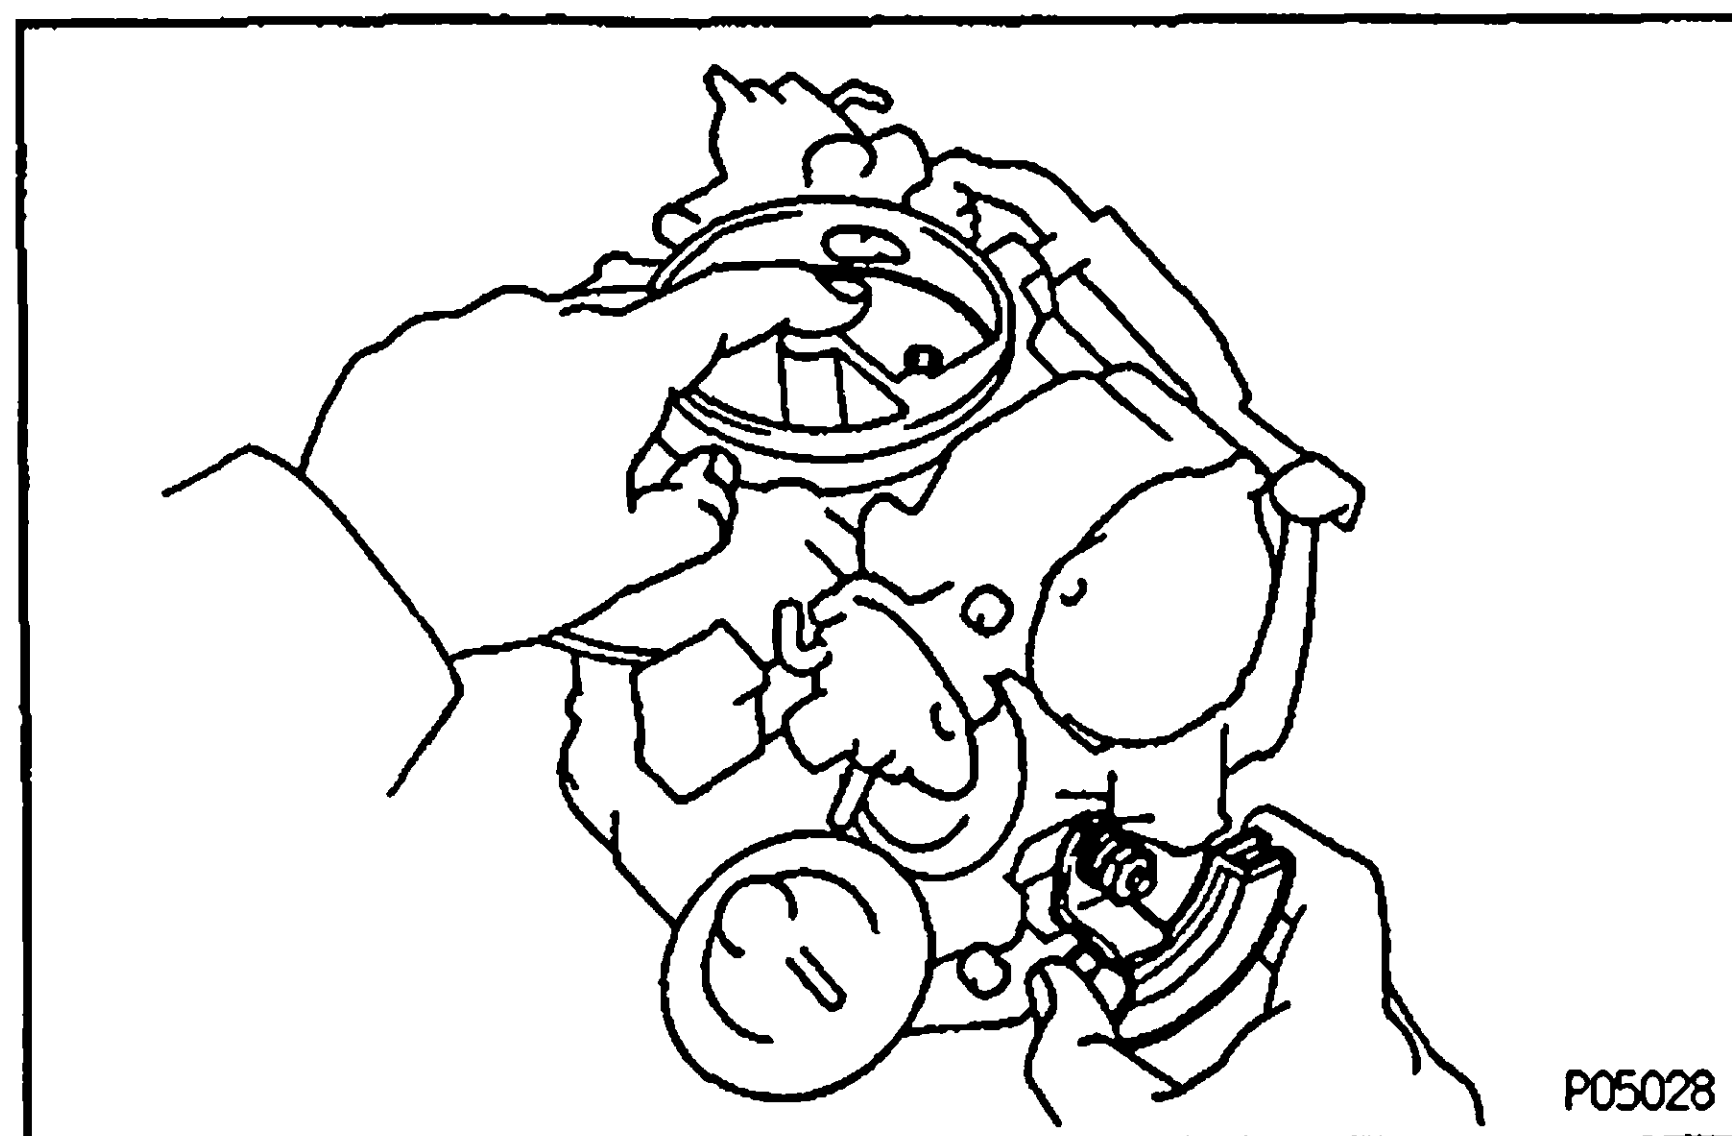


8. CHECK AND ADJUST FAST IDLE CAM BREAKER (FICB)


- (a) Set the fast idle cam.
- (1) While holding the throttle slightly open, push the choke valve closed, and hold it closed as you release the throttle valve.

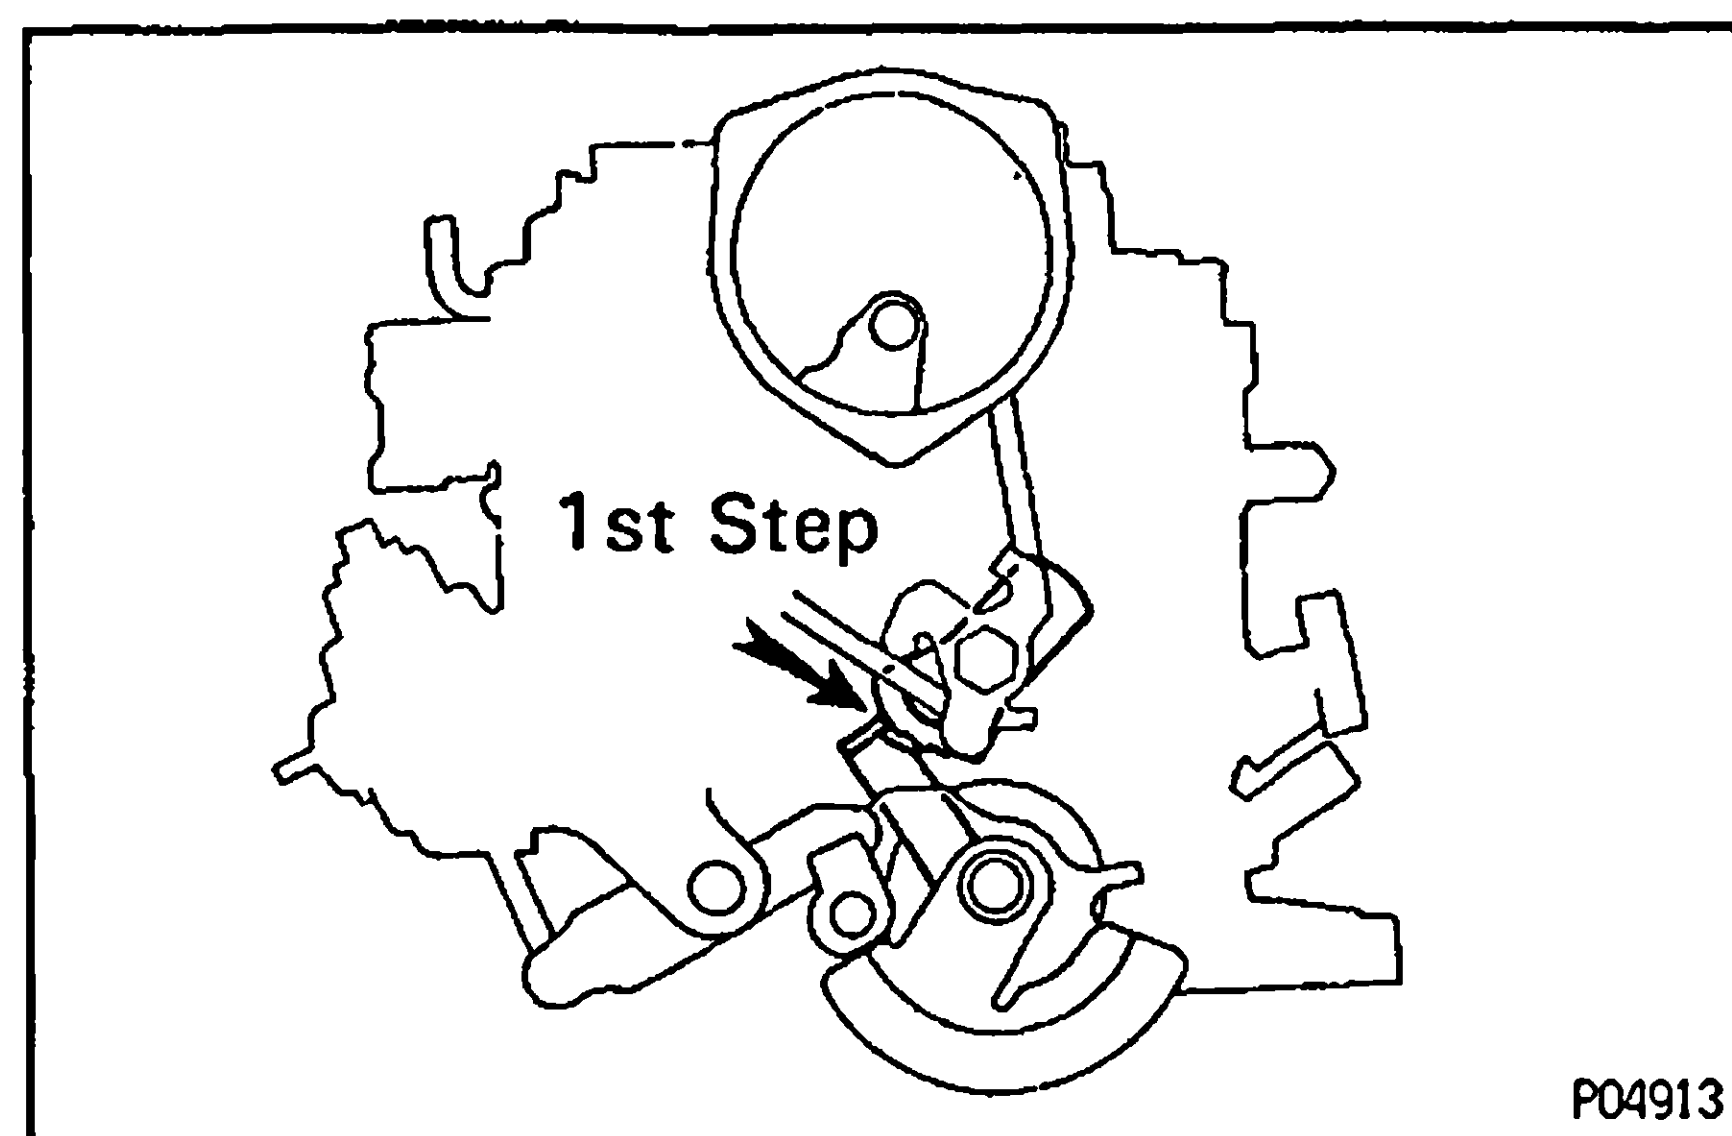


- (2) Check that the fast idle lever is set in the 1st step of the fast idle cam as shown.

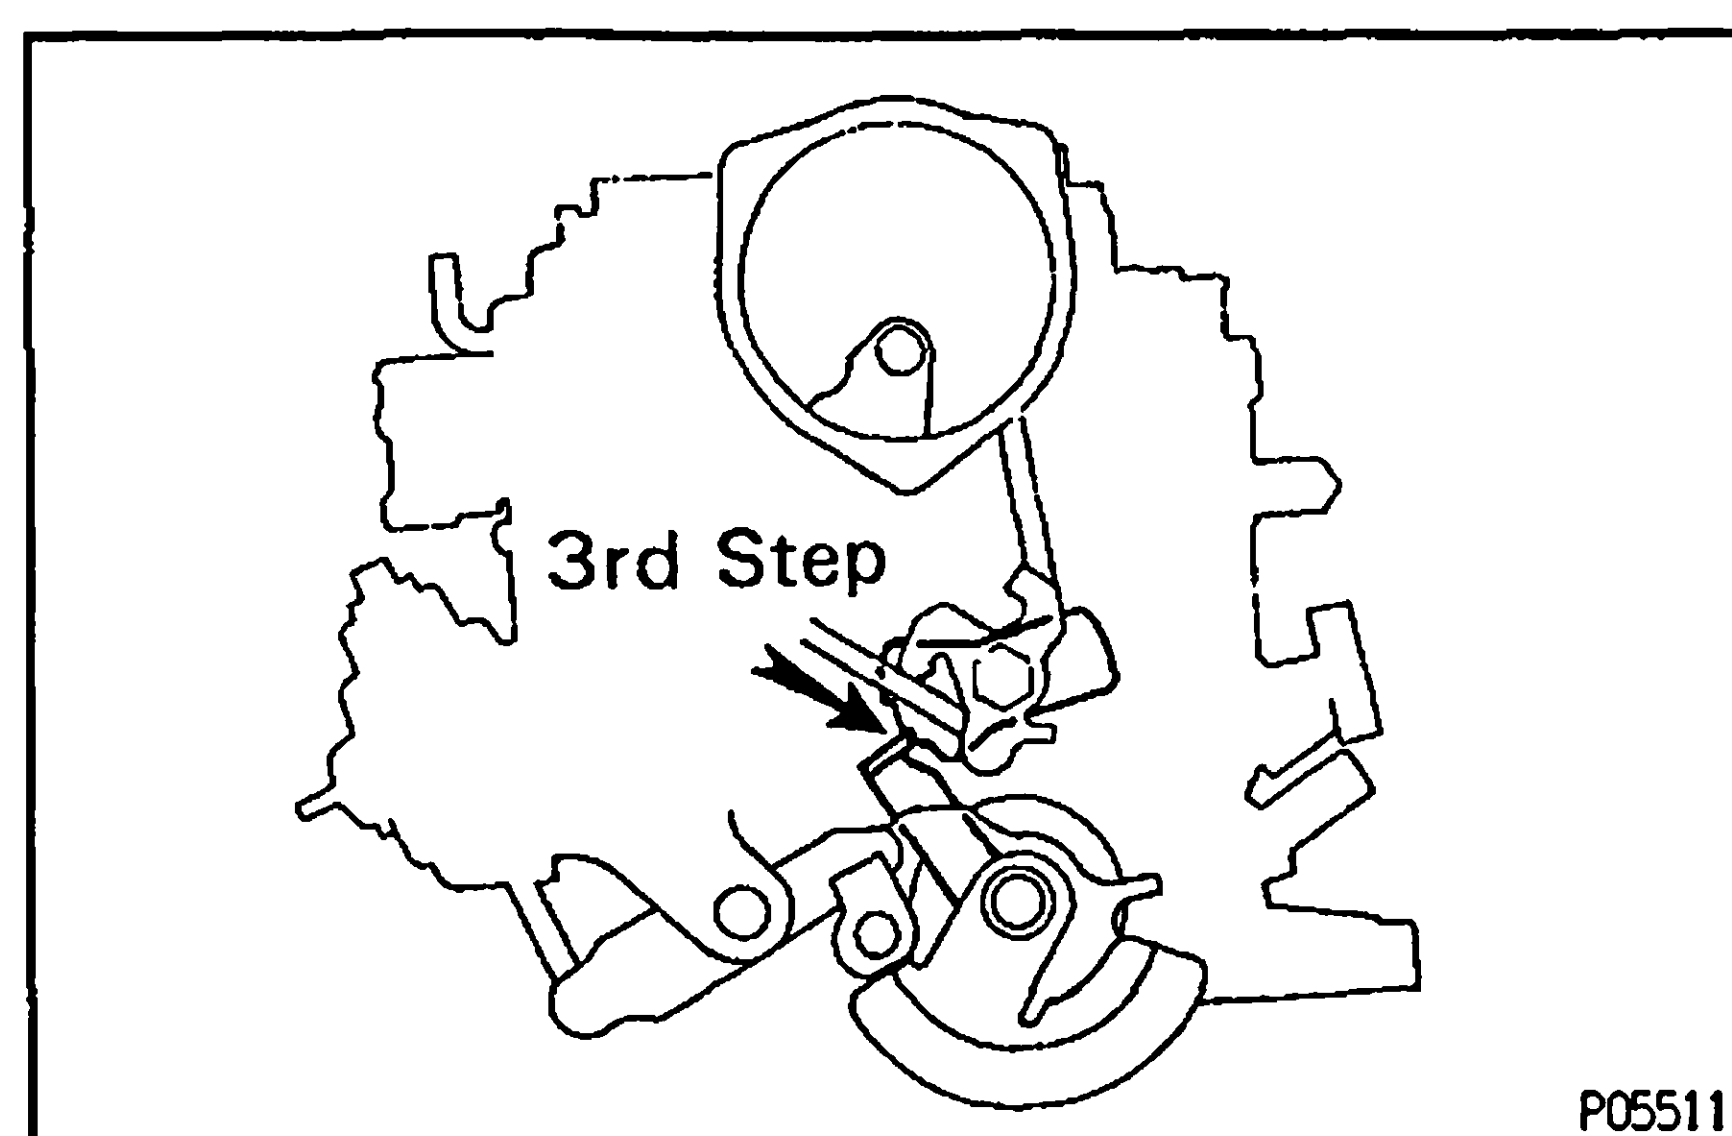

- (b) Apply vacuum to the FICB and release it.
- (c) Check that the choke linkage moves, and that the fast idle cam is released to the 3rd step.

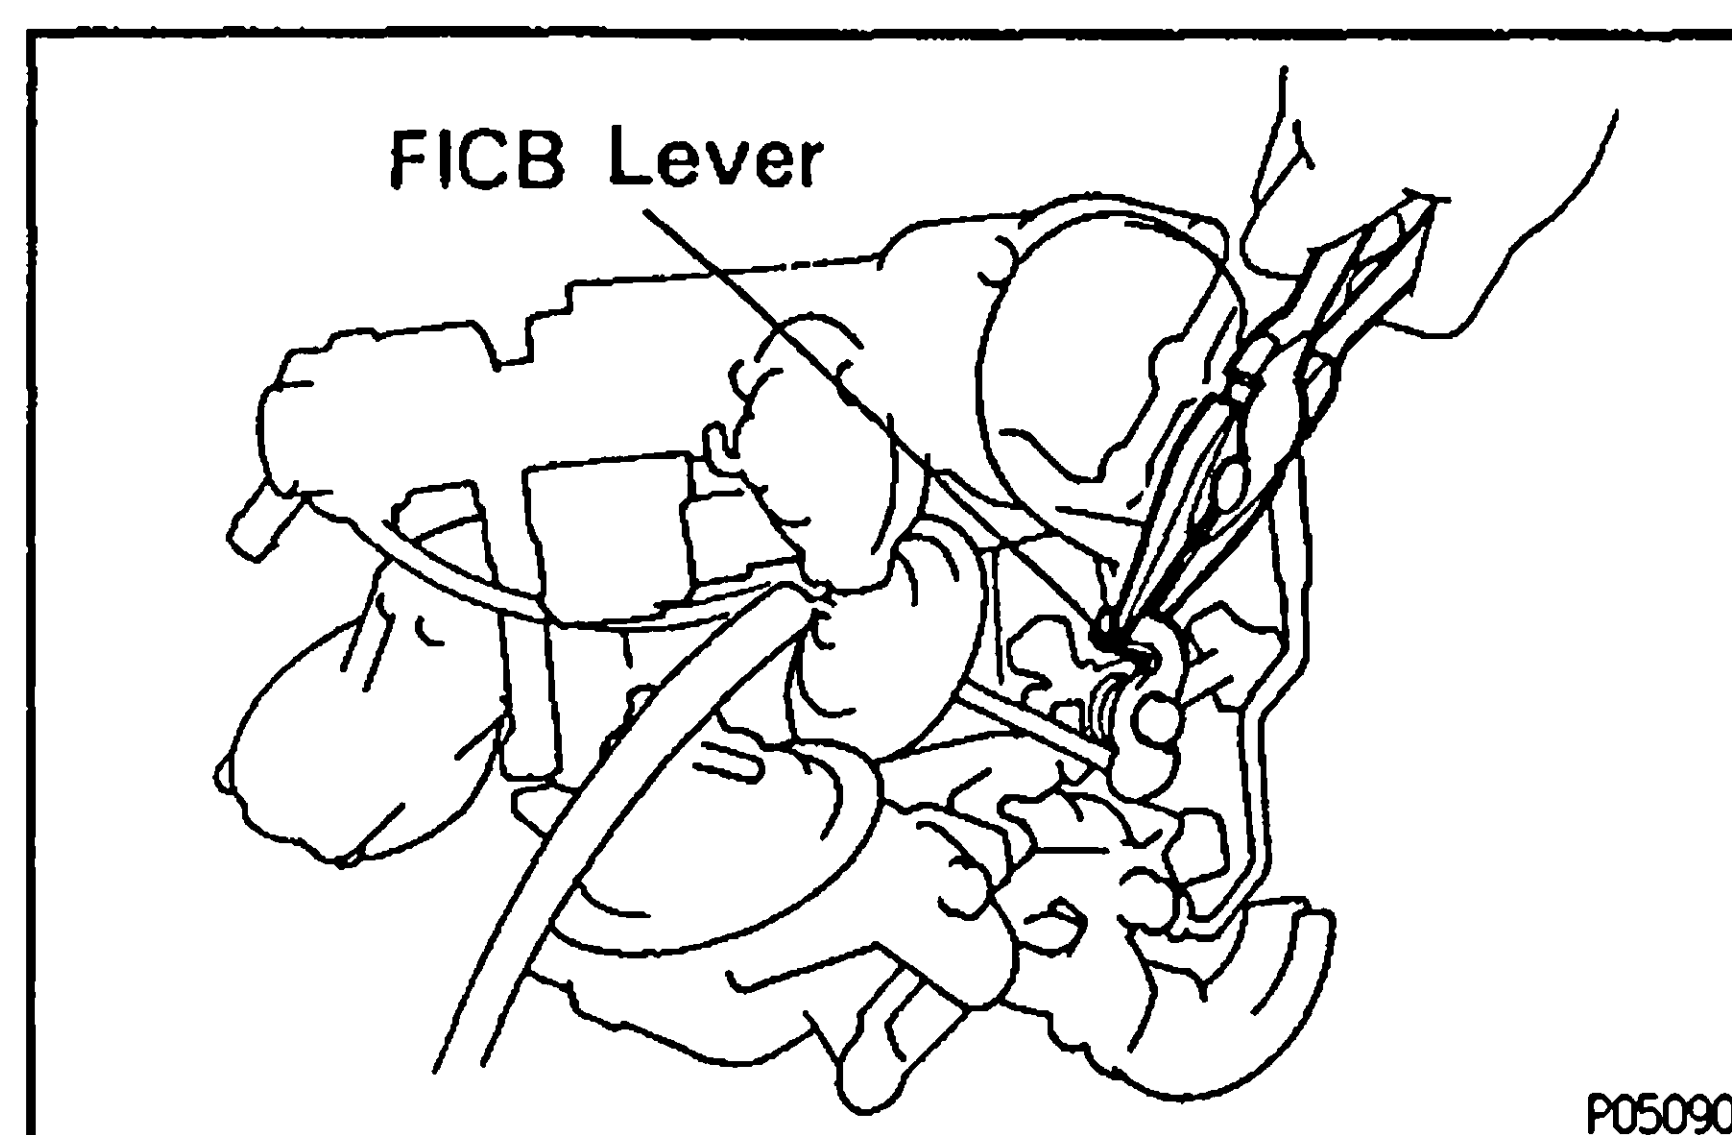

- (d) Adjust by bending the FICB lever.

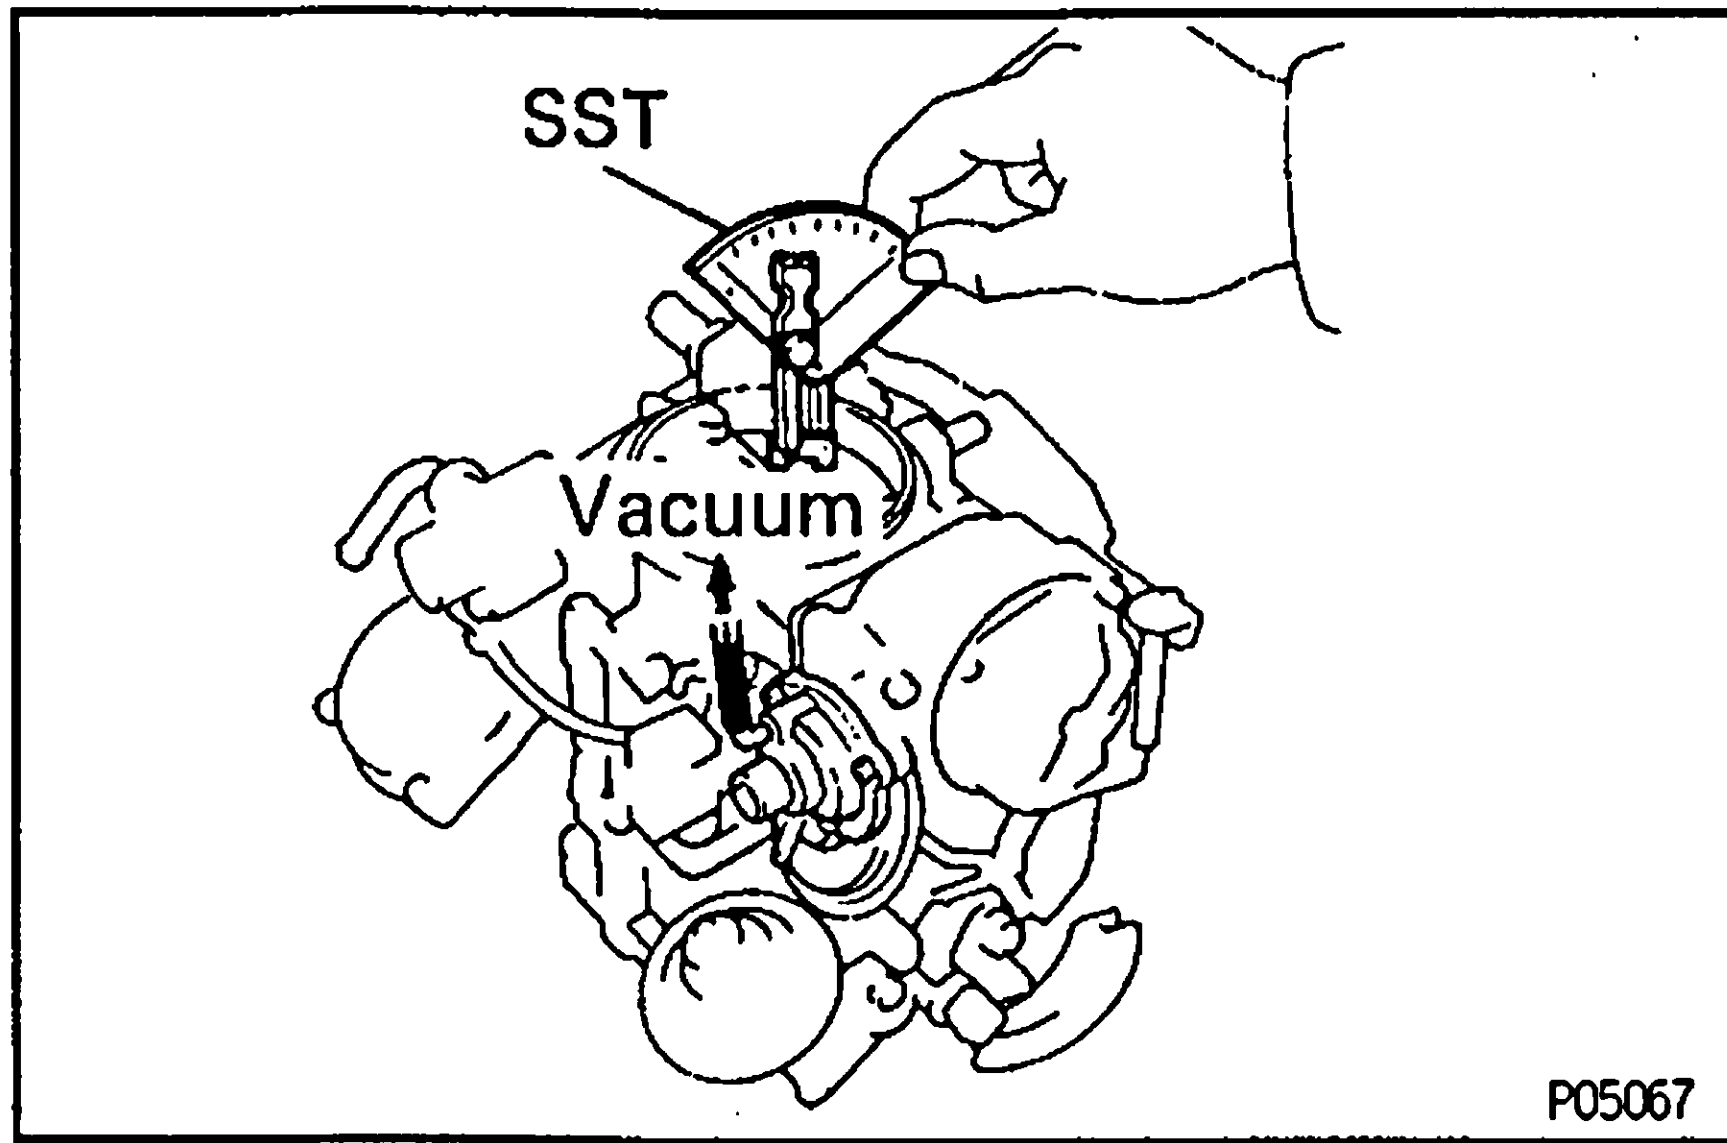


9. CHECK AND ADJUST CHOKE BREAKER (CB)


- Set the fast idle cam. (See step 8)
- Apply vacuum to the CB.
- Check the choke valve angle.

Standard angle:

44 — 46° from horizontal

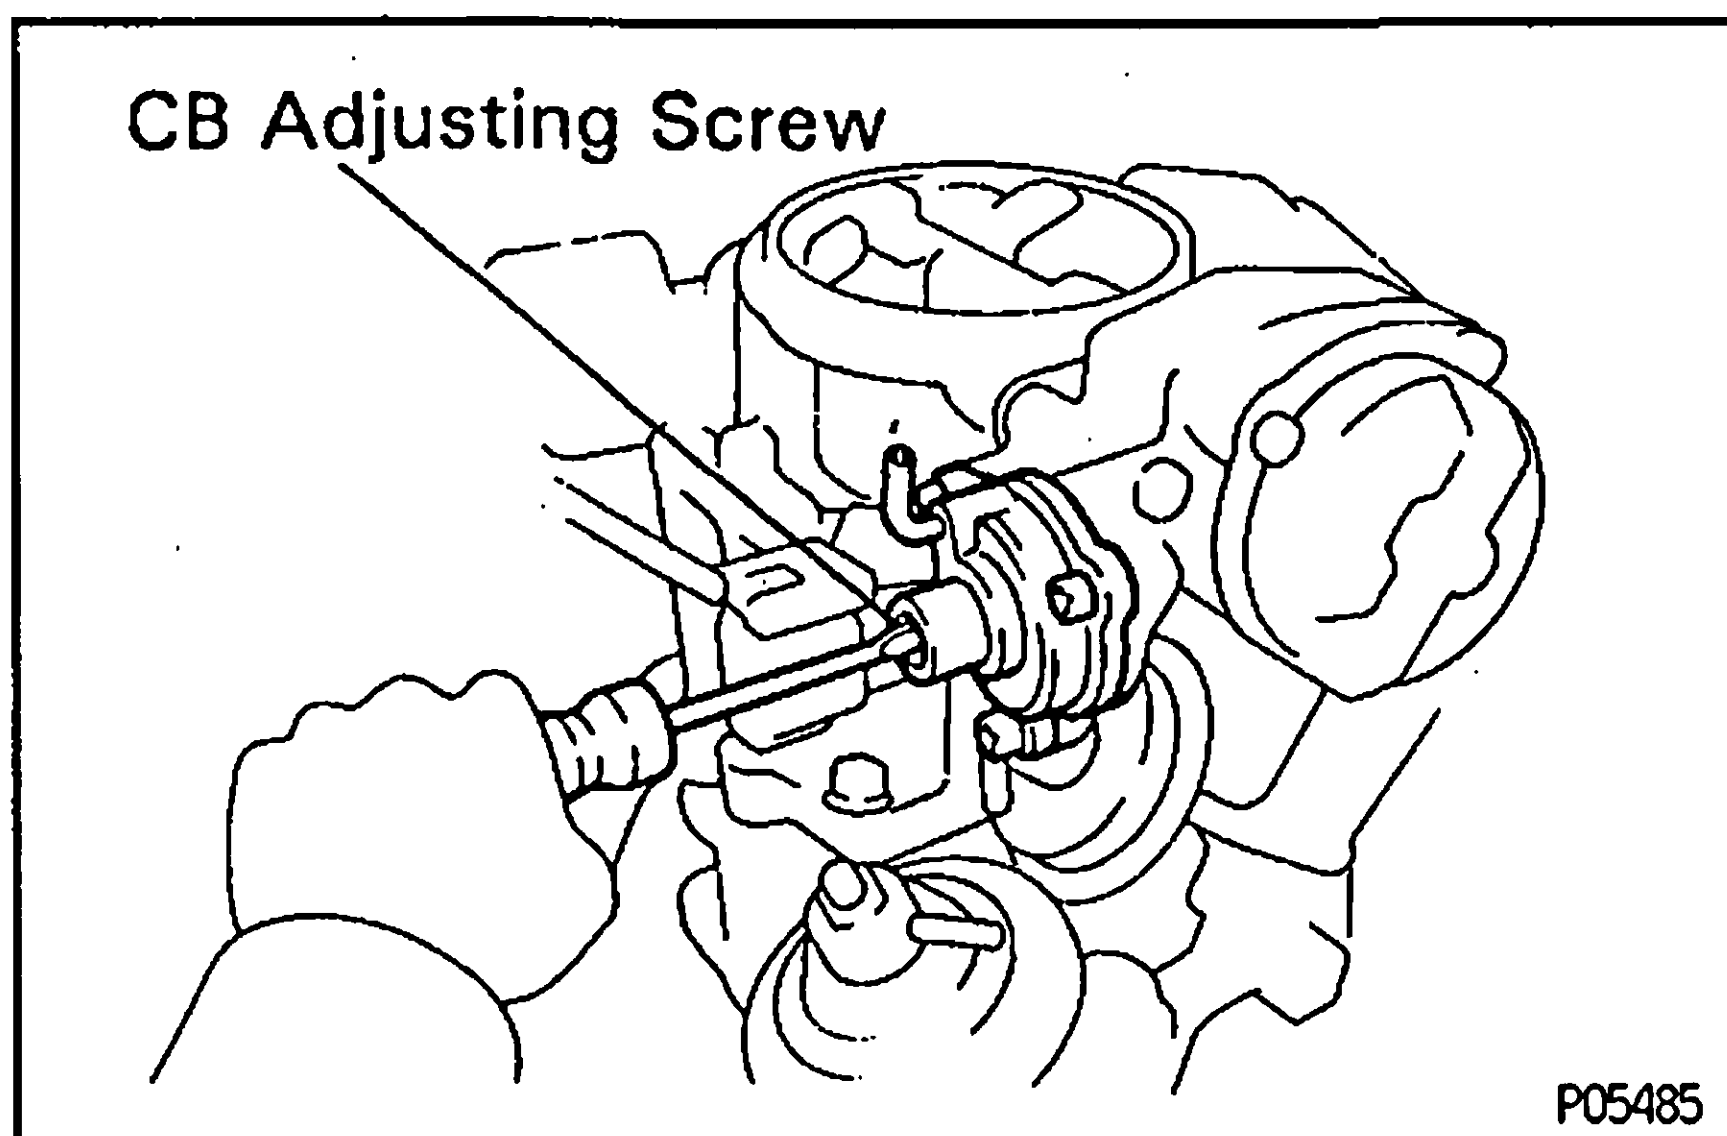


- Adjust by turning the CB adjusting screw.

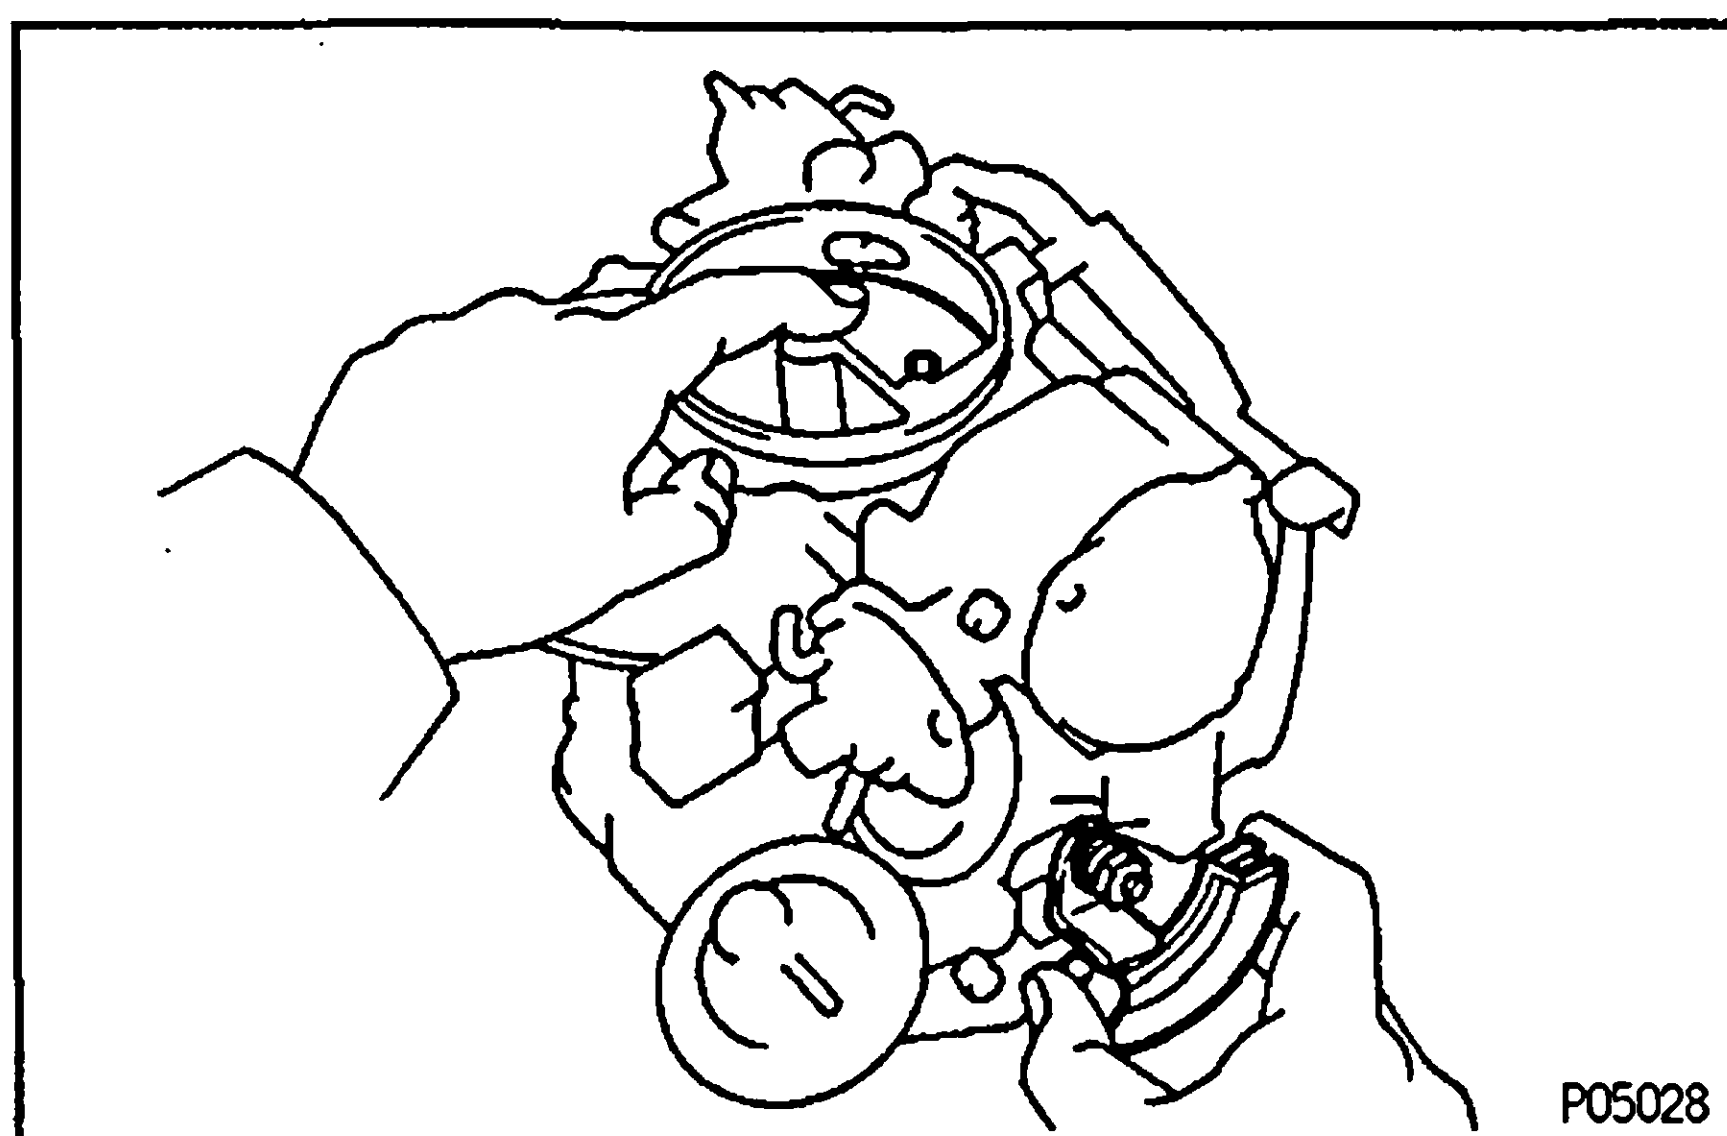

10. CHECK AND ADJUST DASH POT (DP)

- Open the throttle valve and then close it with the choke valve fully open.


HINT: Check that fast idle is not operating.

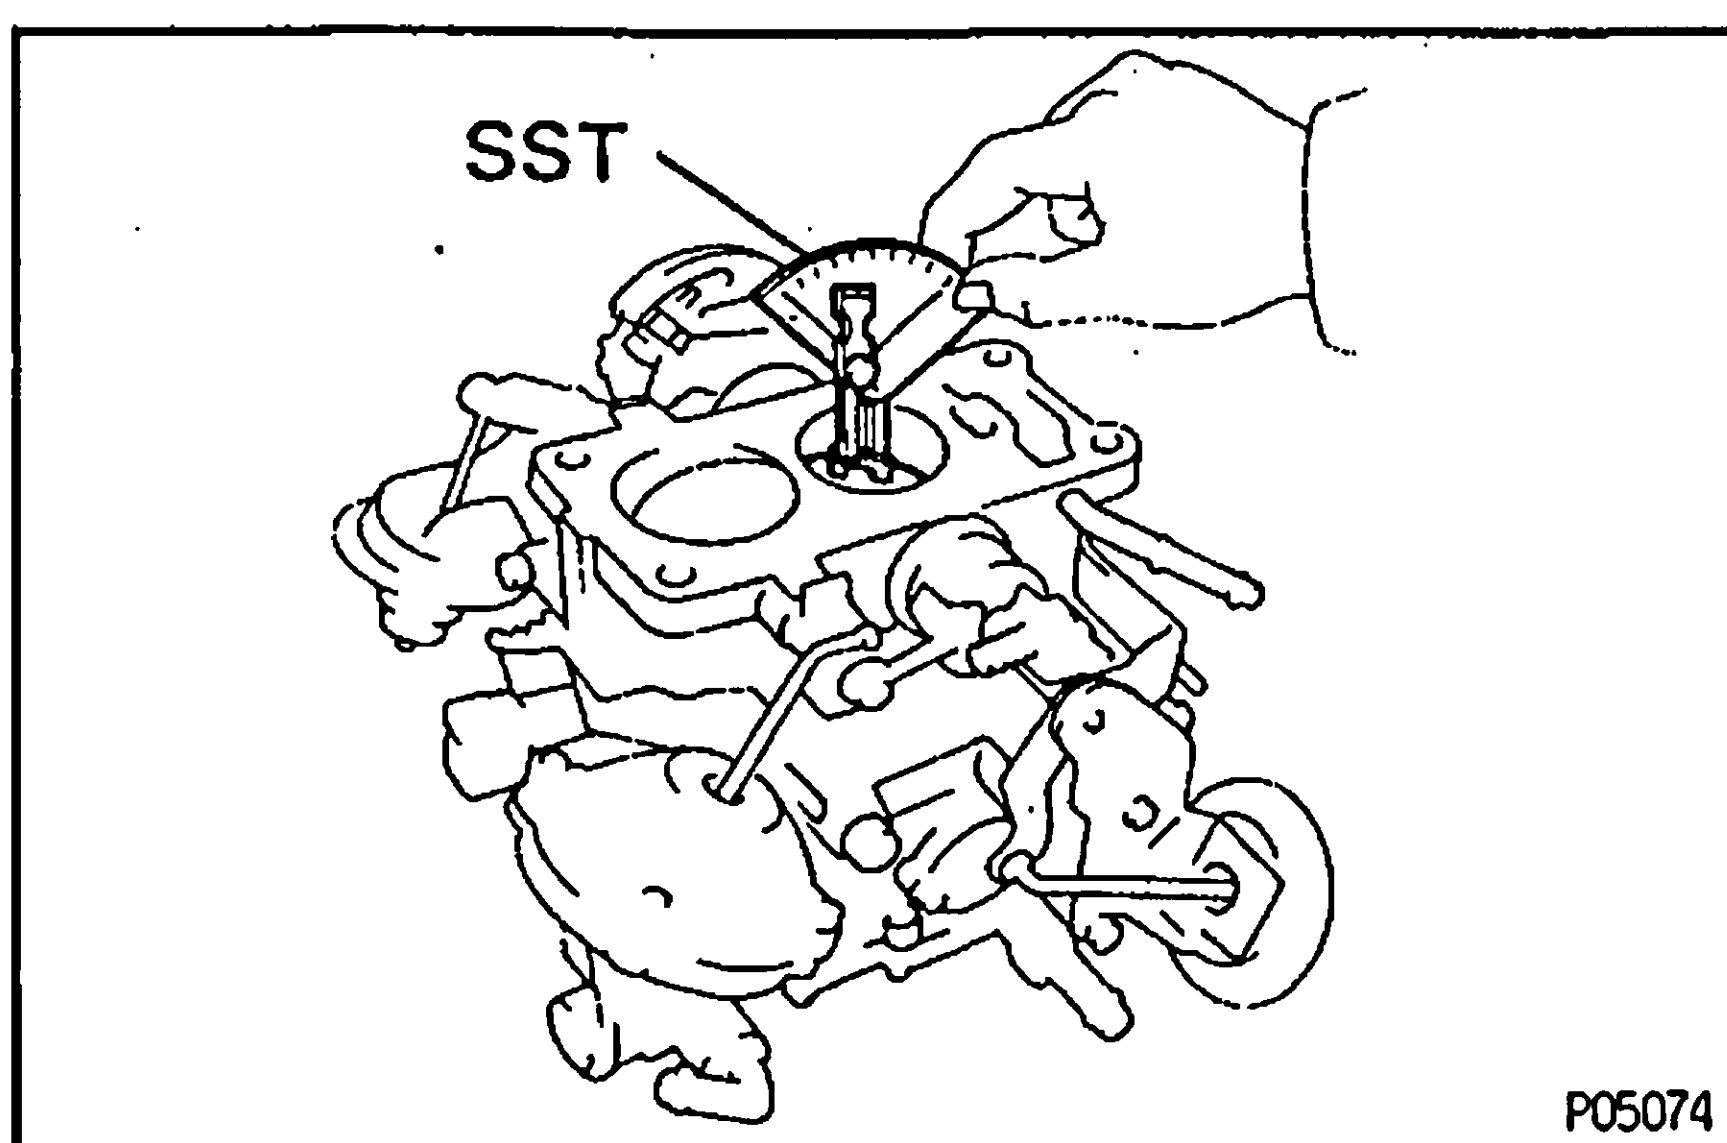


- Check the primary throttle valve angle.

Standard angle:

19 — 21° from horizontal

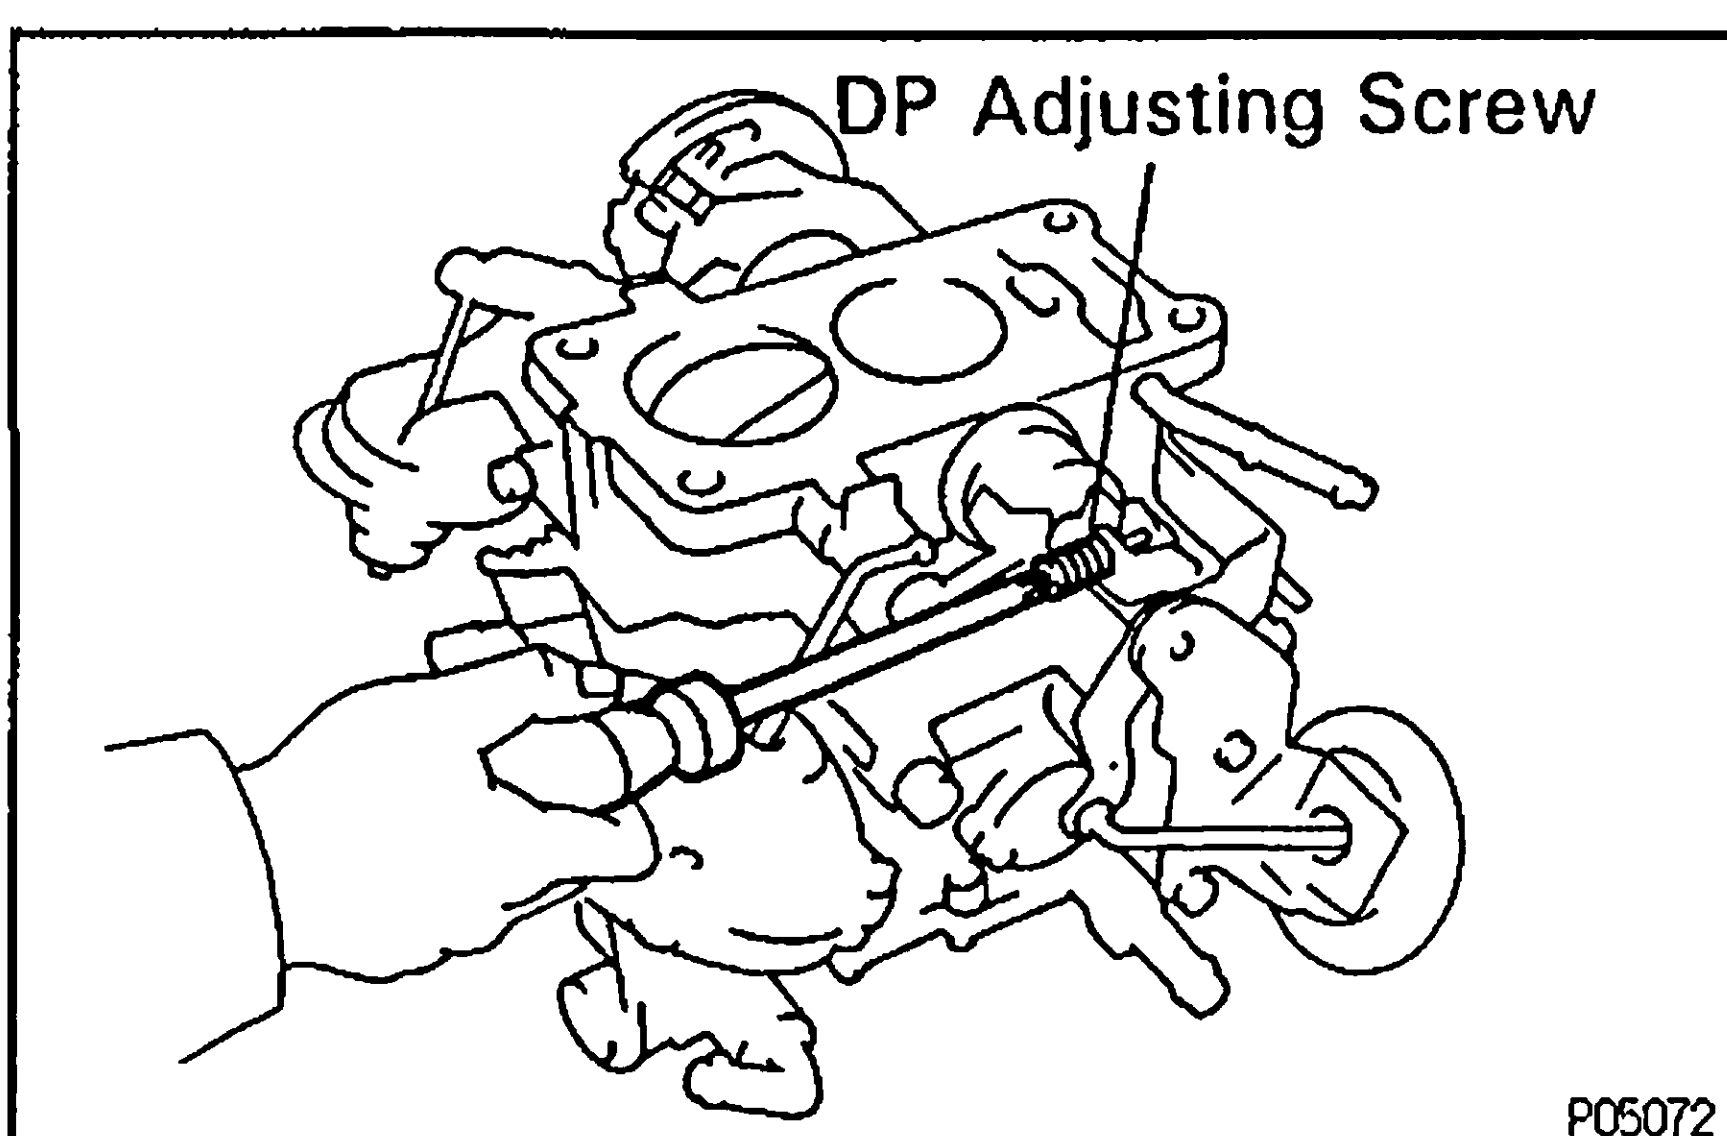

- Adjust by turning the DP adjusting screw.

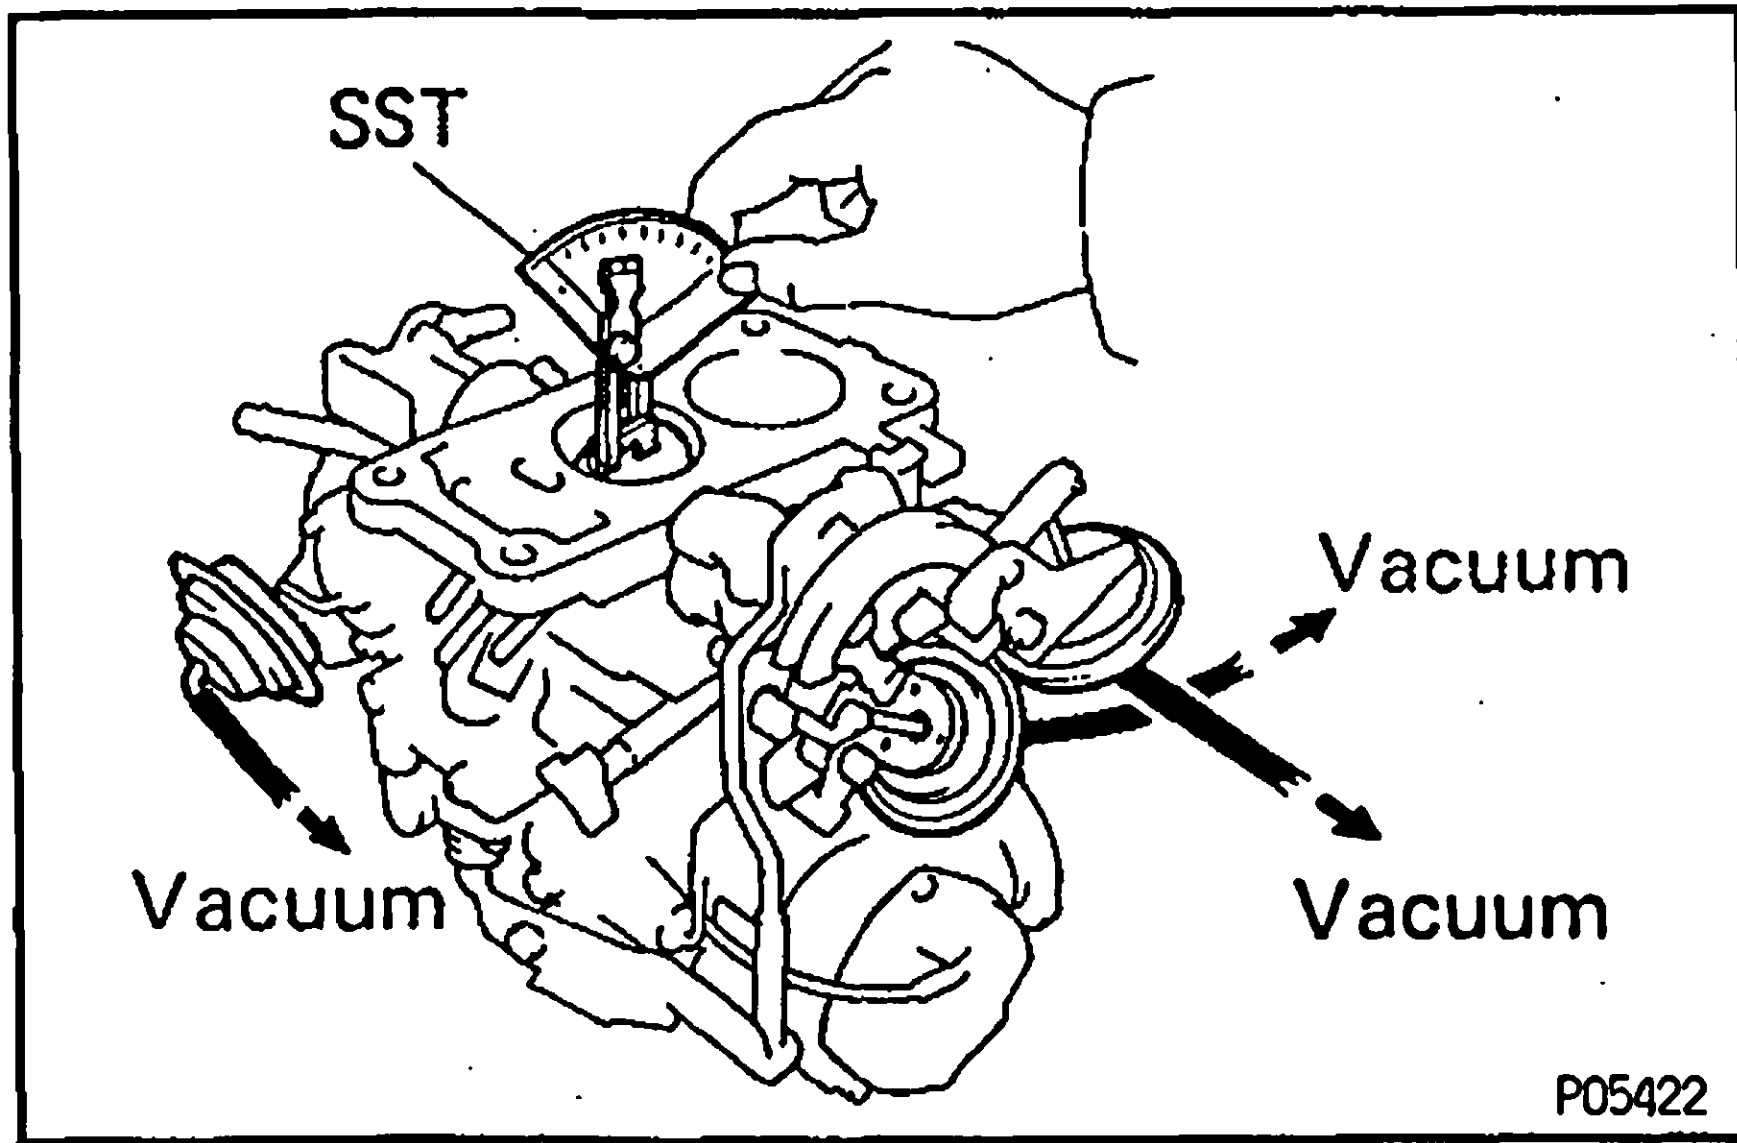**11. CHECK AND ADJUST THROTTLE POSITIONER (TP)**


- (a) Apply vacuum to dash pot (DP), fast idle cam breaker (FICB) and throttle positioner (TP).

- (b) Check the primary throttle valve angle.


Standard angle:

17.5 – 19.5° from horizontal

EG

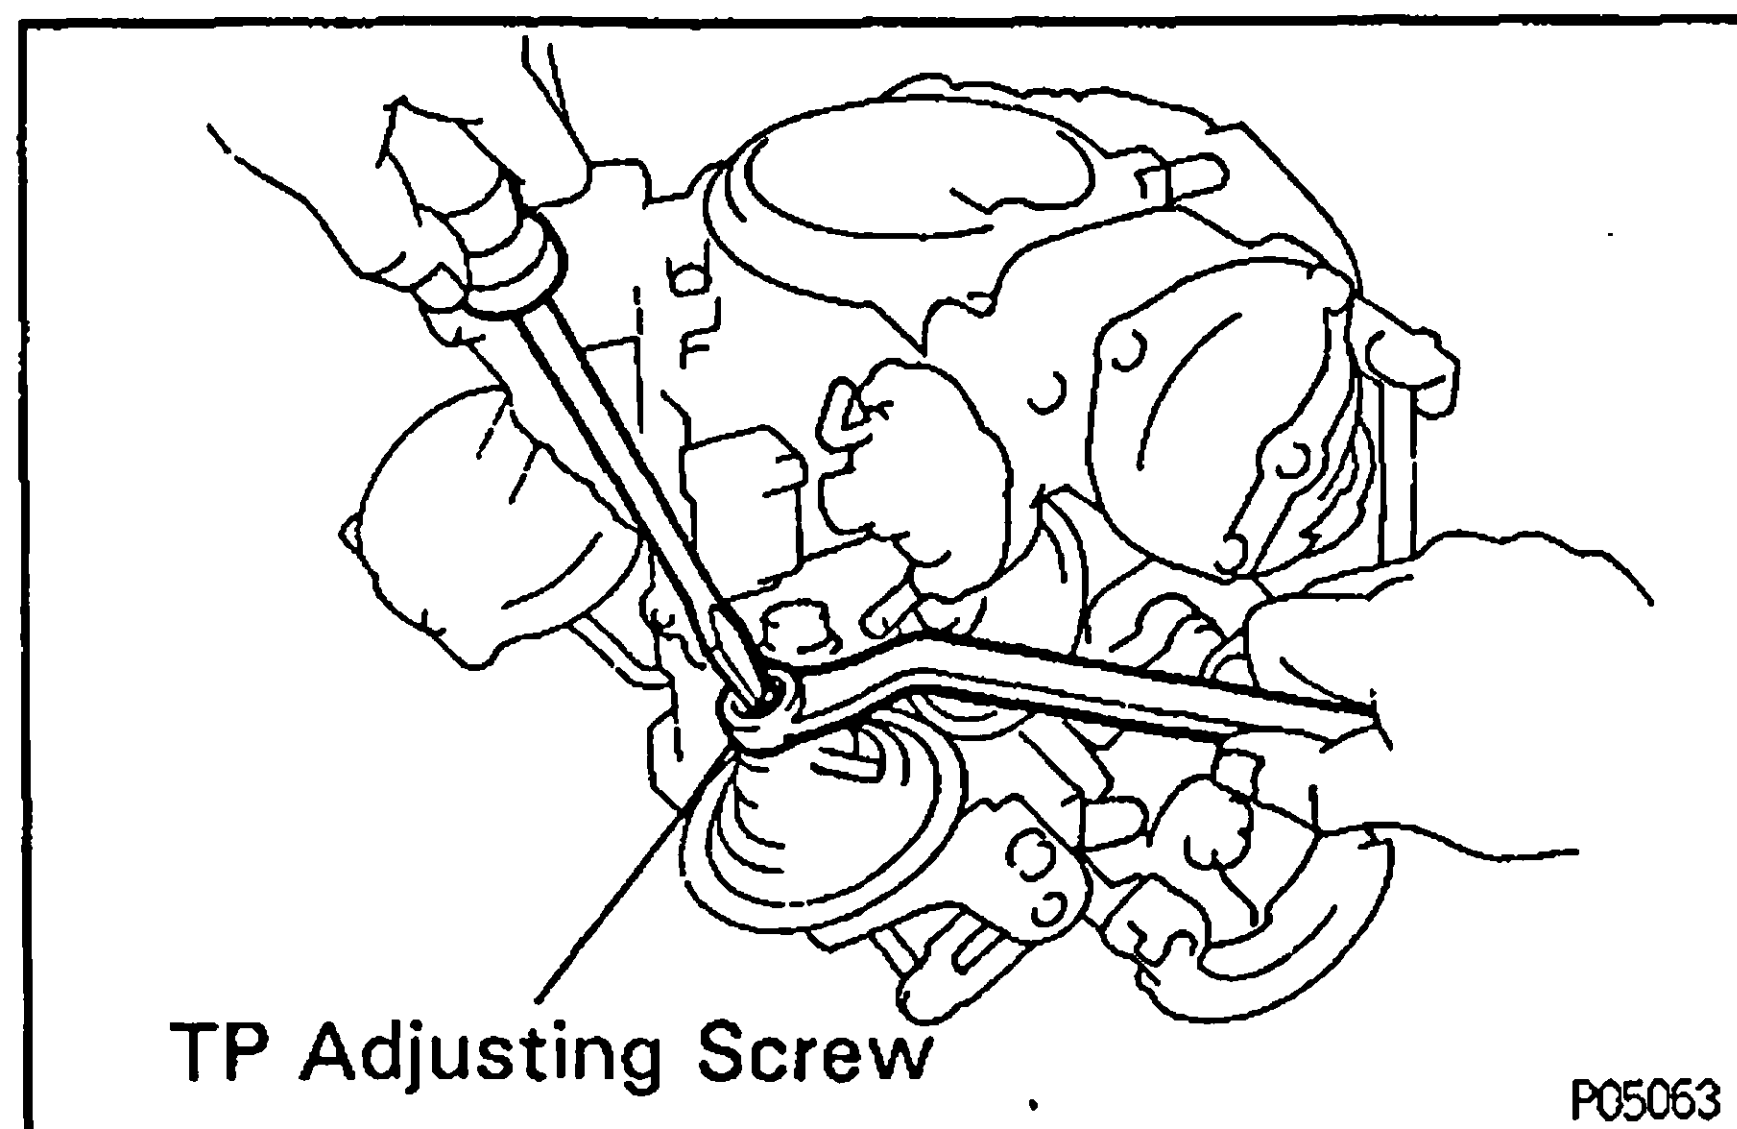

- (c) Adjust by turning the TP adjusting screw.

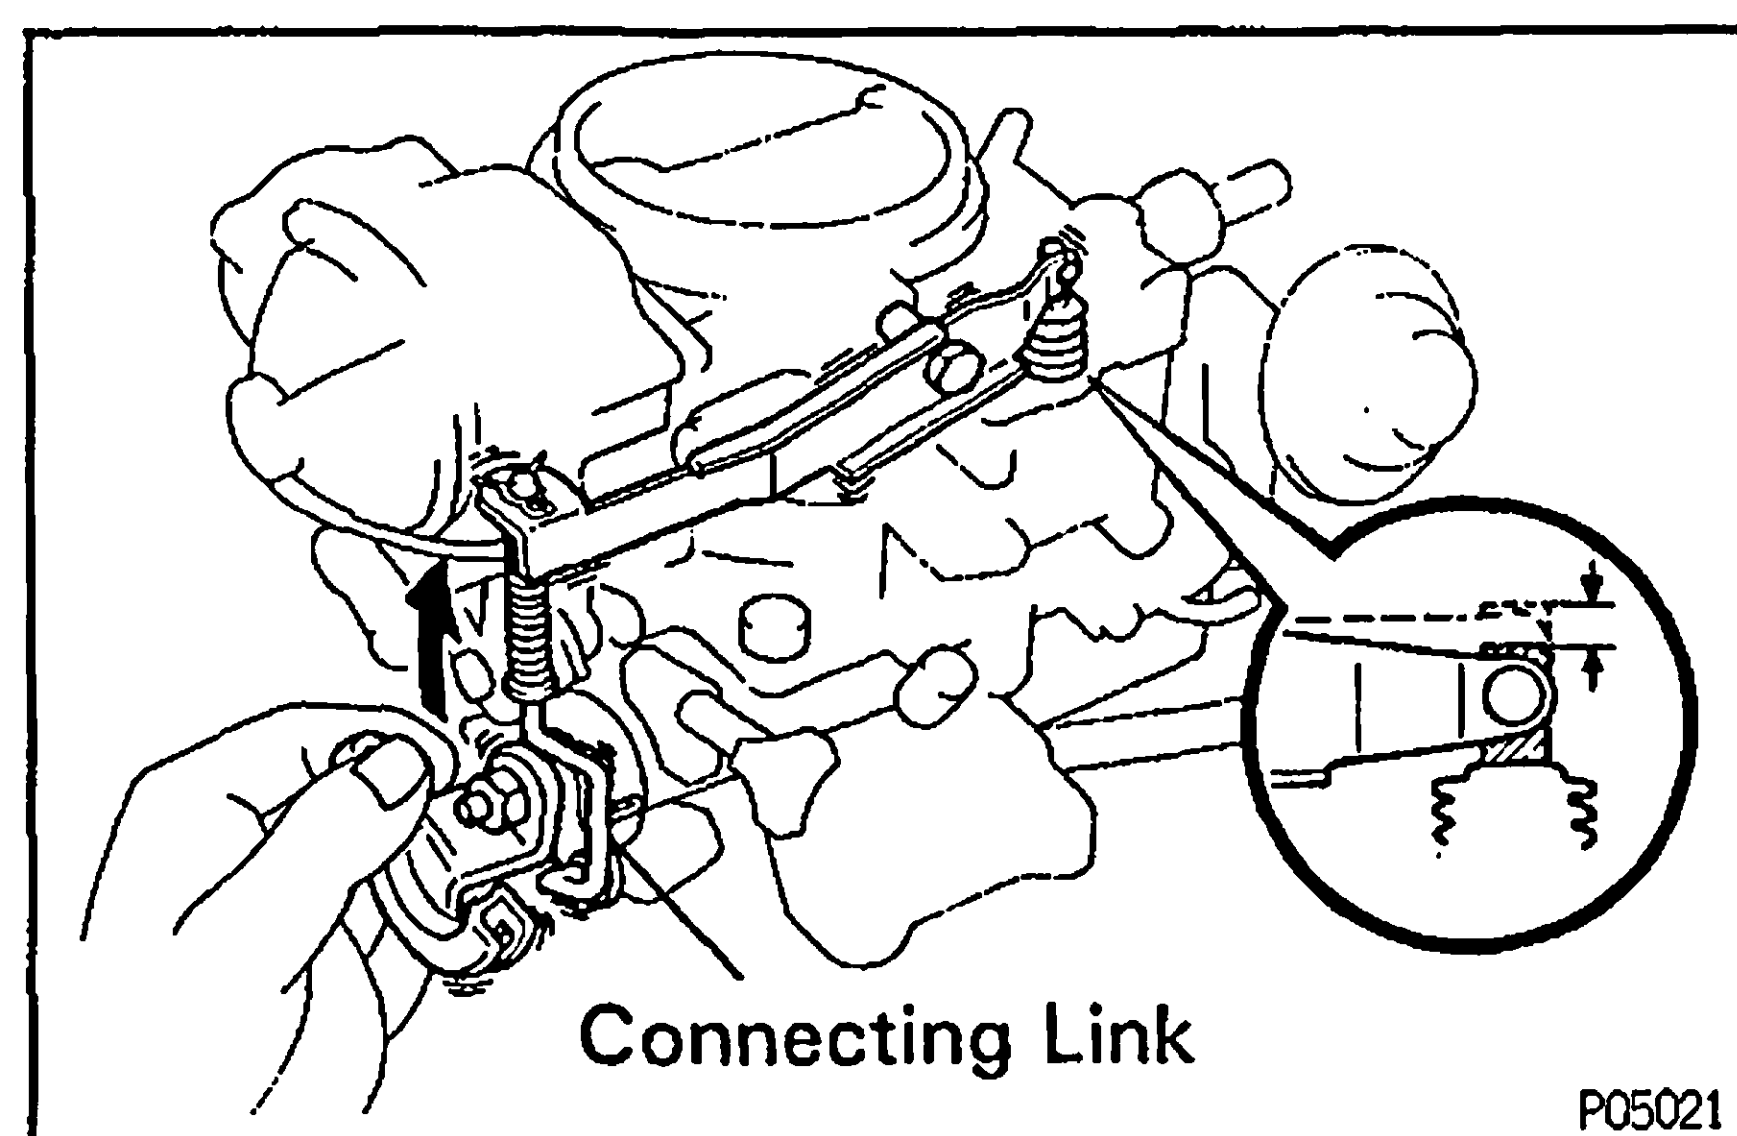**12. CHECK AND ADJUST ACCELERATION PUMP**


- (a) Apply vacuum to dash pot (DP), fast idle cam breaker (FICB) and throttle positioner (TP).

- (b) Rotate the throttle shaft and check that the length of the stroke.

Standard stroke:

10.9 mm (0.429 in.)

- (c) Adjust the pump stroke by bending the connecting link.

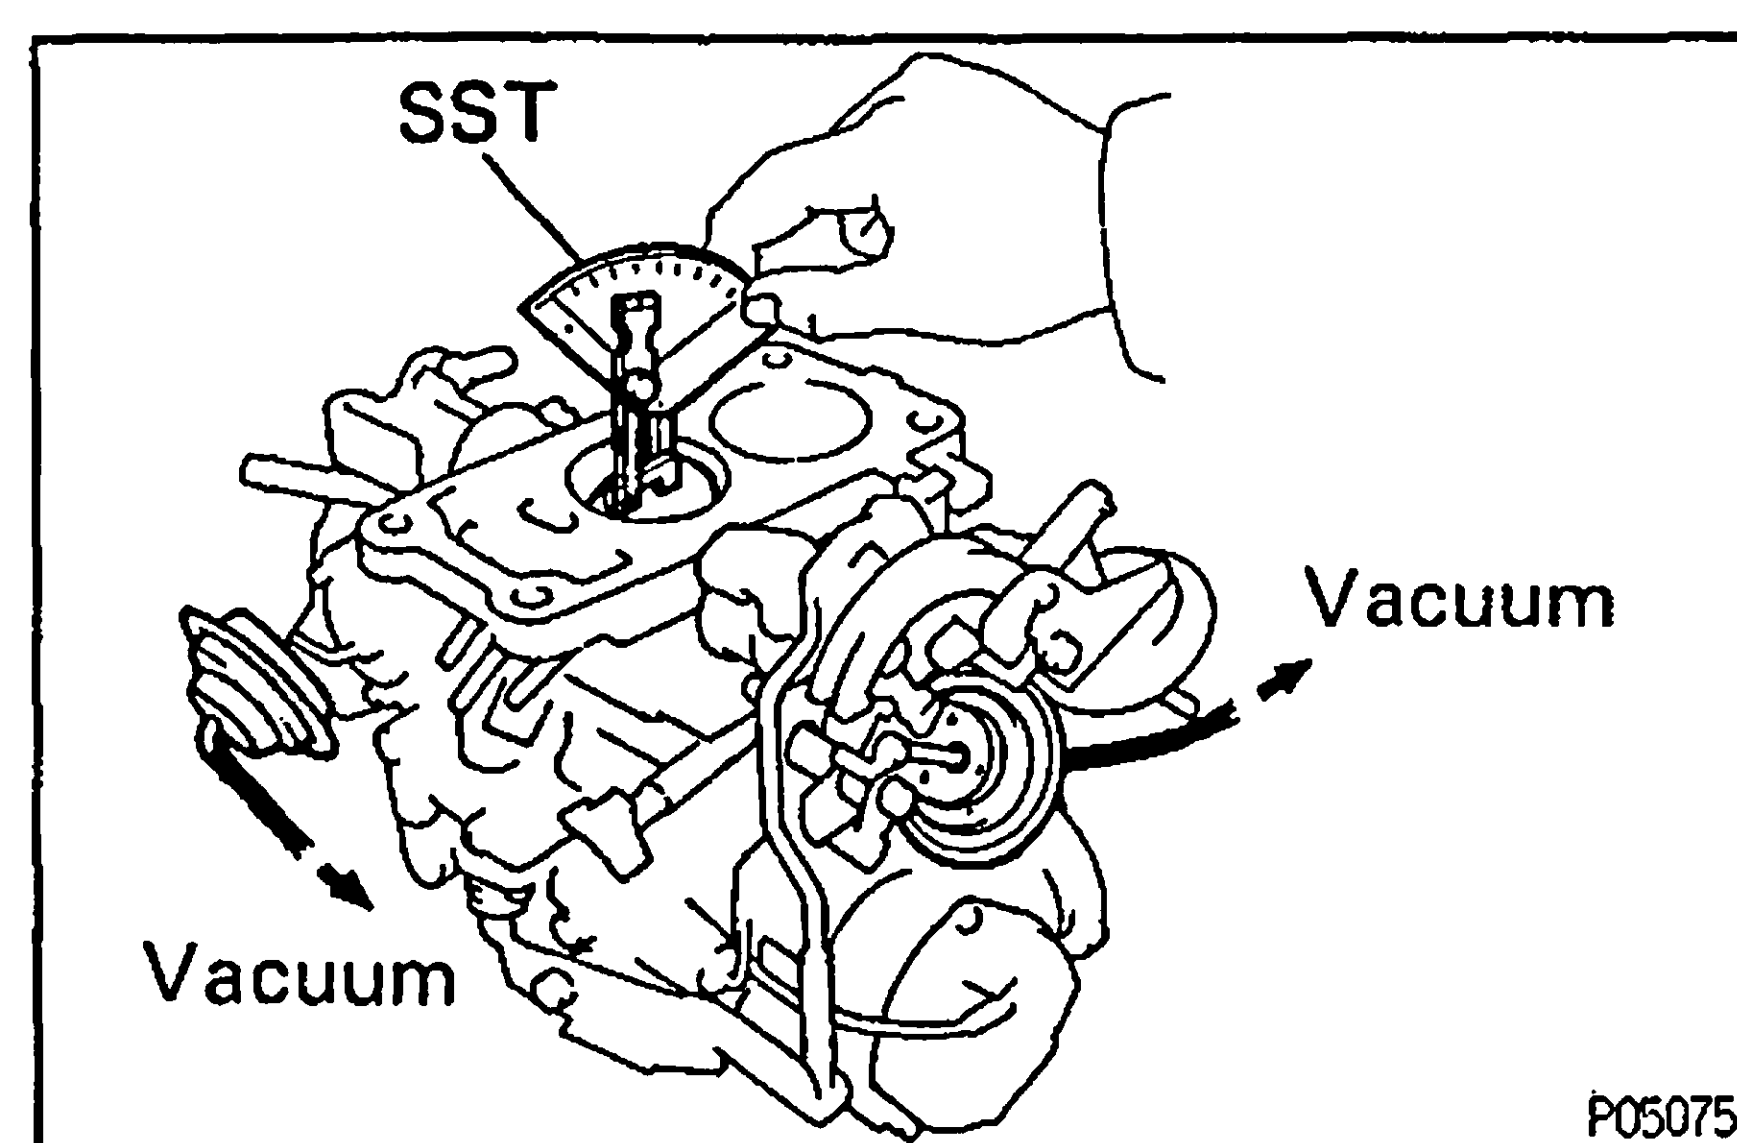
**13. PRESET IDLE SPEED ADJUSTING SCREW**

- (a) Apply vacuum to dash pot (DP) and fast idle cam breaker (FICB).


- (b) Check the primary throttle valve angle.

Standard angle:

14° from horizontal

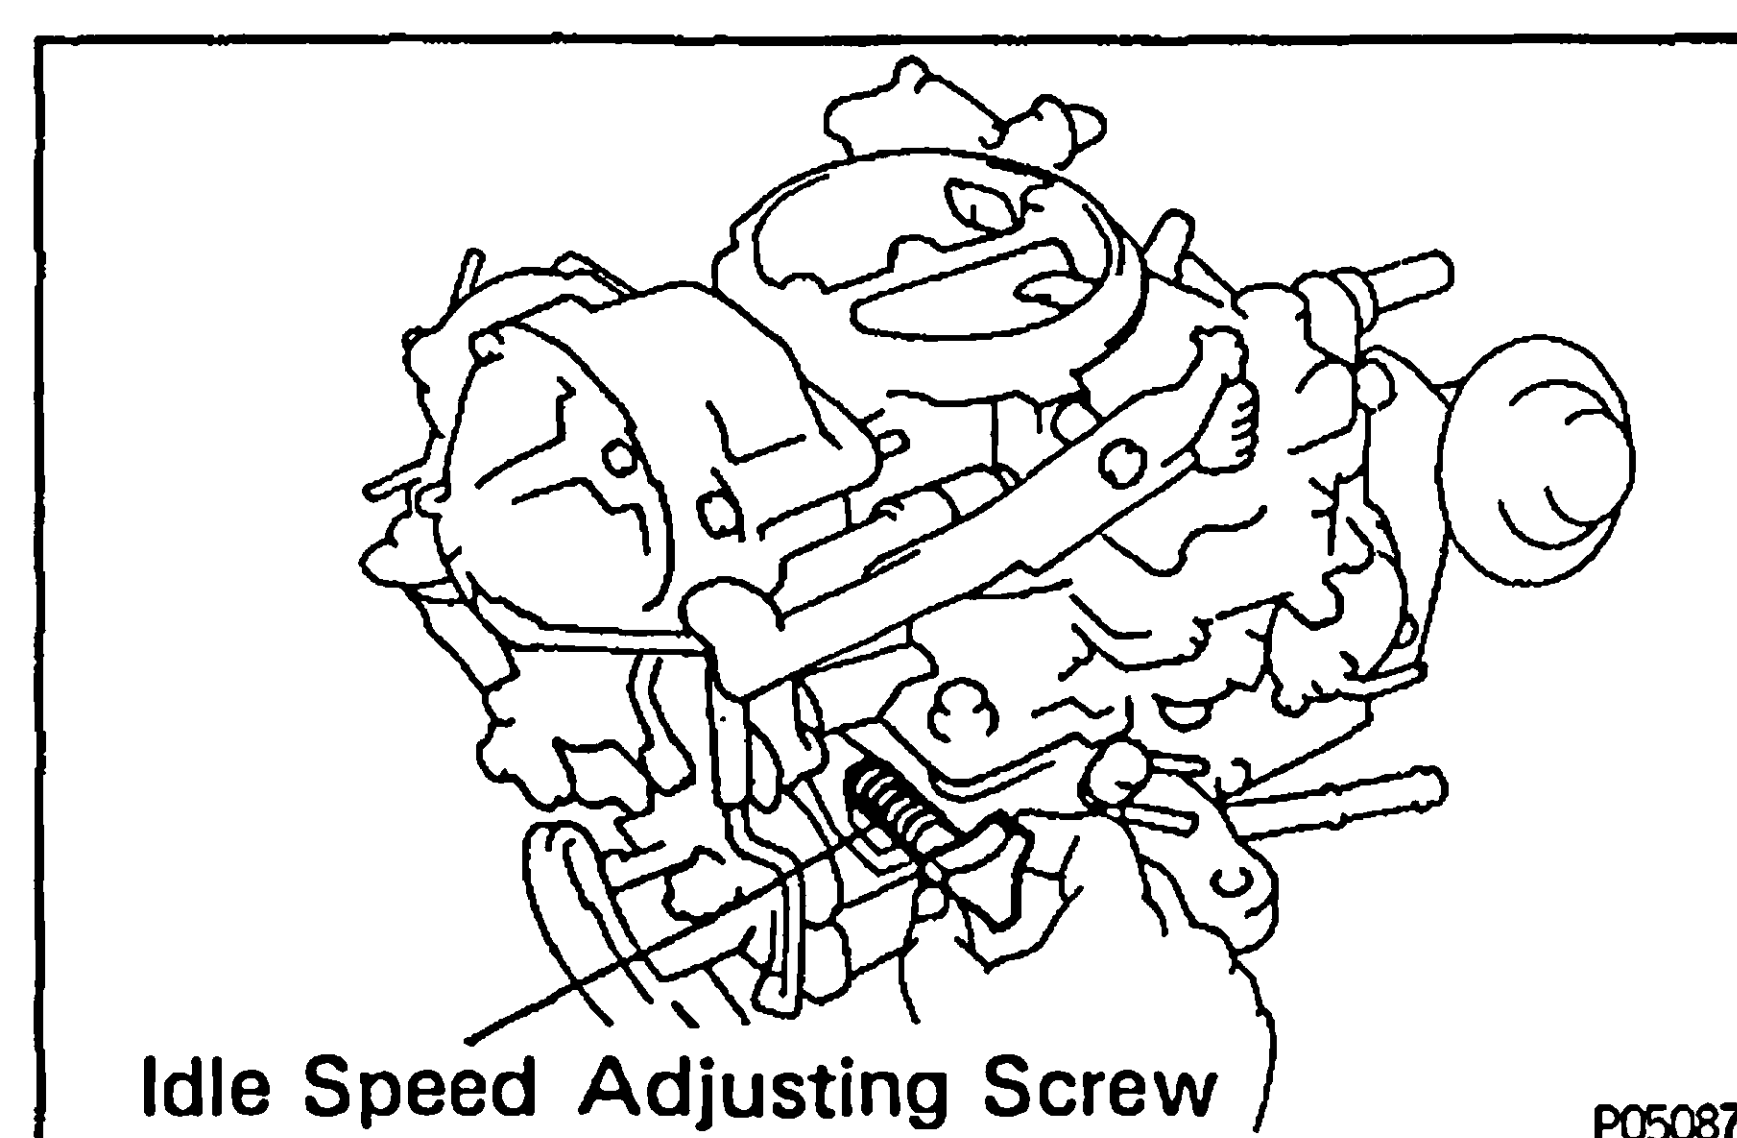

- (c) Adjust turning the idle speed adjusting screw.

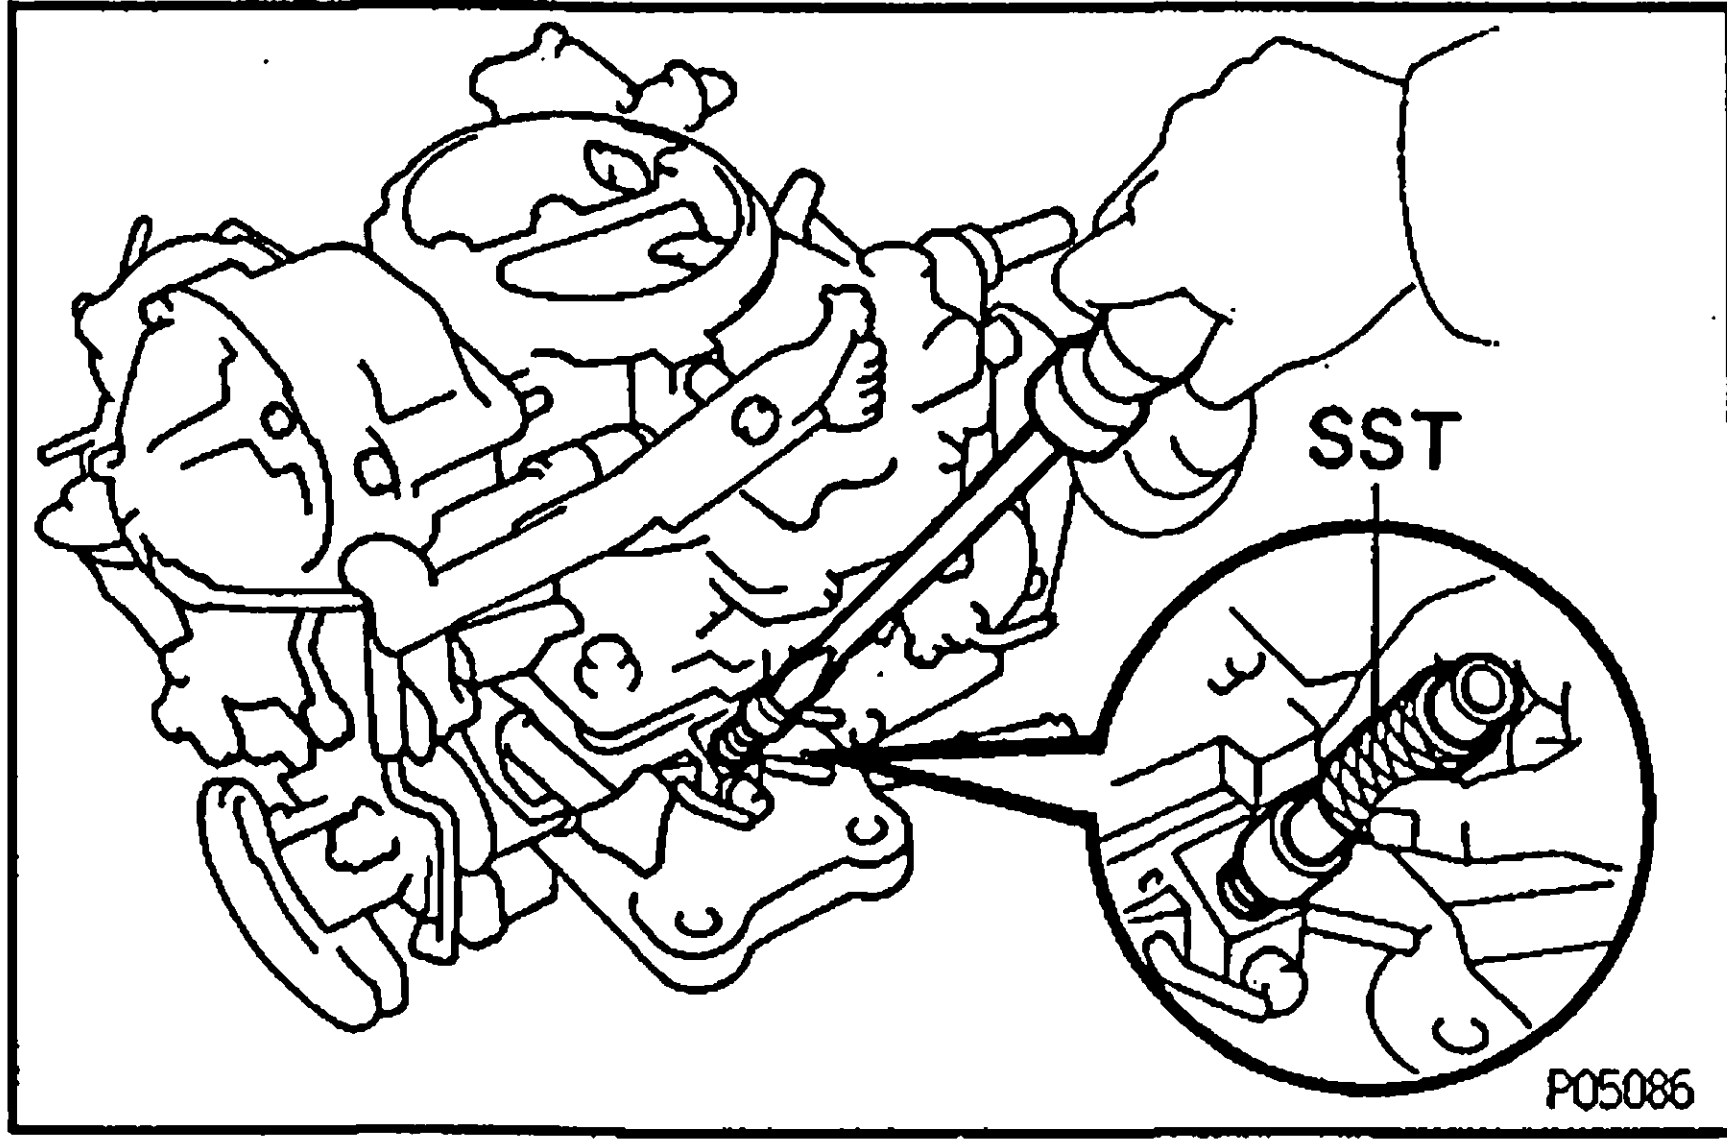**14. PRESET IDLE MIXTURE ADJUSTING SCREW**

If the idle mixture adjusting screw has been removed, fully screw it in and then unscrew it the following amount.

Standard:

Return 2 1/4 turns from fully closed position

HINT: Use SST if necessary.

SST 09243-00020

NOTICE: Use care not to screw it in too tightly and damage the screw tip.


15. CHECK FOR SMOOTH OPERATION OF EACH PART**16. INSTALL CARBURETOR STUD BOLT**

CARBURETOR INSTALLATION


(See page EG-138)

1. INSTALL CARBURETOR

- (a) Place the insulator and new gaskets on the intake manifold.

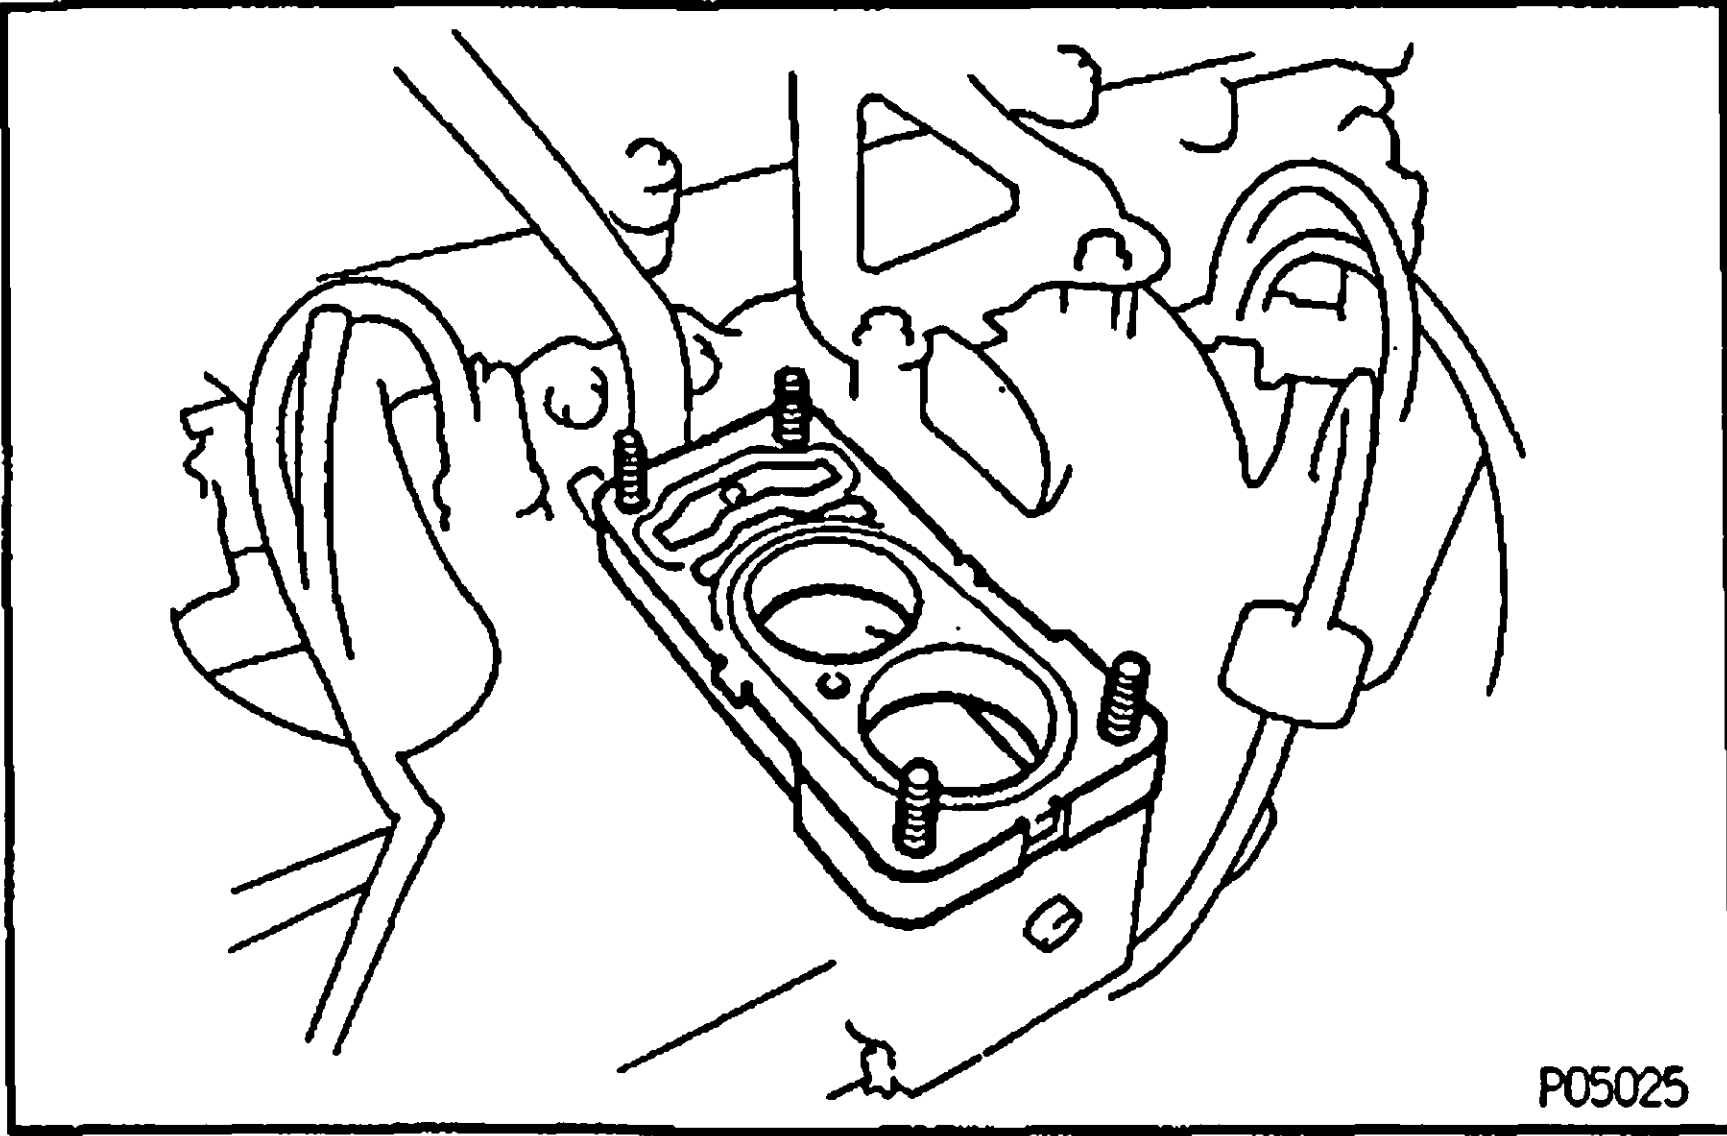

- (b) Place the carburetor on the insulator.
- (c) Install the four carburetor mounting nuts.
Torque: 13 N·m (130 kgf·cm, 9 ft·lbf)

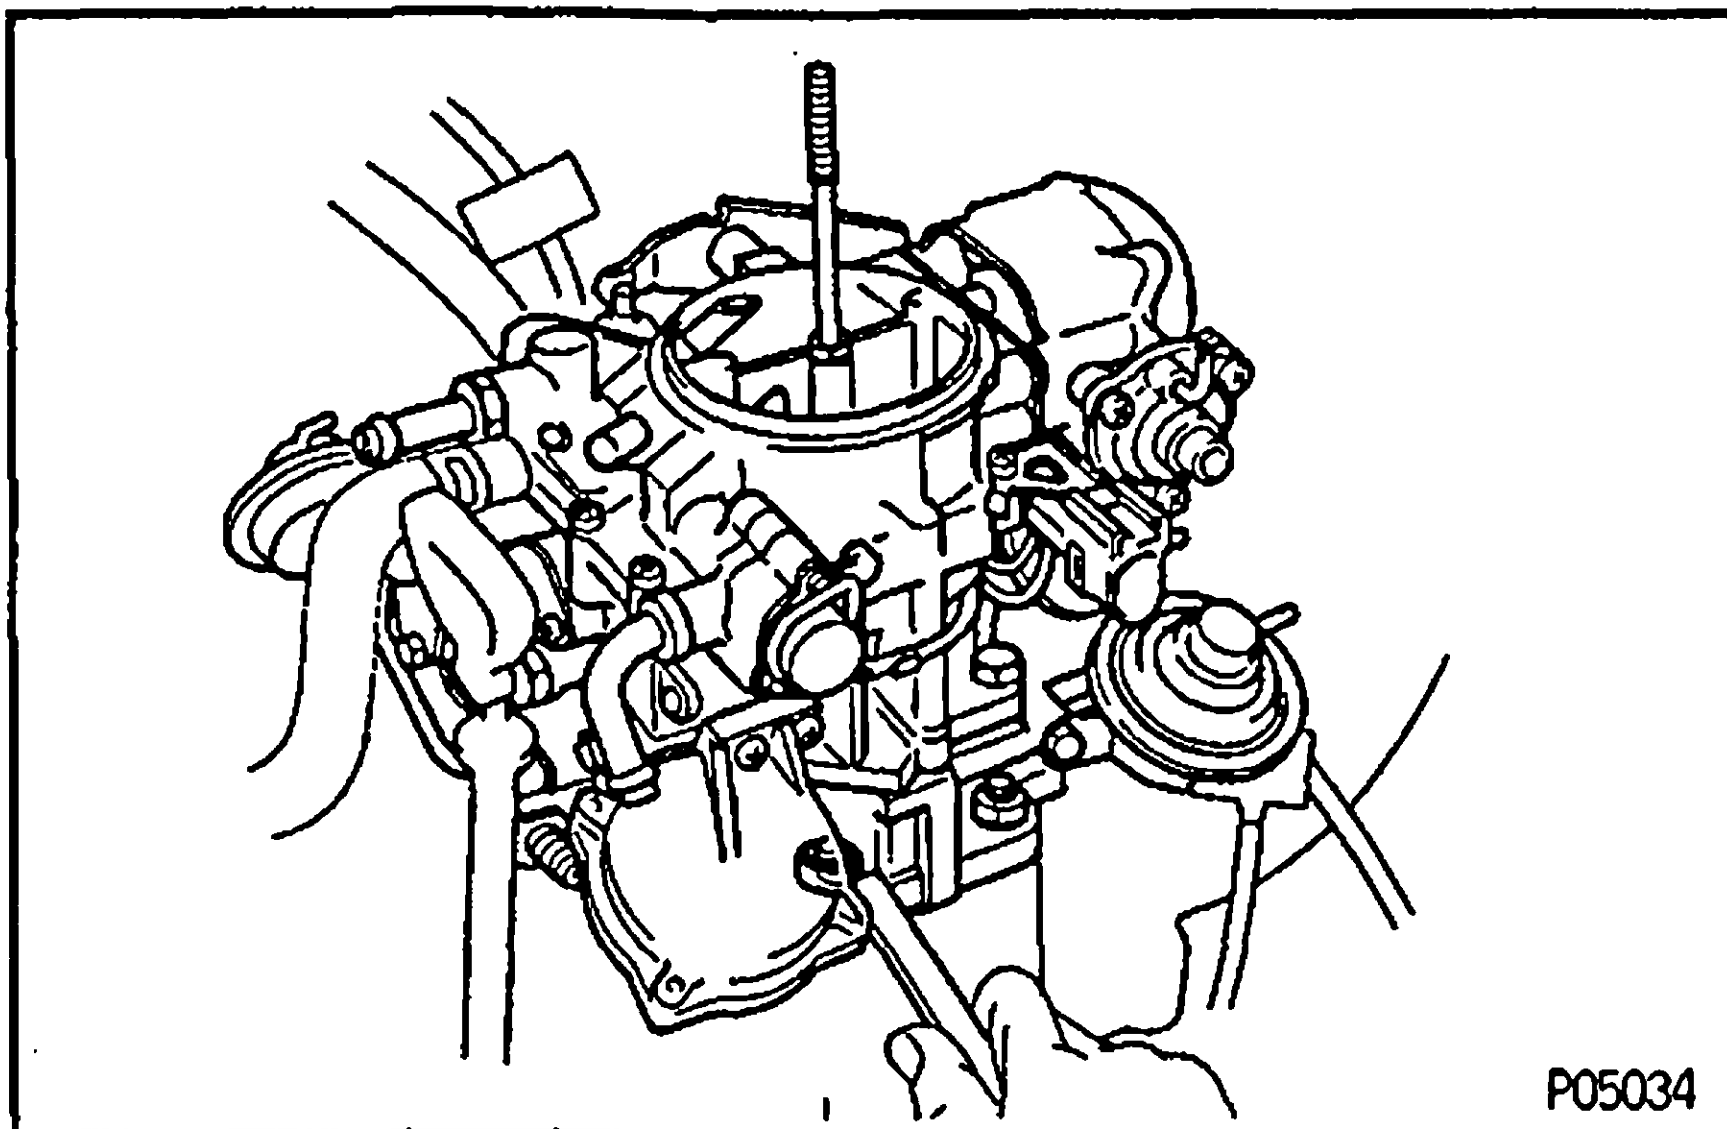

2. CONNECT FOLLOWING HOSES

- (a) Emission control hoses
- (b) Fuel inlet hose
- (c) Outer vent control hose
- (d) No.1 water by-pass hose

3. CONNECT CARBURETOR CONNECTOR

4. CONNECT ACCELERATOR CABLE

5. INSTALL INTAKE AIR CONNECTOR

6. FILL WITH COOLANT

7. ADJUST IDLE SPEED AND IDLE MIXTURE

8. ADJUST FAST IDLE SPEED

9. ADJUST DASH POT (DP) SETTING SPEED


10. ADJUST THROTTLE POSITIONER (TP) SETTING SPEED

FUEL PUMP

FUEL PUMP REMOVAL

EGOUU-01


EG

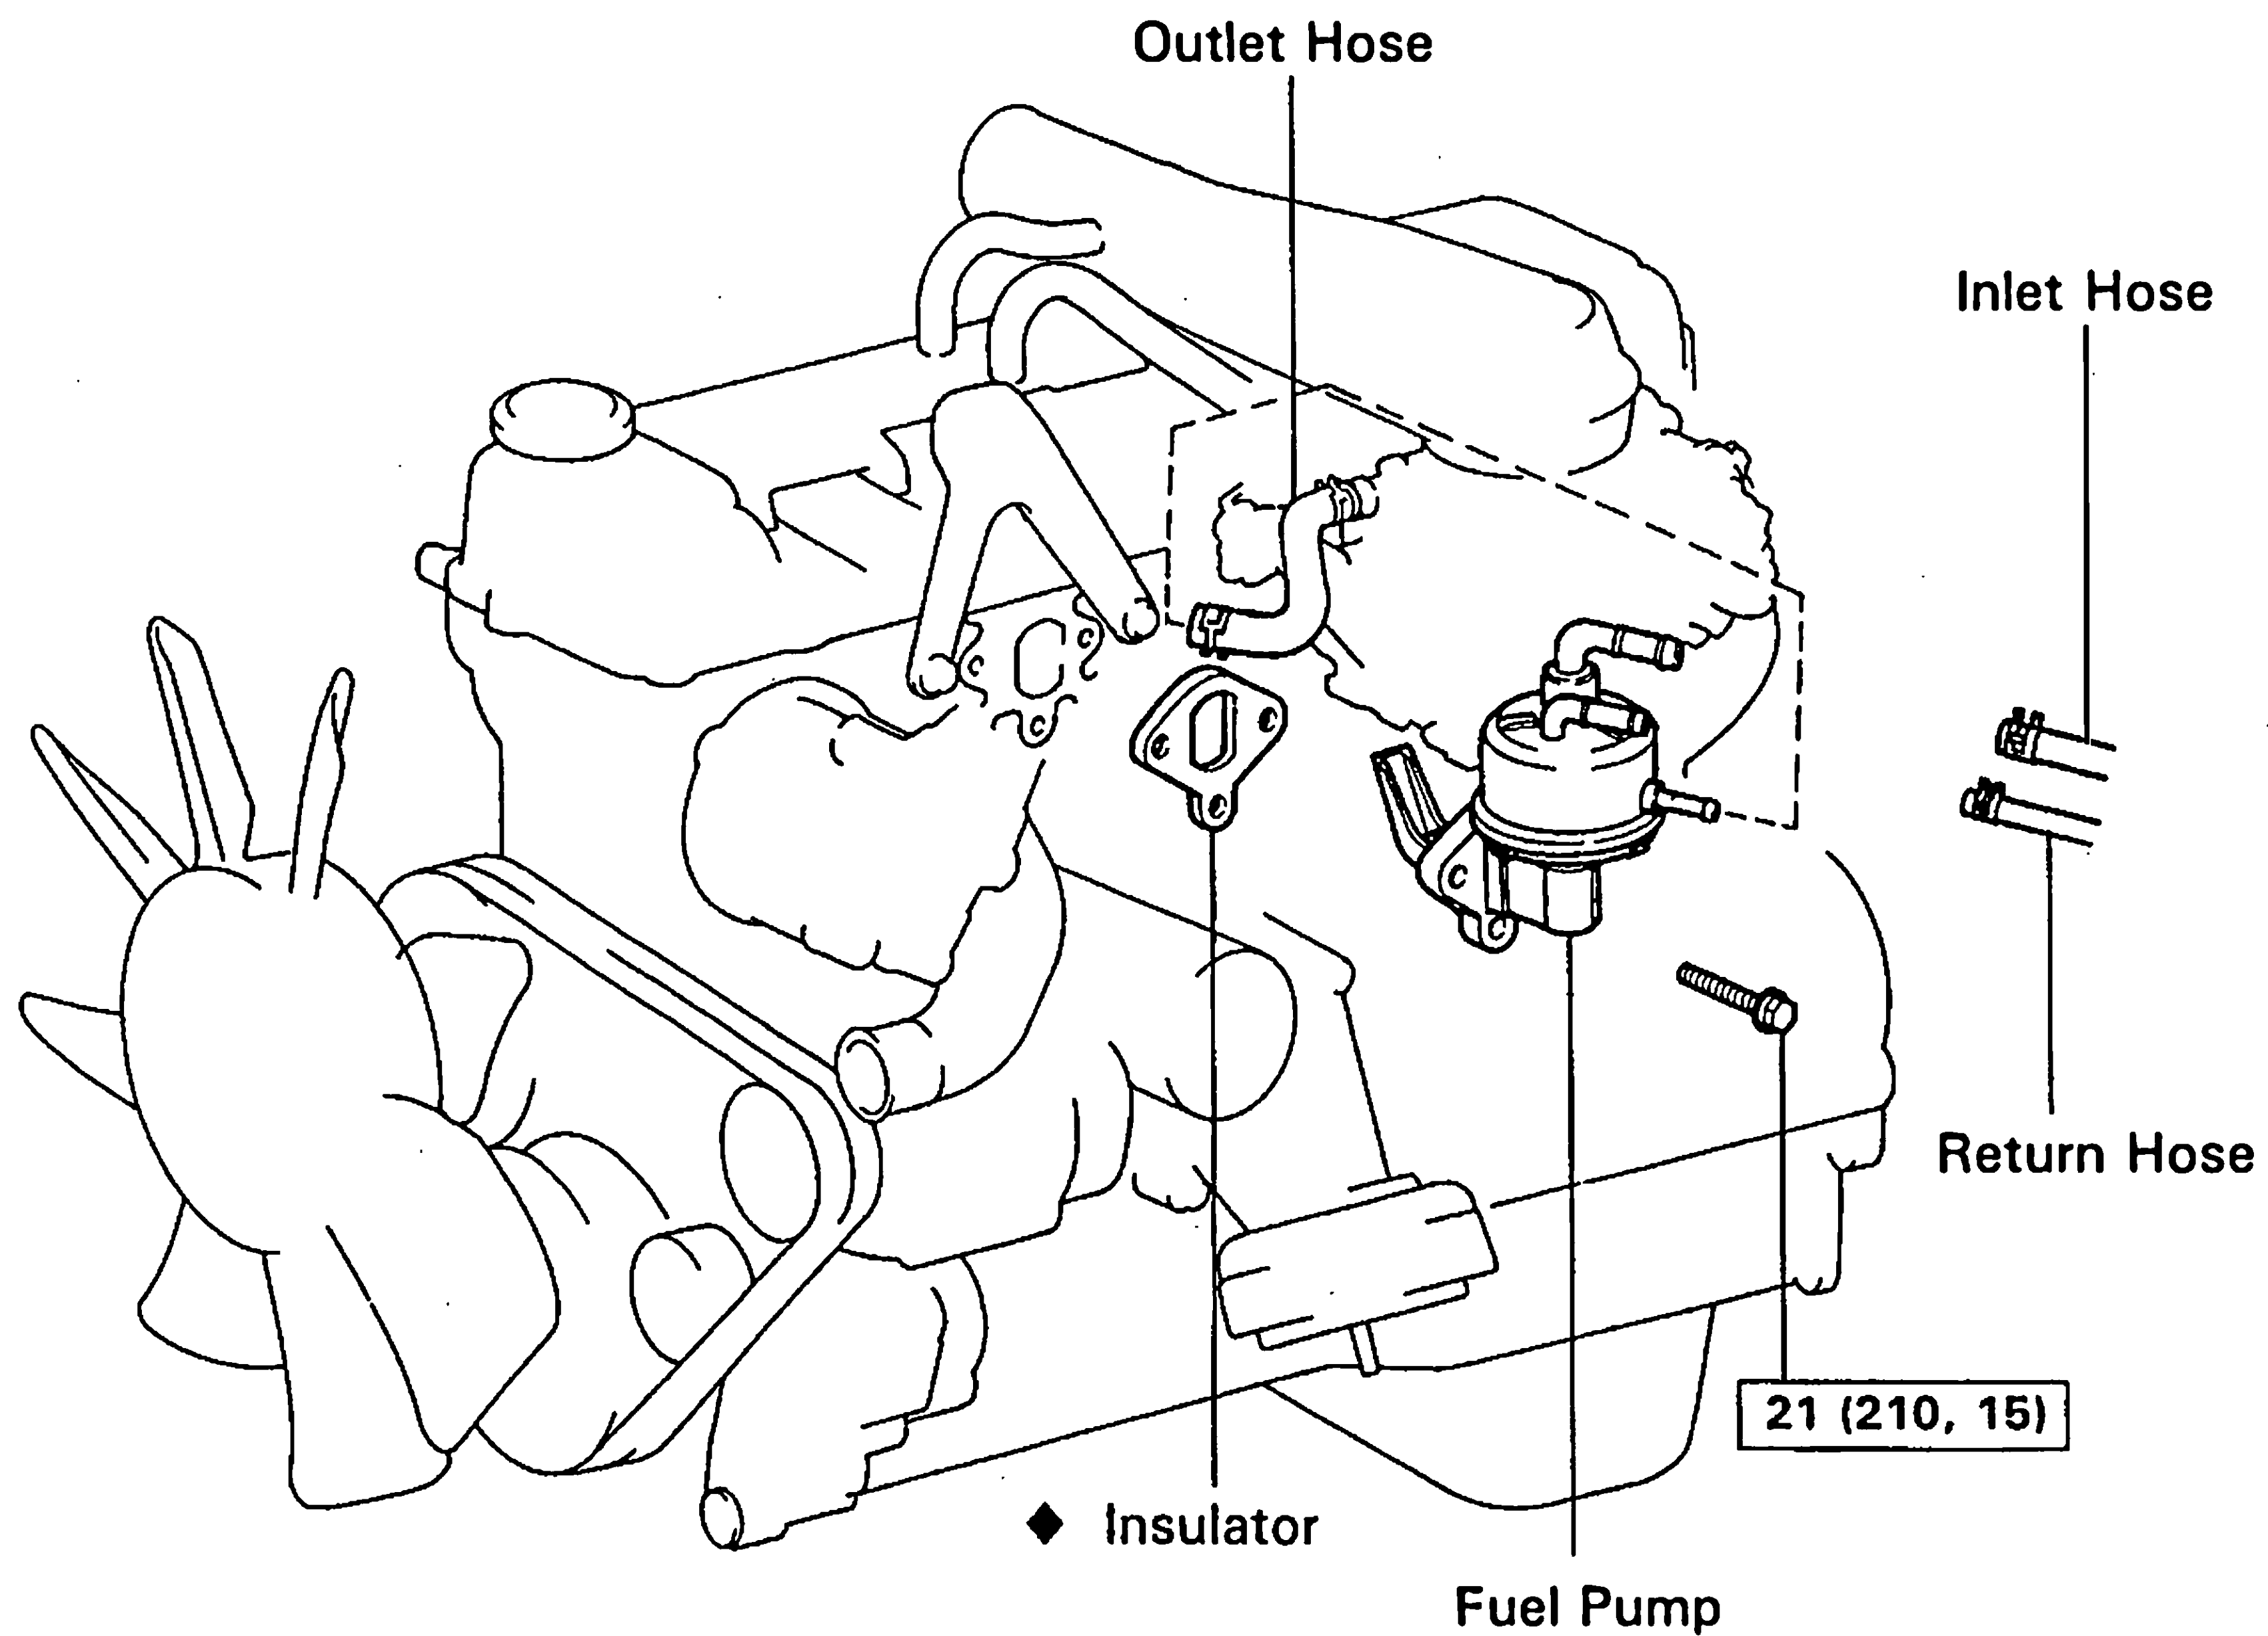

N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part

P05421

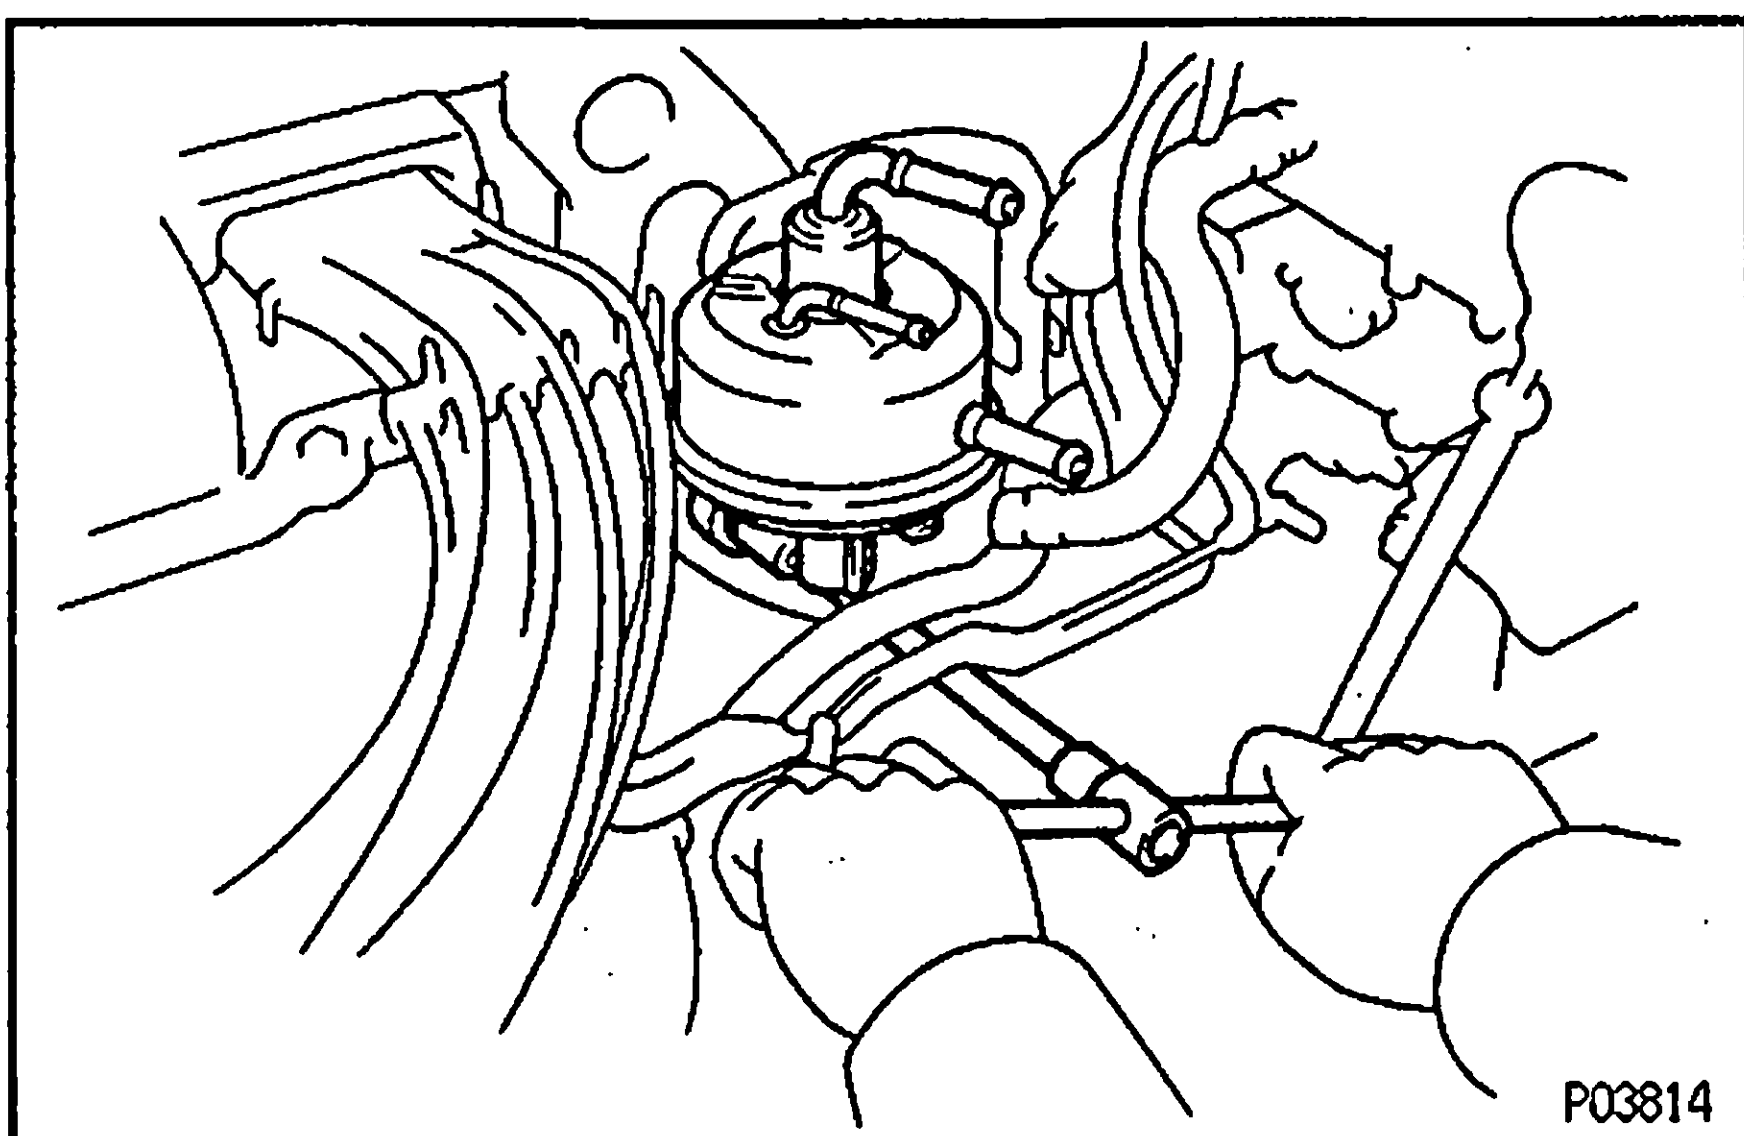


P03814

- 1. DISCONNECT FUEL HOSES FROM FUEL PUMP**
- 2. REMOVE FUEL PUMP**
Remove the three bolts, fuel pump and insulator.

FUEL PUMP INSPECTION (Airtight Test)

EG0UV-01

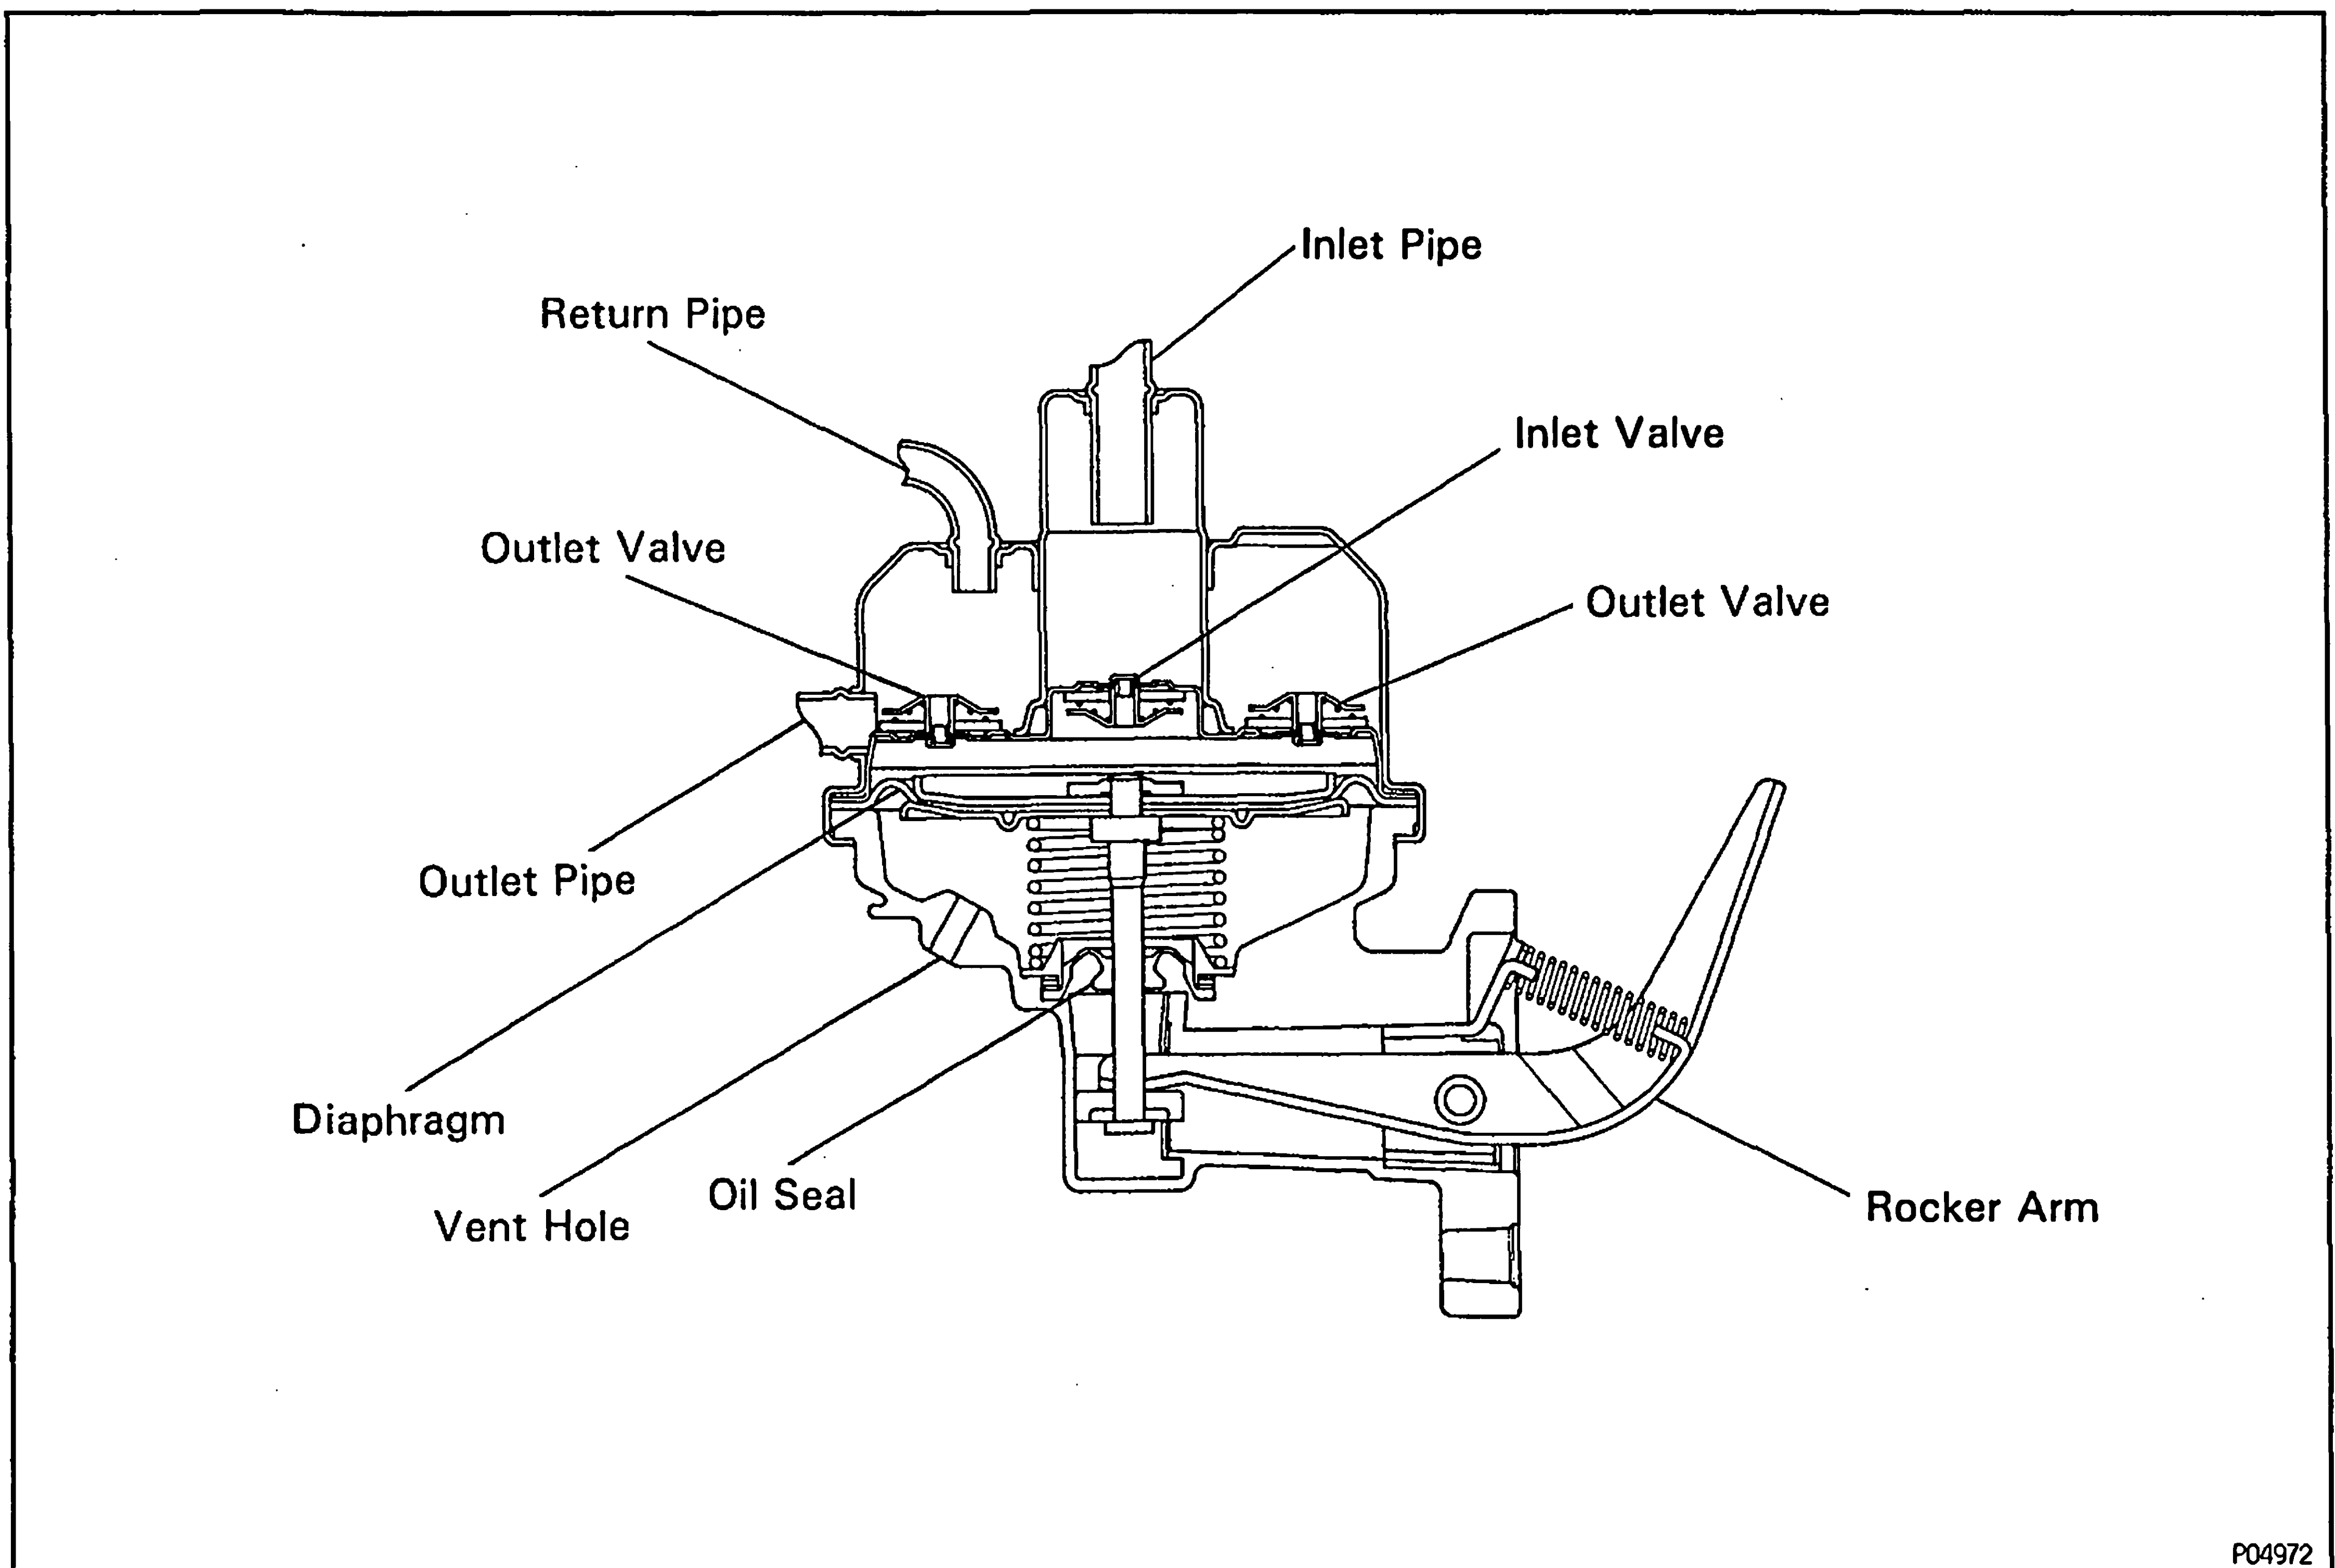CUTAWAY VIEW

P04972


PRECHECKS

Before performing the following checks on the fuel pump:


- (a) Run some fuel through the pump to insure that the check valves seal tightly (a dry check valve may not seal properly).
- (b) Without blocking off any pipes, operate the rocker arm and check the amount of force necessary for operation and the amount of arm play. This same amount of force should be used in the checks.

1. CHECK INLET VALVE

Block off the outlet and return pipes with your finger and check that there is an increase in rocker arm play and that the rocker arm moves freely (no reaction force).

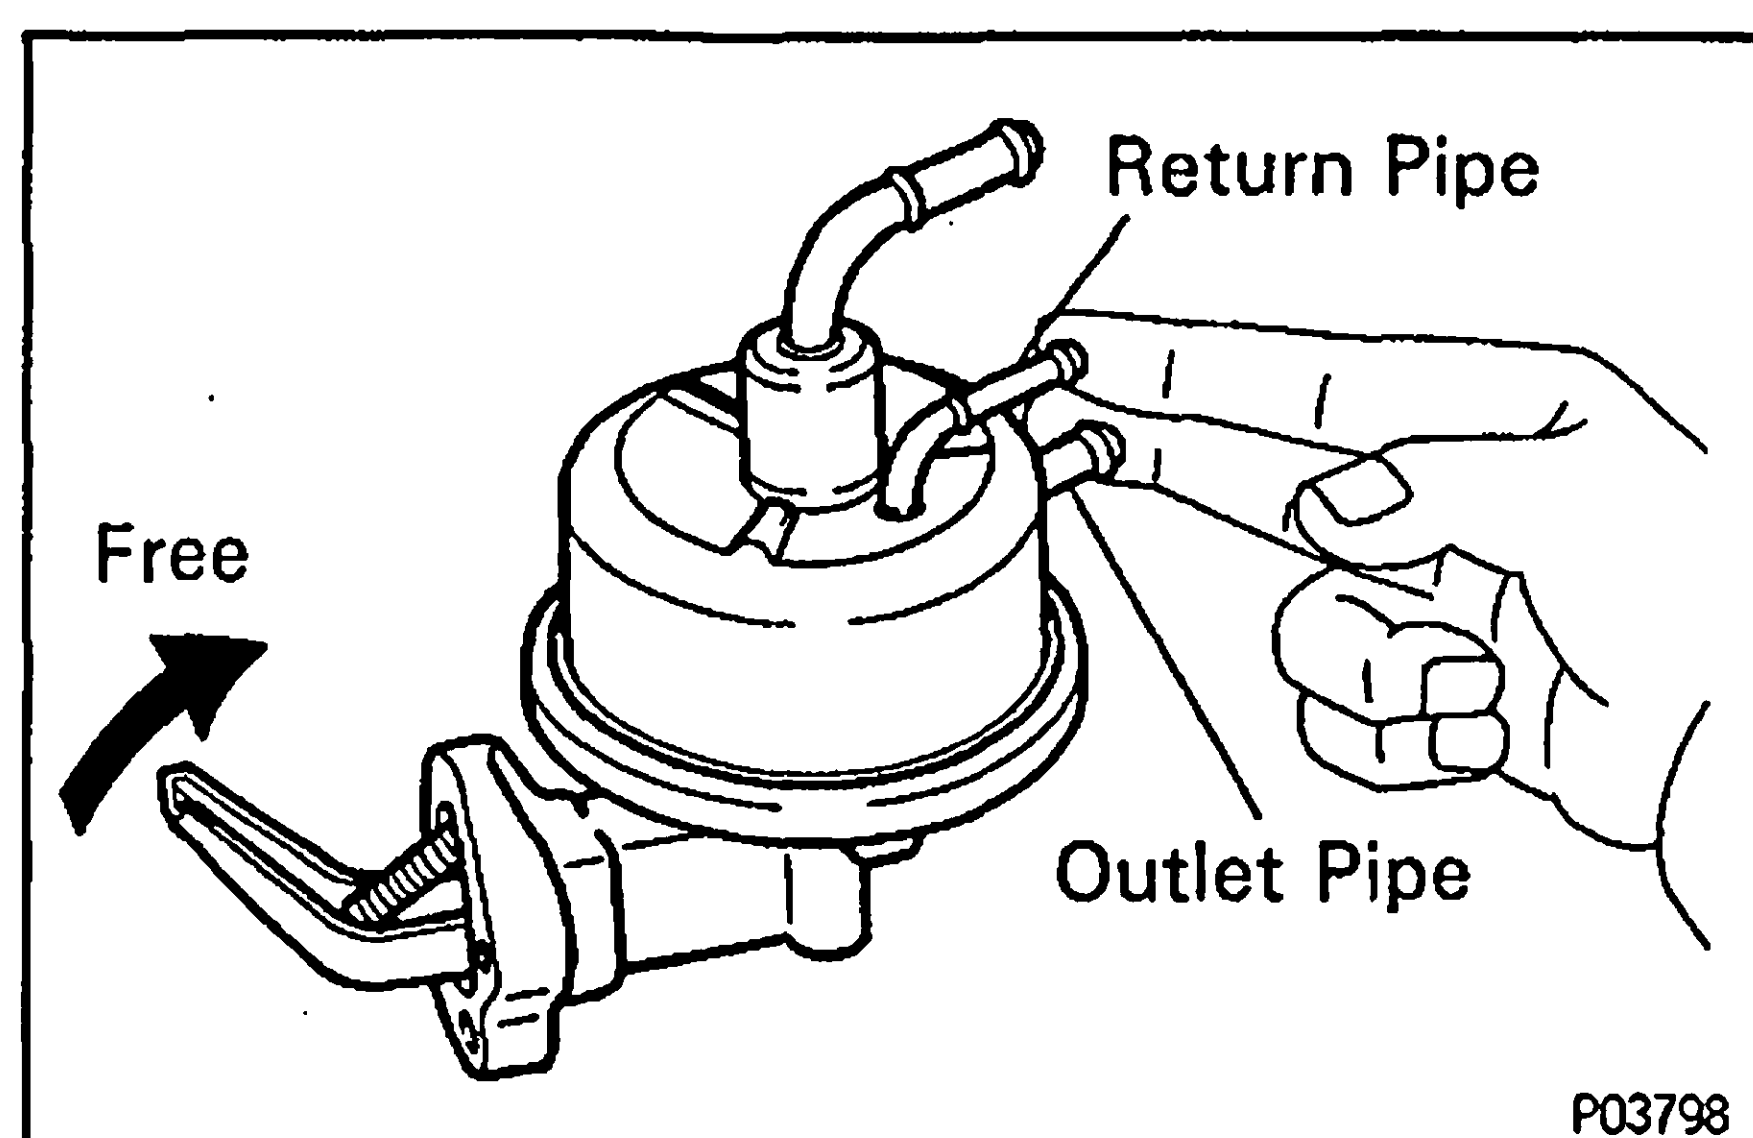


P03798

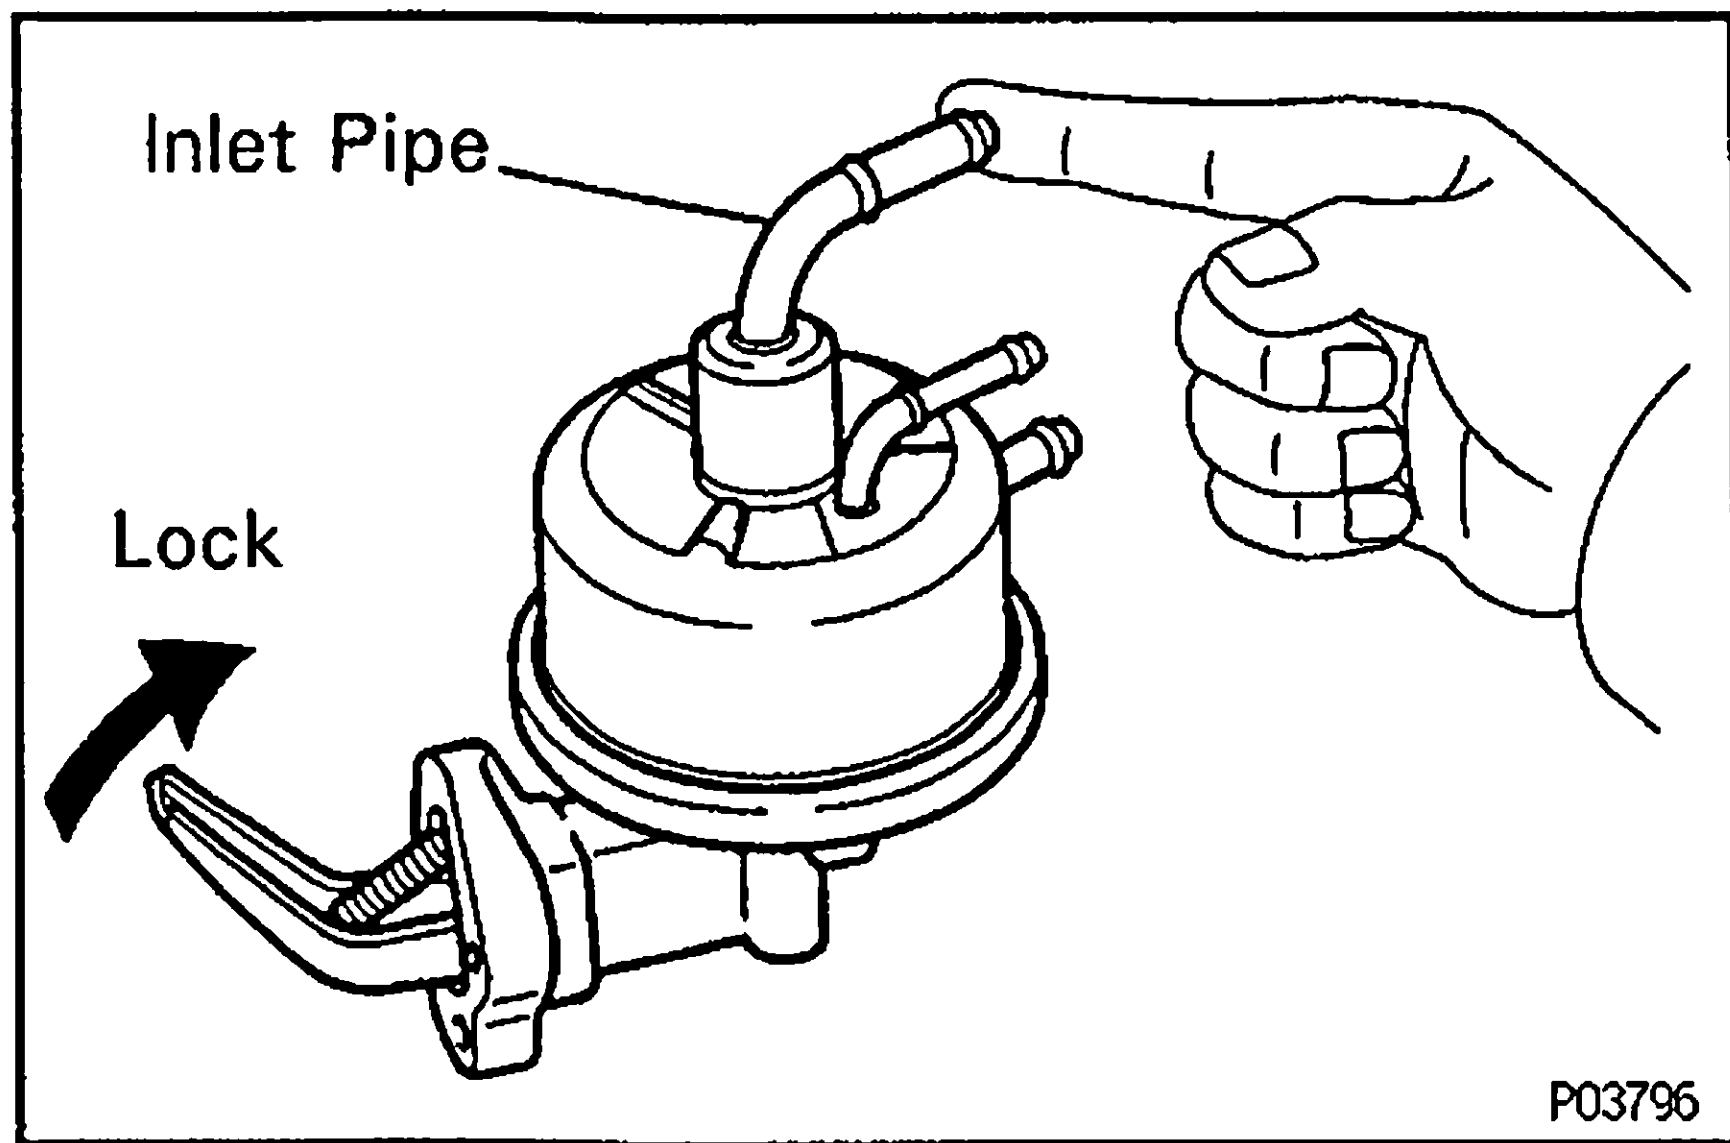

2. CHECK OUTLET VALVE

Block off the inlet pipe with your finger and check that the rocker arm locks (does not operate with same amount of force used in the precheck above).


HINT: Never use more force than that used in the precheck. This applies to checks 3 and 4 also.

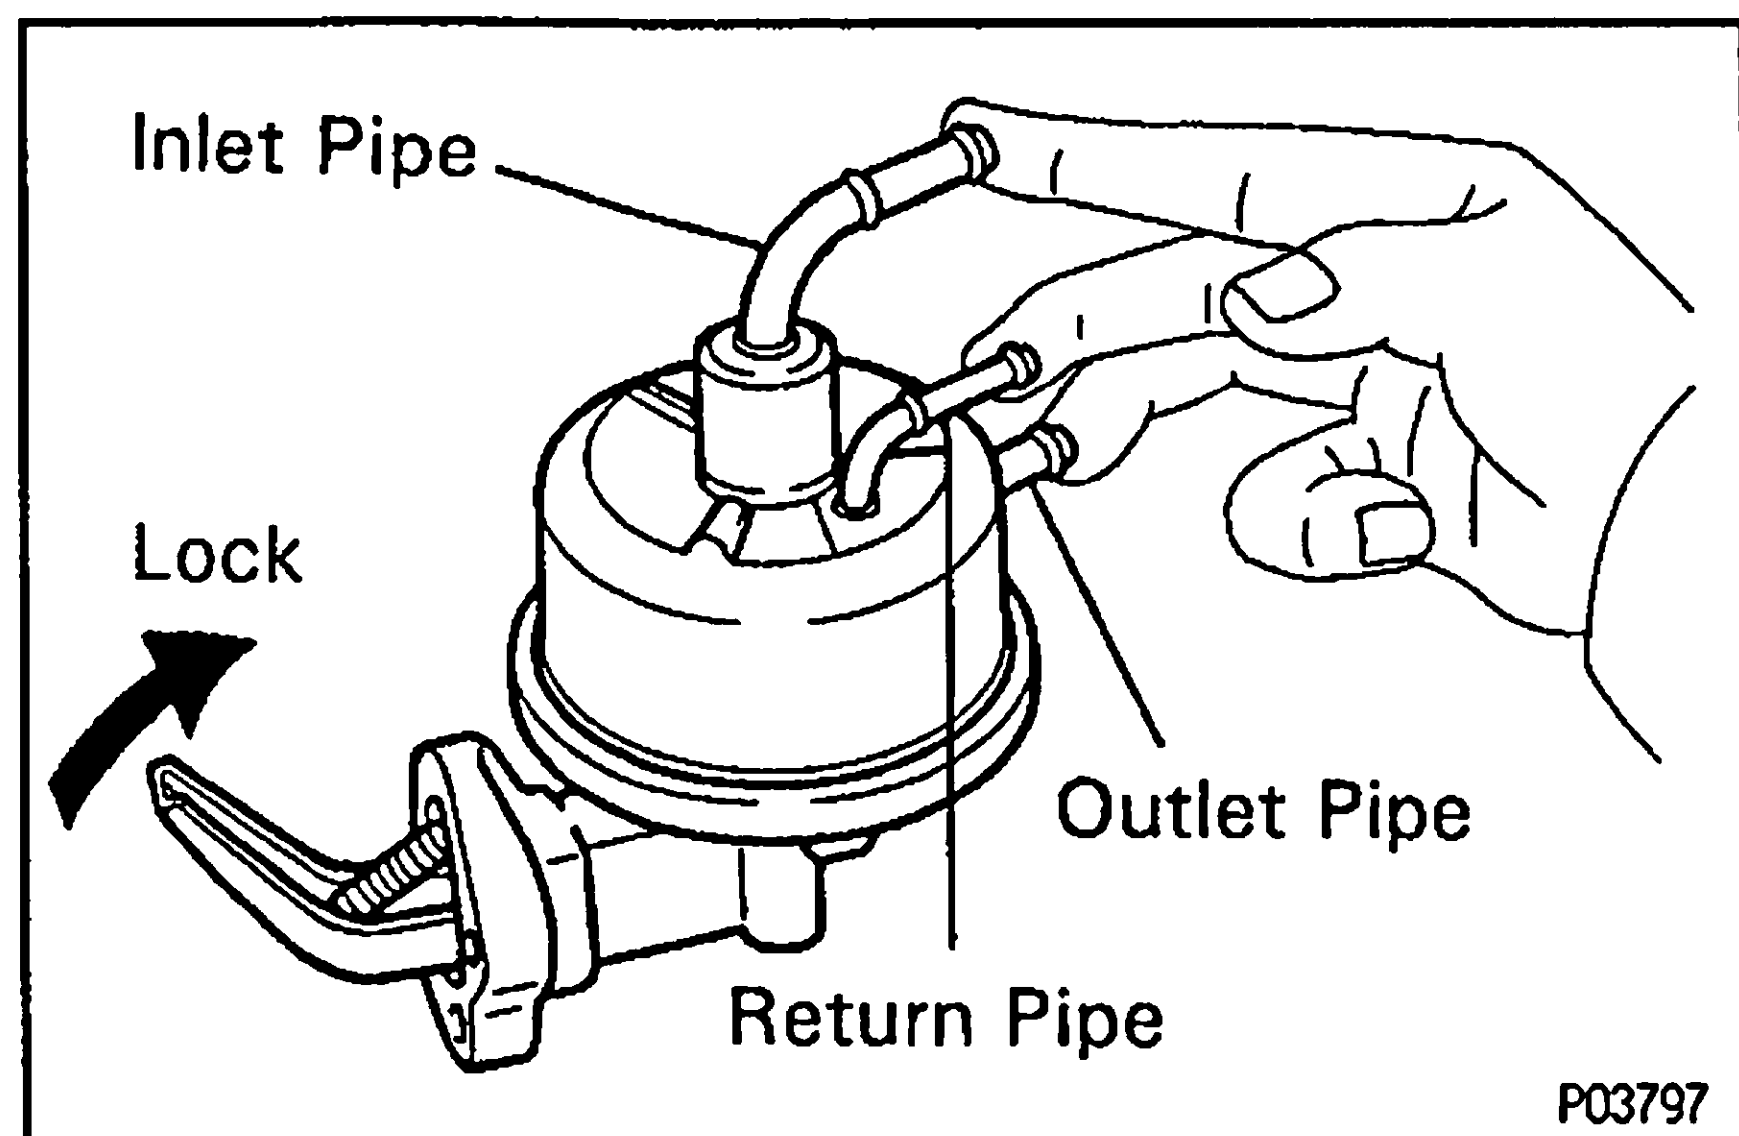

3. CHECK DIAPHRAGM


Block off the inlet, outlet and return pipes and check that the rocker arm locks.

HINT: If all three of these checks are not as specified, the caulking (sealing) of the body and upper casing is defective.

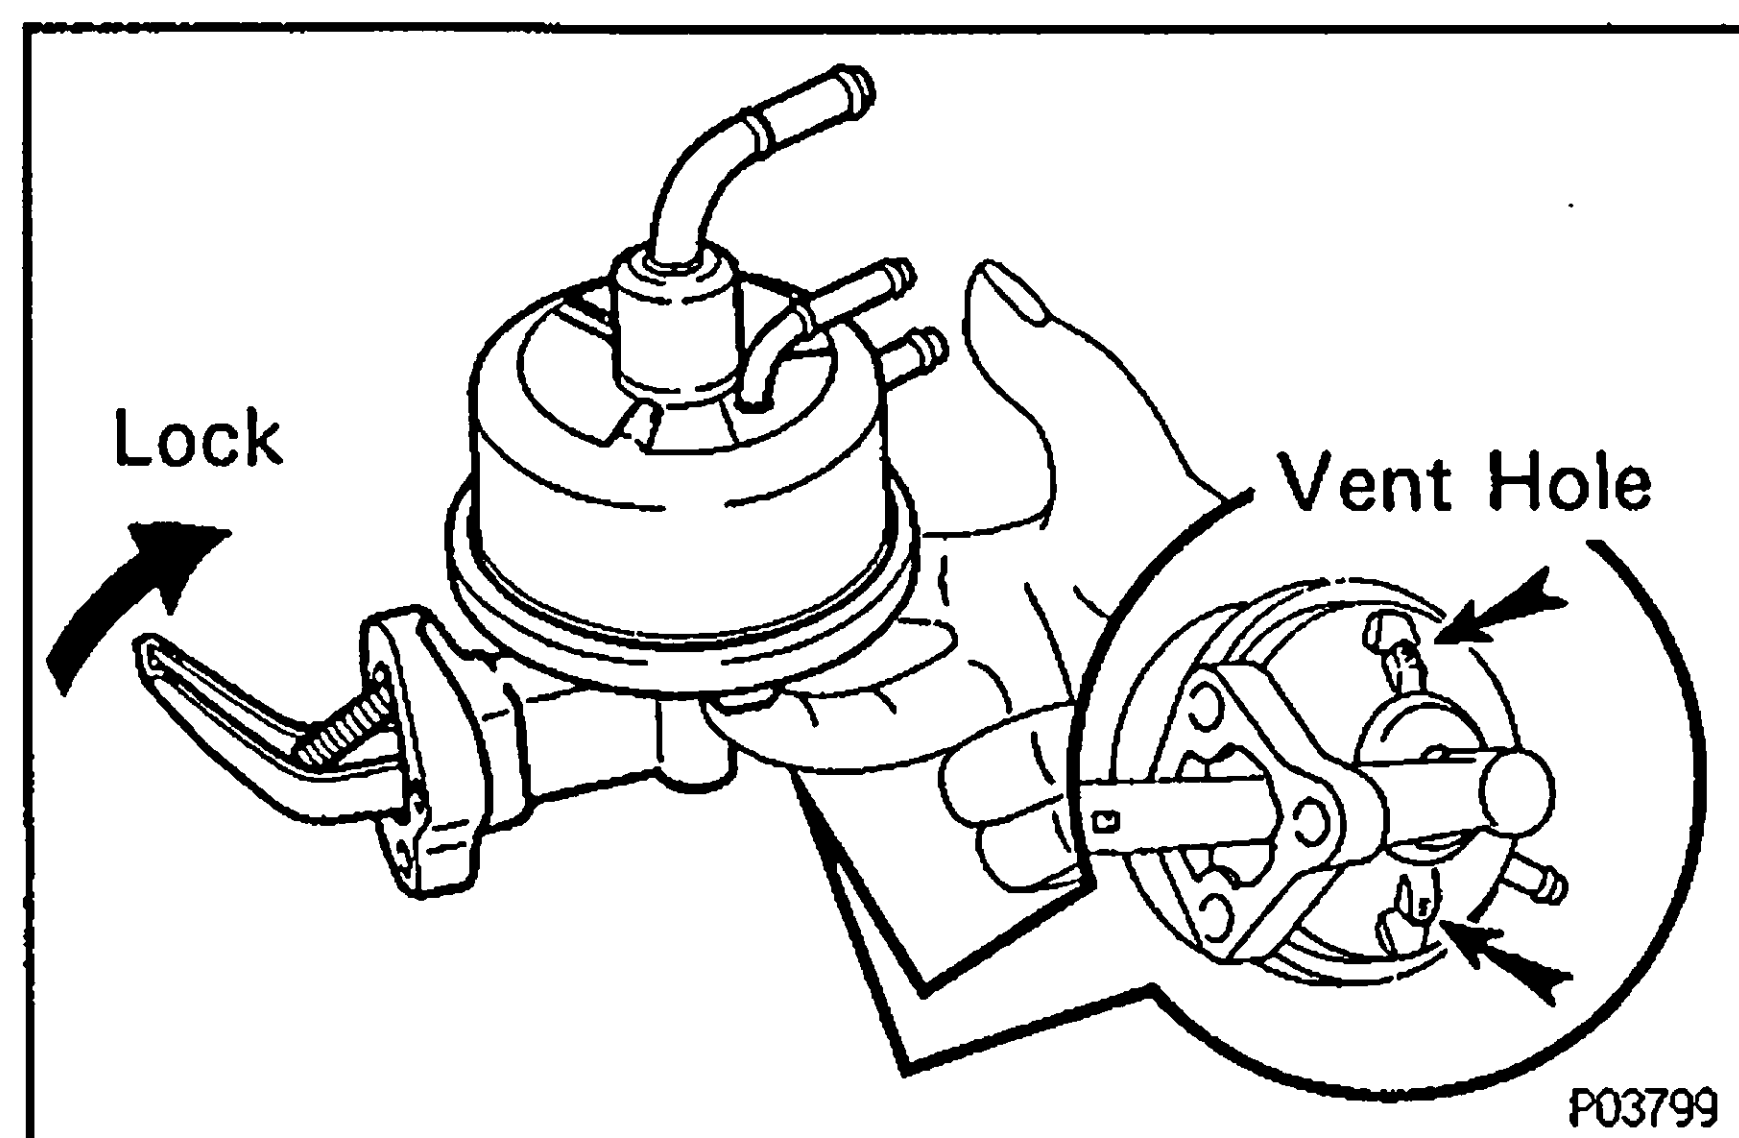

4. CHECK OIL SEAL

Block off the vent hole with your finger and check that the rocker arm locks.

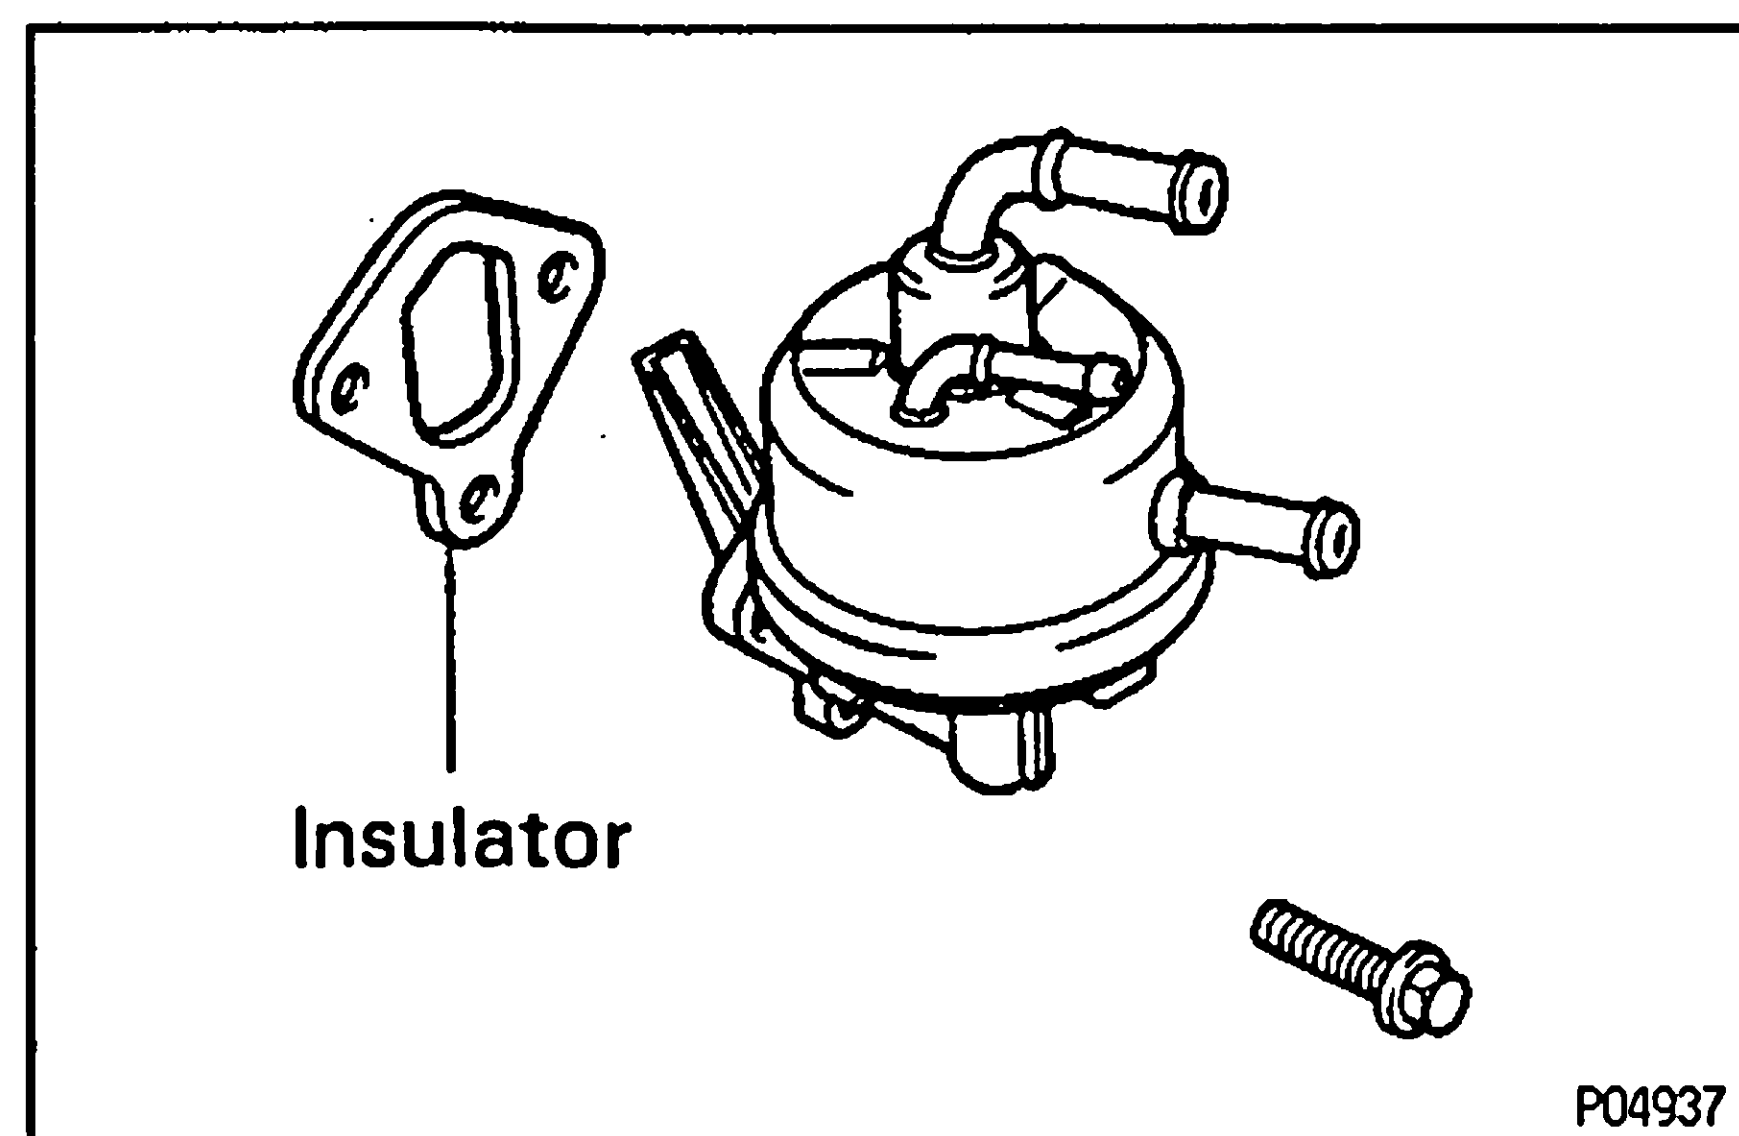

FUEL PUMP INSTALLATION

1. INSTALL FUEL PUMP

Install a new insulator and fuel pump with the three bolts.

Torque: 21 N·m (210 kgf·cm, 15 ft·lbf)

2. CONNECT FUEL HOSES TO FUEL PUMP

3. START ENGINE AND CHECK FOR LEAKS

SERVICE SPECIFICATIONS
SERVICE DATA

EG0UX-01

Carburetor	Part. No.	21100-66010
		21100-66020
		21100-66030
	Float level (Raised position)	7.0 mm (0.276 in.)
	Float level (Lowered position)	0.9 — 1.1 mm (0.035-0.043 in.)
	Throttle valve closed angle (Primary)	9° from horizontal
	Throttle valve closed angle (Secondary)	20° from horizontal
	Secondary throttle valve full open angle (Primary)	90° from horizontal
	Secondary throttle valve full open angle (Secondary)	90° from horizontal
	Secondary throttle valve kickup angle	23° from horizontal
	Secondary touch angle	58° from horizontal
	Fast idle angle (Pre-setting)-G.C.C.	15.5 — 17.5° from horizontal
	Fast idle angle (Pre-setting)-Others	17 — 19° from horizontal
	Choke valve closed angle	20° from horizontal
	Unloder angle	35 — 39° from horizontal
	Choke breaker angle	44 — 46° from horizontal
	DP angle	19 — 21° from horizontal
	Throttle positioner angle	17.5 — 19.5° from horizontal
	Idle speed angle (Pre-setting)	14° from horizontal
	Idle mixture adjusting screw (Pre-setting)	Screw out approx. 2 1/4 turns
	Acceleration pump stroke	1.09 mm (0.429 in.)
	Choke heater resistance	1.7 — 1.9 Ω
	OVCV resistance	32 — 38 Ω



TORQUE SPECIFICATIONS

EG0UY-01


Part tightened	N·m	kgf·cm	ft·lbf
Carbulator x Intake manifold	13	130	9
Fuel pump x Cylinder head	21	210	15

COOLING SYSTEM

DESCRIPTION

This engine utilizes a pressurized forced circulation cooling system which includes a thermostat equipped with a by-pass valve mounted on the inlet side.

EG08A-03

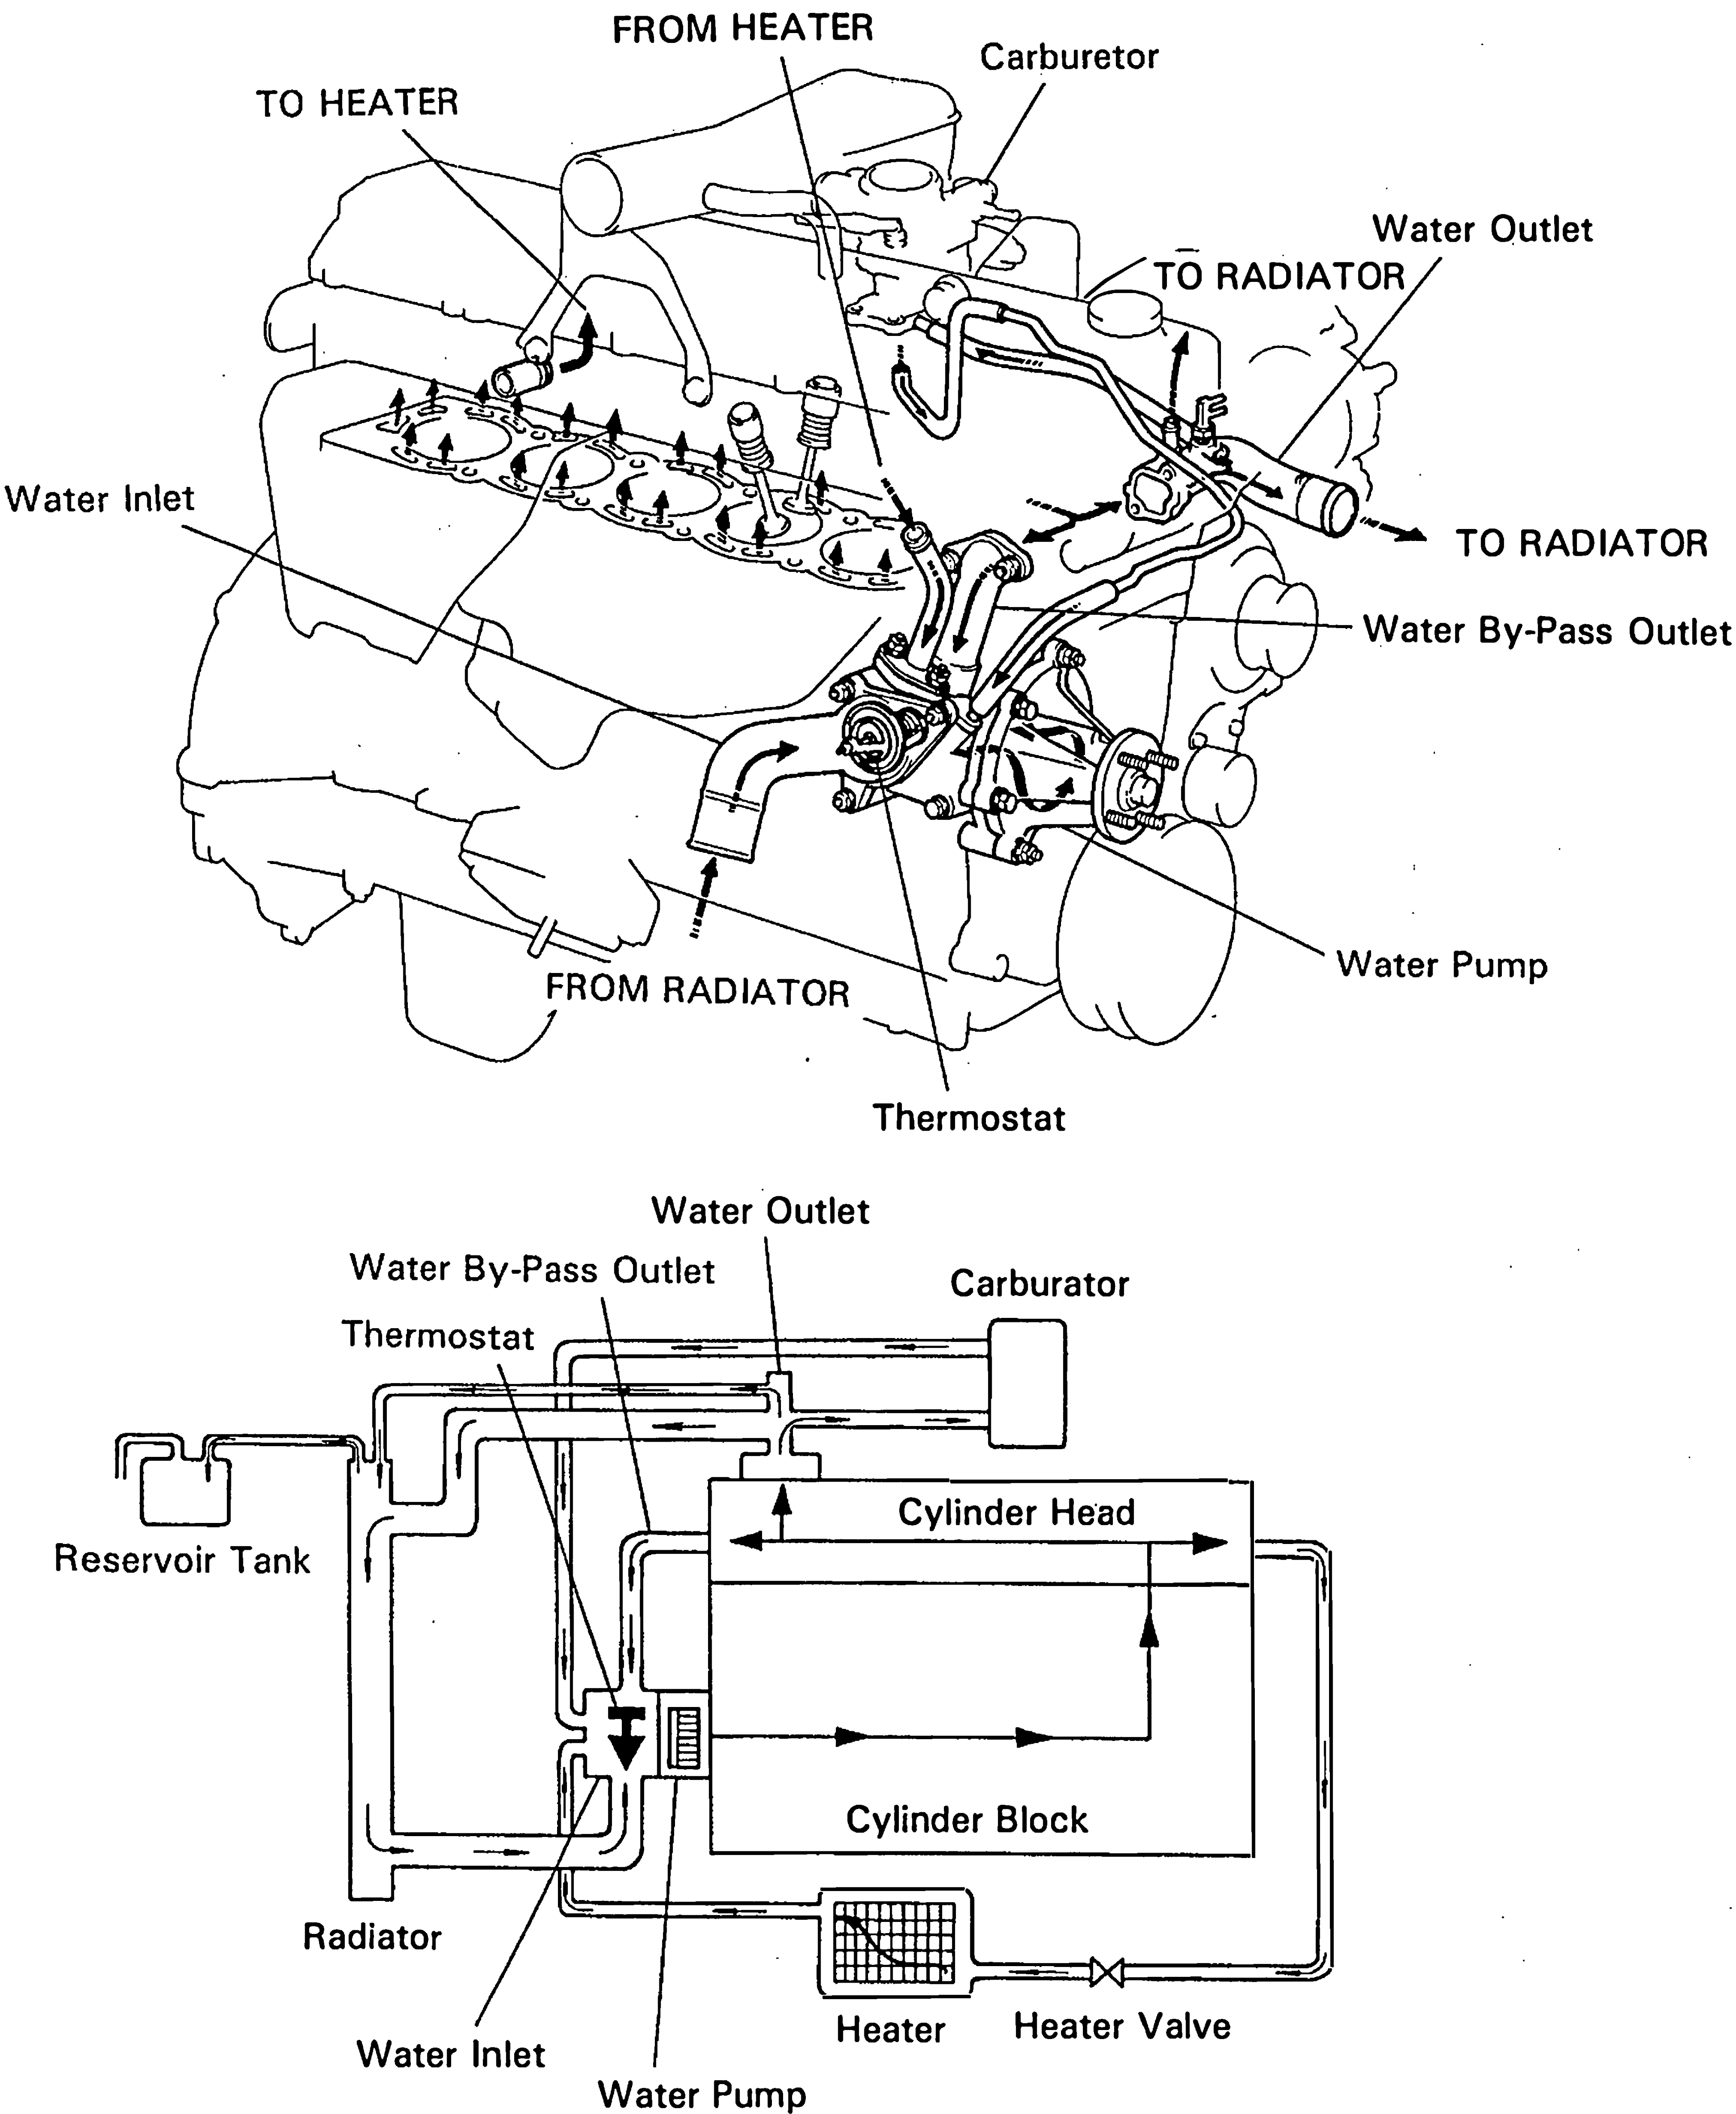

The cooling system is composed of the water jacket (inside the cylinder block and cylinder head), radiator, water pump, thermostat, cooling fan, hoses and other components.

Coolant which is heated in the water jacket is pumped to the radiator, through which an cooling fan blows air to cool the coolant as it passes through. Coolant which has been cooled is then sent back to the engine by the water pump, where it cools the engine.

The water jacket is a network of channels in the shell of the cylinder block and cylinder head through which coolant passes. It is designed to provide adequate cooling of the cylinders and combustion chambers which become heated during engine operation.

EG

RADIATOR

The radiator performs the function of cooling the coolant which has passed through the water jacket and become hot, and it is mounted in the front of the vehicle. The radiator consists of an upper tank and lower tank, and a core which connects the two tanks. The upper tank contains the inlet for coolant from the water jacket and the filler inlet. It also has a hose attached through which excess coolant or steam can flow. The lower tank has an outlet and drain cock for the coolant. The core contains many tubes through which coolant flows from the upper tank to the lower tank as well as to cooling fins which radiate heat away from the coolant in the tubes. The air sucked through the radiator by the electric fan, as well as the wind generated by the vehicle's travel, passes through the radiator, cooling the coolant. Models with automatic transmission include an automatic transmission fluid cooler built into the lower tank of the radiator. A fan with an electric motor is mounted behind the radiator to assist the flow of air through the radiator. The fan operates when the coolant temperature becomes high in order to prevent it from becoming too high.

RADIATOR CAP

The radiator cap is a pressure type cap which seals the radiator, resulting in pressurization of the radiator as the coolant expands. The pressurization prevents the coolant from boiling even when the coolant temperature exceeds 100°C (212°F). A relief valve (pressurization valve) and a vacuum valve (negative pressure valve) are built into the radiator cap. The relief valve opens and lets steam escape through the overflow pipe when the pressure generated inside the cooling system exceeds the limit (coolant temperature: 110–120°C (230–248°F), pressure; 59–103 kPa (0.6–1.05 kgf/cm², 8.5–14.9 psi). The vacuum valve opens to alleviate the vacuum which develops in the cooling system after the engine is stopped and the coolant temperature drops. The valve's opening allows the coolant in the reservoir tank to return to the cooling system.

RESERVOIR TANK

The reservoir tank is used to catch coolant which overflows from the cooling system as a result of volumetric expansion when the coolant is heated. The coolant in the reservoir tank returns to the radiator when the coolant temperature drops, thus keeping the radiator full at all times and avoiding needless coolant loss.

Check the reservoir tank level to learn if the coolant needs to be replenished.

WATER PUMP

The water pump is used for forced circulation of coolant through the cooling system. It is mounted on the front of the cylinder block and driven by two drive belts.

THERMOSTAT

The thermostat has a wax type by-pass valve and is mounted in the water inlet housing. The thermostat includes a type of automatic valve operated by fluctuations in the coolant temperature. This valve closes when the coolant temperature drops, preventing the circulation of coolant through the engine and thus permitting the engine to warm up rapidly. The valve opens when the coolant temperature has risen, allowing the circulation of coolant. Wax inside the thermostat expands when heated and contracts when cooled. Heating the wax thus generates pressure which overpowers the force of the spring which keeps the valve closed, thus opening the valve. When the wax cools, its contraction causes the force of the spring to take effect once more, closing the valve. The thermostat in this engine operates at a temperature of 82°C (180°F).

EG

PREPARATION

EQUIPMENT


EG06U-02

Heater	Thermostat
Radiator cap tester	
Thermometer	Thermostat
Torque wrench	

COOLANT

EG06V-02

Item	Capacity	Classification
Engine coolant (w/ Front and rear heaters)	14.5 liters (15.3 US qts, 12.8 Imp. qts)	Ethylene – glycol base

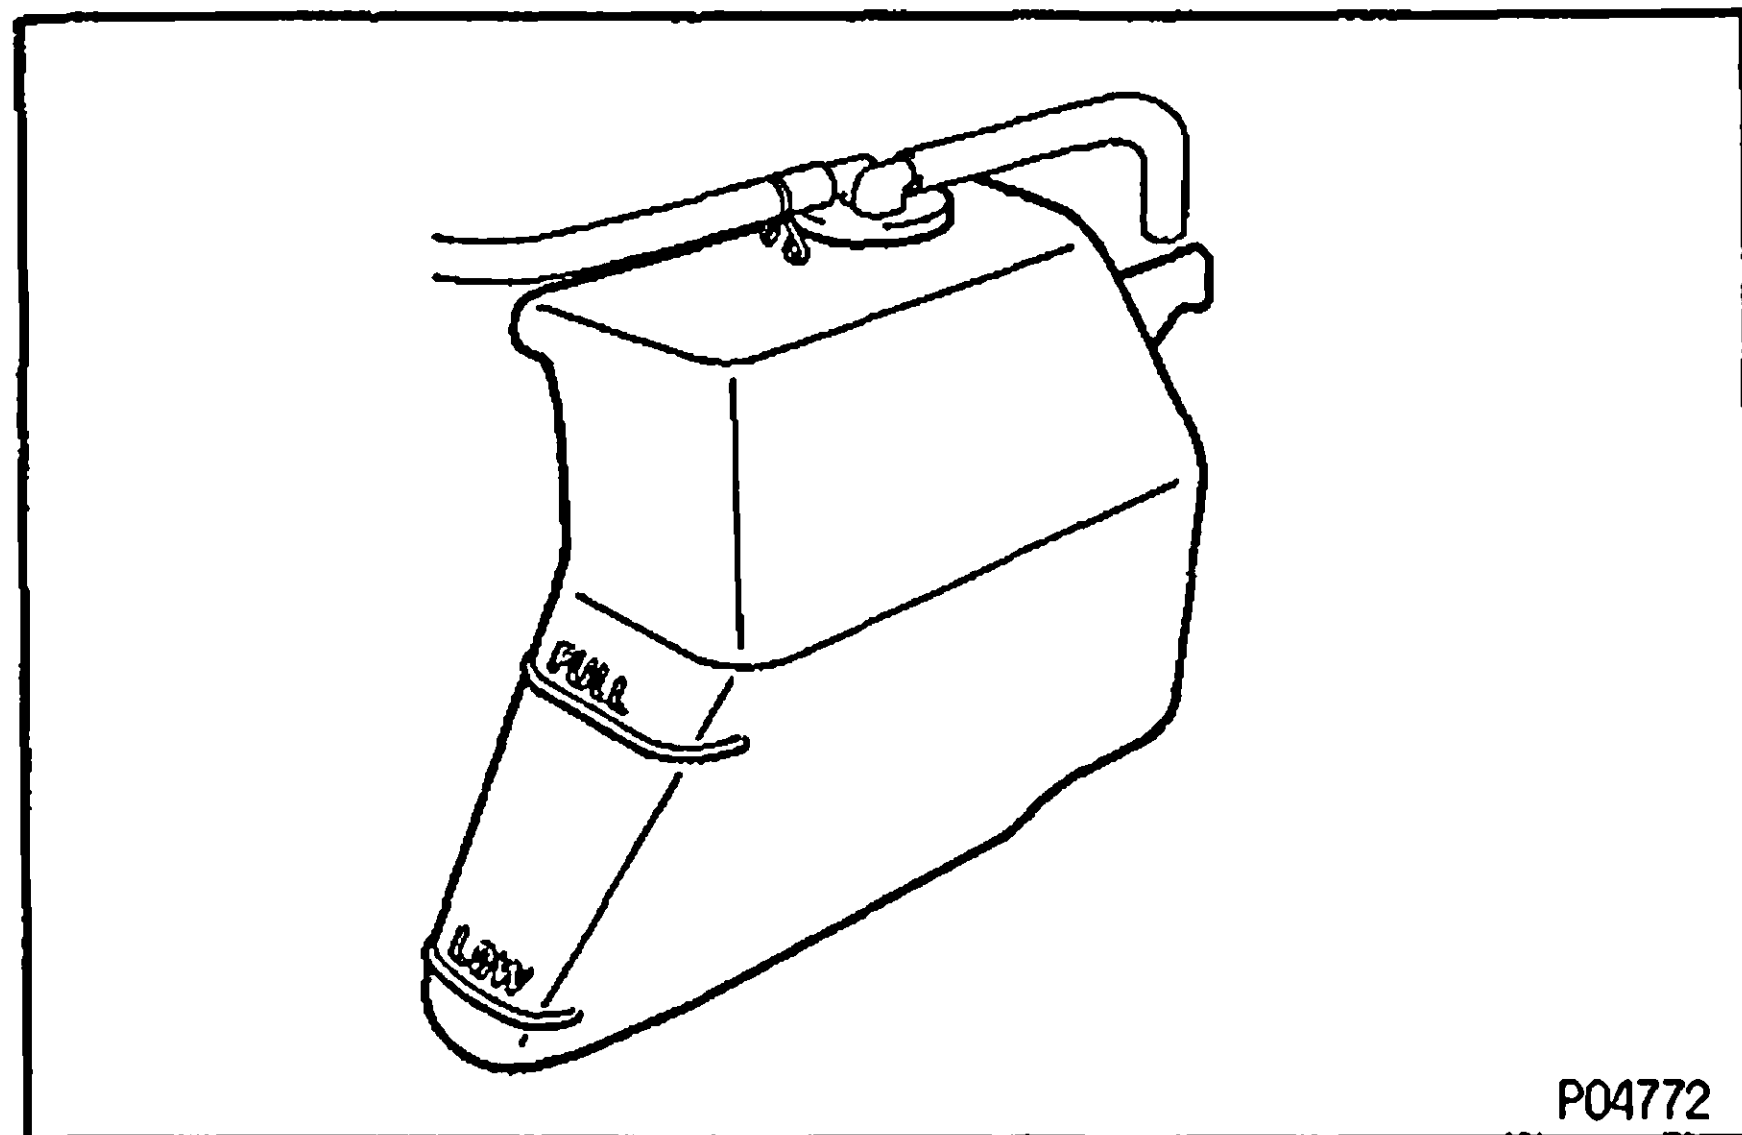


COOLANT CHECK AND REPLACEMENT

1. CHECK ENGINE COOLANT LEVEL AT RESERVOIR TANK ^{EG08W-02}

The coolant level should be between the "LOW" and "FULL" lines.

If low, check for leaks and add coolant up to the "FULL" line.


EG

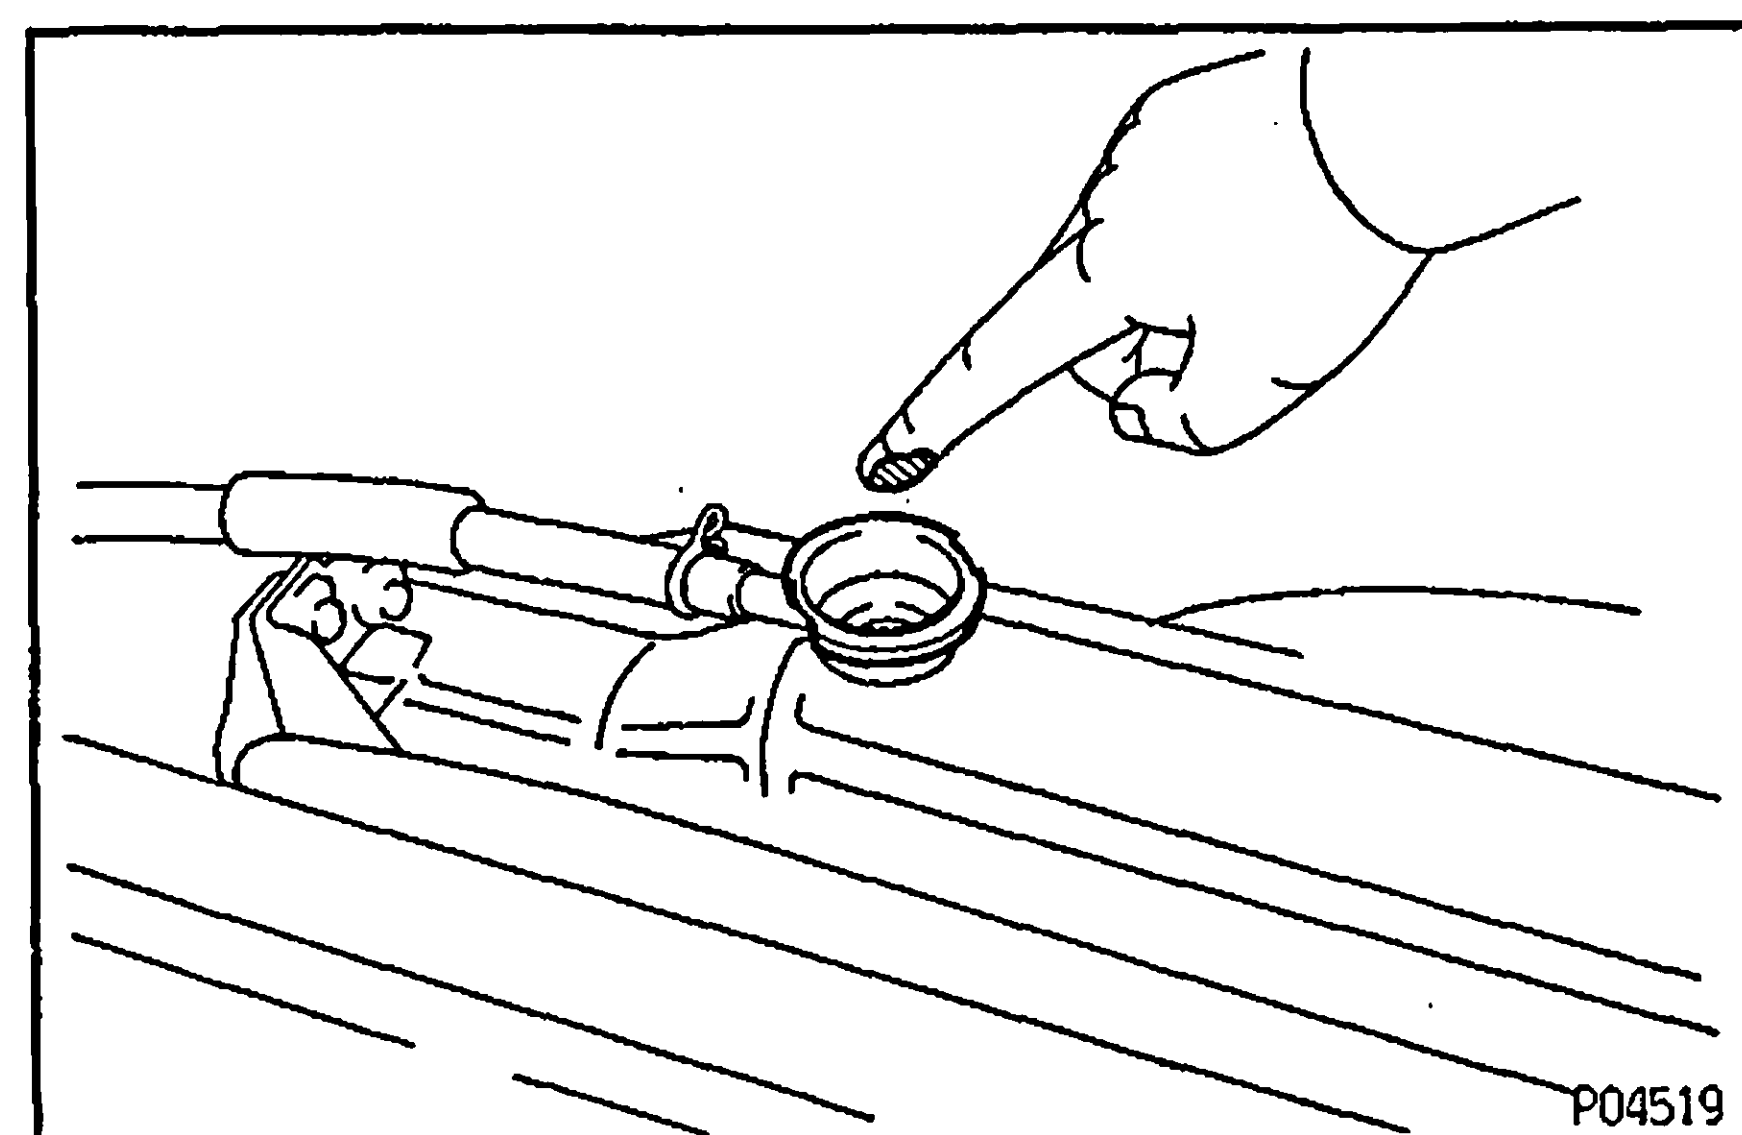

2. CHECK ENGINE COOLANT QUALITY

There should not be any excessive deposits of rust or scales around the radiator cap or radiator filler hole, and the coolant should be free from oil.

If excessively dirty, replace the coolant.

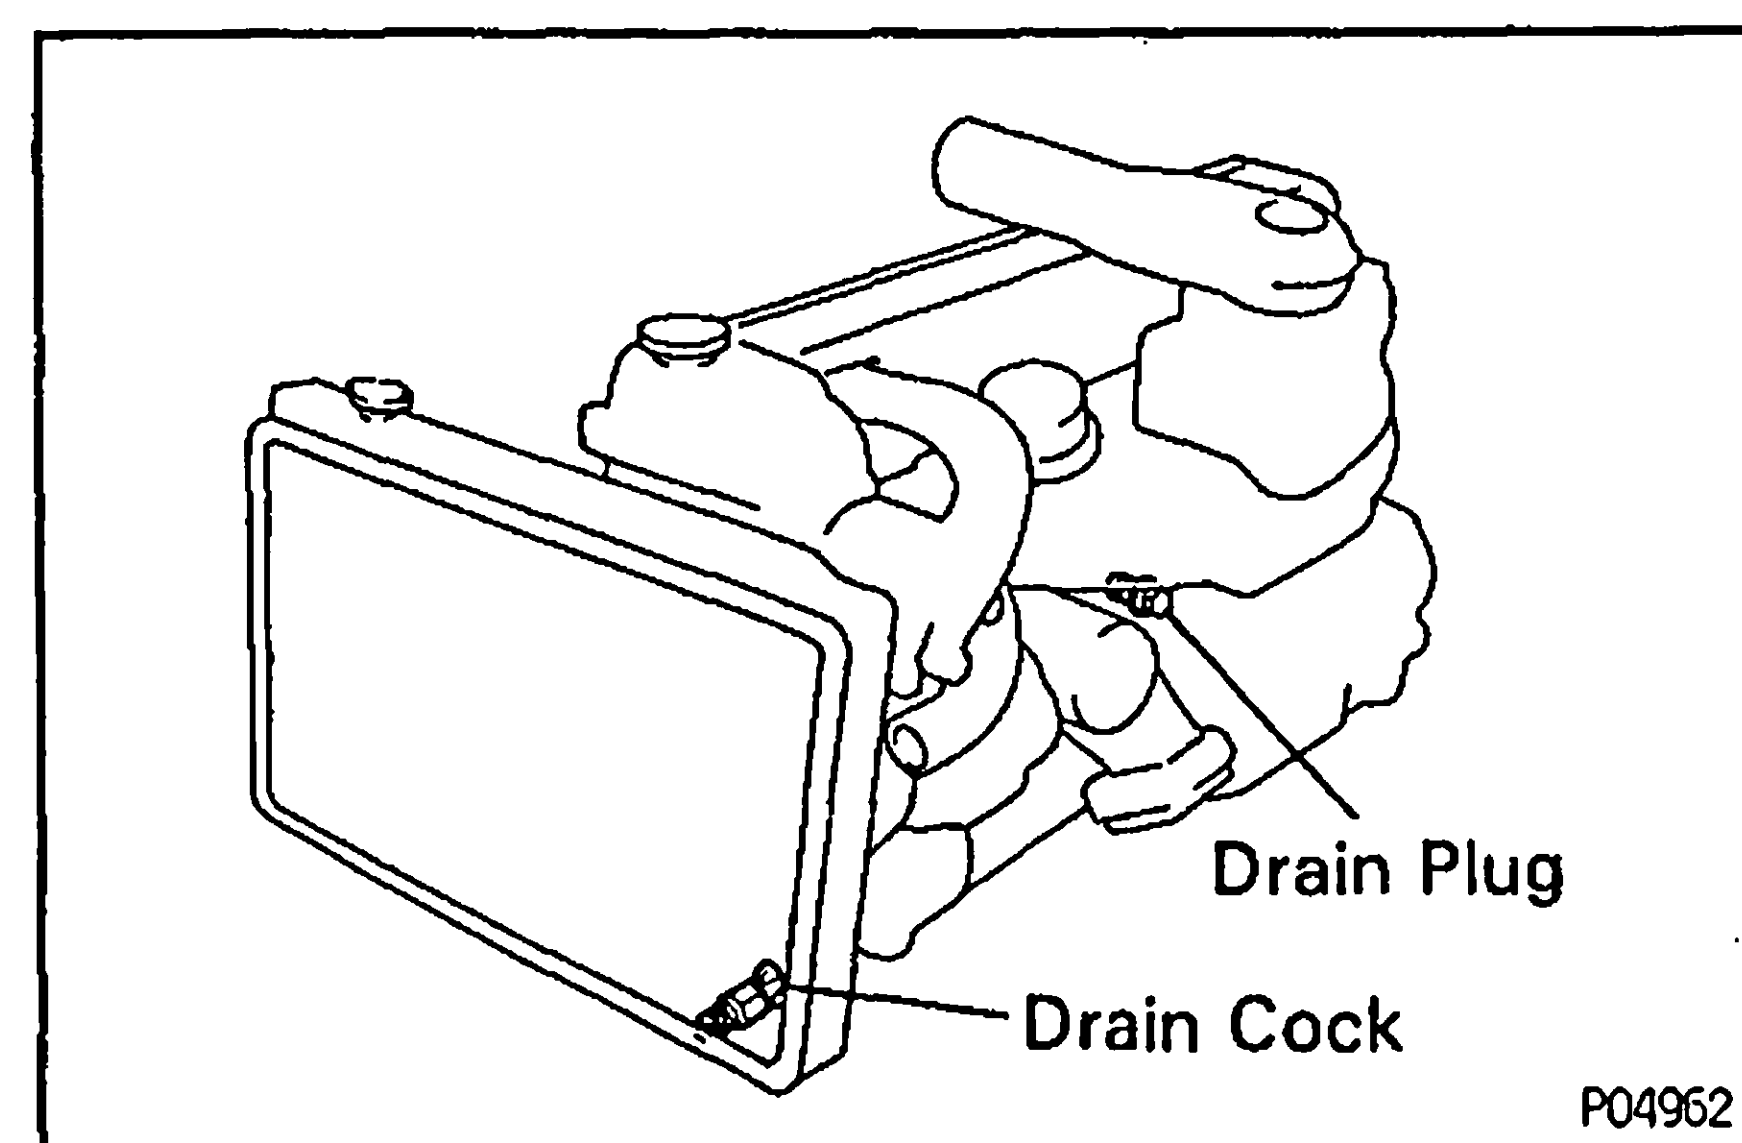

3. REPLACE ENGINE COOLANT

- (a) Remove the radiator cap.

CAUTION: To avoid the danger of being burned, do not remove it while the engine and radiator are still hot, as fluid and steam can be blown out under pressure.

- (b) Drain the coolant from the radiator drain cock and engine drain plug. (Engine drain plug at the left of engine block.)

- (c) Close the drain cock and plug.

Torque (Engine drain plug):

29 N·m (300 kgf·cm, 22 ft·lbf)

- (d) Slowly fill the system with coolant.

- Use a good brand of ethylene—glycol base coolant and mix it according to the manufacturer's directions.
- Using coolant which includes more than 50 % ethylene—glycol (but not more than 70 %) is recommended.

NOTICE:

- Do not use a alcohol type coolant.
- The coolant should be mixed with demineralized water or distilled water.

Capacity (w/ Heater):


14.5 liters (15.3 US qts, 12.8 Imp. qts)

- (e) Reinstall the radiator cap.
- (f) Warm up the engine and check for leaks.
- (g) Recheck the coolant level and refill as necessary.

WATER PUMP COMPONENTS

EG06X-02

EG

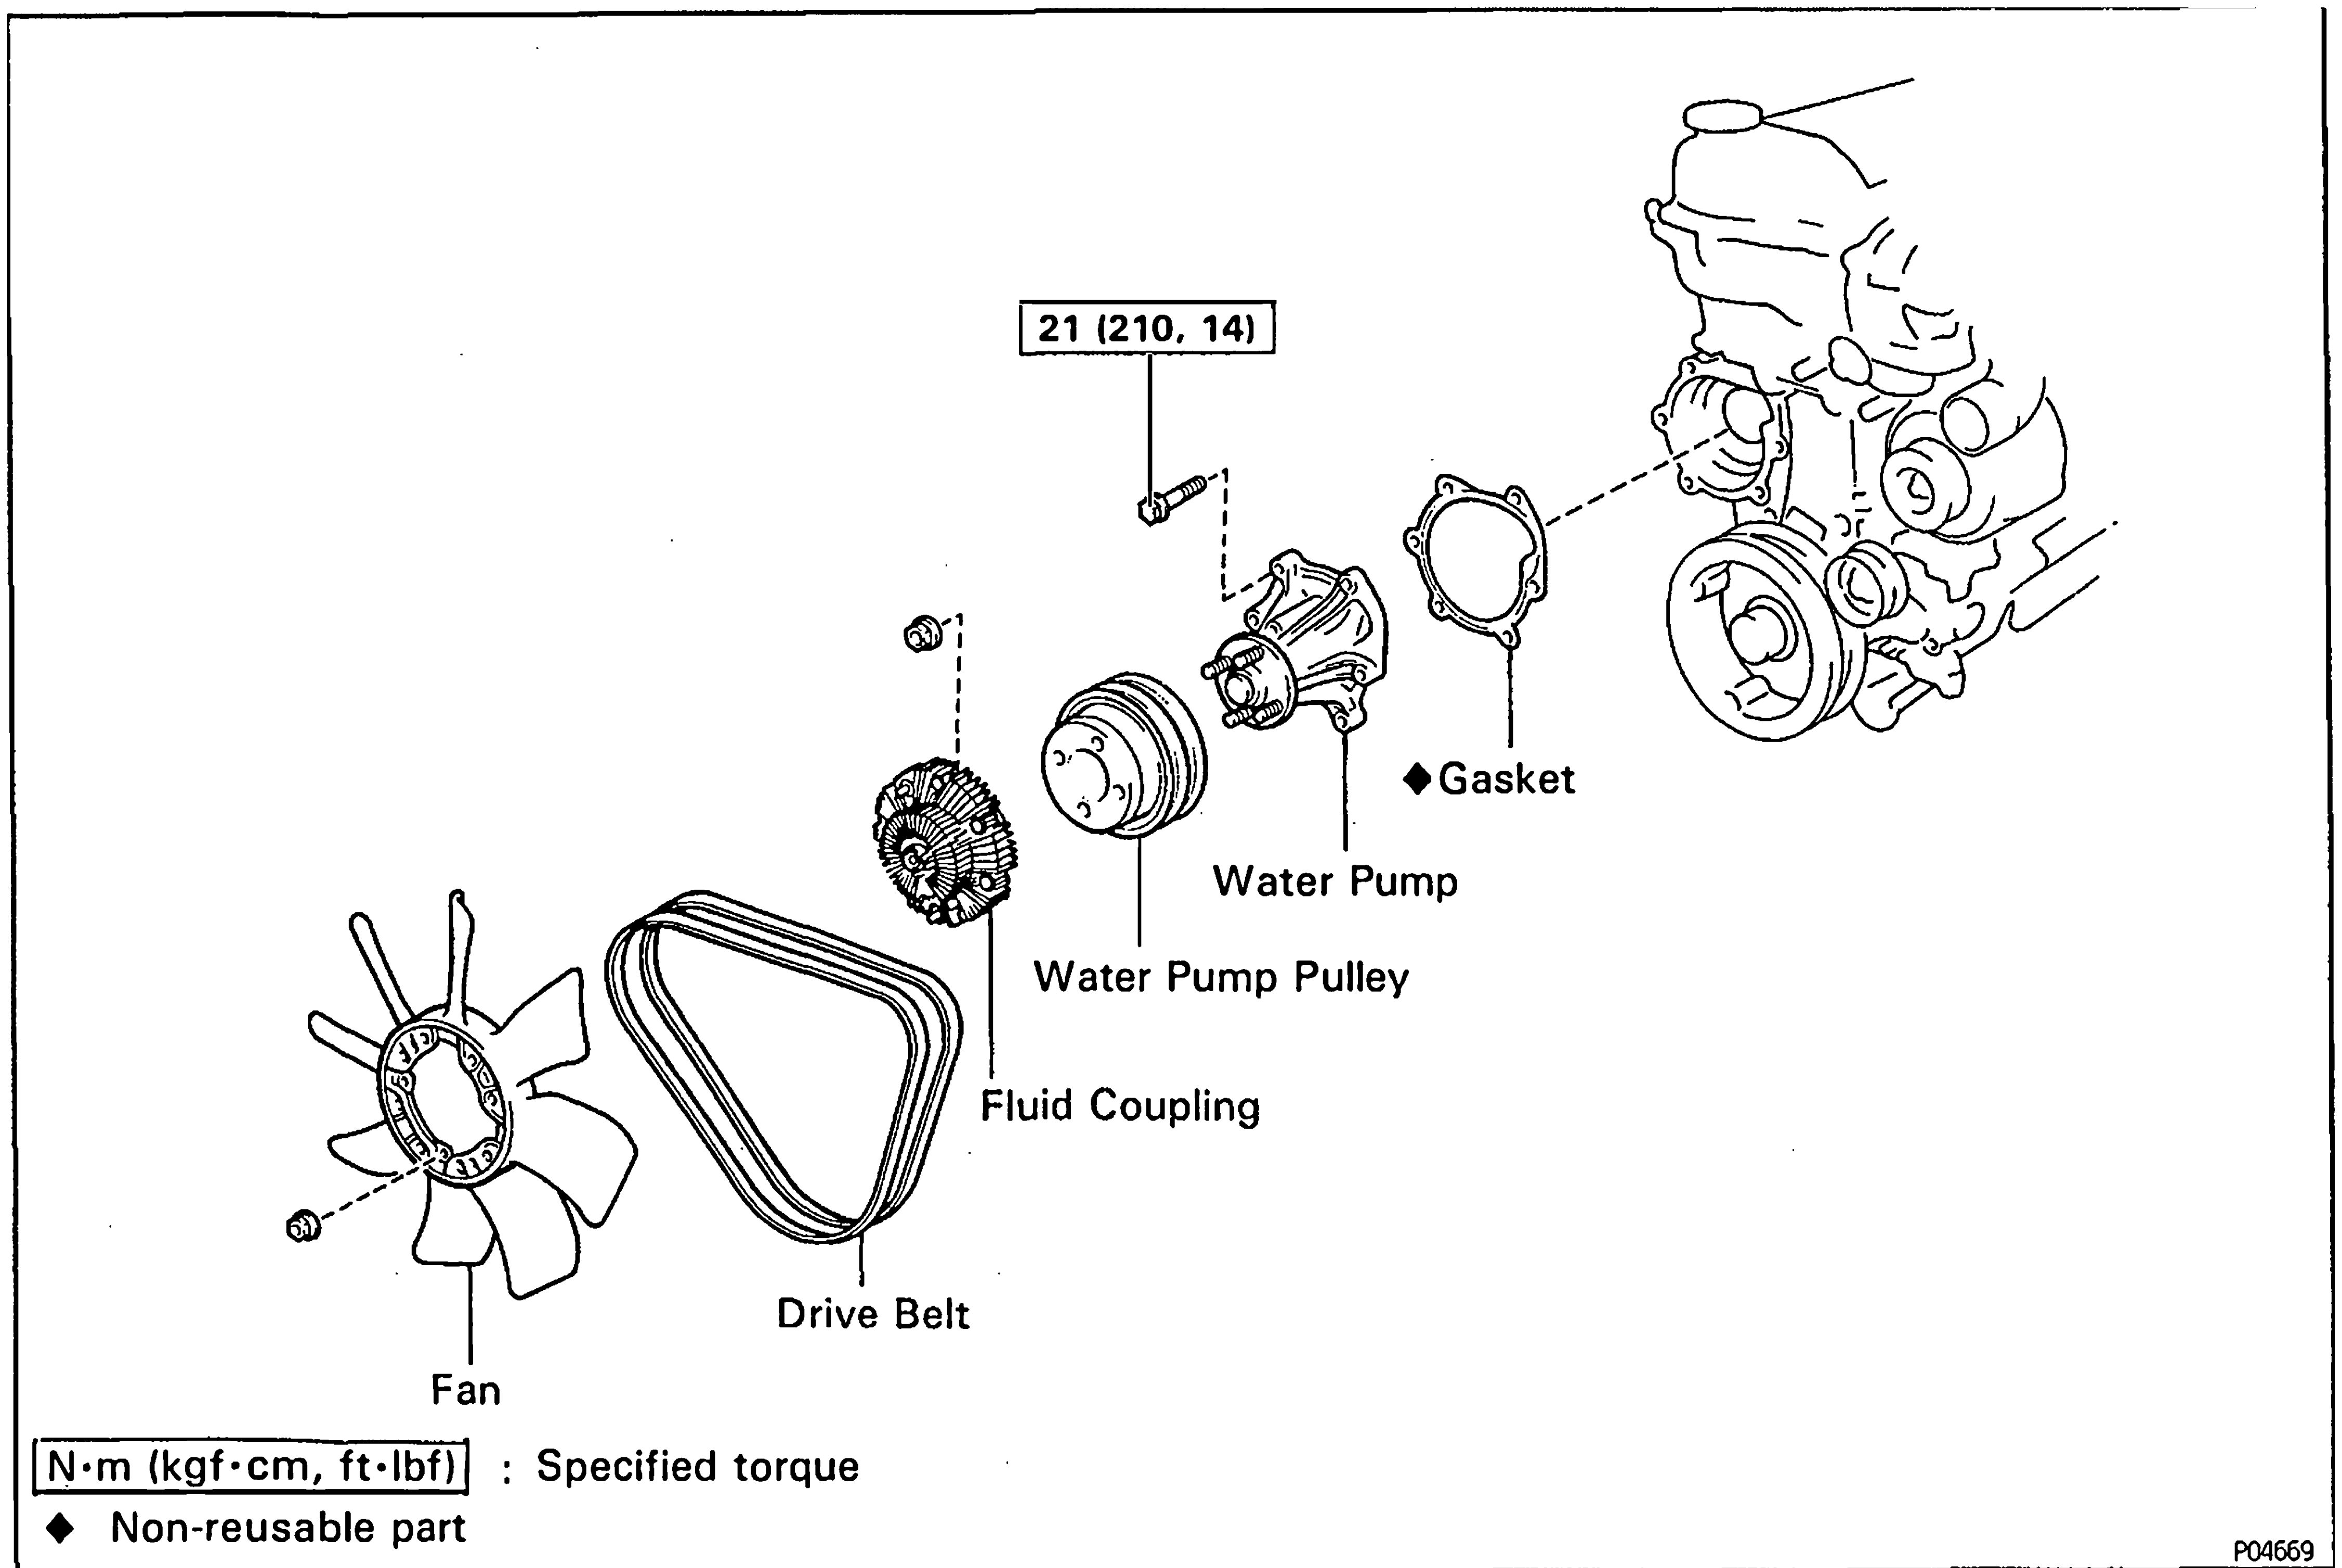



P04669


EG0NF-01

WATER PUMP REMOVAL

1. DRAIN ENGINE COOLANT
2. REMOVE DRIVE BELTS, FAN WITH FLUID COUPLING AND WATER PUMP PULLEY
 - (a) Stretch the belts and loosen the fan pulley mounting nuts.
 - (b) Loosen the pivot and adjusting bolts of the alternator, and remove the drive belts.
 - (c) Remove the four nuts, fan with fluid coupling and water pump pulley.
3. REMOVE WATER PUMP

Remove the four bolts, two nuts, water pump and gasket.

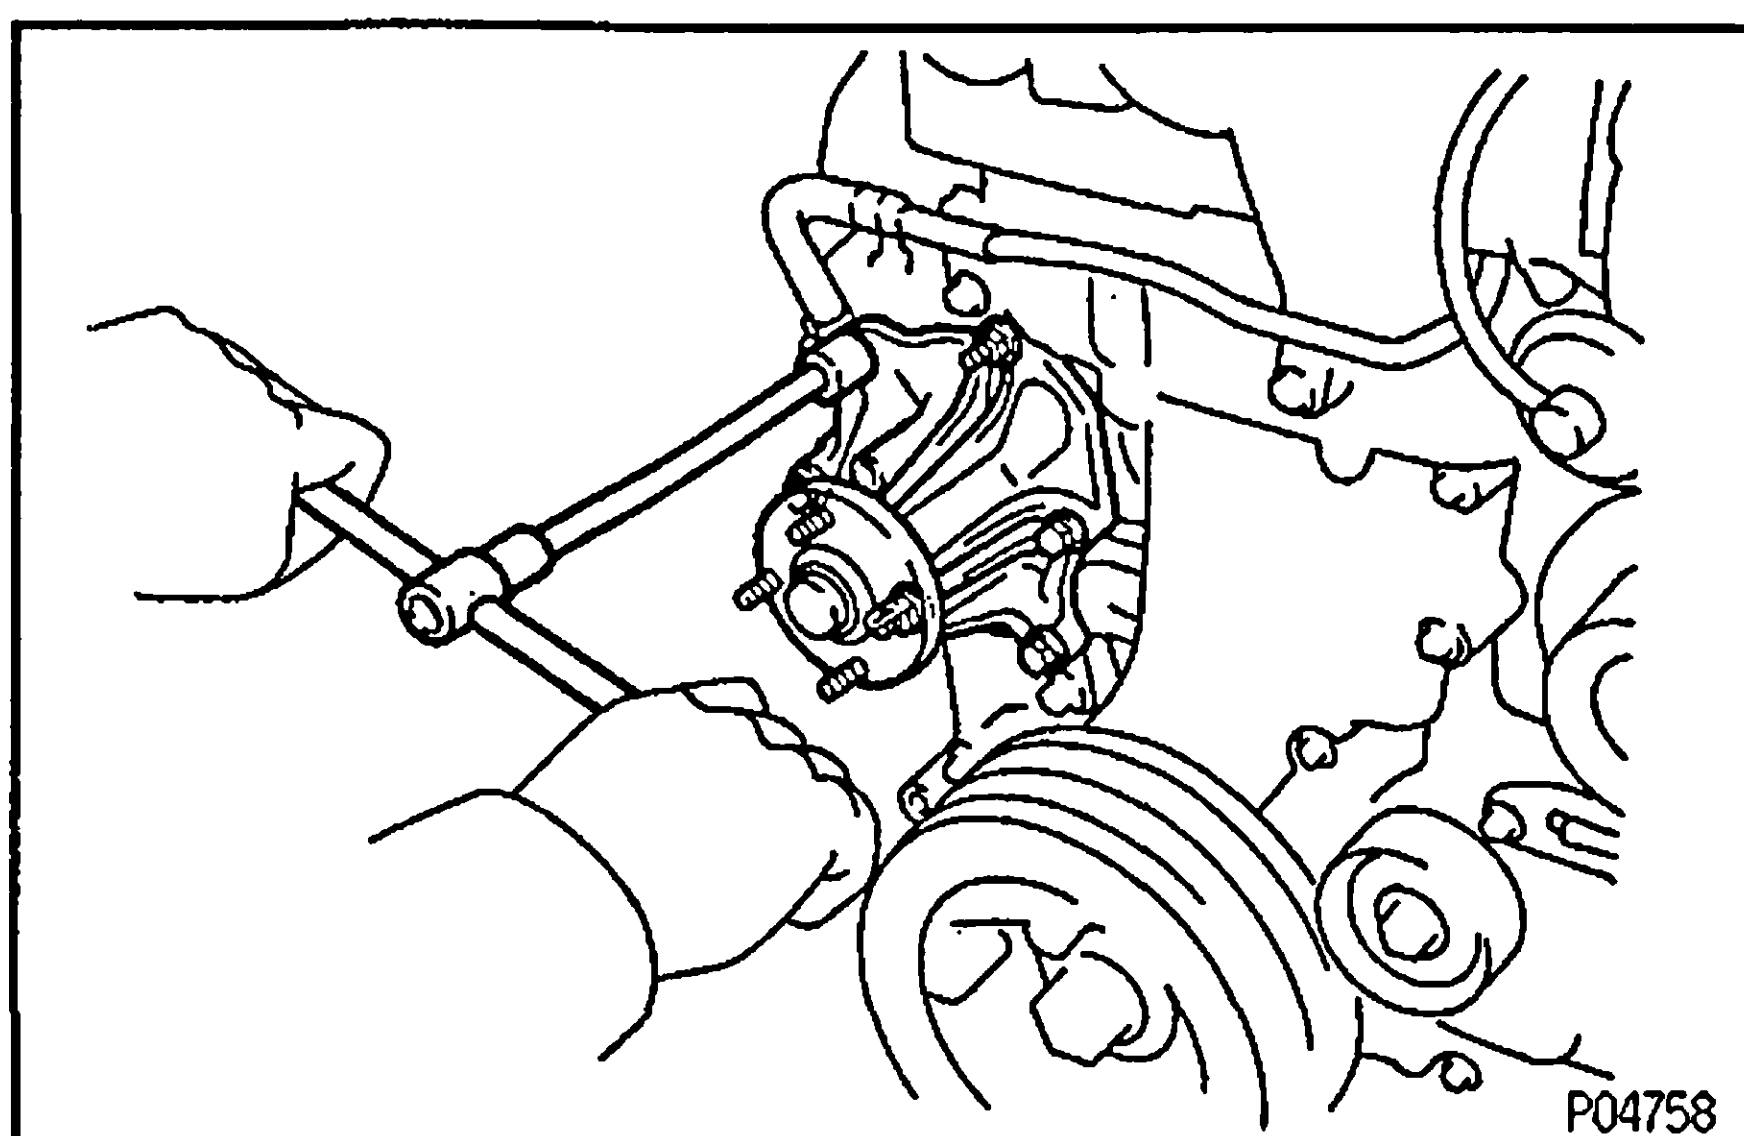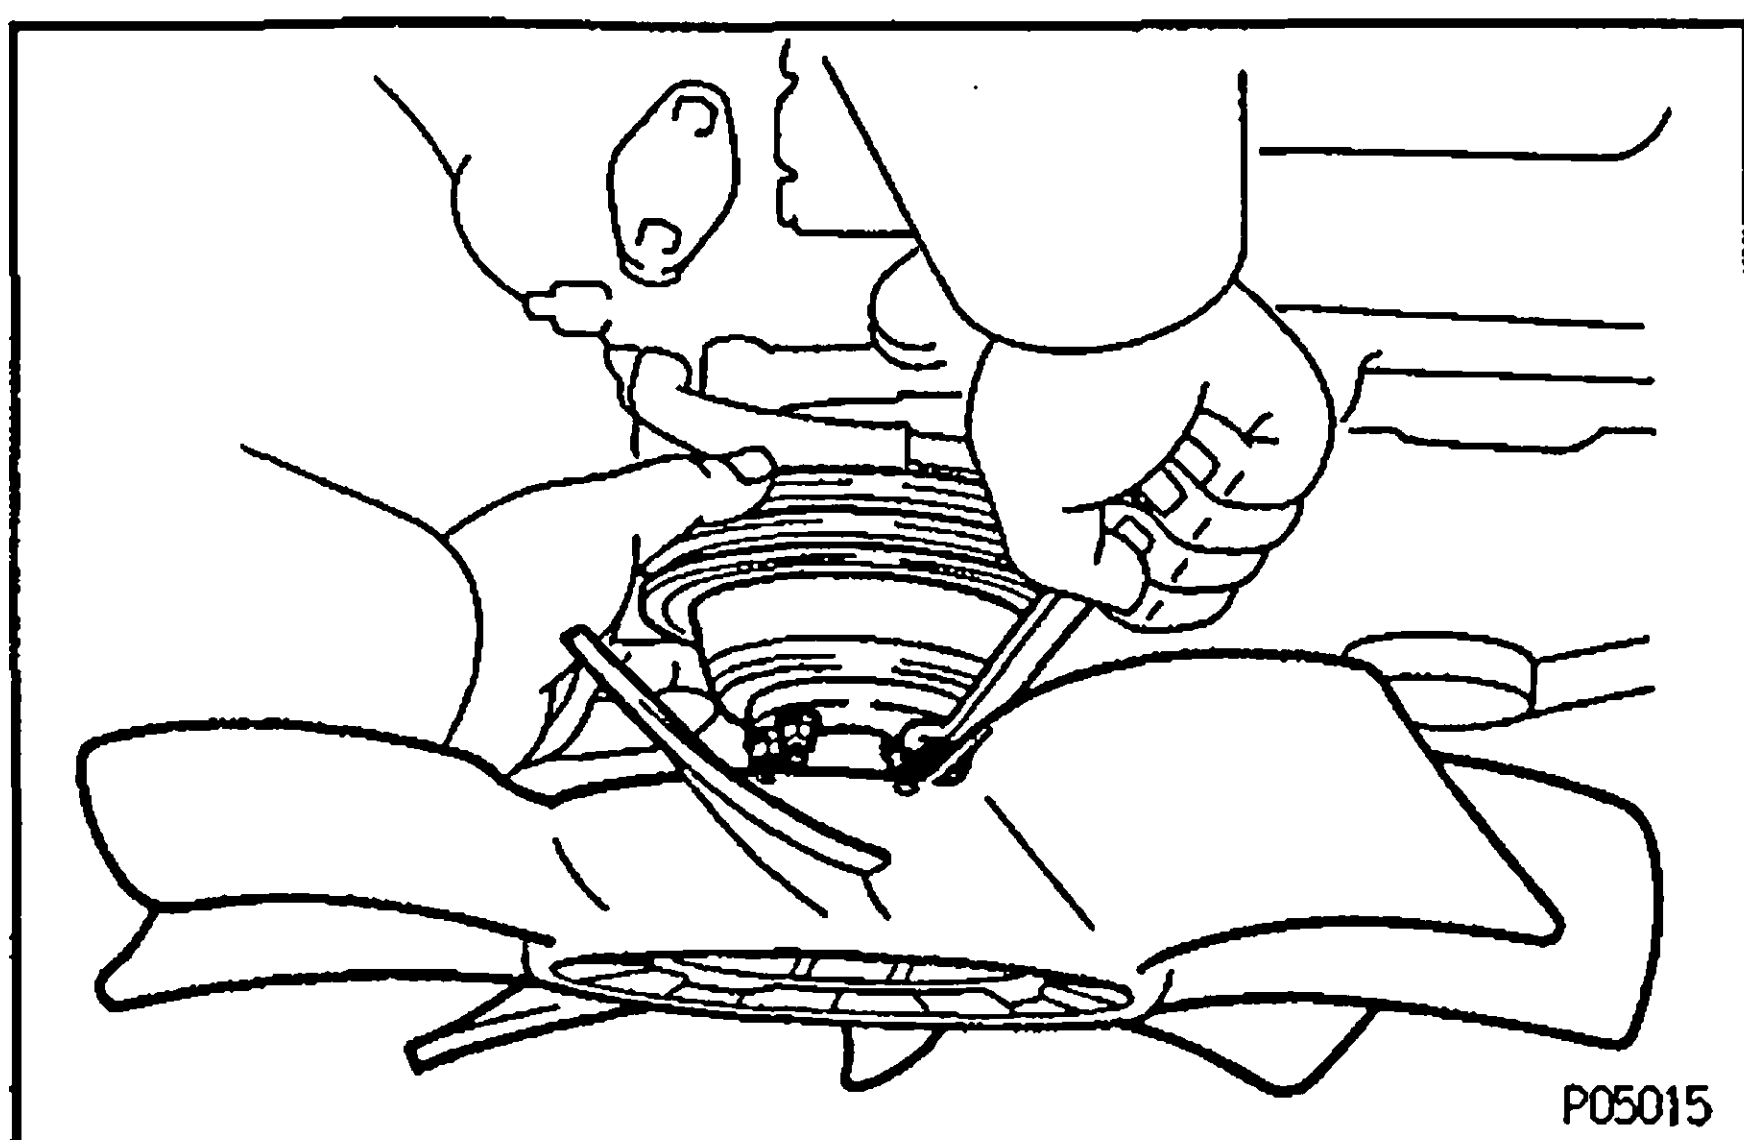

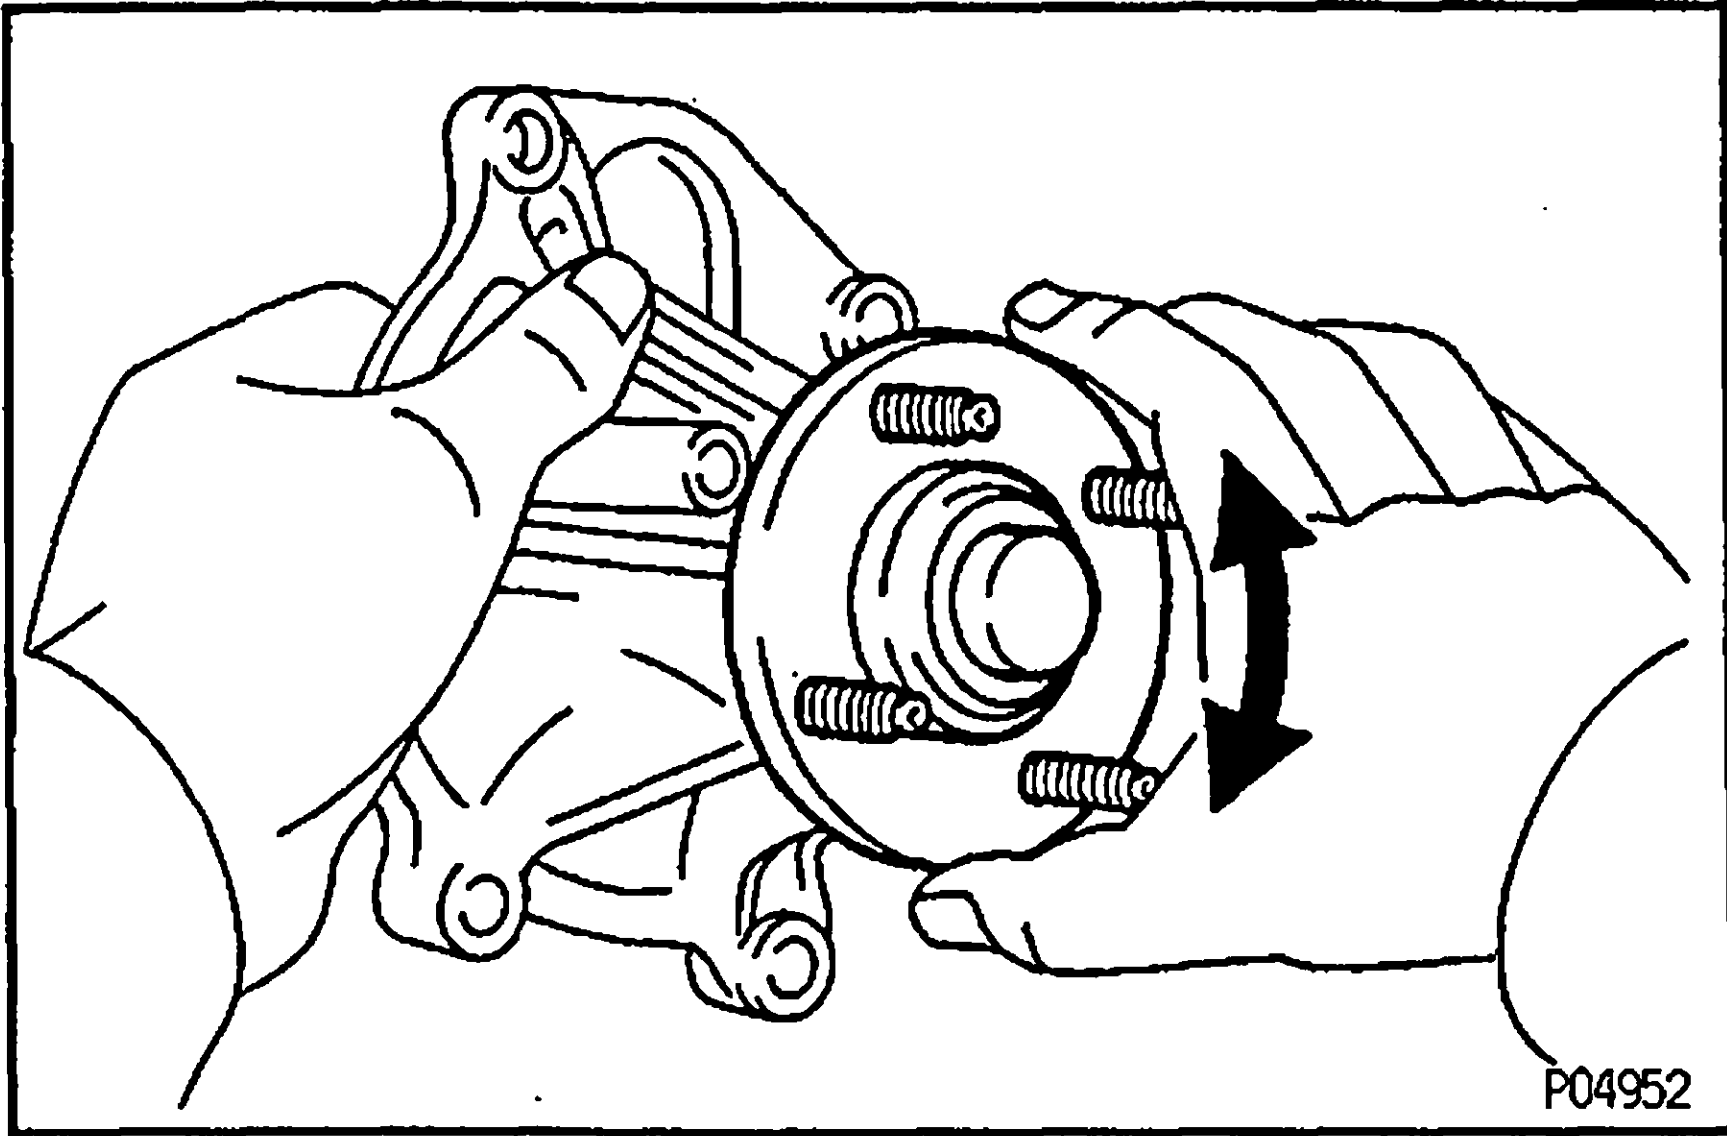


INSPECTION OF WATER PUMP COMPONENTS

1. INSPECT WATER PUMP

Turn the pulley seat and check that the water pump bearing is not rough or noisy.

If necessary, replace the water pump.


EG

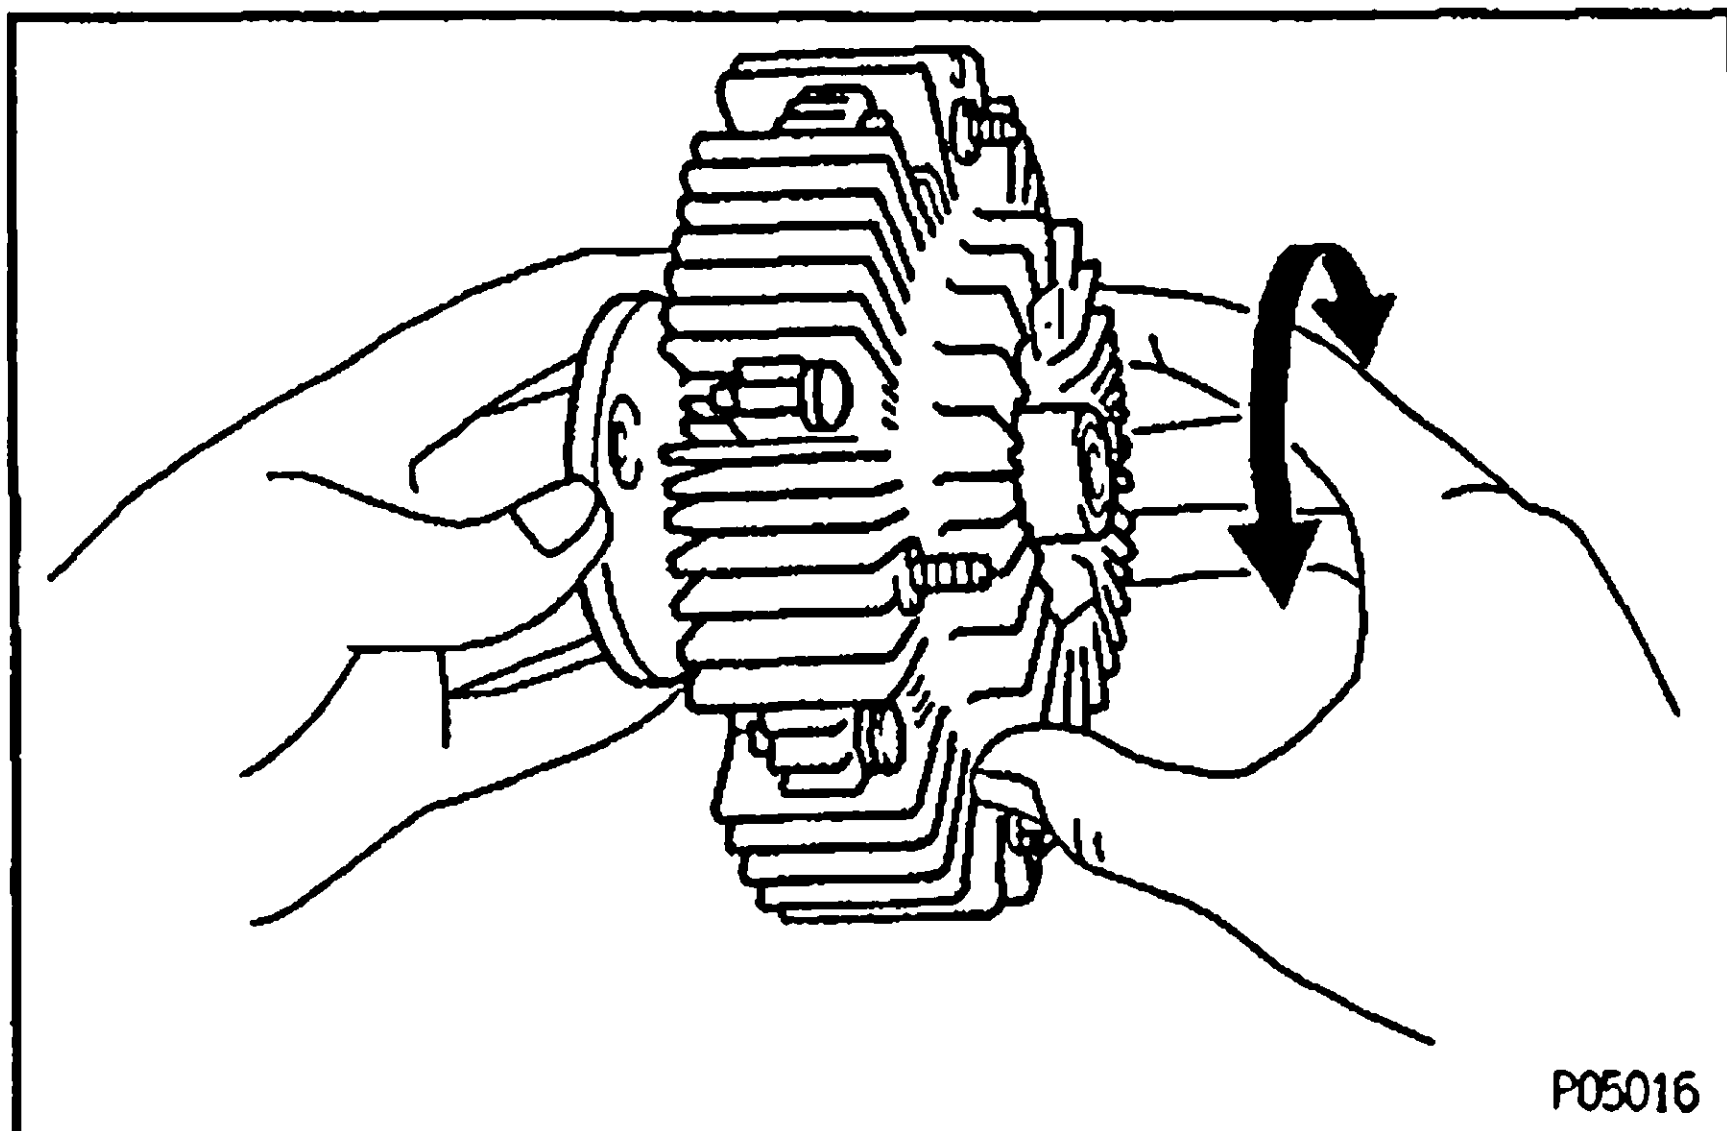

2. INSPECT FLUID COUPLING

Check the fluid coupling for damage and silicon oil leakage.

If necessary, replace the fluid coupling.

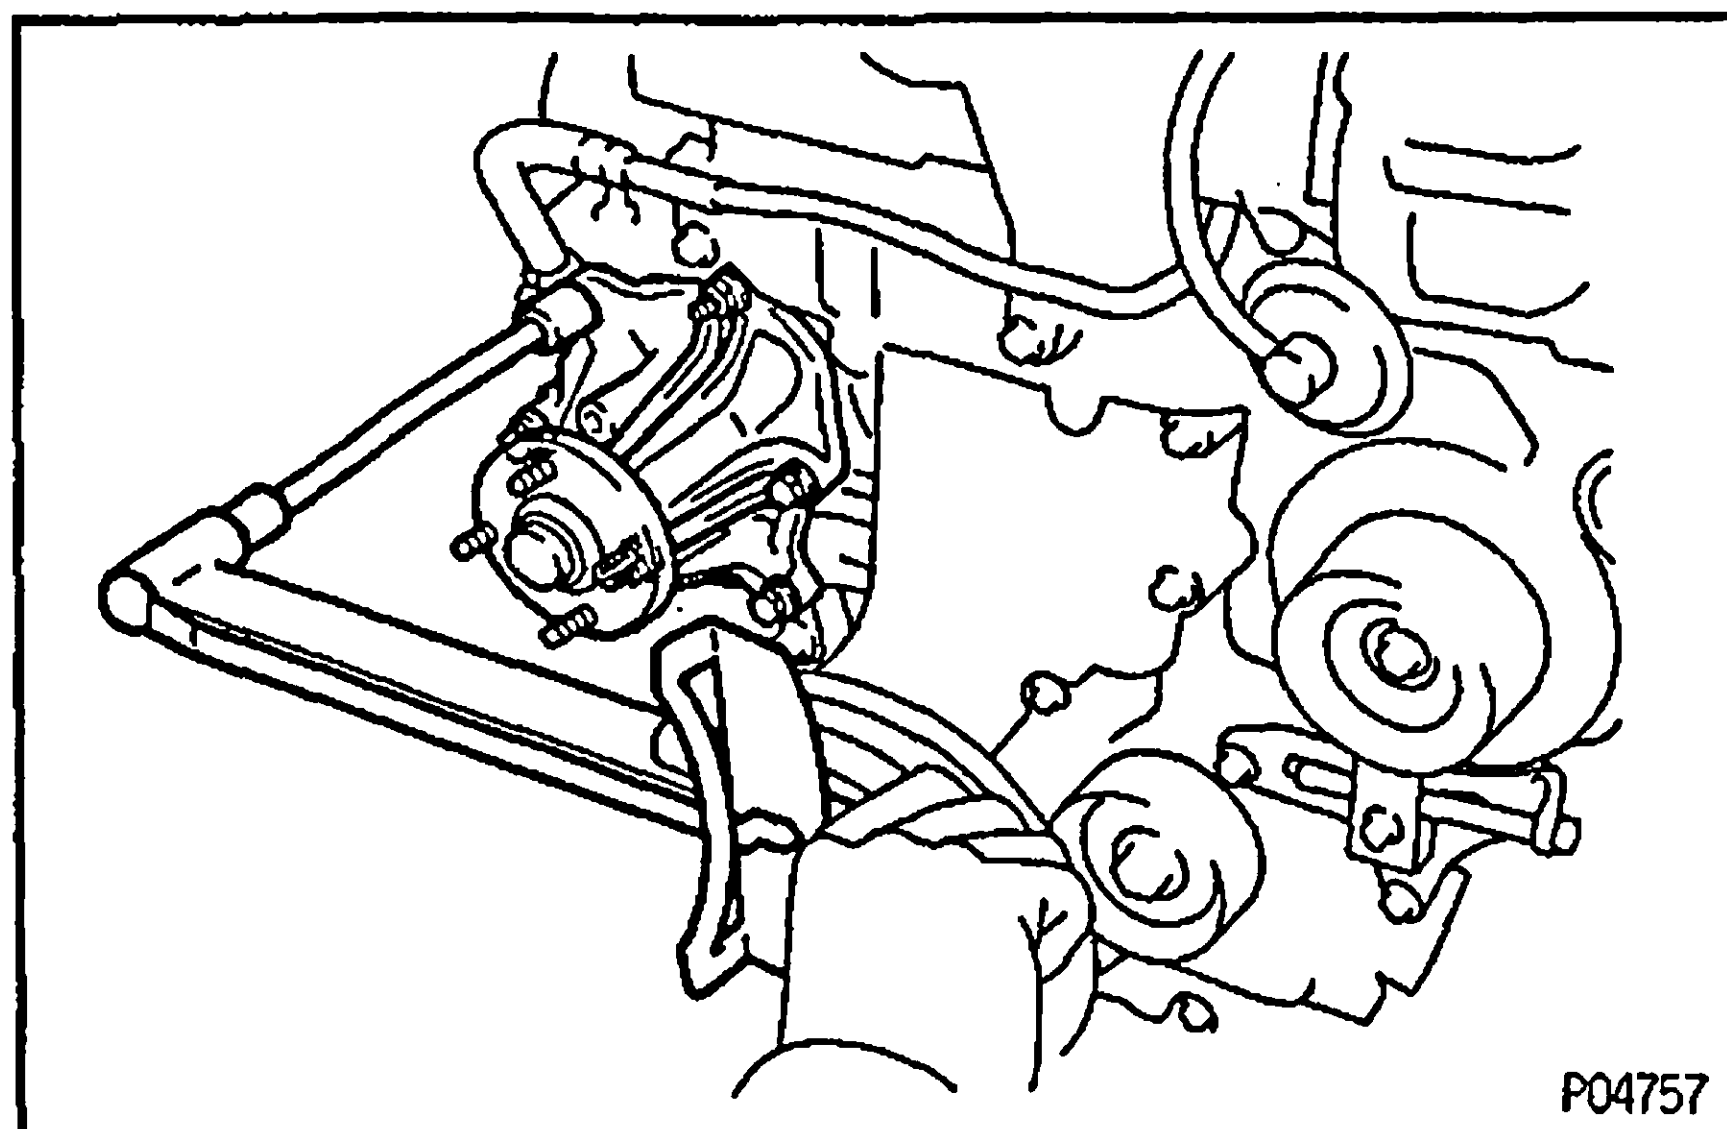


WATER PUMP INSTALLATION

(See page EG-178)

1. INSTALL WATER PUMP

Install a new gasket and water pump with the four bolts and two nuts.

Torque: 21 N·m (210 kgf·cm, 14 ft·lbf)

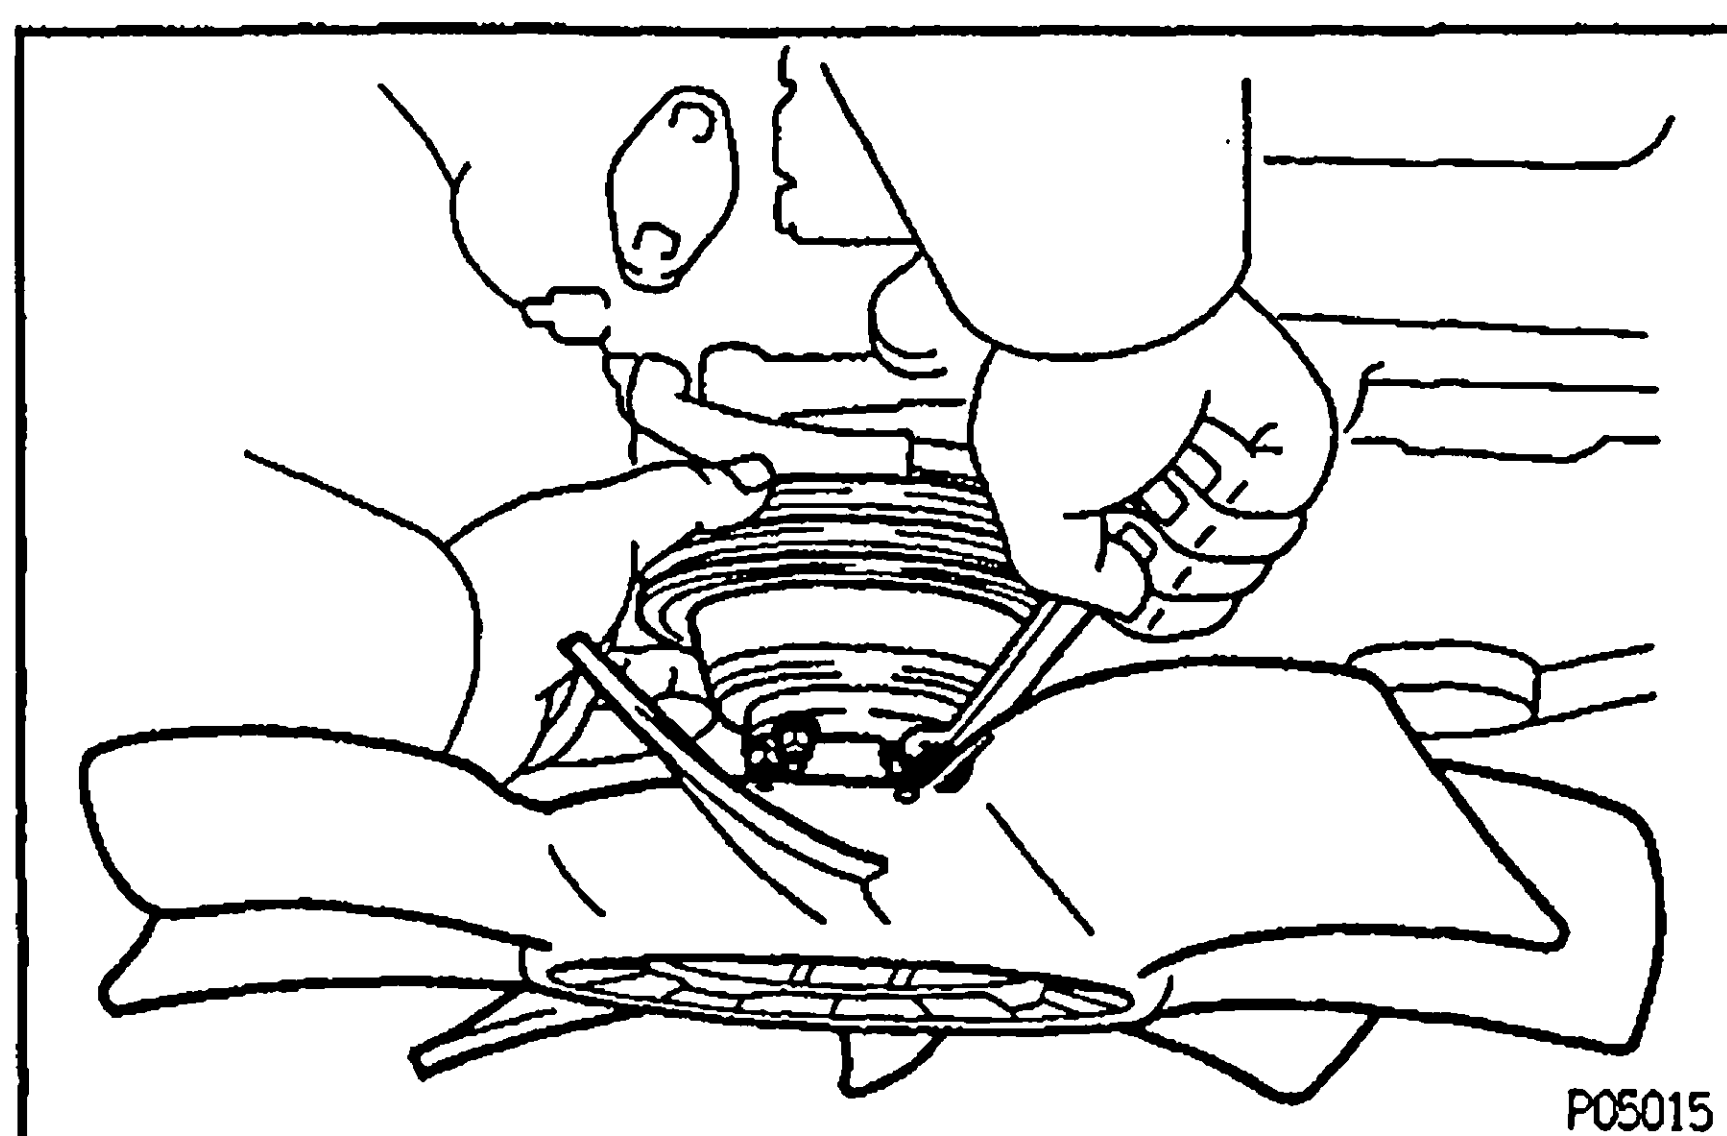

2. INSTALL WATER PUMP PULLEY, FAN WITH FLUID COUPLING AND DRIVE BELTS

- (a) Install the water pump pulley and fan with fluid coupling with the four nuts.
- (b) Place the drive belts on to each pulley.
- (c) Stretch the belts tight and tighten the four nuts.
- (d) Adjust the drive belts.

3. FILL WITH ENGINE COOLANT

4. START ENGINE AND CHECK FOR LEAKS


THERMOSTAT THERMOSTAT REMOVAL

EGONJ-01


HINT: Removal of the thermostat would have an adverse effect, causing a lowering of cooling efficiency.

Do not remove the thermostat, even if the engine tends to overheat.

EG

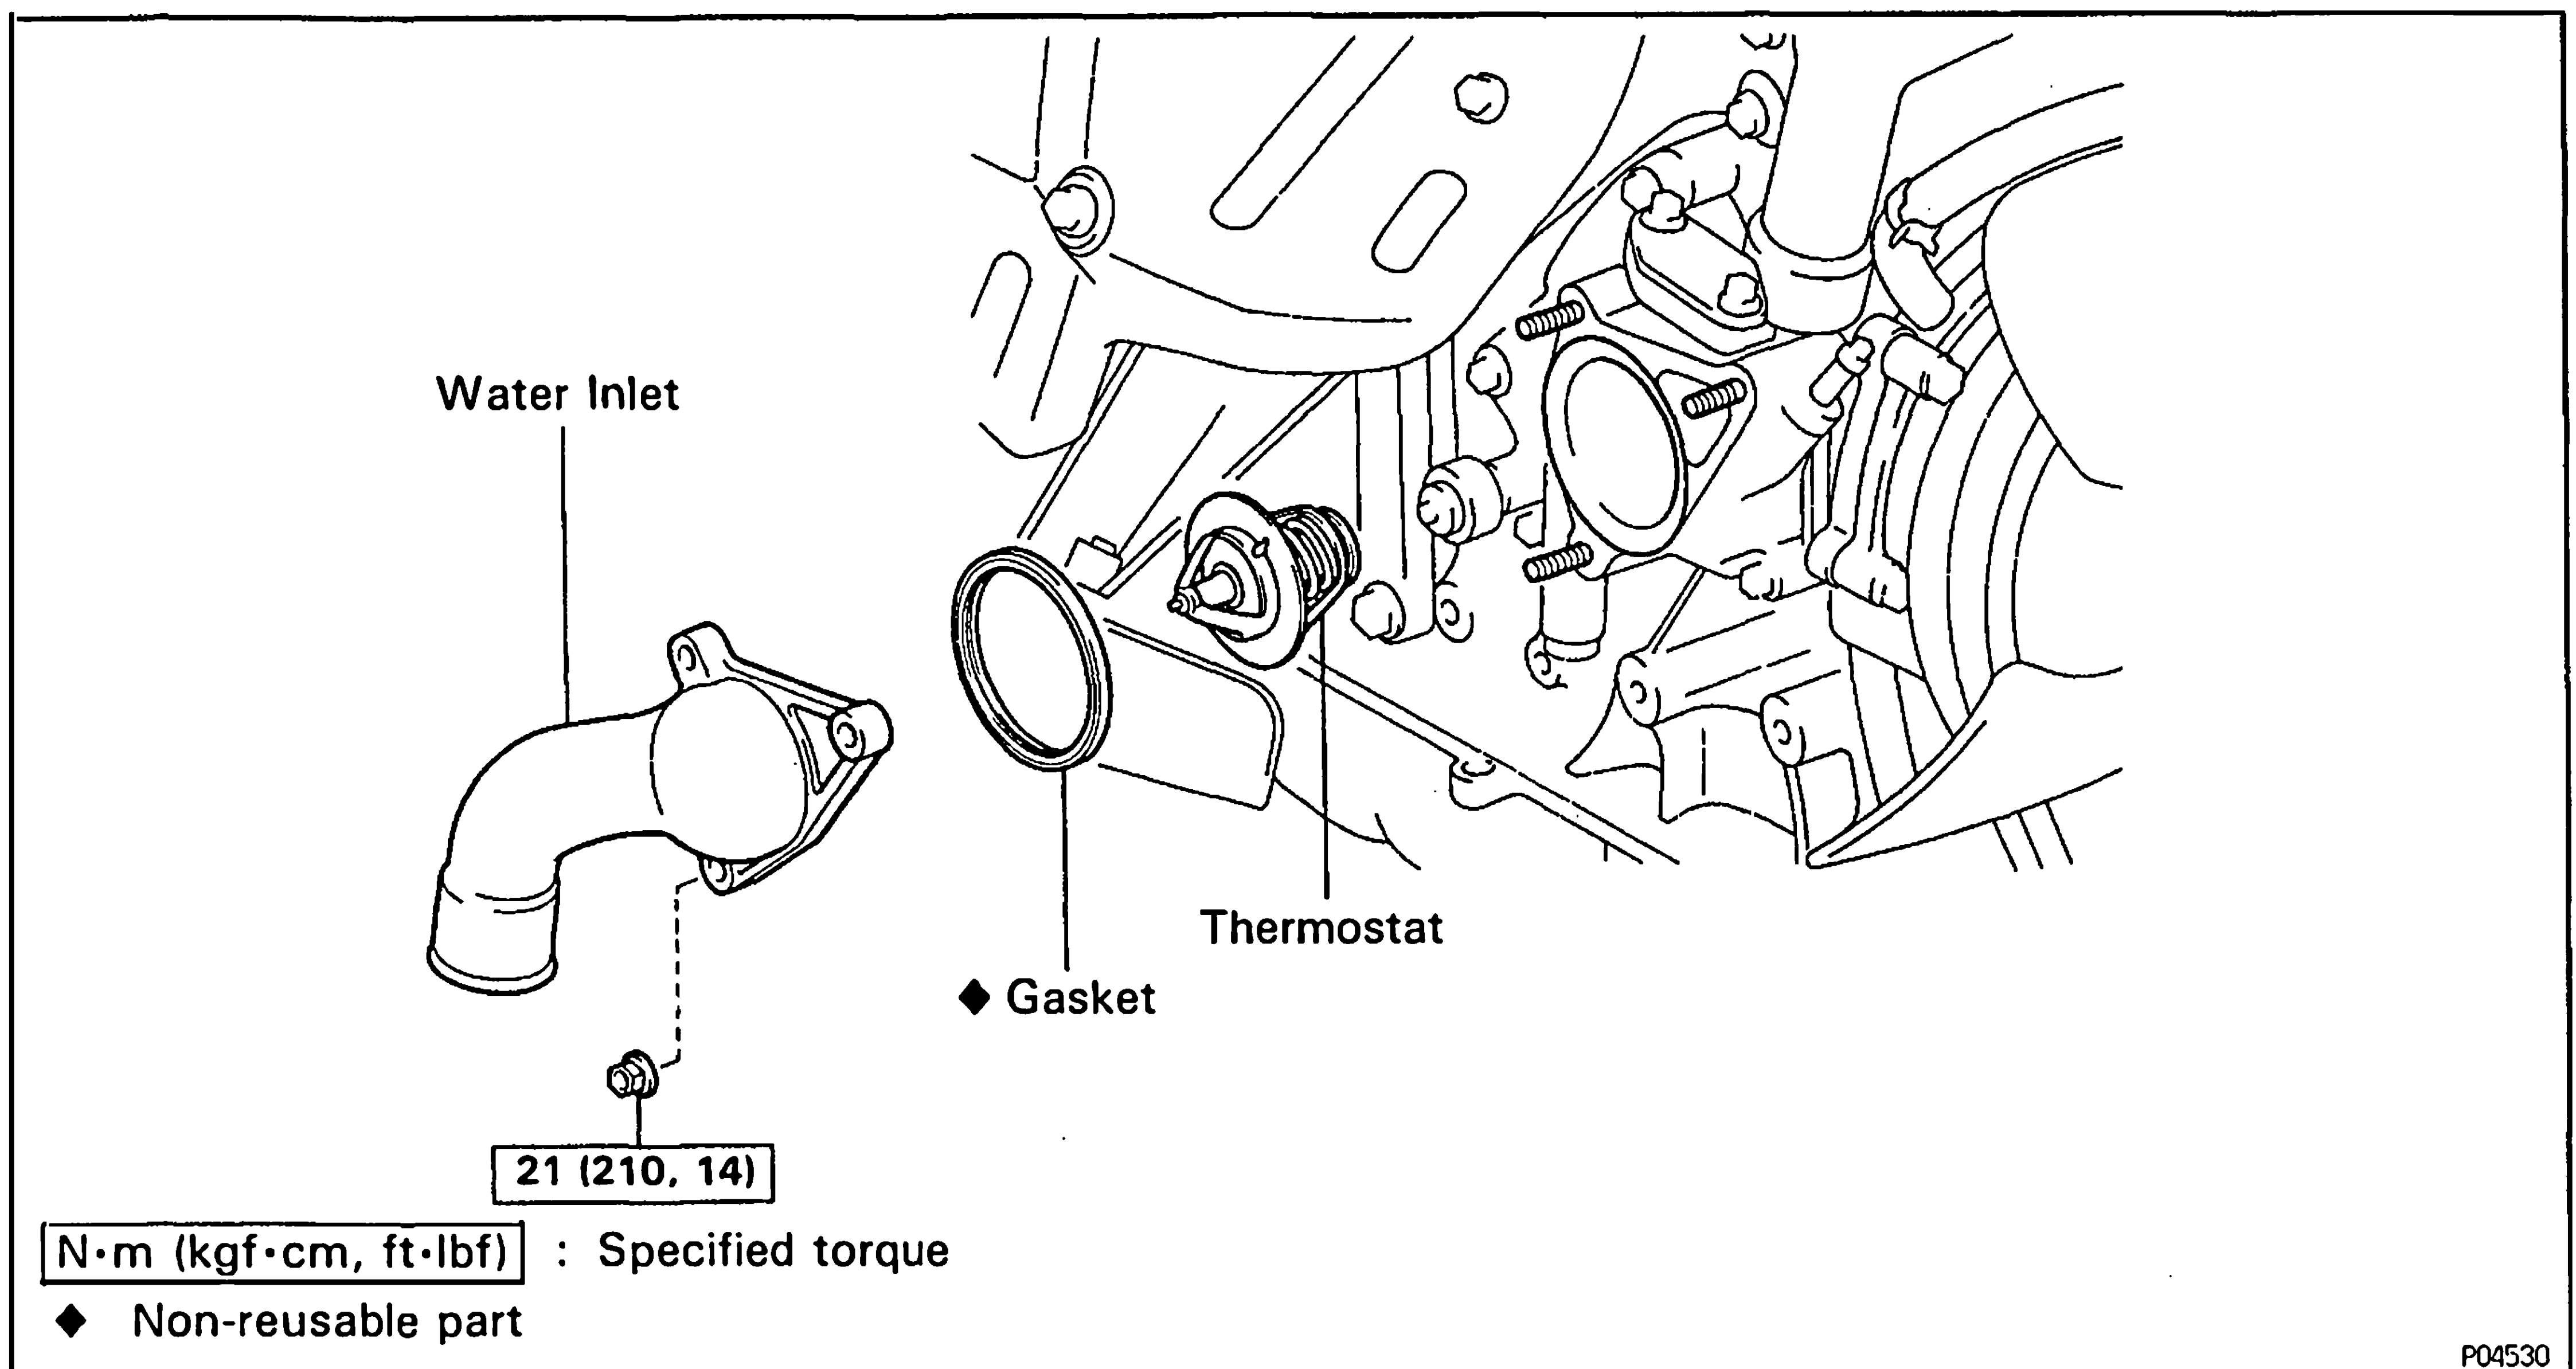

1. DRAIN ENGINE COOLANT

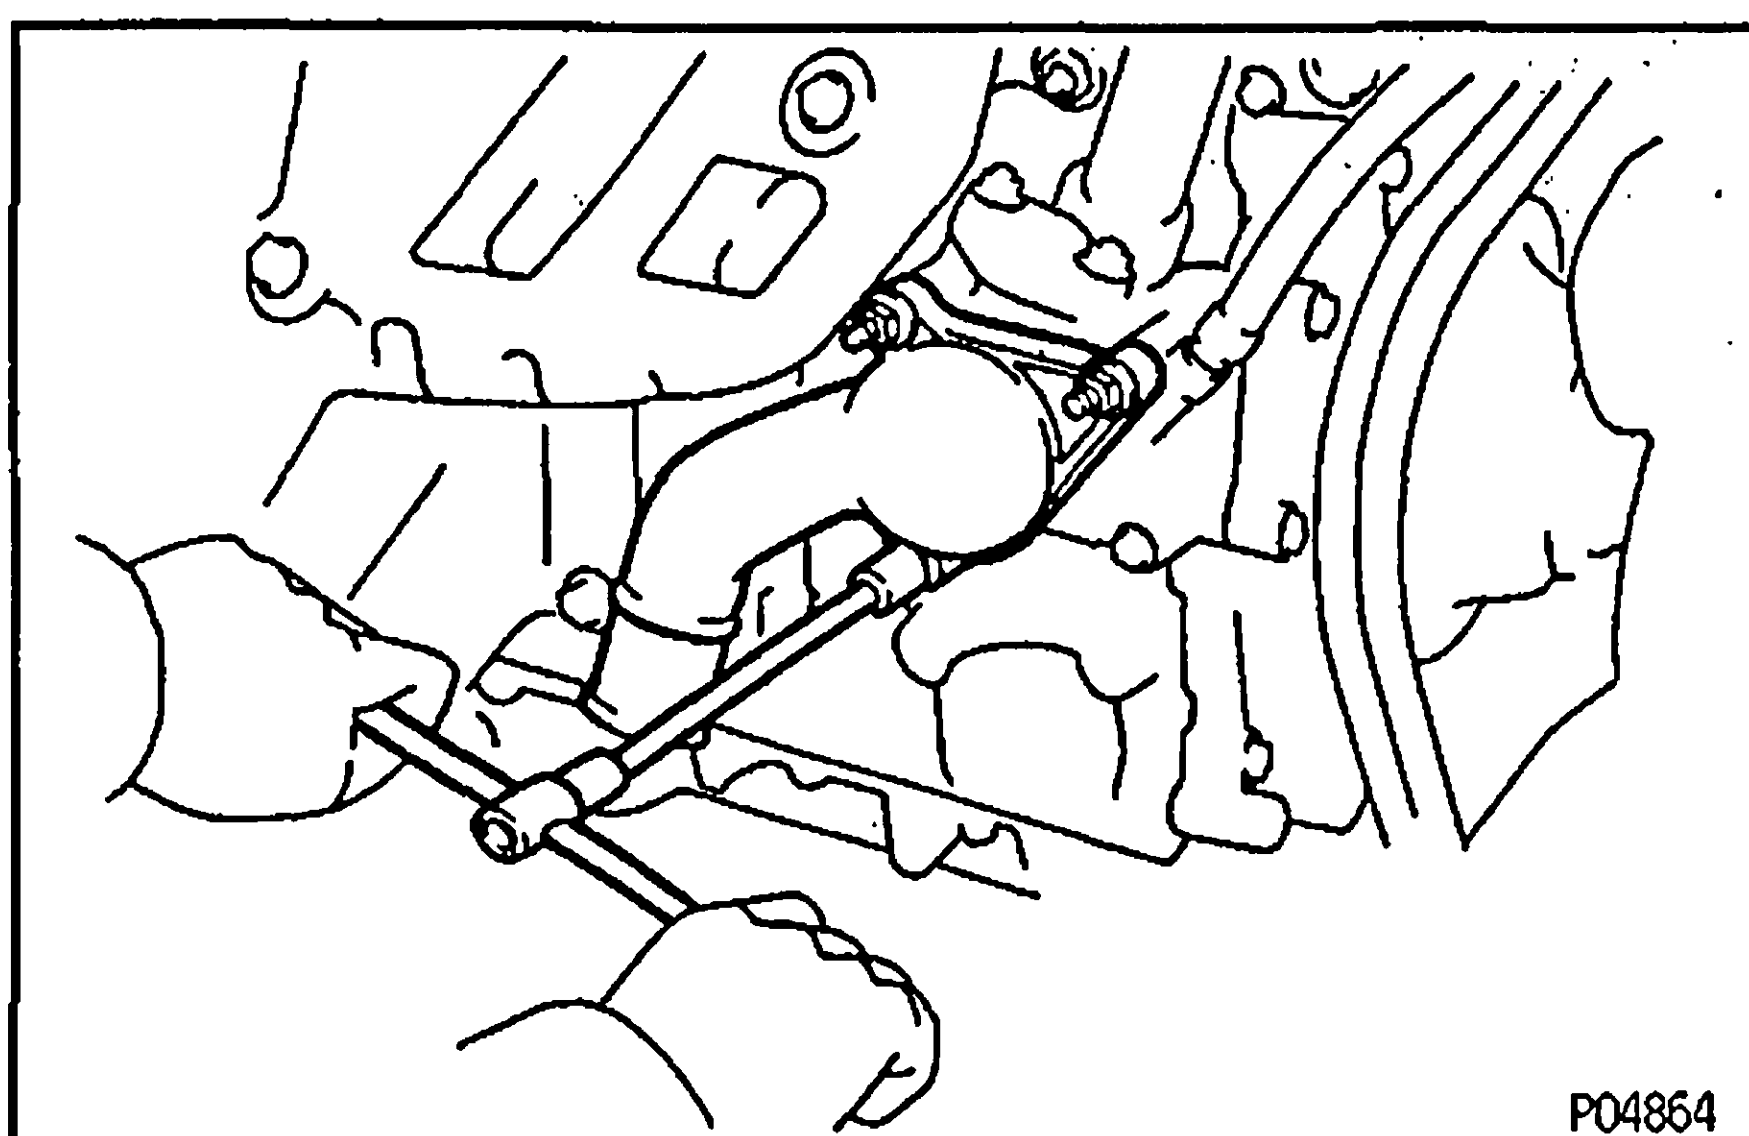

2. REMOVE WATER INLET AND THERMOSTAT



- Remove the three nuts holding the water inlet to the inlet housing, and disconnect the water inlet from the inlet housing.
- Remove the thermostat.
- Remove the gasket from the thermostat.

THERMOSTAT INSPECTION

INSPECT THERMOSTAT

HINT: The thermostat is numbered with the valve opening temperature.

EG

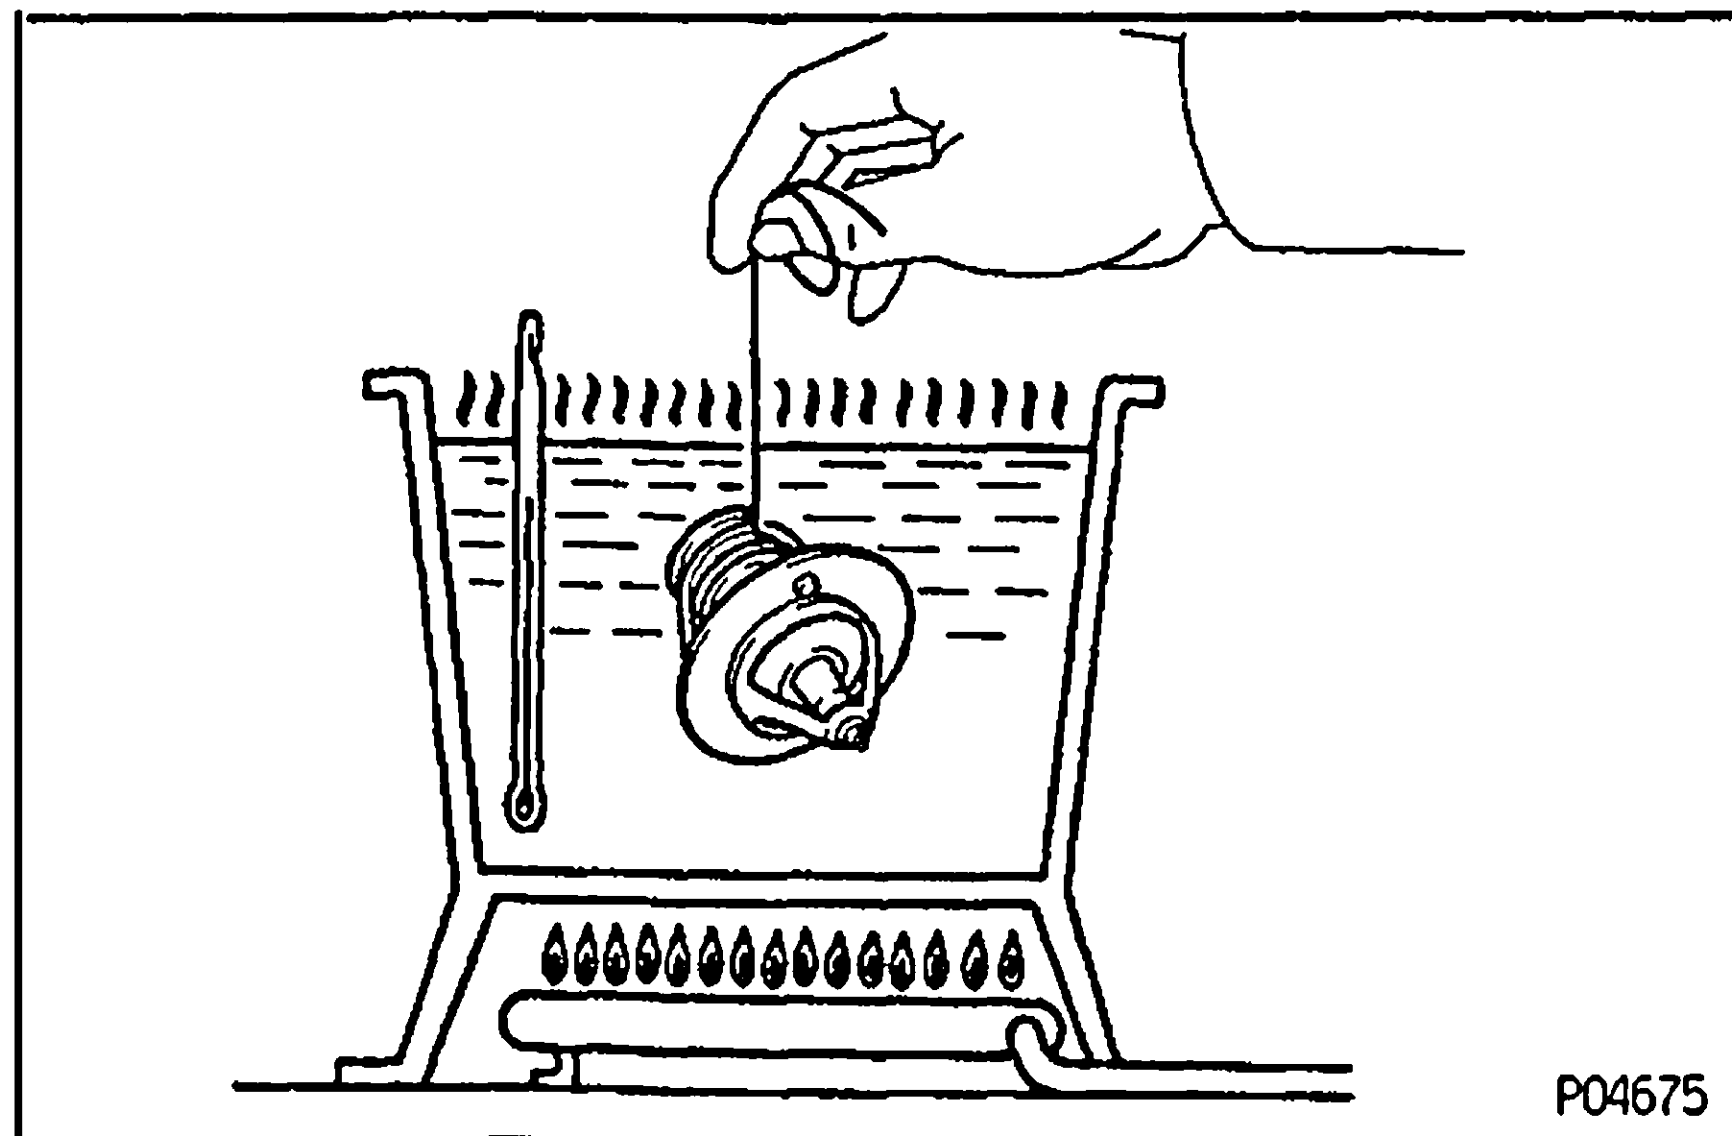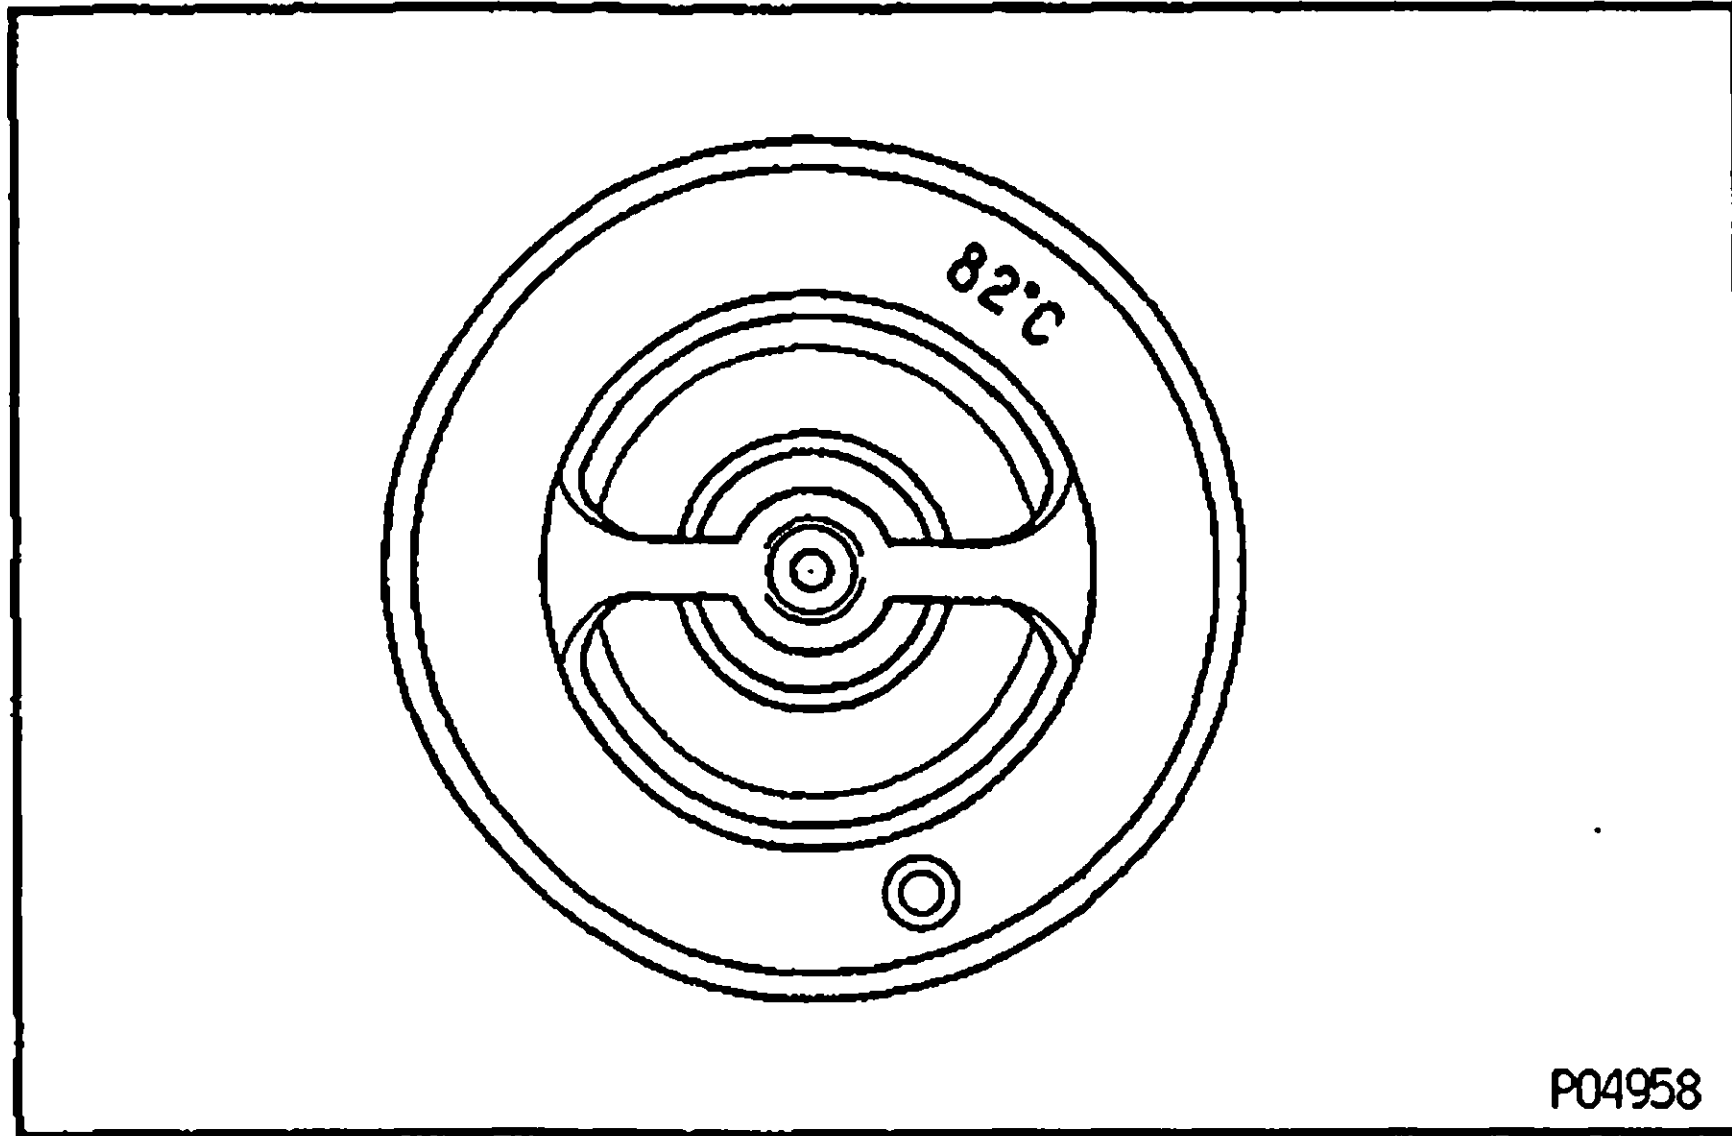


- (a) Immerse the thermostat in water and gradually heat the water.

- (b) Check the valve opening temperature.

Valve opening temperature:

80 — 84°C (176 — 183°F)

If the valve opening temperature is not as specified, replace the thermostat.

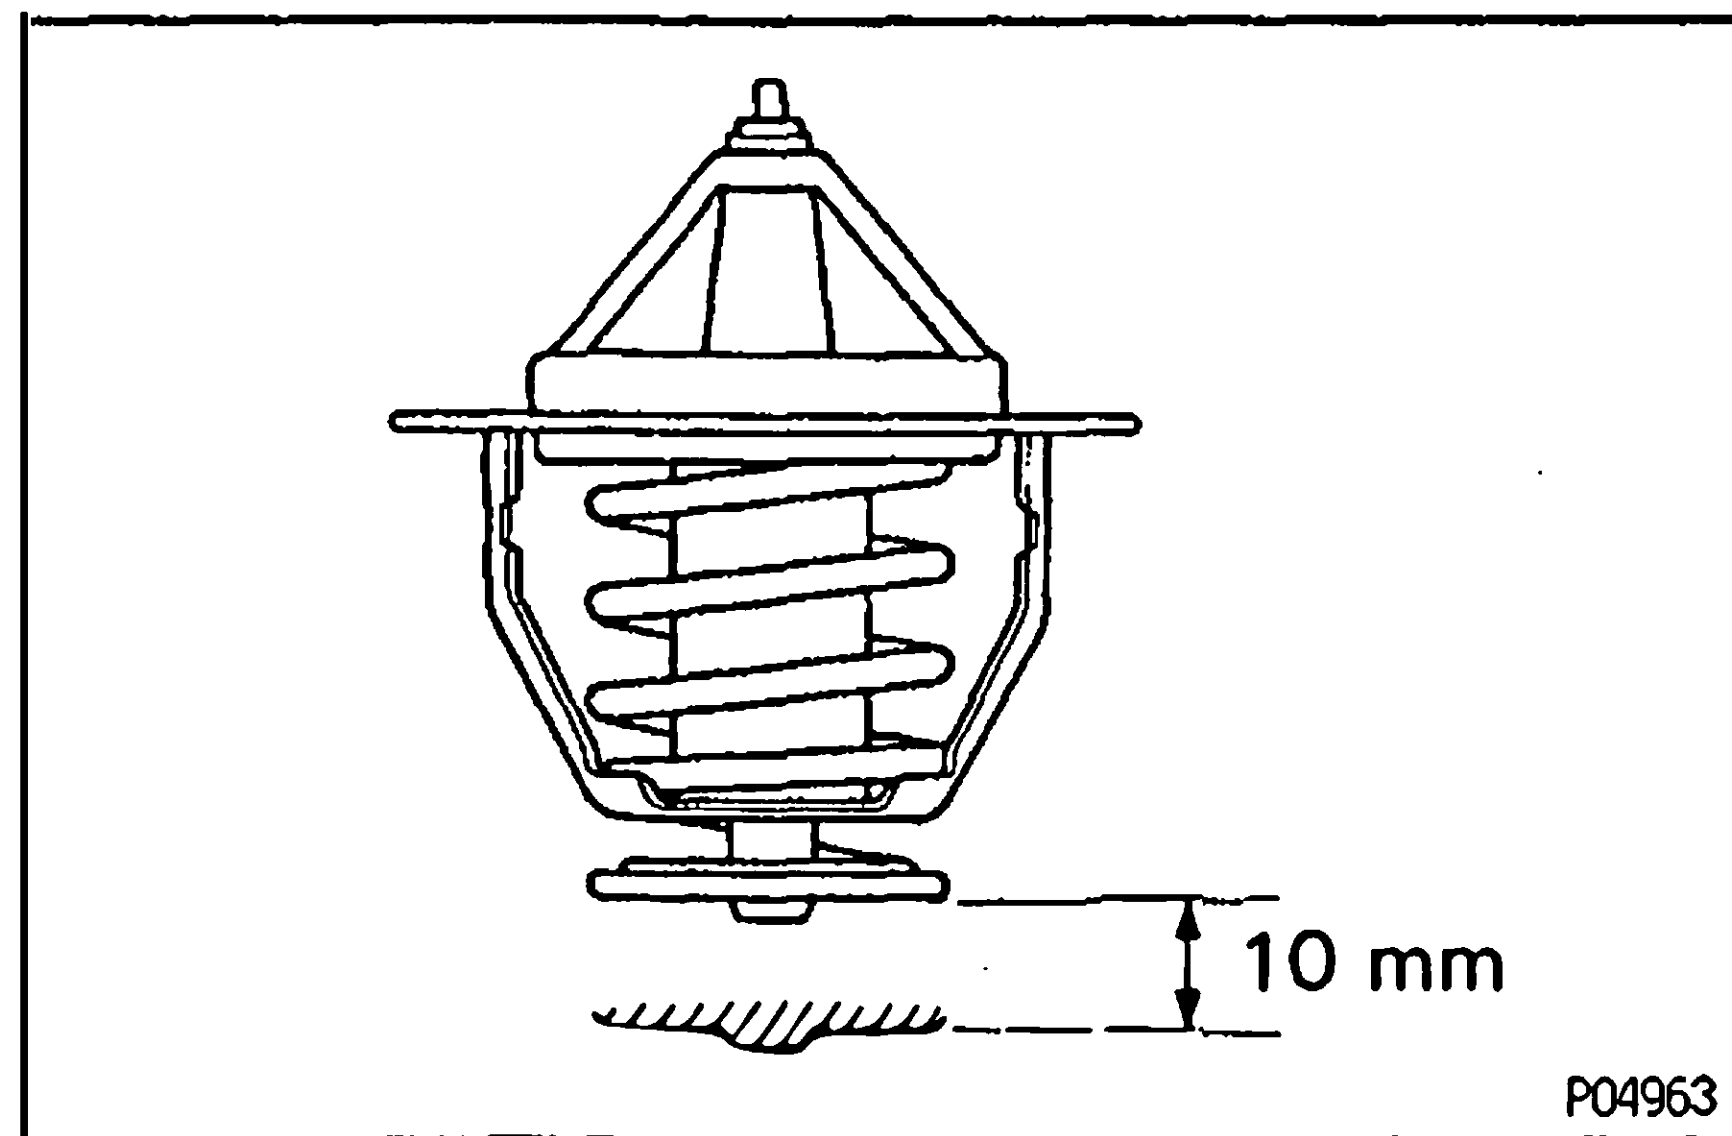

- (c) Check the valve lift.


Valve lift:

10 mm (0.39 in.) or more at 95°C (203°F)

If the valve lift is not as specified, replace the thermostat.

- (d) Check that the valve spring is tight when the thermostat is fully closed.

If not closed, replace the thermostat.

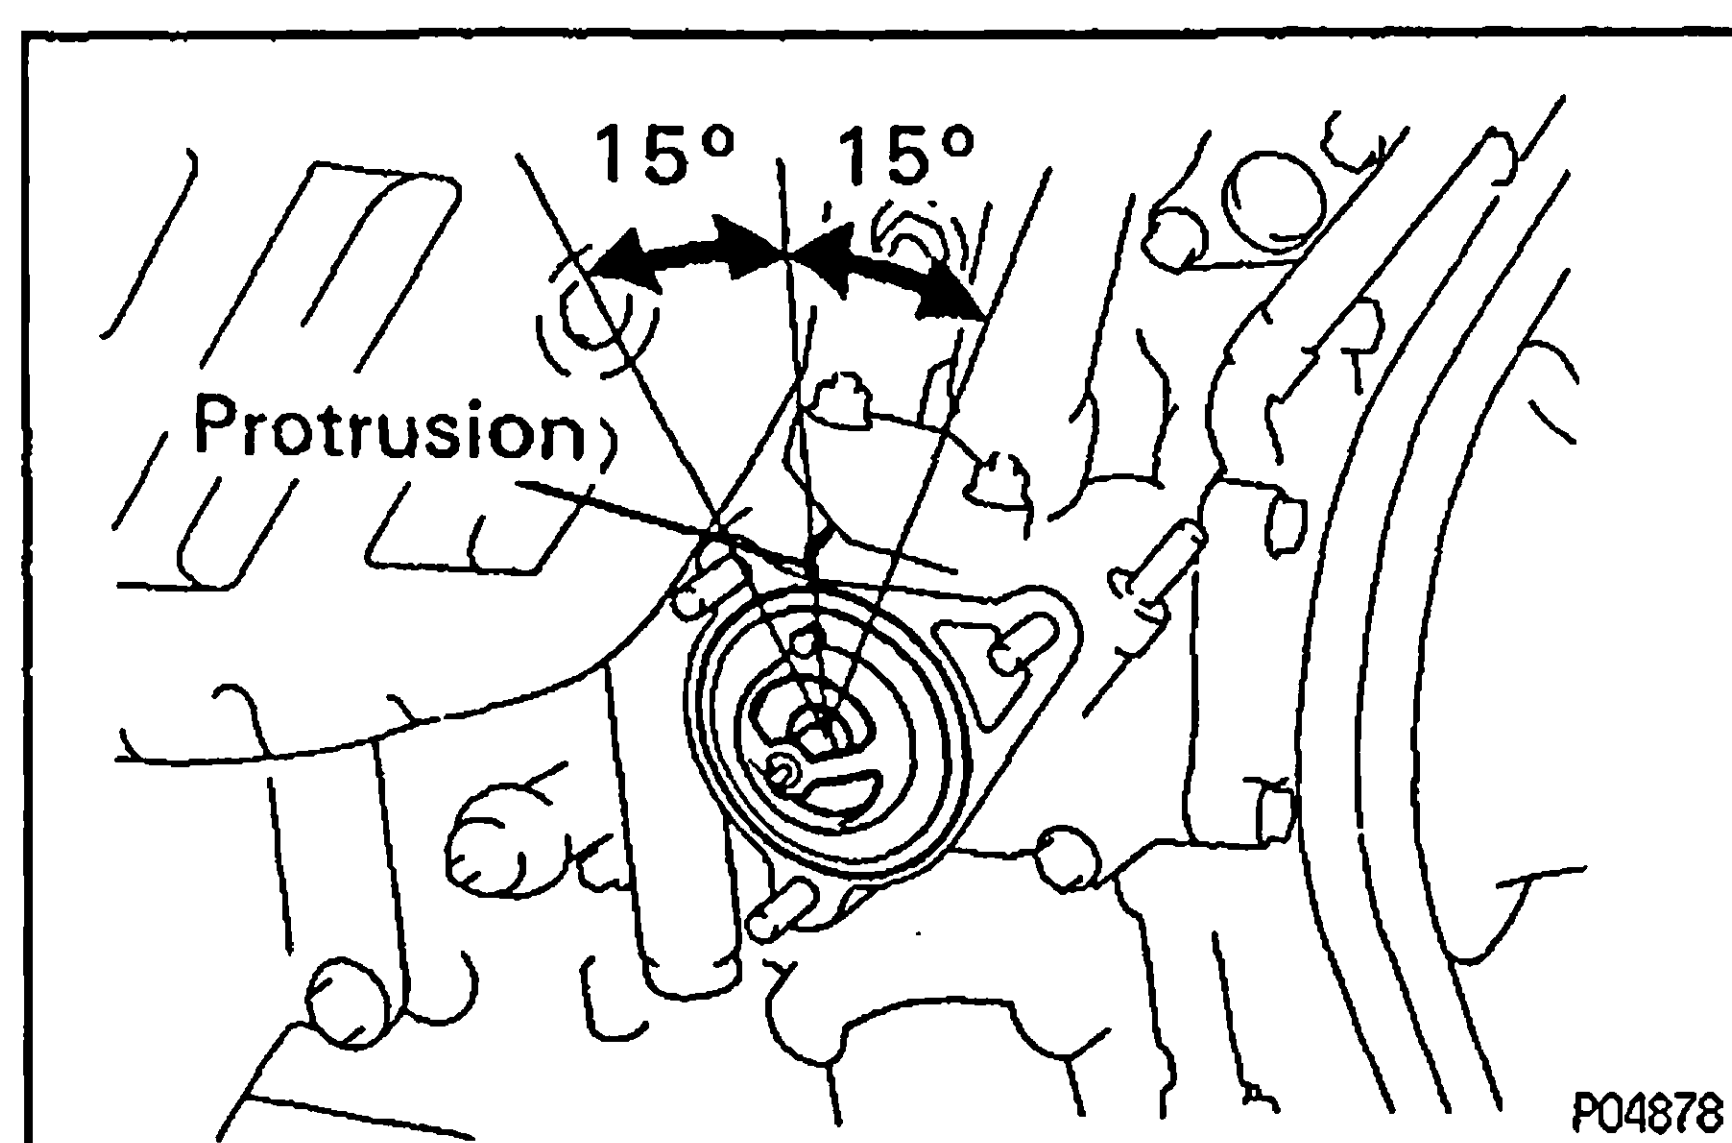

THERMOSTAT INSTALLATION

(See page EG-180)

1. PLACE THERMOSTAT IN WATER PUMP

- (a) Install a new gasket to the thermostat.
(b) Align the jiggle valve of the thermostat with the protrusion of the water inlet housing, and insert the thermostat in the water inlet housing.

HINT: The jiggle valve may be set within 15° of either side of the prescribed position.


2. INSTALL WATER INLET

Install the water inlet with the three nuts.

Torque: 21 N·m (210 kgf·cm, 14 ft·lbf)

3. FILL WITH ENGINE COOLANT

4. START ENGINE AND CHECK FOR LEAKS

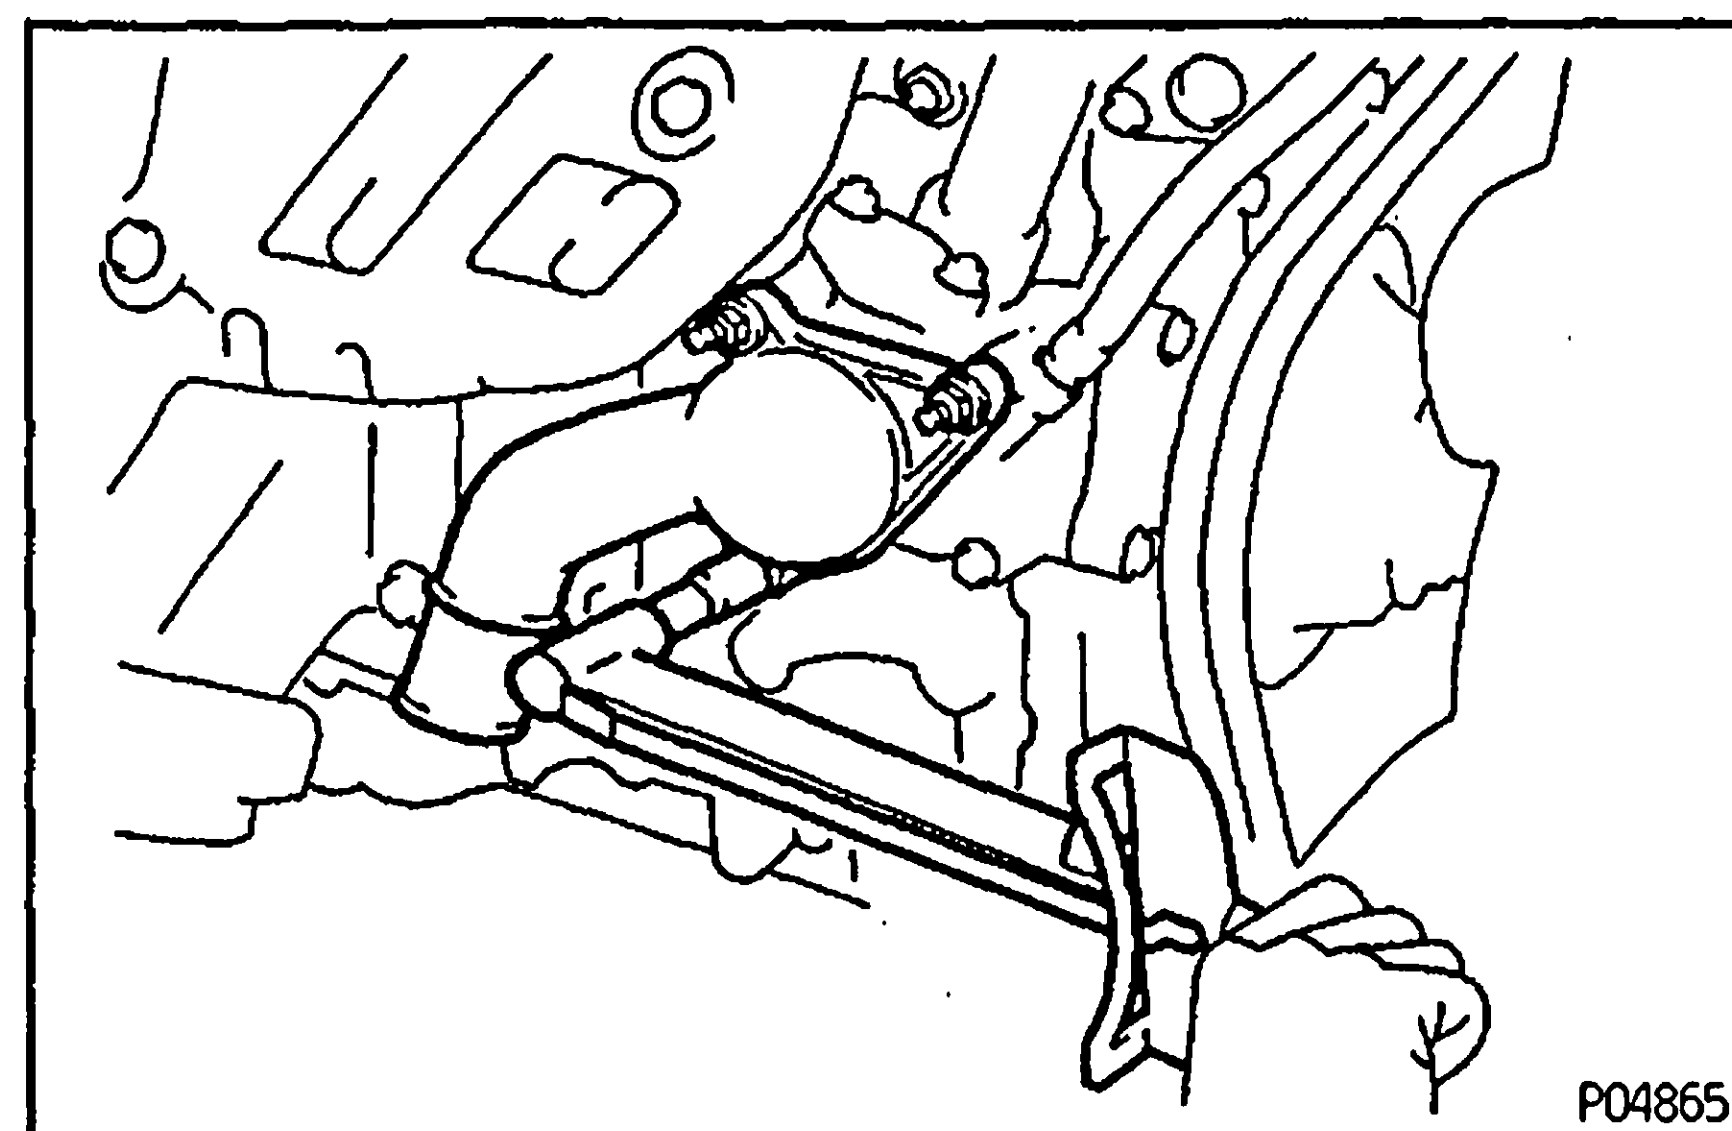

RADIATOR



RADIATOR CLEANING

EG074-01

Using water or a steam cleaner, remove any mud and dirt from the radiator core.

NOTICE: If using a high pressure type cleaner, be careful not to deform the fins of the radiator core. If the cleaner nozzle pressure is 2,942 — 3,432 kPa (30 — 35 kgf/cm², 427 — 498 psi), keep a distance of at least 40 — 50 cm (15.75 — 19.69 in.) between the radiator core and cleaner nozzle.

EG

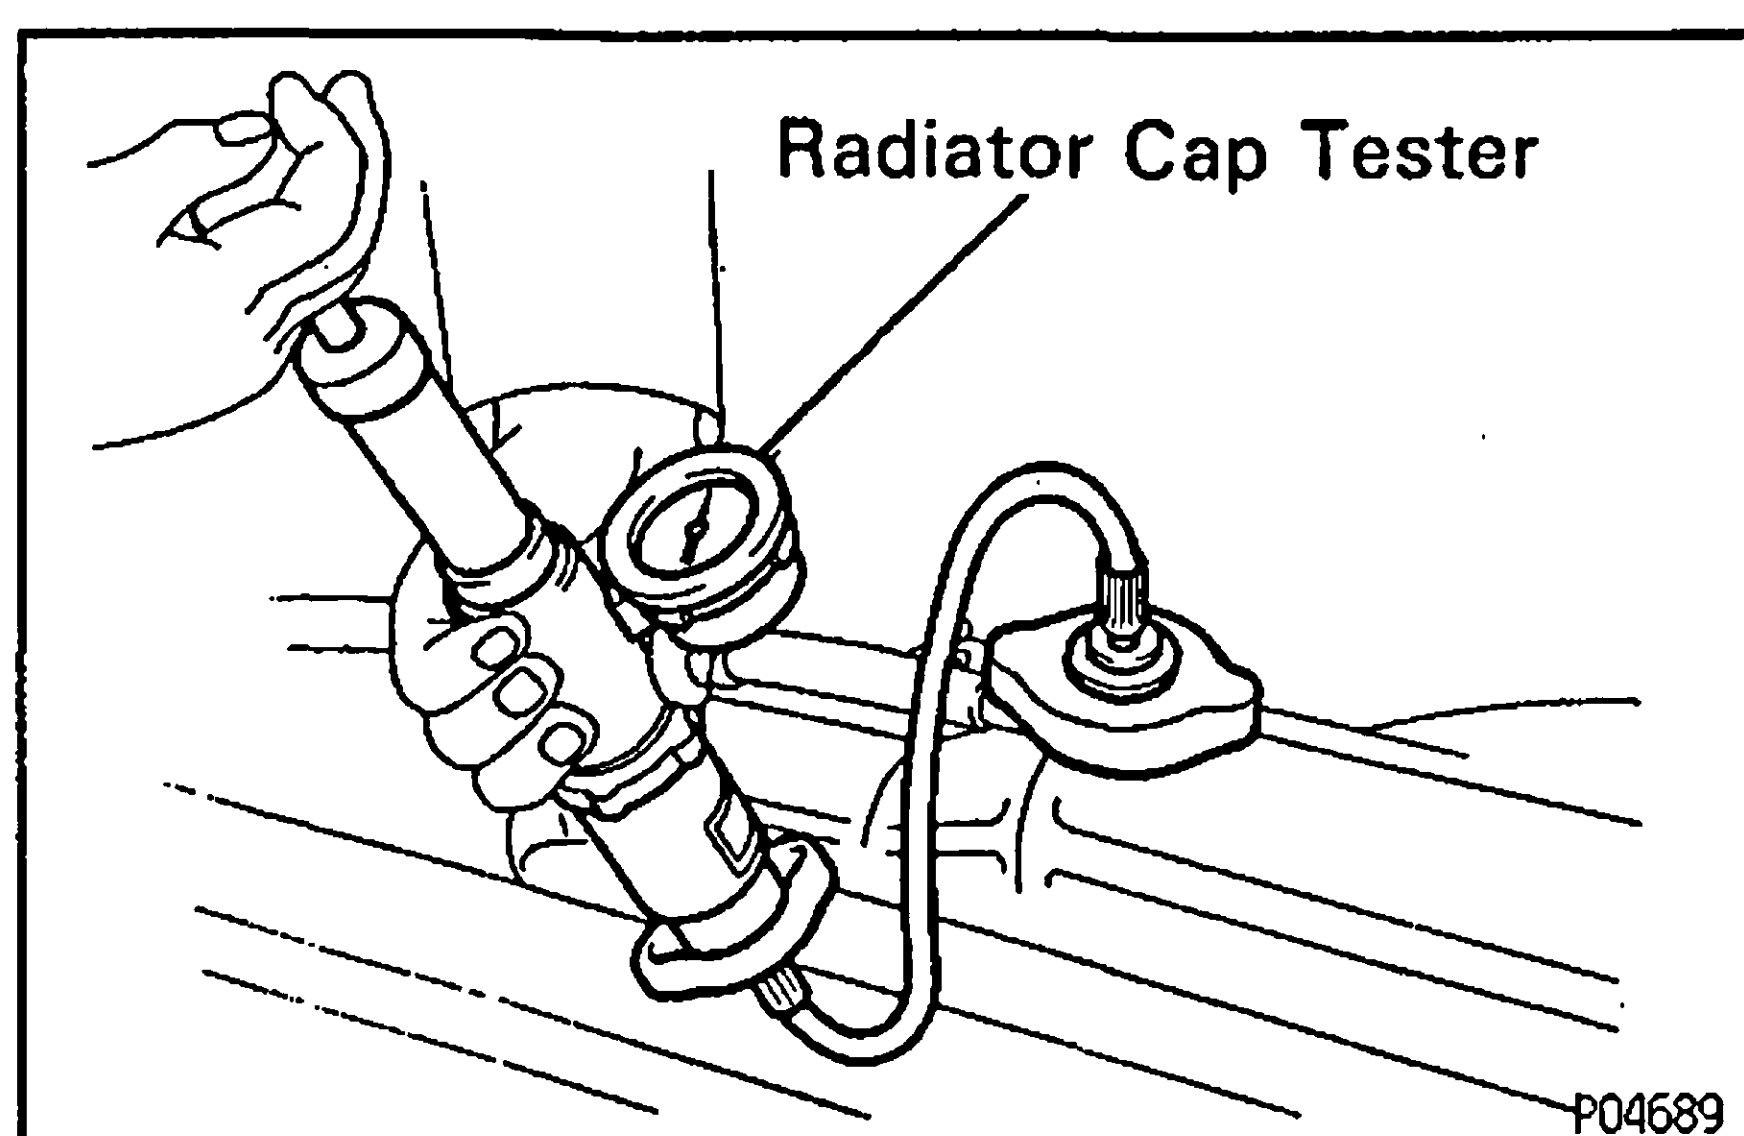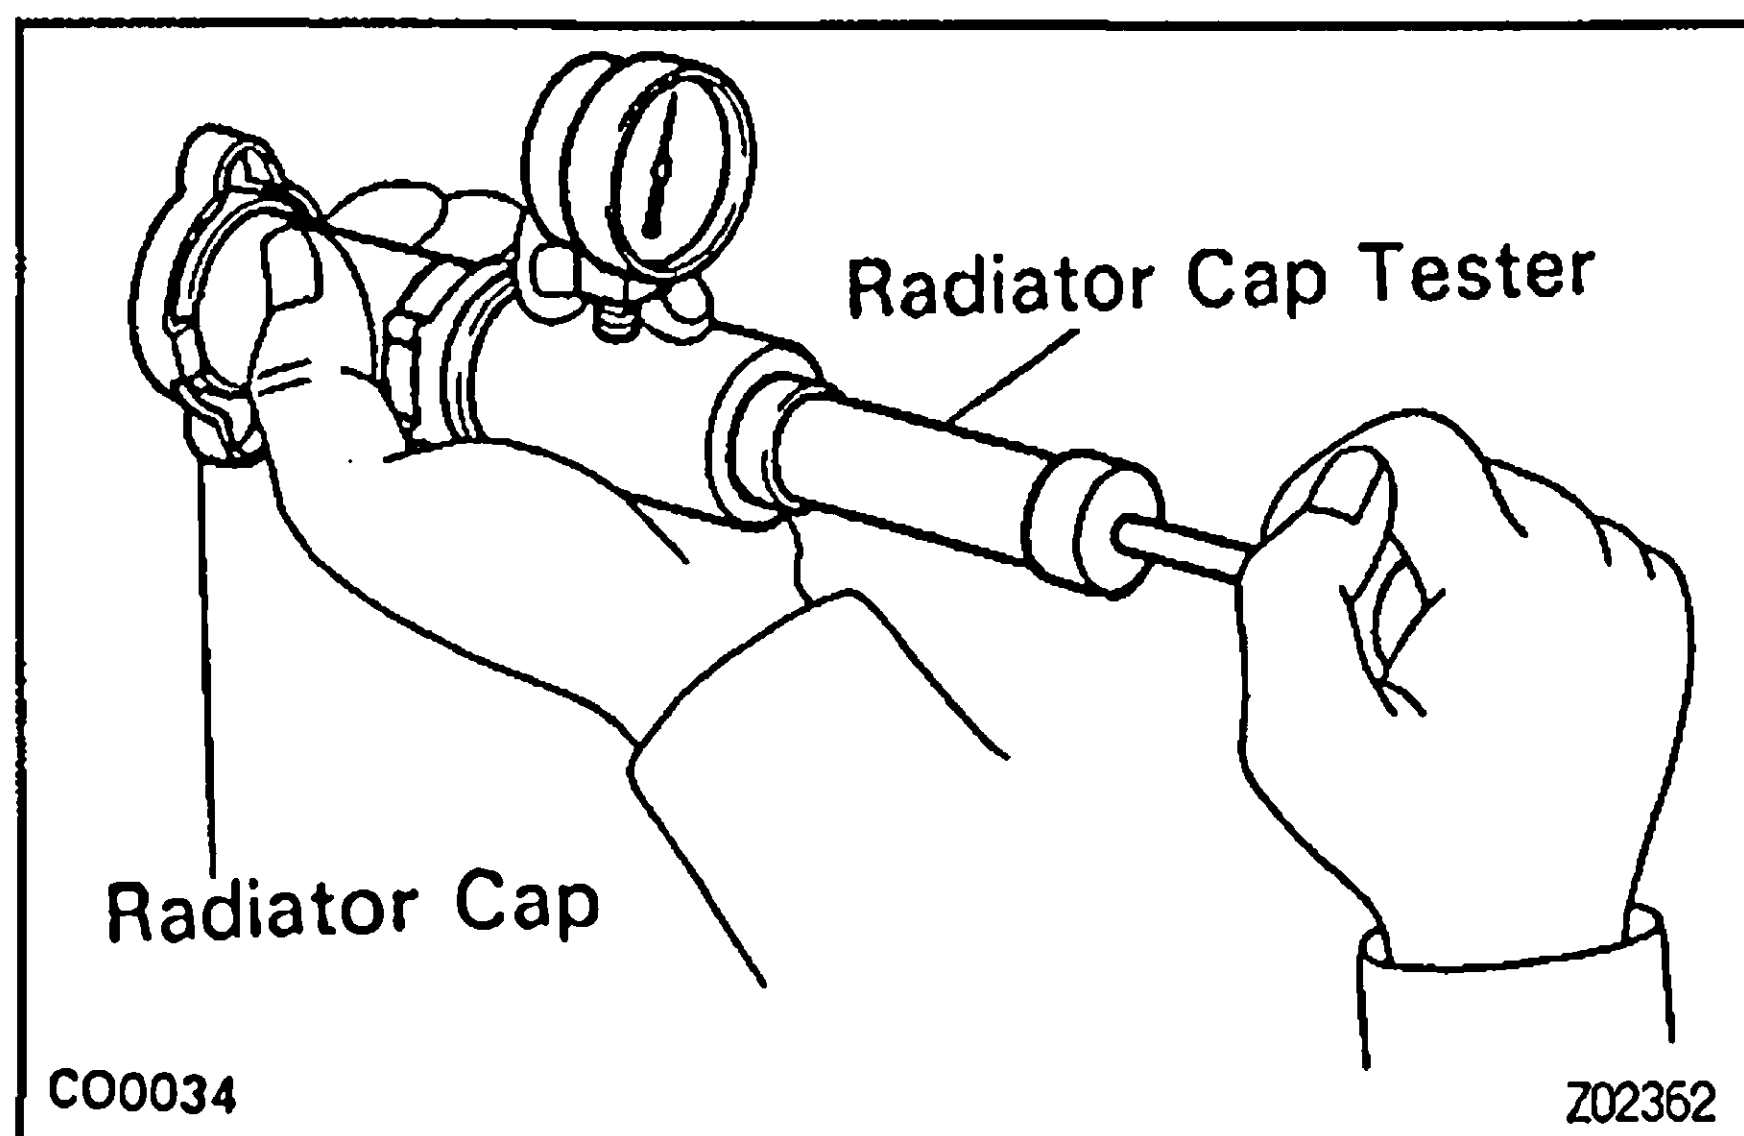

INSPECTION OF RADIATOR

EG0NL-01

1. REMOVE RADIATOR CAP
2. INSPECT RADIATOR CAP

Using a radiator cap tester, pump the tester and measure the relief valve opening pressure.

Standard opening pressure:

74 — 103 kPa

(0.75 — 1.05 kgf/cm², 10.7 — 14.9 psi)

Minimum opening pressure:

59 kPa (0.6 kgf/cm², 8.5 psi)

If the opening pressure is less than minimum, replace the radiator cap.

3. INSPECT COOLING SYSTEM FOR LEAKS

- (a) Fill the radiator with coolant and attach a radiator cap tester.
- (b) Warm up the engine.
- (c) Pump it to 118 kPa (1.2 kgf/cm², 17.1 psi), and check that the pressure does not drop.


If the pressure drops, check the hoses, radiator or water pump for leaks. If no external leaks are found, check the heater core, cylinder block and head.

4. REINSTALL RADIATOR CAP

SERVICE SPECIFICATIONS
SERVICE DATA

EG07L-02

Thermostat	Valve opening temperature	80 — 84°C (176 — 183°F)
	Valve lift at 95°C (203°F)	10 mm (0.39 in.) or more
Radiator cap	Relief valve opening pressure (STD)	74 — 103 kPa (0.75 — 1.05 kgf/cm², 10.7 — 14.9 psi)
	Relief valve opening pressure (Limit)	59 kPa (0.6 kgf/cm², 8.5 psi)

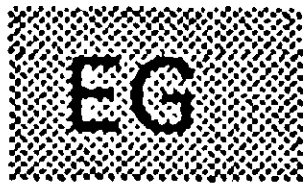

TORQUE SPECIFICATIONS

EG07M-02



Part tightened	N·m	kgf·cm	ft·lbf
Cylinder block x Drain plug	29	300	22
Water pump x Cylinder block	21	210	14
Water inlet x Water inlet housing	21	210	14

LUBRICATION SYSTEM


DESCRIPTION

A fully pressurized, fully filtered lubrication system has been adopted for this engine.

EG07N-02

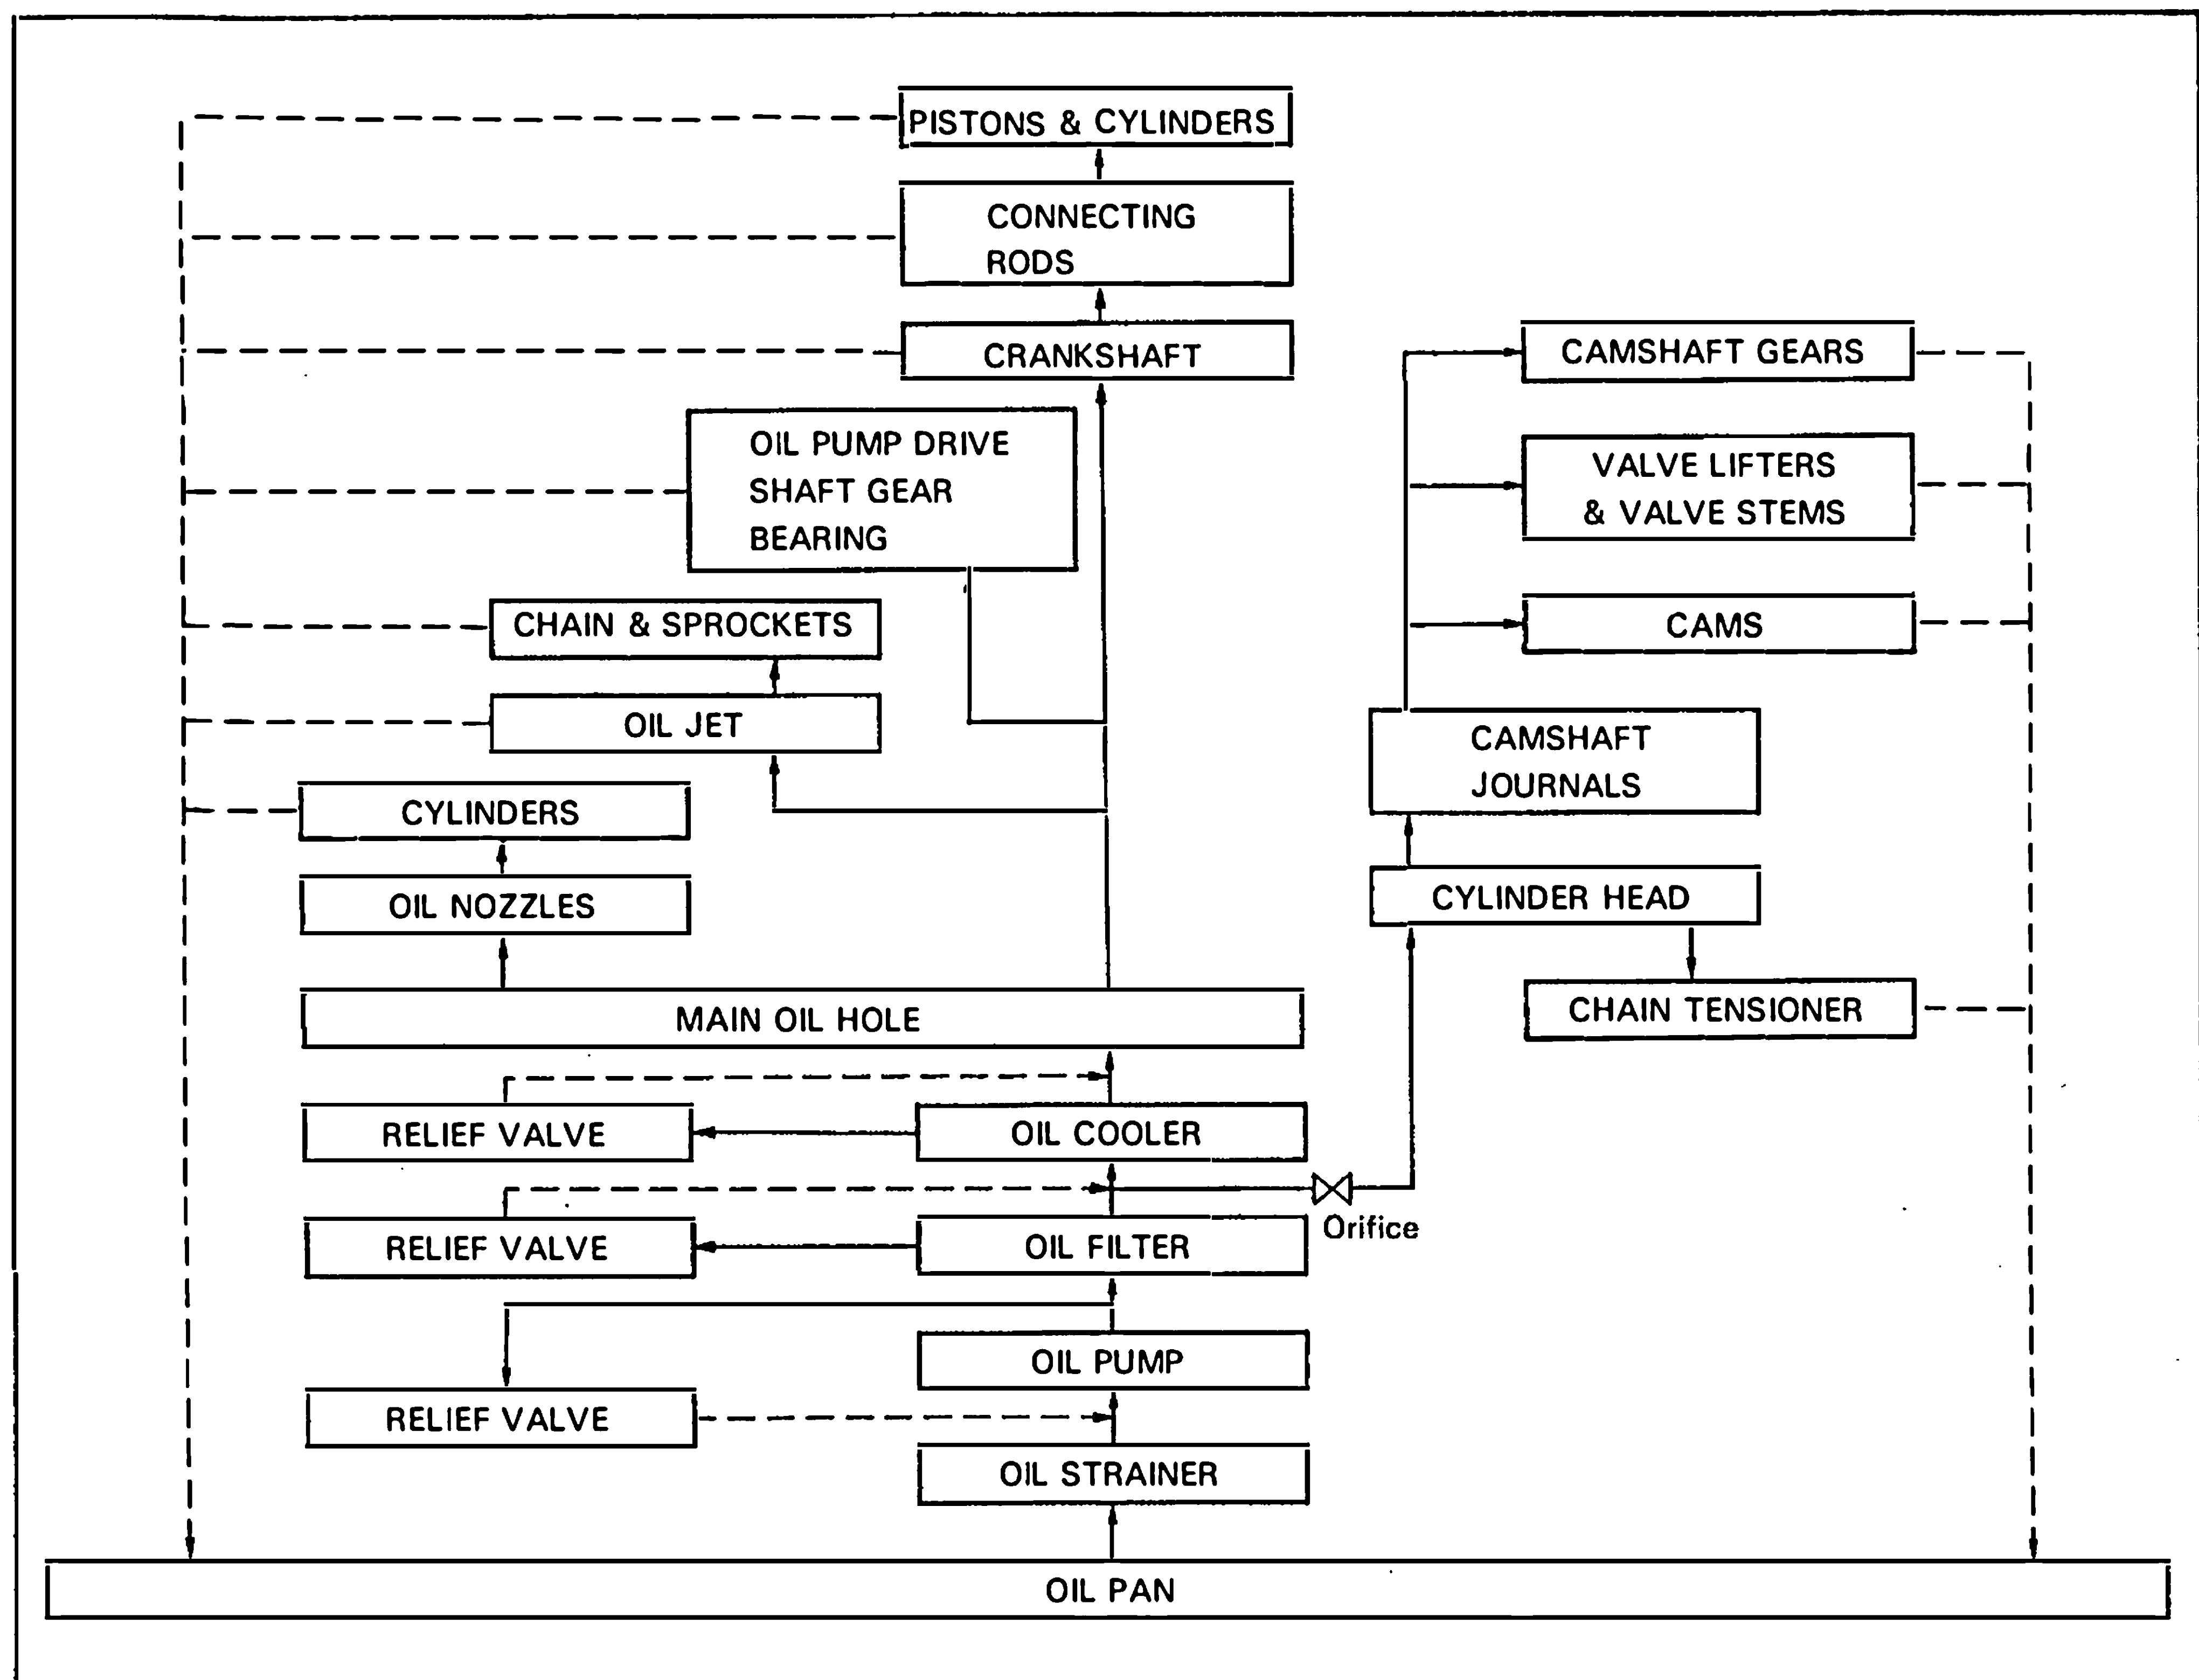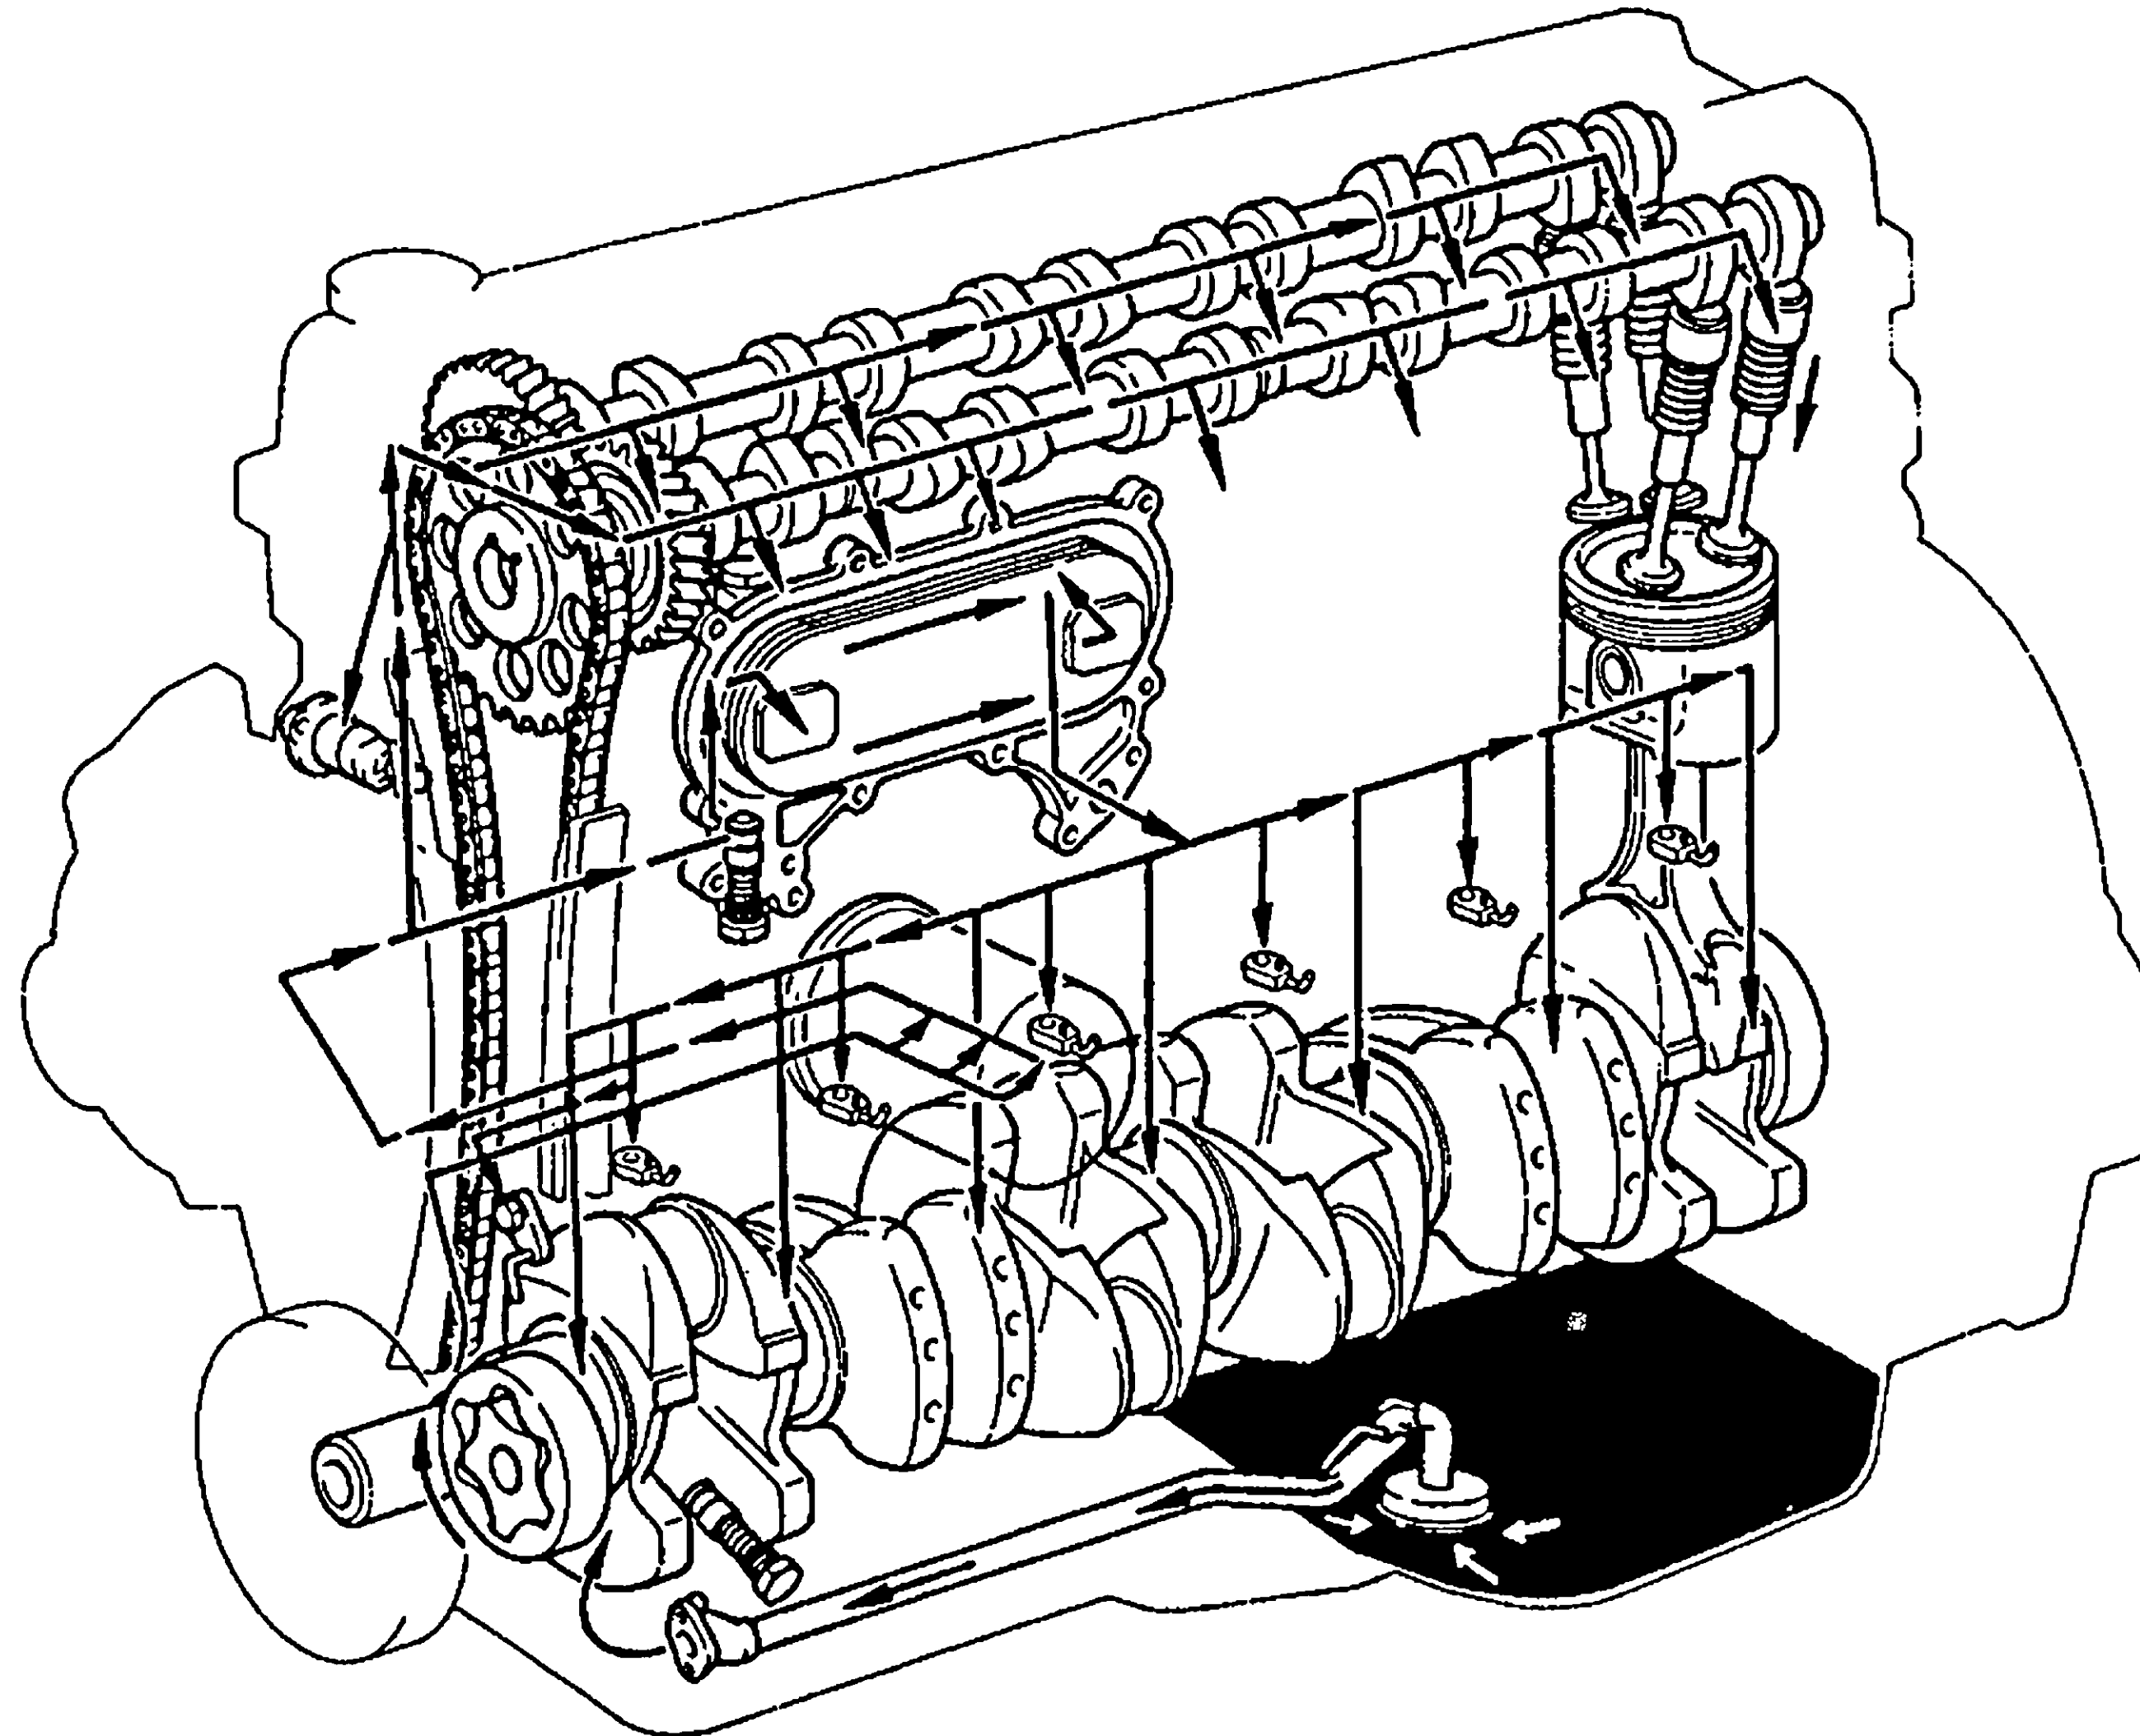

A pressure feeding lubrication system has been adopted to supply oil to the moving parts of this engine. The lubrication system consists of an oil pan, oil pump, oil filter and other external parts which supply oil to the moving parts in the engine block. The oil circuit is shown in the illustration at the top of the previous page. Oil from the oil pan is pumped up by the oil pump. After it passes through the oil filter, it is through the various oil holes in the crankshaft and cylinder block. After passing through the cylinder block and performing its lubricating function, the oil is returned by gravity to the oil pan. A dipstick on the center left side of the cylinder block is provided to check the oil level.

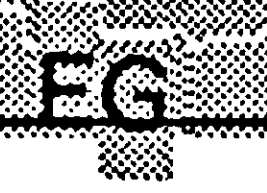

OIL PUMP

The oil pump pumps up oil from the oil pan and feeds it under pressure to the various parts of the engine. An oil strainer is mounted in front of the inlet to the oil pump to remove impurities. The oil pump itself is a trochoid type pump, inside of which is a drive rotor and a driven rotor. When the drive rotor rotates, the driven rotor rotates in the same direction, and since the axis of the drive rotor shaft is different from the center of the driven rotor, the space between the two rotors is changed as they rotate. Oil is drawn in when the space widens and is discharged when the space becomes narrow.

OIL PRESSURE REGULATOR (RELIEF VALVE)


At high engine speeds, the engine oil supplied by the oil pump exceeds the capacity of the engine to utilize it. For that reason, the oil pressure regulator works to prevent an oversupply of oil. During normal oil supply, a coil spring and valve keep the by-pass closed, but when too much oil is being fed, the pressure becomes extremely high, overpowering the force of the spring and opening the valves. This allows the excess oil to flow through the valve and return to the oil pump inlet.

OIL FILTER


The oil filter is a full flow type filter with a relief valve built into the paper filter element. Particles of metal from wear, airborne dirt, carbon and other impurities can get into the oil during use and could cause accelerated wear or seizing if allowed to circulate through the engine. The oil filter, integrated into the oil line, removes these impurities as the oil passes through it. The filter is mounted outside the engine to simplify replacement of the filter element. A relief valve is also included ahead of the filter element to relieve the high oil pressure in case the filter element becomes clogged with impurities. The relief valve opens when the oil pressure overpowers the force of the spring. Oil passing through the relief valve by-passes the oil filter and flows directly into the main oil hole in the engine.

PREPARATION
SST (SPECIAL SERVICE TOOLS)


EG07P-02

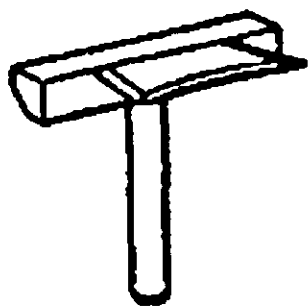


09032-00100 Oil Pan Seal Cutter

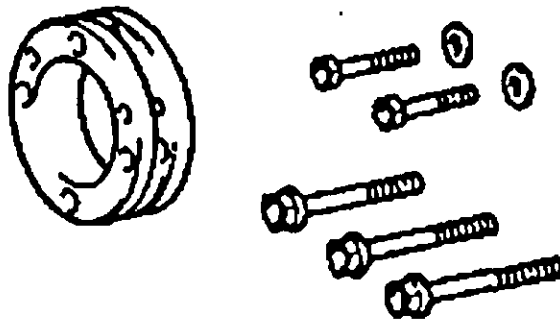

09213-58012 Crankshaft Pulley Hoolding Tool

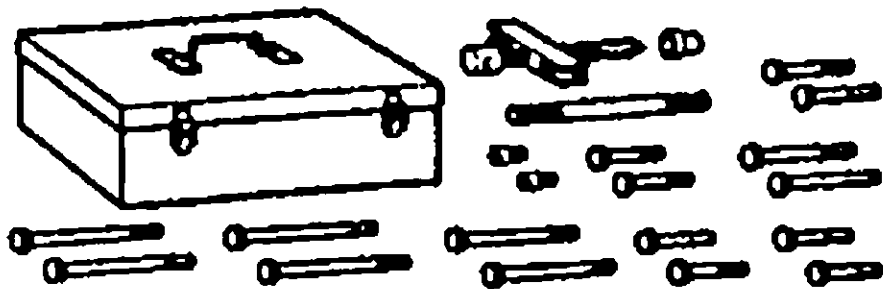


09213-60017 Crankshaft Pulley & Gear Puller Set

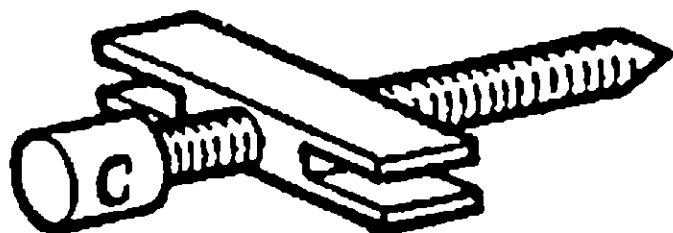


(09213-00020) Body With Bolt




(09213-00030) Handle

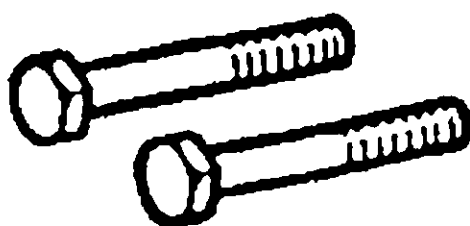


(09213-00060) Bolt Set

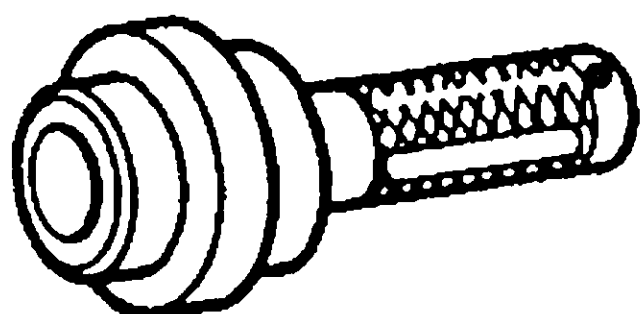

09223-46011 Crankshaft Front Oil Seal Replacer

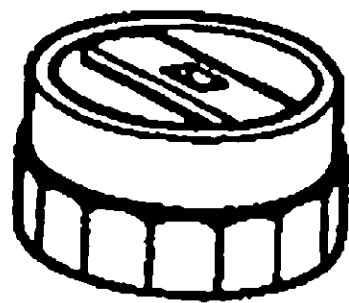


09228-44011 Oil Filter Wrench

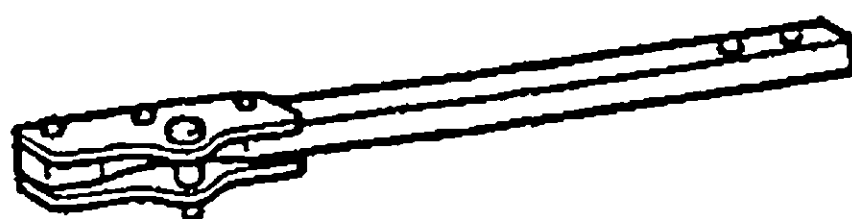

09330-00021 Companion Flange Holding Tool


Crankshaft pulley

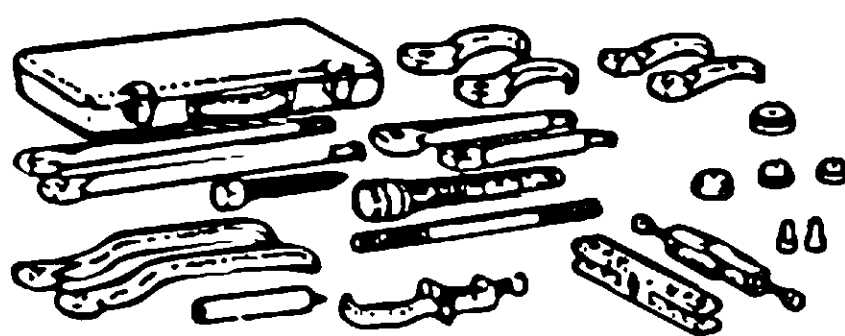

09950-20017 Universal Puller

RECOMMENDED TOOLS

EG07Q-02

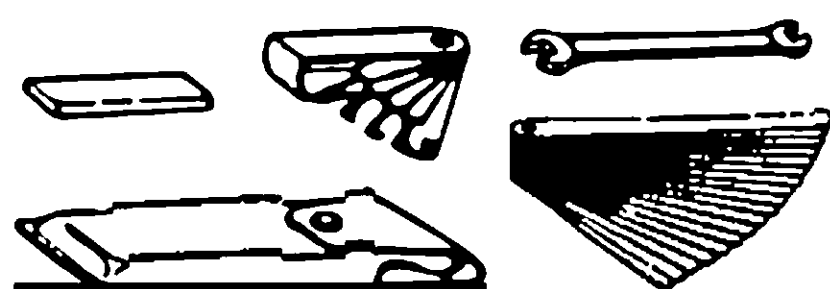

09200-00010 Engine Adjust Kit


EQUIPMENT

EG07A-01

Oil pressure gauge	
Precision straight edge	Oil pump
Torque wrench	

LUBRICANT

EG07B-02

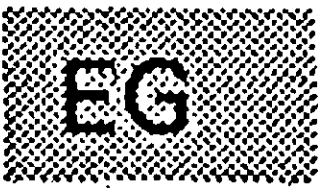

Item	Capacity	Classification
Engine oil		API grade SG or better
Dry fill	8.0 liters (8.5 US qts, 7.0 Imp. qts)	
Drain and refill		
w/ Oil filter change	7.6 liters (8.0 US qts, 6.7 Imp. qts)	
w/o Oil filter change	7.1 liters (7.5 US qts, 6.2 Imp. qts)	

SSM (SPECIAL SERVICE MATERIALS)


EG07T-02

08826-00080	Seal packing or equivalent	Oil pump Oil pan (Timing chain cover)
08833-00080	Adhesive 1344, THREE BOND 1344, LOCTITE 242 or equivalent	Oil pressure switch

OIL PRESSURE CHECK

EGONM-01

Recommended Viscosity (SAE) :

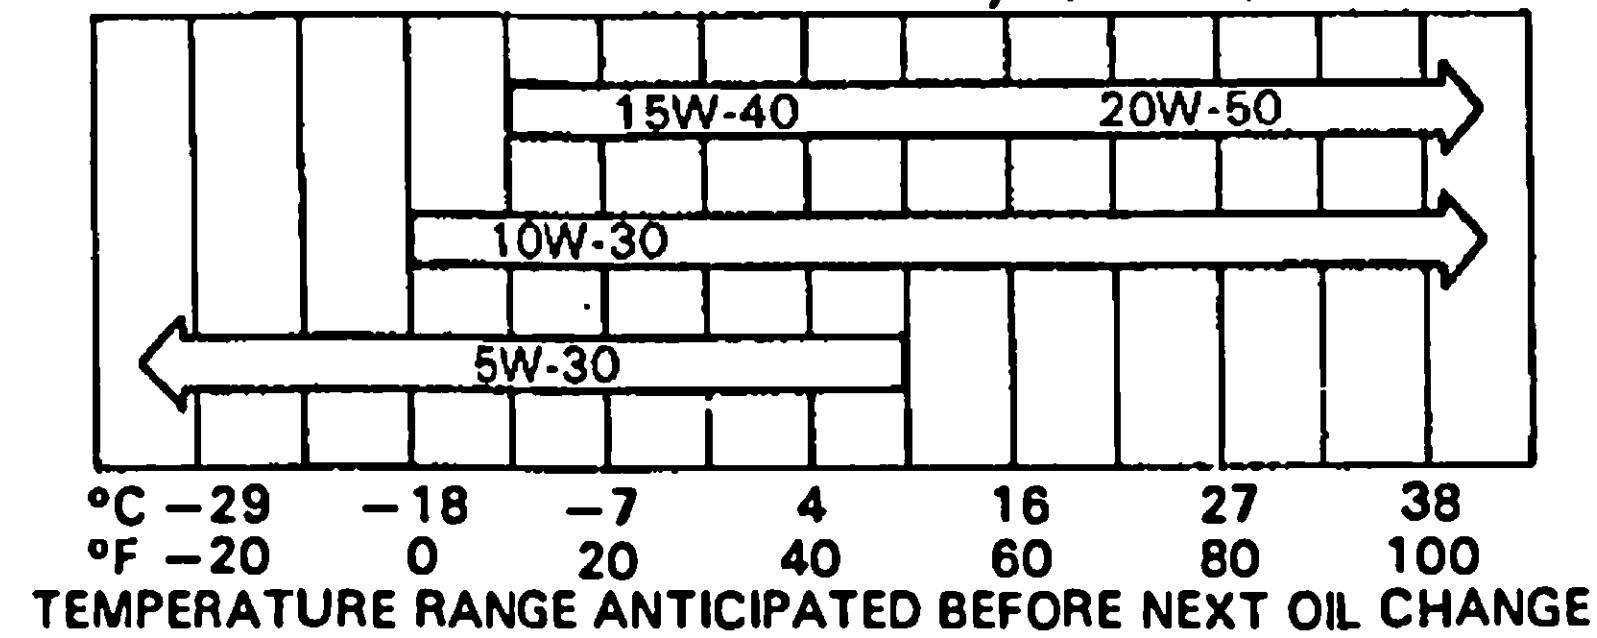

P02645

1. CHECK ENGINE OIL QUALITY

Check the oil for deterioration, entry of water, discoloring or thinning.

If the quality is poor, replace the oil.

Oil grade:

API grade SG or better

If it is impossible to get SG or better, you may use SF grade.


Recommended viscosity:

Refer to illustration

2. CHECK ENGINE OIL LEVEL


The oil level should be between the "L" and "F" marks on the dipstick.

If low, check for leakage and add oil up to "F" mark.

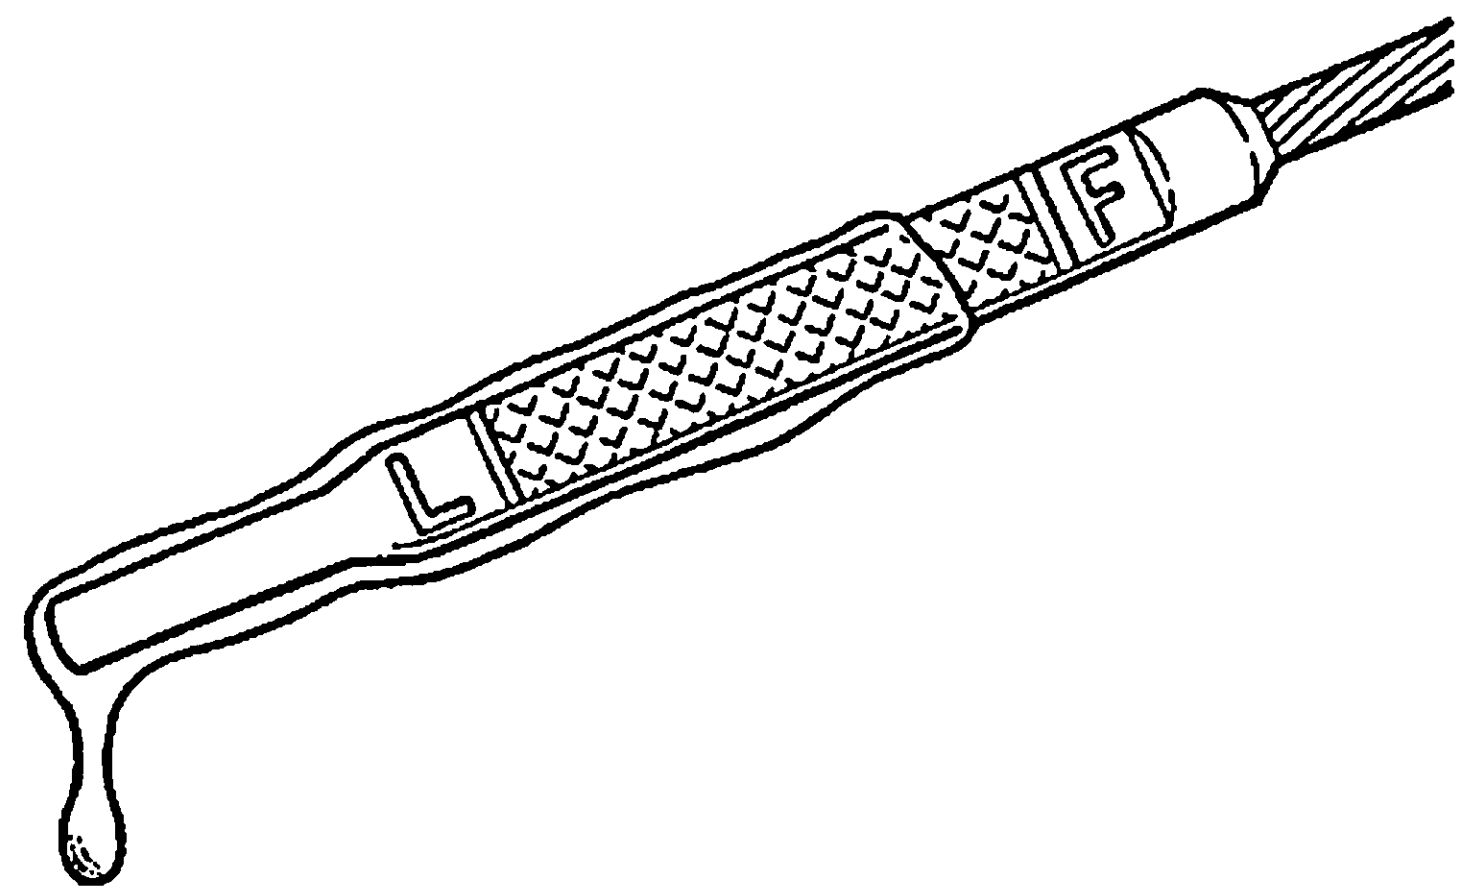

P04908

Oil Pressure Gauge

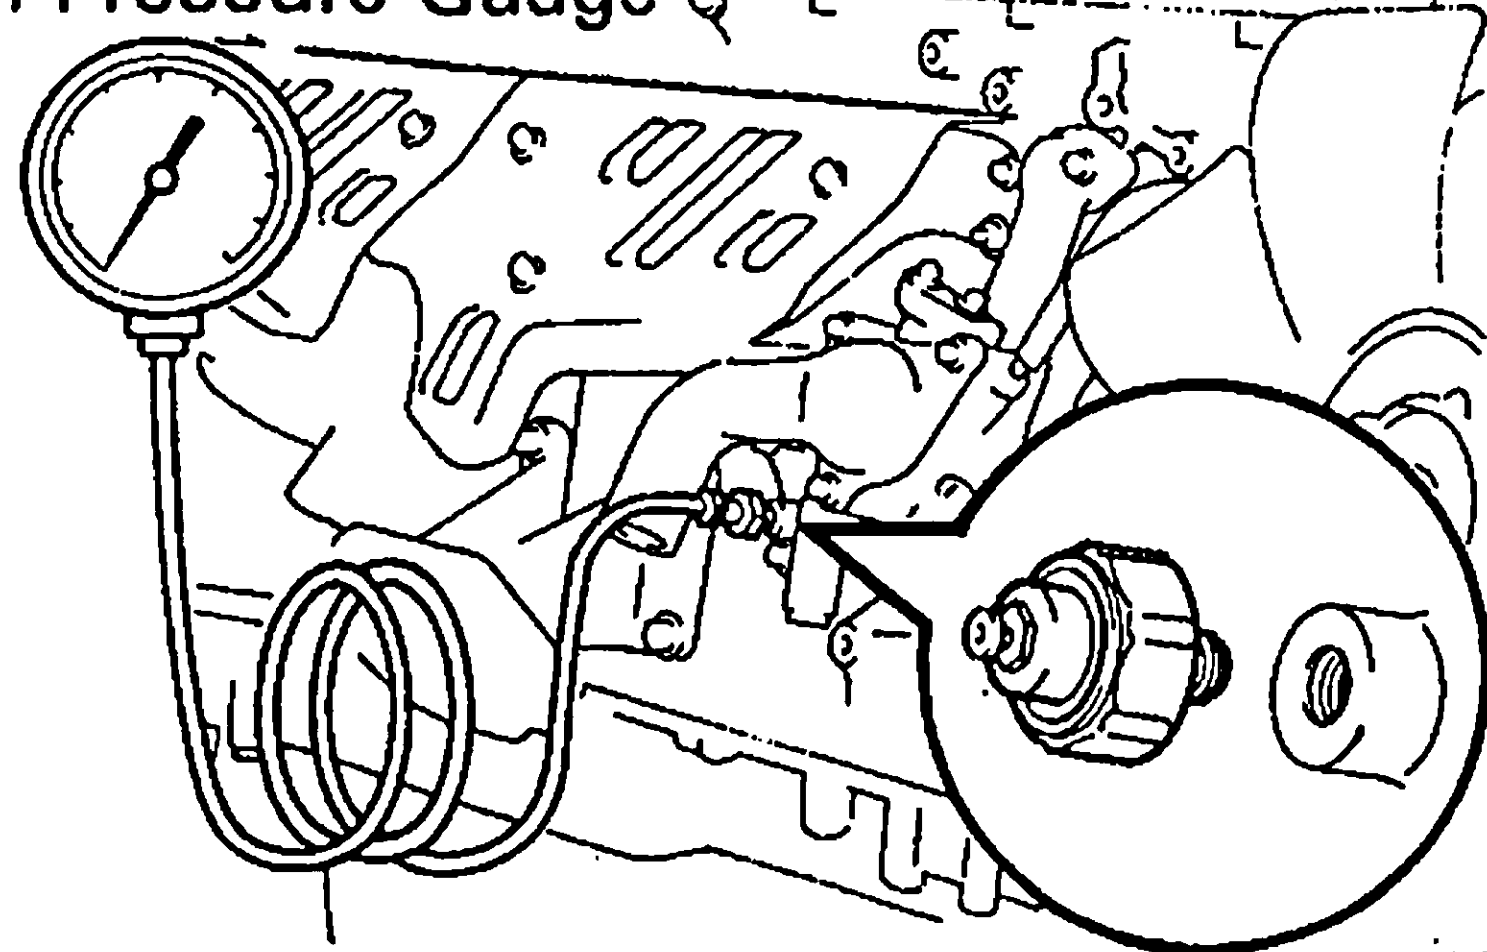

P05046

3. REMOVE OIL PRESSURE SWITCH, AND INSTALL OIL PRESSURE GAUGE

4. WARM UP ENGINE

Allow the engine to warm up to normal operating temperature.

5. CHECK OIL PRESSURE

Oil pressure:

At idle

29 kPa (0.3 kgf/cm², 4.3 psi) or more

At 3,000 rpm

245 – 490 kPa (2.5 – 5.0 kgf/cm², 36 – 71 psi)

6. REMOVE OIL PRESSURE GAUGE AND REINSTALL OIL PRESSURE SWITCH

(a) Remove the oil pressure gauge.

(b) Apply adhesive to two or three threads of the oil pressure switch.

Adhesive:


Part No.08833–00080, THREE BOND 1344,

LOCTITE 242 or equivalent

(c) Reinstall the oil pressure switch.

7. START ENGINE AND CHECK FOR LEAKS

Adhesive

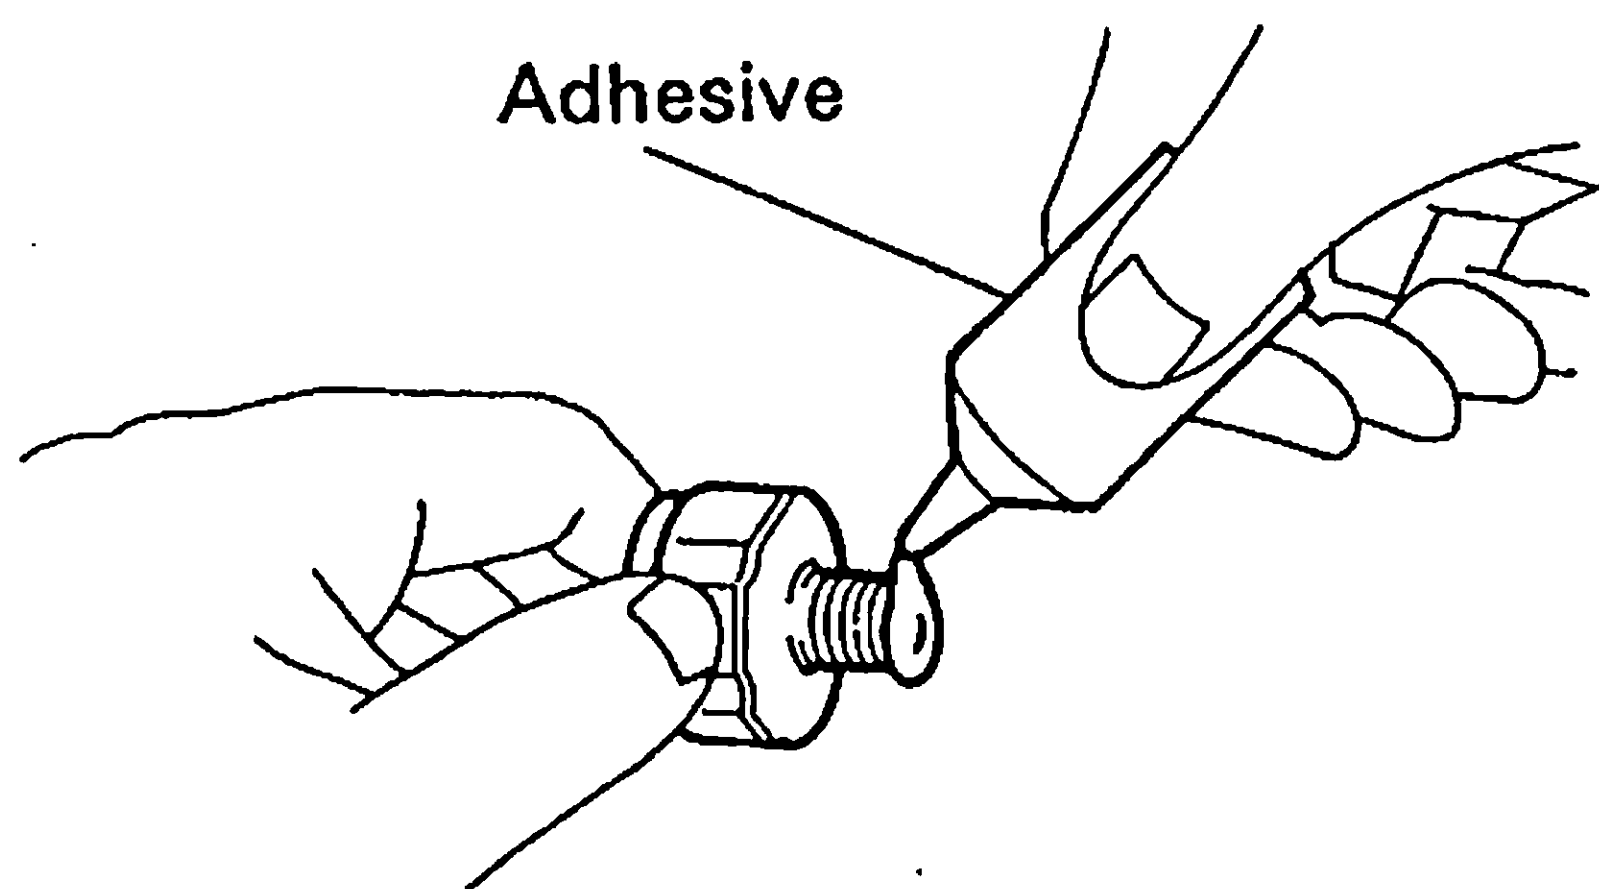

P00496

OIL AND FILTER REPLACEMENT

EG07V-02


CAUTION:

- Prolonged and repeated contact with mineral oil will result in the removal of natural fats from the skin, leading to dryness, irritation and dermatitis. In addition, used engine oil contains potentially harmful contaminants which may cause skin cancer.
- Care should be taken, therefore, when changing engine oil to minimize the frequency and length of time your skin is exposed to used engine oil. Protective clothing and gloves that cannot be penetrated by oil should be worn. The skin should be thoroughly washed with soap and water, or use water — less hand cleaner, to remove any used engine oil. Do not use gasoline, thinners, or solvents.
- In order to preserve the environment, used oil and used oil filter must be disposed of only at designated disposal sites.


EG

1. DRAIN ENGINE OIL


- (a) Remove the oil filler cap.
- (b) Remove the oil drain plug, and drain the oil into a container.

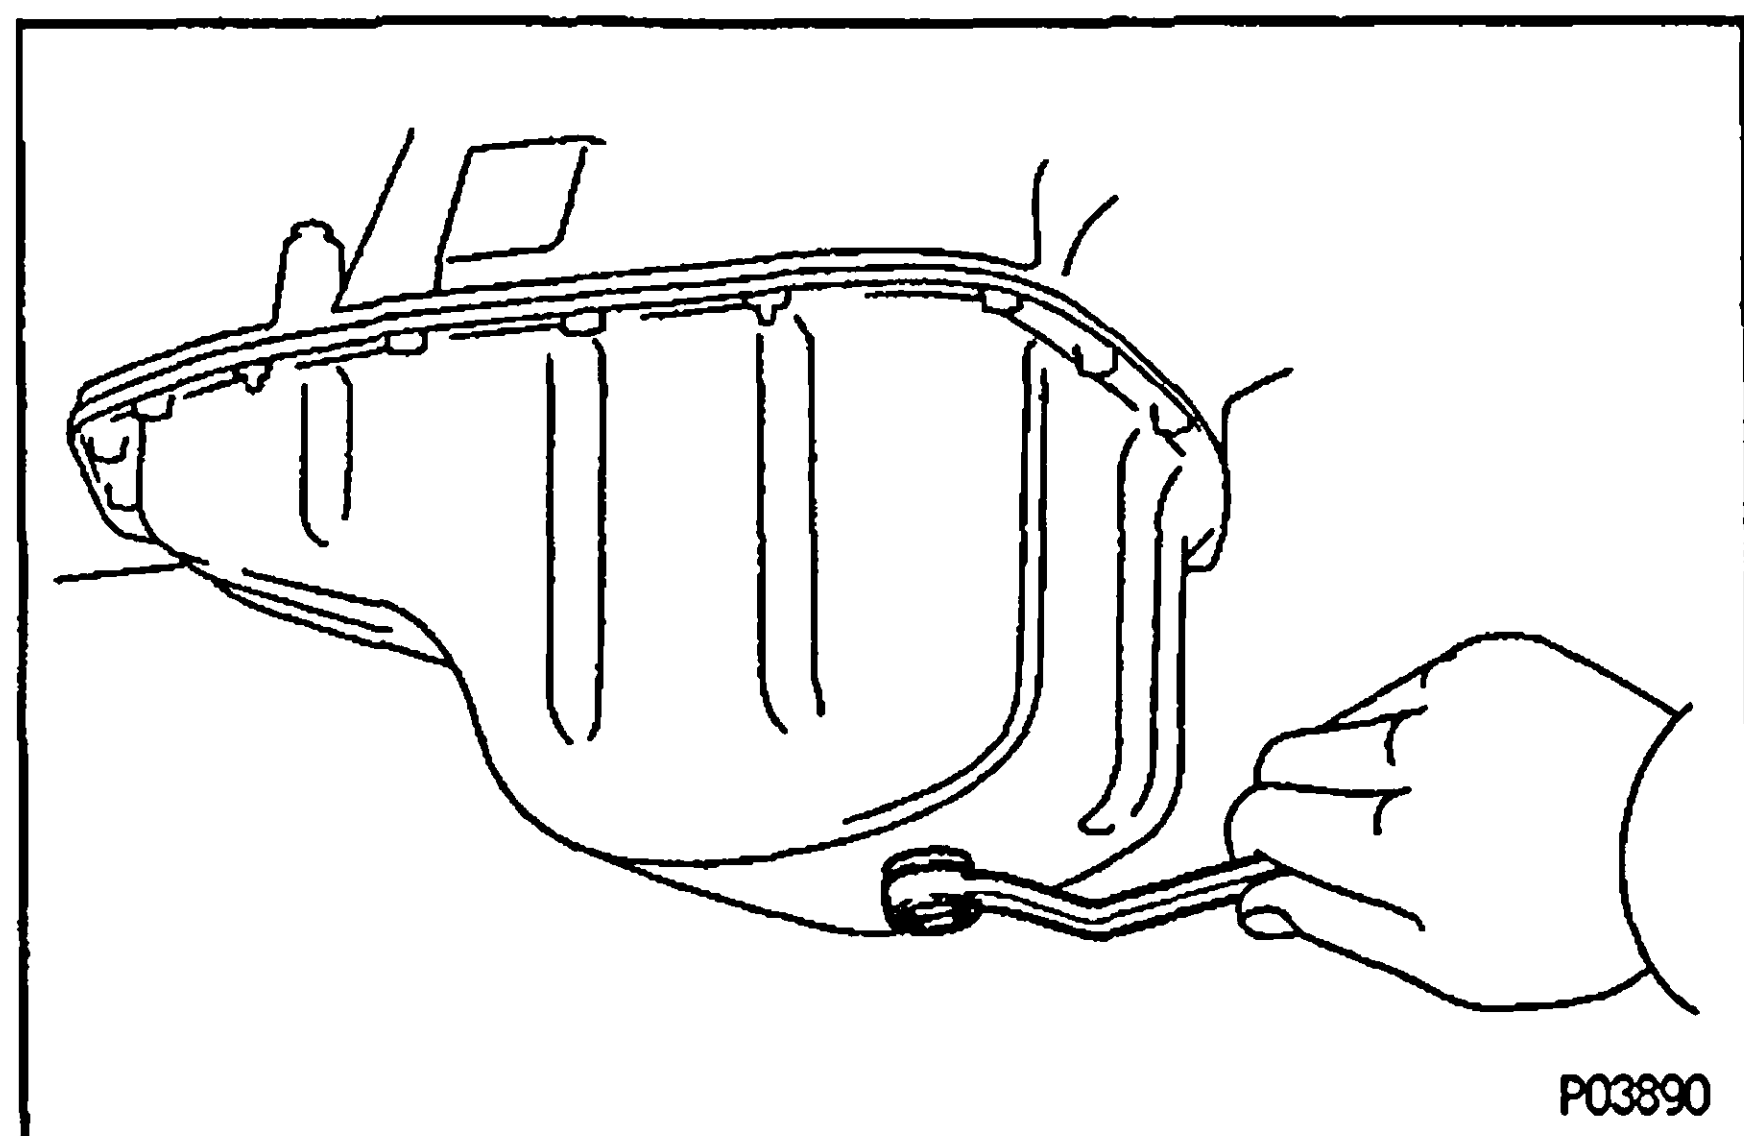**2. REPLACE OIL FILTER**


- (a) Using SST, remove the oil filter.
SST 09228-44011

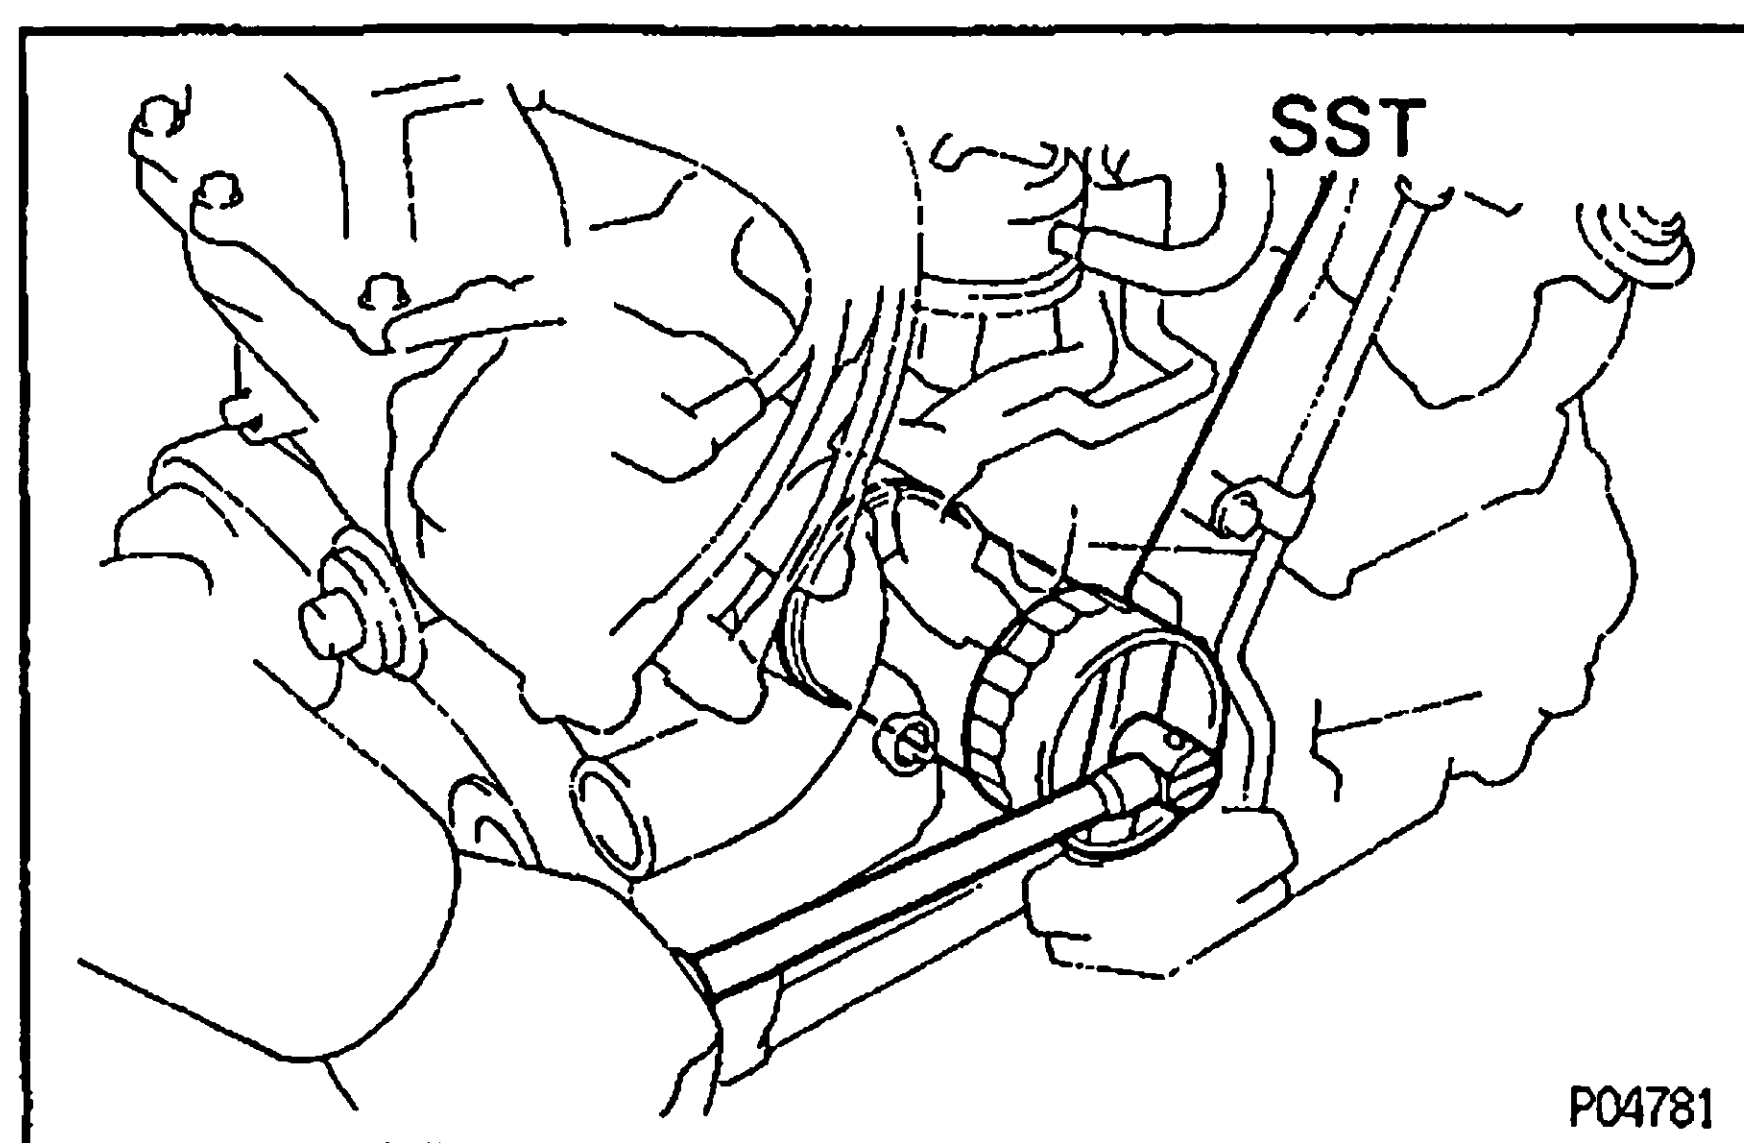


- (b) Check and clean the oil filter installation surface.

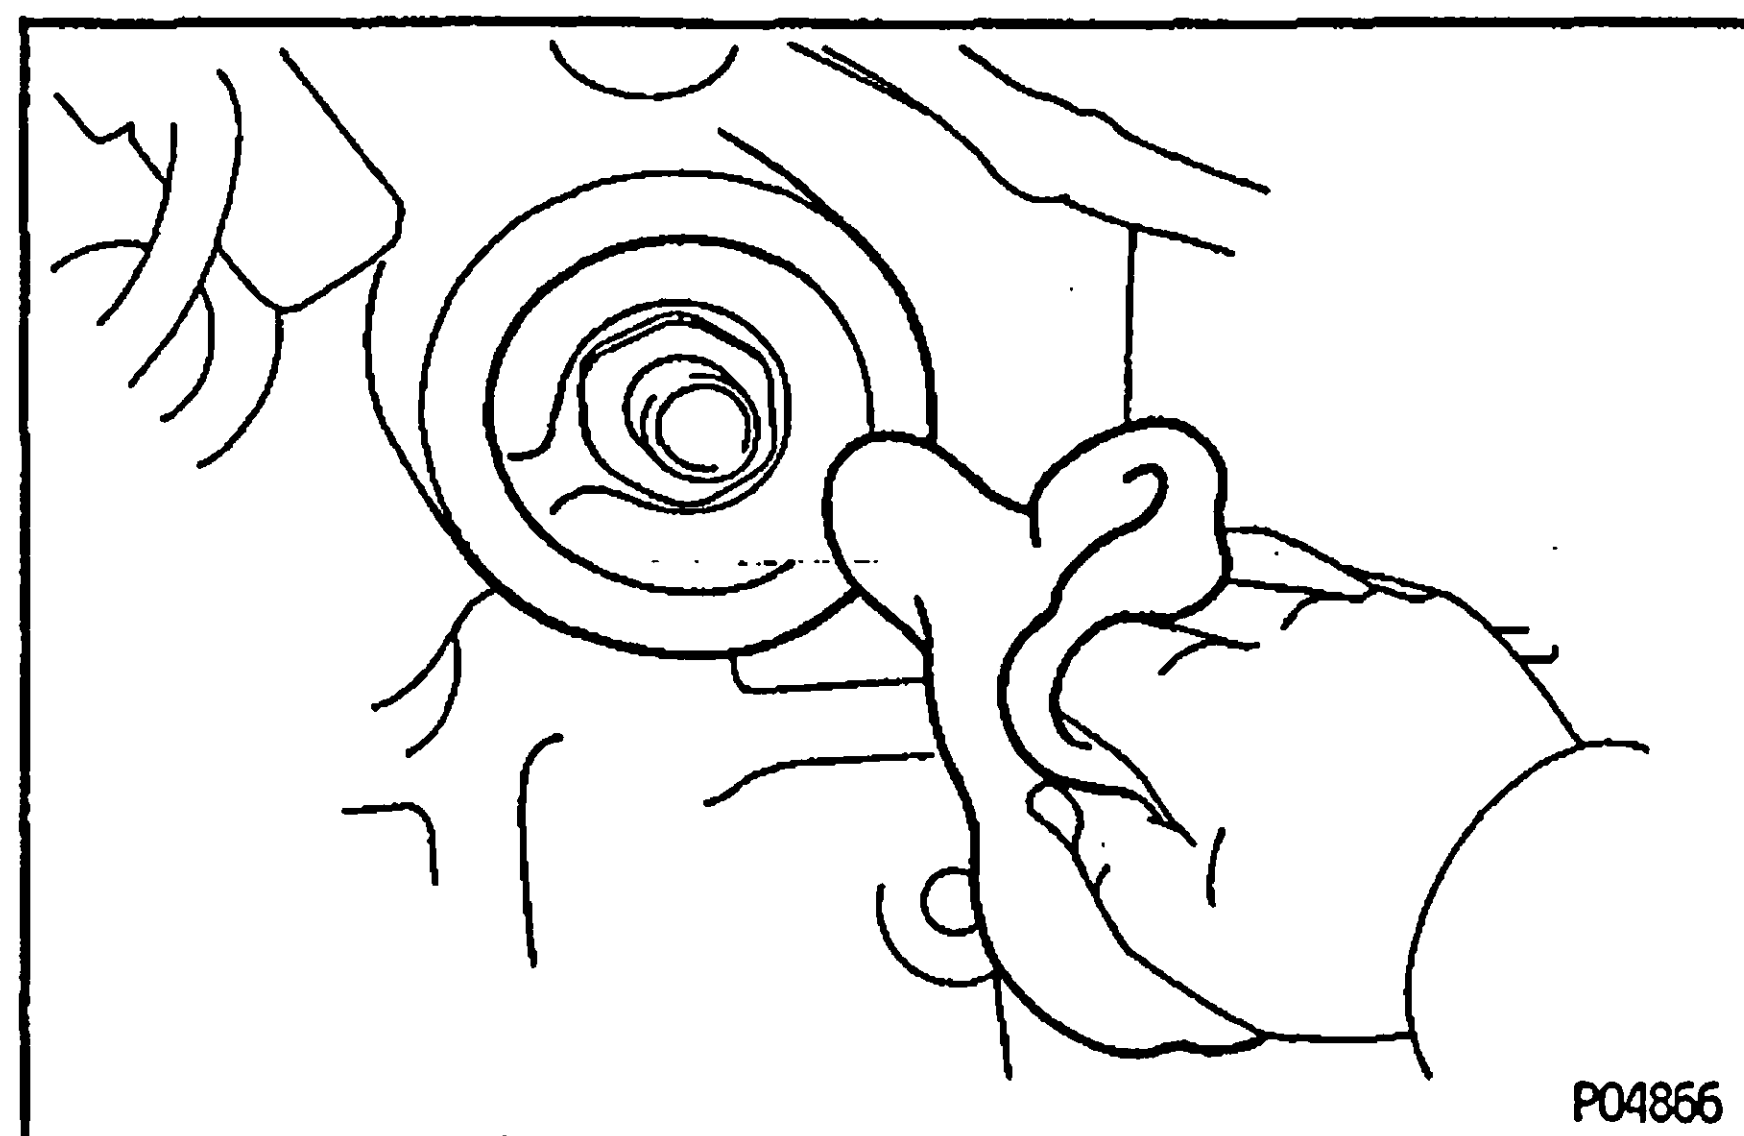

EG

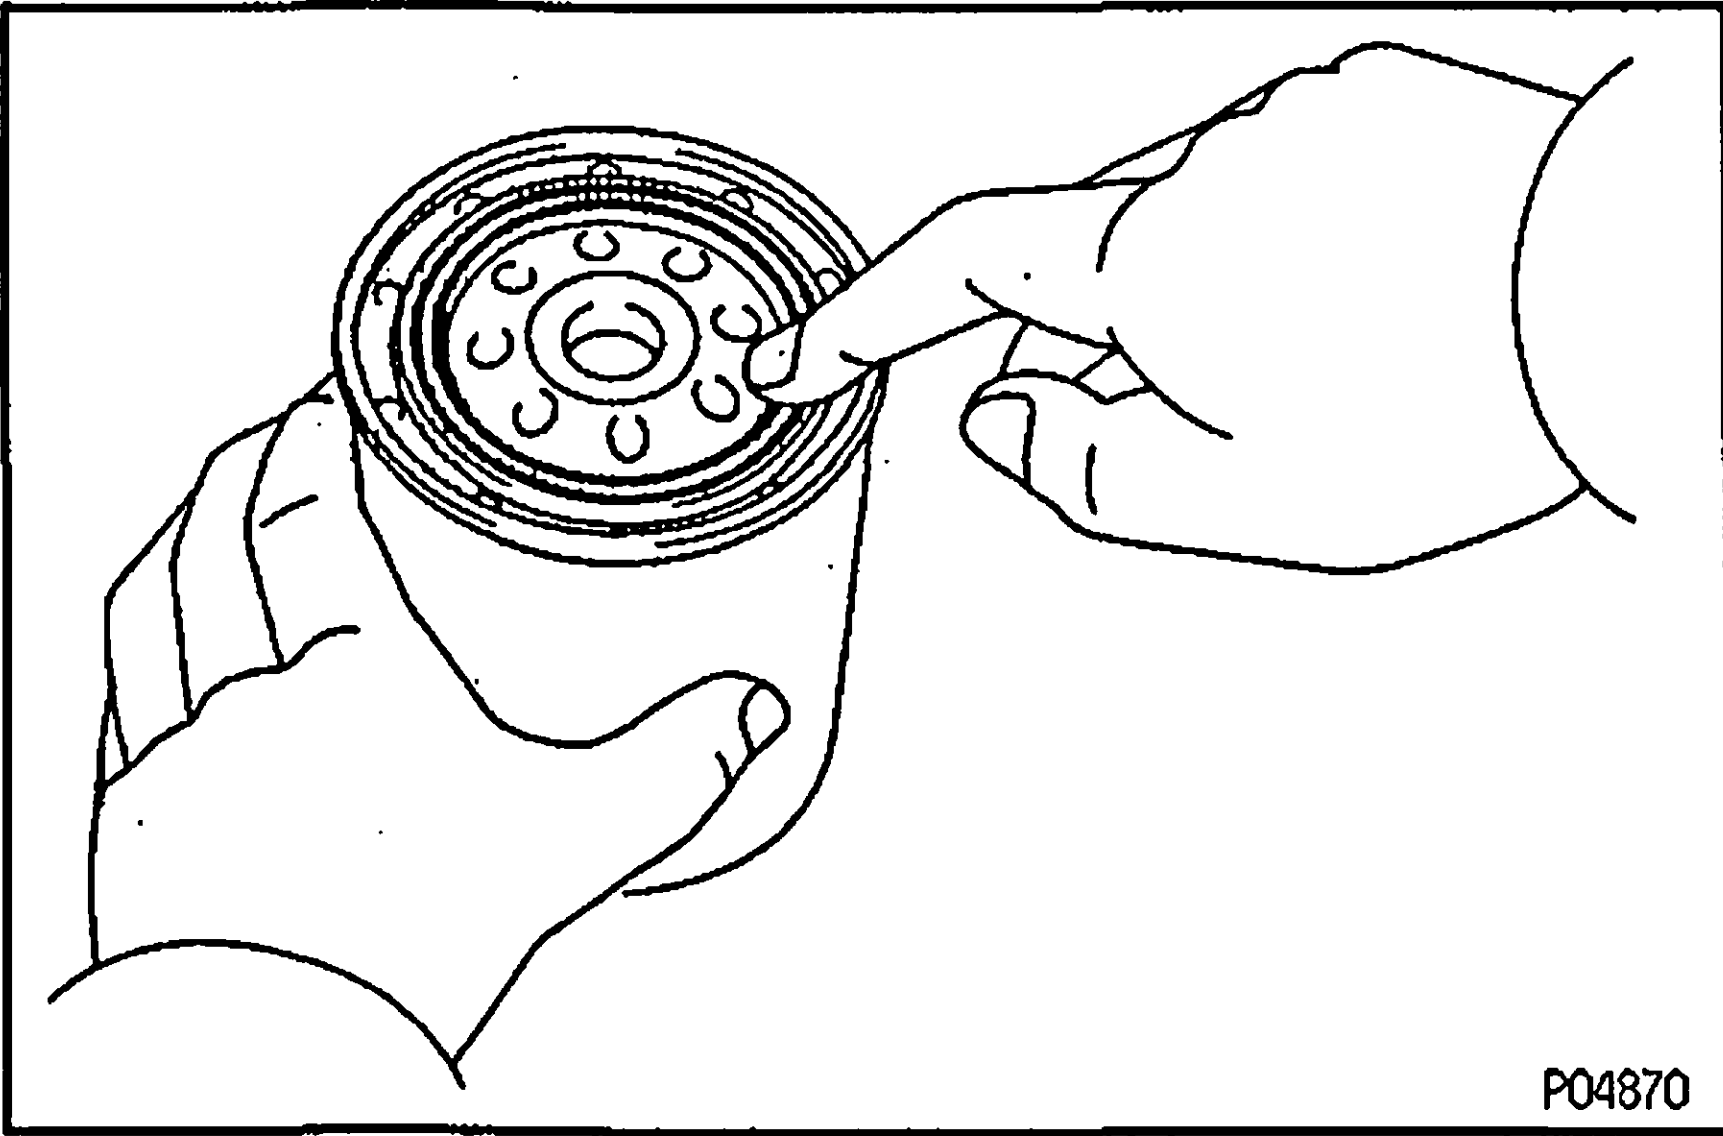

- (c) Apply clean engine oil to the gasket of a new oil filter.

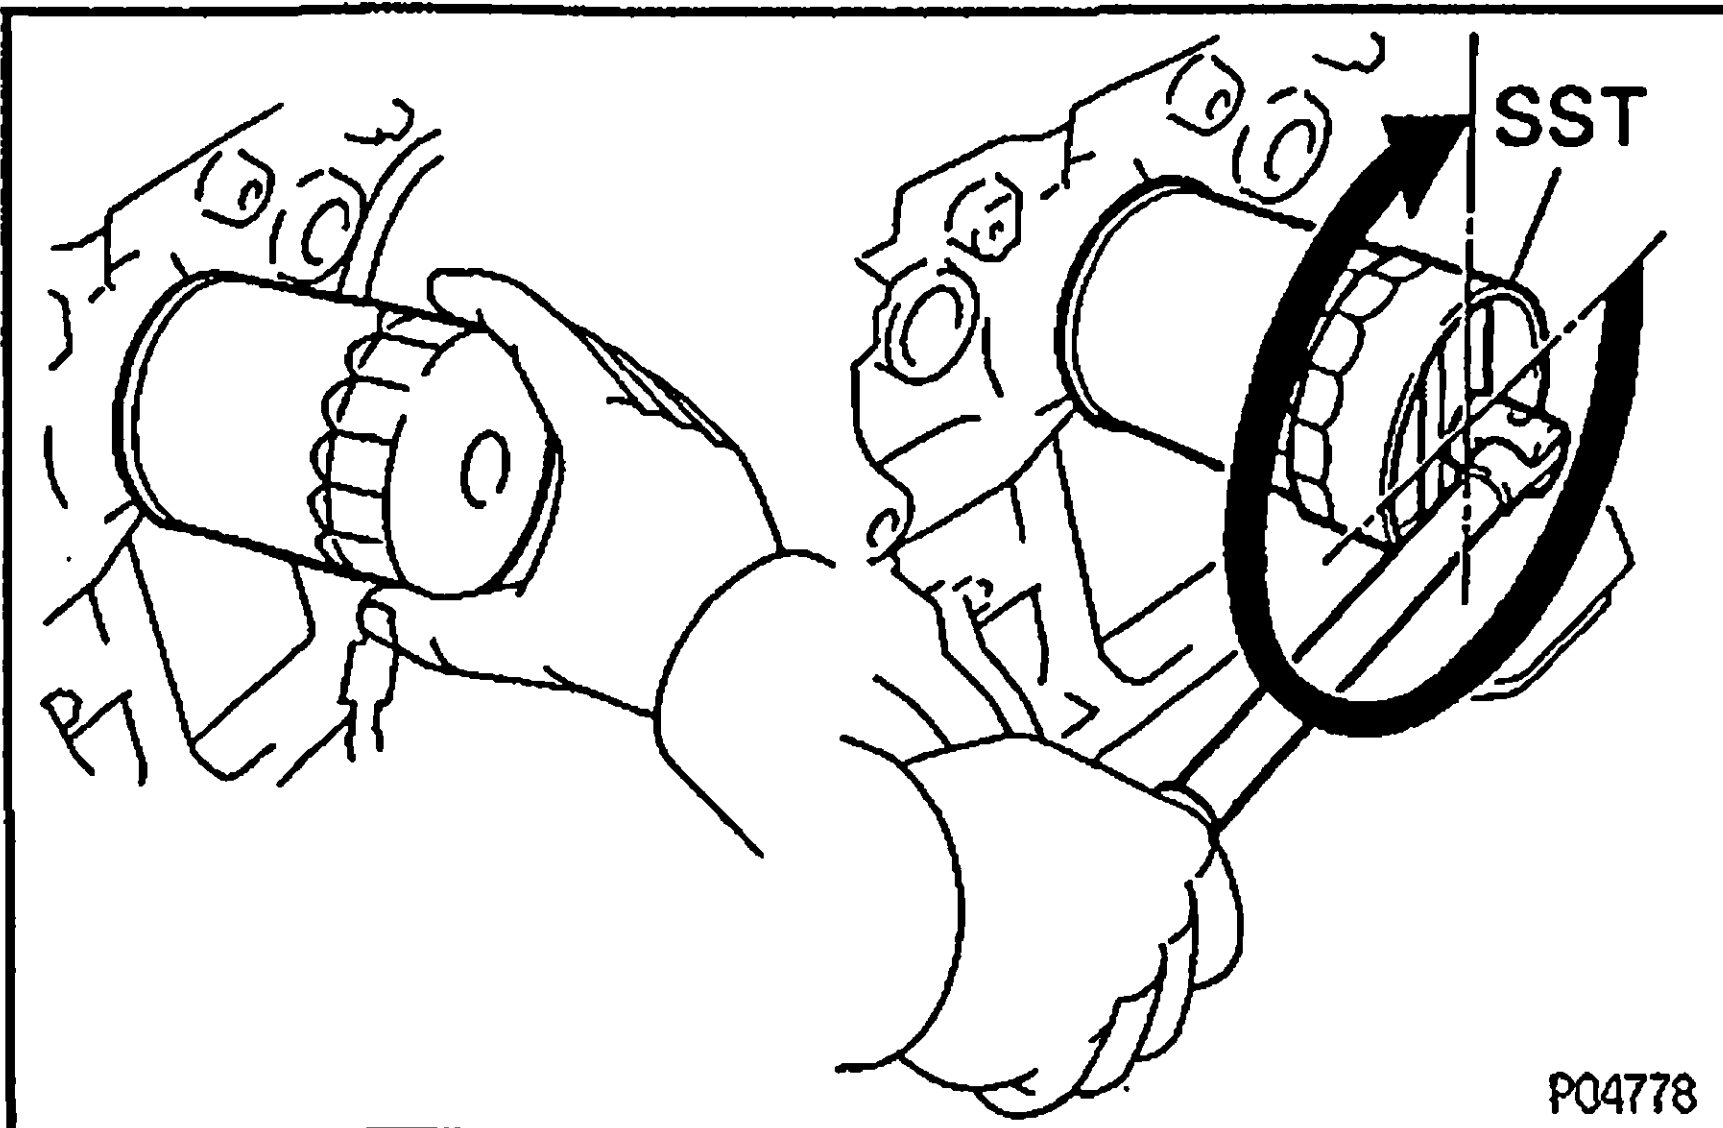

- (d) Lightly screw the oil filter into place, and tighten it until the gasket contacts the seat.
 (e) Using SST, tighten it an additional 3/4 turn.
 SST 09228-44011

3. FILL WITH ENGINE OIL

- (a) Clean and install the oil drain plug with a new gasket.
Torque: 25 N·m (250 kgf·cm, 18 ft·lbf)

- (b) Fill with new engine oil (API grade SG or better).

Capacity:

Drain and refill

w/ Oil filter change

7.6 liters (8.0 US qts, 6.7 Imp. qts)

w/o Oil filter change

7.1 liters (7.5 US qts, 6.2 Imp. qts)

Dry fill

8.0 liters (8.5 US qts, 7.0 Imp. qts)

- (c) Reinstall the oil filler cap.

4. START ENGINE AND CHECK FOR LEAKS


5. RECHECK ENGINE OIL LEVEL

OIL PUMP

OIL PUMP REMOVAL

EGONN-01


HINT: When repairing the oil pump, the oil pan and strainer should be removed and cleaned.

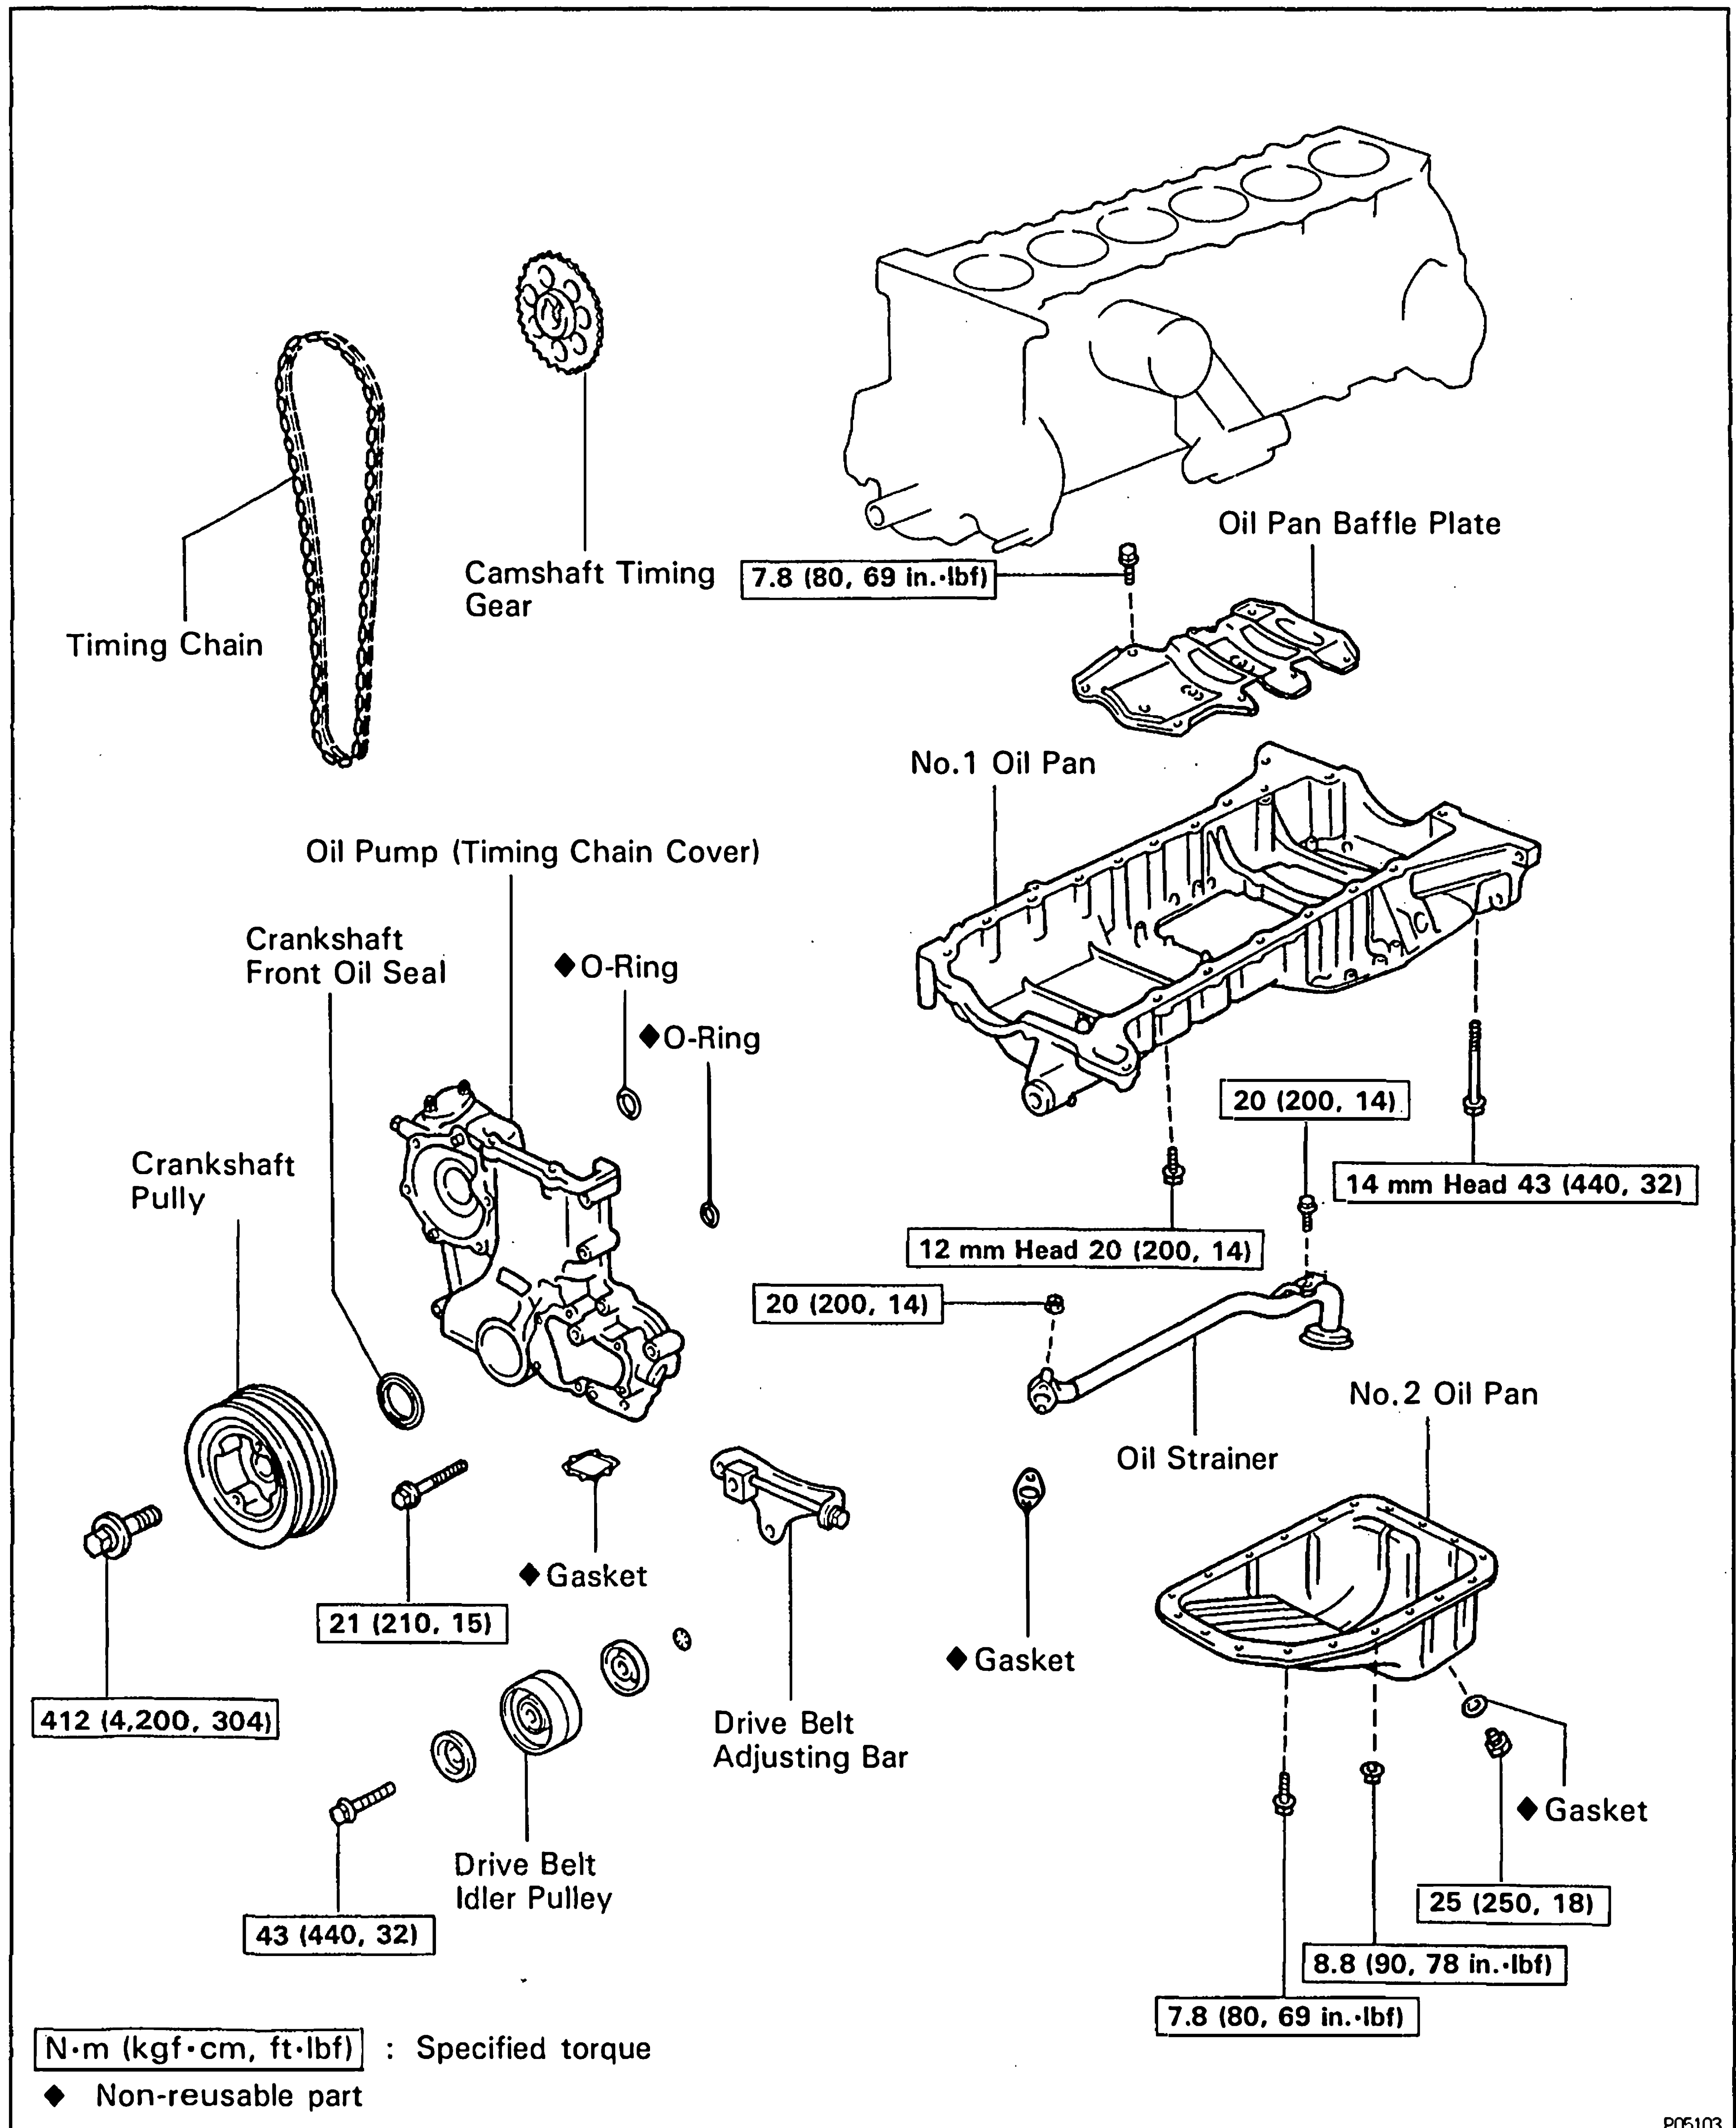


EG

EG

1. DRAIN ENGINE OIL
2. REMOVE WATER PUMP
3. REMOVE CYLINDER HEAD

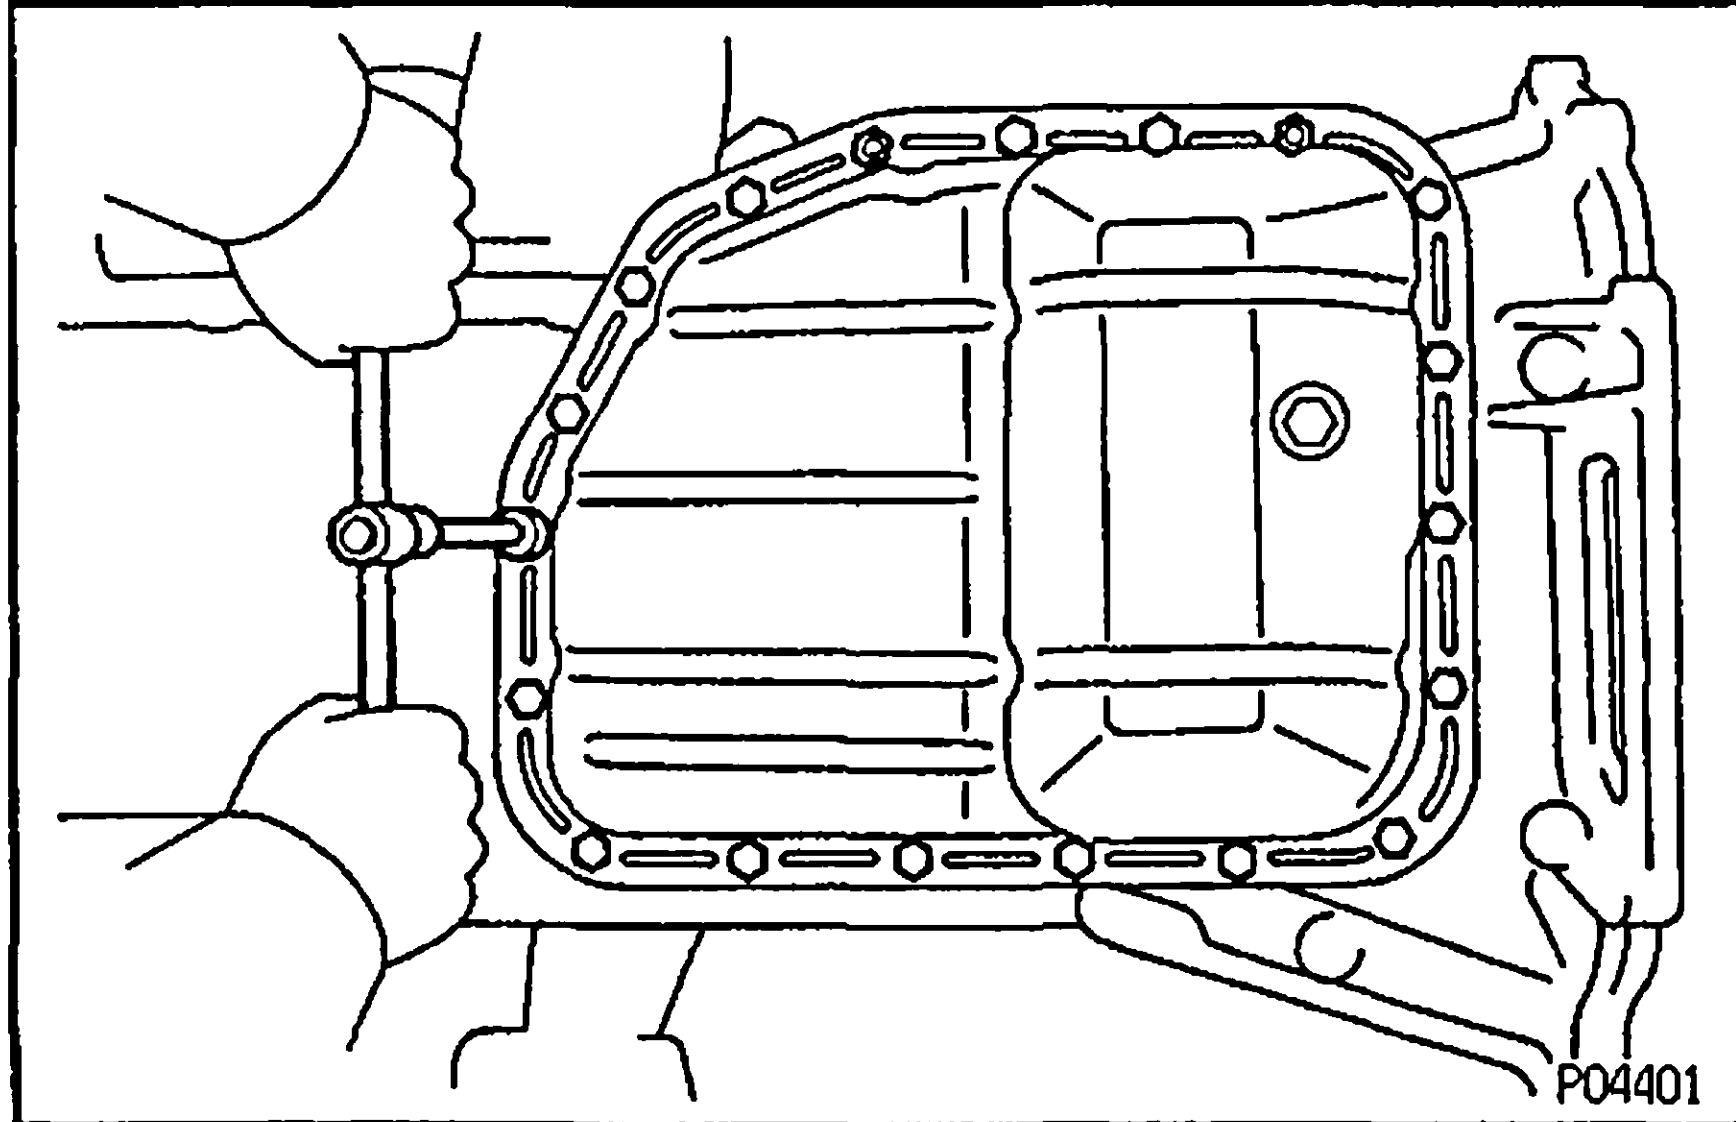

4. REMOVE NO.2 OIL PAN
 - (a) Remove the 17 mounting bolts and two nuts.

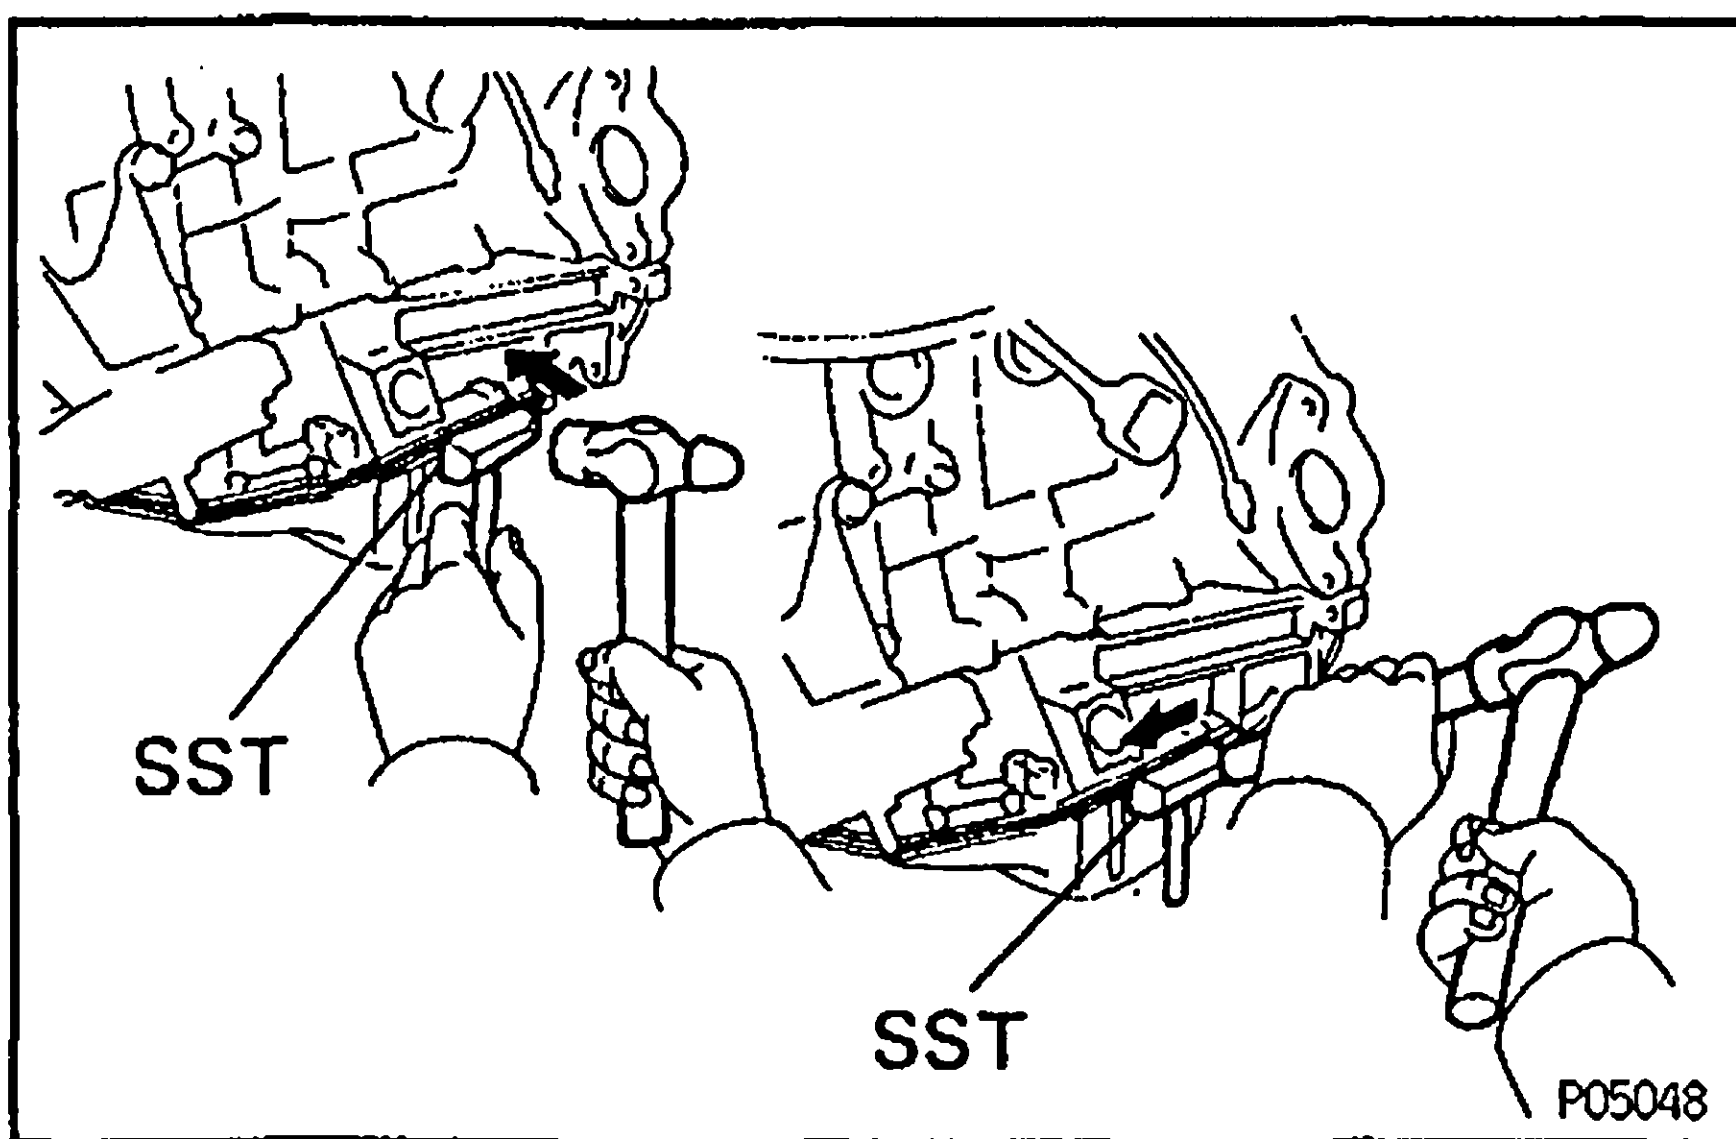


- (b) Insert the blade of SST between the No.1 and No.2 oil pans, cut off applied sealer and remove the No.1 oil pan.


SST 09032-00100

NOTICE:

- Be careful not to damage the No.2 oil pan contact surface of the No.1 oil pan.
- Be careful not to damage the oil pan flange.

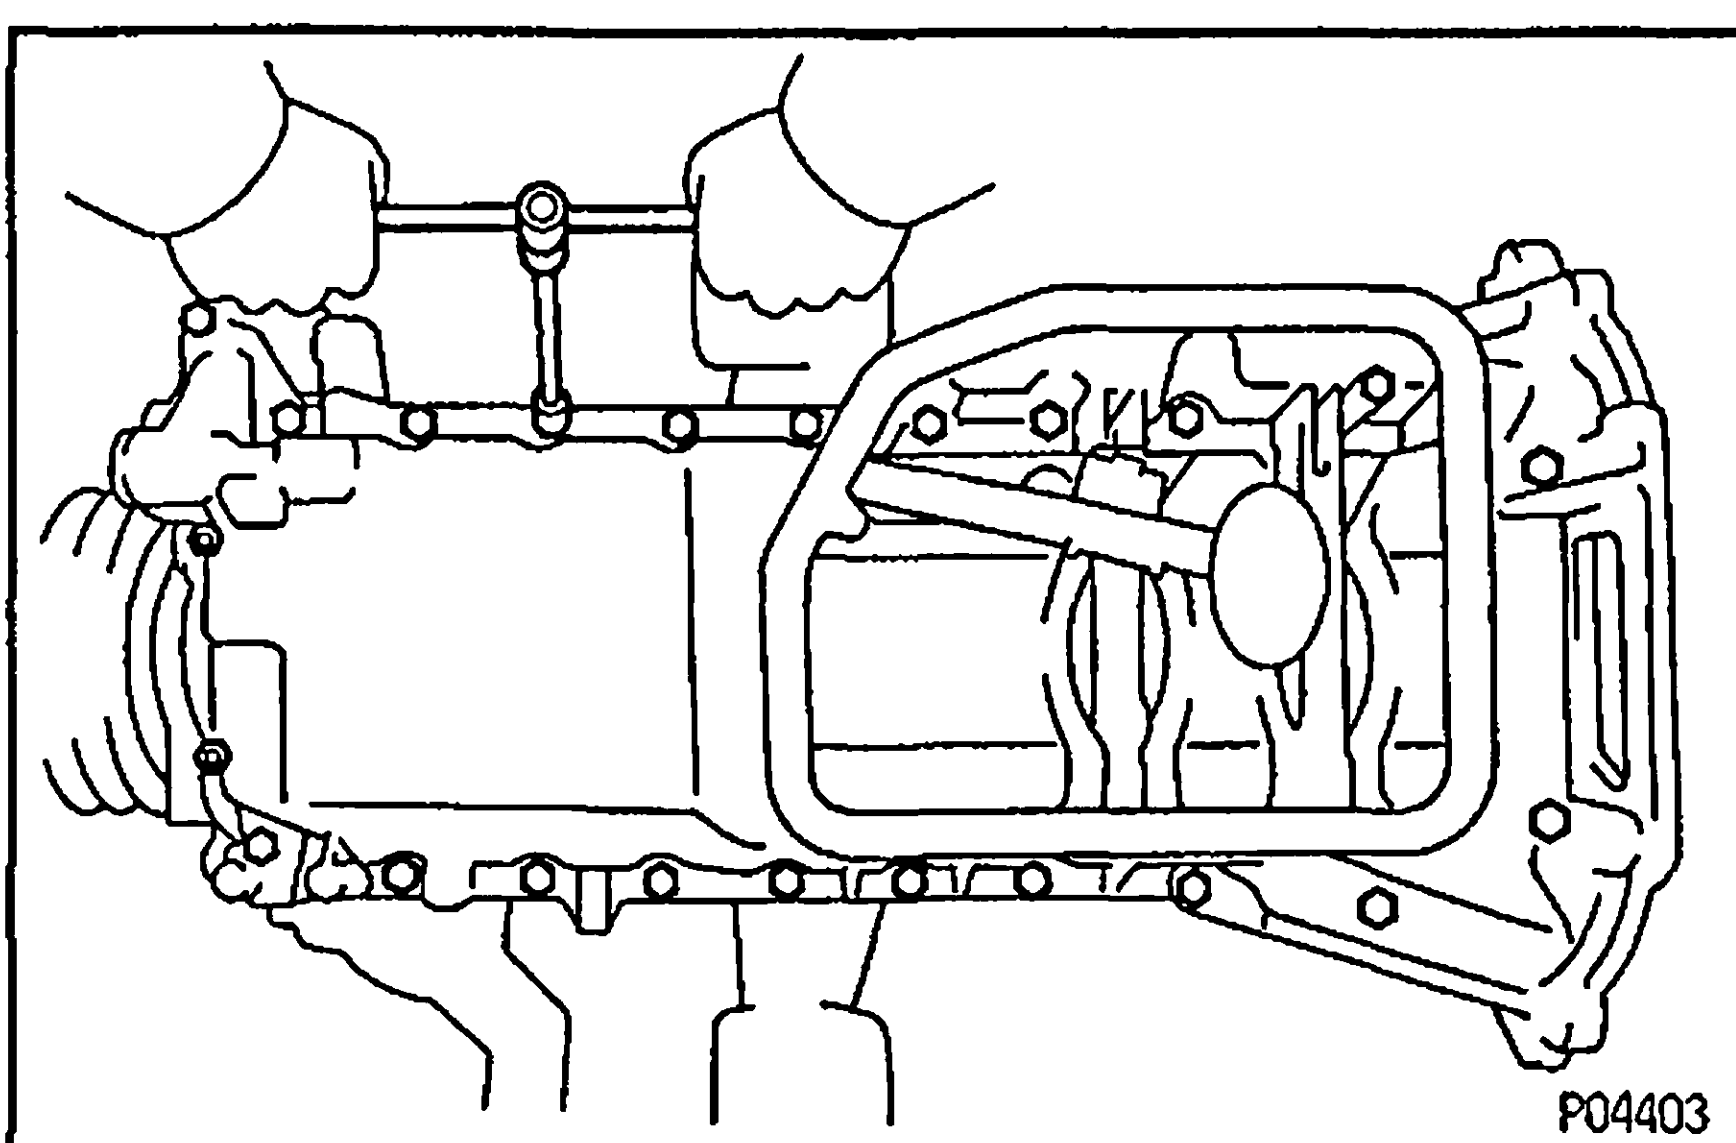


5. REMOVE NO.1 OIL PAN
 - (a) Remove the 21 mounting bolts and two nuts.

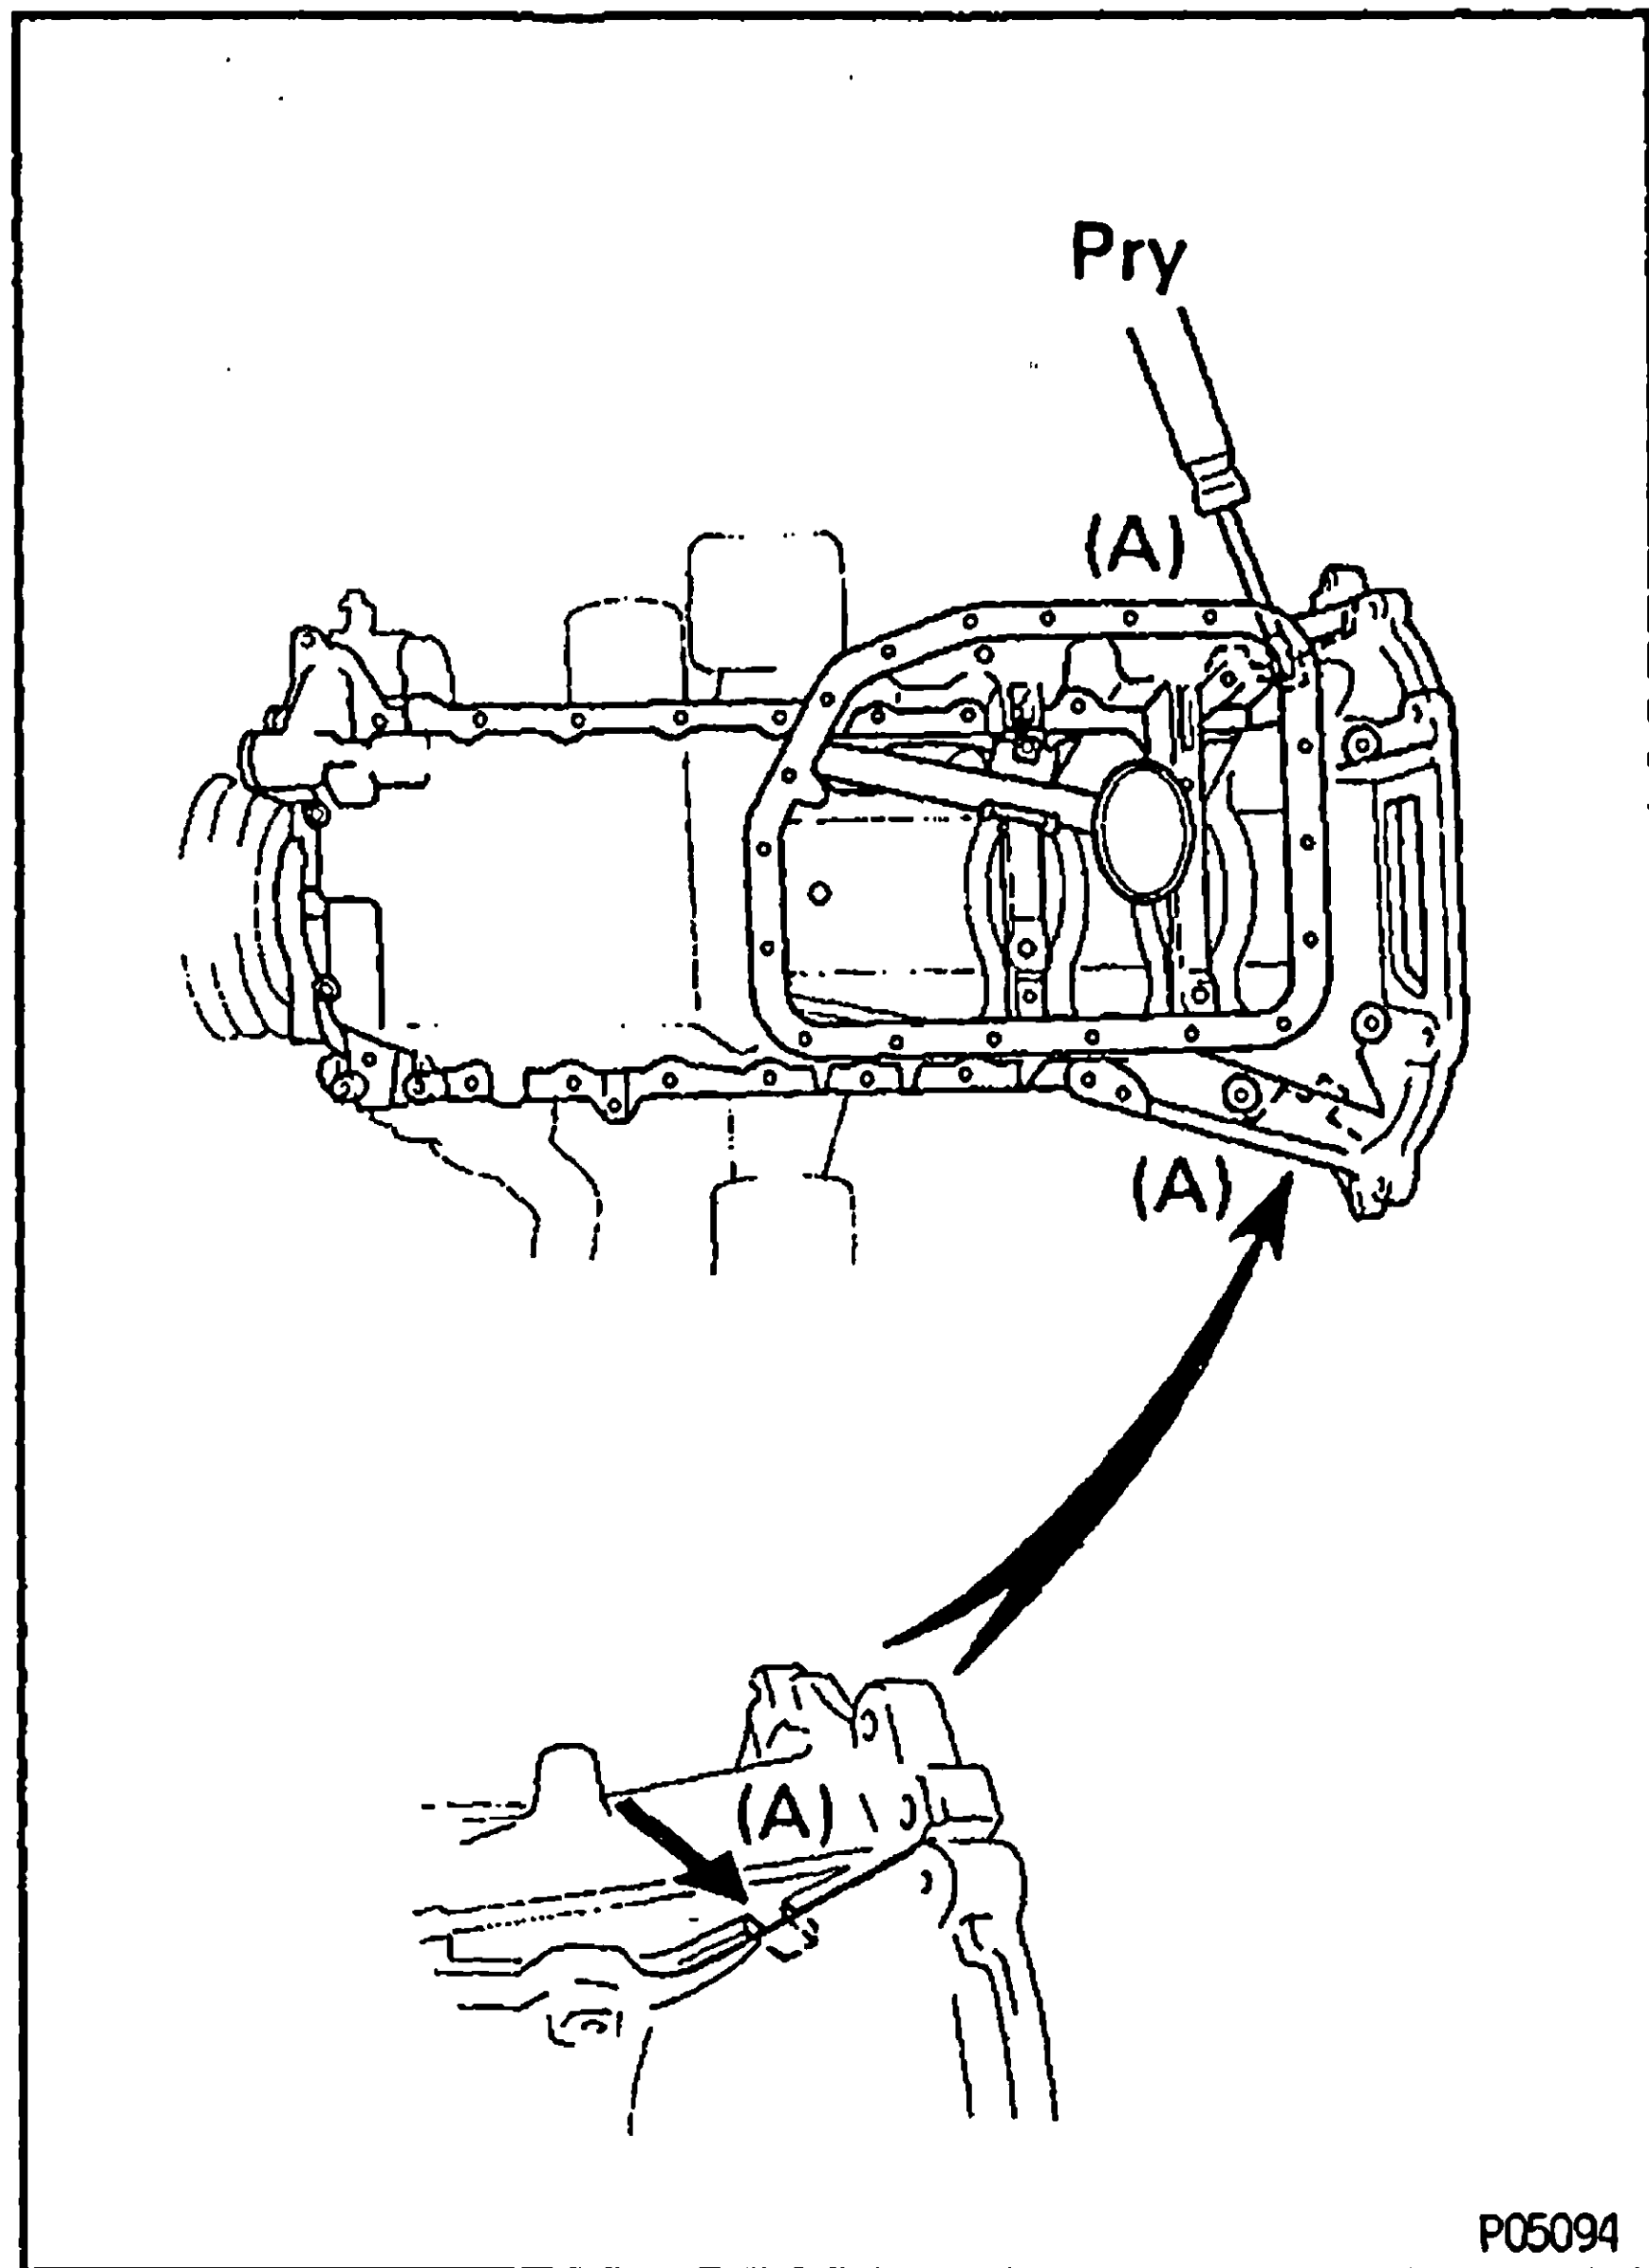

- (b) Remove the No.1 oil pan by prying the portions (A) between the cylinder block and No.1 oil pan with a screwdriver.


NOTICE: Be careful not to damage the contact surfaces the cylinder block and No.1 oil pan.

EG

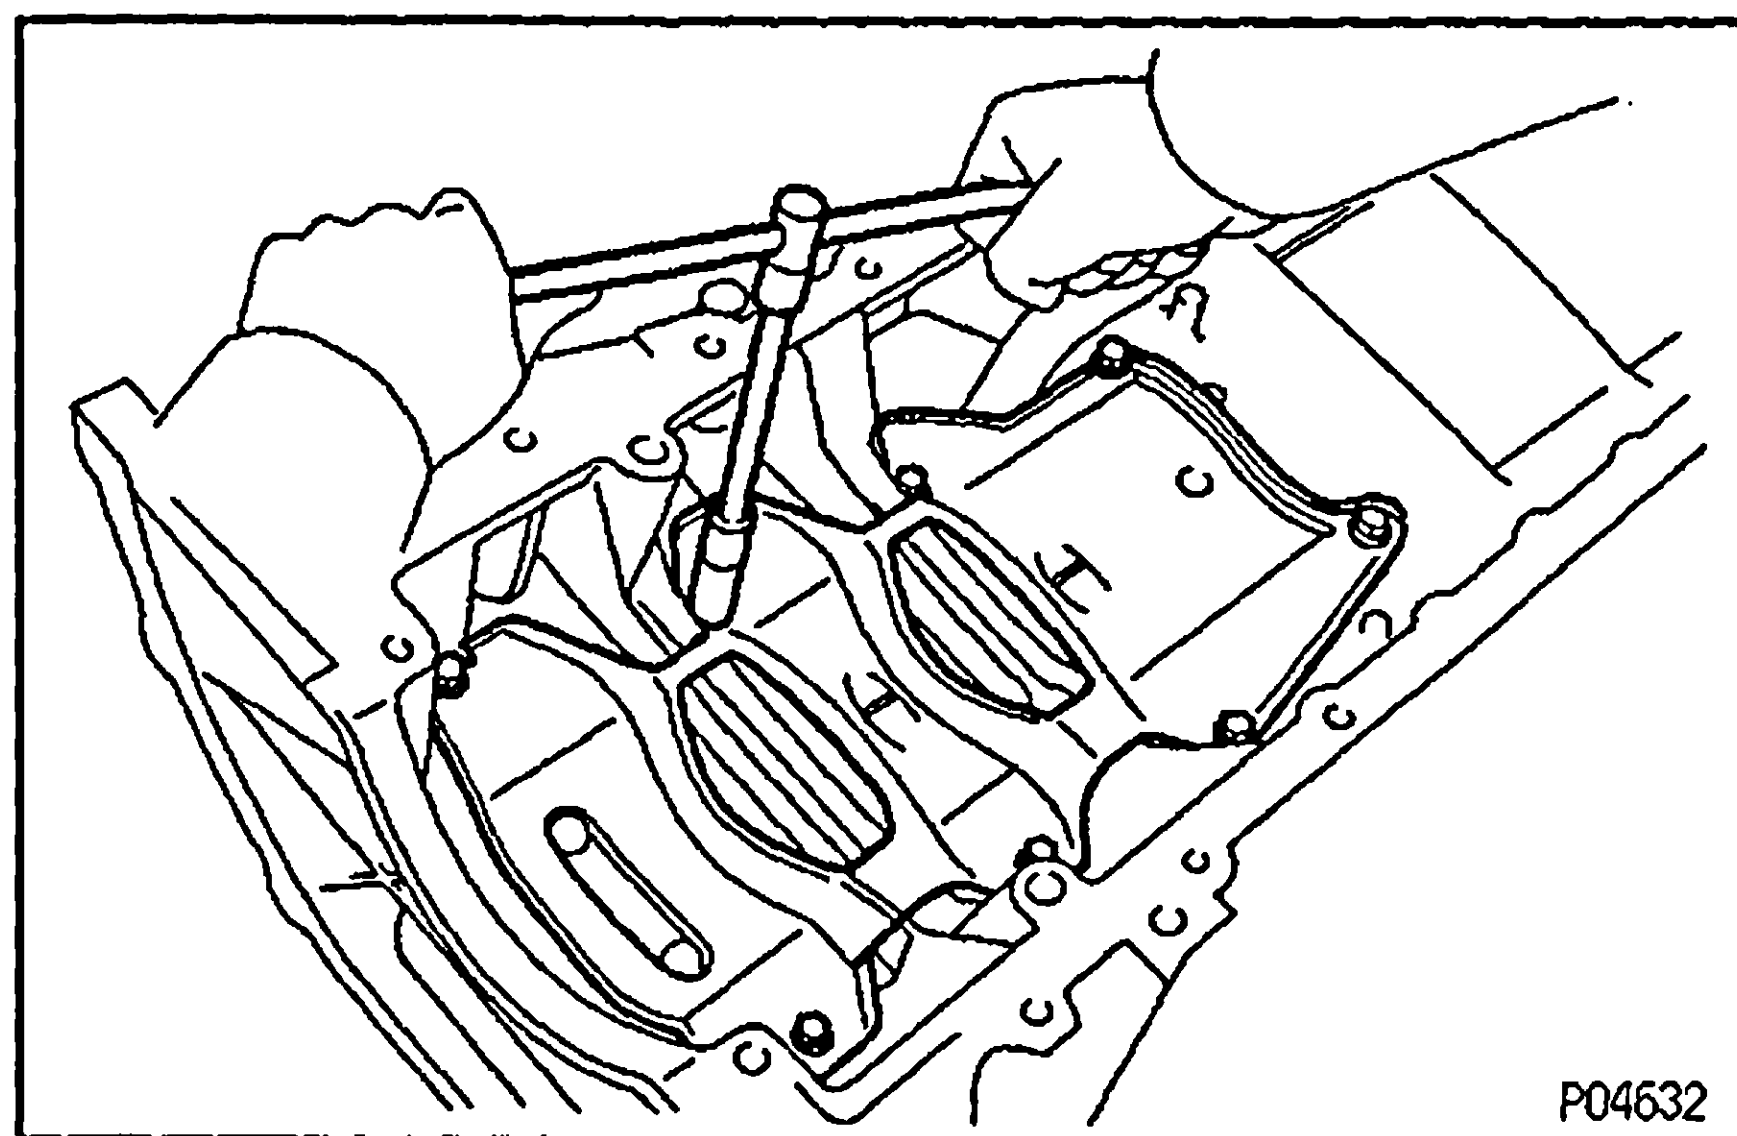


6. REMOVE OIL PAN BAFFLE PLATE

Remove the eight bolts and baffle plate.

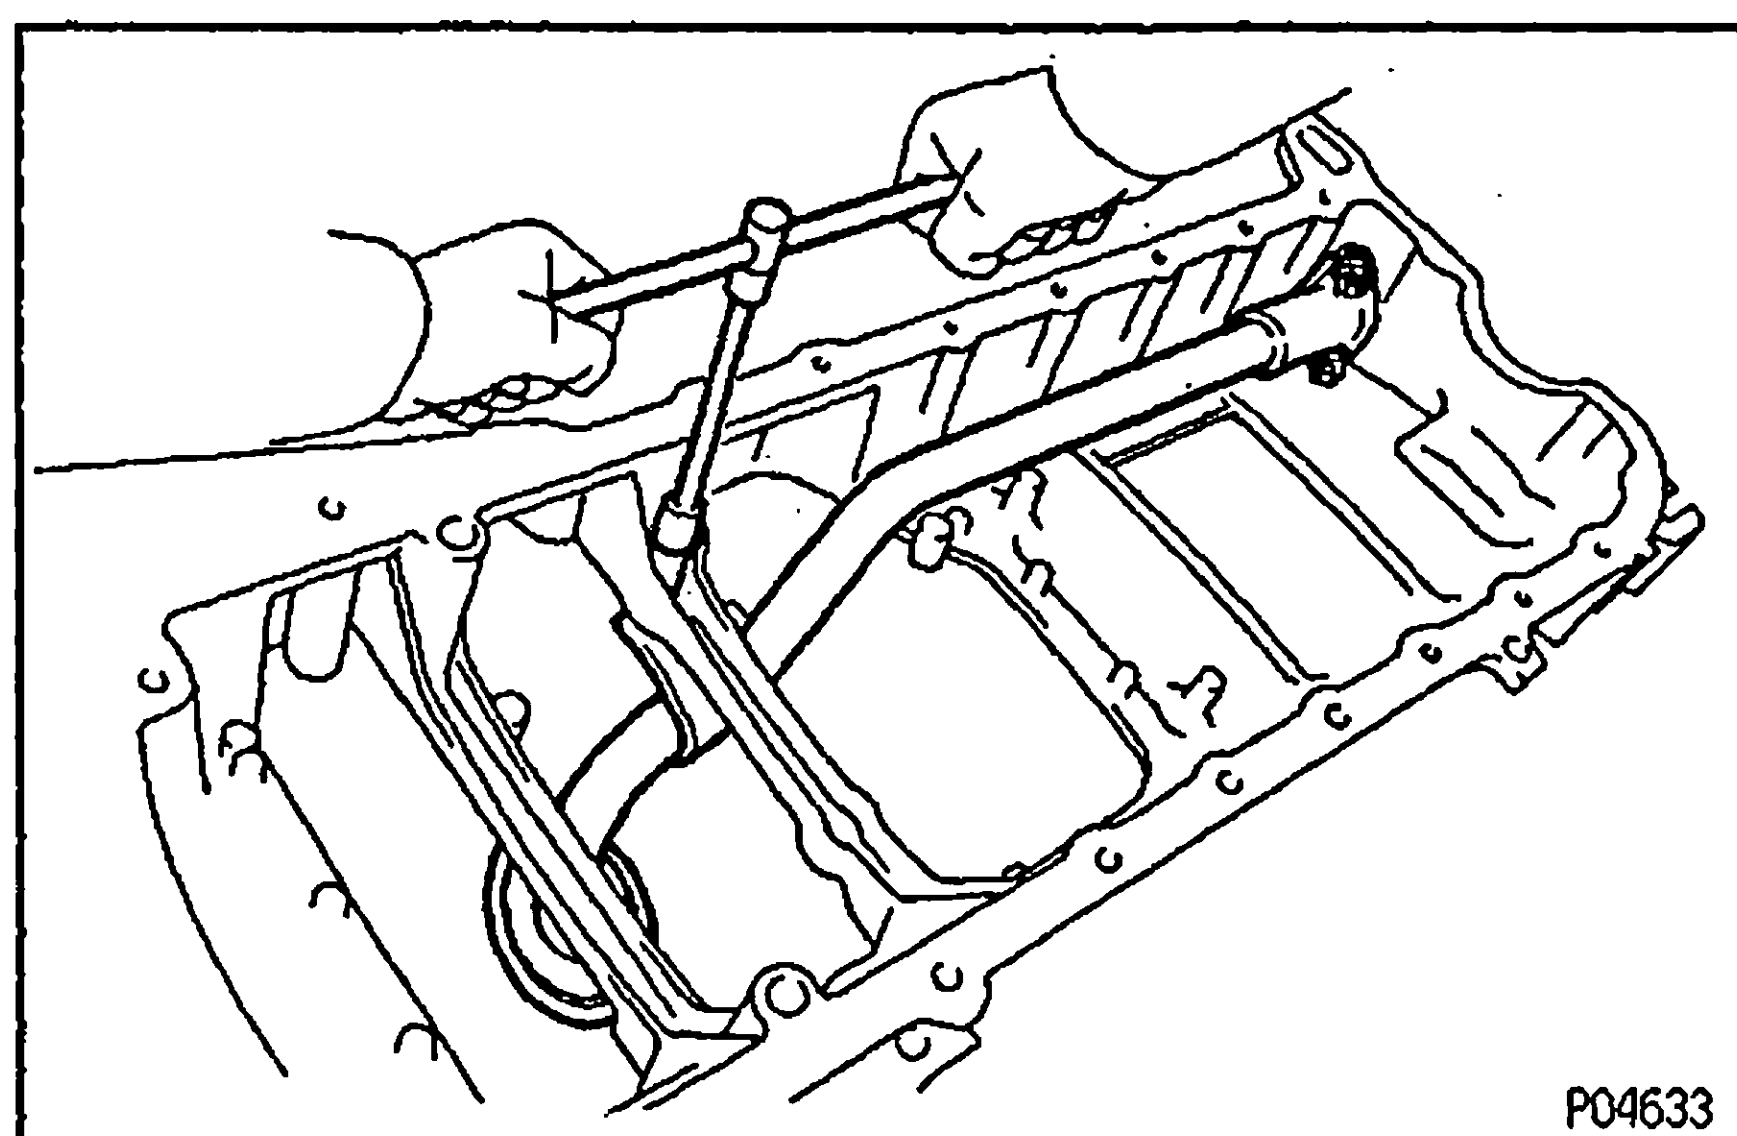


7. REMOVE OIL STRAINER

Remove the bolt, two nuts, oil strainer and gasket.

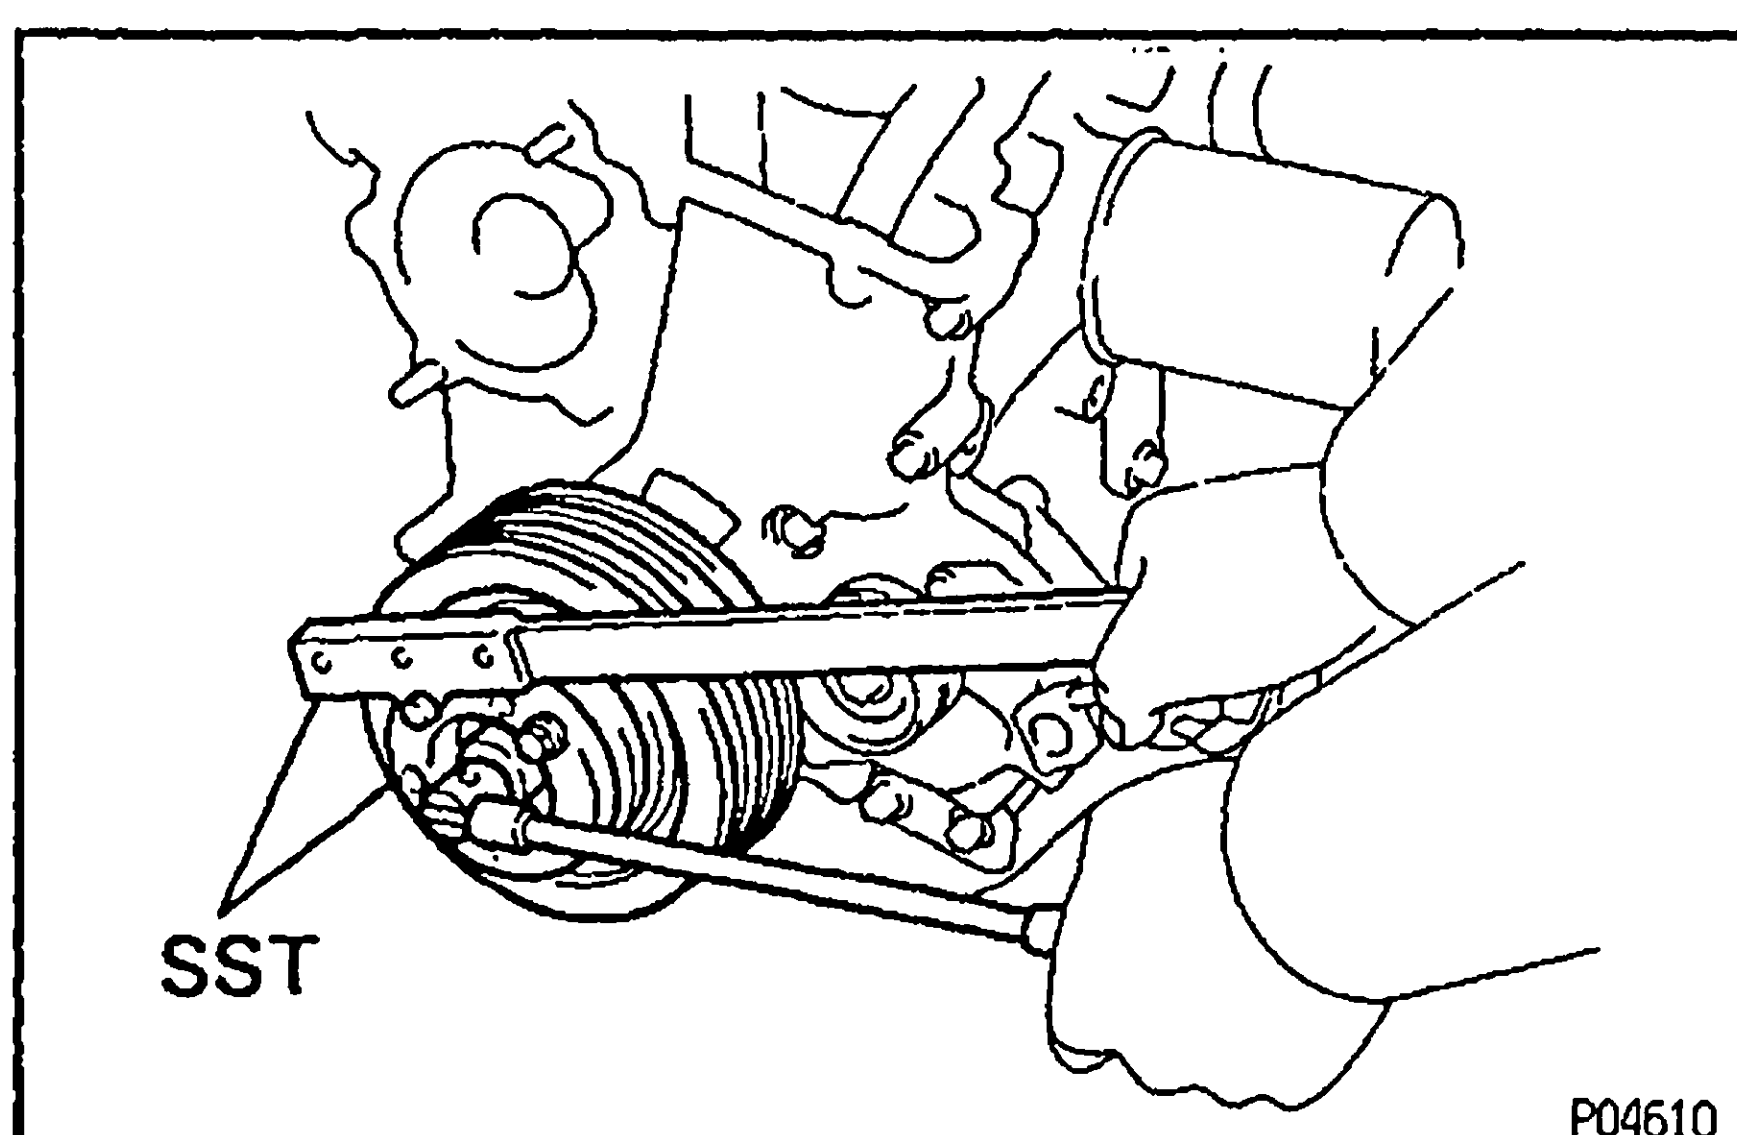

8. REMOVE CRANKSHAFT PULLEY


- (a) Using SST, remove the pulley bolt.
SST 09213-58012, 09330-00021
(b) Remove the crankshaft pulley.

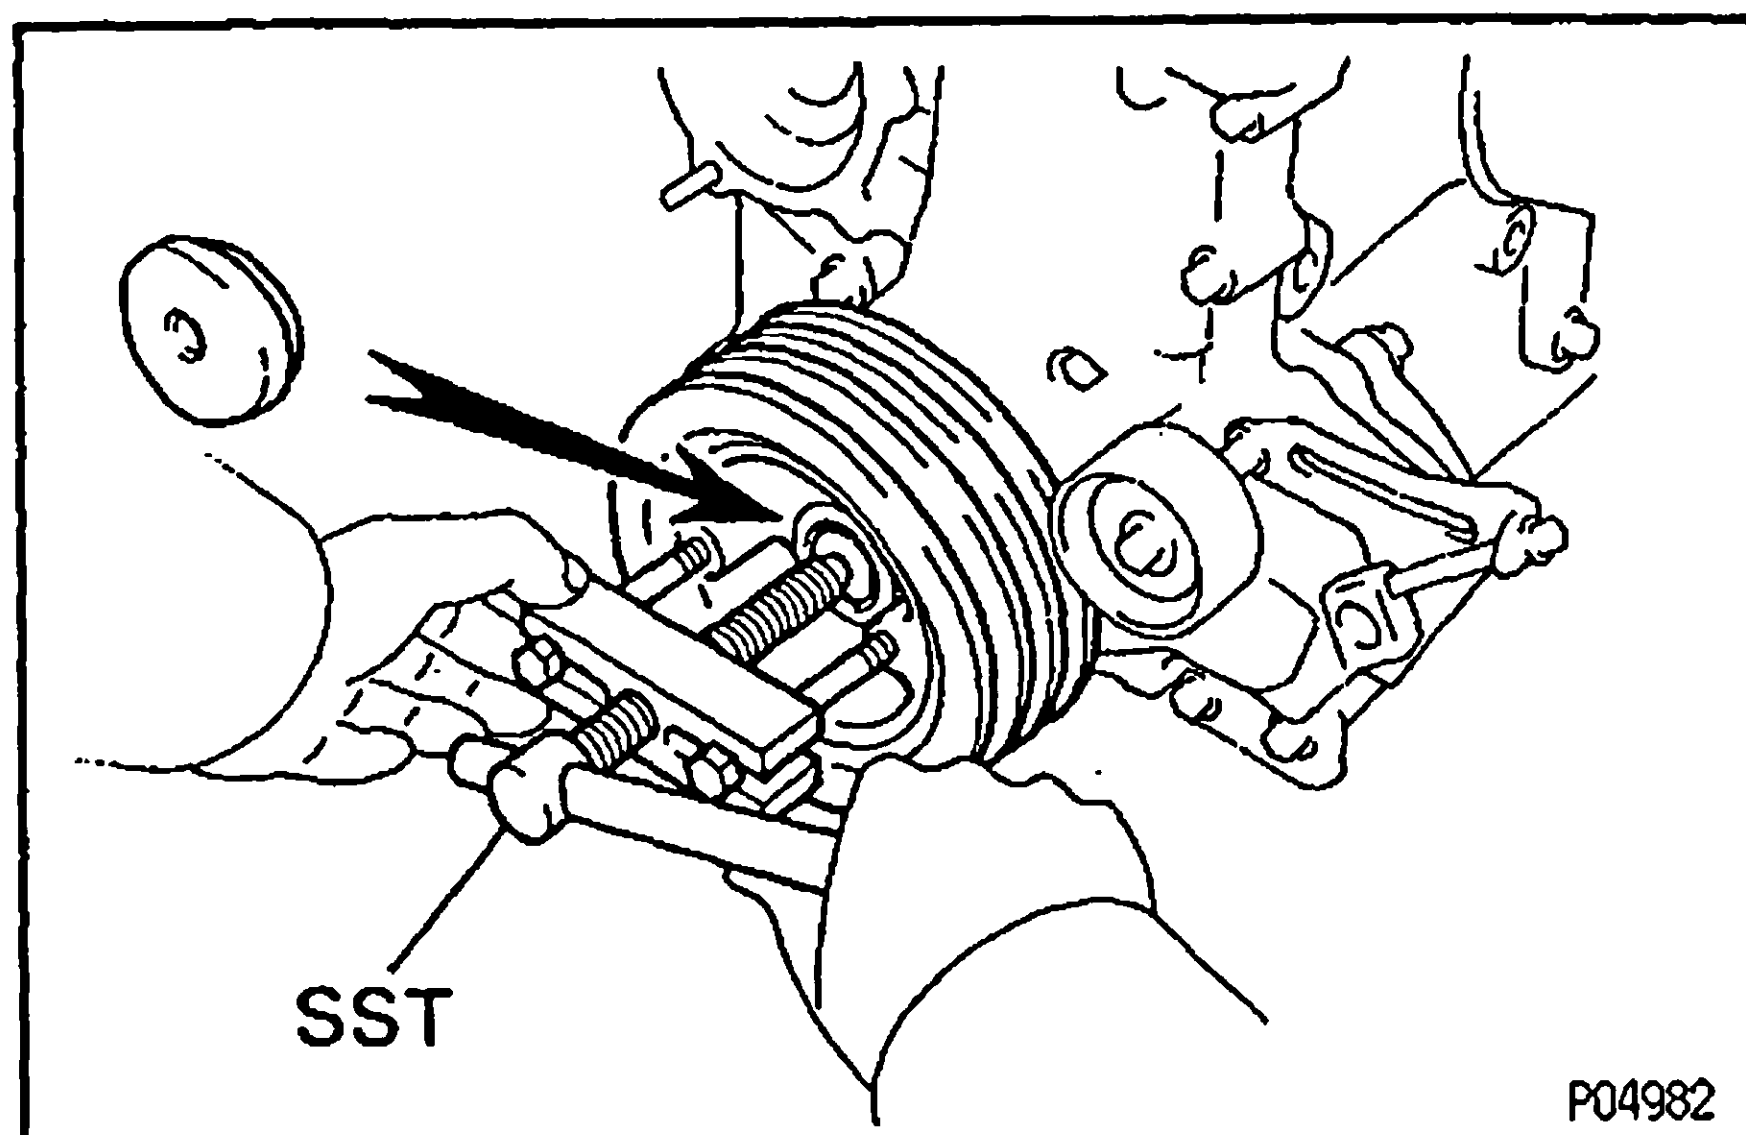

HINT: If necessary, remove the pulley with SST.
SST 09213-60017 (09213-00020, 09213-00030,
09213-00060), 09950-20017


9. REMOVE DRIVE BELT IDLER PULLEY

Remove the bolt and idler pulley.

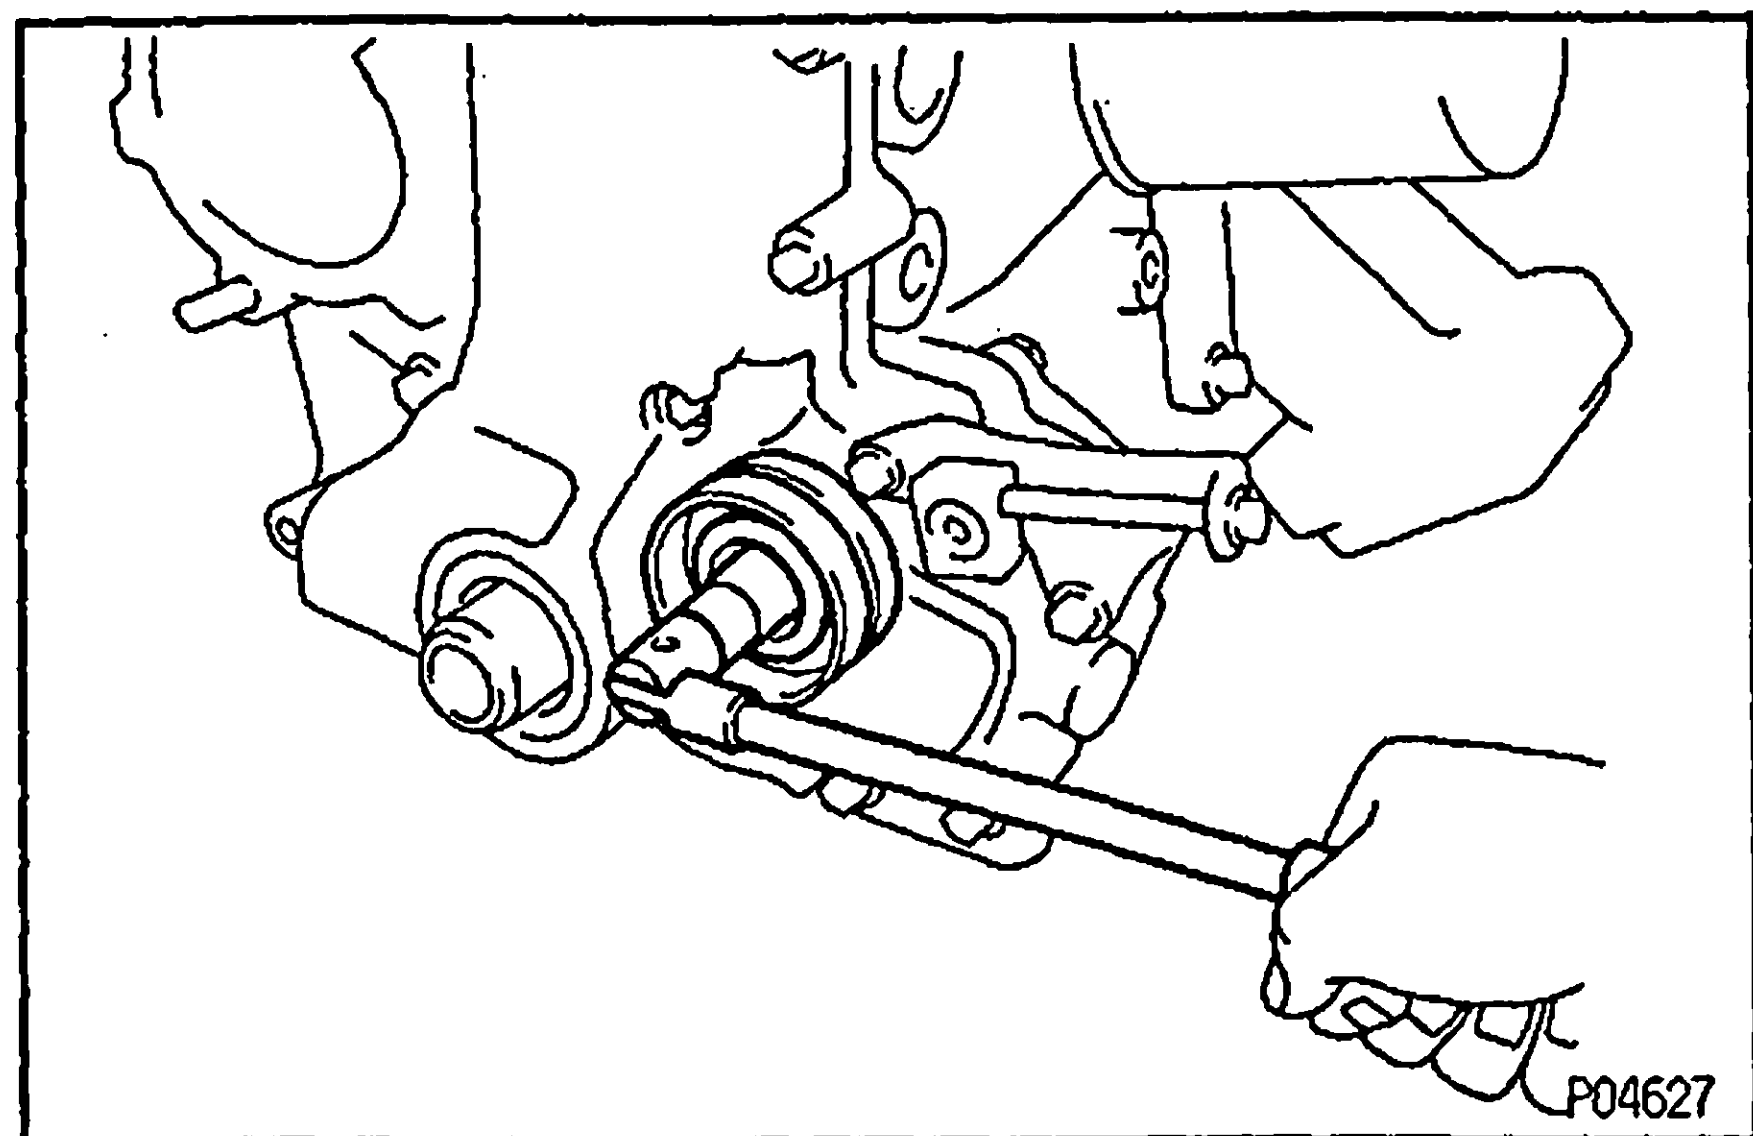

10. REMOVE OIL PUMP (TIMING CHAIN COVER)


(a) Remove the nine mounting bolts, two mounting nuts and drive belt adjusting bar.

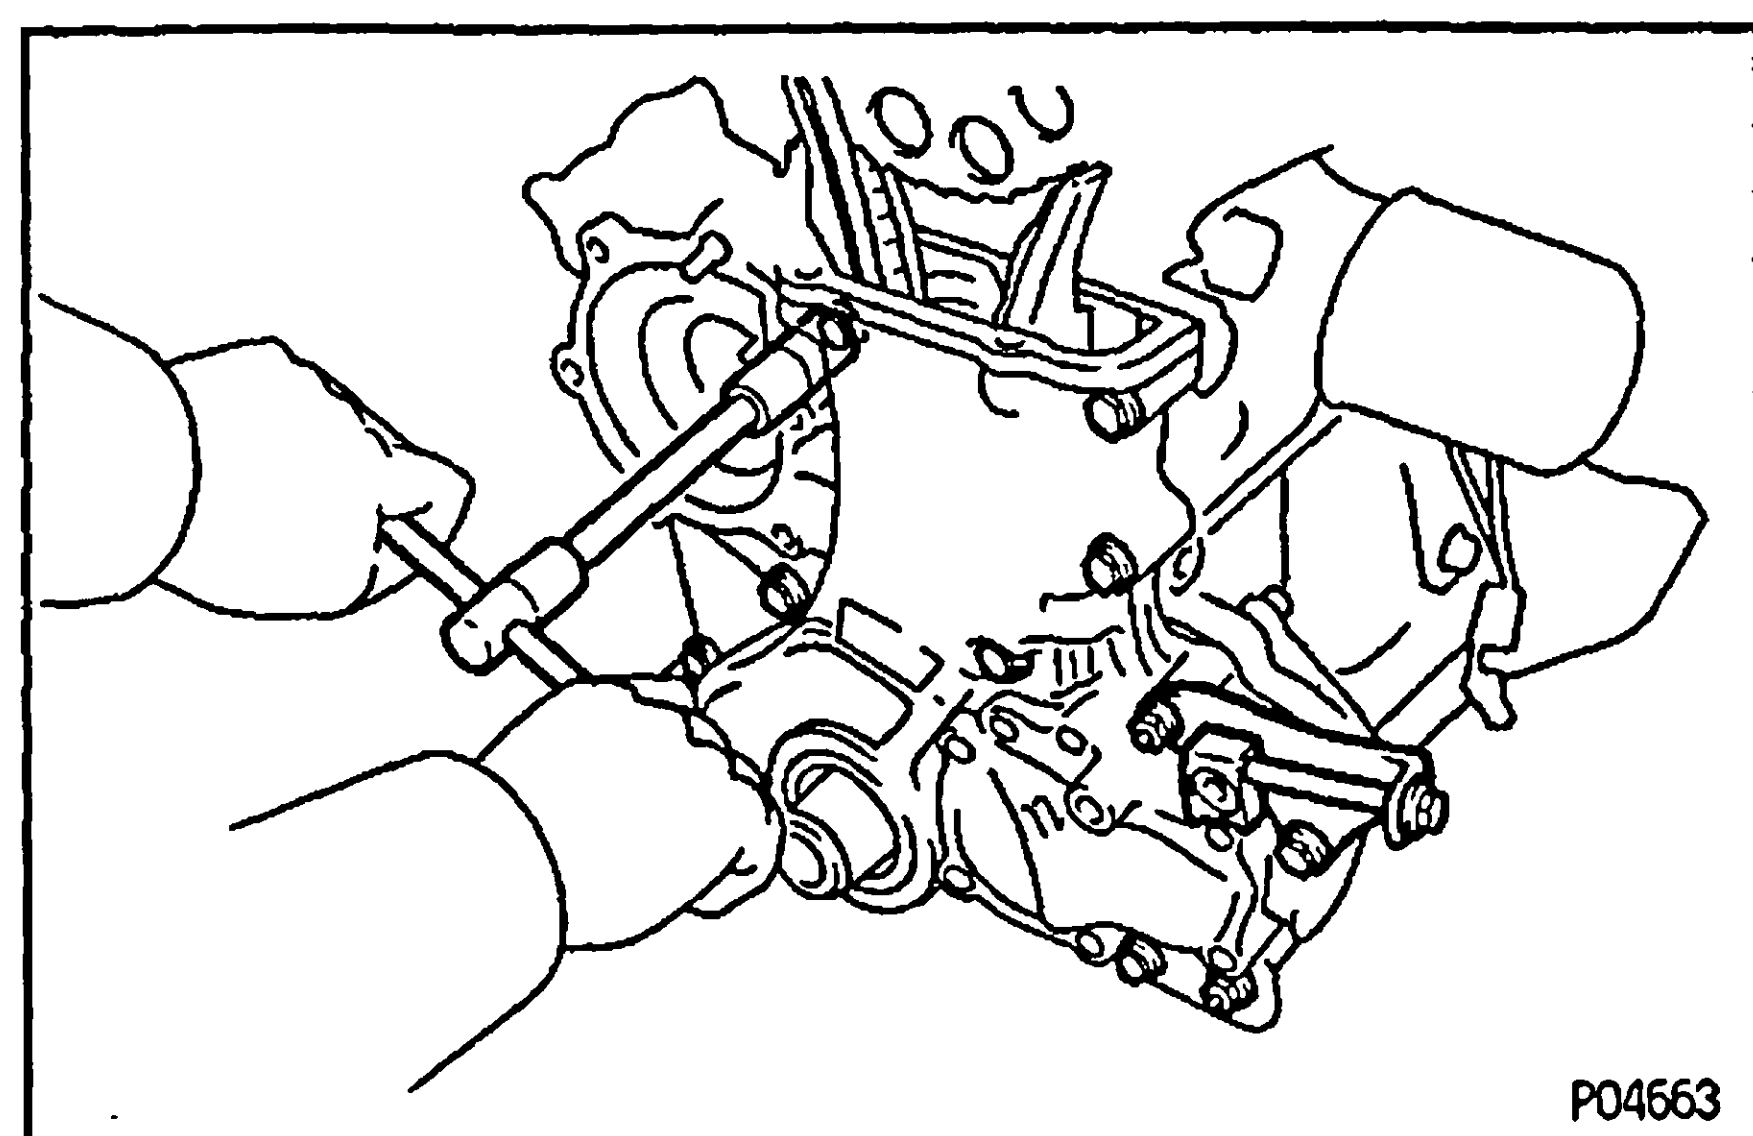

(b) Remove the oil pump by prying the portions between the cylinder block and oil pump with a screwdriver.
NOTICE: Be careful not to damage the contact surfaces of the cylinder block and oil pump.


(c) Remove the O-rings from the oil pump.

(d) Remove the gasket from the oil pump.

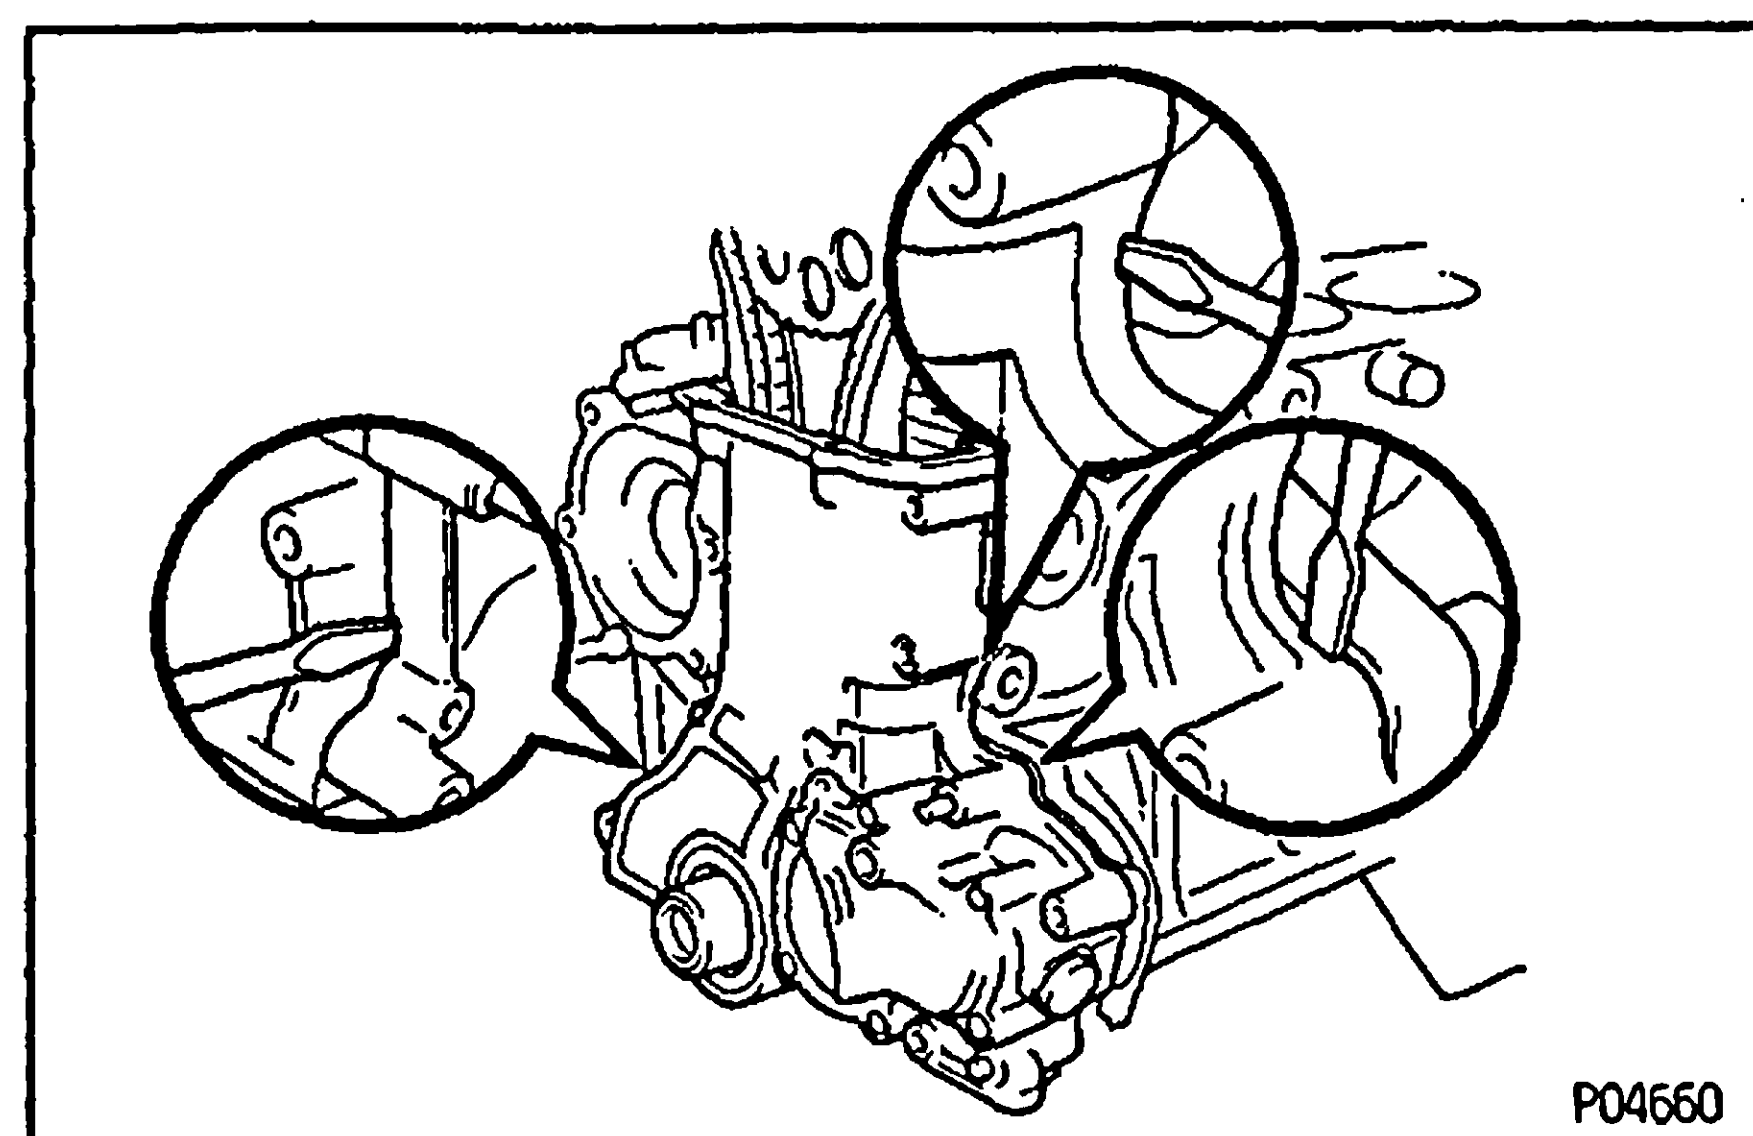

COMPONENTS

EG

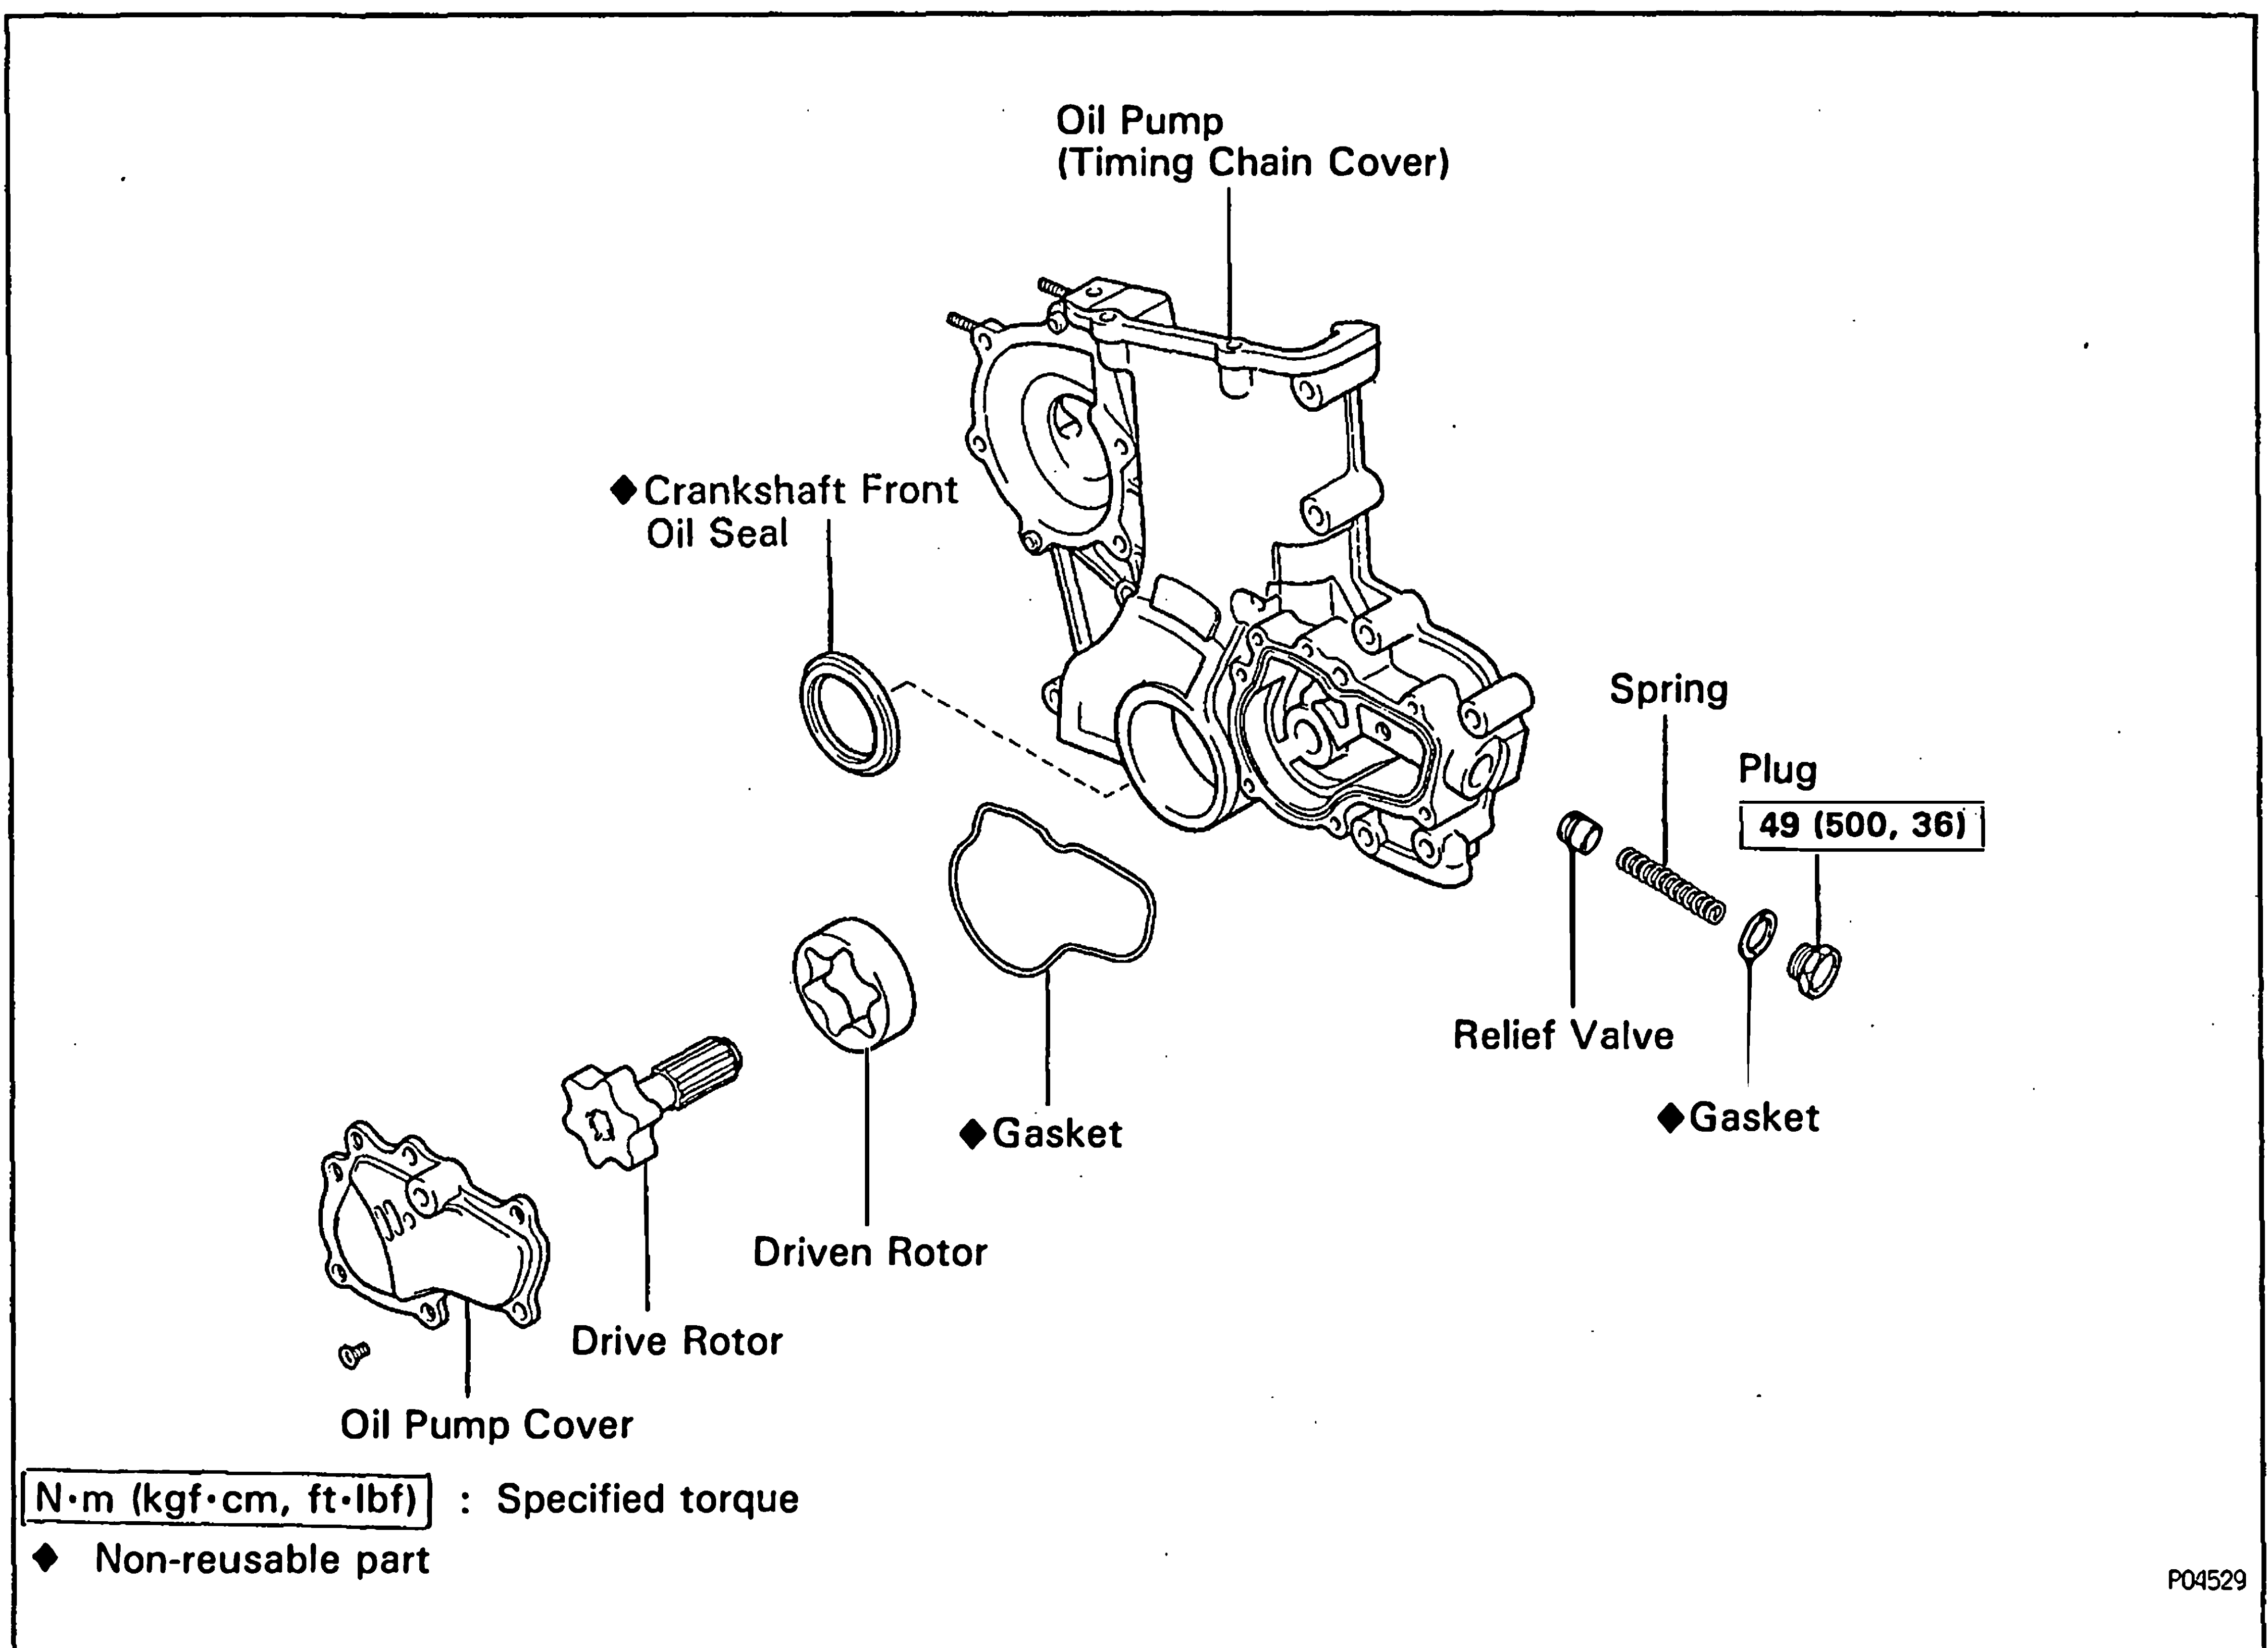


EGONP-01

OIL PUMP DISASSEMBLY


1. REMOVE DRIVE AND DRIVEN ROTORS

Remove the seven screws, pump cover, drive rotor, driven rotor and gasket.

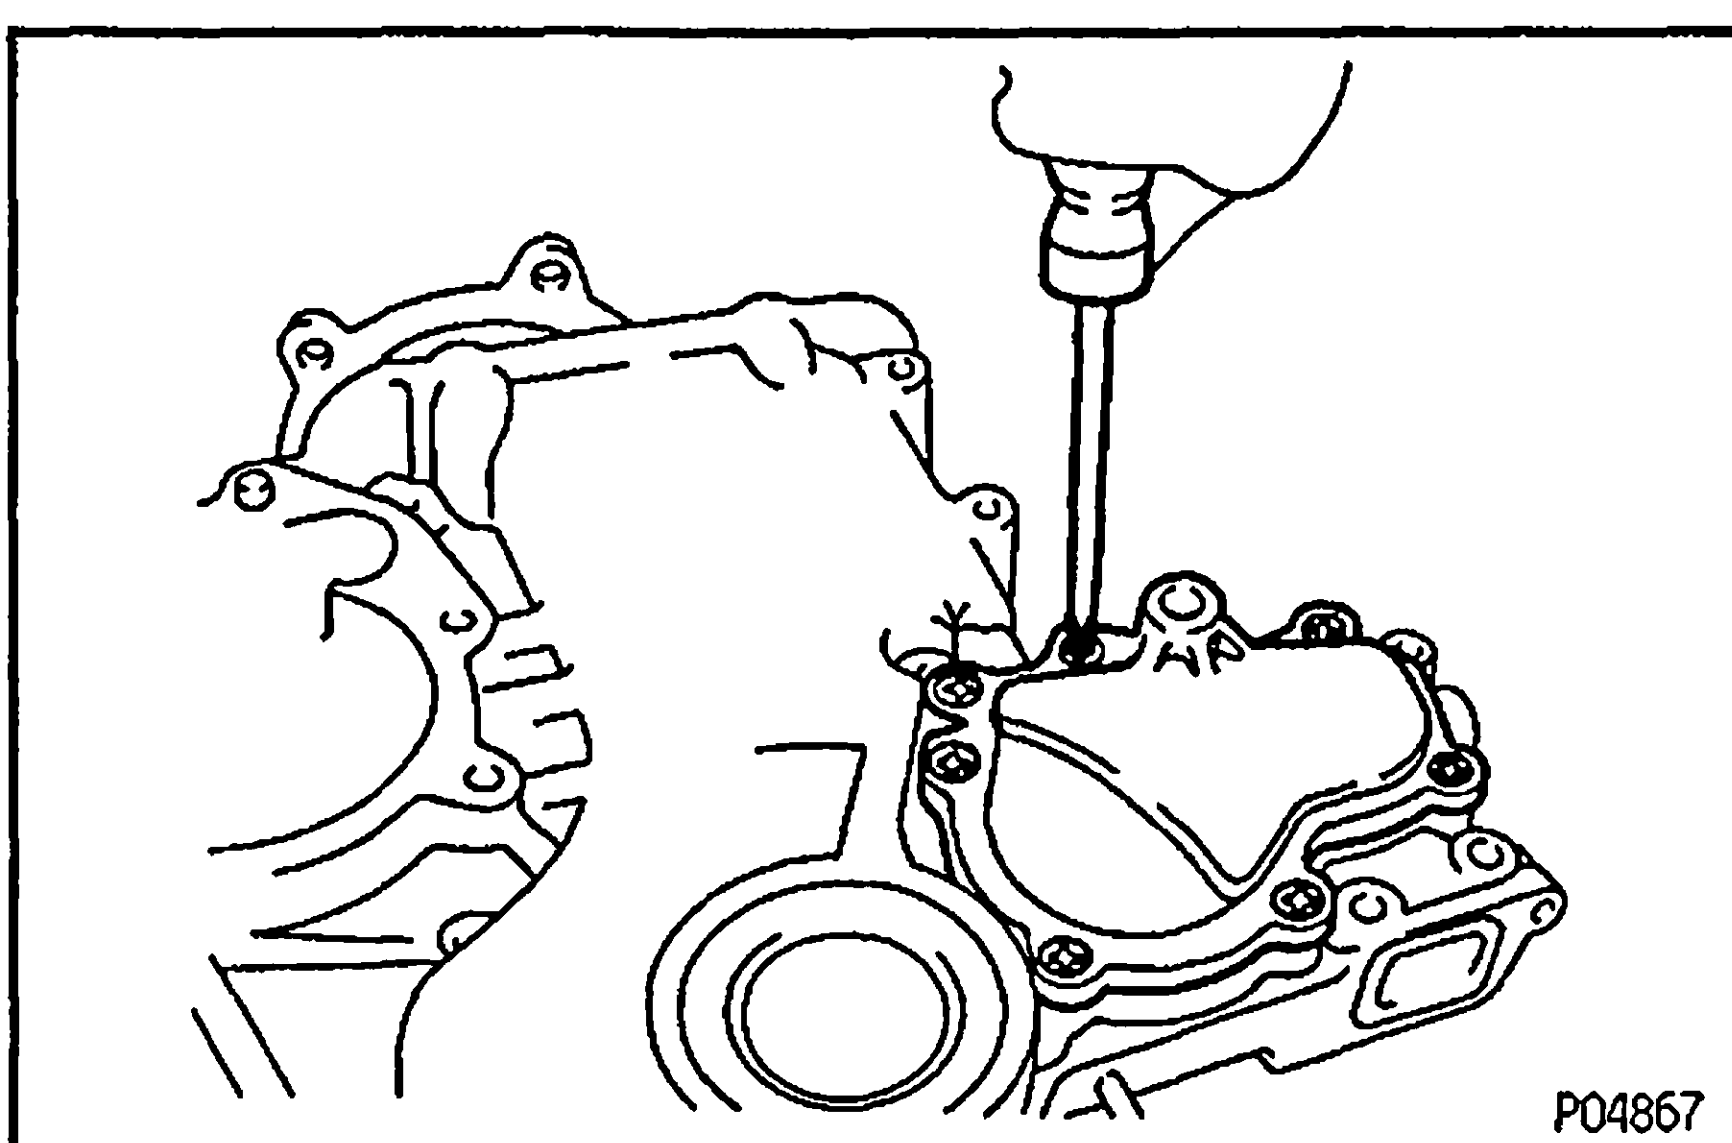

2. REMOVE RELIEF VALVE

Remove the plug, gasket, spring and relief valve.

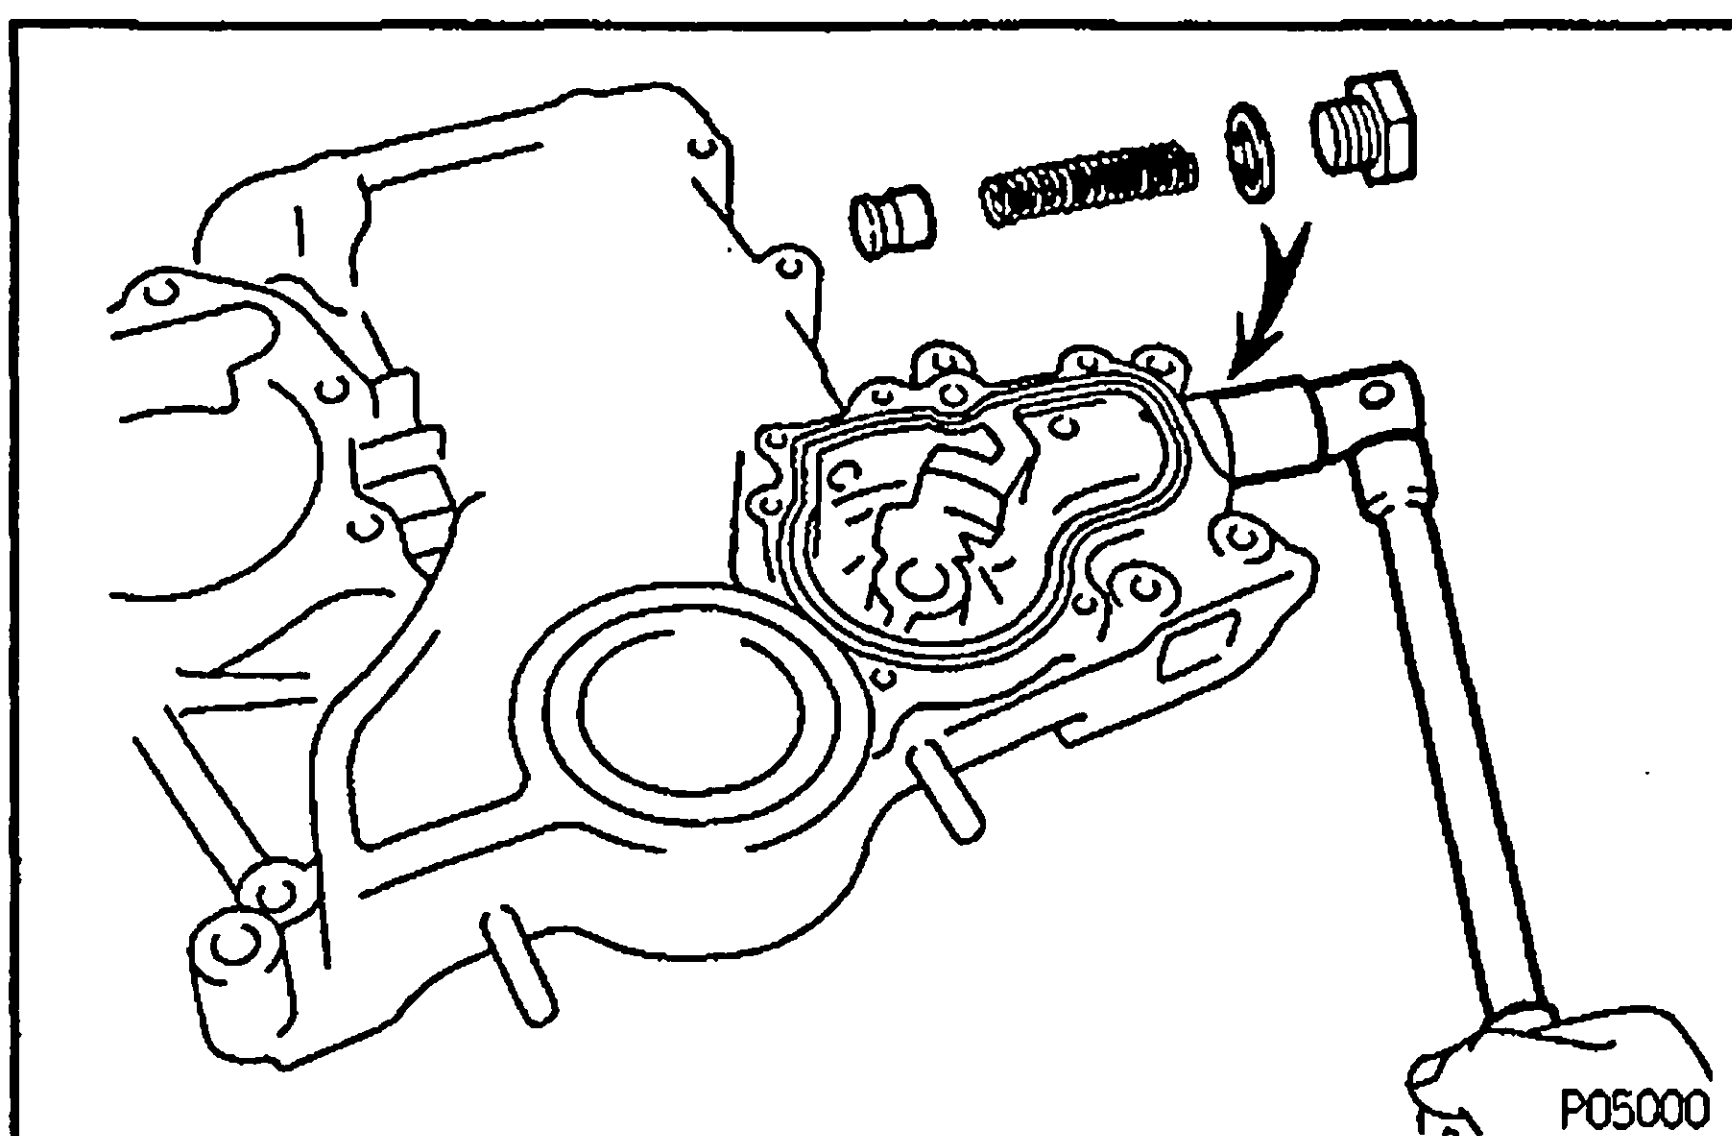


OIL PUMP INSPECTION

1. INSPECT RELIEF VALVE

Coat the valve with engine oil and check that it falls smoothly into the valve hole by its own weight.

If it does not, replace the relief valve. If necessary, replace the oil pump assembly.

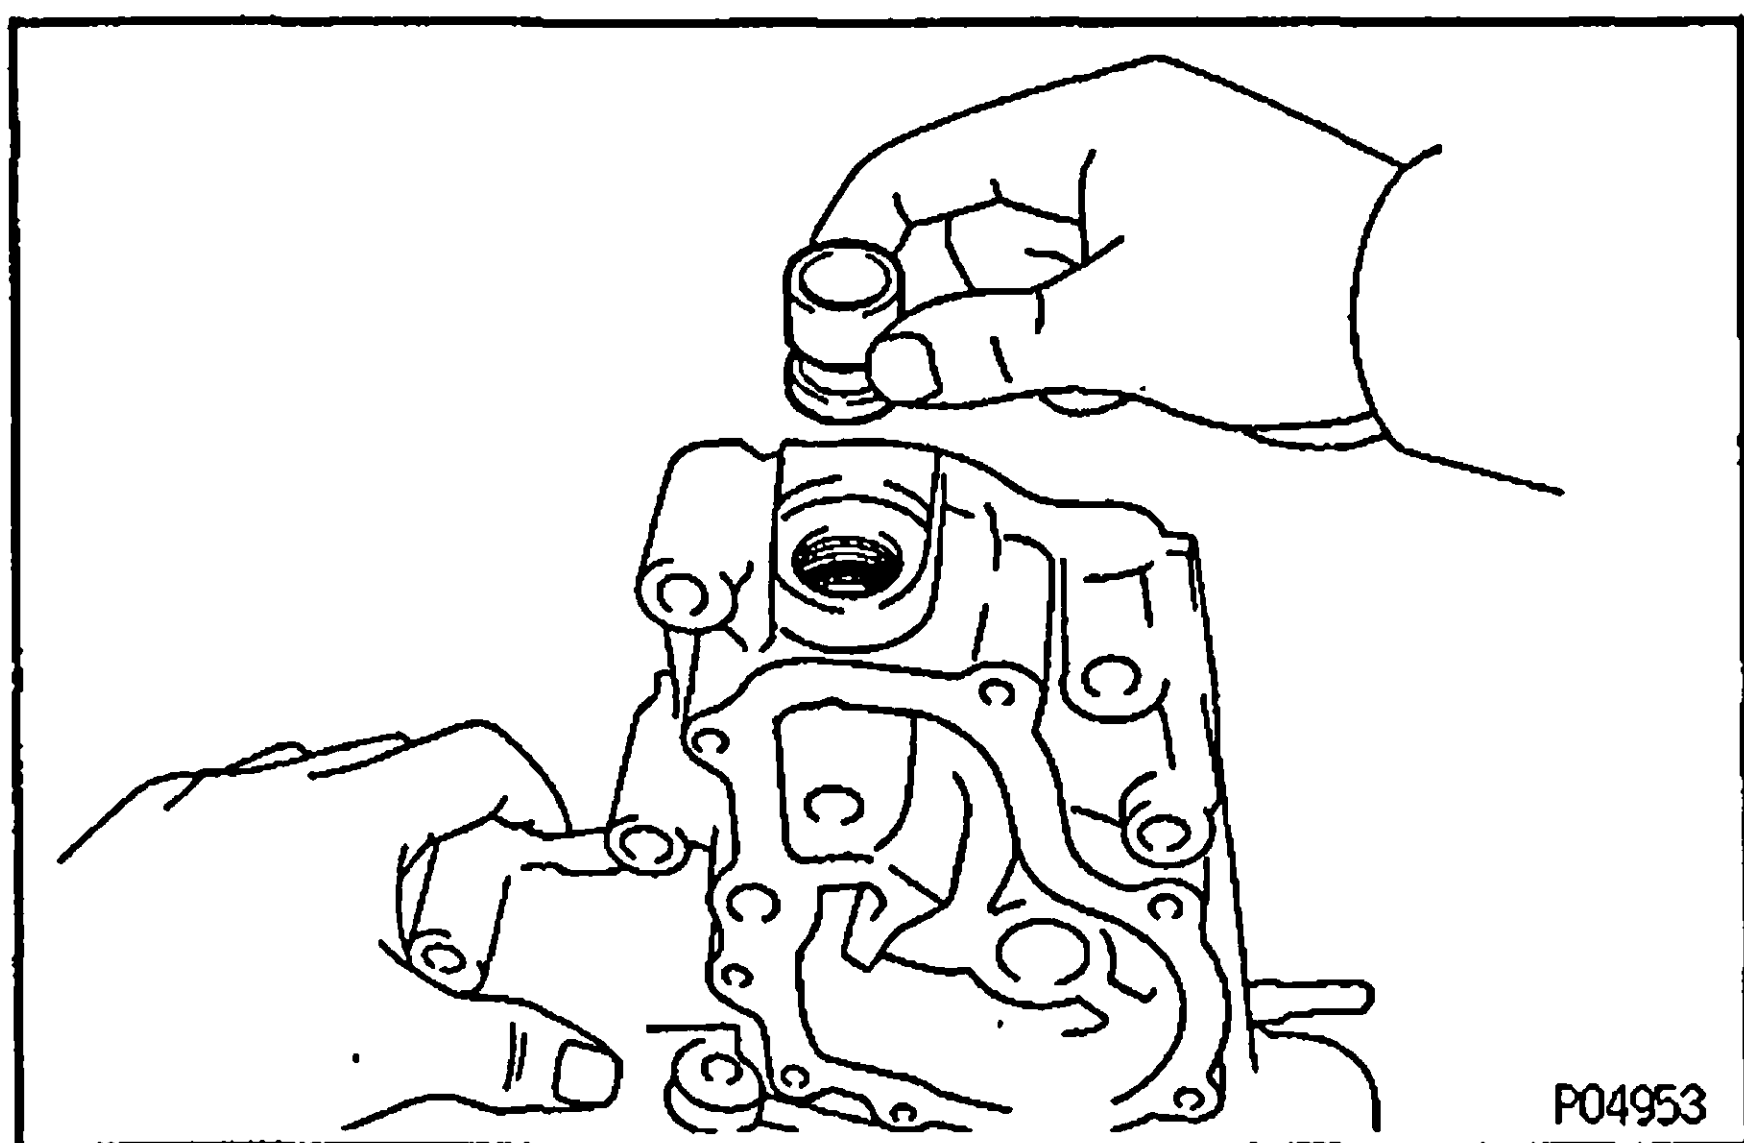

2. INSPECT DRIVE AND DRIVEN ROTORS

A. Inspect rotor body clearance

Using a thickness gauge, measure the clearance between the driven rotor and body.


Standard body clearance:

0.100 — 0.170 mm (0.0039 — 0.0067 in.)

Maximum body clearance:

0.30 mm (0.0118 in.)

If the body clearance is greater than maximum, replace the rotors as a set. If necessary, replace the oil pump assembly.

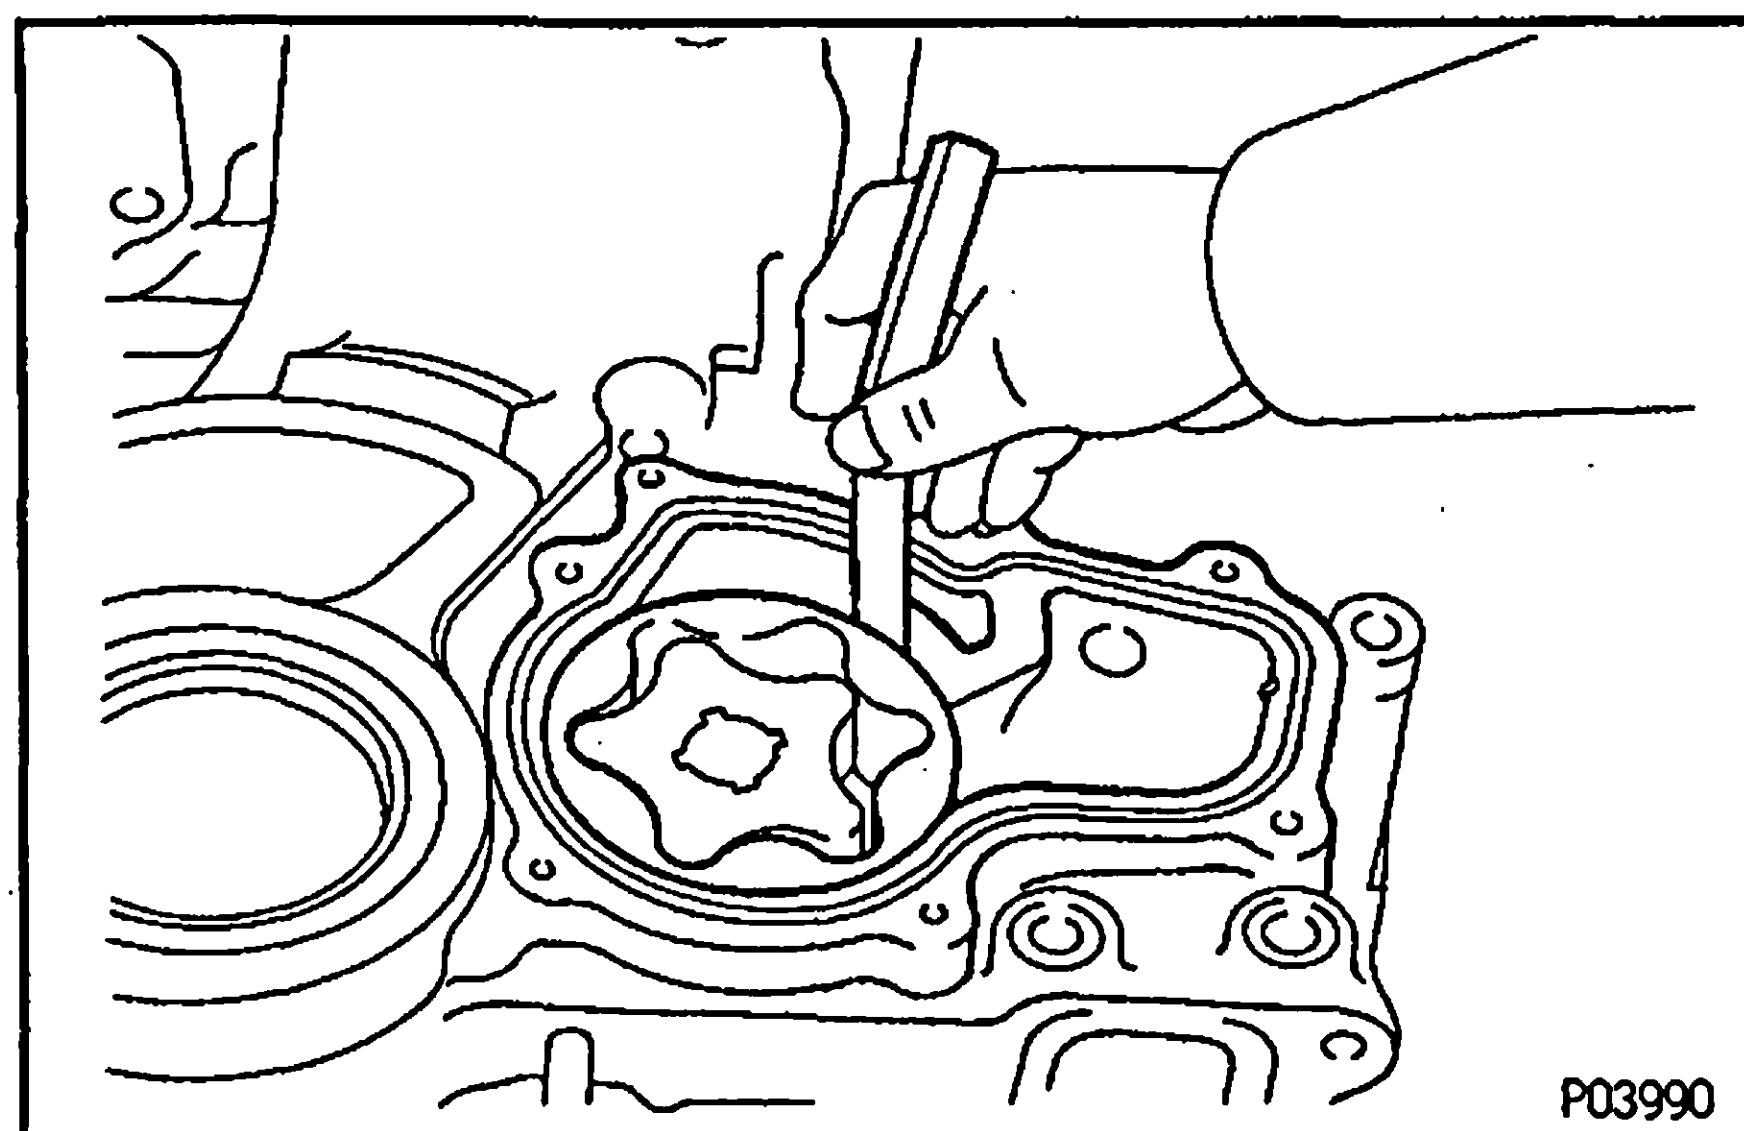

B. Inspect rotor side clearance

Using a thickness gauge and precision straight edge, measure the clearance between the rotors and precision straight edge.


Standard side clearance:

0.030 — 0.090 mm (0.0012 — 0.0035 in.)

Maximum side clearance:

0.15 mm (0.0059 in.)

If the side clearance is greater than maximum, replace the rotors as a set. If necessary, replace the oil pump assembly.

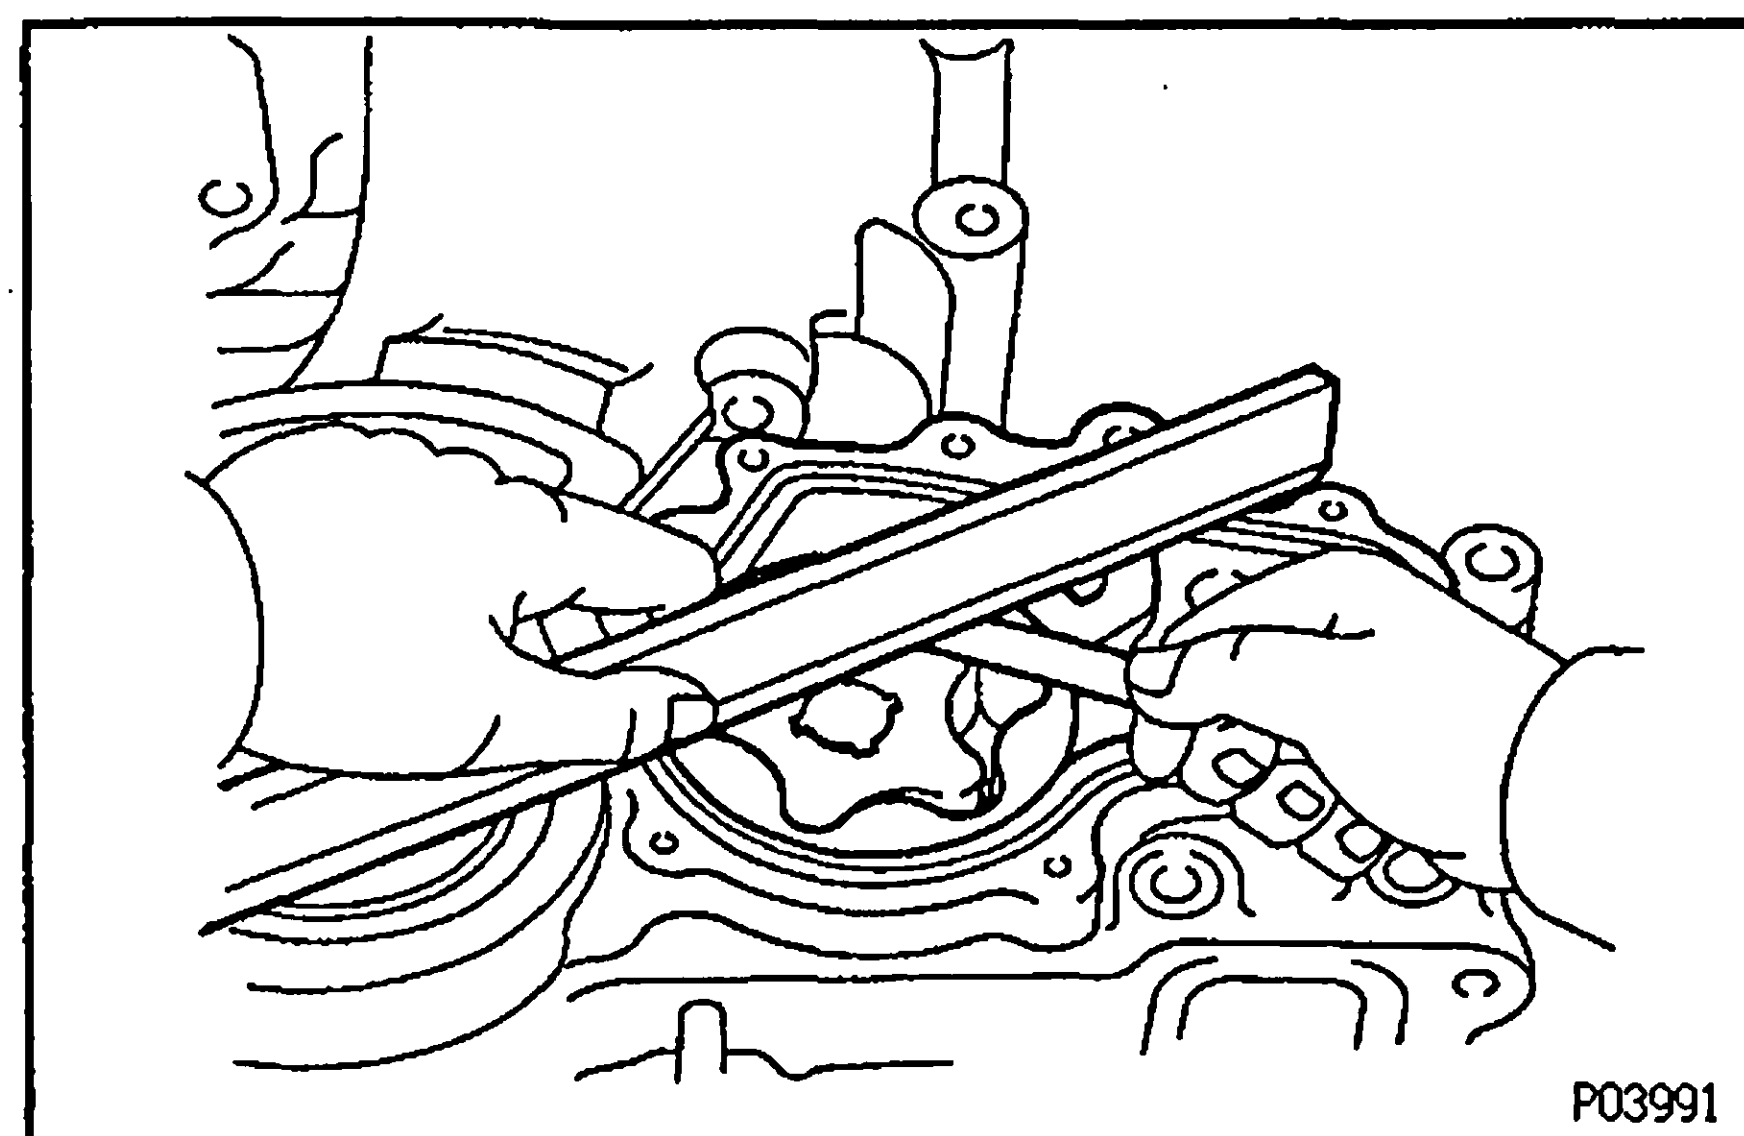

C. Inspect rotor tip clearance

Using thickness gauge, measure the clearance between the drive and driven rotors.


Standard tip clearance:

0.030 — 0.160 mm (0.0012 — 0.0063 in.)

Maximum tip clearance:

0.25 mm (0.0098 in.)


If the tip clearance is greater than maximum, replace the rotors as a set.

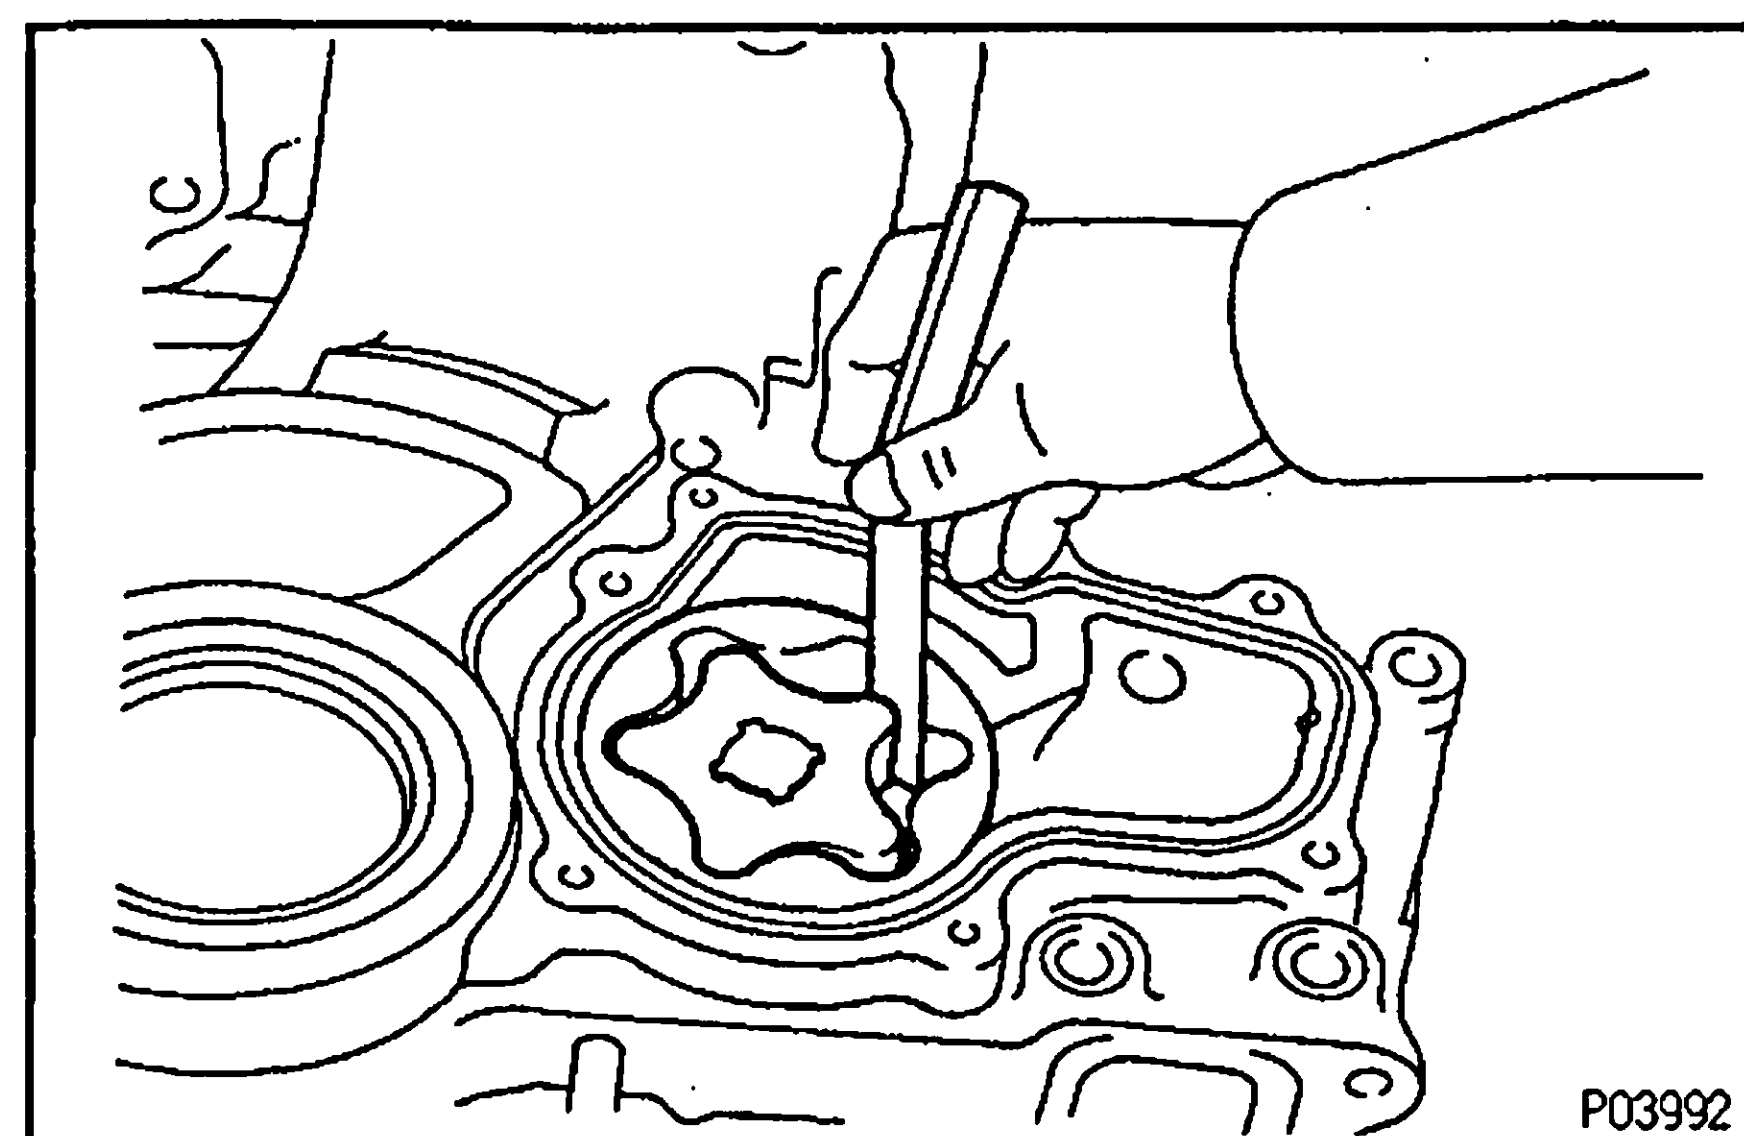

CRANKSHAFT FRONT OIL SEAL REPLACEMENT

HINT: There are two methods (A and B) to replace the oil seal which are as follows:


EG

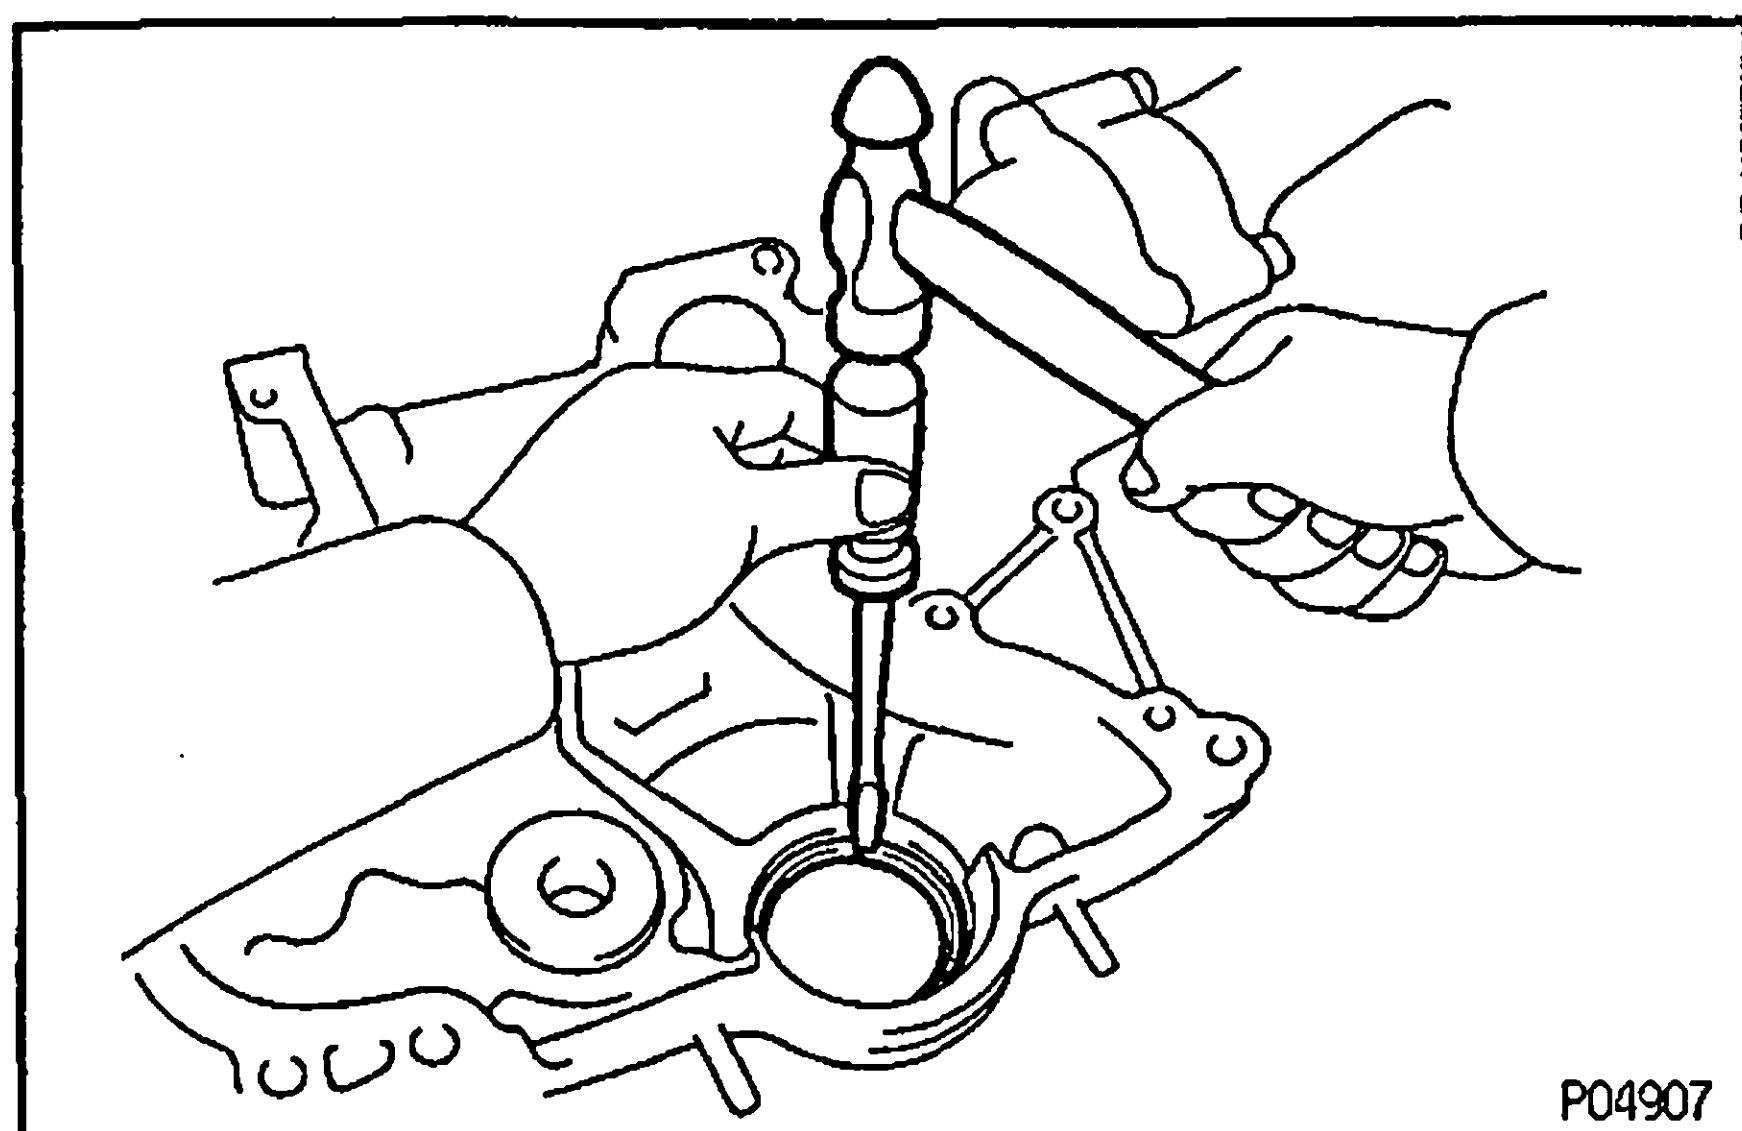

REPLACE CRANKSHAFT FRONT OIL SEAL

A. If oil pump is removed from cylinder block:


- (a) Using screwdriver and hammer, tap out the oil seal.

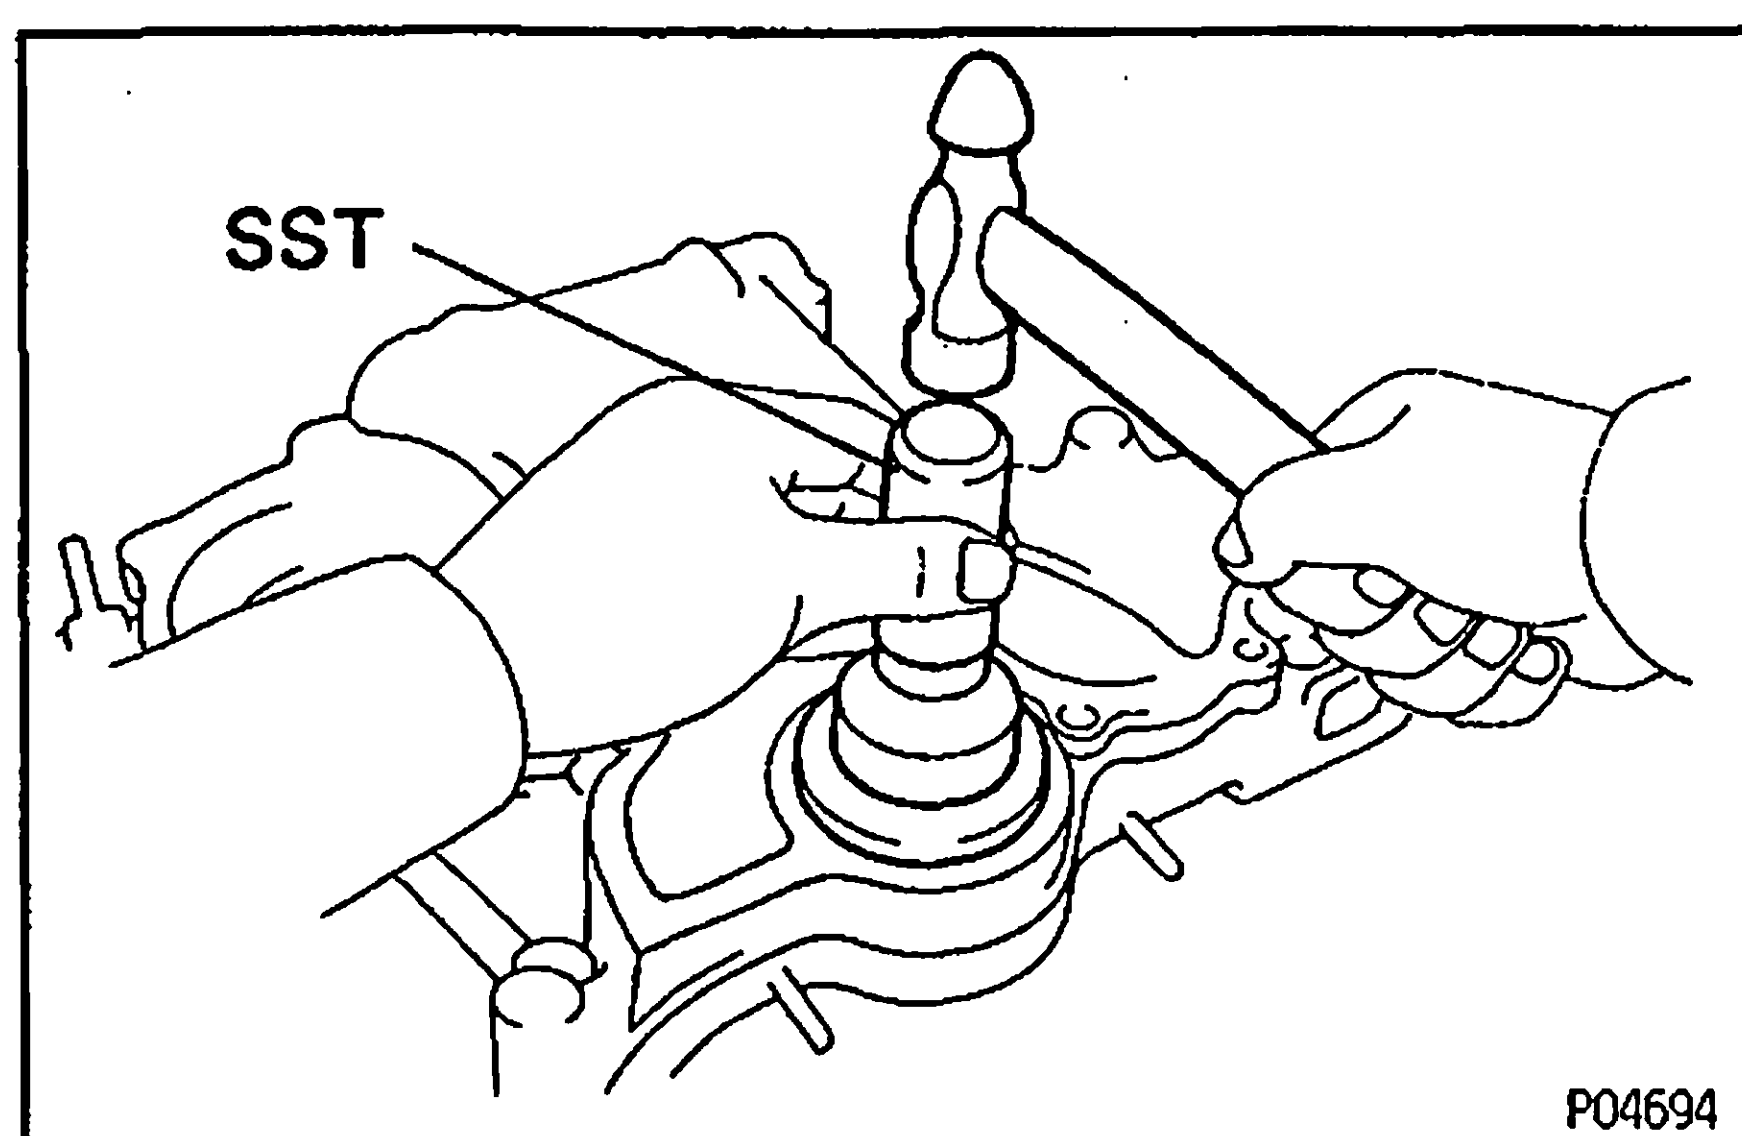

- (b) Using SST and a hammer, tap in a new oil seal until its surface is flush with the oil pump case edge.

SST 09223-46011


- (c) Apply MP grease to the oil seal lip.

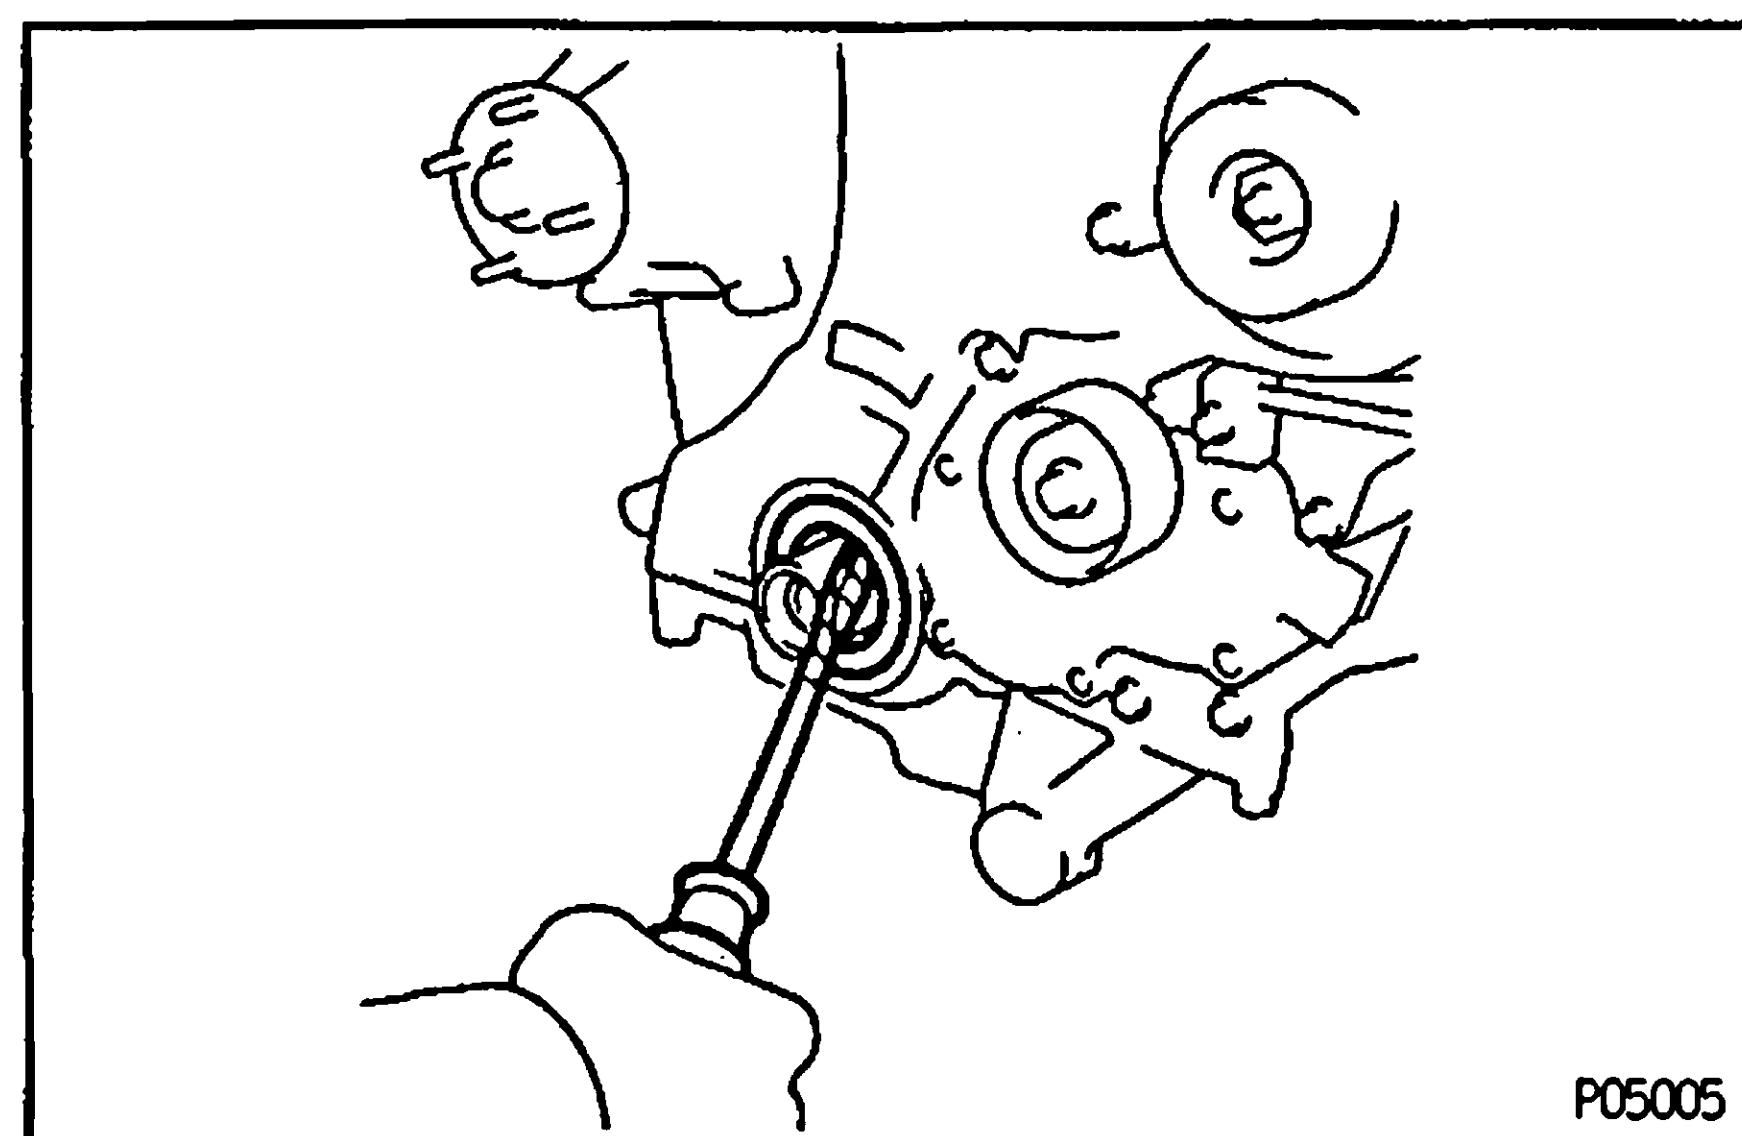

B. If oil pump is installed to the cylinder block:

- (a) Using a screwdriver, pry out the oil seal.

NOTICE: Be careful not to damage the crankshaft. Tape the screwdriver tip.

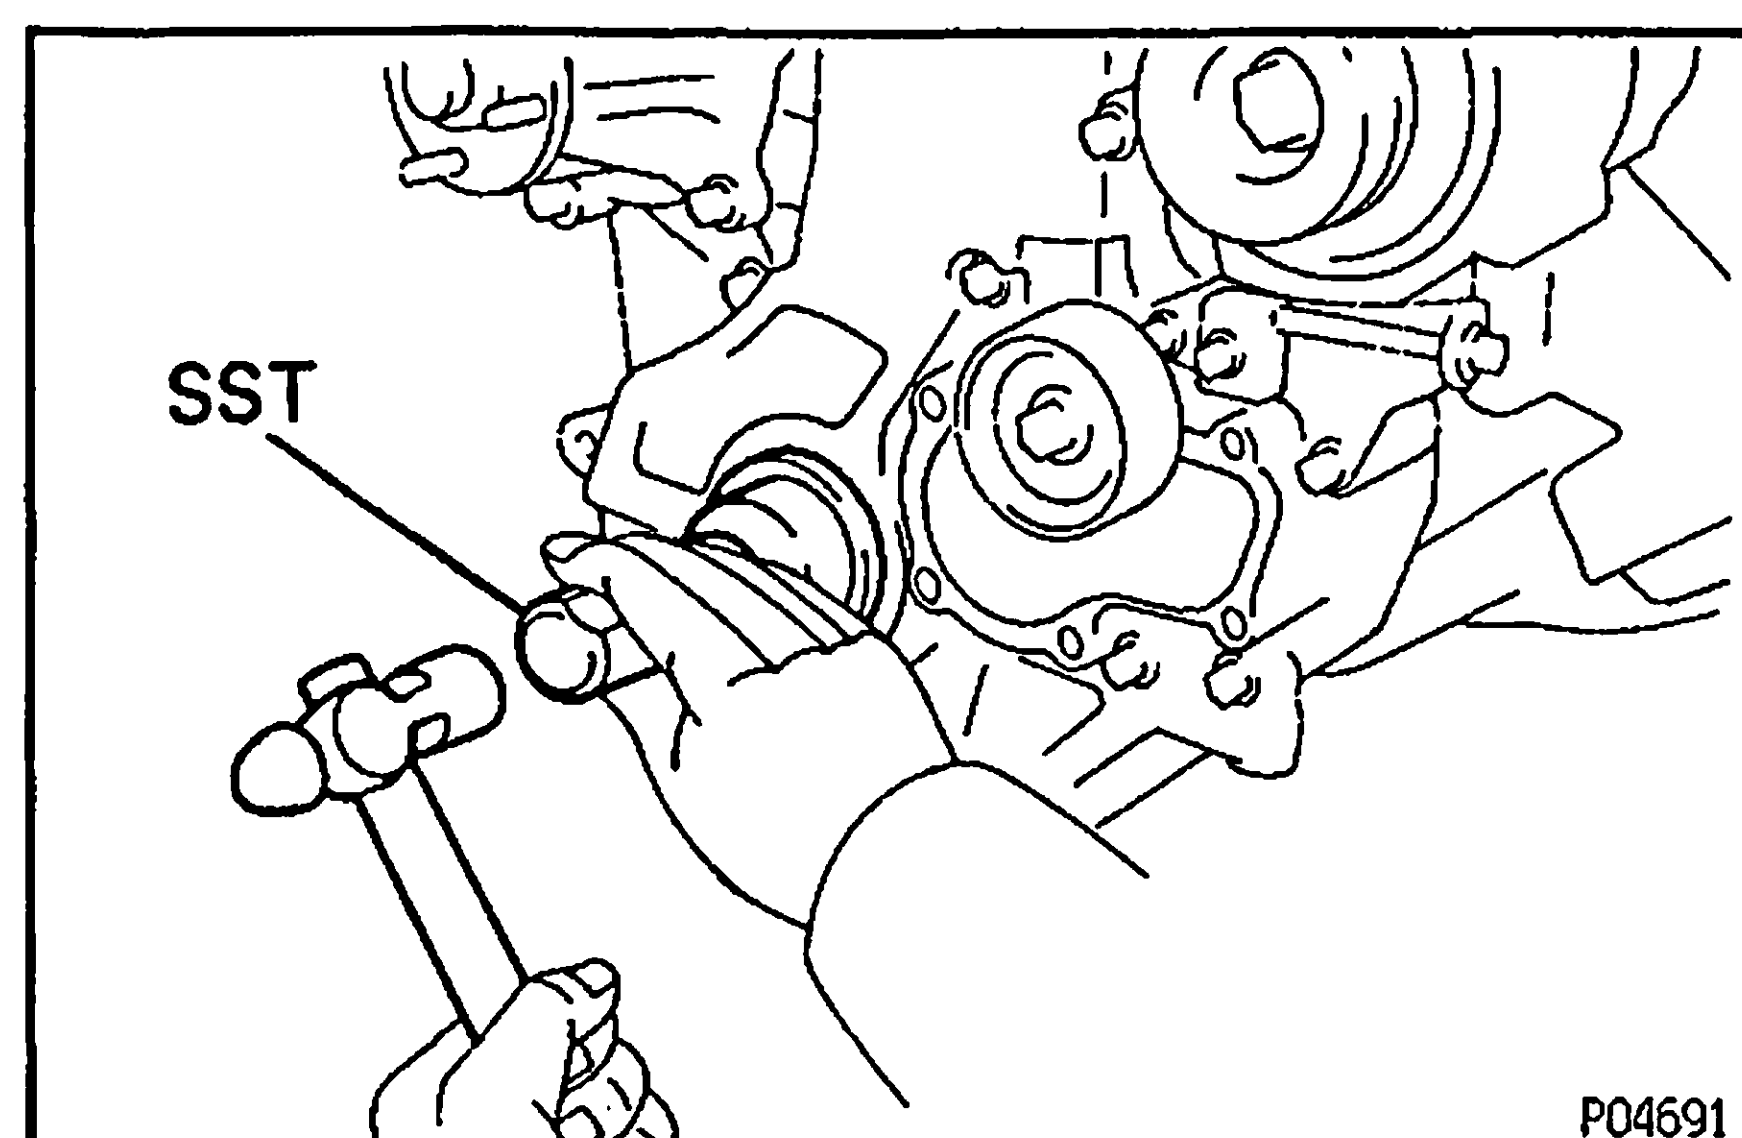


- (b) Apply MP grease to a new oil seal lip.

- (c) Using SST and a hammer, tap in the oil seal until its surface is flush with the oil pump case edge.

SST 09223-46011

EG

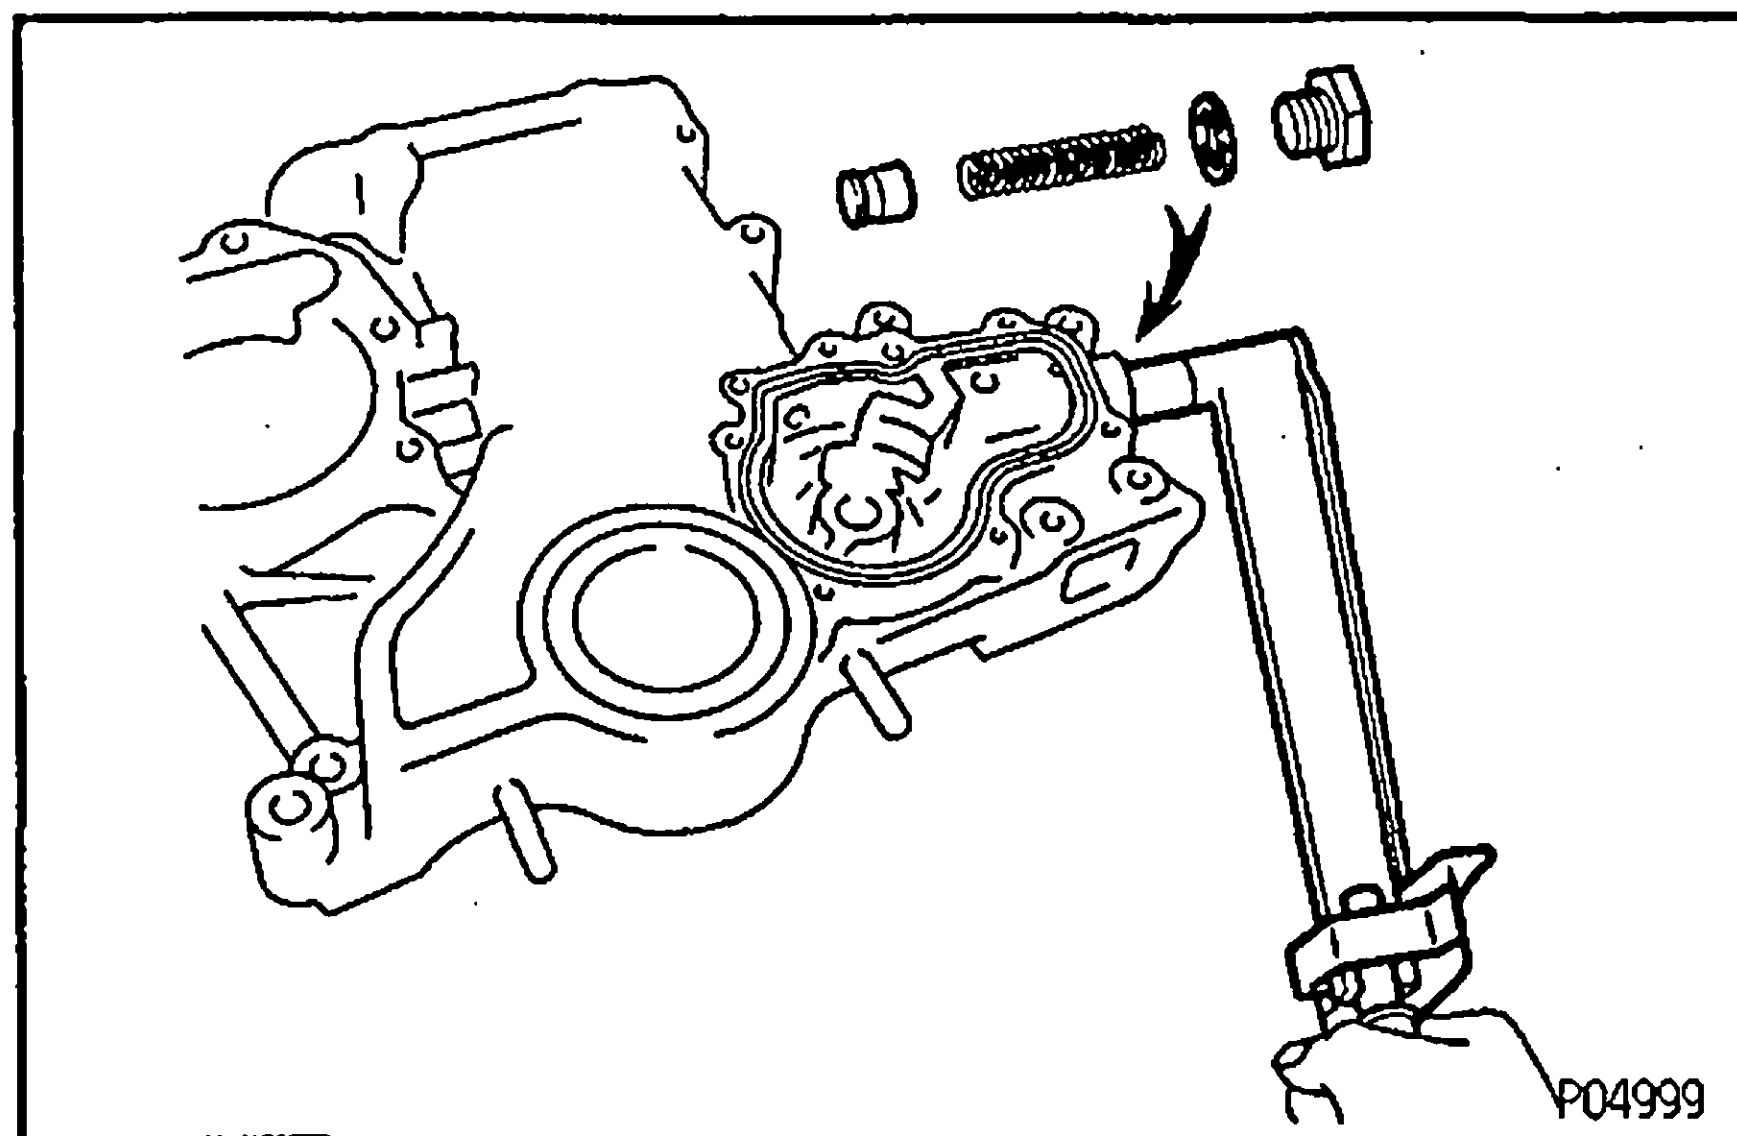


OIL PUMP ASSEMBLY

(See page EG — 195)


1. INSTALL RELIEF VALVE

- (a) Insert the relief valve and spring into the pump body hole.
- (b) Install a new gasket to the plug.
- (c) Install and torque the plug.
Torque: 49 N·m (500 kgf·cm, 36 ft·lbf)

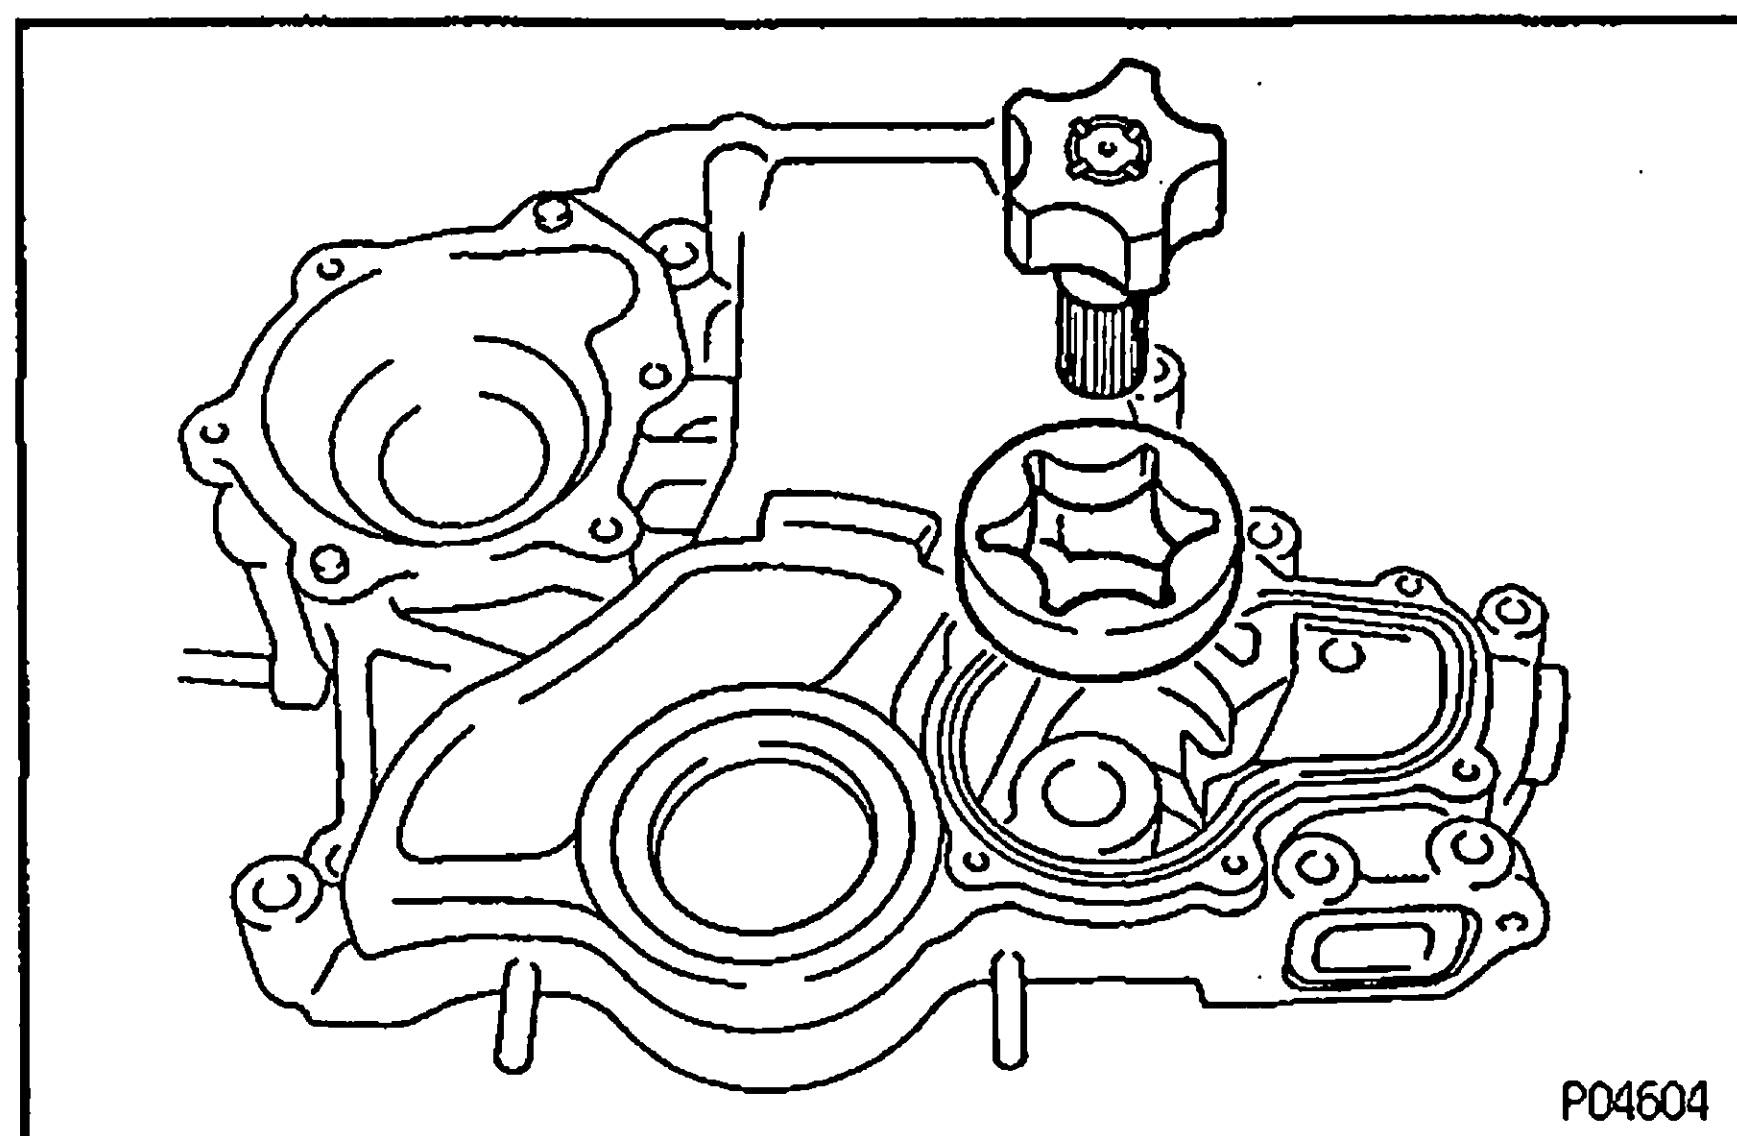


2. INSTALL DRIVE AND DRIVEN ROTORS

- (a) Place the drive and driven rotors into the pump body.

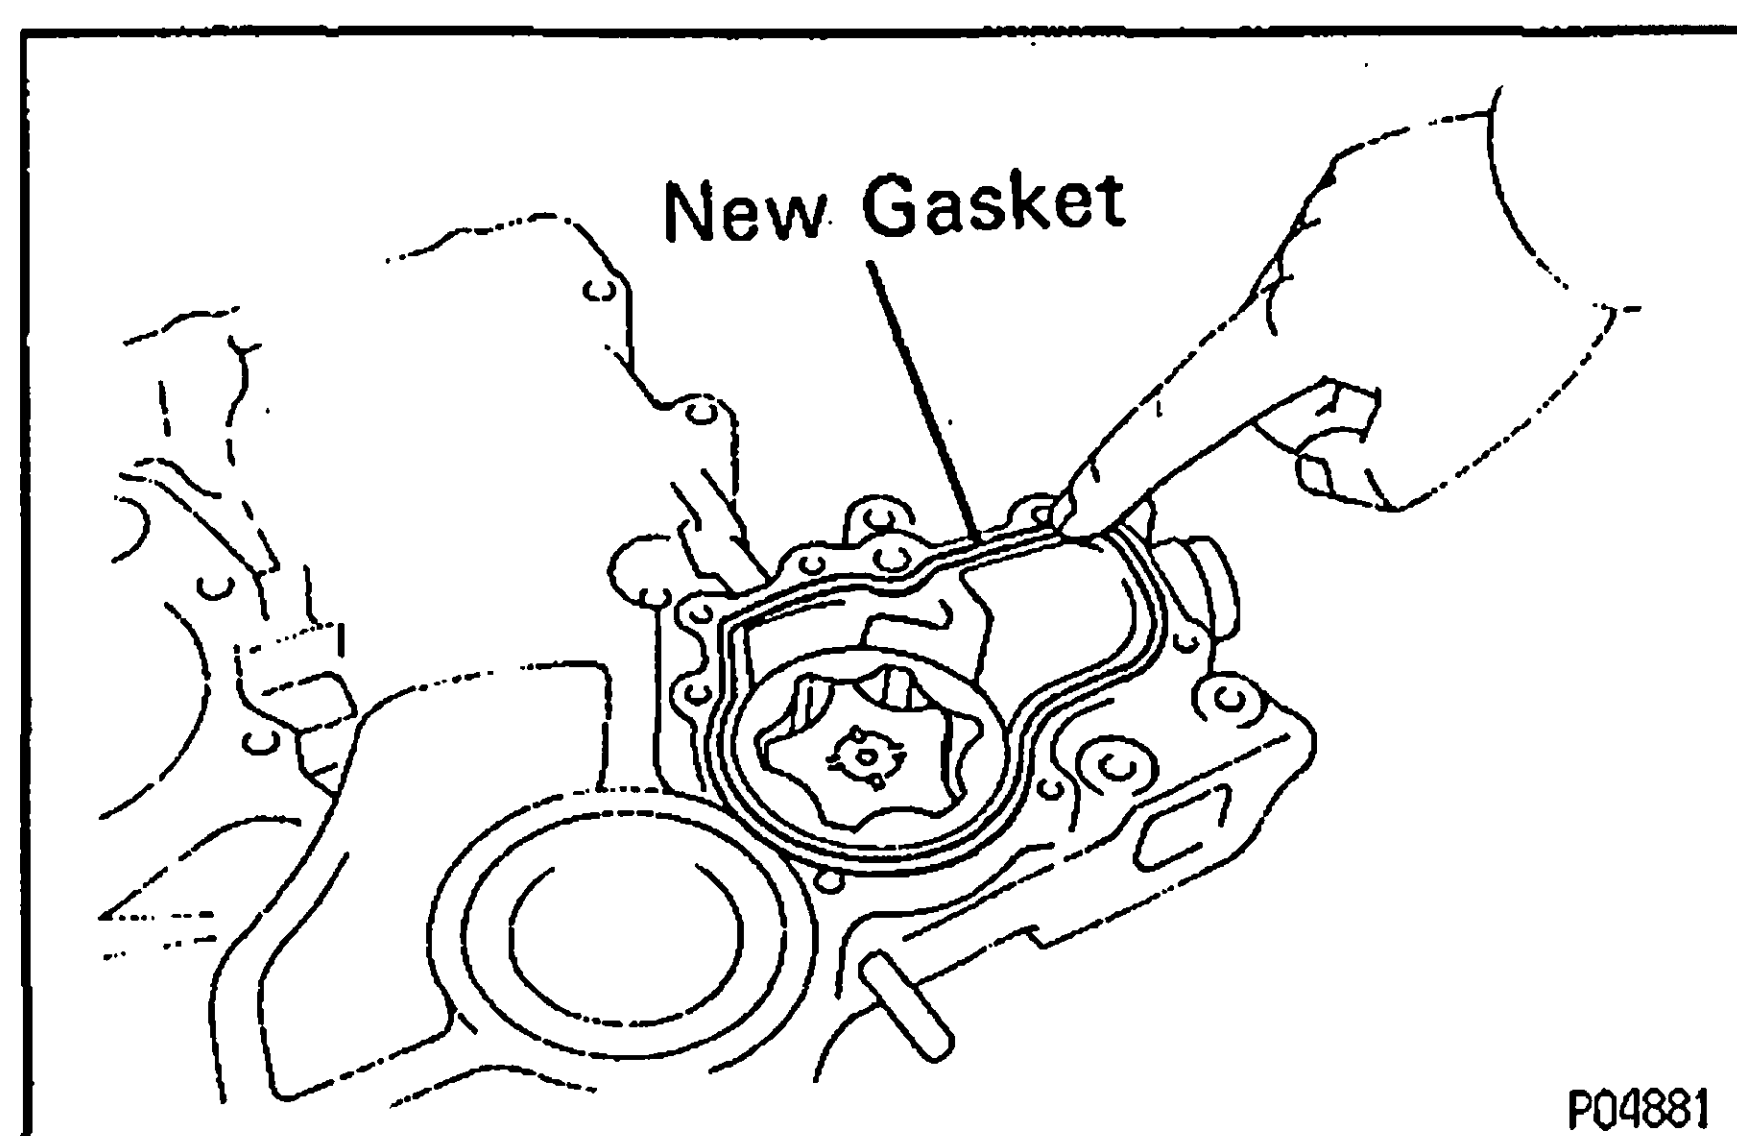

- (b) Place a new gasket on the pump body.

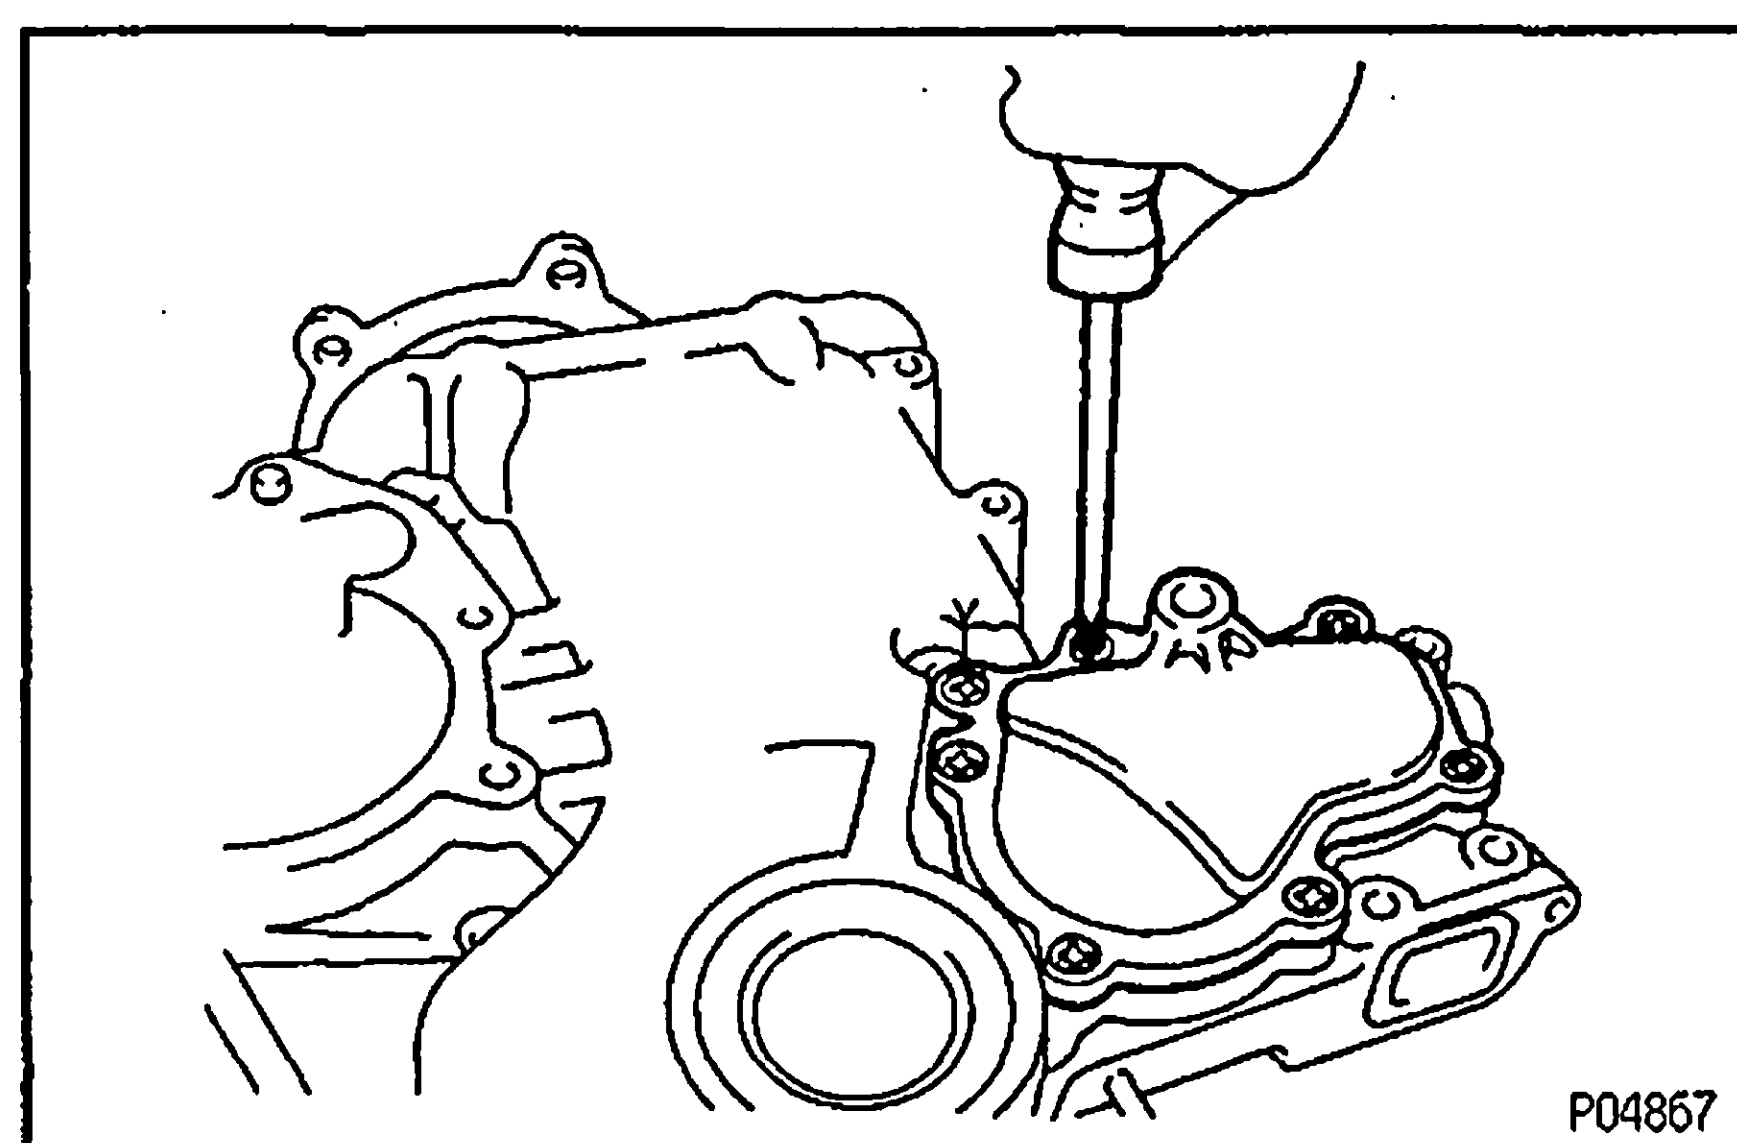




- (c) Install the pump cover with the seven screws.

OIL PUMP INSTALLATION

(See page EG – 191)

1. INSTALL TIMING CHAIN AND CAMSHAFT TIMING GEAR

- (a) Install the timing chain on the camshaft timing gear with the bright link aligned with the timing mark on the camshaft timing gear.
- (b) Install the timing chain on the crankshaft timing gear with the other bright link aligned with the timing mark on the crankshaft timing gear.

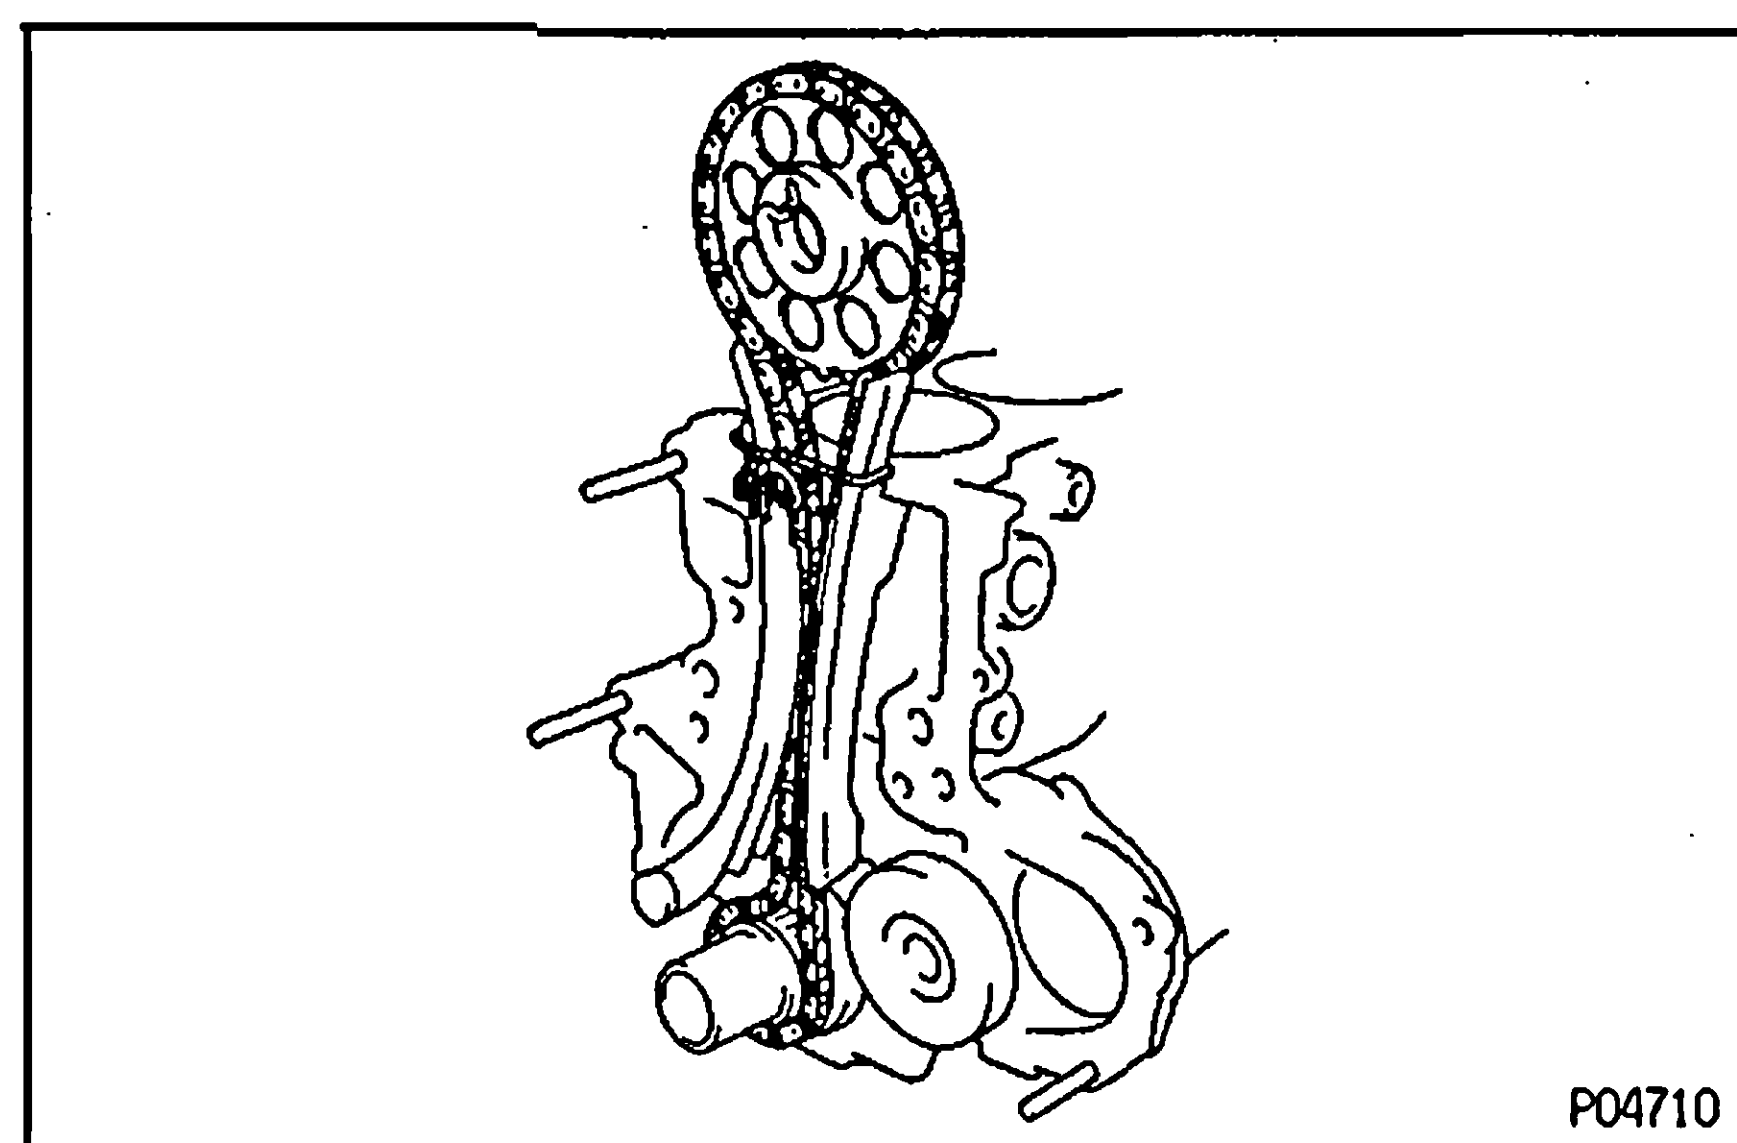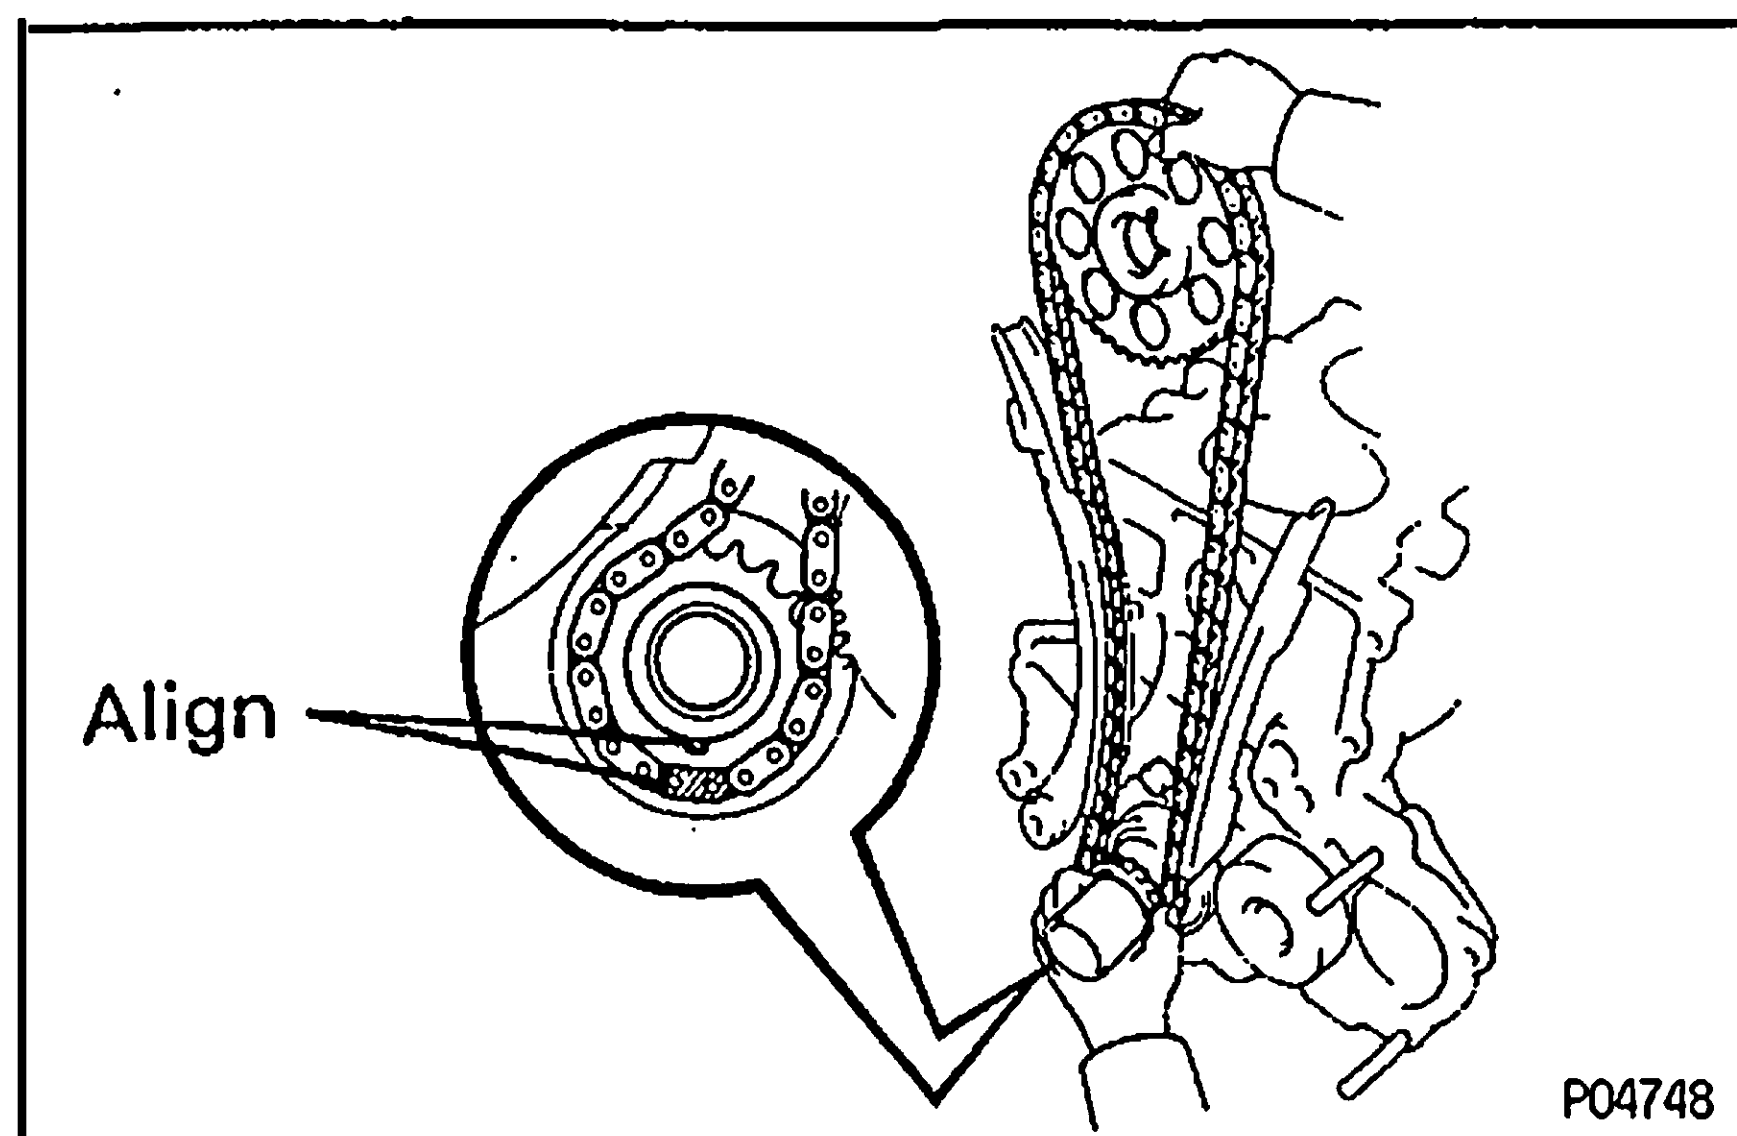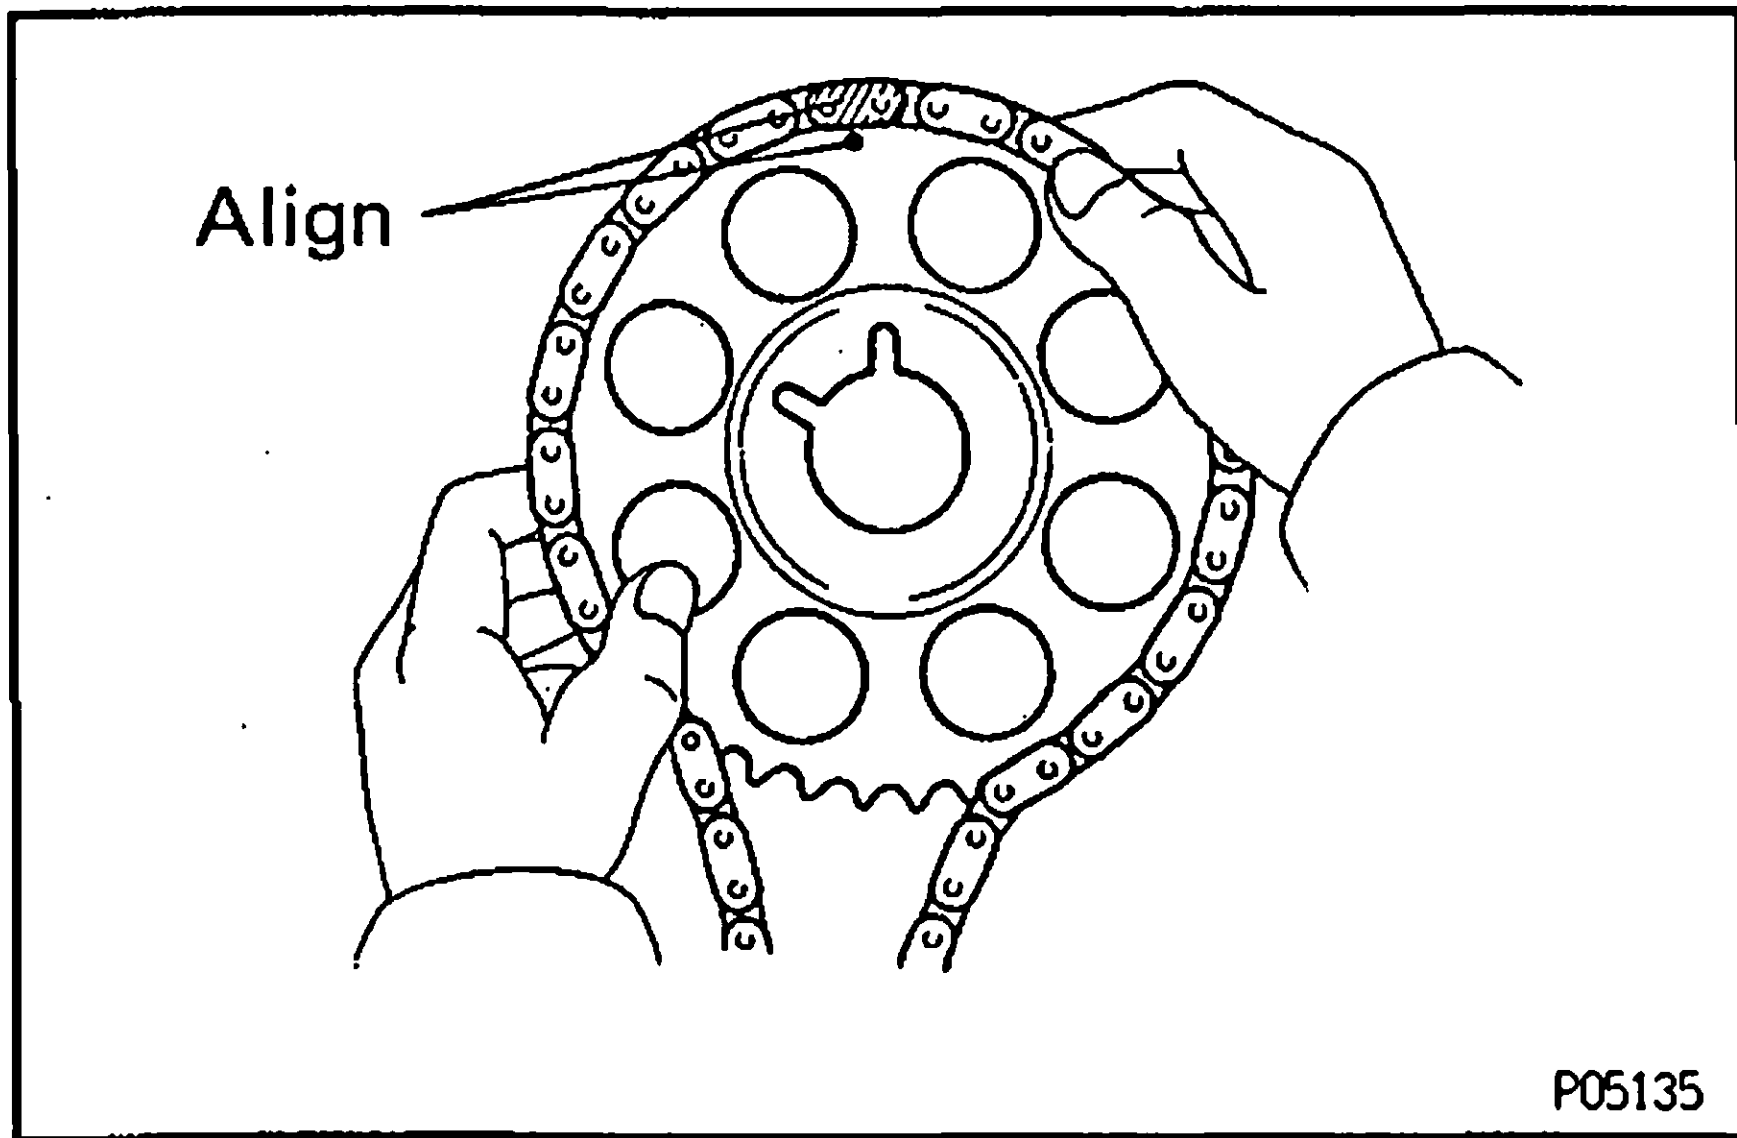

- (c) Tie the timing chain with a cords as shown in the illustration and make sure it doesn't come loose.


2. INSTALL OIL PUMP (TIMING CHAIN COVER)

- (a) Remove any old packing (FIPG) material and be careful not to drop an oil on the contact surfaces of the oil pump and cylinder block.
 - Using a razor blade and gasket scraper, remove all the old packing (FIPG) material from the gasket surfaces and sealing grooves.
 - Thoroughly clean all components to remove all the loose material.
 - Using a non-residue solvent, clean both sealing surfaces.
- (b) Apply seal packing to the oil pump as shown in the illustration.

Seal packing:

Part No.08826 – 00080 or equivalent


- Install a nozzle that has been cut to a 2 – 3 mm (0.08 – 0.12 in.) opening.

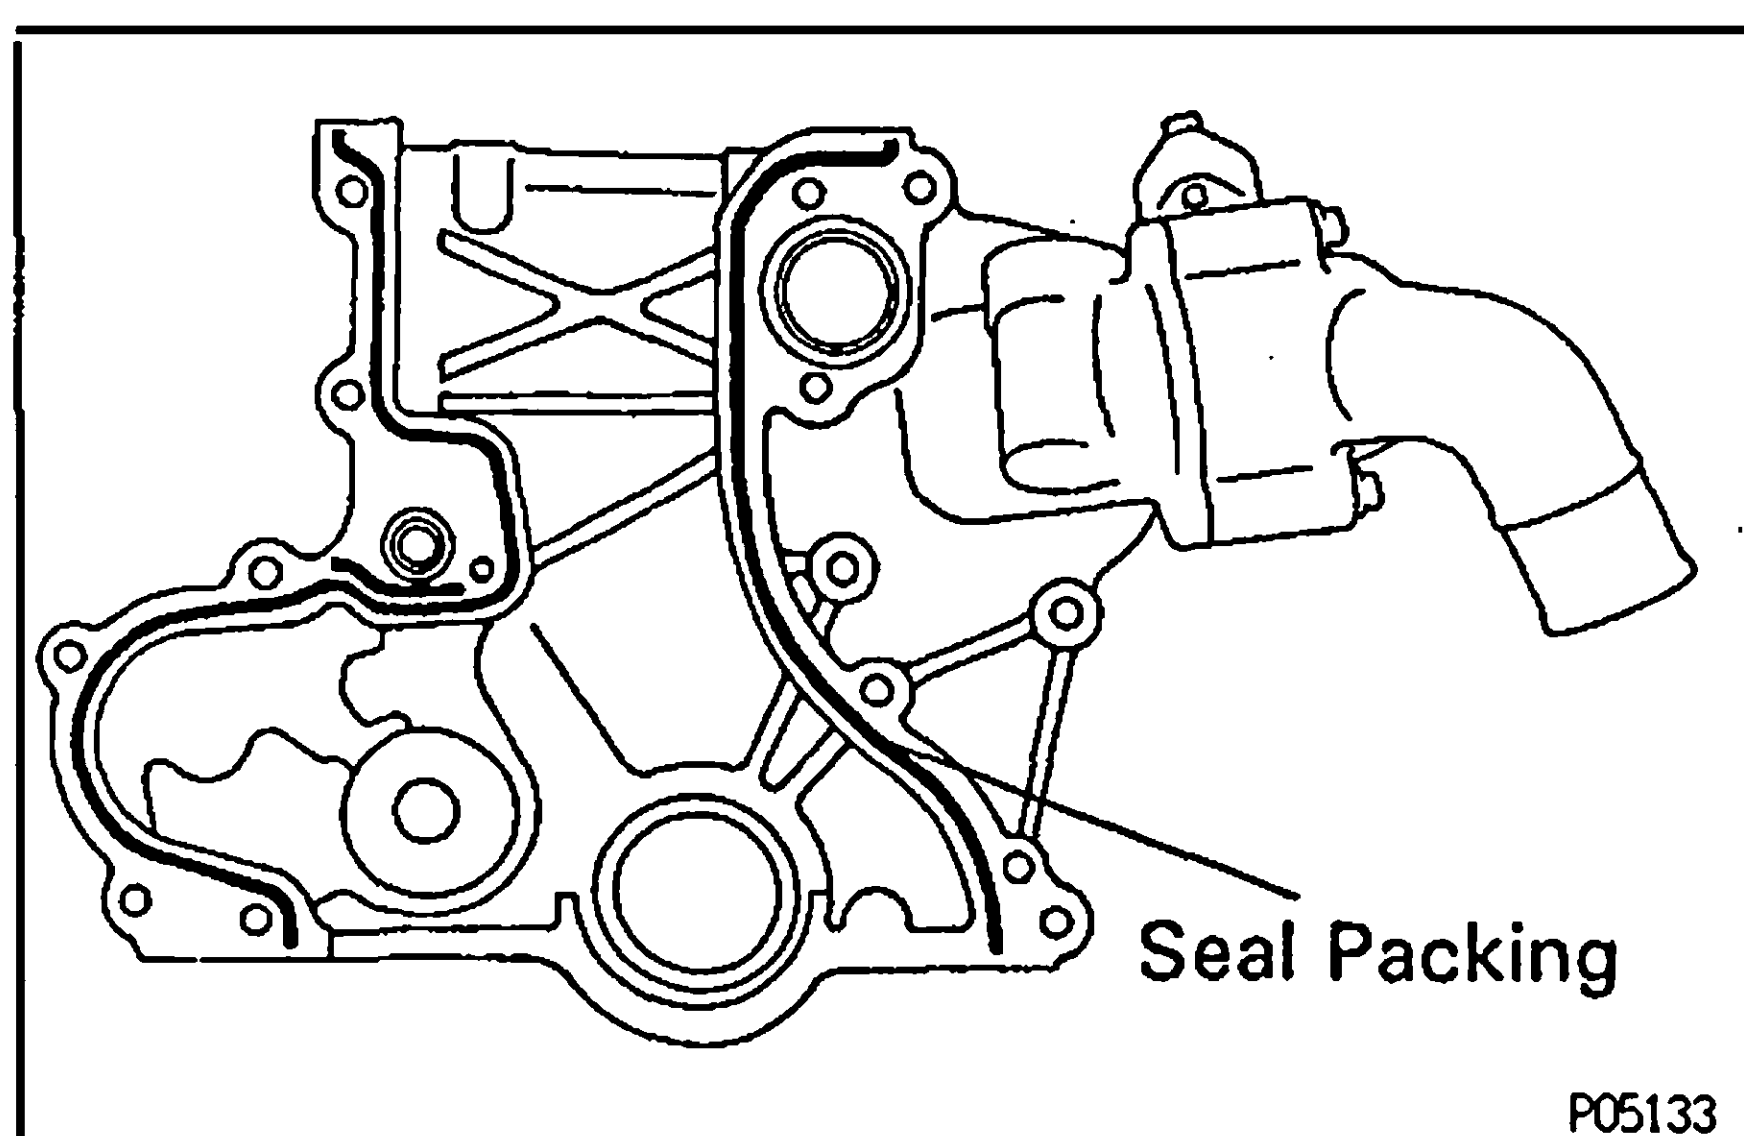


HINT: Avoid applying an excessive amount to the surface.

- Parts must be assembled within 5 minutes of application. Otherwise the material must be removed and reapplied.
- Immediately remove nozzle from the tube and reinstall cap.


EG

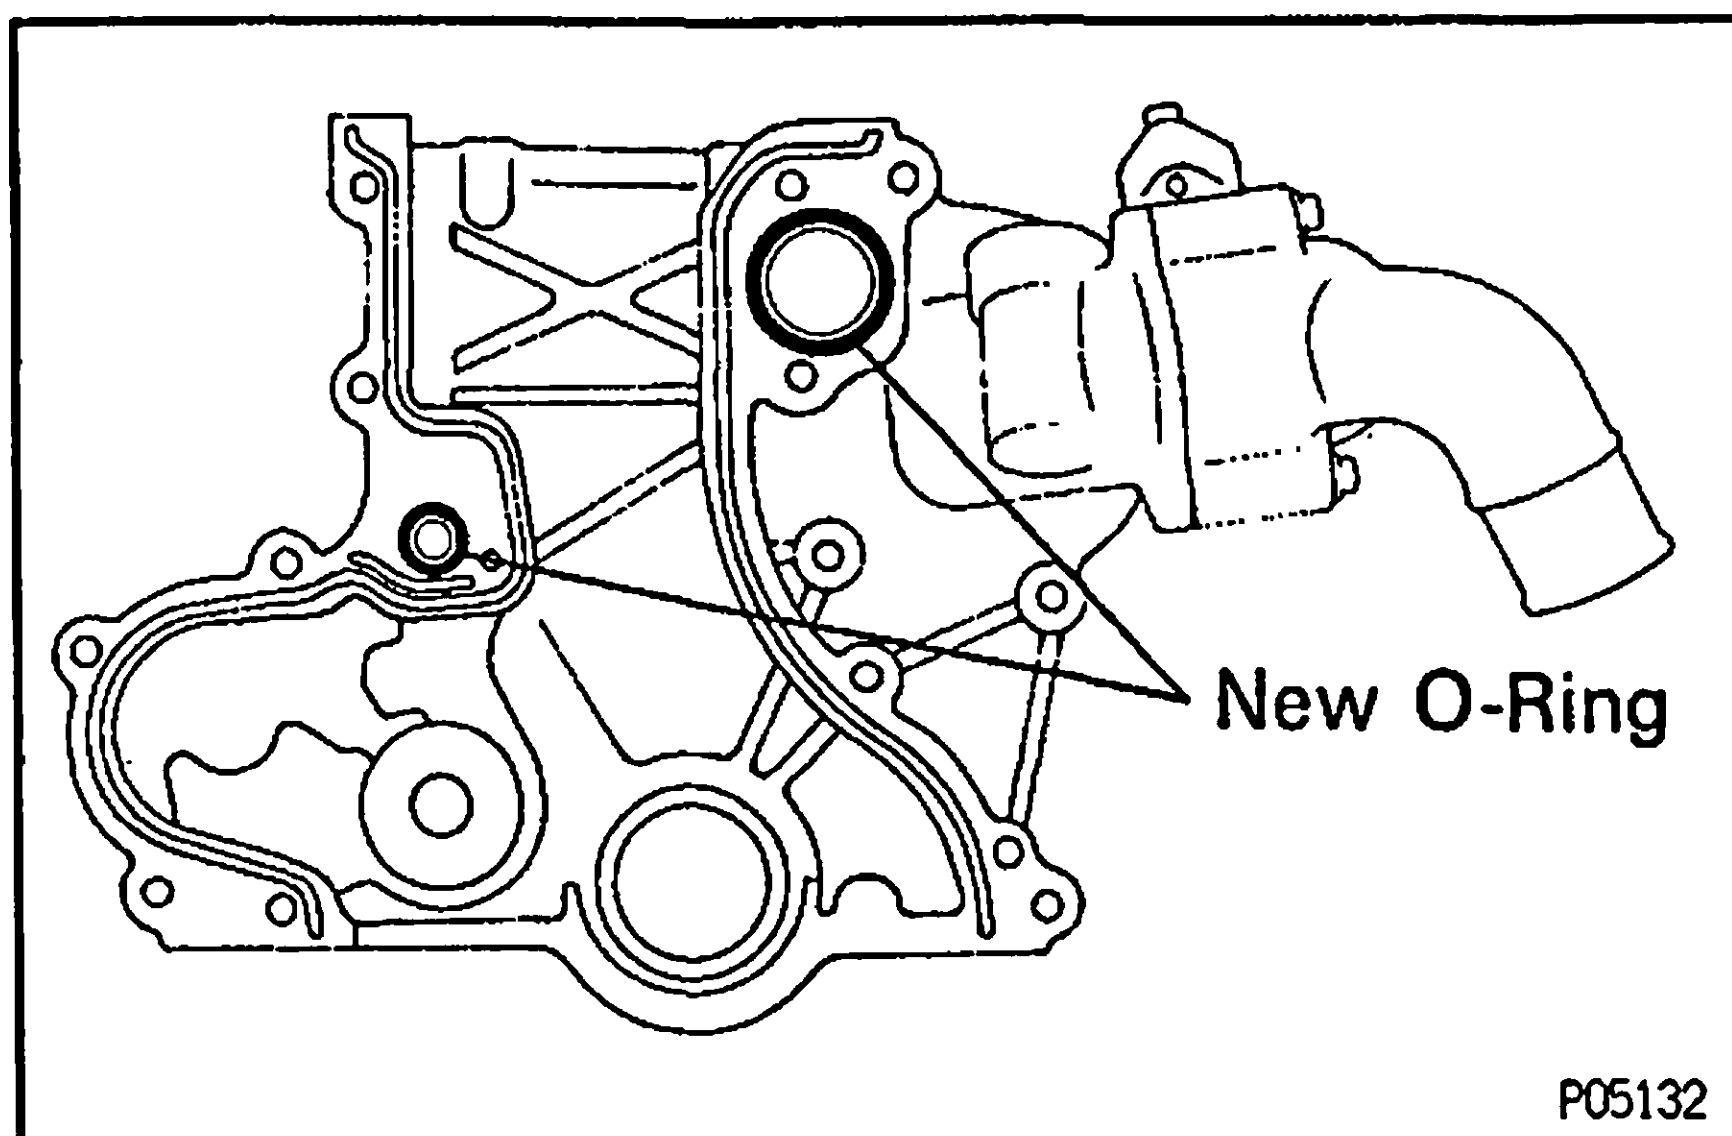

- (c) Place two new O-ring in position on the oil pump.

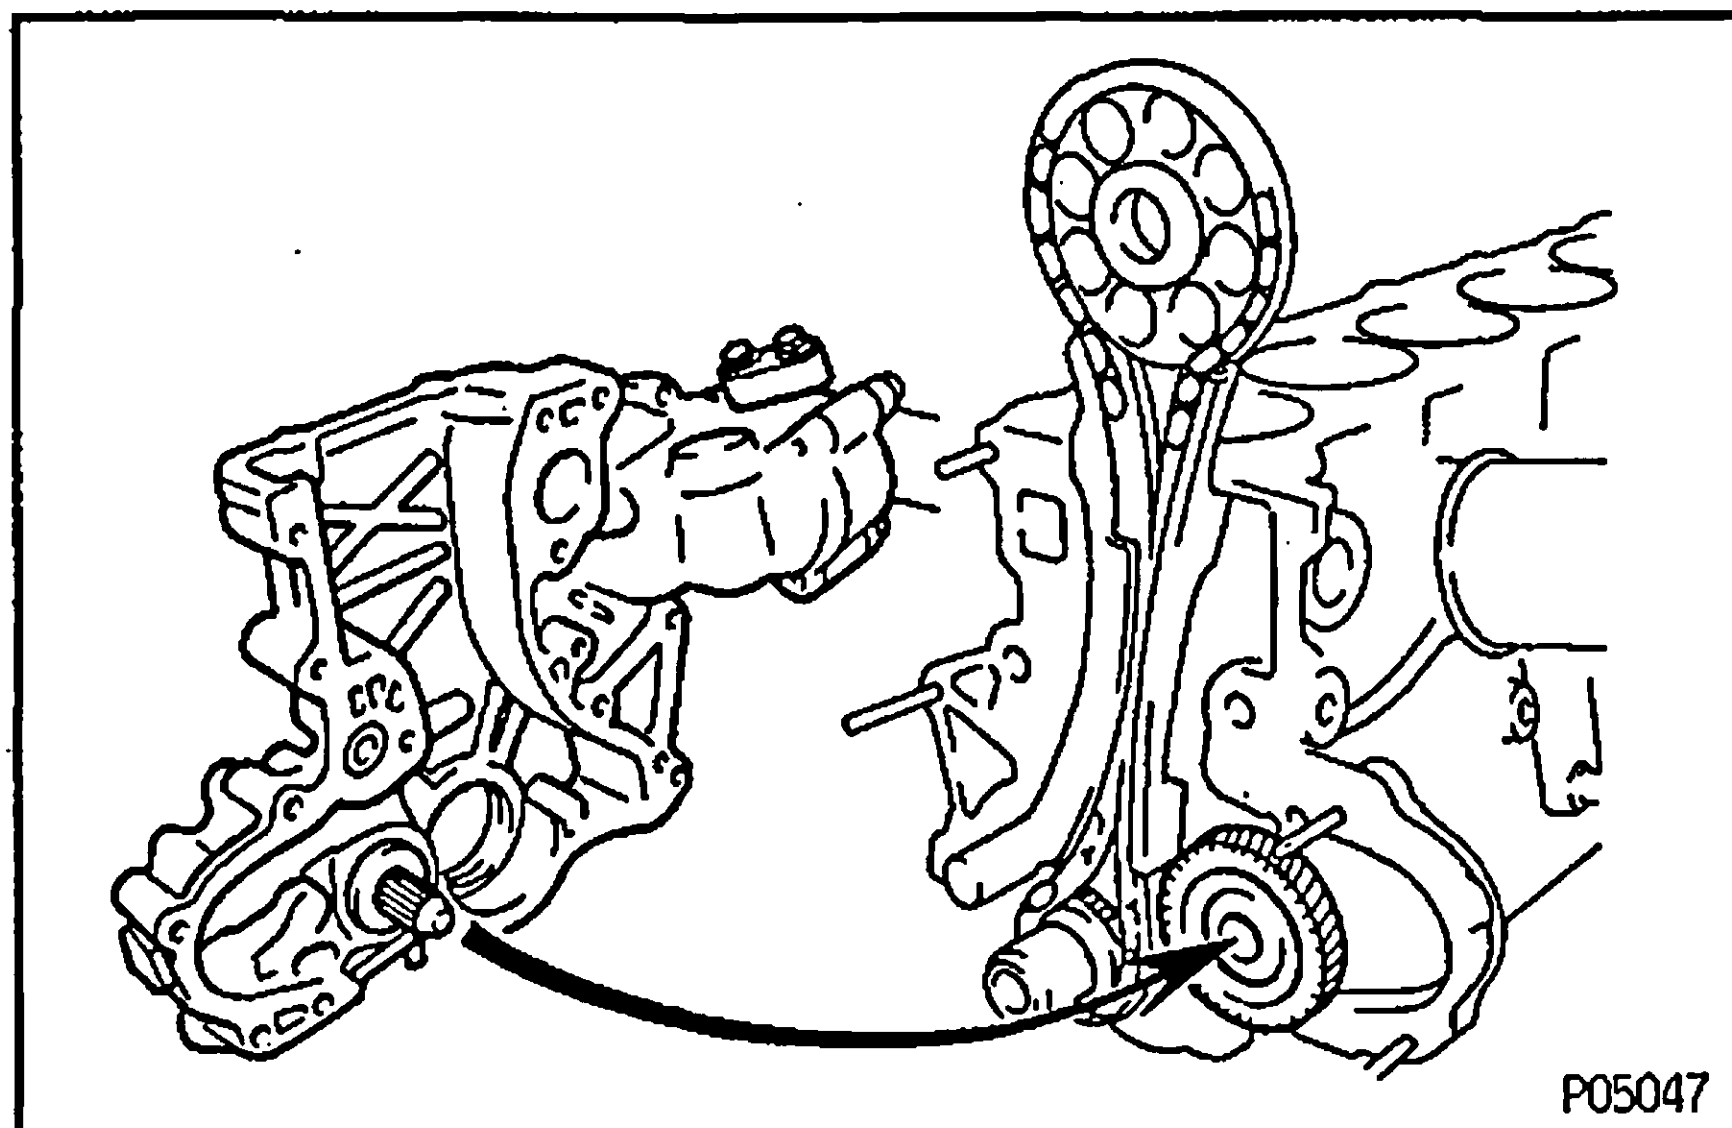

- (d) Engage the gear of the oil pump drive rotor with the gear of the oil pump drive gear, and slide the oil pump.

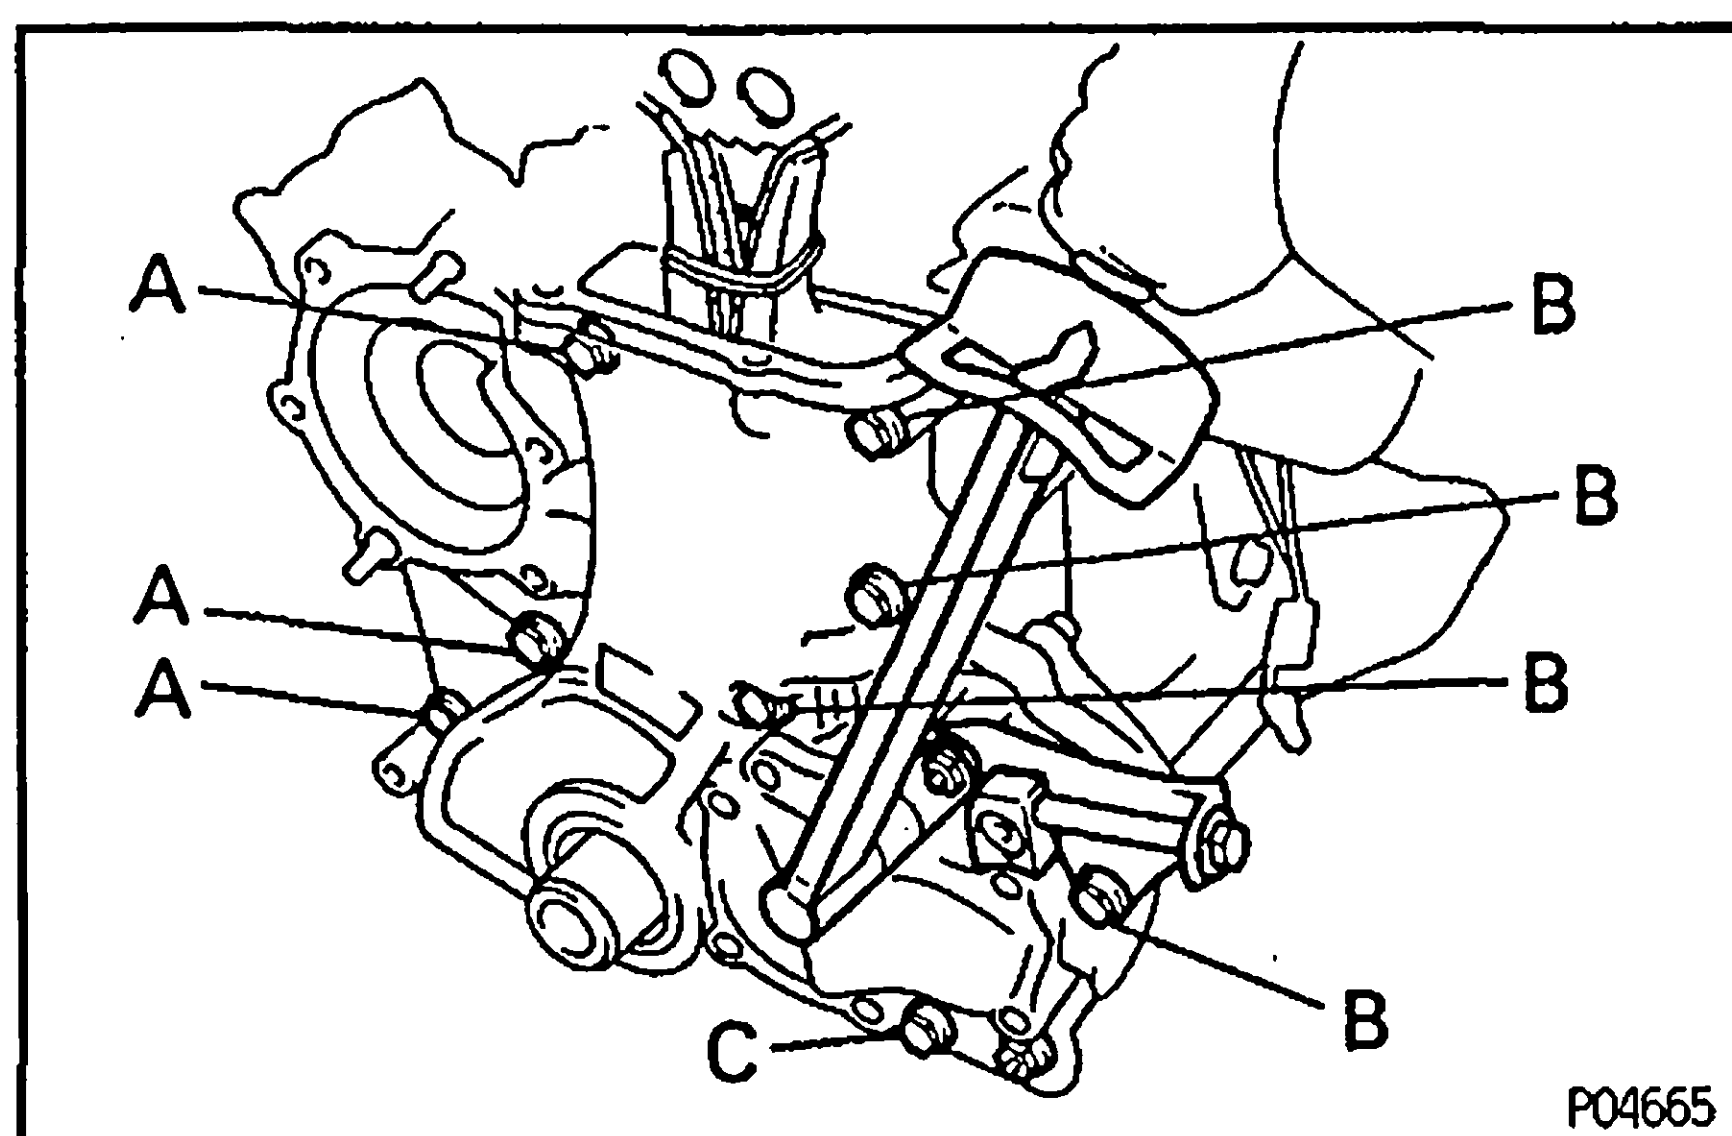

- (e) Install the oil pump and drive belt adjusting bar with the nine bolts and two nuts.

Torque: 21 N·m (210 kgf·cm, 15 ft·lbf)


HINT: Each bolt length is indicated in the illustration.


- A 30 mm (1.18 in.)
- B 50 mm (1.97 in.)
- C 60 mm (2.38 in.)

3. INSTALL DRIVE BELT IDLER PULLEY

Install the pulley with the bolt.

Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)

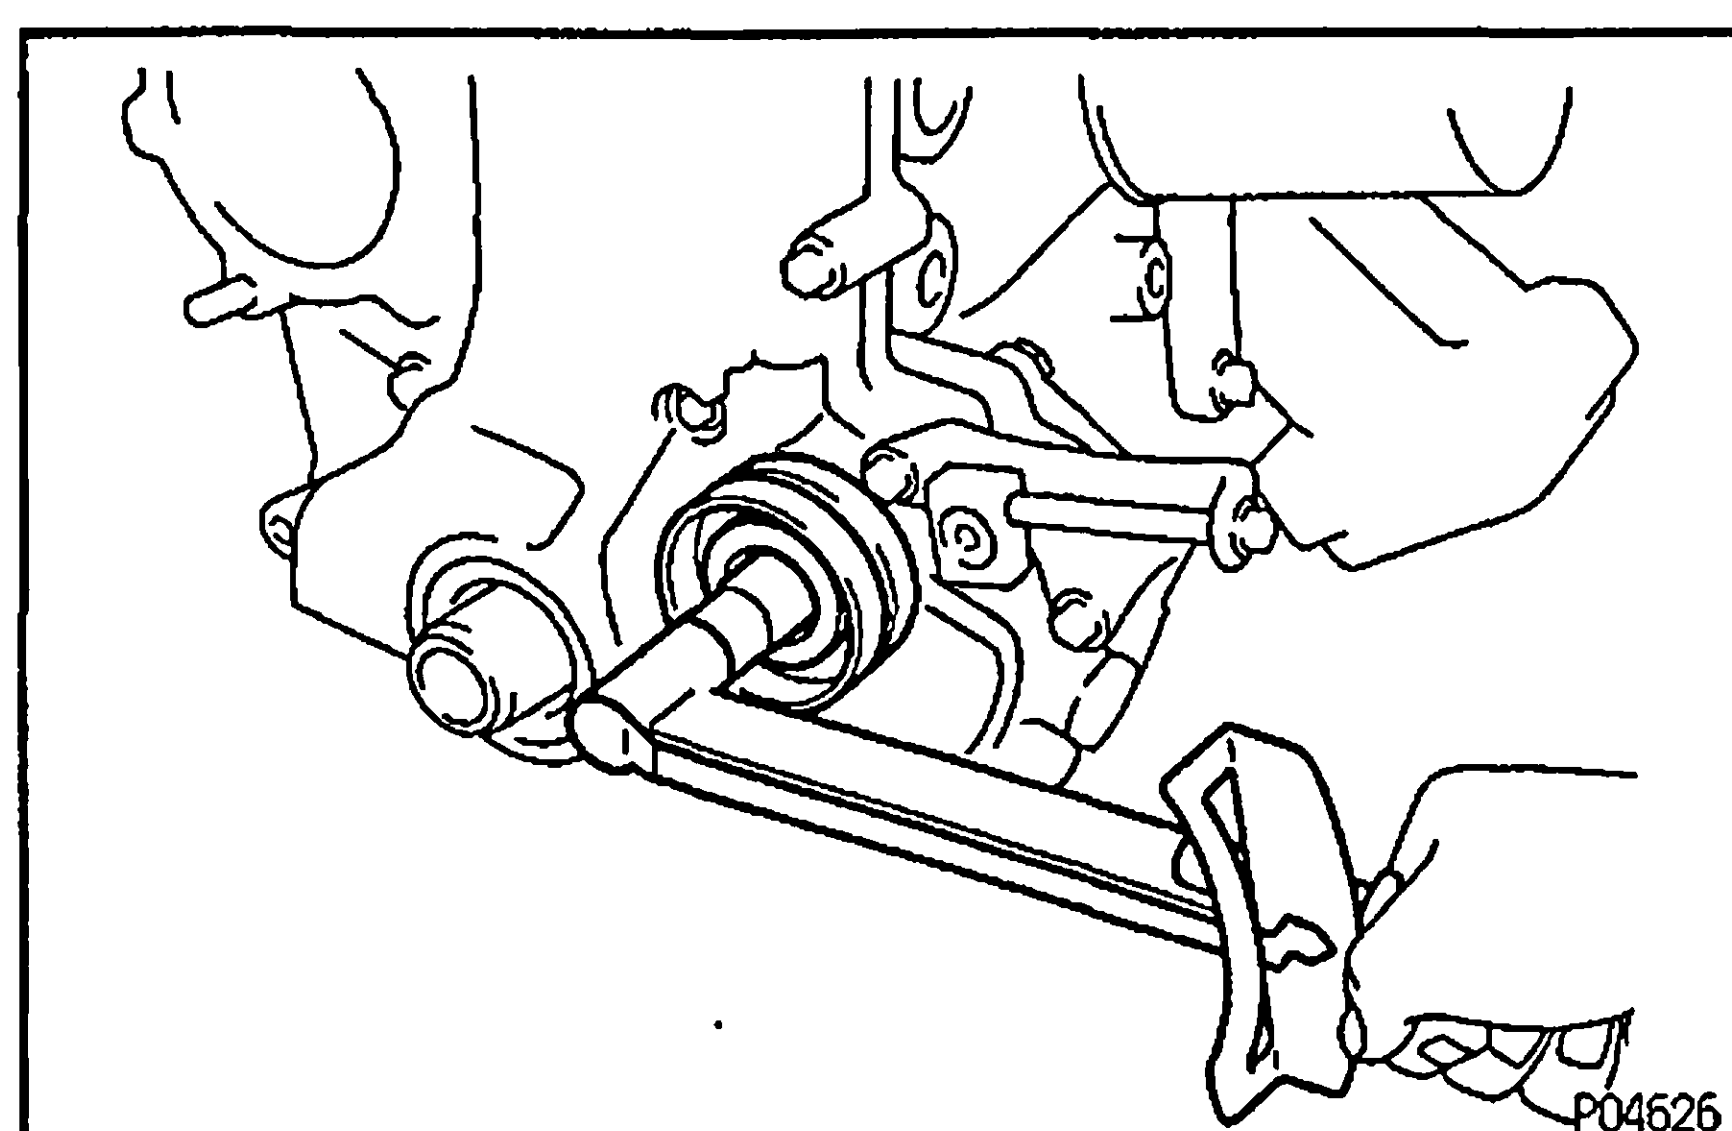


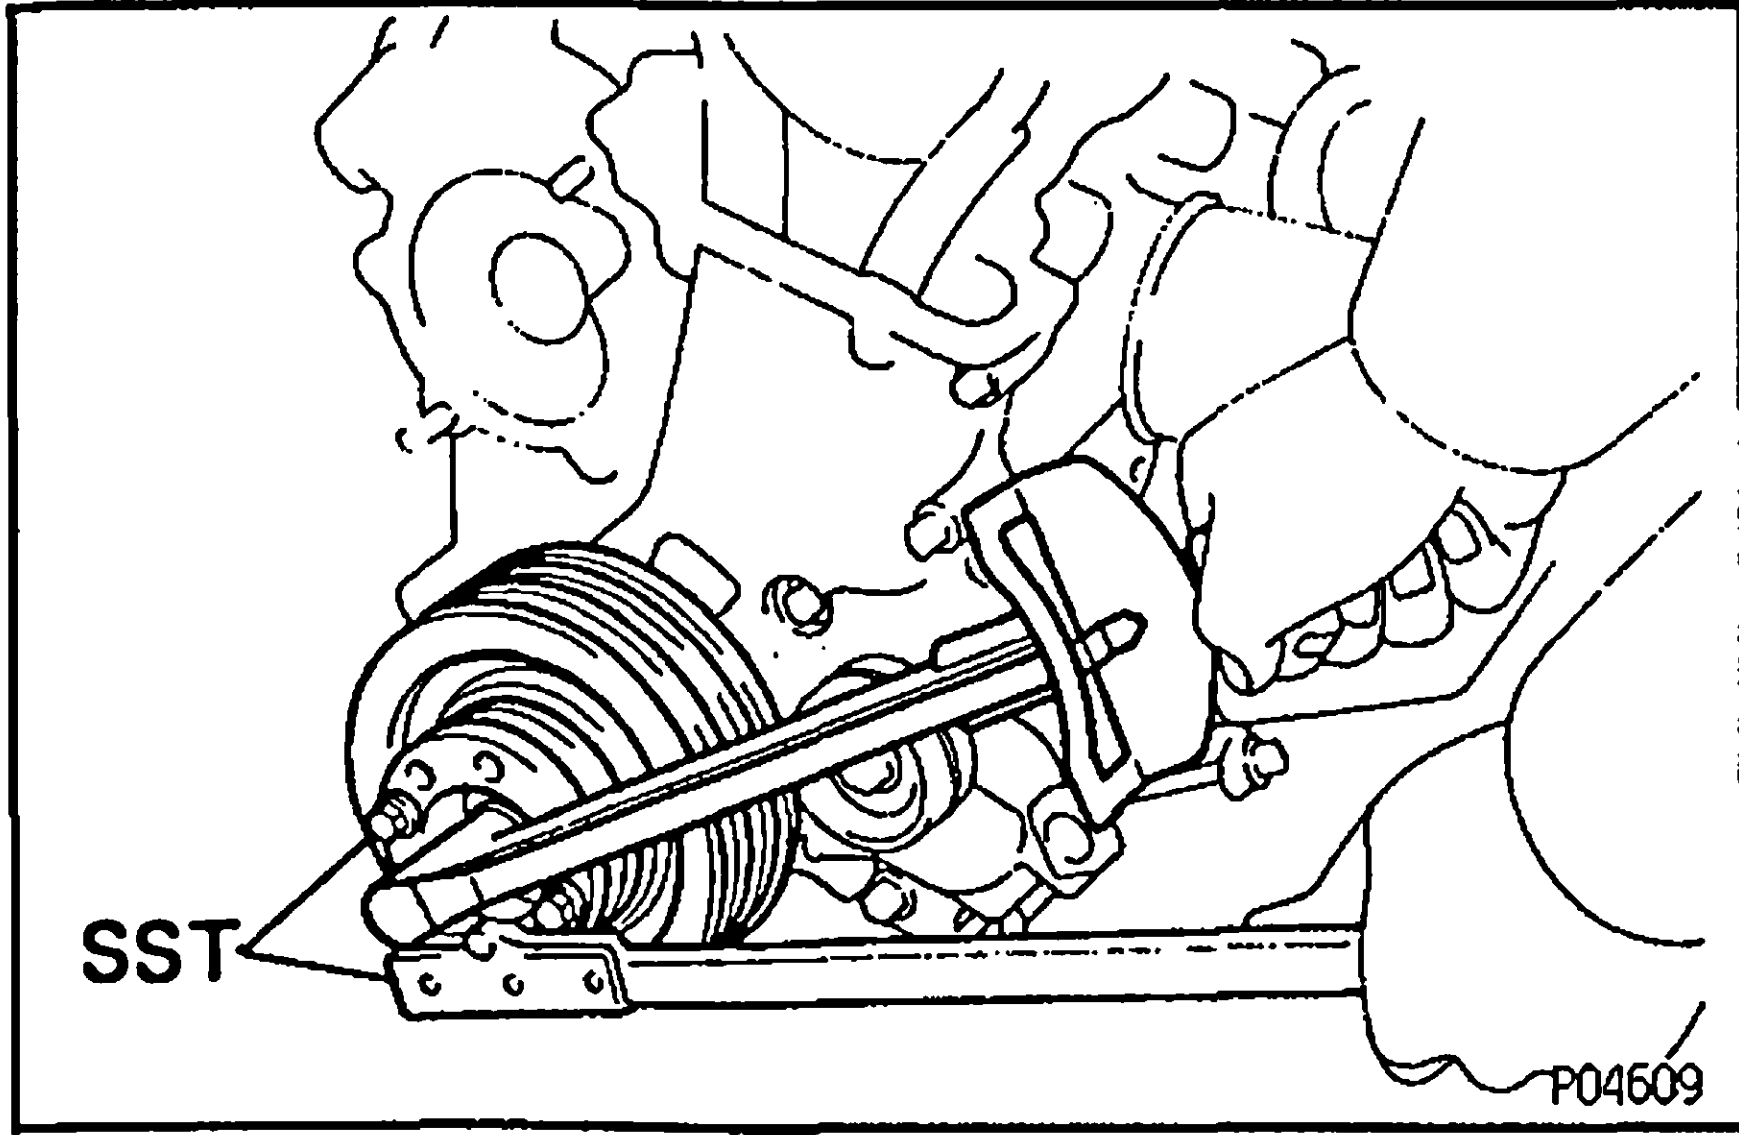

4. INSTALL CRANKSHAFT PULLEY


- (a) Align the pulley set key with the key groove of the pulley, and slide on the pulley.
- (b) Using SST, install and torque the pulley bolt.
SST 09213-58012, 09330-00021
Torque: 412 N·m (4,200 kgf·cm, 304 ft·lbf)

EG

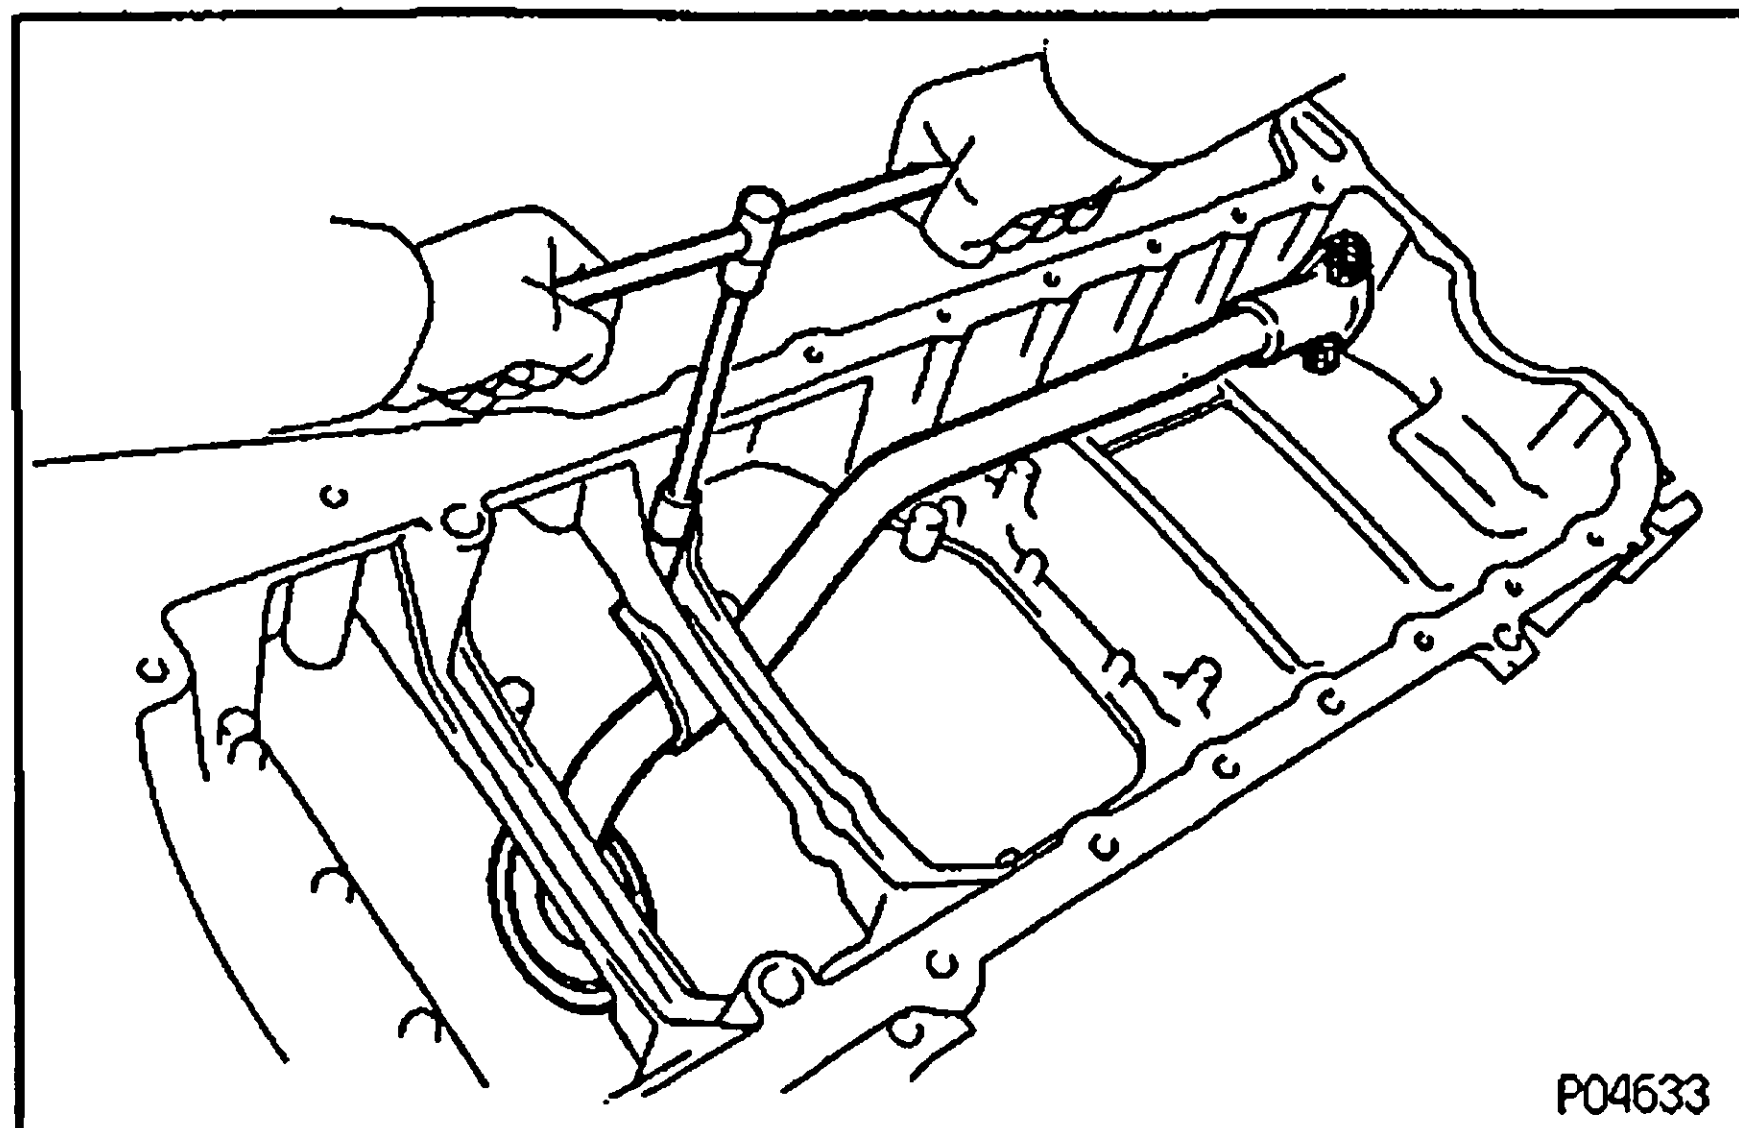


5. INSTALL OIL STRAINER

- Install a new gasket and the oil strainer with the bolt and two nuts.
Torque: 20 N·m (200 kgf·cm, 14 ft·lbf)

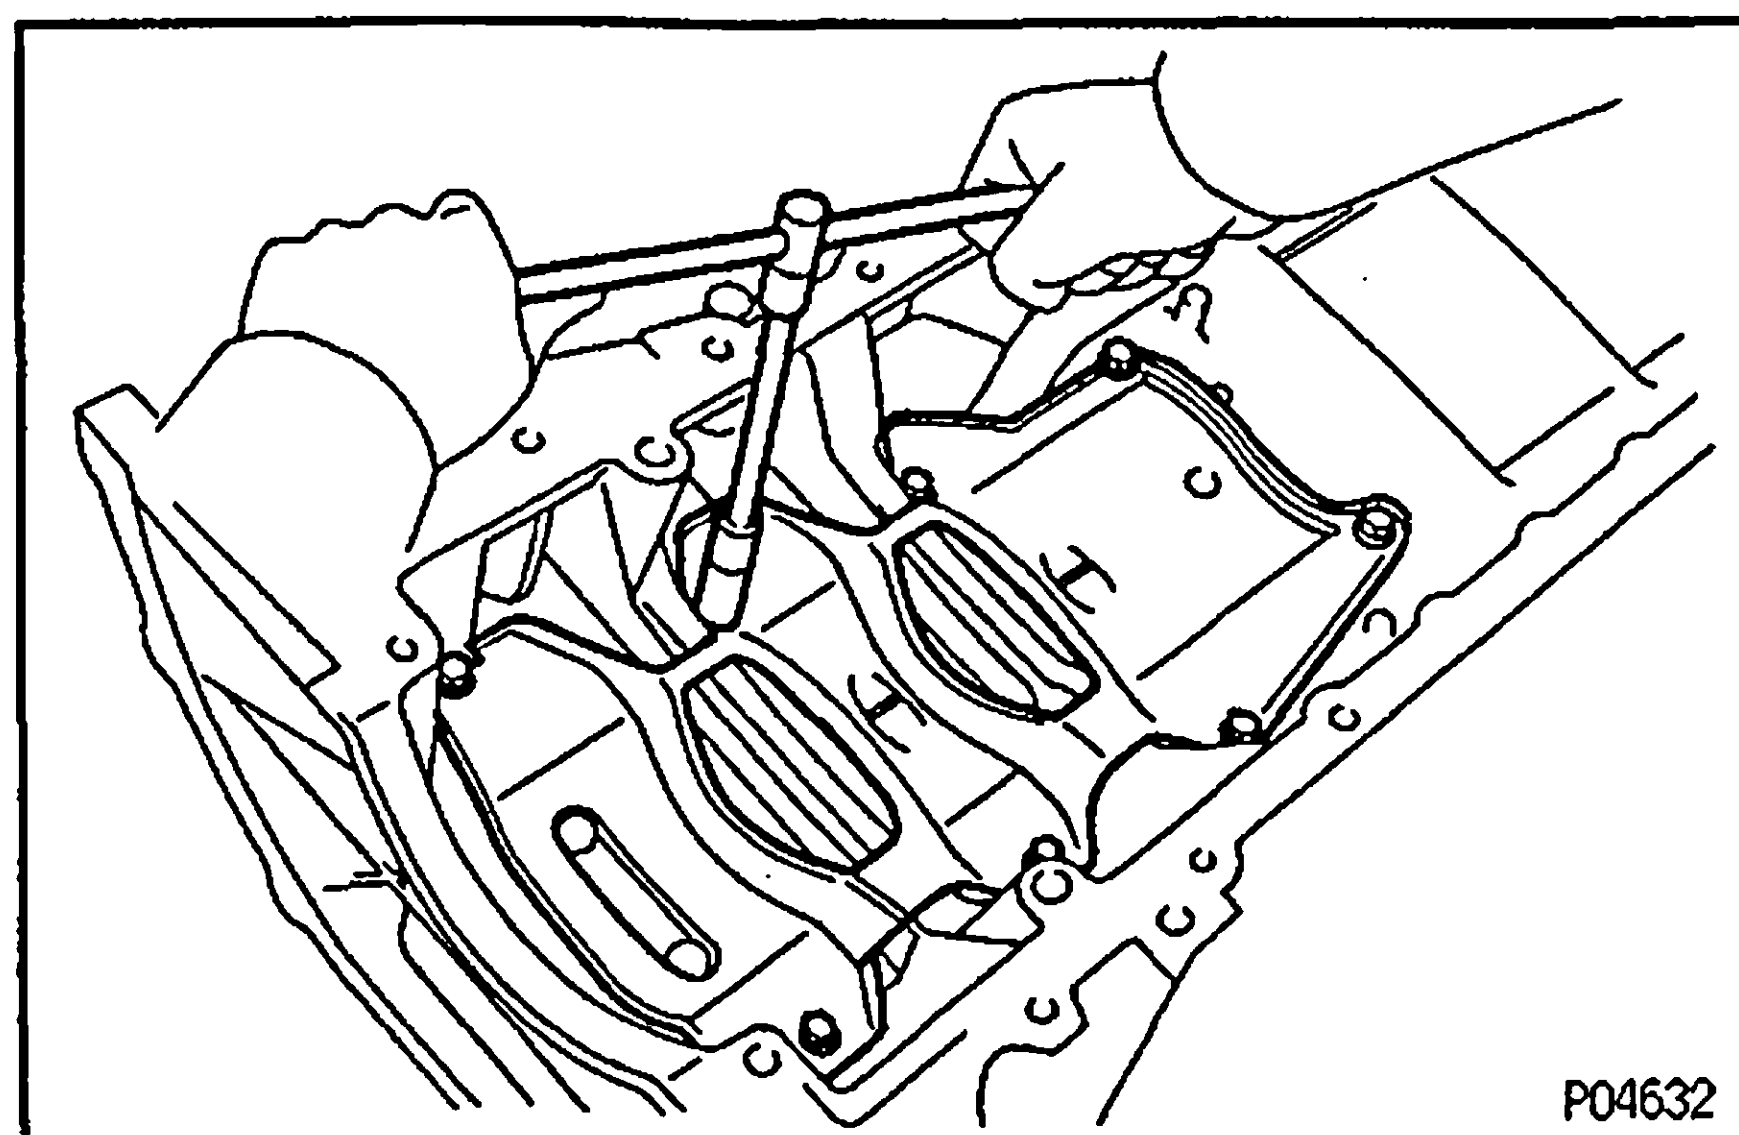

6. INSTALL OIL PAN BAFFLE PLATE

- Install the baffle plate with the eight bolts.
Torque: 7.8 N·m (80 kgf·cm, 69 in·lbf)

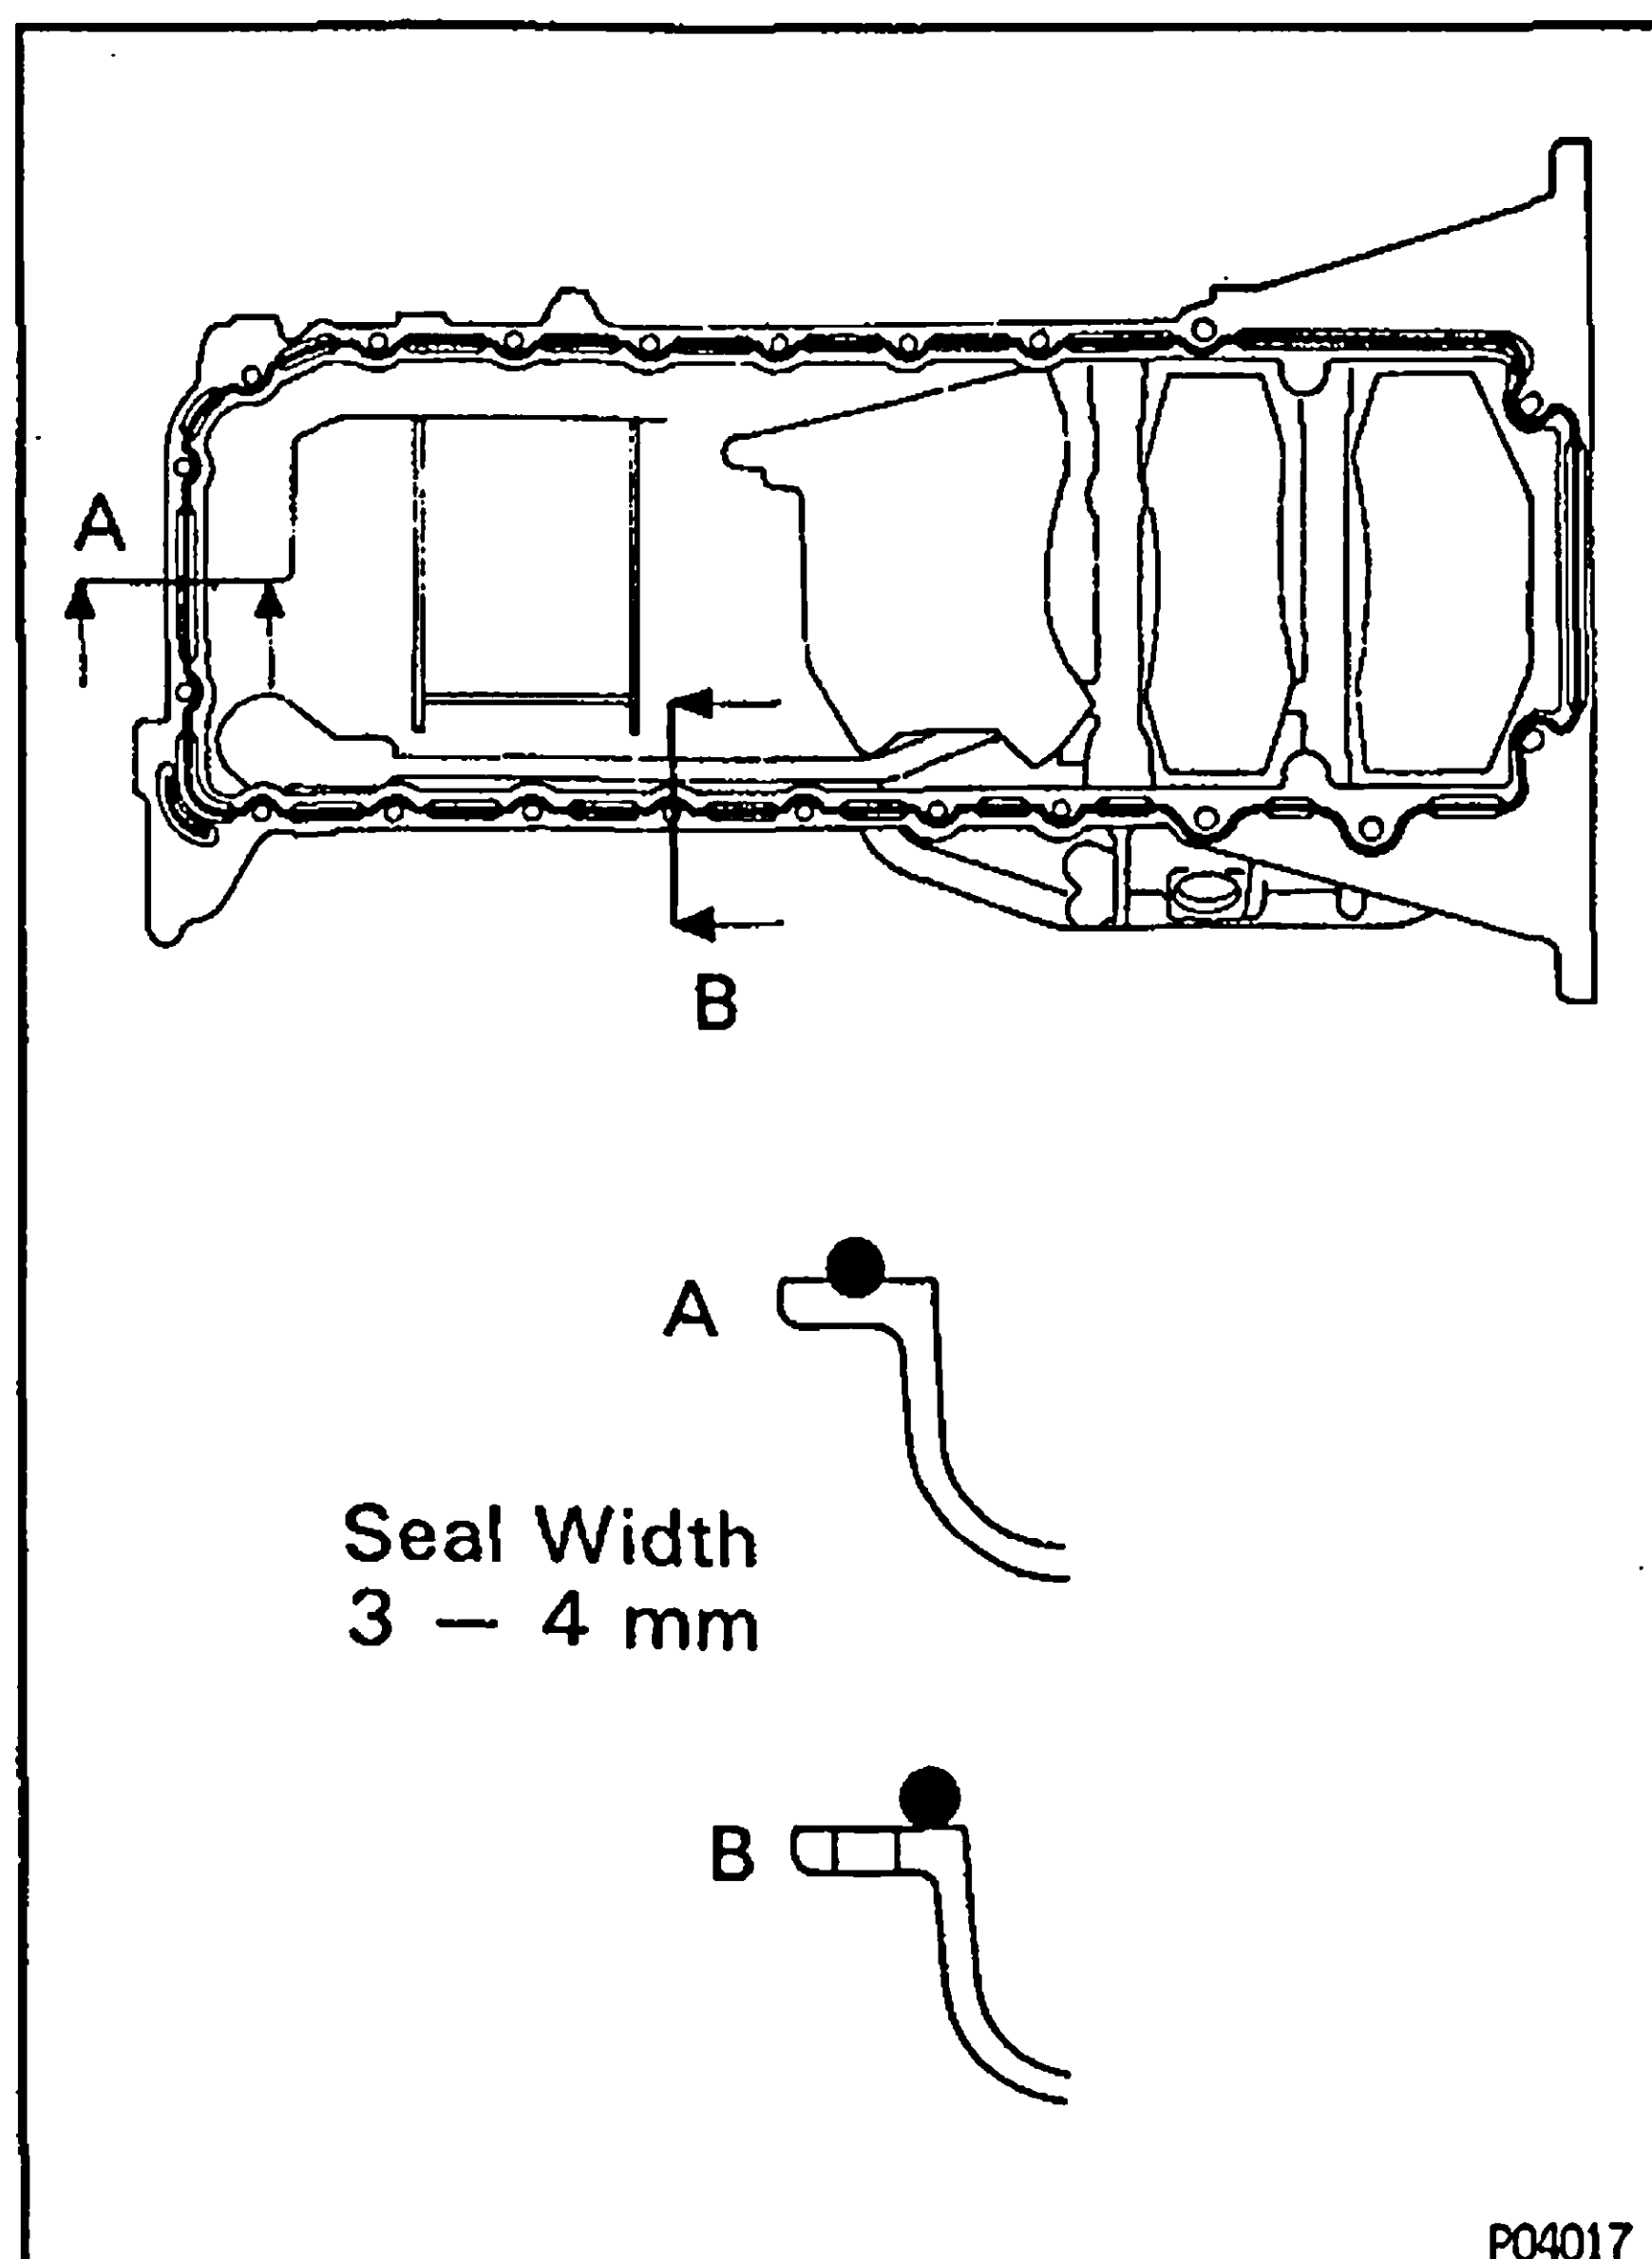


7. INSTALL NO.1 OIL PAN

- (a) Remove any old packing (FIPG) material and be careful not to drop any oil on the contact surfaces of the oil pan, oil pump and cylinder block.
 - Using a razor blade and gasket scraper, remove all the old packing (FIPG) material from the gasket surfaces and sealing grooves.
 - Thoroughly clean all components to remove all the loose material.
 - Using a non-residue solvent, clean both sealing surfaces.
- (b) Apply seal packing to the No.1 oil pan as shown in the illustration.
Seal packing:
Part No.08826-00080 or equivalent
 - Install a nozzle that has been cut to a 3 — 4 mm (0.12 — 0.16 in.) opening.


EG

HINT: Avoid applying an excessive amount to the surface.


- Parts must be assembled within 5 minutes of application. Otherwise the material must be removed and reapplied.
- Immediately remove nozzle from the tube and reinstall cap.

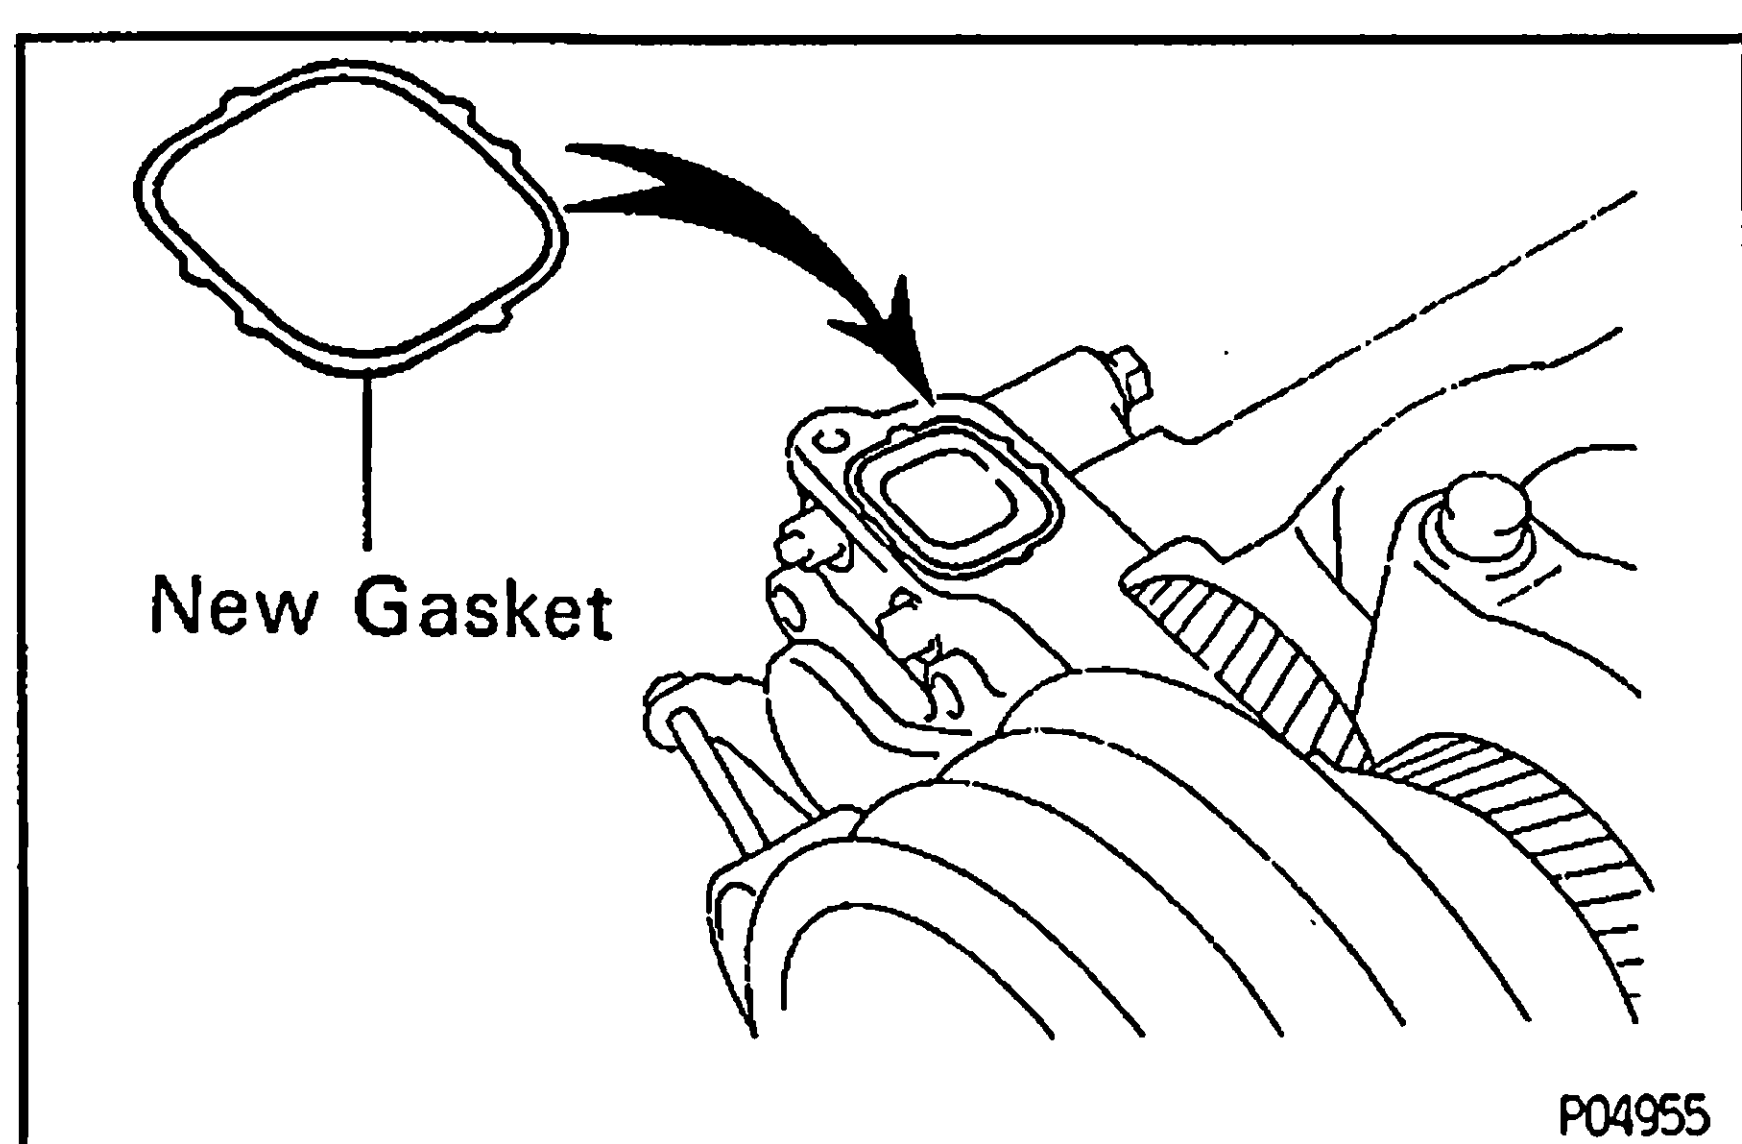

(c) Install a new gasket in position.

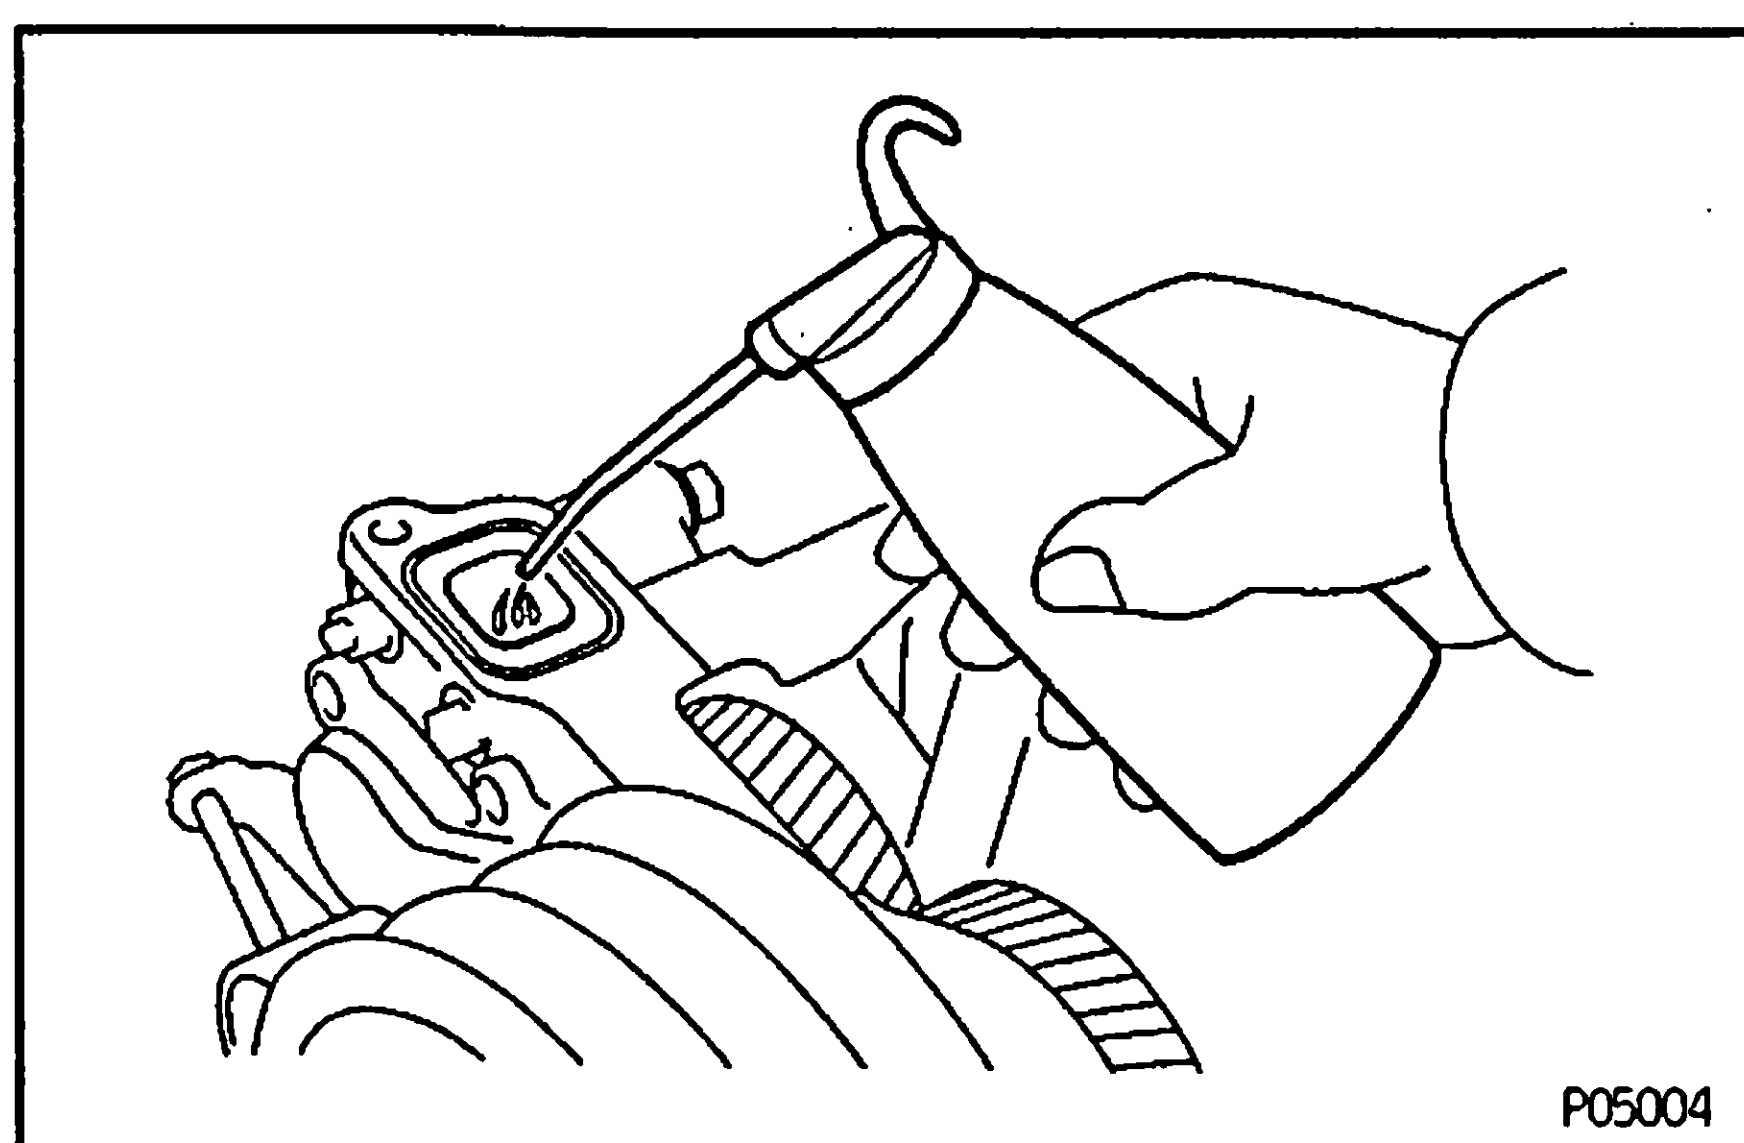


(d) Pour in approximately 15 cm³ (0.9 cu in.) of engine oil in position.

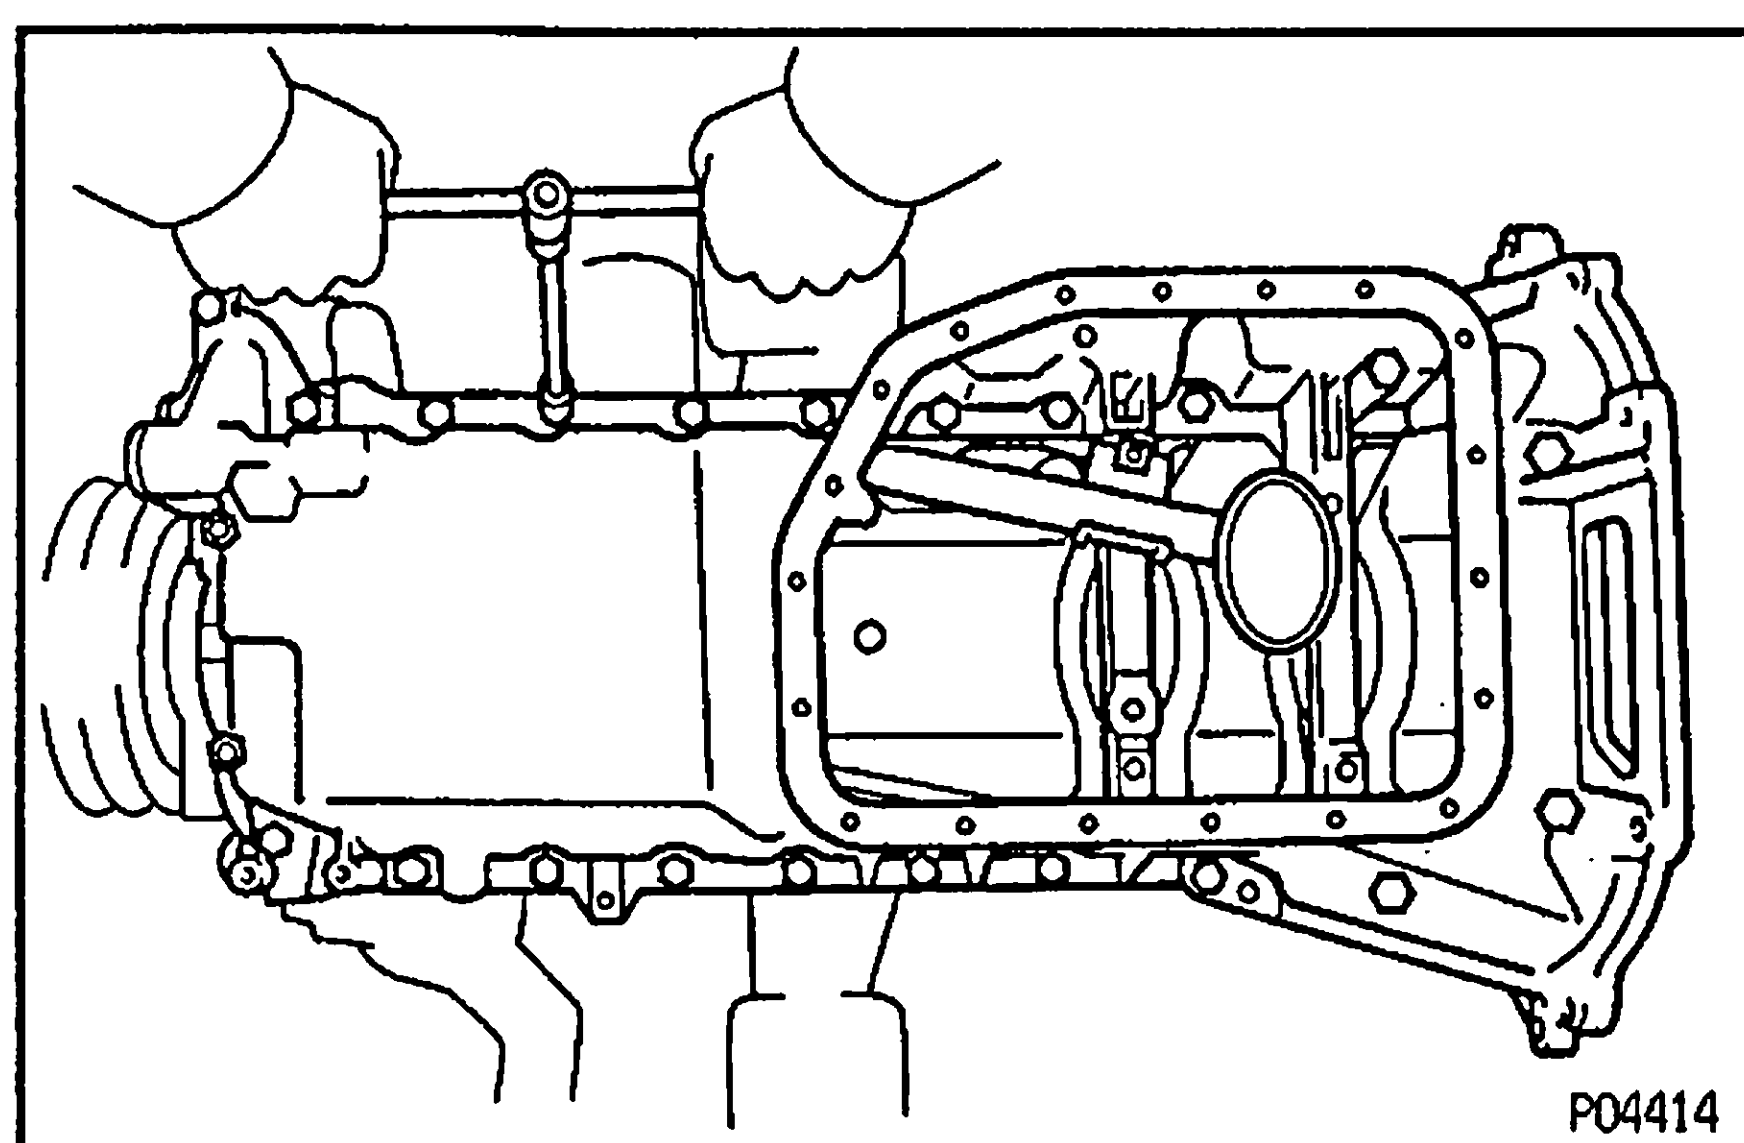

(e) Install the No.1 oil pan with the 21 bolts and two nuts.
14 mm head
Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)
12 mm head
Torque: 20 N·m (200 kgf·cm, 14 ft·lbf)

8. INSTALL NO.2 OIL PAN

- (a) Remove any old packing (FIPG) material and be careful not to drop any oil on the contact surface of the No.1 oil pan.
- Using a razor blade and gasket scraper, remove all the old packing (FIPG) material from the gasket surfaces and sealing grooves.
 - Thoroughly clean all components to remove all the loose material.

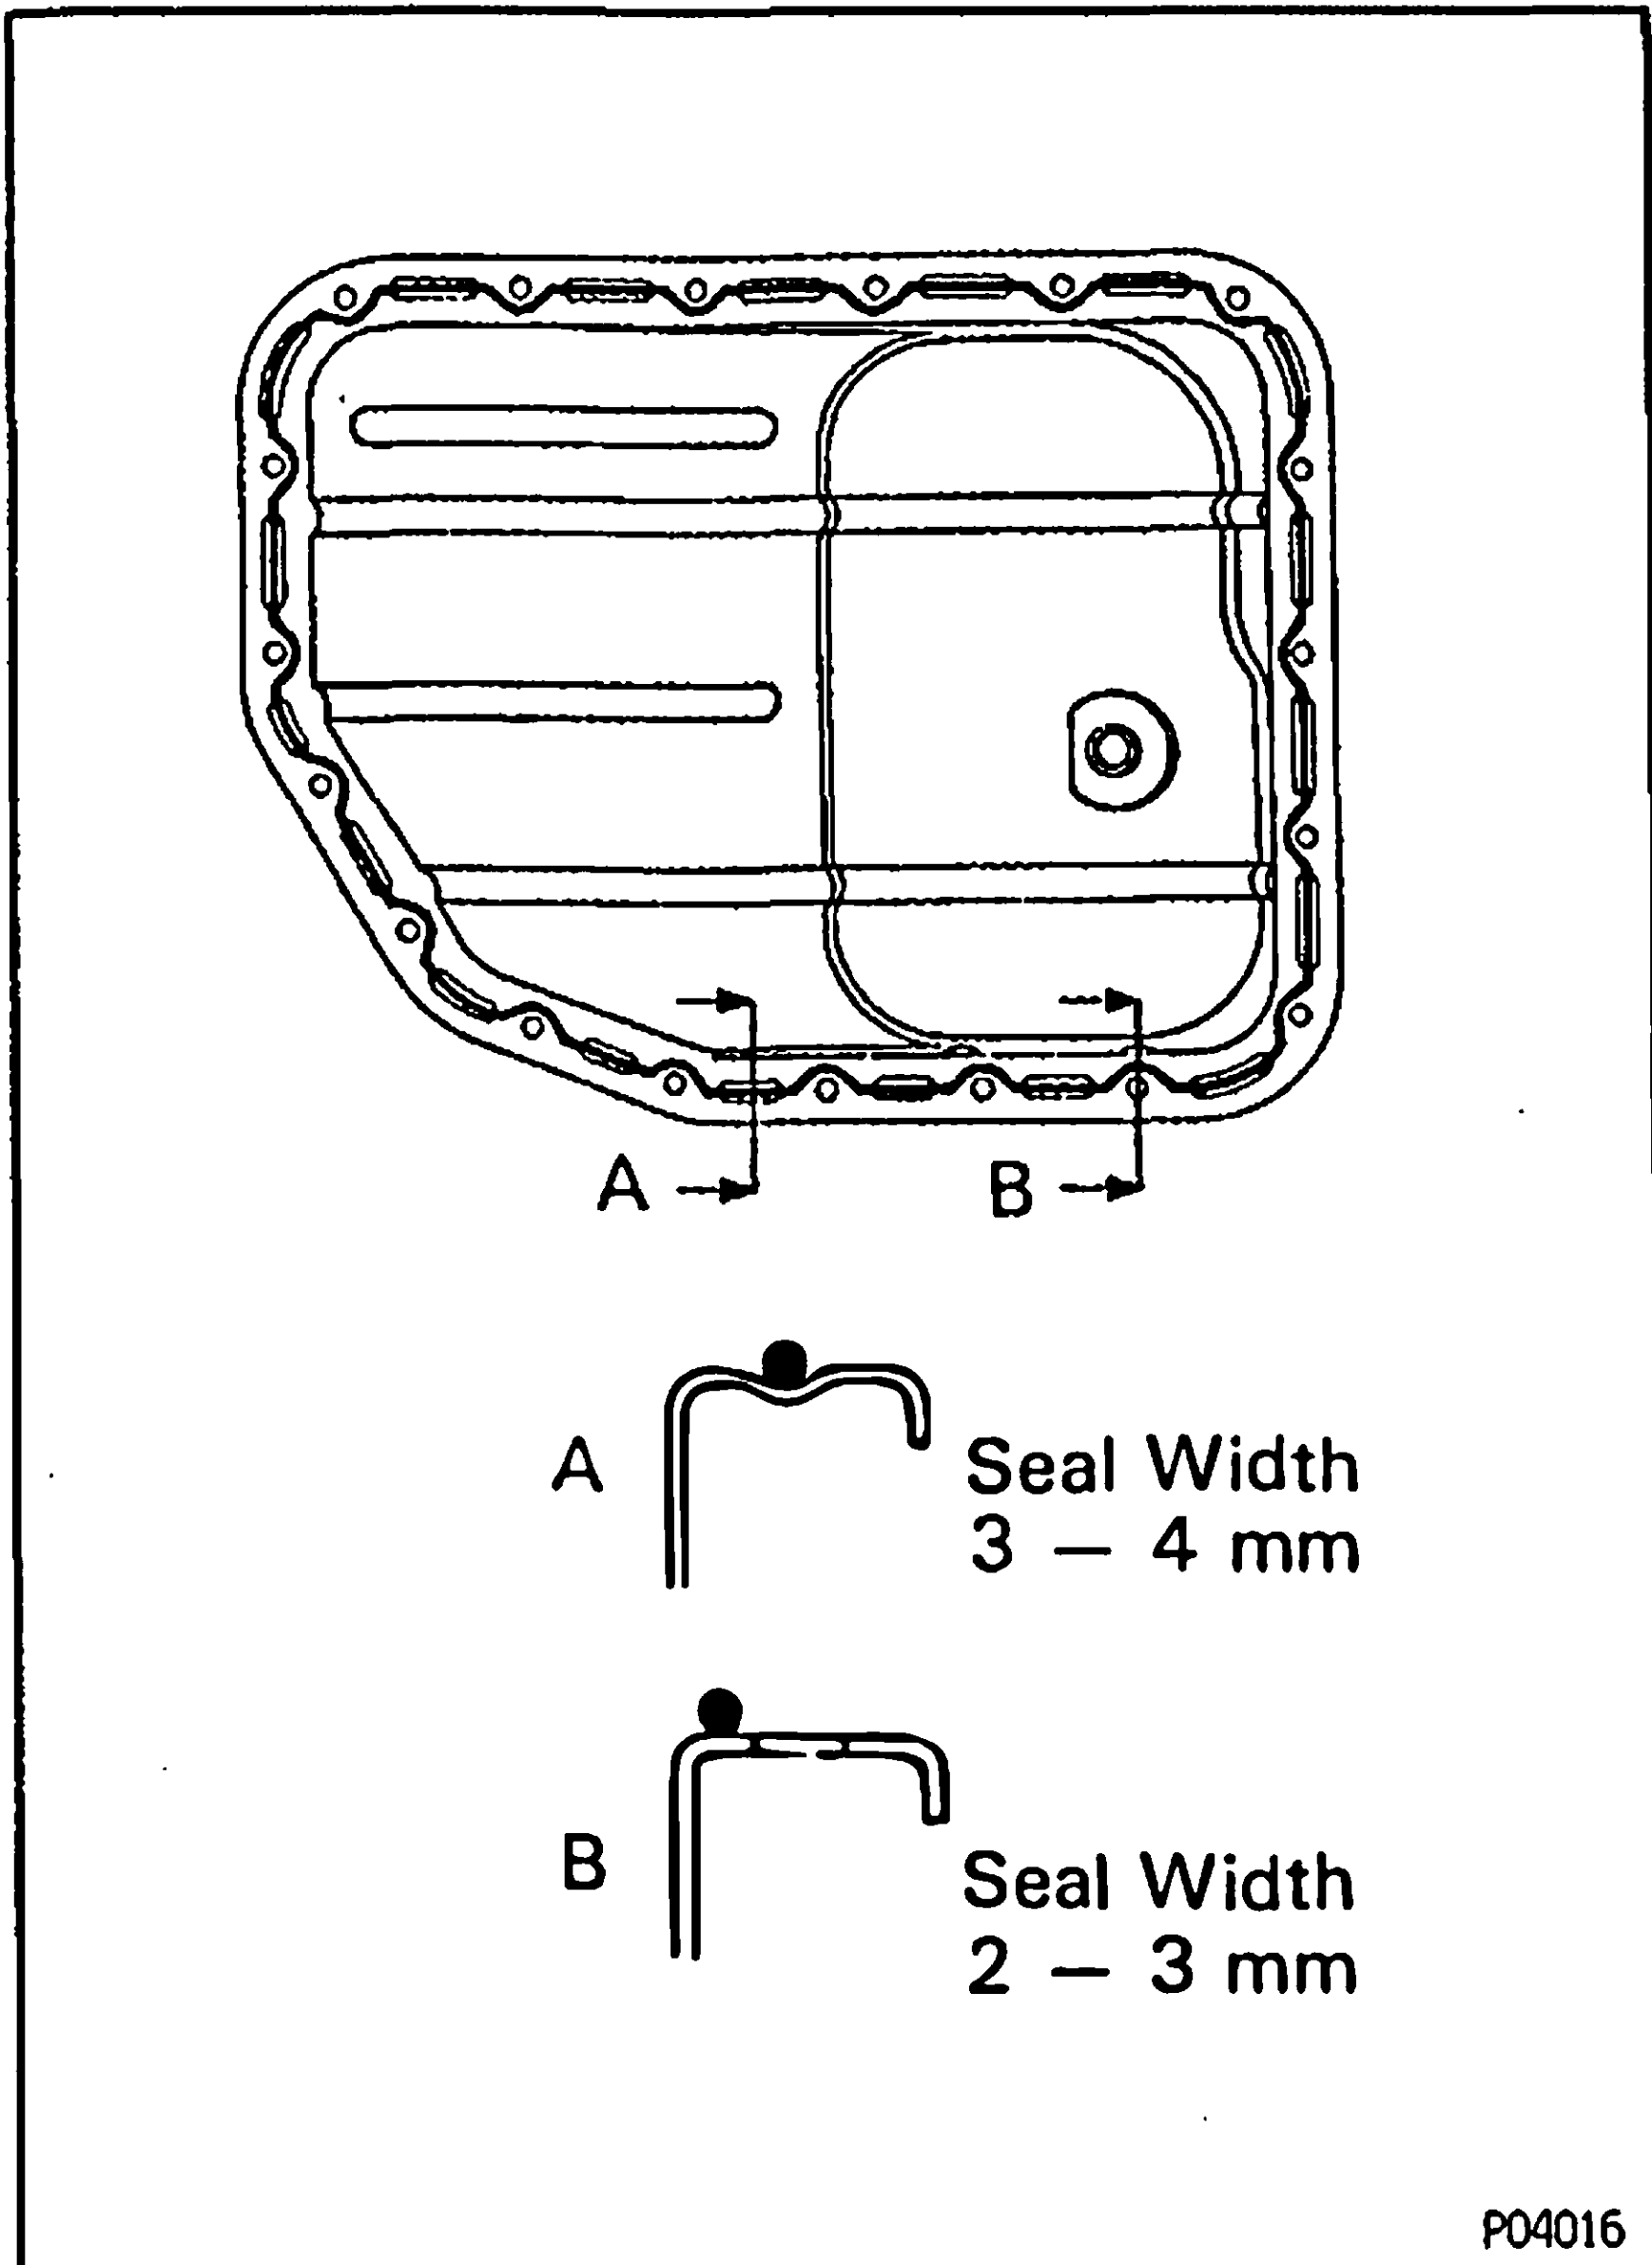

- Using a non-residue solvent, clean both sealing surfaces.

(b) Apply seal packing to the No.2 oil pan as shown in the illustration.

NOTICE: Do not use a solvent which will affect the painted surfaces.

Seal packing:


Part No.08826 – 00080 or equivalent

- Install a nozzle that has been cut to a 2 – 3 mm (0.08 – 0.12 in.) opening or 3 – 4 mm (0.012 – 0.016 in.) opening.

HINT: Avoid applying an excessive amount to the surface.

- Parts must be assembled within 5 minutes of application. Otherwise the material must be removed and reapplied.
- Immediately remove nozzle from the tube and reinstall cap.

EG

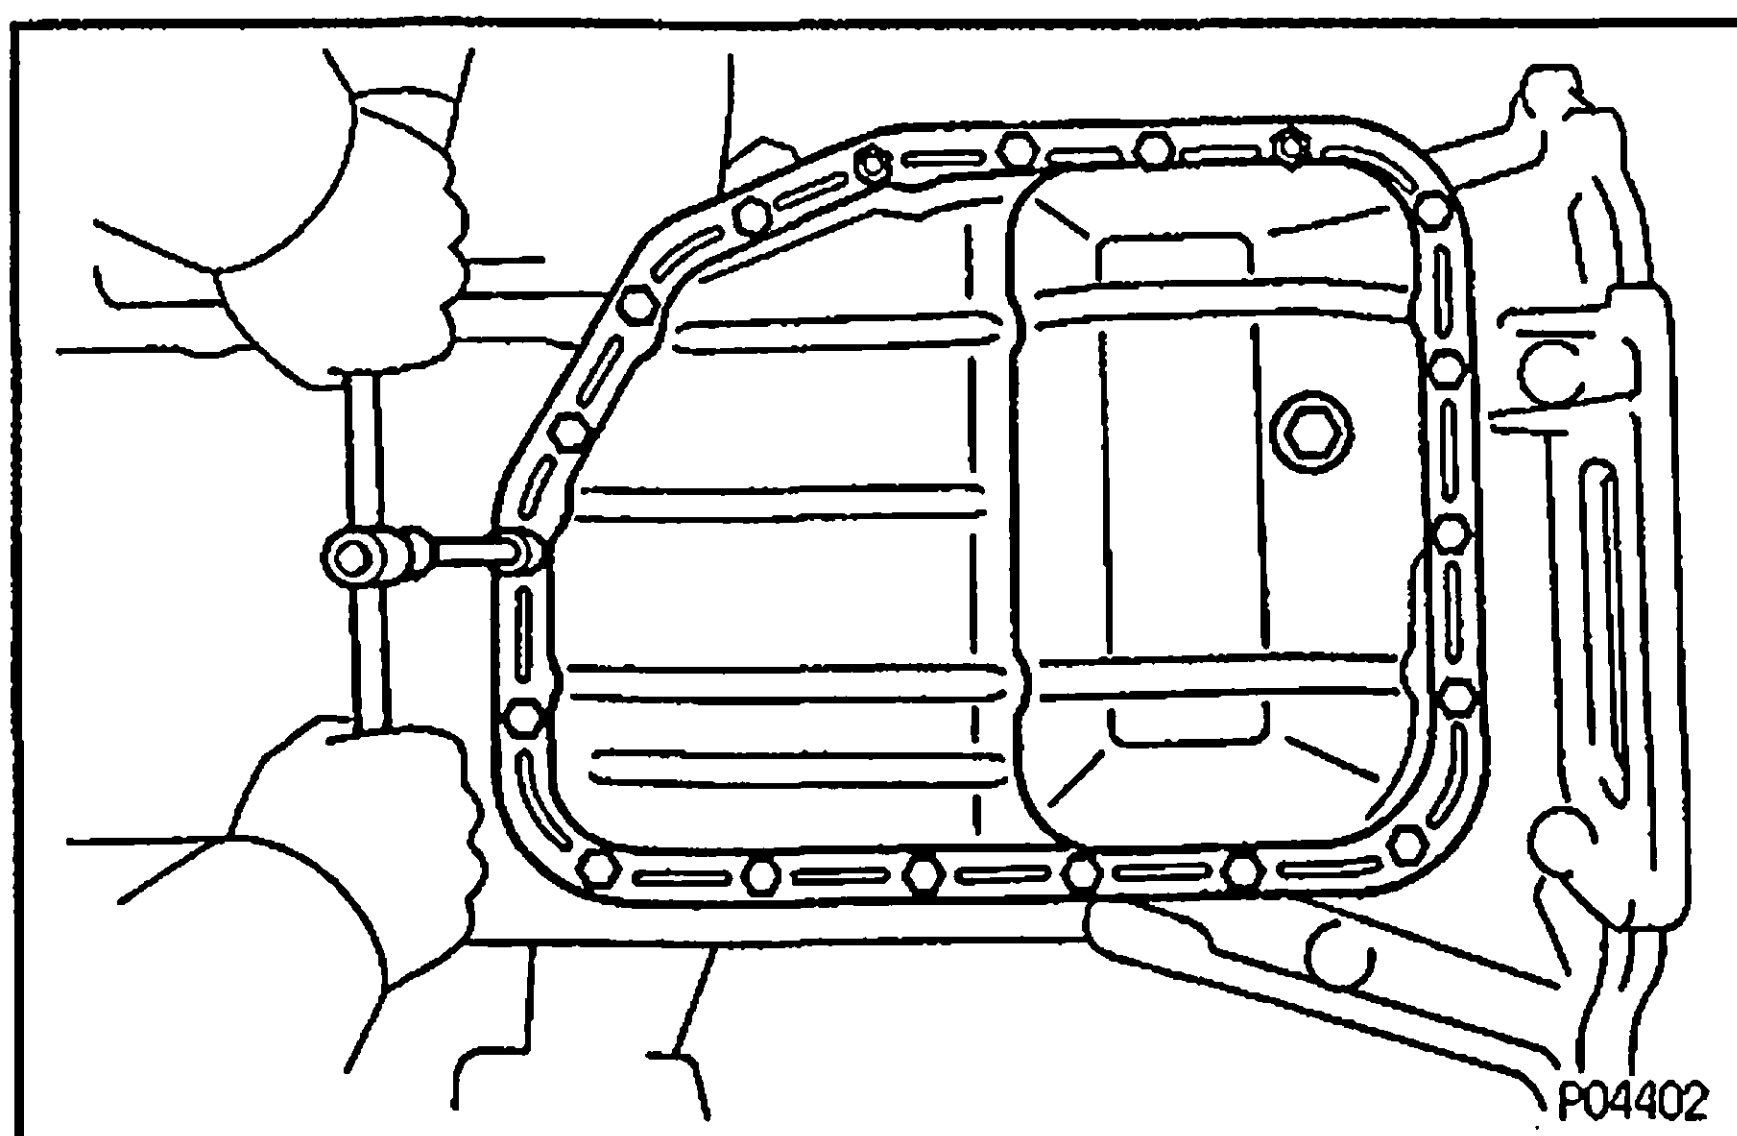

(c) Install the No.2 oil pan with the twelve bolts and two nuts.

Bolt

Torque: 7.8 N·m (80 kgf·cm, 69 in.·lbf)

Nut


Torque: 8.8 N·m (90 kgf·cm, 78 in.·lbf)

9. INSTALL CYLINDER HEAD
10. INSTALL WATER PUMP
11. FILL WITH ENGINE OIL

OIL COOLER COMPONENTS


EGOPT-01

EG

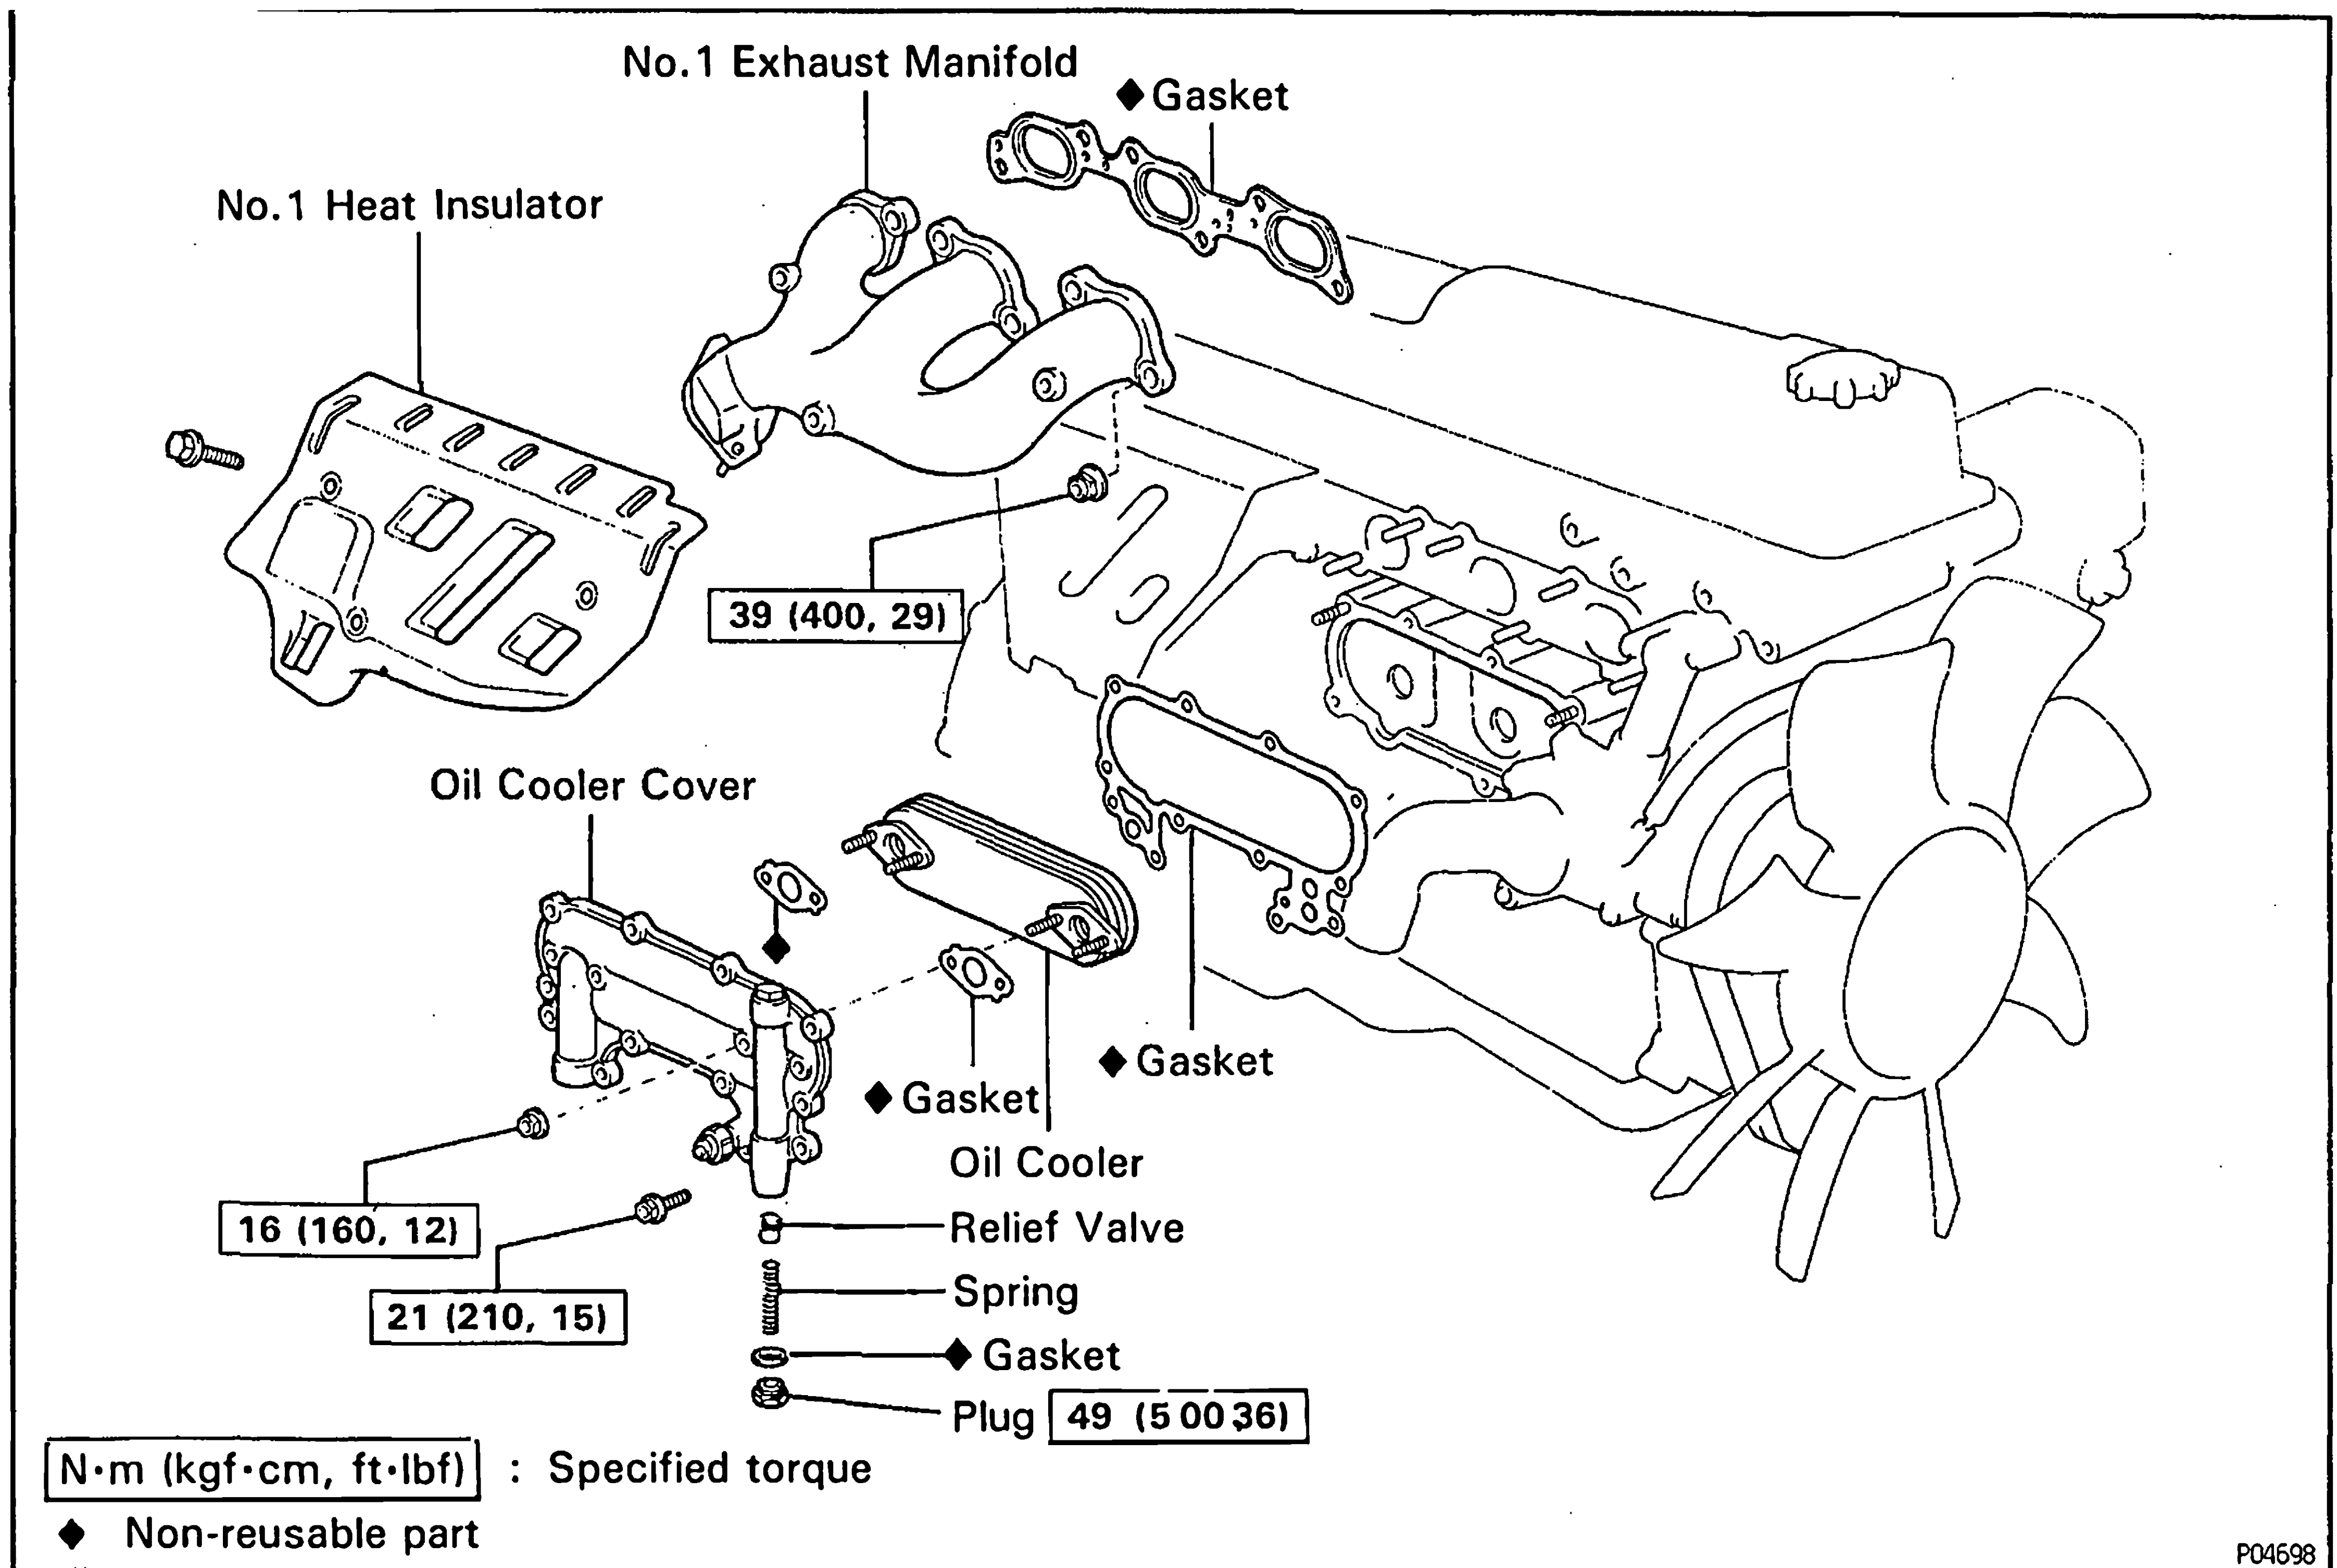


P04698

EGONR-01

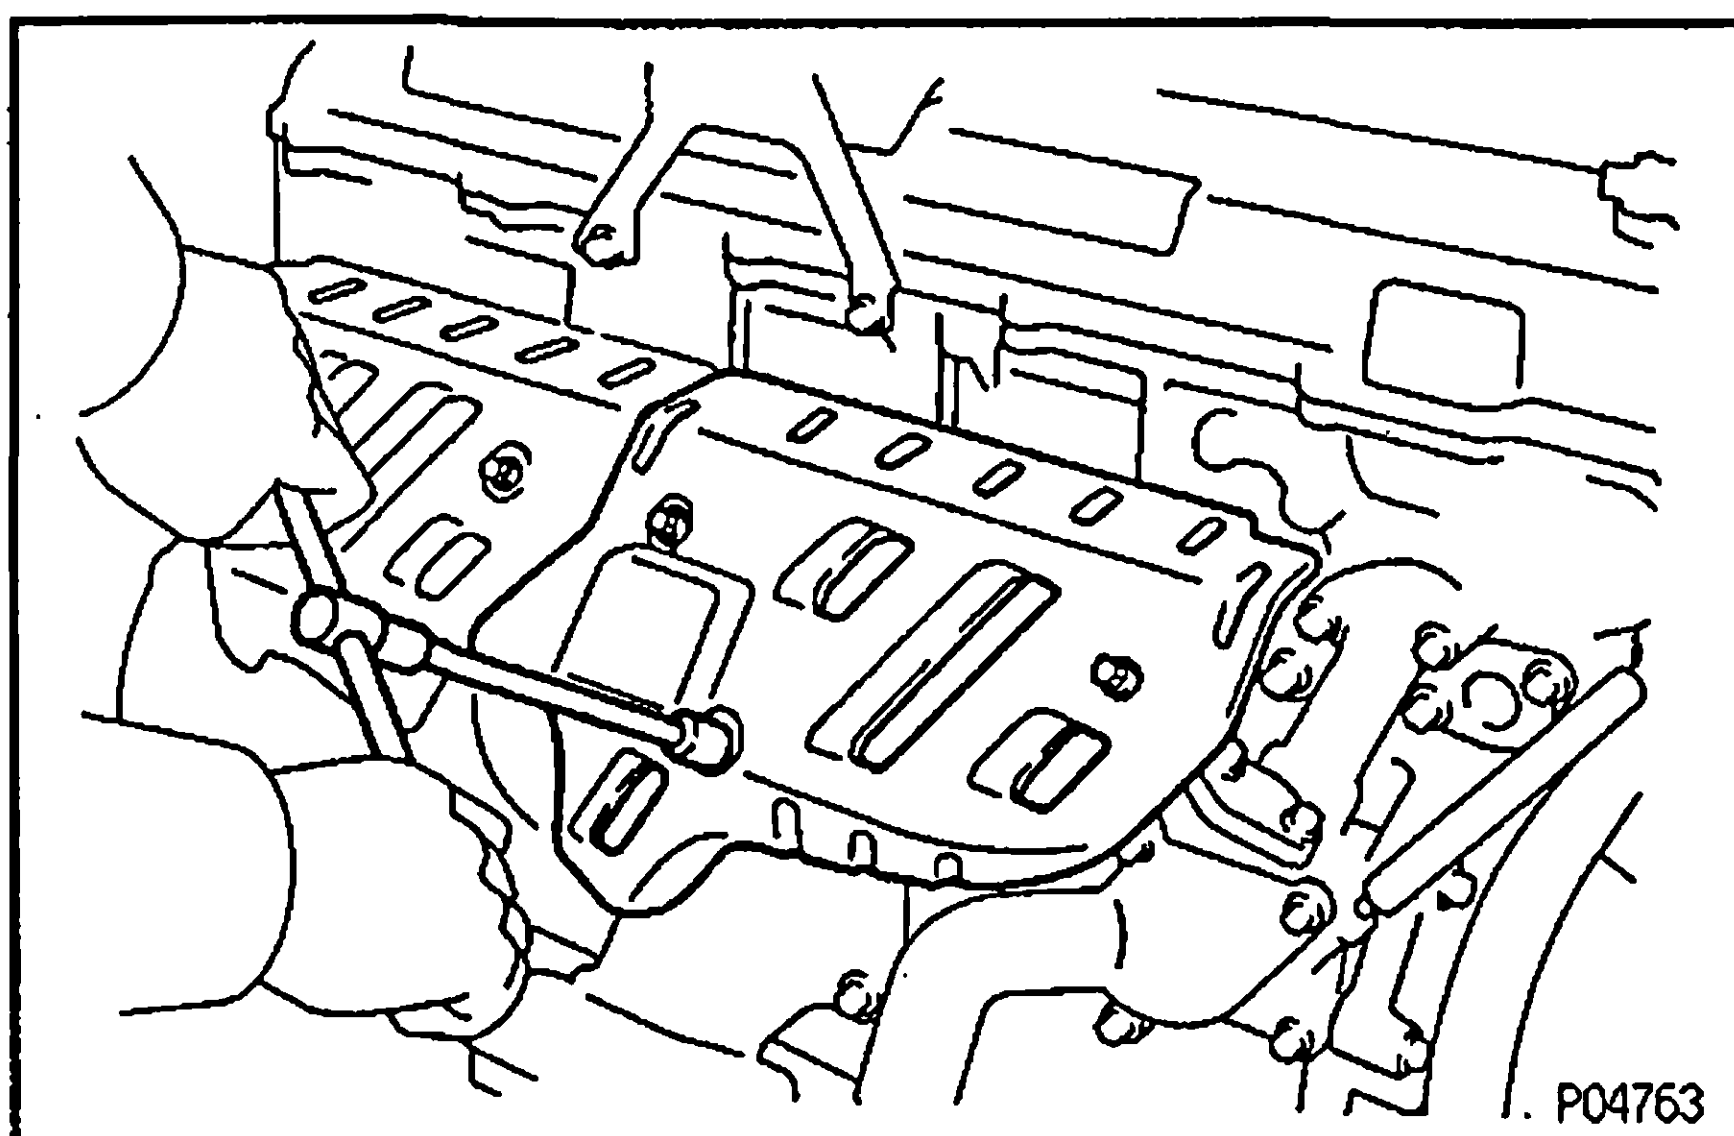


OIL COOLER REMOVAL

1. DRAIN ENGINE COOLANT
2. REMOVE NO.1 EXHAUST MANIFOLD
 - (a) Remove the three bolts and No.1 heat insulator.

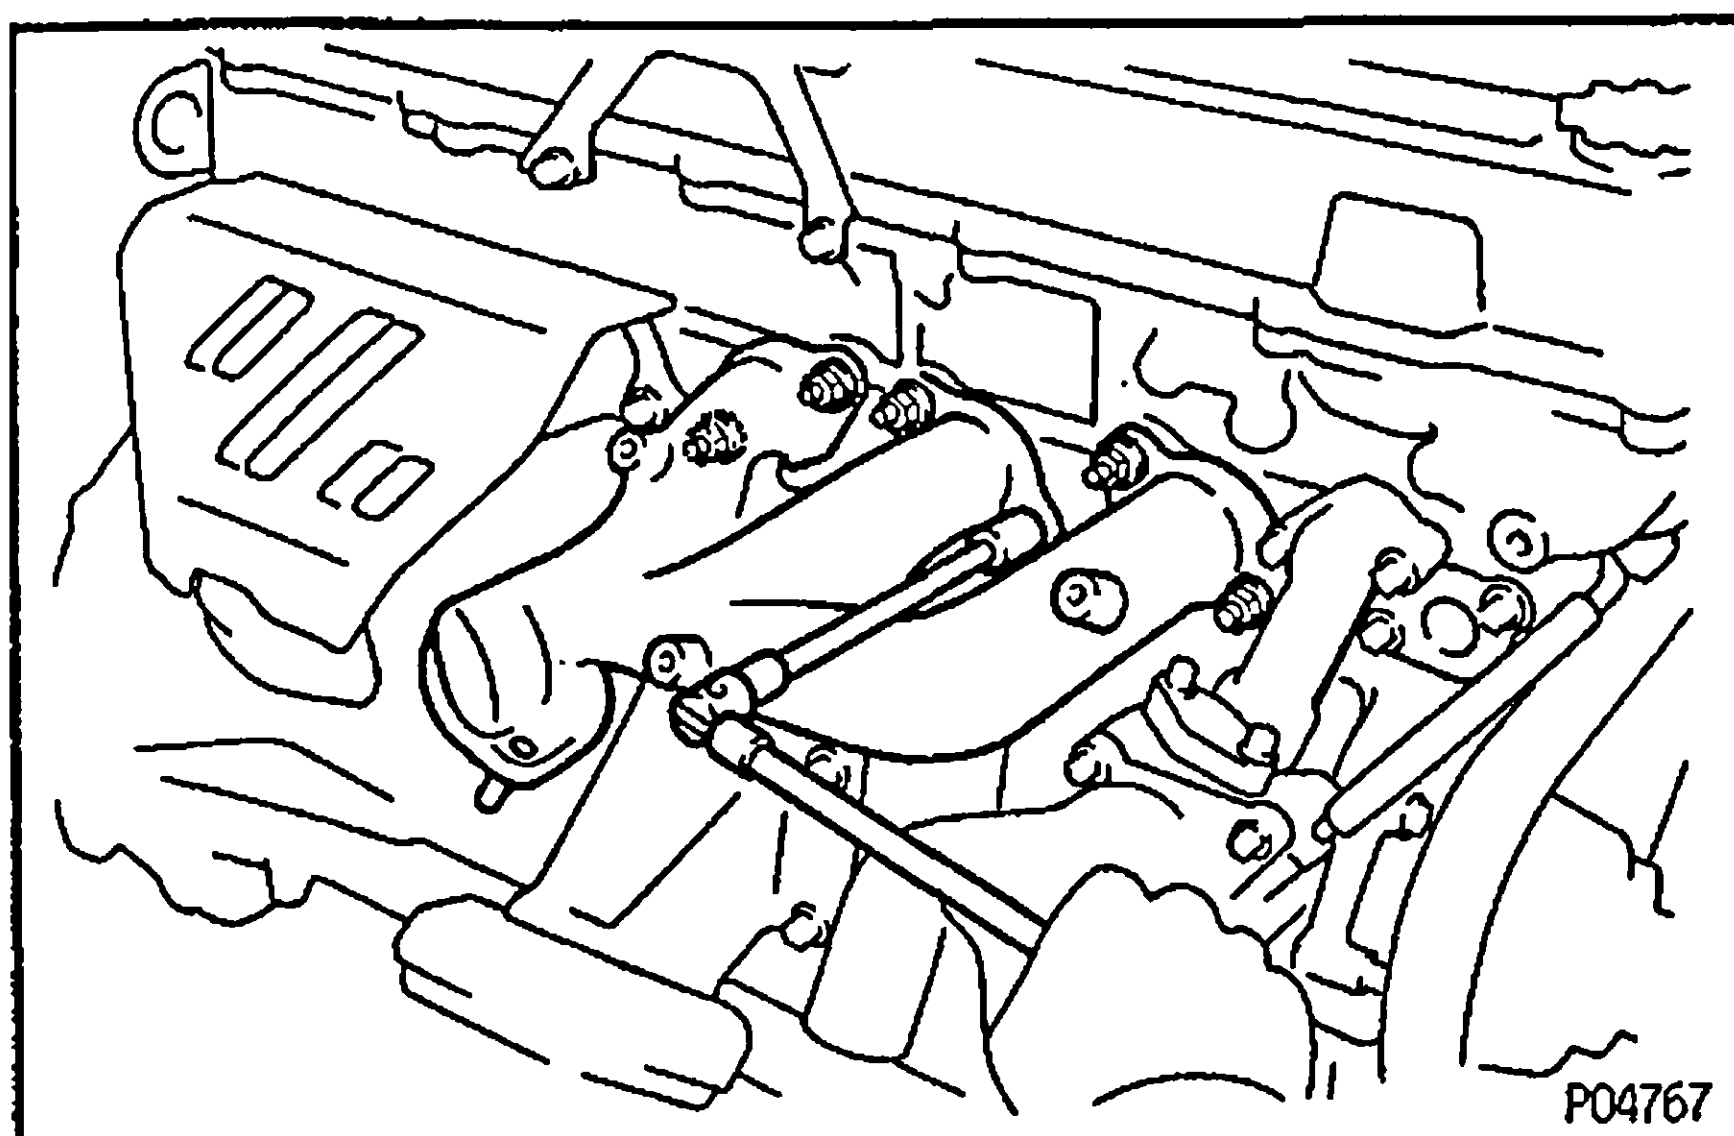


- (b) Remove the six nuts, exhaust manifold and gasket.

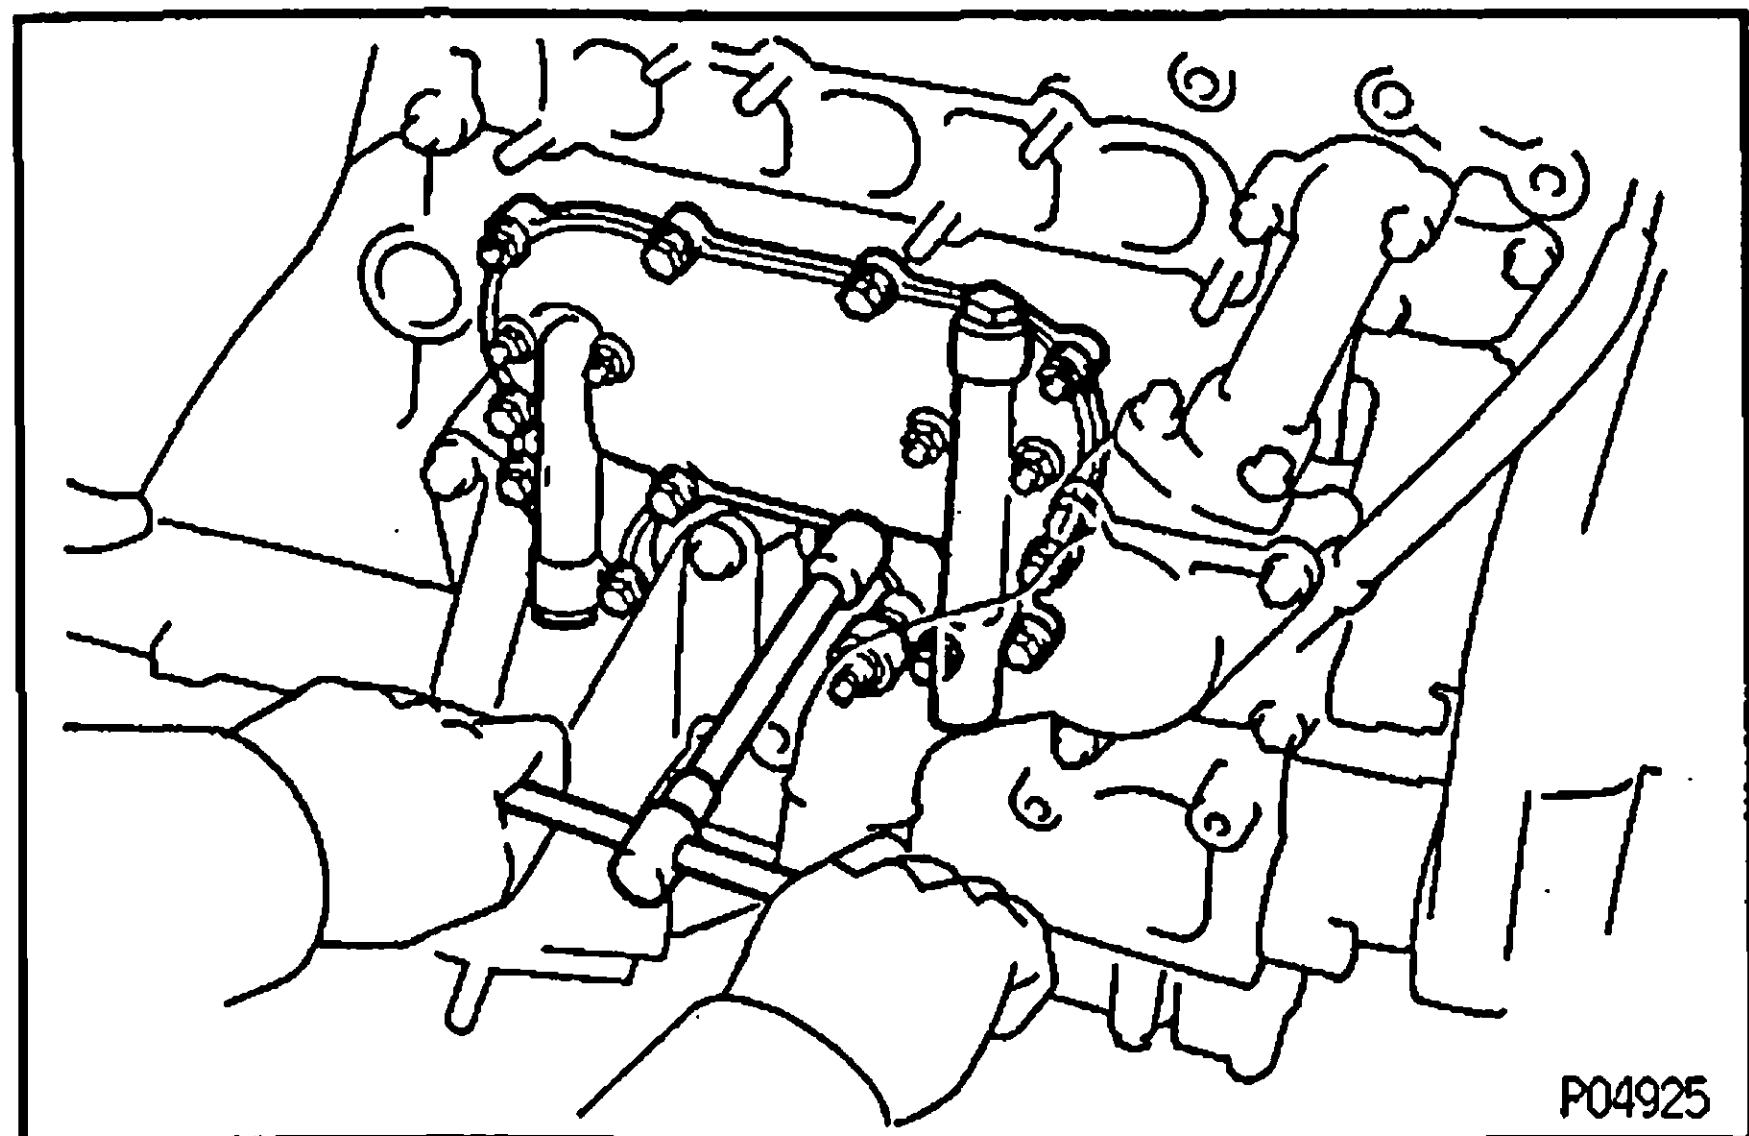


3. REMOVE OIL COOLER AND OIL COOLER COVER ASSEMBLY

Remove the ten bolts, two nuts, oil cooler and oil cooler cover assembly and gasket.

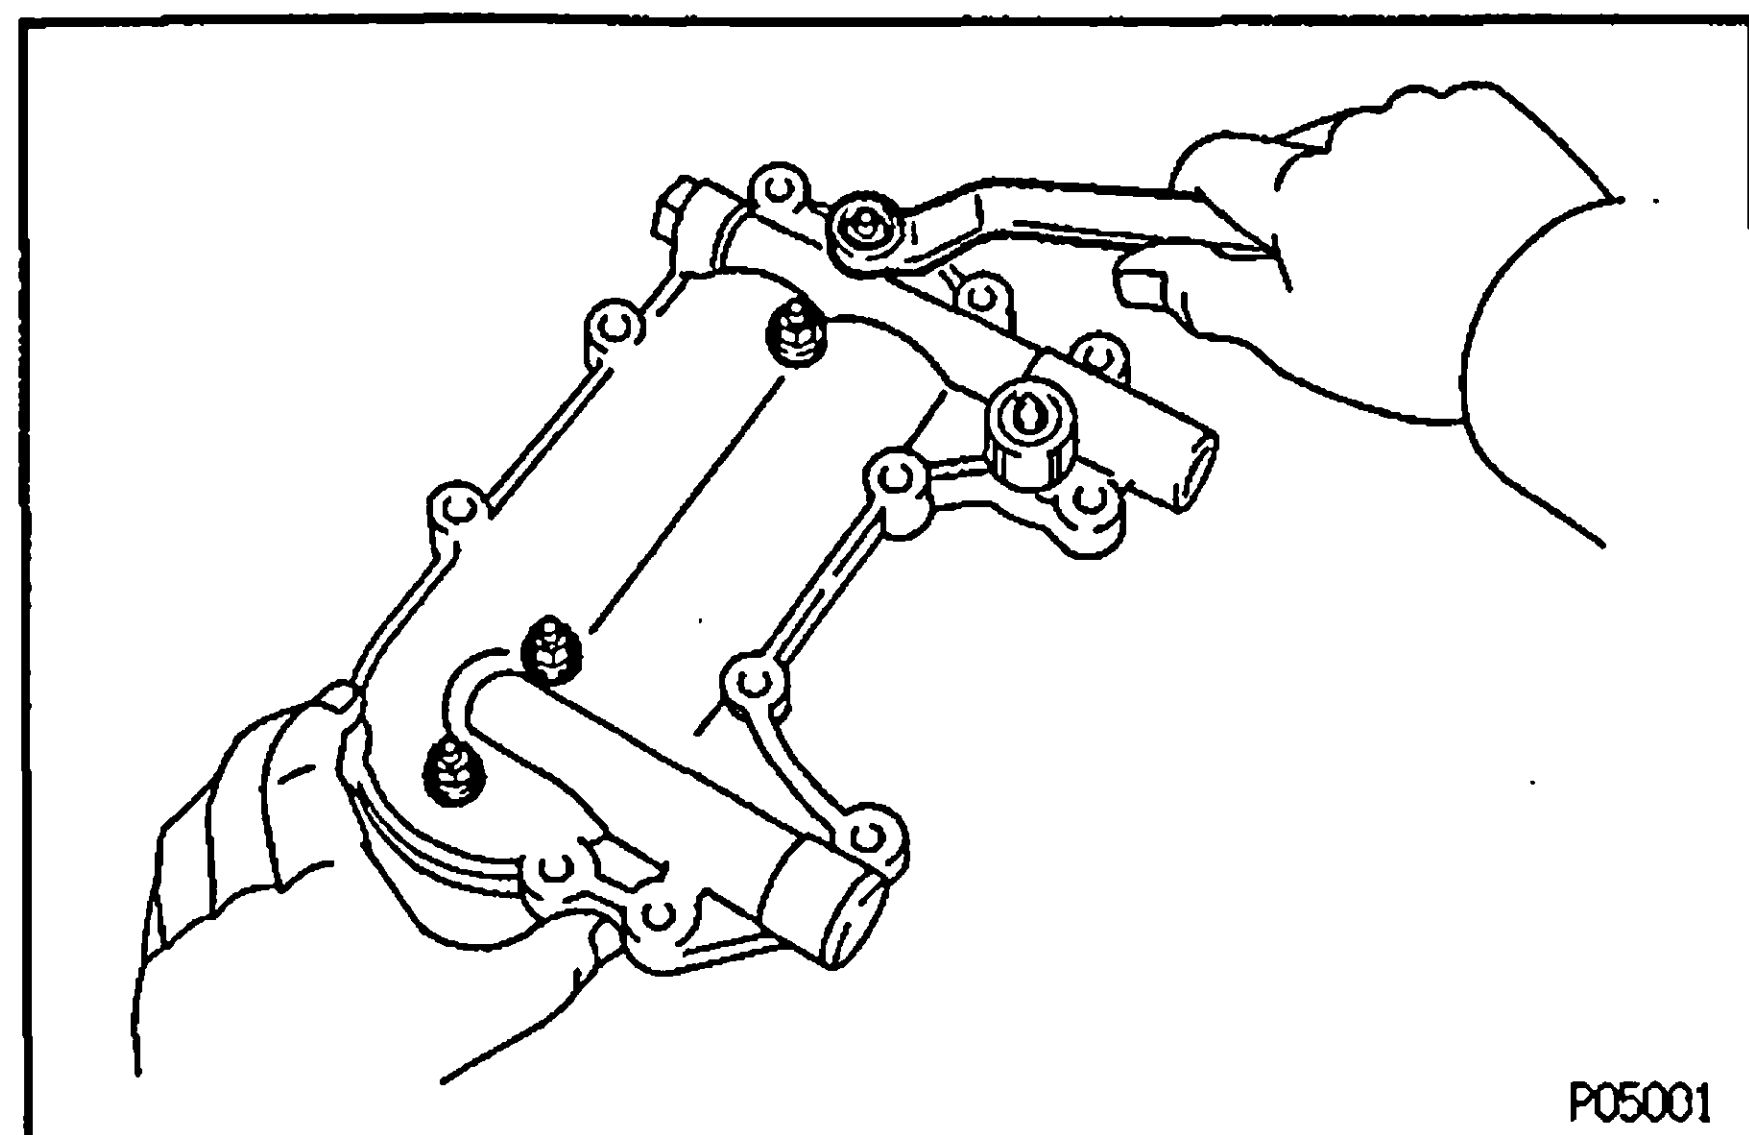


4. SEPARATE OIL COOLER AND OIL COOLER COVER

Remove the four nuts, oil cooler and two gaskets from the oil cooler cover.

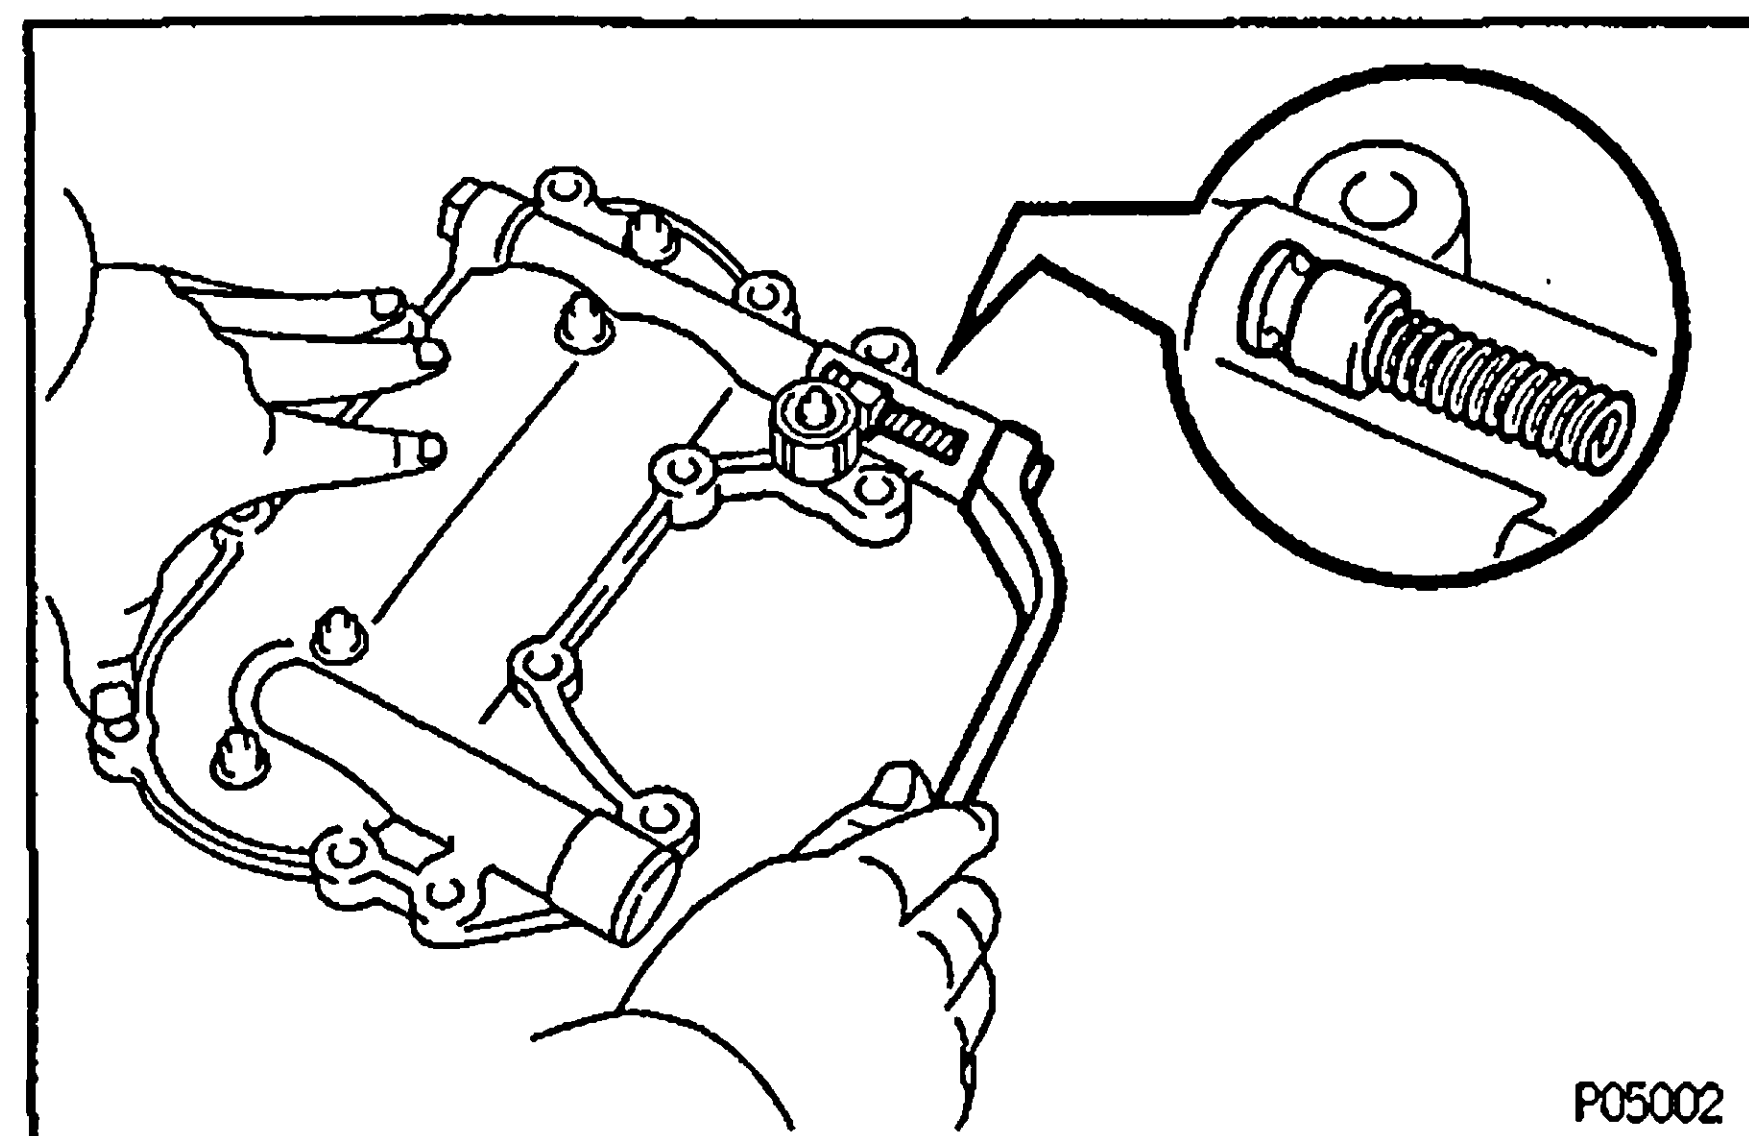

5. REMOVE RELIEF VALVE

Remove the plug, gasket, spring and relief valve.

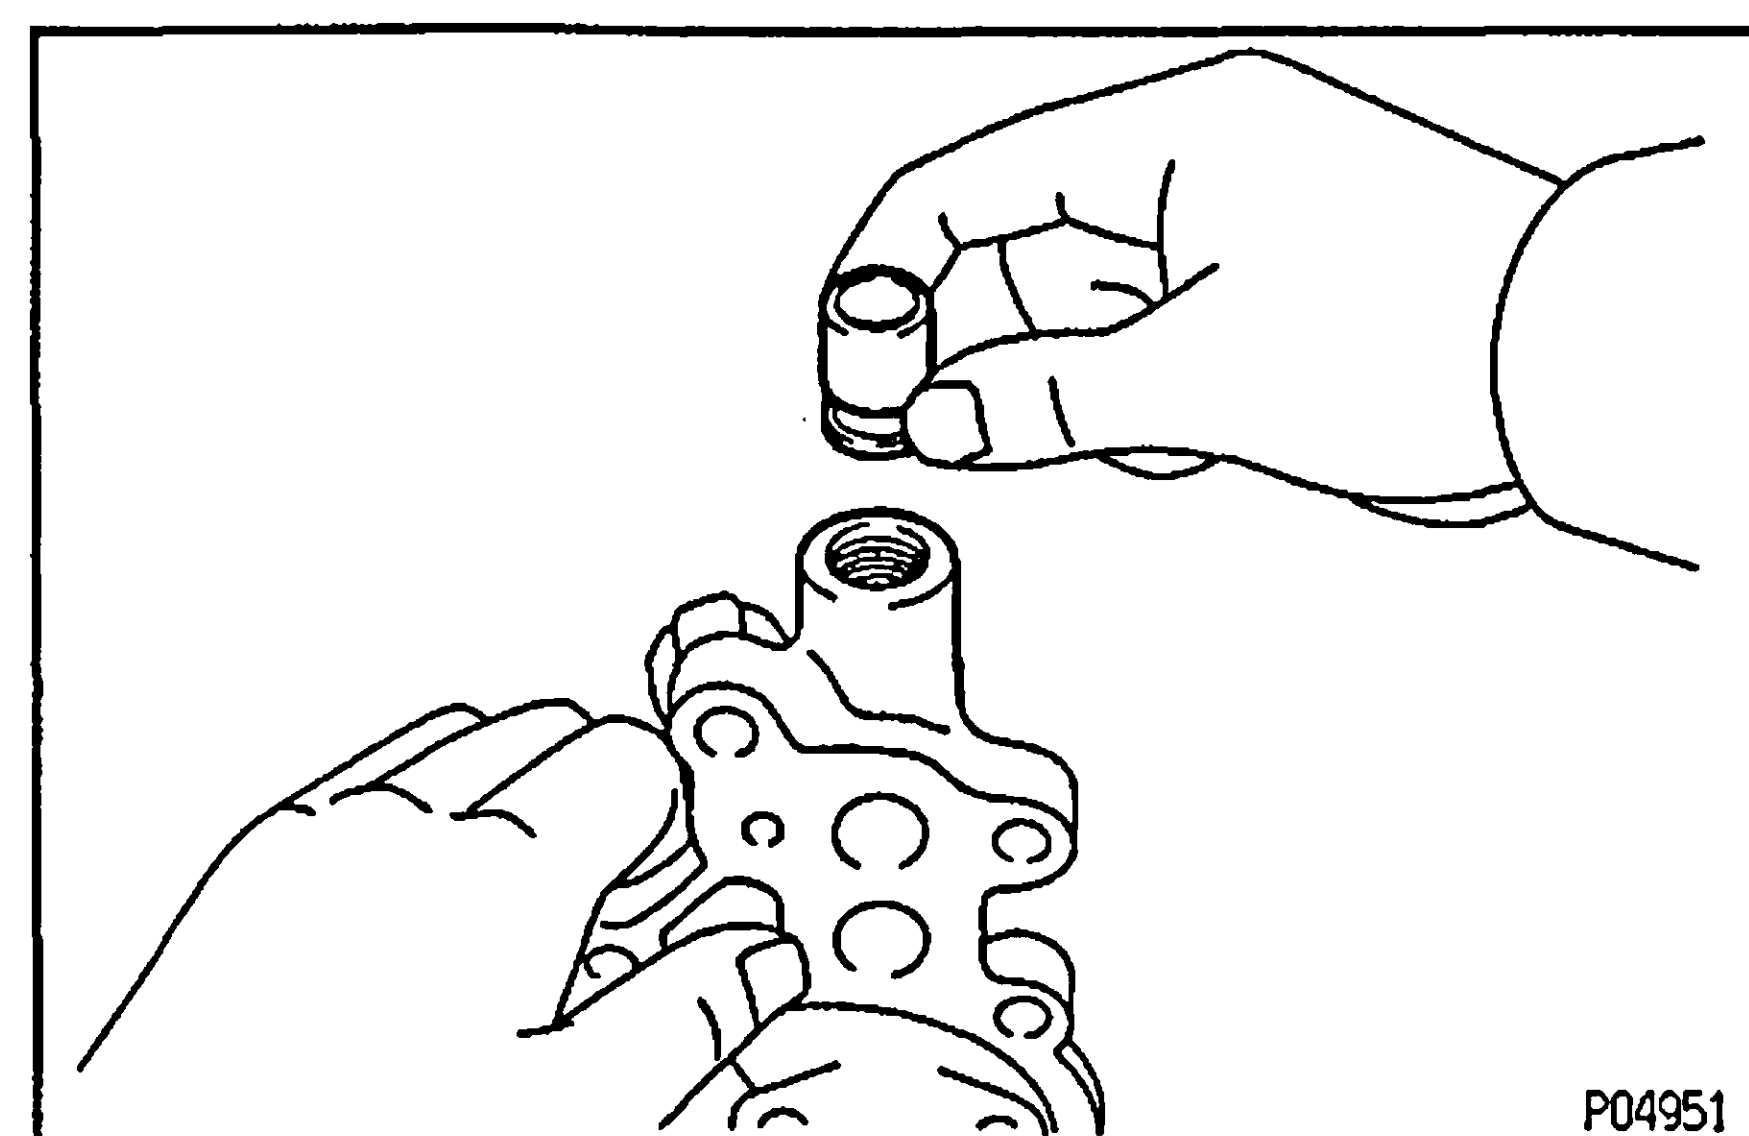

OIL COOLER INSPECTION


EGONS-01

1. INSPECT RELIEF VALVE

Coat the valve with engine oil and check that it falls smoothly into the valve hole by its own weight. If it doesn't, replace the relief valve. If necessary, replace the oil cooler cover.

2. INSPECT OIL COOLER

Check the oil cooler for damage or clogging. If necessary, replace the oil cooler.

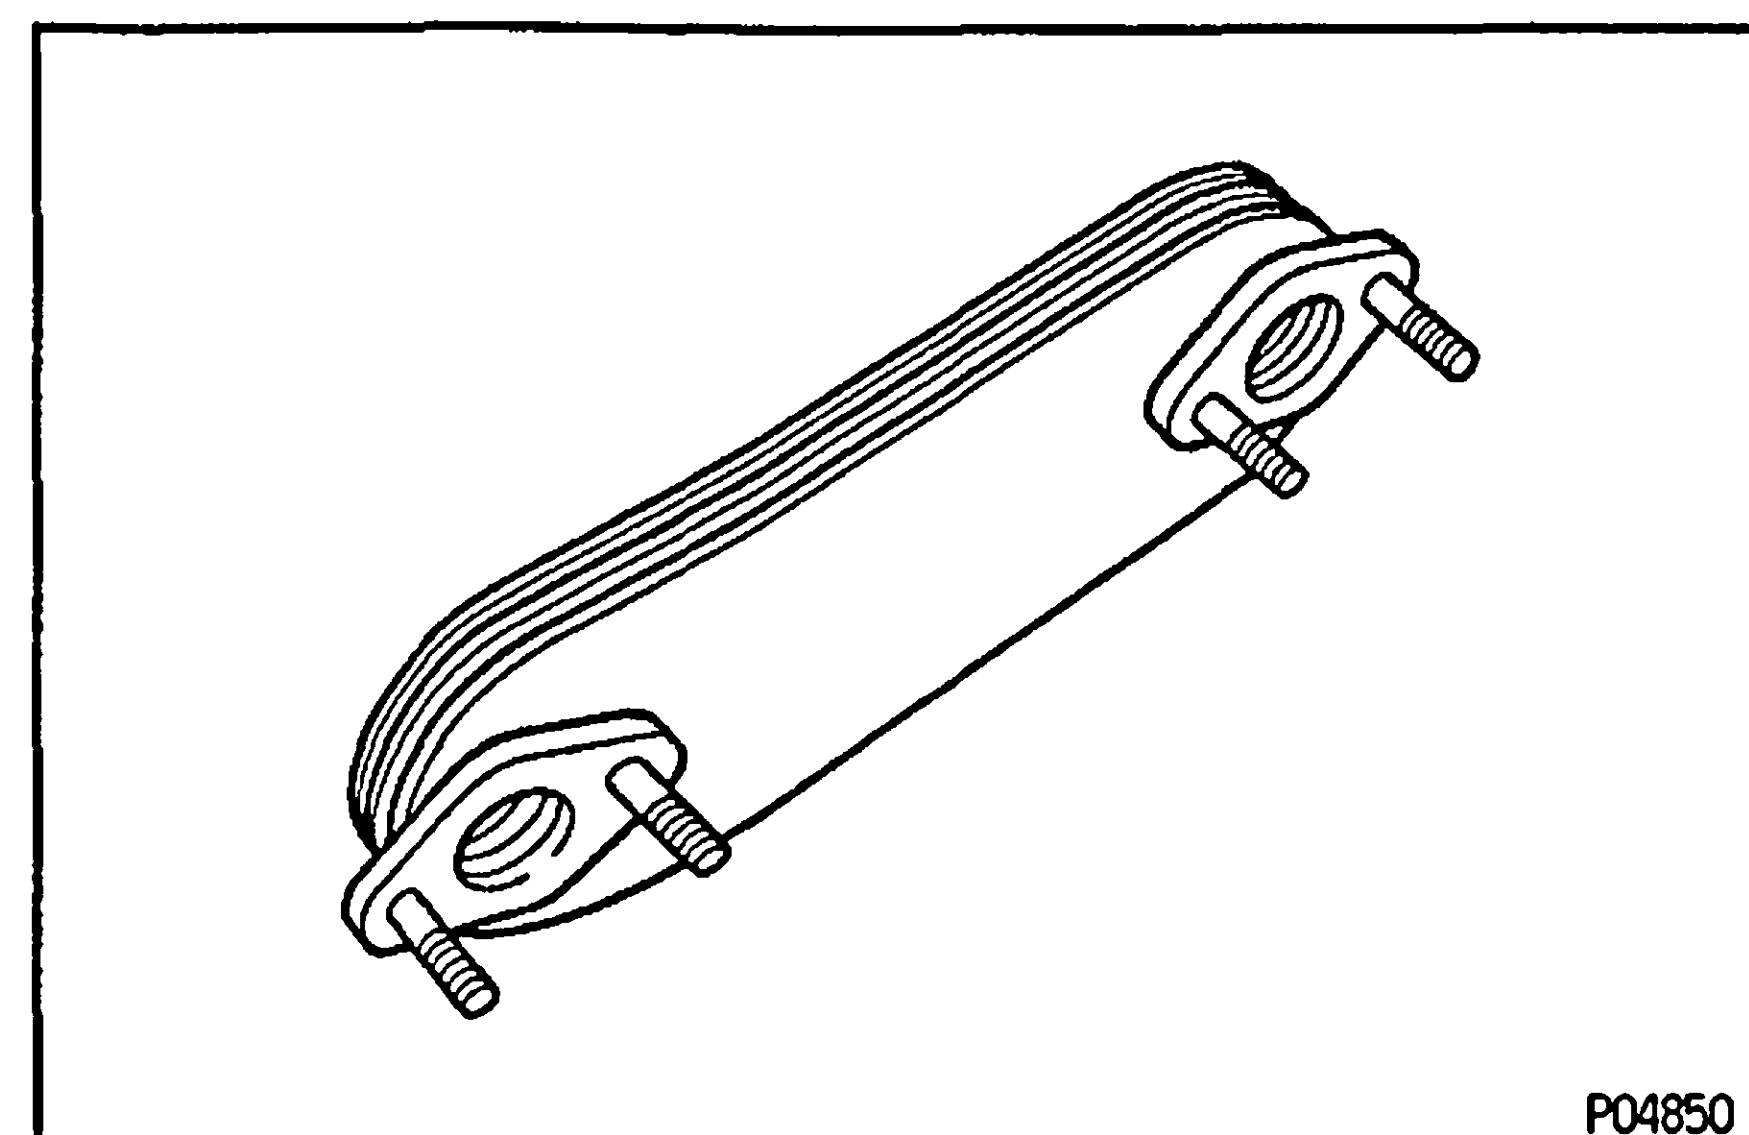


OIL COOLER INSTALLATION

(See page EG—204)

1. INSTALL RELIEF VALVE

Install the relief valve, spring and a new gasket with the plug.


Torque: 49 N·m (500 kgf·cm, 36 ft·lbf)

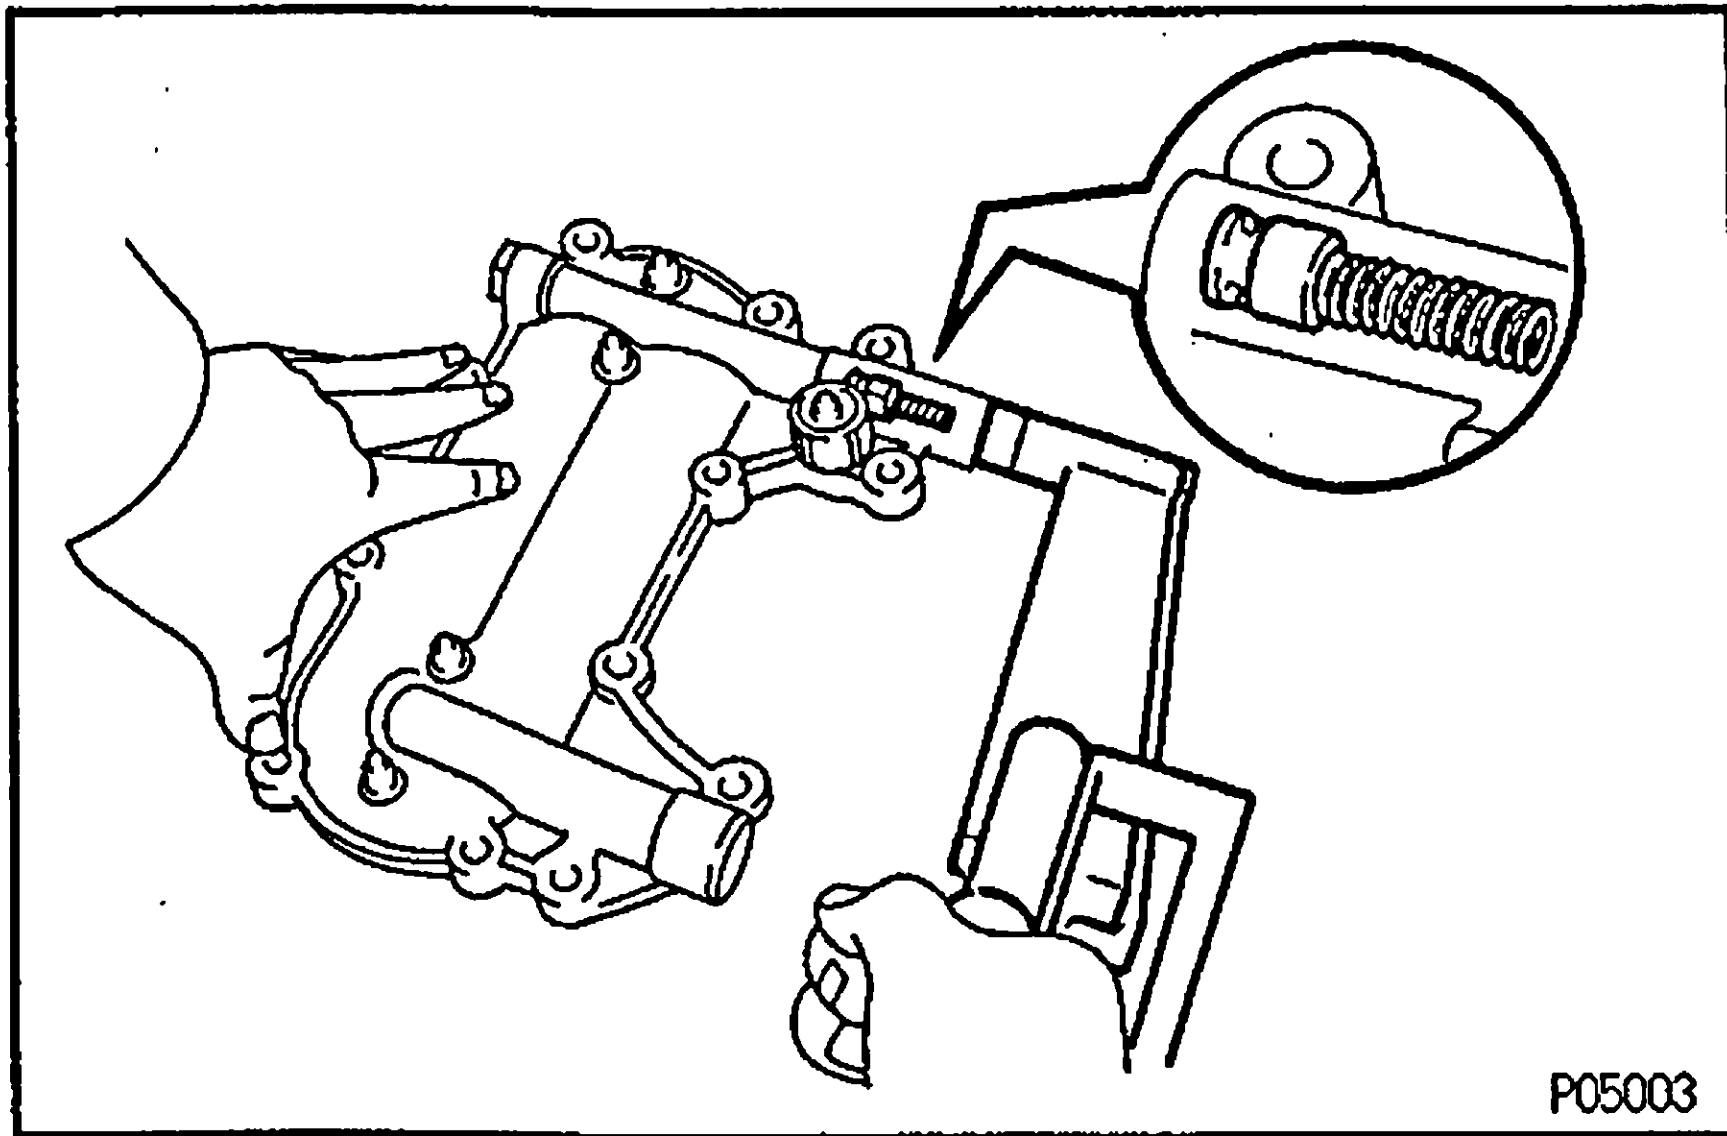

2. ASSEMBLE OIL COOLER AND OIL COOLER COVER

Install two new gaskets and the oil cooler to the oil cooler cover with the four nuts.


Torque: 16 N·m (160 kgf·cm, 12 N·m)

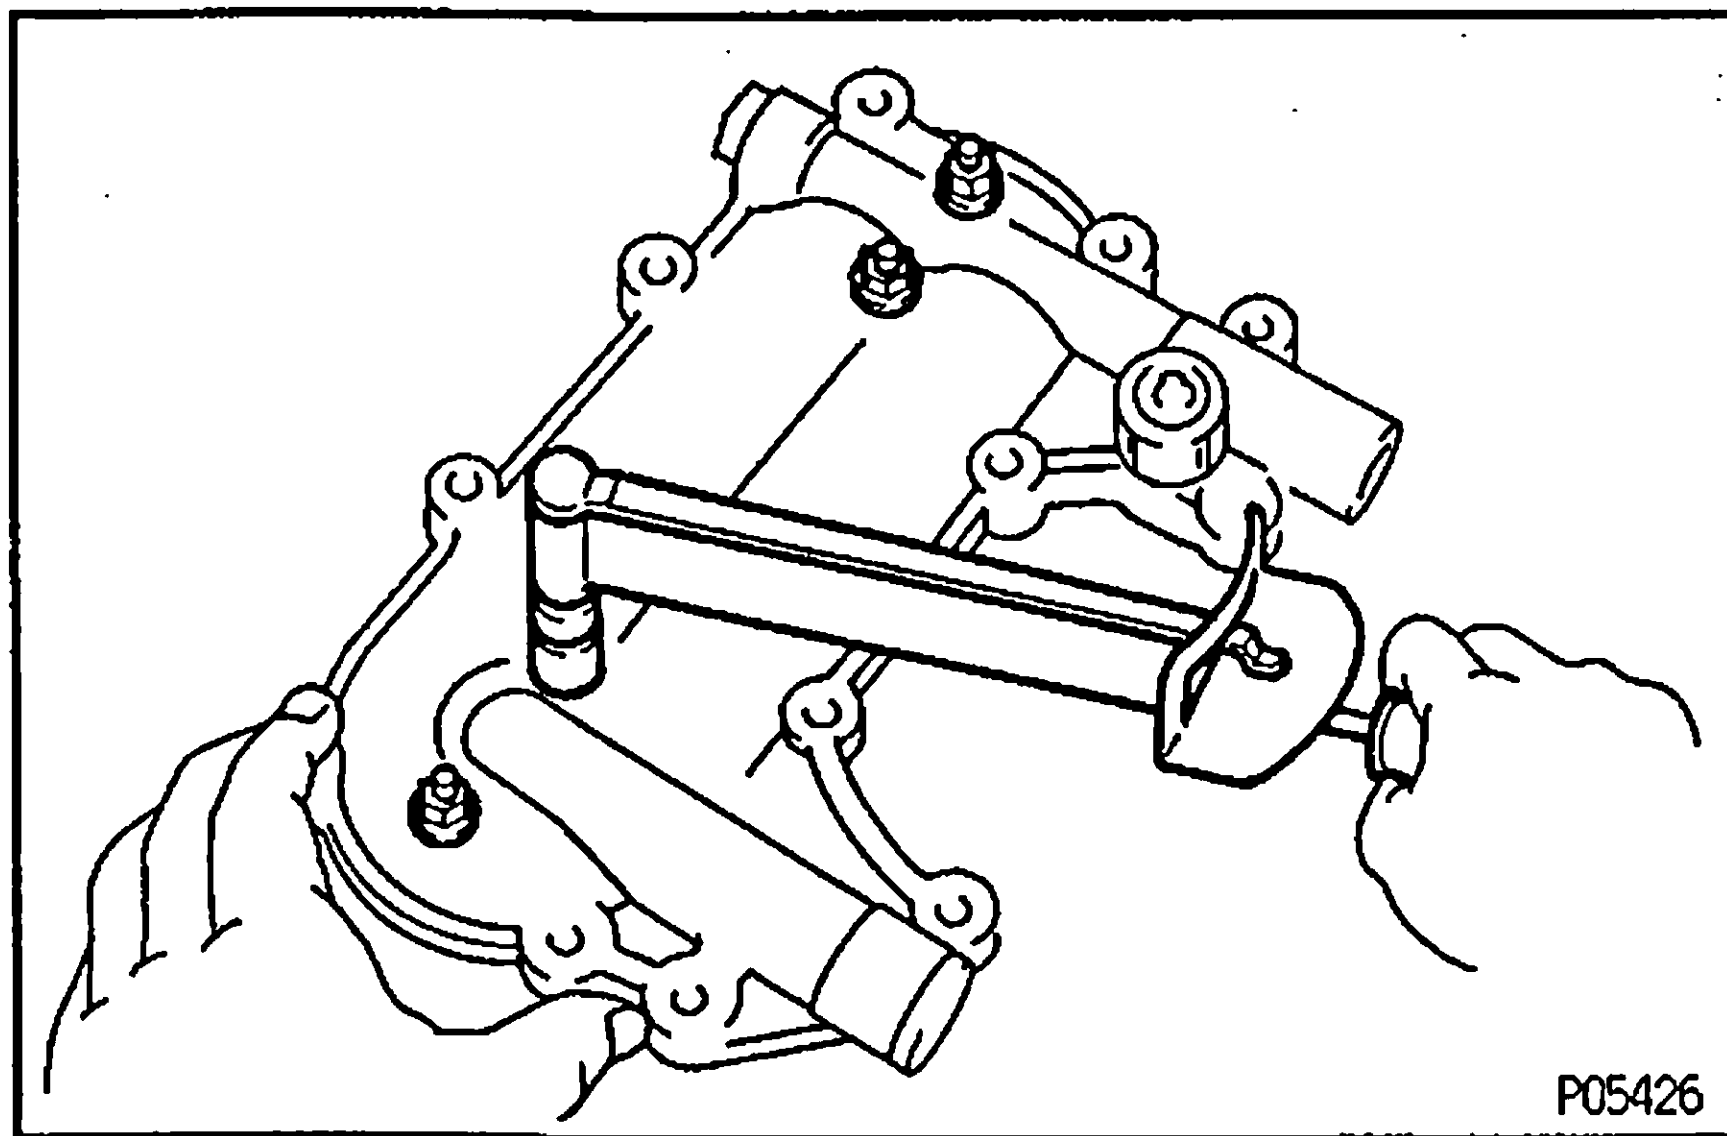

3. INSTALL OIL COOLER AND OIL COOLER COVER ASSEMBLY

Install a new gasket, the oil cooler and oil cooler cover assembly with the ten bolts and two nuts.


Torque: 21 N·m (210 kgf·cm, 15 N·m)

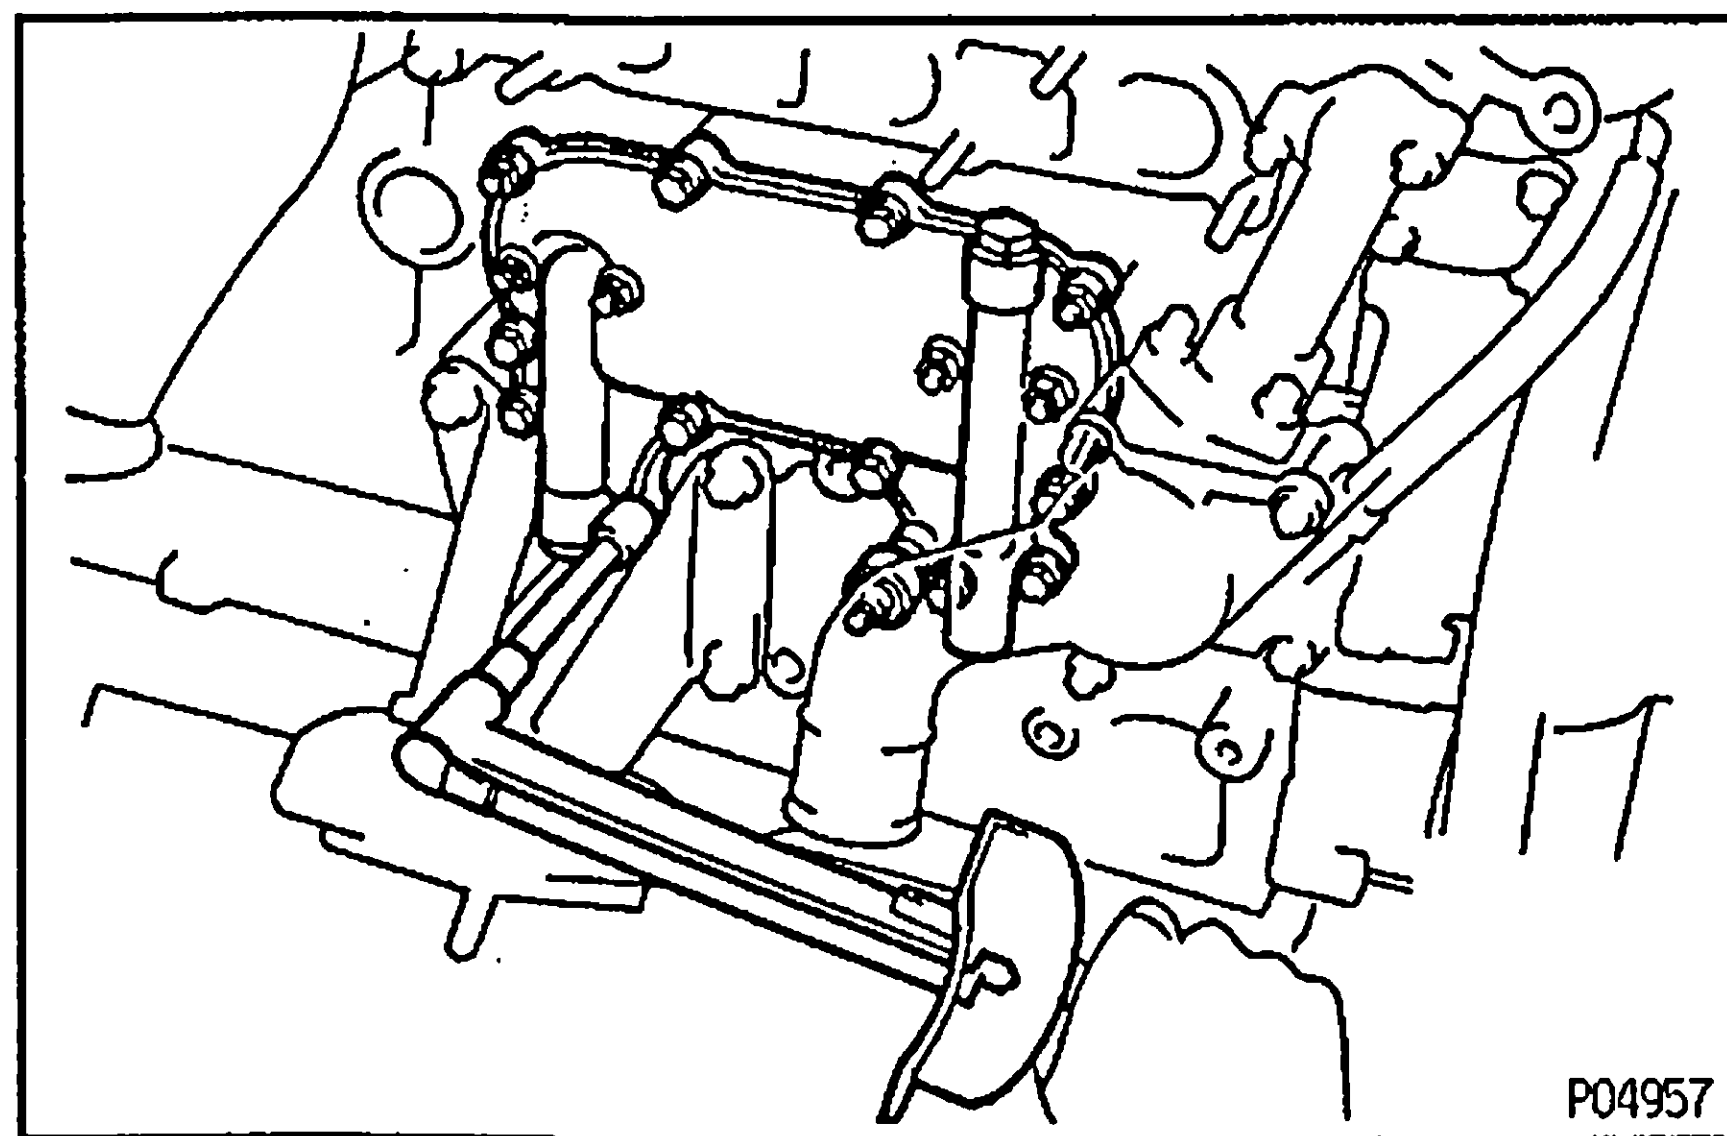

4. INSTALL EXHAUST MANIFOLD

(a) Install a new gasket and the exhaust manifold with the six nuts.

Torque: 39 N·m (400 kgf·cm, 29 ft·lbf)

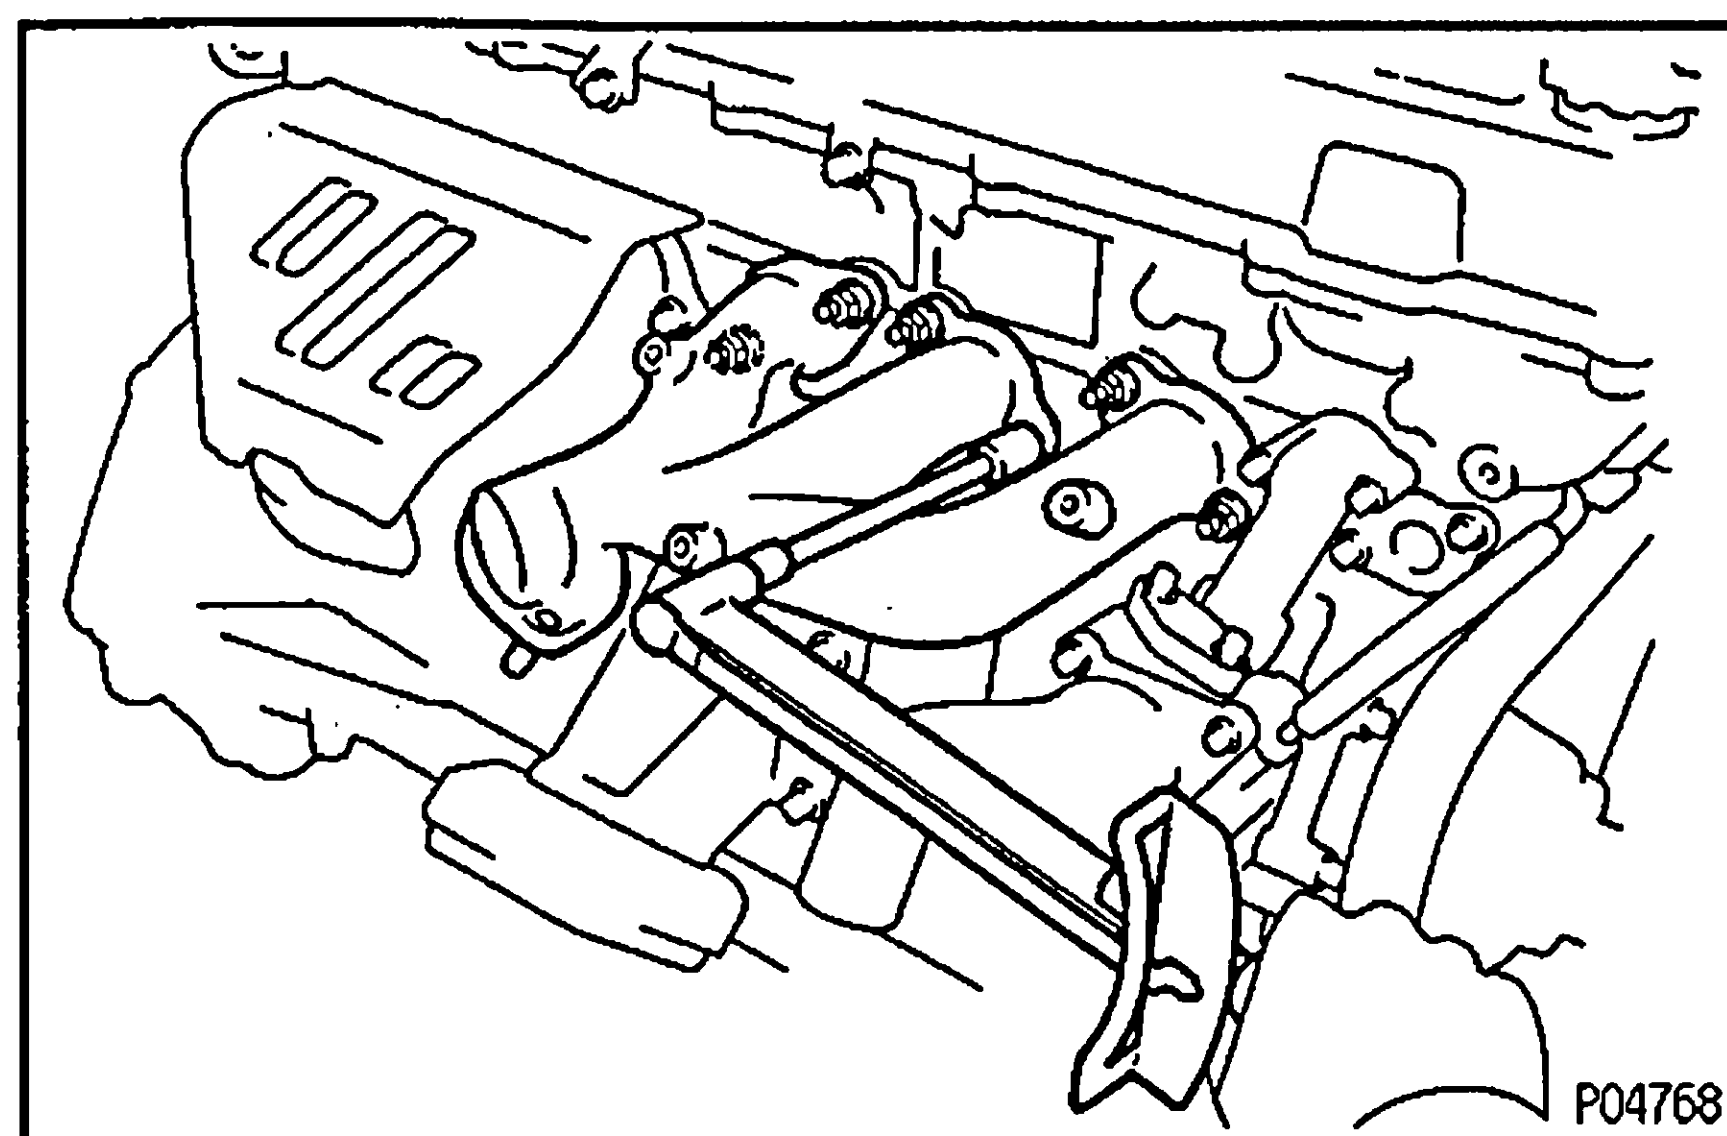


(b) Install the heat insulator with the three bolts.

Torque: 20 N·m (195 kgf·cm, 14 ft·lbf)

5. FILL WITH ENGINE COOLANT

6. START ENGINE AND CHECK FOR LEAKS


7. CHECK ENGINE OIL

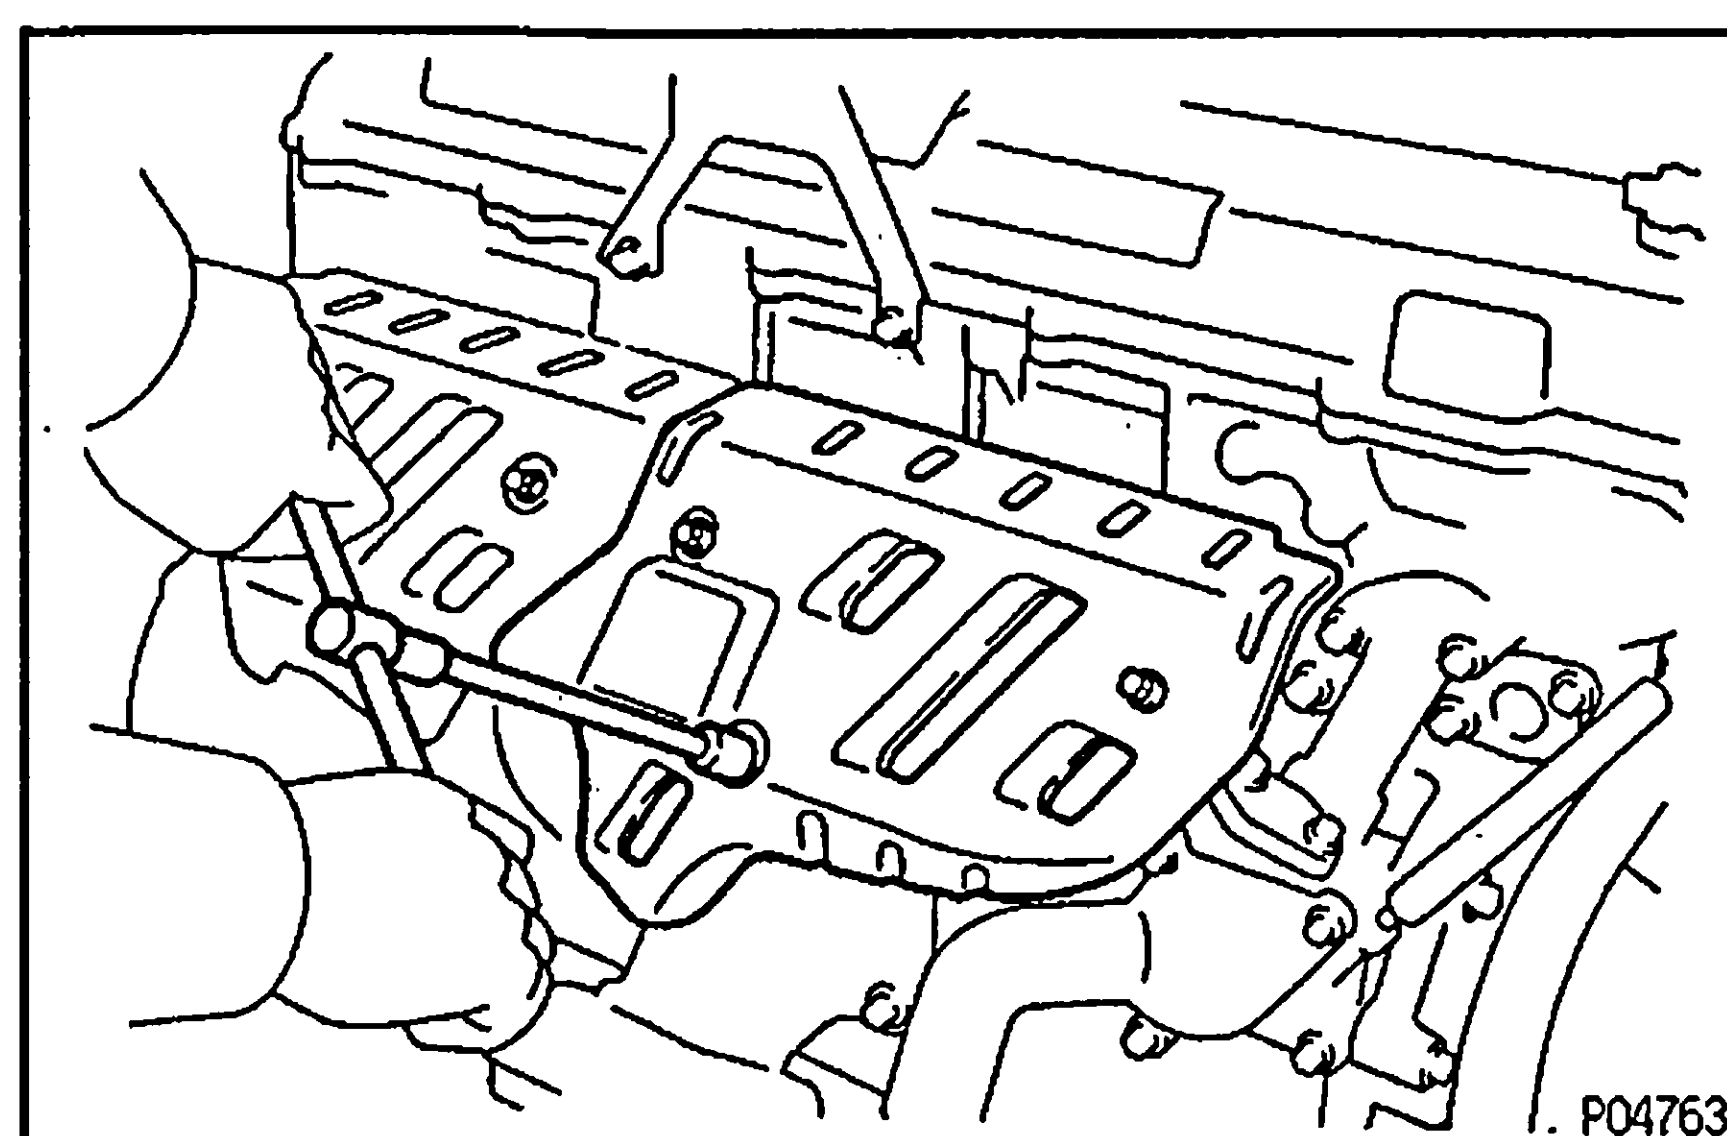

OIL NOZZLE COMPONENTS

EGONU-01

EG

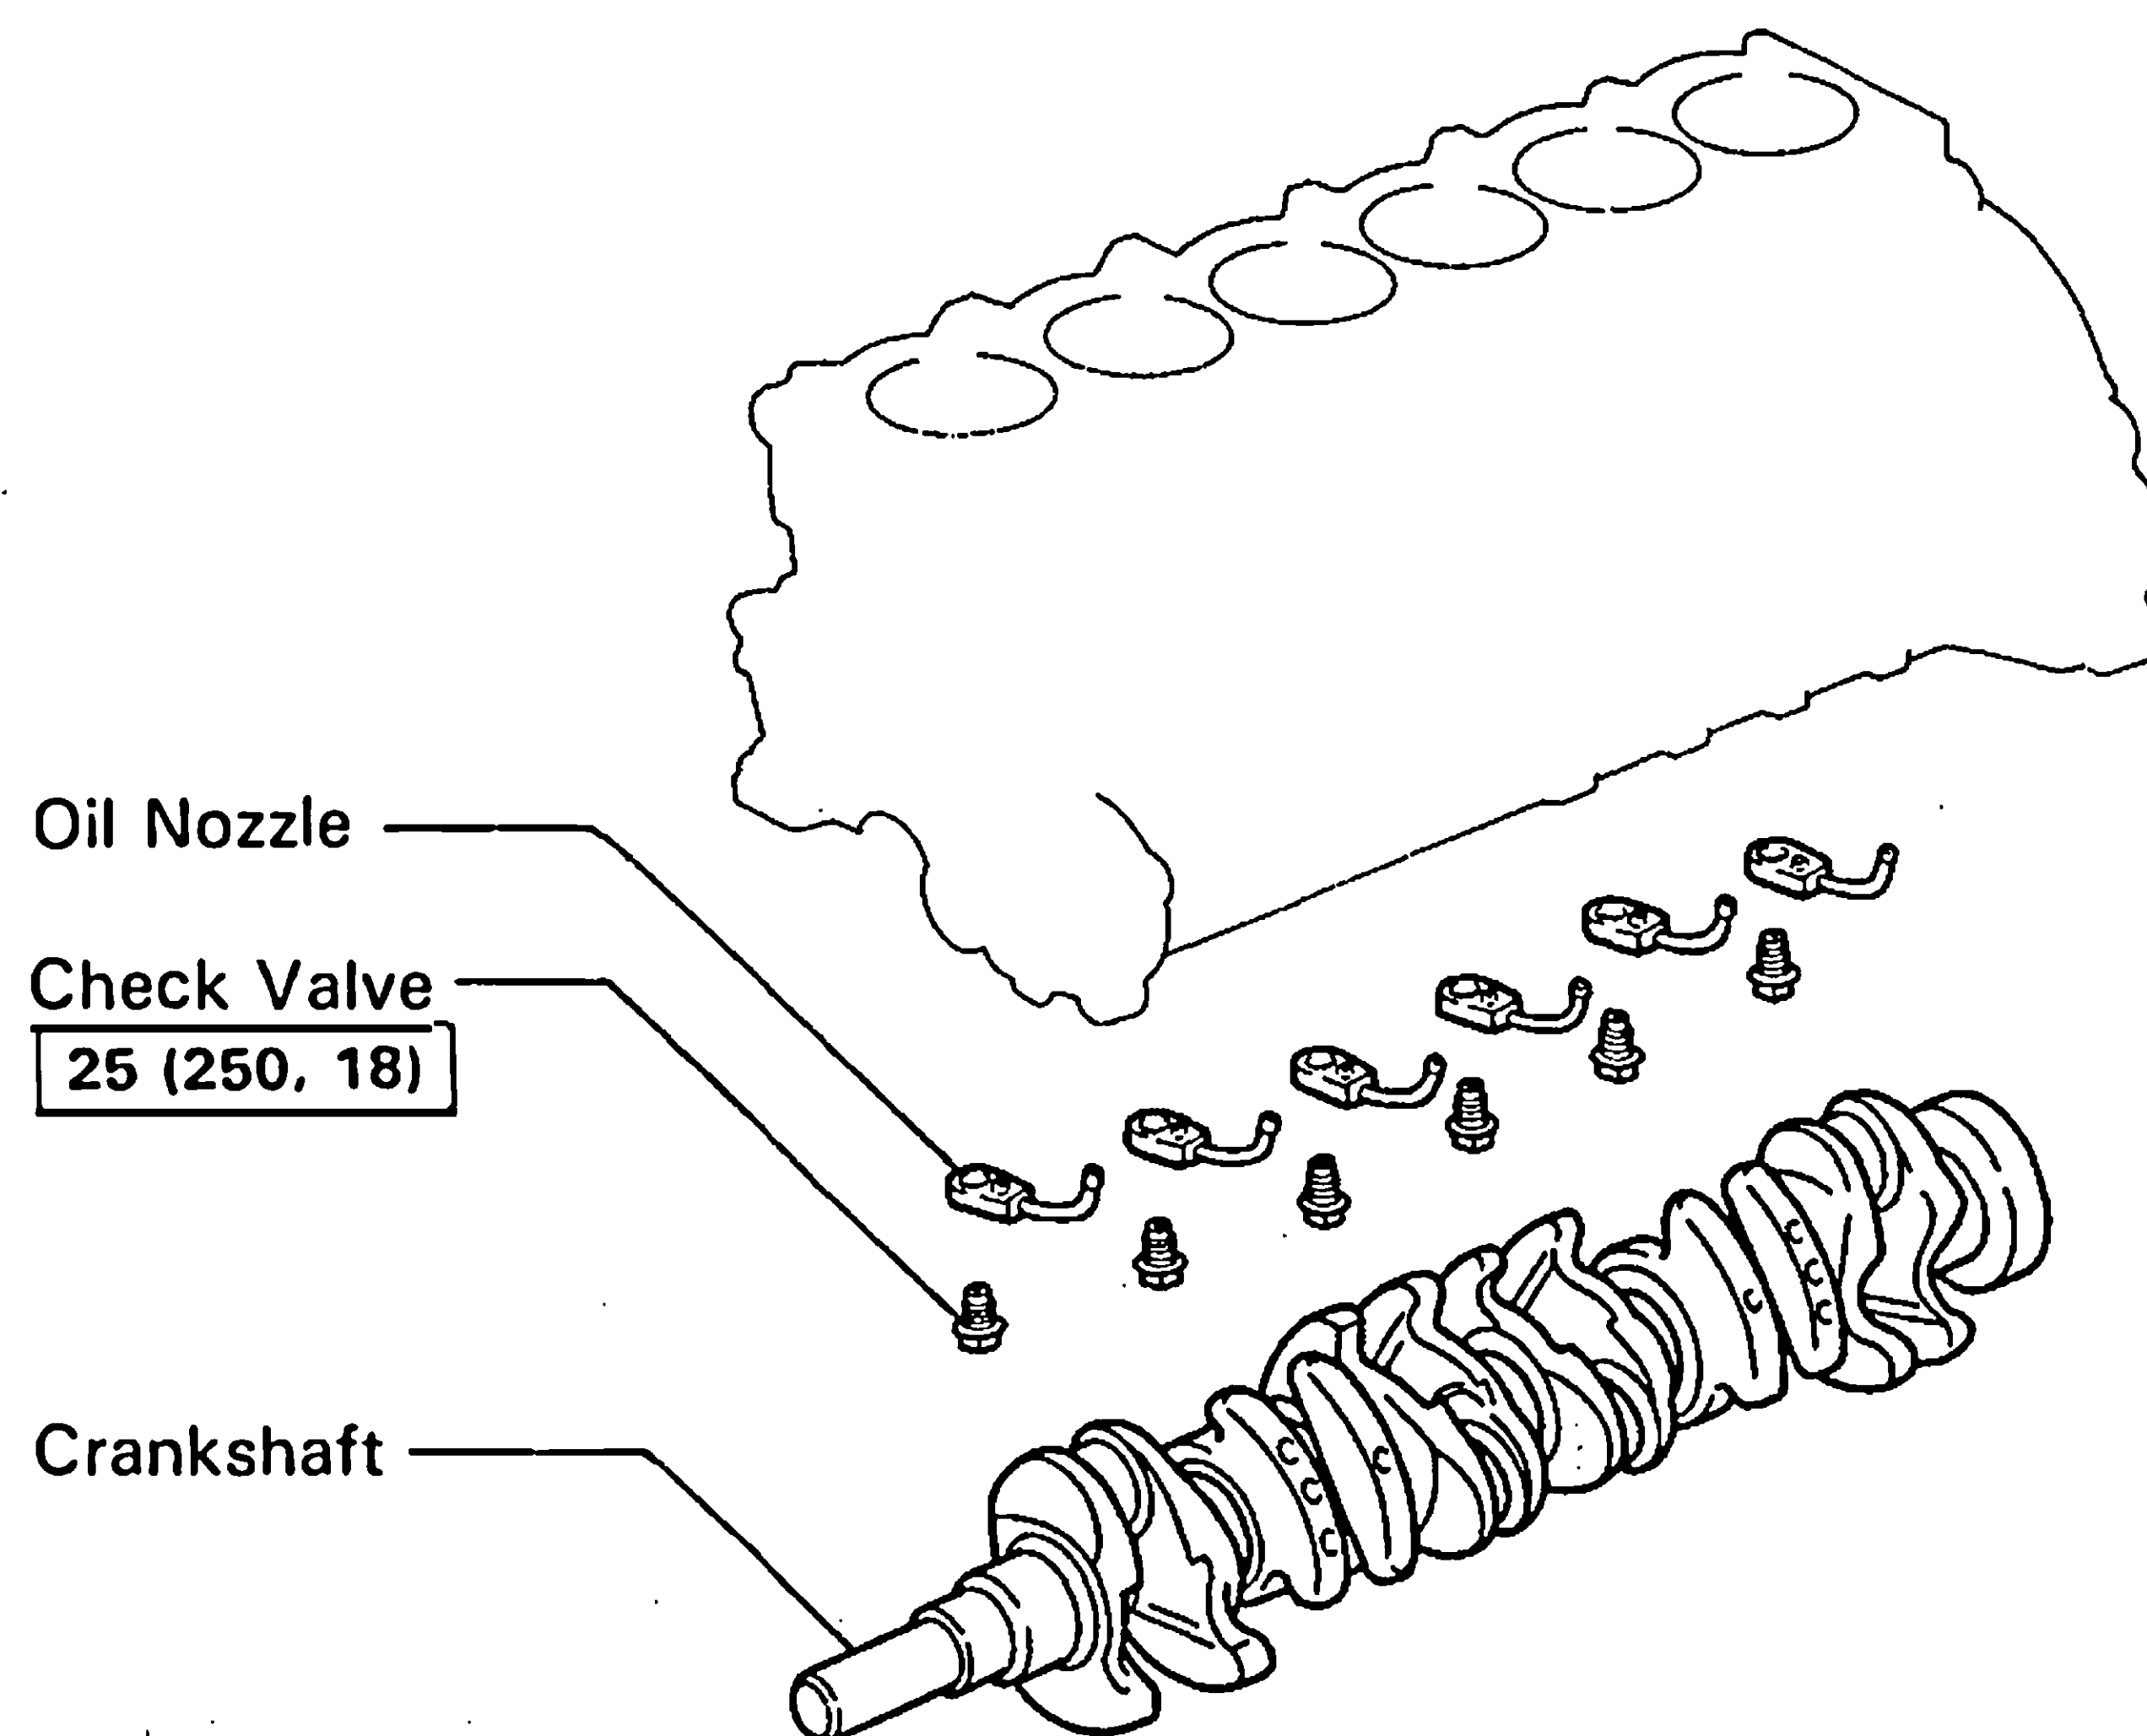

N·m (kgf·cm, ft·lbf) : Specified torque

P04786


OIL NOZZLES REMOVAL

EGONV-01

1. REMOVE CRANKSHAFT (See page EG-92)

2. REMOVE OIL NOZZLES

Remove the six check valves and oil nozzles.

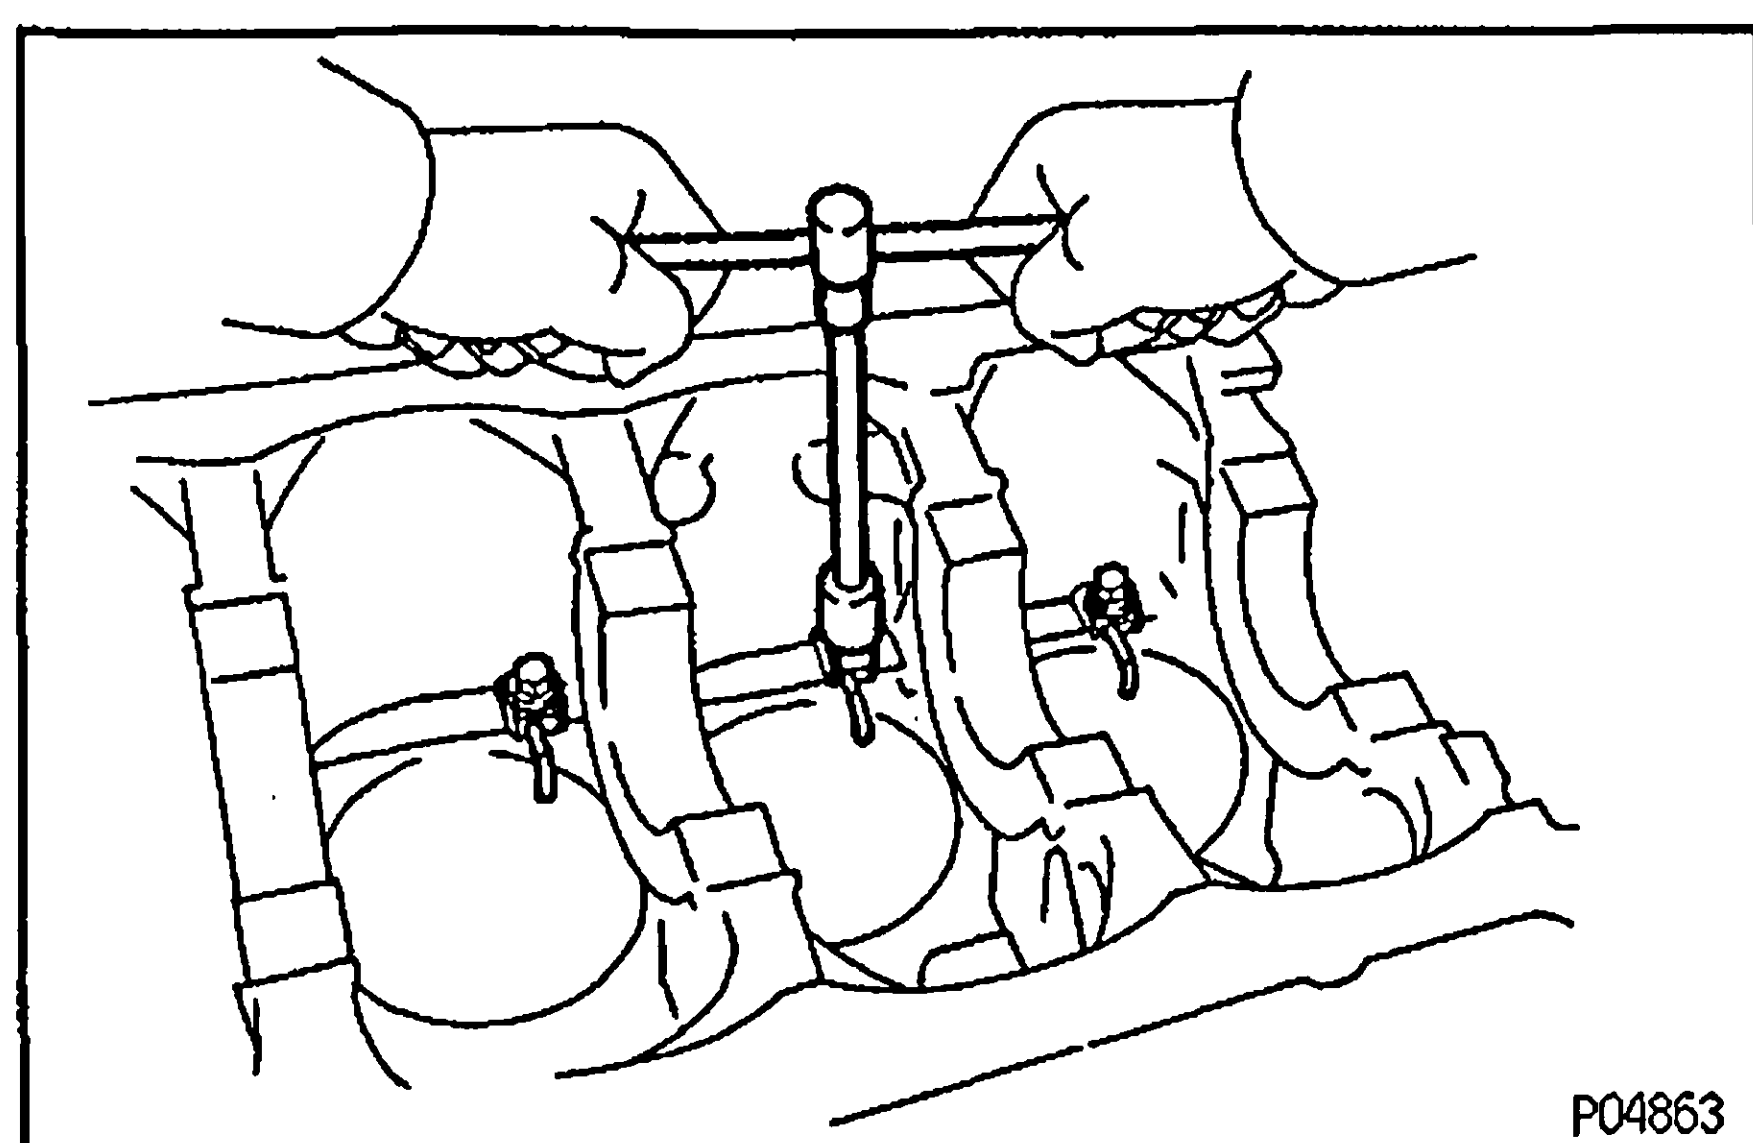


P04863

OIL NOZZLES COMPONENTS INSPECTION**1. INSPECT CHECK VALVES**

Push the valve with a wooden stick to check if it is stuck.

If stuck, replace the check valve.

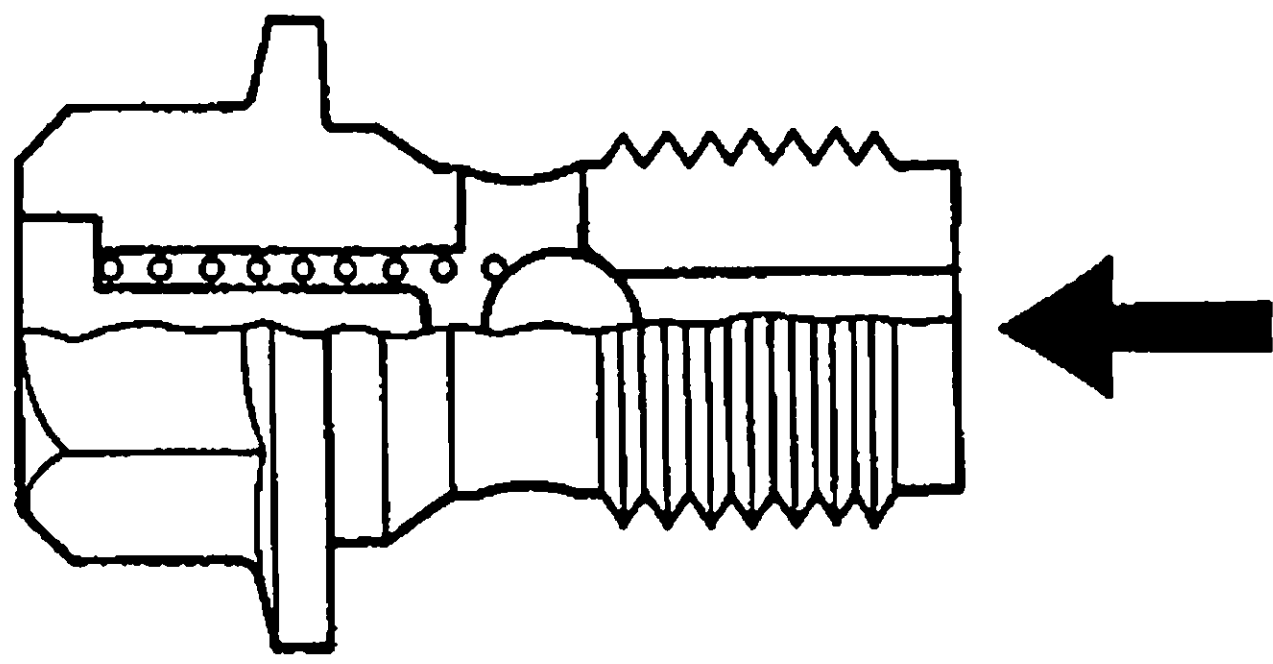


P03889

2. INSPECT OIL NOZZLES

Check the oil nozzles for damage or clogging.

If necessary, replace the oil nozzle.

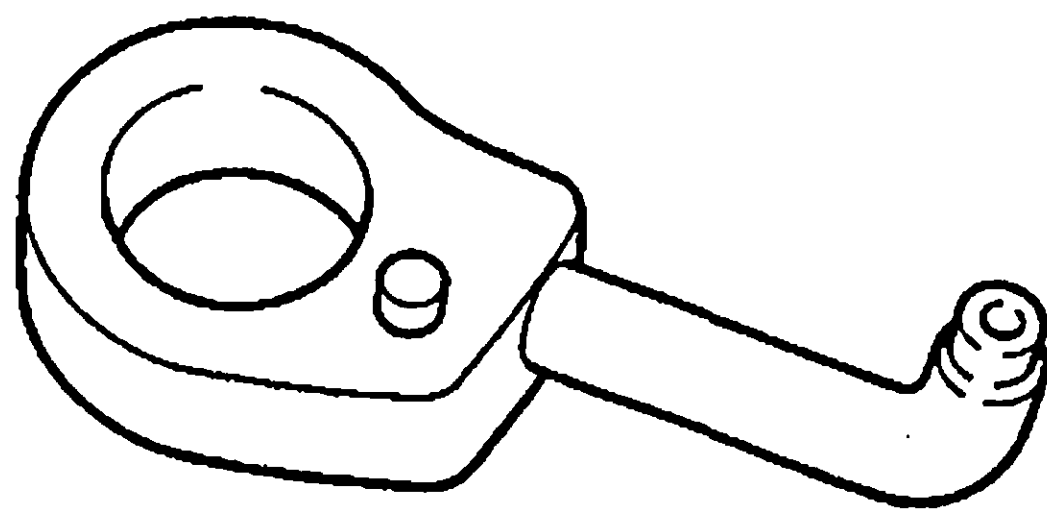

P03888


OIL NOZZLES INSTALLATION

(See page EG—207)

1. INSTALL OIL NOZZLES

- (a) Align the pin of the oil nozzle with the pin hole of the cylinder block.
- (b) Install the oil nozzle with the check valve. Install the six oil nozzles.

Torque: 25 N·m (250 kgf·cm, 18 ft·lbf)

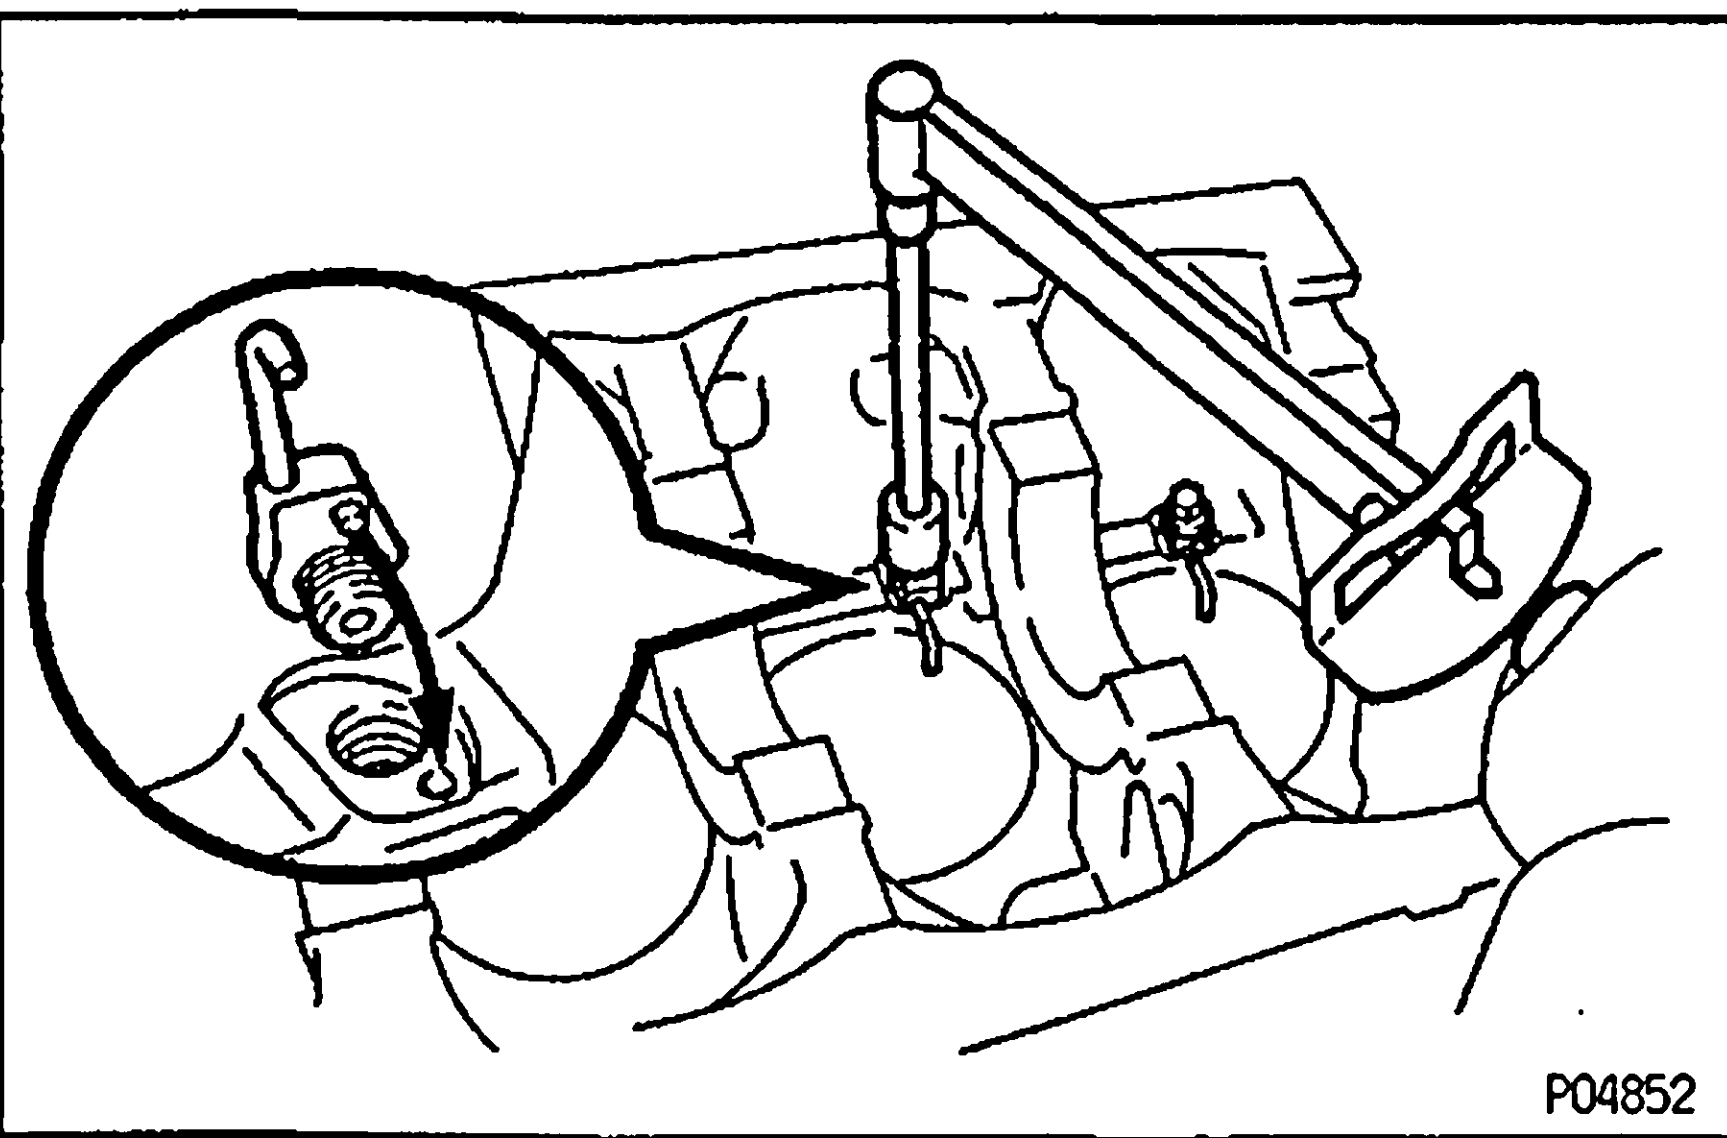


P04852

2. INSTALL CRANKSHAFT (See pages EG—115)

SERVICE SPECIFICATIONS
SERVICE DATA

EG00H-02

Oil pressure	At idle speed (normal operating temperature)	29 kPa (0.3 kgf/cm ² , 4.3 psi) or more
	At 3,000 rpm (normal operating temperature)	245 — 490 kPa (2.5 — 5.0 kgf/cm ² , 36 — 71 psi)
Oil pump	Body clearance (STD)	0.100 — 0.170 mm (0.0039 — 0.0067 in.)
	Body clearance (Maximum)	0.30 mm (0.0118 in.)
	Tip clearance (STD)	0.030 — 0.160mm (0.0012 — 0.0063 in.)
	Tip clearance (Maximum)	0.25 mm (0.0098 in.)
	Side clearance (STD)	0.30 — 0.090 mm (0.0012 — 0.0035 in.)
	Side clearance (Maximum)	0.15 mm (0.0059 in.)

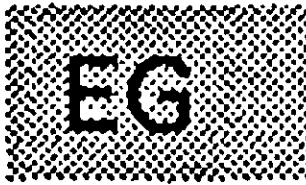

TORQUE SPECIFICATIONS

EG0NY-01

Part tightened	N·m	kgf·cm	ft·lbf
Oil pan x Drain plug	25	250	18
Oil pump x Relief valve plug	49	500	36
Oil pump cover x Oil pump	10	105	8
Oil pump x Cylinder block	21	210	15
Drive belt idler pulley x Oil pump	43	440	32
Oil strainer x No.1 oil pan	20	200	14
Baffle plate x No.1 oil pan	7.8	80	69 in·lbf
No.1 oil pan x Cylinder block (14 mm head bolt)	43	440	32
No.1 oil pan x Cylinder block (12 mm head bolt)	20	200	14
No.1 oil pan x Oil pump (Timing gear cover)	20	200	14
No.2 oil pan x No.1 oil pan (Bolt)	7.8	80	69 in·lbf
No.2 oil pan x No.1 oil pan (Nut)	8.8	90	78 in·lbf
Oil cooler x Oil cooler cover	16	160	12
Oil cooler cover x Cylinder block	21	210	15
No.1 exhaust manifold x Cylinder head	39	400	29
No.1 exhaust manifold x Heat insulator	20	195	14
Oil check valve x Cylinder block	25	250	18

IGNITION SYSTEM


DESCRIPTION	IG- 2
PRECAUTIONS	IG- 3
SYSTEM CIRCUIT	IG- 4
OPERATION	IG- 5
PREPARATION	IG- 5
ON-VEHICLE INSPECTION.....	IG- 6
DISTRIBUTOR	IG- 15
SERVICE SPECIFICATIONS	IG- 26

IG

DESCRIPTION

This engine features a breakerless transistor ignition system.

IG033-01

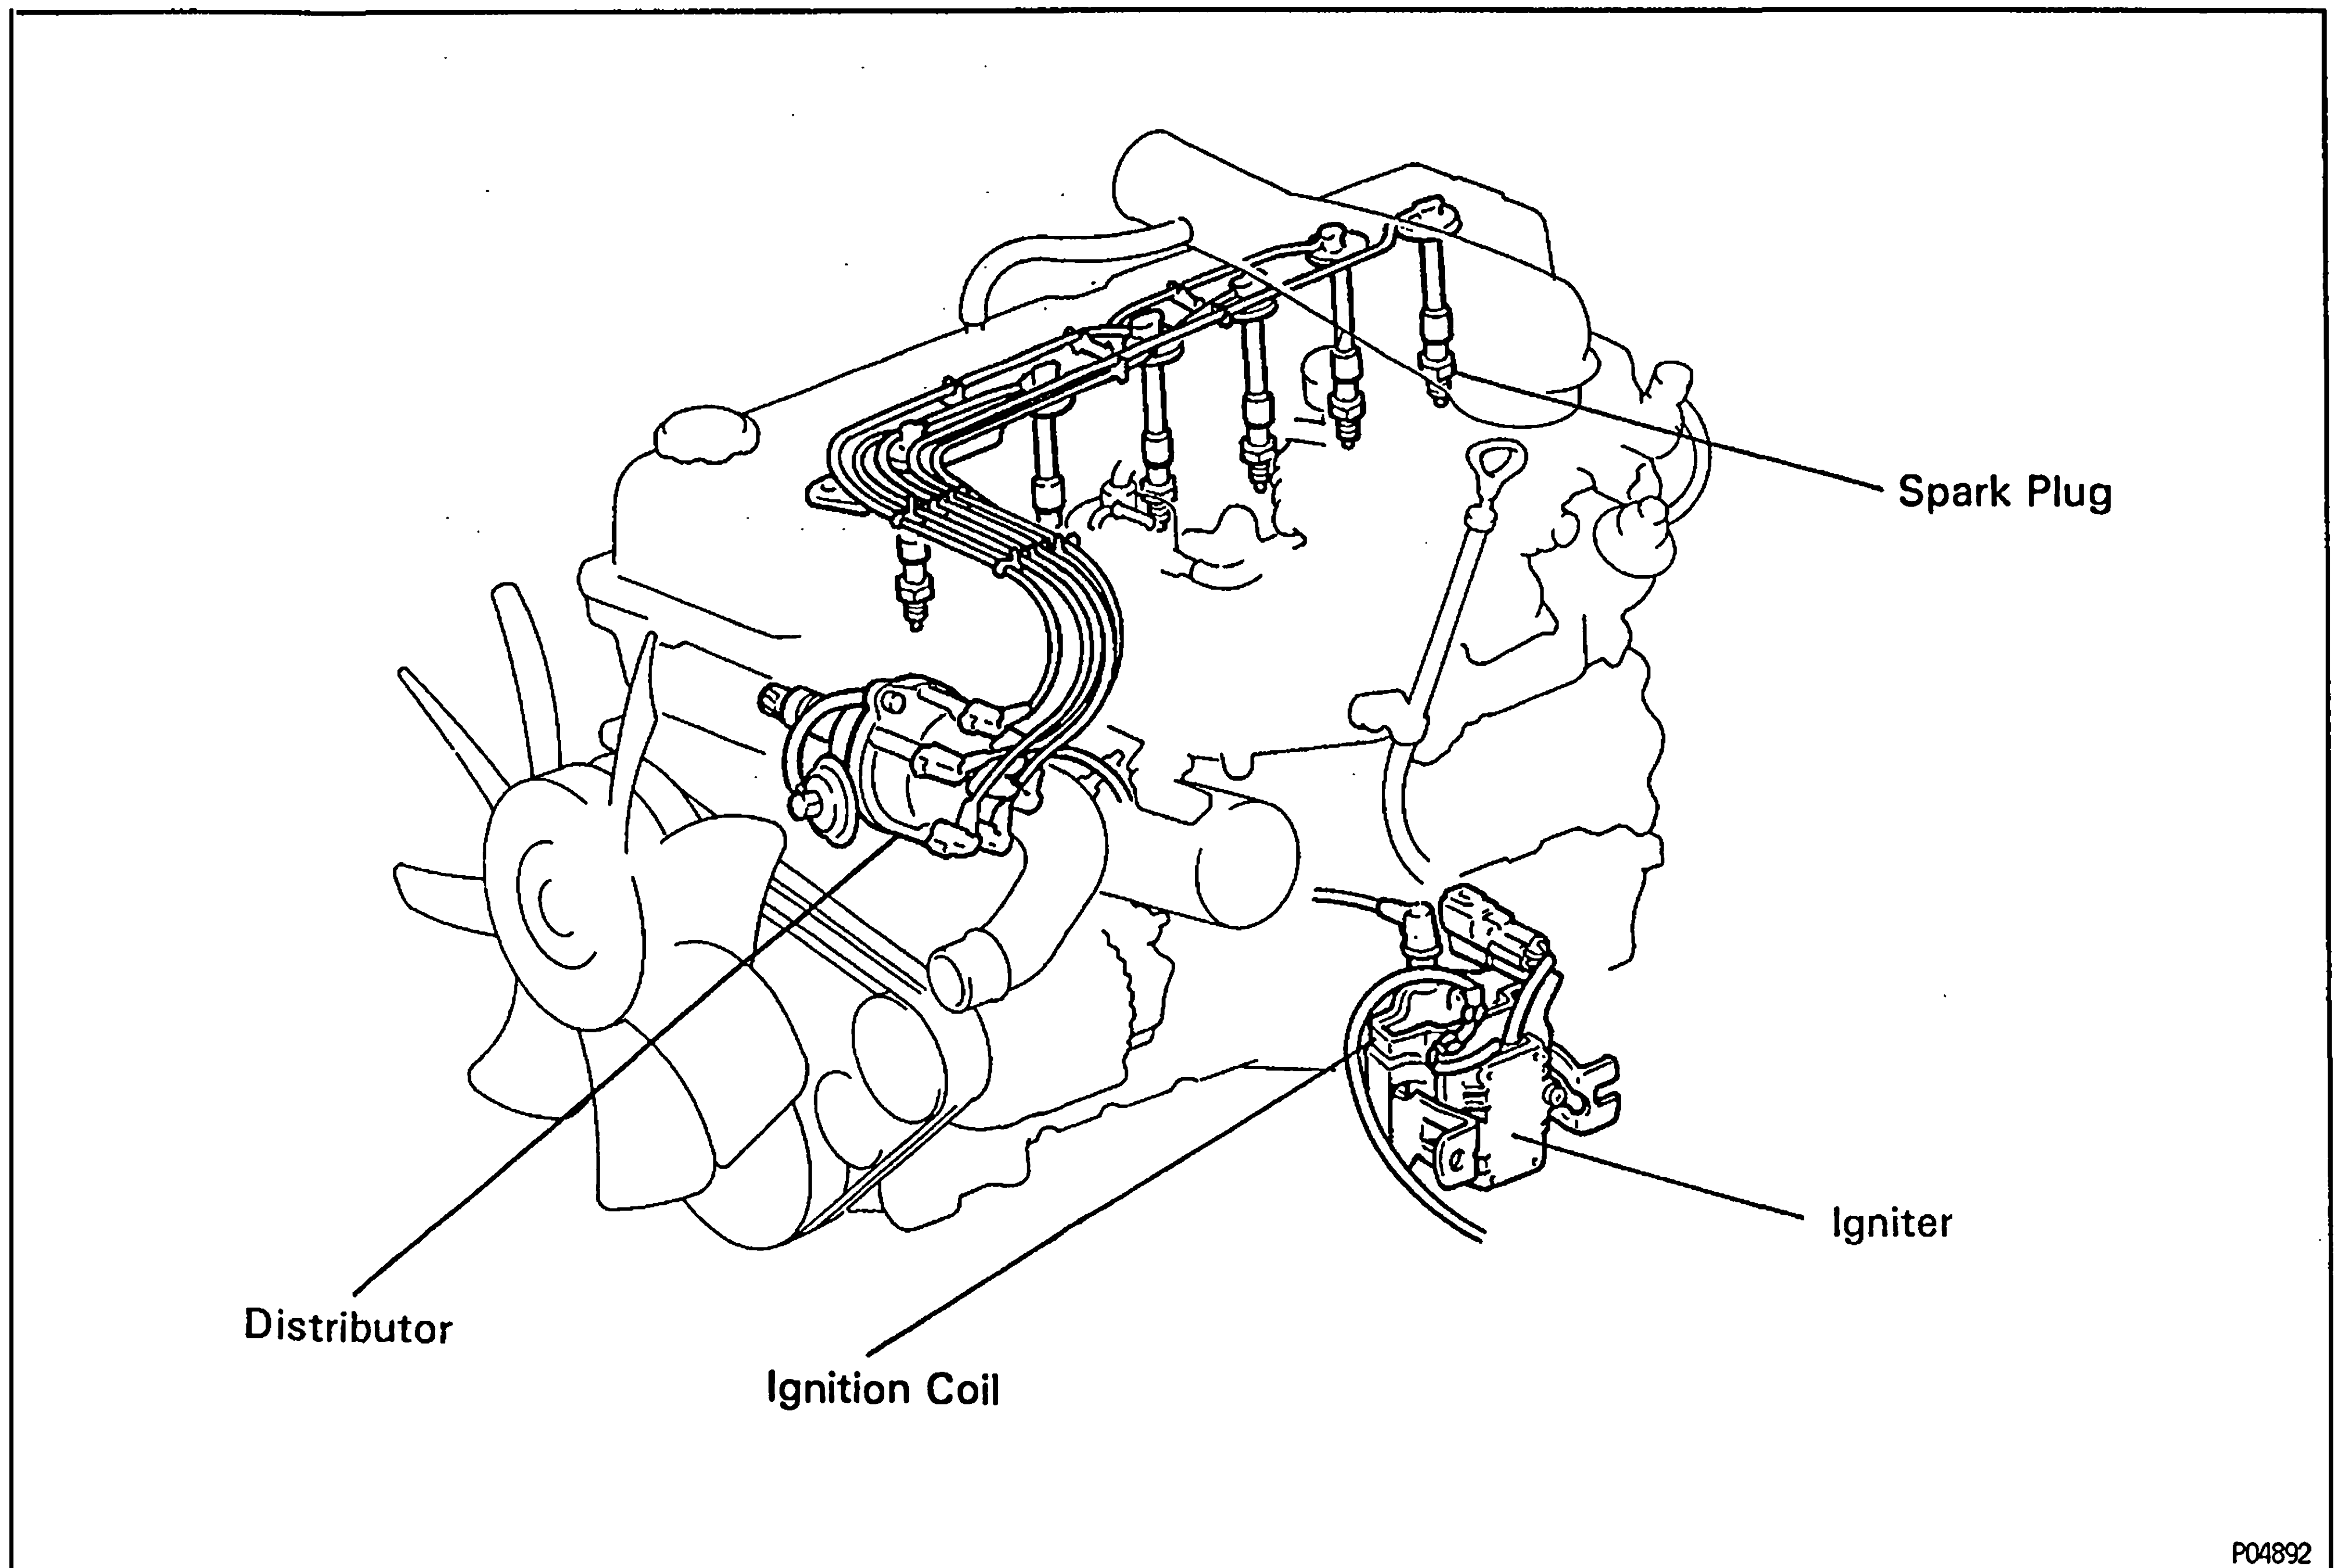

This ignition system is comprised of a distributor, ignition coil, igniter, spark plugs and other components.

IGNITER

The igniter turns the primary current of the ignition coil ON and OFF.

IGNITION COIL


The ignition coil uses a closed core coil with the primary coil wrapped around the core and the secondary coil wrapped around the primary coil. This allows the generation of a high voltage sufficient to cause a spark to jump across the spark plug gap.

DISTRIBUTOR

This correctly distributes high voltage to the spark plug of each cylinder in the specified ignition order.

PRECAUTIONS

1. Do not leave the ignition switch on for more than ^{IG03D-01} 10 minutes if the engine does not start.

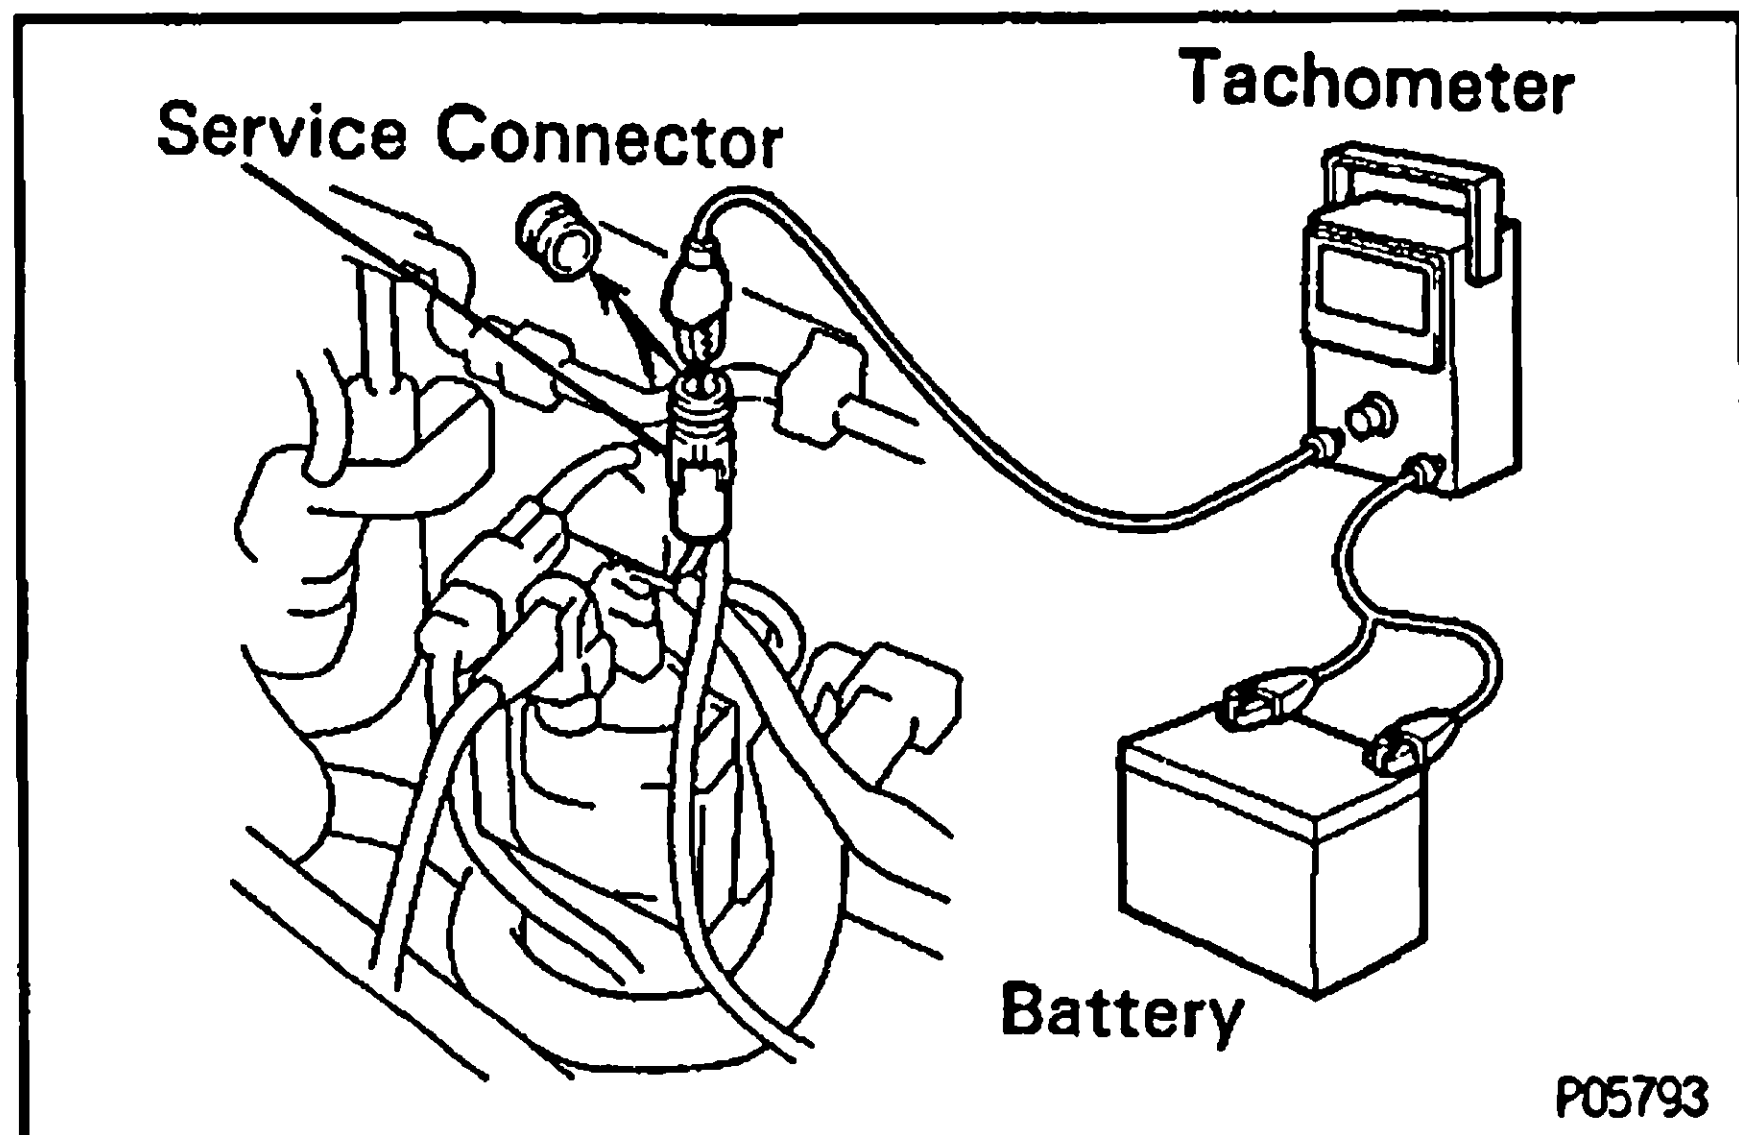


2. With a tachometer connected to the system, connect the test probe of the tachometer to the service connector from the igniter.
3. As some tachometers are not compatible with this ignition system, we recommend that you confirm the compatibility of your unit before use.
4. NEVER allow the tachometer terminals to touch ground as it could result in damage to the igniter and/or ignition coil.
5. Do not disconnect the battery while the engine is running.
6. Check that the igniter is properly grounded to the body.


SYSTEM CIRCUIT

IG00P-02

FZJ 70 Series

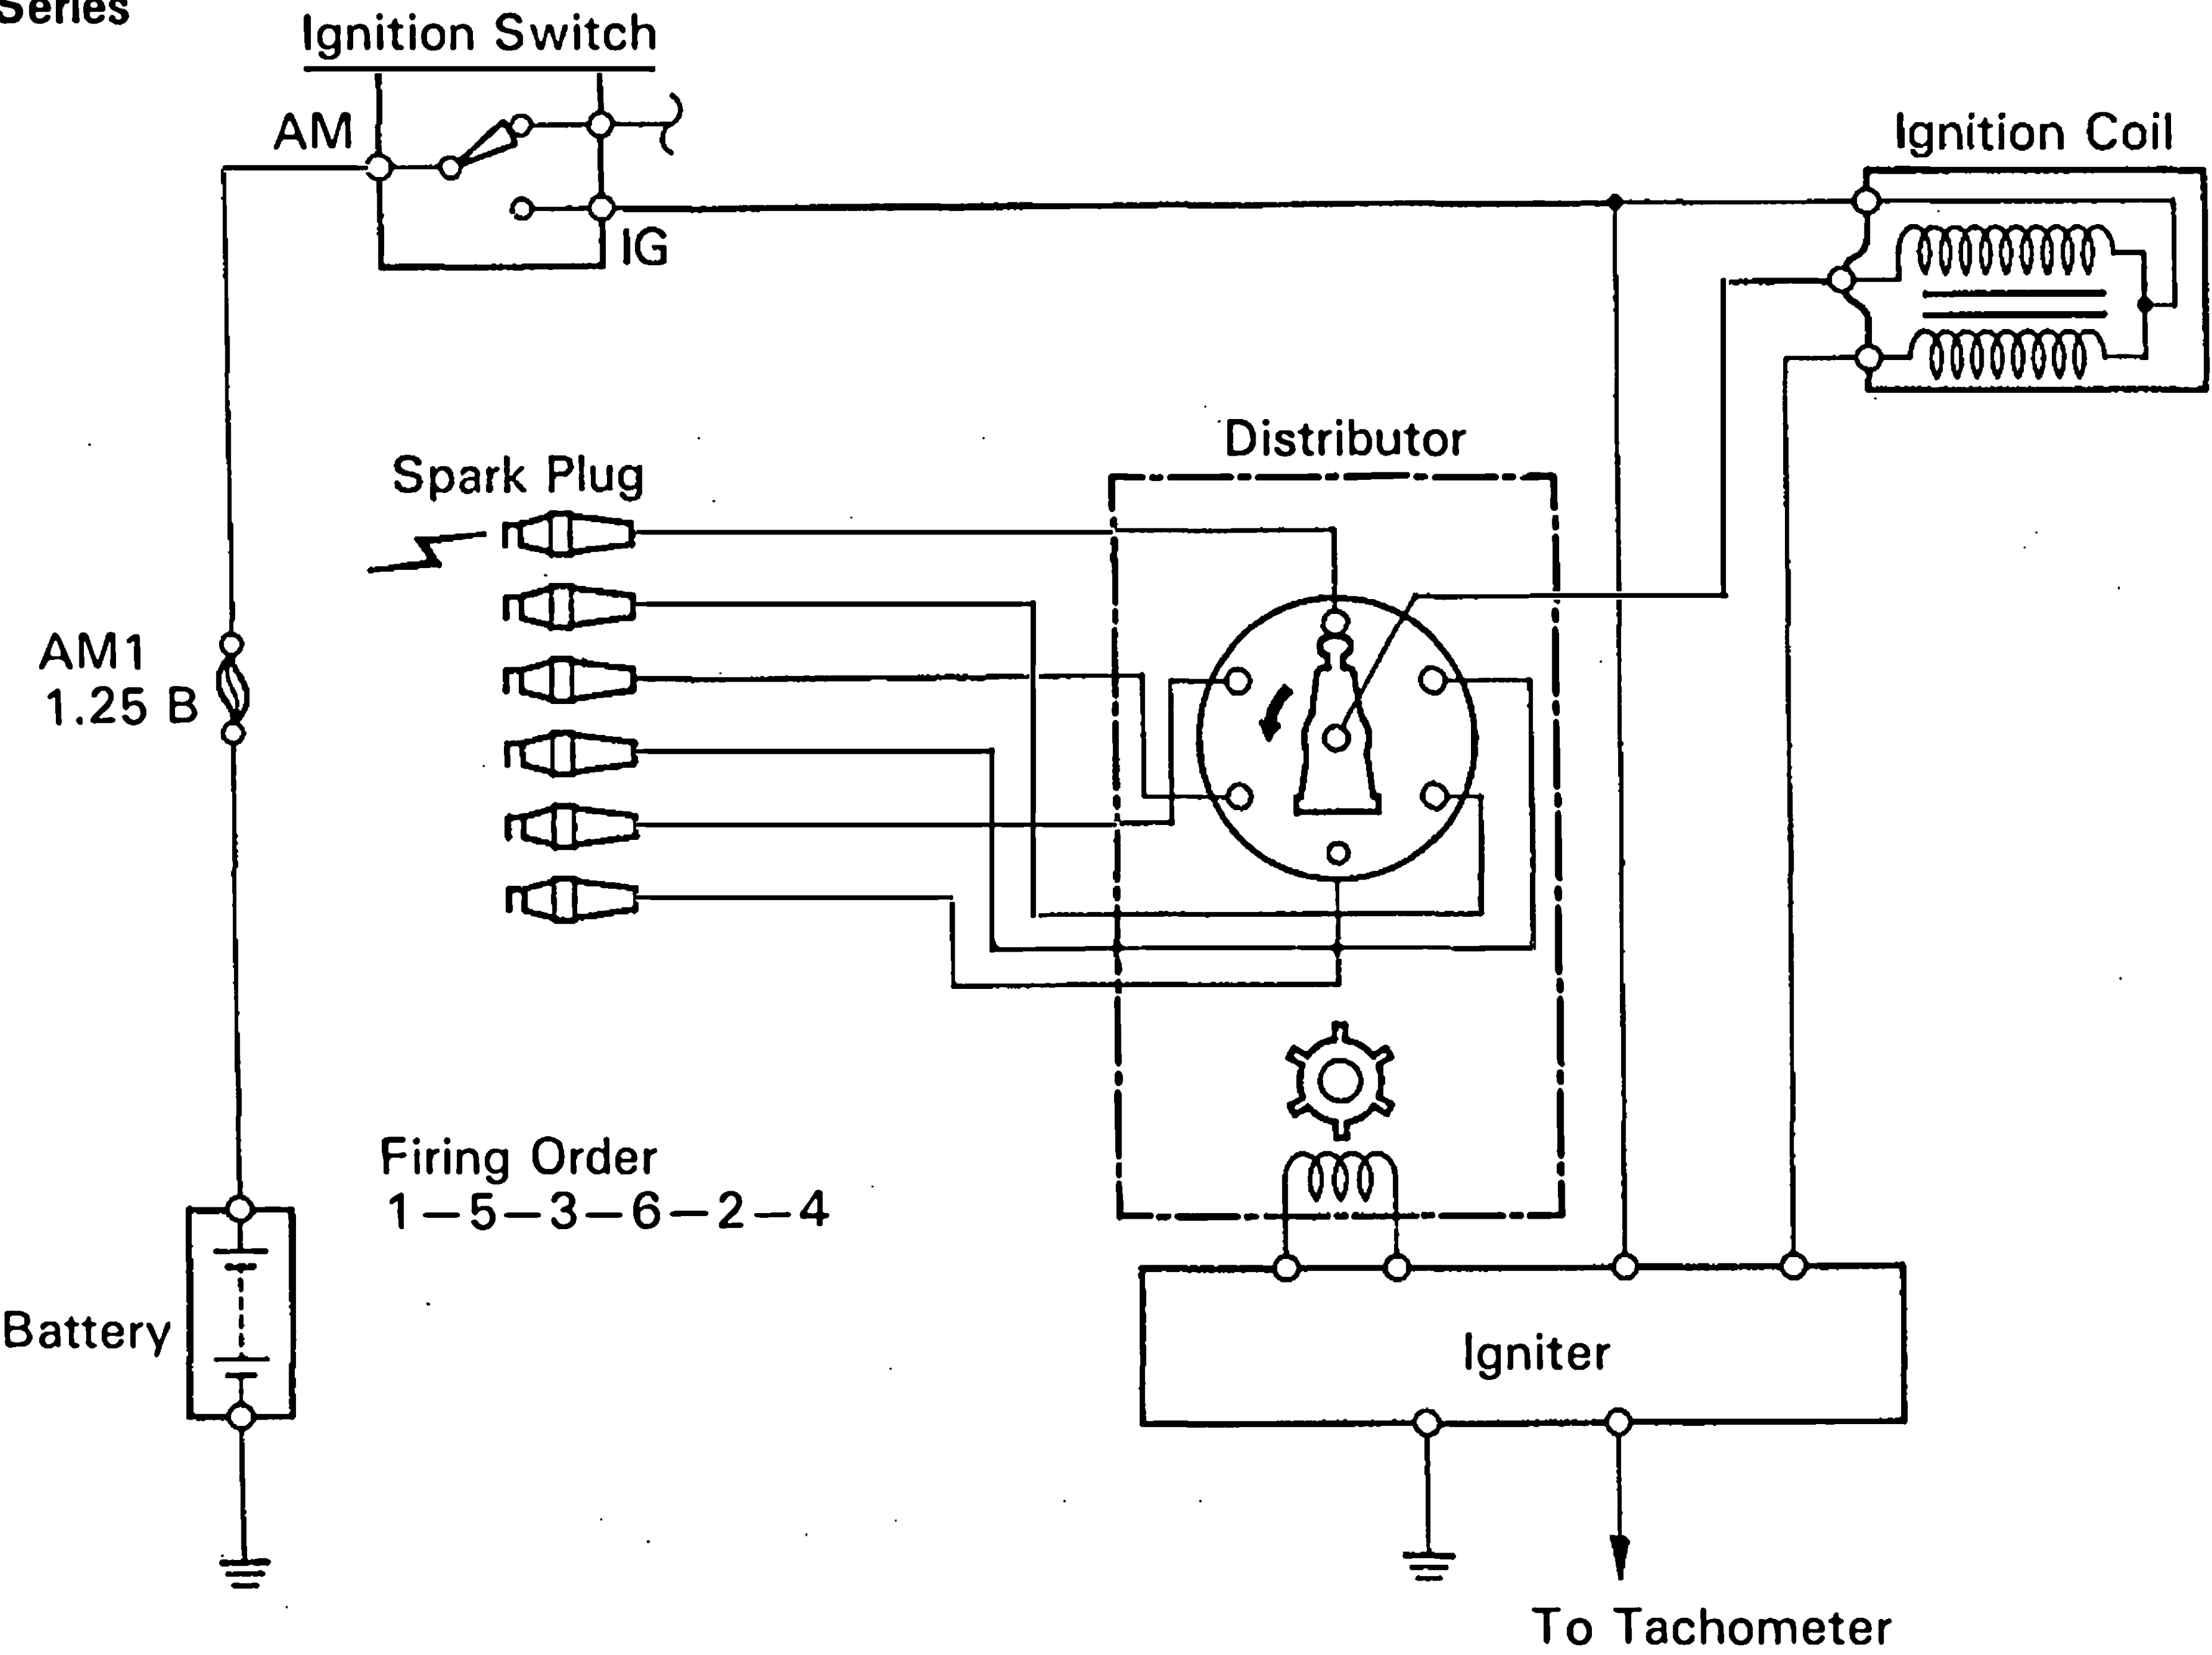

FZJ 80 Series

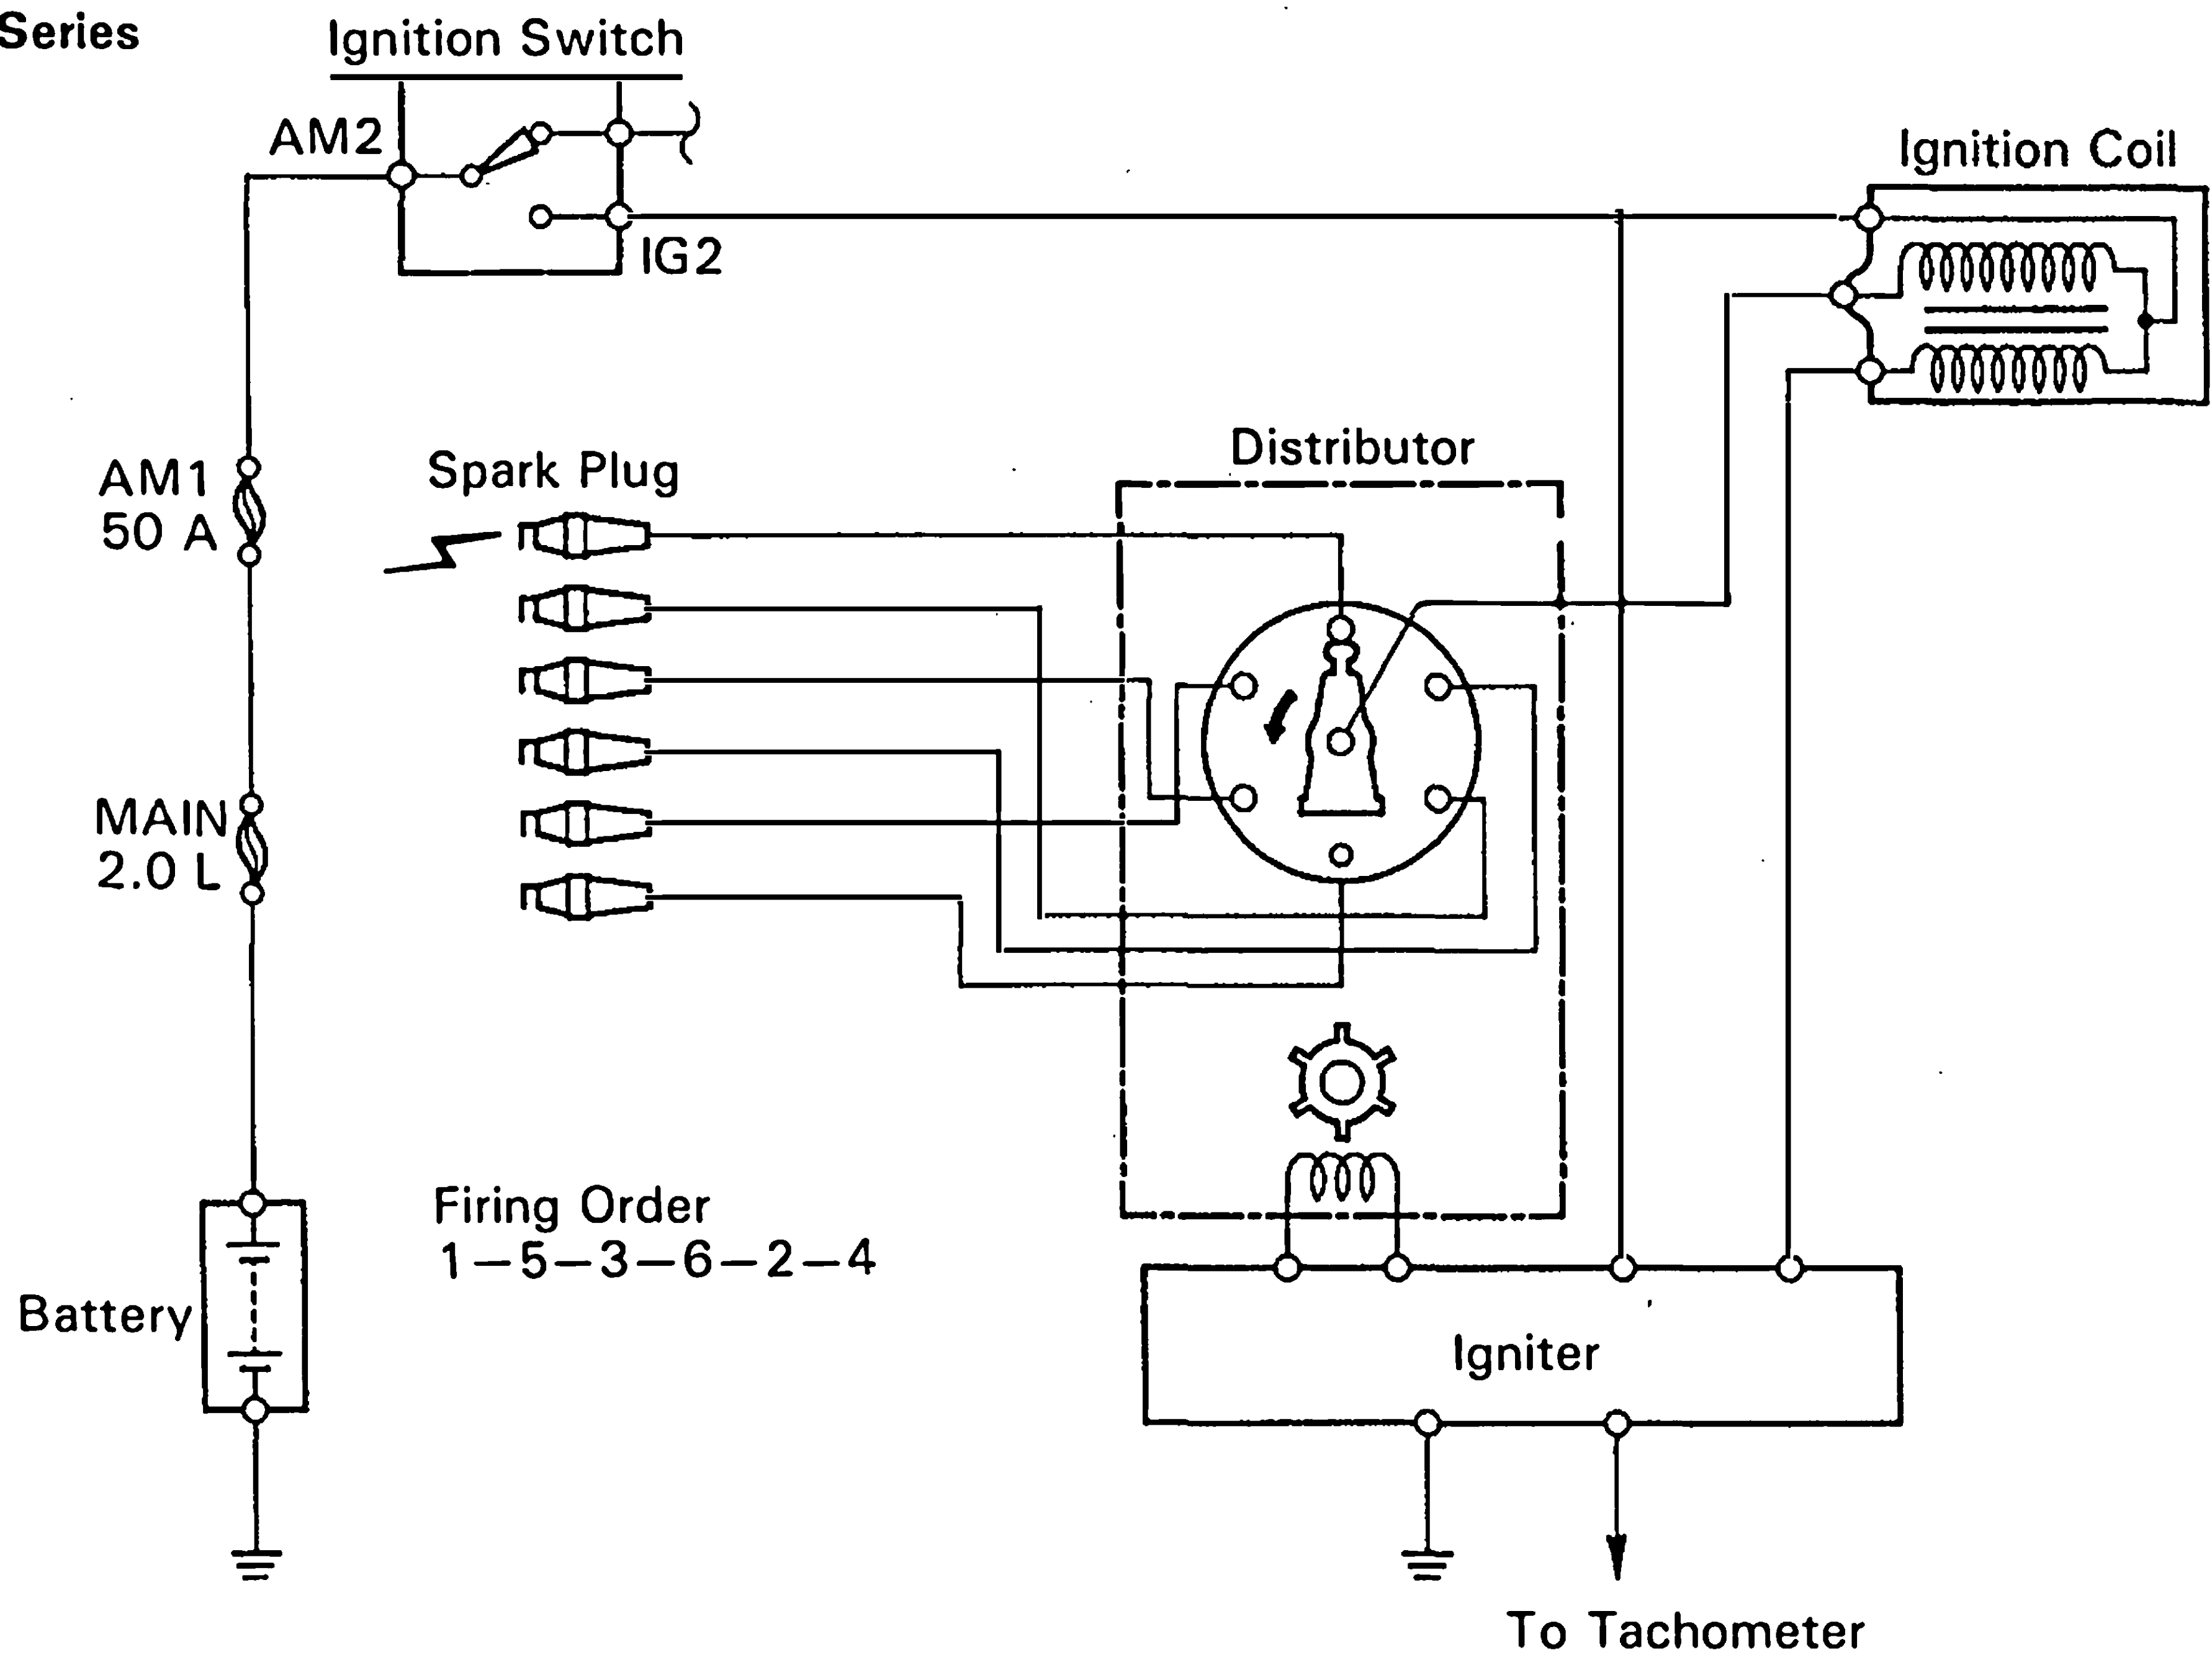

OPERATION


The function of the ignition system is to distribute spark to the cylinders at appropriate timing in accordance with the piston position.

IG034-01

PREPARATION

SST (SPECIAL SERVICE TOOLS)



IG00R-02

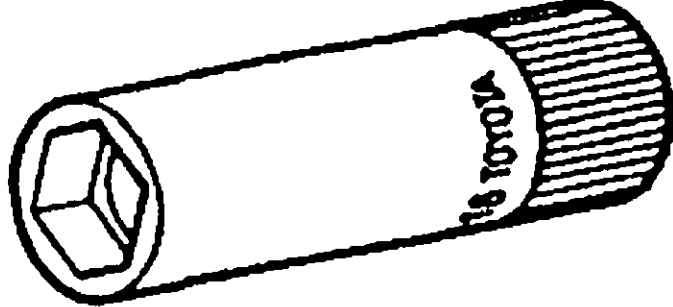	09155-16100 Spark Plug Wrench	
---	-------------------------------	--

IG

RECOMMENDED TOOLS


IG00S-01

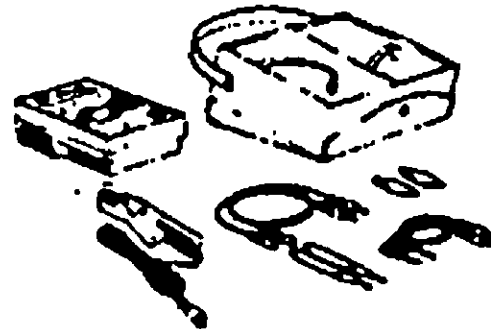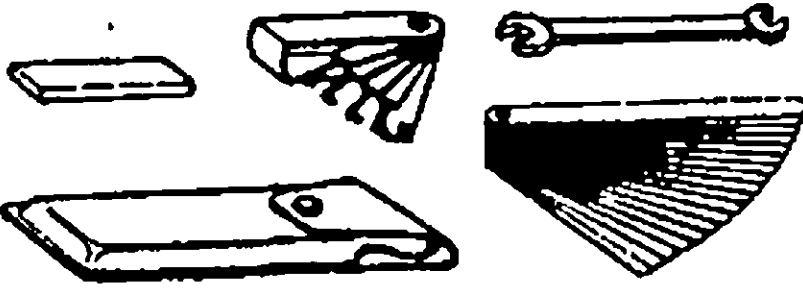	09082-00015 TOYOTA Electrical Tester	
	09200-00010 Engine Adjust Kit	

EQUIPMENT

IG00T-02


Megger insulation resistancemeter	
Spark plug cleaner	
Torque wrench	

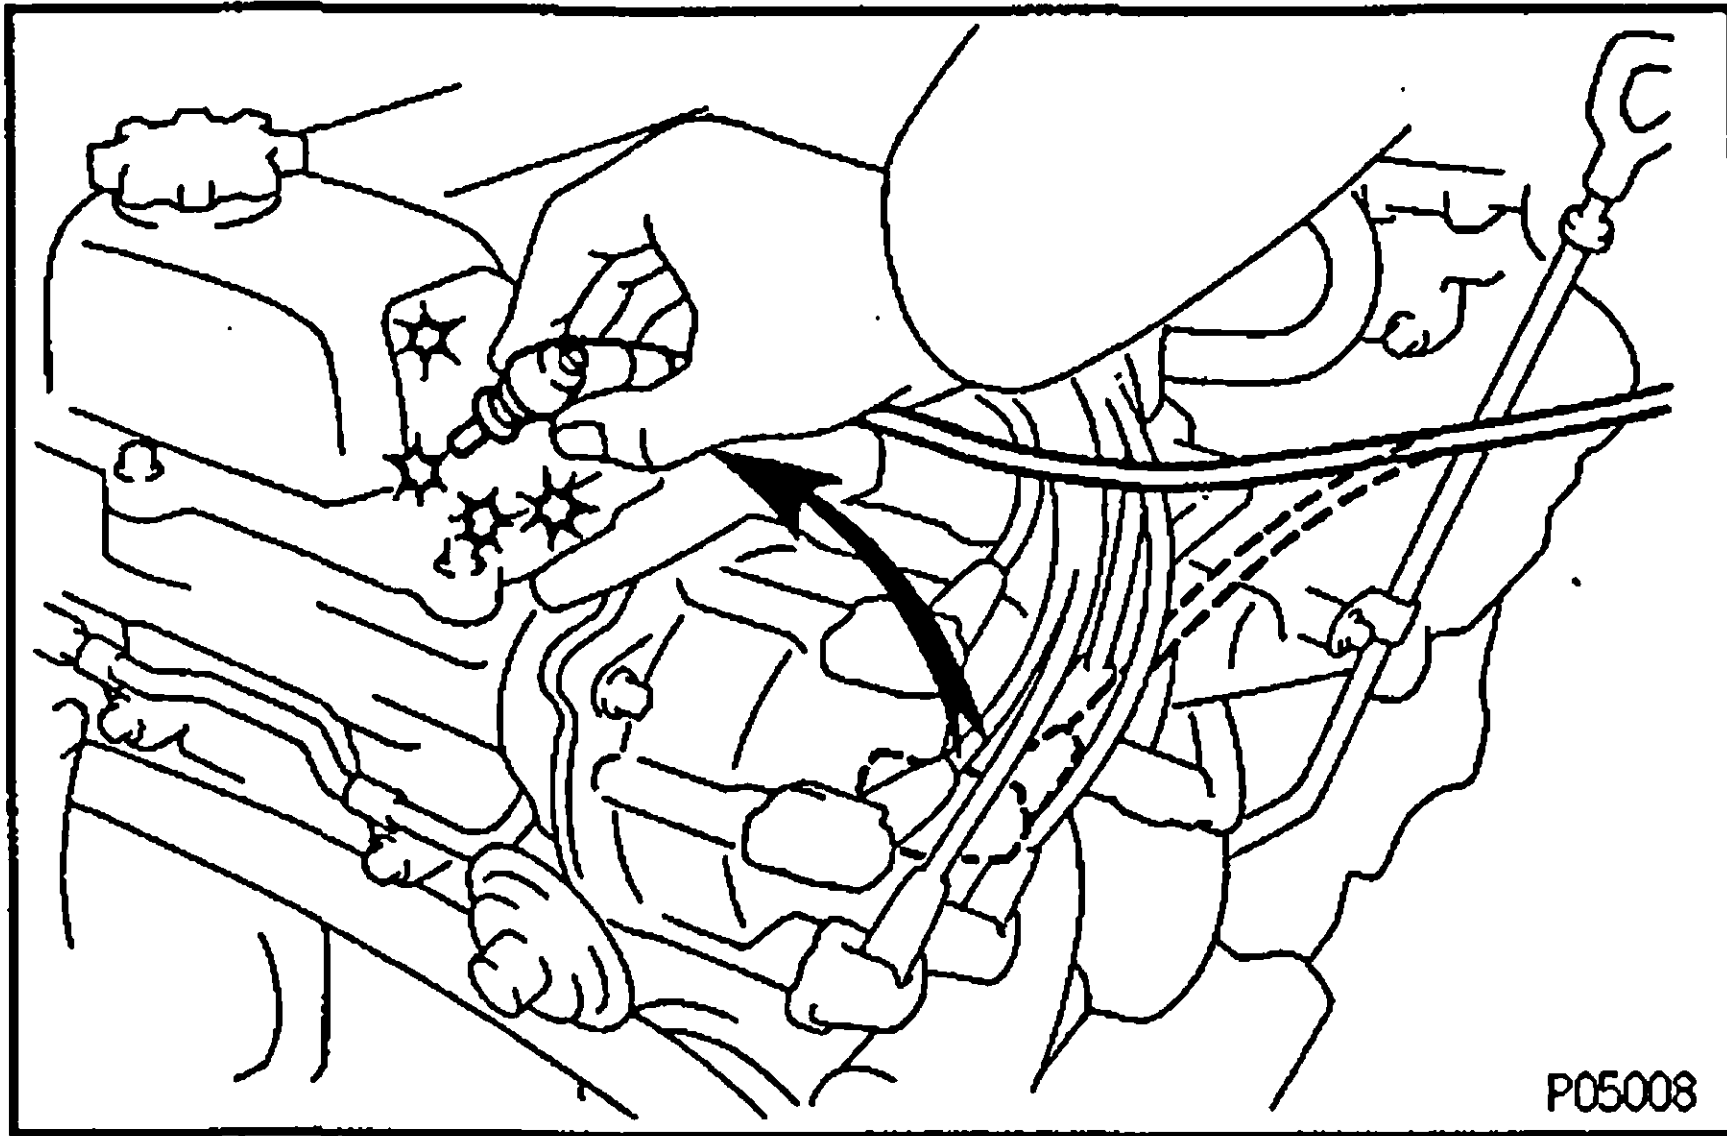


ON—VEHICLE INSPECTION SPARK TEST

CHECK THAT SPARK OCCURS

- Disconnect the high—tension cords (from the ignition coil) from the distributor cap.
- Hold the end approx. 12.5 mm (0.50 in.) from the body ground.
- Check if spark occurs while engine is being cranked. If the spark does not occur, perform the test as follows:

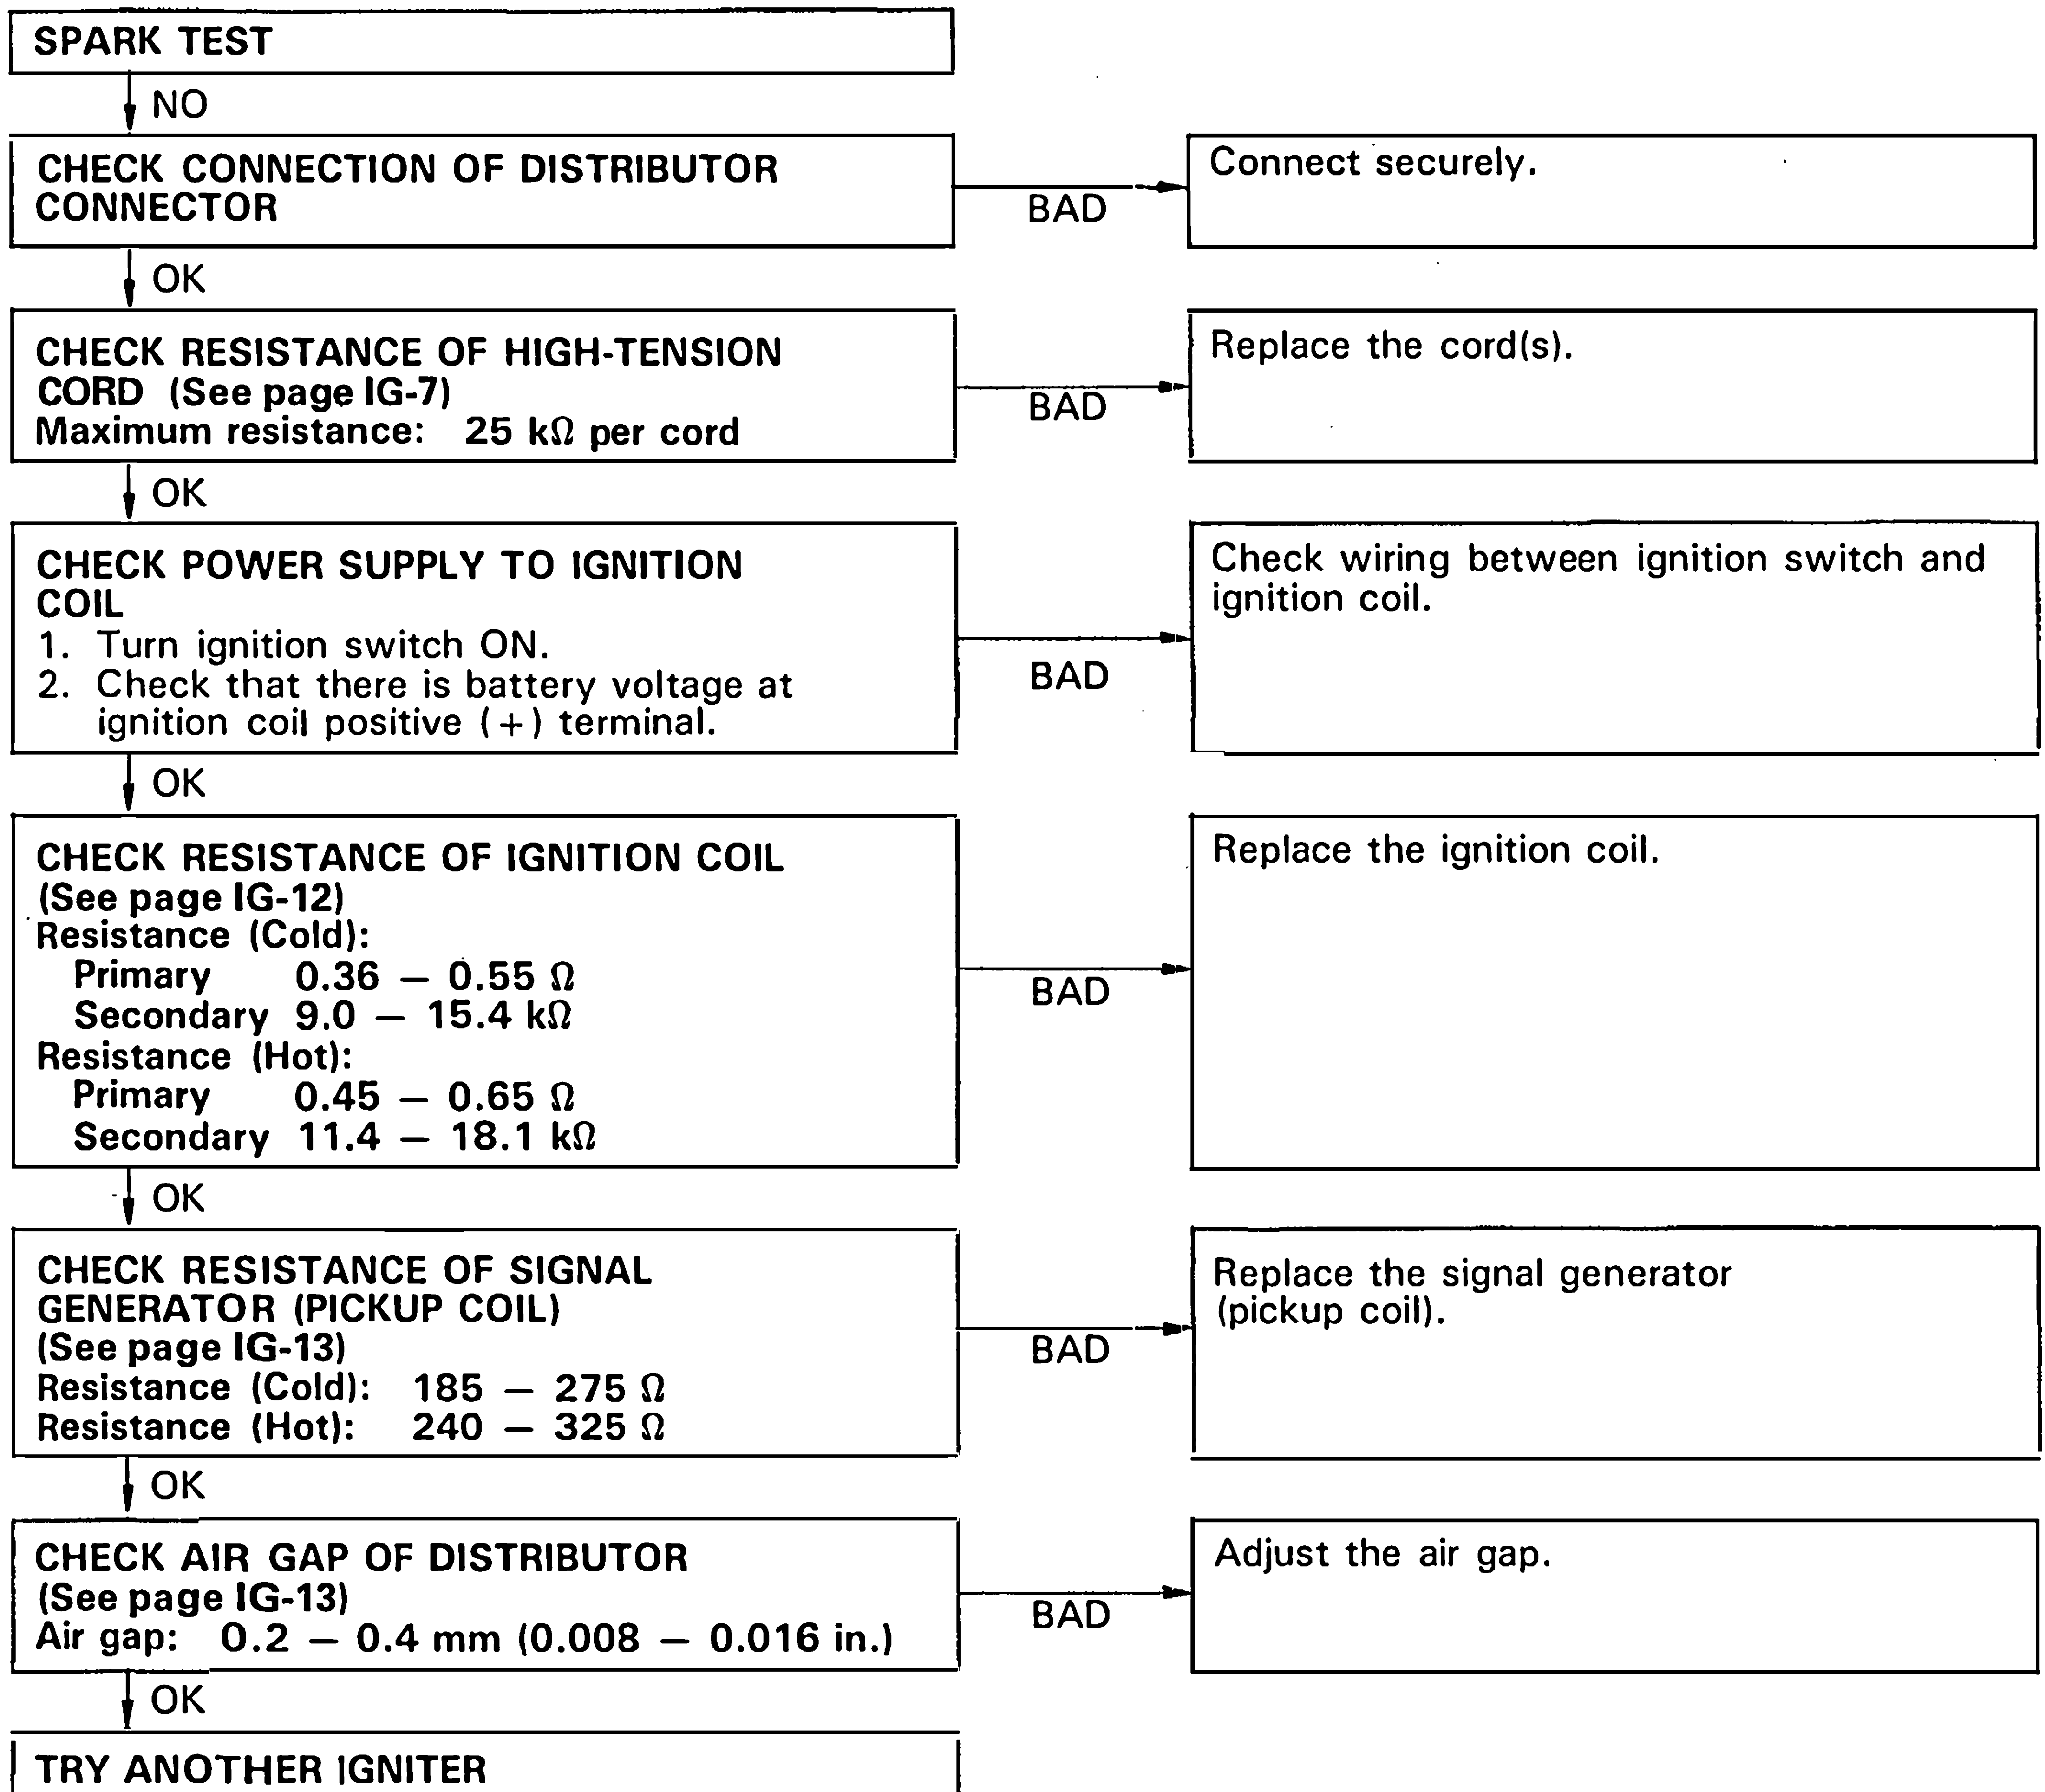


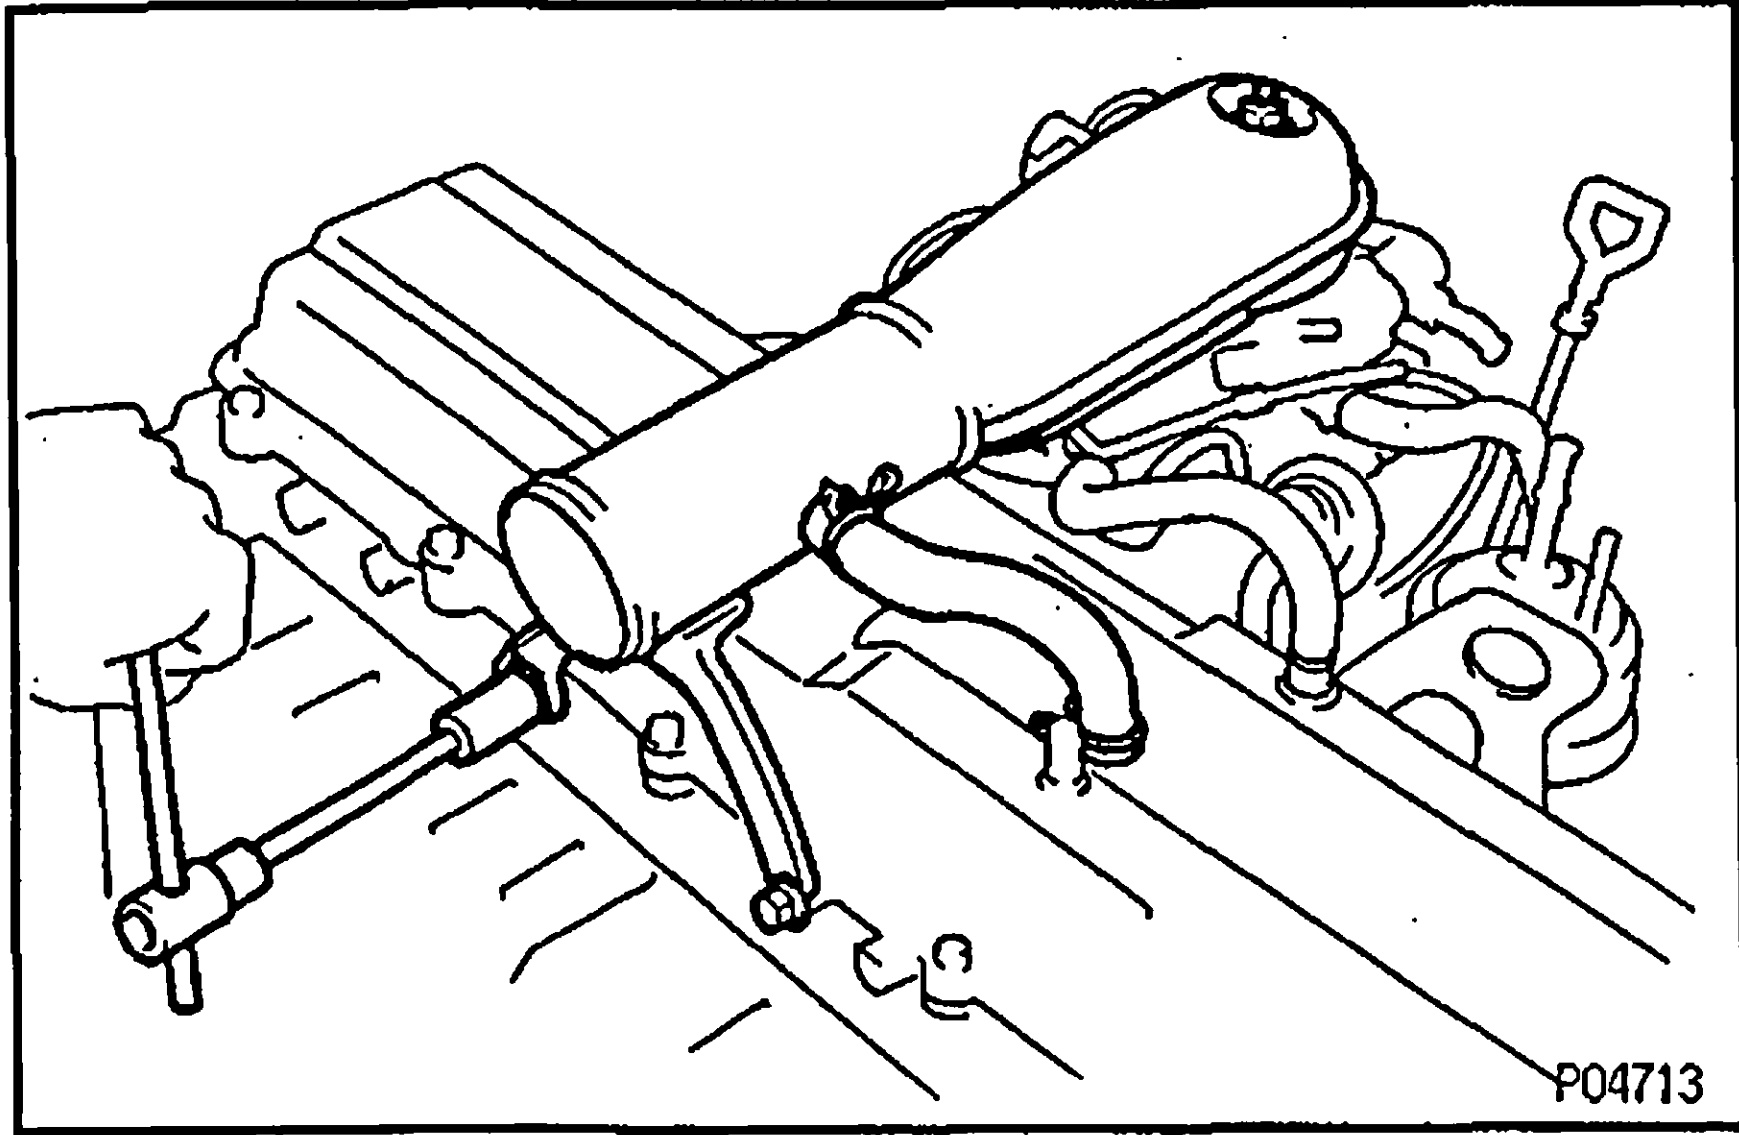

HIGH-TENSION CORDS INSPECTION


1. REMOVE INTAKE AIR CONNECTOR

- (a) Disconnect the PCV hose.
- (b) Remove the two bolts, nut and air connector.

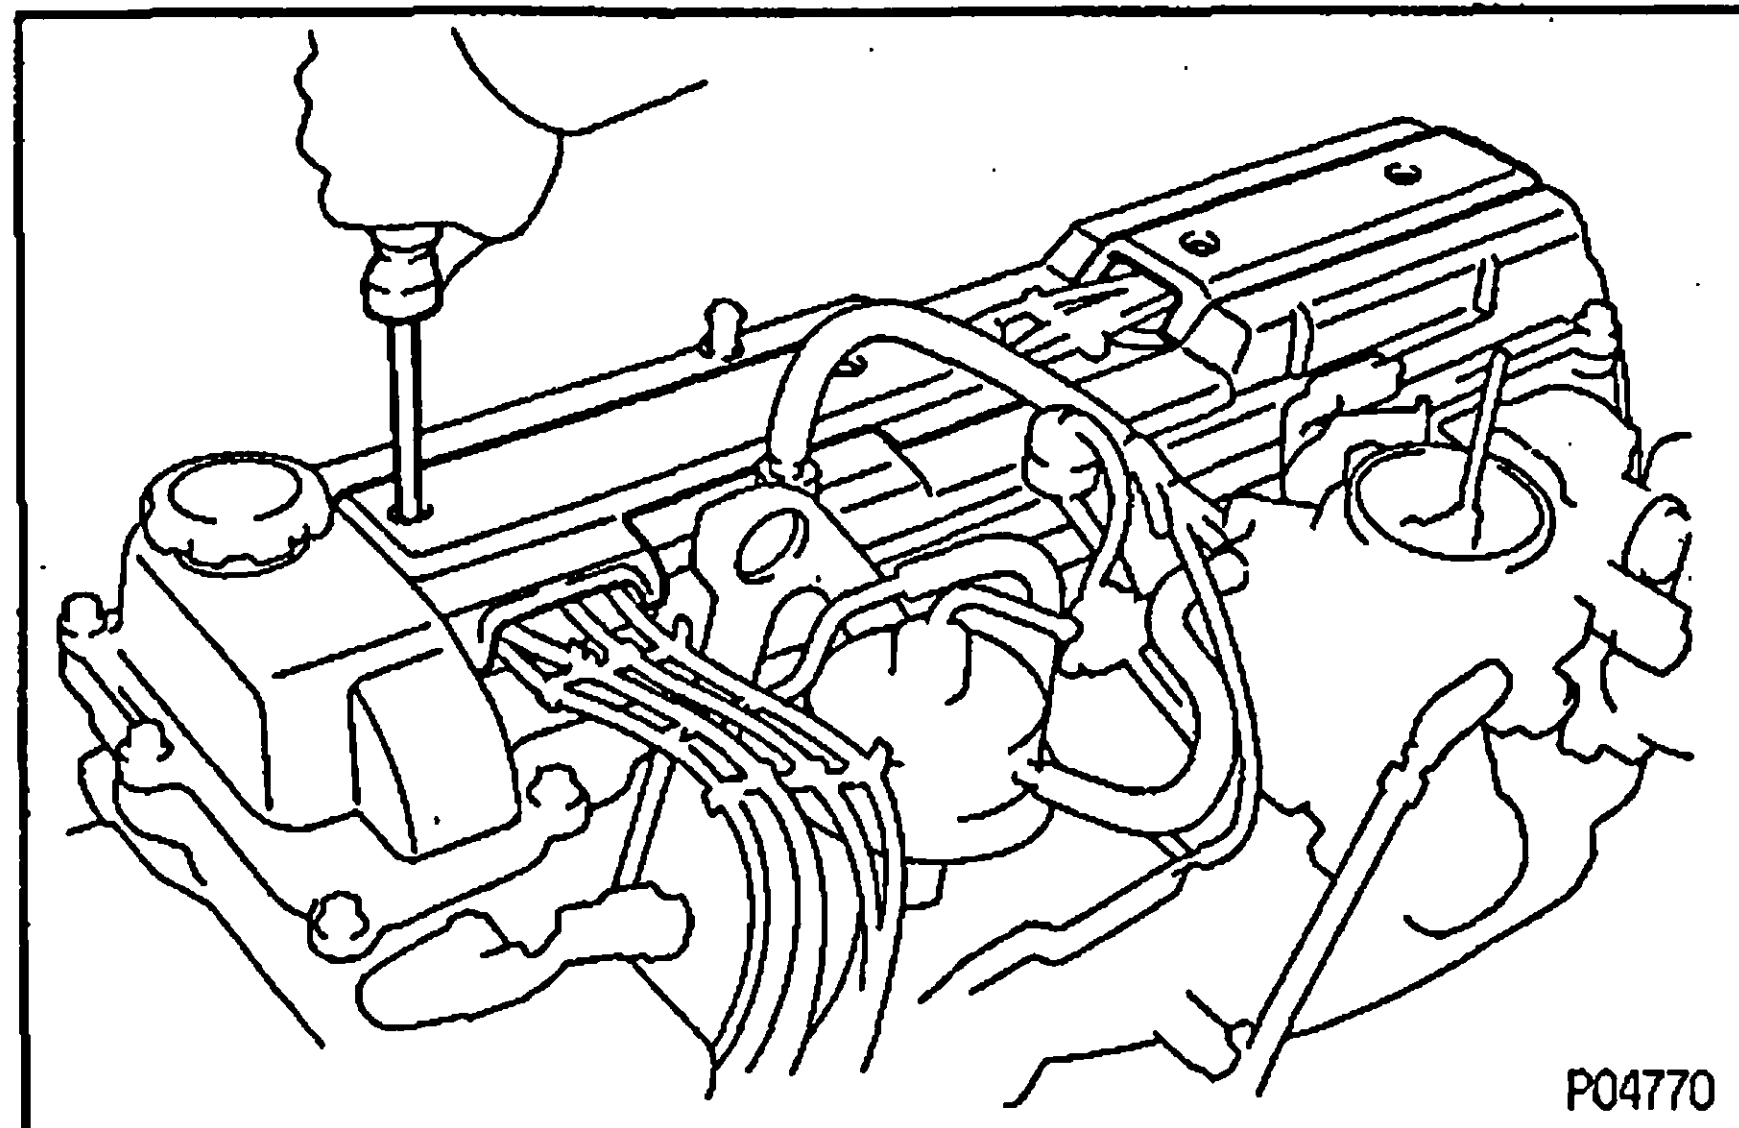


2. REMOVE NO. 2 AND NO. 3 CYLINDER HEAD COVERS

Remove the four bolts and head covers.

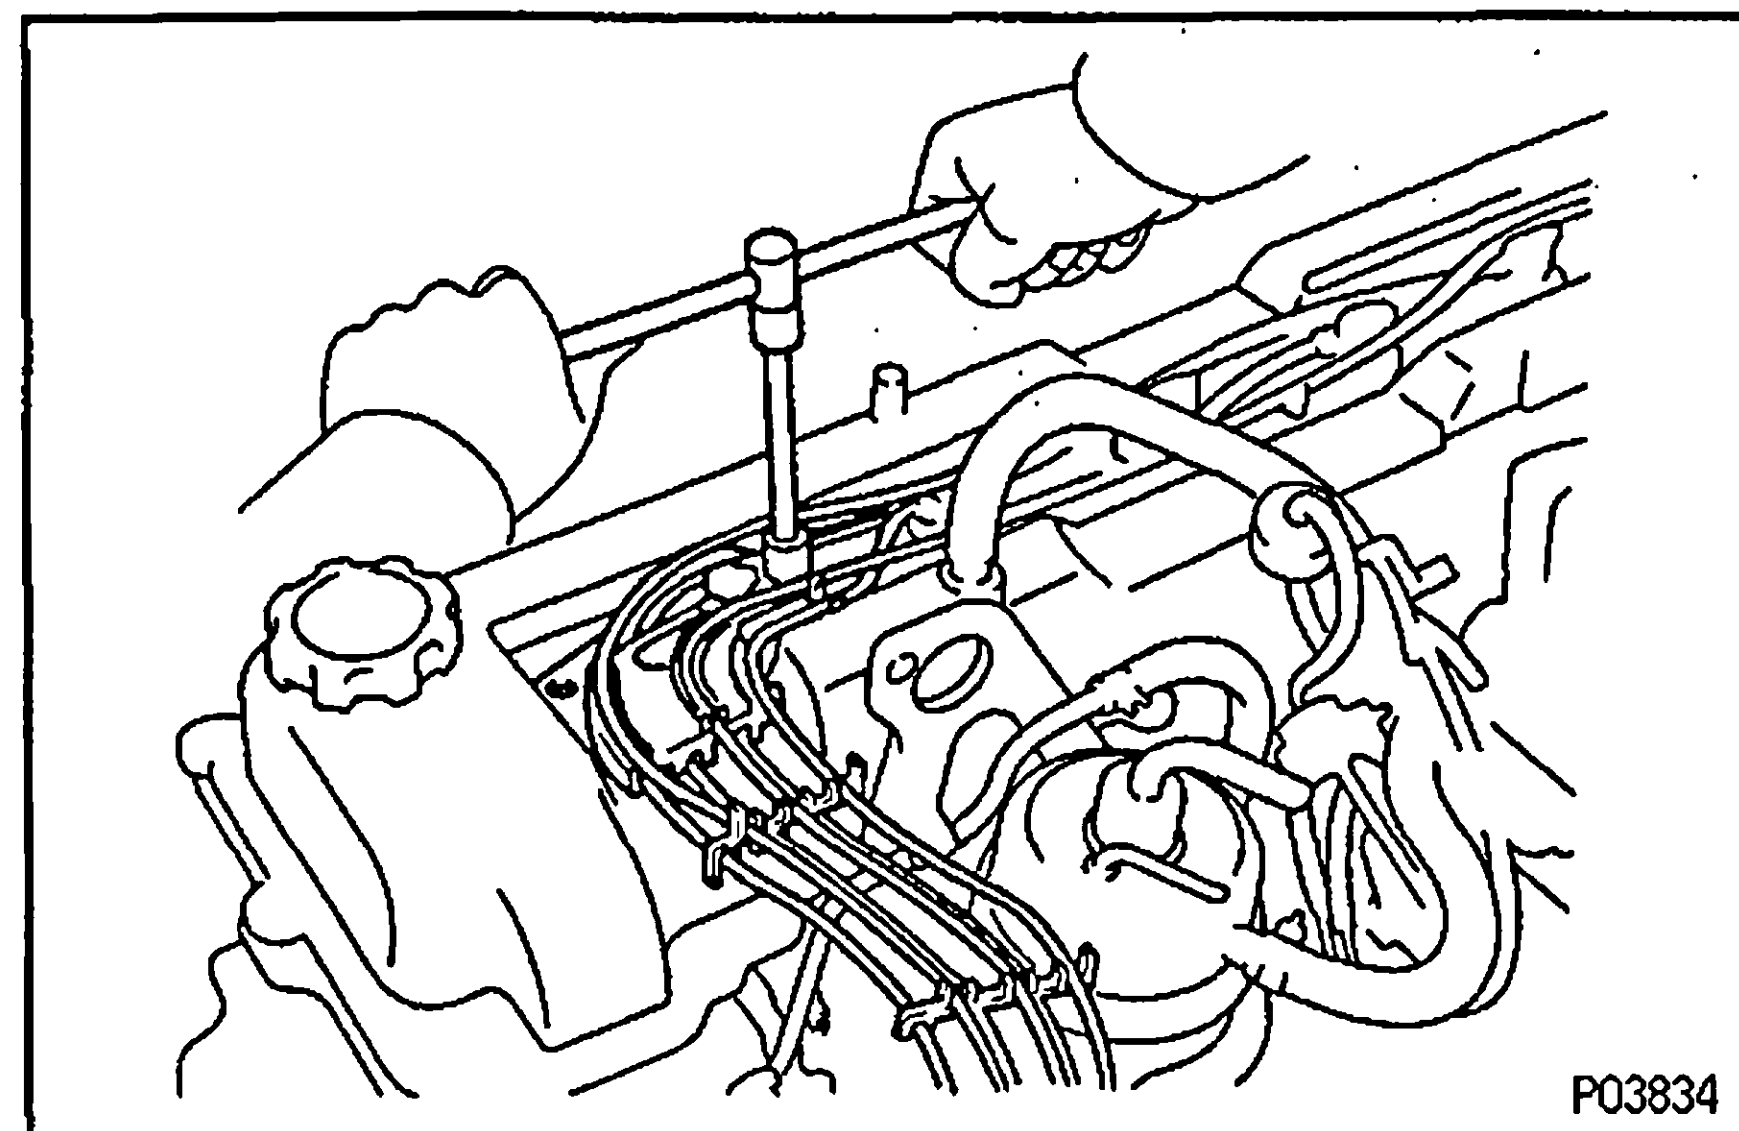


3. DISCONNECT HIGH-TENSION CORDS FROM SPARK PLUGS

- (a) Remove the No.1 cord clamp mounting bolt.

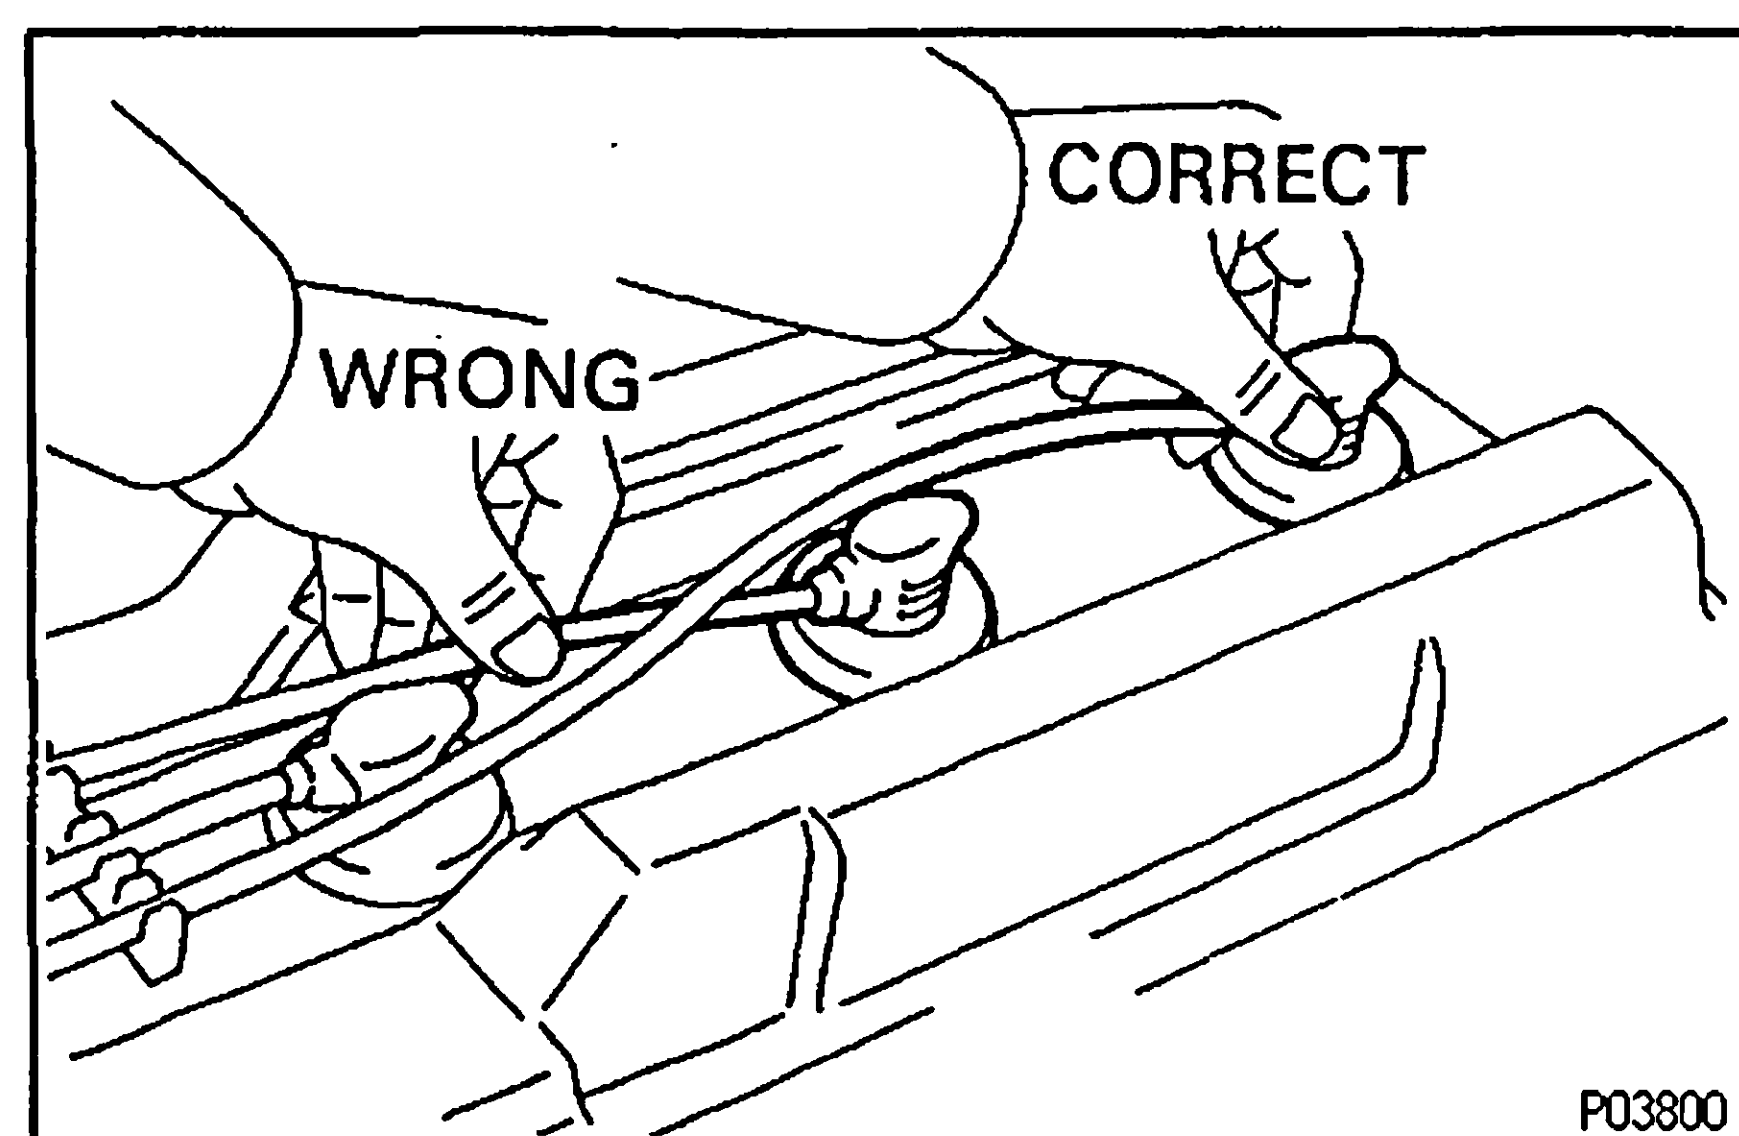


- (b) Disconnect the high-tension cords at the rubber boot.
DO NOT pull on the cords.
NOTICE: Pulling on or bending the cords may damage the conductor inside.

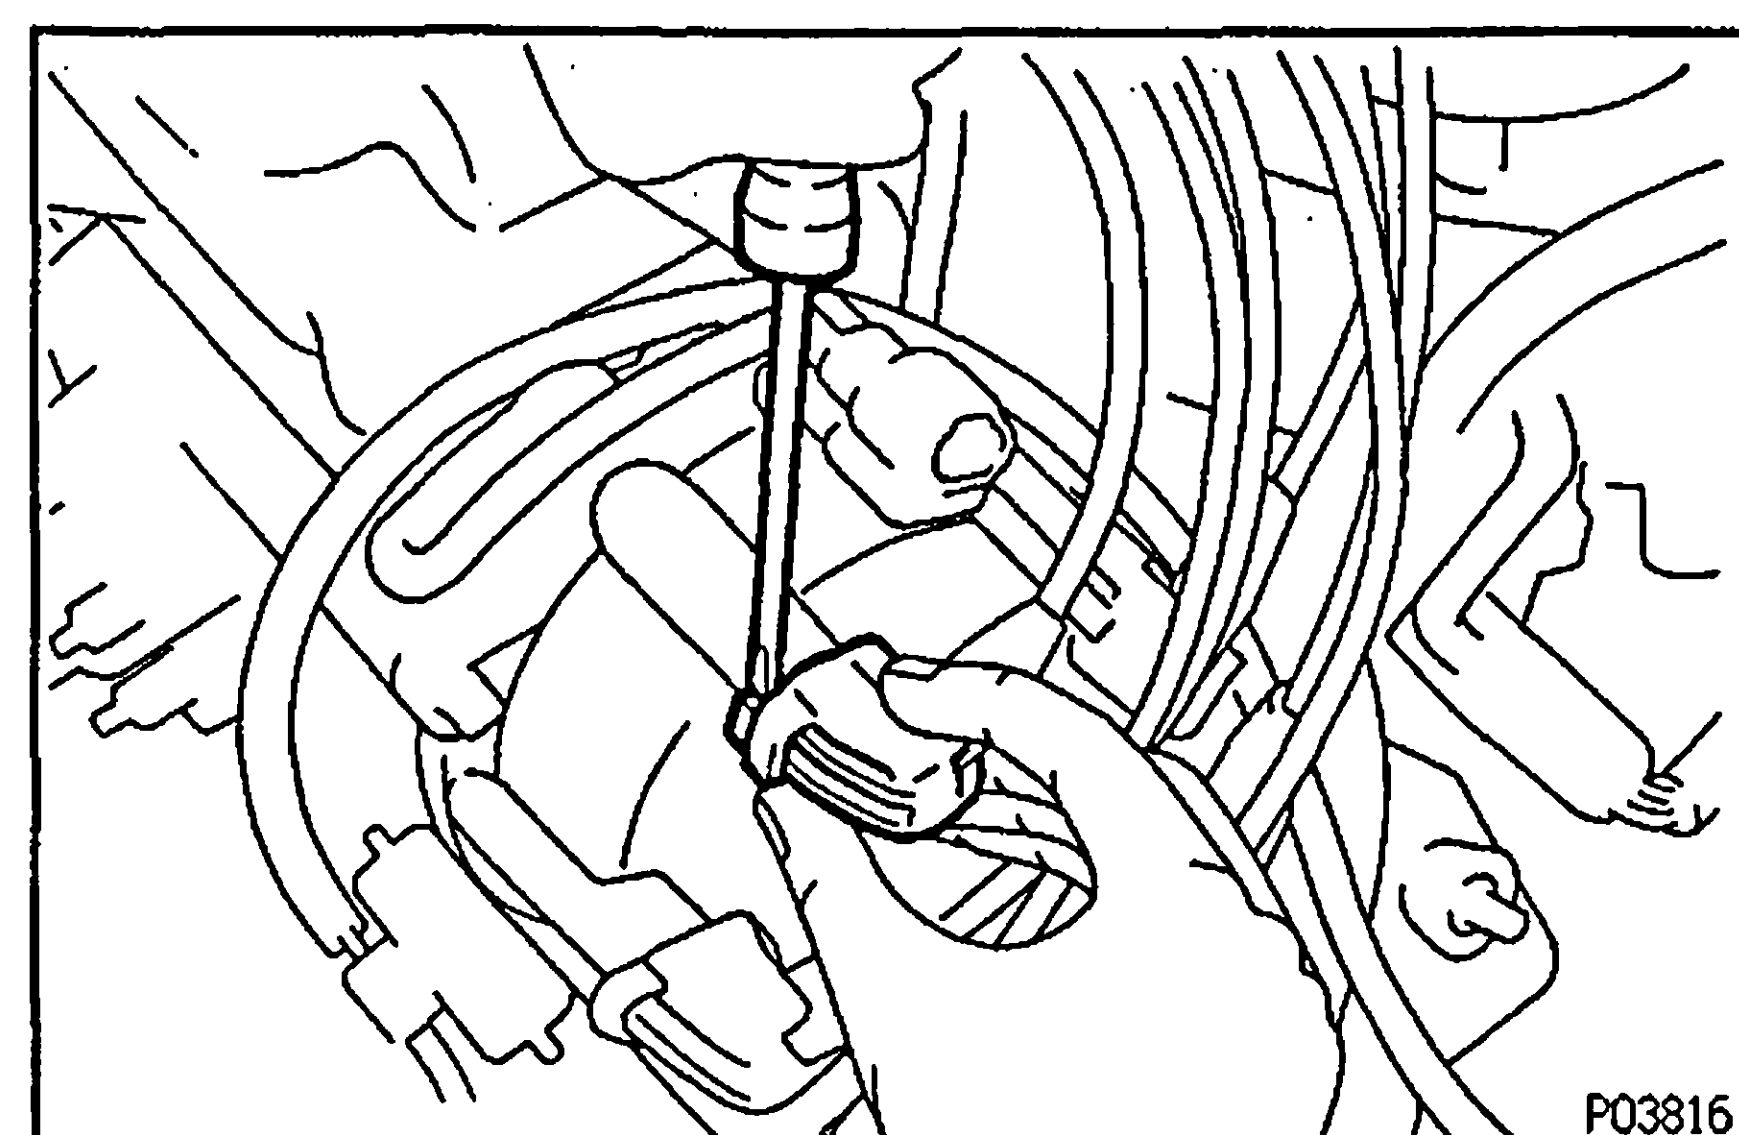

4. DISCONNECT HIGH-TENSION CORDS FROM DISTRIBUTOR CAP AND IGNITION COIL


- (a) Using a screwdriver, lift up the lock claw and disconnect the holder from the distributor cap (ignition coil).

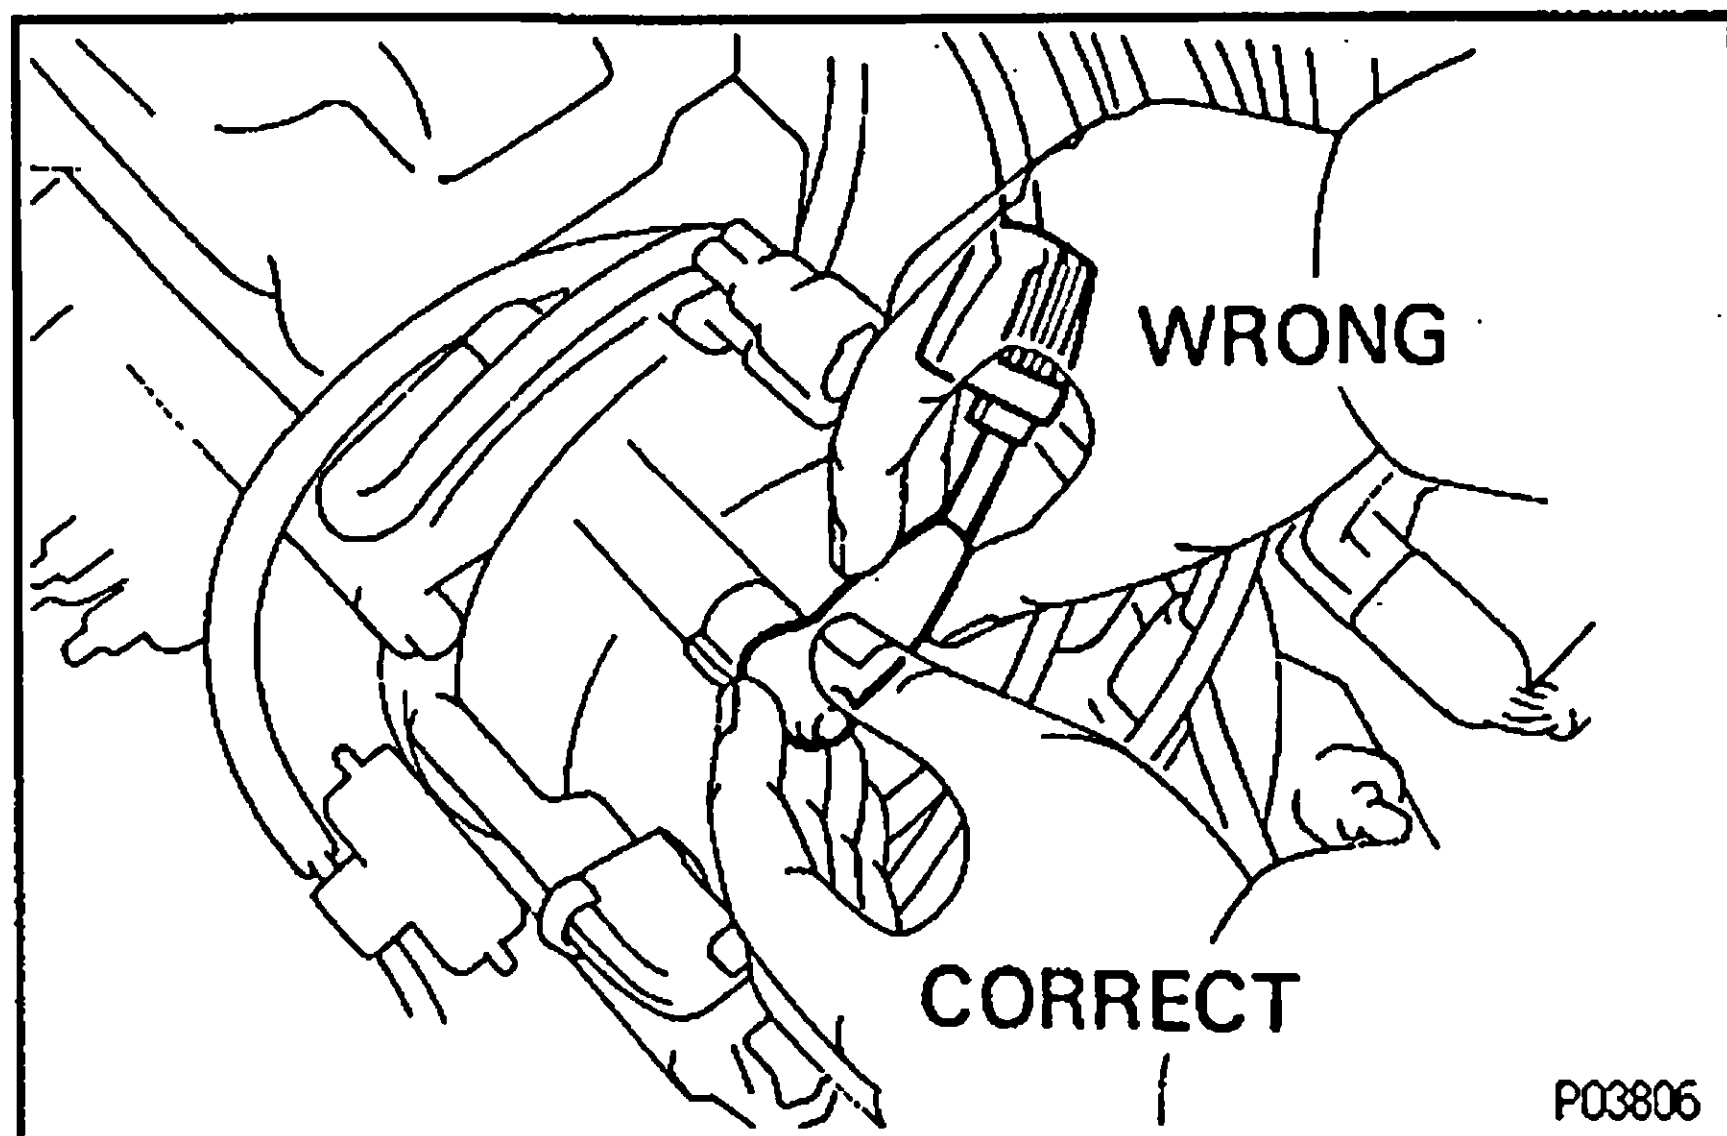

- (b) Disconnect the high—tension cord at the grommet. **DO NOT** pull on the cord.

NOTICE:

- Pulling on or bending the cords may damage the conductor inside.
- Do not wipe any of the oil from the grommet after the high—tension cord is disconnected.

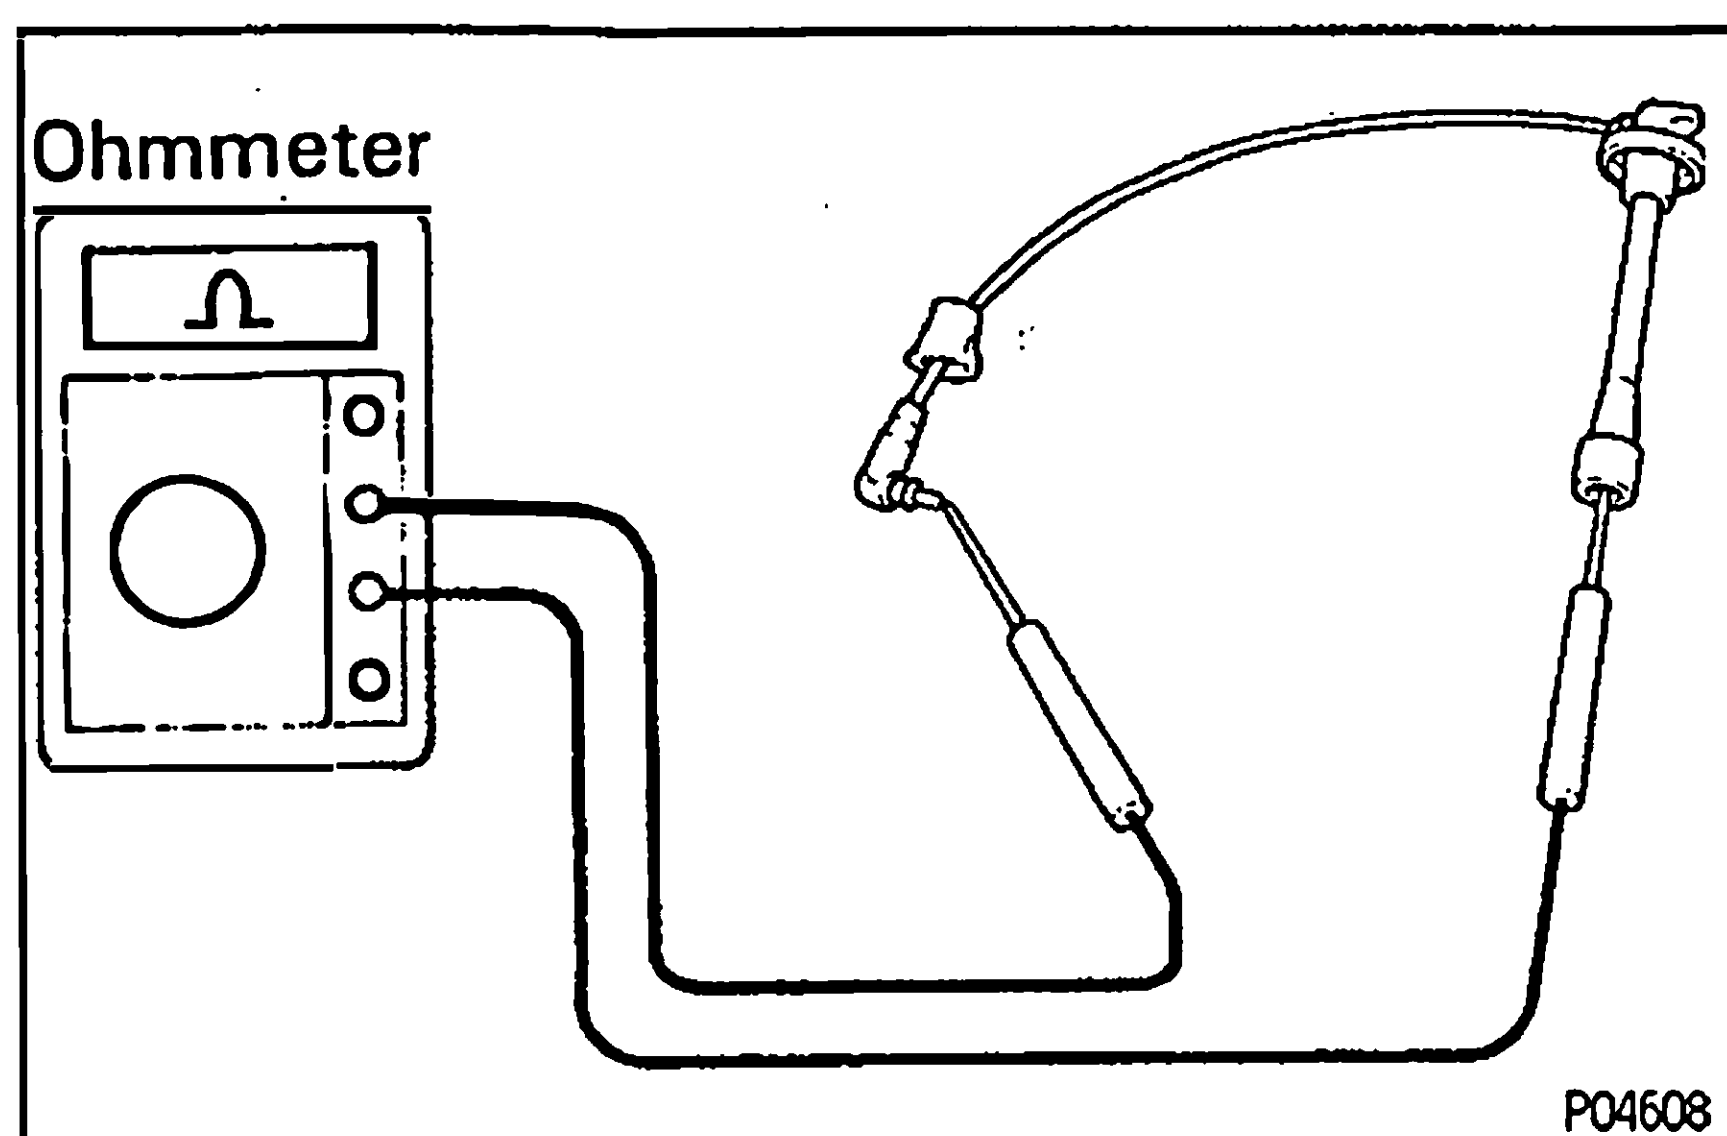


5. INSPECT HIGH—TENSION CORD RESISTANCE

Using an ohmmeter, measure the resistance.

Maximum resistance:


25 kΩ per cord

If the resistance is greater than maximum, check the terminals. If necessary, replace the high — tension cord.

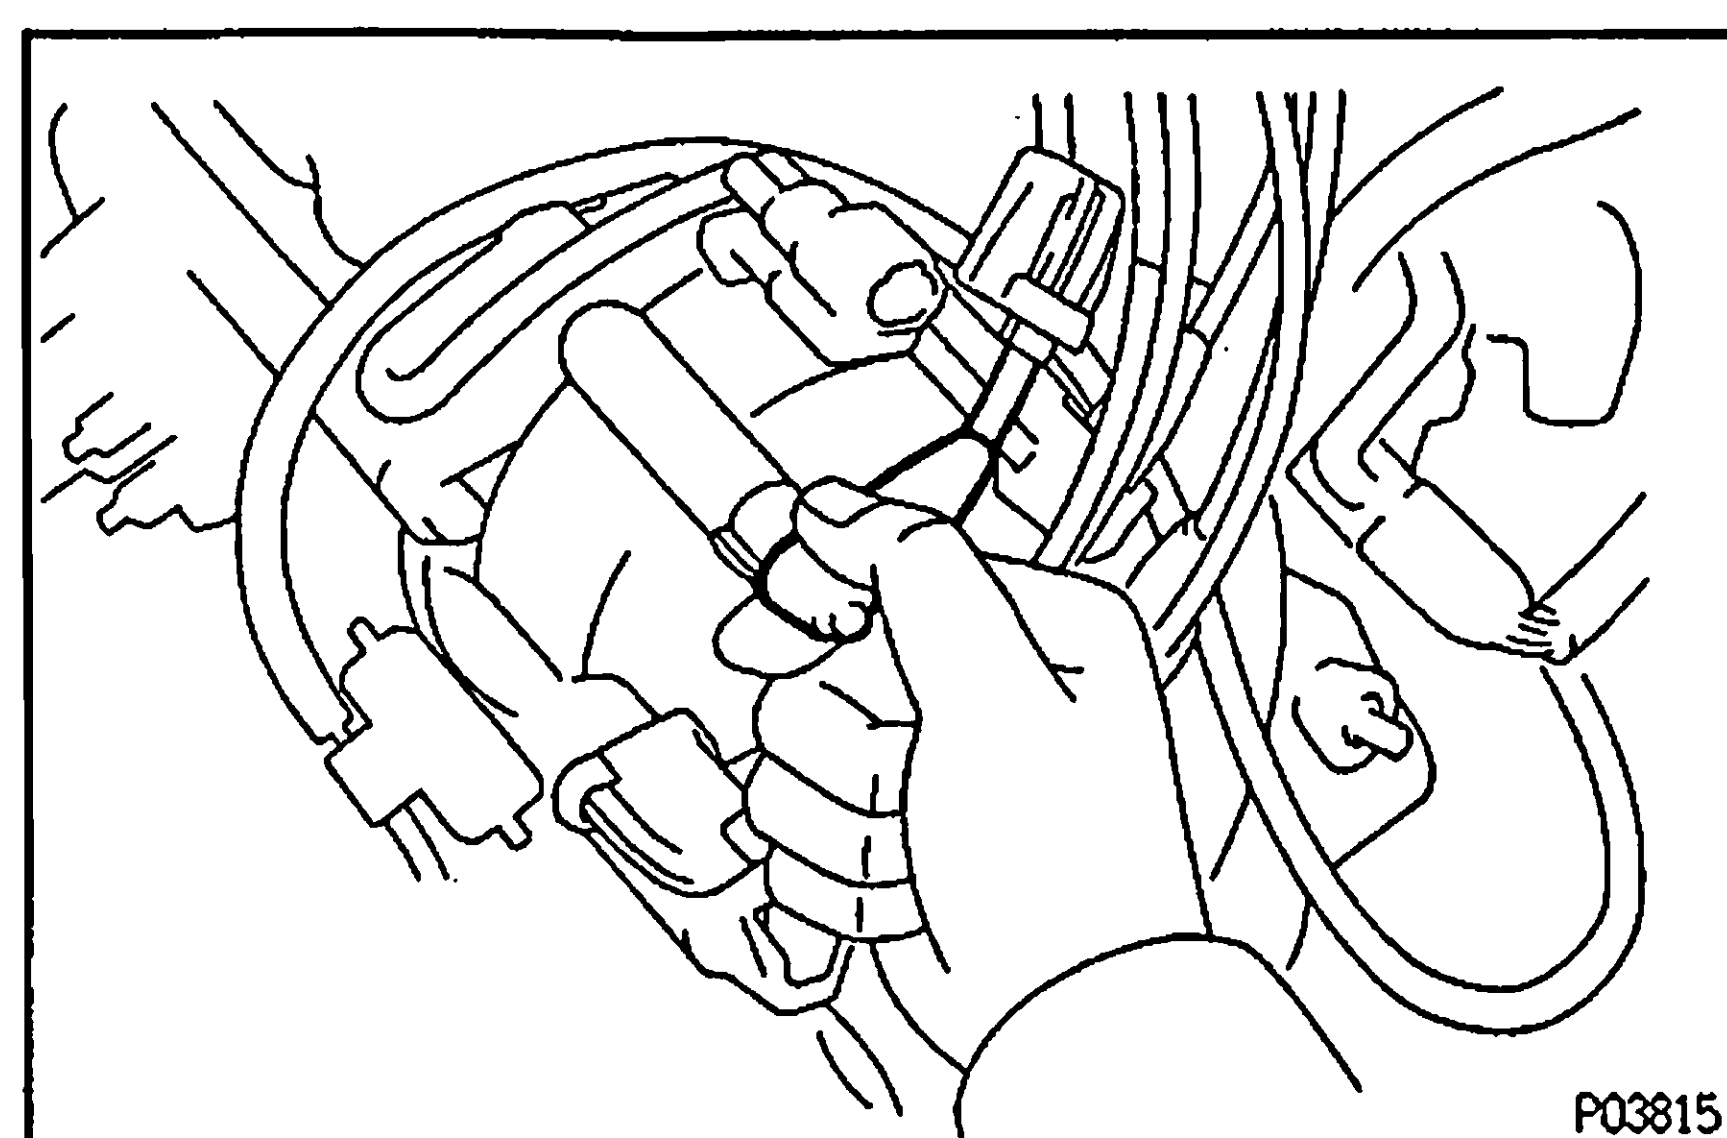


6. RECONNECT HIGH—TENSION CORDS TO DISTRIBUTOR CAP AND IGNITION COIL


- (a) Insert the grommet portion into the terminal hole of the distributor cap (ignition coil).

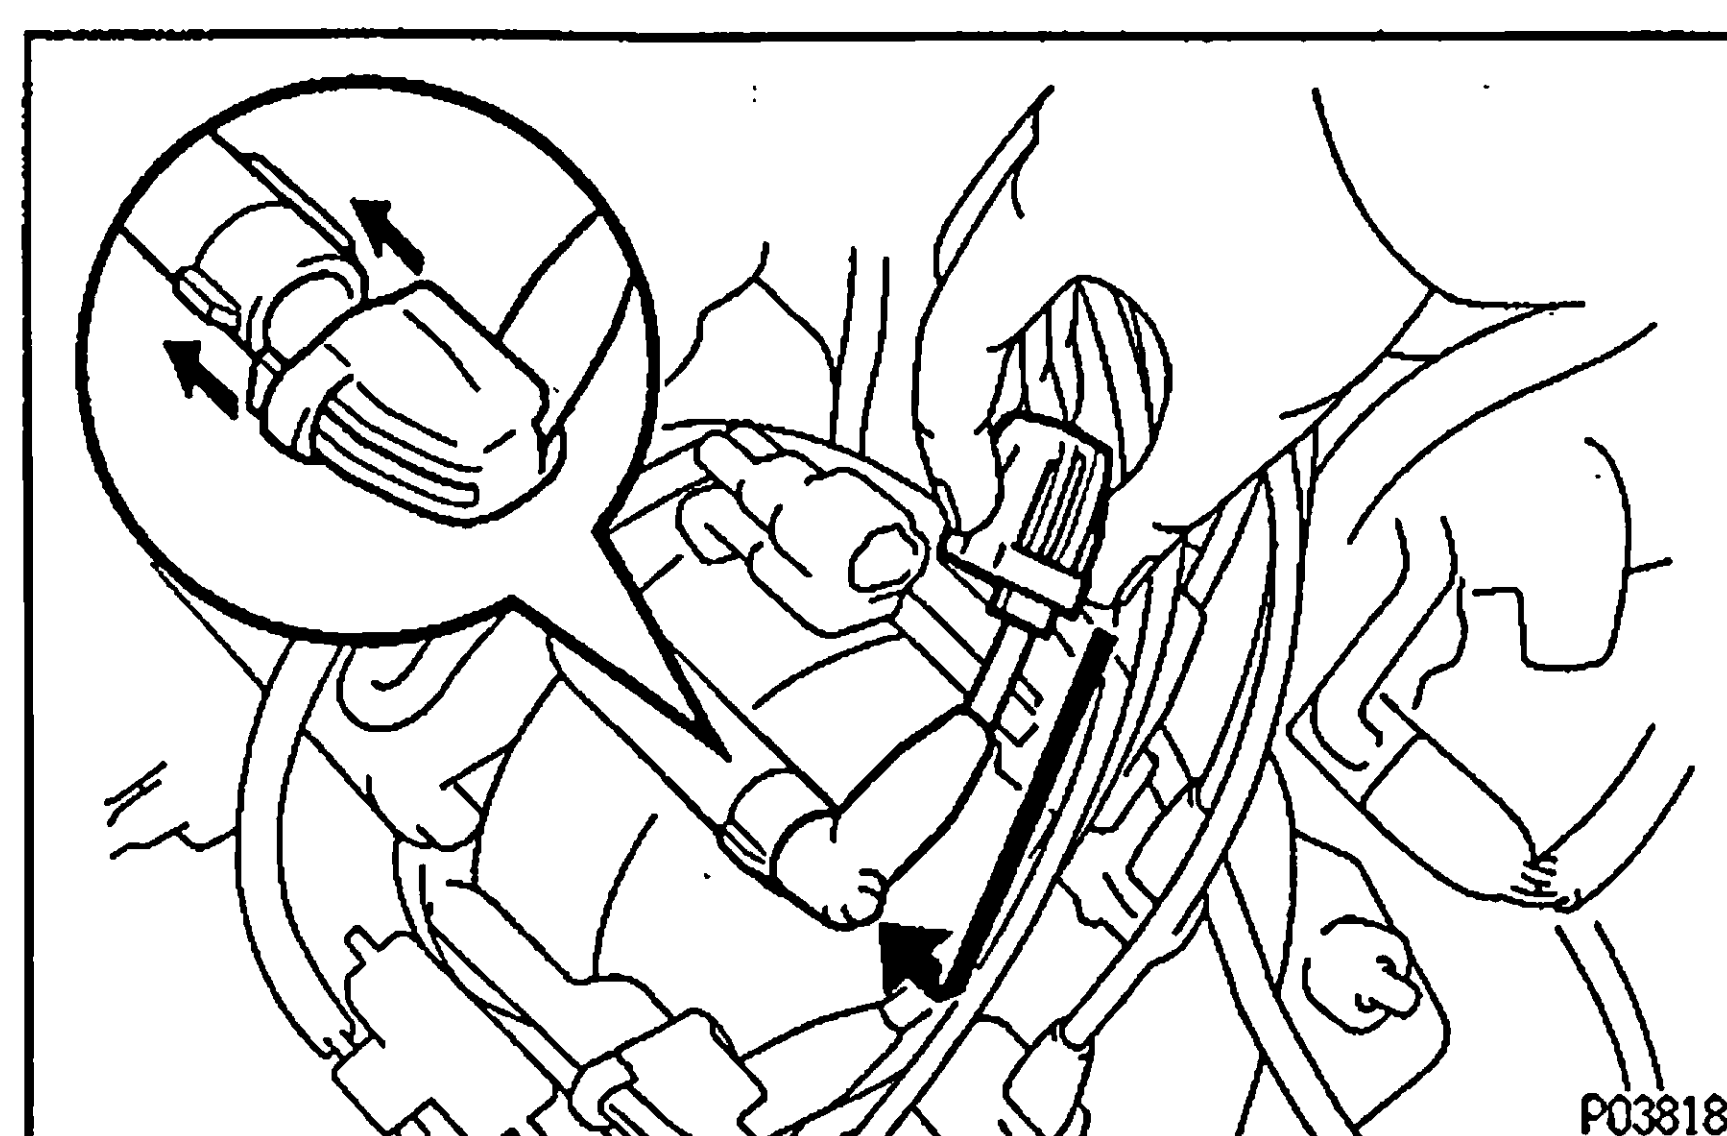

- (b) Align the spline of the distributor (ignition coil) with the spline of the holder, and slide on the holder.

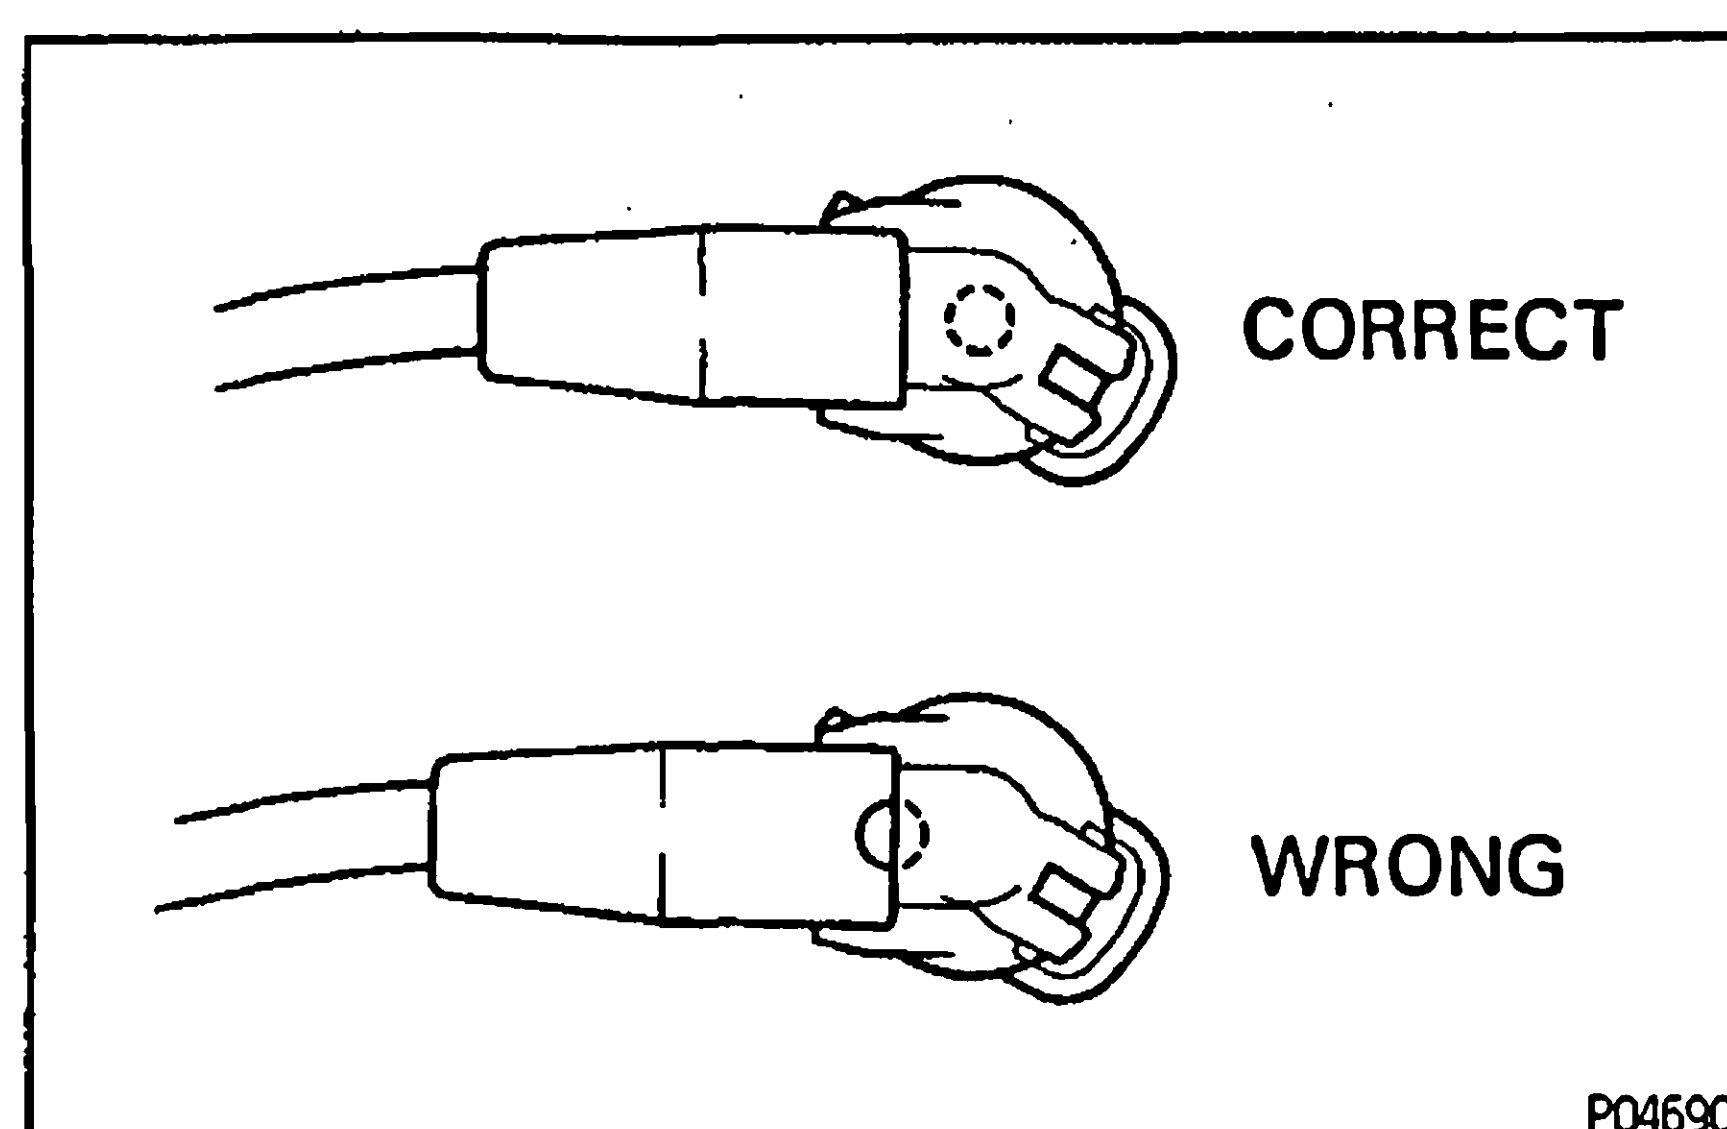

NOTICE: Check that the holder is correctly installed to the grommet and distributor cap as shown in the illustration.


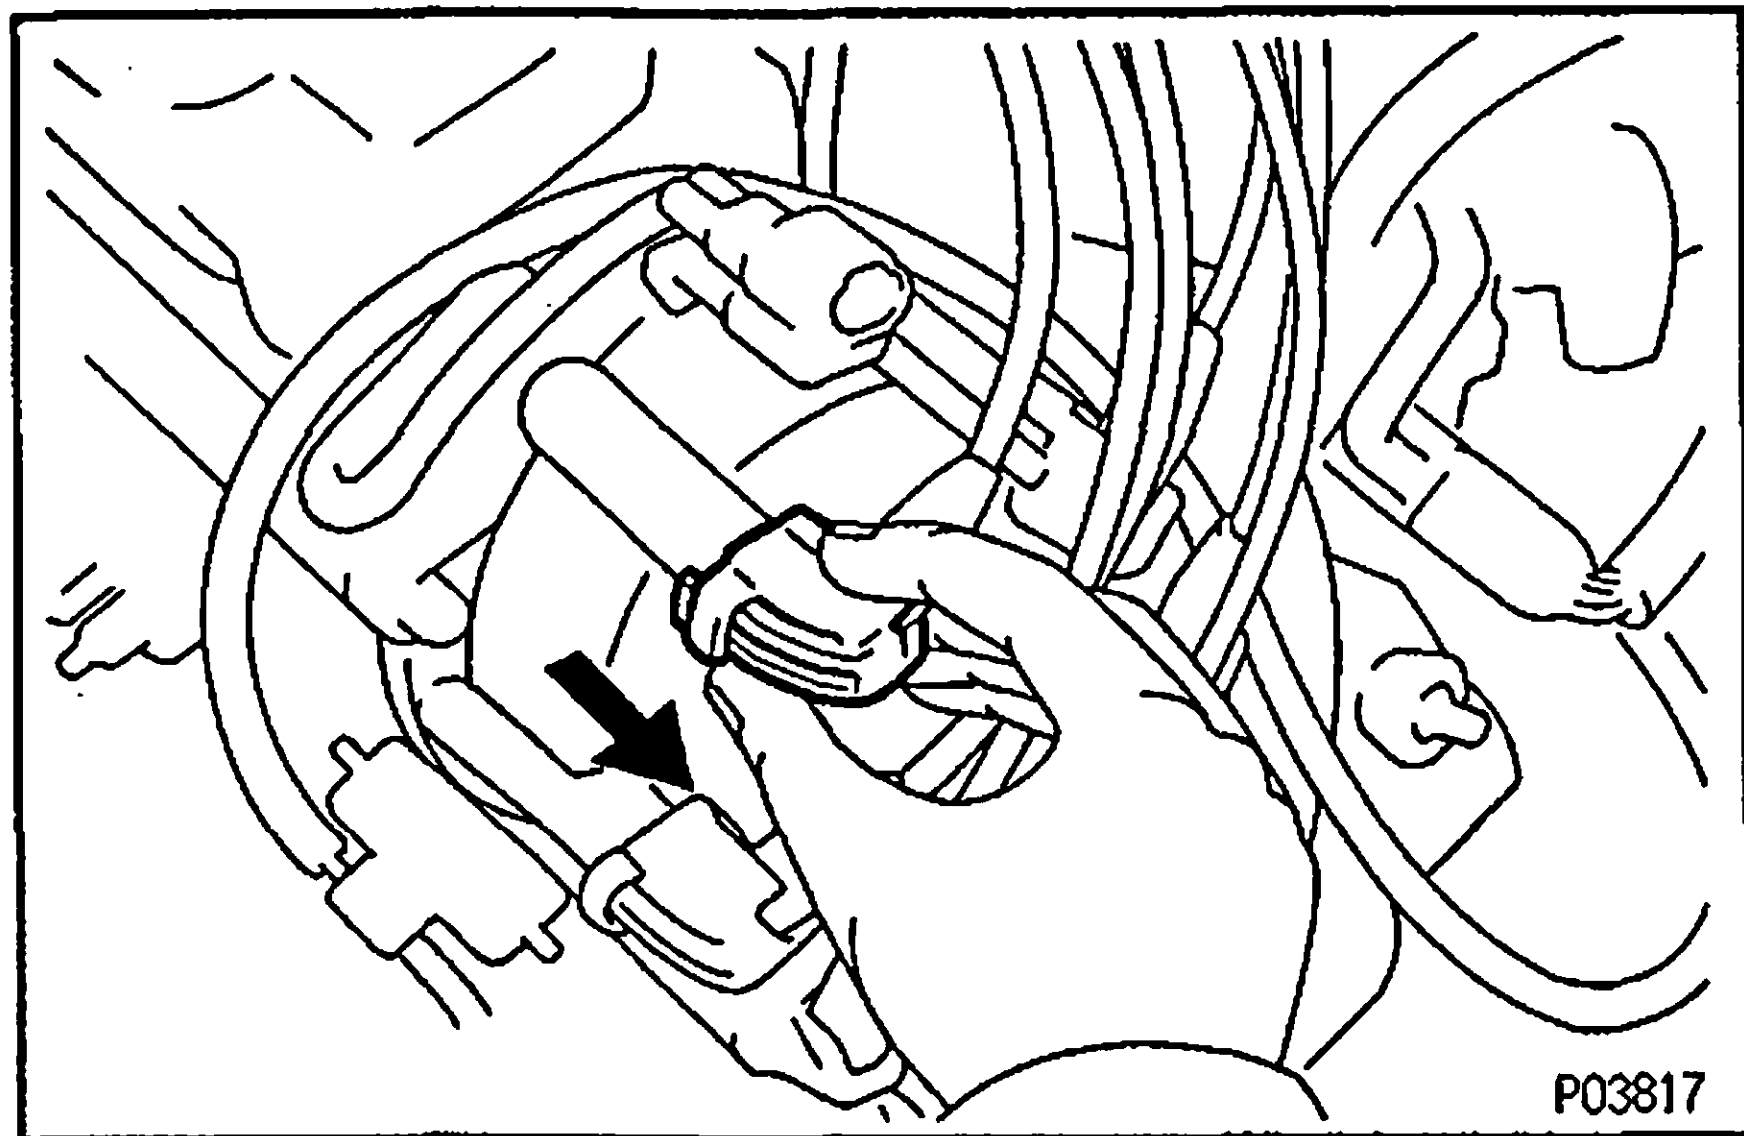


- (c) Check that the lock claw of the holder is engaged by lightly pulling the holder.
- (d) Insert the grommet and holder together.


IG

7. RECONNECT HIGH—TENSION CORDS TO SPARK PLUGS

- (a) Secure the high—tension cords with the clamps as shown in the illustration.

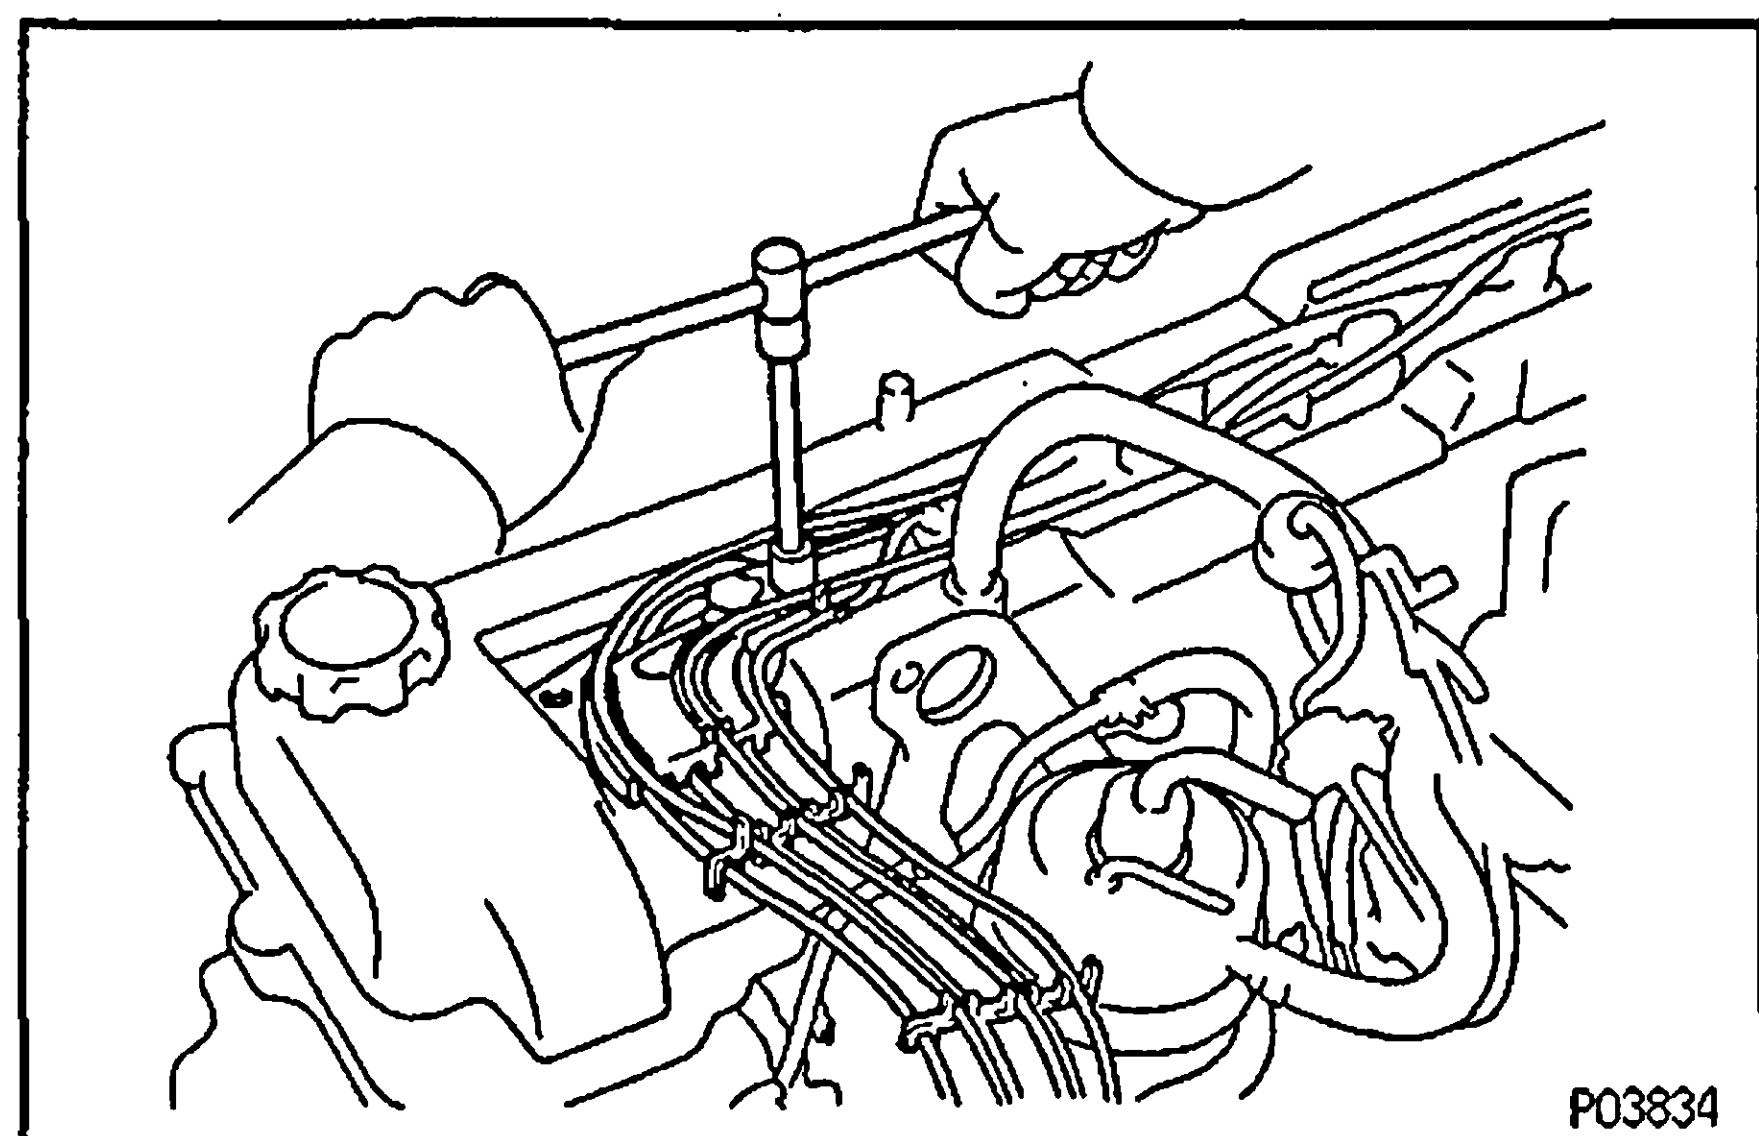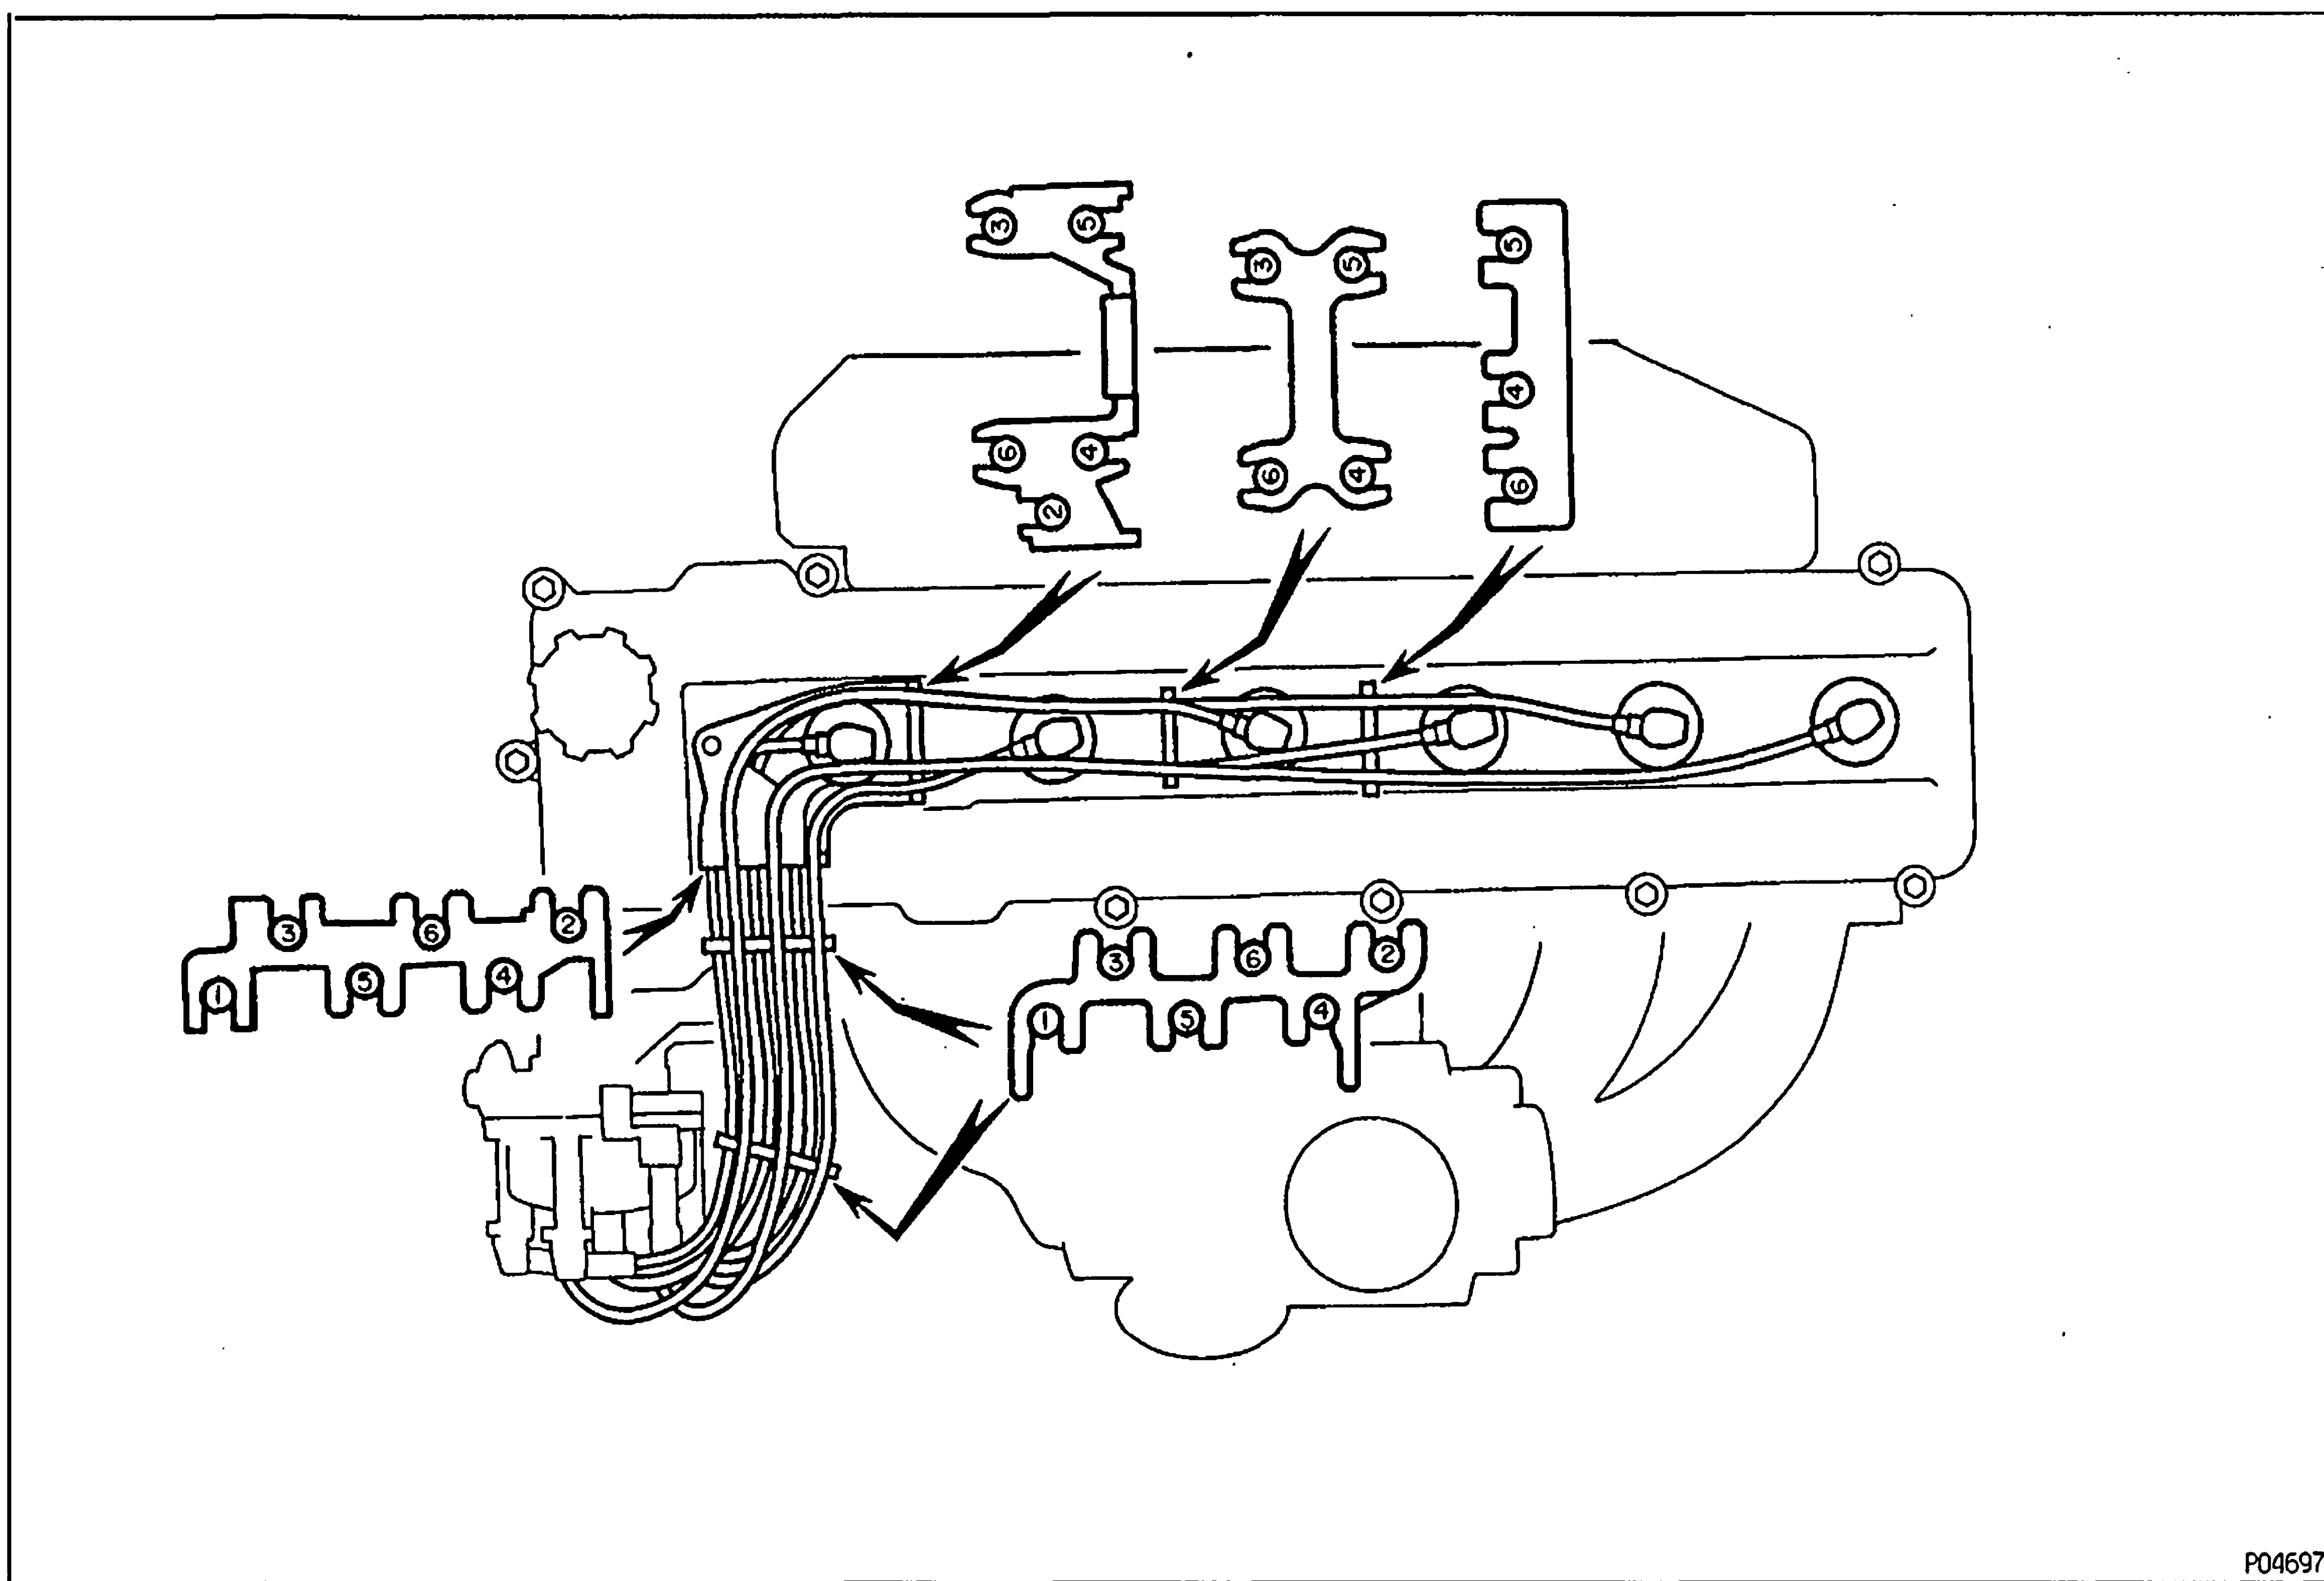


- (b) Install the No.1 cord clamp with the bolt.

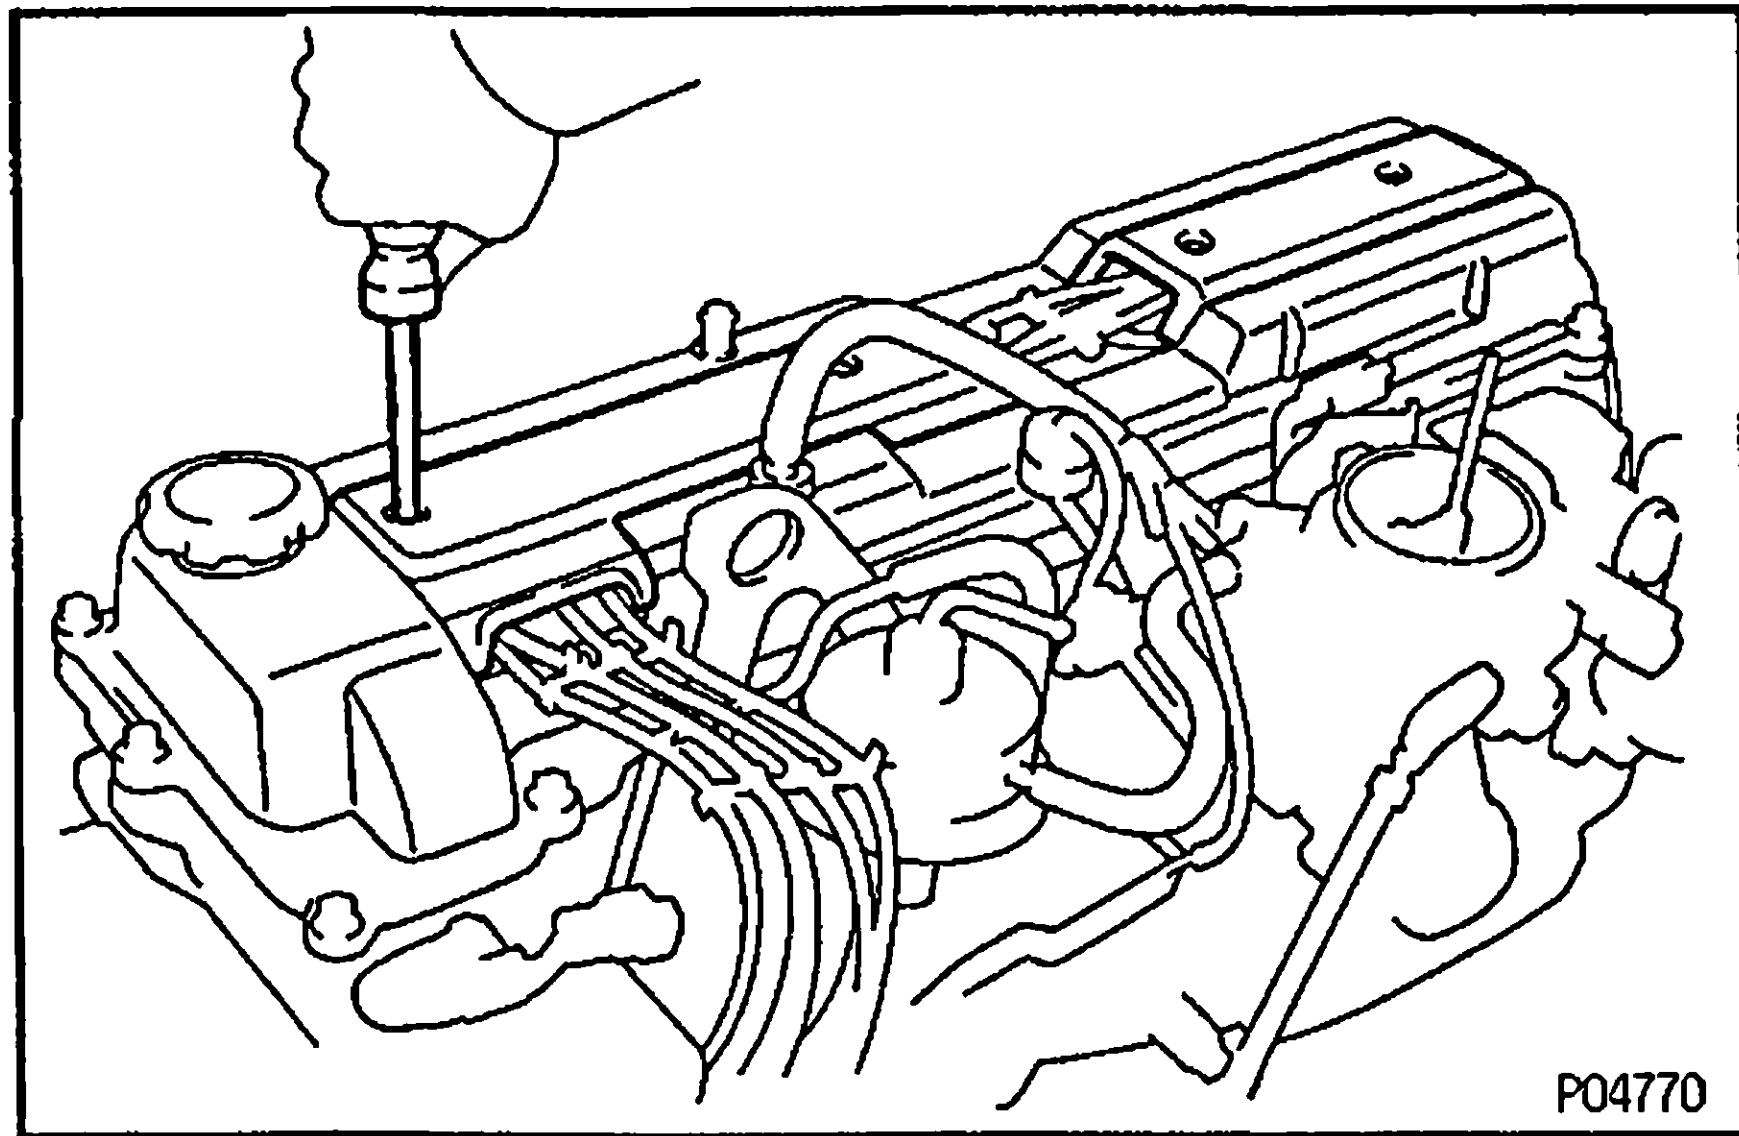

8. INSTALL NO. 2 AND NO. 3 CYLINDER HEAD COVERS

Install the head covers with the four bolts.

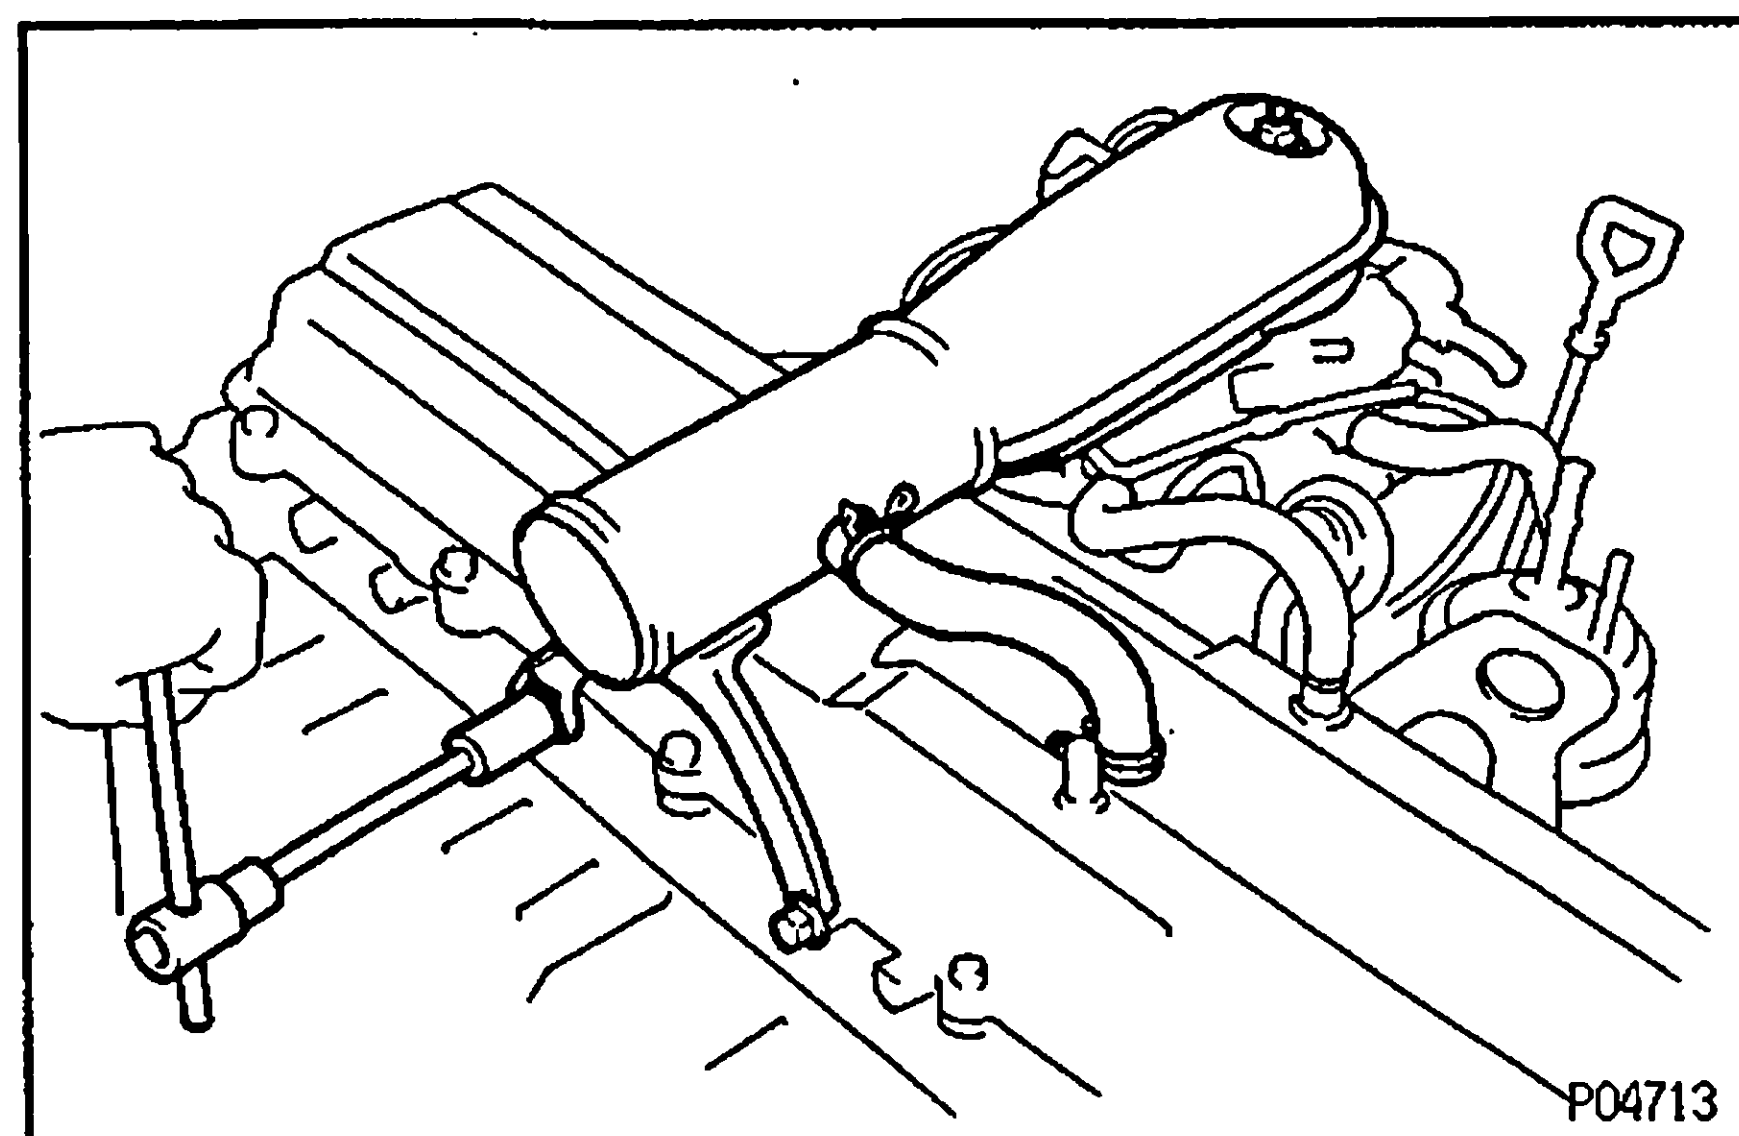

9. INSTALL INTAKE AIR CONNECTOR

- (a) Install the air connector with the two bolts and nut.

Bolt

Torque: 20 N·m (200 kgf·cm, 14 ft·lbf)

Nut

Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)



- (b) Connect the PCV hose.

IG03F-01

SPARK PLUGS INSPECTION

1. REMOVE NO. 2 AND NO. 3 CYLINDER HEAD COVERS

Remove the four bolts and head covers.

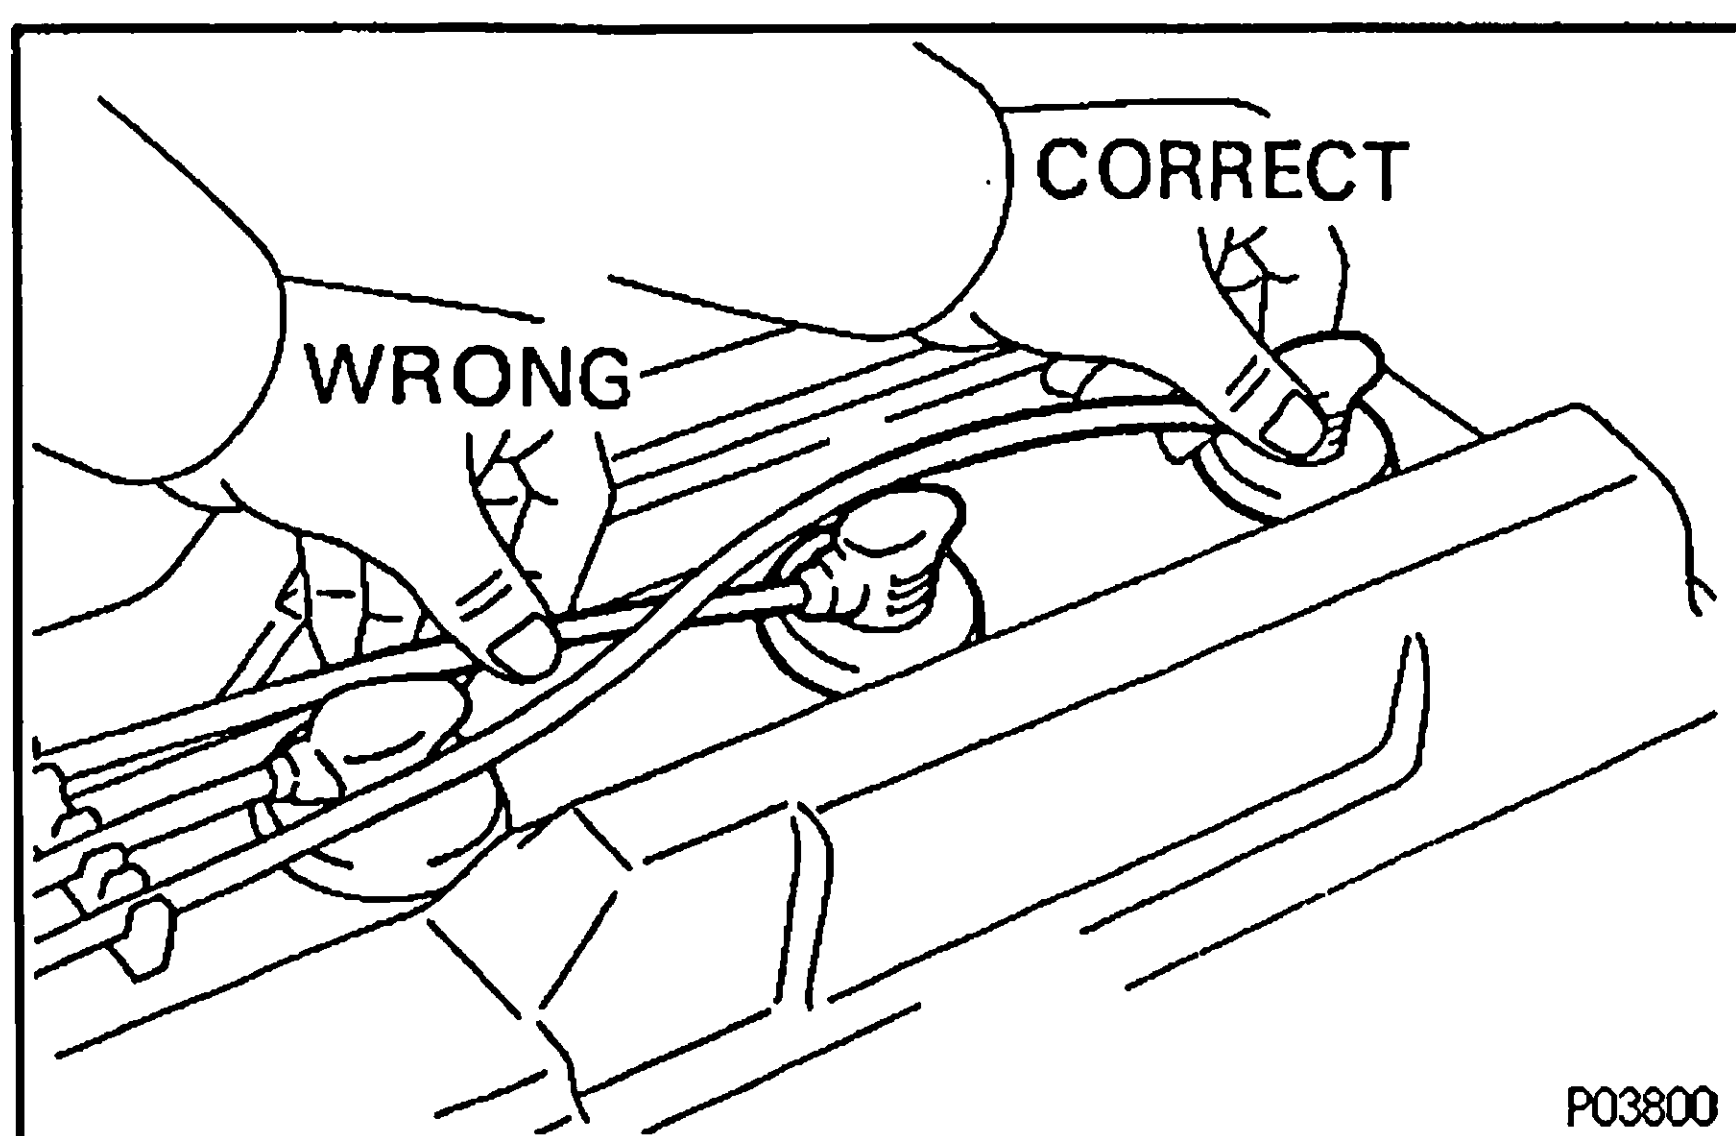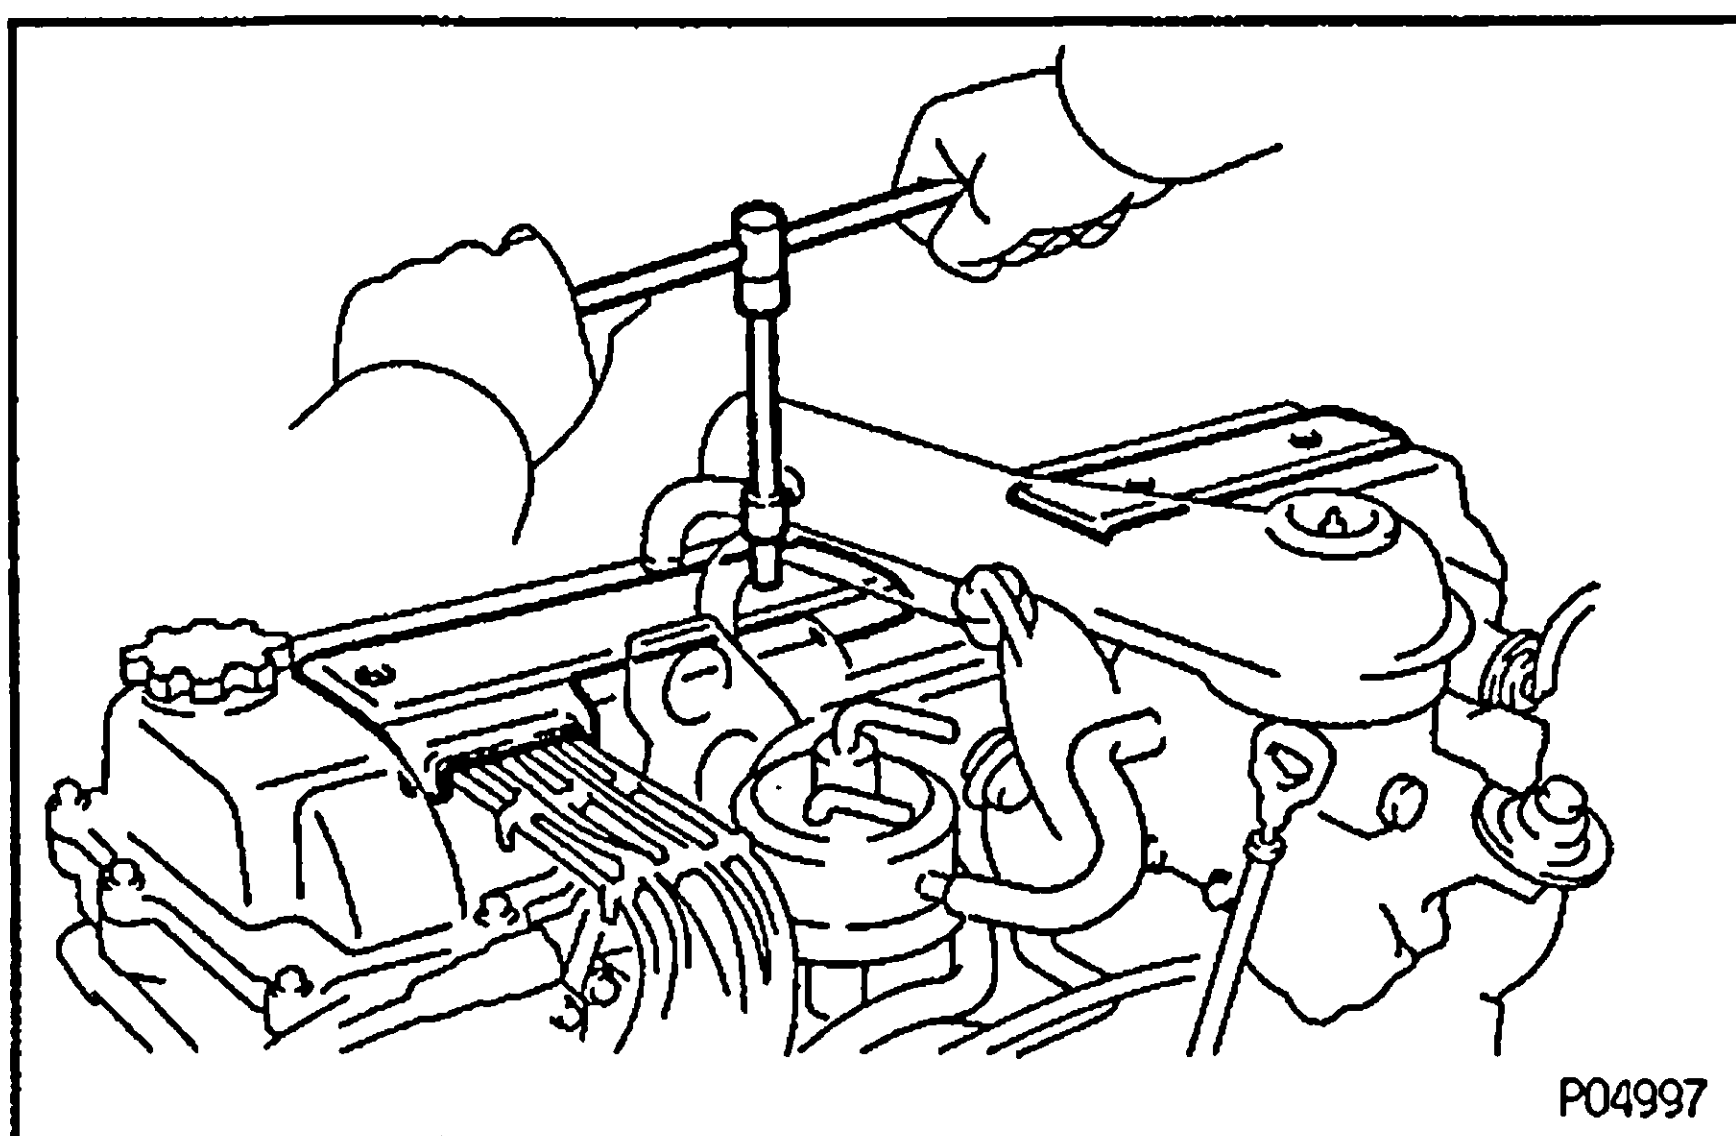


2. DISCONNECT HIGH — TENSION CORDS FROM SPARK PLUGS

Disconnect the high — tension cords at the rubber boot.

DO NOT pull on the cords.


NOTICE: Pulling on or bending the cords may damage the conductor inside.

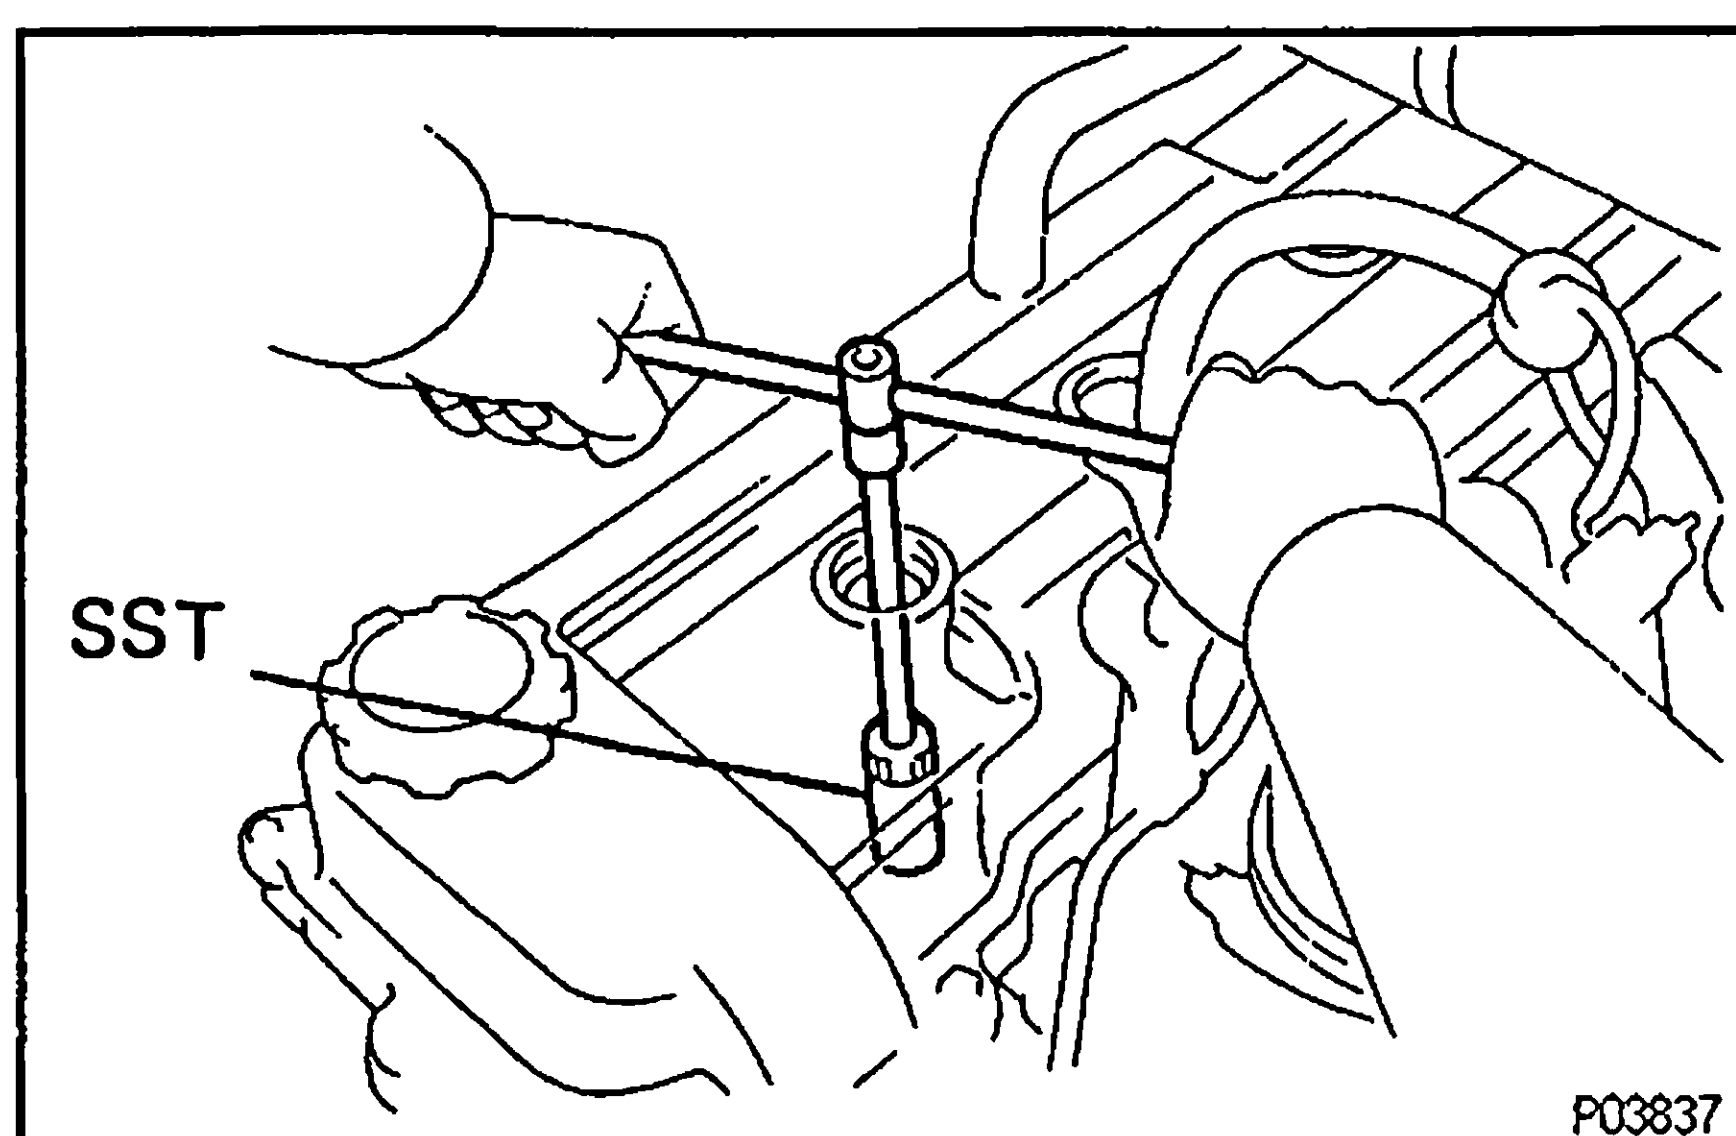

3. REMOVE SPARK PLUGS


Using SST, remove the spark plug.

SST 09155—16100

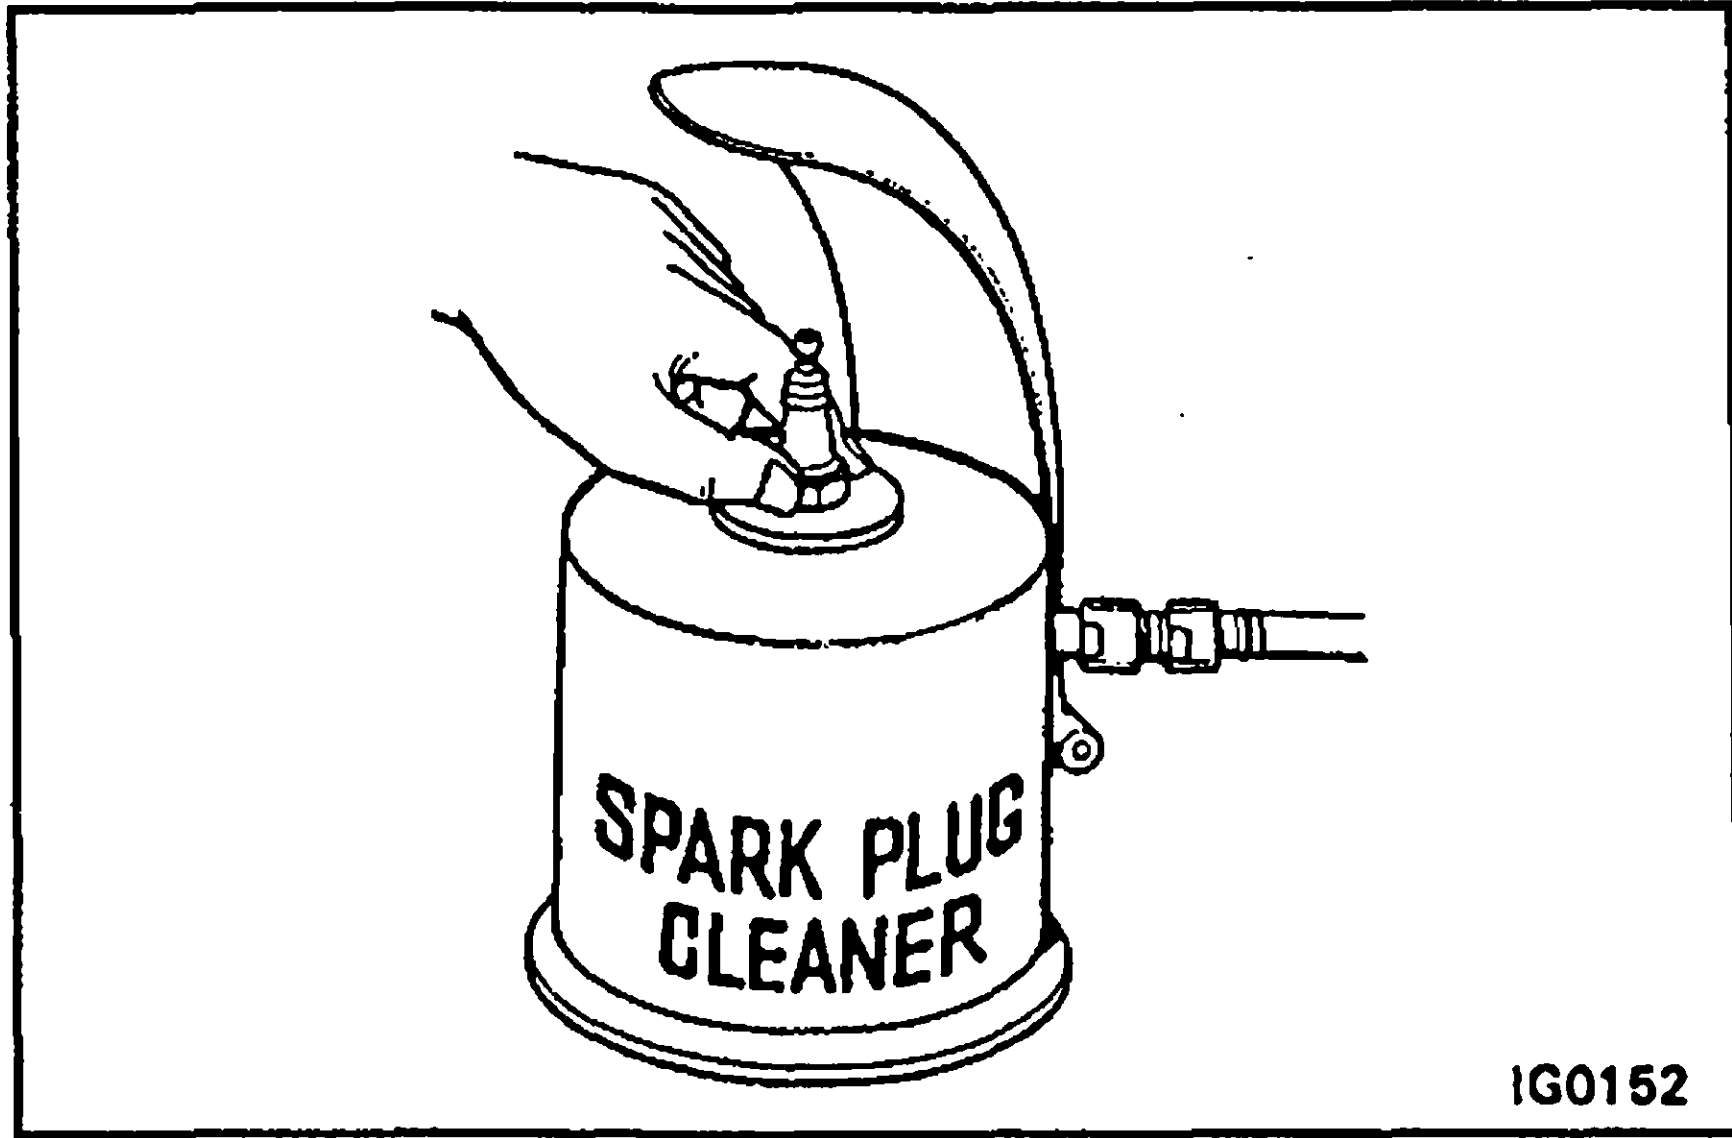

4. CLEAN SPARK PLUGS

Using a spark plug cleaner or wire brush, clean the spark plug.

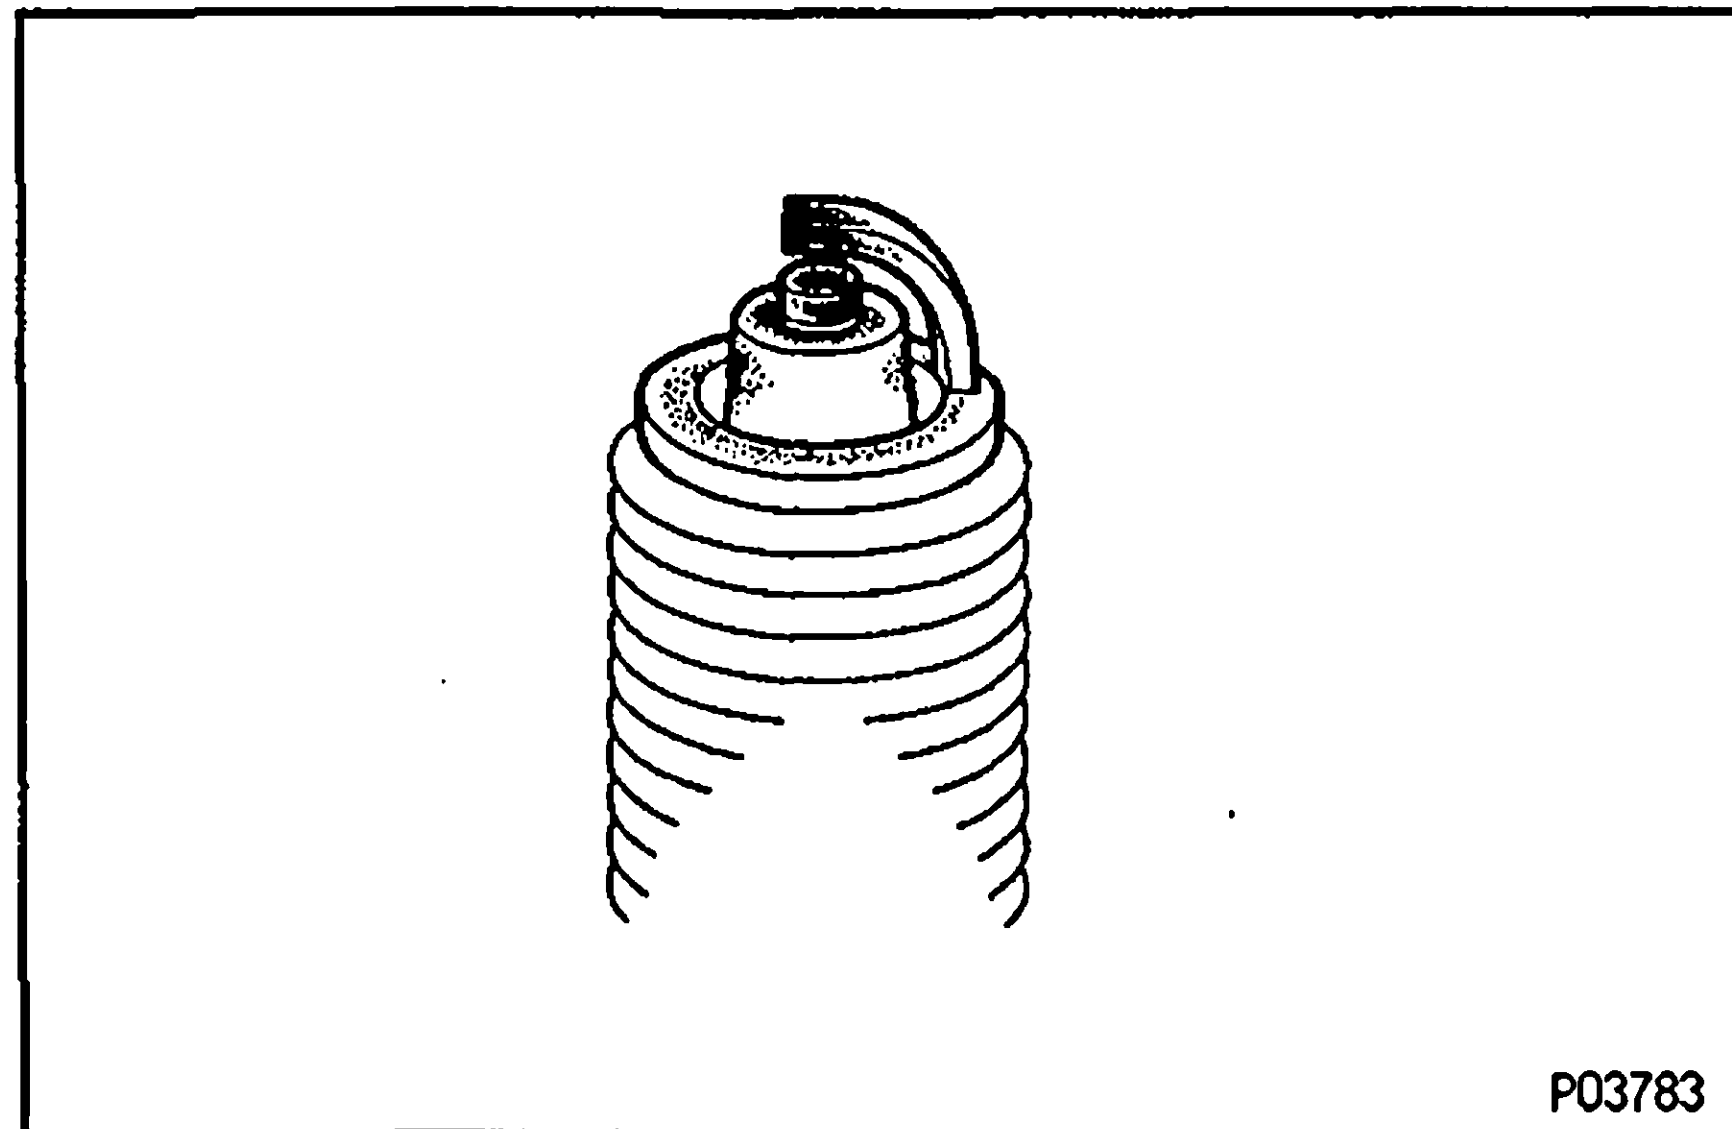

5. VISUALLY INSPECT SPARK PLUGS


Check the spark plug for electrode wear, threads damage and insulator damage.

If abnormal, replace the plugs.

Recommended spark plugs:

ND K16R—U

NGK BKR5EYA

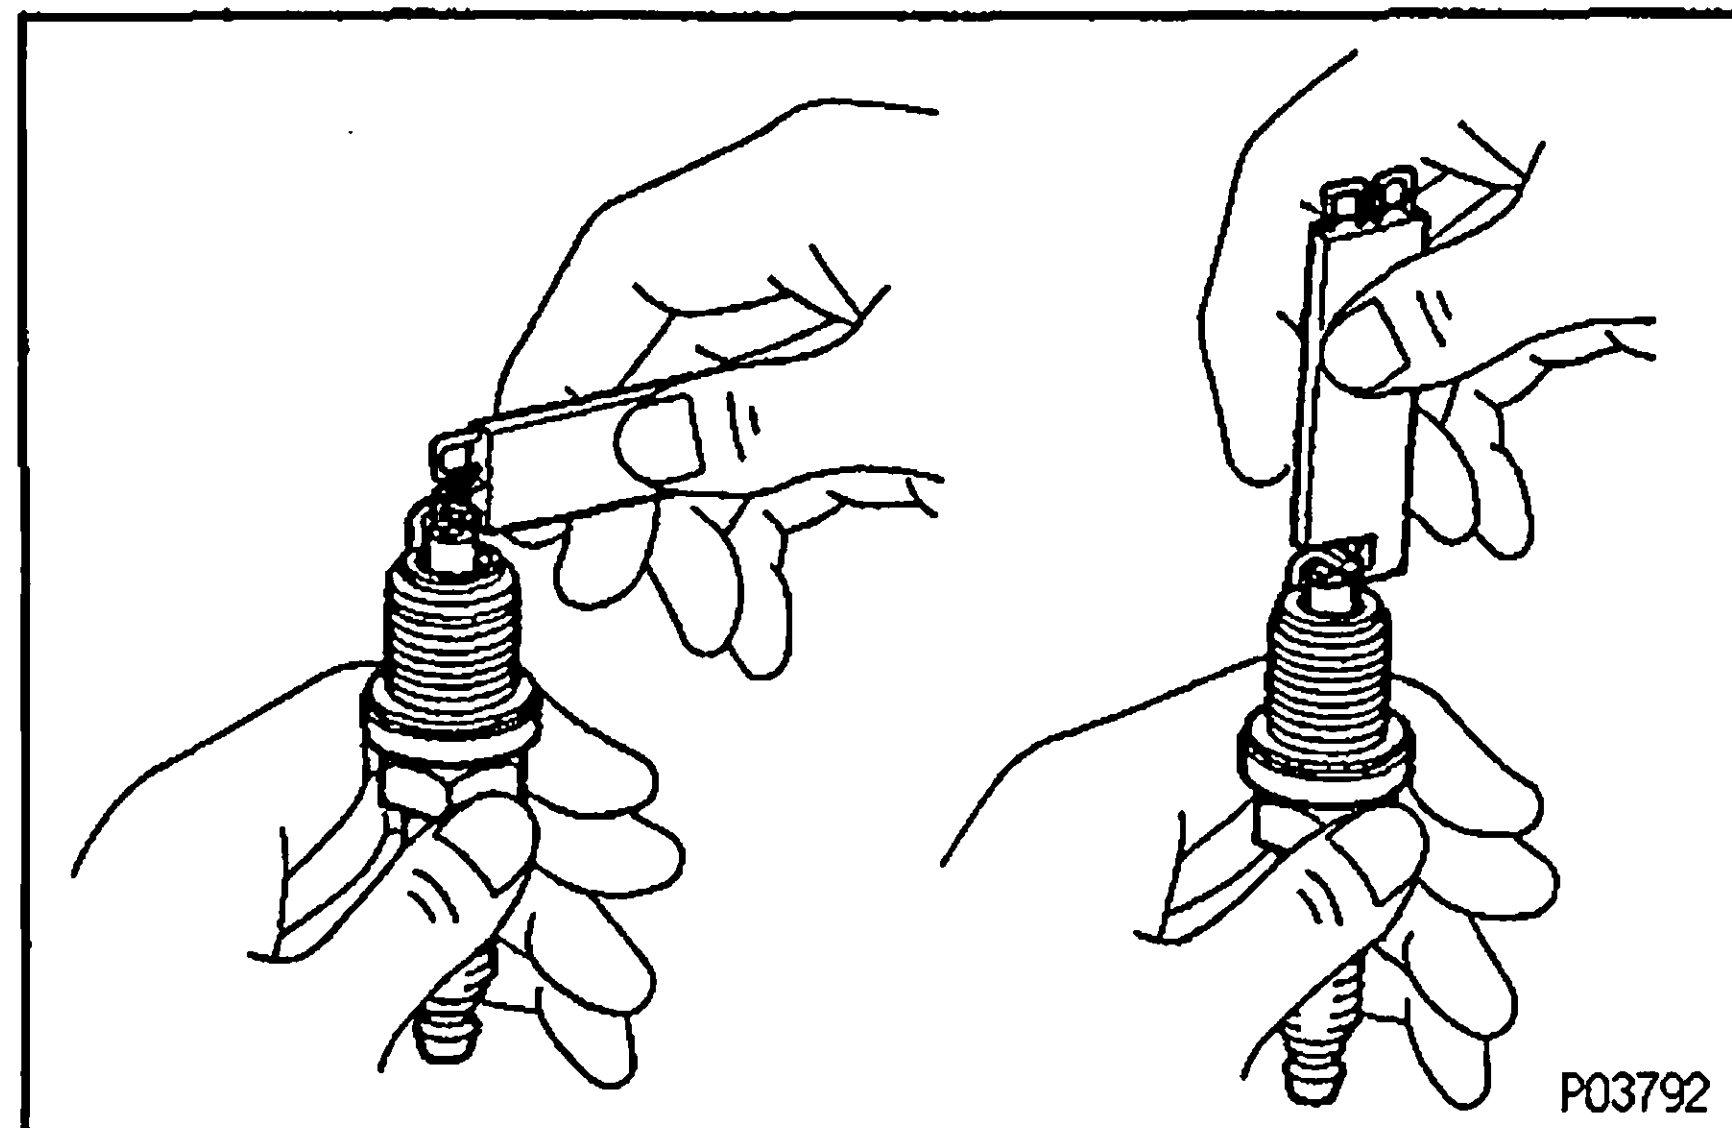


6. ADJUST ELECTRODE GAP

Carefully bend the outer electrode to obtain the correct electrode gap.

Correct electrode gap:

0.8 mm (0.031 in.)

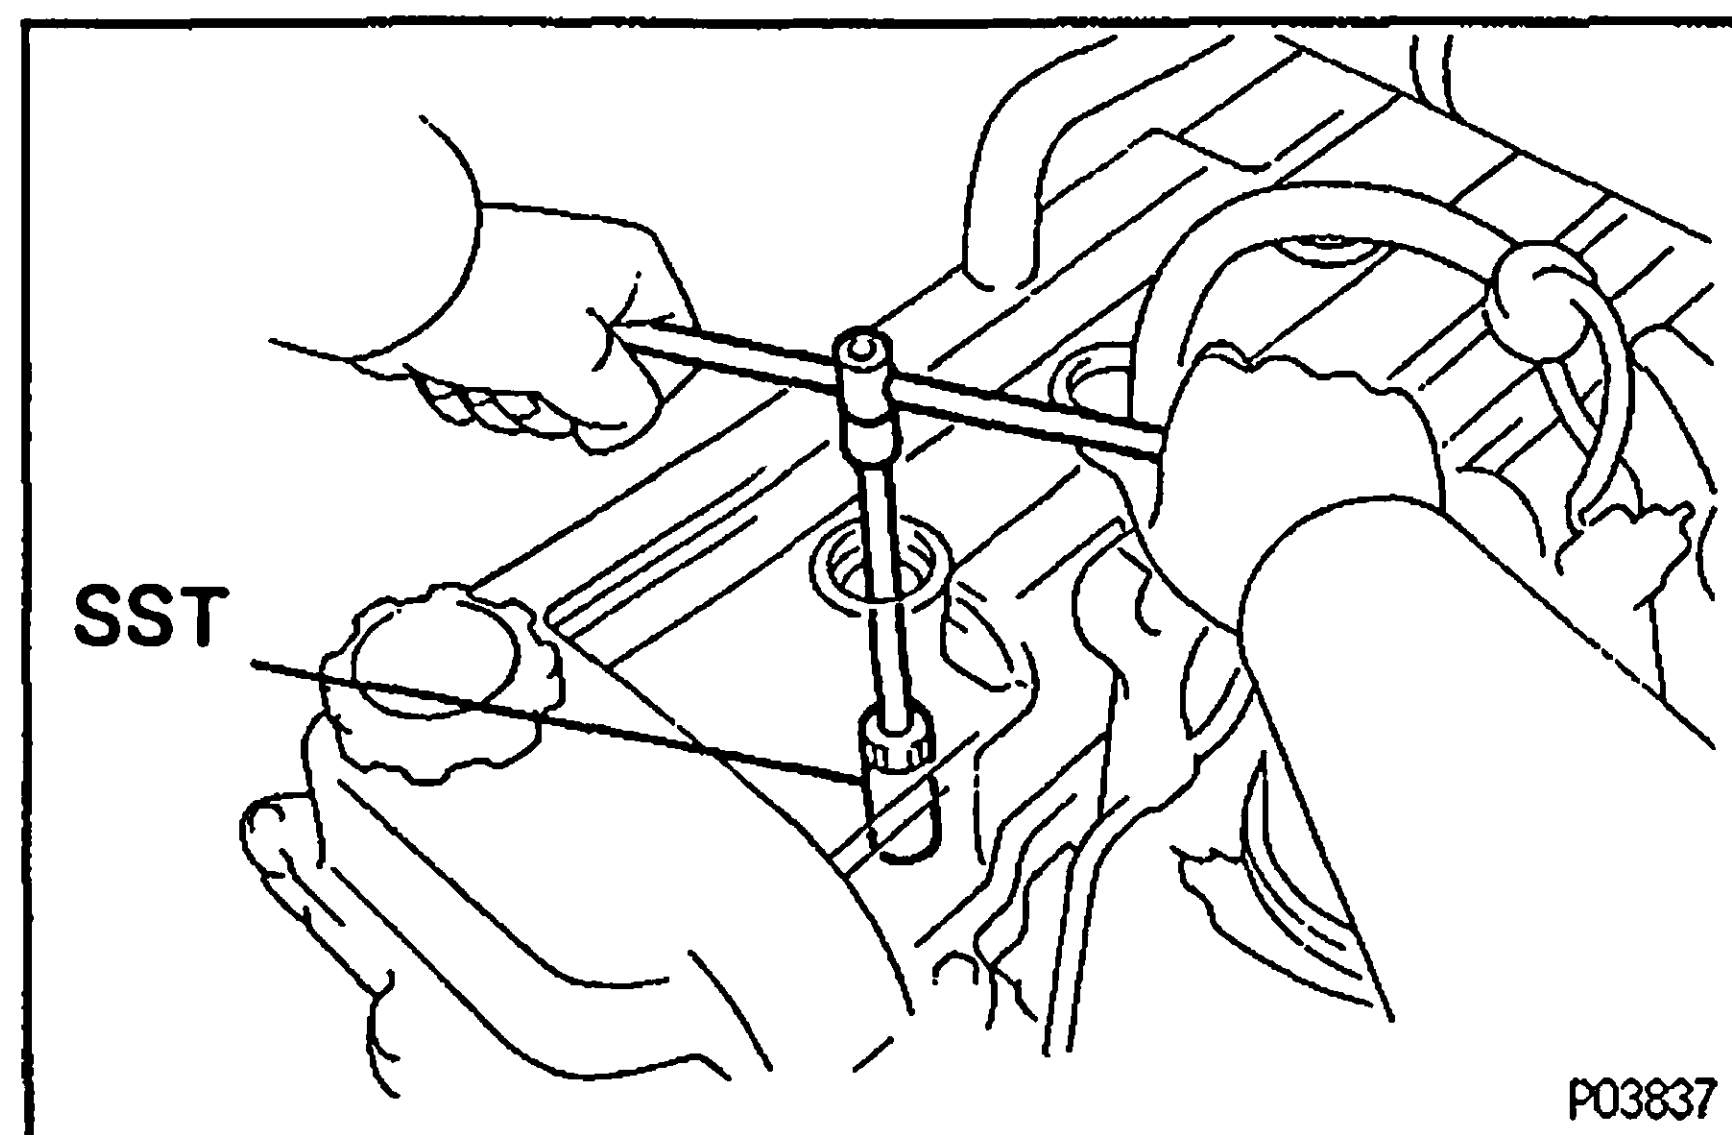


7. INSTALL SPARK PLUGS

Using SST, install the spark plug.

SST 09155—16010

Torque: 20 N·m (200 kgf·cm, 14 ft·lbf)

8. RECONNECT HIGH—TENSION CORDS TO SPARK PLUGS

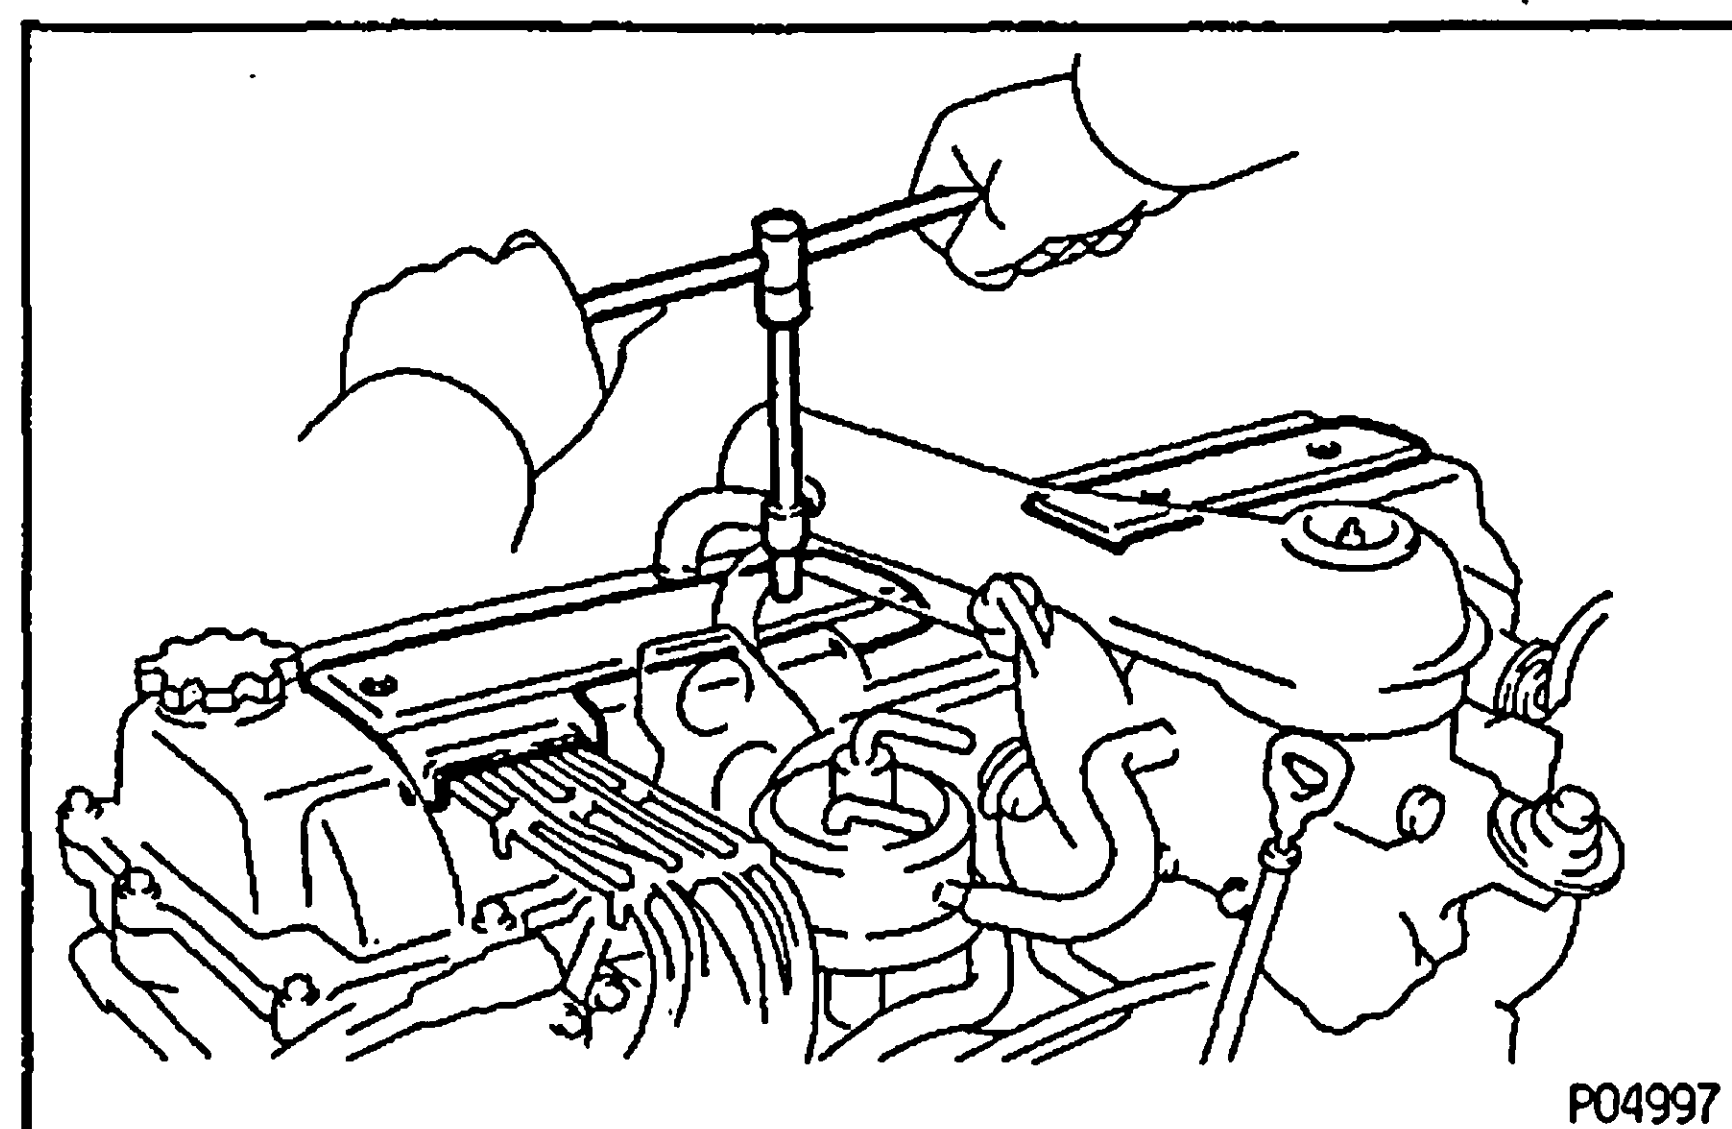

9. INSTALL NO. 2 AND NO. 3 CYLINDER HEAD COVERS

Install the head covers with the four bolts.

IGNITION COIL INSPECTION

NOTICE: "Cold" and "Hot" in the following sentences express the temperature of the coils themselves. "Cold" is from -10°C (14°F) to 50°C (104°F) and "Hot" is from 50°C (104°F) to 100°C (212°F).

1. **DISCONNECT IGNITION COIL CONNECTOR**
2. **DISCONNECT HIGH—TENSION CORD**

3. INSPECT PRIMARY COIL RESISTANCE

Using an ohmmeter, measure the resistance between the positive (+) and negative (–) terminals.


Primary coil resistance (Cold):

$0.36 - 0.55\ \Omega$

Primary coil resistance (Hot):

$0.45 - 0.65\ \Omega$

If the resistance is not as specified, replace the ignition coil.

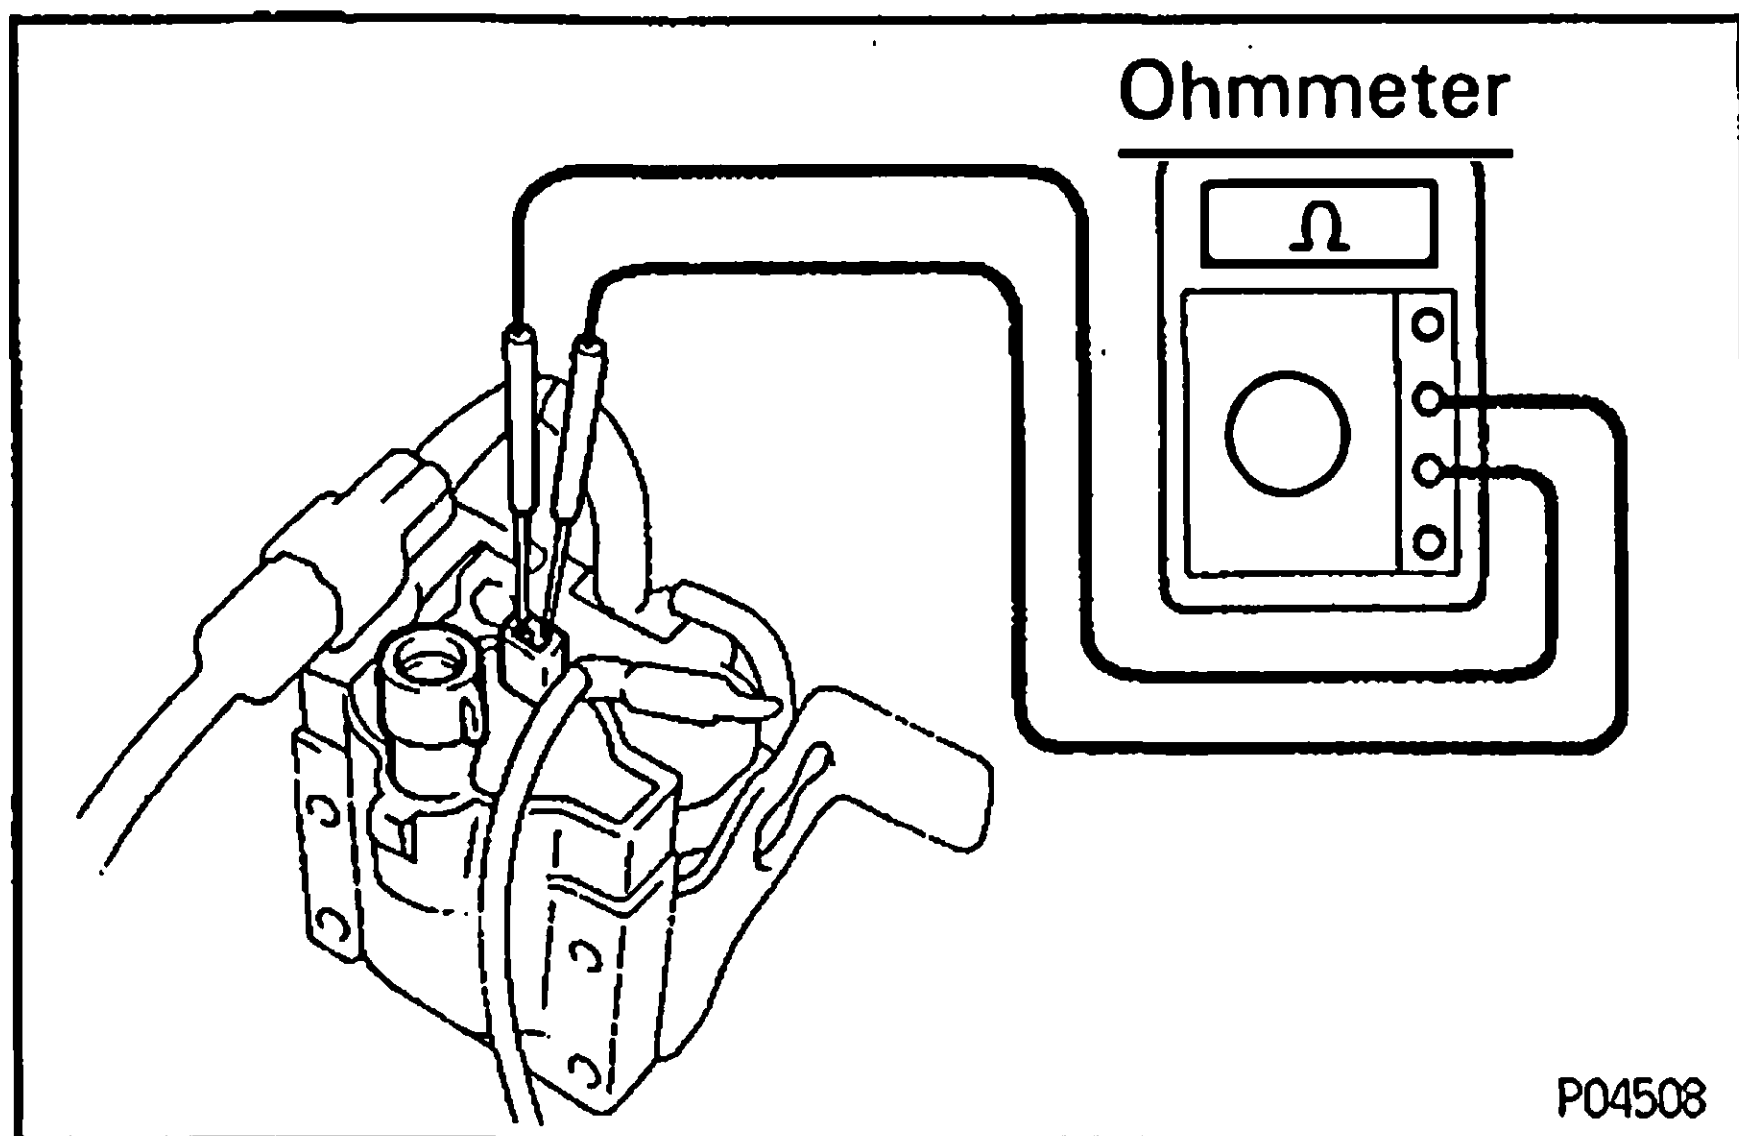

4. INSPECT SECONDARY COIL RESISTANCE

Using an ohmmeter, measure the resistance between the positive (+) and high—tension terminals.


Secondary coil resistance (Cold):

$9.0 - 15.4\ \text{k}\Omega$

Secondary coil resistance (Hot):

$11.4 - 18.1\ \text{k}\Omega$

If the resistance is not as specified, replace the ignition coil.

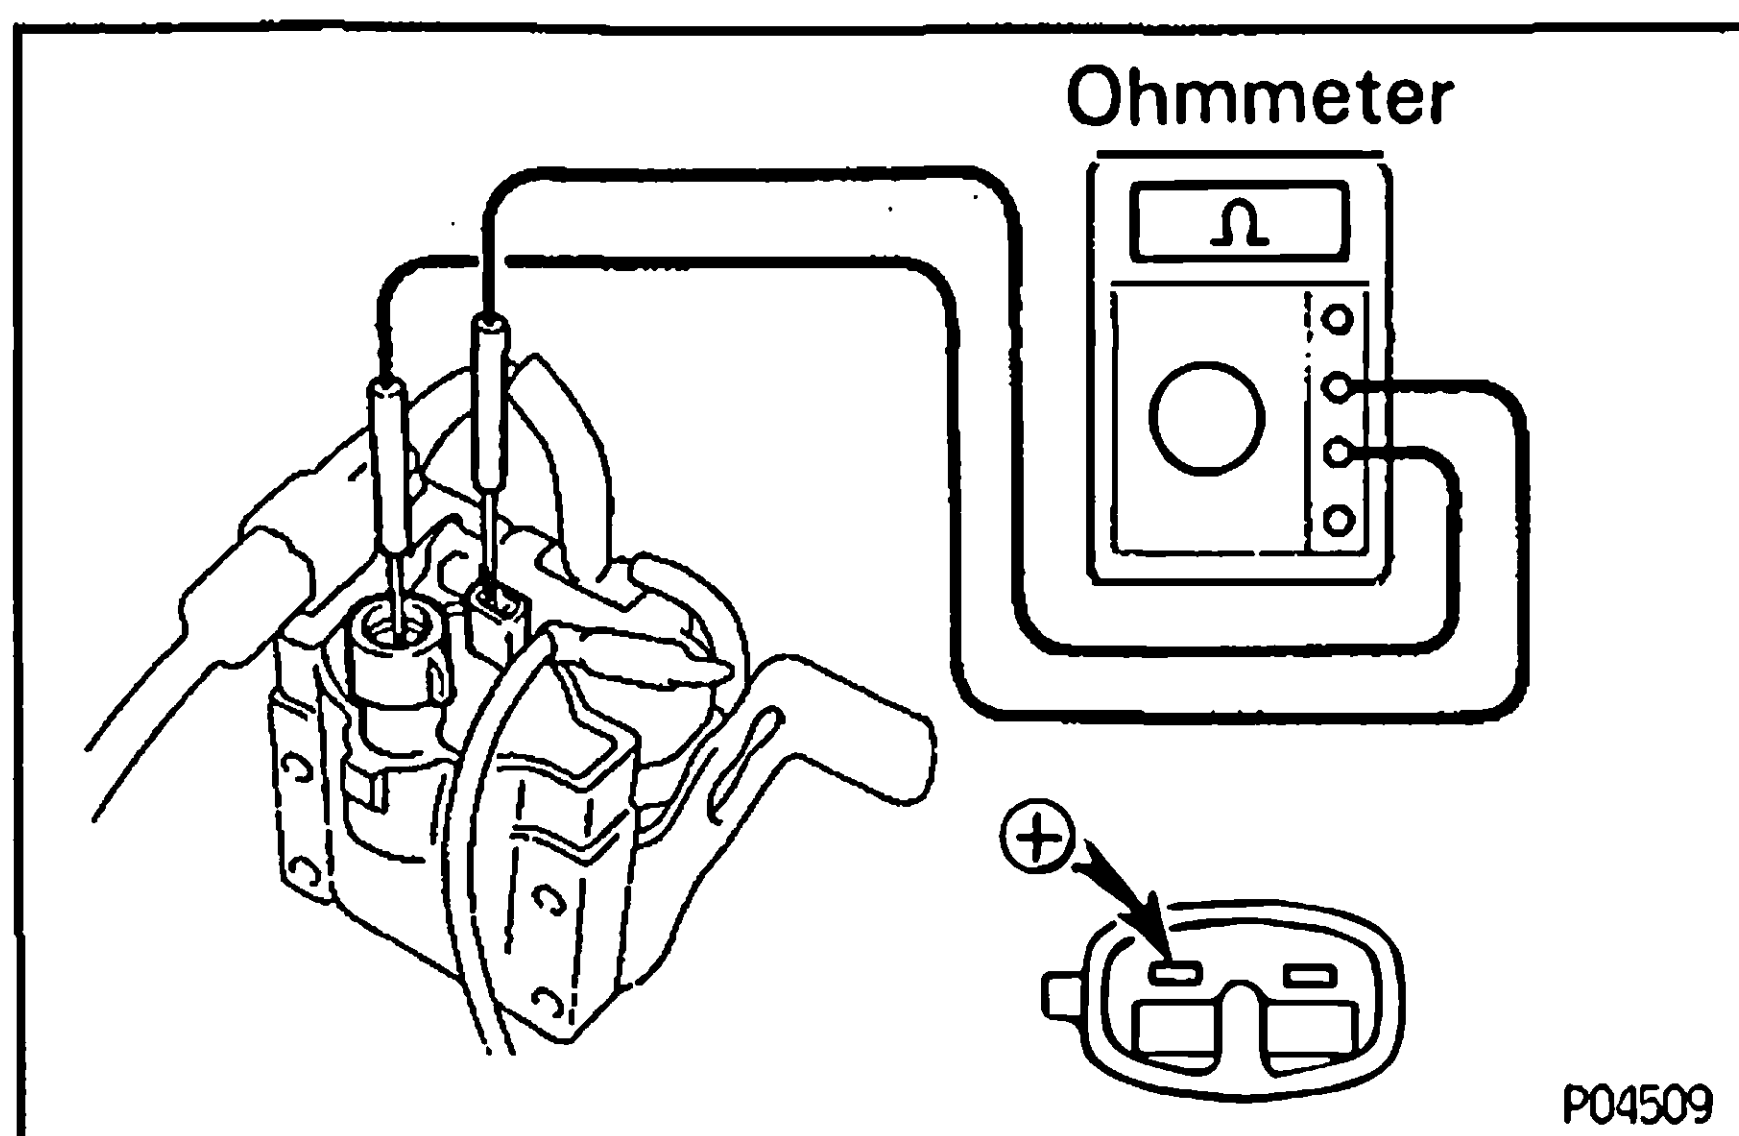


5. **RECONNECT HIGH—TENSION CORD**
6. **RECONNECT IGNITION COIL CONNECTOR**


DISTRIBUTOR INSPECTION

NOTICE: "Cold" and "Hot" in the following sentences express the temperature of the coils themselves. "Cold" is from -10°C (14°F) to 50°C (104°F) and "Hot" is from 50°C (104°F) to 100°C (212°F).


IG

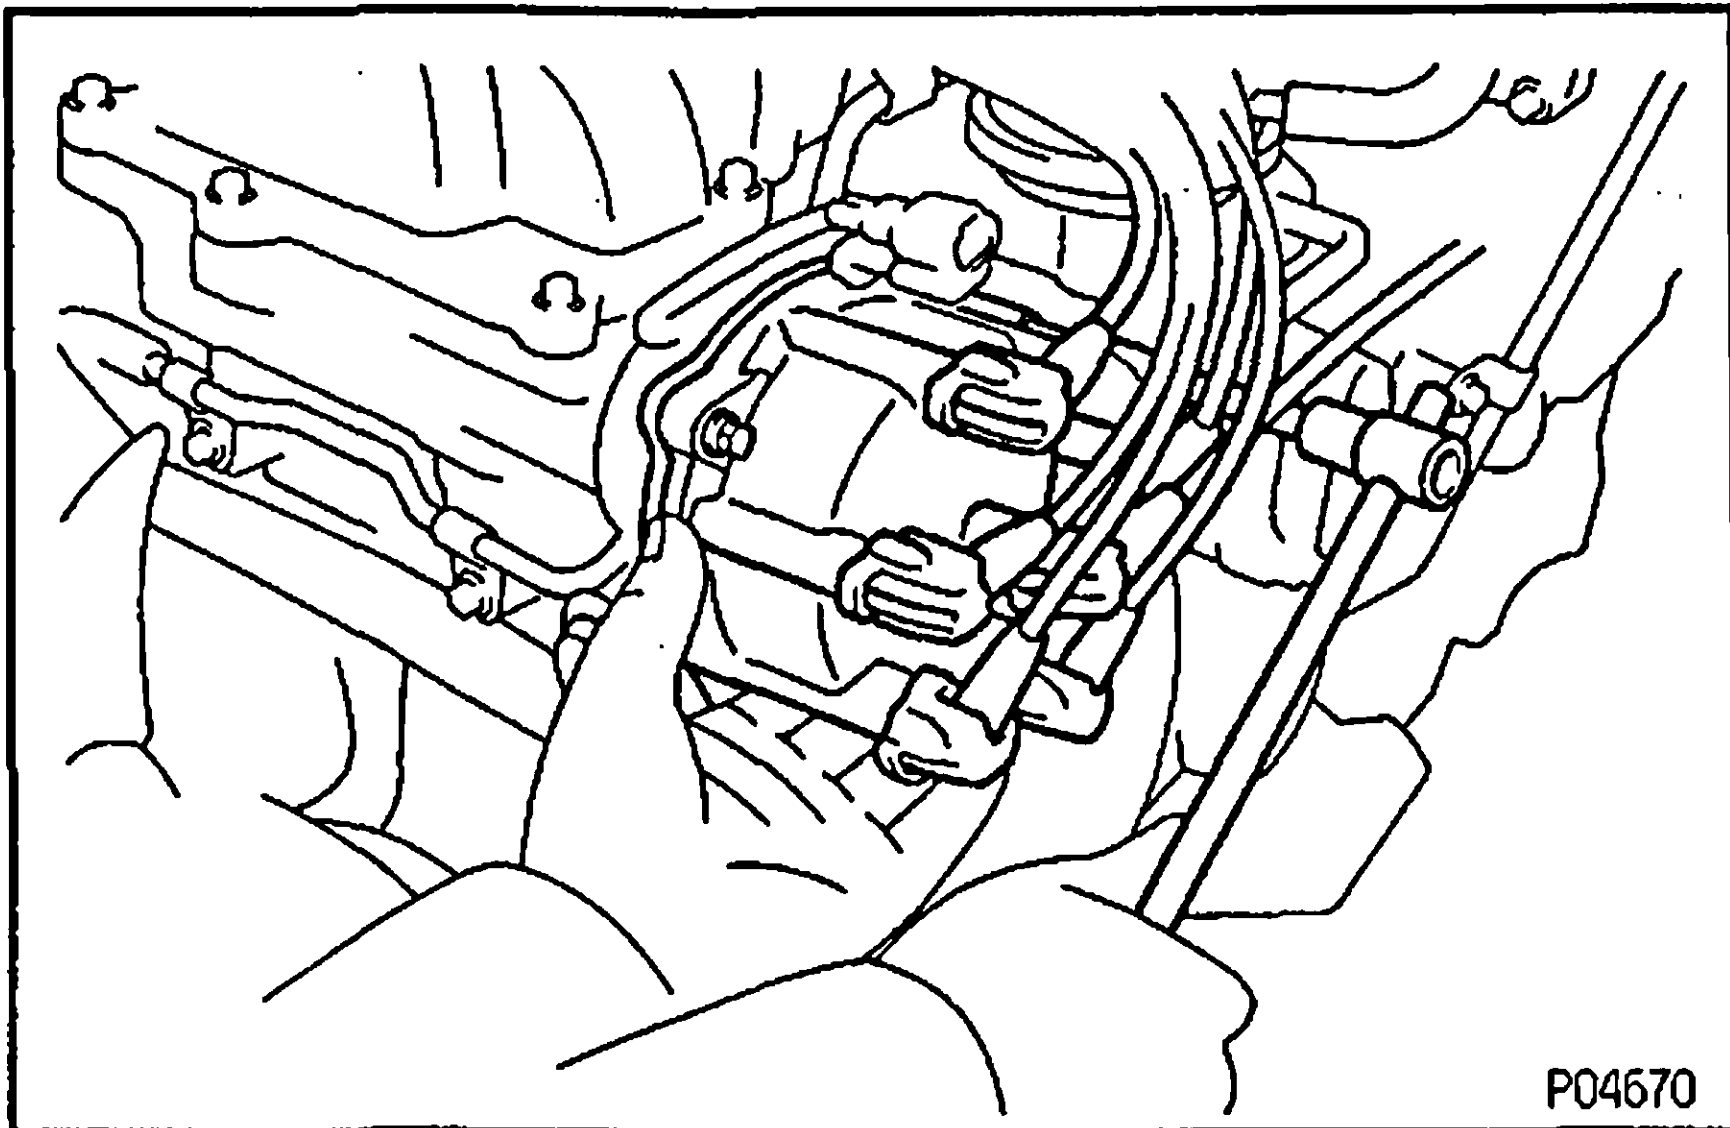

1. **DISCONNECT DISTRIBUTOR CONNECTOR**
2. **REMOVE DISTRIBUTOR CAP WITHOUT DISCONNECTING HIGH—TENSION CORDS**

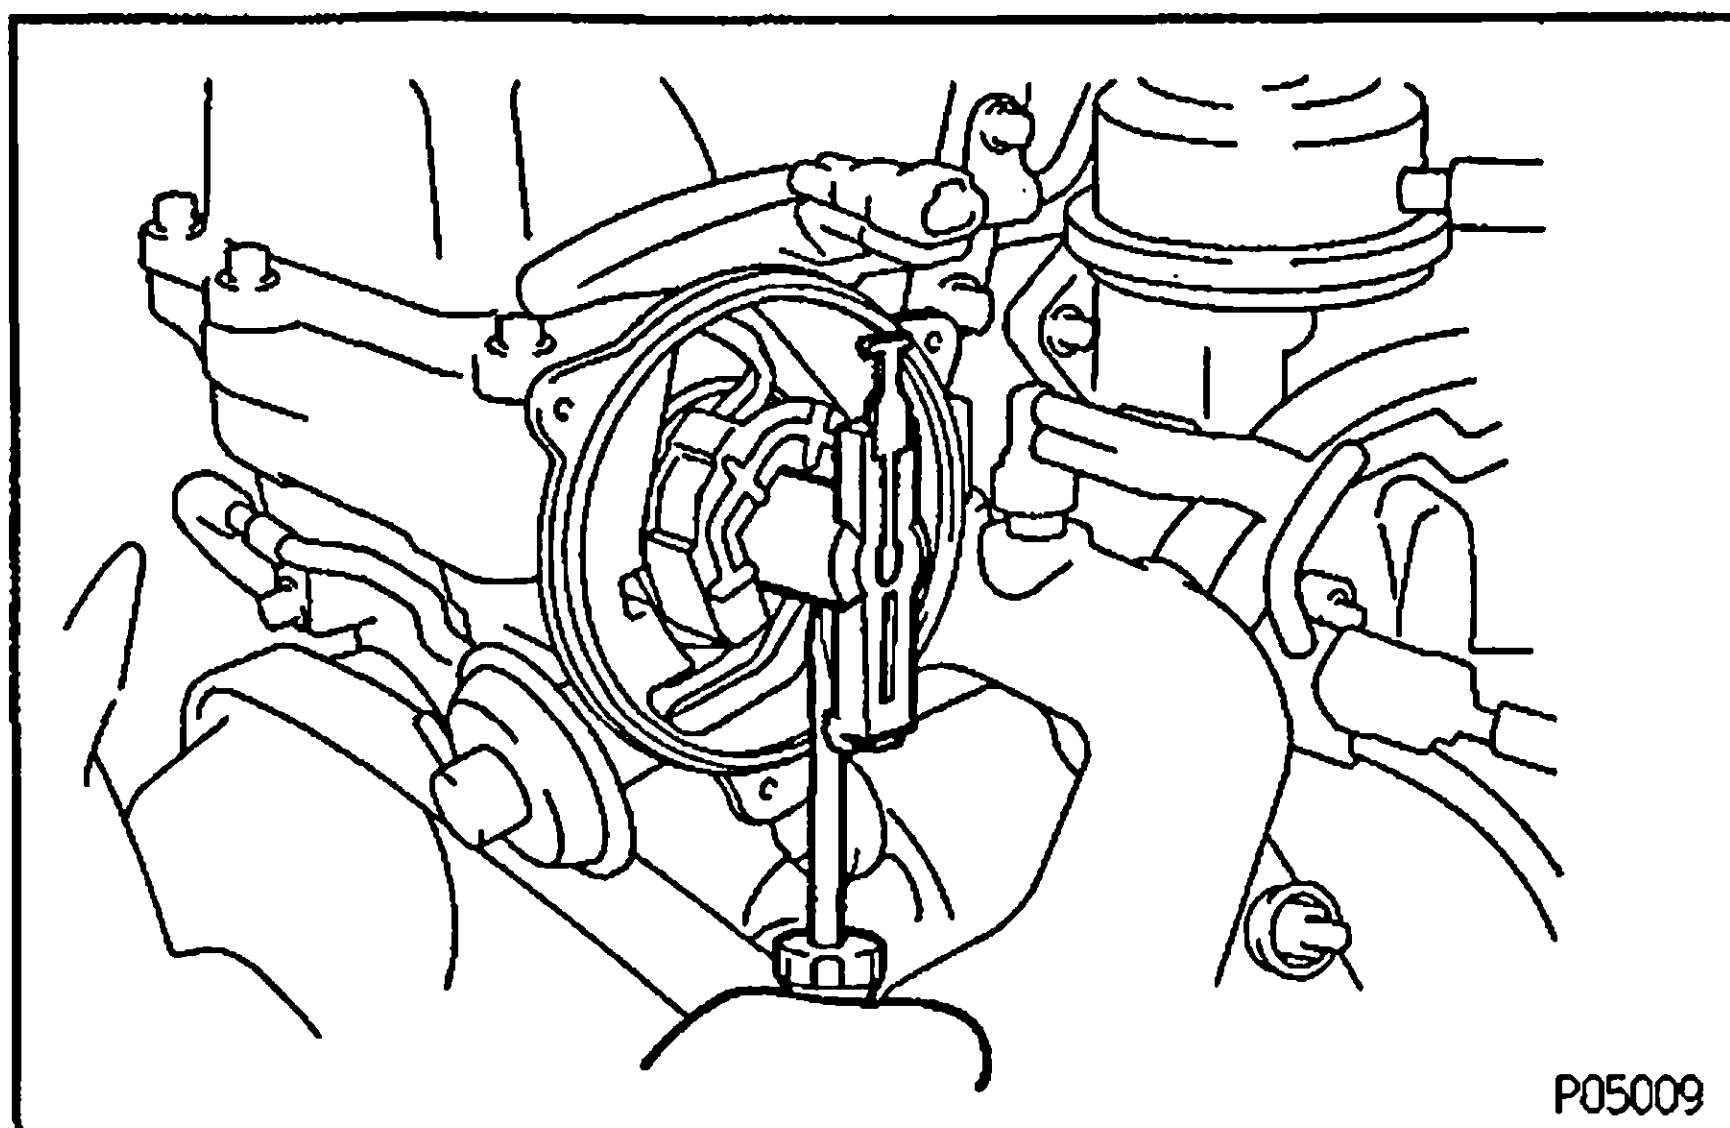

3. **REMOVE ROTOR**
Remove the screw and rotor.
4. **REMOVE DUST PROOF COVER**

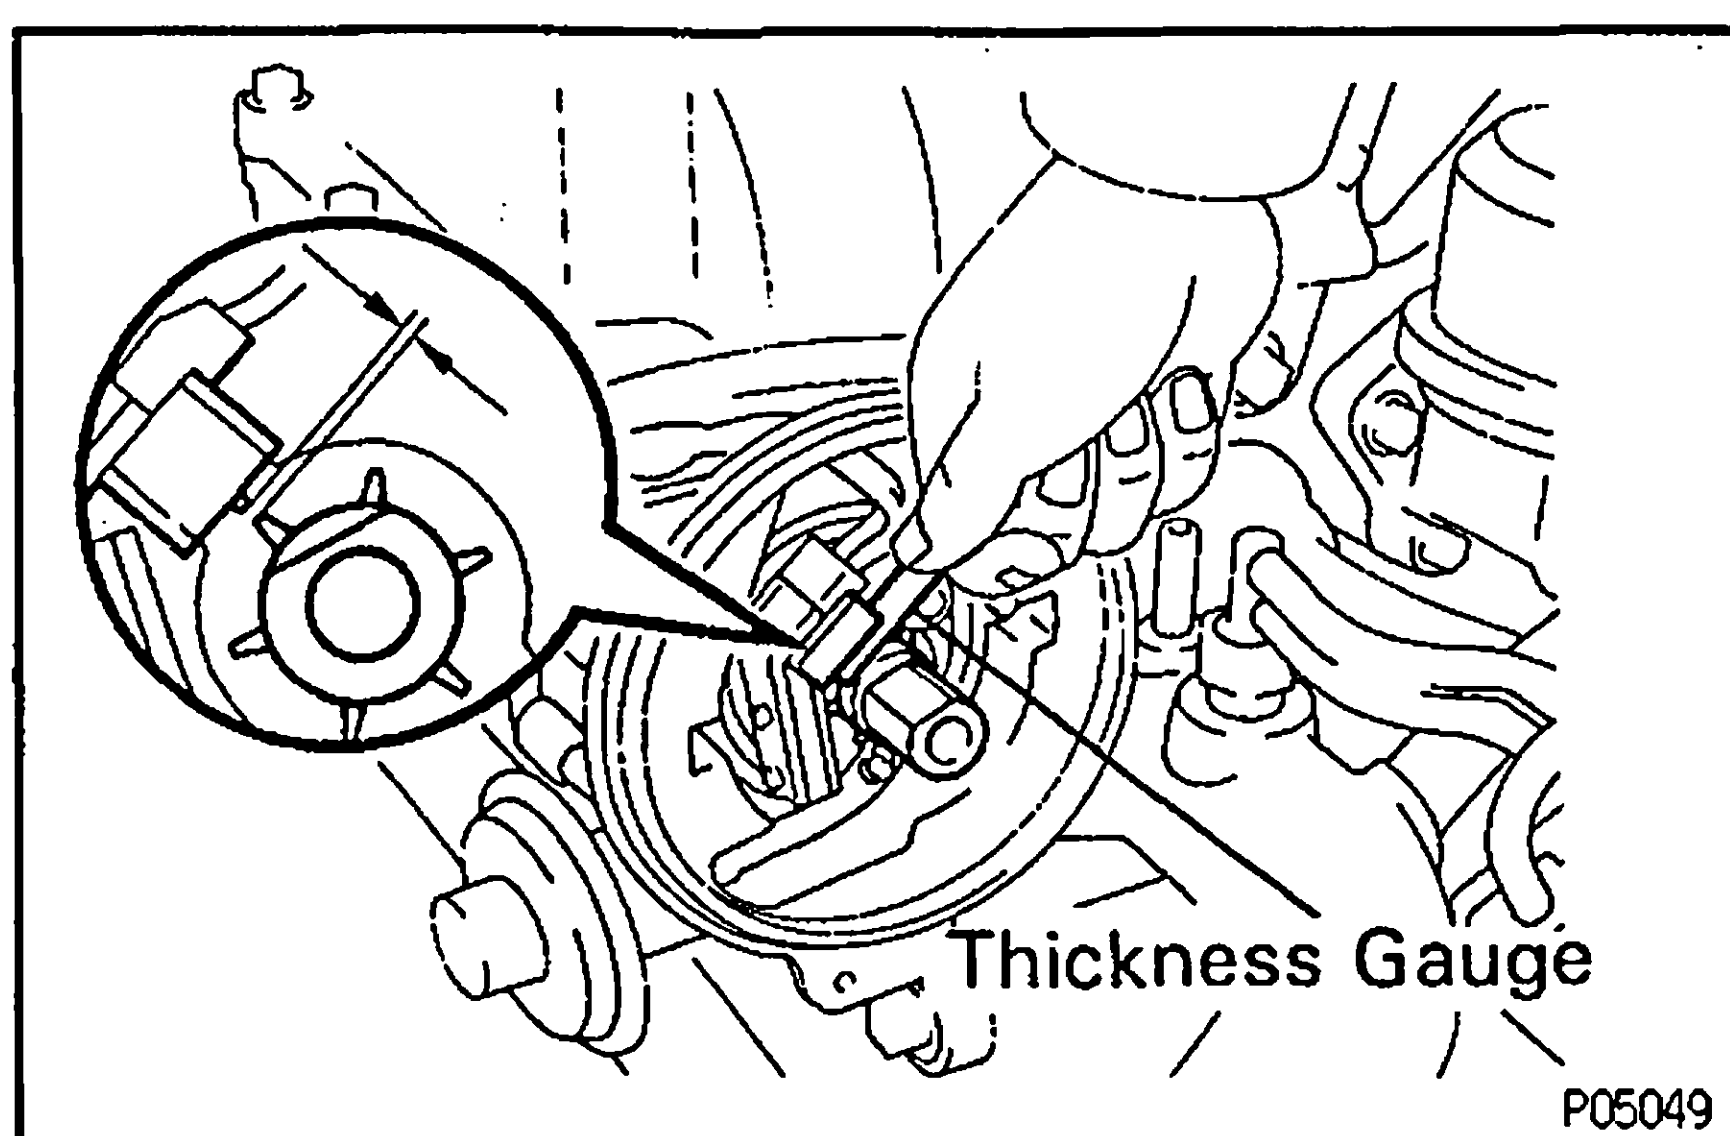

5. INSPECT AIR GAP

Using a thickness gauge, measure the gap between the signal rotor and the pickup coil projection.

Air gap:

0.2 — 0.4 mm (0.008 — 0.016 in.)

If the gap is not within specification, adjust the gap.

- Loosen the two screws and move the signal generator (pickup coil) until the gap is correct. Tighten the screws and recheck the gap.

6. INSPECT SIGNAL GENERATOR (PICKUP COIL) RESISTANCE

Using an ohmmeter, check that the resistance of the pickup coil.


Pickup coil resistance (Cold):


185 — 275 Ω

Pickup coil resistance (Hot):

240 — 325 Ω


If the resistance is not specified, replace the signal generator (pickup coil).

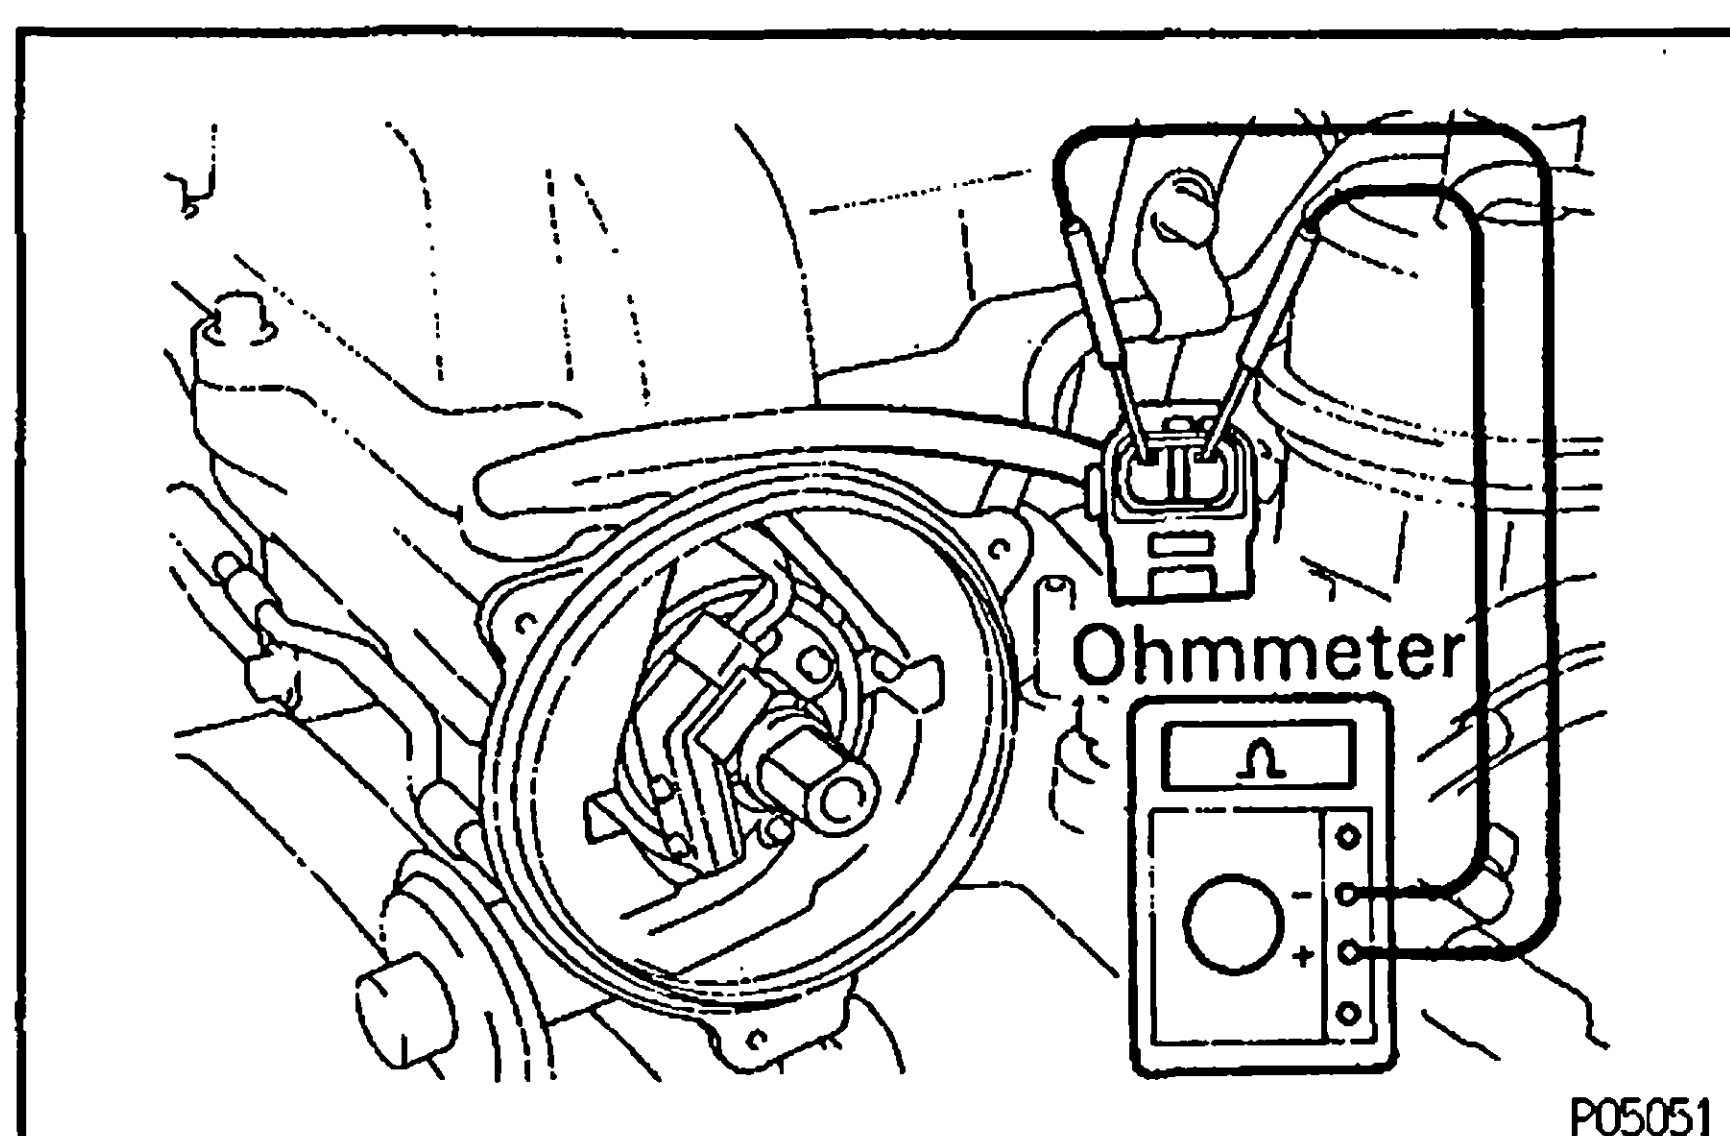

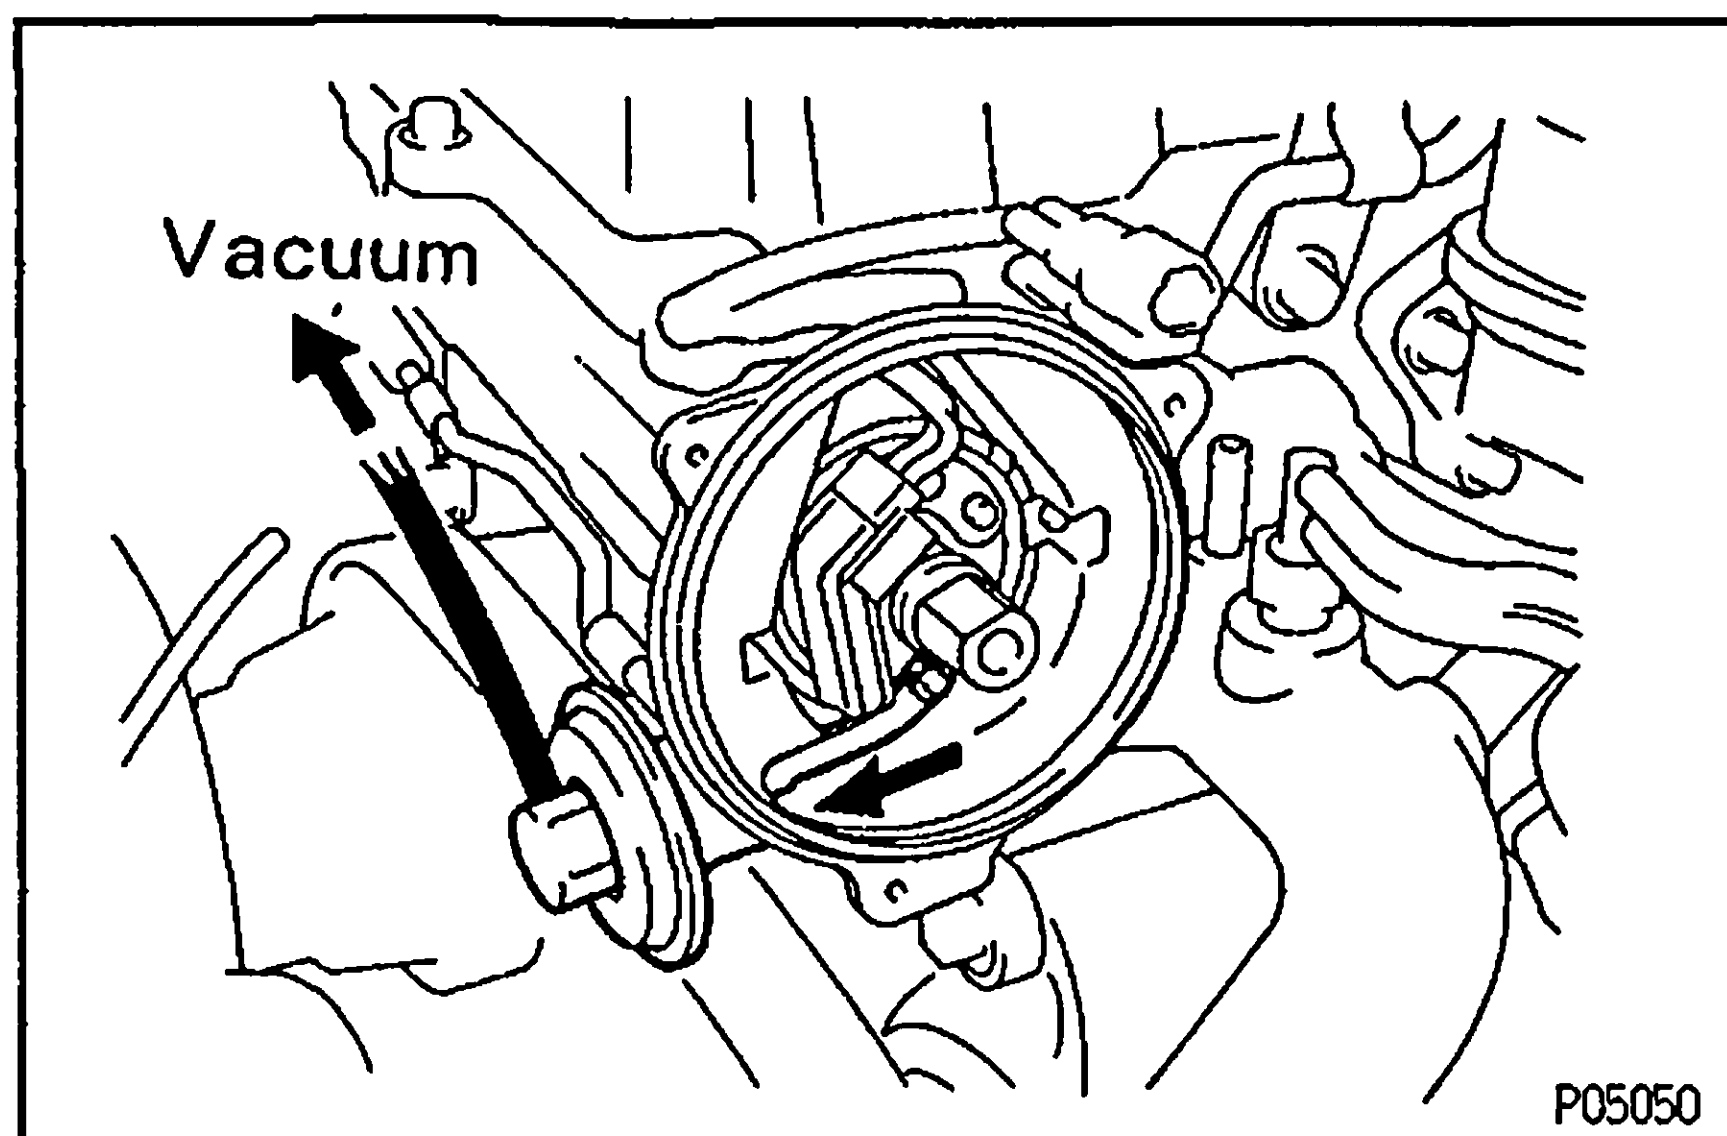
**7. INSPECT VACUUM ADVANCE**

- (a) Disconnect the vacuum hose and connect a vacuum pump to the vacuum advancer.
- (b) Apply vacuum and check that the vacuum advancer moves.


If the vacuum advancer does not work, repair or replace if necessary.

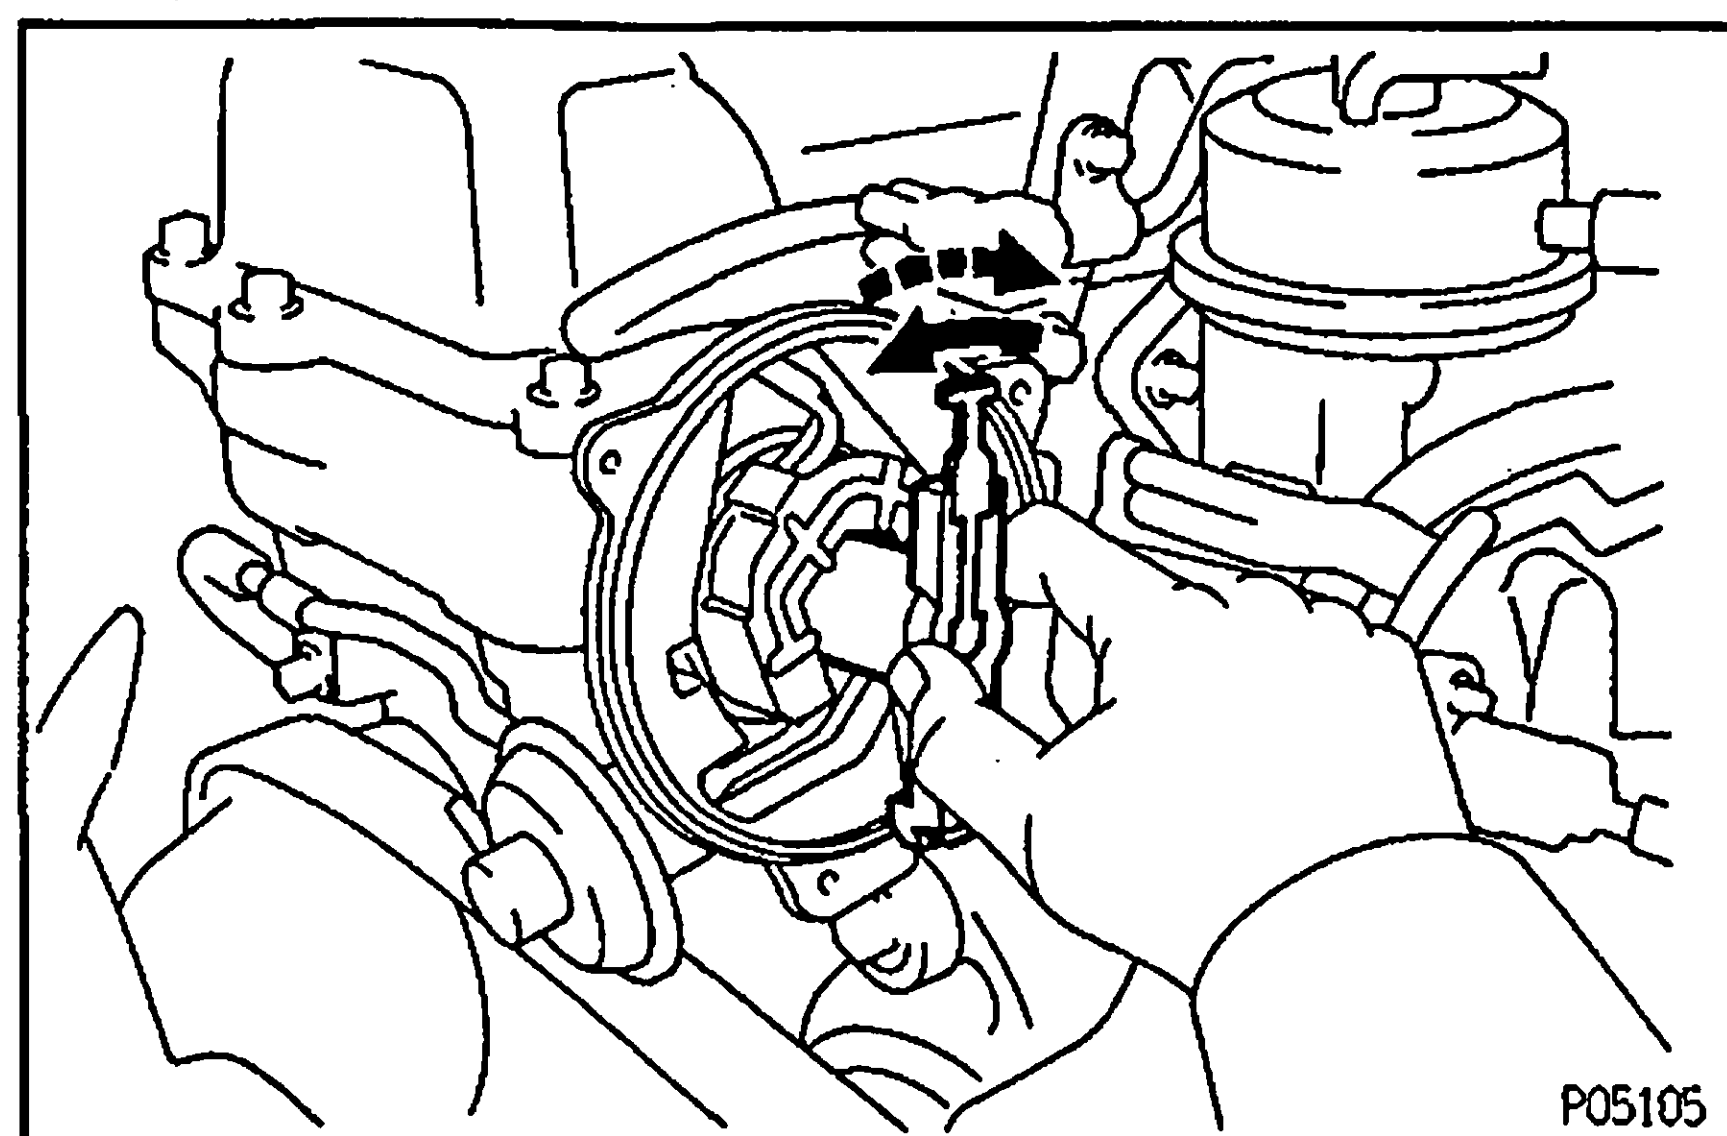**8. INSPECT GOVERNOR ADVANCE**

- (a) Turn the rotor shaft counterclockwise, release it and check that the rotor returns quickly clockwise.
- (b) Check that the rotor is not excessively loose.

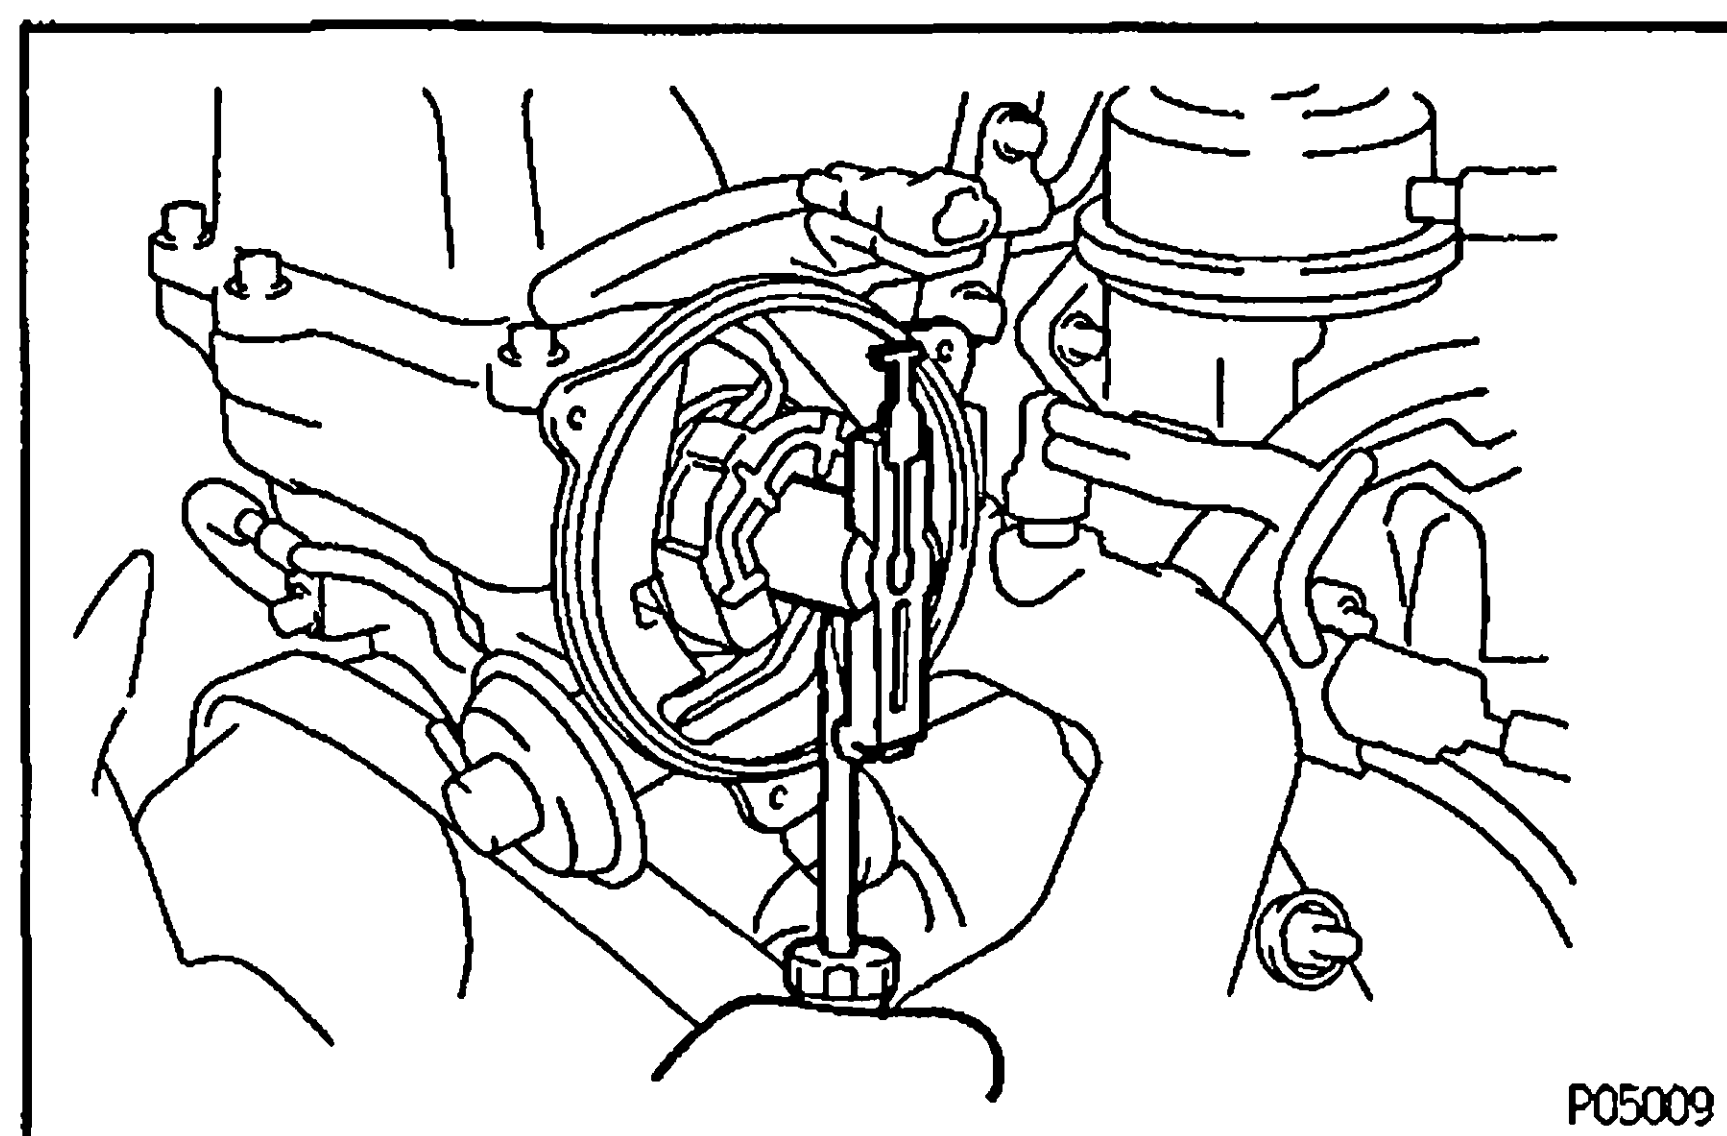9. INSTALL DUST PROOF COVER**10. REINSTALL ROTOR**

Install the rotor with the screw.

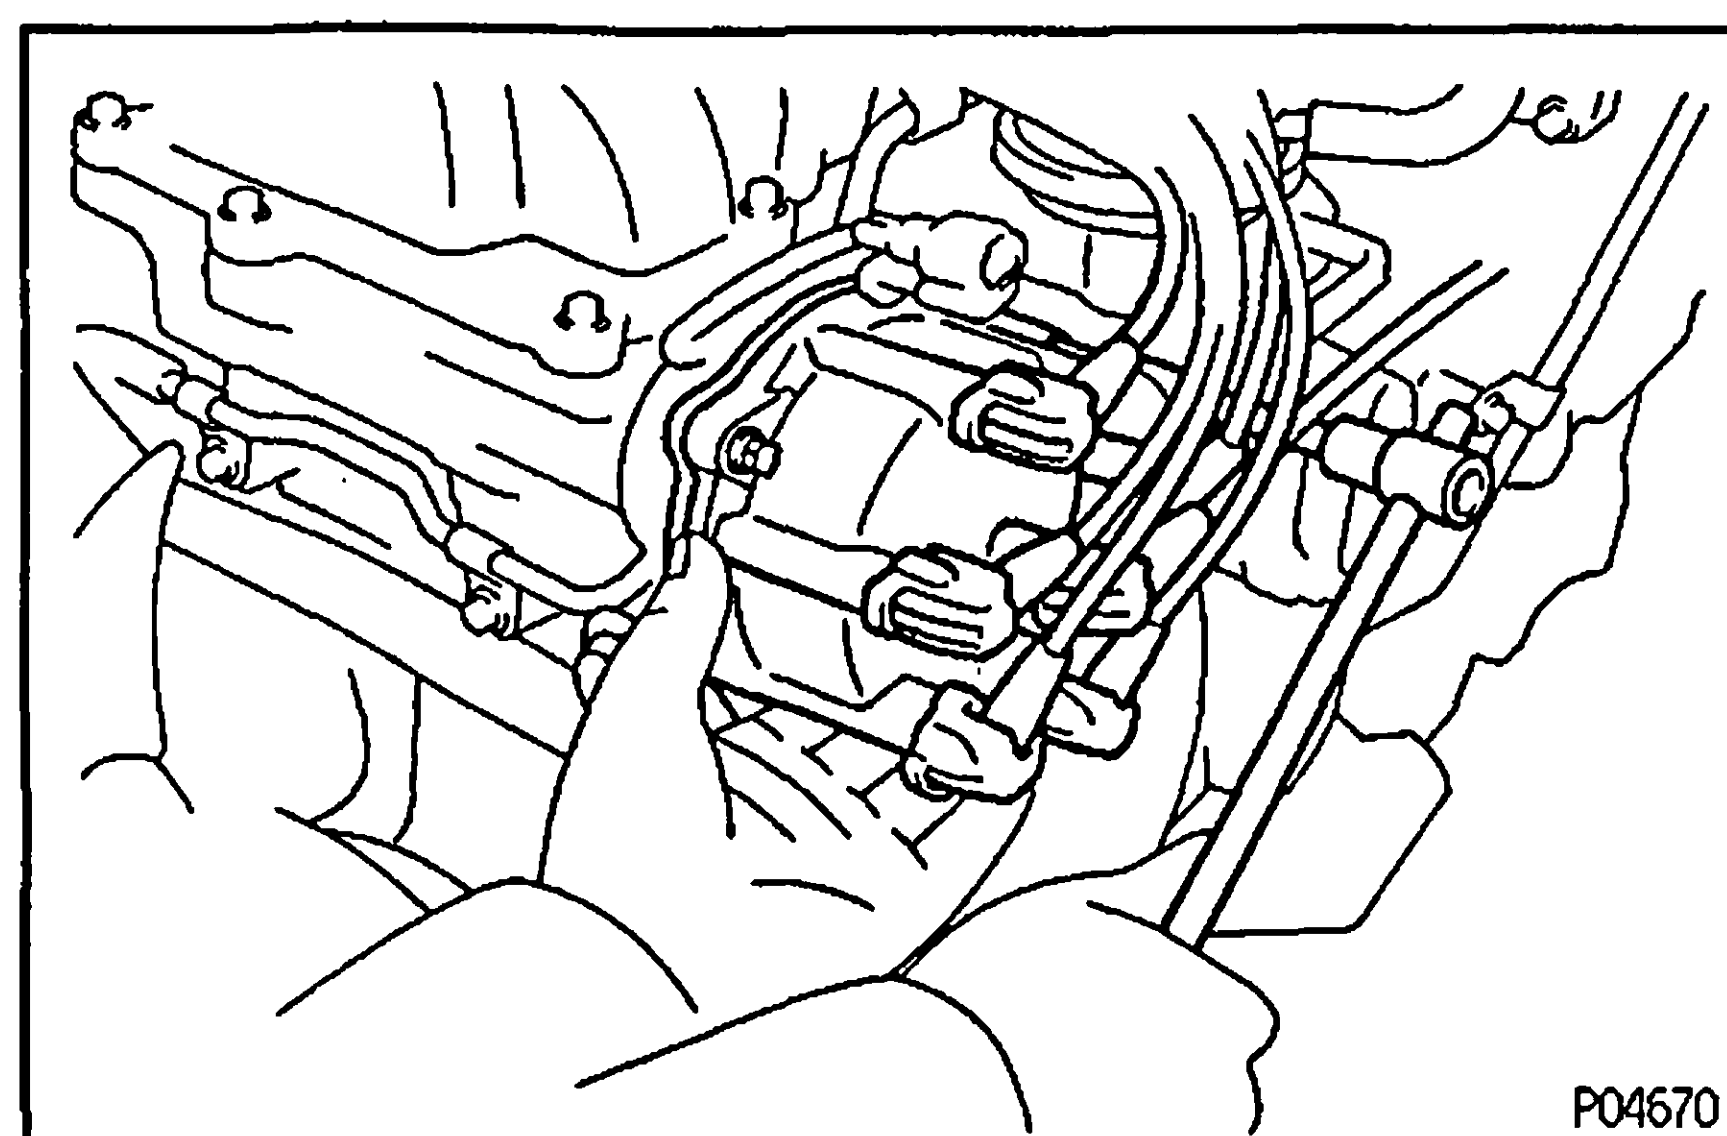**11. REINSTALL DISTRIBUTOR CAP****12. RECONNECT DISTRIBUTOR CONNECTOR****IGNITER INSPECTION**


(See Spark Test procedure on page IG—6)

DISTRIBUTOR


DISTRIBUTOR REMOVAL

IG038-01


IG

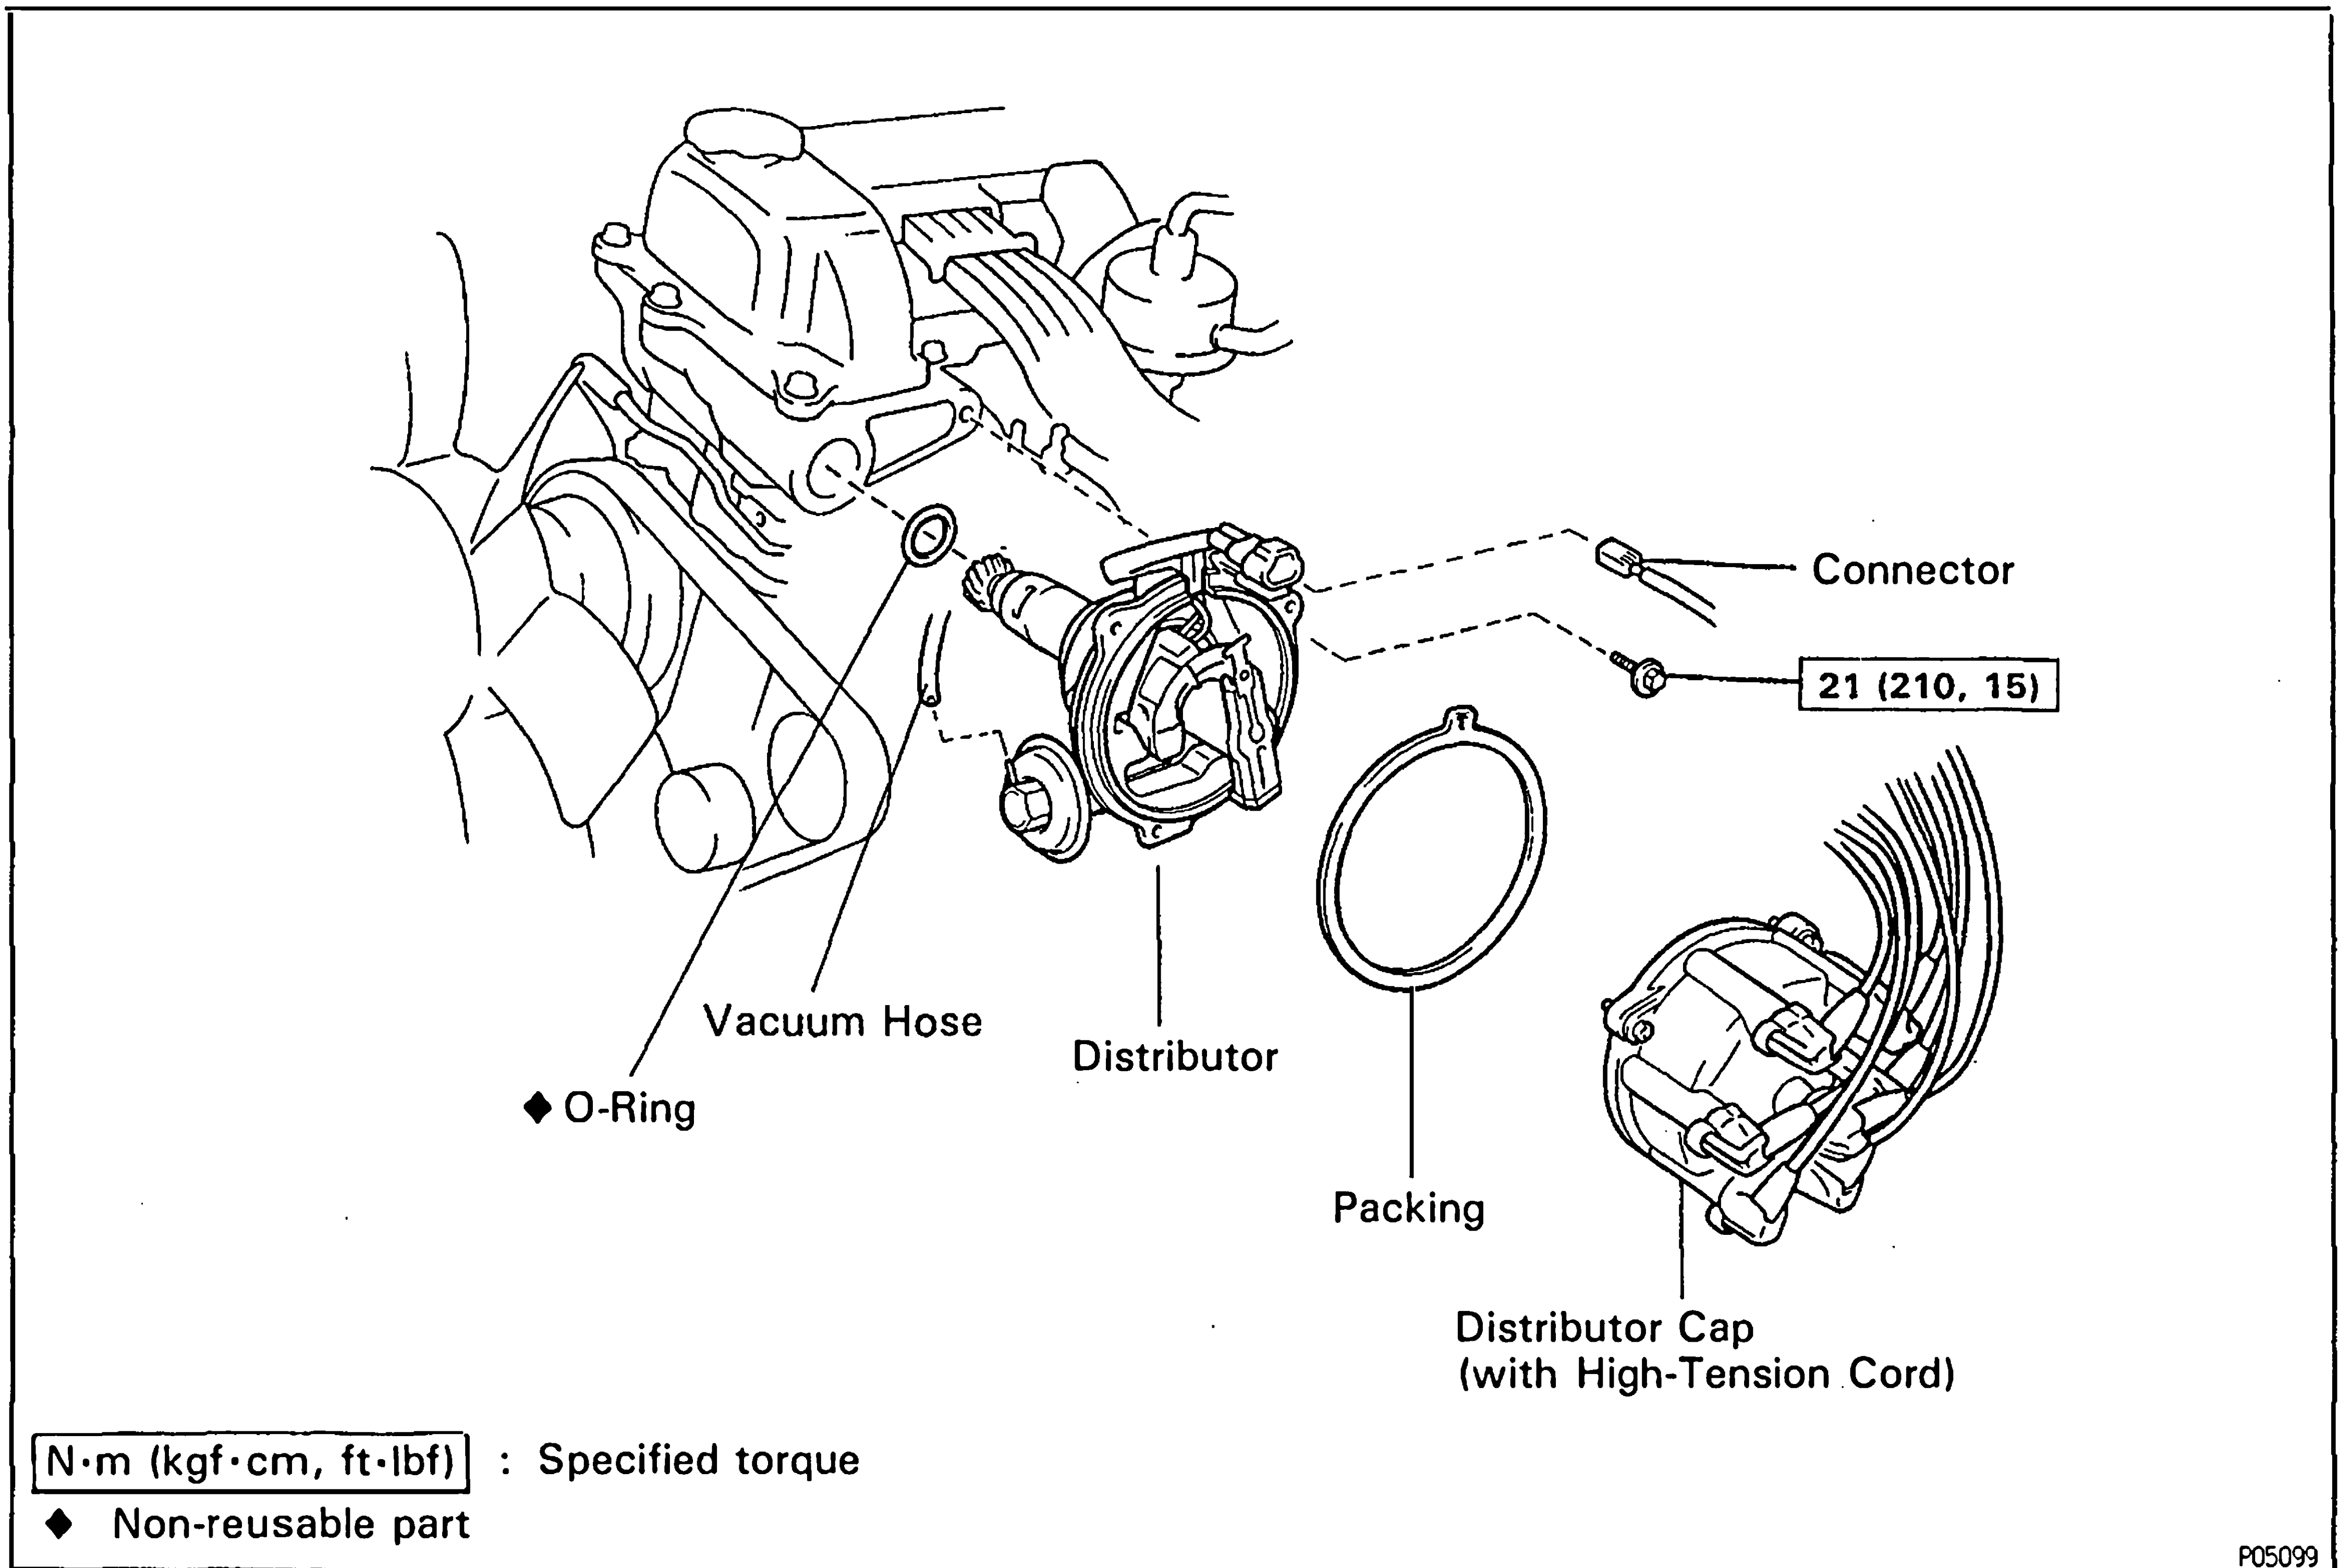


1. DISCONNECT CABLE FROM NEGATIVE TERMINAL OF BATTERY
2. DISCONNECT DISTRIBUTOR CONNECTOR
3. DISCONNECT VACUUM HOSE FROM VACUUM ADVANCER

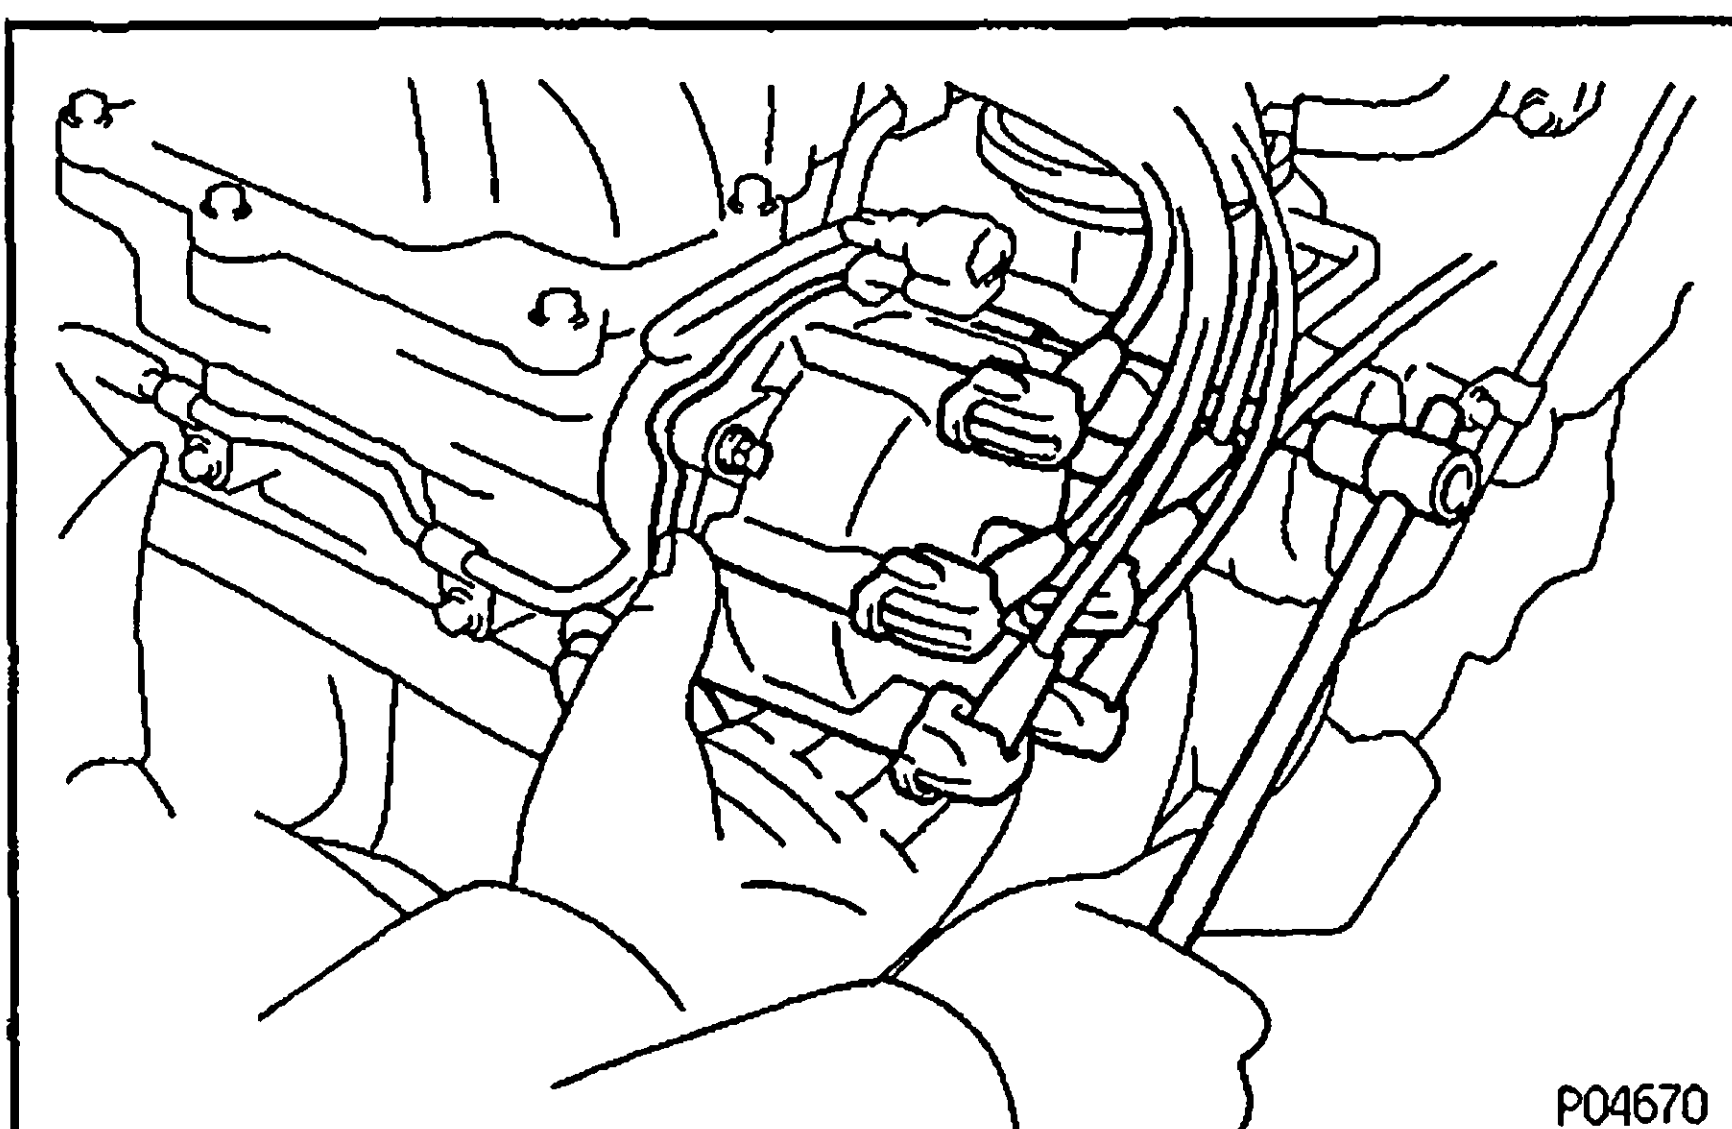


4. REMOVE DISTRIBUTOR CAP WITHOUT DISCONNECTING HIGH-TENSION CORDS

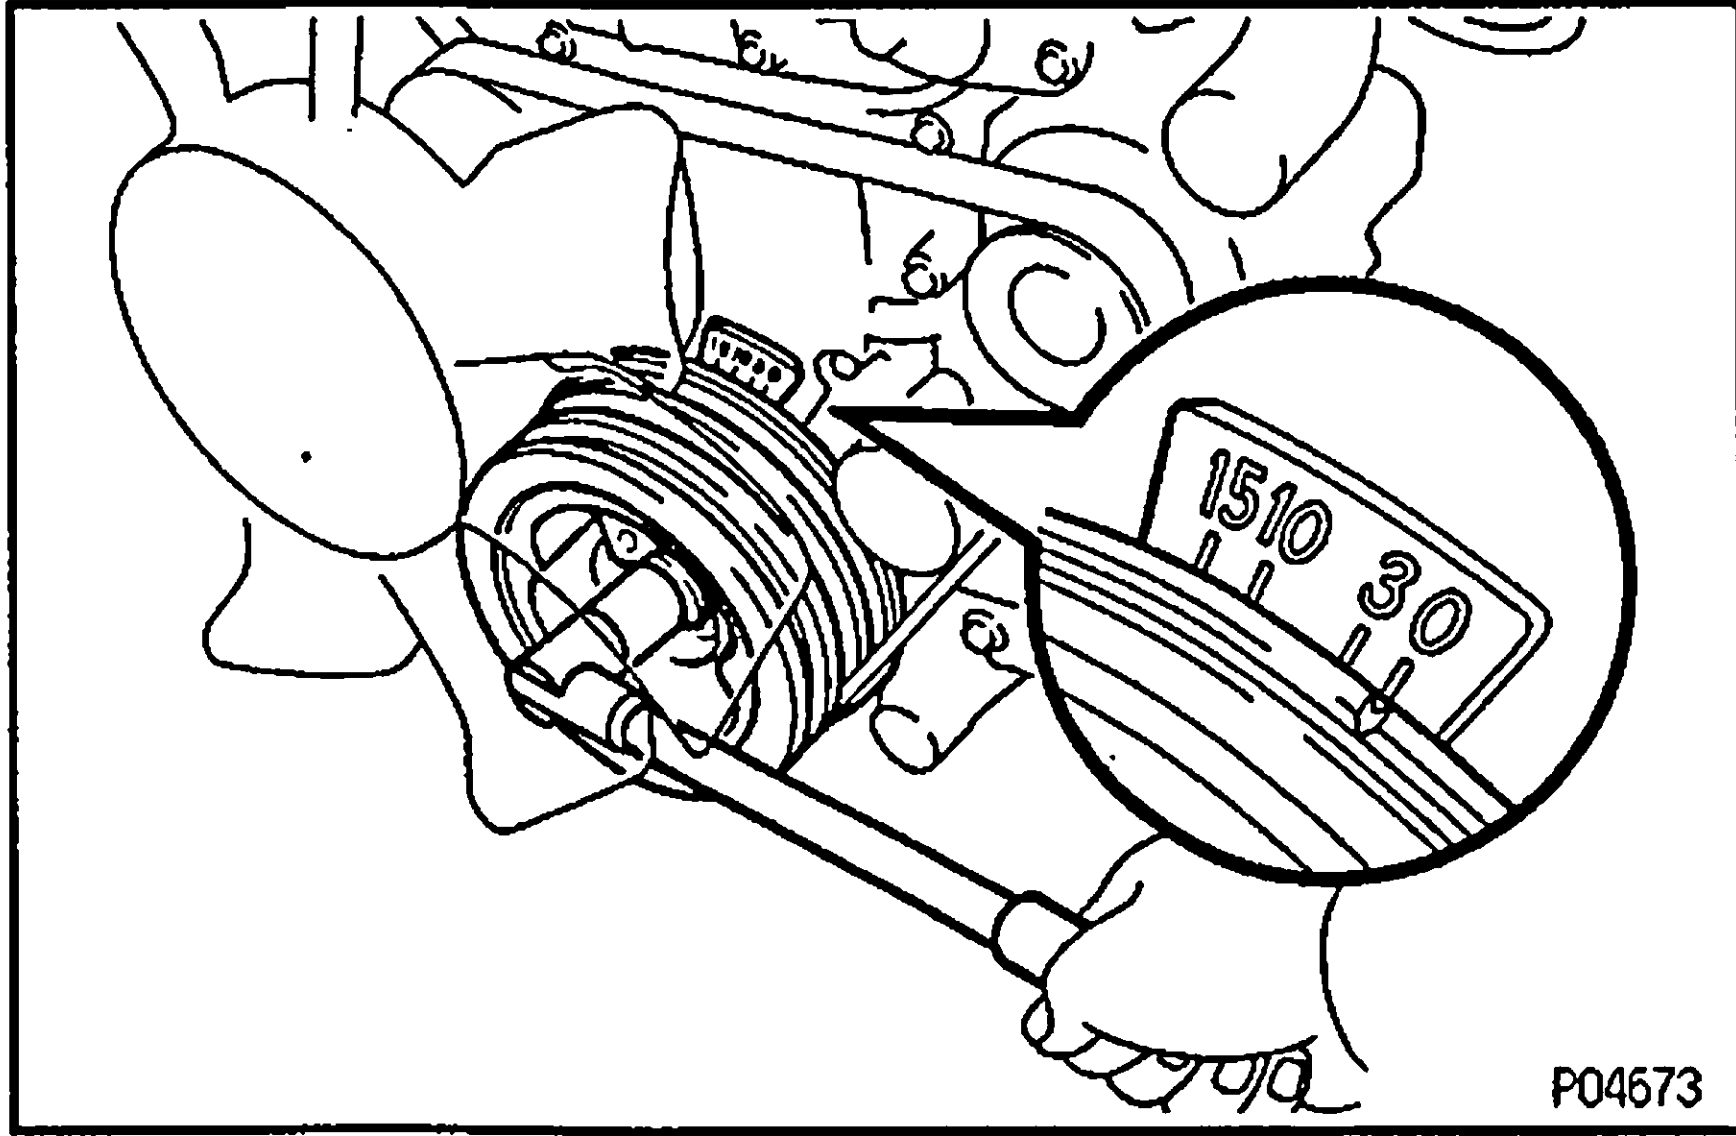**5. SET NO.1 CYLINDER TO TDC/COMPRESSION**

- (a) Turn the crankshaft pulley until the timing mark is aligned with "0" mark on the timing chain cover.

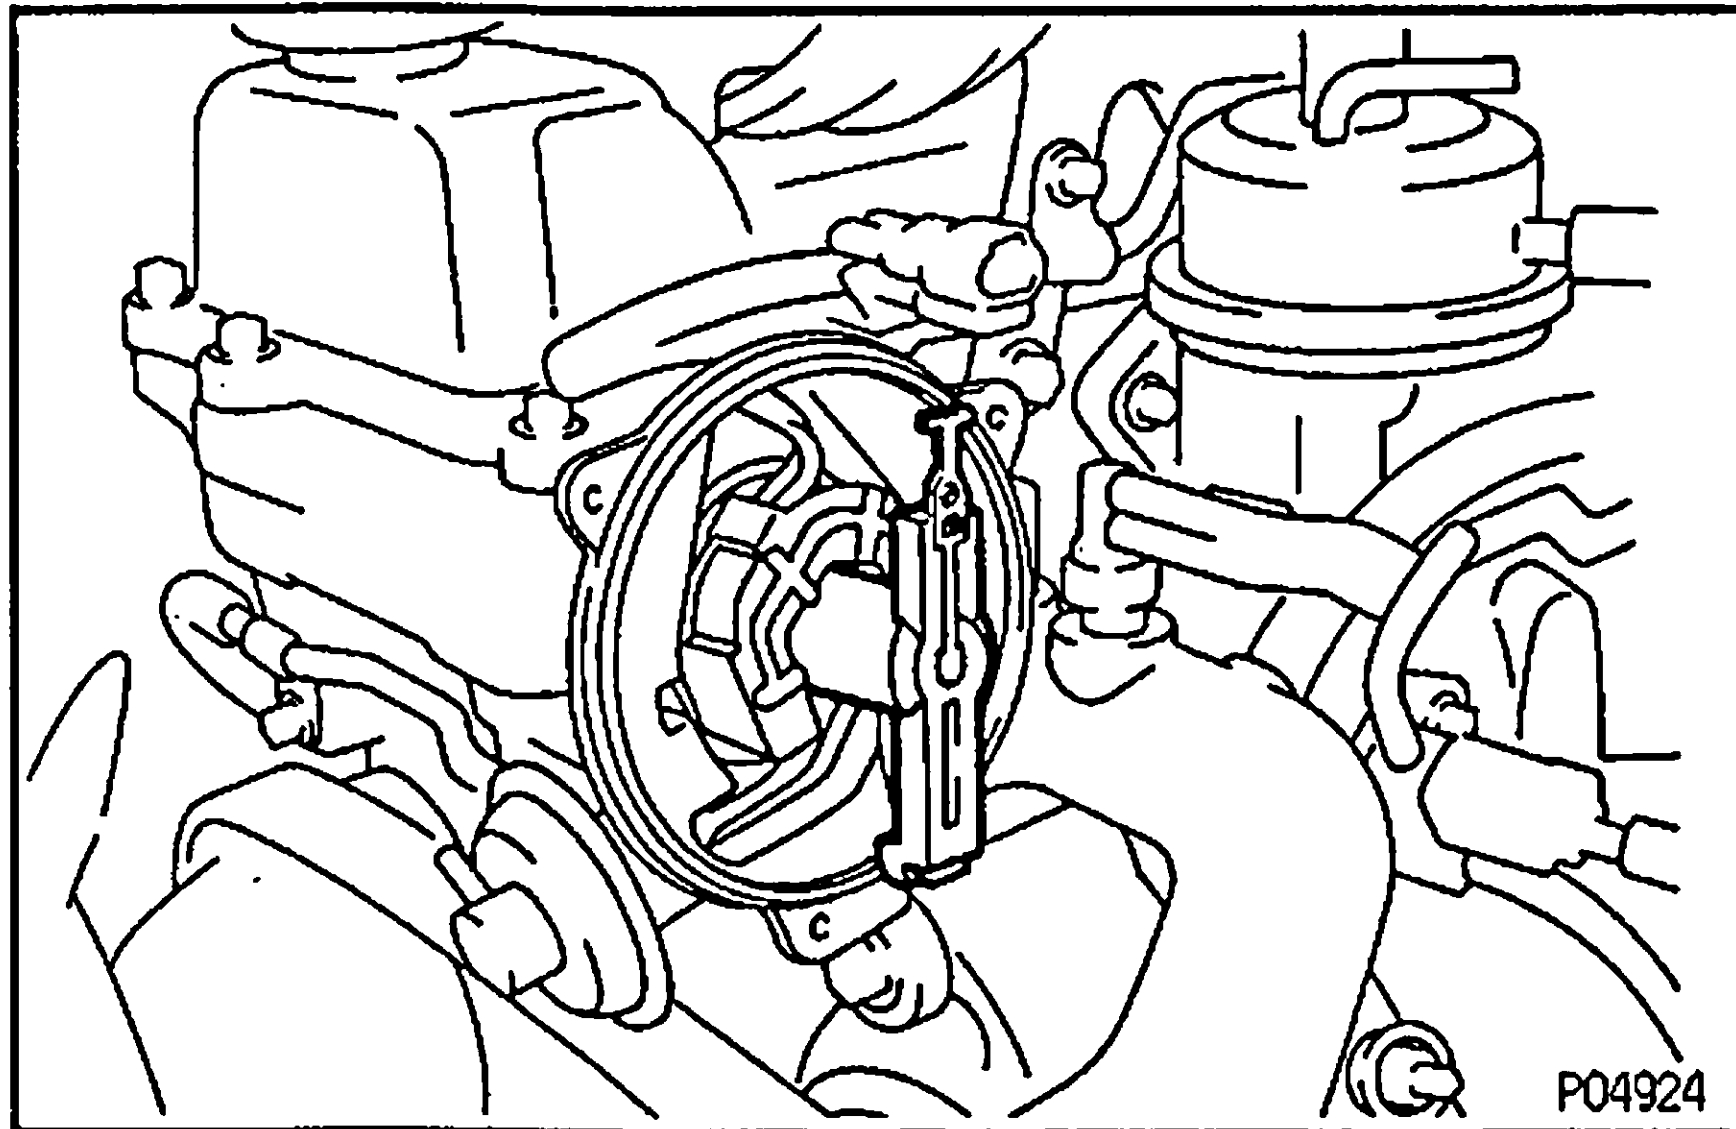


- (b) Check that the distributor rotor direction is as shown. If not, turn the crankshaft pulley one complete revolution.

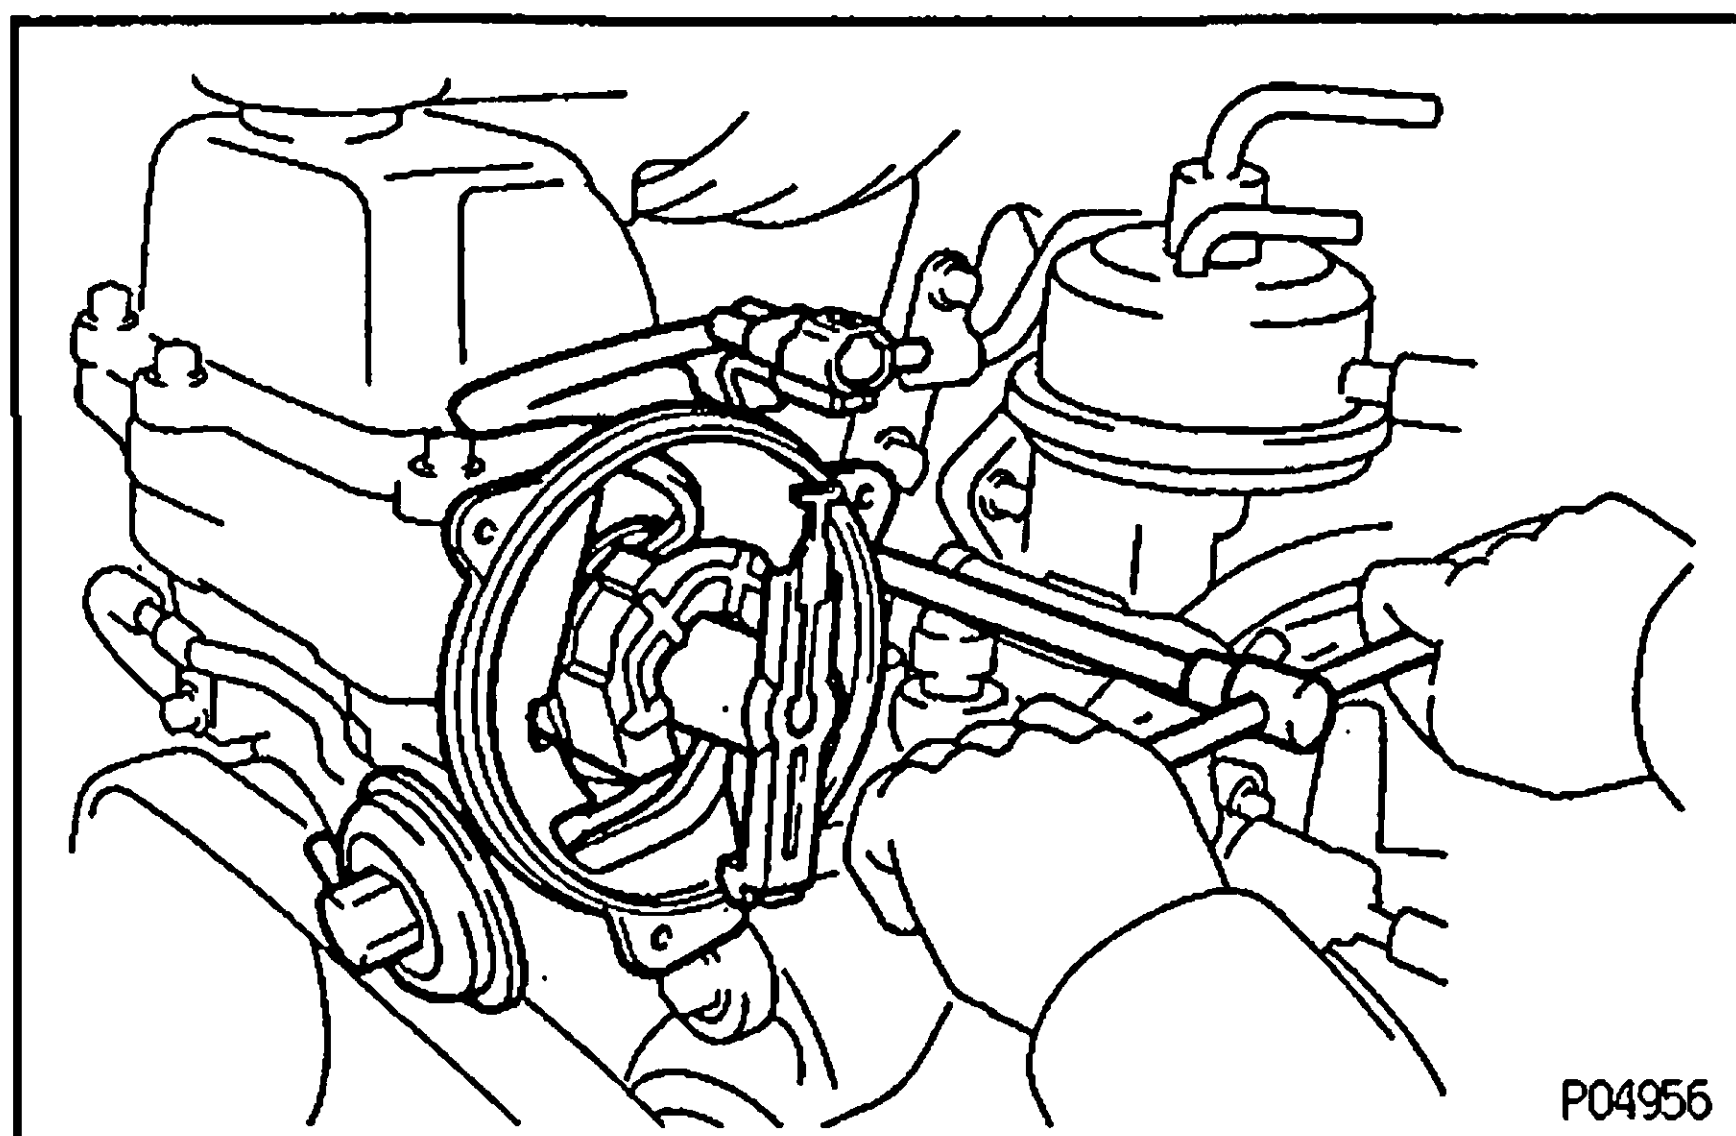**6. REMOVE DISTRIBUTOR**

- (a) Remove the hold-down bolt and pull out the distributor.
- (b) Remove the O-ring from the distributor housing.

COMPONENTS

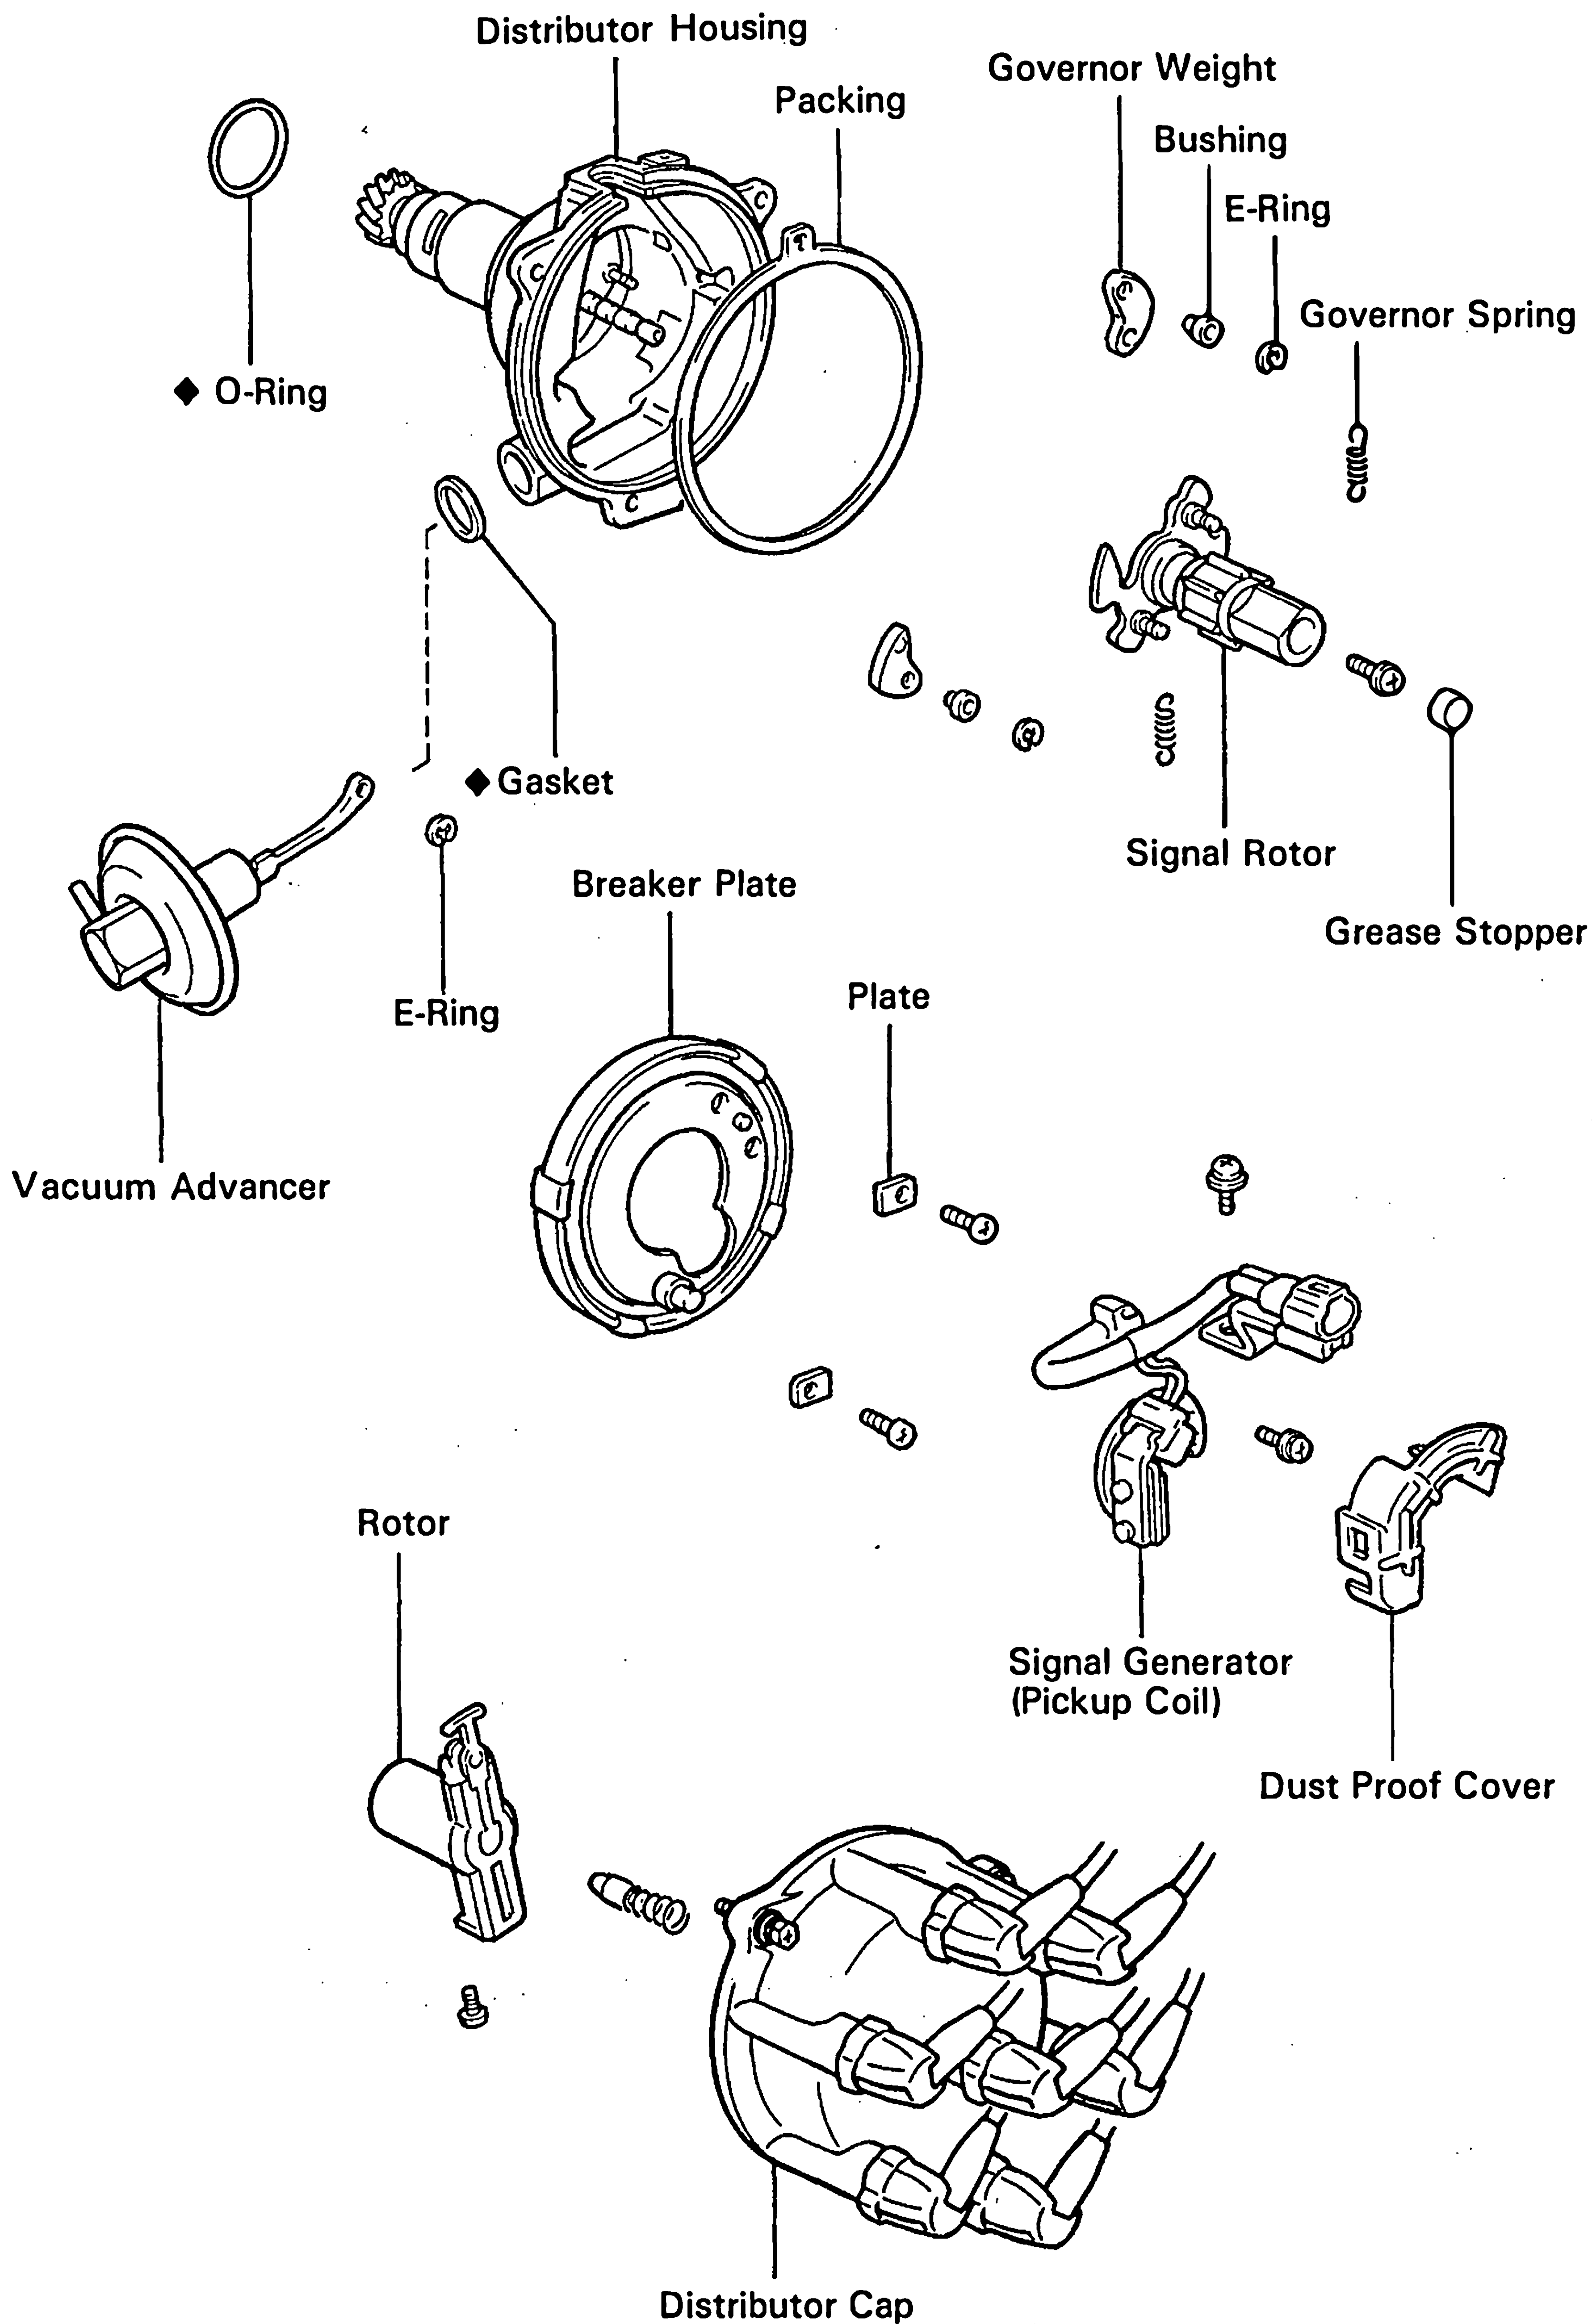

IG

◆ Non-reusable part


DISTRIBUTOR DISASSEMBLY

(See page IG—17)

1. REMOVE DISTRIBUTOR CAP PACKING

2. REMOVE ROTOR

Remove the screw and rotor.

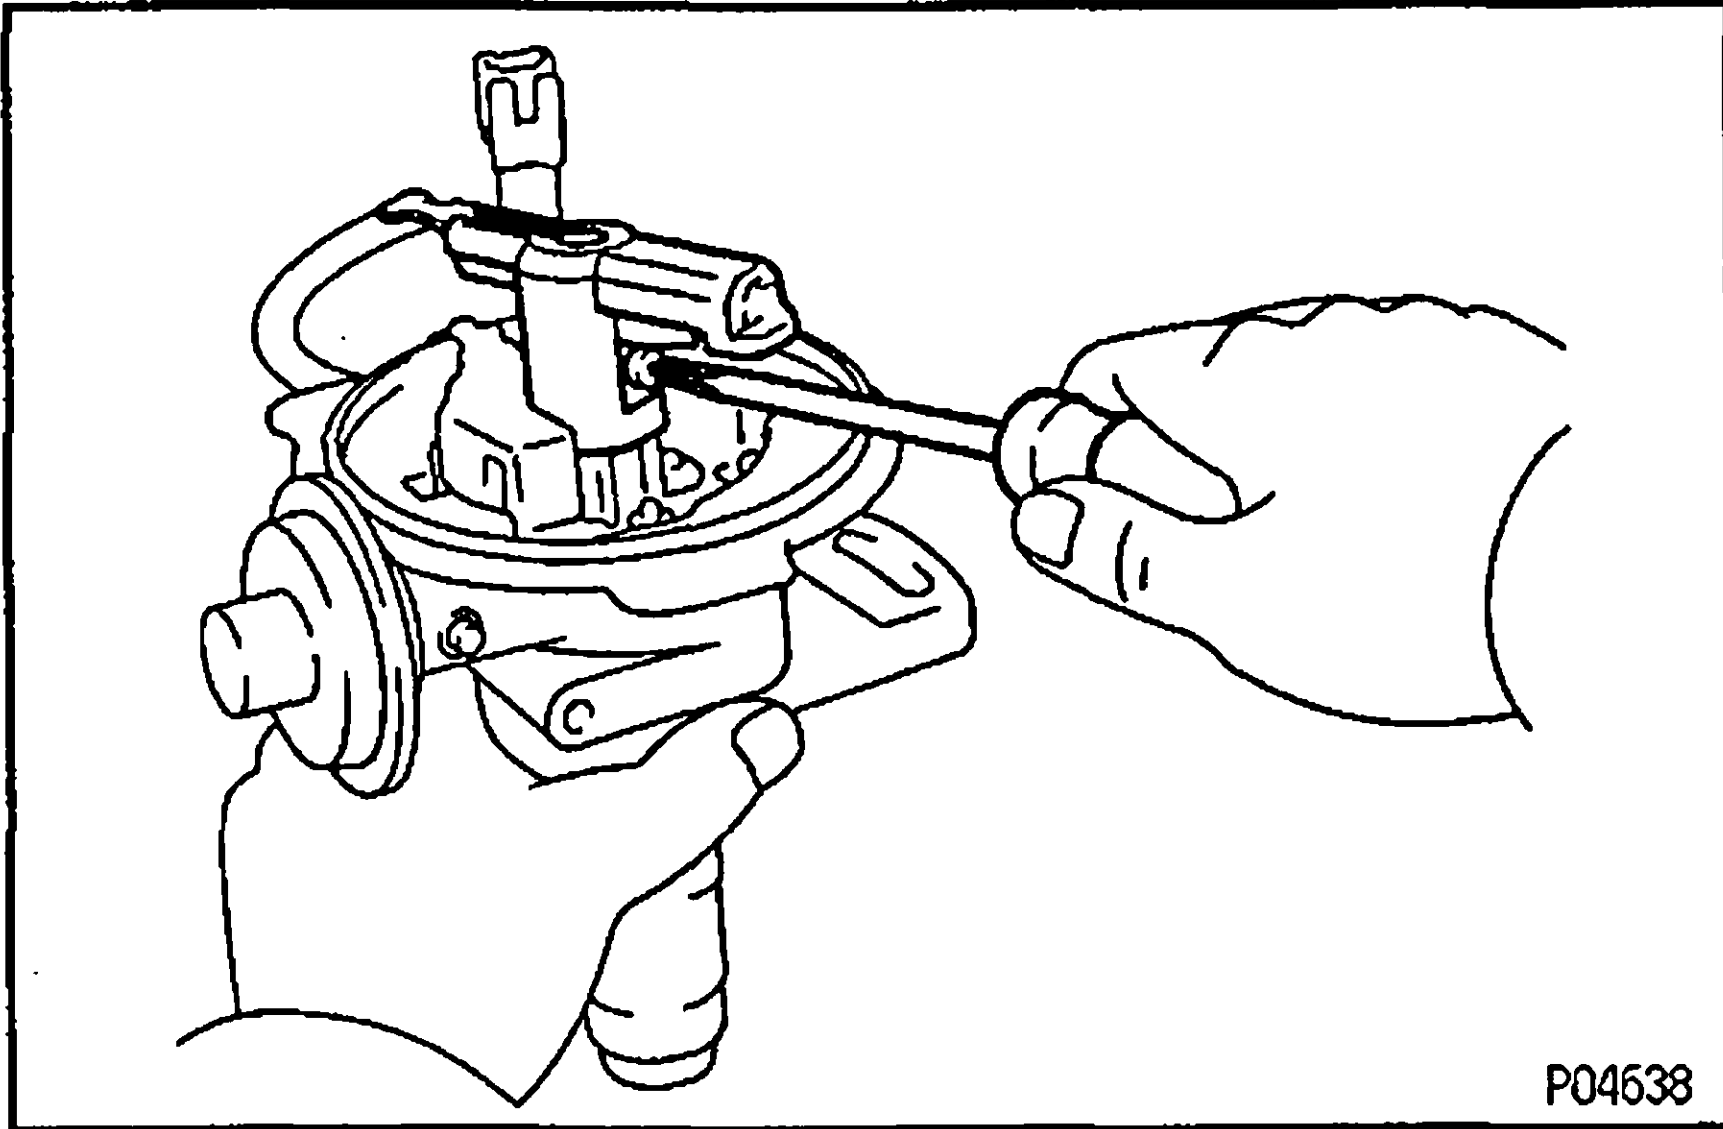


3. REMOVE SIGNAL GENERATOR

(a) Remove the signal generator dust proof cover.


(b) Remove the connector clamp bolt.

(c) Remove the two screws and signal generator.

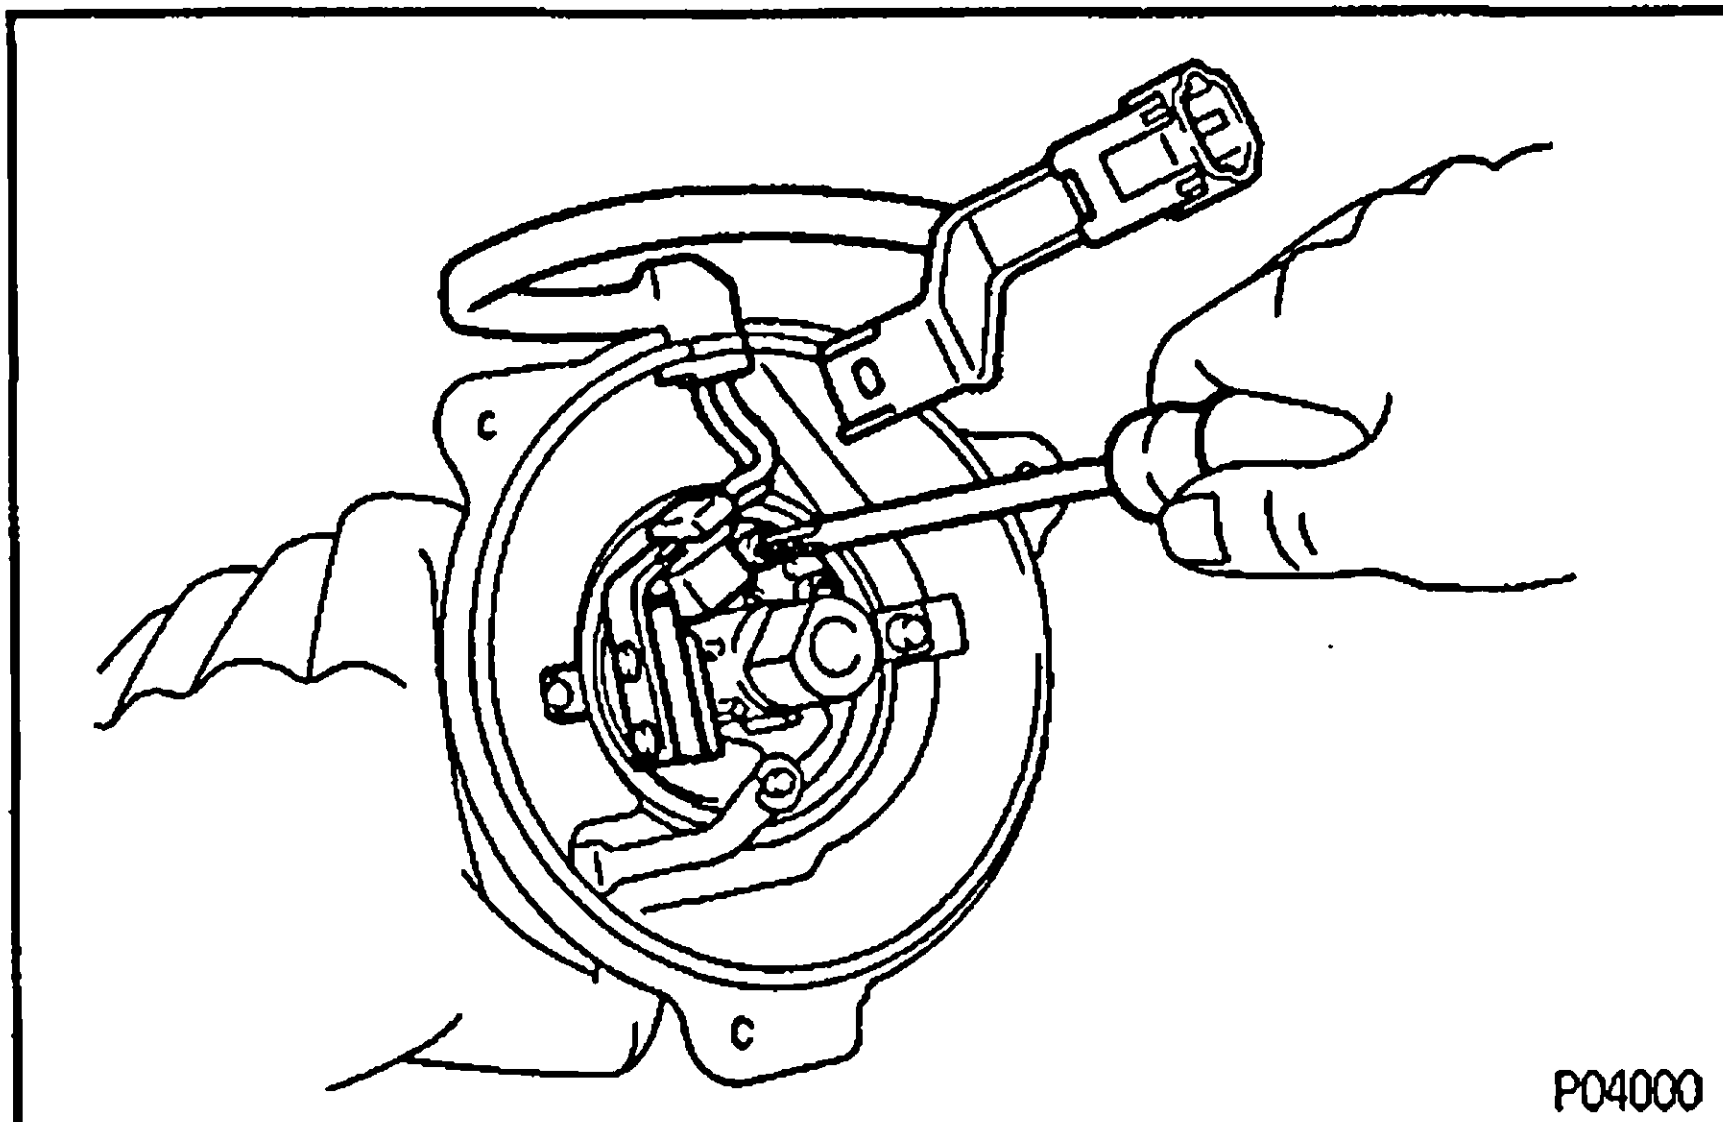


4. REMOVE VACUUM ADVANCER

(a) Using a screwdriver, remove the E—ring.

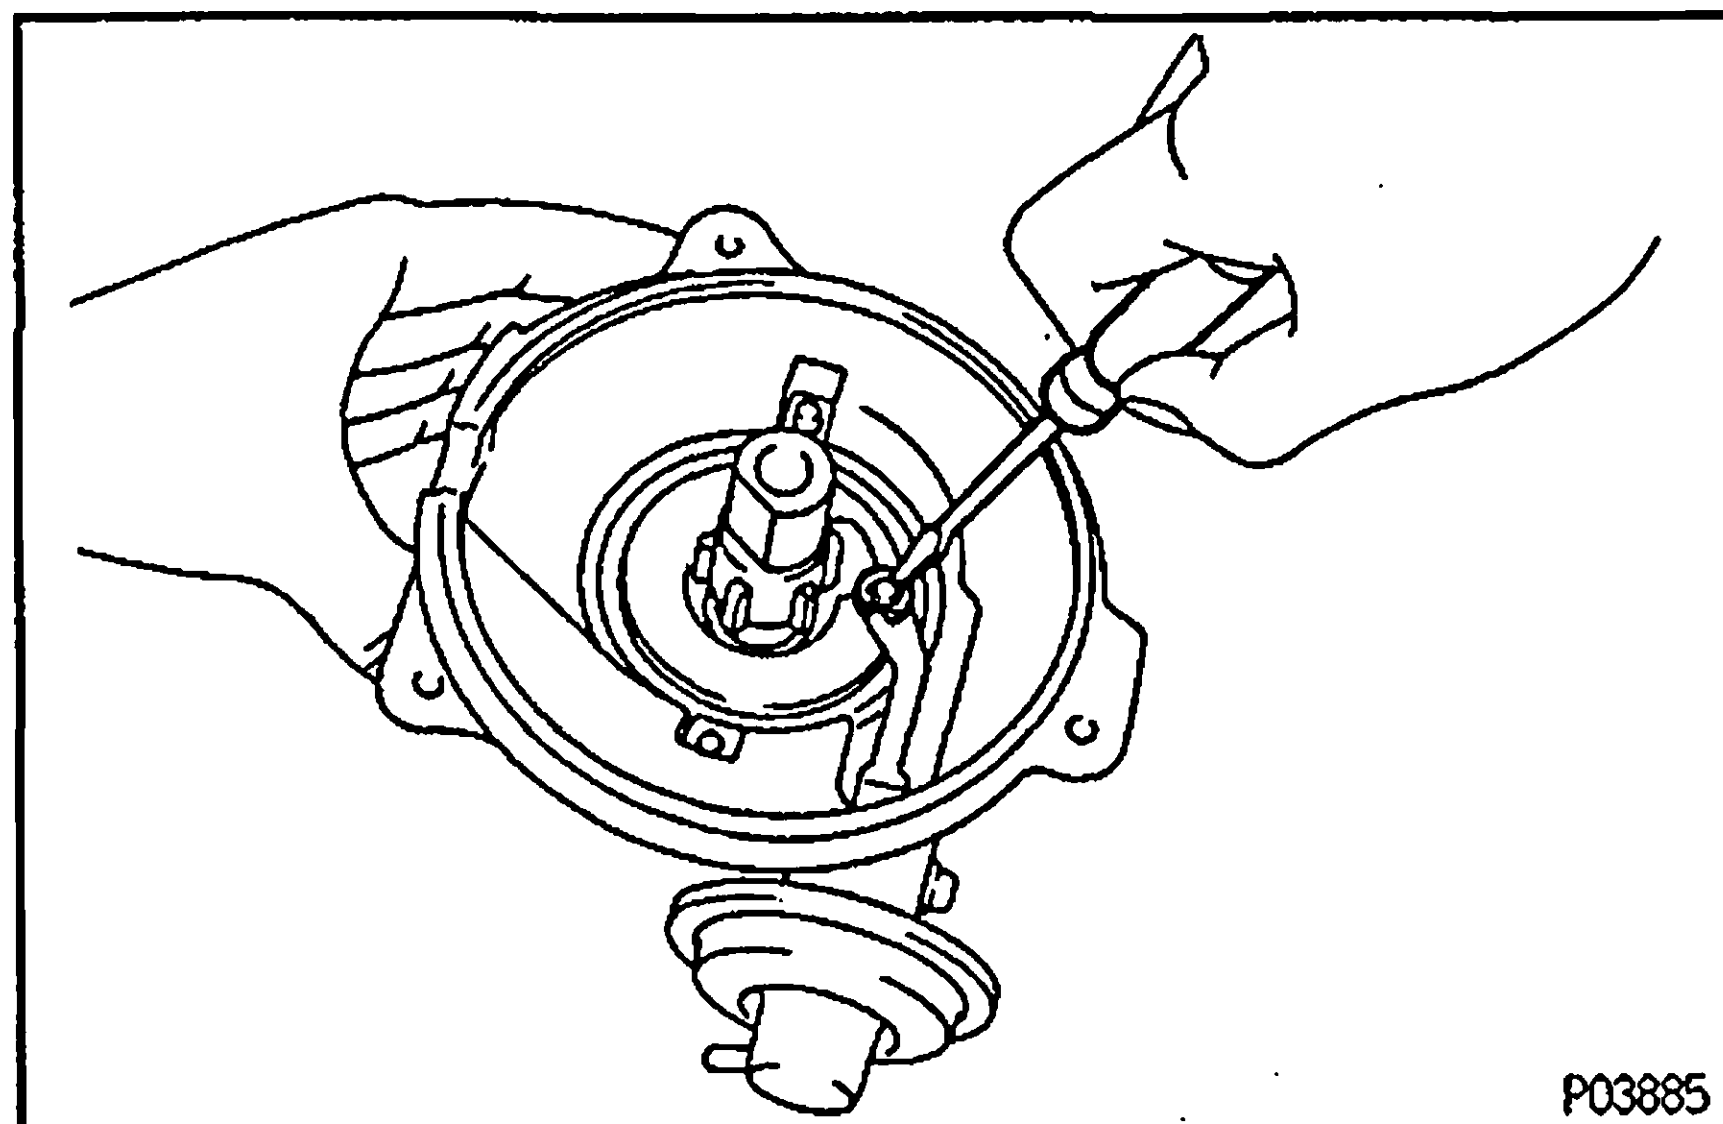


(b) Remove the screw and pull out the vacuum advancer.

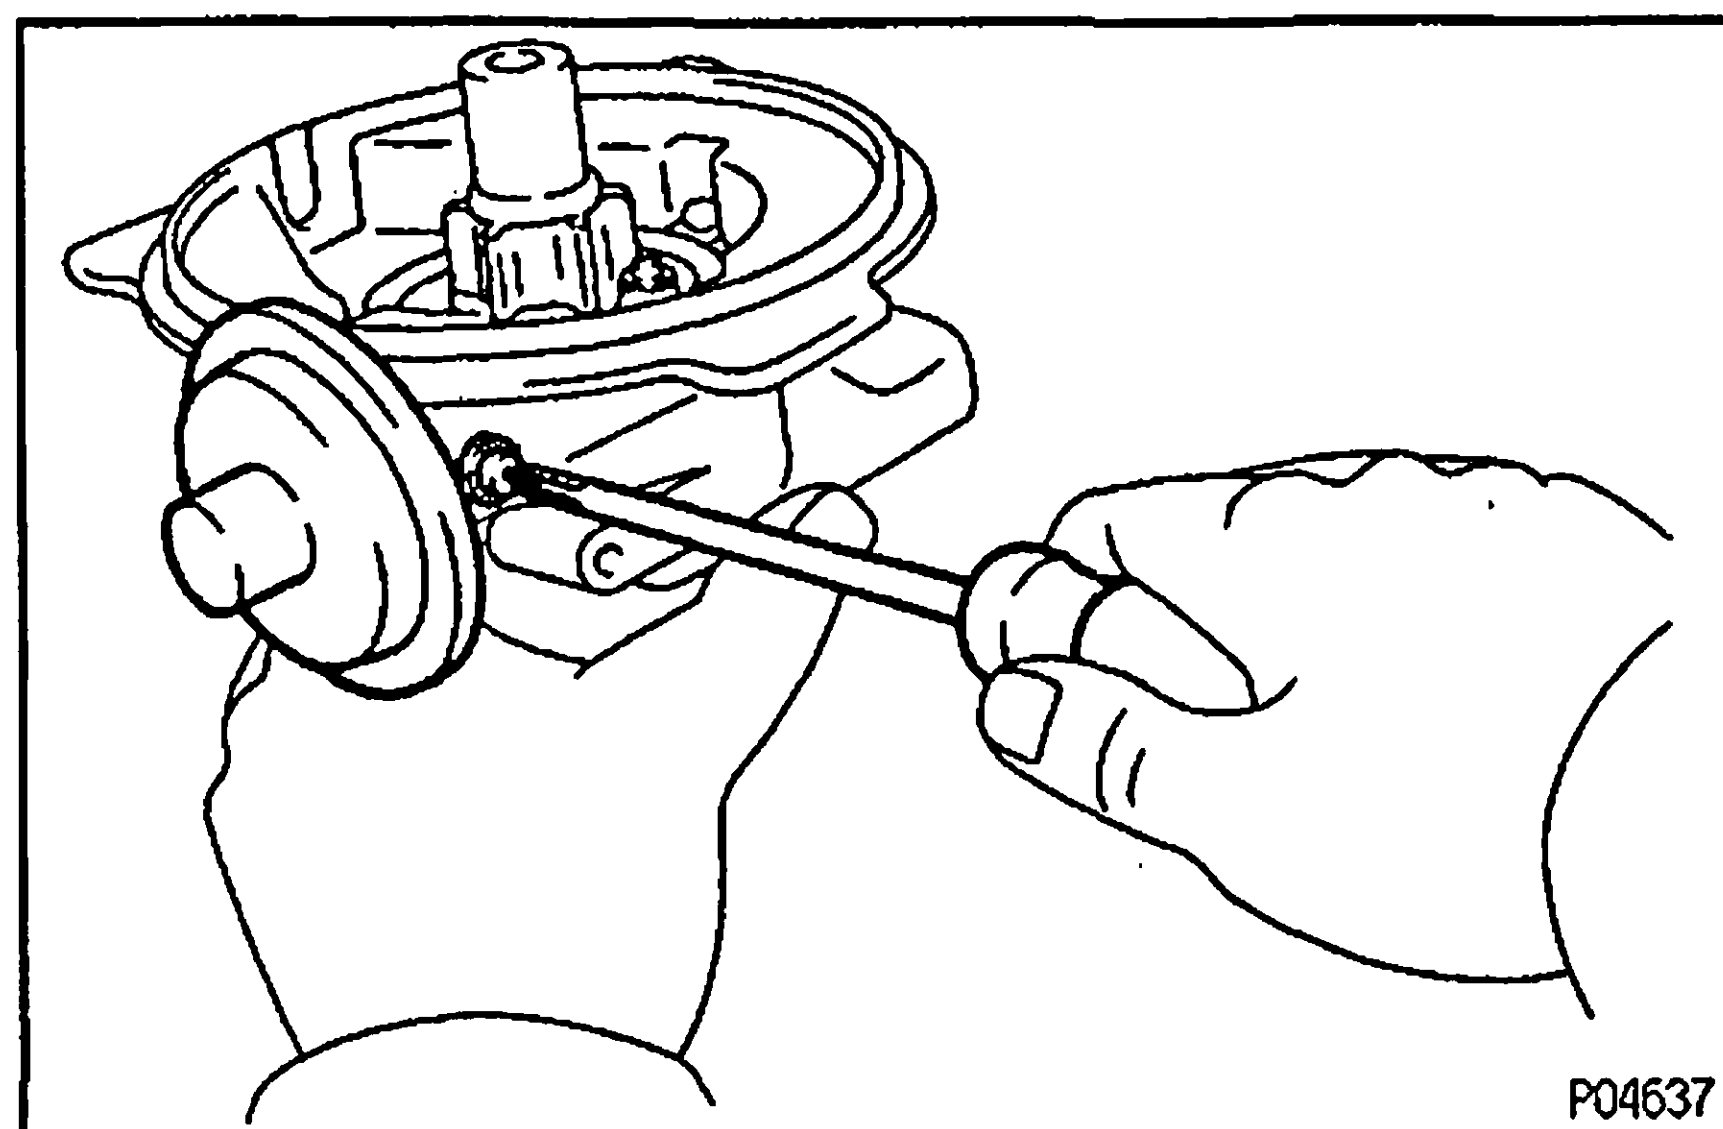


5. REMOVE BREAKER PLATE


(a) Remove the two screws and plate washers.

(b) Pull out the breaker plate.

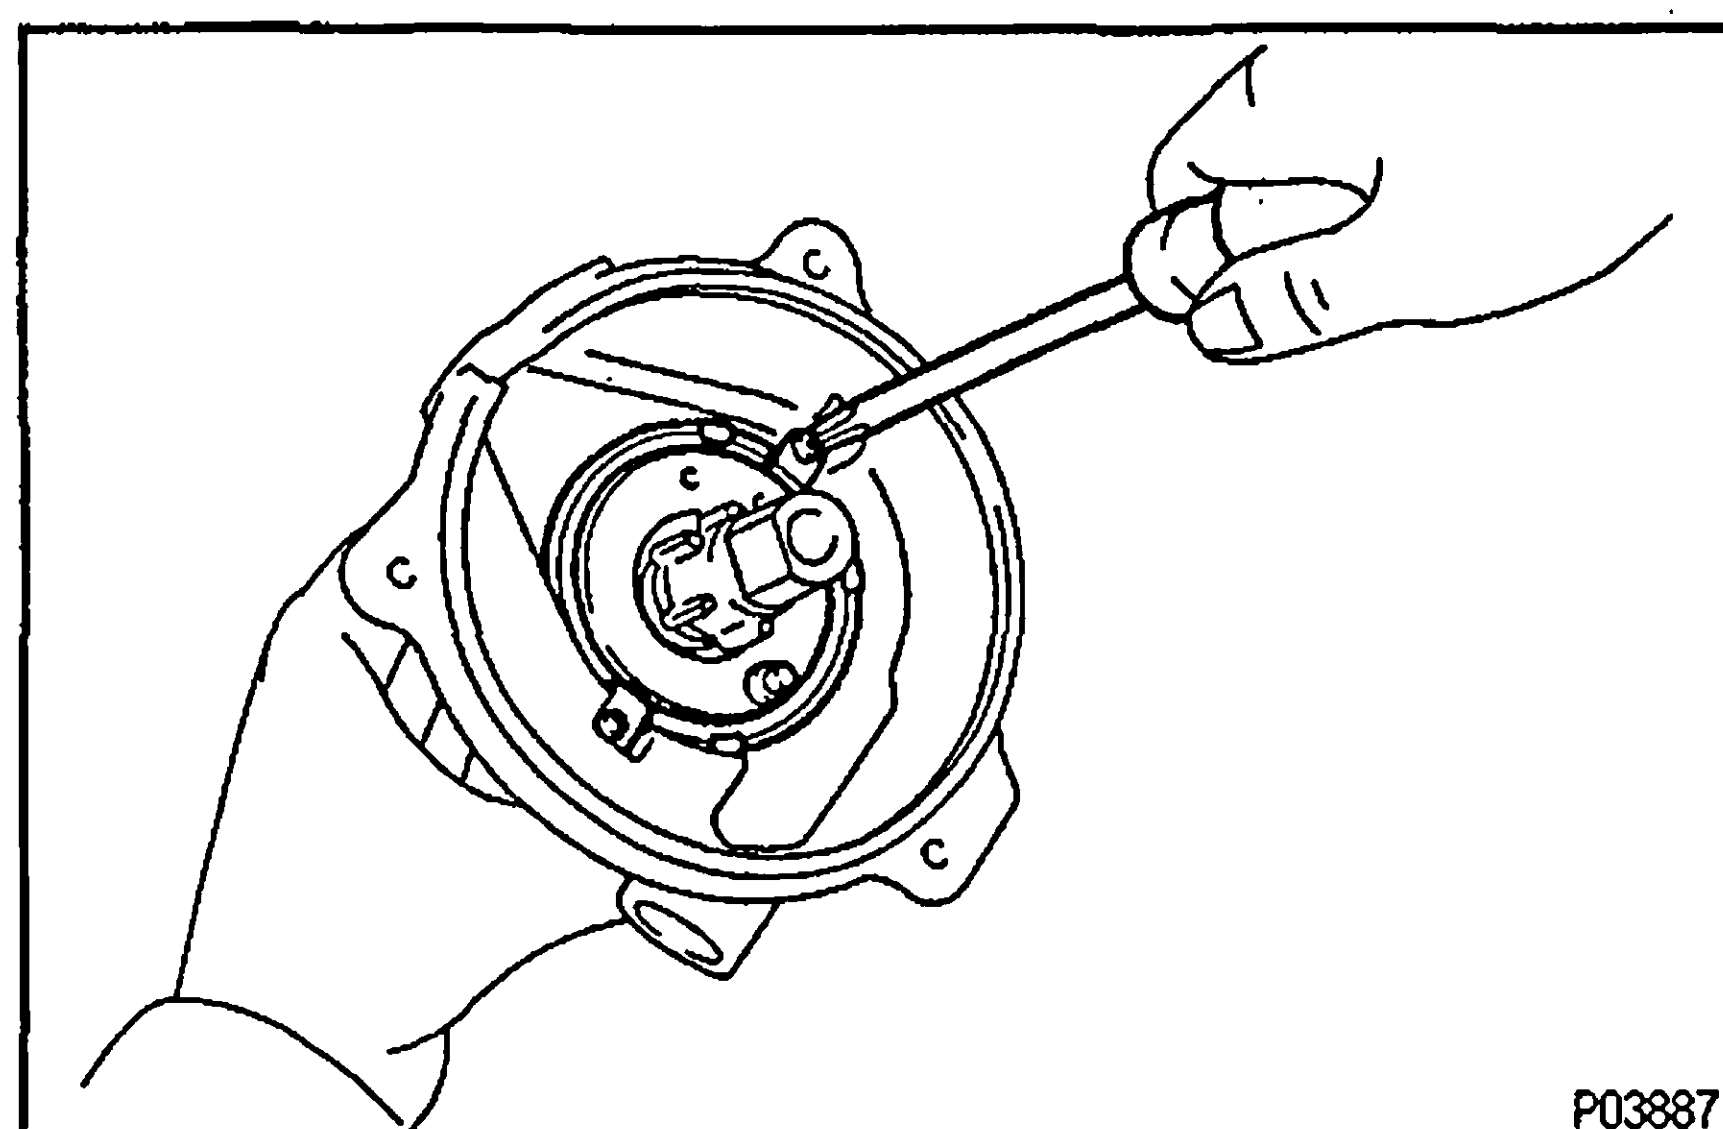


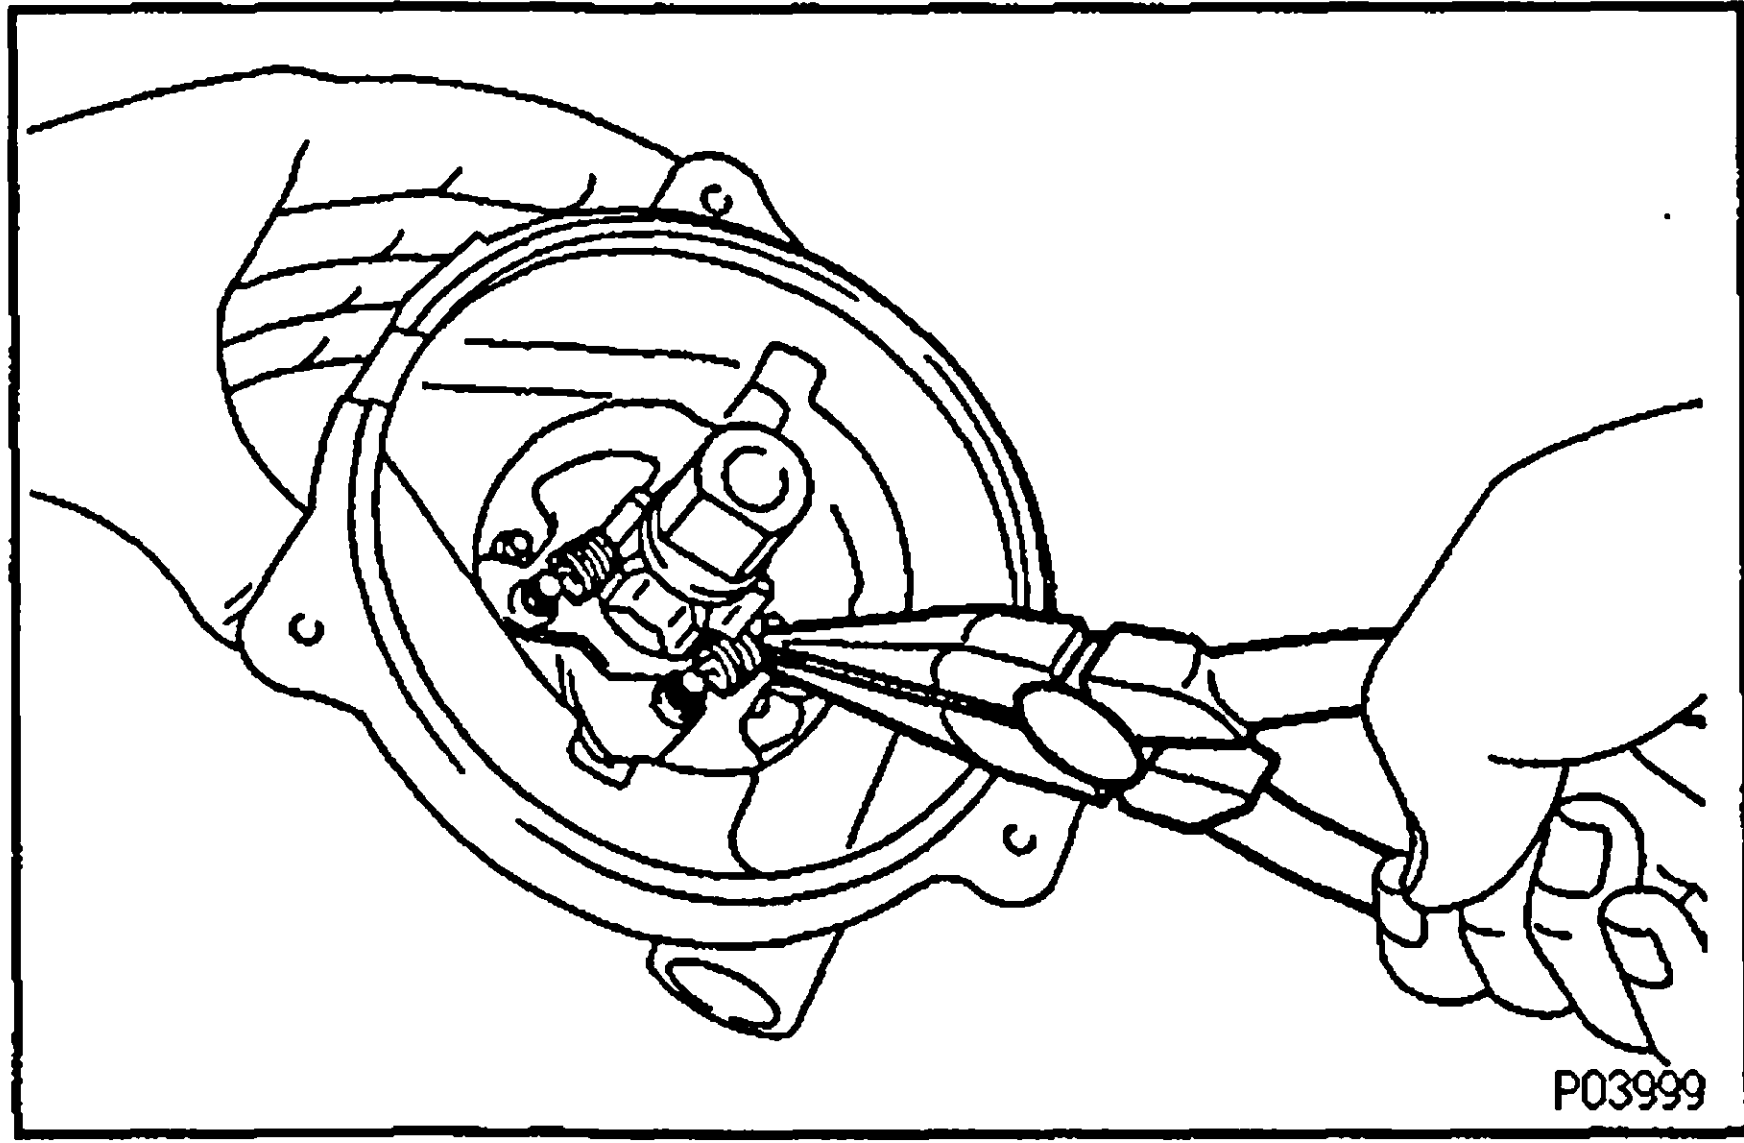**6. REMOVE GOVERNOR SPRINGS**


Using needle—nose pliers, remove the two springs.

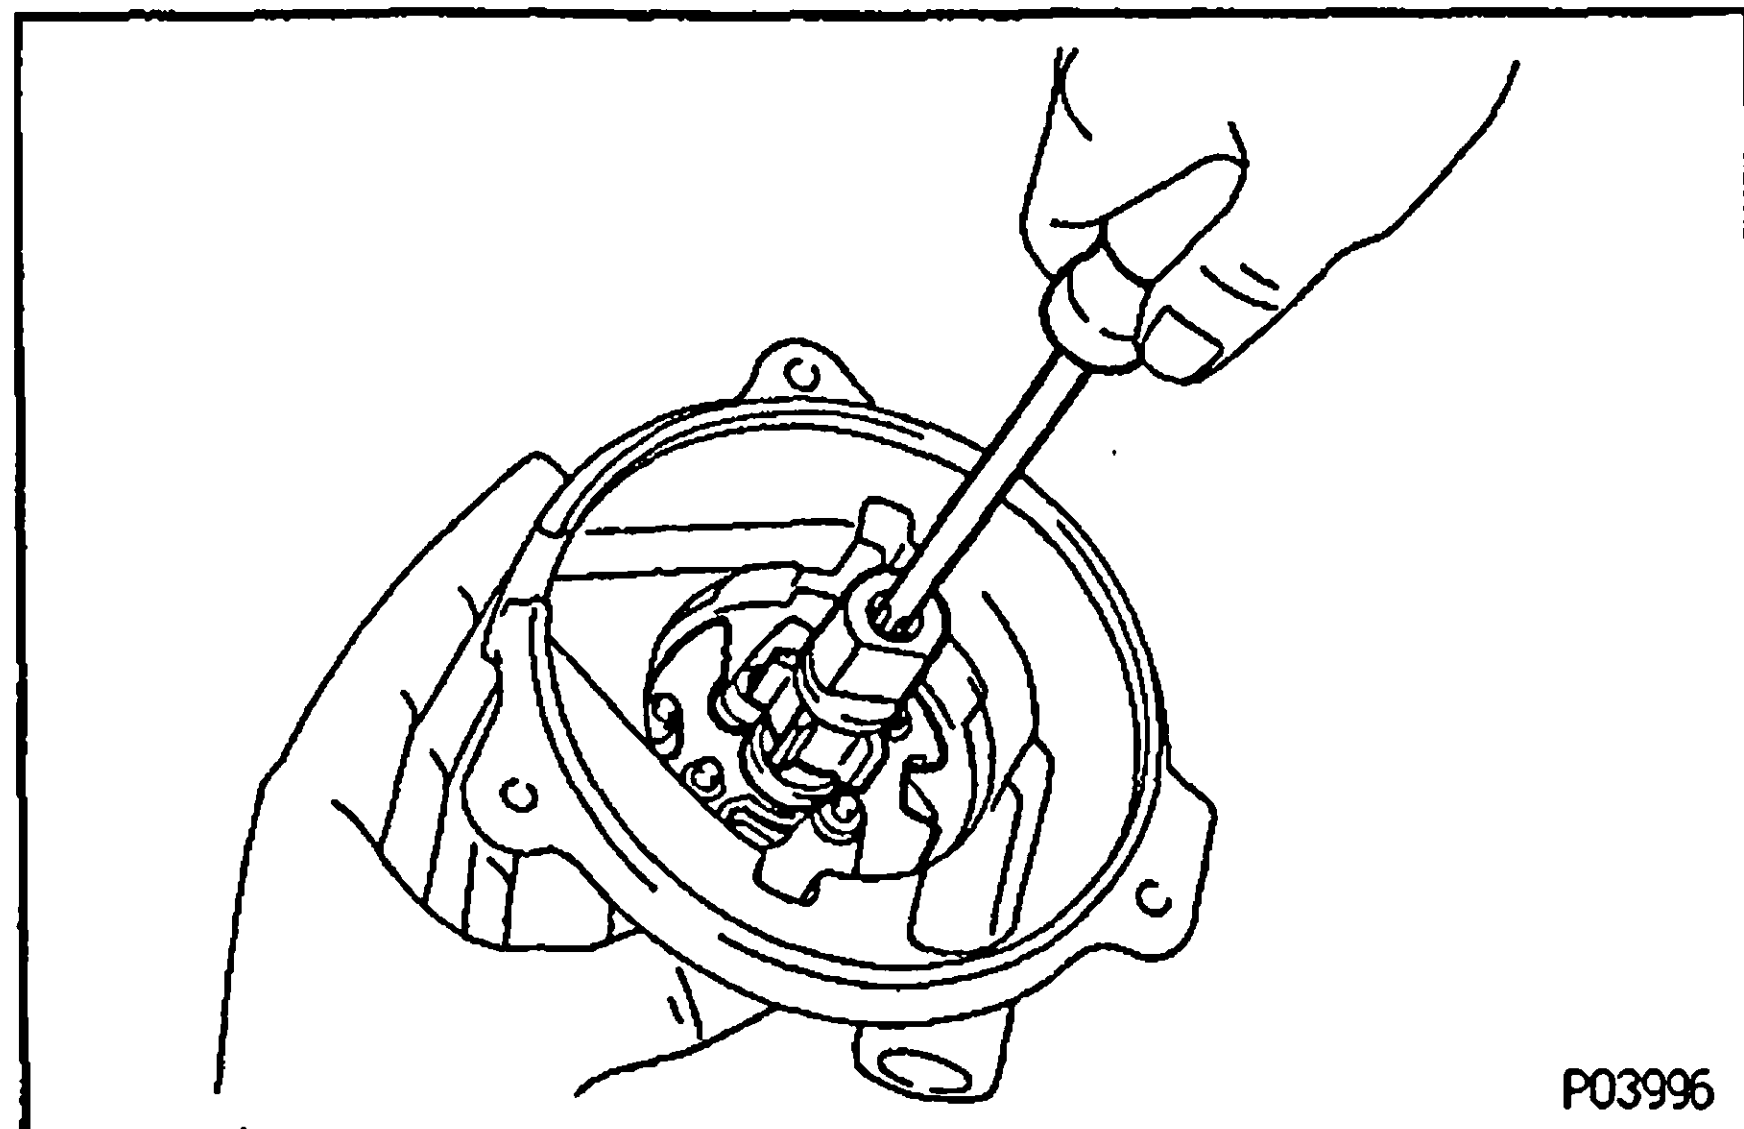**7. REMOVE SIGNAL ROTOR**

- (a) Remove the grease stopper.
- (b) Remove the screw at the top of the governor shaft.
- (c) Pull out the signal rotor.

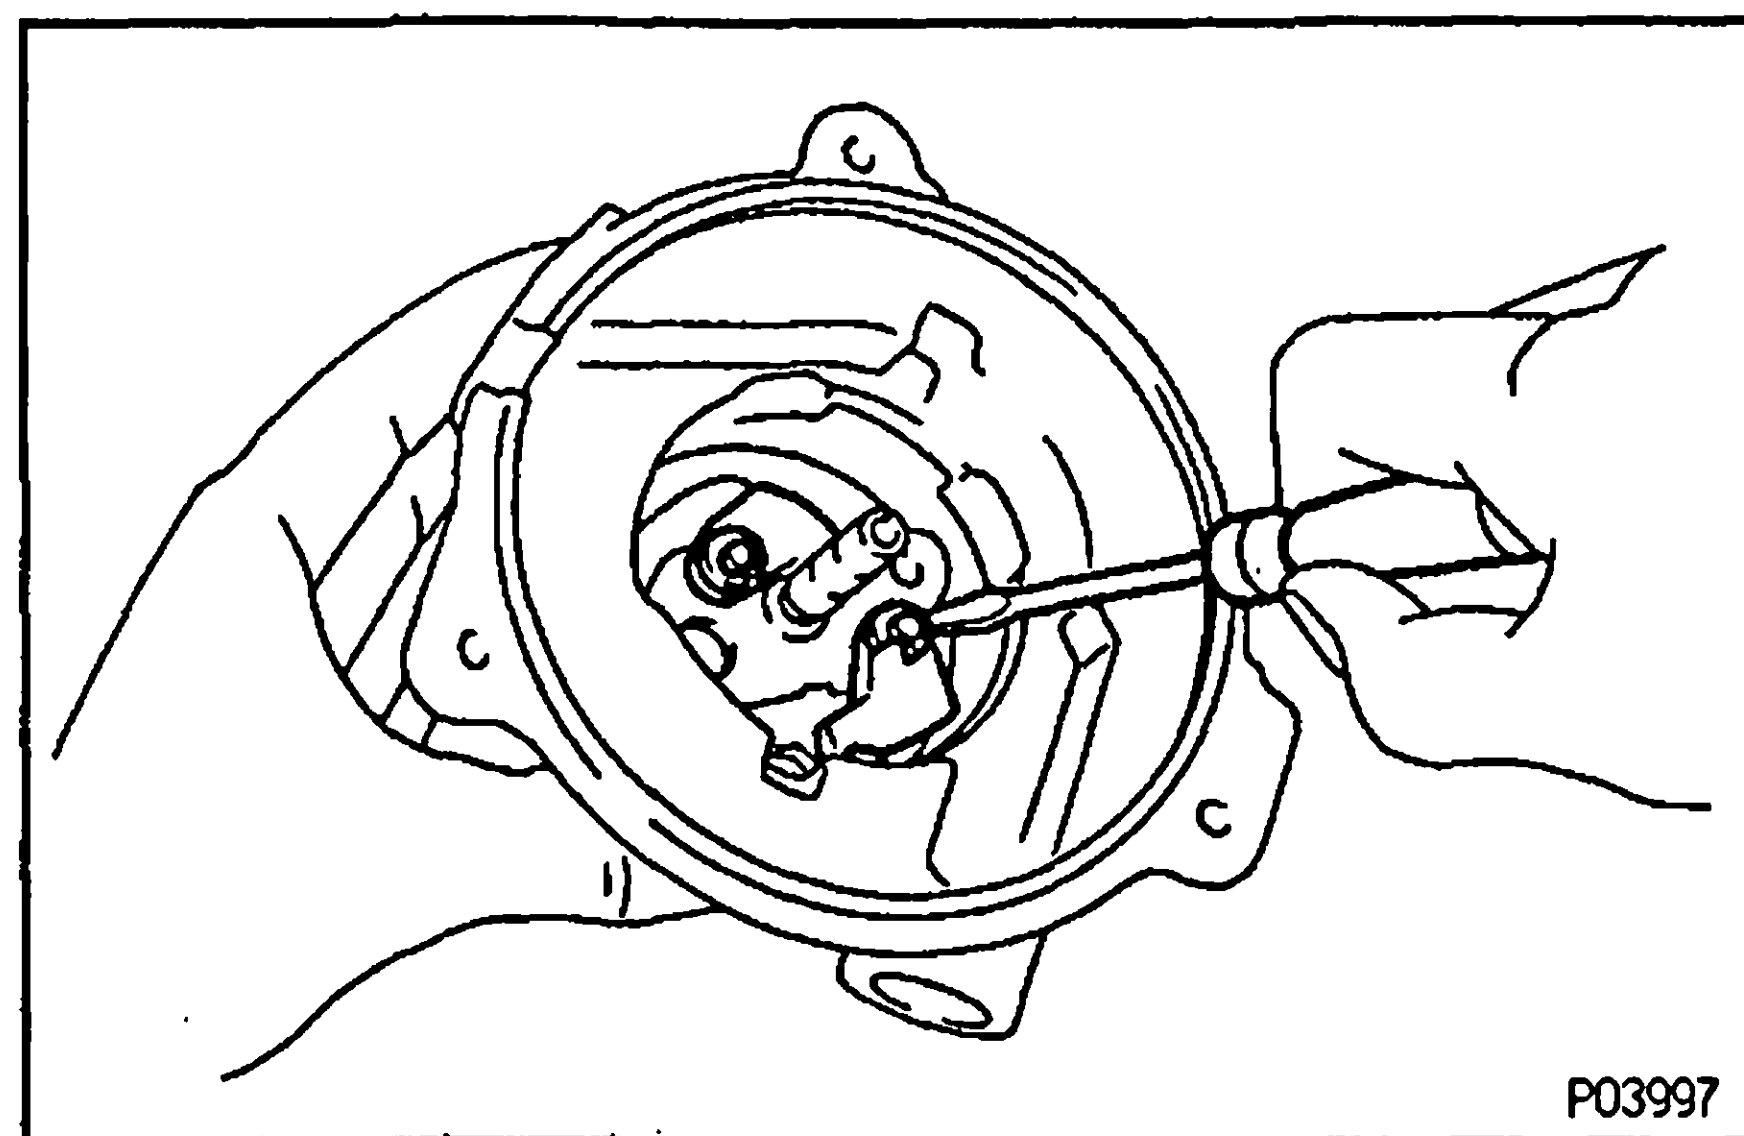
**8. REMOVE GOVERNOR WEIGHTS**

Using a small screwdriver, remove the E—rings and pull out the weights.

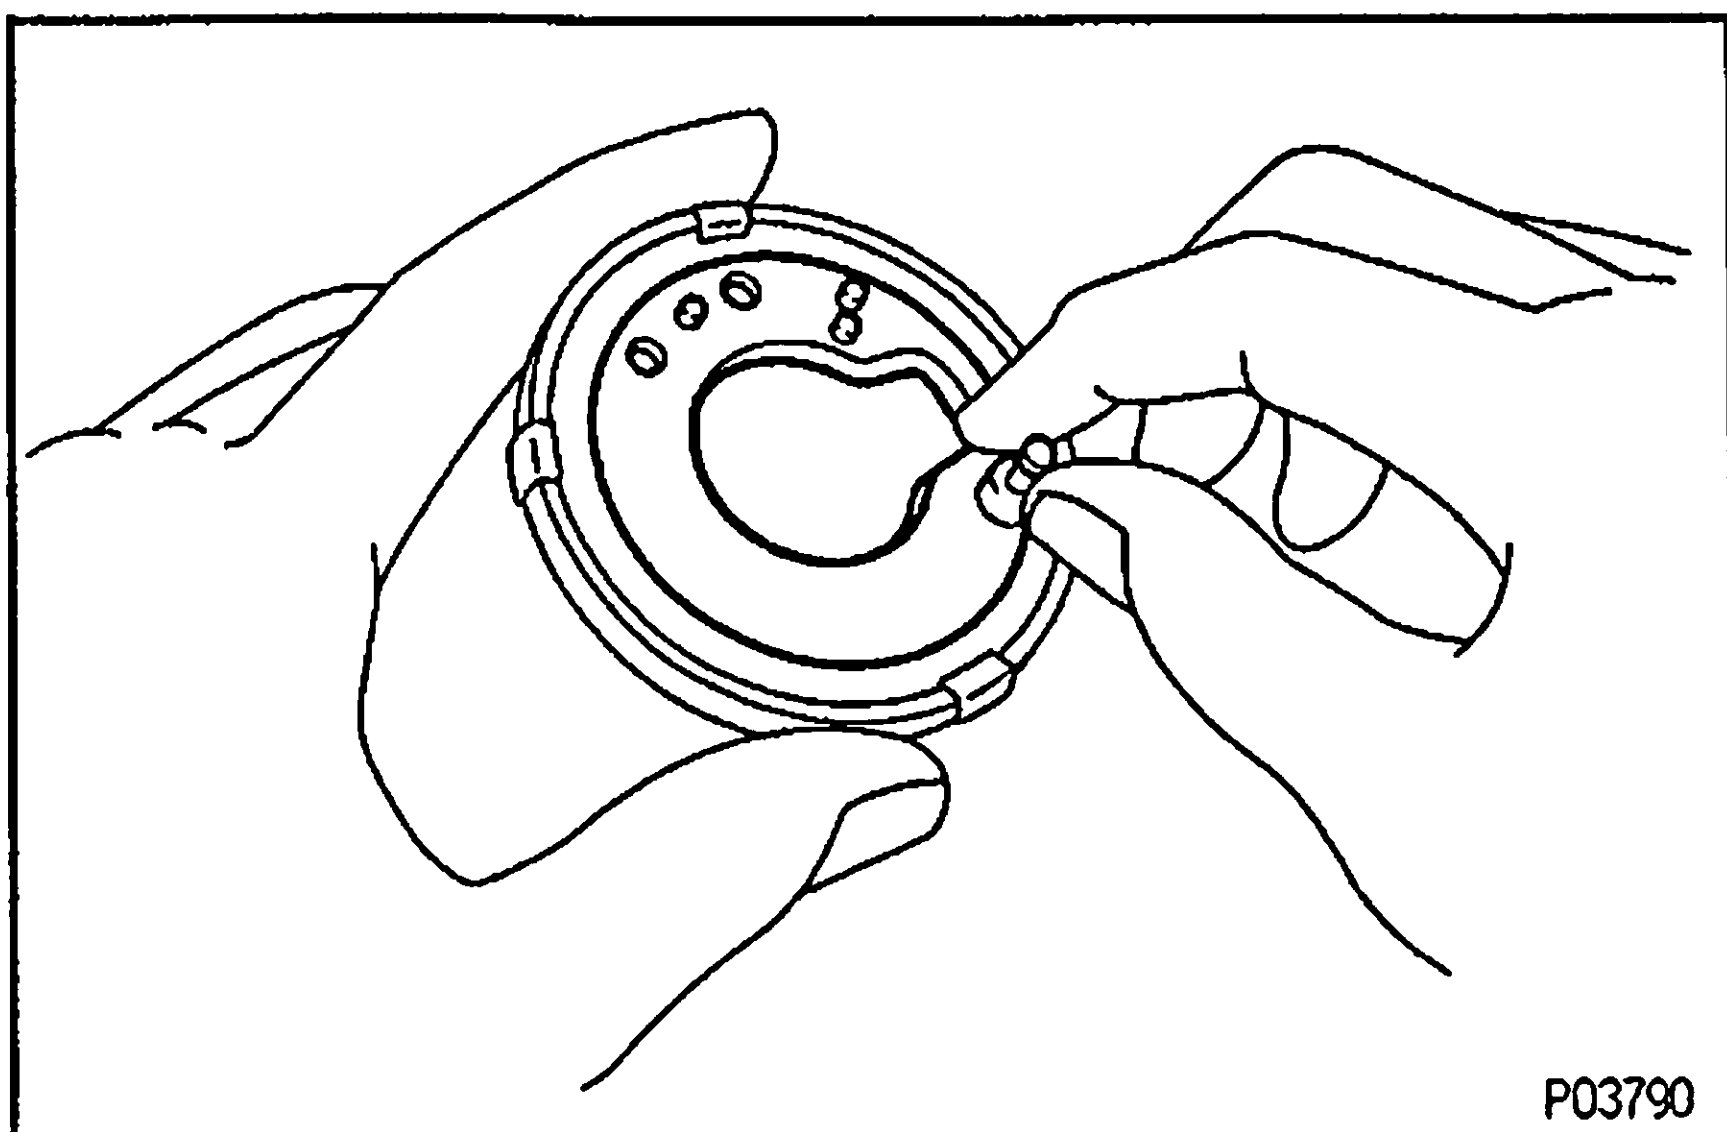DISTRIBUTOR COMPONENTS INSPECTION**1. INSPECT BREAKER PLATE**


Turn the breaker plate and check that it moves with a slight drag.

If it sticks or strongly resists, replace the breaker plate.

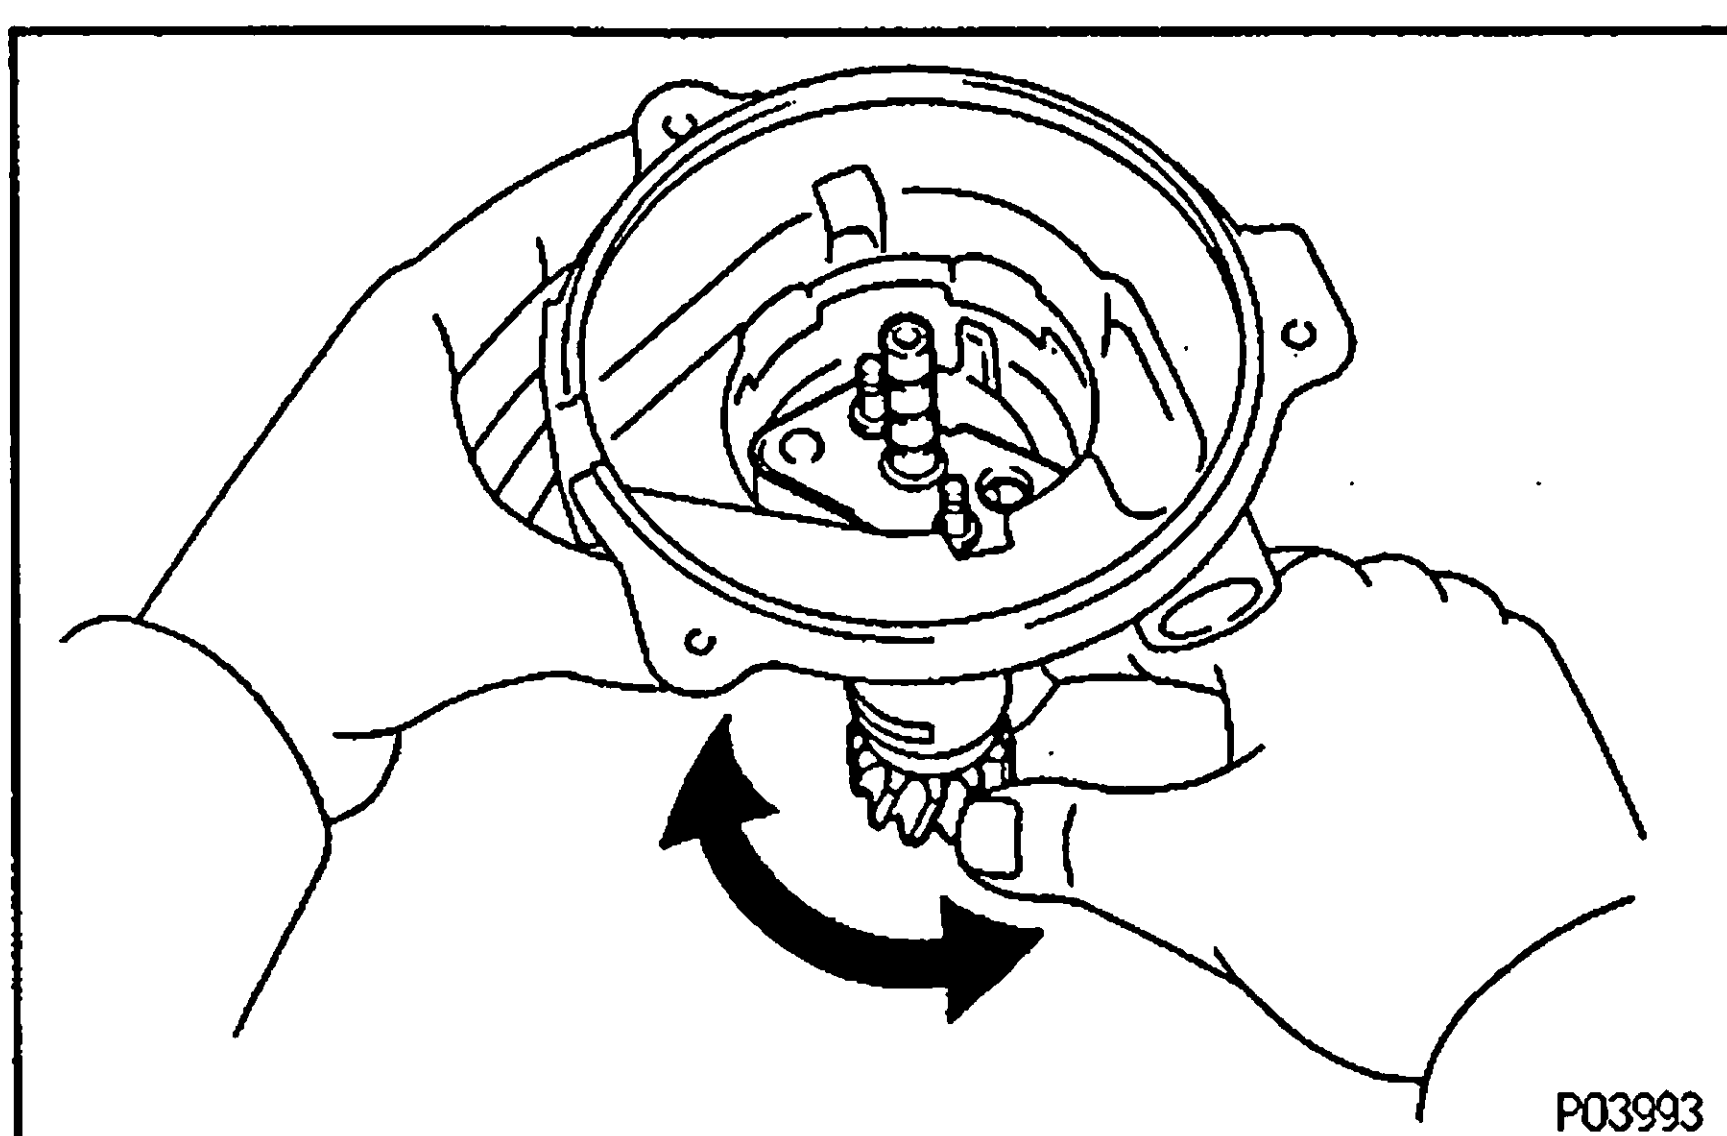**2. INSPECT GOVERNOR SHAFT**

Turn the governor shaft and check that it is not rough or worn.

If it feels rough or worn, replace the distributor housing.

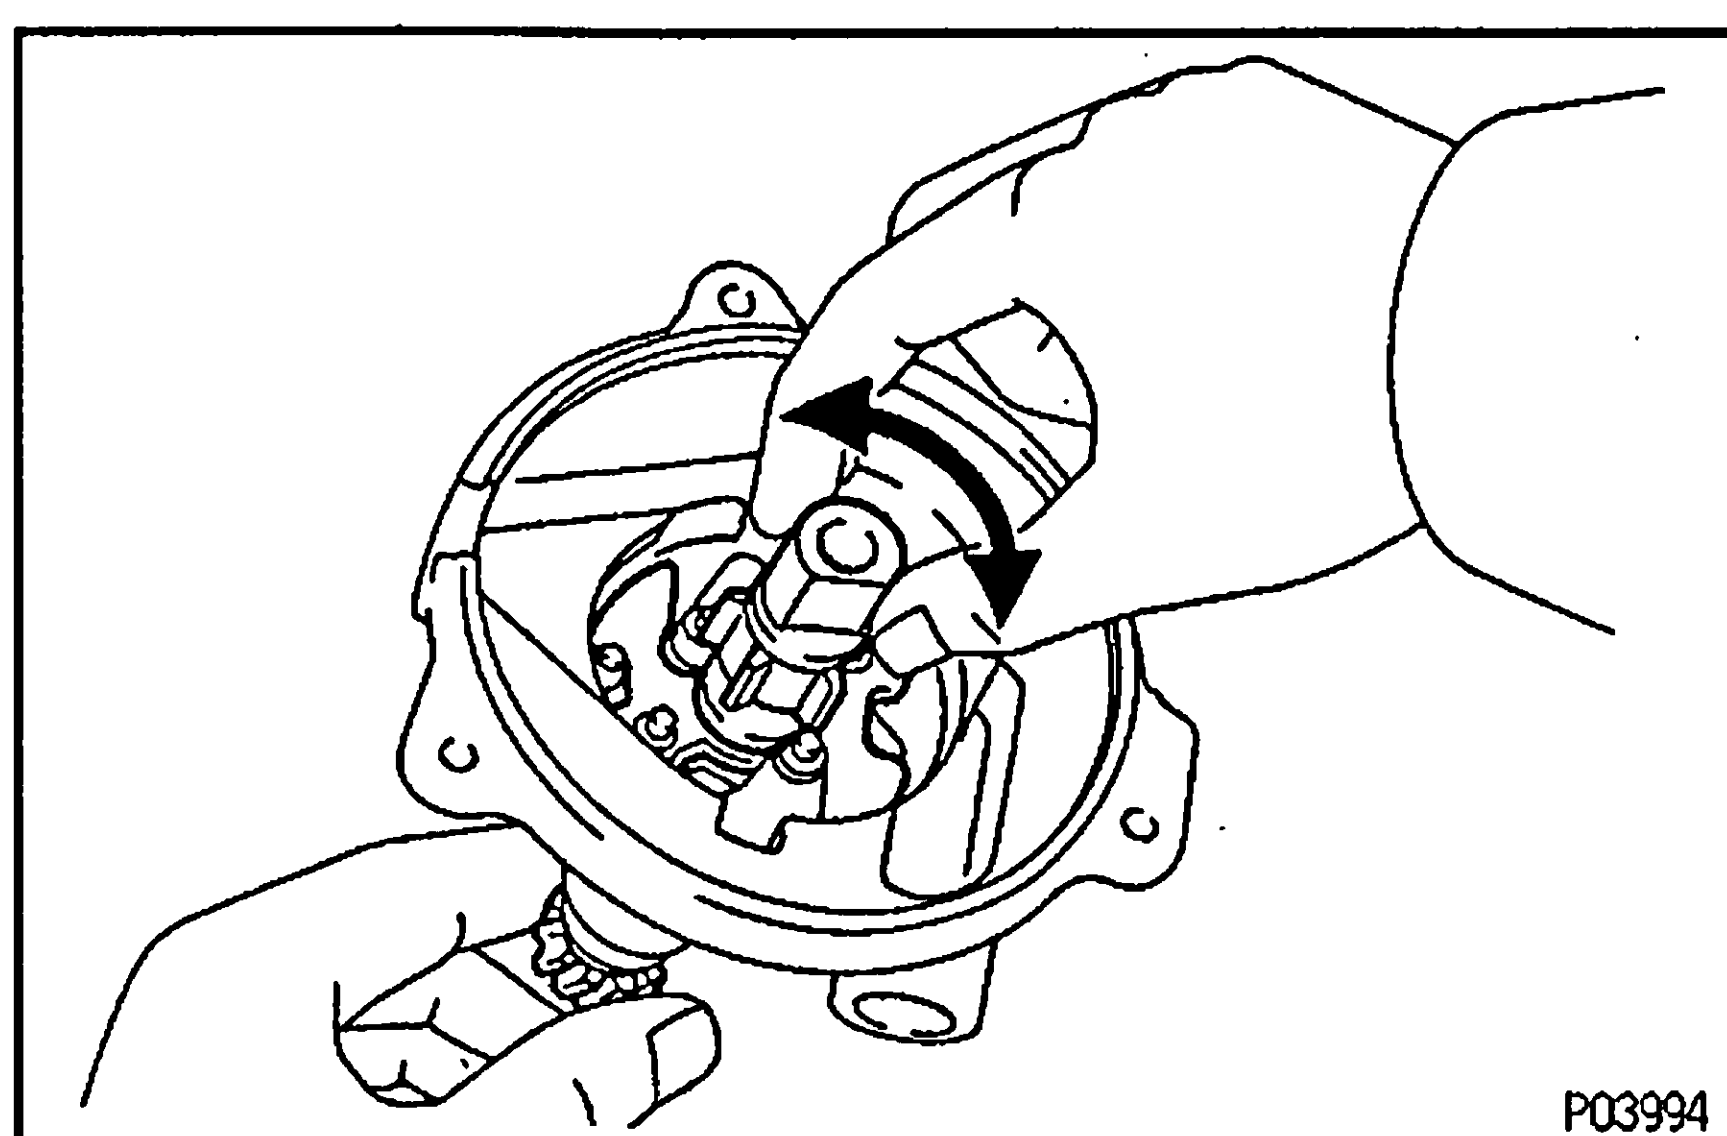**3. INSPECT SIGNAL ROTOR**

Temporarily install the signal rotor to the governor shaft and check that they fit together correctly.


If necessary, replace the signal rotor or distributor housing.

DISTRIBUTOR ASSEMBLY


(See page IG-17)

1. INSTALL GOVERNOR WEIGHTS


- (a) Install the bushing to the governor weight.

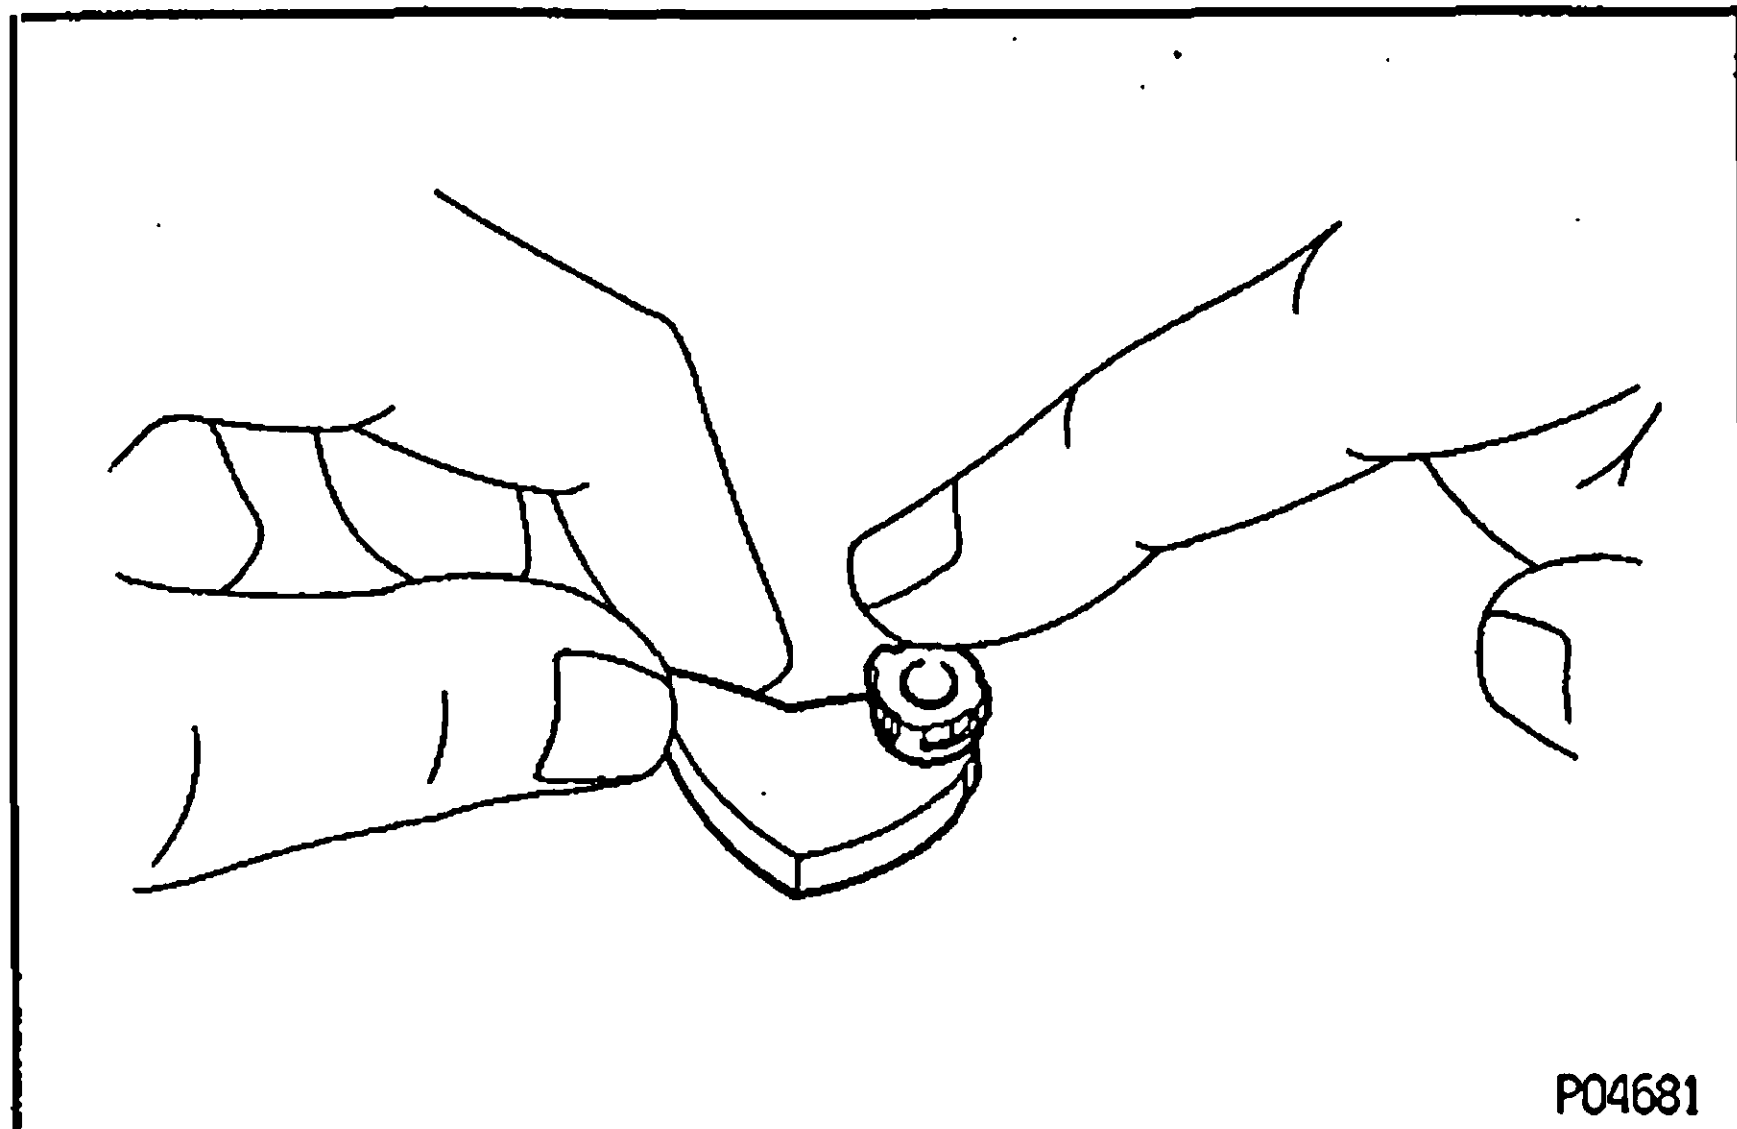


- (b) Lightly coat the pivot pin of the governor shaft with high-temperature grease.
(c) Slide the weights over the small shafts.
(d) Using needle-nose pliers, install the E-rings.

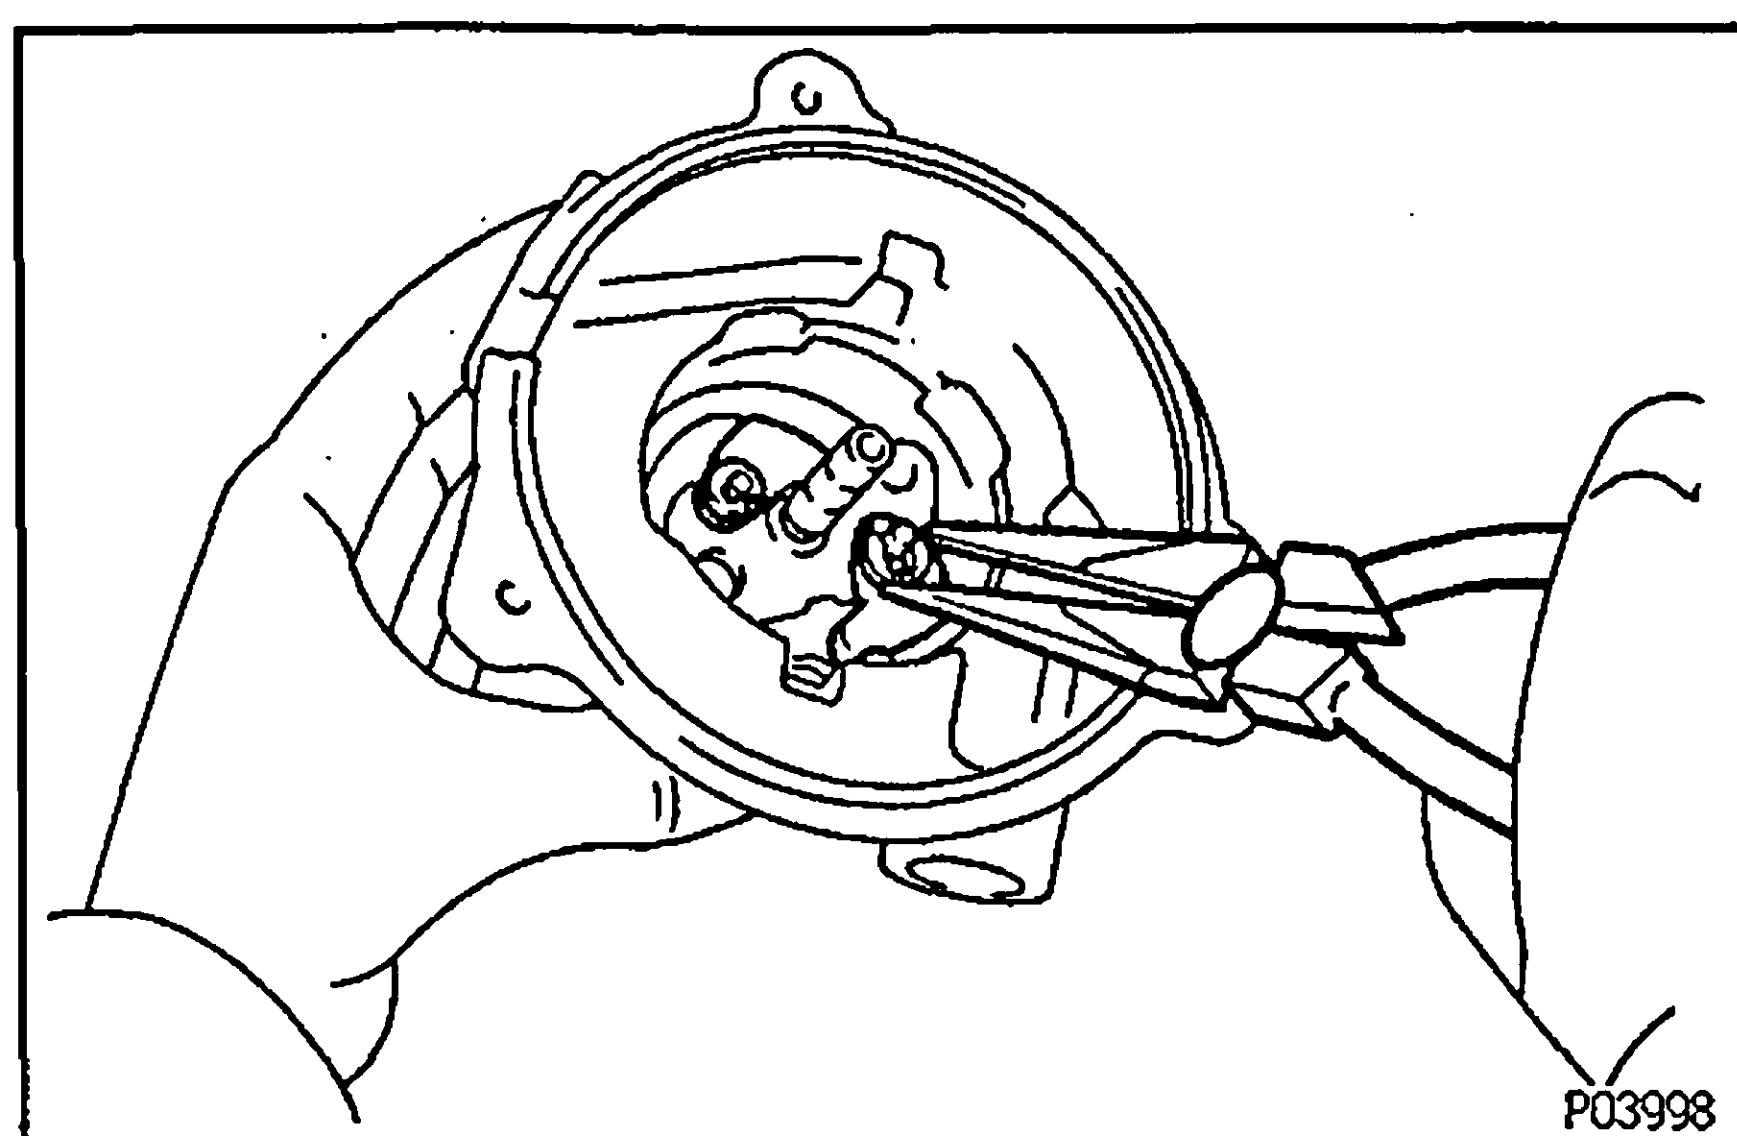**2. INSTALL SIGNAL ROTOR**


- (a) Lightly coat the governor shaft with high-temperature grease.
(b) Align the cutout of the signal rotor with the protrusion of the gear.

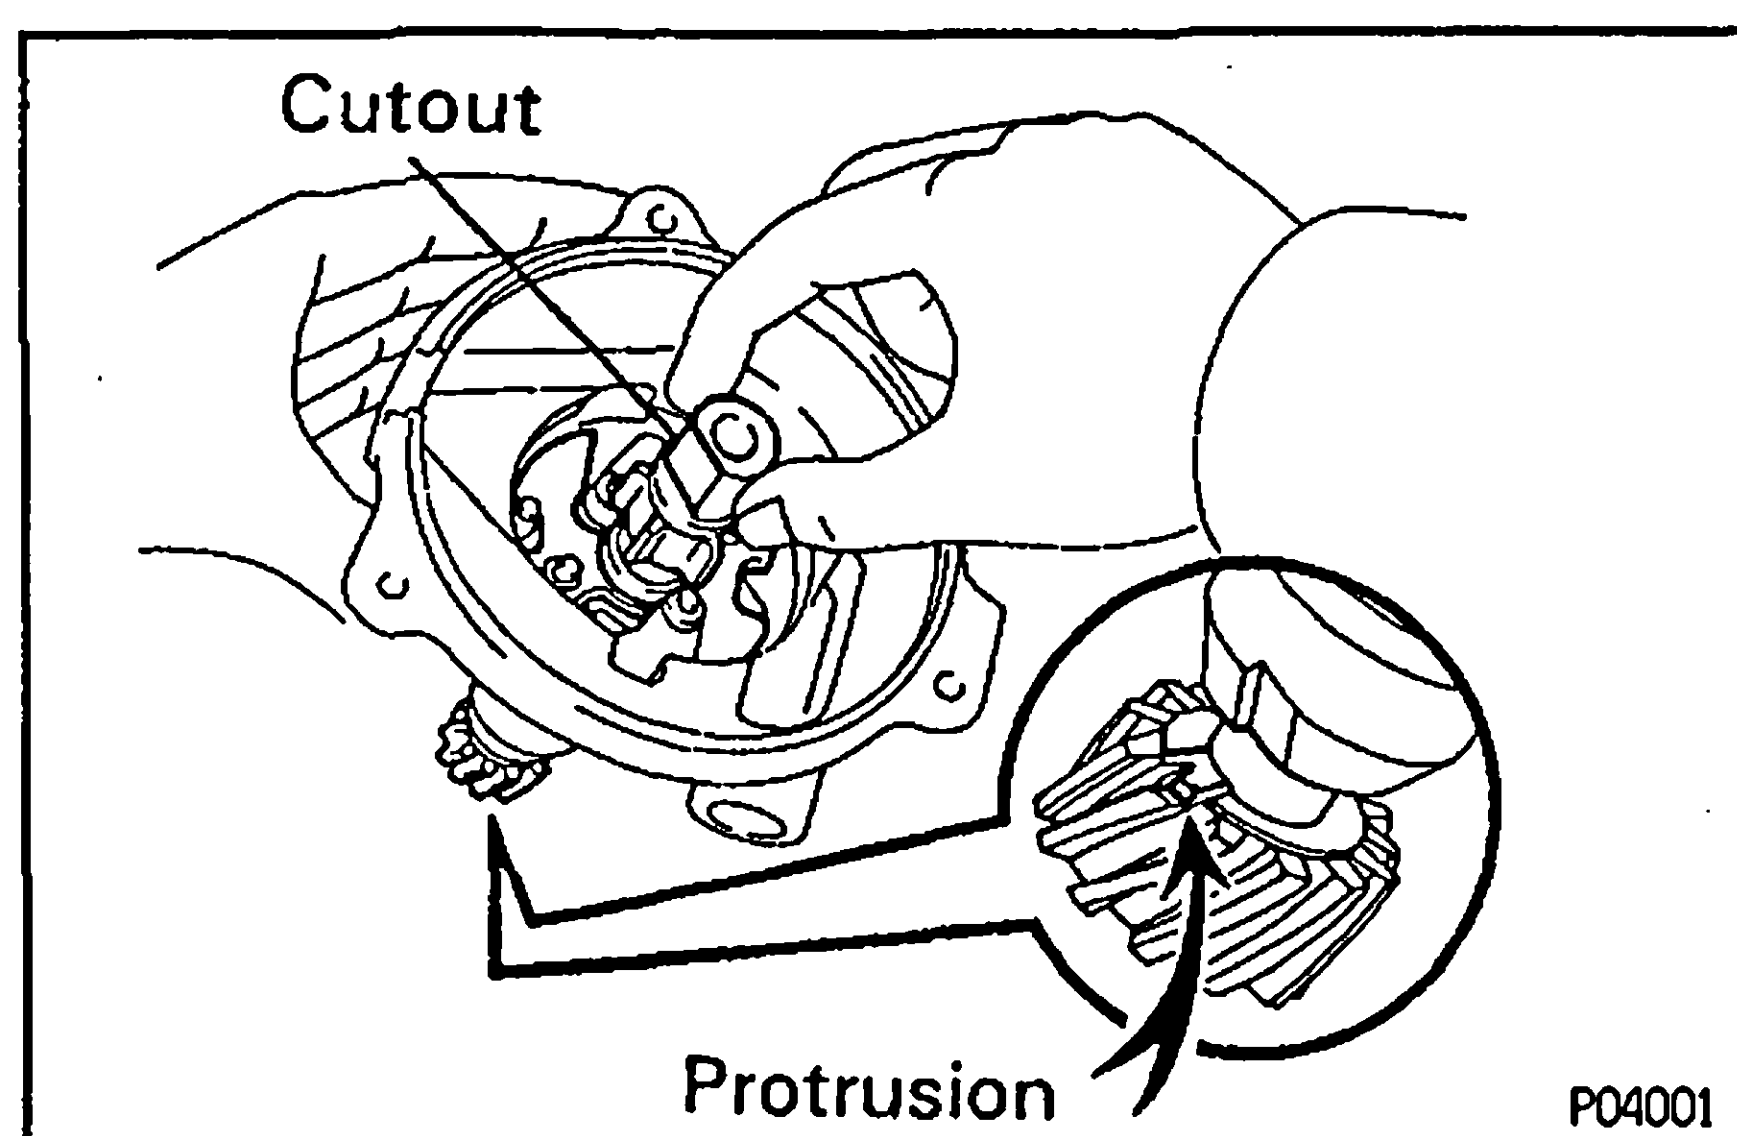


- (c) Install the screw.

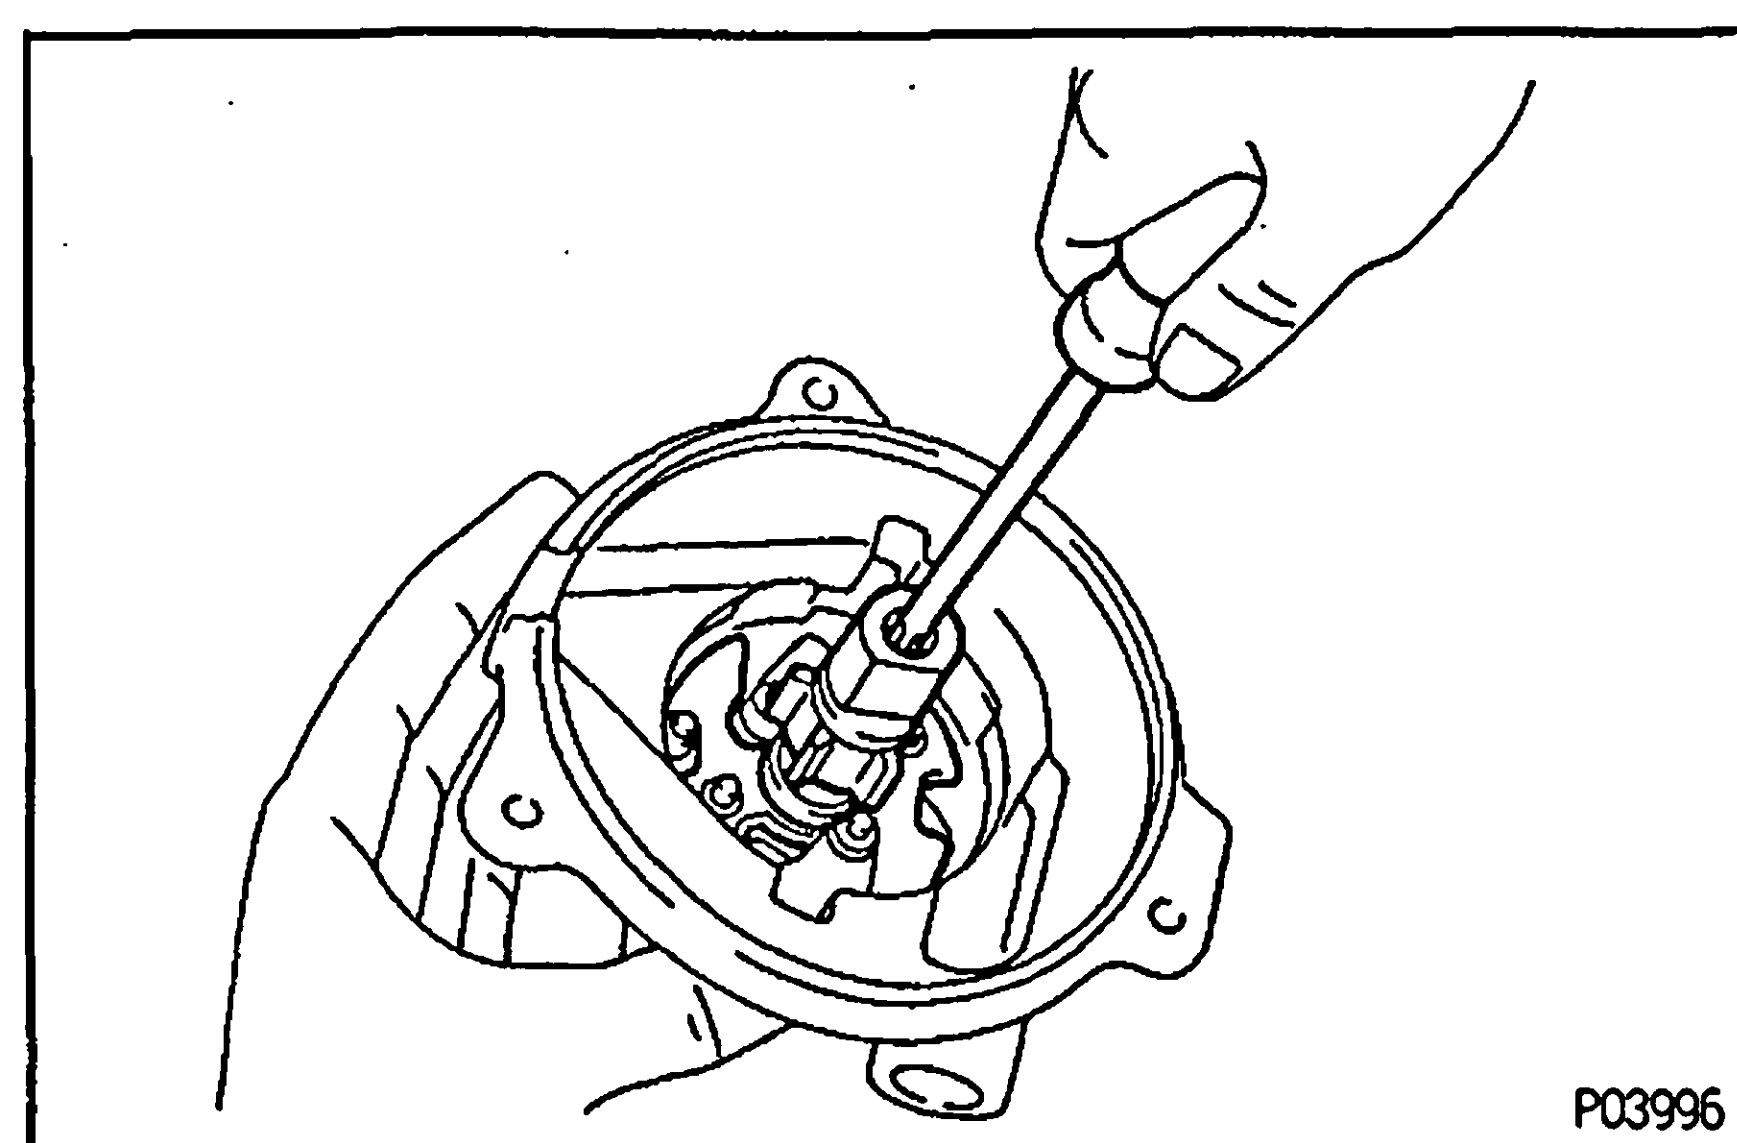


- (d) Pack high-temperature grease into the signal rotor.
(e) Push on the grease stopper with your finger.

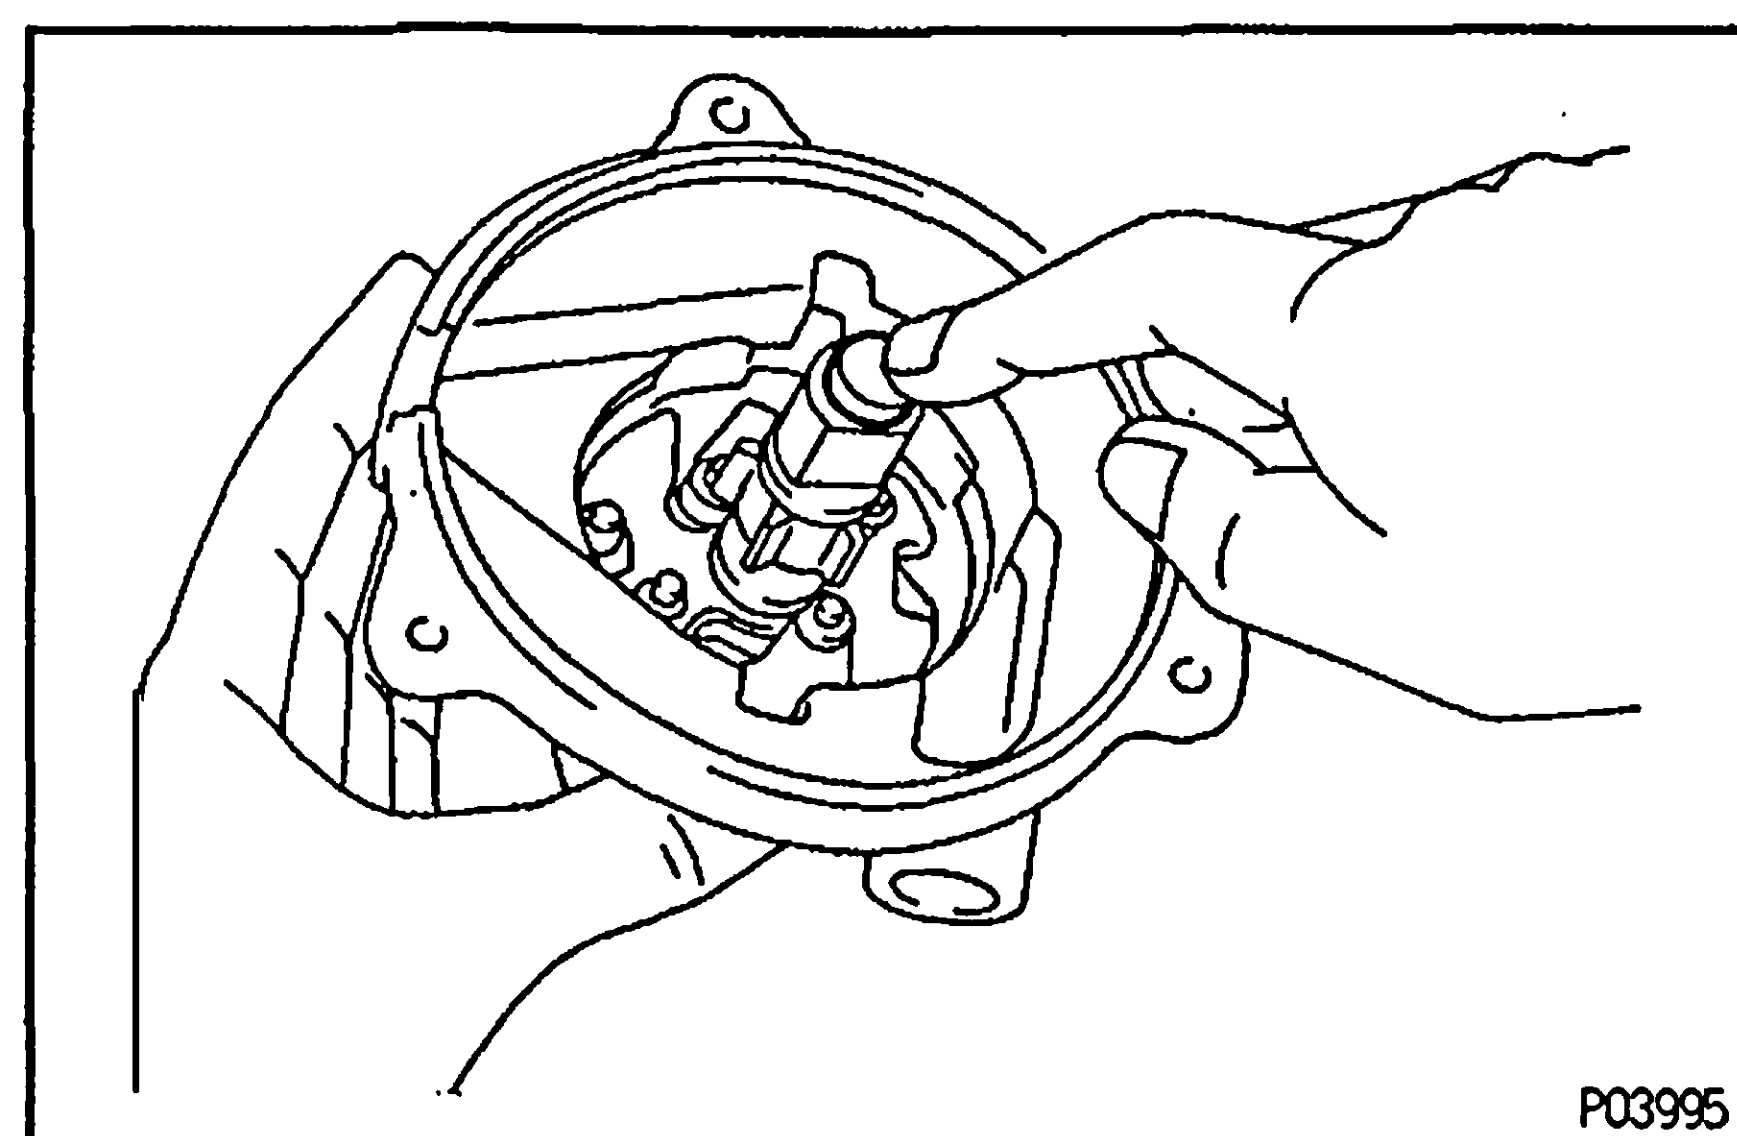

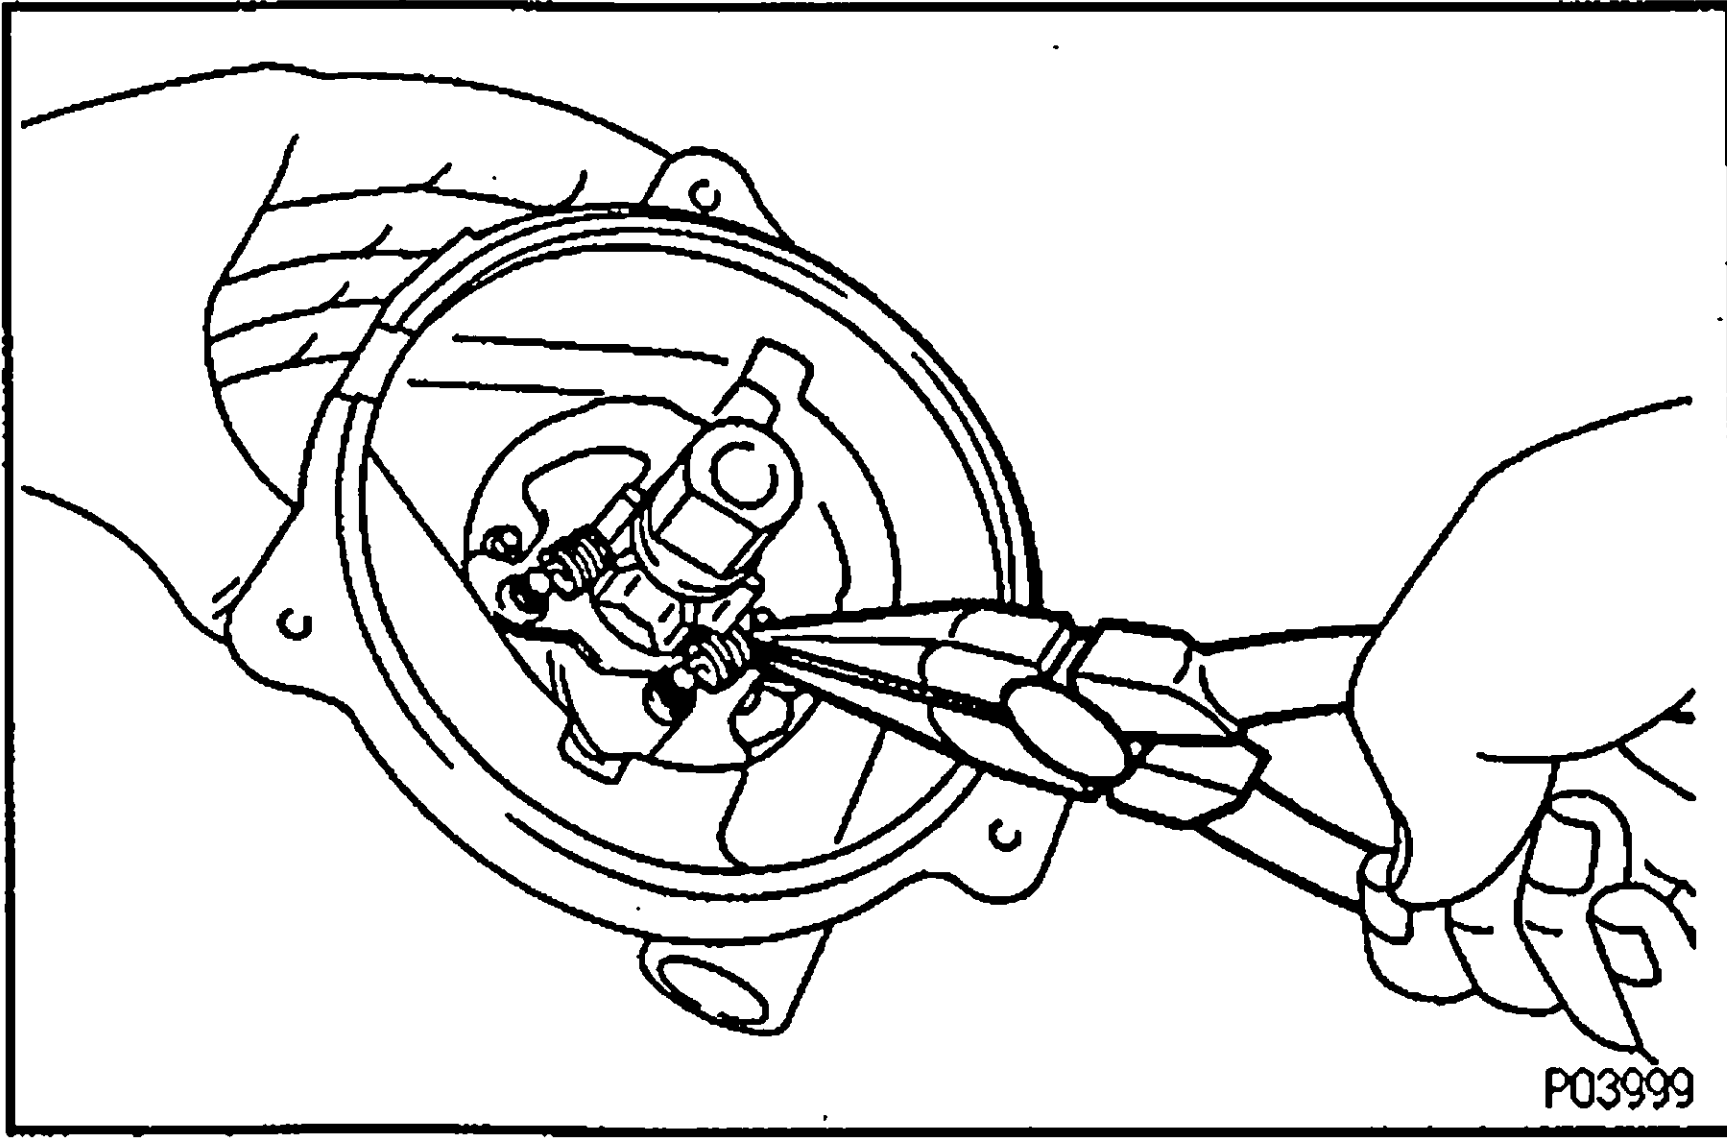


3. INSTALL GOVERNOR SPRINGS

Using needle—nose pliers, install the two springs.

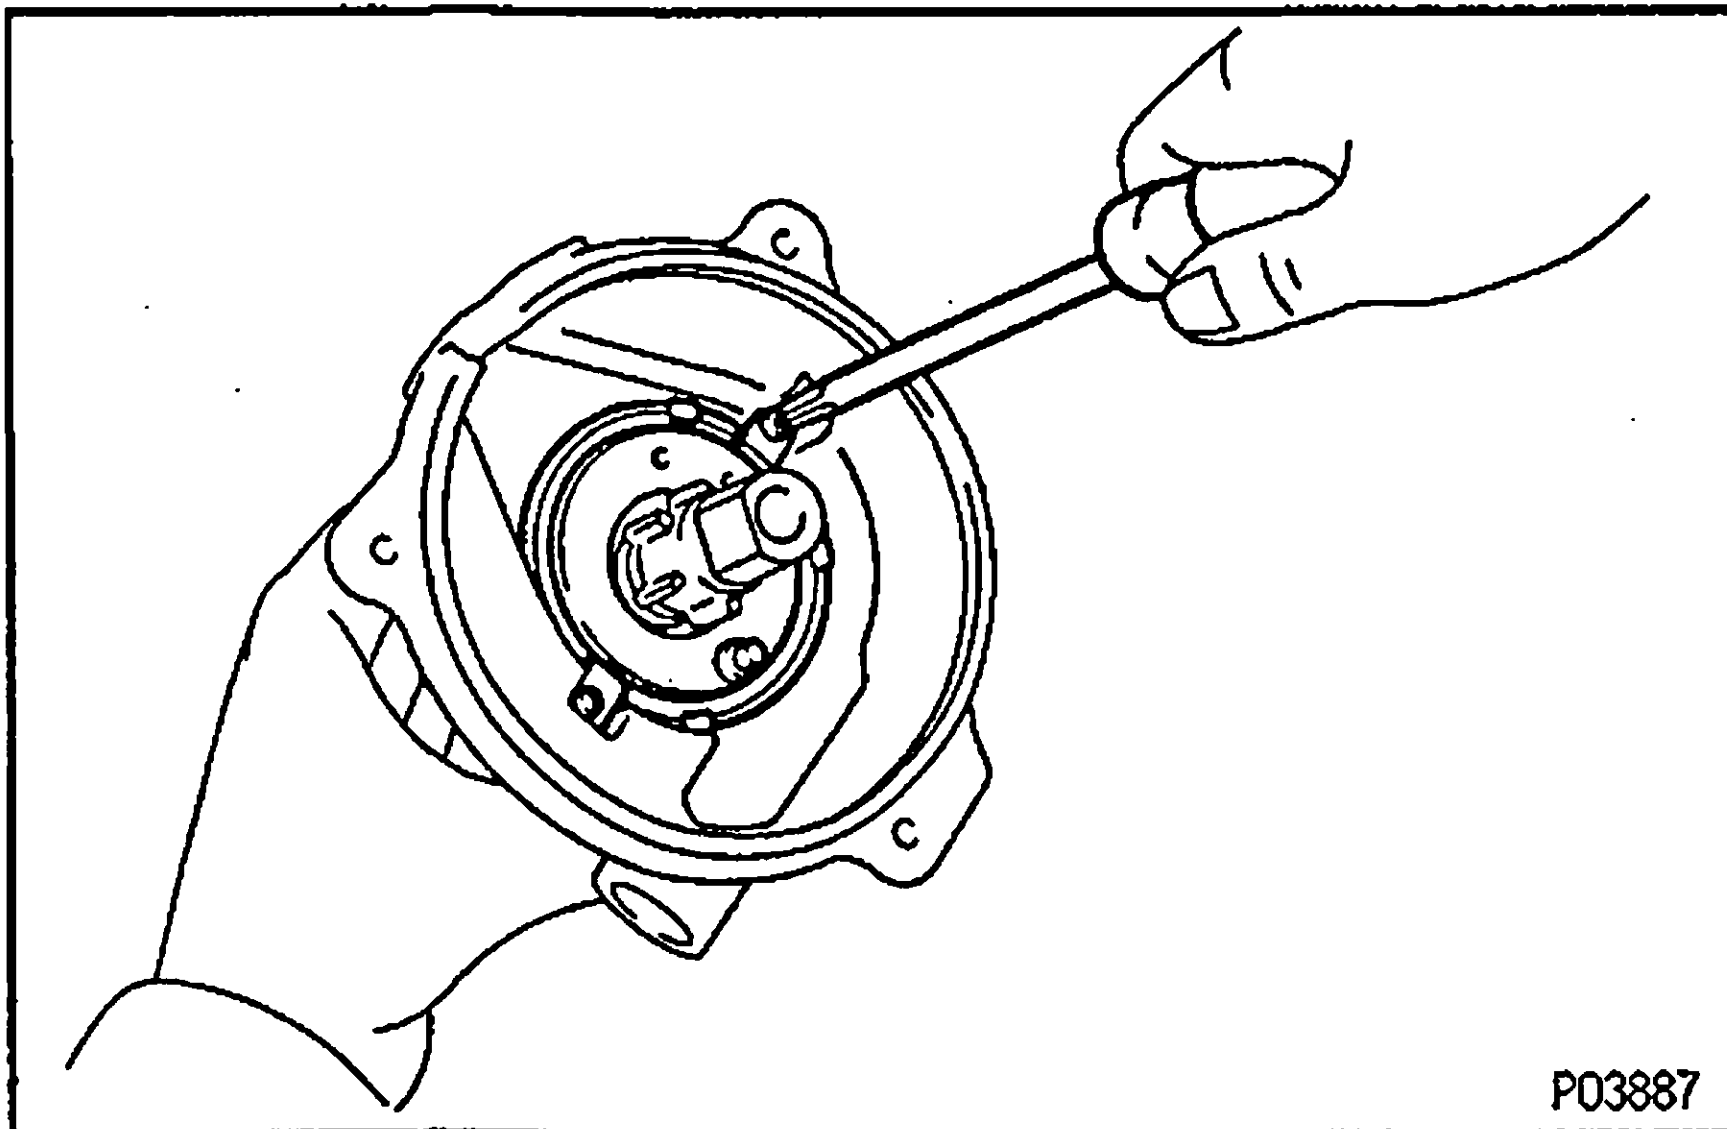


4. INSTALL BREAKER PLATE

- (a) Align the four clips on the breaker plate with cutout parts of the housing, and install the breaker plate.
- (b) Secure the breaker plate with the two screws and plate washers.

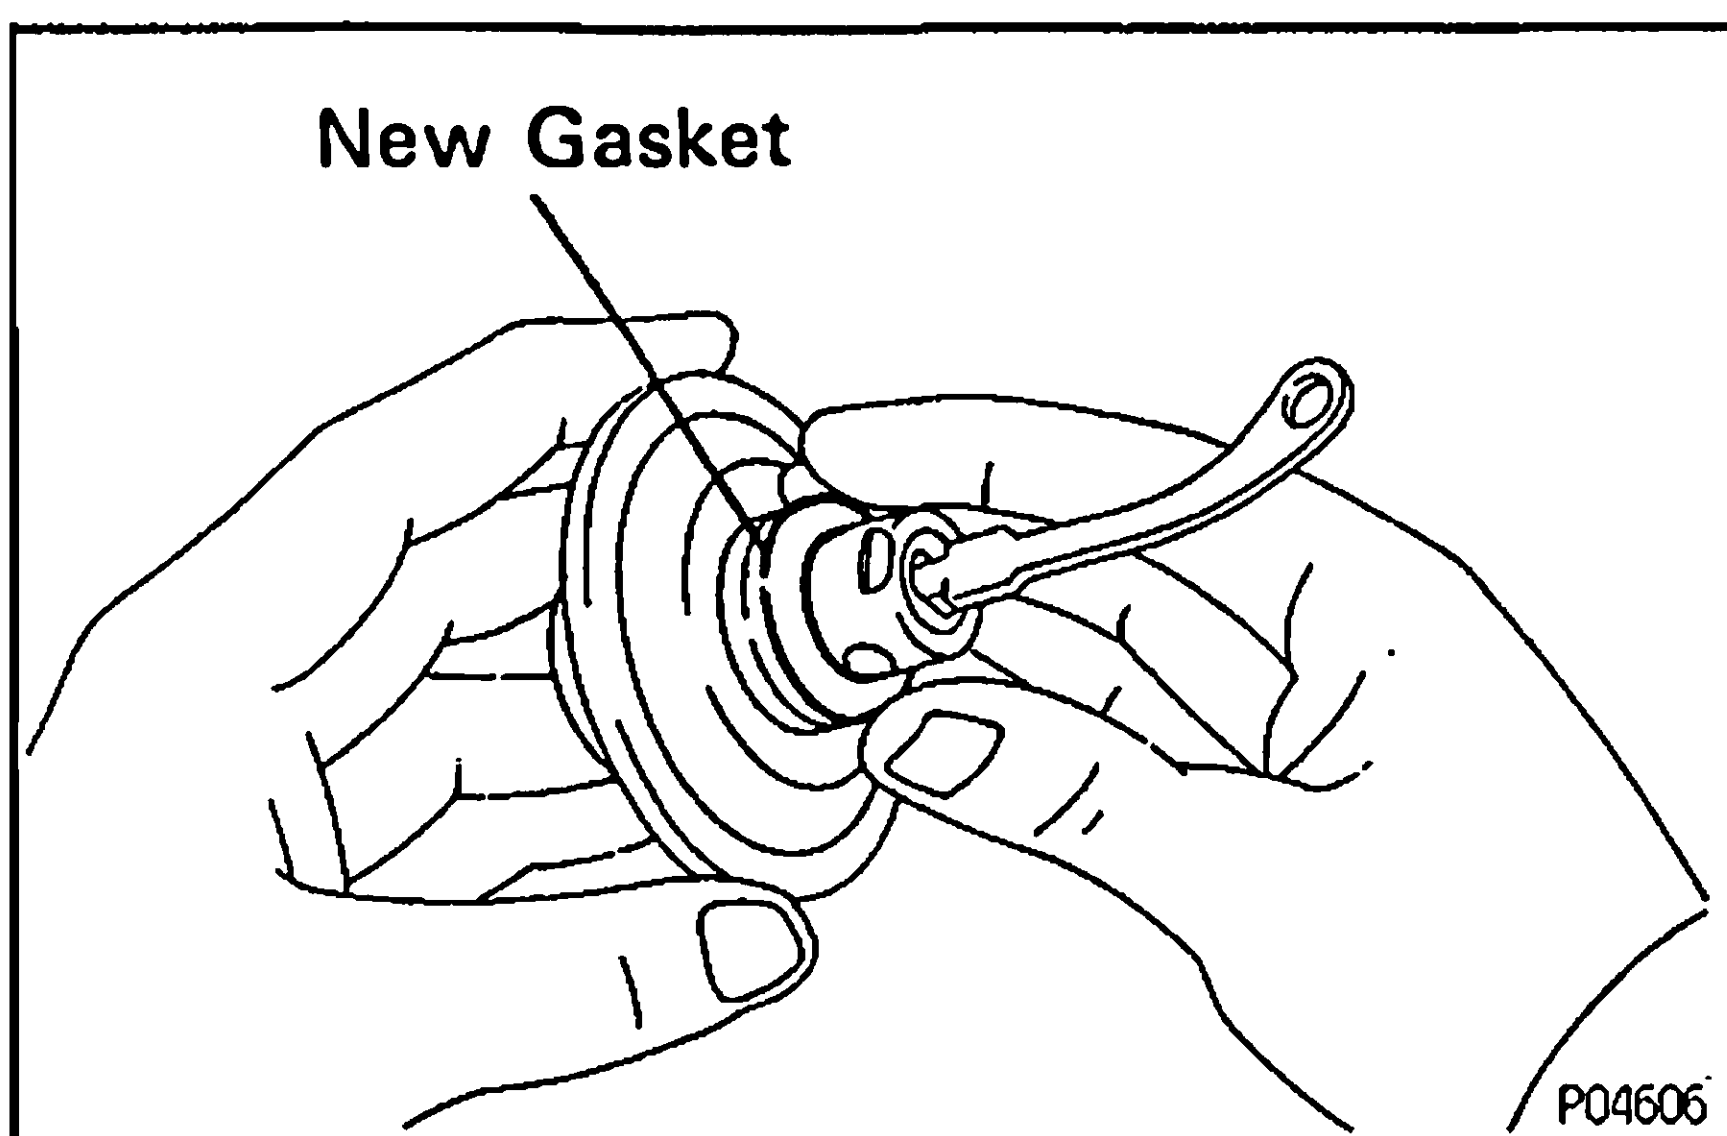


5. INSTALL VACUUM ADVANCER


- (a) Install a new gasket to the advancer.

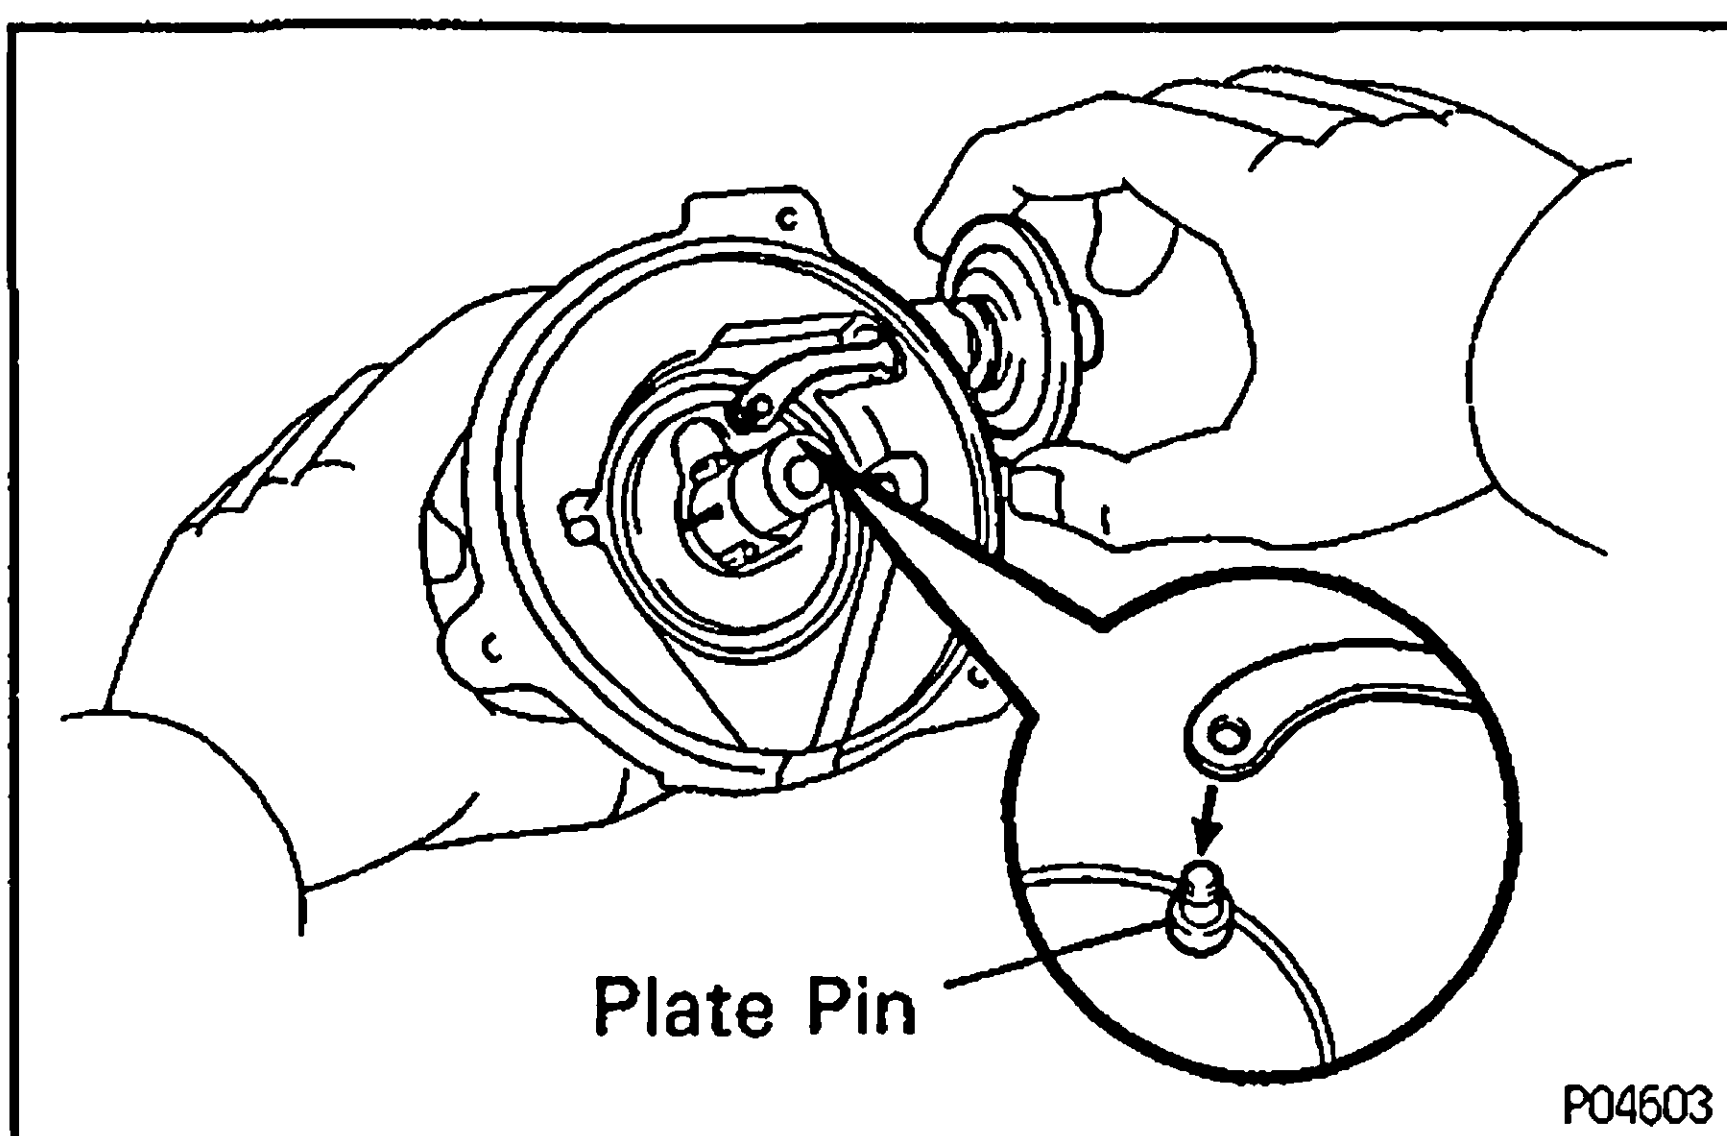


- (b) Insert the vacuum advancer with the packing into the housing and position the advancer lever hole over the breaker plate pin.

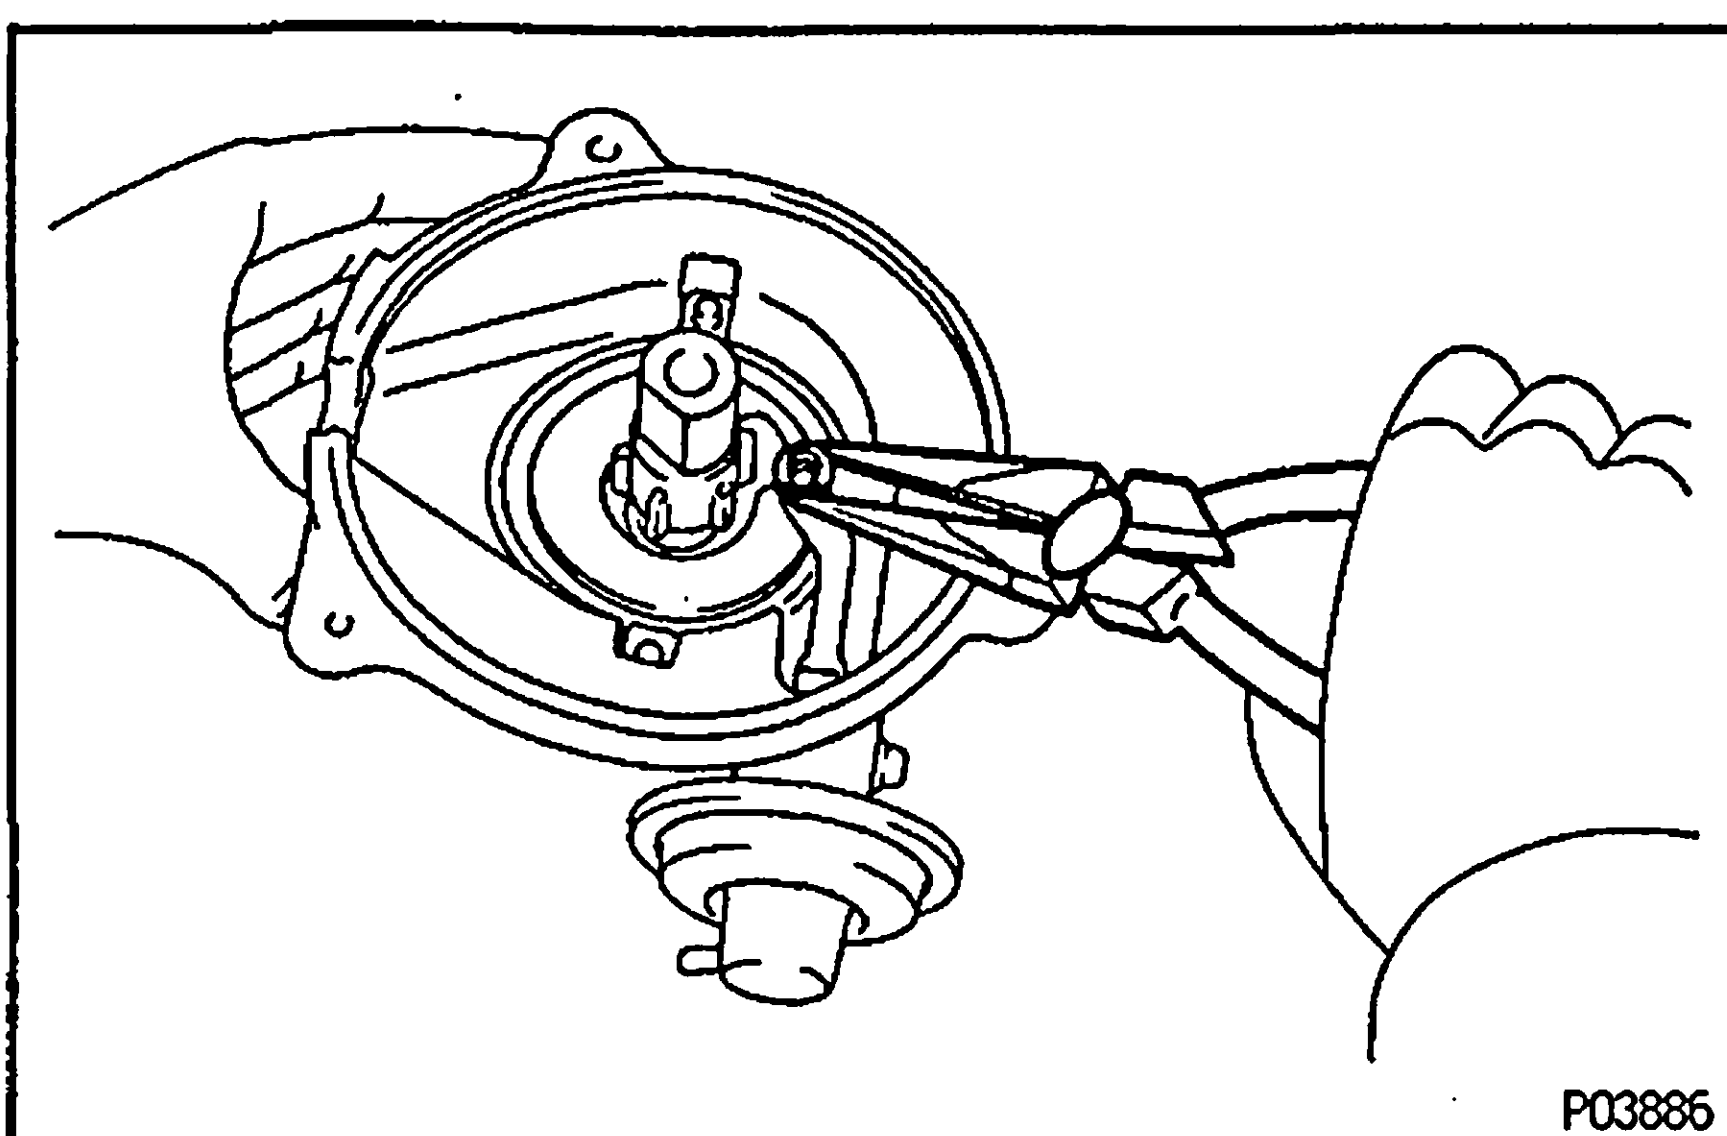

- (c) Using needle—nose pliers, install the E—ring.

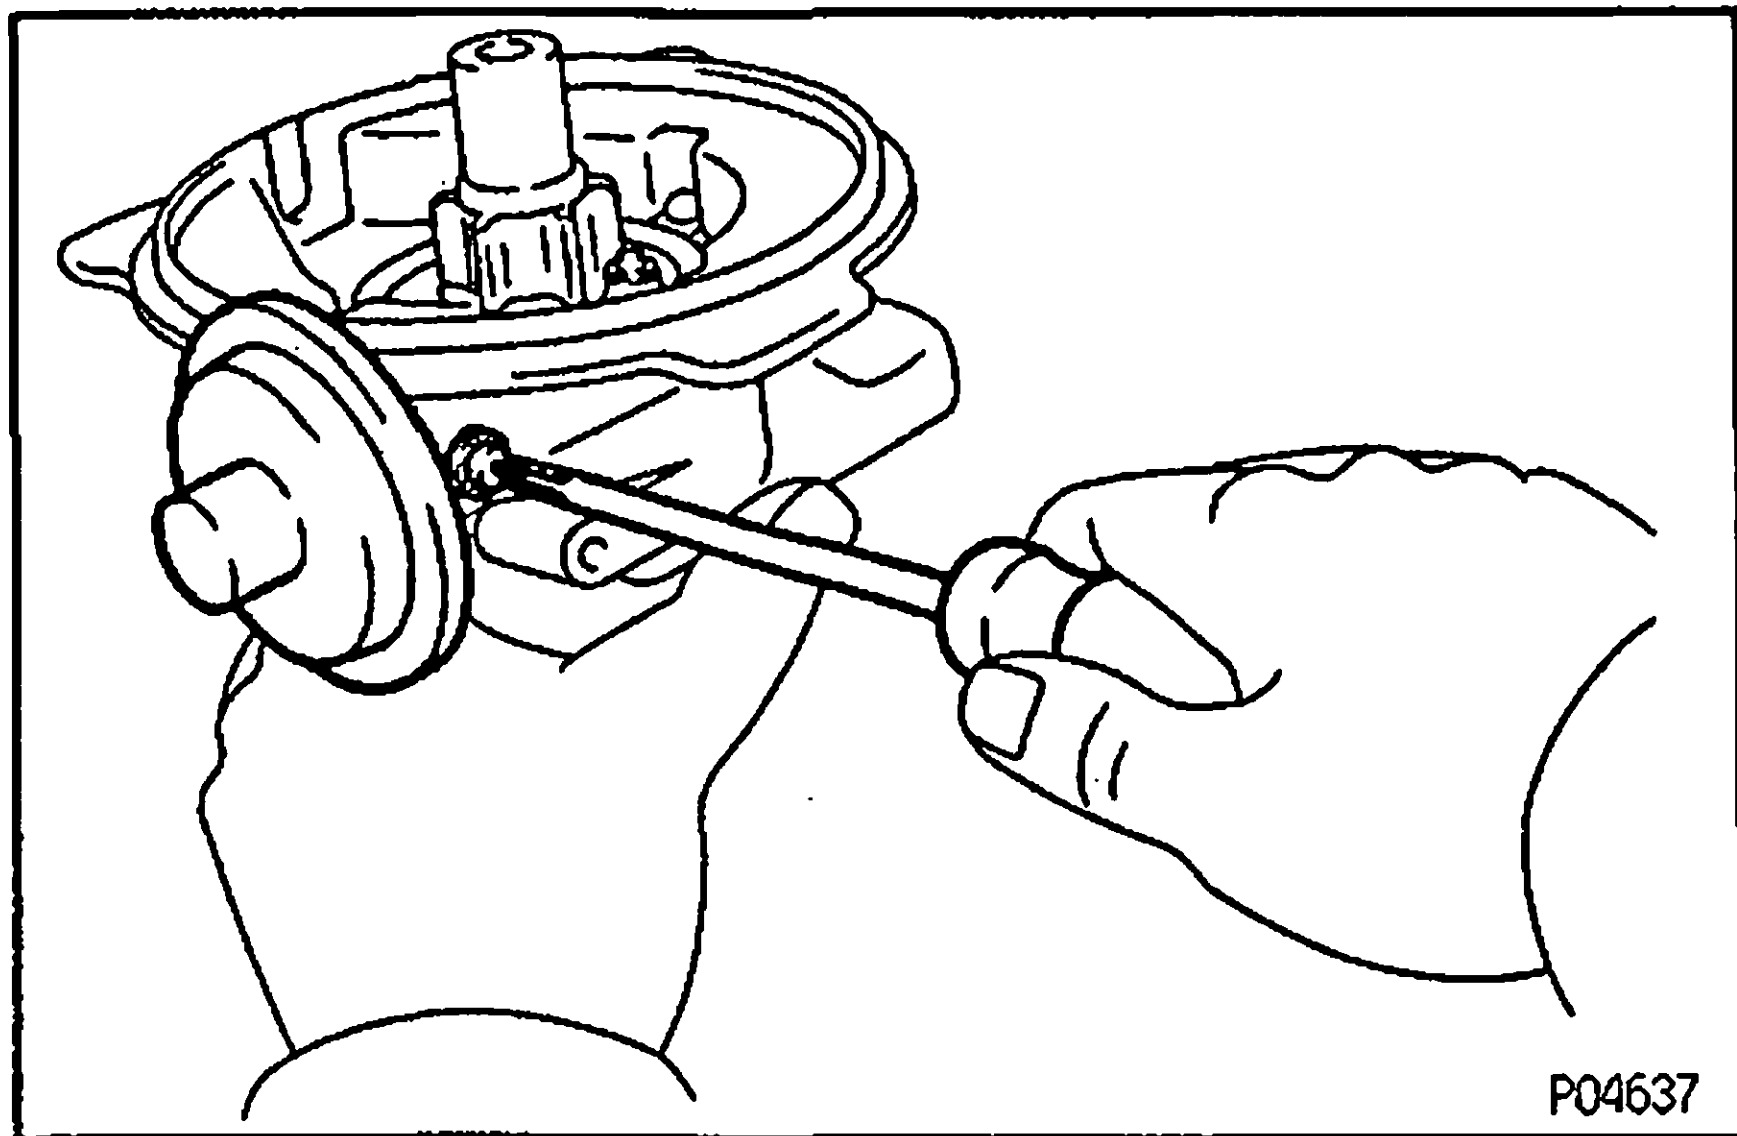


- (d) Secure the vacuum advancer with the screw.

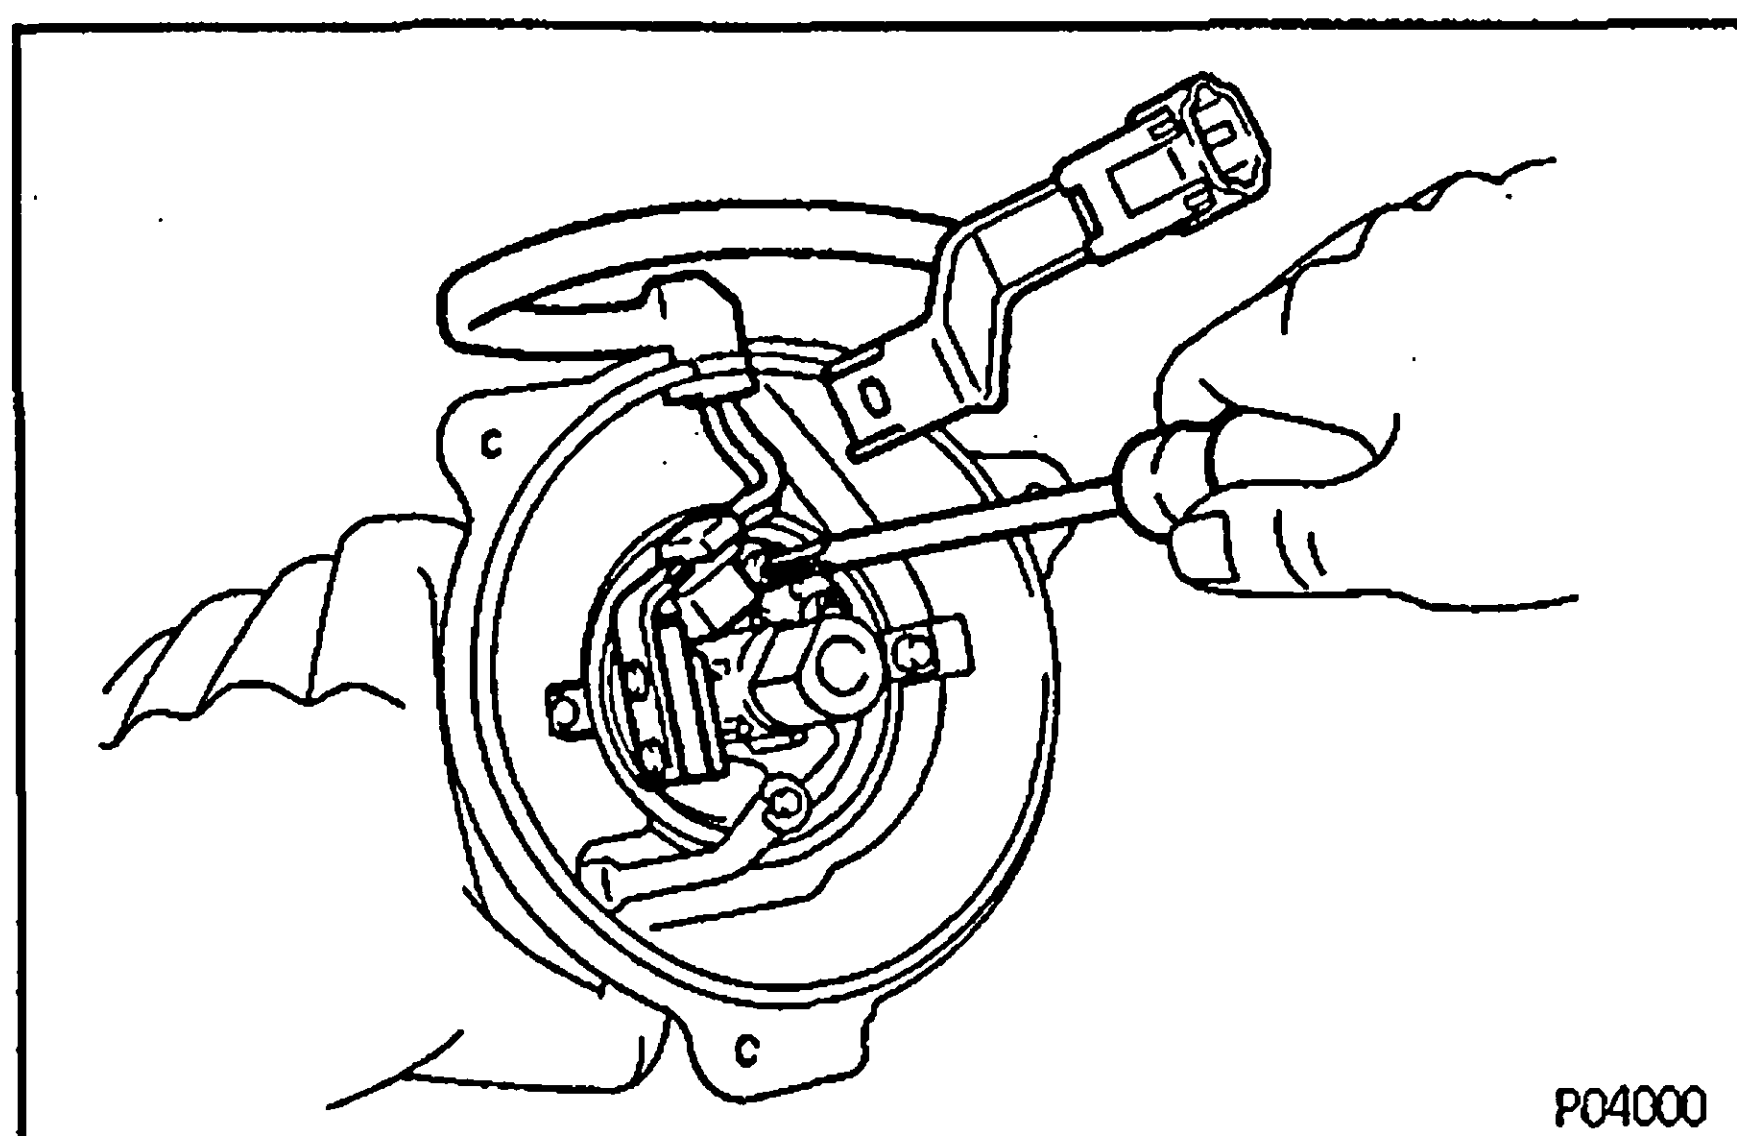

6. INSTALL AND ADJUST SIGNAL GENERATOR

- (a) Loosely install the signal generator with the two screws.
(b) Install the connector clamp screw.

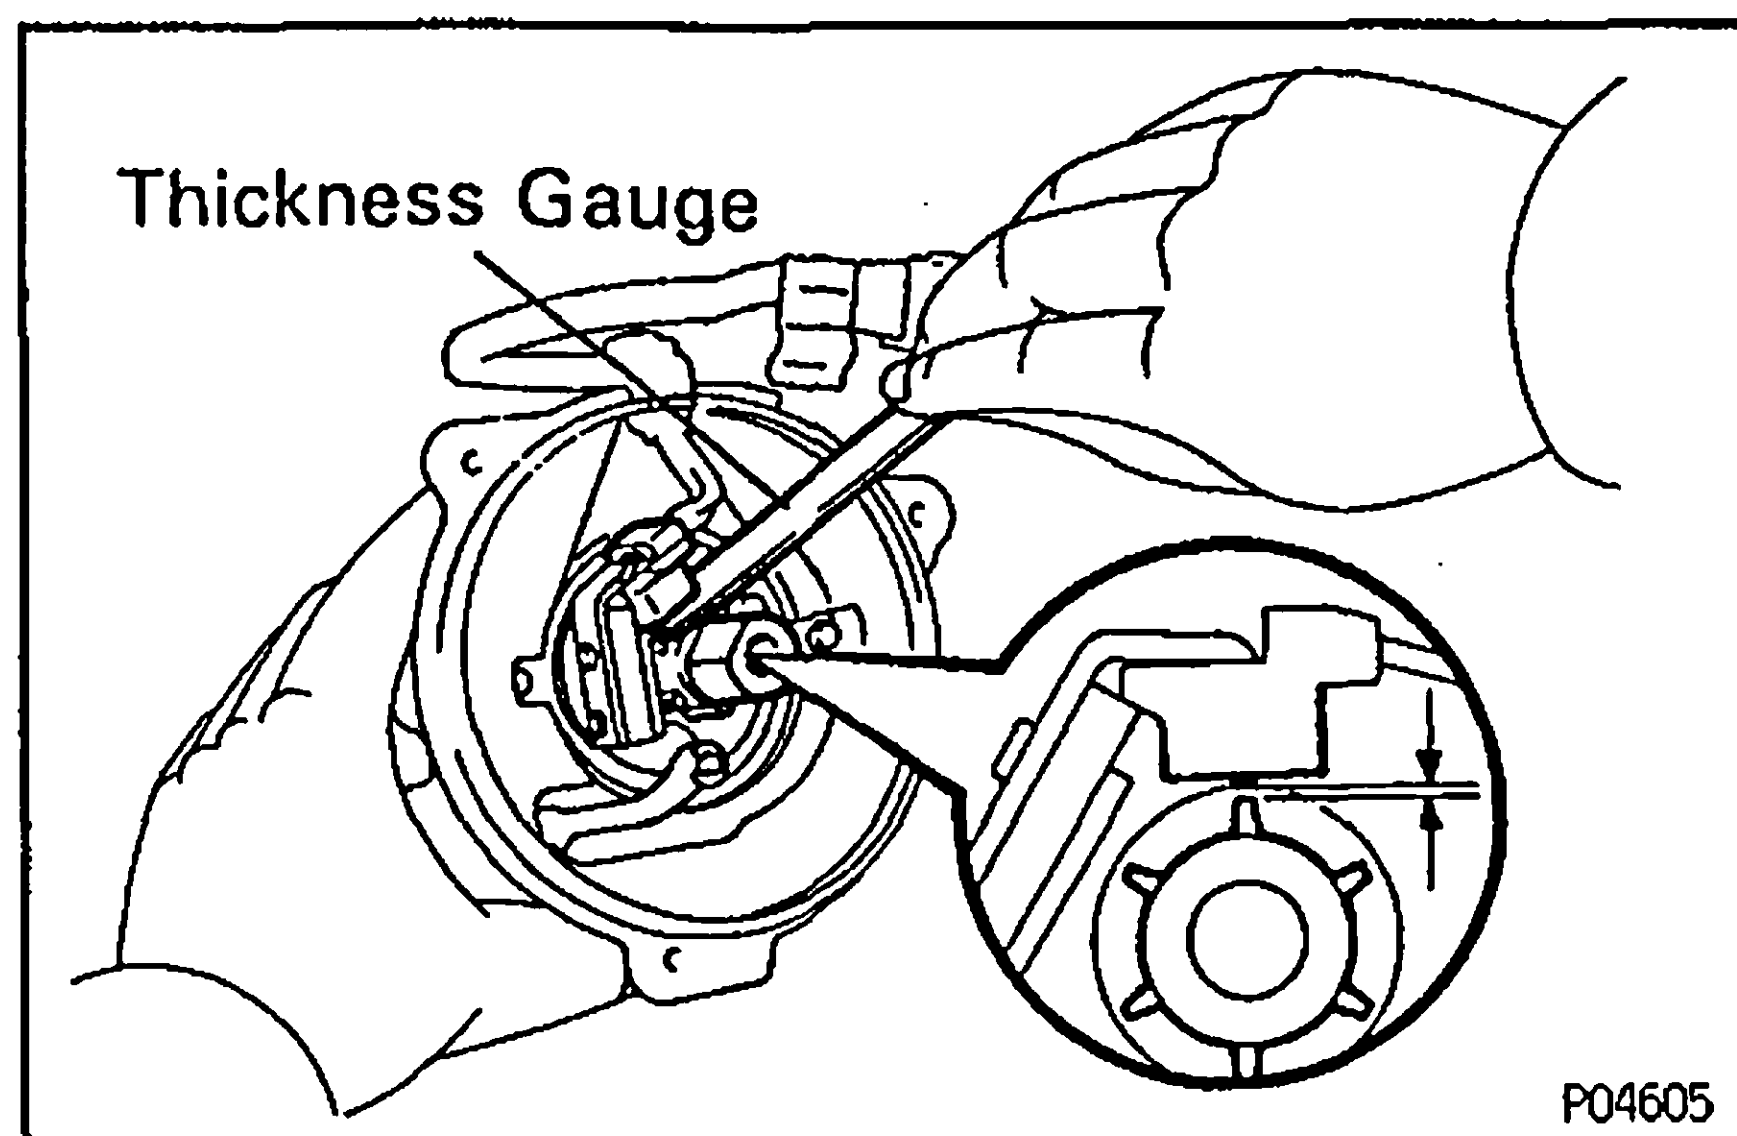


- (c) Using a thickness gauge, adjust the gap between the signal generator projection with governor shaft projection.

Air gap:

0.2–0.4 mm (0.008–0.016 in.)

- (d) Install the dust proof cover.

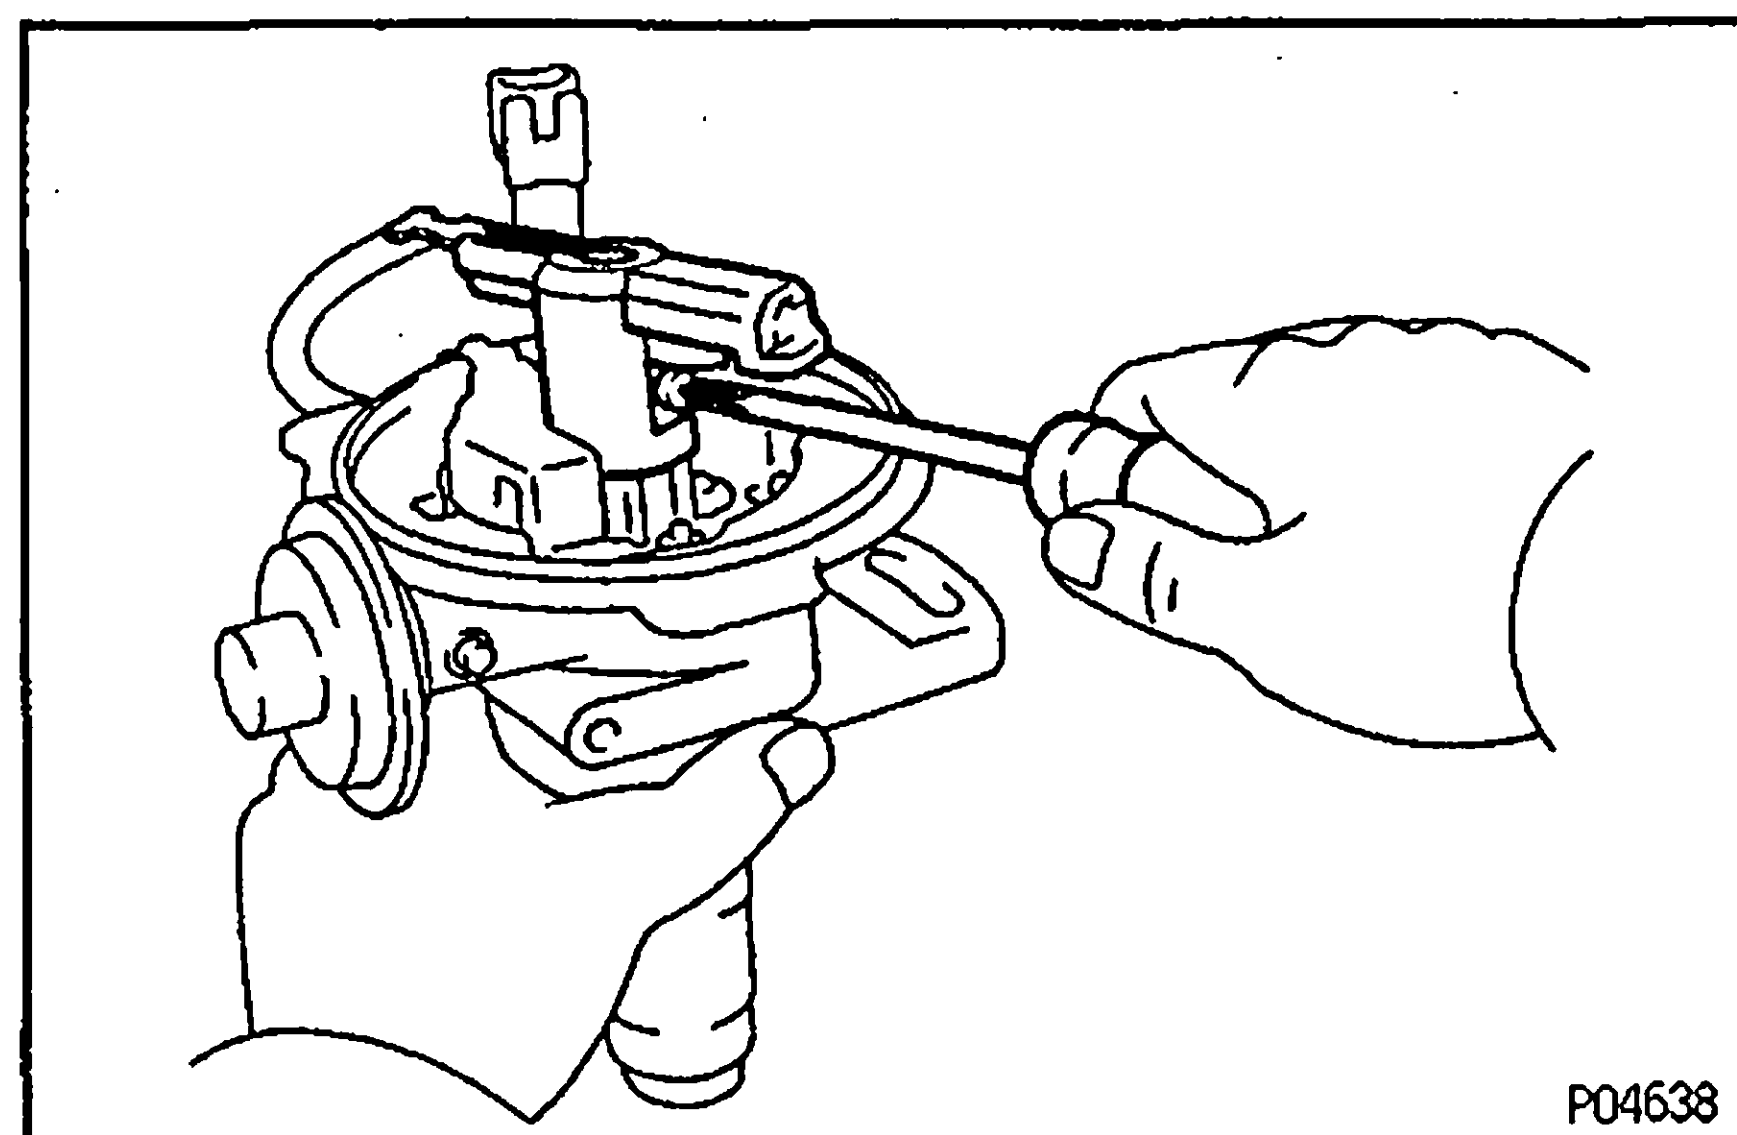

7. INSTALL ROTOR

Install the rotor with the screw.

8. INSTALL PACKING TO DISTRIBUTOR CAP

DISTRIBUTOR INSTALLATION

(See page IG-15)






1. CHECK NO.1 CYLINDER TO TDC/COMPRESSION

If necessary, remove the cylinder head cover, and check the following conditions:

- Turn the crankshaft pulley and align its groove with the timing mark "0" of the timing chain cover.

- Verify that the timing marks with one and two dots are in straight line on the cylinder head surface as shown in the illustration.

If not, turn the crankshaft one revolution (360°) and align the mark as above.

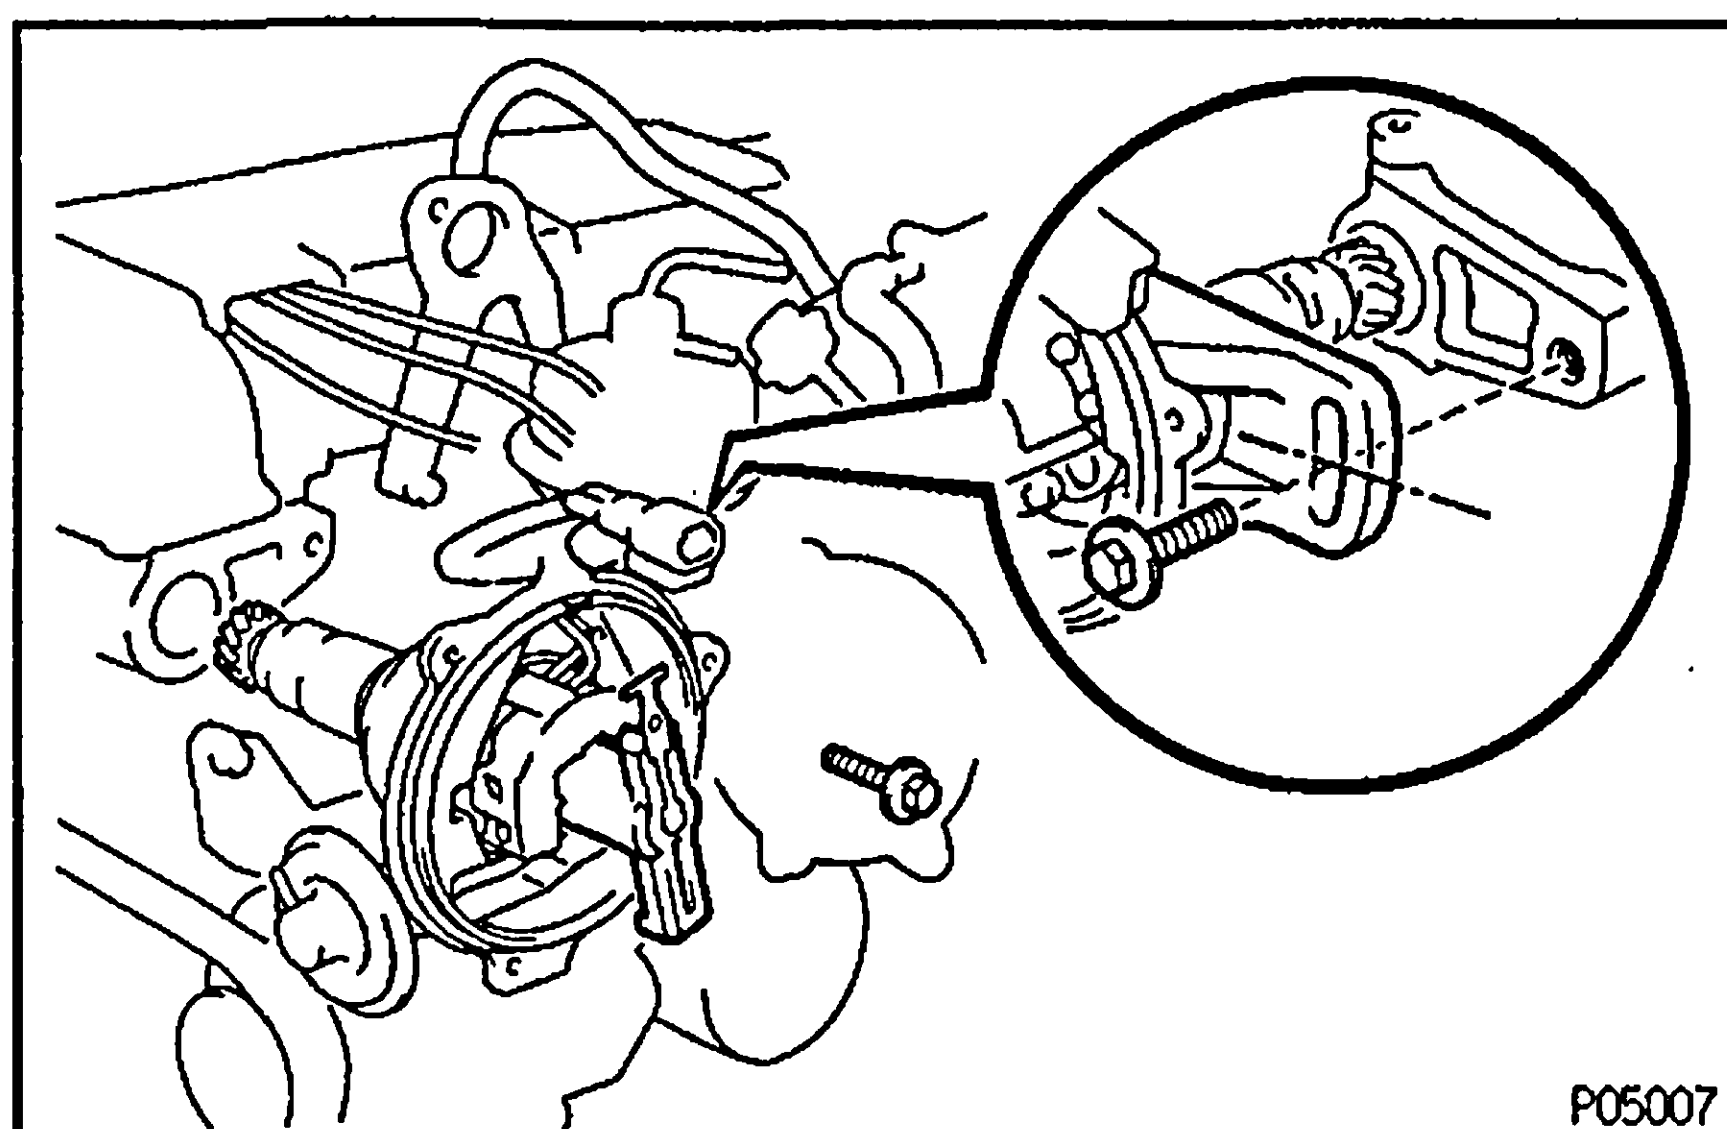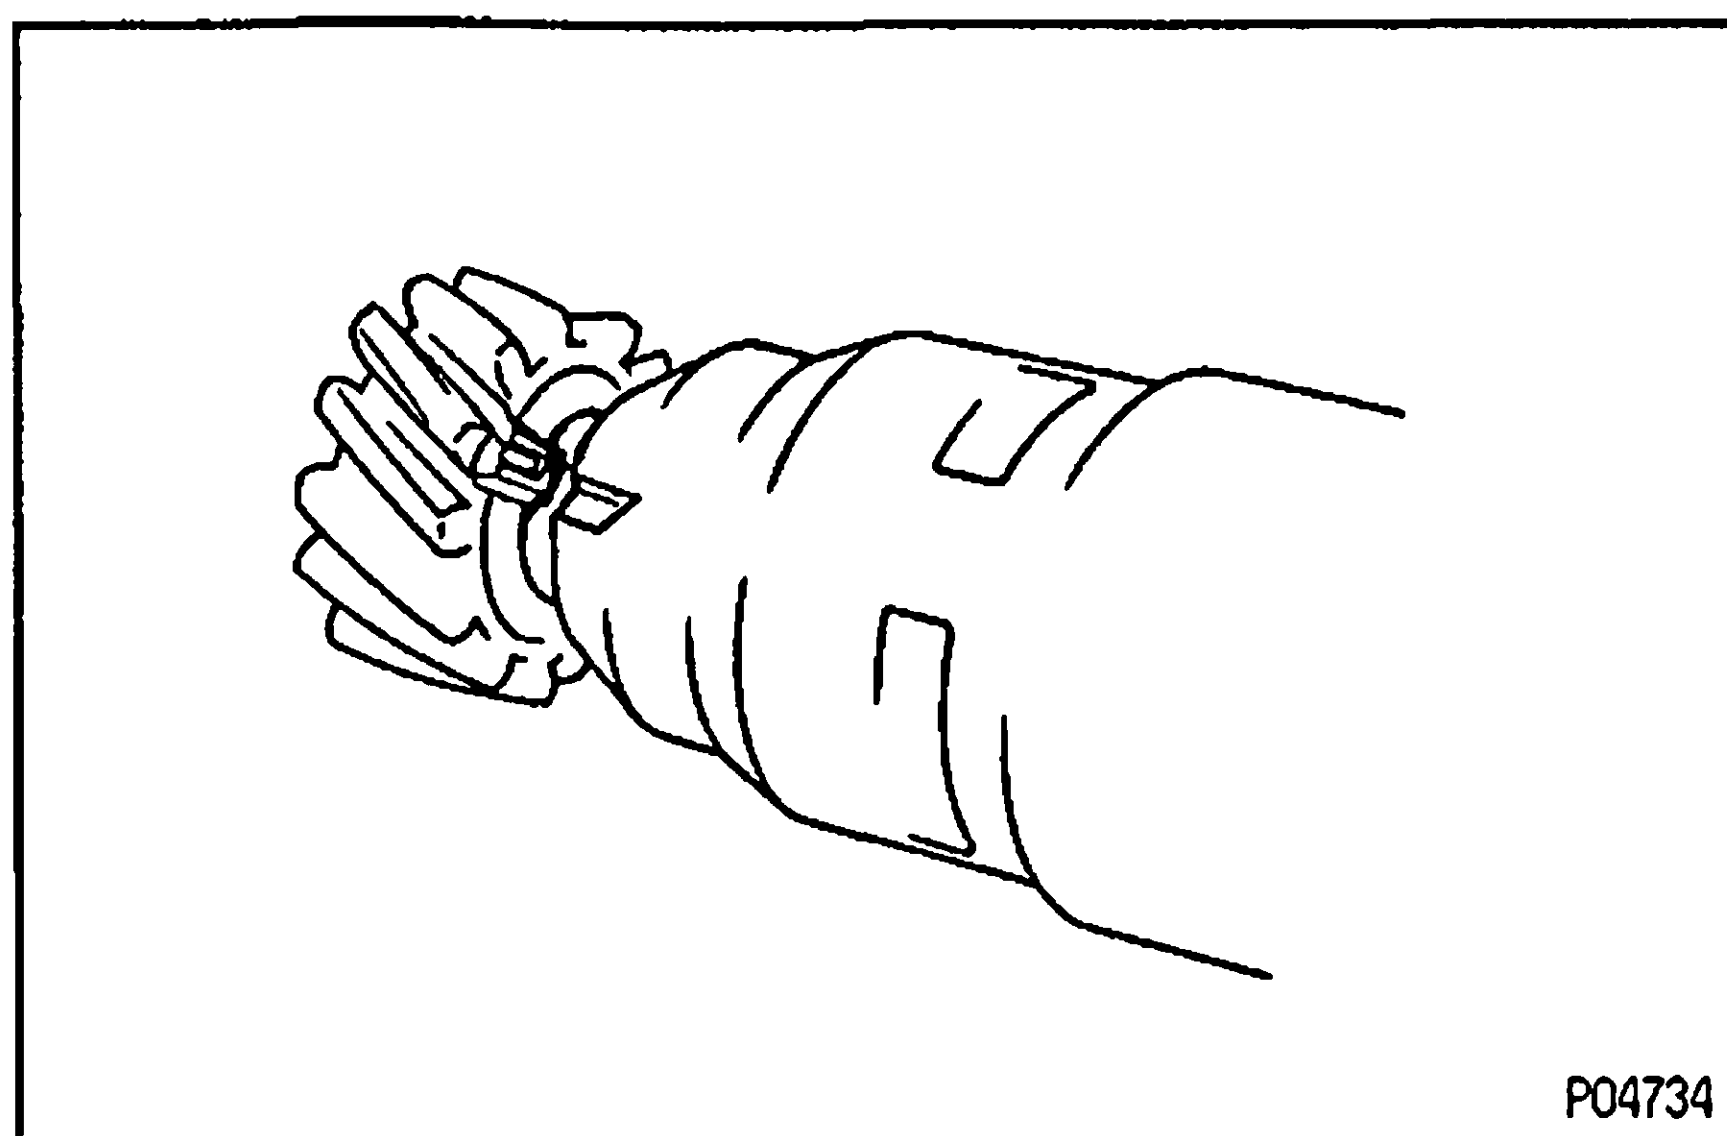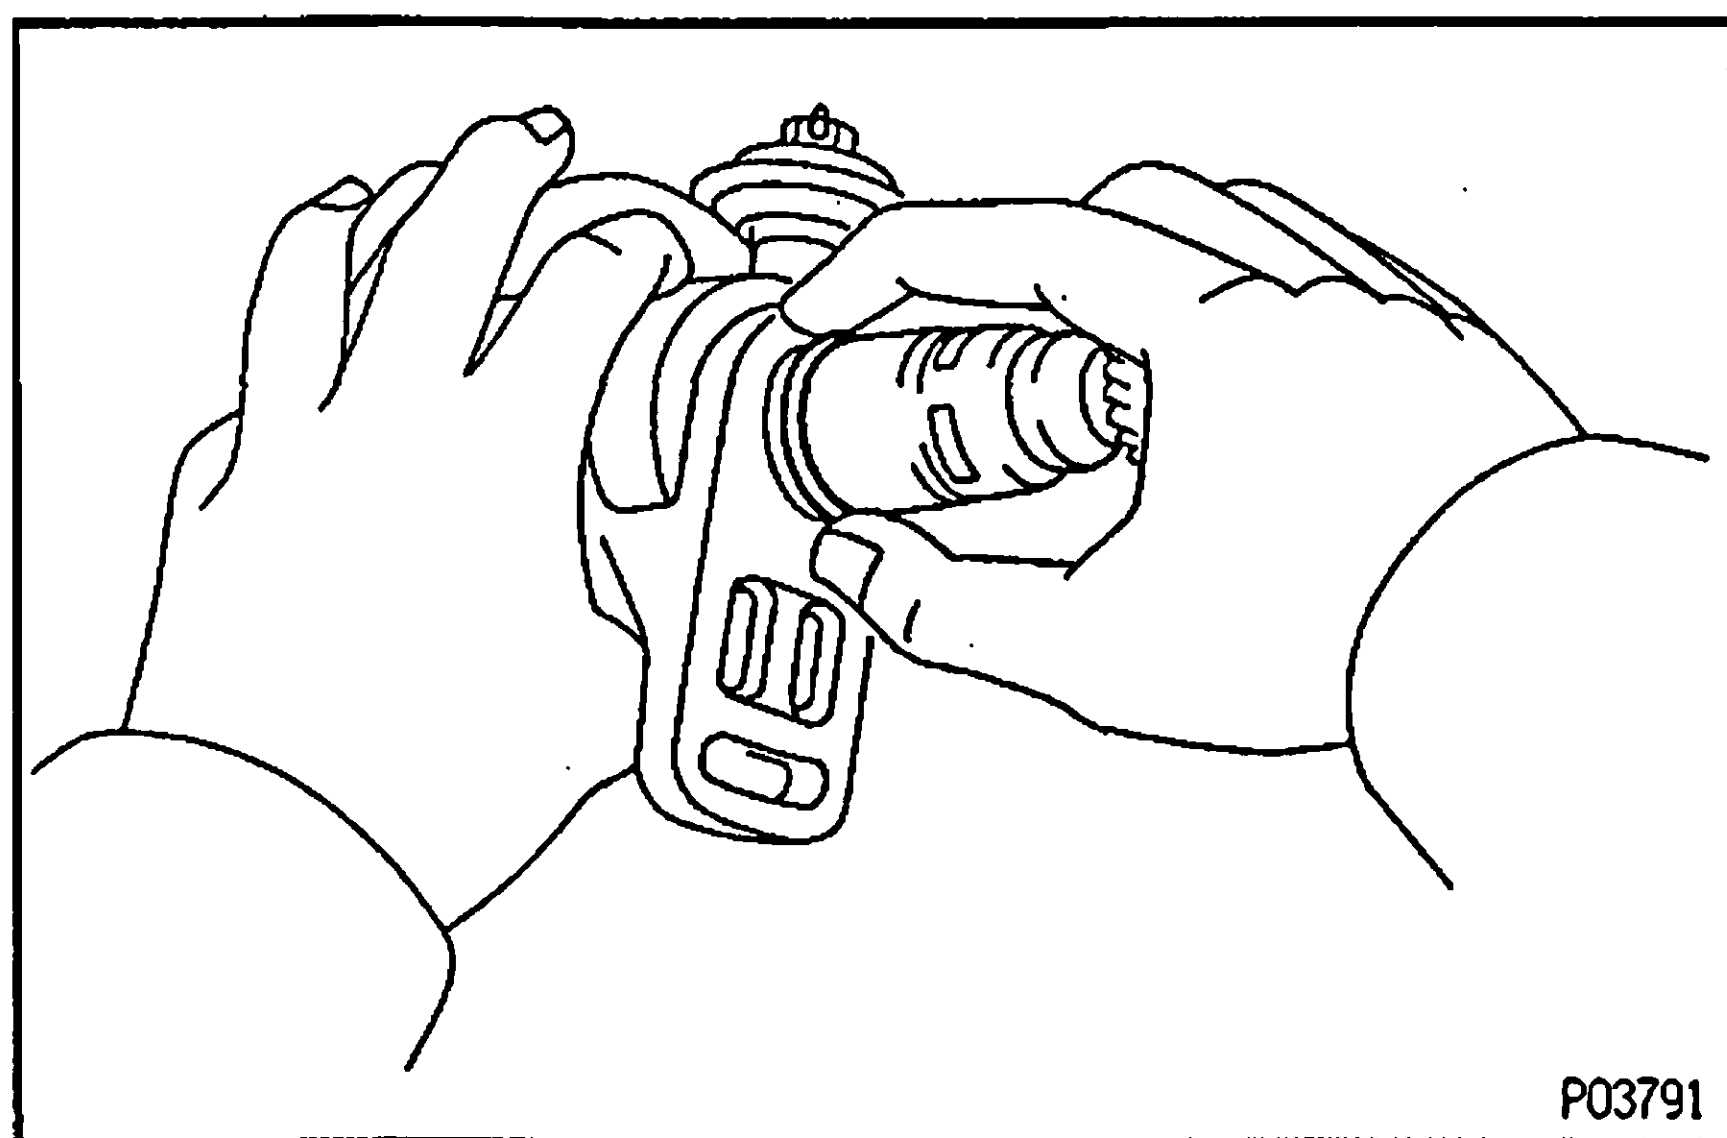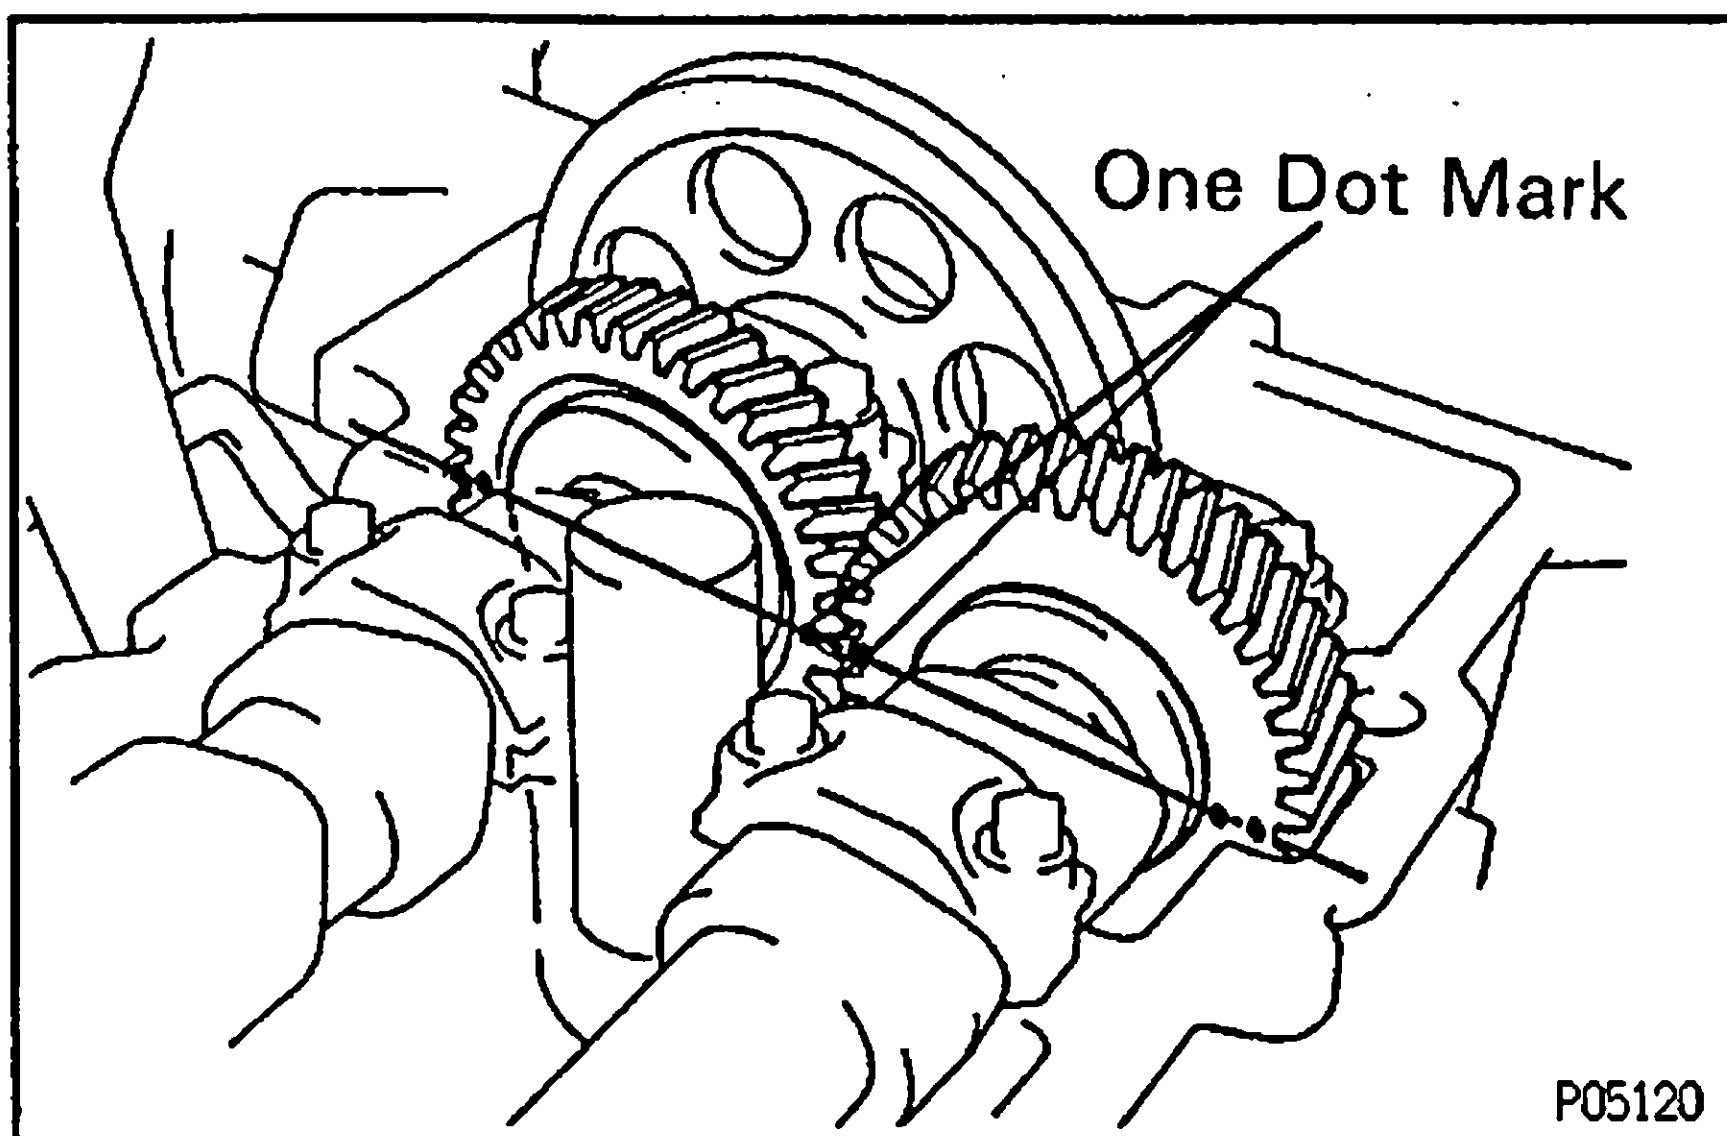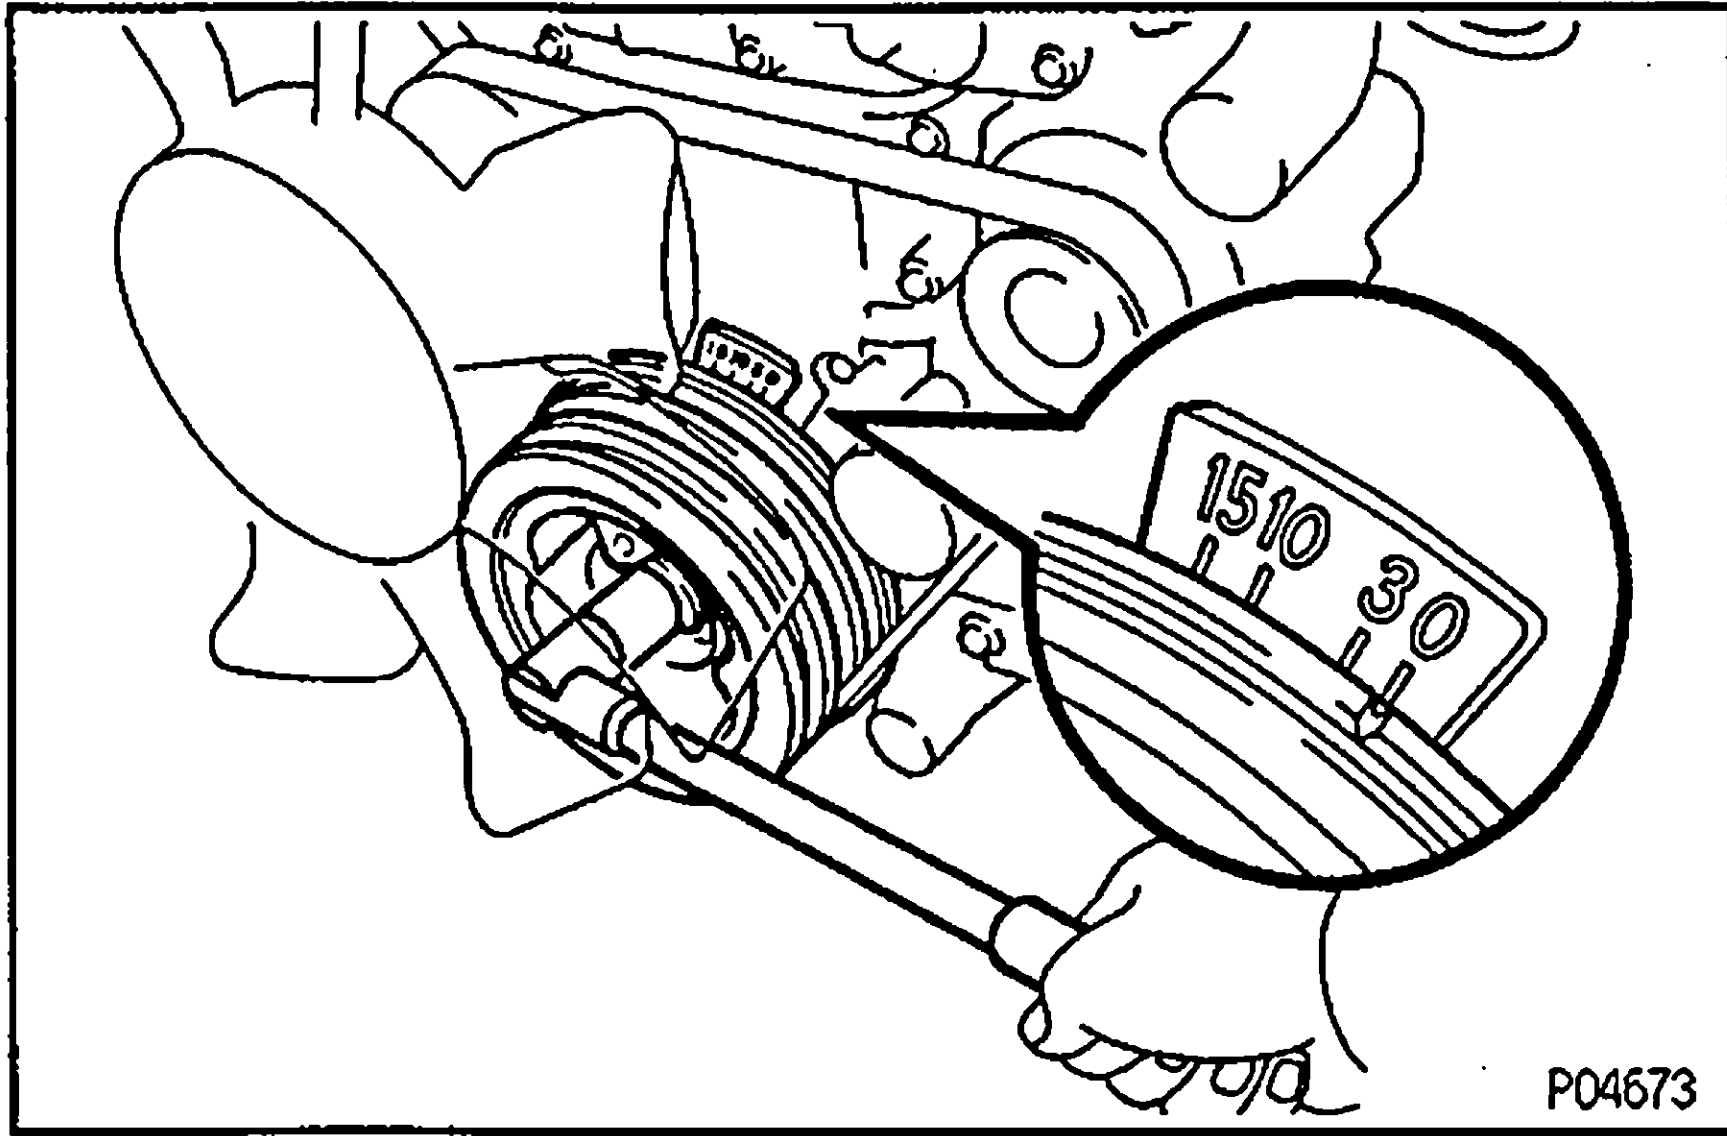

2. INSTALL DISTRIBUTOR

- (a) Install a new O-ring to the distributor.


HINT: Always use a new O-ring when installing the distributor.

- (b) Align the groove of the distributor housing with the protrusion on the driven gear.

- (c) Apply a light coat of engine oil on the O-ring.

- (d) Insert the distributor, aligning the center of the flange with that of the bolt hole on the cylinder head.

- (e) Lightly tighten the hold-down bolt.

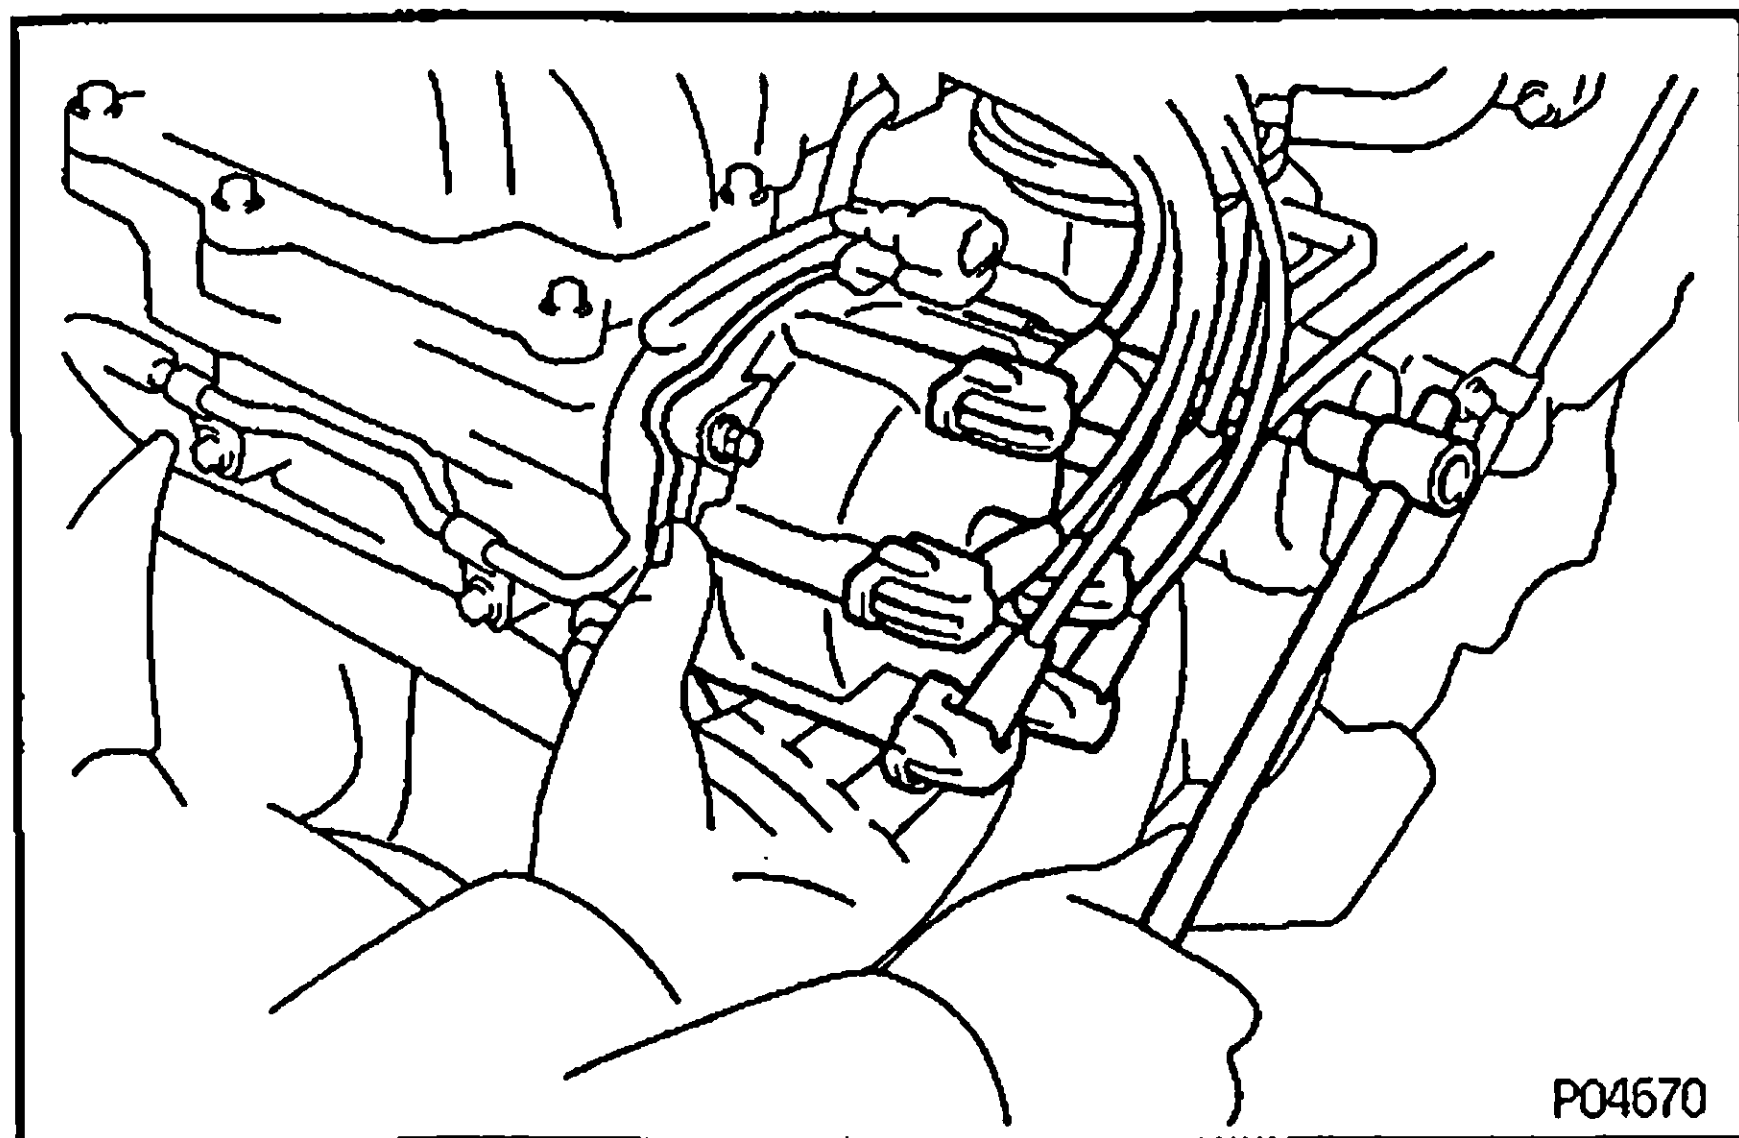

4. INSTALL DISTRIBUTOR CAP

- 5. CONNECT VACUUM HOSE**
- 6. CONNECT DISTRIBUTOR CONNECTOR**
- 7. CONNECT CABLE TO NEGATIVE TERMINAL OF BATTERY**
- 8. ADJUST IGNITION TIMING (See EG section)**

SERVICE SPECIFICATIONS

SERVICE DATA

IG03C-01

IG

Firing order	—		1—5—3—6—2—4		
High—tension cord	Resistance (Maximum)		25 kΩ per cord		
Spark plug	Recommended spark plug Recommended spark plug Correct electrode gap	ND NGK	K16R-U BKR5EYA 0.8 mm (0.031 in.)		
Ignition coil	Primary coil resistance (Cold) Primary coil resistance (Hot) Secondary coil resistance (Cold) Secondary coil resistance (Hot)		0.36 — 0.55 Ω 0.45 — 0.65 Ω 9.0 — 15.4 kΩ 11.4 — 18.1 kΩ		
Distributor	Air gap Signal generator (pickup coil) resistance (Cold) Signal generator (pickup coil) resistance (Hot)		0.2 — 0.4 mm (0.008 — 0.016 in.) 185 — 275 Ω 240 — 325 Ω		
	Distributor advance angle (Part No.)	Governor		Vacuum	
		Dis. rpm	Advance angle	kPa (mmHg, in.Hg)	Advance angle
		19100-66010	500 740 1,150 1,626 2,659 3,000	Advance begins 2.3° 7.0° 6.4° 14.0° 13.8°	13.3 (100, 3.94) 25.3 (190, 7.48) 36.0 (270, 10.62)

V00796

TORQUE SPECIFICATIONS

IG017-02

Part tightened	N·m	kgf·cm	ft·lbf
Spark plug x Cylinder head	20	200	14
Distributor x Cylinder head	21	210	15

STARTING SYSTEM

DESCRIPTION ST- 2

SYSTEM CIRCUIT ST- 3

OPERATION..... ST- 4

PREPARATION ST- 4

STARTER (1.4 kW) ST- 5


STARTER (2.2 kW) ST- 17

SERVICE SPECIFICATIONS..... ST- 29

ST

DESCRIPTION

The starter is a reduction type with a small, high—speed motor used to drive the pinion gear. ST00P-02

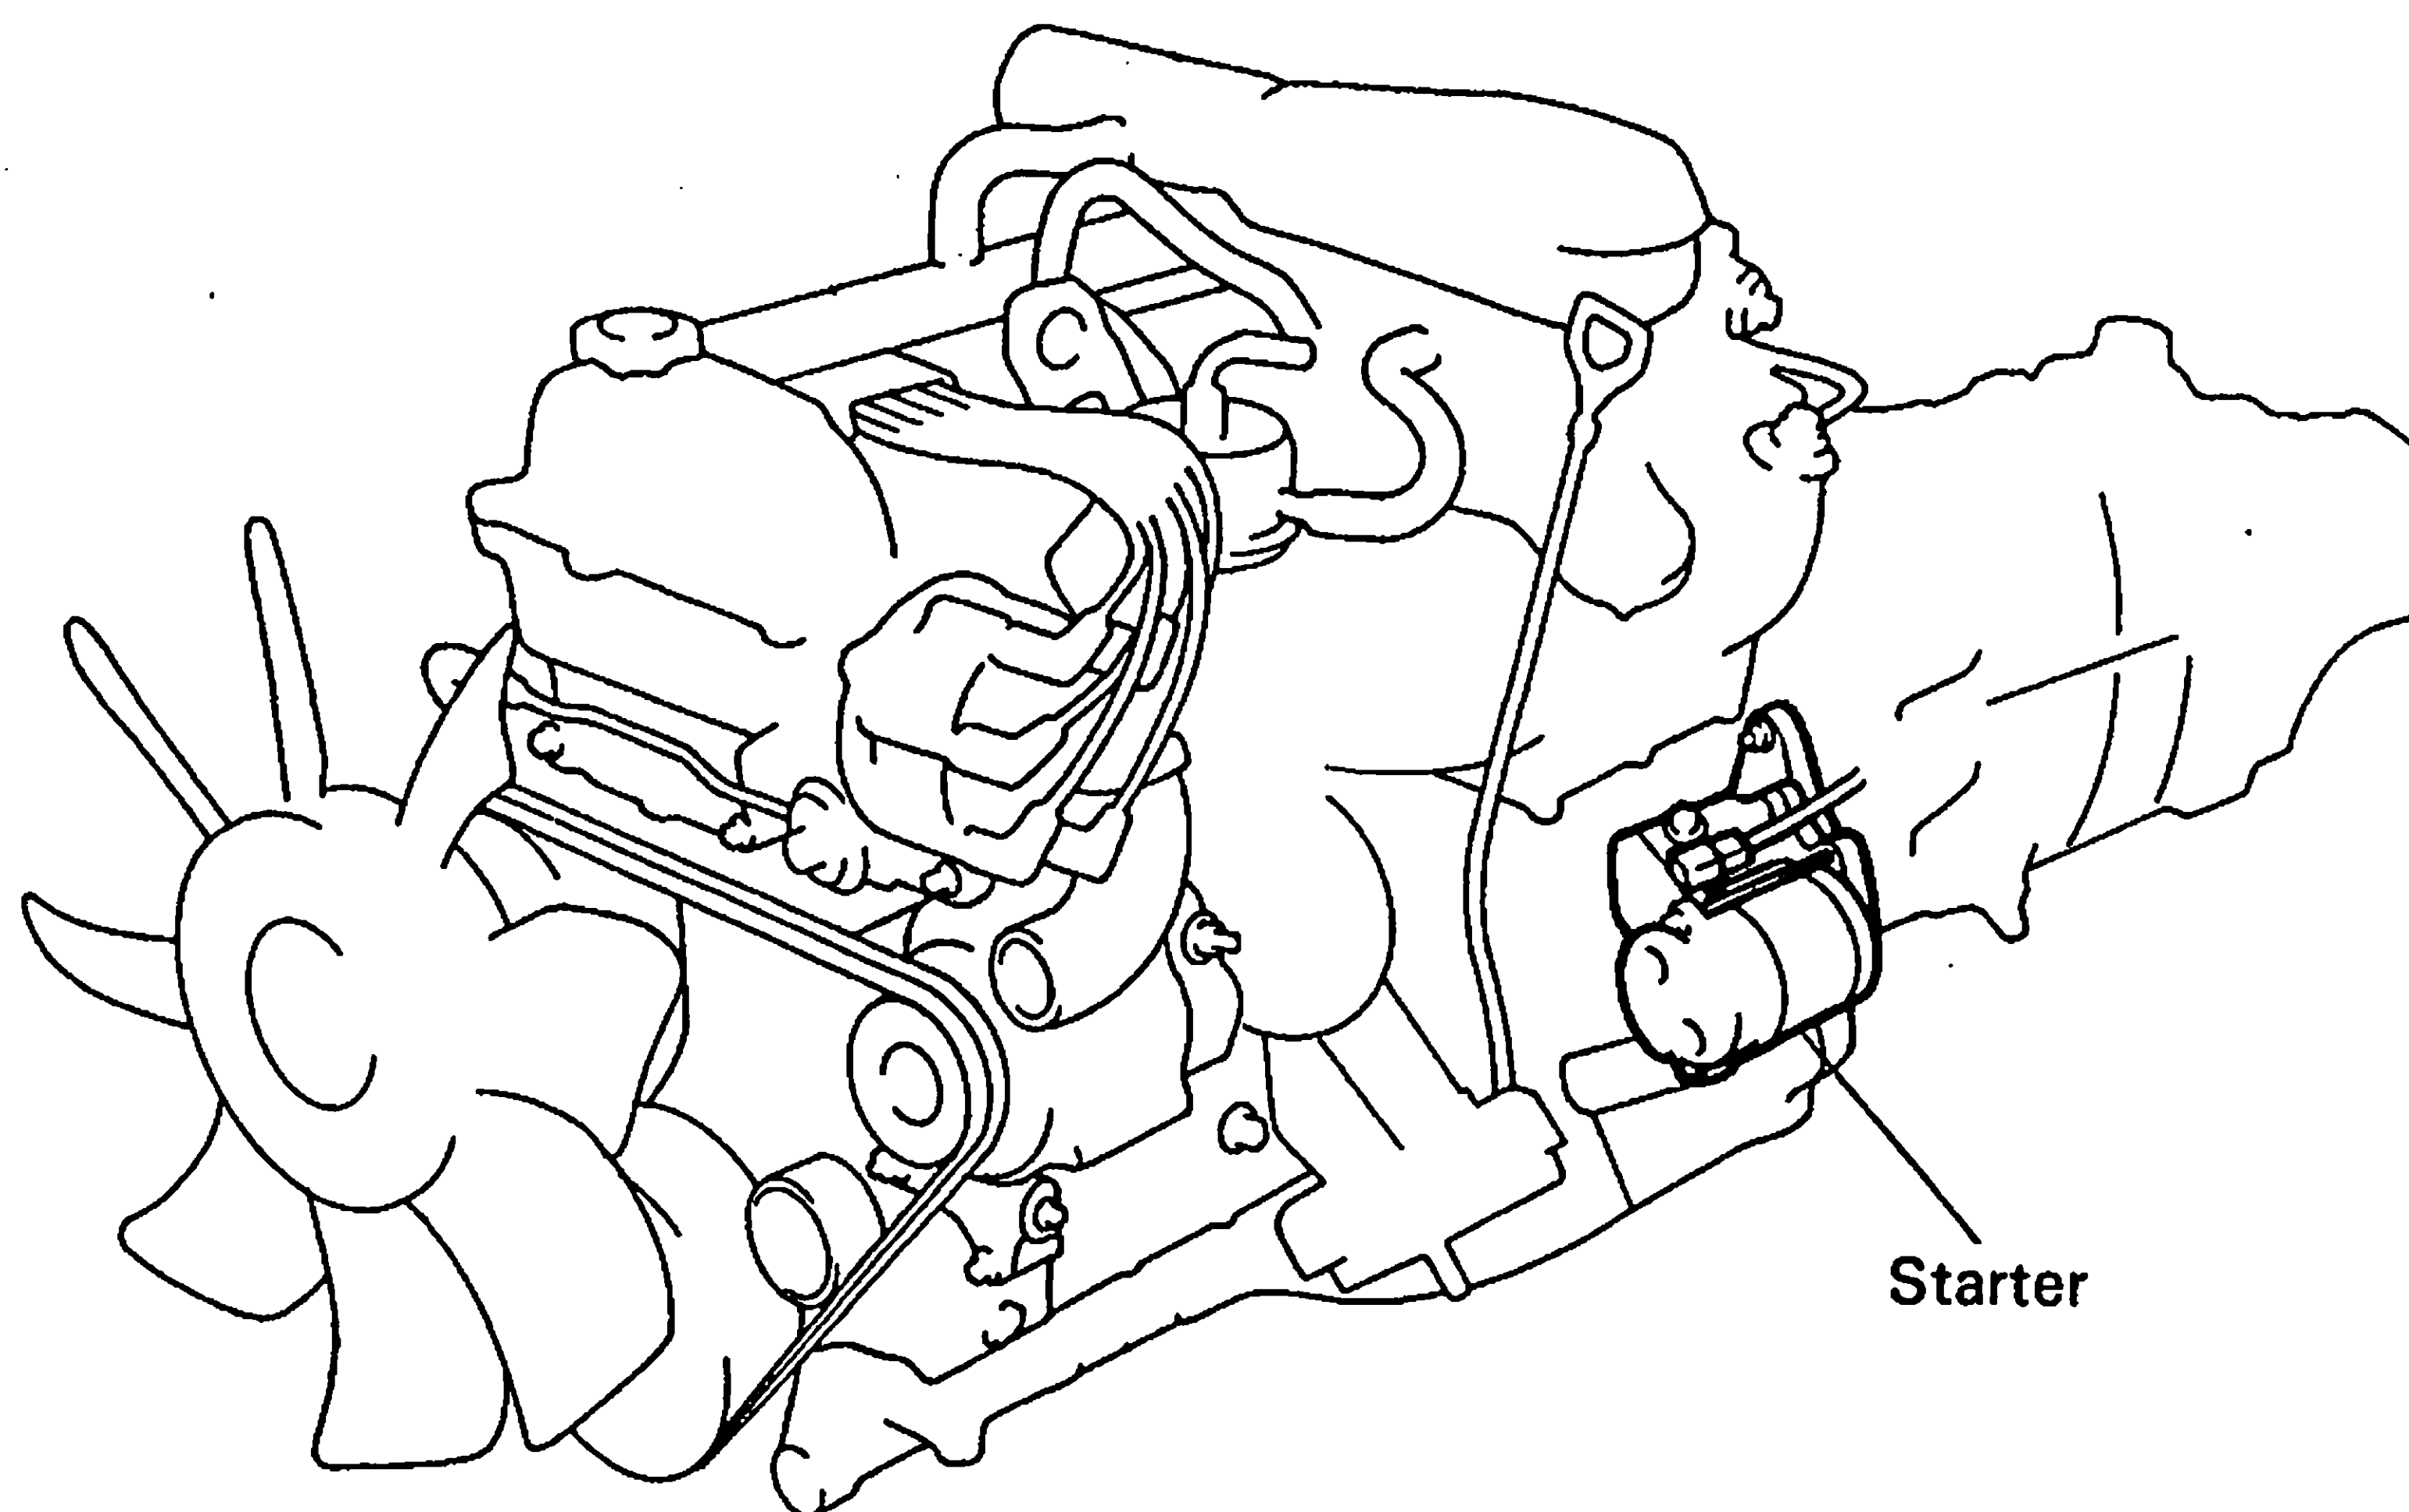


SYSTEM CIRCUIT


ST00Q-02

ST

FZJ 70 Series

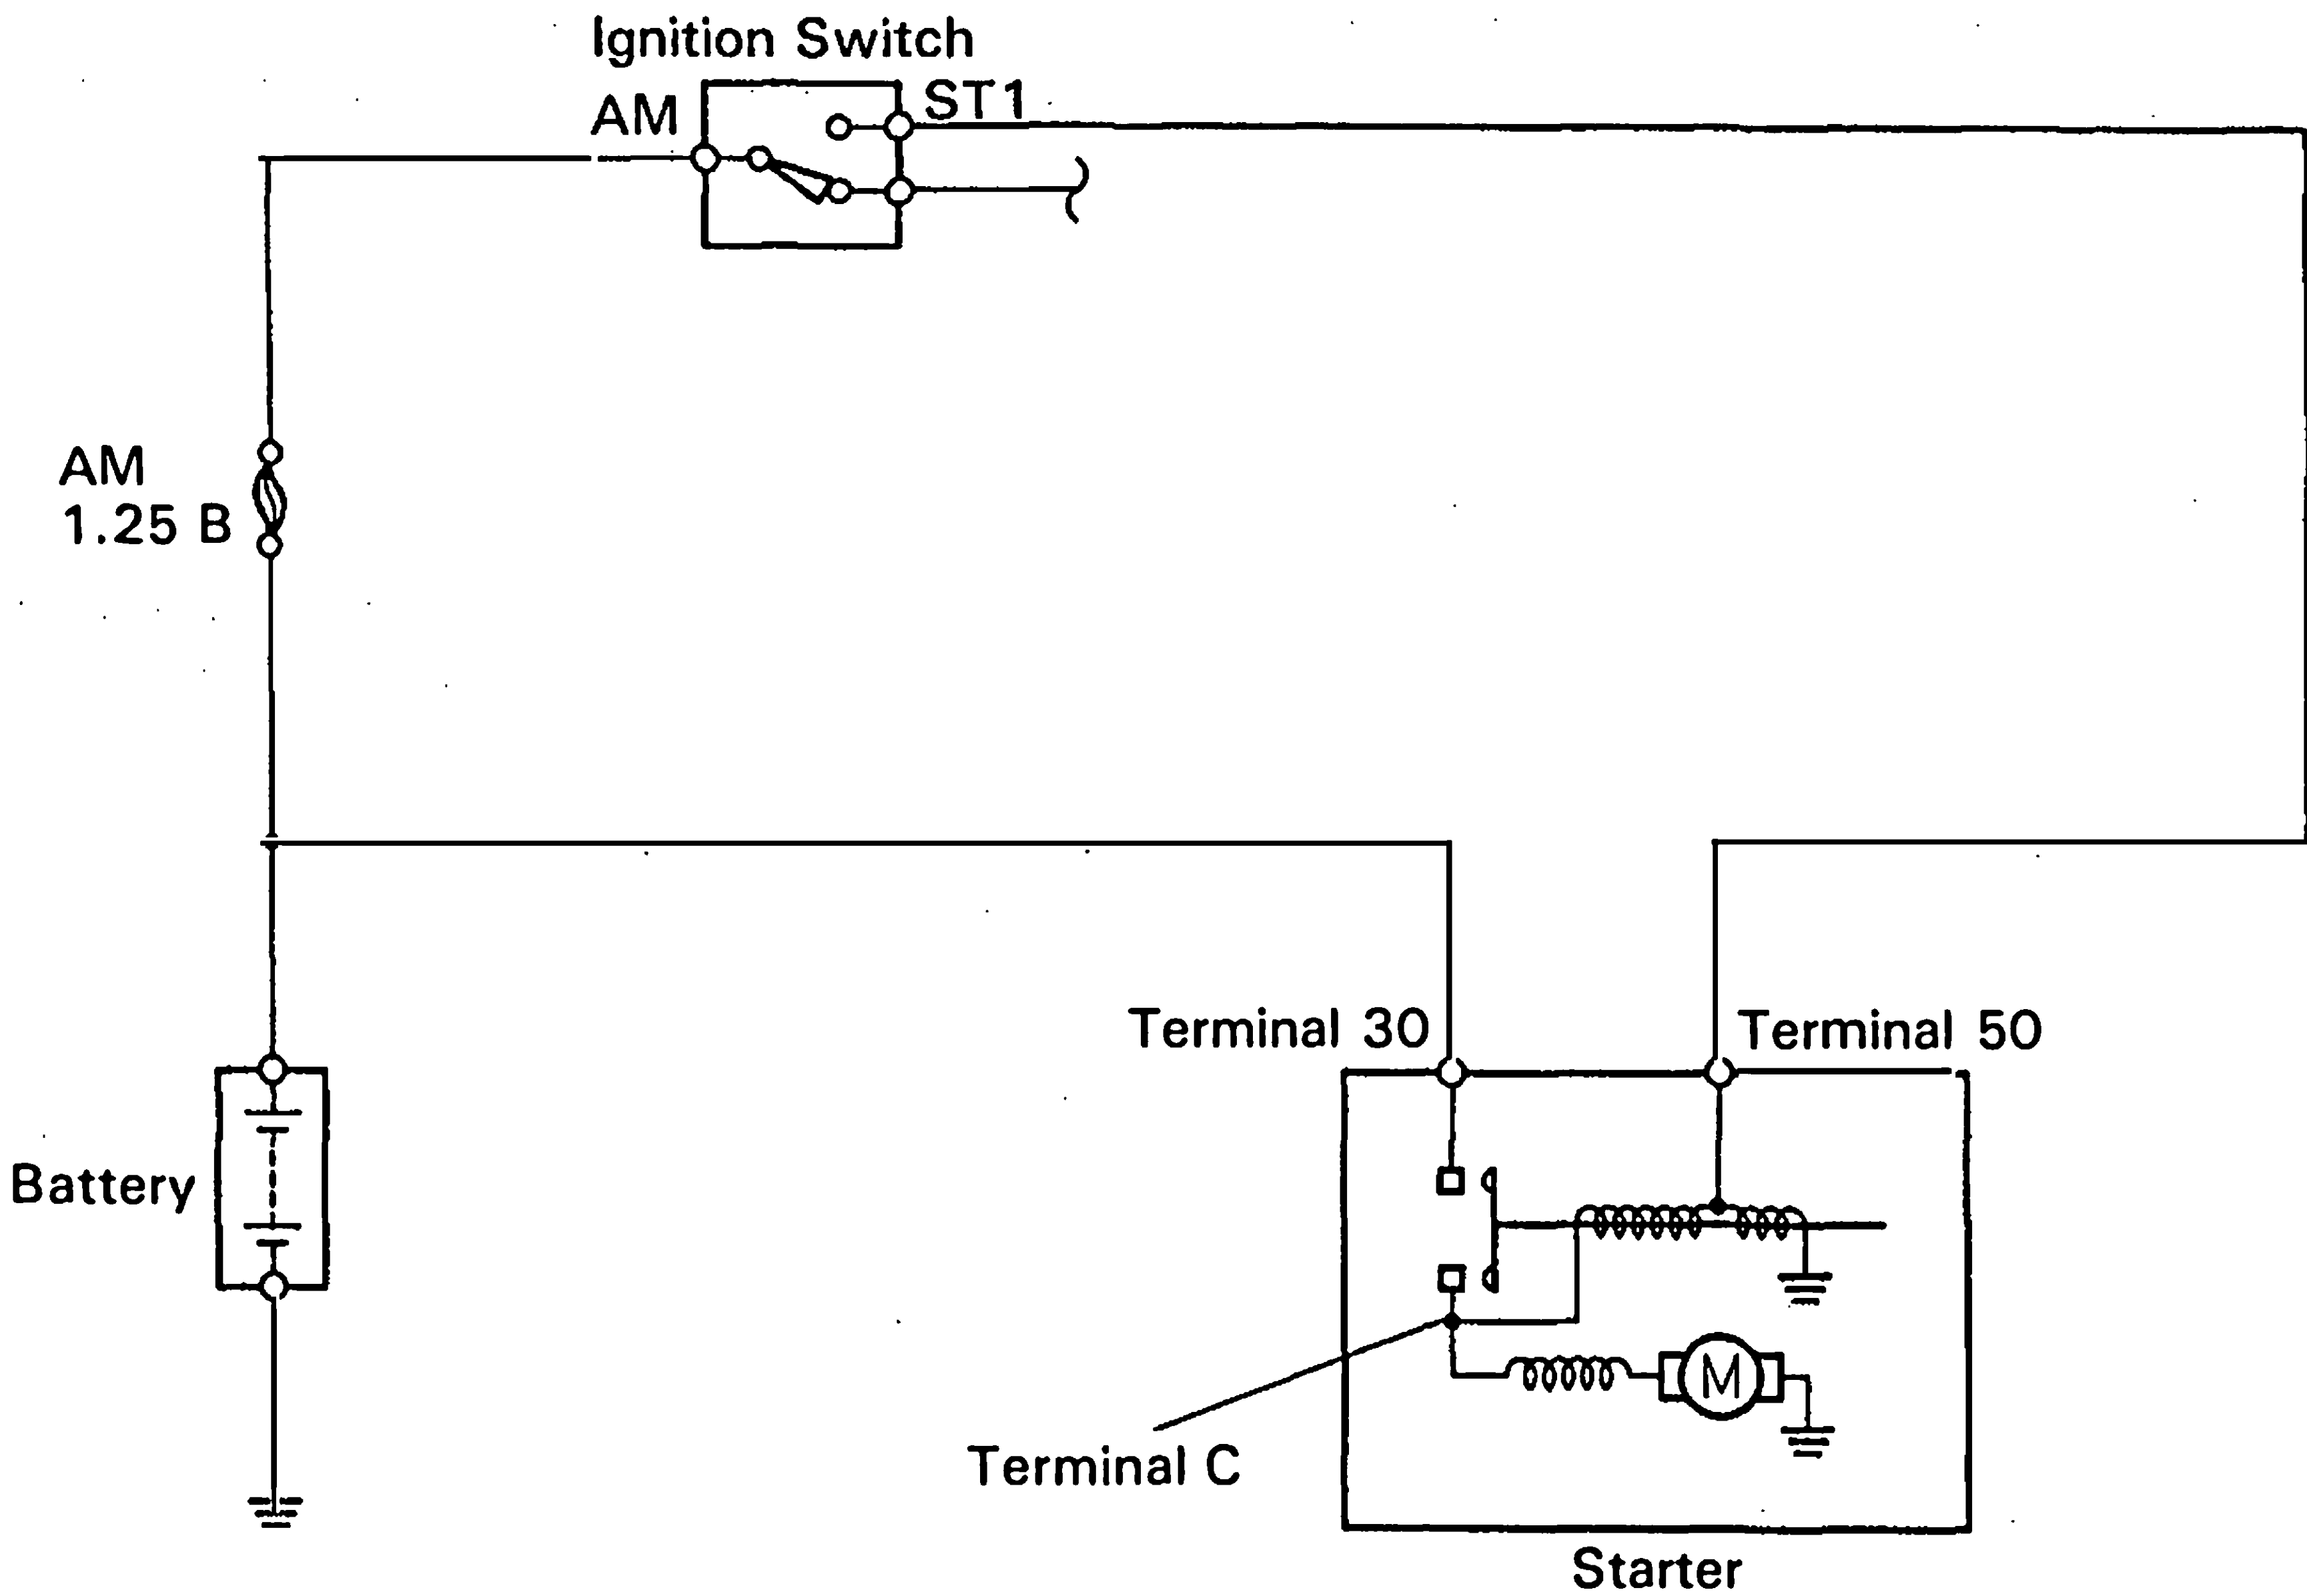

FZJ 80 Series

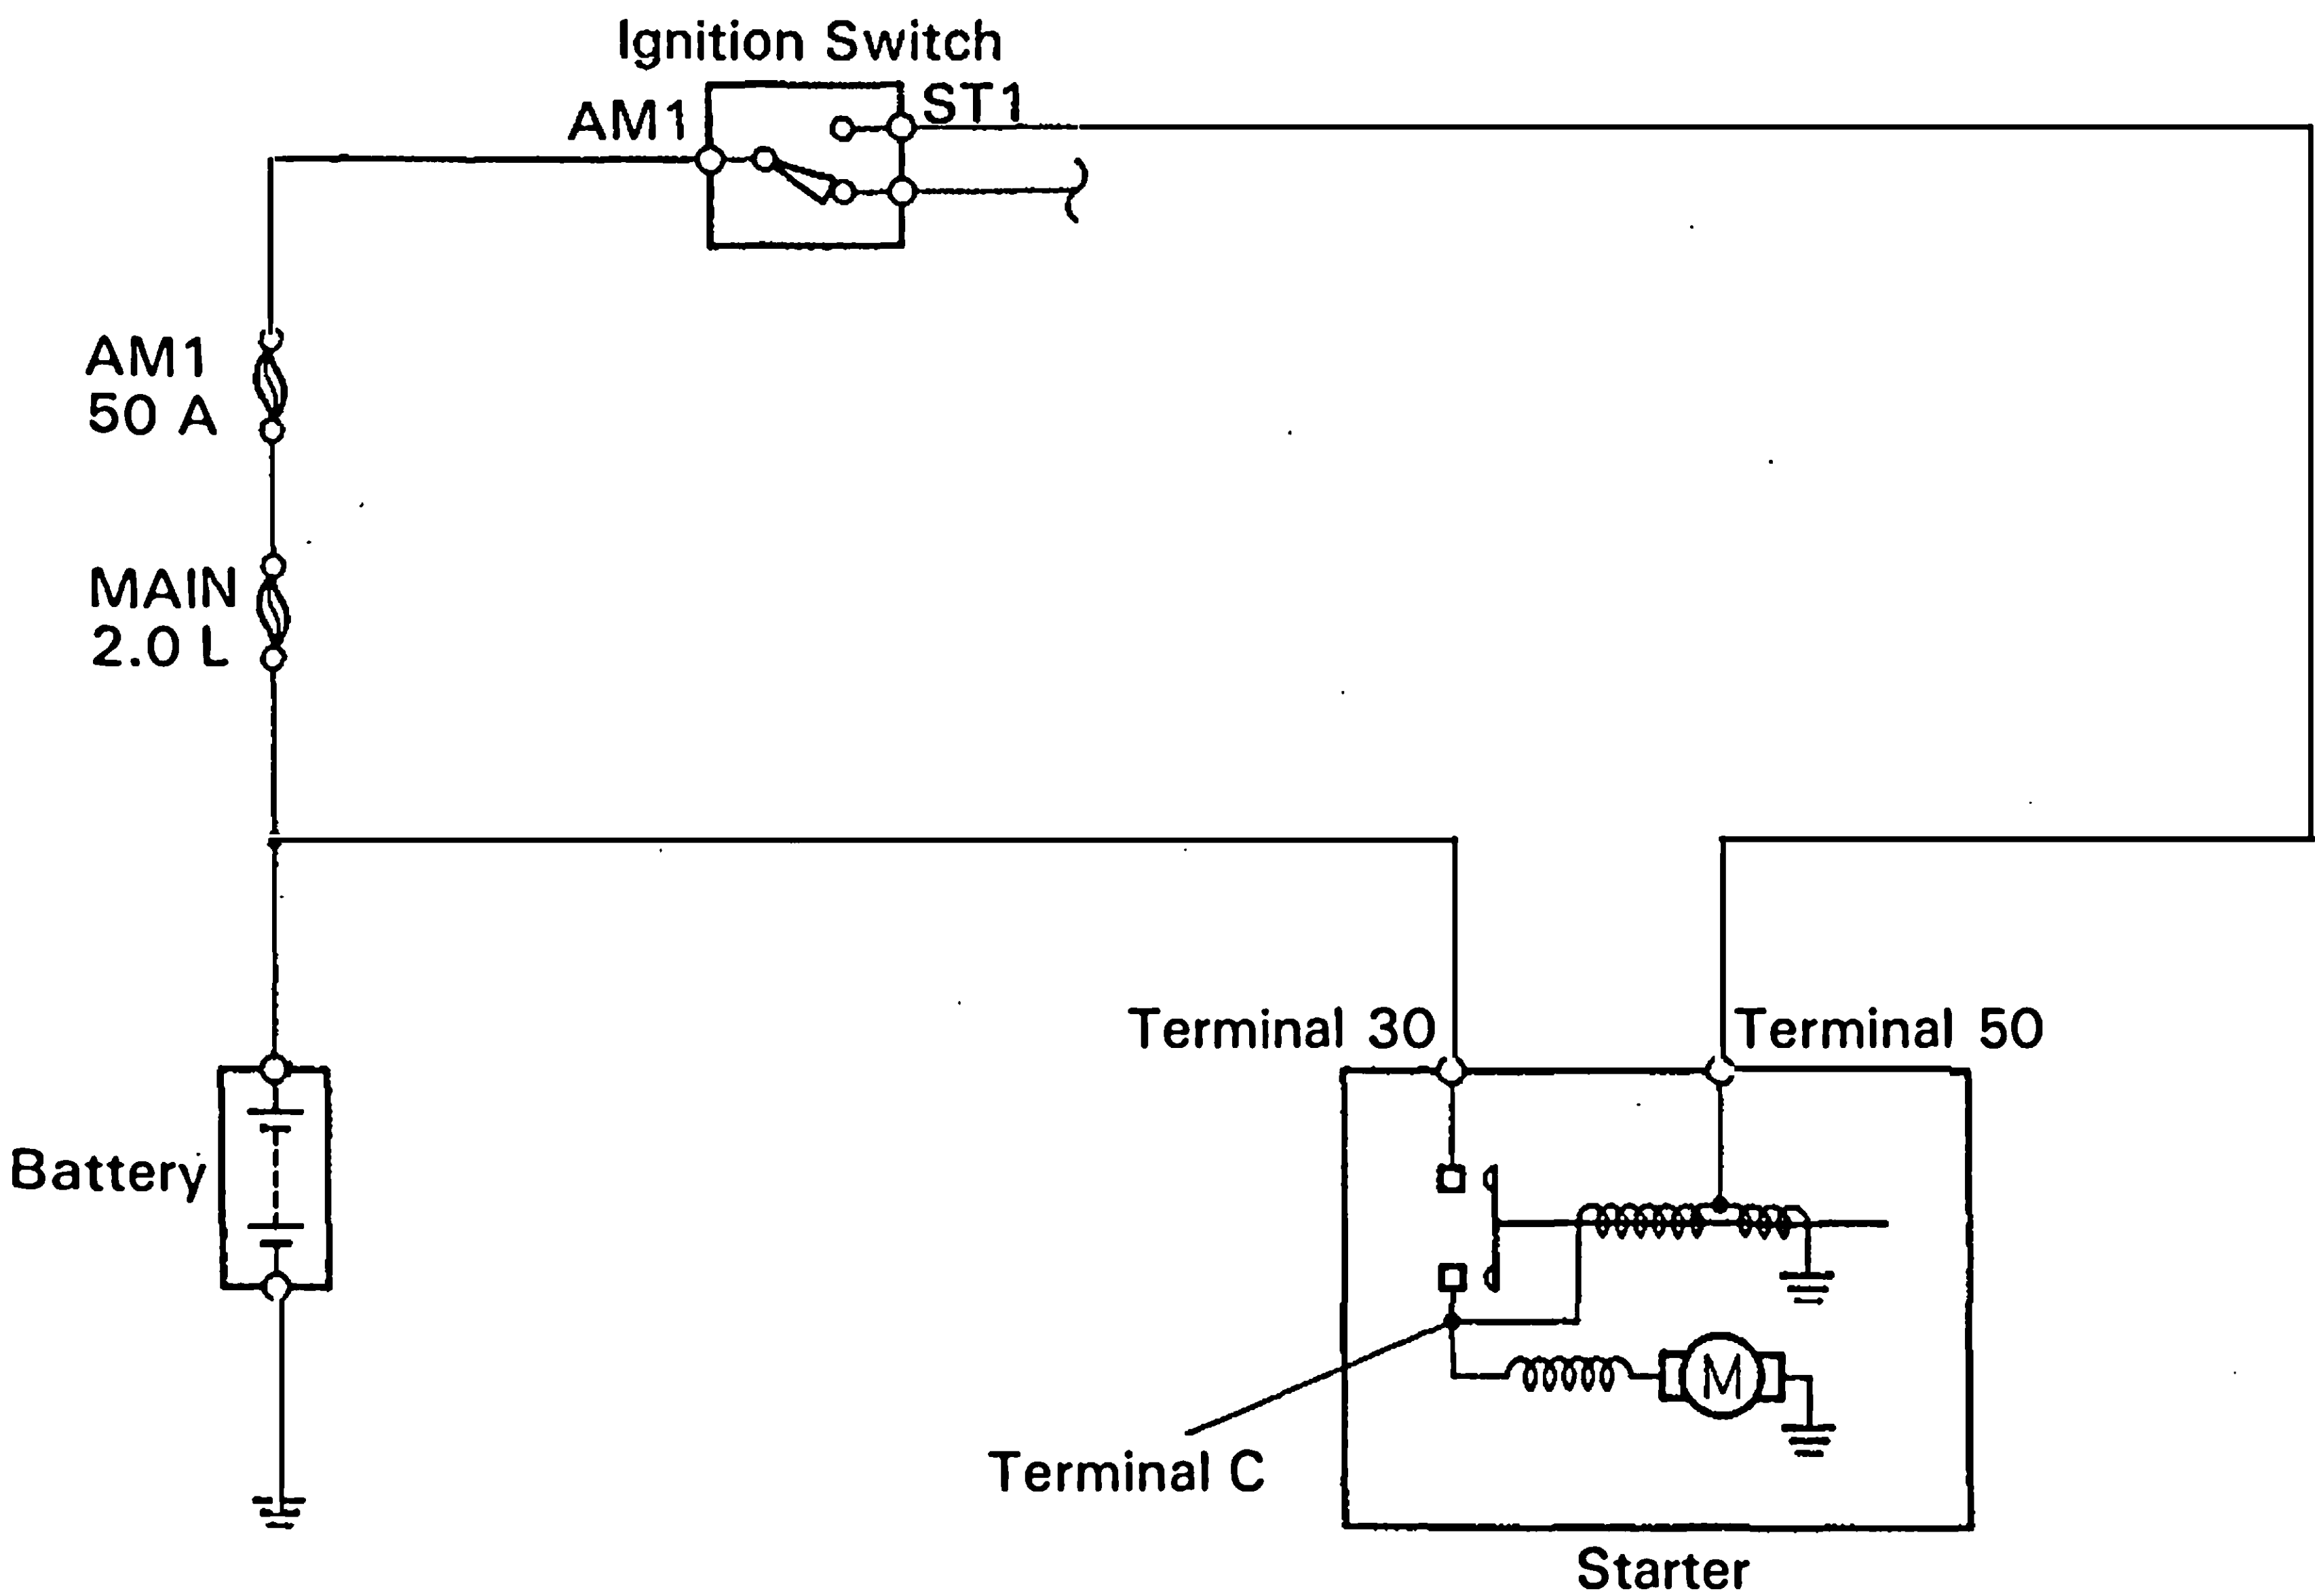

OPERATION




When the ignition switch is turned to START position, current flows from terminal 50 to the coil of the solenoid and the plunger is pulled by the magnetic force of the coil. When the plunger is pulled to the left as shown in the previous page, the contact plate of the plunger allows current from the battery to flow directly from terminal 30 to the motor, and the starter rotates. When the engine is running and the ignition switch is returned to ON, the magnetic force of the coil disappears and the contact plate of the plunger is returned to its original position by the return spring. Battery voltage no longer flows from terminal 30, so the motor stops.

ST00R-02

ST


PREPARATION
SST (SPECIAL SERVICE TOOLS)

ST00S-02

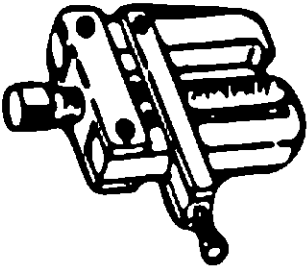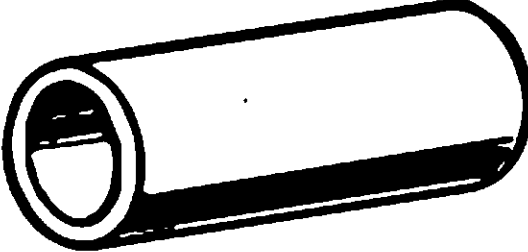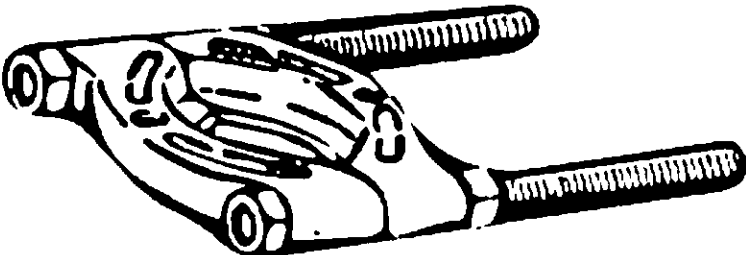	09286-46011 Injection Pump Spline Shaft Puller	Armature bearing for 1.4 kW type Armature front bearing for 2.2 kW type
	09820-00030 Alternator Rear Bearing Replacer	Armature rear bearing for 1.4 kW type
	09950-00020 Bearing Remover	Armature rear bearing for 2.2 kW type

RECOMMENDED TOOLS

ST00T-01

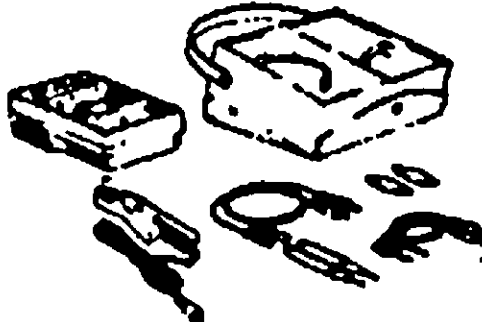	09082-00015 TOYOTA Electrical Tester	
---	--------------------------------------	--


EQUIPMENT

ST00U-01


Dial indicator	Commutator
Magnetic finger	
Pull scale	Brush spring
Sandpaper	Commutator
Torque wrench	
V-block	
Vernier calipers	Commutator, Brush

STARTER (1.4 kW) STARTER REMOVAL

ST02K-01

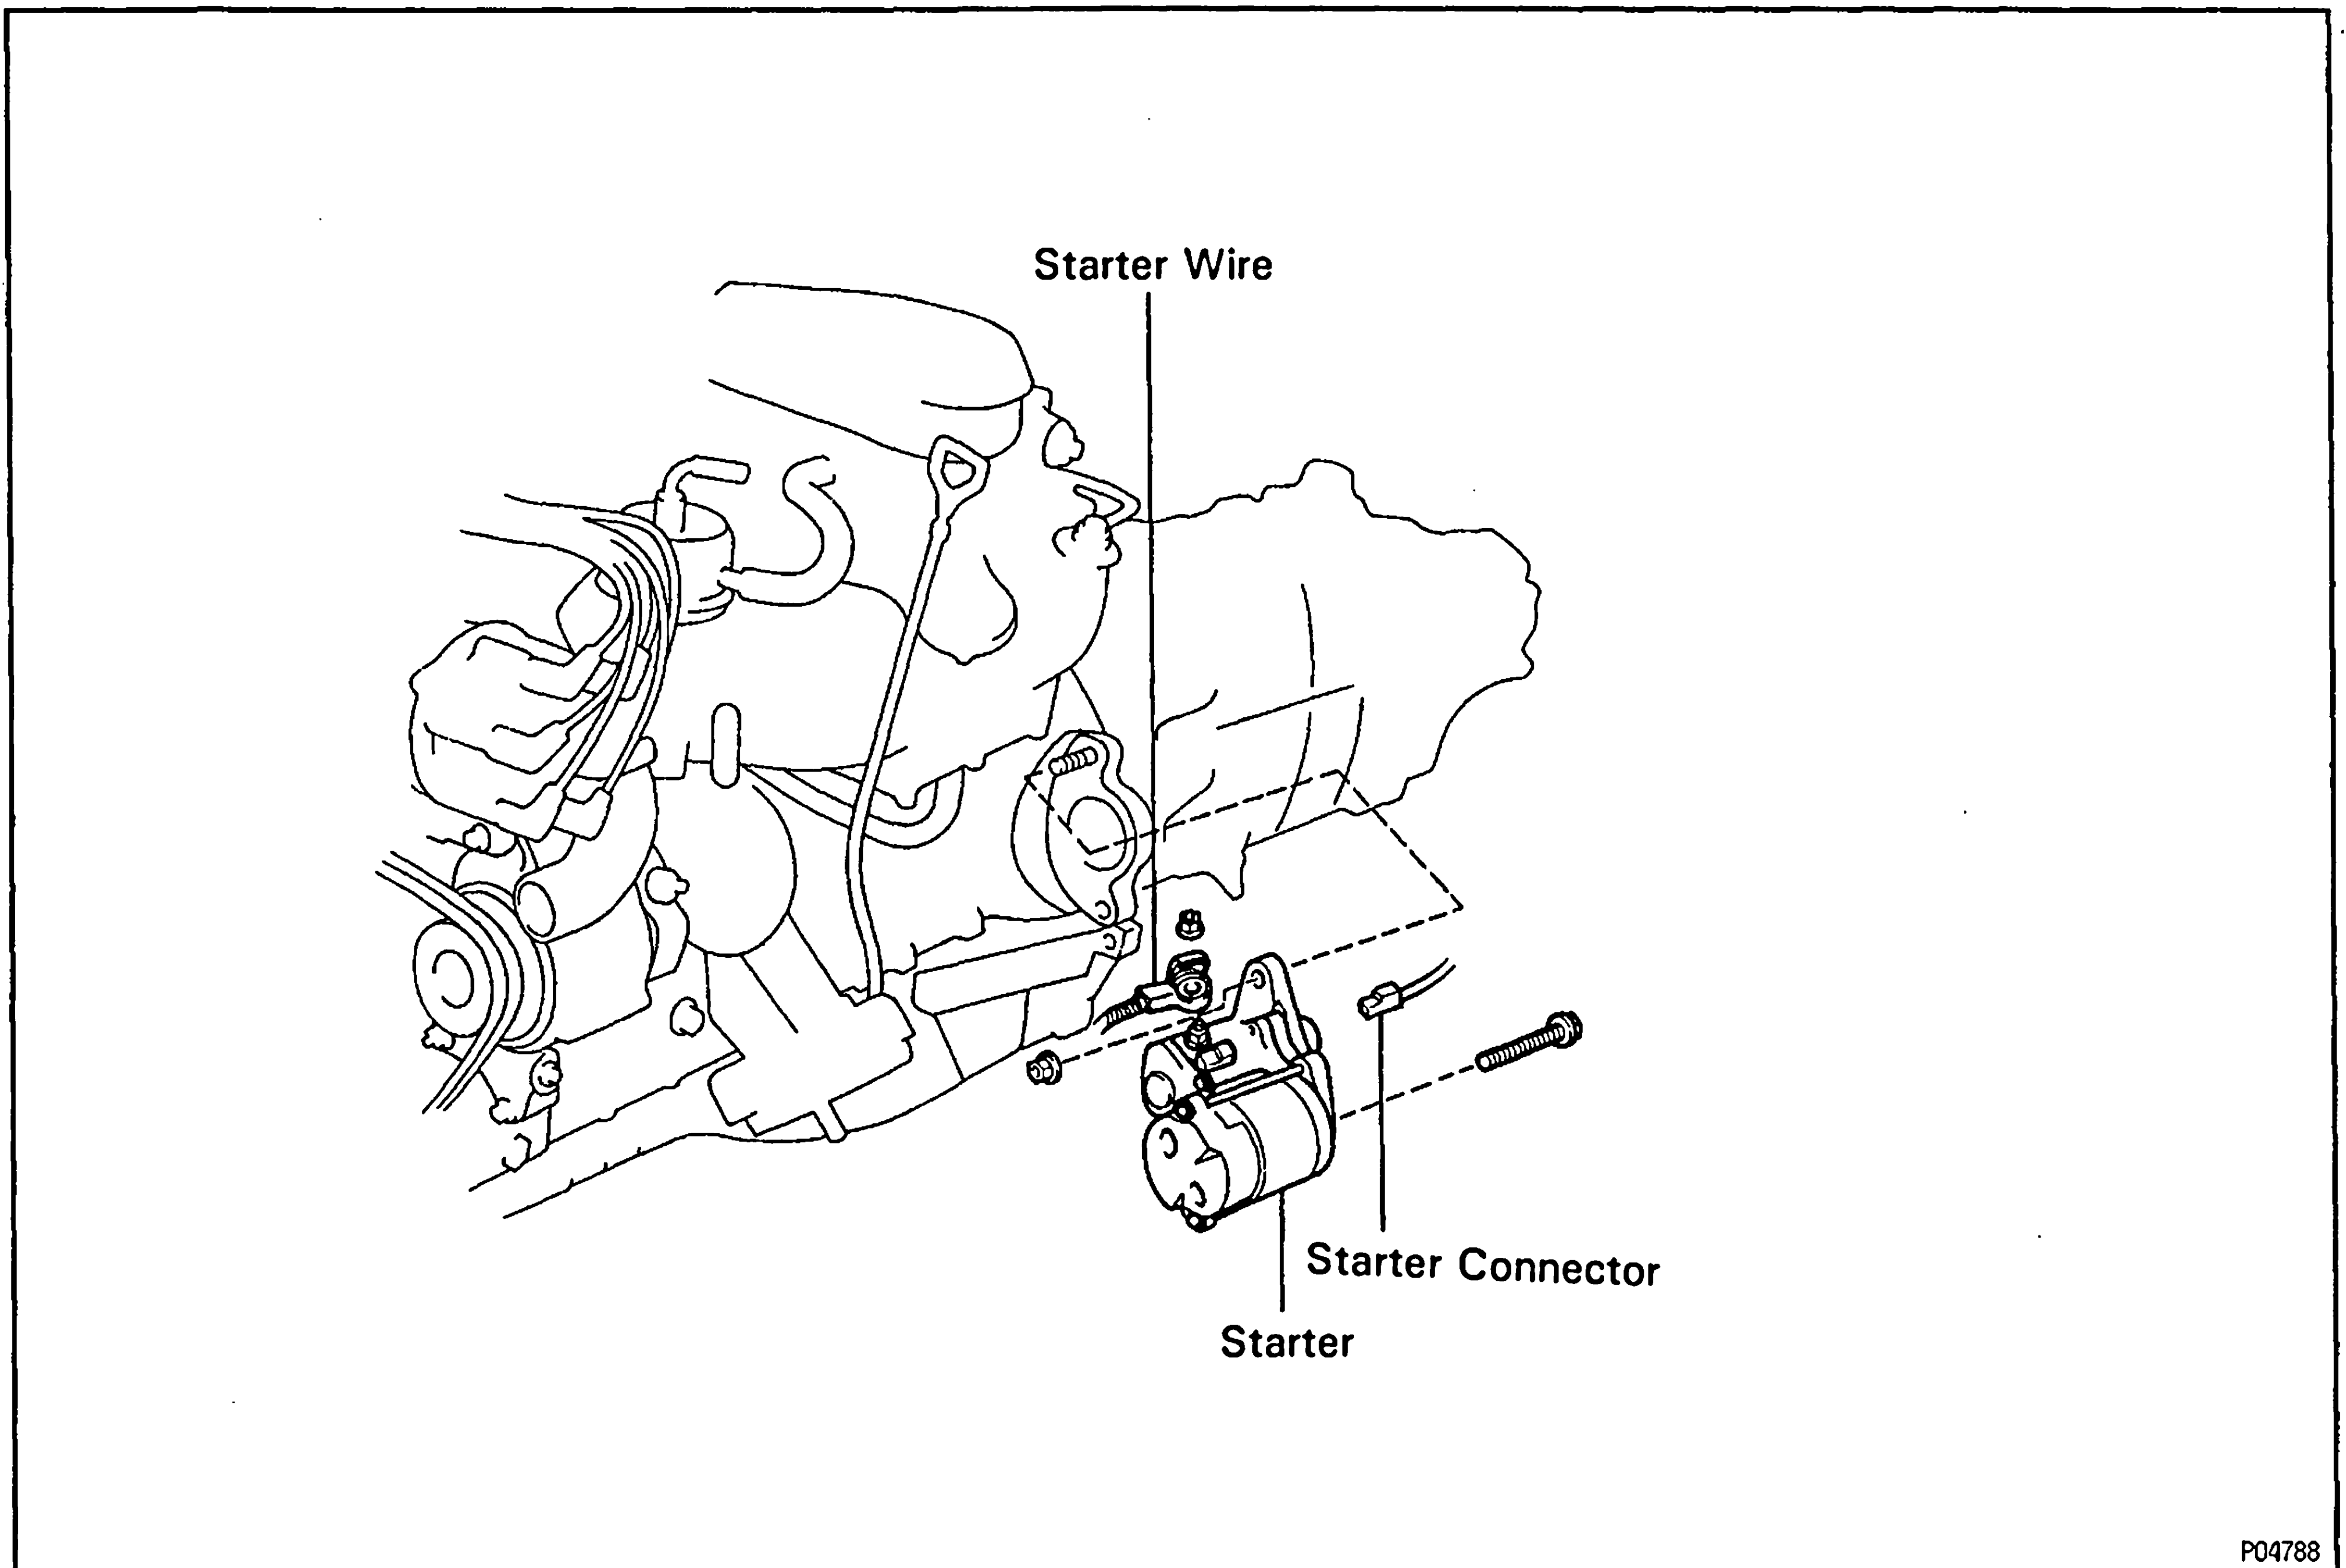


1. DISCONNECT CABLE FROM NEGATIVE TERMINAL OF BATTERY

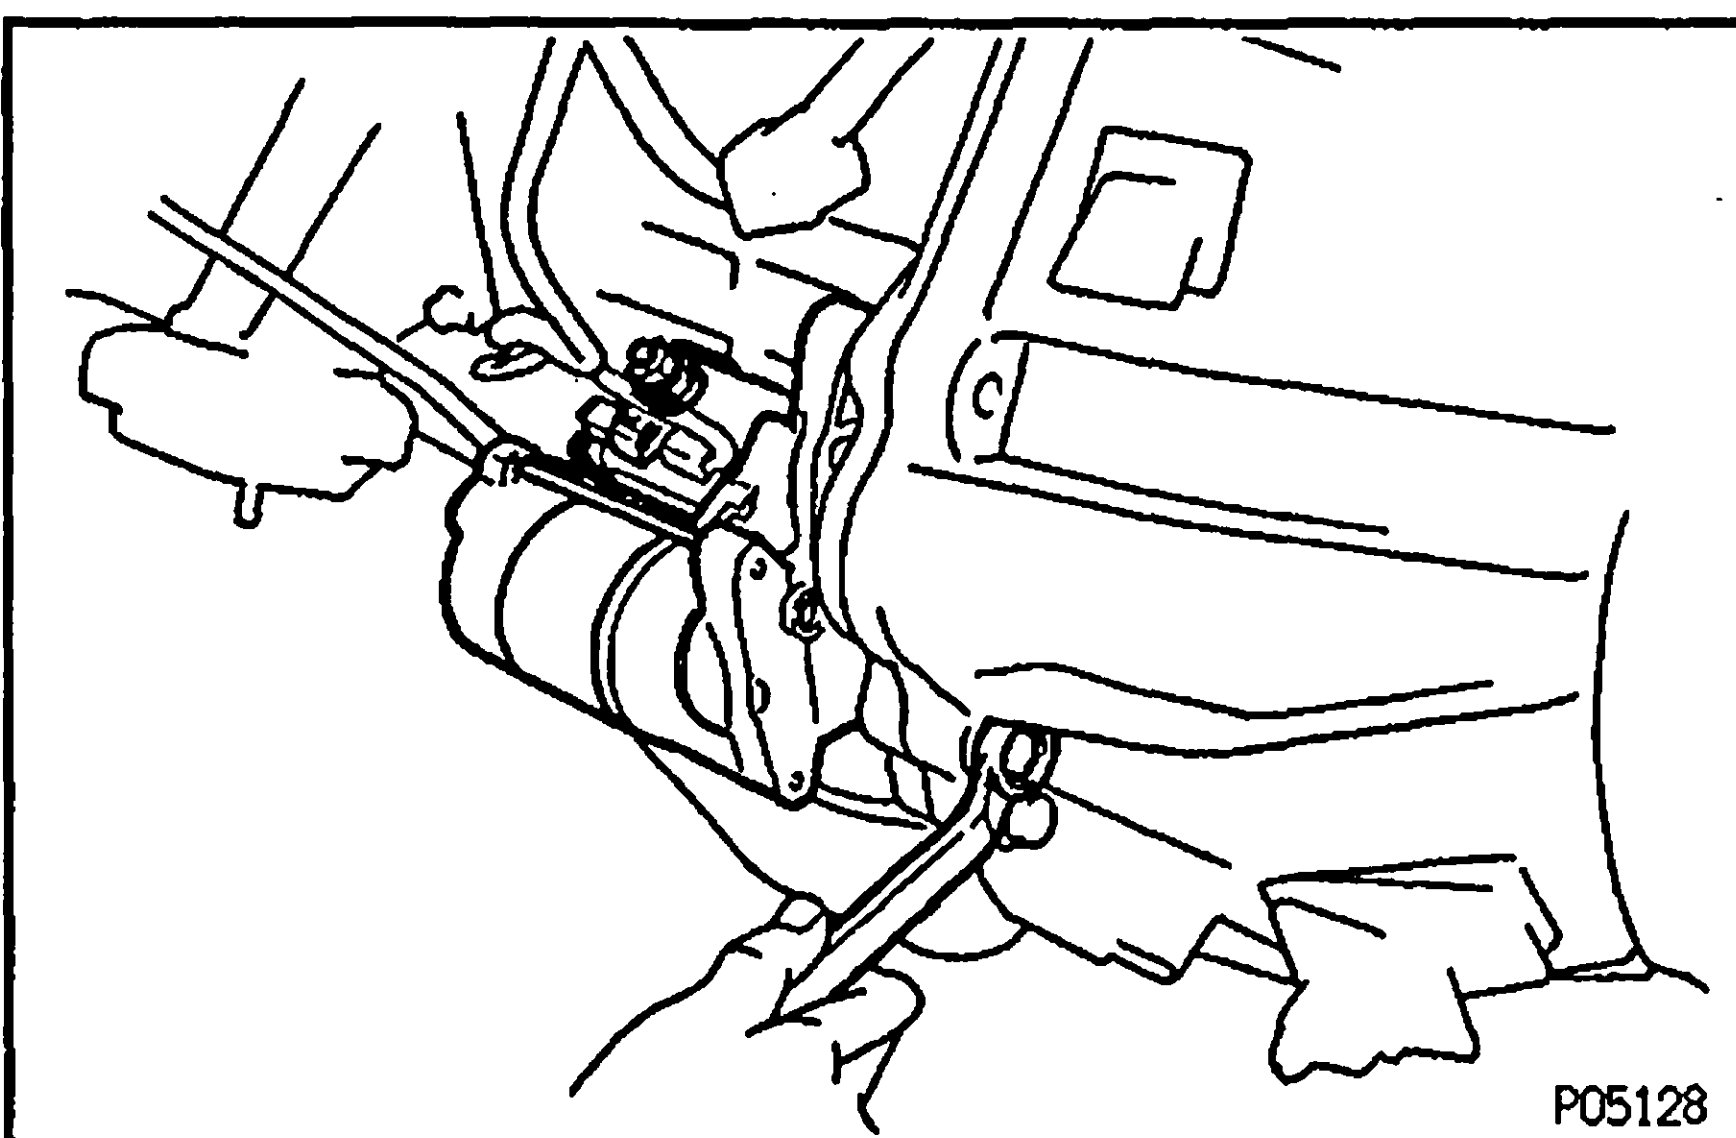

2. REMOVE STARTER

- Disconnect the starter connector.
- Remove the nut, and disconnect the starter wire.
- Remove the bolt, nut and starter.

COMPONENTS


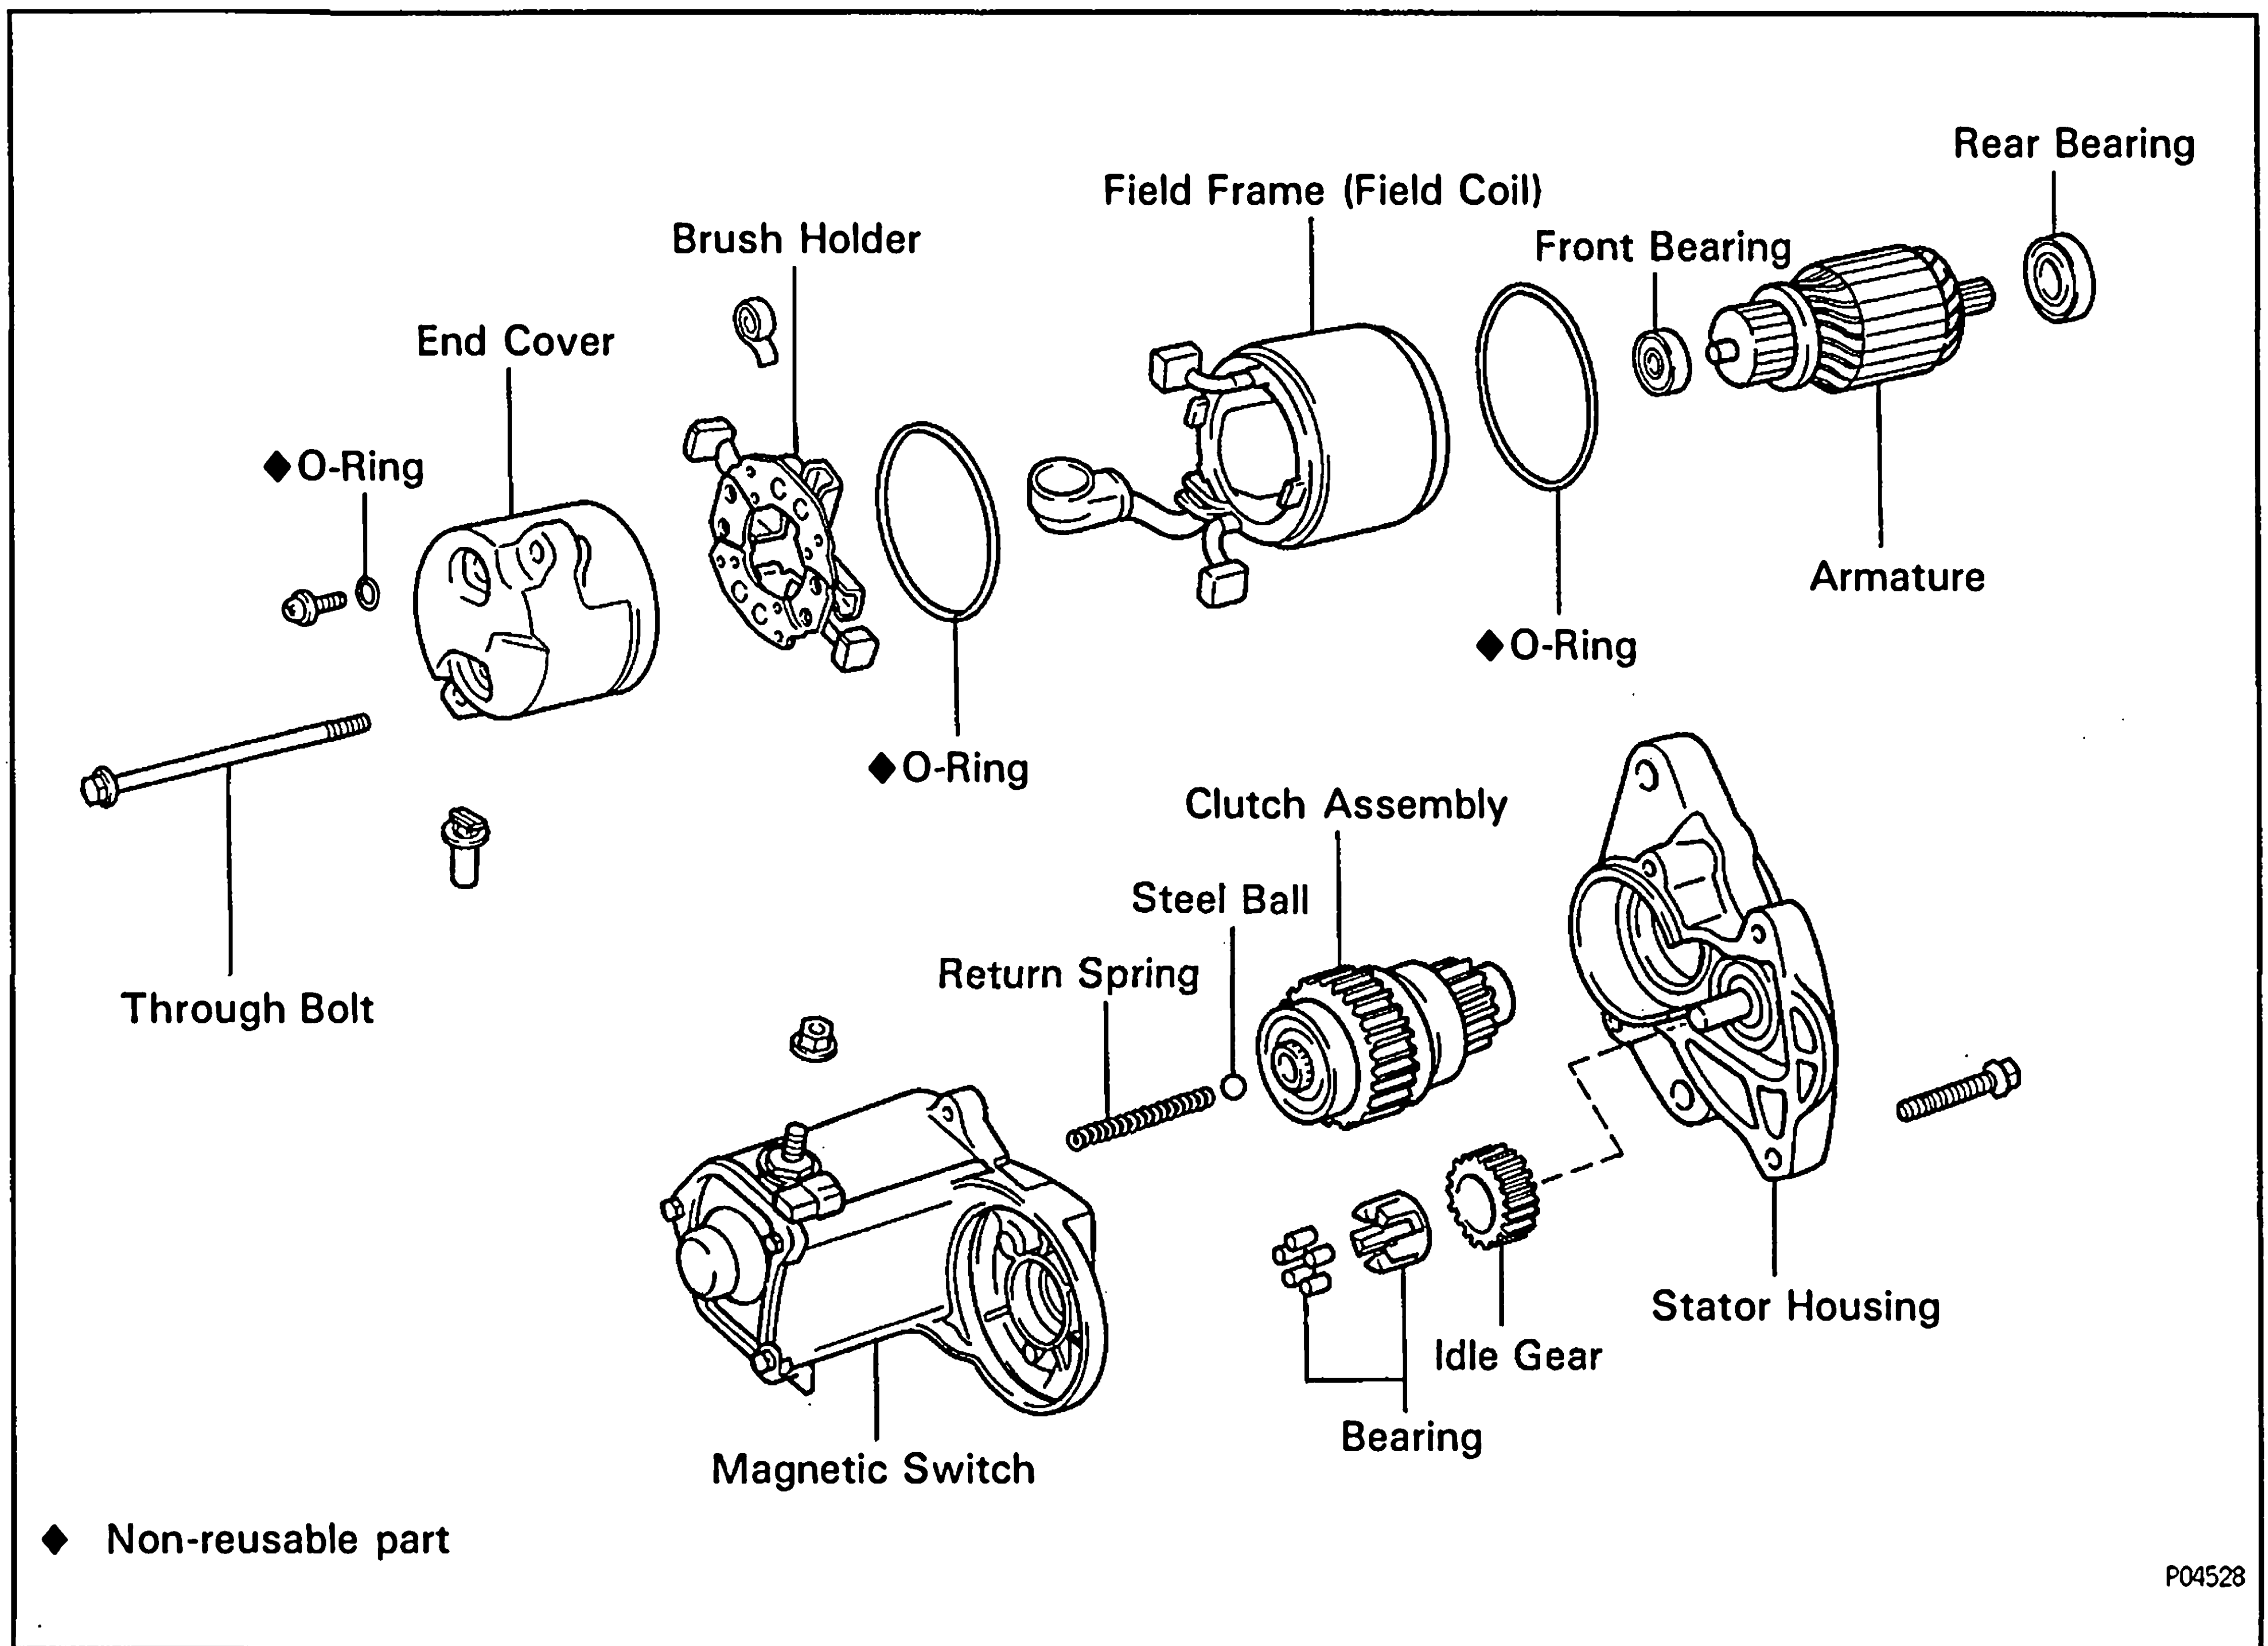



ST00X-02

STARTER DISASSEMBLY

1. REMOVE FIELD FRAME AND ARMATURE


- Remove the nut, and disconnect the lead wire from the magnetic switch terminal.
- Remove the two through bolts.
- Pull out the field frame with the armature from the magnetic switch assembly.
- Remove the O-ring.

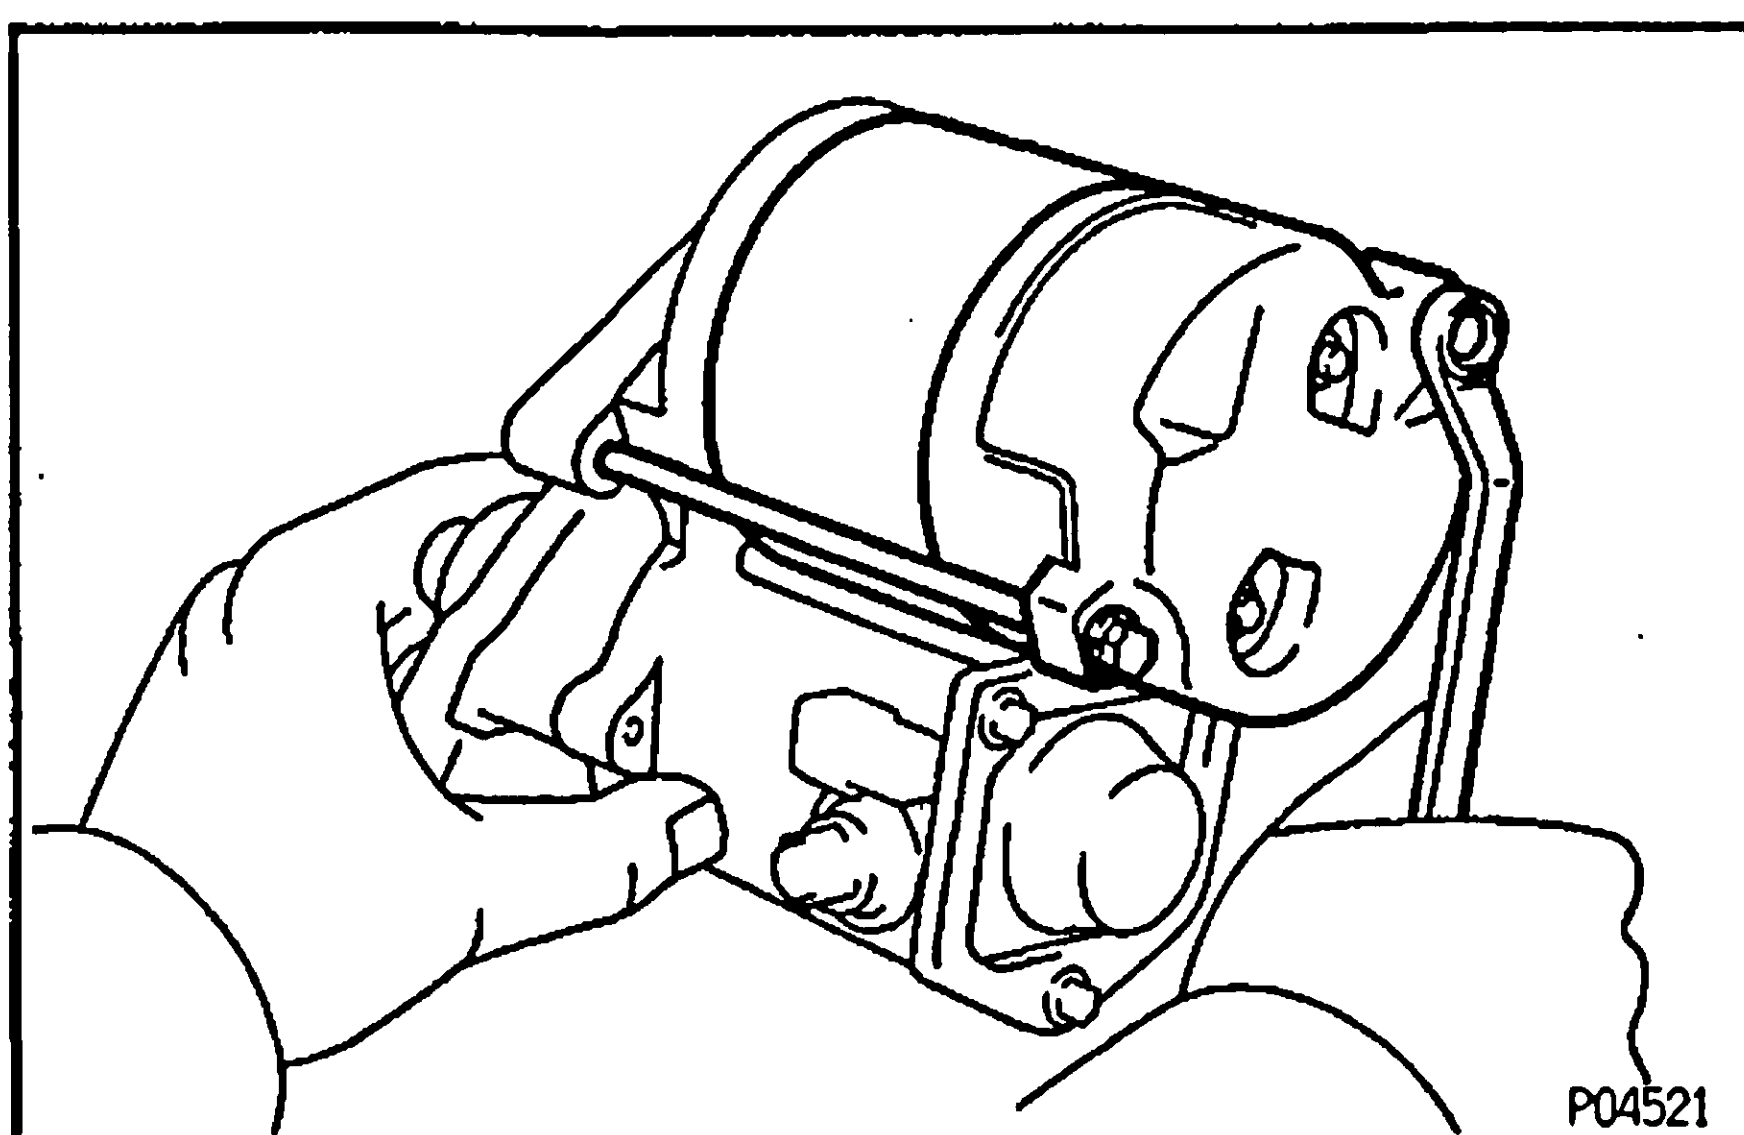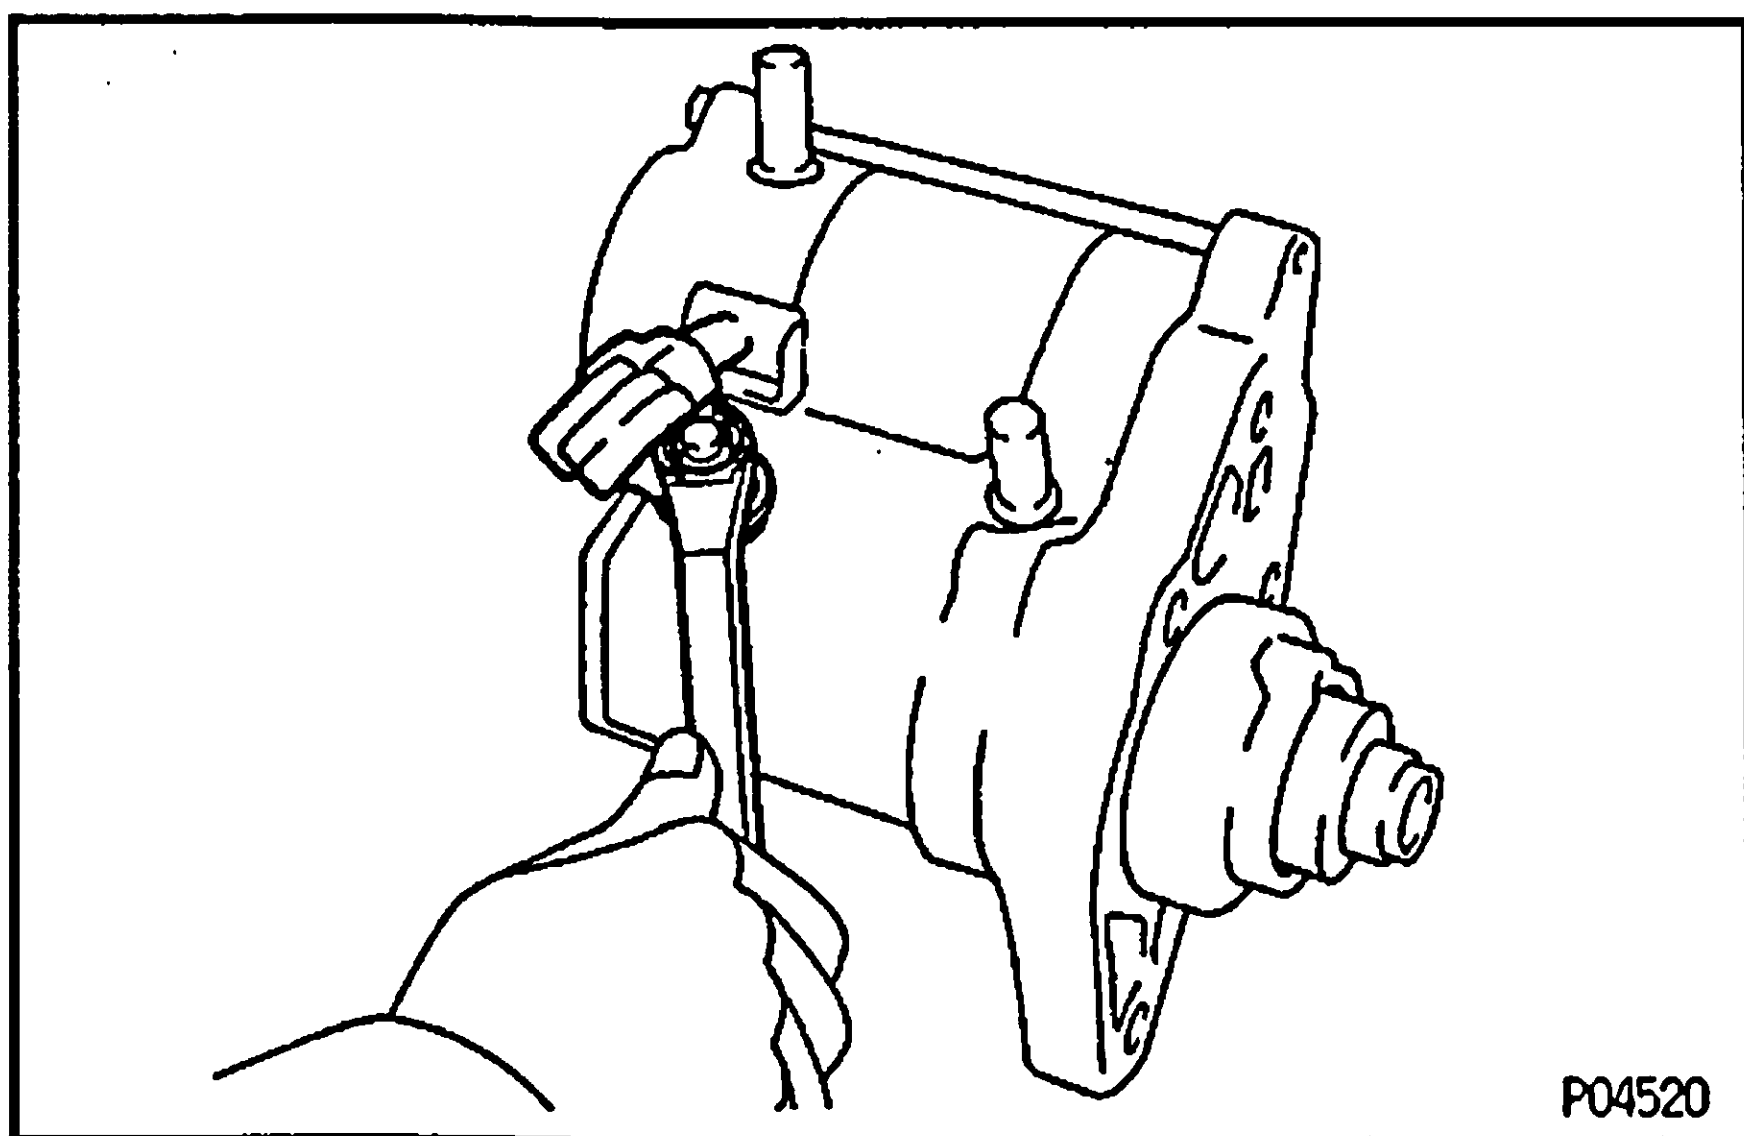

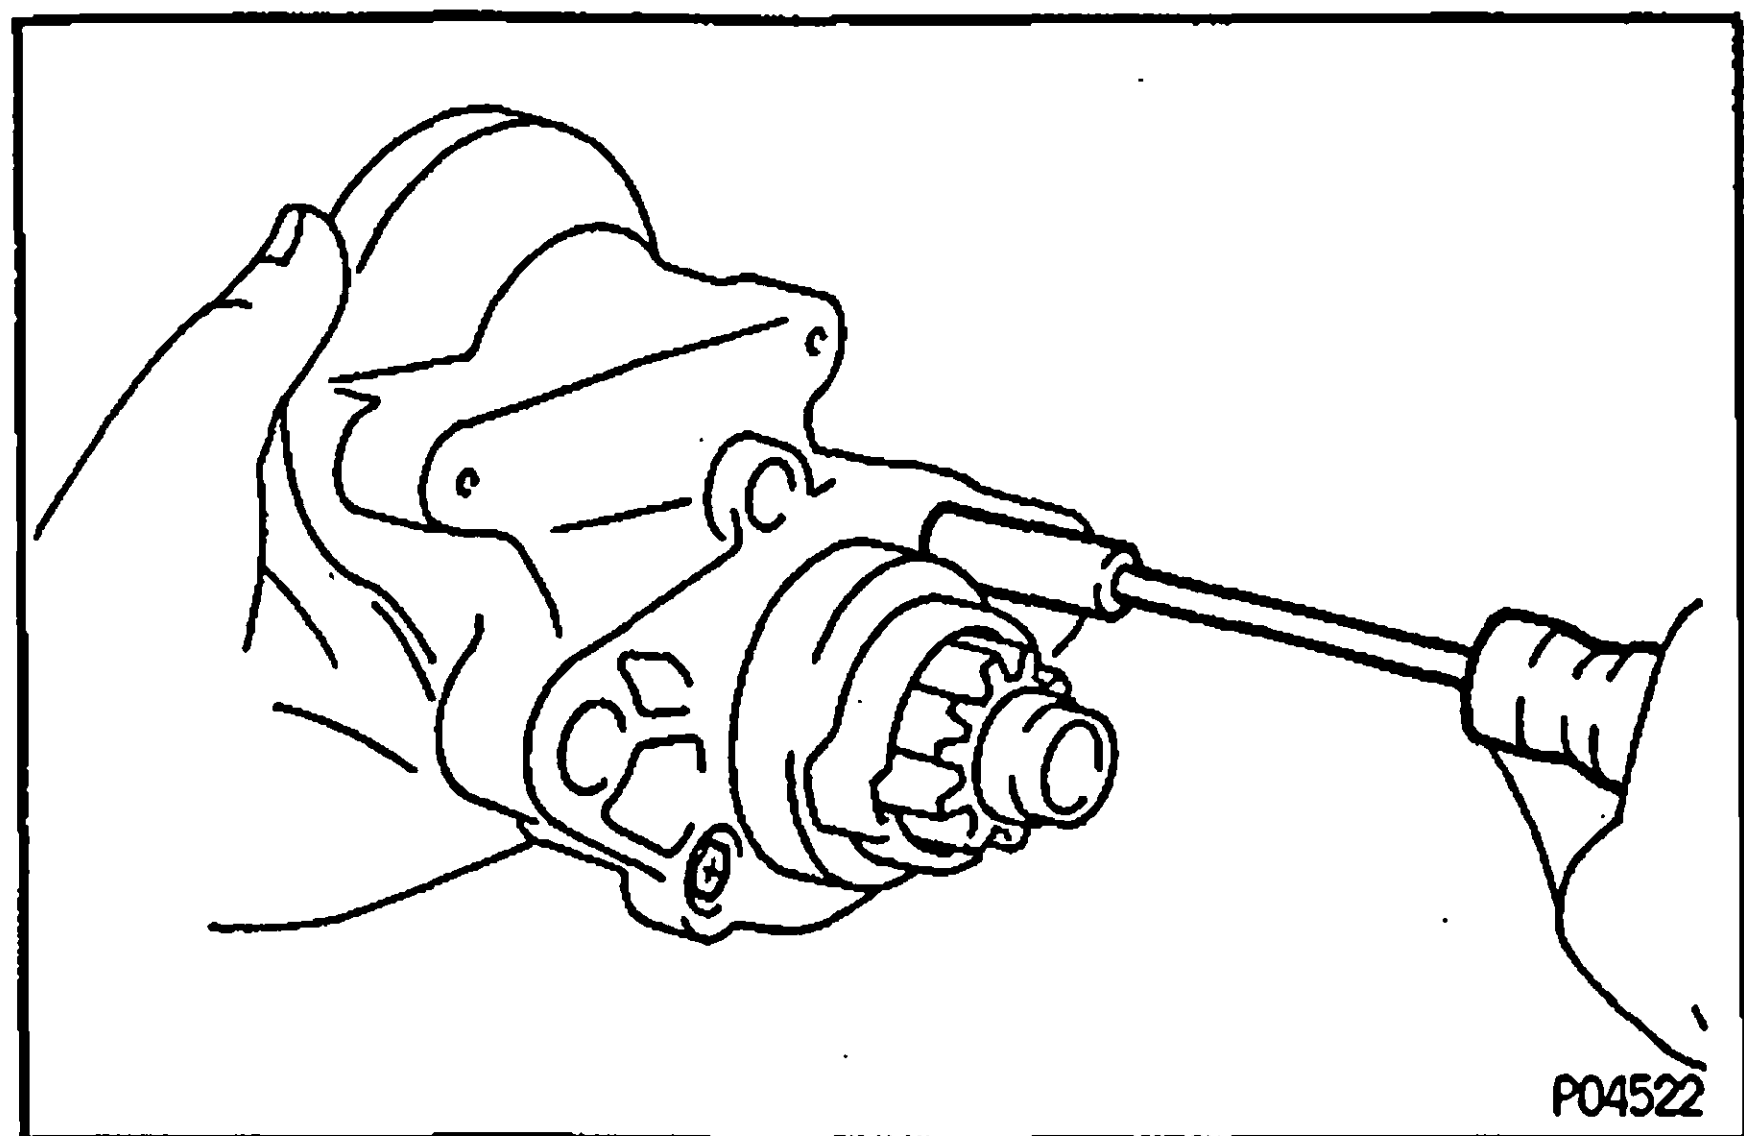

2. REMOVE STARTER HOUSING, CLUTCH ASSEMBLY AND GEAR


(a) Remove the two screws.

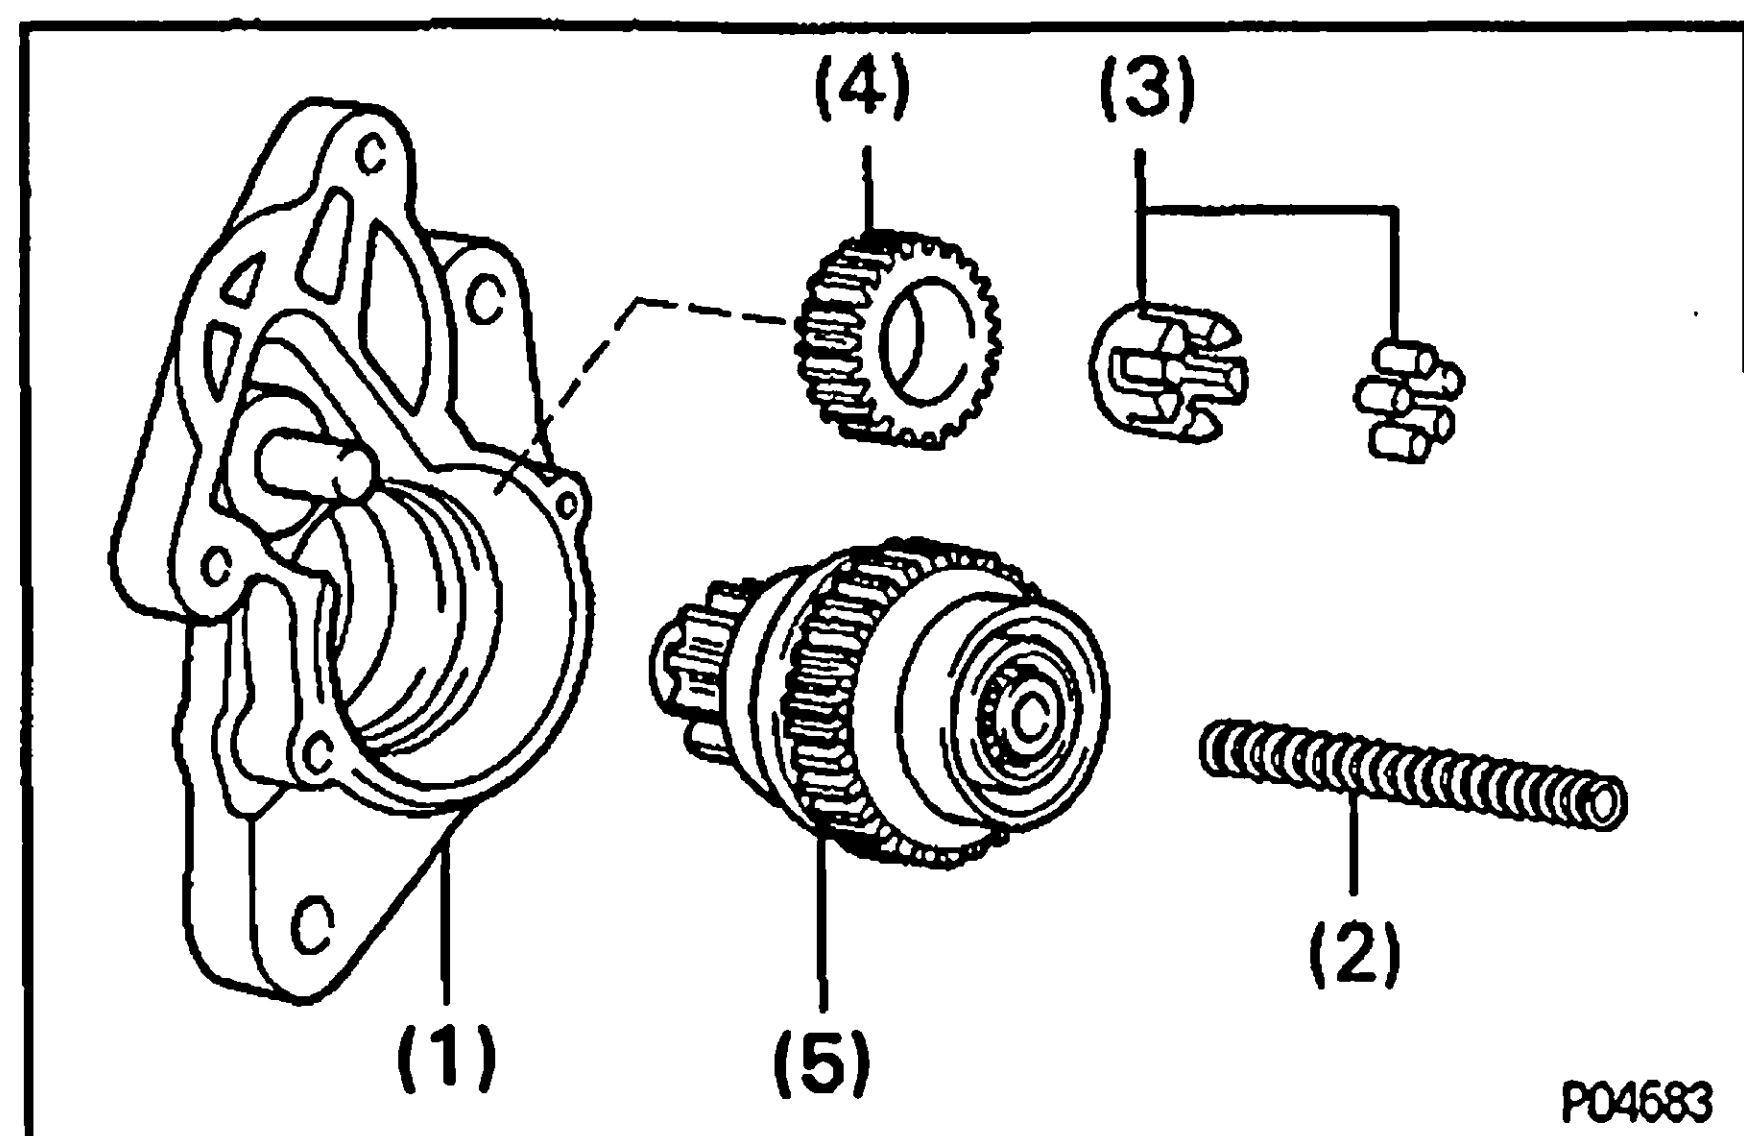

(b) Remove the following parts from the magnetic switch assembly:


- (1) Starter housing
- (2) Return spring
- (3) Bearing
- (4) Idler gear
- (5) Clutch assembly

ST

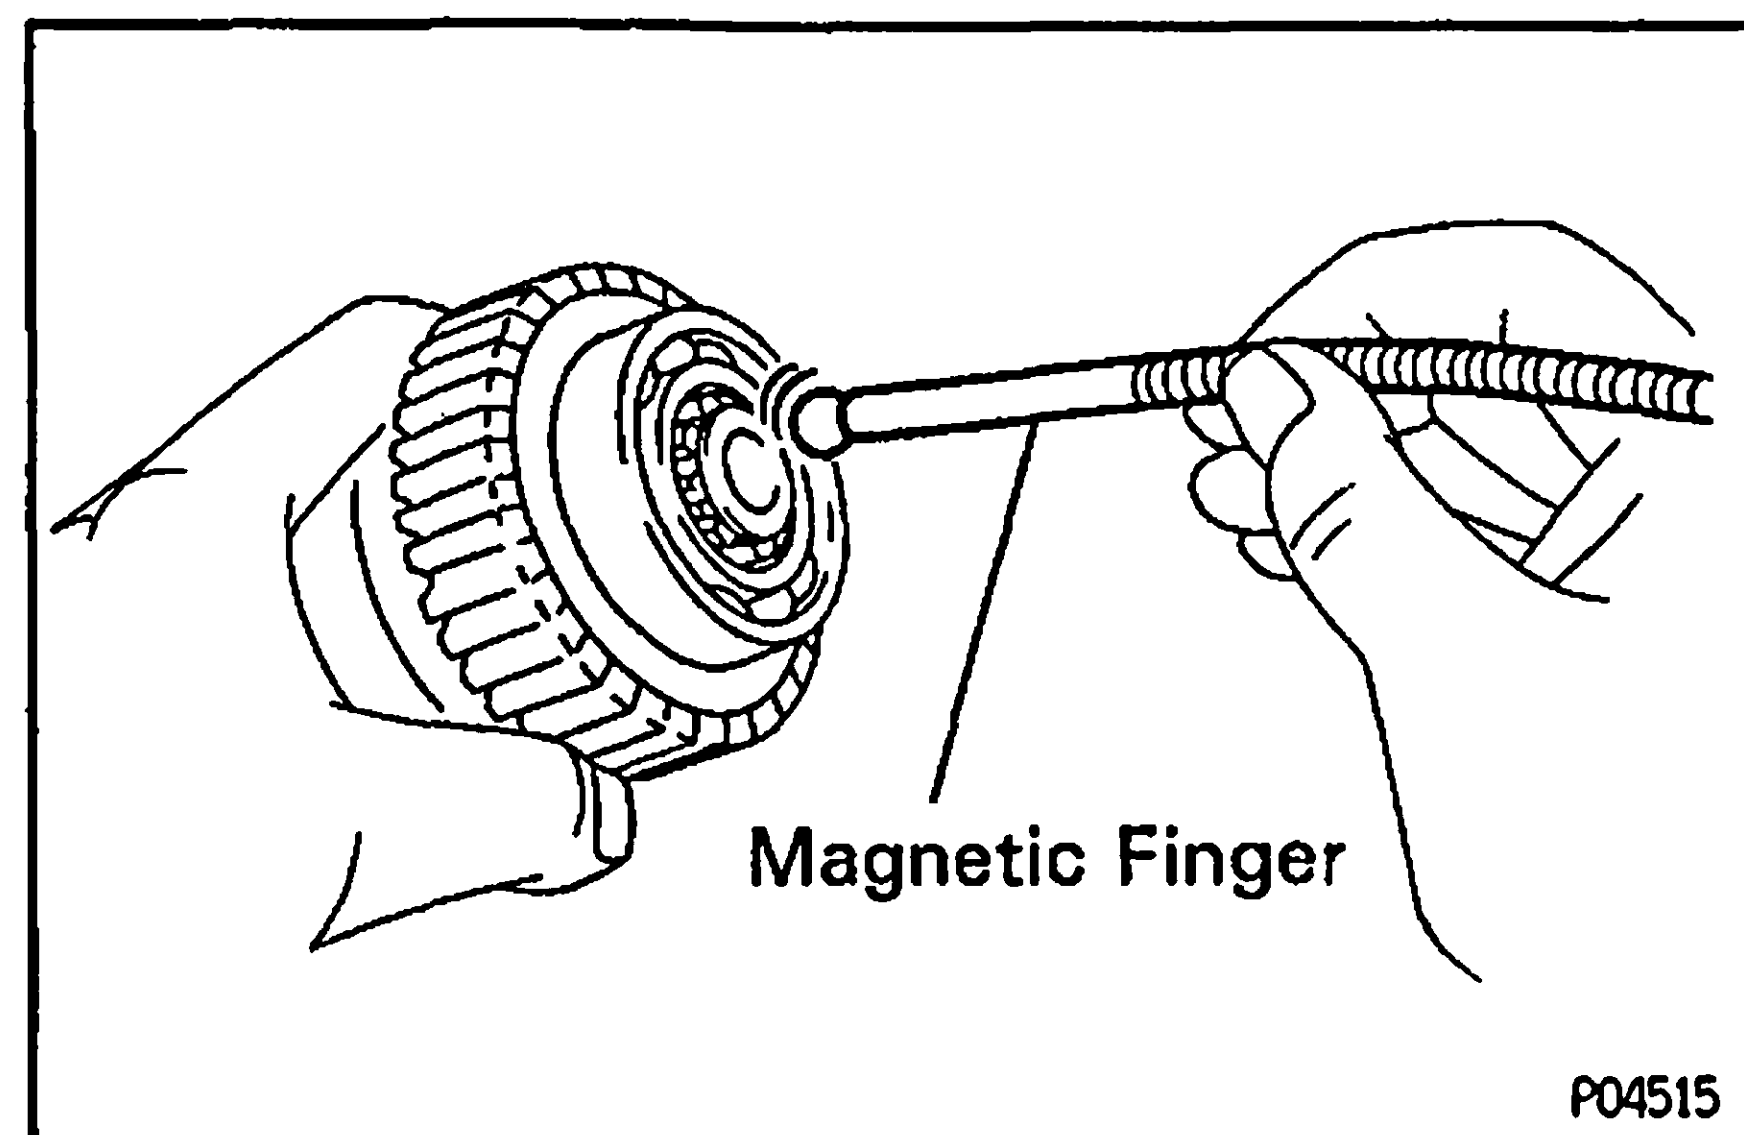


3. REMOVE STEEL BALL

Using a magnetic finger, remove the steel ball from the clutch shaft hole.

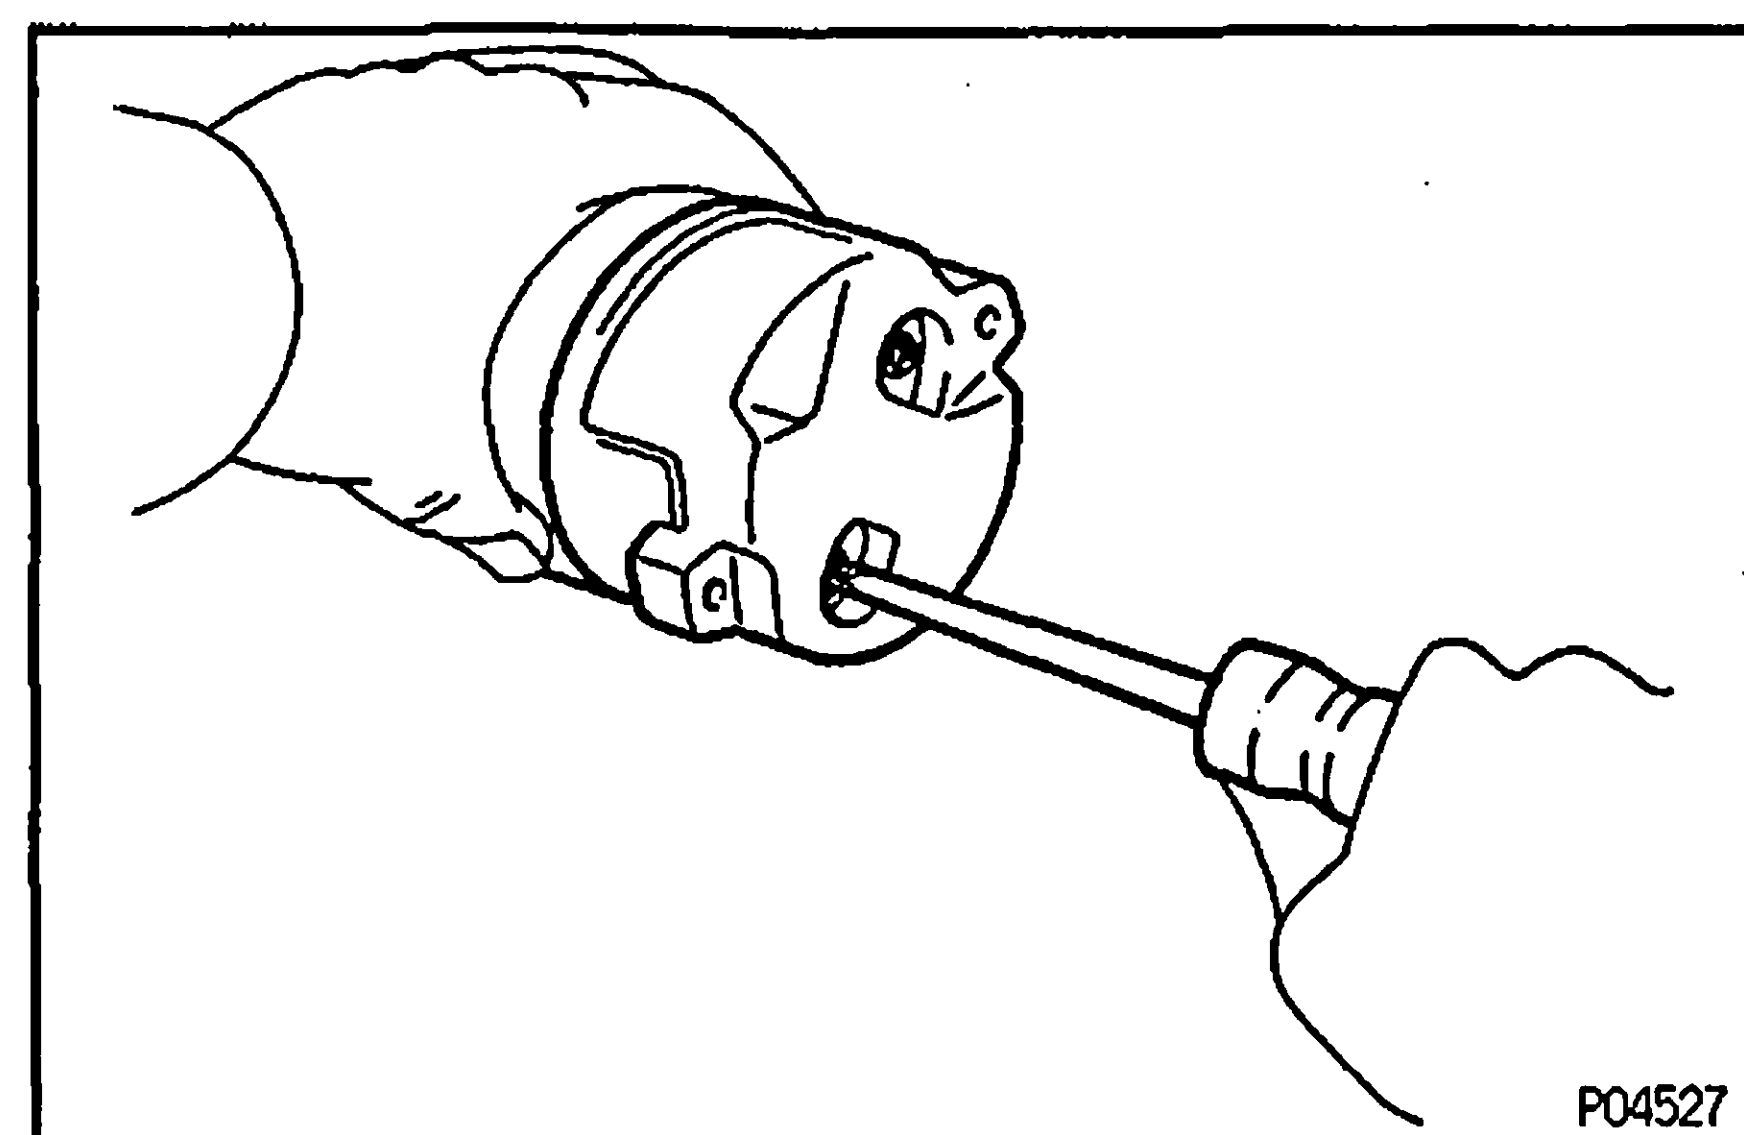


4. REMOVE BRUSH HOLDER

- (a) Remove the two screws and end cover from the field frame.
- (b) Remove the O—ring from the field frame.

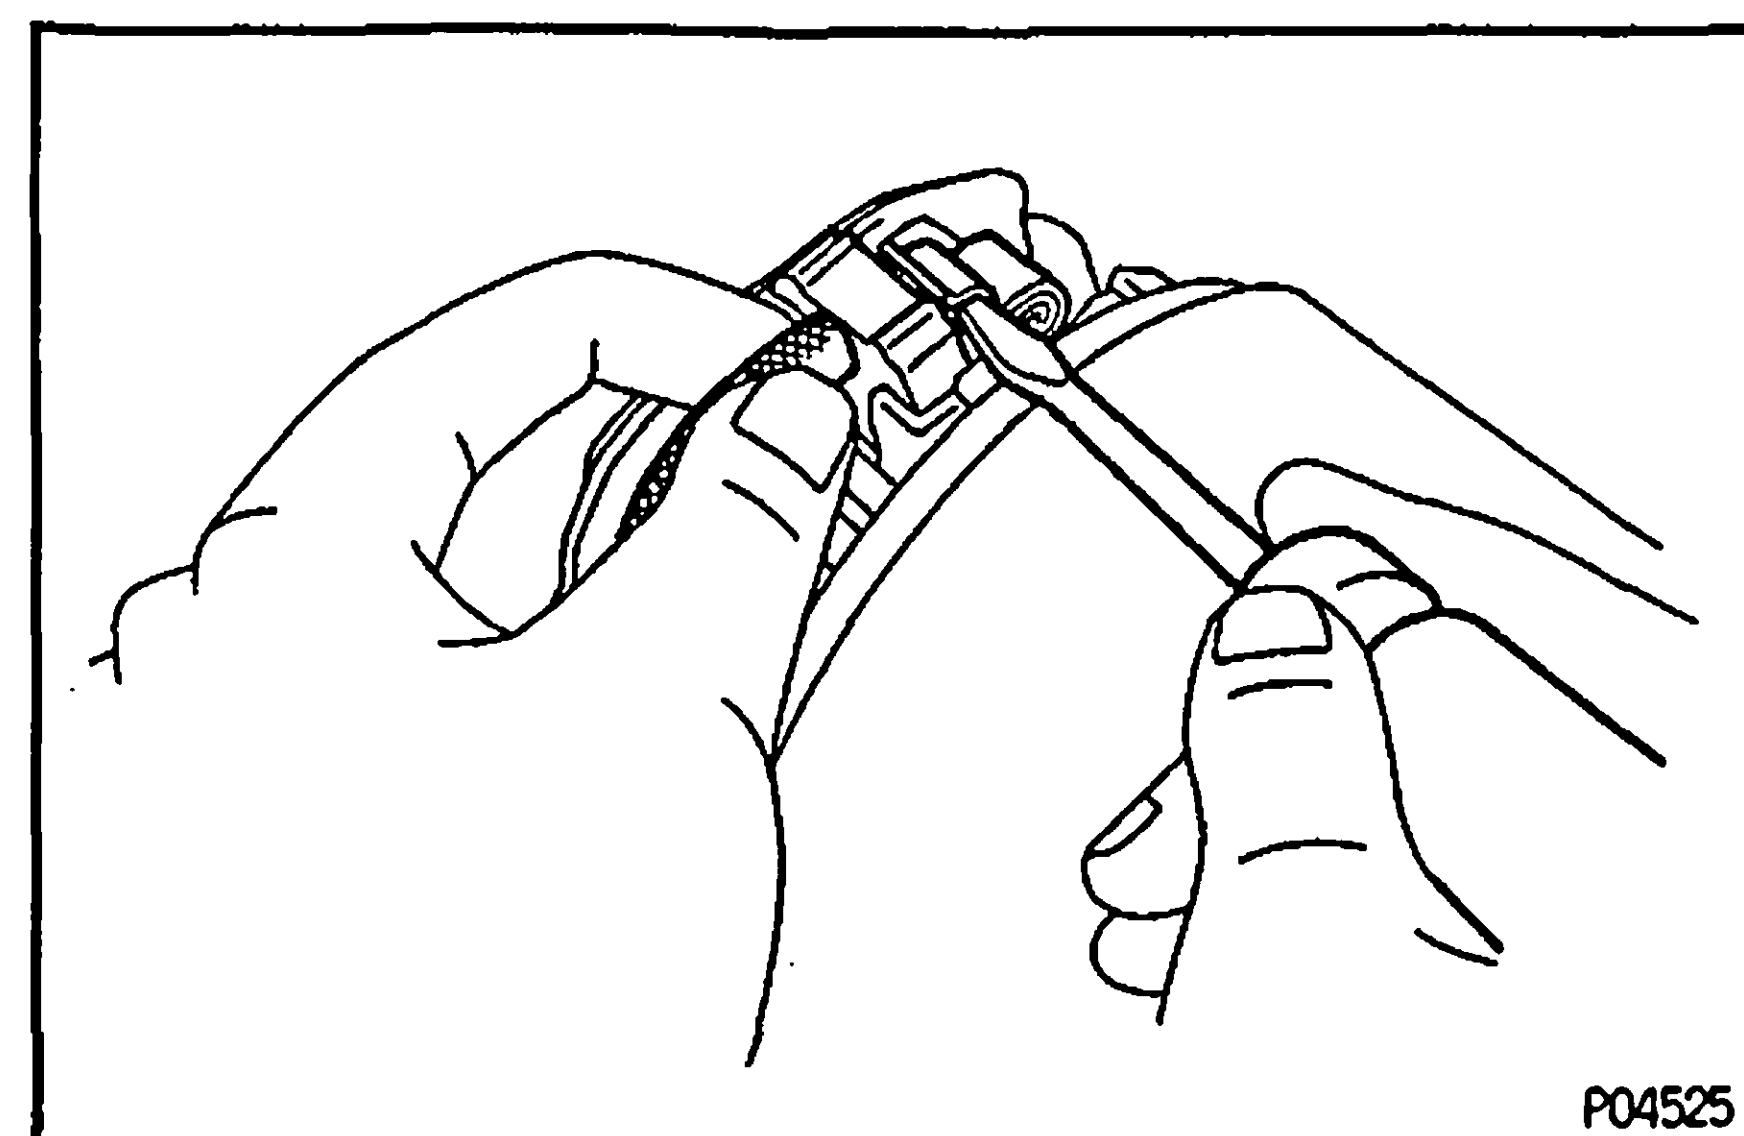

(c) Using a screwdriver, hold the spring back and disconnect the brush from the brush holder. Disconnect the four brushes and remove the brush holder.

5. REMOVE ARMATURE FROM FIELD FRAME

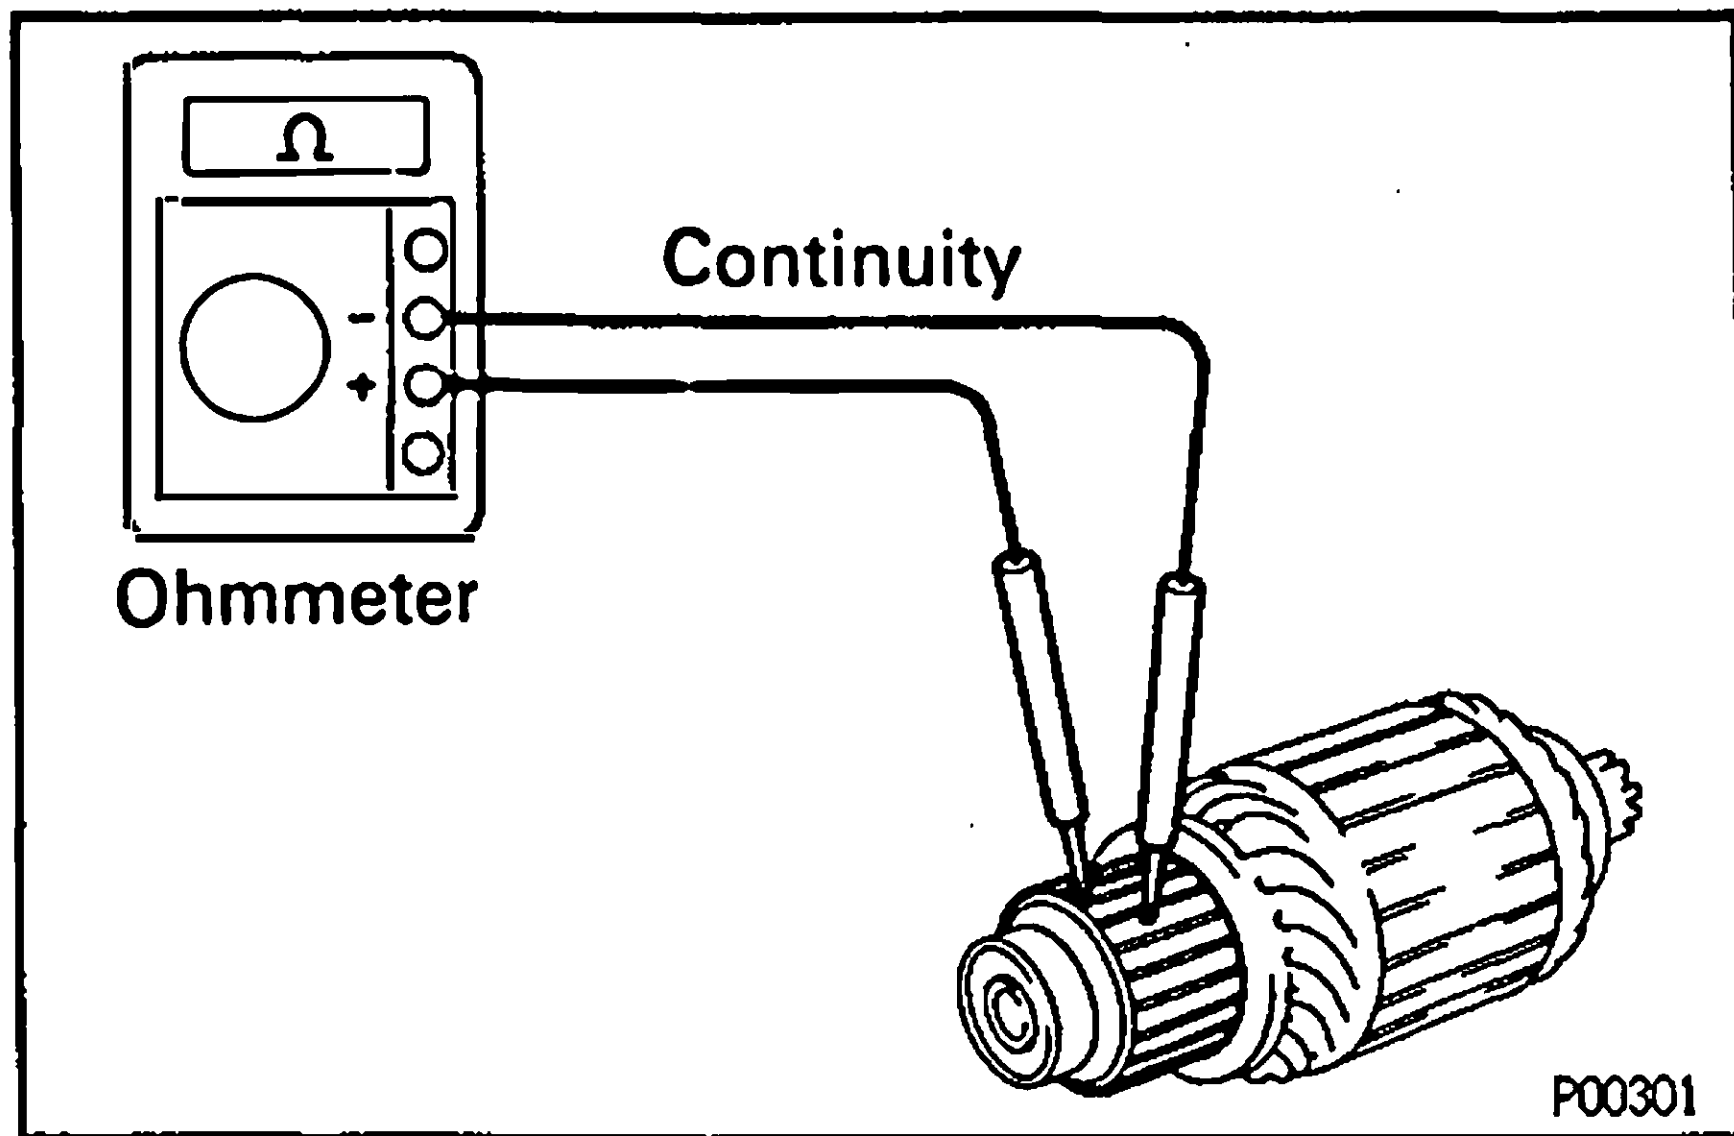


STARTER INSPECTION AND REPAIR

Armature Coil

1. INSPECT COMMUTATOR FOR OPEN CIRCUIT

Using an ohmmeter, check that there is continuity between the segments of the commutator.

If there is no continuity between any segment, replace the armature.

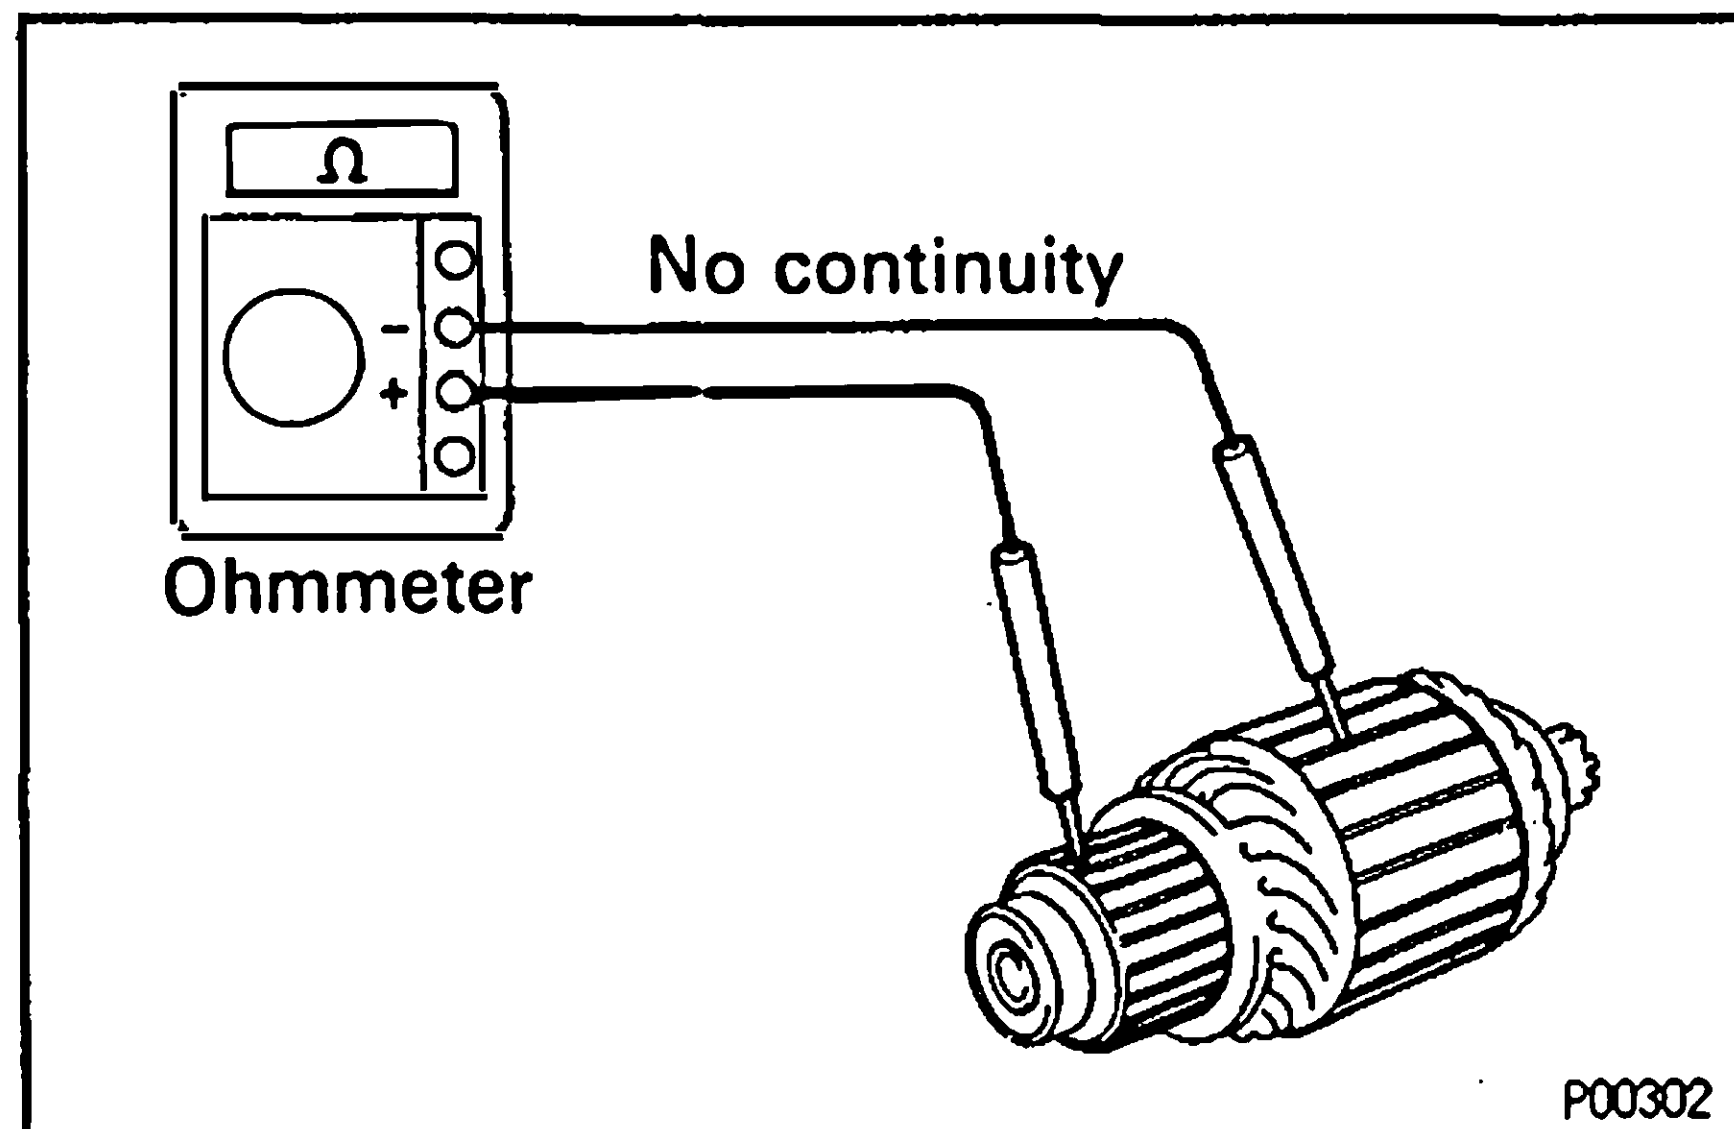

2. INSPECT COMMUTATOR FOR GROUND


Using an ohmmeter, check that there is no continuity between the commutator and armature coil core.

If there is continuity, replace the armature.

Commutator

1. INSPECT COMMUTATOR FOR DIRTY AND BURNT SURFACES

If the surface is dirty or burnt, correct it with sandpaper (No. 400) or on a lathe.

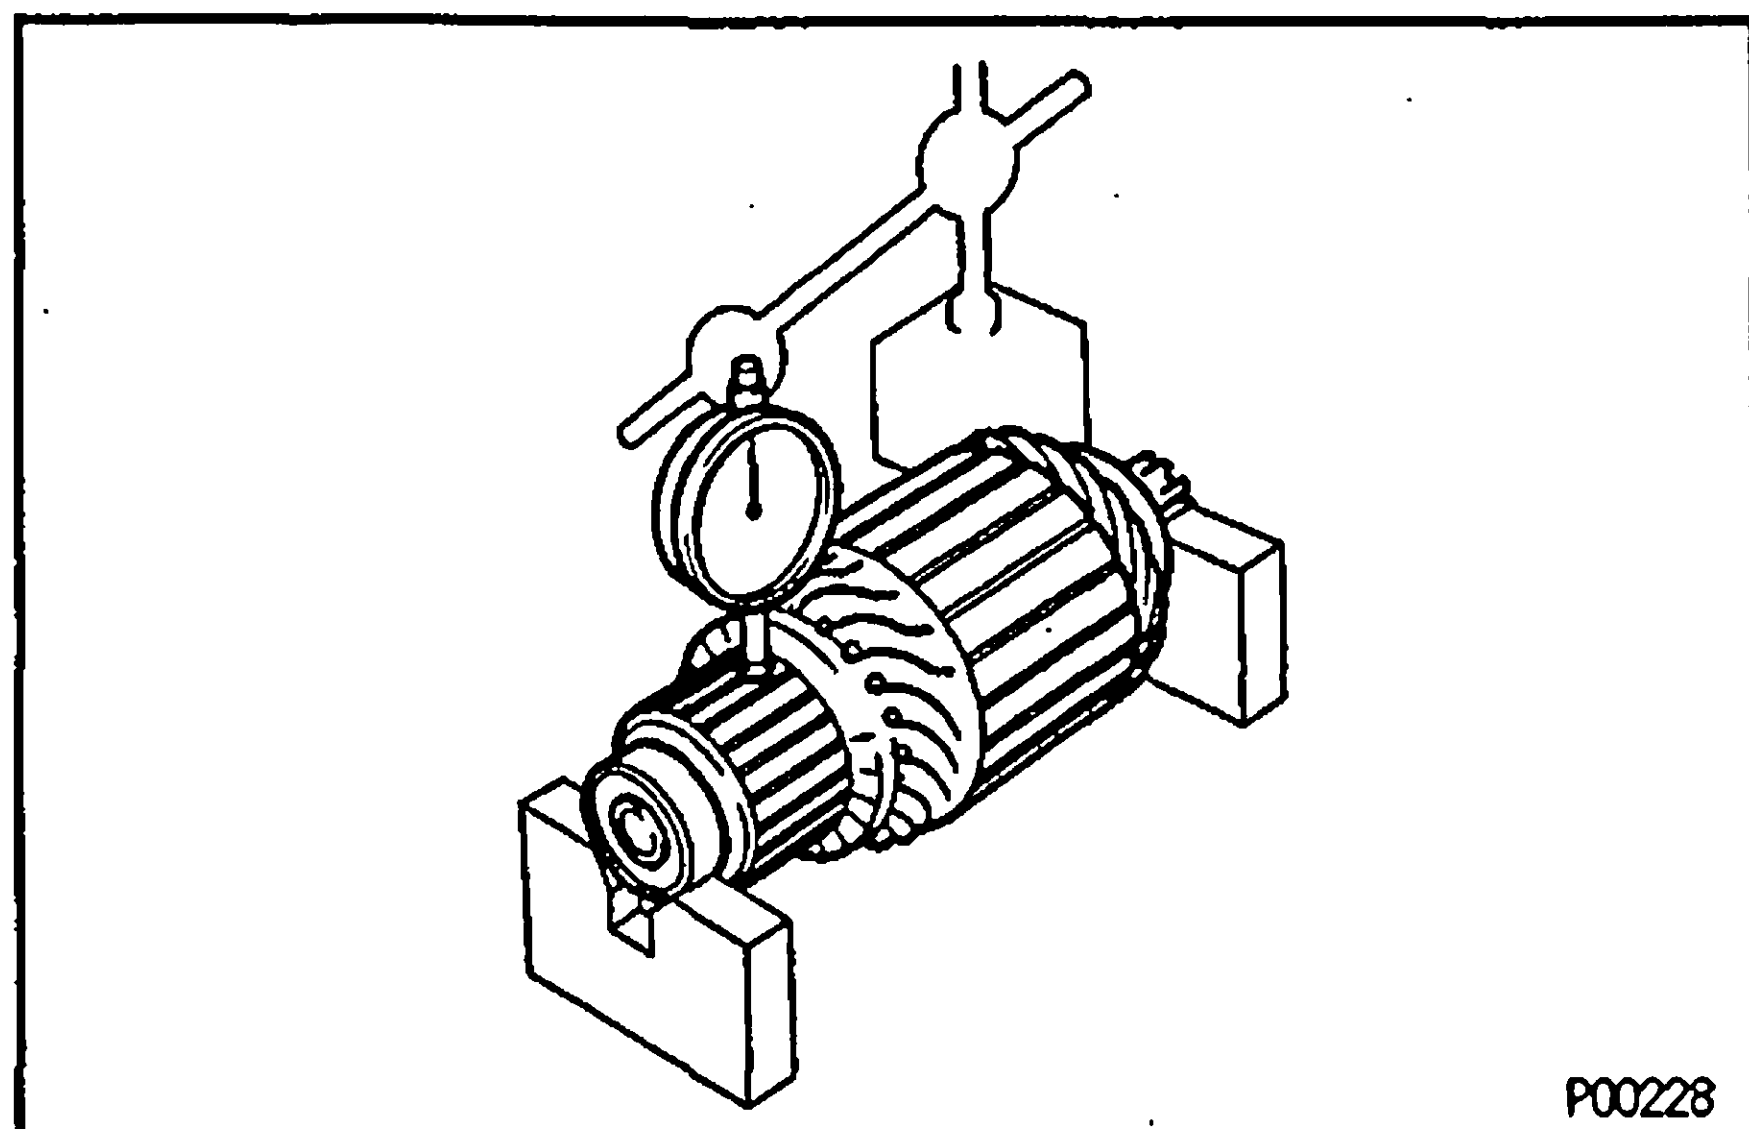


2. INSPECT COMMUTATOR CIRCLE RUNOUT

- Place the commutator on V—blocks.
- Using a dial gauge, measure the circle runout.

Maximum circle runout:

0.05 mm (0.0020 in.)

If the circle runout is greater than maximum, correct it on a lathe.

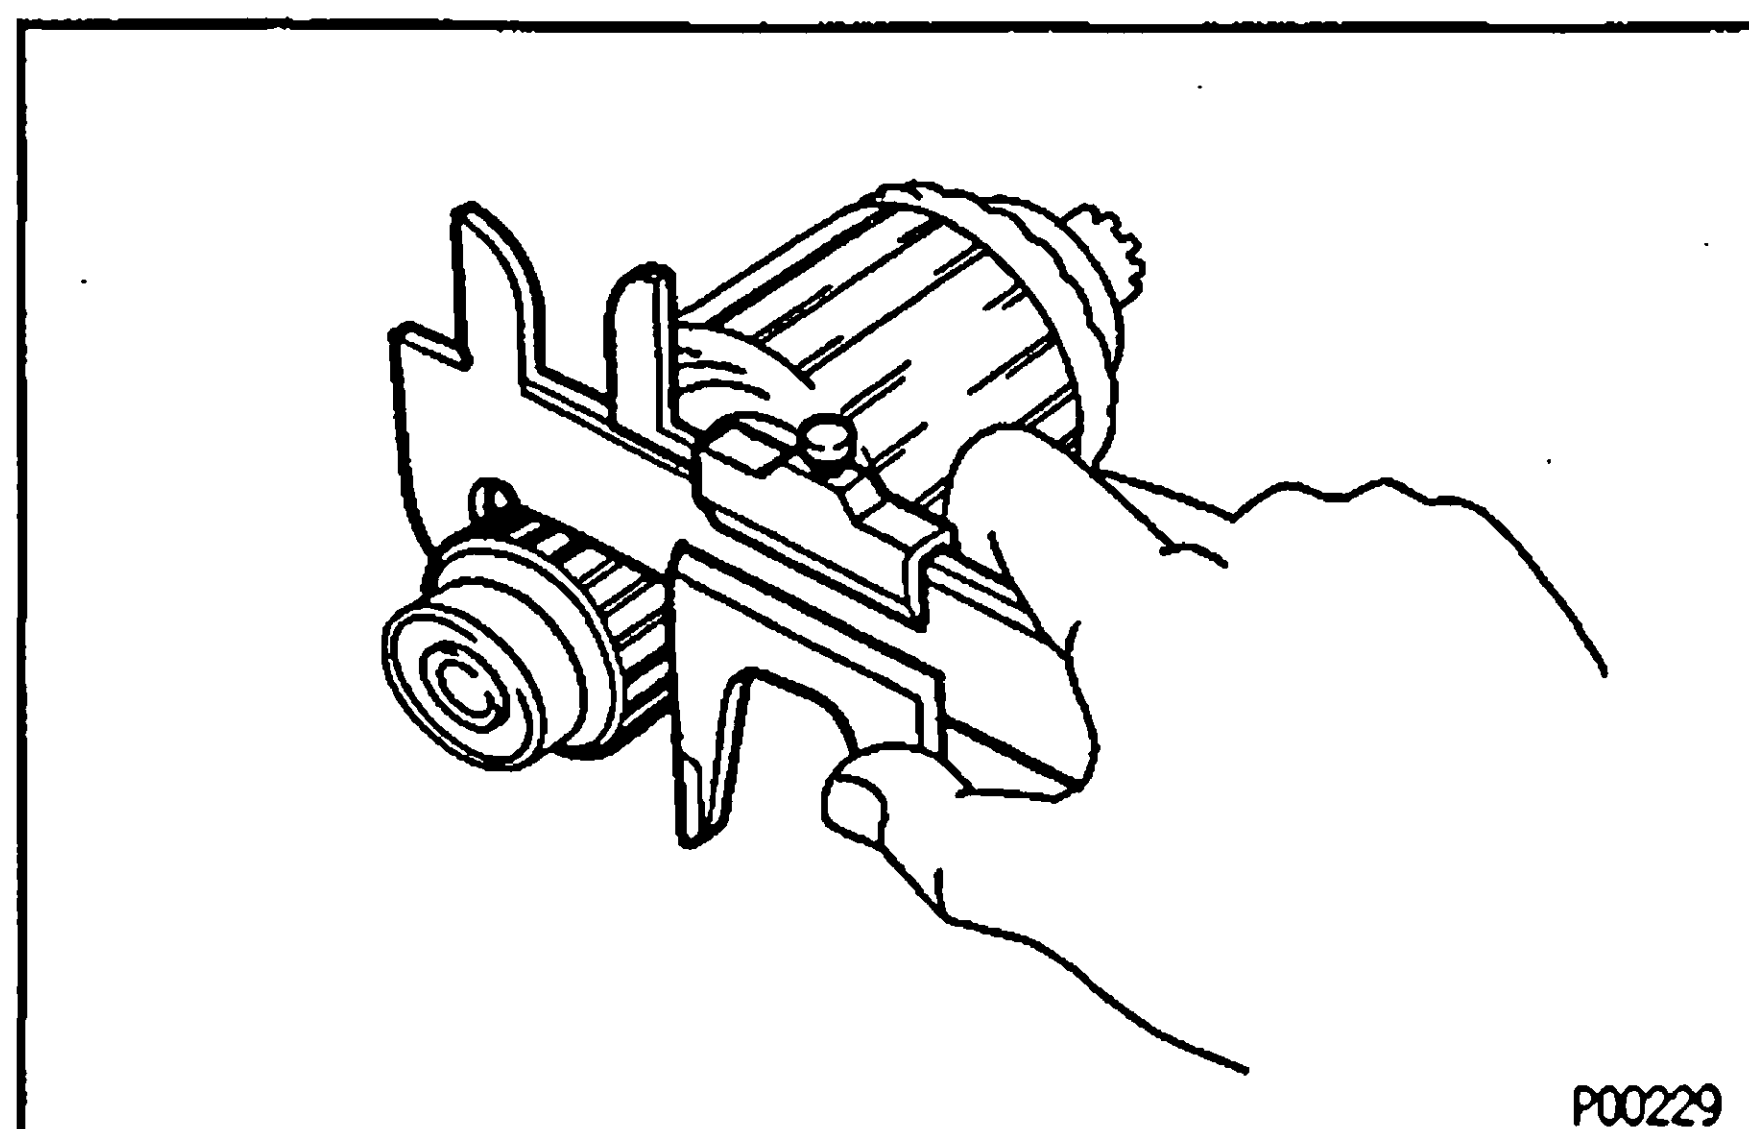

3. INSPECT COMMUTATOR DIAMETER

Using a vernier caliper, measure the commutator diameter.


Standard diameter:

30 mm (1.18 in.)

Minimum diameter:

29 mm (1.14 in.)

If the diameter is less than minimum, replace the armature.

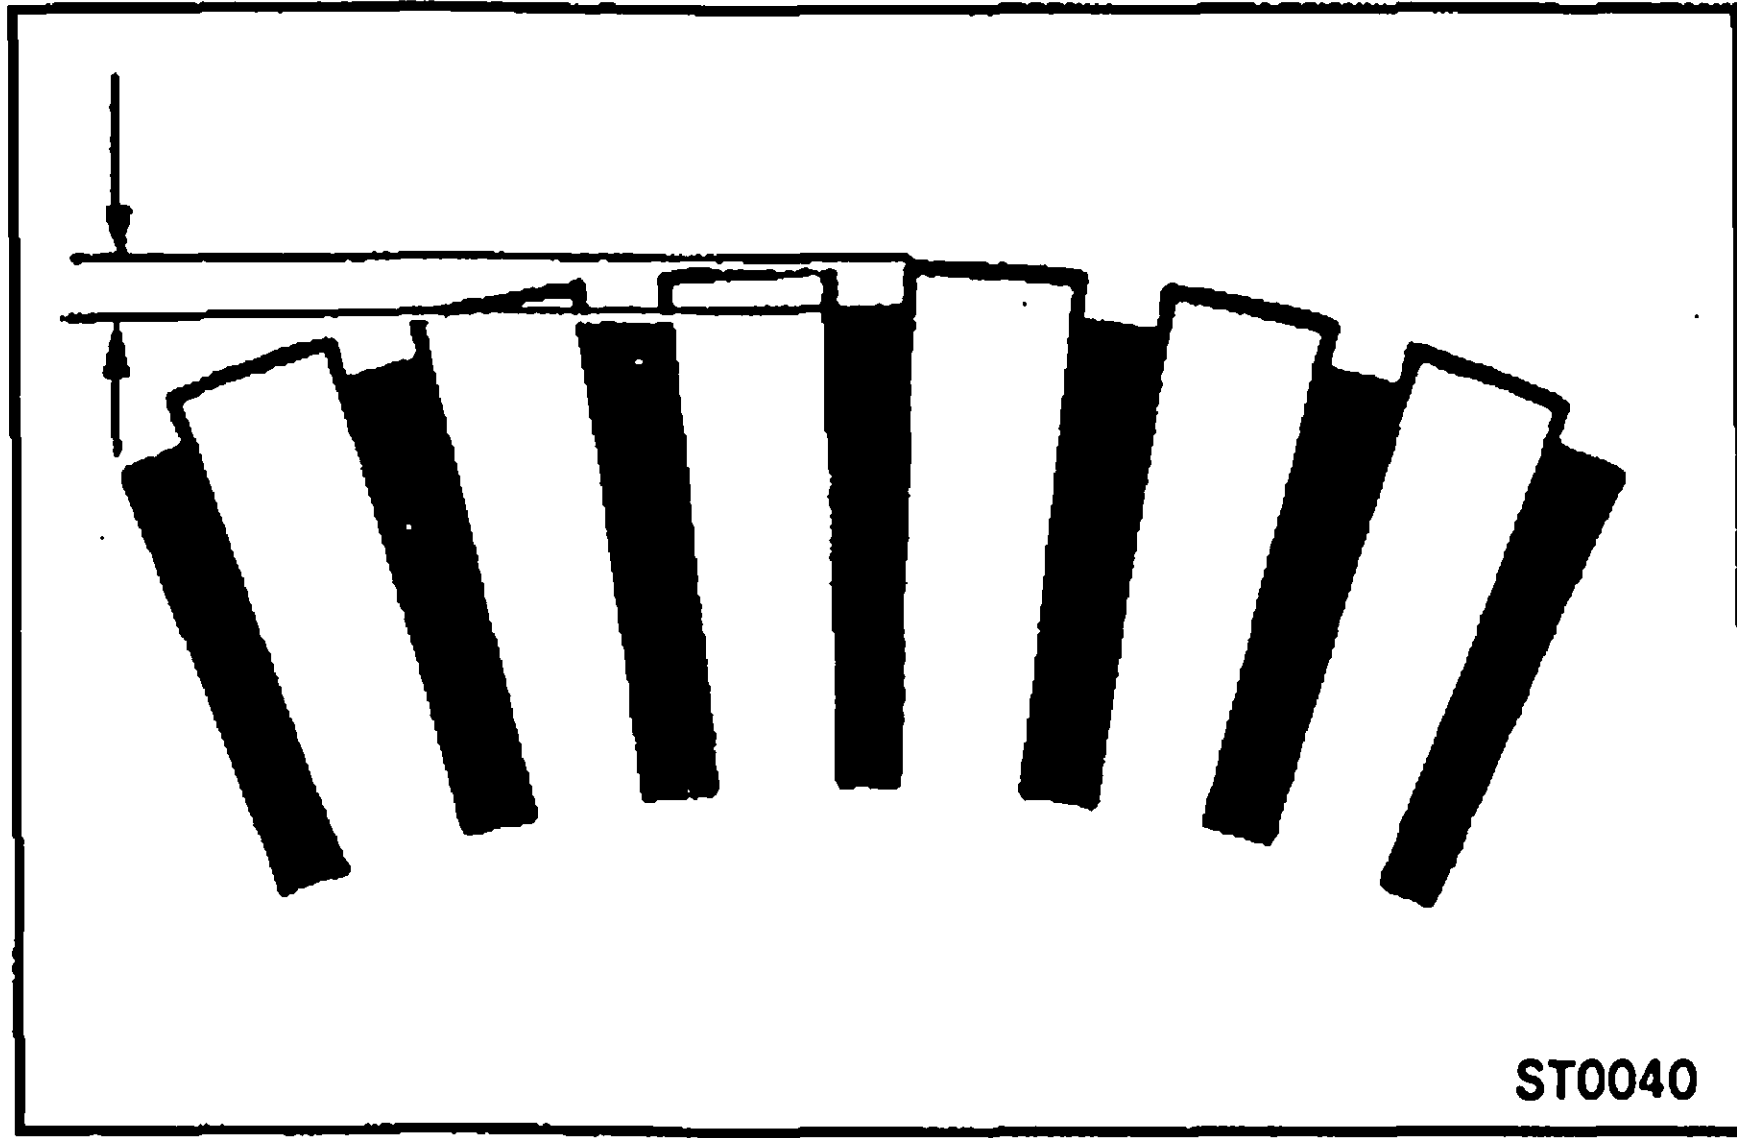

4. INSPECT UNDERCUT DEPTH

Check that the undercut depth is clean and free of foreign materials. Smooth out the edge.


Standard undercut depth:

0.6 mm (0.024 in.)

Minimum undercut depth:

0.2 mm (0.008 in.)

If the undercut depth is less than minimum, correct it with a hacksaw blade.

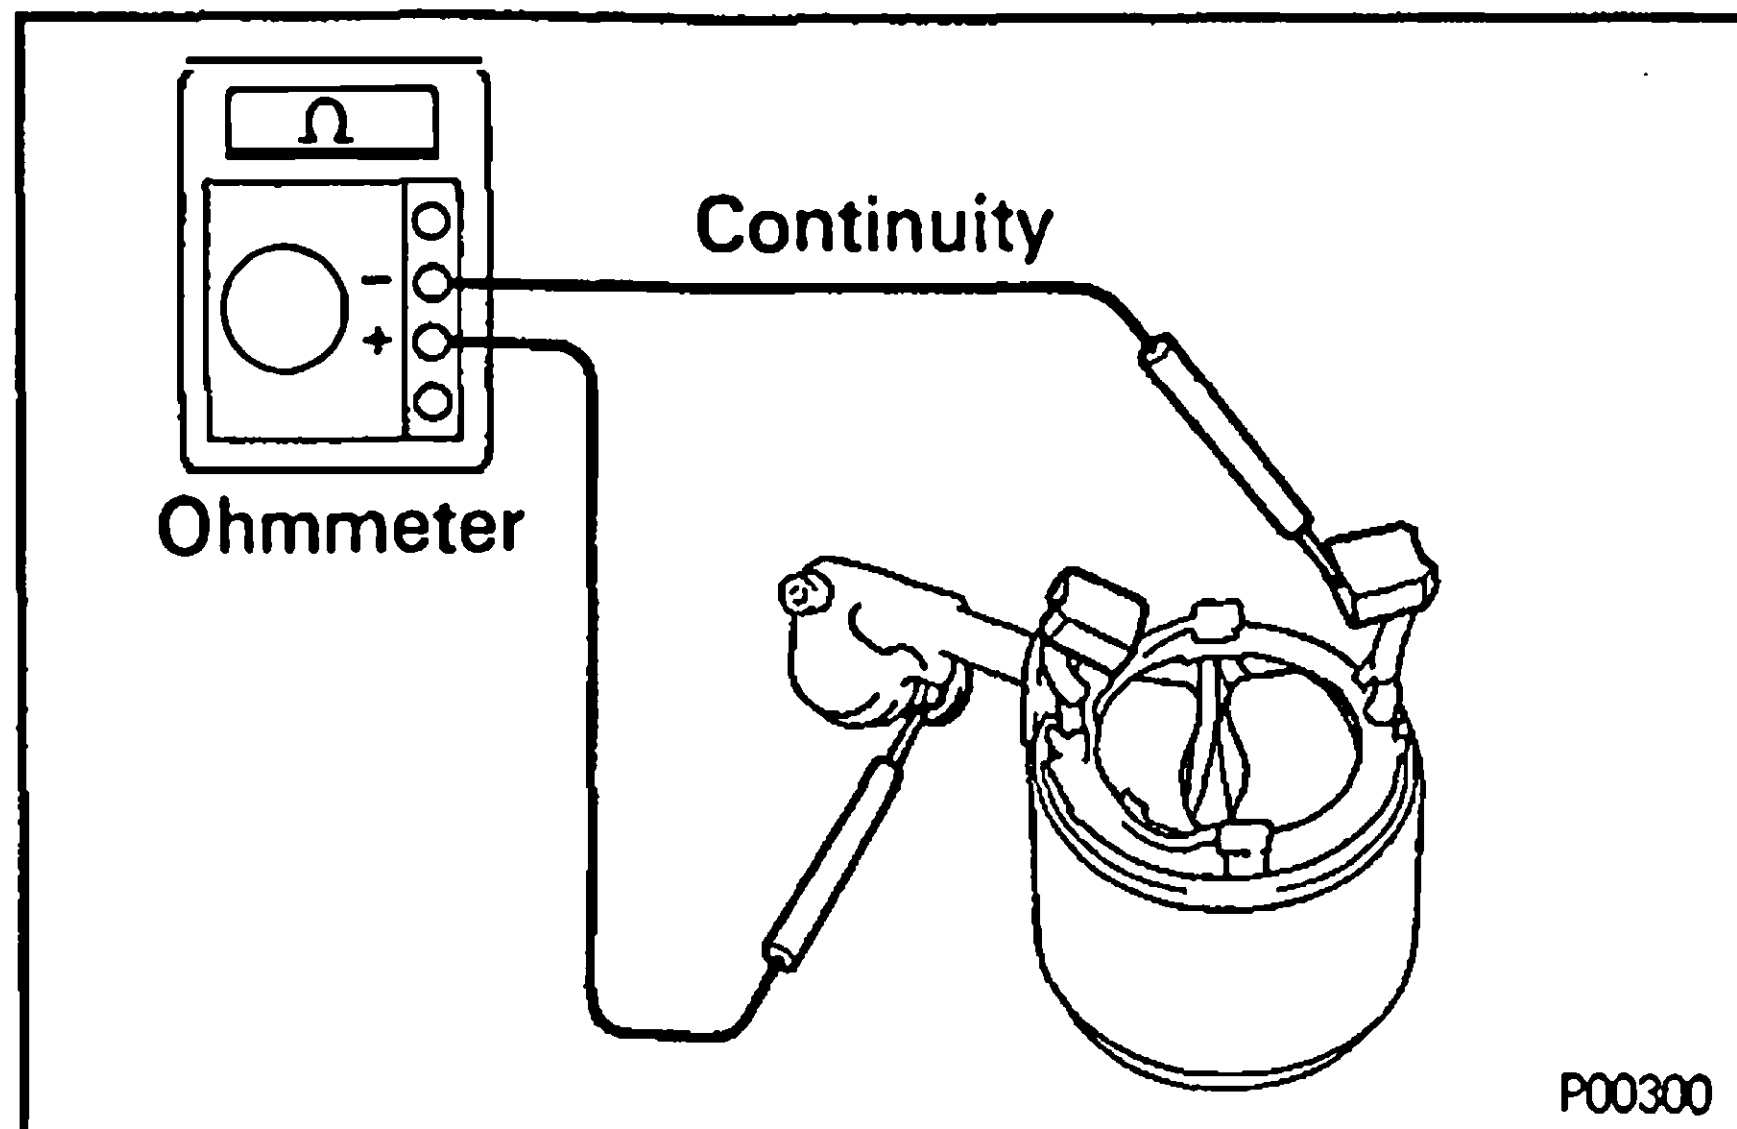

Field Frame (Field Coil)

ST

1. INSPECT FIELD COIL FOR OPEN CIRCUIT



Using an ohmmeter, check that there is continuity between the lead wire and field coil brush lead.

If there is no continuity, replace the field frame.

2. INSPECT FIELD COIL FOR GROUND

Using an ohmmeter, check that there is no continuity between the field coil end and field frame.

If there is continuity, repair or replace the field frame.

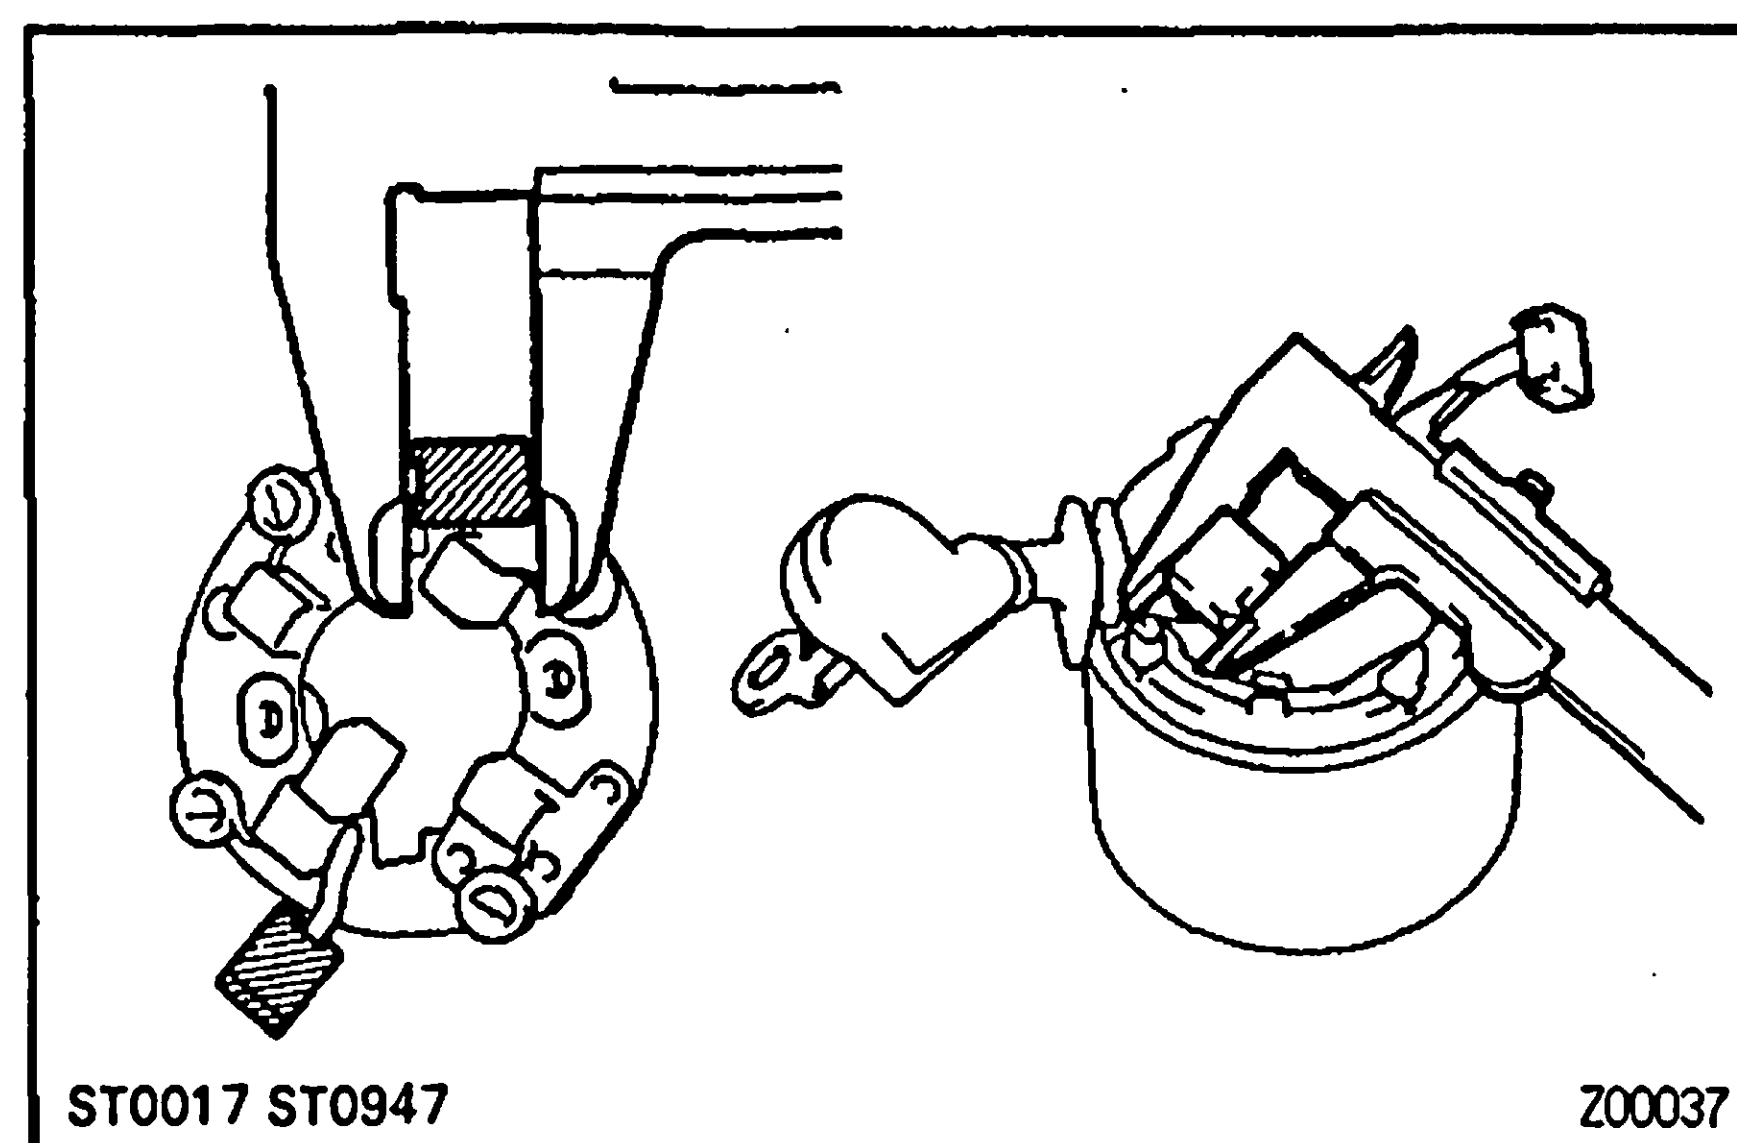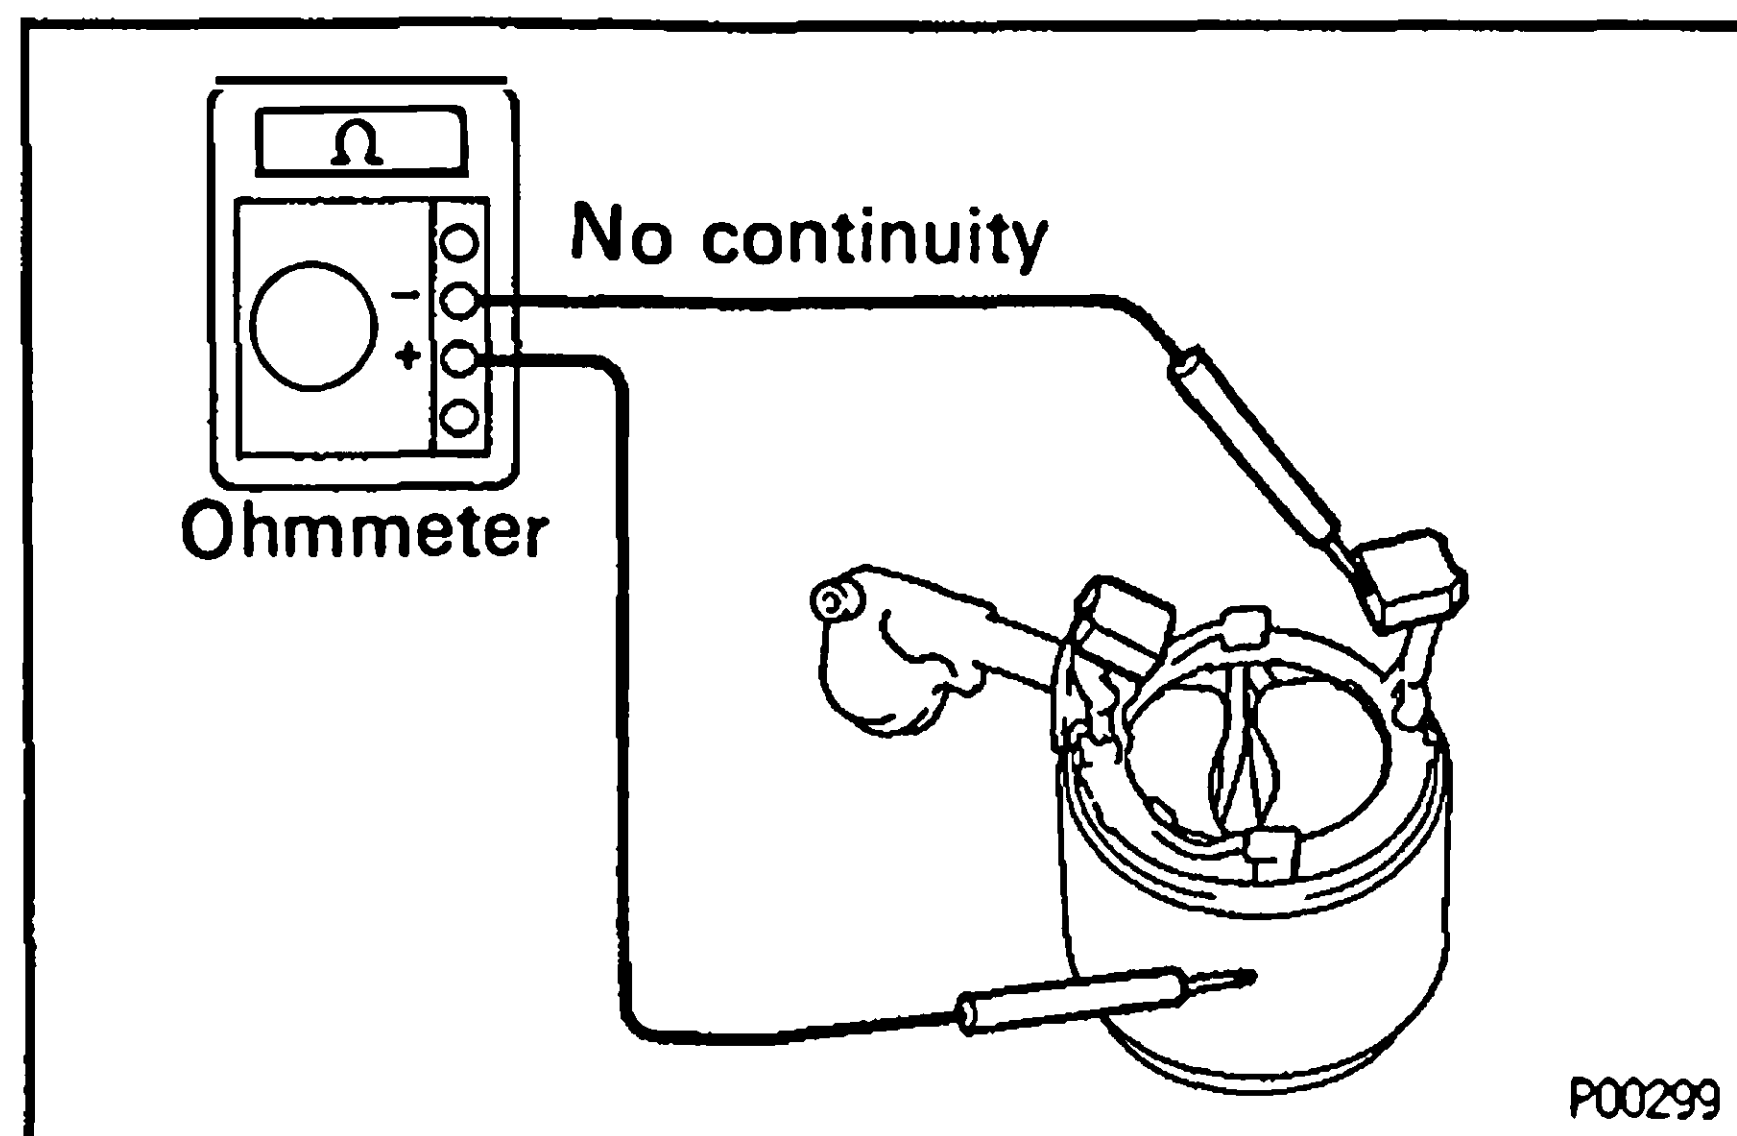

Brushes

INSPECT BRUSH LENGTH

Using a vernier caliper, measure the brush length.

Standard length:

15.0 mm (0.591 in.)

Minimum length:

10.0 mm (0.394 in.)

If the length is less than minimum, replace the brush holder and field frame.

Brush Springs


INSPECT BRUSH SPRING LOAD


Take the pull scale reading the instant the brush spring separates from the brush.

Spring installed load:

18 – 24 N (1.79 – 2.41 kgf, 3.9 – 5.3 lbf)

If the installed load is not within specification, replace the brush springs.

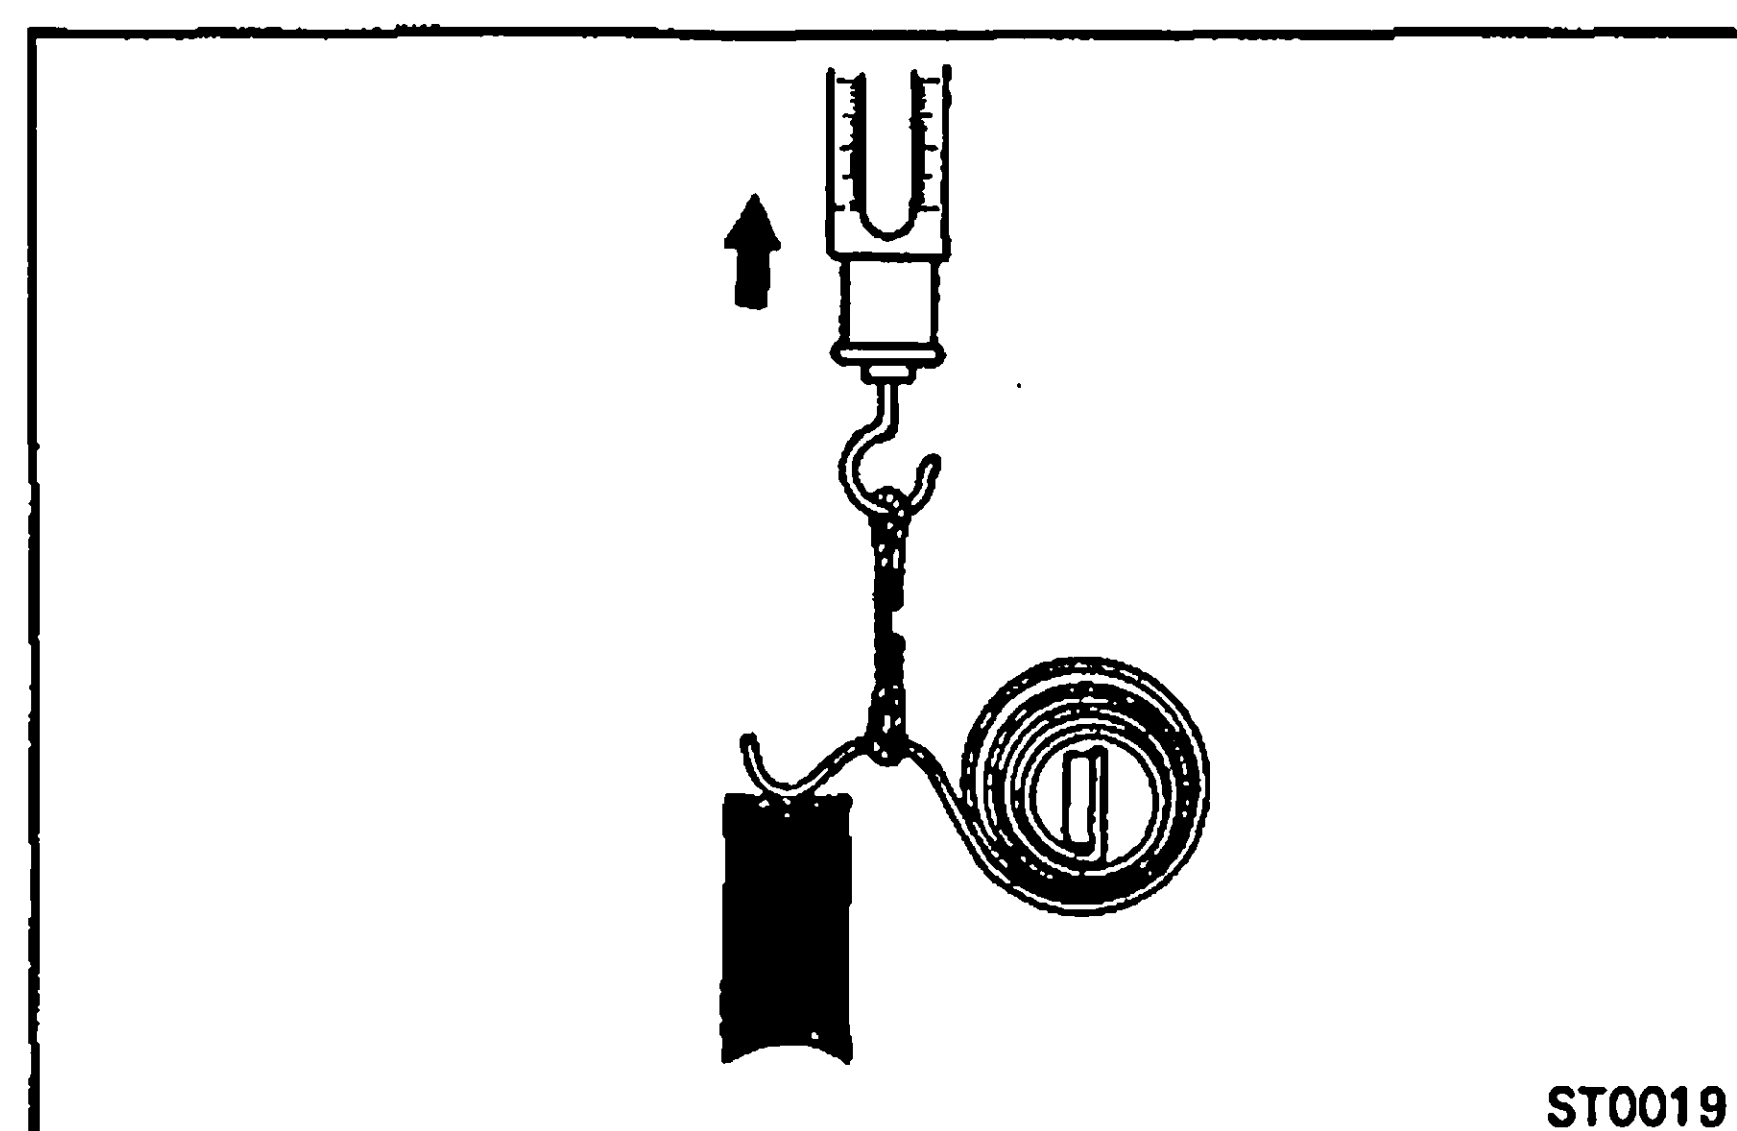

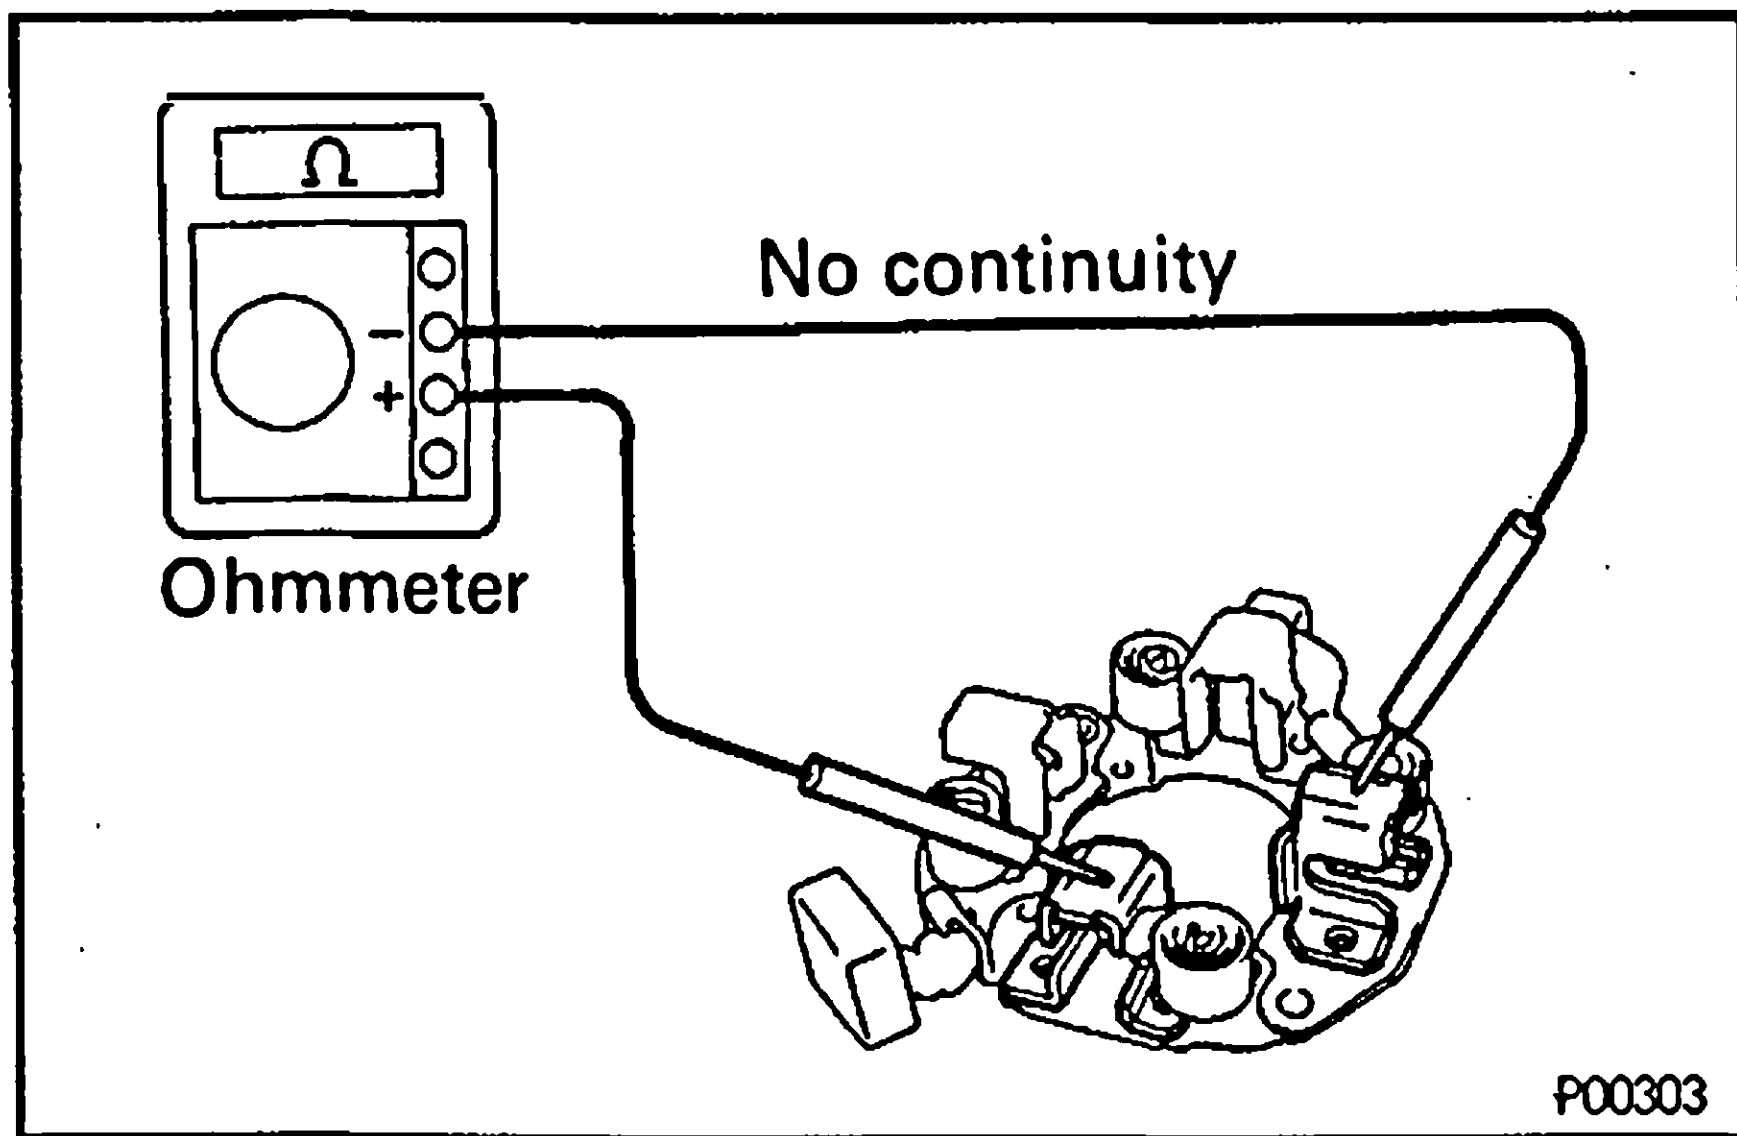

Brush Holder

INSPECT BRUSH HOLDER INSULATION

Using an ohmmeter, check that there is no continuity between the positive (+) and negative (-) brush holders.

If there is continuity, repair or replace the brush holder.

ST


Clutch and Gears

1. INSPECT GEAR TEETH

Check the gear teeth on the pinion gear, idle gear and clutch assembly for wear or damage.

If damaged, replace the gear or clutch assembly.


If damaged, also check the drive plate ring gear for wear or damage.

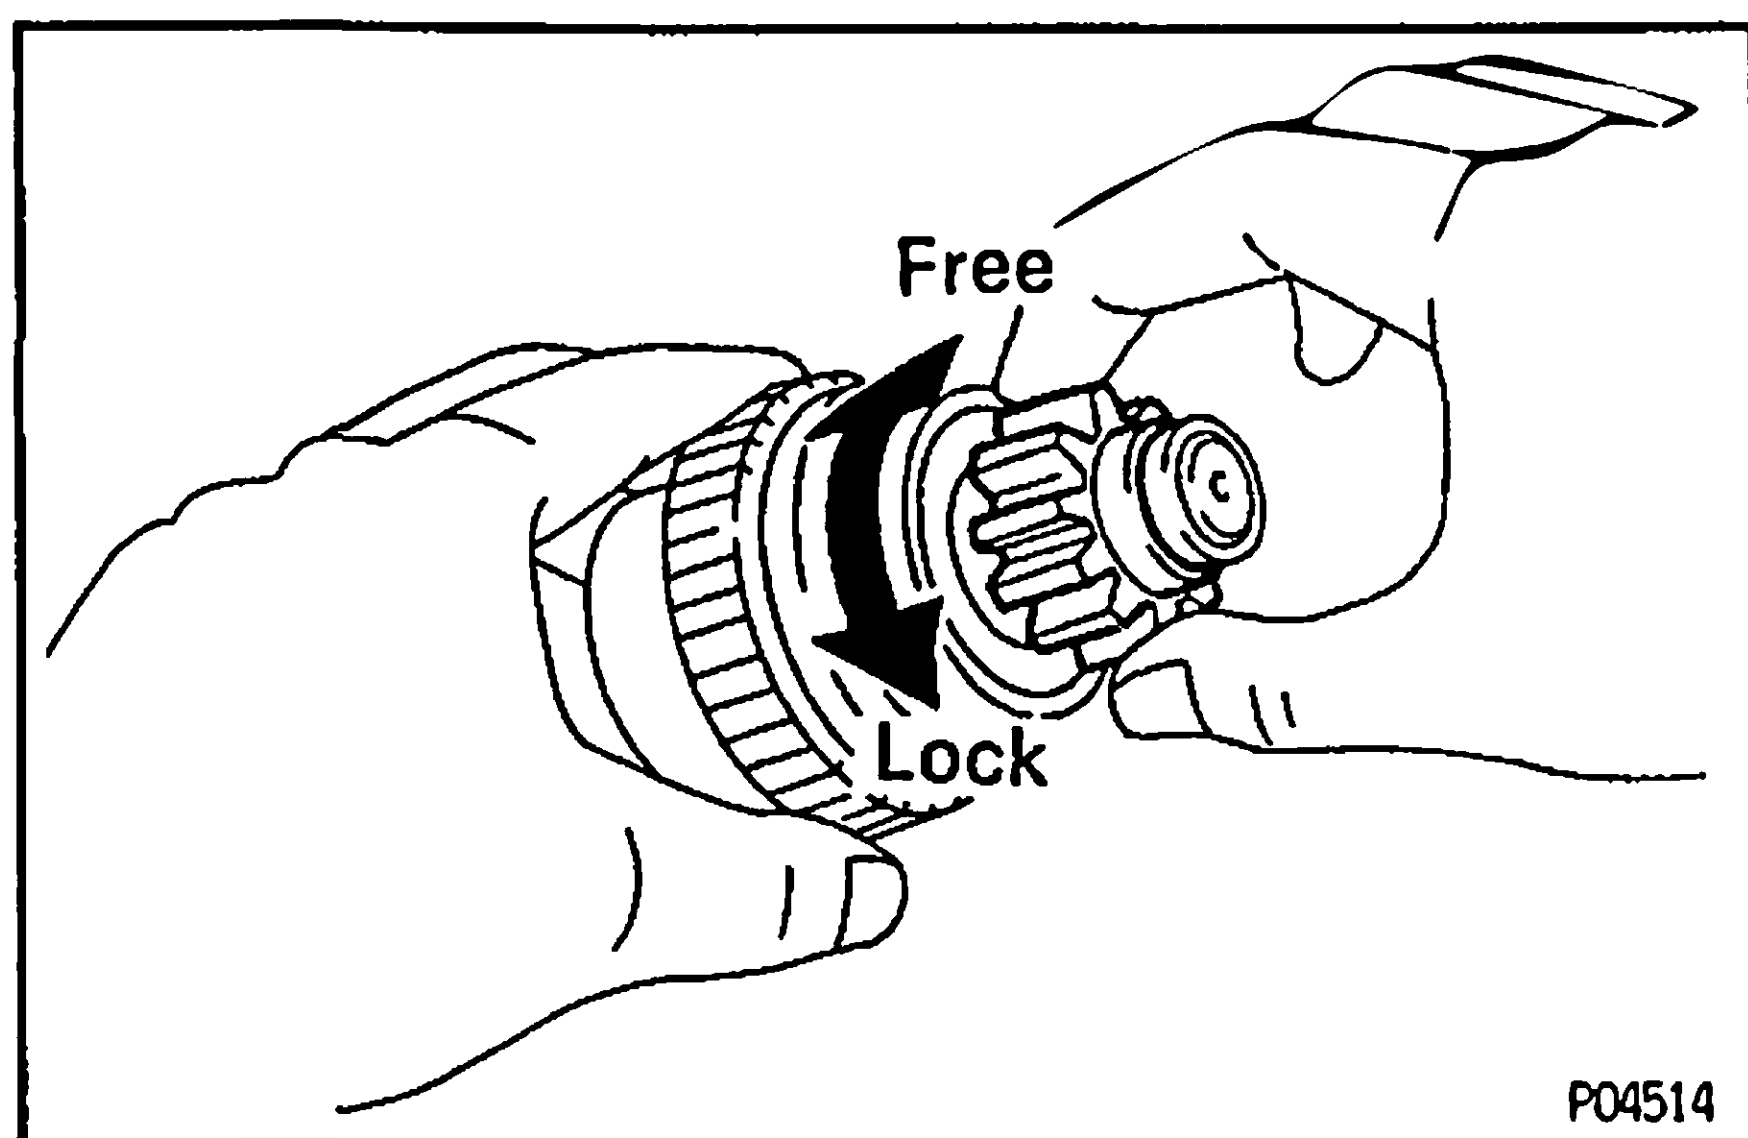

2. INSPECT CLUTCH PINION GEAR

Hold the starter clutch and rotate the pinion gear clockwise, and check that it turns freely. Try to rotate the pinion gear counterclockwise and check that it locks.

If necessary, replace the clutch assembly.

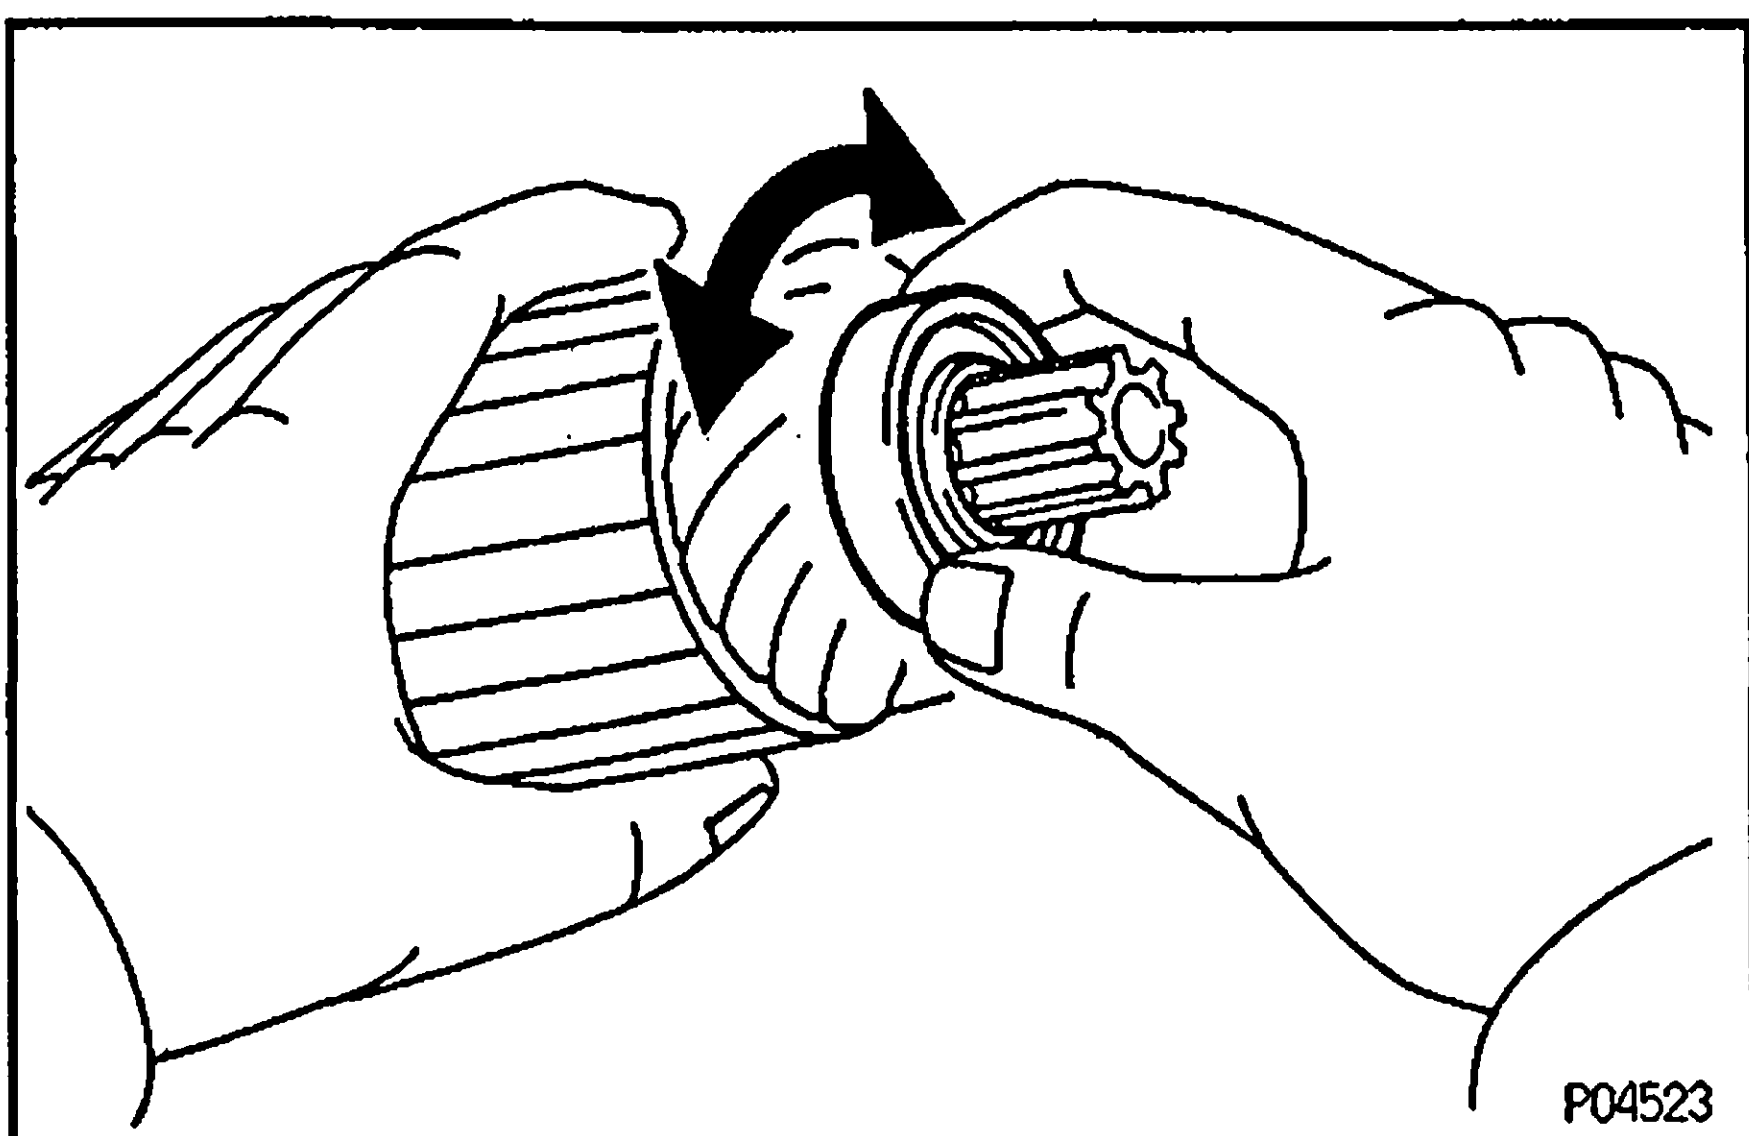

Bearings

1. INSPECT BEARINGS


Turn each bearing by hand while applying inward force.


If resistance is felt or the bearing sticks, replace the bearing.

2. IF NECESSARY, REPLACE BEARING


(a) Using SST, remove the bearing.

SST 09286-46011

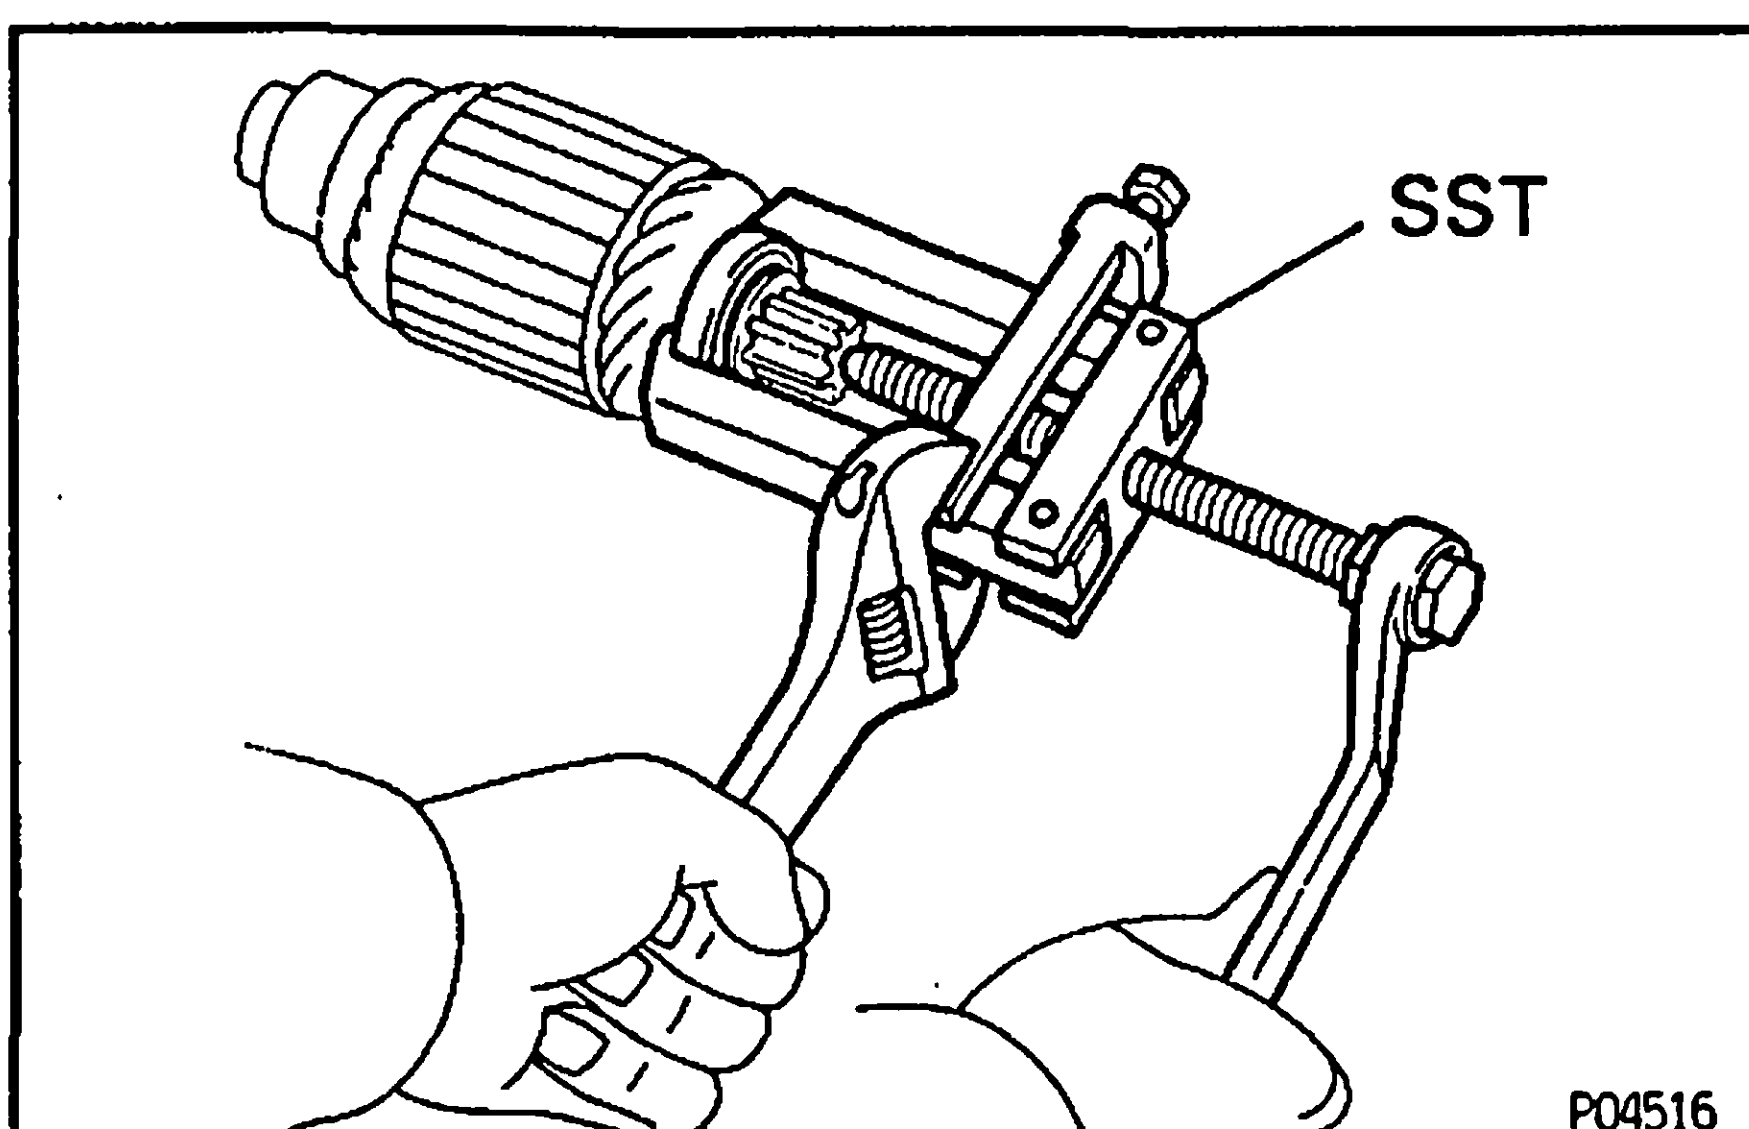

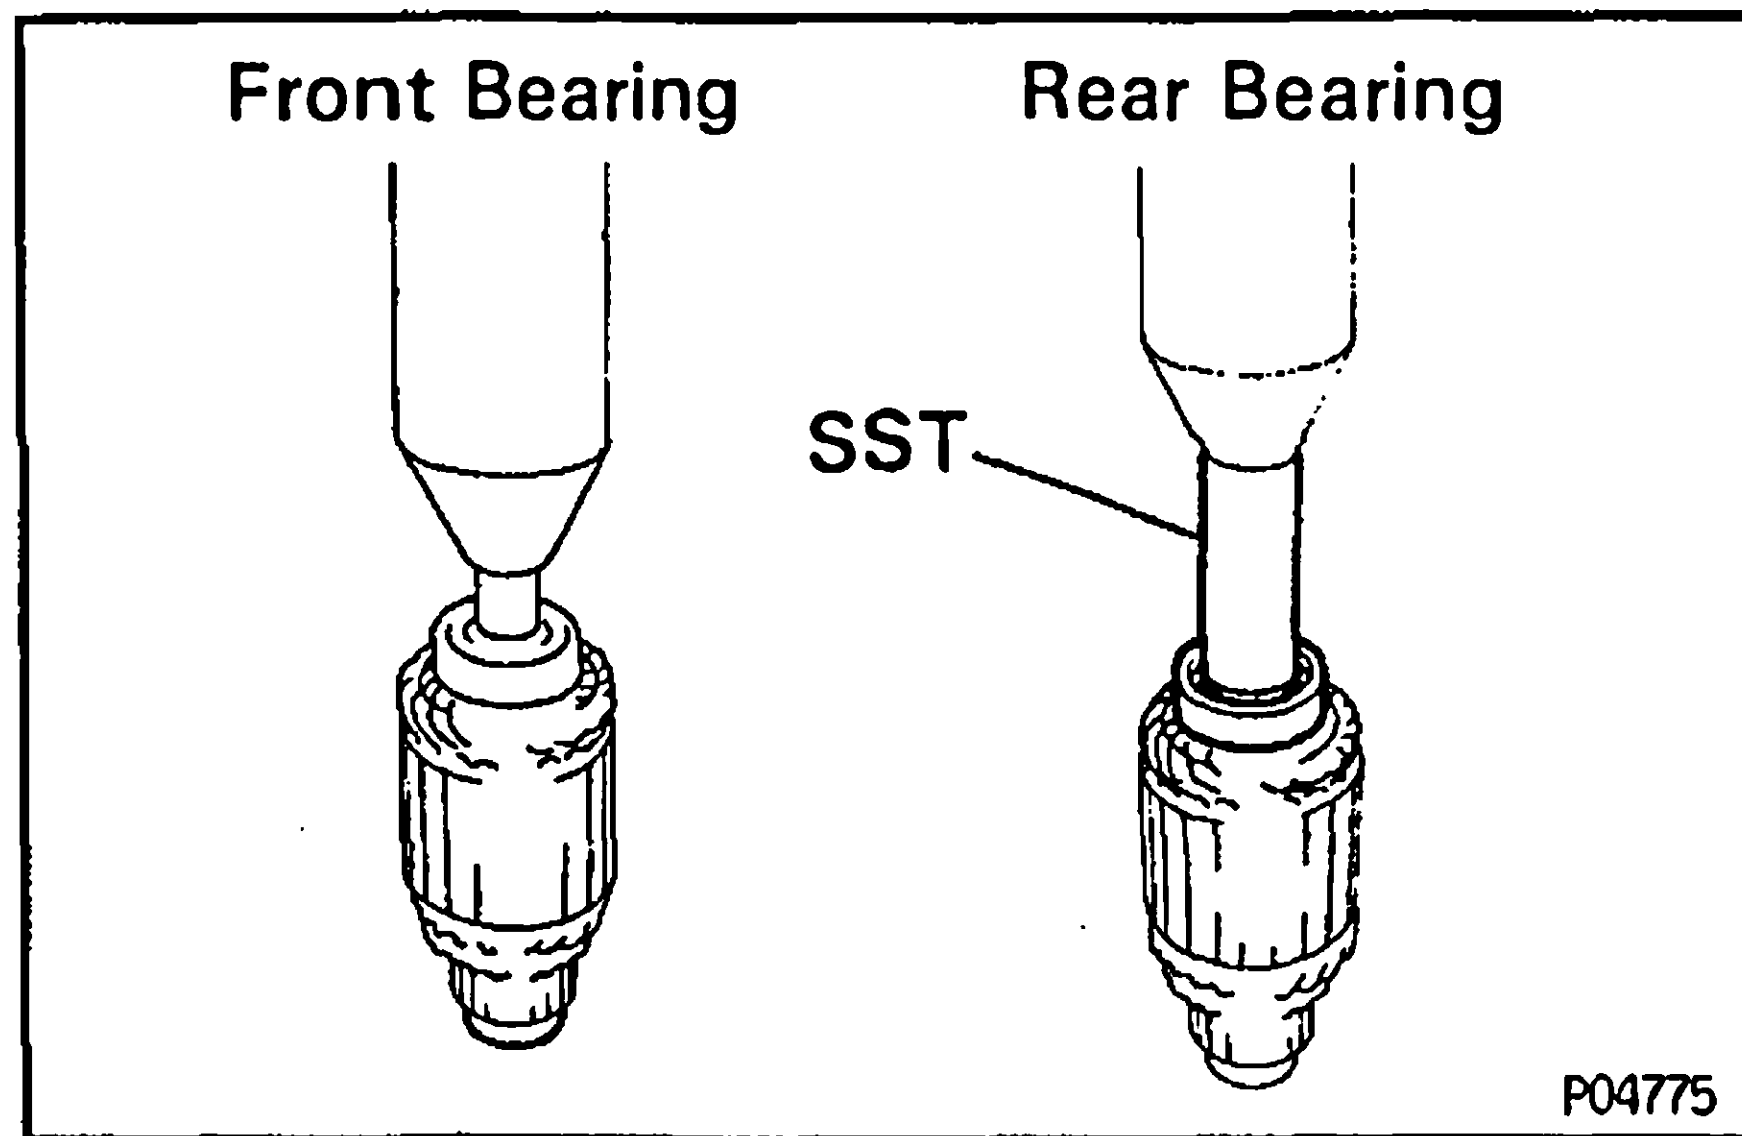


- (b) Using a press, press in a new front bearing.
- (c) Using SST and a press, press in a new rear bearing.
SST 09820–00030

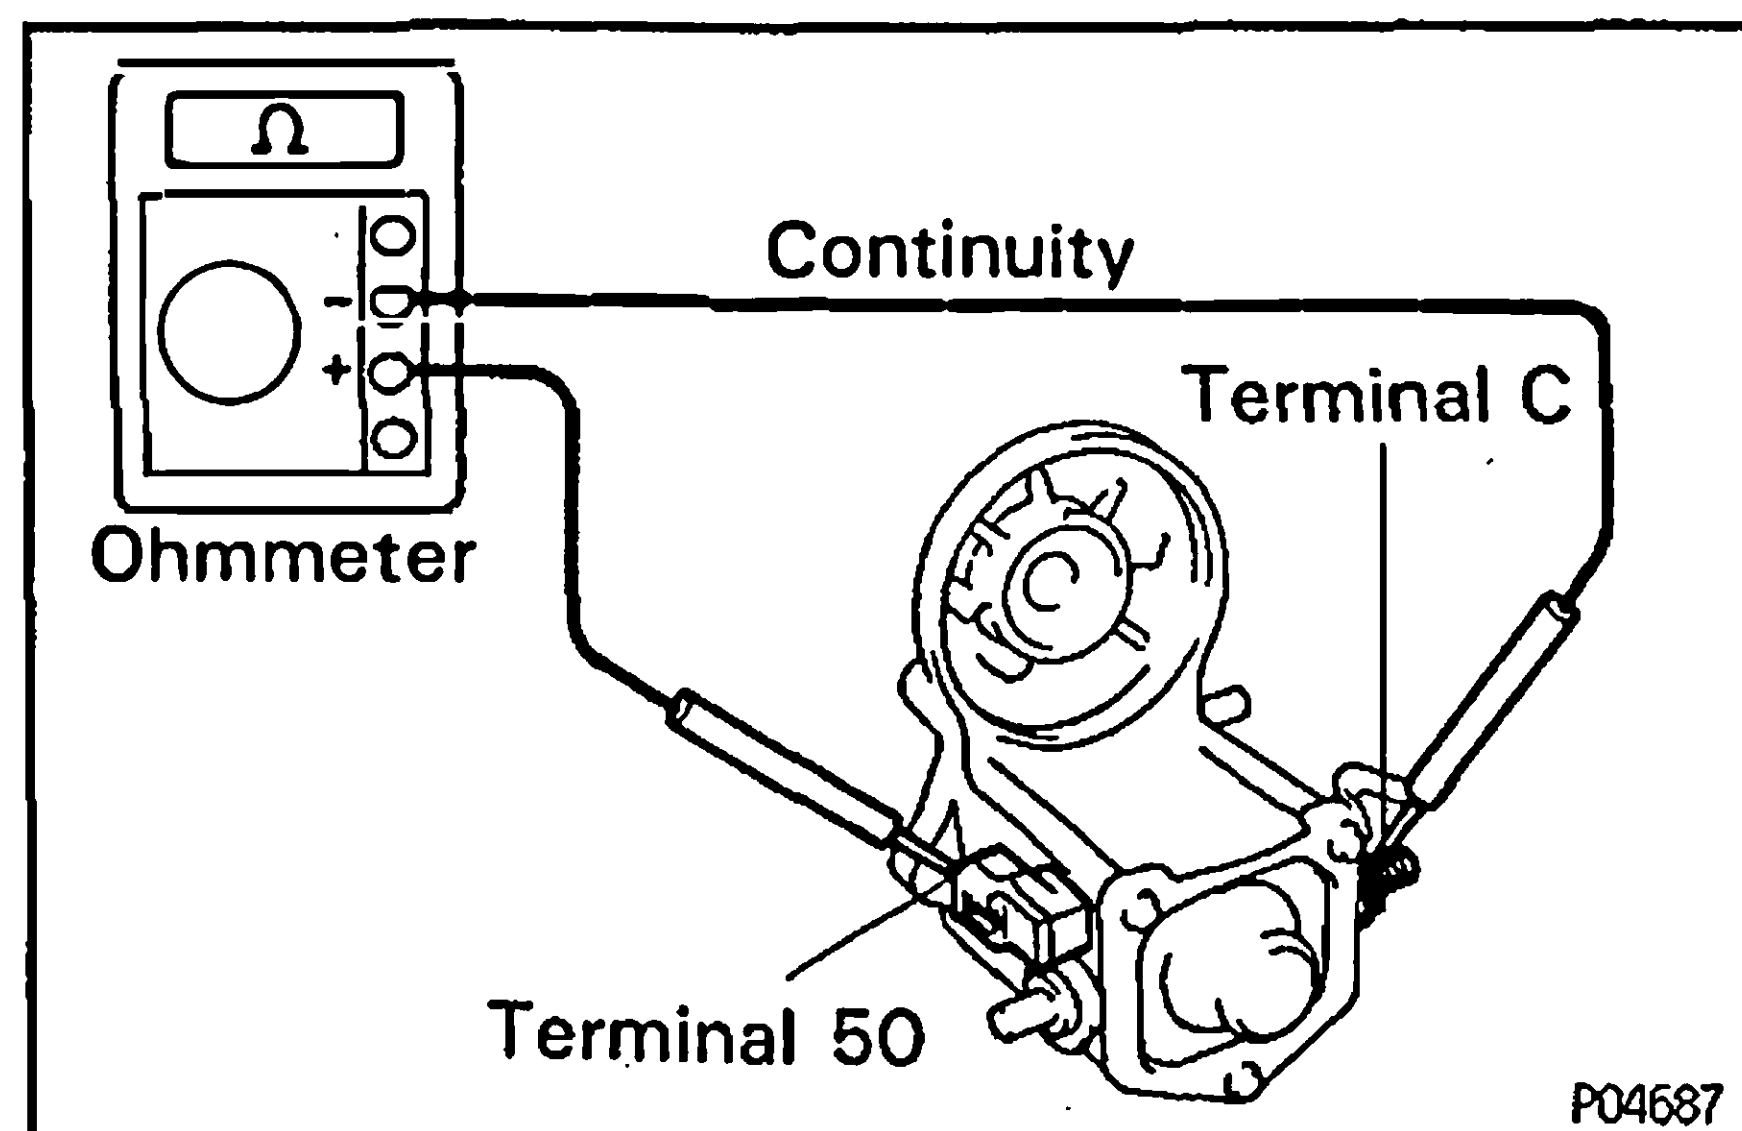

Magnetic Switch

ST

1. **PERFORM PULL–IN COIL OPEN CIRCUIT TEST**
Using an ohmmeter, check that there is continuity between terminals 50 and C.
If there is no continuity, replace the magnetic switch.
2. **PERFORM HOLD–IN COIL OPEN CIRCUIT TEST**
Using an ohmmeter, check that there is continuity between terminal 50 and the switch body.
If there is no continuity, replace the magnetic switch.

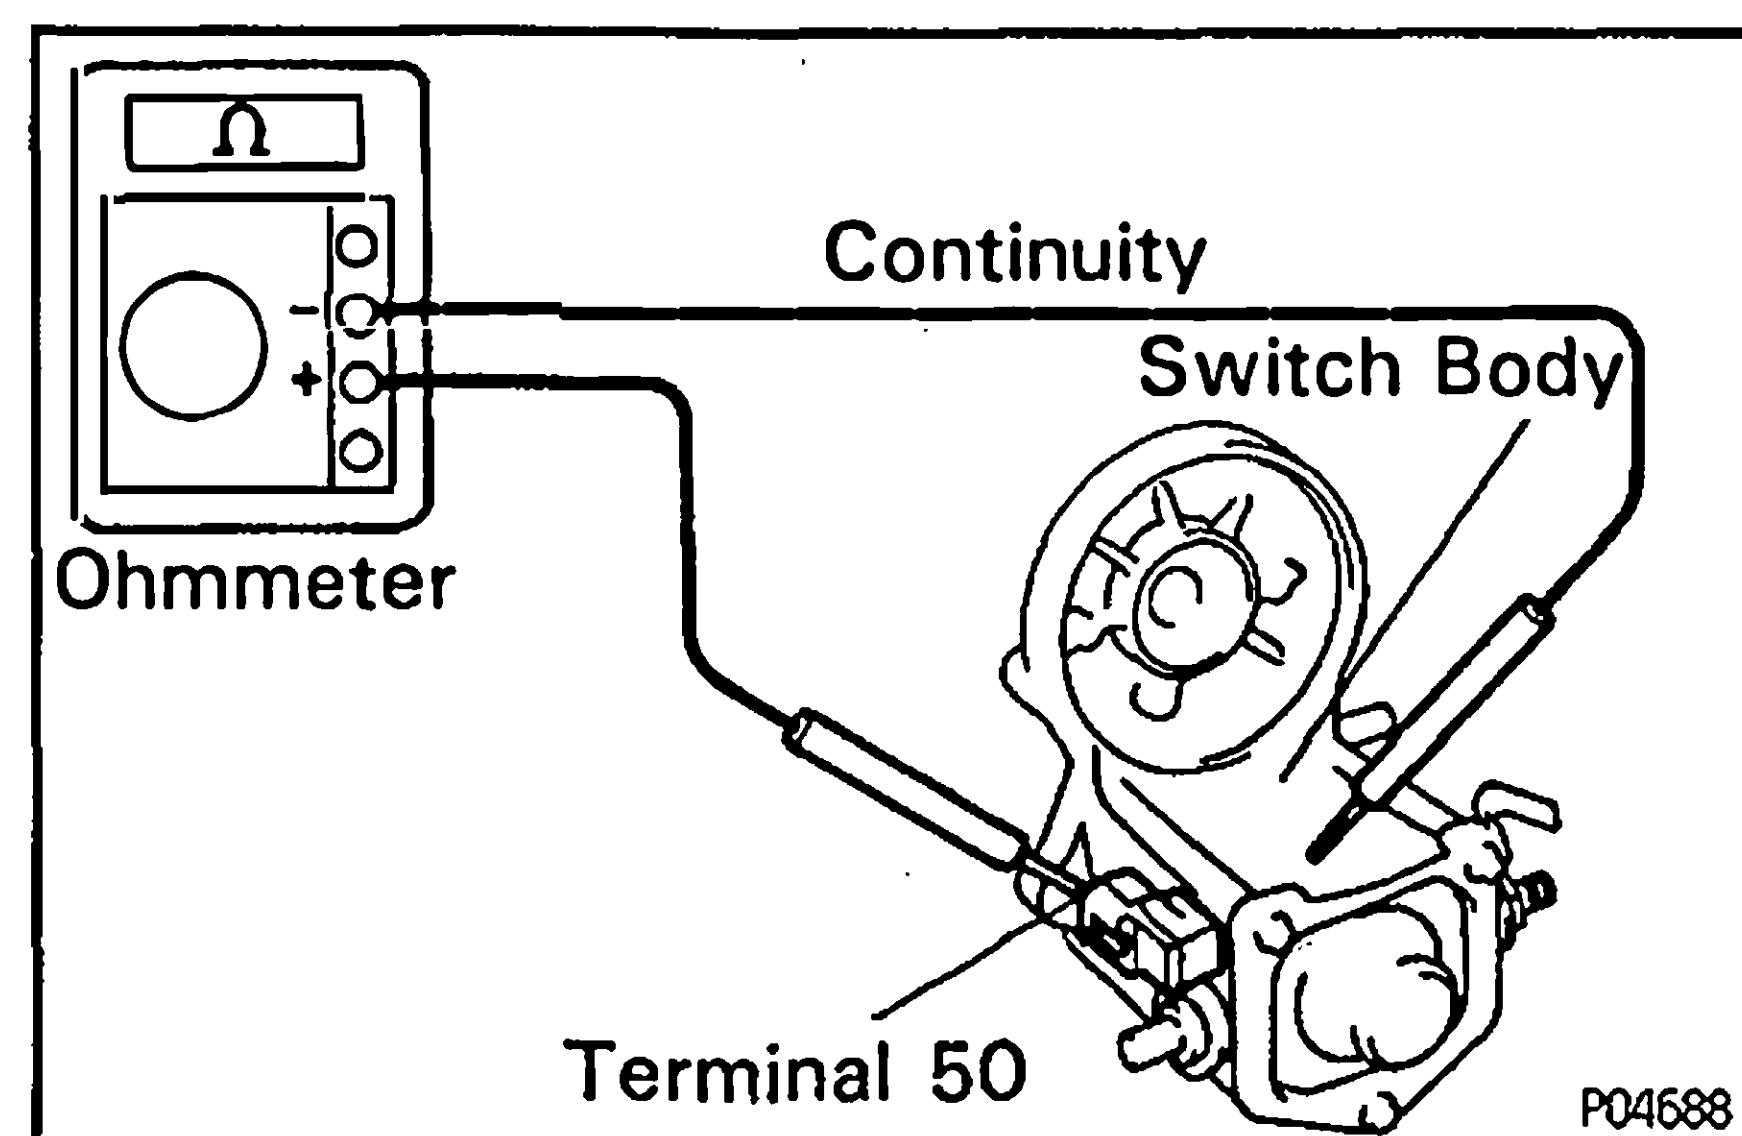


STARTER ASSEMBLY

(See page ST-6)


HINT: Use high-temperature grease to lubricate the bearings and gears when assembling the starter.

1. PLACE ARMATURE INTO FIELD FRAME

Apply grease to the armature bearings, and insert the armature into the field frame.

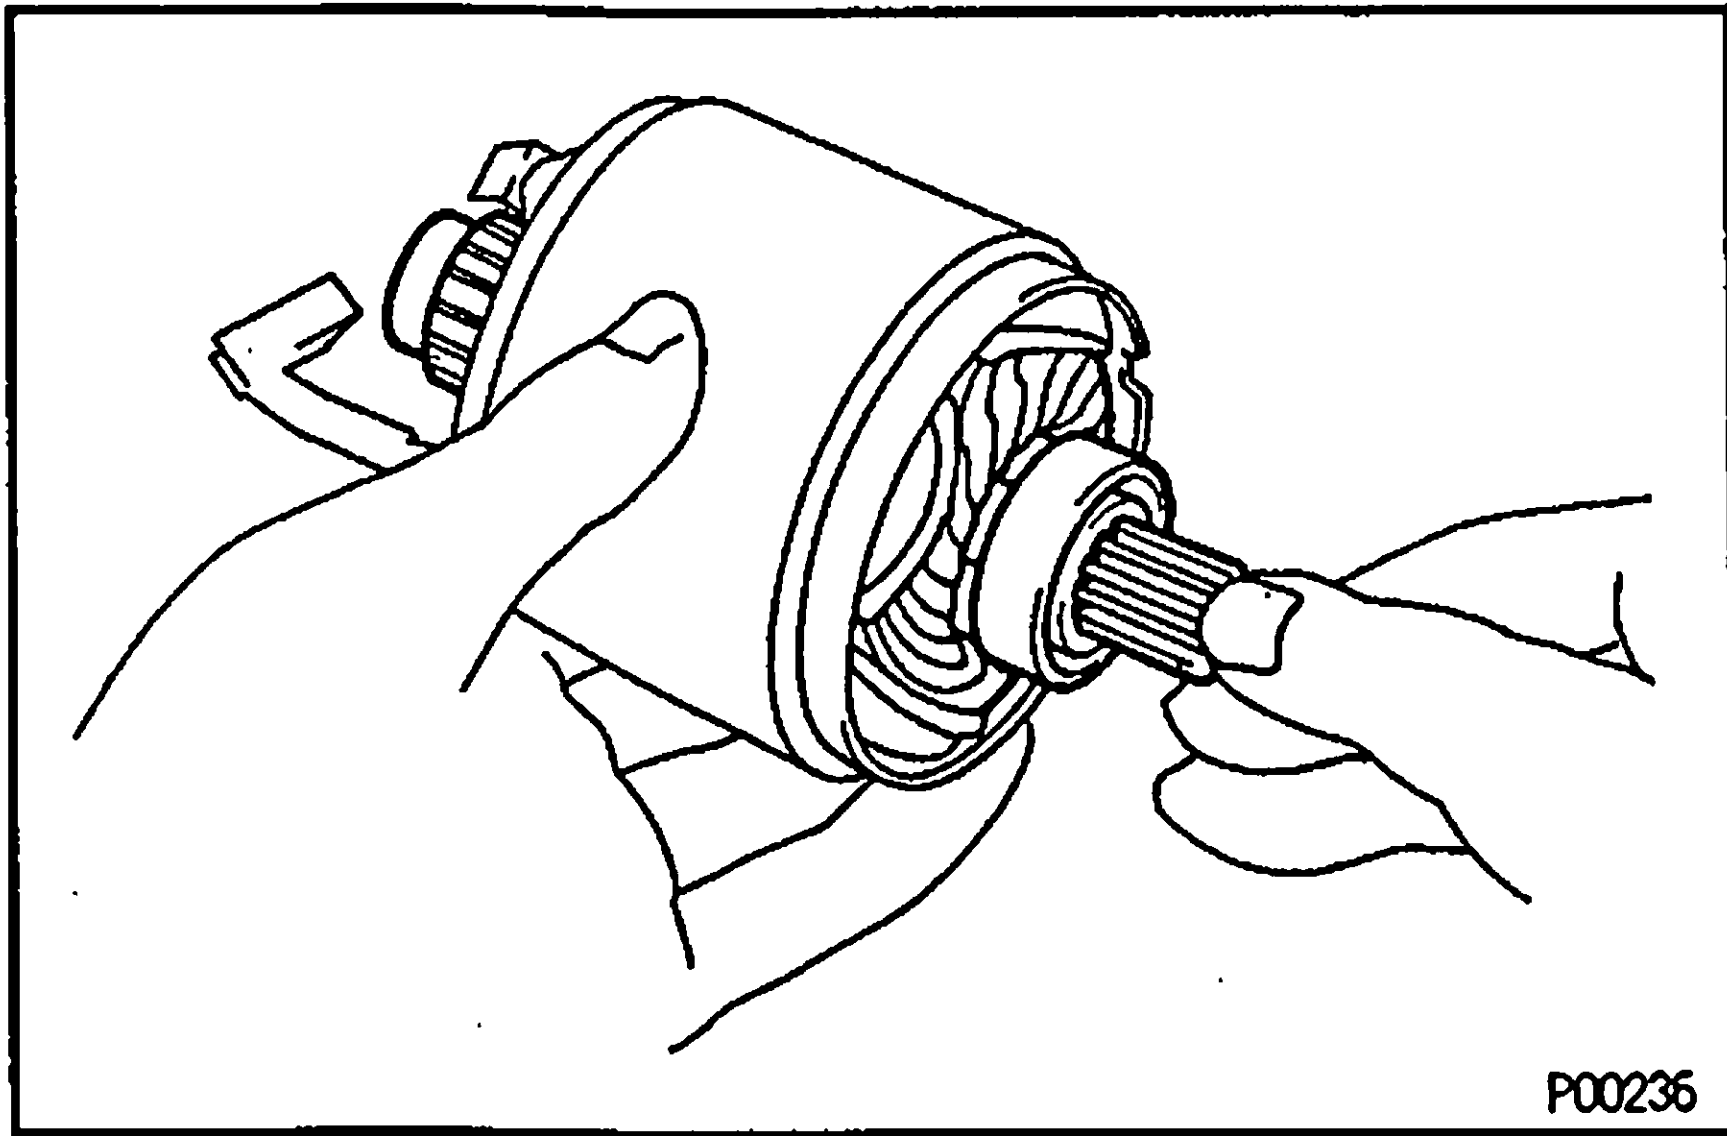

ST

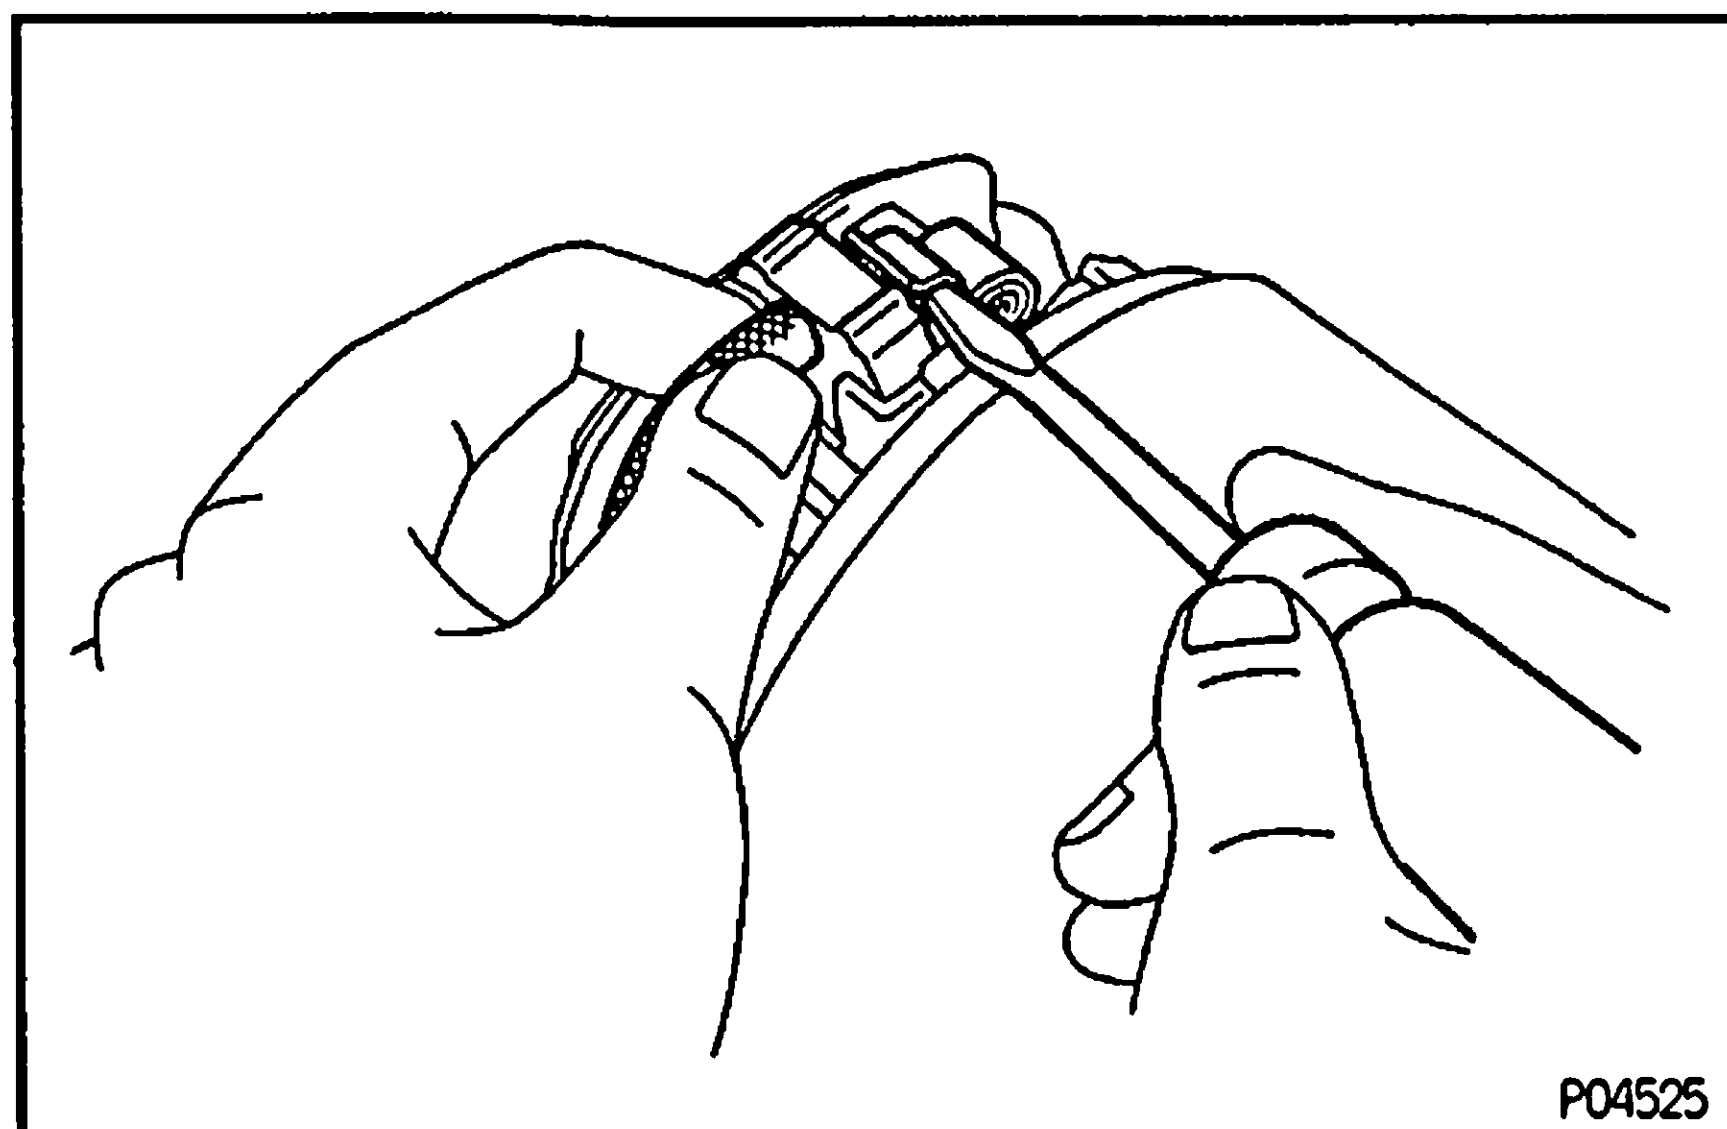


2. INSTALL BRUSH HOLDER


(a) Place the brush holder on the armature.

(b) Using a screwdriver, hold the brush spring back, and connect the brush into the brush holder. Connect the four brushes.

NOTICE: Check that the positive (+) lead wires are not grounded.

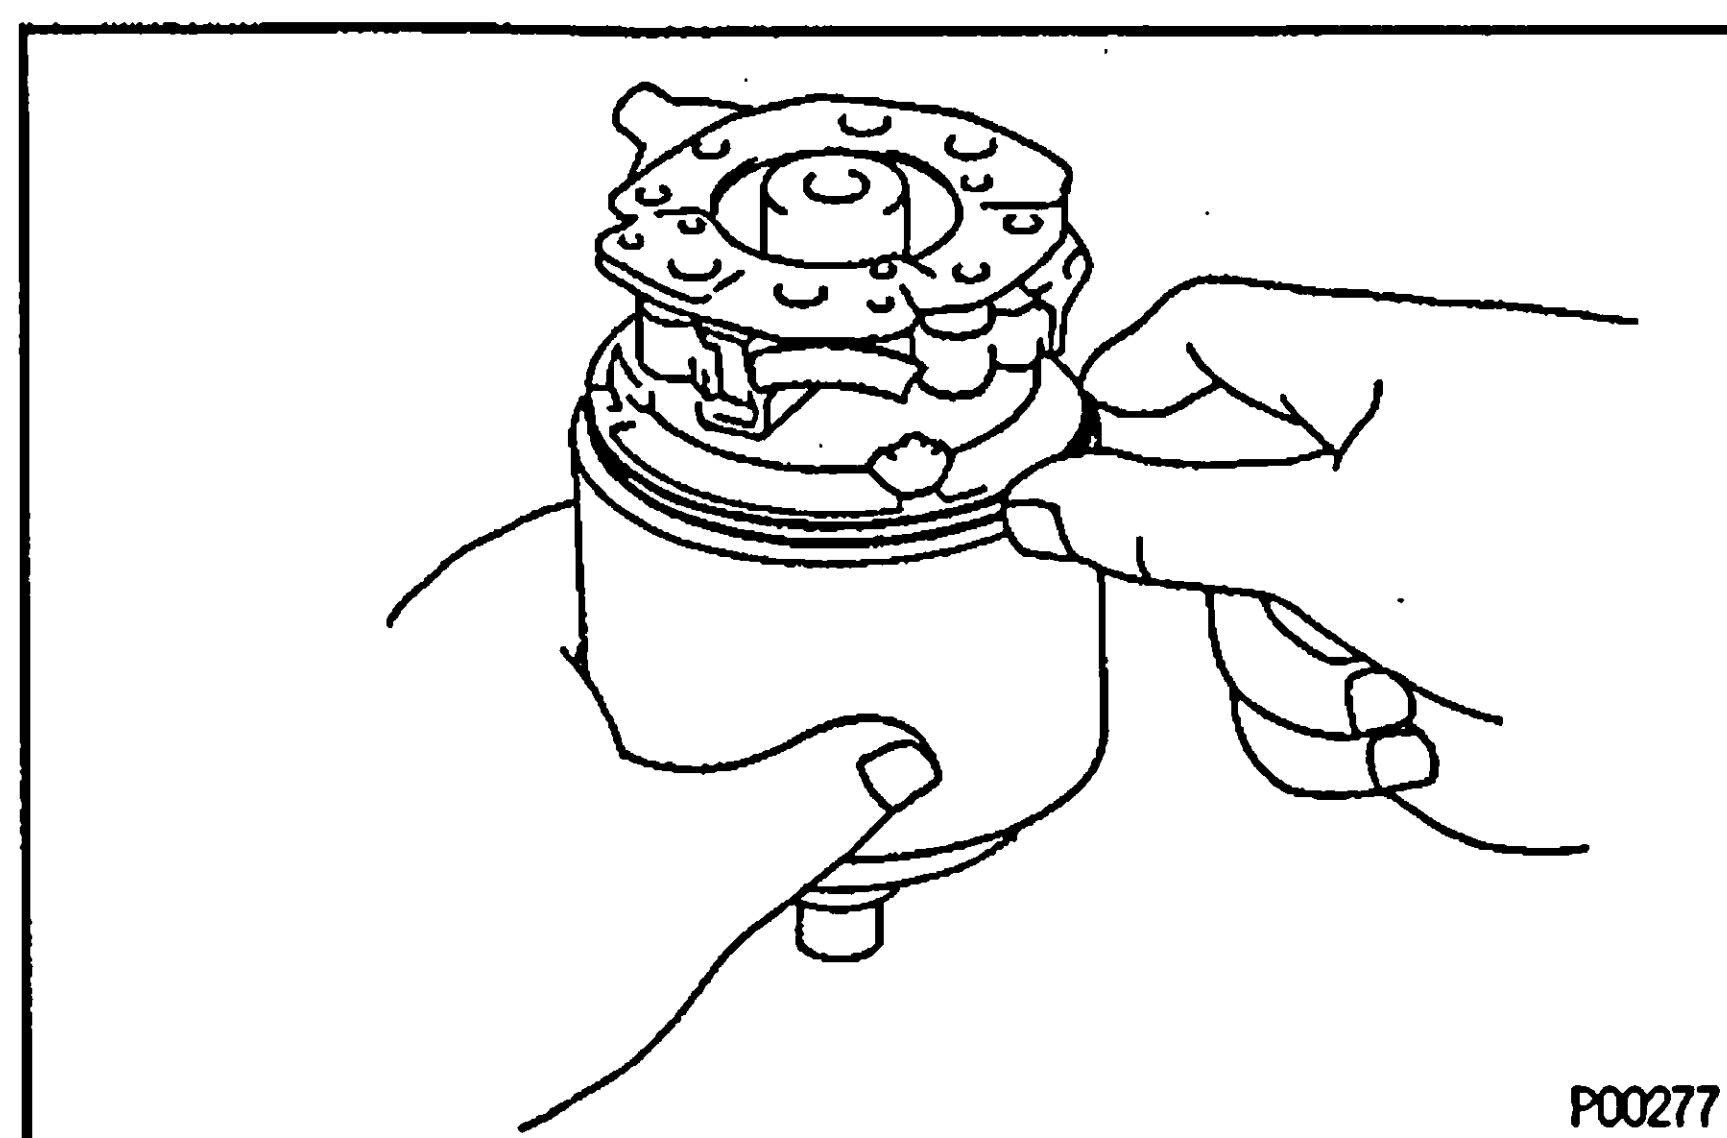


(c) Place a new O-ring in position on the field frame.

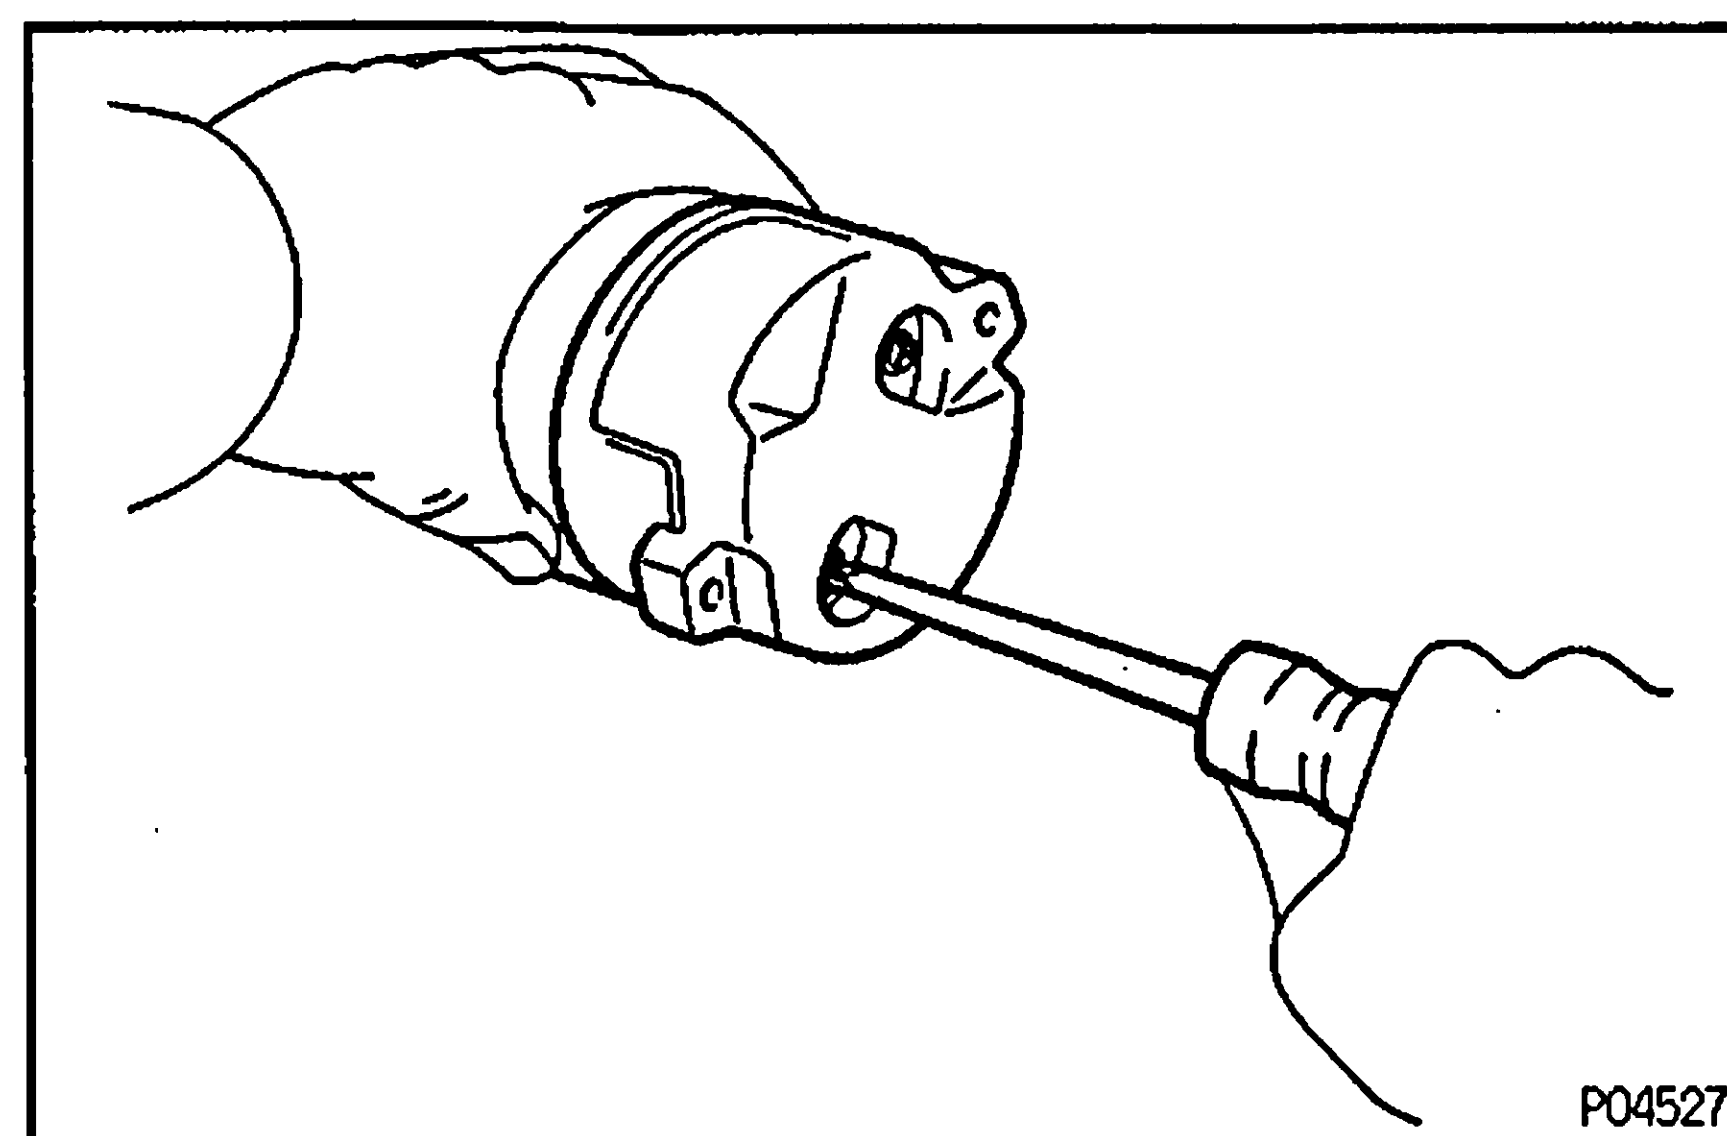

(d) Install a new O-ring to the the end cover screw.


(e) Install the end cover to the field frame with the two screws.

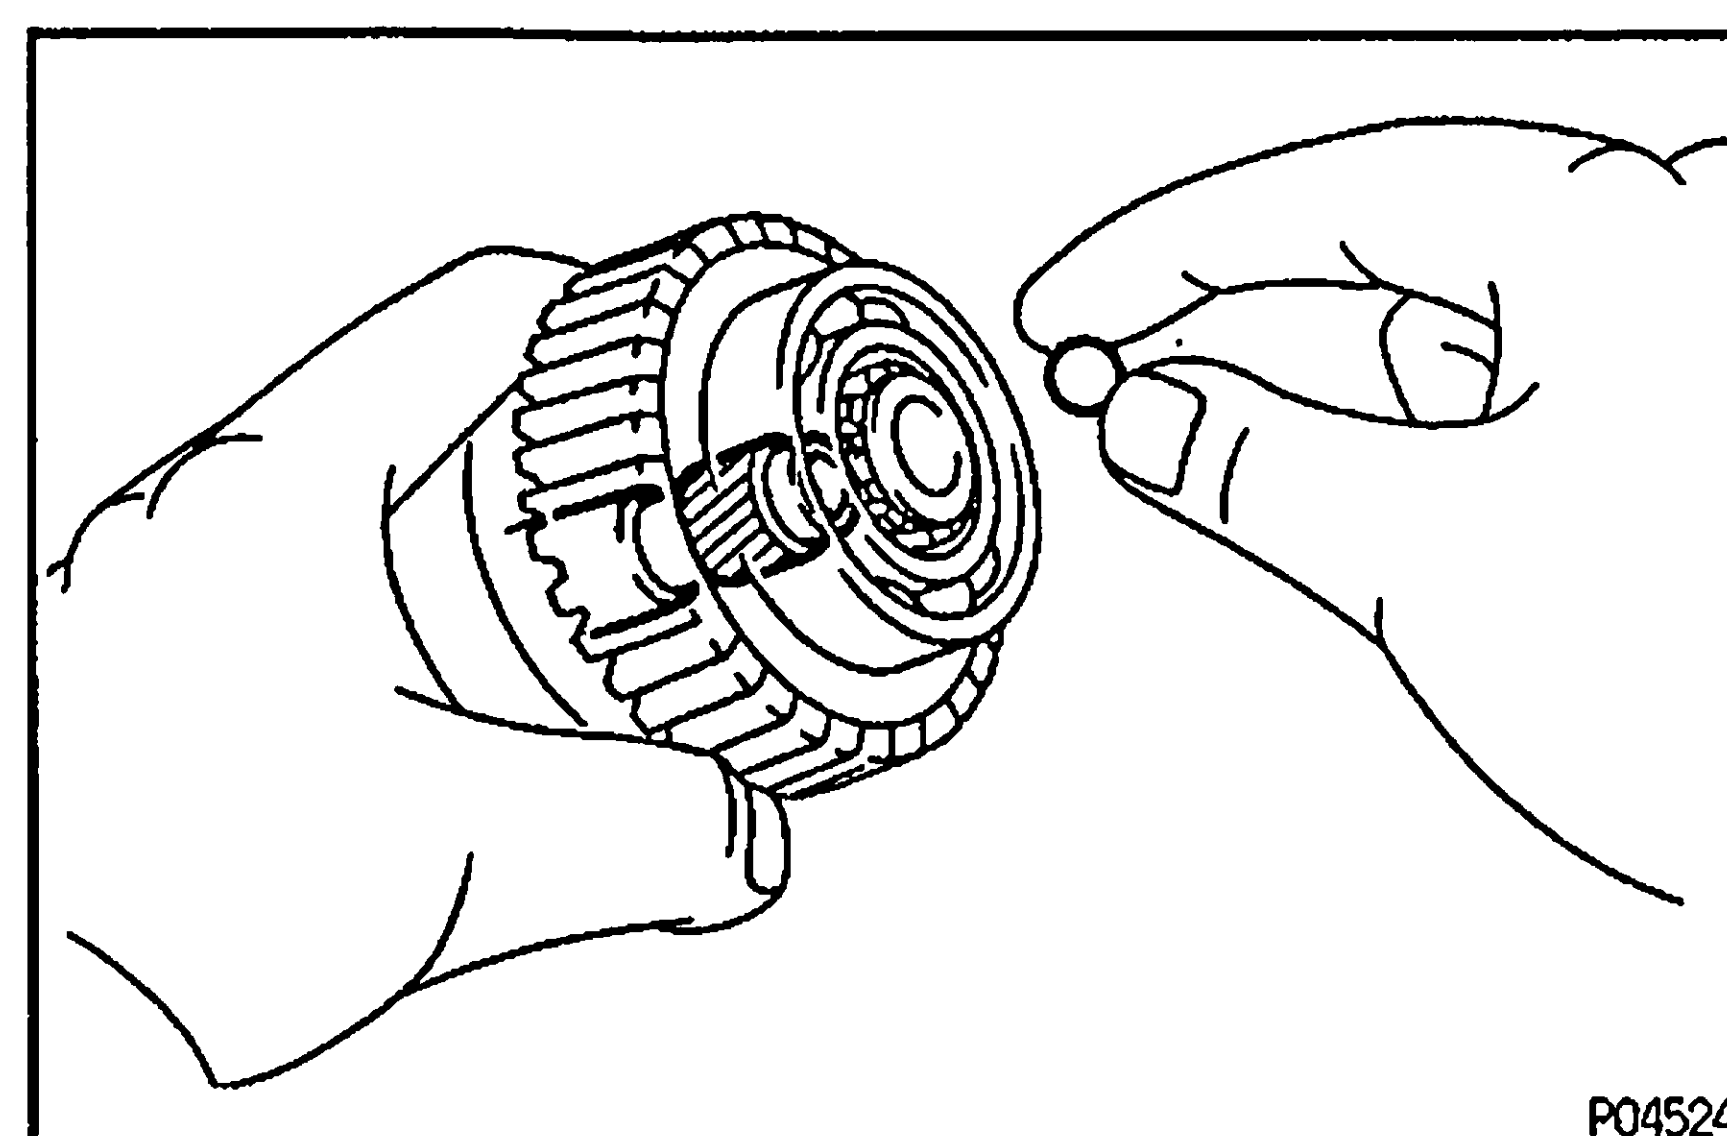

3. INSERT STEEL BALL INTO CLUTCH SHAFT HOLE


(a) Apply grease to the steel ball.

(b) Insert the steel ball into the clutch shaft hole.

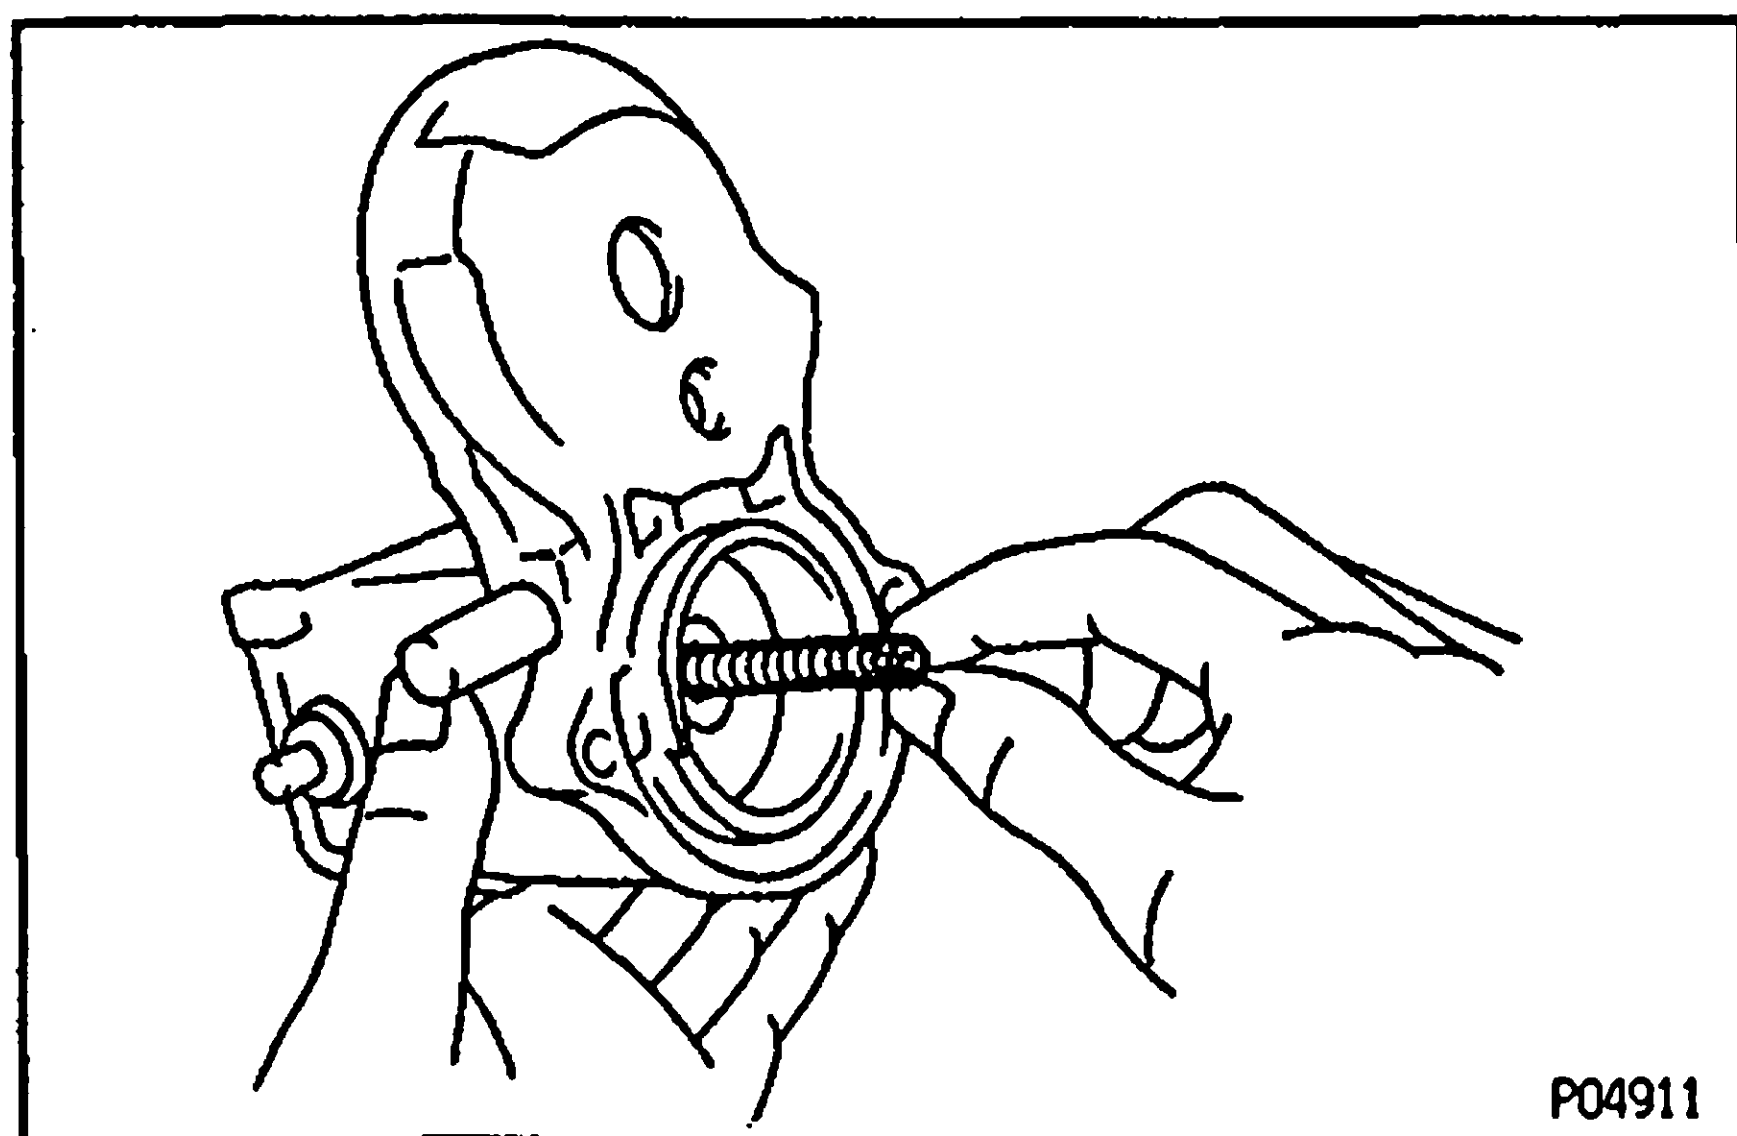


4. INSTALL STARTER HOUSING, CLUTCH ASSEMBLY AND GEAR

- (a) Apply grease to the return spring.
- (b) Insert the return spring into the magnetic switch hole.

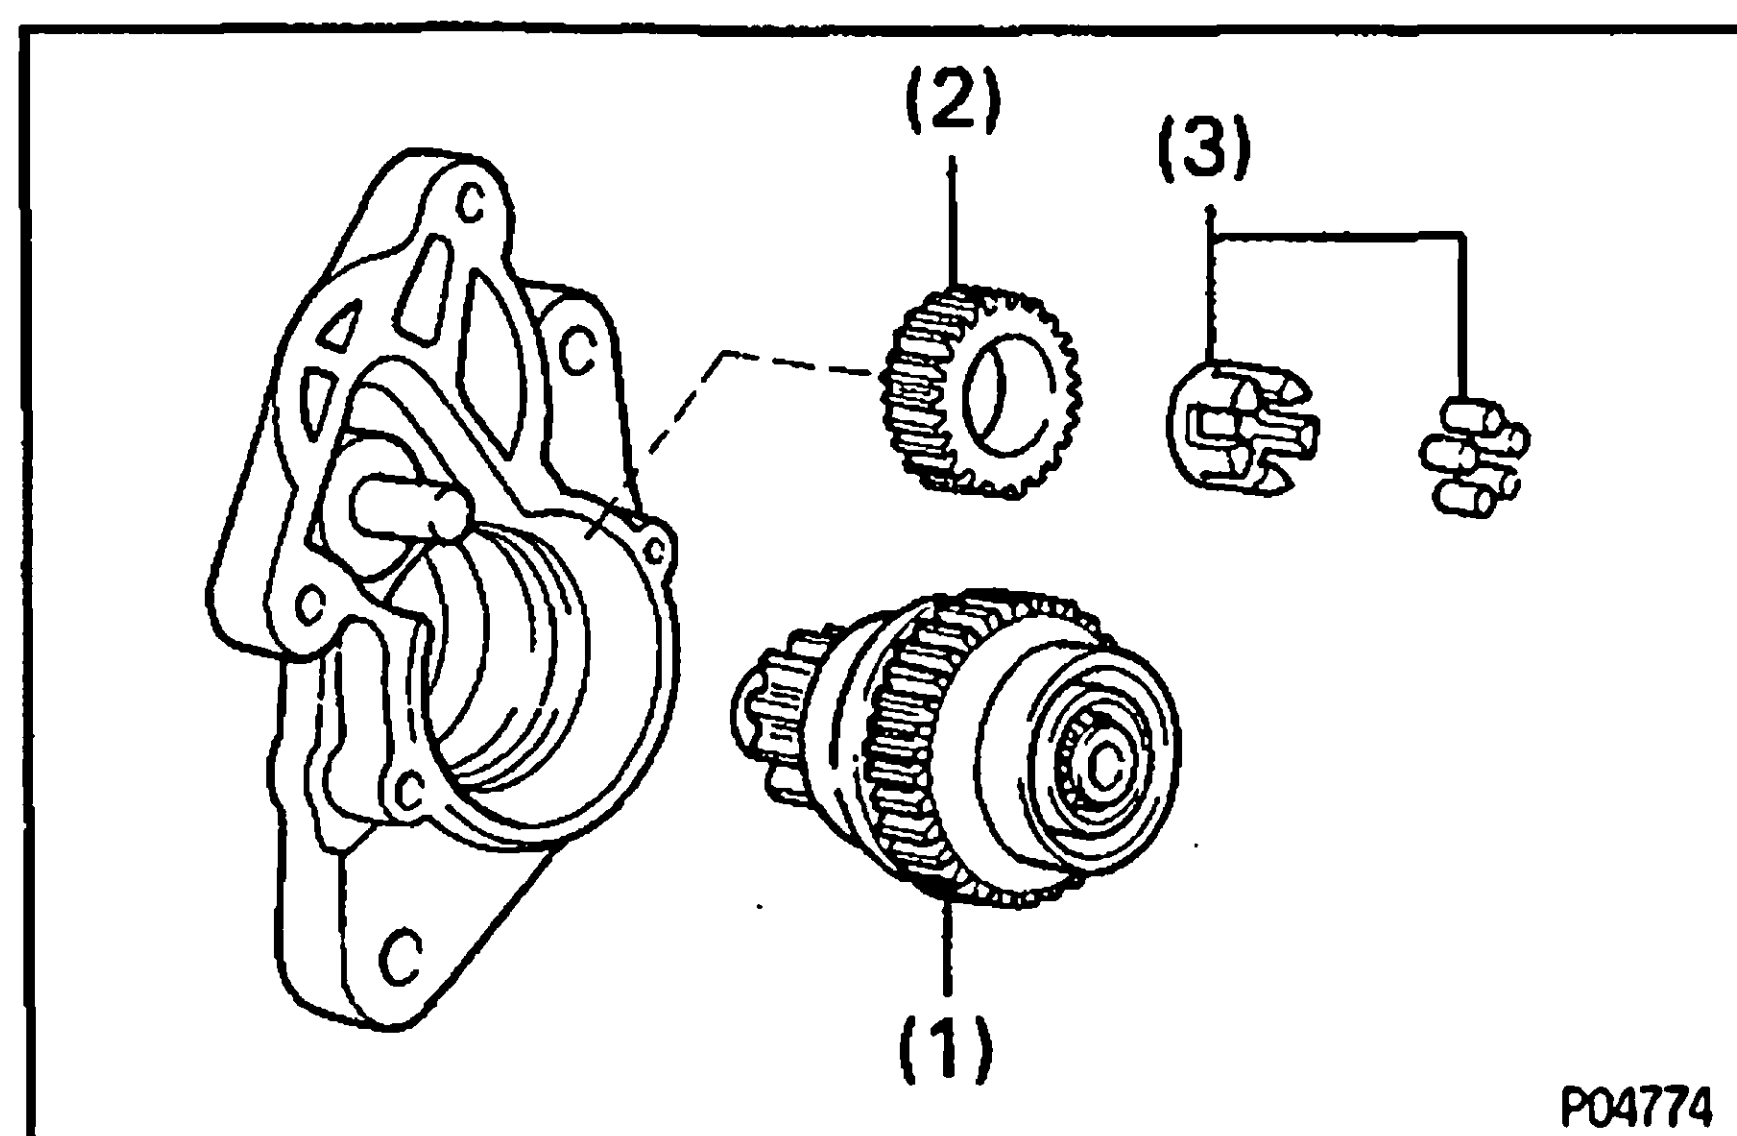


- (c) Place the following parts in position on the starter housing:

- (1) Clutch assembly
- (2) Idler gear
- (3) Bearing

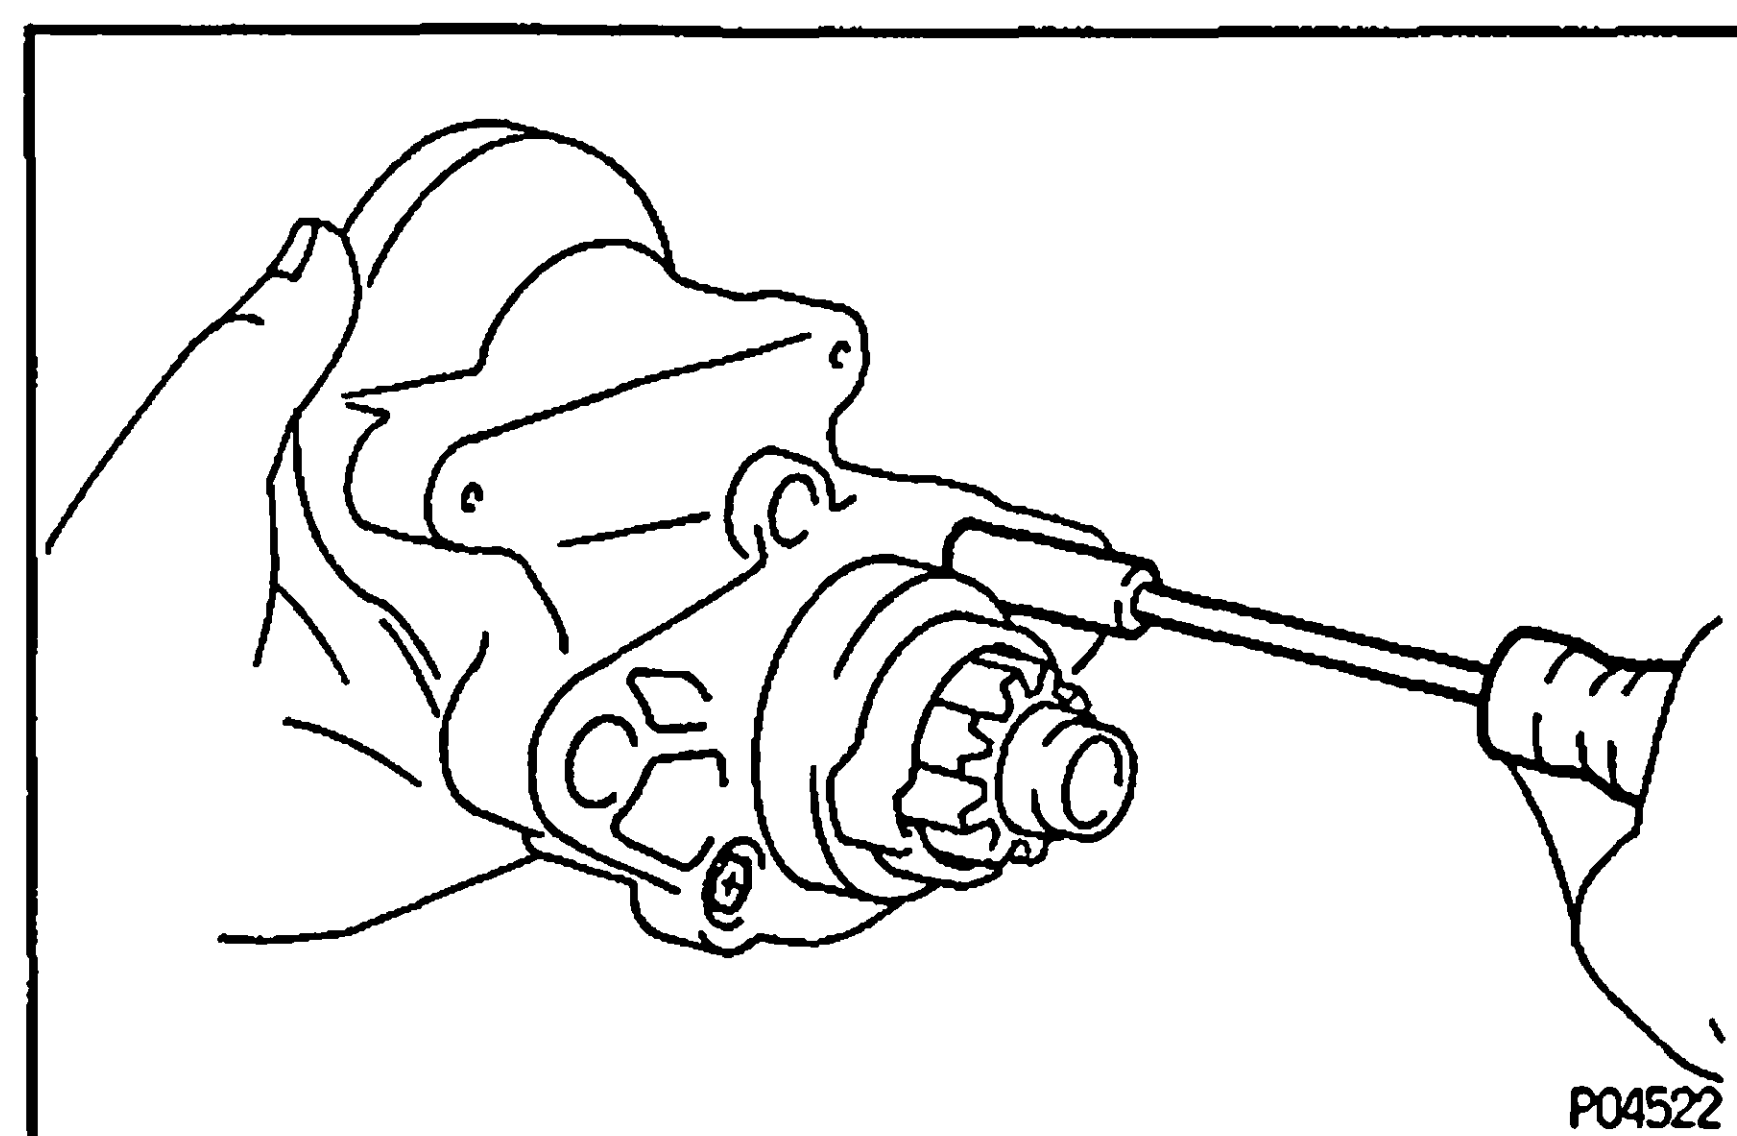


- (d) Assemble the starter housing and magnetic switch assembly and install the two screws.

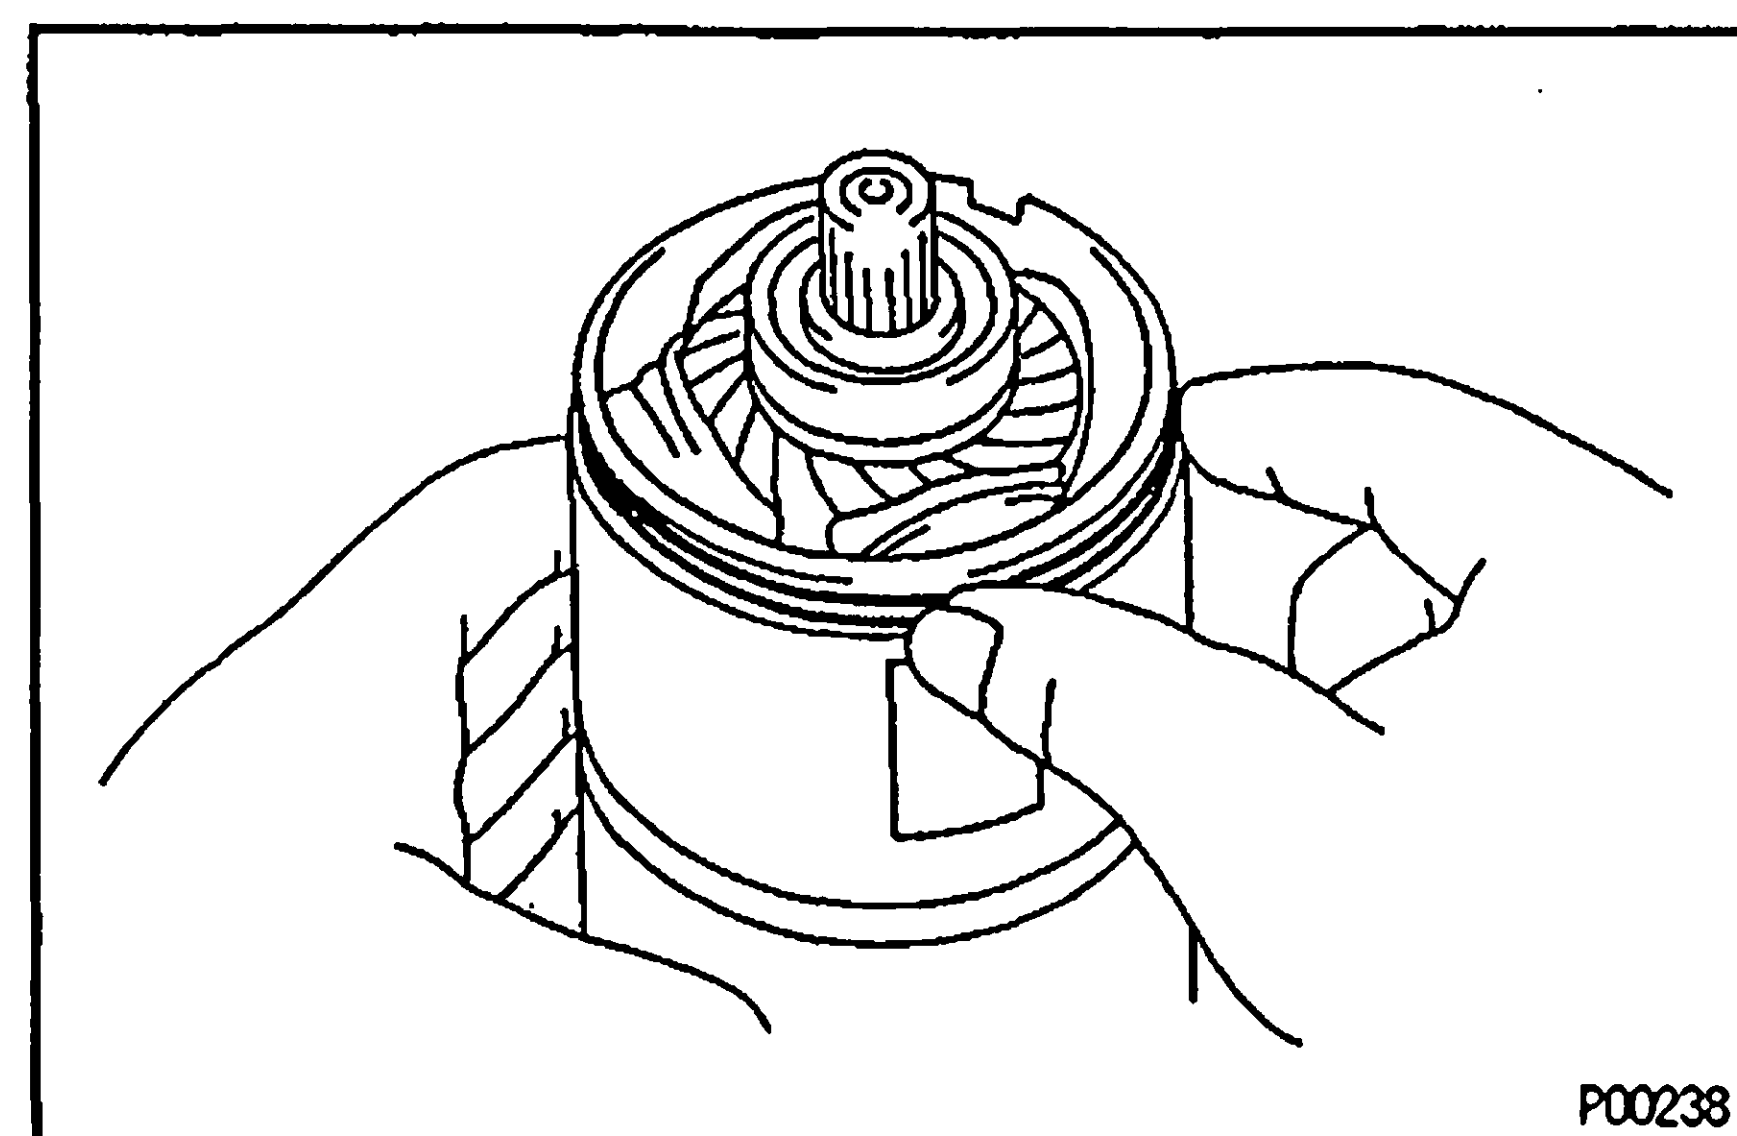


5. INSTALL FIELD FRAME AND ARMATURE ASSEMBLY


- (a) Place a new O—ring in position on the field frame.

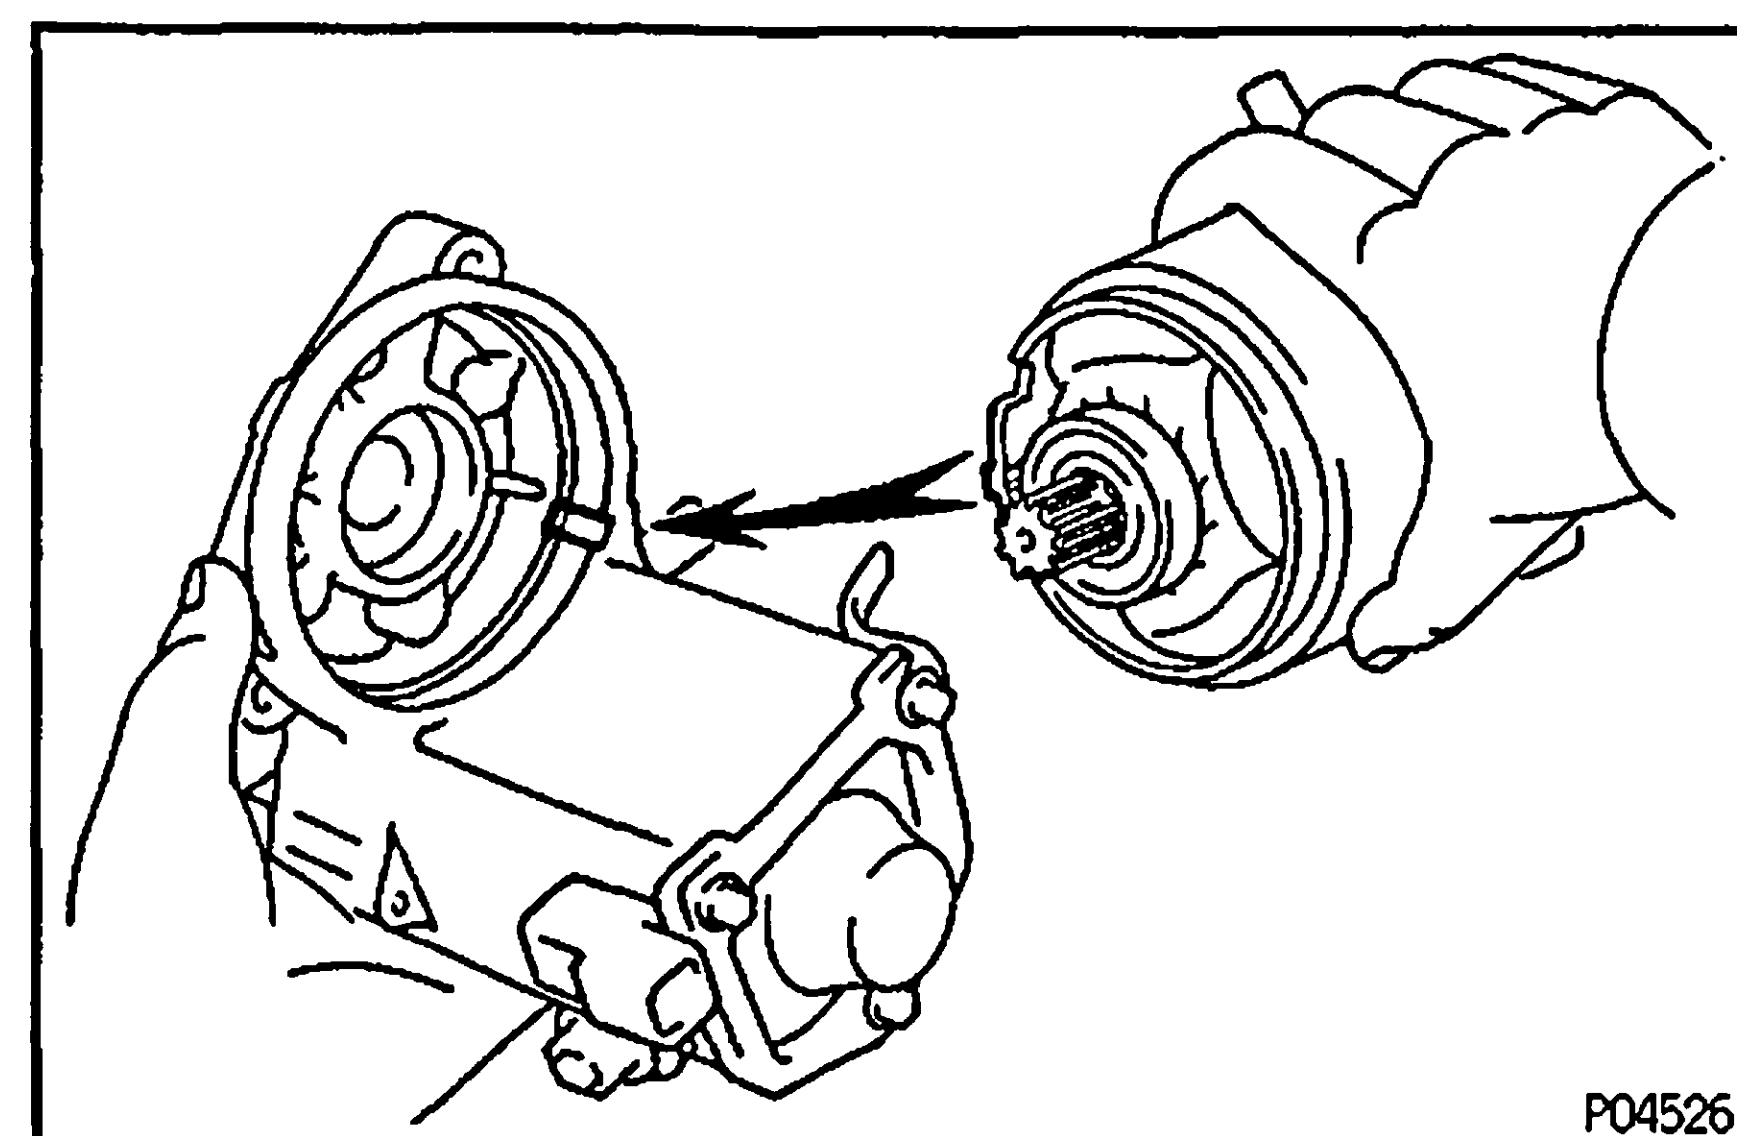

- (b) Align the protrusion of the field frame with the cutout of the magnetic switch.

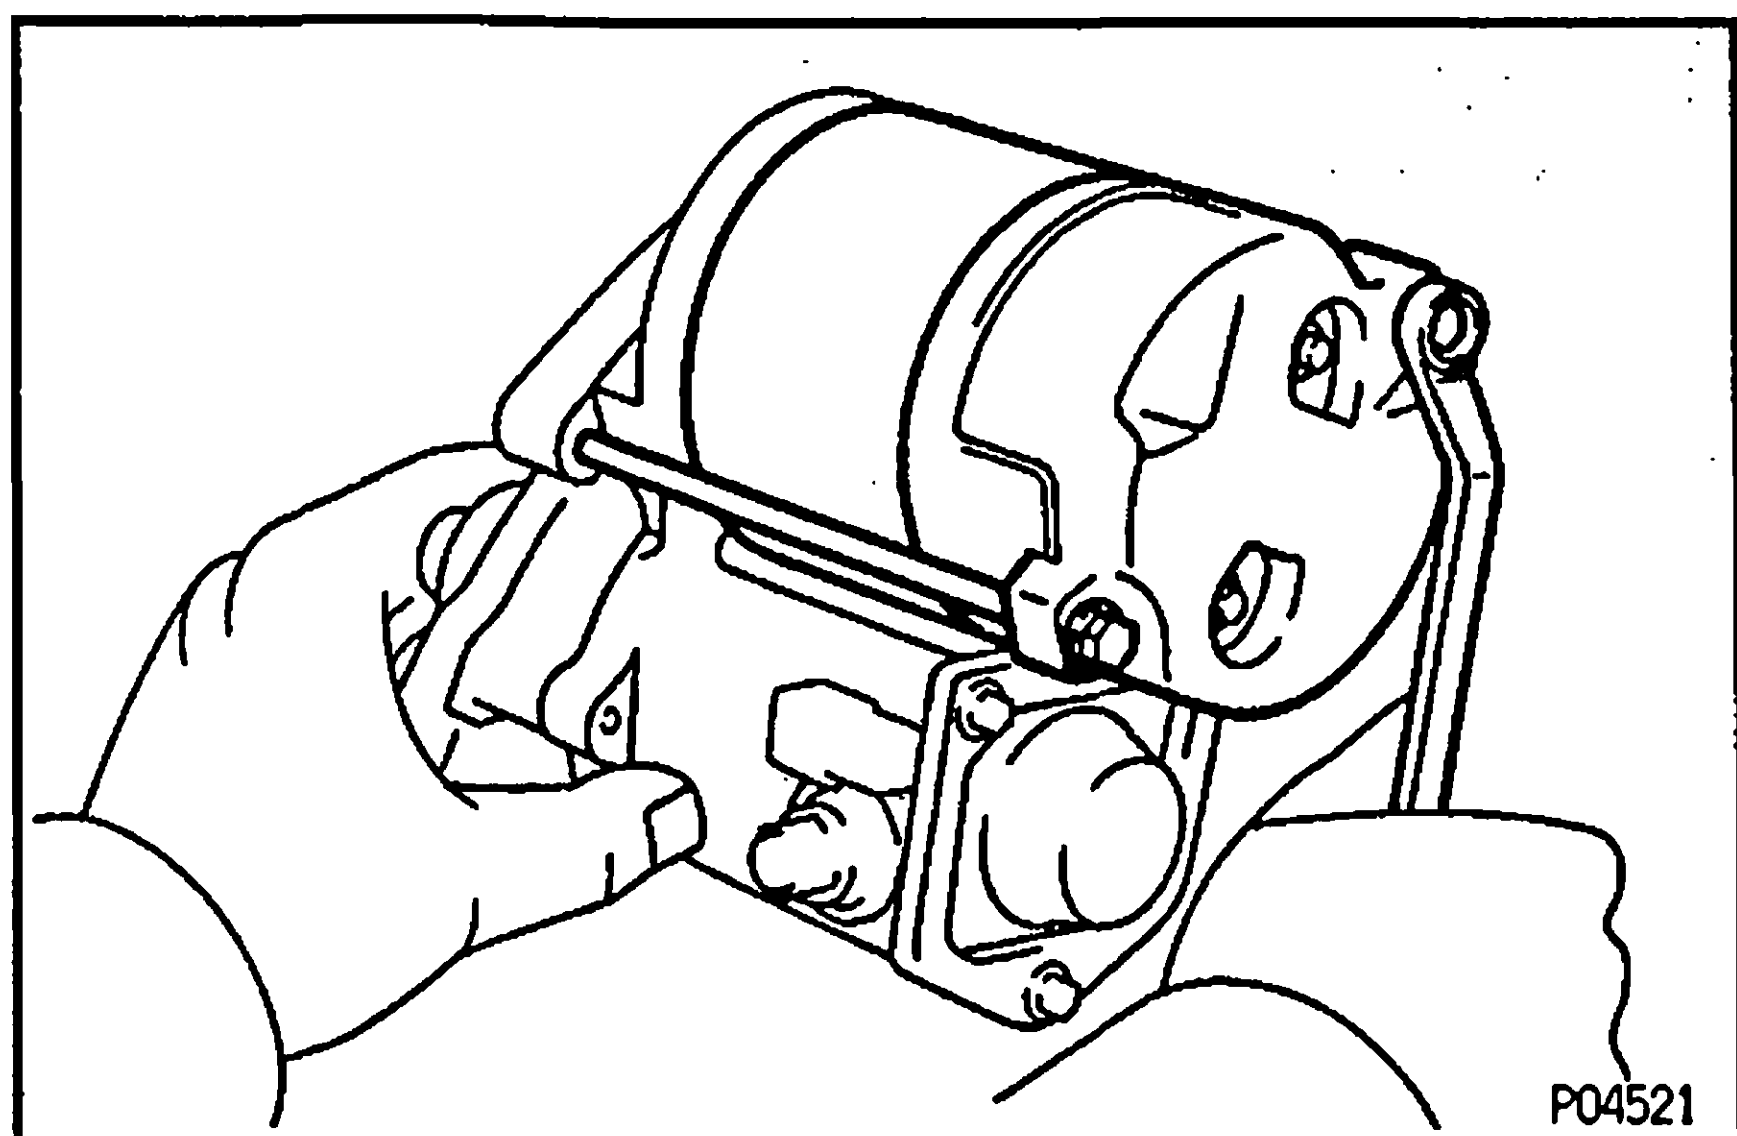

- (c) Install the field frame and armature assembly with the two through bolts.

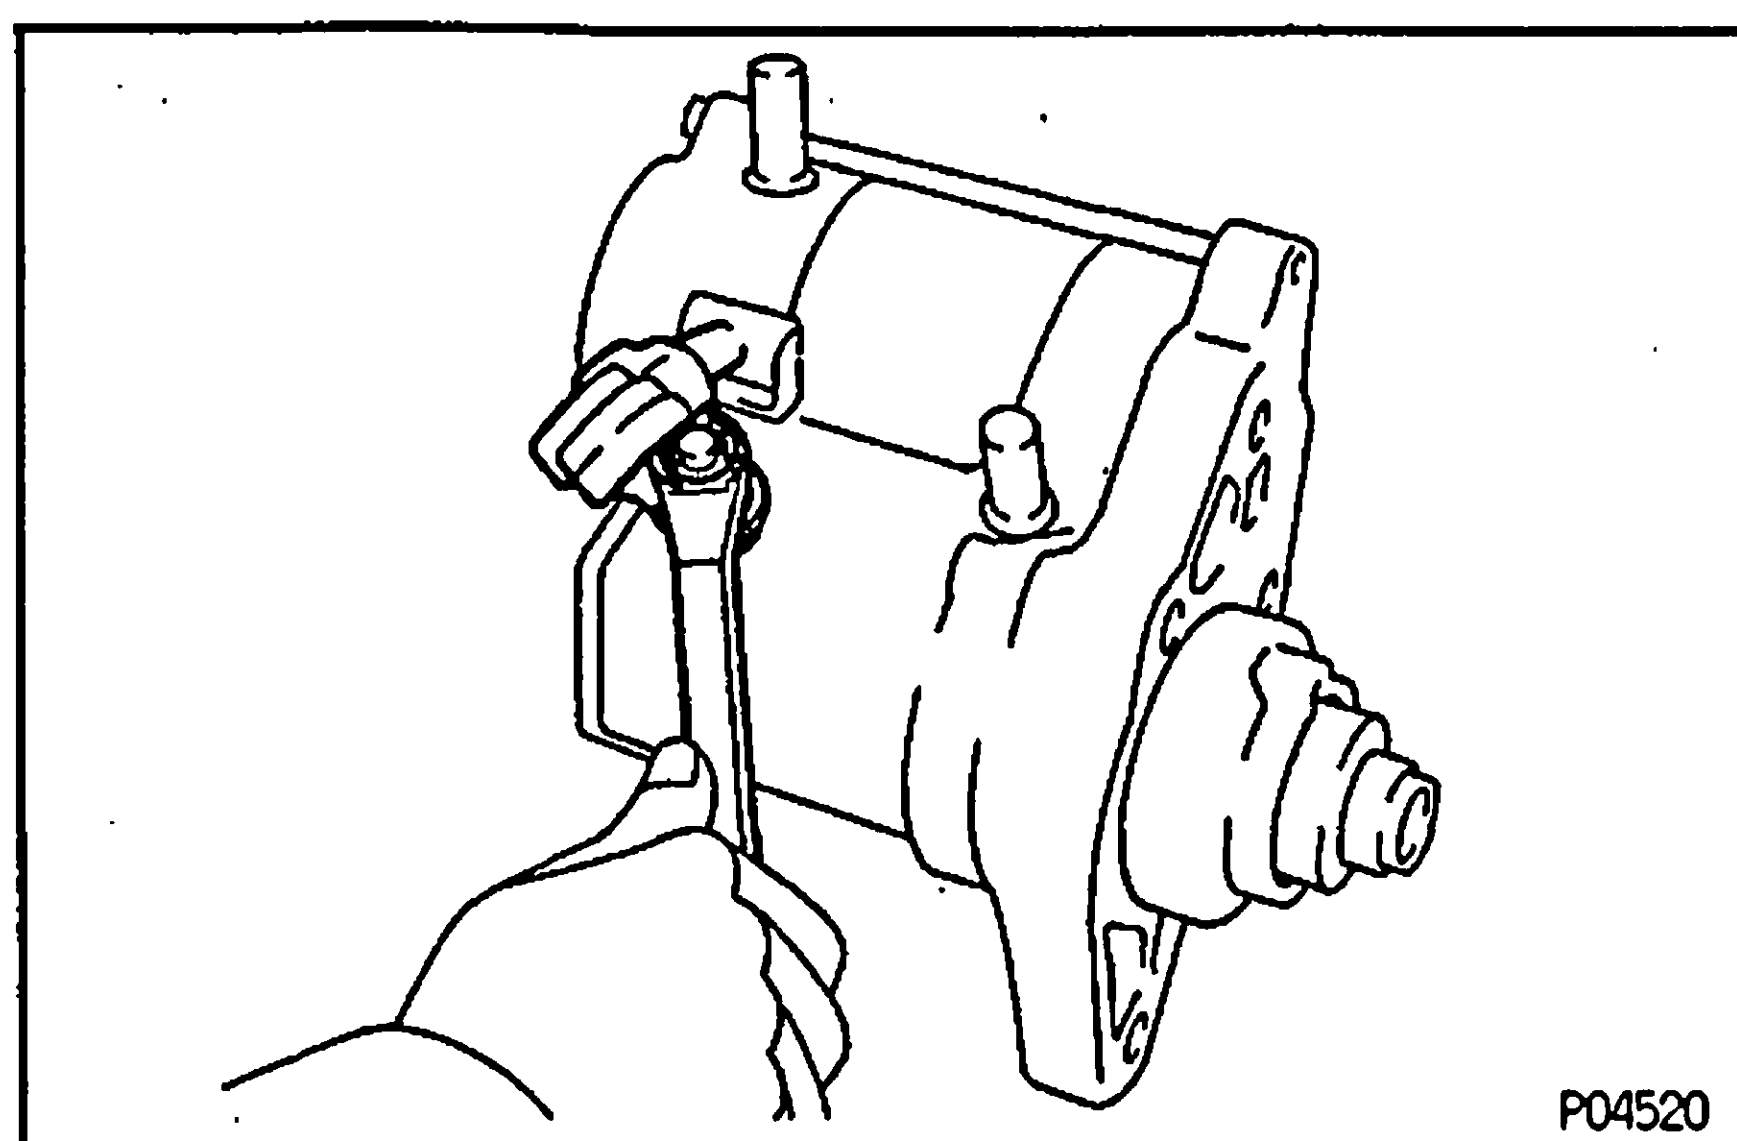


- (d) Connect the lead wire to terminal C, and install the nut.

STARTER PERFORMANCE TEST

NOTICE: These tests must be performed within 3 to 5 seconds to avoid burning out the coil.


1. PERFORM PULL-IN TEST

- Disconnect the field coil lead wire from terminal C.
- Connect the battery to the magnetic switch as shown. Check that the clutch pinion gear moves outward. If the clutch pinion gear does not move, replace the magnetic switch assembly.

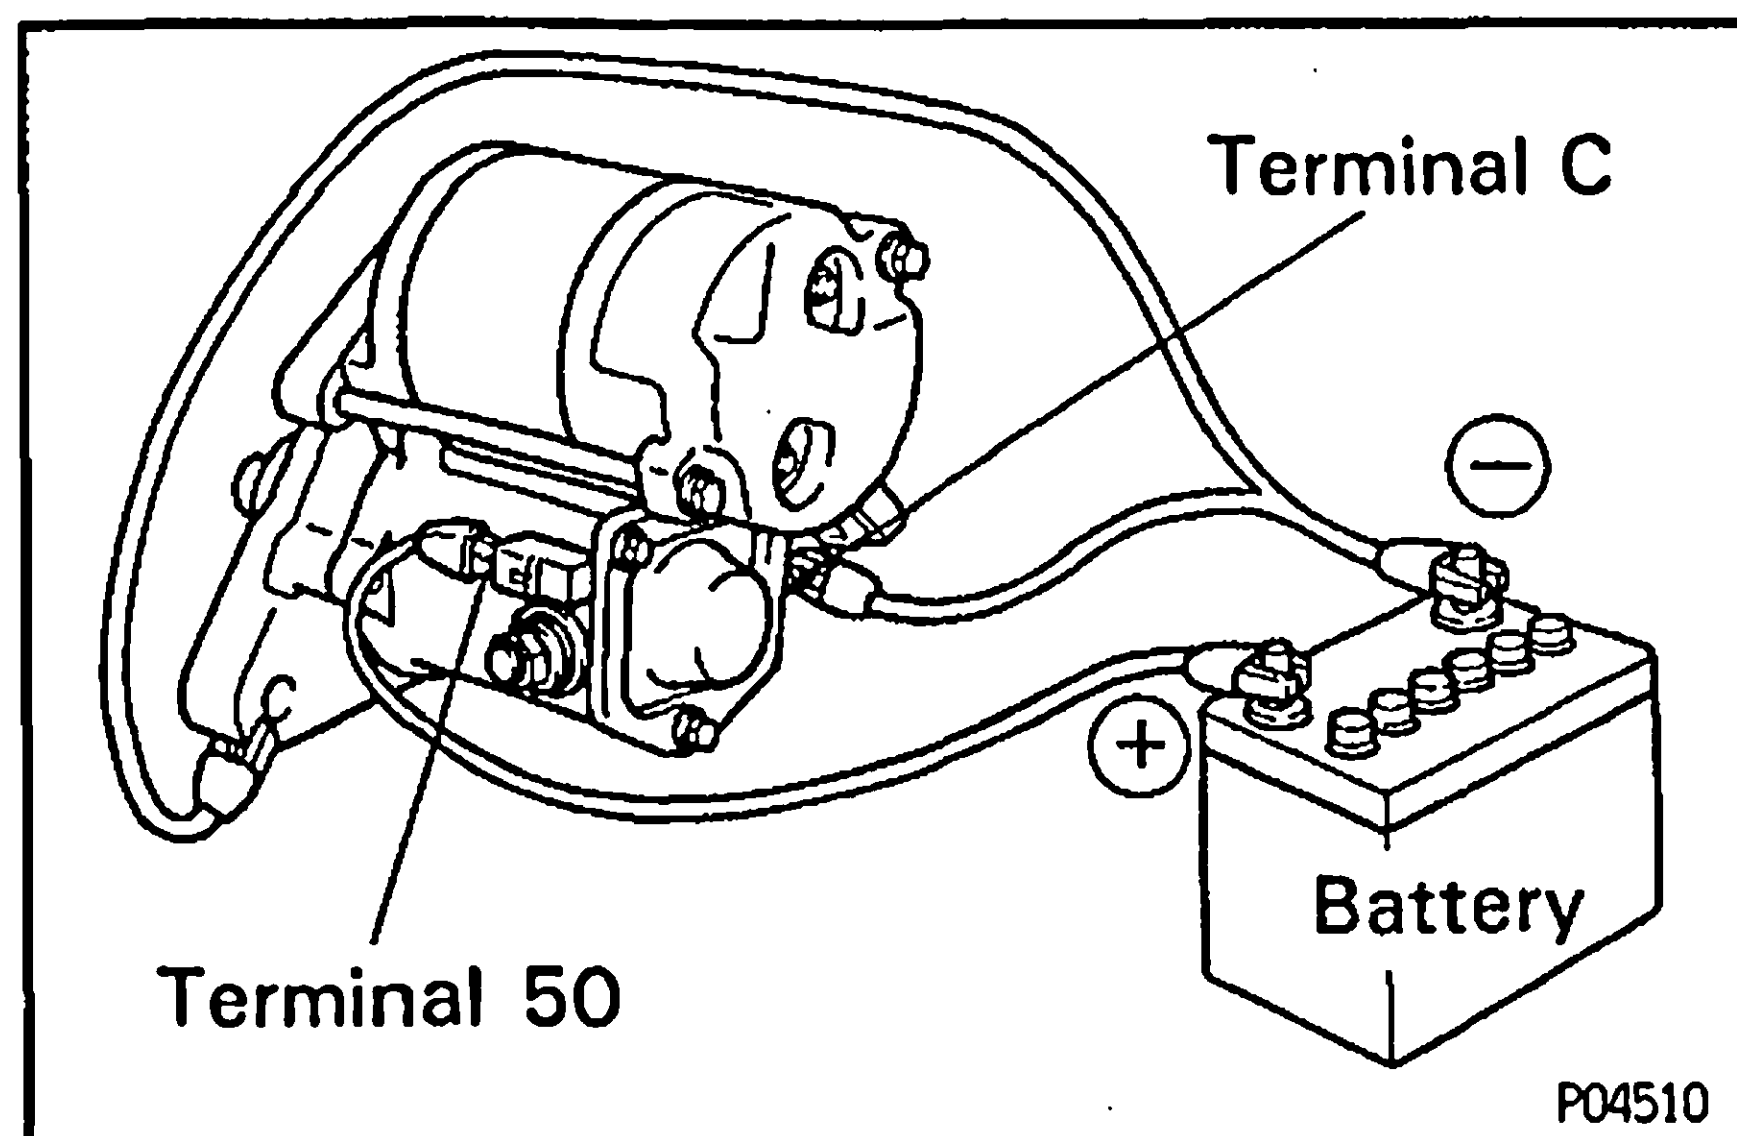


2. PERFORM HOLD-IN TEST

With battery connected as above with the clutch pinion gear out, disconnect the negative (—) lead from terminal C. Check that the pinion gear remains out. If the clutch pinion gear returns inward, replace the magnetic switch assembly.

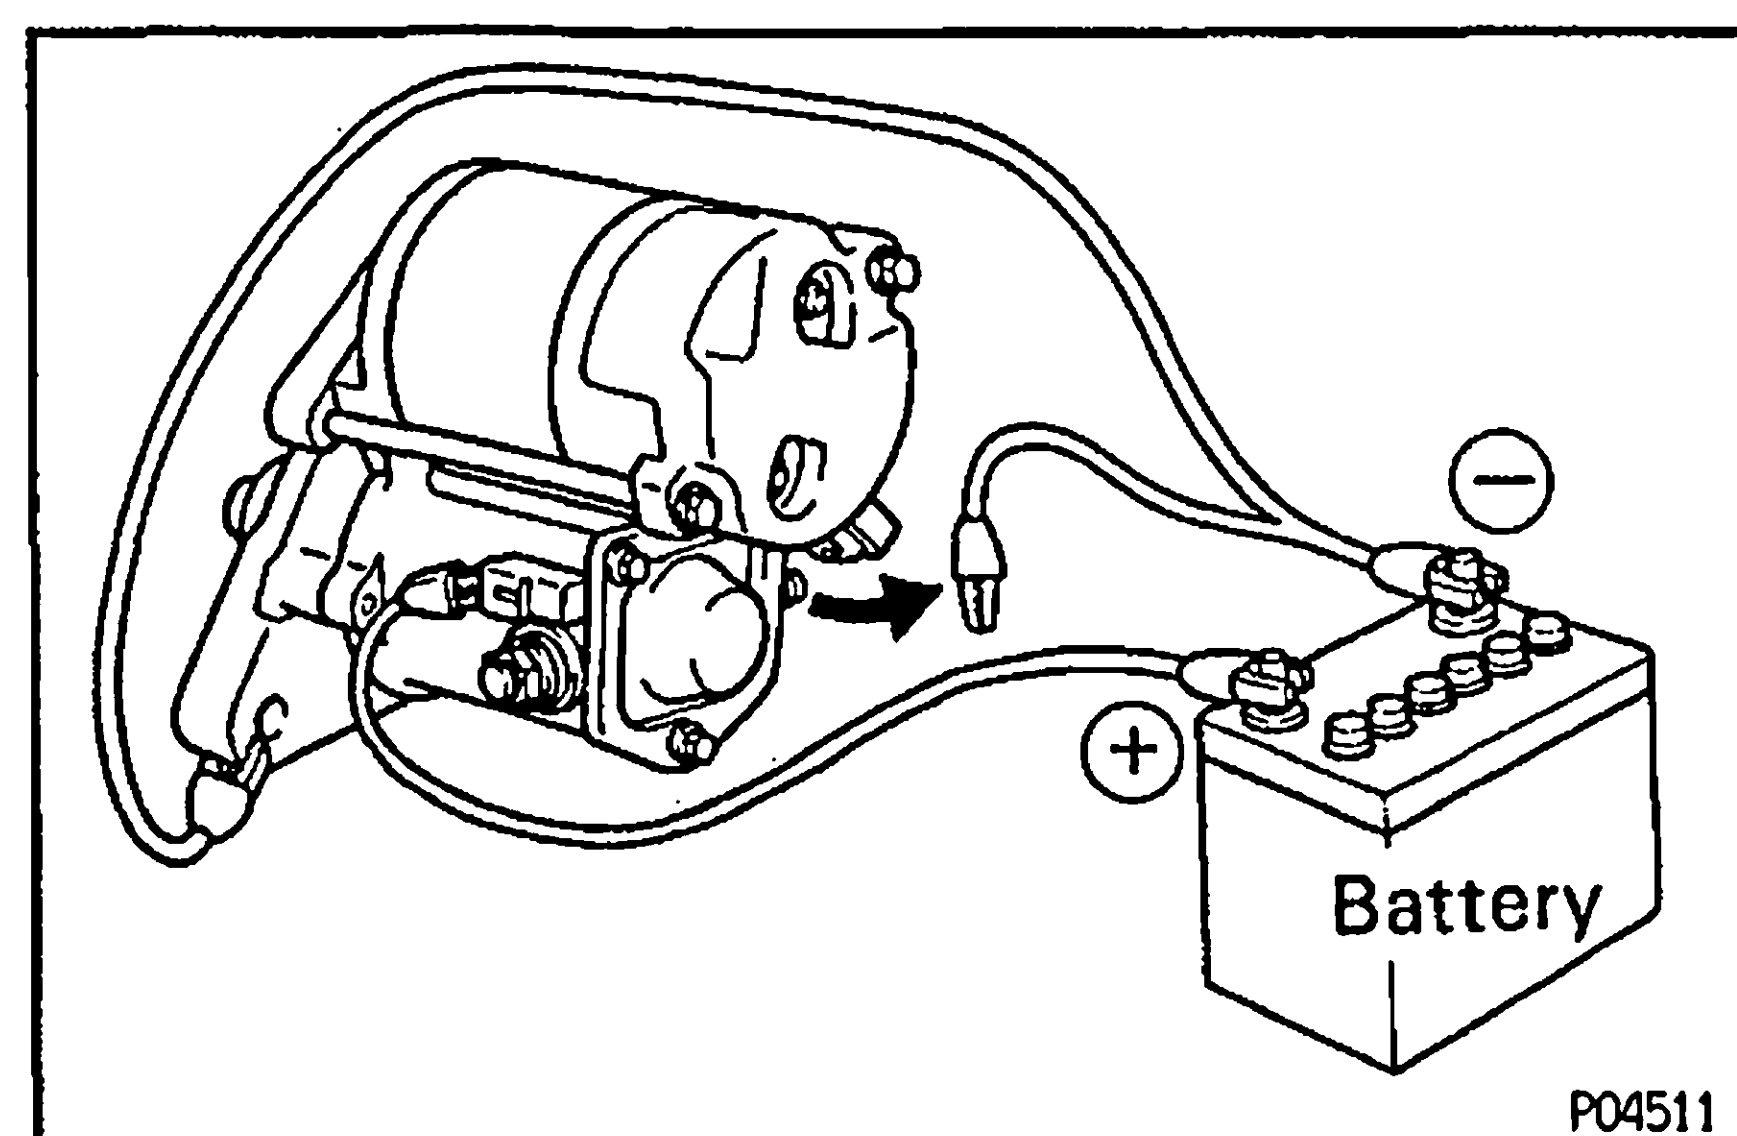

3. INSPECT CLUTCH PINION GEAR RETURN

Disconnect the negative (—) lead from the switch body. Check that the clutch pinion gear returns inward. If the clutch pinion gear does not return, replace the magnetic switch assembly.

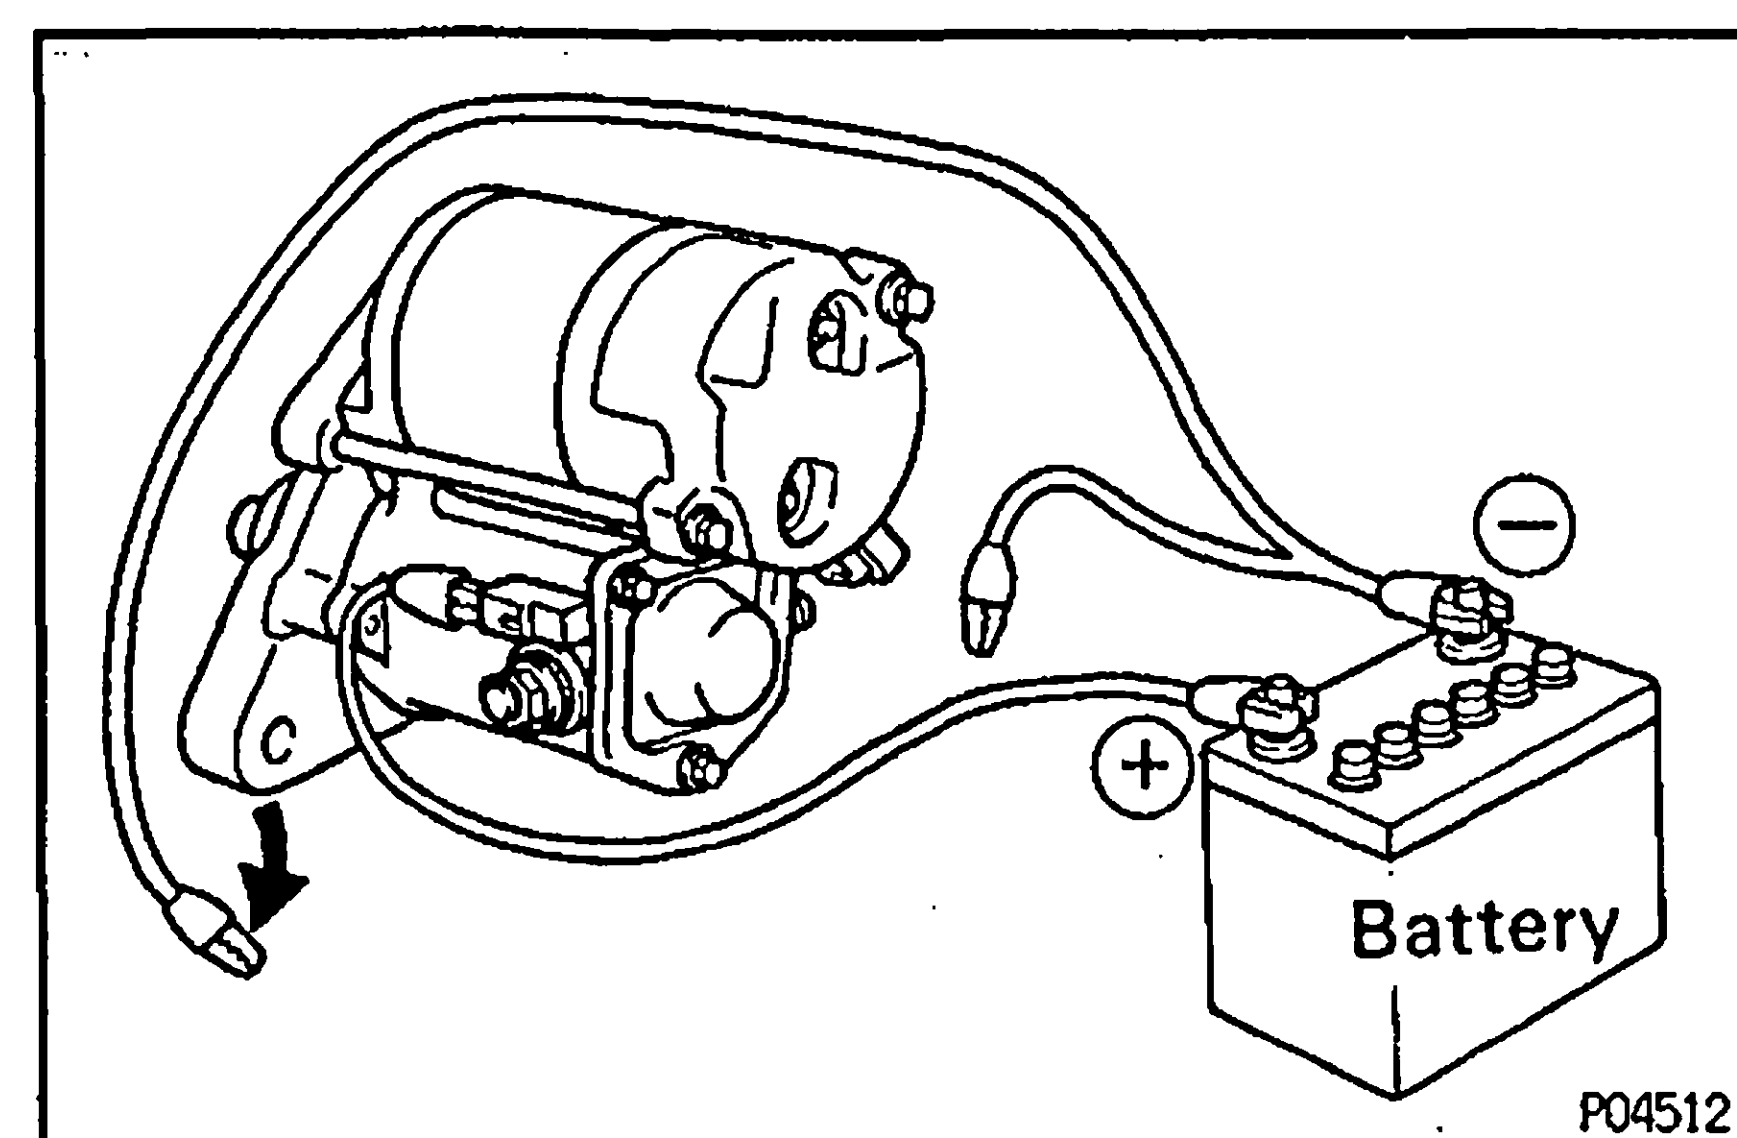



4. PERFORM NO-LOAD PERFORMANCE TEST

- Connect the battery and ammeter to the starter as shown.
- Check that the starter rotates smoothly and steadily with the pinion gear moving out. Check that the ammeter shows the specified current.

Specified current:

90 A or less at 11.5 V

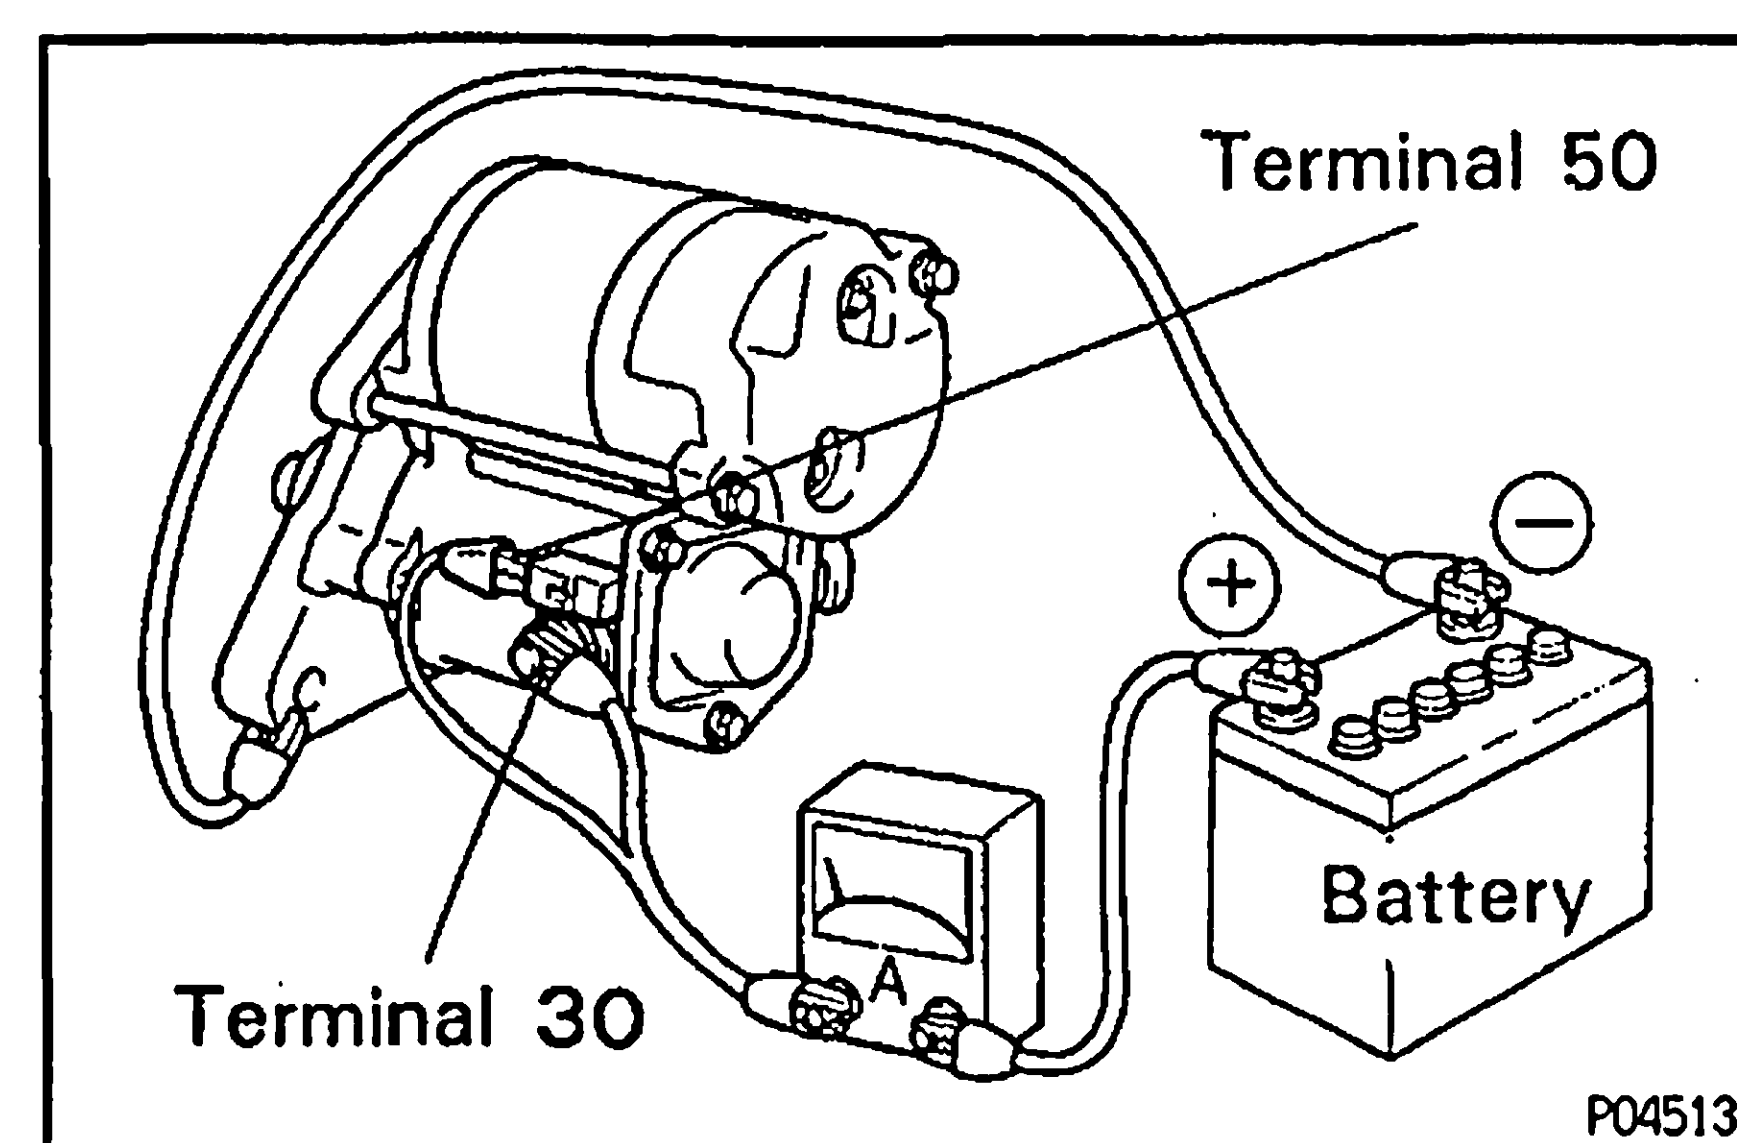

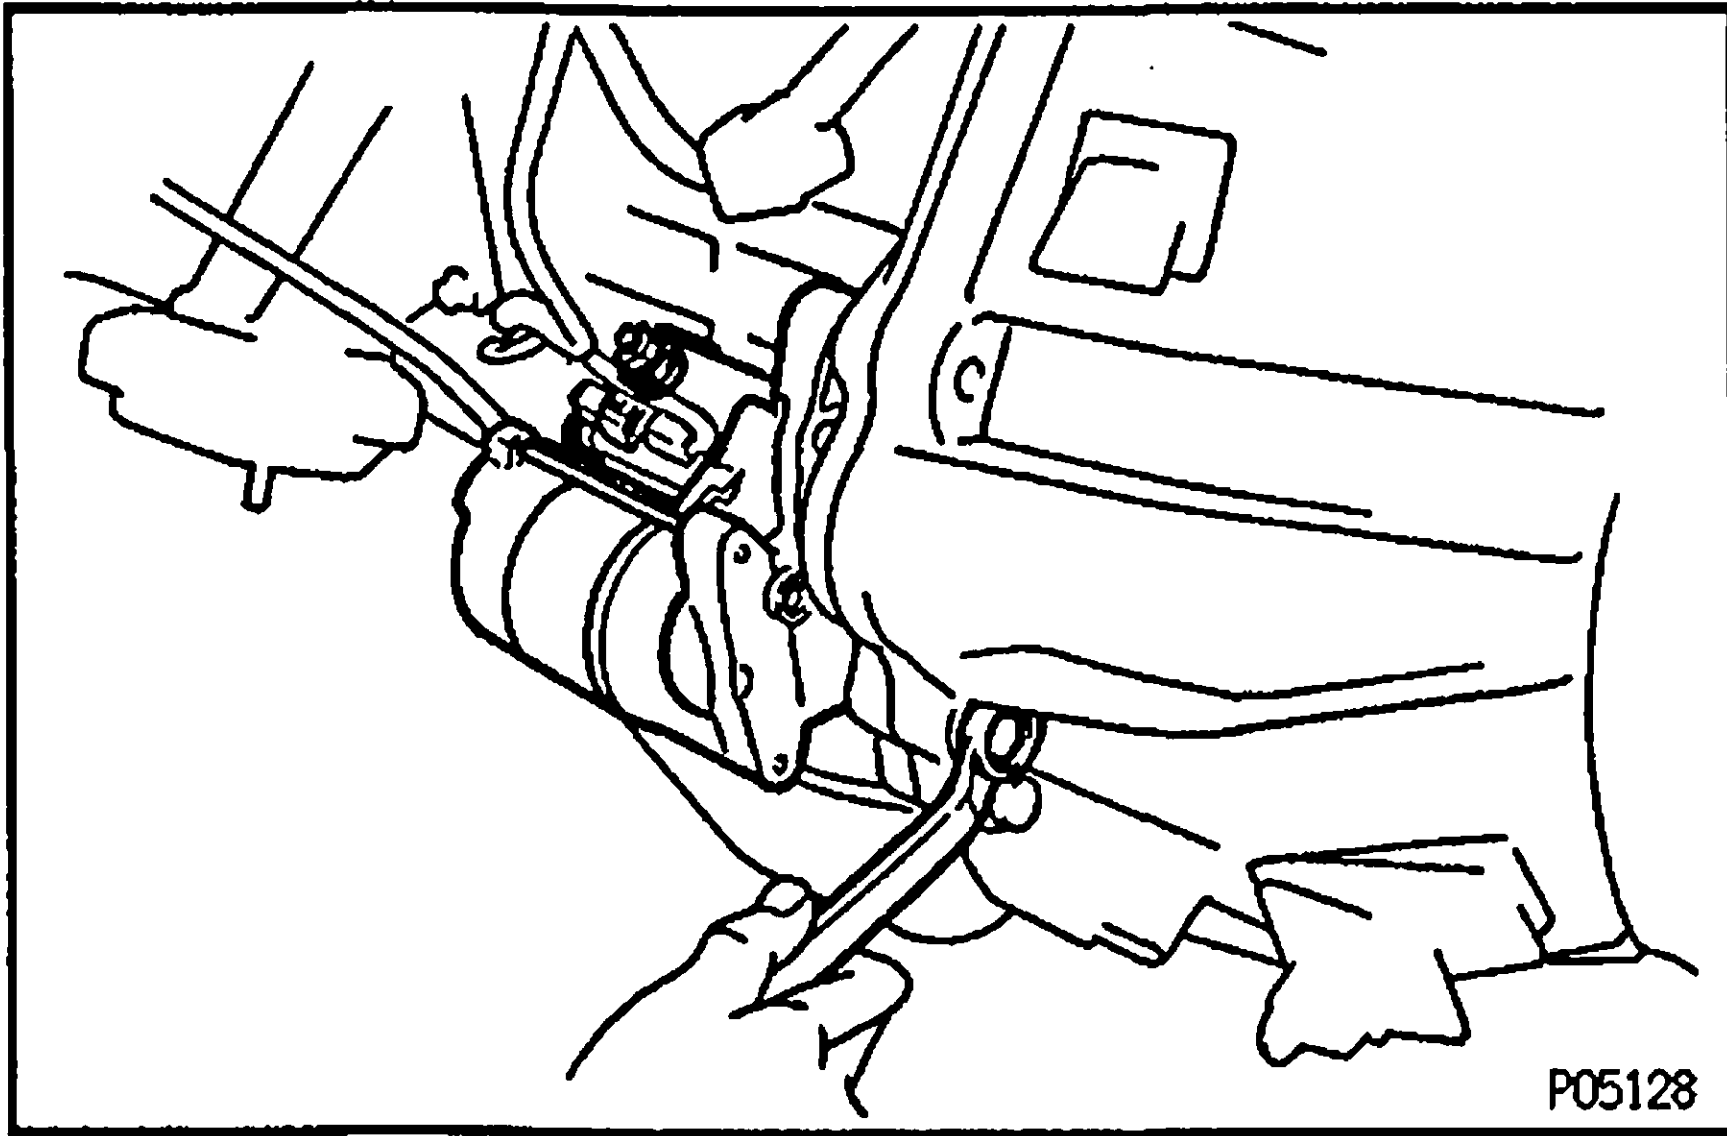

STARTER INSTALLATION

(See page ST-5)

1. INSTALL STARTER


- (a) Install the starter with the bolt and nut.
Torque: 39 N·m (400 kgf·cm, 29 ft·lbf)
- (b) Connect the starter wire with the nut.
Torque: 8.8 N·m (90 kgf·cm, 78 in·lbf)
- (c) Connect the starter connector.

2. CONNECT CABLE TO NEGATIVE TERMINAL OF BATTERY


3. CHECK THAT ENGINE STARTS

STARTER (2.2 kW) STARTER REMOVAL

8T02N-01

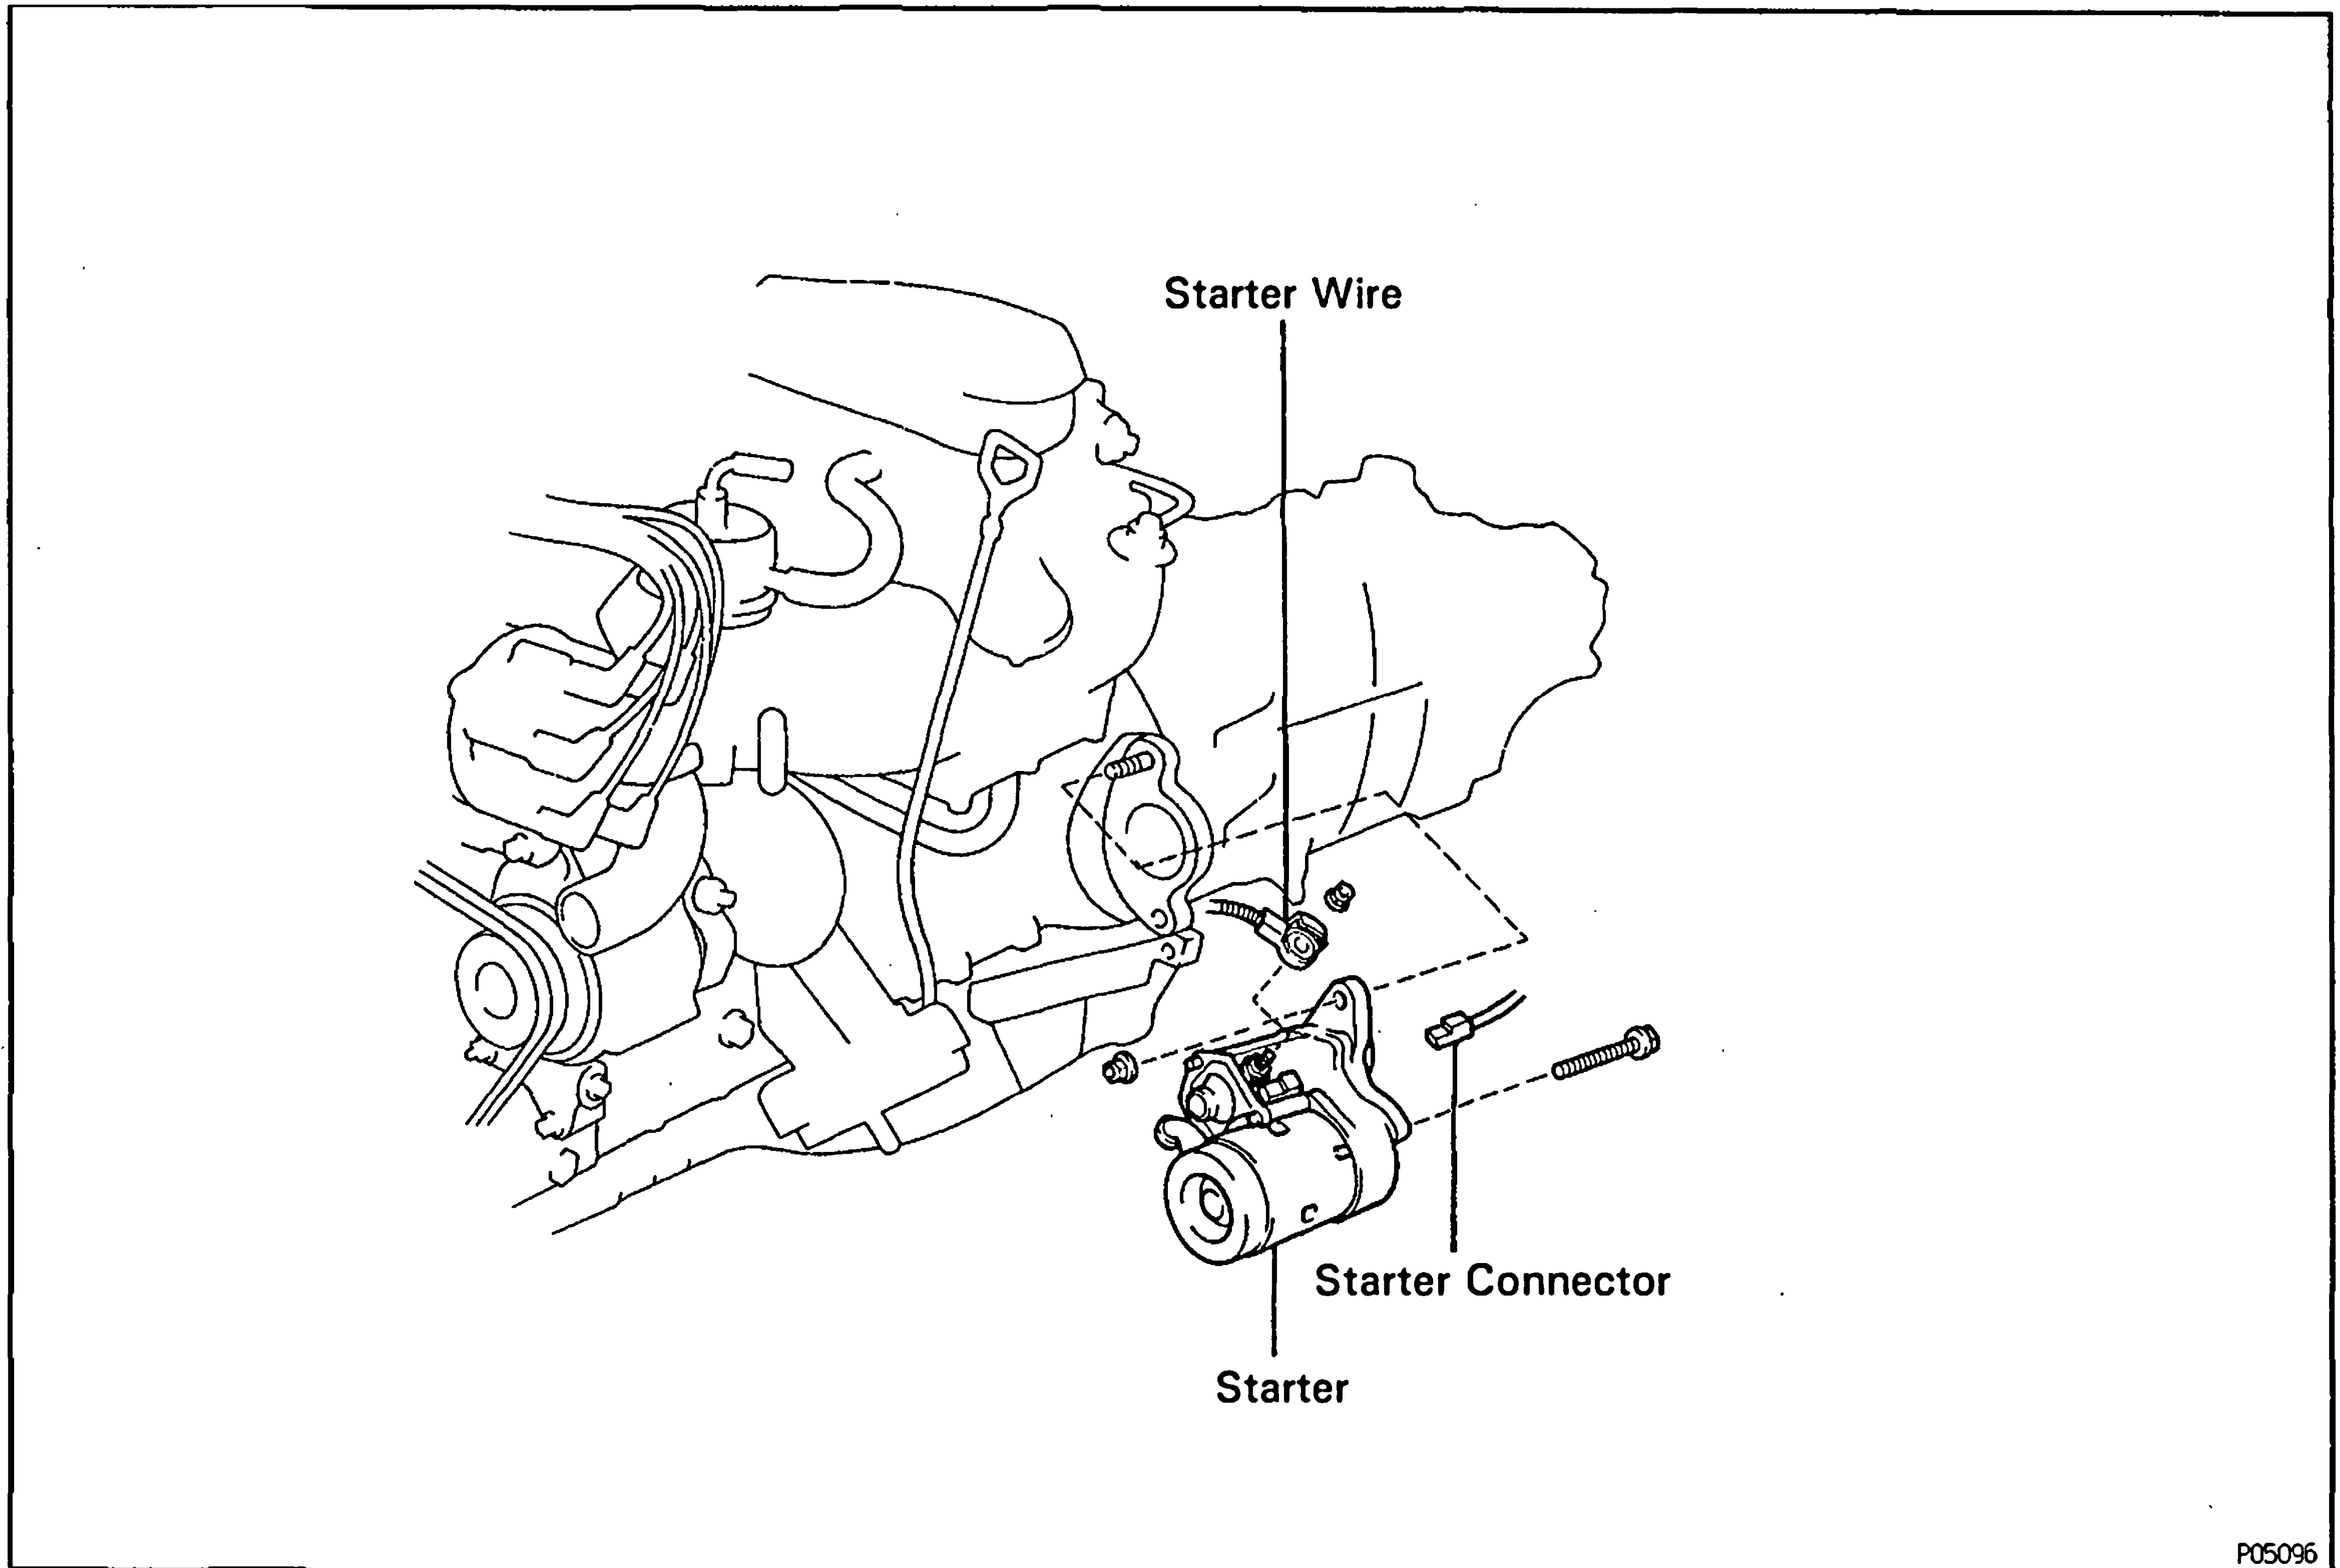


1. **DISCONNECT CABLE FROM NEGATIVE TERMINAL OF BATTERY**

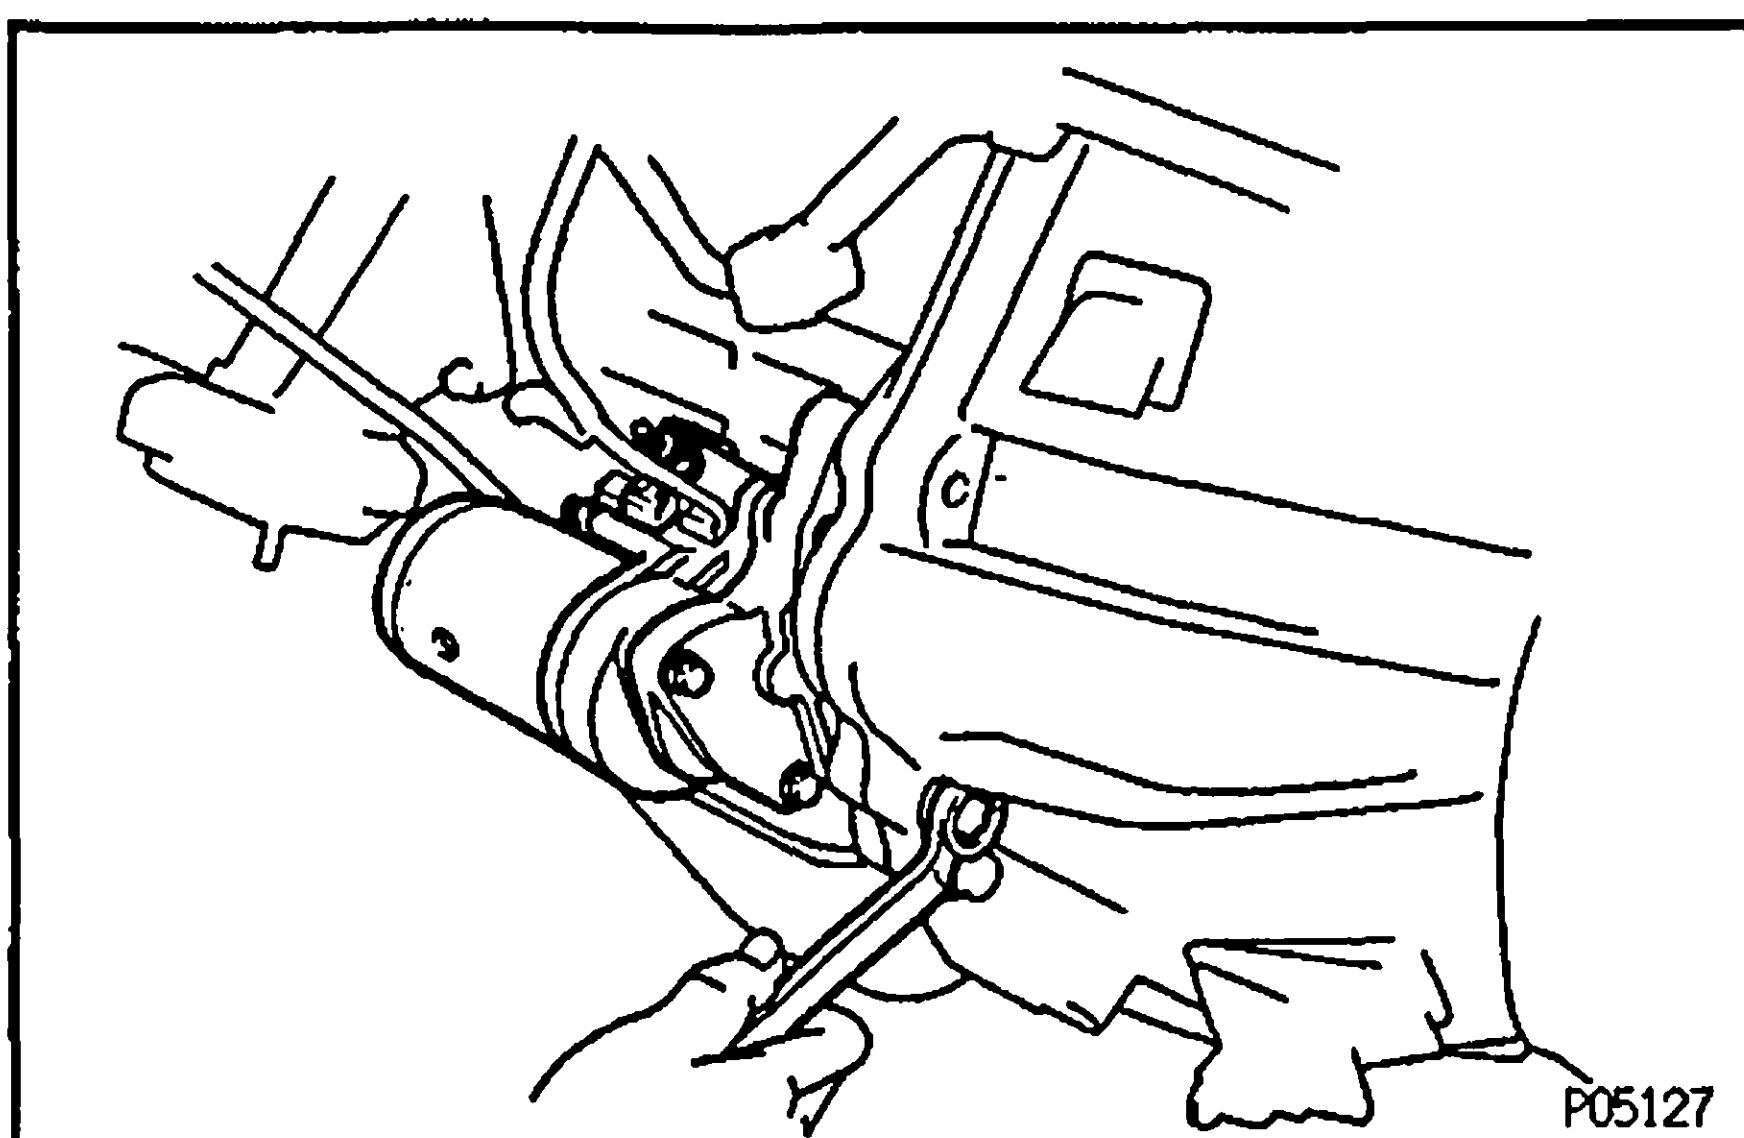

2. **REMOVE STARTER**
 - (a) Disconnect the starter connector.
 - (b) Remove the nut, and disconnect the starter wire.
 - (c) Remove the bolt, nut and starter.

COMPONENTS


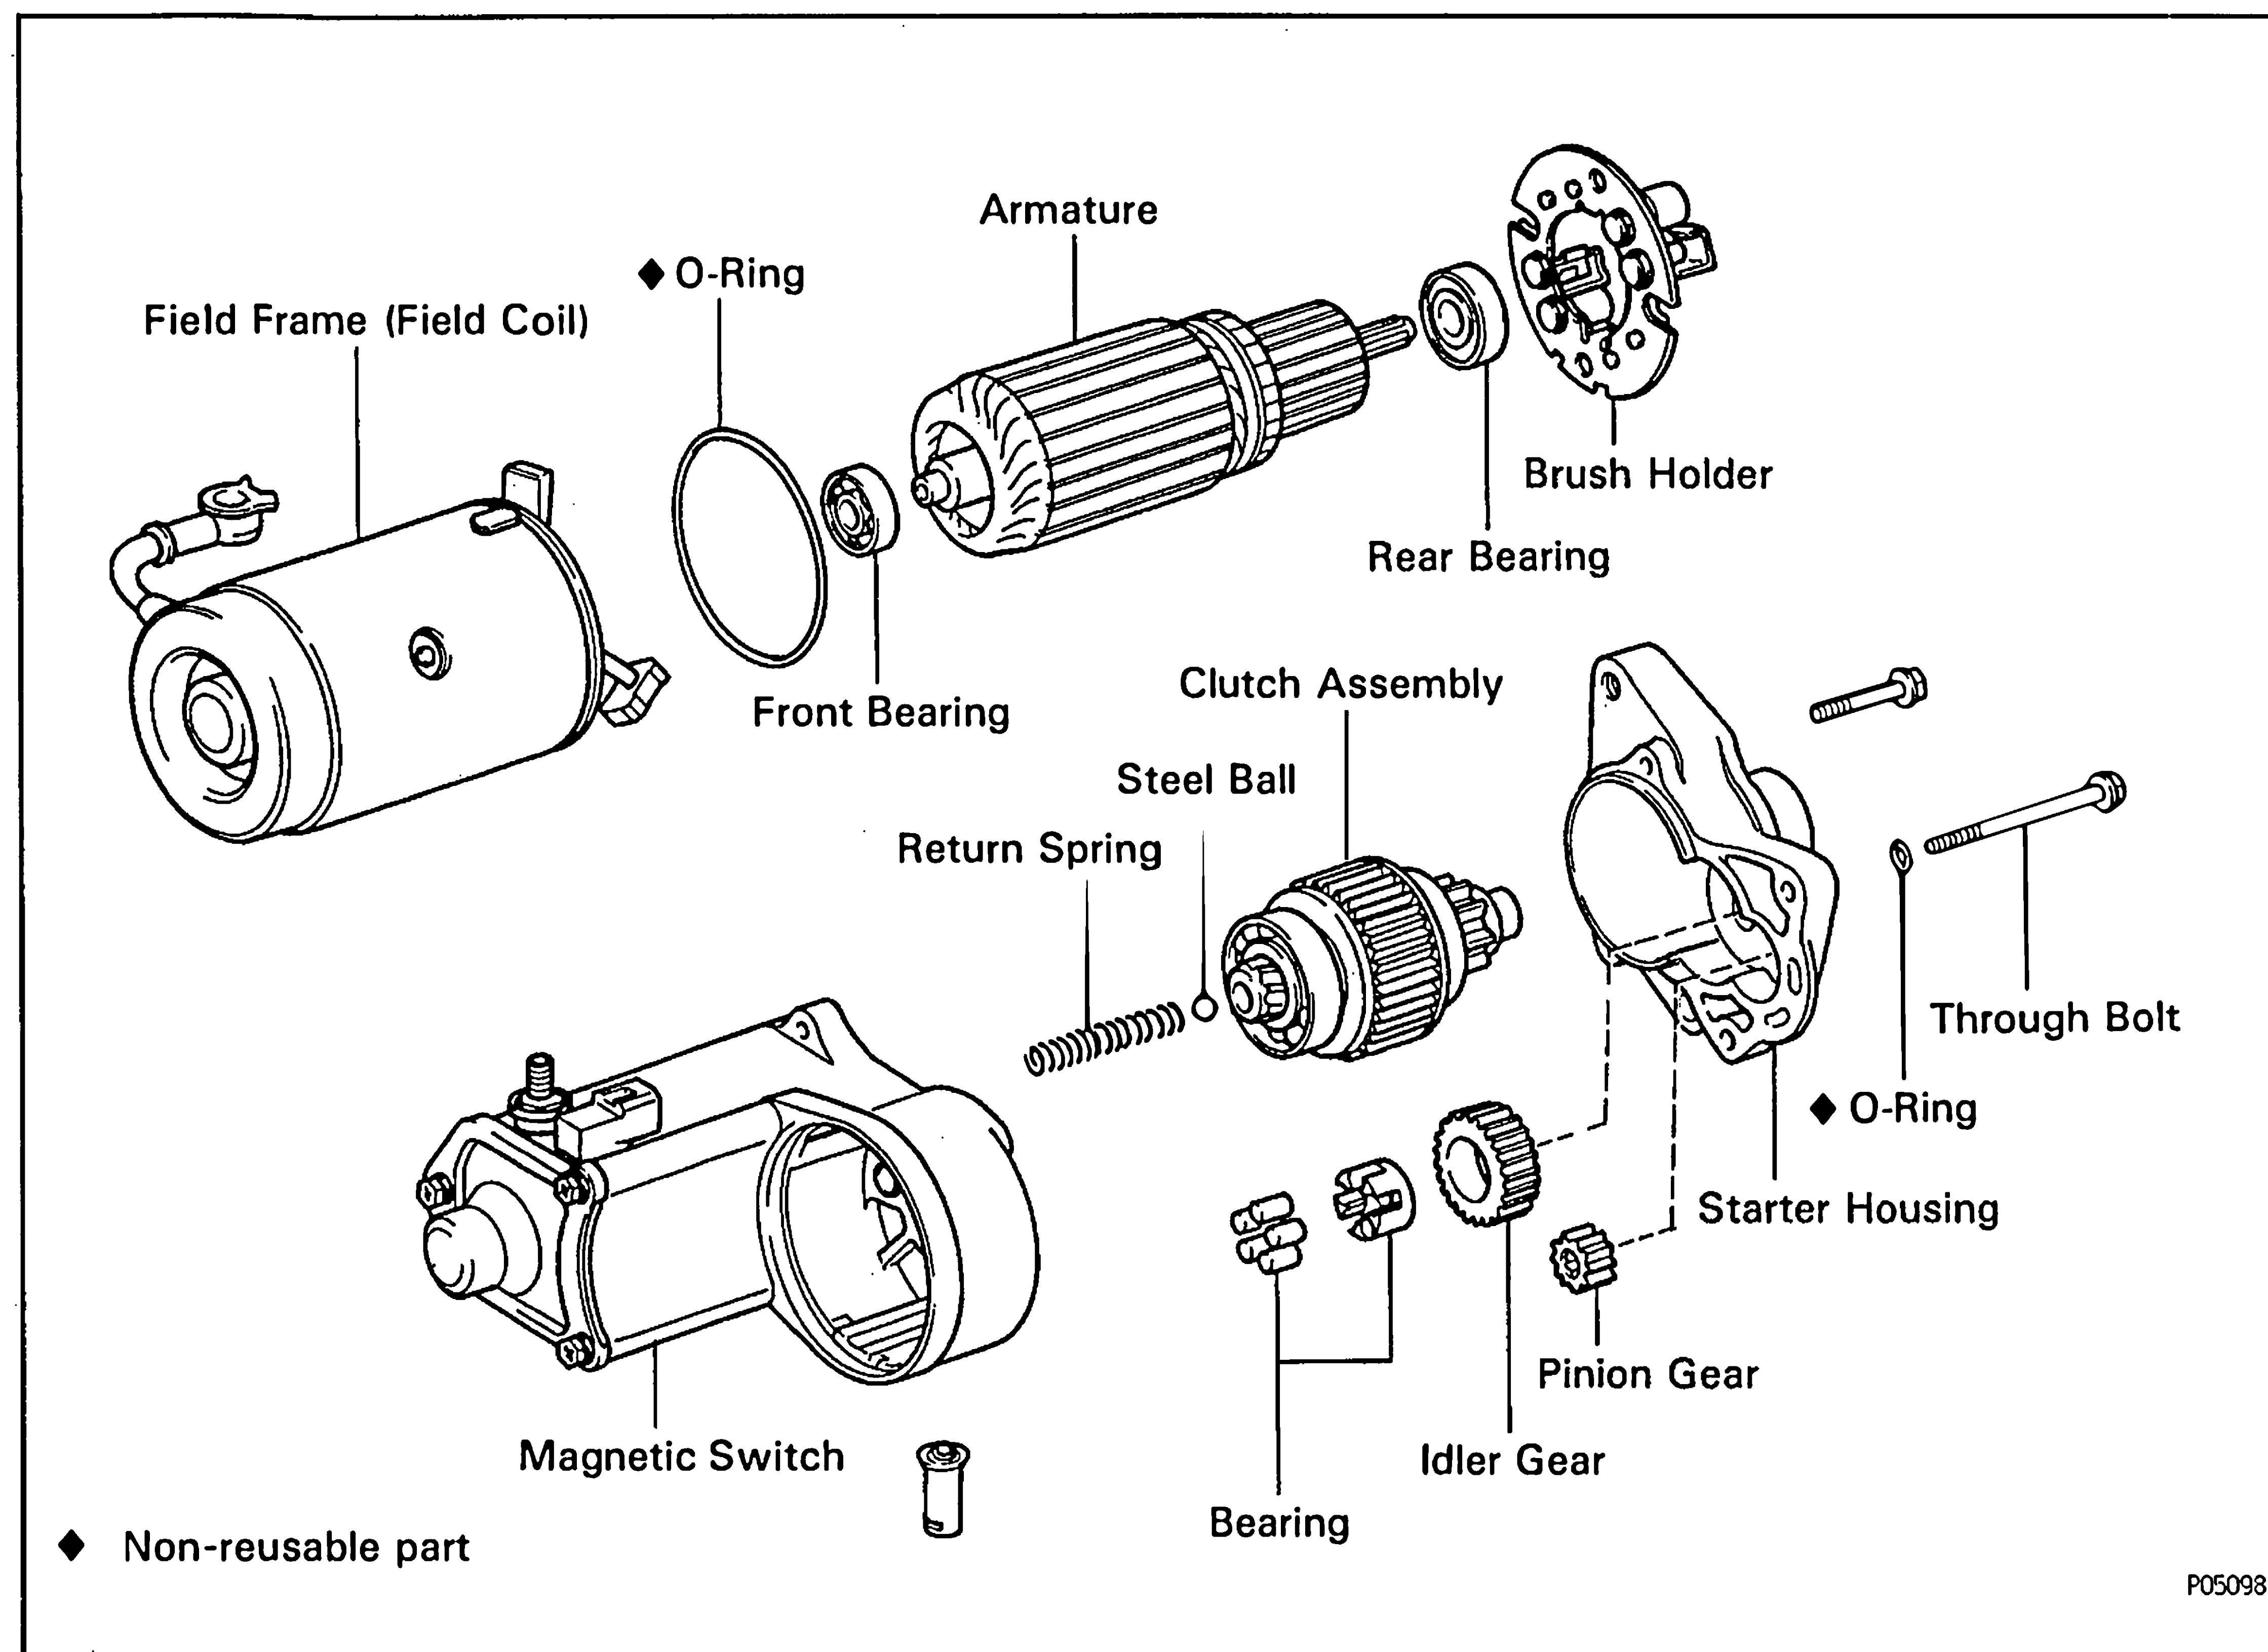



ST00X-03

STARTER DISASSEMBLY

1. REMOVE FIELD FRAME AND ARMATURE


- Remove the nut, and disconnect the lead wire from the magnetic switch terminal.
- Remove the two through bolts and O-rings.
- Pull out the field frame with the armature from the magnetic switch assembly.
- Remove the O-ring from the field frame.

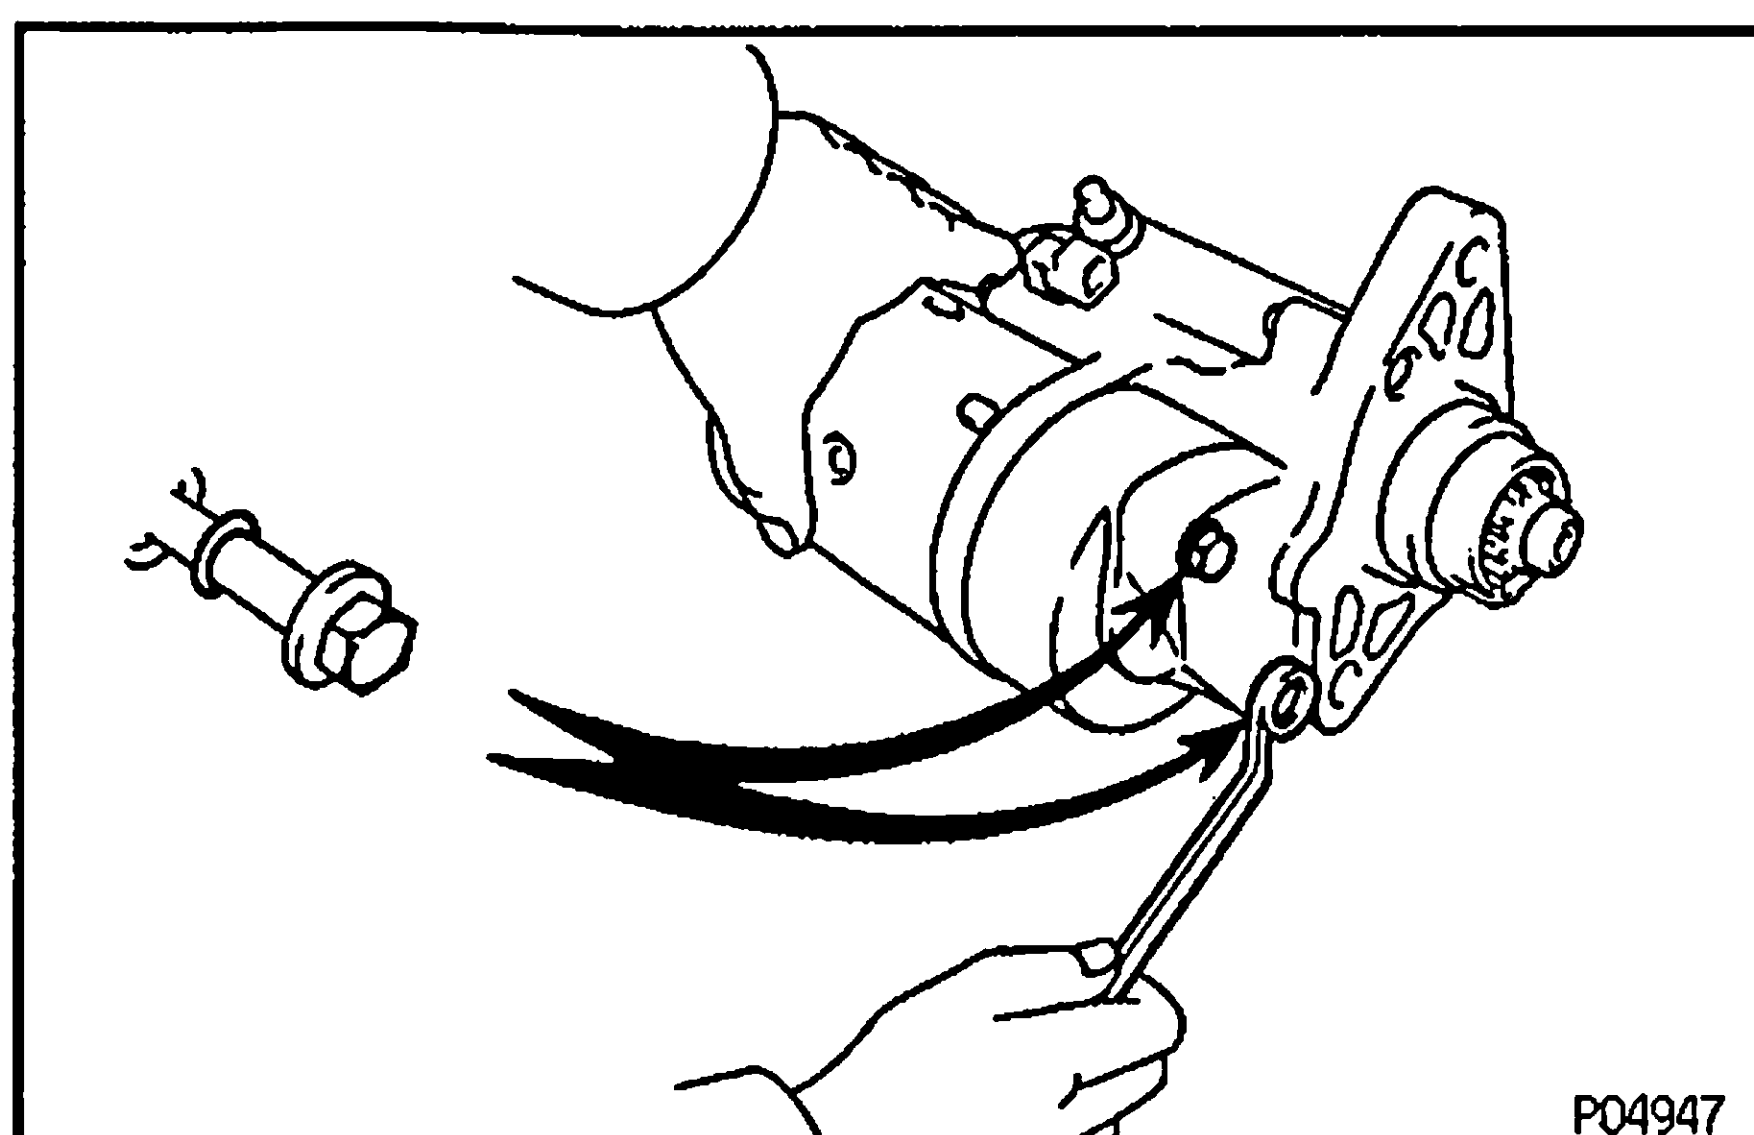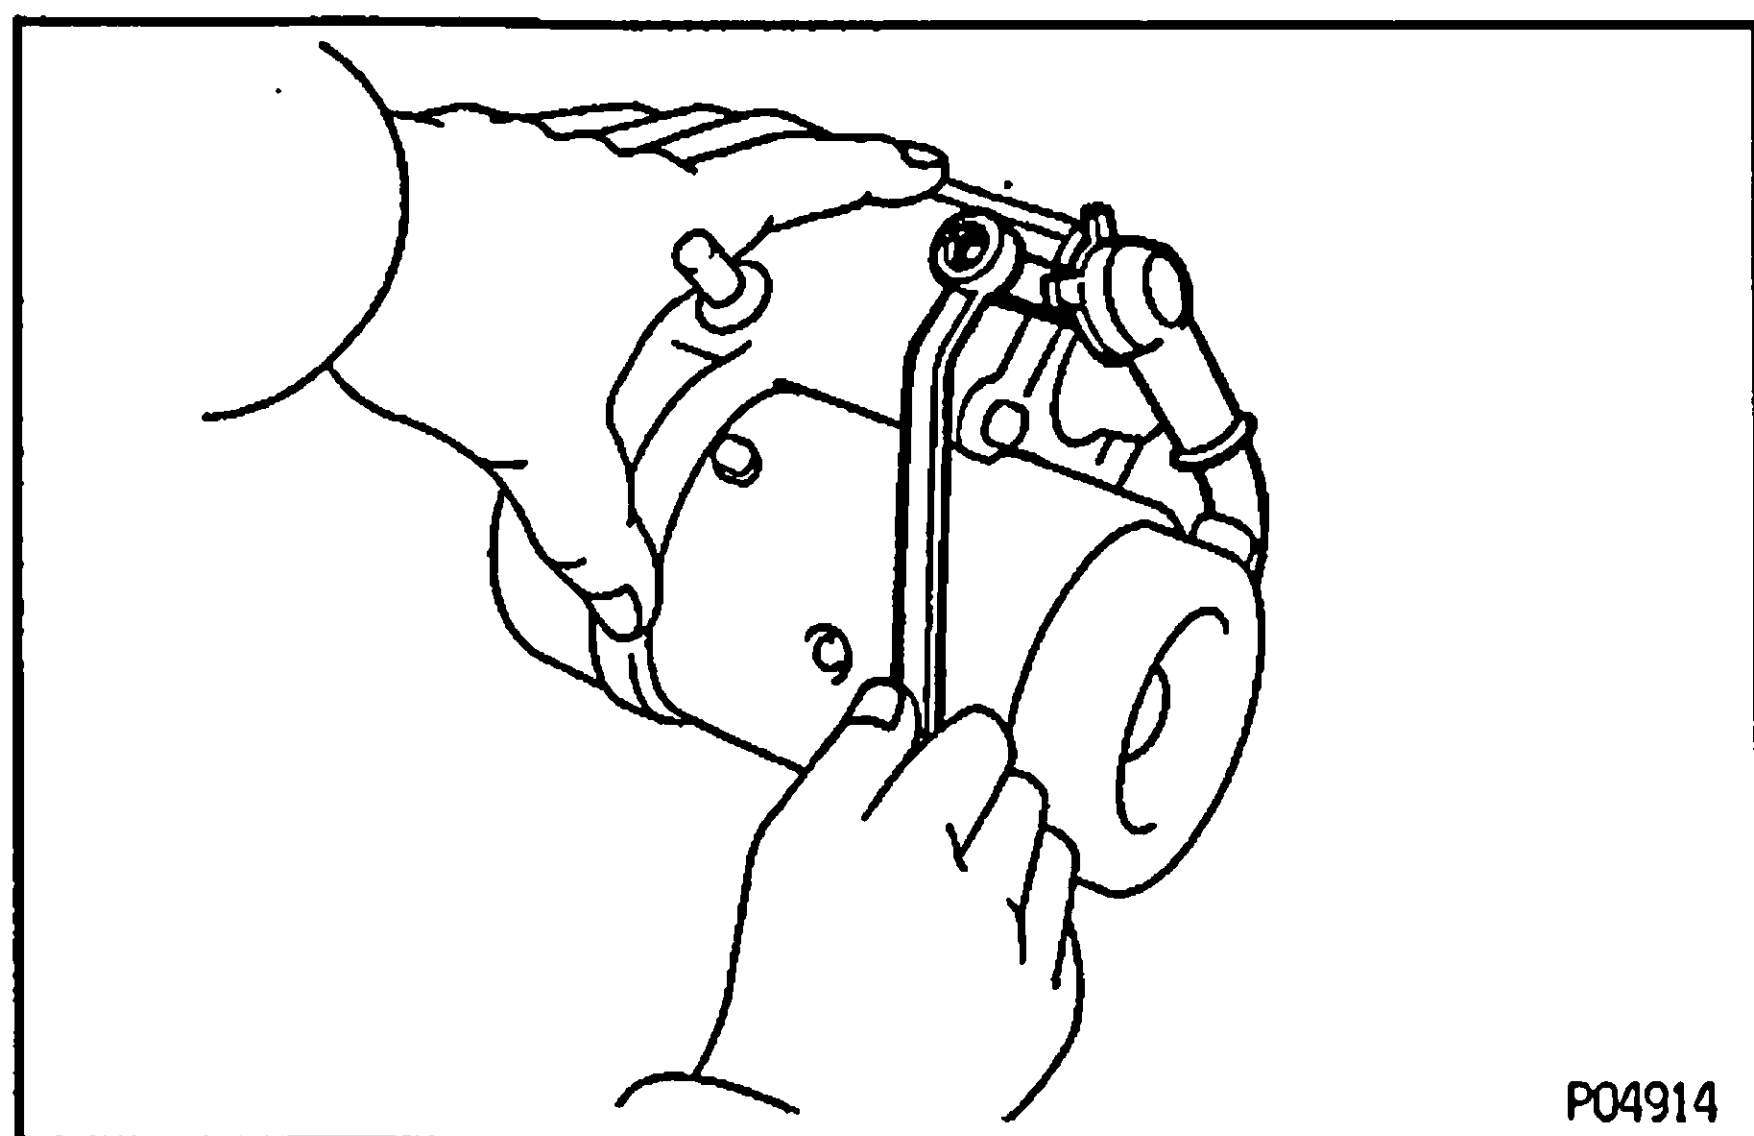

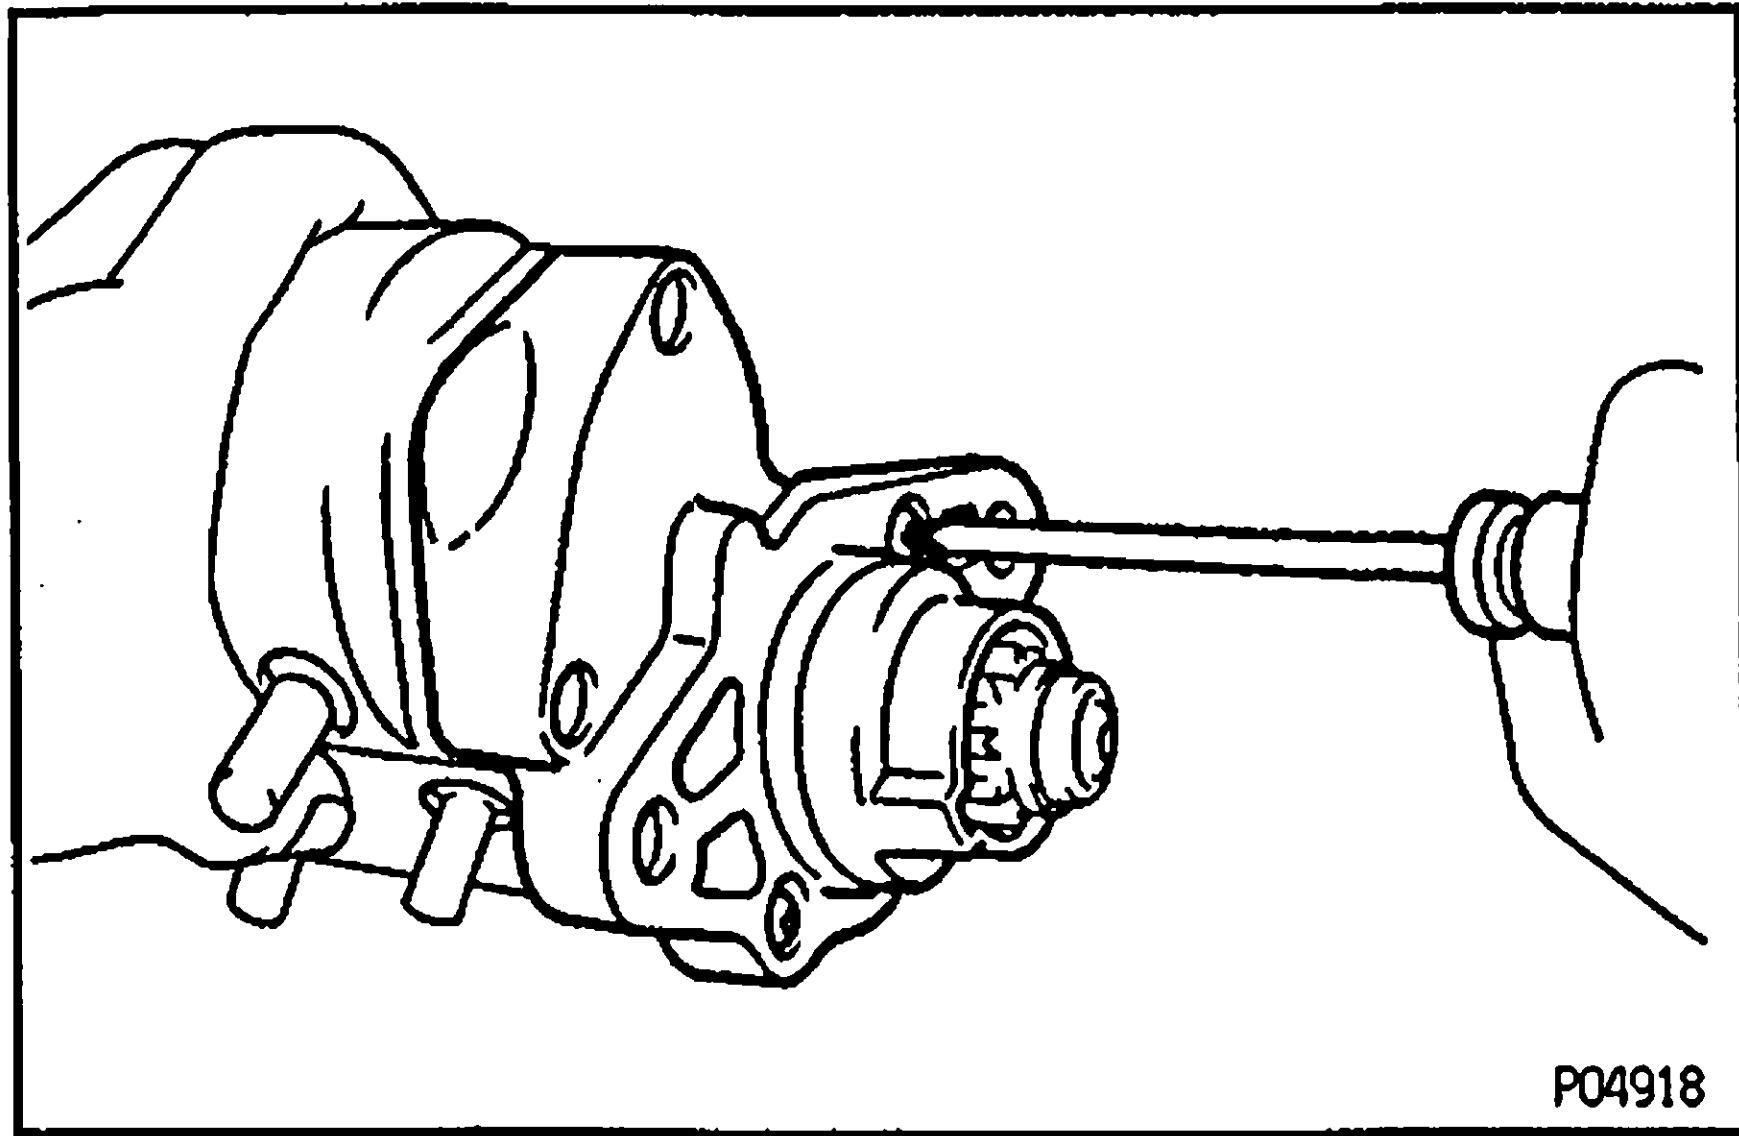

2. REMOVE STARTER HOUSING, CLUTCH ASSEMBLY AND GEARS


(a) Remove the two screws.

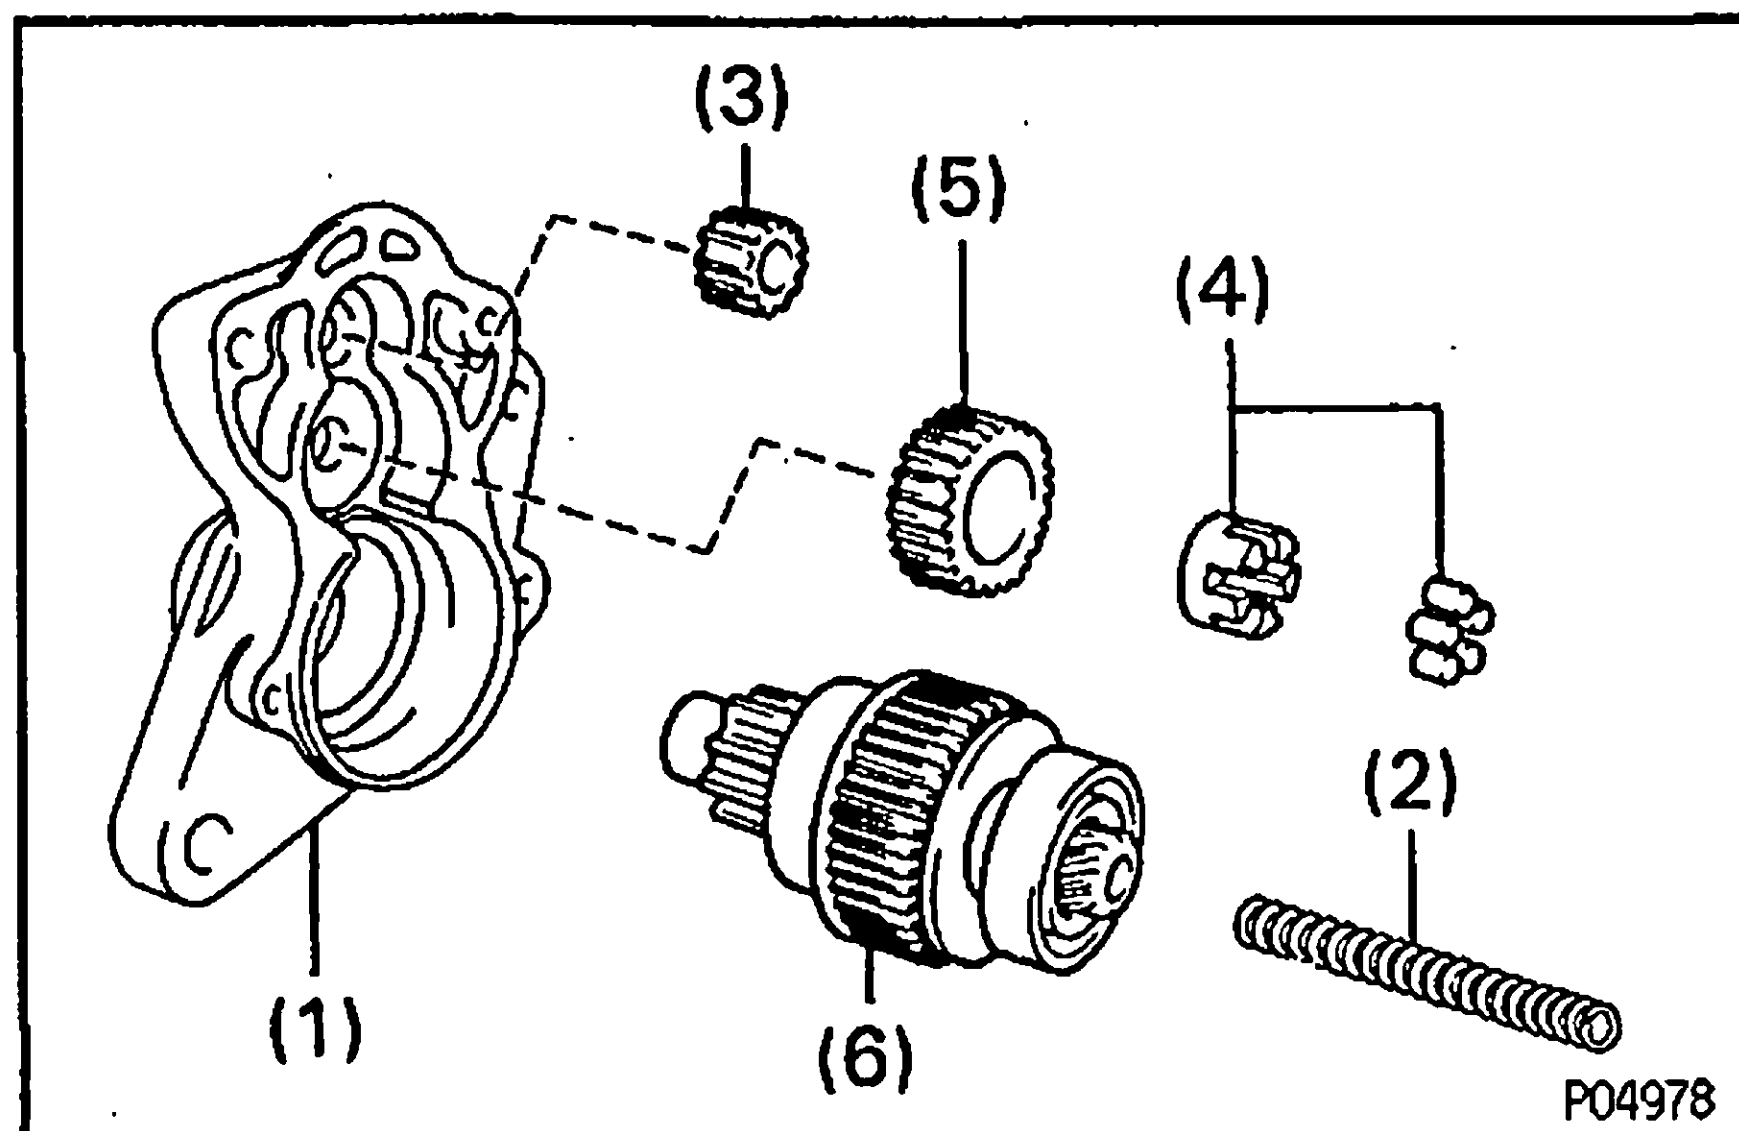

(b) Remove the following parts from the magnetic switch assembly:


- (1) Starter housing
- (2) Return spring
- (3) Pinion gear
- (4) Bearing
- (5) Idler gear
- (6) Clutch assembly

ST

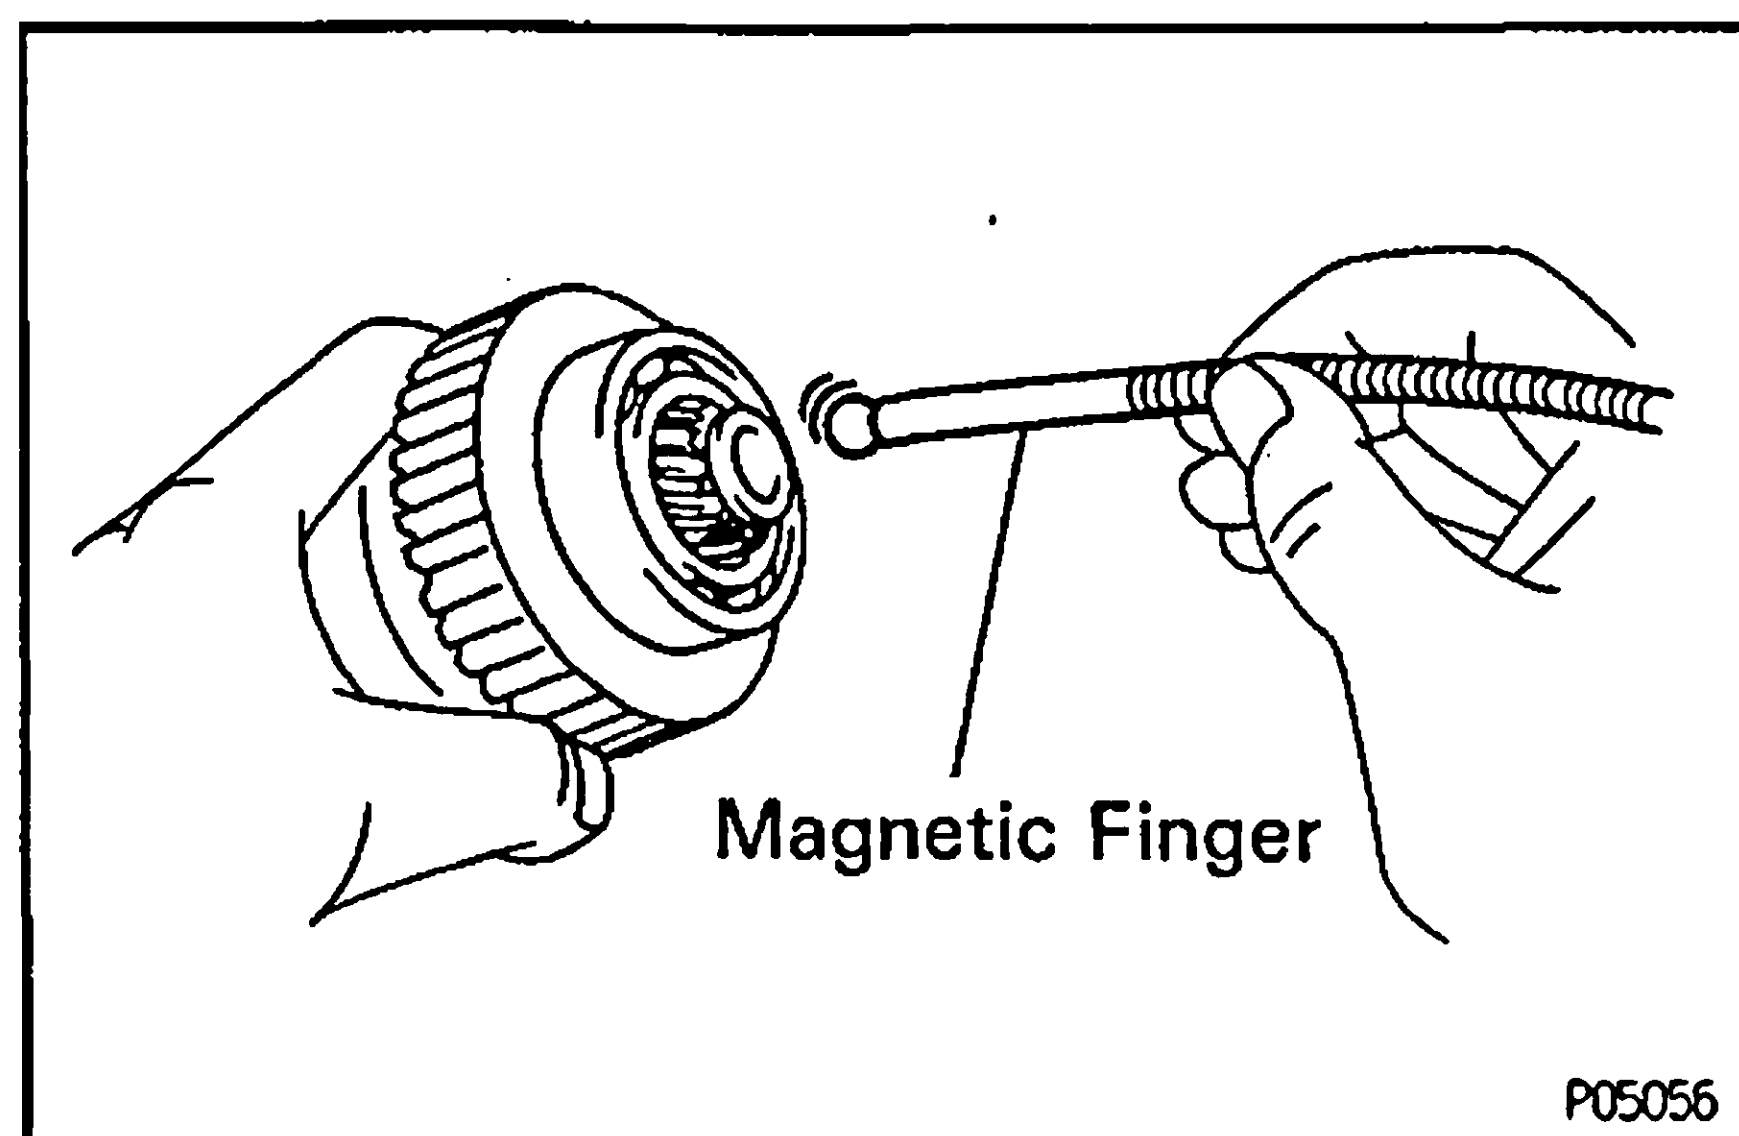


3. REMOVE STEEL BALL

Using a magnetic finger, remove the steel ball from the clutch shaft hole.

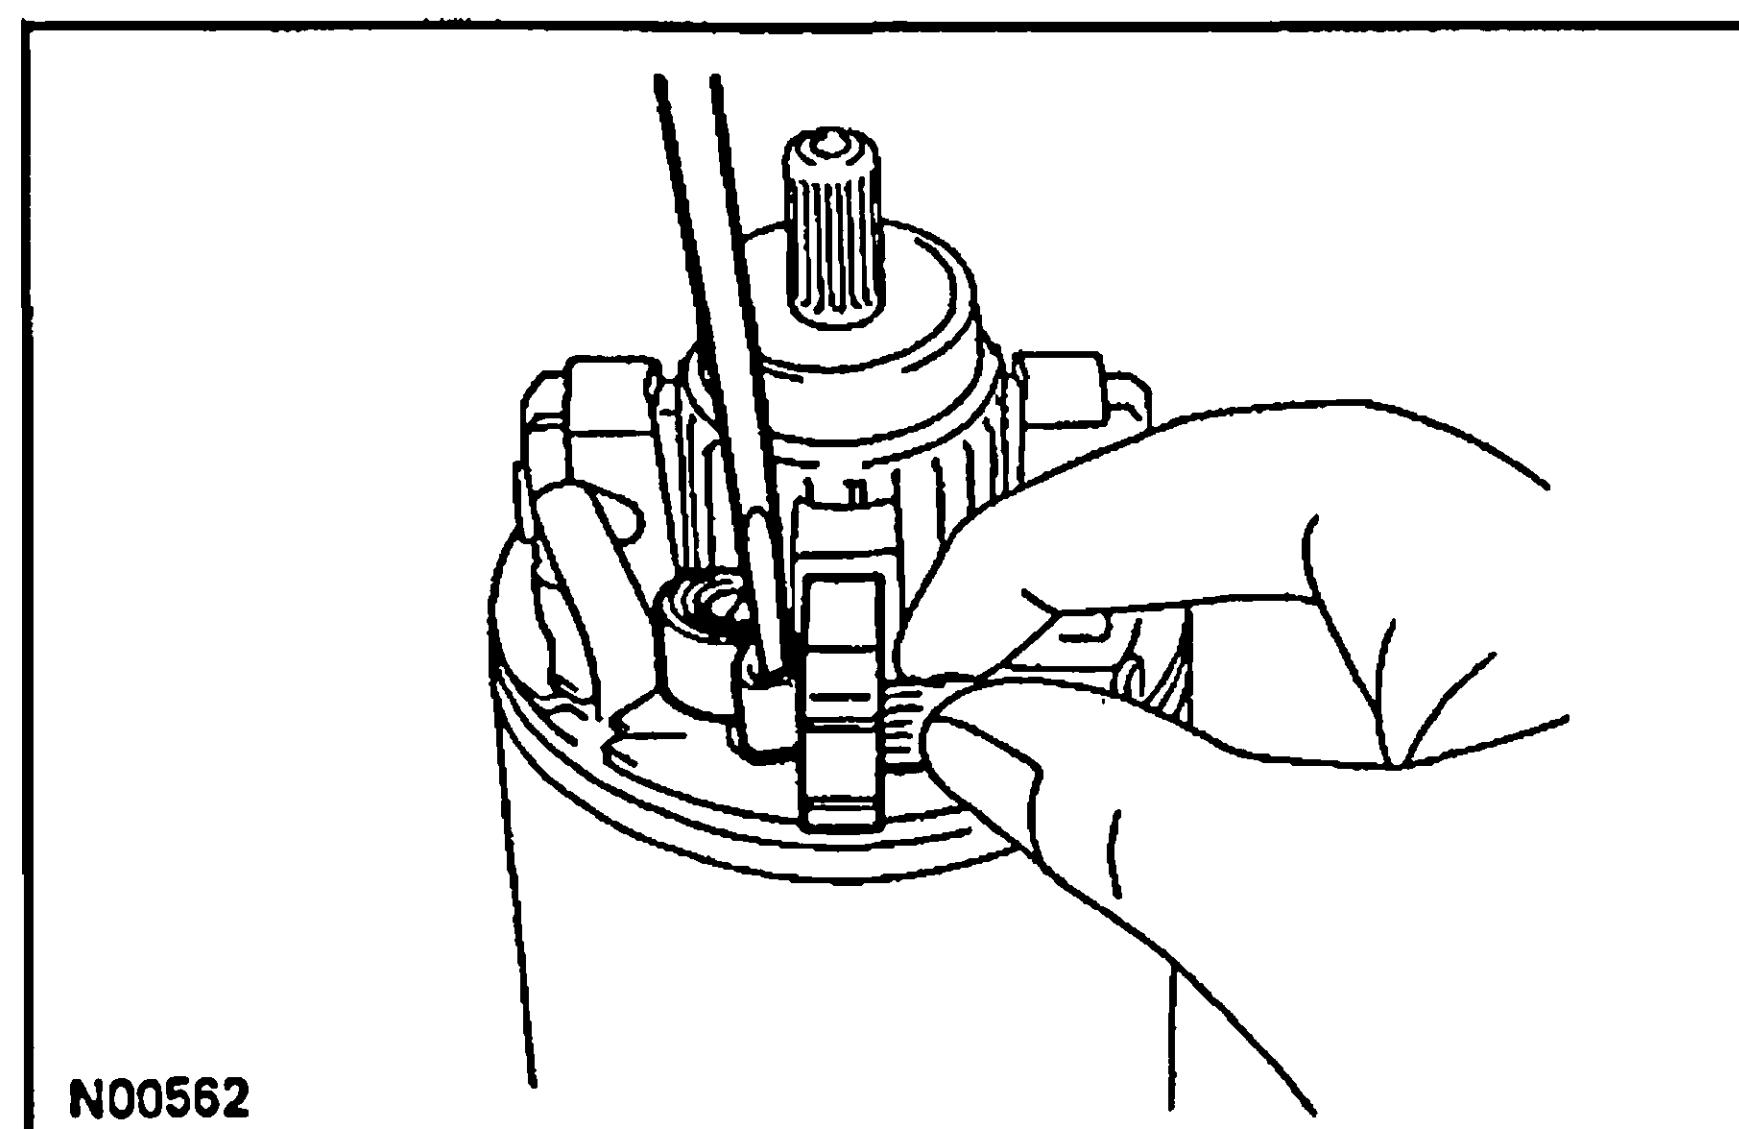

4. REMOVE BRUSH HOLDER

Using a screwdriver, hold the spring back and disconnect the brush from the brush holder. Disconnect the four brushes and remove the brush holder.

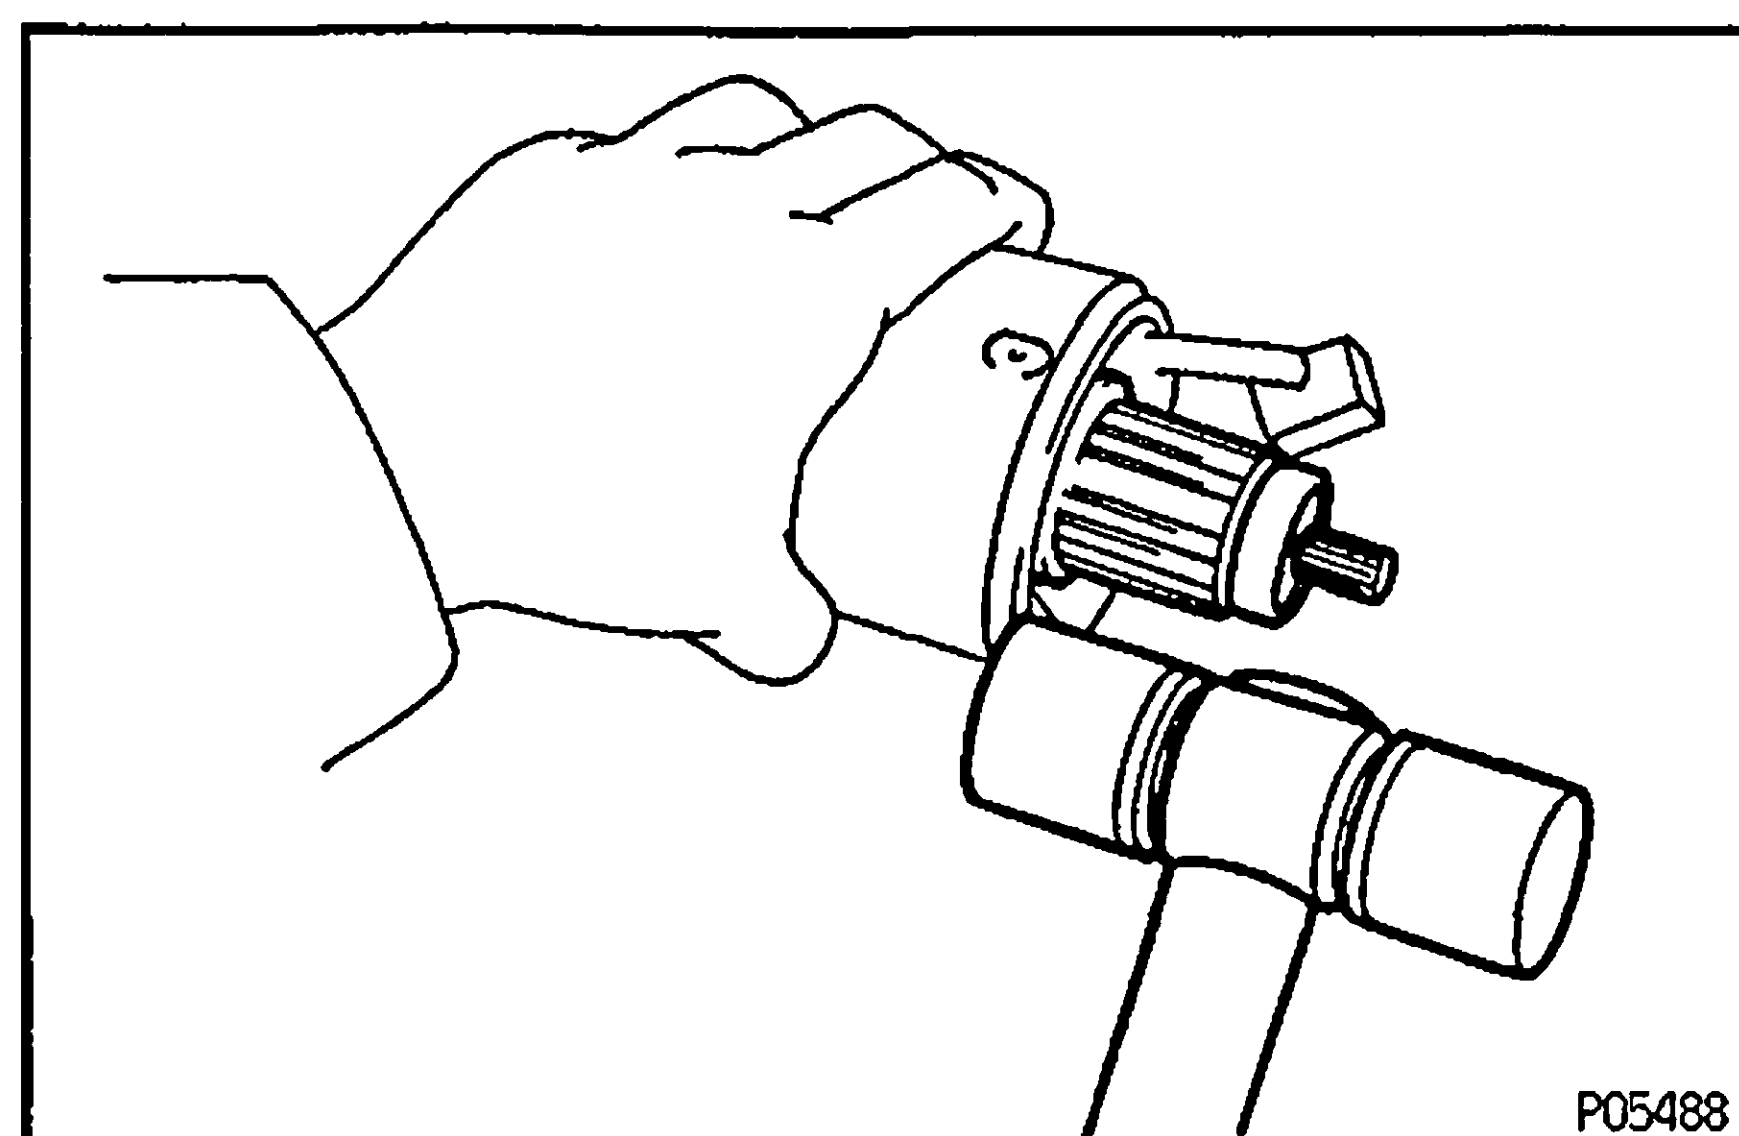


5. REMOVE ARMATURE FROM FIELD FRAME

Using a plastic hammer, tap the frame end to remove the armature from the field frame.

STARTER INSPECTION AND REPAIR**Armature Coil****1. INSPECT COMMUTATOR FOR OPEN CIRCUIT**

Using an ohmmeter, check that there is continuity between the segments of the commutator.

If there is no continuity between any segment, replace the armature.

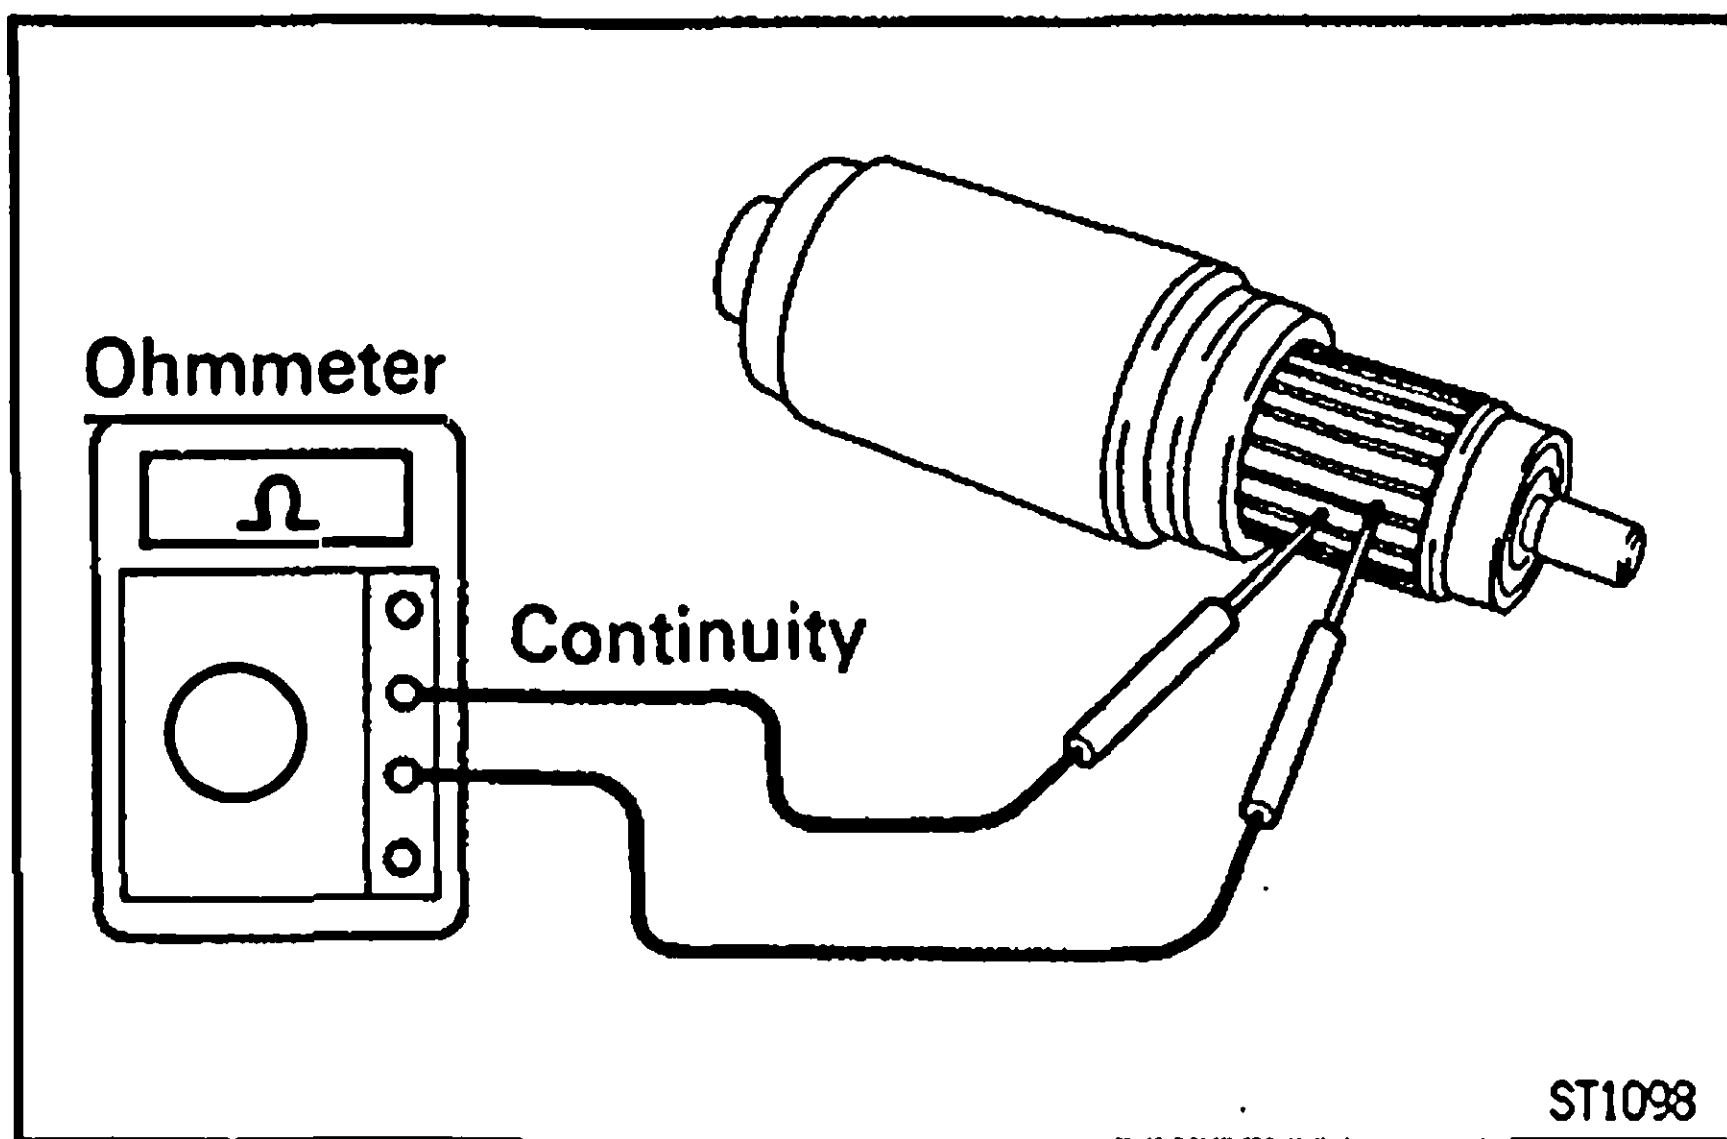


ST1098

2. INSPECT COMMUTATOR FOR GROUND

Using an ohmmeter, check that there is no continuity between the commutator and armature coil core.


If there is continuity, replace the armature.

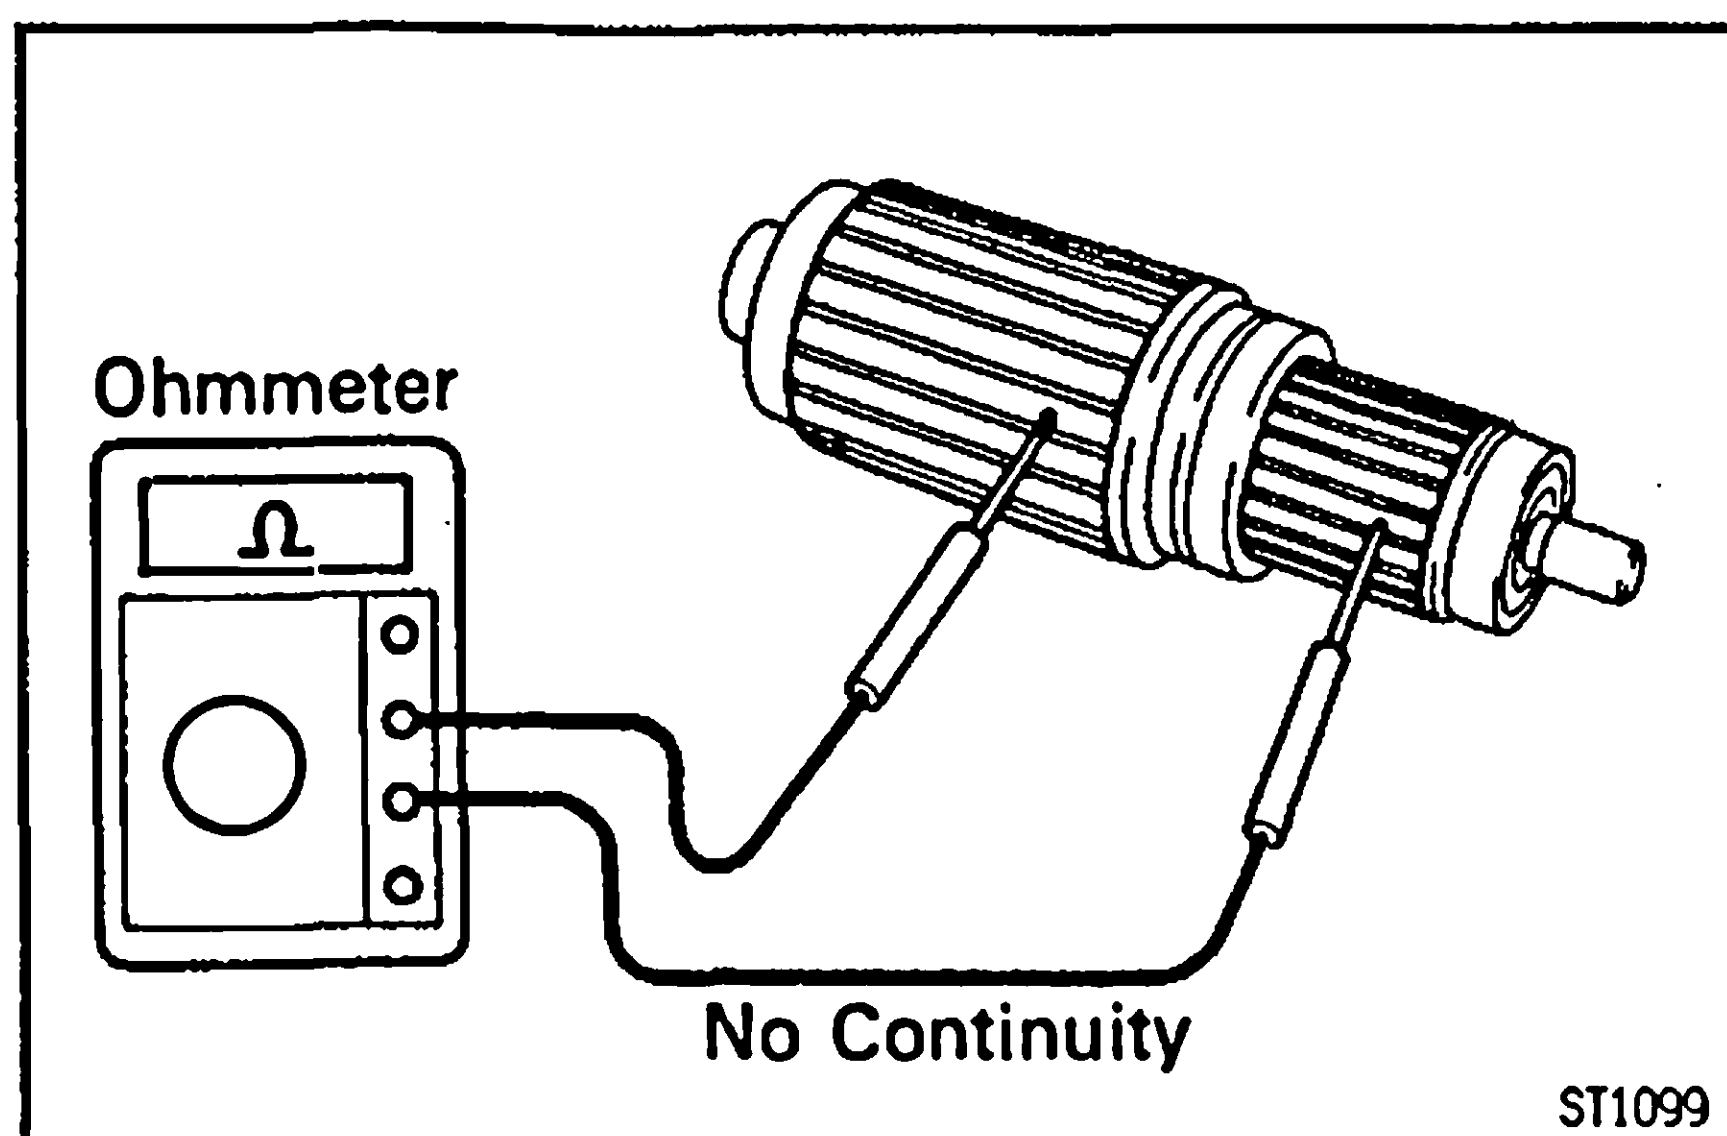

ST1099

Commutator**1. INSPECT COMMUTATOR FOR DIRTY AND BURNT SURFACES**

If the surface is dirty or burnt, correct it with sandpaper (No. 400) or on a lathe.

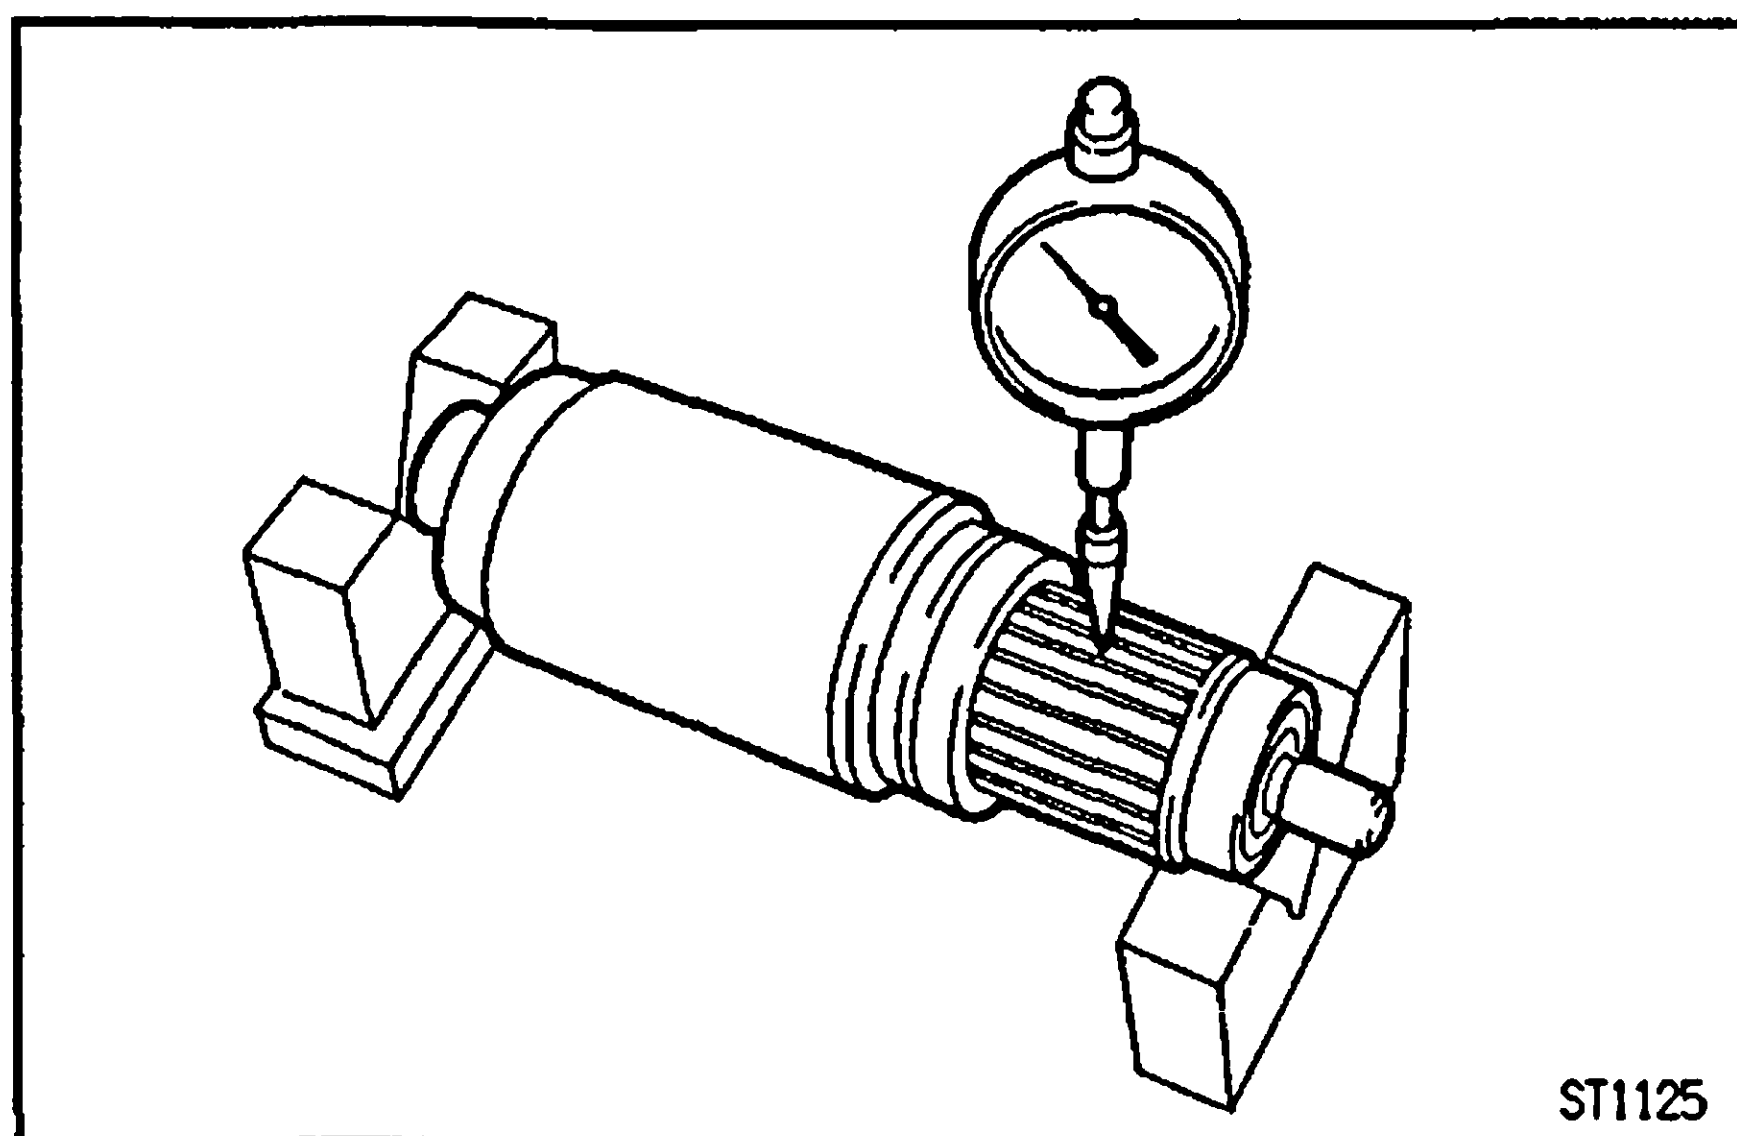

ST1125

2. INSPECT COMMUTATOR CIRCLE RUNOUT


(a) Place the commutator on V—blocks.

(b) Using a dial gauge, measure the circle runout.

Maximum circle runout:

0.05 mm (0.0020 in.)

If the circle runout is greater than maximum, correct it on a lathe.

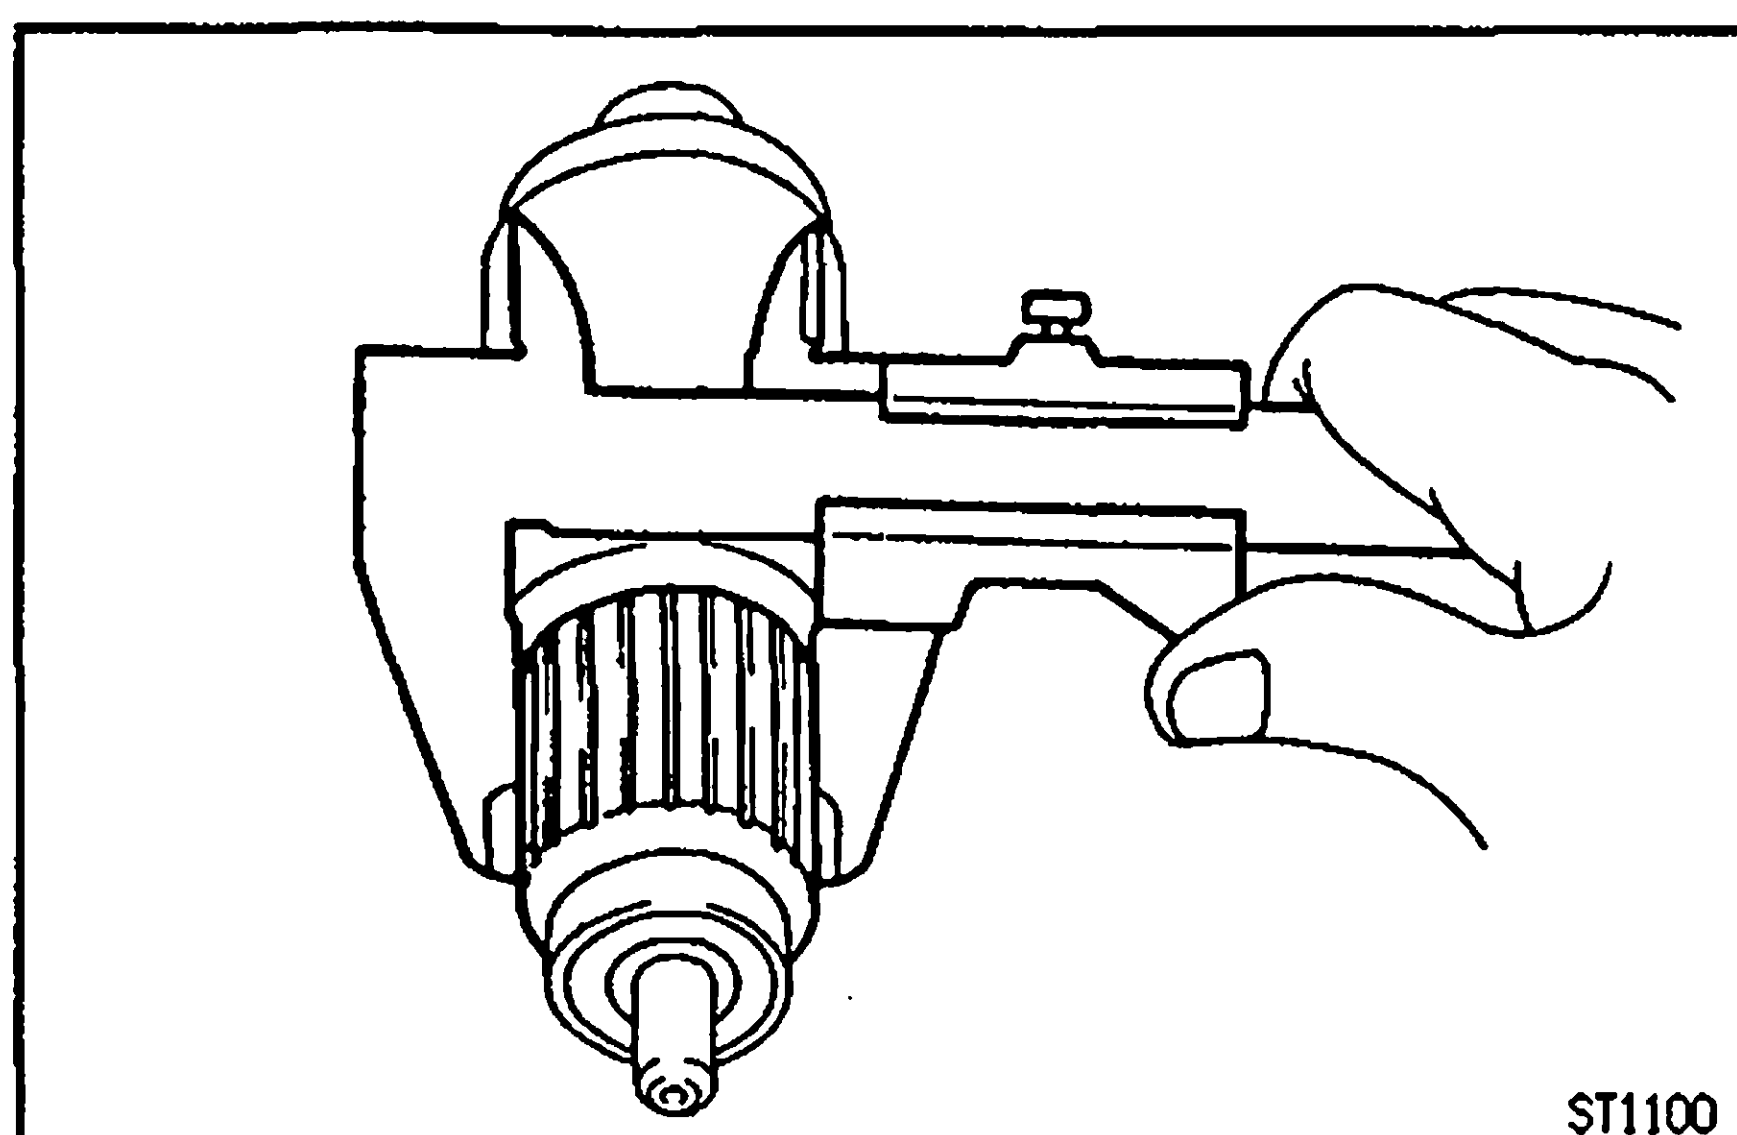

ST1100

3. INSPECT COMMUTATOR DIAMETER

Using a vernier caliper, measure the commutator diameter.


Standard diameter:

35 mm (1.38 in.)

Minimum diameter:

34 mm (1.34 in.)

If the diameter is less than minimum, replace the armature.

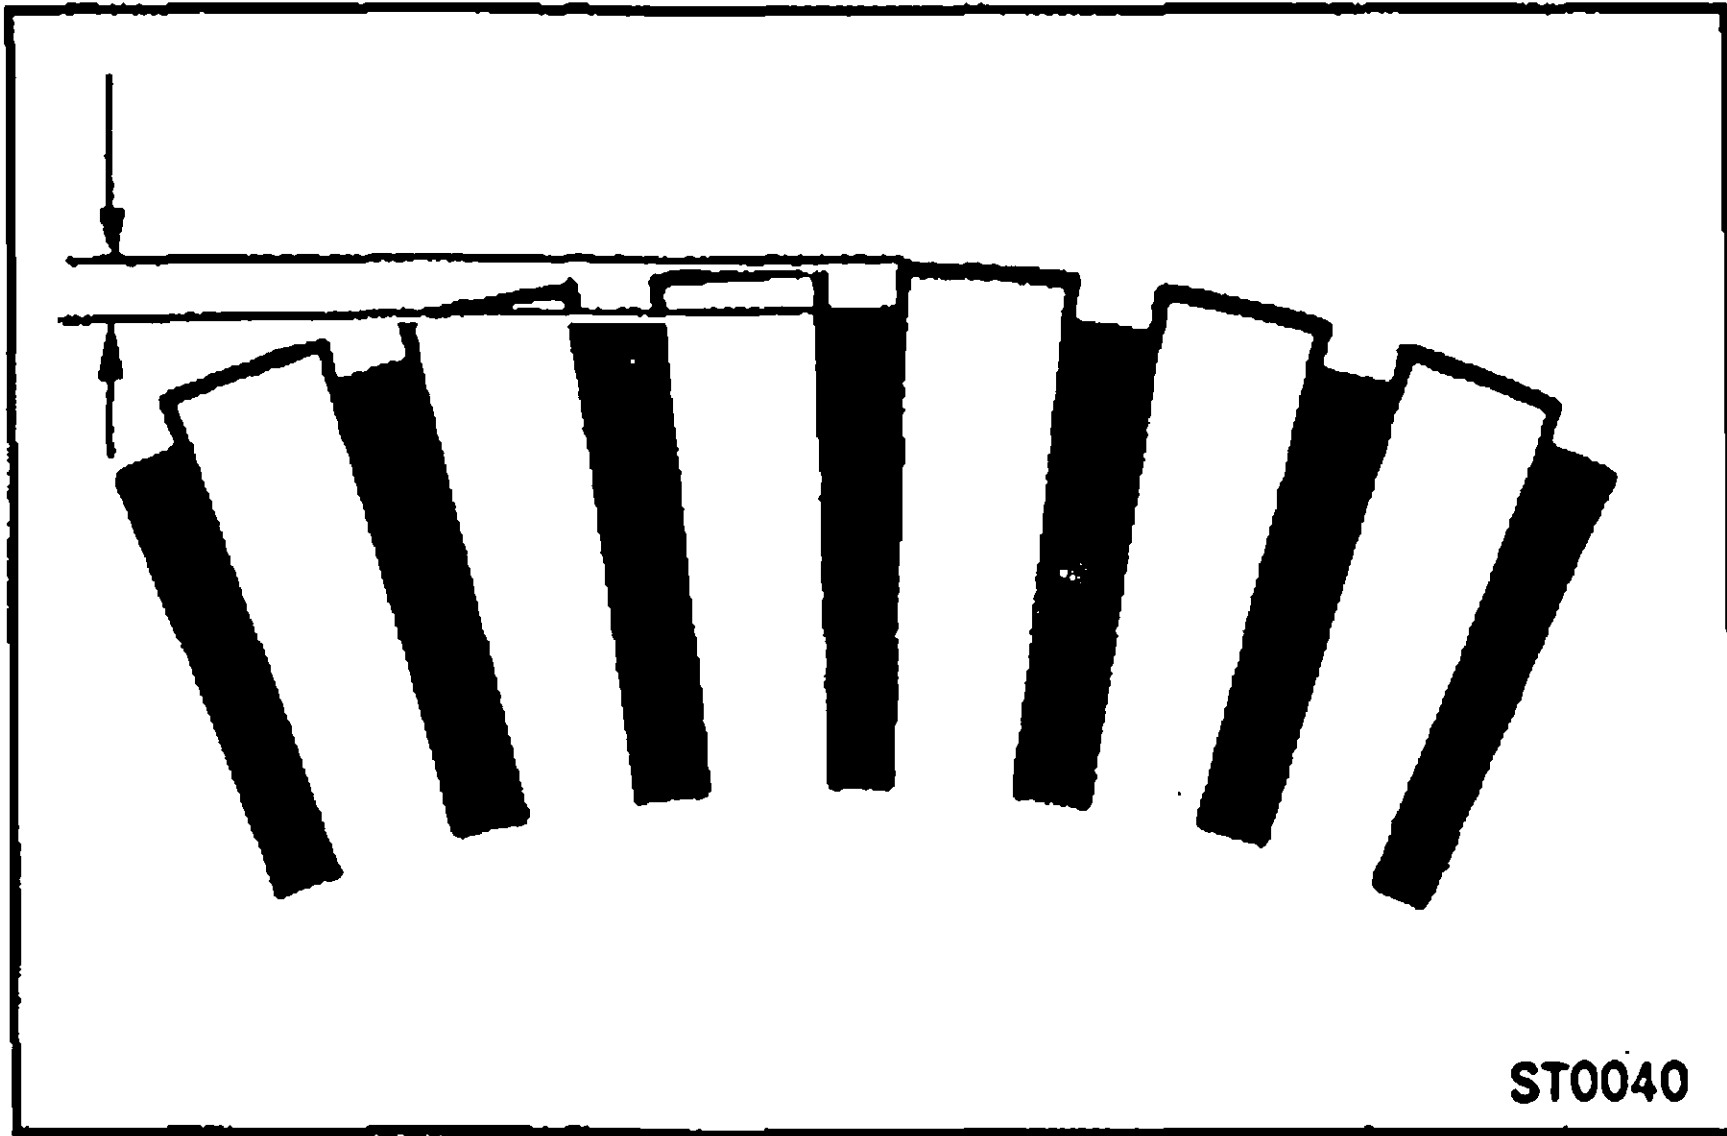

4. INSPECT UNDERCUT DEPTH

Check that the undercut depth is clean and free of foreign materials. Smooth out the edge.


Standard undercut depth:

0.7 – 0.9 mm (0.028 – 0.035 in.)

Minimum undercut depth:

0.2 mm (0.008 in.)

If the undercut depth is less than minimum, correct it with a hacksaw blade.

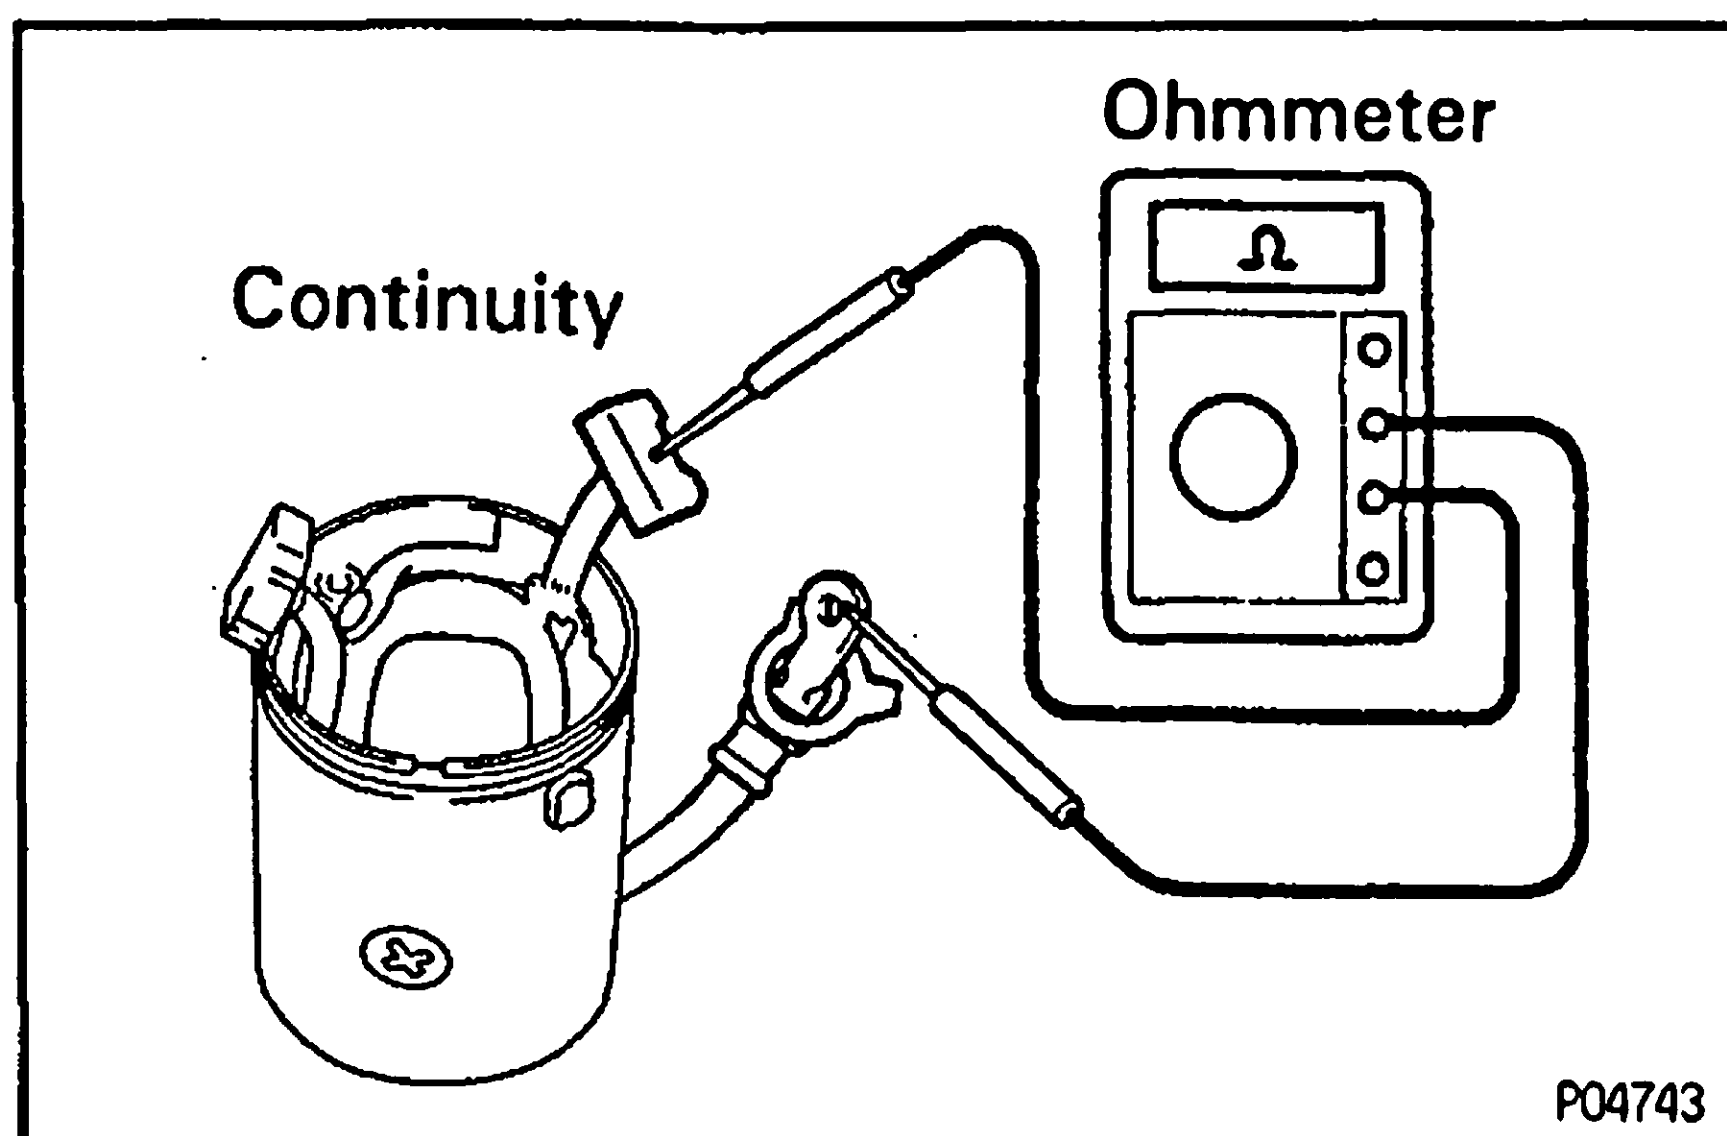


Field Frame (Field Coil)

1. INSPECT FIELD COIL FOR OPEN CIRCUIT

Using an ohmmeter, check that there is continuity between the lead wire and field coil brush lead.


If there is no continuity, replace the field frame.

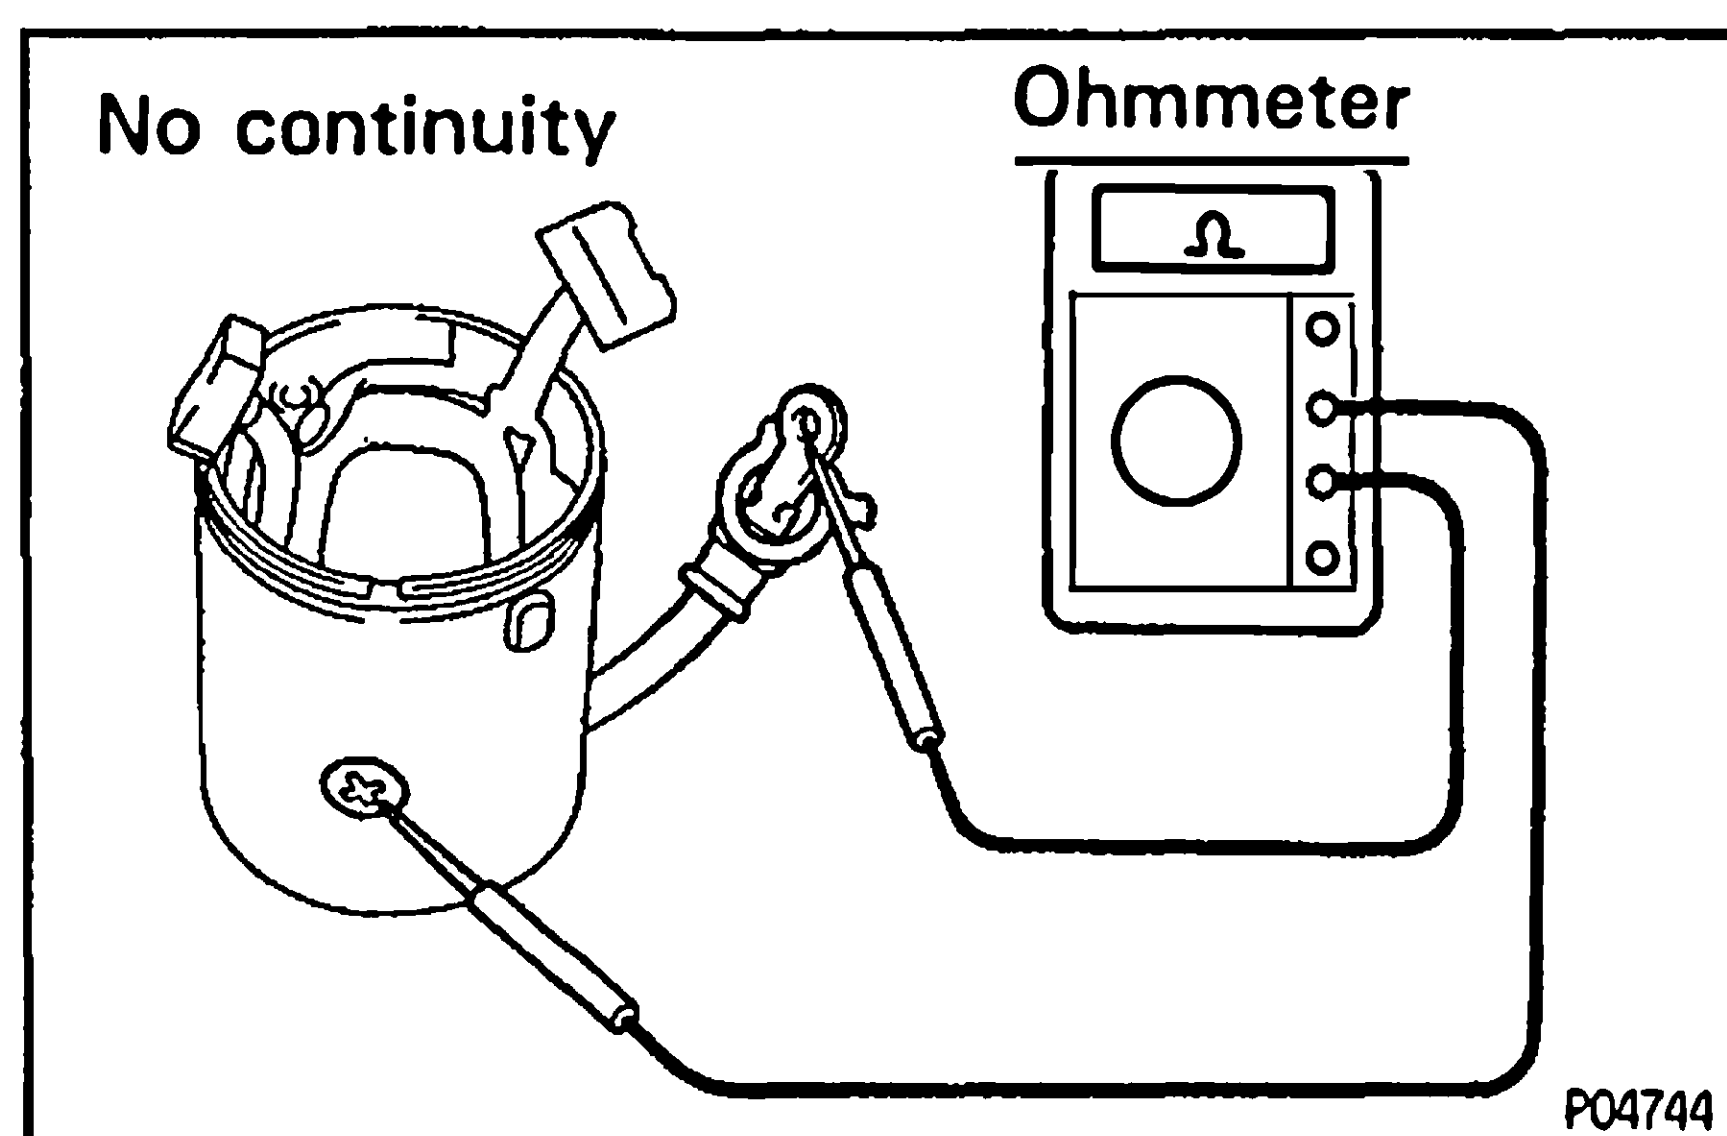

2. INSPECT FIELD COIL FOR GROUND

Using an ohmmeter, check that there is no continuity between the field coil end and field frame.

If there is continuity, repair or replace the field frame.

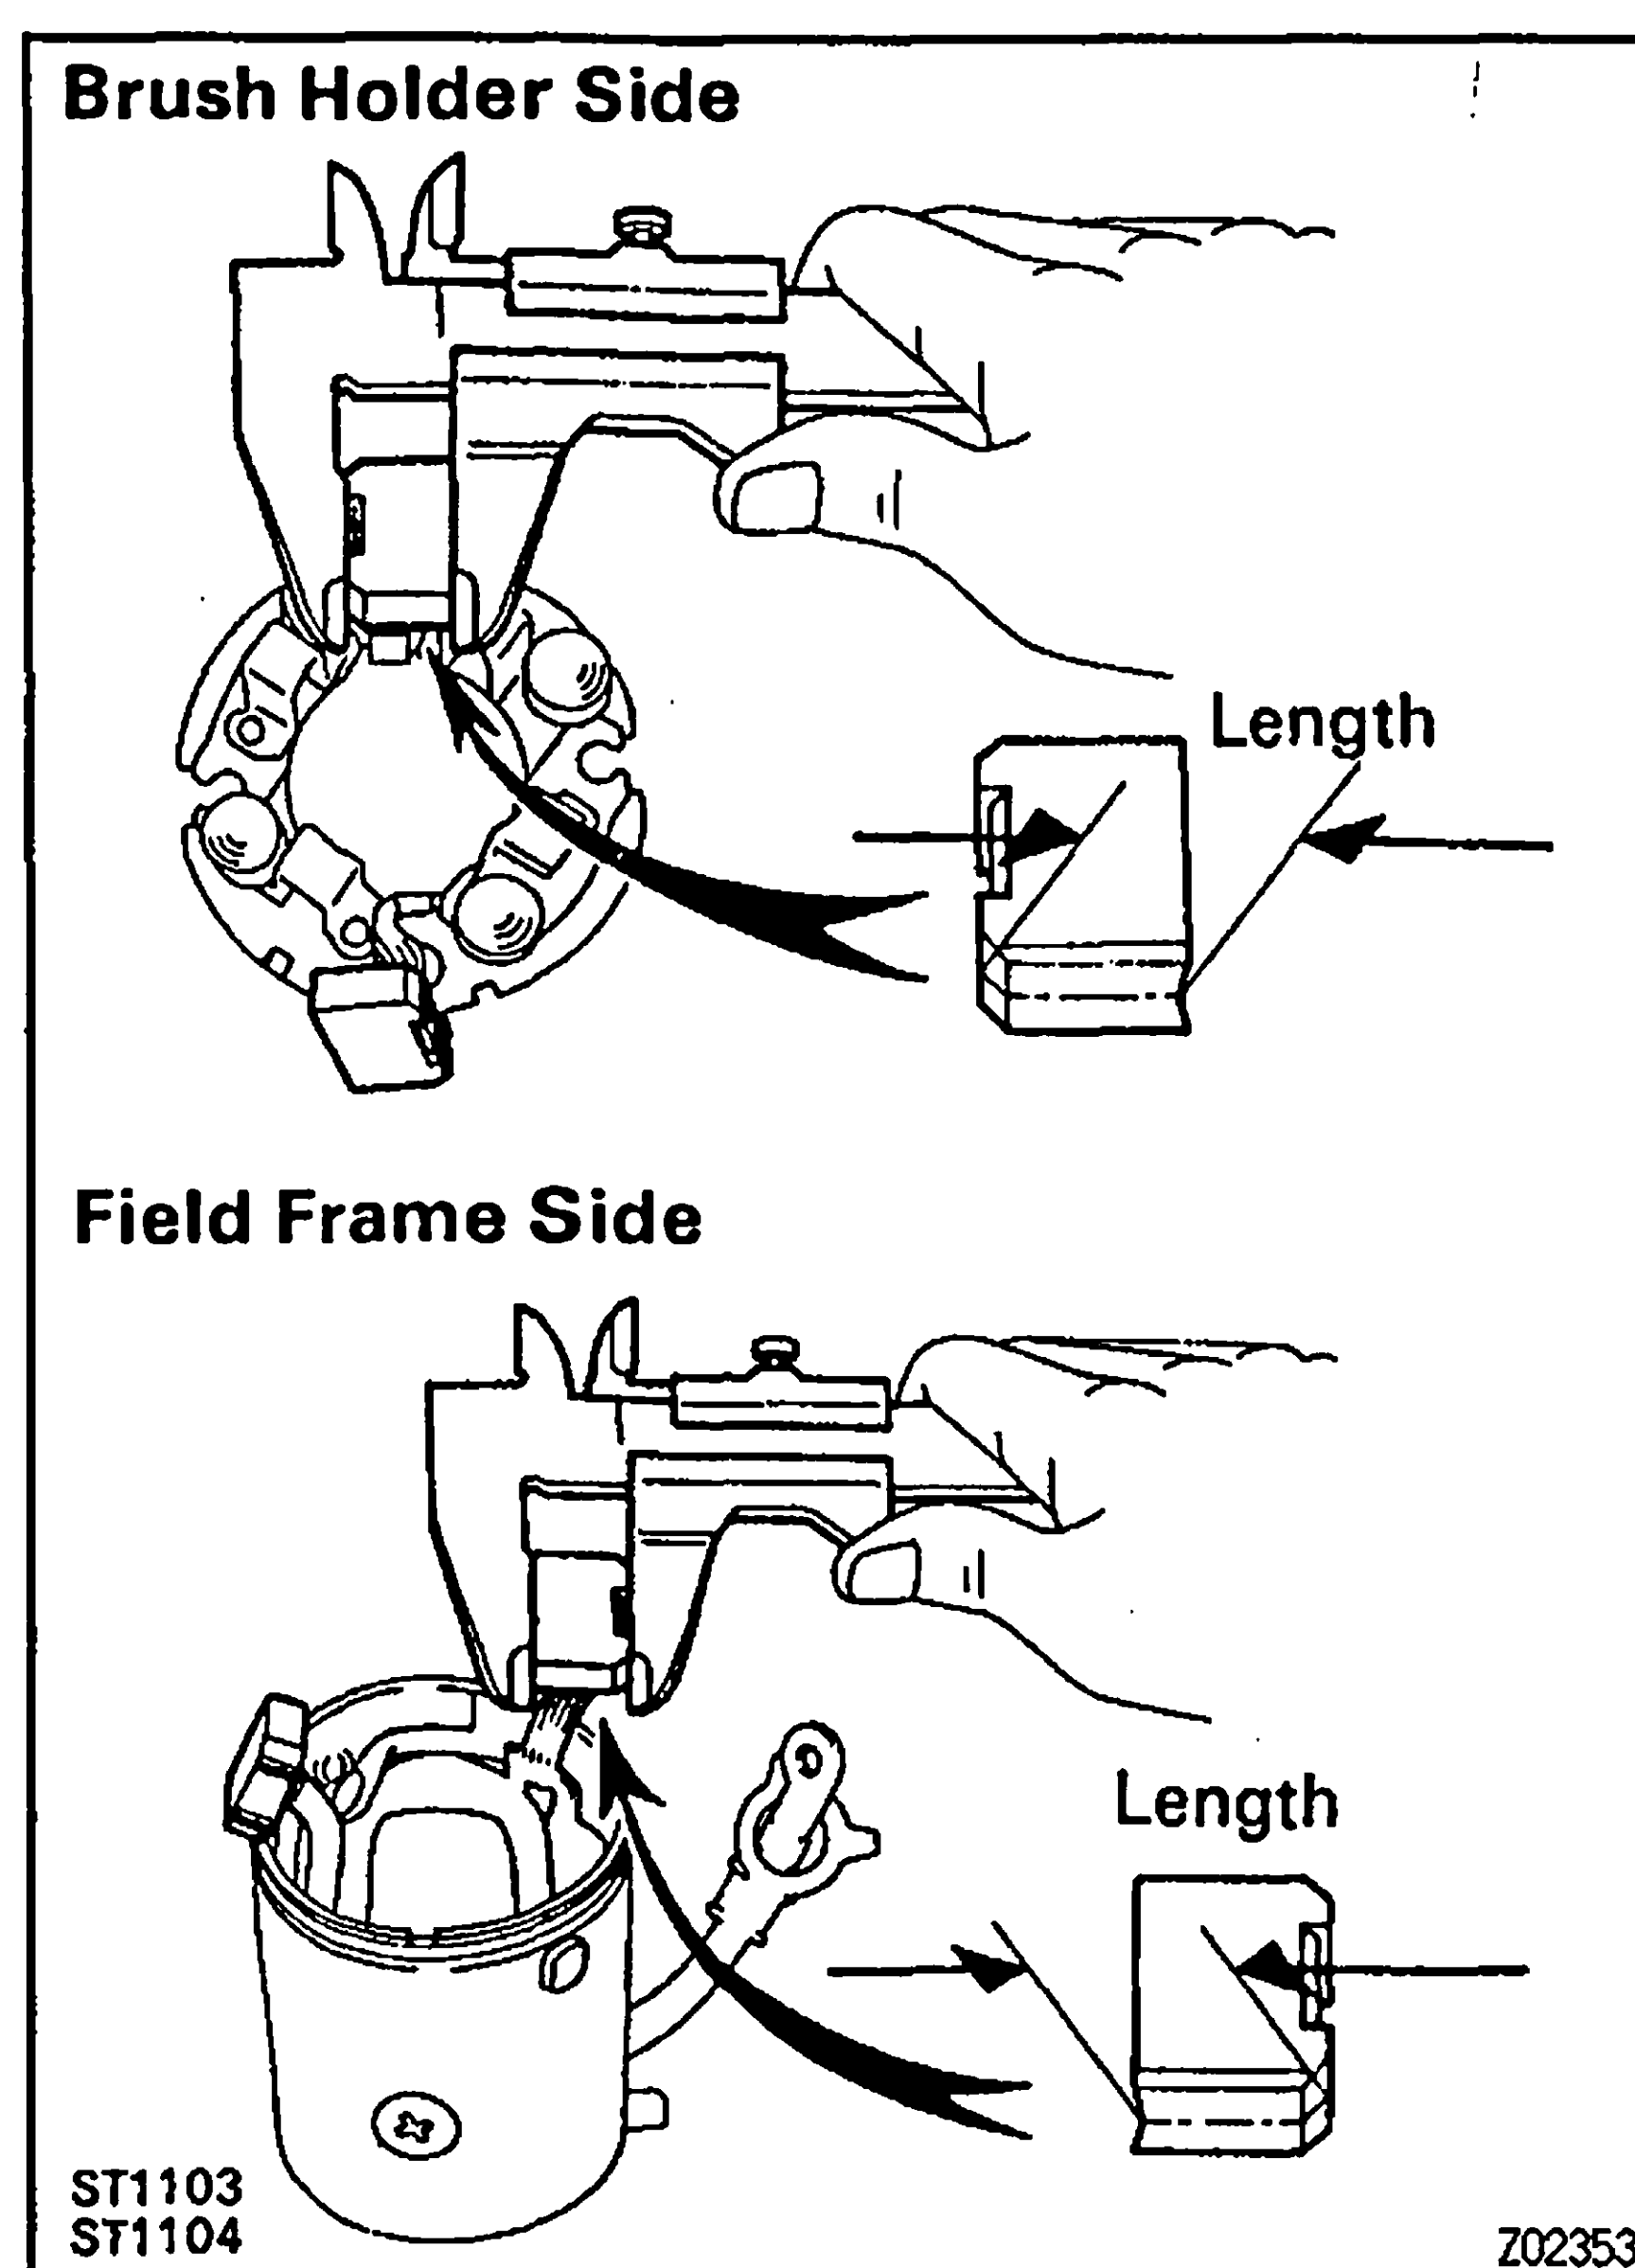

Brushes

INSPECT BRUSH LENGTH

Using a vernier caliper, measure the brush length.


Standard length:

15.0 – 15.5 mm (0.591 – 0.610 in.)

Minimum length:

9.5 mm (0.374 in.)

If the length is less than minimum, replace the brush holder and field frame.

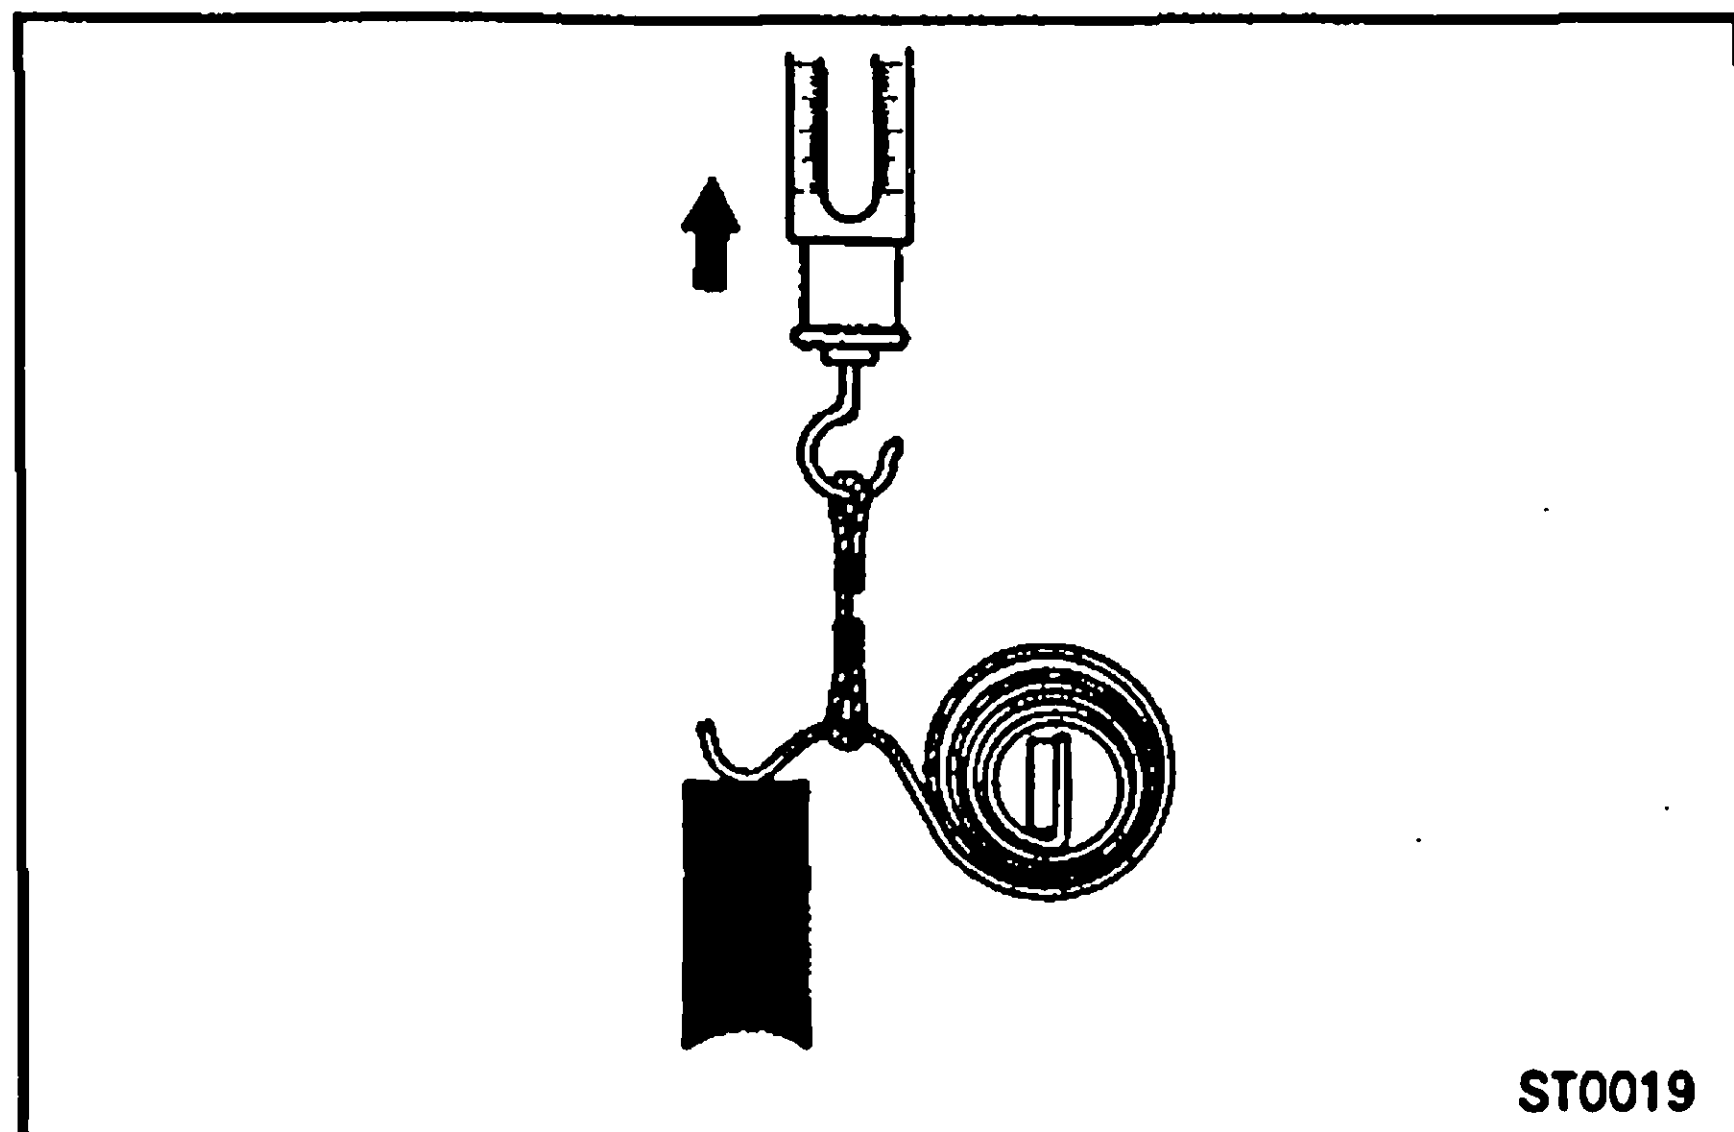

Brush Springs

INSPECT BRUSH SPRING LOAD


Take the pull scale reading the instant the brush spring separates from the brush.

Spring installed load:

26 — 32 N (2.7 — 3.3 kgf, 6.0 — 7.3 lbf)

If the installed load is not within specification, replace the brush springs.

ST

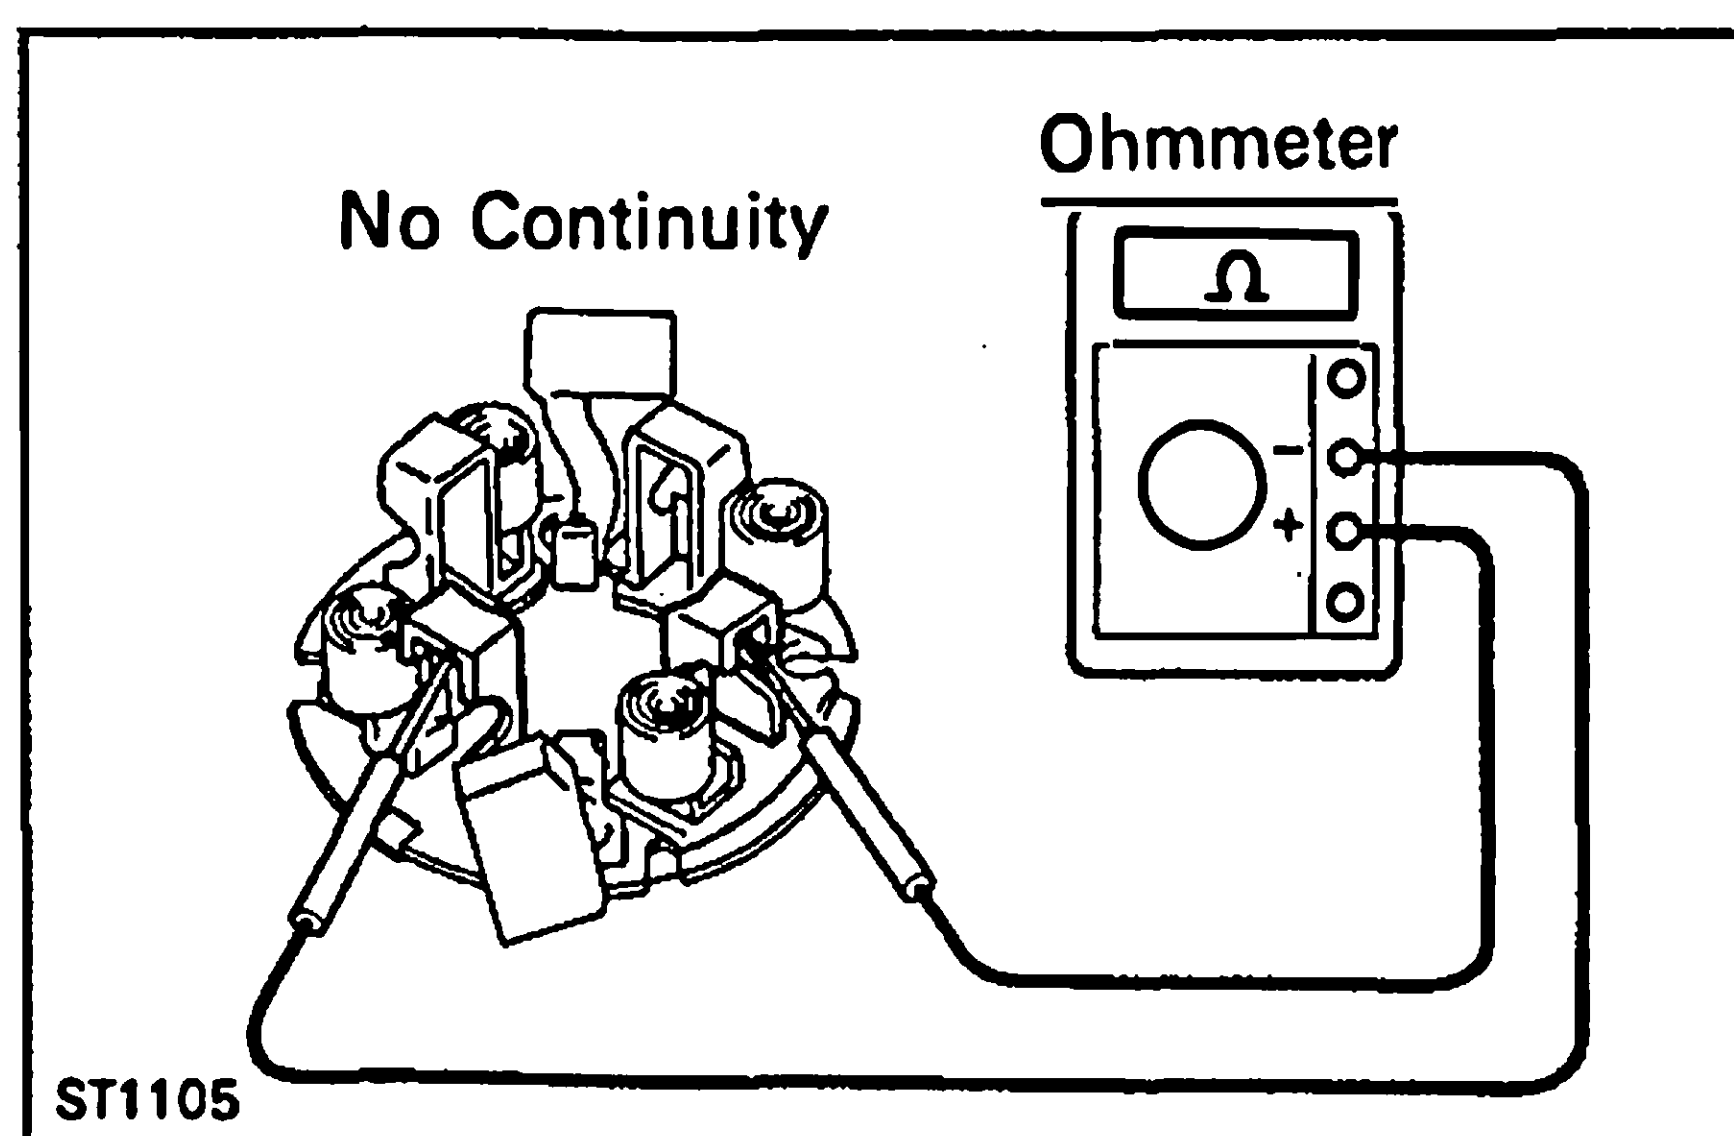

Brush Holder

INSPECT BRUSH HOLDER INSULATION

Using an ohmmeter, check that there is no continuity between the positive (+) and negative (–) brush holders.

If there is continuity, repair or replace the brush holder.


Clutch and Gears

1. INSPECT GEAR TEETH

Check the gear teeth on the pinion gear, idle gear and clutch assembly for wear or damage.

If damaged, replace the gear or clutch assembly.


If damaged, also check the drive plate ring gear for wear or damage.

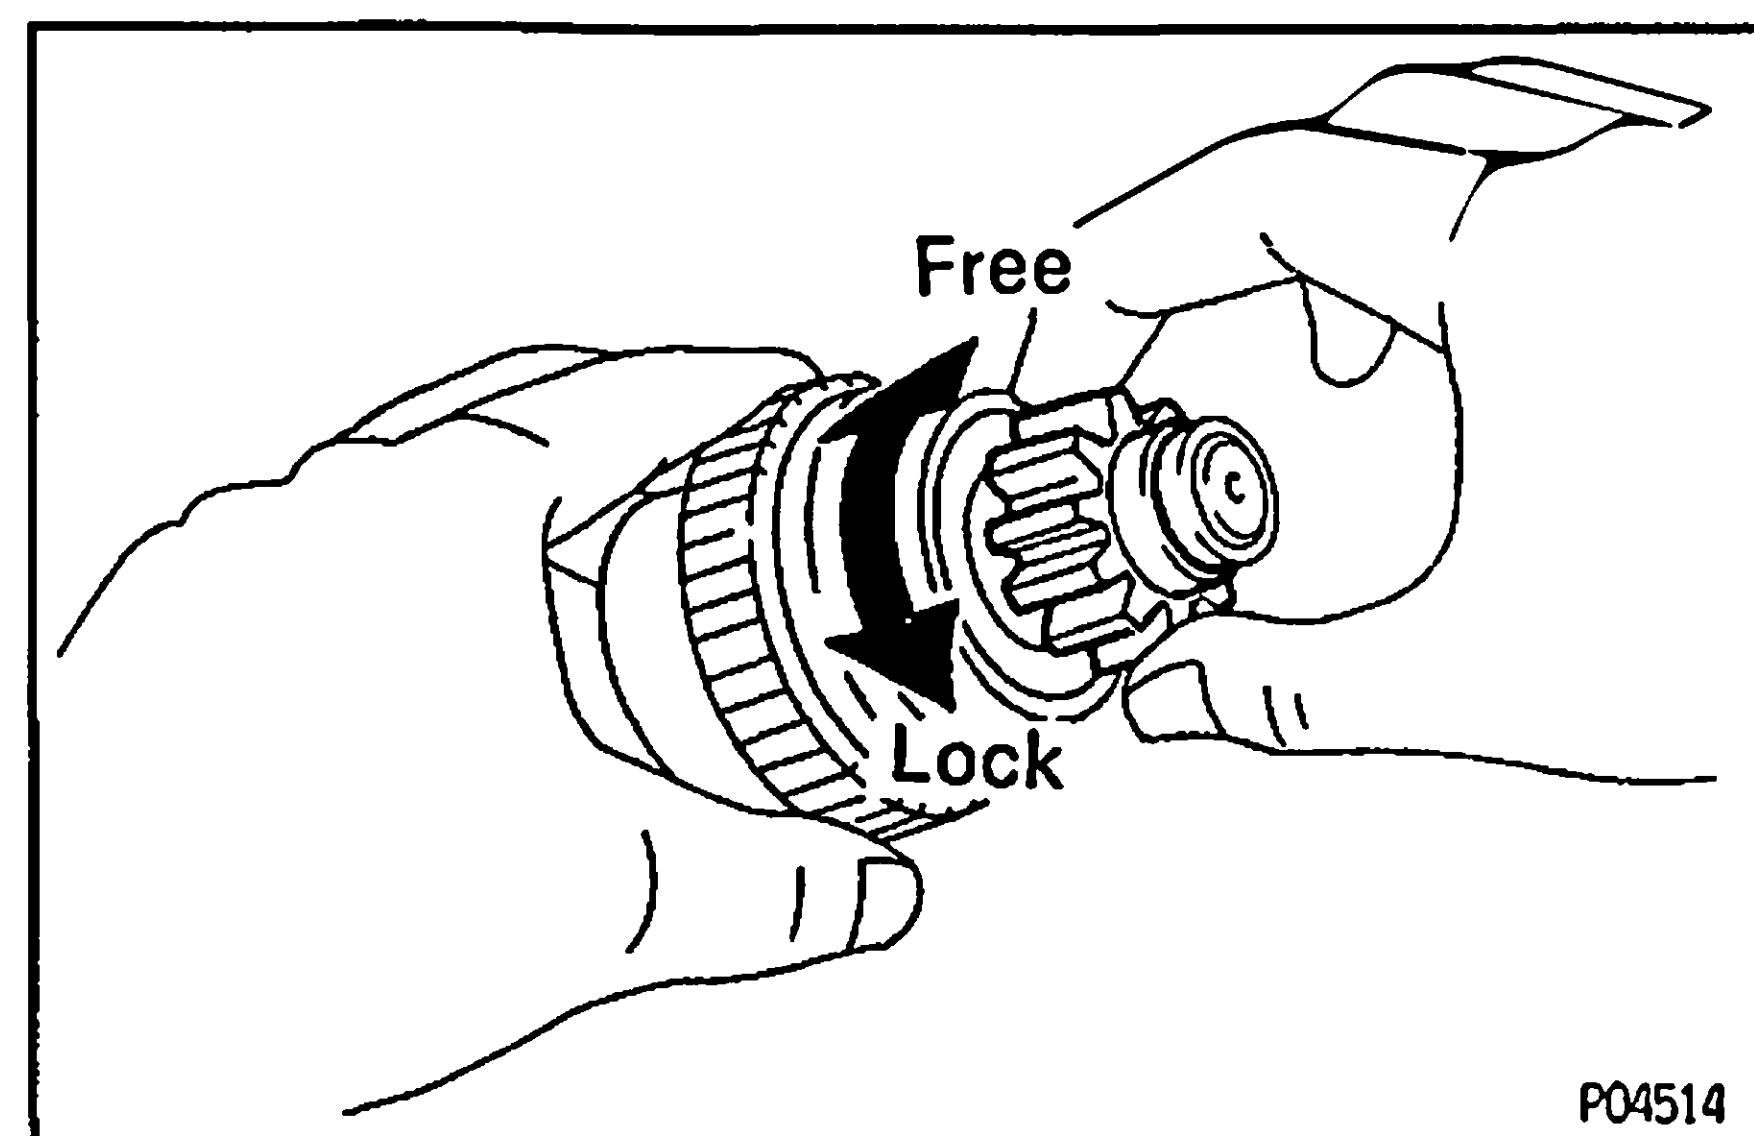

2. INSPECT CLUTCH PINION GEAR

Hold the starter clutch and rotate the pinion gear clockwise, and check that it turns freely. Try to rotate the pinion gear counterclockwise and check that it locks.


If necessary, replace the clutch assembly.

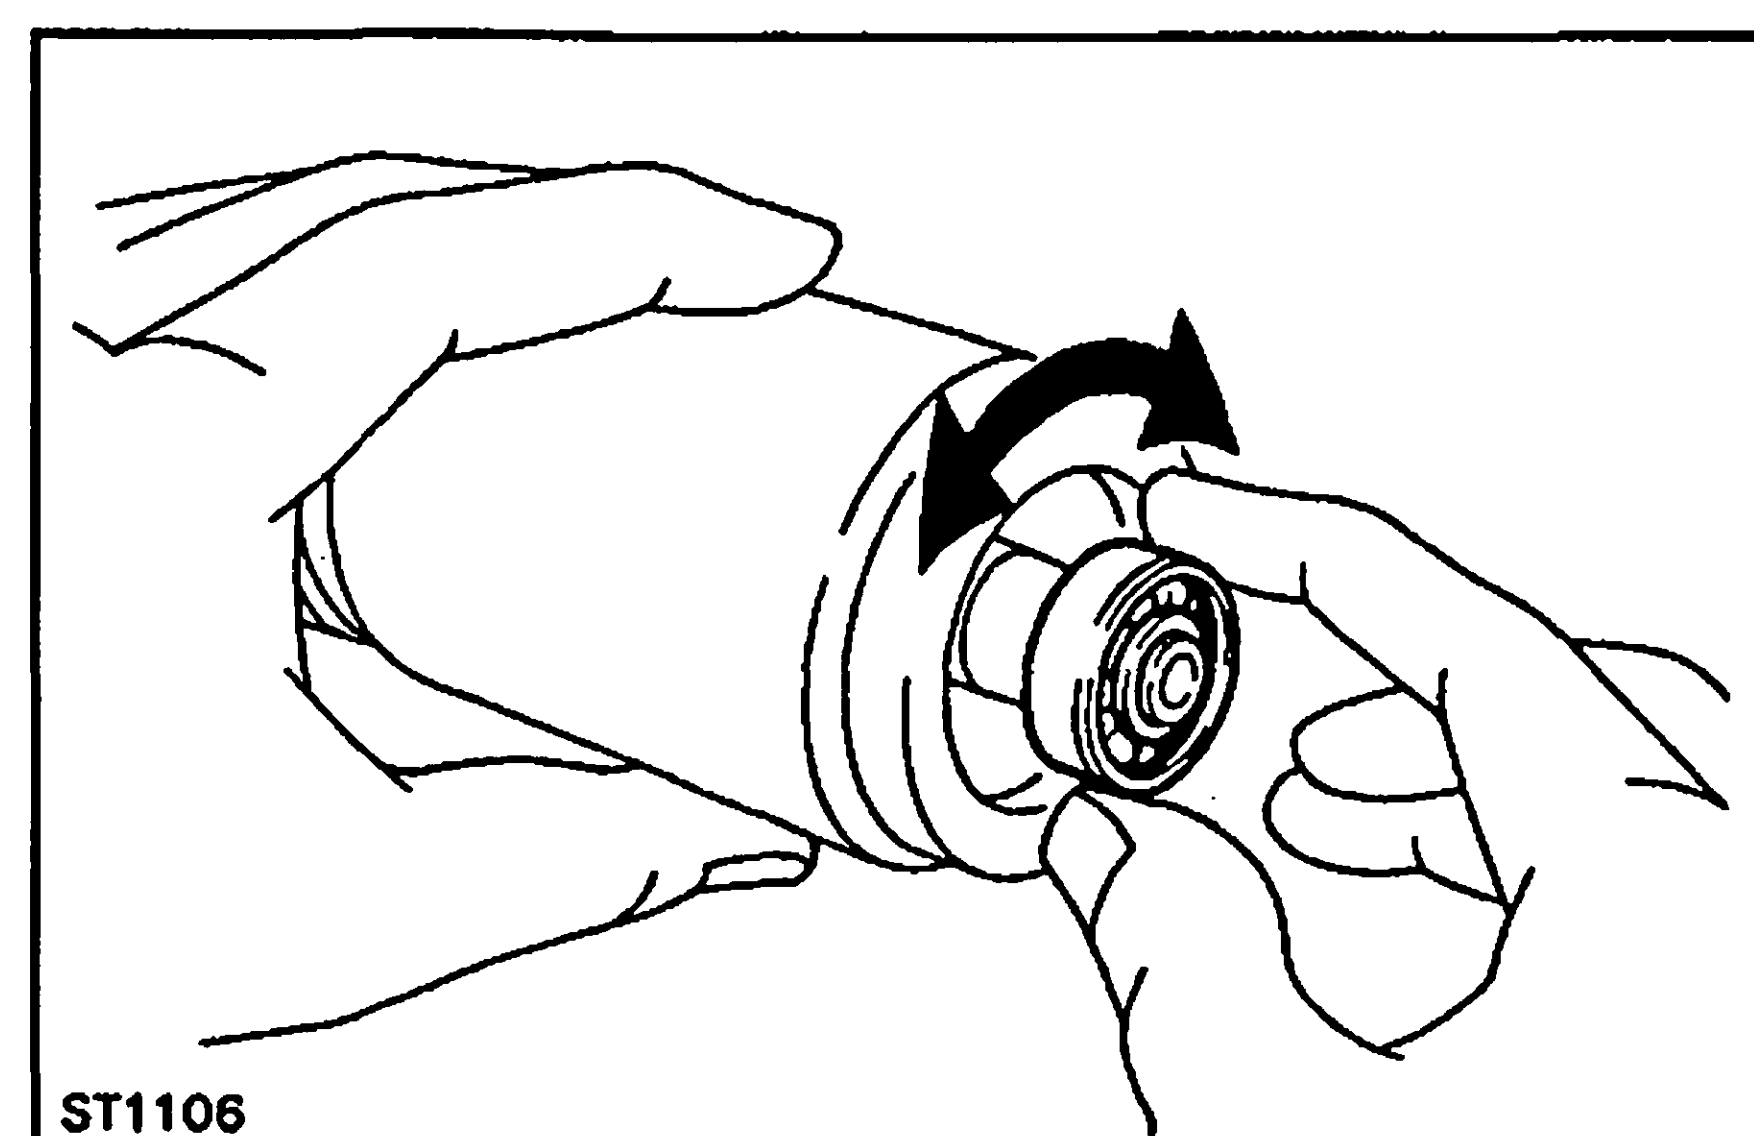

Bearings


1. INSPECT FRONT BEARING

Turn the bearing by hand while applying inward force. If resistance is felt or the bearing sticks, replace the bearing.

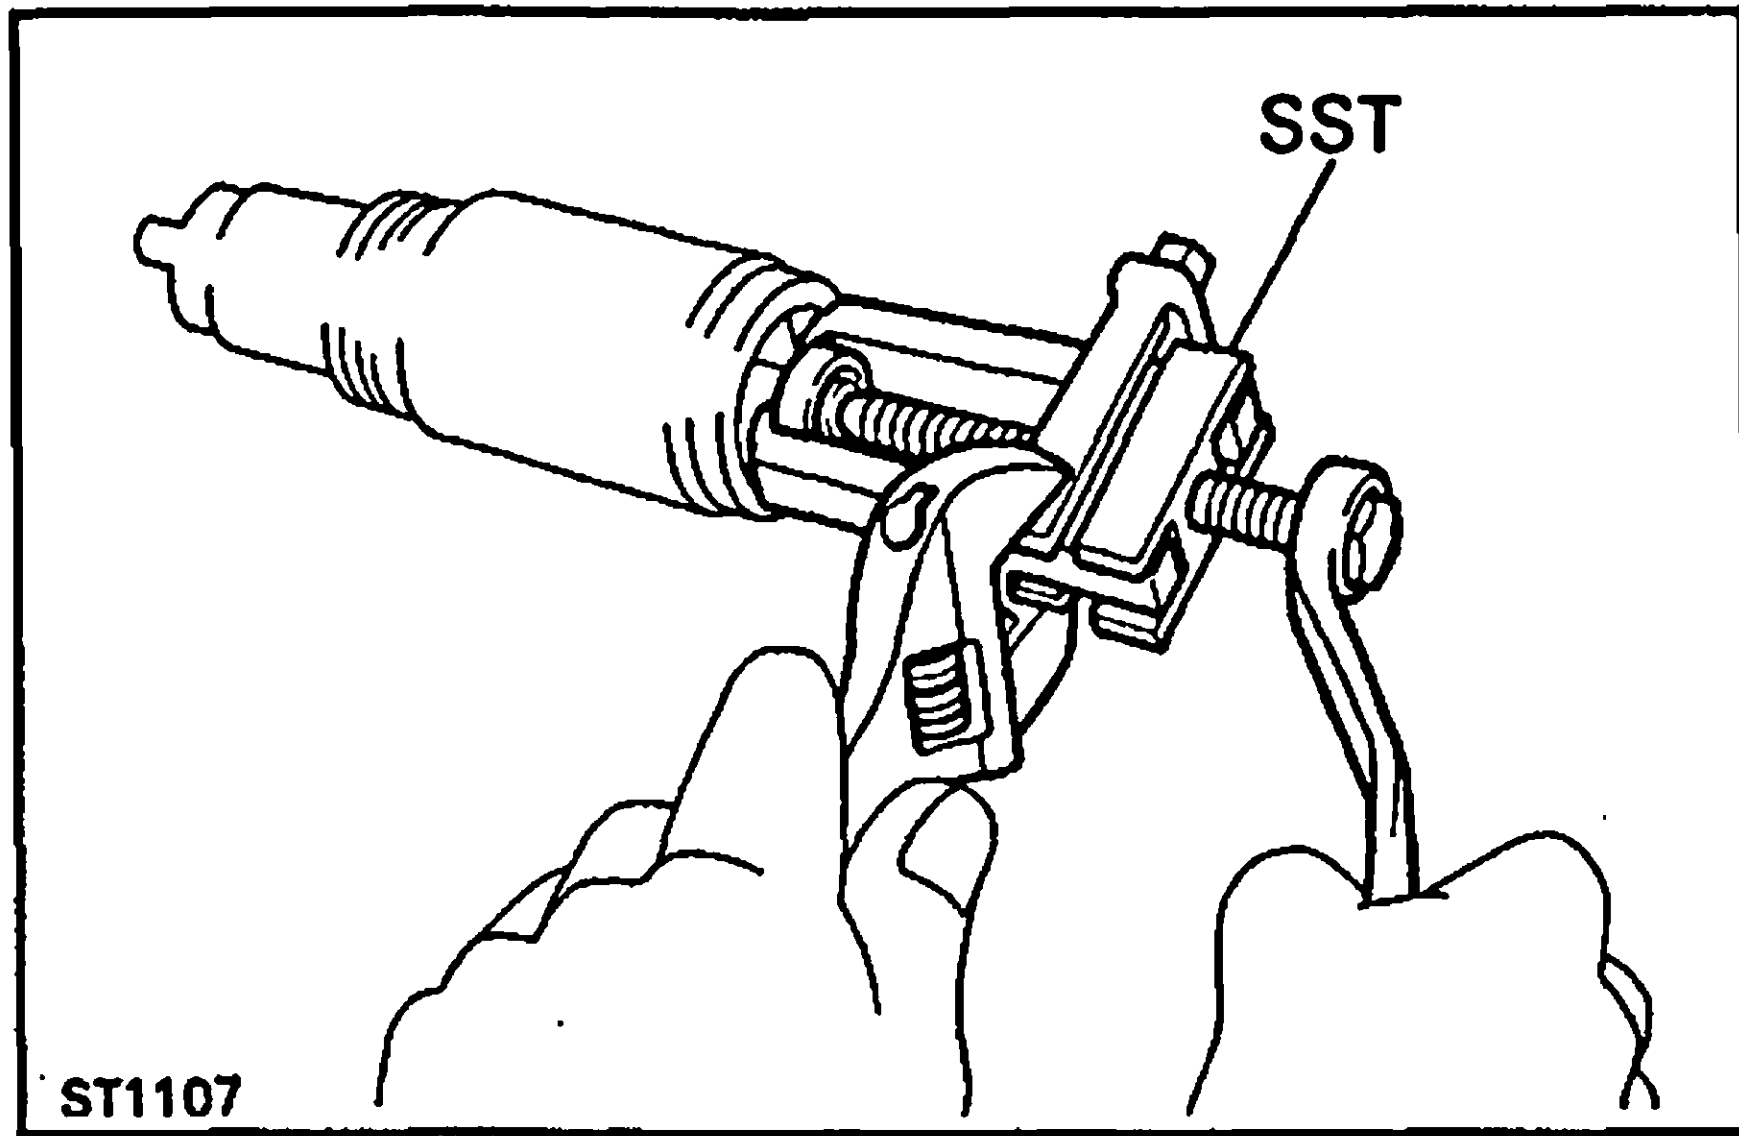

2. IF NECESSARY, REPLACE FRONT BEARING


- (a) Using SST, remove the bearing.
SST 09286-46011

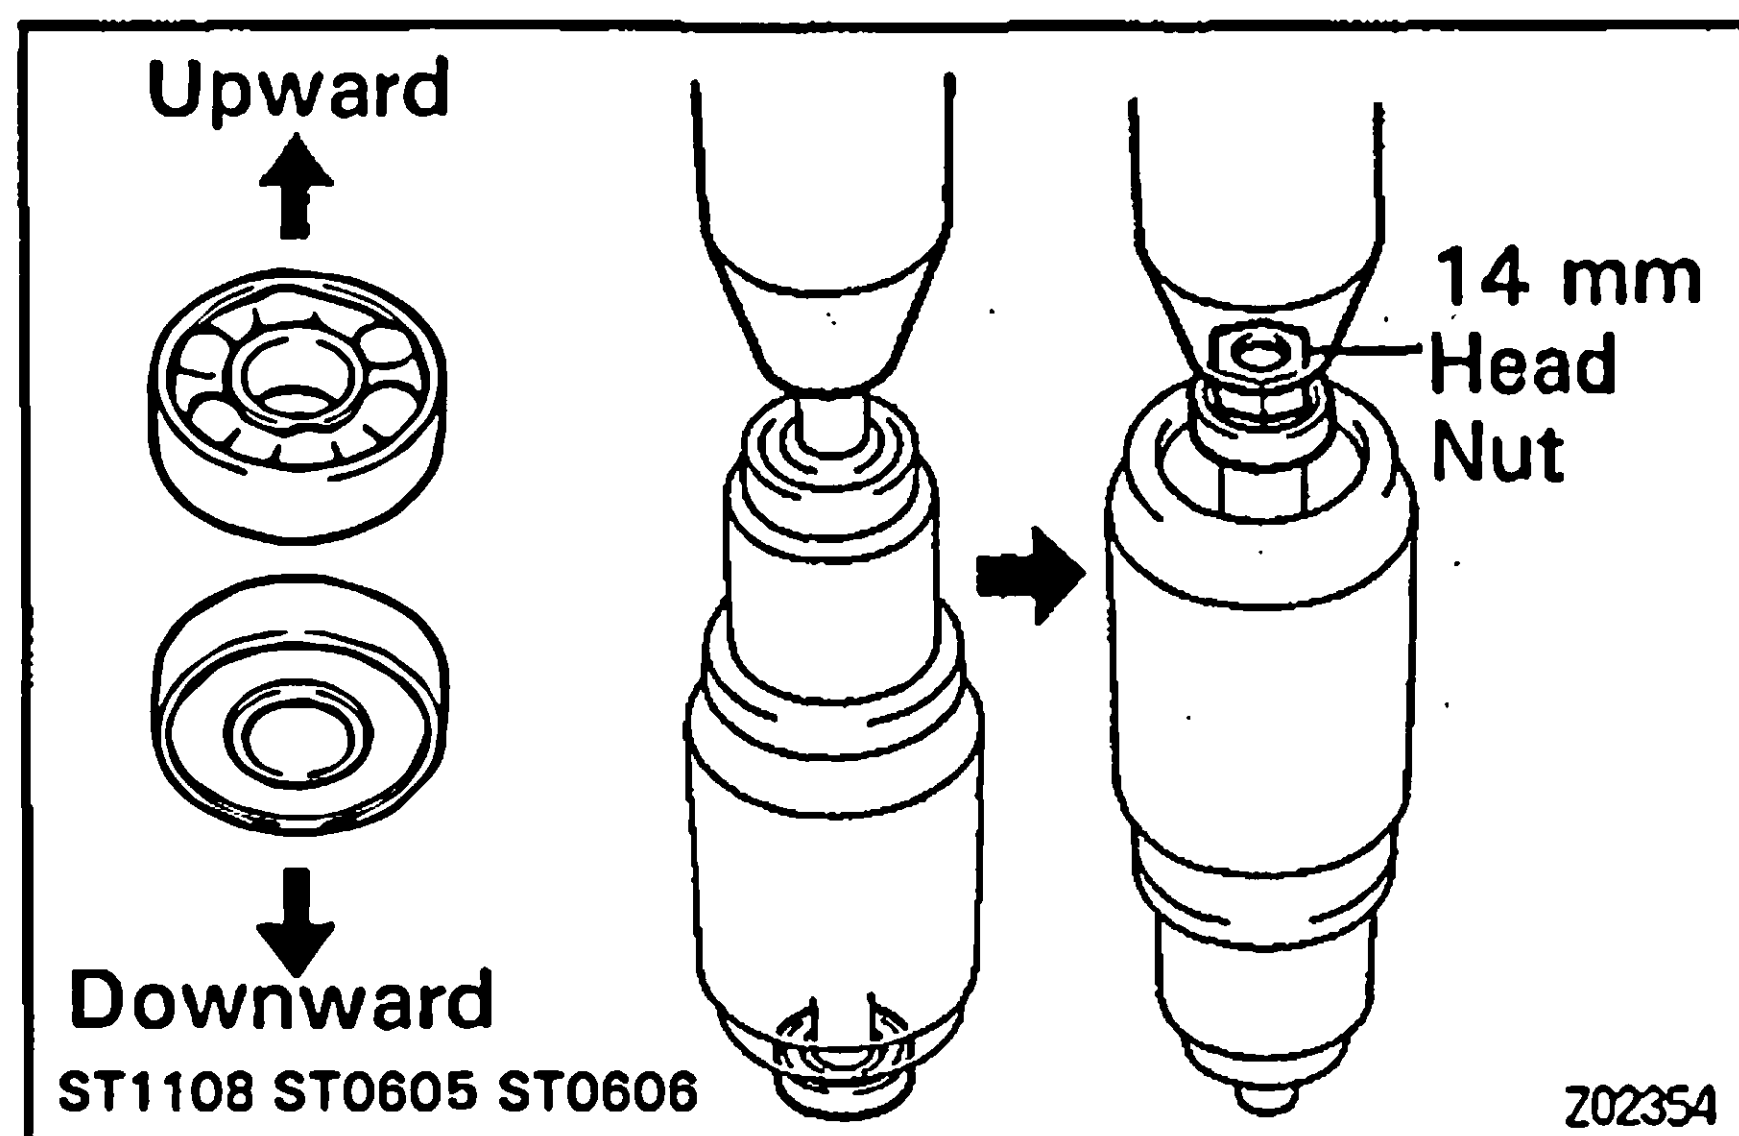


- (b) Using a 14 mm head nut and press, press in a new bearing.

NOTICE: Be careful of the bearing installation direction.

ST

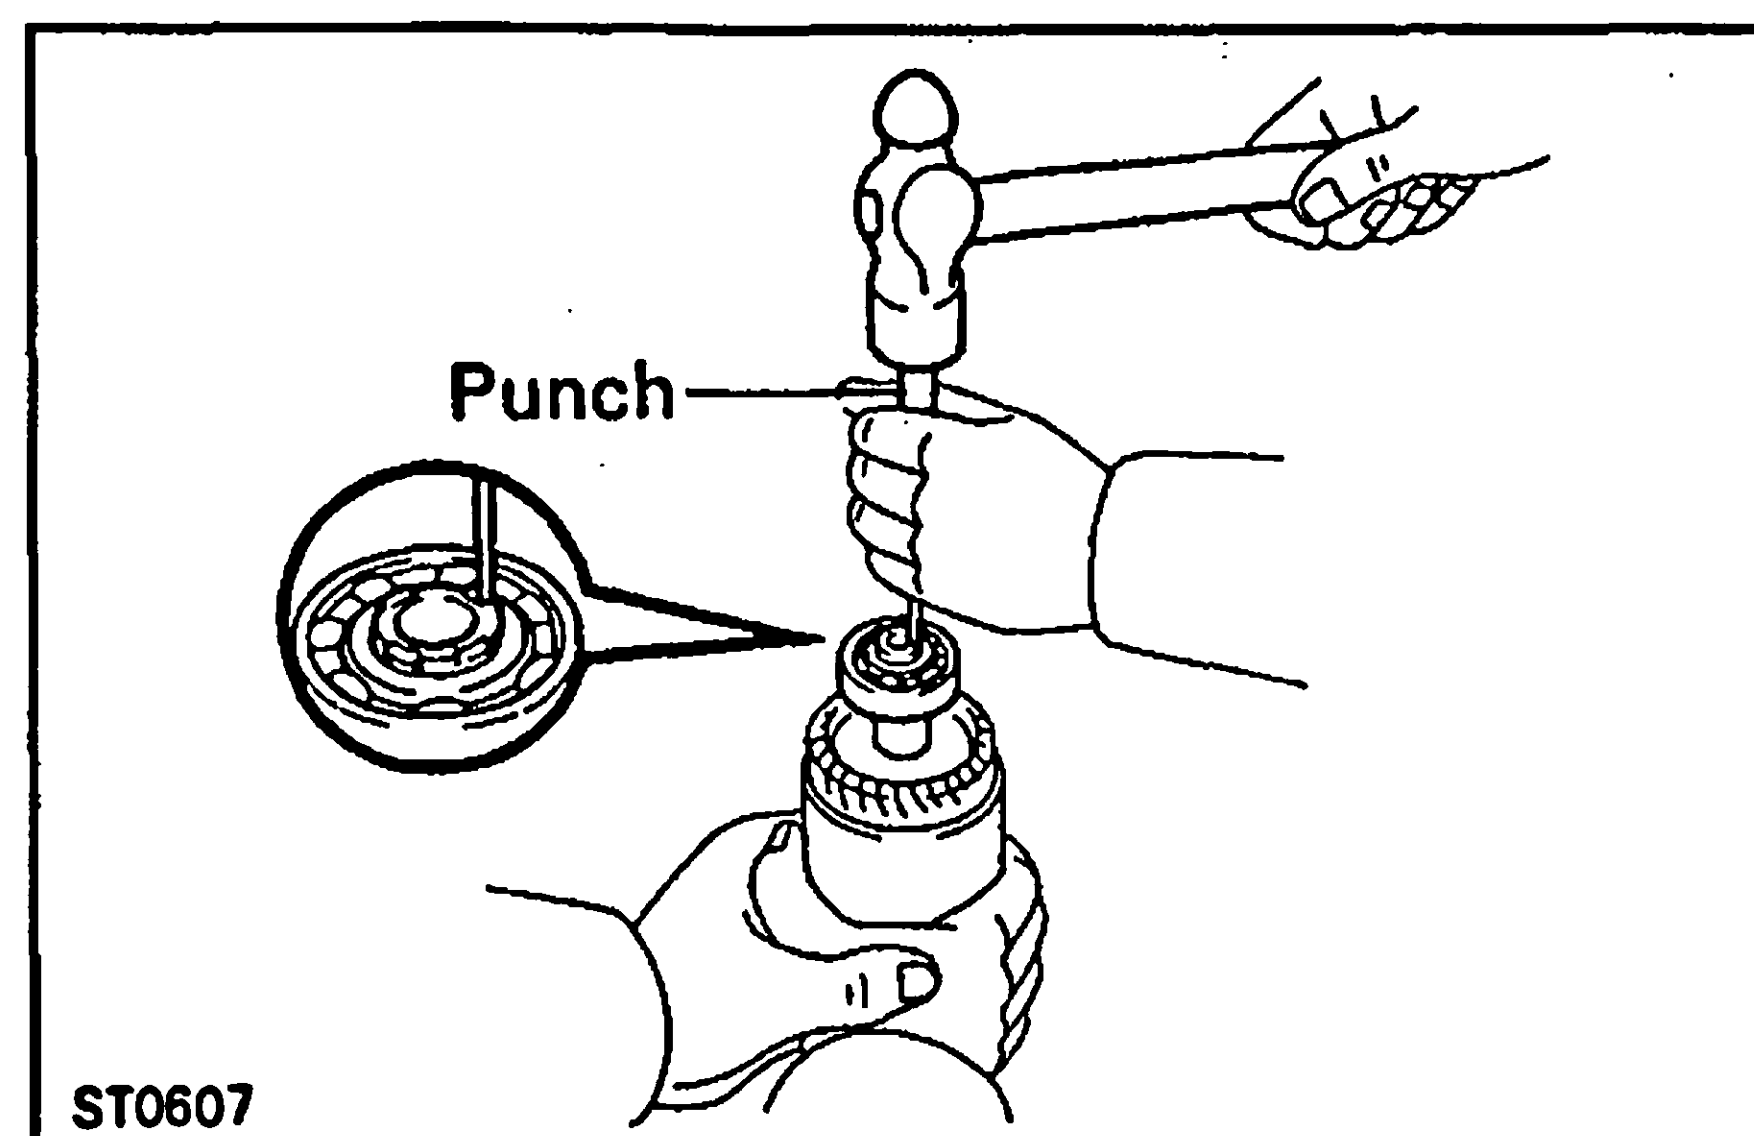


- (c) Using a punch, stake the armature shaft.

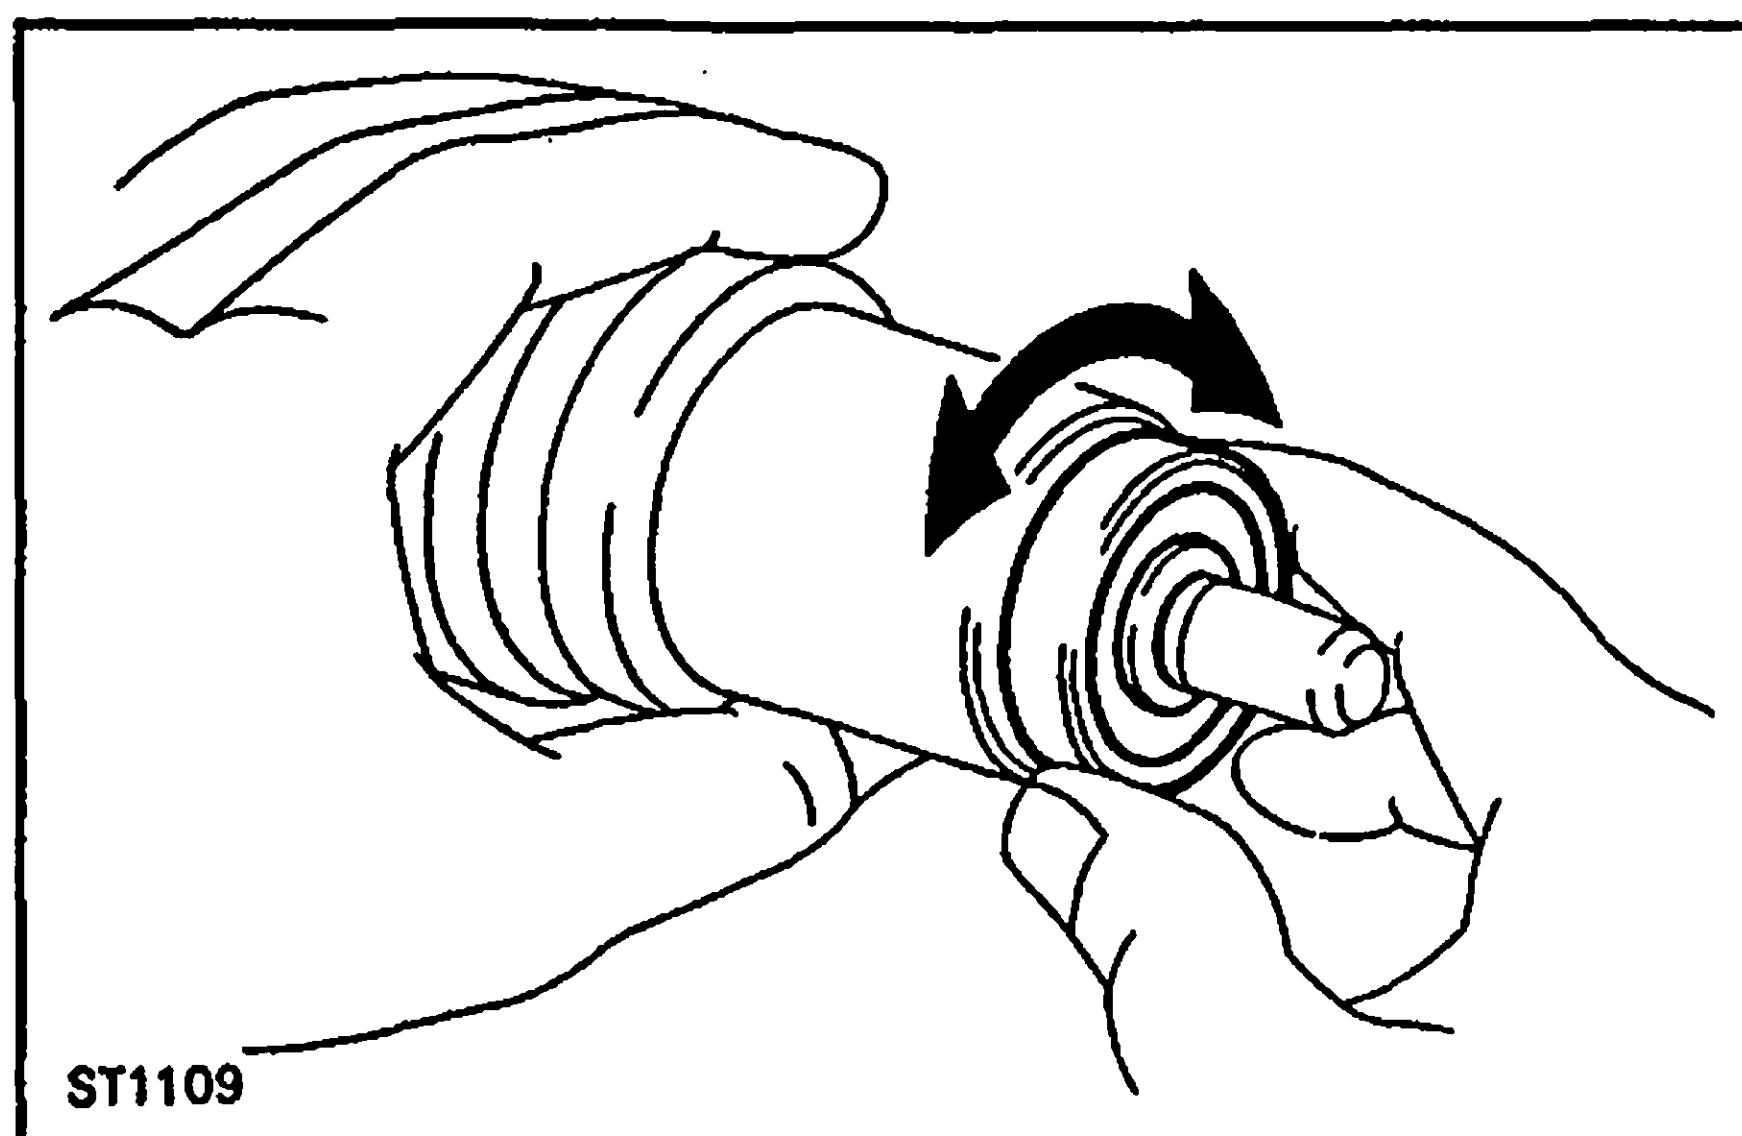


3. INSPECT REAR BEARING

Turn the bearing by hand while applying inward force. If resistance is felt or the bearing sticks, replace the bearing.

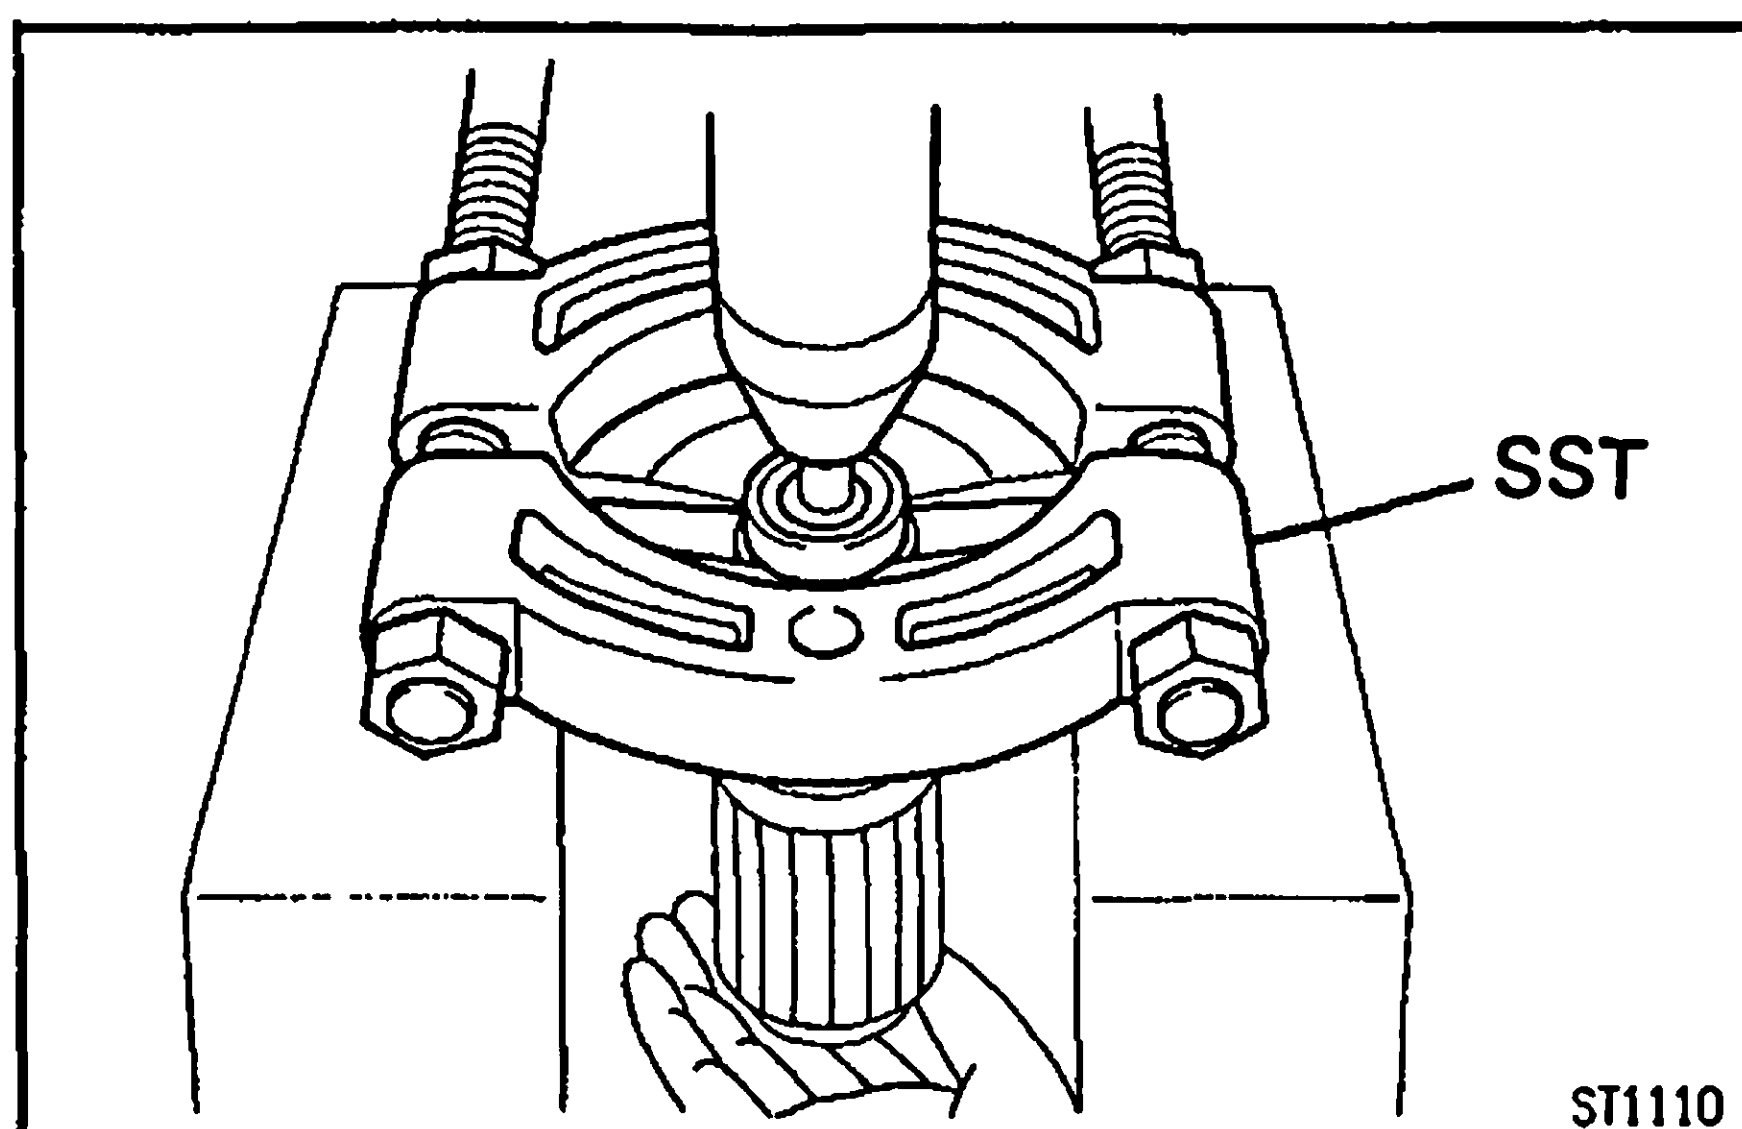

4. IF NECESSARY, REPLACE REAR BEARING

- (a) Using SST and a press, press out the bearing.
SST 09950-00020

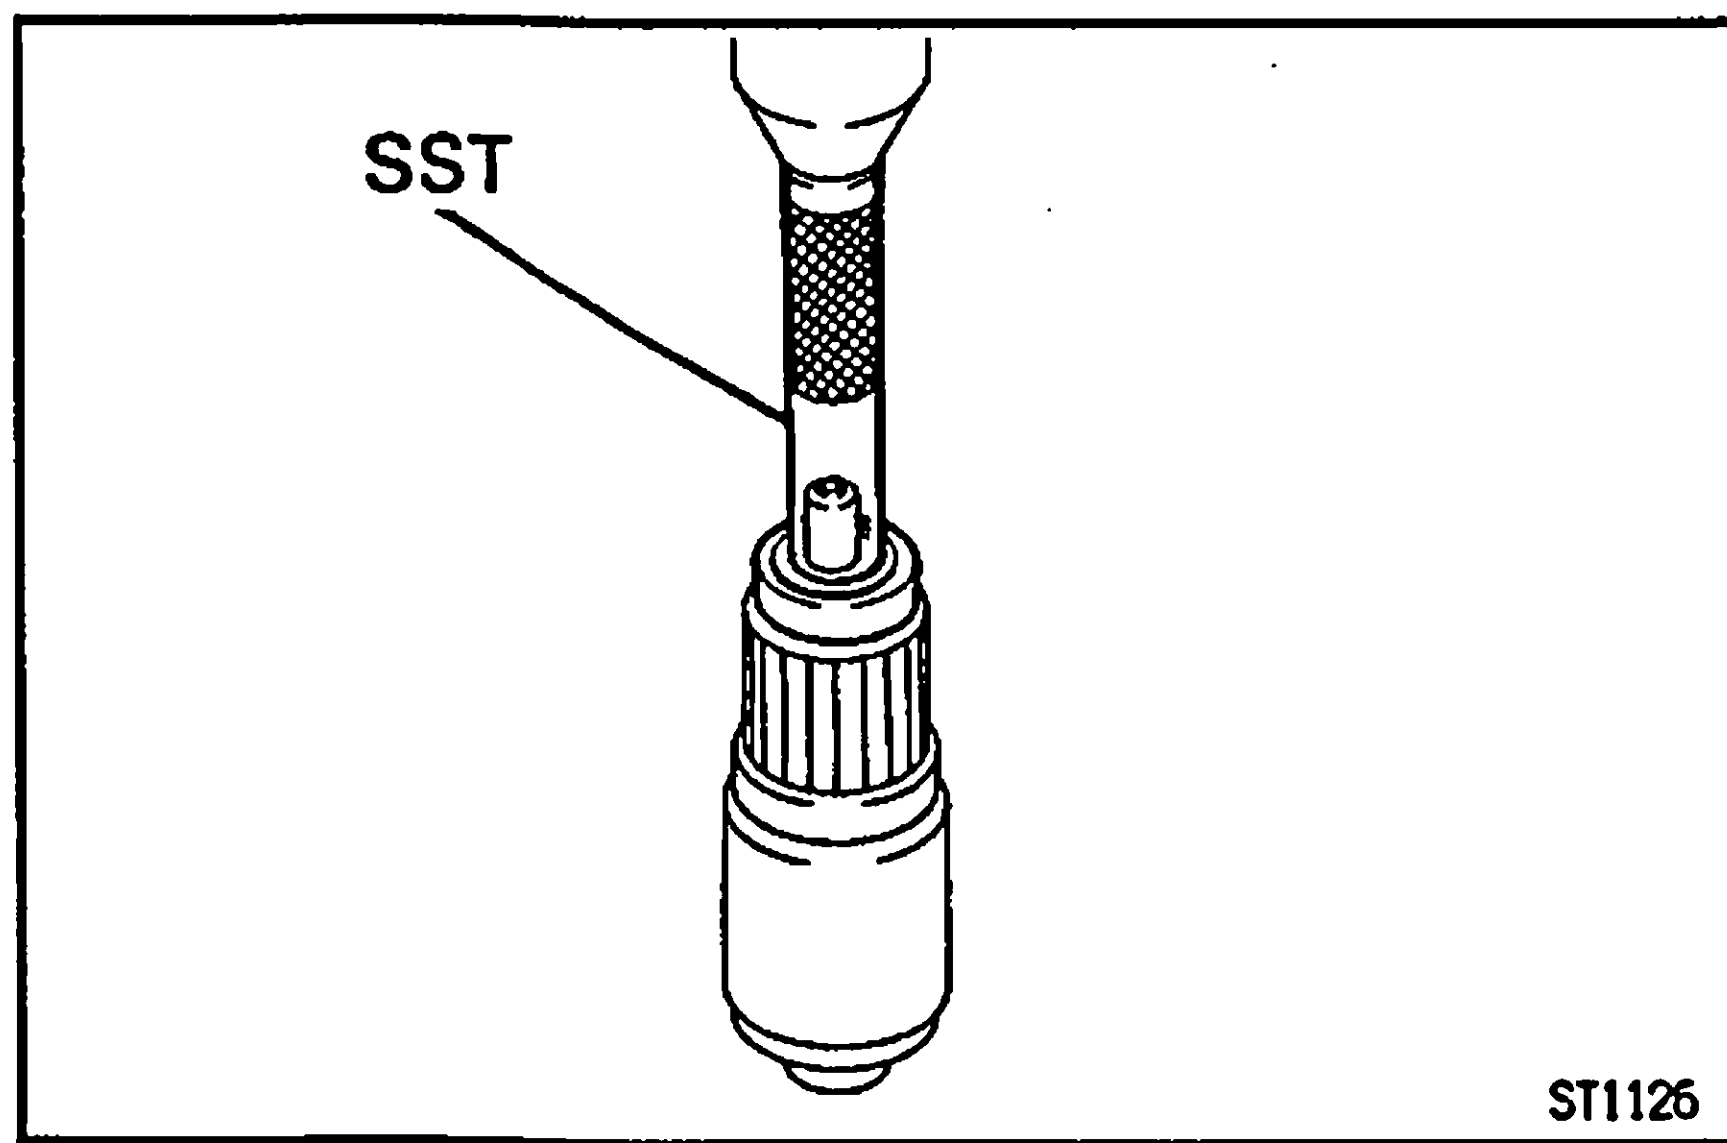


- (b) Using SST and a press, press in a new bearing.
SST 09201-41020

Magnetic Switch


1. PERFORM PULL-IN COIL OPEN CIRCUIT TEST

Using an ohmmeter, check that there is continuity between terminals 50 and C.
If there is no continuity, replace the magnetic switch.

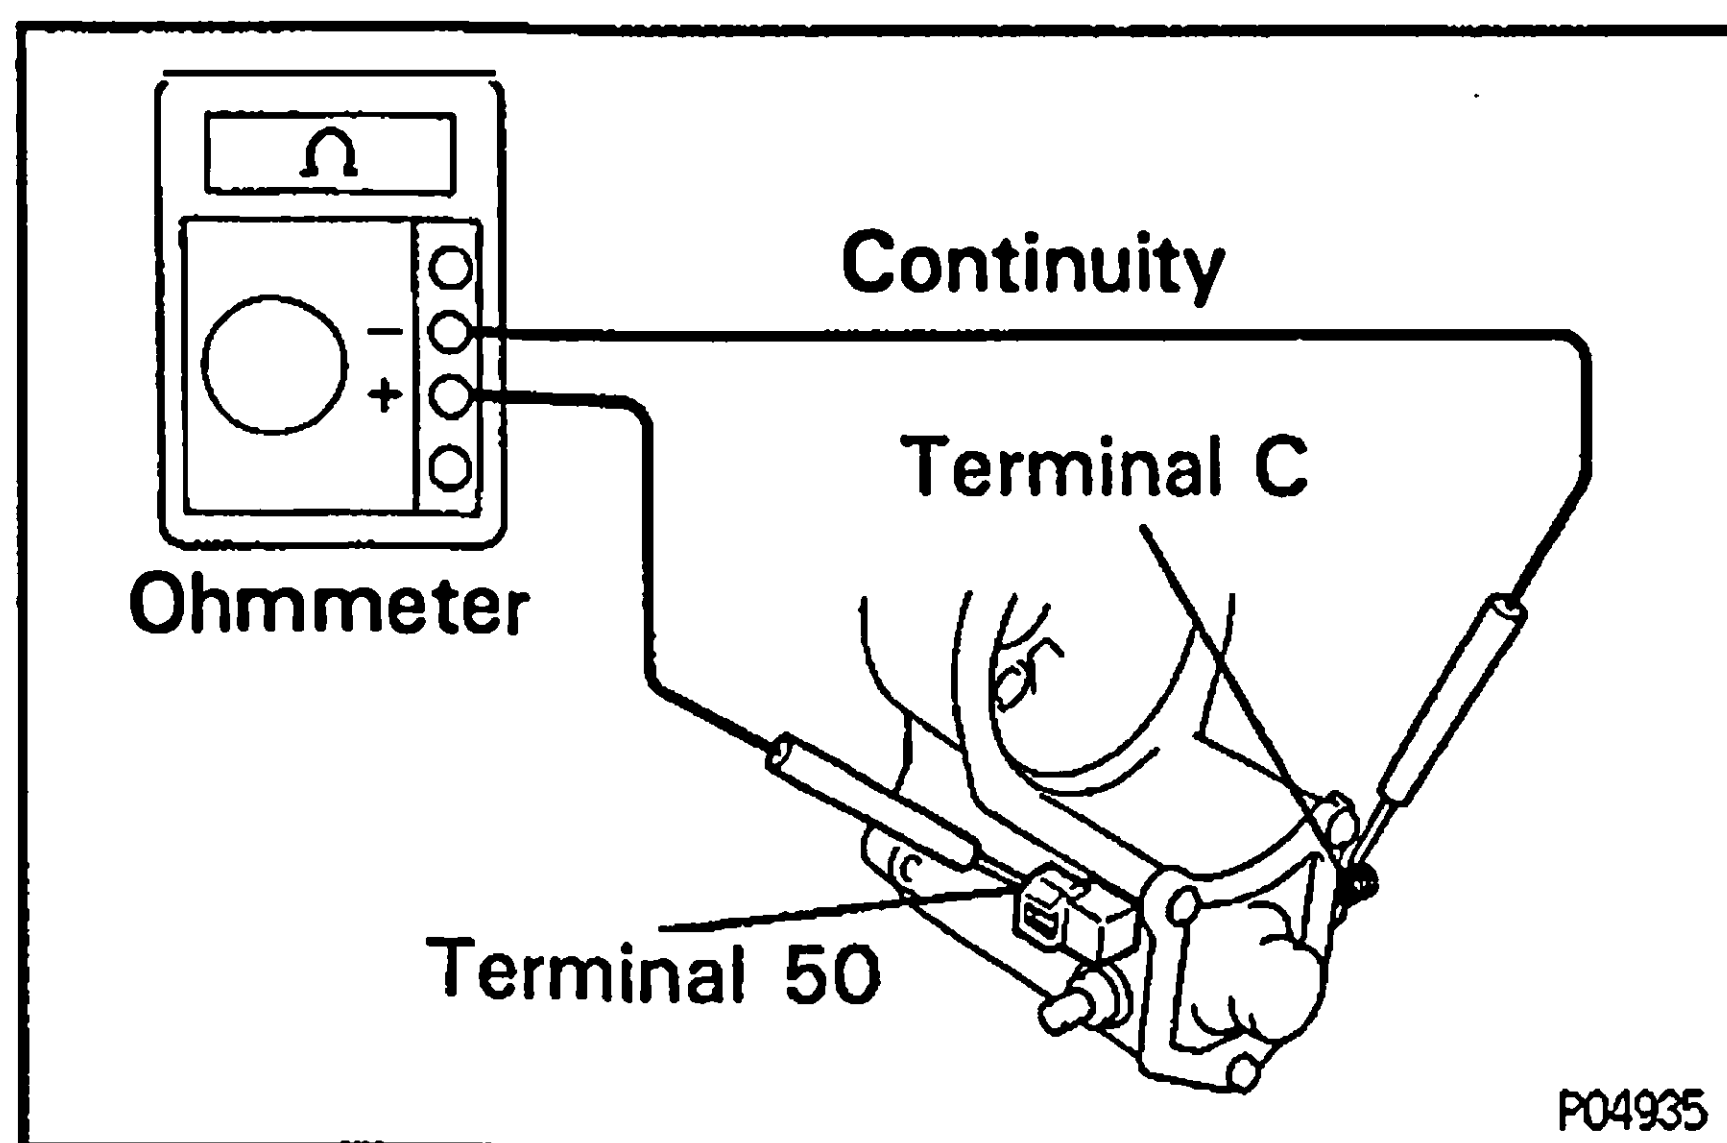

2. PERFORM HOLD-IN COIL OPEN CIRCUIT TEST

Using an ohmmeter, check that there is continuity between terminal 50 and the switch body.
If there is no continuity, replace the magnetic switch.

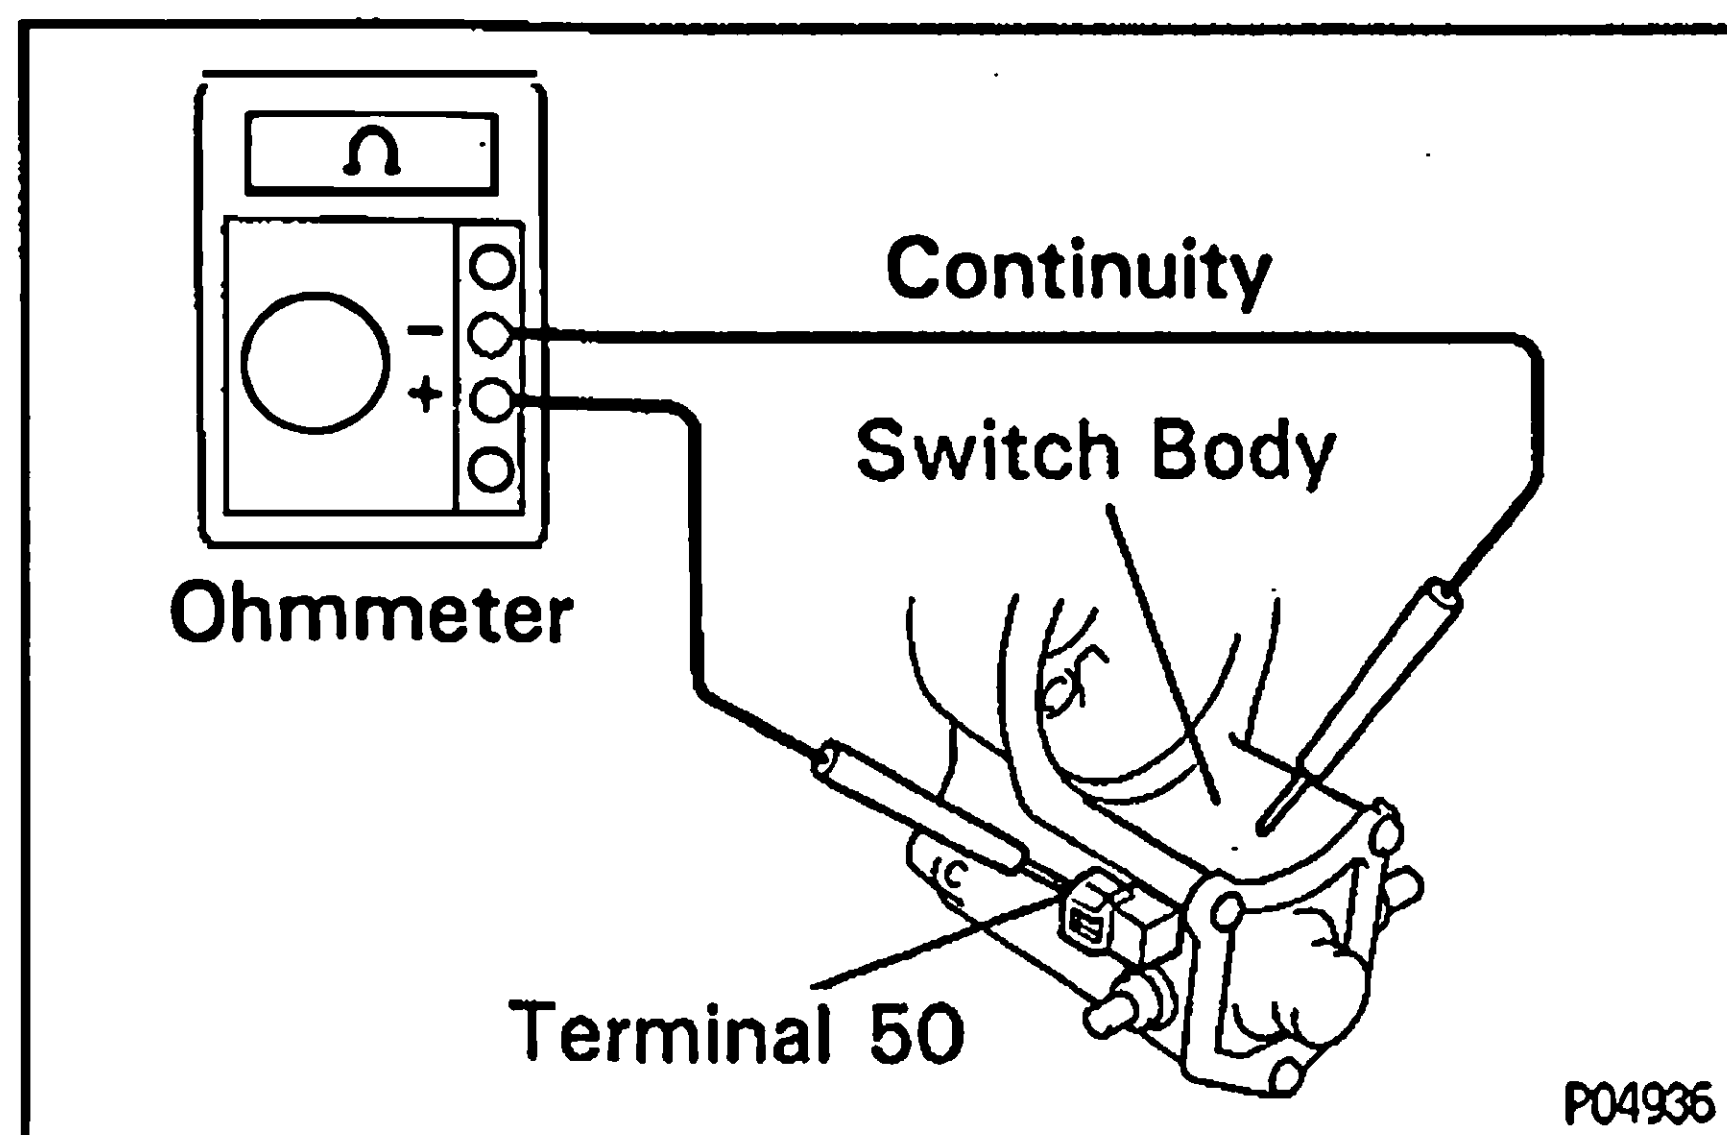


STARTER ASSEMBLY

(See page ST-18)


HINT: Use high-temperature grease to lubricate the bearings and gears when assembling the starter.

1. PLACE ARMATURE INTO FIELD FRAME

- (a) Apply grease to the armature bearings.
- (b) Using a press, press the armature into the field frame.

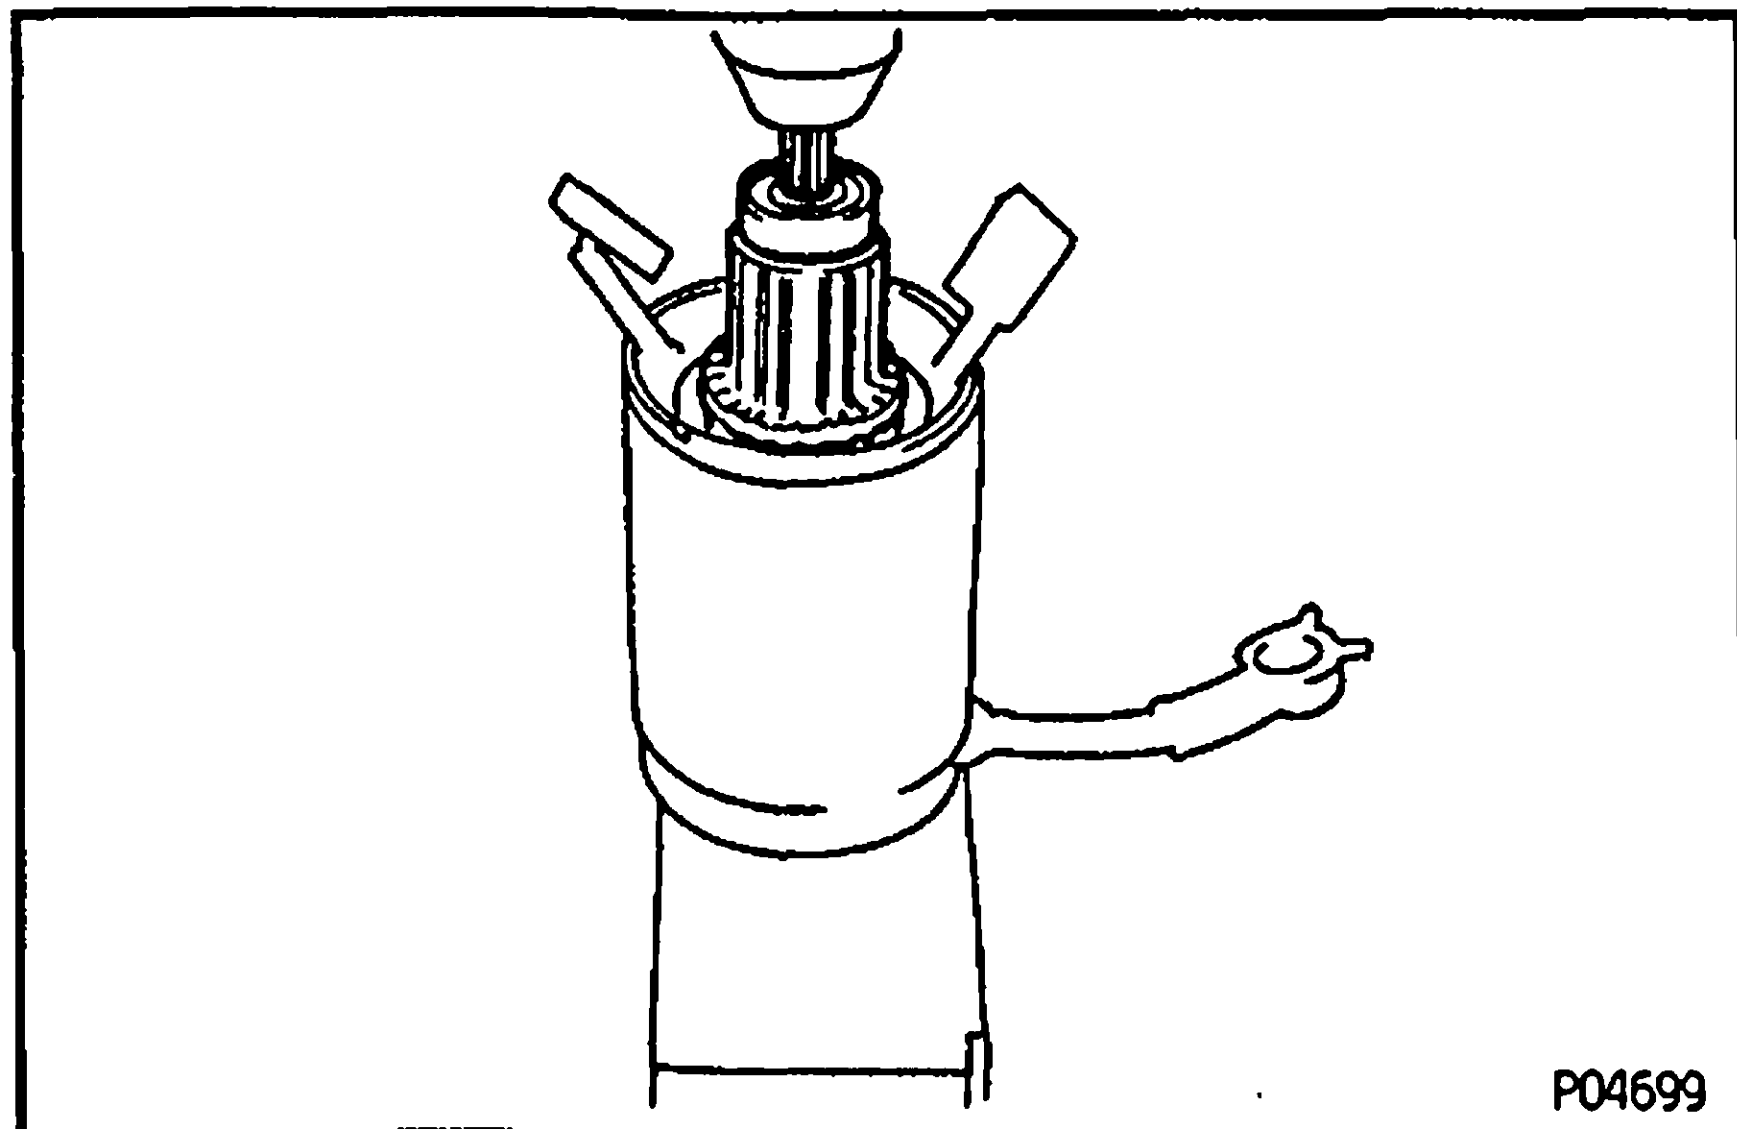
**2. INSTALL BRUSH HOLDER**

- (a) Align the claw of the brush holder with the claw groove of the field frame.
- (b) Place the brush holder on the field frame.

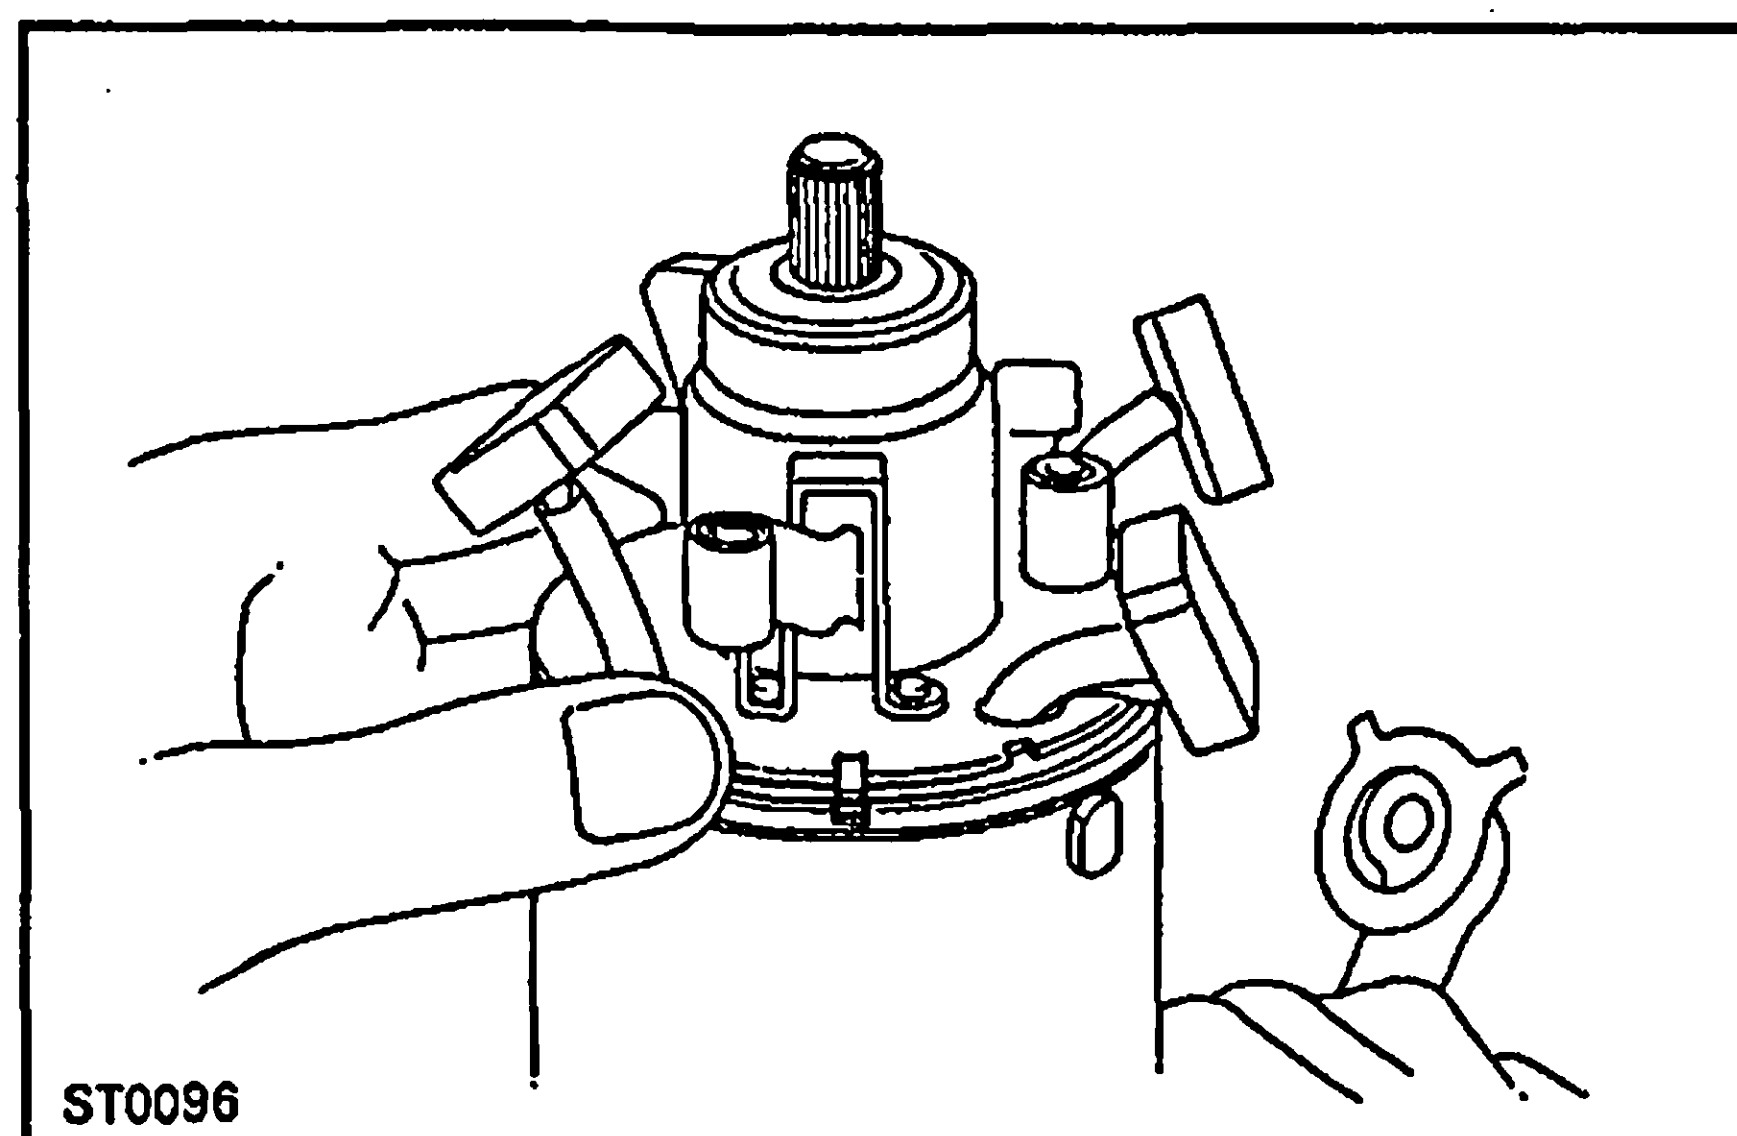


- (c) Using a screwdriver, hold the brush spring back, and connect the brush into the brush holder. Connect the four brushes.


NOTICE: Check that the positive (+) lead wires are not grounded.

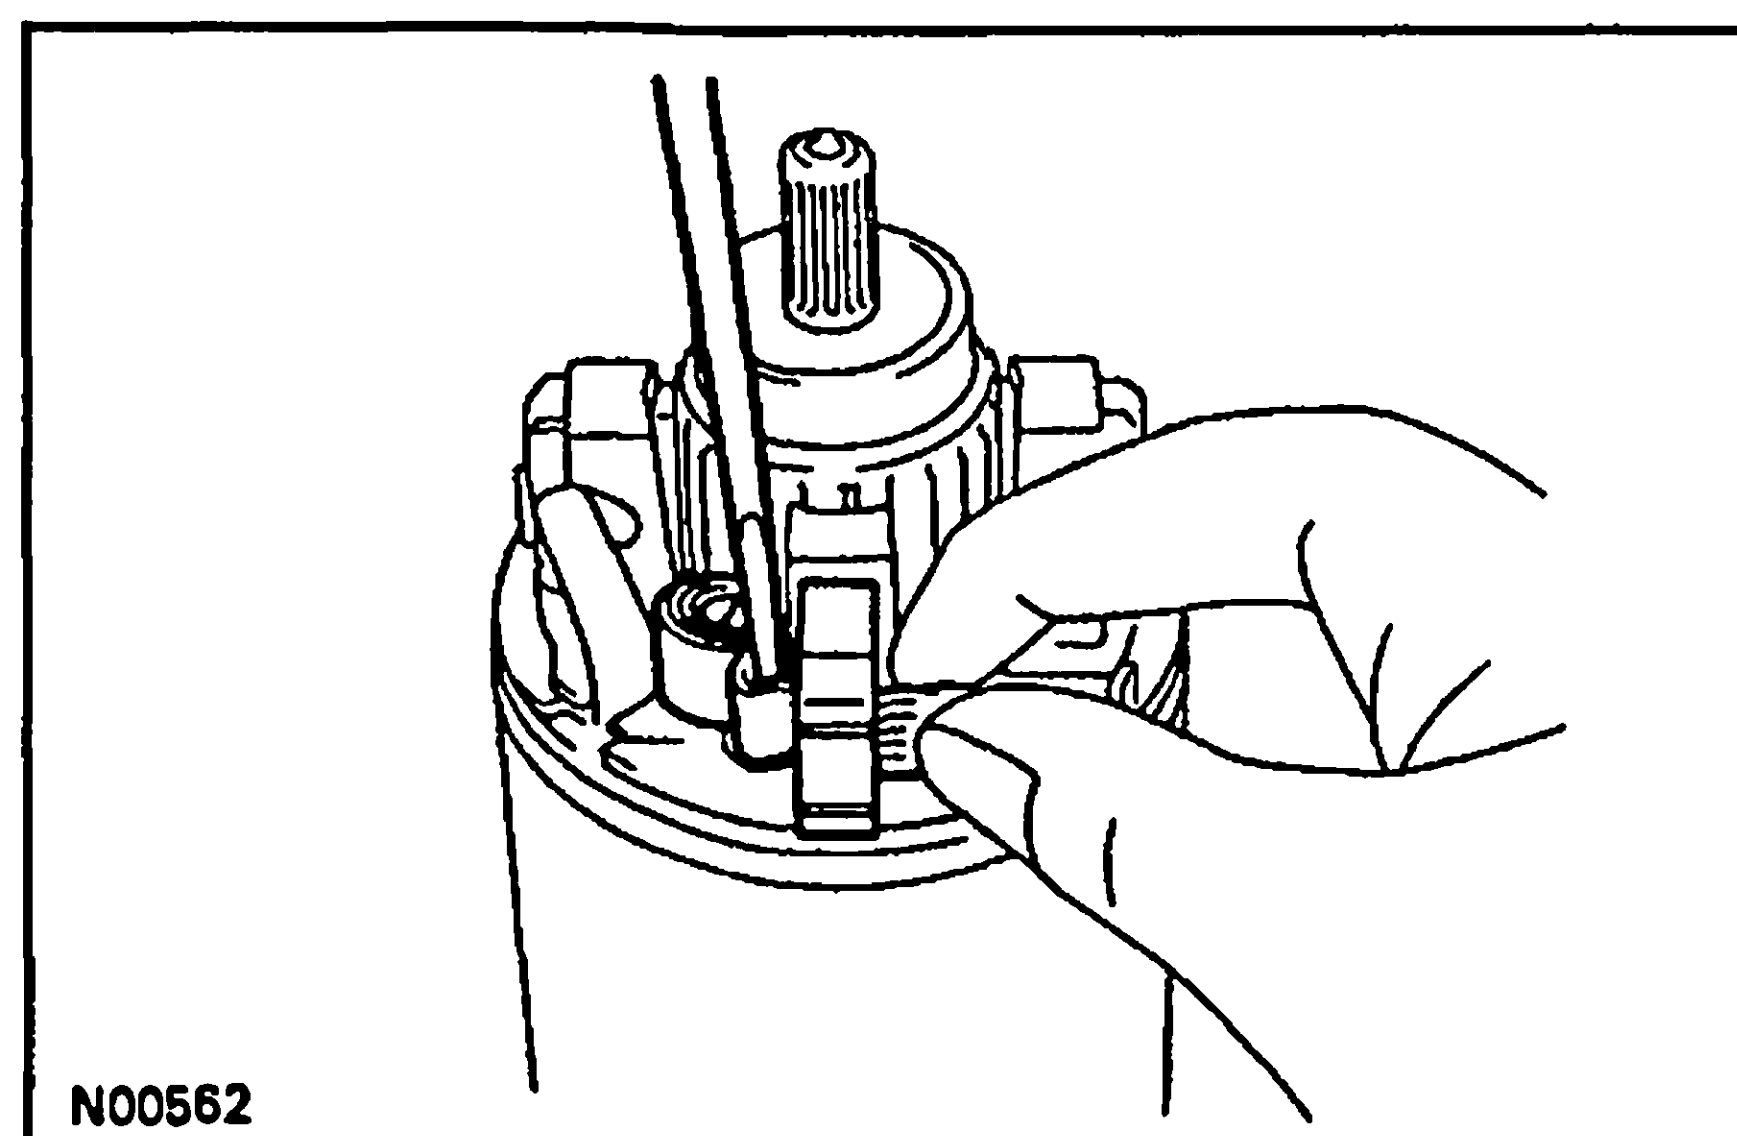
**3. INSERT STEEL BALL INTO CLUTCH SHAFT HOLE**

- (a) Apply grease to the steel ball.
- (b) Insert the steel ball into the clutch shaft hole.

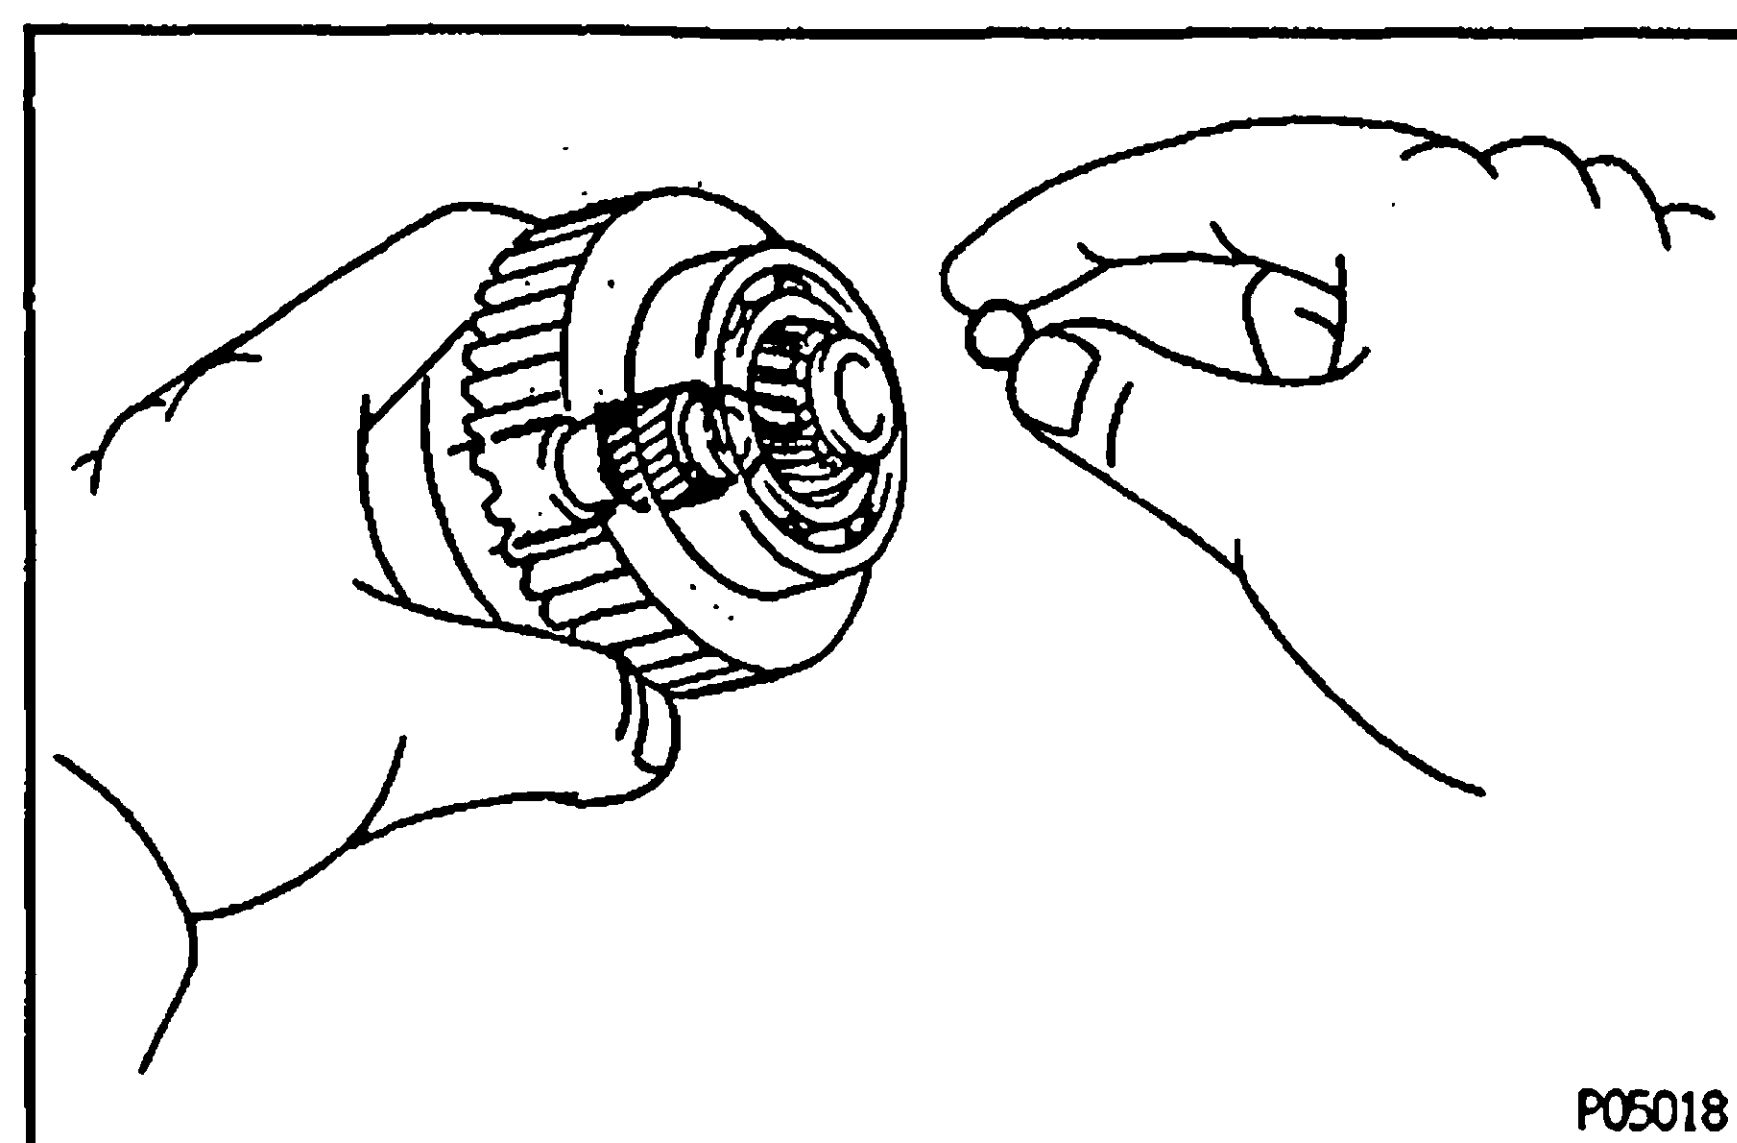**4. INSTALL STARTER HOUSING, CLUTCH ASSEMBLY AND GEARS**

- (a) Apply grease to the return spring.
- (b) Insert the return spring into the magnetic switch hole.

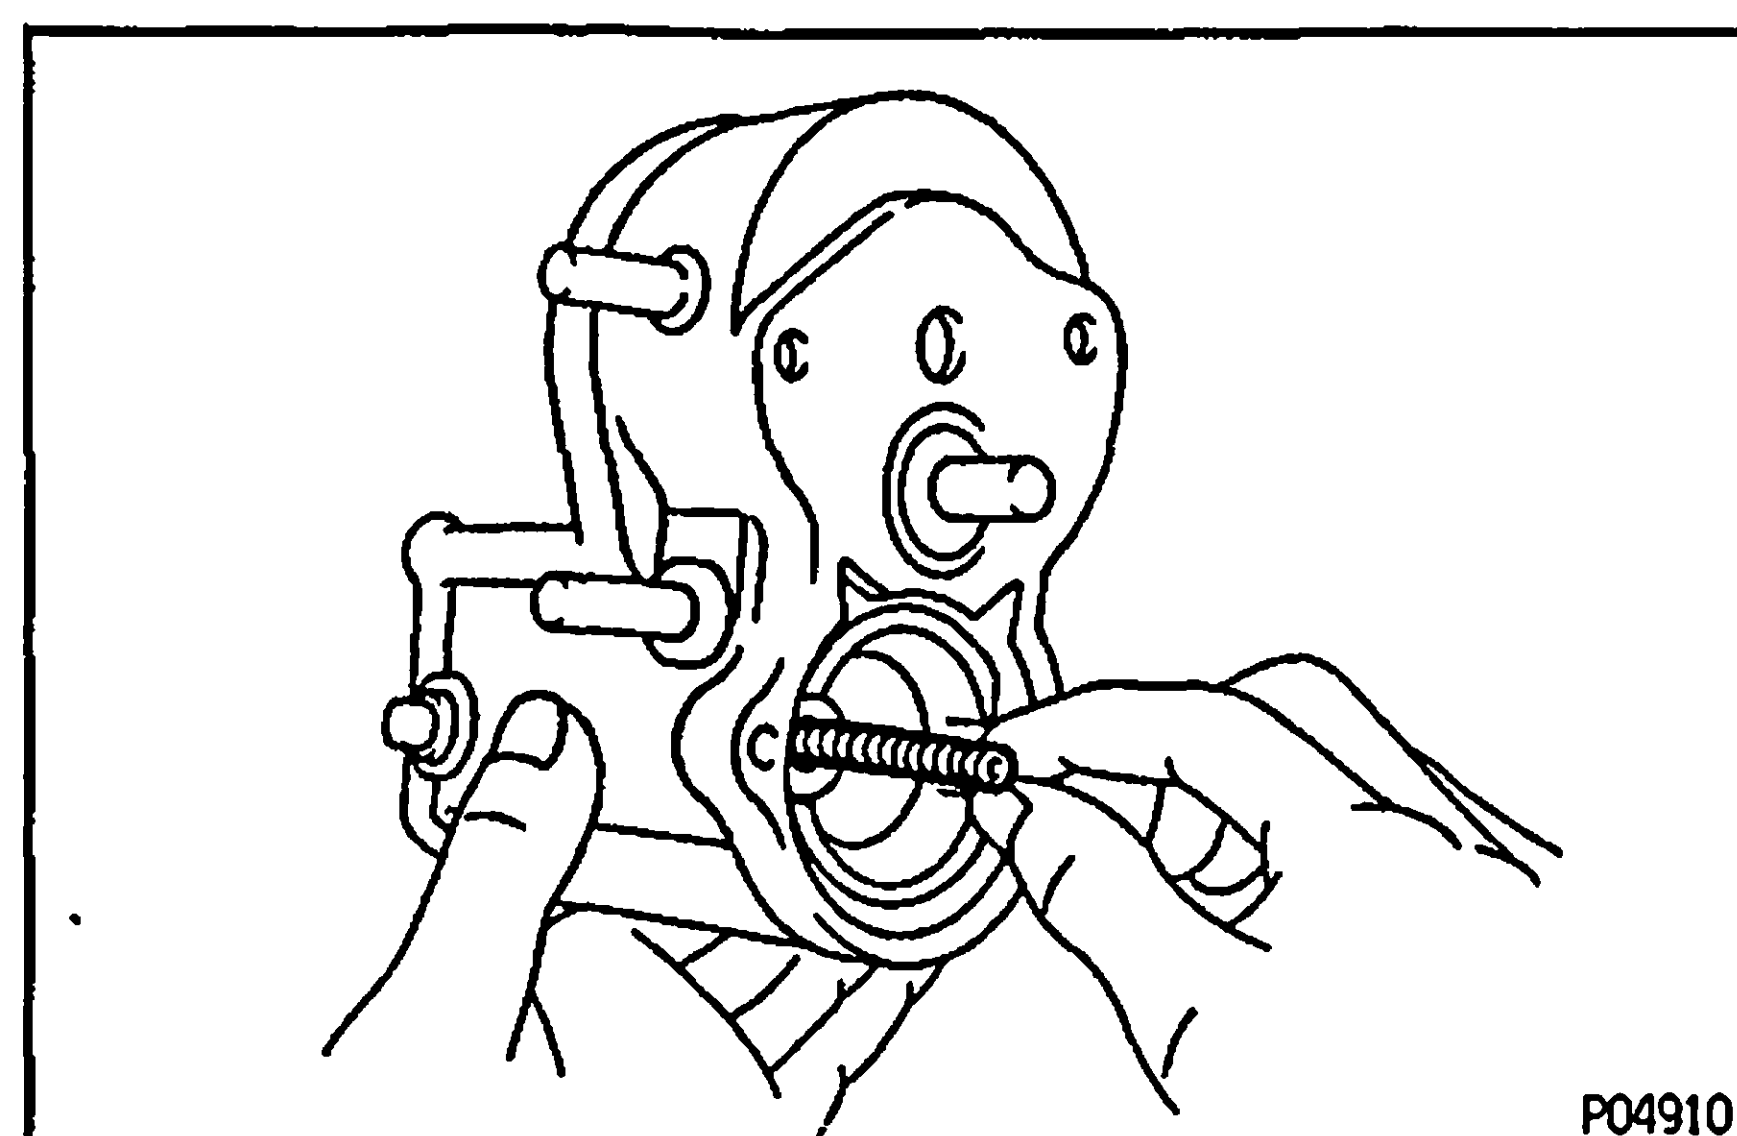


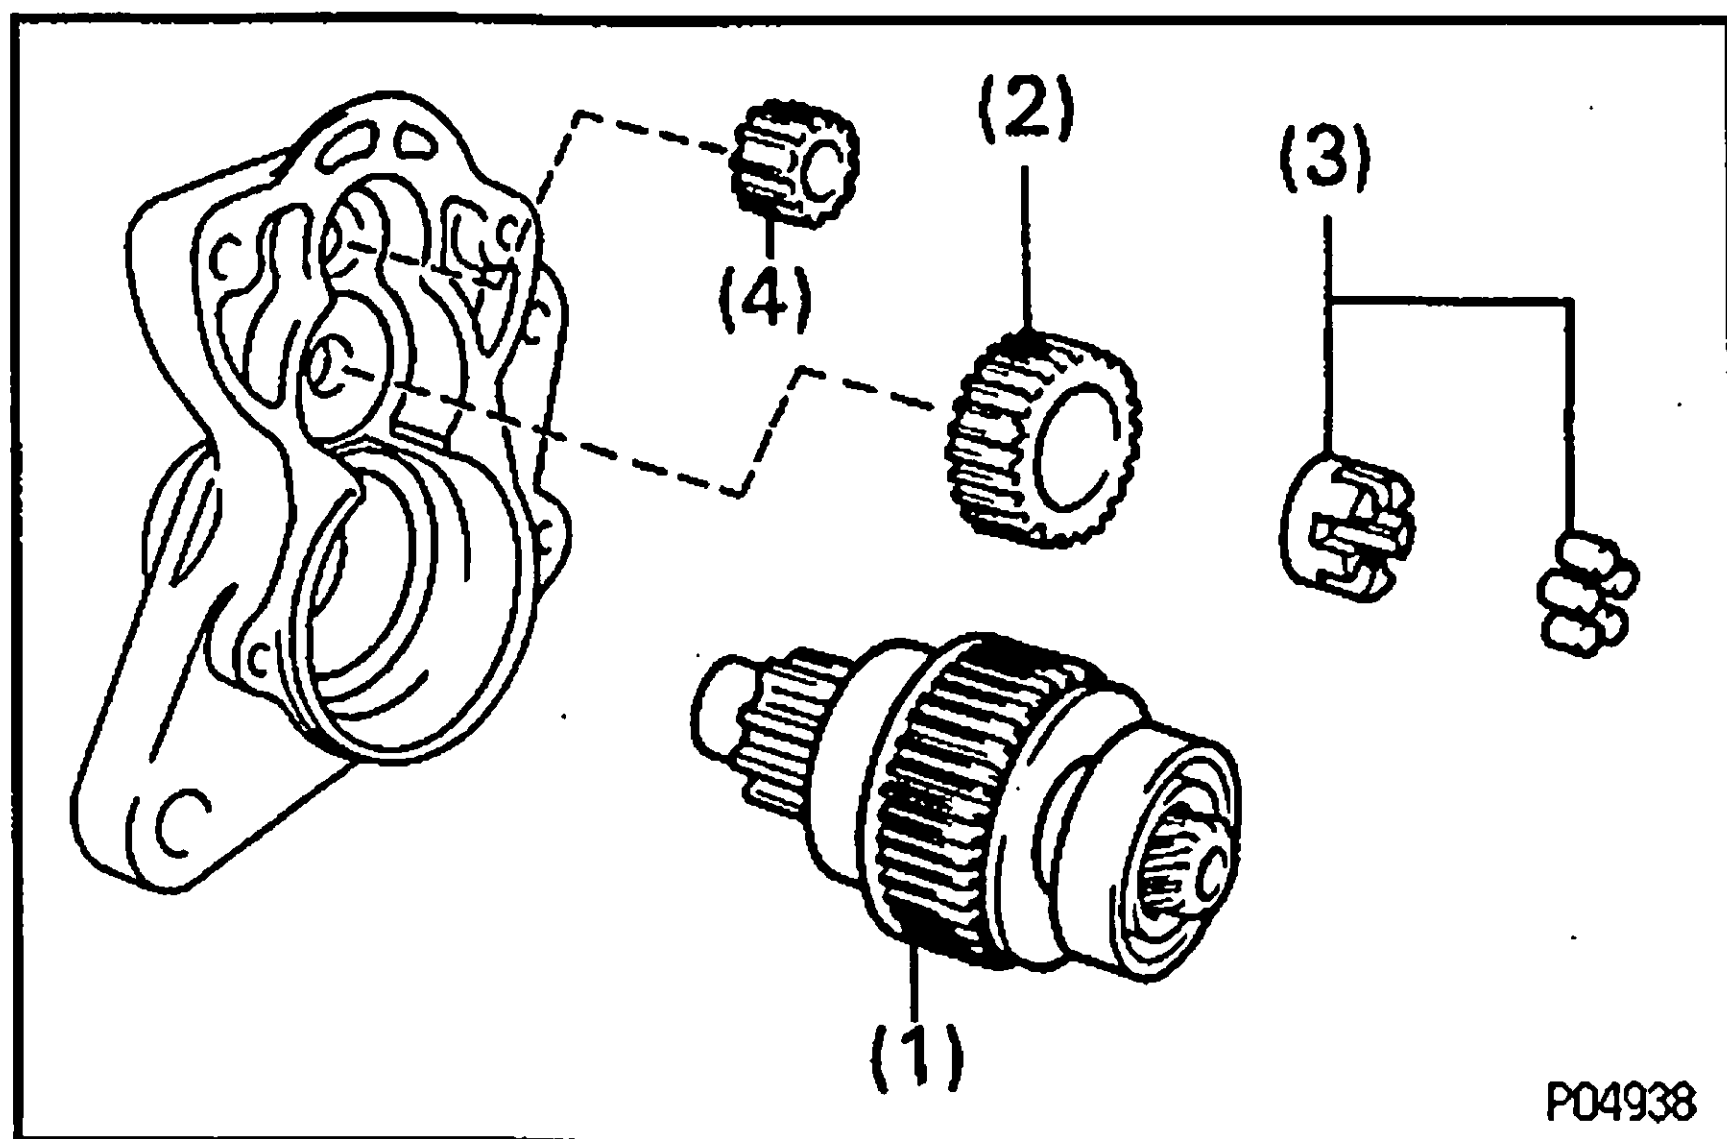

(c) Place the following parts in position on the starter housing:


- (1) Clutch assembly
- (2) Idler gear
- (3) Bearing
- (4) Pinion gear

(d) Assemble the starter housing and magnetic switch assembly and install the two screws.

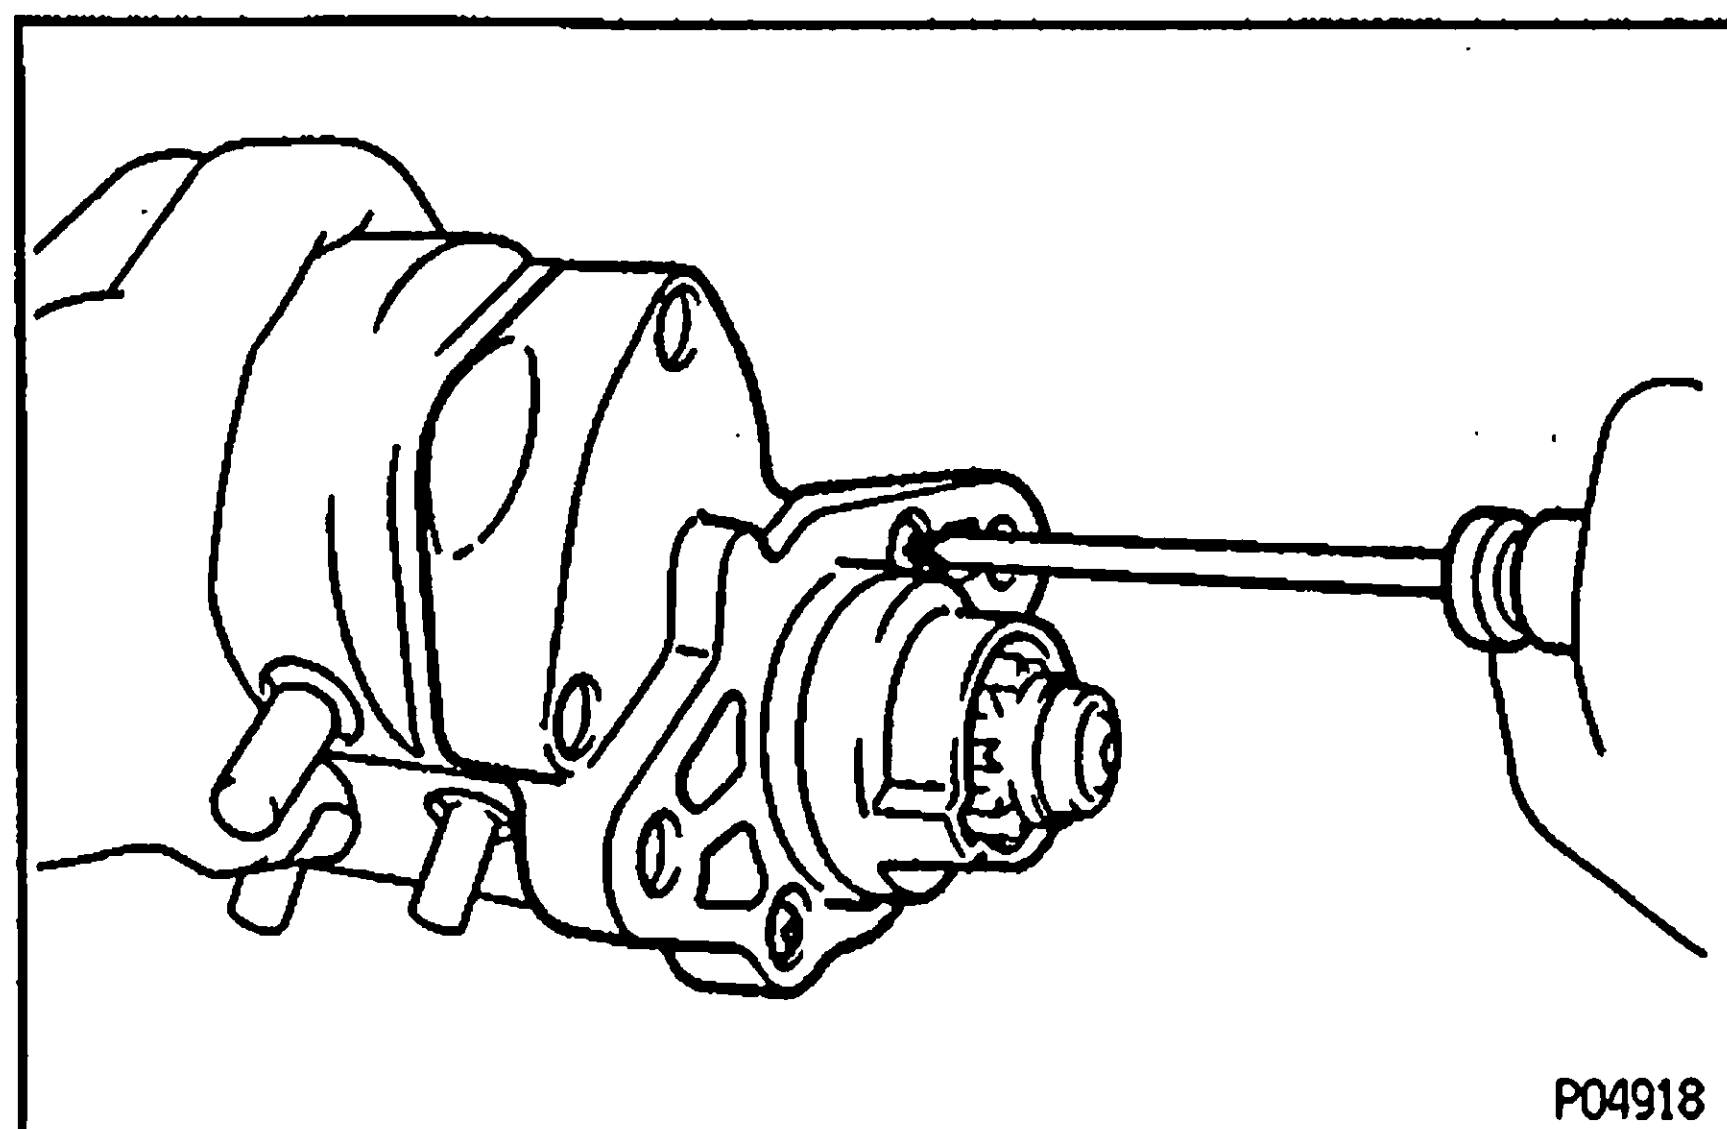


5. INSTALL FIELD FRAME AND ARMATURE ASSEMBLY

(a) Place a new O—ring in position on the field frame.

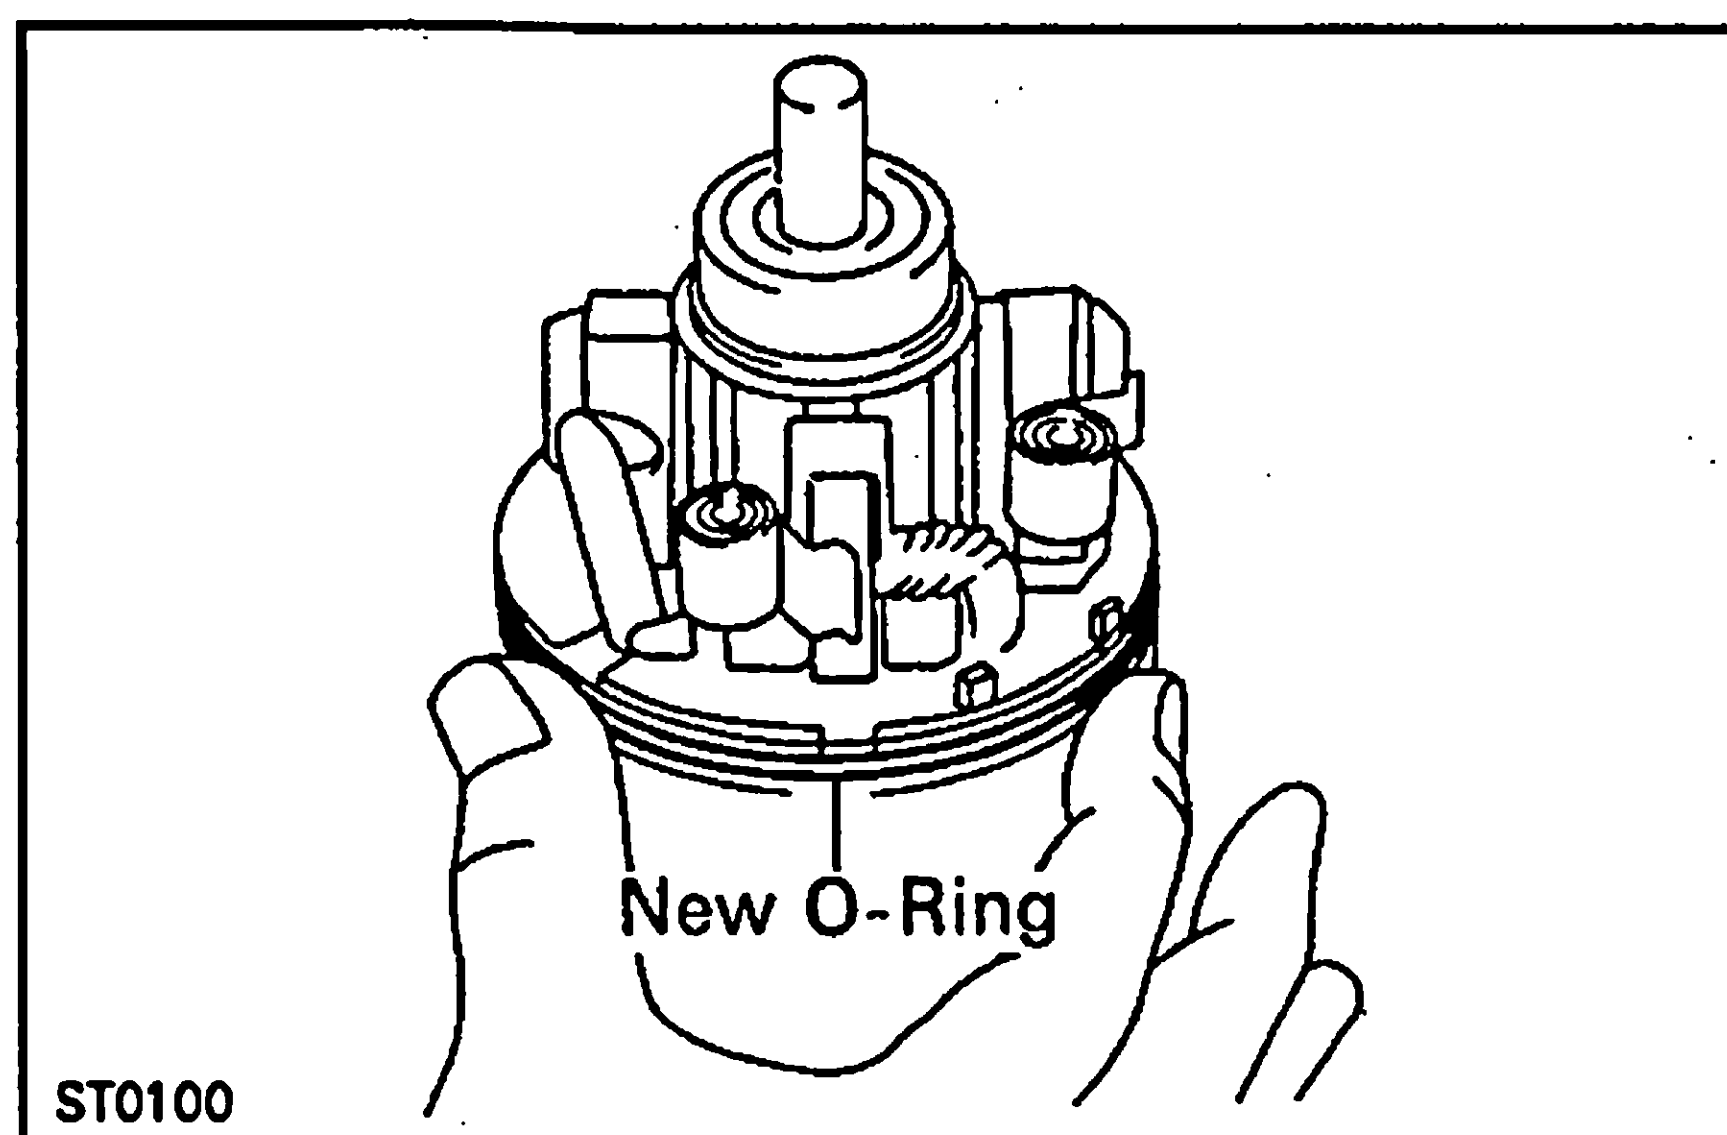


(b) Align the claws of the brush holder with the grooves of the magnetic switch, and install the field frame and armature shaft assembly.


(c) Align the punch mark of the field frame with the line of the magnet switch.

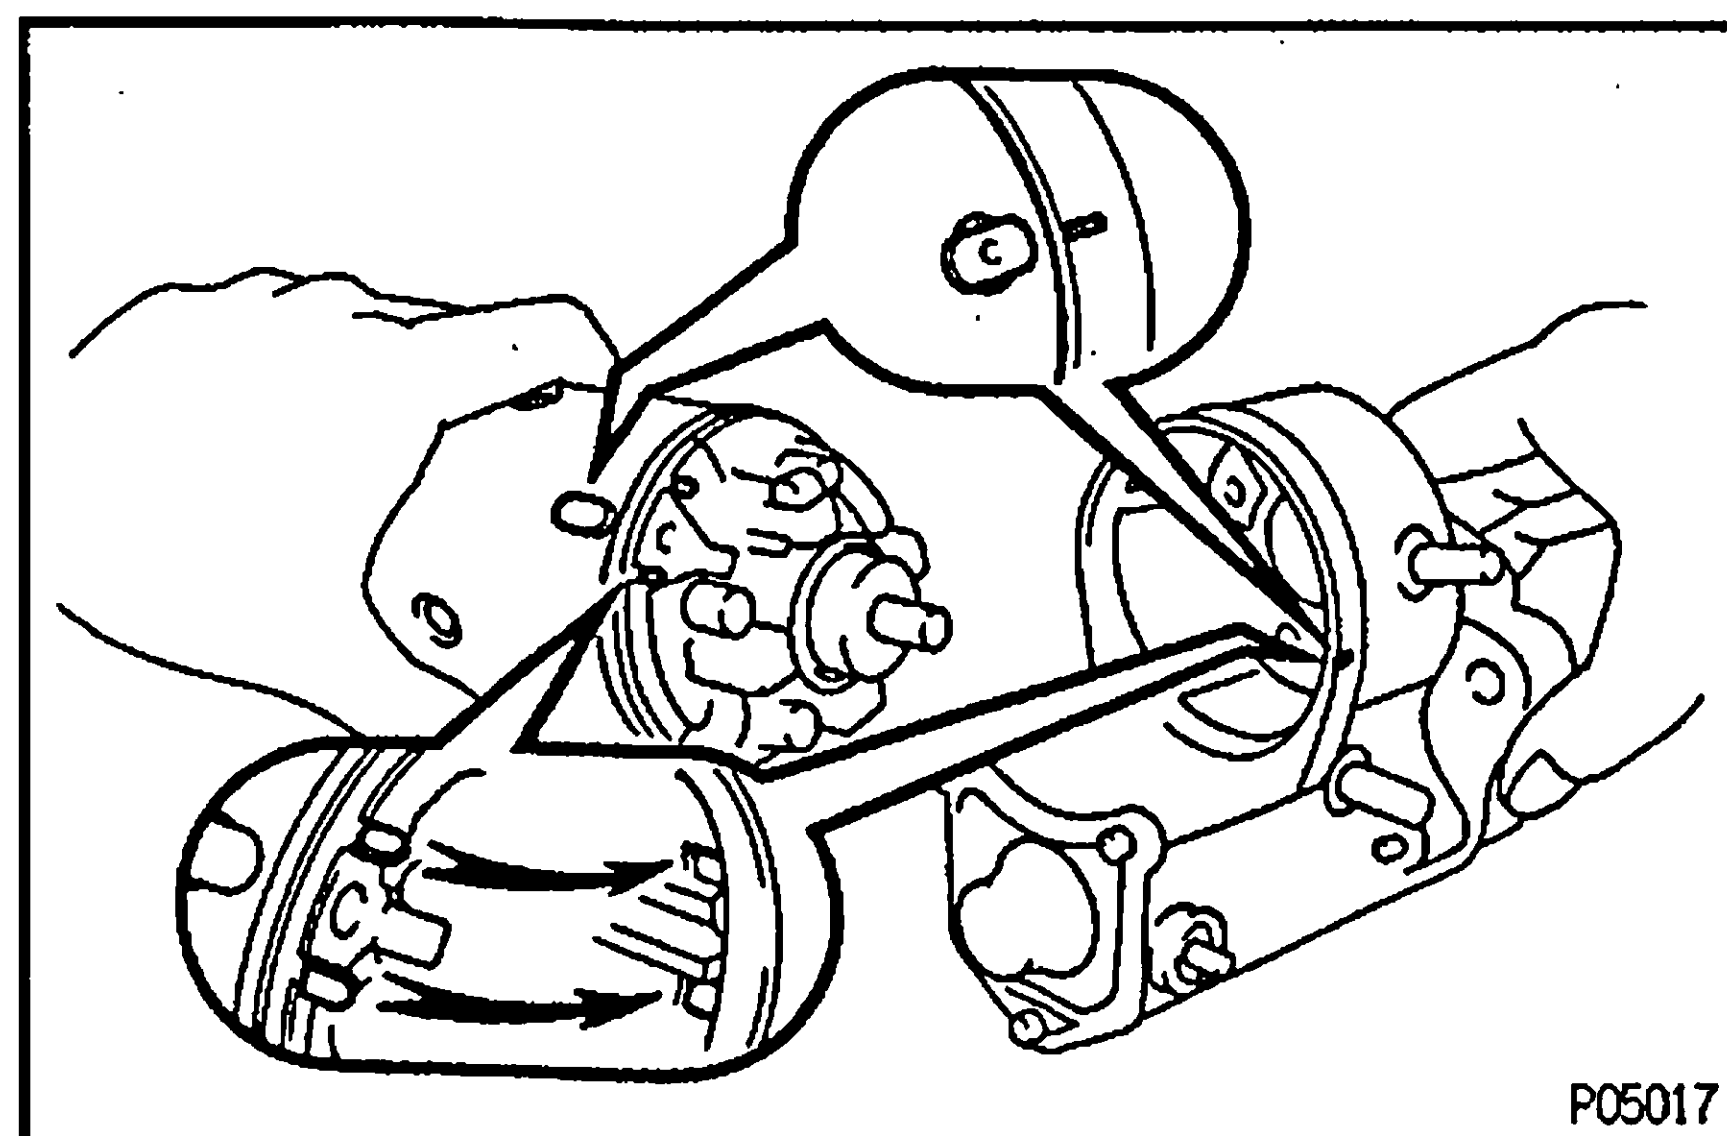





(d) Install new O—rings to the through bolts.

(e) Install the field frame and armature assembly with the two through bolts.

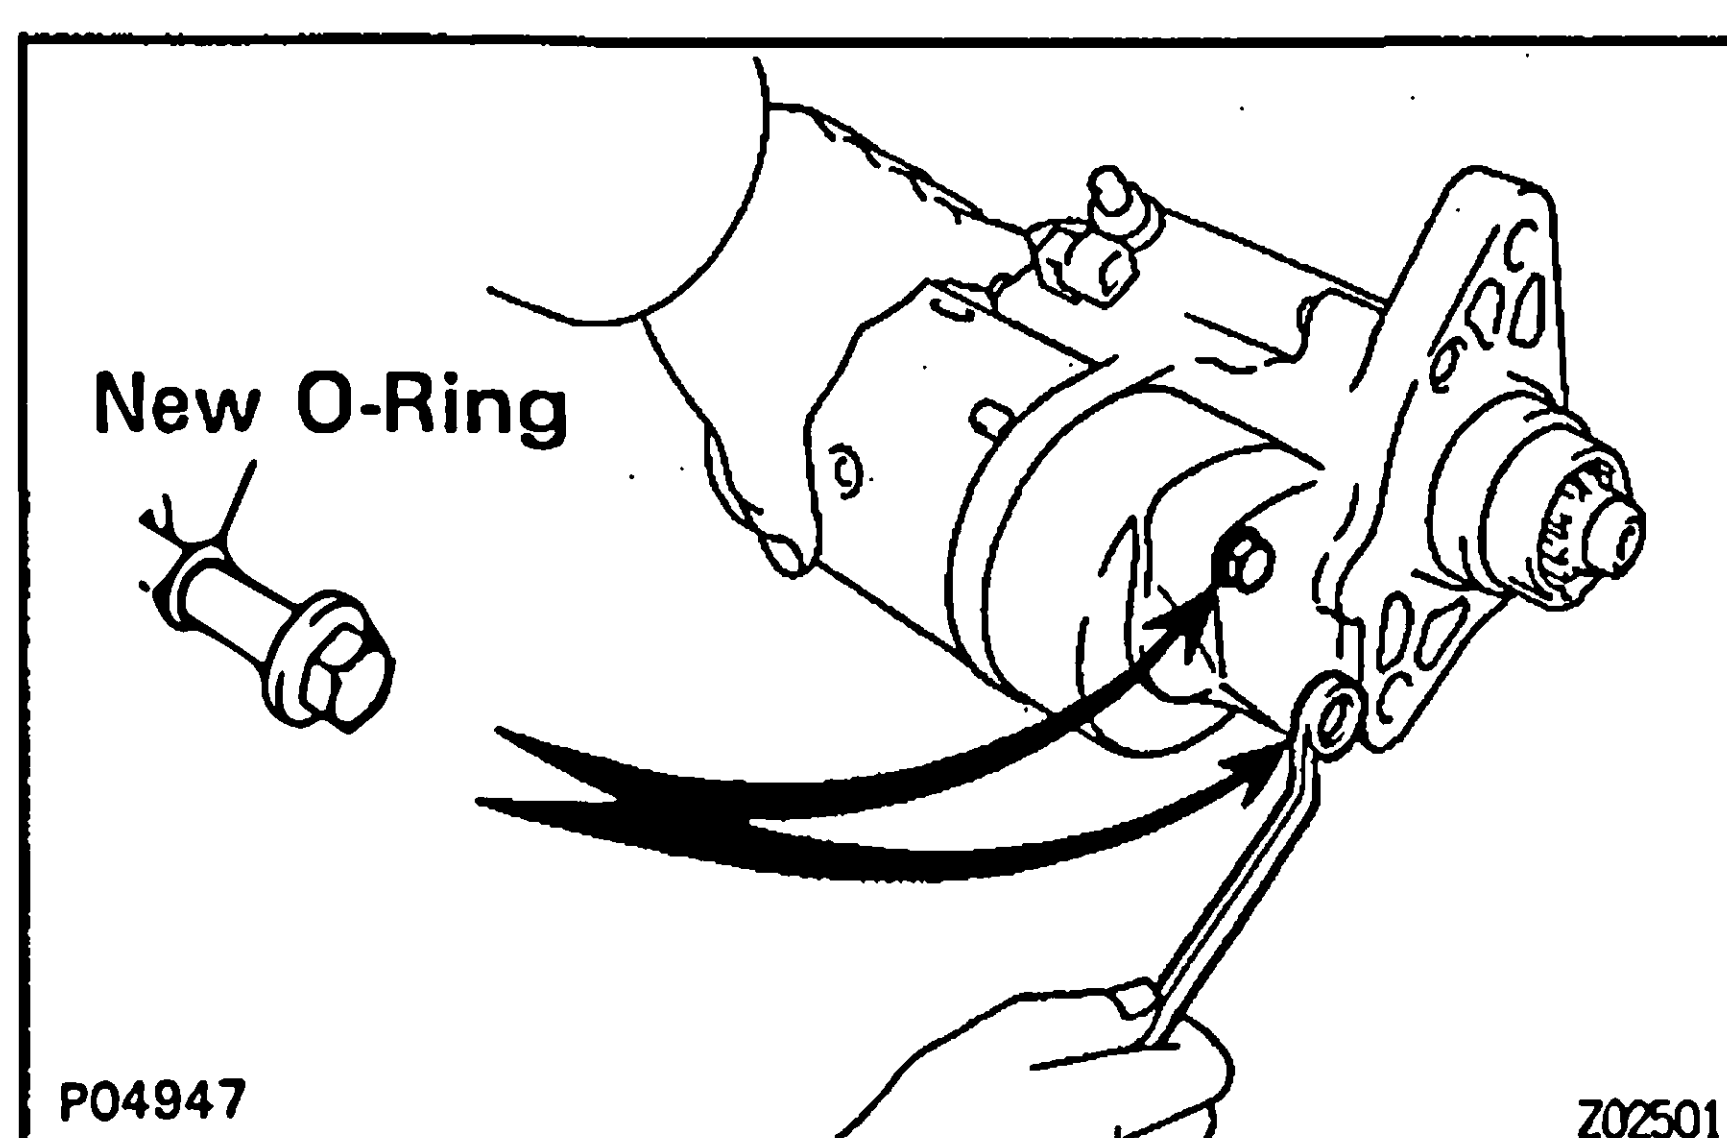

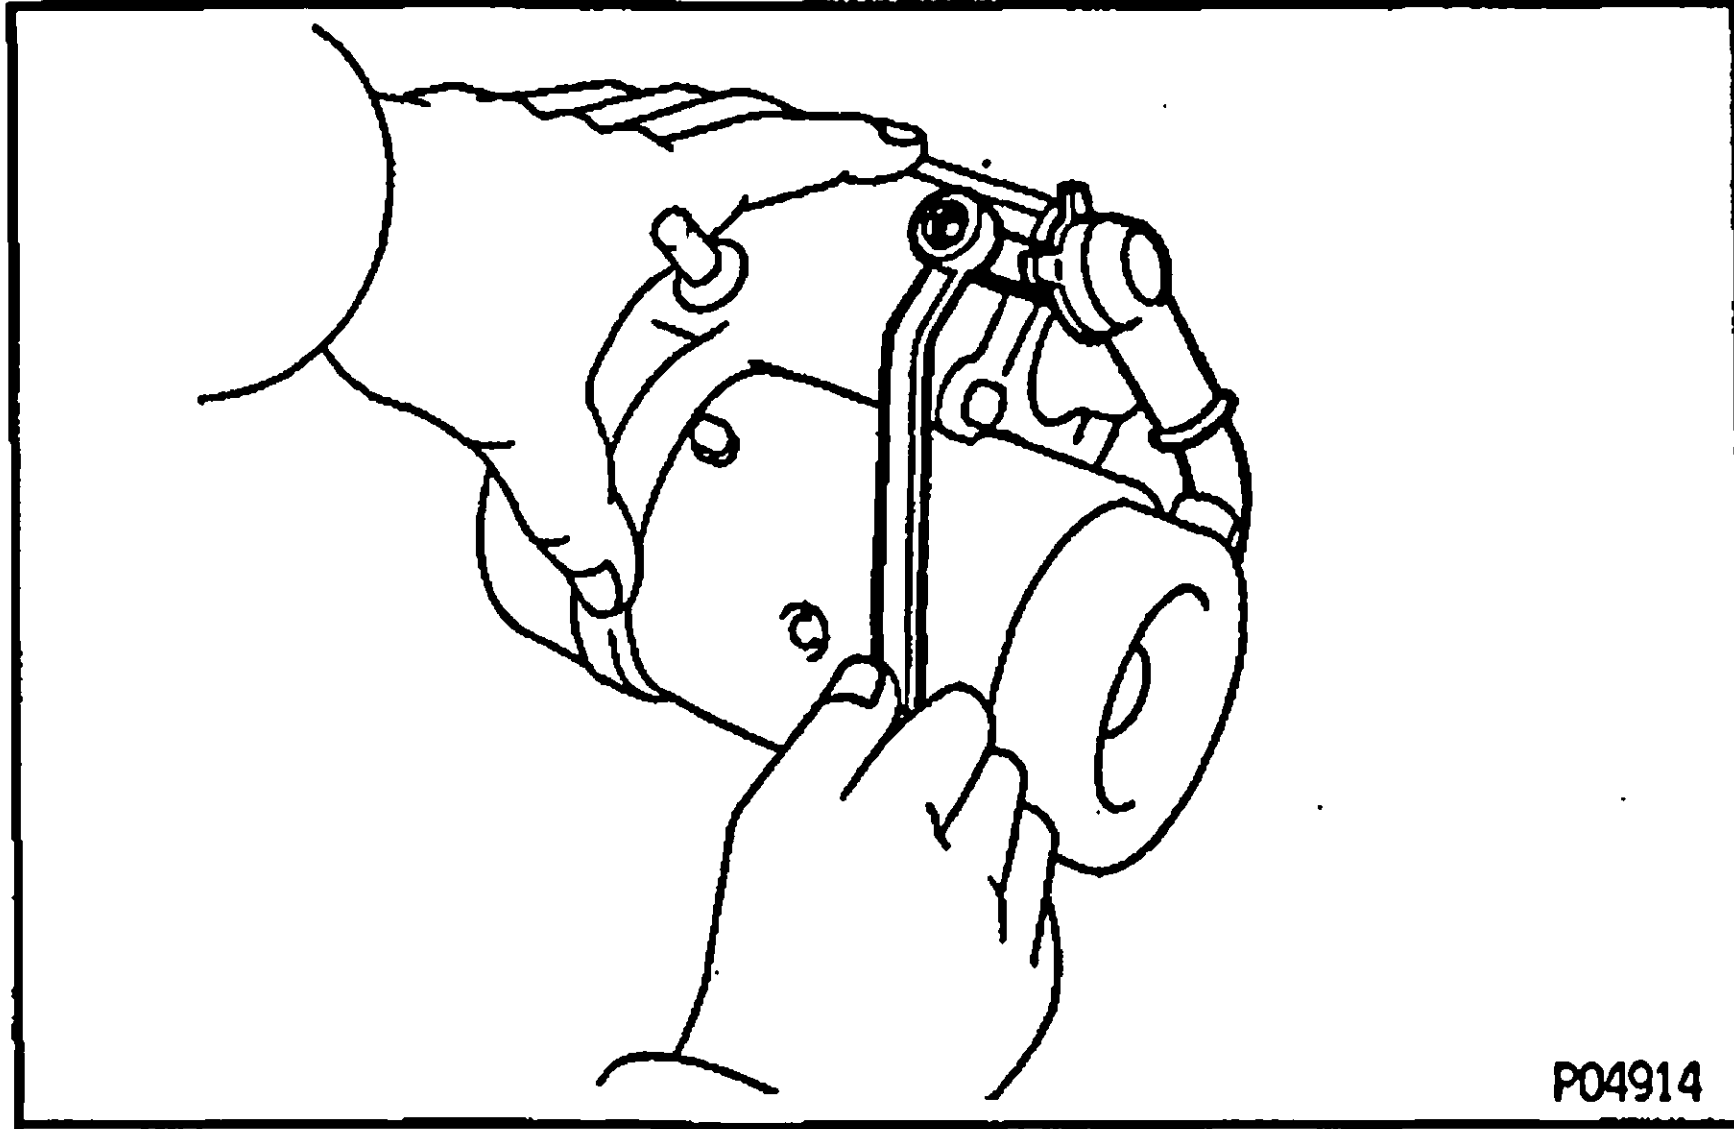

- (f) Connect the lead wire to terminal C, and install the nut.

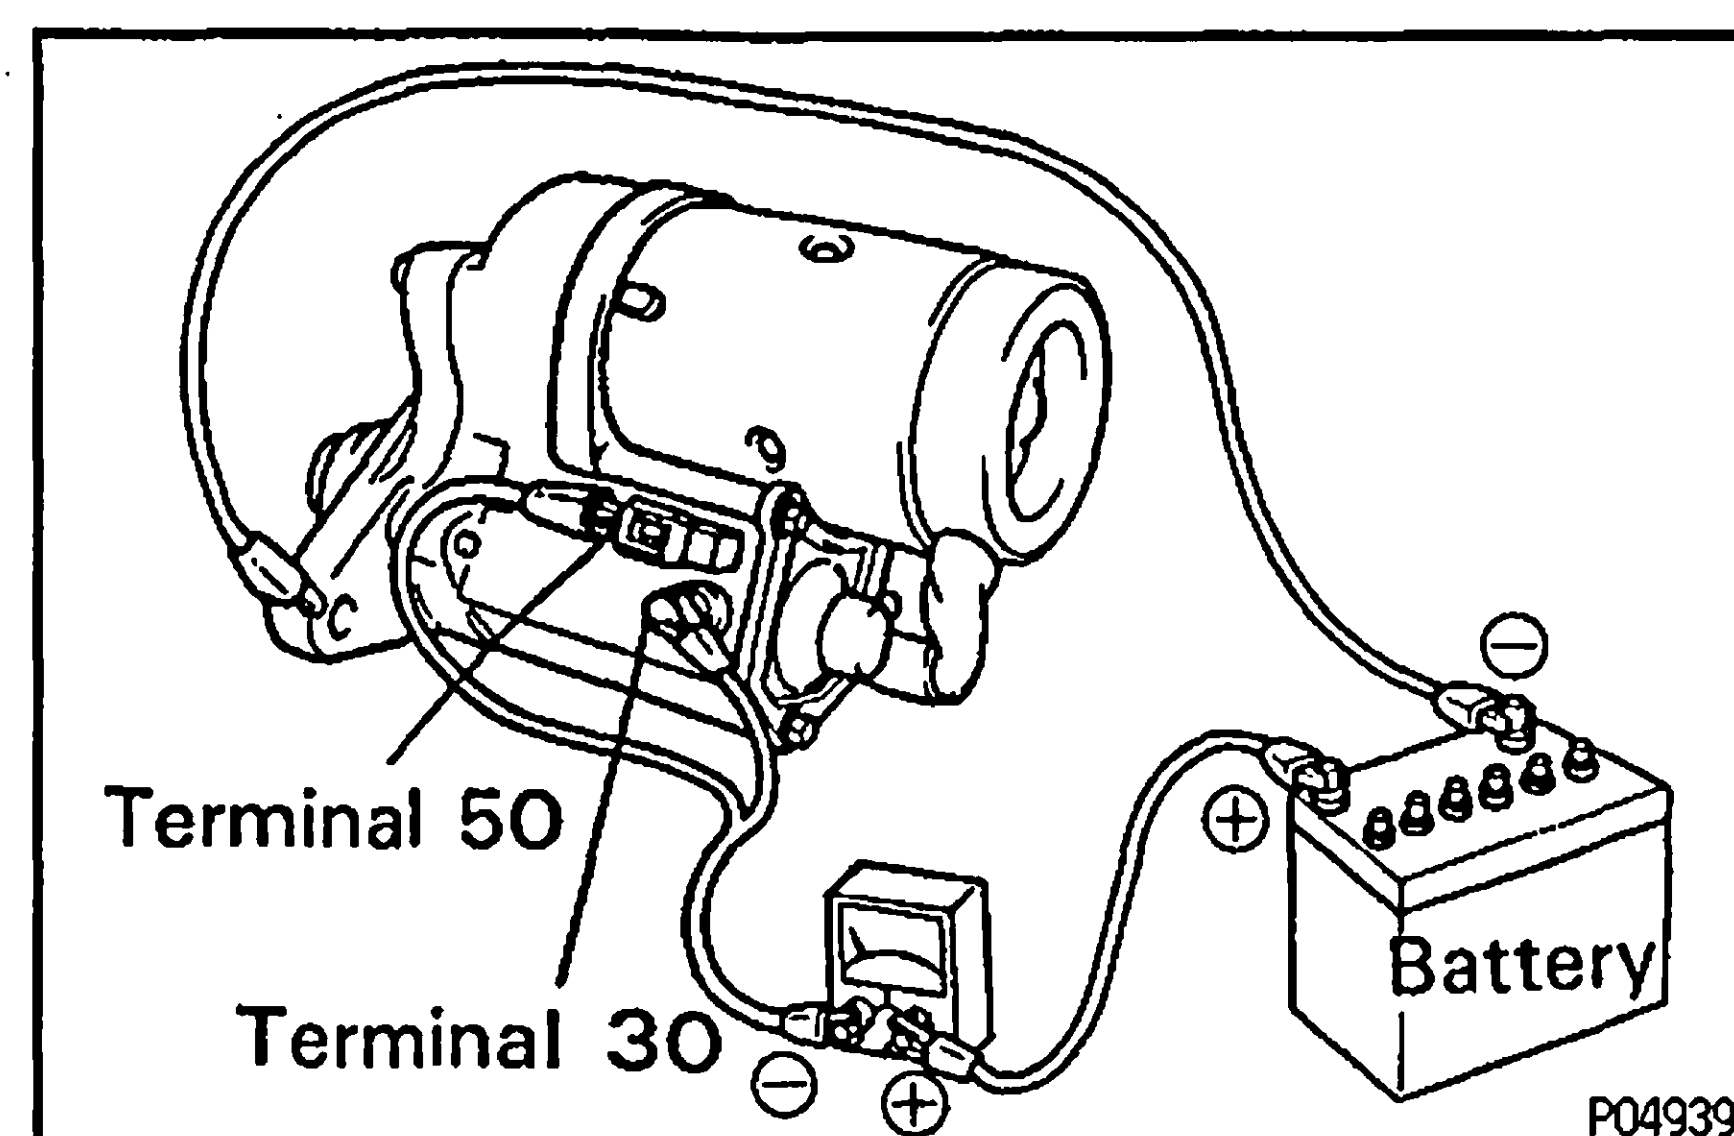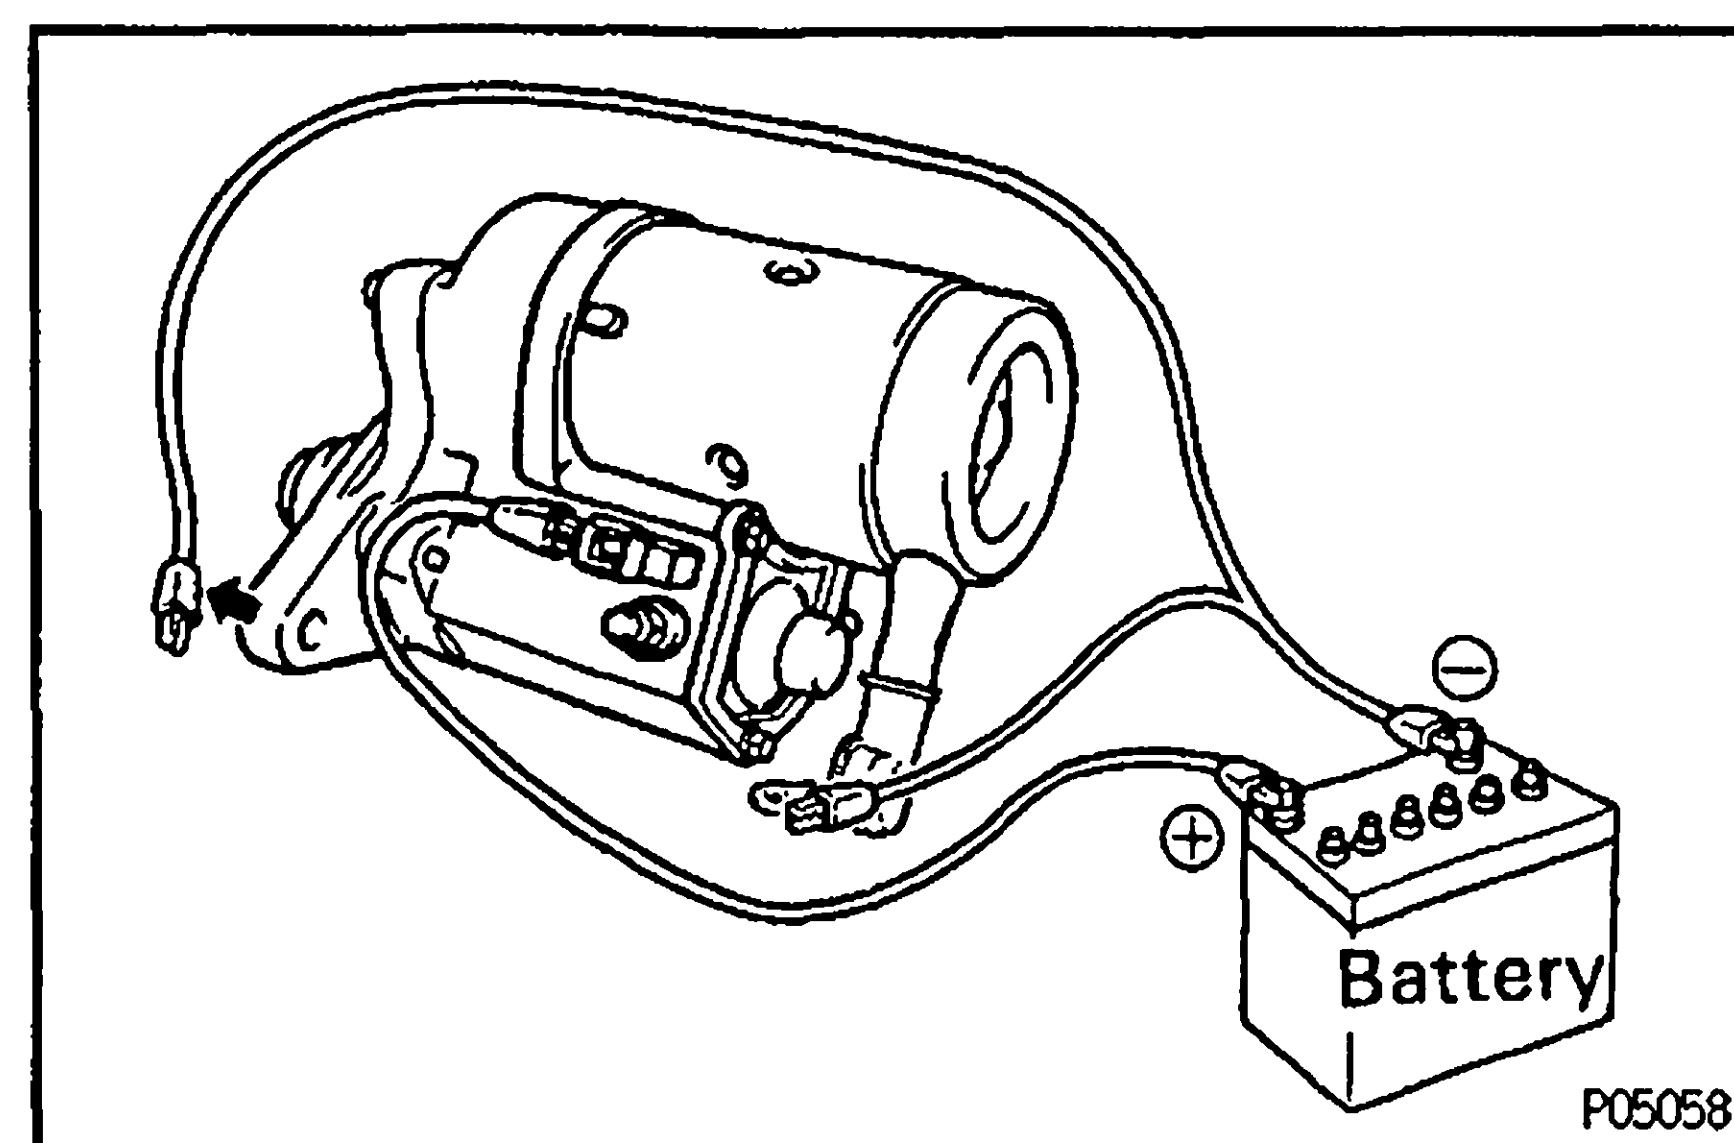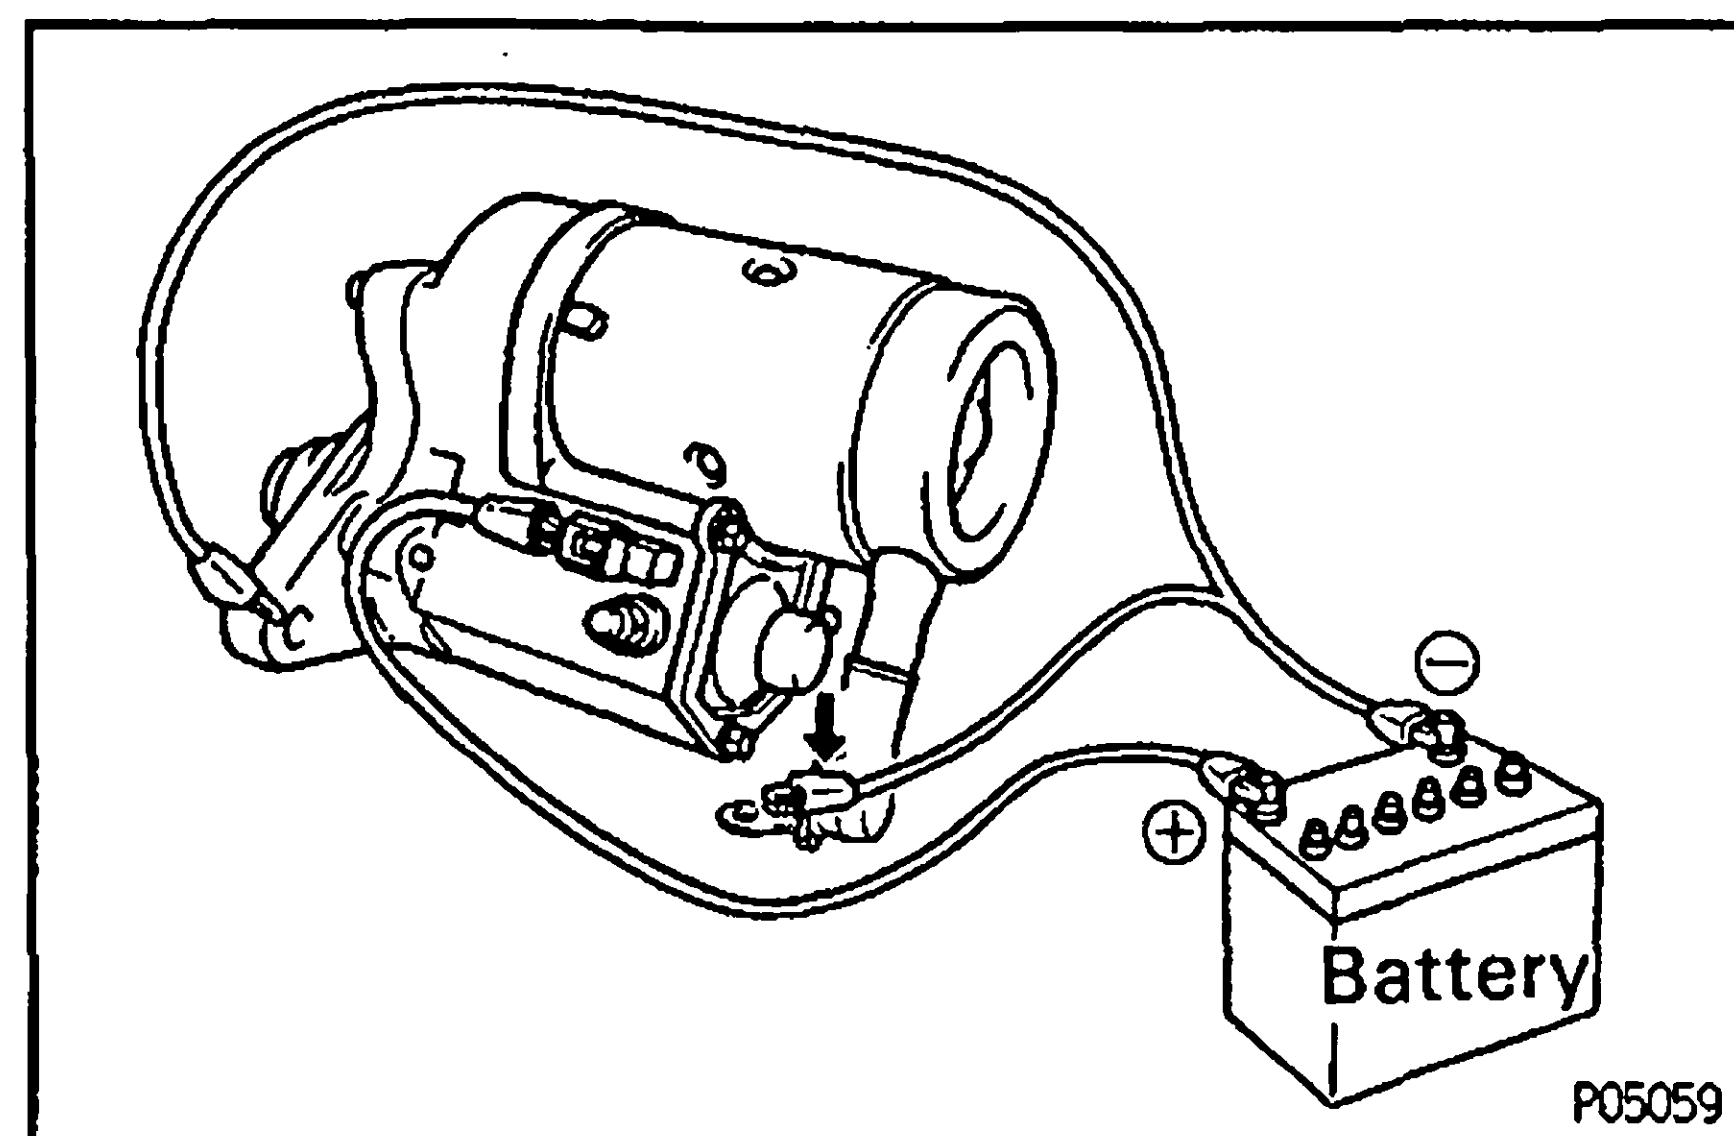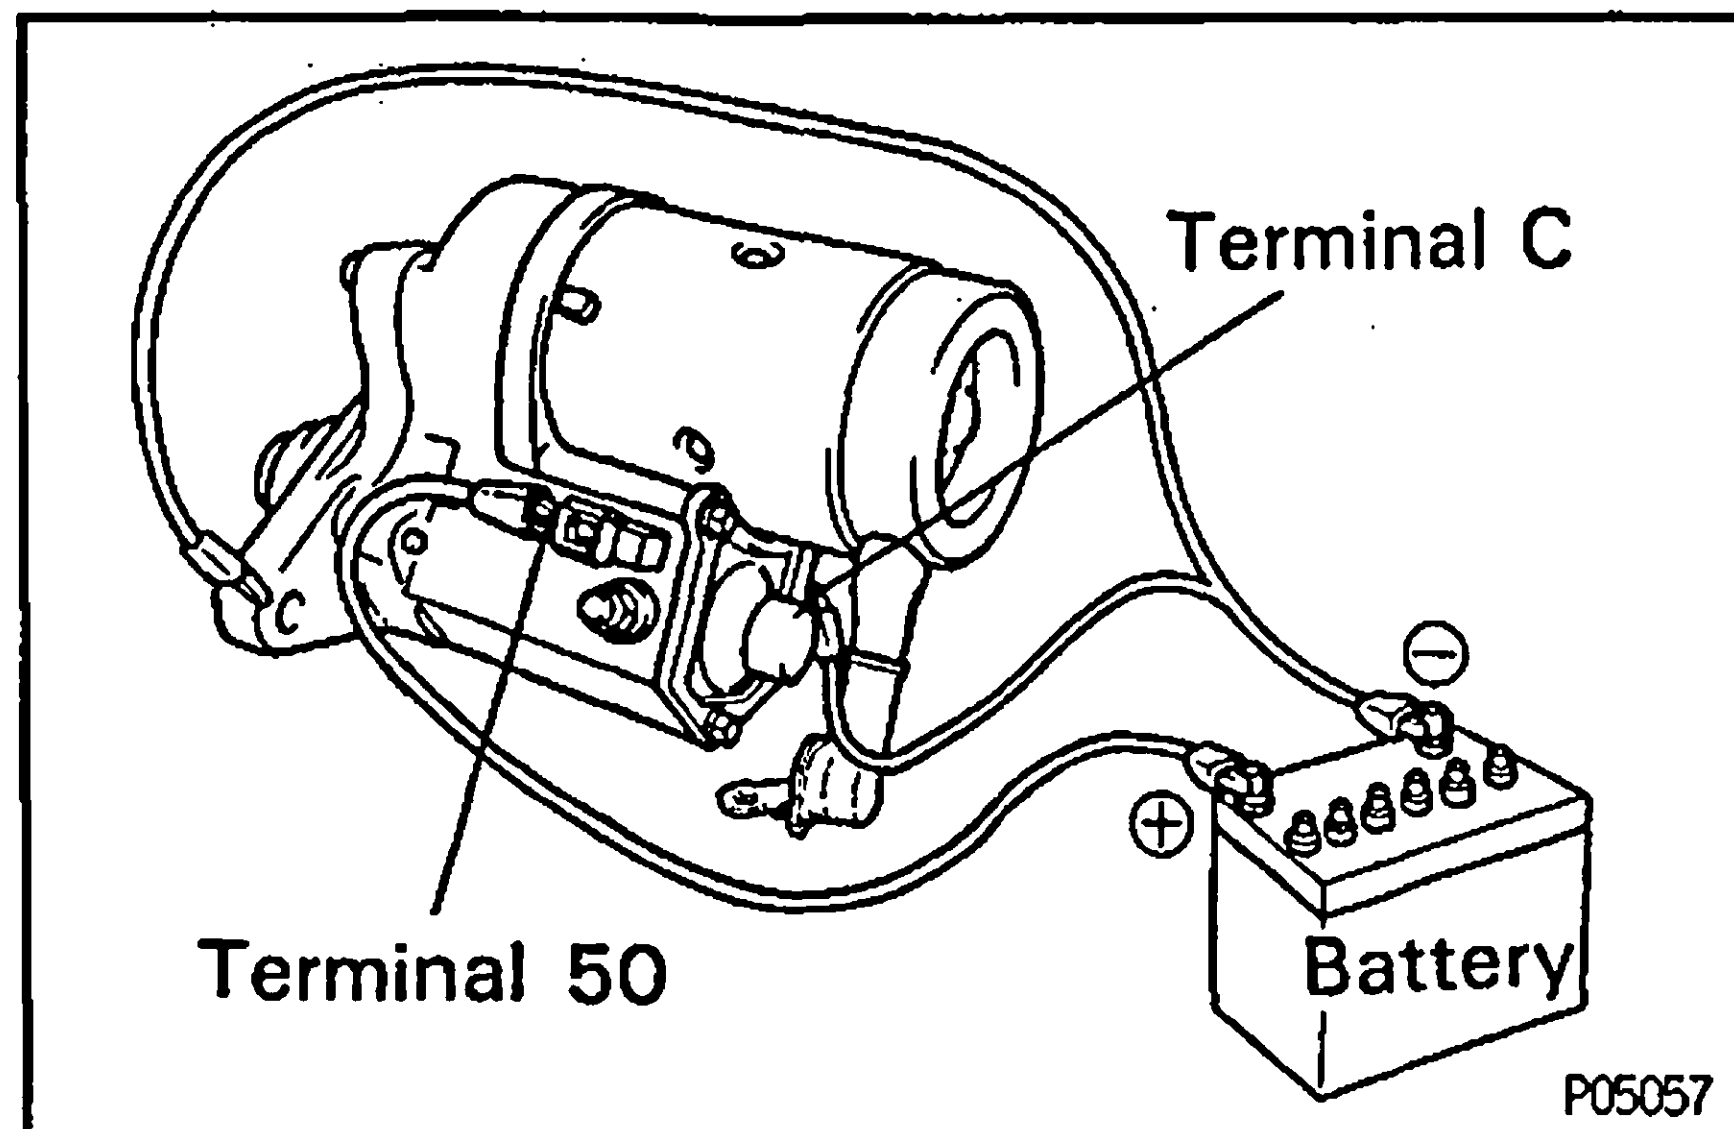

STARTER PERFORMANCE TEST

ST010-03

ST

NOTICE: These tests must be performed within 3 to 5 seconds to avoid burning out the coil.

1. PERFORM PULL-IN TEST

- Disconnect the field coil lead wire from terminal C.
- Connect the battery to the magnetic switch as shown. Check that the clutch pinion gear moves outward. If the clutch pinion gear does not move, replace the magnetic switch assembly.

2. PERFORM HOLD-IN TEST

With battery connected as above with the clutch pinion gear out, disconnect the negative (—) lead from terminal C. Check that the pinion gear remains out. If the clutch pinion gear returns inward, replace the magnetic switch assembly.

3. INSPECT CLUTCH PINION GEAR RETURN


Disconnect the negative (—) lead from the switch body. Check that the clutch pinion gear returns inward. If the clutch pinion gear does not return, replace the magnetic switch assembly.

4. PERFORM NO-LOAD PERFORMANCE TEST

- Connect the battery and ammeter to the starter as shown.
- Check that the starter rotates smoothly and steadily with the pinion gear moving out. Check that the ammeter shows the specified current.

Specified current:

120 A or less at 11.5 V

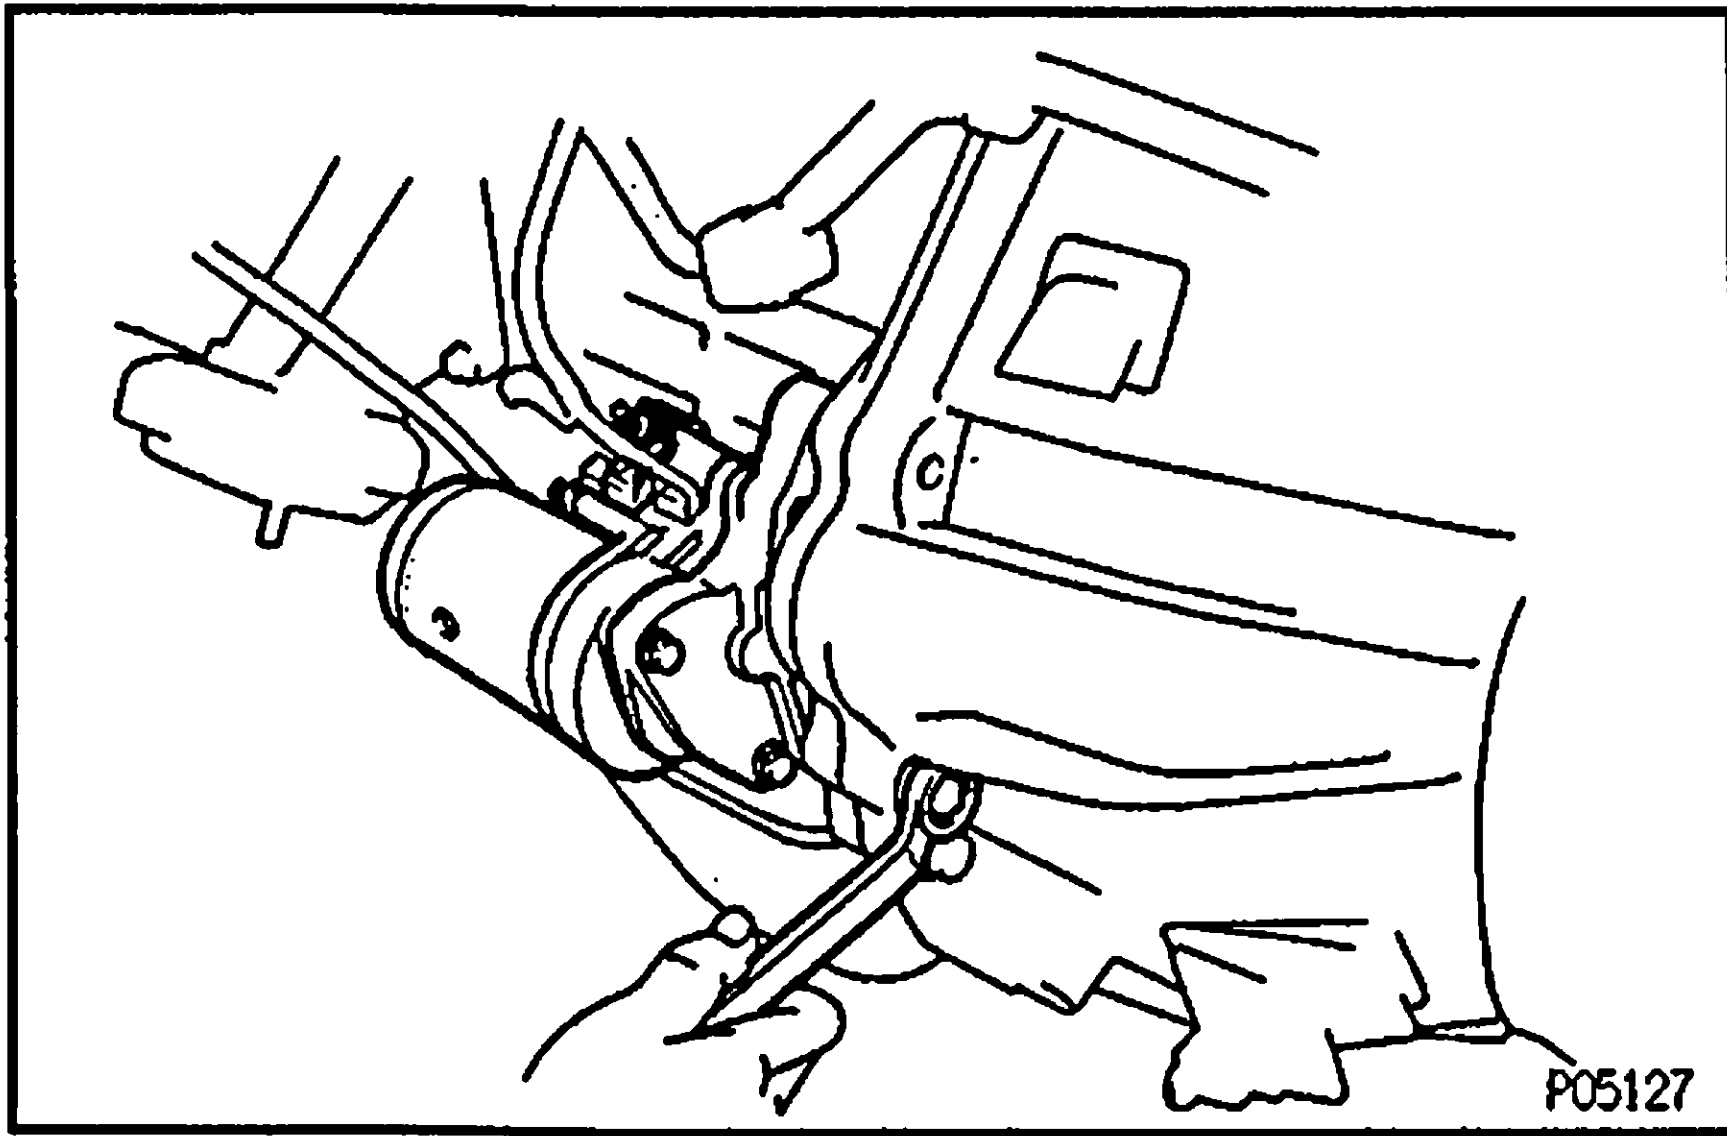

STARTER INSTALLATION

(See page ST-17)

1. INSTALL STARTER

- (a) Install the starter with the bolt and nut.
Torque: 39 N·m (400 kgf·cm, 29 ft·lbf)
- (b) Connect the starter wire with the nut.
Torque: 8.8 N·m (90 kgf·cm, 78 in·lbf)
- (c) Connect the starter connector.

2. CONNECT CABLE TO NEGATIVE TERMINAL OF BATTERY

3. CHECK THAT ENGINE STARTS

SERVICE SPECIFICATIONS
SERVICE DATA

ST015-02

Starter (1.4 kW type)	Rated voltage and output power	12 V 1.4 kW
	No—load characteristics (Current)	90 A or less at 11.5 V
	No—load characteristics (rpm)	3,000 rpm or more
	Brush length (STD)	15.0 mm (0.591 in.)
	Bursh length (Minimum)	10.0 mm (0.394 in.)
	Spring installed load	18 — 24 N (1.79 — 2.41 kgf, 3.9 — 5.3 lbf)
	Commutator	
	Diameter (STD)	30 mm (1.18 in.)
	Diameter (Minimum)	29 mm (1.14 in.)
	Undercut depth (STD)	0.6 mm (0.024 in.)
Starter (2.2 kW type)	Undercut depth (Minimum)	0.2 mm (0.008 in.)
	Circle runout (Maximum)	0.05 mm (0.0020 in.)
	Rated voltage and output power	12 V 2.2 kW
	No—load characteristics (Current)	120 A or less at 11.5 V
	No—load characteristics (rpm)	3,300 rpm or more
	Brush length (STD)	15.0 — 15.5 mm (0.591 — 0.610 in.)
	Bursh length (Minimum)	9.5 mm (0.374 in.)
	Spring installed load	26 — 32 N (2.7 — 3.3 kgf, 6.0 — 7.3 lbf)
	Commutator	
	Diameter (STD)	35 mm (1.38 in.)
	Diameter (Minimum)	34 mm (1.34 in.)
	Undercut depth (STD)	0.7 — 0.9 mm (0.024 in. — 0.035 in.)
	Undercut depth (Minimum)	0.2 mm (0.008 in.)
	Circle runout (Maximum)	0.05 mm (0.0020 in.)



TORQUE SPECIFICATIONS

ST016-01

Part tightened	N·m	kgf·cm	ft·lbf
Starter mounting bolt	39	400	29

CHAGING SYSTEM

DESCRIPTION..... CH- 2

PRECAUTIONS CH- 2

SYSTEM CIRCUIT CH- 3

OPERATION CH- 4

PREPARATION CH- 5

ON-VEHICLE INSPECTION CH- 6


ALTERNATOR CH- 10

SERVICE SPECIFICATIONS..... CH- 28

CH

DESCRIPTION

The alternator is a small, high rpm, high performance type with an IC regulator incorporated. The IC regulator uses integrated circuits and controls the voltage produced by the alternator. CH00G-02

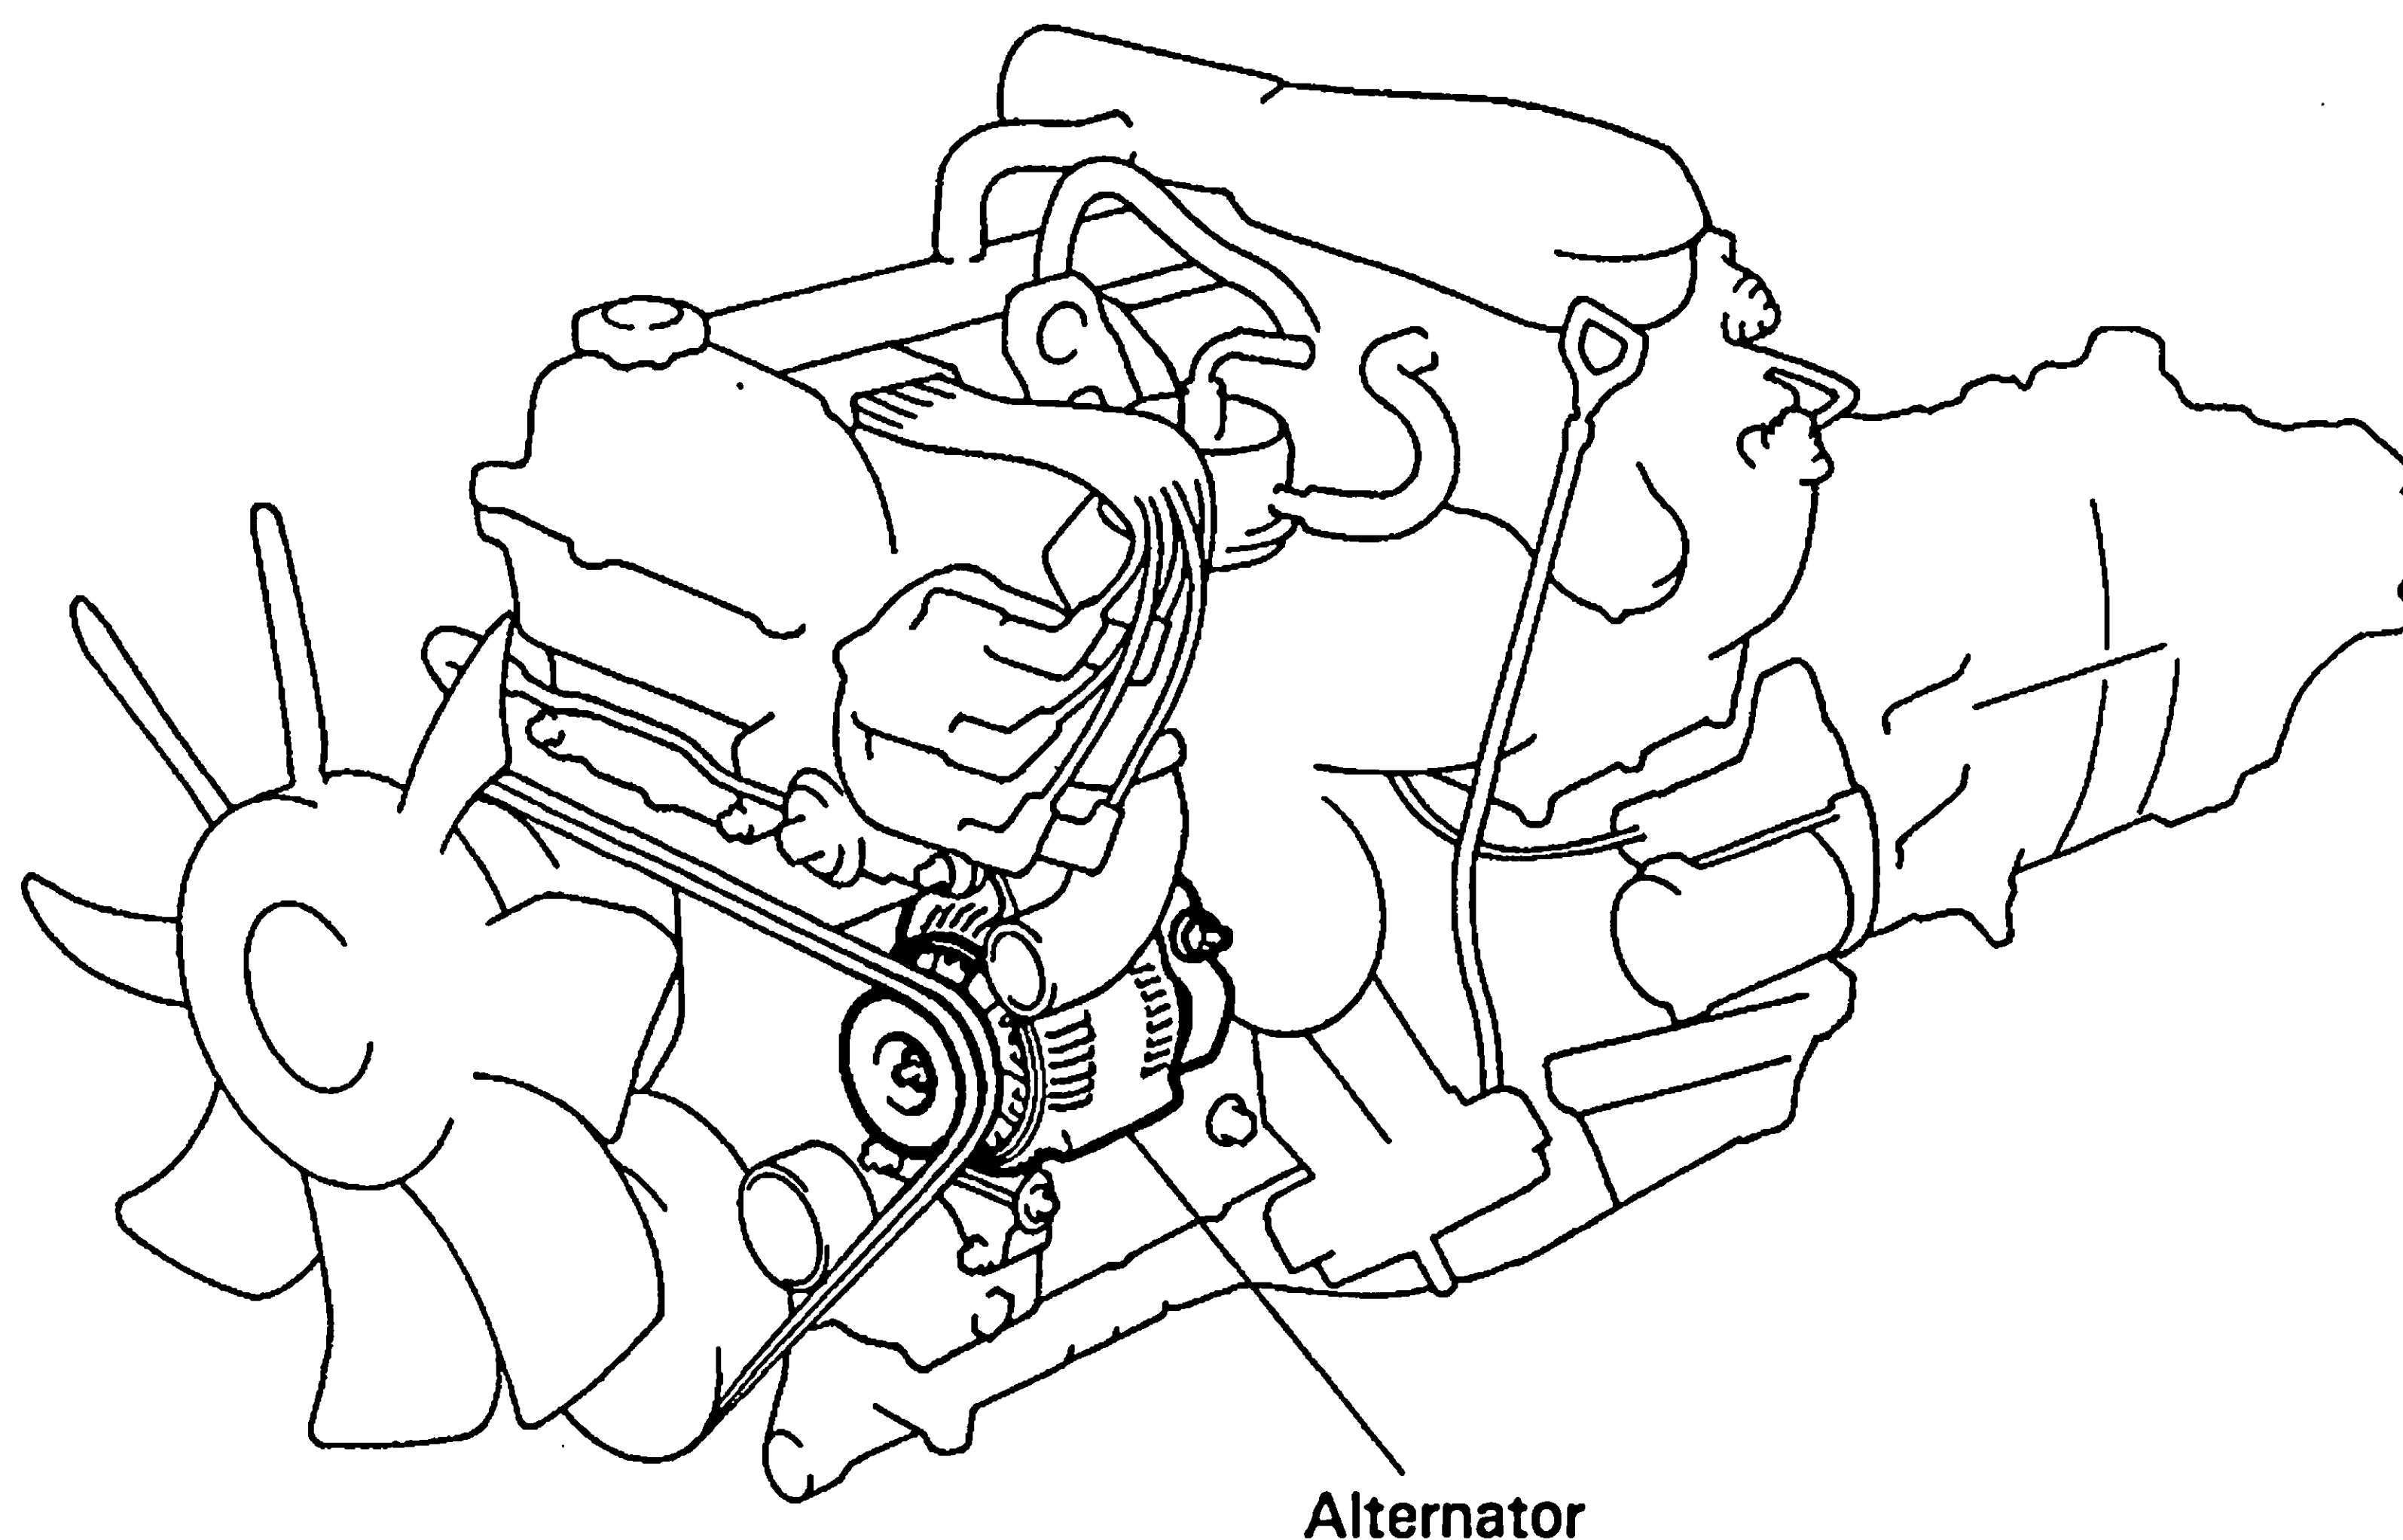

P04784



PRECAUTIONS

1. Check that the battery cables are connected to the correct terminals.
2. Disconnect the battery cables when the battery is given a quick charge.
3. Do not perform tests with a high voltage insulation resistance tester.
4. Never disconnect the battery while the engine is running.

CH00J-01

CH

  FZJ 70 Series








OPERATION

When the ignition switch is turned ON, current from the battery flows from terminal L of the alternator through the IC regulator to terminal E, causing the discharge warning light to light up. Then when the engine is started, the voltage output increases as the alternator rpm increases. When the voltage output becomes greater than the battery voltage, current for recharging flows from terminal B. Simultaneously, voltage at terminal L increases and the potential difference between battery and terminal L disappears, causing the discharge warning light to go off. When the voltage output exceeds the regulator adjustment voltage, the transistor inside the IC regulator regulates the voltage so that the voltage from the alternator remains constant.

CH00N-01

PREPARATION
SST (SPECIAL SERVICE TOOLS)


CH000-02

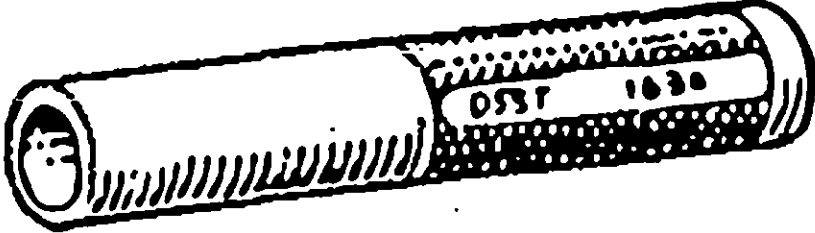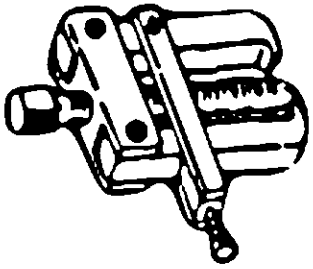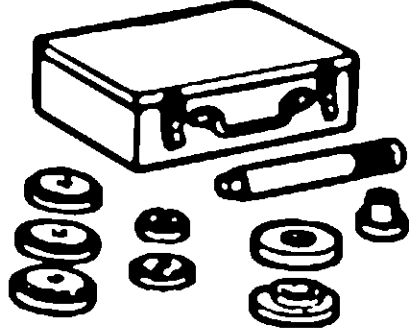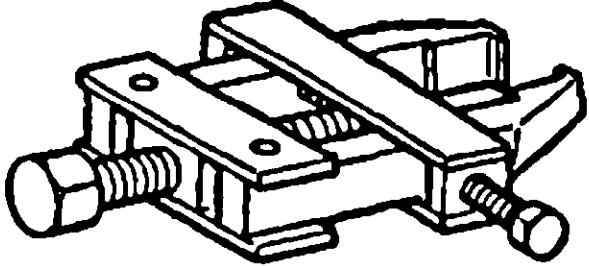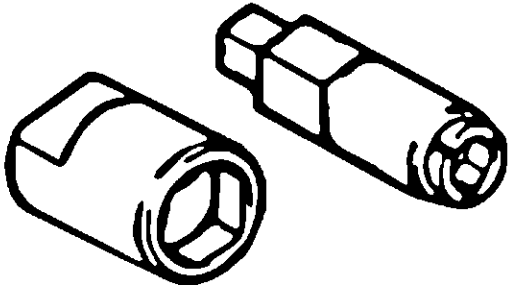	09285-76010 Injection Pump Camshaft Bearing Cone Replacer	Rotor rear bearing cover
	09286-46011 Injection Pump Spline Shaft Puller	Rectifier end frame for 55 A and 80 A types
	09608-20012 Front Hub & Drive Pinion Bearing Tool Set	
	(09608-00030) Replacer	Rotor front bearing
	09820-00021 Alternator Rear Bearing Puller	Rectifier end frame for 50 A type Rotor rear bearing
	09820-00030 Alternator Rear Bearing Replacer	Rotor rear bearing
	09820-63010 Alternator Pulley Set Nut Wrench Set	

CH

RECOMMENDED TOOLS


CH008-01

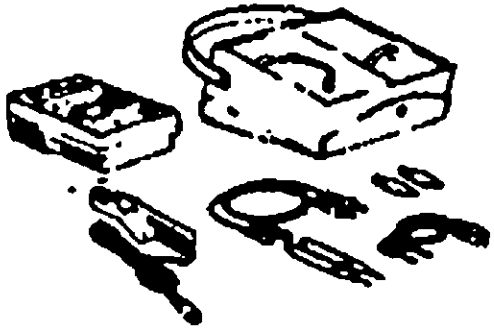	09082-00015 TOYOTA Electrical Tester	
---	--------------------------------------	--

EQUIPMENT

CH00U-01

Ammeter(A)	
Battery specific gravity gauge	
Belt tension gauge	
Torque wrench	
Vernier calipers	Rotor (Slip ring), Brush

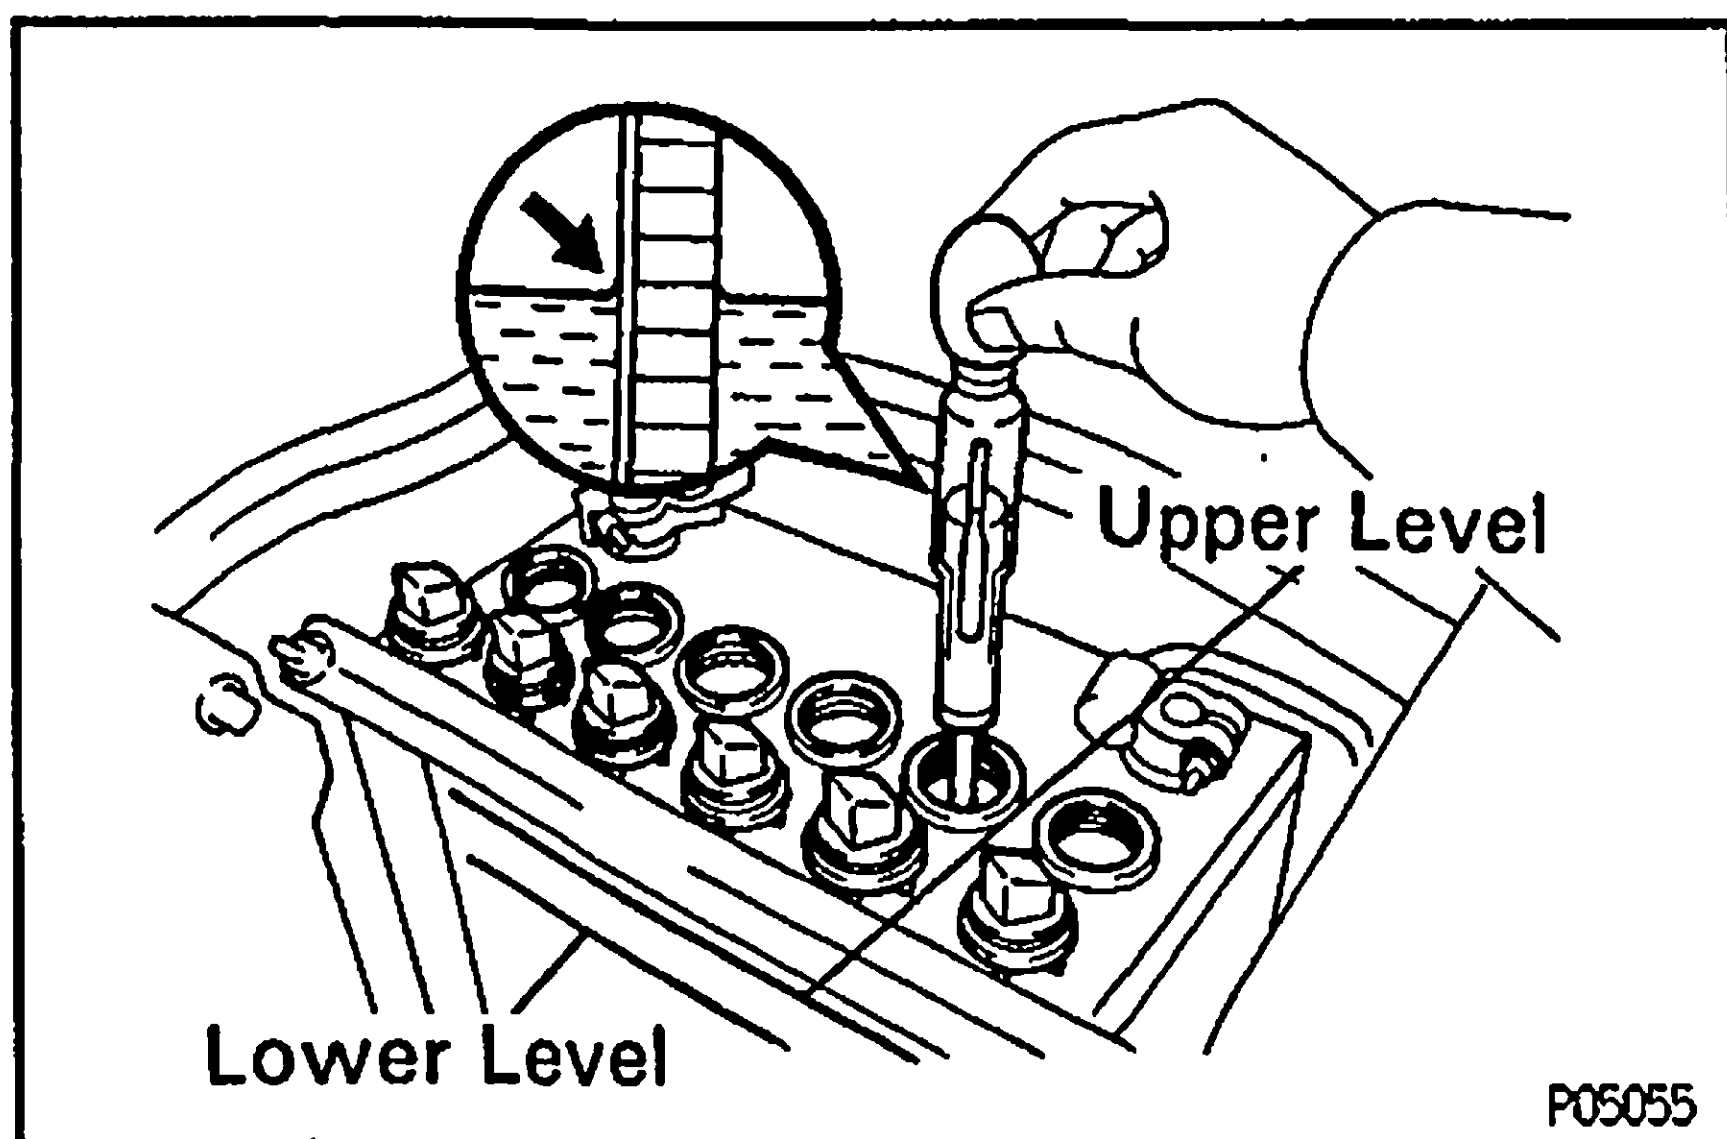

ON—VEHICLE INSPECTION

CH028-01

1. CHECK BATTERY SPECIFIC GRAVITY AND ELECTROLYTE LEVEL


- Check the electrolyte quantity of each cell.
If insufficient, refill with distilled (or purified) water.
- Check the specific gravity of each cell.

Standard specific gravity:

1.25 — 1.27 when fully charged at 20°C (68°F)

If the gravity is less than specification, charge the battery.

CH

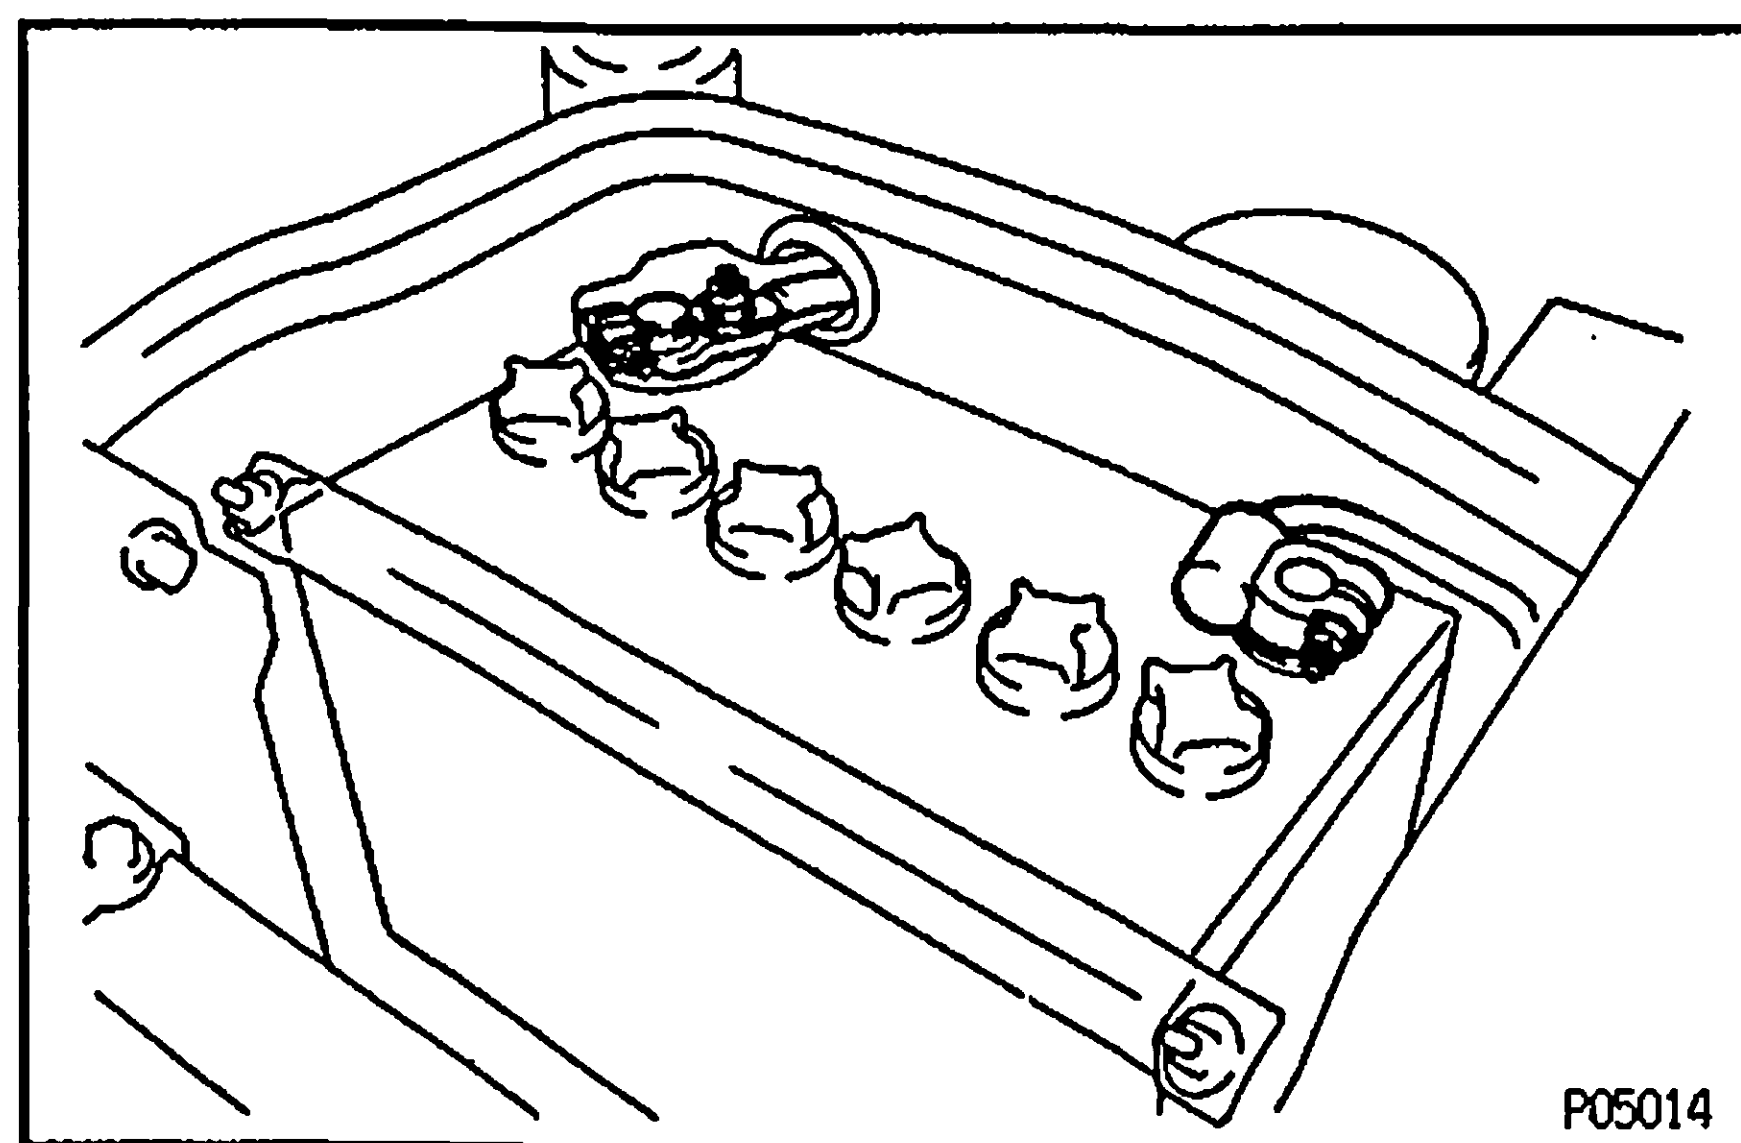

2. CHECK BATTERY TERMINALS, FUSIBLE LINK AND FUSES

- Check that the battery terminals are not loose or corroded.
- Check the fusible link and fuses for continuity.

FZJ70 series

Fusible link:

AM1 1.25 B

Fuse:

ENGINE 15 A

CHG 7.5 A

FZJ80 series:


Fusible link:

MAIN 2.0 L

Fuse:


IGN 7.5 A

CHG 7.5 A

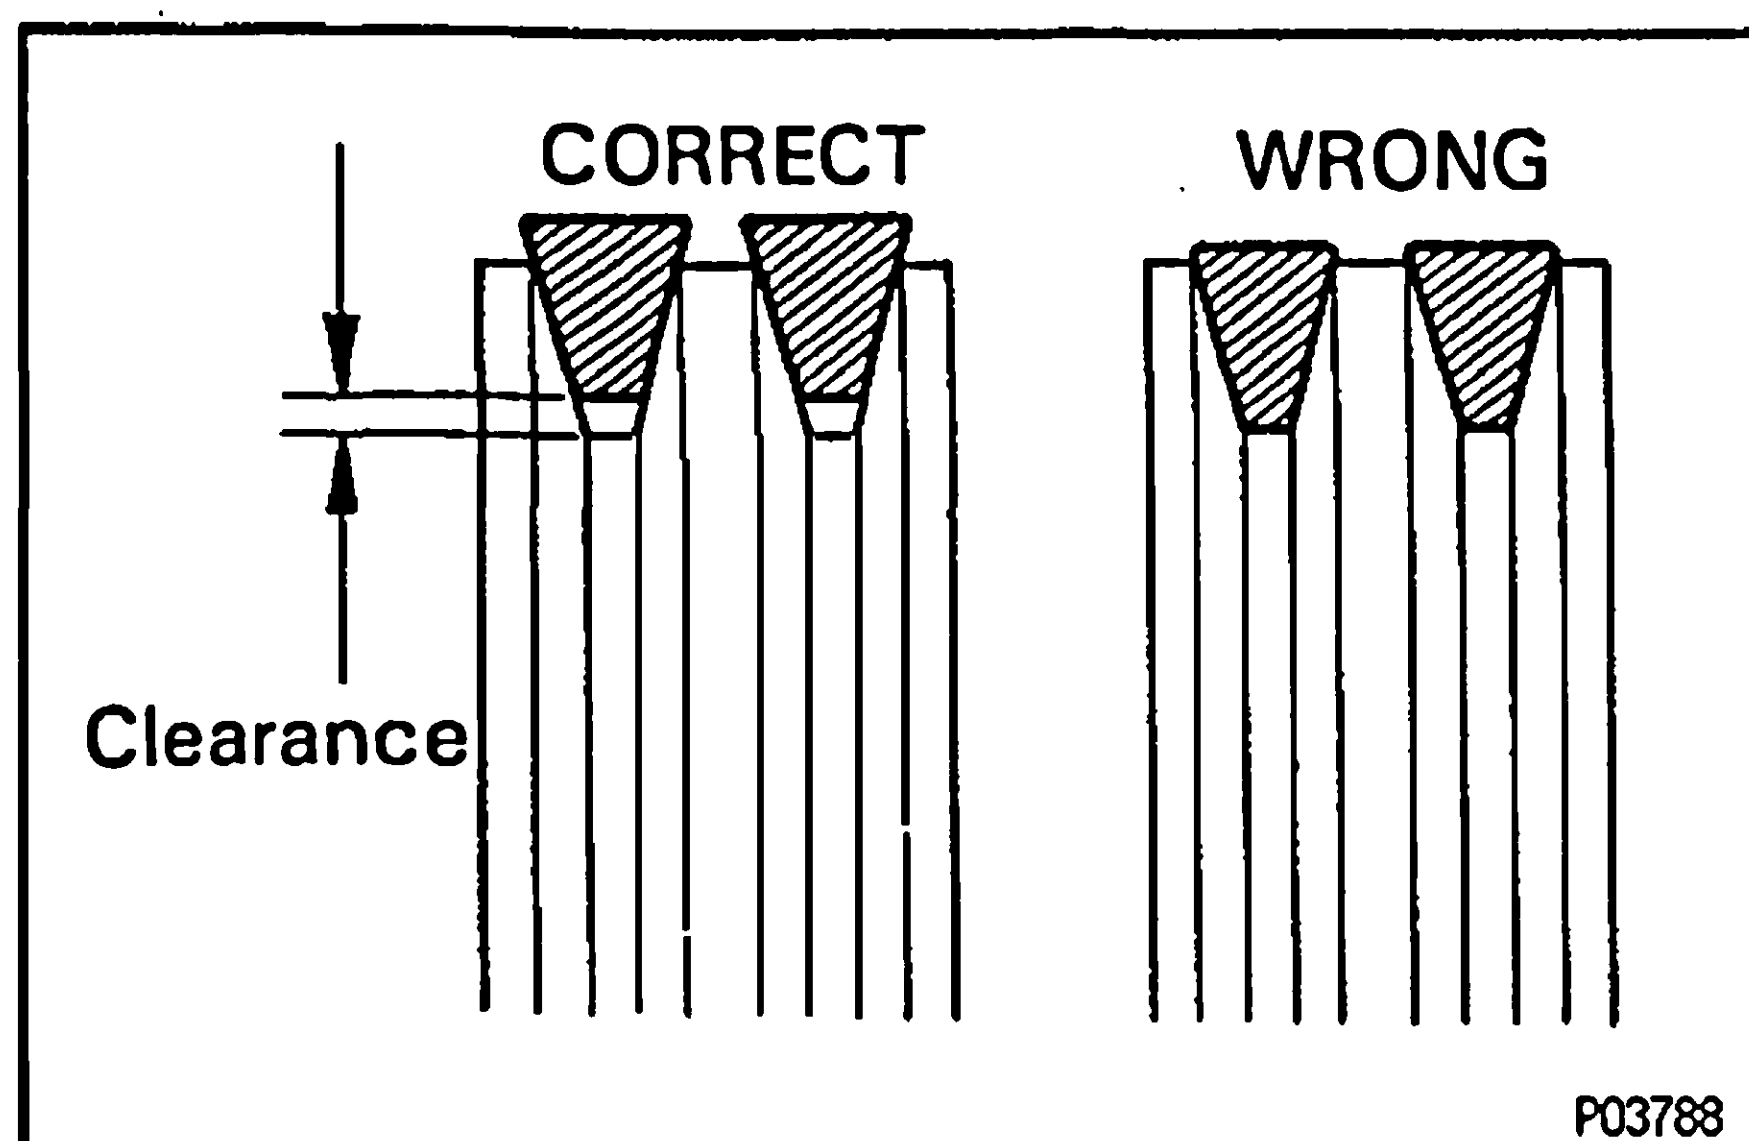

3. INSPECT DRIVE BELTS

- Visually check the drive belt for cracks, oiliness or wear. Check that the belt does not touch the bottom of the pulley groove.
If necessary, replace the drive belt.

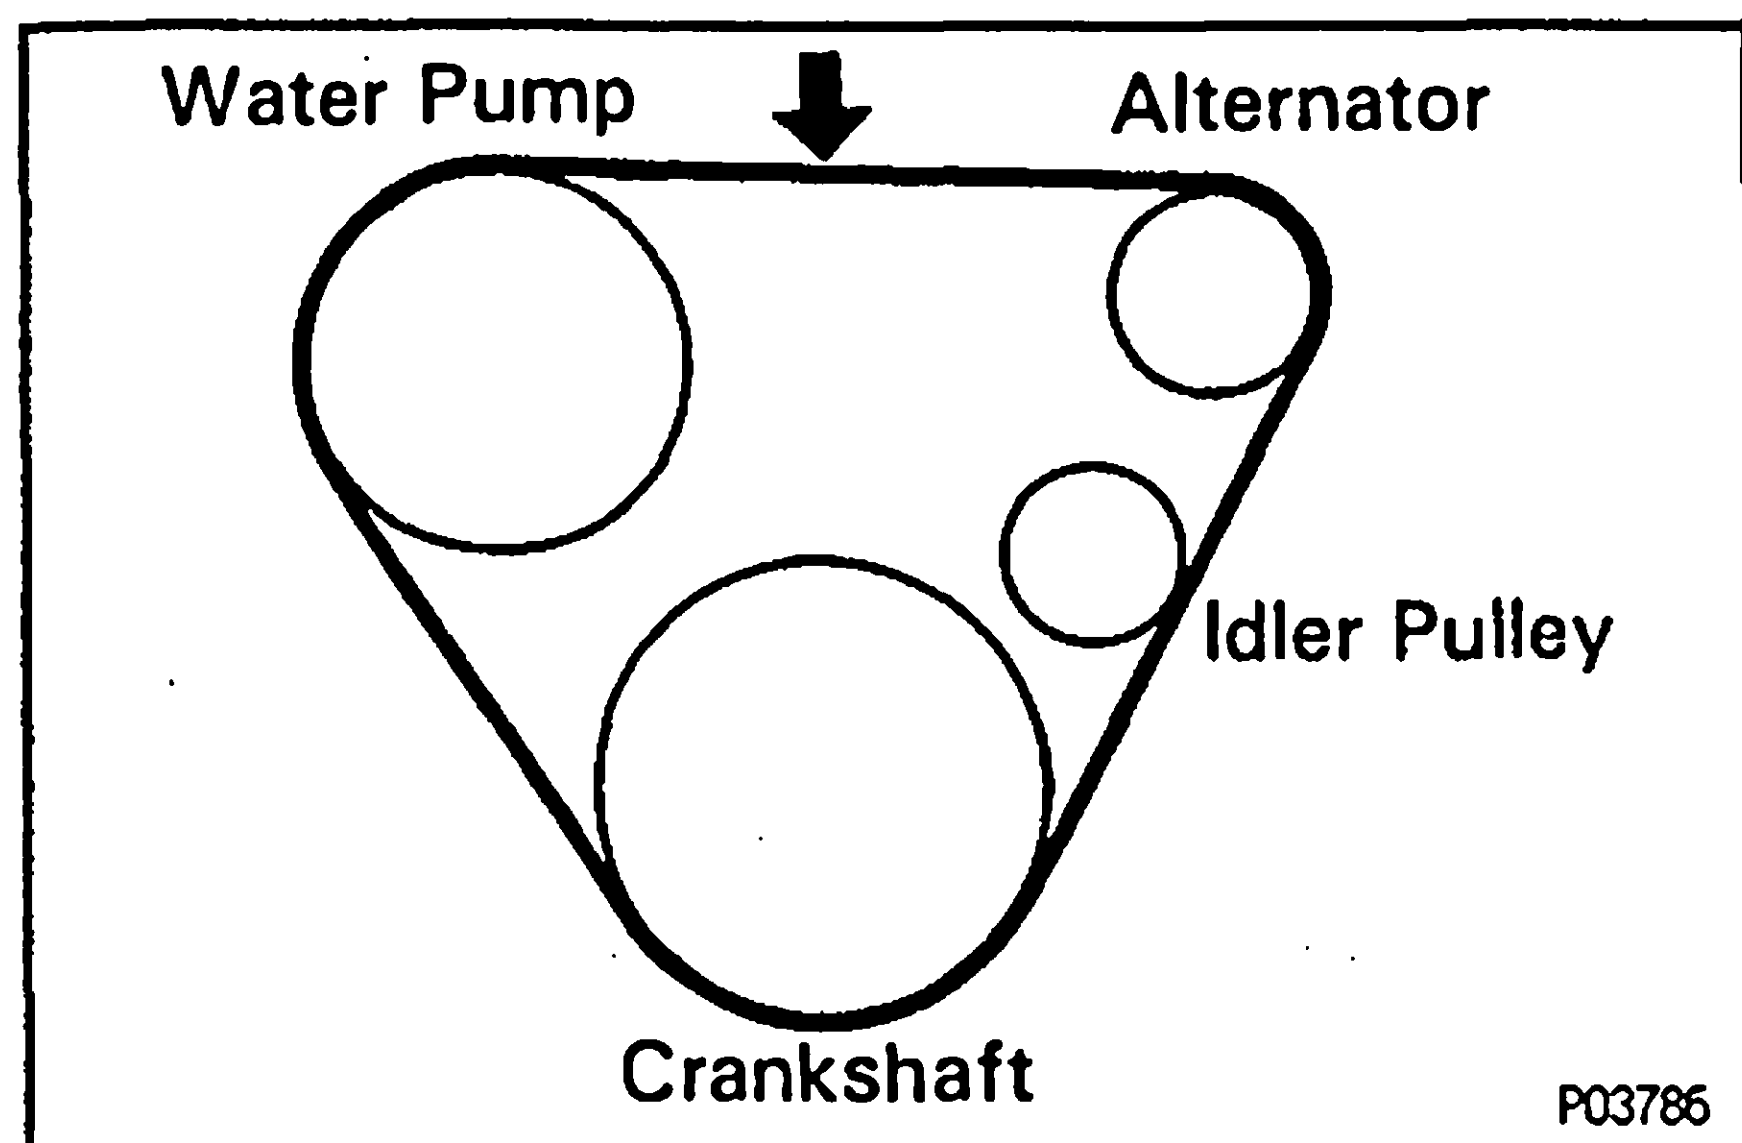

- (b) Check the drive belt deflection by pressing on the belt at the points indicated in the illustration with 98 N (10 kgf, 22 lbf) of pressure.

Drive belt deflection:

New belt

11 — 15 mm (0.43 — 0.59 in.)

Used belt


15 — 20 mm (0.59 — 0.79 in.)

If necessary, adjust the drive belt deflection.

HINT:

- "New belt" refers to a belt which has been used less than 5 minutes on a running engine.
- "Used belt" refers to a belt which has been used on a running engine for 5 minutes or more.
- After installing a new belt, run the engine for about 5 minutes and recheck the deflection.

CH

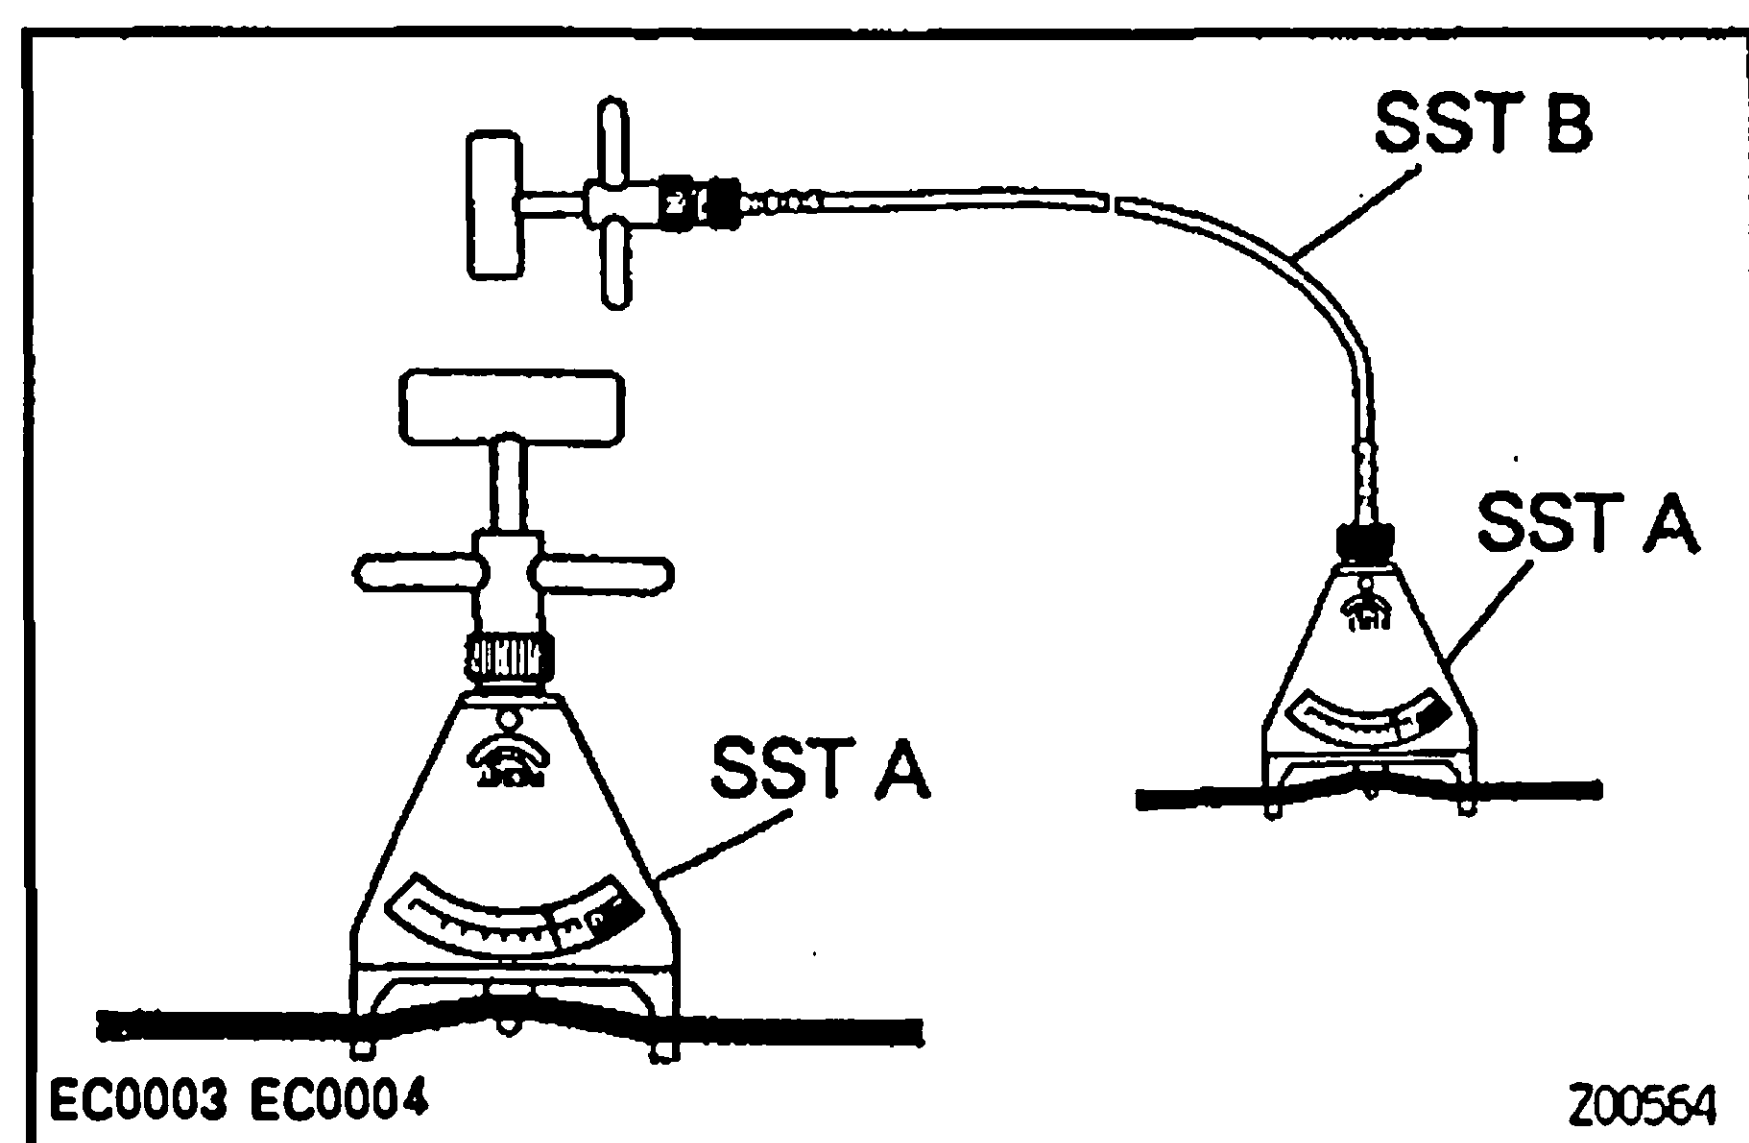

[Reference]

Using SST, check the drive belt tension.

SST A 09216-00020,

SST B 09216-00030

Drive belt tension:

New belt

33 — 57 kgf


Used belt

15 — 35 kgf

If the belt tension is not as specified, adjust it.

4. VISUALLY CHECK ALTERNATOR WIRING AND LISTEN FOR ABNORMAL NOISES


- Check that the wiring is in good condition.
- Check that there is no abnormal noise from the alternator while the engine is running.

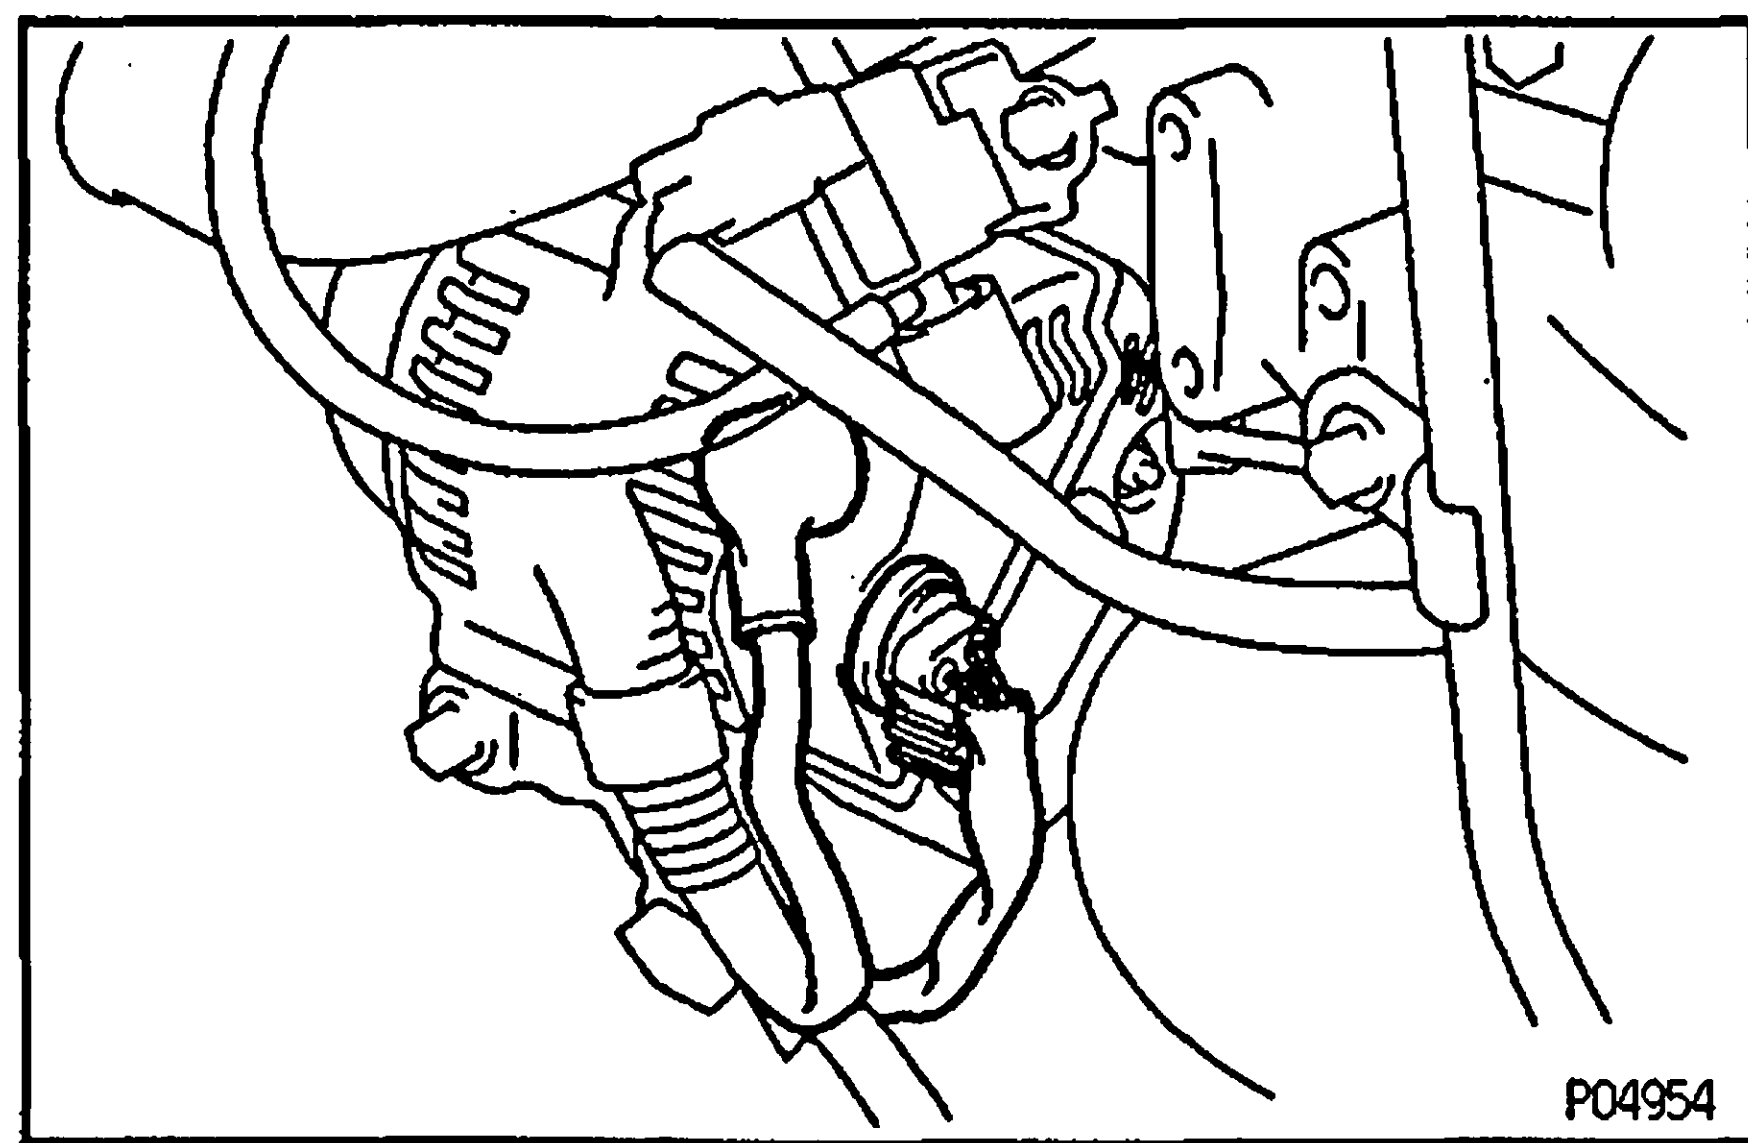

5. INSPECT DISCHARGE WARNING LIGHT CIRCUIT

- Turn the ignition switch "ON". Check that the discharge warning light comes on.
- Start the engine. Check that the light goes off.

If the light does not operate as specified, troubleshoot the discharge warning light circuit.

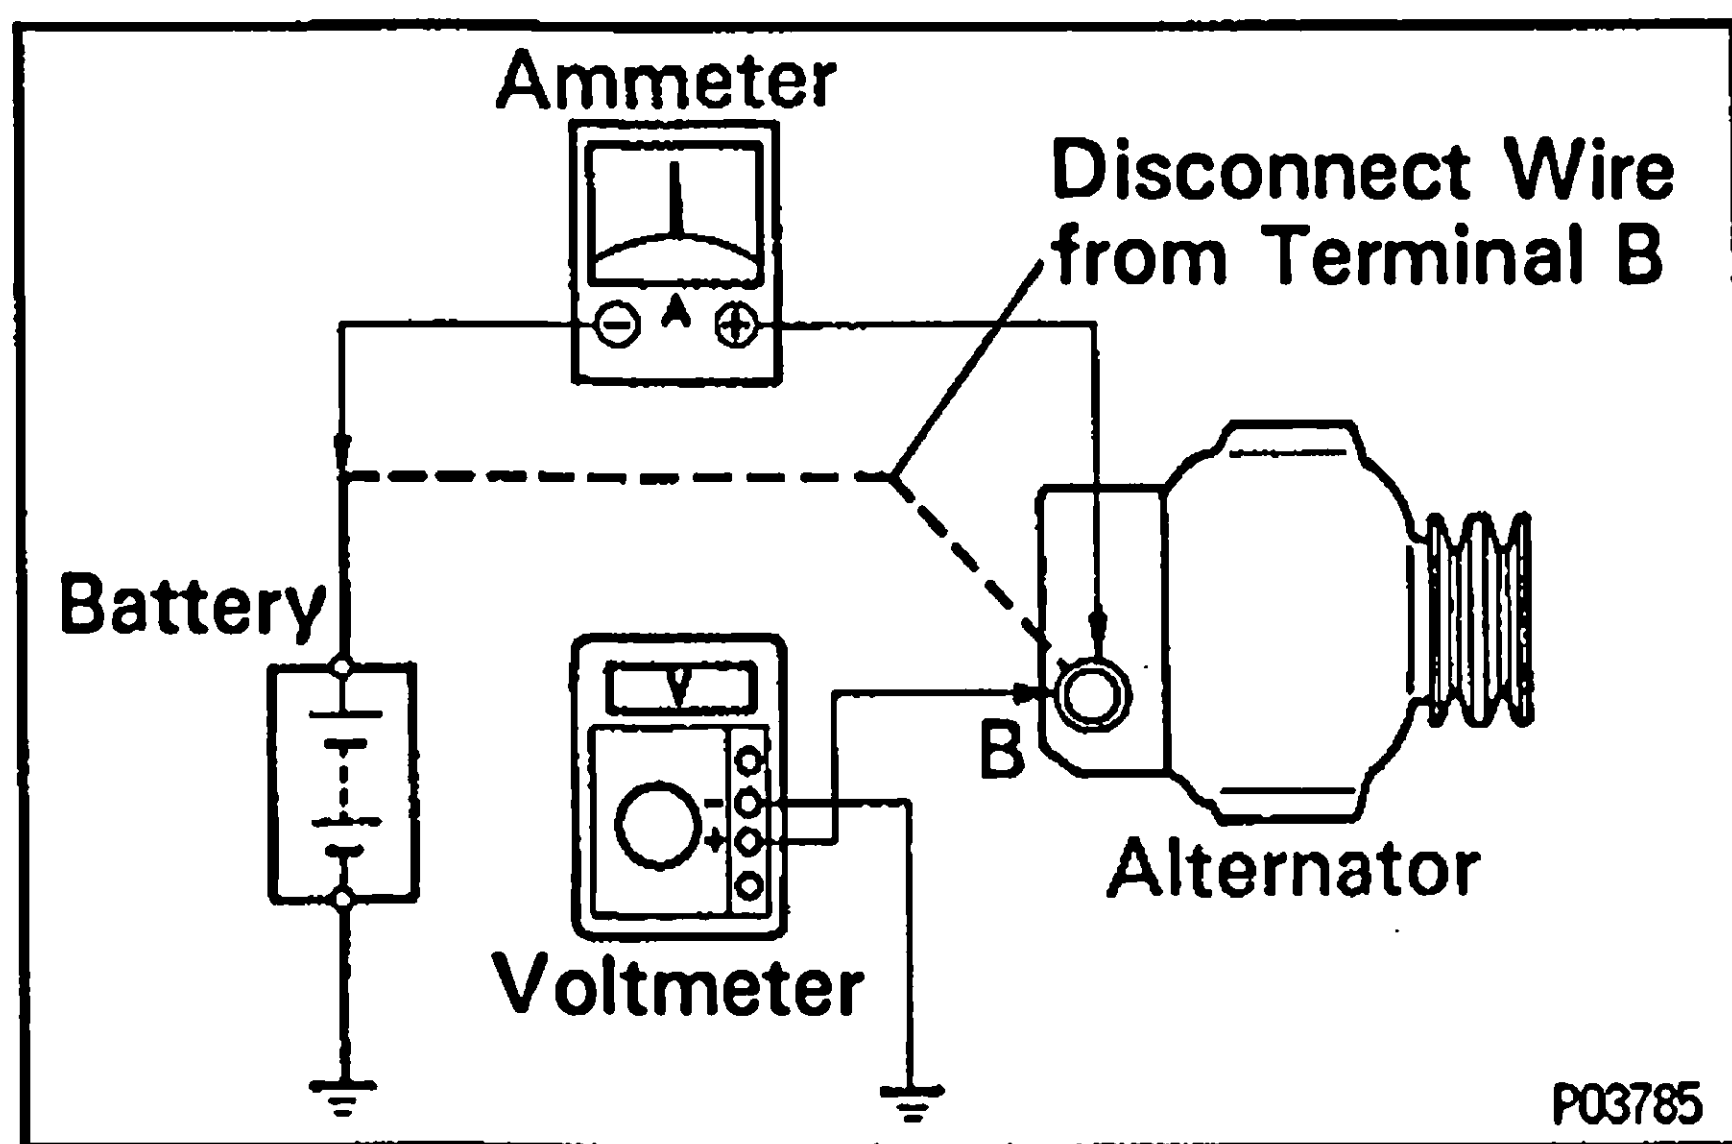

6. INSPECT CHARGING CIRCUIT WITHOUT LOAD

HINT: If a battery / alternator tester is available, connect the tester to the charging circuit as per manufacturer's instructions.

(a) If a tester is not available, connect a voltmeter and ammeter to the charging circuit as follows:

- Disconnect the wire from terminal B of the alternator and connect it to the negative (—) lead of the ammeter.
- Connect the positive (+) lead of the ammeter to terminal B of the alternator.
- Connect the positive (+) lead of the voltmeter to terminal B of the alternator.
- Ground the negative (—) lead of the voltmeter.

(b) Check the charging circuit as follows:

With the engine running from idle to 2,000 rpm, check the reading on the ammeter and voltmeter.

Standard amperage:

10 A or less.

Standard voltage:




14.0 — 15.0 V at 25°C (77°F)

13.5 — 14.3 V at 115°C (239°F)

If the voltmeter reading is more than standard voltage, replace the IC regulator.

If the voltmeter reading is less than the standard voltage, check the IC regulator and alternator as follows:

- With terminal F grounded, start the engine and check the voltmeter reading of terminal B.
- If the voltmeter reading is more than standard voltage, replace the IC regulator.
- If the voltmeter reading is less than standard voltage, check the alternator.

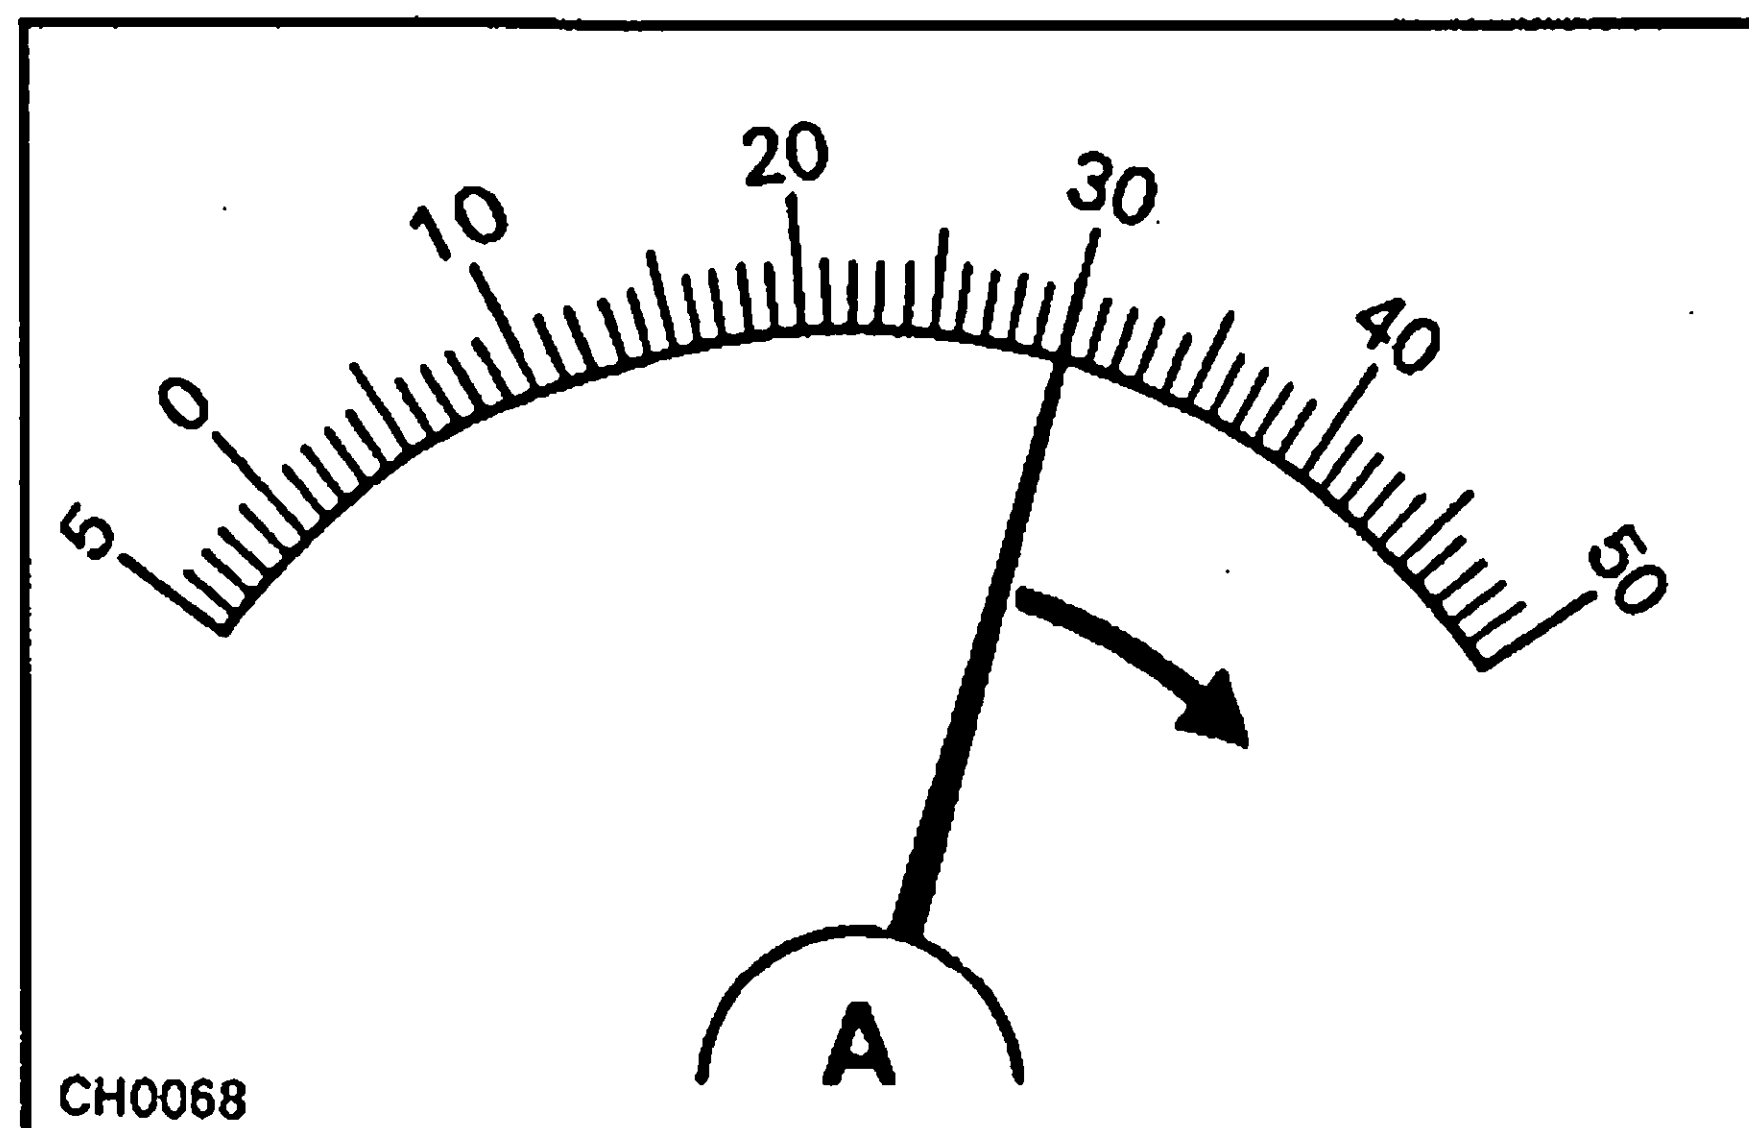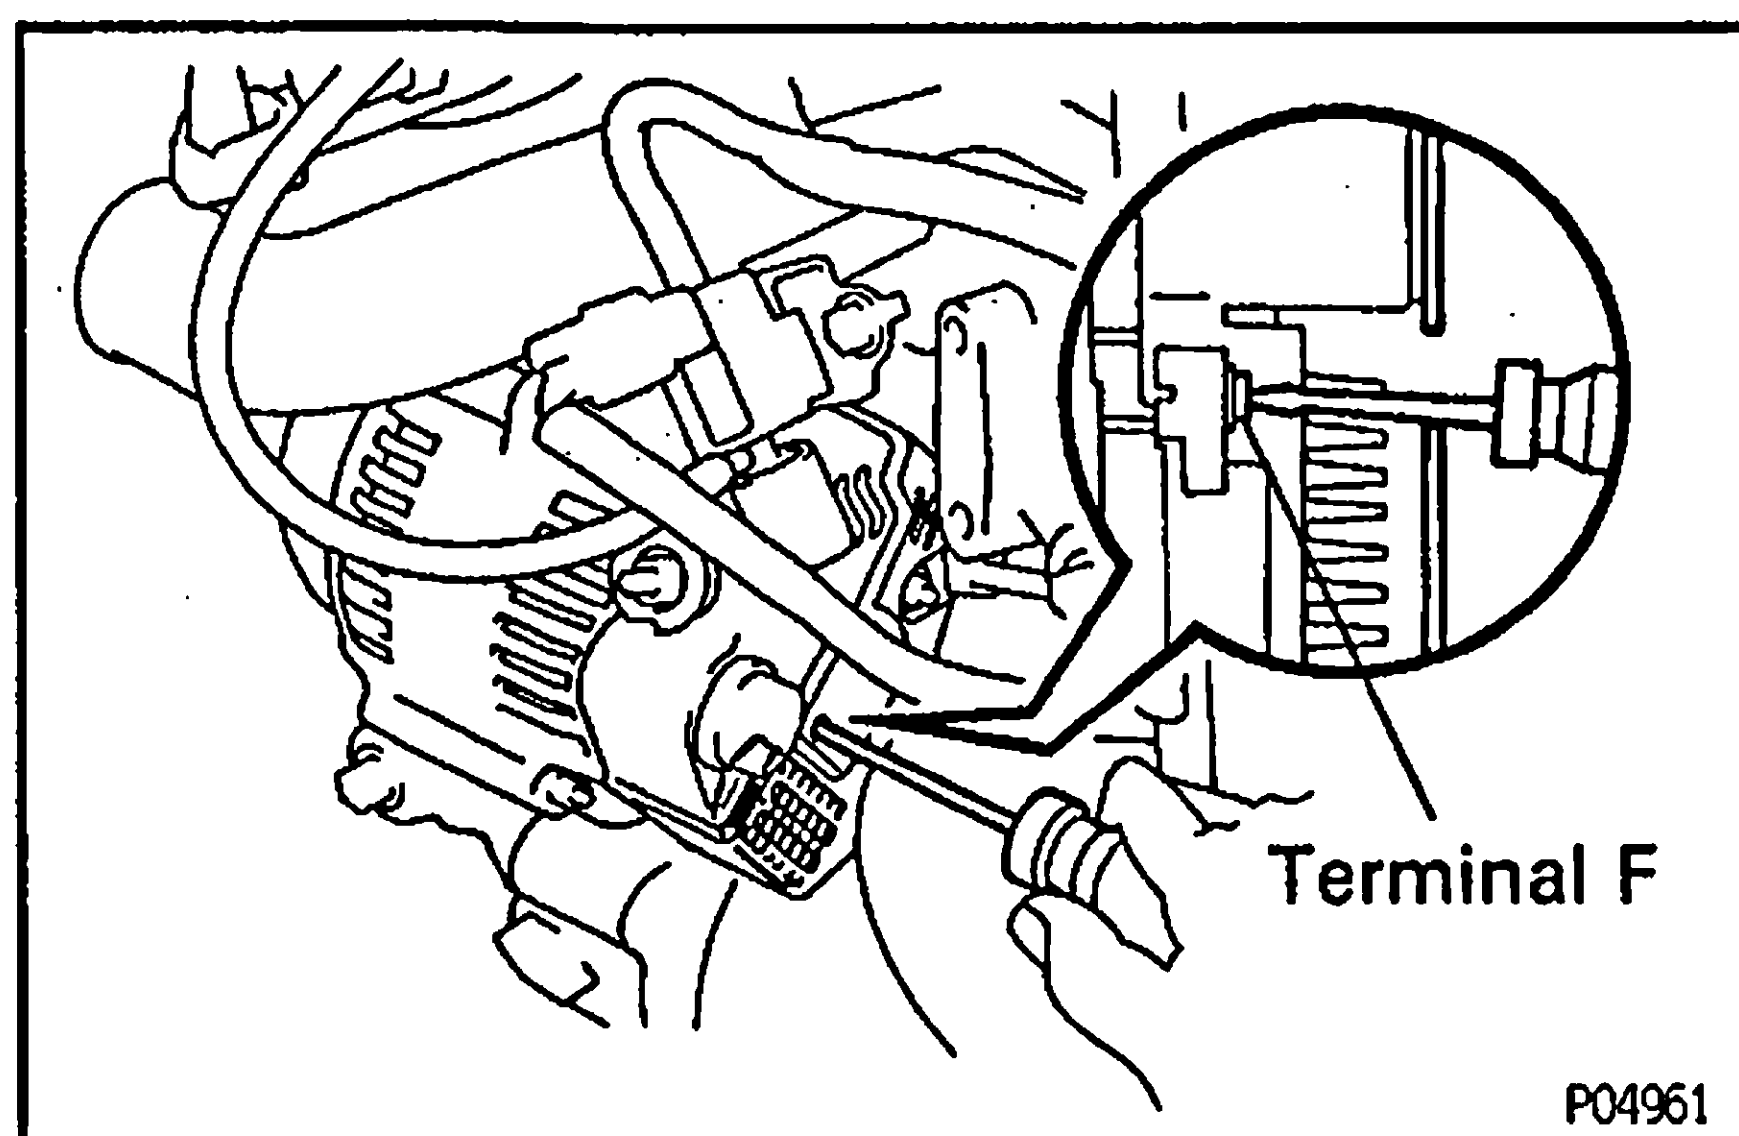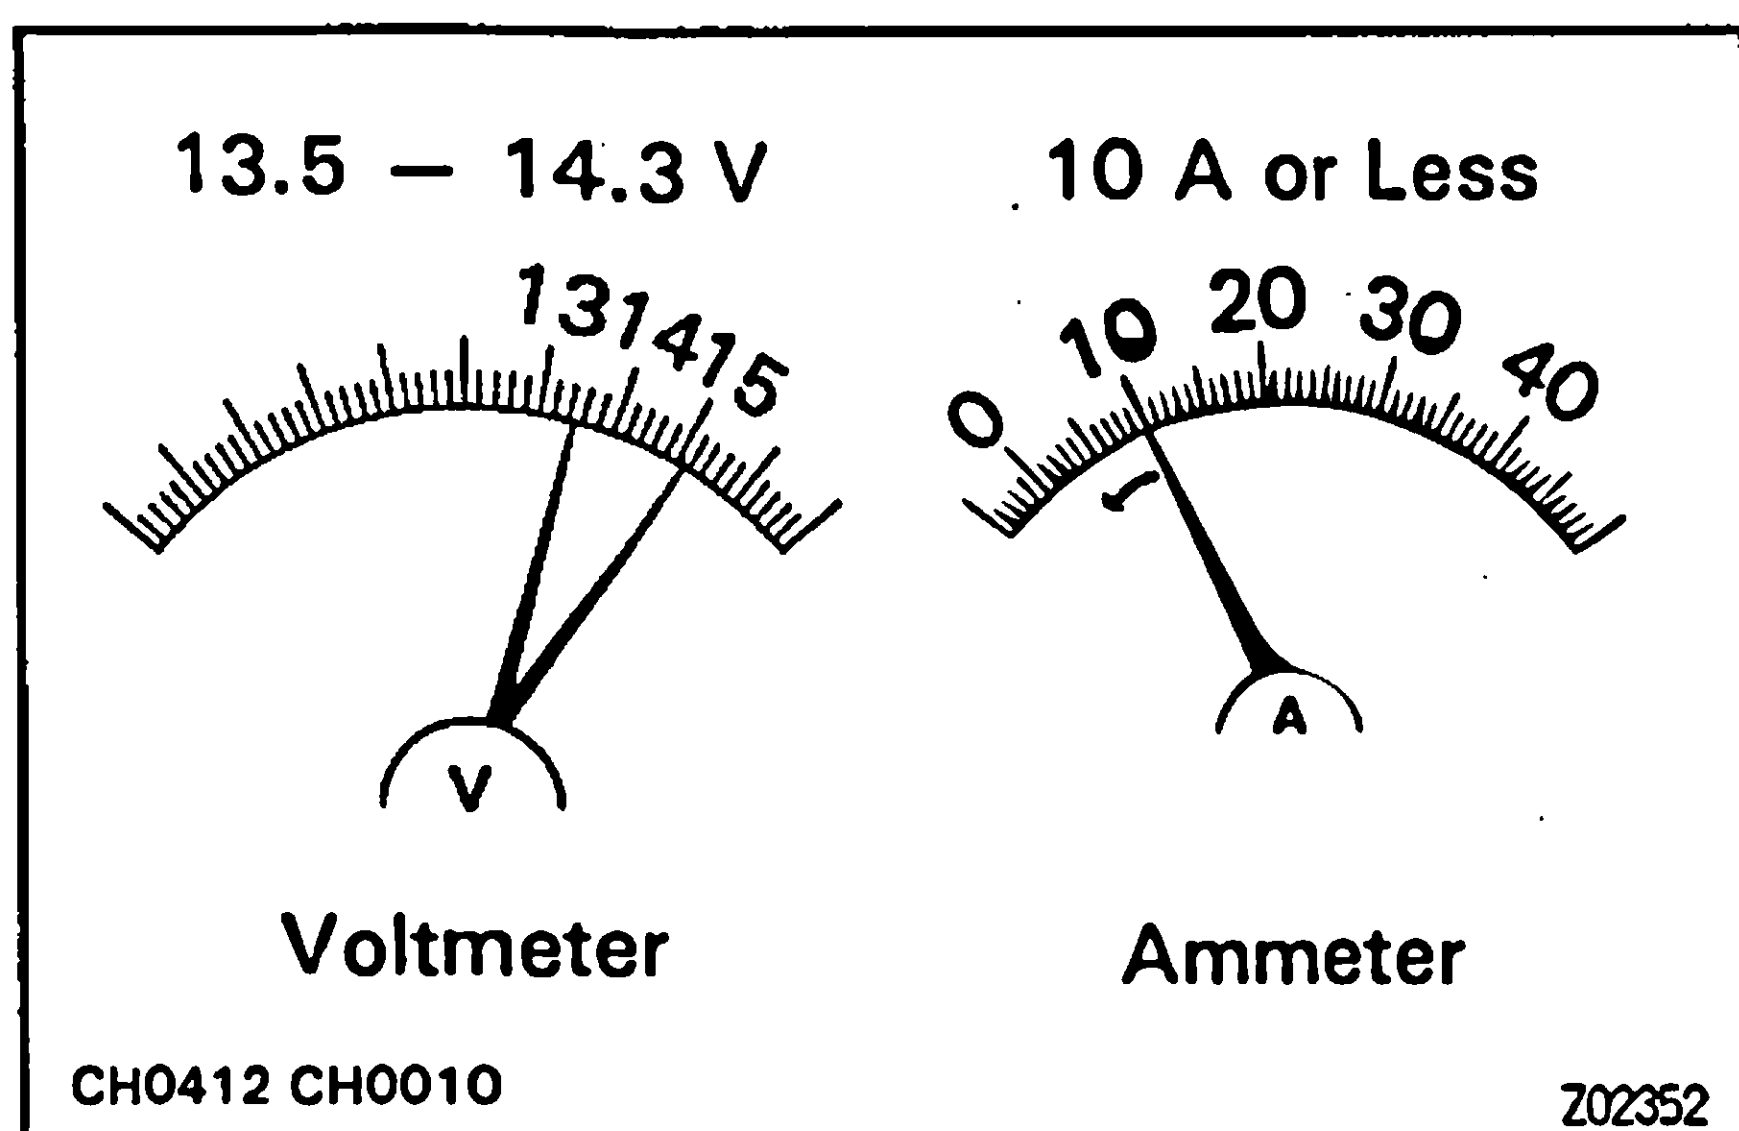


7. INSPECT CHARGING CIRCUIT WITH LOAD

(a) With the engine running at 2,000 rpm, turn on the high beam headlights and place the heater blower switch at "HI".

(b) Check the reading on the ammeter.

Standard amperage:

30 A or more

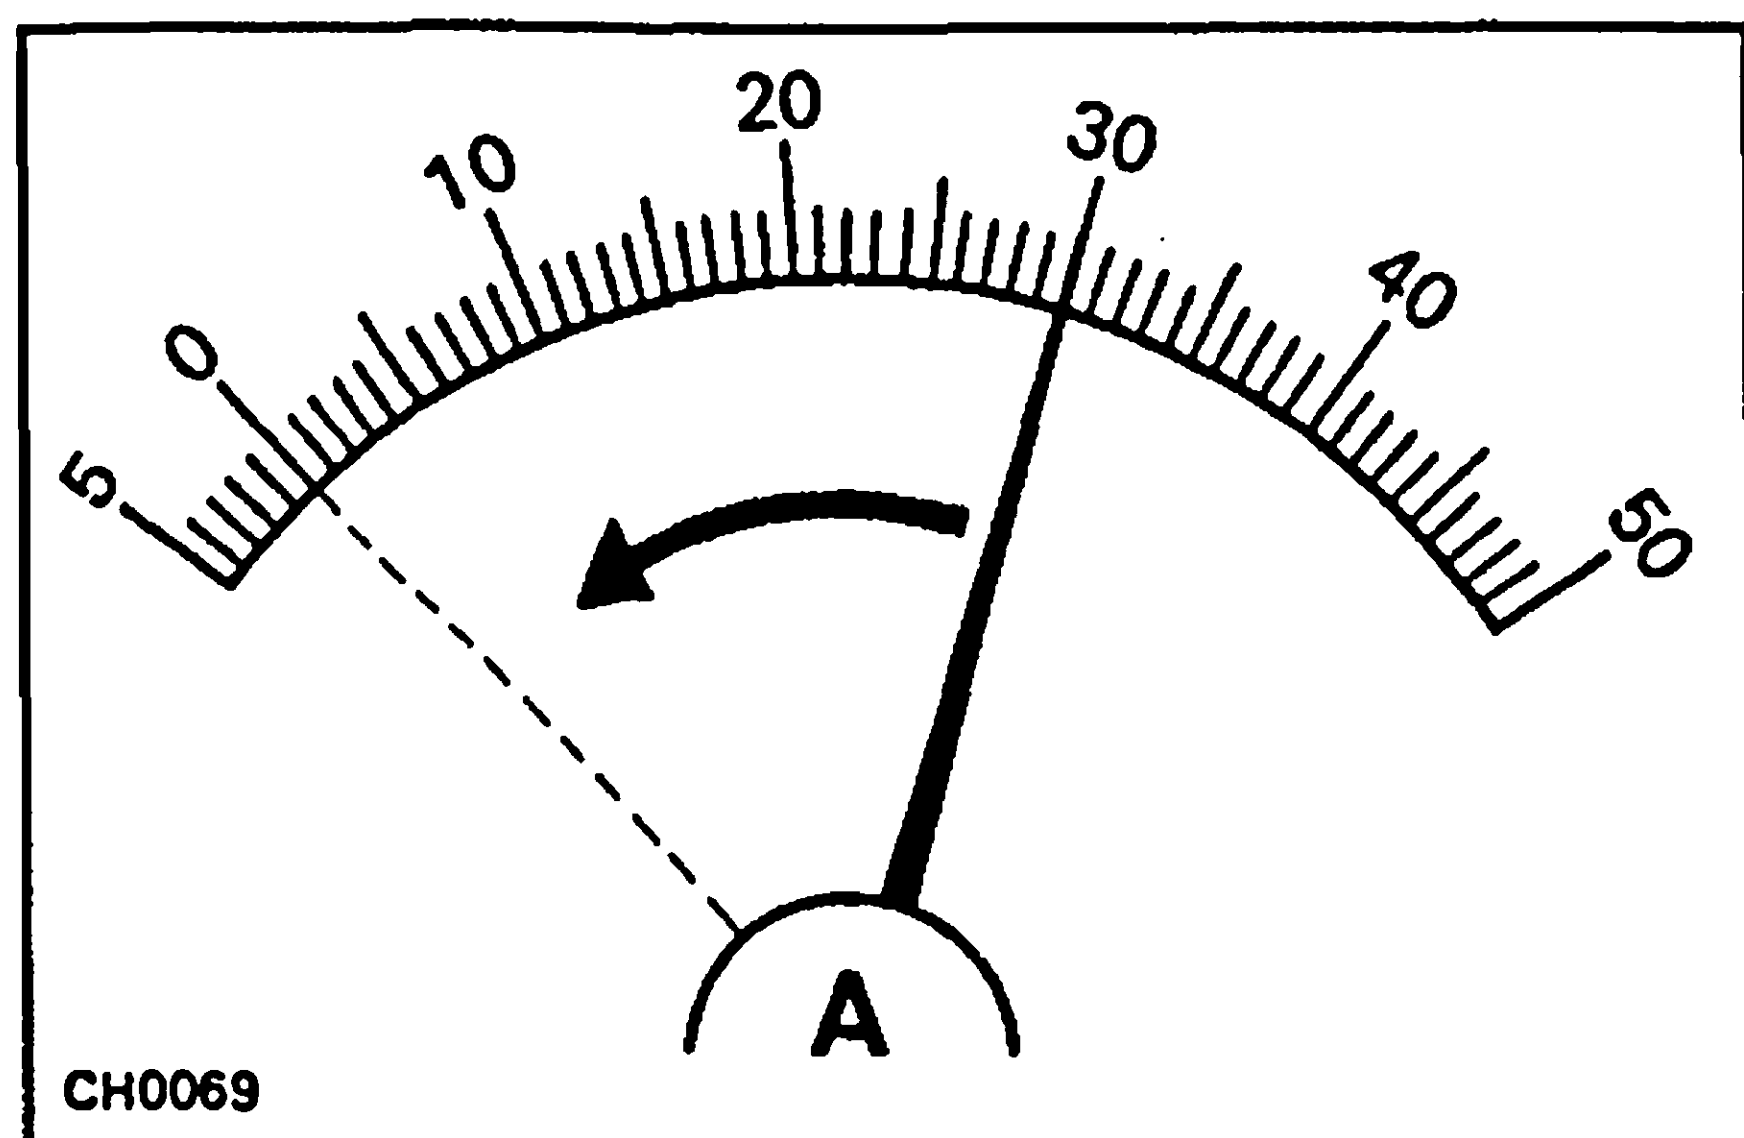


If the ammeter reading is less than standard amperage, repair the alternator. (See page CH—10)

HINT: If the battery is fully charged, the indication will sometimes be less than standard amperage.


ALTERNATOR REMOVAL ALTERNATOR

CH00Y-02

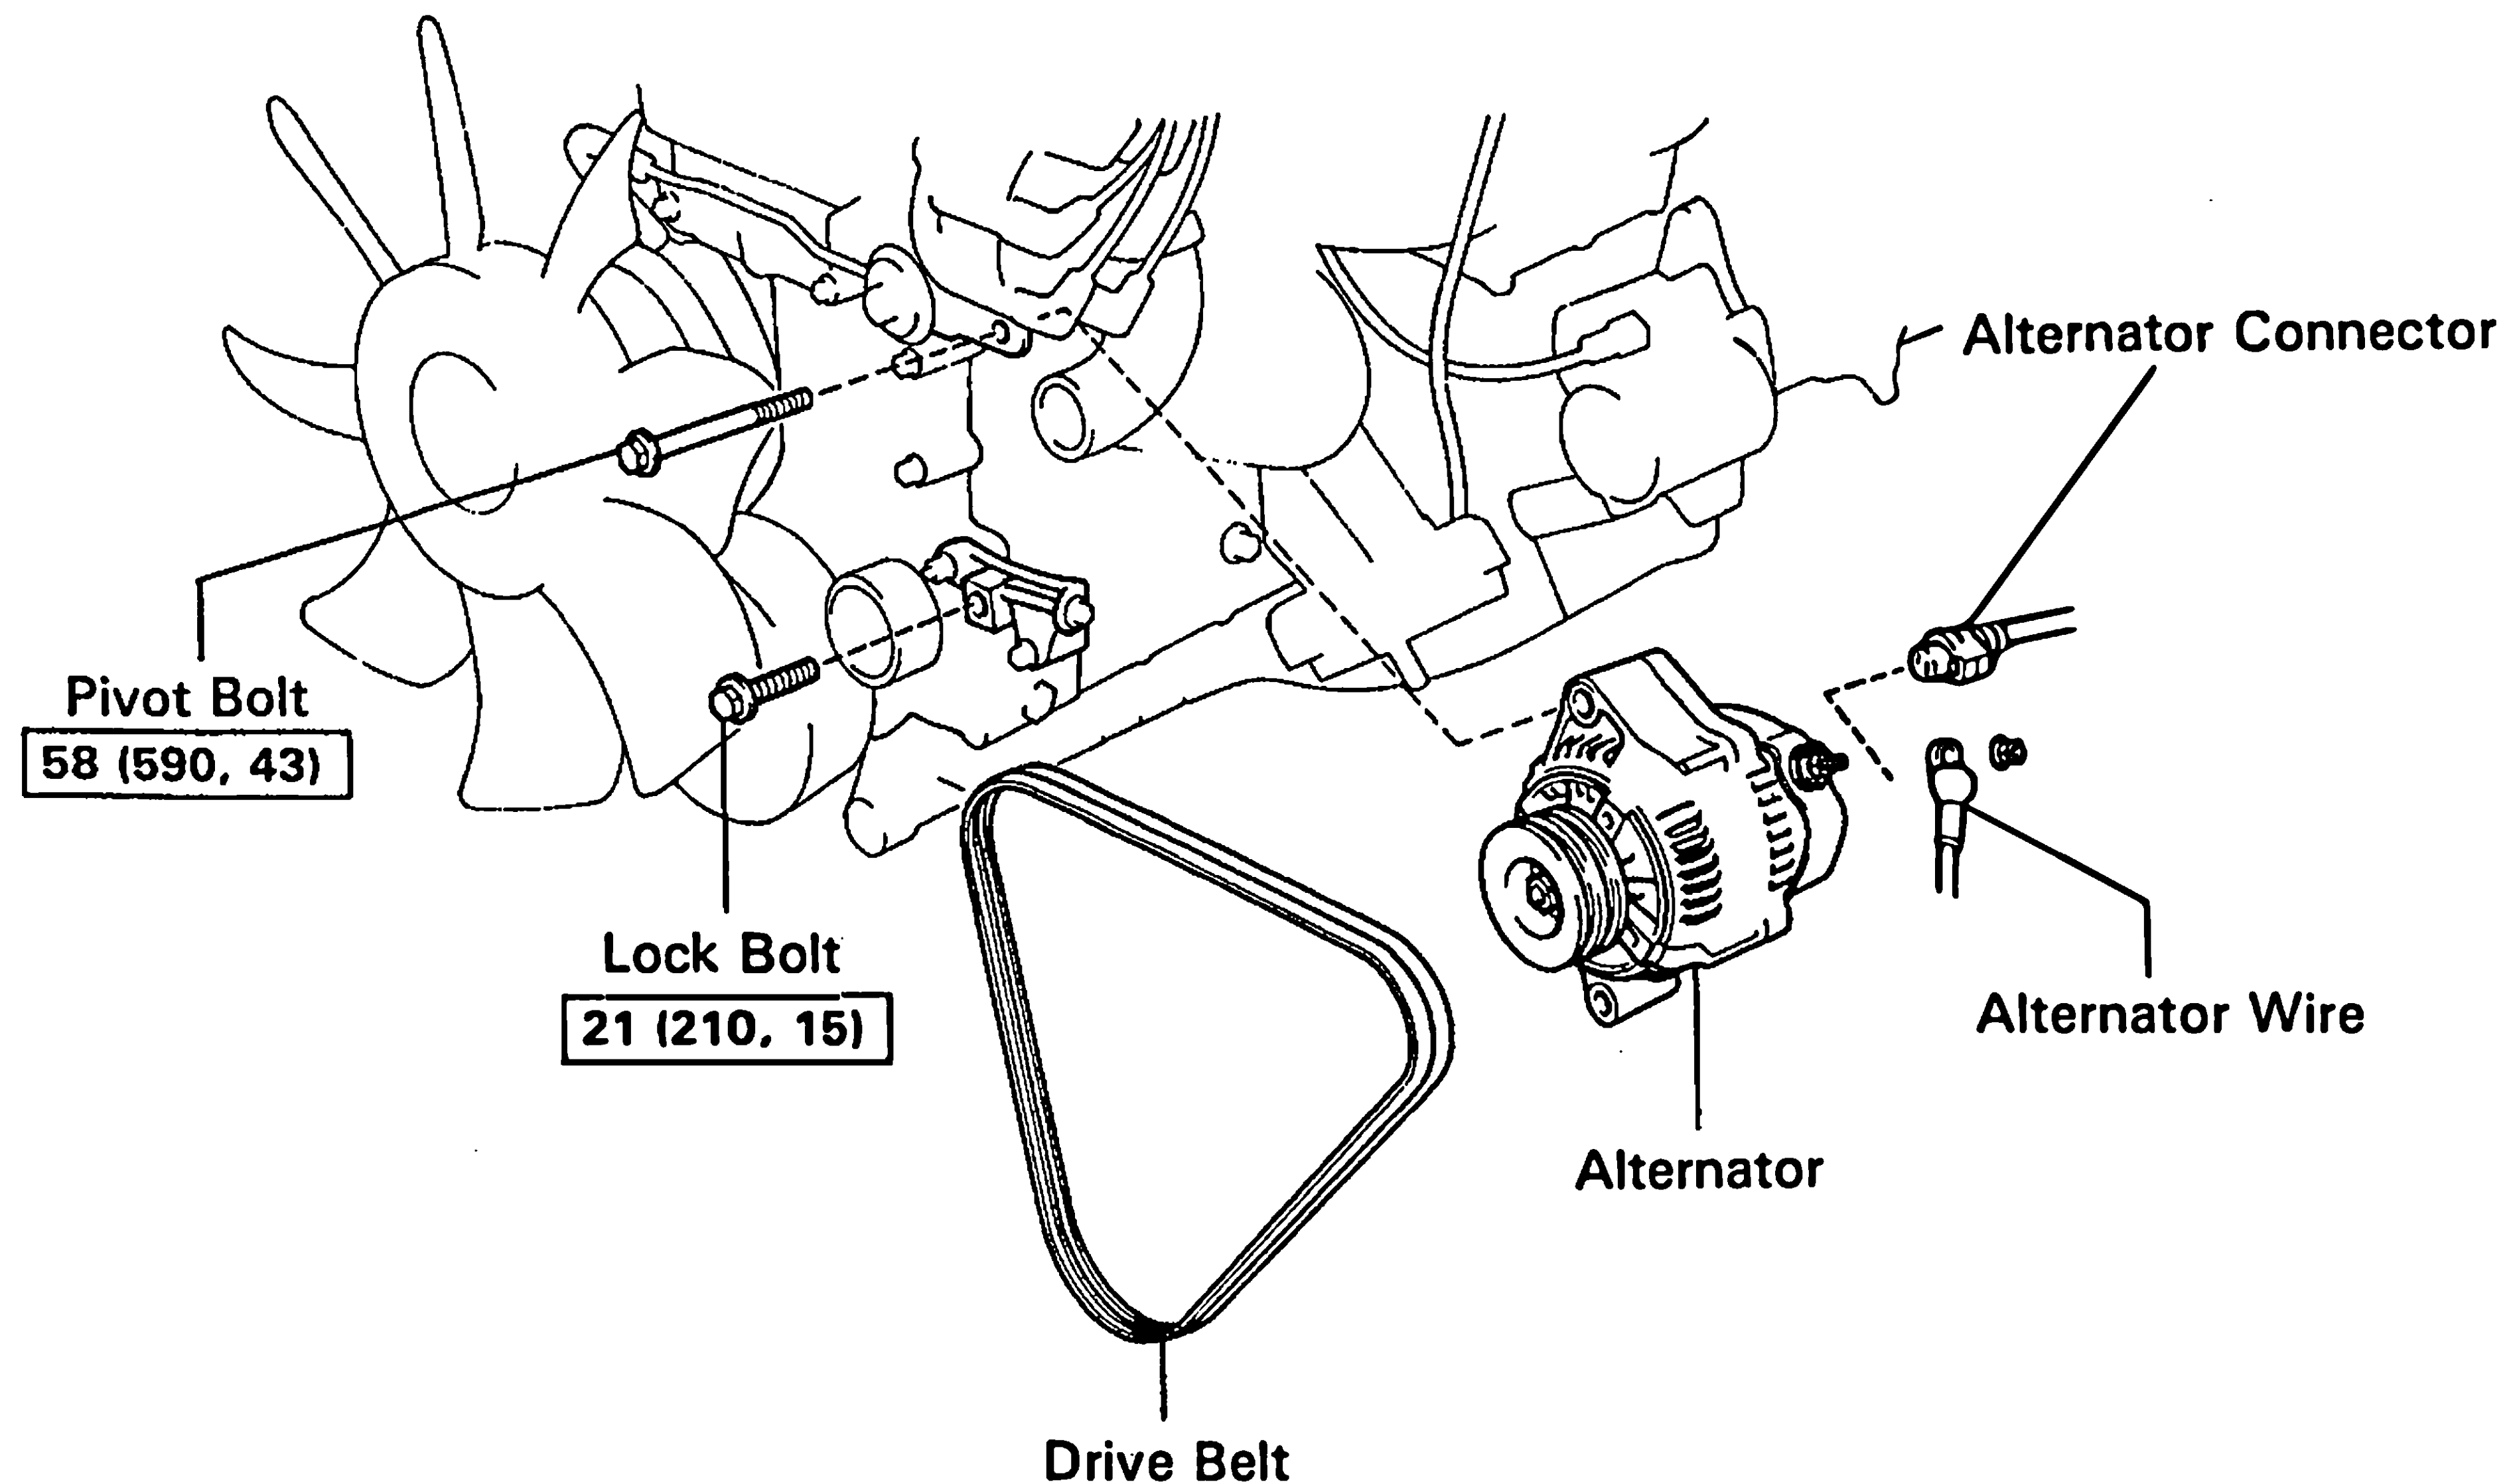

N·m (kgf·cm, ft·lbf) : Specified torque


P04787

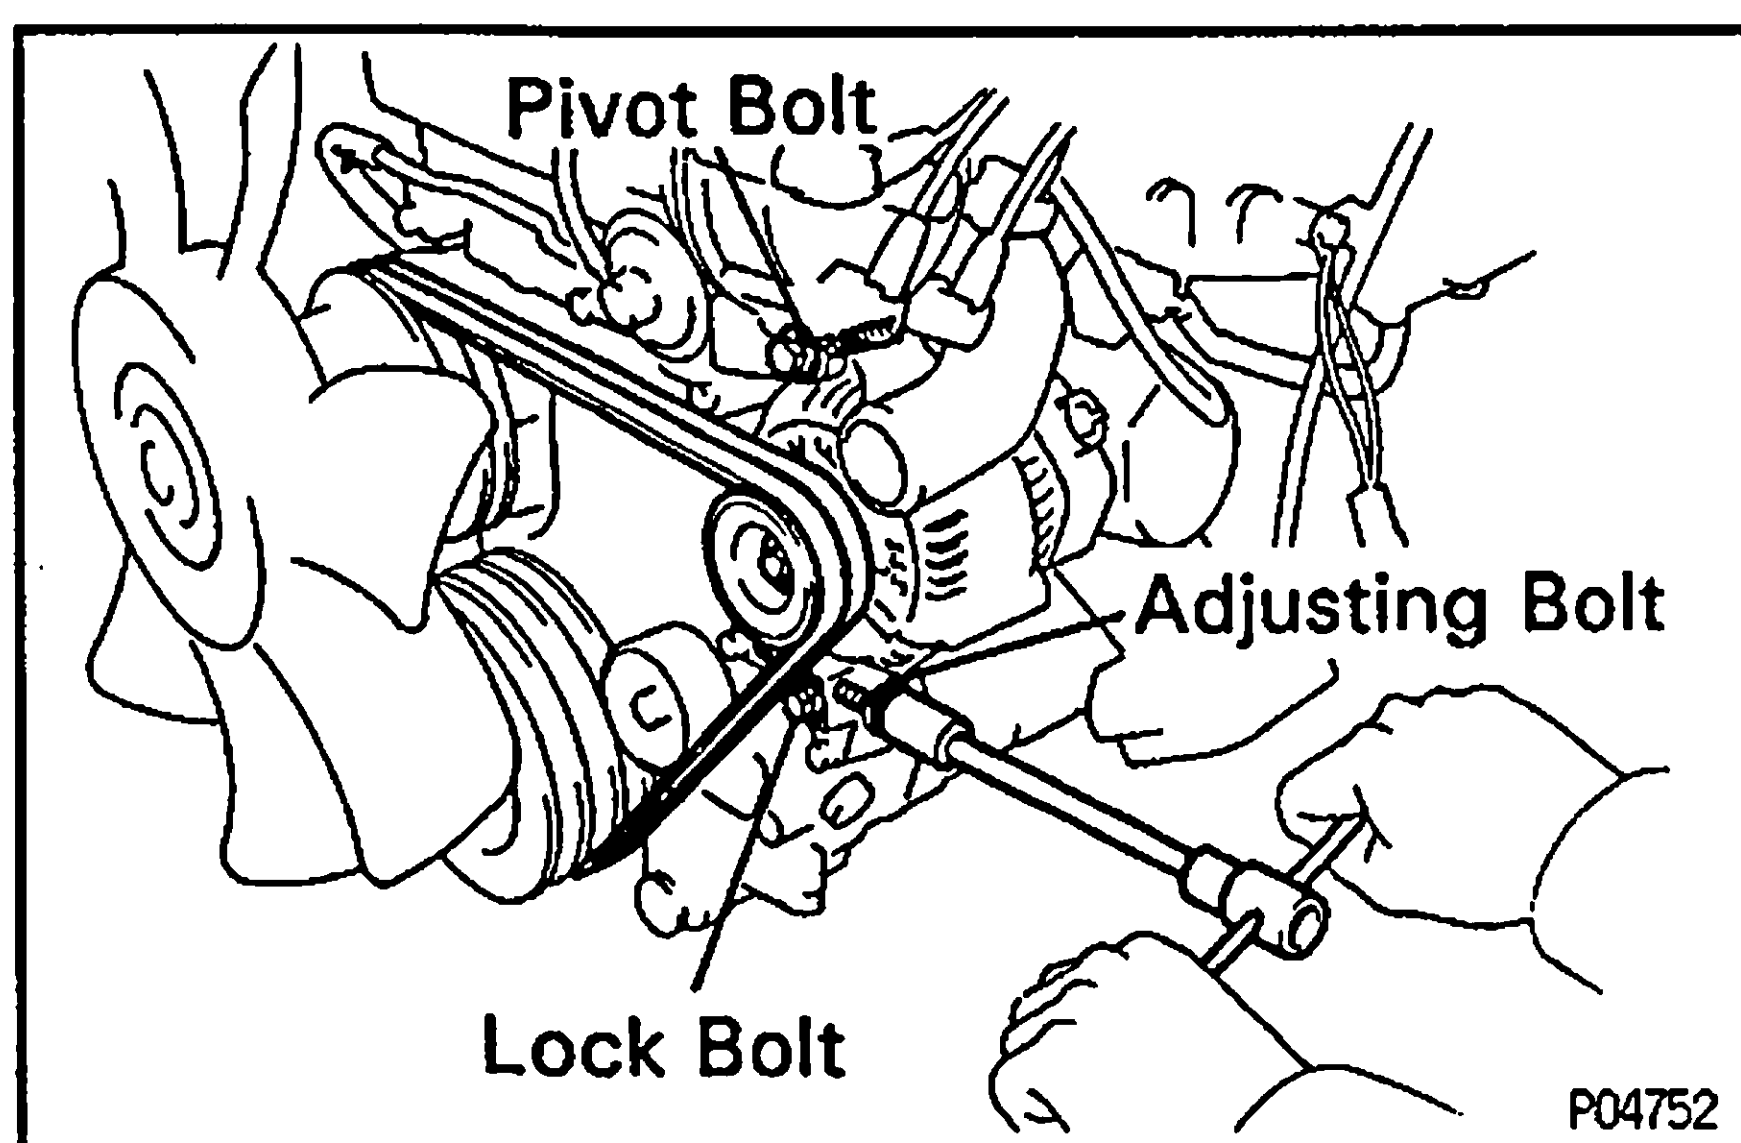

1. DISCONNECT CABLE FROM NEGATIVE TERMINAL OF BATTERY

2. REMOVE DRIVE BELTS

- Loosen the lock bolt, pivot bolt and adjusting bolt.
- Remove the two drive belts.

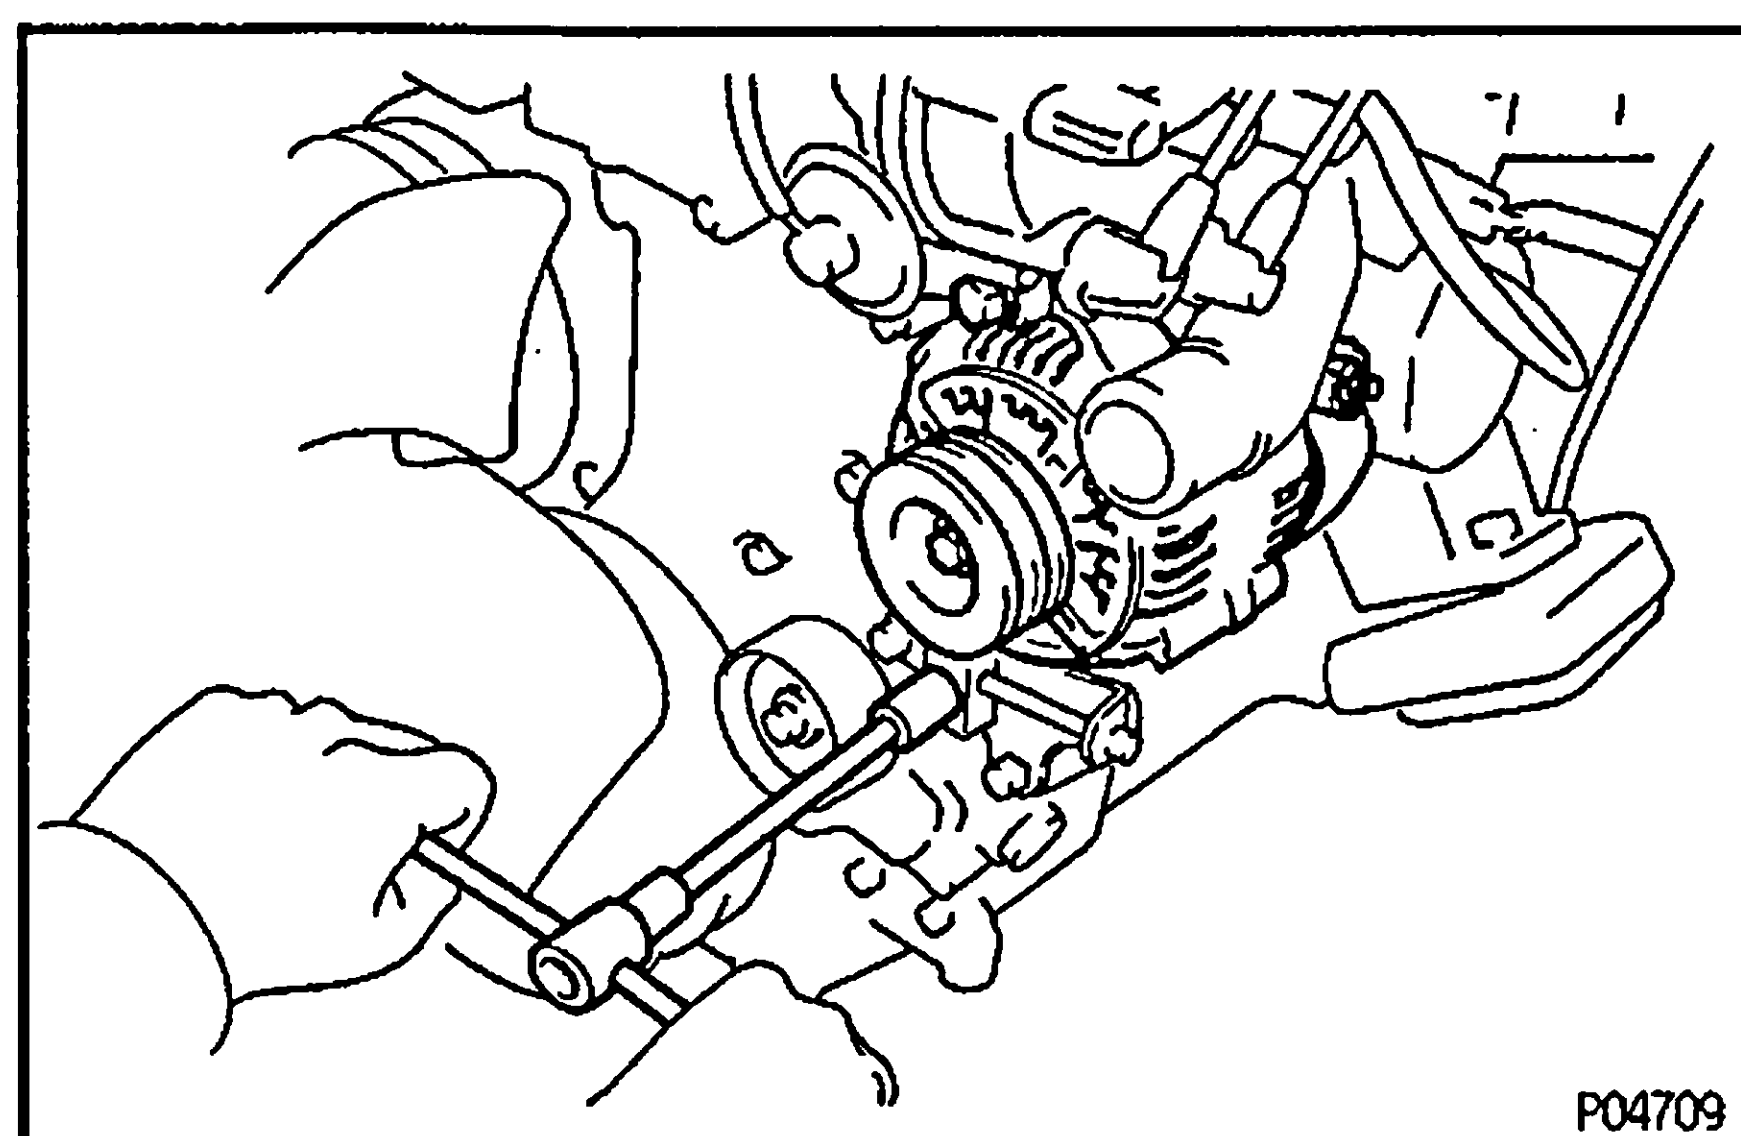


3. REMOVE ALTERNATOR


- Disconnect the alternator connector.
- Remove the nut, and disconnect the alternator wire.
- Disconnect the wire harness from the clip.
- Remove the pivot bolt, lock bolt and alternator.

COMPONENTS

50 A Type

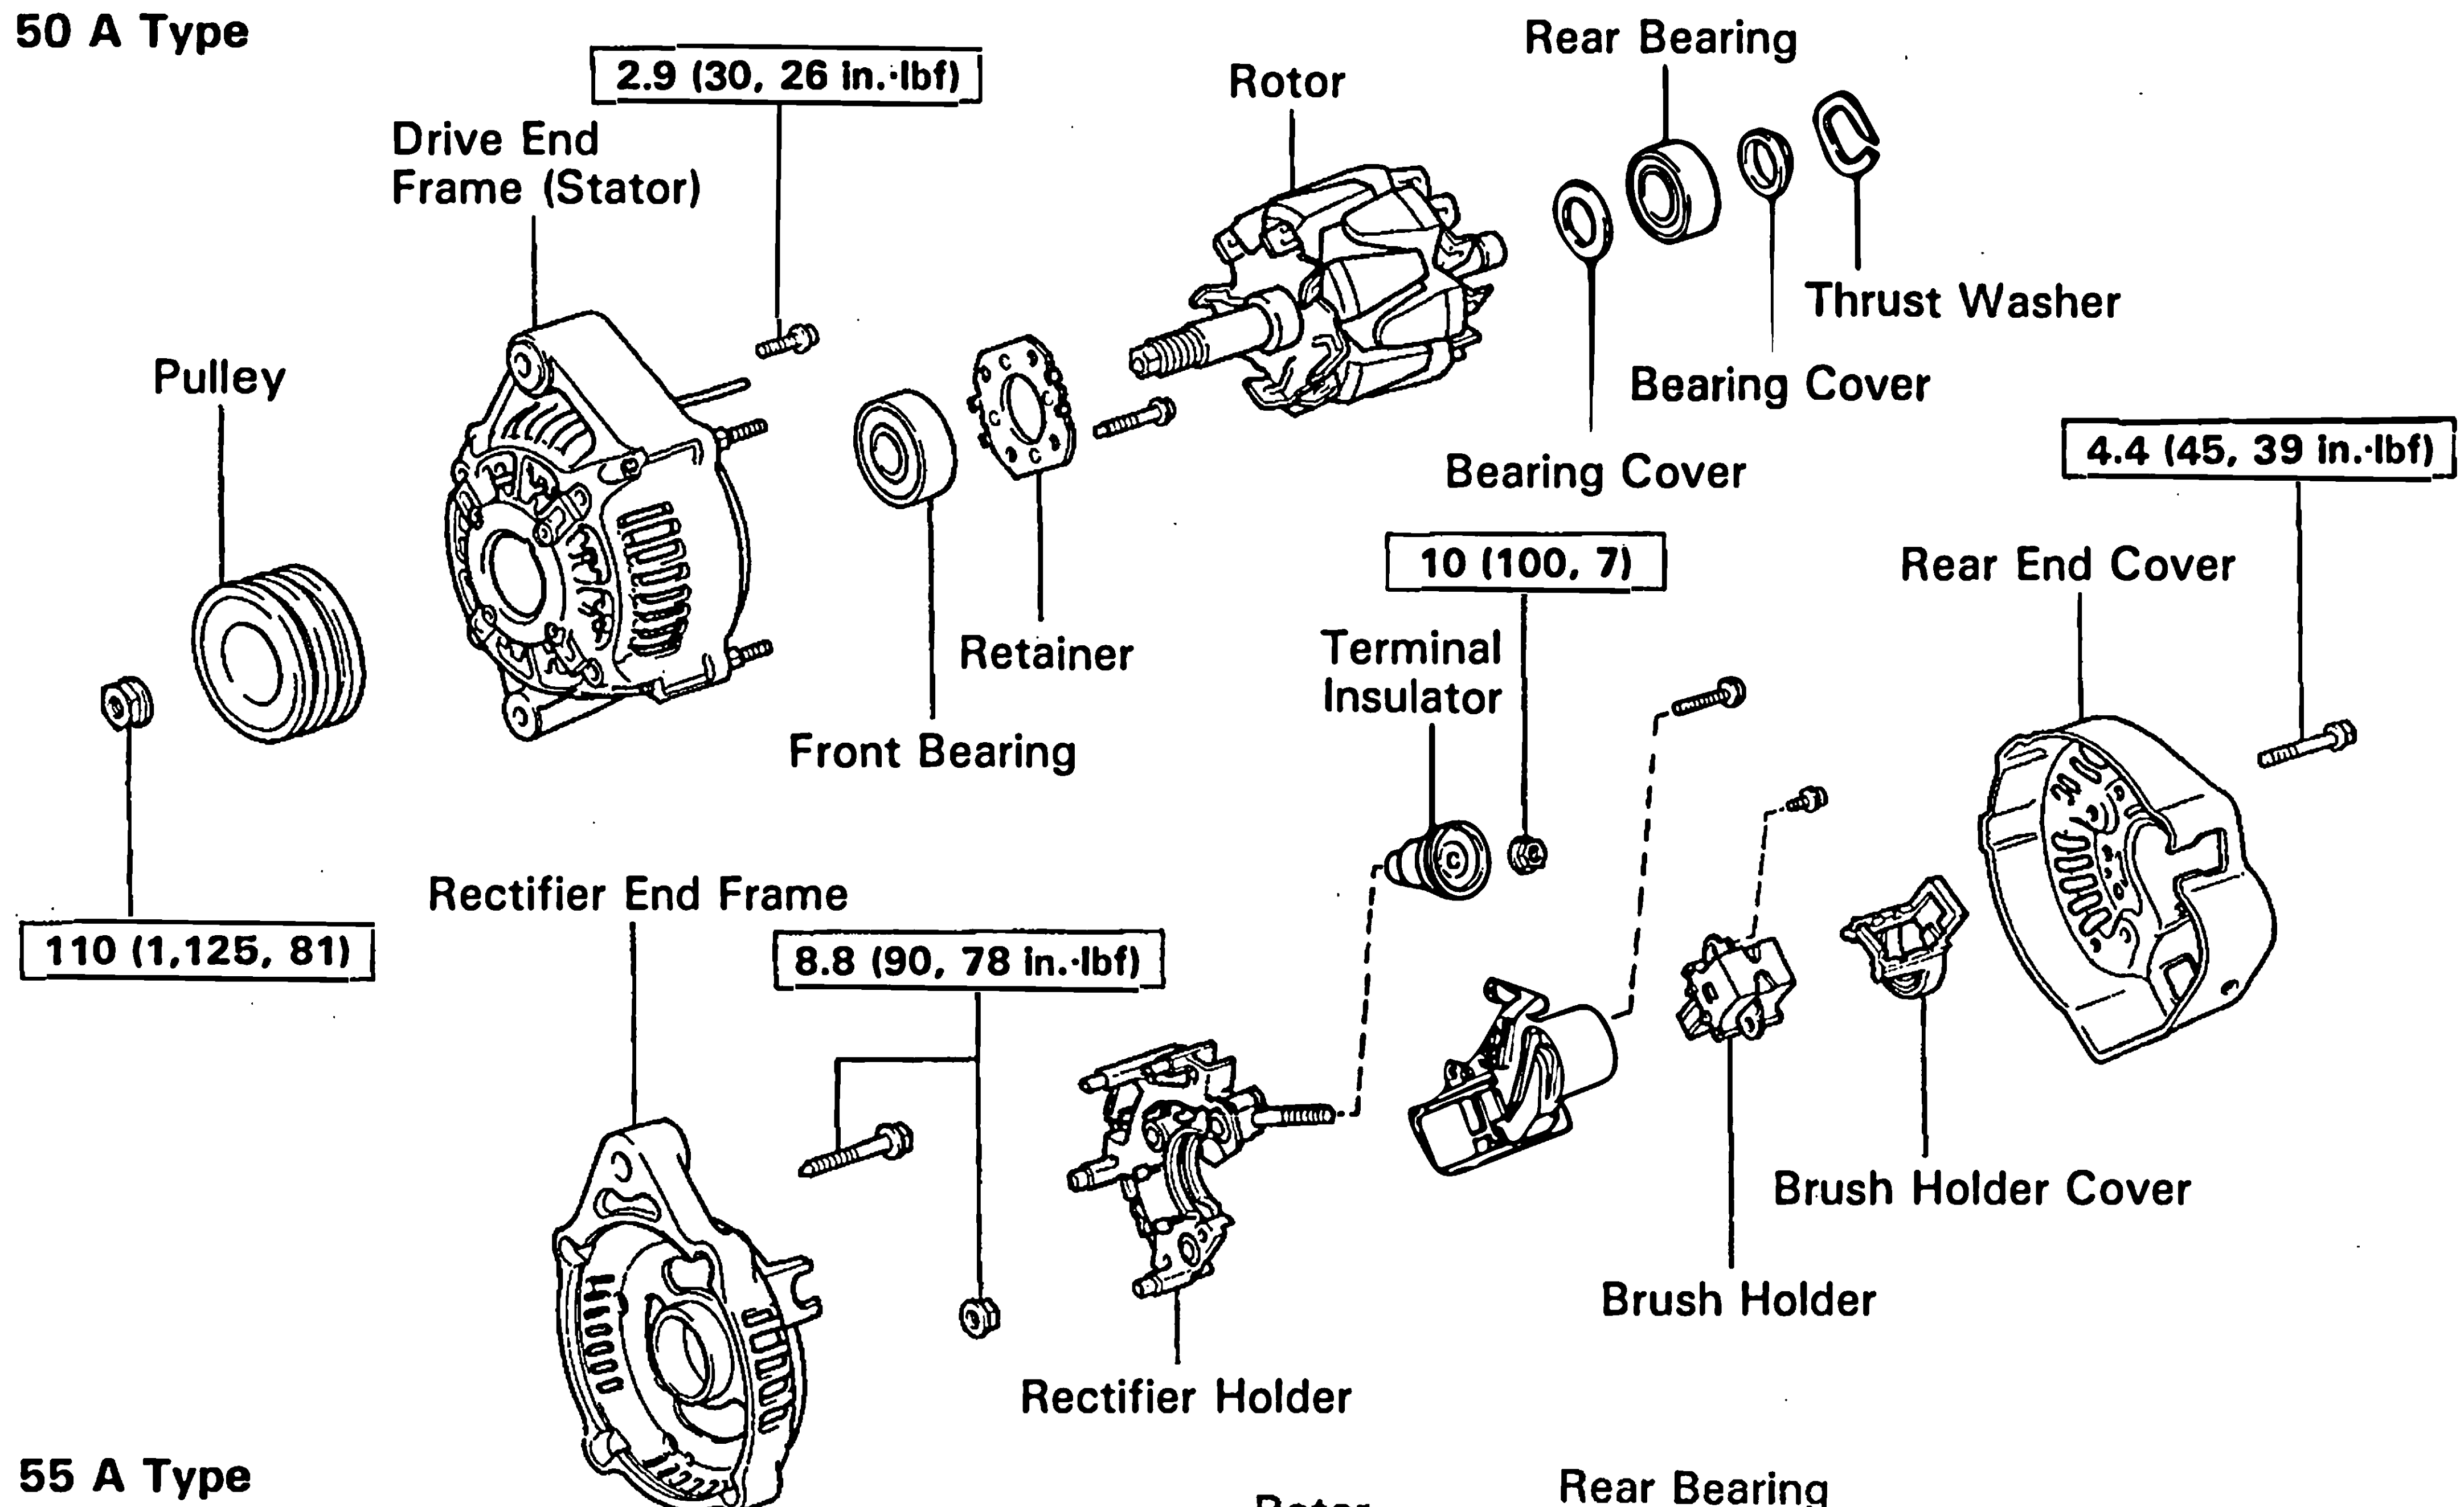


55 A Type

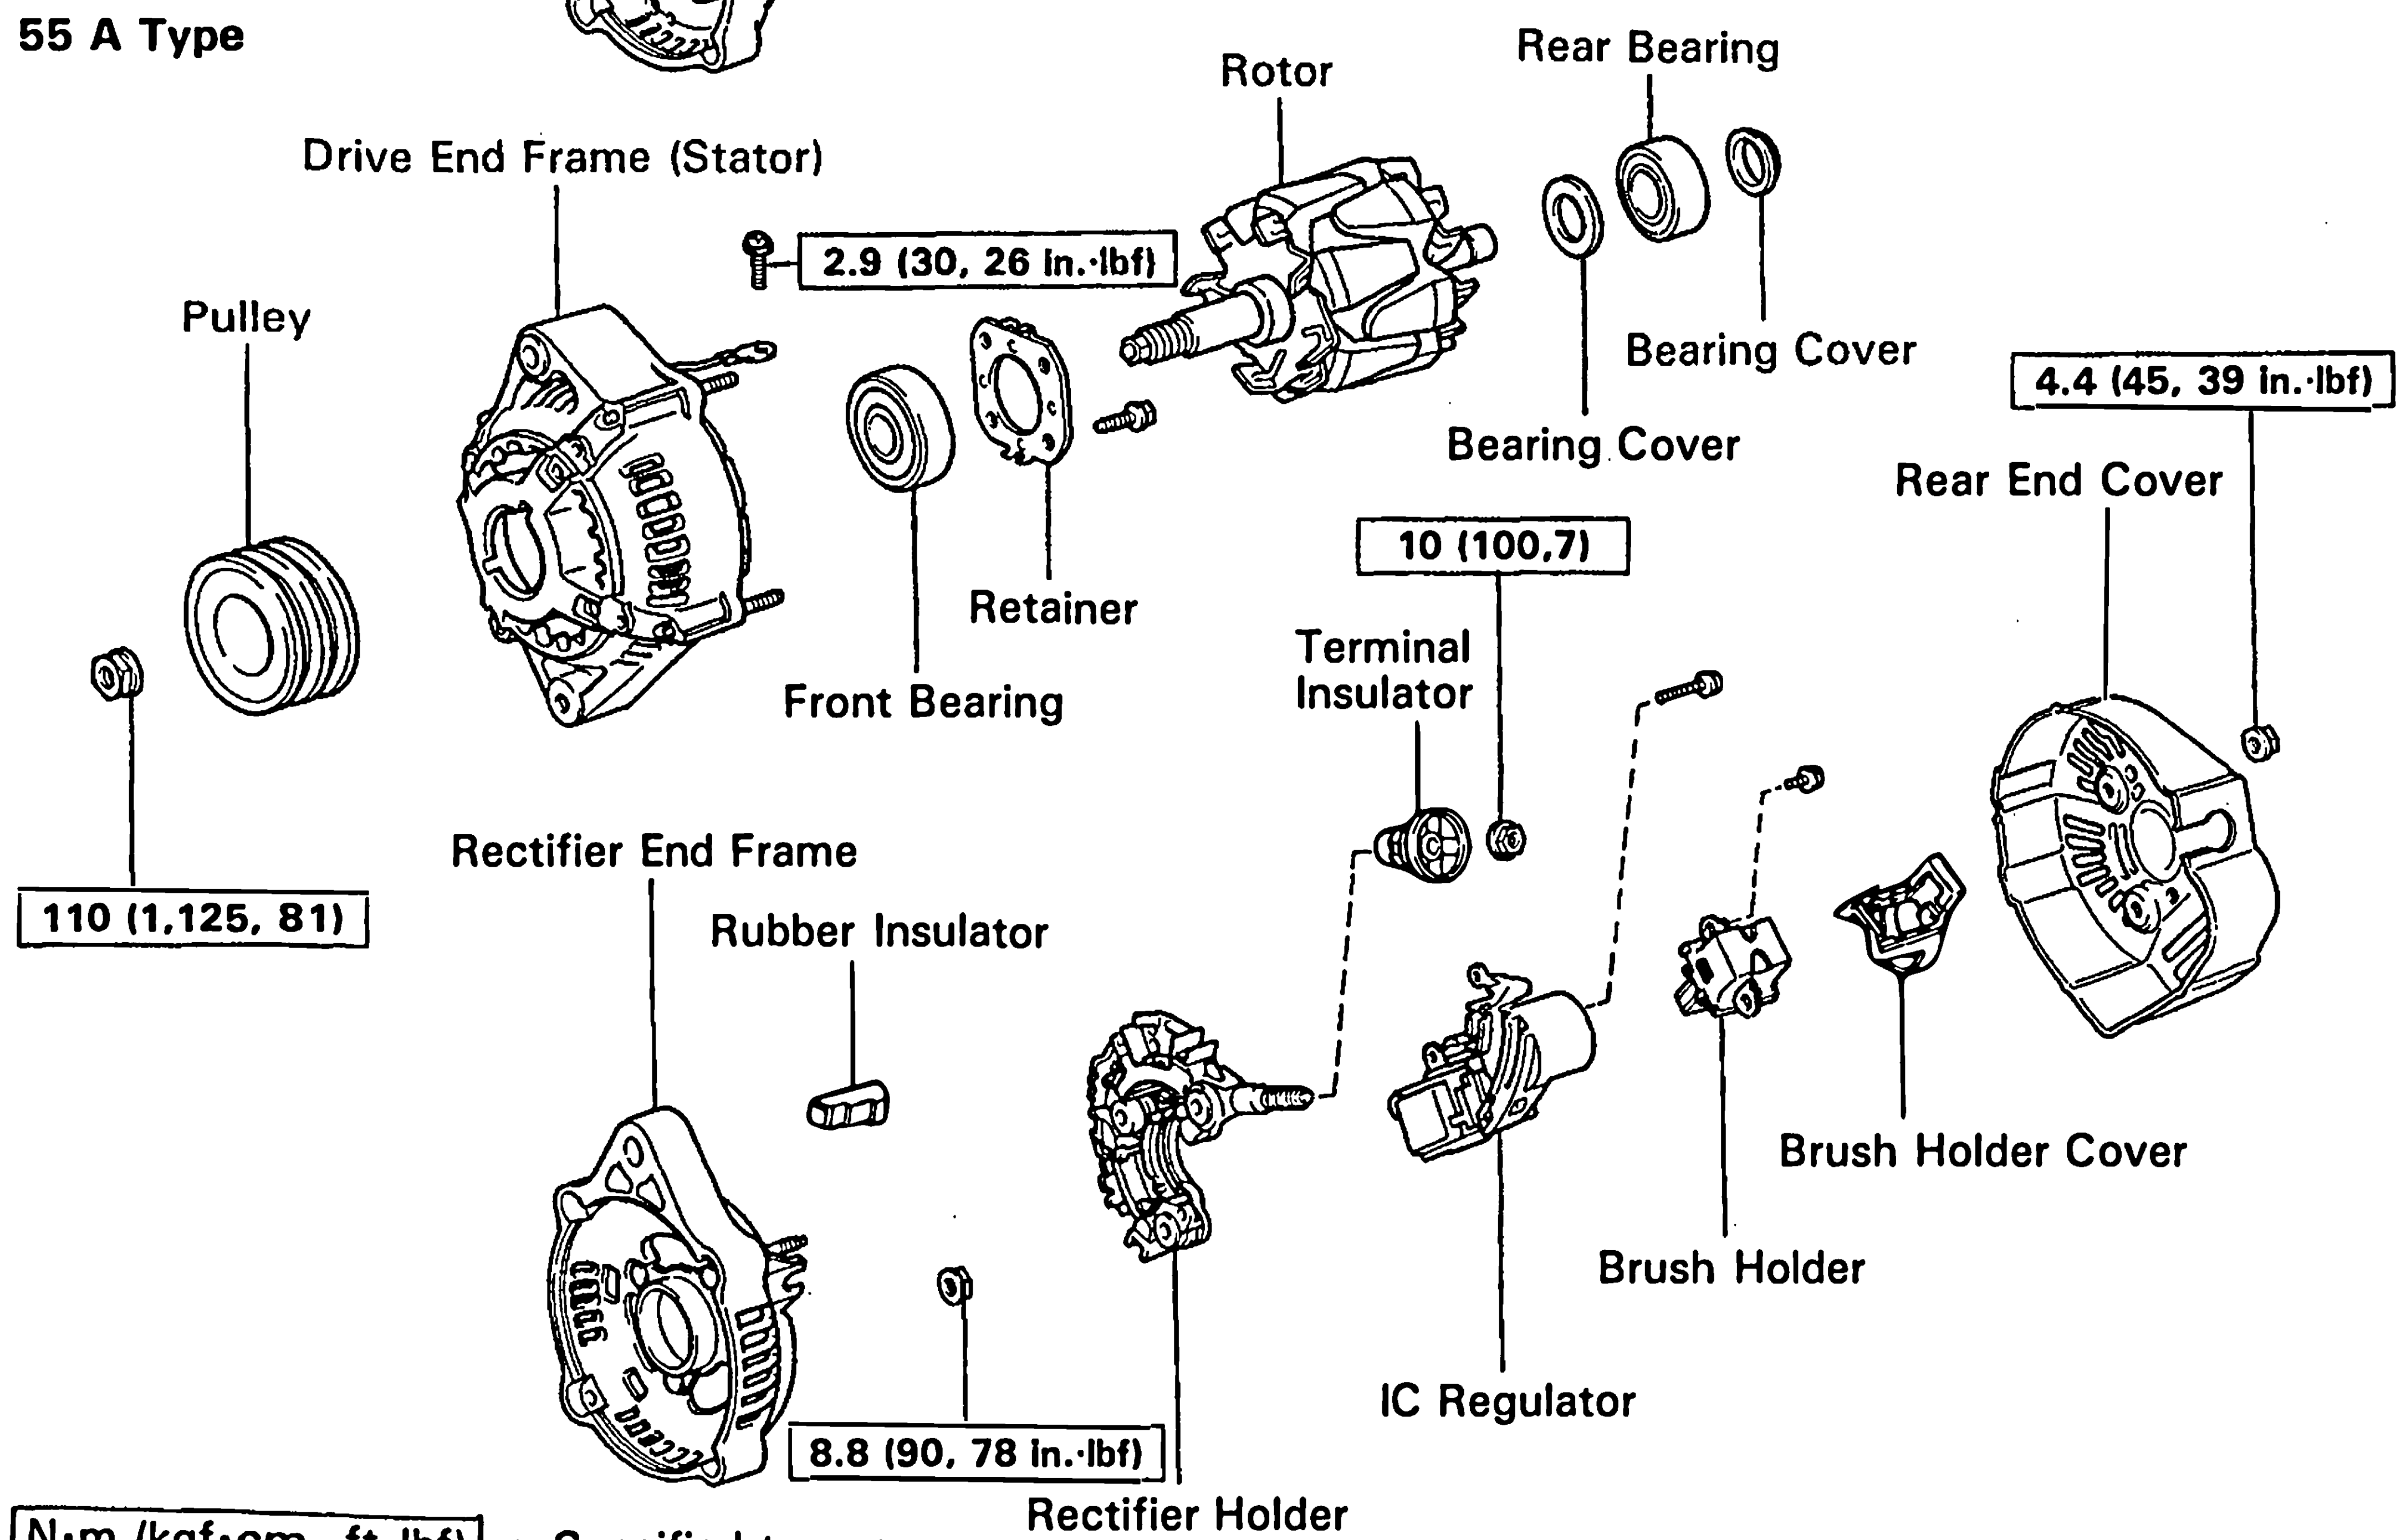

N·m (kgf·cm, ft·lbf) : Specified torque

80 A Type

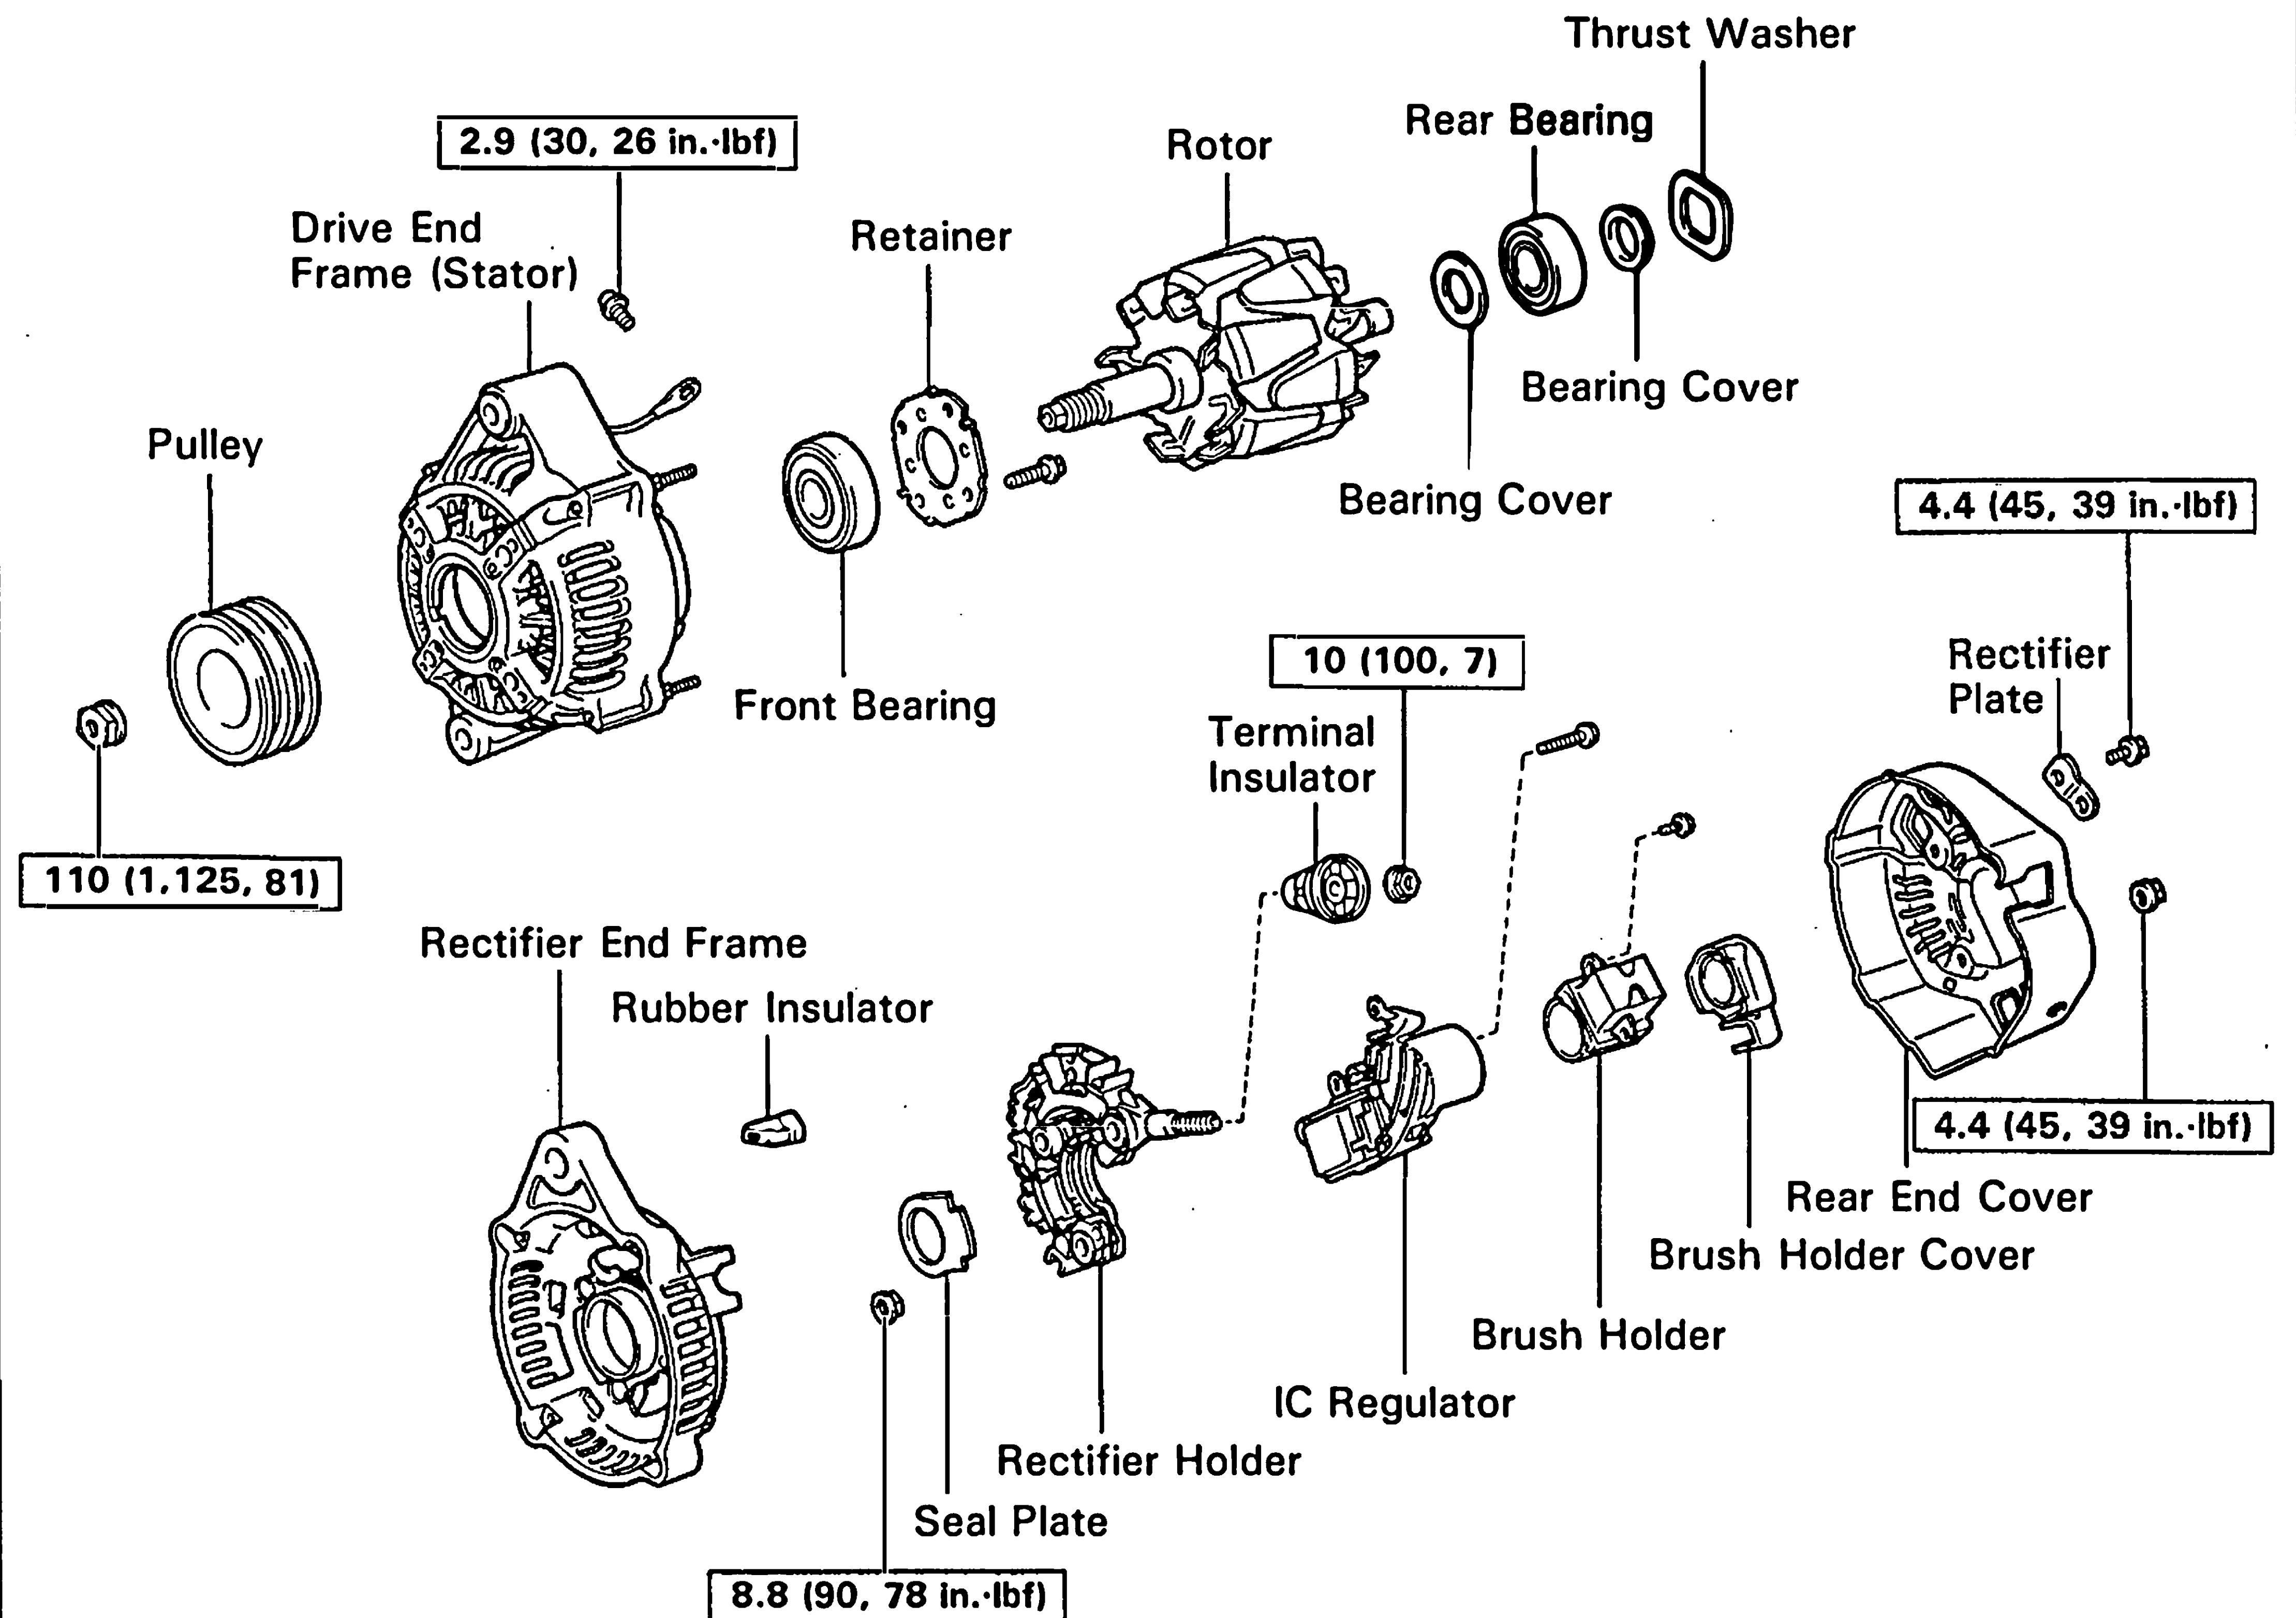

N·m (kgf·cm, ft·lbf) : Specified torque


P03804

CH02A-02

ALTERNATOR DISASSEMBLY

1. REMOVE REAR END COVER


(a) Remove the nut and terminal insulator.

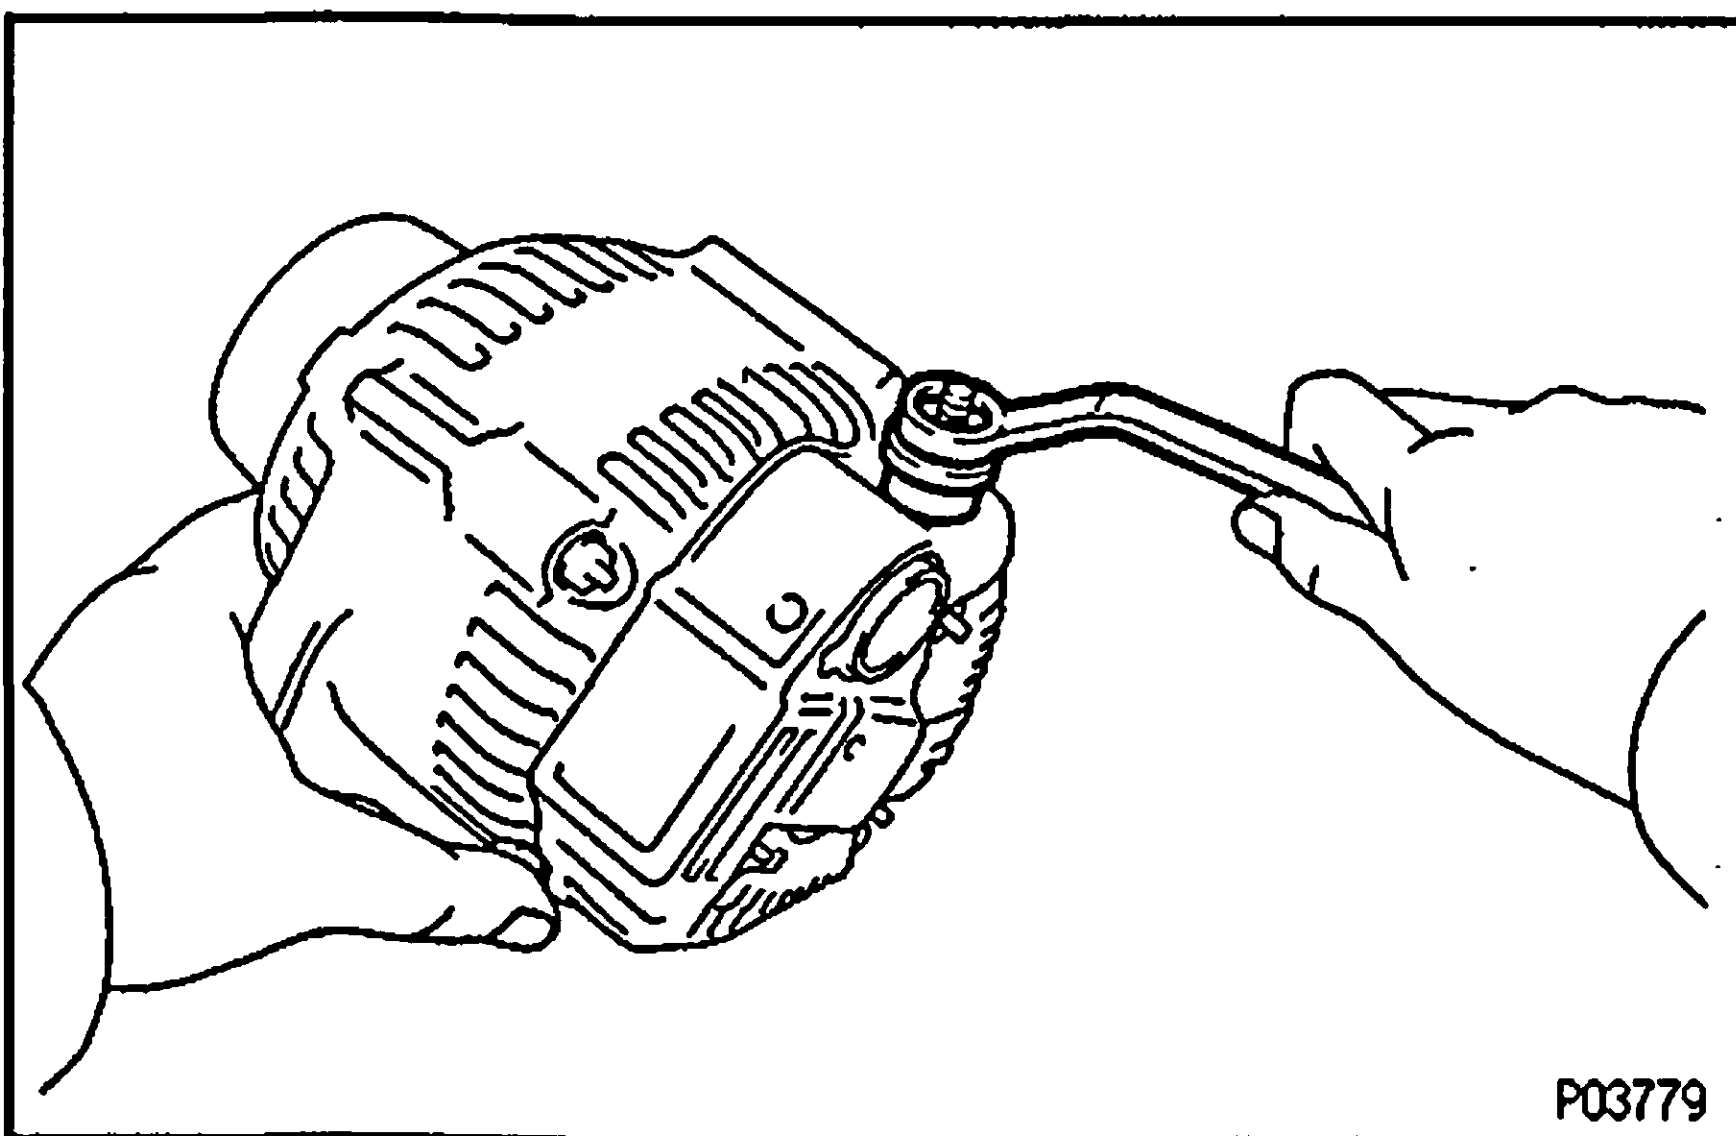


P03779

(b) (50 A Type)

Remove the three bolts and end cover.

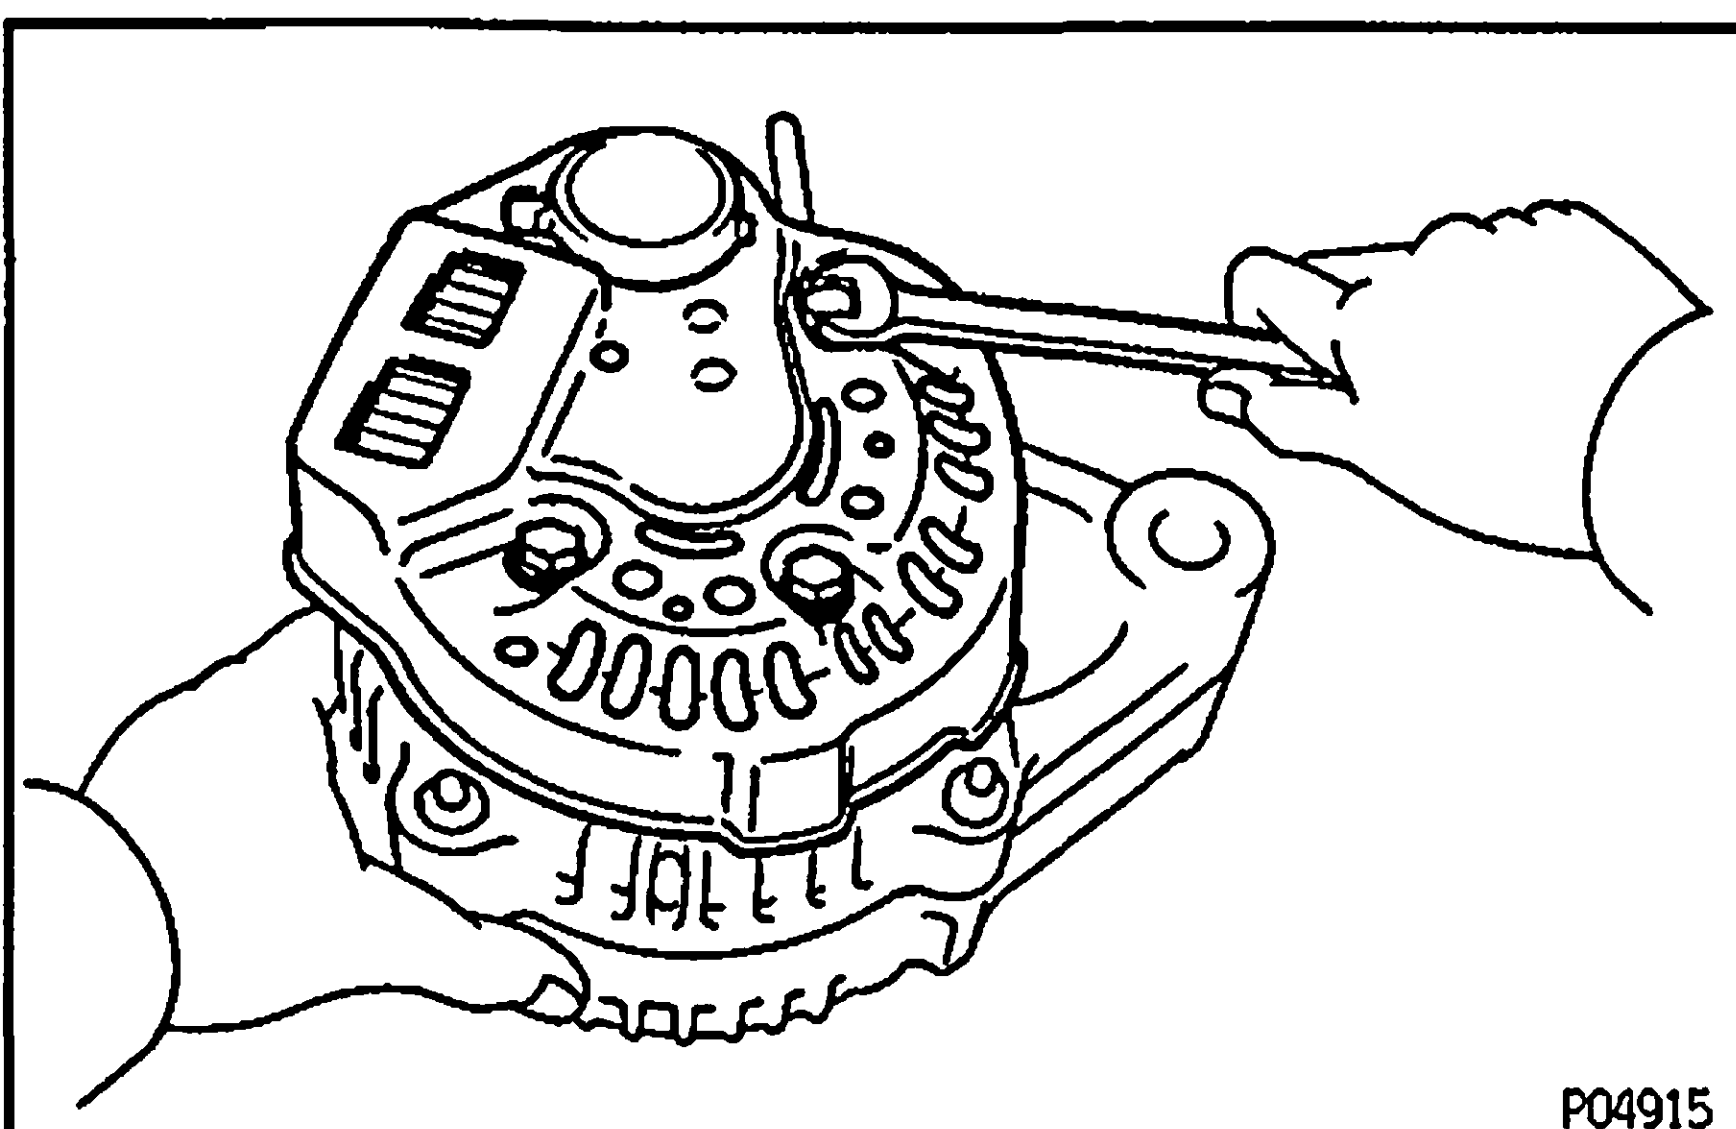


P04915

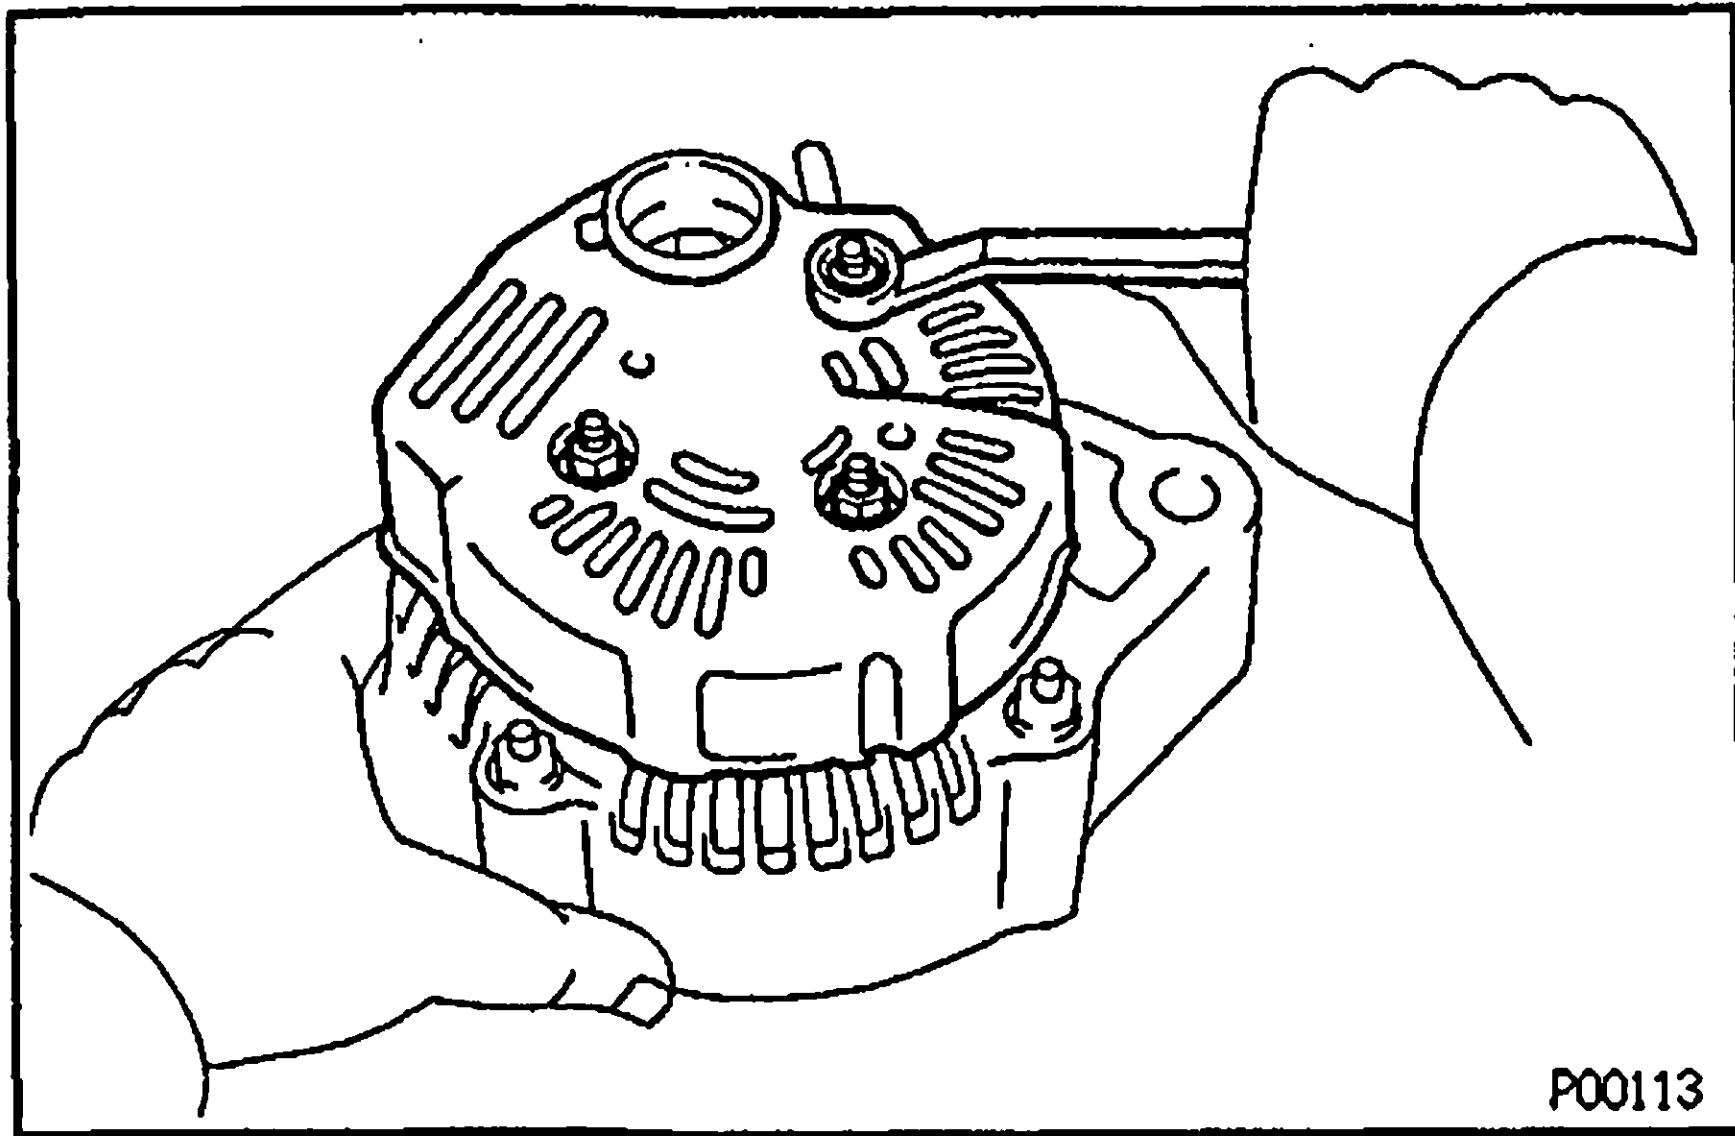

(55 A Type)


Remove the three nuts and end cover.

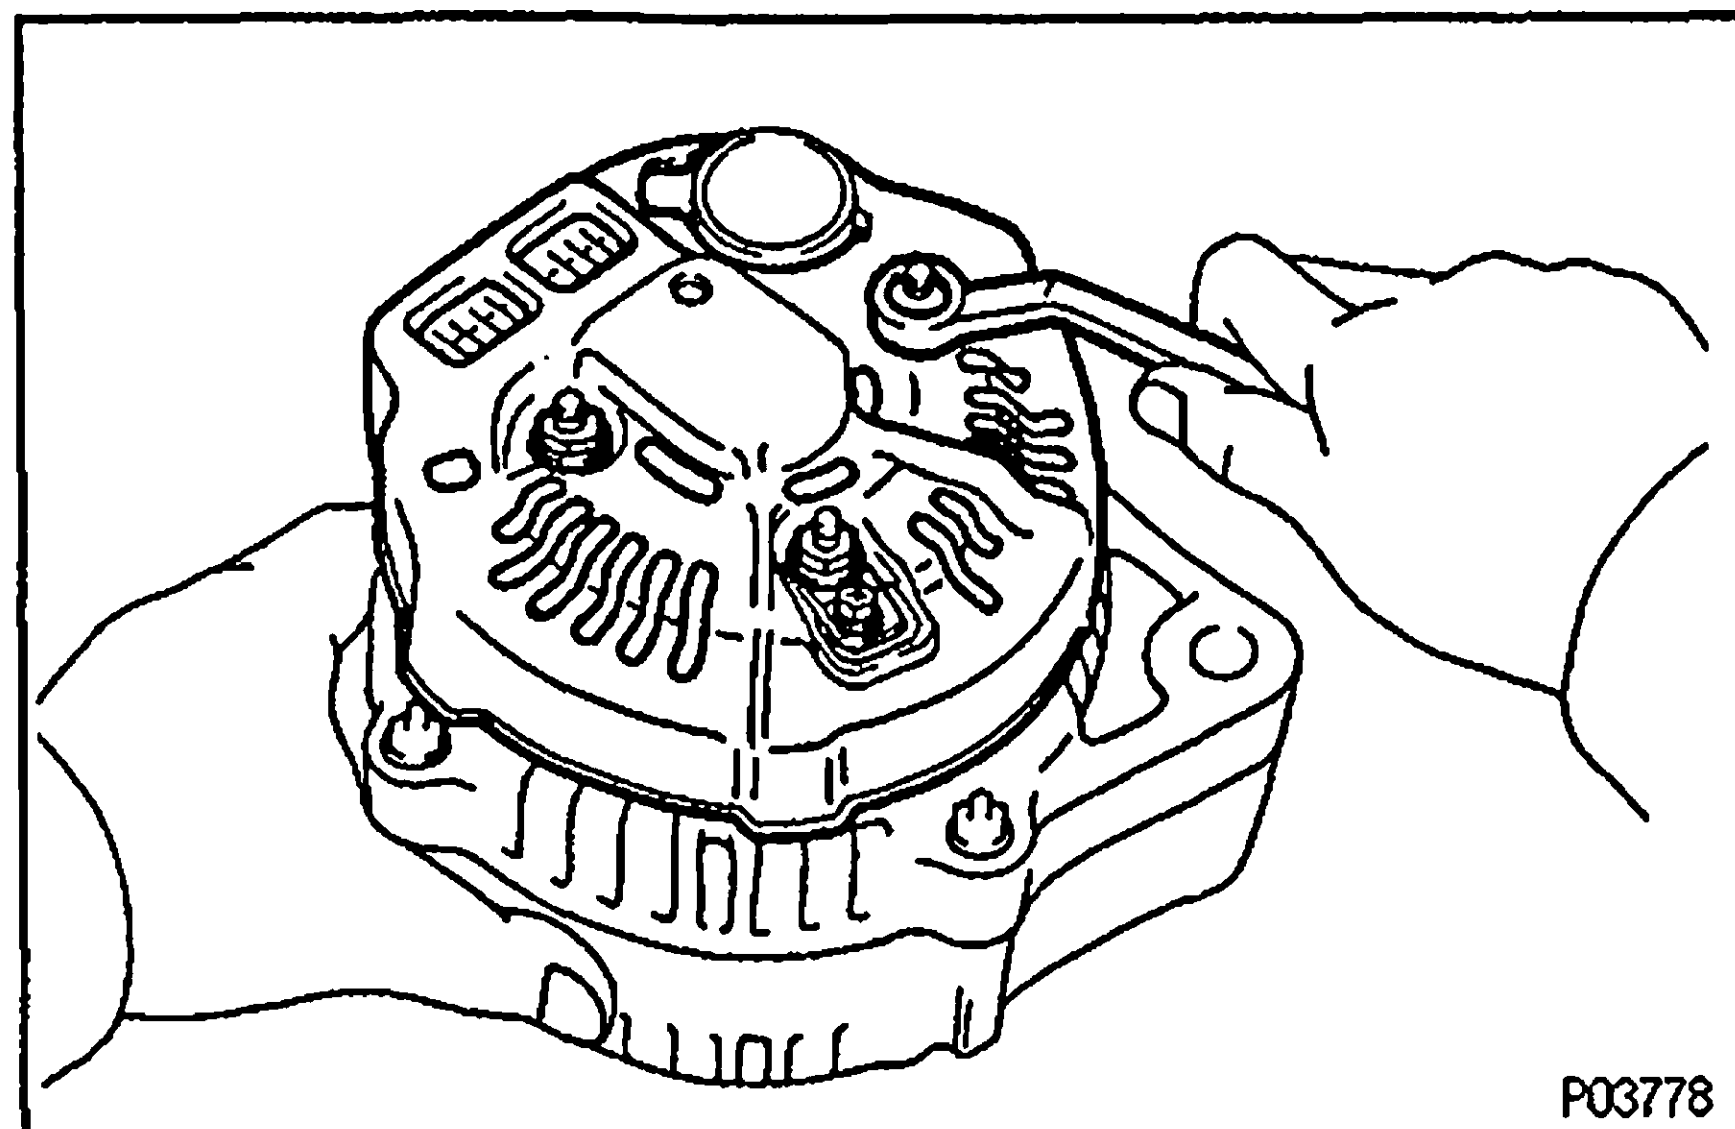

(80 A Type)

Remove the three nuts, screw, rectifier plate and end cover.


CH

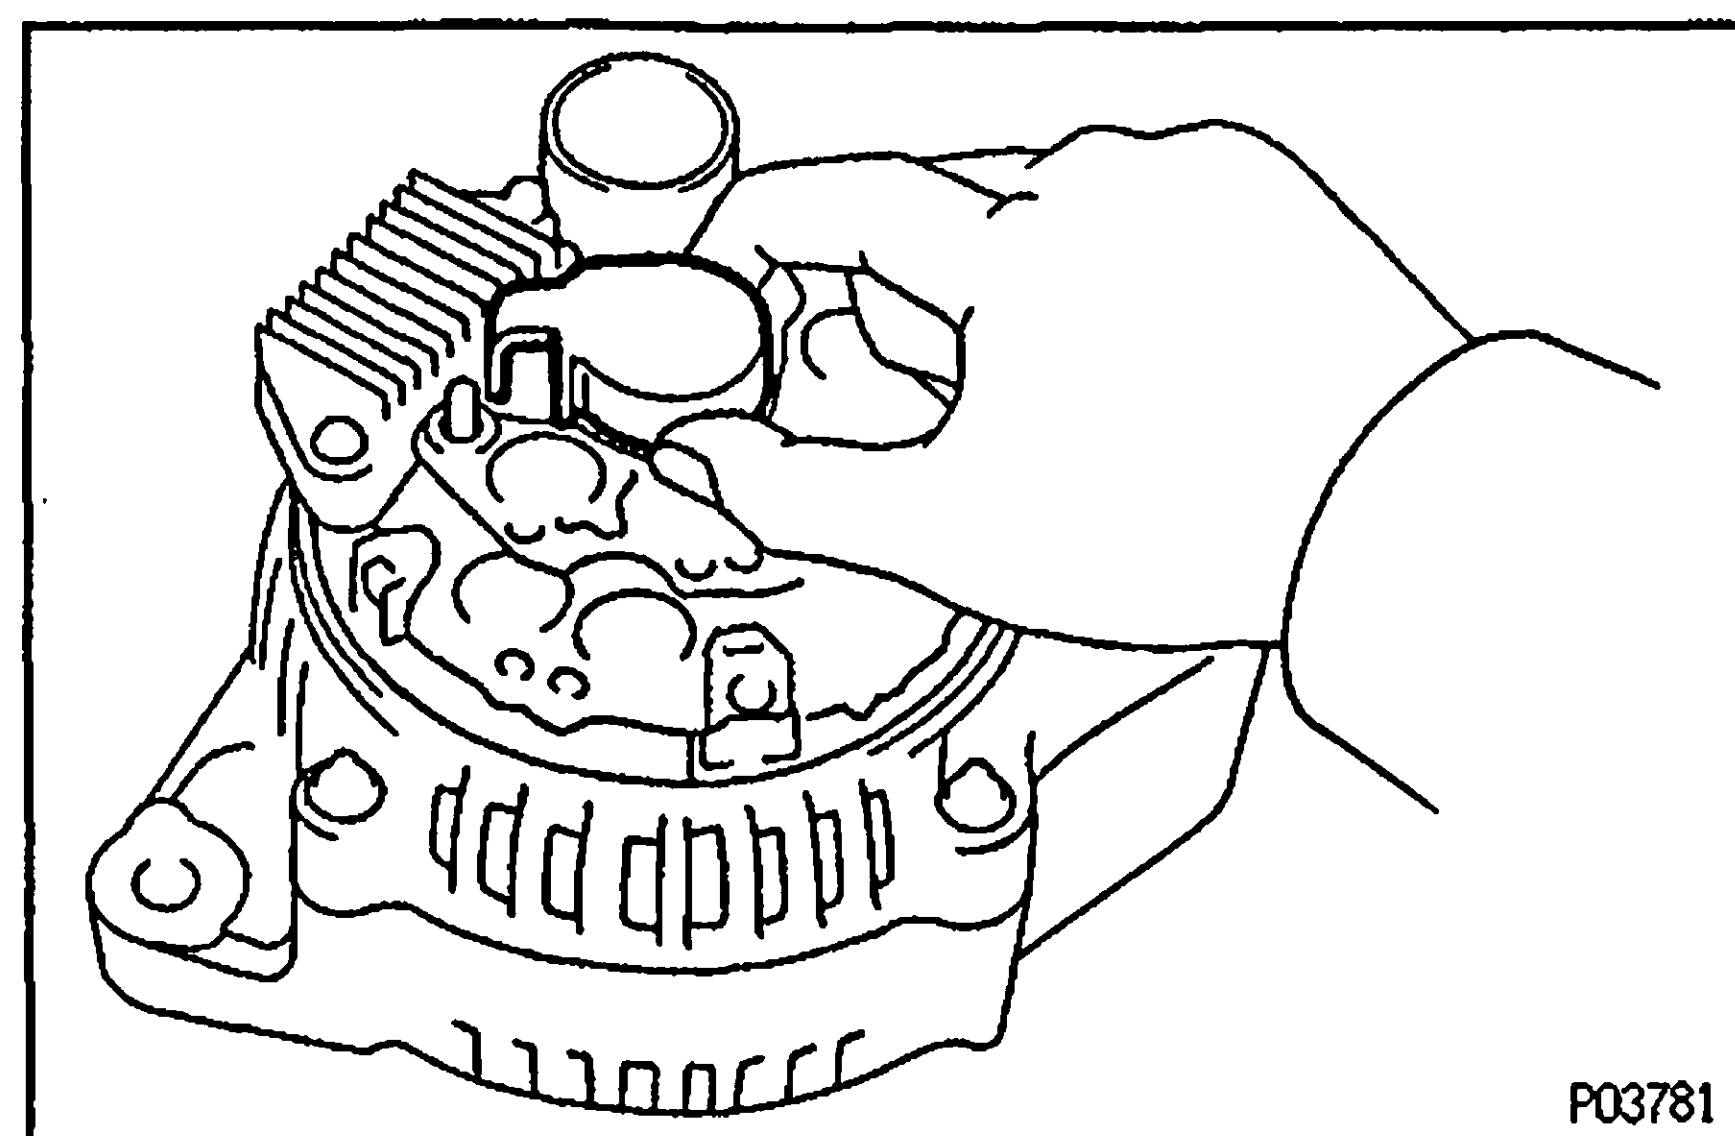


2. REMOVE BRUSH HOLDER AND IC REGULATOR

(a) (80 A Type)

Remove the brush holder cover from the brush holder.

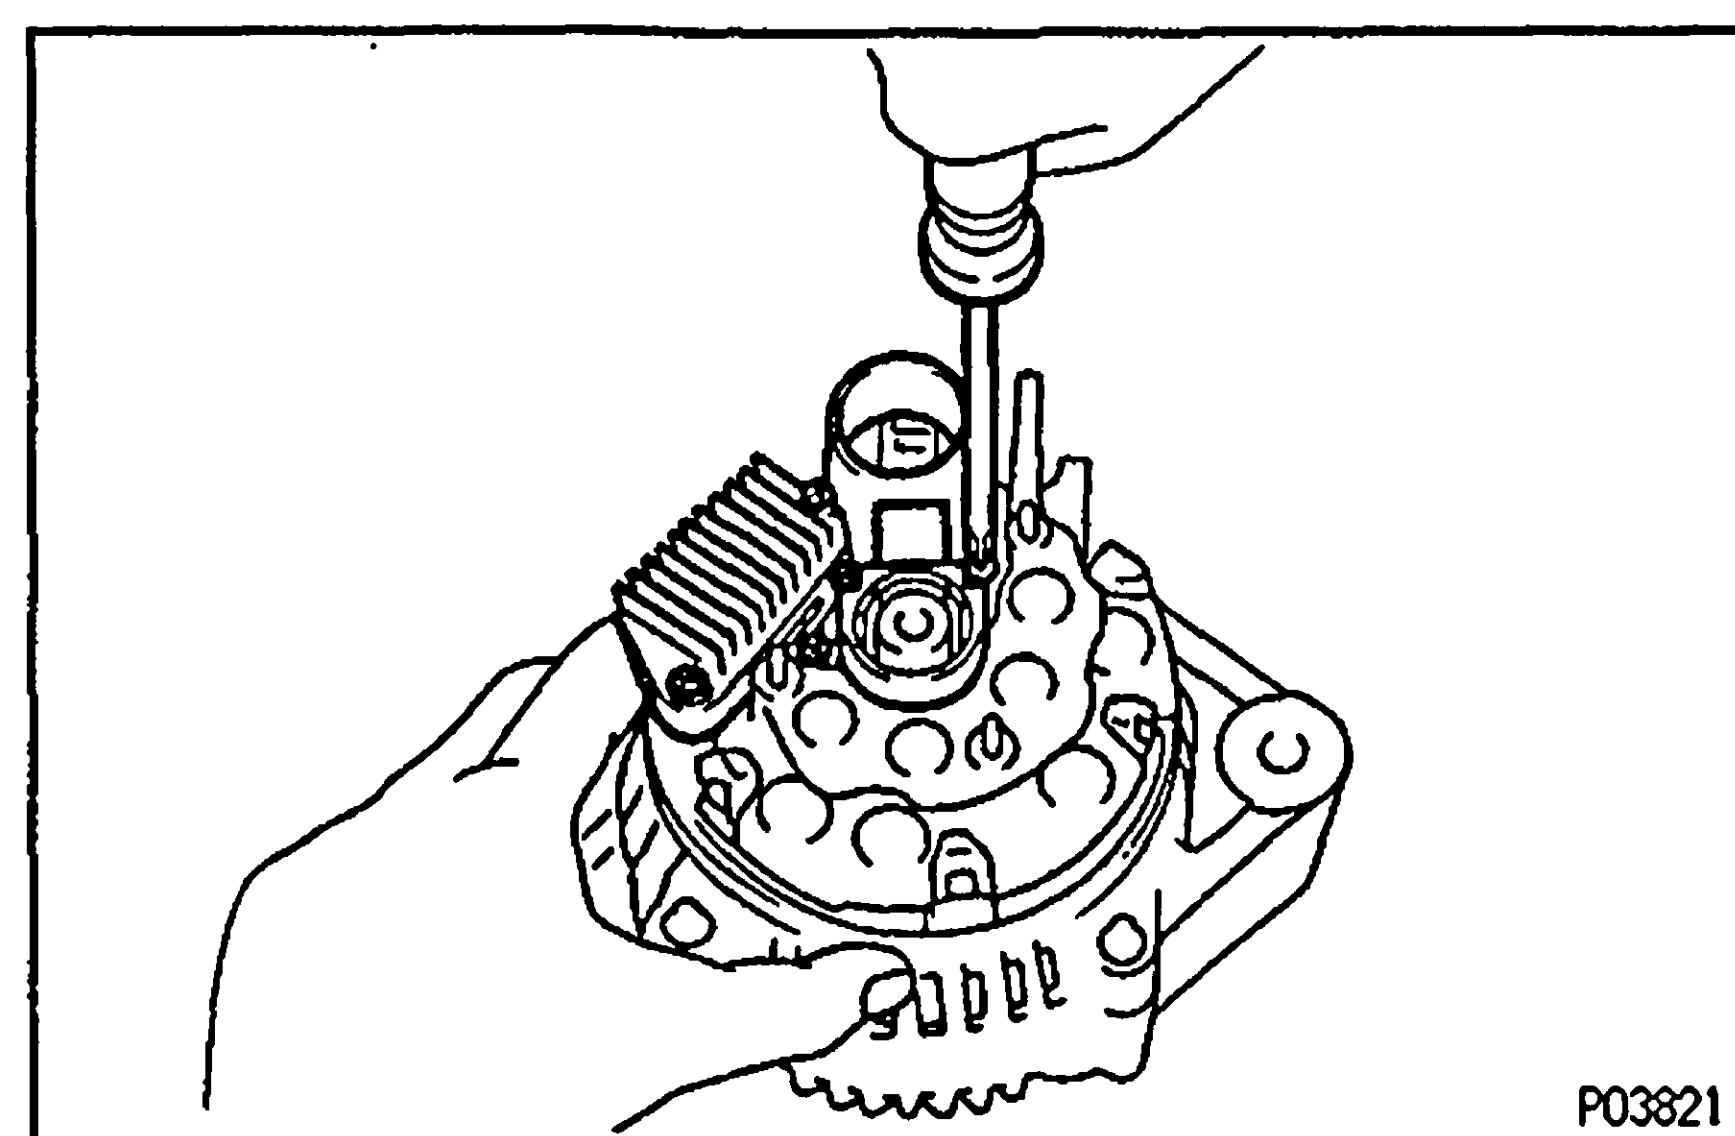


(b) Remove the five screws, brush holder and IC regulator.

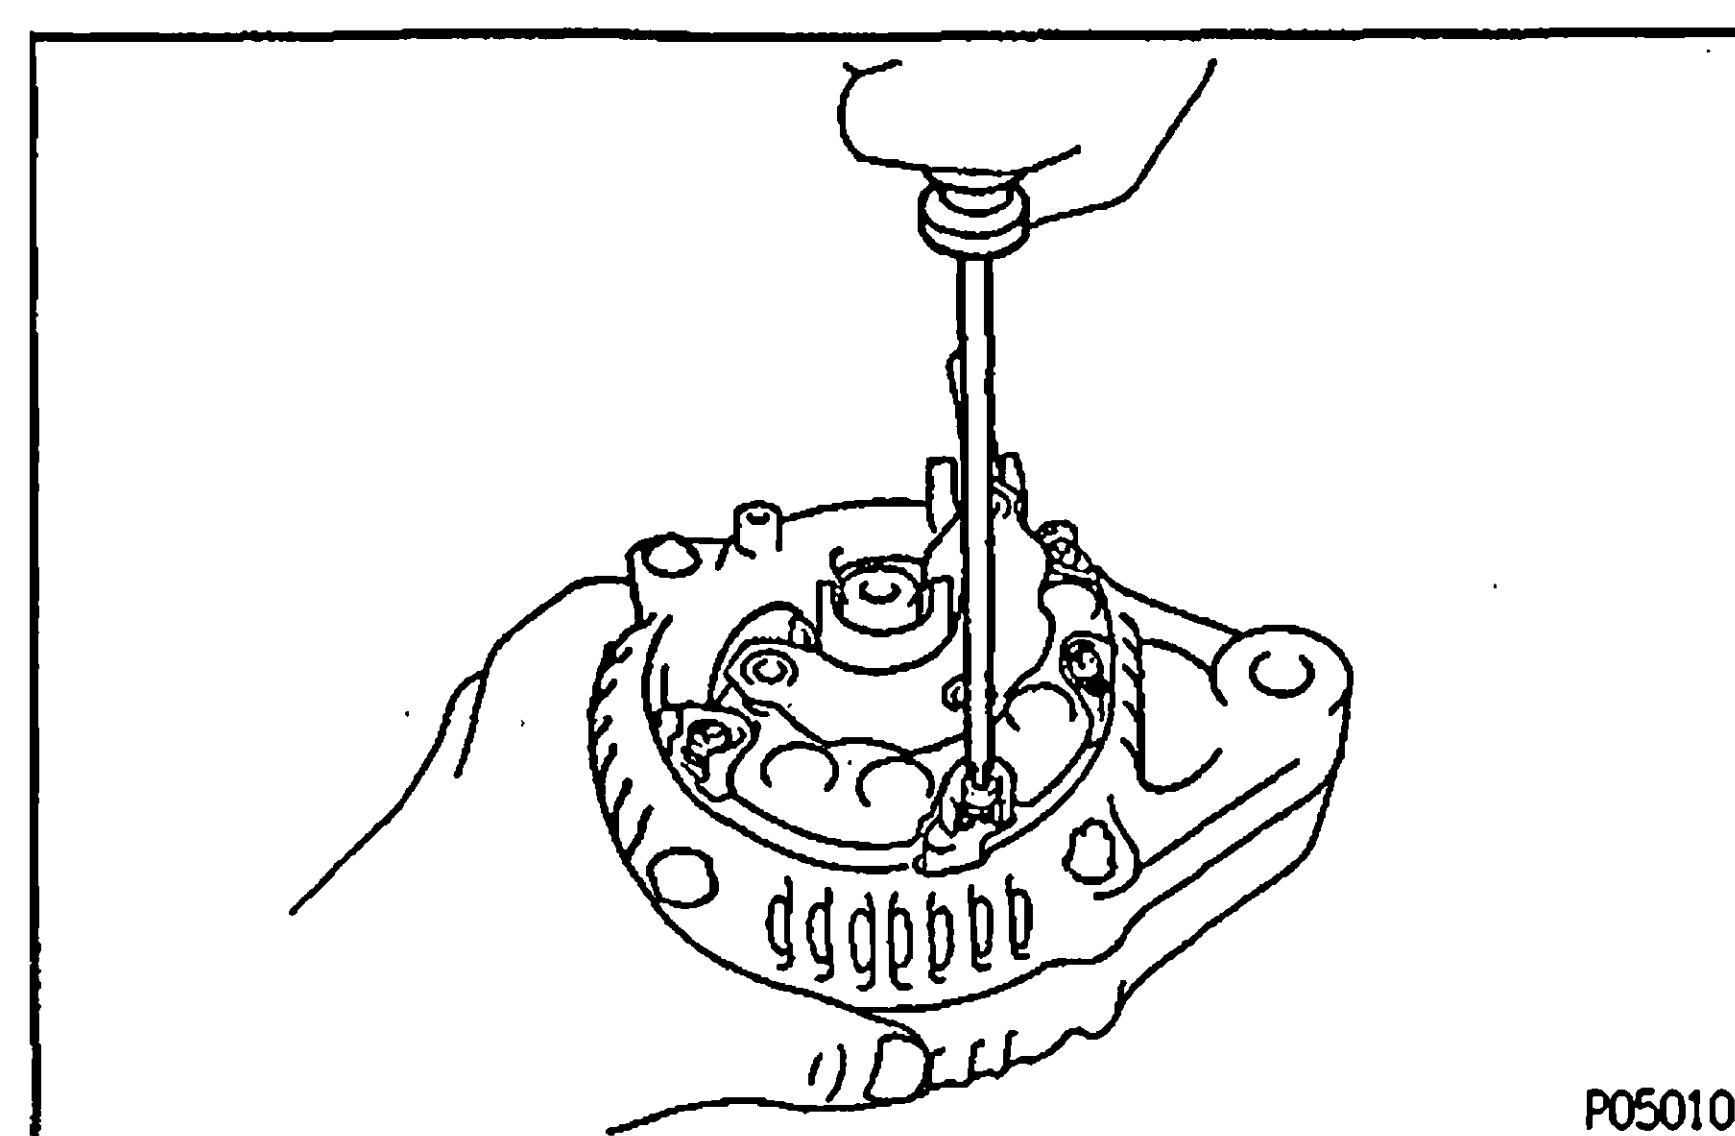

3. REMOVE RECTIFIER HOLDER


(50 A Type)

(a) Remove the four screws.

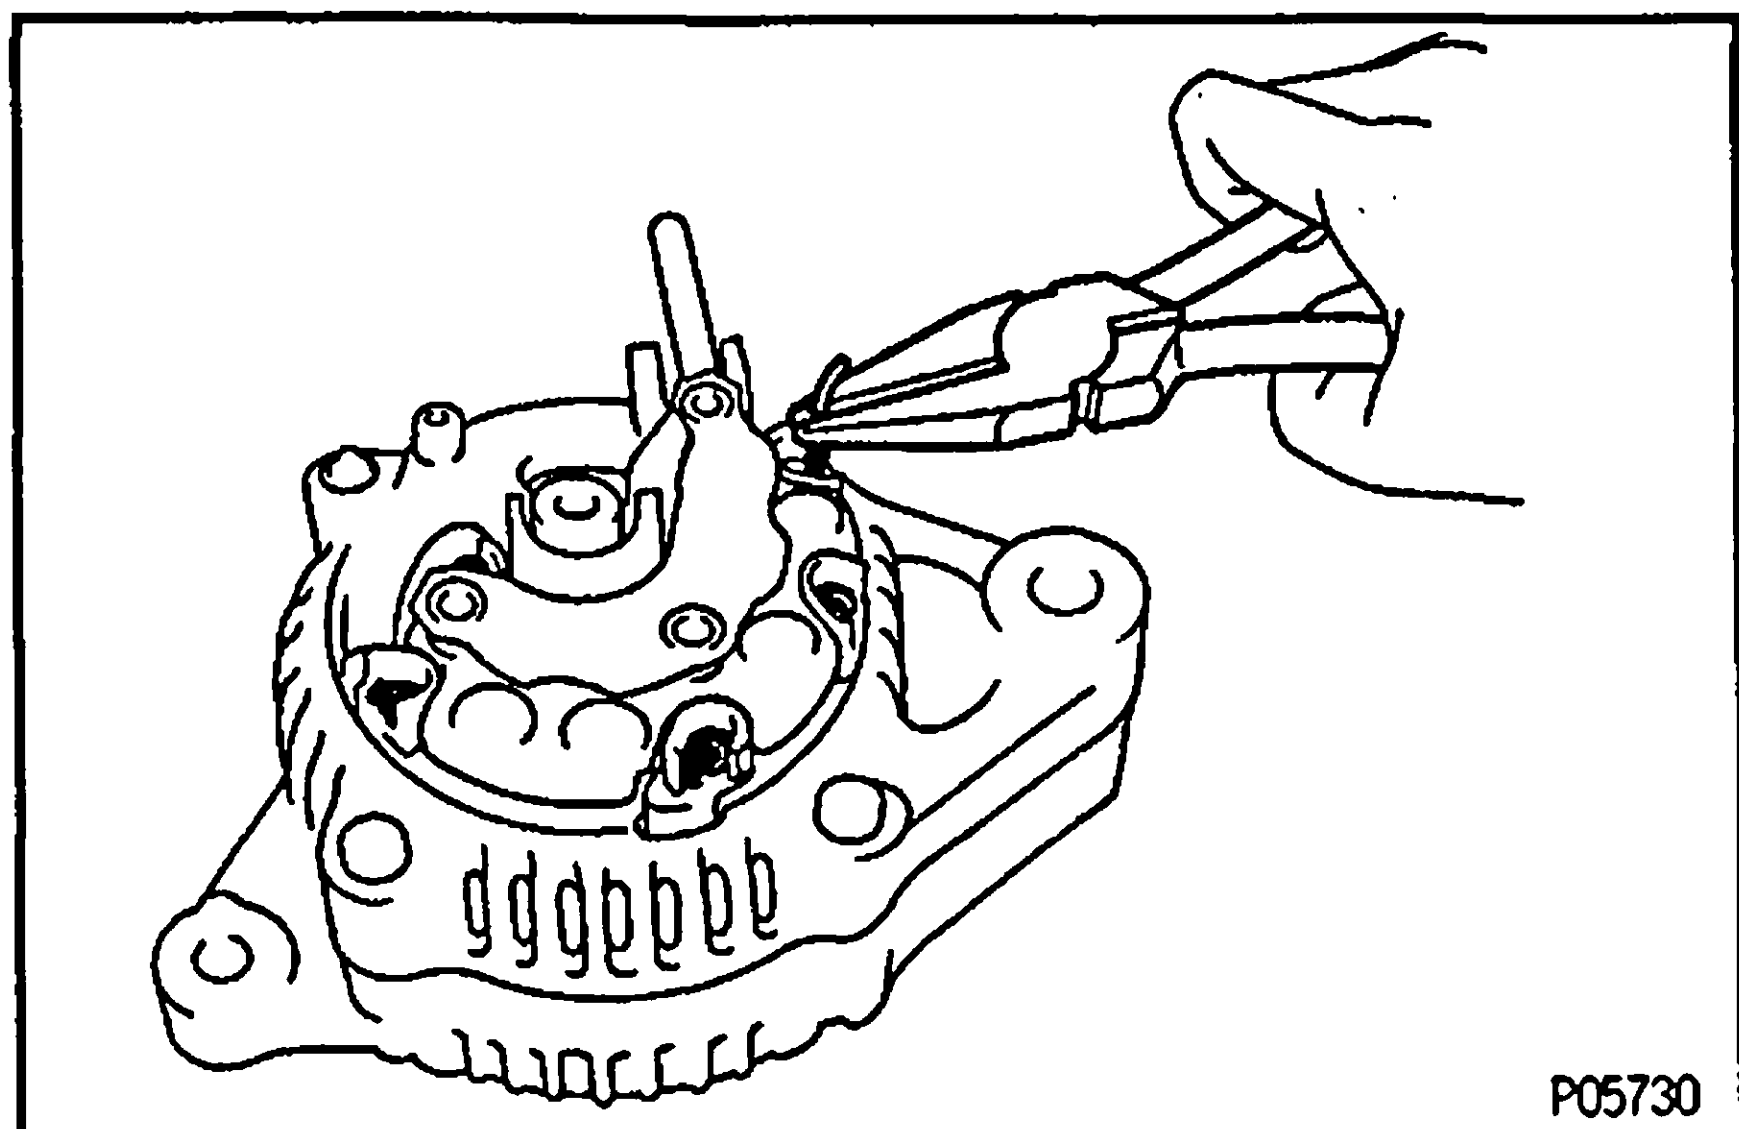


- (b) Using needle-nose pliers, straighten the stator lead wire.
- (c) Remove the rectifier holder.


CH

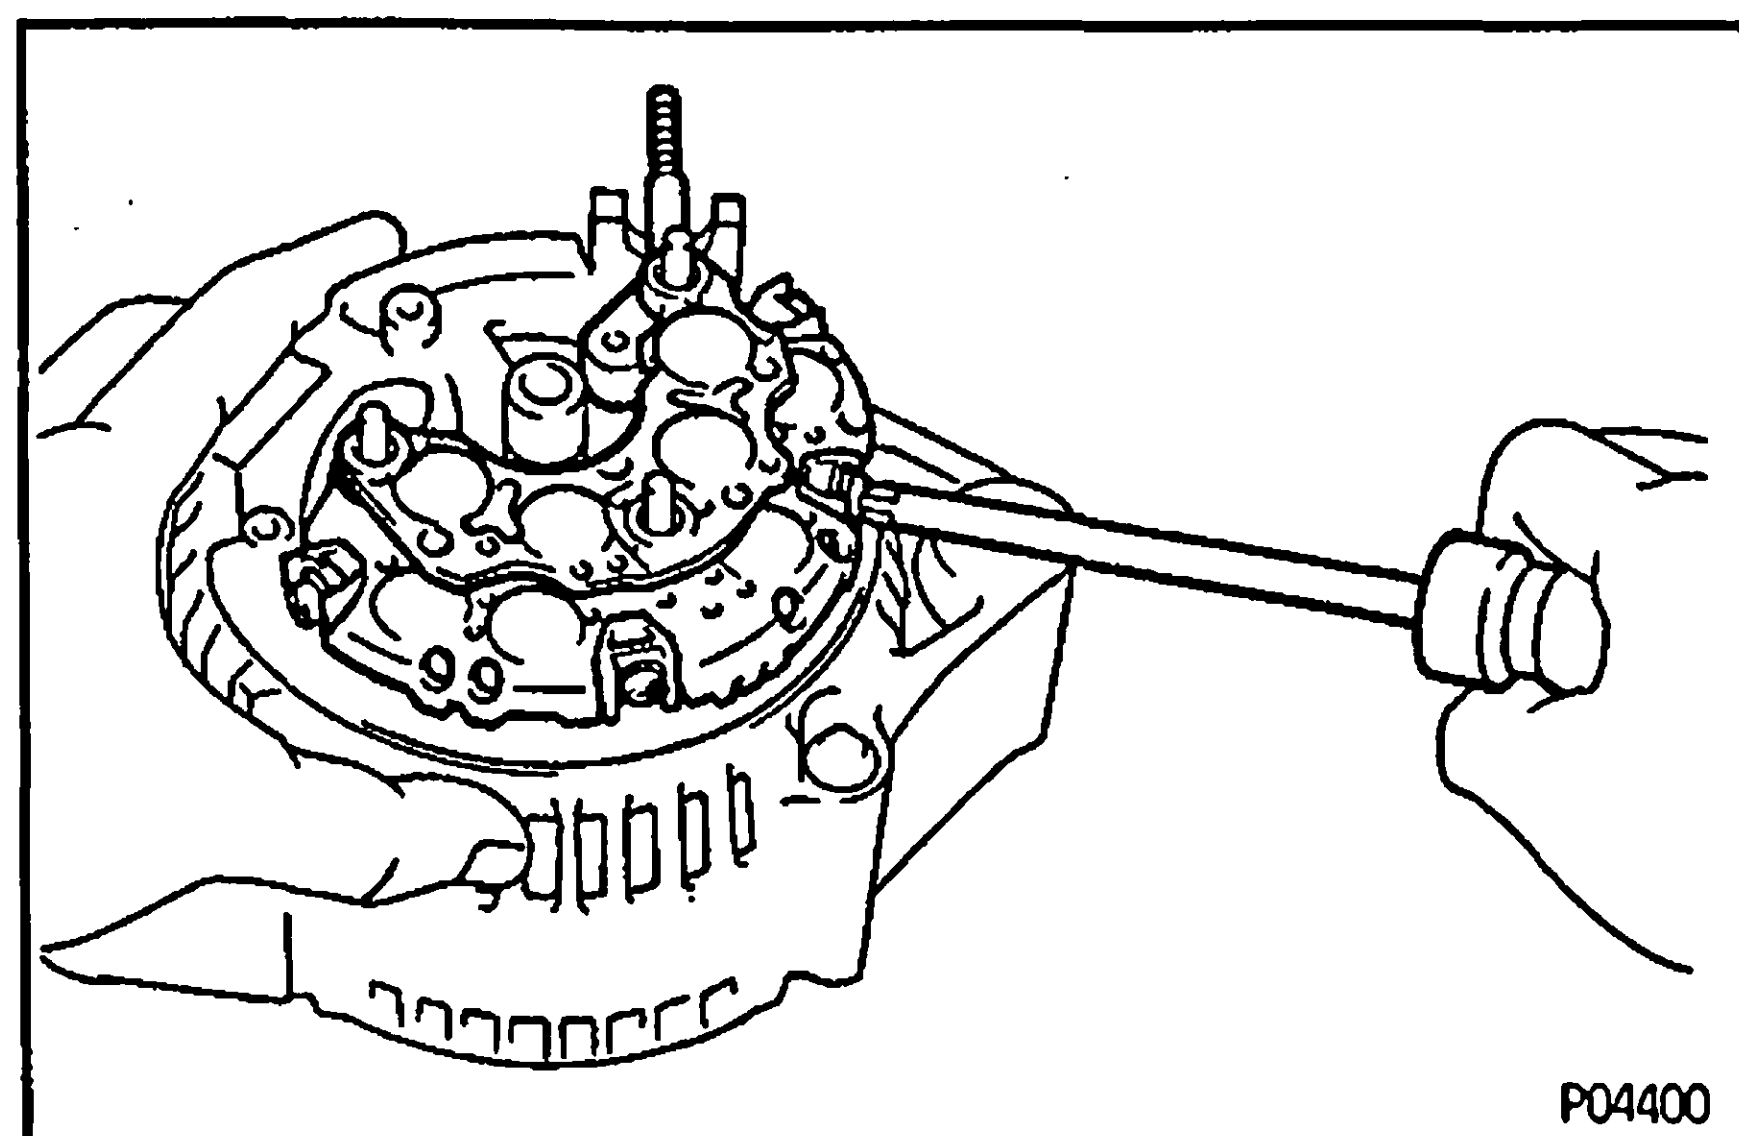**(55 A and 80 A Types)**


- (a) Remove the four screws and rectifier holder.

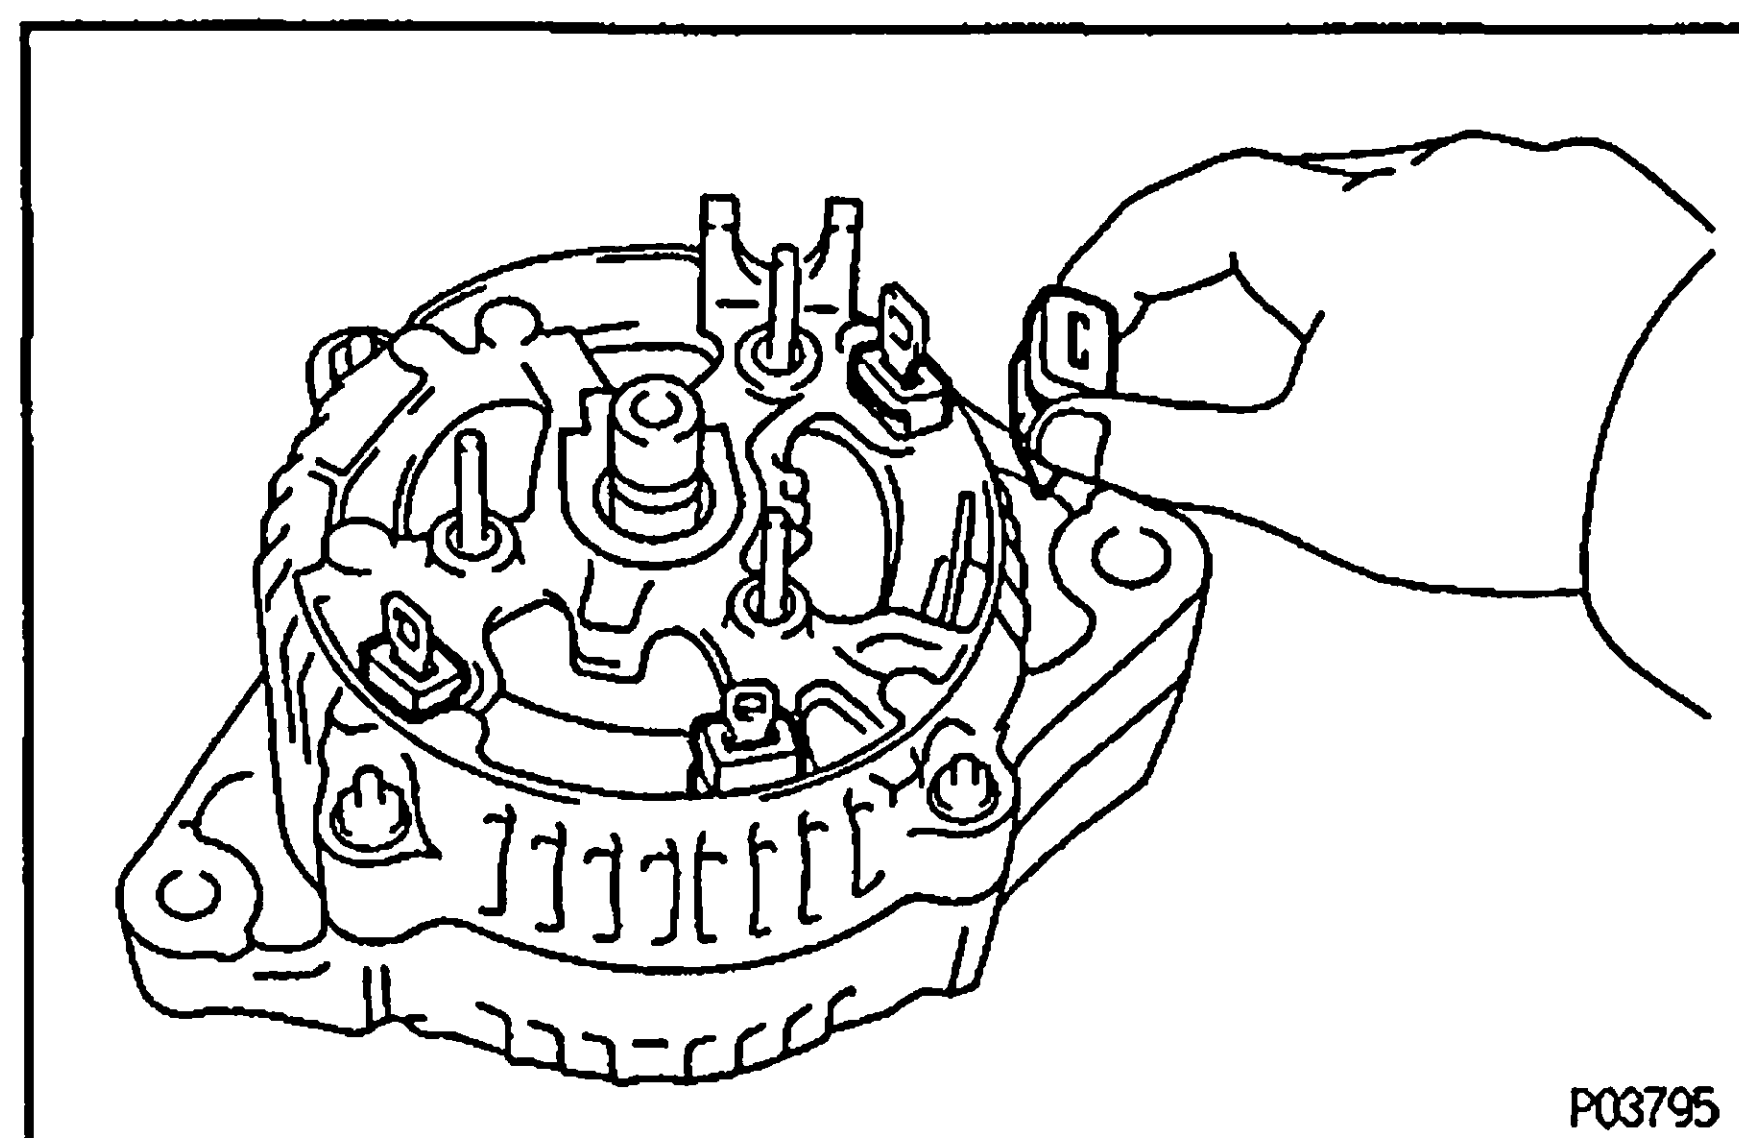


- (b) Remove the four rubber insulators.

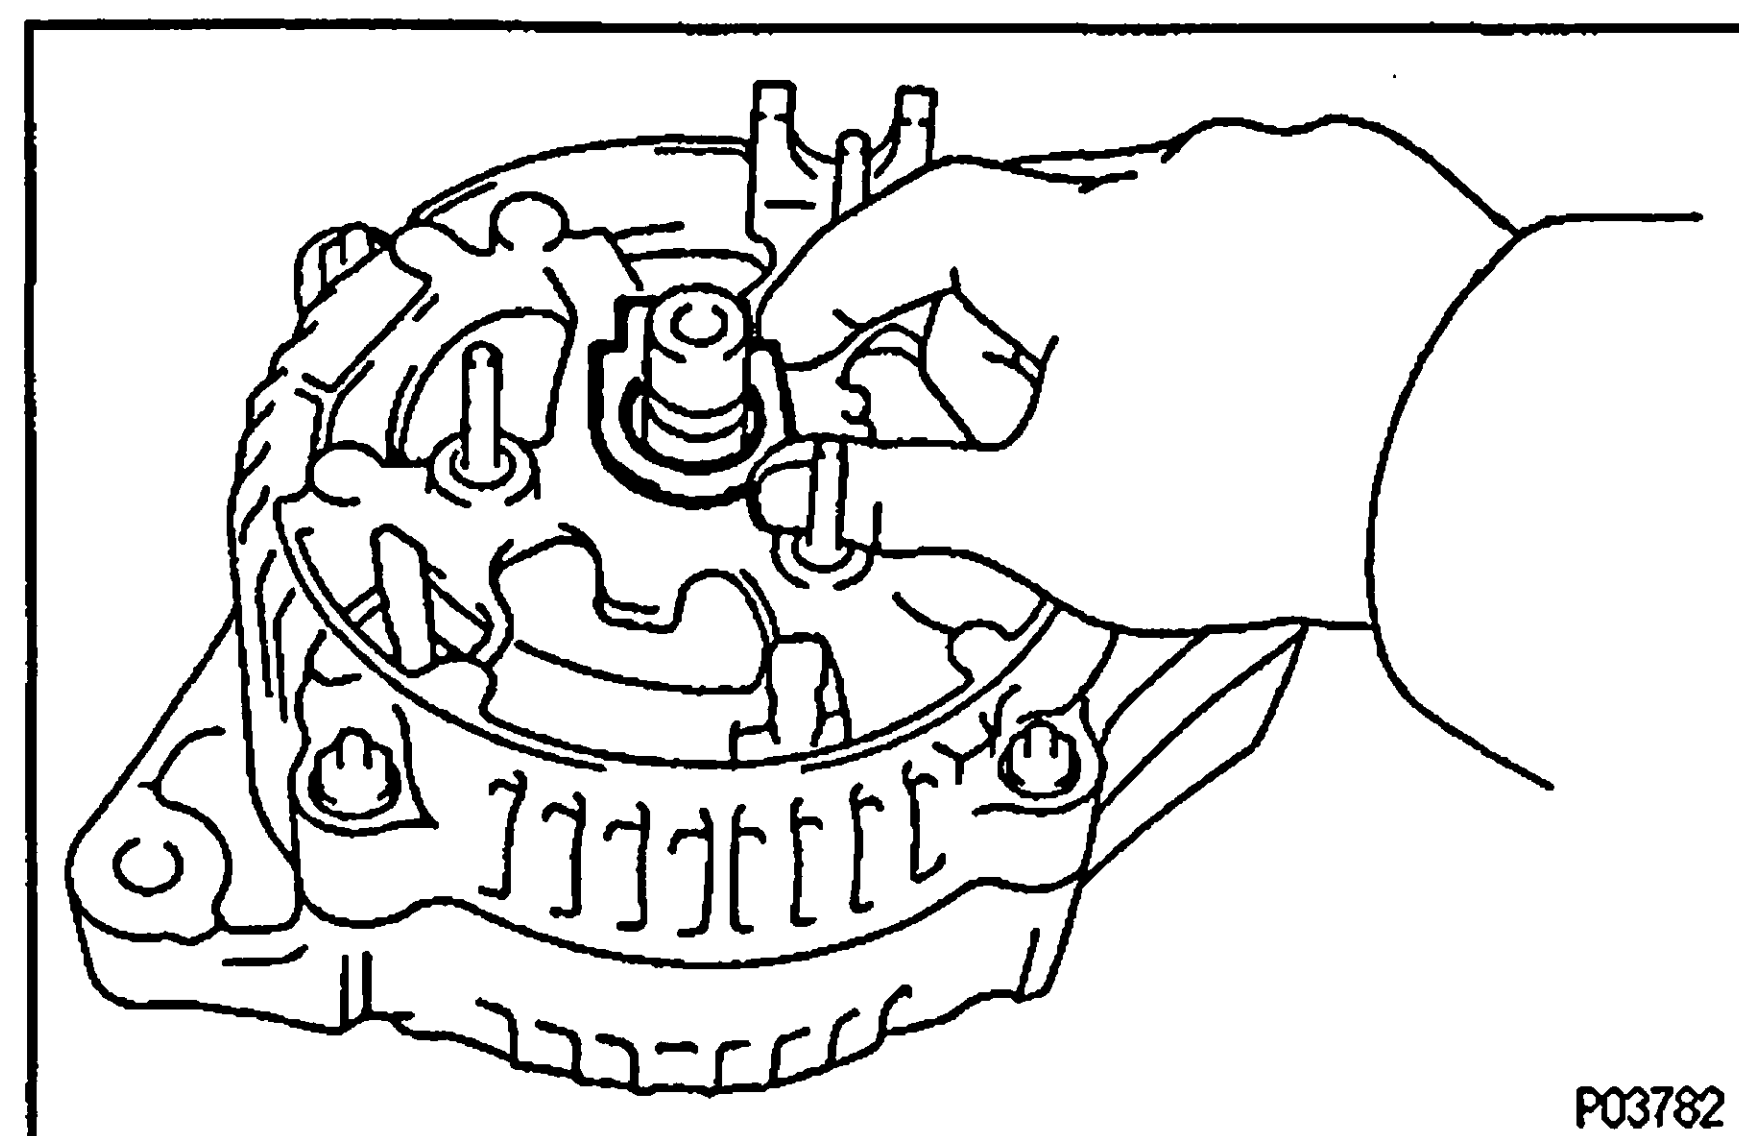


- (c) (80 A Type)
Remove the seal plate.

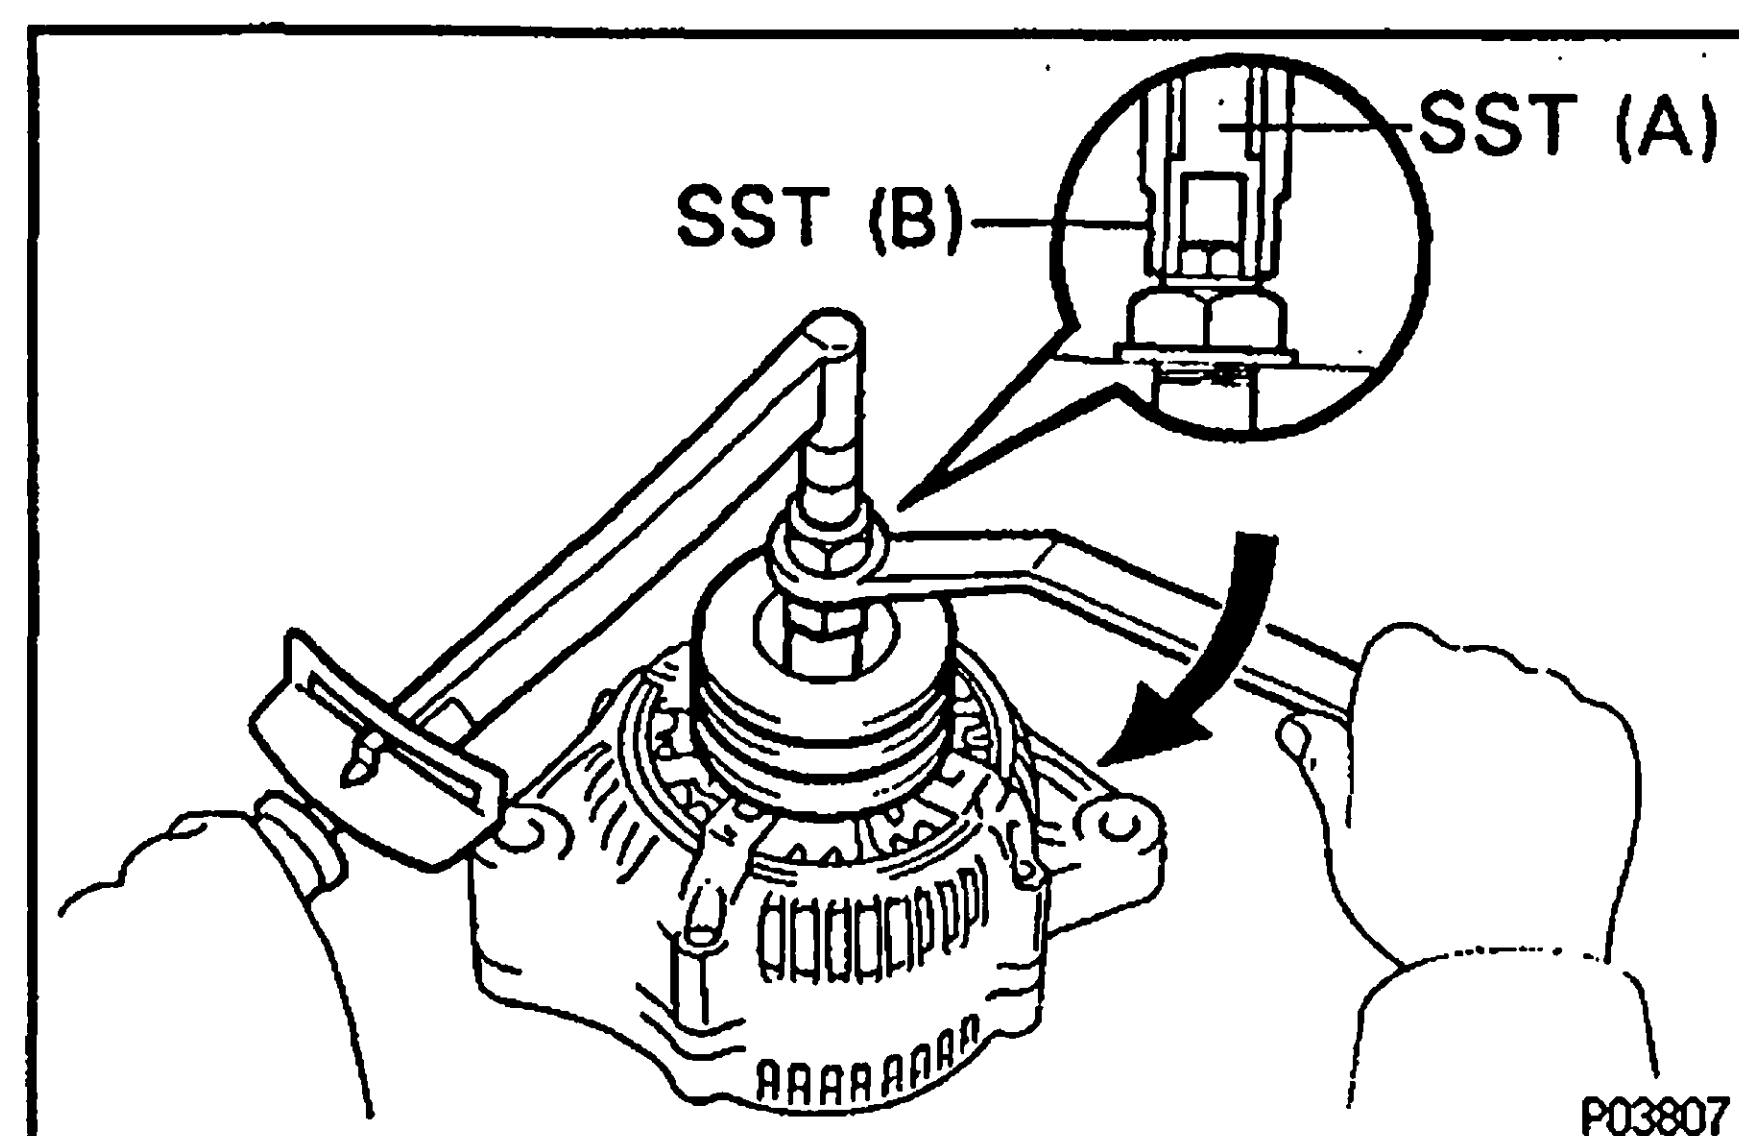**4. REMOVE PULLEY**

- (a) Hold SST (A) with a torque wrench, and tighten SST (B) clockwise to the specified torque.
SST 09820-63010
Torque: 39 N·m (400 kgf·cm, 29 ft·lbf)
- (b) Check that SST (A) is secured to the rotor shaft.

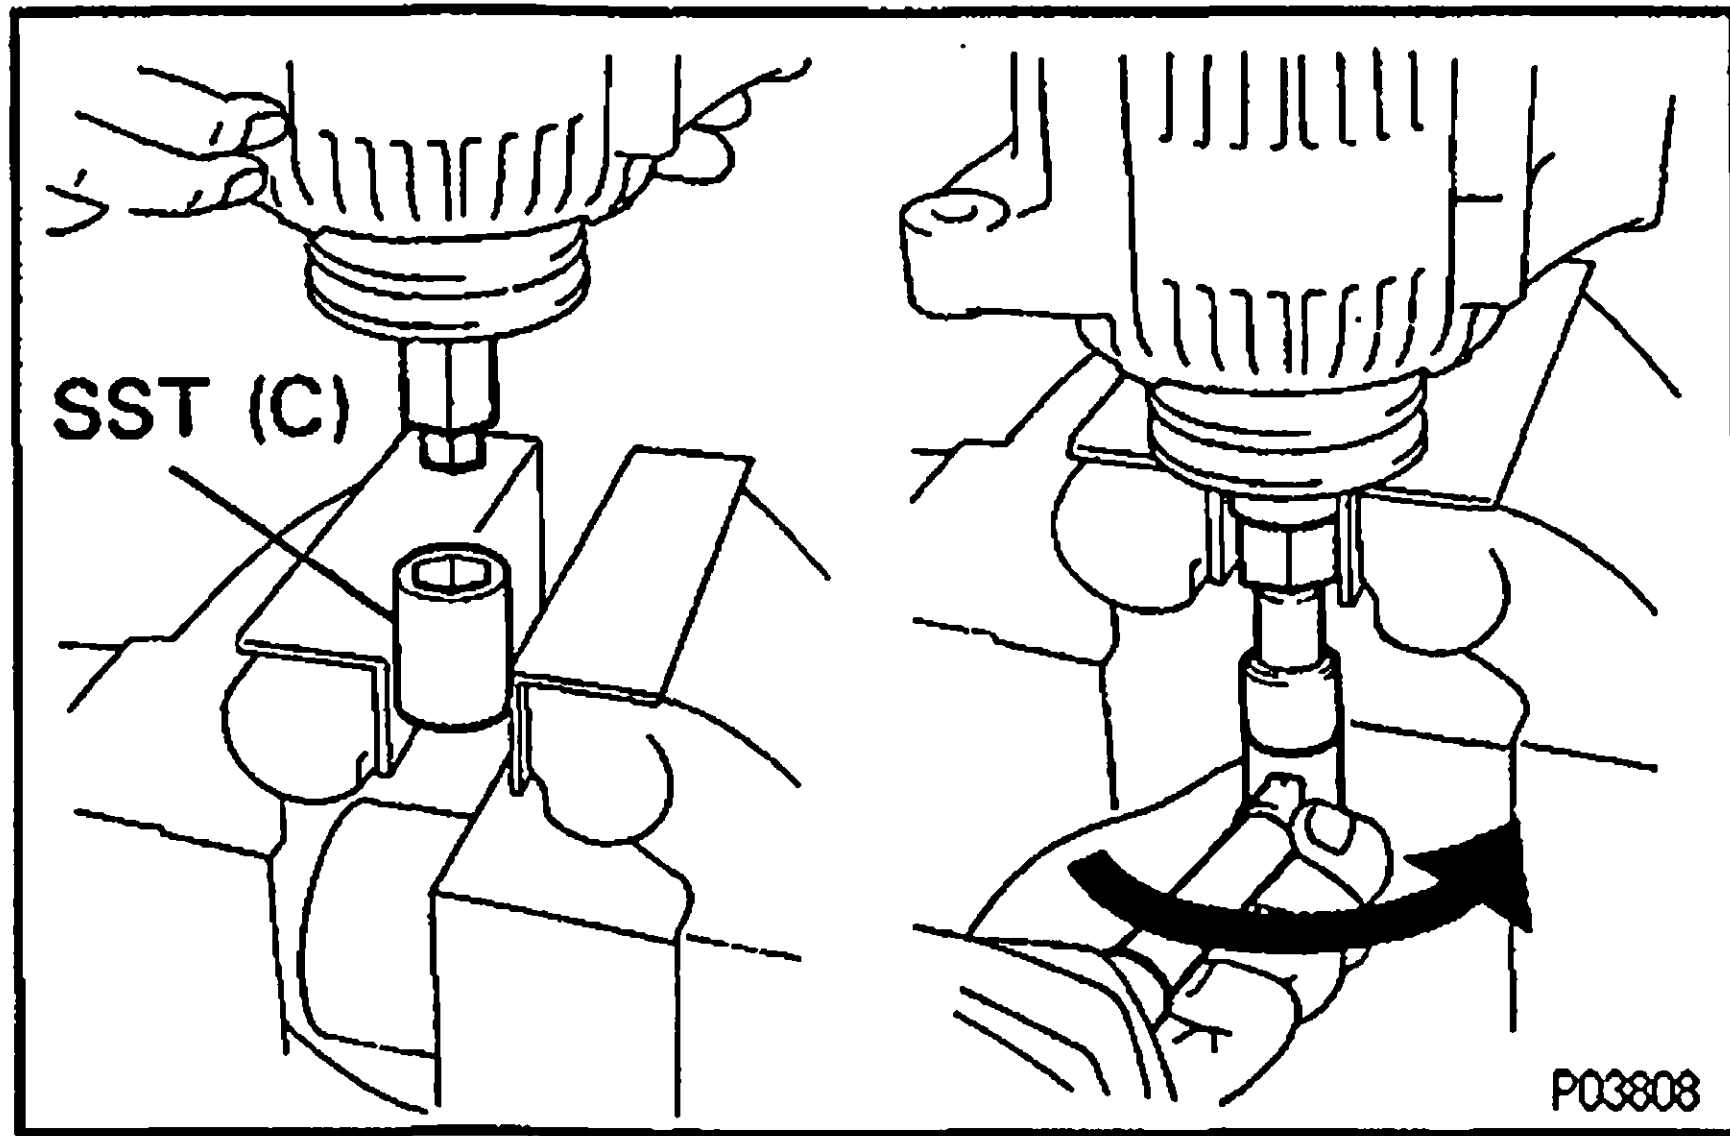


- (c) As shown in the illustration, mount SST (C) in a vise, and install the alternator to SST (C).
- (d) To loosen the pulley nut, turn SST (A) in the direction shown in the illustration.
NOTICE: To prevent damage to the rotor shaft, do not loosen the pulley nut more than one-half of a turn.
- (e) Remove the alternator from SST (C).
- (f) Turn SST (B) and remove SST (A and B).
- (g) Remove the pulley nut and pulley.

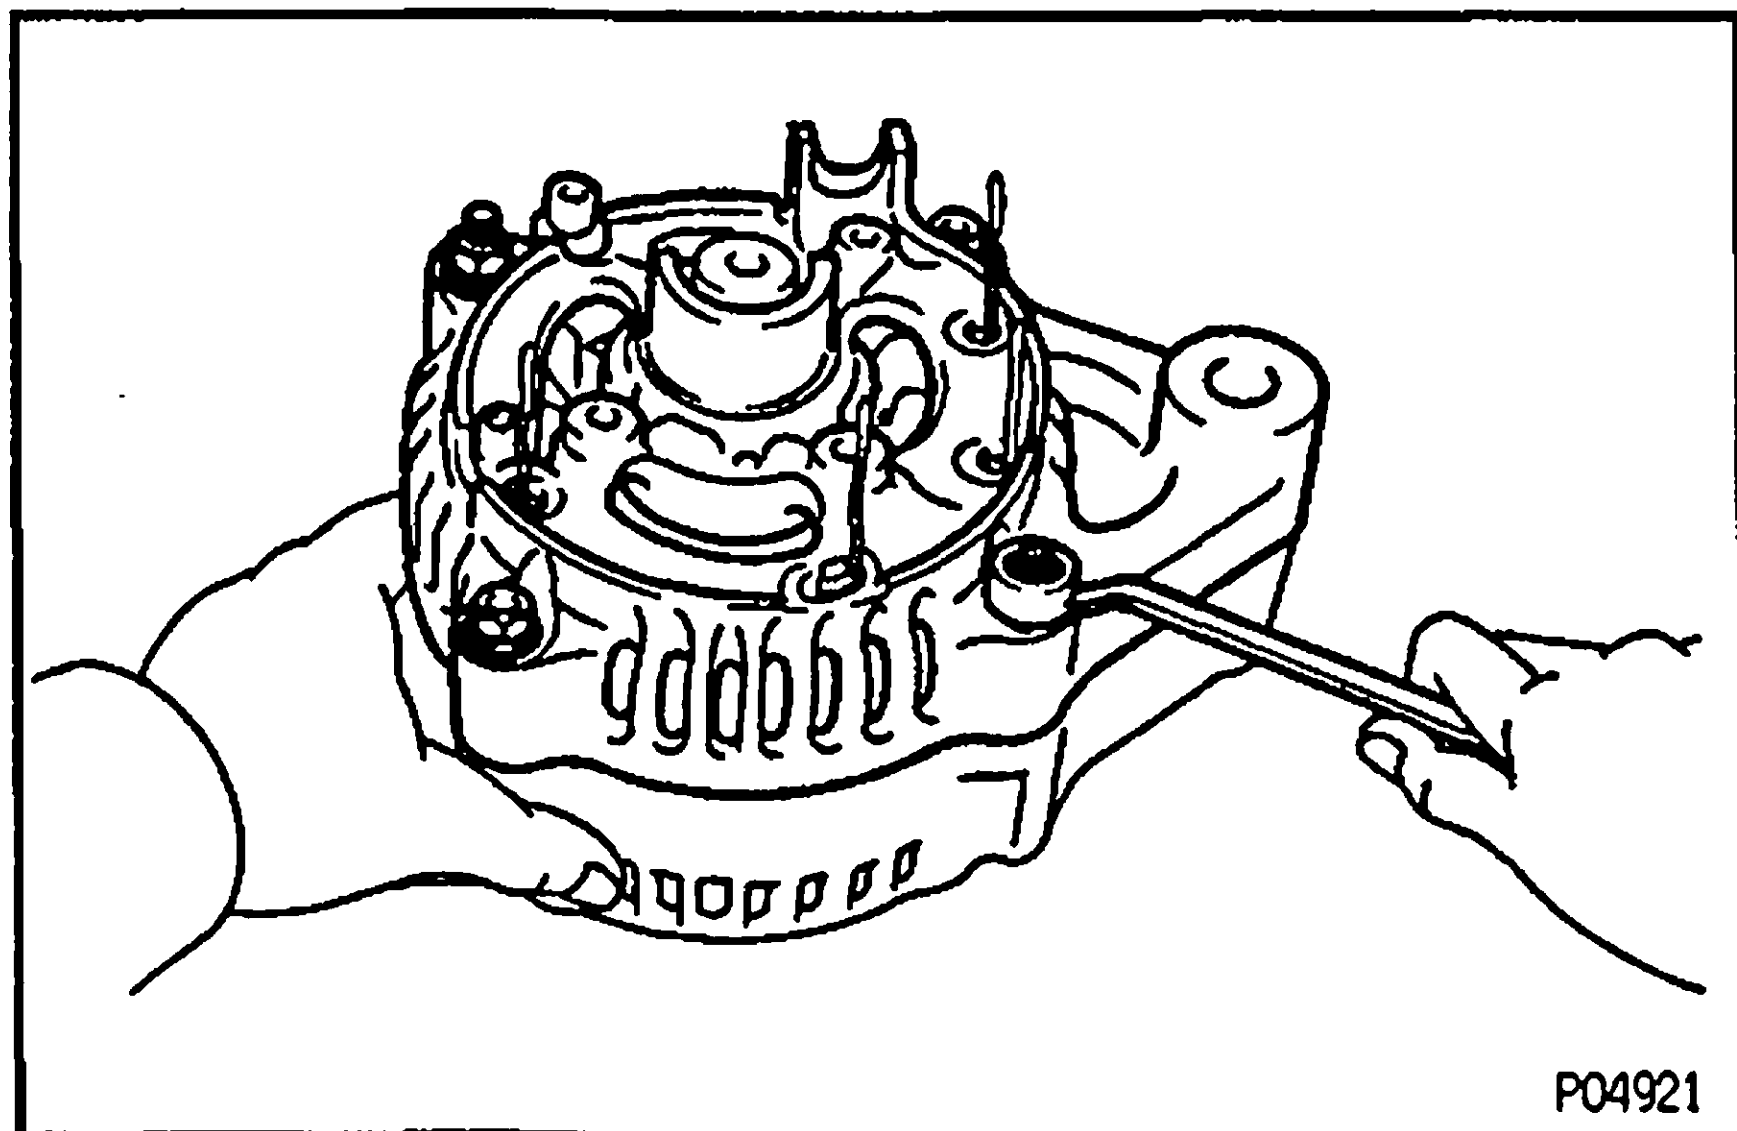

5. REMOVE RECTIFIER END FRAME (50 A Type)


- (a) Remove the two bolts, nuts and rectifier end frame.

CH

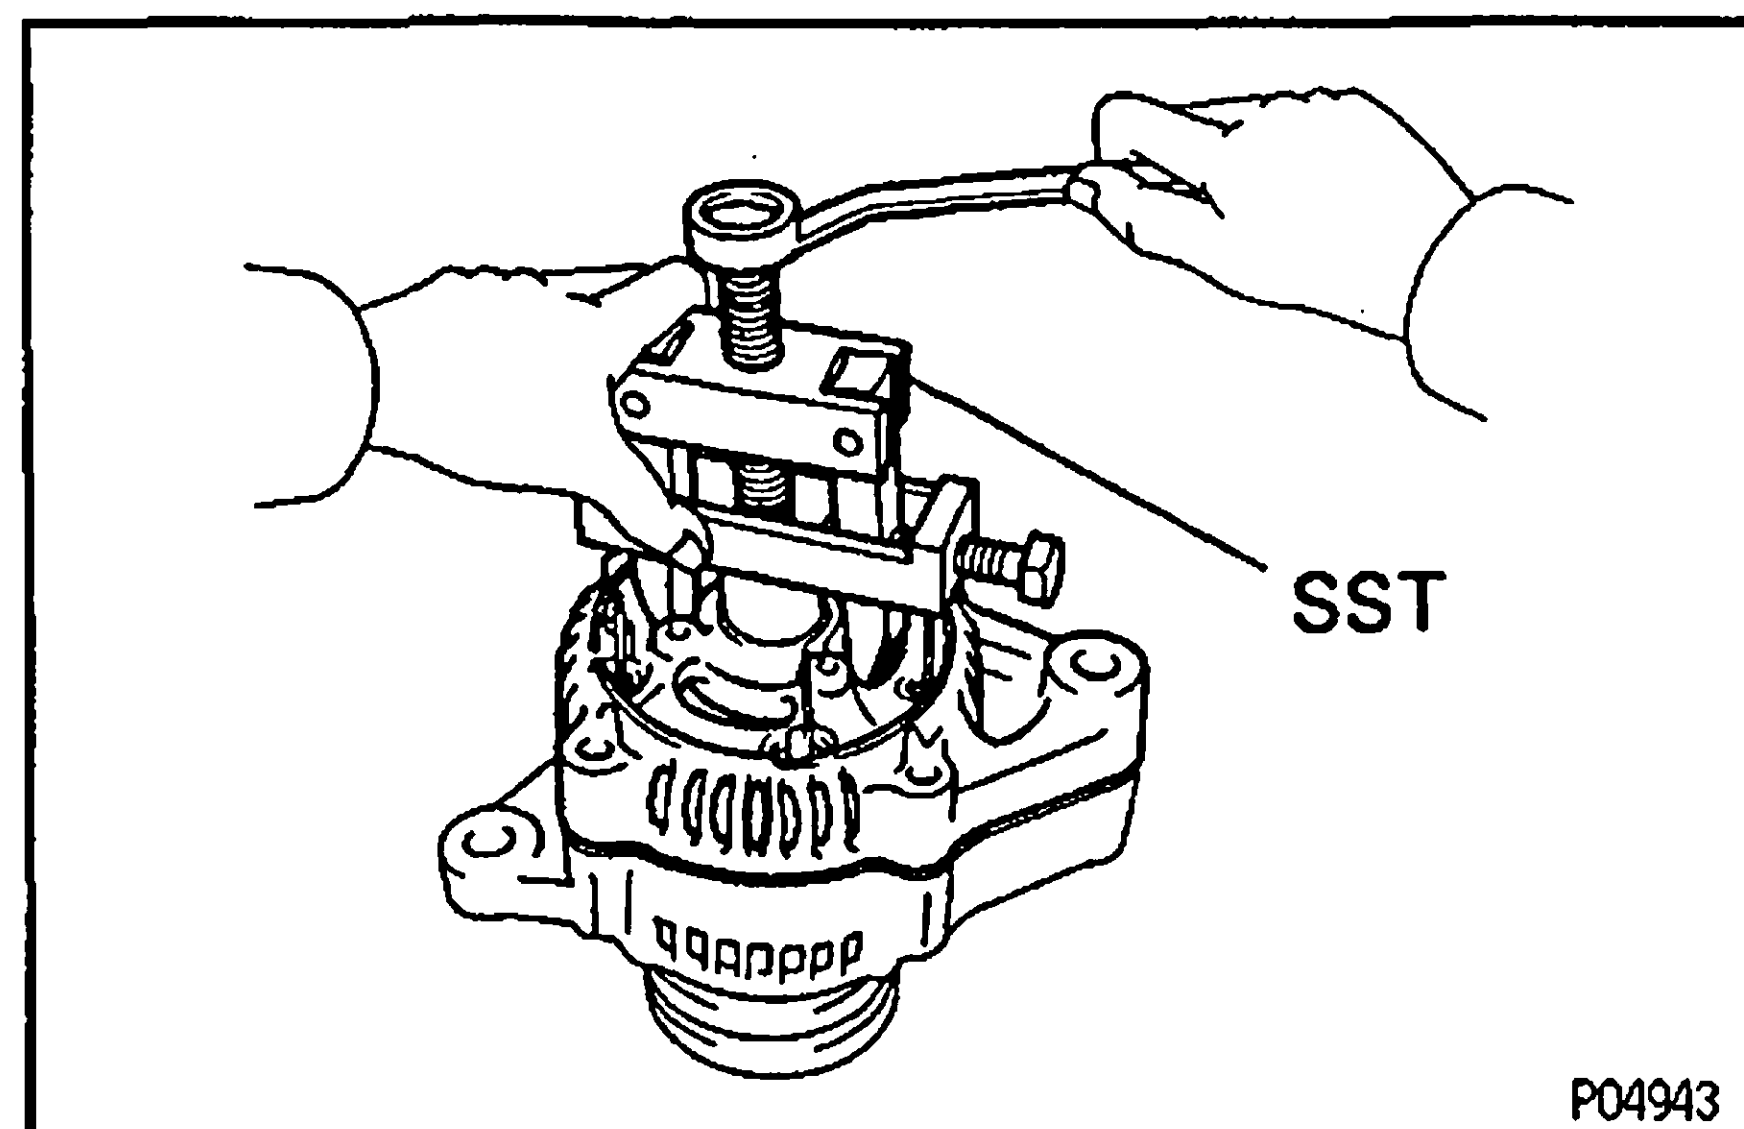


HINT: If necessary, remove the rectifier end frame with SST.

SST 09820-00021

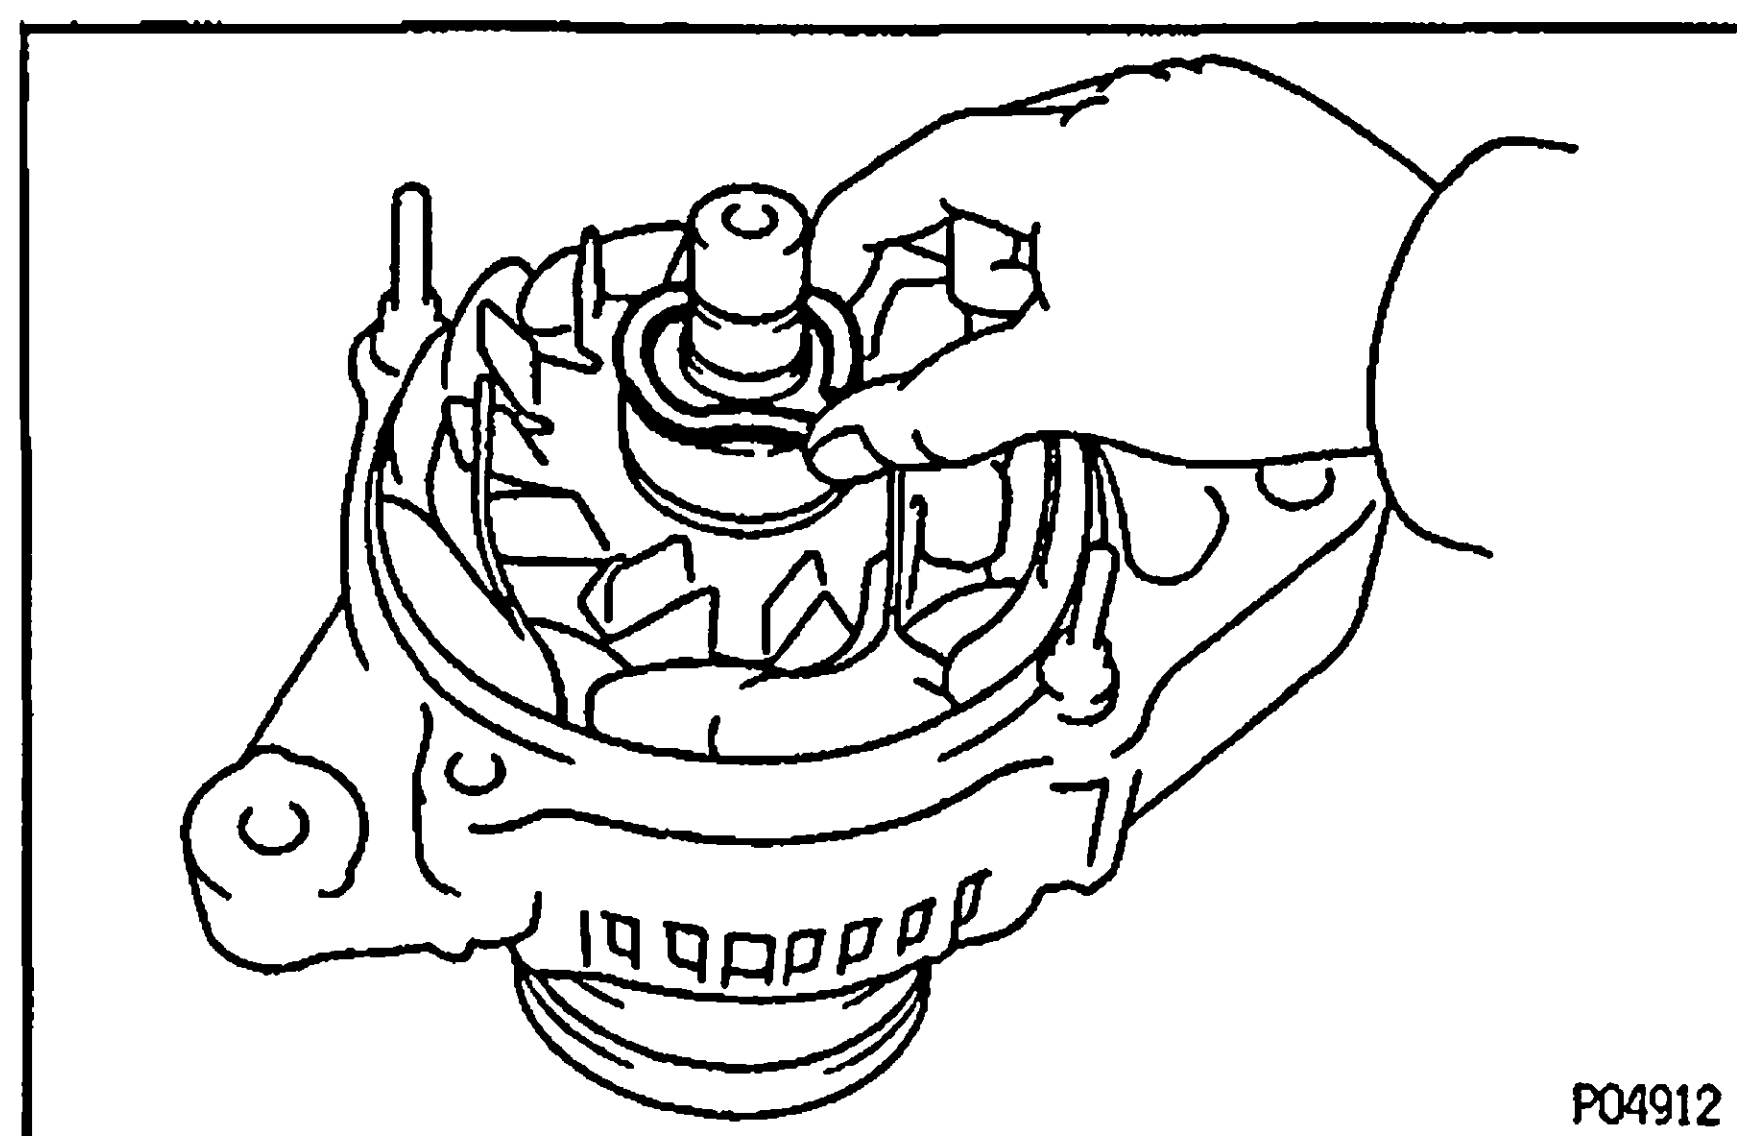


- (b) Remove the thrust washer.

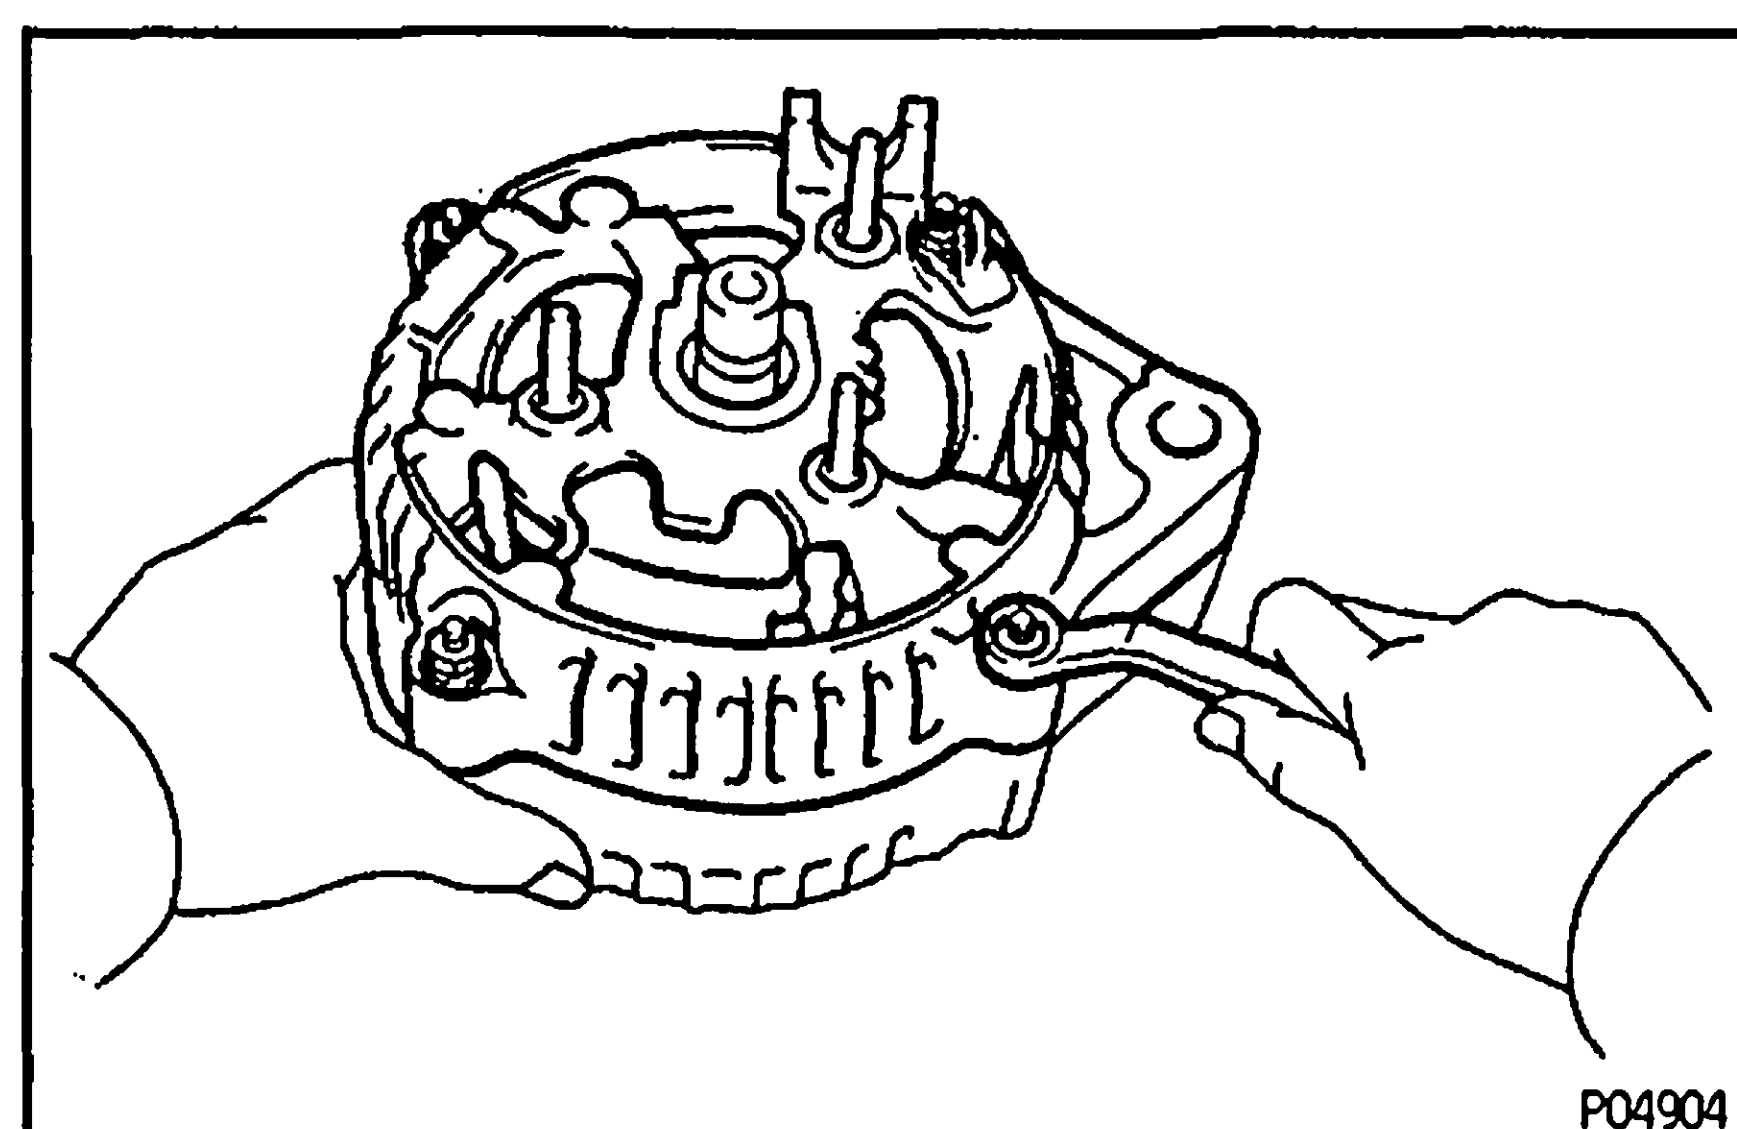


(55 A and 80 A Types)

- (a) Remove the four nuts and rectifier end frame.

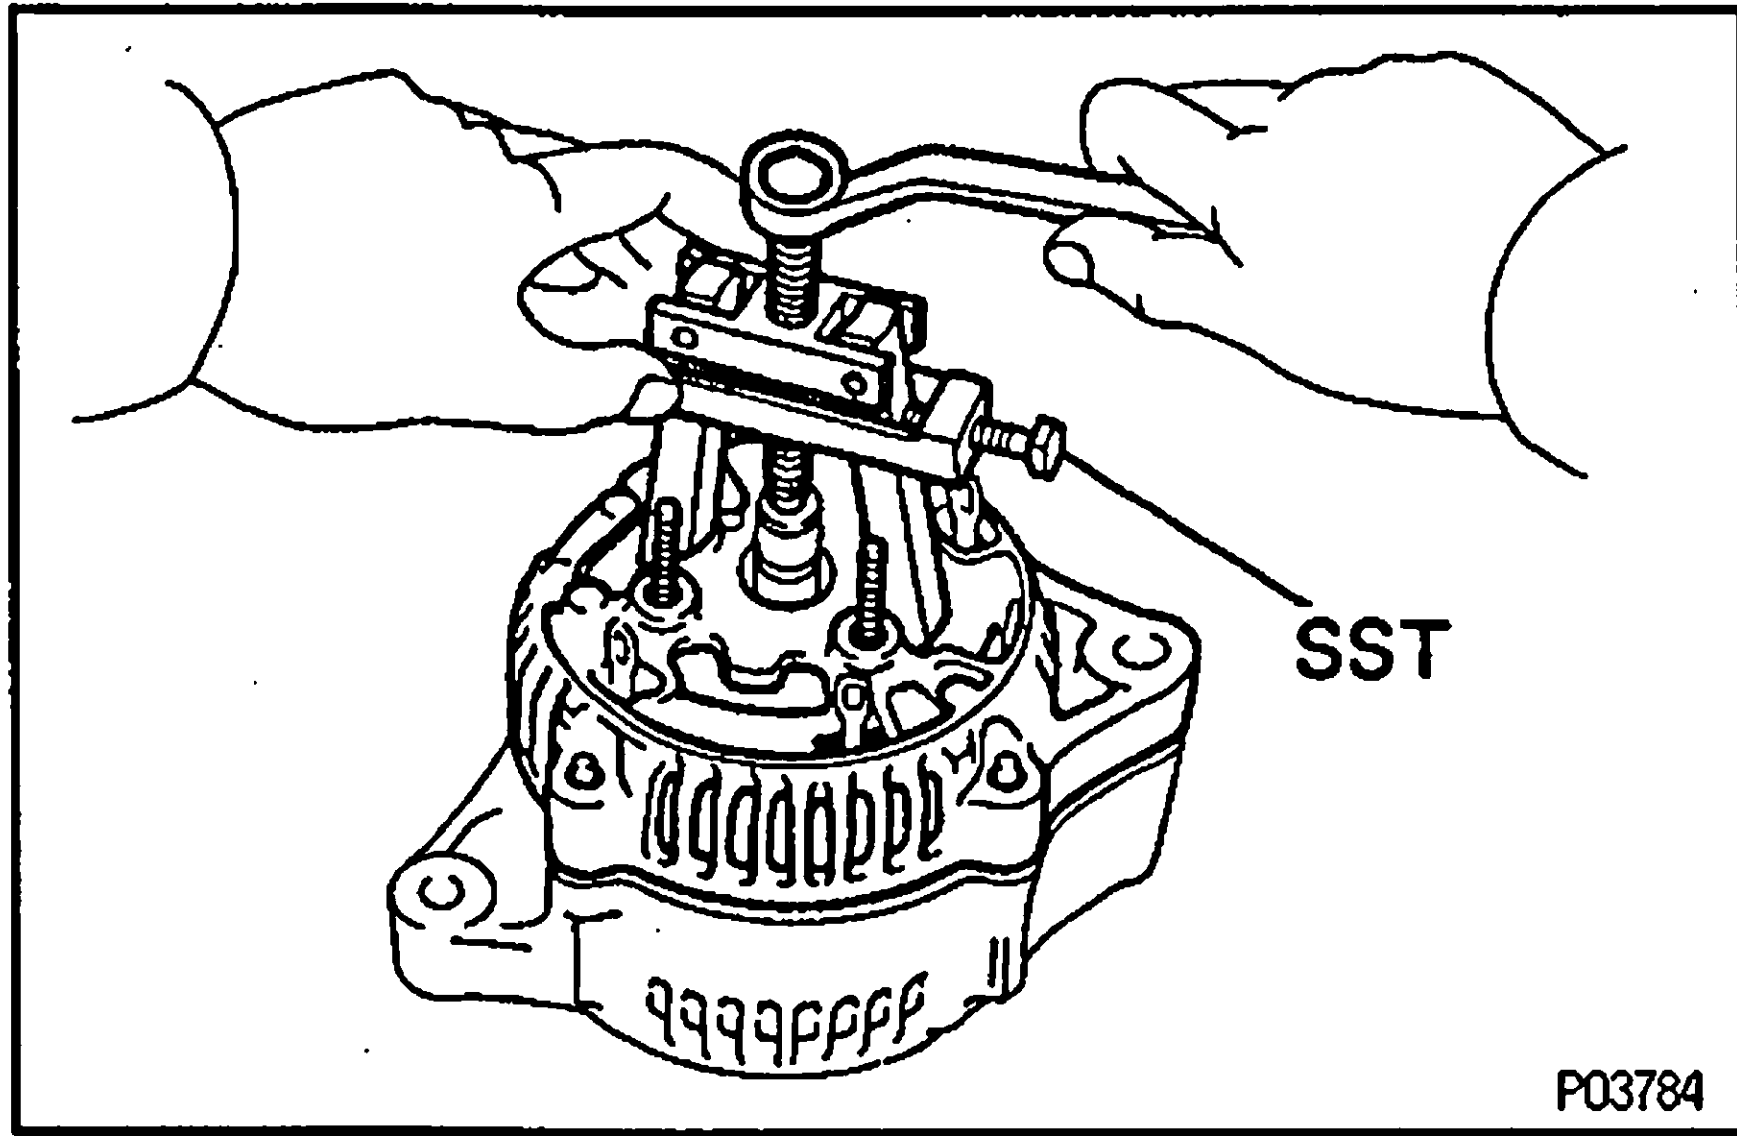


HINT: If necessary, remove the rectifier end frame with SST.

SST 09286—46011

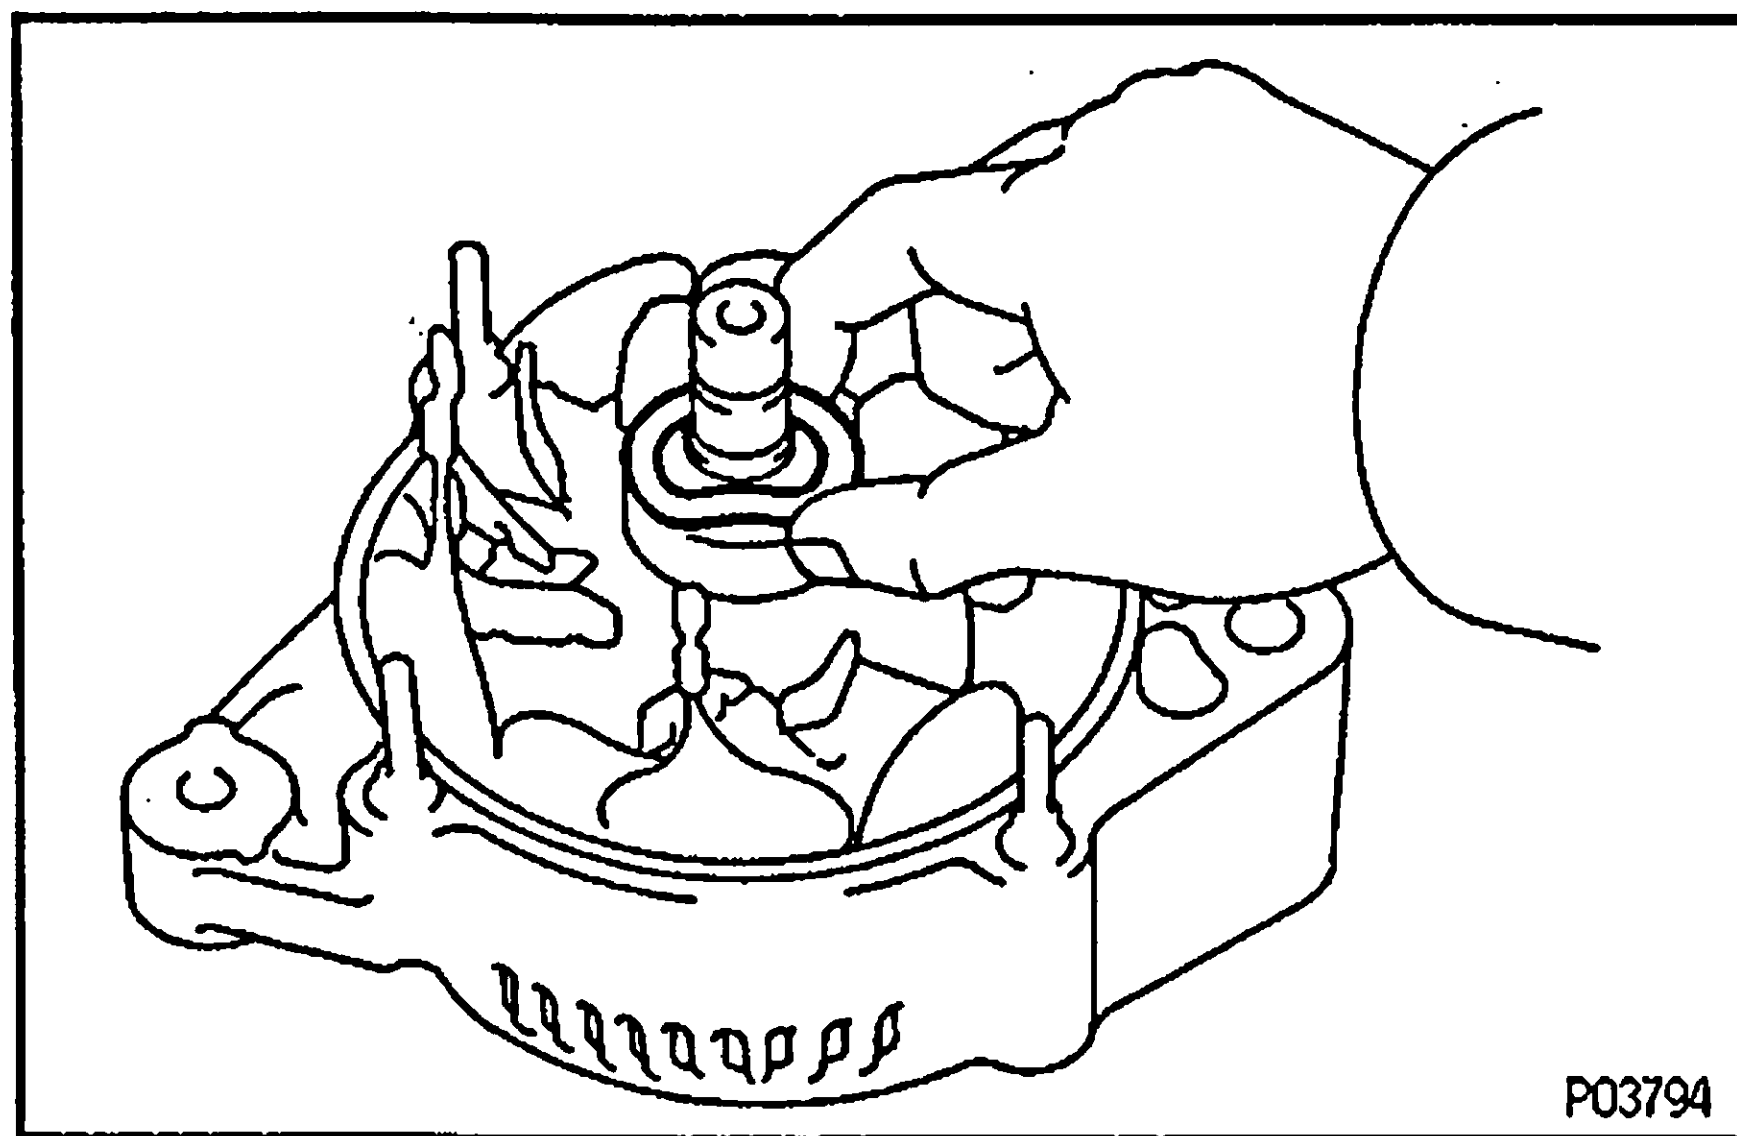

- (b) (80 A Type)
Remove the thrust washer.

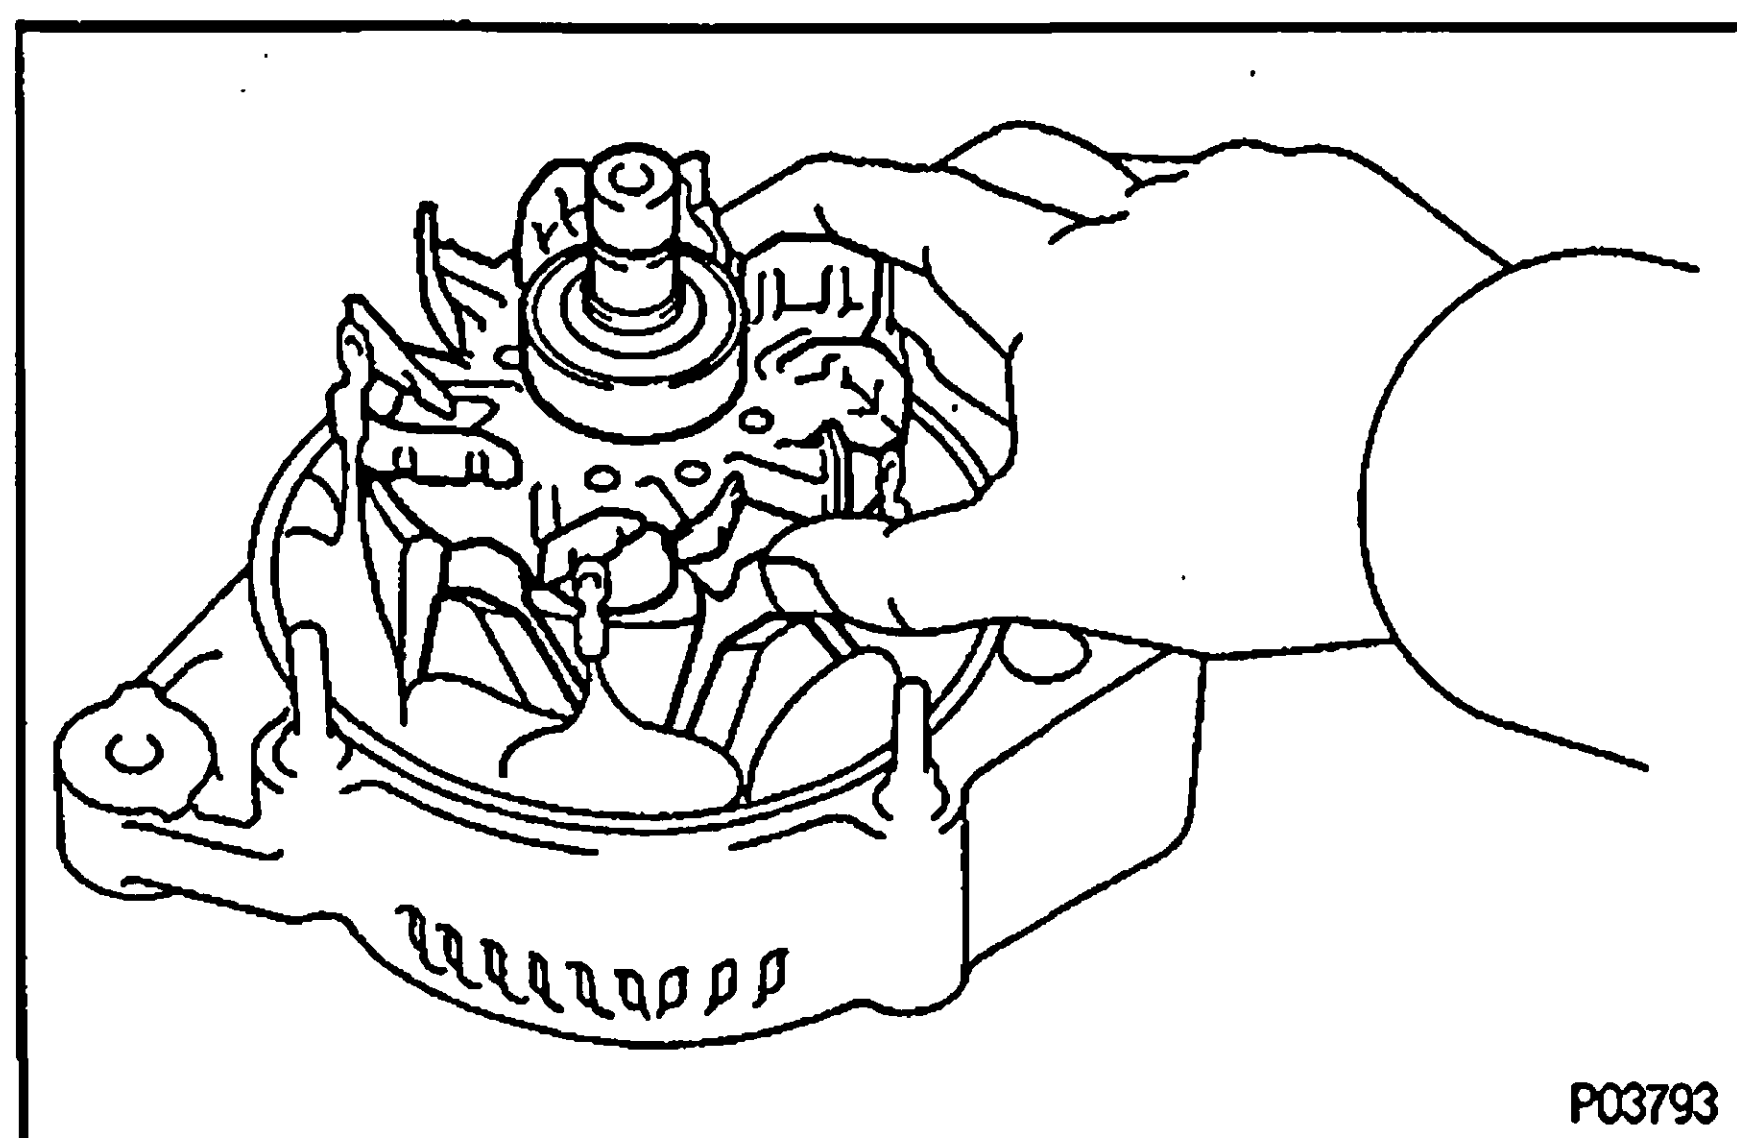

6. REMOVE ROTOR FROM DRIVE END FRAME

CH028-01

ALTERNATOR INSPECTION AND REPAIR**Rotor****1. INSPECT ROTOR FOR OPEN CIRCUIT**

Using an ohmmeter, check that there is continuity between the slip rings.

Standard resistance (Cold):

2.7 – 3.1 Ω

If there is no continuity, replace the rotor.

2. INSPECT ROTOR FOR GROUND

Using an ohmmeter, check that there is no continuity between the slip ring and rotor.

If there is continuity, replace the rotor.

CH

3. INSPECT SLIP RINGS

(a) Check that the slip rings are not rough or scored. If rough or scored, replace the rotor.

(b) Using a vernier caliper, measure the slip ring diameter.

Standard diameter:

14.2 – 14.4 mm (0.559 – 0.567 in.)

Minimum diameter:


12.8 mm (0.504 in.)

If the diameter is less than minimum, replace the rotor.


Stator (Drive End Frame)**1. INSPECT STATOR FOR OPEN CIRCUIT**

Using an ohmmeter, check that there is continuity between the coil leads.


If there is no continuity, replace the drive end frame assembly.

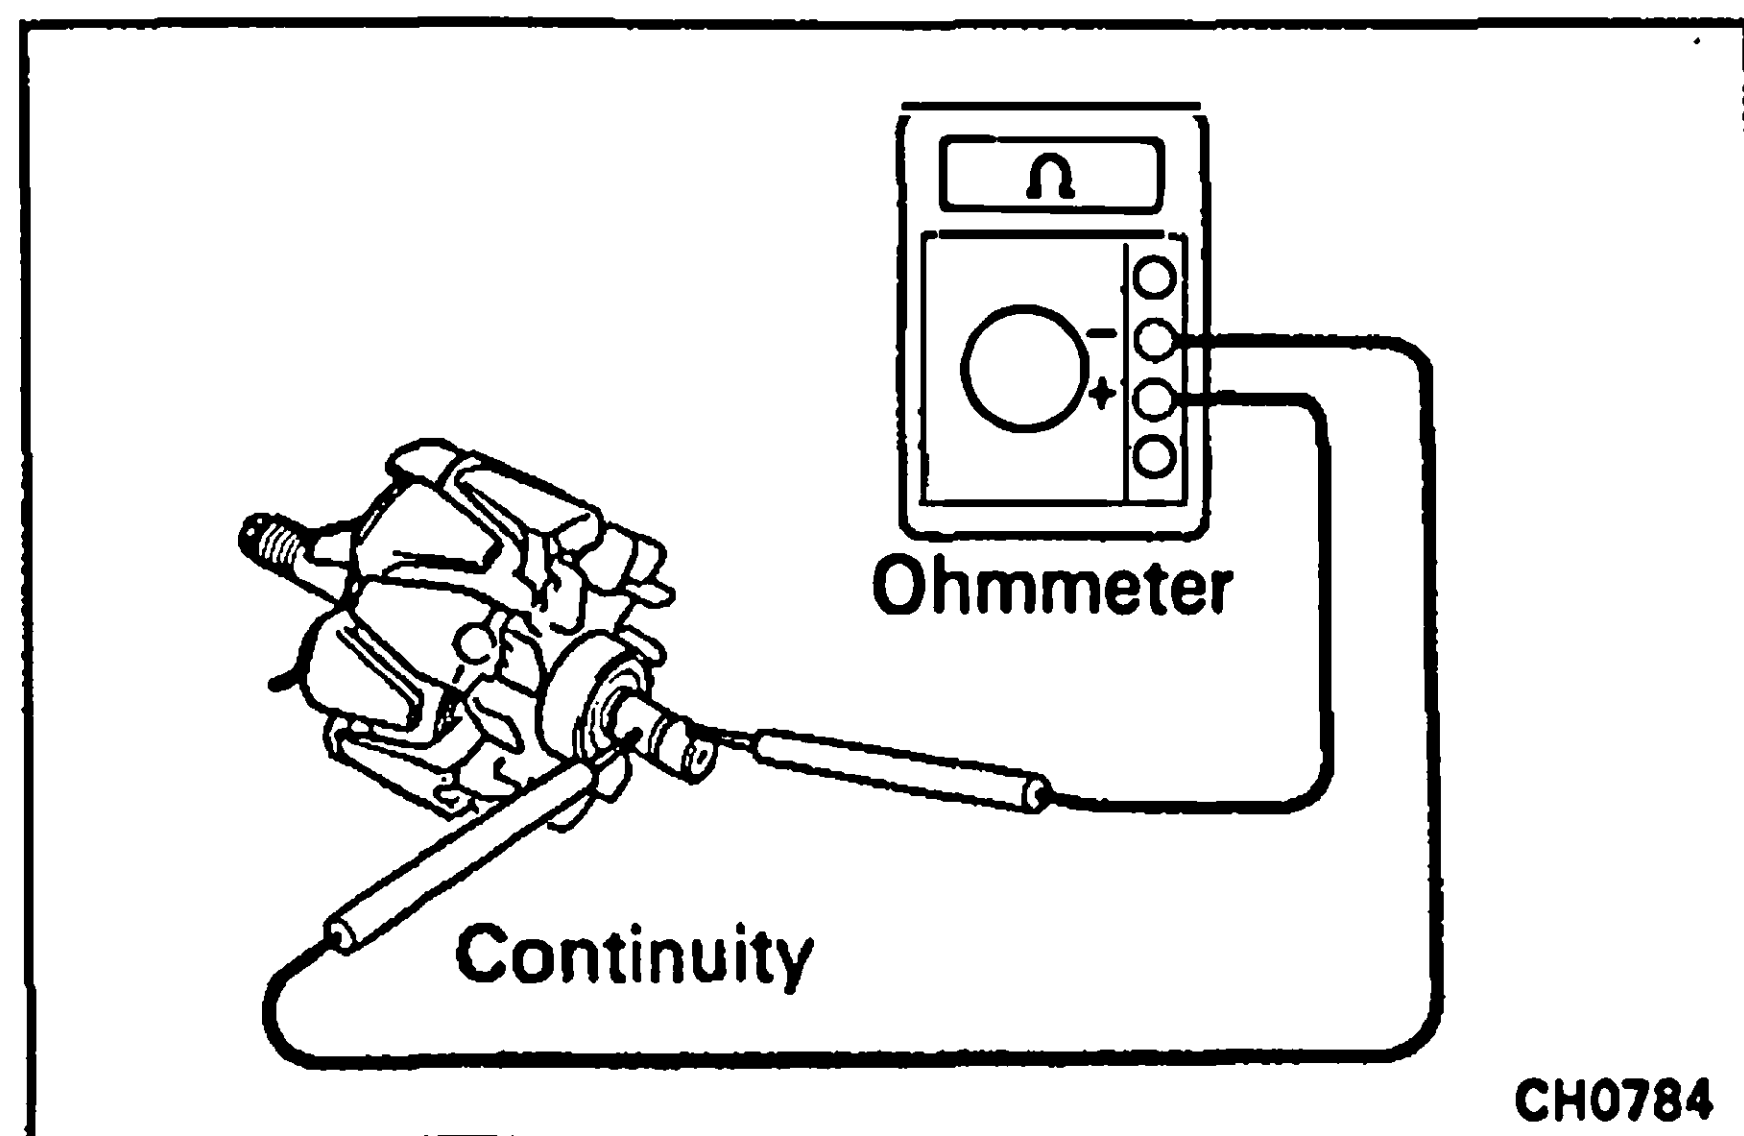


CH0784

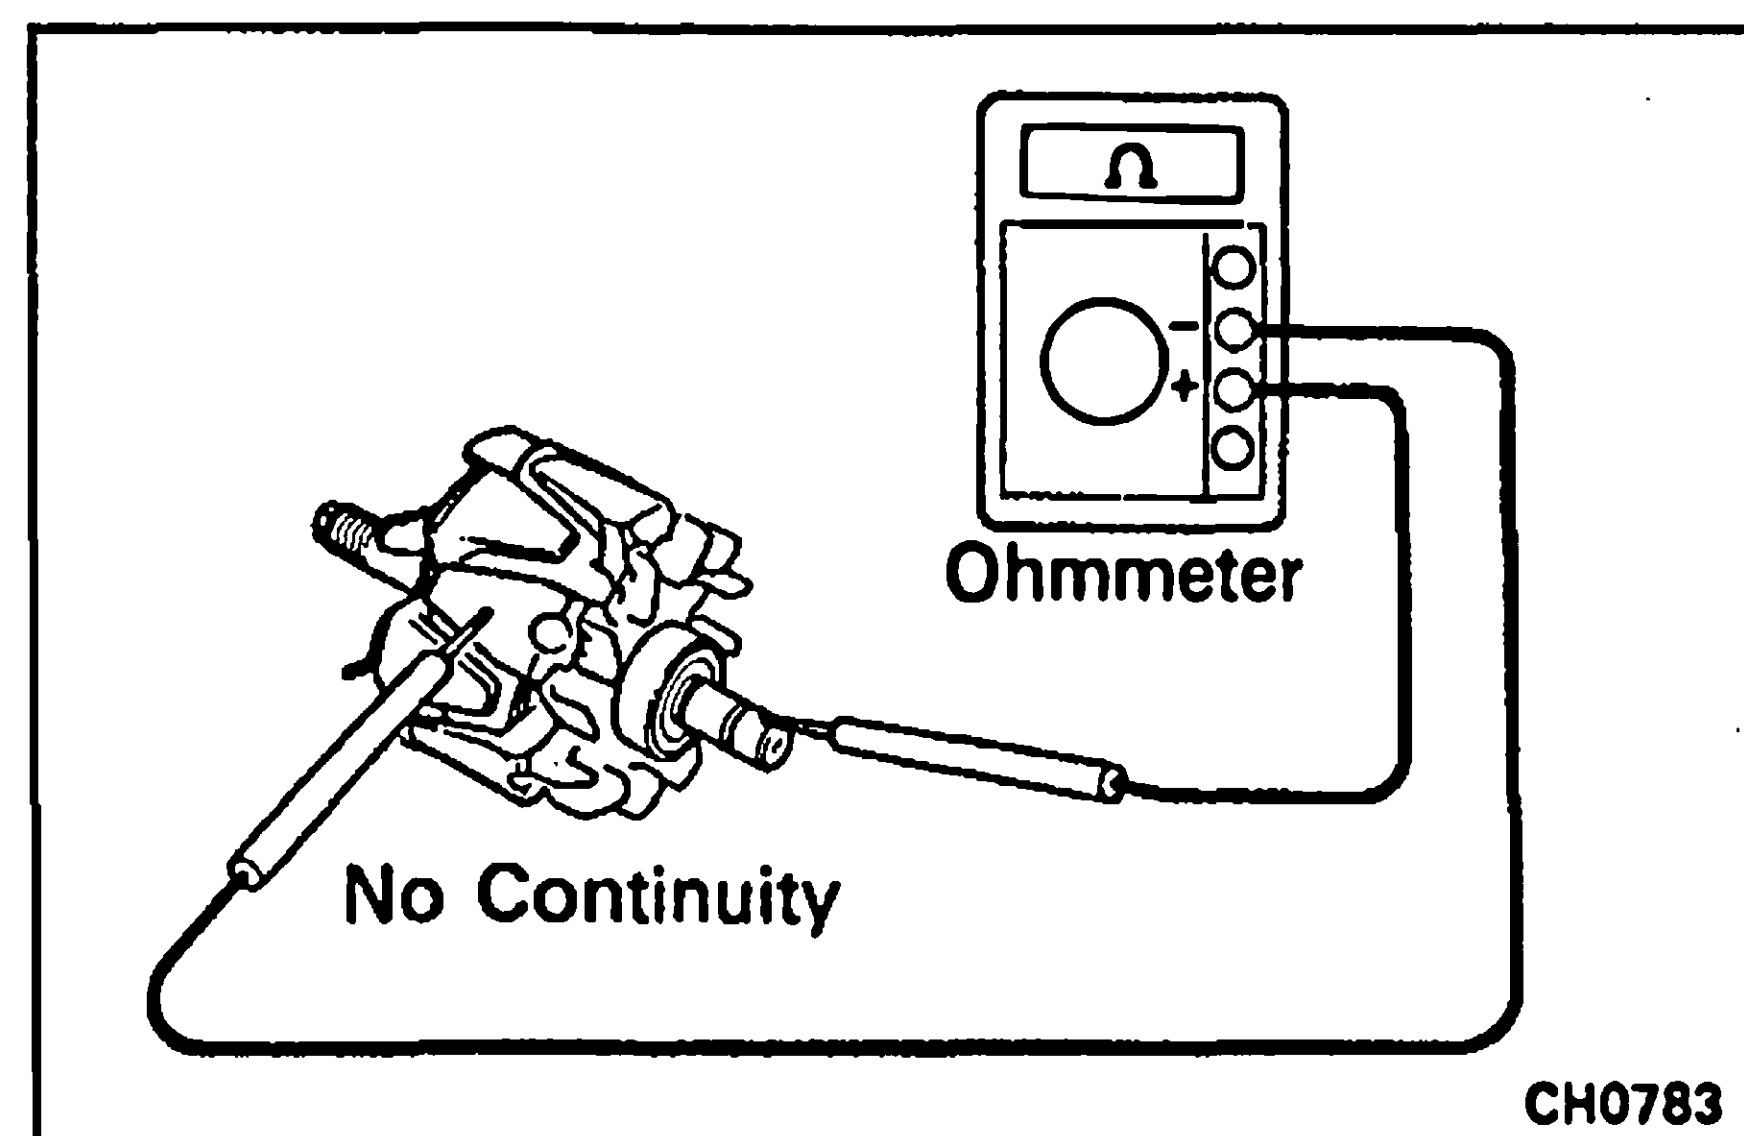

CH0783


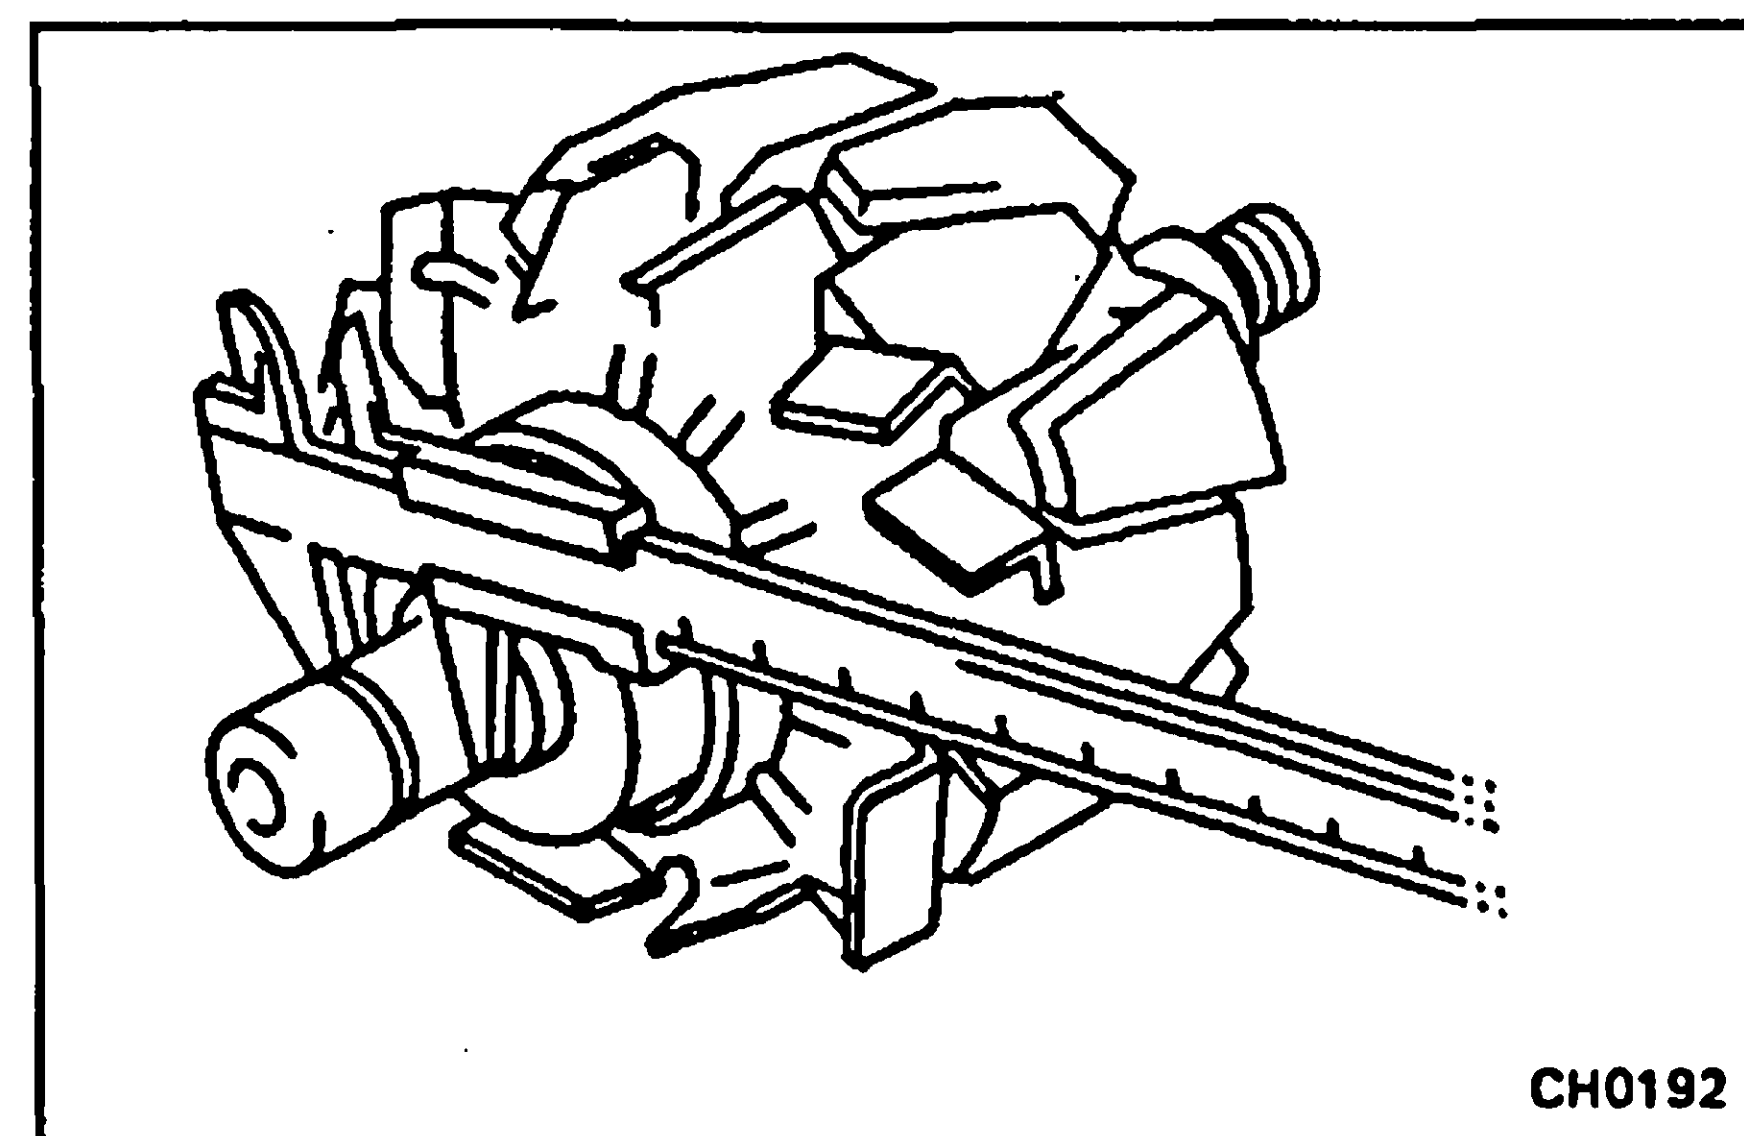


CH0192

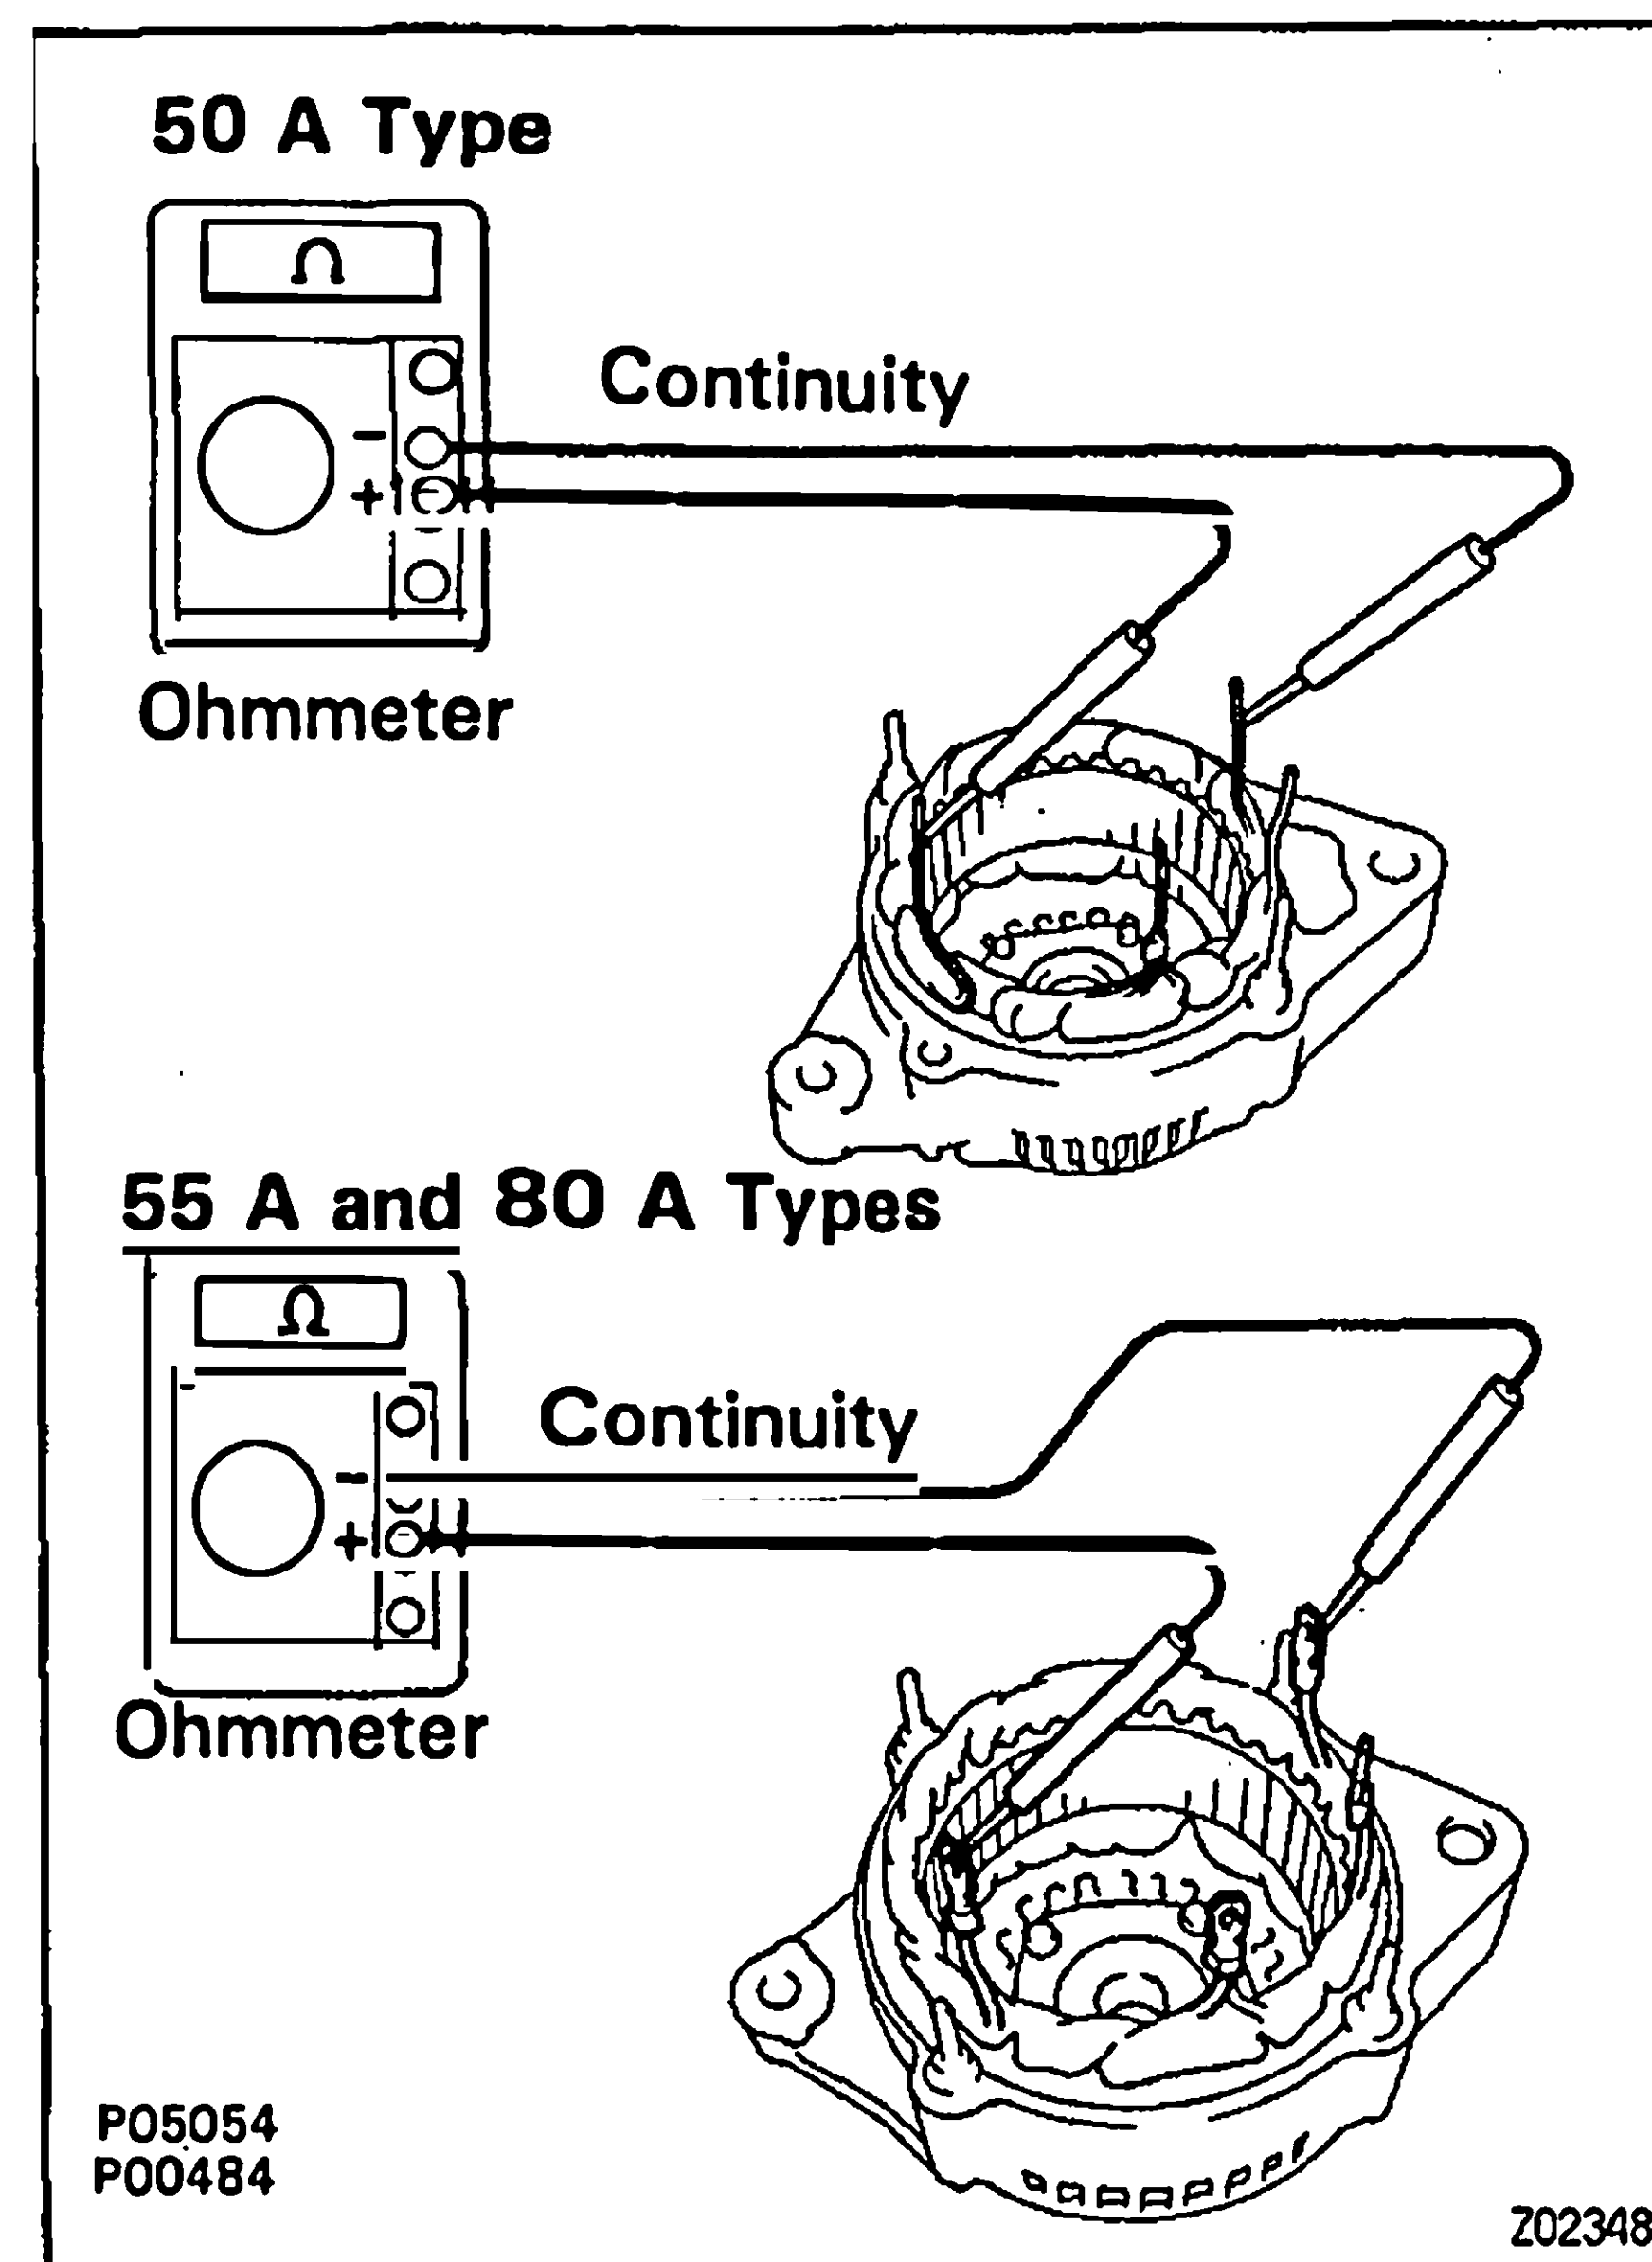

P05054
P00484

Z02348

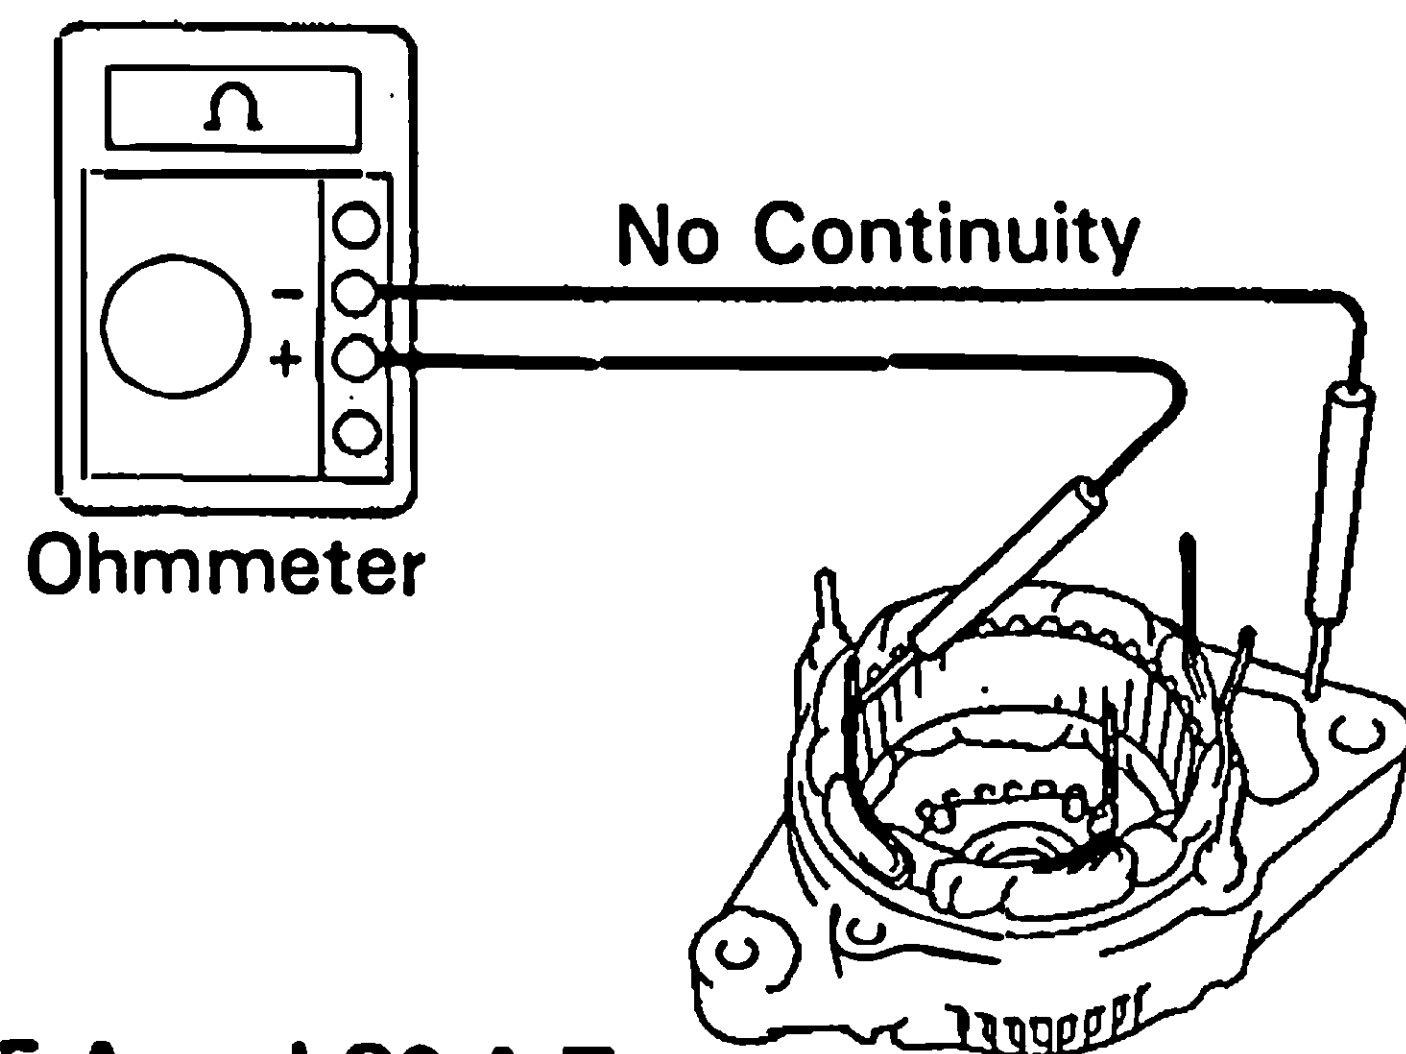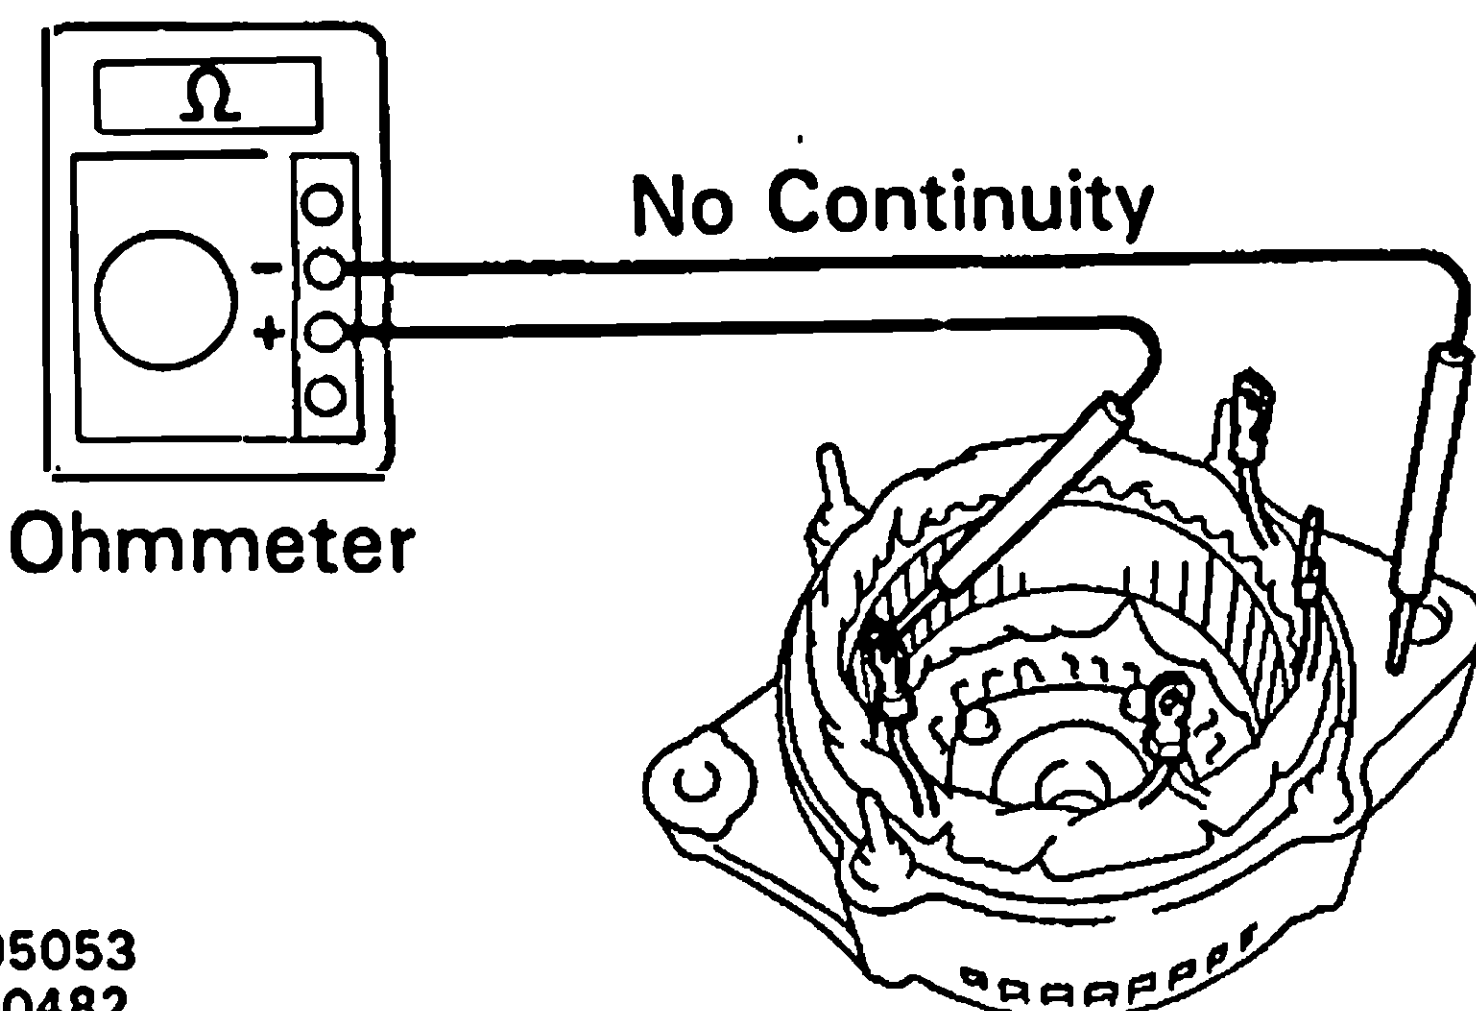50 A Type**55 A and 80 A Types**P05053
P00482



Z02349

2. INSPECT STATOR FOR GROUND

Using an ohmmeter, check that there is no continuity between the coil lead and drive end frame.

If there is continuity, replace the drive end frame assembly.

CH

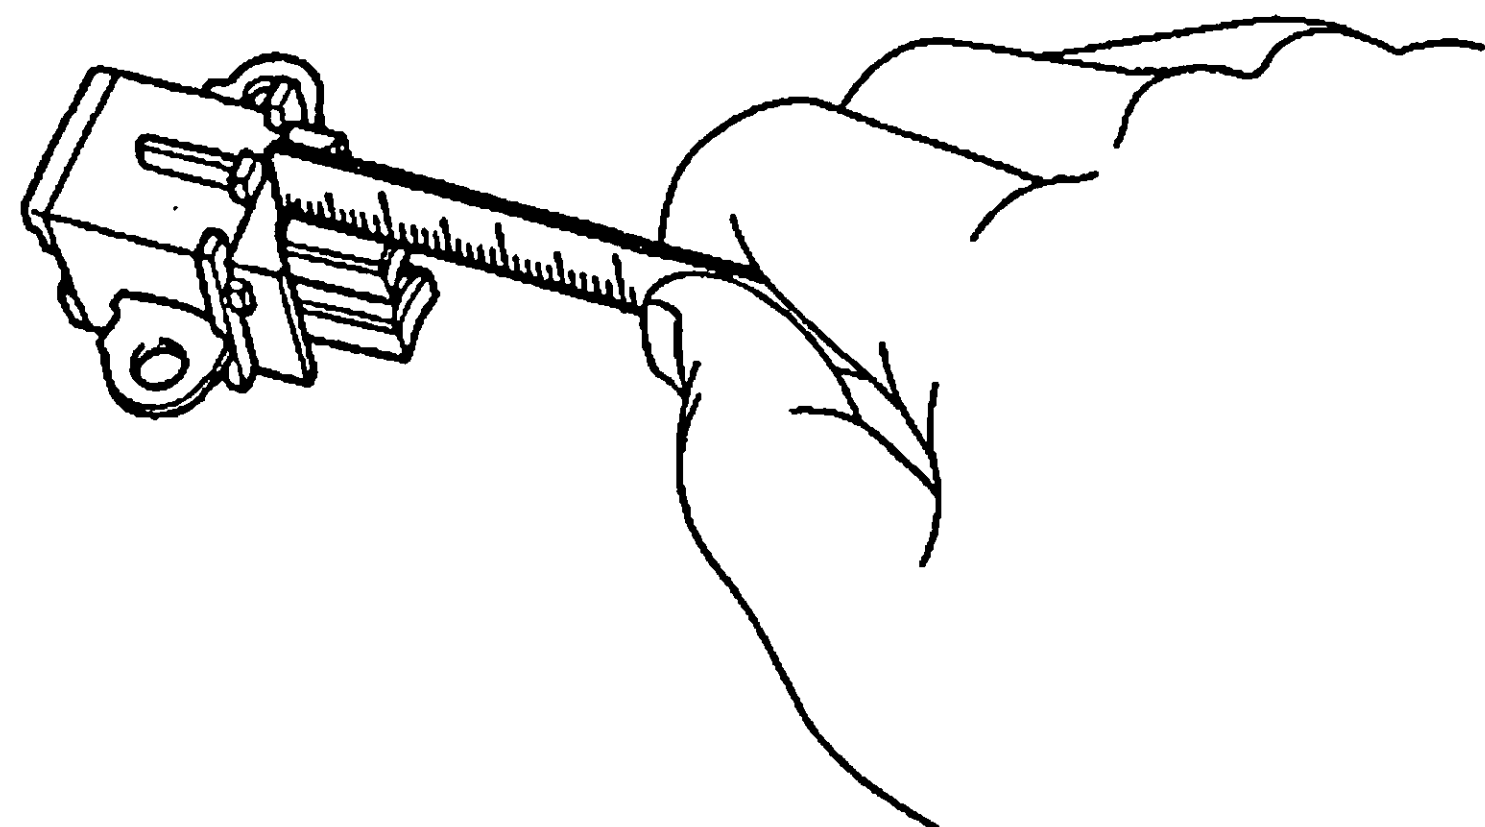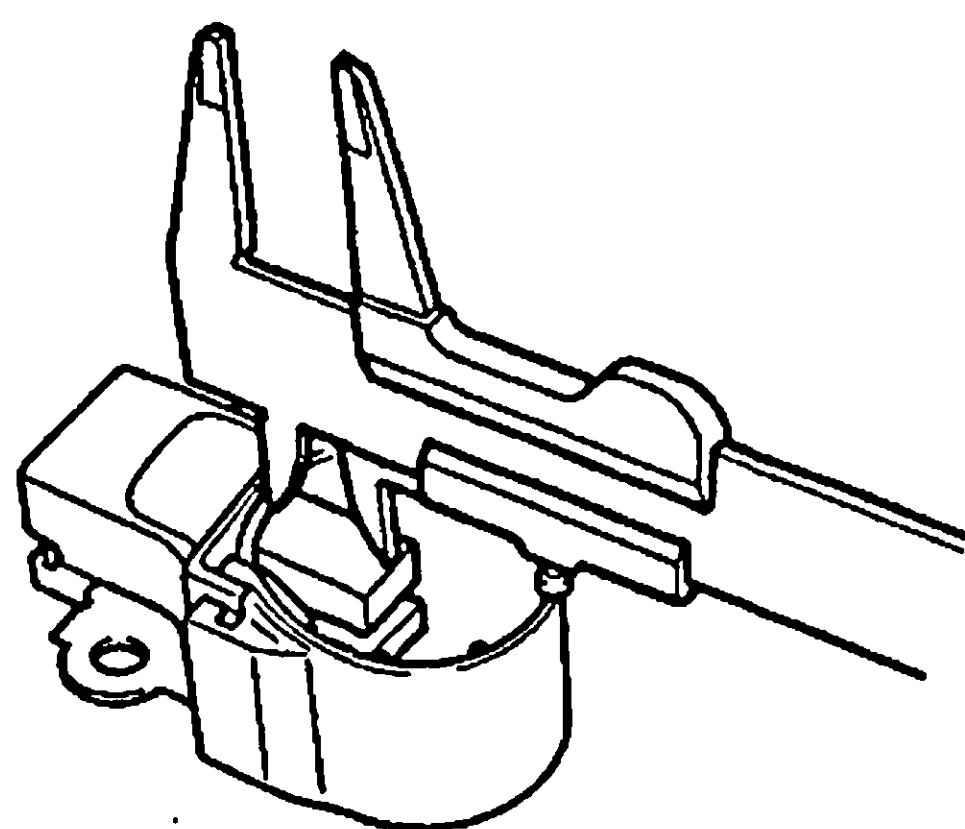50 A and 55 A Types**80 A Type**CH0247
CH0722

Z02345

Brushes**1. INSPECT EXPOSED BRUSH LENGTH**

Using a scale, measure the exposed brush length.

Standard exposed length:

10.5 mm (0.413 in.)


Minimum exposed length:

1.5 mm (0.059 in.)


If the exposed length is less than minimum, replace the brushes (50 A and 55 A Types) or brushes and brush holder assembly (80 A Type).

**2. (50 A and 55 A Types)
IF NECESSARY, REPLACE BRUSHES**


- Unsolder and remove the brush and spring.
- Run the wire of a new brush through the spring and the hole in the brush holder, and insert the spring and brush into the brush holder.

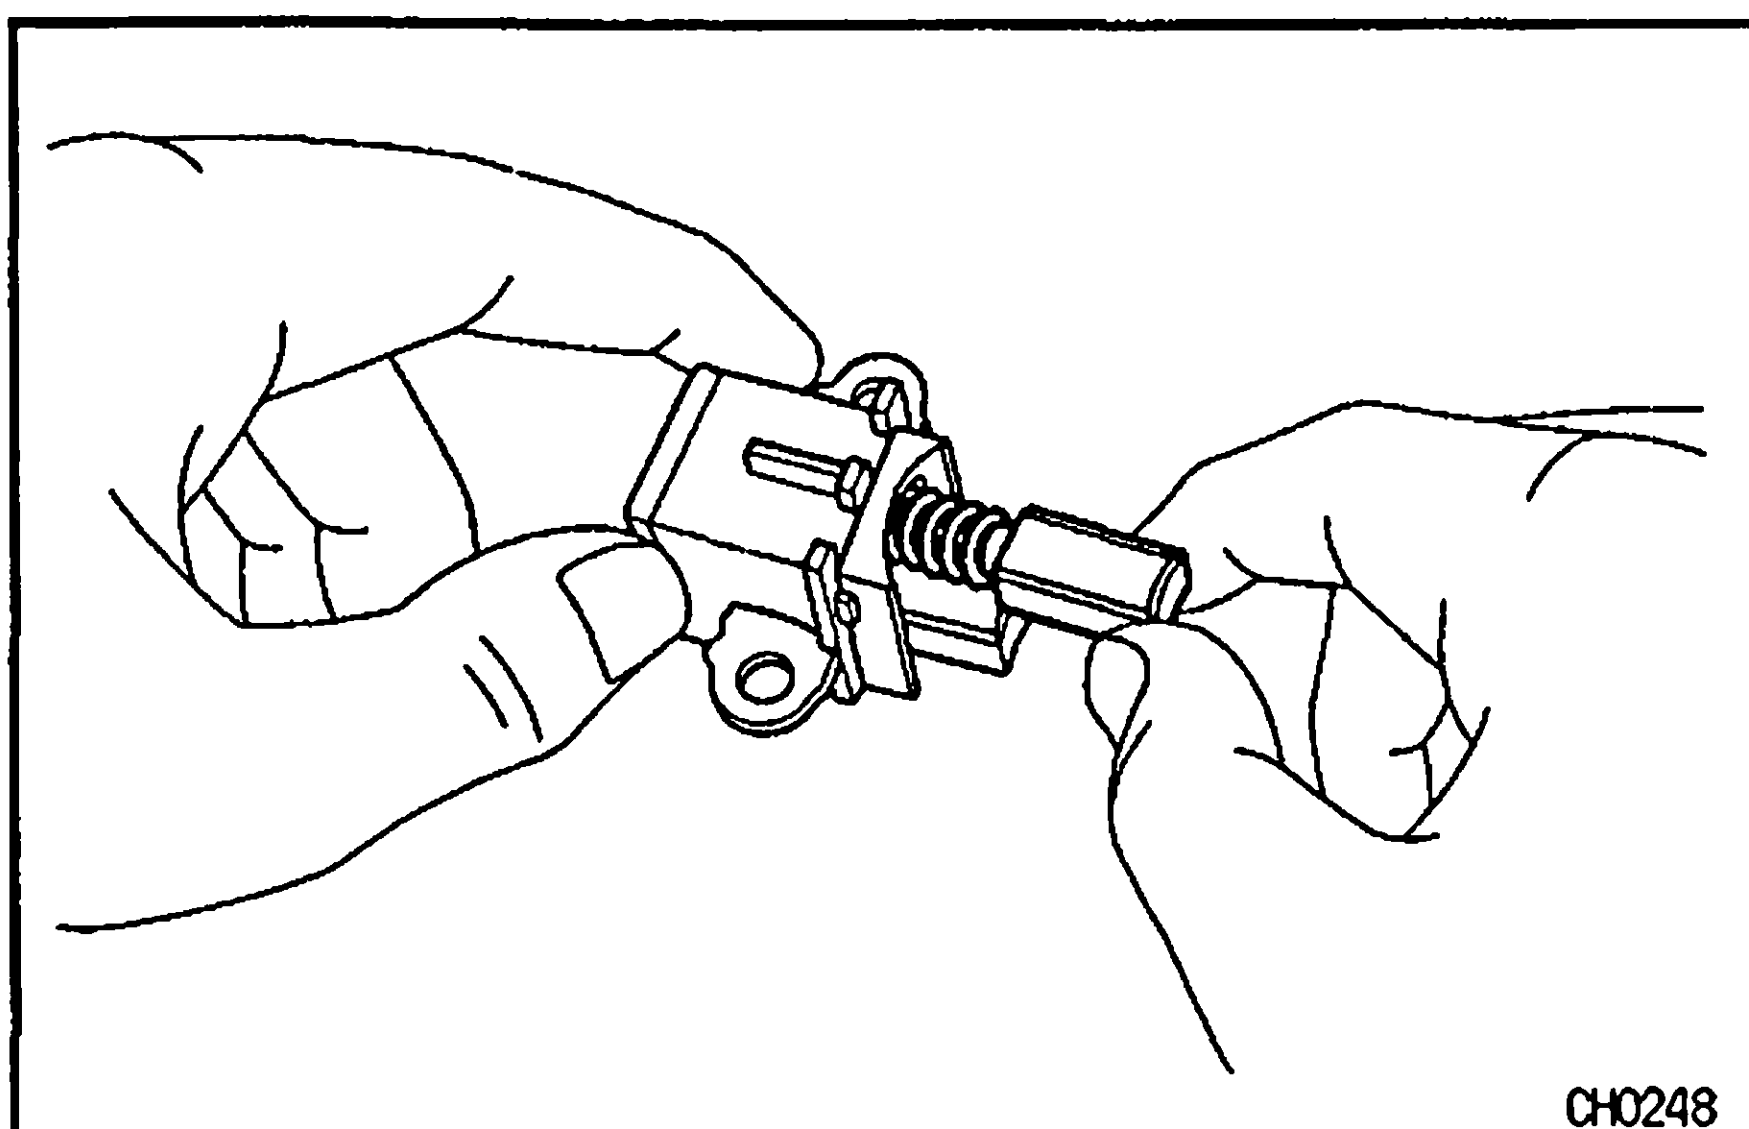

CH0248

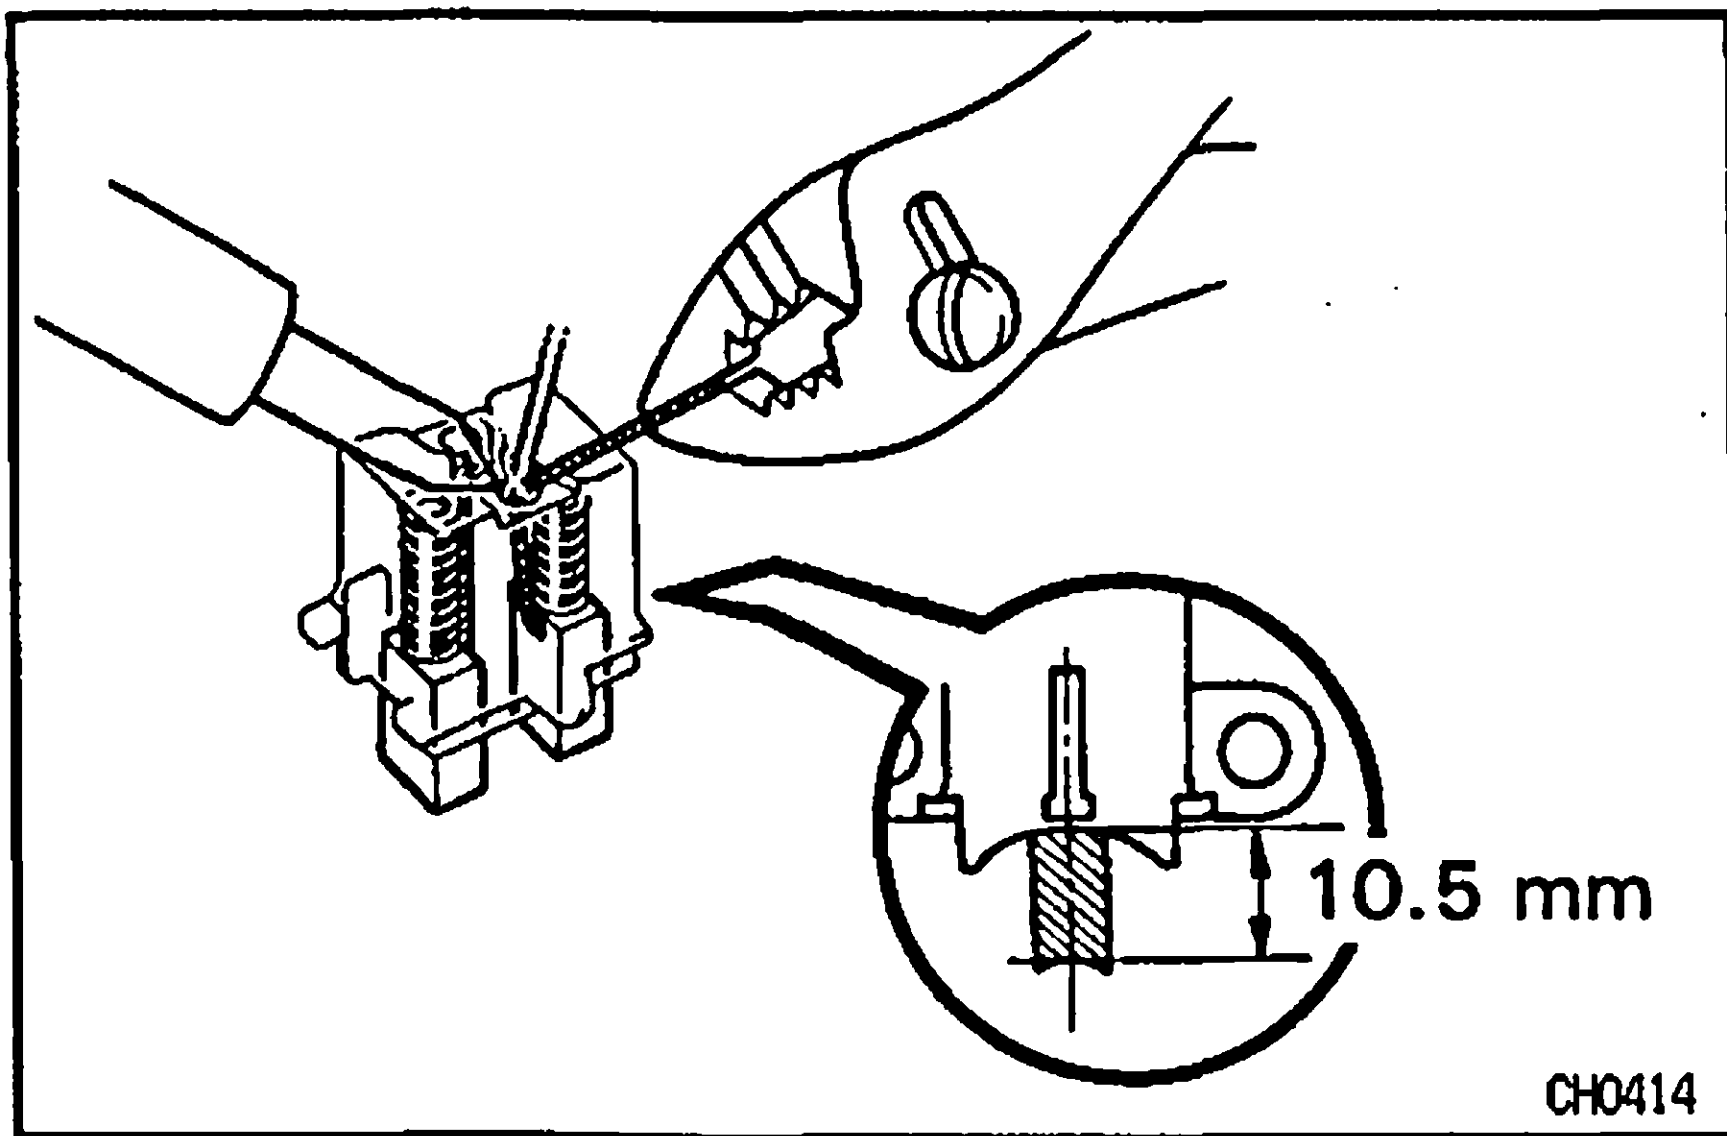

- (c) Solder the brush wire to the brush holder at specified exposed length.
Exposed length:
10.5 mm (0.413 in.)
- (b) Check that the brush moves smoothly in the brush holder.
- (e) Cut off the excess wire.
- (f) Apply insulation paint to the soldered area.

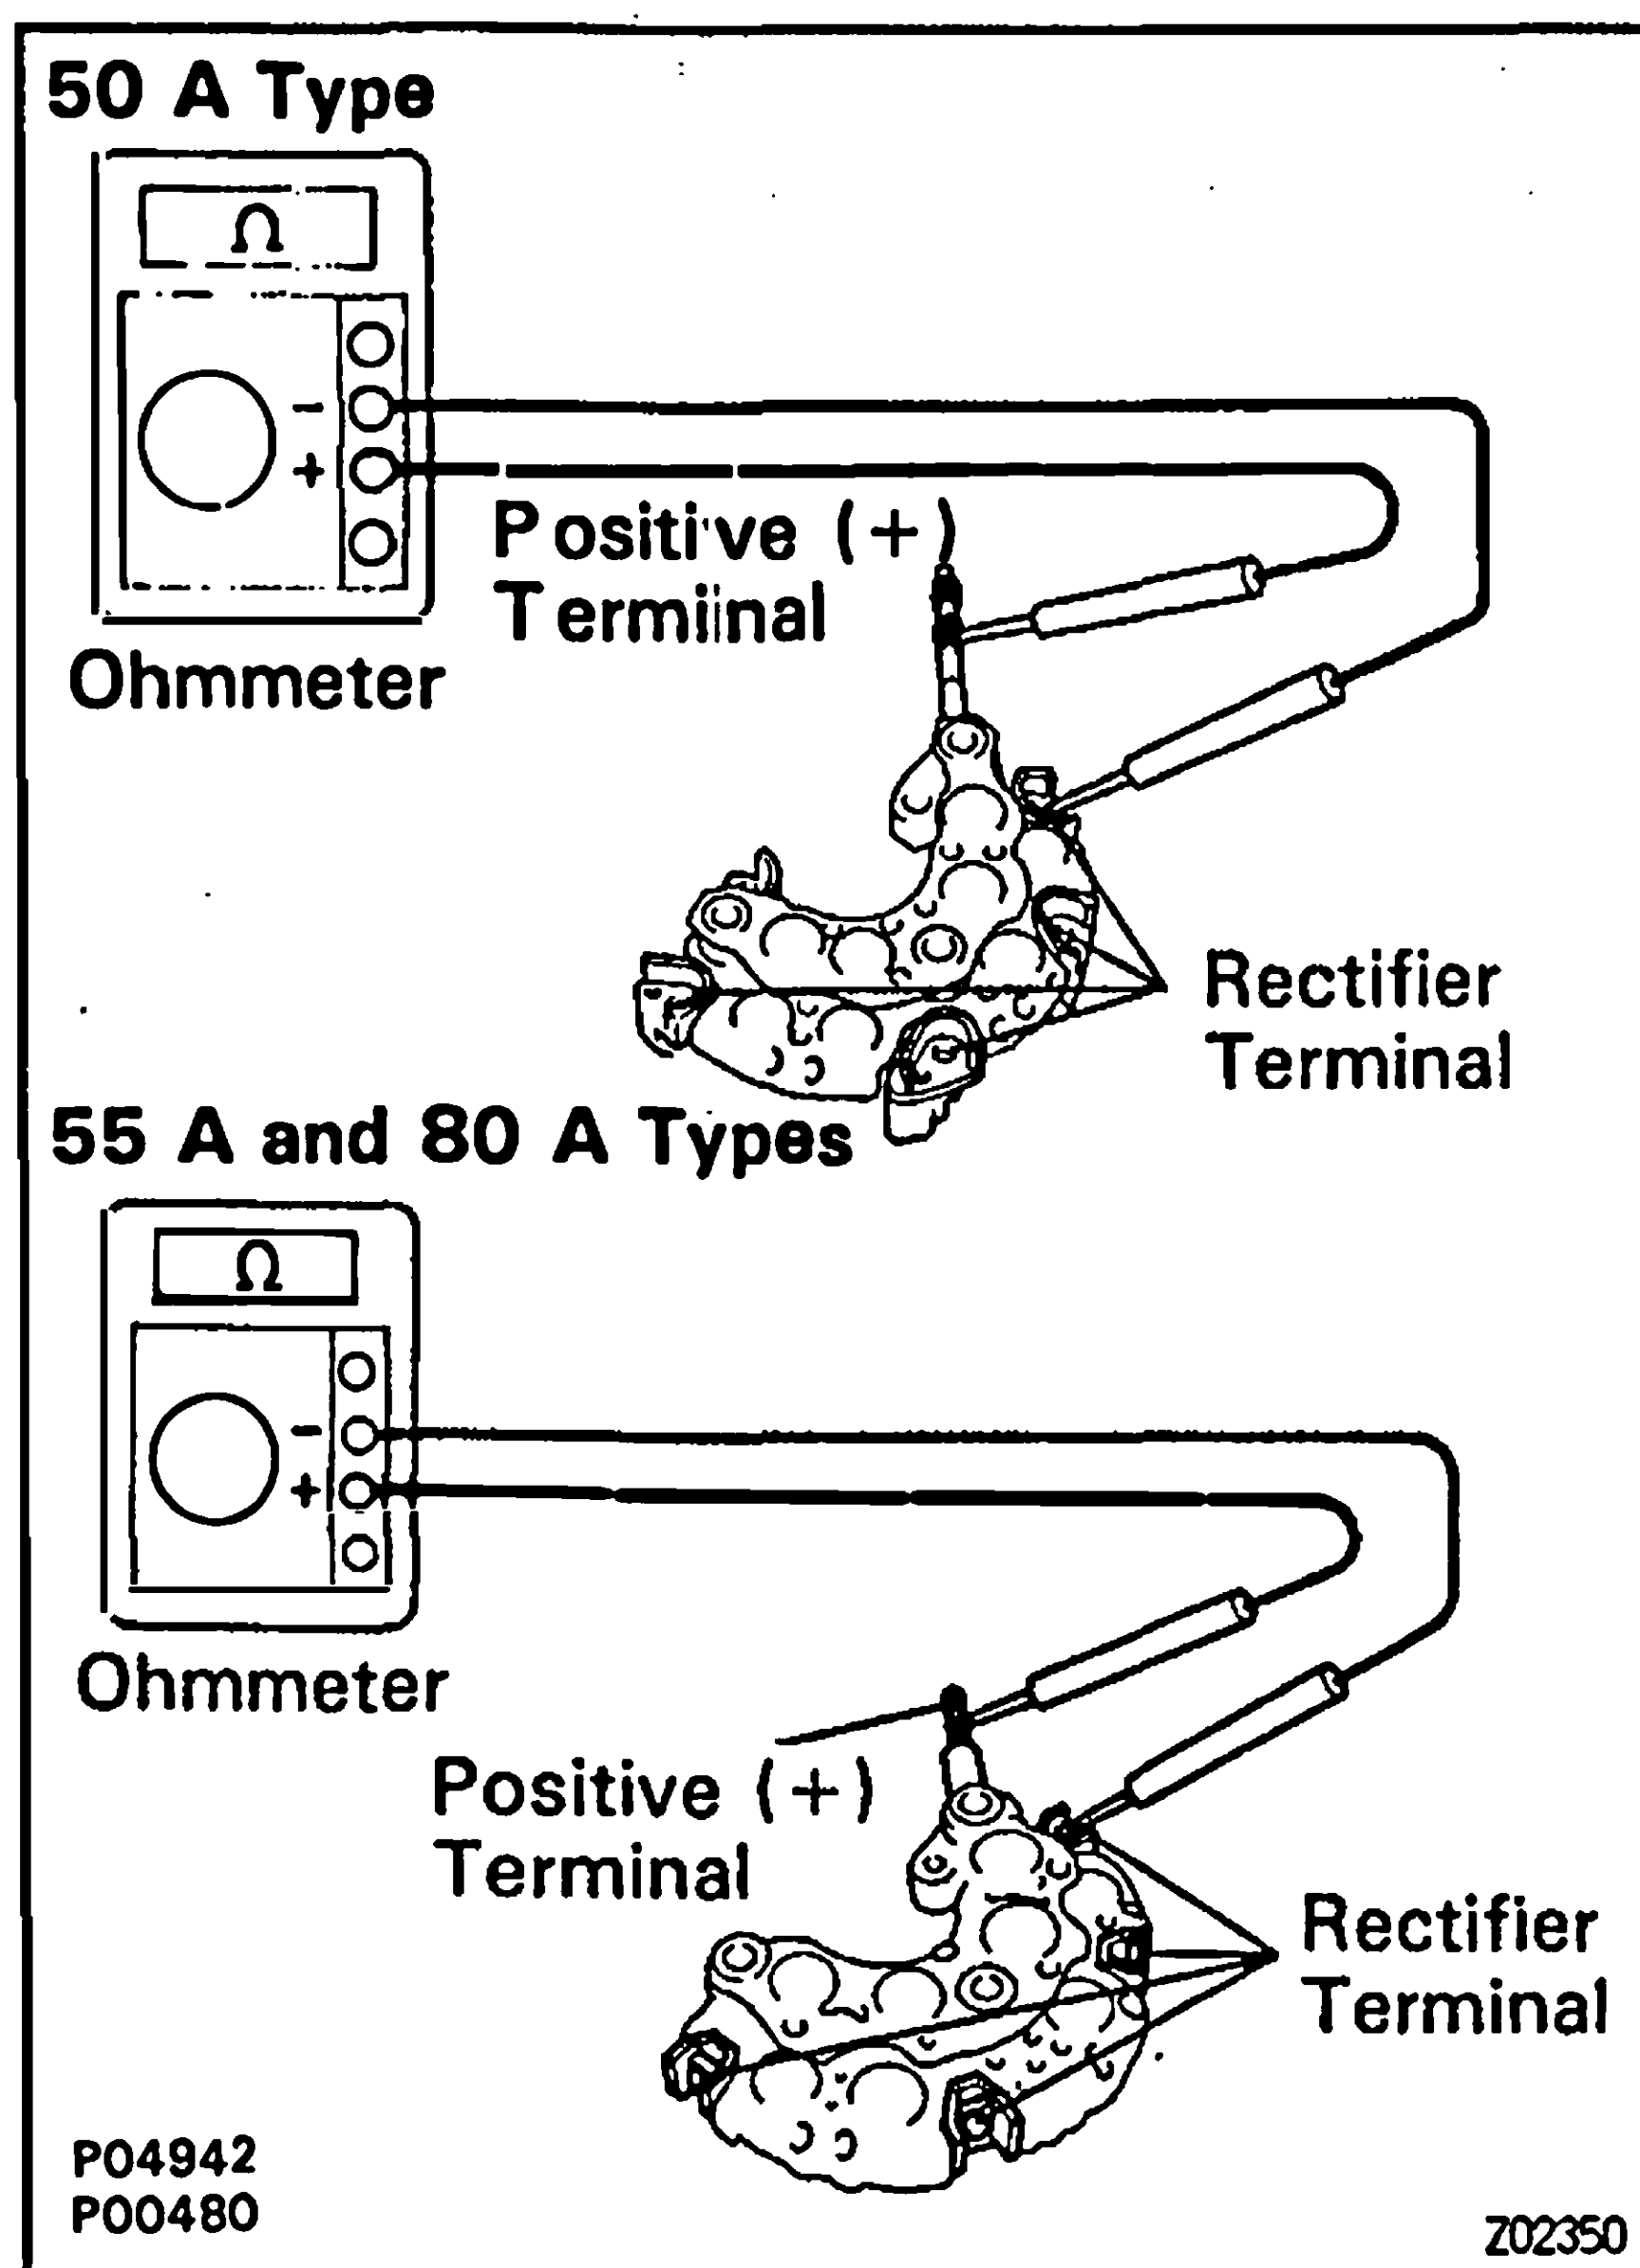


Rectifiers (Rectifier Holder)

1. INSPECT POSITIVE RECTIFIER


- (a) Using an ohmmeter, connect one tester probe to the positive (+) terminal and the other to each rectifier terminal.
- (b) Reverse the polarity of the tester probes and repeat step (a).
- (c) Check that one shows continuity and the other shows no continuity.
If continuity is not as specified, replace the rectifier holder.

CH

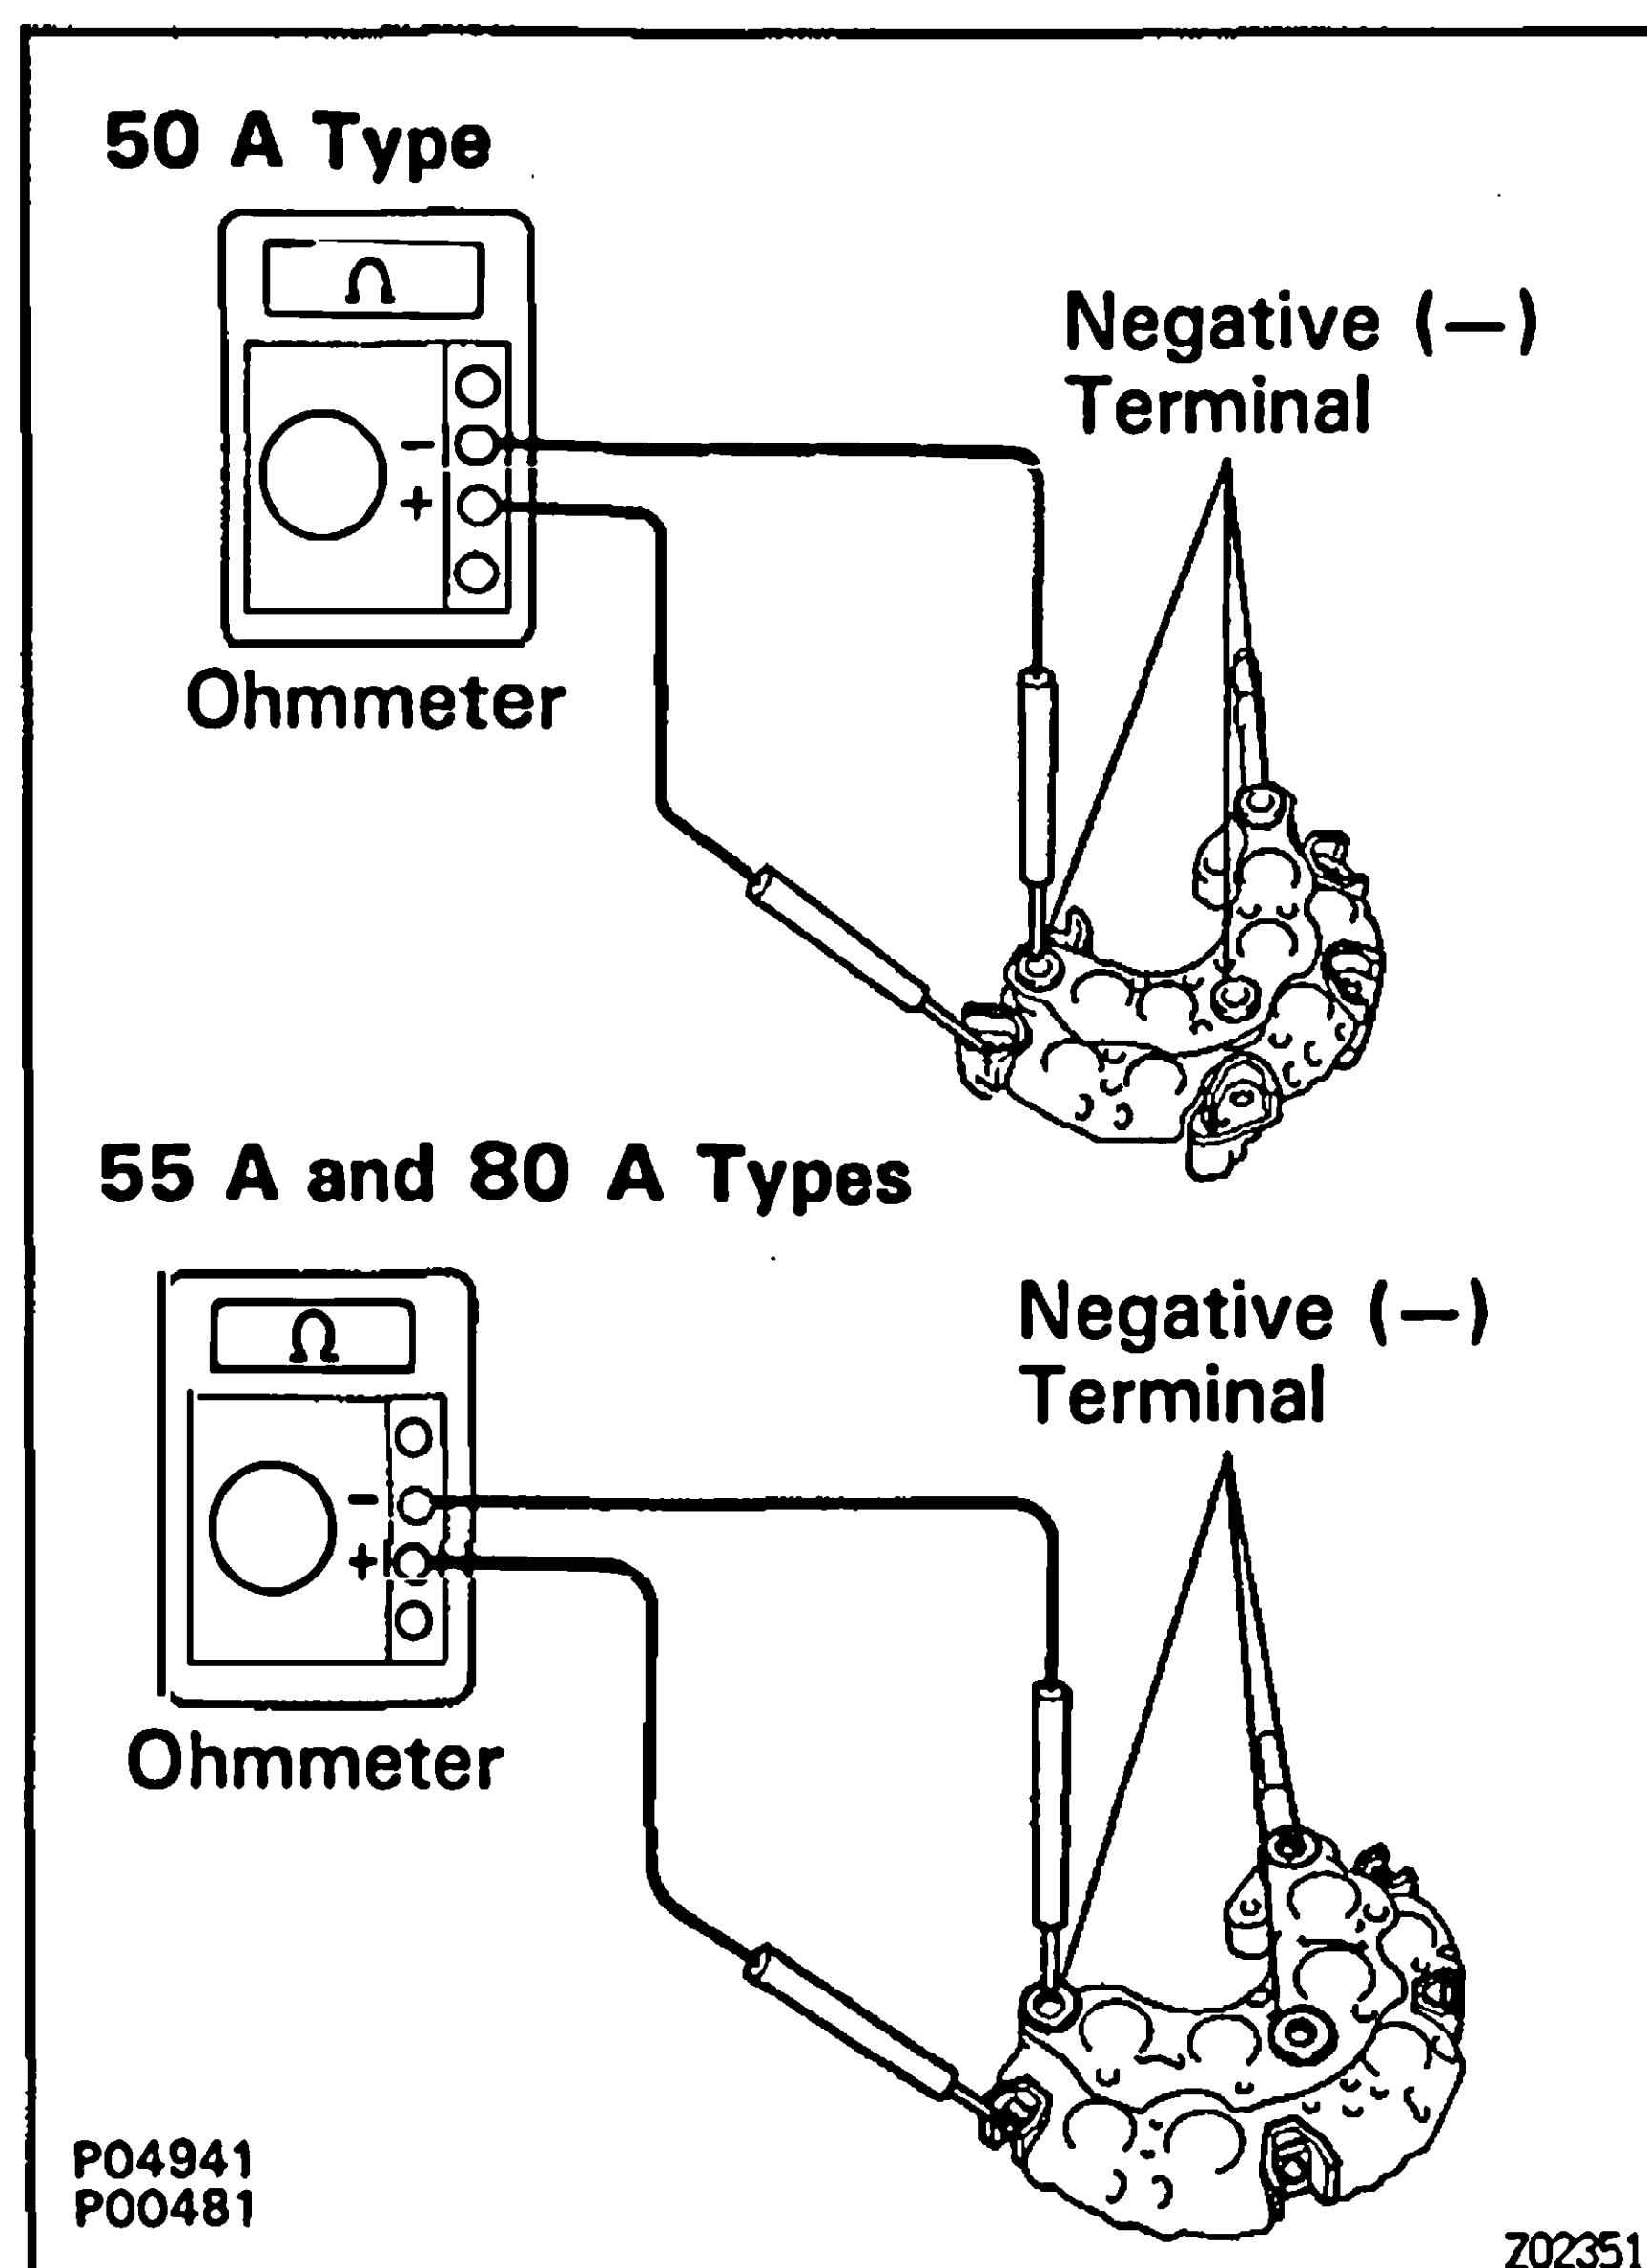

2. INSPECT NEGATIVE RECTIFIER


- (a) Using an ohmmeter, connect one tester probe to each negative (-) terminal and the other to each rectifier terminal.
- (b) Reverse the polarity of the tester probes and repeat step (a).
- (c) Check that one shows continuity and the other shows no continuity.
If continuity is not as specified, replace the rectifier holder.

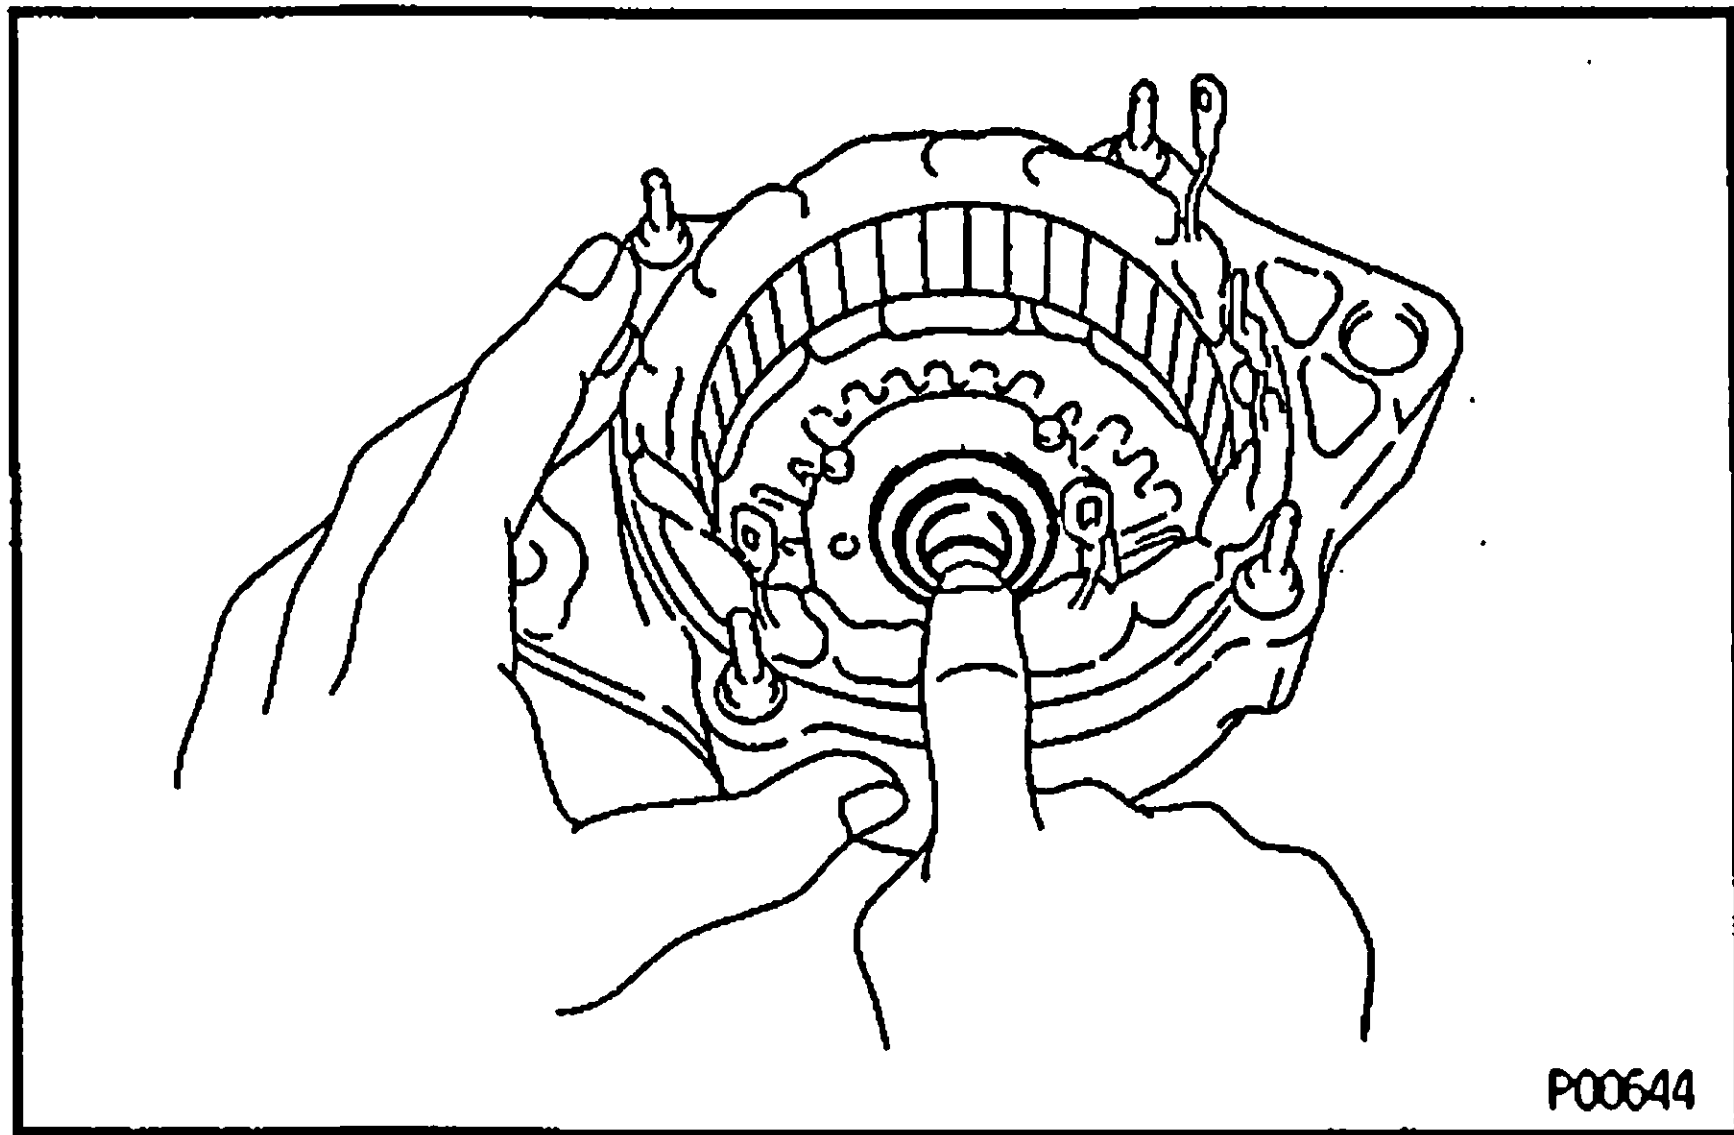

Bearings


1. INSPECT FRONT BEARING

Check that the bearing is not rough or worn.

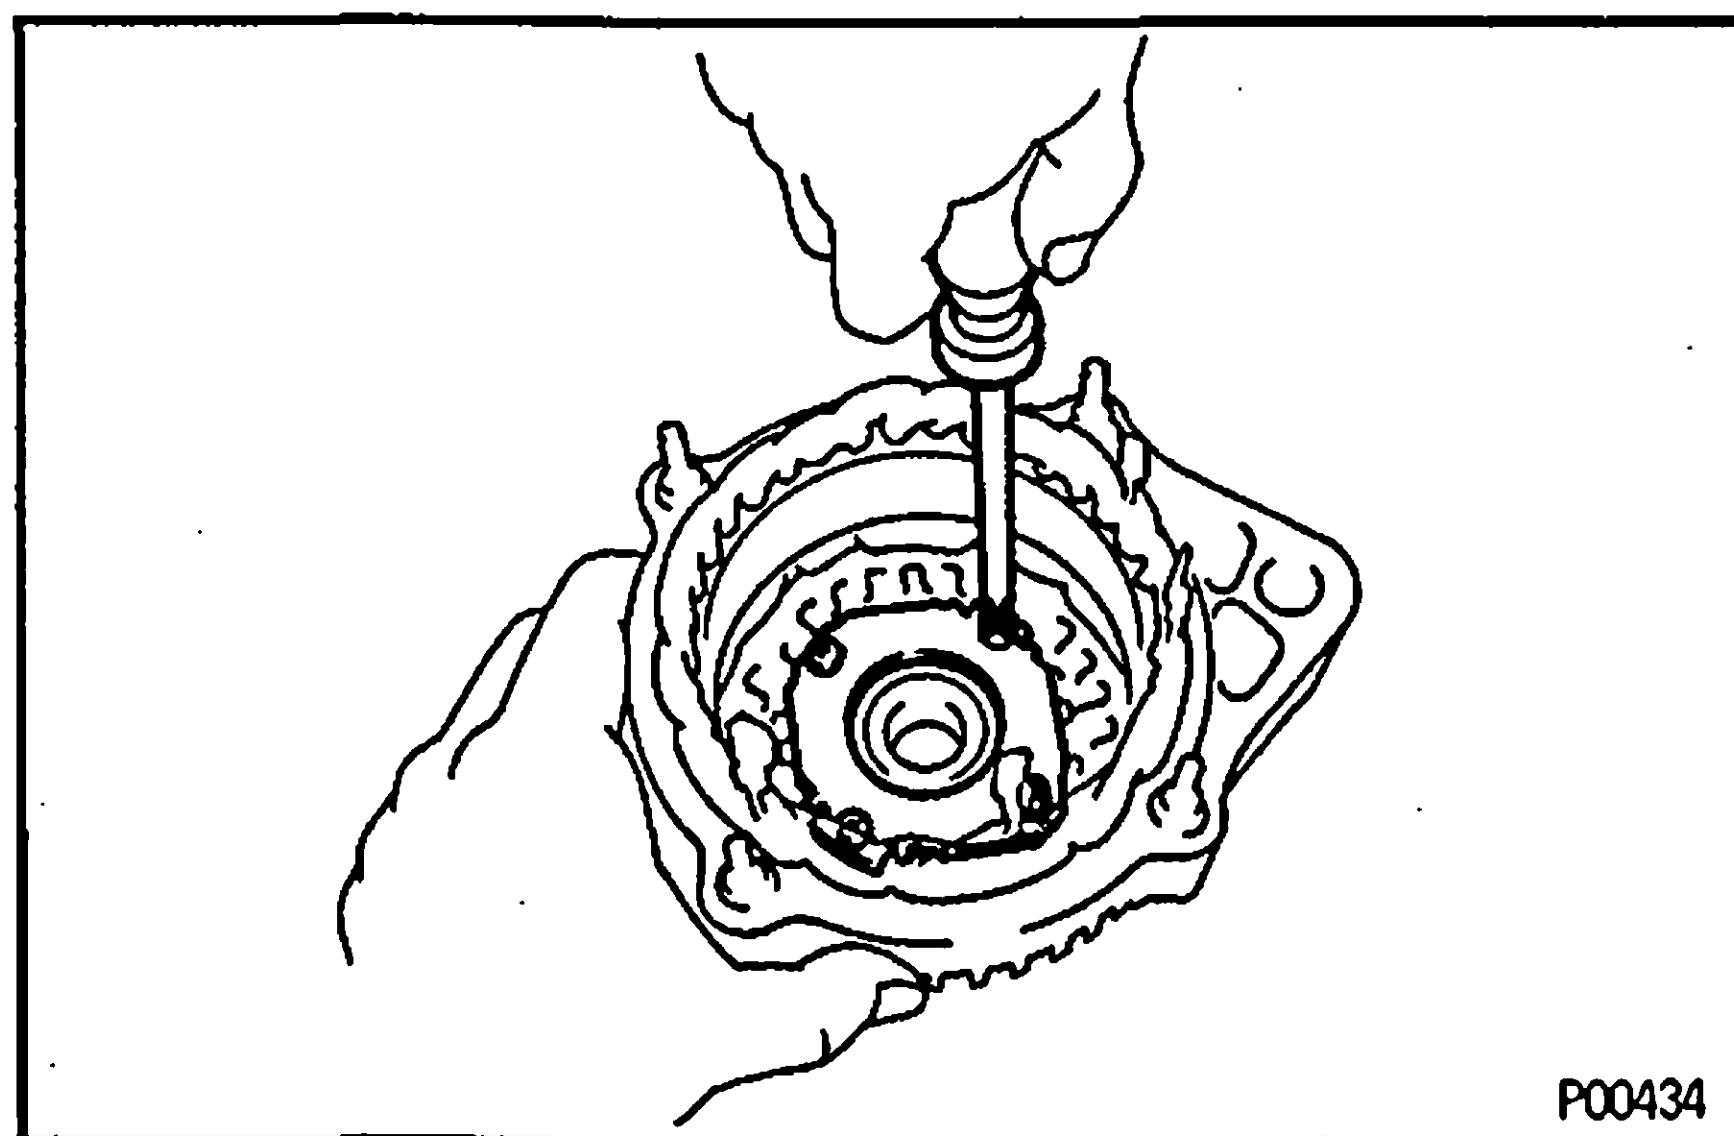


2. IF NECESSARY, REPLACE FRONT BEARING


(a) Remove the four screws, bearing retainer and bearing.

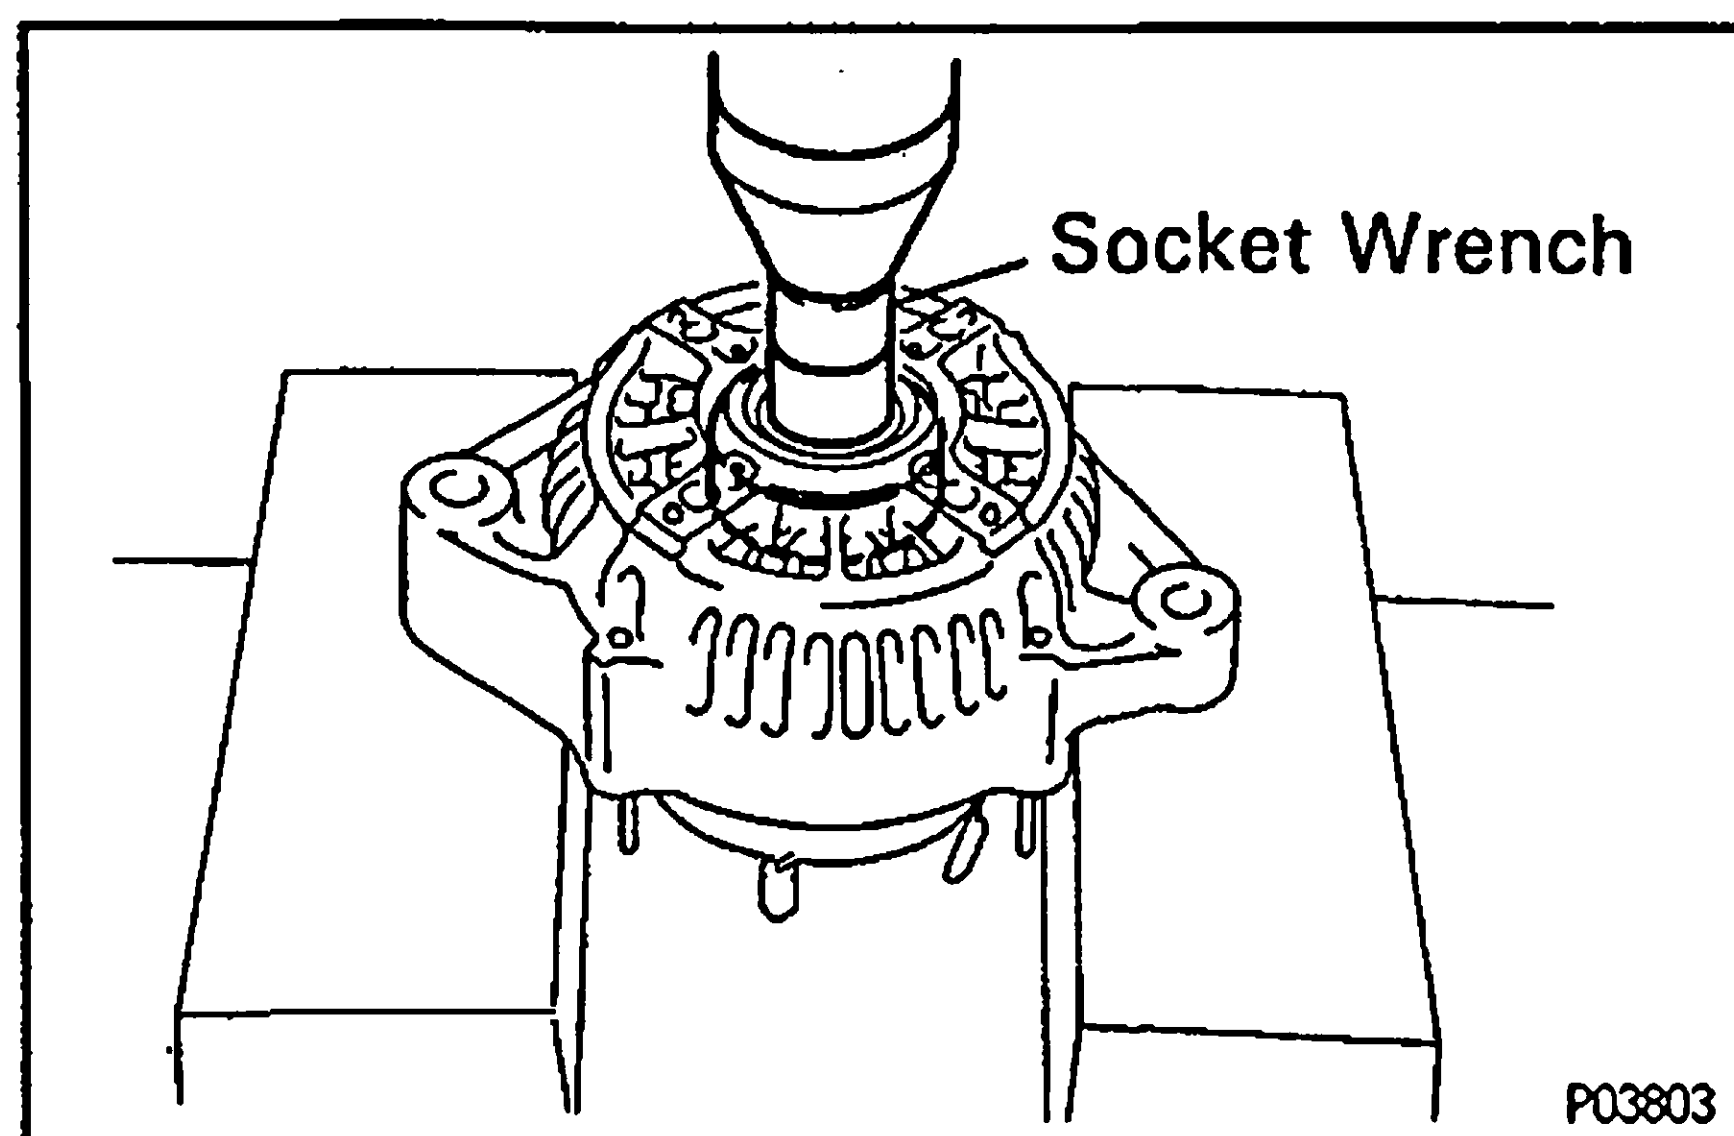


(b) Using a socket wrench and press, press out the bearing.

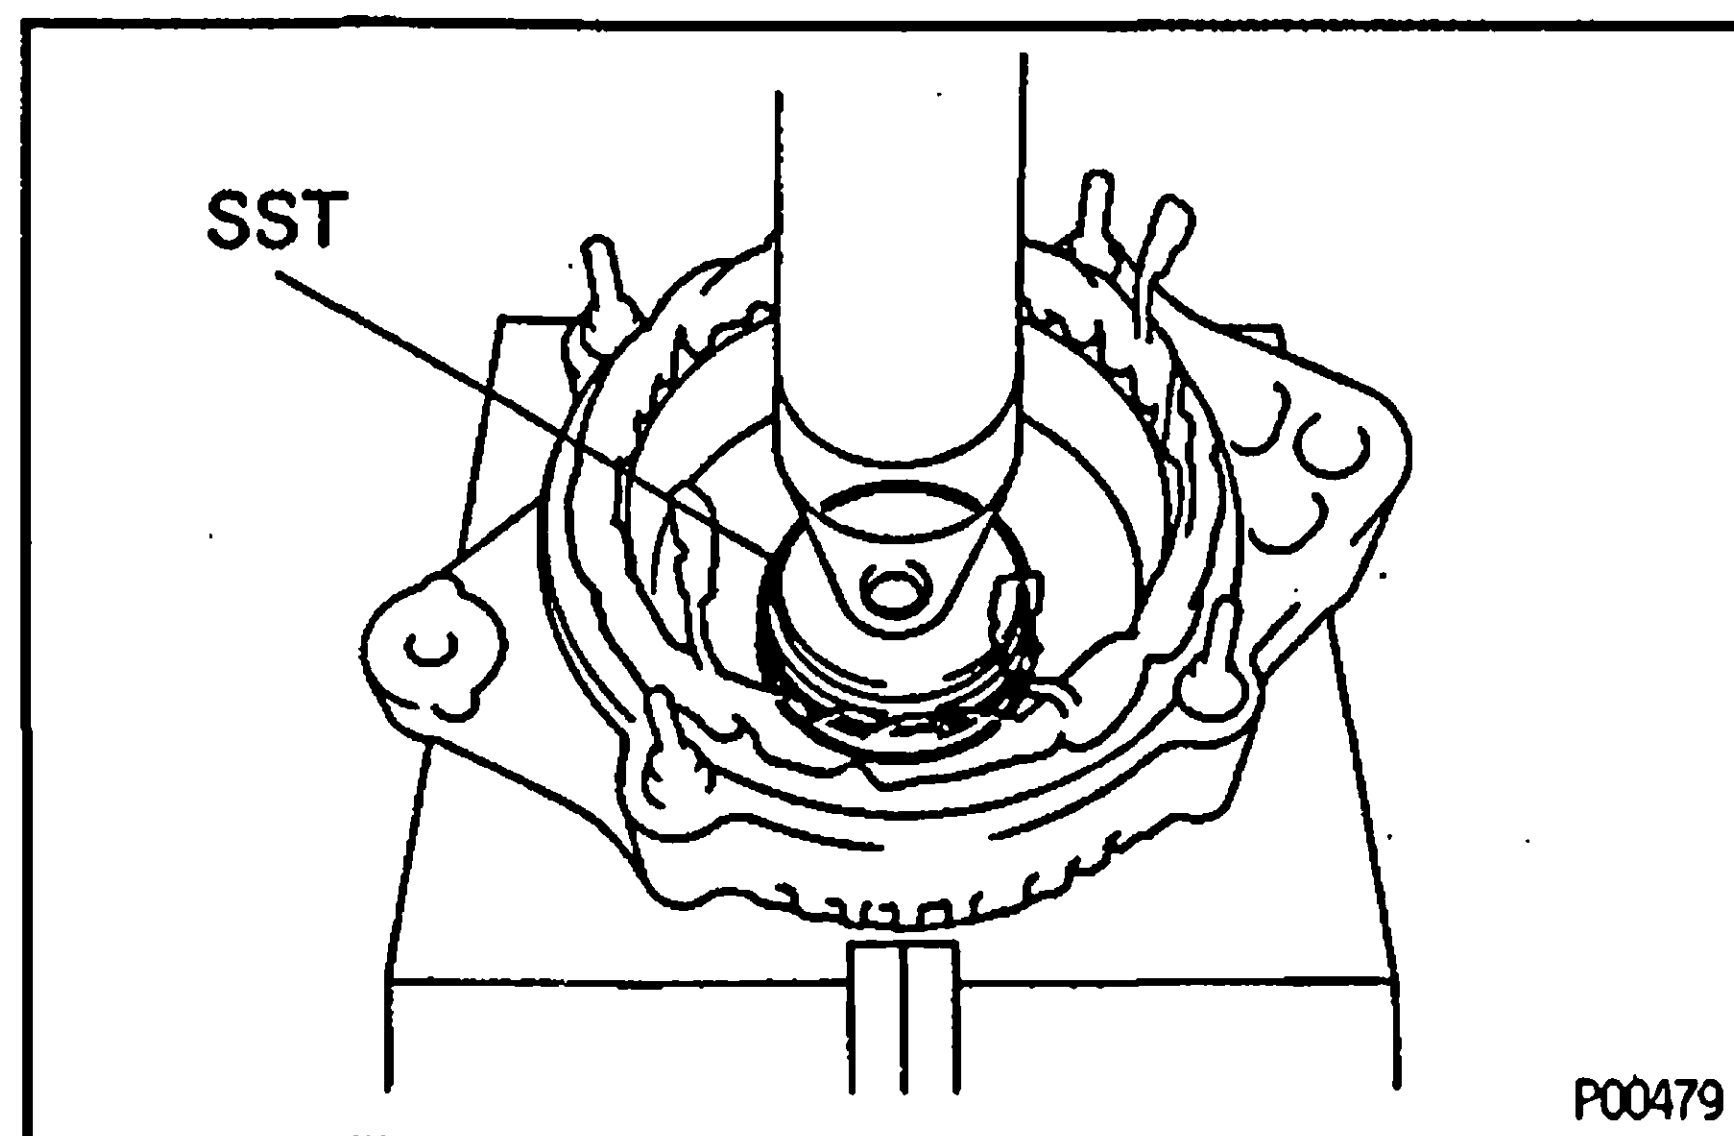

(c) Using SST and a press, press in a new bearing.
SST 09608—20012 (09608—00030)

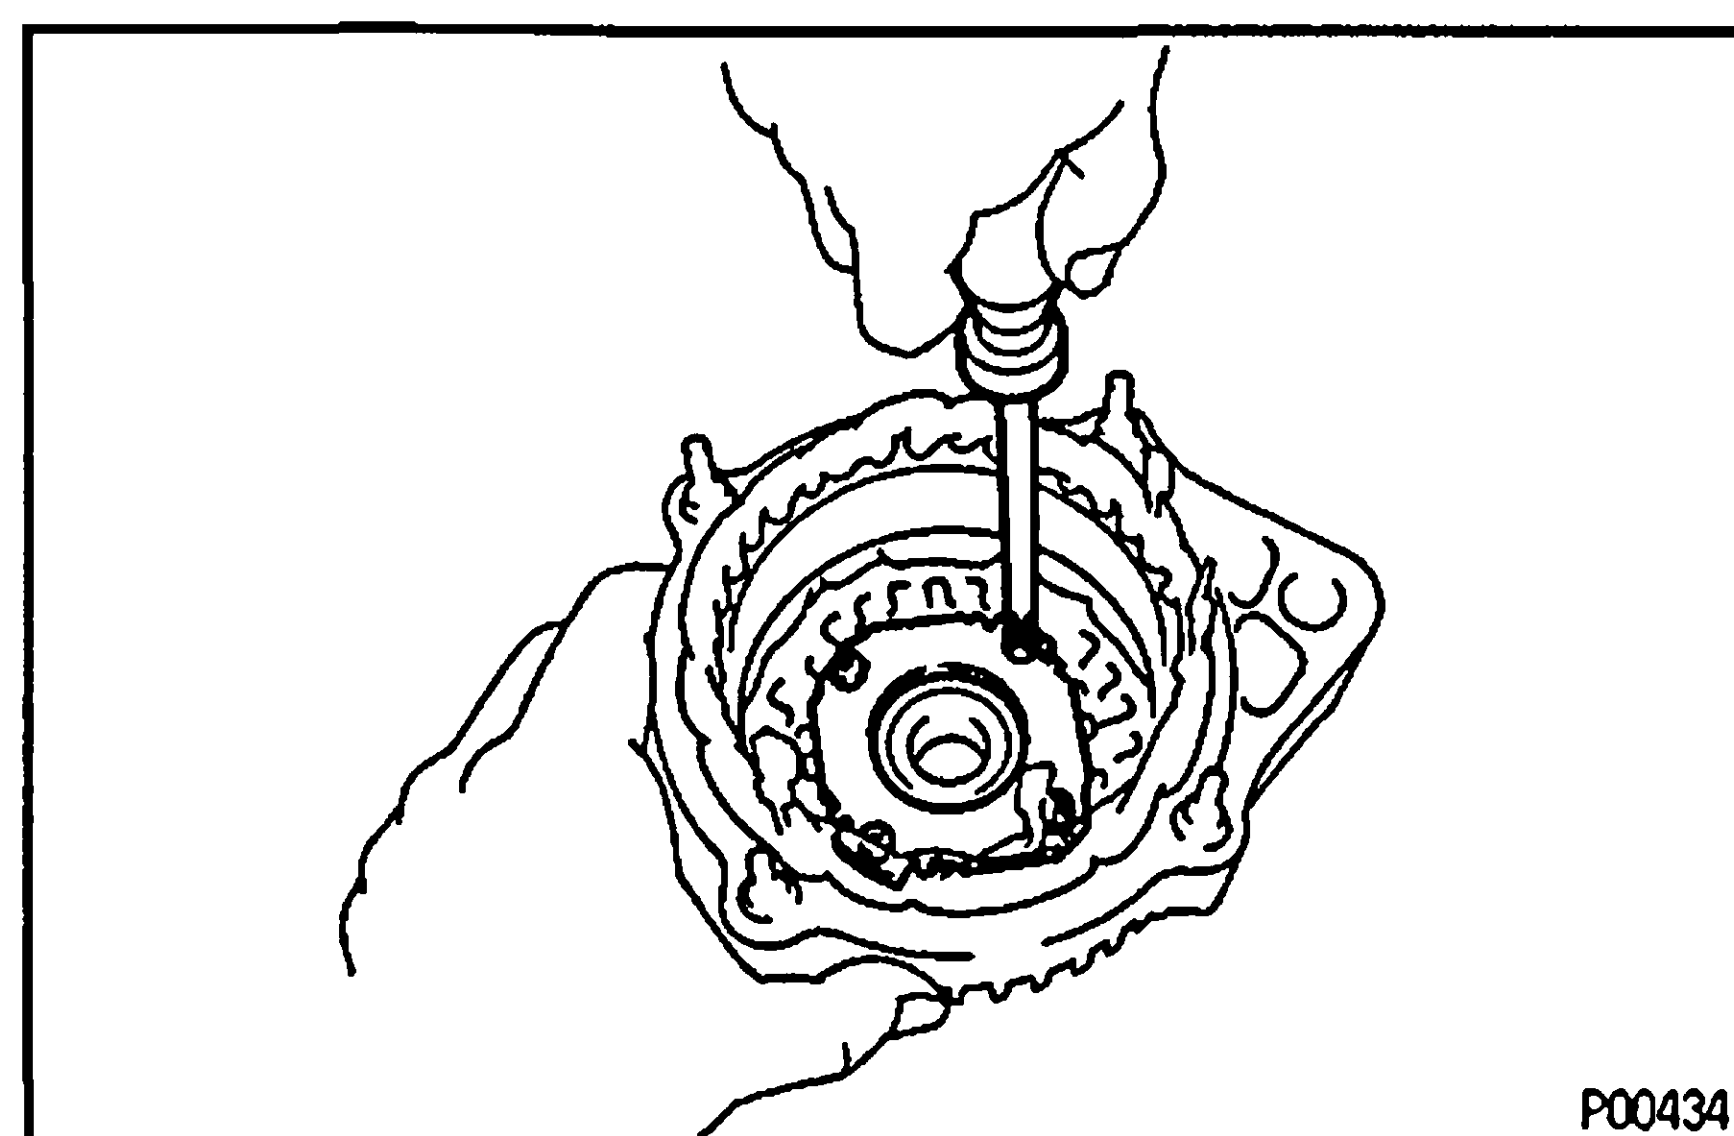


(d) Install the bearing retainer with the four screws.

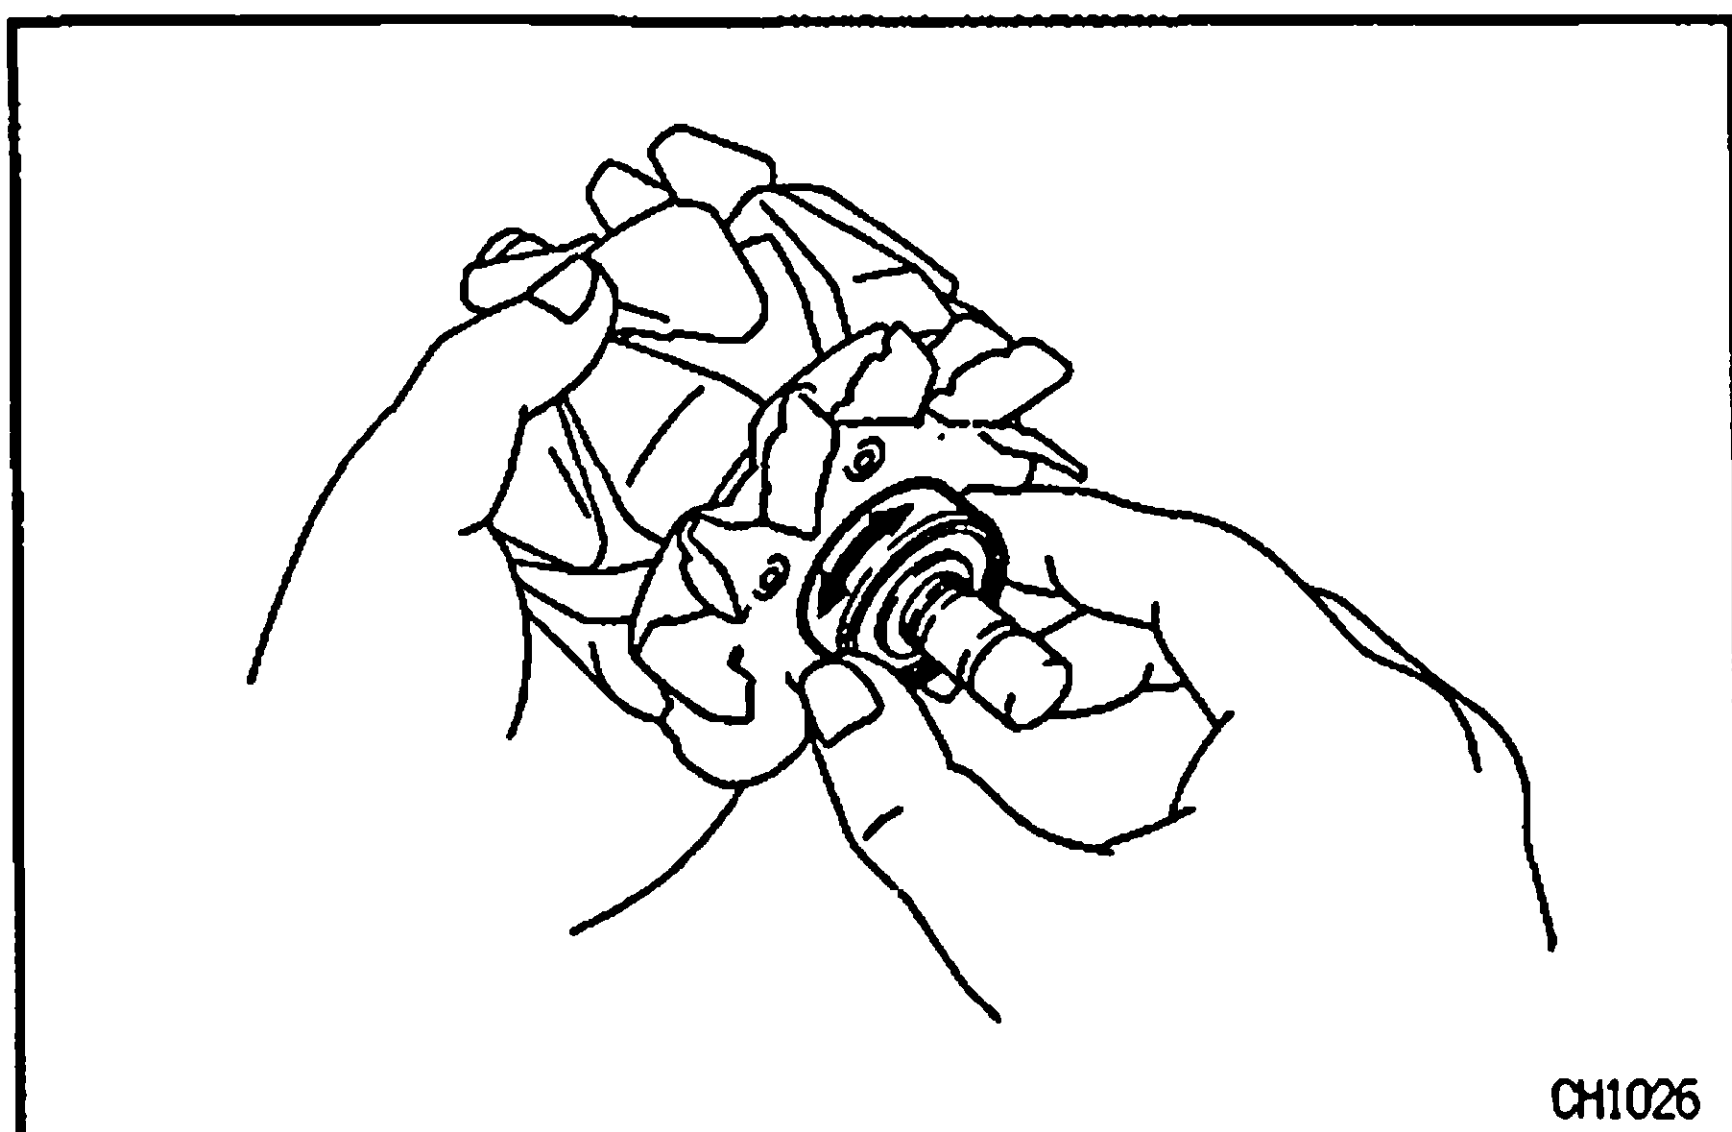

3. INSPECT REAR BEARING

Check that the bearing is not rough or worn.

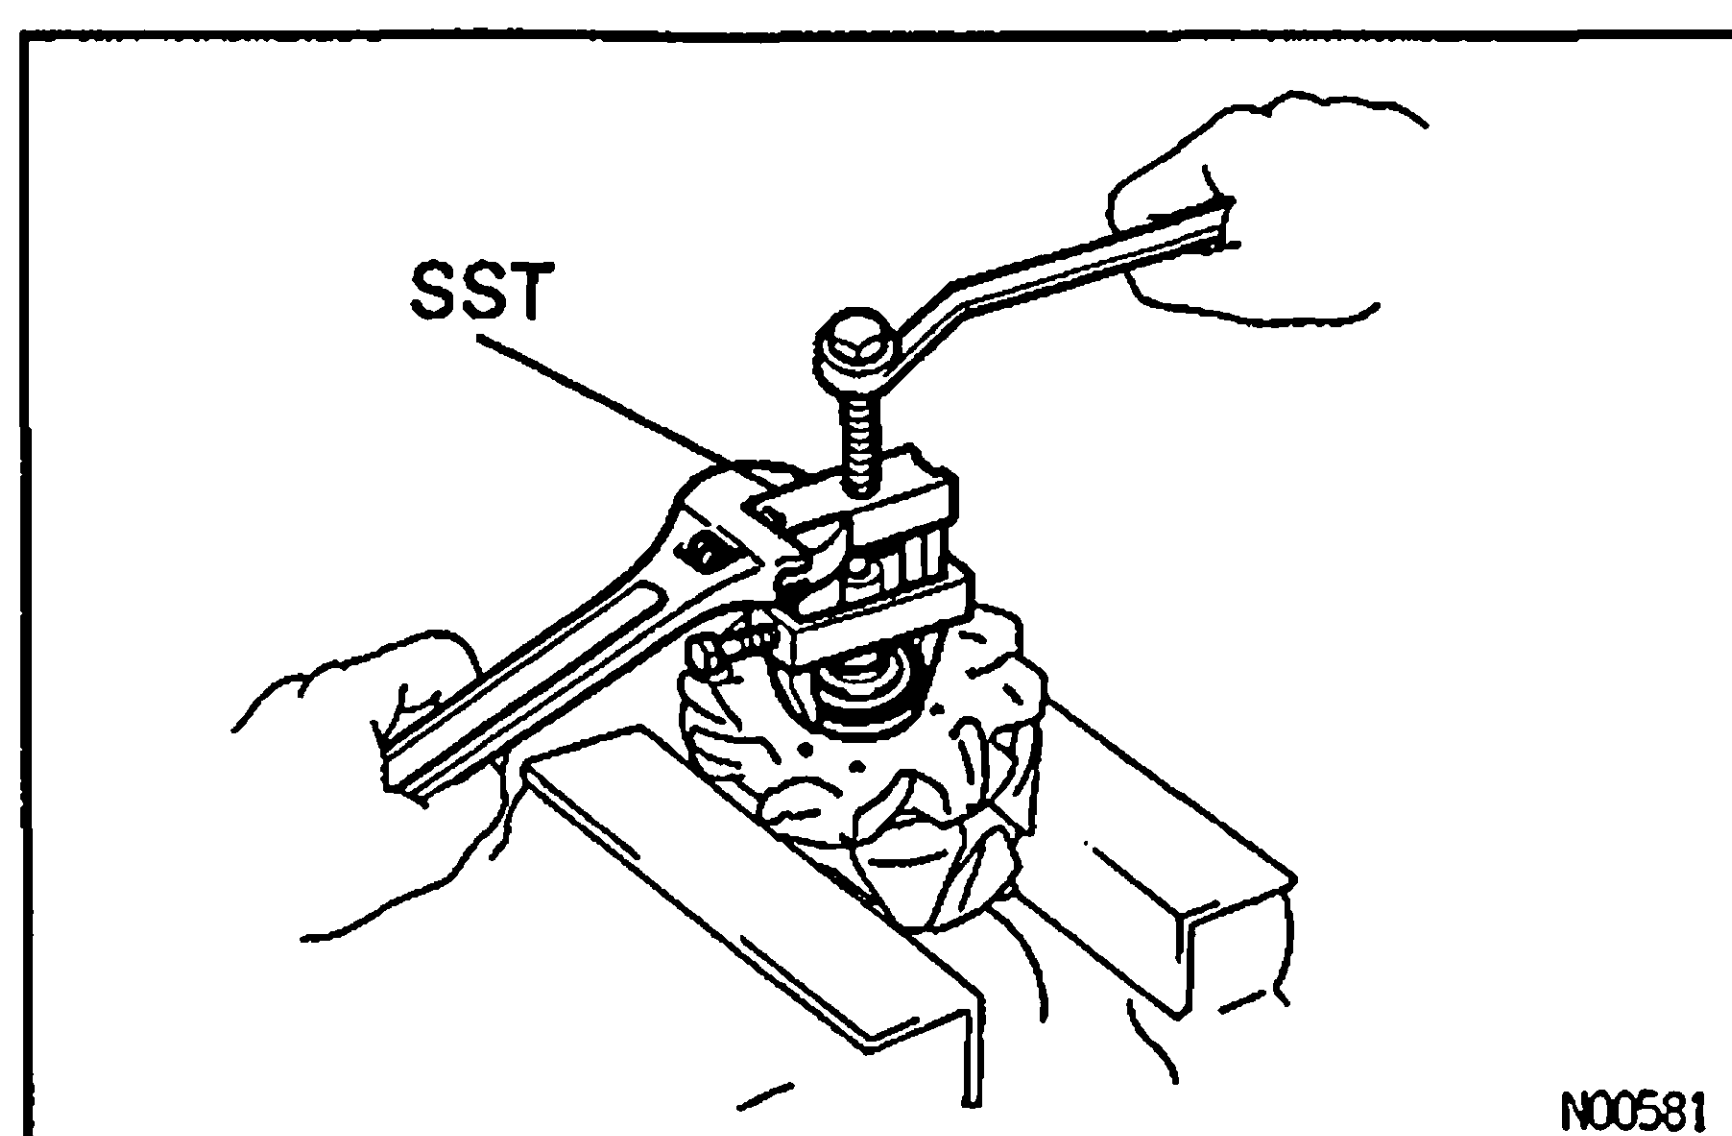


4. IF NECESSARY, REPLACE REAR BEARING


- (a) Using SST, remove the bearing covers and bearing.
SST 09820-00021

NOTICE: Be careful not to damage the fan.


CH

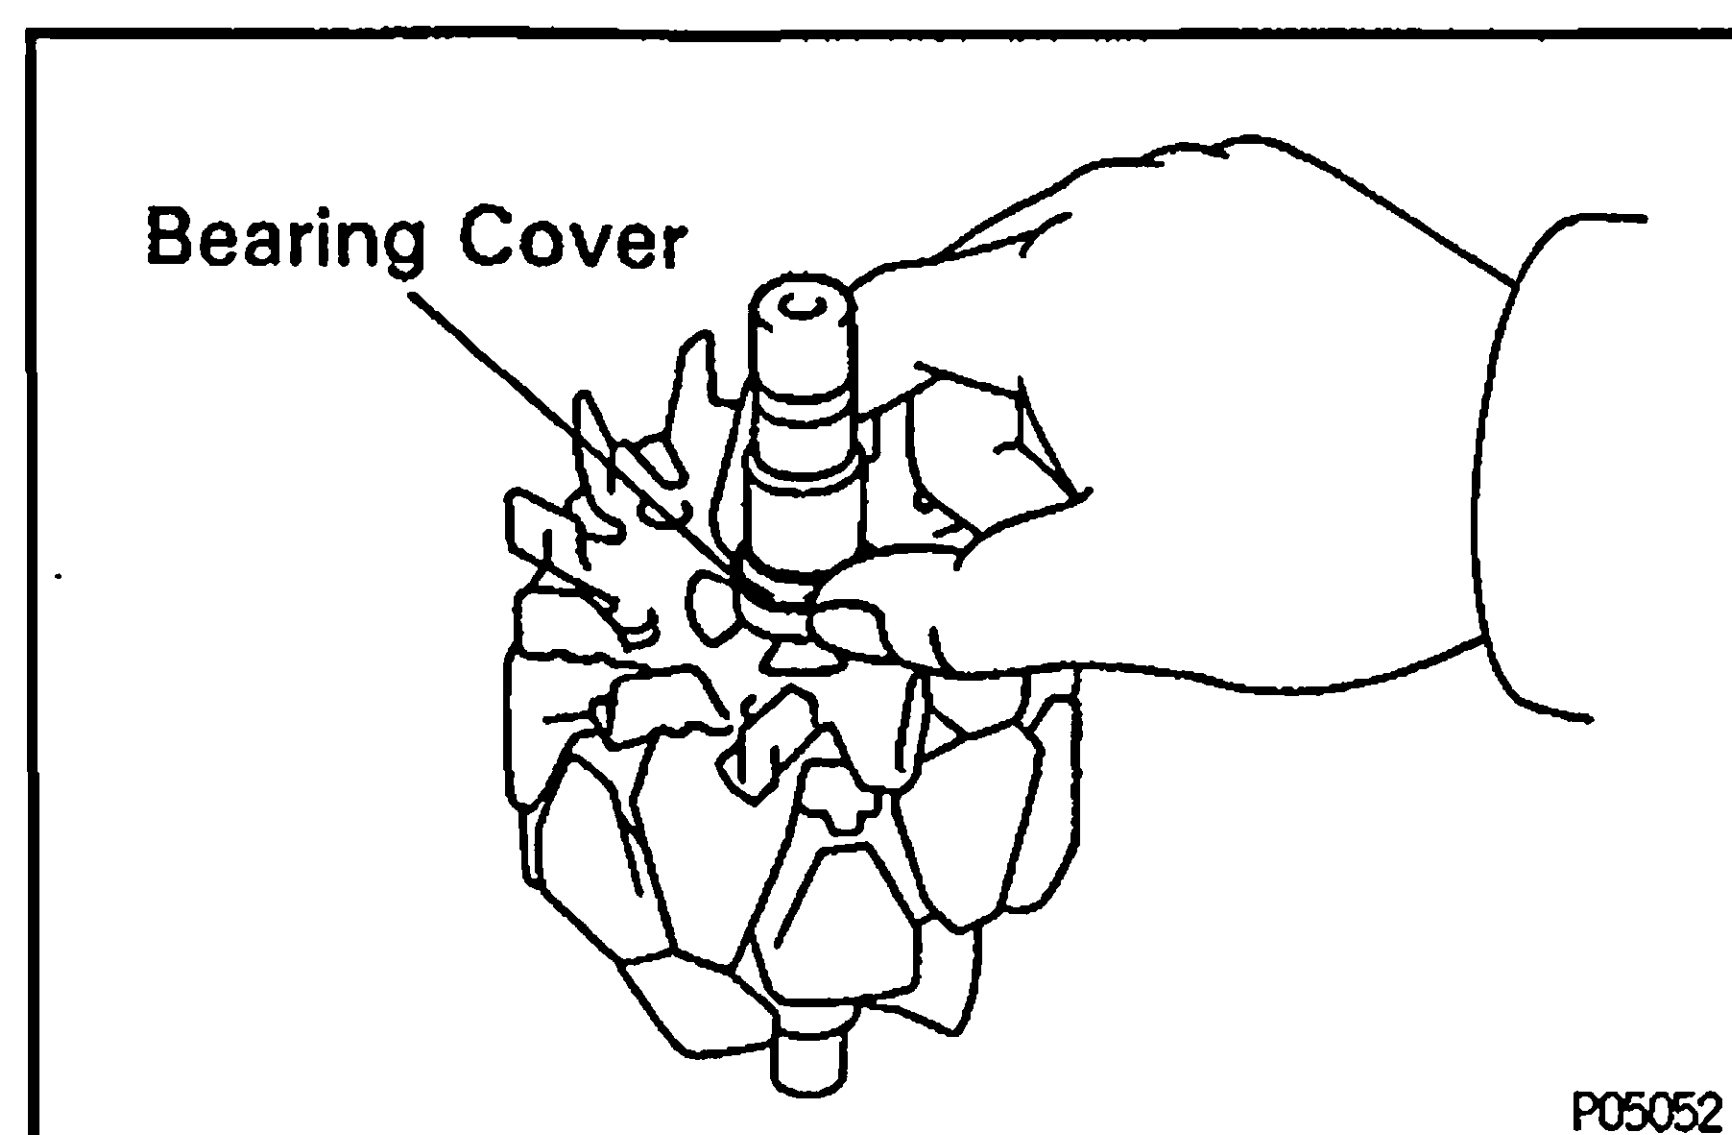

- (b) Place the bearing cover on the rotor.

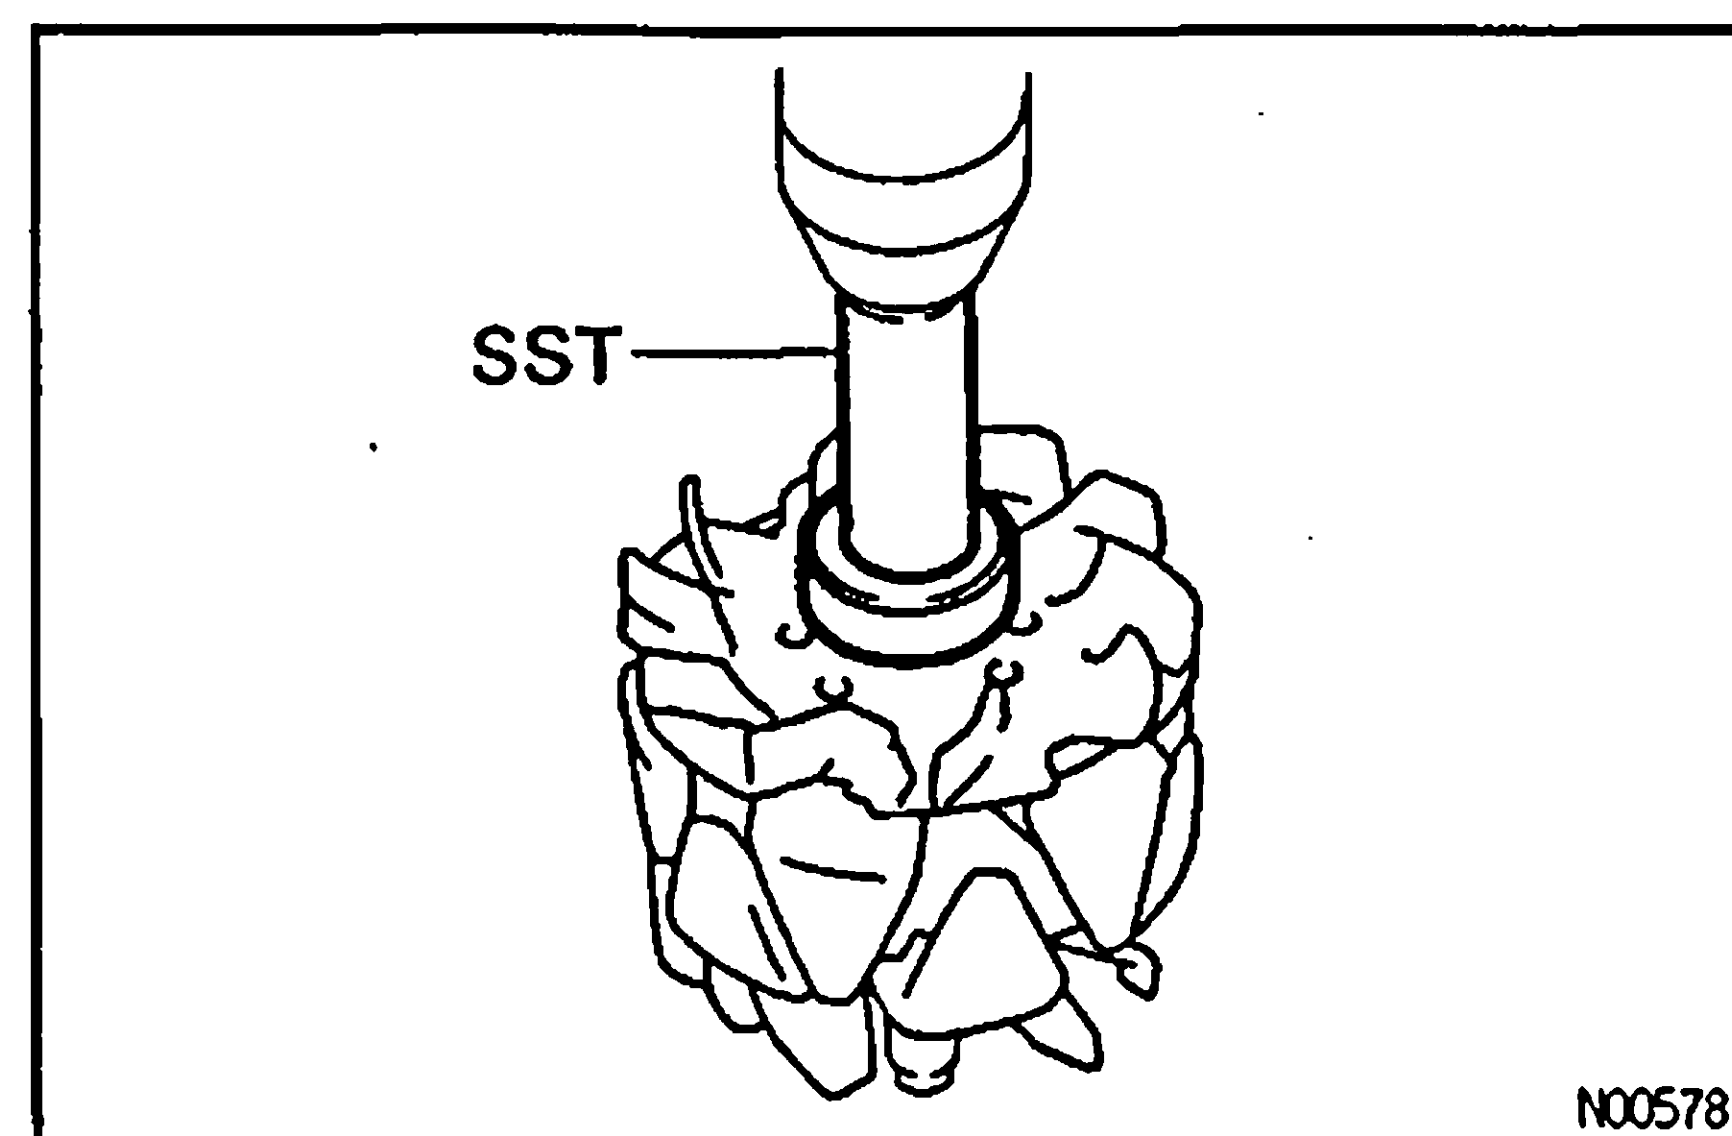

- (c) Using SST and a press, press in a new bearing.
SST 09820-00030

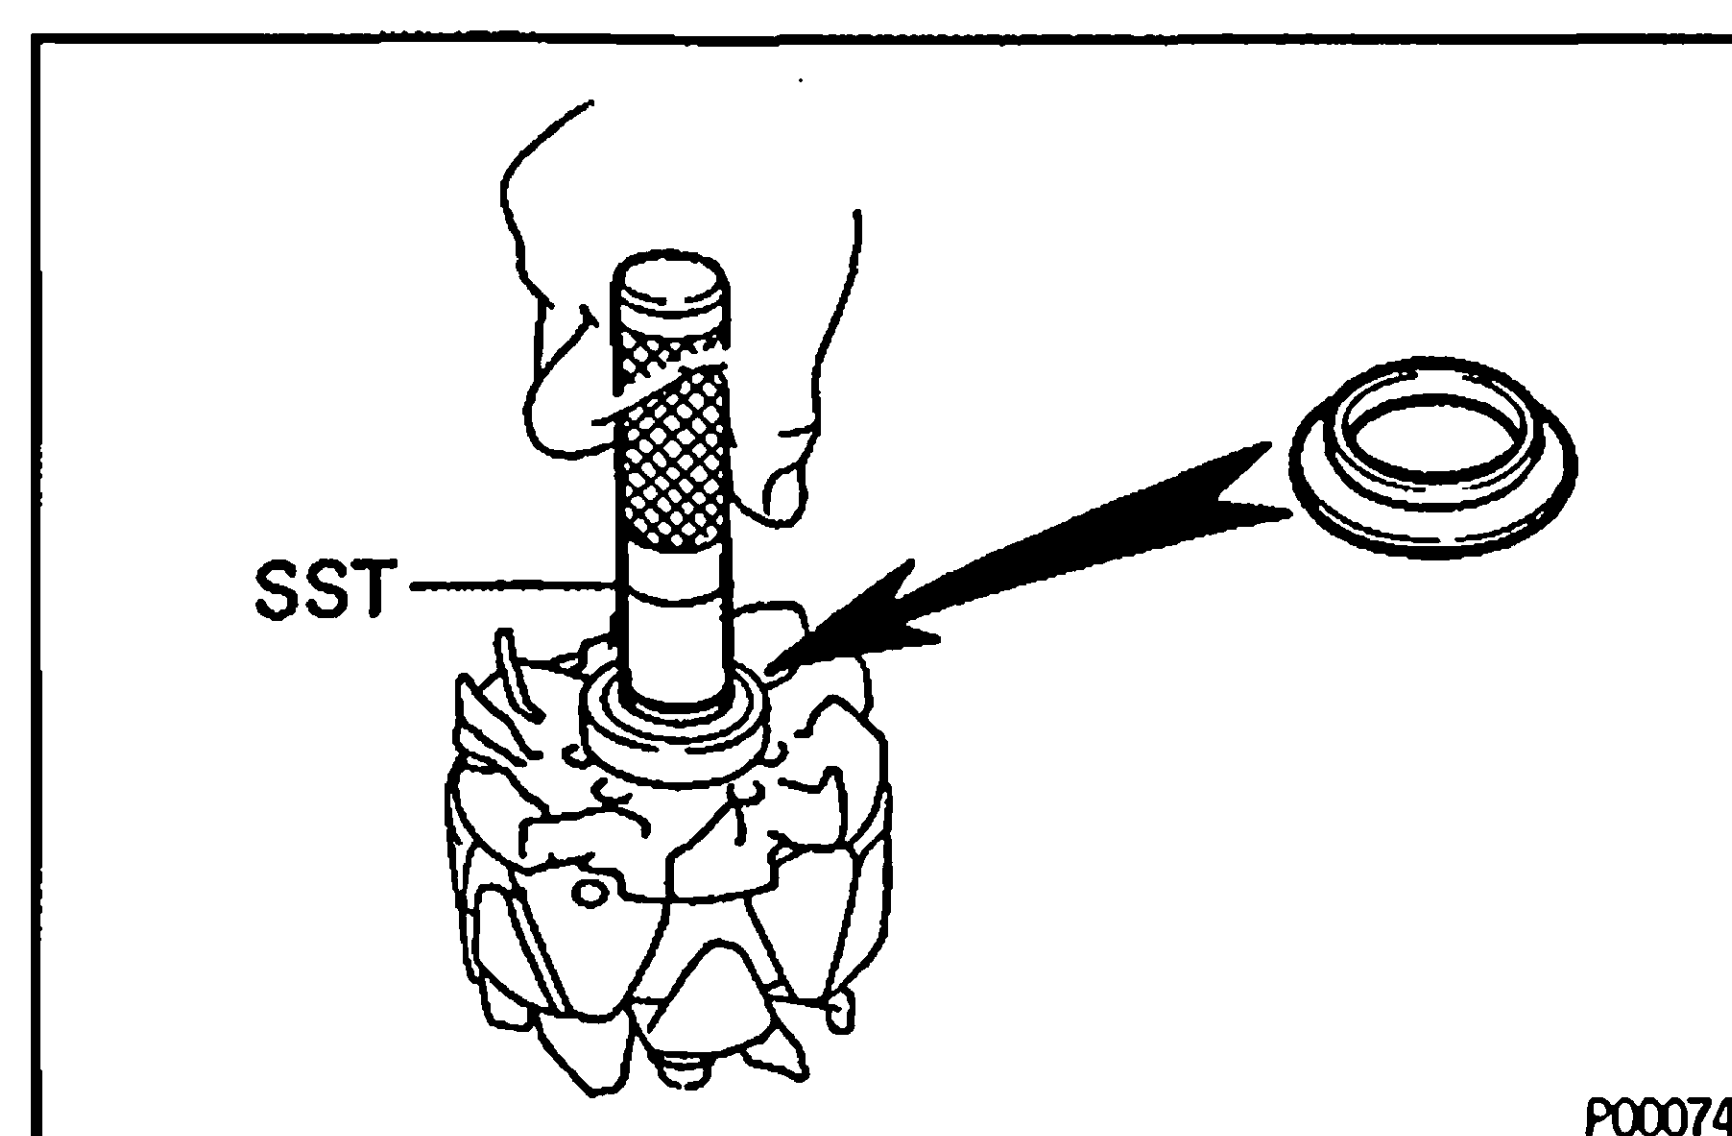


- (d) Using SST, push in the bearing cover.
SST 09285-76010

ALTERNATOR ASSEMBLY


(See page CH-11)

1. INSTALL ROTOR TO DRIVE END FRAME


- (a) Place the drive end frame on the pulley.
- (b) Install the rotor to the drive end frame.

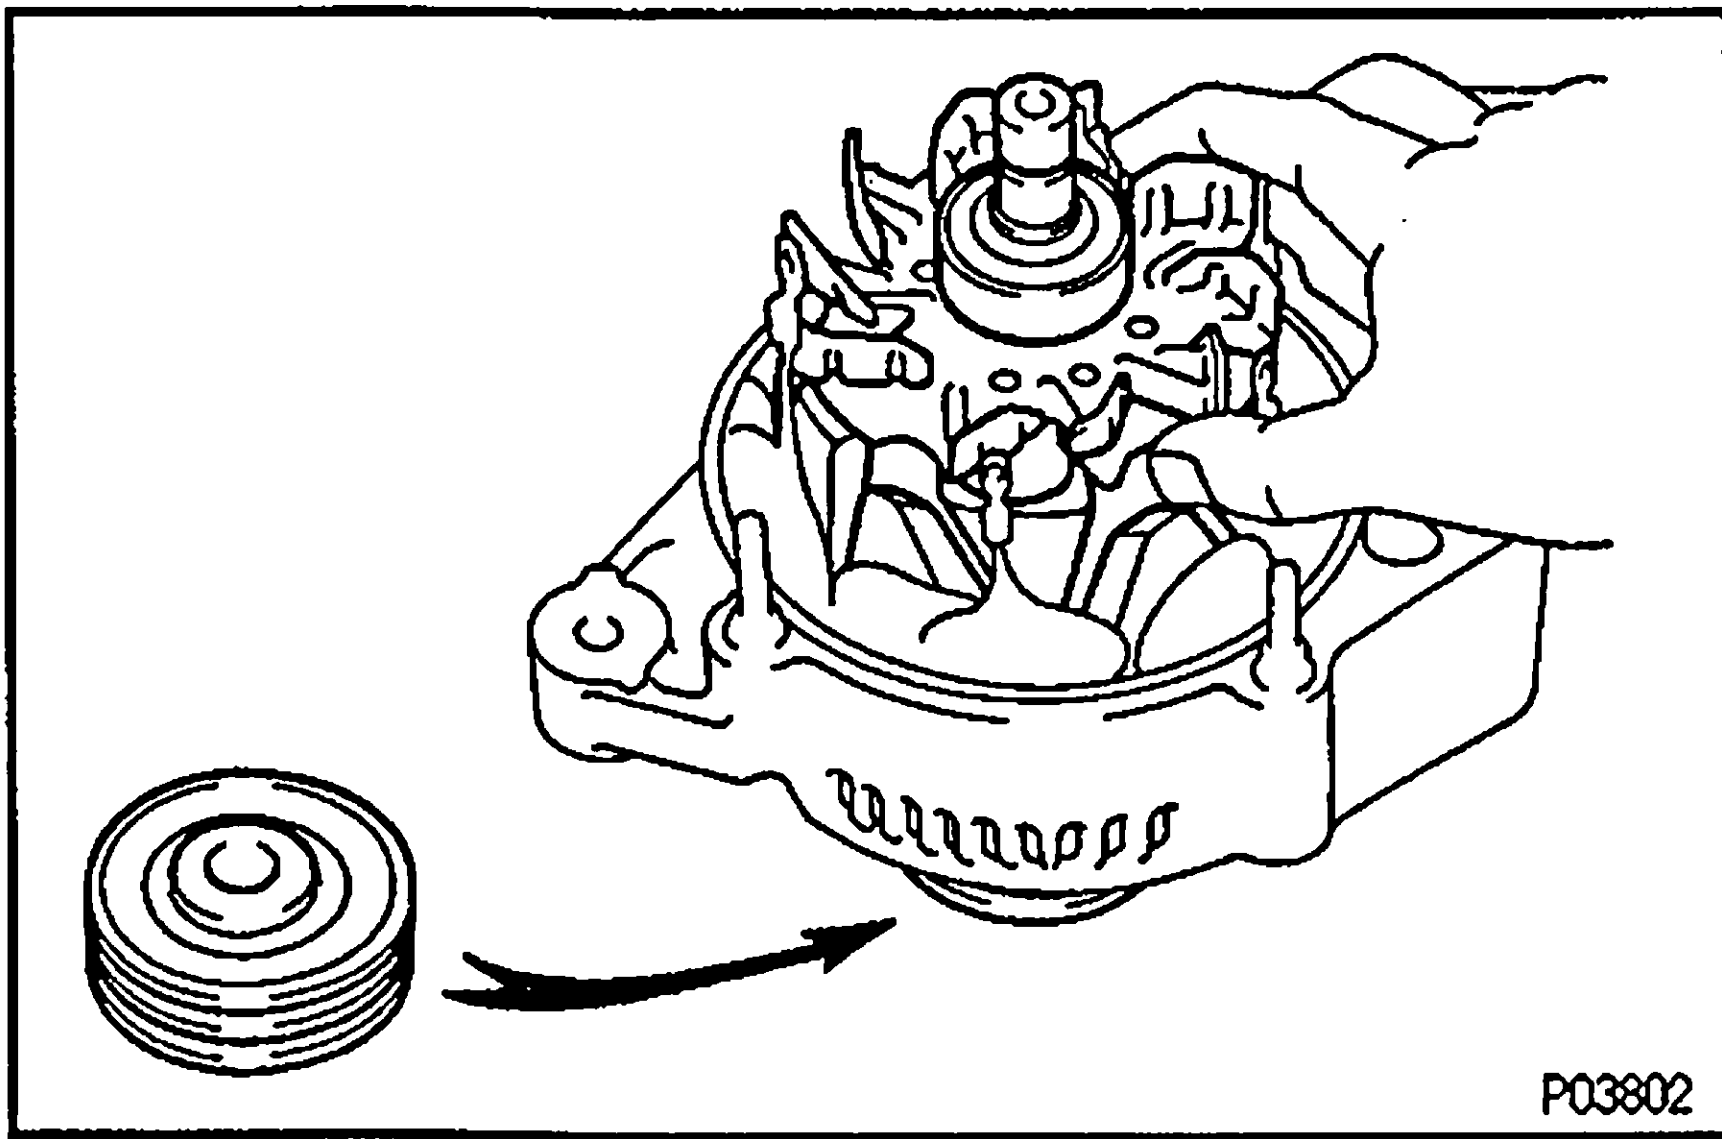**2. INSTALL RECTIFIER END FRAME****(50 A Type)**


- (a) Place the thrust washer on the rotor.

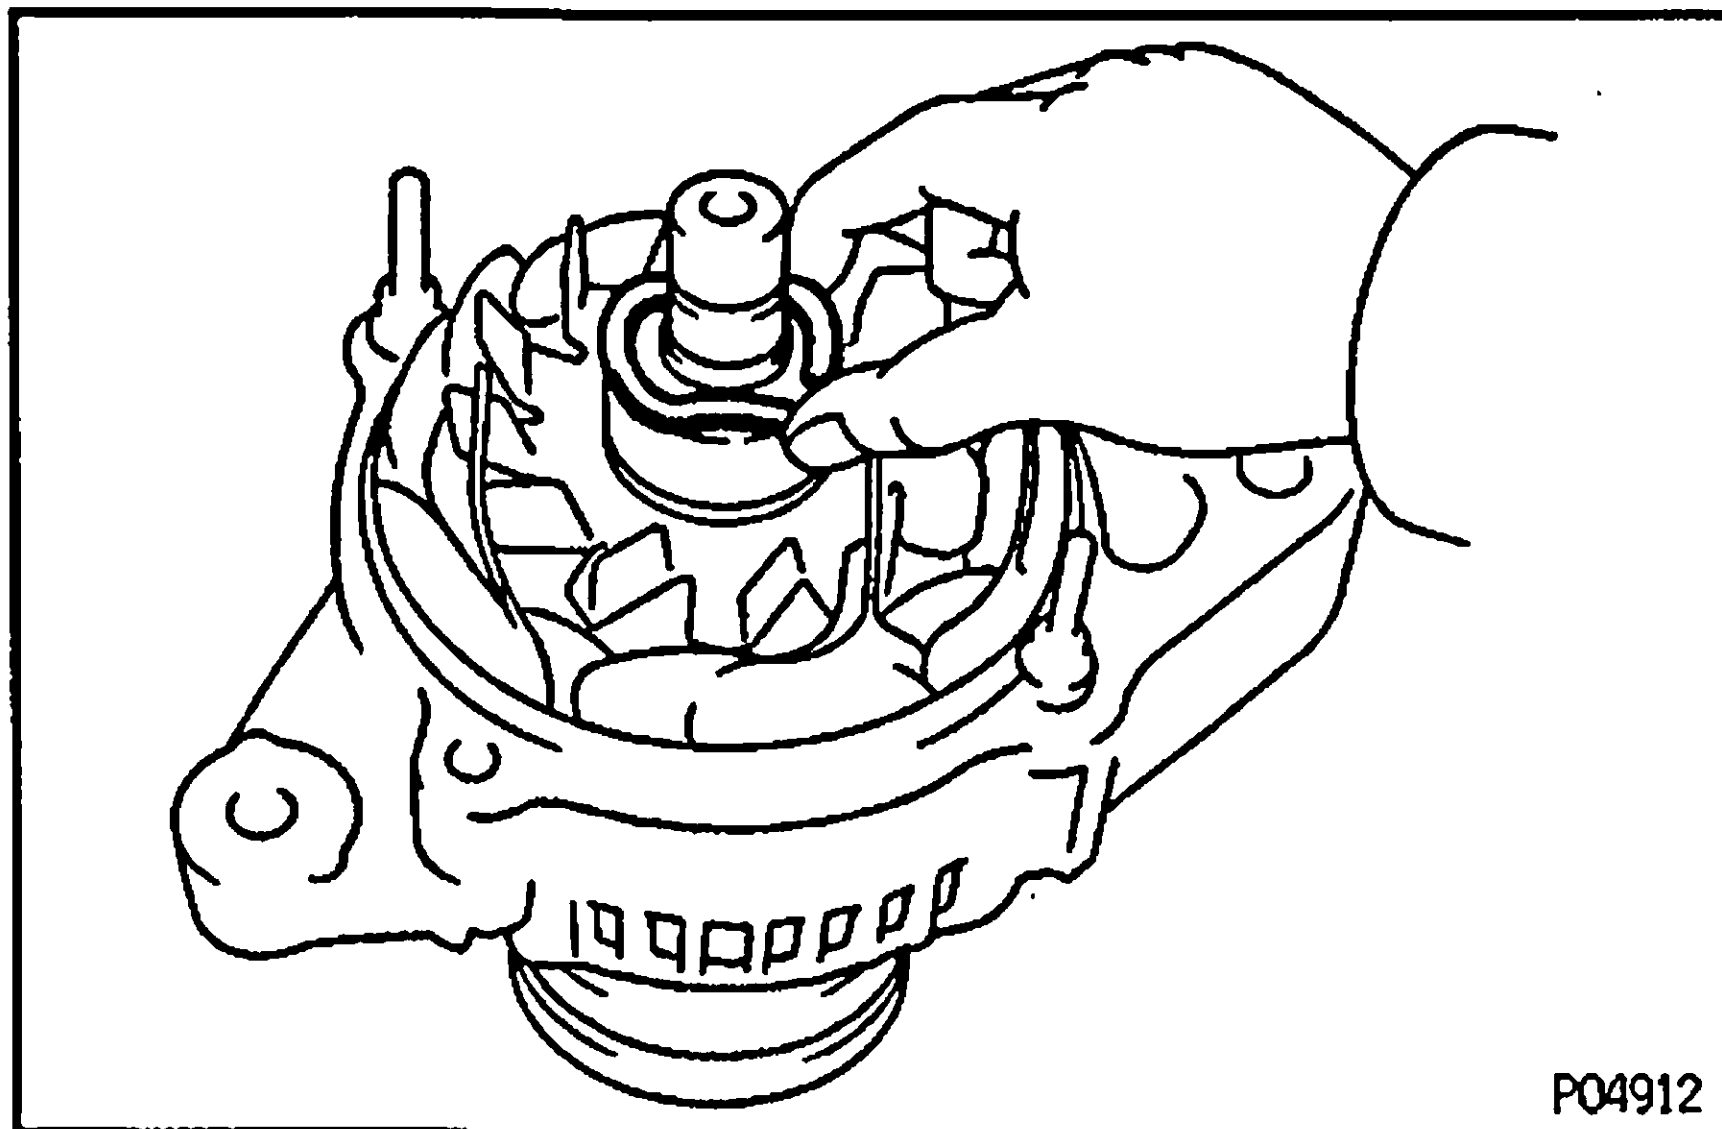

- (b) Install the rectifier end frame with the two bolts and nuts.

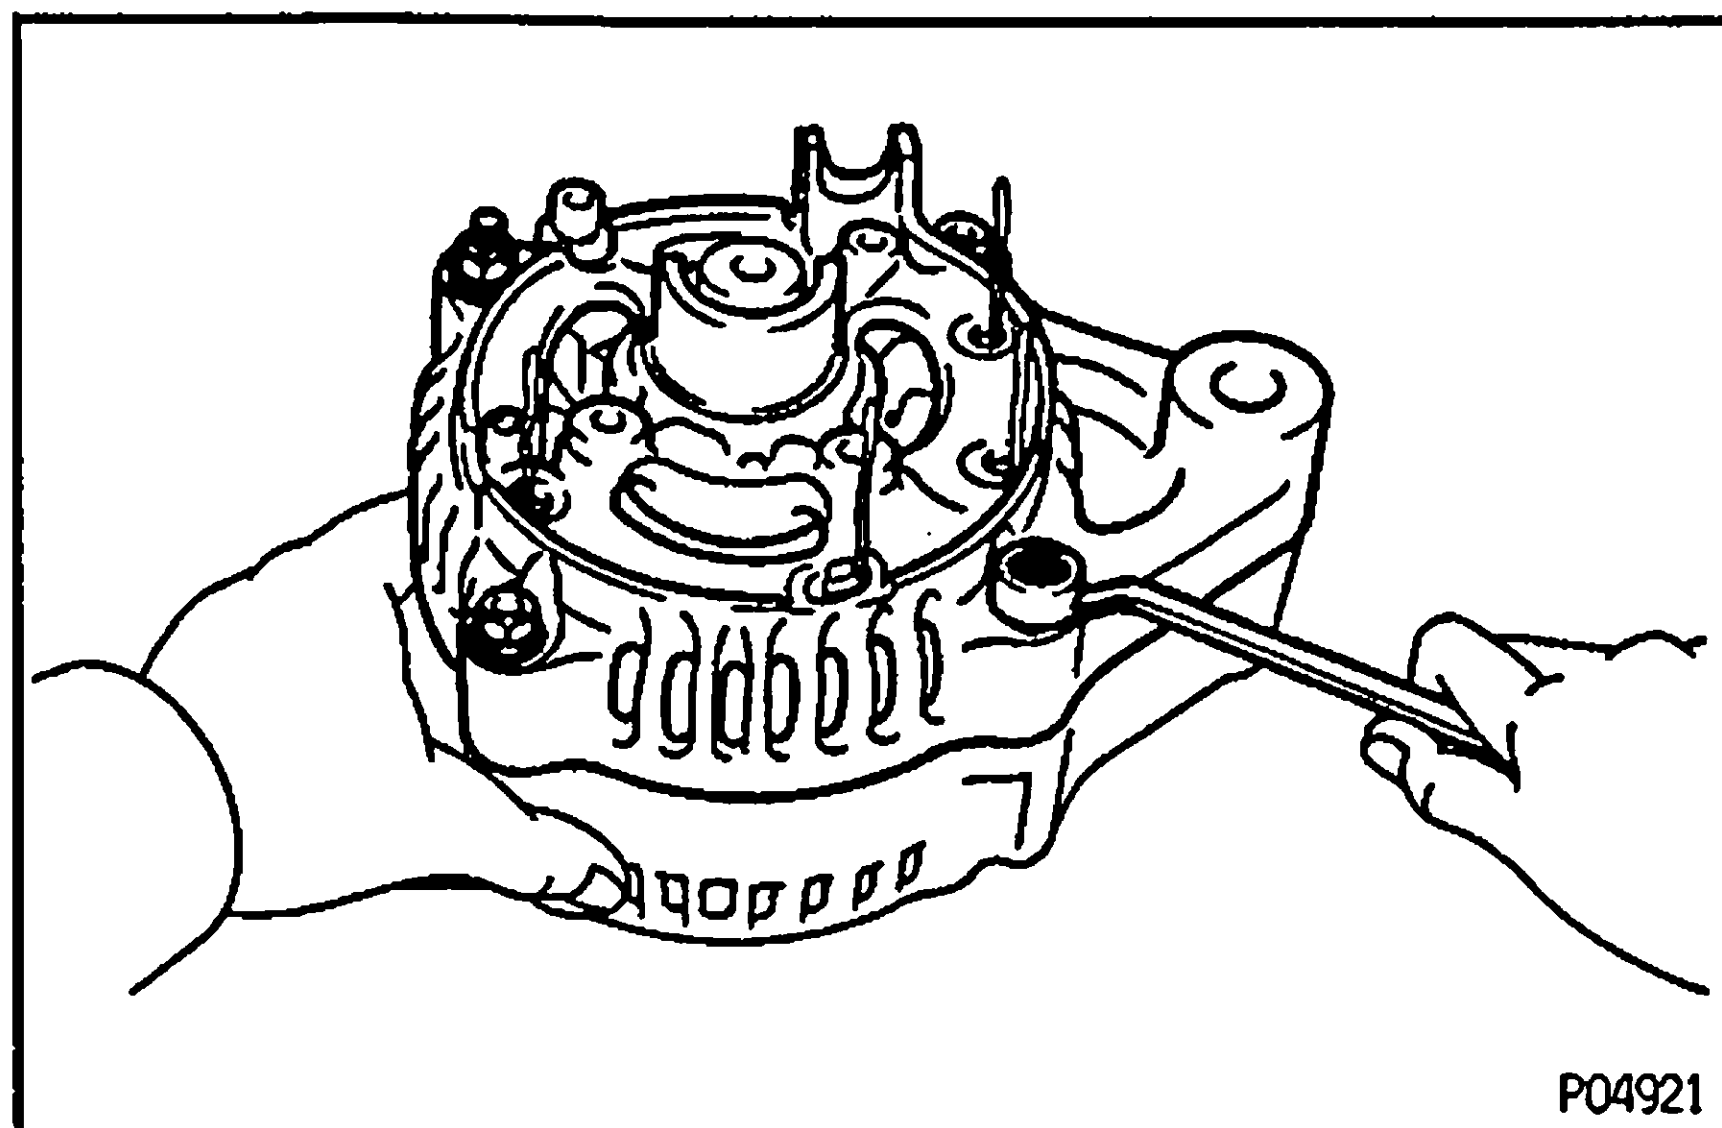
Torque: 8.8 N·m (90 kgf·cm, 78 in.-lbf)


HINT: If necessary, install the rectifier end frame with a 27 mm socket wrench and press.

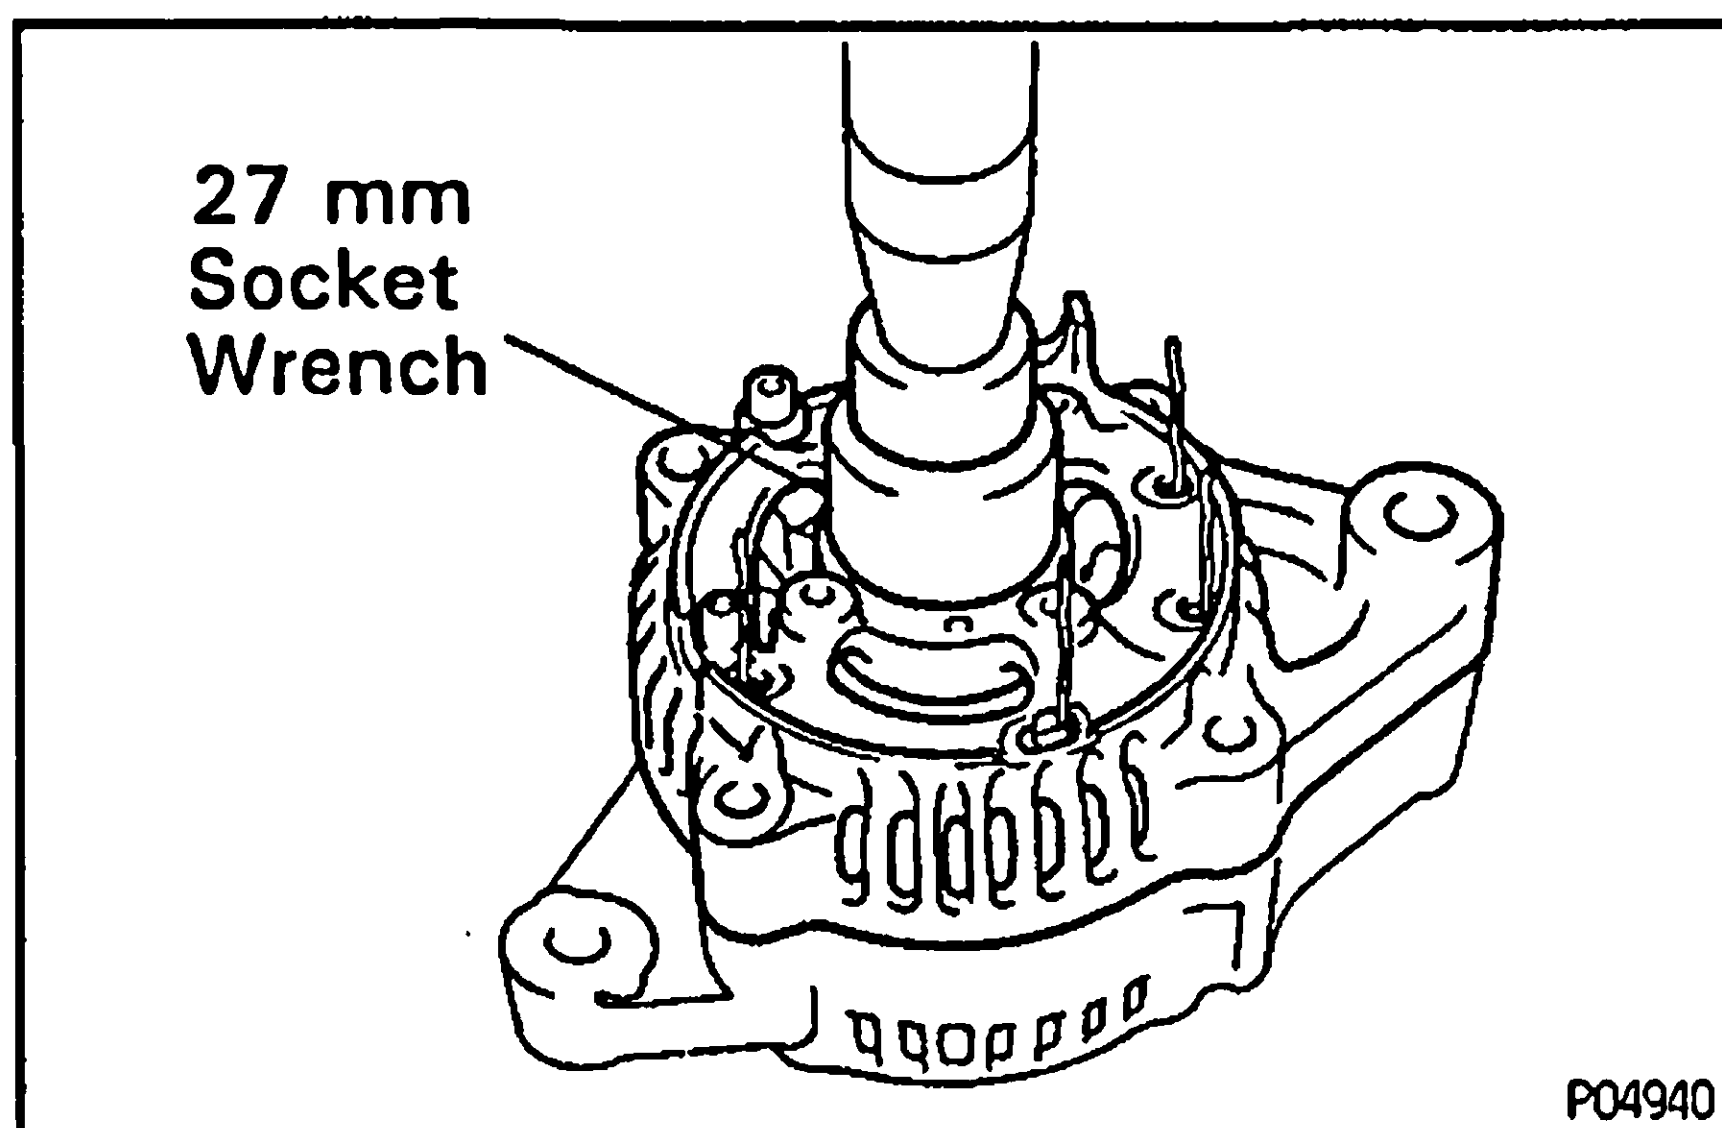**(55 A and 80 A Types)**


- (a) (80 A Type)

Place the thrust washer on the rotor.

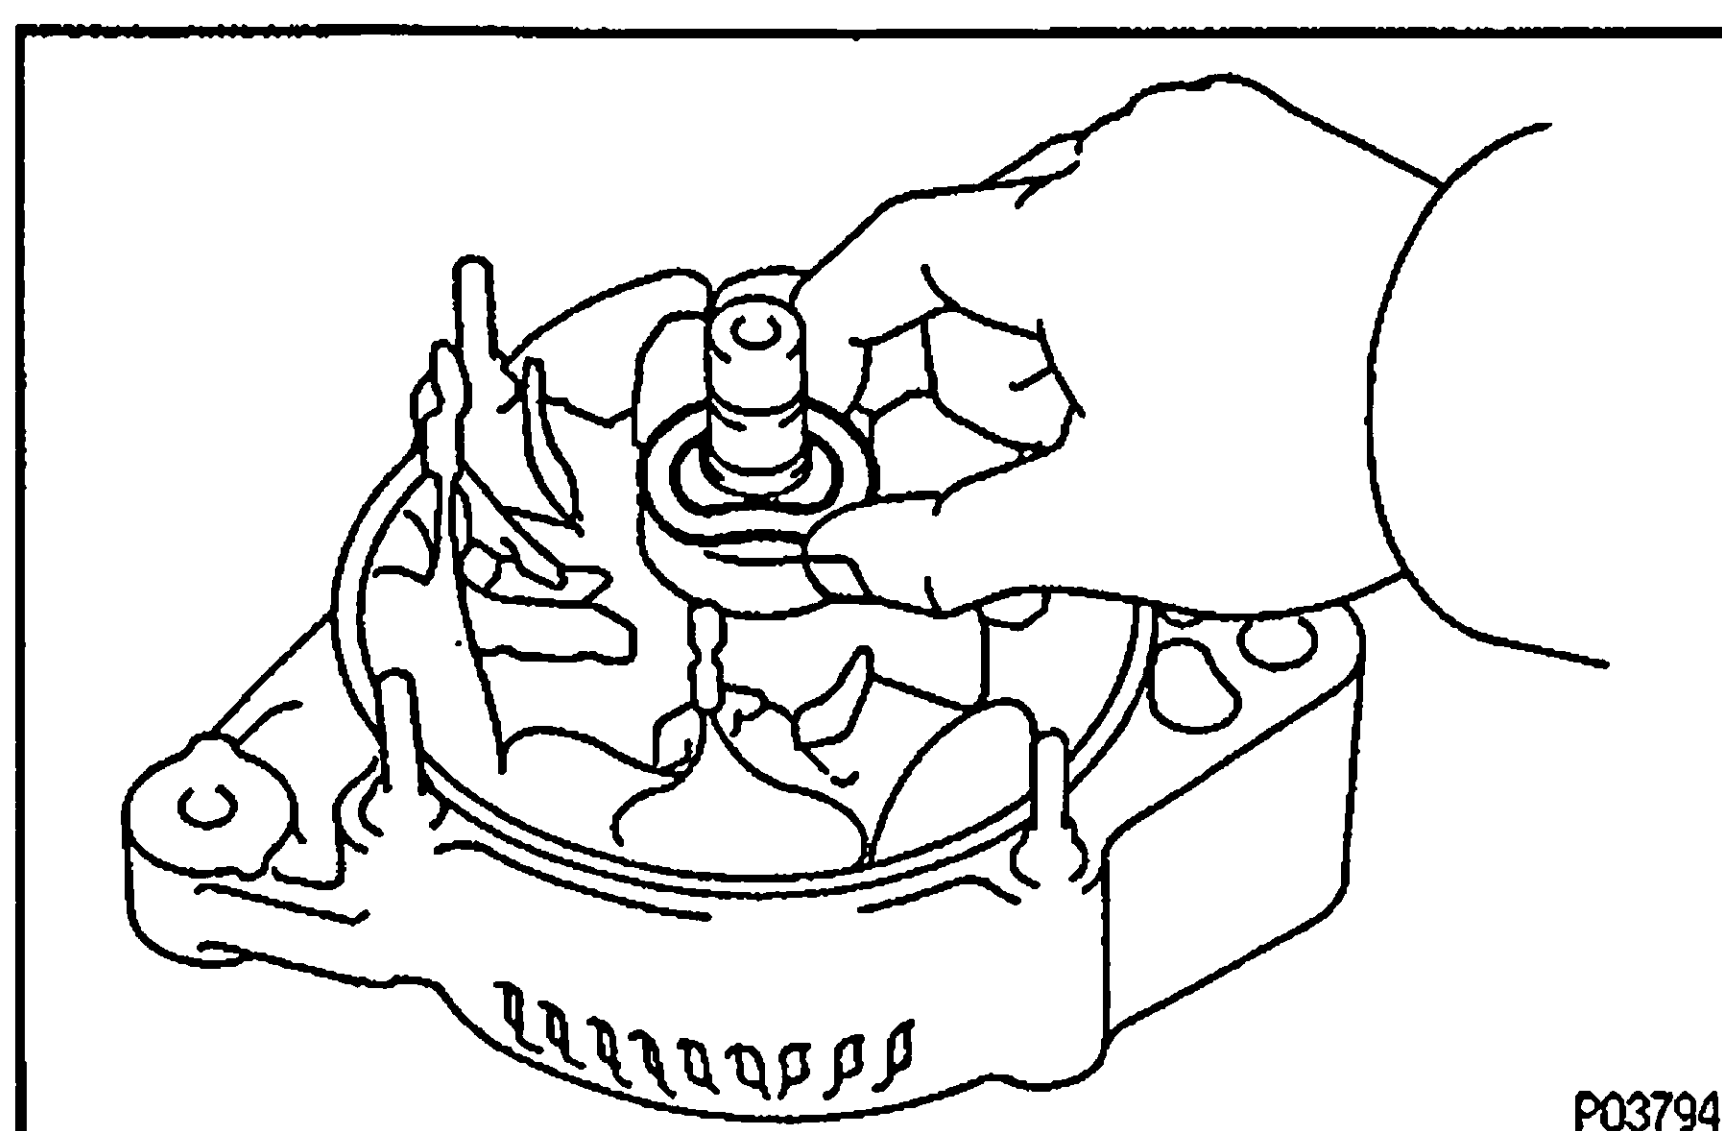

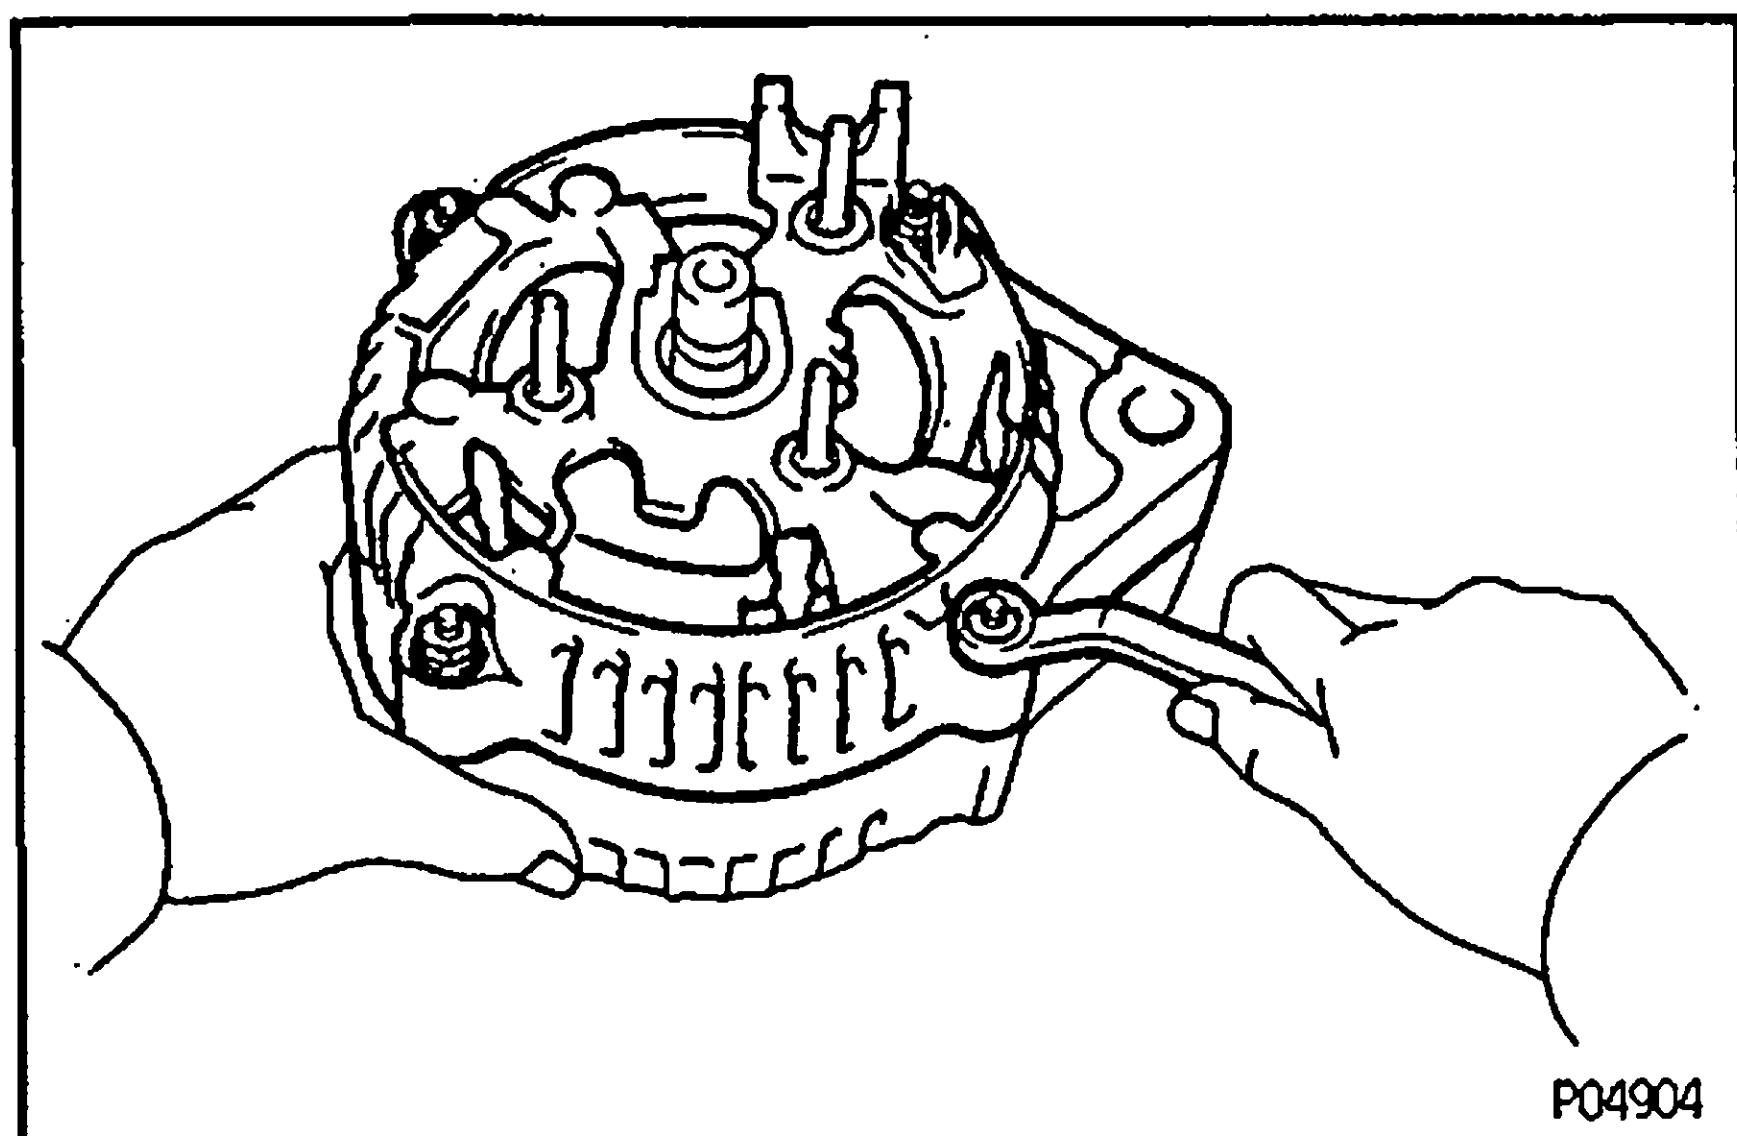


- (b) Install the rectifier end frame with the four nuts.
Torque: 8.8 N·m (90 kgf·cm, 78 in.-lbf)

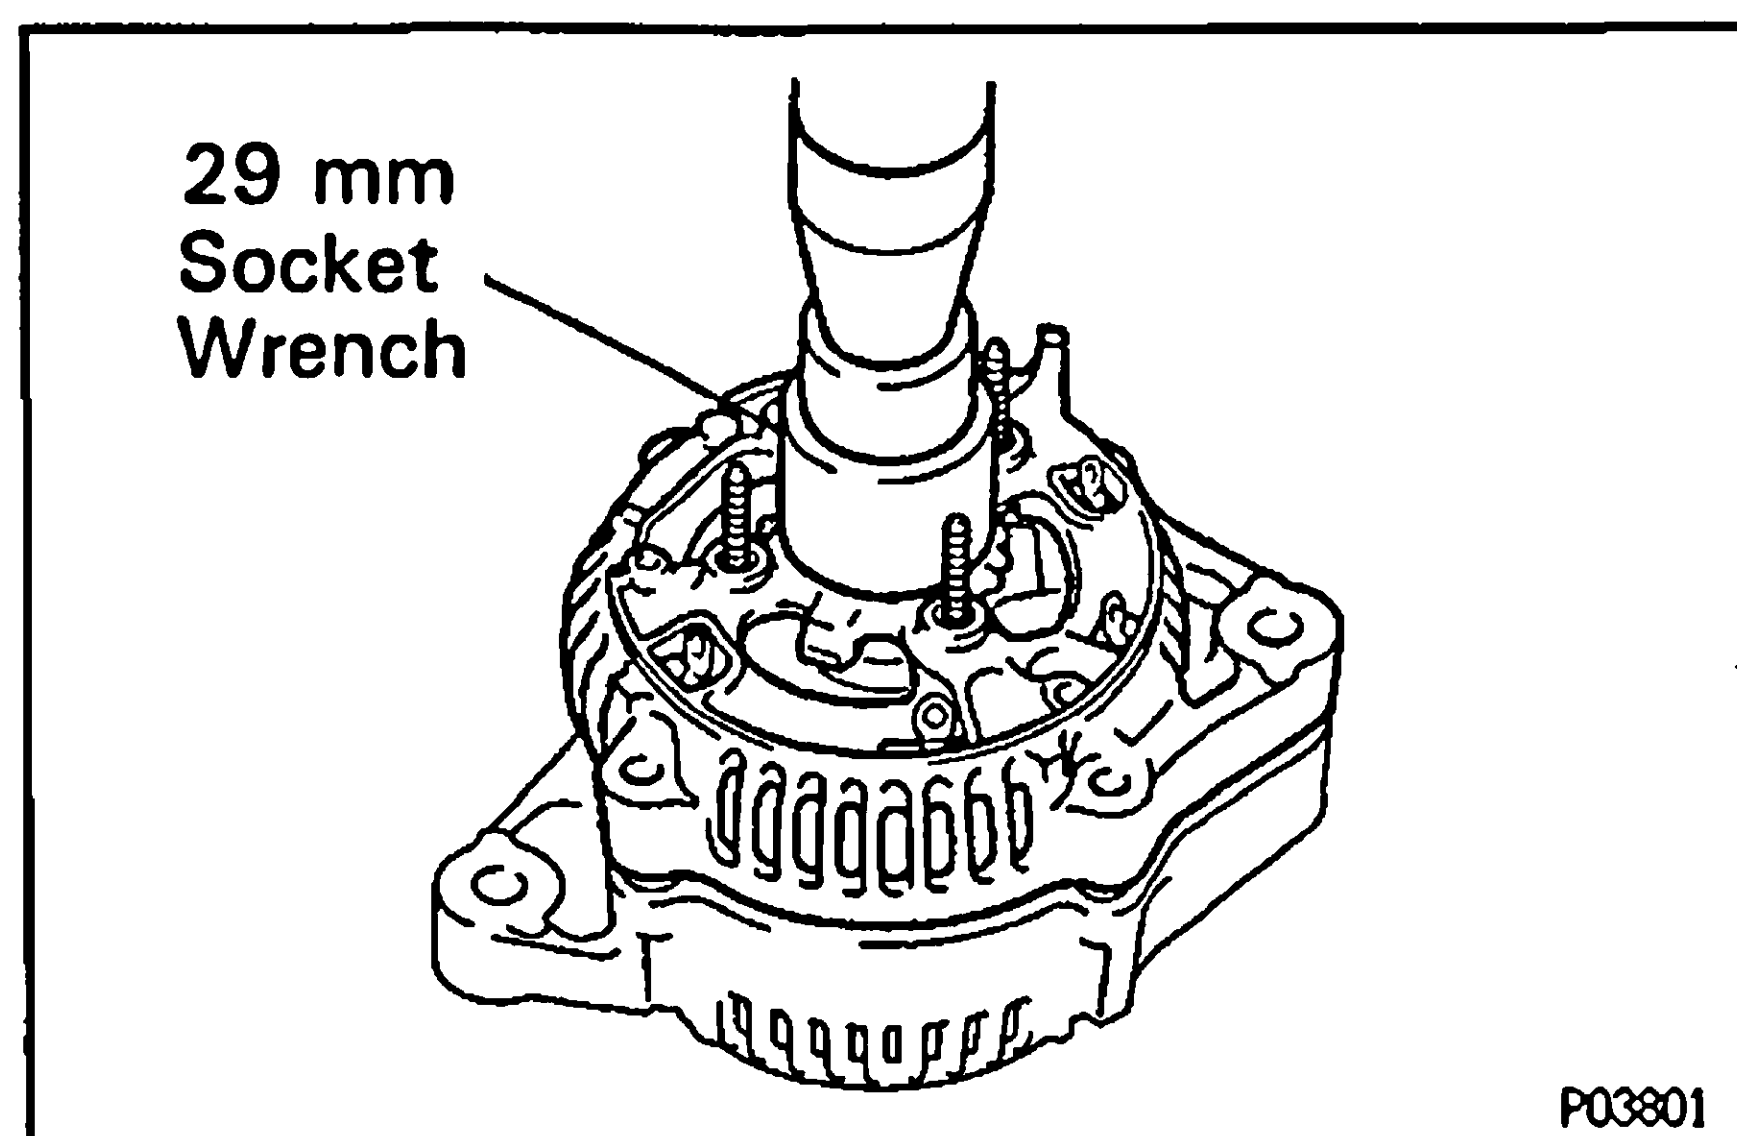


HINT: If necessary, install the rectifier end frame with a 29 mm socket wrench and press.

CH

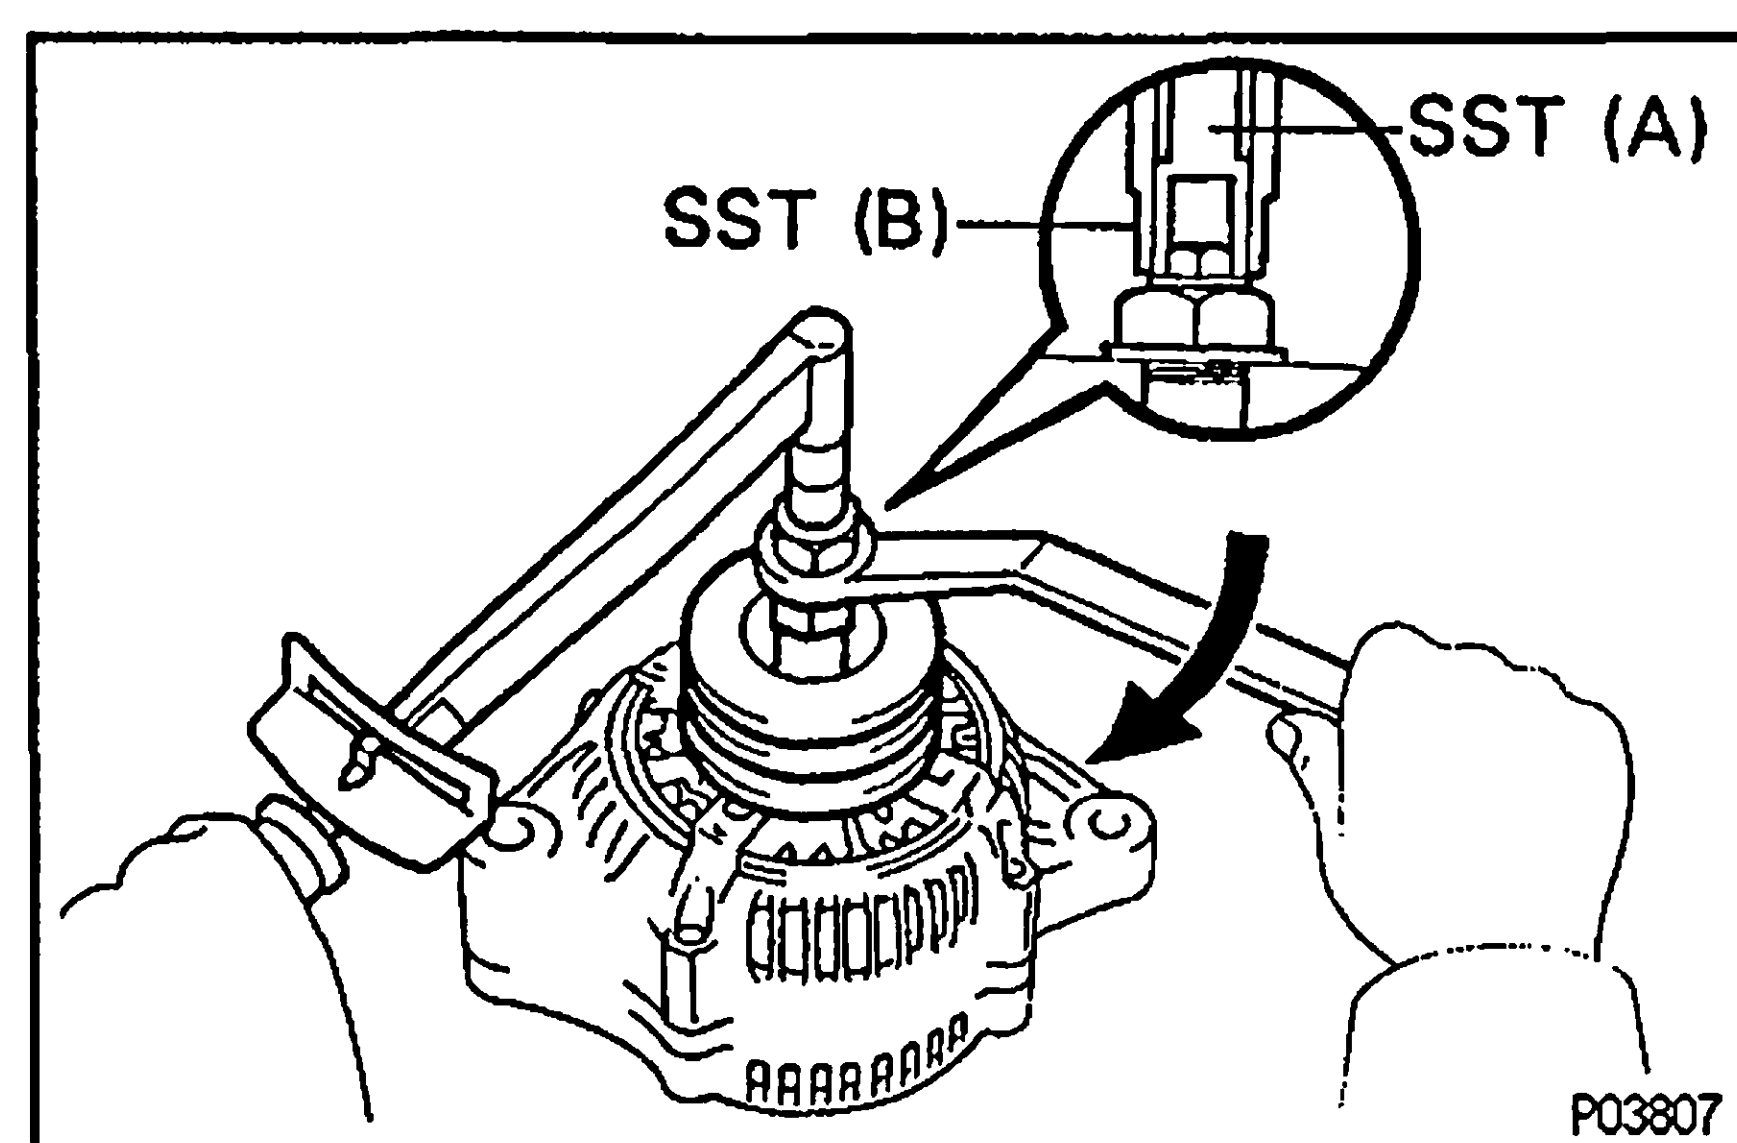


3. INSTALL PULLEY

- (a) Install the pulley to the rotor shaft by tightening the pulley nut by hand.
(b) Hold SST (A) with a torque wrench, and tighten SST (B) clockwise to the specified torque.
SST 09820-63010
Torque: 39 N·m (400 kgf·cm, 29 ft·lbf)
(c) Check that SST (A) is secured to the pulley shaft.

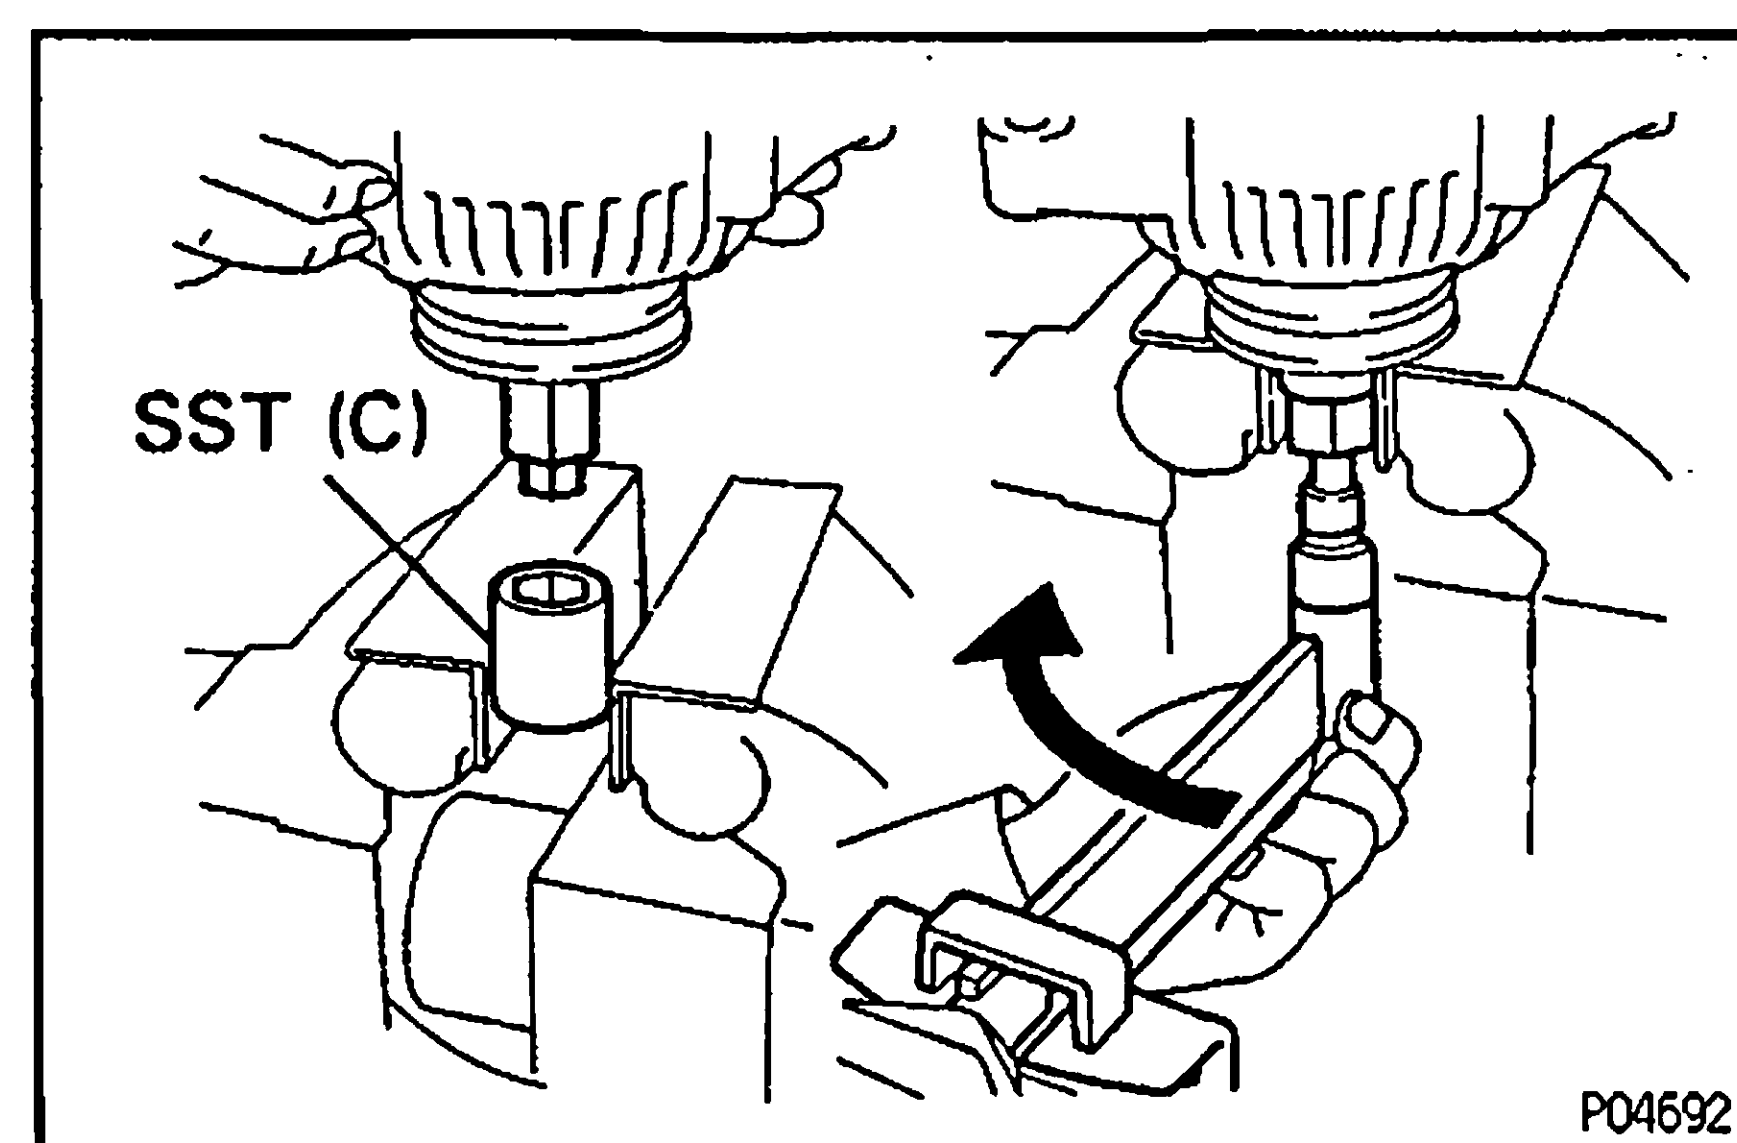


- (d) As shown in the illustration, mount SST (C) in a vise, and install the alternator to SST (C).
(e) To torque the pulley nut, turn SST (A) in the direction shown in the illustration.
Torque: 110 N·m (1,125 kgf·cm, 81 ft·lbf)
(f) Remove the alternator from SST (C).
(g) Turn SST (B) and remove SST (A and B).

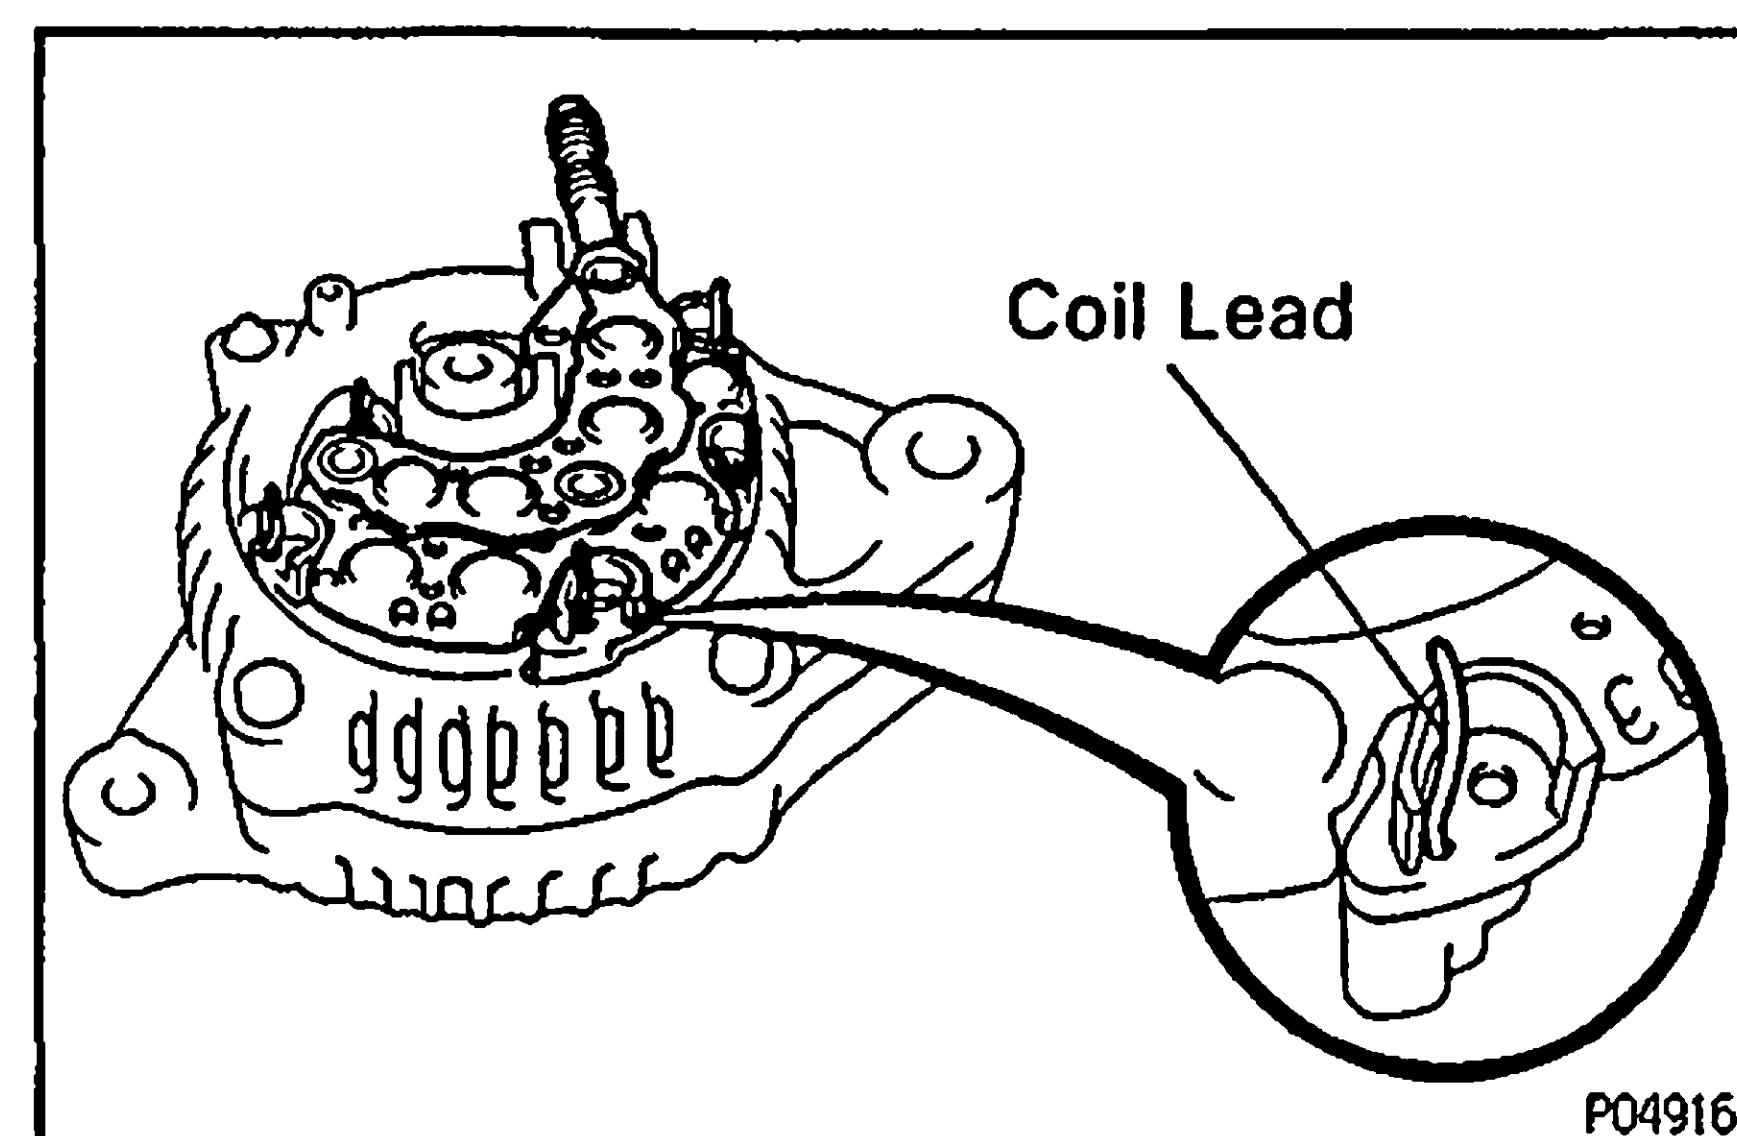


4. INSTALL RECTIFIER HOLDER (50 A Type)


- (a) Insert the stator coil lead through the hole in the rectifier holder, as shown in the illustration.

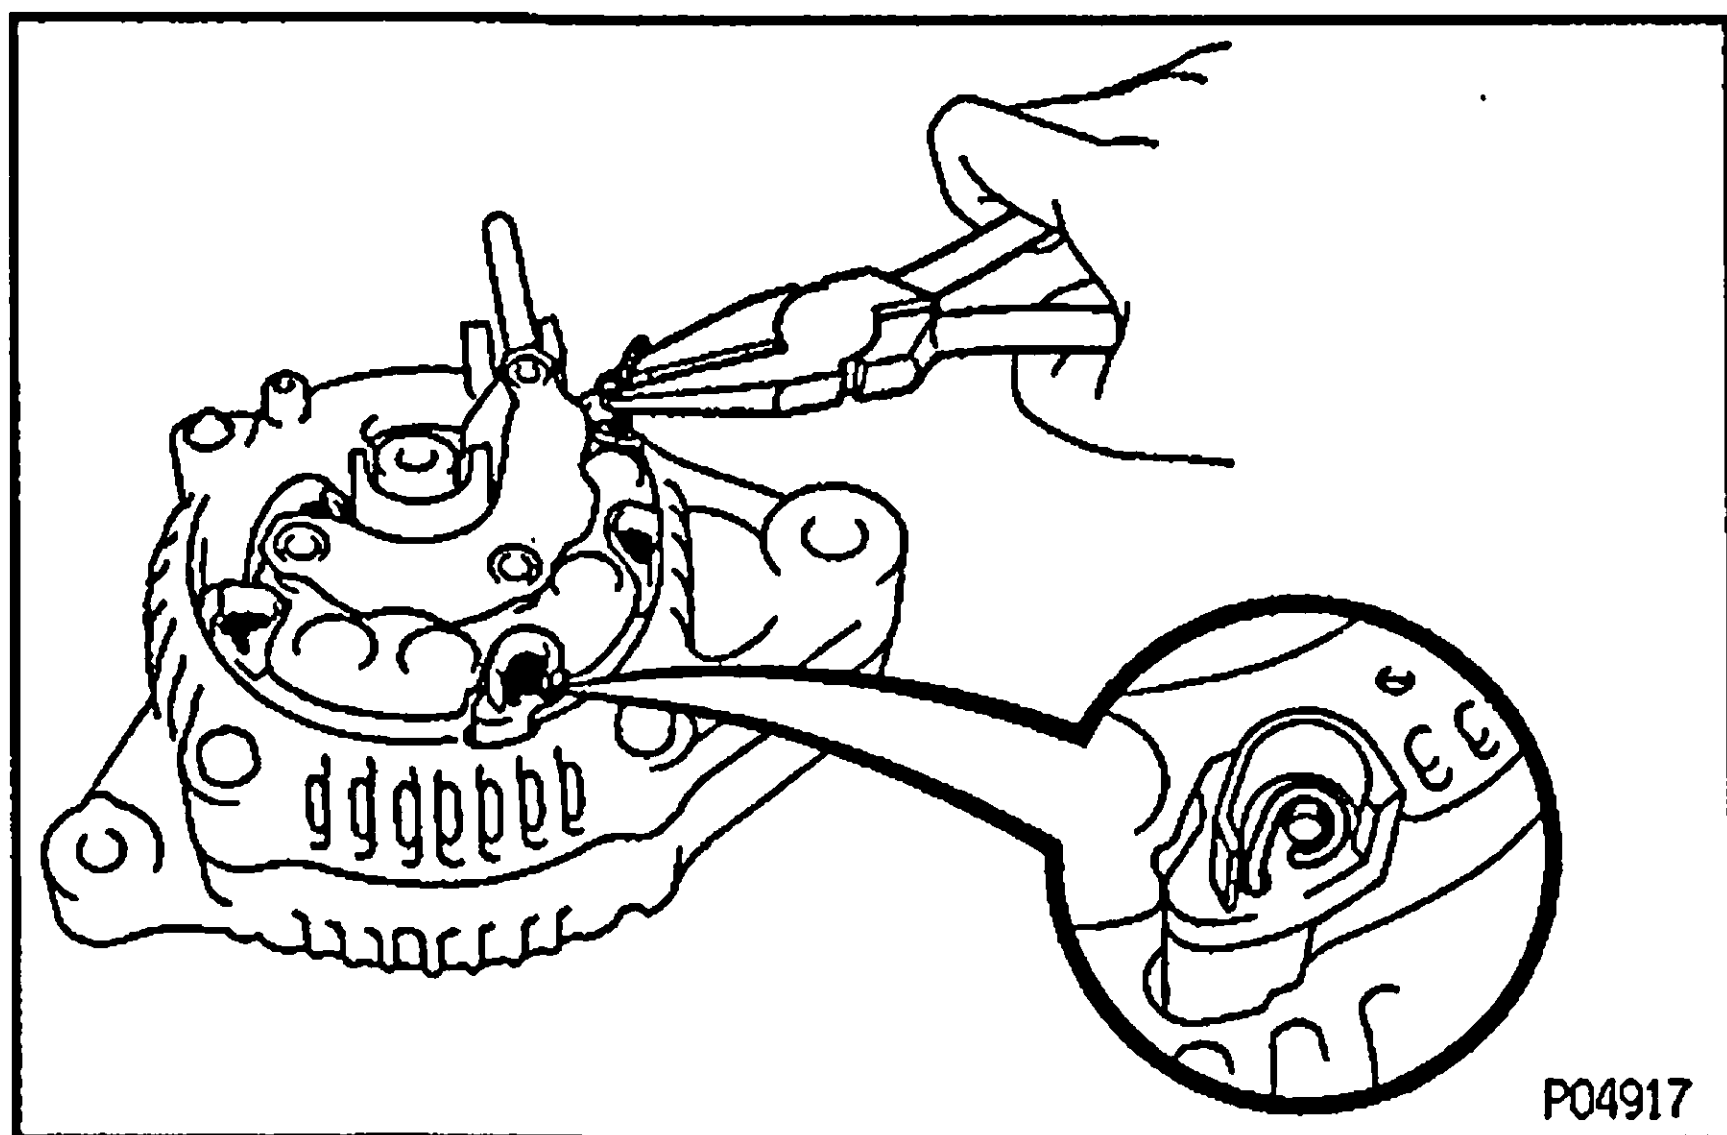

- (b) Using needle—nose pliers, bend the lead wires of the stator coil as shown.

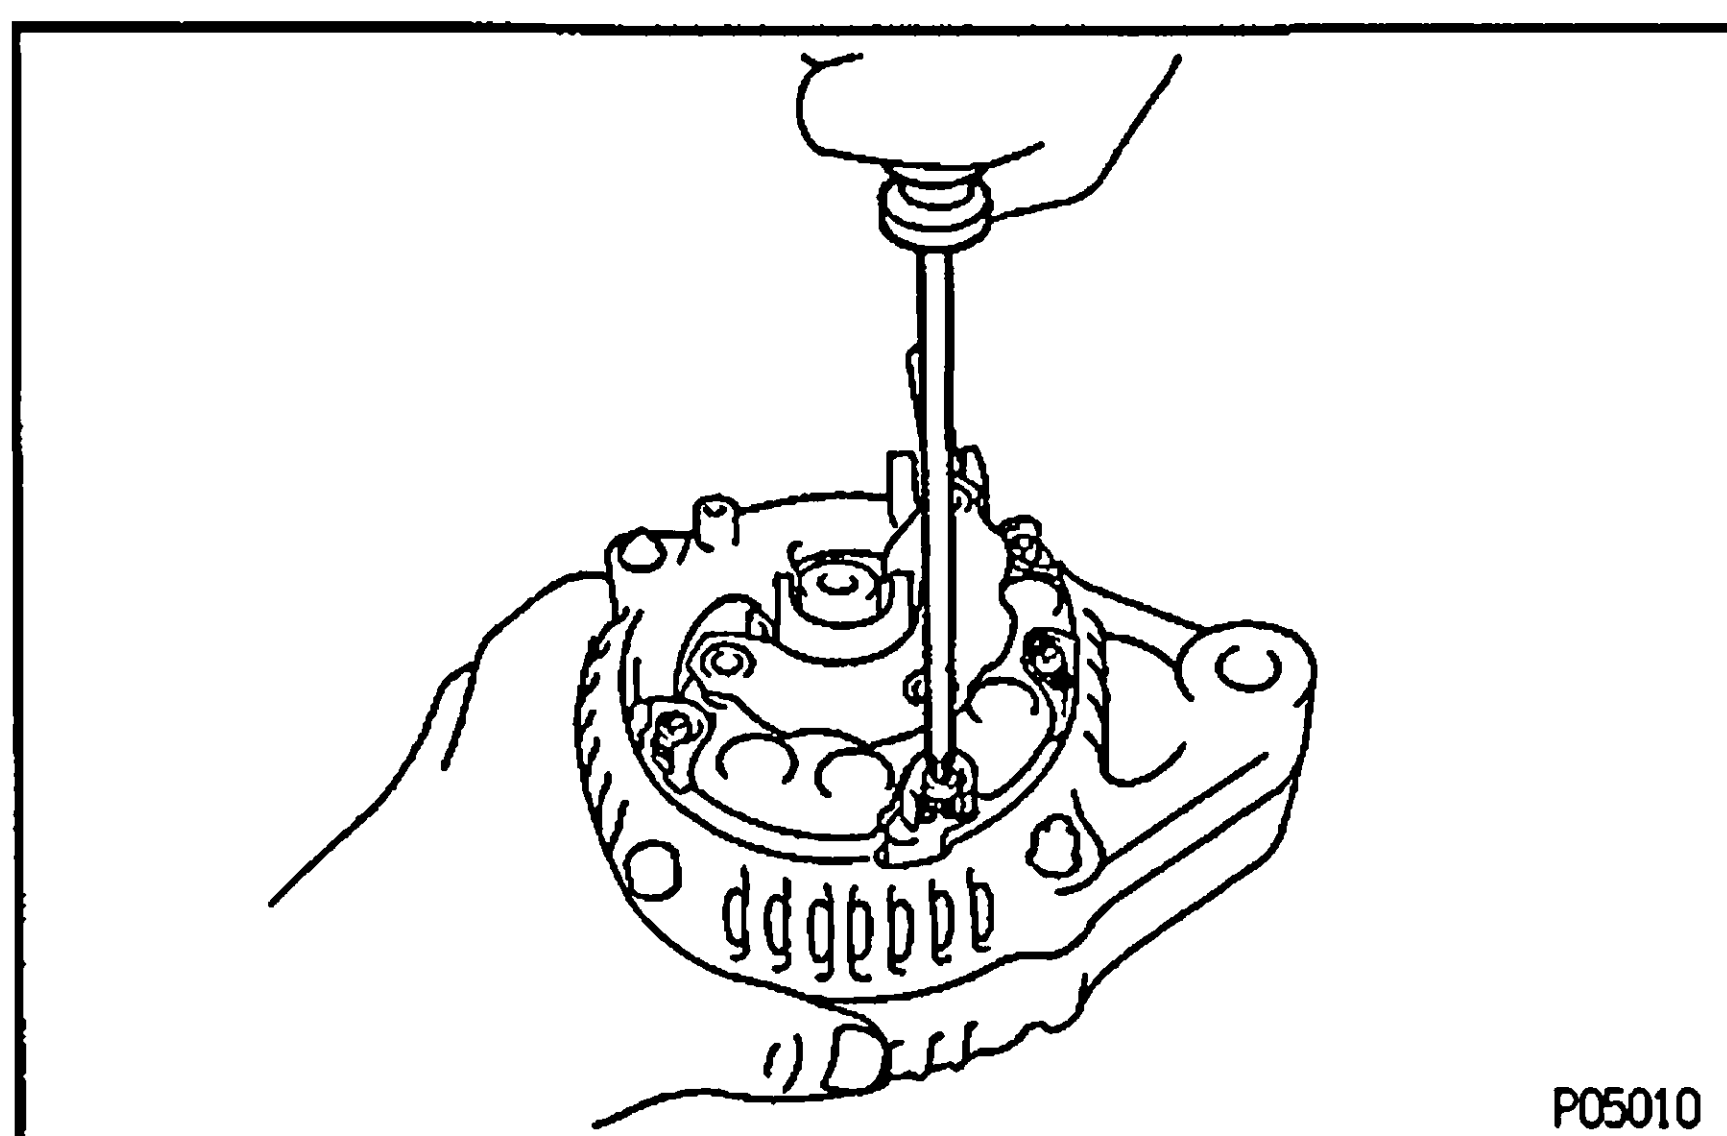


- (c) Install the four screws.
Torque: 2.9 N·m (30 kgf·cm, 26 in·lbf)

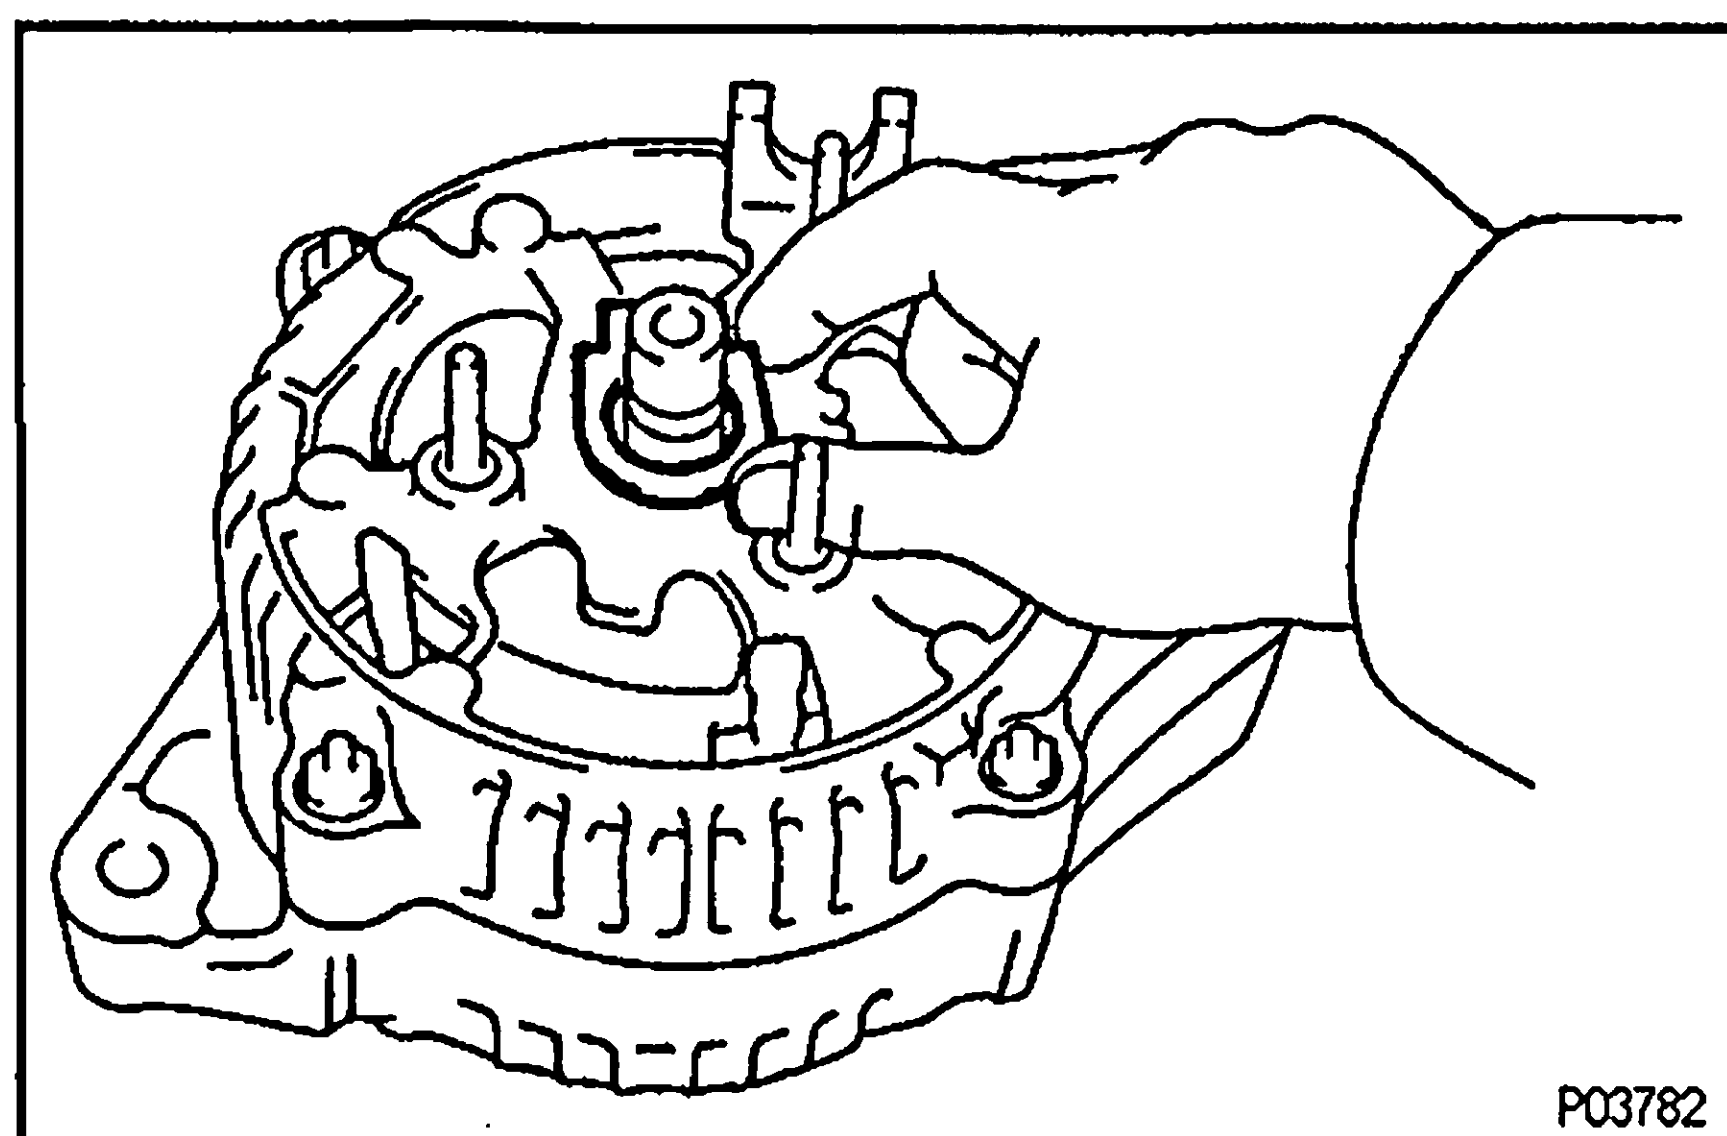


(55 A and 80 A Types)


- (a) (80 A Type)
Place the seal plate on the rectifier end frame.

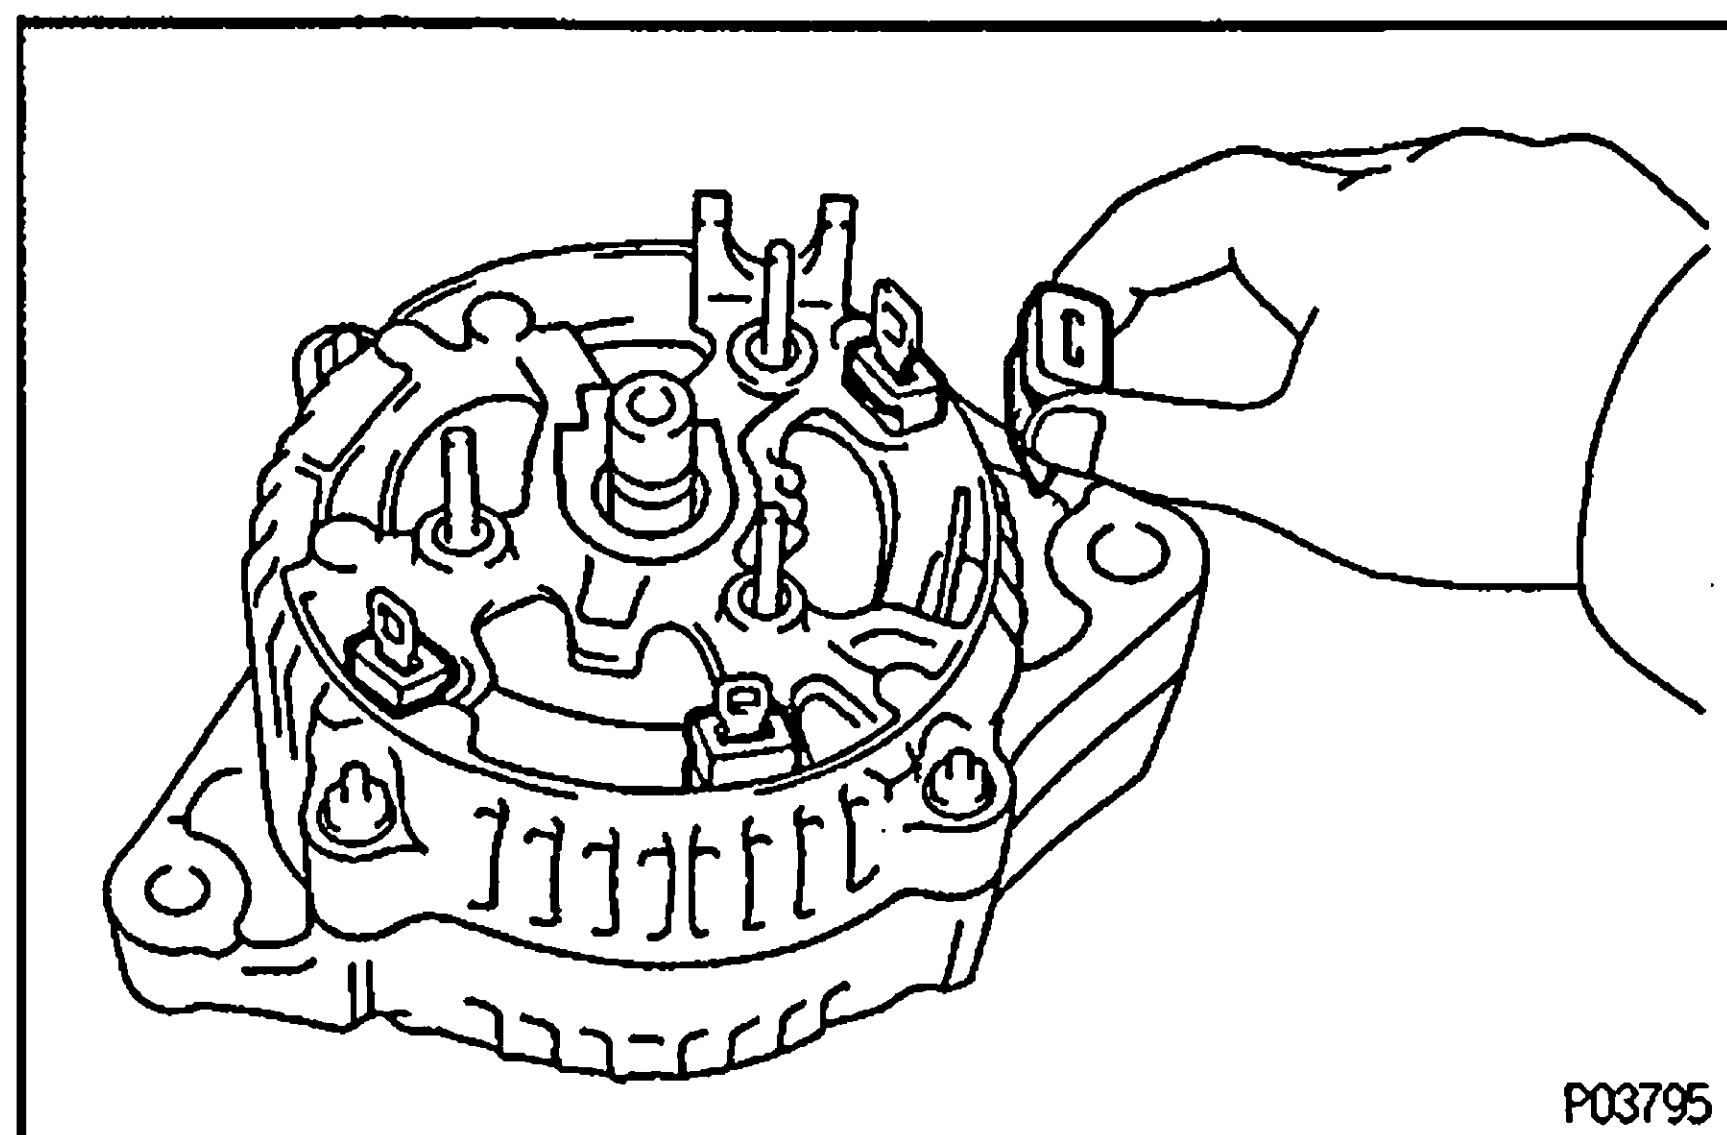

- (b) Install the four rubber insulators on the lead wires.

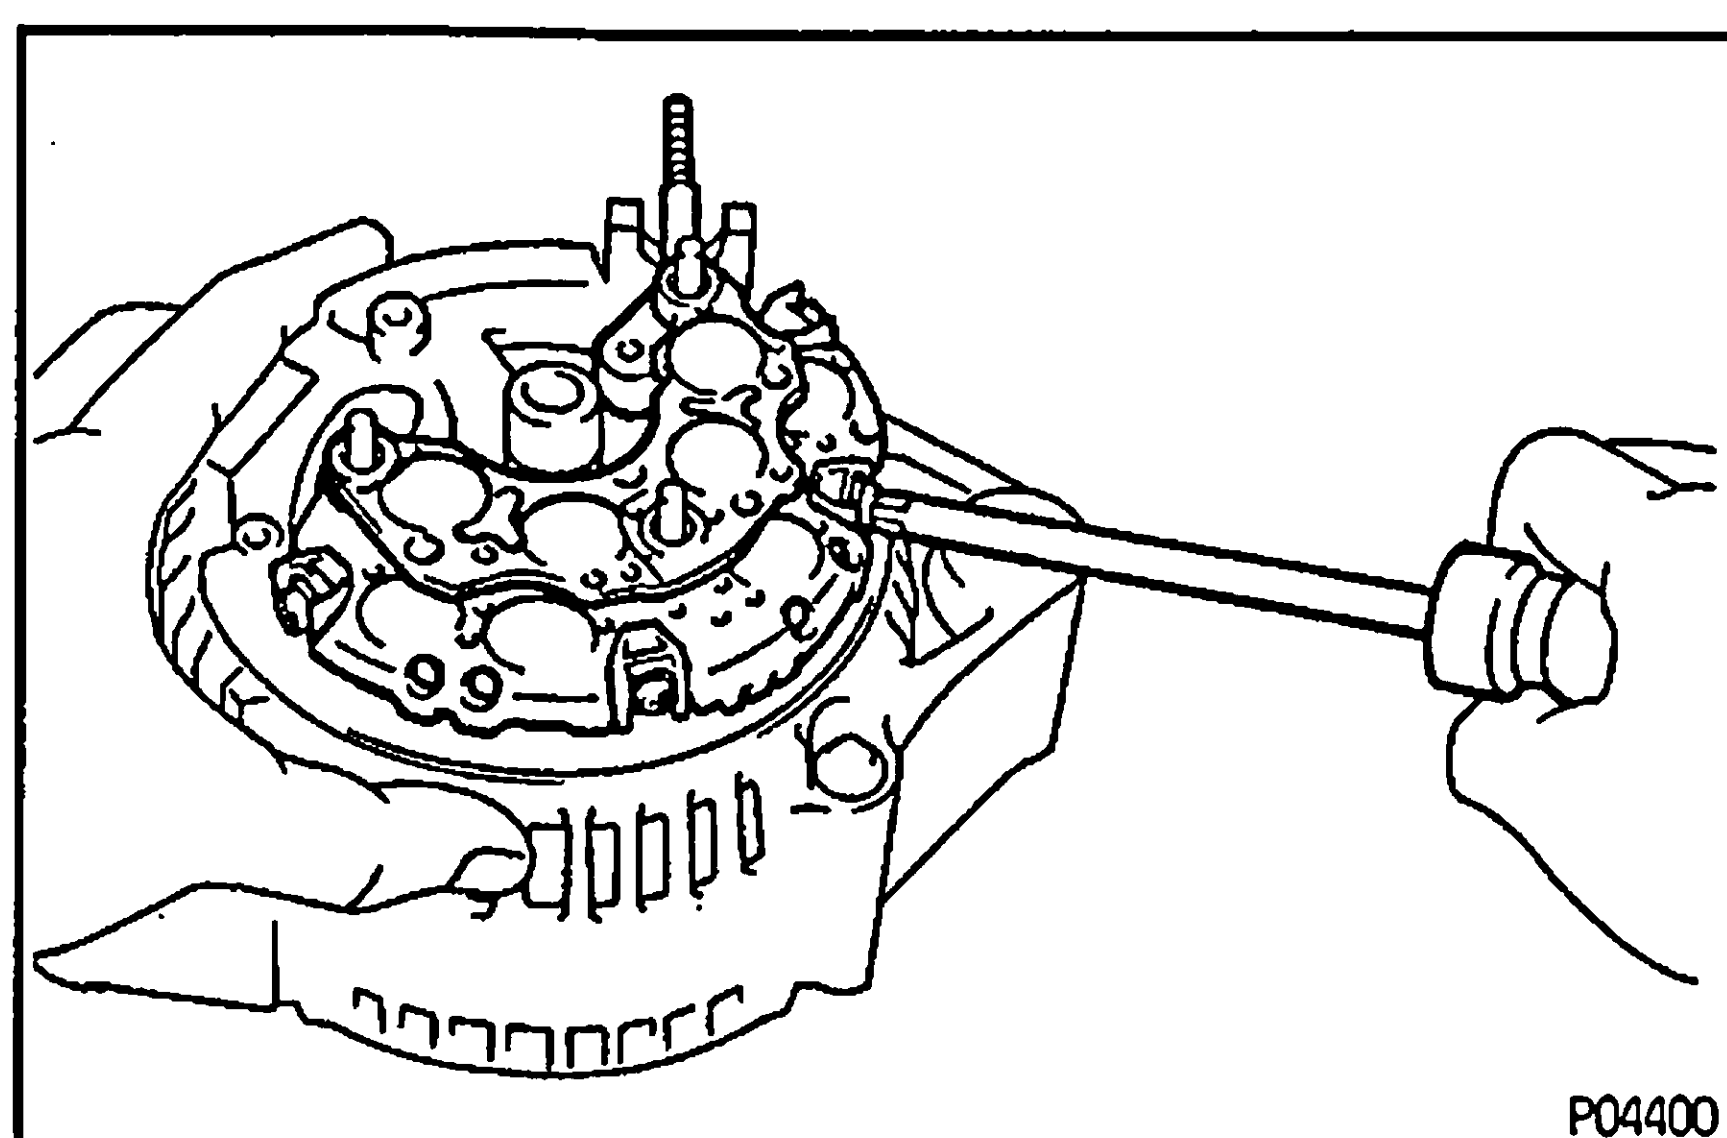


- (c) Install the rectifier holder with the four screws.
Torque: 2.9 N·m (30 kgf·cm, 26 in·lbf)

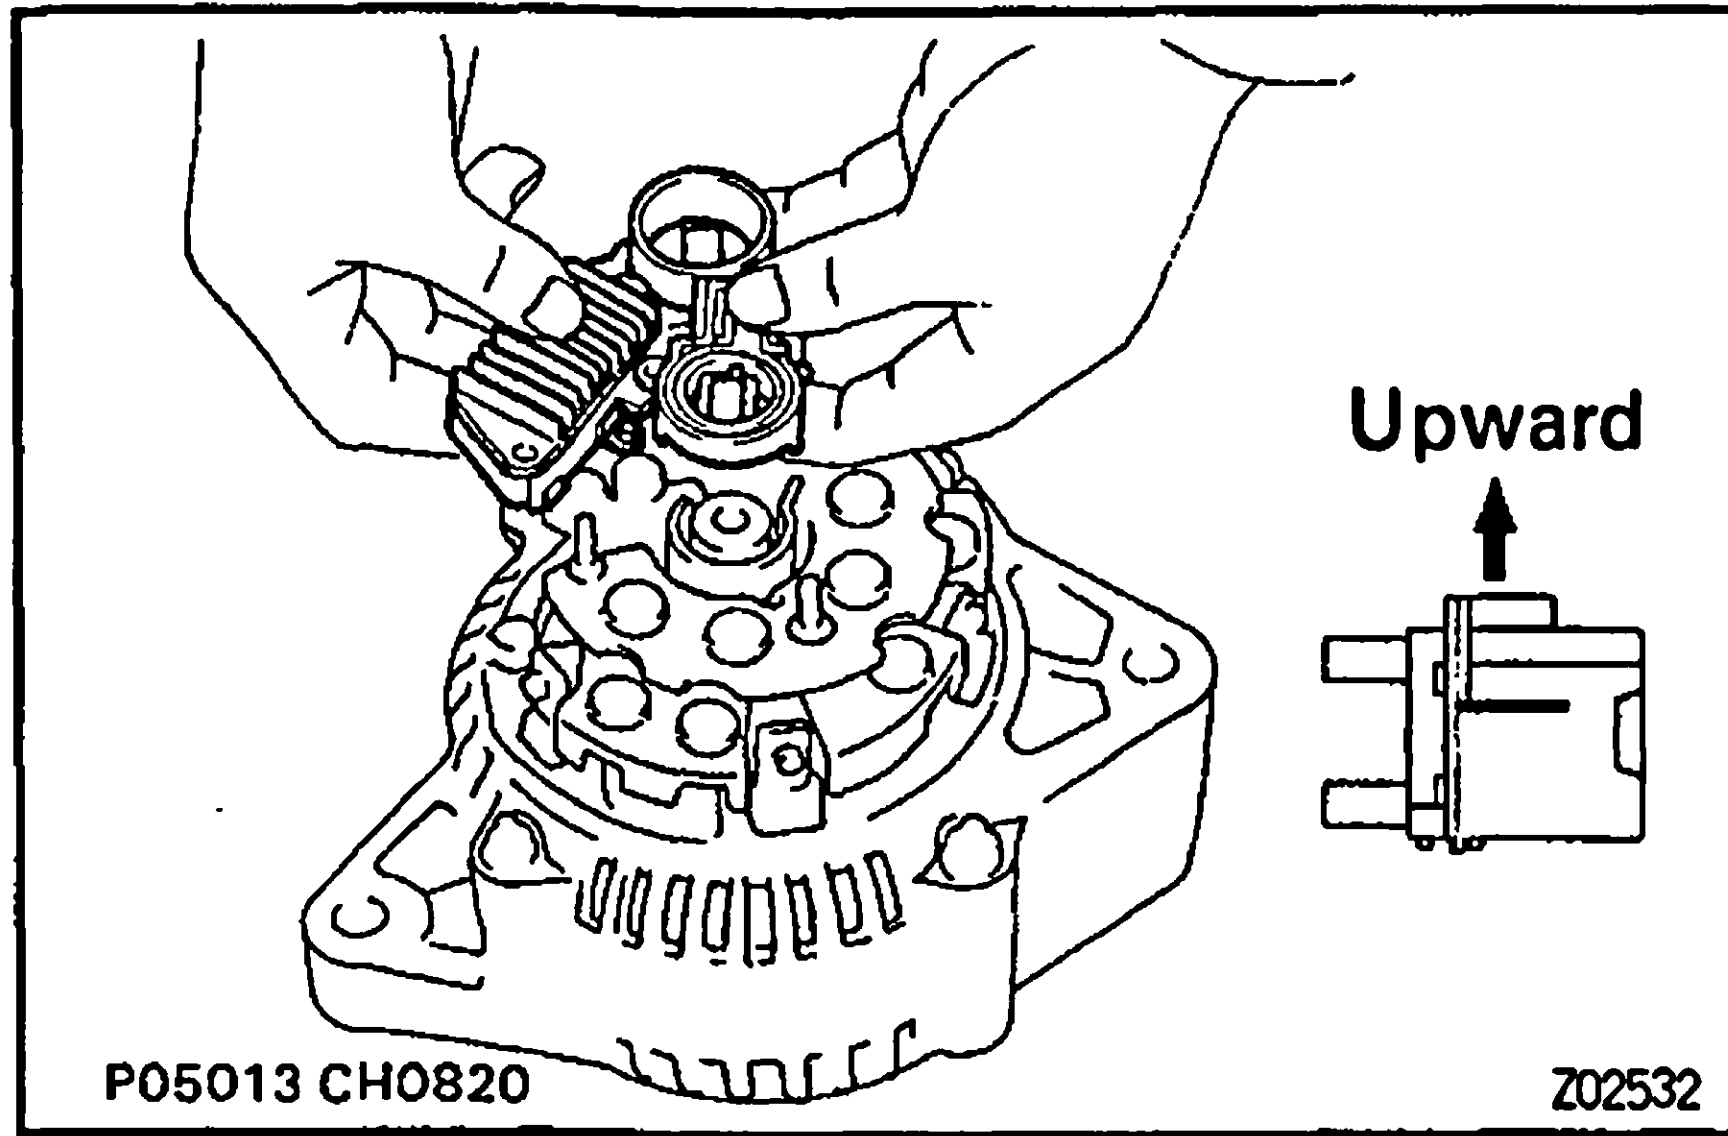


5. INSTALL IC REGULATOR AND BRUSH HOLDER (50 A and 55 A Types)

- (a) Install the brush holder cover to the brush holder.
NOTICE: Be careful of the holder installation direction.
- (b) Place the IC regulator together with the brush holder horizontally on the rectifier end frame.

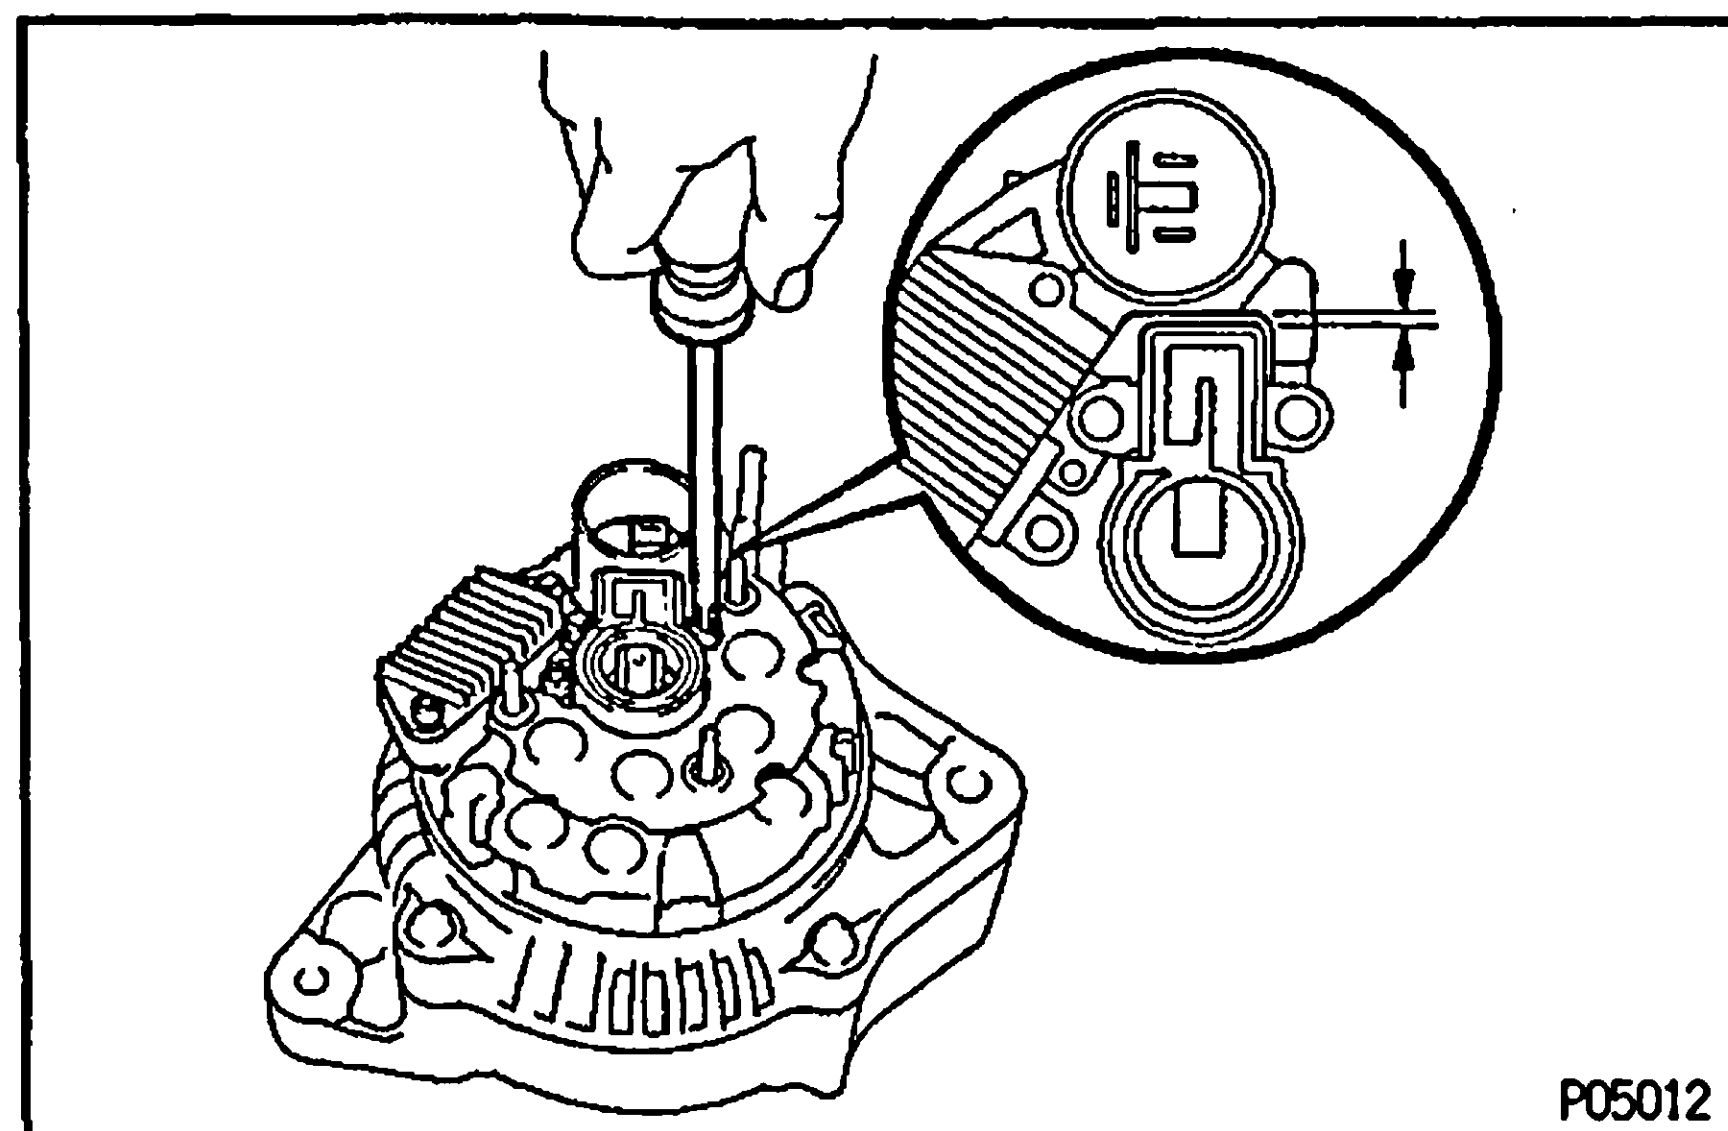


- (c) Install the five screws until there is a clearance of at least 1 mm (0.04 in.) between the brush holder and connector.

CH

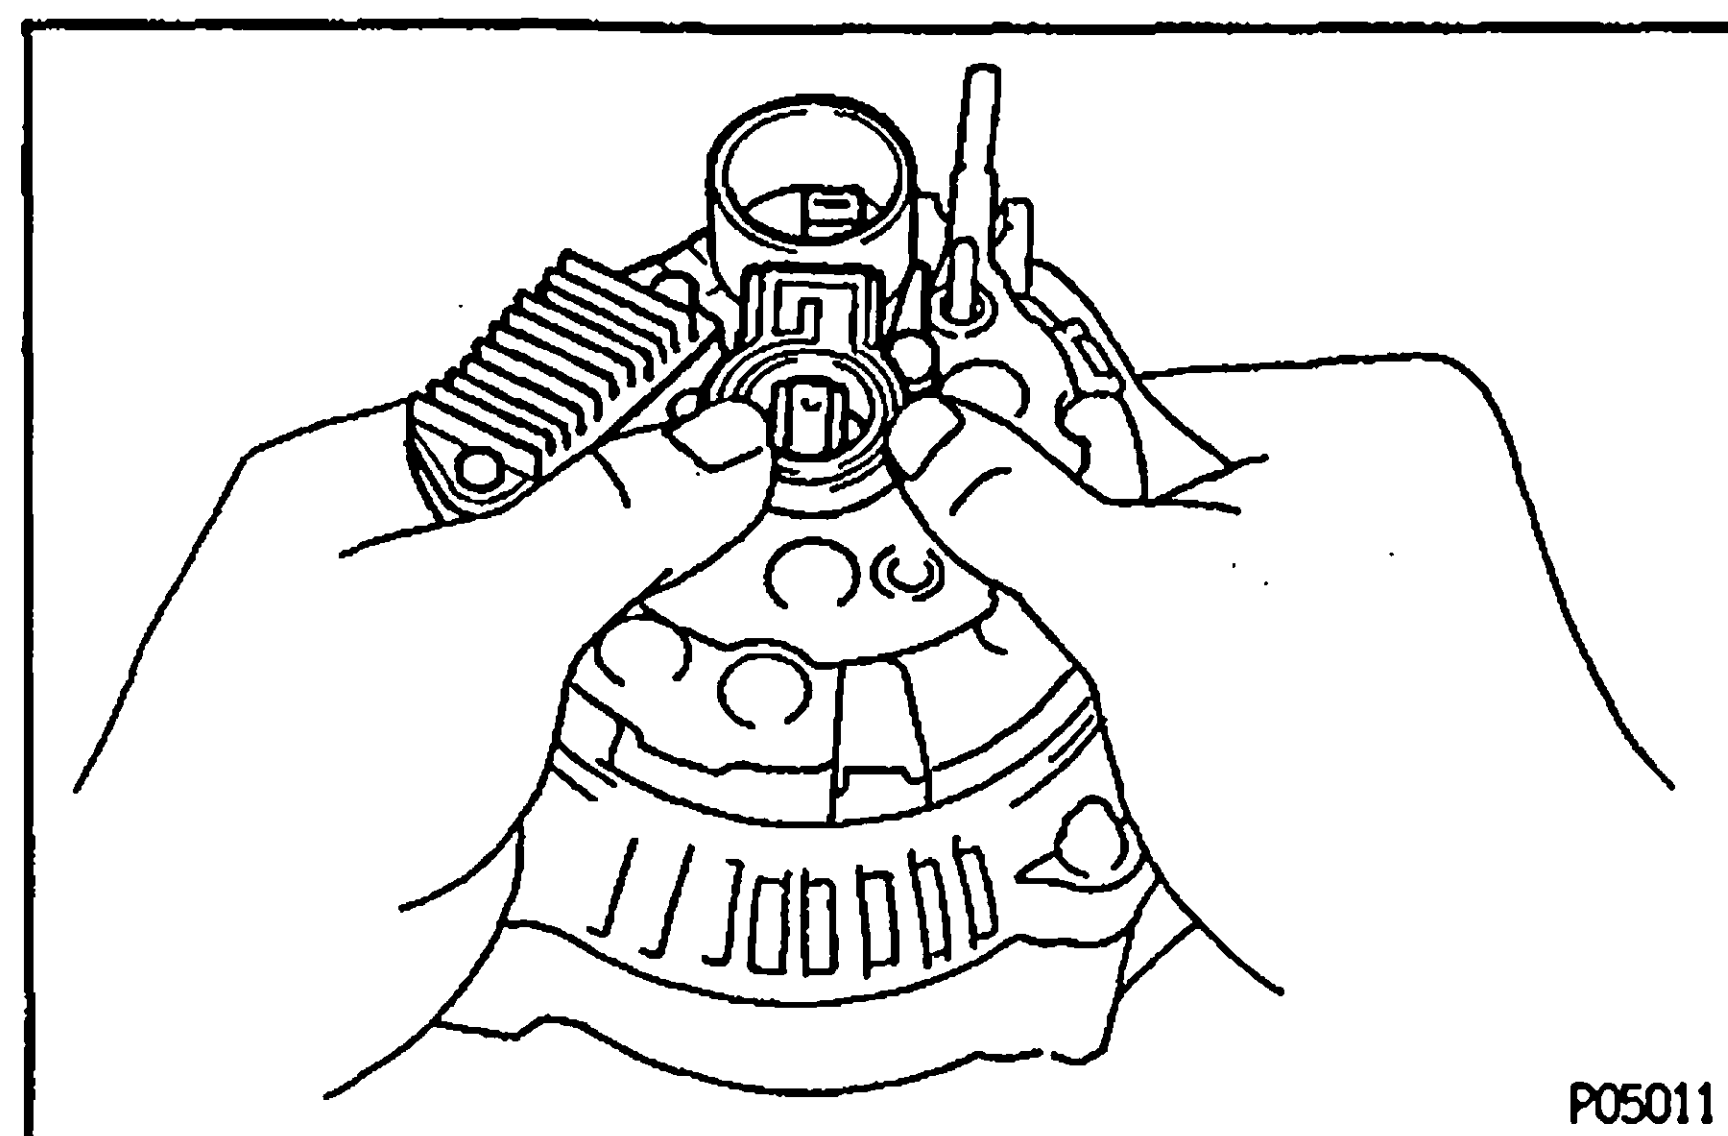


- (d) Fit the brush holder cover.





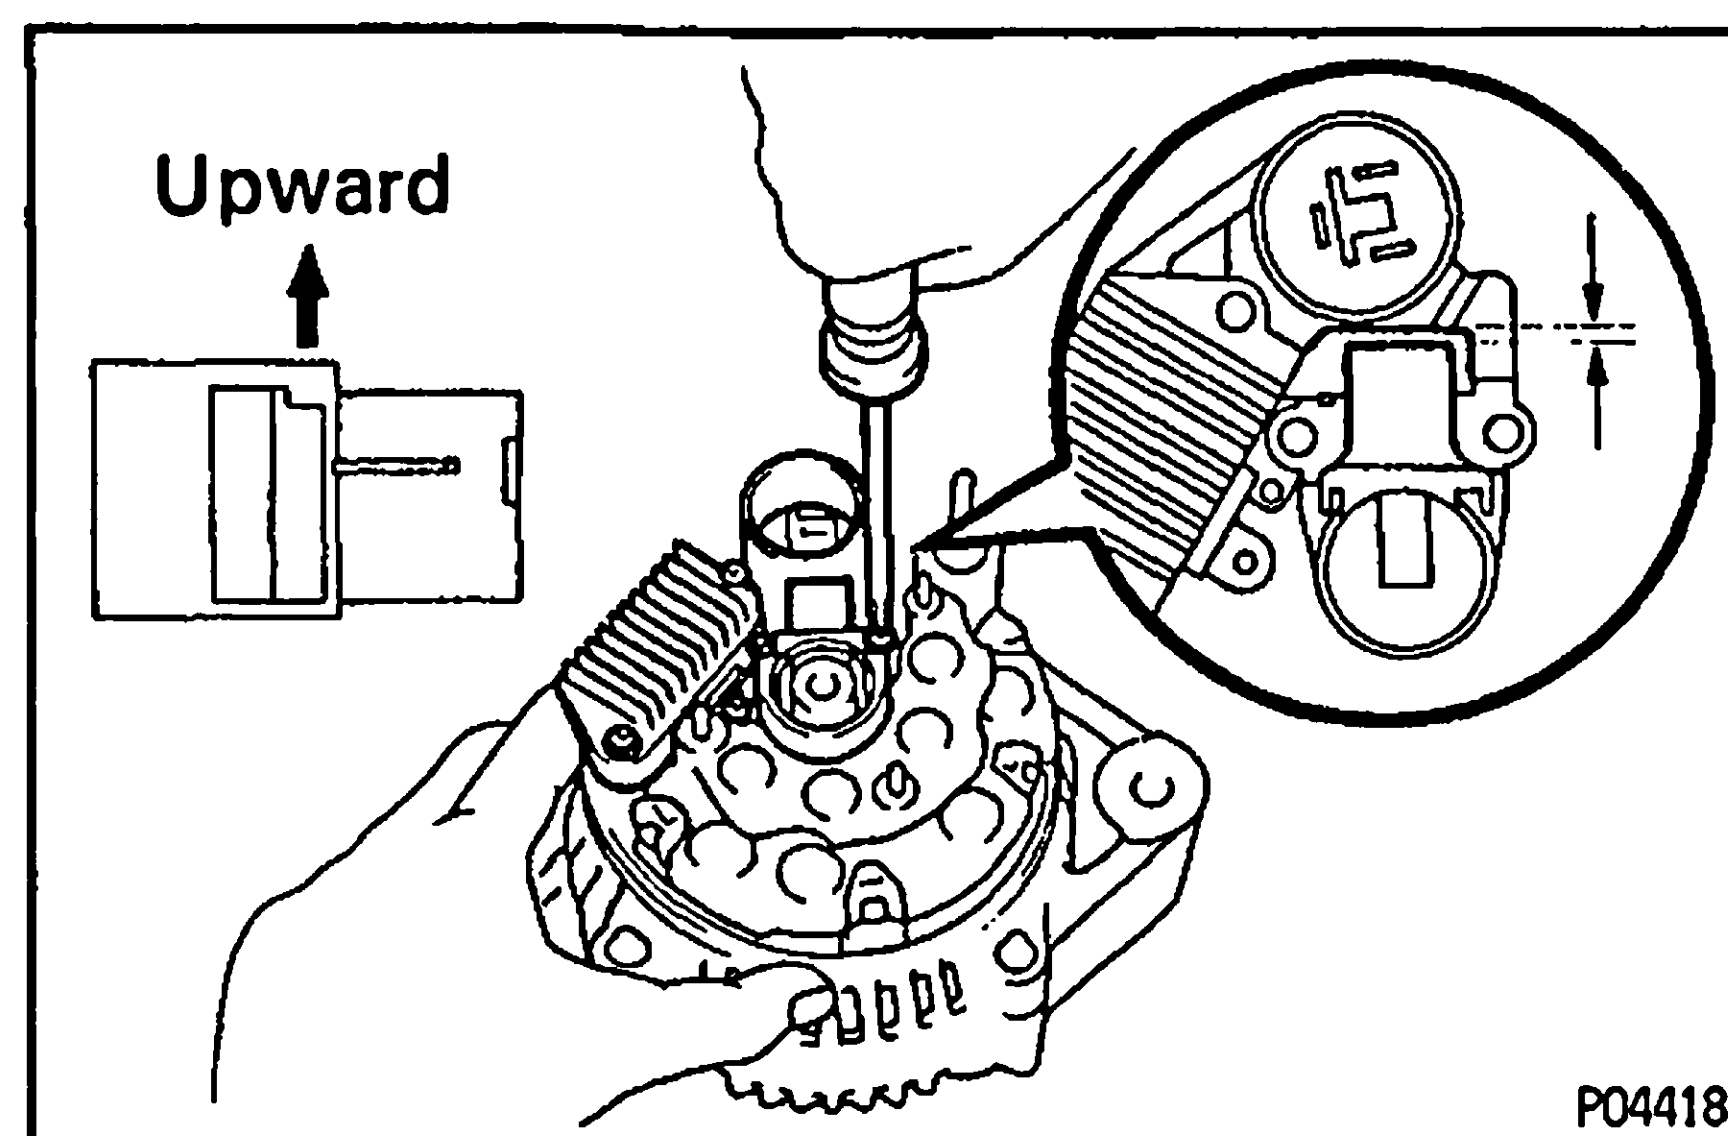




(80 A Type)

- (a) Place the IC regulator and brush holder on the rectifier end frame.
NOTICE: Be careful of the holder installation direction.
- (b) Install the five screws until there is a clearance of at least 1 mm (0.04 in.) between the brush holder and connector.

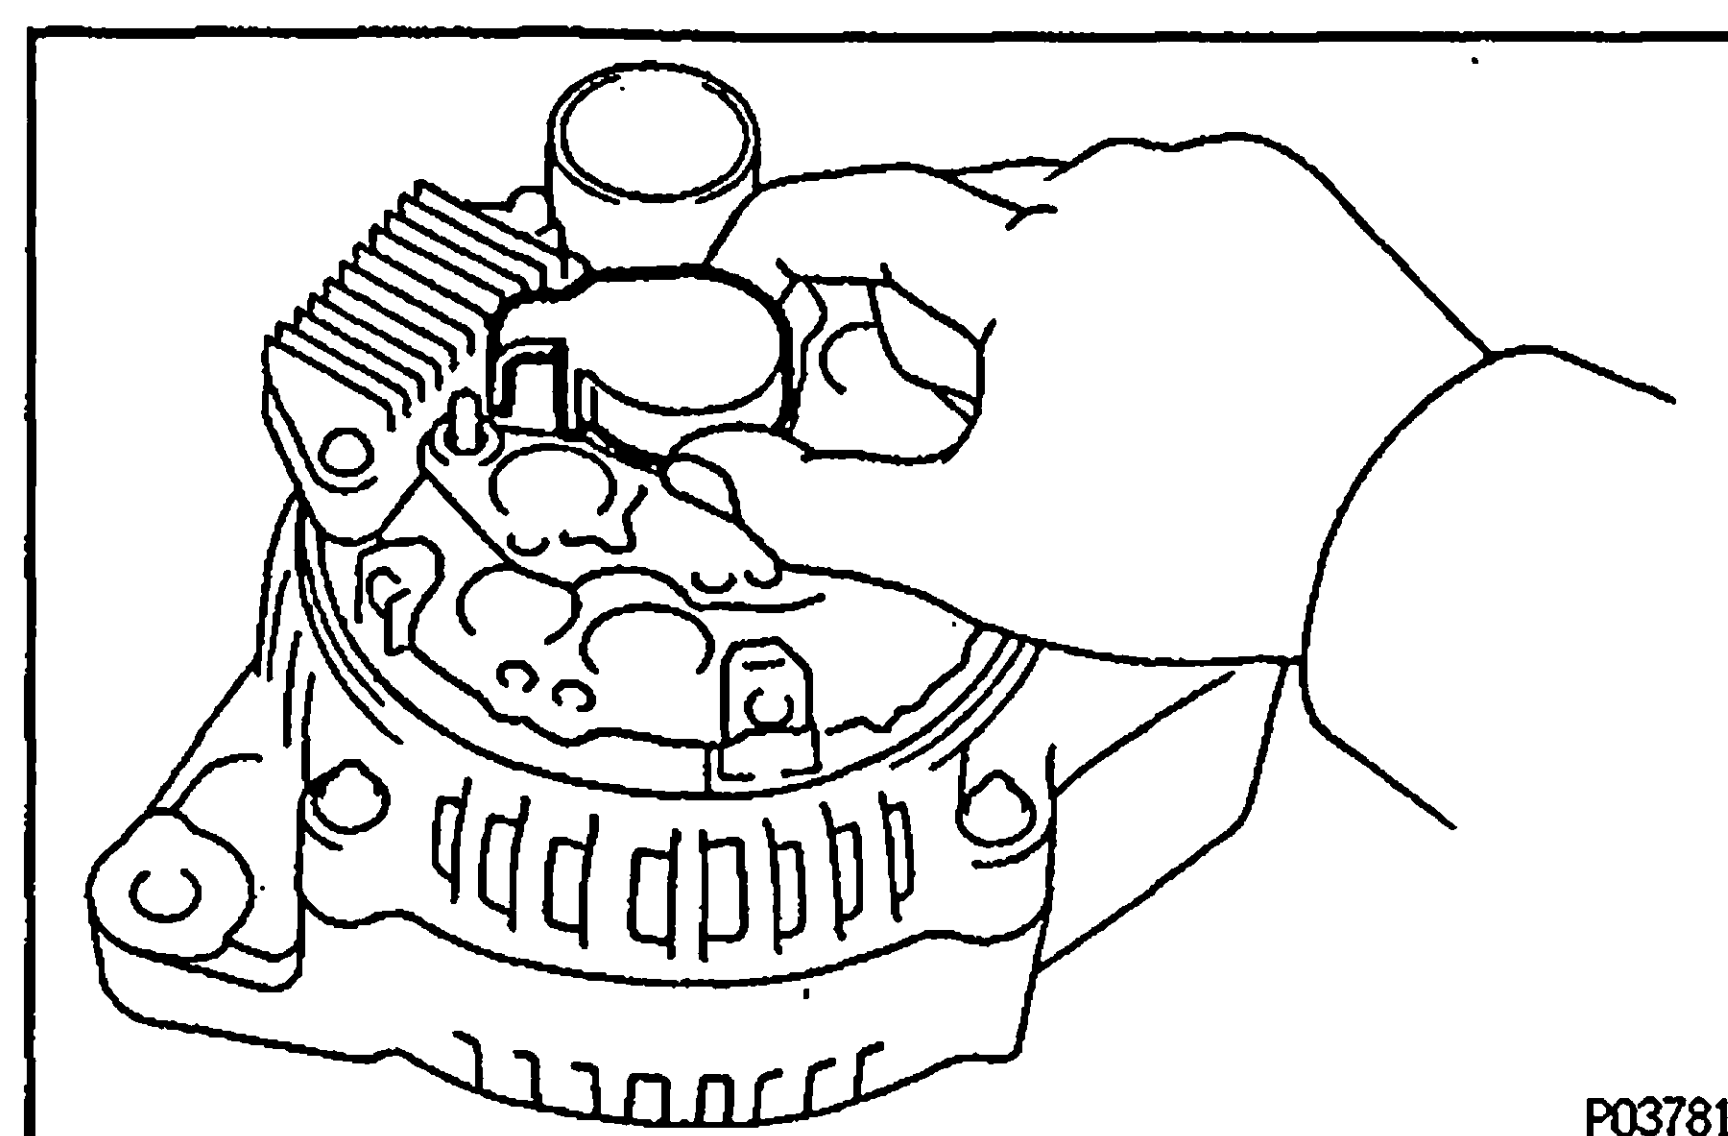

- (c) Place the brush holder cover on the brush holder.

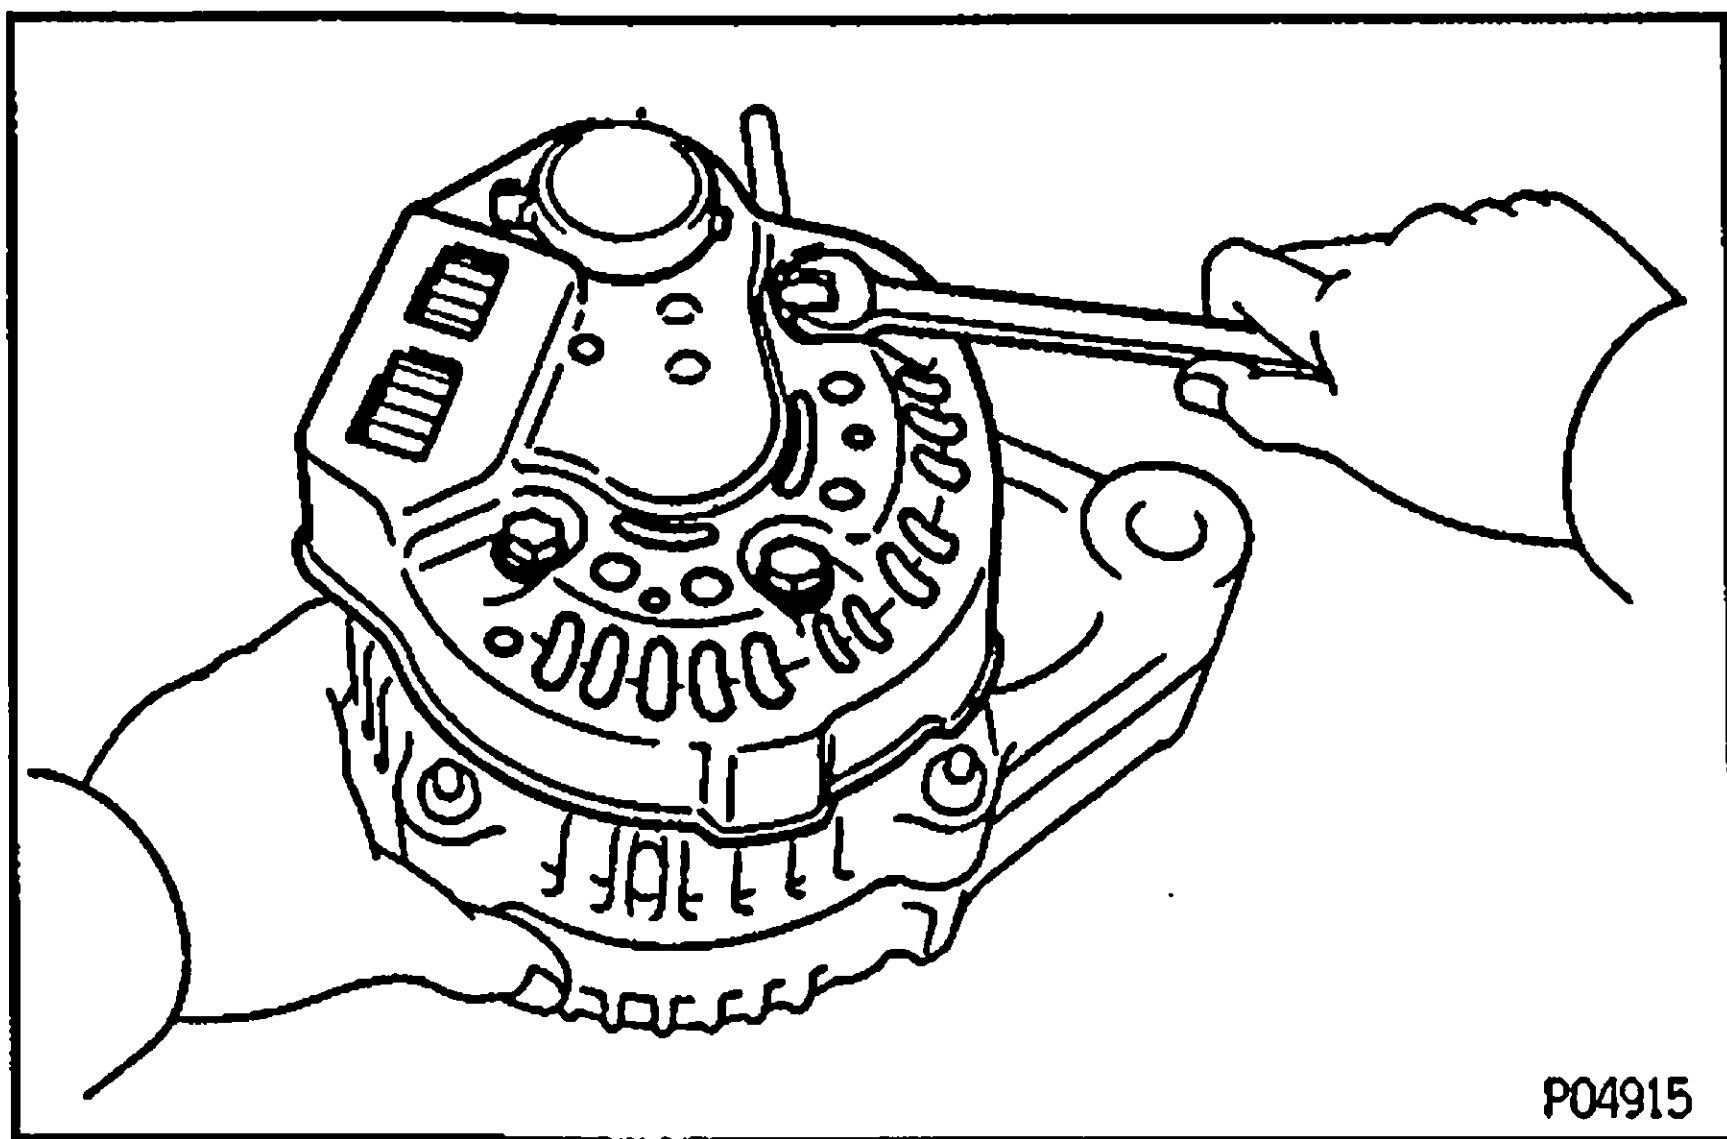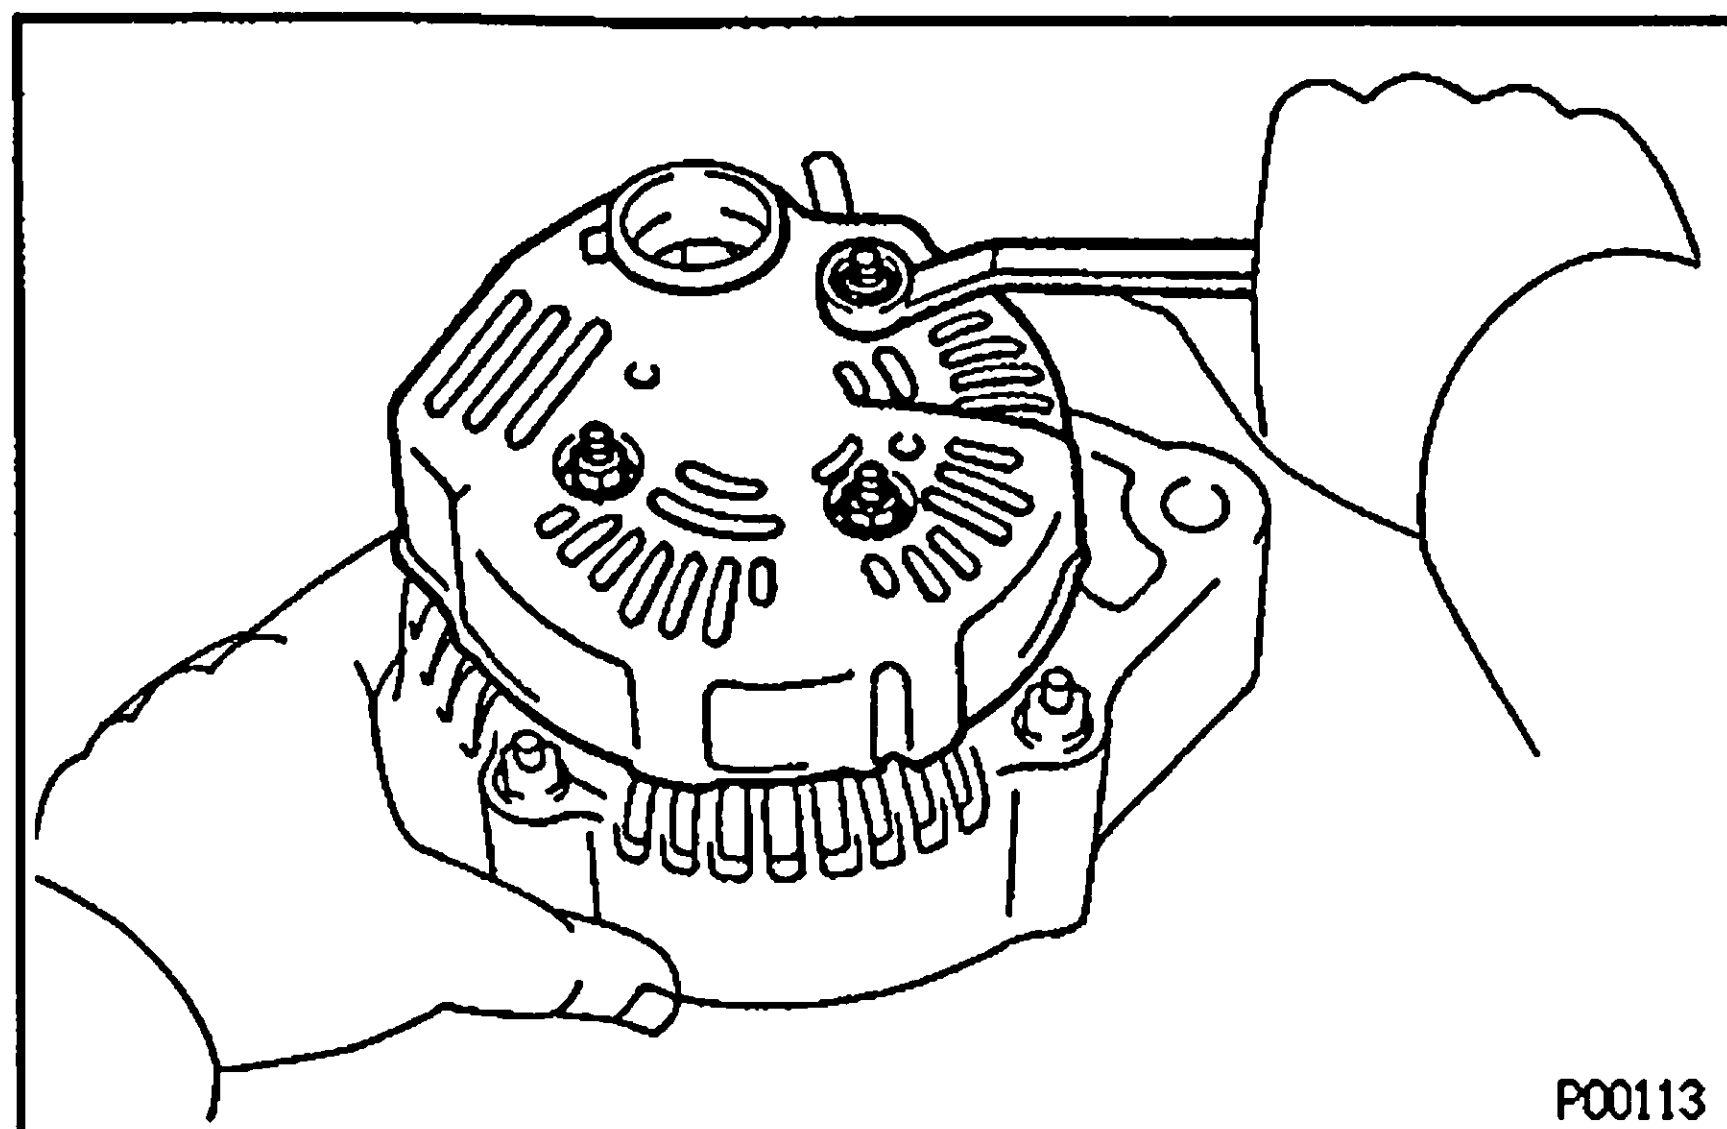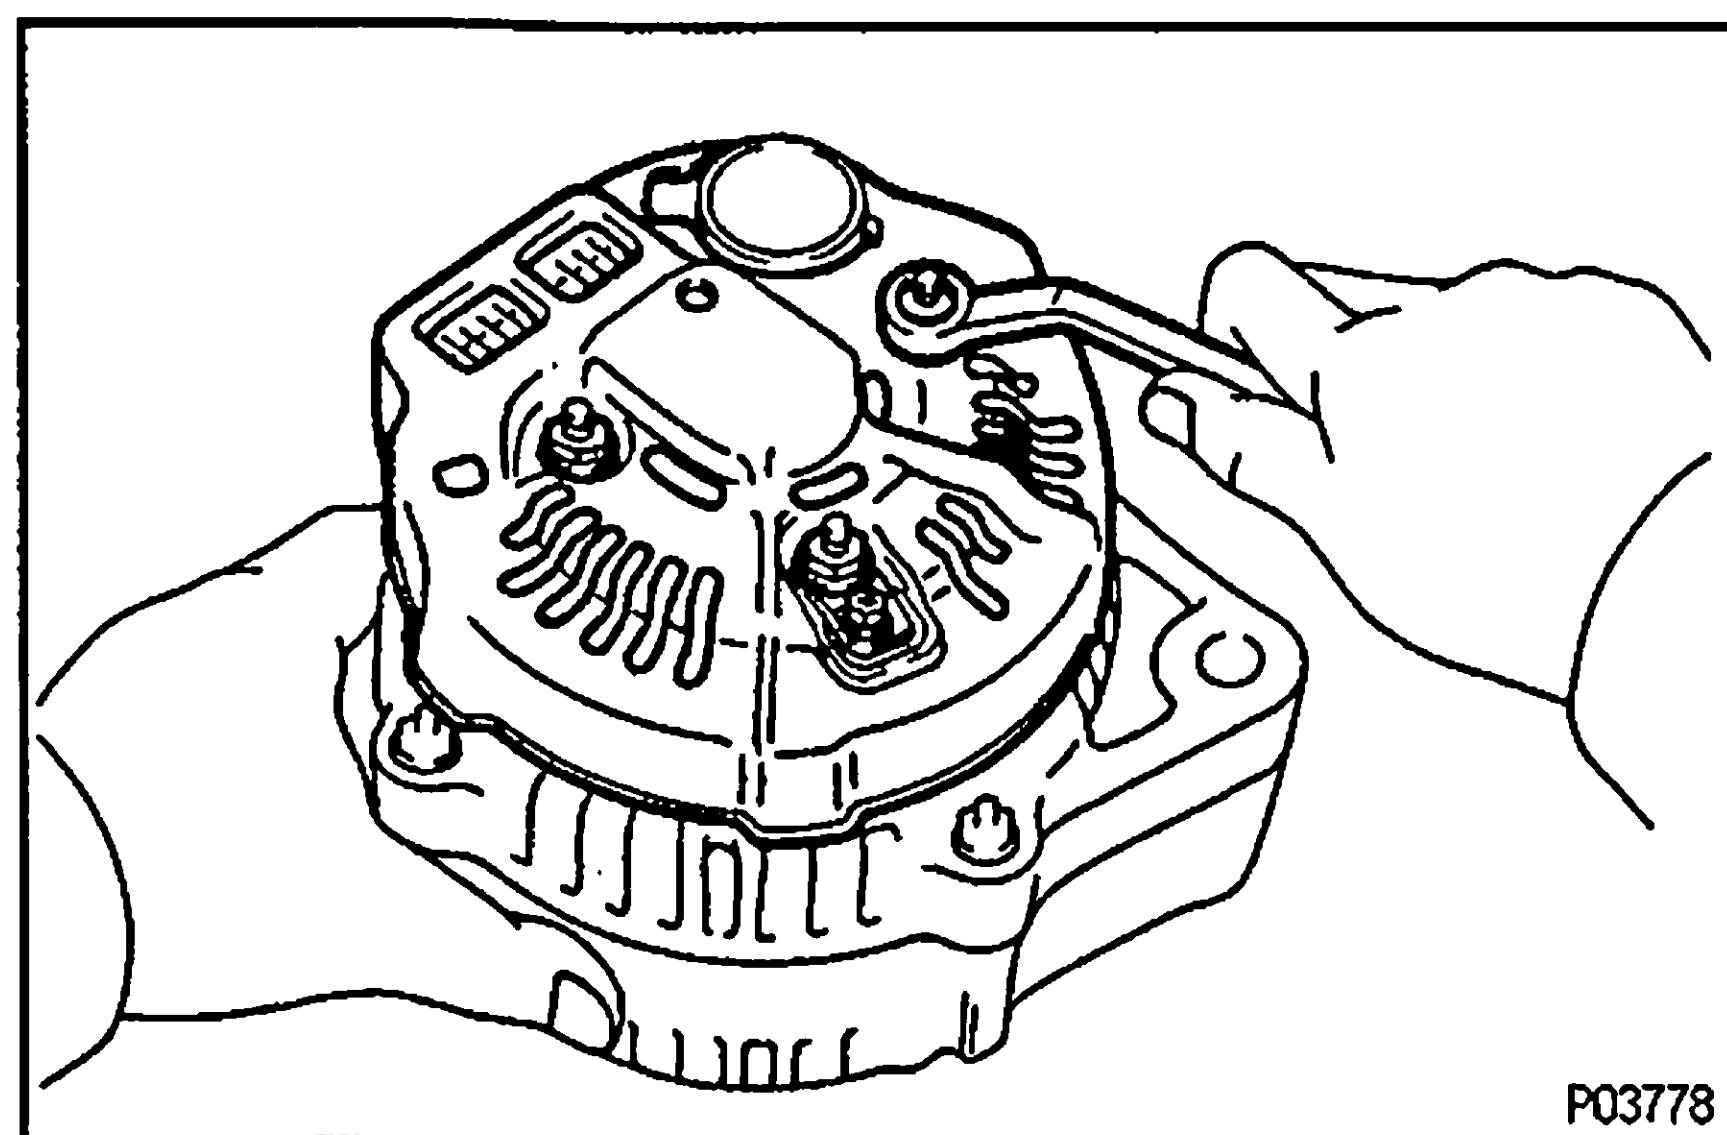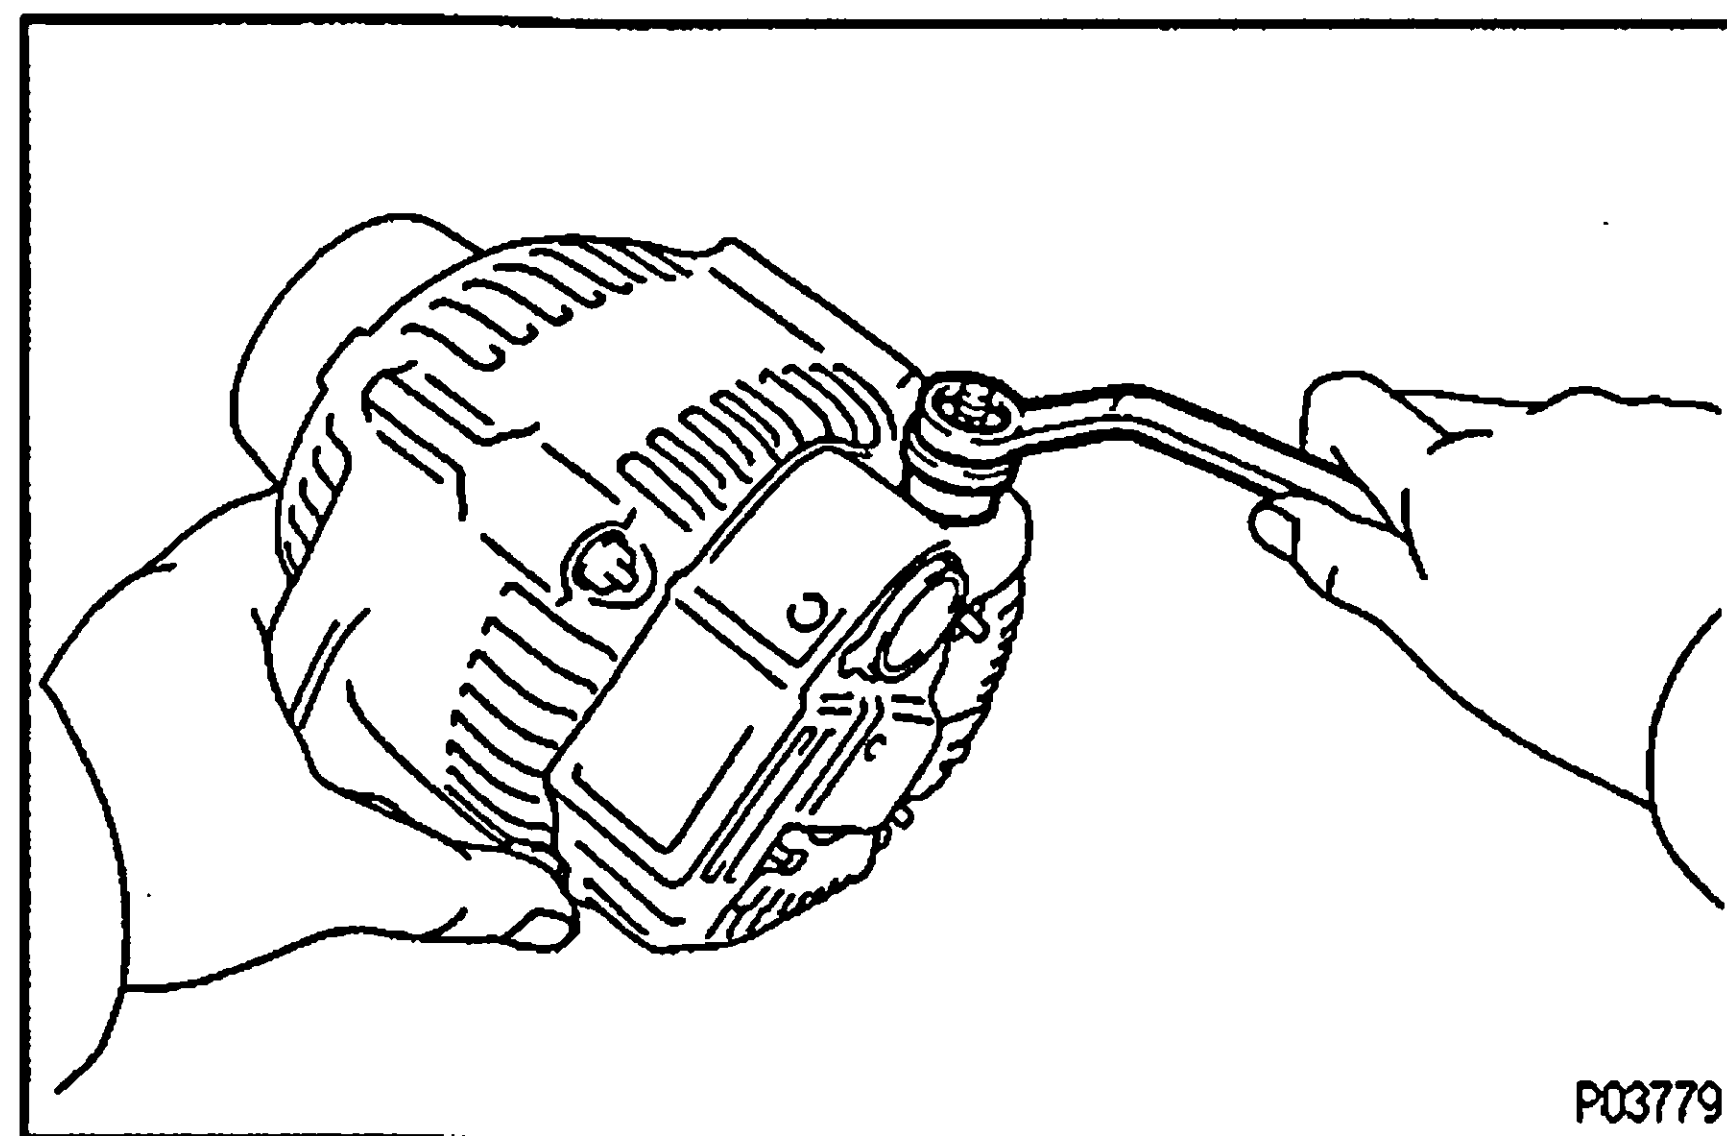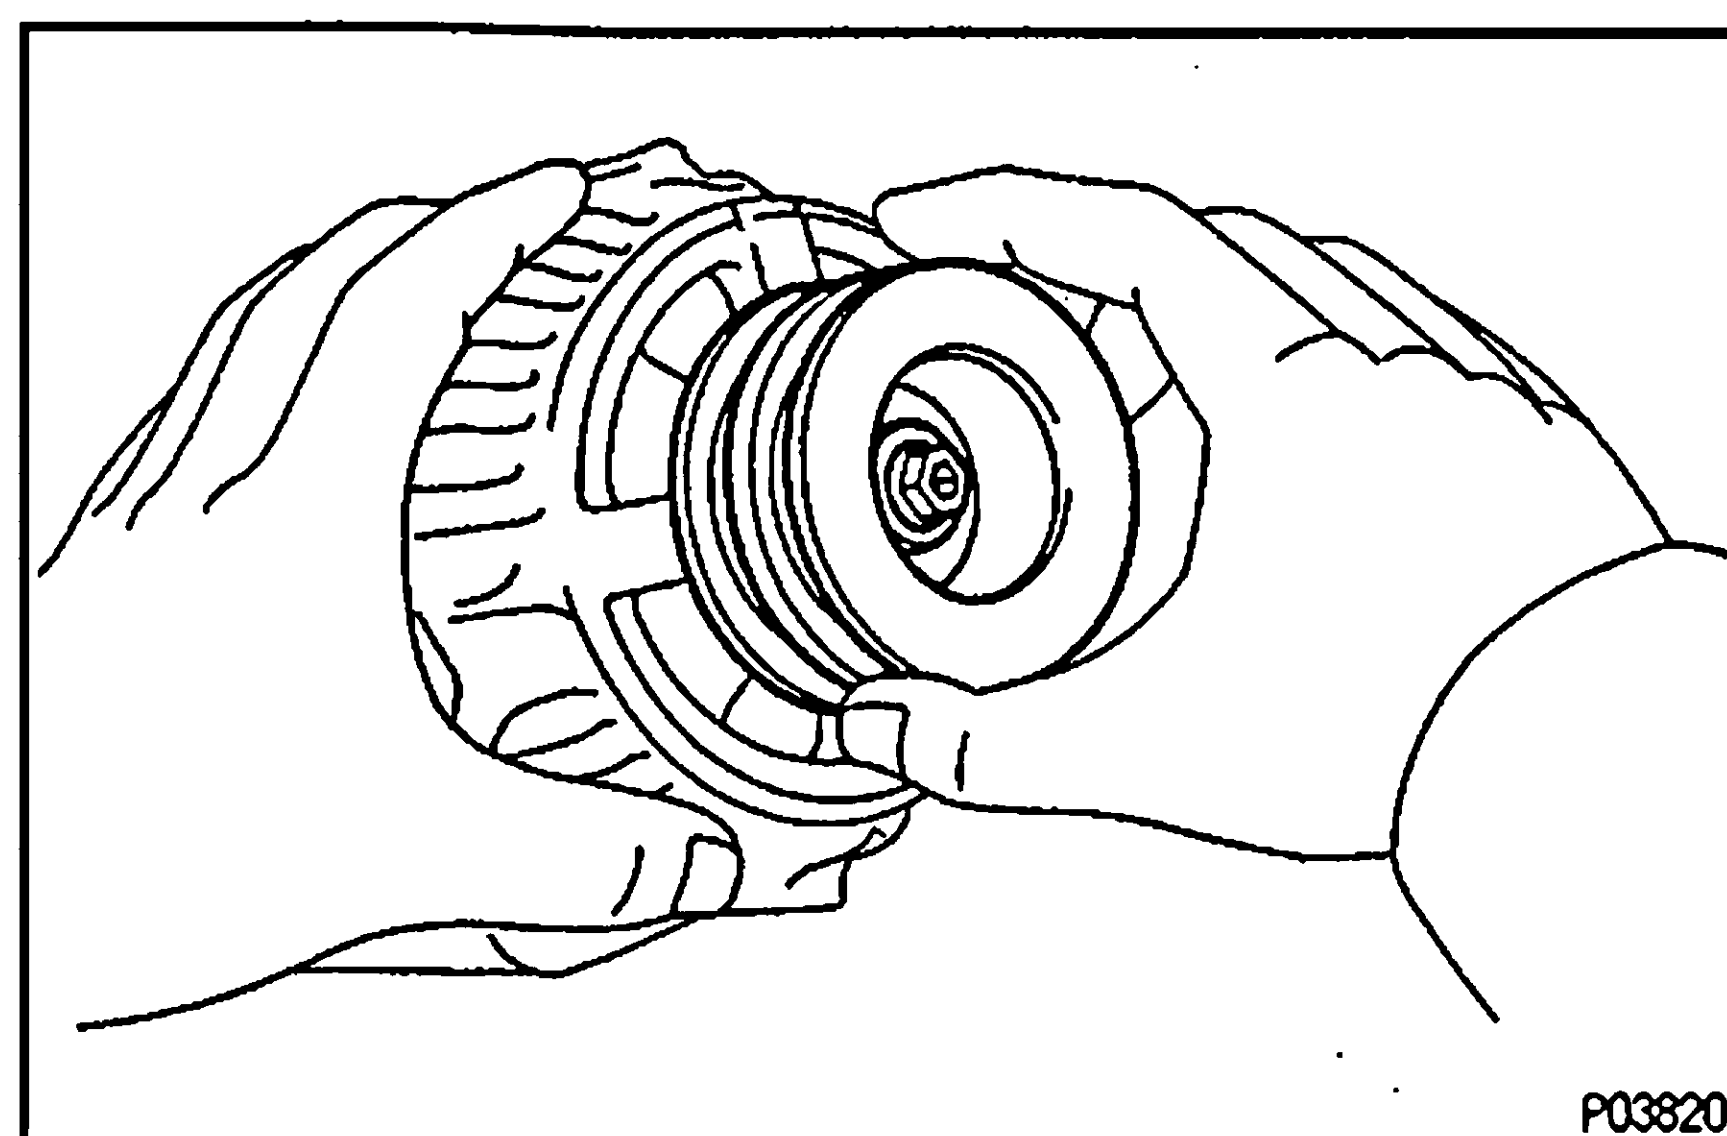**6. INSTALL REAR END COVER****(a) (50 A Type)****Install the end cover with the three bolts.****(55 A Type)****Install the end cover with the three nuts.****Torque: 4.4 N·m (45 kgf·cm, 39 in·lbf)****(80 A Type)****Install the end cover together with the rectifier plate. Hand tighten the screw first for positioning the plate. Tighten the three nuts and retighten the screw.****Torque: 4.4 N·m (45 kgf·cm, 39 in·lbf)****(b) Install the terminal insulator with the nut.****Torque: 10 N·m (100 kgf·cm, 7 ft·lbf)****7. CHECK THAT ROTOR ROTATES SMOOTHLY**

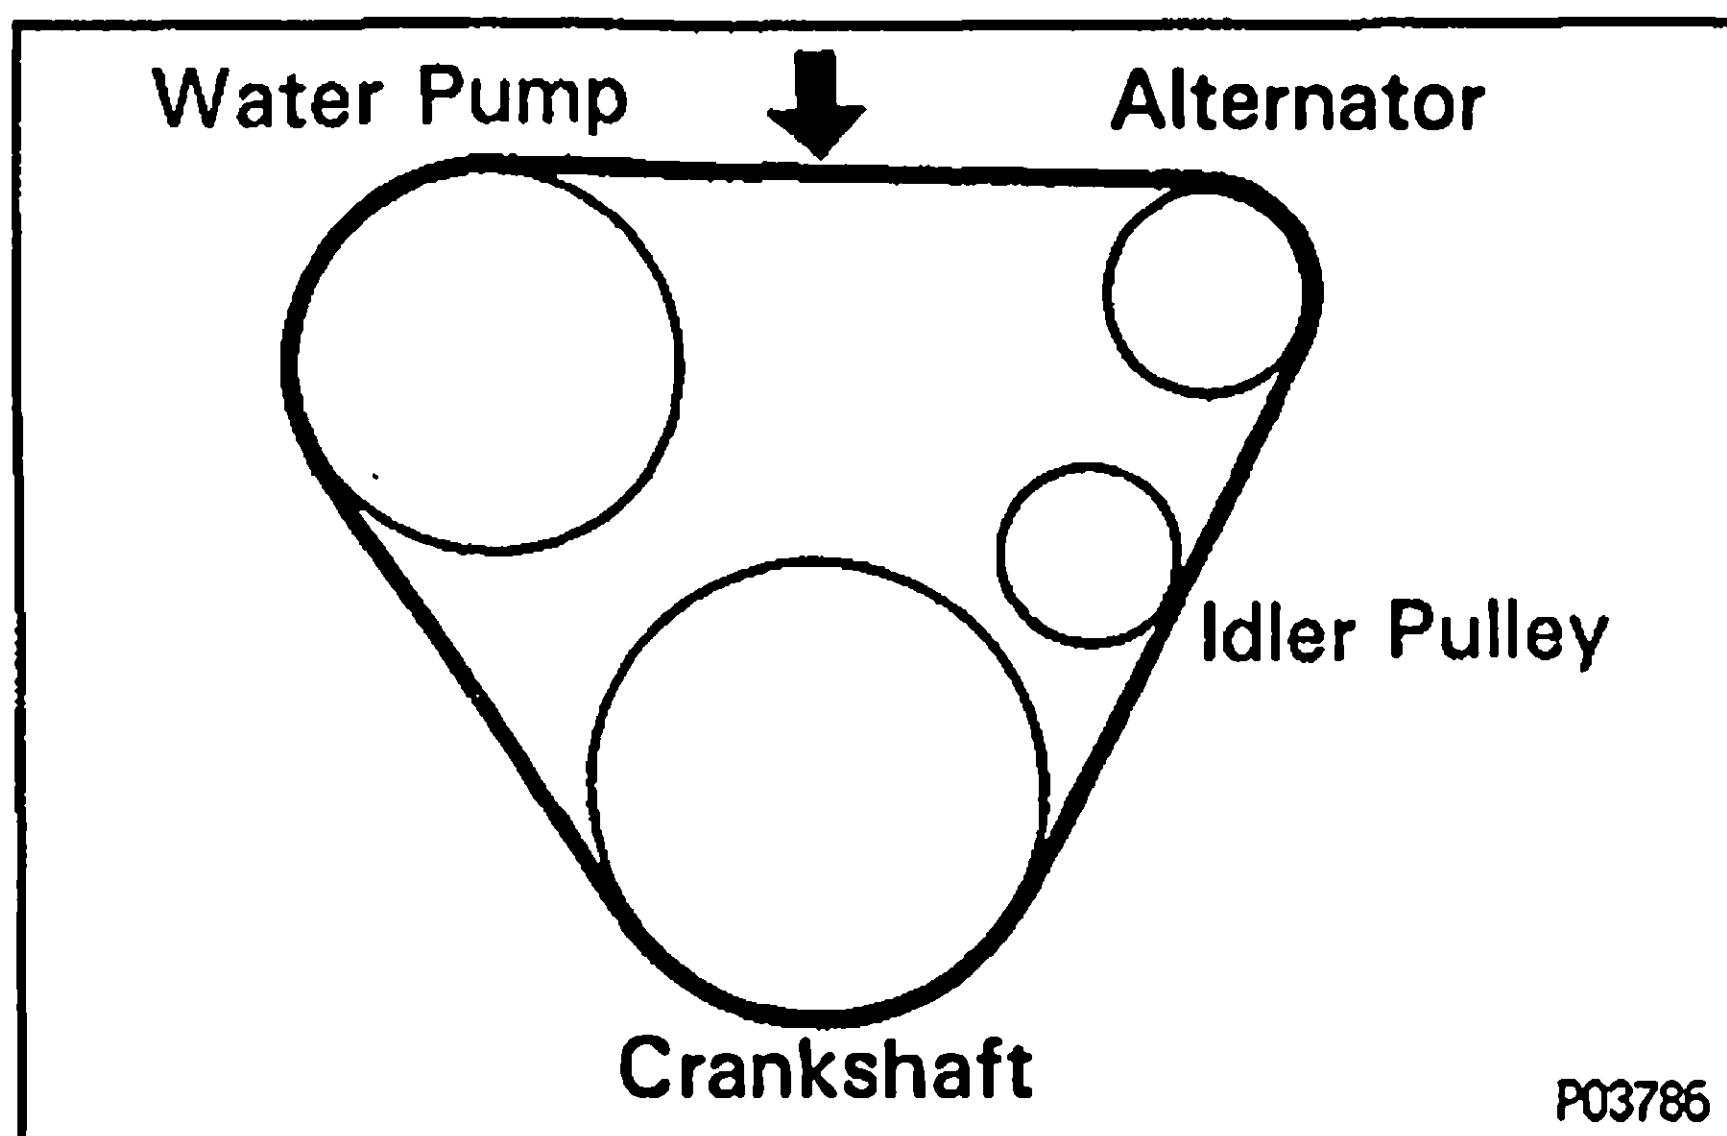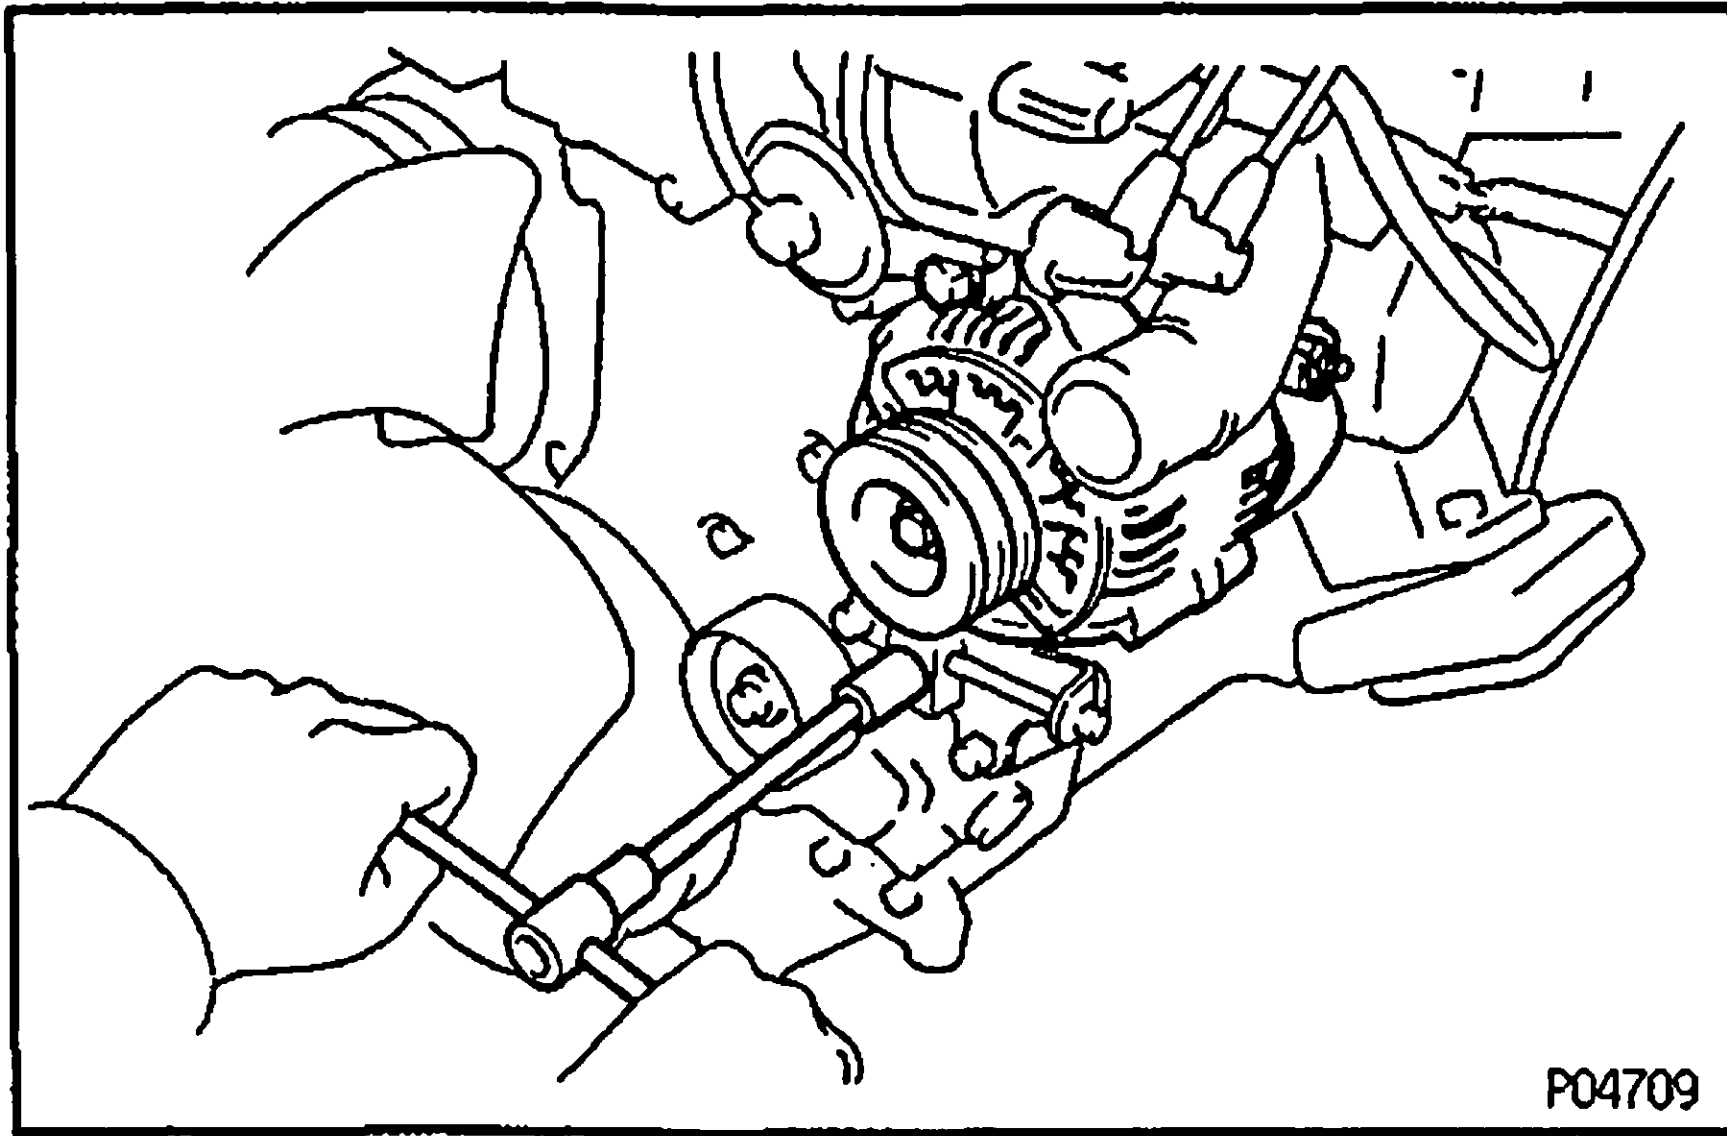

ALTERNATOR INSTALLATION

(See page CH-10)

1. INSTALL ALTERNATOR

- Mount the alternator on the alternator bracket with the pivot bolt and adjusting lock bolt. Do not tighten the bolts yet.
- Connect the alternator connector.
- Connect the alternator wire with the nut.

2. INSTALL DRIVE BELTS

- Install the drive belts.
- Measure the drive belt deflection by pressing on the belt at the points indicated in the illustration with 98 N (10 kgf, 22 lbf) of pressure.

Drive belt deflection:

New belt

11 – 15 mm (0.43 – 0.59 in.)


Used belt

15 – 20 mm (0.59 – 0.79 in.)

- Tighten the pivot and adjusting lock bolts.

HINT:

- “New belt” refers to a belt which has been used less than 5 minutes on a running engine.
- “Used belt” refers to a belt which has been used on a running engine for 5 minutes or more.
- After installing a new belt, run the engine for about 5 minutes and recheck the deflection.

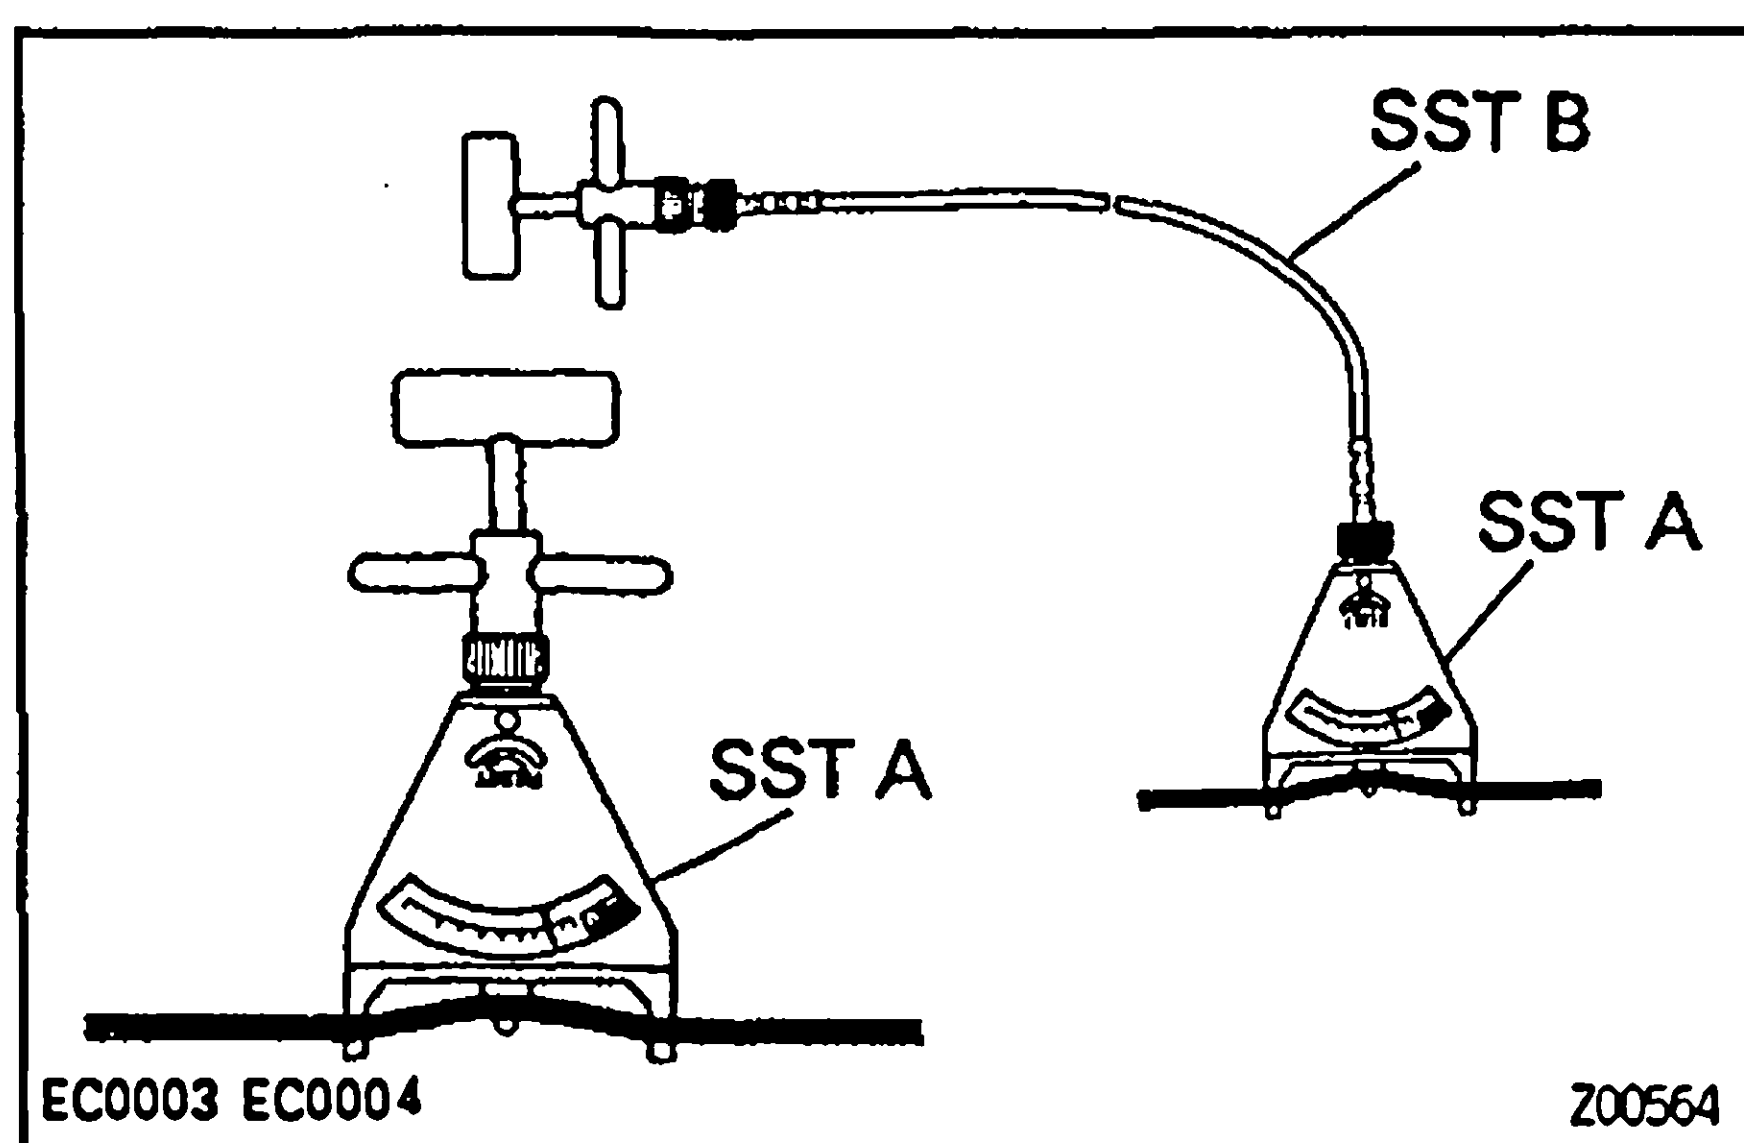

[Reference]

Using SST, measure the drive belt tension.

SST A 09216-00020,

SST B 09216-00030

Drive belt tension:

New belt

33 – 57 kgf

Used belt

15 – 35 kgf

- CONNECT CABLE TO NEGATIVE TERMINAL OF BATTERY
- PERFORM ON-VEHICLE INSPECTION
(See page CH-6)

CH

SERVICE SPECIFICATIONS
SERVICE DATA

CH01U-03

Battery	Specific gravity When full charged at 20°C (68°F)	1.25 – 1.27
Drive belt	Deflection with 98 N (10 kgf, 22.0 lbf) – New belt – Used belt Tension with SST – New belt – Used belt	11 – 15 mm (0.43 – 0.59 in.) 15 – 20 mm (0.59 – 0.79 in.) 33 – 57 kgf 15 – 35 kgf
Alternator	Rated output Rotor coil resistance Slip ring diameter – STD Slip ring diameter – Limit Brush exposed length – STD Brush exposed length – Limit	12 V – 50 A, 12 V – 55 A, 12 V – 80 A 2.7 – 3.1 Ω 14.2 – 14.4 mm (0.559 – 0.567 in.) 12.8 mm (0.504 in.) 10.5 mm (0.413 in.) 1.5 mm (0.059 in.)
Alternator regulator (IC)	Regulating voltage – at 25°C (77°F) Regulating voltage – at 115°C (239°F)	14.0 – 15.0 V 13.5 – 14.3 V

CH01V-02

TORQUE SPECIFICATIONS

Part tightened	N·m	kgf·cm	ft·lbf
Pulley nut	110	1,125	81
Terminal insulator x Rectifier holder	10	100	7
Rectifier holder x Stator coil lead	2.9	30	26 in·lbf
Rectifier end frame x Drive end frame	8.8	90	78 in·lbf
Rear end cover x Rectifier end frame	4.4	45	39 in·lbf
Rectifier plate x Rectifier holder	4.4	45	39 in·lbf