


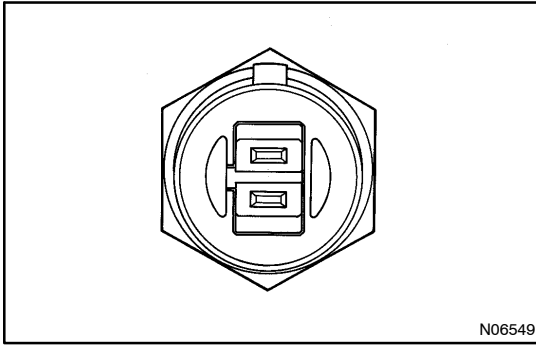


ENGINE COOLANT TEMPERATURE (ECT) CUT RELAY INSPECTION

AC2SH-01

INSPECT SWITCH CONTINUITY

Check the continuity between terminals of the switch, as shown in the chart below.

If continuity is not as specified, replace the switch.

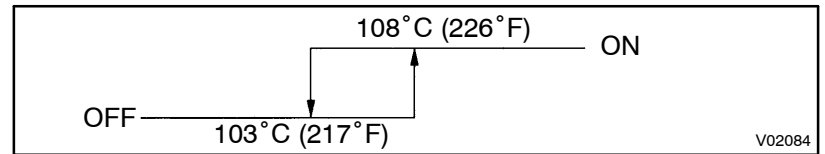

V02084