


# Multi-Display without Navigation System

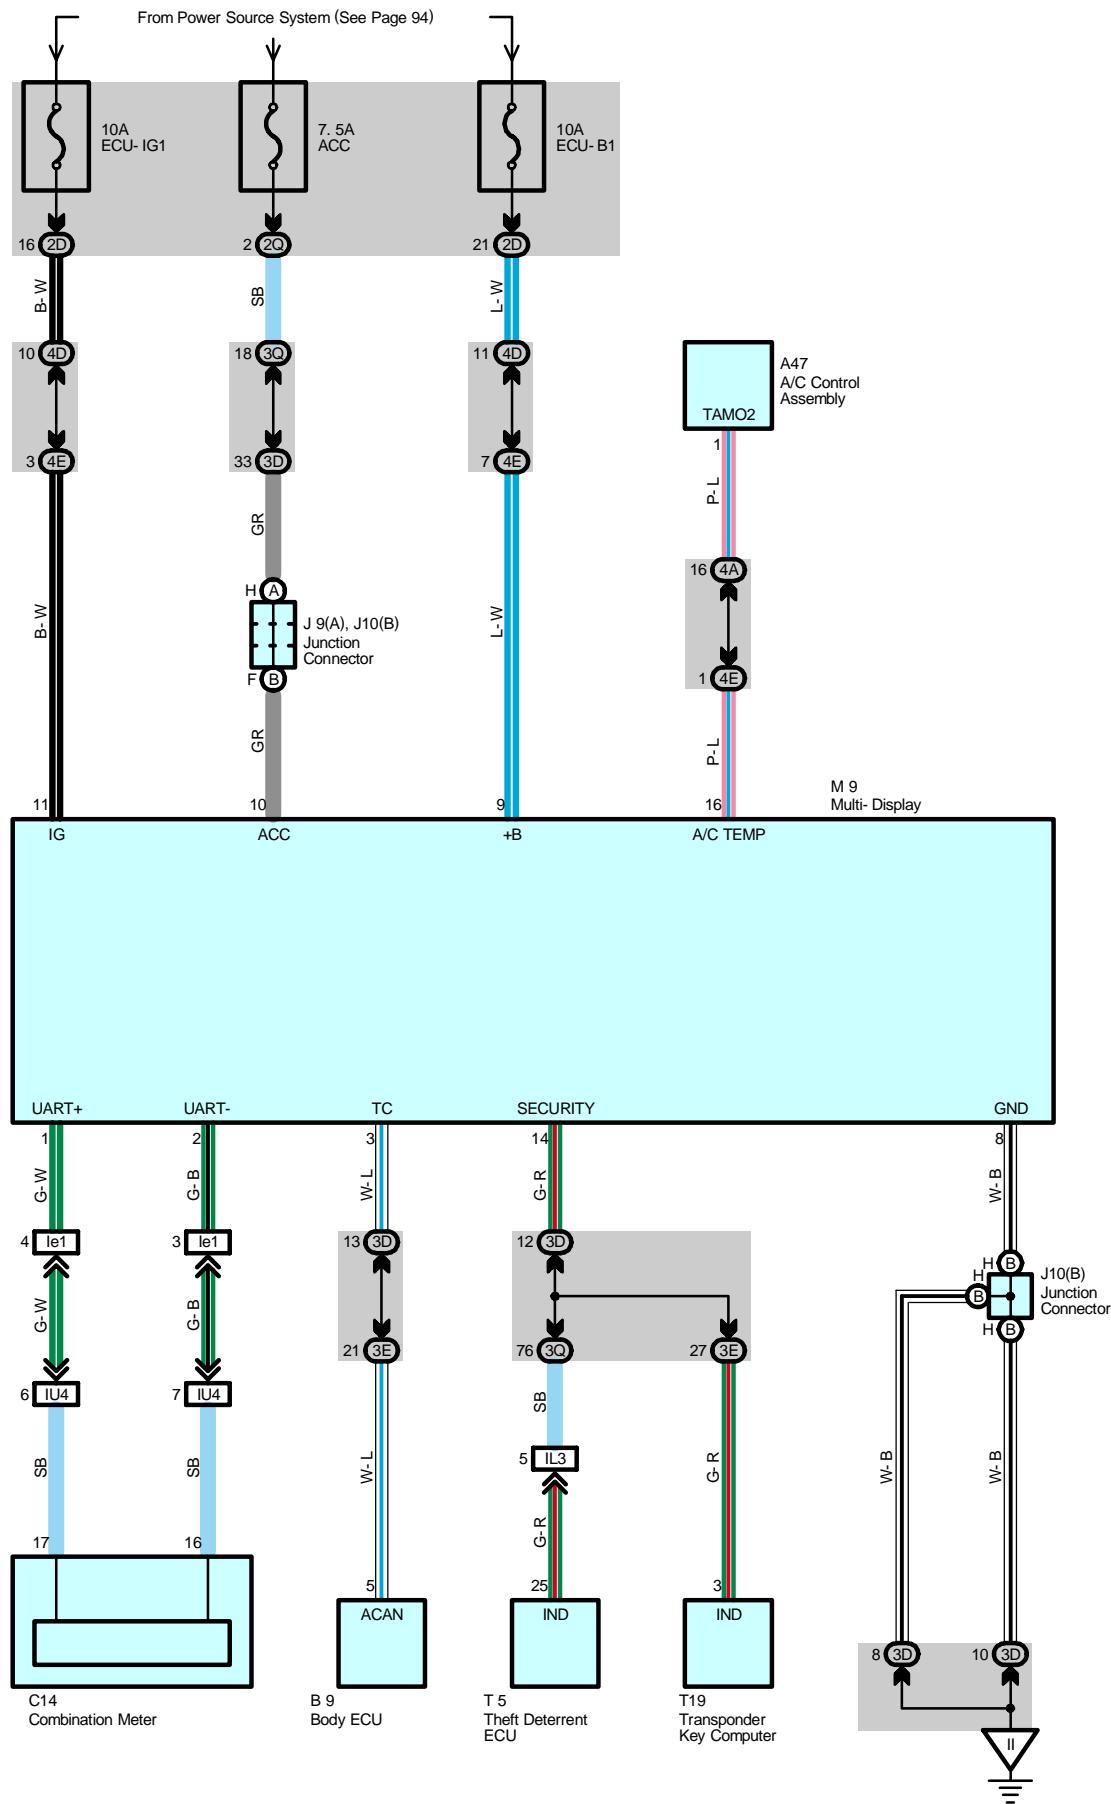

---

**Service Hints****M9 Multi-Display**

9-Ground : Always approx. 12 volts  
10-Ground : Approx. 12 volts with ignition SW at ACC or ON position  
11-Ground : Approx. 12 volts with ignition SW at ON or ST position  
8-Ground : Always continuity

**○ : Parts Location**

| Code | See Page | Code | See Page | Code | See Page |
|------|----------|------|----------|------|----------|
| A47  | 70       | J9   | A        | 71   | 71       |
| B9   | 70       | J10  | B        | 71   | 71       |
| C14  | 70       | M9   | 71       |      |          |

**□ : Junction Block and Wire Harness Connector**

| Code | See Page | Junction Block and Wire Harness (Connector Location)                      |
|------|----------|---|
| 2D   | 28       | Dash Wire and Cowl Side J/B LH (Left Kick Panel)                          |
| 2Q   | 30       | Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)  |
| 3D   | 40       | Dash Wire and Cowl Side J/B RH (Right Kick Panel)                         |
| 3E   |          | Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel) |
| 3Q   | 42       |   |
| 4A   | 52       |   |
| 4D   |          | Dash Wire and J/B No.4 (Instrument Panel Center)                          |
| 4E   |          |   |

**□ : Connector Joining Wire Harness and Wire Harness**

| Code | See Page | Joining Wire Harness and Wire Harness (Connector Location)                    |
|------|----------|---|
| IL3  | 80       | Instrument Panel Integration Wire and Computer Wire (Instrument Panel Center) |
| IU4  | 82       | Instrument Panel Integration Wire and Dash Wire (Behind the Glove Box)        |
| le1  | 84       | Dash Wire and Dash Wire (Behind the Glove Box)                                |

**▽ : Ground Points**

| Code | See Page | Ground Points Location       |
|------|----------|------------------------------|
| II   | 78       | Set Bolt of Cowl Side J/B RH |